

**Integrated Dell Remote Access Controller 8
(iDRAC8) and iDRAC7 Version 2.10.10.10
RACADM Command Line Interface Reference
Guide**



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2015 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2014 - 09

Rev. A00

Contents

1 Introduction.....	10
What's New in This Release.....	10
Supported RACADM Interfaces.....	11
RACADM Syntax Usage.....	11
SSH, Telnet, or Remote RACADM.....	11
Remote RACADM.....	12
Accessing Indexed-Based Device Groups and Objects.....	12
RACADM Command Options.....	12
Using The Autocomplete Feature.....	13
Supported RACADM Subcommands.....	14
Other Documents You May Need.....	17
Accessing documents from Dell Support Site.....	18
Contacting Dell.....	18
2 RACADM Subcommand Details.....	20
Guidelines to Quote Strings Containing Special Characters When Using RACADM	
Commands.....	20
help and help subcommand.....	21
arp.....	21
autoupdatescheduler.....	22
cd.....	24
cd.....	24
clearasrscreen.....	25
clearpending.....	25
closessn.....	26
clrsl.....	26
config.....	27
coredump.....	28
coredumpdelete.....	29
diagnostics.....	29
eventfilters.....	30
fcstatistics.....	33
frontpanelerror.....	33
fwupdate.....	33
get.....	38
getconfig.....	40
gethostnetworkinterfaces.....	42
getled.....	43

getniccfg.....	44
getraclog.....	45
getractime.....	47
getsel.....	48
getsensorinfo.....	48
getssninfo.....	53
getsvctag.....	53
getsysinfo.....	54
gettracelog.....	55
getversion.....	56
hwinventory.....	59
ifconfig.....	63
inlettemphistory.....	63
jobqueue.....	64
krbkeytabupload.....	66
lclog.....	66
license.....	69
nicstatistics.....	71
ping.....	72
ping6.....	73
RACADM Proxy.....	73
racdump.....	75
racreset.....	79
racresetcfg.....	80
remoteimage.....	82
rollback.....	84
sensorsettings.....	84
serveraction.....	84
set.....	86
settled.....	88
setniccfg.....	89
sshpkauth.....	90
sslcertdownload.....	92
sslcertupload.....	92
sslcertview.....	93
sslcertdelete.....	95
sslcsrgen.....	95
sslkeyupload.....	96
sslresetcfg.....	97
storage.....	97
swinventory.....	114
systemconfig.....	114

systemerase.....	117
systemperfstatistics.....	117
techsupreport.....	118
testemail.....	120
testtrap.....	120
testalert.....	121
tracert.....	121
tracert6.....	122
update.....	122
usercertupload.....	125
usercertview.....	125
vflashsd.....	126
vflashpartition.....	126
vmdisconnect.....	128

3 iDRAC Property Database Group and Object Descriptions.....129

Displayable Characters.....	129
idRacInfo.....	131
cfgStaticLanNetworking.....	133
cfgRemoteHosts.....	135
cfgUserAdmin.....	138
cfgEmailAlert.....	143
cfgSessionManagement.....	144
cfgSerial.....	146
cfgOobSnp.....	149
cfgRacTuning.....	150
ifcRacManagedNodeOs.....	157
cfgRacVirtual.....	157
cfgServerInfo.....	158
cfgActiveDirectory.....	161
cfgLDAP.....	165
cfgLdapRoleGroup.....	169
cfgStandardSchema.....	170
cfgThermal.....	171
cfgIpmiSol.....	172
cfgIpmiLan.....	173
cfgIpmiPetIpv6.....	174
cfgIpmiPef.....	175
cfgIpmiPet.....	176
cfgUserDomain.....	177
cfgServerPower.....	177
cfgServerPowerSupply.....	186

cfgIPv6LanNetworking.....	188
cfgIpv6StaticLanNetworking.....	193
cfgIPv6URL.....	195
cfgIpmiSerial.....	195
cfgSmartCard.....	198
cfgNetTuning.....	198
cfgSensorRedundancy.....	200
cfgVFlashSD.....	201
cfgVFlashPartition.....	203
cfgLogging.....	205
cfgRacSecurity.....	205

4 Database Objects With Get and Set Commands.....208

System.Backplane.....	210
System.ChassisControl.....	211
System.ChassisControl.ChassisManagementMonitoring (Read or Write).....	211
System.ChassisInfo.....	211
System.QuickSync.....	212
System.LCD.....	213
System.Location.....	215
System.Power.....	218
System.Power.Supply.....	232
System.ServerOS.....	235
System.ThermalSettings.....	236
System.ThermalConfig.....	240
LifecycleController.LCAttributes.....	240
iDRAC.ActiveDirectory.....	245
iDRAC.ADGroup.....	251
iDRAC.AutoOSLock.....	252
iDRAC.EmailAlert.....	252
iDRAC.Info.....	254
iDRAC.IOIDOpt.....	256
iDRAC.IPBlocking.....	258
iDRAC.IPMILan.....	261
iDRAC.IPMISerial.....	262
iDRAC.IPMISOL.....	266
iDRAC.IPv4.....	268
iDRAC.IPv4Static.....	271
iDRAC.IPv6.....	273
iDRAC.IPv6Static.....	280
iDRAC.IPv6URL.....	282
iDRAC.LDAP.....	283

iDRAC.LDAPRoleGroup.....	286
iDRAC.LocalSecurity.....	287
iDRAC.Logging.....	288
iDRAC.NIC.....	288
iDRAC.NICStatic.....	296
iDRAC.NTPConfigGroup.....	296
iDRAC.OS-BMC.....	298
iDRAC.Racadm.....	300
iDRAC.RemoteHosts.....	300
iDRAC.RFS.....	301
iDRAC.RSM.....	302
iDRAC.Security.....	302
iDRAC.Serial.....	305
iDRAC.SerialRedirection.....	307
iDRAC.serverboot.....	308
iDRAC.ServiceModule.....	309
iDRAC.SmartCard.....	312
iDRAC.SNMP.....	312
iDRAC.SNMP.Alert.....	314
iDRAC.SSH.....	316
iDRAC.SysLog.....	317
iDRAC.Telnet.....	319
iDRAC.Time.....	320
iDRAC.Tuning.....	321
iDRAC.Update.....	322
iDRAC.USB.....	323
iDRAC.UserDomain.....	323
iDRAC.Users.....	324
iDRAC.vflashpartition.....	328
iDRAC.vflashsd.....	330
iDRAC.VirtualConsole.....	333
iDRAC.VirtualMedia.....	336
iDRAC.VNCServer.....	337
iDRAC.VNCServer.SSLEncryptionBitLength (Read or Write).....	338
iDRAC.WebServer.....	339
iDRAC.WebServer.SSLEncryptionBitLength (Read or Write)	340
BIOS.BiosBootSettings.....	341
BIOS.EmbServerMgmt.....	344
BIOS.IntegratedDevices.....	344
BIOS.MemSettings.....	351
BIOS.MiscSettings.....	357
BIOS.NetworkSettings.....	360

BIOS.OneTimeBoot.....	360
BIOS.ProcSettings.....	362
BIOS.ProxyAttributes.....	378
BIOS.PxeDevice1Settings.....	379
BIOS.SataSettings.....	381
BIOS.SerialCommSettings.....	395
BIOS.SlotDisablement.....	397
BIOS.SysInformation.....	401
BIOS.SysProfileSettings.....	403
BIOS.SysProfileSettings.PowerSaver (Read or Write).....	408
BIOS.SysSecurity.....	410
BIOS.UefiBootSettings.....	418
FC.FCDevice.....	419
FC.FCTarget.....	421
FC.HBAConfig.....	422
FC.PortConfig.....	426
NIC.ConfigureFormn.....	429
NIC.DCBSettings.....	433
NIC.DeviceLevelConfig.....	435
NIC.FCOECapabilities.....	436
NIC.FCoEConfiguration.....	439
NIC.FCoEGenParams.....	442
NIC.FrmwlmngMenu.....	444
NIC.GlobalBandwidthAllocation.....	445
NIC.IscsiFirstTgtParams.....	446
NIC.IscsiGenParams.....	449
NIC.IscsiInitiatorParams.....	454
NIC.IscsiSecondaryDeviceParams.....	456
NIC.IscsiSecondTgtParams.....	457
NIC.NICConfig.....	460
NIC.NICPartitioningConfig.....	464
NIC.VndrConfigGroup.....	466
Storage.Controller.....	478
Storage.Controller.PatrolReadUnconfiguredArea (Read or Write).....	481
Storage.Controller.RequestedControllerMode (Read or Write).....	482
Storage.enclosure.....	484
Storage.PhysicalDisk.....	485
Storage.VirtualDisk.....	486

A Deprecated and New Subcommands..... 489

B Legacy and New Groups and Objects.....	491
cfgSSADRoleGroupPrivilege (Read or Write).....	503

Introduction

This document provides information about the RACADM subcommands, supported RACADM interfaces, and property database groups and object definitions for the following:

- iDRAC for Blade Servers
- iDRAC on Rack and Tower Servers

Most of the commands mentioned in this document are applicable for multi-generation servers. That is, the commands are applicable for iDRAC6, iDRAC7, and iDRAC8. For more information on the commands applicable for a particular iDRAC version, see the *iDRAC RACADM Support Matrix* available at dell.com/esmmanuals.



NOTE:

- From iDRAC version 2.00.00.00, the guide provides information specific to iDRAC. For information specific to Chassis Management Controller (CMC) M1000e, refer to *Chassis Management Controller M1000e Version 5.0 RACADM Command Line Reference Guide* available at dell.com/support/manuals.
- The appendix section in the guide provides:
 - List of deprecated subcommands.
 - List of legacy groups and objects with the equivalent new groups and objects.



NOTE: In this version of RACADM, the Linux shell features such as ctrl+d, home, del, and end shortcut keys are not supported.

This document provides information about the RACADM subcommands, supported RACADM interfaces, and property database groups and object definitions for Dell Chassis System (CMC).

What's New in This Release

- Support for using a common iDRAC firmware across Dell's 12th and 13th generation PowerEdge servers. You can apply the same (2.10.10.10) version on a 13th generation PowerEdge server with iDRAC8 and a 12th generation PowerEdge server with iDRAC7.

Enables direct upgrade to version 2.10.10.10 from 2.xx.xx.xx, 1.5x.5x.5x, or 1.6x.6x.

Supports features such as SNMPv3 traps, combined functionality of Tech Support Report with iDRAC Service Module, security enhancements, and code stability on the Dell 12th generation PowerEdge servers.

- Support to manage PowerEdge FX2/FX2s systems using the `RACADM Proxy` command.
- Support to control the chassis related events.

- Support for patrol read in unconfigured areas using the `Storage.Controller.PatrolReadUnconfiguredArea` attribute.
- Support to modify the controller mode to RAID or HBA using the `Storage.Controller.RequestedControllerMode` attribute.
- Support to indicate the web server encryption state using the `iDRAC.WebServer.SSLEncryptionBitLength` attribute.
- Support to indicate the VNC server encryption state using the `iDRAC.VNCServer.SSLEncryptionBitLength` attribute.
- Support for Enhanced System DBPM (DAPC) mode using the `BIOS.SysProfileSettings.PowerSaver` attribute.

Supported RACADM Interfaces

The RACADM command-line utility provides a scriptable interface that allows you to locally configure or remotely configure your CMC. The utility runs on the management station and the managed system. It is available on the *Dell OpenManage Systems Management and Documentation* DVD or at support.dell.com.

The RACADM utility supports the following interfaces:

- Local — Supports running RACADM commands from the managed server's operating system. To run local RACADM commands, install the OpenManage software on the managed server. Only one instance of Local RACADM can be executed on a system at a time. If you try to open another instance, an error message is displayed and the second instance of Local RACADM closes immediately. To download the local RACADM tool from support.dell.com, select **Drivers and Downloads**, select a server, and then select **Systems Management** → **Dell Toolkit**.
 **NOTE:** Local racadm and local racadm proxy runs with root user privilege.
- SSH or Telnet — Also known as Firmware RACADM. Firmware RACADM is accessible by logging in to CMC using SSH or Telnet. Similar to Remote RACADM, at the RACADM prompt, directly run the commands without the RACADM prefix.
- Remote — Supports running RACADM commands from a remote management station such as a laptop or desktop. To run Remote RACADM commands, install the DRAC Tools utility from the OpenManage software on the remote computer. To run Remote RACADM commands:
 - Formulate the command as a SSH or Telnet RACADM command.

For more information about the options, see [RACADM Subcommand Details](#). To download the local RACADM tool from dell.com/support, click **Servers, Storage & Networking** in the **General Support** section. Click **PowerEdge**, click the required PowerEdge system, and then click **Drivers & downloads**.

RACADM Syntax Usage

The following section describes the syntax usage for SSH or Telnet, and Remote RACADM.

SSH, Telnet, or Remote RACADM

```
racadm -r <cmcIPAddr> -u username -p password <subcommand>
racadm -r <cmcIPAddr> -u username -p password getconfig -g <group name> -o
<object name>
racadm <subcommand>
```

Example

```
racadm getsysinfo
racadm -r 192.168.0 -u username -p xxx getsysinfo
racadm -r 192.168.0 -u username -p xxx getconfig -g cfgchassispower
```

Remote RACADM

```
racadm -r <cmcIpAddr> -u <username> -p <password> <subcommand>
```

Example

```
racadm -r 192.168.0 -u root -p xxxx getsysinfo
Security Alert: Certificate is invalid - Certificate is not signed by Trusted
Third Party Continuing execution.
```

 **NOTE:** The following command does not display a security error:

```
racadm -r 192.168.0 -u noble -p xxx getsysinfo --nocertwarn
```

Accessing Indexed-Based Device Groups and Objects

- To access any object, run the following syntax:
device.<group name>.[<index>].<object name>
- To display the supported indexes for a specified group, run:
racadm get device.<group name>

Example

```
racadm get nic.nicconfig
NIC.nicconfig.1 [Key=NIC.Integrated.1-1-1#nicconfig]
NIC.nicconfig.2 [Key=NIC.Integrated.1-2-1#nicconfig]
NIC.nicconfig.3 [Key=NIC.Integrated.1-3-1#nicconfig]
NIC.nicconfig.4 [Key=NIC.Integrated.1-4-1#nicconfig]
```

- To display the object list for the specified group, run:
racadm get device.<group name>.<index>

Example

```
racadm get nic.nicconfig.2
[Key=NIC.Integrated.1-2-1#nicconfig]
BannerMessageTimeout=5
BootStrapType=AutoDetect
HideSetupPrompt=Disabled
LegacyBootProto=NONE
LnkSpeed=AutoNeg
#VlanId=1
VlanMode=Disabled
```

- To display a single object for the specified group, run:
racadm get device.<group name>.<index>.<object name>

Example

```
racadm get nic.nicconfig.3.legacybootproto
[Key=NIC.Integrated.1-3-1#NICConfig]
Legacybootproto=PXE
```

RACADM Command Options

The following table lists the options for the RACADM command:

Option	Description
-r <cmcIpAddr>	Specifies the controller's IP address.
-r <racIpAddr> -r <racIpAddr> : <port number>	Specifies the controller's remote IP address. Use <port number> if the iDRAC port number is not the default port (443).
-u <username>	Specifies the user name that is used to authenticate the command transaction. If the -u option is used, the -p option must be used, and the -i option (interactive) is not allowed.
-p <password>	Specifies the password used to authenticate the command transaction. If the -p option is used, the -i option is not allowed.
--nocertwarn	Does not display certificate related warning message.
-i <indexnumber>	Specifies the index number for the indexed group, if applicable.
-g <groupname>	Specifies the group name if applicable.
-o <objectname>	Specifies the object name if applicable.

Using The Autocomplete Feature

Use the autocomplete feature to:

- Display all the available RACADM commands in the alphabetical order on pressing the <Tab> key at the prompt.
- View the complete list, enter the starting letter of the command at the prompt and press <Tab> key.
- Navigate the cursor within a command, press:

<Home> key: directs to the beginning of the command.

<End> key: directs to the end of the command.

- View the history of the commands that were run in the current session, press **up** and **down** arrow key.
- Exit the Autocomplete mode, enter *Quit*, *Exit*, or press <Ctrl+D> key.

For example:

- **Example 1:** [root@idrac-<username>]racadm> <press tab>
- **Example 1:** racadm> <press tab>
arp
autoupdatescheduler
clearasrscreen
clearpending
closessn
clrraclog

```

.
.
.
.
.
.
.
vflashsd
vflashpartition
vmdisconnect
cd
quit

```

- **Example 2:** racadm> get <press tab>

- **Example 2:** racadm> get <press tab>

```

get
getconfig
getled
getniccfg
getraclog
getractable
getsel
getsensorinfo
getssninfo
getsvctag
getsysinfo
gettracelog
getversion

```

- **Example 3:**

```
racadm> getl<press tab>
```

```
racadm> getled <press enter> or <racadm getled>
LEDState: Not-Blinking
```

- **Example 3**

```

racadm> getv <press tab>
Bios Version      = 1.5.0
iDRAC Version     = 1.40.40
USC Version       = 1.1.5.157

```

Supported RACADM Subcommands

The following table provides the list of RACADM subcommands and their corresponding interface support. For more information about the RACADM subcommands including syntax and valid entries, see [RACADM Subcommand Details](#).

Subcommand	iDRAC on Blade Servers			iDRAC on Rack and Tower Servers		
	Telnet/SSH/ Serial	Local RACADM	Remote RACADM	Telnet/SSH/ Serial	Local RACADM	Remote RACADM
autoupdatescheduler	Yes	Yes	Yes	Yes	Yes	Yes
arp	Yes	Yes	Yes	Yes	Yes	Yes
clearasrscreen	Yes	Yes	Yes	Yes	Yes	Yes

Subcommand	iDRAC on Blade Servers			iDRAC on Rack and Tower Servers		
	Telnet/SSH/ Serial	Local RACADM	Remote RACADM	Telnet/SSH/ Serial	Local RACADM	Remote RACADM
clearpending	Yes	Yes	Yes	Yes	Yes	Yes
closessn	Yes	Yes	Yes	Yes	Yes	Yes
clrsel	Yes	Yes	Yes	Yes	Yes	Yes
config	Yes	Yes	Yes	Yes	Yes	Yes
coredump	Yes	Yes	Yes	Yes	Yes	Yes
coredumpdelete	Yes	Yes	Yes	Yes	Yes	Yes
diagnostics	Yes	Yes	Yes	Yes	Yes	Yes
eventfilters	Yes	Yes	Yes	Yes	Yes	Yes
fcstatistics	Yes	Yes	Yes	Yes	Yes	Yes
frontpanelerror	Yes	Yes	Yes	Yes	Yes	Yes
fwupdate	Yes	Yes	Yes	Yes	Yes	Yes
get	Yes	Yes	Yes	Yes	Yes	Yes
getconfig	Yes	Yes	Yes	Yes	Yes	Yes
gethostnetworkinterfaces	Yes	Yes	Yes	Yes	Yes	Yes
getled	Yes	Yes	Yes	Yes	Yes	Yes
getniccfg	Yes	Yes	Yes	Yes	Yes	Yes
getraclog	Yes	Yes	Yes	Yes	Yes	Yes
getractime	Yes	Yes	Yes	Yes	Yes	Yes
getsel	Yes	Yes	Yes	Yes	Yes	Yes
getsensorinfo	Yes	Yes	Yes	Yes	Yes	Yes
getssninfo	Yes	Yes	Yes	Yes	Yes	Yes
getsvctag	Yes	Yes	Yes	Yes	Yes	Yes
getsysinfo	Yes	Yes	Yes	Yes	Yes	Yes
gettracelog	Yes	Yes	Yes	Yes	Yes	Yes
getversion	Yes	Yes	Yes	Yes	Yes	Yes
help and help subcommand	Yes	Yes	Yes	Yes	Yes	Yes
hwinventory	Yes	Yes	Yes	Yes	Yes	Yes
ifconfig	Yes	Yes	Yes	Yes	Yes	Yes
inlettemphistory	Yes	Yes	Yes	Yes	Yes	Yes
jobqueue	Yes	Yes	Yes	Yes	Yes	Yes

Subcommand	iDRAC on Blade Servers			iDRAC on Rack and Tower Servers		
	Telnet/SSH/ Serial	Local RACADM	Remote RACADM	Telnet/SSH/ Serial	Local RACADM	Remote RACADM
krbkeytabupload	No	Yes	Yes	No	Yes	Yes
lolog	Yes	Yes	Yes	Yes	Yes	Yes
license	Yes	Yes	Yes	Yes	Yes	Yes
nicstatistics	Yes	Yes	Yes	Yes	Yes	Yes
ping	Yes	Yes	Yes	Yes	Yes	Yes
ping6	Yes	Yes	Yes	Yes	Yes	Yes
racdump	Yes	No	Yes	Yes	Yes	Yes
racreset	Yes	Yes	Yes	Yes	Yes	Yes
racresetcfg	Yes	Yes	Yes	Yes	Yes	Yes
remoteimage	Yes	Yes	Yes	Yes	Yes	Yes
rollback	Yes	Yes	Yes	Yes	Yes	Yes
sensorsetting	Yes	Yes	Yes	Yes	Yes	Yes
serveraction	Yes	Yes	Yes	Yes	Yes	Yes
set	Yes	Yes	Yes	Yes	Yes	Yes
settled	Yes	Yes	Yes	Yes	Yes	Yes
setniccfg	Yes	Yes	Yes	Yes	Yes	Yes
sshpkauth	Yes	Yes	Yes	Yes	Yes	Yes
sslcertupload	No	Yes	Yes	No	Yes	Yes
sslcertview	Yes	Yes	Yes	Yes	Yes	Yes
sslcertdelete	Yes	Yes	Yes	Yes	Yes	Yes
sslcsrgen	Yes	Yes	Yes	Yes	Yes	Yes
sslkeyupload	No	Yes	Yes	No	Yes	Yes
sslresetcfg	Yes	Yes	Yes	Yes	Yes	Yes
storage	Yes	Yes	Yes	Yes	Yes	Yes
swinventory	Yes	Yes	Yes	Yes	Yes	Yes
systemconfig	Yes	Yes	Yes	Yes	Yes	Yes
systemerase	Yes	Yes	Yes	Yes	Yes	Yes
systemperfstatistics	Yes	Yes	Yes	Yes	Yes	Yes
techsupreport	Yes	Yes	Yes	Yes	Yes	Yes
testemail	Yes	Yes	Yes	Yes	Yes	Yes

Subcommand	iDRAC on Blade Servers			iDRAC on Rack and Tower Servers		
	Telnet/SSH/ Serial	Local RACADM	Remote RACADM	Telnet/SSH/ Serial	Local RACADM	Remote RACADM
testtrap	Yes	Yes	Yes	Yes	Yes	Yes
testalert	Yes	Yes	Yes	Yes	Yes	Yes
traceroute	Yes	Yes	Yes	Yes	Yes	Yes
traceroute6	Yes	Yes	Yes	Yes	Yes	Yes
update	Yes	Yes	Yes	Yes	Yes	Yes
usercertupload	No	Yes	Yes	No	Yes	Yes
usercertview	Yes	Yes	Yes	Yes	Yes	Yes
vflashsd	Yes	Yes	Yes	Yes	Yes	Yes
vflashpartition	Yes	Yes	Yes	Yes	Yes	Yes
ymdisconnect	Yes	Yes	Yes	Yes	Yes	Yes

Other Documents You May Need

In addition to this guide, you can access the following guides available on the Dell Support website at www.dell.com/esmanuals. To access the documents, click the appropriate product link.

- The *Chassis Management Controller User's Guide* provides information about configuring and using CMC to remotely manage and monitor your system and its shared resources through a network.
- The *Chassis Management Controller Online Help* provides information about using the CMC Web interface.
- The *Chassis System (CMC) Secure Digital (SD) Card Technical Specification* provides minimum BIOS and firmware version, installation and usage information.
- Documentation specific to your third-party management console application.
- The *Dell OpenManage Server Administrator's User's Guide* provides information about installing and using Dell OpenManage Server Administrator.
- The *Dell Update Packages User's Guide* provides information about obtaining and using Dell Update Packages as part of your system update strategy.
- The *Glossary* provides information about the terms used in this document.

The following system documents are also available to provide more information about the system in which iDRAC is installed:

- The *Rack Installation Guide* and *Rack Installation Instructions* included with your rack solution describe how to install your system into a rack.
- The *Hardware Owner's Manual* provides information about system features and describes how to troubleshoot the system and install or replace system components.
- Documentation for any components you purchased separately provides information to configure and install the options.

- Release notes or readme files may be included to provide last-minute updates to the system or documentation or advanced technical reference material intended for experienced users or technicians.
- For more information about IOM network settings, see the *Dell PowerConnect M6220 Switch Important Information* document and the *Dell PowerConnect 6220 Series Port Aggregator White Paper*.

Updates are sometimes included with the system to describe changes to the system, software, and/or documentation. Always read the updates first because they often supersede information in other documents.

See the *Safety and Regulatory* information that is shipped with your system.

 **NOTE:** Warranty information may be included within this document or as a separate document.

Accessing documents from Dell Support Site

You can access the required documents in one of the following ways:

- Using the following links:
 - For all Enterprise Systems Management documents — dell.com/softwaresecuritymanuals
 - For Enterprise Systems Management documents — dell.com/openmanagemanuals
 - For Remote Enterprise Systems Management documents — dell.com/esmmanuals
 - For OpenManage Connections Enterprise Systems Management documents — dell.com/OMConnectionsEnterpriseSystemsManagement
 - For Serviceability Tools documents — dell.com/serviceabilitytools
 - For Client Systems Management documents — dell.com/clientsystemsmanagement
 - For OpenManage Connections Client Systems Management documents — dell.com/dellclientcommandsuitemanuals
- From the Dell Support site:
 - a. Go to dell.com/support/home.
 - b. Under **Select a product** section, click **Software & Security**.
 - c. In the **Software & Security** group box, click the required link from the following:
 - **Enterprise Systems Management**
 - **Remote Enterprise Systems Management**
 - **Serviceability Tools**
 - **Client Systems Management**
 - **Connections Client Systems Management**
 - d. To view a document, click the required product version.
- Using search engines:
 - Type the name and version of the document in the search box.

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.

RACADM Subcommand Details

This section provides detailed description of the RACADM subcommands including the syntax and valid entries.

Guidelines to Quote Strings Containing Special Characters When Using RACADM Commands

When using strings that contain special characters, use the following guidelines:

Strings containing the following special characters must be quoted using single quotation marks or double quotation marks:

- \$ (dollar sign)
- " (double quotation mark)
- ' (single quotation mark)
- ` (backward quotation mark)
- \ (backward slash)
- ~ (tilde)
- ; (semicolon)
- | (vertical bar)
- ((left parentheses)
-) (right parentheses)
- & (ampersand)
- > (greater than)
- < (less than)
- # (pound)
- ASCII code 32 (space)

There are different escaping rules for using single quotation marks versus double quotation marks.

For using double quotation marks:

The following characters must be escaped by prepending a backward slash:

- \$ (dollar sign)
- " (double quotation mark)
- ` (back quotation mark)
- \ (backward slash)

For example, use the following for a string that contains the special characters, \$, ", ` and \

For using single quotation marks:

- No character escaping is necessary.
- A single quotation mark is not used even with a backward slash escaped.

 **NOTE:** An empty string may be specified as either "" (using double quotation marks) or '' (using single quotation marks).

help and help subcommand

Description	Lists all the subcommands available for use with RACADM and provides a short description about each subcommand. You may also type a subcommand, group, object or Fully Qualified Descriptor (FQDD) name after help .
Synopsis	• <code>racadm help</code> • <code>racadm help <subcommand></code> • <code>racadm help -g <groupname></code> • <code>racadm help -g <groupname> -o <objectname></code>
Input	• <code><subcommand></code> — specifies the subcommand for which you need the help information. • <code><device name></code> — specifies the device name such as iDRAC, BIOS, NIC, LifecycleController, FC, system, or Storage. • <code><group></code> — specifies the group name supported by the corresponding device. • <code><object></code> — specifies the object for the entered group.
Output	• The <code>help</code> command displays a complete list of subcommands. • The <code>racadm help <subcommand></code> command displays information for the specified subcommand only. • The <code>racadm help -g <groupname></code> command displays information for the specified group. • The <code>racadm help -o <objectname></code> command displays information for the specified object. • The <code>racadm help <device name> <Group></code> command displays information for the specified group. • The <code>racadm help <device name> <Object></code> command displays information for the specified object. • The <code>racadm help <device name> <Group> <Object></code> command displays information for the specified object.

arp

Description	Displays the contents of the Address Resolution Protocol (ARP) table. ARP table entries cannot be added or deleted. To use this subcommand, you must have Debug privilege. To use this subcommand, you must have Execute Diagnostic Commands.
Synopsis	<code>racadm arp</code>

Input N/A

Example racadm arp

Output

Address	HW Type	HW Address	Mask	Device
192.168.1.1	Ether	00:0d: 65:f3:7c:bf	C	eth0

autoupdatescheduler

Description You can automatically update the firmware of the devices on the server.
To run this subcommand, you must have the Server Control privilege.



NOTE:

- The autoupdatescheduler subcommand can be enabled or disabled.
- Lifecycle Controller and CSIOR may not be enabled to run this subcommand.
- The autoupdatescheduler can be enabled or disabled. For more information, see [LifecycleController.LCAttributes.autoupdate \(Read or Write\)](#)
- The minimum Lifecycle Controller version required is Lifecycle Controller 1.3.
- The minimum Lifecycle Controller version required is Lifecycle Controller2 1.3.
- When a job is already scheduled and the clear command is run, the scheduling parameters are cleared.
- If the network share is not accessible or the catalog file is missing when the job is scheduled, then the job is unsuccessful.

Synopsis

- To create the AutoUpdateScheduler, run the command.

```
racadm autoupdatescheduler create -u <user> -p <password> -l  
<location> -f <filename> -time <time> -dom <DayOfMonth> -wom  
<WeekOfMonth> -dow <DayofWeek> -rp <repeat> -a <applyreboot> -  
ph <proxyHost> -pu <proxyUser> -pp <proxyPassword> -po  
<proxyPort> -pt <proxyType>
```
- To view AutoUpdateScheduler parameter, run the command.

```
racadm autoupdatescheduler view
```
- To clear and display AutoUpdateScheduler parameter, run the command.

```
racadm autoupdatescheduler clear
```



NOTE: After the parameters are cleared, the AutoUpdateScheduler is disabled.
To schedule the update again, enable the AutoUpdateScheduler.

Input

Valid options:

- -u — Specifies the user name of the remote share that stores the catalog file.
- NOTE:** For CIFS, enter the domain name as domain or username.
- -p — Specifies the password of the remote share that stores the catalog file.
 - -l — Specifies the network share (NFS, CIFS, FTP, TFTP, or HTTP) location of the catalog file. IPv4 and IPv6 addresses are supported.
 - -f — Specifies the catalog location and the filename. If the filename is not specified, then the default file used is **catalog.xml**.



NOTE: If the file is in a subfolder within the share location, then enter the network share location in the `-l` option and enter the subfolder location and the filename in the `-f` option.

- `-ph` — Specifies the FTP/HTTP proxy host name.
- `-pu` — Specifies the FTP/HTTP proxy user name.
-
- `-pp` — Specifies the FTP/HTTP proxy password.
- `-po` — Specifies the FTP/HTTP proxy port.
- `-pt` — Specifies the FTP/HTTP proxy type.
- `-time` — Specifies the time to schedule an autoupdate in the HH:MM format. This option must be specified.
- `-dom` — Specifies the day of month to schedule an autoupdate. Valid values are 1–28, L (Last day) or '*' (default — any day).
- `-wom` — Specifies the week of month to schedule an autoupdate. Valid values are 1–4, L (Last week) or '*' (default — any week).
- `-dow` — Specifies the day of week to schedule an autoupdate. Valid values are sun, mon, tue, wed, thu, fri, sat, or '*' (default — any day).



NOTE: The `-dom`, `-wom`, or `-dow` option must be included in the command for the autoupdate schedule. The * value for the options must be included within ' ' (single quotation mark).

- If the `-dom` option is specified, then the `-wom` and `-dow` options are not required.
- If the `-wom` option is specified, then the `-dow` is required and `-dom` is not required.
- If the `-dom` option is non- '*', then the schedule repeats by month.
- If the `-wom` option is non- '*', then the schedule repeats by month.
- If the `-dom` and `-wom` options are '*' and the `-dow` option is non- '*', then the schedule repeats by week.
- If all the three `-dom`, `-wom` and `-dow` options are '*', then the schedule repeats by day.
- `-rp` — Specifies the repeat parameter. This parameter must be specified.
 - If the `-dom` option is specified, then the valid values for `-rp` are 1–12.
 - If the `-wom` option is specified, then the valid values for `-rp` are 1–52.
 - If the `-dow` option is specified, then the valid values for `-rp` are 1–366.
- `-a` — Applies reboot (1 — Yes, 0 — No). This option must be specified.

Example

Usage examples:

- To configure autoupdate feature settings.
 - For CIFS, run the command:


```
racadm autoupdatescheduler create -u domain/admin -p xxx -l //1.2.3.4/share -f cat.xml -time 14:30 -wom 1 -dow sun -rp 1 -a 1
```
 - For NFS, run the command:


```
racadm autoupdatescheduler create -u nfsadmin -p nfspwd -l 1.2.3.4:/share -f cat.xml -time 14:30 -dom 1 -rp 5 -a 1
```
 - For FTP, run the command:


```
racadm autoupdatescheduler create -u ftpuser -p ftppwd -l ftp.test.com -f cat.xml.gz -ph 10.20.30.40 -pu padmin -pp pwd -po 8080 -pt http -time 14:30 -dom 1 -rp 5 -a 1
```

- For HTTP, run the command:

```
racadm autoupdatescheduler create -u httpuser -p httppwd -l http://test.com -f cat.xml -ph 10.20.30.40 -pu padmin -pp pwd -po 8080 -pt http -time 14:30 -dom 1 -rp 5 -a 1
```
- For TFTP, run the command:

```
racadm autoupdatescheduler create -l tftp://1.2.3.4 -f cat.xml.gz -time 14:30 -dom 1 -rp 5 -a 1
```
- To view AutoUpdateScheduler parameter:

```
racadm autoupdatescheduler view
hostname      = 192.168.0
sharename     = nfs
sharetype     = nfs
catalogname   = Catlog.xml
time          = 14:30dayofmonth =1
repeat        = 5
applyreboot   = 1
idracuser     = racuser
```
- To clear and display AutoUpdateScheduler parameter:

```
racadm autoupdatescheduler clear
RAC1047: Successfully cleared the Automatic Update
(autoupdate) feature settings
```

cd

Description	To change the current working object, use this command.
Synopsis	<code>racadm> cd <object></code>
Input	<code>racadm> cd <object></code>
Output	Displays the new prompt.
Example	• Example 1: To navigate to the system device type directory: <pre>racadm>>cd system racadm/system></pre> • Example 2: To run all the power-related get or setcommands: <pre>racadm/system>cd power racadm/Power></pre>

cd..

Description	To go back to the previous directory, use this command.
Synopsis	<code>racadm> cd..</code>
Input	<code>racadm> cd..</code>
Output	To traverse back to the previous directory, use the command.
Example	• Example 1: To traverse back from power to system object:

- Input: racadm/power> cd..
- Output:
system>>
- **Example 2:** To traverse back from system object to the prompt:
 - Input:racadm/system> cd..
 - Output:
racadm>>

clearasrscreen

Description	Clears the last crash (ASR) screen that is in memory. For more information, see "Enabling Last Crash Screen" section in the <i>iDRAC User's Guide</i>.  NOTE: To run this subcommand, you must have the Clear Logs permission.
Synopsis	racadm clearasrscreen
Input	None
Output	Clears the last crash screen buffer.
Example	racadm clearasrscreen

clearpending

Description	Deletes the pending values of all the attributes (objects) in the device (NIC, BIOS, FC, and Storage).  NOTE: If any attribute is not modified or a job is already scheduled for the same device, then the pending state is not cleared or deleted.
Synopsis	racadm clearpending <FQDD>
Input	<FQDD> — The values are: • BIOS FQDD • NIC FQDD • FC FQDD • Storage controller FQDD <FQDD>: The values are: • BIOS.Setup.1-1 • NIC.Integrated.1-1 • RAID.Integrated.1-1
Output	A message is displayed indicating that the pending state is cleared or deleted.
Example	racadm clearpending NIC.Integrated.1-1

closessn

Description Closes a communication session on the device. Use **getssninfo** to view a list of sessions that can be closed using this command.

To run this subcommand, you must have the Administrator permission



NOTE: This subcommand ends all the sessions other than the current session.

Synopsis

- `racadm closessn -i <session_ID>`
- `racadm closessn -a`
- `racadm closessn -u <username>`

Input

- `-i <session_ID>` — The session ID of the session to close, which can be retrieved using RACADM `getssninfo` subcommand. Session running this command cannot be closed.
- `-a` — Closes all sessions.
- `-u <username>` — Closes all sessions for a particular user name.
- For Remote RACADM, use either the `-u` option or the `-i` option.

Output Successful or error message is displayed.

Example

- Closes the session 1234.
`racadm closessn -i 1234`
- Closes all the sessions other than the active session for root user.
`racadm closessn -u root`
- Closes all the sessions.
`racadm closessn -a`

clrsl

Description Removes all the existing records from the System Event Log (SEL).

To use this subcommand, you must have **Clear Logs** permission.

Synopsis `racadm clrsl [-m <module>]`

Input `-m <module>` must be one of the following values:

- `server-<n>` — where n=1 to 16
- `server-<nx>` — where n=1 to 8; x = a, b, c, d (lower case)

Example

- `racadm clrsl`
The SEL was cleared successfully
- `racadm clrsl -m server-1`
Clear SEL log on server 1

config

Description

Allows you to set iDRAC configuration parameters individually or to batch them as part of a configuration file and then modify CMC configuration properties. If the data is different, the iDRAC object is written with a new value.



NOTE: This subcommand will be deprecated in the later versions. For information about configurations, see the `set` subcommand.

Synopsis

- `racadm config -g <group> -o <object> <value> [-m <module>]`
- `racadm config -g <group> -i <index> -o <object> <value>`



NOTE:

- The configuration file retrieved using remote RACADM is not interoperable. For the `config racadm -r 192.168.0 -u root -p xxx config -f c:\config.txt` command, use the configuration file retrieved from the same interface. For example, for the `config racadm -r 192.168.0 -u root -p xxx config -f c:\config.txt`, use the file generated from `getconfig` command `racadm -r 192.168.0 -u root -p xxx getconfig -f c:\config.txt`.
- `-f` is only applicable for remote RACADM.

`racadm config -g <group> -o <object> <value> [-m <module>]`

Input

- `-f` — The `-f <filename>` option causes **config** to read the contents of the file specified by `<filename>` and configure iDRAC or CMC. The file must contain data in the format specified in the section Parsing Rules in the *CMC User's Guide* available at www.dell.com/esmmanuals.



NOTE: The `-f` option is not supported for the Serial or Telnet or SSH console.

- `-continue` — This option is used with `-f` option only. If configuration through file is unsuccessful for a group, then configuration continues with the next group in the file. If this option is not used, then configuration stops when it is unsuccessful for a particular group. After the unsuccessful group, the rest of the groups are not configured.
- `-p` — This option must be used with the `-f` option. It directs **config** to delete the password entries contained in the config file `-f <filename>` after the configuration is complete.
To apply the password, you must remove the preceding Read-Only marker '#' in the config file before executing the `config -f` command.
- `-g` — The `-g <groupName>`, or **group** option, must be used with the `-o` option. The `<group>` specifies the group containing the object that is to be set.
- `-o` — The `-o <objectName>`, or **object** option, must be used with the `-g` option. This option specifies the object name that is written with the string
- `<value>` — Value to set to configuration object.
- `-i` — The `-i <index>`, or **index** option, is valid only for indexed groups and can be used to specify a unique group (used with `-g` and `-o`). The `<index>` is a decimal integer from 1 through n, where n can vary from 1 to maximum number of indexes a particular group supports. If `-i <index>` is not specified, a value of 1 is assumed for groups, which are tables that have multiple entries. The index is specified by the index value, not a named value.
'nx' is allowed for servers.
- `-m` — Module must be one of the following values:
 - `server-<n>` — where n = 1-16

– server-<nx> – where n = 1–8; x = a to d (lower case)



NOTE: Only available for `cfgRemoteHosts`, `cfgRacTuning`, `cfgSerial`, `cfgSessionManagement`, `cfgLanNetworking` or `cfgIPv6LanNetworking`.

Output

This subcommand generates error output for any of the following reasons:

- Invalid syntax, group name, object name, index or other invalid database members.
- If the RACADM command-line interface is unsuccessful.

Examples

- To set the `cfgNicIpAddress` configuration parameter (object) to the value 192.168.0. This IP address object is contained in the group `cfgLanNetworking`.
`racadm config -g cfgLanNetworking -o cfgNicIpAddress 192.168.0`

- To configure or re-configure CMC:

```
racadm -r <cmcIpAddr> -u <username> -p <xxx> config -f mycmc.cfg
```

The `mycmc.cfg` file may be created from the `getconfig` command. This file may also be edited manually using the parsing rules.



NOTE: The `mycmc.cfg` file does not contain passwords. To include passwords in the file, you must enter them manually.

- To configure the single property of a group:
`racadm config -g cfgSerial -o cfgSerialBaudRate`
- To modify a user password:
`racadm config -g cfgUserAdmin -o cfgUserAdminPassword -i 3 <newpassword>`
- To configure the single property of a group for a particular server:
`racadm config -g cfgSessionManagement -o cfgSsnMgtWebServerTimeout newvalue -m server-n`
- To configure the remote Syslog property for a particular server:
`racadm config -g cfgRemoteHosts -o cfgRhostsSyslogEnable 1 -m server-n`
- To configure the remote Syslog property for all servers:
`racadm config -g cfgRemoteHosts -o cfgRhostsSyslogEnable 1 -m server-all`
- Configures the Enhanced Cooling Mode property for fans.
`racadm config -g cfgThermal -o cfgThermalEnhancedCoolingMode 1`

coredump

Description

Displays detailed information related to any recent critical issues that have occurred with iDRAC. The coredump information can be used to diagnose these critical issues.

If available, the coredump information is persistent across iDRAC power cycles and remains available until either of the following conditions occur:

The coredump information is deleted using the [coredumpdelete](#) subcommand.

For more information about clearing the **coredump**, see the [coredumpdelete](#).



NOTE: To use this subcommand, you must have the **Execute Debug** privilege.

Synopsis

`racadm coredump`

Example

- `racadm coredump`
There is no coredump currently available.
- `racadm coredump`
Feb 19 15:51:40 (none) last message repeated 5 times
Feb 19 15:52:41 (none) last message repeated 4 times
Feb 19 15:54:12 (none) last message repeated 4 times
Feb 19 15:56:11 (none) last message repeated 2 times
Feb 22 11:46:11 (none) kernel:

coredumpdelete

Description

Deletes any currently available coredump data stored in the RAC.

To use this subcommand, you must have **Execute Debug** Command permission.

To use this subcommand, you must have **Clear Logs** or **Execute Debug** Commands permission.



NOTE: If a **coredumpdelete** command is issued and a **coredump** is not currently stored in the RAC, the command displays a success message. This behavior is expected. See the **coredump** subcommand for more information about viewing a coredump.

Synopsis

`racadm coredumpdelete`

Output

Coredump is deleted.

Example

`racadm coredumpdelete`
Coredump request completed successfully

diagnostics

Description

Collects and exports remote diagnostics report from iDRAC.

The results of the latest successfully run remote diagnostics are available and retrievable remotely through an NFS or a CIFS share.

Synopsis

To run a remote diagnostic report:

```
racadm diagnostics run -m <mode> -r <reboot type> -s <start time>
-e <expiration time>
```

To export a remote diagnostic report:

```
racadm diagnostics export -f <file name> -l <NFS or CIFS share
location> -u <username> -p <password>
```

Input

- `-m <mode>` — Specifies the type of diagnostic mode. The types are:
 - Collect and export remote diagnostics report from the iDRAC.

The results of the latest successfully executed remote Diagnostics will be available and retrievable remotely through an NFS or a CIFS share.

- 0(Express) — The express mode executes a subset of diagnostic tests.
- 1(Extended) — The extended mode executes all available diagnostics tests.
- 2(Both) — Runs express and extended tests serially in sequence.
- -f <filename> — Specifies the name of the configuration file.
- -l — Specifies the location of the network share (NFS or CIFS).
- -u <username> — Specifies the user name of the remote share to import the file.
- -p <password> — Specifies the password of the remote share to import the file.
- -r <reboot type> — Specifies the reboot type. The type can be one of the following:
 - pwr cycle — Power cycle
 - Graceful — Graceful reboot without forced shutdown
 - Forced — Graceful reboot with forced shutdown
- -s <start time> — Specifies the start time for the scheduled job in `yyyymmddhhmmss` format. The default value `TIME_NOW` starts the job immediately.
- -e <expiration time> — Specifies the expiry time for the scheduled job in `yyyymmddhhmmss` format. The default value `TIME_NA` does not apply the waiting time.



NOTE: For the diagnostic report run operation, the time difference between the -s and -e options must be more than five minutes.

Output

Provides the Job ID for the diagnostic operation.

Examples

- To initiate a remote diagnostic operation:

```
racadm diagnostics run -m 1 -r forced -s 20121215101010 -e TIME_NA
```
- To export a remote diagnostics report to CIFS share:

```
racadm diagnostics export -f diagnostics -l //192.168.0/cifs -u administrator -p xxx
```
- To export a remote diagnostics report to NFS share:

```
racadm diagnostics export -f diagnostics -l 192.168.0:/nfs -u administrator -p xxx
```

eventfilters

Description

Displays the list of event filter settings.

To use this subcommand with the `set` and `test` option, you must have the **Administrator** privilege.

Synopsis

```
racadm eventfilters <eventfilters command type>
racadm eventfilters get -c <alert category>
racadm eventfilters set -c <alert category> -a <action> -n
<notifications>
racadm eventfilters set -c <alert category> -a <action> -r
<recurrence>
racadm eventfilters test -i <Message ID to test>
```



NOTE: The general format of an alert category:

`idrac.alert.category.[subcategory].[severity]`

where, category is mandatory, but subcategory and severity are optional. A severity cannot precede a subcategory.

Valid Category values are:

- All
- System
- Storage
- Updates
- Audit
- Config
- Worknotes

Valid Severity values are:

- Critical
- Warning
- Info

Valid examples of alert queries are:

- `idrac.alert.all`
- `idrac.alert.audit`
- `idrac.alert.audit.lic`
- `idrac.alert.audit.warning`
- `idrac.alert.audit.lic.critical`

Input

- **get** — Displays the list of eventfilter settings.
- **set** — Configures the actions and notifications for a given eventfilter configuration.
- **-i** — Message ID for which the simulation is needed.
- **-c** — Alert category of the specific event filter.
- **-a** — The action that must be invoked when the event occurs. Valid values are `none`, `powercycle`, `power off`, or `systemreset`.
- **-n** — The notification is sent when the event occurs. Valid values are `all`, `snmp`, `ipmi`, `ws-events`, `oslog`, `email`, `remotesyslog` or `none`. You can append multiple notifications separated by a comma. You cannot enter the values `all` or `none` with other notifications. If incorrect notification is specified along with other valid notifications, the valid and invalid notification set is failed.

-
- **-r** — Event generation interval. This option is applicable only to the temperature statistics subcategory `tmpls`. You can use this option as a stand-alone or with **-n** and **-a**.



NOTE: If both **event generation interval** and **notifications** are configured and there is an error while configuring the notifications, the event generation interval is not set. The valid values are 0–365. 0 disables the event generation.

Example

- Display all available event filter configurations:
`racadm eventfilters get -c idrac.alert.all`
- Display eventfilter configurations for a specific category. For example, audit:
`racadm eventfilters get -c idrac.alert.audit`
- Display eventfilter configurations for a specific subcategory. For example, licensing under the audit category:
`racadm eventfilters get -c idrac.alert.audit.lic`
- Display eventfilter configurations for a specific severity. For example, warning under the audit category:
`racadm eventfilters get -c idrac.alert.audit.warning`
- Display eventfilter configurations for a specific severity and subcategory. For example, a severity of warning in the subcategory licensing under audit category:
`racadm eventfilters get -c idrac.alert.audit.lic.warning`
- Clear all available alert settings:
`racadm eventfilters set -c idrac.alert.all -a none -n none`
- Configure using severity as a parameter. For example, all informational events in storage category are assigned power off as action, and email and snmp as notifications:
`racadm eventfilters set -c idrac.alert.storage.info -a poweroff -n email,snmp`
- Configure using subcategory as a parameter. For example, all configurations under the licensing subcategory in the audit category are assigned power off as action and all notifications are enabled:
`racadm eventfilters set -c idrac.alert.audit.lic -a poweroff -n all`
- Configure using subcategory and severity as parameters. For example, all information events under the licensing subcategory in the audit category are assigned power off as action and all notifications are disabled:
`racadm eventfilters set -c idrac.alert.audit.lic.info -a poweroff -n none`
- Configure the event generation interval for temperature statistics:
`racadm eventfilters set -c idrac.alert.system.tmpls.warning -r 10`
- Configure the event generation interval and notifications for temperature statistics:
`racadm eventfilters set -c idrac.alert.system.tmpls -r 5 -a none -n snmp`
- Send a test alert for the fan event:
`racadm eventfilters test -i FAN0001`

fcstatistics

Description	Displays a list of FCs (FQDDs), managed server for which statistics is available.
Synopsis	<code>racadm fcstatistics <FC fqdd></code>
Input	<code><FC fqdd></code> — Specify the FQDD of the target FC device.
Example	<code>racadm fcstatistics <FC fqdd></code>

frontpanelerror

Description	Enables or disables the live-feed of the errors currently being displayed on the LCD screen. For error acknowledge use <code>hide</code> , and error assert use <code>show</code> .
Synopsis	<code>racadm frontpanelerror show</code> <code>racadm frontpanelerror hide</code>
Input	<code>show</code> — to view the errors currently being displayed on the LCD screen. <code>hide</code> — to hide the errors currently being displayed on the LCD screen.
Example	<code>racadm frontpanelerror show</code> Front Panel Error—Show Enabled. <code>racadm frontpanelerror hide</code> Front Panel Error—Hide Enabled.

fwupdate

Description	Allows you to update the firmware on the server iDRACs device. You can: - Check the firmware update process status. - Update iDRAC firmware from FTP or TFTP server by providing an IP address and optional path. - Update iDRAC firmware from the local file system using Local and Remote RACADM. - Roll back to the standby firmware. Allows you to update the firmware on the KVM, active CMC, standby CMC, iDRAC or an IOM infrastructure device. You can: - Check the firmware update process status. - Update CMC from FTP or TFTP server by providing an IP address and optional path. - Update CMC from the local file system using Remote RACADM. - There can only be a single update operation in progress at any time. In addition, the fwupdate subcommand may only update one or more devices of a single kind at a time.  NOTE: CMC firmware update is supported only for the firmware versions 3.10, 3.20, 3.21, 4.0, 4.10, 4.11, 4.30, 4.31, 4.45, and 4.5. For any version other than these, first update to any of these versions, and then update to the required version.
--------------------	--

To use this subcommand, you must have **Configure iDRAC** permission.

To use this subcommand, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** The fwupdate command is not supported for iDRAC7 or later. Use the CMC GUI to perform the operation.

 **NOTE:**

- Running the **fwupdate** subcommand to update the firmware on the active CMC resets itself and all the network connections are dropped. During update of all other modules, including the standby CMC, the active CMC continues to run normally without resetting.
- In a chassis supported by DC PSUs, an error message is displayed if you attempt to update the firmware with a version without DC PSU support.
- The **fwupdate** subcommand generates an error when used on the extension slot of a multi-slot server.
- While Lifecycle Controller is running for racadm commands, you cannot perform other operations which needs Lifecycle Controller Partition. If the Lifecycle Controller Partition is unreleased (because of improper closure of racadm command in the partition), then you must wait 20-35 minutes to clear the Lifecycle Controller Partition

Signed CMC Firmware Image

- For 13th generation and later, CMC firmware includes a signature which is verified by CMC before update to ensure the authenticity of the uploaded firmware. The firmware update process is successful only if the firmware image is authenticated by CMC to be a valid image from the service provider and has not been altered. The firmware update process is stopped if CMC cannot verify the signature of the uploaded firmware image.
- Upload firmware image from TFTP server and start firmware update.

Synopsis

```
racadm fwupdate -s
racadm fwupdate -g -u -a <TFTP_Server_IP_Address>
[-d <path> [--clearcfg]

racadm -r <iDRAC_IP_Address> -u <username> -p <password> fwupdate -
f <ftpserver ip> <ftpserver username> <ftpserver password> -d
<path> where path is the location on the ftp server where
firmimg.d7 is stored.

racadm fwupdate -r
racadm fwupdate -p -u [-d <path>]
```

For SSH or Telnet or Serial:

```
racadm fwupdate -g -u -a <tftp_server_ip_address_or_FQDN> -d
<path> [-m <module>]

racadm fwupdate -f <ftp_server_ip_address_or_FQDN> <username>
<password> -d <path> [-m <module>]

racadm fwupdate -u -m iominf-<n>
racadm fwupdate -s [-m <module>]
racadm fwupdate -c [-m <module>]
```

For Remote RACADM:

```
racadm fwupdate -p -u -d <path> [-m <module>]
```

```
racadm fwupdate -g -u -a 192.168.0 -d firmimg.cmc -m cmc-active
```

When using FTP, if you provide the full path to the image file on the CLI, then the CMC uses that path to locate that file on the host. If full path is not provided and the host system is running Linux or another variant of UNIX, then CMC searches the home directory of the specified user for the file. If the host system is running Windows, then a default folder, such as C:\ftproot is searched.

 **NOTE:** When attempting to run firmware update task, if the firmware image path length is greater than 256 characters, remote RACADM client exits with the error message "ERROR: Specified path is too long".

 **NOTE:** When attempting to run firmware update task using **racadm fwupdate** command, if the firmware image path length is greater than 256 characters. Remote RACADM client exits with the error message "ERROR: Specified path is too long".

Input

- **-u** — The update option performs a checksum of the firmware update file and starts the actual update process. This option may be used along with the **-g** or **-p** options. At the end of the update, iDRAC performs a soft reset.
- **-s** — This option returns the status of the update process.
- **-s** — This option returns the status of the update process. Use this option by itself. Lists active SD card features and SD card status.
- **-u** — Performs the firmware update operation (used with **-p** and **-g**).
- **-s** — Displays the status of the firmware update. Use this option by itself. Lists active SD card features and SD card status.

 **NOTE:** Use **-m** to display the status of the module update. Omit **-m** to display the status of the active CMC update.

 **NOTE:** The value **all** is used only to obtain the status of all targets to update.

- **-g** — The get option instructs the firmware to get the firmware update file from the TFTP server. Specify the **-a**, **-u**, and **-d** options. In the absence of the **-a** option, the defaults are read from properties in the group **cfgRhosts**, using properties **cfgRhostsFwUpdateIpAddr** and **cfgRhostsFwUpdatePath**.
- **-g** — Downloads the firmware update using the TFTP server.
- **-a** — The IP Address option specifies the TFTP server IP address, used with **-g** option.
Specifies the TFTP server IP address or FQDN used for the firmware image (used with **-g**).
- **-p** — The **-p**, or put, option is used to update the firmware file from the managed system to iDRAC. The **-u** option must be used with the **-p** option.
- **-d** — The **-d**, or directory option specifies the directory on the TFTP server or on CMC's host server, where the firmware update file resides.

Specifies the source path where the firmware image resides.

Default: Designated TFTP default directory on that host for the file if **-g** option is absent. If **-g** is used, it defaults to a directory configured on the TFTP server.

 **NOTE:** The `-p` option is supported on local and remote RACADM and is not supported with the `serial/Telnet/ssh` console and on the Linux operating systems.

- `-r` — The rollback option is used to roll back to the standby firmware.
- `-p` — Stops the current firmware update of a module.

 **NOTE:** This option is only supported on the remote interface(s).

- `-m <module>` — Specifies the module or device to be updated. `<module>` is one of the following values:
 - `cmc-active` — default state if `-m` is not specified.
 - `cmc-standby`
 - `kvm`
 - `server-<n>` — where `n=1-16`
 - `server-<nx>` — where `n=1-8`; `x = a, b, c, d` (lower case)
 - `server-<g> <generation>` — where `generation = iDRAC or iDRAC6 only`.
 - `iominf-<n>` — where `n = 1-6`

 **NOTE:** Multiple modules can be specified except `iominf-<n>`, for example, `-m <module 1> -m <module 2>` and so on.

- `-f` — Specifies the FTP server IP address or FQDN, username, and password used for firmware image. Applies FTP download process for firmware update.

CMC version 3.00 accepts IPv4, IPv6 or fully qualified domain names (FQDN) for both FTP and TFTP servers.

 **NOTE:** You can specify the **cmc-active** and **cmc-standby** modules at the same time along with one or more `server-n` modules. This option enables the devices to be updated together.

 **NOTE:** Verify that the update applied to servers for a particular generation has been validated for all impacted server models.

Output Displays a message indicating the operation that is being performed.

Example

- Upload the firmware image from the TFTP server and start the firmware update.
`racadm fwupdate -g -u -a 192.168.0 -d firmimg.cmc -m cmc-active`

TFTP firmware update has been initiated. This update process may take several minutes to complete.

- Update firmware on servers of iDRAC generation.
`racadm fwupdate -g -u -a 192.168.0 -d firmimg.d7`
- Download firmware update file from a specified location on the TFTP server at a specific IP address.
`racadm fwupdate -g -u -a 192.168.0 -d <path>`

After the image file is downloaded from the TFTP server, the update process begins. When completed, iDRAC is reset.

- Read the status of the firmware update.
`racadm fwupdate -s`
- To block the firmware downgrade on 3000W AC power supply configuration.
`racadm fwupdate -s`
 Ready for firmware update

```
racadm fwupdate -g -u -a 192.168.0 -d firmimg-4.40-A00.cmc -m
cmc-active
Firmware update has been initiated. This update process may
take several minutes to complete.
racadm fwupdate -s
Cannot update local CMC firmware: The uploaded firmware image
does not support the installed power supplies.
```

- Upload the firmware image from the FTP server and start the firmware update.
racadm fwupdate -f 192.168.0.100 fred xxx -d firmimg.cmc -m cmc-active
- Upload a firmware image from the client and start firmware update.
racadm fwupdate -p -u -d firmimg.cmc
- Start IOM infrastructure firmware update.
racadm fwupdate -u -m iominf-1
- Update firmware on both the CMCs.
racadm fwupdate -g -u -a 192.168.0 -d firmimg.cmc -m cmc-active -m cmc-standby
- Update firmware on multiple servers.
racadm fwupdate -g -u -a 192.168.0 -d firmimg.imc -m server-1 -m server-2 -m server-3
- Update firmware on servers of iDRAC generation.
racadm fwupdate -g -u -a 192.168.0 -d firmimg.imc -m server-iDRAC
- Update firmware on multiple IOM infrastructure devices.
racadm fwupdate -u -m iominf-4 -m iominf-5 -m iominf-6
- Query the status of all firmware targets to be updated.
racadm fwupdate -s -m all
- Query the current status of the firmware update process for a particular module.
racadm fwupdate -s -m <module>
- Download firmware update file from a specified location on the TFTP server at a specific IP address.
racadm fwupdate -g -u -a 192.168.0 -d <path>

After the image file is downloaded from the TFTP server, the update process begins. When completed, CMC is reset.

- Read the status of the firmware update.
racadm fwupdate -s
- Cancel a firmware update in progress.
racadm fwupdate -c

 **NOTE:** Firmware update from local RACADM (using -p -u -d options) is not supported on linux OS.

 **NOTE:** These commands specifically apply to an active-CMC update.

Signed CMC Firmware Image:

- To get the firmware update status:
racadm fwupdate -s -m cmc-active

Invalid firmware: The uploaded firmware image does not contain a verification signature.

The following table describes the firmware update method supported for each interface.

FW Update Method	iDRAC on Blade Servers	iDRAC on Rack and Tower Servers
Local RACADM	Yes	Yes
Local RACADM-TFTP	Yes	Yes
Local RACADM-FTP	Yes	Yes
Remote RACADM	Yes	Yes
Remote RACADM-TFTP	Yes	Yes
Remote RACADM-FTP	Yes	Yes
Firmware RACADM-TFTP	Yes	Yes
Firmware RACADM-FTP	Yes	Yes

FW Update Method	CMC
Local RACADM	No
Local RACADM-TFTP	No
Local RACADM-FTP	No
Remote RACADM	Yes
Remote RACADM-TFTP	Yes
Remote RACADM-FTP	Yes
Firmware RACADM-TFTP	Yes
Firmware RACADM-FTP	Yes

get

Description Displays the object and its values.
 If the values are pending, then commit and reboot job must be created using the `jobqueue` command. For more information, see [jobqueue](#).
 For the configuration xml operations, check the Job ID by running the `jobqueue view` command. For more information, see [jobqueue](#).

To run this subcommand for configuration xml file type, the Lifecycle Controller version 1.1 or later is required.

Synopsis

```
racadm get -f <filename>

racadm get <FQDD Alias>.<index>.<group>.<index>.<object>

racadm get <FQDD Alias>.<group>

racadm get <FQDD Alias>.<group>.<object>

racadm get <FQDD Alias>.<group>.[<index>].<object>

racadm get -f <filename> -t xml -u <username> -p <password> -l
<CIFS share>

racadm get -f <filename> -t xml -u <username> -p <password> -l
<CIFS share> --clone

racadm get -f <filename> -t xml -u <username> -p <password> -l
<CIFS share> --replace

racadm get -f <filename> -t xml -u <username> -p <password> -l
<CIFS share> -c <FQDD>

racadm get -f <filename> -t xml -l <NFS share> -c <FQDD>, <FQDD>,
<FQDD>, <FQDD>

racadm get -f <filename> -t xml -l <NFS or CIFS share> -u
<username> -p <password> -t xml --includeph
```

Input

- <FQDD Alias>
 - Examples for FQDDs
 - * System.Power
 - * System.Power.Supply
 - * System.Location
 - * LifecycleController.LCAttributes
 - * System.LCD
 - * iDRAC.Serial

For the list of supported groups and objects under the get command, see [Database Objects With Get and Set Commands](#)

- <group> — Specifies the group containing the object that must be read.
- <object> — Specifies the object name of the value that must be read.
- <index> — Specifies where FQDD Aliases or Groups must be indexed.
- -f <filename> — This option enables you to save the RAC configuration to a file. and also enables the subcommand to write the device configuration to a file. This option is not supported in Firmware RACADM interface.
- -u — Specifies user name of the remote share from where the file must be exported.
- -p — Specifies password for the remote share from where the file must be exported.
- -l — Specifies network share location from where the file must be exported.
- -t — Specifies the file type that must be exported. Valid values are **xml** and **ini**. These options are not case-sensitive. **ini** exports the legacy configuration file. The **ini** file cannot be exported to a remote share. If -t is not specified, then the **ini** file is exported.



NOTE: To import or export **.xml config** files, Lifecycle Controller version 1.1 or later is required.

- **--clone** — Gets the configuration **.xml** files without system-related details such as Service Tag. The **.xml** file received does not have any virtual disk creation option.
- **--replace** — Gets the configuration **.xml** files with the system-related details such as Service Tag.
- **-c** — Specifies the FQDD or list of FQDDs separated by ',' of the components for which the configurations should be exported. If this option is not specified, the configuration related to all the components are exported.
- **--includeph** — Specifies that the password hash should be included in the exported configuration **.xml** file.
- **-f <filename>** — This option enables you to save the RAC configuration to a file. and also enables the subcommand to write the device configuration to a file. This option is not supported in Firmware RACADM interface.

For Indexed groups, if a group is not configured, then it is not saved in the configuration file.



NOTE: For **--clone** and **--replace** options, only **.xml** file template is received. These options **--clone** and **--replace** cannot be used in the same command.

Examples

- Get system LCD information.
`racadm get system.lcd`
`LCDUserString=test`
- Display an entire group, in this case the topology configuration.
`racadm get system.location`
- Display a single object from a particular group.
`racadm get system.location.rack.name`
- Export the xml configuration to a CIFS share.
`racadm get -f file -t xml -u myuser -p xxx -l //192.168.0/share`
- Export the xml configuration to an NFS share.
`racadm get -f file -t xml -l 192.168.0:/myshare`
- `racadm get -f xyz_temp_clone -t xml -u Administrator -p xxx -l //192.168.0/xyz --clone`
- `racadm get -f xyz_temp_replace -t xml -u Administrator -p xxx -l //192.168.0/xyz --replace`
- Export the xml configuration of the iDRAC component to a CIFS share.
`racadm get -f file -t xml -u myuser -p xxx -l //192.168.0/share -c iDRAC.Embedded.1`
- Include password hash in the configuration **.xml** file.
`racadm get -f<filename> -t xml -l<NFS or CIFS share> -u<username> -p<password> -t xml --includeph`
- Display an indexed group.
`racadm get system.power.supply.1`

getconfig

Description Retrieves iDRAC configuration parameters individually or all iDRAC configuration groups may be retrieved and saved to a file.



NOTE: This subcommand is deprecated. For viewing the configuration objects and its values, use [get](#) subcommand.

Displays CMC configuration properties.

Synopsis

```
racadm getconfig -f <filename>
racadm getconfig -g <groupName> [-i <index>]
racadm getconfig -u <username>
racadm getconfig -h
racadm getconfig -g <groupName> -o <objectName> [-i index]

• racadm getconfig -g <group> [-m <module>]
• racadm getconfig -g <group> -o <object> [-m <module>]
• racadm getconfig -g <group> -i <index>
• racadm getconfig -g <group> -o <object> -i <index>
• racadm getconfig -u <username>
• racadm getconfig -h
```

Input

- **-f** — The **-f <filename>** option directs **getconfig** to write the entire iDRAC configurations to a configuration file. This file can be used for batch configuration operations using the **config** subcommand.
 -  **NOTE:** This option is supported only on remote interfaces.
- **-f** — The **-f <filename>** option directs **getconfig** to write the entire CMC configurations to a configuration file. This file can be used for batch configuration operations using the **config** subcommand.
 -  **NOTE:** This option is supported only on remote interfaces.
- **-g** — The **-g <groupName>** or group option, is used to display the configuration for a single group. The **<groupName>** is the name for the group used in the **racadm.cfg** files. If the group is an indexed group, then use the **-i** option.
- **-h** — The **-h** or help option, displays a list of all available configuration groups in alphabetical order. This option is useful when you do not remember exact group names.
- **-i** — The **-i <index>** or index option, is valid only for indexed groups and is used to specify a unique group. The **<index>** is a decimal integer from 1 through n, where n can vary from 1 to maximum number of indexes a particular group supports. If **-i <index>** is not specified, then a value of 1 is assumed for groups, which are tables that have multiple entries. The **-i** option enters the index value and not a *named* value.
- **-o** — The **-o <objectname>** or object option specifies the object name that is used in the query. This option is optional and can be used with the **-g** option.
- **-u** — The **-u <username>** or user name option, is used to display the configuration for the specified user. The **<username>** option is the login name for the user.
- **-v** — The **-v** option displays more information with the display of the properties and is used with the **-g** option.
- **-m** — The module must be one of the following values:
 - **server-<n>** — where n = 1–16
 - **server-<nx>** — where n = 1–8; x= a–d (lower case).



NOTE: This option is available only for **cfgRemoteHosts**, **cfgRacTuning**, **cfgSerial**, **cfgSessionManagement**, **cfgLanNetworking**, or **cfgIPv6LanNetworking** commands.

Output

The subcommand displays error message when:

- Invalid syntax, group name, object name, index, or any other invalid database members is entered.
- The RACADM CLI transport is unsuccessful.

If errors are not encountered, this subcommand displays the content of the specified configuration.

Example

- Displays the configuration properties (objects) that are contained in the group **cfgLanNetworking**.
`racadm getconfig -g cfgLanNetworking`
- Saves all group configuration objects from CMC to **myrac.cfg**.
`racadm getconfig -f myrac.cfg`
- Displays a list of the available configuration groups on CMC in an alphabetical order.
`racadm getconfig -h`
- Displays the configuration properties for the user named **root**.
`racadm getconfig -u root`
- Displays the user group instance at index 2 with verbose information for the property values.
`racadm getconfig -g cfgUserAdmin -i 2 -v`
- Displays an entire group of serial configuration.
`racadm getconfig -g cfgSerial`
- Displays a single object from a particular group.
`racadm getconfig -g cfgSerial -o cfgSerialBaudRate`
- Displays an indexed group.
`racadm getconfig -g cfgUserAdmin -o cfgUserAdminUserName -i 2`
- Displays information about the session information for a particular server.
`racadm getconfig -g cfgSessionManagement -m server-1`
- Displays information about the WEB/SSH/Telnet information for a particular server.
`racadm getconfig -g cfgRacTuning -m server-1`
- Displays information about the remote Syslog for a particular server.
`racadm getconfig -g cfgRemoteHosts -m server-1`
- Displays the current Enhanced Cooling Mode property configuration.
`racadm getconfig -g cfgThermal`

gethostnetworkinterfaces

Description

Displays host network interface details.



NOTE: To run this subcommand, you must have iDRAC service module installed on the server operating system.

Synopsis

`racadm gethostnetworkinterfaces`

`racadm gethostnetworkinterfaces <NIC FQDD>`

Examples

- To display the details of all the network interfaces on the server.

```
racadm gethostnetworkinterfaces
```

```
Local Area Connection 12
Description           : iDRAC Virtual NIC USB Device #8
Status                : Up
Interface Type        : Ethernet
DHCP                  : Enabled
DHCPServerV4          : 169.254.0.1
MAC Address           : 00-25-64-F9-7A-E7
IPv4 Address          : 169.254.0.2
Subnet Mask           : 255.255.255.0
IPv6 Address          : fe80::1cce:a0a7:f30e:54fc
Prefix Length         : 64
IPv6 DNSServer Address 0: fec0:0:0:ffff::1
IPv6 DNSServer Address 1: fec0:0:0:ffff::2
IPv6 DNSServer Address 2: fec0:0:0:ffff::3
```

- To display the details of a particular NIC on the server.

```
racadm gethostnetworkinterfaces NIC.Integrated.1-1-1
```

```
Local Area Connection
Description           : Broadcom NetXtreme Gigabit Ethernet
Status                : Up
Interface Type        : Ethernet
DHCP                  : Enabled
DHCPServerV4          : 10.94.224.25
MAC Address           : 14-FE-B5-FF-B1-9C
FQDD                  : NIC.Integrated.1-1-1
IPv4 Address          : 10.94.225.189
Subnet Mask           : 255.255.255.128
IPv6 Address          : fe80::7c5f:a114:84d4:17f6
Prefix Length         : 64
IPv4 Gateway Address  : 10.94.225.129
IPv4 DNSServer Address 0: 10.116.2.250
IPv4 DNSServer Address 1: 10.116.2.251
```

getled

Description Displays the LED settings on a module: blinking, not blinking, or unknown (for empty slots).

To run this subcommand, you must have the Login User privilege.

Synopsis

```
racadm getled
racadm getled -m <module>
```

Input

-m <module> can be one of the following:

- server-<n> where n=1-16
- server-<nx> where n=1-8; x=a, b, c, d (lower case)
- switch-<n> where n=1-6
- chassis
- cmc-active

Output

- LED is blinking
- LED is not-blinking

Example

- `racadm getled -m server-10`
`<module> <LED state>`

`server-10 Blinking`
- `racadm getled -m chassis`
`<module> <LED state>`

`server-10 Not blinking`
- `racadm getled -m server-1`
`<module> <LED state>`

`server-1 ON`
- `racadm getled -m server-9`
`<module> <LED state>`

`server-9 Extension(1)`

```
racadm getled
LED State : Blinking
racadm getled
LED State : Not-Blinking
```

getniccfg

Description Displays the current and static NIC settings for iDRAC.

Displays the current NIC settings.

Synopsis `racadm getniccfg [-m <module>]`

Input `-m <module>` must be one of the following values:

- `chassis` : Default state if `-m` is not specified.
- `server-<n>` : where `n=1-16`
- `server-<nx>` : where `n=1-8`; `x = a, b, c, d` (lower case)
- `switch-<n>` : where `n=1-6`

Output The **getniccfg** subcommand displays an appropriate error message if the operation is not successful. Otherwise, the output is displayed in the following format:

```
NIC Enabled           =1
IPv4 Enabled          =1
DHCP Enabled          =1
Static IP Address      =192.168.0.120
Static Subnet Mask     =255.255.255.0
Static Gateway         =192.168.0.1
Current IP Address     =192.168.0.32
Current Subnet Mask    =255.255.255.0
Current Gateway        =192.168.0.1
```

IPv6 Enabled	=0
Autoconfiguration Enabled	=1
Static IPv6 Address	=::
Static IPv6 Gateway	=::
Link Local Address	=::
Current IPv6 Address 1	=::
Current IPv6 Gateway	=::
Speed	=Autonegotiate
Duplex	=Autonegotiate
Redundant mode	=0
VLAN Enable	=0
VLAN ID	=1
VLAN priority	=0

 **NOTE:** IPv6 information is displayed only if IPv6 is enabled in iDRAC.

 **NOTE:** LOM Status is displayed only for iDRAC on Rack and Tower servers and is not displayed for iDRAC Enterprise on Blade servers.

Example

- Display CMC network settings
`racadm getniccfg -m chassis`
- Display iDRAC network settings in server slot 1
`racadm getniccfg -m server-1`

getraclog

Description The **getraclog** command displays RAC log entries.

The **getraclog** command displays CMC log entries.

Synopsis

- `racadm getraclog [-i]`
 - `racadm getraclog [-s <start>] [-c <count>] [--more]`
- `racadm getraclog [-c <count>] [-s <start-record>] [--more]`

 **NOTE:** If options are not provided, the entire log is displayed.

Input

- `-c` — Specifies the number of records to display.
 **NOTE:** On Local RACADM, the number of logs are restricted to 100 by default.
- `--more` — Displays one screen at a time and prompts you to continue (similar to the UNIX **more** command).
- `-s` — Specifies the starting record used for the display.
- `-c` — Specifies the number of records to display.



NOTE: On Remote RACADM, the number of logs are restricted to 25 by default.

- **-i** — Displays the number of entries in the CMC log.
- **--more** — Displays one screen at a time and prompts you to continue (similar to the UNIX **more** command).
- **-s** — Specifies the starting record used for the display.



NOTE: When Enhanced Chassis Logging and Events feature is enabled, then **-i** and **--more** options are not displayed.

Output

```
SeqNumber = 286
Message ID = USR0005
Category = Audit
AgentID = RACLOG
Severity = Information
Timestamp = 2012-10-05 06:25:27
Message = Login failed from processdisco06a: 192.168.0
Message Arg 1 = processdisco06a
Message Arg 2 = 10.92.68.245
FQDD = iDRAC.Embedded.1
```

Example

- Display the starting record and the number of records.

```
racadm getraclog -s 10 -c 2
```
- Display a few records and prompt to display another set of records.

```
$ racadm getraclog --more
Dec 4 22:23:09 CMC-JP4BF2S Login success from 192.168.0
(username=root, type=SSH, sid=16393)
Dec 4 22:24:54 CMC-JP4BF2S Login success from 192.168.0
(username=test, type=SSH, sid=35885)
Dec 4 22:26:20 CMC-JP4BF2S Login success from 192.168.0
(username=root, type=GUI, sid=27476)
Dec 4 22:28:06 CMC-JP4BF2S Mod password of user puser succeeds
Dec 4 22:28:06 CMC-JP4BF2S Mod privileges of user puser succeeds
Dec 4 22:28:21 CMC-JP4BF2S Login success from 192.168.0
(username=puser, type=SSH, sid=39229)
Dec 4 22:29:12 CMC-JP4BF2S Mod password of user nuser succeeds
Dec 4 22:29:12 CMC-JP4BF2S Mod privileges of user nuser succeeds
Dec 4 22:29:51 CMC-JP4BF2S SSH login failed (username=nuser,
ip=192.168.0, reason=Local user fails to login )
Dec 4 22:30:23 CMC-JP4BF2S last message repeated 3 times
Dec 4 22:30:23 CMC-JP4BF2S Mod privileges of user nuser succeeds
Dec 4 22:30:38 CMC-JP4BF2S SSH login failed (username=nuser,
ip=192.168.0, reason=Local user fails to login )
[more]
```
- Entry in the RAC log when Extended Power Performance control is enabled or disabled.

```
racadm getraclog
Jul 31 14:16:11 CMC-4C2WXF1 Log Cleared
Jul 31 14:15:49 CMC-4C2WXF1 Extended Power Performance is
Enabled
Jul 31 14:15:49 CMC-4C2WXF1 Extended Power Performance is
Disabled
```
- When Enhanced Logging mode is enabled, the output of getraclog is displayed similar to chassislog output.

```
Using racadm config -g cfgRacTuning -o cfgRacTuneEnhancedLog 1
command, Enhanced Logging feature is enabled.
```

```
SeqNumber      = 38
Message ID     = USR8501
```

```

Category          = Audit
AgentID           = CMC
Severity          = Information
Timestamp         = 2014-10-18 15:48:10
Message Arg      1 = 14503
Message Arg      2 = 48186
Message          = Successfully closed Session process:
pid=14503 sid=4818

```

Example Display the recent 2 records for RAC log

```

racadm getraclog -c
2
SeqNumber = 4102
Message ID = LIC201
Category = Audit
AgentID = DE
Severity = Warning
Timestamp = 2014-06-12 01:38:19
Message = License yPMRJGuEf7z5HG8LO7gh assigned to device iDRAC
expires in 4 days.
Message Arg 1 = yPMRJGuEf7z5HG8LO7ghMessage Arg 2 = iDRACMessage
Arg 3 = 4
-----
-----
SeqNumber = 4101
Message ID = USR0032
Category = Audit
AgentID = RACLOG
Severity = Information
Timestamp = 2014-06-11 19:54:00
Message = The session for root from 192.168.0 using RACADM is
logged off.
Message Arg 1 = root
Message Arg 2 = 10.94.98.92
Message Arg 3 = RACADM
FQDD = iDRAC.Embedded.1
-----
-----

```

getractive

Description Displays the current CMC time.

Synopsis • racadm getractive [-d]
 • racadm getractive [-d] [-z]
 • racadm getractive [-n]

Input • -d — Displays the time in the format, YYYYMMDDhhmmss.
 • -z — Displays timezone.
 • -n — Displays NTP peer information.

 **NOTE:** If the options are not provided, then the **getractive** subcommand displays the time in a common readable format.

Output The current CMC time is displayed.

- Example**
- `racadm gettractime`
Mon May 13 17:17:12 2013
 - `racadm gettractime -d`
20141126114423

getsel

Description Displays all system event log (SEL) entries in CMC.

- Synopsis**
- `racadm getsel [-i] [-m <module>]`
 - `racadm getsel [-s <start>] [-c <count>] [-m <module>] [--more]`



NOTE: If no arguments are specified, the entire log is displayed.

- Input**
- `-i` — Displays the number of entries in the SEL.
 - `-s` — Displays the starting record number.
 - `-c` — Specifies the number of records to display.
 - `-m <module>` — Must be one of the following values:
 - `server-<n>` : where n = 1–16
 - `server-<nx>` : where n = 1–8; x = a, b, c, d (lower case)
 - `--more` — Displays one screen at a time and prompts the user to continue (similar to the UNIX **more** command.)

- Example**
- Display entire log.
`racadm getsel`
 - Display number of records in log.
`racadm getsel -i`

getsensorinfo

Description Displays the status for system sensors.
To run this subcommand, you must have the login user privilege.



NOTE: For Dell PowerEdge FX2 chassis with FM120x4 server, the power related information is not displayed.

- Synopsis**
- `racadm getsensorinfo`
 - `racadm getsensorinfo -c`

Input `-c` — Compact output format.

Example

`racadm getsensorinfo`

<senType>	<Num>	<sensorName>	<status>	<reading>	<units>	<LC>	<UC>
FanSpeed	1	Fan-1	OK	4768	rpm	2344	14500

FanSpeed	2	Fan-2	OK	4873	rpm	2344	14500
FanSpeed	3	Fan-3	OK	4832	rpm	2344	14500
FanSpeed	4	Fan-4	OK	4704	rpm	2344	14500
FanSpeed	5	Fan-5	OK	4833	rpm	2344	14500
FanSpeed	6	Fan-6	OK	4829	rpm	2344	14500
FanSpeed	7	Fan-7	OK	4719	rpm	2344	14500
FanSpeed	8	Fan-8	NOT OK	1	rpm	2344	14500
FanSpeed	9	Fan-9	OK	4815	rpm	2344	14500
Temp	1	Ambient_Temp	OK	22	celcius	N/A	40

<senType>	<Num>	<sensorName>	<status>	<health>
PWR	1	PS-1	Online	OK
PWR	2	PS-2	Online	OK
PWR	3	PS-3	Online	OK
PWR	4	PS-4	Slot Empty	N/A
PWR	5	PS-5	Failed	OK
PWR	6	PS-6	Slot Empty	N/A

<senType>	<Num>	<sensorName>	<status>
Cable	1	IO-Cable	OK
Cable	2	FPC-Cable	OK

racadm getsensorinfo
Sensor Type : POWER

<Sensor Name>	<Status>	<Type>
PS1 Status	Present	AC

Sensor Type : TEMPERATURE

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>	<Inc>[R/W]	<Unc>[R/W]
System Board Inlet Temp	Ok	20 C	-7 C	47 C	3 C [Y]	42C [Y]
System Board Exhaust Temp	Ok	19 C	0 C	75 C	0 C [N]	70 C [N]
CPU1 Temp	Ok	59 C	3 C	97 C	8 C [N]	92 C [N]

Sensor Type : FAN

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>	<PWM %>
System Board Fan1 RPM	Ok	5880 RPM	600 RPM	NA	21%
System Board Fan2 RPM	Ok	6000 RPM	600 RPM	NA	0%
System Board Fan3 RPM	Ok	5880 RPM	600 RPM	NA	0%
System Board Fan4 RPM	Ok	5880 RPM	600 RPM	NA	0%
System Board Fan5 RPM	Ok	5640 RPM	600 RPM	NA	144%
System Board Fan6 RPM	Ok	5880 RPM	600 RPM	NA	152%

Sensor Type : VOLTAGE

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>
CPU1 VCORE PG	Ok	Good	NA	NA
System Board 3.3V PG	Ok	Good	NA	NA
System Board 5V AUX PG	Ok	Good	NA	NA
CPU1 M23 VPP PG	Ok	Good	NA	NA
System Board 1.05V PG	Ok	Good	NA	NA
CPU1 M23 VDDQ PG	Ok	Good	NA	NA
CPU1 M23 VTT PG	Ok	Good	NA	NA
System Board 5V SWITCH PG	Ok	Good	NA	NA
System Board VCCIO PG	Ok	Good	NA	NA
System Board 2.5V AUX PG	Ok	Good	NA	NA
CPU1 M01 VDDQ PG	Ok	Good	NA	NA
System Board NDC PG	Ok	Good	NA	NA

CPU1 M01 VPP PG	Ok	Good	NA	NA
System Board 1.5V PG	Ok	Good	NA	NA
System Board PS2 PG Fail	Ok	Good	NA	NA
System Board PS1 PG Fail	Ok	Good	NA	NA
System Board 1.5V AUX PG	Ok	Good	NA	NA
CPU1 M01 VTT PG	Ok	Good	NA	NA
PS1 Voltage 1	Ok	240 V	NA	NA
System Board DIMM PG	Ok	Good	NA	NA

Sensor Type : CURRENT

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>	<Inc> [R/W]	<unc> [R/W]
PS1 Current 1	Ok	0.4 Amps	NA	NA	0 Amps [N]	0 Amps [N]
System Board Pwr Consumption	Ok	56 Watts	NA	1386 Watts	0 Watts [N]	1260 Watts [N]

Sensor Type : PROCESSOR

<Sensor Name>	<Status>	<State>	<lc>	<uc>
CPU1 Status	Ok	Presence Detected	NA	NA
CPU2 Status	N/A	Absent	NA	NA

Sensor Type : MEMORY

<Sensor Name>	<Status>	<State>	<lc>	<uc>
---------------	----------	---------	------	------

Sensor Type : BATTERY

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>
System Board CMOS Battery	Ok	Present	NA	NA

PERC1 ROMB Battery	Ok	Unknown	NA	NA
PERC2 ROMB Battery	Ok	Unknown	NA	NA

Sensor Type : PERFOMANCE

<Sensor Name>	<Status>	<Status>	<lc>	<uc>
System Board Power Optimized	Ok	Not Degraded	NA	NA

Sensor Type : INTRUSION

<Sensor Name>	<Intrusion>	<Status>
System Board Intrusion	Closed	Power ON

Sensor Type : REDUNDANCY

<Sensor Name>	<Status>	<Type>
System Board Fan Redundancy	Full Redundant	Fan
System Board PS Redundancy	Disabled	PSU

Sensor Type : SYSTEM PERFORMANCE

<Sensor Name>	<Status>	<Reading>	<lc>	<uc>	<Inc> [R/W]	<unc> [R/W]
System Board CPU Usage	Non-Critical	0%	0%	100%	0% [N]	99% [Y]
System Board IO Usage	Non-Critical	0%	0%	100%	0% [N]	99% [Y]
System Board MEM Usage	Non-Critical	0%	0%	100%	0% [N]	99% [Y]
System Board SYS Usage	Non-Critical	0%	0%	100%	0% [N]	99% [Y]

getssninfo

Description Displays a list of users that are connected to CMC. The following information is displayed:

- Session ID
- Username
- IP address (if applicable)
- Session type (for example, serial or Telnet)
- Login date and time in MM/DD/YYYY HH:MM:SS format

 **NOTE:** Based on the Session ID (SSNID) or the user name (User), the CMC administrator can close the respective sessions or all the sessions using the `closesessn` subcommand. For more information, see [closesessn](#).

Synopsis

```
racadm getssninfo [-u <username>] [-A]
racadm getssninfo [-u <username> | -u *] [-A]
```

Input

- `-u` — displays only sessions associated with a specific user.
- `-A` — does not display headers or labels.

Example

```
racadm getssninfo
```

SSNID	Type	User	IP Address	Login Date/Time
6	GUI	root	192.168.0	04/07/2010 12:00:34

Display the details of sessions without header

```
racadm getssninfo -A
"43584" "SSH" "root" "192.168.0" "11/26/2014 18:37:03"
```

- Display all currently active sessions for a specific user

```
racadm getssninfo -u root
```

getsvctag

Description Displays the service tag of the host system.

Synopsis

```
racadm getsvctag [-m <module>]
```

Input

`-m <module>` — Must be one of the following values:

- `chassis`
- `server-<n>` — where `n` = 1–16
- `server-<nx>` — where `n` = 1–8; `x` = a, b, c, d (lower case)

- switch-<n> — where n = 1–6

Output

Any system tag as applicable.

Example

- Display Service tag of Server in Slot 1
racadm getsvctag -m server-1
- Display Service tag of all the components in the chassis
racadm getsvctag

getsysinfo

Description

Displays information related to iDRAC, managed system, and watchdog configuration.

Displays information related to CMC, managed system, and watchdog configuration.



NOTE: The host name and OS Name fields in the **getsysinfo** output display accurate information only if the **Dell OpenManage Server Administrator** is installed on the managed system. Else, these fields may be blank or inaccurate. An exception to this are VMware operating system names, which are displayed even if the **Server Administrator** is not installed on the managed system.

Synopsis

```
racadm getsysinfo [-d] [-A] [-c] [-4] [-6]
```

Input

- -4 — Displays IPv4 settings
- -6 — Displays IPv6 settings
- -c — Displays common settings
- -d — Displays iDRAC information
- -d — Displays CMC information
- -A — Eliminates the printing of headers or labels

Output

```
racadm getsysinfo
CMC Information:
CMC Date/Time           = Wed Sep 17 2014 23:13
Primary CMC Location    = CMC-1
Primary CMC Version     = 5.00
Standby CMC Version     = 5.00
Last Firmware Updated   = Tue Sep 16 2014 22:11
Hardware Version        = A09

CMC Network Information:
NIC Enabled             = 1
MAC Address             = 78:2B:CB:46:5C:8A
Register DNS CMC Name   = 1
DNS CMC Name            = cmc-effort
Current DNS Domain      = cmc.com
VLAN ID                 = 1
VLAN Priority            = 0
VLAN Enabled            = 0

CMC IPv4 Information:
IPv4 Enabled            = 1
Current IP Address      = 192.168.0
Current IP Gateway      = 192.168.0
Current IP Netmask      = 255.255.255.0
```

```

DHCP Enabled          = 1
Current DNS Server 1  = 0.0.0.0
Current DNS Server 2  = 0.0.0.0
DNS Servers from DHCP = 0

```

```

CMC IPv6 Information:
IPv6 Enabled          = 0
Autoconfiguration Enabled = 0
Link Local Address    = ::
Current IPv6 Address 1 = ::
Current IPv6 Gateway   = ::
Current IPv6 DNS Server 1 = ::
Current IPv6 DNS Server 2 = ::
DNS Servers from DHCPv6 = 0

```

```

Chassis Information:
System Model          = PowerEdge M1000e
System AssetTag       = 
12345678901234567890123456781234456771234567890asvcdefrtghyhytg
Service Tag           = JGB6B2S
Chassis Name          = CMC-JGB6B2S
Chassis Location      = 3rdflor
Chassis Midplane Version= 1.1
Power Status          = ON

```

Example

- Display Chassis information
`racadm getsysinfo -c`
- Display CMC information
`racadm getsysinfo -d`
- Display IPv4 details without header
`racadm getsysinfo -A`

```

"CMC IPv4 Information:"
"1"
"192.168.0"
"192.168.0"
"255.255.255.0"
"1"
"192.168.0"
"0.0.0.0"
"1"

```

gettracelog

Description Lists all the trace login entries of iDRAC.

Displays the CMC diagnostic trace log.

Synopsis

- `racadm gettracelog [-i]`
- `racadm gettracelog [-s <start>] [-c <count>] [--more]`

Input

- `-i` — Displays the number of entries in CMC trace log.
- `--more` — Displays one screen at a time and prompts the user to continue (similar to the UNIX `more` command).

- -c — Specifies the number of records to display.
- -s — Specifies the starting record to display.

Output The default output display shows the record number, timestamp, source and description. The timestamp begins at midnight, January 1 and increases until the system starts. After the system starts, the system's timestamp is used.

Example

- Display entire log
racadm gettracelog
- Display number of records in log
racadm gettracelog -i
Total Records: 228

getversion

Description Displays the current software version, model and generation information, and whether the target device can be updated.

Synopsis

- racadm getversion [-b | -c]
- racadm getversion

Input

- -c — Displays the server's current CPLD version.
- -b — Displays the server's current BIOS version (default is iDRAC version).
- -f <filter> — Filters the components and must be one of the following values:
 - bios: BIOS
 - idrac: iDRAC
 - lc: Lifecycle Controller

Example

- Displays the version for server 4.
racadm getversion -m server-4
- Displays the Lifecycle Controller component versions for servers 1 and 3.
racadm getversion -l -m server-1 -m server-3

```
racadm getversion -m server-1
```

<server>	<iDRAC version>	<Blade Type>	<Gen>	<Updatable>
server-1	1.40.40 (Build 08)	PowerEdge M520	iDRAC	Y
server-2	3.50 (Build 2)	PowerEdgeM610x	iDRAC6	Y
server-4	3.50 (Build 4)	PowerEdgeM710H D	iDRAC6	

```
racadm getversion -c
```

<Server>	<CPLD Version>	<Blade Type>
server-1	1.0.5	PowerEdgeM520
server-2	1.0.3	PowerEdgeM610x
server-4	1.0.0	PowerEdgeM710HD
server-5	1.0.3	PowerEdgeM710
server-7	1.0.6	PowerEdgeM620
server-9	1.0.5	PowerEdgeM520

```
racadm getversion
Bios Version = 2.0.18
iDRAC Version = 2.00.00.00
Lifecycle Controller Version = 2.00.00.00
```

```
racadm getversion -b
```

<Server>	<BIOS Version>	<Blade Type>
server-1	1.6.0	PowerEdgeM520
server-2	6.3.0	PowerEdgeM610x
server-4	7.0.0	PowerEdgeM710HD
server-5	6.3.0	PowerEdgeM710
server-7	1.7.1	PowerEdgeM620
server-9	1.7.1	PowerEdgeM520

<Switch>	<Model Name>	<HW Version>	<FW Version>
switch-1	MXL 10/40GbE	X01	9-2 (0-296)
switch-2	M8024-k 10GbE SW	A00	5.0.1.3
switch-3	Dell PowerConnect M8024	X00	
switch-4	Dell PowerConnect M8024	X00	
switch-5	Dell PowerConnect M6348	X02	
switch-6	Dell PowerConnect M6220	A01	

```
racadm getversion -l -m server-1
```

<Server>	<Component>	<Version>	<Install Date>
server-1	BIOS	1.6.0	2013-01-09
	iDRAC1.40.40	1.40.40	2013-01-31
	USC	1.1.5.154	2013-04-16
	Diagnostics	4225A2	2012-12-21
	OS Drivers	7.2.0.7	2012-12-21
	BIOS	1.5.2	Rollback
	BP12G+ 0:1	0.16	Reinstall
	iDRAC		Rollback
	System CPLD	1.0.5	1999-12-31
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C4	7.6.6	Rollback
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C4	7.6.12	Reinstall
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C4	7.6.12	2013-04-02
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C6	7.6.6	Rollback
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C6	7.6.12	Reinstall
	NIC-Broadcom Gigabit Ethernet BCM5720 - BC:30:5B: 97:06:C6	7.6.12	2013-04-02
	NIC-PERC S110 Controller	3.0.0-0139	2012-10-11
	RAID-PERC H310 Mini	20.10.1-0084	Reinstall
	RAID-PERC H310 Mini	20.10.1-0084	Reinstall

RAID-PERC H310 Mini	20.10.1-0084	2012-02-09
BP12G+ 0:1	0.16	1999-12-31

```
racadm getversion -l -m server-1 -f bios
```

<Server>	<Component>	<Version>	<Install Date>
server-1	BIOS	1.6.0	2013-01-09

hwinventory

Description Allows you to display or export current internal hardware inventory or shipped hardware inventory by device.



NOTE: If more than one session is initiated for `hwinventory`, only one session displays the output. The other sessions display the following error message:

Unable to retrieve the hardware inventory. Another hardware inventory operation may already be in progress and must complete before retrying the operation. If no other hardware inventory process is in progress, make sure to enable Collect System Inventory On Restart (CSIOR) feature, reboot the system, and then retry the operation. If CSIOR feature is enabled and no other hardware inventory operation is in progress, use the `racadm racreset` command to reboot iDRAC, and then retry the operation.

Synopsis

- `racadm hwinventory`
- `racadm hwinventory NIC|FC`
- `racadm hwinventory <FQDD>`
- `racadm hwinventory export -f <filename> -u <username> -p <password> -l <CIFS or NFS share>`

Input

- `<FQDD>` — Specifies the FQDD of the target device.
 - `FQDD` — `NIC.Slot.1-2`
- `-f` — Exported Hardware Inventory filename.
- `-u` — Username of the remote share to where the file must be exported. Specify user name in a domain as **domain/username**
- `-p` — Password for the remote share to where the file must be exported.
- `-l` — Network share location to where the Hardware Inventory must be exported.

Examples

To get the list of NIC FQDDs

```
racadm hwinventory nic
NIC.Slot.2-1-1:Emulex OCe14102-U1-D - 00:90:FA:4C:FE:C2
PartitionCapable : 1
NIC.Slot.2-1-2:Emulex OCe14102-U1-D - 00:90:FA:4C:FE:C3
```

```

PartitionCapable : 2
NIC.Slot.2-1-3:Emulex OCe14102-U1-D - 00:90:FA:4C:FE:C4
PartitionCapable : 3
NIC.Slot.2-1-4:Emulex OCe14102-U1-D - 00:90:FA:4C:FE:C5
PartitionCapable : 4

```

To get the complete details for NIC.Integrated.1-4-1:

```

racadm hwinventory NIC.Integrated.1-4-1
Device Description: Integrated NIC 1 Port 4 Partition 1
PCI Vendor ID: 14e4
PCI Sub Vendor ID: 1028
PCI Device ID: 165F
PCI Sub Device ID: 1f5b
Current MAC Address: 74:86:7A:D6:E0:EF
Permanent MAC Address: 74:86:7A:D6:E0:EF
Virtual iSCSI MAC Address: Unavailable
Permanent iSCSI MAC Address: Unavailable
Virtual FIP MAC Address: Unavailable
Permanent FIP MAC Address: Unavailable
Permanent FCoE MAC Address: Unavailable
Slot Type: Not Applicable
Data Bus Width: Unknown
Slot Length: Not Applicable
Bus Number: 2
DeviceNumber: 0
Function Number: 1
Last Update Time: 20140508190902.000000+000
Last System Inventory Time: 20140515163940.000000+000
ProductName: BCM GbE 4P 5720-t rNDC
WWN: Unavailable
VirtWWN: Unavailable
WWPN: Unavailable
VirtWWPN: Unavailable
Family Version: 7.8.16
Controller BIOS Version: 1.32
EFI Version: 16.2.4
Max Bandwidth: 0
Min Bandwidth: 0
FCoE WWNN:
Vendor Name: Broadcom Corp
Number of PCI-e Functions
Supported per Port: 1
Number of PCI-e Functions
Currently Enabled per Port: 1
Family Driver Version : Unavailable
Protocol: 1
Link Duplex: Not Applicable
Link Speed: Not Applicable
Auto Negotiated: Disabled
Transmit Flow Control: Off
Receive Flow Control: Off
Media Type: Unavailable
NIC Mode: Disabled
FCoE Offload Mode: Disabled
iSCSI Offload Mode: Disabled
Max Number of IOs per session supported: 0
Number of Max LOGINs per port: 0
Max Number of exchanges: 0
Max NPIV WWN per port: 0
Number of Targets Supported: 0

```

Max Number of outstanding commands supported across all sessions:	0
Flex Addressing:	Capable
UEFI:	Capable
iSCSI Offload:	Not Capable
iSCSI Boot:	Capable
TCP OffloadEngine:	Not Capable
FCoE:	Not Capable
FCoE Boot:	Not Capable
PXE Boot:	Capable
SRIOV:	Not Capable
Wake on LAN:	Capable
Network Management Pass Through:	Capable
OS2BMC PassThrough:	Capable
Energy Efficient Ethernet:	Capable
On Chip Thermal Sensor:	Capable
NPar:	Not Capable
Remote PHY:	Not Capable
Feature Licensing:	Not Capable
IPSec Offload:	Not Capable
MAC Sec:	Not Capable
RDMA:	Not Capable
Enhanced Transmission Selection:	Not Capable
Priority Flow Control:	Not Capable
DCB Exchange Protocol:	Not Capable
Congestion Notification:	Not Capable
VEB-VEPA Single Channel:	Not Capable
VEB-VEPA Multi Channel:	Not Capable
EVB:	Not Capable
BPE:	Not Capable
Open Flow:	Not Capable
Partition WOL Support:	Not Capable
Virtual Link Control	Not Capable
Partition RX Flow Control:	Not Capable
Partition TX Flow Control:	Not Capable
TX Bandwidth Control Maximum:	Not Capable
TX Bandwidth Control Minimum:	Not Capable

To export the inventory to a remote CIFS share:

```
racadm hwinventory export -f Myinventory.xml -u admin -p xxx
-l //1.2.3.4/share
```

To export the inventory to a remote NFS share:

```
racadm hwinventory export -f Myinventory.xml -u admin -p xxx
-l 1.2.3.4:/share
```

To export the inventory to local file system using local Racadm:

```
racadm hwinventory export -f Myinventory.xml
```

To display the Standard hardware inventory verbose description for the FC.Slot.2-1

```
racadm hwinventory FC.Slot.2-1
PCI Vendor ID: 1077
PCI Sub Vendor ID: 1077
PCI Device ID: 2532
PCI Sub Device ID: 015c
PCI Bus: 67
PCI Device: 0
PCI Function: 0
```

Vendor Name:	Unavailable
Device Name:	QLogic QLE2560 8Gb Fibre Channel
Adapter - 21000024FF089D8A	
WWN:	20:00:00:24:FF:08:9D:8A
VirtWWN:	20:00:00:24:FF:08:9D:8A
WWPN:	21:00:00:24:FF:08:9D:8A
VirtWWPN:	21:00:00:24:FF:08:9D:8A
Chip Type:	ISP2532
Family Version:	02.57.14
EFI Version:	2.34
OS Driver Version:	Unavailable
First FC Target WWPN:	50:06:01:60:44:60:28:8C
First FC Target LUN:	0
Second FC Target WWPN:	00:00:00:00:00:00:00:00
Second FC Target LUN:	0
Hard Zone Address:	0
Hard Zone Enable:	Disabled
FC Tape Enable:	Disabled
Loop reset Delay:	5
Frame Payload Size :	2048
Fabric Login Retry Count:	0
Fabric Login Timeout:	0
Port Login Retry Count:	8
Port Login Timeout:	3000
Port Down Retry Count:	45
Port Down Timeout:	0
Link Down Timeout:	45000
Port Number:	1
Port Speed:	0
No capabilities found for FQDD "FC.Slot.2-1"	
/admin1-> racadm hwinventory FC.Slot.3-1	
PCI Vendor ID:	1077
PCI Sub Vendor ID:	1077
PCI Device ID:	2031
PCI Sub Device ID:	0256
PCI Bus:	4
PCI Device:	0
PCI Function:	0
Vendor Name:	QLogic
Device Name:	QLogic QLE2660 16Gb FC Adapter -
2001000E1E091075	
WWN:	20:00:00:0E:1E:09:10:75
VirtWWN:	20:00:00:0E:1E:09:10:75
WWPN:	20:01:00:0E:1E:09:10:75
VirtWWPN:	20:01:00:0E:1E:09:10:75
Chip Type:	8324, Rev. 02
Family Version:	02.00.84
EFI Version:	5.30
OS Driver Version:	9.1.10.27
First FC Target WWPN:	00:00:00:00:00:00:00:00
First FC Target LUN:	0
Second FC Target WWPN:	00:00:00:00:00:00:00:00
Second FC Target LUN:	0
Hard Zone Address:	0
Hard Zone Enable:	Disabled
FC Tape Enable:	Disabled
Loop reset Delay:	5
Frame Payload Size :	2048
Fabric Login Retry Count:	0
Fabric Login Timeout:	0
Port Login Retry Count:	8
Port Login Timeout:	3000

Port Down Retry Count:	30
Port Down Timeout:	0
Link Down Timeout:	30000
Port Number:	1
Port Speed:	0
Max Number of IOs per connection supported:	9
Maximum number of Logins per port:	8
Maximum number of exchanges:	9
Maximum NPIV per port:	1
Maximum number of FC Targets supported:	8
Maximum number of outstanding commands across all connections:	9
Flex Addressing:	Capable
UEFI:	Capable
FC Start:	Capable
On Chip Thermal Sensor:	Capable
Feature Licensing:	Not Capable

ifconfig

Description Displays the contents of the network interface table.
To use this subcommand, you must have the Execute Diagnostic Commands permission.

To use this subcommand, you must have the Administrator privilege.

Synopsis racadm ifconfig

Input N/A

Example

```
$ racadm ifconfig

eth0      Link encap:Ethernet  HWaddr 00:1D:09:FF:DA:23
          inet addr:10.35.155.136  Bcast:10.35.155.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:2550665 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:272532097 (259.9 MiB)  TX bytes:0 (0.0 B)
```

inlettemphistory

Description Displays the average and the peak temperatures during the last hour, day, week, month, or year. Also Exports the inlet temperature history data file. The file can be exported to a remote file share, local file system, or the management station.



NOTE: For FM120x4 systems, this subcommand provides the historical data for system board temperature.

Synopsis

- racadm inlettemphistory export -f <filename> -t <type> [-u <username of the network share>] [-p <password for the remote share>] [-i <network share location>]
- racadm inlettemphistory get

Input

- f — Exports inlet temperature history filename. The maximum length of this parameter is 64 characters.



NOTE: If a file with the specified filename exists, then the older file is replaced with the new history file.

- **-u** — User name of the remote share to export the file. Specify user name in a domain as domain or username.
- **-p** — Password for the remote share to where the file must be exported.
- **-l** — Network share location to where the inlet temperature history must be exported. The maximum length of this parameter is 256 characters.



NOTE: Export to an IPv6 NFS share is not supported.

- **-t** — Specifies the exported file type. Valid values are **xml** and **csv**. These values are case-insensitive.



NOTE: From firmware RACADM, only export to a remote share is supported. The behavior of remote share is not defined when the path specified (**-l**) contains special characters.

Example

- Export the log to a remote CIFS share.

```
racadm inlettemphistory export -f Mylog.xml -u admin -p xxx -l //1.2.3.4/share -t xml
```
- Export the log to local file system using Local RACADM.

```
racadm inlettemphistory export -f Mylog.xml -t xml
```
- Export the log to management station using Remote RACADM.

```
racadm -r 1.2.3.4 -u user -p xxx inlettemphistory export -f Mylog.csv -t csv
```
- View the inlet temperature history.

```
racadm inlettemphistory get
```

```
Duration Above Warning Threshold as Percentage = 0.0%
Duration Above Critical Threshold as Percentage = 0.0%
```

Average Temperatures

```
Last Hour   = 23C ( 73.4F )
Last Day    = 24C ( 75.2F )
Last Week   = 24C ( 77.0F )
Last Month  = 25C ( 77.0F )
Last Year   = 23C ( 73.4F )
```

Peak Temperatures

```
Last Hour   = 23C ( 73.4F ) [At Wed, 30 May 2012 11:00:57]
Last Day    = 25C ( 77.0F ) [At Tue, 29 May 2012 15:37:23]
Last Week   = 27C ( 80.6F ) [At Fri, 25 May 2012 10:38:20]
Last Month  = 29C ( 84.2F ) [At Wed, 16 May 2012 15:34:13]
Last Year   = 29C ( 84.2F ) [At Wed, 16 May 2012 15:34:13]
```

jobqueue

Description

Enables you to view and delete a job or jobs in the current Job Queue.

**NOTE:**

- To run this subcommand, you must have the **Server control** privilege.
- If an unexpected error message is displayed for any operation, ensure you delete some jobs in the jobqueue and retry the operation.

Synopsis

```
racadm jobqueue view -i<jobid>
```

```
racadm jobqueue delete [-i<jobid>][--all]
```

where valid options are -i and --all.

```
racadm jobqueue create <fqdd> [-r <reboot type> ] [-s  
<start time> ] [-e <expiry time>]
```

```
racadm jobqueue create <fqdd> [-r <reboot type>] [-s  
<start time>] [-e <expiration time>] [--realtime]
```

Input

- -i — Specifies a job ID that is displayed or deleted.



NOTE: The value JID_CLEARALL will force delete all the possible jobs in the queue.

- --all — The job IDs that are not applicable are deleted.
- -fqdd — Specifies an FQDD for which a job should be created.
- -r <reboot type> — Specifies a reboot type.
 - none — No Reboot Job. This option is the default value.
 - pwrcycle — Power cycle.
 - graceful — Graceful Reboot without forced shut down.
 - forced — Graceful Reboot with forced shut down.
- start time — Specifies a start time for job scheduled in the yyymmddhhmmss format. TIME_NOW means immediate. Next Reboot means job is in scheduled state until the next manual restart.
- expiry time — Specifies expiry time for the job execution in the yyymmddhhmmss format. The job must start by this time. TIME_NA means expiry time is not applicable.
- --realtime — Specifies the real time job.

**NOTE:**

- --realtime is applicable for storage configuration commands run on systems with PERC 9 cards with firmware version 9.1 and later.
- -r option is not valid for real time configuration.

Example

- View jobs in the current job queue.
racadm jobqueue view
- View jobs in the Current job queue and display the specific job ID.
racadm jobqueue view -i <JobID>
- Delete all possible jobs from the current job queue.
racadm jobqueue delete --all
- Delete a specific job from the current job queue.
racadm jobqueue delete -i <JobID>
- To clear all the jobs in the job queue.
racadm jobqueue delete -i JID_CLEARALL

- Create a Job for the provided FQDD and add to the job queue.
`racadm jobqueue create NIC.Integrated.1-1 -r pwr cycle -s TIME_NOW -e 20120501100000`
- Create a real time configuration job for the specified RAID controller.
`racadm jobqueue create RAID.Integrated.1-1 -s TIME_NOW --realTime`
 RAC1024: Successfully scheduled a job.
 Verify the job status using "racadm jobqueue view -i JID_XXXXX" command.
 Commit JID = JID_927008261880

krbkeytabupload

Description	Uploads a Kerberos keytab file to CMC. To run this subcommand, you must have the Configure iDRAC permission. Uploads a Kerberos keytab file to iDRAC. To run this subcommand, you must have the Server Control privilege.
Synopsis	<pre>racadm krbkeytabupload [-f <filename>]</pre> <filename> is the name of the file including the path.
Input	-f — Specifies the filename of the keytab uploaded. If the file is not specified, the keytab file in the current directory is selected.
Output	Returns 0 when successful and nonzero number when unsuccessful.
Output	When successful Kerberos Keytab successfully uploaded to the RAC message is displayed. If unsuccessful, appropriate error message is displayed.
Example	<code>racadm krbkeytabupload -f c:\keytab\krbkeytab.tab</code>

lclog

Description	Allows you to: • Export the lifecycle log history. The log exports to remote or local share location. • View the lifecycle log for a particular device or category • Add comment to a record in lifecycle log • Add a work note (an entry) in the lifecycle log • View the status of a configuration job.
--------------------	--

**NOTE:**

- When you run this command on Local RACADM, the data is available to RACADM as a USB partition and may display a pop-up message.
- While Lifecycle Controller is running for racadam commands, you cannot perform other operations which needs Lifecycle Controller Partition. If the Lifecycle Controller Partition is unreleased (because of improper closure of racadm command in the partition), then you must wait 20-35 minutes to clear the Lifecycle Controller Partition

Synopsis

```
racadm lclog view -i <number of records> -a <agent id> -c
<category> -s <severity> -b <sub-category> -q <sequence no> -n
<number of records> -r <start timestamp> -e <end timestamp>

racadm lclog comment edit -q <sequence number> -m <Text to be
added>

racadm lclog export -f <filename> -u <username> -p <password> -l
<CIFS or NFS share>

racadm lclog export -f <filename> -u <username> -p <password> -l
<CIFS or NFS share> --complete

racadm lclog viewconfigresult -j <job ID>

racadm lclog worknote add -m <text to be added>
```

Input

- -i — Displays the number of records present in the active log.
- -a — The agent ID used to filter the records. Only one agent ID is accepted. The value is case-insensitive. Valid Agent-ID values:
 - UEFI_SS_USC
 - CusOsUp
 - UEFI_Inventory
 - iDRAC
 - UEFI_DCS
 - SEL
 - RACLOG
 - DE
 - WSMAN
 - RACADM
 - iDRAC_GUI
- -c — The category used to filter the records. Provides multiple categories using a "," as the delimiter. The value is case-insensitive. Valid category values:
 - System
 - Storage
 - Worknotes
 - Config
 - Updates
 - Audit
- -b — The subcategory used to filter the records. Provides multiple subcategories using a "," as the delimiter.
- -q — The sequence number from which the records must be displayed. Records older than this sequence number is displayed.



NOTE: This parameter input is an integer. If an alphanumeric input is provided, then invalid subcommand syntax error is displayed.

- **-n** — Specifies the n number of records that must be displayed. On Local RACADM, if this parameter is not specified, by default 100 logs are retrieved.
- **-r** — Displays events that have occurred after this time. The time format is yyyy-mm-dd HH:MM:SS. The time stamp must be provided within double quotation marks.
- **-e** — Displays events that have occurred before this time. The time format is yyyy-mm-dd HH:MM:SS. The time stamp must be provided within double quotation marks.
- **-f <filename>** — Specifies the file location and name where lifecycle log is exported.
- **-a <name>** — Specifies the FTP Server IP address or FQDN, user name, and password.
- **-l <location>** — Specifies the location of the network share or area on file system where lifecycle log is exported. Two types of network shares are supported:
 - SMB-mounted path: //<ipaddress or domain name>/<share_name>/<path to image>
 - NFS-mounted path: <ipaddress>:/<path to image>.
- **-u <user>** — Specifies the user name for accessing the FTP server, or Domain and user name for accessing network share location.
- **-p <password>** — Specifies the password for accessing the FTP server or share location.
- **-s** — The severity used to filter the records. Provide multiple severities using a "," as the delimiter. The value is case-insensitive. Valid Severity values:
 - Warning
 - Critical
 - Info
- **-m <Comment>** — User comment string for a record that must be inserted in the Lifecycle Controller log. This comment string must be less than 128 characters. The text must be specified within double quotation mark.



NOTE: HTML-specific characters may appear as escaped text.

- **-m <Worknote>** — Adds a worknote (an entry) in the Lifecycle log. This worknote must be less than 256 characters. The text must be specified within double quotation mark.



NOTE: HTML-specific characters may appear as escaped text.

- **NOTE:** For **-m <worknote>** and **-m <comment>** options, you need **test alert** privilege.
- **--complete** — Export the complete Lifecycle log as a compressed file. The exported file will be of the type **.xml.gz**.
- **-j<Job ID>** — Specifies the Job ID.

Example

- Display the number of records present in the Lifecycle log.
`racadm lclog view -i`
- Display the iDRAC agent `idrac` records, under the storage category and storage physical disk drive subcategory, with severity set to warning.
`racadm lclog view -a idrac -c storage -b pdr -s warning`
- Display the records under storage and system categories with severities set to warning or critical.
`racadm lclog view -c storage,system -s warning,critical`

- Display the records having severities set to warning or critical, starting from sequence number 4.
`racadm lclog view -s warning,critical -q 4`
 - Display 5 records starting from sequence number 20.
`racadm lclog view -q 20 -n 5`
 - Display all records of events that have occurred between 2011-01-02 23:33:40 and 2011-01-03 00:32:15.
`racadm lclog view -r "2011-01-02 23:33:40" -e "2011-01-03 00:32:15"`
 - Display all the available records from the active Lifecycle log.
`racadm lclog view`
-  **NOTE:** If output is not returned when this command is used remotely, then retry increasing the remote RACADM timeout value. To increase the timeout value, run the command `racadm set iDRAC.Racadm.Timeout <value>`. Alternatively, you can retrieve few records.
- Add a comment to record number 5 in the Lifecycle log.
`racadm lclog comment edit -q 5 -m "This is a test comment."`
 - Add a worknote to the Lifecycle log.
`racadm lclog worknote add -m "This is a test worknote."`
 - Export the Lifecycle log to a remote CIFS share.
`racadm lclog export -f Mylog.xml -u admin -p xxx -l //192.168.0/share`
 - Export the complete Lifecycle log in gzip format to a remote CIFS share.
`racadm lclog export -f log.xml.gz -u admin -p xxx -l //192.168.0/share --complete`
 - Export the Lifecycle log to a remote NFS share.
`racadm lclog export -f Mylog.xml -l 192.168.0:/home/lclog_user`
 - Export the Lifecycle log to a local share using Local RACADM.
`racadm lclog export -f Mylog.xml`
 - Export the complete Lifecycle log in gzip format to a local share using Local RACADM.
`racadm lclog export -f log.xml.gz --complete`
 - Export the Lifecycle log lclog to a local share using Remote RACADM.
`racadm -r 192.168.0 -u admin -p xxx lclog export -f Mylog.xml`
 - Display the status of the specified Job ID with Lifecycle Controller.
`racadm lclog viewconfigresult -j JID_123456789012`

license

Description Manages the hardware licenses.

- Synopsis**
- `racadm license view [-c <component>]`
 - `racadm license import [-f <licensefile>] -l <location> -u <username> -p <password> -c <component> [-o]`
 - `racadm license export -f <license file> [-l <location>] [-u <username>] [-p <password>] -e <ID> -c <component>`
 - `racadm license delete -t <transaction ID> [-o]`
 - `racadm license delete -e <entitlement ID> [-o]`

- `racadm license delete -c <component> [-o]`
- `racadm license replace -u <username> -p <password> -f <license file name> -l <NFS/CIFS share> -t <transaction ID> [-o]`

Input

- `view` — View license information.
- `import` — Installs a new license.
- `export` — Exports a license file.
- `delete` — Deletes a license from the system.
- `replace` — Replaces an older license with a given license file.
- `-l <remote share location>` — Network share location from where the license file must be imported.
If the file is on a shared location, then `-u <share user>` and `-p <share password>` must be used.
- `-f` — Filename or path to the license file
- `-e <ID>` — Specifies the entitlement ID of the license file that must be exported
- `-t <ID>` — Specifies the transaction ID.
- `-c <component>` — Specifies the component name on which the license is installed.
- `-o` — Overrides the End User License Agreement (EULA) warning and imports, replaces or deletes the license.



NOTE: Only a user with **Server Control** and **Configure iDRAC** privilege can run the `import`, `delete`, and `replace` commands.



NOTE: For export license, you need **Login** and **Configure iDRAC** privilege.

Examples

- View all License Information on System.

```
$racadm license view
```

```
iDRAC.Embedded.1
  Status           = OK
  Device           = iDRAC.Embedded.1
  Device Description = iDRAC
  Unique Identifier = H1VGF2S
    License #1
      Status           = OK
      Transaction ID    = 5
      License Description = iDRAC Enterprise License
      License Type      = PERPETUAL
      Entitlement ID     = Q3XJmvoxZdJVSuZemDehlcrd
      License Bound     = H1VGF2S
      Expiration        = Not Applicable
```

- Import a new license to a specific device in a known location.
`$racadm license import -f license.xml -l //shareip/sharename -u <share user> -p <share user password> -c idrac.embedded.1`
- Import a license from a CIFS share to a device, in this case Embedded iDRAC.
`racadm license import -u admin -p xxx -f License.xml -l //192.168.0/licshare -c idrac.embedded.1`
- Import a license from an NFS share to a device, in this case Embedded iDRAC.
`racadm license import -f Licen.xml -l 192.168.0:/share -c idrac.embedded.1`

- Import a license by overriding the EULA warning.

```
racadm license import -u admin -p passwd -f License.xml
-l //192.168.0/licshare -c idrac.embedded.1 -o
```
- Import a license from the local file system using Local RACADM.

```
racadm license import -f License.xml -c idrac.embedded.1
```
- Import a license from the local file system using Remote RACADM.

```
racadm -r 192.168.0.1 -u admin -p xxx license import -f C:\Mylicdir
\License.xml -c idrac.embedded.1
```
- Export a license file.

```
racadm license export -f license.xml -l 192.168.0:/share -u uname -p xxx -c
iDRAC.Embedded.1
```

Instead of `-c`, you can use `-e <ID>` or `-t <ID>`

For Remote RACADM, if filename is not specified, the files are exported to the directory where RACADM is running.

- Export license to an NFS share using transaction ID, in this case transaction 27.

```
racadm license export -f License.xml -l 192.168.0:/licshare
-t 27
```
- Export license to a CIFS share specifying the entitlement ID, in this case abcdxyz.

```
racadm license export -u admin -p passwd -f License.xml
-l //192.168.0/licshare -e abcdxyz
```
- Export license to a CIFS share specifying the FQDD. While using the `-c` option and exporting a license from a device, more than one license file may be exported. Therefore if a filename is given, an index is appended to the end of the filename such as **LicenseFile0.xml**, **LicenseFile1.xml**. In this case, the device is Embedded iDRAC.

```
racadm license export -u admin -p xxx -f LicenseFile.xml -l //192.168.0/
licshare -c idrac.embedded.1
```
- Delete licenses on a particular device, in this case Embedded iDRAC.

```
racadm license delete -c idrac.embedded.1
```
- Delete a license using entitlement ID, in this case xYZabcdefg.

```
racadm license delete -e xYZabcdefg
```
- Delete a license using transaction ID, in this case 2.

```
racadm license delete -t 2
```
- Replace a license on a device with a license file on an NFS share using transaction ID. In this case, transaction 27.

```
racadm license replace -f License.xml -l 192.168.0:/licshare
-t 27
```
- Replace a license on a device with a license file on a CIFS share using transaction ID. In this case, transaction 27.

```
racadm license replace -u admin -p xxx -f License.xml
-l //192.168.0/licshare -t 27
```

nicstatistics

Description Displays the statistics for the NIC FQDD.

Synopsis • `racadm nicstatistics`
 • `racadm nicstatistics <NIC FQDD>`

- `racadm hwinventory NIC.Integrated.1-1`

Examples

- Displays the statistics for the NIC FQDD.
`$racadm nicstatistics <NIC FQDD>`
- Displays the statistics for the integrated NIC.
`$ racadm nicstatistics NIC.Integrated.1-1`

```
Total Bytes Received:0
Total Bytes Transmitted:0
Total Unicast Bytes Received:0
Total Multicast Bytes Received:0
Total Broadcast Bytes Received:0
Total Unicast Bytes Transmitted:0
```
- Get the network statistics.
`$ racadm nicstatistics`

```
NIC.Slot.5-2-1 : QLogic CNA Gigabit Ethernet-B8:AC:6F:B3:BF:10
NIC.Slot.5-2-1 : QLogic CNA Gigabit Ethernet-B8:AC:6F:B3:BF:11
NIC.Slot.5-2-1 : QLogic CNA Gigabit Ethernet-B8:AC:6F:B3:BF:12
NIC.Slot.5-2-1 : QLogic CNA Gigabit Ethernet-B8:AC:6F:B3:BF:13
NIC.Slot.5-2-1 : QLogic CNA Gigabit Ethernet-B8:AC:6F:B3:BF:14
```

ping

Description Verifies if the destination IP address is reachable from CMC with the current routing-table contents. A destination IP address is required. Based on the current routing-table contents, an ICMP echo packet is sent to the destination IP address.
To run this subcommand, you must have the **Administrator** privilege.
To run this subcommand, you must have the **Debug** privilege.

Synopsis `racadm ping <ipaddress>`

Input `<ipaddress>` — The IP address of the remote endpoint to ping.

Output

```
PING 192.168.0 (192.168.0): 56 data bytes64 bytes from 192.168.0:
seq=0 ttl=64 time=4.121 ms
192.168.0 ping statistics
1 packets transmitted, 1 packets received, 0 percent packet
lossround-trip min/avg/max = 4.121/4.121/4.121 ms
```

ping6

Description Verifies if the destination IPv6 address is reachable from iDRAC or with the current routing-table contents. A destination IPv6 address is required. Based on the current routing-table contents, an ICMP echo packet is sent to the destination IPv6 address.

Verifies if the destination IPv6 address is reachable from CMC or with the current routing-table contents. A destination IPv6 address is required. Based on the current routing-table contents, an ICMP echo packet is sent to the destination IPv6 address.

To run this subcommand, you must have the **Administrator** privilege.

To run this subcommand, you must have **Debug** privilege.

Synopsis `racadm ping6 <ipv6address>`

Input `<ipv6address>` — the IPv6 address of the remote endpoint to ping.

Example

```
Pinging 2011:de11:bdc:194::31 from 2011:de11:bdc:194::101 with
32 bytes of data:
Reply from 2011:de11:bdc:194::31: time<1ms
Reply from 2011:de11:bdc:194::31: time<1ms
Reply from 2011:de11:bdc:194::31: time<1ms
Reply from 2011:de11:bdc:194::31: time<1ms

Ping statistics for 2011:de11:bdc:194::31:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

RACADM Proxy

Description On the PowerEdge FX2/FX2s systems, you can manage the compute sleds and CMC using the iDRAC's RACADM Proxy feature that redirects commands from iDRAC to CMC. You can return the CMC response to local or remote RACADM to access the CMC configuration and reporting features without placing the CMC on the management network. The CMC configuration commands are supported through local proxy when local configuration is enabled on iDRAC.

 **NOTE:** Local racadm and local racadm proxy runs with root user privilege.

Synopsis Local RACADM proxy usage

```
racadm <CMC racadm subcommand> --proxy
```

Remote RACADM proxy usage

```
racadm <CMC racadm subcommand> -u <username> -p <password> -r
<idrac-ip connected to cmc> --proxy
```

**NOTE:**

- The attribute `racadm getconfig -g cfgractuning -o cfgRacTuneChassisMgmtAtServer` must be set as non-zero in CMC.
- The attribute `racadm get system.ChassisControl.ChassisManagementMonitoring` attribute must be enabled in iDRAC.
- `--proxy` must be entered at the end of the command.
- The root privilege is the default privilege for Local RACADM proxy.
- The user privilege in the Remote RACADM proxy for CMC maps to iDRAC privilege.

Required CMC Privilege for an operation

CMC Login User

Chassis Configuration Administrator

User Configuration Administrator

Clear Logs Administrator

Chassis Control Administrator

Server Administrator

Test Alert User

Debug Command Administrator

Fabric x Administrator (where x is A, B, or C)

Required iDrac Privilege for proxy operation

Login

Configure

Configure User

Logs

System Control

System Control

System Operations

Debug

- When CMC is not placed on the network, the import, export, and file operation commands to CIFS, NFS, or FTP will fail.
- When the Remote or Local RACADM Proxy operation is in progress, if the iDRAC is reset, then the Proxy operation fails and the output is not displayed in Remote or Local RACADM.
- When `racadm getsystem.ChassisControl.ChassisManagementMonitoring` attribute is set to `monitor`, all the users including root users can only view the attribute. To configure, set the attribute to `monitor` and `manage` in CMC.

Input

- `-u` — Specifies the user name of the remote share that stores the catalog file.
- `-p` — Specifies the password of the remote share that stores the catalog file.
- `-r` — Specifies the iDRAC IP address connected to CMC.

Example

Local RACADM

```
racadm getractime --proxy
```

Remote RACADM

```
racadm getractime -u root -p xxx -r 192.168.0 getractime --proxy
```

racdump

Description Provides a single command to get dump, status, and general CMC board information. This subcommand displays the comprehensive chassis status, configuration state information, and historic event logs. Used for post deployment configuration verification and during debugging sessions.

To run this subcommand, you must have the Administrator privilege.

To run this subcommand, you must have the Debug permission.

Racdump includes the following subsystems and aggregates the following RACADM commands:

- General System/RAC Information
- Coredump Information
- Network Interface Statistics
- Session Information
- Process Information
- RAC Firmware Build Log
- General System/RAC information — **getsysinfo**
- Session information — **getssinfo**
- Sensor information — **getsensorinfo**
- Switches information (IO Module) — **getioinfo**
- Mezzanine card information (Daughter card) — **getdcinfo**
- All modules information — **getmodinfo**
- Power budget information — **getpbinfo**
- KVM information — **getkvminfo**
- NIC information (CMC module) — **getniccfg**
- Redundancy information — **getredundancymode**
- Trace log information — **gettracelog**
- RAC event log — **getraclog**
- System event log — **getsel**

Synopsis `racadm racdump`
`racadm racdump`

Input N/A

Output The following information is displayed when this subcommand is processed:

- General system or RAC information
- Coredump
- Session information
- Process information
- Firmware build information

Example

```
=====
General System/RAC Information
=====

RAC Information:
RAC Date/Time           = Thu Jul  3 13:35:32 2014

Firmware Version        = 2.05.05.05
Firmware Build           = 12
Last Firmware Update     = 07/02/2014 19:41:38
Hardware Version         = 0.01
MAC Address              = 18:03:73:F7:B7:CA

Common settings:
Register DNS RAC Name    = 0
DNS RAC Name              = idrac
Current DNS Domain       =
Domain Name from DHCP    = Disabled

IPv4 settings:
Enabled                   = 1
Current IP Address        = 192.168.0.1
Current IP Gateway        = 192.168.0.1
Current IP Netmask        = 192.168.0.1
DHCP Enabled              = 0
Current DNS Server 1      = 0.0.0.0
Current DNS Server 2      = 0.0.0.0
DNS Servers from DHCP     = Disabled

IPv6 settings:
Enabled                   = 0
Current IP Address 1      = ::
Current IP Gateway        = ::
Autoconfig                = 1
Link Local IP Address     = ::
Current IP Address 2      = ::
Current IP Address 3      = ::
Current IP Address 4      = ::
Current IP Address 5      = ::
Current IP Address 6      = ::
Current IP Address 7      = ::
Current IP Address 8      = ::
Current IP Address 9      = ::
Current IP Address 10     = ::
Current IP Address 11     = ::
Current IP Address 12     = ::
Current IP Address 13     = ::
Current IP Address 14     = ::
Current IP Address 15     = ::
DNS Servers from DHCPv6   = Disabled
Current DNS Server 1      = ::
Current DNS Server 2      = ::

System Information:
System Model              = PowerEdge R720
System Revision           = I
System BIOS Version       = 2.0.18
Service Tag               =
Express Svc Code          =
```

Host Name = localhost.localdomain
OS Name =
OS Version =
Power Status = ON
Fresh Air Capable = No

Watchdog Information:

Recovery Action = None
Present countdown value = 478 seconds
Initial countdown value = 480 seconds

Embedded NIC MAC Addresses:

NIC.Integrated.1-3-1 Ethernet = 78:2B:CB:4B:C2:ED
NIC.Integrated.1-1-1 Ethernet = 78:2B:CB:4B:C2:EB

=====
Coredump Information
=====

There is no coredump currently available.

=====
Network Interface Statistics
=====

Kernel IPv6 routing table

Destination					Next			
Hop					Flags	Metric	Ref	Use Iface
::								
1/128					::			
U	0	1		1 lo				
::								
1/128					::			
U	256	0		0 lo				
fe80::1a03:73ff:fe77:b7ca/								
128		::						U 0 0
1 lo								
fe80::/64					::			
U	256	0		0 eth1				
ff00::/8					::			
U	256	0		0 eth1				

Kernel IP routing table

Destination	Gateway	Genmask	Flags	MSS	Window	irtt	Iface
0.0.0.0	192.168.0.1	0.0.0.0	UG	0	0	0	bond0
192.168.0.1	0.0.0.0	192.168.0.1	U	0	0	0	bond0

Active Internet connections (w/o servers)

Proto	Recv-Q	Send-Q	Local Address	Foreign Address
State				
tcp	0	0	192.168.0.1:53986	192.168.0.1:199
ESTABLISHED				
tcp	0	0	192.168.0.1:53985	192.168.0.1:199
ESTABLISHED				
tcp	0	0	192.168.0.1:199	192.168.0.1:53986
ESTABLISHED				
tcp	0	0	192.168.0.1:199	192.168.0.1:53985
ESTABLISHED				

```

Session Information
=====
No active sessions currently exist.

```

```

=====
Process Information
=====
PID USER      VSZ STAT COMMAND
  1 root        5236 S   {systemd} /sbin/init
  2 root         0 SW   [kthreadd]
  3 root         0 SW   [ksoftirqd/0]
  6 root         0 SW   [watchdog/0]
  7 root         0 SW<  [khelper]
  8 root         0 SW   [kdevtmpfs]
  9 root         0 SW<  [netns]
153 root         0 SW   [sync_supers]
155 root         0 SW   [bdi-default]
157 root         0 SW<  [kblockd]
166 root         0 SW   [khubd]
16233 root      40916 S   racadm racdump
16246 root       3824 S   sh -c /bin/ps
16247 root       3828 R   /bin/ps
26851 root         0 SW   [kworker/u:3]

```

```

=====
RAC Firmware Build Log
=====
BLD_TAG=idracfw bldtag_2.05.05.05_691231_1800_00
BLD_VERSION=2.05.05.05
BLD_NUMBER=69.12.31
BLD_DATE=2.00.00.00.733
BLD_TYPE=idrac
BLD_KERNEL=ZIMAGE

racadm racdump

```

```

=====
General System/RAC Information
=====

CMC Information:
CMC Date/Time           = Wed, 28 Nov 2007 11:55:49 PM
Active CMC Version      = X08
Standby CMC Version     = N/A
Last Firmware Update    = Wed Nov 21 21:37:56 2007
Hardware Version        = 2
Current IP Address      = 192.168.0.1
Current IP Gateway      = 192.168.0.1
Current IP Netmask      = 192.168.0.1
DHCP Enabled            = 1
MAC Address             = 00:55:AB:39:10:0F
Current DNS Server 1    = 0.0.0.0
Current DNS Server 2    = 0.0.0.0
DNS Servers from DHCP   = 0
Register DNS CMC Name   = 0
DNS CMC Name            = cmc-servicetag
Current DNS Domain      =

Chassis Information:
System Model            = PowerEdgeM1000eControlPanel

```

```

System AssetTag      = 00000
Service Tag         =
Chassis Name        = Dell Rack System
Chassis Location     = [UNDEFINED]
Power Status        = ON

```

```

=====
Session Information
=====

```

```

Type      User      IP Address      Login Date/Time
SSH       root      10.9.72.252     11/28/2007 23:40:53
KVM       root      169.254.31.30   11/28/2007 18:44:51

```

```

=====
Sensor Information
=====

```

```

<senType> <Num> <sensorName> <status> <reading> <units> <lc>
<uc>
FanSpeed      1      Fan-1          OK          14495      rpm        7250 14500
FanSpeed      2      Fan-2          OK          14505      rpm        7250 14500
FanSpeed      3      Fan-3          OK          4839       rpm        2344 14500
FanSpeed      4      Fan-4          OK          14527      rpm        7250 14500
FanSpeed      5      Fan-5          OK          14505      rpm        7250 14500
FanSpeed      6      Fan-6          OK          4835       rpm        2344 14500
FanSpeed      7      Fan-7          OK          14521      rpm        7250 14500
FanSpeed      8      Fan-8          Not OK      1          rpm        7250 14500
FanSpeed      9      Fan-9          OK          4826       rpm        2344 14500

```

```

<senType> <Num> <sensorName> <status> <reading> <units> <lc>
<uc>
Temp          1      Ambient_Temp   OK          21         celcius    N/A  40

```

```

<senType> <Num> <sensorName> <status> <AC-OK status>
PWR        1      PS-1          Online      OK
PWR        2      PS-2          Online      OK
PWR        3      PS-3          Online      OK
PWR        4      PS-4          Slot Empty  N/A
PWR        5      PS-5          Failed      OK
PWR        6      PS-6          Slot Empty  N/A

```

racreset

Description Resets iDRAC. The reset event is logged in the iDRAC log.

Resets CMC. The reset event is logged in the hardware (SEL) and CMC (RAC) logs.

To run this subcommand, you must have the Chassis Administrator privilege.

To run this subcommand, you must have the Configure iDRAC permission and configure user privilege.

 **NOTE:** After you run the **racreset** subcommand, iDRAC may require up to two minutes to return to a usable state.

 **NOTE:** After you run the **racreset** subcommand, CMC may require up to two minutes to return to a usable state.



NOTE: There is a 100 percent fan request when the command is run against the servers.

Synopsis

```
racadm racreset soft
racadm racreset hard
racadm racreset soft -f
racadm racreset hard -f
racadm racreset [-m <module> [-f]]
```

Input

- **-f** — This option is used to force the reset.
- **-m** — The values must be one of the following:
 - **server-<n>** — where n=1–16
 - **server-<nx>** — where n=1–8; x = a, b, c, d (lower case)



NOTE:

- Multiple modules may be specified, such as **-m <module1> -m <module 2>**.
- **-f** option is used to force the reset and is available only with an **-m** option.

Output

```
racadm racreset
RAC reset operation initiated successfully. It may take up to a
minute for the RAC to come online again.
```

Example

- iDRAC reset


```
racadm racreset
```
- To reset CMC.


```
racadm racreset
```
- To reset server 1


```
racadm racreset -m server-1
```
- To reset servers 1 and 3


```
racadm racreset -m server-1 -m server-3
```

racresetcfg

Description

Deletes your current iDRAC configuration and resets iDRAC to the factory default settings. After reset, the default name and password are **root** and **calvin**, respectively, and the IP address is 192.168.0.120. Only for iDRAC Enterprise on Blade servers, IP address and the number of the slot the server inhabits in the chassis.

Deletes your current CMC configuration and resets CMC to the factory default settings. After reset, the default name and password are **root** and **calvin**, respectively, and the IP address is 192.168.0.120.

If you run **racresetcfg** from a network client (for example, a supported web browser, Telnet or SSH, or Remote RACADM), use the default IP address. The **racresetcfg** subcommand does not reset the **cfgDNSRacName** object.

To run this subcommand, you must have the Configure iDRAC privilege and configure user privilege.

To run this subcommand, you must have the Chassis Administrator privilege.

 **NOTE:** Certain firmware processes must be stopped and restarted to complete the reset to defaults. iDRAC becomes unresponsive for about 30 seconds while this operation completes.

 **NOTE:** Certain firmware processes must be stopped and restarted to complete the reset to defaults. CMC becomes unresponsive for about 30 seconds while this operation completes.

 **NOTE:** There is a 100 percent fan request when the command is issued against the servers.

Synopsis

- `racadm racresetcfg`
RAC reset operation initiated successfully. It may take several minutes for the RAC to come online again.
- `racadm racresetcfg -f`
- `racadm racresetcfg [-m <module>] [-c <feature>]`

Input

- `-m <module>` — Specifies the device to reset the configuration on <module>. <module> must be one of the following values:

- `chassis` — Default state if `-m` is not specified
- `server-<n>` — where `n=1-16`
- `server-<nx>` — where `n=1-8`; `x=a, b, c, d` (lower case)
- `kvm`

- `-c <feature>` — Must be one of the following values:

- `ad` — Reset Active Directory properties to default (default is disabled).
- `pcap` — Reset Power Cap to default.
- `flex` — Reset flexaddress properties to default (default is disabled).
- `dpse` — Reset Dynamic Power Supply Engagement to default (default is disabled).

 **NOTE:** FlexAddress or FlexAddressPlus will be set to enabled on running `racadm racresetcfg` (default is enabled without `-c` option). The server must be turned off prior to running this command to change the slot state.

 **NOTE:** `-c` option is valid with `<module> = chassis` only.

 **NOTE:** If `chassis` is the target of `racresetcfg`, CMC resets after the operation.

- `-f` — Force **resetcfg**. If any vFlash partition creation or formatting is in progress, iDRAC returns a warning message. You can perform a force reset using this option.

Example

- Reset the configuration on iDRAC.
`racadm racresetcfg`

The RAC configuration has initiated restoration to factory defaults.

Wait up to a minute for this process to complete before accessing the RAC again.

- Reset the KVM configuration on CMC.
`racadm racresetcfg -m kvm`
 The configuration has initiated restoration to factory defaults.
- Reset blade 8 configuration from CMC.
`racadm racresetcfg -m server-8`
 The RAC configuration has initiated restoration to factory defaults.
 Wait up to a minute for this process to complete before accessing the RAC again.
- Reset when vFlash Partition creation is in progress.
`racadm racresetcfg`
 A vFlash SD card partition operation is in progress. Resetting the iDRAC may corrupt the vFlash SD card. To force **racresetcfg**, use the **-f** flag.

remoteimage

Description Connects, disconnects, or deploys a media file on a remote server.
 To run this subcommand, you must have the **Configure Chassis Administrator** privilege.

Synopsis

- `racadm remoteimage [-m <module> | -a]`
- `racadm remoteimage -d [-m <module> | -a]`
- `racadm remoteimage -s [-m <module> | -a]`
- `racadm remoteimage -c [-m <module> | -a] [-u <username> -p <password> -l <image_path>]`
- `racadm remoteimage -e [-m <module> | -a] [-u <username> -p <password> -l <image_path>]`

Input

- **-c** — Connect the image.
- **-d** — Disconnect image.
- **-u** — User name to access the network share.
- **-p** — Password to access the network share.
- **-l** — Image location on the network share; use single quotation marks around the location.
- The image path can be on a Windows SMB mounted drive or a Linux or Unix NFS mounted drive.

SMB mounted path:

`//<ipaddress_or_domain_name>/<share_name>/<path_to_image>`

NFS mounted path:

`<ipaddress>:/<path_to_image>`.

The extension of **<path_to_image>** must be either **.iso** or **.img**.

- **-s** — Display current status.



NOTE: Use a forward slash (/) when providing the image location. If backward slash (\) is used, override the backward slash for the command to run successfully.

For example:

```
racadm remoteimage -c -u user -p xxx -l /\
\192.168.0/\CommonShare/\diskette
```



NOTE: Use a forward slash (/) when providing the image location. If backward slash (\) is used, override the backward slash for the command to run successfully.

For example:

```
racadm remoteimage -c -u user -p xxx -l /\
\192.168.0/\CommonShare/\diskette.img
```

- -e — Deploys a remote image. The first boot device is set to the shared image and the server is set to reboot.
- -m <module> — Specifies the server to deploy the image to one of the following:
 - sever-<n>, where n=1-16
 - server-<n>x where n=1-8; x=a, b, c, d (lower case)
- -a — Applies options for slots for all present servers.



NOTE: The following options only apply to connect and deploy actions

- -u — Username
- -p — Password

Example

- Configure a Remote image.


```
racadm remoteimage -c -u "user" -p "xxx" -l //shrloc/foo.iso
Remote Image is now Configured
```
- Disable Remote File Sharing.


```
racadm remoteimage -d
Disable Remote File Started. Please check status using -s
option to know Remote File Share is ENABLED or DISABLED.
```
- Check Remote File Share status.


```
racadm remoteimage -s
Remote File Share is Enabled
UserName
Password
ShareName //192.168.0/xxxx/dtk_3.3_73_Linux.iso
```
- Deploy a remote image on iDRAC CIFS Share.


```
racadm remoteimage -c -u admin -p xxx -l //192.168.0/dev/
floppy.img
```
- Deploy a remote image on iDRAC NFS Share.


```
racadm remoteimage -c -u admin -p xxx -l '//192.168.0/dev/
floppy.img'
```
- Deploy a remote image on iDRAC CIFS share for all the servers.


```
racadm remoteimage -c -a -l '//192.168.0/dev/floppy.img' -u
admin -p xxx
```
- Deploy a remote image on iDRAC NFS share for all the servers.


```
racadm remoteimage -c -a -l '192.168.0:/dev/floppy.img' -u
admin -p xxx
```

rollback

Description	Allows you to roll back the firmware to an earlier version.
Synopsis	<code>racadm rollback <FQDD></code>  NOTE: To get the list of available rollback versions and FQDDs, run the <code>racadm swinventory</code> command.
Input	<code><FQDD></code> : Specify the FQDD of the device for which the rollback is required.
Example	<code>racadm rollback iDRAC.Embedded.1-1</code> RAC1056: Rollback operation initiated successfully.

sensorsettings

Description	Allows you to perform threshold settings of the sensor. To run this subcommand, you must have Configure iDRAC privilege.  NOTE: An error message is displayed when the following is performed: • A set operation is performed on an unsupported FQDD. • Out of range settings is entered. • Invalid sensor FQDD is entered. • Invalid threshold level filter is entered.
Synopsis	<code>racadm sensorsettings set <FQDD> -level Min <value></code>
Input	• <code><FQDD></code> — Sensor or corresponding sensor FQDD which needs a threshold configuration. Run the command, <code>racadm getsensorinfo</code> to view the sensor FQDD. The R/W field in the output <code>getsensorinfo</code> indicates if the sensor thresholds can be configured. Replace the <code><FQDD></code> field with the corresponding sensor FQDD that needs a threshold configuration. • <code>-level</code> — threshold level for the sensor setting. Values are Max or Min.
Examples	To set the minimum noncritical threshold level for a power sensor type. <code>racadm sensorsettings set iDRAC.Embedded.1#SystemBoardCPUUsage -level Max 95</code>  NOTE: The entered value must be lesser or higher than the sensor critical threshold limit.

serveraction

Description	Enables you to perform power management operations on the blade system. To run this subcommand, you must have the Execute Server Control Commands permission.
Synopsis	<code>racadm serveraction <action> -f</code> • <code>racadm serveraction -a <action></code>

Input

- `racadm serveraction -m <module> <action>`

- `-m <module>` — Must be one of the following values:

- `server-<n>`: where $n=1-16$
- `server-<nx>`: where $n=1-8$; $x=a-d$ (enter lower case letter only)

- `-a` — Performs power action on all servers. Not allowed with the `powerstatus` action.

`<action>` — Specifies the power management operation to perform. The options are:

- `hardreset` — Performs a force reset (reboot) operation on the managed system.
- `powercycle` — Performs a power-cycle operation on the managed system. This action is similar to pressing the power button on the system's front panel to turn off and then turn on the system.



NOTE: The `-m` and `-a` options are applicable only to CMC platforms.



NOTE: If the server is in turned off state, the `powercycle` option power up the server.

- `powerdown` — Powers down the managed system.
- `powerup` — Powers up the managed system.
- `powerstatus` — Displays the current power status of the server (ON or OFF).
- `graceshutdown` — Performs a graceful shutdown of the server. If the operating system on the server cannot shut down completely, then this operation is not performed.
- `-f` — Force the server power management operation.
This option is applicable only for the PowerEdge-VRTX platform. It is used with `powerdown`, `powercycle`, and `hardreset` options.
- `reseat` — Performs virtual reseating of the server. This operation simulates reseating the blade by resetting the iDRAC on that blade. `-f` is required for this operation.



NOTE: The action `powerstatus` is not allowed with `-a` option.

Output

Displays an error message if the requested operation is not completed, or a success message if the operation is completed.

Example

Get Power Status on iDRAC

```
racadm serveraction powerstatus
Server Power Status: ON
```

```
racadm serveraction powercycle
Server power operation successful
```

- Power down the operating system on the server by using the following command:

```
racadm serveraction powerdown
Powers down the managed system
```

- Reseat blade 2 on CMC by using the following command:

```
racadm serveraction -m server-2 reseat -f
Server power operation successful
```

- Turn off the server 16 from CMC by using the following command:

```
racadm serveraction -m server-16 powerdown
Server power operation successful
```

- Get Power Status of blade 16 on CMC by using the following command:

```
racadm serveraction -m server-16 powerstatus
ON
```

- Turn off the server 16 from CMC, when the power is already turned off on that server by using the following command:

```
racadm serveraction -m server-16 powerdown
```

 Server is already powered OFF.
- Power action on all servers by using the following command:

```
racadm serveraction -a powerup
```

set

Description Modifies the value of configuration objects on a device.



NOTE:

- For configuration of staged objects such as BIOS or NIC, commit and reboot job creation must be used to apply the pending values. For more information, see [jobqueue](#).
- To run this subcommand for configuration xml file type, the Lifecycle Controller version 1.1 or later is required.

Synopsis

- `racadm set -f <filename> [--continue]`
- `racadm set <FQDD Alias>.<group>.<index>.<object> <value>`
- `racadm set <FQDD Alias>.<group>.<object> <value>`
- `racadm set <FQDD Alias>.<group>.<index>.<object> <value>`
- `racadm set -f <filename> -t xml -u myuser -p xxx -l <CIFS or NFS share>`
- `racadm set -f <filename> -t <filetype> -u <username> -p <password> -l <CIFS or NFS share> --preview`
- `racadm set -f <filename> -t <filetype> -u <username> -p <password> -l <CIFS or NFS share> -c <FQDD>`
- `racadm set -f <filename> -t <filetype> -u <username> -p <password> -l <CIFS or NFS share> -c <FQDD>, <FQDD>, <FQDD>, <FQDD>`

Input

- `<FQDD Alias>`
- `<group>` — Specifies the group containing the object that must be written.
- `<object>` — Specifies the object name of the value that must be written.
- `<index>` — This option is specified where FQDD Aliases or Groups must be indexed.
- `-f <filename>` — Enables set to configure the device from a specified file. This option is not supported in the Firmware RACADM interface.
- `--continue` — This option is used with `-f` only. If configuration through file is unsuccessful for a group, then configuration continues with the next group in the file. If this option is not used, then configuration stops when it is unsuccessful for a particular group. After the unsuccessful group, the rest of the groups are not configured.
- `-u` — Specifies user name of the remote share from where the file must be imported.
- `-p` — Specifies password for the remote share from where the file must be imported.
- `-l` — Specifies network share location from where the file must be imported.
- `-t` — Specifies the file type that must be imported. Valid values are **xml** and **ini**. These values are case-insensitive. **ini** imports the legacy configuration file. The **ini** file cannot be imported from a remote share. If `-t` is not specified, the ini file format (default) is imported.



NOTE: To import or export **.xml** config files, Lifecycle Controller version 1.1 or later is required.

- **-b** — Specifies the type of shutdown for the host after the import operation completes. The parameters are *Graceful* for graceful and *Forced* for forced shutdown. If this parameter is not specified, graceful shutdown is taken as the default.



NOTE: If the operating system is in use, then the *graceful* shutdown option may time out within 300 seconds. If this operation is unsuccessful, then retry with the *force* option.

- **-w** — Maximum time to wait for the graceful shutdown to occur. The value must be entered in seconds. Minimum accepted value is 300 seconds and the maximum accepted value is 3600 seconds. The default value is 1800 seconds.
- **-s** — Power state of the host when the import operation completes. The parameters are "On" for powered ON and "Off" for powered OFF. If this parameter is not specified, power ON is taken as default.
- **--preview** — Validate the configuration **.xml** file and view the status.

The **--preview** option includes the **Job ID** that is used to verify the status of the file configuration before applying. The **Job ID** can be tracked by running the `racadm jobqueue view -I <JID>` command.



NOTE:

- This option does not restart the system.
- The **-b,-w** options cannot be included with the **--preview** option.
- A scheduled job or pending configuration should not be running while using the **--preview** option.
- **-c** — Specifies the FQDD or list of FQDDs separated by ',' of the components for which the configurations should be imported. If this option is not specified, configuration related to all the components are imported.



NOTE:

To use the **-c** or **--preview** option, the minimum Lifecycle Controller version required is 1.2.

Example

- Configure the iDRAC using a file.
`$ racadm set -f myrac.cfg`
- Configure LCD String.
`$ racadm set system.lcd.LCDUserString test`
- Configure rack name for server.
`$ racadm set system.location.rack.name rack1`
- Configure a RAC from an XML configuration file at a remote CIFS share.
`$ racadm set -f myfile.xml -t xml -u myuser -p xxx -l //10.1.2.3/myshare`
- Configure a RAC from an XML configuration file at a remote NFS share.
`$ racadm set -f myfile.xml -t xml -l 10.1.2.3:/myshare`
- Configure a RAC from an **.xml** file, with a wait time of 10 minutes, shutdown type graceful and end host type power on.
`$ racadm set -f myfile.xml -t xml -b "graceful" -w 600 -s "on"`
- Verify the **.xml** file content located in a remote share.
`racadm set -f temp_Configuration_file -t xml -u Administrator -p xxx -l //192.168.0/xyz --preview`

- Import the xml configuration of the iDRAC component to a CIFS share

```
racadm set -f file -t xml -u myuser -p xxx -l //192.168.0/share
-c iDRAC.Embedded.1
```

setled

Description Sets the state (blinking or not blinking) of the LED on the specified module.
 To blink or unblink the chassis, I/O modules or the CMC, you must have the Debug Administrator privilege. To enable the servers to blink or unblink, you must have the Server Administrator or the Debug Administrator privilege.

To run this subcommand, you must have the Configure iDRAC permission.

Synopsis `racadm setled -l <ledState>`
`racadm setled -m <module> -l <ledState>`

Input

- `-m <module>` — Specifies the module whose LED you want to configure. `<module>` can be one of the following:
 - `server-<n>`, where `n=1–16`
 - `server-<nx>`, where `n=1–8`; `x = a, b, c, d` (lower case)
 - `switch-<n>`, where `n=1–6`
 - `cmc-active`
 - `chassis`
- `-l <ledState>` — Specifies the LED state. The values are:
 - `0` — No Blinking
 - `1` — Blinking

Example

- `racadm setled -m chassis -l 1`
 Sets LED state on Chassis to Blink
- `racadm setled -m server-1 -l 1`
 LED state was set successfully.
- `racadm setled -m server-9 -l 1`
 ERROR: Server in slot 9 is an extension of the server in slot 1.
 **NOTE:** The `setled` command generates an error when run on the extension slot of a multi-slot server.
- From iDRAC stop LED from blinking.

```
racadm setled -l 0
RAC0908: System ID LED blink off.
```
- From iDRAC start LED to blink.

```
racadm setled -l 1
RAC0907: System ID LED blink on.
```

setniccfg

Description Sets the iDRAC or CMC IP address for static and DHCP modes.
To run this subcommand, you must have the **Configure Chassis Administrator** privilege.

 **NOTE:** The command helps to modify network configuration properties.

 **NOTE:** The terms NIC and Ethernet management port may be used interchangeably.

Synopsis

- `racadm setniccfg -d`
- `racadm setniccfg -d6`
- `racadm setniccfg -s <IPv4Address> <netmask> <IPv4 gateway>`
- `racadm setniccfg -s6 <IPv6 Address> <IPv6 Prefix Length> <IPv6 Gateway>`
- `racadm setniccfg -o`
- `racadm setniccfg [-m <module>] -d [-6]`
- `racadm setniccfg [-m <module>] -s <ipAddress> <netmask> <gateway>`
- `racadm setniccfg [-m <module>] -s -6 <ipv6Address> <prefixlen> <gateway>`
- `racadm setniccfg [-m <module>] -v [<vlan_id> <vlan_priority>]`
- `racadm setniccfg [-m chassis] -o`
- `racadm setniccfg -p [-6]`
- `racadm setniccfg [-m <module>] -k [<speed> <duplex>]`
- `racadm setniccfg [-i <slot>] -v [<vlan_id> <vlan_priority>]`

Input

- `-d` — Enables DHCP for the NIC. It is enabled by default.
- `-d6` — Enables AutoConfig for the NIC (default is disabled).
- `-s` — Enables static IP settings. The IPv4 address, netmask, and gateway must be specified. Otherwise, the existing static settings are used. `<ipaddress>`, `<netmask>`, and `<gateway>` must be typed as dot-separated strings.
`racadm setniccfg -s 192.168.0 255.255.255.0 192.168.0`
- `-s6` — Enables static IPv6 settings. The IPv6 address, Prefix Length, and the IPv6 Gateway can be specified.
- `-o` — Enable or disable NIC.
- `-m<module>` — Must be one of the following values:
 - `chassis` — Default state if `-m` is not specified
 - `server-<n>`: where `n=1-16`
 - `server-<nx>`: where `n=1-8`; `x=a-d` (lower case)
 - `switch-<n>`: where `n=1-6`
- `-v` — VLAN settings has following legal values: no arguments imply remove VLAN tag, not compatible with `server-nx` (for example "server-4b") notation
`<vlan_id>`=between 1 and 4000, 4021 and 4094, inclusive
`<vlan_priority>`=between 0 and 7, inclusive.
- `-p` — Disables IPv4(default) or IPv6 protocol.

- **-k** — Option has following legal values: no arguments imply autonegotiate
<speed>=10, 100 <duplex> =half, full.



NOTE:

- **-o, -k, -p**: These options can be specified for chassis only
- **-6**: Sets static IPv6 addresses (with **-s** option). Enables **autoconfig** for IPv6 (with **-d** option) disables IPv6 (with **-p** option) can be specified for chassis or servers.
- **-v**: When performing on a switch, release and renew any DHCP lease on that port for changes to take effect.

Example

- To Configure static IPv4 address for iDRAC NIC

```
racadm setniccfg -s 192.168.0 255.255.255.0 192.168.0
```

 Static IP configuration enabled and modified successfully
- Configure DHCP mode for iDRAC IPv4

```
racadm setniccfg -d
```

 DHCP is now ENABLED
- Configure DHCP mode for iDRAC IPv6

```
racadm setniccfg -d6
```

 DHCP6 is now ENABLED
- Configuration of Speed= 100 Mbps and duplex= full duplex.

```
racadm setniccfg -k 100 full
```
- Configuration of Speed and Duplex to Autonegotiate.

```
racadm setniccfg -k
```
- Configuration of VLAN id and priority of a slot or all blades in a sleeve.

```
racadm setniccfg -i 5 -v 1000 7
```
- Configuration of CMC to a static IPv6 address.

```
racadm setniccfg -m chassis -s -6 2001:DB8::2 64 2001:DB8::1
```
- Configuration of server to use stateless autoconfiguration address.

```
racadm setniccfg -m server-1 -d -6
```
- Configuration of VLAN id and priority for a switch.

```
racadm setniccfg -m switch-1 -v 1000 7
```
- Removal of VLAN configuration from a switch.

```
racadm setniccfg -m switch-1 -v
```
- Configuration of redundant mode

```
racadm setniccfg -r 1
```

sshpkauth

Description

Enables you to upload and manage up to 4 different SSH public keys for each user. You can upload a key file or key text, view keys, or delete keys.

This command has three mutually exclusive modes determined by the options — upload, view, and delete.

To run this subcommand, you must have Configure user privilege.

**NOTE:**

- For DSA keys greater than 2048, use the following racadm command:
`racadm -r 192.168.8.14 -u root -p calvin sshpkauth -i svcacct -k 1 -p 0xffff -f dsa_2048.pub`
- CMC accepts RSA keys up to key strength 4096, but the recommended key strength is 1024.

Synopsis

- `racadm sshpkauth -i svcacct -k <key_index> -p <privilege> -t <PK_key_text>`
- `racadm sshpkauth -i svcacct -k <key_index> -p <privilege> -f <PK_key_text>`
- `racadm sshpkauth -v -i svcacct -k all|<key_index>`
- `racadm sshpkauth -d -i svcacct -k all|<key_index>`

Input

- `-i <user_index>` — Index for the user, it must be svcacct for CMC.
- `-k [<key_index> | all]` — Index to assign the PK key being uploaded. *all* only works with the `-v` or `-d` options. `<key_index>` must be between 1 to 6 or *all* on CMC.
- `-p <privilege>` — Level to give to user for this PK key.
- `-r <cmcIpAddr>` — Specifies the controller's remote IP address.
- `-u <username>` — Specifies the user name.
- `-t <PK_Key_Text>` — Key text for the SSH Public key.
- `-f <filename>` — File containing the key text to upload.



NOTE: The `-f` option is not supported on Telnet or SSH or serial RACADM.

- `-v` — View the key text for the index provided.
- `-d` — Delete the key for the index provided.

Example

- Upload an invalid key to iDRAC User 2 in the first key space using a string.

```
$ racadm sshpkauth -i 2 -k 1 -t "This is invalid key
Text"
```

```
ERROR: Key text appears to be corrupt
```

- Upload a valid key to iDRAC User 2 in the first key space using a file.

```
$ racadm sshpkauth -i 2 -k 1 -f pkkey.key
```

```
Key file successfully uploaded.
```

- Get all keys for User 2 on iDRAC.

```
$ racadm sshpkauth -v -i 2 -k all
```

```
***** User ID 2 *****
```

```
Key ID 1:
```

```
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAzzy
+k2npnKqVEXGXIzo0sbR6JgA5YNbWs3ekoxXV
fe3yJVpVc/5zrrr7XrwKbJAJTqSw8Dg3iR4n3vUaP
+1PHmUv5Mn55Ea6LHUs1AXFqXmOd1Thd
```

wilU2VLw/iRH1ZymUFnut8gggPQgqV2L8bsUaMqb5PooIIvV6hy4isCNJU=
1024-bit RSA, converted from OpenSSH by xx_xx@xx.xx

Key ID 2:

Key ID 3:

Key ID 4:

sslcertdownload

Description Downloads an SSL certificate from iDRAC to the client's file system.

Downloads an SSL certificate from CMC to the client's file system.

To run this subcommand, you must have the **Server Control** privilege.



NOTE: This subcommand is only supported on the remote interface(s).

Synopsis racadm sslcertdownload -f <filename> -t <type>

Input

- -f — Specifies the target filename on local file system to download the certificate.
- -t <type> — Specifies the type of certificate to download, either the CA certificate for Directory Service or the server certificate.
 - 1=server certificate
 - 2=Active Directory

Output Returns 0 when successful and non-zero number when unsuccessful.

Example

- Download server certificate:
racadm -r 192.168.0 -u root -p xxx sslcertdownload -t 1 -f cert.txt
- Download Active Directory certificate:
racadm -r 192.168.0 -u root -p xxx sslcertdownload -t 2 -f ad_cert.txt



NOTE: This command is not supported in the firmware RACADM interface as it is not a file system.

sslcertupload

Description Uploads a custom SSL server or CA certificate for Directory Service from the client to iDRAC.

Uploads a custom SSL server or CA certificate for Directory Service from the client to CMC.

To run this subcommand, you must have the **Server Control** privilege.



NOTE: This subcommand is only supported on the remote interfaces.

Synopsis

```
racadm sslcertupload -t <type> -f <filename> -p <passphrase> [-k
<key file>]
```

```
racadm sslcertupload -f <filename> -t <type>
```

Input

- -t <type> — Specifies the type of certificate to upload. The type of certificate must be:
 - 1 — server certificate
 - 2 — Active Directory
 - 5 — Kerberos Keytab
 - 6 — Server certificate and key
 - 3 — Public Key Cryptography Standards (PKCS) format
- -f — Specifies the source filename in the local file system of the certificate uploaded.
- -k — Specifies optional source filename for private key when using type 6.
- -p — Pass phrase for decrypting the PKCS12 file uploaded.
- -k — Filename of the private key file while using type 6. The private key is generated when the CSR is generated. If the CSR is generated on another server, then it is necessary to upload the private key with the certificate.

Output

```
racadm -r 192.168.0 -u root -p xxx sslcertupload -t 2 -f cert.txt
```

Certificate successfully uploaded to the RAC.

Example

- Uploading a server certificate.


```
racadm -r 192.168.0 -u root -p xxx sslcertupload -t 1 -f
cert.txt
```
- Upload web server certificate and key


```
racadm -r 192.168.0 -u root -p xxx sslcertupload -t 6 -f
cert.txt -k key.txt
```
- Uploading Active Directory Certificate


```
racadm -r 192.168.0 -u root -p xxx sslcertupload -t 2 -f
ad_cert.txt
```

sslcertview

Description

Displays the SSL server or CA certificate that exists on CMC.

Synopsis

```
racadm sslcertview -t <type> [-A]
```

Input

- -t — Specifies the type of certificate to view, either the CA certificate or server certificate.
 - 1=server certificate
 - 2=Active Directory
- -A — Prevents printing headers or labels.



NOTE: If a certificate is generated using comma ',' as one of the parameters for the Organization Name, Common Name, Location Name, or State Name, then this command displays the partial name in the respective fields only up to the comma. The rest of the string is not displayed.



NOTE: For self-signed certificate, the common name includes PQDN (Partially qualified domain name) or FQDN (Fully qualified domain name).

Output

```
racadm sslcertview -t 1
```

Serial Number	01
---------------	----

Subject Information:

Country Code (CC)	US
State (S)	Texas
Locality (L)	Round Rock
Organization (O)	Dell Inc.
Organizational Unit (OU)	Remote Access Group
Common Name (CN)	CMC Default certificate

Issuer Information:

Country Code (CC)	US
State (S)	Texas
Locality (L)	Round Rock
Organization (O)	Dell Inc.
Organizational Unit (OU)	Remote Access Group
Common Name (CN)	CMC Default certificate
Valid From	Jul 7 23:54:19 2011 GMT
Valid To	Jun 4 23:54:19 2021 GMT

```
racadm sslcertview -t 1 -A
00
US
Texas
Round Rock
Dell Inc.
Remote Access Group
CMC default certificate
US
Texas
Round Rock
Dell Inc.
Remote Access Group
CMC default certificate
Jun 7 23:54:19 2011 GMT
Jun 4 23:54:19 2021 GMT
```

sslcertdelete

Description	Command to delete a custom signing certificate from iDRAC. To run this subcommand, you must have the Server Control privilege.
Synopsis	<code>racadm sslcertdelete -t <type></code>
Input	<code>-t</code> — Specifies the type of certificate to delete. The type of certificate is: • 3 — Custom signing certificate
Output	The following information is displayed: • The custom signing certificate was deleted. • The iDRAC resets and may be offline temporarily.
Example	Use Remote RACADM to delete the custom signing certificate. <pre>\$ racadm -r 192.168.0 -u root -p xxx sslcertdelete -t 3</pre>

sslcsrgen

Description	Generates and downloads a certificate signing request (CSR) file to the client's local file system. The CSR can be used for creating a custom SSL certificate that can be used for SSL transactions on CMC. To run this subcommand, you must have the Configure chassis administrator privilege.
Synopsis	• <code>racadm sslcsrgen -g</code>

- `racadm sslcsrigen [-g] [-f <filename>]`
- `racadm sslcsrigen -s`

Input

- `-g` — Generates a new CSR.
- `-s` — Returns the status of a CSR generation process (generation in progress, active, or none).
- `-f` — Specifies the filename of the location, `<filename>`, where the CSR is downloaded.



NOTE:

- If the `-f` option is not specified, the filename defaults to **sslcsr** in your current directory.
- The `-f` option is only supported on the remote interface(s).

Output

If no options are specified, a CSR is generated and downloaded to the local file system as **sslcsr** by default. The `-g` option cannot be used with the `-s` option, and the `-f` option can only be used with the `-g` option.

The `sslcsrigen -s` subcommand returns one of the following status codes:

- CSR was generated successfully.
- CSR does not exist.

Example

- Display current status of CSR operation:

```
racadm sslcsrigen -s
```

or

```
racadm sslcsrigen -g -f c:\csr\csrtest.txt
```
- Generate and download a CSR to local filesystem:

```
racadm -r 192.168.0.120 -u root -p calvin sslcsrigen -g -f csrtest.txt
```



NOTE: Before a CSR can be generated, the CSR fields must be configured in the RACADM `config -g cfgracsecurity` group. For example:

```
racadm config -g cfgracsecurity -o cfgRacSecCsrCommonName cmc-effort.cmc.com
```



NOTE: In Telnet or SSH console, you can only generate and not download the CSR file.

sslkeyupload

Description

Uploads SSL key from the client to iDRAC.

To run this subcommand, you must have the **Server Control** privilege.



NOTE: This option is only supported on the remote interface (s).

Synopsis

```
racadm sslkeyupload -t <type> -f <filename>
```

Input

- `-t` — Specifies the key to upload. The value is:
 - 1 — SSL key used to generate the server certificate.
- `-f` — Specifies the filename of the SSL key that must be uploaded.

Output	If upload is successful, the message <code>SSL key successfully uploaded to the RAC</code> is displayed. if upload is unsuccessful, error message is displayed.
Example	<code>racadm sslkeyupload -t 1 -f c:\sslkey.txt</code>

sslresetcfg

Description	Restores the web-server certificate to factory default and restarts web-server. The certificate takes effect 30 seconds after the command is entered. To run this subcommand, you must have the Chassis Configuration Administrator privilege. To run this subcommand, you must have the Configure iDRAC privilege.
Synopsis	<code>racadm sslresetcfg</code>
Input	N/A
Example	<code>racadm sslresetcfg</code> Certificate generated successfully and webserver restarted.

storage

Description	Allows you to run the commands to control storage arrays. To run this subcommand for configuring the storage properties, you must have the server control permission.  NOTE: RACADM supports inventory of software RAID objects but does not support RAID configuration.
Synopsis	Inventory - To view the help details for get command, run the following command: <code>racadm storage help get</code> - To generate and view information about the inventory of storage root node, run the following command: <code>racadm storage get status</code> - To generate and view information about the inventory of controllers, run the following command: <code>racadm storage get controllers -o</code> <code>racadm storage get controllers -o -p <property names separated by comma></code> - To get the list of controllers, run the following command: <code>racadm storage get controllers</code> - To get the properties of PCIe SSD controller, run the following command: <code>racadm storage get controllers:<PCIeSSD controller FQDD></code>

- To generate and view information about the inventory of batteries, run the following command:

```
racadm storage get batteries -o
```

```
racadm storage get batteries --refkey <controller FQDD's separated by comma>
```

```
racadm storage get batteries --refkey <controller FQDD's separated by comma> -o
```

```
racadm storage get batteries --refkey <controller FQDD's separated by comma> -o -p <property names separated by comma>
```
- To generate and view information about the inventory of virtual disks, run the following command:

```
racadm storage get vdisks
```

```
racadm storage get vdisks --refkey <controller FQDDs separated by comma>
```

```
racadm storage get vdisks --refkey <controller FQDDs separated by comma> -o
```

```
racadm storage get vdisks --refkey <controller FQDDs separated by comma> -o -p <property names separated by comma>
```
- To generate and view information about the inventory of enclosures, run the following command:

```
racadm storage get enclosures -o
```

```
racadm storage get enclosures --refkey <connector FQDDs separated by comma>
```

```
racadm storage get enclosures --refkey <connector FQDDs separated by comma> -o -p <property names separated by comma>
```
- To get the list of enclosures, run the following command:

```
racadm storage get enclosures
```
- To get the properties of the PCIeSSD enclosure, run the following command:

```
racadm storage get enclosures:<PCIeSSD enclosure FQDD>
```
- To generate and view information about the inventory of physical disk drives, run the following command:

```
racadm storage get pdisks
```

```
racadm storage get pdisks -o
```

```
racadm storage get pdisks -o -p <property names separated by comma>
```

```
racadm storage get pdisks --refkey <enclosure/Backplanes FQDDs separated by comma>
```

```
racadm storage get pdisks --refkey <enclosure/Backplanes FQDDs separated by comma> -o
```

```
racadm storage get pdisks --refkey <enclosure/Backplanes FQDDs separated by comma> -o -p <property names separated by comma>
```
- To get the list of physical disks, run the following command:

```
racadm storage get pdisks
```
- To get the properties of PCIeSSD physical disk, run the following command:

```
racadm storage get pdisks:<PCIeSSD FQDD>
```

- To generate and view information about the inventory of fans, run the following command:

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma>
```

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma> -o
```

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma> -o -p <property names separated by comma>
```
- To generate and view information about the inventory of EMMs, run the following command:

```
racadm storage get emms -refkey <enclosure FQDDs separated by comma>
```

```
racadm storage get emms --refkey <enclosure FQDDs separated by comma> -o
```

```
racadm storage get emms --refkey <enclosure FQDDs separated by comma> -o -p <property names separated by comma>
```
- To generate and view information about the inventory of PSU, run the following command:

```
racadm storage get psus -refkey <enclosure FQDDs separated by comma>
```

```
racadm storage get psus --refkey <enclosure FQDDs separated by comma> -o
```

```
racadm storage get psus --refkey <enclosure FQDDs separated by comma> -o -p <property names separated by comma>
```

Configuration

- To view the help details for a configuration command, run the following command:

```
racadm storage help <command>
```

where command can take below values
converttoraid, converttononraid, controllers, clearconfig, createsecuritykey, createvd, deletesecuritykey, deletevd, encryptvd, enclosures, emms, fans, hot-spare, importconfig, ccheck, secureerase, preparetoremove, blink, unblink, cancelcheck, init, modifysecuritykey, psus, pdisks, resetconfig, temp probes, vdisks, and patrolread.
- To create, delete, and secure the virtual disks. To start or stop the consistency check on the specified virtual disk, run the following command:

```
racadm storage createvd:<Controller FQDD> -rl {r0|r1|r5|r6|r10|r50|r60} [-wp {wt|wb|wbfb}] [-rp {nra|ra|ara}] [-ss {1k|2k|4k|8k|16k|32k|64k|128k|256k|512k|1M|2M|4M|8M|16M}] -pdkey:<comma
```

```
separated PD FQDD> [-dcp {enabled|disabled|default}] [-name <VD name>] [-size <VD size>{b|k|m|g|t}] [-T10PIEnable]
```

```
racadm storage init:<VD FQDD> -speed {fast|full}
```

```
racadm storage deletevd:<VD FQDD>
```

```
racadm storage encryptvd:<VD FQDD>
```

```
racadm storage createsecuritykey:<Controller FQDD> -key <Key id> -xxx <passphrase>
```

```
racadm storage modifysecuritykey:<Controller FQDD> -key <Key id>-xxx <old passphrase> -xxx <new passphrase>
```

```
racadm storage deletesecuritykey:<Controller FQDD>
```

```
racadm storage ccheck:<vdisk fqdd>
```

```
racadm storage cancelcheck:<vdisk fqdd>
```

- To convert the physical disk drives and assign or delete a Hot spare. To scan physical disks connected to a controller and detect problem, run the following command:

```
racadm storage converttononraid:<PD FQDD>
```

```
racadm storage converttoraid:<PD FQDD>
```

```
racadm storage hotspare:<Physical Disk FQDD> -assign yes -type dhs -vdkey: <FQDD of VD>
```

```
racadm storage hotspare:<Physical Disk FQDD> -assign yes -type ghs
```

```
racadm storage hotspare:<Physical Disk FQDD> -assign no
```

```
racadm storage patrolread:<controller FQDD> -state start|stop
```



NOTE: Any option specified after the -assign option does not affect deleting the hot-spare.

- To reset, clear, and import the storage configuration to the controller, run the following command:

```
racadm storage importconfig:<Controller FQDD>
```

```
racadm storage resetconfig:<Controller FQDD>
```

```
racadm storage clearconfig:<Controller FQDD>
```

- To start or stop a blink or identify operation on the specified or PCIeSSD device, run the following command:

```
racadm storage blink:<FQDD>
```

```
racadm storage blink:<PCIeSSD FQDD>
```

```
racadm storage unblink:<FQDD>
```

```
racadm storage unblink:<PCIeSSD FQDD>
```

- To prepare the PCIeSSD drive for removal, run the following command:

```
racadm storage preparetoremove <PCIeSSD FQDD>
```

- To perform a secure erase operation on PCIeSSD device, run the following command:

```
racadm storage secureerase:<PCIeSSD FQDD>
```



NOTE: You can also run the command using `raid` in place of the `storage` command.

Input

- `-o` — Specifies the optimized version.
 - `-p` — Specifies the property name.
 - `--refkey` — Specifies the controller or enclosure FQDDs.
 - `-r1` — Sets the storage level.
 - `r0` — storage 0-Striping
 - `r1` — storage 1-Mirroring
 - `r5` — storage 5-Striping with Parity
 - `r6` — storage 6-Striping with Extra Parity
 - `r10` — storage 10-Spanned Striping with Mirroring
 - `r50` — storage 50-Spanned Striping with Parity
 - `r60` — storage 60-Spanned Striping with Extra Parity
 - `-wp{wt|wb|wbf}` — Sets the write policy to Write Through, Write Back, or Write Back Force
 - `-rp {nra|ra|ara}` — Sets the read policy to No Read Ahead, Read Ahead, Adaptive Read Ahead
 - `-ss` — Specifies the stripe size to use.
 - `-pdkey:<PD FQDD list>` — Specifies the physical disk drive to use in the virtual disk.
 - `-dcp` — Sets the Disk Cache Policy in the Virtual Disk.
 - `enabled` — Allows the virtual disk to use the cache.
 - `disabled` — Does not allow the virtual disk to use the cache.
 - `default` — Uses the default cache policy. For SAS drives, use the `disabled` option and for SATA drives, use the `enabled` option by default.
 - `-name <VD name>` — Specifies the name of the virtual disk.
 - `-size <VD size>` — Specifies the size of each virtual disk.
 - `b` — Specifies the size in bytes
 - `k` — Specifies the size in kilobytes
 - `m` — Specifies the size in megabytes
 - `g` — Specifies the size in gigabytes
 - `t` — Specifies the size in terabytes
 - `-sc` — Number of spans in a virtual disk (required for multi-span RAID level).
-  **NOTE:**
- For PERC9, if the value of `controller.SupportRAID10UnevenSpans` is supported, you can enter only 0 for this option while creating RAID level 10. The created RAID10 virtual disk will display the `spandepth` as 1 (default).
 - For other controllers:
 - * The default value for multi-span RAID levels is 2 and for basic RAID level is 1.
 - * For hybrid RAID levels such as RAID10, RAID50, and RAID60, this option is mandatory.
 - * The value for `-sc` option can be 0 only for RAID10.
- `-T10PIEnable` — Creates a virtual disk with protection information.
 - `-key <Key id>` — Specifies the key id.
 - `-passwd <passphrase>` — Specifies the passphrase.
 - `-newpasswd <passphrase>` — Specifies the new passphrase.
 - `-assign {yes | no}` — Assigns or unassigns the disk as a hot-spare.

- `-type { ghs | dhs}` — Assigns a global or dedicated hot-spare.
- `-vdkey:<VD FQDD>` — Assigns the dedicated hot-spare to the specified virtual disk. This option is required for dedicated hot-spare.
- `-state <start|stop>` — `start` value starts a patrol read operation. `stop` value stops a running patrol read operation.



NOTE: To start the operation, the `Controller.PatrolReadMode` must be in Manual mode.

- `-speed` — Specifies the initialization of the Virtual disk.
 - `fast`— Performs fast initialization.
 - `full`— Performs slow initialization.
- `blink: <FQDD>` or `unblink: <FQDD>` — `<FQDD>` can be physical disk drives, virtual disks, or PCIeSSD.
- `<PCIeSSD FQDD>` — Specifies the PCIeSSD FQDD.
- `<PCIeSSD controller|enclosure FQDD>` — Specifies the PCIeSSD controller or enclosure FQDD.
- `preparetoremove` — Specifies the PCIeSSD drive to prepare for removal.



NOTE: Ensure that ISM is installed and running to perform the `preparetoremove` operation.

- `secureerase`— Specifies the PCIeSSD drive to perform the secure erase operation.

Example

Inventory

- To view the help details for `get` command, run the following command:

```
racadm>>storage help get
racadm storage help get
Storage monitoring and inventory of hardware RAID connected to the system.
```

```
Usage :
racadm storage get status
racadm storage help <Object type I/II>
racadm storage get <Object type I>
racadm storage get <Object type I> -current
racadm storage get <Object type I> -pending
racadm storage get <Object type I> -o
racadm storage get <Object type I> -o -p <property names separated by comma>
racadm storage get <Object type I>:<FQDD's of Object type I separated by
comma> -p
<property names separated by comma>
racadm storage get <Object type I>:<FQDD's of Object type I separated by
comma>
racadm storage get <Object type II> --refkey <reference keys separated by
comma>
racadm storage get <Object type II> --refkey <reference keys separated by
comma> -o
racadm storage get <Object type II> --refkey <reference keys separated by
comma> -o
-p <property names separated by comma>
-----
---
```

```
Valid Options:
Object type I      : controllers, batteries, vdisks, pdisks, fans, emms,
temp probes, psus, enclosures.
Object type II     : batteries, vdisks, pdisks, fans, emms, psus,
```

```

tempprobes, enclosures.
-current <optional>: Displays only the current Raid objects from storage.If -
pending not mentioned it will consider as the default option
-pending           : Displays only the Pending Raid Objects from Storage.
-o                 : Displays all the properties of the selected Key or
Object.
-p                 : Displays the property names with filter.
FQDD's             : Displays all the properties of the FQDD's Key.
--refkey           : Displays all the reference key of Object type.
help               : Displays each object type help.
NOTE: Maximum Property names can be specified in -p option is = 10.
NOTE: Maximum FQDD's or refkey can be specified is = 3.
-----
---
```

```

Usage Examples :
racadm storage get controllers
racadm storage get psus
racadm storage get controllers -o
racadm storage get controllers -o -current
racadm storage get controllers -o -pending
racadm storage get enclosures -o
racadm storage get controllers -o -p name,status
racadm storage get vdisks -o -p layout,status
racadm storage get controllers:RAID.INTEGRATED.0
racadm storage get emms:EMM.Slot.0:ENCLOSURE.EXTERNAL.0-0:RAID.INTEGRATED.0
racadm storage get controllers:RAID.INTEGRATED.0 -p status
racadm storage get emms:EMM.Slot.0:ENCLOSURE.EXTERNAL.0-0:RAID.INTEGRATED.0 -
p status
racadm storage get batteries --refkey RAID.INTEGRATED.0
racadm storage get pdisks --refkey ENCLOSURE.EXTERNAL.0-0:RAID.INTEGRATED.0
racadm storage get batteries --refkey RAID.INTEGRATED.0 -o -p
status,state,name
racadm storage get fans --refkey RAID.INTEGRATED.0 -o -p status,speed,name
```

- To generate and view information about the inventory of controllers, virtual disks, storage enclosures, and physical disk drives.

- To generate and view information about the inventory of storage root node.

This command retrieves the status of the inventory for storage root node.

```

racadm storage get status
raid Root Node Status : Ok
```

- To generate and view information about the inventory of controllers connected to the server.

```

racadm storage get controllers
RAID.Integrated.1-1
```

The following command is an optimized version and displays the full controller objects along with their keys:

```

racadm storage get controllers -o
RAID.Integrated.1-1
    Status = Ok
    DeviceDescription = Integrated RAID Controller 1
    RollupStatus = Ok
    Name = PERC H730P Mini (Embedded)
    FirmwareVersion = 25.2.1.0025
    DriverVersion = Information Not Available
    RebuildRate = 45
    BgiRate = 13
    CheckConsistencyRate = 18
    ReconstructRate = 12
    PatrolReadRate = 21
```

PatrolReadMode	= Disabled
PatrolReadState	= Stopped
CheckConsistencyMode	= Normal
LoadBalanceSetting	= Disabled
CopybackMode	= OFF
PreservedCache	= Not Present
CacheMemorySize	= 2048 MB
PersistHotspare	= Disabled
SpindownUnconfiguredDrives	= Disabled
SpindownHotspare	= Disabled
Timeintervalforspindown	= 30 (Minutes)
SecurityStatus	= Security Key Assigned
EncryptionMode	= Supported with LKM
SasAddress	= 0x5B8CA3A0F3073700
PciDeviceId	= 0x5d
PciSubdeviceId	= 0x1f47
PciVendorId	= 0x1000
PciSubvendorId	= 0x1028
PciBus	= 0x3
PciDevice	= 0x0
PciFunction	= 0x0
BusWidth	= Unknown
SlotLength	= Unknown
SlotType	= Unknown
MaxCapableSpeed	= 12.0 Gb/s
LearnMode	= Not supported
T10PICapability	= Capable
SupportRAID10UnevenSpans	= Supported
SupportEnhancedAutoForeignImport	= Supported
EnhancedAutoImportForeignConfig	= Enabled
SupportControllerBootMode	= Supported
ControllerBootMode	= Continue Boot On Error
RealtimeConfigurationCapability	= Capable
CurrentControllerMode	= RAID

The following command displays the filtered property values for all returned controller objects:

```
racadm storage get controllers -o -p Name
RAID.Integrated.1-1
Name = PERC H710P Adapter (Embedded)
```

This operation displays vdisk which has pending operation.

```
racadm storage get vdisks -pending
DISK.Virtual.267386880:RAID.Slot.5-1
```

The following command displays the output for Stash support and full controller objects along with their keys:

```
racadm storage get controllers -o
RAID.Modular.3-1
  Status = Ok
  DeviceDescription = Integrated RAID Controller 1 in
Front Chassis Slot 3
  RollupStatus = Ok
  Name = Slot 3,PERC FD33xS(Controller 1)
  FirmwareVersion = 25.2.2-0001
  RebuildRate = 55
  BgiRate = 55
  CheckConsistencyRate = 55
  ReconstructRate = 55
  PatrolReadRate = 50
  PatrolReadMode = Manual
```

PatrolReadState	= Stopped
CheckConsistencyMode	= Normal
LoadBalanceSetting	= Disabled
CopybackMode	= OFF
PreservedCache	= Not Present
CacheMemorySize	= 2048 MB
PersistHotspare	= Disabled
SpindownUnconfiguredDrives	= Disabled
SpindownHotspare	= Disabled
Timeintervalforspindown	= 30 (Minutes)
SecurityStatus	= Encryption Capable
EncryptionMode	= None
SasAddress	= 0x5B083FE0E3EF5A00
PciDeviceId	= 0x5d
PciSubdeviceId	= 0x1f4d
PciVendorId	= 0x1000
PciSubvendorId	= 0x1028
PciBus	= 0x7
PciDevice	= 0x0
PciFunction	= 0x0
BusWidth	= 8x or x8
SlotLength	= Other
SlotType	= PCI Express Gen3
MaxCapableSpeed	= 12.0 Gb/s
LearnMode	= Not supported
T10PICapability	= Capable
SupportRAIDl0UnevenSpans	= Supported
SupportEnhancedAutoForeignImport	= Supported
EnhancedAutoImportForeignConfig	= Disabled
SupportControllerBootMode	= Supported
ControllerBootMode	= Continue Boot On Error
RealtimeConfigurationCapability	= Capable
CurrentControllerMode	= RAID

The following command displays the output for software RAID and full controller objects along with their keys:

```
racadm storage get controllers -o
RAID.Embedded.1-1
  Status = Unknown
  DeviceDescription = Embedded RAID Controller 1
  RollupStatus = Unknown
  Name = PERC S130 Controller (PCI Slot 0)
  PciSlot = 0
  FirmwareVersion = 4.0.0-0037
  DriverVersion = Information Not Available
  RebuildRate = 0
  BgiRate = 0
  CheckConsistencyRate = 0
  ReconstructRate = 0
  PatrolReadRate = 0
  PatrolReadMode = Not supported
  PatrolReadState = Unknown
  CheckConsistencyMode = Not supported
  LoadBalanceSetting = Not Supported
  CopybackMode = Not supported
  PreservedCache = Not Present
  CacheMemorySize = 0 MB
  PersistHotspare = Disabled
  SpindownUnconfiguredDrives = Disabled
  SpindownHotspare = Disabled
  Timeintervalforspindown = 0 (Minutes)
```

SecurityStatus	= Unknown
EncryptionMode	= None
SasAddress	= Not applicable
PciDeviceId	= 0x8d66
PciSubdeviceId	= 0x61b
PciVendorId	= 0x8086
PciSubvendorId	= 0x1028
PciBus	= 0x0
PciDevice	= 0x0
PciFunction	= 0x0
BusWidth	= Unknown
SlotLength	= Unknown
SlotType	= Unknown
MaxCapableSpeed	= 6.0 Gb/s
LearnMode	= Not supported
T10PICapability	= Not Capable
SupportRAID10UnevenSpans	= Not Supported
SupportEnhancedAutoForeignImport	= Not Supported
EnhancedAutoImportForeignConfig	= Unknown
SupportControllerBootMode	= Not Supported
RealtimeConfigurationCapability	= Incapable
CurrentControllerMode	= Not Supported

- To generate and view information about the inventory of batteries connected to the controller, run the following command:

```
racadm storage get batteries
```

The following command is an optimized version and displays the batteries along with their keys:

```
racadm storage get batteries -o
Battery.Integrated.1:RAID.Integrated.1-1
Name = Battery
DeviceDescription = Battery on Integrated raid Controller 1
Status = Ok
State = Ready
```

The following command displays the filtered property values for all battery objects:

```
racadm storage get batteries -o -p Name
Battery.Integrated.1:RAID.Integrated.1-1
Name = Battery
```

The following command displays all battery keys connected to the controllers:

```
racadm storage get batteries --refkey RAID.Integrated.1-1
Battery.Integrated.1:RAID.Integrated.1-1
```

The following command is an optimized and filtered version:

```
racadm storage get batteries --refkey RAID.Integrated.1-1 -o -p Name
Battery.Integrated.1:RAID.Integrated.1-1
Name = Battery
```

- To generate and view information about the inventory of virtual disks connected to the controller., run the following command:

```
racadm storage get vdisks
Disk.Virtual.0:RAID.Integrated.1-1
```

The following command displays all virtual disk keys connected to the controllers:

```
racadm storage get vdisks --refkey RAID.Integrated.1-1
Disk.Virtual.0:RAID.Integrated.1-1
```

The following command is an optimized and filtered version:

```
racadm storage get vdisks -o -p DeviceDescription,OperationalState
Disk.Virtual.0:RAID.Integrated.1-1
DeviceDescription = Virtual Disk 0 on Integrated raid Controller 1
OperationalState = Not applicable
```

- To generate and view information about the inventory of virtual disks, run the following command:

```
racadm storage get vdisks -o
Disk.Virtual.2:RAID.Integrated.1-1
```

Status	Ok
DeviceDescription	Virtual Disk 2 on Integrated RAID Controller 1
Name	OS
RollupStatus	Ok
State	Online
OperationalState	Not applicable
Layout	Raid-0
Size	278.88 GB
SpanDepth	1
AvailableProtocols	SAS
MediaType	HDD
ReadPolicy	Read Ahead
WritePolicy	Write Back
StripeSize	64K
DiskCachePolicy	Default
BadBlocksFound	NO
Secured	NO
RemainingRedundancy	0
EnhancedCache	Not Applicable
T10PIStatus	Disabled
BlockSizeInBytes	512

- To generate and view information about the inventory of storage enclosures connected to the connector.

This command displays all enclosure objects for the connector FQDD.

```
racadm storage get enclosures -o
Enclosure.Internal.0-1:RAID.Integrated.1-1
```

Status	Ok
State	Ready

DeviceDescription	Backplane 1 on Connector 0 of Integrated RAID Controller 1
RollupStatus	Ok
Name	BP13G+EXP 0:1
BayId	1
FirmwareVersion	0.23
SasAddress	0x500056B31234ABFD
SlotCount	24

The following command displays all enclosure keys connected to the connectors:

```
racadm storage get enclosures --refkey RAID.Integrated.1-1
Enclosure.Internal.0-1:RAID.Integrated.1-1
```

The following command is an optimized and filtered version:

```
racadm storage get enclosures --refkey RAID.Integrated.1-1 -o -p Name
Enclosure.Internal.0-1:RAID.Integrated.1-1
Name = BP12G+EXP 0:1
```

- To generate and view information about the inventory of physical disk drives connected to the enclosure or backplanes, run the following command:

```
racadm storage get pdisks
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1
```

The following command is an optimized version and displays the full controller objects along with their keys:

```
racadm storage get pdisks -o
racadm storage get pdisks
Disk.Bay.23:Enclosure.Internal.0-1:RAID.Integrated.1-1
  Status = Ok
  DeviceDescription = Disk 23 in Backplane 1 of
Integrated RAID Controller 1
  RollupStatus = Ok
  Name = Physical Disk 0:1:23
  State = Online
  OperationState = Not Applicable
  PowerStatus = Spun-Up
  Size = 558.38 GB
  FailurePredicted = NO
  RemainingRatedWriteEndurance = Not Applicable
  SecurityStatus = Not Capable
  BusProtocol = SAS
  MediaType = HDD
  UsedRaidDiskSpace = 136.13 GB
  AvailableRaidDiskSpace = 0.00 GB
  Hotspare = NO
  Manufacturer = SEAGATE
  ProductId = ST9600204SS
  Revision = FM08
  SerialNumber = 6WN09DXN
  PartNumber = CN07T0DW7262211M01Y6A00
  NegotiatedSpeed = 6.0 Gb/s
  ManufacturedDay = 2
  ManufacturedWeek = 4
  ManufacturedYear = 2011
  SasAddress = 0x5000C5003324E93D
```

```

FormFactor                = 2.5 Inch
RaidNominalMediumRotationRate = 10000
T10PICapability           = Not Capable
BlockSizeInBytes          = 512
MaxCapableSpeed            = 6 Gb/s

```

The following command displays the filtered property values for all returned controller objects:

```

racadm storage get pdisks -o -p State
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1
State = Online

```

The following command displays all physical disk drive keys connected to the enclosures:

```

racadm storage get pdisks --refkey RAID.Integrated.1-1
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1

```

The following command is an optimized version and displays all disk objects for the enclosure FQDD:

```

racadm storage get pdisks --refkey Enclosure.Internal.0-1:RAID.Integrated.
1-1 -o
racadm storage get pdisks -o
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1
Status                = Ok
DeviceDescription      = Disk 0 in Backplane 1 of Integrated
raid Controller 1
RollupStatus           = Ok
Name                   = Physical Disk 0:1:0
State                  = Online
OperationState         = Not Applicable
PowerStatus            = Spun-Up
Size                   = 278.88 GB
FailurePredicted       = NO
RemainingRatedWriteEndurance = Not Applicable
SecurityStatus         = Not Capable
BusProtocol            = SAS
MediaType              = HDD
UsedraidDiskSpace      = 278.88 GB
AvailableraidDiskSpace = 0.00 GB
Hotspare               = NO
Manufacturer           = SEAGATE
ProductId              = ST9300605SS
Revision               = CS05
SerialNumber           = 6XP40SA9
PartNumber             = CN0745GC7262228706R7A00
NegotiatedSpeed        = 6.0 Gb/s
ManufacturedDay        = 4
ManufacturedWeek       = 32
ManufacturedYear       = 2012
SasAddress             = 0x5000C5005952386D
FormFactor             = 2.5 Inch
raidNominalMediumRotationRate = 10000
T10PICapability        = Not Capable
BlockSizeInBytes       = 512
MaxCapableSpeed        = 6 Gb/s

```

The following command is an optimized and filtered version:

```

racadm storage get pdisks --refkey Enclosure.Internal.0-1:RAID.Integrated.
1-1 -o -p State
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1
State = Online

```

- To generate and view information about the inventory of fans connected to the enclosure.

The following command displays all the fan keys connected to the enclosures:

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma>
```

The following command displays all the fan objects for the enclosure FQDD:

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma> -o
```

```
racadm storage get fans --refkey <enclosure FQDDs separated by comma> -o -p <property names separated by comma>
```

- To generate and view information about the inventory of EMMs connected to the enclosure.

The following command returns all the EMM keys connected to the enclosures:

```
racadm storage get emms --refkey <enclosure FQDDs separated by comma> enclosure FQDDs separated by comma>
```

The following command is an optimized version and displays all the EMM objects for the enclosure FQDD:

```
racadm storage get emms --refkey <enclosure FQDDs separated by comma> -o
```

The following command is an optimized and filtered version:

```
racadm storage get emms --refkey <enclosure FQDDs separated by comma> -o -p <property names separated by comma>
```

- To generate and view information about the inventory of PSU connected to the enclosure.

The following command displays all the PSUs connected to the enclosures:

```
racadm storage get psus --refkey <enclosure FQDD's separated by comma>
```

The following command is an optimized version and displays all the PSUs objects for the enclosure FQDD:

```
racadm storage get psus --refkey <enclosure FQDD's separated by comma> -o
```

The following command is an optimized and filtered version:

```
racadm storage get psus --refkey <enclosure FQDD's separated by comma> -o -p <property names separated by comma>
```

- To get the list of enclosures and properties of the PCIeSSD enclosure.

- The following command provides the list of enclosures:

```
racadm storage get enclosures  
Enclosure.Internal.0-1:RAID.Integrated.1-1\  
Enclosure.Internal.0-1:PCIeExtender.Slot.3
```

- The following command provides the properties of the specified PCIeSSD enclosure:

```
racadm storage get enclosures:Enclosure.Internal.0-1:PCIeExtender.Slot.3  
Enclosure.Internal.0-1:PCIeExtender.Slot.3  
RollupStatus = Ok  
DeviceDescription = Enclosure.Internal.0-1:PCIeExtender.Slot.3  
Name = PCIe SSD BP 1  
SlotCount = 4  
FirmwareVersion = 0.80
```

- To get the list of physical disks and properties of the specified PCIeSSD physical disk.

The following command provides the list of physical disks:

```
racadm storage get pdisks  
Disk.Bay.0:Enclosure.Internal.0-1:RAID.Integrated.1-1
```

```
Disk.Bay.1:Enclosure.Internal.0-1:RAID.Integrated.1-1
Disk.Bay.2:Enclosure.Internal.0-1:RAID.Integrated.1-1
Disk.Bay.3:Enclosure.Internal.0-1:RAID.Integrated.1-1
Disk.Bay.4:Enclosure.Internal.0-1:RAID.Integrated.1-1
Disk.Bay.5:Enclosure.Internal.0-1:RAID.Integrated.1-1
Disk.Bay.8:Enclosure.Internal.0-1:PCIEExtender.Slot.3
Disk.Bay.6:Enclosure.Internal.0-1:PCIEExtender.Slot.3
Disk.Bay.7:Enclosure.Internal.0-1:PCIEExtender.Slot.3
Disk.Bay.9:Enclosure.Internal.0-1:PCIEExtender.Slot.3
```

The following command provides the properties of the specified PCIeSSD physical disk:

```
racadm storage get pdisks:Disk.Bay.8:Enclosure.Internal.
0-1:PCIEExtender.Slot.3
Disk.Bay.8:Enclosure.Internal.0-1:PCIEExtender.Slot.3
Status = Ok
DeviceDescription = PCIe Solid-State Drive in Slot 8 in Bay 1
Name = Physical Device 8
State = Ready
Size = 745.21 GB
BusProtocol = PCIe
MediaType = SSD
Model = SAMSUNG MZWEI800HAGM 000D3
ProductId = a820
SerialNumber = S1J1NYAD90019
DeviceProtocol = NVMe1.0
Manufacturer = SAMSUNG
PCIENegotiatedLinkWidth = x4
PCIECapableLinkWidth = x4
MaxCapableSpeed = 8 GT/s
NegotiatedSpeed = 8 GT/s
FormFactor = 2.5 Inch
Revision = IPMOED35SAM SAMSUNG MZWEI800HAGM 000D3
RemainingRatedWriteEndurance = 100 %
FailurePredicted = NO
```

To get the list of controllers and properties of the PCIeSSD controller.

The following command provides the list of controllers:

```
racadm storage get controllers
RAID.Integrated.1-1
PCIEExtender.Slot.3
```

The following command provides the properties of the specified PCIeSSD controller:

```
racadm storage get controllers:PCIEExtender.Slot.3
PCIEExtender.Slot.3
RollupStatus = Ok
DeviceDescription = PCIe Extender in PCIe Slot 3
Status = Ok
Name = PCIEExtender 3 (PCI Slot 3)
```

Configuration

- To view the help details for a configuration command, run the following command:

```
admin1-> racadm storage help createvd
Storage configuration of hardware RAID connected to the system.
```

Usage:

```
racadm storage createvd:<Controller FQDD> -rl {r0|r1|r5|r6|r10|r50|r60} [-wp
{wt|wb|wbfb}] [-rp {nra|ra|ara}]
[-ss {1k|2k|4k|8k|16k|32k|64k|128k|256k|512k|1M|2M|4M|8M|16M}]
-pdkey:<comma separated PD FQDD> [-dcp {enabled|disabled|default}]
[-name <VD name>] [-size <VD size>{b|k|m|g|t}] [-T10PIEnable]
```

```

-----
---
Options :
-rl                      : Set the RAID Level
r0                      : RAID 0 - Striping
r1                      : RAID 1 - Mirroring
r5                      : RAID 5 - Striping with Parity
r6                      : RAID 6 - Striping with Extra Parity
r10                     : RAID 10 - Spanned Striping with Mirroring
r50                     : RAID 50 - Spanned Striping with Parity
r60                     : RAID 60 - Spanned Striping with Extra Parity
-wp {wt | wb | wbf}    : Set the write policy to Write Through or Write
Back or Write Back Force
-rp {nra|ra|ara}       : Set the read policy to No Read Ahead, Read Ahead,
Adaptive Read Ahead
-ss                      : Specify the stripe size to use
-pdkey:<PD FQDD list>   : The PDs to use in the VD.
-dcp                    : Set the Disk Cache Policy in the VD
enabled                 : Enabled - Allow the disk to use it's cache
disabled                : Disabled - Disallow the disk from using it's cache
default                 : Default - Use the default cache policy.
SAS Drives - Use Disabled by Default
SATA Drives - Use Enabled by Default
-name <VD name>         : The name to give the VD
-size <VD size>         : The size of the VD
b                       : Specify the size in bytes
k                       : Specify the size in kilobytes
m                       : Specify the size in megabytes
g                       : Specify the size in gigabytes
t                       : Specify the size in terabytes
-sc                     : Spandepth: Number of spans in a virtual disk

Note:
- This option is mandatory for hybrid raid level like RAID 10, RAID50 and
RAID60.
- The default value is one for basic RAID levels.
- If RAID10 Uneven Span is Supported then for RAID10:
-   -sc option will be optional.
-   Will allow only 0 value for this option.
-T10PIEnable           : To create a VD with PI
-----
---
Description :
Create a VD.
-----
---

```

```

Examples :
racadm storage createvd:RAID.Integrated.1-1 -rl r0 -pdkey:Disk.Bay.
0:Enclosure.Internal.0-0:RAID.Integrated.1-1

```

- To create, delete, and secure the virtual disks.
 - The following command creates a virtual disk:


```
racadm storage createvd:RAID.Integrated.1-1 -rl r0 -pdkey:Disk.Bay.
0:Enclosure.Internal.0-0:RAID.Integrated.1-1
```
 - The following command starts an initialization operation on a specified virtual disk:


```
racadm storage init:Disk.Virtual.0:RAID.Integrated.1-1 -speed fast
```
 - The following command deletes the specified virtual disk:


```
racadm storage deletevd:Disk.Virtual.0:RAID.Integrated.1-1
```

- The following command encrypts the specified virtual disk:
`racadm storage encryptvd:Disk.Virtual.0:RAID.Integrated.1-1`

 **NOTE:** Virtual disk must be created with SED.

- The following command assigns security key for controller:
`racadm storage createsecuritykey:RAID.Integrated.1-1 -key <Key id> -xxx
 <passphrase>`

- The following command modifies security key for controller:
`racadm storage modifysecuritykey:RAID.Integrated.1-1 -key <Key id> -
 oldpasswd <oldpassphrase> -newpasswd <newpassphrase>`

- The following command deletes security key for controller:
`racadm storage deletesecuritykey:RAID.Integrated.1-1`

- To convert the physical disk drive and assign hot-spare.

- The following command converts the specified non-storage physical disk drive to a storage capable physical disk drive:

```
racadm storage converttoraid:Disk.Bay.0:Enclosure.Internal.  
0-0:RAID.Integrated.1-1
```

- The following command converts the specified physical disk drive to a non-storage physical disk drive:

```
racadm storage converttononraid:Disk.Bay.0:Enclosure.Internal.  
0-0:RAID.Integrated.1-1
```

- The following command assigns or unassigns a global or dedicated Hot spare:

```
racadm storage hotspare:Disk.Bay.0:Enclosure.Internal.0-0:RAID.Integrated.  
1-1 -assign no
```

```
racadm storage hotspare:Disk.Bay.0:Enclosure.Internal.0-0:RAID.Integrated.  
1-1 -assign yes -type ghs
```

```
racadm storage hotspare:Disk.Bay.0:Enclosure.Internal.0-0:RAID.Integrated.  
1-1 -assign yes -type dhs -vdkey:Disk.Virtual.0:RAID.Integrated.1-1
```

- To reset, clear, and import the storage configuration to the controller.

- The following command imports the current foreign configuration from the controller:

```
racadm storage importconfig:RAID.Integrated.1-1
```

- The following command clears the current foreign configuration from the controller:

```
racadm storage resetconfig:RAID.Integrated.1-1
```

- The following command deletes the virtual disk from the controller:

```
racadm storage clearconfig:RAID.Integrated.1-1
```

 **NOTE:** After a `resetconfig` or `clearconfig` operation, the data cannot be reversed.

- To blink or unblink the PCIeSSD device.

- The following command blinks the specified PCIeSSD device:

```
racadm storage blink:Disk.Bay.8:Enclosure.Internal.0-1:PCIeExtender.Slot.3  
STOR095 : Storage operation is successfully completed.
```

- The following command unblinks the specified PCIeSSD device:

```
racadm storage unblink:Disk.Bay.8:Enclosure.Internal.  
0-1:PCIeExtender.Slot.3  
STOR095 : Storage operation is successfully completed.
```

- To prepare the specified PCIeSSD device for removal, run the following command:

```
racadm storage preparetoremove: Disk.Bay.8:Enclosure.Internal.  
0-1:PCIeExtender.Slot.3
```

STOR089 : Successfully accepted the storage configuration operation.
 To apply the configuration operation, create a configuration job with --
 realtime option.
 To create the required commit jobs, run the jobqueue command.
 For more information about the jobqueue command, enter the RACADM command
 "racadm help jobqueue"

- To perform a secure erase operation on the specified PCIeSSD device, run the following command:

```
racadm storage secureerase: Disk.Bay.8:Enclosure.Internal.  
0-1:PCIeExtender.Slot.3  
RAC1040 : Successfully accepted the storage configuration operation.  
To apply the configuration operation, create a configuration job, and then  
restart the server.  
To create the required commit and reboot jobs, run the jobqueue command.  
For more information about the jobqueue command, enter the RACADM command  
"racadm help jobqueue"
```

swinventory

Description Displays the list of software objects and associated properties installed on a server.



NOTE: Lifecycle Controller and CSIOR may not be enabled to run this subcommand.

Synopsis racadm swinventory

Input racadm swinventory

Output racadm swinventory

```
-----SOFTWARE INVENTORY-----  
ComponentType      = FIRMWARE  
ElementName        = Power Supply.Slot.2  
FQDD               = PSU.Slot.2  
InstallationDate    = 2013-06-11T13:02:46Z  
Current Version    = 07.2B.7D  
-----  
ComponentType      = FIRMWARE  
ElementName        = Integrated Remote Access Controller  
FQDD               = iDRAC.Embedded.1-1  
InstallationDate    = NA  
Rollback Version    = 1.50.50  
-----  
ComponentType      = FIRMWARE  
ElementName        = Integrated Remote Access Controller  
FQDD               = iDRAC.Embedded.1-1  
InstallationDate    = 2013-06-11T13:02:48Z  
Current Version    = 1.50.50
```

systemconfig

Description Enables you to to perform the following:

- Back up and restore for iDRAC and entire system configuration.
- Automatic scheduling of backup operation.
- View the auto backup feature settings.
- Clear the auto backup feature settings.

**NOTE:**

- To run this subcommand, you require the Server Profile Export and Import license.
- Backup operation is licensed (Enterprise) but restore operation is not licensed .
- If Lifecycle Controller is disabled, starting a restore operation is unsuccessful.
- If CSIOR is disabled, the system inventory can have old data during the backup operation. An appropriate warning message is displayed.
- The autobackscheduler can be enabled or disabled. For more information about enable or disable, see [LifecycleController.LCAttributes.autobackup](#)
- The minimum Lifecycle Controller version 1.3 is required .
- The minimum Lifecycle Controller version 2 1.3 is required

Synopsis

- `racadm systemconfig backup -f <filename> <target> [-n passphrase] [-l <location> -u <user name> -p <password>] [--vFlash]`
- `racadm systemconfig restore -f <filename> <target> [-n passphrase ] [--nopreserve] [-l <location> -u <user name> -p <password>] [--vFlash]`
- To create an AutoBackup Schedule.
`racadm systemconfig backup [-f <filename>] <target> [-n <passphrase>] [-l <location> -u <user name> -p <password>] [--vFlash] -time <time> [-dom <DayOfMonth>] [-wom <WeekOfMonth>] [-dow <DayOfWeek>] -rp <repeat> -mb <MaxBackup>`
- To view an AutoBackup Schedule.
`racadm systemconfig getbackupscheduler`
- To delete an AutoBackup Schedule.
`racadm systemconfig clearbackupscheduler`



NOTE: After the parameters are cleared, the AutoBackupScheduler is disabled. To schedule the backup again, enable the AutoBackupScheduler.

Input

- `-n` — Specifies a pass phrase used to encrypt or decrypt the configuration data. The pass phrase must have 8 to 32 characters, and one upper and lower case character.
 **NOTE:** This pass phrase is optional.
- `-l` — Specifies the network share location, can be either CIFS or NFS.
- `-f` — Specifies the image location and the file name.
 **NOTE:** If the file is in a subfolder within the share location, then specify the network share location in the `-l` option and specify the subfolder location and the filename in the `-f` option.
- `-u` — Specifies the user name for the remote share access.
- `-p` — Specifies the password for the remote share access.
- `--vFlash` — Selects vFlash SD as target location for back up.
- `--nopreserve` — Deletes all the virtual disks and configurations.
- `-time`: Specifies the time to schedule an autobackup in HH:MM format. This parameter must be specified.
- `-dom`: Specifies the day of month to schedule an autobackup. Valid values are 1–28, L(Last day) or '*' (default — any day).
- `-wom` : Specifies the week of month to schedule an autobackup. Valid values are 1–4, L(Last week) or '*' (default — any week).
- `-dow`: Specifies the day of week to schedule an autobackup. Valid values are sun, mon, tue, wed, thu, fri, sat, or '*' (default — any day).



NOTE: The `-dom`, `-wom`, or `-dow` option must be included in the command for the autoupdate schedule. The `*` value for the options must be included within `' '` (single quotation mark).

- If the `-dom` option is specified, then the `-wom` and `-dow` options are not required.
- If the `-wom` option is specified, then the `-dow` is required and `-dom` is not required.
- If the `-dom` option is non-`'*'`, then the schedule repeats by month.
- If the `-wom` option is non-`'*'`, then the schedule repeats by month.
- If the `-dom` and `-wom` options are `'*'` and the `-dow` option is non-`'*'`, then the schedule repeats by week.
- If all the three `-dom`, `-wom` and `-dow` options are `'*'`, then the schedule repeats by day.
- `-rp`: Specifies the repeat parameter. This parameter must be specified.
 - If the `-dom` option is specified, then the valid values for `-rp` are 1–12.
 - If the `-wom` option is specified, then the valid values for `-rp` are 1–52
 - If the `-dow` option is specified, then the valid values for `-rp` are 1–366.
- `-mb`: Specifies the maximum backup parameter. For `--vflash` maximum backup is 1.



NOTE:

- Avoid using the `-l`, `-u`, and `-p` options with `--vFlash` option.
- If a backup file is created in a subfolder within the CIFS shared folder, then the subfolder name must be mentioned in the filename option.

Output

Job ID is displayed when the back up or restore operation is successful.

Example

- Back up system to CIFS share and encrypt the data.

```
racadm systemconfig backup -f image.img -l //192.168.0/share -u admin -p xxx -n Encryptp@sswd123
```
- Back up system to NFS share and encrypt the data.

```
racadm systemconfig backup -f image.img -l 192.168.0 :/share -u admin -p xxx -n Encryptp@sswd123
```
- Back up system to vFlash SD.

```
racadm systemconfig backup --vFlash
```
- Restore system from vFlash SD and clear the VD configurations.

```
racadm systemconfig restore -vFlash --nopreserve
```
- Restore system from NFS share without clearing the VD configurations.

```
racadm systemconfig restore -f image.img -l 192.168.0:/share -u admin -p xxx
```
- Create a backup file in a subfolder within the CIFS shared folder.

```
racadm systemconfig backup -f rts/Backup.img -l //192.168.0/CIFSshare -u username -p xxx
```
- To enable or disable AutoBackupScheduler.

```
racadm set lifecyclecontroller.lcattributes.autobackup 1
racadm set lifecyclecontroller.lcattributes.autobackup 0
```
- AutoBackup system to CIFS share and encrypt the data.

```
racadm systemconfig backup -f image.img -l //192.168.0/share -u admin -p xxx -n encryptpasswd123 -time 14:30 -dom 1 -rp 6 -mb 10
```

- AutoBackup system to NFS share and encrypt the data.
`racadm systemconfig backup -f image.img -l 192.168.0:/share -u admin -p xxx -n encryptpasswd123 -time 14:30 -dom 1 -rp 6 -mb 20`
- AutoBackup system to vFlash SD.
`racadm systemconfig backup --vFlash -time 10:30 -wom 1 -dow mon -rp 6 -mb 1`

systemerase

Description Allows you to erase the components to remove the server from use.

Synopsis

- To erase a specific component.
`racadm systemerase <component>`
- To erase multiple components.
`racadm systemerase <component>,<component>,<component>`

Input

- <component> — the valid types of components are:
 - bios
 - diag
 - drvpack
 - idrac
 - lcdata

Examples

- `racadm systemerase bios`
- `racadm systemerase diag`
- `racadm systemerase drvpack`
- `racadm systemerase idrac`
- `racadm systemerase lcdata`
- `racadm systemerase bios,diag,drvpack`
- `racadm systemerase bios,idrac,lcdata`

systemperfstatistics

Description Allows you to view and manage the system performance monitoring operations.

Synopsis

- To view the FQDD's of system performance monitoring sensors
`racadm systemperfstatistics view`
- To list the usage statistics of a specific sensor
`racadm systemperfstatistics <sensor_FQDD>`
- To reset the utilization peaks of system performance monitoring sensors
`racadm systemperfstatistics PeakReset <FQDD>`
- To run the peakreset operation you must have configure iDRAC privilege.

Examples:

- To view the FQDD's of system performance monitoring sensors

```
racadm systemperfstatistics view
[key = iDRAC.Embedded.1#SystemBoardCPUUsageStat]
[key = iDRAC.Embedded.1#SystemBoardIOUsageStat]
[key = iDRAC.Embedded.1#SystemBoardMEMUsageStat]
[key = iDRAC.Embedded.1#SystemBoardSYSUsageStat]
```

- To list the usage statistics of a specific sensor

```
racadm systemperfstatistics iDRAC.Embedded.1#SystemBoardCPUUsageStat
```

Minimum Readings

```
Last Hour    = 0% [At Mon, 05 May 2014 17:13:04]
Last Day     = 0% [At Mon, 05 May 2014 15:59:53]
Last Week    = 0% [At Mon, 05 May 2014 15:59:53]
```

Maximum Readings

```
Last Hour    = 0% [At Thu, 01 Jan 1970 00:00:00]
Last Day     = 0% [At Thu, 01 Jan 1970 00:00:00]
Last Week    = 0% [At Thu, 01 Jan 1970 00:00:00]
```

Average Readings

```
Last Hour    = 0%
Last Day     = 0%
Last Week    = 0%
```

Peak Readings

```
Last Week    0% [At Mon, 05 May 2014 15:58:35]
```

- To reset the peak utilization of a specific sensor

```
racadm systemperfstatistics PeakReset iDRAC.Embedded.
1#SystemBoardCPUUsageStat
RAC1163: The peak utilization value of Out-Of-Band performance monitoring
sensor CPU Usage is successfully reset.
```

techsupreport

- | | |
|--------------------|---|
| Description | <p>Allows you to perform the technical support report operations. The type of operations are:</p> <ul style="list-style-type: none"> • collect — Collects the technical support report data to export. You can specify the various types of logs to be included in the report. <p>This operation generates a Job ID. Use this Job ID to check the status of the collect operation. To run this operation, you must have the Server Control Commands permission.</p> <ul style="list-style-type: none"> • export — Exports the collected Tech Support Report data. To run this subcommand, you must have the Execute Server Control Commands permission. • getupdate time — Gets the timestamp of the last operating system application data collection. • updateosapp — Updates the operating system application data collection. To run this subcommand, you must have the Execute Server Control Commands permission. |
| Synopsis | <ul style="list-style-type: none"> • To perform the technical support report operation by specifying the type of operation. <pre>racadm techsupreport <tech support report command type></pre> |

- To collect the report data.
`racadm techsupreport collect [-t <type of logs>]`
- To export the collected report data.
`racadm techsupreport export -l <CIFS or NFS share> -u <username> -p <password>`
- To get the timestamp of the last operating system application data collection.
`racadm techsupreport getupdatetime`
- To update the operating system application data collection.
`racadm techsupreport updateosapp -t <type of OS App logs>`
- To export the collected report data to local share.
`racadm techsupreport export -f <filename>`

Input

- `-t` — type of logs. You can specify any of the following values separated by a ',' (comma)
 - SysInfo — System Information
 - OSAppNoPII — Filtered OS and Application data
 - OSAppAll — OS and Application data
 - TTYLog — TTYLog data



NOTE:

- For updating the operating system application data collection, enter the value OSAppNoPII or OSAppAll to the `-t` option.
- If no value is specified then system information data is collected.
- To perform the Oslg collection, make sure that ISM is installed and running.
- TTYLog includes PCIeSSD data.
- `-l` — network share location to export the report
- `-u` — user name for the remote share to export the report
- `-p` — password for the remote share to export the report
- `-f` — target filename for the exported log.

Examples

- To collect the system information data.
`racadm techsupreport collect -t <type of logs>`
- To collect the system information and TTYLog data.
`racadm techsupreport collect -t SysInfo,TTYLog`
- To collect the operating system application data.
`racadm techsupreport collect -t OSAppAll`
- To export the collected Tech Support Report, to a CIFS share.
`racadm techsupreport export -l //192.168.0/share -u myuser -p xxx`
- To export the collected Tech Support Report, to an NFS share.
`racadm techsupreport export -l 192.168.0:/share`
- To export the collected Tech Support Report to the local file system.
`racadm techsupreport export -f tsr_report.zip`

testemail

- Description** Sends a test email from CMC to a specified destination. Prior to running the test email command, make sure that the SMTP server is configured.
- The specified index in the **idrac.EmailAlert** group must be enabled and configured properly. For more information, see [iDRAC.EmailAlert](#).
- The specified index in the **cfgEmailAlert** group must be enabled and configured properly. For more information, see [cfgEmailAlert](#).
- Synopsis** `racadm testemail -i <index>`
- Input** `-i <index>` — Specifies the index of the email alert to test.
- Output** Success: Test e-mail sent successfully
Failure: Unable to send test e-mail
- Example** Commands for the **idrac.EmailAlert** group:
- Enable the alert.
`racadm set idrac.EmailAlert.1.Enable`
 - Set the destination email address.
`racadm set idrac.EmailAlert.1.Address user1@mycompany.com`
 - Set the custom message that is sent to the destination email address.
`racadm set idrac.emailalert.1.CustomMsg "This is a test!"`
 - Make sure that the SMTP IP address is configured properly.
`racadm set idrac.remotehosts.SMTPServerIPAddress 192.168.0`
 - View the current email alert settings.
`racadm get idrac.EmailAlert <index>`
where <index> is a number from 1 to 8.
- Example**
- Send a test email to the destination email address configured for index 1
`racadm testemail -i 1`

testtrap

- Description** Tests the RAC's SNMP trap alerting feature by sending a test trap from CMC to a specified destination trap listener on the network.
- To run this subcommand, you must have the **Test Alert** permission.
-  **NOTE:**
- Before you run the `testtrap` subcommand, make sure that the specified index in the `RACADM iDRAC.SNMP.Alert` group is configured properly.
 - The indices of `testtrap` subcommand is co-related to the indices of **iDRAC.SNMP.Alert** group.



NOTE: Before you run the `testtrap` subcommand, make sure that the specified index in the **cfgAlerting** group is configured properly.

- Synopsis** `racadm testtrap -i <index>`
- Input** `-i <index>` — Specifies the index of the trap configuration that must be used for the test. Valid values are from 1 to 4.
- Example**
- Enable the alert.
`racadm set idrac.emailalert.1.CustomMsg`
`racadm set iDRAC.SNMP.Alert.1.Enable`
 - Set the destination email IP address.
`racadm set iDRAC.SNMP.Alert.1.DestIpAddr`
`192.168.0`
 - View the current test trap settings.
`racadm get iDRAC.SNMP.Alert.<index>`
 where <index> is a number from 1 to 8
 - Send a test trap to the destination configured for index 1:
`racadm testtrap -i 1`

testalert

- Description** Tests FQDN supported SNMP trap notifications.
 To run this subcommand, you must have the Test Alert User Access.
- Synopsis** `racadm testalert -i <index>`
- Input** `-i` — Specifies the index of the trap test. *index* must be an integer from 1 to 8 on iDRAC.
- Output** Success: Test trap sent successfully
 Failure: Unable to send test trap
- Example**
- Test a trap with index as 1.
`racadm testalert -i 1`
 Test trap sent successfully.
 - Test a trap that has not been configured yet.
`racadm testalert -i 2`
 ERROR: Trap at specified index is not currently enabled.

traceroute

- Description** Traces network path of the routers as the packets traverse from the system to a destination IPv4 address.
 To run this subcommand, you must have the Administrator privilege.

To run this subcommand, you must have the Execute Diagnostic Commands permission.

Synopsis	<code>racadm traceroute <IPv4 address></code>
Input	IPv4 — Specifies IPv4 address.
Output	<code>traceroute to 192.168.0.1 (192.168.0.1), 30 hops max, 40 byte packets</code> <code>1 192.168.0.1 (192.168.0.1) 0.801 ms 0.246 ms 0.253 ms</code>

traceroute6

Description Traces the network path of routers as the packets traverse from the system to a destination IPv6 address.

To run this subcommand, you must have the Administrator privilege.

To run this subcommand, you must have the Execute Diagnostic Commands permission.

Synopsis	<code>racadm traceroute6 <IPv6address></code>
Input	<IPv6address> – Specifies IPv6 address.
Output	<code>traceroute to fd01::1 (fd01::1) from fd01::3,</code> <code>30 hops max, 16 byte packets</code> <code>1 fd01::1 (fd01::1) 14.324 ms 0.26 ms 0.244 ms</code>

update

Description Allows you to update the firmware of devices on the server. The supported firmware image file types are:

- **.exe** — Windows-based Dell Update Package (DUP)
- **.d7**
- **.usc**
- **.pm**

The supported catalog files are:

- **.xml**
- **xml.gzip**



NOTE: Updating the platforms from the repository is not supported for IPv6.

Synopsis

```
racadm update -f <updatefile>

racadm update -f <updatefile> -l <Remote CIFS Share> -u <username
for CIFS share> -p <password for CIFS share>

racadm update -f <updatefile> -l <Remote NFS Share>

racadm update -f <catalog file> -t <Repository type> -l <Remote
CIFS/NFS Share> -u <username for CIFS share> -p <password for CIFS
share> [-a <FALSE|TRUE>] [--verifycatalog]

racadm update -f <catalog file> -t <Repository type> -l <Remote
CIFS/NFS Share> -u <username for CIFS share> -p <password for CIFS
share>

racadm update -f <catalog file> -t <Repository type> -e <FTP
server with the path to the catalog file> [-a <FALSE|TRUE>] [--
verifycatalog]

racadm update viewreport
```

Input

- -f — Update filename for Windows DUP, .d7, .pm, .pm only.
For update from repository .xml files are allowed.
- If a file name is not specified for repository update, then the **Catalog.xml** is taken as default.
- -f — Update filename for Windows DUP, .d7, .usc, .pm, .pm only.
For update from repository .xml files are allowed.
- If a file name is not specified for repository update, then the **Catalog.xml** is taken as default.
- -u — Specifies user name of the remote share that stores the update file. Specify user name in a domain as domain/username.
- -p — Specifies password of the remote share that stores the update file.
- -l — Specifies network share location that stores the update file. For more information about NFS or CIFS share, see the Usage examples section.
- -a — This option indicates whether or not the server must be restarted after the update from repository operation completes. It takes TRUE and FALSE as options. These options are case-insensitive.
- -t — Type of repository being used for update. The valid options are FTP, CIFS, NFS, TFTP, and HTTP. These options are case-insensitive. If the repository update functionality is invoked, then this option must be run.
- -e — Specifies the server path for the FTP.
- --verifycatalog — Tests the list of DUPs that are applied and generates a report.
- -ph — Specifies the IP address of the proxy server.
- -pp — Specifies the password for proxy credentials.
- -pu — Specifies the user name for proxy credentials.
- -po — Specifies the port for proxy server.
- -pt — Specifies the proxy type. Valid values are HTTP and HTTPS. These values are case-insensitive.



NOTE:

- If the repository has to be through a proxy, then the proxy server address, proxy username and the proxy password must be specified.

- The Lifecycle Controller must be enabled for repository update.

Output

Firmware update job for <filename> is initiated.

This firmware update job may take several minutes to complete depending on the component or firmware being updated. To view the progress of the job, run the `racadm jobqueue view` command.

For repository update command, the output is:

Update from repository operation has been initiated. Check the progress of the operation using "`racadm jobqueue view -i JID_809364633532`" command.

Example

- Upload the update file from a remote CIFS share.
`racadm update -f temp_file.exe -u admin -p xxx -l //1.2.3.4/share`
- Upload the update file from a remote NFS share:
`racadm update -f temp_file.exe -l //1.2.3.4/share`
- Upload the update file from the local file system using Local RACADM.
`racadm update -f temp_file.exe`
- Upload the update file from a remote CIFS share.
`racadm update -f temp_file.exe u admin -p xxx -l //1.2.3.4/share`
- Upload the update file from a remote CIFS share and under a user domain "dom".
`racadm update -f temp_file.exe -u dom/admin -p xxx -l //1.2.3.4/share`
- Upload the update file from a remote NFS share.
`racadm update -f temp_file.exe -l 1.2.3.4:/share`
- Upload the update file from the local file system using Local RACADM.
`racadm update -f temp_file.exe`
- Perform update from a CIFS repository and to apply the updates, reboot the server.
`racadm update -f Catalog.xml -l //192.168.0/Repo -u test -p xxx -a TRUE -t CIFS`
- Generate a comparison report using the available updates in the repository.
`racadm update -f Catalog.xml -l 192.168.0:/Repo -t NFS -a FALSE --verifycatalog`
- Perform update from an FTP repository and to apply the updates, reboot the server.
`racadm update -f Catalog.xml -e 192.168.0/Repo/MyCatalog -a TRUE -t FTP`
- Perform update from an FTP repository through a proxy server.
`racadm update -f Catalog.xml -e 192.168.0/Repo/MyCatalog -a TRUE -ph 192.168.0 -pu prxyuser -pp prxypass -po 80 -pt http -t FTP`
- Perform update from **ftp.dell.com**.
`racadm update -f Catalog.xml.gz -e ftp.dell.com/Catalog -a TRUE -t FTP`
- View the comparison report generated.
`racadm update viewreport`

ComponentType	= Firmware
ElementName	= PERC H730P Mini
FQDD	= RAID.Integrated.1-1
Current Version	= 25.2.1.0025
Available Version	= 25.2.1.0029

- Perform update from an FTP repository with authentication and reboot the server to apply the updates.
`racadm update -f Catalog.xml -e 192.168.11.0/Repo/MyCatalog -u user -p xxx\n -a TRUE -t FTP`
- Perform update from a HTTP repository and restart the server to apply the updates.
`racadm update -f Catalog.xml -e 192.168.0/Repo/MyCatalog -a TRUE -t HTTP`
- Perform update from a TFTP repository and restart the server to apply the updates.
`racadm update -f Catalog.xml -e 192.168.0/Repo/MyCatalog -a TRUE -t TFTP`

usercertupload

Description Uploads a user certificate or a user CA certificate from the client to iDRAC.
 To run this subcommand, you must have the Configure iDRAC permission.



NOTE: This option is only supported on the remote interface (s).

Synopsis `racadm usercertupload -t <type> [-f <filename>] -i <index>`

- Input**
- `-t` — Specifies the type of certificate to upload, either the CA certificate or server certificate.
 - 1=user certificate
 - 2=user CA certificate
 - `-f` — Specifies the filename of the certificate that must be uploaded. If the file is not specified, the **sslcert** file in the current directory is selected.
 - `-i` — Index number of the user. Valid values 2–16.

Output If upload is successful, the message `User certificate successfully uploaded to the RAC`. If unsuccessful, appropriate error message is displayed.

Example To upload user certificate for user 6.
`racadm usercertupload -t 1 -f c:\cert\cert.txt -i 6`

usercertview

Description Displays the user certificate or user CA certificate that exists on iDRAC.

Synopsis `racadm usercertview -t <type> [-A] -i <index>`

- Input**
- `-t` — Specifies the type of certificate to view, either the user certificate or the user CA certificate.
 - 1=user certificate
 - 2=user CA certificate
 - `-A` — Prevents printing headers or labels.
 - `-i` — Index number of the user. Valid values are 2–16.

Example To view user certificate for user 6.

```
racadm usercertview -t 1 -i 6

Serial Number           : 01

Subject Information:
Country Code (CC)       : US
State (S)               : Texas
Locality (L)            : Round Rock
Organization (O)        : Dell Inc.
Common Name (CN)        : iDRAC default certificate

Issuer Information:
Country Code (CC)       : US
State (S)               : Texas
Locality (L)            : Round Rock
Organization (O)        : Dell Inc.
Organizational Unit (OU): Remote Access Group
Common Name (CN)        : iDRAC default certificate

Valid From              : Jun 7 23:54:19 2011 GMT
Valid To                : Jun 4 23:54:19 2021 GMT
```

vflashsd

Description Allows you to initialize or get the status of the vFlash SD card. The initialize operation removes all the existing partitions and resets the card.

The status operation displays the status of the last operation performed on the card.

To run this subcommand, you must have the Access Virtual Media privilege.



NOTE: After you restart the iDRAC, the status of the previous initialize operation is erased.

Synopsis

- racadm vflashsd initialize
- racadm vflashsd status

Input

- **Initialize**— performs initialize operation on SD card.
- **Status** — indicates to view the progress or status report of the initialize operation.

Output If initialization is in progress, the message Initialization of the vFlash SD Card is now in progress is displayed. If unsuccessful, appropriate error message is displayed.

If the status of the last operation performed is successful, the message LastAction Progress Status=====Initialize SD Card 100 % Complete is displayed. If unsuccessful, appropriate error message is displayed.

vflashpartition

Description Manages the partitions on the vFlash SD card.

**NOTE:**

- To run this subcommand, you must have the iDRAC Enterprise license.
- After iDRAC restart, the status of the previous operation performed on the partition(s) is erased.

Synopsis

```
racadm vflashpartition <create | delete | status | list> -i<index>
-o<label> -e<emulation type> -s<size> -f<format type> -t<partition
type> -l<path> -u<user> -p<password> -a
```

Input

- -o — Label that is displayed when the partition is mounted on the operating system. This option must be a string of upto six alphanumeric characters. VFLASH is the only accepted volume label for non-Dell SD card.
- -e — Emulation type must be either floppy, CD, DVD, or HDD.
- -s — Partition size in MB.
- -f — Format type for the partition based on the type of the file system. Valid options are raw, ext2, ext3, fat16, and fat32.
- -t — Create a partition of the following type:
 - empty — Creates an empty partition
 - image — Creates a partition using an image relative to iDRAC.



NOTE: Creating an empty partition with emulation type as floppy with ext2 format type by using the Telnet session might result in a state where the partition creation status is shown as zero. If this happens then it is recommended to remove the SD card and format it in order to reuse.

Creation of a partition may be unsuccessful if:

- The network share is not reachable.
- The user name or password provided is not correct.
- The file provided does not exist.
- The memory available on the SD card is lesser than size of the image file.
- -l — Specifies the remote path relative to iDRAC.
- -u — User name for accessing the remote image.
- -p — Password for accessing the remote image.
- -a — Display the status of operations on all the existing partitions.
- list — Lists the existing partitions and its properties.

Example

- Create a 20MB empty partition.

```
racadm vflashpartition create -i 1 -o Drive1 -e hdd -t empty -f
fat16 -s 20
```

- Create a partition from a remote image.

```
racadm vflashpartition create -i 1 -o Drive1 -e cddvd -t image -
l
//ipaddress/sharefolder/isoimage.iso -u username -p xxx
```

A new partition is created. By default, the created partition is read-only. This command is case-sensitive for the image filename extension. If the filename extension is in uppercase, for example FOO.ISO instead of FOO.iso, then the command returns a syntax error.

**NOTE:**

- This feature is not supported in Local RACADM.
- Creating vFlash partition from an image file on the CFS or NFS IPv6 enabled network share is not supported.

- Delete a partition.
`racadm vflashpartition delete -i 1`
- Status of operation on partition 1.
`racadm vflashpartition status -i 1`
- Status of all the existing partitions.
`racadm vflashpartition status -a`
- List all the existing partitions and its properties.
`racadm vflashpartition list`

vmdisconnect

Description Allows you to end another Virtual Media session. After the session ends, the web-based interface reflects the correct connection status.

Enables an iDRAC user to disconnect all active Virtual Media sessions. The active Virtual Media sessions are displayed on iDRAC web-based interface or by running the RACADM subcommands `remoteimage` or `getssninfo`.

To run this subcommand, you must have the Access Virtual Media permission.

Synopsis `racadm vmdisconnect`

iDRAC Property Database Group and Object Descriptions

The iDRAC property database contains the configuration information for iDRAC. Associated object is organizing data, and object group is organizing object. The IDs for the groups and objects that the property database supports are listed in this section for iDRAC Enterprise on Blade Servers and iDRAC Enterprise or Express on Rack and Tower Servers.

To configure iDRAC, use the group and object IDs with the RACADM subcommands.

 **NOTE:** You can configure a setting that does not have a hash symbol (#) as the prefix in its output name. To modify a configurable object, use the `-o` option.

 **NOTE:** Racadm sets the value of objects without performing any functional validation on them. For example, RACADM allows you to set the Certificate Validation object to 1 with the Active Directory object set to 0, even though Certificate Validation can happen only if Active Directory is enabled. Similarly, the **cfgADSSOEnable** object can be set to 0 or 1 even if the **cfgADEnable** object is 0, but it takes effect only if Active Directory is enabled.

All string values are limited to displayable ASCII characters, except where otherwise noted.

Displayable Characters

Displayable characters include the following set:

abcdefghijklmnopqrstuvwxyz

ABCDEFGHIJKLMNOPQRSTUVWXYZ

0123456789~`!@#\$%^&*()_+={ } | \ : " ; ' < > , . ? /

The following table provides an overview of the object groups applicable for iDRAC Enterprise on Blade Servers and iDRAC on Rack and Tower Servers.

Subcommand	iDRAC on Blade Servers	iDRAC on Rack and Tower Servers
idRacInfo	Yes	Yes
cfgStaticLanNetworking		
cfgRemoteHosts	Yes	Yes
cfgUserAdmin	Yes	Yes

Subcommand	iDRAC on Blade Servers	iDRAC on Rack and Tower Servers
cfgEmailAlert	Yes	Yes
cfgSessionManagement	Yes	Yes
cfgSerial	Yes	Yes
cfgOobSnmp	Yes	Yes
cfgRacTuning	Yes	Yes
ifcRacManagedNodeOs	Yes	Yes
cfgRacVirtual	Yes	Yes
cfgServerInfo	No	Yes
cfgActiveDirectory	Yes	Yes
cfgLDAP	Yes	Yes
cfgLdapRoleGroup	Yes	Yes
cfgStandardSchema	Yes	Yes
cfgThermal		
cfgIpmiSol	Yes	Yes
cfgIpmiLan	Yes	Yes
cfgIpmiPetIpv6	Yes	Yes
cfgIpmiPef	Yes	Yes
cfgIpmiPet	Yes	Yes
cfgUserDomain	Yes	Yes
cfgServerPower	Yes	Yes
cfgServerPowerSupply	No	Yes
cfgIPv6LanNetworking	Yes	Yes
cfgIpv6StaticLanNetworking		
cfgIPv6URL	Yes	Yes
cfgIpmiSerial	No	Yes
cfgSmartCard	Yes	Yes

Subcommand	iDRAC on Blade Servers	iDRAC on Rack and Tower Servers
cfgNetTuning	No	Yes
cfgSensorRedundancy	No	Yes
cfgVFlashSD	Yes	Yes
cfgVFlashPartition	Yes	Yes
cfgLogging	Yes	Yes
cfgRacSecurity	Yes	Yes

idRacInfo

This group contains display parameters to provide information about the specifics of iDRAC being queried. One instance of the group is allowed.

This group contains display parameters to provide information about the specifics of CMC being queried. One instance of the group is allowed. Use this object with the **getconfig** subcommand.

To use this object, you must have the CMC Login User privilege.

The following sections provide information about the objects in the **idRACInfo** group.

idRacProductInfo (Read Only)

Description	A text string that identifies the product.
Legal Values	A string of up to 63 ASCII characters.
Default	iDRAC – Integrated Dell Remote Access Controller
Default	Chassis Management Controller

idRacDescriptionInfo (Read Only)

Description	A text description of the RAC type.
Legal Values	A string of up to 255 ASCII characters.
Default	This system component provides a complete set of remote management functions for Dell PowerEdge servers.

idRacVersionInfo (Read Only)

Description	String containing the current product firmware version
Legal Values	A string of up to 63 ASCII characters.
Default	The current version number.

idRacBuildInfo (Read Only)

Description	String containing the current RAC firmware build version.
Legal Values	A string of up to 16 ASCII characters.
Default	The current iDRAC firmware build version.
Default	The current CMC firmware build version.

idRacName (Read Only)

Description	A user-assigned name to identify this controller.
Legal Values	A string of up to 15 ASCII characters.
Default	iDRAC
Default	CMC

iDRAC Type (Read Only)

Description	Identifies the remote access controller type.
Legal Values	Product ID
Default	9 • For 10G iDRAC: 8 • For 11G iDRAC6 on Rack and Tower Servers: 10 • For 11G iDRAC6 Enterprise on Blade Servers: 11 • For 12G iDRAC on Rack and Tower Servers: 16 • For 12G iDRAC Enterprise on Blade Servers: 17

Example

```
racadm getconfig -g idRacInfo

# idRacType=8
# idRacProductInfo=Chassis Management Controller
# idRacDescriptionInfo=This system component provides a complete
set of remote management functions for blade servers
```

```
# idRacVersionInfo=P21
# idRacBuildInfo=200708301525
# idRacName=CMC-1

racadm getconfig -g idRacInfo

# idRacType=16
# idRacProductInfo=Integrated Dell Remote Access Controller
# idRacDescriptionInfo=This system component provides a complete set of remote
management functions for Dell PowerEdge Servers
# idRacVersionInfo=1.06.06
# idRacBuildInfo=15
# idRacName=idrac-GSRS3V1
```

cfgStaticLanNetworking

This group contains parameters to configure the device NIC for IPv4.

 **NOTE:** A few objects in this group may require the device NIC to be reset, that may cause a brief loss in connectivity.

cfgNicStaticEnable (Read or Write)

Description Enables or disables the NIC.

Legal Values

- 0 — Disabled
- 1 — Enabled

Default 1 — Enabled

 **NOTE:** If this object is modified, then the object **cfgNicEnable** is also modified.

cfgNicStaticIPv4Enable (Read or Write)

Description Enables or disables the IPv4 stack.

Legal Values

- 0 — Disabled
- 1 — Enabled

Default 1 — Enabled

 **NOTE:** If this object is modified, then the object **cfgNicIPv4Enable** is also modified.

cfgNicStaticIpAddress (Read or Write)

Description Returns or sets the current IPv4 address.

 **NOTE:** Only set the current IPv4 address if **cfgNicUseDhcp** is set to 0(false).

Legal Values Any Valid IPv4 address

Default 192.168.0

cfgNicStaticUseDhcp (Read or Write)

Description Specifies whether DHCP is used to configure the IPv4 network.

Legal Values

- 0 — IP Address, subnet mask and gateway are configured on the device.
- 1 — IP Address, subnet mask and gateway are assigned from the DHCP server.

Default 0 — Do not use DHCP

 **NOTE:** If this object is modified, then the object `cfgNicUseDhcp` is also modified.

cfgNicStaticNetmask (Read or Write)

Description Returns or sets the static IPv4 Netmask.

 **NOTE:** Only set the current IPv4 netmask, if `cfgNicUseDhcp` is set to 0 (false).

Legal Values Any Valid IPv4 Netmask

Default 255.255.255.0

cfgNicStaticGateway (Read or Write)

Description Returns or sets the static IPv4 address.

Legal Values Any Valid IPv4 address

Default 192.168.0.120

cfgDNSStaticServersFromDHCP (Read or Write)

Description Specifies the DNS server static IP addresses.

Legal Values

- DNS Addresses are configured on the Device
- DNS Addresses are assigned via DHCP

Default 0

cfgDNSStaticServer1 (Read or Write)

Description Specifies the IP address for DNS server 1.

 **NOTE:** This property is only valid if `cfgDNSServersFromDHCP` is set to 0 (FALSE).

Legal Values

- 0 — IP Address, subnet mask and gateway are configured on the device.
- 1 — IP Address, subnet mask and gateway are assigned from the DHCP server.

Default 0 — Do not use DHCP

 **NOTE:** If this object is modified, then the object **cfgNicUseDhcp** is also modified.

cfgDNSStaticServer2(Read or Write)

Description Specifies the static IP address for DNS server 2.

Legal Values A Valid IPv4 Address

Default 0.0.0.0

cfgDNSStaticDomainName(Read or Write)

Description The DNS static domain name.

Legal Values String of up to 254 ASCII characters. Characters are restricted to alphanumeric, hyphens and periods. At least one of the characters must be alphabetic.

 **NOTE:** Microsoft Active Directory only supports Fully Qualified Domain Names (FQDN) of 64 characters or fewer lengths.

Default Null

cfgDNSStaticDomainNameFromDHCP (Read or Write)

Description Specifies the device DNS static domain name.

Legal Values

- 0 — Do not use DHCP to get the Domain Name
- 1 — Use DHCP to get the Domain Name

Default 0 — Disabled

cfgRemoteHosts

This group provides properties that allow configuration of the SMTP server for email alerts.

This group enables/disables and configures firmware updates, NTP, remote syslogging and SMTP email alerting.

To apply this setting to iDRAC, use the `-m` option.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

The following sections provide information about the objects in the **cfgRemoteHosts** group.

cfgRhostsFwUpdateTftpEnable (Read or Write)

Description Enables or disables firmware update from a network TFTP server.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

cfgRhostsFwUpdateIpAddr (Read or Write)

Description Specifies the network TFTP server IPv4 or IPv6 address that is used for TFTP firmware update operations.

Legal Values A string representing a valid IPv4 or IPv6 address. For example, 192.168.0.61

Default For IPv4, it is 0.0.0.0

cfgRhostsFwUpdatePath (Read or Write)

Description Specifies TFTP path where firmware image file exists on the TFTP server. The TFTP path is relative to the TFTP root path on the TFTP server.



NOTE: The server may still require you to specify the drive (for example, C:).

Legal Values A string with a maximum length of 255 ASCII characters.

Default <blank>

cfgRhostsSmtpServerIpAddr (Read or Write)

Description The IPv4 or IPv6 address of the network SMTP server.

The SMTP server transmits email alerts from iDRAC if the alerts are configured and enabled.

The SMTP server transmits email alerts from CMC if the alerts are configured and enabled.

Legal Values A string representing a valid SMTP server IPv4 or IPv6 address. For example: 192.168.0.

Default For IPv4, it is 0.0.0.0

localhost.localdomain

cfgRhostsSyslogEnable (Read or Write)

Description To allow the RAC and SEL logs to be written to up to three remote syslog servers
Enables or disables remote syslog.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgRhostsSyslogPort (Read or Write)

Description Remote syslog port number to use for writing the RAC and SEL logs to a remote syslog server.
This setting takes effect only if the `cfgRhostsSyslogEnable` parameter is set to 1(enabled).

Legal Values 10–65535



NOTE: The following port numbers are reserved and cannot be used: 21, 68, 69, 123, 161, 546, 801, 4096, 5988, 5989, 6900, 9000, 60106.

Default 514

cfgRhostsSyslogServer1 (Read or Write)

Description To store the RAC and SEL logs specify the first of three possible remote syslog servers.
This property is only valid if `cfgRhostsSyslogEnable` is set to 1 (enabled).

Legal Values String from 0 to 63 characters.
Valid host name or IPv4 or IPv6 address.

Default <blank>

cfgRhostsSyslogServer2 (Read or Write)

Description To store the RAC and SEL logs Specify the second of three possible remote syslog servers. This property is only valid if `cfgRhostsSyslogEnable` is set to 1 (enabled).

Legal Values String from 0 to 63 characters.
Valid host name or IPv4 or IPv6 address.

Default <blank>

cfgRhostsSyslogServer3 (Read or Write)

Description	To store the RAC and SEL logs specify the third of three possible remote syslog servers. This property is only valid if <code>cfgRhostsSyslogEnable</code> is set to 1(enabled).
Legal Values	String from 0 to 63 characters. Valid host name or IPv4 or IPv6 address.
Default	<blank>

cfgUserAdmin

This group provides configuration information about the users allowed to access iDRAC through the available remote interfaces.

This group provides configuration information about the users allowed to access CMC through the available remote interfaces.

Up to 16 instances of the user group are allowed. Each instance represents the configuration for an individual user.

 **NOTE:** In the current CMC firmware version, the objects `cfgUserAdminEnable` and `cfgUserAdminPrivilege` are interrelated; changing the value of one property causes the value of the other property to change. For example, if a user does not have login privilege, the user is disabled by default. When you enable the user by changing the value of the `UserAdminEnable` to 1, the right-most digit of the `UserAdminPrivilege` also becomes 1. On the other hand, if you change the right-most digit of the `UserAdminPrivilege` to 0, the value of the `UserAdminEnable` becomes 0.

Use this object with the **config** or **getconfig** subcommands. To use the command as follows: `-i <index group>`, supply an index group number

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the `-o` option.

The following sections provide information about the objects in the `cfgUserAdmin` group.

cfgUserAdminIndex (Read Only)

Description	The unique index of a user. The index number is used to specify a unique group name. Only valid for indexed groups.
Legal Values	This parameter is populated based on the existing instances. The parameter specifies decimal integer 1–16.
Default	<index of the instance>

cfgUserAdminIpmiLanPrivilege (Read or Write)

Description The maximum privilege on the IPMI LAN channel.
This object property is specific to iDRAC.

Legal Values

- 2(User)
- 3(Operator)
- 4(Administrator)
- 15(No access)

Default

- 4(User 2)
- 15(All others)

cfgUserAdminIpmiSerialPrivilege (Read or Write)

Description The maximum privilege on the IPMI LAN channel.
This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

Legal Values

- 2 (User)
- 3 (Operator)
- 4 (Administrator)
- 15 (No access)

Default

- 4 (User 2)
- 15 (All others)

cfgUserAdminPrivilege (Read or Write)

Description This property specifies the role-based authority privileges allowed for the user. The value is represented as a bit mask that allows for any combination of privilege values. The table below describes the user privilege bit values that can be combined to create bit masks.

Legal Values 0x00000000 to 0x000001ff, and 0x0
0x00000000-0x0000fff, and 0x0

Default 0x00000000

Example

```
racadm getconfig -g cfgUserAdmin -i 1  
  
# cfgUserAdminIndex=1  
cfgUserAdminEnable=1  
cfgUserAdminUserName=root  
# cfgUserAdminPassword=***** (Write-Only)  
cfgUserAdminPrivilege=0x00000fff
```

The following table lists the bit masks for user privileges.

iDRAC Specific User Privilege	Privilege Bit Mask
Log in to iDRAC	0x00000001
Configure iDRAC	0x00000002
Configure Users	0x00000004
Clear Logs	0x00000008
Execute Server Control Commands	0x00000010
Access Virtual Console	0x00000020
Access Virtual Media	0x00000040
Test Alerts	0x00000080
Execute Debug Commands	0x00000100
CMC Specific User Privilege	
CMC Login User	0x00000001
Chassis Configuration Administrator	0x00000002
User Configuration Administrator	0x00000004
Clear Logs Administrator	0x00000008
Chassis Control Administrator	0x00000010

Super User	0x0000020
Server Administrator	0x0000040
Test Alert User	0x0000080
Debug Command Administrator	0x0000100
Fabric A Administrator	0x0000200
Fabric B Administrator	0x0000400
Fabric C Administrator	0x0000800

Examples

The following table provides sample privilege bit masks for users with one or more privileges.

User Privileges	Privilege Bit Mask
The user is not allowed to access iDRAC or CMC	0x00000000
The user may only log in to iDRAC or CMC and view iDRAC or CMC and server configuration information.	0x00000001
The user may log in to iDRAC or CMC and change configuration.	$0x00000001 + 0x00000002 = 0x00000003$
The user may log in to iDRAC, access Virtual Media,	$0x00000001 + 0x00000040 + 0x00000080 = 0x000000C1$

and Virtual
Console.

cfgUserAdminUserName (Read or Write)

Description The name of the user for this index. Writing a string of double quotation mark (" ") disables the user. The string cannot contain / (forward slash), \ (backward slash), . (period), @ (at symbol), quotation marks, ; (semicolon), or ' (backward quotation mark).



NOTE: This property value must be unique among user names.

Legal Values A string of up to 16 ASCII characters.

Default

- root (User 2)
- <blank> (All others)

cfgUserAdminPassword (Write Only)

Description The password for this user. User passwords are encrypted and cannot be seen or displayed after the property is written.

Legal Values A string of up to 20 ASCII characters.

Default *****

cfgUserAdminEnable (Read or Write)

Description Enables or disables an individual user.



NOTE: You can enable a user for a given index, only if you set the password for the same user.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1 (User 2), 0 (All others)
0

cfgUserAdminSolEnable (Read or Write)

Description Enables or disables Serial Over LAN (SOL) user access for the user.
This object property is specific to iDRAC.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgEmailAlert

This group contains parameters to configure iDRAC email alerting capabilities. Up to four instances of this group are allowed.

This group contains parameters to configure CMC email alerting capabilities. Up to four instances of this group are allowed.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privileges.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the `-o` option.

The following sections provide information about the objects in the **cfgEmailAlert** group.

cfgEmailAlertIndex (Read Only)

Description	The unique index of an alert instance.
Legal Values	1–4
Default	<instance>

cfgEmailAlertEnable (Read or Write)

Description	Enables or disables the alert instance.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgEmailAlertAddress (Read or Write)

Description	Specifies the destination email address for email alerts, for example, <code>user1@company.com</code> .
Legal Values	Email address format, with a maximum length of 64 ASCII characters.
Default	<blank>

cfgEmailAlertCustomMsg (Read or Write)

Description	Specifies a custom message that forms the subject of the alert.
--------------------	---

This object property is specific to iDRAC.

Legal Values A string of up to 32 characters

Default <blank>

cfgEmailAlertEmailName (Read Only)

Description Specifies name or other identifier associated with the destination email address. The email name can refer to an individual, group, location, department, and so on.
This object property is specific to CMC.

Legal Values A string of up to 32 characters

Default <blank>

Example

```
racadm getconfig -g cfgEmailAlert -i 2

# cfgEmailAlertIndex=1
cfgEmailAlertEnable=1
cfgEmailAlertAddress=kfulton@dell.com
cfgEmailAlertName=Kevin Fulton
```

cfgSessionManagement

This group contains parameters to configure the number of sessions that can connect to iDRAC or CMC. One instance of the group is allowed. Displays current settings for and configures the idle timeout properties for web server, Telnet, SSH and RACADM sessions. Changes to idle time out settings take effect at the next login. To disable the idle time out property for a connection, set this property to 0.

To apply this setting to iDRAC, use the `-m` option

The following sections provide information about the objects in the **cfgSessionManagement** group.

cfgSsnMgtRacadmTimeout (Read or Write)

Description Defines the `idle` timeout in seconds for the Remote RACADM interface. If a remote RACADM session remains inactive for more than the specified sessions, the session closes.

Legal Values 10–1920

Default 60
30 minutes

Example

```
racadm getconfig -g cfgSessionManagement cfgSsnMgtWebserverTimeout=0
cfgSsnMgtTelnetIdleTimeout=0
```

cfgSsnMgtSshIdleTimeout=1800
cfgSsnMgtRacadmTimeout=0

cfgSsnMgtConsRedirMaxSessions (Read or Write)

Description	Specifies the maximum number of Virtual Console sessions allowed on iDRAC.
Legal Values	1–4
Default	4

cfgSsnMgtWebserverTimeout (Read or Write)

Description	Defines the web server time-out. This property sets the amount of time (in seconds) that a connection is allowed to remain idle (there is no user input). The session is canceled if the time limit exceeds this property. Changes to this setting do not affect the current session. Log out and log in again to make the new settings effective. An expired web server session logs out the current session.
Legal Values	60–10800
Default	1800

cfgSsnMgtSshIdleTimeout (Read or Write)

Description	Defines the secure shell idle time-out. This property sets the amount of time (in seconds) that a connection is allowed to remain idle (there is no user input). The session is canceled if the time limit exceeds this property. Changes to this setting do not affect the current session; log out and log in again to make the new settings effective. An expired secure shell session displays the following error message: • For iDRAC on Rack and Tower Servers: Connection timed out • For iDRAC Enterprise on Blade Servers: Session timed out. Closing the session. After the message is displayed, the system returns to the shell that generated the Secure Shell session.
Legal Values	• 0 —(No timeout) • 60–10800  NOTE: If 0 (no timeout), the network connection does not send alive packets to probe the client. Otherwise, keep alive packets are sent to guarantee that the client is responding.
Default	• For iDRAC on Rack and Tower Servers: 300 • For iDRAC Enterprise on Blade Servers: 1800 1800

cfgSsnMgtTelnetIdleTimeout (Read or Write)

Description Defines the Telnet idle timeout. This property sets the amount of time in seconds that a connection is allowed to remain idle (there is no user input). The session is canceled if the time limit exceeds this property. Changes to this setting do not affect the current session (you must log out and log in again to make the new settings effective.)

An expired Telnet session displays the following error message:

- For iDRAC on Rack and Tower Servers: `Connection timed out`
- For iDRAC Enterprise on Blade Servers: `Session timed out. Closing the session.`

After the message is displayed, the system returns you to the shell that generated the Telnet session.

Legal Values

- 0 (No timeout)
- 60–10800



NOTE: If 0 (no timeout is specified), the network connection does not send alive packets to probe the client. Otherwise, keep alive packets are sent to guarantee that the client is responding.

Default

- For iDRAC on Rack and Tower Servers: 300
- For iDRAC Enterprise on Blade Servers: 1800

1800

cfgSerial

This group contains configuration parameters for the serial configuration. One instance of the group is allowed.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

The following sections provide information about the objects in the **cfgSerial** group.



NOTE: The **cfgSerial** object group is applicable for iDRAC Enterprise on Blade Servers for only two properties — `cfgSerialTelnetEnable=1` and `cfgSerialSshEnable=1`.

cfgSerialBaudRate (Read or Write)

Description Sets the baud rate on the serial port.

Legal Values 9600, 28800, 57600, 115200
2400, 4800, 9600, 19200, 28800, 38400, 57600, 115200

Default 57600

cfgSerialConsoleEnable (Read or Write)

Description Enables or disables the serial console interface.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default

0

1

cfgSerialConsoleQuitKey (Read or Write)

Description This key or key combination terminates Virtual Console text for iDRAC when using the **console com2** command.

This key or key combination terminates the Virtual Console text for CMC .

Legal value: String of up to 4 characters

^ follows any alphabet (a-z, A-Z) ^ follows the listed special characters: [] \ ^ _

This key specifies the character that ends the serial text console connect (or **racadm connect**) command.

 **NOTE:** The CTRL key is represented by using the ^ (carat) character.

 **NOTE:** The CTRL key does not generate a character by itself, but must be struck simultaneously with another key to generate a character.

For example, striking both the CTRL key and the \ key simultaneously (rather than sequentially) is denoted as ^\.

Configuration options: The value must start with the ^ character, and must follow one of the characters — a-z, A-Z, [,], \

Default:

<Ctrl> \

^\

 **NOTE:** For more information about running the RACADM commands for special characters, see [Guidelines to Quote Strings Containing Special Characters](#).

cfgSerialConsoleIdleTimeout (Read or Write)

Description The maximum number of seconds to wait before an idle serial session is disconnected.

Legal Values

- 0 = No timeout
- 60–1920

Default 300
1800

cfgSerialConsoleNoAuth (Read or Write)

Description Enables or disables the serial console login authentication.

Legal Values

- 0 — (enables serial login authentication)
- 1 — (disables serial login authentication)

Default 0

cfgSerialConsoleCommand (Read or Write)

Description Specifies a serial command that is executed after a user logs in to the serial console interface.

Legal Values A string of up to 128 characters.
A string representing a valid serial command. For example, connect server-1.

Default <blank>

cfgSerialHistorySize (Read or Write)

Description Specifies the maximum size of the serial history buffer.

Legal Values 0–8192

Default 8192

cfgSerialCom2RedirEnable (Read or Write)

Description Enables or disables the console for COM 2-port redirection.

The `cfgSerialCom2RedirEnable` object property is applicable only for iDRAC on Rack and Tower Servers.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

cfgSerialHistorySize (Read or Write)

Description Specifies the maximum size of the serial history buffer.

Legal Values 0–8192

Default 8192

cfgSerialSshEnable (Read or Write)

Description Enables or disables the secure shell (SSH) interface.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

Example

```
racadm getconfig -g cfgSerial

cfgSerialBaudRate=115200
cfgSerialConsoleEnable=1
cfgSerialConsoleQuitKey=^\
cfgSerialConsoleIdleTimeout=1800
cfgSerialConsoleNoAuth=0
cfgSerialConsoleCommand=
cfgSerialConsoleColumns=0
cfgSerialHistorySize=8192
cfgSerialTelnetEnable=0
cfgSerialSshEnable=1
```

cfgSerialTelnetEnable (Read or Write)

Description Enables or disables the Telnet console interface.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgOobSnmp

This group contains parameters to configure the SNMP agent and trap capabilities of iDRAC. One instance of the group is allowed.

This group contains parameters to configure the SNMP agent and trap capabilities of CMC. One instance of the group is allowed.

The CMC SNMP agent supports the standard RFC1213 mib-2 and the Dell enterprise-specific the MIB.

This group is not applicable for iDRAC on Rack and Tower Servers.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the **—o** option.

The following sections provide information about the objects in the **cfgOobSnmpp** group.

cfgOobSnmppAgentCommunity (Read or Write)

Description Specifies the SNMP Community Name used for SNMP traps. The community string acts as a password shared between different hosts over the network. This community string value must match with the other hosts for any kind of communication through SNMP.

Legal Values A string of up to 31 characters.

Default public

Example

```
racadm getconfig -g cfgOobSnmpp
cfgOobSnmppTrapsEnable=1
cfgOobSnmppAgentCommunity=public
```

cfgOobSnmppAgentEnable (Read or Write)

Description Enables or disables the SNMP agent in iDRAC.

Enables or disables the SNMP agent in CMC.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgRacTuning

This group is used to configure various configuration properties, such as valid ports and security port restrictions.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the **—o** option.

To apply this setting to iDRAC, use the **—m** option.

The following sections provide information about the objects in the **cfgRacTuning** group.



NOTE: Only the following objects are displayed, if `-m` option is used:

- `cfgRacTuneWebserverEnable`
- `cfgRacTuneHttpPort`
- `cfgRacTuneHttpsPort`
- `cfgRacTuneTelnetPort`
- `cfgRacTuneSshPort`

cfgRacTuneConRedirPort (Read or Write)

Description	To use for keyboard, mouse, video and Virtual Media traffic to iDRAC, specify the port. This object is applicable only to iDRAC.
Legal Values	1024–65535
Default	5900

cfgRacTuneRemoteRacadmEnable (Read or Write)

Description	Enables or disables the Remote RACADM interface.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	1

cfgRacTuneCtrlEConfigDisable

Description	To configure iDRAC from the BIOS POST option-ROM, enables or disables the ability of the local user. This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgRacTuneHttpPort (Read or Write)

Description	To use HTTP network communication, specify the port number.
Legal Values	10–65535



NOTE: The following port numbers are reserved and cannot be used: 21, 68, 69, 111, 123, 161, 546, 801, 4096, 5988, 5989, 6900, 9000, and 60106.

Default 80

cfgRacTuneHttpsPort (Read or Write)

Description To use HTTPS network communication, specify the port number.

Legal Values 10–65535



NOTE: The following port numbers are reserved and cannot be used: 21, 68, 69, 111, 123, 161, 546, 801, 4096, 5988, 5989, 6900, 9000, and 60106.

Default 443

cfgRacTuneIpRangeEnable (Read or Write)

Description Enables or disables the IPv4 Address Range validation feature.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgRacTuneIpRangeAddr (Read or Write)

Description Specifies the acceptable IPv4 address bit pattern in the positions of the "1"s in the range mask property (cfgRacTuneIpRangeMask).

Login from the incoming IP address is allowed only if the following are identical:

- cfgRacTuneIpRangeMask bit-wise and with incoming IP address
- cfgRacTuneIpRangeMask bit-wise and with cfgRacTuneIpRangeAddr

Legal Values An IPv4 address formatted string, for example, 192.168.0.

Default 192.168.0

cfgRacTuneIpRangeMask (Read or Write)

Description Standard IP mask values with left-justified bits. For example, 255.255.255.0.

Login from the incoming IP address is allowed only if both of the following are identical:

- cfgRacTuneIpRangeMask bit-wise and with incoming IP address
- cfgRacTuneIpRangeMask bit-wise and with cfgRacTuneIpRangeAddr

Legal Values An IPv4 address formatted string, for example, 255.255.255.0.

Default 255.255.255.0

cfgRacTuneSshPort (Read or Write)

Description Specifies the port number used for the SSH interface.



NOTE: The following port numbers are reserved and cannot be used: 21, 68, 69, 111, 123, 161, 546, 801, 4096, 5988, 5989, 6900, 9000, and 60106.

Legal Values 1–65535
10–65535

Default 22

cfgRacTuneTelnetPort (Read or Write)

Description Specifies the port number used for the Telnet interface.



NOTE: The following port numbers are reserved and cannot be used: 21, 68, 69, 111, 123, 161, 546, 801, 4096, 5988, 5989, 6900, 9000, and 60106.

Legal Values 1–65535
10–65535

Default 23

cfgRacTuneConRedirEnable (Read or Write)

Description Enables or disables Virtual Console.
This object property is applicable only to iDRAC.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

cfgRacTuneConRedirEncryptEnable (Read or Write)

Description Encrypts the video in a Virtual Console session.
This object property is applicable only to iDRAC.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

cfgRacTuneAsrEnable (Read or Write)

Description	Enables or disables iDRAC last crash screen capture feature. This object property is applicable only to iDRAC and requires an iDRAC reset before it becomes active.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgRacTuneDaylightOffset (Read Only)

Description	Specifies the daylight savings offset (in minutes) to use for the RAC Time. This value is 0 if the time zone is not a Daylight Saving time zone.
Legal Values	0–60
Default	0

Example

```
racadm getconfig -g cfgRacTuning [-m server-<n>] -o  
<  
object name  
> <  
object value  
>  
  
cfgRacTuneRemoteRacadmEnable=1  
cfgRacTuneWebserverEnable=1  
cfgRacTuneHttpPort=80  
cfgRacTuneHttpsPort=443  
cfgRacTuneTelnetPort=23  
cfgRacTuneSshPort=22  
cfgRacTuneIpRangeEnable=0  
cfgRacTuneIpRangeAddr=192.168.1.1  
cfgRacTuneIpRangeMask=255.255.255.0  
cfgRacTuneIpBlkEnable=0  
cfgRacTuneIpBlkFailCount=5  
cfgRacTuneIpBlkFailWindow=60  
cfgRacTuneIpBlkPenaltyTime=300  
# cfgRacTuneTimezoneOffset=-18000  
# cfgRacTuneDaylightOffset=3600
```

cfgRacTuneTimezoneOffset (Read Only)

Description	Specifies the time zone offset (in minutes) from Greenwich Mean Time (GMT) / Coordinated Universal Time (UTC) to use for the RAC Time. Some common time zone offsets for time zones in the United States are: • -480 (PST — Pacific Standard Time) • -420 (MST — Mountain Standard Time) • -360 (CST — Central Standard Time)
--------------------	---

- -300 (EST — Eastern Standard Time)

This object property is read only. Specifies the difference in number of seconds, from the UTC/GMT. This value is negative if the current time zone is west of Greenwich.

Legal Values -720–7800

None

Default 0

Example

```
racadm getconfig -g cfgRacTuning

cfgRacTuneRemoteRacadmEnable=1
cfgRacTuneWebserverEnable=1
cfgRacTuneHttpPort=80
cfgRacTuneHttpsPort=443
cfgRacTuneTelnetPort=23
cfgRacTuneSshPort=22
cfgRacTuneIpRangeEnable=0
cfgRacTuneIpRangeAddr=192.168.1.1
cfgRacTuneIpRangeMask=255.255.255.0
cfgRacTuneIpBlkEnable=0
cfgRacTuneIpBlkFailCount=5
cfgRacTuneIpBlkFailWindow=60
cfgRacTuneIpBlkPenaltyTime=300# cfgRacTuneTimezoneOffset=-18000#
cfgRacTuneDaylightOffset=3600
```

cfgRacTuneLocalServerVideo (Read or Write)

Description Enables or disables the local server video.



NOTE: This object property is applicable only to iDRAC.

Legal Values

- 1 (TRUE — Enables)
- 0 (FALSE — Disables)

Default 1

cfgRacTuneLocalConfigDisable (Read or Write)

Description Disables write access to iDRAC configuration data.



NOTE: Access can be disabled using the local RACADM or iDRAC web interface; however, once disabled, access can be re-enabled only through iDRAC web interface.

This object property is applicable only to iDRAC.

Legal Values

- 0 (TRUE-Enables)
- 1 (FALSE-Disables)

Default 0

cfgRacTuneWebserverEnable (Read or Write)

Description Enables or disables the web server. If this property is disabled then it is not accessible using client web browsers. This property has no effect on the Telnet/SSH or racadm interfaces.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 1

cfgRacTuneVirtualConsoleAuthorizeMultipleSessions (Read or Write)

Description If a first user is already using the Virtual Console, the value of this object affects the privileges granted to the subsequent user's shared request after the timeout of 30 seconds.

This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.



NOTE: To modify this property, you must have Configure iDRAC permission. This object can be used only with remote or firmware (SSH or Telnet) RACADM and not with local RACADM or with earlier DRAC products.

Legal Values

0 — (If the user of the first session has not responded for session sharing request by subsequent user. The next session user gets an access denied error after the default timeout value of 30 seconds.)

1 — (If the user of the first session has not responded for session sharing request by subsequent user. The next session user gets a read-only access after the default timeout value of 30 seconds.)

2 — (If the user of the first session has not responded for session sharing request by subsequent user. The next session user gets administrator access after default timeout value of 30 seconds.)

Default 0

cfgRacTunePluginType (Read or Write)

Description To virtual console from browser, specifies the plug-in type. This object property is applicable only to iDRAC.

Legal Values

- 0 = Use Active X /Native Plugin
- 1 = Use Java Plugin

Default 0 = Active X /Native Plugin

ifcRacManagedNodeOs

This group contains properties that describe the managed server operating system. One instance of the group is allowed.

The following sections provide information about the objects in the **ifcRacManagedNodeOs**.

ifcRacMnOsHostname (Read Only)

Description The host name of the managed server.

Legal Values A string of up to 255 characters.

Default <blank>

ifcRacMnOsOsName (Read Only)

Description The operating system name of the managed server.

Legal Values A string of up to 255 characters.

Default <blank>

cfgRacVirtual

This group contains parameters to configure the iDRAC Virtual Media feature. One instance of the group is allowed.

The following sections provide information about the objects in the **cfgRacVirtual**.

cfgVirMediaAttached (Read or Write)

Description This object is used to attach virtual devices to the system via the USB bus. When the devices are attached, the server recognizes valid USB mass storage devices attached to the system. Which is equivalent to attaching a local USB CDROM/floppy drive to a USB port on the system. When the devices are attached, they can be connected to the virtual devices remotely using iDRAC web interface or the CLI. Setting this object to 0 causes the devices to detach from the USB bus.



NOTE: Modifying this property does not impact the remote file sharing operation.

Legal Values

- 0 = Detach
- 1 = Attach
- 2 = AutoAttach

Default 0

cfgVirtualBootOnce (Read or Write)

Description	Enables or disables the <code>Virtual Media Boot Once</code> feature of iDRAC. If this property is enabled when the host server is rebooted, this feature attempts to start from the virtual media devices — if the appropriate media is installed in the device.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgVirMediaFloppyEmulation (Read or Write)

Description	When set to 0, the virtual floppy drive is recognized as a removable disk by Windows operating systems. Windows operating systems assigns a drive letter that is C: or higher during enumeration. When set to 1, the Virtual Floppy drive is seen as a floppy drive by Windows operating systems. Windows operating systems assigns a drive letter of A: or B:.  NOTE: Virtual Media has to be reattached (using <code>cfgVirMediaAttached</code>) for this change to take effect.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgSDWriteProtect (Read Only)

Description	Displays if the physical write protect latch on the SD card is enabled or disabled.  NOTE: This command is deprecated from 12G iDRAC 1.0 release onwards. The functionality of this command is covered by <code>cfgVFlashSDWriteProtect</code> . While execution of the <code>cfgSDWriteProtect</code> command is successful, use the <code>cfgVFlashSDWriteProtect</code> command. For more information, see cfgVFlashSDWriteProtect Read Only .
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgServerInfo

This group allows you to select the BIOS first boot device and provides the option to start the selected device only once.

This group allows you to display and configure a server in the chassis.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the `—o` option

The following sections provide information about the objects in the `cfgServerInfo`.

cfgServerName (Read Or Write)

Description	Displays the name of the specified server.
Legal Values	Maximum of 15 non-extended (ASCII characters (ASCII codes 32 through 126)). For more information, see Guidelines to Quote Strings Containing Special Characters .
Default	SLOT — <code><slot number></code>

cfgServerNic3MacAddress (Read Only)

Description	Displays the MAC address of the server NIC 3.
Legal Values	None
Default	None

cfgServerNic4MacAddress (Read Only)

Description	Displays the MAC address of the server NIC 4.
Legal Values	None
Default	None

cfgServerDNSIMCName (Read or Write)

Description	Displays the DNS domain name for iDRAC or IMC.
Legal Values	A valid string values
Default	None

cfgServerFirstBootDevice (Read or Write)

Description	Sets or displays the first boot device. You can also set a vFlash partition that is attached as a bootable device. For more information, see cfgVFlashPartitionOSVollabel .
--------------------	--

 **NOTE:** If RFS is configured as the next boot device, during restart, the system starts normally and not from RFS.

This object is Write only.

 **NOTE:** First attach, to configure vFlash as First Boot Device. When a detached / non-existent vFlash partition or a nonstandard boot device is configured as first boot device, the following error message is displayed:

Invalid object value

Legal Values	• No-Override • PXE • HDD • DIAG • CD-DVD • BIOS • vFDD • VCD-DVD • iSCSI • FDD • SD • RFS (Remote File Share) • F10 • F11
	• 0 — None • 0 — Default • 4 — PXE • 8 — HDD • 20 — CD-DVD • 24 — BIOS • 28 — vFDD • 32 — vCD-DVD • 40 — SD • 44 — RFS (Remote File Share) • 48 — F11 • 52 — F10 • 60 — FDD
Default	No-Override
	0 — None

cfgServerBootOnce (Read or Write)

Description Enables or disables the server start once feature.

This object is Write only.

- Legal Values**
- 1(True)
 - 0 (False)

Default 1(True)

cfgActiveDirectory

This group contains parameters to configure iDRAC Active Directory feature.

This group contains parameters to configure CMC Active Directory feature.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the **—o** option.

The following sections provide information about the objects in the **cfgActiveDirectory**.

cfgADSSOEnable (Read or Write)

Description Enables or disables Active Directory single sign-on authentication on CMC.

- Legal Values**
- 1 (TRUE)
 - 0 (FALSE)

Default 0

cfgADDomainController1 (Read or Write)

Description To obtain user names, specify the LDAP server from which you want the iDRAC.

This object is applicable only to iDRAC.

Legal Values A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).

Default None

cfgADDomainController2 (Read or Write)

Description To obtain user names, specify the LDAP server from which you want the iDRAC.

This object is applicable only to iDRAC.

Legal Values

A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).

Default

None

cfgADDomainController3 (Read or Write)

Description

To obtain user names, specify the LDAP server from which you want the iDRAC.

This object is applicable only to iDRAC.

Legal Values

A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).

Default

None

cfgADRacName (Read or Write)

Description

Name of iDRAC as recorded in the Active Directory forest.

Name of CMC as recorded in the Active Directory forest.

Legal Values

Any printable text string of up to 254 characters, with no white space.

Default

<blank>

cfgADRacDomain (Read or Write)

Description

Active Directory Domain in which iDRAC resides.

Active Directory Domain in which CMC resides.

Legal Values

Any printable text string of up to 254 characters, with no white space.

Default

<blank>

cfgADAuthTimeout (Read or Write)

Description

To wait for Active Directory authentication requests to complete before timing out, specify the number of seconds.



NOTE: To modify this property, you must have the Configure iDRAC permission.

Legal Values

15–300 seconds

Default

120

cfgADEnable (Read or Write)

Description	Enables or disables Active Directory user authentication on iDRAC.
	If this property is disabled, only local iDRAC authentication is used for user login.
	Enables or disables Active Directory user authentication on CMC.
	If this property is disabled then either local CMC or LDAP authentication may be used for user login.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	0

cfgADType (Read or Write)

Description	To use the Active Directory, determine the schema type.
Legal Values	• 1 — (Enables Active Directory with the extended schema) • 2 — (Enables Active Directory with the standard schema)
Default	1

cfgADGlobalCatalog1 (Read or Write)

Description	To obtain user names, specify the Global Catalog server from which you want the iDRAC.
	This object is applicable only to iDRAC.
Legal Values	A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).
Default	None

cfgADGlobalCatalog2 (Read or Write)

Description	To obtain user names, specify the Global Catalog server from which you want the iDRAC.
	This object is applicable only to iDRAC.
Legal Values	A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).
Default	None

cfgADGlobalCatalog3 (Read or Write)

Description	To obtain user names, specify the Global Catalog server from which you want the iDRAC. This object is applicable only to iDRAC.
Legal Values	A string of up to 254 ASCII characters representing a valid IP address or a fully qualified domain name (FQDN).
Default	None

cfgADCertValidationEnable (Read or Write)

Description	Enables or disables Active Directory certificate validation as a part of the Active Directory configuration process.
Legal Values	• 1 (TRUE) • 0 (FALSE)
Default	1

cfgADDcSRVLookupEnable (Read or Write)

Description	Configures iDRAC to use pre-configured domain controllers or to use DNS to find the domain controller. If using pre-configured domain controllers, then the domain controllers to use are specified under <code>cfgAdDomainController1</code> , <code>cfgAdDomainController2</code> and <code>cfgAdDomainController3</code> . iDRAC does not failover to the specified domain controllers when DNS lookup is unsuccessful or none of the servers returns to the DNS lookup works. This object is applicable only to iDRAC.
Legal Values	• 1 (TRUE) — use DNS to look up domain controllers • 0 (FALSE) — use pre-configured domain controllers
Default	0

cfgADDcSRVLookupbyUserdomain (Read or Write)

Description	Chooses the way the user domain is looked up for Active Directory. This object is applicable only to iDRAC.
Legal Values	• 1 (TRUE) — use user domain as the search domain to look up DCs. The user domain is chosen from either the user domain list or by entering into the user login. • 0 (FALSE) — use the configured search domain <code>cfgADDcSrvLookupDomainName</code> to look up DCs.
Default	1

cfgADDcSRVLookupDomainName (Read or Write)

Description	Use the Active Directory Domain when <code>cfgAddcSrvLookupbyUserDomain</code> is set to 0. This object is applicable only to iDRAC.
Legal Values	String. Maximum length = 254
Default	Null

cfgADGcSRVLookupEnable (Read or Write)

Description	Determines how the global catalog server is looked up. If using pre-configured global catalog servers, then iDRAC uses the values <code>cfgAdGlobalCatalog1</code> , <code>cfgAdGlobalCatalog2</code> and <code>cfgAdGlobalCatalog3</code> . This object is applicable only to iDRAC.
Legal Values	• 0(FALSE) — use pre-configured Global Catalog Servers (GCS) • 1(TRUE) — use DNS to look up GCS
Default	0

cfgADGcRootDomain (Read or Write)

Description	The names of the Active Directory root domain used for DNS look up, to locate Global Catalog servers. This object is applicable only to iDRAC.
Legal Values	String. Maximum length = 254
Default	Null

cfgLDAP

This group allows you to configure settings related to the Lightweight Directory Access Protocol (LDAP).

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the `—o` option.

The following sections provide information about the objects in the **cfgLDAP**.

cfgLDAPEnable (Read or Write)

Description Enables or disables LDAP service.
If this property is disabled, local CMC authentication is used for user logins.

 **NOTE:** Enabling this option turns off `cfgADEnable`.

Legal Values

- 1 — Enable
- 0 — Disable

Default 0

cfgLDAPServer (Read or Write)

Description Configures the address of the LDAP Server. IPv4 and IPv6 are supported.

 **NOTE:** You can specify multiple servers by separating each server with a comma. For example, `example.com, sub1.example.com`

Legal Values String.
Maximum length = 1024
Maximum length = 254

Default Null

cfgLDAPPort (Read or Write)

Description Port of LDAP over SSL. Non-SSL port is not supported.

Legal Values 1–65535

Default 636

cfgLDAPBaseDN (Read or Write)

Description The domain name of the branch of the directory where all searches must start.

Legal Values String. Maximum length = 254

Default Null

cfgLDAPUserAttribute (Read or Write)

Description To search for, specify the user attribute. It is recommended to be unique within the chosen baseDN, otherwise a search filter must be configured to make sure the

uniqueness of the login user. If the userDN cannot be uniquely identified, login is unsuccessful with error.

Legal Values String. Maximum length = 254

Default Null

cfgLDAPGroupAttribute (Read or Write)

Description Specifies which LDAP attribute is used to check for group membership. It must be an attribute of the group class. If not specified then the member and unique member attributes are used.

Legal Values String maximum length = 254

Default Null

cfgLDAPGroupAttributesDN (Read or Write)

Description When it is set to 1, iDRAC compares the `userDN` retrieved from the directory to compare to the members of the group. If it is set to 0, the user name provides the login user to compare to the members of the group. It does not affect the search algorithm for the bind. iDRAC always searches the `userDN` and uses the `userDN` to bind.

If enabled, the CMC performs DN matching, otherwise the CMC uses the user name provided at login for matching.

Legal Values

- 1(TRUE) — Use the `userDN` from the LDAP Server
- 0(FALSE) — Use the `userDN` to provide the login user

Default 1

cfgLDAPBindDN (Read or Write)

Description The distinguished name of a user used to bind to the server when searching for the login user's DN. If not provided, an anonymous bind is used. If necessary It is optional to support anonymous bind.

 **NOTE:** If `cfgLDAPBindDN` is [null] and `cfgLDAPBindPassword` is [null], then the CMC attempts an anonymous bind.

Legal Values String maximum length = 254

Default Null

cfgLDAPBindPassword (Write Only)

Description	A bind password is used with the bindDN. The bind password is a sensitive data, and must be protected. It is optional to support anonymous bind.
Legal Values	String maximum length = 254
Default	Null

cfgLDAPSearchFilter (Read or Write)

Description	To validate LDAP search filter, use the user attribute that cannot uniquely identify the login user within the chosen baseDN. The search filter only applies to userDN search and not the group membership search.
Legal Values	String of maximum length = 254 characters String of maximum length = 1024 characters
Default	(objectless=*) Searches for all objects in tree.

cfgLDAPCertValidationEnable (Read or Write)

Description	Controls certificate validation during SSL handshake.
Legal Values	• 1 (TRUE) — Uses the CA certificate to validate the LDAP server certificate during SSL handshake. • 0 (FALSE) — Skips the certificate validation step of SSL handshake.
Default	1

cfgLDAPSRVLookupDomainName (Read Only)

Description	To use in the SRV lookup, configure the domain name.
Legal Values	String of maximum length of 254 alphanumeric characters and hyphens. The string must begin with a letter.
Default	[null]

cfgLDAPSRVLookupServiceName (Read or Write)

Description	To use in the SRV lookup, configure the service name.
Legal Values	String of maximum length of 254 characters.
Default	LDAP

cfgLdapRoleGroup

This group allows the user to configure role groups for LDAP.

This group configures Generic LDAP Role group descriptions and defines the privileges that LDAP-authenticated users are granted.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have the hash sign (#) prefixed in the output. To modify a configurable object, use the **-o** option.

cfgLDAPRoleGroup is indexed, containing instances numbered from 1 to 5. Each object instance consists of a pair of properties:

- `cfgLDAPRoleGroupDN` — an LDAP distinguished name (DN)
- `cfgLDAPRoleGroupPrivilege` — a CMC privilege map

Each LDAP-authenticated user assumes the total set of CMC privileges assigned to the matching LDAP distinguished names that the user belongs to. That is, if the user belongs to multiple role group DN's, the user receives all associated privileges for that DN's.

The following sections provide information about the objects in the **cfgLdapRoleGroup**.

cfgLDAPRoleGroupIndex (Read Only)

Description	It is the index value of the Role Group Object.
Legal Values	An integer between 1 and 5
Default	<instance>

cfgLdapRoleGroupDN (Read or Write)

Description	It is the Domain Name of the group in this index. Configures the LDAP distinguished name (DN) for the role group instance.
Legal Values	String. Maximum length = 1024
Default	None

Example

```
racadm getconfig -g cfgLDAPRoleGroup -o cfgLDAPRoleGroupDN  
-i 1 cn=everyone,ou=groups,dc=openldap,dc=com
```

cfgLdapRoleGroupPrivilege (Read or Write)

Description	A bit-mask defining the privileges associated with this particular group.
Legal Values	0x00000000 to 0x000001ff
Default	0x000

Example

```
racadm getconfig -g cfgLDAPRoleGroup -o cfgLDAPRoleGroupPrivilege  
-i 1 0x0
```

cfgStandardSchema

This group contains parameters to configure the Active Directory standard schema settings.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have the Chassis Configuration Administrator privilege.

 **NOTE:** You can configure a setting that does not have hash sign (#) prefixed in the output. To modify a configurable object, use the **-o** option.

The following sections provide information about the objects in the **cfgStandardSchema**.

cfgSSADRoleGroupIndex (Read Only)

Description	Index of the Role Group as recorded in the Active Directory.
Legal Values	An integer from 1 to 5
Default	<instance>

cfgSSADRoleGroupName (Read or Write)

Description	Name of the Role Group as recorded in the Active Directory forest.
Legal Values	Any printable text string of up to 254 characters, with no white space.
Default	<blank>

cfgSSADRoleGroupDomain (Read or Write)

Description	Active Directory Domain in which the Role Group resides.
Legal Values	Any printable text string of up to 254 characters, with no white space.

Default <blank>

cfgSSADRoleGroupPrivilege (Read or Write)

Description Use the bit mask numbers listed in the table below to set role-based authority privileges for a Role Group.

Legal Values 0x00000000 to 0x000001ff

Default <blank>

- **Example**

```
racadm getconfig -g cfgStandardSchema -i 1

# cfgSSADRoleGroupIndex=1
cfgSSADRoleGroupName=blsys-1
cfgSSADRoleGroupDomain=
cfgSSADRoleGroupPrivilege=3081
```

The following table displays the bit masks for Role Group privileges:

Role Group Privilege	Bit Mask
Login to iDRAC	0x00000001
Configure iDRAC	0x00000002
Configure Users	0x00000004
Clear Logs	0x00000008
Execute Server Control Commands	0x00000010
Access Virtual Console	0x00000020
Access Virtual Media	0x00000040
Test Alerts	0x00000080
Execute Debug Commands	0x00000100

cfgThermal

This group displays and configures the thermal settings. Use this object with the **config** or **getconfig** subcommands.

To set the configurations, you must have the **Chassis Configuration Administrator** privileges.

cfgThermalEnhancedCoolingMode (Read or Write)

Description Configures the enhanced cooling mode.

Legal Values

- 1 — Enabled
- 0 — Disabled

Default 0 — Disabled

cfgIpmiSol

This group is used to configure the Serial Over LAN (SOL) capabilities of the system.

The following sections provide information about the objects in the **cfgIpmiSol** group.

cfgIpmiSolEnable (Read or Write)

Description Enables or disables SOL.

Legal Values

- 1(TRUE)
- 0(FALSE)

Default 1

cfgIpmiSolBaudRate (Read or Write)

Description Specifies baud rate for serial communication over LAN.

Legal Values 9600, 19200, 57600, 115200

Default 115200

cfgIpmiSolMinPrivilege (Read or Write)

Description Specifies the minimum privilege level required for SOL access.

Legal Values

- 2(User)
- 3(Operator)
- 4(Administrator)

Default 4

cfgIpmiSolAccumulateInterval (Read or Write)

Description	Specifies the typical amount of time that iDRAC waits before transmitting a partial SOL character data packet. This value is <i>1-based 5ms</i> increments.
Legal Values	1–255
Default	10

cfgIpmiSolSendThreshold (Read or Write)

Description	To buffer before sending an SOL data packet, specify the SOL threshold limit value and the maximum number of bytes.
Legal Values	1–255
Default	255

cfgIpmiLan

This group is used to configure the IPMI over LAN capabilities of the system.

The following sections provide information about the objects in the **cfgIpmiLan** group.

cfgIpmiLanEnable (Read or Write)

Description	Enables or disables the IPMI over LAN interface.
Legal Values	• 1(TRUE) • 0(FALSE)
Default	0

cfgIpmiLanPrivLimit (Read or Write)

Description	Specifies the maximum privilege level allowed for IPMI over LAN access.
Legal Values	• 2(User) • 3(Operator) • 4(Administrator)
\Default	4

cfgIpmiLanAlertEnable (Read or Write)

Description	Enables or disables global email alerting. This property overrides all individual email alerting enable or disable properties.
Legal Values	• 1(TRUE) • 0(FALSE)
Default	0

cfgIpmiLanEncryptionKey (Read or Write)

Description	Specifies the IPMI encryption key.
Legal Values	A string of hexadecimal digits from 0 to 40 characters with no spaces. Only an even number of digits is allowed.
Default	00

cfgIpmiLanPetCommunityName (Read or Write)

Description	Specifies the SNMP community name for traps.
Legal Values	A string of up to 18 characters.
Default	public

cfgIpmiPetIpv6

This group is used to configure IPv6 platform event traps on the managed server.

The following sections provide information about the objects in the **cfgIpmiPetIpv6** group.

cfgIpmiPetIPv6Index (Read Only)

Description	Unique identifier for the index corresponding to the trap.
Legal Values	1–4
Default	<index Values>

cfgIpmiPetIPv6AlertDestIpAddr

Description	Configures the IPv6 alert destination IP address for the trap.
Legal Values	IPv6 address

Default <blank>

cfgIpmiPetIPv6AlertEnable (Read or Write)

Description Enables or disables the IPv6 alert destination for the trap.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgIpmiPef

This group is used to configure the platform event filters available on the managed server.

The event filters can be used to control policy related to actions that are triggered when critical events occur on the managed server.

The following sections provide information about the objects in the **cfgIpmiPef** group.

cfgIpmiPefName (Read Only)

Description Specifies the name of the platform event filter.

Legal Values A string of up to 255 characters.

Default The name of the index filter.

cfgIpmiPefIndex (Read or Write)

Description Specifies the index of a specific platform event filter.

Legal Values

- For iDRAC on Rack and Tower Servers: 1–22
- For iDRAC Enterprise on Blade Servers: 1–9

Default The index value of a platform event filter object.

cfgIpmiPefAction (Read or Write)

Description Specifies the action that is performed on the managed server when the alert is triggered.



NOTE: For iDRAC on Rack and Tower servers, this object is read-only for indexes 20, 21, and 22.

Legal Values

- 0 (None)
- 1 (Power Down)
- 2 (Reset)

- 3(Power Cycle)

Default 0

cflpmiPefEnable (Read or Write)

Description Enables or disables a specific platform event filter.

Legal Values

- 1(TRUE)
- 0(FALSE)

Default 1

cflpmiPet

This group is used to configure platform event traps on the managed server.

The following sections provide information about the objects in the **cflpmiPet** group.

cflpmiPetIndex (Read Only)

Description Unique identifier for the index corresponding to the trap.

Legal Values 1–4

Default The index value of a specific platform event trap.

cflpmiPetAlertDestIpAddr (Read/Write)

Description Specifies the destination IPv4 address for the trap receiver on the network. The trap receiver receives an SNMP trap when an event is triggered on the managed server.

Legal Values A string representing a valid IPv4 address. For example, 192.168.0.67.

Default 0.0.0.0

cflpmiPetAlertEnable (Read or Write)

Description Enables or disables a specific trap.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgUserDomain

This group is used to configure the Active Directory user domain names. A maximum of 40 domain names can be configured at any given time.

The following sections provide information about the objects in the **cfgUserDomain** group.

cfgUserDomainIndex (Read Only)

Description Represents a specific domain.

Legal Values 1–40

Default The index value.

cfguserdomainname (Read Only)

Description Specifies the Active Directory user domain name.

Legal Values A string of up to 254 ASCII characters

Default <blank>

cfgServerPower

This group provides several power management features.

The following sections provide information about the objects in the **cfgServerPower** group.

cfgServerPowerStatus (Read Only)

Description Represents the server power state, either ON or OFF.

Legal Values

- 1 (ON)
- 0 (OFF)

Default 0

cfgServerPowerAllocation (Read Only)

Description Represents the available allocated power supply for server usage.



NOTE: If there is more than one power supply, this object represents the minimum capacity power supply.



NOTE: This object is applicable only for iDRAC Enterprise on Rack and Tower Servers and not for iDRAC on Blade Servers.

Legal Values A string of up to 32 characters

Default <blank>

cfgServerActualPowerConsumption (Read Only)

Description Represents the power consumption by the server at the current time.

Legal Values Not applicable

Default <blank>

cfgServerPowerCapEnable (Read or Write)

Description Enables or disables the user specified power budget threshold.

This object is Read only for iDRAC Enterprise on Blade Servers.

Legal Values

- 0 — Disables the user specified power budget threshold
- 1 — Enables the user specified power budget threshold

Default 1

cfgServerMinPowerCapacity (Read Only)

Description Represents the minimum server power capacity on a blade based on the current component inventory.

Legal Values Not applicable

Default <blank>

cfgServerMaxPowerCapacity (Read Only)

Description Represents the maximum server power capacity based on the current component consumption.

Legal Values Not applicable

Default <blank>

cfgServerPeakPowerConsumption (Read Only)

Description	Represents the servers maximum power consumption until the current time.
Legal Values	Not applicable
Default	Peak power consumption of the server

cfgServerPeakPowerConsumptionTimestamp (Read Only)

Description	Specifies time when the maximum power consumption was recorded.
Legal Values	A string of up to 32 characters.
Default	Timestamp of the peak power consumption of the server.

cfgServerPowerConsumptionClear (Write Only)

Description	Clears the current recorded power statistics.
Legal Values	1 — Clears the Power Consumption Statistics
Default	None

cfgServerPowerCapWatts (Read or Write)

Description	Represents the server power threshold in Watts.  NOTE: This value is applicable only if the <code>cfgServerPowerCapEnable</code> is set to 1.
Legal Values	None
Default	Server power threshold in Watts.

cfgServerPowerCapBtuhr (Read or Write)

Description	Represents the server power threshold in BTU/hr.  NOTE: This value is applicable only if <code>cfgServerPowerCapEnable</code> is set to 1.
Legal Values	None
Default	Server power threshold in BTU/hr.

cfgServerPowerCapPercent (Read or Write)

Description Represents the server power threshold in percentage.



NOTE: This value is applicable only if `cfgServerPowerCapEnable` is set to 1.

Legal Values None

Default Server power threshold in percentage.

cfgServerPowerLastHourAvg (Read Only)

Description Displays the average power value during the last hour.

Legal Values None

Default Average power value during the last hour.

cfgServerPowerLastDayAvg (Read Only)

Description Displays the average power value during the last day.

Legal Values None

Default Average power value during the last day.

cfgServerPowerLastWeekAvg (Read Only)

Description Displays the average power value during the last week.

Legal Values None

Default Average power value during the last week.

cfgServerPowerLastHourMinPower (Read Only)

Description Displays the minimum power value during the last hour.

Legal Values Not applicable

Default Minimum power value during the last hour.

cfgServerPowerLastHourMinTime (Read Only)

Description Displays the timestamp of minimum power value during the last minute.

Legal Values Time in the format: DD MM Date HH:MM:SS YYYY

cfgServerPowerLastHourMinTime=Mon Sep 26 19:10:56 2011

where,

- DD= Day of the week
- MM= Month
- Date=Date
- YYYY = Year
- HH = hour
- MM=Minutes
- SS = Seconds

Default Minimum power value during the last minute.

cfgServerPowerLastHourMaxPower (Read Only)

Description Displays the maximum power value during the last hour.

Legal Values Not applicable

Default Maximum power value during the last hour.

cfgServerPowerLastHourMaxTime (Read Only)

Description Displays the timestamp of maximum power value during the last hour.

Legal Values Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD= Day of the week
- MM= Month
- Date=Date
- YYYY = Year
- HH = hour
- MM=Minutes
- SS = Seconds

Default Maximum power value during the last hour.

cfgServerPowerLastDayMinPower (Read Only)

Description Displays the minimum power value during the last day.

Legal Values Not applicable

Default Minimum power value during the last day.

cfgServerPowerLastDayMinTime (Read Only)

Description Displays the timestamp of minimum power value during the last day.

Legal Values Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM = Month
- Date = Date
- YYYY = Year
- HH = hour
- MM = Minutes
- SS = Seconds

Default Timestamp of the minimum power value during the last day.

cfgServerPowerLastDayMaxPower (Read Only)

Description Displays the maximum power value during the last day.

Legal Values Not applicable

Default Maximum power value during the last day.

cfgServerPowerLastDayMaxTime (Read Only)

Description Displays the timestamp of maximum power value during the last day.

Legal Values Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM = Month
- Date = Date
- YYYY = Year
- HH = hour
- MM = Minutes

- SS = Seconds

Default Timestamp of the maximum power value during the last day.

cfgServerPowerLastWeekMinPower (Read Only)

Description Displays the minimum power value during the last week.

Legal Values Not applicable

Default Minimum power value during the last week.

cfgServerPowerLastWeekMinTime (Read Only)

Description Displays the timestamp of minimum power value during the last week.

Legal Values A string of up to 32 characters.

Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM = Month
- Date = Date
- YYYY = Year
- HH = hour
- MM = Minutes
- SS = Seconds

Default Timestamp of the minimum power value during the last week.

cfgServerPowerLastWeekMaxPower (Read Only)

Description Displays the maximum power value during the last week.

Legal Values None

Default Maximum power value during the last week.

cfgServerPowerLastWeekMaxTime (Read Only)

Description Displays the timestamp of maximum power value during the last week.

Legal Values A string of up to 32 characters.

Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM= Month
- Date = Date
- YYYY = Year
- HH = hour
- MM = Minutes
- SS = Seconds

Default Timestamp of the maximum power value during the last week.

cfgServerPowerInstHeadroom (Read Only)

Description Displays the difference between the available power and the current power consumption.

This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

Legal Values Not applicable

Default Difference between the available power and the current power consumption.

cfgServerPowerPeakHeadroom (Read Only)

Description Displays the difference between the available power and the peak power consumption.

This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

Legal Values None

Default Difference between the available power and the peak power consumption.

cfgServerActualAmperageConsumption (Read Only)

Description Displays the current power consumption.

Legal Values Not applicable

Default Current power consumption.

cfgServerPeakAmperage (Read Only)

Description Displays the current peak power consumption.

Legal Values Not applicable

Default Current peak power consumption.

cfgServerPeakAmperageTimeStamp (Read Only)

Description Displays the timestamp of the current peak power consumption.

Legal Values A string of up to 32 characters.

Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM = Month
- Date = Date
- YYYY = Year
- HH = hour
- MM = Minutes
- SS = Seconds

Default Timestamp of the current peak power consumption.

cfgServerCumulativePowerConsumption (Read Only)

Description Displays the cumulative power consumption.

Legal Values Not applicable

Default Cumulative power consumption.

cfgServerCumulativePowerConsumptionTimeStamp (Read Only)

Description Displays the timestamp of the cumulative power consumption.

Legal Values A string of up to 32 characters.

Time in the format: DD MM Date HH:MM:SS YYYY

where,

- DD = Day of the week
- MM= Month
- Date=Date
- YYYY = Year
- HH = hour
- MM=Minutes
- SS = Seconds

Default Timestamp of the cumulative power consumption.

cfgServerCumulativePowerClear (Write Only)

Description Clears the `cfgServerCumulativePowerConsumption` and `cfgServerCumulativePowerConsumptionTimeStamp` values.

Legal Values 1

Default None

cfgServerPowerPCleAllocation (Read or Write)

Description Amount of power allocated to the PCIe cards.

This object is applicable for iDRAC Enterprise only for specific Blade Servers and not for iDRAC on Rack and Tower Servers.

You must have the Administrator privileges to modify the value for this object.

Legal Values 0 W: For platforms that do not support PCIe cards.

100 W — 500 W: For platforms that support PCIe cards.

Default 0: For platforms that do not support PCIe cards.

500 W: For platforms that support PCIe cards.

cfgServerPowerSupply

This group contains information related to the power supplies.

The **cfgServerPowerSupply** object group is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

 **NOTE:** The **getconfig** subcommand always shows eight **cfgServerPowerSupply** indexes, even if two power supplies are installed in the system or the system supports a maximum of two PSUs. For the uninstalled and unsupported units, all the objects in the `cfgServerPowerSupply` group displays a value of 0.

The following sections provide information about the objects in the **cfgServerPowerSupply** group.

cfgServerPowerSupplyIndex

Description Specifies index of the PSU.

 **NOTE:** Indexes 1–8 are supported to support up to 8 PSUs. If any PSU is not present then **cfgServerPowerSupplyOnlineStatus** does not exist and for all the other properties, it is 0.

Legal Values Integer 1–8

Default None

cfgServerPowerSupplyMaxInputPower (Read Only)

Description Displays the AC input rated power in Watts.

Legal Values A string of up to 32 characters.

Default 0

cfgServerPowerSupplyMaxOutputPower (Read Only)

Description Displays the AC output rated power in Watts.

Legal Values A string of up to 32 characters.

Default 0

cfgServerPowerSupplyOnlineStatus (Read Only)

Description Displays the status of the PSU.

Legal Values • 0 — Present
 • 1 — Absent
 • 2 — Failure
 • 3 — Predictive failure

Default 0 — Present

cfgServerPowerSupplyFwVer (Read Only)

Description Displays the firmware version of the PSU, in the format x.xx.xxx.

Legal Values A string up to 8 characters.

Default Null

cfgServerPowerSupplyCurrentDraw (Read Only)

Description Displays the instantaneous current consumption in 0.1 amps.

Legal Values A string of up to 32 characters.

Default 0

cfgServerPowerSupplyType

Description Displays whether the power supply is AC or DC.

Legal Values A string of up to 32 characters.

Default 0

cfgIPv6LanNetworking

This group is used to configure the IPv6 over LAN networking capabilities.

Use this object with the **config** or **getconfig** subcommands.

To use this object property, you must have Chassis Configuration Administrator privilege.



NOTE: To apply this setting, use the `-m` option.

The following sections provide information about the objects in the **cfgIPv6LanNetworking** group.

cfgIPv6Enable (Read or Write)

Description Enables or disables iDRAC IPv6 stack.
n Enables or disables CMC IPv6 stack.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgIPv6Address1 (Read or Write)

Description Specifies iDRAC IPv6 address.
Specifies CMC IPv6 address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Gateway (Read or Write)

Description iDRAC gateway IPv6 address.
CMC gateway IPv6 address.



NOTE: This property is used only if `cfgIPv6AutoConfig` is set to 0 (false).

Legal Values Specifies string representing a valid IPv6 entry.

Default " :: "

cfgIPv6AutoConfig (Read or Write)

Description Enables or disables the **IPv6 Auto Configuration** option.



NOTE: If this value is set to 0, the CMC disables auto configuration and statically assigns IPv6 addresses. If this value is set to 1, the CMC obtains address and route information using stateless `auto configuration` and `DHCPv6`.



NOTE: The CMC uses its MAC address for its DUID (DUID-LL) when communicating with a DHCPv6 server.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0
1

cfgIPv6PrefixLength (Read or Write)

Description Specifies the prefix length for IPv6 address.
Specifies the prefix length for IPv6 address.



NOTE:

- This property is used only if `cfgIPv6AutoConfig` is set to 0(false)
- This property can be configured even when `cfgIPv6AutoConfig` is enabled.

Legal Values 1–128
0–128

Default 64

cfgIPv6LinkLocalAddress (Read Only)

Description The iDRAC IPv6 link local address.

Legal Values Specifies a string representing a valid IPv6 entry.

Default :

cfgIPv6Address2 (Read Only)

Description The iDRAC IPv6-second address.

Legal Values A string representing a valid IPv6 entry.

Default :

cfgIPv6Address3 (Read Only)

Description The iDRAC IPv6 third address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address4 (Read Only)

Description The iDRAC IPv6 fourth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address5 (Read Only)

Description The iDRAC IPv6 fifth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address6 (Read Only)

Description The iDRAC IPv6 sixth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address7 (Read Only)

Description The iDRAC IPv6 seventh address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address8 (Read Only)

Description The iDRAC IPv6 eighth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address9 (Read Only)

Description The iDRAC IPv6 ninth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address10 (Read Only)

Description The iDRAC IPv6 tenth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address11 (Read Only)

Description The iDRAC IPv6 eleventh address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address12 (Read Only)

Description The iDRAC IPv6 twelfth address.

Legal Values String representing a valid IPv6 entry.

Default :

cfgIPv6Address13 (Read Only)

Description	The iDRAC IPv6 thirteenth address.
Legal Values	String representing a valid IPv6 entry.
Default	:

cfgIPv6Address14 (Read Only)

Description	The iDRAC IPv6 fourteenth address.
Legal Values	String representing a valid IPv6 entry.
Default	:

cfgIPv6Address15 (Read Only)

Description	The iDRAC IPv6 fifteenth address.
Legal Values	String representing a valid IPv6 entry.
Default	:

cfgIPv6DNSServersFromDHCP6 (Read or Write)

Description	Specifies whether <code>cfgIPv6DNSServer1</code> and <code>cfgIPv6DNSServer2</code> are static or DHCP IPv6 addresses.
	 NOTE: This property is used only if <code>cfgIPv6AutoConfig</code> is set to 1(true).
Legal Values	1 (TRUE) 0 (FALSE)
Default	0 1

cfgIPv6DNSServer1 (Read or Write)

Description	Specifies the IPv6 DNS server address.
	 NOTE: This property is used only if <code>cfgIPv6DNSServersFromDHCP6</code> is set to 0 (false).
Legal Values	A string representing a valid IPv6 entry.

For example, 2001:DB8:1234:5678:9ABC:DE11:C00C:BEEF

Default " :: "

cfgIPv6DNSServer2 (Read or Write)

Description Specifies the IPv6 DNS server address.



NOTE: This property is only valid if `cfgIPv6DNSServersFromDHCP6` is set to 0 (false).

Legal Values A string representing a valid IPv6 entry. For example,

2001:DB8:1234:5678:9ABC:DE11:C00C:BEEF

Default " :: "

Example

```
$ racadm getconfig -g cfgIPv6LanNetworking
cfgIPv6Enable=1
cfgIPv6AutoConfig=1
cfgIPv6Address=::
cfgIPv6PrefixLength=64
cfgIPv6Gateway=::
cfgIPv6DNSServersFromDHCP6=1
cfgIPv6DNSServer1=::
cfgIPv6DNSServer2=::
```

If both IPv4 and IPv6 are enabled on the CMC, IPv6 DNS servers take priority. The order of preference for DNS servers is:

- `cfgIPv6DNSServer1`
- `cfgIPv6DNSServer2`
- `cfgDNSServer1`
- `cfgDNSServer2`

cfgIpv6StaticLanNetworking

This group is used to configure the IPv6 Static over LAN networking capabilities.

cfgIPv6StaticEnable (Read or Write)

Description Enables or disables the static IPv6 stack.

Legal Values • 0 — Disabled

- 1 — Enabled

Default 0 — Disabled

 **NOTE:** If this object is modified, then the object **cfgIPv6Enable** is also modified.

cfgIPv6StaticAddress1 (Read or Write)

Description Returns or sets the static IPv6 address1.

 **NOTE:** Only set the current IPv4 address if **cfgNicUseDhcp** is set to 0 (false).

Legal Values Any IPv6 address

Default

cfgIPv6StaticGateway (Read or Write)

Description Returns or sets gateway static IPv6 address.

Legal Values Any IPv6 address

Default

cfgIPv6StaticPrefixLength (Read or Write)

Description The prefix length for static IPv6 address 1.

Legal Values 0–128

Default 64

cfgIPv6StaticAutoConfig (Read/Write)

Description Enables or disables the static IPv6 AutoConfig option.

Legal Values

- 0 — Disabled
- 1 — Enabled

Default 1 — Enabled

 **NOTE:** If this object is modified, then the object **cfgIPv6Autoconfig** is also modified.

cfgIPv6StaticDNSServersFromDHCP6 (Read or Write)

Description Specifies the DNS server static IP addresses.

Legal Values

- 0 — DNS Server must be configured as static.

- 1 — The device will get the DNS servers from DHCPv6.

Default 0 — Disabled

cfgIPv6StaticDNSServer1 (Read or Write)

Description Specifies the DNS server 1 static IPv6 address.

Legal Values Any IPv6 Address

Default

cfgIPv6StaticDNSServer2 (Read or Write)

Description Specifies the DNS server 2 static IPv6 address.

Legal Values Any IPv6 address

Default

cfgIPv6URL

This group specifies properties used to configure iDRAC IPv6 URL.

The following sections provide information about the objects in the **cfgIPv6URL** group.

cfgIPv6URLstring (Read Only)

Description The iDRAC IPv6 URL.

Legal Values A string of up to 80 characters.

Default <blank>

cfgIpmiSerial

This group specifies properties used to configure the IPMI serial interface of the BMC.

It is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

cfgIpmiSerialBaudRate (Read or Write)

Description Specifies the baud rate for a serial connection over IPMI.

Legal Values 9600, 19200, 57600, 115200

Default 57600

cfgIpmiSerialChanPrivLimit (Read or Write)

Description Specifies the maximum privilege level allowed on the IPMI serial channel.

Legal Values

- 2 (User)
- 3 (Operator)
- 4 (Administrator)

Default 4

cfgIpmiSerialConnectionMode (Read or Write)

Description When the iDRAC `cfgSerialConsoleEnable` property is set to 0(disabled), the iDRAC serial port becomes the IPMI serial port. This property determines the IPMI defined mode of the serial port.

In Basic mode, the port uses binary data with the intent of communicating with an application program on the serial client. In Terminal mode, the port assumes that a dumb ASCII terminal is connected and allows simple commands to be entered.

Legal Values

- 0(Terminal)
- 1(Basic)

Default 1

cfgIpmiSerialDeleteControl (Read or Write)

Description Enables or disables delete control on the IPMI serial interface.

Legal Values

- 0 (FALSE)
- 1 (TRUE)

Default 0

cfgIpmiSerialEchoControl (Read or Write)

Description Enables or disables echo control on the IPMI serial interface.

Legal Values

- 0(FALSE)
- 1 (TRUE)

Default 1

cfgIpmiSerialFlowControl (Read or Write)

Description Specifies the flow control setting for the IPMI serial port.

- Legal Values**
- 0 (None)
 - 1 (CTS or RTS)

Default 1

cfgIpmiSerialHandshakeControl (Read or Write)

Description Enables or disables the IPMI terminal mode handshake control.

- Legal Values**
- 0 (FALSE)
 - 1 (TRUE)

Default 1

cfgIpmiSerialNewLineSequence (Read or Write)

Description Specifies the new line sequence specification for the IPMI serial interface.

- Legal Values**
- 0 — None
 - 1 — CR-LF
 - 2 — NULL
 - 3 — CR
 - 4 — LF-CR
 - 5 — LF

Default 1

cfgIpmiSerialLineEdit (Read or Write)

Description Enables or disables line editing on the IPMI serial interface.

- Legal Values**
- 0 (FALSE)
 - 1 (TRUE)

Default 1

cfgIpmiSerialInputNewLineSequence (Read or Write)

Description Specifies the input new line sequence specification for the IPMI serial interface.

- Legal Values**
- 1 — ENTER
 - 2 — NULL

Default 1

cfgSmartCard

This group specifies properties used to support access to iDRAC using a smart card.

The following sections provide information about the objects in the **cfgSmartCard** group.

cfgSmartCardLogonEnable (Read or Write)

Description To iDRAC using a smart card, enable or disable with Remote RACADM support for access.



NOTE: Enabling with remote RACADM is only applicable for iDRAC on Rack and Tower Servers.

Legal Values

- 0 (Disabled)
- 1 (Enabled)
- 2 (Enabled with Remote RACADM) — It is not applicable for iDRAC Enterprise on Blade Servers.

Default 0

cfgSmartCardCRLEnable (Read or Write)

Description Enables or disables the Certificate Revocation List (CRL).

This object is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

Legal Values

- 1 (TRUE)
- 0 (FALSE)

Default 0

cfgNetTuning

This group enables users to configure the advanced network interface parameters for the RAC NIC. When configured, the updated settings may take up to a minute to become active.

This group enables users to configure the advanced network interface parameters. When configured, the updated settings may take up to a minute to become active.



NOTE: This group is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.



CAUTION: Use extra precaution when modifying properties in this group. Inappropriate modification of the properties in this group can result in your RAC NIC become inoperable.

The following sections provide information about the objects in the **cfgNetTuning** group.

cfgNetTuningNicAutoneg (Read or Write)

Description	Enables auto negotiation of physical link speed and duplex. If enabled, auto negotiation takes priority over other values set in this group.
Legal Values	• 0 = Auto Negotiation is Disabled • 1 = Auto Negotiation is Enabled
Default	1

Example

```
racadm getconfig -g cfgNetTuning
```

```
cfgNetTuningNicSpeed=100  
cfgNetTuningNicFullDuplex=1  
cfgNetTuningNicMtu=1500  
cfgNetTuningNicAutoneg=1
```

cfgNetTuningNic100MB (Read or Write)

Description	Specifies the speed for iDRAC NIC.  NOTE: To set this property: • iDRAC Nic selection must be set to <i>Dedicated</i> mode. • iDRAC Nic Auto negotiation must be disabled. • iDRAC IPv4 must be enabled. • iDRAC IPv4 DHCP must be enabled. • iDRAC IPv6 must be enabled. • iDRAC IPv6 auto configuration must be enabled.
Legal Values	• 0 (10 MBit) • 1 (100 MBit) • 2 (1000 MBit)  NOTE: You cannot manually set the Network Speed to 1000 MBit. This option is available only if <code>cfgNetTuningNicAutoNeg</code> is set to 1 (Enabled).
Default	1

cfgNetTuningNicFullDuplex (Read or Write)

Description	Specifies the duplex setting for the NIC. This property is used only if the <code>cfgNetTuningNicAutoNeg</code> is set to 0 (disabled).
Legal Values	• 0 (Half Duplex) • 1 (Full Duplex)
Default	1

cfgNetTuningNicMtu (Read or Write)

Description Indicated the maximum size of units in bytes transmitted by NIC.

Legal Values 576–1500

Default 1500



NOTE: IPv6 requires a minimum MTU of 1280. If IPv6 is enabled, and **cfgNetTuningMtu** is set to a lower value, the CMC uses an MTU of 1280.

cfgSensorRedundancy

This group is used to set the power supply redundancy.

The following sections provide information about the objects in the **cfgSensorRedundancy** group.

This group is applicable only for iDRAC on Rack and Tower Servers and not for iDRAC Enterprise on Blade Servers.

cfgSensorRedundancyIndex (Read Only)

Description Specifies index for the sensor redundancy group being read. Only power supply redundancy is supported.

Legal Values 1

Default None

cfgSensorRedundancyPolicy (Read or Write)

Description Sets the power supply redundancy policy.

Legal Values

- 2 — N/A, for systems that are not supported
- 3 — Non Redundant
- 4–1+1 Redundant
- 4–2+1 Redundant
- 16–2+2 Redundant

Default Any legal value at that particular execution instance.

cfgSensorRedundancyCapabilities (Read Only)

Description	Returns the redundancy capabilities in the form of a bitmask. This bitmask allows the user to know which values can be set for cfgSensorRedundancyPolicy .
Legal Values	A bit mask. More than 1 bit can be set at a time to indicate multiple redundancy support. • 0- N/A, for systems that are not supported • 1- Non-Redundant • 2- 1+1 — Redundant • 4- 2+1 — Redundant • 8- 2+2 — Redundant
Default	0

cfgSensorRedundancyStatus (Read Only)

Description	Indicates the redundancy status. The status is N/A on platforms that do not support the power supply sensor redundancy.
Legal Values	String: • N/A • Full • Lost • Degraded
Default	None

cfgVFlashSD

This group is used to configure the properties for the Virtual Flash SD card.



NOTE: If the vFlash card is present but is not enabled, the query for any property under this group displays:

ERROR: vFlash is not enabled.

To view the properties of this group, enable the vFlash using the command:

```
racadm config -g cfgvFlashSD -o cfgvFlashSDEnable 1
```

The following sections provide information about the objects in the **cfgVFlashSD** group.

cfgVFlashSDInitialized (Read Only)

Description	Displays whether an SD card is initialized.
Legal Values	• 0 • 1

Default None

cfgVFlashSDEnable (Read or Write)

Description Enables or disables the vFlash SD card.



NOTE: Disabling vFlashPartition by setting cfgVFlashSDEnable to 0 does not require a license.

Legal Values • 0 (Disable)
 • 1 (Enable)

Default 1

cfgVFlashSDSize (Read Only)

Description Displays the size of the vFlash SD card in megabytes (MB).

Legal Values A string of upto 64 characters.

Default <card size>

cfgVFlashSDLicensed (Read Only)

Description Displays whether an SD card or vFlash SD card is inserted. The vFlash SD card supports the new enhanced vFlash features and the SD card supports only the limited vFlash features.

Legal Values • 0(SD card is inserted)
 • 1(vFlash SD card is inserted)

Default None

cfgVFlashSDAvailableSize (Read Only)

Description Displays the available memory (in MB) on the vFlash SD card that can be used to create new partitions.

Legal Values A string of up to 64 characters.

Default If the card is not initialized, default is 0. If initialized, displays the unused memory on the card.

cfgVFlashSDHealth (Read Only)

Description Displays the current health status of the vFlash SD card.

Legal Values String:

- OK
- Warning
- Critical
- Unknown

Default OK

cfgVFlashSDWriteProtect (Read Only)

Description Displays whether the physical WriteProtect latch on the vFlash SD card is enabled or disabled.

Legal Values

- 0 (vFlash is not write-protected)
- 1 (vFlash is write-protected)

Default None

cfgVFlashPartition

This group is used to configure properties for individual partitions on the vFlash SD Card. Up to 16 partitions are supported, indexed from 1 to 16.



NOTE: For SD cards, the index value is limited to 1 because only a single partition of size 256MB is allowed.

The following sections provide information about the objects in the **cfgVFlashPartition** group.

cfgVFlashPartitionIndex (Read Only)

Description The index value of the partition.

Legal Values Integer 1–16

Default None

cfgVFlashPartitionSize (Read Only)

Description Displays the size of the partition.

Legal Values 1 MB to 4 GB

Default None

cfgVFlashPartitionEmulationType (Read or Write)

Description	View or modify the emulation type for the partition.
Legal Values	String: • HDD • Floppy • CD-DVD
Default	None

cfgVFlashPartitionFlashOSVolLabel (Read Only)

Description	Displays the label for the partition that is visible to the operating system.
Legal Values	An alphanumeric string of up to six characters.
Default	None

cfgVFlashPartitionFormatType (ReadOnly)

Description	Displays the format type of the partition.
Legal Values	String: • FAT16 • FAT32 • EXT2 • EXT3 • CD • RAW
Default	None

cfgVFlashPartitionAccessType (Read or Write)

Description	Indicates the partition access permissions. It configures the access type to read-write.
Legal Values	• 0 (ReadOnly) • 1 (ReadWrite)
Default	0

cfgVFlashPartitionAttachState (Read or Write)

Description View or modify the partition to attached or detached.



NOTE: Detaching the vFlashPartition by setting the `cfgVFlashPartitionAttachState` to 0 does not require a license.

Legal Values

- 1 — Attached
- 0 — Detached

Default 0 — Detached

cfgLogging

This group contains parameters to enable or disable the OEM event log filtering.

The following section provide information about the objects in the **cfgLogging** group:

cfgLoggingSELOEMEventFilterEnable (Read or Write)

Description Enables or disables the SEL Log filtering.

Legal Values

- 0 (Disable)
- 1(Enable)

Default 0

cfgRacSecurity

This group is used to configure settings related to CMC SSL certificate signing request (CSR) feature. The properties in this group must be configured before generating a CSR. Use this object with the **config** or **getconfig** subcommands. To use this object property, you must have the Chassis Configuration Administrator privilege.

For more information about generating certificate signing requests, see the subcommand **sslcsrgen**.

For the country code, go to the link http://www.iso.org/iso/country_codes/iso_3166_code_lists.htm

The following sections provide information about the objects in the **cfgRacSecurity** group.

cfgRacSecCsrCommonName (Read or Write)

Description Specifies the CSR Common Name (CN) that must be an IP or CMC name as given in the certificate.

Legal Values A string of up to 254 characters.

Default <blank>

cfgRacSecCsrOrganizationName (Read or Write)

Description Specifies the CSR Organization Name (O).

Legal Values A string of up to 254 characters.

Default <blank>

cfgRacSecCsrOrganizationUnit (Read or Write)

Description Specifies the CSR Organization Unit (OU).

Legal Values A string of up to 254 characters.

Default <blank>

cfgRacSecCsrLocalityName (Read or Write)

Description Specifies the CSR Locality (L).

Legal Values A string of up to 254 characters.

Default <blank>

cfgRacSecCsrStateName (Read or Write)

Description Specifies the CSR State Name (S).

Legal Values A string of up to 254 characters.

Default <blank>

cfgRacSecCsrCountryCode (Read/Write)

Description Specifies the CSR Country Code (CC).

Legal Values A string of 2 alphabet country code.

Default US

cfgRacSecCsrEmailAddr (Read or Write)

Description Specifies the CSR email address.

Legal Values A string of up to 254 characters.

Default <blank>

Example

```
racadm config -g cfgRacSecurity  
cfgRacSecCsrKeySize=1024  
cfgRacSecCommonName=  
cfgRacSecOrganizationName=  
cfgRacSecOrganizationUnit=  
cfgRacSecLocalityName=  
cfgRacSecStateName=  
cfgRacSecCountryCode=  
cfgRacSecEmailAddr=
```

cfgRacSecCsrKeySize (Read or Write)

Description Specifies the SSL asymmetric key size for the CSRs.

Legal Values 1024, 2048

Default 2048

Database Objects With Get and Set Commands

This chapter provides the database groups and objects that must be used with the `get` or `set` subcommands. When using the objects, they must begin with FQDD or FQDD alias.

The set operations for iDRAC, Lifecycle Controller and system objects do not require server restart. However, the set operations for NIC and BIOS objects are staged and job creation and server restart is required to apply and commit the pending values.

**NOTE:**

- While entering an attribute value that is more than one word, ensure that you enclose the attribute value within single quotation marks in the set command.

Example:

```
racadm>>set system.thermalsettings.ThermalProfile 'Maximum performance'
racadm set system.thermalsettings.ThermalProfile 'Maximum performance'
[Key=system.Embedded.1#ThermalSettings.1]
Object value modified successfully
```

- The staged configuration has the associated pending value in the output of the get operation, after it is configured successfully.
- The object values in the BIOS and NIC groups are case-sensitive.
- For NIC objects, the definition of the key format is: Key = <Device Class>.<Locator>.<Device Number>—<Port Number>[—<Partition Number>]#GroupName where,
 - Device Class: NIC
 - Locator: Integrated, Slot, Mezzanine or Embedded

Example:

```
$racadm get NIC.NICConfig
NIC.NICConfig.1 [Key=NIC.Integrated.1-1#NICConfig]
NIC.NICConfig.2 [Key=NIC.Integrated.1-2#NICConfig]
NIC.NICConfig.3 [Key=NIC.Integrated.1-3#NICConfig]
NIC.NICConfig.4 [Key=NIC.Integrated.1-4#NICConfig]
```

- The link between the NIC instance and the corresponding key varies from system to system depending on the system configuration.
- The command `racadm help` provides a list of all the attributes along with the description.
- To view the help details of group level, enter the following command: `racadm help <group name>`

Example:

```
$racadm help NIC.NICConfig
NICConfig          -- (null)
These are the objects supported by the group
-----
BannerMessageTimeout  -- Specify the number of seconds that the
OptionROM banner is displayed during POST.
Usage                 -- Values from 0 - 14
Required License      -- RACADM
Dependency            -- None

BootOptionROM         -- Controls the enablement of legacy Boot
Protocols in the Option ROM.
Usage                 -- Enabled; Disabled
Required License      -- RACADM
Dependency            -- None

BootRetryCnt          -- Specify the number of retries to attempt in
case of boot failure.
Usage                 -- NoRetry - 0;1Retry - 1; 2Retries -
2;3Retries - 3;4Retries - 4; 5Retries - 5;6Retries- 6;
IndefiniteRetries, Default - NoRetry
Required License      -- RACADM
Dependency            -- None

BootStrapType         -- Specify the boot strap method used to boot
to the operating system.
Usage                 -- AutoDetect - 0;BBS - 1; Int18h - 2; Int19h-
3; Default - AutoDetect
Required License      -- RACADM
Dependency            -- None

HideSetupPrompt       -- Specifies whether to display or hide the
legacy Option ROM setup prompt during system Power On Self Test (POST).
Usage                 -- Enabled; Disabled; Default - Disabled
Required License      -- RACADM
Dependency            -- None

LegacyBootProto       -- Select a non-UEFI network boot protocol
Usage                 -- PXE: iSCSI; FCoE: NONE; iSCSIPrimary
```

- ```

LnkSpeed -- Specifies the port speed used for the
selected boot protocol
Usage -- AutoNeg; 10Mbps Half; 10Mbps Full; 100Mbps
Half; 100Mbps Full
Required License -- RACADM
Dependency -- None

NumberVFAdvertised -- The number of PCI Virtual Functions (VFs)
to be advertised on this port in non-NPAR mode.
Usage -- Values from 0 - 256, Default - 0
Required License -- RACADM
Dependency -- VlanMode has to be Enabled

VlanId -- Specifies the ID (tag) for the VLAN Mode.
VLAN ID must be in the range from 0 to 4095
Usage -- Values from 1 - 4095
Required License -- RACADM
Dependency -- VlanMode has to be Enabled

VlanMode -- Virtual LAN mode enables use of a VLAN tag
to be used by [vendor defined boot protocols]
Usage -- Enabled; Disabled
Required License -- RACADM
Dependency -- None

WakeOnLan -- Enables the server to be powered on using
an in-band magic packet
Usage -- Enabled; Disabled
Required License -- RACADM
Dependency -- None

WakeOnLanLnkSpeed -- Select the port speed used for Wake on LAN
mode
Usage -- AutoNeg; 10Mbps Half; 10Mbps Full; 100Mbps
Half; 100Mbps Full
Required License -- RACADM
Dependency -- None

```
- To view the help details of attribute level, enter the following command: `racadm help <attribute name>`  
Example:  

```

/tmp # racadm help NIC.NICConfig.WakeOnLanLnkSpeed
WakeOnLanLnkSpeed -- Select the port speed used for Wake on LAN mode
Usage -- AutoNeg; 10Mbps Half; 10Mbps Full; 100Mbps Half; 100Mbps Full
Required License -- RACADM
Dependency -- None/tmp #

```
  - The get and set commands for BIOS and NIC provide the list of attributes on the basis of the system configuration, BIOS version used, hardware, and so on.

## System.Backplane

The objects in this group manage the backplane.

## System.Backplane.BackplaneBusMode (Read Only)

|                         |                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the backplane Serial General Purpose Input or Output (SGPIO) mode.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Unknown</li><li>• 1 — I2C</li><li>• 2 — SGPIO</li></ul> |
| <b>Default Value</b>    | 1 — I2C                                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                   |
| <b>Dependency</b>       | None                                                                                                |

## System.ChassisControl

The objects in this group are applicable only to modular chassis such as Dell PowerEdge M1000e. To control the chassis related events, use this group.

### System.ChassisControl.ChassisManagementMonitoring (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the event forwarding from CMC.                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | Base                                                                                 |
| <b>Dependency</b>       | ChassisMangementAt server object.                                                    |

## System.ChassisInfo

The objects in this group are applicable only to modular chassis such as Dell PowerEdge M1000e and Dell PowerEdge FX2. To obtain the chassis-specific information, use this group.

### System.ChassisInfo.Model (Read Only)

|                        |                                             |
|------------------------|---------------------------------------------|
| <b>Description</b>     | Indicates the LCD string the user modifies. |
| <b>Legal Values</b>    | String of up to 62 ASCII characters         |
| <b>Default Value</b>   | None                                        |
| <b>Write privilege</b> | Not Applicable                              |

|                         |                |
|-------------------------|----------------|
| <b>License Required</b> | Not Applicable |
| <b>Dependency</b>       | None           |

## System.ChassisInfo.Name (Read Only)

|                         |                                                             |
|-------------------------|-------------------------------------------------------------|
| <b>Description</b>      | Provides the name of the chassis. For example: CMC-nobel01. |
| <b>Legal Values</b>     | String of up to 62 ASCII characters                         |
| <b>Default Value</b>    | None                                                        |
| <b>Write Privilege</b>  | Not Applicable                                              |
| <b>License Required</b> | Not Applicable                                              |
| <b>Dependency</b>       | None                                                        |

## System.ChassisInfo.ServiceTag (Read Only)

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Provides the Service Tag of the chassis. |
| <b>Legal Values</b>     | String of up to 62 ASCII characters      |
| <b>Default Value</b>    | None                                     |
| <b>Write Privilege</b>  | Not Applicable                           |
| <b>License Required</b> | Not Applicable                           |
| <b>Dependency</b>       | None                                     |

## System.QuickSync

The objects in this group manage the configuration and recovery of QuickSync settings.

### System.QuickSync.Access (Read or Write)

|                         |                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configures the accessibility using Quick Sync on the server.                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Read-only</li> <li>• 2 — Read-write</li> </ul> |
| <b>Default Value</b>    | 2 — Read-write                                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                   |
| <b>Dependency</b>       | To configure, the <code>System.QuickSync.Presence</code> property must indicate <code>Present</code>                |

## System.QuickSync.InactivityTimeout (Read or Write)

|                         |                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configures the inactivity timer (in seconds) for Quick Sync.                                         |
| <b>Legal Values</b>     | 15 – 3600 seconds                                                                                    |
| <b>Default Value</b>    | 30 seconds                                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                    |
| <b>Dependency</b>       | To configure, the <code>System.QuickSync.Presence</code> property must indicate <code>Present</code> |

## System.QuickSync.InactivityTimerEnable (Read or Write)

|                         |                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the inactivity timer for Quick Sync.                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 1 – Enabled</li><li>• 0 – Disabled</li></ul>                 |
| <b>Default Value</b>    | 1 – Enabled                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                    |
| <b>Dependency</b>       | To configure, the <code>System.QuickSync.Presence</code> property must indicate <code>Present</code> |

## System.QuickSync.Presence (Read or Write)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the presence of Quick Sync feature in the server.                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 – Not Supported</li><li>• 1 – Absent</li><li>• 2 – Present</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                              |
| <b>Dependency</b>       | None                                                                                                           |

## System.LCD

This group enables you to manage the front panel LCD user string settings.

The following section provides information about the objects in the `System.LCD` group.



**NOTE:** The System.LCD get and set command works on iDRAC on Blade Server, even if the LCD is not present on the server.

## System.LCD.Configuration (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Current LCD configuration.                                                                                                                                                                                                                                                                                                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — User Defined</li><li>• 1 — Model Name</li><li>• 2 — None</li><li>• 4 — iDRAC IPv4Address</li><li>• 8 — iDRAC MAC Address</li><li>• 16 — OS System Name</li><li>• 32 — Service Tag</li><li>• 64 — IPv6Address</li><li>• 128 — Ambient Temperature</li><li>• 256 — System Watts</li><li>• 512 — Asset Tag</li></ul> |
| <b>Default Value</b>    | 32 — Service Tag                                                                                                                                                                                                                                                                                                                                              |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                                                                                                                                                                                                                                                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                             |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                          |

## System.LCD.CurrentDisplay (Read Only)

|                         |                                            |
|-------------------------|--------------------------------------------|
| <b>Description</b>      | The string currently displayed on the LCD. |
| <b>Legal Values</b>     | None                                       |
| <b>Default Value</b>    | Not Applicable                             |
| <b>Write Privilege</b>  | Not Applicable                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise          |
| <b>Dependency</b>       | None                                       |

## System.LCD.LCDUserString (Read or Write)

|                    |                               |
|--------------------|-------------------------------|
| <b>Description</b> | Indicates the LCD string set. |
|--------------------|-------------------------------|



**NOTE:** This property is deprecated from version 2.00.00.00. Use the [System.LCD.UserDefinedString](#) to perform the operation.

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Legal Values</b>     | String of up to 62 ASCII characters |
| <b>Default Value</b>    | 0                                   |
| <b>Write Privilege</b>  | Not Applicable                      |
| <b>License Required</b> | Not Applicable                      |
| <b>Dependency</b>       | Not Applicable                      |

### System.LCD.UserDefinedString (Read or Write)

|                         |                                                                |
|-------------------------|----------------------------------------------------------------|
| <b>Description</b>      | Indicates the LCD string set.                                  |
| <b>Legal Values</b>     | String of up to 62 ASCII characters                            |
| <b>Default Value</b>    | 0                                                              |
| <b>Write Privilege</b>  | Not Applicable                                                 |
| <b>License Required</b> | Not Applicable                                                 |
| <b>Dependency</b>       | Cannot be configured unless LCD Configuration is user defined. |

## System.Location

This group enables you to manage the server's physical location characteristics.

The following section provides information about the objects in the <System>.Location group.

### System.Location.Aisle (Read or Write)

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Indicates aisle where server is located. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters     |
| <b>Default Value</b>    | Not Applicable                           |
| <b>Write Privilege</b>  | Configure iDRAC                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise        |
| <b>Dependency</b>       | None                                     |

## System.Location.DataCenter (Read or Write)

|                         |                                                                |
|-------------------------|----------------------------------------------------------------|
| <b>Description</b>      | Indicates name of the data center where the system is located. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters                           |
| <b>Default Value</b>    | Not Applicable                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                              |
| <b>Dependency</b>       | None                                                           |

## System.Location.DeviceSize (Read Only)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Indicates server chassis size.    |
| <b>Legal Values</b>     | Values: 1–255                     |
| <b>Default Value</b>    | Depends on the server form factor |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## System.Location.Rack.Name (Read or Write)

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Description</b>      | Indicates rack where the system is located. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters        |
| <b>Default Value</b>    | Not Applicable                              |
| <b>Write Privilege</b>  | Configure iDRAC                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | None                                        |

## System.Location.Rack.Slot (Read or Write)

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Description</b>      | Indicates the slot where system is located. |
| <b>Legal Values</b>     | Values: 1–255                               |
| <b>Default Value</b>    | 0                                           |
| <b>Write Privilege</b>  | Configure iDRAC                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | None                                        |

## System.Location.RoomName (Read or Write)

|                         |                                        |
|-------------------------|----------------------------------------|
| <b>Description</b>      | Room name where the system is located. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters   |
| <b>Default Value</b>    | Not Applicable                         |
| <b>Write Privilege</b>  | Configure iDRAC                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise      |
| <b>Dependency</b>       | None                                   |

## System.Location.Chassis.Name (Read Only)

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Indicates the chassis name.          |
| <b>Legal Values</b>     | String of up to 128 ASCII characters |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Not Applicable                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

## System.Location.Chassis.Slot (Read or Write)

|                         |                         |
|-------------------------|-------------------------|
| <b>Description</b>      | Indicates chassis slot. |
| <b>Legal Values</b>     | Values: 1–255           |
| <b>Default Value</b>    | Not Applicable          |
| <b>Write Privilege</b>  | Configure iDRAC         |
| <b>License Required</b> | Not Applicable          |
| <b>Dependency</b>       | None                    |

## System.Power

This group provides power management features for iDRAC.

The following section provides information about the objects in this group.



**NOTE:** For Dell PowerEdge FM120x4 server with more than one iDRAC, the power is received and shared from CMC. Hence, the information about power and temperature for individual iDRACs are not displayed.

### System.Power.Status (Read Only)

|                         |                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Represents the device power state, either ON or OFF.                                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Server is off</li><li>• 1 — Server is on.</li></ul> |
| <b>Default Value</b>    | 0 — Server is off                                                                               |
| <b>Write Privilege</b>  | Not Applicable                                                                                  |
| <b>License Required</b> | Not Applicable                                                                                  |
| <b>Dependency</b>       | Not Applicable                                                                                  |

### System.Power.ServerAllocation (Read Only)

|                      |                                                                                                         |
|----------------------|---------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Indicates the power allocated to running blades. This value is displayed in both watts and BTU/h units. |
| <b>Legal Values</b>  | 0–7928                                                                                                  |
| <b>Default Value</b> | Not Applicable                                                                                          |

|                         |                |
|-------------------------|----------------|
| <b>Write Privilege</b>  | Not Applicable |
| <b>License Required</b> | Not Applicable |
| <b>Dependency</b>       | None           |

### **System.Power.Avg.LastDay (Read Only)**

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Indicates the average power value during the last day. |
| <b>Legal Values</b>     | Values: 1–65535                                        |
| <b>Default Value</b>    | Average power value during the last day.               |
| <b>Write Privilege</b>  | Not Applicable                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### **System.Power.Avg.LastHour (Read Only)**

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Displays the average power value during the last hour. |
| <b>Legal Values</b>     | Values: 1–65535                                        |
| <b>Default Value</b>    | Average power value during the last hour.              |
| <b>Write Privilege</b>  | Not Applicable                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### **System.Power.Avg.LastWeek (Read Only)**

|                        |                                                         |
|------------------------|---------------------------------------------------------|
| <b>Description</b>     | Indicates the average power value during the last week. |
| <b>Legal Values</b>    | Values: 1–65535                                         |
| <b>Default Value</b>   | Average power value during the last week.               |
| <b>Write Privilege</b> | Not Applicable                                          |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **System.Power.Cap.ActivePolicy.Btuhr (Read Only)**

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Represents the active power in BTU/Hr a device is allowed to consume. |
| <b>Legal Values</b>     | Values: 1–65535                                                       |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Not Applicable                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

### **System.Power.Cap.ActivePolicy.Name (Read Only)**

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Displays the Active Power Cap Policy Name |
| <b>Legal Values</b>     | String of up to 128 ASCII characters      |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Not Applicable                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

### **System.Power.Cap.ActivePolicy.Watts (Read Only)**

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Description</b>      | Displays the Active Power Capacity in Watts |
| <b>Legal Values</b>     | Values: 1–65535                             |
| <b>Default Value</b>    | Not Applicable                              |
| <b>Write Privilege</b>  | Not Applicable                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | None                                        |

## System.Power.Cap.Btuhr (Read or Write)

**Description** Represents the maximum power in BTU/Hr a device is allowed to consume . To meet this capacity, throttle the device in order



**NOTE:** This value is applicable only if `System.Power.Cap.Enable` is set to 1.

**Legal Values** Values 1–65535

**Default Value** Server power threshold in BTU/hr.

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Enable `System.Power.Cap.Enable`

## System.Power.Cap. Enable (Read or Write)

**Description** Enables or disables user specified power budget threshold configuration.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** 1 — Enabled

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.Power.Cap.MaxThreshold (Read Only)

**Description** Because it is based on the current component inventory, it has maximum server power capacity.

**Legal Values** Values: 1–65535

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.Power.Cap.MinThreshold (Read Only)

|                         |                                                                                                                      |
|-------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Because it is based on the current component inventory, it is the lowest calculated power consumption of the device. |
| <b>Legal Values</b>     | Values: 1–65535                                                                                                      |
| <b>Default Value</b>    | Not Applicable                                                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                    |
| <b>Dependency</b>       | None                                                                                                                 |

## System.Power.Cap.Percent (Read or Write)

|                    |                                                                                                                                         |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Represents the maximum power as a percentage of total power that a server is allowed to consume. To meet this cap, throttle the device. |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------|



**NOTE:** This value is applicable only if `System.Power.Cap.Enable` is set to 1.

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Legal Values</b>     | Values: 0–100                               |
| <b>Default Value</b>    | Server power threshold in percentage.       |
| <b>Write Privilege</b>  | Configure iDRAC                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | Enable <code>System.Power.Cap.Enable</code> |

## System.Power.Redundancypolicy (Read or Write)

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Selects the redundancy policy.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Legal Values</b>    | <ul style="list-style-type: none"><li>• N/A</li><li>• Not Redundant — In this mode, even if one PSU stops functioning, the server is automatically turned off.</li><li>• A/C Input Redundant — In this mode, the system is functional even if one PSU input circuit stops functioning, provided the PSUs are connected to different input circuits. This is also called AC redundancy.</li><li>• PSU Redundant — Available only on systems with four PSUs. This is also called DC redundancy. This is only valid in a 2+1 PSU configuration. In this mode, the system is functional even if one PSU stops functioning.</li></ul> |
| <b>Default Value</b>   | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Write Privilege</b> | Login and configure iDRAC                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

 **NOTE:** In a two PSU system, you must set the primary PSU (that must be ON). In a four PSU system, you must set the pair of PSUs (1+3 or 2+4) that must be ON.

## System.Power.Cap.Watts (Read or Write)

**Description** Represents the Maximum Power in Watts a device is allowed to consume. To meet this capacity , throttle the device.

 **NOTE:** This value is applicable only if `System.Power.Cap.Enable` is set to 1.

**Legal Values** Values 0–100

**Default Value** Server power threshold in watts

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Enable `System.Power.Cap.Enable`

## System.Power.EnergyConsumption (Read Only)

**Description** Represents the Cumulative power consumption by the blade or system.

**Legal Values** Values: 1–65535

**Default Value** Cumulative power consumption

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.Power.EnergyConsumption.Clear (Read or Write)

**Description** Clears the cumulative power consumption timestamps.

**Legal Values** 1

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## System.Power.EnergyConsumption.StarttimeStamp (Read Only)

|                         |                                                             |
|-------------------------|-------------------------------------------------------------|
| <b>Description</b>      | Displays the Timestamp of the cumulative power consumption. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                        |
| <b>Default Value</b>    | Timestamp of the cumulative power consumption.              |
| <b>Write Privilege</b>  | Not Applicable                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                           |
| <b>Dependency</b>       | None                                                        |

## System.Power.Hotspare.Enable (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | <p>Enables hot-spare functionality for the primary PSU selection. For more information about hot-spare, see the iDRAC User's Guide available at <a href="http://www.dell.com/esmmanuals">www.dell.com/esmmanuals</a>.</p> <p> <b>NOTE:</b> This object is supported only for iDRAC on Rack and Tower servers.</p> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul>                                                                                                                                                                                                                                                                                                              |
| <b>Default Value</b>    | 1 — Enabled                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                                 |

## System.Power.Hotspare.PrimaryPSU (Read or Write)

|                      |                                                                                                                                                                                                                         |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | <p>Represents the primary PSU selection.</p> <p> <b>NOTE:</b> This object is supported only for iDRAC on Rack and Tower servers.</p> |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• 1 — PSU1</li> <li>• 2 — PSU2</li> <li>• 5 — PSU1 and PSU3</li> <li>• 10 — PSU2 and PSU4</li> </ul>                                                                             |
| <b>Default Value</b> | Not Applicable                                                                                                                                                                                                          |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### System.Power.Max.Amps (Read Only)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the device Peak Power Consumption since this value was last cleared. |
| <b>Legal Values</b>     | Values: 1–65535.                                                               |
| <b>Default Value</b>    | Current peak power consumption                                                 |
| <b>Write Privilege</b>  | Not Applicable                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | None                                                                           |

### System.Power.Max.Amps.TimeStamp (Read Only)

|                         |                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the timestamp recorded for the Peak Power Consumption since this value was last cleared. |
| <b>Legal Values</b>     | String up to 254 ASCII characters.                                                                 |
| <b>Default Value</b>    | Timestamp of the current peak power consumption                                                    |
| <b>Write Privilege</b>  | Not Applicable                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | None                                                                                               |

### System.Power.Max.Headroom (Read Only)

|                      |                                                                                                                                                             |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Displays the difference between the available power and the peak power consumption.                                                                         |
|                      |  <b>NOTE:</b> This object is not applicable on iDRAC on Modular servers. |
| <b>Legal Values</b>  | Values: 1–65535                                                                                                                                             |
| <b>Default Value</b> | Difference between the available power and the peak power consumption.                                                                                      |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **System.Power.Max.LastDay (Read Only)**

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | Displays the maximum power value during the last day. |
| <b>Legal Values</b>     | Values: 1–65535                                       |
| <b>Default Value</b>    | Maximum power value during the last day.              |
| <b>Write Privilege</b>  | Not Applicable                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | None                                                  |

### **System.Power.Max.LastDay.TimeStamp (Read Only)**

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Displays the timestamp of maximum power value during the last day. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                               |
| <b>Default Value</b>    | Timestamp of the maximum power value during the last day.          |
| <b>Write Privilege</b>  | Not Applicable                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

### **System.Power.Max.LastHour (Read Only)**

|                        |                                                        |
|------------------------|--------------------------------------------------------|
| <b>Description</b>     | Displays the maximum power value during the last hour. |
| <b>Legal Values</b>    | Values: 1–65535                                        |
| <b>Default Value</b>   | Maximum power value during the last hour.              |
| <b>Write Privilege</b> | Not Applicable                                         |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **System.Power.Max.LastHour.TimeStamp (Read Only)**

|                         |                                                                     |
|-------------------------|---------------------------------------------------------------------|
| <b>Description</b>      | Displays the timestamp of maximum power value during the last hour. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                |
| <b>Default Value</b>    | Timestamp of the maximum power value during the last hour.          |
| <b>Write Privilege</b>  | Not Applicable                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                   |
| <b>Dependency</b>       | None                                                                |

### **System.Power.Max.LastWeek (Read Only)**

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Displays the maximum power value during the last week. |
| <b>Legal Values</b>     | Values: 1–65535                                        |
| <b>Default Value</b>    | Maximum power value during the last week.              |
| <b>Write Privilege</b>  | Not Applicable                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### **System.Power.Max.LastWeek.TimeStamp (Read Only)**

|                         |                                                                     |
|-------------------------|---------------------------------------------------------------------|
| <b>Description</b>      | Displays the timestamp of maximum power value during the last week. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                |
| <b>Default Value</b>    | Timestamp of the maximum power value during the last week.          |
| <b>Write Privilege</b>  | Not Applicable                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                   |

**Dependency**    None

### **System.Power.Max. Power (Read Only)**

**Description**    The server consumes maximum power, because the last value was cleared.

**Legal Values**    Values: 1–65535

**Default Value**    Peak power consumption of the server.

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **System.Power.Max.Power.Timestamp (Read Only)**

**Description**    Displays time of maximum power consumption.

**Legal Values**    String of up to 254 ASCII characters

**Default Value**    Timestamp of the peak power consumption of the server.

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **System.Power.Max.PowerClear (Read or Write)**

**Description**    Clears the Maximum Power Consumption timestamps.

**Legal Values**    1 — Clear the Power Consumption Statistics

**Default Value**    Not Applicable

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### System.Power.Min.LastDay (Read Only)

|                         |                                                 |
|-------------------------|-------------------------------------------------|
| <b>Description</b>      | Displays the minimum power during the last day. |
| <b>Legal Values</b>     | Values: 1–65535                                 |
| <b>Default Value</b>    | Minimum power value during the last day.        |
| <b>Write Privilege</b>  | Not Applicable                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise               |
| <b>Dependency</b>       | None                                            |

### System.Power.Min.LastDay.Timestamp (Read Only)

|                         |                                                           |
|-------------------------|-----------------------------------------------------------|
| <b>Description</b>      | Displays the minimum power value during the last day.     |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                      |
| <b>Default Value</b>    | Timestamp of the minimum power value during the last day. |
| <b>Write Privilege</b>  | Configure iDRAC                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                         |
| <b>Dependency</b>       | None                                                      |

### System.Power.Min.LastHour (Read Only)

|                         |                                                         |
|-------------------------|---------------------------------------------------------|
| <b>Description</b>      | Indicates the minimum power value during the last hour. |
| <b>Legal Values</b>     | Values: 1–65535                                         |
| <b>Default Value</b>    | Minimum power value during the last hour.               |
| <b>Write Privilege</b>  | Not Applicable                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                       |
| <b>Dependency</b>       | None                                                    |

### System.Power.Min.LastHour.Timestamp (Read Only)

|                         |                                                                |
|-------------------------|----------------------------------------------------------------|
| <b>Description</b>      | Indicates the timestamp of minimum power during the last hour. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                           |
| <b>Default Value</b>    | Timestamp of the minimum power value during the last hour.     |
| <b>Write Privilege</b>  | Not Applicable                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                              |
| <b>Dependency</b>       | None                                                           |

### System.Power.Min.LastWeek (Read Only)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Indicates the minimum power during the last week. |
| <b>Legal Values</b>     | Values: 1–65535                                   |
| <b>Default Value</b>    | Minimum power value during the last week.         |
| <b>Write Privilege</b>  | Not Applicable                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### System.Power.Min.LastWeek.TimeStamp (Read Only)

|                         |                                                                     |
|-------------------------|---------------------------------------------------------------------|
| <b>Description</b>      | Displays the timestamp of minimum power value during the last week. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                |
| <b>Default Value</b>    | Timestamp of the minimum power value during the last week.          |
| <b>Write Privilege</b>  | Not Applicable                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                   |
| <b>Dependency</b>       | None                                                                |

## System.Power.PCLeAllocation (Read or Write)

**Description** Specifies PCIe power allocation for blade servers. It is applicable only for PowerEdge M610x.



**NOTE:** This object only applies to servers that support PCIe Card.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**

- 0 — For platforms that do not support PCIe cards.
- 500 W — For platforms that support PCIe cards.

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.Power.PFCEnable (Read or Write)

**Description** Enables the power factor correction enable.



**NOTE:**

- This object is supported only for iDRAC on Rack and Tower servers.
- This object is applicable only if `System.Power.Cap.Enable` is set to 1.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** 0 — Disabled

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.Power.RedundancyCapabilities (Read Only)

**Description** Returns the redundancy capabilities in the form of a bitmask. This bitmask indicates the values that are set to `cfgSensorRedundancyPolicy`.



**NOTE:** This object is not applicable for iDRAC on Blade servers.

**Legal Values**

- 0 — not applicable
- 1 — Non-Redundant

- 2 — 1+1 Redundant
- 4 — 2+1 Redundant
- 8 — 2+2 Redundant
- 16 — 3+x Redundant
- 32 — 4+x Redundant
- 64 — 5+x Redundant

**Default Value** 0 — not applicable

**Write Privilege** Not Applicable

**License Required** Not Applicable

**Dependency** Not Applicable

## System.Power.RedundantState (Read Only)

**Description** Retrieves the redundancy state for the chassis.



**NOTE:** This object is not applicable for Rack and Tower server.

**Legal Values**

- 0 — None
- 1 — Full

**Default** 0 — None

**Write Privilege** Not Applicable

**License Required** Not Applicable

**Dependency** Not Applicable

## System.Power.Supply

This group provides information relating to the Power Supplies.

This group is indexed from 1 to 4. If there are less than four power supplies on the server, then some of the last indexes of this group are not applicable. This group is not applicable for iDRAC on Rack and Tower servers.

The following section provides information about the objects in this group.

### System.Power.Supply.CurrentDraw (Read Only)

**Description** Displays the instantaneous current consumption in 0.1 amps.

**Legal Values** String of up to 254 ASCII characters

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **System.Power.Supply.FwVer (Read Only)**

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Displays the firmware version of the PSU. |
| <b>Legal Values</b>     | String up to 254 ASCII characters.        |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Not Applicable                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

### **System.Power.Supply.[i].MaxInputPower (Read Only)**

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Description</b>      | Displays the AC input rated power in Watts. |
| <b>Legal Values</b>     | Integer > 0                                 |
| <b>Default Value</b>    | 0                                           |
| <b>Write Privilege</b>  | Not Applicable                              |
| <b>License Required</b> | Not Applicable                              |
| <b>Dependency</b>       | Not Applicable                              |

### **System.Power.Supply.[i].MaxOutputPower (Read Only)**

|                        |                                              |
|------------------------|----------------------------------------------|
| <b>Description</b>     | Displays the DC output rated power in Watts. |
| <b>Legal Values</b>    | Integer > 0                                  |
| <b>Default Value</b>   | 0                                            |
| <b>Write Privilege</b> | Not Applicable                               |

|                         |                |
|-------------------------|----------------|
| <b>License Required</b> | Not Applicable |
| <b>Dependency</b>       | Not Applicable |

### System.Power.Supply.[i].Status (Read Only)

**Description** Displays the status of the PSU.

**Legal Values**

- 0 — absent
- 1 — present and OK
- 2 — failure
- 3 — predictive failure

**Default** 0 — absent

**Write Privilege** Not Applicable

**License Required** Not Applicable

**Dependency** Not Applicable

### System.Power.Supply.[i].Type (Read Only)

**Description** Displays whether the power supply is AC or DC. Either of them are indexed group and the square brackets are only place-holders, and do not form a part of command syntax.

**Legal Values** String upto 32 characters.

**Default** None

**Write Privilege** Not Applicable

**License Required** Not Applicable

**Dependency** Not Applicable

### System.Power.Supply.[i].LineStatus (Read Only)

**Description** Specifies if this power supply is powered off or on.

**Legal Values** Integer > 0

**Default** None

**Write Privilege** Not Applicable

|                         |                |
|-------------------------|----------------|
| <b>License Required</b> | Not Applicable |
| <b>Dependency</b>       | Not Applicable |

## System.Power.Supply.[i].PMBusMonitoring (Read Only)

|                         |                                            |
|-------------------------|--------------------------------------------|
| <b>Description</b>      | Specifies if this PMBus is present or not. |
| <b>Legal Values</b>     | Integer > 0                                |
| <b>Default</b>          | 0                                          |
| <b>Write Privilege</b>  | Not Applicable                             |
| <b>License Required</b> | Not Applicable                             |
| <b>Dependency</b>       | Not Applicable                             |

## System.ServerOS

Use the objects in this group to manage the host operating system's name and version details.

### System.ServerOS.HostName (Read or Write)

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Displays the host name of the managed server. |
| <b>Legal Values</b>     | String of up to 256 ASCII characters          |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Configure iDRAC                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |
| <b>Dependency</b>       | None                                          |

### System.ServerOS.OSName (Read or Write)

|                         |                                                           |
|-------------------------|-----------------------------------------------------------|
| <b>Description</b>      | Displays the operating system name of the managed server. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                      |
| <b>Default Value</b>    | Not Applicable                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                         |

**Dependency**    None

## System.ServerOS.OSVersion (Read Only)

**Description**    Indicates the operating system version of the managed server.

**Legal Values**    String of up to 254 ASCII characters

**Default Value**    Not Applicable

**Write Privilege**    Not Applicable

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## System.ServerOS.ServerPoweredOnTime (Read Only)

**Description**    Indicates the time (in seconds) from when the operating system is turned ON.

**Legal Values**    Any integer value indicating the system powered on time duration.

**Default Value**    0

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## System.ThermalSettings

This group provides information about the thermal settings of the server.

To know more about the platforms supported for **AirExhaustTemp** and **FanSpeedOffset** settings, see the iDRAC User's Guide available at [www.dell.com/esmmanuals](http://www.dell.com/esmmanuals).

## System.ThermalSettings.AirExhaustTemp (Read or Write)

**Description**    Displays the air exhaust temperature and sets the exhaust temperature to any appropriate value.



**NOTE:** This attribute is platform dependent.

**Legal Values**

- 0 — 40°C
- 1 — 45°C
- 2 — 50°C
- 3 — 55°C
- 255 — None

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default value</b>    | 255 — None                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## System.ThermalSettings.BaseAlgorithm (Read or Write)

|                         |                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the thermal base algorithm.                                                                                                                   |
|                         |  <b>NOTE:</b> This object is not applicable for Rack and Tower server. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Auto</li> <li>• 1 — Max Exhaust Temperature</li> <li>• 2 — Min Power</li> </ul>                            |
| <b>Default values</b>   | None                                                                                                                                                    |
| <b>License Required</b> | iDRAC Express                                                                                                                                           |
| <b>Dependency</b>       | None                                                                                                                                                    |

## System.ThermalSettings.MinimumFanSpeed (Read or Write)

|                         |                                                                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the minimum fan speed required.                                                                                              |
|                         |  <b>NOTE:</b> This attribute is platform dependent. |
| <b>Legal Values</b>     | MFSMinimumLimit — MFSMaximumLimit                                                                                                      |
| <b>Default Value</b>    | 0                                                                                                                                      |
| <b>Write Privilege</b>  | Not Applicable                                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                      |
| <b>Dependency</b>       | None                                                                                                                                   |

## System.ThermalSettings.FanSpeedOffset (Read or Write)

|                         |                                                                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the fan speed offset.                                                                                                        |
|                         |  <b>NOTE:</b> This attribute is platform dependent. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Low fan speed</li> <li>• 1 — High fan speed</li> <li>• 255 — OFF</li> </ul>               |
| <b>Default value</b>    | OFF                                                                                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                      |

**Dependency** None

### System.ThermalSettings.FanSpeedLowOffsetVal (Read Only)

**Description** Indicates the percentage range for low fan Offset speed.



**NOTE:** This attribute is platform dependent.

**Legal Values** Integral Values: 0 – 100

**Default Value** 0

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### System.ThermalSettings.FanSpeedMediumOffsetVal (Read Only)

**Description** Indicates the percentage range for medium fan speed offset.



**NOTE:** This attribute is platform dependent.

**Legal Values** Integral Values: 0 – 100

**Default Value** 0

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### System.ThermalSettings.FanSpeedHighOffsetVal (Read Only)

**Description** Indicates the percentage range for the high fan offset speed.



**NOTE:** This attribute is platform dependent.

**Legal Values** Integral Values: 0 – 100

**Default Value** 0

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### System.ThermalSettings.FanSpeedMaxOffsetVal (Read Only)

**Description** Indicates the percentage range for low fan offset speed.



**NOTE:** This attribute is platform dependent.

**Legal Values** Integral Values: 0 – 100

**Default Value** 0

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### System.ThermalSettings.MFSMinimumLimit (Read Only)

|                    |                                                                                                                                                                              |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Indicates the minimum limit for MFS.<br> <b>NOTE:</b> This attribute is platform dependent. |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Legal Values** Integral Values: 0 — MFSMaximumLimit

**Default Value** 225

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### System.ThermalSettings.MFSMaximumLimit (Read Only)

|                    |                                                                                                                                                                              |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Indicates the maximum limit for MFS.<br> <b>NOTE:</b> This attribute is platform dependent. |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Legal Values** Integral Values: 1 - 100

**Default Value** 255

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### System.ThermalSettings.ThermalProfile (Read or Write)

|                    |                                                                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Sets the thermal base algorithm.<br> <b>NOTE:</b> Restart the system to activate the power and thermal settings. |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Legal Values**

- 0 — Default Thermal Profile Settings
- 1 — Maximum performance
- 2 — Minimum Power

**Default Value** Auto

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## System.ThermalConfig

The objects in this group manage the thermal configuration.

### System.ThermalConfig.CriticalEventGenerationInterval (Read or Write)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the time interval (in days) for critical events to be generated. |
| <b>Legal Values</b>     | Integral Values: 0-365                                                     |
| <b>Default Value</b>    | 30                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                          |
| <b>Dependency</b>       | None                                                                       |

### System.ThermalConfig.EventGenerationInterval (Read or Write)

|                         |                                                                           |
|-------------------------|---------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the time interval (in days) for warning events to be generated. |
| <b>Legal Values</b>     | Integral Values: 0-365                                                    |
| <b>Default Value</b>    | 30                                                                        |
| <b>Write Privilege</b>  | Configure iDRAC                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                         |
| <b>Dependency</b>       | None                                                                      |

### System.ThermalConfig.FreshAirCompliantConfiguration (Read Only)

|                         |                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether or not the system is configured to be fresh air compliant.                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Not Applicable</li><li>• 1 — Yes</li><li>• 2 — No</li></ul> |
| <b>Default Value</b>    | 1 — Yes                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                       |
| <b>Dependency</b>       | None                                                                                                    |

## LifecycleController.LCAttributes

The following section provides information about the objects in the `LifecycleController.LCAttributes` group.



**NOTE:** A job successfully configured using the autoupdate or autobackup feature settings can be deleted only if the job is currently not running or downloading.

### **LifecycleController.LCAttributes.autobackup (Read or Write)**

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the automatic backup scheduler.                                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                 |

### **LifecycleController.LCAttributes.AutoDiscovery (Read Only)**

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the auto discovery scheduler.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Off</li><li>• 1 — ON</li></ul> |
| <b>Default Value</b>    | 0 — Off                                                                    |
| <b>License Required</b> | iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                       |

### **LifecycleController.LCAttributes.autoupdate (Read or Write)**

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the automatic update scheduler.                                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                 |

## LifecycleController.LCAtributes.BiosRTDRequested (Read or Write)

|                         |                                                                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Allows to reset all the BIOS attributes to the default state. After enabled, restart the iDRAC to view the default values of BIOS. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — FALSE</li><li>• 1 — TRUE</li></ul>                                                     |
| <b>Default Value</b>    | 0 — FALSE                                                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                               |

## LifecycleController.LCAtributes.CollectSystemInventoryOnRestart (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables collection of system inventory on host reboot.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## LifecycleController.LCAtributes.DiscoveryFactoryDefaults (Read Only)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the discovery factory defaults.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Off</li><li>• 1 — On</li></ul> |
| <b>Default Value</b>    | 0 — Off                                                                    |
| <b>Write Privilege</b>  | Not Applicable                                                             |
| <b>License Required</b> | iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                       |

## **LifecycleController.LCAttributes.IPChangeNotifyPS (Read or Write)**

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Notifies the provisioning server about the change in IP address.           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Off</li><li>• 1 — On</li></ul> |
| <b>Default Value</b>    | 0 — Off                                                                    |
| <b>Write Privilege</b>  | Configure iDRAC                                                            |
| <b>License Required</b> | iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                       |

## **LifecycleController.LCAttributes.Licensed (Read Only)**

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether or not the part replacement feature is licensed.         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — No</li><li>• 1 — Yes</li></ul> |
| <b>Default Value</b>    | 0 — No                                                                     |
| <b>License Required</b> | iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                       |

## **LifecycleController.LCAttributes.LifecycleControllerState (Read or Write)**

|                         |                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables lifecycle controller.                                                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li><li>• 2 — Recovery (Read Only Value)</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                             |
| <b>Dependency</b>       | None                                                                                                                          |

## **LifecycleController.LCAttributes.ProvisioningServer (Read or Write)**

|                      |                                            |
|----------------------|--------------------------------------------|
| <b>Description</b>   | Specifies the Provisioning Server Address. |
| <b>Legal Values</b>  | String of up to 255 ACSII characters       |
| <b>Default Value</b> | Not Applicable                             |

|                         |                  |
|-------------------------|------------------|
| <b>Write Privilege</b>  | Configure iDRAC  |
| <b>License Required</b> | iDRAC Enterprise |
| <b>Dependency</b>       | None             |

### **LifecycleController.LCAttributes.PartConfigurationUpdate (Read or Write)**

**Description** Apply hardware configuration to the replaced part on part replacement.

**Legal Values**

- 0 — Disabled
- 1 — Apply Always
- 2 — Apply only if Firmware Match

**Default Value** 0 — Disabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **LifecycleController.LCAttributes.PartFirmwareUpdate (Read or Write)**

**Description** Apply firmware changes to the replaced part on part replacement.

**Legal Values**

- 0 — Disabled
- 1 — Allow version upgrade only
- 2 — Match firmware of replaced part

**Default Value** 2 — Match firmware of replaced part

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **LifecycleController.LCAttributes.SystemID (Read Only)**

**Description** Specifies the Dell System ID.

**Legal Values** Not Applicable

**Default Value** None

**Write Privilege** Not Applicable

**License Required** iDRAC Enterprise

**Dependency**      None

## **LifecycleController.LCAttributes.VirtualAddressManagementApplication (Read or Write)**

**Description**            Specifies the console name of Virtual Address Management Application.

**Legal Values**           String of up to 32 ACSII characters

**Default Value**          Not Applicable

**Write Privilege**        Configure iDRAC

**License Required**      iDRAC Enterprise

**Dependency**           None

## **iDRAC.ActiveDirectory**

To manage the configuration of the iDRAC Active Directory features, use the objects in this group.

### **iDRAC.ActiveDirectory.AuthTimeout (Read or Write)**

**Description**            To wait for ActiveDirectory authentication requests to complete before timing out, specify the time in seconds.

**Legal Values**           Integral values: 15–300

**Default Value**          120

**Write Privilege**        Configure iDRAC

**License Required**      iDRAC Enterprise

**Dependency**           None

### **iDRAC.ActiveDirectory.CertValidationEnable (Read or Write)**

**Description**            Enables or disables Active Directory certificate validation as a part of the Active Directory configuration process.

**Legal Values**           • 0 — Disabled  
• 1 — Enabled

**Default Value**          Not Applicable

**Write Privilege**        Configure iDRAC

**License Required**      iDRAC Enterprise

**Dependency**    None

### **iDRAC.ActiveDirectory.DCLookupByUserDomain (Read or Write)**

**Description**    To look up the user domain for Active Directory, enables the selection option.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    0 — Disabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    Cannot be disabled unless the DC Lookup Domain Name is set.

### **iDRAC.ActiveDirectory.DCLookupDomainName (Read or Write)**

**Description**    The configured search domain is used when `DCLookupByUserDomain` is disabled.

**Legal Values**    String of up to 254 ASCII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

### **iDRAC.ActiveDirectory.DCLookupEnable (Read or Write)**

**Description**    Configures iDRAC to use preconfigured domain controllers or to use DNS to find the domain controller

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    0 — Disabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

|                   |                                                                                                                                                                                           |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dependency</b> | Cannot be enabled unless one of the following is configured: <ul style="list-style-type: none"> <li>• IPv4.DNS1</li> <li>• IPv4.DNS2</li> <li>• IPv6.DNS1</li> <li>• IPv6.DNS2</li> </ul> |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### iDRAC.ActiveDirectory.DomainController1 (Read or Write)

|                         |                                                                          |
|-------------------------|--------------------------------------------------------------------------|
| <b>Description</b>      | FQDN that stores the address of the active directory domain controller1. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                     |
| <b>Default Value</b>    | Not Applicable                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                          |
| <b>License Required</b> | iDRAC Enterprise                                                         |
| <b>Dependency</b>       | None                                                                     |

### iDRAC.ActiveDirectory.DomainController2 (Read or Write)

|                         |                                                                          |
|-------------------------|--------------------------------------------------------------------------|
| <b>Description</b>      | FQDN that stores the address of the active directory domain controller 2 |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                     |
| <b>Default Value</b>    | Not Applicable                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                          |
| <b>License Required</b> | iDRAC Enterprise                                                         |
| <b>Dependency</b>       | None                                                                     |

### iDRAC.ActiveDirectory.DomainController3 (Read or Write)

|                         |                                                                          |
|-------------------------|--------------------------------------------------------------------------|
| <b>Description</b>      | FQDN that stores the address of the active directory domain controller 3 |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                     |
| <b>Default Value</b>    | Not Applicable                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                          |
| <b>License Required</b> | iDRAC Enterprise                                                         |

**Dependency**    None

### **iDRAC.ActiveDirectory.Enable (Read or Write)**

**Description**    Enables or disables Active Directory user authentication on iDRAC.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    0 — Disabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

### **iDRAC.ActiveDirectory.GCLookupEnable (Read or Write)**

**Description**    Determines how to look up the global catalog server.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    0 — Disabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    Cannot be enabled unless one of the following is configured:

- IPv4.DNS1
- IPv4.DNS2
- IPv6.DNS1
- IPv6.DNS2

### **iDRAC.ActiveDirectory.GCRootDomain (Read or Write)**

**Description**    The names of the Active Directory root domain used for DNS look up.

**Legal Values**    String of up to 254 ASCII characters

**Write Privilege**    Not Applicable

|                         |                 |
|-------------------------|-----------------|
| <b>Write Privilege</b>  | Configure iDRAC |
| <b>License Required</b> | None            |
| <b>Dependency</b>       | None            |

### **iDRAC.ActiveDirectory.GlobalCatalog1 (Read or Write)**

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Global Catalog server from which you want the iDRAC to obtain user names. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                                    |
| <b>Default Value</b>    | Not Applicable                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Enterprise                                                                        |
| <b>Dependency</b>       | None                                                                                    |

### **iDRAC.ActiveDirectory.GlobalCatalog2 (Read or Write)**

|                         |                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------|
| <b>Description</b>      | To obtain user names, specifies the Global Catalog server from which you want the iDRAC. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                                     |
| <b>Default Value</b>    | Not Applicable                                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                                          |
| <b>License Required</b> | iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                     |

### **iDRAC.ActiveDirectory.GlobalCatalog3 (Read or Write)**

|                      |                                                                                          |
|----------------------|------------------------------------------------------------------------------------------|
| <b>Description</b>   | To obtain user names, specifies the Global Catalog server from which you want the iDRAC. |
| <b>Legal Values</b>  | String of up to 254 ASCII characters                                                     |
| <b>Default Value</b> | Not Applicable<br>Configure iDRAC                                                        |

**Write Privilege**

**License Required** iDRAC Enterprise

**Dependency** None

### **iDRAC.ActiveDirectory.RacDomain (Read or Write)**

**Description** Active Directory Domain in which iDRAC resides.

**Legal Values** String of up to 254 ASCII characters

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

**License Required** iDRAC Enterprise

**Dependency** None

### **iDRAC.ActiveDirectory.RacName (Read or Write)**

**Description** Name of iDRAC as recorded in the Active Directory forest.

**Legal Values** String of up to 254 ASCII characters

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

**License Required** iDRAC Enterprise

**Dependency** None

### **iDRAC.ActiveDirectory.Schema (Read or Write)**

**Description** To use with Active Directory, determine the schema type.

**Legal Values**

- 1 — Extended Schema
- 2 — Standard Schema

**Default Value** 1 — Extended Schema

**Write Privilege** Configure iDRAC

**License Required** iDRAC Enterprise

**Dependency**    None

## iDRAC.ActiveDirectory.SSOEnable (Read or Write)

**Description**    Enables or disables Active Directory single sign-on authentication on iDRAC.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    0 — Disabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    Cannot be enabled unless SmartCard Logon Enable is disabled.

## iDRAC.ADGroup

To manage the configuration of AD standard schema settings, use these objects in the group. This group is indexed from 1 to 5.

### iDRAC.ADGroup.Domain (Read or Write)

**Description**    Active Directory Domain in which the Role Group resides.

**Legal Values**    String of up to 254 ASCII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

### iDRAC.ADGroup.Name (Read or Write)

**Description**    Name of the Role Group as recorded in the Active Directory forest.

**Legal Values**    String of up to 254 ASCII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

|                         |                  |
|-------------------------|------------------|
| <b>License Required</b> | iDRAC Enterprise |
| <b>Dependency</b>       | None             |

## iDRAC.ADGroup.Privilege (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Role-based authority privileges for a Role Group. |
| <b>Legal Values</b>     | Integral values: 0–511 (0x1FF)                    |
| <b>Default Value</b>    | 0                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                   |
| <b>License Required</b> | iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                              |

## iDRAC.AutoOSLock

To manage the OS Auto lock feature, use these objects in this group.

### iDRAC.AutoOSLock.AutoOSLockState (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Enable or Disable OS Auto lock feature.                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — Disabled</li> <li>1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

## iDRAC.EmailAlert

The objects in this group configure email alerting capabilities. This group is indexed from 1 to 4.

### iDRAC.EmailAlert.Address (Read or Write)

|                         |                                                           |
|-------------------------|-----------------------------------------------------------|
| <b>Description</b>      | Specifies the destination email address for email alerts. |
| <b>Legal Values</b>     | A valid IPv4 or IPv6 address                              |
| <b>Default Value</b>    | Not Applicable                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                         |
| <b>Dependency</b>       | None                                                      |

### iDRAC.EmailAlert.CustomMsg (Read or Write)

|                         |                                                                   |
|-------------------------|-------------------------------------------------------------------|
| <b>Description</b>      | Specifies the custom message that forms the subject of the alert. |
| <b>Legal Values</b>     | A string of up to 32 ASCII characters                             |
| <b>Default Value</b>    | Not Applicable                                                    |
| <b>Write Privilege</b>  | Configure iDRAC                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                 |
| <b>Dependency</b>       | None                                                              |

### iDRAC.EmailAlert.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | To receive alerts, enable or disable the destination.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.Info

To manage information about iDRAC being queried, use these objects in the group.

### iDRAC.Info.Build (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | String containing the current product build version. |
| <b>Legal Values</b>     | String of up to 16 ASCII characters                  |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### iDRAC.Info.Description (Read or Write)

|                         |                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Text description of the iDRAC.                                                                  |
| <b>Legal Values</b>     | String of up to 255 ASCII characters                                                            |
| <b>Default Value</b>    | The system component provides a set of remote management operations for Dell PowerEdge Servers. |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                               |
| <b>Dependency</b>       | None                                                                                            |

### iDRAC.Info.Name (Read or Write)

|                         |                                                 |
|-------------------------|-------------------------------------------------|
| <b>Description</b>      | User assigned name identifying this controller. |
| <b>Legal Values</b>     | String of up to 15 ASCII characters             |
| <b>Default Value</b>    | Not Applicable                                  |
| <b>Write Privilege</b>  | Configure iDRAC                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise               |

**Dependency**    None

### **iDRAC.Info.Product (Read or Write)**

**Description**    String identifying the Product.

**Legal Values**    String of up to 63 ASCII characters

**Default Value**    Integrated Dell Remote Access Controller

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.Info.Type (Read or Write)**

**Description**    Identifies the remote access controller type

**Legal Values**

- 16 (12G iDRAC Monolithic)
- 17 (12G iDRAC Modular)

**Default Value**    12G Monolithic

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.Info.Version (Read Only)**

**Description**    String containing the current product firmware version.

**Legal Values**    String of up to 63 ASCII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## iDRAC.Info.ServerGen (Read or Write)

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | Indicates the server generation.    |
| <b>Legal Values</b>     | String of up to 12 ASCII characters |
| <b>Default Value</b>    | Not Applicable                      |
| <b>Write Privilege</b>  | Configure iDRAC                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | None                                |

## iDRAC.IOIDOpt

The objects in this group manage the IOIDOpt attributes.

### iDRAC.IOIDOptEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Identity Optimization (IO).                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default values</b>   | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.IOIDOpt.InitiatorPersistencePolicy (Read or Write)

|                      |                                                                                                                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Sets the virtual address management .                                                                                                                                                                                                                                                                                 |
| <b>Legal Values</b>  | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 1 — WarmReset</li><li>• 2 — PowerGoodReset</li><li>• 3 — WarmReset, PowerGoodReset</li><li>• 4 — ACPowerLoss</li><li>• 5 — WarmReset, ACPowerLoss</li><li>• 6 — PowerGoodReset, ACPowerLoss</li><li>• 7 — WarmReset, PowerGoodReset, ACPowerLoss</li></ul> |
| <b>Default Value</b> | 7 — WarmReset, PowerGoodReset, ACPowerLoss                                                                                                                                                                                                                                                                            |

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC and Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | <code>IOIDOptEnable</code> attribute must be enabled. |

### iDRAC.IOIDOpt.StorageTargetPersistencePolicy (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the Virtual Address Management StorageTargetPersistencePolicy.                                                                                                                                                                                                                                                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — WarmReset</li> <li>• 2 — PowerGoodReset</li> <li>• 3 — WarmReset, PowerGoodReset</li> <li>• 4 — ACPowerLoss</li> <li>• 5 — WarmReset, ACPowerLoss</li> <li>• 6 — PowerGoodReset, ACPowerLoss</li> <li>• 7 — WarmReset, PowerGoodReset, ACPowerLoss</li> </ul> |
| <b>Default Value</b>    | ACPowerLoss, PowerGoodReset, WarmReset                                                                                                                                                                                                                                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                              |
| <b>Dependency</b>       | To configure, the <code>iDRAC.IOIDOpt.Enable</code> property must indicate <code>Enabled</code> .                                                                                                                                                                                                                              |

### iDRAC.IOIDOpt.VirtualAddressPersistencePolicyAuxPwrd (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Applied for the Aux powered devices, which persist the virtual address on cold and warm reset.                                                                                                                                                                                                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — WarmReset</li> <li>• 2 — PowerGoodReset</li> <li>• 3 — WarmReset, PowerGoodReset</li> <li>• 4 — ACPowerLoss</li> <li>• 5 — WarmReset, ACPowerLoss</li> <li>• 6 — PowerGoodReset, ACPowerLoss</li> <li>• 7 — WarmReset, PowerGoodReset, ACPowerLoss</li> </ul> |
| <b>Default Value</b>    | ACPowerLoss, PowerGoodReset, WarmReset                                                                                                                                                                                                                                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                              |
| <b>Dependency</b>       | To configure, the <code>iDRAC.IOIDOpt.Enable</code> property must indicate <code>Enabled</code> .                                                                                                                                                                                                                              |

## iDRAC.IOIDOpt.VirtualAddressPersistencePolicyNonAuxPwrd (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Applied for the Non-Aux powered devices, which persist the virtual address on warm reset.                                                                                                                                                                                                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 1 — WarmReset</li><li>• 2 — PowerGoodReset</li><li>• 3 — WarmReset, PowerGoodReset</li><li>• 4 — ACPowerLoss</li><li>• 5 — WarmReset, ACPowerLoss</li><li>• 6 — PowerGoodReset, ACPowerLoss</li><li>• 7 — WarmReset, PowerGoodReset, ACPowerLoss</li></ul> |
| <b>Default Value</b>    | ACPowerLoss, PowerGoodReset, WarmReset                                                                                                                                                                                                                                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                     |
| <b>Dependency</b>       | To configure, the <code>iDRAC.IOIDOpt.Enable</code> property must indicate <code>Enabled</code> .                                                                                                                                                                                                                     |

## iDRAC.IPBlocking

To configure IP address blocking feature of iDRAC, Use the objects in this group.

### iDRAC.IPBlocking.BlockEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the IPv4 address blocking feature of iDRAC.                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.IPBlocking.FailCount (Read or Write)

|                         |                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The maximum number of logins that are unsuccessful to occur within the window before logs in attempts from the IP address are rejected. |
| <b>Legal Values</b>     | Integral values: 2–16                                                                                                                   |
| <b>Default Value</b>    | 3                                                                                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                    |

### iDRAC.IPBlocking.FailWindow (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Defines the time span in seconds that the unsuccessful attempts are counted. |
| <b>Legal Values</b>     | Integral values from 10 to 65535                                             |
| <b>Default Value</b>    | 60                                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

### iDRAC.IPBlocking.PenaltyTime (Read or Write)

|                         |                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Defines the time span in seconds that session requests from an IP address with excessive failures are rejected. |
| <b>Legal Values</b>     | Integral values: 2–65535                                                                                        |
| <b>Default Value</b>    | 600                                                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                               |
| <b>Dependency</b>       | None                                                                                                            |

### iDRAC.IPBlocking.RangeAddr (Read or Write)

|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the acceptable IPv4 address bit pattern in positions determined by the 1s in the range mask. |
| <b>Legal Values</b>     | Valid IPv4 Address                                                                                     |
| <b>Default Value</b>    | 192.168.0                                                                                              |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | None                                                                                                   |

### iDRAC.IPBlocking.RangeEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the IPv4 Address Range validation feature of iDRAC.              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.IPBlocking.RangeMask (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Standard IP mask values with left-justified bits. |
| <b>Legal Values</b>     | Valid IPv4 Address Mask                           |
| <b>Default Value</b>    | 255.255.255.0                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

## iDRAC.IPMILan

To configure IPMI over LAN of the system, use the objects in this group.

### iDRAC.IPMILan.AlertEnable (Read or Write)

**Description** Enables or disables global email alerting.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** 0 — Disabled

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPMILan.CommunityName (Read or Write)

**Description** Specifies the SNMP community name for traps.

**Legal Values** String of up to 18 ASCII characters

**Default Value** Public

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPMILan.Enable (Read or Write)

**Description** Enables or disables the IPMI over LAN interface.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** 0 — Disabled

**Write Privilege** Configure iDRAC

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPMILan.EncryptionKey (Read or Write)

|                         |                                                                  |
|-------------------------|------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the IPMI over LAN interface.                 |
| <b>Legal Values</b>     | String of up to 18 ASCII characters                              |
| <b>Default Value</b>    | 0000000000000000000000000000000000000000000000000000000000000000 |
| <b>Write Privilege</b>  | Configure iDRAC                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                |
| <b>Dependency</b>       | None                                                             |

### iDRAC.IPMILan.PrivLimit (Read or Write)

|                         |                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the maximum privilege level for IPMI over LAN access.                                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 2 — User</li><li>• 3 — Operator</li><li>• 4 — Administrator</li></ul> |
| <b>Default Value</b>    | 4 — Administrator                                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                             |
| <b>Dependency</b>       | None                                                                                                          |

## iDRAC.IPMI.Serial

To configure the IPMI serial interface, use this objects in this group.



 **NOTE:** This is supported only for rack and tower systems.

### iDRAC.IPMSerial.BaudRate (Read or Write)

|                     |                                                          |
|---------------------|----------------------------------------------------------|
| <b>Description</b>  | Specifies the baud rate for serial connection over IPMI. |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• 9600</li></ul>   |

- 19200
- 38400
- 57600
- 115200

**Default Value** 115200

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPMISerial.ChanPrivLimit (Read or Write)

**Description** Specifies the maximum privilege limit allowed on the IPMI serial channel.

**Legal Values**

- 2 — User
- 3 — Operator
- 4 — Administrator

**Default Value** 4 — Administrator

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPMISerial.ConnectionMode (Read or Write)

**Description** Determines the IPMI defined mode of the serial port.

**Legal Values**

- 1 — Basic
- 0 — Terminal

**Default Value** 1 — Basic

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## iDRAC.IPMISerial.DeleteControl (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables delete control on the IPMI serial interface.                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.IPMISerial.EchoControl (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables echo control on the IPMI serial interface.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.IPMISerial.FlowControl (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Flow Control setting for IPMI serial port.                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 2 — RTS or CTS</li></ul> |
| <b>Default Value</b>    | 2 — RTS or CTS                                                                      |
| <b>Write Privilege</b>  | Configure iDRAC                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

## iDRAC.IPMISerial.HandshakeControl (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the IPMI terminal mode handshake control.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.IPMISerial.InputNewLineSeq (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the input new line sequence for the IPMI serial interface.           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 1 — Enter</li><li>• 2 — Null</li></ul> |
| <b>Default Value</b>    | 2 — Null                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | None                                                                           |

## iDRAC.IPMISerial.LineEdit (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables line editing on the IPMI serial interface.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.IPMISerial.NewLineSeq (Read or Write)

|                         |                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the new line sequence for the IPMI serial interface.                                                                                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 1 — CR-LF</li><li>• 2 — Null</li><li>• 3 — CR</li><li>• 4 — LF-CR</li><li>• 5 — LF</li></ul> |
| <b>Default Value</b>    | 1 — CR-LF                                                                                                                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                                    |

## iDRAC.IPMISOL

Use the objects in this group to configure the SOL capabilities of the system.

### iDRAC.IPMISOL.AccumulateInterval (Read or Write)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the typical amount of time that iDRAC waits before transmitting a partial SOL character data packet. |
| <b>Legal Values</b>     | Integral values: 1–255                                                                                         |
| <b>Default Value</b>    | Not Applicable                                                                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                              |
| <b>Dependency</b>       | None                                                                                                           |

### iDRAC.IPMISOL.BaudRate (Read or Write)

|                     |                                                                                        |
|---------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>  | Specifies the Baud rate for serial communication over LAN.                             |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• 9600</li><li>• 19200</li><li>• 57600</li></ul> |

- 115200

**Default Value** 115200

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **iDRAC.IPMISOL.Enable (Read or Write)**

**Description** Enables or disables SOL.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** 1 — Enabled

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **iDRAC.IPMISOL.MinPrivilege (Read or Write)**

**Description** Specifies the minimum privilege level required for serial access.

**Legal Values**

- 2 — User
- 3 — Operator
- 4 — Administrator

**Default Value** 4 — Administrator

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## iDRAC.IPMISOL.SendThreshold (Read or Write)

|                         |                                                                                                                      |
|-------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | To buffer before sending an SOL data packet, specifies the SOL threshold limit value and the maximum number of bytes |
| <b>Legal Values</b>     | Integral values: 1–255                                                                                               |
| <b>Default Value</b>    | Not Applicable                                                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                    |
| <b>Dependency</b>       | None                                                                                                                 |

## iDRAC.IPv4

To manage the IPv4 configuration properties of iDRAC, use these objects in this group.

### iDRAC.IPv4.Address (Read or Write)

|                         |                                                                |
|-------------------------|----------------------------------------------------------------|
| <b>Description</b>      | The current IPv4 address assigned to iDRAC.                    |
| <b>Legal Values</b>     | Valid IPv4 Address<br>,                                        |
| <b>Default Value</b>    | 192.168.0                                                      |
| <b>Write Privilege</b>  | Configure iDRAC                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                              |
| <b>Dependency</b>       | Cannot be set unless <code>IPv4.DHCPEnable</code> is disabled. |

### iDRAC.IPv4.DHCPEnable (Read or Write)

|                        |                                                                                  |
|------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies if DHCP is used to assign the iDRAC IPv4 address.                      |
| <b>Legal Values</b>    | <ul style="list-style-type: none"><li>0 — Disabled</li><li>1 — Enabled</li></ul> |
| <b>Default Value</b>   | 0 — Disabled                                                                     |
| <b>Write Privilege</b> | Configure iDRAC                                                                  |

|                         |                                                               |
|-------------------------|---------------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                             |
| <b>Dependency</b>       | Cannot be enabled unless <code>IPv4.Enable</code> is enabled. |

### iDRAC.IPv4.DNS1 (Read or Write)

|                         |                                                                 |
|-------------------------|-----------------------------------------------------------------|
| <b>Description</b>      | IPv4 address for DNS server 1.                                  |
| <b>Legal Values</b>     | Valid IPv4 Address                                              |
| <b>Default Value</b>    | 0.0.0.0                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                               |
| <b>Dependency</b>       | Cannot be set unless <code>IPv4.DNSFromDHCP</code> is disabled. |

### iDRAC.IPv4.DNS2 (Read or Write)

|                         |                                                                 |
|-------------------------|-----------------------------------------------------------------|
| <b>Description</b>      | IPv4 address for DNS Server 2.                                  |
| <b>Legal Values</b>     | Valid IPv4 Address                                              |
| <b>Default Value</b>    | 0.0.0.0                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                               |
| <b>Dependency</b>       | Cannot be set unless <code>IPv4.DNSFromDHCP</code> is disabled. |

### iDRAC.IPv4.DNSFromDHCP (Read or Write)

|                        |                                                                                                  |
|------------------------|--------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies if the DNS server IPv4 addresses must be assigned from the DHCP server on the network. |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul>          |
| <b>Default Value</b>   | 0 — Disabled                                                                                     |
| <b>Write Privilege</b> | Configure iDRAC                                                                                  |

|                         |                                                                   |
|-------------------------|-------------------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                 |
| <b>Dependency</b>       | Cannot be enabled unless <code>IPv4.DHCPEnable</code> is enabled. |

### iDRAC.IPv4.Enable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the iDRAC IPv4 stack.                                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

### iDRAC.IPv4.Gateway (Read or Write)

|                         |                                                                |
|-------------------------|----------------------------------------------------------------|
| <b>Description</b>      | The gateway for the iDRAC IPv4 address.                        |
| <b>Legal Values</b>     | Valid IPv4 gateway                                             |
| <b>Default Value</b>    | 192.168.0                                                      |
| <b>Write Privilege</b>  | Configure iDRAC                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                              |
| <b>Dependency</b>       | Cannot be set unless <code>IPv4.DHCPEnable</code> is disabled. |

### iDRAC.IPv4.Netmask (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | The subnet mask used for the iDRAC IPv4 address. |
| <b>Legal Values</b>     | Valid IPv4 netmask                               |
| <b>Default Value</b>    | 255.255.255.0                                    |
| <b>Write Privilege</b>  | Configure iDRAC                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |

**Dependency** Cannot be set unless `IPv4.DHCPEnable` is disabled.

## iDRAC.IPv4Static

Use the objects in this group to manage the IPv4 Static configuration properties of iDRAC.

### iDRAC.IPv4Static.Address (Read or Write)

**Description** iDRAC static IPv4 address. This address can be configured even when DHCP is enabled.

**Legal Values** Valid IPv4 Address

**Default Value** 192.168.0

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPv4Static.DNS1 (Read or Write)

**Description** Statically configurable DNS Server 1.

**Legal Values** Valid IPv4 Address

**Default Value** 0.0.0.0

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### iDRAC.IPv4Static.DNS2 (Read or Write)

**Description** Statically configurable DNS Server 2.

**Legal Values** Valid IPv4 Address

**Default Value** 0.0.0.0

**Write Privilege** Configure iDRAC

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **iDRAC.IPv4Static.DNSFromDHCP (Read or Write)**

|                         |                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the DNS server IPv4 addresses should be assigned from the DHCP server on the network. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul>            |
| <b>Default Value</b>    | 0 — Disabled                                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | None                                                                                               |

### **iDRAC.IPv4Static.Gateway (Read or Write)**

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | iDRAC static IPv4 gateway. This address can be configured even when DHCP is enabled. |
| <b>Legal Values</b>     | Valid IPv4 gateway                                                                   |
| <b>Default Value</b>    | 192.168.0                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### **iDRAC.IPv4Static.Netmask (Read or Write)**

|                         |                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------|
| <b>Description</b>      | iDRAC static IPv4 subnet mask. This address can be configured even when DHCP is enabled. |
| <b>Legal Values</b>     | Valid IPv4 netmask                                                                       |
| <b>Default Value</b>    | 255.255.255.0                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                        |

**Dependency**    None

## iDRAC.IPv6

To manage the IPv6 configuration properties of iDRAC, use the objects in this group.

### iDRAC.IPv6.Address 1 (Read or Write)

**Description**    iDRAC IPv6 Address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    Cannot be set unless `IPv6.AutoConfig` is disabled.

### iDRAC.IPv6.Address 2 (Read or Write)

**Description**    iDRAC IPv6 second address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### iDRAC.IPv6.Address 3 (Read or Write)

**Description**    iDRAC IPv6 third address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.IPv6.Address 4 (Read or Write)**

**Description**    iDRAC IPv6 fourth address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.IPv6.Address 5 (Read or Write)**

**Description**    iDRAC IPv6 fifth address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.IPv6.Address 6 (Read or Write)**

**Description**    iDRAC IPv6 sixth address.

**Legal Values**    Valid IPv6 Address

**Default Value**    ::

**Write  
Privilege**        Configure iDRAC

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### iDRAC.IPv6.Address 7 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 seventh address.       |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address 8 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 eighth address.        |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address 9 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 ninth address.         |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address10 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 tenth address.         |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address11 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 eleventh address.      |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address12 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 twelfth address.       |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address13 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 thirteenth address.    |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address14 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 fourteenth address.    |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6.Address15 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 fifteenth address.     |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.IPv6.AutoConfig (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the iDRAC IPv6 auto configuration option.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.IPv6.DNS1 (Read or Write)

|                         |                                                                  |
|-------------------------|------------------------------------------------------------------|
| <b>Description</b>      | IPv6 DNS Server 1 Address.                                       |
| <b>Legal Values</b>     | Valid IPv6 Address                                               |
| <b>Default Value</b>    | ::                                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                |
| <b>Dependency</b>       | Cannot be set unless <code>IPv6.DNSFromDHCP6</code> is disabled. |

## iDRAC.IPv6.DNS2 (Read or Write)

|                         |                                                                  |
|-------------------------|------------------------------------------------------------------|
| <b>Description</b>      | IPv6 DNS Server 2 Address.                                       |
| <b>Legal Values</b>     | Valid IPv6 Address                                               |
| <b>Default Value</b>    | ::                                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                |
| <b>Dependency</b>       | Cannot be set unless <code>IPv6.DNSFromDHCP6</code> is disabled. |

### iDRAC.IPv6.DNSFromDHCP6 (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the DNS Server addresses are obtained from DHCP or not.                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | Cannot be Enabled unless IPv6.AutoConfig is enabled.                                 |

### iDRAC.IPv6.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or Disables iDRAC IPv6 stack.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.IPv6.Gateway (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | iDRAC IPv6 Gateway                                |
| <b>Legal Values</b>     | Valid IPv6 gateway                                |
| <b>Default Value</b>    | ::                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | Cannot be set unless IPv6.AutoConfig is disabled. |

## iDRAC.IPv6.LinkLocalAddress (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC IPv6 Link Local Address.    |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Default Value</b>    | ::                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.IPv6.PrefixLength (Read or Write)

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Prefix length for the iDRAC IPv6 Address. |
| <b>Legal Values</b>     | Integral values: 1–128                    |
| <b>Default Value</b>    | 64                                        |
| <b>Write Privilege</b>  | Configure iDRAC                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

## iDRAC.IPv6Static

To manage the IPv6 static configuration properties of iDRAC, use the objects in this group

### iDRAC.IPv6Static.Address1 (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC static IPv6 address.        |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.IPv6Static.DNS1 (Read or Write)

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>Description</b>      | Statically configurable DNS Server 1. |
| <b>Legal Values</b>     | Valid IPv6 Address                    |
| <b>Write Privilege</b>  | Configure iDRAC                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise     |
| <b>Dependency</b>       | None                                  |

### iDRAC.IPv6Static.DNS2 (Read or Write)

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>Description</b>      | Statically configurable DNS Server 2. |
| <b>Legal Values</b>     | Valid IPv6 Address                    |
| <b>Write Privilege</b>  | Configure iDRAC                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise     |
| <b>Dependency</b>       | None                                  |

### iDRAC.IPv6Static.DNSFromDHCP6 (Read or Write)

|                         |                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the DNS server IPv6 addresses must be assigned from the DHCP server on the network. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>             |
| <b>Default Value</b>    | 0 — Disabled                                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                |
| <b>Dependency</b>       | None                                                                                             |

## iDRAC.IPv6Static.Gateway (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | iDRAC static IPv6 gateway.        |
| <b>Legal Values</b>     | Valid IPv6 Address                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.IPv6Static.PrefixLength (Read or Write)

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Prefix length for the iDRAC IPv6 Address. |
| <b>Legal Values</b>     | Integral values: 1–128                    |
| <b>Default Value</b>    | 64                                        |
| <b>Write Privilege</b>  | Configure iDRAC                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

## iDRAC.IPv6URL

Use the objects in this group to manage the IPv6 static configuration properties of iDRAC.

### iDRAC.IPv6URL.URL (Read Only)

|                         |                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------|
| <b>Description</b>      | iDRAC IPv6 URL String of format ' <b>https://[ipv6 address]:&lt;port number&gt;</b> ' |
| <b>Legal Values</b>     | IPv6 URL String                                                                       |
| <b>Default Value</b>    |                                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                     |
| <b>Dependency</b>       | iDRAC IPv6 has to be Enabled                                                          |

## iDRAC.LDAP

To configure properties for LDAP settings, use the objects in this group.

### iDRAC.LDAP.BaseDN (Read or Write)

|                         |                                                                               |
|-------------------------|-------------------------------------------------------------------------------|
| <b>Description</b>      | The Domain Name of the branch of the directory where all searches must start. |
| <b>Legal Values</b>     | String of up to 63 ASCII characters                                           |
| <b>Default Value</b>    | Not Applicable                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                              |
| <b>Dependency</b>       | None                                                                          |

### iDRAC.LDAP.BindDN (Read or Write)

|                         |                                                                               |
|-------------------------|-------------------------------------------------------------------------------|
| <b>Description</b>      | The domain name of the branch of the directory where all searches must start. |
| <b>Legal Values</b>     | String of up to 255 ASCII characters                                          |
| <b>Default Value</b>    | Not Applicable                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                              |
| <b>Dependency</b>       | None                                                                          |

### iDRAC.LDAP.BindPassword (Write Only)

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | A bind password to use along with the bindDN. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters          |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Configure iDRAC                               |
| <b>License Required</b> | iDRAC Enterprise                              |
| <b>Dependency</b>       | None                                          |

### iDRAC.LDAP.CertValidationEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls certificate validation during SSL handshake.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.LDAP.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Turns LDAP service on or off.                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.LDAP.GroupAttribute (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Specifies which LDAP attribute is used to check for group membership. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters                                  |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Configure iDRAC                                                       |
| <b>License Required</b> | iDRAC Enterprise                                                      |
| <b>Dependency</b>       | None                                                                  |

## iDRAC.LDAP.GroupAttributesDN (Read or Write)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether the user domain name must be used from the LDAP server or from the user that provides login. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters                                                                           |
| <b>Default Value</b>    | 1 — Enabled                                                                                                    |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                |
| <b>License Required</b> | iDRAC Enterprise                                                                                               |
| <b>Dependency</b>       | None                                                                                                           |

## iDRAC.LDAP.Port (Read or Write)

|                         |                         |
|-------------------------|-------------------------|
| <b>Description</b>      | Port of LDAP over SSL.  |
| <b>Legal Values</b>     | Integer values: 1–65535 |
| <b>Default Value</b>    | 636                     |
| <b>Write Privilege</b>  | Configure iDRAC         |
| <b>License Required</b> | iDRAC Enterprise        |
| <b>Dependency</b>       | None                    |

## iDRAC.LDAP.SearchFilter (Read or Write)

|                         |                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | A valid LDAP search filter to be used if the user attribute cannot uniquely identify the login user within the chosen baseDN. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                                                                          |
| <b>Default Value</b>    | Not Applicable                                                                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                                                                              |
| <b>Dependency</b>       | None                                                                                                                          |

## iDRAC.LDAP.Server (Read or Write)

|                         |                                            |
|-------------------------|--------------------------------------------|
| <b>Description</b>      | Configures the address of the LDAP Server. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters       |
| <b>Default Value</b>    | Not Applicable                             |
| <b>Write Privilege</b>  | Configure iDRAC                            |
| <b>License Required</b> | iDRAC Enterprise                           |
| <b>Dependency</b>       | None                                       |

## iDRAC.LDAP.UserAttribute (Read or Write)

|                         |                                        |
|-------------------------|----------------------------------------|
| <b>Description</b>      | To search, specify the user attribute. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters   |
| <b>Default Value</b>    | Not Applicable                         |
| <b>Write Privilege</b>  | Configure iDRAC                        |
| <b>License Required</b> | iDRAC Enterprise                       |
| <b>Dependency</b>       | None                                   |

## iDRAC.LDAPRoleGroup

The objects in this group enable configuration of role groups for LDAP. This group is indexed from 1 to 5.

### iDRAC.LDAPRoleGroup.DN (Read or Write)

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>Description</b>      | The Domain Name of this group.        |
| <b>Legal Values</b>     | String of up to 1024 ASCII characters |
| <b>Default Value</b>    | Not Applicable                        |
| <b>Write Privilege</b>  | Configure iDRAC                       |
| <b>License Required</b> | iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                  |

## iDRAC.LDAPRoleGroup.Privilege (Read or Write)

|                         |                                                                           |
|-------------------------|---------------------------------------------------------------------------|
| <b>Description</b>      | A bit-mask defining the privileges associated with this particular group. |
| <b>Legal Values</b>     | Integral values: 0–511 (0x1FF)                                            |
| <b>Default Value</b>    | 0                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                           |
| <b>License Required</b> | iDRAC Enterprise                                                          |
| <b>Dependency</b>       | None                                                                      |

## iDRAC.LocalSecurity

To manage the ability to configure iDRAC, use the objects in this group.

### iDRAC.LocalSecurity.LocalConfig (Read or Write)

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>      | To configure iDRAC from Local RACADM, enable or disable the ability of the local user. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>   |
| <b>Default Value</b>    | 0 — Disabled                                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                      |
| <b>Dependency</b>       | None                                                                                   |

### iDRAC.LocalSecurity.PrebootConfig (Read or Write)

|                        |                                                                                                    |
|------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>     | To configure iDRAC from the BIOS POST option-ROM, enable or disable the ability of the local user. |
| <b>Legal Values</b>    | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>               |
| <b>Default Value</b>   | 0 — Disabled                                                                                       |
| <b>Write Privilege</b> | Configure iDRAC                                                                                    |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.Logging

iDRAC. Logging Manages the ability to configure iDRAC

### iDRAC.Logging.SELOEMEventFilterEnable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the ability of Logging SEL Records with OEM.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

## iDRAC.NIC

To configure the iDRAC NIC, use the object in this group.

 **NOTE:** The following objects are not valid for the modular systems:

- Auto negotiation
- Auto dedicated NIC
- Network speed
- Duplex
- Dedicated NIC scan time
- Shared NIC scan time

### iDRAC.NIC.Autoconfig (Read or Write)

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Sets the DHCP auto configuration operation.                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> </ul> <div>  <b>NOTE:</b><br/>iDRAC does not perform DHCP configuration.         </div> <ul style="list-style-type: none"> <li>• 1 — Enable Once</li> </ul> <div>  <b>NOTE:</b> </div> |

- iDRAC performs DHCP configuration once.
- 2 — Enable Once After Reset



**NOTE:**

Configures after iDRAC reset.

|                         |                  |
|-------------------------|------------------|
| <b>Default Values</b>   | 0 — Disabled     |
| <b>Write Privilege</b>  | Configure iDRAC  |
| <b>License Required</b> | iDRAC Enterprise |
| <b>Dependency</b>       | None             |

### iDRAC.NIC.AutoDetect (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables auto detection feature of iDRAC.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — Disabled</li> <li>1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                        |
| <b>Write Privilege</b>  | Configure iDRAC                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise<br>iDRAC Express (for Blades) or iDRAC Enterprise |
| <b>Dependency</b>       | This object is writable only when NIC Selection is in shared mode.                  |

### iDRAC.NIC.Autoneg (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables autonegotiation of physical link speed and duplex.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — Disabled</li> <li>1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

## iDRAC.NIC.DedicatedNICScanTime (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Wait time for the iDRAC to switch from dedicated mode to shared mode. |
| <b>Legal Values</b>     | Integral values: 5–255                                                |
| <b>Default Value</b>    | 5                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

## iDRAC.NIC.DNSDomainFromDHCP (Read or Write)

|                         |                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies that the iDRAC DNS domain name must be assigned from the network DHCP server.                                                                                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>                                                                                          |
| <b>Default Value</b>    | 0 — Disabled                                                                                                                                                                  |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                             |
| <b>Dependency</b>       | Can be Enabled only if the following are enabled: <ul style="list-style-type: none"><li>• IPv4.Enable and IPv4.DHCPEnable</li><li>• IPv6.Enable and IPv6.AutoConfig</li></ul> |

## iDRAC.NIC.DNSDomainName (Read or Write)

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | The DNS Domain Name.                                  |
| <b>Legal Values</b>     | A string of up to 254 ASCII characters                |
| <b>Default Value</b>    | Not Applicable                                        |
| <b>Write Privilege</b>  | Configure iDRAC                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | Can be set only if NIC.DNSDomainFromDHCP is disabled. |

## iDRAC.NIC.DNSDomainNameFromDHCP (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies that the iDRAC DNS domain name must be assigned from the network DHCP server. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>    |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

## iDRAC.NIC.DNSRacName (Read or Write)

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | The iDRAC name.                     |
| <b>Legal Values</b>     | String of up to 63 ASCII characters |
| <b>Default Value</b>    | Not Applicable                      |
| <b>Write Privilege</b>  | Configure iDRAC                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | None                                |

## iDRAC.NIC.DNSRegister (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Registers the iDRAC name with the DNS server.                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | Can be Enabled only if DNSRacName is set.                                            |

## iDRAC.NIC.Duplex (Read or Write)

|                         |                                                                               |
|-------------------------|-------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the duplex setting for the iDRAC NIC.                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Half</li><li>• 1 — Full</li></ul> |
| <b>Default value</b>    | 1 — Full                                                                      |
| <b>Write Privilege</b>  | Configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                             |
| <b>Dependency</b>       | None                                                                          |

## iDRAC.NIC.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or Disables the iDRAC network interface controller.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.NIC.Failover (Read or Write)

|                        |                                                                                                                                                          |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Enables or disables failover for iDRAC to switch from shared to dedicated.                                                                               |
| <b>Legal Values</b>    | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 2 — LOM1</li><li>• 3 — LOM2</li><li>• 4 — LOM3</li><li>• 5 — LOM4</li><li>• 6 — All</li></ul> |
| <b>Default Value</b>   | 0 — None                                                                                                                                                 |
| <b>Write Privilege</b> | Configure iDRAC                                                                                                                                          |

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | Possible Values depend on current <code>NICSelection</code> settings. |

### iDRAC.NIC.MACAddress (Read or Write)

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | The MAC Address of the iDRAC.       |
| <b>Legal Values</b>     | String of up to 17 ASCII characters |
| <b>Default Value</b>    | Not Applicable                      |
| <b>Write Privilege</b>  | Configure iDRAC                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | None                                |

### iDRAC.NIC.MTU (Read or Write)

|                         |                                                                        |
|-------------------------|------------------------------------------------------------------------|
| <b>Description</b>      | The size in bytes of the maximum transmission unit uses the iDRAC NIC. |
| <b>Legal Values</b>     | Integral values: 576–1500                                              |
| <b>Default Value</b>    | 1500                                                                   |
| <b>Write Privilege</b>  | Configure iDRAC                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                      |
| <b>Dependency</b>       | None                                                                   |

### iDRAC.NIC.Selection (Read or Write)

|                        |                                                                                                                                                   |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies the current mode of operation for the iDRAC network interface controller.                                                               |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• 1 — Dedicated</li> <li>• 2 — LOM1</li> <li>• 3 — LOM2</li> <li>• 4 — LOM3</li> <li>• 5 — LOM4</li> </ul> |
| <b>Default Value</b>   | 1 — Dedicated                                                                                                                                     |
| <b>Write Privilege</b> | Configure iDRAC                                                                                                                                   |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.NIC.SharedNICScanTime (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Wait time for the iDRAC to switch from shared mode to dedicated mode. |
| <b>Legal Values</b>     | Integral values: 5–255                                                |
| <b>Default Value</b>    | 30                                                                    |
| <b>Write Privilege</b>  | Configure iDRAC                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

## iDRAC.NIC.Speed (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the speed for iDRAC NIC.                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                         |  <b>NOTE:</b> To set this property: <ul style="list-style-type: none"> <li>• <code>iDRAC.NIC.Selection</code> must be set to <code>Dedicated mode</code>.</li> <li>• <code>iDRAC.NIC.Autoneg</code> must be disabled.</li> <li>• <code>iDRAC.IPv4.Enable</code>, <code>iDRAC.IPv4.DHCPEnable</code>, <code>iDRAC.IPv6.Enable</code>, and <code>iDRAC.IPv6.AutoConfig</code> must be enabled.</li> </ul> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 – 10</li> <li>• 1 – 100</li> <li>• 2 – 1000</li> </ul>  <b>NOTE:</b> You cannot manually set the Network Speed to 1000 MB. This option is available only if <code>iDRAC.NIC.Autoneg</code> is set to 1 (Enabled).                                                                                                                                           |
| <b>Default Value</b>    | 1 – 100                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Dependency</b>       | Cannot change NIC Speed unless AutoNeg is set to disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                |

## iDRAC.NIC.VlanEnable (Read Only)

|                    |                                                         |
|--------------------|---------------------------------------------------------|
| <b>Description</b> | Enables or disables the VLAN capabilities of the iDRAC. |
|--------------------|---------------------------------------------------------|



**NOTE:** This object is applicable only to iDRAC on Racks and Towers.

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.NIC.VlanID (Read Only)

**Description** Specifies the VLAN ID for the network VLAN configuration.



**NOTE:** This object is applicable only to iDRAC on Racks and Towers.

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Legal Values</b>     | Integral values: 1–4069           |
| <b>Default Value</b>    | 1                                 |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.NIC.VlanPriority (Read Only)

**Description** Specifies the VLAN priority for the network VLAN configuration.



**NOTE:** This object is applicable only to iDRAC on Racks and Towers.

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Legal Values</b>     | Integral values: 0–7              |
| <b>Default Value</b>    | 0                                 |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.NICStatic

To manage DNS-related properties of iDRAC, use the objects in this group.

### iDRAC.NICStatic.DNSDomainFromDHCP (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies that the iDRAC DNS domain name must be assigned from the network DHCP server. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                                    |
| <b>Default Value</b>    | Disabled                                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

### iDRAC.NICStatic.DNSDomainName (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | The DNS Domain Name.                                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.NTPConfigGroup

To configure the properties of NTP server, use the objects in this group.

### iDRAC.NTPConfigGroup.NTP1 (Read or Write)

|                      |                                      |
|----------------------|--------------------------------------|
| <b>Description</b>   | Configure NTP Server 1 Address.      |
| <b>Legal Values</b>  | String of up to 254 ASCII characters |
| <b>Default Value</b> | Not Applicable                       |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **iDRAC.NTPConfigGroup.NTP2 (Read or Write)**

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Configure NTP Server 2 Address.      |
| <b>Legal Values</b>     | String of up to 254 ASCII characters |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Configure iDRAC                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

### **iDRAC.NTPConfigGroup.NTP3 (Read or Write)**

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>Description</b>      | Configure NTP Server 3 Address.       |
| <b>Legal Values</b>     | String of up to 254 ASCII characters. |
| <b>Default Value</b>    | Not Applicable                        |
| <b>Write Privilege</b>  | Configure iDRAC                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise     |
| <b>Dependency</b>       | None                                  |

### **iDRAC.NTPConfigGroup.NTPEnable (Read or Write)**

|                        |                                                                                         |
|------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>     | On iDRAC, enable or disable NTP server access to iDRAC.                                 |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>   | 0 — Disabled                                                                            |
| <b>Write Privilege</b> | Configure iDRAC                                                                         |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.NTPConfigGroup.NTPMaxDist (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | NTP Maximum Distance              |
| <b>Legal Values</b>     | Integral values: 1–128            |
| <b>Default Value</b>    | 16                                |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.OS-BMC

To manage OS-BMC pass-through feature, use the object in this group.

### iDRAC.OS-BMC.AdminState (Read or Write)

|                         |                                                                                            |
|-------------------------|--------------------------------------------------------------------------------------------|
| <b>Description</b>      | On iDRAC pass through, enable or disable administrative state of OS.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — Disabled</li> <li>1 — Enabled</li> </ul>        |
| <b>Default Value</b>    | 0 — Disabled                                                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                          |
| <b>Dependency</b>       | Can be set only if <code>iDRAC.OS-BMC.PTCapability</code> is set to <code>Capable</code> . |

### iDRAC.OS-BMC.OSIpAddress (Read or Write)

|                      |                                            |
|----------------------|--------------------------------------------|
| <b>Description</b>   | IPv4 address of the host Operating System. |
| <b>Legal Values</b>  | Valid IPv4 Address                         |
| <b>Default Value</b> | 0.0.0.0                                    |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.OS-BMC.PTCapability (Read or Write)

|                         |                                                                                                       |
|-------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Operating System to iDRAC Pass Through Capability status.                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Capable</li> <li>• 1 — Not Capable or Unknown</li> </ul> |
| <b>Default Value</b>    | Depends on the server capability.                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                                  |

### iDRAC.OS-BMC.PTMode (Read or Write)

|                         |                                                                                                                                                                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | <p>Enables the pass-through with shared LOM or USB.</p> <p> <b>NOTE:</b> To enable the pass-through, make sure that <code>iDRAC.OS-BMC.AdminState</code> is enabled.</p> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — lom-p2p</li> <li>• 1 — usb-p2p</li> </ul>                                                                                                                                                                      |
| <b>Default Value</b>    | 0 — lom-p2p                                                                                                                                                                                                                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                                                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                           |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                        |

### iDRAC.OS-BMC.UsbNicIpAddress (Read or Write)

|                      |                                  |
|----------------------|----------------------------------|
| <b>Description</b>   | Displays the USB NIC IP address. |
| <b>Legal Values</b>  | Valid IPv4 address               |
| <b>Default Value</b> | 169.168.0                        |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.Racadm

To manage Remote RACADM connection settings, use the object in this group.

### iDRAC.Racadm.Enable (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Remote RACADM interface.                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — Disabled</li> <li>1 — Enabled</li> </ul> |
| <b>Default Value</b>    | Enabled                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

### iDRAC.Racadm.Timeout (Read or Write)

|                         |                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Defines the idle timeout in seconds of the Remote RACADM interface.                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>0 — No timeout</li> <li>Integral values: 60–10800</li> </ul> |
| <b>Default Value</b>    | 60                                                                                                  |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                   |
| <b>Dependency</b>       | None                                                                                                |

## iDRAC.RemoteHosts

Use the objects in this group to manage the properties for configuration of the SMTP server.

## iDRAC.RemoteHost.SMTPPort (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Specifies the destination port for email alerts. |
| <b>Legal Values</b>     | Integral values: 1–65535                         |
| <b>Default Value</b>    | 25                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                  |
| <b>License Required</b> | iDRAC Express                                    |
| <b>Dependency</b>       | None                                             |

## iDRAC.RemoteHosts.SMTPServerIPAddress (Read or Write)

|                         |                                                              |
|-------------------------|--------------------------------------------------------------|
| <b>Description</b>      | IPv4 or IPv6 address of the network SMTP server.             |
| <b>Legal Values</b>     | String representing a valid SMTP server IPv4 or IPv6 address |
| <b>Default Value</b>    | 0.0.0.0                                                      |
| <b>Write Privilege</b>  | Configure iDRAC                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                            |
| <b>Dependency</b>       | None                                                         |

## iDRAC.RFS

To configure Remote file share access to iDRAC, use the object in this group

### iDRAC.RFS.MediaAttachState (Read Only)

|                         |                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------|
| <b>Description</b>      | RFS Media attach state.                                                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Attached</li><li>• 1 — Detached</li></ul> |
| <b>Default Value</b>    | 1 — Detached                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                     |
| <b>Dependency</b>       | None                                                                                  |

## iDRAC.RSM

The objects in this group manage the Rack Style Management (RSM) settings.

### iDRAC.RSM.RSMCapability (Read Only)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the status of RSM capability.                                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.RSM.RSMSetting (Read Only)

|                         |                                                                                                                   |
|-------------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the status of RSM setting.                                                                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — None</li><li>• 1 — Monitor</li><li>• 2 — Manage and Monitor</li></ul> |
| <b>Default Value</b>    | 2 — Manage and Monitor                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                 |
| <b>Dependency</b>       | None                                                                                                              |

## iDRAC.Security

Use the objects in this group to configure SSL certificate signing request settings.

For the country code, go to the link: [http://www.iso.org/iso/country\\_codes/iso\\_3166\\_code\\_lists.htm](http://www.iso.org/iso/country_codes/iso_3166_code_lists.htm).

### iDRAC.Security.CsrCommonName (Read or Write)

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the CSR Common Name (CN) that must be an IP as given in the certificate. |
| <b>Legal Values</b>     | String of up to 254 ASCII characters                                               |
| <b>Default Value</b>    | Not Applicable                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                  |

**Dependency**    None

### **iDRAC.Security.CsrCountryCode (Read or Write)**

**Description**                Specifies the CSR Country Code (CC).

**Legal Values**                String of a 2 Alphabet Country Code. For example: US

**Default Value**                Not Applicable

**Write Privilege**                Configure iDRAC

**License Required**                iDRAC Express or iDRAC Enterprise

**Dependency**                None

### **iDRAC.Security.CsrEmailAddr (Read or Write)**

**Description**    Specifies the CSR email address.

**Legal Values**    Valid email address string of up to 254 ASCII characters.

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.Security.CsrKeySize (Read or Write)**

**Description**    Specifies the SSL asymmetric key size for the CSRs.

**Legal Values**    • 1024  
                      • 2048

**Default Value**    2048

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## **iDRAC.Security.CsrLocalityName (Read or Write)**

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Specifies the CSR Locality (L).      |
| <b>Legal Values</b>     | String of up to 254 ASCII characters |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Configure iDRAC                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

## **iDRAC.Security.CsrOrganizationName (Read or Write)**

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Specifies the CSR Organization Name (O). |
| <b>Legal Values</b>     | String of up to 254 ASCII characters     |
| <b>Default Value</b>    | Not Applicable                           |
| <b>Write Privilege</b>  | Configure iDRAC                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise        |
| <b>Dependency</b>       | None                                     |

## **iDRAC.Security.CsrOrganizationUnit (Read or Write)**

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Specifies the CSR Organization Unit (OU). |
| <b>Legal Values</b>     | String of up to 254 ASCII characters      |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Configure iDRAC                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

## iDRAC.Security.CsrStateName (Read or Write)

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Specifies the CSR State Name (S).    |
| <b>Legal Values</b>     | String of up to 254 ASCII characters |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Configure iDRAC                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

## iDRAC.Serial

The objects in this group provide configuration parameters for the serial interface of iDRAC.



**NOTE:** This is supported only for rack and tower systems.

### iDRAC.Serial.BaudRate (Read or Write)

|                         |                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the Baud rate on the iDRAC serial port.                                                                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 9600</li><li>• 19200</li><li>• 38400</li><li>• 57600</li><li>• 115200</li></ul> |
| <b>Default Value</b>    | 115200                                                                                                                  |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                       |
| <b>Dependency</b>       | None                                                                                                                    |

### iDRAC.Serial.Command (Read or Write)

|                      |                                                                                                     |
|----------------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Specifies a serial command that is executed after the user logs in to the serial console interface. |
| <b>Legal Values</b>  | String of up to 128 ASCII characters                                                                |
| <b>Default Value</b> | Not Applicable                                                                                      |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.Serial.Enable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the iDRAC serial console interface.                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

### iDRAC.Serial.HistorySize (Read or Write)

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Description</b>      | Specifies the maximum size of the serial history buffer. |
| <b>Legal Values</b>     | Integral values from 0 to 8192.                          |
| <b>Default Value</b>    | 8192                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |
| <b>Dependency</b>       | None                                                     |

### iDRAC.Serial.IdleTimeout (Read or Write)

|                      |                                                                                                         |
|----------------------|---------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | The maximum number of seconds to wait before an idle serial console session is disconnected.            |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• 0 — No timeout</li> <li>• Integral values: 60–10800</li> </ul> |
| <b>Default Value</b> | 300                                                                                                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.Serial.NoAuth (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables iDRAC serial console login authentication.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                                |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

## iDRAC.SerialRedirection

The objects in this group manage Serial Redirection properties of iDRAC.



**NOTE:** It supports only rack and tower systems.

### iDRAC.SerialRedirection.Enable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the console for COM2 port redirection.                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

## iDRAC.SerialRedirection.QuitKey (Read or Write)

|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This key or key combination terminates the Virtual Console when using the console <b>COM2</b> command. |
| <b>Legal Values</b>     | <b>Ctrl</b> key followed by alphabets (a-z or A-Z), ^\                                                 |
| <b>Default Value</b>    | ^\                                                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | None                                                                                                   |

## iDRAC.serverboot

The objects in this group manages the server boot options.

### iDRAC.serverboot.BootOnce (Read or Write)

|                         |                                                                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables <b>BootOnce</b> option for the configured device.                                                                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul>                                                             |
| <b>Default values</b>   | 1 — Enabled                                                                                                                                      |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                |
| <b>Dependency</b>       | Read only if <b>iDRAC.ServerBoot.FirstBootDevice</b> is set to either BIOS (BIOS Setup), F10 (Lifecycle Controller), or F11 (BIOS Boot Manager). |

### iDRAC.serverboot.FirstBootDevice (Read or Write)

|                     |                                                                                                                                                                                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Configures the first boot device.                                                                                                                                                                                                                                                              |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Normal</li><li>• PXE</li><li>• HDD (Hard Disk Drive)</li><li>• CD-DVD (Local CD/DVD)</li><li>• BIOS (BIOS Setup)</li><li>• vFDD (Virtual Floppy)</li><li>• VCD-DVD (Virtual CD/DVD/ISO)</li><li>• FDD (Local Floppy/Primary Removable Media)</li></ul> |

- SD (Local SD Card)
- F10 (Lifecycle Controller)
- F11 (BIOS Boot Manager)
- Attached vFlash Partition Label

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default value</b>    | Normal                            |
| <b>Write Privilege</b>  | Login and configure iDRAC         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.ServiceModule

The objects in this group manages the properties of the ISM modules.

### iDRAC.ServiceModule.LCLReplication (Read or Write)

|                         |                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables Lifecycle log in operating system log Baud rate on the iDRAC serial port.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul>                 |
| <b>Default Value</b>    | 0 — Disabled                                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                       |
| <b>Dependency</b>       | If OpenManage Server Administrator is available, then the attribute is automatically set to 'Disabled'. |

### iDRAC.ServiceModule.OMSAPresence (Read Only)

|                         |                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Verifies if OMSA is present.                                                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Not Present</li> <li>• 1 — Present</li> <li>• 2 — NA</li> </ul> |
| <b>Default Value</b>    | 2 — NA                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                            |
| <b>Dependency</b>       | None                                                                                                         |

### iDRAC.ServiceModule.OSInfo (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Provides information about operating system through iDRAC Service Module.            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.ServiceModule.ServiceModuleEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Disables the Service Module process on host operating system.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.ServiceModule.ServiceModuleState (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the status of Service Module process on the host operating system.         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.ServiceModule.ServiceModuleVersion (Read)

|                     |                                                         |
|---------------------|---------------------------------------------------------|
| <b>Description</b>  | Displays the installed version of iDRAC Service Module. |
| <b>Legal Values</b> | None                                                    |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | None                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **iDRAC.ServiceModule.WatchdogRecoveryAction (Read and Write)**

|                         |                                                                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configures recovery action on watchdog alert.                                                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — Reboot</li> <li>• 2 — Poweroff</li> <li>• 3 — Powercycle</li> </ul> |
| <b>Default Value</b>    | 0 — None                                                                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                    |
| <b>Dependency</b>       | If the iDRAC.ServiceModule.WatchdogState object is 'Disabled', then the value cannot be set.                                         |

### **iDRAC.ServiceModule.WatchdogResetTime (Read and Write)**

|                         |                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configures the system reset time (unit in seconds) on watchdog alert.                        |
| <b>Legal Values</b>     | Values in range 60–720                                                                       |
| <b>Default Value</b>    | 480                                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                            |
| <b>Dependency</b>       | If the iDRAC.ServiceModule.WatchdogState object is 'Disabled', then the value cannot be set. |

### **iDRAC.ServiceModule.WatchdogState (Read and Write)**

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the watchdog timer through iDRAC Service Module.                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |

**Dependency** The value is disabled if OpenManage Server Administrator is detected or operating system Watchdog is enabled.

## iDRAC.SmartCard

The objects in this group enable you to access iDRAC using a smart card.

### iDRAC.SmartCard.SmartCardCRLEnable (Read or Write)

**Description** Enables or disables the Certificate Revocation List (CRL).

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

**License Required** iDRAC Enterprise

**Dependency** To log on, enable Smart Card.

### iDRAC.SmartCard.SmartCardLogonEnable (Read or Write)

**Description** Enables or disables Smart card login support.

**Legal Values**

- 0 — Disabled
- 1 — Enabled
- 2 — Enabled with Remote RACADM

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC and Configure User

**License Required** iDRAC Enterprise

**Dependency** Disable `ActiveDirectory.SSOEnable`

## iDRAC.SNMP

The objects in this group enable you to configure the SNMP agent and trap capabilities.

## iDRAC.SNMP.AgentCommunity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Specifies the SNMP community name for SNMP traps. |
| <b>Legal Values</b>     | String of up to 31 ACSII characters               |
| <b>Default value</b>    | Public                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

## iDRAC.SNMP.AgentEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the SNMP Agent on the iDRAC.                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.SNMP.AlertPort (Read or Write)

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Specifies the SNMP alert port for traps. |
| <b>Legal Values</b>     | Integral values: 1–65535                 |
| <b>Default Value</b>    | 162                                      |
| <b>Write Privilege</b>  | Configure iDRAC                          |
| <b>License Required</b> | iDRAC Express                            |
| <b>Dependency</b>       | None                                     |

## iDRAC.SNMP.DiscoveryPort (Read or Write)

|                     |                                         |
|---------------------|-----------------------------------------|
| <b>Description</b>  | Specifies the SNMP agent port on iDRAC. |
| <b>Legal Values</b> | Integral values: 1–65535                |

|                         |                 |
|-------------------------|-----------------|
| <b>Default Value</b>    | 161             |
| <b>Write Privilege</b>  | Configure iDRAC |
| <b>License Required</b> | iDRAC Express   |
| <b>Dependency</b>       | None            |

## iDRAC.SNMP.SNMPProtocol (Read or Write)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the SNMP protocol.                                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — All</li> <li>• 1 — SNMPv3</li> </ul> |
| <b>Default Value</b>    | 0 — All                                                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                 |
| <b>Dependency</b>       | None                                                                              |

## iDRAC.SNMP.TrapFormat (Read or Write)

|                         |                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the SNMP format.                                                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — SNMPv1</li> <li>• 1 — SNMPv2</li> <li>• 2 — SNMPv3</li> </ul> |
| <b>Default Value</b>    | 0 — SNMPv1                                                                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                          |
| <b>Dependency</b>       | None                                                                                                       |

## iDRAC.SNMP.Alert

The objects in this group configures the SNMP alert settings.

This group is indexed from 1 to 8.

## iDRAC.SNMP.Alert.DestAddr (Read or Write)

|                         |                                                                                                |
|-------------------------|------------------------------------------------------------------------------------------------|
| <b>Description</b>      | IPv4, IPv6 or FQDN address of the target destination to receive alters.                        |
| <b>Legal Values</b>     | Valid IPv4 or IPv6 or FQDN address                                                             |
| <b>Default Value</b>    | <ul style="list-style-type: none"><li>• Index 1–4 — 0.0.0.0</li><li>• Index 5–8 — ::</li></ul> |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                |
| <b>License Required</b> | None                                                                                           |
| <b>Dependency</b>       | None                                                                                           |

## iDRAC.SNMP.Alert.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables SNMP alert for the given index.                                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | None                                                                                 |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.SNMP.Alert.SNMPv3UserID (Read Only)

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Indicates the index of the user to which this alert is configured. |
| <b>Legal Values</b>     | Integral values: 2–16                                              |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                    |
| <b>License Required</b> | iDRAC Express                                                      |
| <b>Dependency</b>       | None                                                               |

## iDRAC.SNMP.Alert.SNMPv3Username (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Specifies the SNMP v3 user name for the given index. |
| <b>Legal Values</b>     | String of up to 16 ASCII characters                  |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                      |
| <b>License Required</b> | iDRAC Express                                        |
| <b>Dependency</b>       | None                                                 |

## iDRAC.SSH

The objects in this group provide configuration parameters for the SSH interface to iDRAC.

### iDRAC.SSH.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables SSH.                                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.SSH.Port (Read or Write)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Specifies the port number for the iDRAC SSH interface. |
| <b>Legal Values</b>     | Integral values: 1–65535                               |
| <b>Default Value</b>    | 22                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

## iDRAC.SSH.Timeout (Read or Write)

|                         |                                        |
|-------------------------|----------------------------------------|
| <b>Description</b>      | Defines the secure shell idle timeout. |
| <b>Legal Values</b>     | Integral values: 0–10800               |
| <b>Default Value</b>    | 1800                                   |
| <b>Write Privilege</b>  | Configure iDRAC                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise      |
| <b>Dependency</b>       | None                                   |

## iDRAC.SysLog

The objects in this group provide the properties for configuration of the SMTP server.

### iDRAC.SysLog.Port (Read or Write)

|                         |                            |
|-------------------------|----------------------------|
| <b>Description</b>      | Remote syslog port number. |
| <b>Legal Values</b>     | Integral values: 1–65535   |
| <b>Default Value</b>    | 514                        |
| <b>Write Privilege</b>  | Configure iDRAC            |
| <b>License Required</b> | iDRAC Enterprise           |
| <b>Dependency</b>       | None                       |

### iDRAC.SysLog.PowerLogEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the Power Log feature.                                           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Enterprise                                                                     |

**Dependency**    None

### **iDRAC.SysLog.PowerLogInterval (Read or Write)**

**Description**    Configure time delay for power logging.

**Legal Values**    Integral values: 1–1440

**Default Value**    5

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

### **iDRAC.SysLog.Server1 (Read or Write)**

**Description**    Name of remote syslog server 1.

**Legal Values**    String of up to 63 ACSII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

### **iDRAC.SysLog.Server2 (Read or Write)**

**Description**    Name of remote syslog server 2.

**Legal Values**    String of up to 63 ACSII characters

**Default Value**    Not Applicable

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Enterprise

**Dependency**    None

## iDRAC.SysLog.Server3 (Read or Write)

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | Name of remote syslog server 3.     |
| <b>Legal Values</b>     | String of up to 63 ACSII characters |
| <b>Default Value</b>    | Not Applicable                      |
| <b>Write Privilege</b>  | Configure iDRAC                     |
| <b>License Required</b> | iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                |

## iDRAC.SysLog.SysLogEnable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables remote syslog.                                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                 |

## iDRAC.Telnet

The objects in this group provide configuration parameters for the Telnet interface to iDRAC.

### iDRAC.Telnet.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Telnet.                                                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |

**Dependency**    None

### **iDRAC.Telnet.Port (Read or Write)**

**Description**    Specifies the port number for the iDRAC Telnet interface.

**Legal Values**    Integral values: 1–65535

**Default Value**    23

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **iDRAC.Telnet.Timeout (Read or Write)**

**Description**    Defines the Telnet idle timeout.

**Legal Values**    Integral values: 0–10800

**Default Value**    1800

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## **iDRAC.Time**

The objects in this group enable you to manage timezone setting for iDRAC.

### **iDRAC.Time.DayLightOffset (Read or Write)**

**Description**    Specifies the daylight savings offset (in minutes) to use for the iDRAC Time.

**Legal Values**    Integral values: 0 – 60

**Default Value**    0

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## iDRAC.Time.Timezone (Read or Write)

|                         |                                                                             |
|-------------------------|-----------------------------------------------------------------------------|
| <b>Description</b>      | Configure the time zone.                                                    |
| <b>Legal Values</b>     | Valid time zone string of up to 32 ASCII characters For example: US/Central |
| <b>Default Value</b>    | CST6CDT                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                           |
| <b>Dependency</b>       | None                                                                        |

## iDRAC.Time.TimeZoneOffset (Read or Write)

|                         |                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the time zone offset (in minutes) from Greenwich Mean Time (GMT) or Coordinated Universal Time (UTC) to use for the iDRAC Time. |
| <b>Legal Values</b>     | Integral values: -43200 – 46800                                                                                                           |
| <b>Default Value</b>    | 0                                                                                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                         |
| <b>Dependency</b>       | None                                                                                                                                      |

## iDRAC.Tuning

The objects in this group enable you to manage iDRAC tuning and configuration parameters.

### iDRAC.Tuning.DefaultCredentialWarning (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the default credentials warning.                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

# iDRAC.Update

The objects in this group enable you to manage configuration parameters for iDRAC firmware update.

 **NOTE:** `fwUpdateIPAddr` attribute is applicable for Monolithic & FX2/FX2s only.

## iDRAC.Update.FwUpdateIPAddr (Read or Write)

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the TFTP server address to be used for iDRAC firmware update operations. |
| <b>Legal Values</b>     | Valid IPv4, IPv6, or FQDN address of the TFTP server                               |
| <b>Default Value</b>    | Not Applicable                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                  |
| <b>Dependency</b>       | None                                                                               |

## iDRAC.Update.FwUpdatePath (Read or Write)

|                         |                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies TFTP path where iDRAC firmware image resides on TFTP server. Path is relative to TFTP root folder. |
| <b>Legal Values</b>     | String of up to 255 ACSII characters. For example: /images/12G/                                              |
| <b>Default Value</b>    | Not Applicable                                                                                               |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                            |
| <b>Dependency</b>       | None                                                                                                         |

## iDRAC.Update.FwUpdateTFTPEnable (Read or Write)

|                        |                                                                                      |
|------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>     | Enables or disables iDRAC firmware updates from a TFTP server.                       |
| <b>Legal Values</b>    | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>   | 1 — Enabled                                                                          |
| <b>Write Privilege</b> | Configure iDRAC                                                                      |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.USB

The objects in this group manages the front panel USB.

### iDRAC.USB.ConfigurationXML (Read or Write)

|                         |                                                                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Manages the configuration xml feature using the front panel USB.                                                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Disabled</li> <li>• Enabled while server has default credential settings only</li> <li>• Enabled</li> </ul> |
| <b>Default Value</b>    | Enabled while server has default credential settings only.                                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                                                                                       |
| <b>License Required</b> | iDRAC Express and iDRAC Enterprise                                                                                                                   |
| <b>Dependency</b>       | Not Applicable                                                                                                                                       |

### iDRAC.USB.ManagementPortMode (Read or Write)

|                         |                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Allows you to configure the front panel USB mode.                                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Standard OS Use</li> <li>• iDRAC Direct Only</li> </ul> |
| <b>Default Value</b>    | Automatic                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                        |
| <b>License Required</b> | iDRAC Express and iDRAC Enterprise                                                                                    |
| <b>Dependency</b>       | Not Applicable                                                                                                        |

## iDRAC.UserDomain

The objects in this group enable you to manage the Active Directory user domain names. This group is indexed from 1 to 40.

## iDRAC.UserDomain.Name (Read or Write)

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Active Directory user domain name for a given index. |
| <b>Legal Values</b>     | String of up to 255 ACSII characters                               |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

## iDRAC.Users

The objects in this group enable you to manage information about all iDRAC users. This group is indexed from 1 to 16.

### iDRAC.Users.Enable (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables an individual user.                                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b>    | 0 — Disabled. However, <code>Root user</code> is Enabled.                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | Both username and password must be configured prior to enabling the user.            |

### iDRAC.Users.IpmiLanPrivilege (Read or Write)

|                      |                                                                                                                                                         |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Specifies the maximum privilege on the IPMI LAN channel.                                                                                                |
| <b>Legal Values</b>  | Integral values: <ul style="list-style-type: none"><li>• 2 — User</li><li>• 3 — Operator</li><li>• 4 — Administrator</li><li>• 15 — No access</li></ul> |
| <b>Default Value</b> | 15 — No access                                                                                                                                          |

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Both user name and password must be configured prior to setting this object. |

### **iDRAC.Users.IpmiSerialPrivilege (Read or Write)**

|                         |                                                                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the maximum IPMI Serial privilege.                                                                                                                 |
| <b>Legal Values</b>     | Integral values: <ul style="list-style-type: none"> <li>• 2 — User</li> <li>• 3 — Operator</li> <li>• 4 — Administrator</li> <li>• 15 — No access</li> </ul> |
| <b>Default Value</b>    | 15 — No access                                                                                                                                               |
| <b>Write Privilege</b>  | Configure iDRAC and user                                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                            |
| <b>Dependency</b>       | Both username and password must be configured prior to setting this object.                                                                                  |

### **iDRAC.Users.MD5v3Key (Read or Write)**

|                         |                                                         |
|-------------------------|---------------------------------------------------------|
| <b>Description</b>      | Indicates the MD5 Hash of the SNMP V3 key.              |
| <b>Legal Values</b>     | String of 32 characters                                 |
| <b>Default Value</b>    | Not Applicable                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                         |
| <b>License Required</b> | iDRAC Express                                           |
| <b>Dependency</b>       | User name must be configured prior to setting MD5v3Key. |

### **iDRAC.Users.Password (Read or Write)**

|                        |                                      |
|------------------------|--------------------------------------|
| <b>Description</b>     | Configuring the iDRAC user password. |
| <b>Legal Values</b>    | String of up to 254 characters       |
| <b>Default Value</b>   | Not Applicable                       |
| <b>Write Privilege</b> | Configure iDRAC                      |

|                         |                                                    |
|-------------------------|----------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                  |
| <b>Dependency</b>       | Cannot be set without first setting the user name. |

### **iDRAC.Users.SHA256Password (Read or Write)**

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Indicates the SHA256 hash of the password.                 |
| <b>Legal Values</b>     | String of 64 characters                                    |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                         |
| <b>License Required</b> | iDRAC Express                                              |
| <b>Dependency</b>       | User name must be configured prior to setting this object. |

### **iDRAC.Users.SHA256PasswordSalt (Read or Write)**

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Indicates the Salt string added to password before hash.   |
| <b>Legal Values</b>     | String of 32 characters                                    |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                         |
| <b>License Required</b> | iDRAC Express                                              |
| <b>Dependency</b>       | User name must be configured prior to setting this object. |

### **iDRAC.Users.Privilege (Read or Write)**

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the role-based authority privileges allowed for the user.          |
| <b>Legal Values</b>     | Integral values: 0–511 (0x1FF)                                               |
| <b>Default Value</b>    | 0                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Both user name and password must be configured prior to setting this object. |

### **iDRAC.Users.SHA1v3Key (Read or Write)**

|                     |                                             |
|---------------------|---------------------------------------------|
| <b>Description</b>  | Indicates the SHA1 Hash of the SNMP V3 key. |
| <b>Legal Values</b> | String of 40 characters                     |

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Default Value</b>    | Not Applicable                                           |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                       |
| <b>License Required</b> | iDRAC Express                                            |
| <b>Dependency</b>       | User name must be configured prior to setting SHA1v3Key. |

### **iDRAC.Users.SNMPv3AuthenticationType (Read or Write)**

|                         |                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configure SNMPv3 authentication protocol type.                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — MD5</li> <li>• 2 — SHA</li> </ul> |
| <b>Default Value</b>    | 2 — SHA                                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | None                                                                                               |

### **iDRAC.Users.SNMPv3Enable (Read or Write)**

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables SNMPv3 support for an iDRAC User.                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

### **iDRAC.Users.SNMPv3PrivacyType (Read or Write)**

|                     |                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Configure SNMPv3 privacy protocol type.                                                            |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — DES</li> <li>• 2 — AES</li> </ul> |

|                         |                                    |
|-------------------------|------------------------------------|
| <b>Default Value</b>    | 2 — AES                            |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise  |
| <b>Dependency</b>       | None                               |

## iDRAC.Users.SolEnable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or Disables SOL for the user.                                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | Both username and password must be configured prior to sets.                            |

## iDRAC.Users.UserName (Read or Write)

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | iDRAC User Name.                    |
| <b>Legal Values</b>     | String of up to 16 ASCII characters |
| <b>Default Value</b>    | Not Applicable                      |
| <b>Write Privilege</b>  | Configure iDRAC and Configure User  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | None                                |

## iDRAC.vflashpartition

The objects in this group manage vFlash SD partitions on iDRAC.

This group supports the following objects. Up to 16 partitions are supported, indexed from 1 to 16.

### iDRAC.vflashpartition.AccessType (Read or Write)

|                         |                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the access type of the vFlash SD partition is Read-Only or Read-Write.      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 1 — Read Only</li><li>• 0 — Read Write</li></ul> |
| <b>Default value</b>    | 1 — Read Only                                                                            |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                                |
| <b>License Required</b> | iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created.        |

### iDRAC.vflashpartition.AttachState (Read or Write)

|                         |                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the vFlash SD partition is attached or detached.                         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 1 — Attached</li><li>• 0 — Detached</li></ul> |
| <b>Default value</b>    | 0 — Detached                                                                          |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                             |
| <b>License Required</b> | iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created.     |

### iDRAC.vflashpartition.EmulationType (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the emulation type of the vFlash SD partition.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• HDD</li><li>• FLOPPY</li><li>• CD-DVD</li></ul> |
| <b>Default value</b>    | None                                                                                    |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                                        |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created.       |

### iDRAC.vflashpartition.FormatType (Read or Write)

|                     |                                                                   |
|---------------------|-------------------------------------------------------------------|
| <b>Description</b>  | Specifies the file system format type of the vFlash SD partition. |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• FAT16</li></ul>           |

- FAT32
- EXT2
- EXT3
- RAW

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Default value</b>    | None                                                                              |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                         |
| <b>License Required</b> | iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created. |

### iDRAC.vflashpartition.Size (Read or Write)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Size of the vFlash SD partition.                                    |
| <b>Legal Values</b>     | Integer value in MB                                                               |
| <b>Default value</b>    | None                                                                              |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                         |
| <b>License Required</b> | iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created. |

### iDRAC.vflashpartition.VolumeLabel (Read or Write)

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the label assigned to the partition during the vFlash SD partition creation. |
| <b>Legal Values</b>     | String of up to six characters.                                                        |
| <b>Default value</b>    | None                                                                                   |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                              |
| <b>License Required</b> | iDRAC Enterprise                                                                       |
| <b>Dependency</b>       | vFlash SD card must be enabled. Partition at the specified index must be created.      |

## iDRAC.vflashsd

The objects in this group manage vFlash SD properties on iDRAC.

### iDRAC.vflashsd.AvailableSize (Read or Write)

|                     |                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Displays the available memory (in MB) on the vFlash SD card that is used to create new partitions. |
| <b>Legal Values</b> | Integer value in MB.                                                                               |

|                         |                                                                                                                              |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Default value</b>    | If the card is not initialized, then the default value is 0. If initialized, then it displays the unused memory on the card. |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                                                                    |
| <b>License Required</b> | iDRAC Enterprise                                                                                                             |
| <b>Dependency</b>       | vFlash SD card must be enabled.                                                                                              |

### iDRAC.vflashsd.Enable (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the vFlash SD card on iDRAC.                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                                        |
| <b>Dependency</b>       | vFlash SD card must be enabled.                                                         |

### iDRAC.vflashsd.Health (Read or Write)

|                         |                                                                                                                  |
|-------------------------|------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies current health status of the vFlash SD Card.                                                           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• OK</li> <li>• Warning</li> <li>• Critical</li> <li>• Unknown</li> </ul> |
| <b>Default value</b>    | OK                                                                                                               |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                                                        |
| <b>License Required</b> | iDRAC Enterprise                                                                                                 |
| <b>Dependency</b>       | vFlash SD card must be enabled.                                                                                  |

### iDRAC.vflashsd.Initialized (Read or Write)

|                        |                                                                                                    |
|------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies if the vFlash SD card is initialized or not.                                             |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• 0 — Not Initialized</li> <li>• 1 — Initialized</li> </ul> |
| <b>Default value</b>   | None                                                                                               |
| <b>Write Privilege</b> | Login and configure iDRAC                                                                          |

|                         |                                 |
|-------------------------|---------------------------------|
| <b>License Required</b> | iDRAC Enterprise                |
| <b>Dependency</b>       | vFlash SD card must be enabled. |

### iDRAC.vflashsd.Licensed (Read or Write)

|                         |                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the SD card or vFlash SD card is inserted or not.                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Not Licensed</li> <li>• 1 — Licensed</li> </ul> |
| <b>Default value</b>    | None                                                                                         |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                                    |
| <b>License Required</b> | iDRAC Enterprise                                                                             |
| <b>Dependency</b>       | vFlash SD card must be enabled.                                                              |

### iDRAC.vflashsd.Size (Read or Write)

|                         |                                                               |
|-------------------------|---------------------------------------------------------------|
| <b>Description</b>      | Specifies the remaining size of the vFlash SD card for usage. |
| <b>Legal Values</b>     | Integer value in MB.                                          |
| <b>Default value</b>    | None                                                          |
| <b>Write Privilege</b>  | Login and configure iDRAC                                     |
| <b>License Required</b> | iDRAC Enterprise                                              |
| <b>Dependency</b>       | vFlash SD card must be enabled.                               |

### iDRAC.vflashsd.WriteProtect (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Displays if the physical write protect is enabled or disabled on the vFlash SD card.    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default value</b>    | None                                                                                    |
| <b>Write Privilege</b>  | Login and configure iDRAC                                                               |
| <b>License Required</b> | iDRAC Enterprise                                                                        |
| <b>Dependency</b>       | vFlash SD card must be enabled.                                                         |

## iDRAC.VirtualConsole

The objects in this group enable you to manage virtual console configuration parameters of iDRAC.

### iDRAC.VirtualConsole.AccessPrivilege (Read or Write)

|                         |                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Default action upon session sharing request timeout.                                                                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Deny Access</li><li>• 1 — Read Only Access</li><li>• 2 — Full Access</li></ul> |
| <b>Default Value</b>    | 0 — Deny Access                                                                                                            |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                            |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                                                                             |
| <b>Dependency</b>       | None                                                                                                                       |

### iDRAC.VirtualConsole.AttachState (Read or Write)

|                         |                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Attach State for the Virtual Console.                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0- Detached</li><li>• 1-Attached</li><li>• 2-Auto-Attach</li></ul> |
| <b>Default Value</b>    | 2-Auto-Attach                                                                                              |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                          |
| <b>Dependency</b>       | None                                                                                                       |

### iDRAC.VirtualConsole.Enable (Read or Write)

|                      |                                                                                      |
|----------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>   | Enables or disables the Virtual Console.                                             |
| <b>Legal Values</b>  | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — Enabled</li></ul> |
| <b>Default Value</b> | 1 — Enabled                                                                          |

|                         |                                                |
|-------------------------|------------------------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                                |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise |
| <b>Dependency</b>       | None                                           |

### **iDRAC.VirtualConsole.EncryptEnable (Read or Write)**

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Encrypts the video in a Virtual Console session.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• None</li> <li>• AES</li> </ul> |
| <b>Default Value</b>    | AES                                                                     |
| <b>Write Privilege</b>  | Configure iDRAC                                                         |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                                    |

### **iDRAC.VirtualConsole.LocalVideo (Read or Write)**

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the local server video.                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                                          |
| <b>Dependency</b>       | None                                                                                    |

### **iDRAC.VirtualConsole.MaxSessions (Read or Write)**

|                      |                                                       |
|----------------------|-------------------------------------------------------|
| <b>Description</b>   | Specifies maximum number of virtual console sessions. |
| <b>Legal Values</b>  | Integral values: 1–4                                  |
| <b>Default Value</b> | 4                                                     |

|                         |                                                |
|-------------------------|------------------------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                                |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise |
| <b>Dependency</b>       | None                                           |

### iDRAC.VirtualConsole.PluginType (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | To use virtual console, when running from the browser specify the plugin type.       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Active X</li> <li>• 1 — Java</li> </ul> |
| <b>Default Value</b>    | 0 — Active X                                                                         |
| <b>Write Privilege</b>  | Configure iDRAC                                                                      |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                                       |
| <b>Dependency</b>       | None                                                                                 |

### iDRAC.VirtualConsole.Port (Read or Write)

|                         |                                                |
|-------------------------|------------------------------------------------|
| <b>Description</b>      | Specifies the virtual KVM port.                |
| <b>Legal Values</b>     | Integral values: 1–65535                       |
| <b>Default Value</b>    | 5900                                           |
| <b>Write Privilege</b>  | Configure iDRAC                                |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise |
| <b>Dependency</b>       | None                                           |

### iDRAC.VirtualConsole.Timeout (Read or Write)

|                        |                                                              |
|------------------------|--------------------------------------------------------------|
| <b>Description</b>     | Defines the idle timeout in seconds for the virtual console. |
| <b>Legal Values</b>    | Integral values: 60–10800                                    |
| <b>Default Value</b>   | 1800                                                         |
| <b>Write Privilege</b> | Configure iDRAC                                              |

|                         |                                                |
|-------------------------|------------------------------------------------|
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise |
| <b>Dependency</b>       | None                                           |

## iDRAC.VirtualMedia

The objects in this group enable you to manage virtual media configuration parameters of iDRAC.

### iDRAC.VirtualMedia.Attached (Read or Write)

|                         |                                                                                                                    |
|-------------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Used to attach virtual devices to the system using the USB bus.                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Detached</li> <li>• 1 — Attached</li> <li>• 2 — AutoAttach</li> </ul> |
| <b>Default Value</b>    | 2 — AutoAttach                                                                                                     |
| <b>Write Privilege</b>  | Virtual Media                                                                                                      |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                                               |

### iDRAC.VirtualMedia.BootOnce (Read or Write)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the virtual media boot once feature of the iDRAC.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Enabled</li> </ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                            |
| <b>Write Privilege</b>  | Virtual Media                                                                           |
| <b>License Required</b> | iDRAC Express (For Blades) or iDRAC Enterprise                                          |
| <b>Dependency</b>       | None                                                                                    |

### iDRAC.VirtualMedia.FloppyEmulation (Read or Write)

|                     |                                                                     |
|---------------------|---------------------------------------------------------------------|
| <b>Description</b>  | Enables or disables floppy emulation of the attached virtual media. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> </ul>    |

- 1 — Enabled

**Default value** 0 — Disabled

**Write Privilege** Virtual Media

**License Required** iDRAC Express (For Blades) or iDRAC Enterprise

**Dependency** None

## iDRAC.VNCServer

The objects in this group manages configuration of the VNC Server on iDRAC.

### iDRAC.VNCServer.Enable (Read or Write)

**Description** Enables or disables VNC server on iDRAC.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default value** 0 — Disabled

**Write Privilege** Login or configure iDRAC

**License Required** iDRAC Enterprise

**Dependency** None

### iDRAC.VNCServer.LowerEncryptionBitLength (Read or Write)

**Description** Lower encryption bit length.

**Legal Values**

- 0 — Disabled (Auto Negotiate)
- 1 — Enabled (128-Bit or Higher)

**Default Value** 0 — Disabled (Auto Negotiate)

**Write Privilege** Login or configure iDRAC

**License Required** iDRAC Enterprise

**Dependency** None

### iDRAC.VNCServer.Password (Read or Write)

**Description** Password for logging into VNC session.

**Legal Values** String of up to 8 characters

|                         |                          |
|-------------------------|--------------------------|
| <b>Default Value</b>    | None                     |
| <b>Write Privilege</b>  | Login or configure iDRAC |
| <b>License Required</b> | iDRAC Enterprise         |
| <b>Dependency</b>       | None                     |

### **iDRAC.VNCServer.Port (Read or Write)**

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Port number for VNC session       |
| <b>Legal Values</b>     | Integer values from 1024 to 65535 |
| <b>Default Value</b>    | 5901                              |
| <b>Write Privilege</b>  | Login or configure iDRAC          |
| <b>License Required</b> | iDRAC Enterprise                  |
| <b>Dependency</b>       | None                              |

### **iDRAC.VNCServer.SSLEncryptionBitLength (Read or Write)**

|                         |                                                                                                                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the VNC server encryption state.                                                                                                                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled</li> <li>• 1 — Auto negotiate</li> <li>• 1 — 128 bit or higher</li> <li>• 2 — 168 bit or higher</li> <li>• 3 — 256 bit or higher</li> </ul> |
| <b>Default value</b>    | 0 — Disabled                                                                                                                                                                                      |
| <b>Write Privilege</b>  | iDRAC Configure                                                                                                                                                                                   |
| <b>License Required</b> | iDRAC Enterprise                                                                                                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                                                                                              |

### **iDRAC.VNCServer.Timeout (Read or Write)**

|                         |                                            |
|-------------------------|--------------------------------------------|
| <b>Description</b>      | VNC server idle timeout period in seconds. |
| <b>Legal Values</b>     | Integer values from 60 to 10800            |
| <b>Default Value</b>    | 300                                        |
| <b>Write Privilege</b>  | Login or configure iDRAC                   |
| <b>License Required</b> | iDRAC Enterprise                           |

**Dependency**    None

## iDRAC.WebServer

The objects in this group provide configuration parameters for iDRACs' Webserver.

### iDRAC.WebServer.Enable (Read or Write)

**Description**    Enables or disables iDRAC WebServer.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default Value**    1 — Enabled

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### iDRAC.WebServer.HttpPort (Read or Write)

**Description**    Specifies the port number for HTTP communication with the iDRAC.

**Legal Values**    Integral values: 1–65535

**Default Value**    80

**Write Privilege**    Configure iDRAC

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### iDRAC.WebServer.HttpsPort (Read or Write)

**Description**    Specifies the port number for HTTPs communication with the iDRAC.

**Legal Values**    Integral values: 1–65535

**Default Value**    443

**Write Privilege**    Configure iDRAC

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### iDRAC.Webserver.Httpsredirection (Read or Write)

|                         |                                                                                             |
|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables redirection from the http port (default — 80) to https (default — 443). |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 1 — Enabled</li> <li>• 0 — Disabled</li> </ul>     |
| <b>Default Value</b>    | 1 — Enabled                                                                                 |
| <b>Write Privilege</b>  | Configure iDRAC                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                                        |

### iDRAC.WebServer.LowerEncryptionBitLength (Read or Write)

|                         |                                                                                                                             |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Lower Encryption Bit Length.                                                                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 0 — Disabled (Auto Negotiate)</li> <li>• 1 — Enabled (12 Bit or Higher)</li> </ul> |
| <b>Default Value</b>    | 1 — Enabled (128 Bit or Higher)                                                                                             |
| <b>Write Privilege</b>  | Configure iDRAC                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                           |
| <b>Dependency</b>       | None                                                                                                                        |

### iDRAC.WebServer.SSLEncryptionBitLength (Read or Write)

|                        |                                                                                                                                                                           |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Indicates the web server encryption state.                                                                                                                                |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• 0 — Auto negotiate</li> <li>• 1 — 128 bit or higher</li> <li>• 2 — 168 bit or higher</li> <li>• 3 — 256 bit or higher</li> </ul> |
| <b>Default value</b>   | 0 — Auto Negotiate                                                                                                                                                        |
| <b>Write Privilege</b> | iDRAC Configure                                                                                                                                                           |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## iDRAC.WebServer.Timeout (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Defines the webserver timeout.    |
| <b>Legal Values</b>     | Integral values: 60–10800         |
| <b>Default Value</b>    | 1800                              |
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.BiosBootSettings

You can manage the BIOS start settings using the objects in this group.

### BIOS.BiosBootSettings.BootSeq (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Determines the Bios start sequence of the system. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | Read Only if BootMode is set to UEFI              |

### BIOS.BiosBootSettings.BootMode (Read or Write)

|                        |                                                                          |
|------------------------|--------------------------------------------------------------------------|
| <b>Description</b>     | Determines the start mode of the system.                                 |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• Bios</li> <li>• Uefi</li> </ul> |
| <b>Default Value</b>   | Not Applicable                                                           |
| <b>Write Privilege</b> | Server Control                                                           |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.BiosBootSettings.BootSeqRetry (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Enables or disables the boot sequence retry feature. |
| <b>Legal Values</b>     | Enabled<br>Disabled                                  |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### BIOS.BiosBootSettings.HddFailover (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the devices in the Hard-Disk Drive Sequence menu that are attempted in the boot sequence. This property applies to BIOS Boot Mode only, and is disabled when Boot Mode is set to UEFI. When set to Disabled (default), only the first Hard-Disk device in the list is attempted to boot. When set to Enabled, all Hard-Disk devices are attempted in order, as listed in the Hard-Disk Drive Sequence. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                                                                                                                                                                                                                                                                                                                  |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Dependency</b>       | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                   |

### BIOS.BiosBootSettings.HddSeq (Read or Write)

|                        |                   |
|------------------------|-------------------|
| <b>Description</b>     | HDD boot sequence |
| <b>Legal Values</b>    | None              |
| <b>Default Value</b>   | Not Applicable    |
| <b>Write Privilege</b> | Server Control    |

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise     |
| <b>Dependency</b>       | Read Only if Boot mode is set to UEFI |

### **BIOS.BiosBootSettings.UefiBootSeq (Read or Write)**

|                         |                                       |
|-------------------------|---------------------------------------|
| <b>Description</b>      | UEFI boot sequence                    |
| <b>Legal Values</b>     | None                                  |
| <b>Default Value</b>    | Not Applicable                        |
| <b>Write Privilege</b>  | Server Control                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise     |
| <b>Dependency</b>       | Read Only if Boot mode is set to BIOS |

### **BIOS.BiosBootSettings.SetBootOrderFqddn (Read or Write)**

|                         |                                                                                                                                                       |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies a list of FQDDs that has the boot list to apply on the next boot. In the attribute <i>SetBootOrderFqddn</i> , the value of n can be 1 to 16 |
| <b>Legal Values</b>     | String of UEFI boot devices                                                                                                                           |
| <b>Default Value</b>    | Not Applicable                                                                                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                     |
| <b>Dependency</b>       | None                                                                                                                                                  |

### **BIOS.BiosBootSettings.SetLegacyHddOrderFqddn (Read or Write)**

|                         |                                                                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies a list of FQDDs that has the legacy HDD list to apply on the next boot. In the attribute <i>SetLegacyHddOrderFqdd</i> , the value of n can be 1 to 16 |
| <b>Legal Values</b>     | String of UEFI boot devices                                                                                                                                     |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                               |
| <b>Dependency</b>       | None                                                                                                                                                            |

# BIOS.EmbServerMgmt

The objects in this group assist in embedded server management.

## BIOS.EmbServerMgmt.FrontLcd (Read or Write)

|                         |                                                                                                                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Allows to display the default (Model name and number) or a user-defined string in the front-panel LCD. To modify the advanced features of the front-panel LCD, press F2 during boot to enter System Setup and then select iDRAC Settings. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• None</li><li>• UserDefined</li><li>• ModelNum</li><li>• Advanced</li></ul>                                                                                                                        |
| <b>Default Value</b>    | None                                                                                                                                                                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                         |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                      |

## BIOS.EmbServerMgmt.UserLcdStr (Read or Write)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Allows you to view or enter the User-Defined String to display on the LCD. |
| <b>Legal Values</b>     | String of up to 62 Characters                                              |
| <b>Default Value</b>    | Null                                                                       |
| <b>Write Privilege</b>  | Server Control                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                          |
| <b>Dependency</b>       | None                                                                       |

# BIOS.IntegratedDevices

You can use the objects in this group to manage the integrated devices such as internal NIC and integrated USB.

## BIOS.IntegratedDevices.EmbNic1 (Read or Write)

|                     |                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Enables or disables the operating system interface of the embedded NIC1.                              |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Enabled</li><li>• EnabledPxe</li><li>• EnablediScsi</li></ul> |

- Disabled

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.IntegratedDevices.EmbNic1Nic2 (Read or Write)

|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the operating system interface of the embedded NIC1 and NIC2 controllers.          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled OS</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | None                                                                                                   |

### BIOS.IntegratedDevices.EmbNic2 (Read or Write)

|                         |                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the operating system interface of the embedded NIC2.                                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• EnabledPxe</li> <li>• EnablediScsi</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                             |
| <b>Dependency</b>       | None                                                                                                                          |

## BIOS.IntegratedDevices.EmbNic3 (Read or Write)

**Description** Enables or disables the operating system interface of the embedded NIC3.

**Legal Values**

- Enabled
- EnabledPxe
- EnablediScsi
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.IntegratedDevices.EmbNic3Nic4 (Read or Write)

**Description** Enables or disables the operating system interface of the embedded NIC3 and NIC4 controllers.

**Legal Values**

- Enabled
- Disabled OS
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.IntegratedDevices.EmbNic4 (Read or Write)

**Description** Enables or disables the operating system interface of the embedded NIC4.

**Legal Values**

- Enabled
- EnabledPxe
- EnablediScsi
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.IntegratedDevices.EmbVideo (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the BIOS support for the embedded video controller.         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.IntegratedDevices.IntegratedNetwork1 (Read or Write)

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the Integrated Network Card 1.                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled OS</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                     |
| <b>Write Privilege</b>  | Server Control                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                  |
| <b>Dependency</b>       | None                                                                               |

### BIOS.IntegratedDevices.IntegratedNetwork2 (Read or Write)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the integrated network card 2.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• DisabledOS</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                    |
| <b>Write Privilege</b>  | Server Control                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                 |

**Dependency**    None

### **BIOS.IntegratedDevices.IntegratedRaid (Read or Write)**

**Description**    Enables or disables the integrated RAID controller.

**Legal Values**

- Enabled
- Disabled

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.IntegratedDevices.IntegratedSas (Read or Write)**

**Description**    Enables or disables the integrated SAS controller.

**Legal Values**

- Enabled
- Disabled

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.IntegratedDevices.InternalSdCard (Read or Write)**

**Description**    Enables or disables the internal SD Card port.

**Legal Values**

- On
- Off

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.IntegratedDevices.InternalSdCardRedundancy (Read or Write)

|                         |                                                                             |
|-------------------------|-----------------------------------------------------------------------------|
| <b>Description</b>      | Sets the SD Card redundancy mode.                                           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Mirror</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                              |
| <b>Write Privilege</b>  | Server Control                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                           |
| <b>Dependency</b>       | Read Only if 'InternalSdCard' is set to 'Off'.                              |

## BIOS.IntegratedDevices.InternalUsb (Read or Write)

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the internal USB port.                         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• On</li><li>• Off</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Server Control                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

## BIOS.IntegratedDevices.InternalUsb1 (Read or Write)

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the internal USB port 1.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• On</li><li>• Off</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Server Control                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

## BIOS.IntegratedDevices.InternalUsb2 (Read or Write)

**Description** Enables or disables the internal USB port 2.

**Legal Values**

- On
- Off

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.IntegratedDevices.IoatEngine (Read or Write)

**Description** Enables or disables the I/O Acceleration technology (I/OAT) option.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.IntegratedDevices.MmioAbove4GB (Read or Write)

**Description** Enables or disables support for PCIe devices that require large amount of memory. Enable this option only for 64-bit operating systems.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

**Write Privilege** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.IntegratedDevices.OsWatchdogTimer (Read or Write)

**Description** Enables or disables timer initialization by the operating system.

**Legal Values**

- Enabled

- Disabled

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.IntegratedDevices.SriovGlobalEnable (Read or Write)

|                         |                                                                                            |
|-------------------------|--------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables BIOS configuration of Single Root I/O Virtualization (SR-IOV) devices. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>            |
| <b>Default Value</b>    | Not Applicable                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                          |
| <b>Dependency</b>       | None                                                                                       |

## BIOS.IntegratedDevices.UsbPorts (Read or Write)

|                         |                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the user accessible USB ports.                                                                         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• All on</li> <li>• Only back ports on</li> <li>• All off</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                           |
| <b>Dependency</b>       | None                                                                                                        |

## BIOS.MemSettings

To manage memory-related configuration settings, use the objects in this group.

## BIOS.MemSettings.MemLowPower (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the low-power mode of the memory.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## BIOS.MemSettings.MemOpMode (Read or Write)

|                         |                                                                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Current memory operating mode.                                                                                                                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• OptimizerMode</li><li>• SpareMode</li><li>• MirrorMode</li><li>• AdvEccMode</li><li>• SpareWithAdvEccMode</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                           |
| <b>Dependency</b>       | None                                                                                                                                                        |

## BIOS.MemSettings.MemOptimizer (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Configure the memory optimizer setting.                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## BIOS.MemSettings.MemOpVoltage (Read Only)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Operating voltage of memory.                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• AutoVolt</li><li>• Volt15V</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## BIOS.MemSettings.MemTest (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether BIOS software-based system memory tests are conducted during POST. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>         |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

## BIOS.MemSettings.NodeInterleave (Read or Write)

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>      | If the system is configured with matching memory this field enables node interleaving. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>           |
| <b>Default Value</b>    | Not Applicable                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                      |
| <b>Dependency</b>       | None                                                                                   |

## BIOS.MemSettings.RedundantMem (Read or Write)

|                         |                                                                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the redundant memory feature.                                                                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Disabled</li><li>• Spare</li><li>• Mirror</li><li>• IntraNodeMirror</li><li>• DimmSpare</li><li>• Dddc</li></ul> |
| <b>Write Privilege</b>  | Server Control                                                                                                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                        |
| <b>Dependency</b>       | None                                                                                                                                                     |

## BIOS.MemSettings.RedundantMemCfgValid (Read or Write)

|                         |                                                                           |
|-------------------------|---------------------------------------------------------------------------|
| <b>Description</b>      | Redundant Memory Configuration Valid                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Invalid</li><li>• Valid</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                            |
| <b>Write Privilege</b>  | Server Control                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                         |
| <b>Dependency</b>       | None                                                                      |

## BIOS.MemSettings.RedundantMemInUse (Read Only)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Display the current redundant memory setting in BIOS.                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• NotInUse</li><li>• InUse</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                             |
| <b>Write Privilege</b>  | Server Control                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                          |
| <b>Dependency</b>       | None                                                                       |

## BIOS.MemSettings.Serialdbgout (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the Serial Debug Out option.                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## BIOS.MemSettings.SnoopFilter (Read or Write)

|                         |                                                                                                                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the snoop filter option.<br><br> <b>NOTE:</b> This attribute is not supported for 13th generation servers. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                                                                                                    |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                               |
| <b>Dependency</b>       | None                                                                                                                                                                                                            |

## BIOS.MemSettings.SysMemSize (Read or Write)

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Indicates the current amount of main memory in the system. |
| <b>Legal Values</b>     | None                                                       |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Server Control                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                       |

### **BIOS.MemSettings.SysMemSpeed (Read or Write)**

|                         |                                                           |
|-------------------------|-----------------------------------------------------------|
| <b>Description</b>      | Indicates the current clock frequency of the main memory. |
| <b>Legal Values</b>     | None                                                      |
| <b>Default Value</b>    | Not Applicable                                            |
| <b>Write Privilege</b>  | Server Control                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                         |
| <b>Dependency</b>       | None                                                      |

### **BIOS.MemSettings.SysMemType (Read or Write)**

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Indicates the current type of main memory installed in the system. |
| <b>Legal Values</b>     | None                                                               |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Server Control                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

### **BIOS.MemSettings.SysMemVolt (Read or Write)**

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Displays the current operating voltage of main memory. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### **BIOS.MemSettings.VideoMem (Read or Write)**

|                     |                                                                                        |
|---------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>  | Indicates the total amount of video memory available to the embedded video controller. |
| <b>Legal Values</b> | None                                                                                   |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.MiscSettings

To manage the miscellaneous objects settings, use the object in this group.

### BIOS.MiscSettings.AssetTag (Read or Write)

|                         |                                                                   |
|-------------------------|-------------------------------------------------------------------|
| <b>Description</b>      | Displays the current asset tag and the asset tag can be modified. |
| <b>Legal Values</b>     | None                                                              |
| <b>Default Value</b>    | Not Applicable                                                    |
| <b>Write Privilege</b>  | Server Control                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                 |
| <b>Dependency</b>       | None                                                              |

### BIOS.MiscSettings.ErrPrompt (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the F1 and F2 prompt on error.                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.MiscSettings.InSystemCharacterization (Read or Write)

|                     |                                                                                        |
|---------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>  | The ratio of power and performance of a system is optimized by ISC when it is enabled. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• FastBoot</li> </ul>        |

- Disabled

**Default Value** Not Applicable

**License Required** RACADM

**Dependency** None

## BIOS.MiscSettings.NumLock (Read or Write)

**Description** Enable or disable the system boots with Num locks, not applicable for 84-key keyboards

**Legal Values**

- On
- Off

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.MiscSettings.ReportKbdErr (Read or Write)

**Description** Enables or disables the keyboard-related error messages to be reported at system startup.

**Legal Values**

- Report
- No report

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.MiscSettings.SystemUefiShell (Read or Write)

**Description** Enables or disables the System UEFI Shell as a UEFI boot option choice.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **BIOS.MiscSettings.SysMgmtNVByte1 (Read or Write)**

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Indicates the system management NVRAM byte 1. |
| <b>Legal Values</b>     | Integer                                       |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Server Control                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |
| <b>Dependency</b>       | None                                          |

### **BIOS.MiscSettings.SysMgmtNVByte2 (Read or Write)**

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Indicates the system management NVRAM byte 2. |
| <b>Legal Values</b>     | Integer                                       |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Server Control                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |
| <b>Dependency</b>       | None                                          |

### **BIOS.MiscSettings.SystemUefiShell (Read or Write)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the system UEFI shell as UEFI boot option.                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

## BIOS.MiscSettings.ForceInt10 (Read or Write)

|                         |                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies if the system BIOS will load the legacy video (INT 10h) option ROM from the video controller. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                            |
| <b>Default Value</b>    | Not Applicable                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                       |
| <b>Dependency</b>       | None                                                                                                    |

## BIOS.NetworkSettings

The objects in this group manage the iSCSI devices.

### BIOS.NetworkSettings.PxeDevnEnDis (Read or Write)

|                         |                                                                                                                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates if the PXE device is enabled or disabled. When enabled, a UEFI boot option is created for the PXE device. For the attribute <code>PxeDevnEnDis</code> , the value of <code>n</code> can be 2 — 4. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                                                                                                |
| <b>Default Value</b>    | None                                                                                                                                                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                           |
| <b>Dependency</b>       | None                                                                                                                                                                                                        |

## BIOS.OneTimeBoot

You can manage the one time boot settings using the objects in this group.

### BIOS.OneTimeBoot.OneTimeBootMode (Read or Write)

|                     |                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Configure the one time boot mode setting.                                                                   |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Disabled</li><li>• OneTimeBootSeq</li><li>• OneTimeHddSeq</li></ul> |

- OneTimeUefiBootSeq

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.OneTimeBoot.OneTimeBootSeqDev (Read or Write)

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Configure the one time boot sequence device in BIOS.       |
| <b>Legal Values</b>     | Hard Disk List                                             |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Server Control                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | Read Only if OneTimeBootMode is not set to OneTimeBootSeq. |

### BIOS.OneTimeBoot.OneTimeCustomBootStr (Read or Write)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configure the one time custom boot device.                                                                     |
| <b>Legal Values</b>     | Custom device list                                                                                             |
| <b>Default Value</b>    | Not Applicable                                                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                              |
| <b>Dependency</b>       | Read Only if OneTimeBootMode is set to Disabled or set to OneTimeBootSeq, OneTimeHddSeq, or OneTimeUefiBootSeq |

### BIOS.OneTimeBoot.OneTimeHddSeqDev (Read or Write)

|                        |                                                                 |
|------------------------|-----------------------------------------------------------------|
| <b>Description</b>     | Configure the one time Hard Disk Drive (HDD) sequence for BIOS. |
| <b>Legal Values</b>    | RAID FQDD                                                       |
| <b>Default Value</b>   | Not Applicable                                                  |
| <b>Write Privilege</b> | Server Control                                                  |

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |
| <b>Dependency</b>       | Read Only if OneTimeBootMode is not set to OneTimeHddSeq |

## BIOS.OneTimeBoot.OneTimeUefiBootSeqDev (Read or Write)

|                         |                                                               |
|-------------------------|---------------------------------------------------------------|
| <b>Description</b>      | Configure the one time UEFI Boot Sequence device.             |
| <b>Legal Values</b>     | NIC or Optical Device list                                    |
| <b>Default Value</b>    | Not Applicable                                                |
| <b>Write Privilege</b>  | Server Control                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                             |
| <b>Dependency</b>       | Read Only if OneTimeBootMode is not set to OneTimeUefiBootSeq |

## BIOS.ProcSettings

To configure the processor settings, use the objects in this group.

### BIOS.ProcSettings.CorePerfBoost (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables CPU core performance booster.                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.ProcSettings.DataReuse (Read or Write)

|                        |                                                                                 |
|------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>     | Enables or disables data reuse in cache.                                        |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>   | Not Applicable                                                                  |
| <b>Write Privilege</b> | Server Control                                                                  |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.ProcSettings.DculpPrefetcher (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Data Cache Unit (DCU) IP Prefetcher.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.ProcSettings.DcuStreamerPrefetcher (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Data Cache Unit (DCU) Streamer Prefetcher.                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.ProcSettings.DmaVirtualization (Read or Write)

|                         |                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables hardware capabilities for DMA remapping and virtualization are available. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>               |
| <b>Default Value</b>    | Not Applicable                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                             |

**Dependency**    None

## BIOS.ProcSettings.DynamicCoreAllocation (Read or Write)

**Description**    Enables or disables the operating system capability to set the logical processors in idle state which helps to reduce power consumption.

**Legal Values**

- Enabled
- Disabled

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.ProcSettings.LogicalProc (Read or Write)

**Description**    To enable report all logical processors and to disable report one logical processor per core.

**Legal Values**

- Enabled
- Disabled

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.ProcSettings.PerfMonitorDevices (Read or Write)

**Description**    Allows to enable or disable the performance monitoring devices. When set to **Enabled**, the performance monitoring devices are visible to the operating system.



**NOTE:** The Performance Monitor Devices field is set to **Disabled** by default.

**Legal Values**

- Enabled
- Disabled

**Default Value**

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### BIOS.ProcSettings.Proc1Brand (Read or Write)

**Description**    Provides the processor brand name.

**Legal Values**    None

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### BIOS.ProcSettings.Proc1ControlledTurbo (Read or Write)

**Description**    Controls the turbo engagement.



**NOTE:** You can enable this option only when System Profile is set to Performance.

**Legal Values**

- Disabled
- ControlledTurboLimit
- ControlledTurboLimitMinus1
- ControlledTurboLimitMinus2
- ControlledTurboLimitMinus3

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### BIOS.ProcSettings.Proc1Id (Read or Write)

**Description**    Provides the processor's family model and stepping values.

**Legal Values**    None

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### BIOS.ProcSettings.Proc1L2Cache (Read or Write)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Amount of memory in the corresponding processor cache. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### BIOS.ProcSettings.Proc1L3Cache (Read or Write)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Amount of memory in the corresponding processor cache. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### BIOS.ProcSettings.Proc1NumCores (Read or Write)

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Number of cores in the processor package. |
| <b>Legal Values</b>     | None                                      |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Server Control                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

### BIOS.ProcSettings.Proc2Brand (Read or Write)

|                     |                                    |
|---------------------|------------------------------------|
| <b>Description</b>  | Provides the processor brand name. |
| <b>Legal Values</b> | None                               |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.ProcSettings.Proc2ControlledTurbo (Read or Write)

**Description** Controls the turbo engagement.



**NOTE:** You can enable this option only when System Profile is set to Performance.

**Legal Values**

- Disabled
- ControlledTurboLimit
- ControlledTurboLimitMinus1
- ControlledTurboLimitMinus2
- ControlledTurboLimitMinus3

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

## BIOS.ProcSettings.Proc2Id (Read or Write)

**Description** Processor's family model and stepping values.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.ProcSettings.Proc2L2Cache (Read or Write)

**Description** AmountBIOS.ProcSettings.Proc2L2Cache (Read Only) of memory in the corresponding processor cache.

**Legal Values** None

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **BIOS.ProcSettings.Proc2L3Cache (Read or Write)**

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Amount of memory in the corresponding processor cache. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### **BIOS.ProcSettings.Proc2NumCores (Read or Write)**

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Number of cores in the processor package. |
| <b>Legal Values</b>     | None                                      |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Server Control                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

### **BIOS.ProcSettings.Proc3Brand (Read or Write)**

|                         |                                                    |
|-------------------------|----------------------------------------------------|
| <b>Description</b>      | Brand text provided by the processor manufacturer. |
| <b>Legal Values</b>     | None                                               |
| <b>Default Value</b>    | Not Applicable                                     |
| <b>Write Privilege</b>  | Server Control                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                  |

**Dependency**    None

## BIOS.ProcSettings.Proc3ControlledTurbo (Read or Write)

**Description**    Controls the turbo engagement.



**NOTE:** You can enable this option only when System Profile is set to Performance.

**Legal Values**

- Disabled
- ControlledTurboLimit
- ControlledTurboLimitMinus1
- ControlledTurboLimitMinus2
- ControlledTurboLimitMinus3

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.ProcSettings.Proc3Id (Read or Write)

**Description**    Processor's family model and stepping values.

**Legal Values**    None

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.ProcSettings.Proc3L2Cache (Read or Write)

**Description**    Amount of memory in the corresponding processor cache.

**Legal Values**    None

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.ProcSettings.Proc3L3Cache (Read or Write)**

**Description**    Amount of memory in the corresponding processor cache.

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.ProcSettings.Proc3NumCores (Read or Write)**

**Description**    Number of cores in the processor package.

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.ProcSettings.Proc4Brand (Read or Write)**

**Description**    The processor manufacturer provides brand text

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **BIOS.ProcSettings.Proc4ControlledTurbo (Read or Write)**

**Description**    Controls the turbo engagement.



**NOTE:** You can enable this option only when System Profile is set to Performance.

|                         |                                                                                                                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Disabled</li><li>• ControlledTurboLimit</li><li>• ControlledTurboLimitMinus1</li><li>• ControlledTurboLimitMinus2</li><li>• ControlledTurboLimitMinus4</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                        |
| <b>Dependency</b>       | Not Applicable                                                                                                                                                                                           |

### BIOS.ProcSettings.Proc4Id (Read or Write)

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Processor's family model and stepping values. |
| <b>Legal Values</b>     | None                                          |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Server Control                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |
| <b>Dependency</b>       | None                                          |

### BIOS.ProcSettings.Proc4L2Cache (Read or Write)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Amount of memory in the corresponding processor cache. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### BIOS.ProcSettings.Proc4L3Cache (Read or Write)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Amount of memory in the corresponding processor cache. |
| <b>Legal Values</b>     | None                                                   |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Server Control                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | None                                                   |

### BIOS.ProcSettings.Proc4NumCores (Read or Write)

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Number of cores in the processor package. |
| <b>Legal Values</b>     | None                                      |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Server Control                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | None                                      |

### BIOS.ProcSettings.Proc64bit (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether the installed processors support 64-bit extensions. |
| <b>Legal Values</b>     | None                                                                  |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Server Control                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

## BIOS.ProcSettings.ProcAdjCacheLine (Read or Write)

|                         |                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the system optimization for applications that require high utilization of sequential memory access. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                            |
| <b>Default Value</b>    | Not Applicable                                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                       |
| <b>Dependency</b>       | None                                                                                                                    |

## BIOS.ProcSettings.ProcBusSpeed (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Bus speed of the processor.       |
| <b>Legal Values</b>     | None                              |
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.ProcSettings.ProcConfigTdp (Read or Write)

|                         |                                                                                             |
|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b>      | Allows to re-configure the Thermal Design Power (TDP) to lower levels.                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Nominal</li><li>• Level1</li><li>• Level2</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                           |
| <b>Dependency</b>       | Not Applicable                                                                              |

## BIOS.ProcSettings.ProcCores (Read or Write)

**Description** Controls the number of enabled cores in each processor.

**Legal Values**

- Single
- All
- 1
- 2
- 4
- 6
- 8
- 10
- 12
- 14
- 16

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.ProcSettings.ProcCoreSpeed (Read or Write)

**Description** Clock speed of the processor.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.ProcSettings.ProcDramPrefetcher (Read or Write)

**Description** Enable to turn on the DRAM prefetch unit in the Northbridge. Disable to prevent DRAM references from triggering DRAM prefetch requests.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.ProcSettings.ProcExecuteDisable (Read or Write)

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether Execute Disable Memory Protection Technology is enabled or disabled. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>        |
| <b>Default Value</b>    | Not Applicable                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                      |
| <b>Dependency</b>       | None                                                                                   |

### BIOS.ProcSettings.ProcHpcMode (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Configure processor's HPC mode.                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### BIOS.ProcSettings.ProcHtAssist (Read or Write)

|                      |                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | When enabled it provides filtering of broadcast probes to improve HyperTransport I/O Link bandwidth and performance on multi-node systems. |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                                            |
| <b>Default Value</b> | Not Applicable                                                                                                                             |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.ProcSettings.ProcHwPrefetcher (Read or Write)

|                         |                                                                                             |
|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b>      | When enabled, the processor is able to prefetch extra cache lines for every memory request. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>             |
| <b>Default Value</b>    | Not Applicable                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                                        |

### BIOS.ProcSettings.ProcHyperTransport (Read or Write)

|                         |                                                                        |
|-------------------------|------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the supported HyperTransport I/O Link Specification.         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• HT1</li> <li>• HT3</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                         |
| <b>Write Privilege</b>  | Server Control                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                      |
| <b>Dependency</b>       | None                                                                   |

### BIOS.ProcSettings.ProcSoftwarePrefetcher (Read or Write)

|                      |                                                                                                                               |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Enables or disables the hardware prefetcher for considering software prefetches when detecting strides for prefetch requests. |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                               |
| <b>Default Value</b> | Not Applicable                                                                                                                |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.ProcSettings.ProcVirtualization (Read or Write)

|                         |                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | When enabled, the additional hardware capabilities provided by virtualization technology are available for use. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                 |
| <b>Default Value</b>    | Not Applicable                                                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                               |
| <b>Dependency</b>       | None                                                                                                            |

## BIOS.ProcSettings.ProcX2Apic (Read or Write)

|                         |                                                                                                                                                                                                |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the X2APIC mode.                                                                                                                                                           |
|                         |  <b>NOTE:</b> To enable BIOS.ProcSettings.ProcX2Apic, you must enable BIOS.ProcSettings.ProcVirtualization. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                                                                                                |
| <b>Default Value</b>    | Disabled                                                                                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                              |
| <b>Dependency</b>       | None                                                                                                                                                                                           |

## BIOS.ProcSettings.QpiBandwidthPriority (Read or Write)

|                      |                                                                                    |
|----------------------|------------------------------------------------------------------------------------|
| <b>Description</b>   | Sets the bandwidth priority to compute (default) or I/O.                           |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• InputOutput</li> <li>• Compute</li> </ul> |
| <b>Default Value</b> | Not Applicable                                                                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.ProcSettings.QpiSpeed (Read or Write)

|                         |                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls QuickPath Interconnect data rate settings.                                                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• MaxDataRate</li> <li>• 8 GTps</li> <li>• 7 GTps</li> <li>• 6 GTps</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                     |
| <b>Dependency</b>       | None                                                                                                                  |

## BIOS.ProcSettings.RtidSetting (Read or Write)

|                         |                                                                                             |
|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b>      | Allocates more RTIDs to the remote socket increasing cache performance between the sockets. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>             |
| <b>Default Value</b>    | Not Applicable                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                                        |

## BIOS.ProxyAttributes

The objects in this group manage the legacy boot protocol of LOM.

## BIOS.ProxyAttributes.EmbNicPortnBootproto (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the Legacy Boot Protocol of the LOM port specified by the Embedded NIC port. Assists in system management software and does not appear in system BIOS setup. The value of <i>n</i> can be 1–4.<br><br>This attribute returns <i>Unknown</i> when read. The LOM port legacy boot protocol setting is not changed when <i>Unknown</i> is written. An error is displayed if written with a setting (None, PXE, or iSCSI) that is not supported by the LOM. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Unknown</li><li>• None</li><li>• Pxe</li><li>• Iscsi</li></ul>                                                                                                                                                                                                                                                                                                                                                           |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## BIOS.ProxyAttributes.IntNic1PortnBootproto (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the Legacy Boot Protocol of the LOM Port specified by the Embedded NIC port number Port. Assists for system management software use and does not appear in System BIOS Setup. For this attribute, the value of <i>n</i> can be 1–4.<br><br>This attribute returns <i>Unknown</i> when read. The LOM port legacy boot protocol setting is not changed when <i>Unknown</i> is written. An error is returned if written with a setting (None, PXE, or iSCSI) that is not supported by the LOM. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Unknown</li><li>• None</li><li>• Pxe</li><li>• Iscsi</li></ul>                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## BIOS.PxeDevice1Settings

The objects in this group manage the PXE device settings.

## BIOS.PxeDev1Settings.PxeDevnInterface (Read or Write)

|                         |                                                                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the NIC Interface used for the specified PXE device. For the attribute <code>PxeDevnInterface</code> , the value of <code>n</code> can be 1 – 4. |
| <b>Legal Values</b>     | None                                                                                                                                                       |
| <b>Default Value</b>    | Not Applicable                                                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                          |
| <b>Dependency</b>       | None                                                                                                                                                       |

## BIOS.PxeDev1Settings.PxeDevnProtocol (Read or Write)

|                         |                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the PXE protocol used for the specified PXE device. For the attribute <code>PxeDevnProtocol</code> , the value of <code>n</code> can be 1 – 4. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• IPv4</li><li>• IPv6</li></ul>                                                                                   |
| <b>Default Value</b>    | None                                                                                                                                                    |
| <b>Write Privilege</b>  | Server Control                                                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                                    |

## BIOS.PxeDev1Settings.PxeDevnVlanEnDis (Read or Write)

|                         |                                                                                                                                                                        |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates if the VLAN is enabled or disabled for the specified PXE device. For the attribute <code>PxeDevnVlanEnDis</code> , the value of <code>n</code> can be 1 – 4. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                                                           |
| <b>Default Value</b>    | None                                                                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                      |
| <b>Dependency</b>       | None                                                                                                                                                                   |

## BIOS.PxeDev1Settings.PxeDevnVlanId (Read or Write)

|                         |                                                                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the VLAN ID for the specified PXE device. For the attribute <code>PxeDevnVlanId</code> , the value of <code>n</code> can be 1 – 4. |
| <b>Legal Values</b>     | None                                                                                                                                         |
| <b>Default Value</b>    | Not Applicable                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                            |
| <b>Dependency</b>       | None                                                                                                                                         |

## BIOS.PxeDevice1Settings.PxeDevnVlanPriority (Read or Write)

|                         |                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the VLAN priority for the specific PXE device. For the attribute <code>PxeDevnVlanPriority</code> , the value of <code>n</code> can be 1 – 4. |
| <b>Legal Values</b>     | None                                                                                                                                                    |
| <b>Default Value</b>    | Not Applicable                                                                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                                    |

## BIOS.SataSettings

Use the objects in this group to configure the BIOS SATA settings.

### BIOS.SataSettings.eSataPort1 (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | None                                                                 |

### BIOS.SataSettings.eSataPort1Capacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### BIOS.SataSettings.eSataPort1DriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### BIOS.SataSettings.eSataPort1Model (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

### BIOS.SataSettings.SataPortA (Read or Write)

|                     |                                                       |
|---------------------|-------------------------------------------------------|
| <b>Description</b>  | Sets the drive type of the selected device.           |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Off</li></ul> |

- Auto

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Default Value</b>    | Not Applicable                              |
| <b>Write Privilege</b>  | Server Control                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode. |

### BIOS.SataSettings.SataPortACapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### BIOS.SataSettings.SataPortADriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### BIOS.SataSettings.SataPortAModel (Read or Write)

|                        |                                                  |
|------------------------|--------------------------------------------------|
| <b>Description</b>     | Displays the drive model of the selected device. |
| <b>Legal Values</b>    | None                                             |
| <b>Default Value</b>   | Not Applicable                                   |
| <b>Write Privilege</b> | Server Control                                   |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.SataSettings.SataPortB (Read or Write)

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                          |
| <b>Write Privilege</b>  | Server Control                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                             |

### BIOS.SataSettings.SataPortBCapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### BIOS.SataSettings.SataPortBDriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

## BIOS.SataSettings.SataPortBModel (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

## BIOS.SataSettings.SataPortC (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                          |

## BIOS.SataSettings.SataPortCCapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

## BIOS.SataSettings.SataPortCDriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

## BIOS.SataSettings.SataPortCModel (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

## BIOS.SataSettings.SataPortD (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                          |

### **BIOS.SataSettings.SataPortDCapacity (Read or Write)**

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### **BIOS.SataSettings.SataPortDDriveType (Read or Write)**

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### **BIOS.SataSettings.SataPortDModel (Read or Write)**

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

### **BIOS.SataSettings.SataPortE (Read or Write)**

|                      |                                                                      |
|----------------------|----------------------------------------------------------------------|
| <b>Description</b>   | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>  | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b> | Not Applicable                                                       |

|                         |                                             |
|-------------------------|---------------------------------------------|
| <b>Write Privilege</b>  | Server Control                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise           |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode. |

### **BIOS.SataSettings.SataPortECapacity (Read or Write)**

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### **BIOS.SataSettings.SataPortEDriveType (Read or Write)**

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### **BIOS.SataSettings.SataPortEModel (Read or Write)**

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

### BIOS.SataSettings.SataPortF (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                          |

### BIOS.SataSettings.SataPortFCapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### BIOS.SataSettings.SataPortFDriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### BIOS.SataSettings.SataPortFModel (Read or Write)

|                      |                                                  |
|----------------------|--------------------------------------------------|
| <b>Description</b>   | Displays the drive model of the selected device. |
| <b>Legal Values</b>  | None                                             |
| <b>Default Value</b> | Not Applicable                                   |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.SataSettings.SataPortG (Read or Write)

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                          |
| <b>Write Privilege</b>  | Server Control                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                             |

### BIOS.SataSettings.SataPortGCapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

### BIOS.SataSettings.SataPortGDriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

## BIOS.SataSettings.SataPortGModel (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

## BIOS.SataSettings.SataPortH (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.                          |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Off</li><li>• Auto</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | Read Only if EmbSata is not set to AtaMode.                          |

## BIOS.SataSettings.SataPortHCapacity (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard disk drive. |
| <b>Legal Values</b>     | None                                              |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

## BIOS.SataSettings.SataPortHDriveType (Read or Write)

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates type of device attached to this SATA port. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

## BIOS.SataSettings.SataPortHModel (Read Only)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | None                                             |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

## BIOS.SataSettings.SataPortI (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the drive type of the selected device.<br>When the Embedded SATA setting is in: <ul style="list-style-type: none"><li>ATA Mode, setting this attribute to <code>Auto</code> will enable the BIOS support for the device. Select <code>Off</code> to turn off the BIOS support for the device.</li><li>AHCI Mode or RAID Mode, the BIOS always enables support for the device.</li></ul> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>Off</li><li>Auto</li></ul>                                                                                                                                                                                                                                                                                                                             |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                            |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                         |

## BIOS.SataSettings.SataPortICapacity (Read or Write)

|                         |                                                                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. This property is not defined for removable-media devices such as optical drives. |
| <b>Legal Values</b>     | Not Applicable                                                                                                                     |
| <b>Default Value</b>    | Not Applicable                                                                                                                     |
| <b>Write Privilege</b>  | Server Control                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                               |

## BIOS.SataSettings.SataPortIDriveType (Read or Write)

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Description</b>      | Indicates the type of device attached to this SATA port. |
| <b>Legal Values</b>     | Not Applicable                                           |
| <b>Default Value</b>    | Not Applicable                                           |
| <b>Write Privilege</b>  | Server Control                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |
| <b>Dependency</b>       | None                                                     |

## BIOS.SataSettings.SataPortIModel (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | Not Applicable                                   |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | None                                             |

## BIOS.SataSettings.SataPortJ (Read or Write)

|                    |                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Sets the drive type of the selected device.<br>When the Embedded SATA setting is in: <ul style="list-style-type: none"><li>• ATA Mode, set this property to <code>Auto</code> to enable the BIOS support for the device. Select <code>Off</code> to turn off the BIOS support for the device.</li><li>• AHCI Mode or RAID Mode, the BIOS always enables support for the device.</li></ul> |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                          |
| <b>Write Privilege</b>  | Server Control                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | None                                                                    |

### BIOS.SataSettings.SataPortJCapacity (Read or Write)

|                         |                                                                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Displays the total capacity of a hard-disk drive. This property is not defined for removable-media devices such as optical drives. |
| <b>Legal Values</b>     | Not Applicable                                                                                                                     |
| <b>Default Value</b>    | Not Applicable                                                                                                                     |
| <b>Write Privilege</b>  | Server Control                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                               |

### BIOS.SataSettings.SataPortJDriveType (Read or Write)

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Description</b>      | Indicates the type of device attached to this SATA port. |
| <b>Legal Values</b>     | Not Applicable                                           |
| <b>Default Value</b>    | Not Applicable                                           |
| <b>Write Privilege</b>  | Server Control                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |
| <b>Dependency</b>       | None                                                     |

### BIOS.SataSettings.SataPortJModel (Read or Write)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the drive model of the selected device. |
| <b>Legal Values</b>     | Not Applicable                                   |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Server Control                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |

**Dependency**    None

## BIOS.SataSettings.SecurityFreezeLock (Read or Write)

**Description**    Directs the Security Freeze Lock command to the Embedded SATA drives during POST. This option is only applicable for ATA and AHCI mode, and not applicable for RAID mode.

**Legal Values**

- Enabled
- Disabled

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## BIOS.SerialCommSettings

To manage the serial port settings, use the objects in the group.

### BIOS.SerialCommSettings.ConTermType (Read or Write)

**Description**    Configures the remote console's terminal type.

**Legal Values**

- Vt100Vt220
- Ansi

**Default Value**    Not Applicable

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### BIOS.SerialCommSettings.ExtSerialConnector (Read or Write)

**Description**    Associate the External Serial Connector to Serial 1 or Serial 2 or Remote Access Device.

**Legal Values**

- Serial1
- Serial2
- RemoteAccDevice

**Default Value**    Not Applicable

**Write Privilege**    Server Control

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.SerialCommSettings.FailSafeBaud (Read or Write)

|                         |                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | BIOS attempts to determine the baud rate automatically. This fail-safe baud rate is used only if the attempt is unsuccessful. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• 115200</li> <li>• 57600</li> <li>• 19200</li> <li>• 9600</li> </ul>                  |
| <b>Default Value</b>    | Not Applicable                                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                             |
| <b>Dependency</b>       | None                                                                                                                          |

### BIOS.SerialCommSettings.RedirAfterBoot (Read or Write)

|                         |                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the BIOS console redirection when the operating system is loaded. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>       |
| <b>Default Value</b>    | Not Applicable                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                     |
| <b>Dependency</b>       | None                                                                                  |

### BIOS.SerialCommSettings.SerialComm (Read or Write)

|                     |                                                                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Controls the serial communication options.                                                                                                                |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Off</li> <li>• OnNoConRedir</li> <li>• OnConRedirCom1</li> <li>• OnConRedirCom2</li> <li>• OnConRedir</li> </ul> |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.SerialCommSettings.SerialPortAddress (Read or Write)

|                         |                                                                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Port address for the Serial Devices. (COM1=0x3F8 COM2=0x2F8)                                                                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Serial1Com1Serial2Com2</li> <li>• Serial1Com2Serial2Com1</li> <li>• Com1</li> <li>• Com2</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                            |
| <b>Dependency</b>       | None                                                                                                                                         |

## BIOS.SlotDisablement

To manage the slot disablement settings, use the objects in this group.

### BIOS.SlotDisablement.Slot1 (Read or Write)

|                         |                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot1.                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> <li>• BootDriverDisabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                             |
| <b>Dependency</b>       | None                                                                                                          |

## BIOS.SlotDisablement.Slot2 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 2.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot3 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 3.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot4 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 4.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot5 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 5.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot6 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 6.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot7 (Read or Write)

|                         |                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Control the configuration of the card installed in slot 7.                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li><li>• BootDriverDisabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                         |
| <b>Dependency</b>       | None                                                                                                      |

## BIOS.SlotDisablement.Slot8 (Read or Write)

**Description** Controls configuration of the card installed in this slot. You can set one of the following options for each card:

- Enabled: The card is available during POST or to the operating system.
- Disabled: The card is not available during POST or to the operating system.
- Boot Driver Disabled: The Option ROM is not run during POST, the system cannot boot from the card, and the pre-boot services are not available. However, it is available to the operating system. This option is not available if the slot contains a Dell RAID card.



**NOTE:** If multiple cards from the same manufacturer are managed using the same boot driver, select `BootDriverDisabled` option for all the cards from the same manufacturer so that the Option ROM is not run.

**Legal Values**

- Enabled
- Disabled
- BootDriverDisabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SlotDisablement.Slot9 (Read or Write)

**Description** Controls the configuration of the card installed in this slot. You can set one of the following options for each card:

- Enabled: The card is available during POST or to the operating system.
- Disabled: The card is not available during POST or to the operating system.
- Boot Driver Disabled: The Option ROM is not run during POST, the system cannot boot from the card, and the pre-boot services are not available. However, it is available to the operating system. This option is not available if the slot contains a Dell RAID card.



**NOTE:** If multiple cards from the same manufacturer are managed using the same boot driver, select `BootDriverDisabled` for all the cards from the same manufacturer so that the Option ROM is not run.

**Legal Values**

- Enabled
- Disabled
- BootDriverDisabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SlotDisablement.Slot10 (Read or Write)

**Description** Controls configuration of the card installed in this slot. You can set one of the following option for each card.

- Enabled: The card is available during POST or to the operating system.
- Disabled: The card is not available during POST or to the operating system.
- Boot Driver Disabled: The Option ROM will not run during POST, the system cannot boot from the card, and the pre-boot services are not available. However, it is available to the operating system.



**NOTE:** This option is not available if the slot contains a Dell RAID card.



**NOTE:** If multiple cards from the same manufacturer are managed using the same boot driver, select `BootDriverDisabled` value for all the cards from the same manufacturer so that the Option ROM is not run.

**Legal Values**

- Enabled
- Disabled
- BootDriverDisabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysInformation

To view information about system configuration, use the objects in this group.

### BIOS.SysInformation.SysMfrContactInfo (Read or Write)

**Description** Provides information about the Original Equipment Manufacturer of this system.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### BIOS.SysInformation.SystemBiosVersion (Read or Write)

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Provides the current revision of the system BIOS firmware. |
| <b>Legal Values</b>     | None                                                       |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Server Control                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                       |

### BIOS.SysInformation.SystemCpldVersion (Read or Write)

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Displays the current revision of the system CPLD firmware. |
| <b>Legal Values</b>     | None                                                       |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Server Control                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                       |

### BIOS.SysInformation.SystemManufacturer (Read or Write)

|                         |                                                                          |
|-------------------------|--------------------------------------------------------------------------|
| <b>Description</b>      | Provides the name of the Original Equipment Manufacturer of this system. |
| <b>Legal Values</b>     | None                                                                     |
| <b>Default Value</b>    | Not Applicable                                                           |
| <b>Write Privilege</b>  | Server Control                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                        |
| <b>Dependency</b>       | None                                                                     |

### BIOS.SysInformation.SystemModelName (Read or Write)

|                     |                                          |
|---------------------|------------------------------------------|
| <b>Description</b>  | Provides the product name of the system. |
| <b>Legal Values</b> | None                                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.SysInformation.SystemServiceTag (Read or Write)

|                         |                                                                             |
|-------------------------|-----------------------------------------------------------------------------|
| <b>Description</b>      | The Service Tag assigns the Original Equipment Manufacturer of this system. |
| <b>Legal Values</b>     | None                                                                        |
| <b>Default Value</b>    | Not Applicable                                                              |
| <b>Write Privilege</b>  | Server Control                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                           |
| <b>Dependency</b>       | None                                                                        |

## BIOS.SysInformation.UefiComplianceVersion (Read or Write)

|                         |                                                     |
|-------------------------|-----------------------------------------------------|
| <b>Description</b>      | Displays the system firmware UEFI compliance level. |
| <b>Legal Values</b>     | Not Applicable                                      |
| <b>Default Value</b>    | Not Applicable                                      |
| <b>Write Privilege</b>  | Server Control                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                   |
| <b>Dependency</b>       | None                                                |

## BIOS.SysProfileSettings

To manage the system profile settings, use the objects in this group.

### BIOS.SysProfileSettings.CollaborativeCpuPerfCtrl (Read/Write)

|                     |                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Enables or disables the CPU power management control. When <code>ProcPwrPerf</code> is not set to <code>SysDbpm</code> in Custom mode, changing this setting does not affect system performance. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                                                                                                  |

|                         |                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Default Value</b>    | Not Applicable                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                            |
| <b>Dependency</b>       | Enabled only when <code>SysProfileSettings.ProcPwrPerf</code> is set to <code>SysDbpm</code> in Custom mode. |

## BIOS.SysProfileSettings.EnergyEfficientTurbo (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the energy efficient turbo.                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

## BIOS.SysProfileSettings.EnergyPerformanceBias (Read or Write)

|                         |                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the energy performance settings.                                                                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• MaxPower</li> <li>• BalancedPerformance</li> <li>• BalancedEfficiency</li> <li>• LowPower</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                             |
| <b>Dependency</b>       | None                                                                                                                                          |

## BIOS.SysProfileSettings.MemFrequency (Read or Write)

|                     |                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Set the speed of the system memory to maximum performance, maximum reliability or a specific speed. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• MaxPerf</li> <li>• 1600MHz</li> <li>• 1333MHz</li> </ul>   |

- 1067MHz
- 800MHz
- MaxReliability

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Read Only if `SysProfileSettings.SysProfile` is not set to Custom mode.

## BIOS.SysProfileSettings.MemPatrolScrub (Read or Write)

**Description** Patrol scrubbing is a feature that searches the memory for errors and repairs correctable errors to prevent the accumulation of memory errors.

**Legal Values**

- Standard
- Extended
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Read Only if `SysProfileSettings.SysProfile` is not set to Custom mode.

## BIOS.SysProfileSettings.MemPwrMgmt (Read or Write)

**Description** Enables or disables the memory to operate in power management mode.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysProfileSettings.MemRefreshRate (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Frequency at which memory is normally refreshed.                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 1x</li><li>• 2x</li></ul>     |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Server Control                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode. |

## BIOS.SysProfileSettings.MemVolt (Read or Write)

|                         |                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the DIMM voltage selection.                                                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• AutoVolt</li><li>• Volt135V</li><li>• Volt15V</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                               |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is set to Custom mode.                               |

## BIOS.SysProfileSettings.MonitorMwait (Read or Write)

|                         |                                                                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables Monitor or Mwait instructions. When C state is enabled in Custom mode, changing this setting does not affect system performance |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                                        |
| <b>Default Value</b>    | Not Applicable                                                                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                   |
| <b>Dependency</b>       | Disabled only when SysProfileSettings.ProcCStates state is disabled in Custom mode.                                                                 |

## BIOS.SysProfileSettings.PowerDelivery (Read or Write)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the power delivery mode.                                                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• MaxReliability</li><li>• MinPwr</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                    |
| <b>Write Privilege</b>  | Server Control                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                 |
| <b>Dependency</b>       | None                                                                              |

## BIOS.SysProfileSettings.ProcC1E (Read or Write)

|                         |                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------|
| <b>Description</b>      | When enabled, the processor is allowed to switch to minimum performance state when idle. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>             |
| <b>Default Value</b>    | Not Applicable                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                        |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode.                    |

## BIOS.SysProfileSettings.ProcCStates (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the processor C-States.                                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode.        |

## BIOS.SysProfileSettings.ProcPwrPerf (Read or Write)

|                         |                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets CPU power management to maximum performance operating system DBPM or System DBPM (DAPC) mode.            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• MaxPerf</li><li>• MinPwr</li><li>• SysDbpm</li><li>• OsDbpm</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                             |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode.                                         |

## BIOS.SysProfileSettings.PowerSaver (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the enhanced System DBPM (DAPC) mode.                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode.        |

## BIOS.SysProfileSettings.ProcTurboMode (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | When enabled, the processor can operate in Turbo Boost Mode.                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Read Only if SysProfileSettings.SysProfile is not set to Custom mode.        |

## BIOS.SysProfileSettings.SysProfile (Read or Write)

|                         |                                                                                                                                                                                  |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the System Profile to Performance Per Watt (DAPC), Performance Per Watt (OS) Performance Dense Configuration, or Custom mode.                                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• PerfPerWattOptimizedOs</li><li>• PerfPerWattOptimizedDapc</li><li>• PerfOptimized</li><li>• Custom</li><li>• DenseCfgOptimized</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                |
| <b>Dependency</b>       | None                                                                                                                                                                             |

## BIOS.SysProfileSettings.TpmCommand (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | <p>Allows to control the Trusted Platform Module (TPM). This property is Read-Only when TPM Security is set to <code>Off</code> and the action requires a restart before the effect. When set to:</p> <ul style="list-style-type: none"><li>• <code>None</code>, the command is not sent to the TPM.</li><li>• <code>Activate</code>, the TPM is enabled and activated.</li><li>• <code>Deactivate</code>, the TPM is disabled and deactivated.</li><li>• <code>Clear</code>, all the contents of TPM is cleared. Clearing the TPM will cause loss of all keys in the TPM.</li></ul> <p> <b>NOTE:</b> The clearing can affect starting the operating system..</p> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• None</li><li>• Activate</li><li>• Deactivate</li><li>• Clear</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## BIOS.SysProfileSettings.UncoreFrequency (Read or Write)

**Description** Selects the processor uncore frequency.

**Legal Values**

- DynamicUFS
- MaxUFS
- MinUFS

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysSecurity

To manage the system security properties of the BIOS, use the objects in this group.



**NOTE:** After modifying the IntelTxt attribute value, the pending flag is enabled for the dependent attributes such as TpmActivation, TpmClear, and TpmSecurity.

### BIOS.SysSecurity.AcPwrRcvry (Read or Write)

**Description** Specifies how the system responds after AC power is restored to the system. It is useful when the system is turned off with a power strip.

**Legal Values**

- On
- Off
- Last

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Read Only if SysSecurity.AcPwrRcvry is set to Off.

### BIOS.SysSecurity.AcPwrRcvryDelay (Read or Write)

**Description** Specifies how the system supports the staggering of power-up after AC power has been restored to the system.

**Legal Values**

- Immediate
- User
- Random

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **BIOS.SysSecurity.AcPwrRcvryUserDelay (Read or Write)**

|                         |                                              |
|-------------------------|----------------------------------------------|
| <b>Description</b>      | Controls the user-defined AC Recovery Delay. |
| <b>Legal Values</b>     | None                                         |
| <b>Default Value</b>    | Not Applicable                               |
| <b>Write Privilege</b>  | Server Control                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise            |
| <b>Dependency</b>       | None                                         |

### **BIOS.SysSecurity.Aesni (Read or Write)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Displays the status of Intel(R) Processor AES-NI feature.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### **BIOS.SysSecurity.BiosUpdateControl (Read or Write)**

|                      |                                                                                                                                                                                                                       |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | If this attribute is set to Unlocked, then all BIOS update is allowed. If set to Limited, then local BIOS updates from DOS or UEFI shell based flash utilities, or Lifecycle Controller user interface is disallowed. |
| <b>Legal Values</b>  | <ul style="list-style-type: none"> <li>• Unlocked</li> <li>• Limited</li> <li>• Locked</li> </ul>                                                                                                                     |
| <b>Default Value</b> | Not Applicable                                                                                                                                                                                                        |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.SysSecurity.IntelTxt (Read or Write)

**Description** Enables or disables Trusted Execution technology.



**NOTE:** When the IntelTxt value is set to 'on', then the following values are set: TpmActivation=NoChange (Pending Value=NoChange), TpmClear=No (Pending Value=No), TpmSecurity=OnPbm (Pending Value=OnPbm).

**Legal Values**

- On
- Off

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Read Only if:

- ProcSettings.ProcVirtualization is Disabled
- SysSecurity.TpmActivation is Deactivate
- SysSecurity.TpmActivation is Yes
- SysSecurity.TpmSecurity is not set to OnPbm

## BIOS.SysSecurity.NmiButton (Read or Write)

**Description** Enables or disables the NMI button on the front panel.

**Legal Values**

- Enabled
- Disabled

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysSecurity.PasswordStatus (Read or Write)

|                         |                                                                             |
|-------------------------|-----------------------------------------------------------------------------|
| <b>Description</b>      | Locks the system password.                                                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Locked</li><li>• Unlocked</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                              |
| <b>Write Privilege</b>  | Server Control                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                           |
| <b>Dependency</b>       | None                                                                        |

## BIOS.SysSecurity.PwrButton (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the power button on the front panel.                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## BIOS.SysSecurity.SecureBoot (Read or Write)

|                         |                                                                                                                                                                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the SecureBoot option.<br> <b>NOTE:</b> BiosBootSettings.Bootmode must be set to UEFI and MiscSettings.ForceInt10 must be Disabled to operate this property. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                                                                                                                                                        |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                   |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                |

## BIOS.SysSecurity.SetupPassword (Read or Write)

**Description** Set up the system password. Optional parameter `-o <string>` is used with this object to provide old password as an authentication for changing the previously configured password to the new password.

The password can include the following:

- Up to 32 characters including whitespace.
- Contain numbers 0 through 9.
- Only lower case alphabets are accepted.
- Special characters accepted are +, " , \_ , . , / , ; , [ , \ , ] , ` .

To enable password modification, **J\_EN\_PASSWD** must be installed.

To clear the already configured password, use the option available under F2 (system setup) during system start.

**Legal Values** String of up to 22 characters

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysSecurity.SHA256SetupPassword (Read or Write)

**Description** Indicates the SHA256 hash of the setup password.

**Legal Values** String of 64 characters

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

## BIOS.SysSecurity.SHA256SetupPasswordSalt (Read or Write)

**Description** Indicates the Salt string added to the setup password before hash.

**Legal Values** String of 32 characters

**Default Value** Not Applicable

**Write Privilege** Server Control

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## BIOS.SysSecurity.SignedFirmwareUpdate (Read or Write)

|                         |                                                                                                                                                                              |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables the signed BIOS update feature. Once enabled, this attribute cannot be disabled. When you change the value from disabled to enabled, a warning message is displayed. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>                                                                                              |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                            |
| <b>Dependency</b>       | None                                                                                                                                                                         |

## BIOS.SysSecurity.SysPassword (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | <p>Provides the system password. Optional parameter <code>-o &lt;string&gt;</code> is used with this object to provide old password as an authentication for changing the previously configured password to the new password.</p> <p>The password can include the following:</p> <ul style="list-style-type: none"> <li>• Up to 32 characters including whitespace.</li> <li>• Contain numbers 0 through 9.</li> <li>• Only lower case alphabets are accepted.</li> <li>• Special characters accepted are +, ", ,, -, ., /, :, ;, [ \, ], `.</li> </ul> <p>To enable password modification, <b>J_EN_PASSWD</b> must be installed.</p> <p>To clear the already configured password, use the option available under F2 (system setup) during system start.</p> |
| <b>Legal Values</b>     | String of up to 22 characters                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## BIOS.SysSecurity.SHA256SystemPassword (Read or Write)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Indicates the SHA256 hash of the system password. |
| <b>Legal Values</b>     | String of 64 characters                           |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Server Control                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | None                                              |

## BIOS.SysSecurity.SHA256SystemPasswordSalt (Read or Write)

|                         |                                                                     |
|-------------------------|---------------------------------------------------------------------|
| <b>Description</b>      | Indicates the Salt string added to the system password before hash. |
| <b>Legal Values</b>     | String of 32 characters                                             |
| <b>Default Value</b>    | Not Applicable                                                      |
| <b>Write Privilege</b>  | Server Control                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                   |
| <b>Dependency</b>       | None                                                                |

## BIOS.SysSecurity.TcmActivation (Read or Write)

|                         |                                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Set the operational state of the Trusted Cryptography Module (TCM).                                 |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• No change</li><li>• Activate</li><li>• Deactivate</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                   |
| <b>Dependency</b>       | None                                                                                                |

## BIOS.SysSecurity.TcmClear (Read or Write)

|                     |                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Warns that clearing the TPM causes loss of all keys in the TPM. It may affect starting the operating system. |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Yes</li></ul>                                                        |

- No

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### BIOS.SysSecurity.TcmSecurity (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the reporting of the Trusted Cryptography Module (TCM) in the system. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Off</li> <li>• On</li> </ul>          |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | None                                                                           |

### BIOS.SysSecurity.TpmActivation (Read or Write)

|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specify the operational state of the Trusted Platform Module (TPM).                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• NoChange</li> <li>• Activate</li> <li>• Deactivate</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | Read Only if SysSecurity.TpmSecurity is set to Off.                                                    |

### BIOS.SysSecurity.TpmClear (Read or Write)

|                     |                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Warns that clearing the TPM causes loss of all keys in the TPM. It may affect starting the operating system. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Yes</li> </ul>                                                      |

- No

|                         |                                                                  |
|-------------------------|------------------------------------------------------------------|
| <b>Default Value</b>    | Not Applicable                                                   |
| <b>Write Privilege</b>  | Server Control                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                |
| <b>Dependency</b>       | Read Only if <code>SysSecurity.TpmSecurity</code> is set to Off. |

## BIOS.SysSecurity.TpmSecurity (Read or Write)

|                         |                                                                                             |
|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the reporting of the Trusted Platform Module (TPM) in the system.                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Off</li> <li>• OnPbm</li> <li>• OnNoPbm</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                           |
| <b>Dependency</b>       | None                                                                                        |

## BIOS.SysSecurity.TPMStatus (Read Only)

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Displays the status of TPM.          |
| <b>Legal Values</b>     | String of up to 64 ASCII characters. |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Server Control                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

## BIOS.UefiBootSettings

The objects in this group manages the UEFI boot settings.

## BIOS.UefiBootSettings.UefiBootSeq (Read or Write)

|                         |                                                                                                                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the UEFI boot order. The first option in the list is tried first. If unsuccessful, the second option is tried and so on. This property is applied only when Boot Mode is UEFI and not BIOS. |
| <b>Legal Values</b>     | Enum Values                                                                                                                                                                                          |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                    |
| <b>Dependency</b>       | None                                                                                                                                                                                                 |

## BIOS.UefiBootSettings.UefiPxelpVersion (Read or Write)

|                         |                                                                                                                                                                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables to select the IPv4 PXE booting (default) or IPv6 PXE booting when in UEFI boot mode. This property is disabled in BIOS boot mode. If this property is modified, the PXE options in the UEFI boot sequence is replaced on the next restart. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• IPv4</li><li>• IPv6</li></ul>                                                                                                                                                                              |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                                                                                                     |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                               |

## FC.FCDevice

The objects in this group manage the FC device.

### FC.FCDevice.BusDeviceFunction (Read Only)

|                         |                                                                                  |
|-------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the enumerated PCI Bus, Device, and Function value as a single string. |
| <b>Legal Values</b>     | Not Applicable                                                                   |
| <b>Default Value</b>    | Not Applicable                                                                   |
| <b>Write Privilege</b>  | Not Applicable                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                |
| <b>Dependency</b>       | Not Applicable                                                                   |

### FC.FCDevice.ChipMdl (Read Only)

|                         |                                                    |
|-------------------------|----------------------------------------------------|
| <b>Description</b>      | Indicates the PCI configuration space information. |
| <b>Legal Values</b>     | Not Applicable                                     |
| <b>Default Value</b>    | Not Applicable                                     |
| <b>Write Privilege</b>  | Not Applicable                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                  |
| <b>Dependency</b>       | Not Applicable                                     |

### FC.FCDevice.EFIVersion (Read Only)

|                         |                                                 |
|-------------------------|-------------------------------------------------|
| <b>Description</b>      | Indicates the version of the EFI device driver. |
| <b>Legal Values</b>     | Not Applicable                                  |
| <b>Default Value</b>    | Not Applicable                                  |
| <b>Write Privilege</b>  | Not Applicable                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise               |
| <b>Dependency</b>       | Not Applicable                                  |

### FC.FCDevice.FamilyVersion (Read Only)

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Indicates the firmware's family version. |
| <b>Legal Values</b>     | Not Applicable                           |
| <b>Default Value</b>    | Not Applicable                           |
| <b>Write Privilege</b>  | Not Applicable                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise        |
| <b>Dependency</b>       | Not Applicable                           |

### FC.FCDevice.PCIDeviceID (Read Only)

|                        |                                                                 |
|------------------------|-----------------------------------------------------------------|
| <b>Description</b>     | Indicates the device ID present in the PCI configuration space. |
| <b>Legal Values</b>    | Not Applicable                                                  |
| <b>Default Value</b>   | Not Applicable                                                  |
| <b>Write Privilege</b> | Not Applicable                                                  |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

## FC.FCTarget

The objects in this group manage the Fibre Channel target.

### FC.FCTarget.BootScanSelection (Read or Write)

|                         |                                                                                                                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the port's operation while starting the system from Fiber Channel target(s). Only operations supported by the option-ROM should be implemented.                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Disabled</li> <li>• SpecifiedLUN</li> <li>• FirstLUN</li> <li>• FirstLUN0</li> <li>• FirstNOTLUN0</li> <li>• FabricDiscovered</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                                                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                 |
| <b>Dependency</b>       | Not Applicable                                                                                                                                                                    |

### FC.FCTarget.FirstFCTargetLUN (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the LUN (Logical Unit Number) of the first Fibre Channel boot target. |
| <b>Legal Values</b>     | Not Applicable                                                                  |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Applicable                                                                  |

### FC.FCTarget.SecondFCTargetLUN (Read or Write)

|                      |                                                            |
|----------------------|------------------------------------------------------------|
| <b>Description</b>   | Specifies the LUN of the second Fibre Channel boot target. |
| <b>Legal Values</b>  | Not Applicable                                             |
| <b>Default Value</b> | Not Applicable                                             |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### FC.FCTarget.FirstFCTargetWWPN (Read or Write)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the World Wide Port Name of the first Fibre Channel boot target. |
| <b>Legal Values</b>     | Not Applicable                                                             |
| <b>Default Value</b>    | Not Applicable                                                             |
| <b>Write Privilege</b>  | Server Control                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                          |
| <b>Dependency</b>       | Not Applicable                                                             |

### FC.FCTarget.SecondFCTargetWWPN (Read or Write)

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the World Wide Port Name (WWPN) of the second Fibre Channel boot target. |
| <b>Legal Values</b>     | Not Applicable                                                                     |
| <b>Default Value</b>    | Not Applicable                                                                     |
| <b>Write Privilege</b>  | Server Control                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                  |
| <b>Dependency</b>       | Not Applicable                                                                     |

## FC.HBAConfig

The objects in this group manage the Fibre Channel Host Bus Adapter (HBA).

### FC.HBAConfig.FCTape (Read or Write)

|                        |                                                                                 |
|------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>     | Enables or disables Fibre Channel Tape support.                                 |
| <b>Legal Values</b>    | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>   | Disabled                                                                        |
| <b>Write Privilege</b> | Server Control                                                                  |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### **FC.HBAConfig.FabricLoginTimeout (Read or Write)**

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | Sets the SAN Fabric login time out. |
| <b>Legal Values</b>     | Not Applicable                      |
| <b>Default Value</b>    | 3000                                |
| <b>Write Privilege</b>  | Server Control                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | Not Applicable                      |

### **FC.HBAConfig.FabricLoginRetryCount (Read or Write)**

|                         |                                                |
|-------------------------|------------------------------------------------|
| <b>Description</b>      | Sets the current SAN Fabric login retry count. |
| <b>Legal Values</b>     | Not Applicable                                 |
| <b>Default Value</b>    | 3                                              |
| <b>Write Privilege</b>  | Server Control                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise              |
| <b>Dependency</b>       | Not Applicable                                 |

### **FC.HBAConfig.FramePayloadSize (Read or Write)**

|                         |                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Sets the Frame Payload Size to automatic or in bytes.                                                                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Auto</li> <li>• 512</li> <li>• 1024</li> <li>• 2048</li> <li>• 2112</li> </ul> |
| <b>Default Value</b>    | Auto                                                                                                                    |
| <b>Write Privilege</b>  | Server Control                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                       |
| <b>Dependency</b>       | Not Applicable                                                                                                          |

## FC.HBAConfig.HardZone (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the Fibre Channel hard zone.                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Disabled                                                                     |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Not Applicable                                                               |

## FC.HBAConfig.HardZoneAddress (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Sets the Hard Zone address.       |
| <b>Legal Values</b>     | Not Applicable                    |
| <b>Default Value</b>    | 0                                 |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

## FC.HBAConfig.LinkDownTimeout (Read or Write)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Sets the Link down time out.      |
| <b>Legal Values</b>     | Not Applicable                    |
| <b>Default Value</b>    | 3000                              |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

## FC.HBAConfig.LoopResetDelay (Read or Write)

|                      |                                                               |
|----------------------|---------------------------------------------------------------|
| <b>Description</b>   | Sets the arbitrated Loop Reset Delay for the port in seconds. |
| <b>Legal Values</b>  | Not Applicable                                                |
| <b>Default Value</b> | 5                                                             |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### **FC.HBAConfig.PortDownRetryCount (Read or Write)**

|                         |                                                     |
|-------------------------|-----------------------------------------------------|
| <b>Description</b>      | Sets the target port down Input/Output retry count. |
| <b>Legal Values</b>     | Not Applicable                                      |
| <b>Default Value</b>    | Not Applicable                                      |
| <b>Write Privilege</b>  | Server Control                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                   |
| <b>Dependency</b>       | Not Applicable                                      |

### **FC.HBAConfig.PortDownTimeout (Read or Write)**

|                         |                                     |
|-------------------------|-------------------------------------|
| <b>Description</b>      | Sets the target port down time out. |
| <b>Legal Values</b>     | Not Applicable                      |
| <b>Default Value</b>    | 3000                                |
| <b>Write Privilege</b>  | Server Control                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise   |
| <b>Dependency</b>       | Not Applicable                      |

### **FC.HBAConfig.PortLoginRetryCount (Read or Write)**

|                         |                                         |
|-------------------------|-----------------------------------------|
| <b>Description</b>      | Sets the target Port login retry count. |
| <b>Legal Values</b>     | Not Applicable                          |
| <b>Default Value</b>    | 3                                       |
| <b>Write Privilege</b>  | Server Control                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise       |
| <b>Dependency</b>       | Not Applicable                          |

## FC.HBAConfig.PortLoginTimeout (Read or Write)

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Sets the target port login time out. |
| <b>Legal Values</b>     | Not Applicable                       |
| <b>Default Value</b>    | 3000                                 |
| <b>Write Privilege</b>  | Server Control                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | Not Applicable                       |

## FC.PortConfig

The objects in this group manage the Fiber Channel port configuration.

### FC.PortConfig.DeviceName (Read Only)

|                         |                                                                   |
|-------------------------|-------------------------------------------------------------------|
| <b>Description</b>      | Indicates the product name of the Fibre Channel host bus adapter. |
| <b>Legal Values</b>     | Not Applicable                                                    |
| <b>Default Value</b>    | Not Applicable                                                    |
| <b>Write Privilege</b>  | Not Applicable                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                 |
| <b>Dependency</b>       | Not Applicable                                                    |

### FC.PortConfig.FCDevice (Read Only)

|                         |                                                  |
|-------------------------|--------------------------------------------------|
| <b>Description</b>      | Displays the version of the device and firmware. |
| <b>Legal Values</b>     | Not Applicable                                   |
| <b>Default Value</b>    | Not Applicable                                   |
| <b>Write Privilege</b>  | Not Applicable                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                |
| <b>Dependency</b>       | Not Applicable                                   |

### FC.PortConfig.FCTarget (Read Only)

|                         |                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables the connection, configure boot, and communication parameters for the Fibre Channel boot target(s). |
| <b>Legal Values</b>     | Not Applicable                                                                                             |
| <b>Default Value</b>    | Not Applicable                                                                                             |
| <b>Write Privilege</b>  | Not Applicable                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                          |
| <b>Dependency</b>       | Not Applicable                                                                                             |

### FC.PortConfig.HBAConfig (Read Only)

|                         |                                                        |
|-------------------------|--------------------------------------------------------|
| <b>Description</b>      | Configures the advanced settings for adapter and port. |
| <b>Legal Values</b>     | Not Applicable                                         |
| <b>Default Value</b>    | Not Applicable                                         |
| <b>Write Privilege</b>  | Not Applicable                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                      |
| <b>Dependency</b>       | Not Applicable                                         |

### FC.PortConfig.PortNumber (Read Only)

|                         |                                                           |
|-------------------------|-----------------------------------------------------------|
| <b>Description</b>      | Indicates the Fibre Channel Host Bus Adapter port number. |
| <b>Legal Values</b>     | Not Applicable                                            |
| <b>Default Value</b>    | Not Applicable                                            |
| <b>Write Privilege</b>  | Not Applicable                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                         |
| <b>Dependency</b>       | Not Applicable                                            |

### FC.PortConfig.PortSpeed (Read or Write)

|                     |                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Specifies the data rate of the Fibre Channel Host Bus Adapter port. The value can be Automatic or specified in Gbps. |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Auto</li><li>• 1G</li><li>• 2G</li></ul>                                     |

- 4G
- 8G
- 16G

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Auto                              |
| <b>Write Privilege</b>  | Sever Control                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### FC.PortConfig.VirtualWWN (Read or Write)

|                         |                                                                 |
|-------------------------|-----------------------------------------------------------------|
| <b>Description</b>      | Indicates the virtual Fibre Channel World Wide Node Name (WWN). |
| <b>Legal Values</b>     | Not Applicable                                                  |
| <b>Default Value</b>    | Not Applicable                                                  |
| <b>Write Privilege</b>  | Server Control                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                               |
| <b>Dependency</b>       | Not Applicable                                                  |

### FC.PortConfig.VirtualWWPN (Read or Write)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Indicates the virtual Fibre Channel World Wide Port Name of the port. |
| <b>Legal Values</b>     | Not Applicable                                                        |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Server Control                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | Not Applicable                                                        |

### FC.PortConfig.WWN (Read Only)

|                         |                                                             |
|-------------------------|-------------------------------------------------------------|
| <b>Description</b>      | Indicates the permanent Fibre Channel World Wide Node name. |
| <b>Legal Values</b>     | Not Applicable                                              |
| <b>Default Value</b>    | Not Applicable                                              |
| <b>Write Privilege</b>  | Not Applicable                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                           |

**Dependency** Not Applicable

## **FC.PortConfig.WWPN (Read Only)**

**Description** Indicates the permanent Fibre Channel World Wide Port Name assigned to the port.

**Legal Values** Not Applicable

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

## **NIC.ConfigureFormn**

The objects in this group manage.

### **NIC.ConfigureFormn.BusDeviceFunction (Read Only)**

**Description** Indicates the value of the bus device function.

**Legal Values** Not Applicable

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### **NIC.ConfigureFormn.MacAddr (Read Only)**

**Description** Indicates the permanent MAC address.

**Legal Values** Not Applicable

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### NIC.ConfigureFormn.FIPMacAddr (Read Only)

|                         |                                                   |
|-------------------------|---------------------------------------------------|
| <b>Description</b>      | Indicates the permanent FIP-MAC address for FCoE. |
| <b>Legal Values</b>     | Not Applicable                                    |
| <b>Default Value</b>    | Not Applicable                                    |
| <b>Write Privilege</b>  | Not Applicable                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                 |
| <b>Dependency</b>       | Not Applicable                                    |

### NIC.ConfigureFormn.IscsiMacAddr (Read Only)

|                         |                                                         |
|-------------------------|---------------------------------------------------------|
| <b>Description</b>      | Indicates the permanent MAC address for iSCSI off load. |
| <b>Legal Values</b>     | Not Applicable                                          |
| <b>Default Value</b>    | Not Applicable                                          |
| <b>Write Privilege</b>  | Not Applicable                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                       |
| <b>Dependency</b>       | Not Applicable                                          |

### NIC.ConfigureFormn.iScsiOffloadMode (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the iSCSI off load on the partition.                     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Disabled                                                                     |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | Not Applicable                                                               |

### NIC.ConfigureFormn.FCoEOffloadMode (Read or Write)

|                     |                                                                              |
|---------------------|------------------------------------------------------------------------------|
| <b>Description</b>  | Enables or disables the FCoE on the partition.                               |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Disabled                          |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### **NIC.ConfigureFormn.NicMode (Read or Write)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the NIC mode on the partition.                              |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Applicable                                                                  |

### **NIC.ConfigureFormn.PCIDeviceID (Read Only)**

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Indicates the PCI Device ID of the partition. |
| <b>Legal Values</b>     | Not Applicable                                |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Not Applicable                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |
| <b>Dependency</b>       | Not Applicable                                |

### **NIC.ConfigureFormn.WWN (Read Only)**

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Indicates the Fibre Channel World Wide Node name identifier for FCoE. |
| <b>Legal Values</b>     | Not Applicable                                                        |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Not Applicable                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | Not Applicable                                                        |

## NIC.ConfigureFormn.WWPN (Read Only)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Indicates the Fibre Channel World Wide Port Name identifier for FCoE. |
| <b>Legal Values</b>     | Not Applicable                                                        |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Not Applicable                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | Not Applicable                                                        |

## NIC.ConfigureFormn.VirtWWN (Read or Write)

|                         |                                                                            |
|-------------------------|----------------------------------------------------------------------------|
| <b>Description</b>      | Sets the Fibre Channel World Wide Node Name identifier for partition FCoE. |
| <b>Legal Values</b>     | Not Applicable                                                             |
| <b>Default Value</b>    | 00:00:00:00:00:00:00:00                                                    |
| <b>Write Privilege</b>  | Server Control                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                          |
| <b>Dependency</b>       | Not Applicable                                                             |

## NIC.ConfigureFormn.VirtWWPN (Read or Write)

|                         |                                                                               |
|-------------------------|-------------------------------------------------------------------------------|
| <b>Description</b>      | Assigns the Fibre Channel World Wide Port Name identifier for partition FCoE. |
| <b>Legal Values</b>     | Not Applicable                                                                |
| <b>Default Value</b>    | 00:00:00:00:00:00:00:00                                                       |
| <b>Write Privilege</b>  | Server Control                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                             |
| <b>Dependency</b>       | Not Applicable                                                                |

## NIC.ConfigureFormn.VirtMacAddr (Read or Write)

|                        |                                    |
|------------------------|------------------------------------|
| <b>Description</b>     | Assigns MAC address for partition. |
| <b>Legal Values</b>    | Not Applicable                     |
| <b>Default Value</b>   | 00:00:00:00:00:00                  |
| <b>Write Privilege</b> | Server Control                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### NIC.ConfigureFormn.VirtIscsiMacAddr (Read or Write)

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | Assigns the MAC address for partition iSCSI off load. |
| <b>Legal Values</b>     | Not Applicable                                        |
| <b>Default Value</b>    | 00:00:00:00:00:00                                     |
| <b>Write Privilege</b>  | Server Control                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | Not Applicable                                        |

### NIC.ConfigureFormn.VirtFIPMacAddr (Read or Write)

|                         |                                                 |
|-------------------------|-------------------------------------------------|
| <b>Description</b>      | Assigns the FIP-MAC address for partition FCoE. |
| <b>Legal Values</b>     | Not Applicable                                  |
| <b>Default Value</b>    | 00:00:00:00:00:00                               |
| <b>Write Privilege</b>  | Server Control                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise               |
| <b>Dependency</b>       | Not Applicable                                  |

## NIC.DCBSettings

The following section provides information about the objects in the `NIC.DCBSettings` group.

### NIC.DCBSettings.CongestionNotification (Read Only)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Congestion Notification capability is supported.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Available</li> <li>• Unavailable</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |

**Dependency**    None

### **NIC.DCBSettings.DCBExchangeProtocol (Read Only)**

**Description**    Indicates whether Data Center Bridging (DCB) Exchange Protocol capability is supported.

**Legal Values**

- Available
- Unavailable

**Default Value**    Not Applicable

**Write Privilege**    Not Applicable

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.DCBSettings.EnhancedTransmissionSelection (Read Only)**

**Description**    Indicates whether Enhanced Transmission Selection capability is supported.

**Legal Values**

- Available
- Unavailable

**Default Value**    Not Applicable

**Write Privilege**    Not Applicable

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.DCBSettings.PriorityFlowControl (Read Only)**

**Description**    Indicates whether Priority Flow Control capability is supported.

**Legal Values**

- Available
- Unavailable

**Default Value**    Not Applicable

**Write Privilege**    Not Applicable

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## NIC.DeviceLevelConfig

To manage the device level configurations, use the objects in this group.

### NIC.DeviceLevelConfig.EVBModesSupport (Read Only)

**Description** Indicates the type of EVB Modes supported.

**Legal Values**

- VEB
- VEPA
- PE
- Multichannel

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### NIC.DeviceLevelConfig.FlowControlSetting (Read or Write)

**Description** Configure type of Flow Control used.

**Legal Values**

- Auto
- TX:Send Pause on RX Overflow
- RX:Throttle TX on Pause Received
- TX RX Flow Control

**Default Value** Auto

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### NIC.DeviceLevelConfig.NParEP (Read or Write)

**Description** Controls the enablement of NParEP mode.

**Legal Values**

- Enabled
- Disabled

**Default Value** Disabled

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### NIC.DeviceLevelConfig.SRIOVSupport (Read Only)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether SR-IOV capability is supported.                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Available</li> <li>• Unavailable</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### NIC.DeviceLevelConfig.VirtualizationMode (Read or Write)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the type of virtualization used by the controller on all ports.                                      |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• NONE</li> <li>• NPAR</li> <li>• SRIOV</li> <li>• NPARSRIOV</li> </ul> |
| <b>Default Value</b>    | None                                                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                              |
| <b>Dependency</b>       | Not Applicable                                                                                                 |

## NIC.FCOECapabilities

The following section provides information about the objects in the `NIC.FCOECapabilities` group.

### NIC.FCOECapabilities.AddressingMode (Read Only)

|                     |                                                                          |
|---------------------|--------------------------------------------------------------------------|
| <b>Description</b>  | Indicates whether SPMA or FPMA addressing is used for FCoE transactions. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• SPMA</li> </ul>                 |

- FPMA

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **NIC.FCOECapabilities.MaxFrameSize (Read Only)**

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum frame size for each FCoE frame. |
| <b>Legal Values</b>     | None                                                  |
| <b>Default Value</b>    | Not Applicable                                        |
| <b>Write Privilege</b>  | Not Applicable                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | None                                                  |

### **NIC.FCOECapabilities.MaxIOsPerSession (Read Only)**

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum number of IOs supported per session. |
| <b>Legal Values</b>     | None                                                       |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Not Applicable                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                       |

### **NIC.FCOECapabilities.MaxNPIVPerPort (Read Only)**

|                        |                                                    |
|------------------------|----------------------------------------------------|
| <b>Description</b>     | Indicates the maximum number of NPIV WWN per port. |
| <b>Legal Values</b>    | None                                               |
| <b>Default Value</b>   | Not Applicable                                     |
| <b>Write Privilege</b> | Not Applicable                                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **NIC.FCOECapabilities.MaxNumberExchanges (Read Only)**

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum number of exchanges supported. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Not Applicable                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### **NIC.FCOECapabilities.MaxNumberLogins (Read Only)**

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum number of logins supported per port. |
| <b>Legal Values</b>     | None                                                       |
| <b>Default Value</b>    | Not Applicable                                             |
| <b>Write Privilege</b>  | Not Applicable                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                          |
| <b>Dependency</b>       | None                                                       |

### **NIC.FCOECapabilities.MaxNumberOfFCTargets (Read Only)**

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum number of FC targets supported. |
| <b>Legal Values</b>     | None                                                  |
| <b>Default Value</b>    | Not Applicable                                        |
| <b>Write Privilege</b>  | Not Applicable                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | None                                                  |

## NIC.FCOECapabilities.MaxNumberOutStandingCommands (Read Only)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the maximum number of outstanding commands supported across all sessions. |
| <b>Legal Values</b>     | None                                                                                |
| <b>Default Value</b>    | Not Applicable                                                                      |
| <b>Write Privilege</b>  | Not Applicable                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

## NIC.FCOECapabilities.MTUReconfigurationSupport (Read Only)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether the MTU reconfiguration capability is supported.                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Available</li><li>• Unavailable</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                    |
| <b>Write Privilege</b>  | Not Applicable                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                 |
| <b>Dependency</b>       | None                                                                              |

## NIC.FCoEConfiguration

The following section provides information about the objects in the NIC.FCoEConfiguration group.

### NIC.FCoEConfiguration.ConnectFirstFCoETarget (Read or Write)

|                         |                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether FCoE initiator is used to connect to the first FCoE storage target defined. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                  |
| <b>Default Value</b>    | Disabled                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                             |

**Dependency**    None

### **NIC.FCoEConfiguration.BootOrderFirstFCoETarget (Read or Write)**

**Description**    Specifies the port's target in the FCoE boot order.

**Legal Values**    Not Applicable

**Default Value**    0

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    Not Applicable

### **NIC.FCoEConfiguration.BootOrderSecondFCoETarget (Read or Write)**

**Description**    Specifies the port's second defined target in the FCoE boot.

**Legal Values**    Not Applicable

**Default Value**    0

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    Not Applicable

### **NIC.FCoEConfiguration.BootOrderThirdFCoETarget (Read or Write)**

**Description**    Specifies the port's third defined target in the FCoE boot.

**Legal Values**    Not Applicable

**Default Value**    0

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    Not Applicable

### **NIC.FCoEConfiguration.BootOrderFourthFCoETarget (Read or Write)**

**Description**    Specifies the port's fourth defined target in the FCoE boot.

**Legal Values**    Not Applicable

**Default Value**    0

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### **NIC.FCoEConfiguration.FirstFCoEBootTargetLUN (Read or Write)**

|                         |                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | LUN of the first FCoE storage target that the FCoE initiator will start the system from when Connect attribute is enabled. |
| <b>Legal Values</b>     | None                                                                                                                       |
| <b>Default Value</b>    | Not Applicable                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                          |
| <b>Dependency</b>       | Enable <code>FCoEConfiguration.ConnectFirstFCoETarget</code>                                                               |

### **NIC.FCoEConfiguration.FirstFCoEFCFVLANID (Read or Write)**

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | VLAN ID uses the first FC storage target to connect. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Server Control                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### **NIC.FCoEConfiguration.FirstFCoEWWPNTarget (Read or Write)**

|                         |                                                               |
|-------------------------|---------------------------------------------------------------|
| <b>Description</b>      | World Wide Port Name (WWPN) of the first FCoE storage target. |
| <b>Legal Values</b>     | None                                                          |
| <b>Default Value</b>    | Not Applicable                                                |
| <b>Write Privilege</b>  | Server Control                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                             |
| <b>Dependency</b>       | None                                                          |

## NIC.FCoEConfiguration.MTUParams (Read or Write)

|                         |                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Configure the MTU setting.                                                                             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Global</li><li>• Per DCB Priority</li><li>• Per VLAN</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                      |
| <b>Dependency</b>       | None                                                                                                   |

## NIC.FCoEGenParams

The following section provides information about the objects in the `NIC.FCoEGenParams` group.

### NIC.FCoEGenParams.FCoEBootScanSelection (Read or Write)

|                         |                                                                                                                                                                                                                    |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Represents the adaptor behavior for starting the system from specified FCoE storage target or fabric discovered target.                                                                                            |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• 0 — Disabled</li><li>• 1 — First LUN</li><li>• 2 — First LUN 0</li><li>• 3 — First LUN Not LUN 0</li><li>• 4 — Fabric Discovered LUN</li><li>• 5 — Specified LUN</li></ul> |
| <b>Default Value</b>    | 0 — Disabled                                                                                                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                  |
| <b>Dependency</b>       | None                                                                                                                                                                                                               |

### NIC.FCoEGenParams.FCoEFabricDiscoveryRetryCnt (Read or Write)

|                      |                                        |
|----------------------|----------------------------------------|
| <b>Description</b>   | Retry count for FCoE fabric discovery. |
| <b>Legal Values</b>  | Values: 0–60                           |
| <b>Default Value</b> | Not Applicable                         |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### NIC.FCoEGenParams.FCoEFirstHddTarget (Read or Write)

|                         |                                                                                  |
|-------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether the FCoE target is represented as the first HDD to the system. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>  |
| <b>Default Value</b>    | Disabled                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                |
| <b>Dependency</b>       | None                                                                             |

### NIC.FCoEGenParams.FCoELnkUpDelayTime (Read or Write)

|                         |                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the time FCoE Initiator waits after an Ethernet link is established before sending any data over the network. Units are in seconds. |
| <b>Legal Values</b>     | Values: 0–255                                                                                                                                 |
| <b>Default Value</b>    | Not Applicable                                                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                             |
| <b>Dependency</b>       | None                                                                                                                                          |

### NIC.FCoEGenParams.FCoELunBusyRetryCnt (Read or Write)

|                        |                                                                                                                 |
|------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies the number of connection retries the FCoE boot initiator will attempt if the FCoE target LUN is busy. |
| <b>Legal Values</b>    | Values: 0–60                                                                                                    |
| <b>Default Value</b>   | Not Applicable                                                                                                  |
| <b>Write Privilege</b> | Server Control                                                                                                  |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## NIC.FCoEGenParams.FCoETgtBoot (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables the FCoE initiator to start system to the FCoE target.                  |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

## NIC.FrmwImgMenu

The following section provides information about the objects in the `NIC.FrmwImgMenu` group.

### NIC.FrmwImgMenu.ControllerBIOSVersion (Read Only)

|                         |                                                    |
|-------------------------|----------------------------------------------------|
| <b>Description</b>      | Indicates the controller BIOS version information. |
| <b>Legal Values</b>     | String of up to 8 ASCII characters                 |
| <b>Default Value</b>    | Not Applicable                                     |
| <b>Write Privilege</b>  | Not Applicable                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                  |
| <b>Dependency</b>       | None                                               |

### NIC.FrmwImgMenu.EFIVersion (Read Only)

|                        |                                                      |
|------------------------|------------------------------------------------------|
| <b>Description</b>     | Indicates the EFI device driver version information. |
| <b>Legal Values</b>    | String of up to 8 ASCII characters                   |
| <b>Default Value</b>   | Not Applicable                                       |
| <b>Write Privilege</b> | Not Applicable                                       |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## NIC.FrmwImgMenu.FamilyVersion (Read Only)

|                         |                                                    |
|-------------------------|----------------------------------------------------|
| <b>Description</b>      | Indicates the firmware family version information. |
| <b>Legal Values</b>     | String of up to 8 ASCII characters                 |
| <b>Default Value</b>    | Not Applicable                                     |
| <b>Write Privilege</b>  | Not Applicable                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                  |
| <b>Dependency</b>       | None                                               |

## NIC.GlobalBandwidthAllocation

The following section provides information about the objects in the `NIC.GlobalBandwidthAllocation` group.

### NIC.GlobalBandwidthAllocation.MaxBandwidth (Read or Write)

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Set the maximum percentage of port TX bandwidth allocated to partition. |
| <b>Legal Values</b>     | Values from 0 to 100                                                    |
| <b>Default Value</b>    | 100                                                                     |
| <b>Write Privilege</b>  | Server Control                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | None                                                                    |

### NIC.GlobalBandwidthAllocation.MinBandwidth (Read or Write)

|                        |                                                                         |
|------------------------|-------------------------------------------------------------------------|
| <b>Description</b>     | Set the minimum percentage of port TX bandwidth allocated to partition. |
| <b>Legal Values</b>    | Values: 0–100                                                           |
| <b>Default Value</b>   | 25                                                                      |
| <b>Write Privilege</b> | Server Control                                                          |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## NIC.IscsiFirstTgtParams

The following section provides information about the objects in the `NIC.IscsiFirstTgtParams` group.

### NIC.IscsiFirstTgtParams.AddressingMode (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the connection to the first iSCSI target.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Applicable                                                                  |

### NIC.IscsiFirstTgtParams.ConnectFirstTgt (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables connecting to the first iSCSI target.                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable.  |

### NIC.IscsiFirstTgtParams.FirstTgtBootLun (Read or Write)

|                      |                                                                    |
|----------------------|--------------------------------------------------------------------|
| <b>Description</b>   | Set the first iSCSI storage target boot Logical Unit Number (LUN). |
| <b>Legal Values</b>  | Values: 0–18446744073709551615                                     |
| <b>Default Value</b> | Not Applicable                                                     |

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable. |

### NIC.IscsiFirstTgtParams.FirstTgtChapId (Read or Write)

|                         |                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------|
| <b>Description</b>      | Set the first iSCSI storage target Challenge-Handshake Authentication Protocol (CHAP) ID. |
| <b>Legal Values</b>     | String of up to 128 ASCII characters                                                      |
| <b>Default Value</b>    | Not Applicable                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                         |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable.            |

### NIC.IscsiFirstTgtParams.FirstTgtChapPwd (Password)

|                         |                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the first iSCSI storage target Challenge-Handshake Authentication Protocol (CHAP) secret (target CHAP password). |
| <b>Legal Values</b>     | String of up to 16 characters                                                                                              |
| <b>Default Value</b>    | Not Applicable                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                          |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable.                                             |

### NIC.IscsiFirstTgtParams.FirstTgtIpAddress (Read or Write)

|                         |                                               |
|-------------------------|-----------------------------------------------|
| <b>Description</b>      | Set the IP address of the first iSCSI target. |
| <b>Legal Values</b>     | Valid IPv4 or IPv6 address                    |
| <b>Default Value</b>    | Not Applicable                                |
| <b>Write Privilege</b>  | Server Control                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise             |

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### NIC.IscsiFirstTgtParams.FirstTgtIpVer (Read or Write)

**Description** Specifies whether or not IPv4 or IPv6 network address is used for first iSCSI target.

**Legal Values**

- IPv4
- IPv6

**Default Value** IPv4

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### NIC.IscsiFirstTgtParams.FirstTgtIscsiName (Read or Write)

**Description** Set the iSCSI Qualified Name (IQN) of the first iSCSI storage target.

**Legal Values** String of upto 223 ASCII characters



**NOTE:** The legal value range may be smaller than the maximum size of 223, based on the vendor configuration of the NIC cards.

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### NIC.IscsiFirstTgtParams.FirstTgtTcpPort (Read or Write)

**Description** Set the TCP Port number of the first iSCSI target.

**Legal Values** Values from 1 to 65535

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

## NIC.IscsiGenParams

The following section provides information about the objects in the `NIC.IscsiGenParams` group.

### NIC.IscsiGenParams.ChapAuthEnable (Read or Write)

|                         |                                                                                                                 |
|-------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | To use CHAP authentication when connecting to the iSCSI target, enable or disable the ability of the initiator. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                    |
| <b>Default Value</b>    | Disabled                                                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                               |
| <b>Dependency</b>       | Not Available if 'VndrConfigGroup.iSCSIBootSupport' is Unavailable.                                             |

### NIC.IscsiGenParams.ChapMutualAuth (Read or Write)

|                         |                                                                                        |
|-------------------------|----------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables mutual CHAP authentication between the iSCSI initiator and target. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>           |
| <b>Default Value</b>    | Disabled                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                      |
| <b>Dependency</b>       | None                                                                                   |

### NIC.IscsiGenParams.DhcpVendId (Read or Write)

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Description</b>      | Control what Vendor ID is presented to the DHCP service. |
| <b>Legal Values</b>     | String of upto 255 ASCII characters                      |
| <b>Default Value</b>    | Not Applicable                                           |
| <b>Write Privilege</b>  | Server Control                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### NIC.IscsiGenParams.FirstHddTarget (Read or Write)

**Description** Enables or disables to check if the iSCSI target appears as the first hard disk drive (HDD) in the system.

**Legal Values**

- Enabled
- Disabled

**Default Value** Disabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### NIC.IscsiGenParams.IpAutoConfig (Read or Write)

**Description** Controls the source of the initiator IP address DHCP or static assignment. This option is specific to IPv6.

**Legal Values**

- Enabled
- Disabled

**Default Value** Disabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `IscsiGenParams.IpVer` is set to 'IPv4' and `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### NIC.IscsiGenParams.IpVer (Read or Write)

**Description** Controls whether IPv4 or IPv6 network addressing is used for iSCSI initiator and targets.

**Legal Values**

- Ipv4
- Ipv6
- None

**Default Value** Ipv4

**Write Privilege** Server Control

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable. |

### NIC.IscsiGenParams.IscsiTgtBoot (Read or Write)

|                         |                                                                                                            |
|-------------------------|------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether or not the iSCSI initiator will boot to the specified iSCSI target after connection.     |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> <li>• OneTimeDisabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                          |
| <b>Dependency</b>       | Not Applicable                                                                                             |

### NIC.IscsiGenParams.IscsiViaDHCP (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables the acquisition of iSCSI target parameters from DHCP.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable.  |

### NIC.IscsiGenParams.IscsiVlanId (Read or Write)

|                         |                                            |
|-------------------------|--------------------------------------------|
| <b>Description</b>      | Specifies the VLAN ID for iSCSI boot mode. |
| <b>Legal Values</b>     | Not Applicable                             |
| <b>Default Value</b>    | Not Applicable                             |
| <b>Write Privilege</b>  | Server Control                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise          |

**Dependency** Not Applicable

### **NIC.IscsiGenParams.IscsiVlanMode (Read or Write)**

**Description** Enables or disables the Virtual LAN mode for iSCSI boot.

**Legal Values**

- Enabled
- Disabled

**Default Value** Disabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### **NIC.IscsiGenParams.LnkUpDelayTime (Read or Write)**

**Description** Set the time to allow for link to establish before driver initialization.

**Legal Values** Values from 0 to 255

**Default Value** 0

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

### **NIC.IscsiGenParams.LunBusyRetryCnt (Read or Write)**

**Description** Specifies the number of connection attempts the iSCSI boot initiator will attempt if the iSCSI target LUN is busy.

**Legal Values** Values: 0–60

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Available if `VndrConfigGroup.iSCSIBootSupport` is Unavailable.

## NIC.IscsiGenParams.TcpIpViaDHCP (Read or Write)

|                         |                                                                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Setting to enable acquisition of IPv4 TCP/IP parameters from DHCP.                                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                                                          |
| <b>Default Value</b>    | Disabled                                                                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                     |
| <b>Dependency</b>       | Not Available if <code>IscsiGenParams.IpVer</code> is set to 'IPv6' and <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable. |

## NIC.IscsiGenParams.TcpTimestmp (Read or Write)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables use of TCP timestamps in network packets as defined in RFC 1323. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>         |
| <b>Default Value</b>    | Disabled                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable.       |

## NIC.IscsiGenParams.WinHbaBootMode (Read or Write)

|                         |                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------|
| <b>Description</b>      | When enabled, it enables iSCSI Offload HBA start mode and disables iSCSI software initiator boot. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>                      |
| <b>Default Value</b>    | Disabled                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                 |
| <b>Dependency</b>       | None                                                                                              |

## NIC.IscsiInitiatorParams

The following section provides information about the objects in the `NIC.IscsiInitiatorParams` group.

### NIC.IscsiInitiatorParams.IscsiInitiatorChapId (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Set the iSCSI initiator Challenge-Handshake Authentication Protocol (CHAP) ID. |
| <b>Legal Values</b>     | String of up to 128 characters                                                 |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### NIC.IscsiInitiatorParams.IscsiInitiatorChapPwd (Read or Write)

|                         |                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Set the iSCSI initiator Challenge-Handshake Authentication Protocol (CHAP) secret (password). |
| <b>Legal Values</b>     | String of 12–16 characters                                                                    |
| <b>Default Value</b>    | Not Applicable                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                             |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable.                |

### NIC.IscsiInitiatorParams.IscsiInitiatorGateway (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Default Gateway of the iSCSI initiator.                          |
| <b>Legal Values</b>     | String of 2-39 characters (Ipv4 or Ipv6 gateway)                               |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not Available if <code>VndrConfigGroup.iSCSIBootSupport</code> is Unavailable. |

### **NIC.IscsiInitiatorParams.IscsiInitiatorIpAddr (Read or Write)**

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the IP address of the iSCSI initiator.                               |
| <b>Legal Values</b>     | String of 2–39 characters (Ipv4 or Ipv6 address)                               |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### **NIC.IscsiInitiatorParams.IscsiInitiatorName (Read or Write)**

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the initiator iSCSI Qualified Name (IQN).                            |
| <b>Legal Values</b>     | String of upto 223 characters                                                  |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### **NIC.IscsiInitiatorParams.IscsiInitiatorPrimDns (Read or Write)**

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the Primary DNS IP address of the iSCSI initiator.                   |
| <b>Legal Values</b>     | String of 2–39 characters (Ipv4 or Ipv6 gateway)                               |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### **NIC.IscsiInitiatorParams.IscsiInitiatorSecDns (Read or Write)**

|                     |                                                                |
|---------------------|----------------------------------------------------------------|
| <b>Description</b>  | Specifies the Secondary DNS IP address of the iSCSI initiator. |
| <b>Legal Values</b> | String of 2–39 characters (Ipv4 or Ipv6 gateway)               |

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### NIC.IscsilInitiatorParams.IscsilInitiatorSubnet (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the IPv4 Subnet Mask of the iSCSI initiator.                         |
| <b>Legal Values</b>     | String of 7–15 characters (IPv4 Subnet)                                        |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### NIC.IscsilInitiatorParams.IscsilInitiatorSubnetPrefix (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the IPv6 Subnet Mask Prefix of the iSCSI initiator.                  |
| <b>Legal Values</b>     | String of 2–39 characters (IPv6 Subnet)                                        |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

## NIC.IscsiSecondaryDeviceParams

The following section provides information about the objects in the `NIC.IscsiSecondaryDeviceParams` group.

### NIC.IscsiSecondaryDeviceParams.SecondaryDeviceMacAddr (Read or Write)

|                      |                                                                                                              |
|----------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b>   | Specifies the MAC address of a secondary iSCSI boot adapter for redundancy in case if start is unsuccessful. |
| <b>Legal Values</b>  | String of up to 17 characters                                                                                |
| <b>Default Value</b> | Not Applicable                                                                                               |

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

## NIC.IscsiSecondaryDeviceParams.UseIndTgtName (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether to use Independent Target Name when multipath I/O is enabled. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable.  |

## NIC.IscsiSecondaryDeviceParams.UseIndTgtPortal (Read or Write)

|                         |                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether to use Independent Target Portal when multipath I/O is enabled. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>   |
| <b>Default Value</b>    | Disabled                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                 |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable.    |

## NIC.IscsiSecondTgtParams

To configure the `iSCSIsecond` storage, use the objects in this group.

### NIC.IscsiSecondTgtParams.ConnectSecondTgt (Read or Write)

|                     |                                                             |
|---------------------|-------------------------------------------------------------|
| <b>Description</b>  | Enables connecting to the second iSCSI target.              |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Enabled</li> </ul> |

- Disabled

**Default Value** Disabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not available if `VndrConfigGroup.iSCSIBootSupport` is unavailable.

### **NIC.IscsiSecondTgtParams.SecondTgtBootLun (Read or Write)**

**Description** Specifies the second iSCSI storage target boot Logical Unit Number (LUN).

**Legal Values** Values: 0–18446744073709551615

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not available if `VndrConfigGroup.iSCSIBootSupport` is unavailable.

### **NIC.IscsiSecondTgtParams.SecondTgtChapId (Read or Write)**

**Description** Specifies the second iSCSI storage target Challenge-Handshake Authentication Protocol (CHAP) ID

**Legal Values** Values: 0–128.

**Default Value** Not Applicable

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not available if `VndrConfigGroup.iSCSIBootSupport` is unavailable.

### **NIC.IscsiSecondTgtParams.SecondTgtChapPwd (Read or Write)**

**Description** Specifies the second iSCSI storage target Challenge-Handshake Authentication Protocol (CHAP) secret (target CHAP password).

**Legal Values** String of 12–16 characters

**Default Value** Not Applicable

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### NIC.IscsiSecondTgtParams.SecondTgtIpAddress (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the IP address of the second iSCSI target.                           |
| <b>Legal Values</b>     | String of 2-39 characters (Ipv4 or Ipv6 address)                               |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

### NIC.IscsiSecondTgtParams.SecondTgtIpVer (Read or Write)

|                         |                                                                                            |
|-------------------------|--------------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies whether or not IPv4 or IPv4 network address is used for the second iSCSI target. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• IPv4</li> <li>• IPv6</li> </ul>                   |
| <b>Default Value</b>    | IPv4                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                          |
| <b>Dependency</b>       | Not Applicable                                                                             |

### NIC.IscsiSecondTgtParams.SecondTgtIscsiName (Read or Write)

|                        |                                                                                                                                                                                                                         |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>     | Specifies the iSCSI Qualified Name (IQN) of the second iSCSI storage target.                                                                                                                                            |
| <b>Legal Values</b>    | String of up to 223 characters                                                                                                                                                                                          |
|                        |  <b>NOTE:</b> The legal value range may be smaller than the maximum size of 223, based on the vendor configuration of the NIC cards. |
| <b>Default Value</b>   | Not Applicable                                                                                                                                                                                                          |
| <b>Write Privilege</b> | Server Control                                                                                                                                                                                                          |

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

## NIC.IscsiSecondTgtParams.SecondTgtTcpPort (Read or Write)

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the TCP Port number of the second iSCSI target.                      |
| <b>Legal Values</b>     | Values: 1–65535                                                                |
| <b>Default Value</b>    | Not Applicable                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                              |
| <b>Dependency</b>       | Not available if <code>VndrConfigGroup.iSCSIBootSupport</code> is unavailable. |

## NIC.NICConfig

To configure the `NICConfig` properties, use the objects in this group.

### NIC.NICConfig.BannerMessageTimeout (Read or Write)

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Specifies the number of seconds that the OptionROM banner is displayed during POST. |
| <b>Legal Values</b>     | Not Applicable                                                                      |
| <b>Default Value</b>    | Not Applicable                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | Not Applicable                                                                      |

### NIC.NICConfig.BootOptionROM (Read or Write)

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Controls the enablement of legacy Boot Protocols in the Option ROM.             |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |

**Dependency** Not Applicable

### **NIC.NICConfig.BootRetryCnt (Read or Write)**

**Description** Specifies the number of attempts when the start is unsuccessful.

**Legal Values**

- NoRetry
- 1Retry
- 2Retries
- 3Retries
- 4Retries
- 5Retries
- 6Retries
- IndefiniteRetries

**Default Value** NoRetry

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### **NIC.NICConfig.BootStrapType (Read or Write)**

**Description** Specifies the boot strap method used to start the operating system.

**Legal Values**

- AutoDetect
- BBS
- Int18h
- Int19h

**Default Value** AutoDetect

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** Not Applicable

### **NIC.NICConfig.HideSetupPrompt (Read or Write)**

**Description** Enables or disables the option ROM setup prompt during Power On Self Test (POST).

**Legal Values**

- Enabled
- Disabled

**Default Value** Disabled

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### NIC.NICConfig.LegacyBootProto (Read or Write)

**Description** Select a non-UEFI network start protocol.

**Legal Values**

- PXE
- iSCSI
- FCoE
- NONE
- iSCSIPrimary
- iSCSI Secondary

**Default Value** None

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### NIC.NICConfig.LnkSpeed (Read or Write)

**Description** Specifies the port speed used for the selected boot protocol.

**Legal Values**

- AutoNeg
- 10 Mbps Half
- 10 Mbps Full
- 100 Mbps Half
- 100 Mbps Full

**Default Value** Not Applicable

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## NIC.NICConfig.NumberVFAdvertised (Read or Write)

|                         |                                                                                              |
|-------------------------|----------------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the number of PCI Virtual Functions advertised on the port when SR-IOV is enabled. |
| <b>Legal Values</b>     | Not Applicable                                                                               |
| <b>Default Value</b>    | 0                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                            |
| <b>Dependency</b>       | Not Applicable                                                                               |

## NIC.NICConfig.VlanId (Read or Write)

|                         |                                           |
|-------------------------|-------------------------------------------|
| <b>Description</b>      | Specifies the ID (tag) for the VLAN Mode. |
| <b>Legal Values</b>     | Values: 1–4095                            |
| <b>Default Value</b>    | Not Applicable                            |
| <b>Write Privilege</b>  | Server Control                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise         |
| <b>Dependency</b>       | VlanMode must be enabled.                 |

## NIC.NICConfig.VlanMode (Read or Write)

|                         |                                                                                  |
|-------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>      | Virtual LAN mode enables use of a VLAN tag to use vendor-defined boot protocols. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul>     |
| <b>Default Value</b>    | Disabled                                                                         |
| <b>Write Privilege</b>  | Server Control                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                |
| <b>Dependency</b>       | None                                                                             |

## NIC.NICConfig.WakeOnLan (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables the server to be powered on using an in-band magic packet.           |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                               |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

## NIC.NICConfig.WakeOnLanLnkSpeed (Read or Write)

|                         |                                                                                                                                                         |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Select the port speed used for Wake on LAN mode.                                                                                                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• AutoNeg</li><li>• 10 Mbps Half</li><li>• 10 Mbps Full</li><li>• 100 Mbps Half</li><li>• 100 Mbps Full</li></ul> |
| <b>Default Value</b>    | AutoNeg                                                                                                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                                    |

## NIC.NICPartitioningConfig

To configure the `NICPartitioning` properties, use the objects in this group.

### NIC.NICPartitioningConfig.NicPartitioning (Read or Write)

|                      |                                                                              |
|----------------------|------------------------------------------------------------------------------|
| <b>Description</b>   | Enables or disables NIC partitioning for all device ports.                   |
| <b>Legal Values</b>  | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b> | Disabled                                                                     |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **NIC.NICPartitioningConfig.PartitionState (Read Only)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the current enablement state of the partition.                        |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Enabled                                                                         |
| <b>Write Privilege</b>  | Not Applicable                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | Not Applicable                                                                  |

### **NIC.NICPartitioningConfig.ConfigureFormn (Read Only)**

|                         |                                                                          |
|-------------------------|--------------------------------------------------------------------------|
| <b>Description</b>      | Configures the partition functionality and display the assigned address. |
| <b>Legal Values</b>     | Not Applicable                                                           |
| <b>Default Value</b>    | Not Applicable                                                           |
| <b>Write Privilege</b>  | Not Applicable                                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                        |
| <b>Dependency</b>       | Not Applicable                                                           |

### **NIC.NICPartitioningConfig.NumberPCIEFunctionsEnabled (Read Only)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the number of physical PCIe functions currently enabled on this port. |
| <b>Legal Values</b>     | Values: 1–65535                                                                 |
| <b>Default Value</b>    | Not Applicable                                                                  |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

## NIC.NICPartitioningConfig.NumberPCIEFunctionsSupported (Read Only)

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the number of physical PCIe functions supported on this port. |
| <b>Legal Values</b>     | Values: 1–65535                                                         |
| <b>Default Value</b>    | Not Applicable                                                          |
| <b>Write Privilege</b>  | Server Control                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | None                                                                    |

## NIC.VndrConfigGroup

The objects in this group manage the vendor configuration settings.

### NIC.VndrConfigGroup.BusDeviceFunction (Read Only)

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Description</b>      | Indicates the BIOS assigned PCIe. |
| <b>Legal Values</b>     | String of up to 8 characters      |
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### NIC.VndrConfigGroup.BlnkLeds (Read or Write)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Identifies the physical network port by blinking the associated LED. |
| <b>Legal Values</b>     | Values: 0–15                                                         |
| <b>Default Value</b>    | 15                                                                   |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | None                                                                 |

### NIC.VndrConfigGroup.ChipMdl (Read Only)

|                         |                                      |
|-------------------------|--------------------------------------|
| <b>Description</b>      | Indicates the chip type or revision. |
| <b>Legal Values</b>     | None                                 |
| <b>Default Value</b>    | Not Applicable                       |
| <b>Write Privilege</b>  | Server Control                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise    |
| <b>Dependency</b>       | None                                 |

### NIC.VndrConfigGroup.EnergyEfficientEthernet (Read Only)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Energy Efficient Ethernet capability is supported. |
| <b>Legal Values</b>     | None                                                                 |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Server Control                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | None                                                                 |

### NIC.VndrConfigGroup.DCBXSupport (Read Only)

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Data Center Bridging (DCB) capability is supported. |
| <b>Legal Values</b>     | None                                                                  |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Server Control                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

### NIC.VndrConfigGroup.DeviceName (Read Only)

|                     |                                      |
|---------------------|--------------------------------------|
| <b>Description</b>  | Official product name of the device. |
| <b>Legal Values</b> | Not Applicable                       |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Not Applicable                    |

### **NIC.VndrConfigGroup.FCoEBootSupport (Read Only)**

|                         |                                                                             |
|-------------------------|-----------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Fibre Channel over Ethernet Boot capability is supported. |
| <b>Legal Values</b>     | None                                                                        |
| <b>Default Value</b>    | Not Applicable                                                              |
| <b>Write Privilege</b>  | Server Control                                                              |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                           |
| <b>Dependency</b>       | None                                                                        |

### **NIC.VndrConfigGroup.FCoEOffloadMode (Read or Write)**

|                         |                                                                                 |
|-------------------------|---------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables FCoE personality on the port.                               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul> |
| <b>Default Value</b>    | Disabled                                                                        |
| <b>Write Privilege</b>  | Server Control                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                               |
| <b>Dependency</b>       | None                                                                            |

### **NIC.VndrConfigGroup.FCoEOffloadSupport (Read Only)**

|                         |                                                         |
|-------------------------|---------------------------------------------------------|
| <b>Description</b>      | Indicates whether FCoE Offload capability is supported. |
| <b>Legal Values</b>     | None                                                    |
| <b>Default Value</b>    | Not Applicable                                          |
| <b>Write Privilege</b>  | Server Control                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                       |

**Dependency**    None

### **NIC.VndrConfigGroup.FeatureLicensingSupport (Read Only)**

**Description**    Indicates whether Dell Feature Licensing capability is supported.

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**    Server Control

**License  
Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.VndrConfigGroup.FIPMacAddr (Read Only)**

**Description**    Permanent FIP-MAC address for FCoE assigned during manufacturing.

**Legal Values**    String of up to 17 characters

**Default Value**    Not Applicable

**Write  
Privilege**    Not Applicable

**License  
Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.VndrConfigGroup.FlexAddressing (Read Only)**

**Description**    Indicates whether Dell FlexAddressing feature is supported.

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**    Not Applicable

**License  
Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

### NIC.VndrConfigGroup.iSCSIBootSupport (Read Only)

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| <b>Description</b>      | Indicates whether iSCSI Boot capability is supported. |
| <b>Legal Values</b>     | None                                                  |
| <b>Default Value</b>    | Not Applicable                                        |
| <b>Write Privilege</b>  | Not Applicable                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                     |
| <b>Dependency</b>       | None                                                  |

### NIC.VndrConfigGroup.ISCSIMacAddr (Read Only)

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the permanent MAC address for iSCSI offload assigned during manufacturing. |
| <b>Legal Values</b>     | None                                                                                 |
| <b>Default Value</b>    | Not Applicable                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                    |
| <b>Dependency</b>       | None                                                                                 |

### NIC.VndrConfigGroup.iSCSIOffloadMode (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables iSCSI offload personality on the port.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Enabled</li><li>• Disabled</li></ul> |
| <b>Default Value</b>    | Disabled                                                                     |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                            |
| <b>Dependency</b>       | None                                                                         |

### NIC.VndrConfigGroup.iSCSIOffloadSupport (Read Only)

|                         |                                                          |
|-------------------------|----------------------------------------------------------|
| <b>Description</b>      | Indicates whether iSCSI Offload capability is supported. |
| <b>Legal Values</b>     | None                                                     |
| <b>Default Value</b>    | Not Applicable                                           |
| <b>Write Privilege</b>  | Not Applicable                                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                        |
| <b>Dependency</b>       | None                                                     |

### NIC.VndrConfigGroup.LinkStatus (Read Only)

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| <b>Description</b>      | Indicates the physical network link status that reports the controller. |
| <b>Legal Values</b>     | None                                                                    |
| <b>Default Value</b>    | Not Applicable                                                          |
| <b>Write Privilege</b>  | Not Applicable                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                       |
| <b>Dependency</b>       | None                                                                    |

### NIC.VndrConfigGroup.MacAddr (Read Only)

|                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| <b>Description</b>      | Indicates the permanent MAC address assigned during manufacturing. |
| <b>Legal Values</b>     | String of up to 17 characters                                      |
| <b>Default Value</b>    | Not Applicable                                                     |
| <b>Write Privilege</b>  | Not Applicable                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                  |
| <b>Dependency</b>       | None                                                               |

### NIC.VndrConfigGroup.NicMode (Read or Write)

|                     |                                                           |
|---------------------|-----------------------------------------------------------|
| <b>Description</b>  | Enables or disables NIC personality on the port.          |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• Enabled</li></ul> |

- Disabled

**Default Value** Enabled

**Write Privilege** Server Control

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **NIC.VndrConfigGroup.NicPartitioningSupport (Read Only)**

**Description** Indicates whether NIC Partitioning capability is supported.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **NIC.VndrConfigGroup.NWManagementPassThrough (Read Only)**

**Description** Indicates whether the Network Management Pass Through capability is supported.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Not Applicable

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **NIC.VndrConfigGroup.OnChipThermalSensor (Read Only)**

**Description** Indicates whether an on-chip thermal sensor is available.

**Legal Values** None

**Default Value** Not Applicable

**Write Privilege** Not Applicable

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **NIC.VndrConfigGroup.OSBMCManagementPassThrough (Read Only)**

|                         |                                                                           |
|-------------------------|---------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether OS-BMC Management Pass Through capability is supported. |
| <b>Legal Values</b>     | None                                                                      |
| <b>Default Value</b>    | Not Applicable                                                            |
| <b>Write Privilege</b>  | Not Applicable                                                            |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                         |
| <b>Dependency</b>       | None                                                                      |

### **NIC.VndrConfigGroup.PCIDeviceID (Read Only)**

|                         |                                          |
|-------------------------|------------------------------------------|
| <b>Description</b>      | Indicates the PCI Device ID of the port. |
| <b>Legal Values</b>     | String of up to 4 characters             |
| <b>Default Value</b>    | Not Applicable                           |
| <b>Write Privilege</b>  | Not Applicable                           |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise        |
| <b>Dependency</b>       | None                                     |

### **NIC.VndrConfigGroup.PXEBootSupport (Read Only)**

|                         |                                                     |
|-------------------------|-----------------------------------------------------|
| <b>Description</b>      | Indicates whether PXE Boot capability is supported. |
| <b>Legal Values</b>     | None                                                |
| <b>Default Value</b>    | Not Applicable                                      |
| <b>Write Privilege</b>  | Not Applicable                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                   |
| <b>Dependency</b>       | None                                                |

### **NIC.VndrConfigGroup.RemotePHY (Read Only)**

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>Description</b>      | Indicates whether RemotePHY capability is supported. |
| <b>Legal Values</b>     | None                                                 |
| <b>Default Value</b>    | Not Applicable                                       |
| <b>Write Privilege</b>  | Not Applicable                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                    |
| <b>Dependency</b>       | None                                                 |

### **NIC.VndrConfigGroup.RXFlowControl (Read Only)**

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Receive (RX) Flow control capability is supported. |
| <b>Legal Values</b>     | None                                                                 |
| <b>Default Value</b>    | Not Applicable                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | None                                                                 |

### **NIC.VndrConfigGroup.TOESupport (Read Only)**

|                         |                                                                  |
|-------------------------|------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether TCP/IP Offload Engine capability is supported. |
| <b>Legal Values</b>     | None                                                             |
| <b>Default Value</b>    | Not Applicable                                                   |
| <b>Write Privilege</b>  | Not Applicable                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                |
| <b>Dependency</b>       | None                                                             |

### **NIC.VndrConfigGroup.TXBandwidthControlMaximum (Read Only)**

|                     |                                                                                    |
|---------------------|------------------------------------------------------------------------------------|
| <b>Description</b>  | Indicates whether Transmit (TX) Bandwidth Control Maximum capability is supported. |
| <b>Legal Values</b> | None                                                                               |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### **NIC.VndrConfigGroup.TXBandwidthControlMinimum (Read Only)**

|                         |                                                                                    |
|-------------------------|------------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Transmit (TX) Bandwidth Control Minimum capability is supported. |
| <b>Legal Values</b>     | None                                                                               |
| <b>Default Value</b>    | Not Applicable                                                                     |
| <b>Write Privilege</b>  | Not Applicable                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                  |
| <b>Dependency</b>       | None                                                                               |

### **NIC.VndrConfigGroup.TXFlowControl (Read Only)**

|                         |                                                                       |
|-------------------------|-----------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether Transmit (TX) Flow Control capability is supported. |
| <b>Legal Values</b>     | None                                                                  |
| <b>Default Value</b>    | Not Applicable                                                        |
| <b>Write Privilege</b>  | Not Applicable                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                     |
| <b>Dependency</b>       | None                                                                  |

### **NIC.VndrConfigGroup.VirtFIPMacAddr (Read or Write)**

|                         |                                                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Programmatically assignable FIP-MAC address for FCoE. Programmatic write for support of I/O Identity feature. |
| <b>Legal Values</b>     | String of up to 17 characters                                                                                 |
| <b>Default Value</b>    | Not Applicable                                                                                                |
| <b>Write Privilege</b>  | Server Control                                                                                                |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                             |

**Dependency**    None

### **NIC.VndrConfigGroup.VirtIscsiMacAddr (Read or Write)**

**Description**    Programmatically assignable MAC address for iSCSI offload. Programmatic write for support of I/O Identity feature.

**Legal Values**    String of up to 17 characters

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.VndrConfigGroup.VirtMacAddr (Read or Write)**

**Description**    Programmatically assignable MAC address. Programmatic write for support of I/O Identity feature.

**Legal Values**    String of up to 17 characters

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.VndrConfigGroup.VirtualLinkControl (Read or Write)**

**Description**    Indicates whether Virtual Link Control capability is supported.

**Legal Values**    None

**Default Value**    Not Applicable

**Write  
Privilege**        Server Control

**License  
Required**        iDRAC Express or iDRAC Enterprise

**Dependency**    None

### **NIC.VndrConfigGroup.VirtWWN (Read or Write)**

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Programmatically assignable Fibre Channel World Wide Node Name identifier for FCoE. |
| <b>Legal Values</b>     | String of up to 23 characters                                                       |
| <b>Default Value</b>    | Not Applicable                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

### **NIC.VndrConfigGroup.VirtWWPN (Read or Write)**

|                         |                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------|
| <b>Description</b>      | Programmatically assignable Fibre Channel World Wide Port Name identifier for FCoE. |
| <b>Legal Values</b>     | String of up to 23 characters                                                       |
| <b>Default Value</b>    | Not Applicable                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                   |
| <b>Dependency</b>       | None                                                                                |

### **NIC.VndrConfigGroup.WWN (Read Only)**

|                         |                                                         |
|-------------------------|---------------------------------------------------------|
| <b>Description</b>      | Fibre Channel World Wide Node Name identifier for FCoE. |
| <b>Legal Values</b>     | String of up to 23 characters                           |
| <b>Default Value</b>    | Not Applicable                                          |
| <b>Write Privilege</b>  | Not Applicable                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                       |
| <b>Dependency</b>       | None                                                    |

### **NIC.VndrConfigGroup.WWPN (Read Only)**

|                     |                                                         |
|---------------------|---------------------------------------------------------|
| <b>Description</b>  | Fibre Channel World Wide Port Name identifier for FCoE. |
| <b>Legal Values</b> | String of up to 23 characters                           |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## Storage.Controller

The objects in this group manage storage controller attributes. This group is indexed.

The following sections provide information about the objects in this group.

### Storage.Controller.BackgroundInitializationRate (Read or Write)

|                         |                                                                                                                                                                                |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The Background Initialization (BGI) rate is the percentage of the system's resources dedicated to perform the background initialization of a virtual disk after it is created. |
| <b>Legal Values</b>     | Values: 0–100                                                                                                                                                                  |
| <b>Default value</b>    | 100                                                                                                                                                                            |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                              |
| <b>Dependency</b>       | None                                                                                                                                                                           |

### Storage.Controller.BatteryLearnMode (Read Only)

|                         |                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Battery Learn Mode controls a RAID controller's Battery Learn Cycle.                                                       |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Automatic</li> <li>• Warn</li> <li>• Disabled</li> <li>• Not Supported</li> </ul> |
| <b>Default value</b>    | None                                                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                                             |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                          |
| <b>Dependency</b>       | A battery must be present on the controller.                                                                               |

## Storage.Controller.CheckConsistencyMode (Read or Write)

|                         |                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Check Consistency feature is used to verify the accuracy of the redundant (parity) information. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Normal</li><li>• Stop On Error</li></ul>                |
| <b>Default value</b>    | Normal                                                                                          |
| <b>Write Privilege</b>  | Server Control                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                               |
| <b>Dependency</b>       | None                                                                                            |

## Storage.Controller.CheckConsistencyRate (Read or Write)

|                         |                                                                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The Check Consistency rate is the percentage of the system's resources dedicated to performing a check consistency on a redundant virtual disk. |
| <b>Legal Values</b>     | Values: 0–100                                                                                                                                   |
| <b>Default value</b>    | 100                                                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                               |
| <b>Dependency</b>       | None                                                                                                                                            |

## Storage.Controller.ControllerBootMode (Read or Write)

|                         |                                                                                                                                                                     |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This property indicates the Controller Boot Mode setting on the controller.                                                                                         |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• User Mode</li><li>• Continue Boot On Error</li><li>• Headless Mode Continue On Error</li><li>• Headless Safe Mode</li></ul> |
| <b>Default Value</b>    | Not Applicable                                                                                                                                                      |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                   |
| <b>Dependency</b>       | None                                                                                                                                                                |

## Storage.Controller.CopybackMode (Read or Write)

|                         |                                                                                                                                                |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This attribute represents the mode of restoring the configuration of a virtual disk when a failed physical disk drive is replaced in an array. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• On</li><li>• ON with SMART</li><li>• Off</li></ul>                                                     |
| <b>Default value</b>    | On                                                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                              |
| <b>Dependency</b>       | None                                                                                                                                           |

## Storage.Controller.CurrentControllerMode (Read Only)

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>Description</b>      | Indicates the current personality mode of controllers.               |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• RAID</li><li>• HBA</li></ul> |
| <b>Default value</b>    | RAID                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                    |
| <b>Dependency</b>       | None                                                                 |

## Storage.Controller.EnhancedAutoImportForeignConfig (Read or Write)

|                         |                                                                                                      |
|-------------------------|------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This property indicates the Enhanced Auto Import of Foreign Configuration setting on the controller. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Disabled</li><li>• Enabled</li></ul>                         |
| <b>Default Value</b>    | Not Applicable                                                                                       |
| <b>Write Privilege</b>  | Server Control                                                                                       |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                    |
| <b>Dependency</b>       | None                                                                                                 |

## Storage.Controller.PatrolReadMode (Read or Write)

|                         |                                                                                                                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Patrol Read is a feature for identifying disk errors to avoid disk failures and data loss or corruption. The Patrol Read only runs on the disks that are used in a virtual disk or that are hot-spare. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Automatic</li><li>• Manual</li><li>• Disabled</li></ul>                                                                                                        |
| <b>Default value</b>    | Automatic                                                                                                                                                                                              |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                      |
| <b>Dependency</b>       | None                                                                                                                                                                                                   |

## Storage.Controller.PatrolReadRate (Read or Write)

|                         |                                                                                                    |
|-------------------------|----------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The Patrol Read Rate is the percentage of the system's resources dedicated to perform Patrol Read. |
| <b>Legal Values</b>     | Values: 0–100                                                                                      |
| <b>Default value</b>    | 30                                                                                                 |
| <b>Write Privilege</b>  | Server Control                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                  |
| <b>Dependency</b>       | None                                                                                               |

## Storage.Controller.PatrolReadUnconfiguredArea (Read or Write)

|                         |                                                                              |
|-------------------------|------------------------------------------------------------------------------|
| <b>Description</b>      | Enables or disables the patrol read in unconfigured areas.                   |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Disabled</li><li>• Enabled</li></ul> |
| <b>Default value</b>    | Disabled                                                                     |
| <b>Write Privilege</b>  | Server Control                                                               |
| <b>License Required</b> | RACADM                                                                       |
| <b>Dependency</b>       | None                                                                         |

## Storage.Controller.PossibleloadBalancedMode (Read or Write)

|                         |                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This attribute represents the ability to automatically use both controller ports connected to the same enclosure to route I/O requests. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Automatic</li><li>• Disabled</li></ul>                                                          |
| <b>Default value</b>    | Automatic                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                          |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                       |
| <b>Dependency</b>       | None                                                                                                                                    |

## Storage.Controller.RebuildRate (Read or Write)

|                         |                                                                                                                                 |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The Rebuild Rate is the percentage of the system's resources dedicated to rebuilding a failed disk when a rebuild is necessary. |
| <b>Legal Values</b>     | Values: 0–100                                                                                                                   |
| <b>Default value</b>    | 100                                                                                                                             |
| <b>Write Privilege</b>  | Server Control                                                                                                                  |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                               |
| <b>Dependency</b>       | None                                                                                                                            |

## Storage.Controller.ReconstructRate (Read or Write)

|                         |                                                                                                                                                                                                                       |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | The Reconstruct Rate is the percentage of the system's resources dedicated to reconstructing a disk group after adding a physical disk drive or changing the RAID level of a virtual disk residing on the disk group. |
| <b>Legal Values</b>     | Values: 0–100                                                                                                                                                                                                         |
| <b>Default value</b>    | 100                                                                                                                                                                                                                   |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                     |
| <b>Dependency</b>       | None                                                                                                                                                                                                                  |

## Storage.Controller.RequestedControllerMode (Read or Write)

|                     |                                                                       |
|---------------------|-----------------------------------------------------------------------|
| <b>Description</b>  | Modifies the controller mode to RAID or HBA.                          |
| <b>Legal Values</b> | <ul style="list-style-type: none"><li>• None</li><li>• RAID</li></ul> |

- HBA
- Not Supported

**Default value** Not Applicable

**Write Privilege** Server Control

**License Required** RACADM

**Dependency** None

### **Storage.Controller.SupportControllerBootMode (Read Only)**

**Description** This is read only attribute. This property indicates if this controller supports setting of controller boot mode.

**Legal Values**

- Supported
- Not Supported

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **Storage.Controller.SupportEnhancedAutoForeignImport (Read Only)**

**Description** This is readonly attribute. This property indicates if this controller supports enhanced auto import of foreign configurations.

**Legal Values**

- Supported
- Not Supported

**Default Value** Not Applicable

**Write Privilege** Configure iDRAC

**License Required** iDRAC Express or iDRAC Enterprise

**Dependency** None

### **Storage.Controller.SupportRAID10UnevenSpans (Read Only)**

**Description** This is readonly attribute. This property indicates if this controller supports uneven spans for RAID 10.

**Legal Values**

- Supported
- Not Supported

**Default value**

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Write Privilege</b>  | Configure iDRAC                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

## Storage.Controller.T10PICapability (Read Only)

|                         |                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b>      | This is readonly attribute. This property indicates if this controller supports T10 PI. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Incapable</li> <li>• Capable</li> </ul>        |
| <b>Default Value</b>    | Not Applicable                                                                          |
| <b>Write Privilege</b>  | Configure iDRAC                                                                         |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                       |
| <b>Dependency</b>       | None                                                                                    |

## Storage.enclosure

The objects in this group manage the storage enclosure attributes. This group is indexed.

### Storage.enclosure.BackplaneCurrentMode (Read Only)

|                         |                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Displays the current mode of the backplane.                                                                    |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• UnifiedMode</li> <li>• SplitMode</li> <li>• Not applicable</li> </ul> |
| <b>Default Value</b>    | UnifiedMode                                                                                                    |
| <b>Write Privilege</b>  | Not Applicable                                                                                                 |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                              |
| <b>Dependency</b>       | Backplane must support.                                                                                        |

### Storage.enclosure.BackplaneRequestedMode (Read or Write)

|                     |                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Configures the backplane mode.                                                                                                 |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• UnifiedMode</li> <li>• SplitMode</li> <li>• None</li> <li>• Not Applicable</li> </ul> |

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default Value</b>    | None                              |
| <b>Write Privilege</b>  | Server Control                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | Backplane must support.           |

## Storage.enclosure.BackplaneType (Read Only)

|                         |                                                                                  |
|-------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>      | Indicates whether or not the backplane is shared.                                |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Shared</li> <li>• Non-Shared</li> </ul> |
| <b>Default Value</b>    | Non-Shared                                                                       |
| <b>Write Privilege</b>  | Not Applicable                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                |
| <b>Dependency</b>       | Backplane must support.                                                          |

## Storage.PhysicalDisk

The objects in this group manage storage physical disk drive attributes. This group is indexed.

The following section provides information about the objects in this group.

### Storage.PhysicalDisk.BlockSizeInBytes (Read Only)

|                         |                                                                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This is readonly attribute. This property indicates the logical block size of the physical drive that this virtual disk belongs to. |
| <b>Legal Values</b>     | Values: 512 or 4096                                                                                                                 |
| <b>Default value</b>    | Not Applicable                                                                                                                      |
| <b>Write Privilege</b>  | Not Applicable                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                   |
| <b>Dependency</b>       | None                                                                                                                                |

### Storage.PhysicalDisk.MaxCapableSpeed (Read Only)

|                     |                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | This is readonly attribute. The property represents the data transfer speed that the disk is capable of. |
| <b>Legal Values</b> | <ul style="list-style-type: none"> <li>• Unknown</li> <li>• 1.5GBPS</li> <li>• 3GBPS</li> </ul>          |

- 6GBPS
- 12GBPS

|                         |                                   |
|-------------------------|-----------------------------------|
| <b>Default value</b>    | Not Applicable                    |
| <b>Write Privilege</b>  | Not Applicable                    |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise |
| <b>Dependency</b>       | None                              |

### Storage.PhysicalDisk.RaidNominalMediumRotationRate (Read Only)

|                         |                                                                                                       |
|-------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This is readonly attribute and represents the nominal medium rotation speed of a physical disk drive. |
| <b>Legal Values</b>     | Values: 2–4294967295                                                                                  |
| <b>Default value</b>    | Not Applicable                                                                                        |
| <b>Write Privilege</b>  | Not Applicable                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                     |
| <b>Dependency</b>       | None                                                                                                  |

### Storage.PhysicalDisk.T10PICapability (Read Only)

|                         |                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This is readonly attribute. This property indicates if this physical disk drive supports T10 PI. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"> <li>• Incapable</li> <li>• Capable</li> </ul>                 |
| <b>Default value</b>    | Not Applicable                                                                                   |
| <b>Write Privilege</b>  | Not Applicable                                                                                   |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                |
| <b>Dependency</b>       | None                                                                                             |

## Storage.VirtualDisk

The objects in this group manage storage virtual disk attributes. This group is indexed.

The following section provides information about the objects in this group.

## Storage.VirtualDisk.BlockSizeInBytes (Read Only)

|                         |                                                                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | This is readonly attribute. This property indicates the logical block size of the physical drive that this virtual disk belongs to. |
| <b>Legal Values</b>     | Values: 512 or 4096                                                                                                                 |
| <b>Default value</b>    | Not Applicable                                                                                                                      |
| <b>Write Privilege</b>  | Not Applicable                                                                                                                      |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                   |
| <b>Dependency</b>       | None                                                                                                                                |

## Storage.VirtualDisk.DiskCachePolicy (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | Set the physical disk drive caching policy of all members of a Virtual Disk by enabling the Disk Cache Policy. When this feature is enabled, the physical disk drive writes data to the physical disk drive cache before writing it to the physical disk drive. Because it is faster to write data to the cache than to a disk, enabling this feature can improve system performance. |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• Default</li><li>• Enabled</li><li>• Disabled</li></ul>                                                                                                                                                                                                                                                                                        |
| <b>Default value</b>    | Default                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                                                                        |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                                                                     |
| <b>Dependency</b>       | None                                                                                                                                                                                                                                                                                                                                                                                  |

## Storage.VirtualDisk.ReadPolicy (Read or Write)

|                         |                                                                                                                                                                                                                                                                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>      | <p>The read policies indicate whether or not the controller must read sequential sectors of the virtual disk when seeking data.</p> <p> <b>NOTE:</b> Storage.VirtualDisk.ReadPolicy attribute is read-only for few PERCs—for example, H330.</p> |
| <b>Legal Values</b>     | <ul style="list-style-type: none"><li>• No Read Ahead</li><li>• Read Ahead</li><li>• Adaptive Read Ahead</li></ul>                                                                                                                                                                                                                 |
| <b>Default value</b>    | Adaptive                                                                                                                                                                                                                                                                                                                           |
| <b>Write Privilege</b>  | Server Control                                                                                                                                                                                                                                                                                                                     |
| <b>License Required</b> | iDRAC Express or iDRAC Enterprise                                                                                                                                                                                                                                                                                                  |

**Dependency**    None

## Storage.VirtualDisk.T10PIStatus (Read or Write)

**Description**    This property indicates if T10 PI is enabled or disabled on this virtual disk.



**NOTE:** Can be disabled only if the current value for this object is enabled.

**Legal Values**

- 0 — Disabled
- 1 — Enabled

**Default value**    0 — Disabled

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## Storage.VirtualDisk.WritePolicy (Read or Write)

**Description**    The write policies specify whether or not the controller sends a write-request completion signal as soon as the data is in the cache or after it has been written to disk.



**NOTE:** Storage.VirtualDisk.WritePolicy attribute is read-only for few PERCs—for example, H330.

**Legal Values**

- Write Through
- Write Back
- Force Write Back

**Default value**    WriteBack

**Write Privilege**    Server Control

**License Required**    iDRAC Express or iDRAC Enterprise

**Dependency**    None

## Deprecated and New Subcommands

The following table provides the list of deprecated subcommands and equivalent new subcommands.

| Deprecated Subcommands | New Subcommands |
|------------------------|-----------------|
| getconfig              | get             |
| config                 | set             |
| getuscversion          | getversion      |
| raid                   | storage         |



# Legacy and New Groups and Objects

The following table provides the list of legacy groups and objects and equivalent groups and objects.

| Legacy Groups and Objects | New Groups and Objects       |
|---------------------------|------------------------------|
| <b>idRacInfo</b>          | <b>iDRAC.Info</b>            |
| idRacType                 | Type                         |
| idRacProductInfo          | Product                      |
| idRacDescriptionInfo      | Description                  |
| idRacVersionInfo          | Version                      |
| idRacBuildInfo            | Build                        |
| idRacName                 | Name                         |
| <b>cfgActiveDirectory</b> | <b>iDRAC.ActiveDirectory</b> |
| cfgADEnable               | Enable                       |
| cfgADRacDomain            | RacDomain                    |
| cfgADRacName              | RacName                      |
| cfgADAuthTimeout          | AuthTimeout                  |
| cfgADType                 | Schema                       |
| cfgADDomainController1    | DomainController1            |
| cfgADDomainController2    | DomainController2            |
| cfgADDomainController3    | DomainController3            |
| cfgADGlobalCatalog1       | GlobalCatalog1               |
| cfgADGlobalCatalog2       | GlobalCatalog2               |
| cfgADGlobalCatalog3       | GlobalCatalog3               |
| cfgADCertValidationEnable | CertValidationEnable         |
| cfgADSSOEnable            | SSOEnable                    |

| Legacy Groups and Objects    | New Groups and Objects |
|------------------------------|------------------------|
| cfgADDcSRVLookupEnable       | DCLookupEnable         |
| cfgADDcSRVLookupbyUserdomain | DCLookupByUserDomain   |
| cfgADDcSRVLookupDomainName   | DCLookupDomainName     |
| cfgADGcSRVLookupEnable       | GCLookupEnable         |
| cfgADGcRootDomain            | GCRootDomain           |
| <b>cfgLanNetworking</b>      | <b>iDRAC.Nic</b>       |
| cfgNicEnable                 | Enable                 |
| cfgNicMacAddress             | MACAddress             |
| cfgDNSRacName                | DNSRacName             |
| cfgNicSelection              | Selection              |
| cfgNicFailoverNetwork        | Failover               |
| cfgDNSDomainName             | DNSDomainName          |
| cfgDNSDomainNameFromDHCP     | DNSRacName             |
| cfgDNSRegisterRac            | DNSRegister            |
| cfgNicVlanEnable             | VlanEnable             |
| cfgNicVlanID                 | VlanID                 |
| cfgNicVlanPriority           | VlanPriority           |
|                              | <b>iDRAC.IPv4</b>      |
| cfgNicIPv4Enable             | Enable                 |
| cfgNicIpAddress              | Address                |
| cfgNicNetmask                | NetMask                |
| cfgNicGateway                | Gateway                |
| cfgNicUseDhcp                | DHCPEnable             |
| cfgDNSServersFromDHCP        | DNSFromDHCP            |
| cfgDNSServer1                | DNS1                   |

| Legacy Groups and Objects   | New Groups and Objects |
|-----------------------------|------------------------|
| cfgDNSServer2               | DNS2                   |
| <b>cfgIPv6LanNetworking</b> | <b>iDRAC.IPv6</b>      |
| cfgIPv6Enable               | Enable                 |
| cfgIPv6Address1             | Address1               |
| cfgIPv6Gateway              | Gateway                |
| cfgIPv6PrefixLength         | PrefixLength           |
| cfgIPv6AutoConfig           | AutoConfig             |
| cfgIPv6LinkLocalAddress     | LinkLocalAddress       |
| cfgIPv6Address2             | Address2               |
| cfgIPv6Address3             | Address3               |
| cfgIPv6Address4             | Address4               |
| cfgIPv6Address5             | Address5               |
| cfgIPv6Address6             | Address6               |
| cfgIPv6Address7             | Address7               |
| cfgIPv6Address8             | Address8               |
| cfgIPv6Address9             | Address9               |
| cfgIPv6Address10            | Address10              |
| cfgIPv6Address11            | Address11              |
| cfgIPv6Address12            | Address12              |
| cfgIPv6Address13            | Address13              |
| cfgIPv6Address14            | Address14              |
| cfgIPv6Address15            | Address15              |
| cfgIPv6DNSServersFromDHCP6  | DNSFromDHCP6           |
| cfgIPv6DNSServer1           | DNS1                   |
| cfgIPv6DNSServer2           | DNS2                   |

| Legacy Groups and Objects              | New Groups and Objects |
|----------------------------------------|------------------------|
| <b>cfgServerPower</b>                  | <b>System.Power</b>    |
| cfgServerPowerStatus                   | Status                 |
| cfgServerActualPowerConsumption        | Realtime.Power         |
| cfgServerMinPowerCapacity              | Cap.MinThreshold       |
| cfgServerMaxPowerCapacity              | Cap.MaxThreshold       |
| cfgServerPeakPowerConsumption          | Max.Power              |
| cfgServerPeakPowerConsumptionTimestamp | Max.Power.Timestamp    |
| cfgServerPowerConsumptionClear         | Max.Power.Clear        |
| cfgServerPowerCapWatts                 | Cap.Watts              |
| cfgServerPowerCapBtuHr                 | Cap.BtuHr              |
| cfgServerPowerCapPercent               | Cap.Percent            |
| cfgServerPowerCapEnable                | Cap.Enable             |
| cfgServerPowerLastHourAvg              | Avg.LastHour           |
| cfgServerPowerLastDayAvg               | Avg.LastDay            |
| cfgServerPowerLastWeekAvg              | Avg.LastWeek           |
| cfgServerPowerLastHourMinPower         | Min.LastHour           |
| cfgServerPowerLastHourMinTime          | Min.LastHour.Timestamp |
| cfgServerPowerLastHourMaxPower         | Max.LastHour           |
| cfgServerPowerLastHourMaxTime          | Max.LastHour.Timestamp |
| cfgServerPowerLastDayMinPower          | Min.LastDay            |
| cfgServerPowerLastDayMinTime           | Min.LastDay.Timestamp  |
| cfgServerPowerLastDayMaxPower          | Max.LastDay            |
| cfgServerPowerLastDayMaxTime           | Max.LastDay.Timestamp  |
| cfgServerPowerLastWeekMinPower         | Min.LastWeek           |
| cfgServerPowerLastWeekMinTime          | Min.LastWeek.Timestamp |

| Legacy Groups and Objects                     | New Groups and Objects           |
|-----------------------------------------------|----------------------------------|
| cfgServerPowerLastWeekMaxPower                | Max.LastWeek                     |
| cfgServerPowerLastWeekMaxTime                 | Max.LastWeek.Timestamp           |
| cfgServerPowerInstHeadroom                    | Realtime.Headroom                |
| cfgServerPowerPeakHeadroom                    | Max.Headroom                     |
| cfgServerActualAmperageConsumption            | Realtime.Amps                    |
| cfgServerPeakAmperage                         | Max.Amps                         |
| cfgServerPeakAmperageTimeStamp                | Max.Amps.Timestamp               |
| cfgServerCumulativePowerConsumption           | EnergyConsumption                |
| cfgServerCumulativePowerConsumptionTime Stamp | EnergyConsumption.StarttimeStamp |
| cfgServerCumulativePowerClear                 | EnergyConsumption.Clear          |
| cfgServerPowerPicEAllocation                  | PClePowerAllocation              |
| <b>cfgServerPowerSupply</b>                   | <b>System.Power.Supply</b>       |
| cfgServerPowerSupplyIndex                     | Index                            |
| cfgServerPowerSupplyInputStatus               | LineStatus                       |
| cfgServerPowerSupplyMaxInputPower             | MaxInputPower                    |
| cfgServerPowerSupplyMaxOutputPower            | MaxOutputPower                   |
| cfgServerPowerSupplyOnlineStatus              | Status                           |
| cfgServerPowerSupplyFwVer                     | FwVer                            |
| cfgServerPowerSupplyCurrentDraw               | CurrentDraw                      |
| cfgServerPowerSupplyType                      | Type                             |
| cfgServerPowerBusMonitoring                   | PMBusMonitoring                  |
| <b>cfgUserAdmin</b>                           | <b>iDRAC.Users</b>               |
| cfgUserAdminIndex                             | NA                               |
| cfgUserAdminUserName                          | UserName                         |
| cfgUserAdminPassword                          | Password                         |

| Legacy Groups and Objects       | New Groups and Objects  |
|---------------------------------|-------------------------|
| cfgUserAdminEnable              | Enable                  |
| cfgUserAdminPrivilege           | Privilege               |
| cfgUserAdminIpmiLanPrivilege    | IpmiLanPrivilege        |
| cfgUserAdminIpmiSerialPrivilege | IpmiSerialPrivilege     |
| cfgUserAdminSolEnable           | SolEnable               |
| <b>cfgRemoteHosts</b>           | <b>iDRAC.SysLog</b>     |
| cfgRhostsSyslogEnable           | SysLogEnable            |
| cfgRhostsSyslogServer1          | Server1                 |
| cfgRhostsSyslogServer2          | Server2                 |
| cfgRhostsSyslogServer3          | Server3                 |
| cfgRhostsSyslogPort             | Port                    |
|                                 | <b>iDRAC.Update</b>     |
| cfgRhostsFwUpdateTftpEnable     | FwUpdateTFTPEnable      |
| cfgRhostsFwUpdateIpAddr         | FwUpdateIPAddr          |
| cfgRhostsFwUpdatePath           | FwUpdatePath            |
|                                 | [iDRAC.RemoteHosts]     |
| cfgRhostsSntpServerIpAddr       | SMTPServerIPAddress     |
| <b>cfgEmailAlert</b>            | <b>iDRAC.EmailAlert</b> |
| cfgEmailAlertIndex              | NA                      |
| cfgEmailAlertEnable             | Enable                  |
| cfgEmailAlertAddress            | Address                 |
| cfgEmailAlertCustomMsg          | CustomMsg               |
| <b>cfgSessionManagement</b>     |                         |
| cfgSsnMgtTelnetIdleTimeout      | <b>iDRAC.Telnet</b>     |
|                                 | Enable                  |

| Legacy Groups and Objects     | New Groups and Objects      |
|-------------------------------|-----------------------------|
|                               | Port                        |
|                               | Timeout                     |
| cfgSsnMgtSshIdleTimeout       | <b>iDRAC.SSH</b>            |
|                               | Enable                      |
|                               | Port                        |
|                               | Timeout                     |
| cfgSsnMgtRacadmTimeout        | <b>iDRAC.Racadm</b>         |
|                               | Enable                      |
|                               | Timeout                     |
| cfgSsnMgtConsRedirMaxSessions | <b>iDRAC.VirtualConsole</b> |
|                               | EncryptEnable               |
|                               | Enable                      |
|                               | PluginType                  |
|                               | LocalVideo                  |
|                               | Port                        |
|                               | MaxSessions                 |
|                               | Timeout                     |
|                               | AccessPrivilege             |
| cfgSsnMgtWebserverTimeout     | <b>iDRAC.Webserver</b>      |
|                               | Enable                      |
|                               | HttpPort                    |
|                               | Timeout                     |
|                               | HttpsPort                   |
|                               | LowerEncryptionBitLength    |
| [cfgSerial]                   | <b>iDRAC.Serial</b>         |

| <b>Legacy Groups and Objects</b> | <b>New Groups and Objects</b>  |
|----------------------------------|--------------------------------|
| cfgSerialBaudRate                | BaudRate                       |
| cfgSerialConsoleEnable           | Enable                         |
| cfgSerialConsoleIdleTimeout      | IdleTimeout                    |
| cfgSerialConsoleNoAuth           | NoAuth                         |
| cfgSerialConsoleCommand          | Command                        |
| cfgSerialHistorySize             | HistorySize                    |
|                                  | <b>iDRAC.SerialRedirection</b> |
| cfgSerialConsoleQuitKey          | QuitKey                        |
| cfgSerialCom2RedirEnable         | Enable                         |
|                                  |                                |
| cfgSerialTelnetEnable            | <b>iDRAC.Telnet</b>            |
| cfgSerialSshEnable               | <b>iDRAC.SSH</b>               |
| [cfgOobSnmp]                     | <b>iDRAC.SNMP</b>              |
| cfgOobSnmpAgentEnable            | AgentEnable                    |
| cfgOobSnmpAgentCommunity         | AgentCommunity                 |
| [cfgNetTuning]                   |                                |
| cfgNetTuningNic100MB             | <b>iDRAC.Nic</b>               |
| cfgNetTuningNicFullDuplex        | <b>iDRAC.Nic</b>               |
| cfgNetTuningNicMtu               | <b>iDRAC.Nic</b>               |
| cfgNetTuningNicAutoneg           | <b>iDRAC.Nic</b>               |
| [cfgRacTuning]                   |                                |
| cfgRacTuneRemoteRacadmEnable=1   | <b>iDRAC.Racadm</b>            |
| cfgRacTuneWebserverEnable=1      | <b>iDRAC.Webserver</b>         |
| cfgRacTuneHttpPort=80            | <b>iDRAC.Webserver</b>         |
| cfgRacTuneHttpsPort=443          | <b>iDRAC.Webserver</b>         |

| <b>Legacy Groups and Objects</b>                    | <b>New Groups and Objects</b> |
|-----------------------------------------------------|-------------------------------|
| cfgRacTuneTelnetPort=23                             | <b>iDRAC.Telnet</b>           |
| cfgRacTuneSshPort=22                                | <b>iDRAC.SSH</b>              |
| cfgRacTuneConRedirEnable=1                          | <b>iDRAC.VirtualConsole</b>   |
| cfgRacTuneConRedirPort=5900                         | <b>iDRAC.VirtualConsole</b>   |
| cfgRacTuneConRedirEncryptEnable=1                   | <b>iDRAC.VirtualConsole</b>   |
| cfgRacTuneLocalServerVideo=1                        | <b>iDRAC.VirtualConsole</b>   |
|                                                     | <b>iDRAC.IPBlocking</b>       |
| cfgRacTuneIpRangeEnable=0                           | RangeEnable                   |
| cfgRacTuneIpRangeAddr=192.168.1.1                   | RangeAddr                     |
| cfgRacTuneIpRangeMask=255.255.255.0                 | RangeMask                     |
| cfgRacTuneIpBlkEnable=1                             | BlockEnable                   |
| cfgRacTuneIpBlkFailCount=3                          | FailCount                     |
| cfgRacTuneIpBlkFailWindow=60                        | FailWindow                    |
| cfgRacTuneIpBlkPenaltyTime=600                      | PenaltyTime                   |
|                                                     | <b>iDRAC.Time</b>             |
| cfgRacTuneTimezoneOffset=0                          | TimeZoneOffset                |
| cfgRacTuneDaylightOffset=0                          | DaylightOffset                |
| cfgRacTuneAsrEnable=1                               | TBD                           |
| cfgRacTunePlugintype=0                              | <b>iDRAC.VirtualConsole</b>   |
|                                                     | <b>iDRAC.LocalSecurity</b>    |
| cfgRacTuneCtrlEConfigDisable=0                      | PrebootConfig                 |
| cfgRacTuneLocalConfigDisable=0                      | LocalConfig                   |
| cfgRacTuneVirtualConsoleAuthorizeMultipleSessions=0 | <b>iDRAC.VirtualConsole</b>   |
| <b>ifcRacManagedNodeOs</b>                          | <b>System.ServerOS</b>        |
| ifcRacMnOsHostname                                  | HostName                      |

| Legacy Groups and Objects    | New Groups and Objects    |
|------------------------------|---------------------------|
| ifcRacMnOsOsName             | OSName                    |
| <b>cfgRacSecurity</b>        | <b>iDRAC.Security</b>     |
| cfgRacSecCsrKeySize          | CsrKeySize                |
| cfgRacSecCsrCommonName       | CsrCommonName             |
| cfgRacSecCsrOrganizationName | CsrOrganizationName       |
| cfgRacSecCsrOrganizationUnit | CsrOrganizationUnit       |
| cfgRacSecCsrLocalityName     | CsrLocalityName           |
| cfgRacSecCsrStateName        | CsrStateName              |
| cfgRacSecCsrCountryCode      | CsrCountryCode            |
| cfgRacSecCsrEmailAddr        | CsrEmailAddr              |
| <b>cfgRacVirtual</b>         | <b>iDRAC.VirtualMedia</b> |
| cfgVirMediaAttached          | Attached                  |
| cfgVirtualBootOnce           | BootOnce                  |
| cfgVirMediaFloppyEmulation   | FloppyEmulation           |
| <b>cfgLDAP</b>               | <b>iDRAC.LDAP</b>         |
| cfgLdapEnable                | Enable                    |
| cfgLdapServer                | Server                    |
| cfgLdapPort                  | Port                      |
| cfgLdapBaseDN                | BaseDN                    |
| cfgLdapUserAttribute         | UserAttribute             |
| cfgLdapGroupAttribute        | GroupAttribute            |
| cfgLdapGroupAttributelsDN    | GroupAttributelsDN        |
| cfgLdapBindDN                | BindDN                    |
| # cfgLdapBindPassword        | BindPassword              |
| cfgLdapSearchFilter          | SearchFilter              |

| Legacy Groups and Objects         | New Groups and Objects  |
|-----------------------------------|-------------------------|
| cfgLdapCertValidationEnable       | CertValidationEnable    |
| <b>cfgLdapRoleGroup</b>           | <b>iDRAC.LDAPRole</b>   |
| cfgLdapRoleGroupIndex             | NA                      |
| cfgLdapRoleGroupDN                | DN                      |
| cfgLdapRoleGroupPrivilege         | Privilege               |
| <b>cfgStandardSchema</b>          | <b>iDRAC.ADGroup</b>    |
| cfgSSADRoleGroupIndex             | NA                      |
| cfgSSADRoleGroupName              | Name                    |
| cfgSSADRoleGroupDomain            | Domain                  |
| cfgSSADRoleGroupPrivilege         | Privilege               |
| <b>cfgIpmiSerial</b>              | <b>iDRAC.IPMISerial</b> |
| cfgIpmiSerialConnectionMode       | ConnectionMode          |
| cfgIpmiSerialBaudRate             | BaudRate                |
| cfgIpmiSerialFlowControl          | FlowControl             |
| cfgIpmiSerialChanPrivLimit        | ChanPrivLimit           |
| cfgIpmiSerialLineEdit             | LineEdit                |
| cfgIpmiSerialDeleteControl        | DeleteControl           |
| cfgIpmiSerialEchoControl          | EchoControl             |
| cfgIpmiSerialHandshakeControl     | HandshakeControl        |
| cfgIpmiSerialNewLineSequence      | NewLineSeq              |
| cfgIpmiSerialInputNewLineSequence | InputNewLineSeq         |
| <b>cfgIpmiSol</b>                 | <b>iDRAC.IPMISol</b>    |
| cfgIpmiSolEnable                  | Enable                  |
| cfgIpmiSolBaudRate                | BaudRate                |
| cfgIpmiSolMinPrivilege            | MinPrivilege            |

| Legacy Groups and Objects    | New Groups and Objects  |
|------------------------------|-------------------------|
| cfgIpmiSolAccumulateInterval | AccumulateInterval      |
| cfgIpmiSolSendThreshold      | SendThreshold           |
| <b>cfgIpmiLan</b>            | <b>iDRAC.IPMILan</b>    |
| cfgIpmiLanEnable             | Enable                  |
| cfgIpmiLanPrivilegeLimit     | PrivLimit               |
| cfgIpmiLanAlertEnable        | AlertEnable             |
| cfgIpmiEncryptionKey         | EncryptionKey           |
| cfgIpmiPetCommunityName      | CommunityName           |
| <b>cfgUserDomain</b>         | <b>iDRAC.UserDomain</b> |
| cfgUserDomainIndex           | NA                      |
| cfgUserDomainName            | Name                    |
| <b>cfgSmartCard</b>          | <b>iDRAC.SmartCard</b>  |
| cfgSmartCardLogonEnable      | SmartCardLogonEnable    |
| cfgSmartCardCRLEnable        | SmartCardCRLEnable      |
| [cfgIPv6URL]                 |                         |
| cfgIPv6URLString             | NA                      |
| <b>cfgVFlashSD</b>           | <b>iDRAC.vFlashSD</b>   |
| cfgVFlashSDSize              | Size                    |
| cfgVFlashSDLicensed          | Licensed                |
| cfgVFlashSDAvailableSize     | AvailableSize           |
| cfgVFlashSDHealth            | Health                  |
| cfgVFlashSDEnable            | Enable                  |
| cfgVFlashSDWriteProtect      | WriteProtect            |
| cfgVFlashSDInitialized       | Initialized             |

| Legacy Groups and Objects         | New Groups and Objects       |
|-----------------------------------|------------------------------|
| <b>cfgVFlashPartition</b>         | <b>iDRAC.vFlashPartition</b> |
| cfgVFlashPartitionIndex           | NA                           |
| cfgVFlashPartitionSize            | Size                         |
| cfgVFlashPartitionEmulationType   | EmulationType                |
| cfgVFlashPartitionFlashOSVolLabel | VolumeLabel                  |
| cfgVFlashPartitionFormatType      | FormatType                   |
| cfgVFlashPartitionAccessType      | AccessType                   |
| cfgVFlashPartitionAttachState     | AttachState                  |
| <b>cfgServerInfo</b>              | <b>iDRAC.ServerBoot</b>      |
| cfgServerBootOnce                 | BootOnce                     |
| cfgServerFirstBootDevice          | FirstBootDevice              |
| <b>cfgLogging</b>                 | <b>iDRAC.Logging</b>         |
| cfgLoggingSELOEMEventFilterEnable | SELOEMEventFilterEnable      |
|                                   | <b>iDRAC.SNMP.Alert</b>      |
| cfgIpmiPetAlertEnable             | Enable                       |
| cfgIpmiPetAlertDestIpAddr         | DestAddr                     |

## cfgSSADRoleGroupPrivilege (Read or Write)

**Description** Use the bit mask numbers listed in the table below to set role-based authority privileges for a Role Group.

**Legal Values**

- For iDRAC: 0x00000000 to 0x000001ff
- For CMC: 0x00000000 – 0x00000fff

**Default** <blank>

### Example

```
racadm getconfig -g cfgStandardSchema -i 1
cfgSSADRoleGroupIndex=1
cfgSSADRoleGroupName=blsys-1
```

```
cfgSSADRoleGroupDomain=
cfgSSADRoleGroupPrivilege=3081
```

The following table displays the bit masks for Role Group privileges:

| <b>Role Group Privilege</b>     | <b>Bit Mask</b> |
|---------------------------------|-----------------|
| Login to iDRAC                  | 0x00000001      |
| Configure iDRAC                 | 0x00000002      |
| Configure Users                 | 0x00000004      |
| Clear Logs                      | 0x00000008      |
| Execute Server Control Commands | 0x00000010      |
| Access Virtual Console          | 0x00000020      |
| Access Virtual Media            | 0x00000040      |
| Test Alerts                     | 0x00000080      |
| Execute Debug Commands          | 0x00000100      |