Inspiron 17 7000

2-in-1

Setup and Specifications



Notes, cautions, and warnings		
NOTE: A NOTE indicates important information that helps you make better use of your product.		
(i) NOTE: A NOTE indicates important information that helps you make better use of your product. CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.		
WARNING: A WARNING indicates a potential for property damage, personal injury, or death.		

© 2018 - 2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

2 Create a USB recovery drive for Windows	6
Reinstall Windows using a USB recovery drive	6
3 Views	7
Front	
Left	
Right	8
Base	Ç
Display	Ç
Bottom	1C
Modes	10
4 Specifications	12
Computer model	12
Dimensions and weight	12
System information	12
Operating system	13
Memory	
Intel Optane memory (optional)	13
Ports and connectors	
Communications	14
Wireless module	14
Video	14
Audio	14
Storage	14
Media-card reader	15
Keyboard	15
Camera	15
Touchpad	
Power adapter	16
Battery	16
Display	17
Computer environment	17
5 Keyboard shortcuts	18
6 Cotting halp and contacting Dall	20

Set up your computer

1. Connect the power adapter and press the power button.



- 2. Finish operating system setup.
 - a) Connect to a network.



b) Sign-in to your Microsoft account or create a new account.




3. Locate Dell apps in Windows.

Table 1. Locate Dell apps



Register your computer



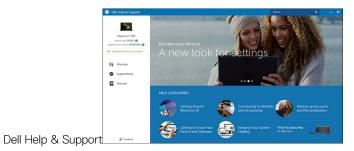



SupportAssist—Check and update your computer

4. Create recovery drive for Windows. It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.

Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

- i NOTE: This process may take up to an hour to complete.
- NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support site for latest instructions.
- 1. Connect the USB flash drive to your computer.
- 2. In Windows search, type Recovery.
- 3. In the search results, click Create a recovery drive.
 - The User Account Control window is displayed.
- 4. Click Yes to continue.
 - The **Recovery Drive** window is displayed.
- 5. Select Back up system files to the recovery drive and click Next.
- Select the USB flash drive and click Next.A message appears, indicating that all data in the USB flash drive will be deleted.
- 7. Click Create.
- 8. Click Finish.

Topics:

· Reinstall Windows using a USB recovery drive

Reinstall Windows using a USB recovery drive


- CAUTION: This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.
- NOTE: Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.
- (i) NOTE: This process may take up to an hour to complete and your computer will restart during the recovery process.
- 1. Connect the USB recovery drive to your computer.
- 2. Restart your computer.
- ${\bf 3.}\;\;$ Press F12 after the Dell logo is displayed on the screen to access the boot menu.
 - A Preparing one-time boot menu message appears.
- After the boot menu loads, select the USB recovery device under UEFI BOOT.
 The system reboots and a screen to Choose the keyboard layout is displayed.
- 5. Choose your keyboard layout.
- 6. In the Choose an option screen, click Troubleshoot.
- 7. Click Recover from a drive.
- **8.** Choose one of the following options:
 - · Just remove my files to do a quick format.
 - · Fully clean the drive to do a complete format.
- 9. Click **Recover** to start the recovery process.

Views

Topics:

- Front
- Left
- Right
- Base
- Display
- Bottom
- Modes

Front

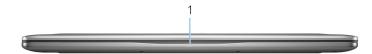

1. Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

i NOTE: Press Fn+H to toggle this light between power and battery-status light and hard-drive activity light.

Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

Power and battery-status light

Indicates the power and battery-charge status


Solid white — Power adapter is connected and the battery has more than 5% charge.

Amber — Computer is running on battery and the battery has less than 5% charge.

Off

- · Power adapter is connected and the battery is fully charged.
- · Computer is running on battery and the battery has more than 5% charge.
- · Computer is in sleep state, hibernation, or turned off
- i NOTE: Hard-drive activity light is supported only on computers shipped with hard drive.

Left

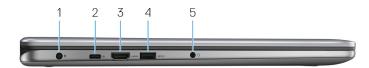

1. Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2. USB 3.1 Gen 1 Type-C port

Connect peripherals such as external storage devices, printers, external displays, and so on. Provides data transfer speeds up to 5 Gbps.

Supports Power Delivery that allows two-way power supply between devices. Provides up to 15 W power output that enables faster charging.

(i) NOTE: Adapters (sold separately) are required to connect standard USB and DisplayPort devices.

3. HDMI port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.

4. USB 3.1 Gen 1 port with PowerShare

Connect peripherals such as storage devices, printers, and so on. Provides data transfer speeds up to 5 Gbps.

PowerShare allows you to charge your USB devices even when your computer is turned off.

- NOTE: If your computer is powered off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.
- NOTE: Certain USB devices may not charge when the computer is powered off or in sleep state. In such cases, turn on the computer to charge the device.

5. Headset port

Connect headphones or a headset (headphone and microphone combo).

Right



1. Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.

NOTE: You can customize the power-button behavior in Power Options. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

2. Volume-control button

Press to increase or decrease the volume.

3. Media-card reader

Reads from and writes to media cards.

4. USB 2.0 port

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

5. Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

Base



1. Touch pad

Move your finger on the touch pad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

2. Left-click area

Press to left-click.

3. Right-click area

Press to right-click.

Display



1. Left microphone

Provides digital sound input for audio recording, voice calls, and so on.

2. Infrared emitter

Emits infrared light that enables infrared camera to sense depth and track motion.

3. Infrared camera

Allows you to video chat, capture photos, and record videos. Depth-sensing feature of the camera enhances security when paired with Windows Hello.

4. Camera

Allows you to video chat, capture photos, and record videos.

5. Camera-status light

Turns on when the camera is in use.

6. Right microphone

Provides digital sound input for audio recording, voice calls, and so on.

Bottom



1. Left speaker

Provides audio output.

2. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

3. Right speaker

Provides audio output.

Modes

Notebook



Tablet



Stand



Tent



Specifications

Topics:

- · Computer model
- · Dimensions and weight
- System information
- Operating system
- Memory
- Intel Optane memory (optional)
- Ports and connectors
- Communications
- Video
- Audio
- Storage
- · Media-card reader
- Keyboard
- Camera
- Touchpad
- · Power adapter
- Battery
- Display
- · Computer environment

Computer model

Table 2. Computer model

Computer model Inspiron 17-7773

Dimensions and weight

Table 3. Dimensions and weight

 Height
 22.10 mm (0.87 in)

 Width
 412.50 mm (16.24 in)

 Depth
 277.50 mm (10.92 in)

Weight 2.94 kg (6.49 lb)

i NOTE: The weight of your laptop varies depending on the configuration ordered and the manufacturing variability.

System information

Table 4. System information

Processor 8th Generation Intel Core i5/i7

Chipset Integrated in processor

Operating system

Table 5. Operating system

Operating systems supported

- · Ubuntu
- · Windows 10 Pro Standard
- Windows 10 Home Standard
- · Windows 10 Home Plus

Memory

Table 6. Memory specifications

Slots Two SODIMM slots
Type Dual-channel DDR4

Speed 2400 MHz

Configurations supported

Per memory module slot 4 GB, 8 GB, and 16 GB

Total memory 4 GB, 8 GB, 12 GB, 16 GB, and 32 GB

Intel Optane memory (optional)

Intel Optane memory functions only as a storage accelerator. It neither replaces nor adds to the memory (RAM) installed on your computer.

- | NOTE: Intel Optane memory is supported on computers that meet the following requirements:
 - 7th Generation or higher Intel Core i3/i5/i7 processor
 - Windows 10 64-bit version or higher (Anniversary Update)
 - Intel Rapid Storage Technology driver version 15.9 or higher

Table 7. Intel Optane memory specifications

Type Storage accelerator

Interface PCle 3x4

Connector M.2 Card slot (2280)

Configurations supported 16 GB

NOTE: For Inspiron 17-7773, the Intel Optane memory (purchased separately) is offered only with configurations shipped with hard drive.

Ports and connectors

Table 8. Ports and connectors

External

USB

- USB 3.1 Gen 1 Type-C port
- One USB 3.1 Gen 1 port with PowerShare
- One USB 2.0 port

Audio/Video

- · One HDMI 1.4b port
- · One headset (headphone and microphone combo) port

Table 9. Ports and connectors

Internal

M.2 Card

- One M.2 slot for SSD card
- One M.2 slot for WiFi/Bluetooth

Communications

Table 10. Supported communications

Wireless

- Wi-Fi 802.11ac
 - Bluetooth 4.0
 - Miracast

Wireless module

Table 11. Wireless module specifications

Туре

Transfer rate

Frequency bands supported

Encryption

Intel 3165

Up to 433 Mbps

Dual band 2.4 GHz/5 GHz

• 64-bit and 128-bit WEP

CKIPTKIP

· AES-CCMP

QCA61x4A (DW1820)

Up to 867 Mbps

Dual band 2.4 GHz/5 GHz

- 64-bit and 128-bit WEP
- · CKIP
- · TKIP
- · AES-CCMP

Video

Table 12. Video specifications

Controller

Memory

NVIDIA GeForce MX150

Up to 4 GB GDDR5

Audio

Table 13. Audio specifications

Controller

Realtek ALC3253-VA3 with Waves MaxxAudio Pro

Speakers

Output

· Average: 2 W

• Peak: 2.5 W

Microphone

Digital-array microphones in camera assembly

Two

Volume controls

Media-control shortcut keys and volume-control button

Storage

Table 14. Storage specifications

Interface

SATA 6 Gbps

Hard drive

Solid-state drive (SSD)

Capacity

Hard drive

SSD

One 2.5-inch drive

- One M.2 drive
- One 2.5-inch drive

Up to 2 TB

Up to 1TB

Media-card reader

Table 15. Media-card reader specifications

One SD card slot Type

SD card Cards supported

Keyboard

Table 16. Keyboard specifications

Backlit keyboard

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

- (i) NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1-F12) between two modes multimedia key mode and function key mode.
- (i) NOTE: You can define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.

Keyboard Shortcuts

Type

Shortcut keys

Camera

Resolution

Table 17. Camera specifications

Diagonal viewing angle

Camera

- Still Image: 0.92 megapixel
- Video: 1280x720 (HD) at 30 fps (maximum)

Infrared camera

640 x 480 (VGA)

Camera

74 degrees

Infrared camera

60 degrees

Touchpad

Table 18. Touchpad

Resolution Horizontal: 1260

Vertical: 960

Dimensions Height: 80 mm (3.15 in)

Width: 105 mm (4.13 in)

Power adapter

Table 19. Power adapter specifications

65 W Type

Diameter (connector) 4.5 mm x 2.9 mm

Input voltage 100 VAC-240 VAC

Input frequency 50 Hz-60 Hz

Input current (maximum) 1.60 A/1.70 A

3.34 A Output current (continuous)

Rated output voltage 19.50 VDC 0°C to 40°C (32°F to 104°F)

Temperature range: Storage -40°C to 70°C (-40°F to 158°F)

Battery

Table 20. Battery specifications

Temperature range: Operating

4-cell "smart" lithium ion (56 WHr) Type

Dimensions

Height 5.90 mm (0.23 in) Width 98.20 mm (3.87 in) 233.37 mm (9.19 in) Depth

0.25 kg (0.55 lb) Weight (maximum)

15.20 VDC Voltage

Charging time (approximate) 4 hrs (when the computer is off)

Operating time Varies depending on operating conditions and can significantly

reduce under certain power-intensive conditions.

Life span (approximate) 300 discharge/charge cycles

Temperature range Operating: 0°C to 35°C (32°F to 95°F)

Storage: -40°C to 65°C (-40°F to 149°F)

Coin-cell battery CR-2032

Display

Table 21. Display specifications

Type 17.3-inch FHD touch screen IPS (In-plane switching) panel

Resolution (maximum) 1920 x 1080

Viewing angle (Left/Right/Up/Down) 80/80/80/80

Pixel pitch 0.1989 mm
Refresh rate 60 Hz

Operating angle 0 degrees (closed) to 360 degrees

Controls Brightness can be controlled using shortcut keys

 Height
 252.50 mm (9.94 in)

 Width
 400 mm (15.75 in)

 Diagonal
 439.42 mm (17.30 in)

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 22. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G [†]	160 G [‡]
Altitude (maximum)	-15.20 m to 3048 m (-50 ft to 10,000 ft)	-15.20 m to 10,668 m (-50 ft to 35,000 ft)

 $[\]ensuremath{^{*}}$ Measured using a random vibration spectrum that simulates user environment.

[†] Measured using a 2 ms half-sine pulse when the hard drive is in use.

[‡] Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Table 23. List of keyboard shortcuts.

Keys	Description
F1 ≰x	Mute audio
F2 •••	Decrease volume
F3 ■ 00	Increase volume
F4 I≪■	Play previous track/chapter
F5 ▶II	Play/Pause
F6 ▶	Play next track/chapter
F8 🖃	Switch to external display
^{F9} ρ	Search
F10	Toggle keyboard backlight
F11 *	Decrease brightness
F12	Increase brightness
Fn + PrtScr	Turn off/on wireless
Fn + S	Toggle scroll lock
Fn + Esc	Toggle Fn-key lock
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + R	System request
Fn + Ctrl	Open application menu
	Toggle between power and battery-status light/hard-drive activity light
Fn + H	NOTE: Hard-drive activity light is supported only on computers shipped with a hard drive.

Keys	Description
Fn + ←Home	Home
Fn + End →	End
Fn + ↑ PgUp	Page up
Fn + + PgDn	Page down

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 24. Self-help resources

Information about Dell products and services

Dell Help & Support app

Tips

Contact Support

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

Learn and know the following information about your product:

- · Product specifications
- Operating system
- · Setting up and using your product
- Data backup
- · Troubleshooting and diagnostics
- · Factory and system restore
- · BIOS information

www.dell.com





In Windows search, type Contact Support, and press Enter.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

- 1. Go to www.dell.com/support.
- 2. Type the subject or keyword in the **Search** box.
- 3. Click **Search** to retrieve the related articles.

See Me and My Dell at www.dell.com/support/manuals.

To locate the *Me and My Dell* relevant to your product, identify your product through one of the following:

- · Select Detect Product.
- Locate your product through the drop-down menu under View Products.
- Enter the Service Tag number or Product ID in the search bar.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

- i NOTE: Availability varies by country and product, and some services may not be available in your country.
- NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.