

Dell Chromebox For Meetings 3010 User Guide

Regulatory Model: Z01V
Regulatory Type: Z01V001



Notes, Cautions, and Warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2014 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2014 - 07

Rev. A00

Contents

1 Finding More Information and Resources.....	5
2 Features.....	6
3 Requirements to Setup Your Chromebox for Meetings.....	7
Network requirements.....	7
Table/Other mounting requirements.....	7
Conference room requirements.....	7
Display requirements and installation.....	8
4 Setting up Your Chromebox for Meetings.....	9
Connecting a display panel to your Chromebox for meetings.....	9
To connect a display panel to your Chromebox for meetings:.....	9
Connecting the Speaker Phone.....	9
Connecting the camera.....	10
Placing your camera.....	10
Connecting the Remote Control Receiver.....	10
Connecting the AC Power Adapter.....	11
Recommendations on how to use the power adapter.....	11
Connecting your cables.....	11
Connectors and accessories.....	12
Mounting your Chromebox for meetings (Optional).....	13
5 Using your Chromebox for meetings.....	14
Enrolling Chromebox for meetings.....	14
Selecting other enrollment options.....	15
Scheduling a video call.....	15
Leaving a video call.....	16
Managing devices and rooms.....	16
Check Admin and console settings for Google Video Conferencing devices.....	16
Associating your Chromebox for meetings with the room's online calendar.....	16
Viewing device information.....	17
Editing the device name.....	18
Naming your Chromebox for meetings.....	19
Associating your Chromebox for meetings with a different room, calendar or unassigning the device from any room.....	20
Editing a room name, type, or description.....	20
Editing a room name, type, or description.....	21

6 Troubleshooting.....	23
Fixing a problem.....	23
Help and support.....	23
7 Contacting Dell.....	24

Finding More Information and Resources

See the safety and regulatory documents that shipped with your computer and the regulatory compliance website at www.dell.com/regulatory_compliance for more information on:

 
- Safety best practices
- Regulatory certification
- Ergonomics

See www.dell.com for additional information on:

- Warranty
- Terms and Conditions (U.S. only)
- End User License Agreement

Additional information on your product is available at www.dell.com/support.

Features

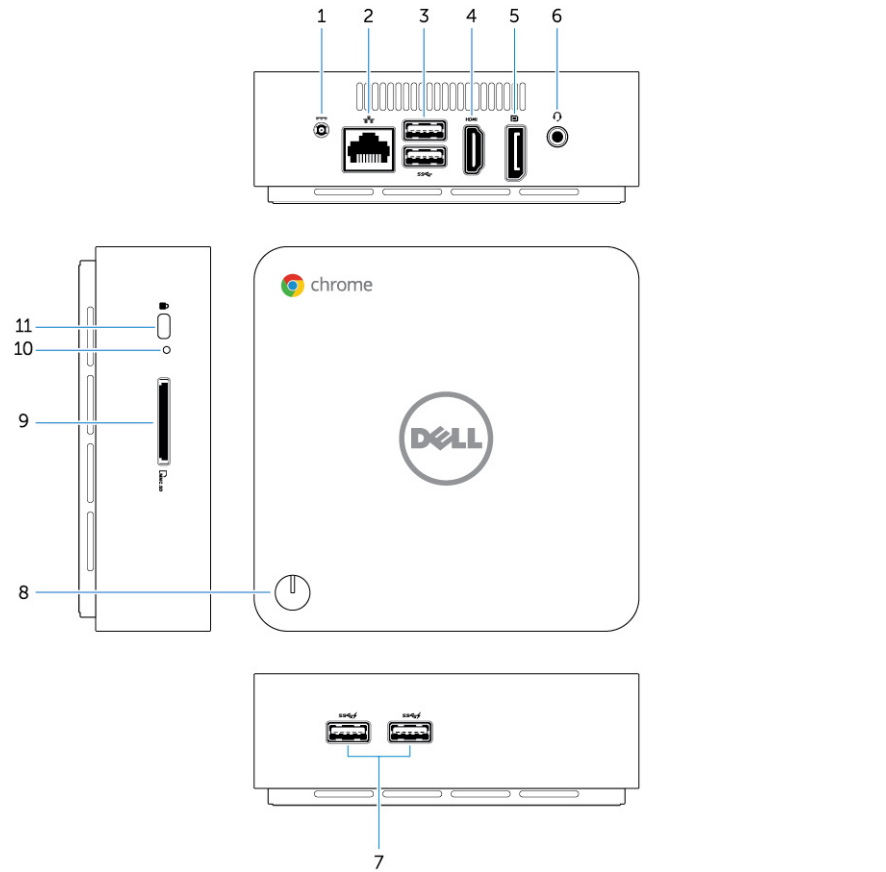


- | | |
|---------------------------|----------------------|
| 1. Power Connector | 2. Network connector |
| 3. USB 3.0 connector | 4. HDMI connector |
| 5. Display port connector | 6. Headset connector |
| 7. USB 3.0 Port | 8. Power Button |
| 9. Memory-card reader | 10. Recovery button |
| 11. Secure Cable slot | |

Requirements to Setup Your Chromebox for Meetings

Network requirements

Your *Chromebox for meeting* device works with both wired and wireless networks. The network requirements are the same as those for Hangouts. In addition, we recommend a minimum bandwidth of 1 mbps or 2mbps (up/down) for group video conferencing .


 **NOTE:** Although you can use your *Chromebox for meeting* device over a wireless network connection, we recommend using a wired network connection for best sound and video quality.

Table/Other mounting requirements

1. For the Chromebox for meetings, you must have a 50 mm x 145 mm x 145 mm or 1.97 inches x 5.71 inches x 5.71 inches. (H x W x L) space available to mount the device or place it in a table.
2. For the speakerphone, you must have at least 55 mm x 140 mm x 150 mm or 2.17 inches x 5.51 inches x 5.91 inches (H x W x L) space available to place the unit on the table or mount it on the wall.
3. The universal hook mount on the camera fits the width on the most standard monitors.

 
Conference room requirements

Your Chromebox for meetings is designed for a 3-6 person conference room, though it works well in rooms of 2-10 people. We recommend a room that contains either a long table with the monitor at one end (optimal), or a round table.

 **NOTE:** A classroom setup is not recommended for using Chromebox for meetings.

The room must have the following:

- Network port (for wired network connections)
- AC power outlet
- Display/TV/Projector

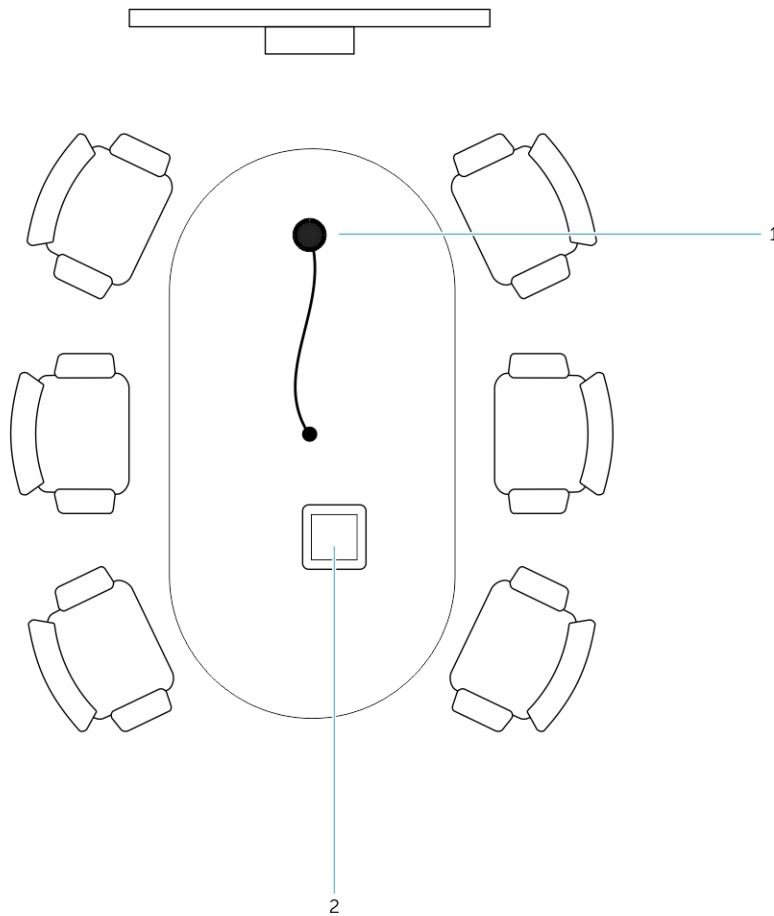


1. Speakerphone
2. Chromebox for meetings

Display requirements and installation

Your Chromebox for meetings can be setup to work with LCD, LED, plasma and projector-type monitors and televisions. The display must have an HDMI or DisplayPort input. The screen resolution must be at least 1280 x 720 pixels.

 **NOTE:** For best video quality, we recommend a resolution of 1920 x 1080 pixels.

You can place the display on a table against one wall, or mount the display on a wall or ceiling for a projector unit.

 **NOTE:** If you already have an existing video conferencing system in the room, you can use the existing setup for your Chromebox for meetings.

Setting up Your Chromebox for Meetings

Connecting a display panel to your Chromebox for meetings

 
You can connect your Chromebox to a display panel or a projector that has any of the following connectors:

- HDMI connector
- DisplayPort

 **NOTE:** If required, the HDMI-to-DVI adapter must be purchased separately.


To connect a display panel to your Chromebox for meetings:


Connecting a display cable either to the HDMI port or the DisplayPort.

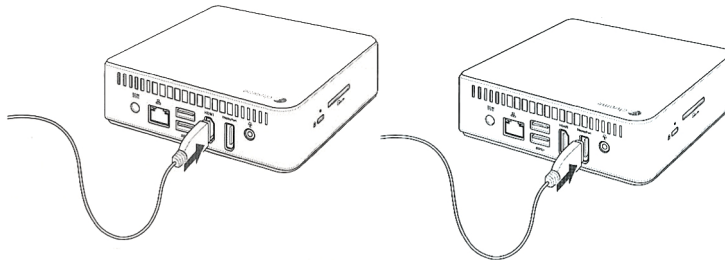

Connecting the Speaker Phone

 
You can connect a speaker phone to any of the USB 3.0 ports on your Chromebox for meetings.

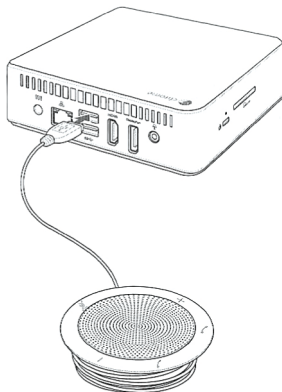


 **NOTE:** For information on speaker phones, you can refer to the following technical documentation:
http://www.jabra.com/Products/PC_Headsets/Jabra_SPEAK__410_Series/Jabra_SPEAK_410

Connecting the camera

 
You can connect a camera to any of the USB 3.0 ports in your Chromebox for meetings.

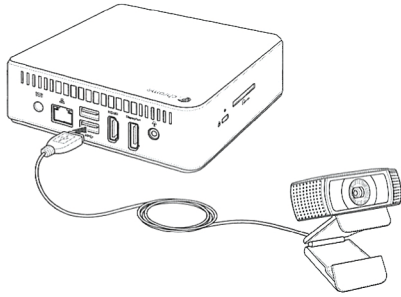

 **NOTE:** For information of the camera, you can refer to the following technical documentation:
<http://www.logitech.com/assets/45920/hd-pro-webcam-c920-quick-start-guide.pdf>

 
Placing your camera

Place your camera on top of the display.


 **NOTE:** Keep the camera at eye level.

Connecting the Remote Control Receiver

Connect the remote control receiver dongle to the USB 3.0 port on the front panel of your Chromebox for meeting.

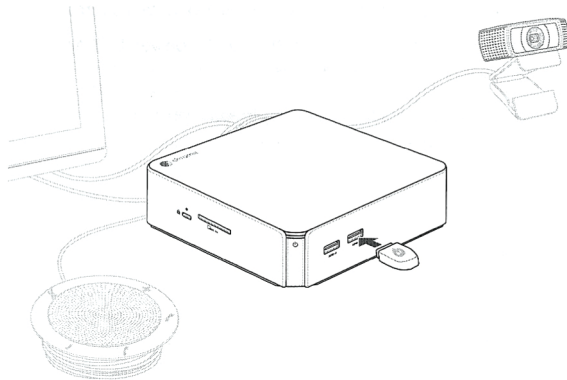

 Remove the anti-discharge battery protector from remote

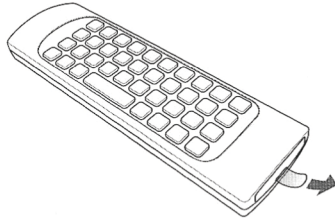

- NOTE:** The remote controller and receiver are paired in the factory and should automatically pair when connected. The remote does not include special characters such as ~ ^ < > nor does it include the Ctrl and Alt buttons. An external keyboard must be connected if your login password has special characters.

 
Connecting the AC Power Adapter

To connect the AC power adapter to your Chromebox for meetings:

1. Plug the AC power cord into a 100 V ~ 240 V power source.
2. Connect the DC power connector into the power (DC) input port of your Chromebox for meetings.

NOTE: Depending on the model the power adapter may vary in appearance.

3.

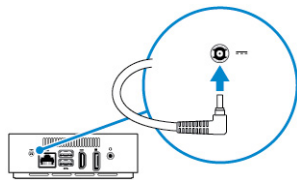


Recommendations on how to use the power adapter

- Always use the AC power adapter that came with your Chromebox for meetings.
- A grounded wall socket.
- Make sure that the wall socket is easily accessible.

Connecting your cables

 Connect the cables from the external accessories to Chromebox for meetings.

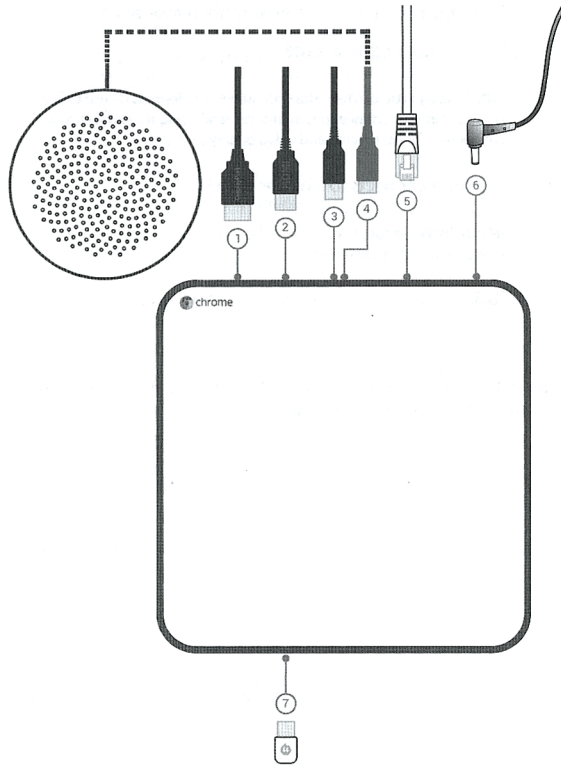

1. DisplayPort connects a display with DisplayPort connector.
2. HDMI connects a display with HDMI connector.
3. USB 3.0 port connects the camera.
4. USB 3.0 port connects the speakerphone assembly.
5. Network port connects to a router/modem.
6. Power port connects to a power outlet.
7. USB 3.0 connects to the remote control receiver.

NOTE: Although you can use your Chromebox for meetings device over a wireless connection we strongly recommend using a wired network connection for a best sound and video quality.


NOTE: Always make sure that you connect the power cable to the power outlet only after the other connections.

Connectors and accessories

Depending on your setup, you may need the following:

- CAT5e Ethernet cable for wired network connection.
- Chromebox for meetings wall mount for wall mounting.
- USB extension cable for camera for distance exceeding 5 feet.
- USB extension cable for speakerphone for distance exceeding 3 feet.

- Cable concealers, if needed for wall mounting.


 **NOTE:** If your setup of the display, Chromebox for meetings, and peripherals requires longer distance, you may need to purchase additional extension cables.

Mounting your Chromebox for meetings (Optional)

You can mount your Chromebox for meetings behind the display. Use a mounting bracket to attach the Chromebox for meetings to your display or to any VESA (100 mm) - compatible location. A mounting bracket comes included with your Chromebox for meetings package.


Using your Chromebox for meetings

Enrolling Chromebox for meetings

 
 **NOTE:** We recommend connecting a USB keyboard and mouse to easily complete the enrolling your device. If you are using the remote here's how to move around the screen:


- Press right to move the next field.
- Press left to move back to the previous field.
- Press up or down to scroll the list for each field.
- Press **Select** to make a selection.

To complete basic enrollment:


 **NOTE:** The instructions below are done using the remote controller. You can also use a USB keyboard to perform the enrollment.

1. Turn on the display.
2. Turn on the Chromebox for meeting.
3. Verify or change your language, keyboard layout, time zone and network.

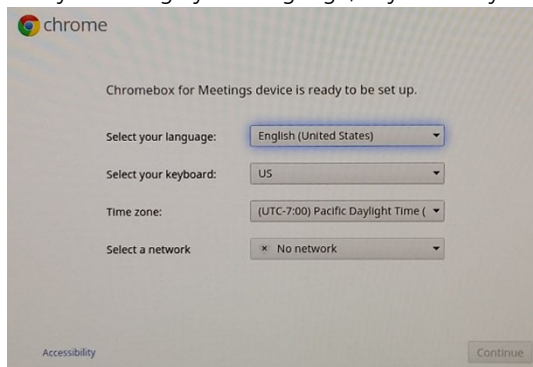



 **NOTE:** If your network doesn't appear in the **Select a network** list, select **Join network** and enter the correct settings. Ask your network administrator for the settings if you don't know them.

4. Select **Continue**
5. **Accept** the Google Chrome OS Terms.


 **NOTE:** If you would like to uncheck **Optional: Help make Chrome OS better by automatically sending usage statistics and crash reports to Google** with the remote, you need to uncheck it with the spacebar on the back of the remote or connect a mouse to uncheck it.

6. Sign in with your Google Apps email address and password.

 
 **NOTE:** If you use the remote to enter your password, the entire password may be revealed on screen. Use a USB keyboard to have your password hidden as you type.

 **NOTE:** Use a USB keyboard to enter special characters.

7. The enrollment process takes place automatically. After the process is complete, click **Done**.
8. When the Hangouts screen appears, follow the onscreen instruction to test your camera and speakerphone.

 **NOTE:** If you cannot see video or hear audio;

- Ensure that your camera and speakerphone are connected to your Chromebox for meetings before you turned on your device.
- Unplug the cables and plug them in again, then restart your device.




9. Click through the screens to view tips on using Chromebox for meetings.

At the end of enrollment, the screen displays a URL for this device's page in the Chromebox for meetings Admin console. Using this URL, an admin user must add the room's online calendar to the device to enable schedule meetings.

Selecting other enrollment options

Most users can go through the simple enrollment flow described in [Enrolling Chromebox for meetings](#). Options are available for users who want to customize the setup experience or learn more. These options appear on the second enrollment screen, except for accessibility, which appear on both the first and second screens:

- **Accessibility:** Accessibility options include larger font and cursor, size voice prompts, and more. The options you select here apply to the setup process only, you cannot use Chromebox for meetings by selecting these options. To select the Accessibility link using remote, navigate to the **Continue** or **Accept and continue** button and then press right→.
- **Send usage and crash info to Google:** Allow your device to send info to Google helps us improve the Chrome OS experience for all users. To learn more about this option, click the **Learn more**.

 **NOTE:** If you click learn more link you will need a mouse to close the learn more screen option.

- **System security:** Read more about the Chromebox for meetings security settings.
- **Google Chrome OS Terms:** If you are using the remote, navigate to the **Accept** and **Continue** button and then press right→ to move the cursor inside the terms window. Once you are inside the window, you can scroll up and down to review the terms.

Scheduling a video call

Scheduling a meeting that includes a video call is easy. Your Calendar invitation will include everything people need to join from a room and or from a personal device.

1. Sign in using your Google account.
2. Open Google Calendar or type **google.com/calendar** in the address bar.
3. Click **Create** to schedule an event.
4. Enter event details-the event title, date, time and guests.
5. Click **Rooms, etc.** on the right side of the page.

6. Enter the name of a room with a Chromebox for meetings, and then click **Add**.
7. After booking a room, click **Add video call**.
8. Give a name for the video call, but keep the name short and distinct (The name can have up to 15 characters)
9. Click **Save** to send others an invitation that includes a link to the video call.

Leaving a video call


If you have scheduled the video call, leaving the call does not mean that you are ending the call for everyone in the meeting. It just means that you are leaving. The video call will continue until the last person leaves it.

From a room

Press the read handset icon on the remote control or the speaker.

Managing devices and rooms

Check Admin and console settings for Google Video Conferencing devices


 **NOTE:** Chromebox for meetings uses the Google video conferencing solution.

To manage Chromebox for meetings devices from the Admin console, make sure your time zone is set correctly. You can also choose to reboot your Chromebox for meetings at scheduled intervals.

1. From a laptop or other device, sign in to the [Google Admin console](#)
2. Click **Device management**, and then to the right of Chromebox for meetings, click **Settings**.
3. In the **Schedule reboot** field, enter the number of days before a reboot takes place (optional). For example, if you want to reboot your devices every five days, enter **5**.
4. In the **Time Zone** field at the bottom of the screen, make sure your correct time zone is selected.


Associating your Chromebox for meetings with the room's online calendar

After a user enrolls a *Chromebox for meeting* device in a room, an admin user needs to associate the device with that room's online calendar. This allows users to schedule video conferences using the *Chromebox for meeting*

 
 **NOTE:** You do not need to associate a Chromebox for meetings device with the room's calendar to use the device for ad hoc meetings.

At the end of device enrollment, the screen displays a URL for the Chromebox for meetings Admin console. Follow these steps if you are an admin user:


1. From a laptop or other device, copy the Admin console's URL into a web browser.
2. When the login screen appears, sign in to the Admin console using your Google Admin account.

 **NOTE:** You will not see the login screen if you are already signed in to your account.

- Click **Device Management**, and then click Chromebox for meetings devices. Select the Conference room or resource and click **Add calendar resource**.

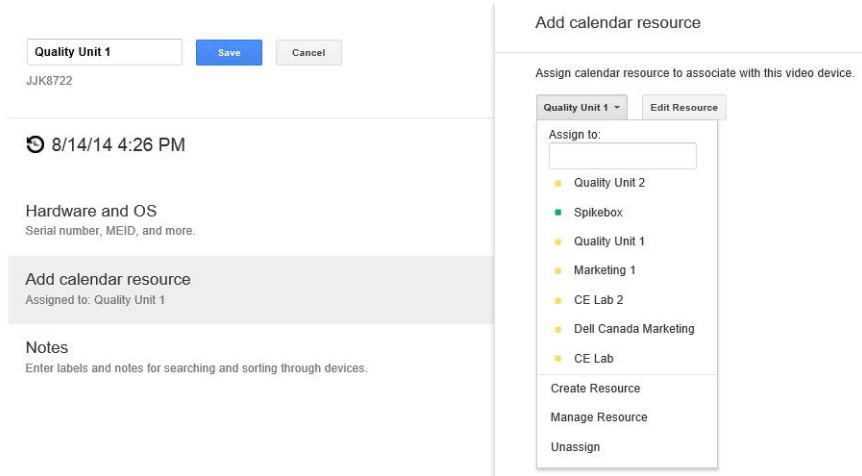

- On the right side of the screen, click **Unassigned** and do one of the following:
 - If the room where the *Chromebox for meeting* device is located appears in the list, click the room name and then click **Save**.
 - If the room does not appear in the list, click **Create Resource**. Enter the room name and, optionally, the resource type and a description. Click **Save**. To associate your *Chromebox for meeting* device with the room's calendar, click **Unassigned**, click the room name, and click **Save**.

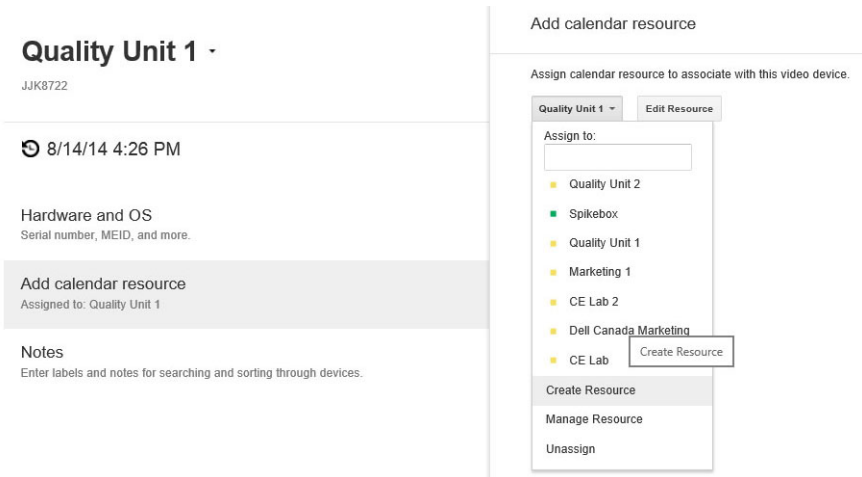 

Viewing device information

- From a laptop or other device, sign in to the [Google Admin console](#).
- Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
- A screen appears showing active Chromebox for meetings devices. Click the device that you want to view.
- Click **Hardware and OS**. The right side of the screen displays devices information including the model, serial number, MEID and more.

Quality Unit 1 Save Cancel

JJK8722

🕒 8/14/14 4:26 PM

Hardware and OS
Serial number, MEID, and more.

Add calendar resource
Assigned to: Quality Unit 1

Notes
Enter labels and notes for searching and sorting through devices.


Hardware and OS

Model

Serial Number	JJK8722
MEID	
WiFi MAC Address	a0a8cd40eda4
Ethernet MAC Address	e0db55f45dd9
Google Chrome Version	37.0.2062.53
Platform Version	5978.37.0 (Official Build) beta-channel tricky
Firmware Version	Google_Tricky.5829.12.0
Boot Mode	Verified
Enrollment Date	Jul 24, 2014

Editing the device name

 1. From a laptop or other device, sign in to the [Google Admin console](#).
2. Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
3. A screen appears showing active Chromebox for meetings devices. Click the device that you want to rename.
4. Click the arrow to the right of the device name.

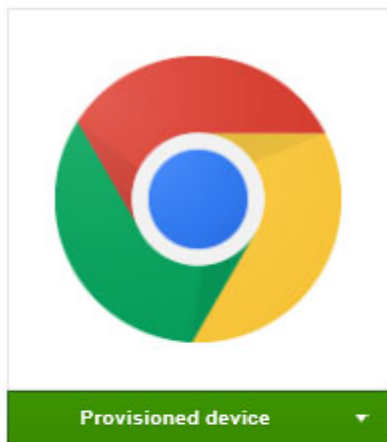

Quality Unit 1 ▾

Edit device name

Call

Hang up

Mute

Serial number, MEID, and more.

 
Add calendar resource

Assigned to: Quality Unit 1

Notes

Enter labels and notes for searching and sorting through devices.

5. Click **Edit device name**.
6. Enter the new name and click **Save**.

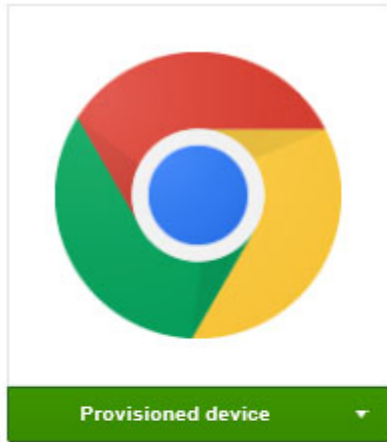

Quality Unit 1

Save

Cancel

JJK8722

🕒 8/14/14 4:26 PM

Hardware and OS

Serial number, MEID, and more.


Add calendar resource

Assigned to: Quality Unit 1

Notes

 
Enter labels and notes for searching and sorting through devices.

7. A screen appears asking if you want to update the calendar resource name to match the new device. Select **Yes** or **No**.

 **NOTE:** Having the device name match the calendar resource name makes it easy to identify which resource goes with which device.

Naming your Chromebox for meetings

1. From a laptop or other device, sign in to the [Google Admin console](#).
2. Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
3. A screen appears showing active Chromebox for meetings devices. Click the device that you want to add information.
4. Click **Notes**.

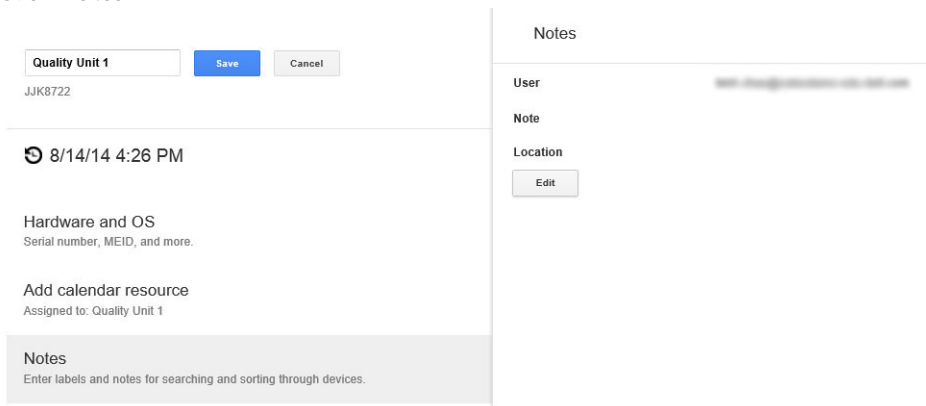


5. On the right side of the screen, click **Edit**.
6. Enter the information you want in the **User**, **Note**, and/or **Location** field.
7. Click **Save**.

Associating your Chromebox for meetings with a different room, calendar or unassigning the device from any room

If you move your Chromebox for meetings to a different room, you must assign the device to that new room's calendar.

Alternatively, if you stop using Chromebox for meetings device, you can unassign the device from any room.

 1. From a laptop, or any other device, sign in to the [Google Admin console](#).
2. Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
3. A screen appears showing active Chromebox for meetings devices. Click the device that you want to reassign or unassign.
4. Click **Add calendar resource**.
5. On the right side of the screen, click the room to which the Chromebox for meetings device is associated and do any one of the following:

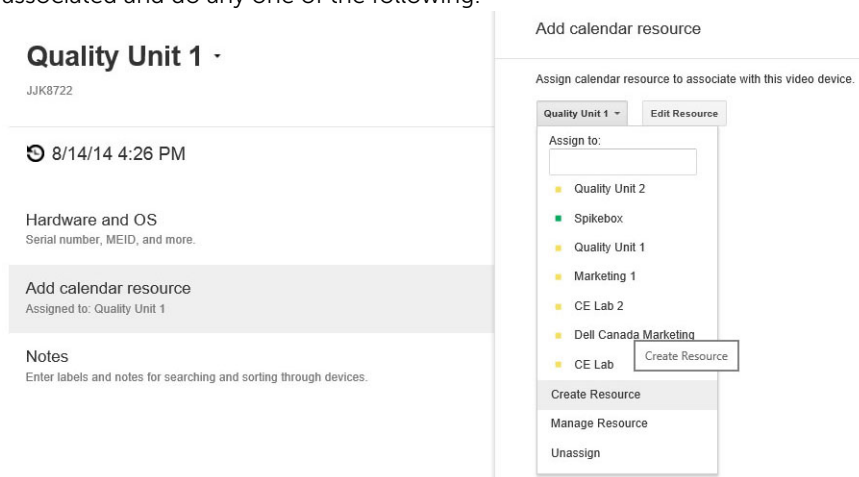

- To associate your Chromebox for meetings device with another room's calendar, click the room name.
 - To unassign your Chromebox for meetings device from any room, click **Unassign**.
6. Click **Save**.

Editing a room name, type, or description

1. From a laptop or other device, sign in to the [Google Admin console](#).
2. Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
3. A screen appears showing active Chromebox for meetings devices. Click the device that is in the room whose information you want to edit.
4. Click **Add calendar resource**.

5. On the right side of the screen, do one of the following.
 - To edit the currently assigned room, click **Edit Resource** to the right of the room name. Edit the name, type, and/or description as desired and click **Save**.

✕

Edit calendar resource

Fields marked (*) are required

Resource Name *

Resource type

(Examples: conference room or projector)

Description

- To edit a different room or other resource, click the currently assigned room name and click **Manage Resource**. This takes you to the Calendar settings page where you can edit a resource name, type, or description; create a new resource; or delete a resource.

Editing a room name, type, or description

1. From a laptop or other device, sign in to the [Google Admin console](#).
2. Click **Device management**, then, to the right of Chromebox for meetings, click **Devices**.
3. A screen appears showing active Chromebox for meetings devices. Click the device that is in the room whose information you want to edit.
4. Click **Add calendar resource**.
5. On the right side of the screen, do one of the following.
 - To edit the currently assigned room, click **Edit Resource** to the right of the room name. Edit the name, type, and/or description as desired and click **Save**.

Edit calendar resource



Fields marked (*) are required

Resource Name *

Resource type

(Examples: conference room or projector)

Description

- To edit a different room or other resource, click the currently assigned room name and click **Manage Resource**. This takes you to the Calendar settings page where you can edit a resource name, type, or description; create a new resource; or delete a resource.

Troubleshooting

Fixing a problem

Setup-During enrollment, I cannot get past the language screen

The link to the content is at https://support.google.com/chromeboxformetings/answer/3344700?hl=en&ref_topic=3368353

How to wipe and re-enroll a device

The link to the content is at https://support.google.com/chromeboxformetings/answer/4580158?hl=en&ref_topic=3368353

Manage devices and rooms


I do not know how to identify the Chromebox for meetings device I want on the device list screen.

If you are not sure which device to click, you can identify the correct one by its serial number. You can find your device serial number or service tag on the bottom of the device itself.

Help and support

Visit support.google.com/chromeboxformetings for more detailed set-up and provisioning instructions, customizable table mats, or to print guides for your user.

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.