

# Dell Advanced Projector S718QL

## User's Guide



# Notes, Cautions, and Warnings



**NOTE:** A NOTE indicates important information that helps you make better use of your projector



**CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Provide an earthing connection before the main plug is connected to the mains.

---

**Information in this document is subject to change without notice.  
© 2017 Dell Inc. All rights reserved.**

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; DLP and DLP logo are trademarks of TEXAS INSTRUMENTS INCORPORATED; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model: Dell Advanced Projector S718QL

**October 2017 Rev. A01**

# Contents

<b>1</b>	<b>About Your Dell Projector</b>	<b>5</b>
	Projector Box Contents	5
	Projector Top and Bottom View	6
	Projector Connections	7
	Federal Communication Commission Interference Statement	10
	Radiation Exposure Statement:	10
	FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)	10
	Industry Canada statement:	11
	Déclaration d'exposition aux radiations:	11
	Remote Control	12
<b>2</b>	<b>Adjusting Projector Image</b>	<b>15</b>
	Aligning Projected Image To A Projection Screen	15
	Adjusting Image Shape	18
	Adjusting Image Height	22
	Projector Image Focus Adjustment	23
	Quick Focus Adjustment	24
	Adjusting Projector Position	25
	Adjusting Image Corners	27
	Adjusting Image Size	28
	Cleaning the Projector's Lens	30
<b>3</b>	<b>Using Your Projector</b>	<b>31</b>
	Using Network Display	31
	Using PC-Free Presentation	45
	Set-up Bluetooth Speaker	55
	Turn Off the Projector Speaker	59
	Using High Dynamic Range (HDR)	60
<b>4</b>	<b>Troubleshooting</b>	<b>62</b>
	Troubleshooting Tips	62
	Guiding Signals	65

<b>5</b>	<b>Maintenance</b> . . . . .	<b>66</b>
	Replacing the Remote Control Battery . . . . .	66
<b>6</b>	<b>Specifications</b> . . . . .	<b>67</b>
	Compatibility Mode (Digital) . . . . .	70
<b>7</b>	<b>Additional Information</b> . . . . .	<b>72</b>
<b>8</b>	<b>Contacting Dell</b> . . . . .	<b>73</b>

# 1

## About Your Dell Projector

---

Your projector comes with all the items shown below. Ensure that you have all the items, and contact Dell if anything is missing.

 
### Projector Box Contents

---


#### Package Contents

---


Power cable




1.8 m HDMI cable (2.0 spec)

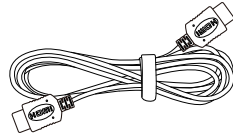

Remote control (CR2032 x 2pcs)

 


User's Guide and Documentation

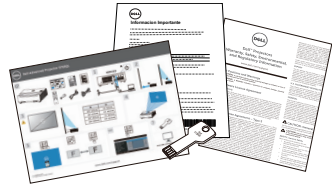


# Projector Top and Bottom View


Top View

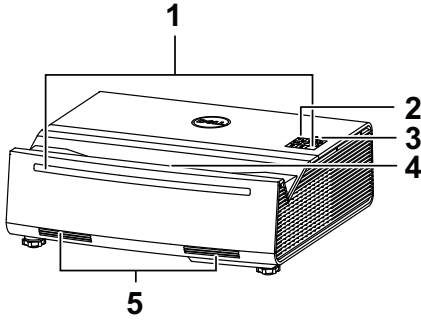


Bottom View

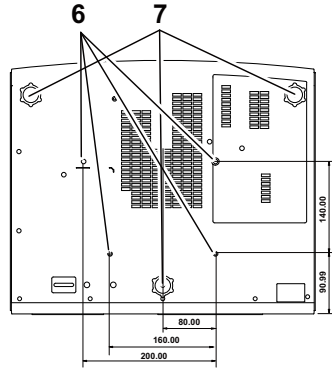

- |   |                               |
|---|-------------------------------|
| 1 | IR receivers                  |
| 2 | Status indicators             |
| 3 | Power button                  |
| 4 | Lens                          |
| 5 | 6W (x 2) speakers             |
| 6 | Mounting holes for wall mount |
| 7 | Tilt adjustment wheel         |

 **NOTE:** Wall mount screw hole M4 x 9 mm depth.

## Projector Connections

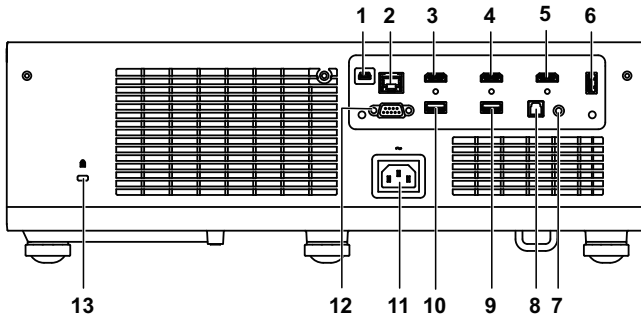

1 Mini USB (mini type B) connector for firmware upgrade	8 SPDIF connector
2 RJ45 connector	9 USB Type A Power (5V/1.8A) connector
3 HDMI 1 (2.0) connector	10 USB Type A Power (5V/1.8A) connector
4 HDMI 2 (1.4) connector	11 Power cord connector
5 HDMI 3 (1.4) connector	12 RS232 connector
6 USB (Type A) 3.0 connector for USB media playback and optional wireless dongle	13 Kensington cable slot
7 Audio output connector	

**⚠ CAUTION:** Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 8.

## **CAUTION: Safety Instructions**

- 1 Do not use the projector near appliances that generate a lot of heat.
- 2 Do not use the projector in areas where there is an excessive amount of dust. The dust may cause the system to fail and the projector will automatically shutdown.
- 3 Ensure that the projector is mounted in a well-ventilated area.
- 4 Do not block the ventilation slots and openings on the projector.
- 5 Ensure the projector operates between ambient temperatures 5°C to 40°C (41°F to 104°F).
- 6 Do not try to touch the ventilation outlet as it can become very hot after the projector has been turned on or immediately after it is turned off.
- 7 Do not look into the lens while the projector is on as it may cause injury to your eyes.
- 8 Do not place any objects near or in front of the projector or cover its lens while the projector is on as the heat may cause the object to melt or burn.
- 9 Do not use alcohol to wipe the lens.



### **NOTE:**

- Do not attempt to ceiling mount the projector by yourself. It should be installed by a qualified technician.
- Recommended Projector Wall Mount Kit. For more information, see the Dell Support website at [dell.com/support](https://www.dell.com/support).
- For more information, see the Safety Information that shipped with your projector.
- The S718QL projector can only be used indoors.





## **WARNING: Laser Safety Notice**

This product is classified as CLASS 1 LASER PRODUCT - RISK GROUP 1 according to IEC 60825-1 : 2014. Complies with FDA regulations 21 CFR 1040.10 and 1040.11 as a Risk Group 1 , LIP ( Laser Illuminated Projector) as defined in IEC 62471:2006 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.



- Failure to comply with the following could result in death or serious injury.
- This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the projector.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage or exposure to laser radiation.
- Do not stare into beam when the projector is on. The bright light may result in permanent eye damage.
- When turning on the projector, make sure no one within projection range is looking into the lens.
- Follow the control, adjustment, or operation procedures to avoid damage or injury from exposure of laser radiation.
- The instructions for the assembly, operation, and maintenance include clear warnings concerning precautions to avoid possible exposure to hazardous laser radiation.

## Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)



**NOTE:** The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

## **Industry Canada statement:**

This device complies with ISED's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.


### **Radiation Exposure Statement:**







This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

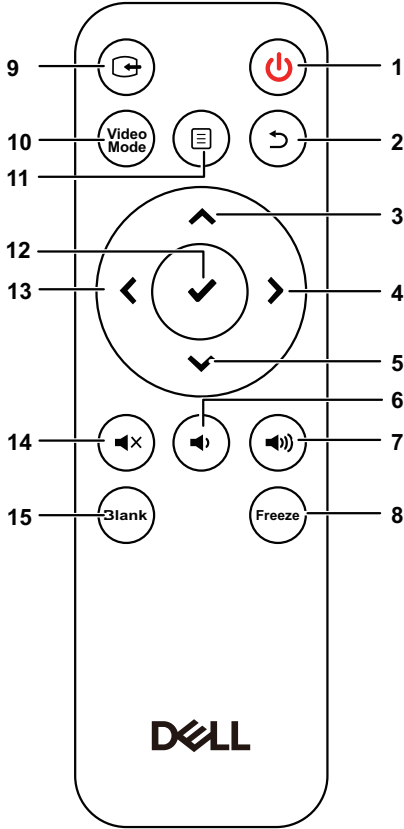





## **Déclaration d'exposition aux radiations:**

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.


## Remote Control



1	Power 	Turns the projector on or off.
2	Back 	Returns to the previous screen.
3	Up 	Press to navigate through the On-Screen Display (OSD) Menu items.
4	Right 	Press to navigate through the On-Screen Display (OSD) Menu items.
5	Down 	Press to navigate through the On-Screen Display (OSD) Menu items.
6	Volume down 	Press to decrease the volume.

7	Volume up 	Press to increase the volume.
8	Freeze	Press to pause the screen image, then press "Freeze" again to resume normal projection.
9	Video in	Press to switch between sources: HDMI 1, HDMI 2, HDMI 3, Wireless/LAN Display, and USB Viewer.
10	Video mode	<p>The projector has preset configurations that are optimized for displaying data (presentation slides) or video (movies, games, etc.).</p> <p>Press the <b>Video Mode</b> button to toggle between <b>Presentation mode</b>, <b>Bright mode</b>, <b>Movie mode</b>, <b>sRGB</b>, or <b>Custom mode</b>.</p> <p>Pressing the <b>Video Mode</b> button once will show the current display mode. Pressing the <b>Video Mode</b> button again will switch between modes.</p>
11	Menu 	Press to activate the OSD.
12	Enter 	Press to confirm the selection.
13	Left 	Press to navigate through the On-Screen Display (OSD) Menu items.
14	Mute 	Press to mute or un-mute the projector speaker.
15	Blank 	Press to toggle between white/blank/resume the image.

## Remote Control Operating Range

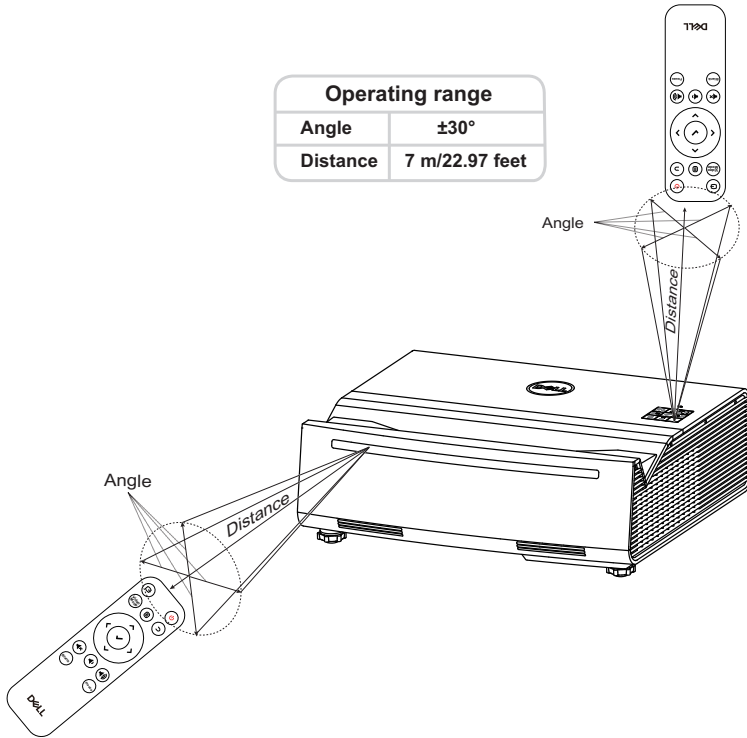

**NOTE:** Actual operating range may slightly differ from the diagram. Weak batteries will also prevent the remote control from properly operating the projector.


# 2

## Adjusting Projector Image


### Aligning Projected Image To A Projection Screen

To ensure that the projected image shows within the surface of a projection screen, use the following method:


- 1 Move the projector close to the screen, and form a rectangular image that is smaller than the screen itself.

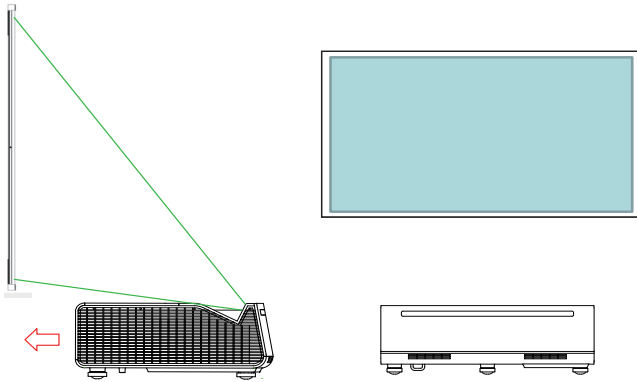


- 2 Check that the bottom edge of the projected image aligns with the bottom edge of screen frame, and the top edge of the projected image is level with the screen.

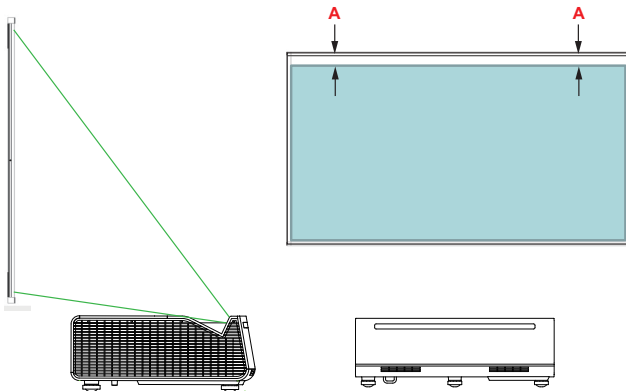

**3** Check that the left and right edges are parallel to the screen. If you are unable to align the sides, skip this step and correct this with 4-Corner adjustment on Page 27 Adjusting Image Corners.

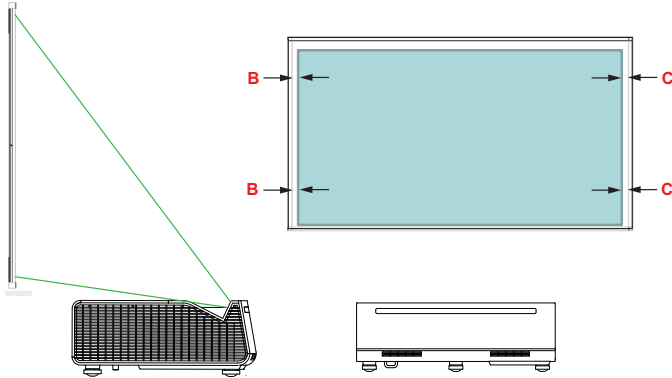


**4** Ensure that the rectangle is in the center of the screen (equal distance from left and right sides of the screen).

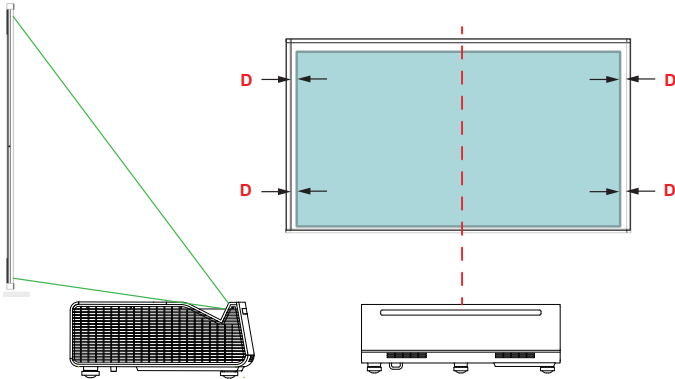




**5** Move the projector backwards slowly to fill the screen.

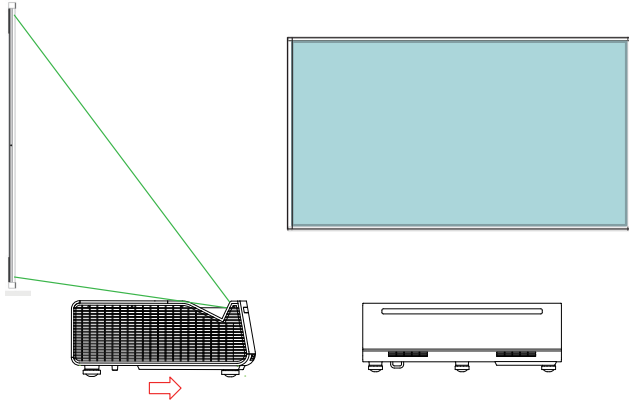


**6** Once the screen is filled, use the 4 corner correction to fine-tune the image shape.

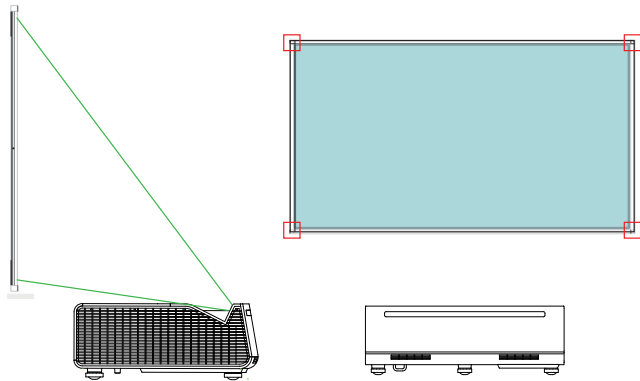



## Adjusting Image Shape

- 1 Turn the **front tilt adjustment wheels** ② and **rear tilt adjustment wheel** ① such that there are no gaps between the projector and wheels.

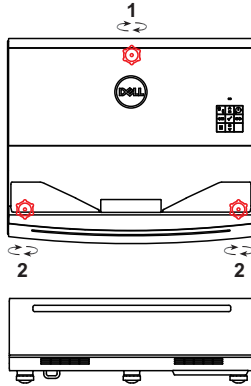


**NOTE:** Adjustment wheels can only be extended/protrude by 2cm, after which they fall out.



- 2 Extend the **rear tilt adjustment wheel** ① if the projected image appears as shown below:

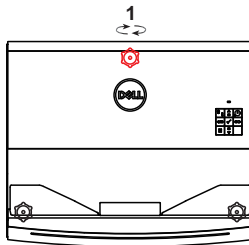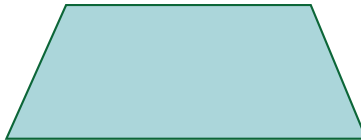



3 Extend the **front tilt adjustment wheels** ② if the projected image appears as shown below:

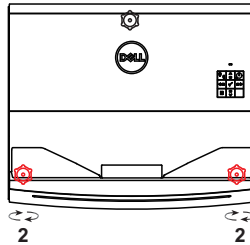



4 Extend the left side **front tilt adjustment wheel** ② if the projected image appears as shown below:

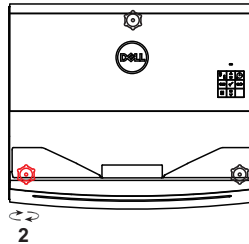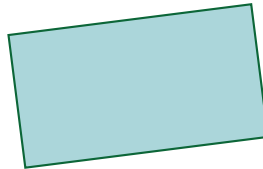



5 Extend the right side **front tilt adjustment wheel** ② if the projected image appears as shown below:

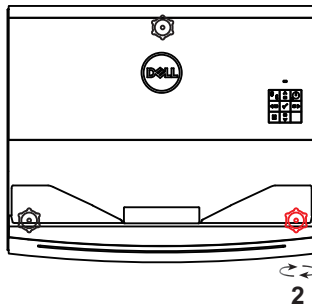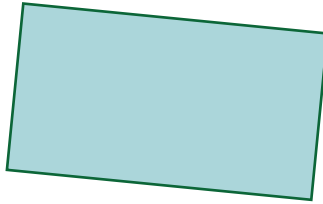


6 In certain situations, it might be necessary to adjust the orientation of projector to correct the distortion on the projected image. Turn the **projector** anticlockwise when the projected image appears shown as below.

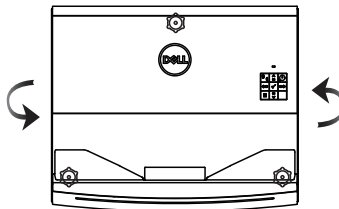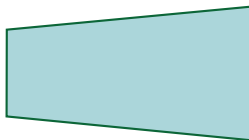

7 Turn the **projector** clockwise when the projected image appears as shown below:

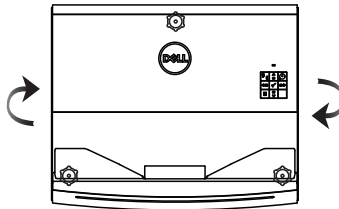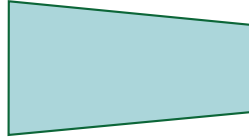

8 If necessary, repeat Steps 2 to 7 to achieve a rectangular projected image. In certain situations, it might be necessary to adjust the projector to be nearer or further away from the wall. For fine adjustment of the projected image, use Keystone Settings as shown on page 27.

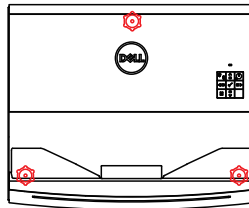


## Adjusting Image Height

### Raising the Projector Image Height

- 1 Extend the **rear tilt adjustment wheel** ① to raise the image.
- 2 Use the keystone settings to make the image shape to be a rectangle. Refer to section on Page 27 Adjusting Image Corners for more information about fine adjustment of the keystone settings.

### Lowering the Projector Image Height

- 1 Extend the **front tilt adjustment wheels** ② to lower the image.
- 2 Use the keystone settings to make the image shape to be a rectangle.

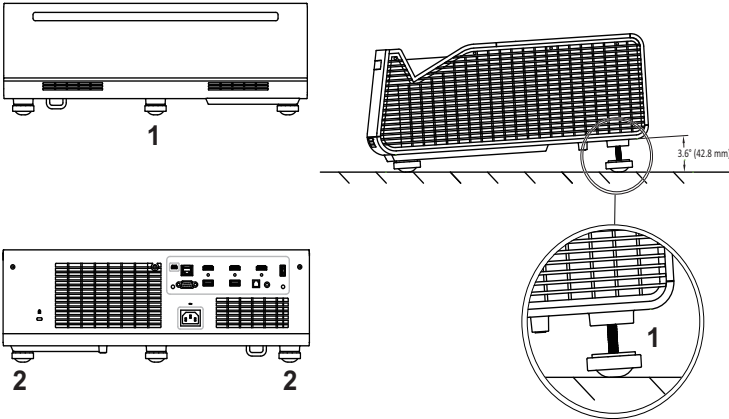


- 
- |   |   |
|---|---|
| 1 | Rear tilt adjustment wheel<br>(Angle of tilt: 0 to 3.6 degrees) |
| 2 | Front tilt adjustment wheel                                     |
-

## Projector Image Focus Adjustment

1 The Dell S718QL supports power focus. When the projection screen is blurred, you can use the **Power Focus** option to adjust the screen until it is clear.

**Steps: Advanced Settings > Projector Settings > Focus Adjust**

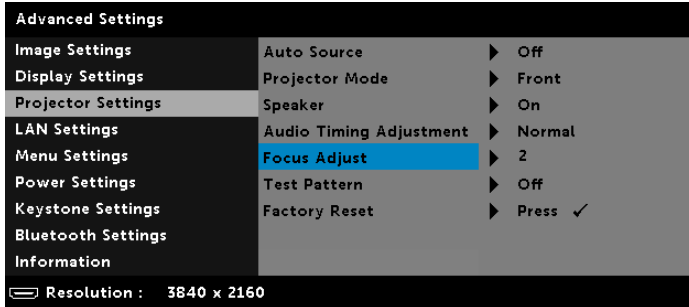


2 Adjust the focus until the image is clear. The projector focuses at distances ranging between 3.9 inches to 8.9 inches (9.9 cm to 22.6 cm).

## Quick Focus Adjustment


1 With the On-Screen Display (OSD) not shown, press and hold the **right button** on the projector control panel for 2 seconds.



2 A quick focus adjustment screen will pop up.

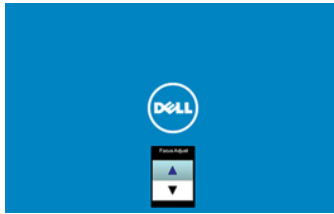

3 Adjust the focus of your projected image by pressing the **up and down buttons** on the projector control panel.

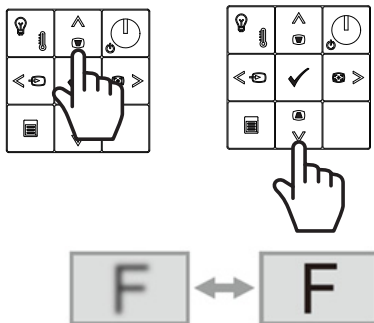




## Adjusting Projector Position


When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Follow these general guidelines:

- When positioning the projector to the screen, it must be at least 3.9 inches (9.9 cm) and not more than 8.9 inches (22.6 cm) from the projection screen.
- The size of the projected image is dependent on the distance between the projector and the screen. Move the projector further away from the screen to obtain a larger projected image.
- Position the projector to the required distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- Lens throw ratio: 0.189


You can set up or install the S718QL in the following ways:

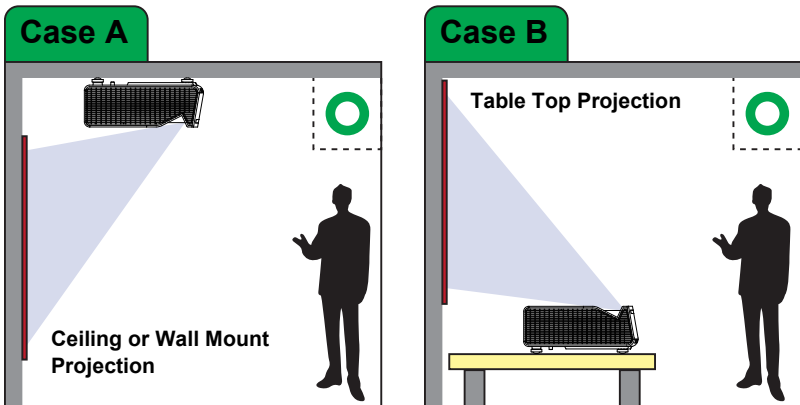


### Case C

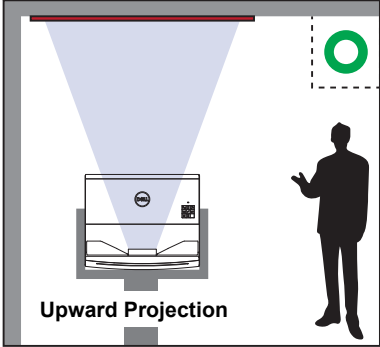

### Case D

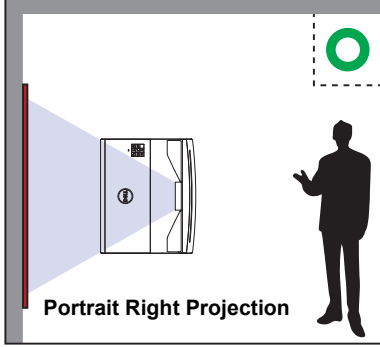


### Case E

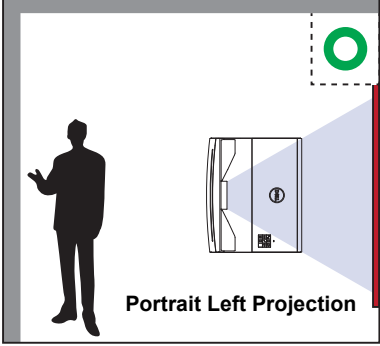


## Adjusting Image Corners


Use 4 corner adjustment features to get perfect, rectangular images.

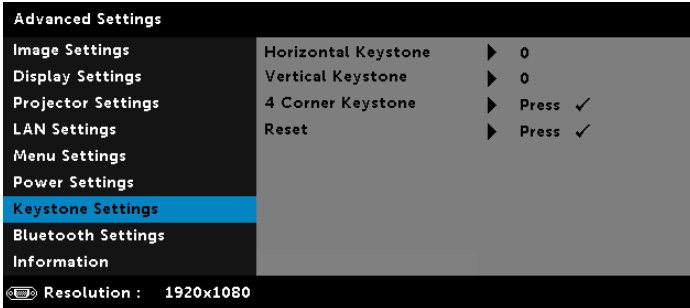

- 1 Advanced Settings > Keystone Settings > 4 Corner Keystone
- 2 Press ✓ to start adjusting the first corner. Use ▲, ▼, ◀ or ▶ to move the corner position. Once satisfied with the new position of the corner, press ☰ to return to the previous step.

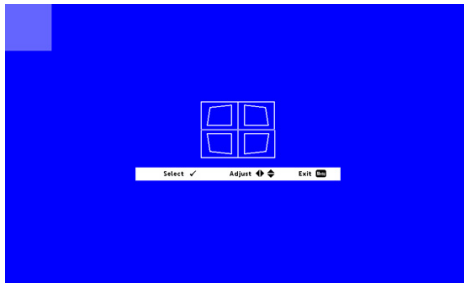


- 3 Use ▲, ▼, ◀ and ▶ to select another corner to adjust. Repeat Step 2 to adjust the corner to desired position.

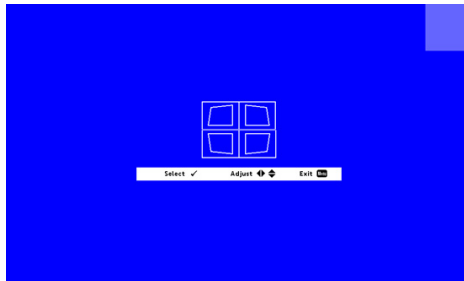

- 4 Repeat Step 3 to select another corner to adjust.
- 5 When you are finished, press ☰ button to exit.


# Adjusting Image Size

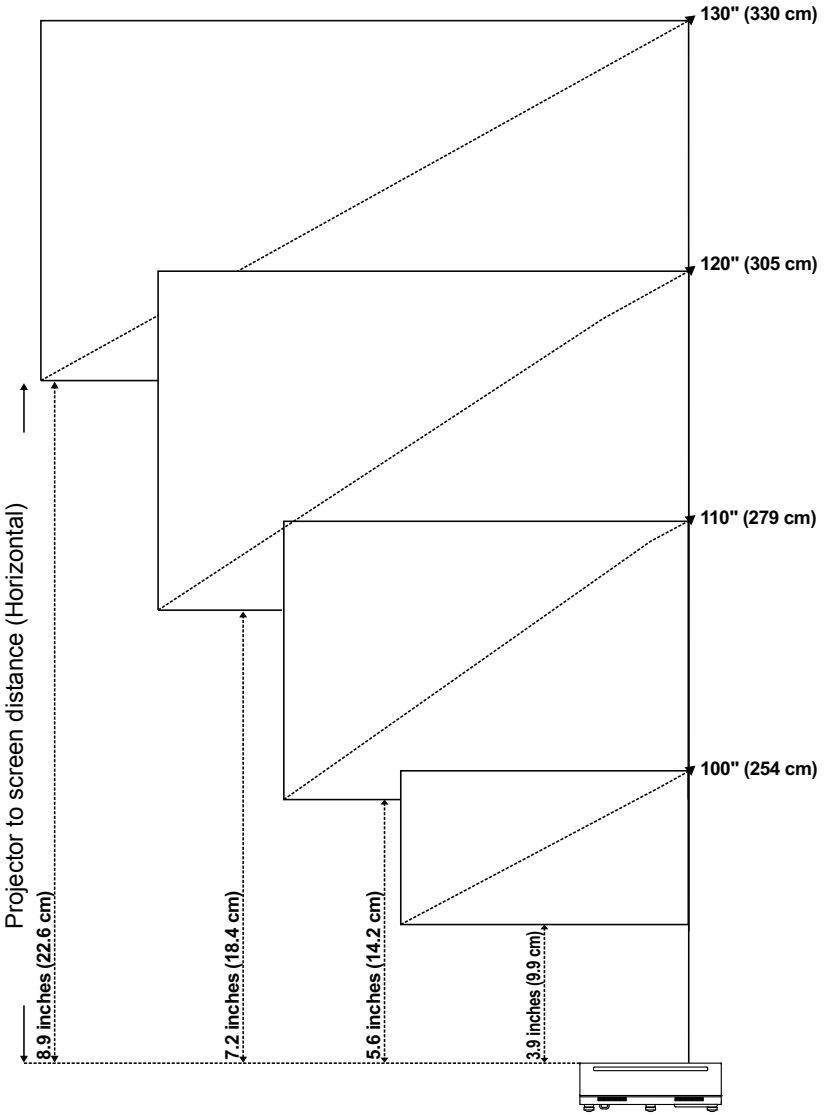

Projection Distance (L1)		Image size						Distance from top of image to top of projector (L2)	
		Diagonal (S1)		Width (S2)		Height (S3)			
inch	cm	inch	cm	inch	cm	inch	cm	inch	cm
3.9	9.9	100	254	87.1	221.2	49.0	124.5	7.3	18.6
5.6	14.2	110	279	95.8	243.3	53.9	137.0	8.2	20.9
7.2	18.4	120	305	104.5	265.4	58.8	149.4	9.1	23.1
8.9	22.6	130	330	113.2	287.5	63.7	161.9	10.0	25.4

\* This graph is for user reference only.

\* Offset Ratio: 118%

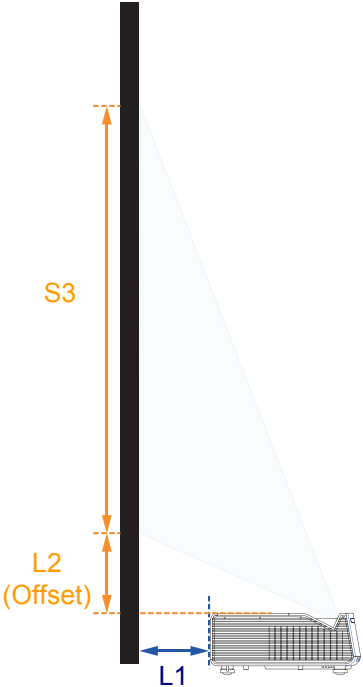

## Cleaning the Projector's Lens

Clean the projector's lens periodically, or whenever you notice dust or smudges on the surface.

- 1 Turn off the projector power and disconnect the power cord.
- 2 Let the projector cool for at least 30 minutes.
- 3 Use air blower bulb to blow off dust on the lens or gently wipe the lens by using a microfiber cleaning cloth.
- 4 If significant dust, dirt, or smudges are still bound to the surface of the lens, moisten a lint-microfiber cloth and gently wipe until clean.



### **CAUTION:**

- **Never touch lens with bare hands to prevent fingerprints on or damage to the lens surface.**
- **Never use cleaners that contain flammable gas.**
- **Do not use glass cleaner.**

# 3


## Using Your Projector

### Using Network Display


#### Configure Your Projector for Network Display



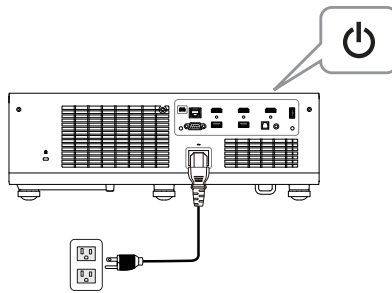


##### *Connect Projector to the Network*

- 1 Connect the power cable and turn on the projector by pressing the power button.

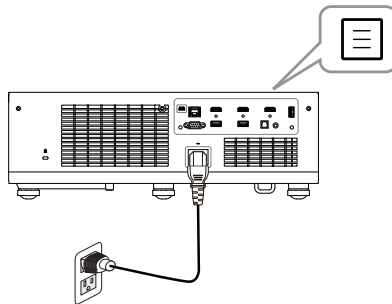


- 2 Press the **Menu** button on your projector control panel or remote control.




**NOTE:** Use , ,  and  buttons to navigate and  to select.


3 Ensure DHCP option is **Off** from LAN settings of Advanced Settings menu.

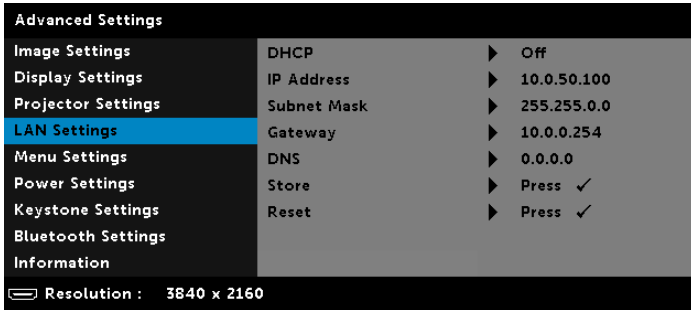

4 Access the **Input Source** menu, select **Network** source.

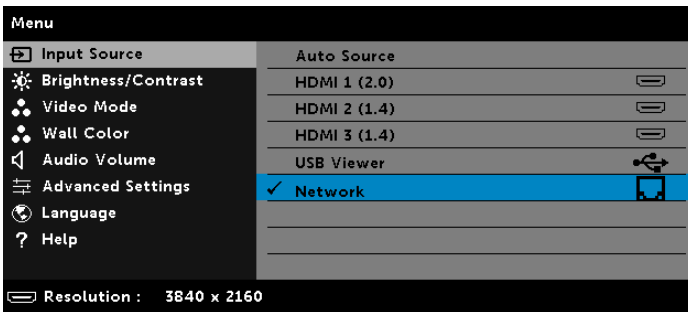

The **Network Guide Screen** shown below appears:

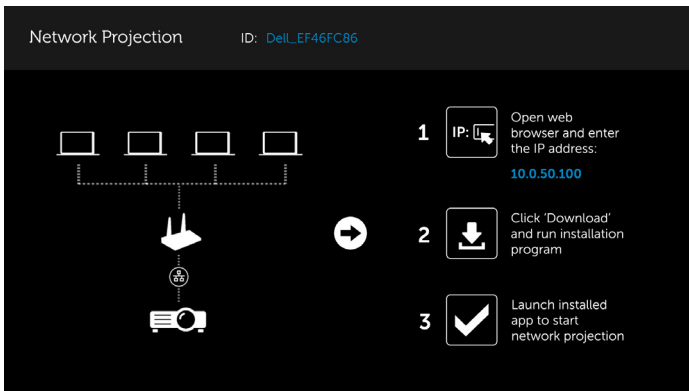




## Connect Projector Directly to the Computer


### A. Cable Connections

5 Connect the LAN cable to the projector and the computer.

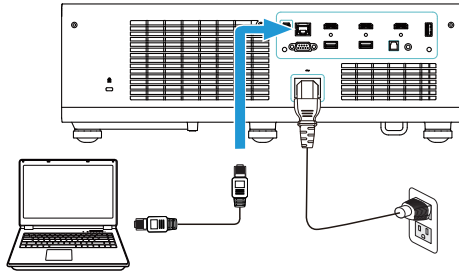


### B. Network Switch/Hub

6 Connect the LAN cable to the projector and the computer via the network switch/hub.

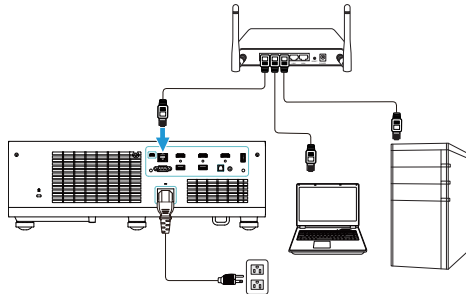

7 DHCP of LAN Settings switches to **On**.

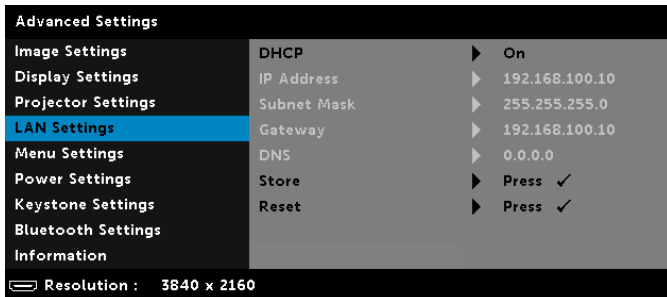


**NOTE:** If the DHCP setting is set to On, the IP sharing device will automatically assign a set of IP Address, Subnet Mask, and Gateway.


## Instructions for installing Dell Network Projection Software on Windows PC

1 Open Local Area Connection Properties, and then enter the IP Address and Subnet Mask, click OK.


**Steps: Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Setting > Local Area Connection**

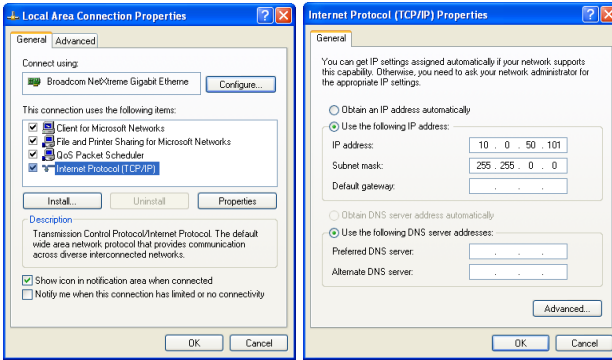

 
2 Open the Internet browser on your computer, and enter **10.0.50.100** (default) in the browser's address bar. You will be directed to the **Dell S718QL Web Management** page.



3 The S718QL Web Management page opens. For first-time use, click **Download**.

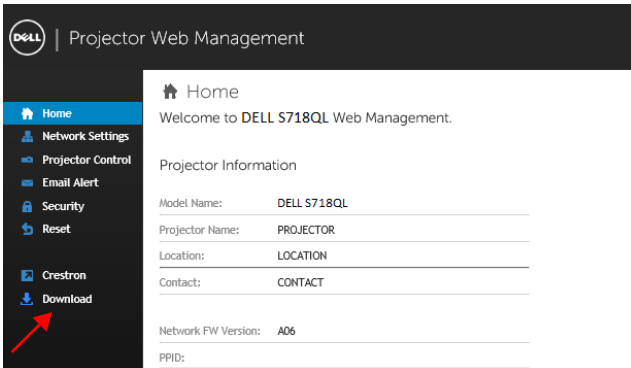


4 At the **Download** page, click **Download Network Projection App For Windows 10/8/7/Vista/XP** and install to your computer.

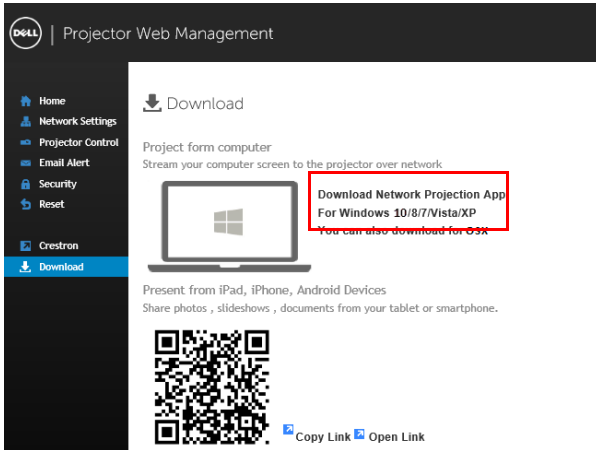

**NOTE:** If you are unable to install the application because of inadequate rights on the computer, please contact your network administrator.

5 Click **Run** to proceed with the one-time installation of the software.

6 The installation software will launch. Follow the on-screen instructions to complete setup.

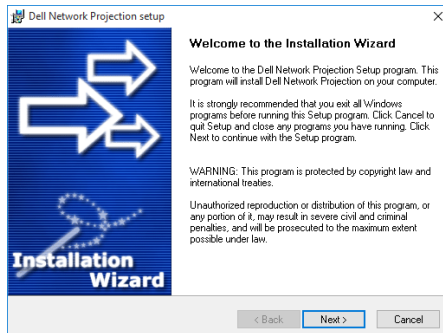


**NOTE:** Alternatively you can download the latest version of the Dell Network Projection application from [dell.com/support](http://dell.com/support)


## Install Dell Network Projection Software on the Mac

1 Open Local Area Connection Properties, and then enter the IP Address and Subnet Mask, click OK.


**Steps: Go > Applications > System Preferences > Network**

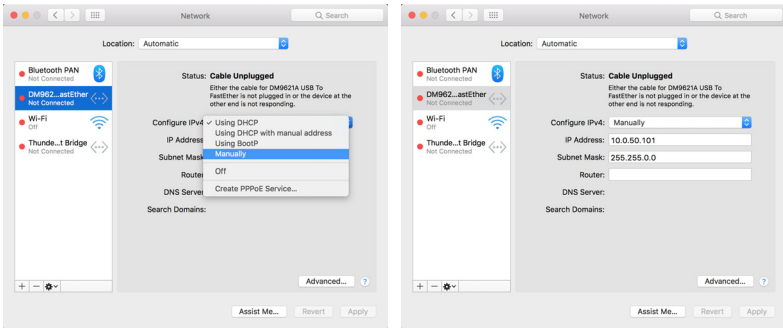

 
2 Open the Safari browser on your Mac computer, and enter **10.0.50.100** (default) in the browser's address bar. You will be directed to the **Dell S718QL Web Management** page.



3 The S718QL web management page opens. For first-time use, click **Download**.

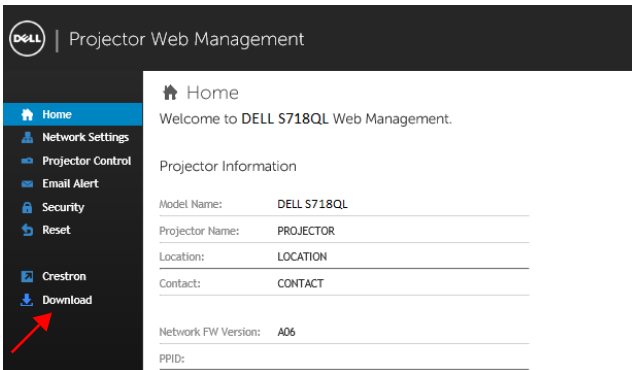


4 At the **Download** page, click **You can also download for OSX** and install to your computer.

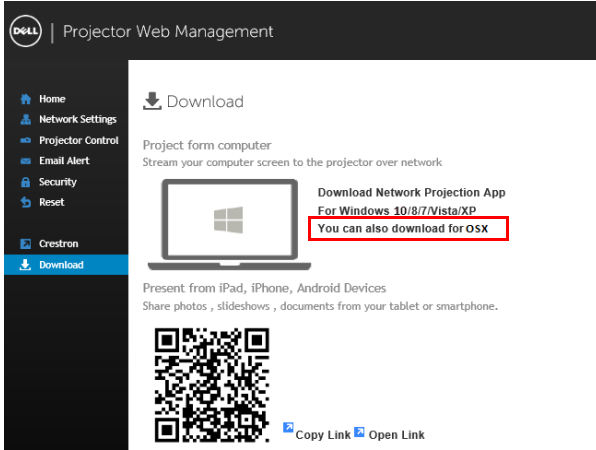


**NOTE:** If you are unable to install the application because of inadequate rights on the computer, please contact your network administrator.


5 Running **Dell\_Network\_Projection\_Mac.pkg** from **Downloads** folder.

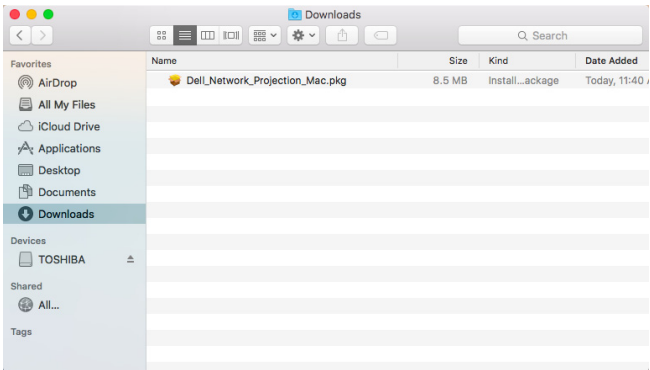


6 The installation software will launch. Follow the on-screen instructions to complete setup.

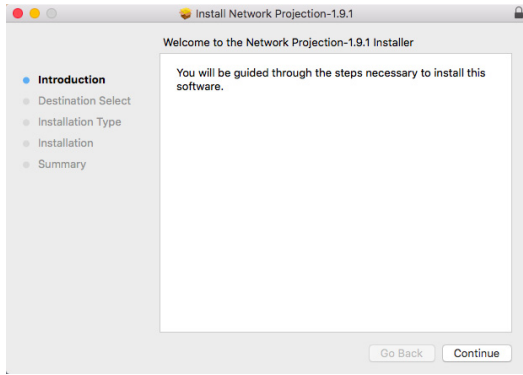


### Using the Dell Network Projection App (Windows)

Once the installation is completed, you can double-click  icon on the desktop to start the application.


The **Dell Network Projection Screen** shown below appears:

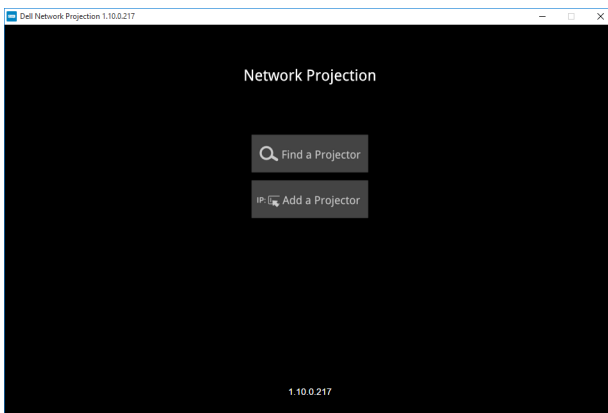

1 At **Dell Network Projection** screen, click **Find a Projector**, and then select **Dell\_42FE21E1** (This is an example. The actual network name of your projector will differ from this example.). This is the name and code that will be projected, when your projector is set to the 'Network' source.

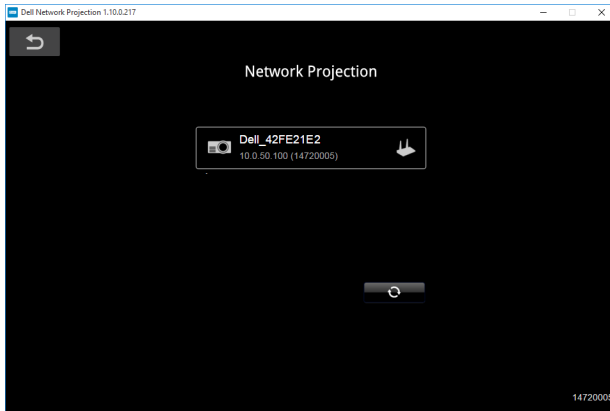


2 In order to start presenting, click on the first icon until **"Mirror On"** is shown.

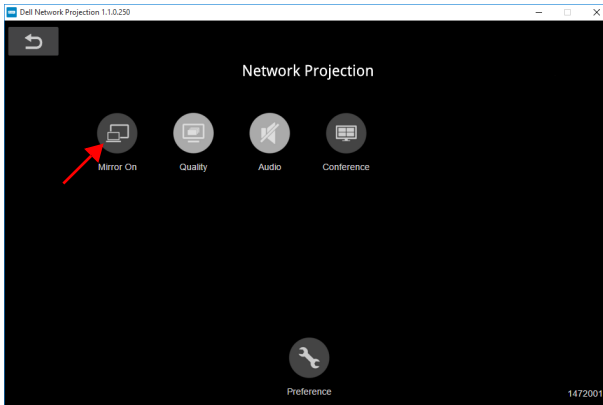


## Using the Dell Network Projection App (Mac)


1 1. Go to **Applications** folder, and then open the **Network Projection** folder.

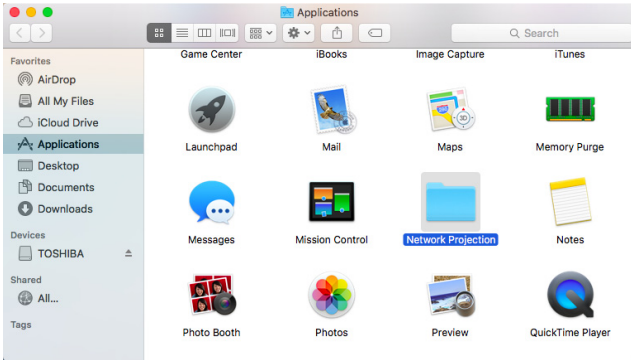

2 Running **Network Projection** application from Network Projection folder.

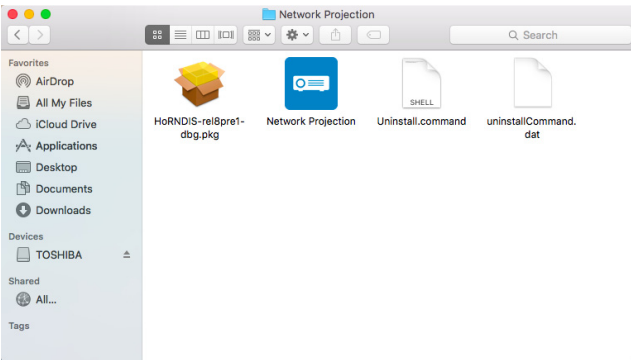


The **Dell Network Projection Screen** shown below appears:

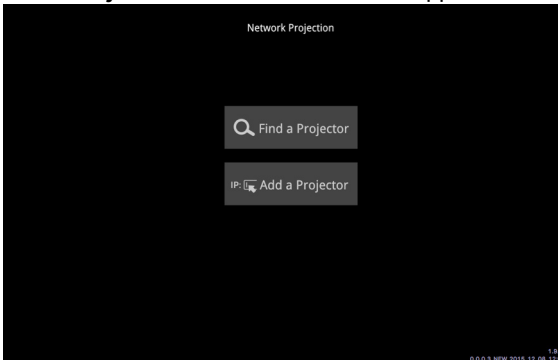




3 At the **Dell Network Projection** screen, click **Find a Projector**, and then select **Dell\_CCDDEE01** (This is an example. The actual network name of your projector will differ from this example.). This is the name and code that will be projected, when your projector is set to the 'Network' source.

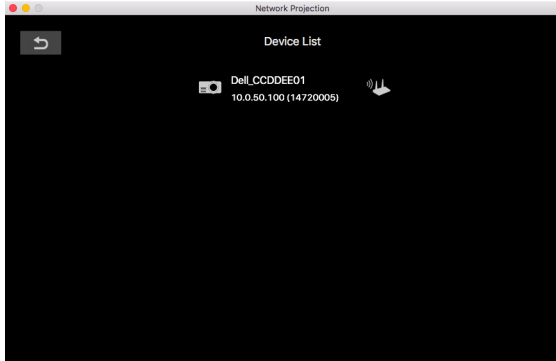


4 In order to start presenting, click on the first icon until "**Mirror On**" is shown.

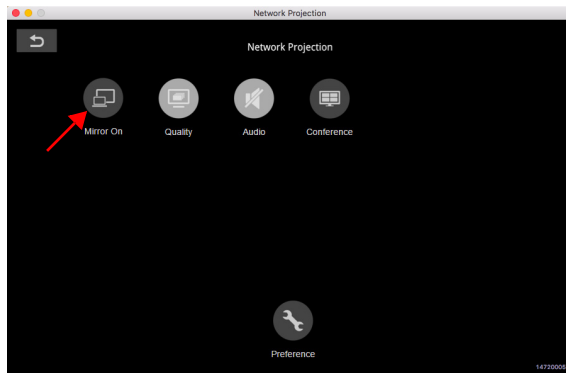


## Split Screen

After the network projection connects, click **Conference** button to activate the split screen feature.

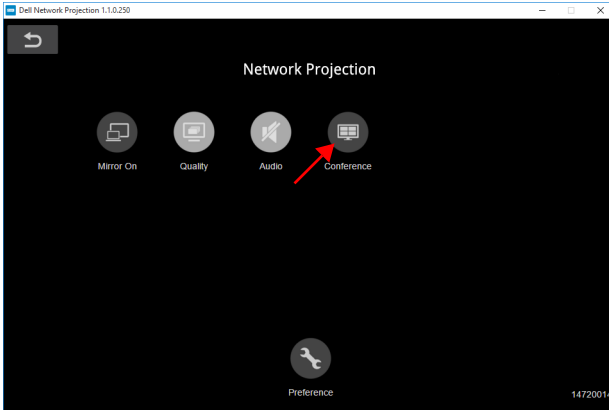

## Preference

Click **Preference** button to activate the fast connection settings.

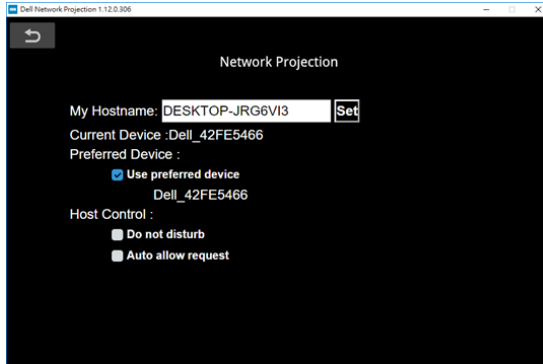

**MY HOSTNAME**—Allows you to change the computer hostname.

**CURRENT DEVICE**—Display the current device name.


**PREFERRED DEVICE**—Connect to the computer and the projector using the "Preferred Device".






### HOST CONTROL

**DO NOT DISTURB**—Users are not allowed to connect to the projector.

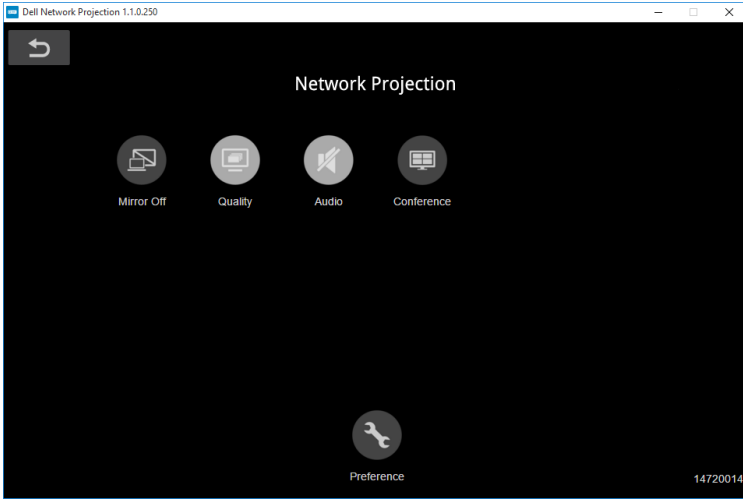**AUTO ALLOW REQUEST**—Allows users to connect to the projector.

## Understanding the Buttons



Item	Description
<b>Control Toolbar</b>	
 Mirror Off/On	Click to toggle network projection On/Off and screen extension.
 Quality	Click to toggle High/Low quality.
 Audio	Click to toggle audio On/Off.
 Conference	Click to activate the conference control.
 Preference	Click to activate the fast connection settings.

# Using PC-Free Presentation

## Multimedia File Type Support

### *Photos*

Media Type	Ext Name	Version Support	Detailed Specification
JPEG	jpg/jpeg		Baseline mode: size <=65536 x 65536 Progressive baseline: <ul style="list-style-type: none"><li>• color mode=444, size &lt;= 2080 x 2080</li><li>• color mode=(422, 440), size &lt;=2544 x 2544</li><li>• color mode=(420, 400, 411, others), size &lt;=2944 x 2944</li></ul> JPEG (CMYK) is not supported
BMP	bmp		Size<=65536 x 65536
PNG/GIF	png/gif		PNG<=65536 x 65536 GIF<=65536 x 65536 Animation mode is not supported
TIFF	tiff		TIFF<=3264 x 2176


## Audio

File Type	File Extension	Version Support	Detailed Specification
Mpeg-1 Layer 3	mp3		VBR: bit rate: 8~320 Kbps
WMA	wma/asf	WMA 7~9.1	Bit rate: CBR up to 320 kbps, VBR up to 256 kbps
WMV	wav		Sampling rate: 8KHz; Bit rate: 32Kbps
LPCM	n/a (included in the video only)	LPCM	LPCM: Sampling rate: 8KHz~192KHz; Bit rate: 64~4608 Kbps
ADPCM	n/a (included in the video only)	1. Microsoft ADPCM 2. IMA ADPCM (DVI_ADPCM) 3. SWF ADPCM 4. QT IMA ADPCM	Microsoft ADPCM: Sampling rate: 8KHz; Bit rate: 32 Kbps
OGG Vorbis	ogg		CBR: Sampling rate: 32K~192KHz VBR: Up to 500 Kbps (spec)
AMR	amr/3ga		

## Video


File Type	Video Type	Audio Type	Detailed Specification
MP4 (.mov, .mp4)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P
MP4 (.mp4)	H.265/HE VC	MPEG-Audio HE-AAC, LC- AAC	H.265: 1. MP@L5.1 Main Tier 2. 4K@60P 10bit
AVI (.avi)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	MPEG-1: support up to 1080@60p H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P
FLV (.flv)	MPEG-4 AVC (H.264)	LPCM MPEG-Audio	H.264: 4K@24P
F4V (.f4v)	H.264	HE-AAC MP3	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P
MKV (.mkv)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P
MKV (.mkv)	H.265/HE VC VP9	MPEG-Audio HE-AAC, LC- AAC	H.265: 1. MP@L5.1 Main Tier 2. 4K@60P 10bit

## Setting up to present using External USB Storage


 **NOTE:** A USB flash disk must be plugged into the projector if you want to use the USB media playback feature.

Follow these steps to display the Video, Audio, Photo, or PDF files on your projector:


- 1 Connect the power cable and turn on the projector by pressing the power button.

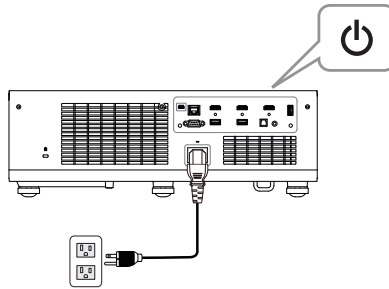

- 2 Plug in a **USB flash disk** to your projector.

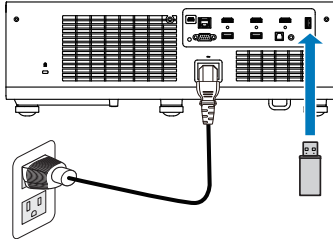

- 3 Press the **Menu** button on the control panel or remote control.
- 4 Access the **Input Source** menu, select **USB Viewer** source.

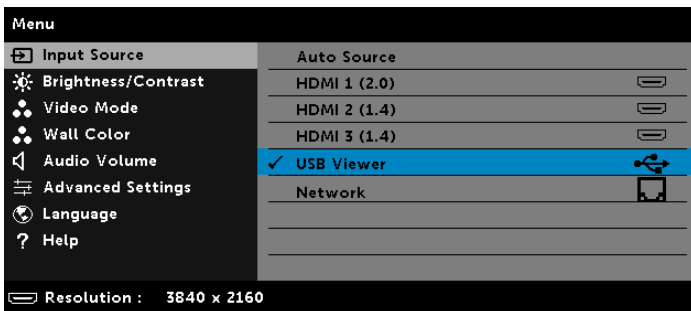



5 Go to USB Viewer menu:

- a You can play **Video**, **Music**, or **Photo** files, or select **Setting** option to change multimedia settings.



The **Video Source Screen** shown below appears:




At the Video playback screen, press the ✓ button on the control panel or remote control to access the video playback control. Then you can use the following buttons on the screen to control video playback.




The **Music Source Screen** shown below appears:

 





At the Music playback screen, press the  button on the control panel or remote control to access the music playback control. Then you can use the following buttons on the screen to control music playback.



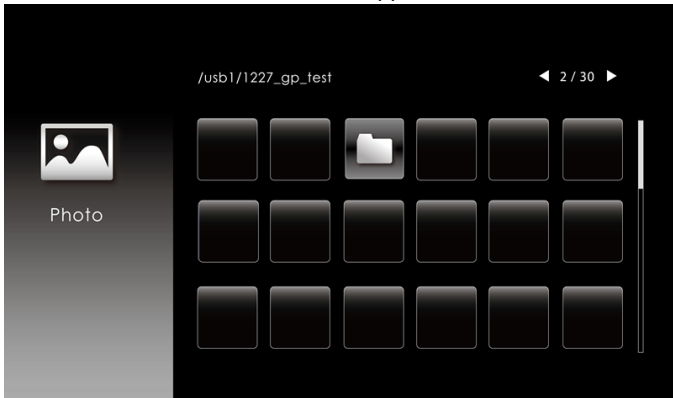


The **Photo Source Screen** shown below appears:



At the Photo playback screen, press the  button on the control panel or remote control to access the photo playback control. Then you can use the following buttons on the screen to control photo playback.


								
Rotate Right	Rotate Left	Zoom +	Zoom -	Up / Down / Left / Right (in Zoom mode)				Reset

		
Slideshow	Information	Slideshow settings

The **Setting Source Screen** shown below appears:



- b You can also play **MS Excel, MS Word, MS PowerPoint, or PDF** files via **Document** option.

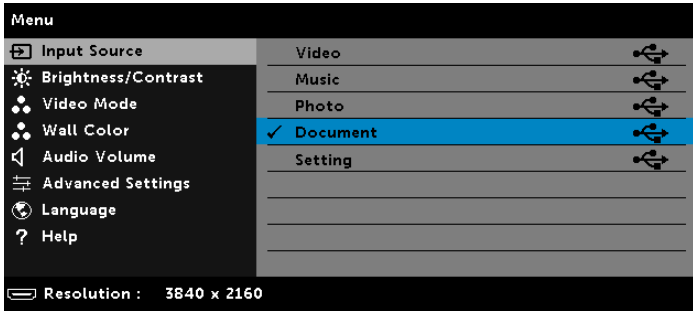

The **Document Screen** shown below appears:



## Buttons Introduction ( In USB Viewer)

Button	Up	Down	Left	Right	Enter	Menu	Return
Control Panel	Up	Down	Left and Source Menu (Hold 2 seconds)	Right and quick focus screen (Hold 2 seconds)	Enter	Return	N/A
Remote Control	Up	Down	Left	Right	Enter	Return	Return

## Office Viewer File Type Support

The office viewer feature allows you to play the MS Excel, MS Word, MS PowerPoint, and PDF files.

File Type	Support Version	Pages/Lines Limitation	Size Limitation
Adobe PDF		Up to 1000 pages (One file)	Up to 75 MB
MS Word	Word 97, 2000, 2002, 2003 Word 2007, 2010 (.docx)	Because office viewer does not load all pages of MS Word file at the same time, there are no obvious limitations of page and line.	Up to 100 MB

MS Excel	Excel 97, 2000,2002, 2003	Row Limit: up to 595 / Column Limit: up to 256	Up to 15 MB
	Excel 2007, 2010 (.xlsx)	Sheet: up to 100	
	Office XP Excel	Note: Any one of three limitations above cannot appear on one Excel file simultaneously	
MS PowerPoint	PowerPoint 97	Up to 1000 pages (One file)	Up to 19 MB
	PowerPoint 2000, 2002, 2003		
	PowerPoint 2007, 2010 (.pptx)		
	Office XP PowerPoint		
	PowerPoint presentation- 2003 and earlier*.pps)		
PowerPoint presentation- 2007 and 2010(.ppsx)			

## Set-up Bluetooth Speaker




### NOTE:


- a Bluetooth transmitter range is 10 m.
- b Bluetooth sound profile supports Stereo (2 channel).
- c The S718QL projector Bluetooth transmitter can only communicate with one Bluetooth speaker at a time.
- d Once a Bluetooth speaker is paired, the projector will automatically connect to it when the projector is turned on.
- e If there is a time lag between the projector's speaker and the Bluetooth speaker, you may choose to disable the projector's speaker.

## Connecting to Bluetooth Speaker


- 1 Connect the power cable and turn on the projector by pressing the power button.

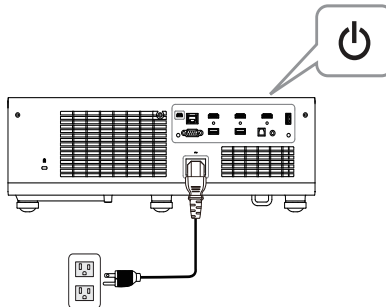


- 2 Access the **Advanced Settings** menu. Select the **Bluetooth Settings** and then turn-on **Bluetooth** feature on the sub-menu.

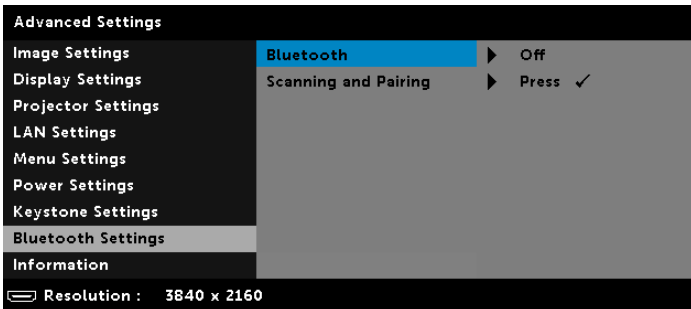


3 When the Bluetooth function is enabled, select Scanning and Pairing, and then press the **Enter** button to enter the **Scanning and Pairing** screen.

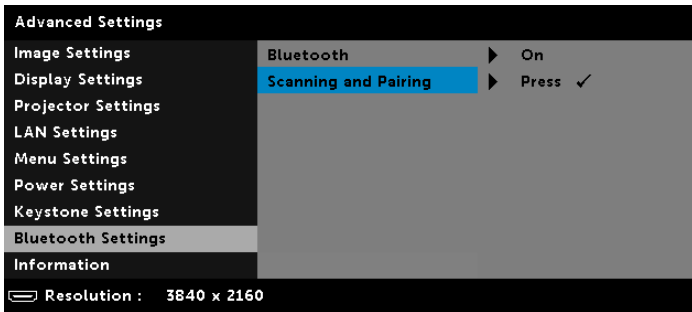

a Click **Scan** button.

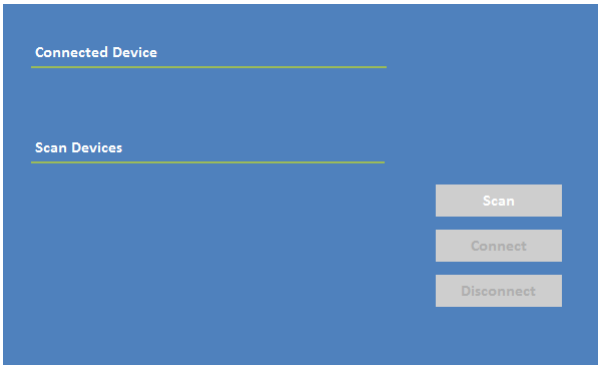



b When the Scan Devices list appears, select **Device 1** and click the **Pairing** button.

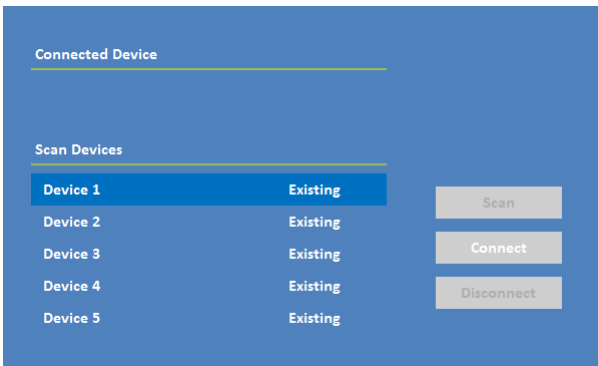




## Disconnect the Bluetooth Speaker


- 1 Connect the power cable and turn on the projector by pressing the power button.

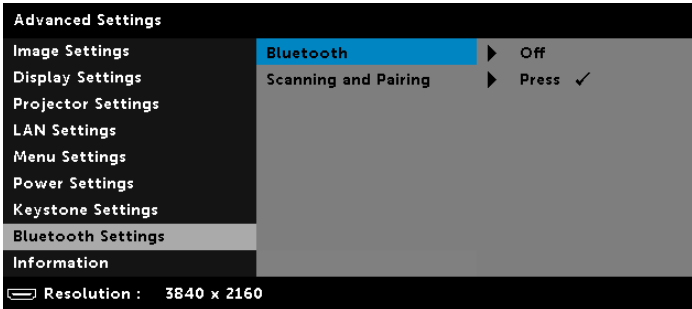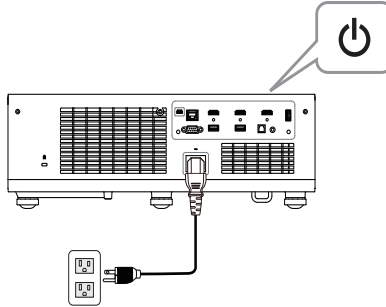

- 2 Select Scanning and Pairing, and then press the **Enter** button to enter the **Scanning and Pairing** screen.

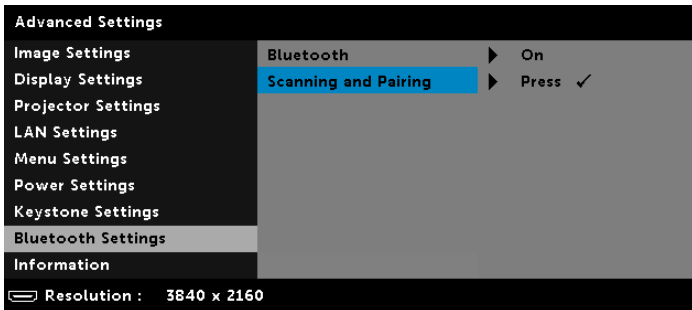


3 When you into **Bluetooth Scanning and Pairing** sub-menu, and then click **Disconnect** button.

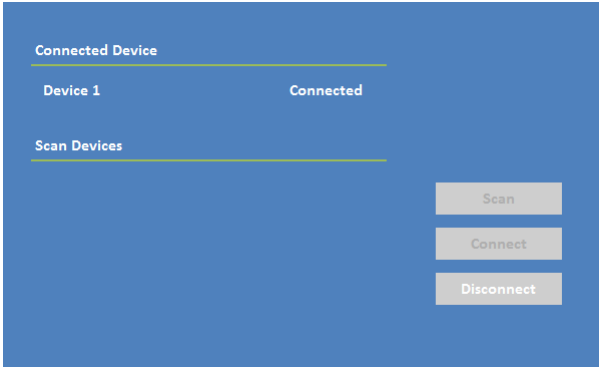


## Turn Off the Projector Speaker

- 1 Access the **Advanced Settings** menu. Select the **Projector Settings** and then turn-off Speaker (default is On) on the sub-menu.

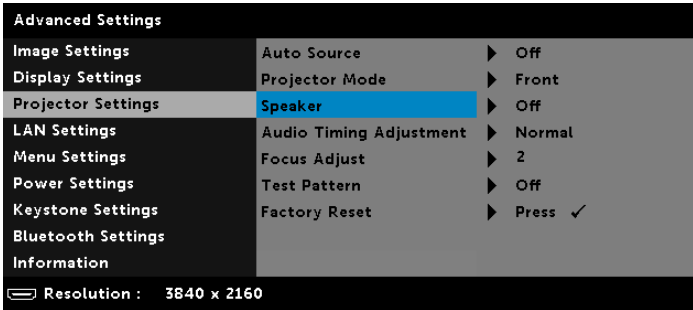

**NOTE:** The **Speaker** option refers only to the projector internal speaker.

- 2 When you press the **Mute** button on the remote control, the projector speaker, the external audio, SPDIF, and Bluetooth speakers will be turned off.

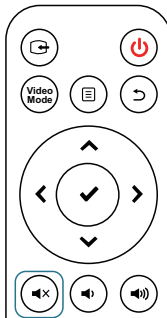

- 3 Once the 3.5 mm mini phone jack external speaker are connected, the internal speaker will be automatically turned off. But Bluetooth speakers will not be affected by internal speaker or 3.5 mm mini phone jack external speaker.

## Using High Dynamic Range (HDR)




### NOTE:


- a Only HDMI-1 port can support HDR feature.
- b PQ functions cannot be adjusted in HDR mode.

Follow these steps to activate HDR feature:

- 1 Connect the power cable and turn on the projector by pressing the power button.

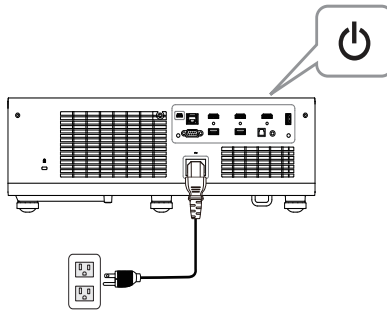


- 2 Connect the **HDMI 2.0 cable** to the projector HDMI-1 port and the computer or DVD player.

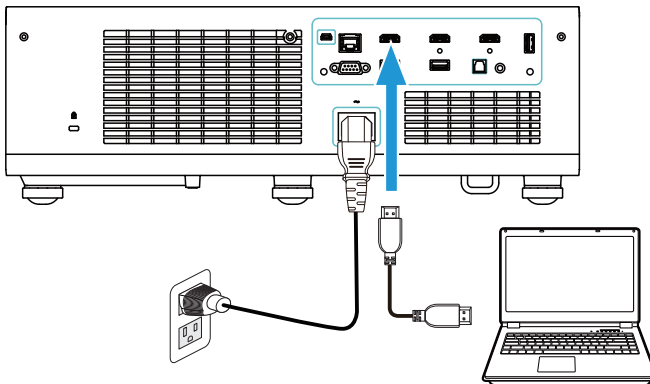

**NOTE:** Your computer or DVD player must support the HDR function.

3 Access the **Display Settings** menu, select **HDR** and then follow the functionality difference to select **Auto**, **HDR Bright**, or **Off** on the sub-menu.

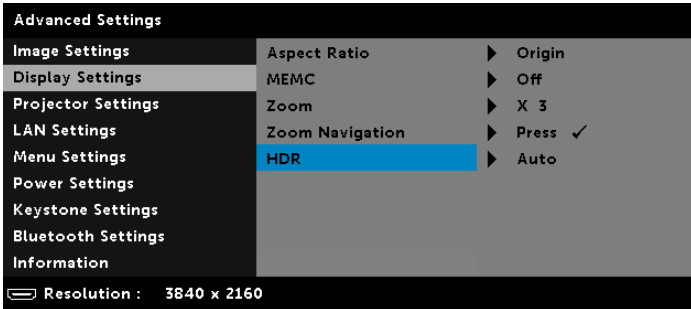

# 4


## Troubleshooting

### Troubleshooting Tips



If you experience problems with your projector, see the following troubleshooting tips. If your problem persists, please contact Dell.



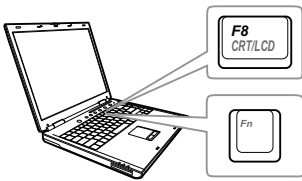

#### Problem

No image appears on the screen



#### Possible Solution

- Ensure that you have chosen the correct input source on the INPUT SOURCE menu.
- Ensure the external graphics port is enabled. If you are using a Dell laptop computer, press   (Fn+F8). For other computers, see your respective documentation. If images are not displayed properly, please upgrade the video driver of your computer. For Dell computers, see [www.dell.com/support](http://www.dell.com/support).
- Ensure that all the cables are securely connected. See "Adjusting Projector Image" on page 15.
- Ensure that the pins of the connectors are not bent or broken.
- Use the Test Pattern in the Projector Settings of the Advanced Settings menu. Ensure that the colors of the test pattern are correct.

<b>Problem (continued)</b>	<b>Possible Solution (continued)</b>
Partial, scrolling, or incorrectly displayed image	<p>If you are using a Dell laptop computer, set the resolution of the computer to 4K (3840 x 2160):</p> <ul style="list-style-type: none"> <li>aRight-click the unused portion of your Microsoft® Windows® desktop, click <b>Screen Resolution</b>.</li> <li>bVerify that the setting is 3840 x 2160 pixels for the external monitor port.</li> <li>cPress   (Fn+F8).</li> </ul> <p>If you experience difficulty in changing resolutions, or if your monitor freezes, restart all the equipment and the projector.</p> <p>If you are not using a Dell laptop computer, see your documentation. If images are not displayed properly, please upgrade the video driver of your computer. For a Dell computer, see <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>
The screen does not display your presentation	<p>If you are using a portable computer, press   (Fn+F8).</p>
Image color is incorrect	<ul style="list-style-type: none"> <li>• If the display receives the wrong signal output from the graphics card, please set the signal type to <b>RGB</b> in the <b>OSD Image Settings</b> of the <b>Advanced Settings</b> tab.</li> <li>• Use <b>Test Pattern</b> in the <b>Projector Settings</b> of the <b>Advanced Settings</b> menu. Ensure that the colors of the test pattern are correct.</li> </ul>
Image is out of focus	<ol style="list-style-type: none"> <li>1 Adjust the focus until the image is clear. Use <b>Focus Adjust</b> in the <b>Projector Settings</b> of the <b>Advanced Settings</b> menu.</li> <li>2 Ensure that the projection screen is within the required distance from the projector (3.9 inches [9.9 cm] ~ 8.9 inches [22.6 cm]).</li> </ol>

<b>Problem (continued)</b>	<b>Possible Solution (continued)</b>
The image is stretched when displaying a 16:9 DVD	<p>The projector automatically detects the input signal format. It will maintain the aspect ratio of the projected image according to the input signal format with an Original setting.</p> <p>If the image is still stretched, adjust the aspect ratio in the Display Settings of the Advanced Settings menu in the OSD.</p>
Image is reversed	Select <b>Projector Settings</b> of the <b>Advanced Settings</b> from the OSD and adjust the projector mode.
TEMP light is solid amber	The projector has overheated. The display automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, please contact Dell.
TEMP light is blinking amber	If the projector fan fails, the projector will automatically shut down. Try to clear the projector mode by pressing and holding the <b>Power</b> button for 10 seconds. Please wait for about 5 minutes and try to power up again. If the problem persists, please contact Dell.
The remote control is not operating smoothly or works only within a limited range	The battery may be low. If so, replace with new CR2032 battery.
LAN control support	<ul style="list-style-type: none"> <li>• Web Control functions were verified on IE9, IE10, and IE11. The other version may have compatibility problem.</li> <li>• The Compatibility View setting should be disabled. Otherwise the web control page may have icon or content display abnormal issue.</li> </ul>



## Guiding Signals

Projector Status	Description	Control Buttons	Indicator	
		Power	TEMP (Amber)	LAMP (Amber)
Standby mode	Projector in Standby mode. Ready to power on.	White Flashing	OFF	OFF
Warming up mode	Projector takes some time to warm up and power on.	White	OFF	OFF
Laser Diode on	Projector in Normal mode, ready to display an image. <input checked="" type="checkbox"/> Note: The OSD menu is not accessed.	White	OFF	OFF
Cooling mode	Projector is cooling to shutdown.	White	OFF	OFF
Projector overheated	Air vents might be blocked or ambient temperature may be above 40°C. The projector automatically shuts down. Ensure that the air vents are not blocked and that the ambient temperature is within operational range. If the problem persists, please contact Dell.	OFF	AMBER	OFF
Fan breakdown	One of the fans has failed. The projector automatically shuts down. If the problem persists, please contact Dell.	OFF	AMBER Flashing	OFF
Laser Diode driver overheated	Air vents might be blocked or the Laser Diode driver has overheated. The projector will automatically shut down. Turn the display on again after the projector cools down. If the problem persists, please contact Dell.	AMBER	AMBER	OFF
Color Wheel breakdown	Color wheel cannot start. The projector has failed and the projector automatically shuts down. Unplug/plug the power cord and then turn on the projector. If this problem persists, please contact Dell.	White	AMBER Flashing	AMBER Flashing
Laser Diode failure	Laser Diode is defective.	OFF	OFF	AMBER
Fault - DC supply (+12V)	Power supply has been interrupted. The projector automatically shuts down. Unplug/plug the power cord and then turn on the projector. If this problem persists, please contact Dell.	AMBER Flashing	AMBER	AMBER


# 5

## Maintenance


### Replacing the Remote Control Battery

- 1 Rotate the battery lid counterclockwise to remove the battery cover.

- 2 Insert a CR2032 coin cell battery and align the polarity correctly according to the marking in the battery holder.

 **NOTE:** When you use the remote control for the first time, there is a plastic sheet between the battery and its contact. Remove the sheet before use.


- 3 Rotate the battery lid clockwise to mount the battery cover.

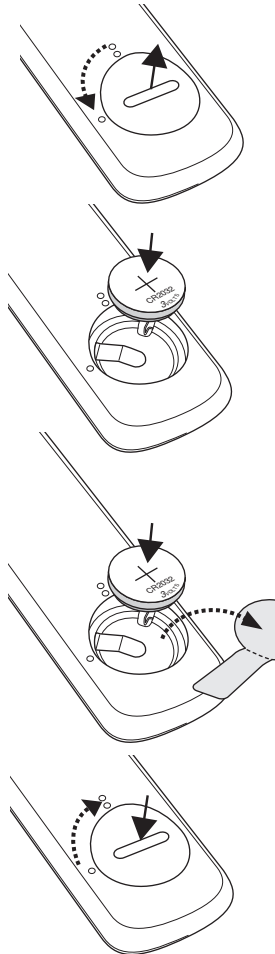


# 6

## Specifications

---

Light Valve	0.66" UHD TRP S610 DMD, DarkChip3™
Brightness	5000 ANSI Lumens (Max.)
Contrast Ratio	2000:1 Typical (Full On/Full Off) 100000:1 High Contrast Ratio
Uniformity	80% Typical (Japan Standard - JBMA)
Number of Pixels	3840 x 2160 (4K UHD)
Aspect Ratio	16:9
Displayable Color	1.07 billion colors
Color Wheel Speed	2 X for Normal
Projection Lens	F-Stop: F/2.74  Focal length, f=2.84 mm  No Manual Zoom Lens, Fixed  Throw ratio =Fixed UST 0.18 wide and tele  Offset ratio: 118%
Projection Screen Size	100 ~ 130 inches (diagonal)
Projection Distance	0.32 ~ 0.74 ft (10 ~ 22.5 cm)
Video Compatibility	Component Video input via HDMI: 2160p (24/25/60 Hz), 1080i (24/25/60 Hz), 720p (50/60 Hz), 576i/p, 480i/p
Power Supply	Universal AC 100-240 V 50-60 Hz with PFC input
Power Consumption	Normal mode: 545 W ± 15% @ 110 Vac Eco mode: 395 W ± 15% @ 110 Vac Standby mode: < 0.5 W Network standby: < 2 W
	 <b>NOTE:</b> By default, the projector is set to enter power saving mode after 20 minutes of no activity.
Audio	2 speakers x 6 watt RMS

Noise Level	Normal mode: 36 dB(A) Eco mode: 29 dB(A)
Projector Weight	< 29.76 lb (13.5 Kg)
Dimensions (W x D x H)	18.07 x 15.16 x 5.31 inches (459 x 385 x 135 mm)

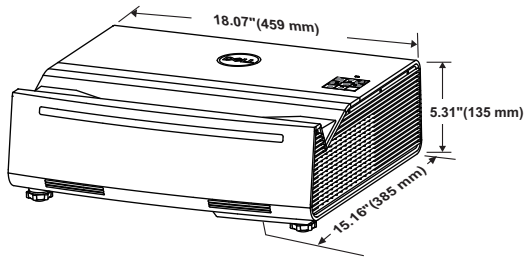

Environmental	<p>Operating temperature: 5 °C - 40 °C (41 °F- 104 °F) Humidity: 80% maximum</p> <p>Storage temperature: 0 °C to 60 °C (32 °F to 140 °F) Humidity: 90% maximum</p> <p>Shipping temperature: -20 °C to 60 °C (-4 °F to 140 °F) Humidity: 90% maximum</p>
I/O Connectors	<p>Power: One AC power socket (3-pin - C14 inlet)</p> <p>HDMI 2.0 input: One HDMI 2.0 connector for HDMI 2.0 specification HDCP 2.2 compliant and HDR capable.</p> <p>HDMI 1.4 input: Two HDMI 1.4 connectors for HDMI 1.4 specification HDCP 2.2 compliant.</p> <p>Variable audio output: One 3.5 mm stereo mini phone jack (Green).</p> <p>USB (mini type B) port: One mini type B connector for firmware upgrade.</p> <p>USB 3.0 (type A) port: One USB 3.0 type A connector for USB playback.</p> <p>USB Power (5V/1.8A): Two USB Power (5V/1.8A) for power only</p> <p>RS232 port: One 9-pin D-sub for RS232 communication.</p>

Light Source

RJ-45 port: One RJ-45 connector for build-in for network control and LAN display.

SPDIF port: One SPDIF connector for digital audio output.

Up to 20,000 hours in Normal mode

## Compatibility Mode (Digital)

Resolution	Refresh Rate (Hz)	H Sync Frequency (KHz)	Pixel Clock (MHz)	Support HDMI 1.4 or 2.0
640 x 480	59.940	31.469	25.175	HDMI 1.4 & 2.0
640 x 480	75.000	37.500	31.500	HDMI 1.4 & 2.0
640 x 480	85.008	43.269	36.000	HDMI 1.4 & 2.0
720 x 480 p60	59.940	31.469	27.000	HDMI 1.4 & 2.0
720 x 576 p50	50.000	31.250	27.000	HDMI 1.4 & 2.0
800 x 600	60.317	37.879	40.000	HDMI 1.4 & 2.0
800 x 600	75.000	46.875	49.500	HDMI 1.4 & 2.0
800 x 600	85.061	53.674	56.250	HDMI 1.4 & 2.0
1024 x 768	60.004	48.363	65.000	HDMI 1.4 & 2.0
1024 x 768	74.930	60.241	80.000	HDMI 1.4 & 2.0
1024 x 768	84.997	68.677	94.500	HDMI 1.4 & 2.0
1280 x 720	59.855	44.772	74.250	HDMI 1.4 & 2.0
1280 x 720 p50	50.000	37.500	74.250	HDMI 1.4 & 2.0
1280 x 720 p60	60.000	45.000	74.250	HDMI 1.4 & 2.0
1280 x 800	59.810	49.702	83.500	HDMI 1.4 & 2.0
1280 x 1024	60.020	63.981	108.000	HDMI 1.4 & 2.0
1366 x 768	59.790	47.712	85.500	HDMI 1.4 & 2.0
1400 x 1050	59.978	65.317	121.750	HDMI 1.4 & 2.0
1600 x 1200	60.000	75.000	162.000	HDMI 1.4 & 2.0
1920 x 1080	60.000	67.500	148.500	HDMI 1.4 & 2.0
1920 x 1080 i50	50.000	28.125	74.250	HDMI 1.4 & 2.0
1920 x 1080 i60	60.000	33.750	74.250	HDMI 1.4 & 2.0
1920 x 1080 p120	120.00	33.750	297.000	HDMI 1.4 & 2.0
3840 x 2160	24.000	54.000	297.000	HDMI 1.4 & 2.0
3840 x 2160	25.000	56.250	297.000	HDMI 1.4 & 2.0
3840 x 2160	30.000	67.500	297.000	HDMI 1.4 & 2.0

3840 x 2160	50.000	112.500	594.000	HDMI 2.0
3840 x 2160	60.000	135.000	594.000	HDMI 2.0
4096 x 2160	24.000	54.000	297.000	HDMI 1.4 & 2.0
4096 x 2160	25.000	56.250	297.000	HDMI 1.4 & 2.0
4096 x 2160	30.000	67.500	297.000	HDMI 1.4 & 2.0
4096 x 2160	50.000	112.500	594.000	HDMI 2.0
4096 x 2160	60.000	135.000	594.000	HDMI 2.0

# 7

## Additional Information

---

For additional information on how to use your projector, please see the **Dell Projectors User Guide** at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).



# 8

## Contacting Dell

---

For customers in the United States, call 800-WWW-DELL (800-456-3355).



**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Visit go to [www.dell.com/contactDell](http://www.dell.com/contactDell).
- 2 Select your country from the displayed list.
- 3 Select a Segment for Contact.
- 4 Select the appropriate service or support link based on your need.

# Index

## A

Adjusting Projector Focus 23

Adjusting the Projected Image

Adjusting the Projector Height  
22

lower the projector

Front tilt adjustment  
wheel 22

Rear tilt adjustment  
wheel 22

## C

Connection Ports

Audio output connector 7

HDMI 1 (2.0) connector 7

HDMI 2 (1.4) connector 7

HDMI 3 (1.4) connector 7

Kensington cable slot 7

Mini USB (mini type B)

connector for firmware  
upgrade 7

Power cord connector 7

RJ45 connector 7

RS232 connector 7

SPDIF connector 7

USB (Type A) 3.0 connector  
for USB media playback and  
optional wireless dongle 7

USB Type A Power (5V/1.8A)  
connector 7

Contact Dell 5

## D

Dell

contacting 72, 73

## M

Main Unit 6

6W (x 2) speakers 6

IR receivers 6

Lens 6

Mounting holes for wall mount  
6

Power button 6

Status indicators 6

Tilt adjustment wheel 6

## P

phone numbers 73

## R

Remote Control 12

Replacing 66

## S

Specifications

Aspect Ratio 67

- Audio 67
- Brightness 67
- Color Wheel Speed 67
- Contrast Ratio 67
- Dimensions 68
- Displayable Color 67
- Environmental 68
- I/O Connectors 68
- Light Valve 67
- Noise Level 68
- Number of Pixels 67
- Power Consumption 67
- Power Supply 67
- Projection Distance 67
- Projection Lens 67
- Projection Screen Size 67
- Projector Weight 68
- Uniformity 67
- Video Compatibility 67

support

- contacting Dell 72, 73

## T

- telephone numbers 73