



# Dell RC260 Remote Control

## Setting Up Your Dell RC260 Remote Control


1. Press and slide-down the back cover to release it.

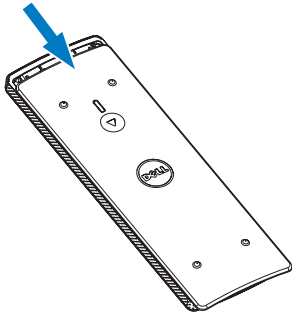


2. Install the two batteries that shipped along with the Dell RC260 remote control.

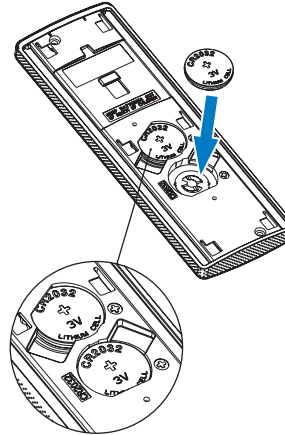

3. Press and slide-up the back cover to close it.

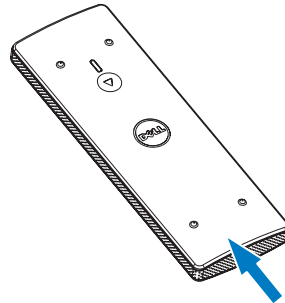

# Overview

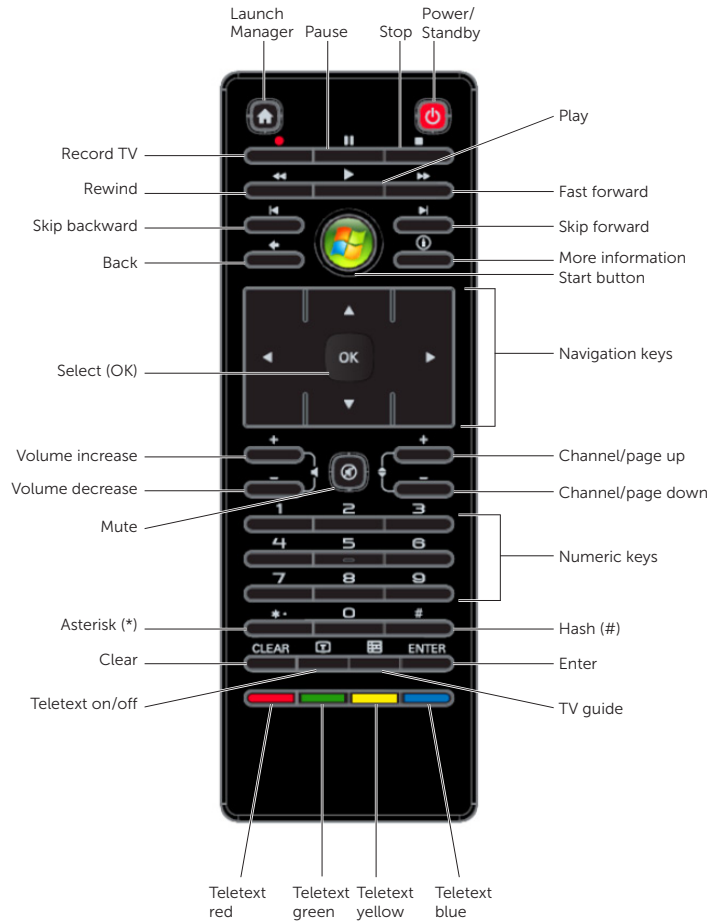

© 2011 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™ and the DELL logo are trademarks of Dell Inc