

Dell™ SE198WFP Flat Panel Monitor User's Guide

About Your Monitor

[Front View](#)
[Back View](#)
[Side View](#)
[Bottom View](#)
[Monitor Specifications](#)
[Caring for your Monitor](#)

Using Your Adjustable Monitor Stand

[Attaching the Stand](#)
[Organizing Your Cables](#)
[Using the Tilt](#)
[Removing the Stand](#)

Setting Up Your Monitor

[Connecting Your Monitor](#)
[Using the Front Panel](#)
[Using the OSD](#)
[Setting the Optimal Resolution](#)
[Using the Dell Soundbar \(Optional\)](#)




Solving Problems

[Troubleshooting Your Monitor](#)
[General Problems](#)
[Product Specific Problems](#)
[Troubleshooting Your Soundbar](#)

Appendix

[FCC Identification Information](#)
[Safety Information](#)
[Contacting Dell](#)

Notes, Notices, and Cautions

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
-  **CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.
© 2006-2007 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *Inspiron*, *Dell Precision*, *Dimension*, *OptiPlex*, *Latitude*, *PowerEdge*, *PowerVault*, *PowerApp*, and *Dell OpenManage* are trademarks of Dell Inc.; *Microsoft*, *Windows*, and *Windows NT* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries, which may be registered in certain jurisdictions. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model SE198WFP

July 2007 Rev. A01


[Back to Contents Page](#)

About Your Monitor

Dell™ SE198WFP Flat Panel Monitor User's Guide


- [Front View](#)
- [Back View](#)
- [Side View](#)
- [Bottom View](#)
- [Monitor Specifications](#)
- [Caring for your Monitor](#)

Front View

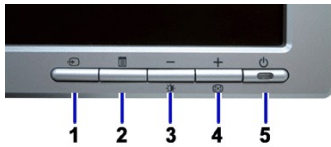

1.	Input signal select button
2.	OSD menu / Select button
3.	Brightness and Contrast / Down button
4.	Auto-adjust / Up button
5.	Power On / Off button (with LED indicator)


Back View

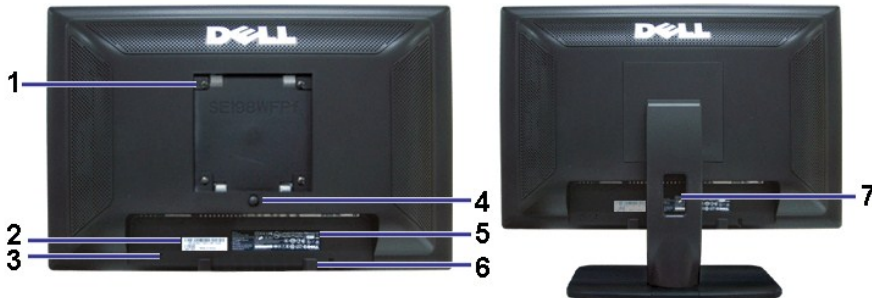

1	VESA mounting holes (100mm) (Behind attached base plate)	Use to mount the monitor.
2	Barcode serial number label	Refer to this label if you need to contact Dell for technical support.

3	Security lock slot	Use a security lock with the slot to help secure your monitor.
4	Stand removal button	Press to release the stand.
5	Regulatory rating label	List the regulatory approvals.
6	Dell Soundbar mounting brackets	Attach the optional Dell Soundbar.
7	Cable management hole	Help organize cables by placing them in the hole.

Bottom View

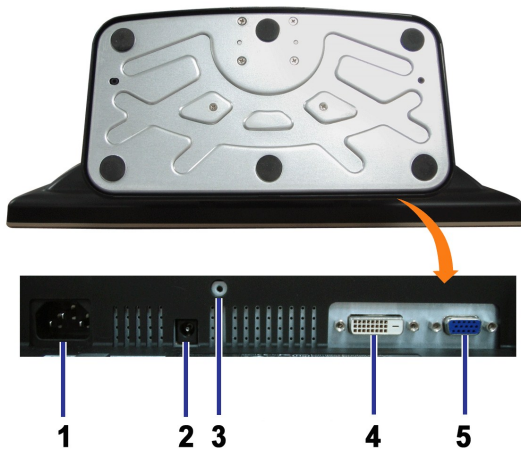

1	Power connector	Insert the power cable.
2	Dell Soundbar power connector	Connect the power cord for the Soundbar (optional).
3	Stand anti-theft feature	Mount a 3*8 screw to make the stand undetachable.
4	DVI connector	Connect your computer DVI cable.
5	VGA connector	Connect your computer VGA cable.

Side View



Left side

Right side

Monitor Specifications

Power Management Modes

If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor automatically reduces its power consumption when not in use. This is referred to as Power Save Mode. The monitor automatically resumes functioning when the system detects input from the keyboard, mouse or other input device. The following table shows the power consumption and signaling of this automatic power saving feature:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation (with Dell Soundbar active)	Active	Active	Active	Blue	75 W (maximum)
Normal operation	Active	Active	Active	Blue	32 W (typical)
Active-off mode	Inactive	Inactive	Blanked	Amber	Less than 2 W
Switch off	-	-	-	Off	Less than 1 W

NOTE: The OSD only functions in the normal operation mode. One of the following messages appears when the Menu or Plus buttons are pressed when in Active-off mode.

<p>1 : Auto Detect (Analog Input) In Power Save Mode Press computer power button or any key on keyboard or move mouse</p>	or	<p>1 : Auto Detect (Digital Input) In Power Save Mode Press computer power button or any key on keyboard or move mouse</p>
<p>2: Analog Input In Power Save Mode Press computer power button or any key on keyboard or move mouse</p>	or	<p>3: Digital Input In Power Save Mode Press computer power button or any key on keyboard or move mouse</p>

Activate the computer and the monitor to gain access to the [OSD](#).


This monitor is **ENERGY STAR**®-compliant as well as TCO '99 power management compatible.



* Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.

Pin Assignments


15-pin D-Sub connector

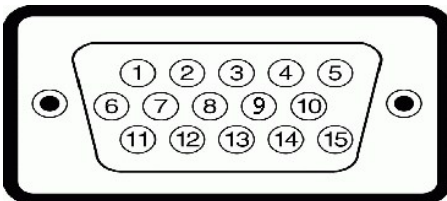

Pin Number	Monitor Side of the 15-pin Side Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	DDC +5V

10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

24-pin Digital-only DVI Connector

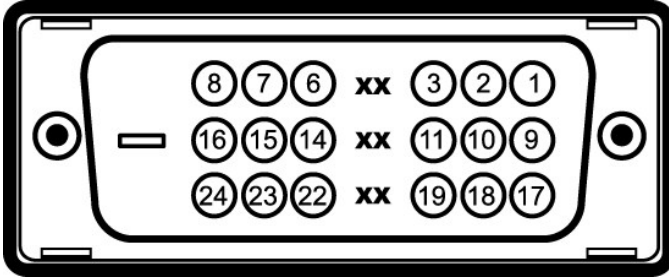

Note: Pin 1 is at the top right.

Pin	Signal Assignment	Pin	Signal Assignment	Pin	Signal Assignment
1	T.M.D.S. Data 2-	9	T.M.D.S. Data 1-	17	T.M.D.S. Data 0-
2	T.M.D.S. Data 2+	10	T.M.D.S. Data 1+	18	T.M.D.S. Data 0+
3	T.M.D.S. Data 2 Shield	11	T.M.D.S. Data 1 Shield	19	T.M.D.S. Data 0 Shield
4	No Pin	12	No Pin	20	No Pin
5	No Pin	13	No Pin	21	No Pin
6	DDC Clock	14	+5V Power	22	T.M.D.S. Clock Shield
7	DDC Data	15	Ground (for +5V)	23	T.M.D.S. Clock +
8	No Connect	16	Hot Plug Detect	24	T.M.D.S. Clock -

Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer with its Extended Display Identification Data using Display Data Channel (DDC) protocols so that the system can configure itself and optimize the monitor settings. Most monitor installations are automatic. \ select different settings if required.

General

Model number SE198WFP

Flat Panel

Screen type	Active matrix - TFT LCD
Screen dimensions	19 inches wide(19-inch wide viewable image size)
Preset display area:	
Horizontal	408mm / 16.1inches (minimum)
Vertical	255mm / 10.0 inches (minimum)
Pixel pitch	~ 0.2850mm
Viewing angle	160° (vertical) typ, 160° (horizontal) typ
Luminance output	300 CD/m ² (typ)
Contrast ratio	1000 to 1 (typ)
Faceplate coating	Antiglare with hard-coating 3H
Backlight	CCFL (4) edgelight system
Response Time	5ms typical

Resolution

Horizontal scan range	30 kHz to 83 kHz (automatic)
Vertical scan range	56 Hz to 75 Hz (automatic)
Optimal preset resolution	1440 x 900 at 60 Hz
Highest preset resolution	1440 x 900 at 75 Hz

Video Supported Modes

Video display capabilities (DVI playback)	480i/480p/576i/576p/720p/1080i/1080p (Supports HDCP)
---	--

Preset Display Modes

The following table lists the preset modes for which Dell guarantees image size and centering:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	49.5	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108	+/+
VESA, 1280 x 1024	64.0	60.0	135.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1440 x 900	55.9	60.0	106.5	-/+

Electrical

The following table lists the monitor electrical feature:

Video input signals	Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance Digital DVI-D TMDS, 600mV for each differential line, positive polarity at 50 ohm input impedance
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-free TTL level, SOG (Composite SYNC on green)
AC input voltage / frequency / current	100 to 240 VAC / 50 or 60 Hz \pm 3 Hz / 2.0A (Max.)
Inrush current	120V: 30A (Max.) 240V: 60A (Max.)

Physical Characteristics

The following table lists the monitor physical characteristics:

Connector type	15-pin D-subminiature, blue connector; DVI-D, white connector
Signal cable type	Digital: Detachable, DVI-D, Solid pins, shipped detached from the monitor Analog: Detachable, D-Sub, 15pins, shipped attached to the monitor
Dimensions (with stand)	
Height	14.42 inches (366.21 mm)
Width	17.59 inches (446.72 mm)

Depth	5.81 inches (147.65 mm)
Dimensions: (without stand)	
Height	11.52 inches (292.5 mm)
Width	17.59 inches (446.72 mm)
Depth	2.32 inches (59.00 mm)
Stand dimensions:	
Height	11.04 inches (280.31 mm)
Width	10.43 inches (264.84 mm)
Depth	5.81 inches (147.65 mm)
Weight with packaging	15.66 lbs (7.1 kg)
Weight with stand assembly and cables	12.79 lbs (5.8 kg)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	8.16 lbs (3.7 kg)
Weight of stand assembly	2.87 lbs (1.3 kg)

Environmental

The following table lists the environmental condition for monitor:

Temperature	
Operating	5° to 35°C (41° to 95°F)
Nonoperating	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C(-4° to 140°F)
Humidity	
Operating	10% to 80% (noncondensing)
Nonoperating	Storage: 5% to 90% (noncondensing) Shipping: 5% to 90%(noncondensing)
Altitude	
Operating	3,657.6m (12,000 ft) max
Nonoperating	12,192 m (40,000 ft) max
Thermal dissipation	256.08 BTU/hour (maximum) 119.5 BTU/hour (typical)

Caring for your Monitor

 **CAUTION:** Read and follow the [safety instructions](#) before cleaning the monitor.

 **CAUTION:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

- 1 To clean your antistatic screen, slightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- 1 Use a slightly dampened, warm cloth to clean the plastics. Avoid using detergent of any kind as some detergents leave a milky film on the plastics.
- 1 If you notice a white powder when you unpack your monitor, wipe it off with a cloth. This white powder occurs during the shipping of the monitor.
- 1 Handle your monitor with care as darker-colored monitor may scratch and show white scuff marks more than lighter-colored monitor.
- 1 To help maintain the best image quality on your monitor, use a dynamically changing screen saver and power off your monitor when not in use.

[Back to Contents Page](#)

[Back to Contents Page](#)

Appendix

Dell™ SE198WFP Flat Panel Monitor User's Guide

- [FCC Notice \(U.S. Only\)](#)
 - [CAUTION: Safety Instruction](#)
 - [Contacting Dell](#)
 - [Your Monitor Set-up Guide](#)
-


FCC Notice (U.S. Only)

FCC Class B

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

 **NOTICE:** The FCC regulations provide that changes or modifications not expressly approved by Dell Inc. could void your authority to operate this equipment.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient the receiving antenna.
- 1 Relocate the system with respect to the receiver.
- 1 Move the system away from the receiver.
- 1 Plug the system into a different outlet so that the system and the receiver are on different branch circuits.

If necessary, consult a representative of Dell Inc. or an experienced radio/television technician for additional suggestions.

The following information is provided on the device or devices covered in this document in compliance with the FCC regulations:

- 1 Product name: SE198WFP
- 1 Model number: SE198WFPf
- 1 Company name:

Dell Inc.

Worldwide Regulatory Compliance & Environmental Affairs

One Dell Way

Round Rock, TX 78682 USA 512-338-4400

CAUTION: Safety Instruction


For safety instructions, refer to your Product Information Guide.


Contacting Dell

You can contact Dell through the Internet and by phone:

- 1 For support through the web, go to support.dell.com.
- 1 For worldwide support through the web, use the Choose A Country/Region menu near the bottom of the page, or see the web addresses listed in the following table.
- 1 support.dell.com (support)

For specific web addresses for your country, find the appropriate country section in the table below.

 **NOTE:** Toll-free numbers are for use within the country for which they are listed.

 **NOTE:** In certain countries, support specific to Dell XPS™ portable computers is available at a separate telephone number listed for participating countries. If you do not see a telephone number listed that is specific for XPS portable computers, you may contact Dell through the support number listed and your call will be

routed appropriately.

- For support by phone, use the phone numbers and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

NOTE:The contact information provided was deemed correct at the time that this document went to print and is subject to change.

Country (City) International Access Code Country Code City Code	Service Type	Area Codes, Local Numbers, and Toll-Free Numbers Website and E-Mail Address
Anguilla	Online Support	www.dell.com/ai
	E-mail Address	ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 800-335-0031
Antigua and Barbuda	Online Support	www.dell.com/ag
		ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	1-800-805-5924
Aomen Country Code: 853	Technical Support	toll-free: 0800-105
	Customer Service (Xiamen, China)	34 160 910
	Transaction Sales (Xiamen, China)	29 693 115
Argentina (Buenos Aires) International Access Code: 00 Country Code: 54 City Code: 11	Online Support	www.dell.com.ar
	E-mail for Desktops and Portables	ia-techsupport@dell.com
	E-mail for Servers and EMC® Storage Products	ia_enterprise@dell.com
	Customer Service	toll-free: 0-800-444-0730
	Technical Support – Dell PowerApp™, Dell PowerEdge™, Dell PowerConnect™, and Dell PowerVault™	toll-free: 0-800-222-0154
	Technical Support Services	toll-free: 0-800-444-0724
Aruba	Online Support	www.dell.com.aw
		ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 800-1578
Australia (Sydney) International Access Code: 0011 Country Code: 61 City Code: 2	Online Support	support.ap.dell.com
		support.ap.dell.com/contactus
	Technical Support	
	Technical Support for XPS computers only	toll-free: 1300 790 877
	Home and Home Office	toll-free: 1300-655-533
	Medium and Large Business	toll-free: 1800-633-559
	Small Business, Education, Local Government	toll-free: 1800-060-889
Austria (Vienna) International Access Code: 900 Country Code: 43 City Code: 1	Online Support	support.euro.dell.com
		tech_support_central_europe@dell.com
	Technical Support for XPS computers only	0820 240 530 81
	Home/Small Business Sales	0820 240 530 00
	Home/Small Business Fax	0820 240 530 49
	Home/Small Business Customer Service	0820 240 530 14
	Home/Small Business Support	0820 240 530 17
	Preferred Accounts/Corporate Customer Service	0820 240 530 16
	Preferred Accounts/Corporate Support	0820 240 530 17
	Switchboard	0820 240 530 00
Bahamas	Online Support	www.dell.com/bs
		ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-874-3038
Barbados	Online Support	www.dell.com/bb
		ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	1-800-534-3142
Belgium (Brussels) International Access Code: 00 Country Code: 32 City Code: 2	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	02 481 92 96
	General Support	02 481 92 88
	General Support Fax	02 481 92 95
	Customer Service	02 713 15 65
	Corporate Sales	02 481 91 00
	Fax	02 481 92 99
	Switchboard	02 481 91 00
Bermuda	Online Support	www.dell.com/bm
		ia-techsupport@dell.com
	Technical Support, Customer Service, Sales	1-877-890-0751
Bolivia	Online Support	www.dell.com/bo

		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 800-10-0238
Brazil	Online Support	www.dell.com/br
International Access Code: 00		BR-TechSupport@dell.com
	Customer Service and Tech Support	0800 90 3355
Country Code: 55	Technical Support Fax	51 2104 5470
	Customer Service Fax	51 2104 5480
City Code: 51	Sales	0800 970 3390
British Virgin Islands	Technical Support, Customer Service, Sales	toll-free: 1-866-278-6820
Brunei	Technical Support (Penang, Malaysia)	604 633 4966
Country Code: 673	Customer Service (Penang, Malaysia)	604 633 3101
		or toll-free: 801 1012
	Transaction Sales (Penang, Malaysia)	604 633 3101
		or toll-free: 801 1012
Canada (North York, Ontario)	Online Order Status	www.dell.ca/ostatus
International Access Code: 011	Online Support	support.ca.dell.com
	AutoTech (automated Hardware and Warranty Support)	toll-free: 1-800-247-9362
	Customer Service	
	Home/Home Office	toll-free: 1-800-847-4096
	Small Business	toll-free: 1-800-906-3355
	Medium/Large Business, Government, Education	toll-free: 1-800-387-5757
	Hardware Warranty Phone Support	
	XPS Computers Only	toll-free: 1-866-398-8977
	Computers for Home/Home Office	toll-free: 1-800-847-4096
	Computers for Small/Medium/Large Business, Government	toll-free: 1-800-387-5757
	Printers, Projectors, Televisions, Handheld, Digital Jukebox, and Wireless	1-877-335-5767
	Sales	
	Home and Home Office Sales	toll-free: 1-800-999-3355
	Small Business	toll-free: 1-800-387-5752
	Medium/Large Business, Government	toll-free: 1-800-387-5755
	Spare Parts and Extended Service	1 866 440 3355
Cayman Islands	Online Support	la-techsupport@dell.com
	Technical Support, Customer Service, Sales	1-877-262-5415
Chile (Santiago)	Online Support	www.dell.com/cl
Country Code: 56		la-techsupport@dell.com
City Code: 2	Sales and Customer Support	toll-free: 1230-020-3397
		or 800-20-1385
China (Xiamen)	Online Support	support.dell.com.cn
Country Code: 86	Technical Support E-mail	support.dell.com.cn/email
City Code: 592	Customer Service E-mail	customer_cn@dell.com
	Technical Support Fax	592 818 1350
	Technical Support – XPS computers only	toll-free: 800 858 0540
	Technical Support – Dell™ Dimension™ and Dell Inspiron™	toll-free: 800 858 2969
	Technical Support – Dell OptiPlex™, Dell Latitude™, and Dell Precision™	toll-free: 800 858 0950
	Technical Support – Servers and Storage	toll-free: 800 858 0960
	Technical Support – Projectors, PDAs, Switches, Routers, etc.	toll-free: 800 858 2920
	Technical Support – Printers	toll-free: 800 858 2311
	Customer Service	toll-free: 800 858 2060
	Customer Service Fax	592 818 1308
	Home and Small Business	toll-free: 800 858 2222
	Preferred Accounts Division	toll-free: 800 858 2557
	Large Corporate Accounts GCP	toll-free: 800 858 2055
	Large Corporate Accounts Key Accounts	toll-free: 800 858 2628
	Large Corporate Accounts North	toll-free: 800 858 2999
	Large Corporate Accounts North Government and Education	toll-free: 800 858 2955
	Large Corporate Accounts East	toll-free: 800 858 2020
	Large Corporate Accounts East Government and Education	toll-free: 800 858 2669
	Large Corporate Accounts Queue Team	toll-free: 800 858 2572
	Large Corporate Accounts South	toll-free: 800 858 2355
	Large Corporate Accounts West	toll-free: 800 858 2811
	Large Corporate Accounts Spare Parts	toll-free: 800 858 2621
Colombia	Online Support	www.dell.com/co
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	01-800-915-4755
Costa Rica	Online Support	www.dell.com/cr
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	0800-012-0231

Czech Republic (Prague) International Access Code: 00 Country Code: 420	Online Support	support.euro.dell.com
		czech_dell@dell.com
	Technical Support	22537 2727
	Customer Service	22537 2707
	Fax	22537 2714
	Technical Fax	22537 2728
	Switchboard	22537 2711
Denmark (Copenhagen) International Access Code: 00 Country Code: 45	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	7010 0074
	Technical Support	7023 0182
	Customer Service – Relational	7023 0184
	Home/Small Business Customer Service	3287 5505
	Switchboard – Relational	3287 1200
	Switchboard Fax – Relational	3287 1201
	Switchboard – Home/Small Business	3287 5000
	Switchboard Fax – Home/Small Business	3287 5001
Dominica	Online Support	www.dell.com/dm
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-278-6821
Dominican Republic	Online Support	www.dell.com/do
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	1-800-156-1588
Ecuador	Online Support	www.dell.com/ec
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales (calling from Quito)	toll-free: 999-119-877-655-3355
	Technical Support, Customer Service, Sales (calling from Guayaquil)	toll-free: 1800-999-119-877-655-3355
El Salvador	Online Support	www.dell.com/sv
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	800-6132
Finland (Helsinki) International Access Code: 990 Country Code: 358 City Code: 9	Online Support	support.euro.dell.com
		fi_support@dell.com
	Technical Support	0207 533 555
	Customer Service	0207 533 538
	Switchboard	0207 533 533
	Fax	0207 533 530
	Sales under 500 employees	0207 533 540
	Sales over 500 employees	0207 533 533
France (Paris) (Montpellier) International Access Code: 00 Country Code: 33 City Codes: (1) (4)	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	0825 387 129
	Home and Small Business	
	Technical Support	0825 387 270
	Customer Service	0825 823 833
	Switchboard	0825 004 700
	Switchboard (calls from outside of France)	04 99 75 40 00
	Sales	0825 004 700
	Fax	0825 004 701
	Fax (calls from outside of France)	04 99 75 40 01
	Corporate	
	Technical Support	0825 004 719
	Customer Service	0825 338 339
	Switchboard	01 55 94 71 00
	Sales	01 55 94 71 00
	Fax	01 55 94 71 01
	Germany (Frankfurt) International Access Code: 00 Country Code: 49 City Code: 69	Online Support
		tech_support_central_europe@dell.com
Technical Support for XPS computers only		069 9792-7222
Technical Support		069 9792-7200
Home/Small Business Customer Service		0180-5-224400
Global Segment Customer Service		069 9792-7320
Preferred Accounts Customer Service		069 9792-7320
Large Accounts Customer Service		069 9792-7320
Public Accounts Customer Service		069 9792-7320
Switchboard		069 9792-7000
Greece International Access Code: 00 Country Code: 30	Online Support	support.euro.dell.com
	Technical Support	00800-44 14 95 18
	Gold Service Technical Support	00800-44 14 00 83
	Switchboard	2108129810
	Gold Service Switchboard	2108129811
	Sales	2108129800

	Fax	2108129812	
Grenada	Online Support	www.dell.com/gd	
		la-techsupport@dell.com	
	Technical Support, Customer Service, Sales	toll-free: 1-866-540-3355	
Guatemala	Online Support	www.dell.com/gt	
		la-techsupport@dell.com	
	Technical Support, Customer Service, Sales	1-800-999-0136	
Guyana	Online Support	la-techsupport@dell.com	
	Technical Support, Customer Service, Sales	toll-free: 1-877-270-4609	
Hong Kong International Access Code: 001 Country Code: 852	Online Support	support.ap.dell.com	
		support.dell.com.cn/email	
	Technical Support – XPS computers only	00852-3416 6923	
	Technical Support – Dimension and Inspiron	00852-2969 3188	
	Technical Support – OptiPlex, Latitude, and Dell Precision	00852-2969 3191	
	Technical Support – Servers and Storage	00852-2969 3196	
	Technical Support – Projectors, PDAs, Switches, Routers, etc.	00852-3416 0906	
	Customer Service	00852-3416 0910	
	Large Corporate Accounts	00852-3416 0907	
	Global Customer Programs	00852-3416 0908	
	Medium Business Division	00852-3416 0912	
	Home and Small Business Division	00852-2969 3105	
	India	Online Support	support.ap.dell.com
Portable and Desktop Support			
Desktop Support E-mail		india_support_desktop@dell.com	
Portable Support E-mail		india_support_notebook@dell.com	
Phone Numbers		080-25068032 or 080-25068034	
		or your city STD code + 60003355	
		or toll-free: 1-800-425-8045	
Server Support			
E-mail		india_support_Server@dell.com	
Phone Numbers		080-25068032 or 080-25068034	
		or your city STD code + 60003355	
		or toll-free: 18004258045	
Gold Support Only			
E-mail		eec_ap@dell.com	
Phone Numbers		080-25068033	
		or your city STD code + 60003355	
		or toll-free: 1-800-425-9045	
XPS Support Only			
E-mail		Indiamps_AP@dell.com	
Phone Numbers		080-25068066	
		or toll-free: 1-800-425-2066	
Customer Service			
Home and Small Business		India_care_HSB@dell.com	
		toll-free: 1800-4254051	
Large Corporate Accounts		India_care_REL@dell.com	
		toll-free: 1800-4252067	
Sales			
Large Corporate Accounts		1600 33 8044	
Home and Small Business		1600 33 8046	
Ireland (Cherrywood) International Access Code: 00 Country Code: 353 City Code: 1		Online Support	support.euro.dell.com
			dell_direct_support@dell.com
		Technical Support	
		XPS computers only	1850200722
	Business computers	1850 543 543	
	Home computers	1850 543 543	
	At Home Support	1850 200 889	
	Sales		
	Home	1850 333 200	
	Small Business	1850 664 656	
	Medium Business	1850 200 646	
	Large Business	1850 200 646	
	Sales E-mail	Dell_IRL_Outlet@dell.com	
	Customer Service		
	Home and Small Business	01 204 4014	
	Business (greater than 200 employees)	1850 200 982	
	General		
	Fax/Sales Fax	01 204 0103	
	Switchboard	01 204 4444	
	U.K. Customer Service (dial within U.K. only)	0870 906 0010	

	Corporate Customer Service (dial within U.K. only)	0870 907 4499	
	U.K. Sales (dial within U.K. only)	0870 907 4000	
Italy (Milan) International Access Code: 00 Country Code: 39 City Code: 02	Online Support	support.euro.dell.com	
	Home and Small Business		
	Technical Support	02 577 826 90	
	Customer Service	02 696 821 14	
	Fax	02 696 821 13	
	Switchboard	02 696 821 12	
	Corporate		
	Technical Support	02 577 826 90	
	Customer Service	02 577 825 55	
	Fax	02 575 035 30	
	Switchboard	02 577 821	
		Online Support	la-techsupport@dell.com
	Jamaica	Technical Support, Customer Service, Sales (dial from within Jamaica only)	1-800-440-9205
	Japan (Kawasaki) International Access Code: 001 Country Code: 81 City Code: 44	Online Support	support.jp.dell.com
Technical Support – XPS computers only		toll-free: 0120-937-786	
Technical Support outside of Japan – XPS computers only		044-520-1235	
Technical Support – Dimension and Inspiron		toll-free: 0120-198-226	
Technical Support outside of Japan – Dimension and Inspiron		81-44-520-1435	
Technical Support – Dell Precision, OptiPlex, and Latitude		toll-free: 0120-198-433	
Technical Support outside of Japan – Dell Precision, OptiPlex, and Latitude		81-44-556-3894	
Technical Support – Dell PowerApp, Dell PowerEdge, Dell PowerConnect, and Dell PowerVault		toll-free: 0120-198-498	
Technical Support outside of Japan – PowerApp, PowerEdge, PowerConnect, and PowerVault		81-44-556-4162	
Technical Support – Projectors, PDAs, Printers, Routers		toll-free: 0120-981-690	
Technical Support outside of Japan – Projectors, PDAs, Printers, Routers		81-44-556-3468	
Faxbox Service		044-556-3490	
24-Hour Automated Order Status Service		044-556-3801	
Customer Service		044-556-4240	
Business Sales Division – up to 400 employees		044-556-1465	
Preferred Accounts Division Sales – over 400 employees		044-556-3433	
Public Sales – government agencies, educational institutions, and medical institutions		044-556-5963	
Global Segment Japan		044-556-3469	
Individual User		044-556-1657	
Individual User Online Sales		044-556-2203	
Individual User Real Site Sales		044-556-4649	
Korea (Seoul) International Access Code: 001 Country Code: 82 City Code: 2	Online Support	support.ap.dell.com	
	Technical Support for XPS computers only	toll-free: 080-999-0283	
	Technical Support, Customer Service	toll-free: 080-200-3800	
	Technical Support – Dimension, PDA, Electronics, and Accessories	toll-free: 080-200-3801	
	Sales	toll-free: 080-200-3600	
	Fax	2194-6202	
	Switchboard	2194-6000	
Latin America	Customer Technical Support (Austin, Texas, U.S.A.)	512 728-4093	
	Customer Service (Austin, Texas, U.S.A.)	512 728-3619	
	Fax (Technical Support and Customer Service) (Austin, Texas, U.S.A.)	512 728-3883	
	Sales (Austin, Texas, U.S.A.)	512 728-4397	
	SalesFax (Austin, Texas, U.S.A.)	512 728-4600 or 512 728-3772	
Luxembourg International Access Code: 00 Country Code: 352	Online Support	support.euro.dell.com	
	Support	342 08 08 075	
	Home/Small Business Sales	+32 (0)2 713 15 96	
	Corporate Sales	26 25 77 81	
	Customer Service	+32 (0)2 481 91 19	
	Fax	26 25 77 82	
Malaysia (Penang) International Access Code: 00 Country Code: 60 City Code: 4	Online Support	support.ap.dell.com	
	Technical Support – XPS computers only	toll-free: 1 800 885 784	
	Technical Support – Dell Precision, OptiPlex, and Latitude	toll-free: 1 800 880 193	
	Technical Support – Dimension, Inspiron, and Electronics and Accessories	toll-free: 1 800 881 306	
	Technical Support – PowerApp, PowerEdge, PowerConnect, and PowerVault	toll-free: 1 800 881 386	
	Customer Service	toll-free: 1 800 881 306 (option 6)	
	Transaction Sales	toll-free: 1 800 888 202	

	Corporate Sales	toll-free: 1 800 888 213
Mexico International Access Code: 00 Country Code: 52	Online Support	www.dell.com/mx
		la-techsupport@dell.com
	Technical Support	001-866-563-4425
	Sales	50-81-8800
		or 001-800-888-3355
	Customer Service	001-877-384-8979
		or 001-877-269-3383
	Main	50-81-8800
	or 01-800-888-3355	
		or 001-866-851-1754
Montserrat	Online Support	la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-278-6822
Netherlands Antilles	Online Support	la-techsupport@dell.com
	Technical Support, Customer Service, Sales	001-800-882-1519
Netherlands (Amsterdam) International Access Code: 00 Country Code: 31 City Code: 20	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	020 674 45 94
	Technical Support	020 674 45 00
	Technical Support Fax	020 674 47 66
	Home/Small Business Customer Service	020 674 42 00
	Relational Customer Service	020 674 4325
	Home/Small Business Sales	020 674 55 00
	Relational Sales	020 674 50 00
	Home/Small Business Sales Fax	020 674 47 75
	Relational Sales Fax	020 674 47 50
	Switchboard	020 674 50 00
	Switchboard Fax	020 674 47 50
New Zealand International Access Code: 00 Country Code: 64	Online Support	support.ap.dell.com
		support.ap.dell.com/contactus
	Technical Support for XPS computers only	toll-free: 0800 335 540
	Technical Support, Customer Service, Sales	0800 441 567
Nicaragua	Online Support	www.dell.com/ni
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	001-800-220-1377
Norway (Lysaker) International Access Code: 00 Country Code: 47	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	815 35 043
	Technical Support	671 16882
	Relational Customer Service	671 17575
	Home/Small Business Customer Service	23162298
	Switchboard	671 16800
	Fax Switchboard	671 16865
Panama	Online Support	www.dell.com/pa
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	001-800-507-1264
Peru	Online Support	www.dell.com/pe
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	0800-50-669
Poland (Warsaw) International Access Code: 011 Country Code: 48 City Code: 22	Online Support	support.euro.dell.com
		pl_support_tech@dell.com
	Customer Service Phone	57 95 700
	Customer Service	57 95 999
	Sales	57 95 999
	Customer Service Fax	57 95 806
	Reception Desk Fax	57 95 998
	Switchboard	57 95 999
Portugal International Access Code: 00 Country Code: 351	Online Support	support.euro.dell.com
	Technical Support	707200149
	Customer Service	800 300 413
	Sales	800 300 410 or 800 300 411 or 800 300 412 or 21 422 07 10
	Fax	21 424 01 12
Puerto Rico	Online Support	www.dell.com/pr
		la-techsupport@dell.com
	Technical Support	toll-free: 1-866-390-4695
		or 1-866-851-1760
	Customer Service and Sales	1-877-537-3355

St. Kitts and Nevis	Online Support	www.dell.com/kn
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-540-3355
St. Lucia	Online Support	www.dell.com/lc
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-464-4352
St. Vincent and the Grenadines	Online Support	www.dell.com/vc
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-866-464-4353
Singapore (Singapore) International Access Code: 005 Country Code: 65	NOTE: The phone numbers in this section should be called from within Singapore or Malaysia only.	
	Online Support	support.ap.dell.com
	Technical Support – XPS computers only	toll-free: 1800 394 7464
	Technical Support – Dimension, Inspiron, and Electronics and Accessories	toll-free: 1800 394 7430
	Technical Support – OptiPlex, Latitude, and Dell Precision	toll-free: 1800 394 7488
	Technical Support – PowerApp, PowerEdge, PowerConnect, and PowerVault	toll-free: 1800 394 7478
	Customer Service	toll-free: 1 800 394 7430 (option 6)
	Transaction Sales	toll-free: 1 800 394 7412
	Corporate Sales	toll-free: 1 800 394 7419
Slovakia (Prague) International Access Code: 00 Country Code: 421	Online Support	support.euro.dell.com
		czech_dell@dell.com
	Technical Support	02 5441 5727
	Customer Service	420 22537 2707
	Fax	02 5441 8328
	Tech Fax	02 5441 8328
	Switchboard (Sales)	02 5441 7585
South Africa (Johannesburg) International Access Code: 09/091 Country Code: 27 City Code: 11	Online Support	support.euro.dell.com
		dell_za_support@dell.com
	Gold Queue	011 709 7713
	Technical Support	011 709 7710
	Customer Service	011 709 7707
	Sales	011 709 7700
	Fax	011 706 0495
	Switchboard	011 709 7700
Southeast Asian and Pacific Countries	Technical Support, Customer Service, and Sales (Penang, Malaysia)	604 633 4810
Spain (Madrid) International Access Code: 00 Country Code: 34 City Code: 91	Online Support	support.euro.dell.com
	Home and Small Business	
	Technical Support	902 100 130
	Customer Service	902 118 540
	Sales	902 118 541
	Switchboard	902 118 541
	Fax	902 118 539
	Corporate	
	Technical Support	902 100 130
	Customer Care	902 115 236
	Switchboard	91 722 92 00
	Fax	91 722 95 83
Sweden (Upplands Vasby) International Access Code: 00 Country Code: 46 City Code: 8	Online Support	support.euro.dell.com
	Technical Support for XPS computers only	0771 340 340
	Technical Support	08 590 05 199
	Relational Customer Service	08 590 05 642
	Home/Small Business Customer Service	08 587 70 527
	Employee Purchase Program (EPP) Support	020 140 14 44
	Technical Support Fax	08 590 05 594
	Sales	08587 705 81
Switzerland (Geneva) International Access Code: 00 Country Code: 41 City Code: 22	Online Support	support.euro.dell.com
		Tech_support_central_Europe@dell.com
	Technical Support for XPS computers only	0848 33 88 57
	Technical Support – Home and Small Business	0844 811 411
	Technical Support – Corporate	0844 822 844
	Customer Service – Home and Small Business	0848 802 202
	Customer Service – Corporate	0848 821 721
	Main	0848 335 599
	Fax	022 799 01 90
	Switchboard	022 799 01 01
Taiwan International Access Code: 002	Online Support	support.ap.dell.com
		support.dell.com.cn/email
	Technical Support for XPS computers only	toll-free: 0080 186 3085


Country Code: 886	Technical Support – OptiPlex, Latitude, Inspiron, Dimension, and Electronics and Accessories	toll-free: 0080 186 1011
	Technical Support – Servers and Storage	toll-free: 0080 160 1256
	Customer Service	toll-free: 0080 160 1250 (option 5)
	Transaction Sales	toll-free: 0080 165 1228
	Corporate Sales	toll-free: 0080 165 1227
Thailand International Access Code: 001 Country Code: 66	Online Support	support.ap.dell.com
	Technical Support (OptiPlex, Latitude, and Dell Precision)	toll-free: 1800 0060 07
	Technical Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 0600 09
	Customer Service	toll-free: 1800 006 007 (option 7)
	Corporate Sales	toll-free: 1800 006 009
Trinidad/Tobago	Transaction Sales	toll-free: 1800 006 006
	Online Support	www.dell.com/tt
	Technical Support, Customer Service, Sales	la-techsupport@dell.com toll-free: 1-888-799-5908
Turks and Caicos Islands	Online Support	www.dell.com/tc
	Technical Support, Customer Service, Sales	la-techsupport@dell.com toll-free: 1-877-441-4735
U.K. (Bracknell) International Access Code: 00 Country Code: 44 City Code: 1344	Online Support	support.euro.dell.com
		dell_direct_support@dell.com
	Customer Service Online	support.euro.dell.com/uk/en/ECare/Form/Home.asp
	Sales	
	Home and Small Business Sales	0870 907 4000
	Corporate/Public Sector Sales	01344 860 456
	Customer Service	
	Home and Small Business	0870 906 0010
	Corporate	01344 373 185
	Preferred Accounts (500–5000 employees)	0870 906 0010
	Global Accounts	01344 373 186
	Central Government	01344 373 193
	Local Government & Education	01344 373 199
	Health	01344 373 194
	Technical Support	
	XPS Computers Only	0870 366 4180
	Corporate/Preferred Accounts/PCA (1000+ employees)	0870 908 0500
	Other Dell Products	0870 353 0800
	General	
	Home and Small Business Fax	0870 907 4006
Uruguay	Online Support	www.dell.com/uy
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 000-413-598-2521
U.S.A. (Austin, Texas) International Access Code: 011 Country Code: 1	Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll-free: 1-877-DELLITY (1-877-335-5889)
	Fax	toll-free: 1-800-727-8320
	Technical Support	support.dell.com
	XPS	toll-free: 1-800-232-8544
	Home and Home Office	toll-free: 1-800-624-9896
	Portable and Desktop AutoTech	toll-free: 1-800-247-9362
	Small Business	toll-free: 1-800-456-3355
	Medium and Large Business	toll-free: 1-877-671-3355
	State and Local Government	toll-free: 1-800-981-3355
	Federal Government	toll-free: 1-800-727-1100
	Healthcare	toll-free: 1-800-274-1550
	K-12 Education	toll-free: 1-888-977-3355
	Higher Education	toll-free: 1-800-274-7799
	Printers, Projectors, PDAs, and MP3 Players	toll-free: 1-877-459-7298
	Customer Service	toll-free: 1-800-624-9897
	Automated Order Status	toll-free: 1-800-433-9014
	Small Business	toll-free: 1-800-456-3355
	Medium and Large Business	toll-free: 1-877-671-3355
	State and Local Government	toll-free: 1-800-981-3355
	Federal Government	toll-free: 1-800-727-1100
	Healthcare	toll-free: 1-800-274-1550
	K-12 Education	toll-free: 1-888-977-3355
	Higher Education	toll-free: 1-800-274-7799
	Employee Purchase Program (EPP)	toll-free: 1-800-695-8133
	Financial Services	www.dellfinancialservices.com
	Leases and Loans	toll-free: 1-877-577-3355

	Dell Preferred Accounts (DPA)	toll-free: 1-800-283-2210
	Sales	1-800-289-3355 or 1-800-879-3355
	Dell Outlet Store	toll-free: 1-888-798-7561
	Software and Peripherals Sales	toll-free: 1-800-671-3355
U.S. Virgin Islands	Online Support	www.dell.com/vi
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	toll-free: 1-877-702-4360
Venezuela	Online Support	www.dell.com/ve
		la-techsupport@dell.com
	Technical Support, Customer Service, Sales	0800-100-4752

Your Monitor Set-up Guide

To view PDF files (files with an extension of **.pdf**), click the document title. To save PDF files (files with an extension of **.pdf**) to your hard drive, right-click the document title, click **Save Target As** in Microsoft® Internet Explorer or **Save Link As** in Netscape Navigator, and then specify a location on your hard drive to which you want to save the files.

[Setup Guide \(.pdf\)](#)

 **NOTES:** PDF files require Adobe® Acrobat® Reader®, which can be downloaded from the Adobe website at www.adobe.com .
To view a PDF file, launch Acrobat Reader. Then click **File→ Open** and select the PDF file.

[Back to Contents Page](#)

Dell™ SE198WFP Flat Panel Monitor

<i>Dell™ Technology Guide</i>	View	Download	(PDF, 2.34 MB)
<i>Setup Diagram</i>	View	Download	(PDF, 2.67 MB)
<i>User's Guide</i>	View	Download	(HTML, 52 KB)

Related Product Information

[Product Safety Information](#)

Viewing PDF Documents

It is recommended that you download PDF documents to your computer, instead of viewing them using your Web browser.

- 1 Microsoft® Windows® operating system — PDF files require Adobe® Acrobat® Reader®, which can be downloaded from the Adobe website at www.adobe.com.
 - 1 Linux operating system — It is recommended that you use the xpdf file viewer. You can download xpdf from www.foolabs.com/xpdf.
-

Initial release: *February 2007*

Last revised: *July 2008*


Setting Up Your Monitor

Dell™ SE198WFP Flat Panel Monitor User's Guide

- [Connecting Your Monitor](#)
- [Using the Front Panel](#)
- [Using the OSD Menu](#)
- [Setting the Optimal Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)

Connecting Your Monitor


⚠ CAUTION: Before you begin any of the procedures in this section, follow the [safety instructions](#).

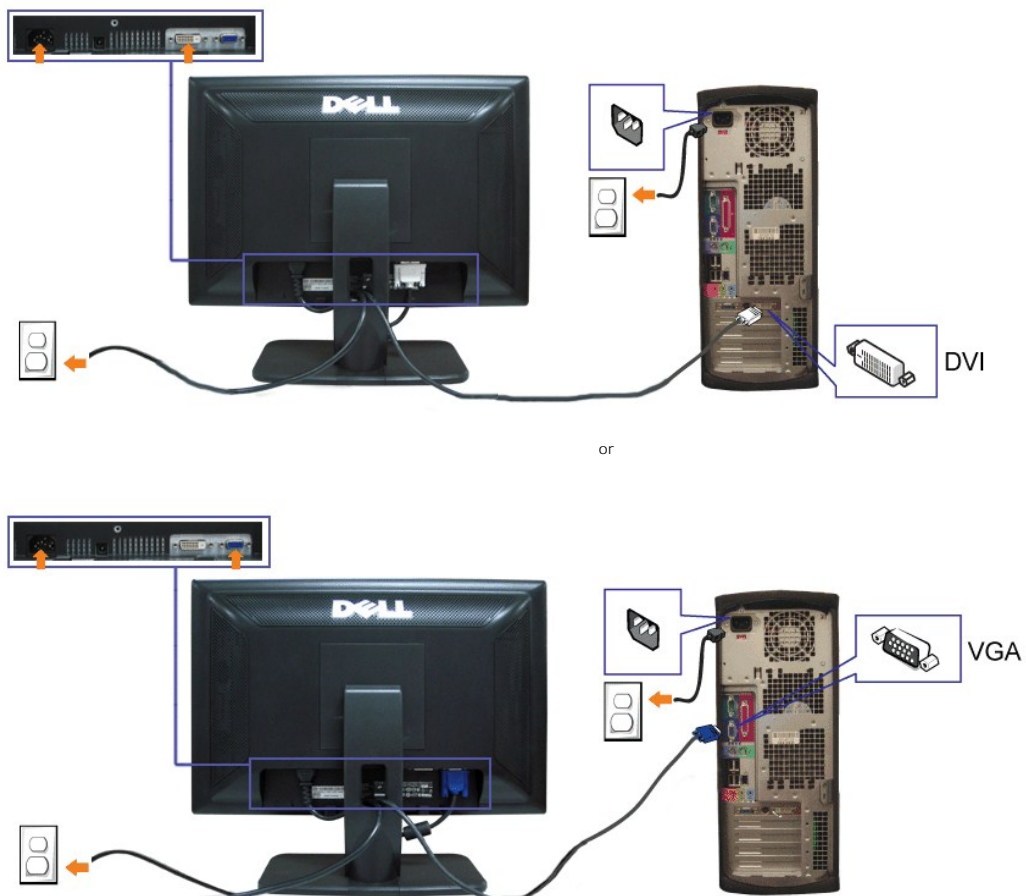


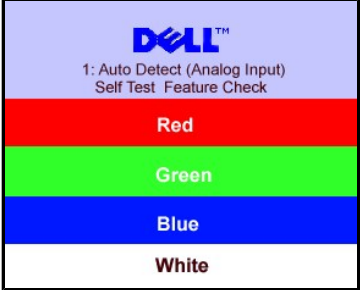
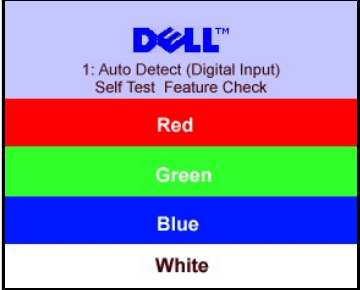
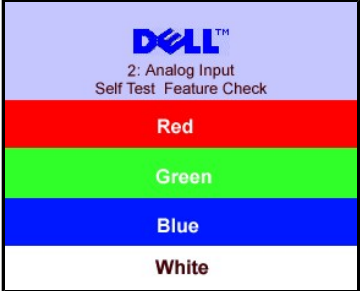
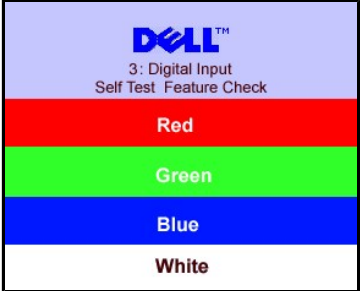


1. Turn off your computer and disconnect the power cable.
2. Connect either the white DVI or the blue VGA cable to the connectors on the computer and the monitor.
3. Connect the power cable.
4. Turn on your monitor and computer. If you do not see an image, push the input select button and ensure the correct input source is selected. If you still do not see an image, see [Troubleshooting your monitor](#).

Using the Front Panel

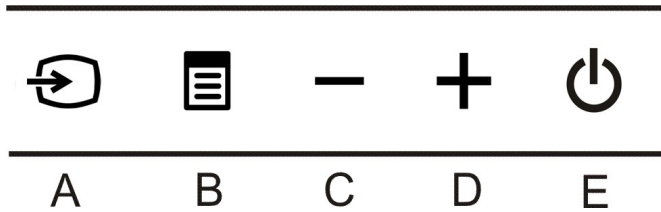Use the buttons on the front of the monitor to adjust the image settings.



The following table describes the front panel buttons:

 Input select	<p>Use the Input Select button to choose between two different video signals that may be connected to your monitor.</p> <p>NOTE: The floating 'Dell Self-test Feature Check' dialog appears on a black background if the monitor cannot sense a video signal. Depending upon the selected input, one of the dialogs shown below will scroll continually.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">  </div> or <div style="border: 1px solid black; padding: 5px; text-align: center;">  </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">  </div> or <div style="border: 1px solid black; padding: 5px; text-align: center;">  </div> </div>
 OSD menu / select	<p>The Menu button is used to open and exit the on-screen display (OSD), and exit from menus and sub-menus. See Using the OSD Menu.</p>
 Down (-) and Up (+)	<p>Use these buttons to adjust (decrease/increase ranges) items in the OSD menu.</p>
 Power Button and Indicator	<p>Use the power button to turn the monitor on and off.</p> <p>The Blue light indicates the monitor is on and fully functional. An amber light indicates power save mode.</p>


Using the OSD Menu

NOTE: If you change the settings and then either proceed to another menu, or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.


1. Press the Menu button to open the OSD menu and display the main menu.

Main Menu for Analog (VGA) Input



Main Menu for Digital (DVI) Input

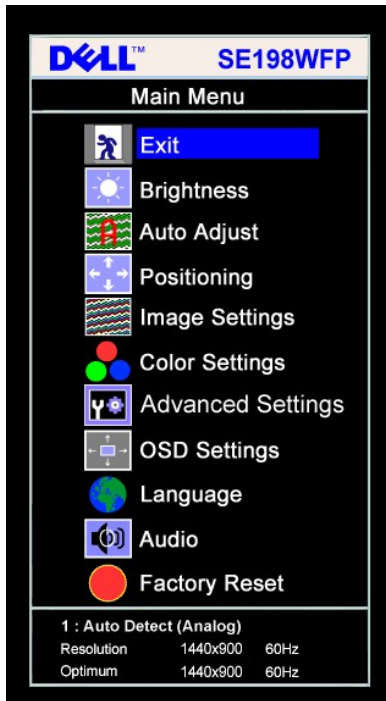

or

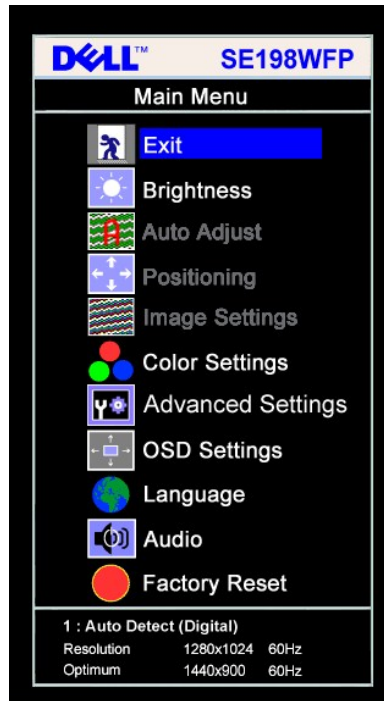



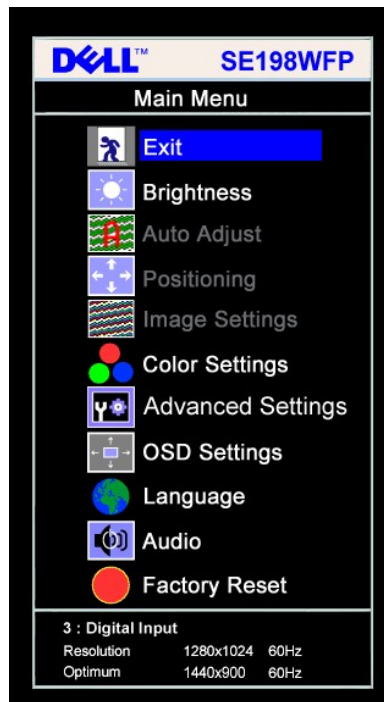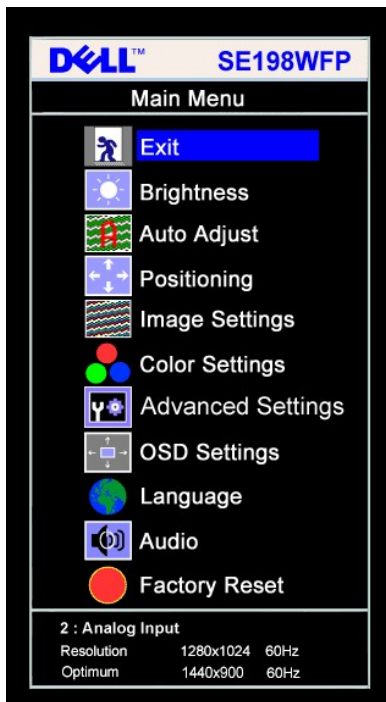


or




NOTE: Positioning and Image Settings are only available when you are using the analog (VGA) connector.

2. Press the - and + buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the table below for a complete list of all the options available for the monitor.
3. Press the MENU button once to activate the highlighted option.
4. Press - and + button to select the desired parameter.
5. Press MENU to enter the slide bar and then use the - and + buttons, according to the indicators on the menu, to make your changes.
6. Press the MENU button once to return to the main menu to select another option or press the MENU button two or three times to exit from the OSD menu.

Icon	Menu and Submenus	Description

	Exit	Select to exit the Main menu.
	Brightness/Contrast	<p>Brightness adjusts the luminance of the backlight.</p> <p>Adjust Brightness first, then adjust Contrast only if further adjustment is necessary.</p> <p>Push the + button to increase luminance and push the - button to decrease luminance (min 0 ~ max 100).</p> <p>Contrast adjusts the degree of difference between darkness and lightness on the monitor screen.</p> <p>Push the + button to increase the contrast and push the - button to decrease the contrast (min 0 ~ max 100).</p> <div data-bbox="659 474 1091 726" data-label="Image"> </div>
	Positioning: Horizontal Vertical	<p>Positioning moves the viewing area around on the monitor screen.</p> <p>When making changes to either the Horizontal or Vertical settings, no changes occur to the size of the viewing area. The image shifts in response to your selection.</p> <p>Minimum is 0 (-) and maximum is 100 (+).</p> <div data-bbox="688 898 1120 1150" data-label="Image"> </div> <p>NOTE: When using DVI source, the Positioning option is not available.</p>
	Auto Adjust	<p>Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display settings for use with your particular setup.</p> <p>Select to activate automatic setup and adjustment. The following dialog appears on a black screen as the monitor self-adjusts to the current input:</p> <div data-bbox="776 1331 1029 1373" data-label="Image"> </div> <p>Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under Image Settings.</p> <p>In most cases, Auto Adjust produces the best image for your configuration.</p> <p>NOTE: When using DVI, Auto Adjust is not available.</p>
	Image settings Pixel Clock (Coarse) Phase (Fine)	<p>The Phase and Pixel Clock adjustments allow you to more closely adjust your monitor to your preference. Select Image Settings in the main OSD menu to access these settings.</p> <p>Use the - and + buttons to make adjustments. (Minimum: 0 ~ Maximum: 100)</p> <p>If satisfactory results are not obtained using the Phase adjustment, use Pixel Clock (Coarse) and then use Phase (fine), again.</p> <p>NOTE: This function may change the width of the display image. Use the Horizontal function of the Position menu to center the display image on the screen.</p>

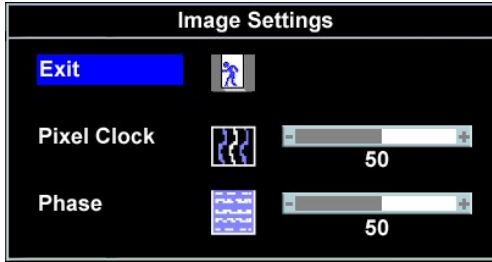

NOTE: When using DVI source, the Image Settings option is not available.




Color Settings

Color Settings adjusts the color temperature.

Under the model, you can choose Graphics or Video according to what signal input. If PC connect to your monitor, please choose Graphics; if DVD or STB or VCR connected to your monitor, Video is recommended. To disable Color Management, there are four mode, Normal Preset, Red Preset, Blue Preset, User Preset can be chosen:

- 1 If you prefer a warm color, choose Red Preset;
- 1 If you prefer a cool color, choose Blue Preset;

You can adjust the monitor color using User Preset, R, G, B. Normal Preset mean color temperature 6500K.

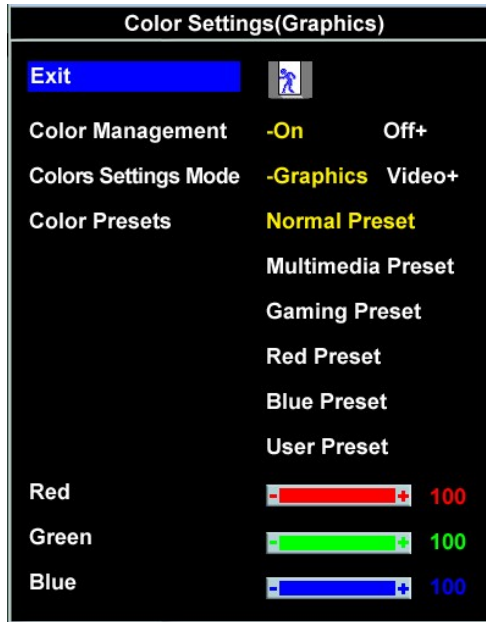


- Blue Preset
- Red Preset
- Normal Preset
- User Preset

- 1 As soon as choose Graphics, you can choose Normal Preset, Multimedia Preset, Gaming Preset, Red Preset, Blue Preset or User Preset;
- 1 If you play game in PC, choose Gaming Preset;
- 1 If you view media application like photo, clip etc via PC, choose Multimedia Preset;
- 1 If you prefer a warm color, choose Red Preset;
- 1 If you prefer a cool color, choose Blue Preset;

You can adjust the monitor color using User Preset, R, G, B. Normal Preset mean color temperature 6500K.

- 1 There are three video modes: Theater Preset, Sports Preset and Nature Preset;
- 1 For playing movie, Theater Preset can be chosen;
- 1 For playing sport program, Sports Preset is recommended;
- 1 For general picture or web or watch TV, choose Nature Preset. User can adjust the Hue(Tint)/Saturation based on the preference.

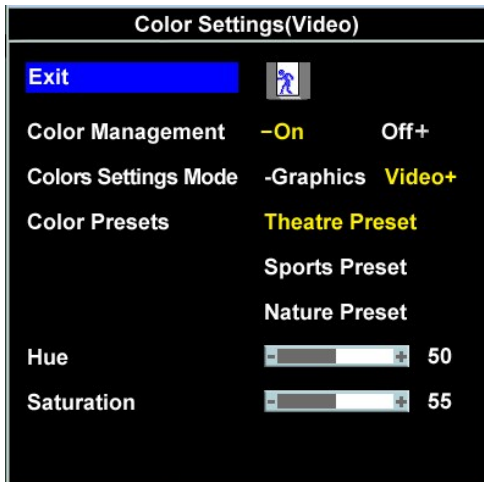


- 1 Blue Preset is selected to obtain a bluish tint. This color setting is used for text based applications (spreadsheets, programming, text editors, etc.).
- 1 Red Preset is selected to obtain a reddish tint. This color setting is used for color-intensive applications (photograph image editing, multimedia, movies, etc.).
- 1 Normal Preset is selected to obtain the default (factory) color settings. This setting is also the "sRGB" standard default color space.
- 1 User Preset: Use the plus and minus buttons to increase or decrease each of the three colors (R, G, B) independently, in single digit increments, from 0 to 100.



Advanced Settings
Input Color Format

Choose the RGB option if monitor is connected to a PC or a DVD using a VGA or a DVI cable. Choose the YPbPr+ option if monitor is connected to a DVD by a YPbPr cable.

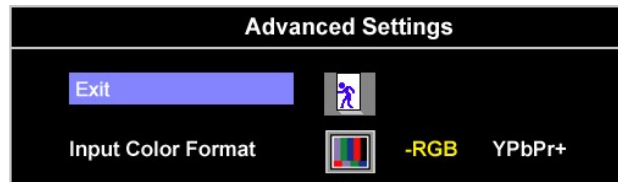

OSD Settings

Adjust the settings for the OSD, including the location, the amount of time the menu remains on the screen, and the rotation of the OSD.

Position of the OSD:

- 1 To adjust the horizontal position of the OSD, use the - and + buttons, and move OSD to the left and right.
- 1 To adjust the vertical position of the OSD, use the - and + buttons, and move OSD down and up.


OSD Hold Time:

The OSD stays active for as long as it is in use. Adjusting the hold time, sets the length of time the OSD remains active after the last time you pressed a button. Use the - and + buttons to adjust the slider in 5 second increments, from 5 to 60 seconds.




OSD Lock:

Controls user access to adjustments. When Yes (+) is selected, no user adjustments are allowed. All buttons except the Menu button are locked.

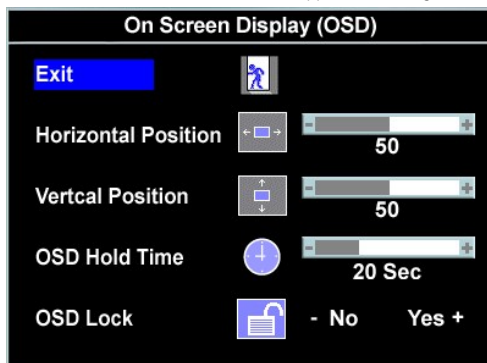NOTE: When the OSD is locked, pressing the menu button takes the user directly to the OSD settings menu, with OSD Lock selected. Select No (-) to unlock and allow user access to all applicable settings.




NOTE: You can also lock or unlock the OSD by pushing and holding the Menu button for 15 seconds.

	Language	<p>Select to have the OSD display in one of five languages (English, French, Spanish, German, or Japanese).</p> <div data-bbox="711 247 1040 577" data-label="Image"> </div> <p>NOTE: The change only affects the OSD. It has no effect on any software running on the computer.</p>
	Audio (optional)	<p>You can select to have the audio on or off when the monitor is in power saving mode.</p> <p>Yes — enables audio No — disables audio (default)</p> <div data-bbox="630 768 1122 930" data-label="Image"> </div> <p>NOTE: When the Dell Soundbar is not properly connected to the monitor, the audio menu is not available.</p>
	Factory Reset	<p>Resets the OSD menu options to the factory preset values.</p> <div data-bbox="553 1041 1198 1413" data-label="Image"> </div> <p>Exit — Select to exit out of of Reset to Factory Settings menu without resetting any OSD options.</p> <p>Position settings only — Change the settings for Image Position back to original factory settings.</p> <p>Color settings only — Change the Red, Green, and Blue settings back to their original factory settings and set the default setting for Normal Preset.</p> <p>All settings — Change all the user-adjustable settings including color, position, brightness, contrast, and OSD hold time to the factory defaults. The language of the OSD does not change.</p> <p>IR (Image Retention) — The feature helps reduce minor cases of image retention.</p> <p>DDC/CI (Display Data Channel/Command Interface) — allows you to adjust the monitor parameters (brightness, color, balance, etc.) via software applications on your PC.</p> <p>Select Disable to disable this feature. For best user experience and optimum performance of your monitor, keep this feature enabled.</p>




OSD Warning Messages

One of the following warning messages may appear on the screen indicating that the monitor is out of synchronization.

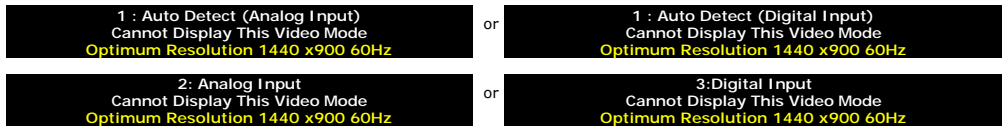

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. Either the signal is too high or too low for the monitor to use. See [Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1440 X 900 @ 60Hz.

NOTE: The floating Dell Self-test Feature Check dialog appears on-screen if the monitor cannot sense a video signal.

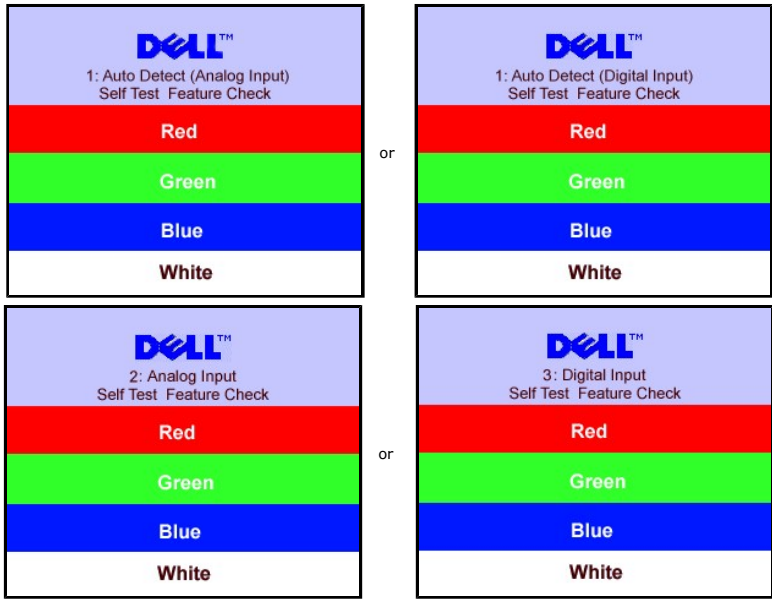

Occasionally, no warning message appears, but the screen is blank. This could also indicate that the monitor is not synchronizing with the computer.

See [Solving Problems](#) for more information.

Setting the Optimal Resolution

1. Right-click on the desktop and select **Properties**.
2. Select the **Settings** tab.
3. Set the screen resolution to 1440 x 900.
4. Click **OK**.

If you do not see 1440 x 900 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures.

If you have a Dell desktop or portable computer:


- o Go to support.dell.com, enter your service tag, and download the latest driver for your graphics card.
-

If you are using a non-Dell computer (portable or desktop):

- o Go to the support site for your computer and download the latest graphic drivers.
- o Go to your graphics card website and download the latest graphic drivers.

Using the Dell Soundbar (Optional)

The Dell Soundbar is a stereo two channel system adaptable to mount on Dell Flat Panel Displays. The Soundbar has a rotary volume and on/off control to adjust the overall system level, a blue LED for power indication, and two audio headset jacks.

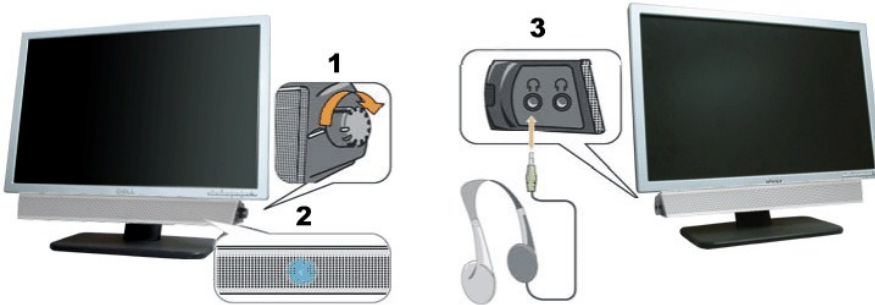

1. Power/volume control
2. Power indicator
3. Headphone connectors

Soundbar Attachment to the Monitor



1. Working from the rear of the monitor, attach the Soundbar aligning the two slots with the two tabs along the bottom rear of the monitor.
2. Slide the Soundbar to the left until it snaps into place.
3. Plug in the power cord from the Soundbar in to the connector on the back of the monitor.
4. Insert the lime-green mini stereo plug from the rear of the Soundbar into the computer's audio output jack.

⚠ **NOTICE:** Do not use with any device other than Dell Soundbar.

🔌 **NOTE:** Soundbar Power Connector - 12V DC output is for optional Dell Soundbar only.

[Back to Contents Page](#)

Solving Problems

Dell™ SE198WFP Flat Panel Monitor User's Guide

- [Troubleshooting Your Monitor](#)
- [General Problems](#)
- [Product Specific Problems](#)
- [Troubleshooting Your Soundbar](#)

⚠ CAUTION: Before you begin any of the procedures in this section, follow the [safety instructions](#).


Troubleshooting Your Monitor

Self-Test Feature Check (STFC)

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating 'Dell Self-test Feature Check' dialog box should appear on-screen on a black background if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains green. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

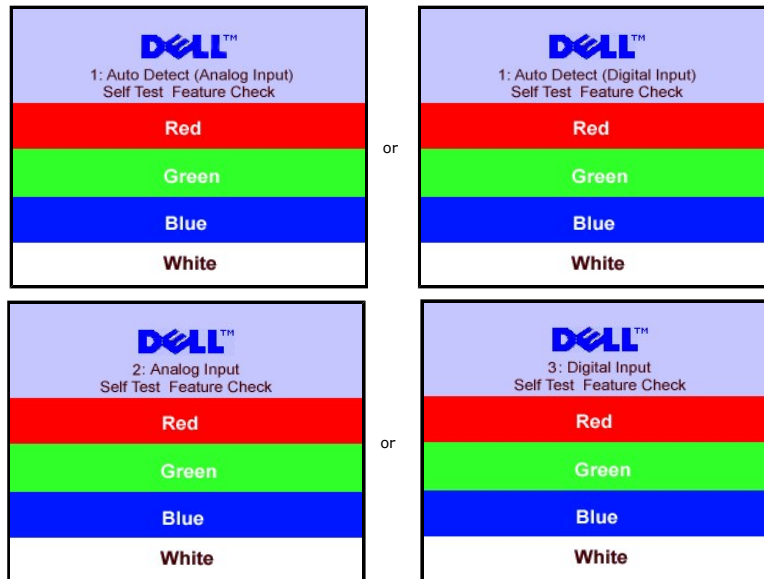


4. This box also appears during normal system operation if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable, then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer system; your monitor is functioning properly.

OSD Warning Messages

One of the following warning messages may appear on the screen indicating that the monitor is out of synchronization.

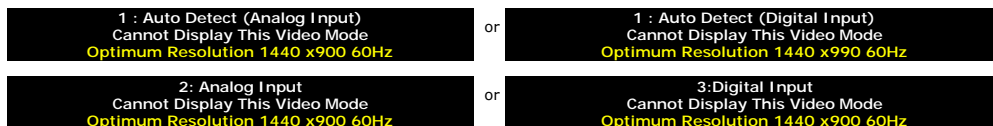

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. Either the signal is too high or too low for the monitor to use. See [Monitor Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1440 X 900 @ 60Hz.

Occasionally, no warning message appears, but the screen is blank. This could also indicate that the monitor is not synchronizing with the computer or that the monitor is in a power save mode.

General Problems

The following table contains general information about common monitor problems you might encounter.

COMMON SYMPTOMS	PROBLEM DESCRIPTION	POSSIBLE SOLUTIONS
No Video/Power LED off	No picture, monitor is dead	Check connection integrity at the both ends of the video cable, verify that the monitor and computer are plugged into a working electrical outlet, and that you have pressed the power button.
No Video/Power LED on	No picture or no brightness	<ul style="list-style-type: none"> 1 Press the input select button in the front of the monitor and ensure the correct input source is selected. 1 Increase brightness & contrast controls. 1 Perform monitor self-test feature check. 1 Check for bent or broken pins on the end of the video cable. 1 Reboot your computer and monitor.
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> 1 Push Auto Adjust button. 1 Adjust Phase and Clock controls via OSD. 1 Eliminate video extension cables. 1 Perform monitor reset. 1 Lower video resolution or increase font size.
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> 1 Push Auto Adjust button. 1 Adjust Phase and Clock controls via OSD. 1 Perform monitor reset. 1 Check environmental factors. 1 Relocate and test in another room.
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> 1 Cycle power on-off 1 These are pixels that are permanently off and this is a natural defect that occurs in LCD technology.
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> 1 Perform monitor reset. 1 Push Auto Adjust button. 1 Adjust brightness & contrast controls.
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> 1 Perform monitor reset on "Position Settings Only". 1 Push Auto Adjust button. 1 Adjust the centering controls. 1 Ensure monitor is in proper video mode.
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> 1 Perform monitor reset. 1 Push Auto Adjust button. 1 Adjust Phase and Clock controls via OSD. 1 Perform monitor self-test feature check and determine if these lines are also in self-test mode. 1 Check for bent or broken pins.
Sync Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> 1 Perform monitor reset. 1 Push Auto Adjust button. 1 Adjust Phase and Clock controls via OSD. 1 Perform monitor self-test feature check to determine if scrambled screen appears in self-test mode. 1 Check for bent or broken pins. 1 Boot up in the "safe mode".
LCD Scratched	Screen has scratches or smudges	<ul style="list-style-type: none"> 1 Turn monitor off and clean the screen. 1 For cleaning instruction, see Caring for your Monitor.
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> 1 Do not perform any troubleshooting steps. 1 Monitor needs to be replaced.
Intermittent Problems	Monitor malfunctions on and off	<ul style="list-style-type: none"> 1 Ensure monitor is in proper video mode. 1 Ensure video cable connection to computer and to the flat panel is secure. 1 Perform monitor reset. 1 Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Image Retention (from a static image)	Faint Shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> 1 Use the Power Management feature to turn off the monitor at all times when not in use. Alternatively, use a dynamically changing screensaver left on the monitor for a long period of time.

Product Specific Problems

SPECIFIC SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
Screen image is too small	Image is centered on screen, but does not fill entire viewing area.	<ul style="list-style-type: none"> 1 Perform monitor reset on "All Settings."
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen.	<ul style="list-style-type: none"> 1 Turn off the monitor, unplug the power cord and then plug back and turn on the monitor.

Troubleshooting Your Soundbar

COMMON SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
No Sound	No power to Soundbar - the power indicator is off. (built-in DC power supply. i.e. 1905FP)	<ul style="list-style-type: none"> 1 Turn the Power/Volume knob on the Soundbar clockwise to the middle position; check if the power indicator (green LED) on the front of the Soundbar is illuminated. 1 Confirm that the power cable from the Soundbar is plugged into the monitor. 1 Confirm that the monitor has power. 1 If the monitor has no power, see Troubleshooting your monitor for monitor common problem.
No Sound	Soundbar has power - power indicator is on.	<ul style="list-style-type: none"> 1 Plug the audio line-in cable into the computer's audio out jack. 1 Set all Windows volume controls to their maximum. 1 Play some audio content on the computer (i.e. audio CD, or MP3). 1 Turn the Power/Volume knob on the Soundbar clockwise to a higher volume setting. 1 Clean and reseal the audio line-in plug. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Distorted Sound	Computer's sound card is used as the audio source.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card. 1 Set all Windows volume controls to their midpoints. 1 Decrease the volume of the audio application. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting. 1 Clean and reseal the audio line-in plug. 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Distorted Sound	Other audio source is used.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the audio source. 1 Decrease the volume of the audio source. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a lower volume setting. 1 Clean and reseal the audio line-in plug.
Unbalanced Sound Output	Sound from only one side of Soundbar	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the sound card or audio source. 1 Set all Windows audio balance controls (L-R) to their midpoints. 1 Clean and reseal the audio line-in plug. 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Low Volume	Volume is too low.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Turn the Power/Volume knob on the Soundbar clockwise to the maximum volume setting. 1 Set all Windows volume controls to their maximum. 1 Increase the volume of the audio application. 1 Test the Soundbar using another audio source (i.e. portable CD player).

[Back to Contents Page](#)


[Back to Contents Page](#)

Using Your Adjustable Monitor Stand

Dell™ SE198WFP Flat Panel Monitor User's Guide

- [Attaching the Stand](#)
 - [Organizing Your Cables](#)
 - [Using the Tilt](#)
 - [Removing the Stand](#)
-

Attaching the Stand

 **NOTE:** The stand is detached when the monitor is shipped from the factory.



1. Place the stand on a flat surface.
 2. Fit the groove on the back of the monitor onto the two tabs on the stand.
 3. Lower the monitor so that the monitor mounting area snaps on/locks to the stand.
-


Organizing Your Cables



After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable hole to neatly organize all cables as shown above.

Using the Tilt

You can tilt the monitor to best fit your viewing needs.

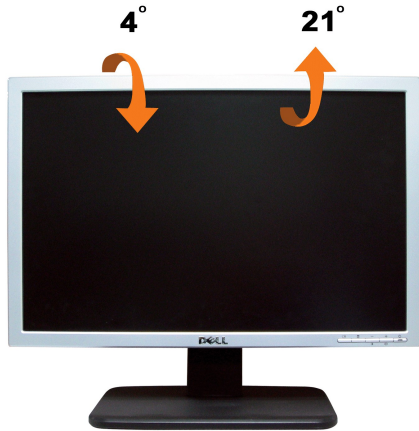

Removing the Stand



After placing the monitor panel on soft cloth or cushion, complete the following steps to remove the stand.

1. Place the monitor on a stable flat table;
2. Lift the stand away from the monitor while pressing the stand release button.

[Back to Contents Page](#)