

DELL(TM) OPENMANAGE(TM) DEPLOYMENT TOOLKIT FOR MICROSOFT(R)
WINDOWS(R) PREINSTALLATION ENVIRONMENT (WINDOWS PE)
#####

Version 2.3
Release Date: April 2007

This file contains updated information for your "Dell OpenManage
Deployment Toolkit User's Guide" and any other technical
documentation included with the Deployment Toolkit (DTK) for Windows
PE.

The Deployment Toolkit documentation includes the "Command Line
Interface Reference Guide" and the "User's Guide." See the Dell
Support website at "support.dell.com" for the most current
information.

CONTENTS
#####

- * Criticality
- * Compatibility/Minimum Requirements
- * Release Highlights
- * Installation
- * Upgrading
- * User Notes
- * Known Issues

CRITICALITY
#####

3 - Optional

Dell recommends that you review the specifics about the update to
determine if it applies to your system. The update contains changes
that may impact only certain configurations, or provides new features
that may/may not apply to your environment.

COMPATIBILITY/MINIMUM REQUIREMENTS
#####

The following subsections lists supported systems that are
compatible with the Deployment Toolkit version 2.3.

=====
Supported Systems
=====

The Deployment Toolkit version 2.3 supports the following Dell PowerEdge(TM) systems:

650, 1600SC, 1650, 1655MC, 2600, 2650, 4600, 6600, 6650, 700, 750, 1750, 800, 830, 840, 850, 860, 1800, 1850, 1855, 2800, 2850, 6800, 6850, 1900, 1950, 1955, 2900, 2970, 6950, and SC1435.

NOTE: Other systems may be supported with this release. See the Dell Support website at "support.dell.com" to verify the supported systems and to download the latest version of the toolkit.

NOTE: x8xx series systems with dual-core processors are supported.

* The sample scripts included with Deployment Toolkit have been tested with the deployment of the following operating systems:

- Microsoft Windows 2000 with SP4
- Microsoft Windows Server(R) 2003 with SP1
- Microsoft Windows Server 2003 with SP2

Installation Prerequisites

Before installing Deployment Toolkit components, ensure that you have:

- * The Deployment Toolkit self-extracting installation file ("dtk-2.X-WINPE-AXX.exe"), which contains the utilities, sample scripts, sample configuration files, and documentation you need to deploy your Dell system.
- * A workstation that has at least 500 MB of free hard-drive space.

Deployment Prerequisites

Before beginning the deployment process, ensure that you have the following tools, software, and information ready to use or consult:

- * Advanced knowledge of Windows.
- * OEM Preinstallation kit (OPK) and Windows PE and Windows Server 2003 (SP1) to build Windows PE 2005.
- * An unzip utility.
- * Working knowledge to build Windows PE 2005 (See the Microsoft documentation for customizing Windows PE 2005).
- * Working knowledge of Microsoft Remote Installation Services (RIS) and Automated Deployment Services (ADS) (including setting up of RIS and ADS environments), or any other third party deployment system or

tool.

- * A workstation with the following capabilities:
 - A writable CD drive and CD writing software
 - Network access
- * A target system with a CD drive if you are performing a local deployment or network access if you are performing a network deployment.
- * All Deployment Toolkit utilities, sample scripts, and sample configuration files.
- * All required Windows PE drivers, operating system drivers, and the Dell utility partition image file.
- * A minimum BIOS version is recommended on some of the platforms for all the DTK options to work correctly. In general, it is good practice to use the latest ("n") version of BIOS firmware or the "n-1" version that is available on "support.dell.com."

RELEASE HIGHLIGHTS
#####

Deployment Toolkit version 2.3 adds the following features:

- * Support for Dell PowerEdge 2970 systems.

NOTE: Other systems may be supported with this release. Check "support.dell.com" to verify the supported systems and to download the latest version of the toolkit.

- * Support for RAID replication feature that enables you to capture and replicate RAID settings on PowerEdge systems with similar configuration.
- * A new utility partition image that can be installed on all supported PowerEdge systems has been included with the DTK tools. The utility partition image carries hardware diagnostics for PowerEdge systems and can be installed on a partition of the hard disk.

INSTALLATION
#####

For complete installation instructions, see the "Dell OpenManage Deployment Toolkit User's Guide."

UPGRADING
#####

When upgrading from a previous release (1.x) of the DTK, ensure that you create the new DTK version 2.x environment separately from your previous version of DTK. This step is necessary because the environments and requirements for DTK version 2.x are completely different.

USER NOTES
#####

This section provides information that can help enhance your experience with the Deployment Toolkit.

=====
SCRIPT NOTES
=====

* The sample scripts are provided as examples for customers who want to develop their own deployment process. Some customers may find that the scripts work well in their environment, while some customers may need to develop their own scripts entirely from scratch. Customers deploying multiple systems need to provide unique information for each server when appropriate. For example, system host names, IP addresses, and BIOS asset tags need to be unique for each system. The batch scripts and configuration files need to be modified to reflect the unique information for each system being deployed. Many options are available to optimize this process.

* A system profile generated on a specific Dell PowerEdge system can be used to deploy only similar system models. For example, a system BIOS configuration profile generated for an optimally configured PowerEdge 1850 system can be used to deploy only similarly configured PowerEdge 1850 systems.

=====
TOOLS NOTES
=====

* SYSCFG:

- Some options may not be present on all systems, which may be due to the BIOS version or hardware feature set. The usage information generated by running SYSCFG without arguments shows only those options that are valid for your system.

- The "--devseq" option is present only if you have an available, bootable hard-disk partition. If this option is present in the configuration file, but not present on your system, you will receive a usage error.

- If you perform operations that change the "--redmem" option, you should immediately reboot the system. This note applies to command-line usage as well as "--infile" usage.

NOTE: Additionally, the "--redmem" option should not be issued with any other command and should be immediately followed by a system reboot. This note is important when you develop scripts that can alter the "--redmem" setting.

- For options that use text strings such as username, password, hostname, and community string, using characters such as <space>, "<," ">," "|," "=" on the command line can be misinterpreted by the command line parser and may cause errors. Use only alphanumeric characters to avoid these errors.
- An option for Demand-based power management has been added. Valid arguments are "enable" and "disable."
- A "--solaction" option has been added for PowerEdge x9xx systems. This option enables or disables Serial-Over-LAN (SOL) access for a particular user.

Suboptions	Valid Arguments
------------	-----------------

--userid	Userid(2-16)
--action	enable,disable

- A "--memintleave" option has been added which can enable or disable memory interleave mode. Valid arguments are <enable,disable>.
- If you set the username using the syscfg "username" option, SOL access for the corresponding user will be enabled by default. You can disable SOL access for a user using the "syscfg solaction --userid=<userid> --action=disable" command.
- Three additional filters have been added for PEFCFGPARAMS (PCP) for PowerEdge x9xx series systems. These filters are for battery warning ("batterywarn"), battery failure ("batteryfail"), and a filter for the presence of the power supply in the system ("powerabsent").

* RAIDCFG:

- When creating virtual disks, the chunk (stripe) size is always in KBs. Do not specify any units of measure for the chunk size.
- When providing multiple physical disks for the "create virtual disk" command, do not separate the disks with spaces. For example, "-ad=1:4, 1:5" causes an error. The correct way to display multiple physical disks is "-ad=1:4,1:5,1:6."
- If you change the controller mode from SCSI mode to RAID mode,

expect data loss to occur. Back up any data you want to save before changing the modes.

```
#####  
KNOWN ISSUES  
#####
```

RAIDCFG Issues:

* If you delete a virtual disk on PERC 4I/M on Windows PE, you need to reboot the system for the changes to take effect.

* Perform copy operations using "XCOPY" because the DOS "COPY" command may fail when copying across a network share. The message "invalid file handle" may be displayed. This issue is an intermittent error that is usually caused by the network connection. If the problem persists, check your network settings.

SYSCFG Issues:

* The Demand-based Power Management (DBPM) option does not work on PowerEdge 1855 with BIOS versions earlier than A05.

* The suboption for "powerctl," which is "softshutdown," does not work in Windows PE.

* On PowerEdge 700 systems, the console redirection option in the BIOS has the arguments "off," "serial port 1," and "RAC;" the equivalent arguments in DTK are "off," "serial port 1," and "serial port 2."

When the argument is set to "serial port 2" in DTK, the option corresponds to "RAC" in the BIOS setup.

* The "--solbitrate" option in "solcfgparams" and the "--mgscommbitrate" option in "serialcfgparams" accept a baud rate of 57600, but tools such as "ipmish" and "solproxy" do not function at that baud rate for PowerEdge systems.

RACADM Issues:

* If you use virtual media to boot into Windows PE, executing certain RACADM commands may cause Windows PE to crash.

Windows PE Installation Issues:

* If virtual flash is enabled and does not contain a valid image (for example, if the virtual flash contains a corrupt or random image), you may not be able to install Windows 2000 or Windows 2003 locally or remotely. To fix this issue, install

a valid image on virtual flash or disable virtual flash if it will not be used during the installation procedure.

#####

Information in this document is subject to change without notice.
(C) 2007 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell is strictly forbidden.

Trademarks used in this text: "Dell," "PowerEdge," and "OpenManage" are trademarks of Dell Inc.; "Microsoft," "Windows," and "Windows Server" are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

The sample scripts provided with the Dell OpenManage Deployment Toolkit are provided "as is." Dell disclaims any and all warranties, express, implied or statutory, with respect to the sample scripts, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, title and any warranty of non-infringement. Use the sample scripts at your own risk. Dell shall not be liable for any direct or indirect damages incurred in using the sample scripts. In no event shall Dell or its suppliers be responsible for any direct or indirect damages whatsoever (including, without limitation, damages for loss of profits, loss of use, loss of data, business interruption, or other pecuniary loss, nor for punitive, incidental, consequential, or special damages of any kind, under any part of this agreement, even if advised or aware of the possibility of such damage.

March 2007