

Dell Systems Software Support Matrix Version 6.3

[Introduction](#)

[Supported Dell OpenManage Systems Management Software](#)

[Supported Dell OpenManage Change Management Software](#)

[Supported Dell OpenManage Systems Management Consoles](#)

[Supported Dell Remote Access Controllers and Solutions](#)


[Supported Browsers](#)


[Network Interface Controllers and Supported Operating Systems](#)

[RAID Controller Supported Servers, Operating Systems, Firmware, and Driver Versions](#)

[Supported Unified Server Configurator Versions](#)

Notes and Cautions

 **NOTE:** A NOTE indicates important information that helps you make better use of your system.

 **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

Information in this publication is subject to change without notice.
© 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™, OpenManage™, PowerEdge™, PowerConnect™ and PowerVault™ are trademarks of Dell Inc. Microsoft®, Windows®, Windows Server®, Windows Vista®, Internet Explorer®, Hyper-V®, and Active Directory® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Red Hat® and Red Hat Enterprise Linux® are registered trademarks of Red Hat, Inc. in the United States and other countries. Novell® is a registered trademark and SUSE™ is a trademark of Novell Inc. in the United States and other countries. Intel® and EtherExpress® are registered trademarks of Intel Corporation, in the U.S. and other countries. VMware® is a registered trademark and ESX Server™ is a trademark of VMware, Inc. Citrix® and XenServer® are either registered trademarks or trademarks of Citrix Systems, Inc. in the United States and/or other countries. Firefox® is a registered trademark of Mozilla Foundation. Broadcom™ and NetXtreme™ are trademarks of Broadcom Corporation and/or its affiliates in the United States and certain other countries. Alteon™ and ACEnic™ are trademarks of Alteon WebSystems.

Other trademarks and trade names may be used in this publication to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.


July 2010 Rev A01


Supported Browsers

Dell Systems Software Support Matrix Version 6.3

Table 6-1. Supported Browsers Dell for OpenManage in Dell systems.

| Operating System | Windows Server 2003 | Windows Server 2003 x86_64 | Windows XP | Windows 7.0 Professional | Windows Server 2008 | Windows Server 2008 x86_64 | Windows Server 2008 R2 x86_64 | Windows Vista | SUSE Linux Enterprise Server 10 | SUSE Linux Enterprise Server 11 x86_64 | Red Hat Enterprise Linux 4.8 | Red Hat Enterprise Linux 5.x | |
|------------------|--|--|---|---|--|---|---|--|--|--|------------------------------|------------------------------|--------|
| Service Pack | SP2 | SP2 | SP3 | | SP2 | SP2 | | SP2 | SP3 | SP1 | | | |
| Browser | Internet Explorer 8.0 Internet Explorer 7.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 8.0 x64 Internet Explorer 7.0 Firefox 3.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 7.0 Firefox 3.0 | Internet Explorer 8.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 7.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 8.0 x64 Internet Explorer 7.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 7.0 Firefox 3.0 Firefox 3.5 | Internet Explorer 8.0 Internet Explorer 7.0 Firefox 3.0 Firefox 3.5 | Native | Native | Native | Native |

 **NOTE:** IT Assistant is not supported on Firefox 3.0 for Microsoft Windows Server 2008 Family.

 **NOTE:** For the latest information, see the readme file for the specific product available on support.dell.com/manuals. On this page, click **Software > Systems Management > Dell OpenManage Releases**. Select the OpenManage Release version and then select the appropriate product to view the readme file.

| | | 4.0 U1 | 4.1 | Hyper-V | Hyper-V R2 | XenServer 5.6 (HDD) |
|--------|--|--------|------|---------|------------|---------------------|
| R200 | | D, S | D, S | D, S | D, S | |
| R210 | | D, S | D, S | D | D | |
| R300 | | D, S | D, S | D, S | D, S | S |
| R310 | | D | D | D, S | D, S | |
| R410 | | D, S | D, S | D, S | D, S | S |
| R510 | | D | D | D | D | |
| R610 | | D, S | D, S | D, S | D, S | S |
| R710 | | D, S | D, S | D, S | D, S | S |
| R715 | | D | D | D | D | |
| R805 | | D, S | D, S | D, S | D, S | S |
| R805v | | D | D | D | D | |
| R810 | | D | D | D | D | |
| R815 | | D | D | D | D | |
| R900 | | D, S | D, S | D, S | D, S | S |
| R905 | | D, S | D, S | D, S | D, S | S |
| R905v | | D | D | D | D | |
| R910 | | D | D | D | D | |
| M600 | | D, S | D, S | D, S | D, S | S |
| M605 | | D, S | D, S | D, S | D, S | S |
| M610 | | D, S | D, S | D, S | D, S | S |
| M710 | | D, S | D, S | D, S | D, S | S |
| M805 | | D, S | D, S | D, S | D, S | S |
| M905 | | D, S | D, S | D, S | D, S | S |
| M910 | | D | D | D | D | |
| T100 | | D, S | D, S | D, S | D, S | S |
| T105 | | * | * | * | * | * |
| T110 | | D, S | D, S | D | D | |
| T300 | | D, S | D, S | D, S | D, S | S |
| T310 | | D | D | D | D | |
| T410 | | D, S | D, S | D, S | D, S | S |
| T605 | | D, S | D, S | D, S | D, S | S |
| T610 | | D, S | D, S | D, S | D, S | S |
| T710 | | D, S | D, S | D, S | D, S | S |
| 6950 | | D, S | D, S | D, S | D, S | S |
| 2970 | | D, S | D, S | D, S | D, S | S |
| 2950 | | D, S | D, S | D, S | D, S | S |
| 2900 | | D, S | D, S | D, S | D, S | S |
| 1955 | | D, S | D, S | D, S | D, S | S |
| 1950 | | D, S | D, S | D, S | D, S | S |
| 1900 | | | | D, S | D, S | S |
| 6850 | | | | | | |
| 6800 | | | | | | |
| 2850 | | | | | | |
| 2800 | | | | | | |
| 1855 | | | | | | |
| 1850 | | | | | | |
| 1800 | | | | | | |
| 860 | | | | D, S | D, S | S |
| 850 | | | | | | |
| 840 | | | | D, S | D, S | S |
| 830 | | | | | | |
| 800 | | | | | | |
| SC1435 | | | | D, S | D, S | S |
| SC1430 | | | | D, S | D, S | |
| SC1425 | | | | | | |

| | | | | | | |
|----------------------|--|--|--|------|------|---|
| SC1420 | | | | | | |
| SC440 | | | | D, S | D, S | S |
| SC430 | | | | | | |
| SC420 | | | | | | |
| PowerVault 100 | | | | | | |
| PowerVault 500 | | | | | | |
| PowerVault 600 | | | | | | |
| PowerVault DL2000 | | | | | | |
| PowerVault DL2100 | | | | | | |
| PowerVault DX6000 | | | | | | |
| PowerVault NX1950 | | | | | | |
| PowerVault NX3000 | | | | | | |

[Back to Contents Page](#)

[Back to Contents Page](#)

Supported Dell OpenManage Systems Management Software

Dell Systems Software Support Matrix Version 6.3

- [Supported Dell OpenManage Systems Management Software on Microsoft Windows Operating Systems](#)
- [Supported Dell OpenManage Systems Management Software on Linux Operating Systems](#)
- [Supported Dell OpenManage Systems Management Software on Virtualization Operating Systems](#)

Dell OpenManage systems management software is a suite of application programs for Dell systems. This software allows you to manage your system with proactive monitoring, notification, and remote access.

Dell OpenManage systems management software can be divided into:

1 Dell OpenManage Server Administrator

Dell OpenManage Server Administrator is a comprehensive, one-to-one systems management solution, designed for system administrators, to manage systems locally and remotely on a network.

Server Administrator comprises the following services:

- 1 Server Administrator Web Server
- 1 Server Instrumentation
- 1 Remote Enablement
- 1 Remote Access Controller
- 1 Storage Management

For more information about Dell OpenManage Server Administrator, see the *Dell OpenManage Server Administrator User's Guide*. This guide is available on the Dell Support website at support.dell.com/manuals.

1 Dell Systems Build and Update Utility

Dell Systems Build and Update Utility is designed to speed up the setup and performance of Dell systems. Dell Systems Build and Update Utility provides a series of intuitive and easy-to-follow interview screens that help guide you through the server installation process.


For more information about Systems Build and Update Utility, see the *Dell Systems Build and Update Utility User's Guide* available on the Dell Support website at support.dell.com/manuals.


Documentation Conventions for Dell Systems


Table 2-1. Documentation Conventions for Dell Systems

| x8xx | x9xx | xx0x | xx1x |
|------|-------------------|------|-------------------|
| 800 | 1900 | T105 | T710 |
| 830 | 1950 | R200 | M710 |
| 840 | 1955 | M600 | M610 |
| 850 | 2900 | M605 | T410 |
| 860 | 2950 | R805 | R210 |
| 1800 | 2970 | R900 | R410 |
| 1850 | 6950 | T605 | R510 |
| 1855 | PowerVault 100 | R905 | R610 |
| 2800 | PowerVault 500 | T300 | R710 |
| 2850 | PowerVault 600 | R300 | T110 |
| 6800 | PowerVault DL2000 | M805 | T310 |
| 6850 | PowerVault NX1950 | M905 | T610 |
| | | T100 | T710 |
| | | | PowerVault NX300 |
| | | | PowerVault NX3000 |
| | | | M910 |
| | | | R310 |
| | | | R715 |
| | | | R815 |
| | | | R910 |
| | | | DX6000 |
| | | | DL2200 |

| | | | | | | | | | | | | | | |
|-------------------|--|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 6950 | | | | | | X | X | X | X | X | X | X | X | X |
| 2970 | | | | X | X | X | X | X | X | X | X | X | X | X |
| 2950 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 2900 | | | | X | X | X | X | X | X | X | X | X | X | X |
| 1955 | | | | | | | X | X | X | X | X | X | X | X |
| 1955MC | | | | | | | X | X | X | X | X | X | X | X |
| 1950 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 1900 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 6850 | | | | | | X | X | X | X | X | X | X | X | X |
| 6800 | | | | | | X | X | X | X | X | X | X | X | X |
| 2850 | | | | X | X | X | X | X | X | X | X | X | X | X |
| 2800 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 1855 | | | | | | | X | X | X | X | X | X | X | X |
| 1855MC | | | | | | X | X | X | X | X | X | X | X | X |
| 1850 | | | | X | X | X | X | X | X | X | X | X | X | X |
| 1800 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 860 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 850 | | | | X | X | X | X | X | X | X | X | X | X | X |
| 840 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 830 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| 800 | | X | X | X | X | X | X | X | X | X | X | X | X | X |
| SC1435 | | | | * | * | * | * | * | * | * | * | * | * | * |
| SC1430 | | * | * | * | * | * | * | * | * | * | * | * | * | * |
| SC1425 | | | | | | * | * | * | * | * | * | * | * | * |
| SC440 | | * | * | * | * | * | * | * | * | * | * | * | * | * |
| SC430 | | * | * | | | * | * | * | * | * | * | * | * | * |
| SC420 | | * | * | | | * | * | * | * | * | * | * | * | * |
| PowerVault 100 | | | | | | | | | | | | | | |
| PowerVault 500 | | | | | | | | | | | | | | |
| PowerVault 600 | | | | | | | | | | | | | | |
| PowerVault DL2000 | | | | | | | | | | | | | | |
| PowerVault DL2100 | | | | | | | | | | | | | | |
| PowerVault DX6000 | | | | | | | | | | | | | | |
| PowerVault NX300 | | | | | | | | | | | | | | |
| PowerVault NX1950 | | | | | | | | | | | | | | |
| PowerVault NX3000 | | | | | | | | | | | | | | |
| PowerVault NX3100 | | | | | | | | | | | | | | |

 **NOTE:** Dell PowerVault DL2100 supports the installation of only the Windows Server 2008 x64 Standard Edition with SP2 or higher operating system.

 **NOTE:** Dell PowerVault DL2000 supports the installation of only the Windows Server 2008 x64 Standard Edition with SP1 or higher operating system.

 **NOTE:** Dell PowerVault DL2200 supports the installation of only the Windows Server 2008 x64 Standard Edition with SP2 or higher operating system.

Supported Dell OpenManage Systems Management Software on Linux Operating Systems

[Table 2-3](#) lists the supported Dell OpenManage 6.3 installation and systems management software on systems running supported Linux operating system.

- 1 An X in the intersection of the operating system and the Dell system columns indicates that Server Administrator and Dell Systems Build and Update Utility are supported on that operating system for the corresponding Dell system.
- 1 An asterisk (*) in the intersection of the operating system and the Dell system columns indicates operating system support for Dell systems that do not support Dell OpenManage software.
- 1 An (A) in the intersection of the operating system and the Dell system columns indicates support for Dell OpenManage software, but not for the Dell systems.

Table 2-3. Supported Dell OpenManage Systems Management Software on Systems Running Linux Operating Systems

| Dell System | | SUSE Linux Enterprise Server 10 (x86_64) | SUSE Linux Enterprise Server 11 (x86_64) | Red Hat Enterprise Linux 4.8 (x86_32) | | | Red Hat Enterprise Linux 4.8 (x86_64) | | |
|-------------|--------------|--|--|---------------------------------------|----|----|---------------------------------------|----|----|
| | Edition | | | WS | ES | AS | WS | ES | AS |
| | Service Pack | SP3 | SP1 | | | | | | |
| R200 | | X | X | | X | X | | X | X |
| R210 | | X | X | X | X | X | X | X | X |
| R300 | | X | X | | X | X | | X | X |
| R310 | | X | X | X | X | X | X | X | X |
| R410 | | X | X | X | X | X | X | X | X |
| R510 | | X | X | X | X | X | X | X | X |
| R610 | | X | X | X | X | X | X | X | X |
| R710 | | X | X | X | X | X | X | X | X |
| R715 | | X | X | | | | | | |
| R805 | | X | X | X | X | X | X | X | X |
| R810 | | X | X | | | | | | |
| R815 | | X | X | | | | | | |
| R900 | | X | X | X | X | X | X | X | X |
| R905 | | X | X | X | X | X | X | X | X |
| R910 | | X | X | | | | | | |
| M600 | | X | X | X | X | X | X | X | X |
| M605 | | X | X | X | X | X | X | X | X |
| M610 | | X | X | X | X | X | X | X | X |
| M710 | | X | X | X | X | X | X | X | X |
| M710HD | | X | X | | | | | | |
| M805 | | X | X | X | X | X | X | X | X |
| M905 | | X | X | X | X | X | X | X | X |
| M910 | | X | X | | | | | | |
| T100 | | * | * | * | * | * | * | * | * |
| T105 | | * | * | * | * | * | * | * | * |
| T110 | | X | X | X | X | X | X | X | X |
| T300 | | X | X | | X | X | | X | X |
| T310 | | X | X | X | X | X | X | X | X |
| T410 | | X | X | X | X | X | X | X | X |
| T605 | | X | X | X | X | X | X | X | X |
| T610 | | X | X | X | X | X | X | X | X |
| T710 | | X | X | X | X | X | X | X | X |
| 6950 | | X | X | X | X | X | X | X | X |
| 2970 | | X | X | X | X | X | X | X | X |
| 2950 | | X | X | X | X | X | X | X | X |
| 2900 | | X | X | X | X | X | X | X | X |
| 1955 | | X | X | X | X | X | X | X | X |
| 1950 | | X | X | X | X | X | X | X | X |
| 1900 | | X | X | X | X | X | X | X | X |
| 6850 | | X | X | X | X | X | X | X | X |
| 6800 | | X | X | X | X | X | X | X | X |
| 2850 | | | | X | X | X | X | X | X |
| 2800 | | | | X | X | X | X | X | X |
| 1855 | | | | X | X | X | X | X | X |
| 1850 | | | | X | X | X | X | X | X |
| 1800 | | | | X | X | X | X | X | X |
| 860 | | X | X | X | X | X | X | X | X |
| 850 | | | | X | X | X | X | X | X |
| 840 | | X | X | X | X | X | X | X | X |
| 830 | | | | X | X | X | X | X | X |

| | | | | | | | | | |
|-------------------|--|---|---|---|---|---|---|---|---|
| 800 | | | | X | X | X | X | X | X |
| SC1435 | | * | * | * | * | | * | * | |
| SC1430 | | * | * | | * | | | * | |
| SC1425 | | | | * | * | | * | * | * |
| SC1420 | | | | | * | | | * | * |
| SC440 | | * | * | | * | | | * | |
| SC430 | | | | | * | | | * | |
| SC420 | | | | | * | | | | |
| PowerVault 100 | | | | | | | | | |
| PowerVault 500 | | | | | | | | | |
| PowerVault 600 | | | | | | | | | |
| PowerVault DL2000 | | | | | | | | | |
| PowerVault DL2100 | | | | | | | | | |
| PowerVault DX6000 | | X | X | X | X | X | X | X | X |
| PowerVault NX300 | | | | | | | X | X | X |
| PowerVault NX1950 | | | | | | | | | |
| PowerVault NX3000 | | | | | | | | | |
| PowerVault NX3100 | | | | | | | | | |

Supported Dell OpenManage Systems Management Software on Virtualization Operating Systems

Table 2-4 lists the supported Dell OpenManage 6.3 installation and systems management software on systems running supported virtualization operating system.

- 1 An X in the intersection of the operating system and the Dell system columns indicates that Server Administrator and Dell Systems Build and Update Utility are supported on that operating system for the corresponding Dell system.
- 1 An asterisk (*) in the intersection of the operating system and the Dell system columns indicates operating system support for Dell systems that do not support Dell OpenManage software.

Table 2-4. Supported Dell OpenManage Systems Management Software on Systems Running Virtualization Operating Systems

| Dell System | Edition | VMware | | | | | | Microsoft | | Citrix |
|--------------|---------|--------|-----|--------|-----|-------|---|-----------|------------|---------------------|
| | | ESX | | ESXi | | ESXi | | Hyper-V | Hyper-V R2 | XenServer 5.6 (HDD) |
| | | 4.0 U1 | 4.1 | 4.0 U1 | | 4.1 | | | | |
| Service Pack | | | HDD | Flash | HDD | Flash | | | | |
| R200 | | X | X | X | | X | | X | X | |
| R210 | | X | X | X | | X | | X | X | |
| R300 | | X | X | X | | X | | X | X | |
| R310 | | X | X | X | | X | | | | |
| R410 | | X | X | X | | X | | X | X | |
| R510 | | X | X | X | X | X | X | X | X | X |
| R610 | | X | X | X | X | X | X | X | X | X |
| R710 | | X | X | X | X | X | X | X | X | X |
| R715 | | X | X | X | X | X | X | X | X | X |
| R805 | | X | X | X | X | X | X | X | X | X |
| R810 | | X | X | X | X | X | X | X | X | X |
| R815 | | X | X | X | X | X | X | X | X | X |
| R900 | | X | X | X | X | X | X | X | X | X |
| R905 | | X | X | X | X | X | X | X | X | |
| R905v | | X | X | X | X | X | X | X | X | X |
| R910 | | X | X | X | X | X | X | X | X | X |
| M600 | | X | X | X | | X | | X | X | X |

[Back to Contents Page](#)

[Back to Contents Page](#)

Introduction

Dell Systems Software Support Matrix Version 6.3

- [What's New for this Release](#)
- [Where Can I Find The Server Administrator Application?](#)
- [Structure of This Guide](#)
- [Supported Operating Systems](#)
- [Supported GUI Languages](#)

The Dell Systems Software Support Matrix helps identify Dell OpenManage software and other Dell components supported on various Dell systems.

This guide is intended for system administrators and technicians who want to obtain information about the various Dell systems available, the operating systems supported by these systems, and the Dell OpenManage components that can be installed on these systems.

What's New for this Release

The following are the changes in Dell OpenManage for this release:

- 1 Support for the following Microsoft Operating Systems: Windows Small Business Server 2008 R2, Windows Essential Business Server 2008 SP1, Windows Small Business Server 2008 SP2, Windows 7.0 Professional (32-bit x86) and (x64)
- 1 Support for following Dell Systems: M910, R310, R715, R815, R910
- 1 Support for following PowerVault Systems: NX300, NX3000, DX6000, DL2200, NX3100
- 1 Support for the following Linux Operating Systems: Red Hat Enterprise Linux 5.5, SUSE Linux Enterprise Server 11 (x86_64) SP1, SUSE Linux Enterprise Server 10 (x86_64) SP3
- 1 Support for the following Virtualization Operating Systems: Citrix XenServer 5.6 (HDD), Hyper V, Hyper V-R2, ESXi 4.1

Where Can I Find The Server Administrator Application?

Depending on the version of Dell OpenManage you are using, the Server Administrator is available on different media. See [Table 1-1](#) for more information.

Table 1-1. Server Administrator and Corresponding Media

| Dell OpenManage Version | Available on Media |
|-------------------------|---|
| 5.4 and later | <i>Dell Systems Management Tools and Documentation DVD</i> |
| 5.3-5.3.2 | <i>Dell Systems Console and Agent CD or the Dell Systems Management Tools and Documentation DVD</i> |
| 4.3-5.2.3 | <i>Dell PowerEdge Installation and Server Management CD</i> |
| 3.0-4.2 | <i>Systems Management CD</i> |
| 2.2 and earlier | <i>Applications CD</i> |

Structure of This Guide

This guide is organized on the basis of the Dell OpenManage suite of products and the operating systems on which these products are supported.

This guide contains the following chapters:

[Supported Dell OpenManage Systems Management Software](#)

This chapter contains information about Dell OpenManage systems management software on Dell systems running supported operating systems. Dell OpenManage systems management software includes:

- 1 Dell OpenManage Server Administrator
- 1 Dell Systems Build and Update Utility

[Supported Dell OpenManage Change Management Software](#)

This chapter contains information about Dell OpenManage change management software on Dell systems running supported operating systems. Dell OpenManage change management software includes:

- 1 Dell Update Packages
- 1 Server Update Utility

[Supported Dell OpenManage Systems Management Consoles](#)

This chapter contains information about Dell OpenManage systems management consoles on Dell systems running supported operating systems. Dell OpenManage systems management consoles include:

- 1 Dell OpenManage IT Assistant
- 1 Dell Management Console
- 1 DRAC tools that include RACADM and VMCLI
- 1 BMC Management Utility (BMU) and IPMItool out-of-band
- 1 IPMItool in-band

[Supported Dell Remote Access Controllers and Solutions](#)

This chapter contains information about Dell Remote Access Controllers (DRAC) and Integrated Dell Remote Access Controllers (iDRAC) versions and firmware, as well as supported Baseboard Management Controllers (BMC) and Chassis Management Controllers (CMC) IPMI protocol versions.

[Supported Browsers](#)

This chapter lists supported browsers on various operating systems for Dell systems.

[Network Interface Controllers and Supported Operating Systems](#)

This chapter contains information about Network Interface Controllers and Supported Operating Systems.

[RAID Controller Supported Servers, Operating Systems, Firmware, and Driver Versions](#)

This chapter contains information about RAID controller supported servers, version of the Storage Management Service, Dell System Management version, Firmware version number required for a particular controller, and Supported operating systems, where each operating system requires a specific driver.

Supported Operating Systems

This Software Support Matrix offers support information for the following operating systems:

Microsoft Windows Operating Systems


- 1 Windows 7 Professional (32-bit x86) and (x64)
- 1 Microsoft Windows Server 2008 Web, Core Standard, and Core Enterprise (32-bit x86) editions with SP2
- 1 Microsoft Windows Server 2008 Core Standard, Core Enterprise, and Core Datacenter (x64) editions with SP2
- 1 Microsoft Windows Server 2008 R2 Standard and Core, Enterprise and Core, Datacenter and Core (x64) editions
- 1 Microsoft Windows Server 2008 Foundation
- 1 Microsoft Windows Server 2003 Web, Standard and Enterprise (32-bit x86) editions with SP2
- 1 Microsoft Windows Server 2003 Standard, Enterprise, and Datacenter (x64) editions with SP2
- 1 Microsoft Windows Server 2003 R2 Standard and Enterprise (32-bit x86) editions with SP2
- 1 Microsoft Windows Server 2003 R2 Standard, Enterprise, and Datacenter (x64) editions with SP2
- 1 Microsoft Windows Essential Business Server 2008 Standard and Premium editions SP1
- 1 Microsoft Windows Small Business Server 2008 Standard and Premium editions SP2
- 1 Microsoft Windows Small Business Server 2008 Standard and Premium editions R2
- 1 Microsoft Windows Small Business Server 2003 Standard and Premium editions with SP2
- 1 Microsoft Windows Storage Server 2008 Express, Workgroup, Standard, and Enterprise x64 editions
- 1 Microsoft Windows Storage Server 2003 R2 Express, Workgroup, Standard, and Enterprise x64 editions with SP2
- 1 Microsoft Windows Server 2003 Compute Cluster Edition and Microsoft Windows Server 2008 HPC Edition
- 1 Microsoft Windows Unified Data Storage Server 2003 Standard and Enterprise x64 editions
- 1 Microsoft Windows XP Professional with SP3 (32-bit x86)
- 1 Microsoft Windows Vista Business and Enterprise editions.

Linux Operating Systems

- 1 SUSE Linux Enterprise Server 11 (x86_64) SP1
- 1 SUSE Linux Enterprise Server 10 with SP3 (x86_64)
- 1 Red Hat Enterprise Linux 5 server with Update 5 (x86_32)
- 1 Red Hat Enterprise Linux 5 server with Update 5 (x86_64)
- 1 Red Hat Enterprise Linux WS, ES, and AS version 4.8 (x86_32)
- 1 Red Hat Enterprise Linux WS, ES, and AS version 4.8 (x86_64)

Virtualization Operating Systems

- 1 Microsoft Hyper-V, Hyper-V R2
- 1 VMware ESX version 4.0 update 1, and version 4.1
- 1 VMware ESXi version 4.0 update 1, and version 4.1
- 1 Citrix XenServer 5.6

 **NOTE:** For Dell OpenManage information specific to VMware, see the latest Installation Guide, Release Notes, and the Dell-VMware Compatibility Matrix in support.dell.com/manuals

Supported GUI Languages

Dell OpenManage is localized into French, German, Spanish, Japanese, and Simplified Chinese. Dell OpenManage software is localized according to the matrix in the following table. Dell OpenManage does not support languages outside of this table.

[Table 1-2](#) plots the language of the Dell OpenManage GUI against the operating system languages.

Table 1-2. Supported Dell OpenManage GUI Languages


| Dell OpenManage GUI Languages | English Operating System | French Operating System | German Operating System | Spanish Operating System | Simplified Chinese Operating System | Japanese Operatin |
|-------------------------------|--------------------------|-------------------------|-------------------------|--------------------------|-------------------------------------|-------------------|
| English | X | X | X | X | X | |
| French | | X | | | | |
| German | | | X | | | |
| Spanish | | | | X | | |
| Simplified Chinese | | | | | X | |
| Japanese | | | | | | |

[Back to Contents Page](#)

Supported Virtualization Operating Systems for Server Administrator

Tab le 4-4. Supported Virtualization Operating Systems Server Administrator on your system

| Edition | VMware | | VMware | | Microsoft | Citrix |
|-------------------------|------------------------|---------------|--------------|-----|-----------|---------------------|
| | ESXi | ESXi | ESX | ESX | | |
| | 4.0 Update 1 Flash/HDD | 4.1 Flash/HDD | 4.0 Update 1 | 4.1 | Hyper-V | XenServer 5.6 (HDD) |
| Physical System Support | X | X | X | X | X | X |

 **NOTE:** Server Administrator Web Server component cannot be installed on Dell systems running ESXi operating systems

Supported Operating Systems for Server Administrator Web Server on your managed system (servers)

For information on supported operating systems on managed systems, see [Supported Dell OpenManage Systems Management Software](#).

Supported Systems for Dell OpenManage IT Assistant


Dell OpenManage IT Assistant provides a central point of access to monitor and manage systems on a local area network (LAN) or wide area network (WAN). By allowing an administrator a comprehensive view across the enterprise, IT Assistant can increase system uptime, automate repetitive tasks, and prevent interruption to critical business operations.

For more information on IT Assistant, see the *Dell OpenManage IT Assistant User's Guide* available on the Dell Support website at support.dell.com.

Supported Microsoft Windows Operating Systems for IT Assistant

Table 4-5. Supported Microsoft Windows Operating Systems for IT Assistant

| Edition | Windows Server 2003 R2 x86 | | | Windows Server 2008 x86 | | | Windows XP x86 | Windows Vista x86 | | Windows 7.0 x86 |
|--------------|----------------------------|----------|------------|-------------------------|----------|------------|----------------|-------------------|------------|-----------------|
| | Web | Standard | Enterprise | Web | Standard | Enterprise | Professional | Business | Enterprise | Professional |
| Service Pack | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP3 | SP2 | SP2 | |
| IT Assistant | X | X | X | X | X | X | X | X | X | X |

 **NOTE:** IT Assistant cannot be installed on Dell systems running Windows 2008 R2 operating systems

Supported Linux Operating Systems for IT Assistant

IT Assistant cannot be installed on Dell systems running Red Hat Enterprise Linux or SUSE Linux Enterprise Server operating systems. These systems can, however, launch IT Assistant through supported browsers (Firefox version 3.0). For more information on supported browsers, see the [Supported Browsers](#) section.

Supported Virtualization Operating Systems

IT Assistant can be installed on guest operating systems installed on the virtualization operating systems listed in [Table 4-6](#).

Table 4-6. Supported Virtualization Operating Systems on Physical System

| Edition | VMware | | VMware | | Microsoft | Citrix |
|-------------------------|------------------------|---------------|--------|-----|-----------|---------------------|
| | ESXi | ESXi | ESX | ESX | | |
| | 4.0 Update 1 Flash/HDD | 4.1 Flash/HDD | 4.0 | 4.1 | Hyper-V | XenServer 5.6 (HDD) |
| Physical System Support | X | X | X | X | X | X |

Supported Systems for BMU and IPMI tool Out-of- Band

BMC Management Utility (BMU) is a utility to access Baseboard Management Controller (BMC) and perform management activities. BMU allows remote, out-of-band LAN and/or serial port power control, event log access, and console redirection.

IPMItool is a Command Line Interface (CLI) utility that helps in configuring and managing devices using the IPMI version 1.5 and later protocol. IPMItool supports out-of-band (OOB) access (over a LAN or through the serial port) to a single system at a time. IPMItool also supports in-band access.

For more information on BMU and IPMItool out-of-band, see the *Dell OpenManage Baseboard Management Controller Utilities User's Guide* available on the Dell Support website at support.dell.com.

Supported Microsoft Windows Operating Systems for BMU and IPMI tool Out-of-Band

An X in the operating system column indicates BMU and IPMItool out-of-band support.

Table 4-10. Supported Microsoft Windows Operating Systems for BMU and IPMI tool Out-of-Band

| | Windows Server 2003 x86 | | | Windows Server 2003 x64 | | | Windows Server 2008 x86 | | | Windows Server 2008 x64 | | Windows XP |
|---------------------------|-------------------------|----------|------------|-------------------------|------------|------------|-------------------------|----------|------------|-------------------------|------------|------------------|
| Edition | Web | Standard | Enterprise | Standard | Enterprise | Datacenter | Web | Standard | Enterprise | Standard | Datacenter | Professional x86 |
| Service Pack | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | SP3 |
| BMU/IPMI tool out-of-band | X | X | X | X | X | X | X | X | X | X | X | X |

Supported Linux Operating Systems for BMU and IPMI tool Out-of-Band

An X in the operating system column indicates BMU and IPMItool out-of-band support.

Table 4-11. Supported Linux Operating Systems for BMU and IPMI tool Out-of-Band

| | SUSE Linux Enterprise Server 11 (x86_64) | SUSE Linux Enterprise Server 10 (x86_64) | Red Hat Enterprise Linux 4.8 (x86_32) | | | Red Hat Enterprise Linux 4.8 (x86_64) | | | Red Hat Enterprise Linux 5.5 server (x86_32) | Red Hat Enterprise Linux 5.5 server (x86_64) |
|---------------------------|--|--|---------------------------------------|----|----|---------------------------------------|----|----|--|--|
| Edition | | | WS | ES | AS | WS | ES | AS | | |
| Service Pack | SP1 | SP3 | | | | | | | | |
| BMU/IPMI tool out-of-band | X | X | X | X | X | X | X | X | X | X |

Supported Systems for IPMI tool In-Band

IPMItool in-band also helps in configuring and managing devices.

For more information on IPMItool, see the *Dell OpenManage Baseboard Management Controller Utilities User's Guide* available on the Dell Support website at support.dell.com.

Supported Microsoft Windows Operating Systems for IPMI tool In-Band

An X in the operating system column indicates IPMItool in-band support.

Table 4-12. Supported Microsoft Windows Operating Systems for IPMI tool In-Band

| | Windows Server 2003 R2 | Windows Server 2008 | Windows Server | Windows Server 2008 R2 | Windows Server 2008 R2 x64 |
|--|------------------------|---------------------|----------------|------------------------|----------------------------|
| | | | | | |

| Edition | x86 or x64 | | | x86 | | | 2008 x64 | | x86 | | | | | |
|-------------------|------------|----------|------------|-----|----------|------------|----------|------------|-----|-------------------|---------------------|-------------------|---------------------|---------------------|
| | Web | Standard | Enterprise | Web | Standard | Enterprise | Standard | Datacenter | Web | Standard and Core | Enterprise and Core | Standard and Core | Enterprise and Core | Datacenter and Core |
| Service Pack | SP2 | SP2 | SP2 | SP2 | SP2 | SP2 | Gold | Gold | | | | | | |
| IPMI tool in-band | X | X | X | X | X | X | X | X | X | X | X | X | X | X |

Supported Linux Operating Systems for IPMI tool In-Band

An X in the operating system column indicates IPMItool in-band support.

Table 4-13. Supported Linux Operating Systems for IPMI tool In-Band

| Edition | SUSE Linux Enterprise Server 11 (x86_64) | SUSE Linux Enterprise Server 10 (x86_64) | Red Hat Enterprise Linux 4.8 (x86_32) | | | Red Hat Enterprise Linux 4.8 (x86_64) | | | Red Hat Enterprise Linux 5.5 server (x86_32) | Red Hat Enterprise Linux 5.5 server (x86_64) |
|-------------------|--|--|---------------------------------------|----|----|---------------------------------------|----|----|--|--|
| | | | WS | ES | AS | WS | ES | AS | | |
| Service Pack | SP1 | SP3 | | | | | | | | |
| IPMI tool in-band | X | X | X | X | X | X | X | X | X | X |

[Back to Contents Page](#)

Network Interface Controllers and Supported Operating Systems

Dell Systems Software Support Matrix Version 6.3

- [Overview](#)
- [NIC Drivers and Operating Systems](#)

Overview

The drivers required for a Network Interface Card (NIC) depend on the operating system installed on your system.


[Table 7-1](#) shows the relationship between NICs supported by Dell OpenManage Server Administrator and the drivers that they require on each supported operating system.

NIC Drivers and Operating Systems

To determine required drivers for NIC systems management, locate your NIC manufacturer in [Table 7-1](#) and the operating system that is installed on your system.

Table 7-1. NIC Manufacturers and Drivers Required for Supported Operating Systems

| NIC Product Name | Microsoft Windows 2003 Family | Microsoft Windows 2008 Family | Red Hat Enterprise Linux 4.8 | Red Hat Enterprise Linux Server 5.5 |
|---|-------------------------------|-------------------------------|------------------------------|-------------------------------------|
| Broadcom NetXtreme Family of Adapters (5721, 5722) | 14.2.0 | 14.2.0 | 14.2.0 | Drivers provided by OS |
| Broadcom NetXtreme II Family of Adapters (BCM5708, BCM5709) | 14.2.0 | 14.2.0 | 14.2.0 | Drivers provided by OS |
| Broadcom NetXtreme II Family of Adapter 10GbE (BCM57710) | 14.2.0 | 14.2.0 | 14.2.0 | Drivers provided by OS |
| Intel EtherExpress Family of Adapters | 12.0.0 | 12.0.0 | 12.0.0 | 12.0.0 |

 **NOTE:** Dell no longer supports following NICs: **3COM 3C98x Family of Adapters** and **Alteon ACEnic Copper Gigabit**.

[Back to Contents Page](#)


RAID Controller Supported Servers, Operating Systems, Firmware, and Driver Versions

Dell Systems Software Support Matrix Version 6.3

- [Overview](#)
- [PERC 4/DC](#)
- [PERC 4e/DC](#)
- [PERC 3/DC](#)
- [PERC 3/QC](#)
- [PERC 4/Di](#)
- [CERC ATA 100 4/CH](#)
- [PERC 3/Di](#)
- [PERC 4/IM](#)
- [PERC 4/SC](#)
- [CERC SATA 1.5/6 Channel](#)
- [PERC 4e/Di](#)
- [PERC 4e/Si](#)
- [PERC 5/E Adapter](#)
- [PERC 5/i Adapter](#)
- [PERC 5/i Integrated](#)
- [CERC 6/i Integrated](#)
- [SAS 5/iR Adapter](#)
- [SAS 5/iR Integrated](#)
- [SAS 5/i Integrated](#)
- [SAS 5/E Adapter](#)
- [PERC 6/i Integrated and Adapter](#)
- [PERC 6/E Adapter](#)
- [SAS 6/iR Integrated and Adapter](#)
- [LSI Logic 1020/1030 Ultra320 SCSI Adapter](#)
- [CERC SATA 1.5/2S](#)
- [LSI 1020/1030 Embedded SCSI Controller](#)
- [LSI Logic 2032 Card](#)
- [PERC H700 Integrated and Adapter](#)
- [PERC H800 Adapter](#)
- [PERC H700 Modular](#)
- [PERC H200](#)

Overview

Starting with Dell OpenManage Server Administrator version 5.0, only the enhanced Storage Management Service will be supported. The Storage Management Service allows you to configure and manage your storage devices from within Server Administrator.

 **NOTE:** The Storage Management Service mentioned in this guide refers to the enhanced Storage Management Service. Server Administrator no longer supports the basic Storage Management Service (also known as Array Manager).

 **NOTE:** This chapter contains release specific RAID Controller Supported Servers, Operating Systems, Firmware, and Driver versions details. For detailed information on RAID controller supported servers, operating systems, firmware, and driver versions, see *Dell OpenManage Server Administrator Compatibility Guide* available on the Dell Support website at support.dell.com/manuals.


Most of the systems management releases support management of RAID controllers in the form of PERC cards, and some systems management releases also support CERC IDE and SATA controllers. System administrators responsible for monitoring the compatibility of their systems' storage devices need a clear matrix that shows the elements that are compatible with a particular storage controller. Each storage controller version in turn supports a specific array of elements, including:

- 1 Version of the Storage Management Service
- 1 Dell system
- 1 Firmware version number required for a particular controller
- 1 Supported operating systems, where each operating system requires a specific driver

For more information on Storage Management Services see the *Dell OpenManage Server Administrator User's Guide* and the *Dell OpenManage Storage Management User's Guide* on the Dell Support website at support.dell.com.

Five types of controllers are included in this section:

- 1 The RAID controller card group contains the following controllers: PERC 3/DC, PERC 3/SC, PERC 3/QC, PERC 4/SC, PERC 4/DC, PERC 4e/DC, PERC 5/E, PERC 5/i Adapter, PERC 5/i Integrated, SAS 5/iR Adapter, SAS 6/iR Integrated, PERC 6/E, PERC 6/i Adapter, PERC 6/i Integrated, SAS 6/iR Adapter, CERC 6/i Integrated, CERC ATA 100/4 Channel, and CERC SATA 1.5/6 Channel.
- 1 The RAID on motherboard (ROMB) group includes the following controllers: PERC 3/Di, PERC 4/Di, PERC 4e/Di, PERC 4e/Si, CERC SATA 1.5/2S, and SAS 5/iR Integrated.
- 1 The internal mirroring group, provided through the system BIOS, includes the PERC 4/IM controller.
- 1 The LSI 1020/1030 embedded SCSI controller.
- 1 The SAS 5/i Integrated and SAS 5/E controller.

 **NOTE:** The firmware and drivers listed in this section refer to the minimum supported version as of the publication date of this document. Later versions of the firmware and drivers may also be supported or required. For the most recent driver and firmware requirements, see the Dell Support website at support.dell.com for the Storage Management Service.

Key to Table Footnotes

Some drivers in the following tables are marked with an asterisk. You can refer to the following paragraph for more information:

Linux Driver Included in RPM*

The 1.1.4 Linux driver is included in RPM 2302 (Red Hat Package Manager 2302).

PERC 4/DC

The PERC 4/DC supports the following Dell PowerEdge systems: 800, 1800, 1850, 2800, 2850, 6800, and 6850.

The PERC 4/DC supports the following Dell PowerVault systems: PV745N, PV770N, and PV775N.

[Table 8-1](#) shows the other elements supported by the PERC 4/DC.

Table 8-1. Storage Management Service Supported Elements: PERC 4/DC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|-----------------------|--|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 352D (64-bit) | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native | Native |

PERC 4e/DC

The PERC 4e/DC supports the following Dell PowerEdge systems: 830, 850, 1800, 1850, 1900, 1950, 2800, 2850, 2900, 2950, 2970, 6800, and 6850.

[Table 8-2](#) shows the other elements supported by the PERC 4e/DC.

Table 8-2. Storage Management Service Supported Elements: PERC 4/e DC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 Driver | Windows Server 2008 Driver | Windows Server 2008 Driver |
|----------------------------|-------------------------|-----------------------|--|----------------------------|----------------------------|----------------------------|
| 3.2 | 6.3 | 5B2D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | Native | Native | v6.53.0.64 |

Table 8-3. Storage Management Service Supported Elements: PERC 4/e DC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE Linux Enterprise Server 11 SP1 |
|----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|-------------------------------------|
| 3.2 | 6.3 | 5B2D | 2.20.4.4 | Native | Native | Native |

PERC 3/DC

The PERC 3/DC supports the following Dell PowerVault systems: PV735N, PV750N, PV755N, PV770N, and PV775N.

[Table 8-4](#) shows the other elements supported by the PERC 3/DC.

Table 8-4. Storage Management Service Supported Elements: PERC 3/DC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | Red Hat Enterprise Linux 5.5 server Driver |
|----------------------------|-------------------------|-----------------------|--|-------------------------------------|--|--|
| 3.2 | 6.3 | 199D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native | Native |

PERC 3/QC

The PERC 3/QC supports the following Dell PowerVault systems: PV735N, PV750N, PV755N, PV770N, and PV775N.

[Table 8-5](#) shows the other elements supported by the PERC 3/QC.

Table 8-5. Storage Management Service Supported Elements: PERC 3/QC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|-----------------------|--|--------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 199D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native | Native |

| | | | | | | |
|-----|-----|------|--|-------------------|--------|----|
| | | | | 4.8 Driver | | |
| 3.2 | 6.3 | 199D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native | NA |

PERC 4/Di

[Table 8-6](#) shows the other elements supported by the PERC 4/Di.

Table 8-6. Storage Management Service Supported Elements: PERC 4/Di

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|-----------------------|--|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 422D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native | NA |

CERC ATA 100 4/CH

The CERC ATA 100 4/CH supports the following Dell PowerVault system: PV725N.

[Table 8-7](#) shows the other elements supported by the CERC ATA 100 4/CH.

Table 8-7. Storage Management Service Supported Elements: CERC ATA 100 4/CH

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Lir Server 1 |
|----------------------------|-------------------------|-----------------------|----------------------------|-------------------------------------|--|-------------------|
| 3.2 | 6.3 | 6.62 | 6.41.2.32 | 2.10.1 | Native | NA |

PERC 3/Di

[Table 8-8](#) and [Table 8-9](#) show the other elements supported by the PERC 3/Di.

Table 8-8. Storage Management Service Supported Elements: PERC 3/Di

| Storage Management Service* | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|-----------------------------|-------------------------|-----------------------|----------------------------|---------------------|
| 3.2 | 6.3 | 2.8.1-7692 | 2.8.0.6084 | 2.8.1.7691 |

* The 1.1.4 Linux driver is included in the Red Hat Package Manager (RPM) 2302.

Table 8-9. Storage Management Service Supported Elements: PERC 3/Di

| Storage Management Service* | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|-----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 2.8.1-7692 | 1.1.5.2372.1 | Native | NA |

* The 1.1.4 Linux driver is included in the Red Hat Package Manager (RPM) 2302.

PERC 4/IM

The PERC 4/IM supports the following Dell PowerEdge systems: 1855.

[Table 8-10](#) and [Table 8-11](#) show the other elements supported by the PERC 4/IM.

Table 8-10. Storage Management Service Supported Elements: PERC 4/IM

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|----------------------------|-------------------------|-----------------------|----------------------------|---------------------|
| | | | | |

| | | | | |
|-----|-----|------------|---------|--------|
| 3.2 | 6.3 | 1.03.23.90 | 1.09.11 | Native |
|-----|-----|------------|---------|--------|

Table 8-11. Storage Management Service Supported Elements: PERC 4/IM

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE Linux Enterprise Server 11 |
|----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|---------------------------------|
| 3.2 | 6.3 | 1.03.23.90 | NA | Native | NA | NA |

PERC 4/SC

The PERC 4/SC supports the following Dell PowerEdge systems: 800, 830, 850, 1800, and 1850.

[Table 8-12](#) shows the other elements supported by the PERC 4/SC.

Table 8-12. Storage Management Service Supported Elements: PERC 4/SC

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver |
|----------------------------|-------------------------|-----------------------|--|-------------------------------------|--|
| 3.2 | 6.3 | 352D (64-bit) | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | 2.20.4.4 | Native |

CERC SATA 1.5/6 Channel

The CERC SATA 1.5/6 Channel supports the following Dell PowerEdge systems: 800, 830, 850, and 1800.

The CERC SATA 1.5/6 Channel supports the following Dell PowerVault system: PV745N.

[Table 8-13](#) and [Table 8-14](#) show the other elements supported by the CERC SATA 1.5/6 Channel.

Table 8-13. Storage Management Service Supported Elements: CERC SATA 1.5/6 Channel

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 Driver |
|----------------------------|-------------------------|-----------------------|----------------------------|----------------------------|
| 3.2 | 6.3 | 4.1.0.7419 | 4.1.1.7043 | 4.1.1.7040 |

* The 1.1.4 Linux driver is included in the Red Hat Package Manager (RPM) 2302.

Table 8-14. Storage Management Service Supported Elements: CERC SATA 1.5/6 Channel

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE Linux Enterprise Server 11 |
|----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|---------------------------------|
| 3.2 | 6.3 | 4.1.0.7419 | 1.1.5-2392 | Native | NA | Native |

* The 1.1.4 Linux driver is included in the Red Hat Package Manager (RPM) 2302.

PERC 4e/Di

The PERC 4e/Di supports the following Dell PowerEdge systems: 2800, 2850, 6800, and 6850.

[Table 8-15](#) shows the other elements supported by the PERC 4e/Di.

Table 8-15. Storage Management Service Supported Elements: PERC 4e/Di

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 R2 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|-----------------------|--|-------------------------------|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 5B2D | 6.46.2.32 (32-bit) 6.46.3.64 (64-bit) | v6.53.0.64 | 2.20.4.4 | Native | NA |

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE Linux Enterprise Server 11 SP1 |
|----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|-------------------------------------|
| 3.2 | 6.3 | 5.2.2-0072 | 00.00.04.17-2 | Native | 00.00.03.21-6 | Native |

PERC 5/i Integrated

The PERC 5/i Integrated supports the following Dell PowerEdge systems: 1900, 1950, 2900, 2950, and 2970.

The PERC 5/i Integrated supports the following Dell PowerVault system: PowerVault NX1950.

[Table 8-21](#) and [Table 8-22](#) show the other elements supported by the PERC 5/i Integrated.

Table 8-21. Storage Management Service Supported Elements: PERC 5/i Integrated

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|----------------------------|-------------------------|-----------------------|--|--|
| 3.2 | 6.3 | 5.2.2-0072 | 2.24.0.32 Dell A07 (32-bit) 2.24.0.64 Dell A07 (64-bit) | 2.24.0.32 Dell A03 (32-bit) 2.24.0.64 Dell A03 (64-bit) |

Table 8-22. Storage Management Service Supported Elements: PERC 5/i Integrated

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE Linux Enterprise Server 11 SP1 |
|----------------------------|-------------------------|-----------------------|-------------------------------------|--|-------------------------------------|-------------------------------------|
| 3.2 | 6.3 | 5.2.2-0072 | 00.00.04.17-2 | Native | 00.00.03.21-6 | Native |

CERC 6/i Integrated

The CERC 6/i Integrated supports the following Dell PowerEdge systems: M600, M605, M805, and M905.

[Table 8-25](#) and [Table 8-26](#) show the other elements supported by the CERC 6/i Integrated.

Table 8-23. Storage Management Service Supported Elements: CERC 6/i Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Windows Server 2003 Driver | Windows Server 2008 |
|----------------------------|-------------------------|---------------------------|--|--|
| 3.2 | 6.3 | 6.2.0-0013 | 2.24.0.32 Dell A07 (32-bit) 2.24.0.64 Dell A07 (64-bit) | 2.24.0.32 Dell A03 (32-bit) 2.24.0.64 Dell A03 (64-bit) |

Table 8-24. Storage Management Service Supported Elements: CERC 6/i Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 6.2.0-0013 | 00.00.03.21-6 Dell A09 | Native | 00.00.03.21-6 A09 |

SAS 5/iR Adapter

The SAS 5/iR Adapter supports the following Dell PowerEdge systems: 440SC, 1435SC, 1430SC, 840, 860, 1900, 2900, 6950, T605, and T610.

The SAS 5/iR Adapter supports the following Dell PowerVault systems: PowerVault 600, and PowerVault 100.

[Table 8-25](#) and [Table 8-26](#) show the other elements supported by the SAS 5/iR Adapter.

Table 8-25. Storage Management Service Supported Elements: SAS 5/iR Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|-------------------------------------|
| 3.2 | 6.3 | 6.2.0-0013 | 00.00.03.21-6 Dell A09 | Native | 00.00.03.21-6 A09 |

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|---------------------------|----------------------------|---------------------|------------------------|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | 1.28.03.01 | 1.28.03.01 | Native 1.28.5.32 |

Table 8-26. Storage Management Service Supported Elements: SAS 5/iR Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE L Server |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|-------------------------------------|---------------|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | NA | Native | 4.00.38.02-3 | Nat |

SAS 5/iR Integrated

The SAS 5/iR Integrated supports the following Dell PowerEdge system: 1955.

[Table 8-27](#) and [Table 8-28](#) show the other elements supported by the SAS 5/iR Integrated.

Table 8-27. Storage Management Service Supported Elements: SAS 5/iR Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|---------------------------|----------------------------|---------------------|------------------------|
| 3.2 | 6.2 | 00.10.51.00.06.12.05.00 | 1.28.03.01 | 1.28.03.01 | Native 1.28.5.32 |

Table 8-28. Storage Management Service Supported Elements: SAS 5/iR Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | SUSE L Server |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|-------------------------------------|---------------|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | NA | Native | 4.00.38.02-3 | Native |

SAS 5/i Integrated

The SAS 5/i Integrated controller supports the following Dell PowerEdge systems: 1950, 2900, 2950, and 2970.

[Table 8-29](#) and [Table 8-30](#) show the other elements supported by the SAS 5/i Integrated controller.

Table 8-29. Storage Management Service Supported Elements: SAS 5/i Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|---------------------------|----------------------------|---------------------|------------------------|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | 1.28.03.01 | 1.28.03.01 | Native 1.28.5.32 |

Table 8-30. Storage Management Service Supported Elements: SAS 5/i Integrated

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server 10 SP3 | S |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|-------------------------------------|---|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | NA | Native | 4.00.38.02-3 | N |

SAS 5/E Adapter

The SAS 5/E Adapter supports the following Dell PowerEdge systems: 1800, 1850, 1900, 1950, 2800, 2850, 2900, 2950, 2970, 6800, 6850, 6950, R900, T300, T605, R200, R300, R805, R905, R610, R710, and T610.

The SAS 5/E Adapter supports the following Dell PowerVault systems: PowerVault NX1950, PowerVault 500, PowerVault 600, and PowerVault DL2000.

[Table 8-31](#) and [Table 8-32](#) show the other elements supported by the SAS 5/E Adapter.

Table 8-31. Storage Management Service Supported Elements: SAS 5/E Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|---------------------------|----------------------------|---------------------|------------------------|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | 1.28.03.01 | 1.28.03.01 | Native 1.28.5.32 |

Table 8-32. Storage Management Service Supported Elements: SAS 5/E Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) |
|----------------------------|-------------------------|---------------------------|-------------------------------------|--|---|
| 3.2 | 6.3 | 00.10.51.00.06.12.05.00 | NA | Native | 4.00.38.02-3 |

PERC 6/i Integrated and Adapter

The PERC 6/i Integrated supports the following Dell PowerEdge systems: 1950, 2900, 2950, 2970, R805, R900, T610, R410, R610, R710, M610, and M710.

The PERC 6/i Integrated supports the following Dell PowerVault systems: PowerVault 500, PowerVault NX1950, and PowerVault 600.

The PERC 6/i Adapter supports the following Dell PowerEdge systems: R410, R905, T300, and T605.

[Table 8-33](#) and [Table 8-34](#) show the other elements supported by the PERC 6/i Integrated and Adapter.

Table 8-33. Storage Management Service Supported Elements: PERC 6/i Integrated and Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|---------------|--|--|------------------------|
| 3.2 | 6.3 | 6.2.0-0013 | 2.24.0.32 (32-bit) Dell A07 2.24.0.64 (64-bit) Dell A07 | 2.24.0.32 (32-bit) Dell A03 2.24.0.64 (64-bit) Dell A03 | Native 4.5.0.64 |

Table 8-34. Storage Management Service Supported Elements: PERC 6/i Integrated and Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|----------------------------|-------------------------|---------------|-------------------------------------|--|---|---|
| 3.2 | 6.3 | 6.2.0-0013 | 00.00.04.17-2 | Native | 00.00.03.21-6 | Native |

PERC 6/E Adapter

The PERC 6/E Adapter supports the following Dell PowerEdge systems: 1950, 2900, 2950, 2970, 6950, R200, R300, R805, R900, R905, T300, T610, R410, R610, and R710.

The PERC 6/E Adapter supports the following Dell PowerVault systems: PowerVault 500, PowerVault 600, and PowerVault DL2000.

[Table 8-35](#) and [Table 8-36](#) show the other elements supported by the PERC 6/E Adapter.

Table 8-35. Storage Management Service Supported Elements: PERC 6/E Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware | Windows Server 2003 Driver | Windows Server 2008 |
|----------------------------|-------------------------|---------------|--|--|
| 3.2 | 6.3 | 6.2.0-0013 | 2.24.0.32 (32-bit) Dell A07 2.24.0.64 (64-bit) Dell A07 | 2.24.0.32 (32-bit) Dell A03 2.24.0.64 (64-bit) Dell A03 |

Table 8-36. Storage Management Service Supported Elements: PERC 6/E Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|----------------------------|-------------------------|---------------|-------------------------------------|--|---|---|
| 3.2 | 6.3 | 6.2.0-0013 | 00.00.04.17-2 | Native | 00.00.03.21-6 | Native |

SAS 6/iR Integrated and Adapter

The SAS 6/iR Integrated supports the following Dell PowerVault systems: PowerVault 500, PowerVault 600, and PowerVault DL2000.

The SAS 6/iR Integrated also supports the following Dell PowerEdge systems: 1950, 2900, 2950, 2970, R805, R900, M600, M605, M805, M905, T610, R410, R610, R710, M610, and M710.

The SAS 6/iR Adapter supports the following Dell PowerEdge systems: R200, R300, R410, T105, T300, R905, T100, and T605.

[Table 8-37](#) shows the other elements supported by the SAS 6/iR Integrated and Adapter.

Table 8-37. Storage Management Service Supported Elements: SAS 6/iR Integrated and Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/ BIOS Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|----------------------------|-------------------------|----------------------------|----------------------------|---------------------|------------------------|
| 3.2 | 6.3 | 00.25.47.00.06.22.03.00 | 1.28.03.01 | 1.28.03.01 | Native 1.28.5.32 |

Table 8-38. Storage Management Service Supported Elements: SAS 6/iR Integrated and Adapter

| Storage Management Service | Dell OpenManage Version | SAS Firmware/ BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP3) |
|----------------------------|-------------------------|----------------------------|-------------------------------------|--|---|---|
| 3.2 | 6.3 | 00.25.47.00.06.22.03.00 | 3.12.29.00-6 Dell A07 | Native | 4.00.78.02-3 | Native |

LSI Logic 1020/1030 Ultra320 SCSI Adapter

LSI Logic 1020/1030 Ultra320 SCSI adapter supports the following Dell PowerEdge systems: 1950, 2950, 2970, 6950, R200, R300, R900, R805, R905, T100, T105, T300, and T605.

LSI Logic 1020/1030 Ultra320 SCSI adapter supports the following Dell PowerVault systems: PowerVault NX1950 and PowerVault 500.

[Table 8-39](#) and [Table 8-40](#) show the other elements supported by LSI Logic 1020/1030 Ultra320 SCSI adapter.

Table 8-39. Storage Management Service Supported Elements: LSI Logic 1020/1030 Ultra320 SCSI Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware/ BIOS Version | Windows Server 2003 Driver |
|----------------------------|-------------------------|-----------------------------|----------------------------|
| 3.2 | 6.3 | 1.03.27.00.5.10.08.00.12 | 1.21.25.00 |

Table 8-40. Storage Management Service Supported Elements: LSI Logic 1020/1030 Ultra320 SCSI Adapter

| Storage Management Service | Dell OpenManage Version | PERC Firmware/BIOS Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP3) |
|----------------------------|-------------------------|----------------------------|-------------------------------------|--|---|---|
| 3.2 | 6.3 | 1.03.27.00.5.10.08.00.12 | 3.02.83.12-5 | Native | NA | Native |

CERC SATA 1.5/2S

The CERC SATA 1.5/2s supports the following Dell PowerEdge systems: 800, 1425, 1420SC, 420SC, and 1800.

[Table 8-41](#) show the other elements supported by the CERC SATA 1.5/2S.

Table 8-41. Storage Management Service Supported Elements: CERC SATA 1.5/2S

| Storage Management Service* | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 11 SP3) |
|-----------------------------|-------------------------|-----------------------|--|-------------------------------------|--|---|
| 3.2 | 6.3 | NA | 6.0.50.5 (32-bit) 6.0.3643.4 (64-bit) | NA | Native | NA |

* The 1.1.4 Linux driver is included in the Red Hat Package Manager (RPM) 2302.

LSI 1020/1030 Embedded SCSI Controller

This embedded SCSI controller is an onboard chip. It supports the following systems: 1600SC, 1750, 1800, 1850, 2600, 2800, 2850, 6800, and 6850.

[Table 8-42](#) and [Table 8-43](#) show the other elements supported by the LSI 1020/1030.

Table 8-42. Storage Management Service Supported Elements: LSI 1020

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) |
|----------------------------|-------------------------|-----------------------|----------------------------|-------------------------------------|--|---|
| 3.2 | 6.3 | 1.03.23 | 1.09.11 | NA | Native | NA |

Table 8-43. Storage Management Service Supported Elements: LSI 1030

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Server (version 11 SP1) |
|----------------------------|-------------------------|-----------------------|----------------------------|-------------------------------------|--|---|------------------------------|
| 3.2 | 6.3 | 1.03.23 | 1.09.11 | NA | Native | NA | Native |

LSI Logic 2032 Card

The LSI Logic 2032 card supports the following Dell PowerEdge systems: R610, R710, and T610.

The LSI Logic 2032 card supports the following Dell PowerVault systems: PowerVault DL2000.

[Table 8-44](#) and [Table 8-45](#) show the other elements supported by the LSI Logic 2032 Card.

Table 8-44. Storage Management Service Supported Elements: LSI Logic 2032 Card

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server R2 2008 Driver |
|----------------------------|-------------------------|--------------------------|----------------------------|-------------------------------|
| 3.2 | 6.3 | 1.03.27.00.5.10.08.00.12 | 1.21.25.00 | Native |

Table 8-45. Storage Management Service Supported Elements: LSI Logic 2032 Card

| Storage Management Service | Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|----------------------------|-------------------------|--------------------------|-------------------------------------|--|---|---|
| 3.2 | 6.3 | 1.03.27.00.5.10.08.00.12 | NA | Native | NA | Native |

PERC H700 Integrated and Adapter

The PERC H700 Integrated supports the following Dell PowerEdge systems: R710, R815, R715, R510, T610, R610, and T710.

The PERC H700 Adapter supports the following Dell PowerEdge systems: R310, R410, T310, and T410.

The PERC H700 Adapter supports the following Dell PowerVault systems: PowerVault NX300.

Table 8-46 and 8-47 show the other elements supported by the PERC H700 Integrated and Adapter.

Table 8-46. Dell OpenManage Supported Elements: PERC H700 Integrated and Adapter

| Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|-------------------------|-----------------------|--|--|
| 6.3 | 12.3.0-0032 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 |

Table 8-47. Dell OpenManage Supported Elements: PERC H700 Integrated and Adapter

| Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|-------------------------|-----------------------|-------------------------------------|--|---|---|
| | | | | | |

| | | | | | |
|-----|-------------|---------------------------|----------|------------------------|--------|
| 6.3 | 12.3.0-0032 | 00.00.04.17-2 Dell A10 | (Native) | 00.00.04.17-2 Dell A10 | Native |
|-----|-------------|---------------------------|----------|------------------------|--------|

PERC H800 Adapter

The PERC H800 Adapter supports the following Dell PowerEdge systems: R710, R815, T410, R715, R210, R510, T310, R310, T610, R610, R410, T710, and M20X.

Table 8-48 and 8-49 show the other elements supported by the PERC H800 Adapter.

Table 8-48. Dell OpenManage Supported Elements: PERC H800 Adapter

| Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|-------------------------|-----------------------|--|--|
| 6.3 | 12.3.0-0032 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 |

Table 8-49. Dell OpenManage Supported Elements: PERC H800 Adapter

| Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|-------------------------|-----------------------|-------------------------------------|--|---|---|
| 6.3 | 12.3.0-0032 | 00.00.04.17-2 Dell A10 | Native | 00.00.04.17-2 Dell A10 | Native |

PERC H700 Modular

The PERC H800 Modular supports the following Dell PowerEdge systems: M610 and M710.

Table 8-50 and 8-51 show the other elements supported by the PERC H700 Modular.

Table 8-50. Dell OpenManage Supported Elements: PERC H700 Modular

| Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 |
|-------------------------|-----------------------|--|--|
| 6.3 | 12.3.0-0032 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 | 4.23.0.32 (32-bit) Dell A01 4.23.0.64 (64-bit) Dell A01 |

Table 8-51. Dell OpenManage Supported Elements: PERC H700 Modular

| Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 Driver | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|-------------------------|-----------------------|-------------------------------------|--|---|---|
| 6.3 | 12.3.0-0032 | 00.00.04.17-2 Dell A10 | (Native) | 00.00.04.17-2 Dell A10 | Native |

PERC H200

The PERC H200 Adapter supports the following Dell PowerEdge Systems: T410, R210, T110, T310, R310, T610, R410, and T710.

The PERC H200 Integrated supports the following Dell PowerEdge Systems: R710, R815, R715, R510, T610, R610, and T710.

The PERC H200 Modular supports the following Dell PowerEdge Systems: M710 and M610.

Table 8-52 and 8-53 show the other elements supported by the PERC H200 Modular controllers.

Table 8-52. Dell OpenManage Supported Elements: PERC H200 Modular Controller

| Dell OpenManage Version | PERC Firmware Version | Windows Server 2003 Driver | Windows Server 2008 | Windows Server R2 2008 |
|-------------------------|-----------------------|--|--|-----------------------------|
| 6.3 | 07.01.33.00 Dell A00 | 2.0.12.10 (32-bit) Dell A00 2.0.12.10 (64-bit) Dell A00 | 2.0.12.10 (32-bit) Dell A00 2.0.12.10 (64-bit) Dell A00 | 2.0.12.10 (64-bit) Dell A00 |

Table 8-53. Dell OpenManage Supported Elements: PERC H200 Modular Controller

| Dell OpenManage Version | PERC Firmware Version | Red Hat Enterprise Linux 4.8 | Red Hat Enterprise Linux 5.5 server Driver | SUSE Linux Enterprise Server (version 10 SP3) | SUSE Linux Enterprise Server (version 11 SP1) |
|-------------------------|-------------------------|---|--|---|---|
| 6.3 | 07.01.33.00 Dell A00 | 02.15.00.00-2 (x86 and x86_64) Dell A00 | (Native) | 02.00.00.00-5 (x86_64) Dell A00 | Native |

[Back to Contents Page](#)

Supported Dell Remote Access Controllers and Solutions

Dell Systems Software Support Matrix Version 6.3

Dell Remote Access Controller (DRAC) is a systems management hardware and software solution designed to provide remote management capabilities, crashed system recovery, and power control functions.

By communicating with the system's Baseboard Management Controller (BMC), the DRAC (when installed) can be configured to send e-mail alerts for warnings or errors related to voltages, temperatures, intrusion, and fan speeds. DRAC also logs event data and the most recent crash screen (for systems running the Microsoft Windows operating system only) to help diagnose the probable cause of a system crash.

For more information on DRAC or iDRAC, see the *Dell Remote Access Controller User's Guide* or the *Integrated Dell Remote Access Controller User's Guide* available on the Dell Support website at support.dell.com/manuals.

Supported Remote Access Controller versions and firmware, as well as supported BMC IPMI protocol versions, are listed in [Table 5-1](#) and [Table 5-2](#). The tables list the following DRAC types:

- 1 Integrated Dell Remote Access Controller 6 (iDRAC6)
- 1 Integrated Dell Remote Access Controller (iDRAC)
- 1 Dell Remote Access Controller 5 (DRAC 5)
- 1 Dell Remote Access Controller/Modular Computer (DRAC/MC)
- 1 Dell Remote Access Controller 4 (DRAC 4)
- 1 Dell Chassis Management Controller (CMC)

Table 5-1. Supported Remote Access Controllers and Solutions for Blade Servers

| Dell System | DRACs | | CMC Firmware Version | BMC Firmware Version | Supported IPMI Protocol Versions |
|-------------|-----------|---------------------------------|----------------------|----------------------|----------------------------------|
| | DRAC Type | Supported DRAC Firmware Version | | | |
| M600 | iDRAC | 1.52 | 3.00 | N/A | 2.2 |
| M605 | iDRAC | 1.52 | 3.00 | N/A | 2.2 |
| M610 | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| M710 | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| M710X | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| M610x | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| M710HD | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| M805 | iDRAC | 1.52 | 3.00 | N/A | 2.2 |
| M905 | iDRAC | 1.52 | 3.00 | N/A | 2.2 |
| M910 | iDRAC6 | 3.00 | 3.00 | N/A | 2.2 |
| 1955 | DRAC/MC | 1.5 | N/A | 2.03 | 2.0 |
| 1855 | DRAC/MC | 1.5 | N/A | 1.01 or later | 1.5 |

Table 5-2. Supported Remote Access Controllers and Solutions for Rack and Tower Servers

| Dell System | DRACs | | BMC Firmware Version | Supported IPMI Protocol Versions |
|-------------|-----------|---------------------------------|----------------------|----------------------------------|
| | DRAC Type | Supported DRAC Firmware Version | | |
| R200 | DRAC 4 | 1.75 | 1.29 or later | 2.0 |
| R210 | iDRAC6 | 1.50 | 1.3 | 2.0 |
| R300 | DRAC 5 | 1.51 | 2.34 | 2.0 |
| R310 | iDRAC6 | 1.50 | NA | 2.0 |
| R410 | iDRAC6 | 1.50 | 1.3 | 2.0 |
| R510 | iDRAC6 | 1.51 | 1.3 | 2.0 |
| R610 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| R710 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| R715 | iDRAC6 | 1.50 | NA | 2.0 |
| R805 | DRAC 5 | 1.50 | 2.38 | 2.0 |
| R810 | iDRAC6 | 1.50 | NA | 2.0 |
| R815 | iDRAC6 | 1.50 | NA | 2.0 |
| R900 | DRAC 5 | 1.51 | 2.32 | 2.0 |
| R905 | DRAC 5 | 1.51 | 2.31 | 2.0 |
| R910 | iDRAC6 | 1.50 | NA | 2.0 |
| T100 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |

| | | | | |
|-------------------|------------------|------|---------------|-----|
| T105 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| T110 | No iDRAC support | | 1.3 | 2.0 |
| T300 | DRAC 5 | 1.51 | 2.34 | 2.0 |
| T310 | iDRAC6 | 1.50 | 1.3 | 2.0 |
| T410 | iDRAC6 | 1.50 | 1.3 | 2.0 |
| T605 | DRAC 5 | 1.51 | 2.30 | 2.0 |
| T610 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| T710 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| 6950 | DRAC 5 | 1.51 | 2.29 | 2.0 |
| 2970 | DRAC 5 | 1.51 | 2.29 | 2.0 |
| 2950 | DRAC 5 | 1.51 | 2.28 | 2.0 |
| 2900 | DRAC 5 | 1.51 | 2.28 | 2.0 |
| 1955 | DRAC/MC | 1.50 | 2.03 | 2.0 |
| 1950 | DRAC 5 | 1.51 | 2.28 | 2.0 |
| 1900 | DRAC 5 | 1.51 | 2.29 | 1.5 |
| 6850 | DRAC 4 | 1.75 | 1.40 or later | 1.5 |
| 6800 | DRAC 4 | 1.75 | 1.40 or later | 1.5 |
| 2850 | DRAC 4 | 1.75 | 1.23 or later | 1.5 |
| 2800 | DRAC 4 | 1.75 | 1.23 or later | 1.5 |
| 1855 | DRAC/MC | 1.5 | 1.01 or later | 1.5 |
| 1800 | DRAC 4 | 1.75 | 1.23 or later | 1.5 |
| 860 | DRAC 4 | 1.75 | 1.67 or later | 1.5 |
| 850 | DRAC 4 | 1.75 | 1.44 or later | 1.5 |
| 840 | DRAC 4 | 1.75 | 1.67 or later | 1.5 |
| 830 | DRAC 4 | 1.75 | 1.44 or later | 1.5 |
| 800 | DRAC 4 | 1.75 | 1.30 or later | 1.5 |
| PowerVault 100 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| PowerVault 500 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| PowerVault 600 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| PowerVault DL2000 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| PowerVault DL2200 | iDRAC6 | 1.50 | 1.5 | 2.0 |
| PowerVault NX1950 | DRAC 5 | 1.51 | 1.29 or later | 2.0 |
| PowerVault NX3000 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| PowerVault NX3100 | iDRAC6 | 1.50 | | |
| PowerVault NX300 | iDRAC6 | 1.50 | 1.29 or later | 2.0 |
| PowerVault DL2100 | iDRAC6 | 1.50 | | 2.0 |
| PowerVault DX6000 | iDRAC6 | 1.50 | NA | 2.0 |
| SC1435 | | | 2.29 | 2.0 |
| SC1430 | | | | |
| SC1425 | | | 1.30 or later | 1.5 |
| SC440 | | | | |
| SC430 | | | | |
| SC420 | | | | |

[Back to Contents Page](#)

| Systems | | | | | | | | | | | | | | | | | | |
|--|---|------|------|---|---|------|------|------|---|---|---|---|---|---|------|---|---|---|
| Red Hat Enterprise Linux WS, ES, and AS version 4.8 (x86_32) | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | | | X, * | | | |
| Red Hat Enterprise Linux WS, ES, and AS version 4.8 (x86_64) | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | | | X, * | | | |
| Red Hat Enterprise Linux WS, ES, and AS version 5.5 (x86_32) | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| Red Hat Enterprise Linux WS, ES, and AS version 5.5 (x86_64) | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| SUSE Linux Enterprise Server 10 with SP3 (x86_64) | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| SUSE Linux Enterprise Server 11 (x86_64) with SP1 | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| Virtualization Operating Systems | | | | | | | | | | | | | | | | | | |
| VMware ESX version 4.0 update 1 | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| VMware ESX version 4.1 | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| VMware ESXi version 4.0 update 1 HDD version | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| VMware ESXi version 4.1 HDD | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |
| Citrix XenServer 5.6 (HDD) | | | | X | X | | | X | X | X | X | X | X | | X | X | X | |
| Microsoft Hyper-V R2 | * | X, * | X, * | X | X | X, * | X, * | X, * | X | X | X | X | X | X | X, * | X | X | X |