

## **Microsoft<sup>®</sup> Windows<sup>®</sup> Compute Cluster Server 2003**

This document provides information about the supported configurations for Microsoft Windows Compute Cluster Server 2003.

## Supported Configurations for Windows Compute Cluster Server 2003

The Windows Compute Cluster Server 2003 is supported on the following systems and network devices:

- Dell<sup>™</sup> PowerEdge<sup>™</sup> 1950 systems
- Embedded Broadcom network devices as both the public interface and the cluster interconnect
- Dell PowerVault<sup>™</sup> MD1000 attached to Dell PowerEdge RAID Controller 5/E ٠

## **Obtaining More Information**

For installation instructions, see the Microsoft Windows Compute Cluster Server 2003 Installation Guide located at dell com/ostechsheets

For technical and troubleshooting information about your cluster components, see the documentation that came with the components.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.



Information in this document is subject to change without notice. © 2006 Dell Inc. All rights reserved. Printed in the U.S.A.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell, the DELL logo, PowerEdge, and PowerVault are trademarks of Dell Inc; Microsoft and Windows are registered trademarks of Microsoft Corporation.