

Chromebook 3120

Battery Replacement Tech Sheet




Contents


| | |
|-----------------------------|---|
| 1 Removing the Battery..... | 4 |
|-----------------------------|---|

Removing the Battery


1. Perform the following steps as shown in the illustration:
 - a. Loosen the screws that secure the back cover to the computer [1].
 - b. Lift the back cover and remove it from the computer [2].

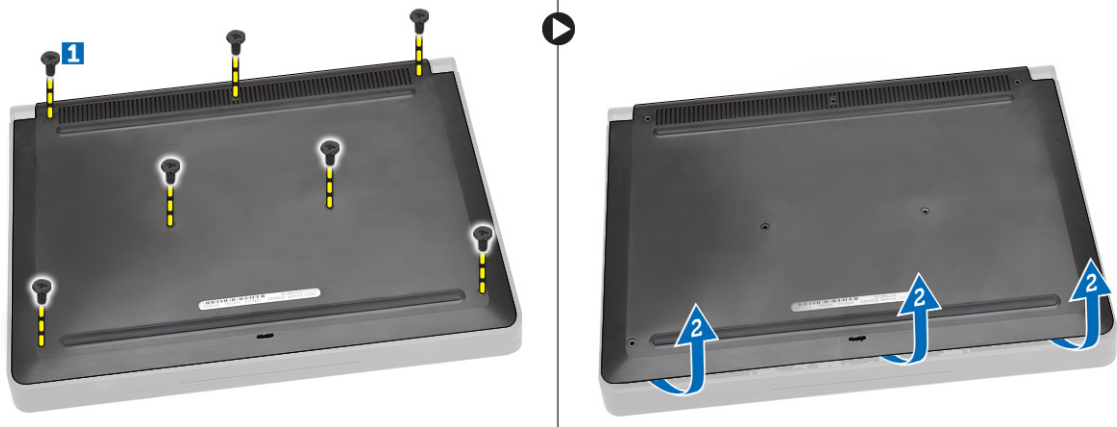

2. Perform the following steps as shown in the illustration:
 - a. Disconnect the battery cable from the system board [1].
 - b. Loosen the screws that secure the battery to the computer [2].

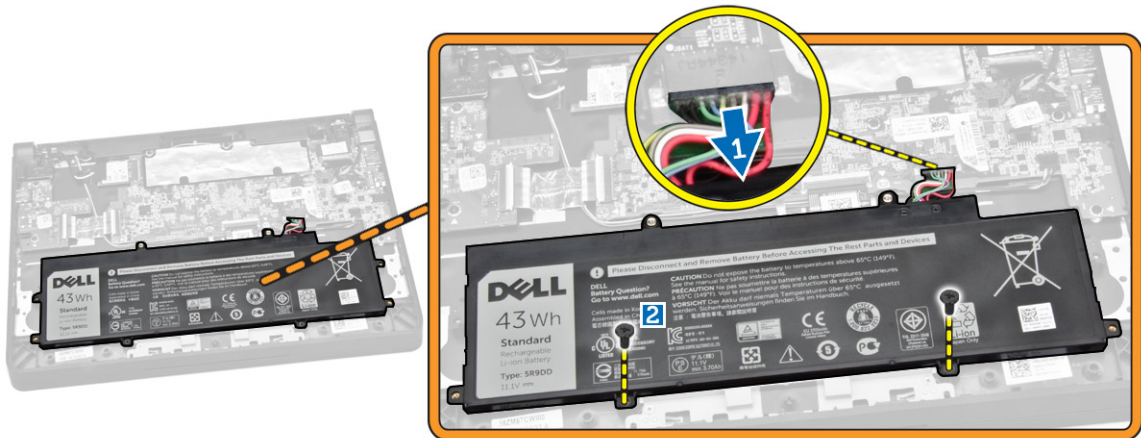

3. Lift the battery and remove it from the computer.

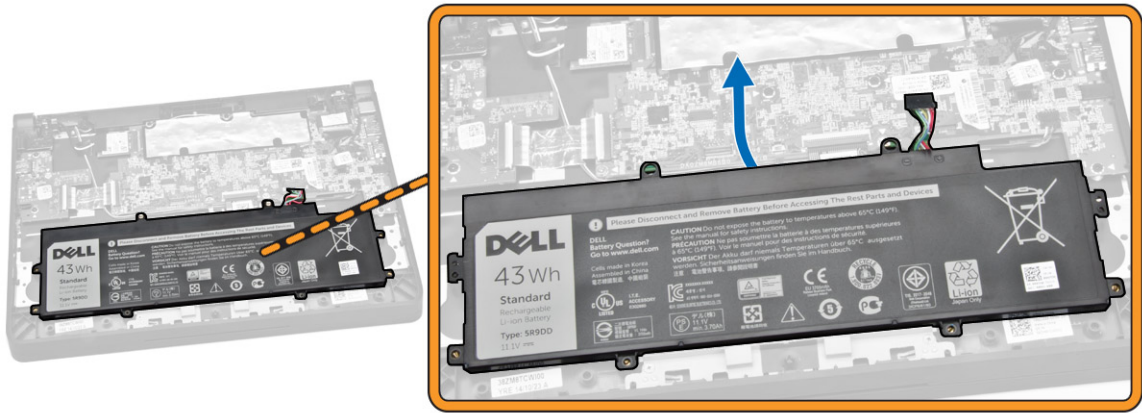

Copyright © 2015 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2015 -01

Rev. A00