

INSPIRON 17


Quick Start Guide

Priručnik za brzi start




1 Connect the power adapter and turn on your computer

Povežite adapter za napajanje i uključite računar

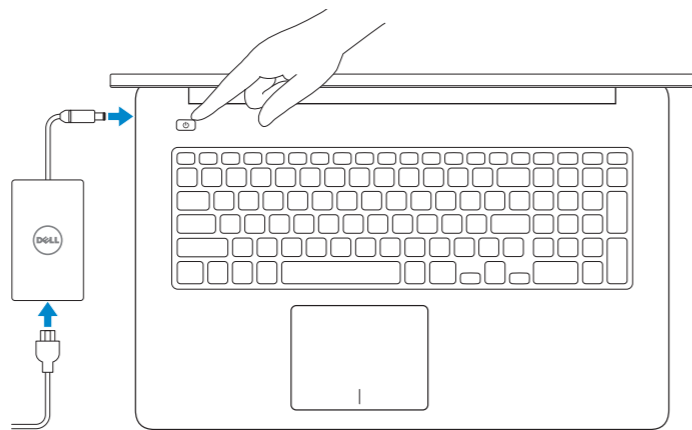

2 Finish Windows setup


Završite instalaciju operativnog sistema Windows

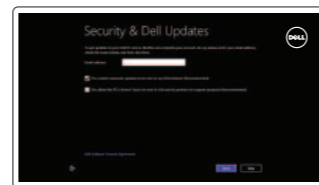

Enable security and updates
Omogućite zaštitu i ažuriranja



Connect to your network
Povežite sa svojom mrežom

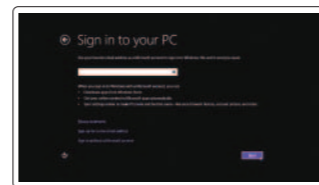

Sign in to your Microsoft account or create a local account
Prijavite se na svoj Microsoft nalog ili kreirajte lokalni nalog

3 Explore resources

Istražite resurse



Help and Tips
Pomoć i saveti



My Dell
Moj Dell



Register your computer
Registrujte svoj računar

Shortcut keys

Tasterske prečice



Mute audio
Isključivanje zvuka



Decrease volume
Smanjenje jačine zvuka



Increase volume
Povećanje jačine zvuka



Play/Pause
Reprodukcija/Pauziranje



Open Search charm
Otvaranje dugmeta za pretragu



Open Share charm
Otvaranje dugmeta za deljenje



Devices Charm
Dugme za uređaje



Open Settings Charm
Otvaranje dugmeta za postavke



List recently-used apps
Prikaz nedavno korišćenih aplikacija



Disable/enable keyboard backlight
Aktivacija/deaktivacija pozadinskog osvetljenja tastature



Decrease brightness
Smanjenje osvetljenja



Increase brightness
Povećanje osvetljenja



Turn off/on wireless
Isključivanje/uključivanje bežične funkcije

NOTE: For more information, see *Specifications* at dell.com/support.

NAPOMENA: Za dodatne informacije pogledajte odeljak *Specifikacije* na strani dell.com/support.

Product support and manuals

Podrška i uputstva za proizvod

Contact Dell

Kontaktirajte Dell

Regulatory and safety

Regulatorne i bezbednosne informacije

Regulatory model and type

Regulatorni model i tip

Computer model

Model računara

dell.com/support

dell.com/support/manuals

dell.com/windows8

dell.com/contactdell

dell.com/regulatory_compliance


P24E

P24E001


Inspiron 7737

Features

Funkcije

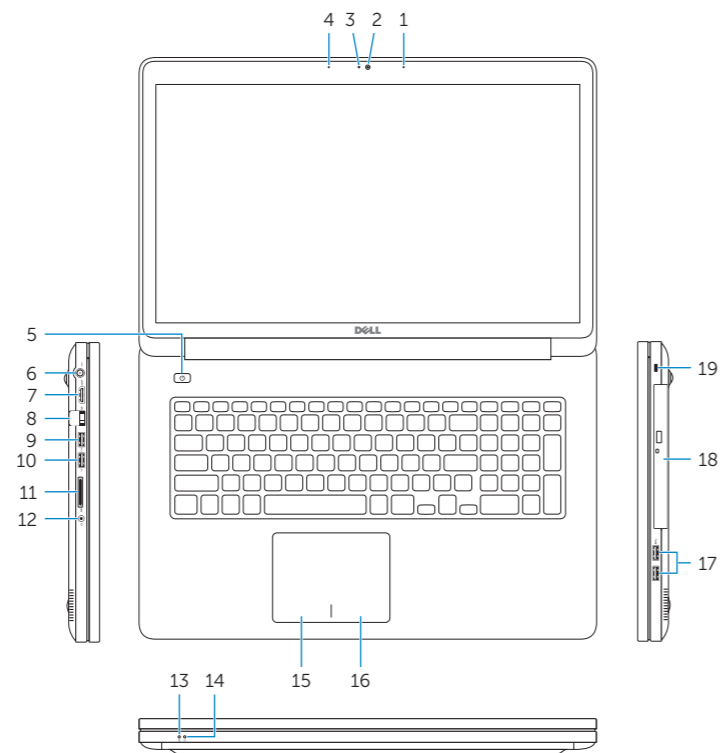

1. Right microphones
2. Camera
3. Camera-status light
4. Left microphone
5. Power button
6. Power-adapter port
7. HDMI port
8. Network port
9. USB 3.0 port with PowerShare
10. USB 3.0 port
11. Media-card reader
12. Headset port

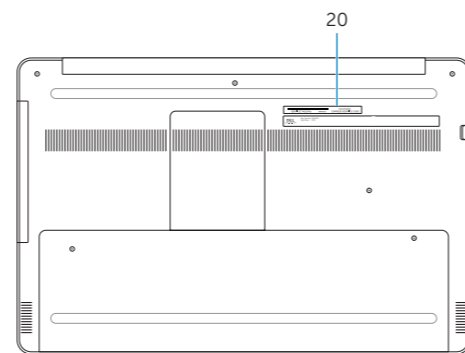

13. Battery-status light
14. Hard-drive activity light
15. Left-click area
16. Right-click area
17. USB 3.0 ports (2)
18. Optical drive
19. Security-cable slot
20. Service Tag and regulatory labels

1. Desni mikrofoni
2. Kamera
3. Svetlo za status kamere
4. Levi mikrofon
5. Taster za napajanje
6. Port adaptera za napajanje
7. HDMI port
8. Mrežni port
9. USB 3.0 port sa PowerShare funkcijom
10. USB 3.0 port
11. Čitač medijskih kartica
12. Port za slušalice

13. Svetlo za status baterije
14. Svetlo aktivnosti jedinice čvrstog diska
15. Oblast levog klika
16. Oblast desnog klika
17. USB 3.0 portovi (2)
18. Optička disk jedinica
19. Slot za zaštitni kabl
20. Servisna oznaka i regulatorne nalepnice

