

Dell™ Inspiron™ 700m/710m Service Manual

[Before You Begin](#)

- [Recommended Tools](#)
- [Turning Off Your Computer](#)
- [Before Working Inside Your Computer](#)
- [Computer Orientation](#)
- [Screw Identification Placemat](#)

[Dell Diagnostics](#)

- [When to Use the Dell Diagnostics](#)
- [Starting the Dell Diagnostics](#)

[System Components](#)

[Battery](#)

- [Removing a Battery](#)
- [Installing the Battery](#)

[Palm Rest](#)

- [Removing the Palm Rest](#)
- [Replacing the Palm Rest](#)

[Memory, Modem, and Mini PCI Card Modules](#)

- [Adding Memory](#)
- [Replacing a Modem](#)
- [Adding a Mini PCI Card](#)
- [Installing Module Bay Devices](#)

[Keyboard](#)

- [Removing the Keyboard](#)
- [Replacing the Keyboard](#)

[Hard Drive](#)

- [Replacing the Hard Drive](#)
- [Returning a Hard Drive to Dell](#)

[Hinge Cover and Display Module](#)

- [Removing the Hinge Cover](#)
- [Replacing the Hinge Cover](#)
- [Removing the Display Module](#)
- [Replacing the Display](#)

[Coin-Cell Battery](#)

- [Removing the Coin-Cell Battery](#)
- [Replacing the Coin-Cell Battery](#)

[Cooling Fan](#)

- [Removing the Cooling Fan](#)

[System Board](#)

- [Removing the System Board](#)
- [Replacing the System Board](#)

[Processor Thermal-Cooling Assembly](#)

- [Removing the Processor Thermal-Cooling Assembly](#)
- [Installing the Processor Thermal-Cooling Assembly](#)

[Processor](#)

- [Removing the Processor](#)
- [Installing the Processor](#)

[Optical Bay Latch](#)




- [Removing the Optical Bay Latch](#)
- [Replacing the Optical Bay Latch](#)

[Flashing the BIOS](#)

- [Pin Assignments for I/O Connectors](#)
- [USB Connector 2.0 \(dual-stacked\)](#)
- [Video Connector](#)
- [IEEE 1394 Connector](#)

Model PP07S

Notes, Notices, and Cautions

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
-  **CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

Abbreviations and Acronyms

For a complete list of abbreviations and acronyms, see the *Dell Inspiron Help* file.

If you purchased a Dell™ n Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

Information in this document is subject to change without notice.
© 2005 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *Inspiron* are trademarks of Dell Inc.; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

October 2005 Rev. A02

Battery

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing a Battery](#)
- [Installing the Battery](#)

Removing a Battery


⚠ CAUTION: Before performing these procedures, disconnect the modem from the telephone wall jack.

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

👉 NOTICE: If you remove the battery while the system is powered on and power cable is connected to an electrical outlet and then reinstall the battery and disconnect the power cable within one and a half seconds, the system may shut down.

👉 NOTICE: Do not replace the battery with the computer in standby mode.

1. Ensure that the computer is turned off, set to the hibernate power management mode, or connected to an electrical outlet.
2. Slide and hold the battery-bay latch release on the bottom of the computer, and then remove the battery from the bay.

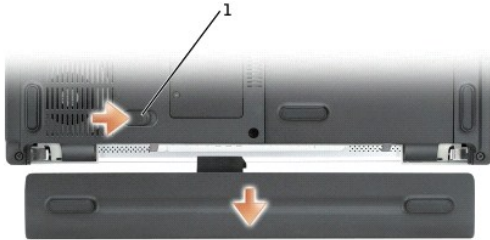

1 battery-bay latch release

Installing the Battery

To install the battery, slide the battery into the bay until the latch release clicks.

[Back to Contents Page](#)

Before You Begin

Dell™ Inspiron™ 700m/710m Service Manual

- [Recommended Tools](#)
- [Turning Off Your Computer](#)
- [Before Working Inside Your Computer](#)
- [Computer Orientation](#)
- [Screw Identification Placemat](#)

This section provides procedures for removing and installing the components in your computer. Unless otherwise noted, each procedure assumes that the following conditions exist:

- 1 You have performed the steps in "[Turning Off Your Computer](#)" and "[Before Working Inside Your Computer](#)."
 - 1 You have read the safety information in your Dell™ *Product Information Guide*.
 - 1 A component can be replaced or—if purchased separately—installed by performing the removal procedure in reverse order.
-

Recommended Tools

The procedures in this document may require the following tools:

- 1 Small flat-blade screwdriver
 - 1 Phillips screwdriver
 - 1 Small plastic scribe
 - 1 Flash BIOS update program floppy disk or CD
-

Turning Off Your Computer

 **NOTICE:** To avoid losing data, save and close any open files and exit any open programs before you turn off your computer.

1. Shut down the operating system:
 - a. Save and close any open files, exit any open programs, click the **Start** button, and then click **Turn Off Computer**.
 - b. In the **Turn off computer** window, click **Turn off**.


The computer turns off after the operating system shutdown process finishes.


2. Ensure that the computer and any attached devices are turned off. If your computer and attached devices did not automatically turn off when you shut down your operating system, press and hold the power button for 4 seconds.
-


Before Working Inside Your Computer


Use the following safety guidelines to help protect your computer from potential damage and to help ensure your own personal safety.

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

 **CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a processor by its edges, not by its pins.

 **NOTICE:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty.

 **NOTICE:** When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before you disconnect the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.

 **NOTICE:** To avoid damaging the computer, perform the following steps before you begin working inside the computer.

1. Ensure that the work surface is flat and clean to prevent the computer cover from being scratched.
2. [Turn off your computer](#).

3. If the computer is connected to a docking device (docked), undock it. See the documentation that came with your docking device for instructions.

➡ **NOTICE:** To disconnect a network cable, first unplug the cable from your computer and then unplug it from the network wall jack.


4. Disconnect any telephone or network cables from the computer.

5. Close the display and turn the computer upside down on a flat work surface.

➡ **NOTICE:** To avoid damaging the system board, you must remove the main battery before you service the computer.

6. Disconnect your computer and all attached devices from their electrical outlets, slide and hold the battery-bay latch release on the bottom of the computer and remove the battery from the bay, and then press the power button to ground the system board.

7. Slide and hold the battery-bay latch release on the bottom of the computer, and then remove the battery from the bay.

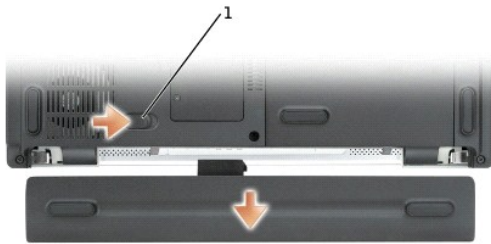

1	battery latch release
---	-----------------------


8. Remove any installed PC Cards or blanks from the PC Card slot.

9. Remove the Secure Digital memory card, if installed, from the Secure Digital memory slot.

10. Remove any installed modules.

11. Remove the hard drive.

Computer Orientation

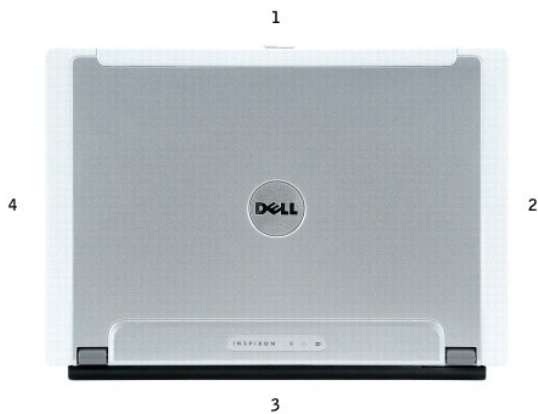

1	front
2	left
3	back
4	right

Screw Identification Placemat

When you are removing and replacing components, photocopy the placemat as a tool to lay out and keep track of the screws. The placemat provides the number of screws and their sizes.



M2 x 3 mm



M2 x 5 mm


 








M2.5 x 5 mm



M2.5 x 6 mm

NOTICE: When reinstalling a screw, you must use a screw of the correct diameter and length. Ensure that the screw is properly aligned with its corresponding hole, and avoid overtightening.

<p>Cooling Fan: (3 each) M2 x 3mm</p>  <p><i>M2 x 3 mm</i></p>	<p>Keyboard: (2 each) M2.5 x 5mm</p>  <p><i>M2.5 x 5 mm</i></p>
<p>Display Module: (4 each) M2.5 x 6 mm</p>  <p><i>M2.5 x 6 mm</i></p>	<p>Modem: (2 each) M2 x 5mm</p>  <p><i>M2 x 5 mm</i></p>
<p>Palm Rest: (1 each) (2 each) M2 x 3 M2 x 5mm</p>   <p><i>M2 x 3 mm</i> <i>M2 x 5 mm</i></p>	<p>(8 each) M2.5 x 6mm</p>  <p><i>M2.5 x 6 mm</i></p>
<p>System Board: (1 each) M2 x 5mm</p>  <p><i>M2 x 5 mm</i></p>	

[Back to Contents Page](#)

Flashing the BIOS

Dell™ Inspiron™ 700m/710m Service Manual

To update the basic input/output system (BIOS):

1. Go to **support.dell.com**. If this is your first time to use the website, complete the one-time registration.
 2. Enter the Service Tag for your computer or select the appropriate Dell™ computer.
Click **Go**.
 3. Click **Downloads**.
 4. Select the appropriate operating system and language for your computer.
 5. Select the **FlashBIOS Updates** download category.
Click **Go**.
 6. Click the BIOS link and follow the instructions to download the BIOS to your computer.
-

[Back to Contents Page](#)

Processor Thermal-Cooling Assembly

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Processor Thermal-Cooling Assembly](#)
- [Installing the Processor Thermal-Cooling Assembly](#)


Removing the Processor Thermal-Cooling Assembly

- ⚠ **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.
- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets, and remove any installed batteries.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as the back panel) on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Disconnect the black and white antenna cables from the Mini PCI Card.
4. Remove the [display module](#).
5. Remove the [palm rest](#).
6. Remove the [system board](#).

🔧 **NOTE:** You can remove the microprocessor thermal-cooling assembly with the fan attached.

7. Carefully turn the system board upside down.
8. Disconnect the fan power cord from the system board.

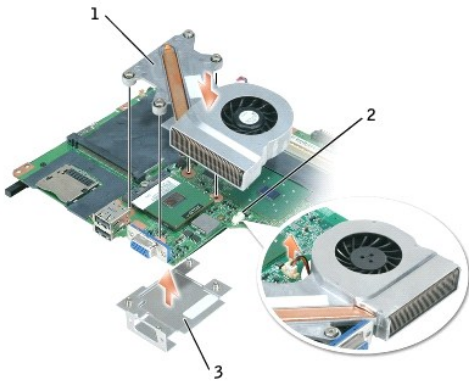


1	processor thermal-cooling assembly
2	cooling fan connector
3	cooling assembly support plate

9. Loosen in consecutive order the four captive screws labeled "1" through "4" that secure the microprocessor thermal-cooling assembly to the system board.
10. Rotate the microprocessor thermal-cooling assembly up toward the side of the computer and away from the system board.
11. Lift the system board and rotate the cooling assembly support plate down and out from the video connector.

Installing the Processor Thermal-Cooling Assembly

1. Slide the hole in the bottom cooling assembly plate over the video connector and carefully rotate the plate into place against the bottom of the system board. Its holes should line up with holes in the system board.
2. Seat the microprocessor thermal-cooling assembly in place. All four screws should match up with the screw holes in the system board and the bottom cooling assembly plate. The fan should overhang the board to the right of the video connector.
3. Reattach the fan power cord.

 **NOTICE:** If the screws are not tightened in their numbered order, the processor may be damaged.

4. Tighten the four captive screws labeled "1" through "4" in consecutive order.

[Back to Contents Page](#)

Dell Diagnostics

Dell™ Inspiron™ 700m/710m Service Manual

- [When to Use the Dell Diagnostics](#)
- [Starting the Dell Diagnostics](#)


When to Use the Dell Diagnostics

If you experience a problem with your computer, perform the checks in the "Solving Problems" section in your *User's Guide* or *Owner's Manual* and run the Dell Diagnostics before you contact Dell for technical assistance. Running the Dell Diagnostics may help you resolve the problem without contacting Dell. If you do contact Dell, the test results can provide important information for Dell's service and support personnel.


The Dell Diagnostics allows you to:

- 1 Perform tests on one or all devices.
- 1 Select tests based on a symptom of the problem you are having.
- 1 Choose how many times a test is run.
- 1 Suspend testing if an error is detected.
- 1 Access help information that describes the tests and devices.
- 1 Receive status messages that tell you whether tests completed successfully.
- 1 Receive error messages if problems are detected.


Starting the Dell Diagnostics


 **NOTICE:** Use the Dell Diagnostics to test your Dell™ computer only. Using this program with other computers can result in error messages.

The Dell Diagnostics is located on a hidden diagnostic utility partition on your hard drive.

 **NOTE:** If your computer cannot display a screen image, contact Dell.

1. [Shut down the computer.](#)
2. Connect the computer to an electrical outlet.
3. Turn on the computer. When the DELL™ logo appears, press <F12>immediately.

 **NOTE:** If you cannot see anything on your display, hold down the <Fn> key and press the computer's power button to begin the Dell Diagnostics. The computer automatically runs the Pre-boot System Assessment.

 **NOTE:** If you see a message stating that no diagnostics utility partition has been found, run the Dell Diagnostics from your *Drivers and Utilities* CD.

If you wait too long and the Microsoft® Windows® logo appears, continue to wait until you see the Windows desktop. Then shut down your computer through the **Start** menu and try again.

4. When the boot device list appears, highlight **Diagnostics** and press <Enter>.

The computer runs the Pre-boot System Assessment, a series of initial tests of your system board, keyboard, hard drive, and display.

- 1 During the assessment, answer any questions that appear.
- 1 If a failure is detected, the computer stops and beeps. To stop the assessment and restart the computer, press <N>; to continue to the next test, press <Y>; to retest the component that failed, press <R>.
- 1 If failures are detected during the Pre-boot System Assessment, write down the error code(s) and contact Dell before continuing on to the Dell Diagnostics.

If the Pre-boot System Assessment completes successfully, you receive the message *Booting Dell Diagnostic Utility Partition*. Press any key to continue.

5. Press any key to start the Dell Diagnostics from the diagnostics utility partition on your hard drive.
6. When the Dell Diagnostics **Main Menu** appears, select the test you want to run.


Dell Diagnostics Main Menu

1. After the Dell Diagnostics loads and the **Main Menu** screen appears, click the button for the option you want.

Option	Function
Express Test	Performs a quick test of devices. This test typically takes 10 to 20 minutes and requires no interaction on your part. Run Express Test first to increase the possibility of tracing the problem quickly.
Extended Test	Performs a thorough check of devices. This test typically takes an hour or more and requires you to answer questions periodically.
Custom Test	Tests a specific device. You can customize the tests you want to run.
Symptom Tree	Lists the most common symptoms encountered and allows you to select a test based on the symptom of the problem you are having.

2. If a problem is encountered during a test, a message appears with an error code and a description of the problem. Write down the error code and problem description and follow the instructions on the screen.

If you cannot resolve the error condition, contact Dell. See your *User's Guide* or *Owner's Manual* for contact information.

 **NOTE:** The Service Tag for your computer is located at the top of each test screen. If you contact Dell, technical support will ask for your Service Tag.

3. If you run a test from the **Custom Test** or **Symptom Tree** option, click the applicable tab described in the following table for more information.

Tab	Function
Results	Displays the results of the test and any error conditions encountered.
Errors	Displays error conditions encountered, error codes, and the problem description.
Help	Describes the test and may indicate requirements for running the test.
Configuration	Displays your hardware configuration for the selected device. The Dell Diagnostics obtains configuration information for all devices from the system setup program, memory, and various internal tests, and it displays the information in the device list in the left pane of the screen. The device list may not display the names of all the components installed on your computer or all devices attached to your computer.
Parameters	Allows you to customize the test by changing the test settings.

4. When the tests are complete, close the test screen to return to the **Main Menu** screen. To exit the Dell Diagnostics and restart the computer, close the **Main Menu** screen.

[Back to Contents Page](#)

Hinge Cover and Display Module

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Hinge Cover](#)
- [Replacing the Hinge Cover](#)
- [Removing the Display Module](#)
- [Replacing the Display](#)

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

➡ NOTICE: Disconnect the computer and any attached devices from electrical outlets.


➡ NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

➡ NOTICE: Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

Removing the Hinge Cover

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

1. Remove the [battery](#).
2. Open the display all the way (180 degrees).
3. Use a plastic flat screwdriver to slide the hinge caps away from the computer.
4. Detach the two display latches on the back of the computer.
5. Use plastic flat screwdriver to carefully pry up the latches on either side of the hinge cover.

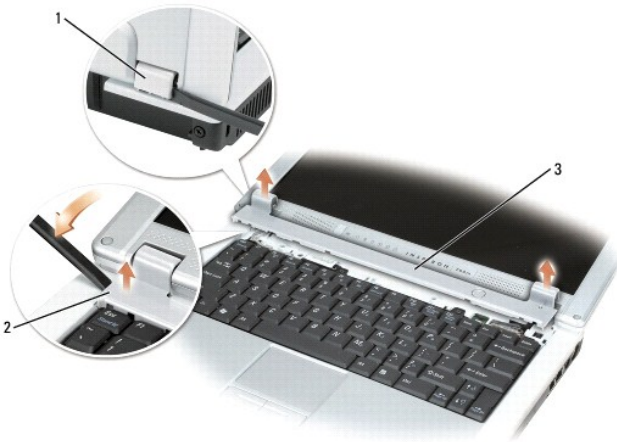


1	hinge cover tab
2	hinge cover
3	hinge cover

6. Carefully lift the hinge cover from the main unit and remove it from the main unit.
-

Replacing the Hinge Cover

1. Open the computer all the way (180 degrees) so that it lies flat against your work surface.
2. Connect the main cable.


3. Place the hinge cover over the front display latches and rotate the cover down into place.
4. Ensure that the two securing tabs on the outer edge of hinge cover are engaged in their respective slots.

 **NOTE:** Make sure that the main cable and the speaker cables are tucked away from the hinge before you reattach the hinge cover.

5. Slide the hinge caps over the display hinges and press down to snap the hinge caps into place.
6. Close the display.

Removing the Display Module

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Disconnect the black and white antenna cables from the Mini PCI Card.

 **NOTE:** You must detach the antenna cables from the Mini PCI Card before you remove the display module.

4. Loosen the two M2 x 2mm captive screws and remove the upper memory module cover.
5. Turn the computer over, and remove the two M2.5 x 6-mm screws from the bottom of the computer.



1 M2.5 x 6-mm screws (2)

6. Remove the two M2.5x 6-mm screws from the back of the computer.



1 M2.5 x 6-mm screws (2)

7. Turn the computer over and open the display 180 degrees.
8. Disconnect the speaker cable connector.
9. Gently pull on the display cable tab and disconnect the display cable on the left side of the unit.
10. Disconnect the display cable on the right side of the unit.

 **NOTE:** Make sure that the antenna cables are disconnected from the Mini PCI Card before removing the display module.

11. Disconnect the antenna cables and make note of the path.



1	display cable tab
2	display module
3	speaker cable connector
4	display cable connector

➔ **NOTICE:** Do not pull on the signal cable. Pull the signal connector to disconnect the cables.

12. Disconnect the signal cable from the system board.
13. If a tape secures the signal connector, remove it and disconnect the signal cable from the system board.
14. Remove the display module out of the bottom case.

Replacing the Display

1. Replace the display module into the bottom case and open the display 180 degrees.
2. Replace the two M2.5 x 6-mm screws on the back of the computer.
3. Connect the speaker cable connector.
4. Connect the display cables on the left and right sides of the unit.
5. Connect the antenna cables.
6. Carefully thread the antenna cable back into place and connect both antenna connectors, matching the color codes.



7. Connect the signal cable to the system board.
 8. If a tape secured the signal connector, replace it and connect the signal cable to the system board.
 9. Close the display and turn the computer over.
 10. Replace the two M2.5 x 6-mm screws from the bottom of the computer.
 11. Replace the upper memory module cover and tighten the two captive screws.
 12. Replace the [keyboard](#).
 13. Replace the [battery](#).
-

[Back to Contents Page](#)

Cooling Fan

Dell™ Inspiron™ 700m/710m Service Manual

• [Removing the Cooling Fan](#)

Removing the Cooling Fan

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.

➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Disconnect the black and white antenna cables from the Mini PCI Card.
4. Remove the [display module](#).
5. Remove the [palm rest](#).
6. Remove the [system board](#).
7. Remove the three M2 x 3-mm screws that secure the cooling fan to the system board.



1	system board connector
2	cooling fan connector
3	cooling fan
4	M2 x 3-mm screws (3)

8. Remove the tape that secures the cooling fan cable to the fan.

➡ **NOTICE:** Do not pull on the cooling fan cable. Pull from the cooling fan connector to disconnect the cable.

9. Disconnect the cooling fan cable from the system board connector.

10. Lift the cooling fan up and out of the bottom case.
-

[Back to Contents Page](#)

Hard Drive

Dell™ Inspiron™ 700m/710m Service Manual

- [Replacing the Hard Drive](#)
- [Returning a Hard Drive to Dell](#)

Replacing the Hard Drive

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Loosen the three captive screws that secure the hard drive to the bottom case.

🔧 NOTE: Rubber grommets secure each screw to the hard drive so that you do not need to completely remove the screws.

1	captive screws (3)
2	hard drive cover



➡ **NOTICE:** When the hard drive is not in the computer, store it in protective antistatic packaging. See "Protecting Against Electrostatic Discharge" in the *Product Information Guide*.

3. Loosen the two captive screws on the hard-drive securing bracket and remove the bracket.
4. Pull the hard drive out of the computer using the pull tab.



1	hard-drive securing bracket
2	pull tab
3	hard drive

5. Remove the new drive from its packaging.

Save the original packaging for storing or shipping the hard drive.

➔ **NOTICE:** Use firm and even pressure to slide the drive into place. If you use excessive force, you may damage the connector.

6. Insert the new drive at a 45-degree angle and rotate the drive into place.




7. Press on the connector until the drive is fully seated.



8. Replace the hard-drive securing bracket and tighten the two captive screws.
 9. Replace the hard drive cover and tighten the three captive screws.
 10. Install the operating system for your computer.
 11. Install the drivers and utilities for your computer.
-

Returning a Hard Drive to Dell

Return your old hard drive to Dell in its original or comparable foam packaging. Otherwise, the hard drive may be damaged in transit.

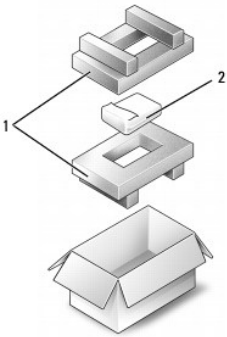

1	foam packaging
2	hard drive

[Back to Contents Page](#)

Keyboard

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Keyboard](#)
- [Replacing the Keyboard](#)


Removing the Keyboard

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [hinge cover](#).
3. Remove the two M2.5 x 5-mm keyboard securing screws.

➡ **NOTICE:** The keycaps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Be careful when removing and handling the keyboard.

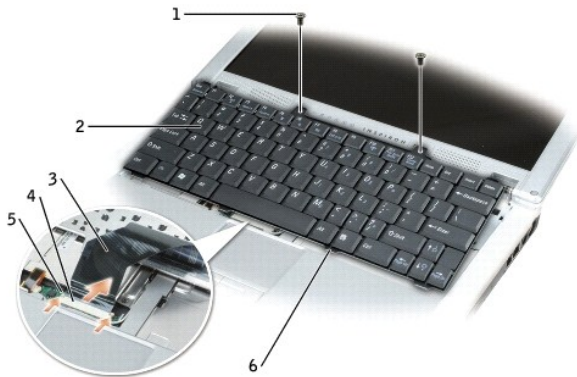

1	M2.5 x 5-mm securing screws (2)	4	ZIF connector
2	keyboard	5	ZIF connector tabs (2)
3	keyboard flex cable	6	securing tabs (4)


4. Gently pull up either of the two keyboard locator tabs to pop up the keyboard.
5. Pull the keyboard a small distance away from the front of the computer to release the four securing tabs located across the front edge of the keyboard.
6. Rotate the keyboard toward the back of the computer and place it face down on the upper case.

➡ **NOTICE:** Do not pull on the keyboard flex cable.

7. Open the ZIF connector on the system board by pulling the ZIF connector tabs toward the back of the computer.
8. Remove the keyboard flex cable from the ZIF connector.
9. Lift the keyboard up and out of the computer.

Replacing the Keyboard

1. Place the keyboard face down on the upper case and flip the keyboard flex cable toward the front of the computer.


 **NOTICE:** To avoid damage to the connector pins, insert the keyboard flex cable evenly into the ZIF connector on the system board, and do not reverse the keyboard flex cable.

2. Ensure that the ZIF connector is open by pulling the ZIF connector tabs toward the back of the computer.

3. Press the keyboard flex cable into the ZIF connector.

4. Close the ZIF connector by pushing the ZIF connector tabs toward the front of the computer.

To aid with proper flex cable connection, a locator line has been added near the end of the flex cable. Press the cable into the connector until the line disappears and hold the cable steady while you close the ZIF connector. (The white line may reappear after the connector is closed, which should not indicate a problem with the connection.)

 **NOTICE:** Position the keyboard flex cable so that it is not pinched when you replace the keyboard in the bottom case.

5. Turn the keyboard over and align the four securing tabs on the front of the keyboard with the slots on the upper case.

6. Ensure that all four keyboard securing tabs are engaged in their respective slots before trying to completely seat the keyboard. Press down on the left and right <Alt> keys to help control tab/slot alignment.

When the keyboard appears to be completely seated, confirm that the front edge of the keyboard is aligned with the edge of the palm rest before proceeding.

7. Replace the two M2.5 x 5-mm securing screws on the keyboard.

8. Replace the [hinge cover](#).

[Back to Contents Page](#)

Optical Bay Latch

Dell™ Inspiron™ 700m/710m Service Manual


- [Removing the Optical Bay Latch](#)
- [Replacing the Optical Bay Latch](#)

Removing the Optical Bay Latch

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.


1. Remove the [battery](#).
2. Remove the [memory module](#).
3. Remove the [Mini PCI card](#), if present.
4. Remove the [modem card](#), if present.
5. Remove the [hard drive](#).
6. Remove the [keyboard](#).
7. Remove the [display module](#).
8. Remove the [palm rest](#).
9. Remove the [system board](#).
10. On the inside of the bottom case, use your fingers to unhook the latch from the bottom case and the snap tabs, catching the optical-latch release button on the outside of the bottom case.

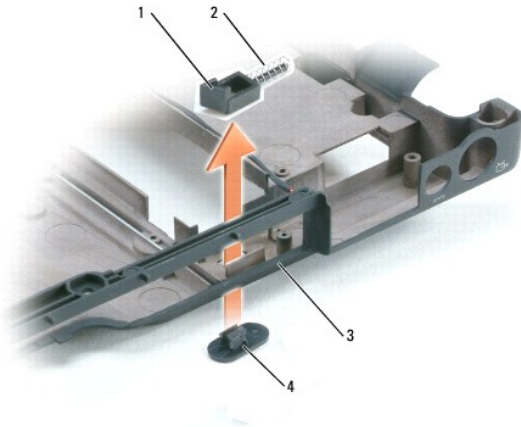

1	optical lock latch
2	spring
3	bottom case
4	optical-latch release button

Replacing the Optical Bay Latch

1. Snap in the new latch button from behind the bottom case, making certain that the snap tabs are fully engaged in the latch.

 **NOTE:** The optical latch release has springs and should be installed on the bottom case.

2. Ensure that the newly installed latch moves smoothly and freely when pushed and released.

[Back to Contents Page](#)

Palm Rest

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Palm Rest](#)
- [Replacing the Palm Rest](#)

Removing the Palm Rest


⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Disconnect the black and white antenna cables from the Mini PCI Card.
4. Remove the [display module](#).
5. Turn the computer over, loosen the two captive screws, and remove the upper memory module cover.
6. Remove the eight M2.5 x 6-mm screws from the bottom of the computer and the one M2 x 3-mm screw from the optical bay.



7. Turn the computer over, and with the bottom of the case resting on a flat surface, carefully separate the palm rest from the lower case.
 - a. Disconnect the touch pad cable from the system board.
 - b. Remove the two M2 x 5-mm screws from the palm rest.
 - c. Carefully detach the palm rest from the bottom case.

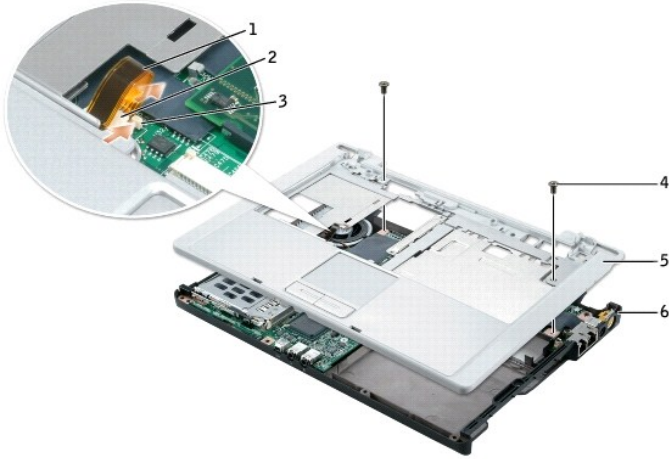

1	palm-rest flex cable	4	M2 x 5-mm screws (2)
2	ZIF connector	5	palm-rest
3	ZIF connector tabs (2)	6	bottom case

8. Lift the ZIF connector, and disconnect the palm-rest flex cable from its ZIF connector on the system board.
9. Lift the palm rest up and out of the computer.

Replacing the Palm Rest

To aid with proper flex cable connection, a locator line has been added near the end of the palm-rest flex cable. When replacing the palm-rest flex cable, press the cable into the connector until the line aligns with the system board and hold it steady while you snap the ZIF connector down. (The locator line may reappear after the connector is closed, which should not indicate a problem with the connection.)


[Back to Contents Page](#)

Pin Assignments for I/O Connectors

Dell™ Inspiron™ 700m/710m Service Manual


- [USB Connector 2.0 \(dual-stacked\)](#)
- [Video Connector](#)
- [IEEE 1394 Connector](#)

USB Connector 2.0 (dual-stacked)

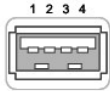

Pin	Signal
1	VCC
2	Data-
3	Data+
4	GND

Video Connector

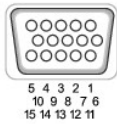

Pin	Signal	Pin	Signal
1	RED	9	CRT_VCC
2	GREEN	10	GND
3	BLUE	11	NC
4	NC	12	DAT_DDC2
5	GND	13	HSYNC
6	GND	14	VSYNC
7	GND	15	CLK_DDC2
8	GND		

IEEE 1394 Connector



1	TPB-
2	TPB+
3	TPA-
4	TPA+

[Back to Contents Page](#)

Processor

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Processor](#)
- [Installing the Processor](#)

Removing the Processor

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

➡ NOTICE: Disconnect the computer and any attached devices from electrical outlets.


➡ NOTICE: To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.

➡ NOTICE: Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Disconnect the black and white antenna cables from the Mini PCI Card.
4. Remove the [display module](#).
5. Remove the [palm rest](#).
6. Remove the [system board](#).
7. Gently turn the system board upside down.
8. Remove the [processor thermal-cooling assembly](#).

➡ NOTICE: When removing the microprocessor module, pull the module straight up. Be careful not to bend the pins on the microprocessor module.

9. To loosen the ZIF socket, use a small, flat-blade screwdriver and rotate the ZIF-socket cam screw counterclockwise until it comes to the cam stop.

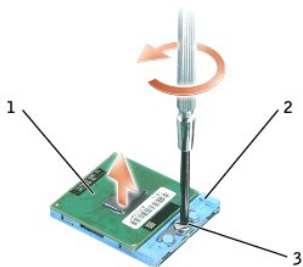


1	processor
2	cam stop
3	ZIF socket cam screw

🔧 NOTE: The ZIF-socket cam screw secures the microprocessor to the system board. Take note of any directional indicators on the ZIF-socket cam screw.

10. Lift out the microprocessor module.


Installing the Processor

➡ NOTICE: Ensure that the cam lock is in the fully open position before seating the microprocessor module. Seating the microprocessor module properly in the ZIF socket does not require force.

 **NOTICE:** A microprocessor module that is not properly seated can result in an intermittent connection or permanent damage to the microprocessor and ZIF socket.

1. Align the pin-1 corner of the microprocessor module with the pin-1 corner of the ZIF socket, and insert the microprocessor module.

 **NOTE:** The pin-1 corner of the microprocessor module has a triangle that aligns with the triangle on the pin-1 corner of the ZIF socket.

 **NOTICE:** You must position the microprocessor module correctly in the ZIF socket to avoid permanent damage to the module and the socket.

When the microprocessor module is correctly seated, all four corners are aligned at the same height. If one or more corners of the module are higher than the others, the module is not seated correctly.

2. Tighten the ZIF socket by turning the cam screw clockwise to secure the microprocessor module to the system board.
3. Perform the steps in "[Removing the Processor](#)" in reverse order, beginning with step [step 8](#).
4. Update the BIOS using a flash BIOS update program floppy disk or CD. For instructions on how to flash the BIOS, see "[Flashing the BIOS](#)."

[Back to Contents Page](#)

Coin-Cell Battery

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the Coin-Cell Battery](#)
- [Replacing the Coin-Cell Battery](#)

Removing the Coin-Cell Battery


⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- ➡ **NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- ➡ **NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- ➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [keyboard](#).
3. Remove the [display module](#).
4. Remove the [palm rest](#).

➡ **NOTICE:** Do not pull on the coin-cell battery cable. Pull from the coin-cell battery connector to disconnect the cable.

5. Disconnect the coin-cell battery cable from the system board connector.

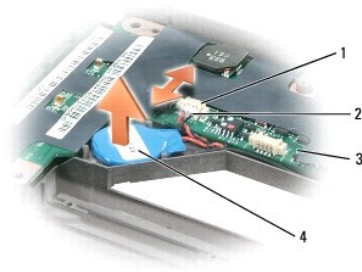

1	system board connector
2	coin-cell battery connector
3	system board
4	coin-cell battery

6. Pry the coin-cell battery free from the bottom case. The coin-cell battery is attached to the bottom case with a piece of adhesive tape.
7. Remove any remnants of the adhesive tape from the bottom case.

Replacing the Coin-Cell Battery

1. Connect the coin-cell battery connector to the system board connector.
2. Press the coin-cell battery into place on the bottom case.
3. Ensure that the cable is routed correctly as shown to avoid damaging the cable.
4. Update the CMOS settings.

[Back to Contents Page](#)

System Board

Dell™ Inspiron™ 700m/710m Service Manual

- [Removing the System Board](#)
- [Replacing the System Board](#)

Removing the System Board

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- **🔌 NOTICE:** Disconnect the computer and any attached devices from electrical outlets.
- **👤 NOTICE:** To avoid ESD, ground yourself by using a wrist grounding strap or by touching an unpainted metal surface on the computer.
- **👤 NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Remove the [battery](#).
2. Remove the [module bay device](#).
3. Remove the [hard drive](#).
4. Remove the [Mini PCI card](#), if present.
5. Remove the [modem card](#), if present.
6. Remove the [keyboard](#).
7. Remove the [upper memory module](#).
8. Remove the [memory module](#).
9. Remove the [display module](#).
10. Remove the [palm rest](#).




1	hex screws (2)	4	system board
2	coin-cell battery connector	5	modem cable connector
3	upper case M2 x 5-mm screw		

11. Remove the two 5 mm hex nuts on either side of the video connector located on the left side of the computer.
12. Disconnect the coin-cell battery connector and the modem cable connector from the main board.


13. Remove the M2 x 5-mm screw that secures the system board to the bottom case.
 14. Lift the system board up from the right side and out of the bottom case.
 15. Gently turn the system board upside down.
 16. Remove the [processor thermal-cooling assembly](#).
 17. Remove the processor.
-

Replacing the System Board

1. Install the processor.
2. Install the processor thermal-cooling assembly.
3. Turn the system board over and place it in the bottom case.

 **NOTE:** Route cables so that they will not be crimped or pinched when the complete assembly is put back together.

4. Reconnect all the cables to the system board ZIF connectors.
5. Reinstall the M2 x 5-mm screw that secures the system board to the bottom case.


 **NOTE:** After replacing the system board, enter the computer Service Tag into the [BIOS](#) of the replacement system board.

[Back to Contents Page](#)

System Components

Dell™ Inspiron™ 700m/710m Service Manual

- 🔗 **NOTICE:** Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty.
- 🔗 **NOTICE:** Unless otherwise noted, each procedure in this manual assumes that a part can be replaced by performing the removal procedure in reverse order.

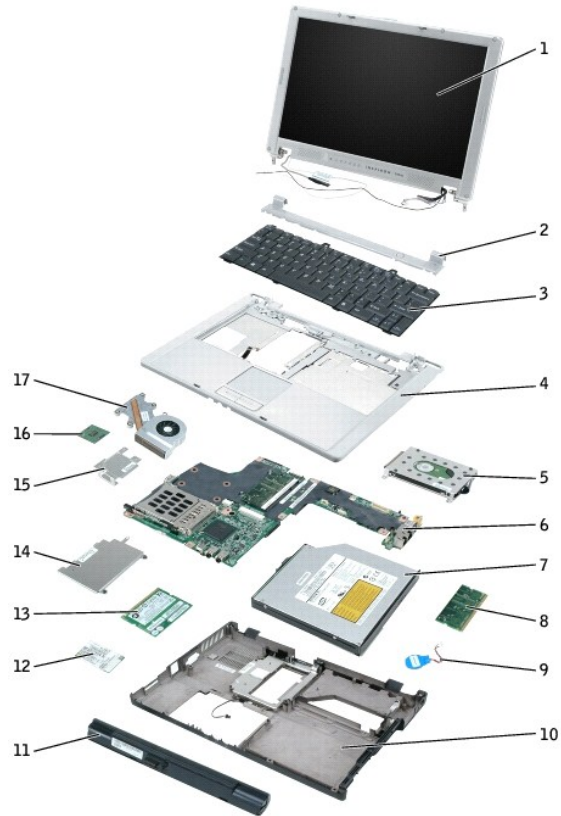

1	display with integrated speakers (2)	10	bottom case
2	hinge cover	11	battery
3	keyboard	12	modem
4	palm rest	13	mini PCI card
5	hard drive	14	upper memory module cover
6	system board	15	cooling fan assembly plate
7	optical drive	16	CPU
8	memory module	17	cooling fan assembly
9	coin-cell battery		

[Back to Contents Page](#)

Dell™ Inspiron™ 700m Service Manual



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

For a complete list of abbreviations and acronyms, see the *Dell Inspiron Help* file.

If you purchased a Dell™ n Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

Information in this document is subject to change without notice.

© 2005 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, and *Inspiron* are trademarks of Dell Inc.; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

February 2005 Rev. A01

[Back to Contents Page](#)

Memory Module, Modem, Mini PCI Card and Module Bay Device

Dell™ Inspiron™ 700m/710m Service Manual

- [Adding Memory](#)
- [Replacing a Modem](#)
- [Adding a Mini PCI Card](#)
- [Installing Module Bay Devices](#)

Adding Memory

You can increase your computer memory by installing a memory module on the system board. See the "Specifications" section in your *Owner's Manual* for information on the memory supported by your computer. Be sure to add only a memory module that is intended for your computer.

Your computer has two memory modules:

- 1 [Lower memory module](#) located under the memory module cover on the bottom of the base
- 1 [Upper memory module](#) located under the keyboard

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

➡ NOTICE: Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

📄 NOTE: Memory modules purchased from Dell are covered under your computer warranty.

Installing A Lower Memory Module

1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.
2. Save and close any open files, exit any open programs, and [shut down the computer](#).
3. Disconnect the computer from the electrical outlet.
4. Wait 10 to 20 seconds, and then disconnect any attached devices.
5. Remove the [battery](#) and any installed PC Cards.

➡ NOTICE: Handle components and cards by their edges, and avoid touching pins and contacts. Ground yourself by touching a metal connector on the back of the computer. Continue to ground yourself periodically during this procedure.

6. Turn the computer over, loosen the two captive screws on the memory module cover, and then remove the cover.




1	memory module cover
2	captive screws (2)

➡ NOTICE: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.

7. If you are replacing a memory module, remove the existing module.

➔ **NOTICE:** Handle components and cards by their edges, and avoid touching pins and contacts. Ground yourself by touching a metal connector on the back of the computer. Continue to ground yourself periodically during this procedure.


- a. Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
- b. Remove the module from the connector.

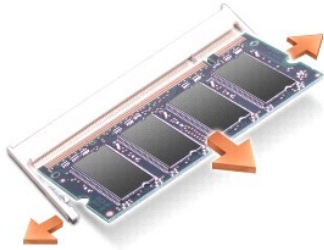

8. Ground yourself and install the new memory module:

- a. Align the notch in the module edge connector with the tab in the center of the connector slot.
- b. Slide the module firmly into the slot at a 45-degree angle, and rotate the module down until it clicks into place. If you do not hear the click, remove the module and reinstall it.

🔍 **NOTE:** If the memory module is not installed properly, the computer may not boot properly. No error message indicates this failure.

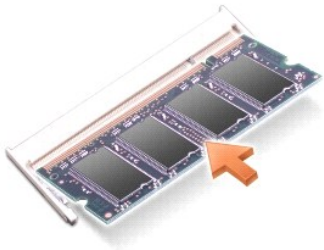

9. Replace the cover.

➔ **NOTICE:** If the cover is difficult to close, remove the module and reinstall it. Forcing the cover to close may damage your computer.

10. Insert the [battery](#) into the battery bay, or connect the AC adapter to your computer and an electrical outlet.

11. Turn on the computer.

As the computer boots, it detects the additional memory and automatically updates the system configuration information.

To confirm the amount of memory installed in the computer, click the **Start** button, click **Help and Support**, and then click **Computer Information**.

Installing An Upper Memory Module

1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.

2. Save and close any open files, exit any open programs, and [shut down the computer](#).


3. Disconnect the computer from the electrical outlet.

4. Wait 10 to 20 seconds, and then disconnect any attached devices.

5. Remove the [battery](#) and any installed PC Cards.

➔ **NOTICE:** Handle components and cards by their edges, and avoid touching pins and contacts. Ground yourself by touching a metal connector on the back of the computer. Continue to ground yourself periodically during this procedure.

6. Remove the [keyboard](#).
7. Loosen the two captive screws, and remove the upper memory module cover.

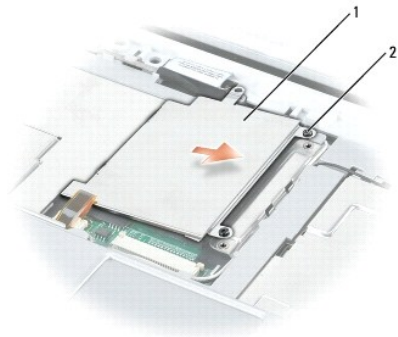


1	upper memory module cover
2	captive screws (2)

➡ **NOTICE:** To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.

8. If you are replacing a memory module, remove the existing module.

➡ **NOTICE:** Handle components and cards by their edges, and avoid touching pins and contacts. Ground yourself by touching a metal connector on the back of the computer. Continue to ground yourself periodically during this procedure.


- a. Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.
- b. Remove the module from the connector.

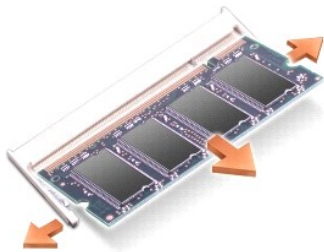

9. Ground yourself and install the new memory module:

- a. Align the notch in the module edge connector with the tab in the center of the connector slot.
- b. Slide the module firmly into the slot at a 45-degree angle, and rotate the module down until it clicks into place. If you do not hear the click, remove the module and reinstall it.

🔧 **NOTE:** If the memory module is not installed properly, the computer may not boot properly. No error message indicates this failure.

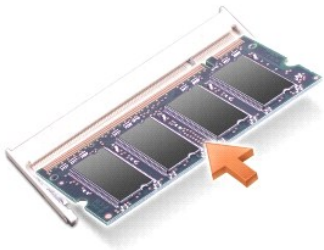

10. Insert the securing tabs on the upper memory module cover into the notches above the memory module connector and tighten the captive screws.

👉 **NOTICE:** If the upper memory module cover is difficult to replace, remove the module and reinstall it. Forcing the cover to close may damage your computer.

11. Replace the [keyboard](#).

12. Insert the [battery](#) into the battery bay, or connect the AC adapter to your computer and an electrical outlet.

13. Turn on the computer.

To confirm the amount of memory installed in the computer, click the **Start** button, click **Help and Support**, and then click **Computer Information**.

Replacing a Modem


⚠ **CAUTION:** Before performing any of the procedures listed below, read and follow the safety instructions in the *Product Information Guide*.

👉 **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.
2. Save and close any open files, exit any open programs, and then shut down the computer.
3. Disconnect the computer from the electrical outlet.
4. Wait 10 to 20 seconds and then disconnect any attached devices.
5. Remove the [battery](#), any installed PC Cards or blanks, and devices.

👉 **NOTICE:** Handle modules by their edges, and do not touch the components on a module. Ground yourself by touching a metal connector on the back of the computer, and continue to do so periodically during this procedure.

6. Turn the computer over and loosen the two captive screws on the modem cover, and remove the cover.

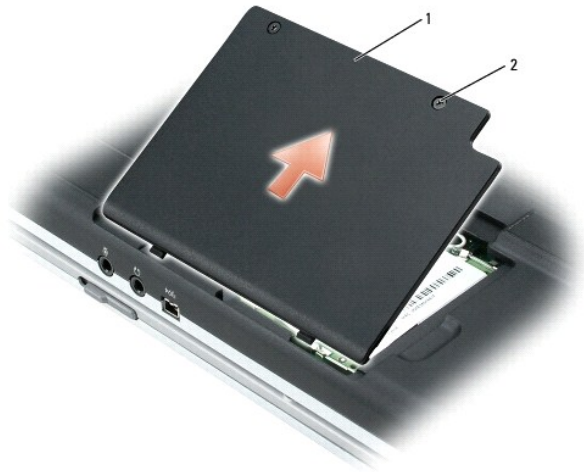


1	Mini PCI card and modem cover
2	captive screws (2)

7. If a modem is not already installed, go to [step 10](#).

8. If you are replacing a modem, remove the existing modem:

- a. Remove the two M2 x5-mm screws securing the modem to the system board, and set them aside.
- b. Pull straight up on the attached pull-tab to lift the modem out of its connector on the system board, and disconnect the modem cable.

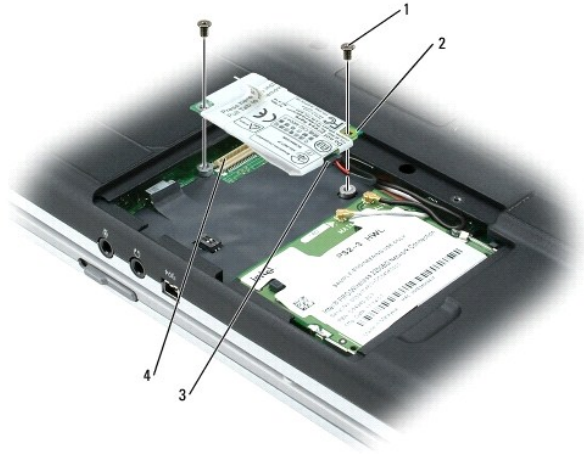

1	M2 x 5-mm modem screws (2)
2	modem
3	modem cable connector
4	system board connector

9. Connect the modem cable to the modem.

➡ **NOTICE:** The connectors are keyed to ensure correct insertion. If you feel resistance, check the connectors and realign the card.

10. Align the modem with the screw hole and press the modem into the connector on the system board.

11. Install the two M2 x 5-mm screws to secure the modem to the system board.

12. Replace the cover.

Adding a Mini PCI Card

If you ordered a Mini PCI card with your computer, the card is already installed.

⚠ **CAUTION:** Before performing any of the procedures listed below, read and follow the safety instructions in the *Product Information Guide*.

➡ **NOTICE:** Read "[Before Working Inside Your Computer](#)" before performing the following procedure.

1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.

2. Save and close any open files, exit any open programs, and [shut down the computer](#).

3. Disconnect the computer from the electrical outlet.

4. Wait 10 to 20 seconds and then disconnect any attached devices.

5. Remove the [battery](#), any installed PC Card or blanks, and devices.

➡ **NOTICE:** Handle modules and cards by their edges, and avoid touching pins and contacts. Ground yourself by touching a metal connector on the back of the computer. Continue to ground yourself periodically during this procedure.

6. Turn the computer over.

7. Loosen the two captive screws on the cover, and remove the cover.



1	Mini PCI card and modem cover
2	captive screw (2)

8. If a Mini PCI card is not already installed, go to [step 10](#).
9. If you are replacing a Mini PCI card, remove the existing card:
 - a. Disconnect the Mini PCI card from the attached cables.



1	antenna cable connectors
---	--------------------------

- b. Release the Mini PCI card by spreading the metal securing tabs until the card pops up slightly.



1	Mini PCI card
2	release latches (2)

c. Lift the Mini PCI card out of its connector.

➡ **NOTICE:** To avoid damaging the Mini PCI card, never place cables on top of or under the card.

10. To replace a Mini PCI card, align the card with the connector at a 45-degree angle, and press the Mini PCI card into the connector.

11. Lower the Mini PCI card toward the inner tabs to approximately a 20-degree angle.

12. Continue lowering the Mini PCI card until it snaps into the inner tabs of the connector.



1	Mini PCI card
2	connector

13. Connect the antenna cable to the antenna connector on the Mini PCI card.

➡ **NOTICE:** The connectors are keyed for correct insertion. If you feel resistance, check the connectors and realign the card.



1 antenna cable connectors

14. Replace the cover and tighten the screws.

Installing Module Bay Devices

⚠ CAUTION: Before you begin any of the procedures in this section, follow the safety instructions located in the *Product Information Guide*.

You can install devices such as a DVD drive, CD-RW/DVD drive, or DVD+RW in the module bay.

Removing and Installing Devices While the Computer Is Turned Off

🔁 NOTICE: To prevent damage to devices, store them in a safe, dry place when they are not installed in the computer. Avoid pressing down on them or placing heavy objects on top of them.

1. Slide and hold the device latch release.



2. Pull the device out of the module bay.
3. Push the new device into the bay until it clicks.

Removing and Installing Devices While the Computer Is Running

1. Before ejecting the device, double-click the **Safely Remove Hardware** icon on the taskbar, click the device you want to eject, and click **Stop**.

👉 **NOTICE:** To prevent damage to devices, store them in a safe, dry place when they are not installed in the computer. Avoid pressing down on them or placing heavy objects on top of them.

2. Slide and hold the device latch release.



3. Pull the device out of the module bay.

4. Push the new device into the bay until it clicks.

The operating system automatically recognizes the device.

[Back to Contents Page](#)