


Vostro 5471

Quick Start Guide

Vodnik za hitri začetek

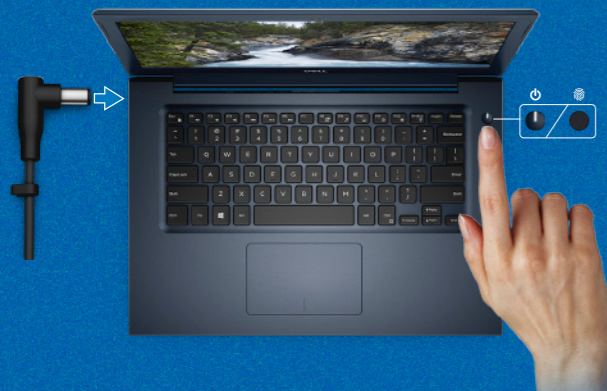

Follow the instructions on the screen to finish operating system setup.

Sledite navodilom na zaslonu in zaključite namestitev operacijskega sistema.

Create recovery media for Windows 10

Ustvarite medij za obnovitev sistema Windows 10

In Windows search, type Recovery, click Create a recovery drive, and follow the instructions on the screen.

V iskanju sistema Windows vnesite **Recovery (Obnovitev)**, kliknite **Create a recovery drive (Ustvarite pogon za obnovitev)** in upoštevajte navodila na zaslonu.



What's New

Novosti

An intuitive fingerprint reader (optional purchase) integrated with the power button provides an easy and secure log on option.

Z bralnikom prstnih odtisov (na voljo kot dodatna oprema), vgrajenim v gumb za vklop, se lahko preprosto in varno prijavite.



Product support and manuals

Podpora in navodila za izdelek

[Dell.com/support](https://www.dell.com/support)

[Dell.com/support/manuals](https://www.dell.com/support/manuals)

[Dell.com/support/windows](https://www.dell.com/support/windows)

Contact Dell

Stik z družbo Dell

[Dell.com/contactdell](https://www.dell.com/contactdell)

Regulatory and safety

Zakonski predpisi in varnost

[Dell.com/regulatory_compliance](https://www.dell.com/regulatory_compliance)

Regulatory model

Regulatorni model

P88G

Regulatory type

Regulativna vrsta

P88G001

Computer model

Model računalnika

Vostro 5471

© 2017 Dell Inc. or its subsidiaries.

© 2017 Microsoft Corporation.




0PHRV1A00


2017-09

Features

Funkcije

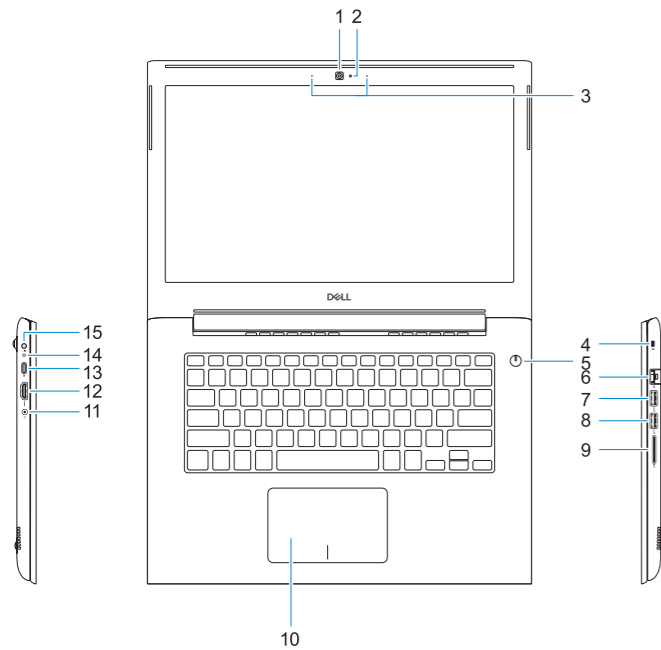

- | | |
|--|---|
| 1. Camera | 12. HDMI port |
| 2. Camera status light | 13. USB 3.1 Gen 1 (Type-C) port with Power Delivery/DisplayPort |
| 3. Dual-array microphones | 14. Power and battery-status light |
| 4. Noble security-cable slot | 15. Power-adapter port |
| 5. Power button with optional fingerprint reader | 16. Speaker |
| 6. Network connector | 17. Service tag label |
| 7. USB 3.1 Gen 1 port with PowerShare | |
| 8. USB 3.1 Gen 1 port | |
| 9. SD card reader | |
| 10. Touchpad | |
| 11. Headset port | |

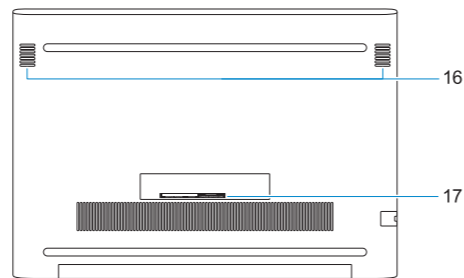

- | | |
|--|--|
| 1. Kamera | 9. Čitalnik kartic SD |
| 2. Lučka stanja kamere | 10. Sledilna ploščica |
| 3. Dvojni niz mikrofonov | 11. Vrata za slušalke |
| 4. Reža za varnostni kabel Noble | 12. Vrata HDMI |
| 5. Gumb za vklop z možnostjo bralnika prstnih odtisov | 13. Vrata USB 3.1. generacije (Type-C s funkcijo Delivery/DisplayPort) |
| 6. Omrežni priključek | 14. Lučka stanja napajanja in baterije |
| 7. Vrata USB 3.1. generacije, Type-C s funkcijo PowerShare | 15. Vrata za napajalnik |
| 8. Vrata USB 3.1. generacije | 16. Zvočnik |
| | 17. Servisna oznaka |