

# Vostro 15

3000 Series


## Quick Start Guide

Pedoman Panduan Cepat




### 1 Connect the power adapter and press the power button

Sambungkan adaptor daya dan tekan tombol daya

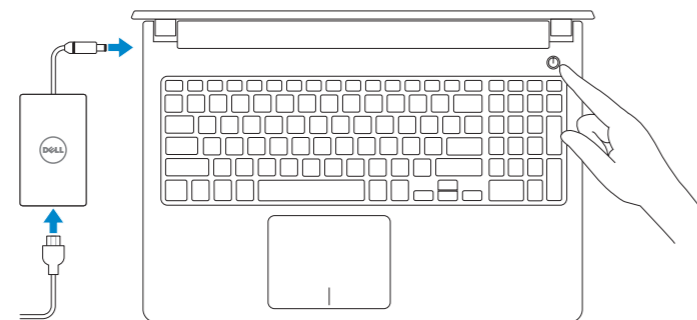


### 2 Finish Windows 10 setup

Tuntaskan penataan Windows 10

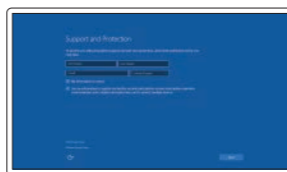

#### Enable Support and Protection

Aktifkan Dukungan dan Perlindungan

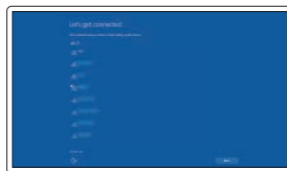


#### Connect to your network

Sambungkan ke jaringan Anda

**NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

**CATATAN:** Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.

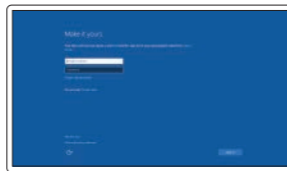

#### Sign in to your Microsoft account or create a local account

Masuk ke akun Microsoft Anda atau buat akun lokal

### Create recovery media for Windows

Buat media pemulihan untuk Windows

In Windows search, type **Recovery**, click **Create a recovery media**, and follow the instructions on the screen.

Di pencarian Windows, ketik **Pemulihan**, klik **Buat media pemulihan**, dan ikuti petunjuk pada layar.

### Locate Dell apps

Mencari lokasi aplikasi Dell



**Dell Product Registration**

#### Register your computer


Daftarkan komputer Anda



**Dell SupportAssist**

#### Check and update your computer

Periksa dan perbarui komputer Anda

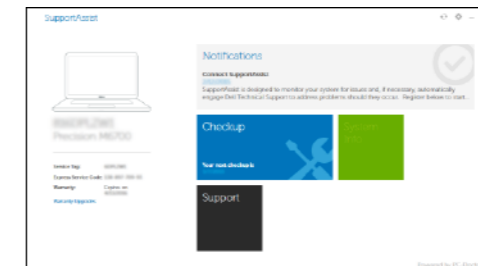

#### Product support and manuals

Dukungan dan panduan produk

[Dell.com/support](https://Dell.com/support)

[Dell.com/support/manuals](https://Dell.com/support/manuals)

[Dell.com/support/windows](https://Dell.com/support/windows)

#### Contact Dell

Hubungi Dell

[Dell.com/contactdell](https://Dell.com/contactdell)

#### Regulatory and safety

Regulasi dan keselamatan

[Dell.com/regulatory\\_compliance](https://Dell.com/regulatory_compliance)

#### Regulatory model

Model regulatori

P52F

#### Regulatory type

Jenis regulatori

P52F001/ P52F003

#### Computer model

Model komputer

Vostro 15-3558/3559

© 2017 Dell Inc.

© 2017 Microsoft Corporation.


© 2015 Canonical Ltd.

Printed in China.


2017-05

# Features

Fitur

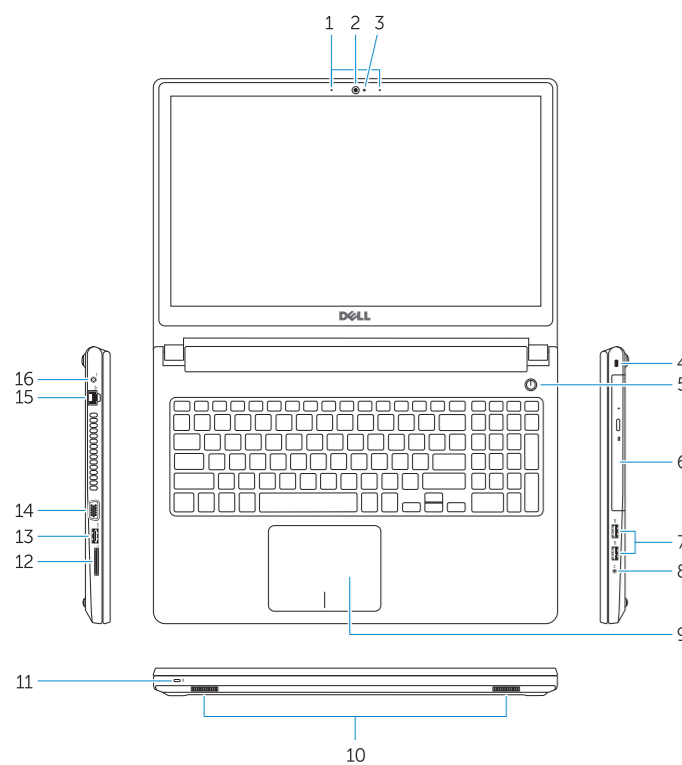

- 1. Microphone (Vostro 15-3558)
- 2. Camera
- 3. Camera-status light
- 4. Microphone
- 5. Security-cable slot
- 6. Power button
- 7. Optical drive
- 8. USB 2.0 connectors
- 9. Headset connector
- 10. Touchpad
- 11. Speakers
- 12. Power and battery-status light/ Hard-drive activity light
- 13. Memory-card reader
- 14. USB 3.0 connector
- 15. VGA connector
- 16. Network connector
- 17. Power connector
- 18. Battery
- 19. Service-Tag label

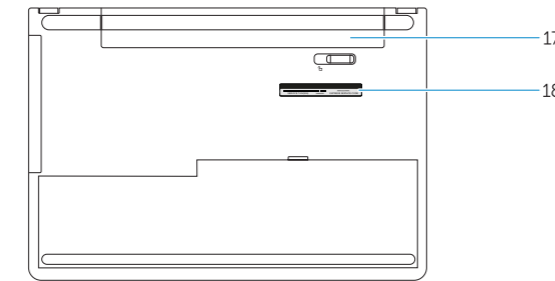


- 1. Mikrofon (Vostro 15-3558)
- 2. Kamera
- 3. Lampu status kamera
- 4. Mikrofon
- 5. Slot kabel pengaman
- 6. Tombol Daya
- 7. Drive optik
- 8. Konektor USB 2.0
- 9. Konektor headset
- 10. Panel sentuh
- 11. Speaker
- 12. Lampu daya dan status baterai/Lampu aktivitas hard disk
- 13. Pembaca kartu memori
- 14. Konektor USB 3.0
- 15. Konektor VGA
- 16. Konektor jaringan
- 17. Konektor daya
- 18. Baterai
- 19. Label Tag Servis

# Shortcut keys

 Tombol pintasan



- F1** Mute audio  
Mendiamkan audio
- F2** Decrease volume  
Menurunkan volume
- F3** Increase volume  
Meningkatkan volume
- F4** Previous track  
Trek sebelumnya
- F5** Play/Pause  
Memutar/Menjeda
- F6** Next track  
Trek berikutnya
- F8** Extend display  
Perpanjang display
- F9** Search  
Menelusuri
- F10** Backlit keyboard  
Keyboard dengan lampu latar



- F11** Decrease brightness  
Menurunkan kecerahan
- F12** Increase brightness  
Meningkatkan kecerahan
- Fn** + **PrtScr** Toggle Fn-key lock  
Mengalihkan kunci tombol Fn
- Fn** + **Esc** Previous track  
Trek sebelumnya
- Fn** + **Insert** Put the computer to sleep  
Membuat komputer tertidur
- Fn** + **H** Toggle between power and battery-status light/harddrive activity light  
Mengalihkan antara lampu daya dan status baterai/lampu aktivitas hard disk