

Vostro 15

3000 Series


Quick Start Guide

Pedoman Panduan Cepat



1 Connect the power adapter and turn on your computer


Hubungkan adaptor daya dan hidupkan komputer Anda

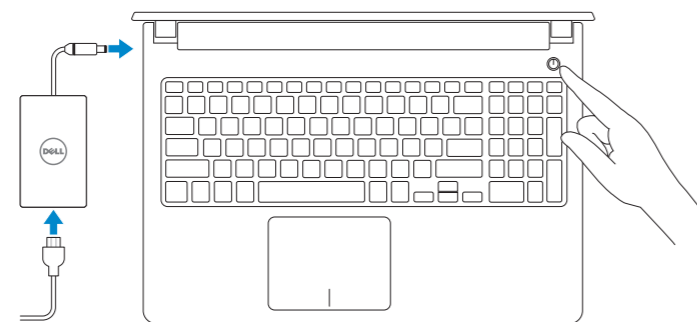

2 Finish Windows setup

Selesaikan penataan Windows

Windows 8

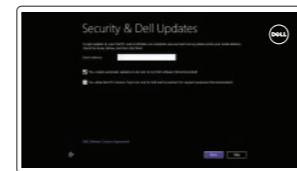


Enable security and updates
Aktifkan keamanan dan pembaruan



Connect to your network
Sambungkan ke jaringan Anda


NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

CATATAN: Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.

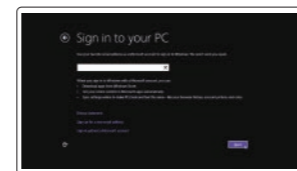


Sign in to your Microsoft account or create a local account
Masuk ke akun Microsoft Anda atau buat akun lokal

Windows 7

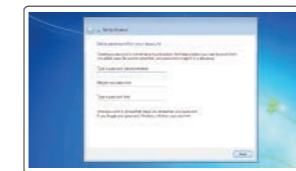


Set up password for Windows
Atur kata sandi untuk Windows

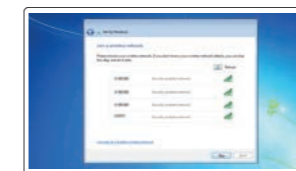

Connect to your network
Sambungkan ke jaringan Anda

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

CATATAN: Jika Anda menyambungkan ke jaringan nirkabel aman, masukkan kata sandi untuk akses jaringan nirkabel saat diminta.

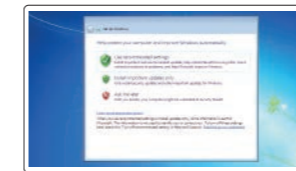

Protect your computer
Lindungi komputer Anda


Locate your Dell apps

Cari lokasi aplikasi Dell Anda


Windows 8



 
Register your computer
Daftarkan komputer Anda



 Dell Backup and Recovery **Backup, recover, repair, or restore your computer**
Cadangkan, kembalikan ke kondisi normal, perbaiki, atau pulihkan komputer Anda



My Dell **Check and update your computer**
Periksa dan perbarui komputer Anda

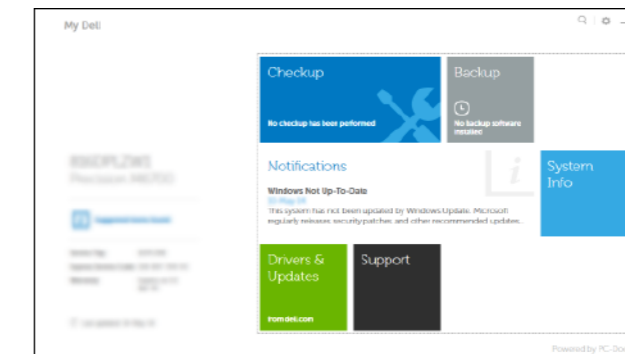

Product support and manuals
Dukungan dan panduan produk

dell.com/support
dell.com/support/manuals

Contact Dell
Hubungi Dell

dell.com/contactdell

Regulatory and safety
Regulasi dan keselamatan

dell.com/regulatory_compliance

Regulatory model
Model regulatori

P52F

Regulatory type
Jenis regulatori


P52F001

Computer model
Model komputer


Vostro 15-3558

Features

Fitur

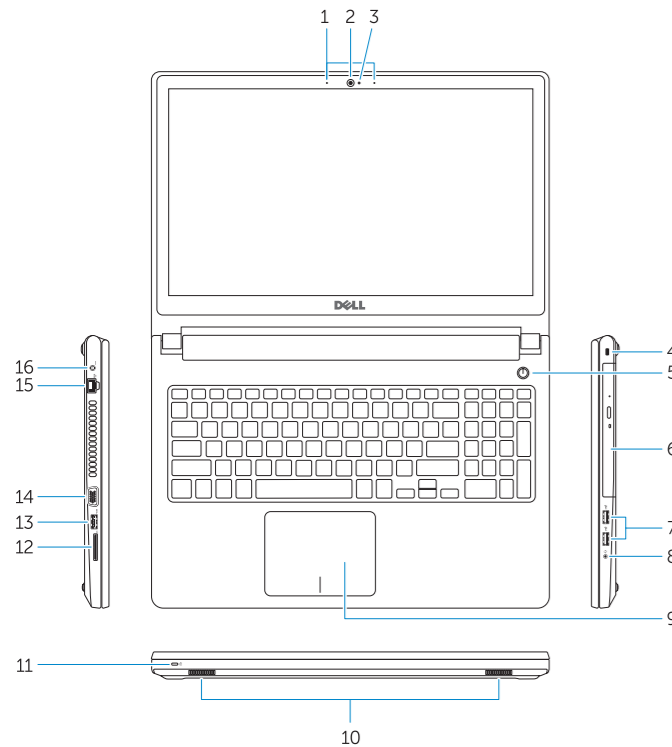

- 1. Microphones
- 2. Camera
- 3. Camera-status light
- 4. Security-cable slot
- 5. Power button
- 6. Optical drive
- 7. USB 2.0 connectors
- 8. Headset connector
- 9. Touchpad
- 10. Speakers
- 11. Power and battery-status light/ Hard-drive activity light
- 12. Memory-card reader
- 13. USB 3.0 connector
- 14. VGA connector
- 15. Network connector
- 16. Power connector
- 17. Battery
- 18. Service-Tag label

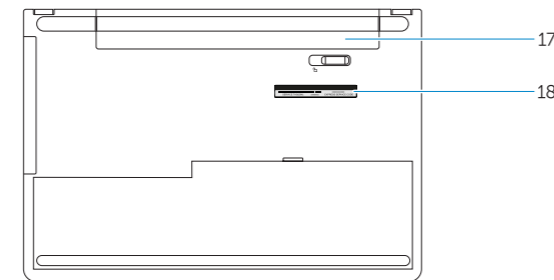

- 1. Mikrofon
- 2. Kamera
- 3. Lampu status kamera
- 4. Slot kabel pengaman
- 5. Tombol Daya
- 6. Drive optik
- 7. Konektor USB 2.0
- 8. Konektor headset
- 9. Panel sentuh
- 10. Speaker
- 11. Lampu daya dan status baterai/Lampu aktivitas hard disk
- 12. Pembaca kartu memori
- 13. Konektor USB 3.0
- 14. Konektor VGA
- 15. Konektor jaringan
- 16. Konektor daya
- 17. Baterai
- 18. Label Tag Servis

Shortcut keys

Tombol pintasan

- F1** Mute audio
Mendiamkan audio
- F2** Decrease volume
Menurunkan volume
- F3** Increase volume
Meningkatkan volume
- F4** Play previous track/chapter
Memutar trek/bab sebelumnya
- F5** Play/Pause
Memutar/Menjeda
- F6** Play next track/chapter
Memutar trek/bab selanjutnya
- F8** Switch to external display
Mengalihkan ke display eksternal
- F9** Open Search
Membuka Pencarian
- F10** Toggle keyboard backlight (optional)
Mengalihkan antar lampu latar keyboard (opsional)

- F11** Decrease brightness
Menurunkan kecerahan
- F12** Increase brightness
Meningkatkan kecerahan
- Fn** + **PrtScr** Turn off/on wireless
Menonaktifkan/mengaktifkan nirkabel
- Fn** + **Esc** Toggle Fn-key lock
Mengalihkan kunci tombol Fn
- Fn** + **Insert** Put the computer to sleep
Membuat komputer tertidur
- Fn** + **H** Toggle between power and battery-status light/hard-drive activity light
Mengalihkan antara lampu daya dan status baterai/lampu aktivitas hard disk

NOTE: For more information, see *Owner's Manual* at dell.com/support.

CATATAN: Untuk informasi lebih lanjut, lihat *Panduan Pemilik* di dell.com/support.