

Dell 9.13.0.0 Command Line Reference Guide for the S5000 Switch

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: About this Guide	46
Objectives.....	46
Audience.....	46
Conventions.....	46
Information Icons.....	47
Chapter 2: CLI Basics	48
Accessing the Command Line.....	48
Multiple Configuration Users.....	48
Navigating the CLI.....	49
Obtaining Help.....	49
Using the no Command.....	51
Filtering show Commands.....	51
Enabling Software Features on Devices Using a Command Option.....	52
feature vrf.....	52
show feature.....	53
Command Modes.....	53
Determining Chassis Mode.....	60
Chapter 3: File Management	61
boot system.....	61
cd.....	62
HTTP Copy via CLI.....	63
copy.....	64
delete.....	66
dir.....	67
format.....	68
fsck flash.....	69
mkdir.....	70
mount nfs.....	70
rmdir.....	71
rename.....	72
restore factory-defaults.....	72
show boot system.....	75
show bootvar.....	75
show file-systems.....	76
show os-version.....	77
show running-config.....	78
show startup-config.....	82
show version.....	83
upgrade system.....	84
upgrade.....	86
Chapter 4: Control and Monitoring	89

asf-mode.....	90
banner exec.....	91
banner login.....	92
banner motd.....	94
cam-acl.....	94
cam-acl-vlan.....	96
clear average-power.....	96
clear line.....	97
configure.....	98
disable.....	99
do.....	99
enable.....	100
enable optic-info-update interval.....	101
enable xfp-power-updates.....	102
end.....	103
exec-timeout.....	104
exit.....	104
ftp-server enable.....	105
ftp-server topdir.....	107
ftp-server username.....	107
hostname.....	108
ip http source-interface.....	109
ip ftp password.....	110
ip ftp source-interface.....	111
ip ftp username.....	112
ip ftp vrf.....	113
ip telnet server enable.....	113
ip telnet server vrf.....	114
ip telnet source-interface.....	115
ip telnet vrf.....	116
ip tftp source-interface.....	117
ip tftp vrf.....	118
line.....	118
login concurrent-session.....	119
login statistics.....	121
motd-banner.....	122
ping.....	123
reload.....	126
send.....	127
service timestamps.....	127
show alarms.....	129
show cam-acl-vlan.....	130
show command-history.....	130
show cpu-traffic-stats.....	131
show debugging.....	132
show environment.....	133
show inventory.....	135
show login statistics.....	136
show memory.....	138
show processes cpu.....	139

show processes ipc flow-control.....	142
show processes memory.....	144
show reset-reason.....	146
show software ifm.....	147
show system.....	148
show tech-support.....	149
ssh-peer-stack-unit.....	151
telnet.....	152
telnet-peer-stack-unit.....	153
terminal length.....	154
traceroute.....	155
undebg all.....	157
virtual-ip.....	157
write.....	158
Chapter 5: 802.1X.....	160
debug dot1x.....	161
dot1x auth-fail-vlan.....	161
dot1x auth-server.....	162
dot1x auth-type mab-only.....	163
dot1x authentication (Configuration).....	164
dot1x authentication (Interface).....	165
dot1x critical-vlan.....	165
dot1x profile.....	166
dot1x static-mab.....	167
dot1x guest-vlan.....	168
dot1x host-mode.....	169
dot1x mac-auth-bypass.....	170
dot1x max-eap-req.....	171
dot1x max-suplicants.....	171
dot1x port-control.....	172
dot1x quiet-period.....	173
dot1x reauthentication.....	174
dot1x reauth-max.....	174
dot1x server-timeout.....	175
dot1x supplicant-timeout.....	176
dot1x tx-period.....	177
mac.....	178
show dot1x cos-mapping interface.....	178
show dot1x interface.....	180
show dot1x profile.....	182
Chapter 6: Boot User Mode.....	183
boot change.....	183
boot messages disable.....	184
boot messages enable.....	184
boot show net config retries.....	184
boot write net config retries.....	185
boot zero.....	185

default gateway.....	185
enable.....	185
help.....	186
ignore enable password.....	187
enable sha256-password.....	187
ignore startup config.....	188
interface management ethernet ip address.....	188
interface management port config.....	188
no default-gateway.....	189
no interface management ethernet ip address.....	189
reload.....	189
show boot blc.....	190
show boot selection.....	190
show bootflash.....	190
show bootvar.....	191
show default-gateway.....	191
show interface management ethernet.....	192
show interface management port config.....	192

Chapter 7: Access Control Lists (ACL)..... 193

Commands Common to all ACL Types.....	194
remark.....	194
show config.....	195
Common IP ACL Commands.....	196
access-class.....	196
clear counters ip access-group.....	197
ip access-group.....	198
ip control-plane egress-filter.....	199
show ip accounting access-list.....	200
show ip access-lists.....	201
Standard IP ACL Commands.....	202
deny.....	202
ip access-list standard.....	204
permit.....	205
resequence access-list.....	206
seq.....	207
Extended IP ACL Commands.....	209
deny.....	209
deny icmp.....	211
deny tcp.....	213
deny udp.....	216
ip access-list extended.....	218
permit.....	219
permit tcp.....	221
permit udp.....	224
resequence access-list.....	226
seq.....	227
Common MAC Access List Commands.....	230
clear counters mac access-group.....	230
mac access-group.....	231

show mac access-lists.....	232
show mac accounting access-list.....	233
Standard MAC ACL Commands.....	234
deny.....	234
mac access-list standard.....	236
permit.....	237
seq.....	238
Extended MAC ACL Commands.....	239
deny.....	239
mac access-list extended.....	241
permit.....	242
IP Prefix List Commands.....	244
clear ip prefix-list.....	244
deny.....	245
ip prefix-list.....	246
seq.....	247
show config.....	248
show ip prefix-list detail.....	249
show ip prefix-list summary.....	249
Route Map Commands.....	250
continue.....	250
description.....	252
match as-path.....	252
match community.....	253
match interface.....	254
match ip address.....	255
match ip next-hop.....	256
match ip route-source.....	257
match metric.....	258
match origin.....	259
match route-type.....	259
match tag.....	260
route-map.....	261
set as-path.....	262
set automatic-tag.....	263
set comm-list delete.....	264
set community.....	265
set level.....	266
set local-preference.....	267
set metric.....	268
set metric-type.....	269
set next-hop.....	270
set origin.....	271
set tag.....	272
set weight.....	272
show config.....	273
show route-map.....	274
AS-Path Commands.....	275
ip as-path access-list.....	275
show ip as-path-access-lists.....	276

IP Community List Commands.....	276
ip community-list.....	276
show ip community-lists.....	277
deny (for Standard IP ACLs).....	278
deny (for Extended IP ACLs).....	279
seq (for Standard IPv4 ACLs).....	281
deny tcp (for Extended IP ACLs).....	282
deny udp (for Extended IP ACLs).....	283
deny arp (for Extended MAC ACLs).....	284
deny icmp (for Extended IP ACLs).....	286
deny ether-type (for Extended MAC ACLs).....	287
deny (for Standard MAC ACLs).....	288
deny (for Extended MAC ACLs).....	289
permit (for Standard IP ACLs).....	291
permit arp (for Extended MAC ACLs).....	292
permit ether-type (for Extended MAC ACLs).....	293
permit icmp (for Extended IP ACLs).....	294
permit udp (for Extended IP ACLs).....	295
permit (for Extended IP ACLs).....	297
permit (for Standard MAC ACLs).....	299
seq (for Standard MAC ACLs).....	300
permit tcp (for Extended IP ACLs).....	301
seq arp (for Extended MAC ACLs).....	303
seq ether-type (for Extended MAC ACLs).....	304
seq (for IP ACLs).....	305
seq (for IPv6 ACLs).....	306
permit udp (for IPv6 ACLs).....	308
permit tcp (for IPv6 ACLs).....	310
permit icmp (for IPv6 ACLs).....	312
permit (for IPv6 ACLs).....	314
deny udp (for IPv6 ACLs).....	315
deny tcp (for IPv6 ACLs).....	317
deny icmp (for Extended IPv6 ACLs).....	319
deny (for IPv6 ACLs).....	321

Chapter 8: Access Control List (ACL) VLAN Groups and Content Addressable Memory (CAM).. 323

member vlan.....	323
ip access-group.....	324
show acl-vlan-group	324
show cam-acl-vlan.....	325
cam-acl-vlan.....	326
show cam-usage.....	327
show running config acl-vlan-group.....	330
acl-vlan-group.....	331
show acl-vlan-group detail.....	331
description (ACL VLAN Group).....	332

Chapter 9: Bidirectional Forwarding Detection (BFD)..... 333

bfd all-neighbors.....	333
------------------------	-----

bfd disable.....	335
bfd enable (Configuration).....	335
bfd enable (Interface).....	336
bfd interval	337
bfd protocol-liveness.....	338
ip route bfd.....	338
ip ospf bfd all-neighbors.....	339
ipv6 ospf bfd all-neighbors.....	340
ipv6 route bfd.....	341
isis bfd all-neighbors.....	342
neighbor bfd.....	343
neighbor bfd disable.....	344
show bfd neighbors.....	345
vrrp bfd neighbor.....	347
Chapter 10: Border Gateway Protocol.....	348
BGP IPv4 Commands.....	351
address-family.....	351
aggregate-address.....	352
bgp add-path.....	353
bgp always-compare-med.....	354
bgp asnotation.....	355
bgp bestpath as-path ignore.....	356
bgp bestpath as-path multipath-relax.....	356
bgp bestpath med confed.....	357
bgp bestpath med missing-as-best.....	358
bgp bestpath router-id ignore.....	358
bgp client-to-client reflection.....	359
bgp cluster-id.....	360
bgp confederation identifier.....	361
bgp confederation peers.....	362
bgp connection-retry-timer.....	363
bgp dampening.....	363
bgp default local-preference.....	364
bgp dmzlink-bw.....	365
bgp enforce-first-as.....	366
bgp fast-external-failover.....	367
bgp four-octet-as-support.....	367
bgp graceful-restart.....	368
bgp log-neighbor-changes.....	369
bgp non-deterministic-med.....	369
bgp outbound-optimization.....	370
bgp recursive-bgp-next-hop.....	371
bgp regex-eval-optz-disable.....	371
bgp router-id.....	373
bgp soft-reconfig-backup.....	373
capture bgp-pdu max-buffer-size.....	374
capture bgp-pdu neighbor.....	375
clear ip bgp.....	375
clear ip bgp dampening.....	377

clear ip bgp flap-statistics.....	378
clear ip bgp peer-group.....	379
debug ip bgp.....	380
debug ip bgp dampening.....	382
debug ip bgp events.....	383
debug ip bgp keepalives.....	384
debug ip bgp notifications.....	385
debug ip bgp peer-group updates.....	385
debug ip bgp soft-reconfiguration.....	386
debug ip bgp updates.....	387
default-metric.....	388
description.....	389
deny bandwidth.....	390
distance bgp.....	390
maximum-paths.....	391
neighbor activate.....	392
neighbor add-path.....	393
neighbor advertisement-interval.....	394
neighbor advertisement-start.....	395
neighbor allowas-in.....	395
neighbor default-originate.....	396
neighbor description.....	398
neighbor distribute-list.....	398
neighbor ebgp-multihop.....	399
neighbor fail-over.....	400
neighbor filter-list.....	401
neighbor graceful-restart.....	401
neighbor local-as.....	402
neighbor maximum-prefix.....	403
neighbor next-hop-self.....	404
neighbor password.....	405
neighbor peer-group (assigning peers).....	406
neighbor peer-group (creating group).....	407
neighbor peer-group passive.....	408
neighbor remote-as.....	409
neighbor remove-private-as.....	410
neighbor route-map.....	411
neighbor route-reflector-client.....	412
neighbor send-community.....	413
neighbor sender-side-loopdetect.....	414
neighbor shutdown.....	415
neighbor soft-reconfiguration inbound.....	416
neighbor subnet.....	417
neighbor timers.....	417
neighbor update-source.....	418
neighbor weight.....	419
network.....	420
network backdoor.....	421
permit bandwidth.....	422
redistribute.....	423

router bgp.....	424
shutdown all.....	425
shutdown address-family-ipv4-multicast.....	425
shutdown address-family-ipv4-unicast.....	426
shutdown address-family-ipv6-unicast.....	426
set extcommunity bandwidth.....	426
show capture bgp-pdu neighbor.....	427
show config.....	428
show ip bgp.....	429
show ip bgp paths.....	431
show ip bgp cluster-list.....	432
show ip bgp community.....	434
show ip bgp community-list.....	436
show ip bgp dampened-paths.....	437
show ip bgp detail.....	439
show ip bgp extcommunity-list.....	440
show ip bgp filter-list.....	441
show ip bgp flap-statistics.....	443
show ip bgp inconsistent-as.....	445
show ip bgp neighbors.....	446
show ip bgp next-hop.....	450
show ip bgp paths as-path.....	451
show ip bgp paths community.....	452
show ip bgp peer-group.....	453
show ip bgp regexp.....	454
show ip bgp summary.....	456
show running-config bgp.....	458
timers bgp.....	459
MBGP Commands.....	460
address family ipv4 multicast (MBGP).....	460
aggregate-address.....	461
bgp dampening.....	461
clear ip bgp ipv4 multicast.....	462
clear ip bgp dampening.....	462
clear ip bgp flap-statistics.....	463
debug ip bgp dampening.....	463
clear ip bgp peer-group.....	464
debug ip bgp updates.....	465
distance bgp.....	466
neighbor activate.....	467
neighbor advertisement-interval.....	467
neighbor default-originate.....	468
neighbor distribute-list.....	468
neighbor filter-list.....	469
neighbor maximum-prefix.....	470
neighbor next-hop-self.....	470
neighbor remove-private-as.....	471
neighbor route-map.....	471
neighbor route-reflector-client.....	472
network.....	472

redistribute.....	473
redistribute ospf.....	474
show ip bgp ipv4 multicast.....	475
show ip bgp cluster-list.....	476
show ip bgp community.....	476
show ip bgp community-list.....	477
show ip bgp dampened-paths.....	477
show ip bgp filter-list.....	479
show ip bgp flap-statistics.....	479
show ip bgp inconsistent-as.....	480
show ip bgp ipv4 multicast neighbors.....	480
show ip bgp peer-group.....	483
show ip bgp summary.....	483
BGP Extended Communities (RFC 4360).....	485
deny.....	485
deny regex.....	485
description.....	486
ip extcommunity-list.....	487
match extcommunity.....	487
permit.....	488
permit regex.....	489
set extcommunity rt.....	489
set extcommunity soo.....	490
show ip bgp ipv4 extcommunity-list.....	491
show ip bgp paths extcommunity.....	492
show ip extcommunity-list.....	493
show running-config extcommunity-list.....	494
Chapter 11: Bare Metal Provisioning (BMP).....	495
reload-type.....	495
show reload-type.....	497
stop jump-start.....	497
Chapter 12: Content Addressable Memory (CAM).....	499
CAM Profile Commands.....	499
cam-acl (Configuration).....	500
cam-acl-egress (Configuration).....	502
cam-optimization.....	503
cam-threshold.....	504
show cam-acl.....	504
show cam-usage.....	506
test cam-usage.....	507
Chapter 13: Control Plane Policing (CoPP).....	510
control-plane-cpuqos.....	510
service-policy rate-limit-cpu-queues.....	511
service-policy rate-limit-protocols.....	511
ip unknown-unicast.....	512
ipv6 unknown-unicast.....	513

show cpu-queue rate cp.....	513
show ip protocol-queue-mapping.....	514
show ipv6 protocol-queue-mapping.....	515
show mac protocol-queue-mapping.....	516

Chapter 14: Data Center Bridging (DCB)..... 518

DCB Command.....	518
dcb-enable.....	518
PFC Commands.....	519
clear pfc counters.....	519
description.....	520
pfc mode on.....	520
pfc no-drop queues.....	521
show dcb.....	522
show interface pfc.....	523
show interface pfc statistics.....	525
show stack-unit stack-ports pfc details.....	526
ETS Commands.....	527
bandwidth-percentage.....	527
clear ets counters.....	528
dcb-enable.....	528
description.....	529
priority-list.....	530
qos-policy-output ets.....	530
scheduler.....	531
show interface ets.....	531
show qos priority-groups.....	535
show stack-unit stack-ports ets details.....	536
DCBX Commands.....	537
advertise dcbx-app-tlv.....	537
advertise dcbx-appln-tlv.....	537
advertise dcbx-tlv.....	538
dcbx port-role.....	539
dcbx version.....	539
debug dcbx.....	540
fcoe priority-bits.....	541
iscsi priority-bits.....	541
show interface dcbx detail.....	542
dcb-map.....	545
priority-pgid.....	545
pfc mode on.....	546
priority-group bandwidth pfc.....	547
dcb-map stack-unit all stack-ports all.....	548
show qos dcb-map.....	548
dcb pfc-shared-buffer-size.....	549
dcb-buffer-threshold	550
priority.....	551
qos-policy-buffer.....	552
dcb-policy buffer-threshold (Interface Configuration).....	553
dcb-policy buffer-threshold (Global Configuration).....	554

show qos dcb-buffer-threshold.....	554
dcb pfc-total-buffer-size.....	555
show running-config dcb-buffer-threshold.....	556
service-class buffer shared-threshold-weight.....	557
dcb pfc-queues.....	559
dcb {ets pfc} enable.....	559

Chapter 15: Dynamic Host Configuration Protocol (DHCP)..... 561

Commands to Configure the System to be a DHCP Server.....	561
clear ip dhcp.....	561
debug ip dhcp server.....	562
default-router.....	563
disable.....	563
dns-server.....	564
domain-name.....	565
excluded-address.....	565
hardware-address.....	566
host.....	567
lease.....	567
netbios-name-server.....	568
netbios-node-type.....	569
network.....	570
pool.....	570
show ip dhcp binding.....	571
show ip dhcp configuration.....	572
show ip dhcp conflict.....	573
show ip dhcp server.....	573
Commands to Configure Secure DHCP.....	574
arp inspection.....	574
arp inspection-trust.....	575
clear ip dhcp snooping.....	575
ip dhcp relay.....	577
ip dhcp snooping.....	578
ip dhcp snooping binding.....	578
ip dhcp snooping database.....	579
ip dhcp snooping database renew.....	580
ip dhcp snooping trust.....	581
ip dhcp source-address-validation.....	581
ip dhcp relay information-option.....	582
ip dhcp snooping verify mac-address.....	583
ip helper-address.....	584
show ip dhcp snooping.....	585
Commands to Configure DNS	587
ip name-server.....	587
ip domain-name.....	588
ip domain-list.....	589
ip host.....	589
clear host.....	590

Chapter 16: Equal Cost Multi-Path (ECMP)	592
ecmp-group.....	592
hash-algorithm.....	593
hash-algorithm ecmp.....	595
hash-algorithm seed.....	596
ip ecmp-group.....	597
ip ecmp weighted.....	598
link-bundle-monitor enable.....	599
link-bundle-distribution trigger-threshold.....	599
show config.....	600
show link-bundle distribution.....	600
Chapter 17: FIPS Cryptography	602
fips mode enable.....	602
show fips status.....	602
show ip ssh.....	603
ssh.....	604
Chapter 18: FIP Snooping	607
clear fip-snooping database interface vlan.....	607
clear fip-snooping statistics.....	608
debug fip snooping.....	608
debug fip snooping rx.....	609
feature fip-snooping.....	610
fip-snooping enable.....	611
fip-snooping fc-map.....	611
fip-snooping max-sessions-per-enodemac.....	612
fip-snooping port-mode fcf.....	612
fip-snooping port-mode fcoe-trusted.....	613
show fip-snooping config.....	613
show fip-snooping enode.....	614
show fip-snooping fcf.....	615
show fip-snooping sessions.....	616
show fip-snooping statistics.....	617
show fip-snooping system.....	620
show fip-snooping vlan.....	620
show fips status.....	621
Chapter 19: Force10 Resilient Ring Protocol (FRRP)	622
clear frrp.....	622
debug frrp.....	623
description.....	624
disable.....	625
interface.....	626
member-vlan.....	627
mode.....	628
protocol frrp.....	628
show frrp.....	629

timer.....	632
Chapter 20: GARP VLAN Registration (GVRP).....	633
clear gvrp statistics.....	634
debug gvrp.....	635
disable.....	636
garp timers.....	636
gvrp enable.....	638
gvrp registration.....	638
protocol gvrp.....	639
show config.....	640
show garp timers.....	641
show gvrp.....	642
show gvrp statistics.....	643
Chapter 21: High Availability (HA).....	645
patch flash://RUNTIME_PATCH_DIR.....	645
process restartable.....	646
redundancy disable-auto-reboot stack-unit.....	646
redundancy force-failover.....	647
redundancy primary.....	647
redundancy protocol.....	648
redundancy reset-counter.....	649
redundancy sfm standby.....	649
redundancy synchronize.....	650
show patch.....	651
show processes restartable.....	651
show redundancy.....	652
Chapter 22: Internet Group Management Protocol (IGMP).....	654
IGMP Commands.....	654
clear ip igmp groups.....	655
clear ip igmp snooping groups.....	656
debug ip igmp.....	656
debug ip igmp snooping.....	657
ip igmp access-group.....	658
ip igmp immediate-leave.....	659
ip igmp last-member-query-interval.....	660
ip igmp query-interval.....	661
ip igmp query-max-resp-time.....	662
ip igmp ssm-map.....	663
ip igmp version.....	664
show ip igmp groups.....	665
show ip igmp interface.....	667
show ip igmp ssm-map.....	669
IGMP Snooping Commands.....	670
ip igmp snooping enable.....	670
ip igmp snooping fast-leave.....	671
ip igmp snooping flood.....	672

ip igmp snooping last-member-query-interval.....	673
ip igmp snooping mrouter.....	674
ip igmp snooping querier.....	675
show ip igmp snooping groups.....	676
show ip igmp snooping mrouter.....	677

Chapter 23: Interfaces.....679

Basic Interface Commands.....	679
clear counters.....	679
clear counters eee.....	681
clear dampening.....	681
cx4-cable-length.....	682
dampening.....	683
default interface.....	684
description.....	685
duplex (10/100 Interfaces).....	686
duplex (Management interface).....	687
eee.....	688
flowcontrol.....	688
interface.....	691
interface group.....	692
interface loopback.....	693
interface managementEthernet.....	694
interface null.....	695
interface range.....	696
interface range macro (define).....	698
interface range macro name.....	700
interface vlan.....	700
intf-type cr4 autoneg.....	702
keepalive.....	702
negotiation auto.....	703
monitor interface.....	705
mtu.....	707
portmode hybrid.....	709
rate-interval.....	710
rate-interval (Configuration Mode).....	711
show config.....	712
show config (from INTERFACE RANGE mode).....	712
show hardware.....	713
show interfaces.....	717
show interfaces configured.....	722
show interfaces dampening.....	723
show interfaces eee.....	724
show interfaces eee statistics.....	725
show interfaces phy.....	727
show interfaces description.....	729
show interfaces stack-unit.....	731
show interfaces status.....	732
show interfaces switchport.....	733
show interfaces transceiver.....	735

show interfaces vlan.....	740
show range.....	741
show running-config ecmp-group.....	742
shutdown.....	742
speed (for 10/100/1000/10000 interfaces).....	743
speed (Management interface).....	745
stack-unit portmode.....	745
switchport.....	746
wavelength.....	748
Egress Interface Selection (EIS) Commands.....	748
Port Channel Commands.....	752
channel-member.....	753
group.....	754
interface port-channel.....	755
minimum-links.....	756
port-channel failover-group.....	757
show config.....	758
show interfaces port-channel.....	758
show port-channel-flow.....	761
Time Domain Reflectometer (TDR) Commands.....	762
tdr-cable-test.....	763
show tdr.....	763
UDP Broadcast Commands.....	765
debug ip udp-helper.....	765
ip udp-helper udp-port.....	766
show ip udp-helper.....	766
Chapter 24: Fabric Services Commands.....	768
active-zoneset	768
change fc-trace-level	769
clear counters fibrechannel.....	769
create fc-dump-support	770
fc alias.....	770
fc switch-mode fabric-services.....	771
fc zone.....	771
fc zoneset.....	772
fcoe-map.....	772
feature fc.....	773
member — alias.....	773
member — zone.....	774
member — zoneset.....	774
show fc alias.....	775
show fc fabric.....	775
show fc lsdb.....	776
show fc ns.....	777
show fc route.....	778
show fc switch.....	779
show fc topology.....	779
show fc-trace-level.....	780
show fc zone.....	780

show fc zoneset.....	781
Chapter 25: Fibre Channel Interface Commands.....	783
fabric.....	783
fc ping.....	783
interface fibrechannel.....	784
show interfaces fibrechannel.....	785
speed.....	788
Passthrough Commands.....	789
show stack-unit port-group portmode.....	789
stack-unit port-group portmode.....	790
Chapter 26: Internet Protocol Security (IPSec).....	791
crypto ipsec transform-set.....	791
crypto ipsec policy.....	792
management crypto-policy.....	793
match.....	794
session-key.....	795
show crypto ipsec transform-set.....	795
show crypto ipsec policy.....	796
transform-set.....	797
Chapter 27: IPv4 Routing.....	798
arp.....	799
arp backoff-time.....	800
arp learn-enable.....	801
arp max-entries.....	801
arp retries.....	802
arp timeout.....	803
clear arp-cache.....	804
clear host.....	805
clear ip fib stack-unit.....	806
clear ip route.....	806
clear tcp statistics.....	807
debug arp.....	808
debug ip dhcp.....	809
debug ip icmp.....	811
debug ip packet.....	812
ip address.....	814
ip directed-broadcast.....	815
ip domain-list.....	816
ip domain-lookup.....	817
ip domain-name.....	818
ip helper-address.....	819
ip helper-address hop-count disable.....	820
ip host.....	820
ip icmp source-interface.....	821
ipv6 icmp source-interface.....	823
ip max-frag-count.....	824

ip mtu.....	825
ip name-server.....	826
ip proxy-arp.....	827
ip route.....	828
ip source-route.....	830
ip unreachable.....	831
load balance.....	832
management route.....	833
show arp.....	834
show arp retries.....	836
show hosts.....	837
show ip cam stack-unit.....	839
show ip fib stack-unit.....	840
show ip flow.....	842
show ip interface.....	843
show ip management-route.....	846
show ip protocols.....	847
show ip route.....	848
show ip route list.....	851
show ip route summary.....	852
show ip traffic.....	854
show tcp statistics.....	856
Chapter 28: IPv6 Access Control Lists (IPv6 ACLs).....	859
IPv6 ACL Commands.....	860
cam-acl.....	860
cam-acl-egress.....	861
clear counters ipv6 access-group.....	862
deny.....	862
deny icmp.....	863
deny tcp.....	864
deny udp.....	866
ipv6 access-group.....	867
ipv6 control-plane egress-filter.....	868
ipv6 access-list.....	869
permit.....	870
permit icmp.....	870
permit tcp.....	872
permit udp.....	873
remark.....	875
resequence access-list.....	876
resequence prefix-list ipv6.....	876
seq.....	877
show cam-acl.....	878
show cam-acl-egress.....	880
show config.....	881
show ipv6 accounting access-list.....	882
show running-config acl.....	883
test cam-usage.....	883
IPv6 Route Map Commands.....	885

match ipv6 address.....	885
match ipv6 next-hop.....	885
match ipv6 route-source.....	886
route-map.....	886
set ipv6 next-hop.....	887
show config.....	887
show route-map.....	888
Chapter 29: IPv6 Basics.....	889
clear ipv6 fib.....	889
clear ipv6 route.....	890
clear ipv6 mld_host.....	891
maximum dynamic-routes-ipv6.....	891
ipv6 address autoconfig.....	892
ipv6 address.....	893
ipv6 address eui64.....	894
ipv6 control-plane icmp error-rate-limit.....	895
ipv6 flowlabel-zero.....	895
ipv6 host.....	896
ipv6 name-server.....	896
ipv6 nd dad attempts.....	897
ipv6 nd disable-reachable-timer.....	898
ipv6 nd prefix.....	898
ipv6 nd reachable-time.....	899
ipv6 route.....	899
ipv6 unicast-routing.....	901
show ipv6 cam stack-unit.....	902
show ipv6 control-plane icmp.....	903
show ipv6 fib stack-unit.....	904
show ipv6 flowlabel-zero.....	904
show ipv6 interface.....	905
show ipv6 management-route.....	908
show ipv6 mld_host.....	909
show ipv6 route.....	910
trust ipv6-diffserv.....	912
Chapter 30: IPv6 Border Gateway Protocol (IPv6 BGP).....	914
IPv6 BGP Commands.....	916
aggregate-address.....	916
bgp always-compare-med.....	917
bgp bestpath as-path ignore.....	918
bgp bestpath med confed.....	918
bgp bestpath med missing-as-best.....	919
bgp client-to-client reflection.....	919
bgp cluster-id.....	920
bgp confederation identifier.....	921
bgp confederation peers.....	921
bgp dampening.....	922
bgp default local-preference.....	923

bgp enforce-first-as.....	923
bgp fast-external-failover.....	924
bgp four-octet-as-support.....	924
bgp graceful-restart.....	925
bgp log-neighbor-changes.....	925
bgp non-deterministic-med.....	926
bgp recursive-bgp-next-hop.....	926
bgp regex-eval-optz-disable.....	927
bgp router-id.....	928
bgp soft-reconfig-backup.....	928
capture bgp-pdu max-buffer-size.....	929
capture bgp-pdu neighbor (ipv6).....	929
clear ip bgp * (asterisk).....	930
clear ip bgp as-number.....	930
clear ip bgp ipv6-address.....	931
clear ip bgp peer-group.....	932
clear ip bgp ipv6 dampening.....	932
clear ip bgp ipv6 flap-statistics.....	933
clear ip bgp ipv6 unicast soft.....	934
debug ip bgp.....	934
debug ip bgp events.....	935
debug ip bgp ipv6 dampening.....	936
debug ip bgp ipv6 unicast soft-reconfiguration.....	936
ipv6 prefix-list.....	937
neighbor soft-reconfiguration inbound.....	938
debug ip bgp keepalives.....	938
debug ip bgp notifications.....	939
debug ip bgp updates.....	940
default-metric.....	940
description.....	941
distance bgp.....	941
maximum-paths.....	942
neighbor activate.....	943
neighbor advertisement-interval.....	943
neighbor allowas-in.....	944
neighbor default-originate.....	944
neighbor description.....	945
neighbor distribute-list.....	946
neighbor ebgp-multihop.....	946
neighbor fall-over.....	947
neighbor filter-list.....	948
neighbor maximum-prefix.....	948
neighbor next-hop-self.....	949
neighbor peer-group (assigning peers).....	950
neighbor peer-group (creating group).....	951
neighbor peer-group passive.....	951
neighbor remote-as.....	952
neighbor remove-private-as.....	952
neighbor route-map.....	953
neighbor route-reflector-client.....	954

neighbor send-community.....	954
neighbor shutdown.....	955
neighbor soft-reconfiguration inbound.....	956
neighbor subnet.....	956
neighbor timers.....	957
neighbor update-source.....	958
neighbor weight.....	958
neighbor X:X:X::X password.....	959
network.....	959
network backdoor.....	960
redistribute.....	961
redistribute isis.....	962
redistribute ospf.....	962
router bgp.....	963
show capture bgp-pdu neighbor.....	963
show config.....	964
show ipv6 prefix-list.....	965
show ip bgp ipv6 unicast.....	965
show ip bgp ipv6 unicast cluster-list.....	966
show ip bgp ipv6 unicast community.....	966
show ip bgp ipv6 unicast community-list.....	967
show ip bgp ipv6 unicast dampened-paths.....	967
show ip bgp ipv6 unicast detail.....	968
show ip bgp ipv6 unicast extcommunity-list.....	968
show ip bgp ipv6 unicast filter-list.....	969
show ip bgp ipv6 unicast flap-statistics.....	969
show ip bgp ipv6 unicast inconsistent-as.....	970
show ip bgp ipv6 unicast neighbors.....	970
show ip bgp ipv6 unicast peer-group.....	973
show ip bgp ipv6 unicast summary.....	974
show ip bgp next-hop.....	975
show ip bgp paths.....	975
show ip bgp paths as-path.....	976
show ip bgp paths community.....	976
show ip bgp paths extcommunity.....	977
show ip bgp regexp.....	977
timers bgp.....	978
IPv6 MBGP Commands.....	979
address family.....	979
aggregate-address.....	979
bgp dampening.....	980
clear ip bgp ipv6 unicast.....	981
clear ip bgp ipv6 unicast dampening.....	982
clear ip bgp ipv6 flap-statistics.....	982
debug ip bgp ipv6 unicast dampening.....	983
debug ip bgp ipv6 unicast peer-group updates.....	983
debug ip bgp ipv6 unicast updates.....	984
distance bgp.....	984
neighbor activate.....	985
neighbor advertisement-interval.....	985

neighbor default-originate.....	986
neighbor distribute-list.....	987
neighbor filter-list.....	987
neighbor maximum-prefix.....	988
neighbor next-hop-self.....	989
neighbor remove-private-as.....	989
neighbor route-map.....	990
neighbor route-reflector-client.....	990
network.....	991
redistribute.....	992
show ipv6 mbgproutes.....	992
show ip bgp ipv6 unicast.....	993
show ip bgp ipv6 unicast cluster-list.....	994
show ip bgp ipv6 unicast community.....	994
show ip bgp ipv6 unicast community-list.....	995
show ip bgp ipv6 unicast dampened-paths.....	996
show ip bgp ipv6 unicast detail.....	996
show ip bgp ipv6 unicast filter-list.....	997
show ip bgp ipv6 unicast flap-statistics.....	997
show ip bgp ipv6 unicast inconsistent-as.....	998
show ip bgp ipv6 unicast neighbors.....	998
show ip bgp ipv6 unicast peer-group.....	1001
show ip bgp ipv6 unicast summary.....	1002

Chapter 31: iSCSI Optimization..... 1004

advertise dcbx-app-tlv.....	1004
iscsi aging time.....	1005
iscsi cos.....	1005
iscsi enable.....	1006
iscsi priority-bits.....	1006
iscsi profile-compellant.....	1007
iscsi target port.....	1007
show iscsi.....	1008
show iscsi session.....	1009
show iscsi session detailed.....	1010
show run iscsi.....	1010

Chapter 32: Intermediate System to Intermediate System (IS-IS)..... 1012

adjacency-check.....	1013
advertise.....	1014
area-password.....	1015
clear config.....	1016
clear isis.....	1016
clns host.....	1017
debug isis.....	1018
debug isis adj-packets.....	1019
debug isis local-updates.....	1020
debug isis snp-packets.....	1021
debug isis spf-triggers.....	1022

debug isis update-packets.....	1022
default-information originate.....	1023
description.....	1024
distance.....	1025
distribute-list in.....	1026
distribute-list out.....	1027
distribute-list redistributed-override.....	1028
domain-password.....	1029
graceful-restart ietf.....	1029
graceful-restart interval.....	1030
graceful-restart t1.....	1031
graceful-restart t2.....	1032
graceful-restart t3.....	1032
graceful-restart restart-wait.....	1033
hello padding.....	1034
hostname dynamic.....	1035
ignore-lsp-errors.....	1036
ip router isis.....	1036
ipv6 router isis.....	1037
isis circuit-type.....	1038
isis csnp-interval.....	1039
isis hello-interval.....	1040
isis hello-multiplier.....	1041
isis hello padding.....	1041
isis ipv6 metric.....	1042
isis metric.....	1043
isis network point-to-point.....	1044
isis password.....	1045
isis priority.....	1046
is-type.....	1046
log-adjacency-changes.....	1047
lsp-gen-interval.....	1048
lsp-mtu.....	1049
lsp-refresh-interval.....	1050
max-area-addresses.....	1051
max-lsp-lifetime.....	1051
maximum-paths.....	1052
metric-style.....	1053
multi-topology.....	1054
net.....	1055
passive-interface.....	1055
redistribute.....	1056
redistribute bgp.....	1058
redistribute ospf.....	1059
router isis.....	1060
set-overload-bit.....	1061
show config.....	1062
show isis database.....	1063
show isis graceful-restart detail.....	1066
show isis hostname.....	1067

show isis interface.....	1067
show isis neighbors.....	1069
show isis protocol.....	1070
show isis traffic.....	1071
spf-interval.....	1073
Chapter 33: Link Aggregation Control Protocol (LACP).....	1075
clear lacp counters.....	1075
debug lacp.....	1076
lacp long-timeout.....	1077
lacp port-priority.....	1078
lacp system-priority.....	1078
port-channel mode.....	1079
port-channel-protocol lacp.....	1080
show lacp.....	1081
Chapter 34: Layer 2.....	1083
MAC Addressing Commands.....	1084
clear mac-address-table	1084
mac-address-table aging-time.....	1084
mac-address-table disable-learning.....	1085
mac-address-table static.....	1086
mac-address-table station-move threshold.....	1087
mac-address-table station-move refresh-arp.....	1087
mac learning-limit.....	1088
mac learning-limit learn-limit-violation.....	1090
mac learning-limit mac-address-sticky.....	1090
mac learning-limit station-move-violation.....	1091
mac learning-limit reset.....	1092
show cam mac stack-unit.....	1093
show mac-address-table.....	1094
show mac-address-table aging-time.....	1096
show mac accounting access-list.....	1097
show mac learning-limit.....	1098
Virtual LAN (VLAN) Commands.....	1099
description.....	1099
default vlan-id.....	1100
default-vlan disable.....	1101
name.....	1101
show config.....	1102
show vlan.....	1103
tagged.....	1106
track ip.....	1107
untagged.....	1108
Far-End Failure Detection (FEFD).....	1109
debug fefd.....	1109
fefd.....	1110
fefd disable.....	1111
fefd-global.....	1112

fefd-global interval.....	1113
fefd interval.....	1114
fefd mode.....	1114
fefd reset.....	1115
show fefd.....	1116
Chapter 35: Link Layer Discovery Protocol (LLDP).....	1118
LLPD Commands.....	1118
advertise dot1-tlv.....	1118
advertise dot3-tlv.....	1119
advertise interface-port-desc.....	1120
advertise management-tlv.....	1120
advertise management-tlv (Interface).....	1121
clear lldp counters.....	1122
clear lldp neighbors.....	1123
debug lldp interface.....	1123
disable.....	1126
hello.....	1126
management-interface.....	1127
mode.....	1128
multiplier.....	1128
protocol lldp (Configuration).....	1129
protocol lldp (Interface).....	1130
show lldp neighbors.....	1131
show lldp statistics.....	1139
show management-interface.....	1140
show running-config lldp.....	1140
snmp-notification-interval.....	1141
LLDP-MED Commands.....	1142
advertise med guest-voice.....	1142
advertise med guest-voice-signaling.....	1143
advertise med location-identification.....	1144
advertise med power-via-mdi.....	1145
advertise med softphone-voice.....	1146
advertise med streaming-video.....	1147
advertise med video-conferencing.....	1148
advertise med video-signaling.....	1149
advertise med voice.....	1150
advertise med voice-signaling.....	1150
Chapter 36: Microsoft Network Load Balancing.....	1152
arp (for Multicast MAC Address).....	1152
mac-address-table static (for Multicast MAC Address).....	1153
ip vlan-flooding.....	1154
Chapter 37: Multicast Source Discovery Protocol (MSDP).....	1155
clear ip msdp peer.....	1155
clear ip msdp sa-cache.....	1156
clear ip msdp statistic.....	1157

debug ip msdp.....	1158
ip msdp cache-rejected-sa.....	1158
ip msdp default-peer.....	1159
ip msdp log-adjacency-changes.....	1160
ip msdp mesh-group.....	1161
ip msdp originator-id.....	1161
ip msdp peer.....	1162
ip msdp redistribute.....	1164
ip msdp sa-filter.....	1164
ip msdp sa-limit.....	1165
ip msdp shutdown.....	1166
ip multicast-msdp.....	1167
show ip msdp.....	1167
show ip msdp sa-cache rejected-sa.....	1169
Chapter 38: Multiple Spanning Tree Protocol (MSTP).....	1170
debug spanning-tree mstp.....	1170
description.....	1171
disable.....	1172
forward-delay.....	1173
hello-time.....	1173
max-age.....	1174
max-hops.....	1175
msti.....	1176
name.....	1177
protocol spanning-tree mstp.....	1178
revision.....	1179
show config.....	1179
show spanning-tree mst configuration.....	1180
show spanning-tree msti.....	1181
spanning-tree.....	1183
spanning-tree msti.....	1184
spanning-tree mstp.....	1185
tc-flush-standard.....	1186
Chapter 39: Multicast.....	1188
IPv4 Multicast Commands.....	1188
clear ip mroute.....	1188
ip mroute.....	1189
ip multicast-limit.....	1190
ip multicast-routing.....	1191
mtrace.....	1192
show ip mroute.....	1193
show ip rpf.....	1196
IPv6 Multicast Commands.....	1197
ip multicast-limit.....	1197
Chapter 40: Neighbor Discovery Protocol (NDP).....	1198
clear ipv6 neighbors.....	1198

ipv6 nd mtu.....	1199
ipv6 neighbor.....	1200
show ipv6 neighbors.....	1201
IPv6 Router Advertisement (RA) Guard.....	1202
debug ipv6 nd ra-guard.....	1203
device-role.....	1203
hop-limit.....	1204
ipv6 nd ra-guard attach-policy.....	1205
ipv6 nd ra-guard enable.....	1205
ipv6 nd ra-guard policy.....	1206
managed-config-flag.....	1207
match ra.....	1207
mtu.....	1208
other-config-flag.....	1209
reachable-time.....	1209
retrans-time.....	1210
router-lifetime.....	1211
router-preference maximum.....	1211
show config.....	1212
show ipv6 nd ra-guard policy.....	1213
trusted-port.....	1214
Chapter 41: Object Tracking.....	1216
IPv4 Object Tracking Commands.....	1216
debug track.....	1216
delay.....	1217
description.....	1218
show running-config track.....	1218
show track.....	1220
threshold metric.....	1221
track interface ip routing.....	1223
track interface line-protocol.....	1223
track ip route metric threshold.....	1224
track ip host reachability.....	1225
track ip route reachability.....	1226
track resolution ip route.....	1227
IPv6 Object Tracking Commands.....	1228
show track ipv6 route.....	1228
track interface ipv6 routing.....	1230
track ipv6 route metric threshold.....	1231
track ipv6 route reachability.....	1232
track resolution ipv6 route.....	1233
Chapter 42: NPIV Proxy Gateway.....	1234
dcb-map.....	1234
description.....	1235
fabric.....	1235
fabric-id vlan.....	1236
fc-map.....	1236

fcf-priority.....	1237
feature fc.....	1238
fka-adv-period.....	1238
interface vlan (NPIV proxy gateway).....	1239
keepalive.....	1239
priority-pgid.....	1240
priority-group bandwidth pfc.....	1241
show fcoe-map.....	1242
show npiv devices.....	1243
show fc switch.....	1245
show qos dcb-map.....	1246

Chapter 43: Open Shortest Path First (OSPFv2 and OSPFv3)..... 1248

area default-cost.....	1249
area nssa.....	1250
area range.....	1251
area stub.....	1252
area virtual-link.....	1253
auto-cost.....	1254
clear ip ospf.....	1255
clear ip ospf statistics.....	1256
debug ip ospf.....	1257
default-information originate.....	1259
default-metric.....	1260
description.....	1260
distance.....	1261
distance ospf.....	1262
distribute-list in.....	1263
distribute-list out.....	1264
fast-convergence.....	1265
flood-2328.....	1266
graceful-restart grace-period.....	1267
graceful-restart helper-reject.....	1268
graceful-restart mode.....	1269
graceful-restart role.....	1270
ip ospf auth-change-wait-time.....	1270
ip ospf authentication-key.....	1271
ip ospf cost.....	1272
ip ospf dead-interval.....	1273
ip ospf hello-interval.....	1274
ip ospf message-digest-key.....	1275
ip ospf mtu-ignore.....	1276
ip ospf network.....	1276
ip ospf priority.....	1277
ip ospf retransmit-interval.....	1278
ip ospf transmit-delay.....	1279
log-adjacency-changes.....	1280
maximum-paths.....	1280
mib-binding.....	1281
network area.....	1282

passive-interface.....	1283
debug ip ospf.....	1285
redistribute bgp.....	1286
redistribute isis.....	1287
router-id.....	1288
router ospf.....	1289
show config.....	1290
show ip ospf.....	1291
show ip ospf asbr.....	1293
show ip ospf database.....	1294
show ip ospf database asbr-summary.....	1295
show ip ospf database external.....	1297
show ip ospf database network.....	1299
show ip ospf database nssa-external.....	1301
show ip ospf database opaque-area.....	1302
show ip ospf database opaque-as.....	1304
show ip ospf database opaque-link.....	1305
show ip ospf database router.....	1306
show ip ospf database summary.....	1309
show ip ospf interface.....	1311
show ip ospf neighbor.....	1313
show ip ospf routes.....	1314
show ip ospf statistics.....	1315
show ip ospf timers rate-limit.....	1318
show ip ospf topology.....	1319
show ip ospf virtual-links.....	1320
summary-address.....	1321
timers spf.....	1322
timers throttle lsa all.....	1323
timers throttle lsa arrival.....	1324
OSPFv3 Commands.....	1325
area authentication.....	1325
area encryption.....	1326
auto-cost.....	1328
clear ipv6 ospf process.....	1329
debug ipv6 ospf bfd.....	1329
debug ipv6 ospf events.....	1331
debug ipv6 ospf packet.....	1332
debug ipv6 ospf spf.....	1333
default-information originate.....	1334
graceful-restart grace-period.....	1335
graceful-restart mode.....	1336
ipv6 ospf area.....	1337
ipv6 ospf authentication.....	1338
ipv6 ospf bfd all-neighbors.....	1339
ipv6 ospf cost.....	1340
ipv6 ospf dead-interval.....	1341
ipv6 ospf encryption.....	1341
ipv6 ospf graceful-restart helper-reject.....	1343
ipv6 ospf hello-interval.....	1343

ipv6 ospf priority.....	1344
ipv6 router ospf.....	1345
maximum-paths.....	1346
passive-interface.....	1346
redistribute.....	1347
router-id.....	1349
show crypto ipsec policy.....	1349
show crypto ipsec sa ipv6.....	1351
show ipv6 ospf database.....	1353
show ipv6 ospf interface.....	1355
show ipv6 ospf neighbor.....	1356
timers spf.....	1357
Chapter 44: Policy-based Routing (PBR).....	1359
description.....	1359
ip redirect-group.....	1360
ip redirect-list.....	1361
permit.....	1362
redirect.....	1363
seq.....	1364
show cam pbr.....	1366
show ip redirect-list.....	1367
Chapter 45: PIM-Sparse Mode (PIM-SM).....	1369
IPv4 PIM-Sparse Mode Commands.....	1369
clear ip pim snooping tib.....	1370
clear ip pim tib.....	1370
clear ip pim rp-mapping.....	1371
debug ip pim.....	1372
ip pim bsr-border.....	1373
ip pim bsr-candidate.....	1374
ip pim dr-priority.....	1375
ip pim graceful-restart.....	1376
ip pim join-filter.....	1376
ip pim ingress-interface-map.....	1377
ip pim neighbor-filter.....	1378
ip pim query-interval.....	1379
ip pim register-filter.....	1380
ip pim rp-address.....	1381
ip pim rp-candidate.....	1382
ip pim snooping.....	1383
ip pim sparse-mode.....	1383
ip pim sparse-mode sg-expiry-timer.....	1384
ip pim ssm-range.....	1385
ip pim spt-threshold.....	1386
no ip pim snooping dr-flood.....	1387
show ip pim bsr-router.....	1388
show ip pim interface.....	1389
show ip pim neighbor.....	1390

show ip pim rp.....	1391
show ip pim snooping interface.....	1392
show ip pim snooping neighbor.....	1393
show ip pim snooping tib.....	1394
show ip pim ssm-range.....	1396
show ip pim summary.....	1397
show ip pim tib.....	1398
show running-config pim.....	1400
Chapter 46: PIM-Source Specific Mode (PIM-SSM).....	1401
IPv4 PIM Commands.....	1401
IPv4 PIM-Source Specific Mode Commands.....	1401
ip pim ssm-range.....	1401
show ip pim ssm-range.....	1402
IPv6 PIM-Source Specific Mode Commands.....	1403
Chapter 47: Port Monitoring.....	1404
description.....	1404
erpm.....	1405
monitor session.....	1406
rate-limit.....	1407
show config.....	1407
show monitor session.....	1408
show running-config monitor session.....	1410
source (port monitoring).....	1411
Chapter 48: Per-VLAN Spanning Tree Plus (PVST+).....	1413
description.....	1413
disable.....	1414
extend system-id.....	1415
protocol spanning-tree pvst.....	1416
show spanning-tree pvst.....	1417
spanning-tree pvst.....	1420
spanning-tree pvst err-disable.....	1422
tc-flush-standard.....	1422
vlan bridge-priority.....	1423
vlan forward-delay.....	1424
vlan hello-time.....	1425
vlan max-age.....	1426
Chapter 49: Quality of Service (QoS).....	1428
Global Configuration Commands.....	1429
qos-rate-adjust.....	1429
Per-Port QoS Commands.....	1430
dot1p-priority.....	1430
rate police.....	1430
rate-shape.....	1431
service-class dot1p-mapping.....	1432
service-class dynamic dot1p.....	1433

service-class bandwidth-weight.....	1434
strict-priority unicast.....	1434
Policy-Based QoS Commands.....	1435
bandwidth-percentage.....	1435
class-map.....	1436
clear qos statistics.....	1437
description.....	1438
match ip access-group.....	1439
match ip dscp.....	1440
match ip precedence.....	1442
match ip vlan.....	1443
match ip vrf.....	1444
match mac access-group.....	1444
match mac dot1p.....	1445
match mac vlan.....	1446
policy-aggregate.....	1447
policy-map-input.....	1448
policy-map-output.....	1449
qos-policy-input.....	1449
qos-policy-output.....	1450
queue egress.....	1451
queue ingress.....	1452
rate-police.....	1453
rate-shape.....	1454
service-policy input.....	1455
service-policy output.....	1456
service-queue.....	1457
set.....	1458
show qos class-map.....	1459
show qos dot1p-queue-mapping.....	1460
show qos policy-map.....	1461
show qos policy-map-input.....	1462
show qos policy-map-output.....	1463
show qos qos-policy-input.....	1464
show qos qos-policy-output.....	1465
show qos statistics.....	1466
show qos wred-profile.....	1467
test cam-usage.....	1468
threshold.....	1470
trust.....	1471
wred.....	1472
wred ecn.....	1473
wred-profile.....	1474
Chapter 50: Private VLAN (PVLAN).....	1476
ip local-proxy-arp.....	1477
private-vlan mode.....	1477
private-vlan mapping secondary-vlan.....	1478
show interfaces private-vlan.....	1479
show vlan private-vlan.....	1480

show vlan private-vlan mapping.....	1483
switchport mode private-vlan.....	1483
Chapter 51: Routing Information Protocol (RIP).....	1485
auto-summary.....	1485
clear ip rip.....	1486
debug ip rip.....	1487
default-information originate.....	1488
default-metric.....	1489
description.....	1490
distance.....	1490
distribute-list in.....	1491
distribute-list out.....	1492
ip poison-reverse.....	1493
ip rip receive version.....	1494
ip rip send version.....	1495
ip split-horizon.....	1496
maximum-paths.....	1497
neighbor.....	1497
network.....	1498
offset-list.....	1499
output-delay.....	1500
passive-interface.....	1501
redistribute.....	1502
redistribute isis.....	1503
redistribute ospf.....	1504
router rip.....	1505
show config.....	1506
show ip rip database.....	1506
show running-config rip.....	1508
timers basic.....	1509
version.....	1510
Chapter 52: Remote Monitoring (RMON).....	1511
rmon alarm.....	1511
rmon collection history.....	1513
rmon collection statistics.....	1514
rmon event.....	1514
rmon hc-alarm.....	1515
show rmon.....	1517
show rmon alarms.....	1517
show rmon events.....	1519
show rmon hc-alarm.....	1520
show rmon history.....	1522
show rmon log.....	1523
show rmon statistics.....	1524
Chapter 53: Rapid Spanning Tree Protocol (RSTP).....	1526
bridge-priority.....	1526

debug spanning-tree rstp.....	1527
description.....	1528
disable.....	1529
forward-delay.....	1529
hello-time.....	1530
max-age.....	1531
protocol spanning-tree rstp.....	1532
show config.....	1533
show spanning-tree rstp.....	1533
spanning-tree rstp.....	1535
tc-flush-standard.....	1537

Chapter 54: Software-Defined Networking (SDN).....1539

Chapter 55: Security.....1540

AAA Accounting Commands.....	1540
aaa accounting.....	1540
accounting.....	1542
aaa accounting suppress.....	1543
aaa radius group.....	1543
show accounting.....	1544
Authorization and Privilege Commands.....	1545
authorization.....	1545
aaa authorization commands.....	1546
aaa authorization config-commands.....	1547
aaa authorization exec.....	1548
privilege level (CONFIGURATION mode).....	1549
privilege level (LINE mode).....	1550
Obscure Password Commands.....	1551
service obscure-passwords.....	1551
Authentication and Password Commands.....	1552
aaa authentication enable.....	1552
aaa authentication login.....	1553
aaa reauthenticate enable.....	1554
access-class.....	1555
enable password.....	1556
enable sha256-password.....	1557
enable restricted.....	1558
enable secret.....	1559
login authentication.....	1560
password.....	1561
password-attributes.....	1562
secure-cli enable.....	1563
service password-encryption.....	1564
show privilege.....	1565
show users.....	1565
timeout login response.....	1567
username.....	1568
RADIUS Commands.....	1569

aaa radius auth-method.....	1569
client.....	1569
client-key.....	1570
coa-bounce-port.....	1570
coa-disable-port.....	1571
coa-reauthenticate.....	1571
debug radius.....	1572
da-rsp-timeout.....	1572
disconnect-user.....	1573
dynamic-auth-enable.....	1573
ip radius source-interface.....	1573
port.....	1574
radius dynamic-auth.....	1575
radius-server deadtime.....	1575
radius-server group.....	1576
radius-server host.....	1577
radius-server vrf.....	1579
radius-server key.....	1580
radius-server retransmit.....	1581
radius-server timeout.....	1581
rate-limit.....	1582
replay-protection-window.....	1583
terminate-session.....	1583
TACACS+ Commands.....	1584
tacacs-server group.....	1584
debug tacacs+.....	1584
ip tacacs source-interface.....	1585
tacacs-server group.....	1586
tacacs-server host.....	1587
tacacs-server key.....	1588
tacacs-server vrf.....	1589
Port Authentication (802.1X) Commands.....	1590
dot1x authentication (Configuration).....	1591
dot1x authentication (Interface).....	1591
dot1x auth-fail-vlan.....	1592
dot1x auth-server.....	1593
dot1x guest-vlan.....	1594
dot1x mac-auth-bypass.....	1595
dot1x max-eap-req.....	1595
dot1x port-control.....	1596
dot1x quiet-period.....	1597
dot1x reauthentication.....	1597
dot1x reauth-max.....	1598
dot1x server-timeout.....	1599
dot1x supplicant-timeout.....	1600
dot1x tx-period.....	1600
show dot1x interface.....	1601
SSH and SCP Commands.....	1603
crypto key generate.....	1603
crypto key zeroize rsa.....	1604

debug ip ssh.....	1604
ip scp topdir.....	1605
ip ssh authentication-retries.....	1606
ip ssh challenge-response-authentication.....	1607
ip ssh cipher.....	1607
ip ssh connection-rate-limit.....	1608
ip ssh hostbased-authentication.....	1609
ip ssh key-size.....	1610
ip ssh mac.....	1610
ip ssh password-authentication.....	1611
ip ssh pub-key-file.....	1612
ip ssh rekey	1613
ip ssh rhostsfile.....	1614
ip ssh rsa-authentication (Config).....	1614
ip ssh server.....	1615
ip ssh server vrf.....	1618
ip ssh source-interface.....	1619
ip ssh vrf.....	1620
show crypto.....	1620
show ip ssh.....	1621
show ip ssh client-pub-keys.....	1622
show ip ssh rsa-authentication.....	1623
ssh.....	1624
Secure DHCP Commands.....	1626
clear ip dhcp snooping.....	1626
ip dhcp relay.....	1627
ip dhcp snooping.....	1628
ip dhcp snooping binding.....	1629
ip dhcp snooping database.....	1630
ip dhcp snooping database renew.....	1630
ip dhcp snooping trust.....	1631
ip dhcp source-address-validation.....	1631
ip dhcp snooping vlan.....	1632
show ip dhcp snooping.....	1633
Role-Based Access Control Commands.....	1633
aaa authorization role-only.....	1634
enable.....	1634
role.....	1635
show role.....	1636
show userroles.....	1637
userrole.....	1638
ICMP Vulnerabilities.....	1639
drop icmp.....	1641
System Security Commands.....	1641
generate hash.....	1641
root-access password.....	1642
verified boot.....	1642
verified boot hash.....	1643
verified startup-config.....	1643

Chapter 56: Service Provider Bridging.....	1645
debug protocol-tunnel.....	1645
protocol-tunnel.....	1646
protocol-tunnel destination-mac.....	1647
protocol-tunnel enable.....	1648
protocol-tunnel rate-limit.....	1649
show protocol-tunnel.....	1650
Chapter 57: sFlow.....	1651
sflow collector.....	1652
sflow enable (Global).....	1653
sflow ingress-enable.....	1654
sflow extended-switch enable.....	1655
sflow max-header-size extended.....	1655
sflow polling-interval (Global).....	1656
sflow polling-interval (Interface).....	1657
sflow sample-rate (Global).....	1658
sflow sample-rate (Interface).....	1659
show sflow.....	1660
show sflow stack-unit.....	1661
Chapter 58: Simple Network Management Protocol (SNMP) and Syslog.....	1662
SNMP Commands.....	1663
show snmp.....	1663
show snmp engineID.....	1664
show snmp group.....	1665
show snmp user.....	1666
snmp ifmib ifalias long.....	1667
snmp-server community.....	1668
snmp-server contact.....	1669
snmp-server enable traps.....	1670
snmp-server engineID.....	1671
snmp-server group.....	1673
snmp-server host.....	1674
snmp-server location.....	1677
snmp-server packetsize.....	1677
snmp-server trap-source.....	1678
snmp-server user.....	1679
snmp-server user (for AES128-CFB Encryption).....	1682
snmp-server view.....	1683
snmp-server vrf.....	1684
snmp trap link-status.....	1684
Syslog Commands.....	1685
clear logging.....	1685
default logging buffered.....	1686
default logging console.....	1687
default logging monitor.....	1687
default logging trap.....	1688

logging.....	1689
logging buffered.....	1690
logging console.....	1691
logging facility.....	1692
logging history.....	1693
logging history size.....	1694
logging monitor.....	1695
logging on.....	1696
logging source-interface.....	1697
logging synchronous.....	1698
logging trap.....	1699
show logging.....	1700
show logging driverlog stack-unit.....	1702
terminal monitor.....	1702
Chapter 59: Spanning Tree Protocol (STP).....	1704
bridge-priority.....	1704
debug spanning-tree.....	1705
description.....	1706
disable.....	1707
forward-delay.....	1707
hello-time.....	1708
max-age.....	1709
protocol spanning-tree.....	1710
show config.....	1711
show spanning-tree 0.....	1711
spanning-tree 0.....	1714
Chapter 60: Stacking Commands.....	1716
redundancy disable-auto-reboot stack-unit.....	1716
redundancy force-failover stack-unit.....	1717
reset stack-unit.....	1717
show redundancy.....	1718
show system stack-ports.....	1719
show system stack-unit stack-group.....	1719
stack-unit location-led.....	1720
stack-unit priority.....	1720
stack-unit renumber.....	1721
stack-unit stack-group.....	1722
upgrade boot (stack unit).....	1722
upgrade system (stack unit).....	1724
Chapter 61: Storm Control.....	1726
show storm-control broadcast.....	1726
show storm-control multicast.....	1727
show storm-control unknown-unicast.....	1728
storm-control broadcast (Configuration).....	1729
storm-control broadcast (Interface).....	1730
storm-control PFC/LLFC.....	1731

storm-control multicast (Configuration).....	1731
storm-control multicast (Interface).....	1732
storm-control unknown-unicast (Configuration).....	1733
storm-control unknown-unicast (Interface).....	1734
Chapter 62: SupportAssist.....	1736
eula-consent.....	1736
support-assist.....	1738
support-assist activate.....	1738
support-assist activity.....	1739
SupportAssist Commands.....	1739
activity.....	1739
contact-company.....	1740
contact-person.....	1740
enable.....	1741
server.....	1742
SupportAssist Activity Commands.....	1742
action-manifest get.....	1742
action-manifest install.....	1743
action-manifest remove.....	1744
action-manifest show.....	1744
enable.....	1745
SupportAssist Company Commands.....	1745
address.....	1745
street-address.....	1746
territory.....	1747
SupportAssist Person Commands.....	1747
email-address.....	1747
phone.....	1748
preferred-method.....	1749
time-zone.....	1749
SupportAssist Server Commands.....	1750
proxy-ip-address.....	1750
enable.....	1751
url.....	1751
show eula-consent.....	1752
show running-config.....	1753
show support-assist status.....	1754
Chapter 63: System Time and Date.....	1755
clock summer-time date.....	1755
clock summer-time recurring.....	1756
clock timezone.....	1758
debug ntp.....	1759
ntp authenticate.....	1760
ntp authentication-key.....	1760
ntp broadcast client.....	1761
ntp disable.....	1762
ntp multicast client.....	1763

ntp master <stratum>.....	1763
ntp offset-threshold.....	1764
ntp server.....	1765
ntp source.....	1766
ntp trusted-key.....	1766
show clock.....	1767
show ntp associations.....	1768
show ntp vrf associations.....	1769
show ntp status.....	1770
Chapter 64: u-Boot.....	1772
printenv.....	1772
reset.....	1773
save.....	1773
syntax help.....	1774
boot selection.....	1775
Chapter 65: Tunneling	1776
ip unnumbered.....	1776
ipv6 unnumbered.....	1777
tunnel allow-remote.....	1778
tunnel destination.....	1778
tunnel dscp.....	1779
tunnel flow-label.....	1780
tunnel hop-limit.....	1781
tunnel keepalive.....	1781
tunnel-mode.....	1782
tunnel source.....	1783
Chapter 66: Uplink Failure Detection (UFD).....	1785
clear ufd-disable.....	1785
debug uplink-state-group.....	1786
description.....	1787
downstream.....	1787
downstream auto-recover.....	1788
downstream disable links.....	1789
enable.....	1790
show running-config uplink-state-group.....	1790
show uplink-state-group.....	1791
uplink-state-group.....	1793
upstream.....	1794
Chapter 67: VLAN Stacking.....	1796
dei enable.....	1796
dei honor.....	1797
dei mark.....	1798
member.....	1799
show interface dei-honor.....	1799
show interface dei-mark.....	1800

stack-unit stack-group.....	1801
vlan-stack access.....	1801
vlan-stack compatible.....	1802
vlan-stack dot1p-mapping.....	1803
vlan-stack protocol-type.....	1804
vlan-stack trunk.....	1805
Chapter 68: Virtual Routing and Forwarding (VRF).....	1808
ip vrf.....	1808
ip http vrf.....	1809
description.....	1809
ip vrf forwarding.....	1810
ip route-export.....	1811
ip route-import.....	1812
ipv6 route-export.....	1813
ipv6 route-import.....	1814
match source-protocol.....	1815
redistribute.....	1815
interface management.....	1816
maximum dynamic-routes.....	1817
show ip vrf.....	1817
show run vrf.....	1818
Chapter 69: VLT Proxy Gateway.....	1820
proxy-gateway lldp.....	1820
proxy-gateway static.....	1821
remote-mac-address exclude-vlan.....	1821
peer-domain-link port-channel exclude-vlan.....	1822
proxy-gateway peer-timeout	1823
vlt-peer-mac transmit.....	1824
show vlt-proxy-gateway.....	1824
Chapter 70: Virtual Link Trunking (VLT).....	1826
back-up destination.....	1827
clear vlt statistics.....	1827
delay-restore.....	1828
delay-restore abort-threshold.....	1829
lacp ungroup member-independent.....	1830
multicast peer-routing timeout.....	1831
peer-link port-channel.....	1832
peer-routing.....	1833
peer-routing-timeout.....	1833
primary-priority.....	1834
show vlt brief.....	1835
show vlt backup-link.....	1836
show vlt counters.....	1836
show vlt detail.....	1838
show vlt inconsistency.....	1839
show vlt role.....	1839

show vlt statistics.....	1840
show vlt mismatch.....	1842
show vlt statistics igmp-snoop.....	1843
system-mac.....	1844
unit-id.....	1845
vlt domain.....	1845
vlt-peer-lag port-channel.....	1846
Chapter 71: Virtual Router Redundancy Protocol (VRRP).....	1848
IPv4 VRRP Commands.....	1848
advertise-interval.....	1848
authentication-type.....	1849
clear counters vrrp.....	1850
debug vrrp.....	1851
description.....	1852
disable.....	1853
hold-time.....	1854
preempt.....	1855
priority.....	1855
show config.....	1856
show vrrp.....	1857
track.....	1860
virtual-address.....	1861
vrrp delay minimum.....	1862
vrrp delay reload.....	1862
vrrp-group.....	1863
IPv6 VRRP Commands.....	1864
clear counters vrrp ipv6.....	1864
debug vrrp ipv6.....	1865
show vrrp ipv6.....	1866
vrrp-ipv6-group.....	1868
Chapter 72: Debugging and Diagnostics.....	1870
Diagnostics and Monitoring Commands.....	1870
logging coredump stack-unit.....	1870
Offline Diagnostic Commands.....	1871
diag stack-unit.....	1871
offline stack-unit.....	1872
online stack-unit.....	1873
Buffer Tuning Commands.....	1874
buffer-profile (Configuration).....	1874
show buffer-profile stack-unit.....	1875
Hardware Commands.....	1876
clear hardware stack-unit.....	1876
clear hardware system-flow.....	1877
clear hardware vlan-counters.....	1877
hardware watchdog.....	1878
show hardware mac.....	1879
show hardware ip.....	1879

show hardware stack-unit.....	1880
show hardware buffer interface.....	1888
show hardware buffer-stats-snapshot.....	1889
show hardware counters interface	1892
show hardware drops.....	1893
show hardware stack-unit buffer-stats-snapshot (Total Buffer Information).....	1895
show hardware system-flow.....	1896
show hardware vlan-counters.....	1898
Chapter 73: X.509v3.....	1900
crypto ca-cert delete.....	1900
crypto ca-cert install.....	1901
crypto cert delete.....	1901
crypto cert generate.....	1902
crypto cert install.....	1903
crypto x509 oosp.....	1905
crypto x509 revocation.....	1905
debug crypto.....	1906
logging secure.....	1906
crypto x509 ca-keyid.....	1907
ocsp-server.....	1908
ocsp-server prefer.....	1909
show crypto ca-cert.....	1909
show crypto cert.....	1910
Appendix A: ICMP Message Types.....	1911
Appendix B: SNMP Traps.....	1913

About this Guide

This guide provides information about the Dell EMC Networking operating system (OS) command line interface (CLI). This book also includes information about the protocols and features supported in Dell EMC Networking OS.

References

For more information about your system, go to the [Dell EMC Networking Support page](#) and refer to the following documents:

- *Dell EMC Networking OS Configuration Guide*
- *Dell EMC Networking OS Installation Guide*
- *Dell EMC Networking OS Quick Start Guide*
- *Dell EMC Networking OS Release Notes*

Topics:

- [Objectives](#)
- [Audience](#)
- [Conventions](#)
- [Information Icons](#)

Objectives

This information is intended as a reference guide for the Dell EMC Networking OS CLI commands, with detailed syntax statements, along with usage information and sample output.

 **NOTE:** For more information about when to use the CLI commands, see the *Dell EMC Networking OS Configuration Guide* for your specific system.

Audience

The *Dell EMC Networking OS CLI Guide* is intended for system administrators with an understanding of Layer 2 and Layer 3 networking technologies, who are responsible for configuring or maintaining networks.

Conventions

This guide uses the following conventions to describe command syntax:

Keyword	Keywords are in Courier font and must be entered in the CLI as listed.
<i>parameter</i>	Parameters are in italics and require a number or word to be entered in the CLI.
{X}	Keywords and parameters within braces must be entered in the CLI.
[X]	Keywords and parameters within brackets are optional.
x y	Keywords and parameters separated by a bar require you to choose one option.
x y	Keywords and parameters separated by a double bar allow you to choose any or all of the options.

Information Icons

This guide uses the following information symbols:

 **NOTE:** The Note icon signals important operational information.

 **CAUTION:** The Caution icon signals information about situations that could result in equipment damage or loss of data.

 **NOTE:** The Warning icon signals information about hardware handling that could result in injury.

CLI Basics

This chapter describes the command line interface (CLI) structure and command modes. The Dell EMC Networking operating software commands are in a text-based interface that allows you to use the launch commands, change command modes, and configure interfaces and protocols.

Topics:

- [Accessing the Command Line](#)
- [Multiple Configuration Users](#)
- [Navigating the CLI](#)
- [Obtaining Help](#)
- [Using the no Command](#)
- [Filtering show Commands](#)
- [Enabling Software Features on Devices Using a Command Option](#)
- [Command Modes](#)
- [Determining Chassis Mode](#)

Accessing the Command Line

Access the CLI through a serial console port or a Telnet session.

When the system successfully boots, enter the command line in EXEC mode.

NOTE: You must have a password configured on a virtual terminal line before you can Telnet into the system. Therefore, you must use a console connection when connecting to the system for the first time.

Example

```
telnet 172.31.1.53
Trying 172.31.1.53...
Connected to 172.31.1.53.
Escape character is '^]'.
Login: username
Password: DellEMC>
```

After you log in to the switch, the prompt provides you with the current command-level information. For example:

Prompt	CLI Command Mode
DellEMC>	EXEC
DellEMC#	EXEC Privilege
DellEMC (conf) #	CONFIGURATION

NOTE: For a list of all the command mode prompts, refer to the [Command Modes](#) section.

Multiple Configuration Users

When a user enters CONFIGURATION mode and another user is already in CONFIGURATION mode, the Dell EMC Networking operating software generates an alert warning message similar to the following:

```
DellEMC#conf
% Warning: The following users are currently configuring the system:
```

```

User "" on line console0
User "admin" on line vty0 ( 123.12.1.123 )
User "admin" on line vty1 ( 123.12.1.123 )
User "Irene" on line vty3 ( 123.12.1.321 )
DellEMC#conf

```

When another user enters CONFIGURATION mode, Dell EMC Networking OS sends a message similar to the following:

```
% Warning: User "admin" on line vty2 "172.16.1.210" is in configuration
```

In this case, the user is “admin” on vty2.

Navigating the CLI

The Dell EMC Networking OS displays a CLI prompt comprised of the host name and CLI mode.

- Host name is the initial part of the prompt and is “Dell” by default. You can change the host name with the `hostname` command.
- CLI mode is the second part of the prompt and reflects the current CLI mode. For a list of the Dell EMC Networking OS command modes, see the *command mode list* in [Accessing the Command Line](#).

The CLI prompt changes as you move up and down the levels of the command structure. Starting with CONFIGURATION mode, the command prompt adds modifiers to further identify the mode. For more information about command modes, see [Command Modes](#).

Obtaining Help

As soon as you are in a Command mode, there are several ways to access help:

To obtain a list of keywords at any command mode: Type a `?` at the prompt or after a keyword. There must always be a space before the `?`.

To obtain a list of keywords with a brief functional description: Type `help` at the prompt.

To obtain a list of available options: Type a keyword, and then enter a space and a `?`.

To obtain a list of partial keywords using a partial keyword: Type a partial keyword, and then enter a `?`.

Example The following is an example of entering `ip ?` at the prompt:

```

DellEMC(conf)#ip ?
access-list      Named access-list
as-path          BGP autonomous system path filter
community-list   Add a community list entry
control-plane    Control plane configuration
dhcp             DHCP configuration commands
domain-list      Domain name to complete unqualified host name
domain-lookup    Enable IP Domain Name System hostname translation
domain-name      Define the default domain name
ecmp             Weighted Ecmp Configuration
ecmp-group       ECMP Group Configuration
extcommunity-list Add a Extended community list entry
ftp              FTP configuration commands
helper-address   DHCP relay agent configuration
host             Add an entry to the ip hostname table
http            HTTP configuration commands
icmp            ICMP configuration commands
igmp            Internet Group Management Protocol
max-frag-count   Max. fragmented packets allowed in IP re-assembly
mroute          Multicast routes and counters
msdp            Multicast source discovery protocol

```

multicast-limit	Max entries in Multicast TIB
multicast-msdp	Enable IP multicast MSDP protocol
multicast-routing	Enable IP multicast forwarding
name-server	Specify address of name server to use
pim	Protocol Independent Multicast
prefix-list	Build a prefix list
radius	Interface configuration for RADIUS
redirect-list	Named redirect-list
route	Establish static routes
route-export	Export routes
route-import	Import routes
scp	SCP configuration commands
source-route	Process packets with source routing header options
ssh	SSH configuration commands
tacacs	Interface configuration for TACACS+
tcp	global tcp settings
telnet	Specify telnet options
tftp	TFTP configuration commands
unicast-host-route	Configuration for ip unicast address-family
unknown-unicast	Enable IPv4 unknown-unicast packets to CPU
vlan-flooding	Vlan flooding
vrf	Configure VRF instance

When entering commands, you can take advantage of the following timesaving features:

- Commands are not case-sensitive.
- Enter partial (truncated) command keywords. For example, you can enter `int teng 1/1` for the interface `tengigabitethernet 1/1` command.
- Use the TAB key to complete keywords in commands.
- Use the up Arrow key to display the last enabled command.
- Use either the Backspace key or Delete key to erase the previous character.
- Use the left and right Arrow keys to navigate left or right in the Dell EMC Networking OS command line.

The shortcut key combinations at the Dell EMC Networking OS command line are as follows:

Key Combination	Action
CNTL-A	Moves the cursor to the beginning of the command line.
CNTL-B	Moves the cursor back one character.
CNTL-D	Deletes the character at the cursor.
CNTL-E	Moves the cursor to the end of the line.
CNTL-F	Moves the cursor forward one character.
CNTL-I	Completes a keyword.
CNTL-K	Deletes all the characters from the cursor to the end of the command line.
CNTL-L	Re-enters the previous command.
CNTL-N	Returns to the more recent commands in the history buffer after recalling commands with Ctrl-P or the up Arrow key.
CNTL-P	Recalls commands, beginning with the last command.
CNTL-R	Re-enters the previous command.
CNTL-U	Deletes the line.
CNTL-W	Deletes the previous word.
CNTL-X	Deletes the line.
CNTL-Z	Ends continuous scrolling of the command outputs.
Esc B	Moves the cursor back one word.
Esc F	Moves the cursor forward one word.
Esc D	Deletes all the characters from the cursor to the end of the word.

Using the no Command

To disable, delete or return to default values, use the `no` form of the commands.

For most commands, if you type the keyword `no` in front of the command, you disable that command or delete it from the running configuration. In this guide, the `no` form of the command is described in the Syntax portion of the command description.

Filtering show Commands

You can filter commands using the `show` command to find specific information, display certain information only, or begin the command output at the first instance of a regular expression or phrase.

Execute a `show` command and a pipe (`|`), and one of the following parameters and a regular expression to show output that either excludes or includes the specified parameters.

NOTE: The Dell EMC Networking OS accepts a space before or after the pipe, no space before or after the pipe, or any combination. For example: `command | grep gigabit |except regular-expression | find regular-expression`.

except Displays only the text that does not match the pattern (or regular expression).

find Searches for the first occurrence of a pattern.

grep Displays text that matches a pattern.

The `grep` command option has an `ignore-case` suboption that makes the search case-insensitive. For example, the commands:

```
show run | Returns a search result with instances containing a capitalized Ethernet, such as  
grep Ethernet interface TenGigabitEthernet 1/1.
```

```
show run | Does not return the previous search result because it only searches for instances  
grep ethernet containing a noncapitalized ethernet.
```

```
show run | Returns instances containing both Ethernet and ethernet.  
grep Ethernet  
ignore-case
```

no-more Does not paginate the display output.

save Copies the output to a file for future use.

Displaying All Output

Use the `no-more` option after the pipe to display all output at once — not one screen at a time. This operation is similar to terminal `length screen-length` except that the `no-more` option affects the output of just the specified command. For example: `show running-config|no-more`.

Filtering the Command Output Multiple Times

You can filter a single command output multiple times. To filter a command output multiple times, place the `save` option as the last filter. For example: `command | grep regular-expression | except regular-expression | grep other-regular-expression | find regular-expression | no-more | save`.

Enabling Software Features on Devices Using a Command Option

The capability to activate software applications or components on a device using a command is supported on this platform.

Starting with Release 9.4(0.0), you can enable or disable specific software features or applications that need to run on a device by using a command attribute in the CLI interface. This enables effective, streamlined management and administration of applications and utilities that run on a device. You can employ this capability to perform an on-demand activation, or turn-off a software component or protocol. A feature configuration file generated for each image contains feature names, and denotes if this enabling or disabling method is available. You can enable or disable the VRF application globally across the system by using this capability.

Activate the VRF application on a device by using the `feature vrf` command in CONFIGURATION mode.

NOTE: The `no feature vrf` command is not supported on any of the platforms.

To enable the VRF feature and cause all VRF-related commands to be available or viewable in the CLI interface, use the following command. You must enable the VRF feature before you can configure its related attributes.

```
DellEMC(conf)# feature vrf
```

Based on if the VRF feature is identified as supported in the Feature Configuration file, configuration command `feature vrf` becomes available for usage. This command is stored in the running-configuration and precedes all other VRF-related configurations.

To display the state of Dell EMC Networking OS features:

```
DellEMC# show feature
```

Example of show feature output

For a particular target where VRF is enabled, the show output is similar to the following:

Feature	State
VRF	Enabled

feature vrf

Enable the VRF application on a switch. Once enabled, you cannot deactivate the VRF application.

S5000

Syntax	<code>feature vrf</code>
Defaults	Disabled
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.0)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S5000, and S6000.

Usage Information Activate the VRF application on a device using the `feature vrf` command in CONFIGURATION mode. The `no feature vrf` command is not supported on any platform.

show feature

Verify the status of software applications, such as VRF, that are activated and running on a device.

Syntax `show feature`

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.4(0.0)	Introduced on the S4810, S4820T, and S6000.

Usage Information You can activate VRF application on a device by using the `feature vrf` command in CONFIGURATION mode. The `no feature vrf` command is not supported on any of the platforms.

Example

```
DellEMC# show feature
Feature          State
-----
VRF              Enabled
DellEMC#
```

Command Modes

To navigate and launch various CLI modes, use specific commands. Navigation to these modes is described in the following sections.

BGP ADDRESS-FAMILY Mode

To enable or configure IPv4 for BGP, use BGP ADDRESS-FAMILY mode. For more information, see [Border Gateway Protocol IPv4 \(BGPv4\)](#).

To enter BGP ADDRESS-FAMILY mode:

1. Verify that you are logged in to ROUTER BGP mode.
2. Enter the `address-family` command.
3. Enter the protocol type:
 - For IPv4, enter the `ipv4 multicast` command. The prompt changes to include `conf-router_bgp_af` for IPv4.

CLASS-MAP Mode

To create or configure a class map, use CLASS-MAP mode. For more information, see [Policy-Based QoS Commands](#).

To enter CLASS-MAP mode:

1. Verify that you are logged in to CONFIGURATION mode.

2. Enter the `class-map` command, and then enter the class map name. The prompt changes to include `config-class-map`.

You can return to CONFIGURATION mode by using the `exit` command.

CONFIGURATION Mode

In EXEC Privilege mode, use the `configure` command to enter CONFIGURATION mode and configure routing protocols and access interfaces.

To enter CONFIGURATION mode:

1. Verify that you are logged in to EXEC Privilege mode.
2. Enter the `configure` command. The prompt changes to include `conf`.

From this mode, you can enter INTERFACE mode by using the `interface` command.

CONTROL-PLANE Mode

To manage control-plane traffic, use CONTROL-PLANE mode. For more information, see [Control Plane Policing \(CoPP\)](#).

To enter CONTROL-PLANE mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `control-plane-cpuqos` command. The prompt changes to include `conf-control-cpuqos`.

You can return to CONFIGURATION mode by using the `exit` command.

DHCP Mode

To enable and configure Dynamic Host Configuration Protocol (DHCP), use DHCP mode. For more information, see [Dynamic Host Configuration Protocol \(DHCP\)](#).

To enter DHCP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ip dhcp server` command. The prompt changes to include `config-dhcp`.

You can return to CONFIGURATION mode by using the `exit` command.

DHCP POOL Mode

To create an address pool, use DHCP POOL mode. For more information, see [Dynamic Host Configuration Protocol \(DHCP\)](#).

To enter DHCP POOL mode:

1. Verify that you are logged in to DHCP mode.
2. Enter the `pool` command then the pool name. The prompt changes to include `config-dhcp-pool-name`.

You can return to DHCP mode by using the `exit` command.

ECMP GROUP Mode

To enable or configure traffic distribution monitoring on an ECMP link bundle, use ECMP GROUP mode. For more information, see [ecmp_overview](#).

To enter ECMP GROUP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ecmp-group` command then enter the ECMP group ID. The prompt changes to include `conf-ecmp-group-ecmp-group-id`.

You can return to CONFIGURATION mode by using the `exit` command.

EIS Mode

To enable or configure Egress Interface Selection (EIS), use EIS mode.

To enter EIS mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `management egress-interface-selection` command. The prompt changes to include `conf-mgmt-eis`. You can return to CONFIGURATION mode by using the `exit` command.

EXEC Mode

When you initially log in to the switch, by default, you are logged in to EXEC mode. This mode allows you to view settings and enter EXEC Privilege mode, which is used to configure the device.

When you are in EXEC mode, the `>` prompt is displayed following the host name prompt, which is “Dell” by default. You can change the host name prompt using the `hostname` command.

 **NOTE:** Each mode prompt is preceded by the host name.

EXEC Privilege Mode

The `enable` command accesses EXEC Privilege mode. If an administrator has configured an “Enable” password, you are prompted to enter it.

EXEC Privilege mode allows you to access all the commands accessible in EXEC mode, plus other commands, such as to clear address resolution protocol (ARP) entries and IP addresses. In addition, you can access CONFIGURATION mode to configure interfaces, routes and protocols on the switch. While you are logged in to EXEC Privilege mode, the `#` prompt is displayed.

EXTENDED COMMUNITY LIST Mode

To enable and configure a BGP extended community, use EXTENDED COMMUNITY LIST mode.

To enter EXTENDED COMMUNITY LIST mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ip extcommunity-list` command then a community list name. The prompt changes to include `conf-ext-community-list`.

You can return to CONFIGURATION mode by using the `exit` command.

FRRP Mode

To enable or configure Force10 Resilient Ring Protocol (FRRP), use FRRP mode. For more information, see [Force10 Resilient Ring Protocol \(FRRP\)](#).

To enter FRRP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol frrp` command then the ring ID. The prompt changes to include `conf-frrp-ring-id`.

You can return to CONFIGURATION mode by using the `exit` command.

INTERFACE Mode

Use INTERFACE mode to configure interfaces or IP services on those interfaces. An interface can be physical (for example, a Gigabit Ethernet port) or virtual (for example, the Null interface).

To enter INTERFACE mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `interface` command and then enter an interface type and interface number that is available on the switch.

 **NOTE:** In Dell EMC Networking OS, the stack unit number and interfaces start from 0. But in Dell EMC Networking OS Open Networking platforms, the stack unit number and interfaces start from 1.

The prompt changes to include the designated interface and slot/port number. For example:

Prompt	Interface Type
DellEMC (conf-if) #	INTERFACE mode
DellEMC (conf-if-gi-0/0) #	Gigabit Ethernet interface then the slot/port information
DellEMC (conf-if-te-0/0) #	Ten-Gigabit Ethernet interface then slot/port information
DellEMC (conf-if-fo-0/0) #	Forty-Gigabit Ethernet interface then slot/port information
DellEMC (conf-if-lo-0) #	Loopback interface number
DellEMC (conf-if-nu-0) #	Null Interface then zero
DellEMC (conf-if-po-0) #	Port-channel interface number. The range is from 1 to 128.
DellEMC (conf-if-vl-0) #	VLAN Interface then VLAN number (range 1–4094)
DellEMC (conf-if-ma-0/0) #	Management Ethernet interface then slot/port information
DellEMC (conf-if-tu-0) #	Tunnel interface then tunnel ID.
DellEMC (conf-if-range) #	Designated interface range (used for bulk configuration).

IP ACCESS LIST Mode

To enter IP ACCESS LIST mode and configure either standard or extended access control lists (ACLs), use the `ip access-list standard` command or the `ip access-list extended` command.

To enter IP ACCESS LIST mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter either the `ip access-list standard` command or the `ip access-list extended` command. Include a name for the ACL. The prompt changes to include `conf-std-nacl` or `conf-ext-nacl`.

You can return to CONFIGURATION mode by using the `exit` command.

ISIS ADDRESS-FAMILY Mode

To enable or configure IPv6 for ISIS, use ISIS ADDRESS-FAMILY mode. For more information, see [Intermediate System to Intermediate System \(IS-IS\)](#).

To enter ISIS ADDRESS-FAMILY mode:

1. Verify that you are logged in to ROUTER ISIS mode.
2. Enter the `address-family ipv6 unicast` command. The prompt changes to include `conf-router_isis-af_ipv6`.

LLDP Mode

To enable and configure Link Layer Discovery Protocol (LLDP), use LLDP mode. For more information, see [Link Layer Discovery Protocol \(LLDP\)](#).

To enter LLDP mode:

1. To enable LLDP globally, verify that you are logged in to CONFIGURATION mode. To enable LLDP on an interface, verify that you are logged in to INTERFACE mode.
2. Enter the `protocol lldp` command. The prompt changes to include `conf-lldp` or `conf-if-interface-lldp`.

LLDP MANAGEMENT INTERFACE Mode

To enable and configure Link Layer Discovery Protocol (LLDP) on management interfaces, use LLDP MANAGEMENT INTERFACE mode.

To enter LLDP MANAGEMENT INTERFACE mode:

1. Verify that you are logged in to LLDP mode.
2. Enter the `management-interface` command. The prompt changes to include `conf-lldp-mgmtIf`.

LINE Mode

To configure the console or virtual terminal parameters, use LINE mode.

To enter LINE mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `line` command. Include the keywords `console` or `vtty` and their line number available on the switch. The prompt changes to include `config-line-console` or `config-line-vty`.

You can exit this mode by using the `exit` command.

MAC ACCESS LIST Mode

To enter MAC ACCESS LIST mode and configure either standard or extended access control lists (ACLs), use the `mac access-list standard` or `mac access-list extended` command.

To enter MAC ACCESS LIST mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Use the `mac access-list standard` command or the `mac access-list extended` command. Include a name for the ACL. The prompt changes to include `conf-std-macl` or `conf-ext-macl`.

You can return to CONFIGURATION mode by using the `exit` command.

MONITOR SESSION Mode

To enable and configure a traffic monitoring session using port monitoring, use MONITOR SESSION mode. For more information, see [Port Monitoring](#).

To enter MONITOR SESSION mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `monitor session` command, and then the session ID. The prompt changes to include `conf-mon-sess-sessionID`.

MULTIPLE SPANNING TREE (MSTP) Mode

To enable and configure MSTP, use MULTIPLE SPANNING TREE mode. For more information, see [Multiple Spanning Tree Protocol \(MSTP\)](#).

To enter MULTIPLE SPANNING TREE mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol spanning-tree mstp` command. The prompt changes to include `conf-mstp`.

You can return to CONFIGURATION mode by using the `exit` command.

OPENFLOW INSTANCE Mode

To enable and configure OpenFlow instances, use OPENFLOW INSTANCE mode.

To enter OPENFLOW INSTANCE mode:

1. Verify that you are logged in to CONFIGURATION mode.

2. Enter the `openflow of-instance` command, and then the OpenFlow ID number of the instance you want to create or configure. The prompt changes to include `conf-of-instance of-id`.
You can return to the CONFIGURATION mode by entering the `exit` command.

Per-VLAN SPANNING TREE (PVST+) Plus Mode

To enable and configure the Per-VLAN Spanning Tree (PVST+) protocol, use PVST+ mode. For more information, see [Per-VLAN Spanning Tree Plus \(PVST+\)](#).

 **NOTE:** The protocol name is PVST+, but the plus sign is dropped at the CLI prompt.

To enter PVST+ mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol spanning-tree pvst` command. The prompt changes to include `conf-pvst`.
You can return to CONFIGURATION mode by using the `exit` command.

PORT-CHANNEL FAILOVER-GROUP Mode

To configure shared LAG state tracking, use PORT-CHANNEL FAILOVER-GROUP mode. For more information, see [Port Channel Commands](#).

To enter PORT-CHANNEL FAILOVER-GROUP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `port-channel failover-group` command. The prompt changes to include `conf-po-failover-grp`.
You can return to CONFIGURATION mode by using the `exit` command.

PREFIX-LIST Mode

To configure a prefix list, use PREFIX-LIST mode.

To enter PREFIX-LIST mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ip prefix-list` command and the name for the prefix list. The prompt changes to include `conf-nprefixl`.
You can return to CONFIGURATION mode by using the `exit` command.

PROTOCOL GVRP Mode

To enable and configure GARP VLAN Registration Protocol (GVRP), use PROTOCOL GVRP mode. For more information, see [GARP VLAN Registration \(GVRP\)](#).

To enter PROTOCOL GVRP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol gvrp` command. The prompt changes to include `config-gvrp`.
You can return to CONFIGURATION mode by using the `exit` command.

RAPID SPANNING TREE (RSTP) Mode

To enable and configure RSTP, use RSTP mode. For more information, see [Rapid Spanning Tree Protocol \(RSTP\)](#).

To enter RSTP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol spanning-tree rstp` command. The prompt changes to include `conf-rstp`.
You can return to CONFIGURATION mode by using the `exit` command.

ROUTE-MAP Mode

To configure a route map, use ROUTE-MAP mode.

To enter ROUTE-MAP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Use the `route-map map-name [permit | deny] [sequence-number]` command. The prompt changes to include `config-route-map`.

You can return to CONFIGURATION mode by using the `exit` command.

ROUTER BGP Mode

To enable and configure Border Gateway Protocol (BGP), use ROUTER BGP mode. For more information, see [Border Gateway Protocol IPv4 \(BGPv4\)](#)

To enter ROUTER BGP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Use the `router bgp` command, and then enter the AS number. The prompt changes to include `conf-router_bgp`.

You can return to CONFIGURATION mode by using the `exit` command.

ROUTER ISIS Mode

To enable and configure Intermediate System to Intermediate System (ISIS), use ROUTER ISIS mode. For more information, see [Intermediate System to Intermediate System \(IS-IS\)](#).

To enter ROUTER ISIS mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Use the `router isis` command. The prompt changes to include `conf-router_isis`.

You can return to CONFIGURATION mode by using the `exit` command.

ROUTER OSPF Mode

To configure OSPF, use ROUTER OSPF mode. For more information, see [Open Shortest Path First \(OSPFv2\)](#).

To enter ROUTER OSPF mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `router ospf {process-id}` command. The prompt changes to include `conf-router_ospf-id`.

You can switch to INTERFACE mode by using the `interface` command or you can switch to ROUTER RIP mode by using the `router rip` command.

ROUTER OSPFV3 Mode

To configure OSPF for IPv6, use ROUTER OSPFV3 mode.

To enter ROUTER OSPFV3 mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ipv6 router ospf {process-id}` command. The prompt changes to include `conf-ipv6-router_ospf`.

You can return to CONFIGURATION mode by using the `exit` command.

ROUTER RIP Mode

To enable and configure Router Information Protocol (RIP), use ROUTER RIP mode. For more information, see [Routing Information Protocol \(RIP\)](#).

To enter ROUTER RIP mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `router rip` command. The prompt changes to include `conf-router_rip`.

You can return to CONFIGURATION mode by using the `exit` command.

SPANNING TREE Mode

To enable and configure the Spanning Tree protocol, use SPANNING TREE mode. For more information, see [Spanning Tree Protocol \(STP\)](#).

To enter SPANNING TREE mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `protocol spanning-tree stp-id` command. The prompt changes to include `conf-stp`.

You can return to CONFIGURATION mode by using the `exit` command.

SupportAssist Mode

To enable and configure the SupportAssist, use SupportAssist mode. For more information, see [SupportAssist](#).

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `support-assist` command. The prompt changes to include `conf-supportassist`.

You can return to CONFIGURATION mode by using the `exit` command.

TRACE-LIST Mode

To configure a Trace list, use TRACE-LIST mode.

To enter TRACE-LIST mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `ip trace-list` command, and the name of the Trace list. The prompt changes to include `conf-trace-acl`.

You can exit this mode by using the `exit` command.

VLT DOMAIN Mode

To enable and configure the VLT domain protocol, use VLT DOMAIN mode. For more information, see [Virtual Link Trunking \(VLT\)](#).

To enter VLT DOMAIN mode:

1. Verify that you are logged in to CONFIGURATION mode.
2. Enter the `vlt domain` command, and then the VLT domain number. The prompt changes to include `conf-vlt-domain`.

You can return to CONFIGURATION mode by entering the `exit` command.

VRRP Mode

To enable and configure Virtual Router Redundancy Protocol (VRRP), use VRRP mode. For more information, see [Virtual Router Redundancy Protocol \(VRRP\)](#).

To enter VRRP mode:

1. To enable VRRP globally, verify that you are logged in to CONFIGURATION mode.
2. Enter the `vrrp-group` command, and then enter the VRRP group ID. The prompt changes to include `conf-if-interface-type-slot/port-vrid-vrrp-group-id`.

Determining Chassis Mode

Chassis mode in Dell Networking OS determines which hardware is being supported in an E-Series chassis.

Chassis mode is programmed into an electrically erasable programmable read-only memory (EEPROM) on the backplane of the chassis and the change takes place only after the chassis is rebooted. Configuring the appropriate chassis mode allows the system to use all the ports on the card and recognize all software features.

File Management

This section contains command line interface (CLI) commands needed to manage the configuration files, as well as other file management commands.

Topics:

- [boot system](#)
- [cd](#)
- [HTTP Copy via CLI](#)
- [copy](#)
- [delete](#)
- [dir](#)
- [format](#)
- [fsck flash](#)
- [mkdir](#)
- [mount nfs](#)
- [rmdir](#)
- [rename](#)
- [restore factory-defaults](#)
- [show boot system](#)
- [show bootvar](#)
- [show file-systems](#)
- [show os-version](#)
- [show running-config](#)
- [show startup-config](#)
- [show version](#)
- [upgrade system](#)
- [upgrade](#)

boot system

Specify the location where the Dell EMC Networking OS image used to boot the system is stored.

Syntax `boot system {gateway ip-address | stack-unit {stack-unit-number | all} {default | primary | secondary} {ftp: | nfsmount: | system: {A: | B: | bmp-boot} | tftp: | usbflash:}}`

To return to the default boot sequence, use the `no boot system` command.

Parameters		
gateway		Enter the IP address of the default next-hop gateway for the management subnet.
<i>ip-address</i>		Enter an IP address in dotted decimal format.
stack-unit		Enter the keywords <code>stack-unit</code> to specify the stack unit number.
all		Enter the keyword <code>all</code> for all the stack units.
<i>stack-unit-number</i>		Enter the stack-unit number.
default		Enter the keyword <code>default</code> to specify the default Dell EMC Networking OS image.
primary		Enter the keyword <code>primary</code> to specify the primary Dell EMC Networking OS image.

secondary	Enter the keyword <code>secondary</code> to specify the secondary Dell EMC Networking OS image.
ftp:	Enter the keyword <code>FTP:</code> to retrieve the image from an FTP server. <code>ftp://userid:password@hostip/filepath</code> .
nfsmount	Enter the keyword <code>nfsmount:</code> to retrieve the image from a mounted NFS file system. <code>nfsmount://filepath</code>
system:	Enter the keyword <code>system:</code> to retrieve the image from the system.
usbflash	Enter the keyword <code>usbflash:</code> to retrieve the image from the USB flash memory. <code>usbflash://filename</code> .
tftp:	Enter the keyword <code>TFTP:</code> to retrieve the image from a TFTP server. <code>tftp://hostip/filepath</code> .
A: B:	Enter <code>A:</code> or <code>B:</code> to boot one of the system partitions.
bmp-boot	Enter the keywords <code>bmp-boot</code> to boot the system from the image present in the DHCP offer.  NOTE: In normal-reload, this keyword is not enabled.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced the support for <code>bmp-boot</code> on the S-Series and Z-Series switches.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information To display these changes in the `show bootvar` command output, save the running configuration to the startup configuration (using the `copy` command) and reload system.

Use the `bmp-boot` keyword only when the device boots up from bare metal provisioning (BMP). For an industrial standard upgraded device, the Dell EMC Networking OS stores the image partition upgraded from the DHCP offer in the `bmp-boot` option.

cd

Change to a different working directory.

Syntax `cd [flash: | usbflash:] <directory name and path>`

Parameters **flash:** Use the keyword `flash:` to change the current directory to internal flash and its sub directories.

usbflash: Use the keyword `usbflash:` to change the current directory to the inserted USB.

directory name and path Enter the directory name and path as follows: `directory name ([flash://]directory_path)`

 **NOTE:** The `cd` command without any arguments will change the current directory to `flash:`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added NFS mount support. Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

HTTP Copy via CLI

Copy one file to another location. Dell Networking OS supports IPv4 and IPv6 addressing for FTP, TFTP, and SCP (in the *hostip* field).

Syntax `copy http://10.16.206.77/sample_file flash://sample_filecopy flash://sample_file http://10.16.206.77/sample_file`

You can copy from the server to the switch and vice-versa.

Parameters

copy http: Address or name of remote host [:] 10.16.206.77

flash: Port number of the server [80]:

Source file name [:] sample_file

User name to login remote host: x

Password to login remote host:

Destination file name [sample_file]:

Defaults None.

Command Modes EXEC Privilege

Command History

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3(0.1)	Introduced on the S6000, Z9000, S4810, and S4820T.

Example

```
copy http://admin:admin123@10.16.206.77/sample_file flash://sample_file
```

copy

Copy one file to another location. Dell EMC Networking OS supports IPv4 and IPv6 addressing for FTP, HTTP, TFTP, and SCP (in the *hostip* field).

Syntax

```
copy source-file-url destination-file-url
```

Parameters

compressed-config	Enter the keywords <code>compressed-config</code> to copy a file from the current system configuration.
flash:	Enter the keyword <code>flash:</code> to copy from the local file system (<code>[flash://]filepath</code>).
ftp:	Enter the keyword <code>ftp:</code> to copy from the remote file system, IPv4, or IPv6, (<code>ftp://userid:password@hostip/filepath</code>).
http:	Enter the keyword <code>http:</code> to copy from the remote file system, IPv4, or IPv6, (<code>http://hostip/filepath</code>).
nfsmount:	Enter the keyword <code>nfsmount:</code> to copy from the nfs mount file system (<code>nfsmount://<mount-point>/filepath</code>).
running-config	Enter the keywords <code>running-config</code> to copy from the current system configuration.
scp:	Enter the keyword <code>scp:</code> to copy from the remote file system, IPv4, or IPv6, (<code>scp://userid:password@hostip/filepath</code>).
startup-config	Enter the keywords <code>startup-config</code> to copy from the startup configuration.
tftp:	Enter the keyword <code>tftp:</code> to copy from the remote file system, IPv4, or IPv6, (<code>tftp://hostip/filepath</code>).
usbflash:	Enter the keyword <code>usbflash:</code> to copy the file to or from the external USB flash.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(1.0)	Introduced on the S5048F-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON. Added the <code>nfsmount:<mount-point></code> parameters that allow you to mount a remote NFS file system.
9.4(0.0)	Added the <code>compressed-config</code> parameter.
9.3(0.1)	Added the <code>http</code> parameter on the S6000, Z9000, S4810, and S4820T.
9.0.2.0	Introduced on the S6000.
8.4.1.0	Added IPv6 addressing support for FTP, TFTP, and SCP.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added <code>usbflash</code> and <code>rpm0usbflash</code> commands on E-Series.
7.6.1.0	Introduced on the S-Series and added the SSH port number to the SCP prompt sequence on all systems.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

Dell EMC Networking OS supports a maximum of 100 files at the root directory level on both the internal and external flash.

When copying a file to a remote location (for example, using Secure Copy [SCP]), enter only the keywords and Dell EMC Networking OS prompts you for the rest of the information. For example, when using SCP, you can enter `copy running-config scp:` where `running-config` is the source and the target is specified in the ensuing prompts. Dell EMC Networking OS prompts you to enter any required information for the named destination — remote destination, destination filename, user ID, password, and so forth.

When you use the `copy running-config startup-config` command to copy the running configuration to the startup configuration file, Dell EMC Networking OS creates a backup file on the internal flash of the startup configuration.

When you load the startup configuration or a configuration file from a network server such as TFTP to the running configuration, the configuration is added to the running configuration. This does not replace the existing running configuration. Commands in the configuration file has precedence over commands in the running configuration.

Dell EMC Networking OS supports copying the running-configuration to a TFTP server, an FTP server, or a remote NFS file system. For example:

- `copy running-config tftp:`
- `copy running-config ftp:`
- `copy running-config nfsmount://<mount-point>/filepath`

You can compress the running configuration by grouping all the VLANs and the physical interfaces with the same property. You can store the operating configuration to the startup config in Compressed mode and perform an image downgrade without any configuration loss.

Example

```
DelleMC#copy running-config scp:
Address or name of remote host []: 192.168.1.1
Port number of the server [22]: 22
Destination file name [startup-config]:
User name to login remote host: username
Password to login remote host:
!
4080 bytes successfully copied
DelleMC#
```

In this `copy scp: flash: example`, specifying SCP in the first position indicates that you need to specify the target in the ensuing prompts. Entering `flash:` in the second position indicates that the

target is the internal flash. The source is on a secure server running secure shell (SSH), so you are prompted for the user datagram protocol (UDP) port of the SSH server on the remote host.

Example

```
DellEMC# copy running-config nfsmount://<mount-point>/filepath
Destination file name [test.txt]:
User name to login remote host: username
Password to login remote host:
DellEMC#
```

Example

```
DellEMC# copy scp: flash:
Address or name of remote host []: 10.11.199.134
Port number of the server [22]: 99
Source file name []: test.cfg
User name to login remote host: admin
Password to login remote host:
Destination file name [test.cfg]: test1.cfg
DellEMC#
```

Example

```
DellEMC# copy compressed-config compressed-cfg
!
6655 bytes successfully copied
DellEMC#
DellEMC#copy compressed-config ftp:
Address or name of remote host []: 10.11.8.12
Destination file name [startup-config]:
User name to login remote host: spbalaji
Password to login remote host:
!
6655 bytes successfully copied
DellEMC#
```

Example

```
DellEMC# copy http://admin:admin123@10.16.206.77/sample_file flash://
sample_file
DellEMC#
```

Related Commands

- `cd` – changes the working directory.

delete

Delete a file from the flash. After deletion, files cannot be restored.

Syntax

```
delete {flash: | nfsmount: | usbflash:} [no-confirm]
```

Parameters

- flash:** To delete a file or directory on the internal flash, enter `flash://` then the filename or directory name (`[flash://]filepath`).
- nfsmount:** To delete a file or directory on the NFS-mounted file system, enter `nfsmount://` then the mount point and the file path (`nfsmount://filepath`).
- usbflash:** To delete a file or directory on the external USB flash, enter `usbflash://` then the filename or directory name (`[usbflash://]filepath`).
- no-confirm** (OPTIONAL) Enter the keywords `no-confirm` to specify that the Dell EMC Networking OS does not require user input for each file prior to deletion.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for NFS mount.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

dir

Display the files in a file system. The default is the current directory.

Syntax `dir [flash: | nfsmount: | usbflash:]`

Parameters

flash:	For a directory on the internal Flash, enter <code>flash://</code> directory name.
nfsmount:	For a file or directory on an NFS-mounted file system, enter <code>nfsmount://</code> then the mount point and file path. NOTE: While displaying a file directory on a remote NFS file system, it is mandatory to specify the mount-point that indicates the working directory on the NFS file system. You cannot display details corresponding to the root directory of the remote NFS file system.
usbflash:	For a directory on the external USB flash, enter <code>usbflash://</code> directory name.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Added support for NFS mount.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

```
DelleEMC# dir
Directory of flash:

 1 drwx  8192 Jan  1 1980 00:00:00 +00:00 .
 2 drwx  3072 Dec 15 2014 06:27:10 +00:00 ..
 3 drwx  4096 Jan  1 1980 00:02:44 +00:00 TRACE_LOG_DIR
 4 drwx  4096 Jan  1 1980 00:02:44 +00:00 CORE_DUMP_DIR
 5 d---  4096 Jan  1 1980 00:02:44 +00:00 ADMIN_DIR
 6 drwx  4096 Jan  1 1980 00:02:44 +00:00 RUNTIME_PATCH_DIR
 7 drwx  4096 Nov  6 2014 06:57:06 +00:00 CONFIG_TEMPLATE
 8 -rwx  4625 Nov  6 2014 06:55:28 +00:00 startup-config
 9 drwx  4096 May 31 2013 02:49:46 +00:00 CONFD_LOG_DIR
flash: 2056916992 bytes total (2052784128 bytes free)
DelleEMC#
```

Example (NFS Mount)

```
DelleEMC# dir nfsmount:
Directory of nfsmount:

 1 drwx      512 Jun 15 2015 02:47:57 +00:00 .
 2 drwx      512 Jun 15 2015 02:47:57 +00:00 ..

nfsmount: 1463410688 bytes total (585719808 bytes free)
DelleEMC#
```

Related Commands

- `cd` — changes the working directory.

format

Erase all existing files and reformat the file system. After the file system is formatted, files cannot be restored.

Syntax `format flash:`

Defaults `flash memory`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series

Usage Information

You must include the colon (:) when entering this command.

After reformatting is complete, three empty directories are automatically created on flash: CRASH_LOG_DIR, TRACE_LOG_DIR and NVTRACE_LOG_DIR.

CAUTION: This command deletes all files, including the startup configuration file. So, after executing this command, consider saving the running config as the startup config (use the `write memory` command or `copy running-config startup-config` command).

Related Commands

- `copy` – copy the current configuration to either the startup-configuration file or the terminal.
- `show file-systems` – display information about the file systems on the system.

fsck flash

Checks the flash file system for errors.

Syntax `fsck {flash: | usbflash:}`

Parameters

flash: For a directory on the internal Flash, enter `flash://` directory name.

usbflash: For a directory on the external USB flash, enter `usbflash://` directory name.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.

Version	Description
9.1(0.0)	Introduced on S4810 and Z9000.
8.3.19.0	Introduced on S4820T.

Usage Information

Include the colon (:) when entering this command. This command checks the specified flash memory for errors. If errors are found, the command recommends that you format the flash.

CAUTION: If you elect to format the flash, all files – including the startup configuration file – are lost. If you do decide to format the specified flash, consider saving the running configuration as the startup configuration after formatting the flash (use the `write memory command` or `copy running-config startup-config` command).

Related Commands

- `copy` — copy one file to another location.
- `show file-systems` — display information about the file systems on the system.

mkdir

Creates a directory on the NFS mounted file system.

Syntax `mkdir nfsmount://mount-point/username`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Example

```
DellEMC# mkdir nfsmount:/nfs-mountpoint/guest
DellEMC#
```

Related Commands

- `rmdir` — remove a directory.

mount nfs

Mounts an NFS file system to a device.

Syntax `mount nfs rhost:path mount-point [username password]`

Parameters Enter the following location keywords and information:

- rhost:path** Enter the remote hosts's path directory.
- mount-point** Enter the folder name in the local file system.
- username** (OPTIONAL) Enter the user name to access the device.

password (OPTIONAL) Enter the password.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Example

```
DellEMC# mount nfs nfstest nfs-mount-point username pwd
DellEMC#
```

Related Commands

- [cd](#) — change the working directory.

rmkdir

Removes a directory from the NFS mounted file system.

Syntax `rmkdir nfsmount://mount-point/username`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Example

```
DellEMC# rmkdir nfsmount:/nfs-mountpoint/guest
Proceed to remove the directory [confirm yes/no]: yes
```

Related Commands

- [mkdir](#) – create a directory.

rename

Rename a file in the local file system.

Syntax `rename url url`

Parameters `url` Enter the following keywords and a filename:

- For a file on the internal Flash, enter `flash://` followed by the filename.
- For a file on an NFS mounted file system, enter `nfsmount://` followed by the mount point and file path.
- For a file on an external USB drive, enter `usbflash://` followed by the filename.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for NFS mount.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on S-Series
7.5.1.0	Introduced on C-Series
E-Series	Original command

restore factory-defaults

Restore factory defaults.

Syntax `restore factory-defaults stack-unit {stack-unit-number | all} {clear-all | bootvar | nvram}`

Parameters

- factory-defaults** Return the system to its factory default mode.
- stack-unit-number** Enter the stack member unit identifier to restore only the mentioned stack-unit.
- all** Enter the keyword `all` to restore all units in the stack.
- bootvar** Enter the keyword `bootvar` to reset boot line.
- clear-all** Enter the keywords `clear-all` to reset the NvRAM, boot environment variables, and the system startup configuration.

nvram Enter the keyword `nvr`am to reset the NvRAM only.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Added <code>bootvar</code> as a new parameter.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

Restoring factory defaults deletes the existing startup configuration and all persistent settings (stacking, fan-out, and so forth).

When restoring all units in a stack, all the units in the stack are placed into stand-alone mode.

When restoring a single unit in a stack, that unit placed in stand-alone mode. No other units in the stack are affected.

When restoring units in stand-alone mode, the units remain in stand-alone mode after the restoration. After the restore is complete, the units power cycle immediately.

 **CAUTION: There is no undo for this command.**

Following are the factory-default environment variables:

- baudrate
- primary_boot
- secondary_boot
- default_boot
- ipaddr
- gatewayip
- netmask
- macaddr
- mgmtautoneg
- mgmtspeed100
- mgmtfullduplex

Each boot path variable (`primary_boot`, `secondary_boot`, and `default_boot`) is further split into the following three independent variables:

- `primary_server`, `primary_file`, and `primary_type`
- `secondary_server`, `secondary_file`, and `secondary_type`
- `default_server`, `default_file`, and `default_type`

 **NOTE:** For information on the default values that these variables take, refer to the Restoring Factory Default Environment Variables section in the *Dell EMC Networking OS Configuration guide*.

Example (all stack units)

```
DelleEMC# restore factory-defaults stack-unit all clear-all
*****
* Warning - Restoring factory defaults will delete the existing *
* startup-config and all persistent settings (stacking, fanout, etc.)*
* All the units in the stack will be split into standalone units. *
* After restoration the unit(s) will be powercycled immediately. *
* Proceed with caution ! *
*****
Proceed with factory settings? Confirm [yes/no]:yes
-- Restore status --
Unit Nvram      Config
-----
1      Success   Success
2      Success   Success
3      Success   Success
4      Not present
5      Not present
Power-cycling the unit(s).
DelleEMC#
```

Example (single stack)

```
DelleEMC# restore factory-defaults stack-unit 1 clear-all
*****
* Warning - Restoring factory defaults will delete the existing *
* startup-config and all persistent settings (stacking, fanout, etc.)*
* After restoration the unit(s) will be powercycled immediately. *
* Proceed with caution ! *
*****
Proceed with factory settings? Confirm [yes/no]:yes
-- Restore status --
Unit Nvram      Config
-----
1      Success   Success
Power-cycling the unit(s).
DelleEMC#
```

Example (NvRAM all stack units)

```
DelleEMC# restore factory-defaults stack-unit all nvram
*****
* Warning - Restoring factory defaults will delete the existing *
* persistent settings (stacking, fanout, etc.) *
* All the units in the stack will be split into standalone units. *
* After restoration the unit(s) will be powercycled immediately. *
* Proceed with caution ! *
*****
Proceed with factory settings? Confirm [yes/no]:yes
-- Restore status --
Unit Nvram      Config
-----
1      Success
2      Success
3      Success
4      Not present
5      Not present
Power-cycling the unit(s).
DelleEMC#
```

Example (NvRAM, single unit)

```
DelleEMC# restore factory-defaults stack-unit 1 nvram
*****
* Warning - Restoring factory defaults will delete the existing *
* persistent settings (stacking, fanout, etc.) *
* After restoration the unit(s) will be powercycled immediately. *
* Proceed with caution ! *
*****
Proceed with factory settings? Confirm [yes/no]:yes
-- Restore status --
Unit Nvram      Config
-----
1      Success
```

```
Power-cycling the unit(s).
DellEMC#
```

show boot system

Displays information about boot images currently configured on the system.

Syntax `show boot system stack-unit{stack-unit-id | all}`

Parameters

- all** Enter the keyword `all` to display the boot image information for all stack units.
- stack-unit-id** Enter the `stack-unit-id` to display boot image information for a stack-unit.

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the C-Series and E-Series.

Example

```
DellEMC# show boot system stack-unit 1

Current system image information in the system:
=====
Type           Boot Type      A           B
-----
Stack-unit 1   FLASH BOOT     9-0 (2-1)   9-0 (2-0) [boot]
DellEMC#
```

show bootvar

Display the variable settings for the boot parameters.

Syntax `show bootvar`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.4	Output expanded to display current reload mode (normal or Jumpstart).
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

```
DelleMC# show bootvar
PRIMARY IMAGE FILE = system://B
SECONDARY IMAGE FILE = tftp://10.16.127.35/Dell-SI-9-0-2-0.bin
DEFAULT IMAGE FILE = system://A
LOCAL CONFIG FILE = variable does not exist
PRIMARY HOST CONFIG FILE = variable does not exist
SECONDARY HOST CONFIG FILE = variable does not exist
PRIMARY NETWORK CONFIG FILE = variable does not exist
SECONDARY NETWORK CONFIG FILE = variable does not exist
CURRENT IMAGE FILE = system://B
CURRENT CONFIG FILE 1 = flash://startup-config
CURRENT CONFIG FILE 2 = variable does not exist
CONFIG LOAD PREFERENCE = local first
BOOT INTERFACE GATEWAY IP ADDRESS = 10.16.132.254
Reload Mode = normal-reload
DelleMC#
```

show file-systems

Display information about the file systems on the system.

Syntax show file-systems

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series
7.5.1.0	Introduced on the C-Series
E-Series	Original command

Example

```
DellEMC#show file-systems
      Size (b)      Free (b)      Feature      Type      Flags      Prefixes
4286574592      4170424320      FAT32      USERFLASH      rw      flash:
-              -              unformatted      USERFLASH      rw      fcmfs:
2032525312      590807040      Unknown      NFSMOUNT      rw      nfsmount:
-              -              -              network      rw      ftp:
-              -              -              network      rw      tftp:
-              -              -              network      rw      scp:
-              -              -              network      rw      http:
DellEMC#
```

Command Fields

Field	Description
size(b)	Lists the size (in bytes) of the storage location. If the location is remote, no size is listed.
Free(b)	Lists the available size (in bytes) of the storage location. If the location is remote, no size is listed.
Feature	Displays the formatted DOS version of the device.
Type	Displays the type of storage. If the location is remote, the word <code>network</code> is listed.
Flags	Displays the access available to the storage location. The following letters indicate the level of access: <ul style="list-style-type: none"> • r = read access • w = write access
Prefixes	Displays the name of the storage location.

Related Commands

- [format flash](#) – erases all the existing files and reformats the file system in the internal flash memory.

show os-version

Display the release and software image version information of the image file specified.

Syntax `show os-version [file-url]`

Parameters	<i>file-url</i>	(OPTIONAL) Enter the following location keywords and information: <ul style="list-style-type: none"> • For a file on the internal flash, enter <code>flash://</code> followed by the filename. • For a file on an FTP server, enter <code>ftp://user:password@hostip/filepath</code>. • For a file on a TFTP server, enter <code>tftp://hostip/filepath</code>. • For a file on the USB port, enter <code>usbflash://filepath</code>.
Defaults	none	
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

Usage Information

 **NOTE:** A filepath that contains a dot (.) is not supported.

show running-config

Display the current configuration and display changes from the default values.

Syntax `show running-config [entity] [configured] [status] [compressed]`

Parameters	entity	(OPTIONAL) To display that entity's current (non-default) configuration, enter one of the following keywords: <ul style="list-style-type: none">  NOTE: If you did not configure anything that entity, nothing displays and the prompt returns.
	aaa	for the current AAA configuration
	acl	for the current ACL configuration
	arp	for the current static ARP configuration

as-path	for the current AS-path configuration
bfd	for the current BFD configuration
bgp	for the current BGP configuration
boot	for the current boot configuration
cam-profile	for the current CAM profile in the configuration
class-map	for the current class-map configuration
community-list	for the current community-list configuration
ecmp-group	for the current ECMP group configuration
eis	for the current EIS configuration
ethernet	for the current Ethernet CFM configuration
fefd	for the current FEFD configuration
ftp	for the current FTP configuration
frrp	for the current FRRP configuration
fvrp	for the current FVRP configuration
gvrp	for the current GVRP configuration
host	for the current host configuration
hardware-monitor	for hardware-monitor action-on-error settings
hypervisor	for the current hypervisor configuration
igmp	for the current IGMP configuration
interface	for the current interface configuration
interface port-channel	for the current port-channel interface configuration.
interface tunnel	for all configured tunnels. For a specific tunnel, enter the tunnel ID. The range is from 1 to 16383.
ip	for the current IP configuration
isis	for the current ISIS configuration
line	for the current line configuration
lldp	for the current LLDP configuration
load-balance	for the current port-channel load-balance configuration
logging	for the current logging configuration
mac	for the current MAC ACL configuration
mac-address-table	for the current MAC configuration
management-eis	for the current management EIS configuration
management-route	for the current Management port forwarding configuration
mld	for the current MLD configuration
monitor	for the current Monitor configuration
mroute	for the current Mroutes configuration
msdp	for the current MSDP configuration

ntp	for the current NTP configuration
ospf	for the current OSPF configuration
pim	for the current PIM configuration
policy-map-input	for the current input policy map configuration
policy-map-output	for the current output policy map configuration
po-failover-group	for the current port-channel failover-group configuration
prefix-list	for the current prefix-list configuration
privilege	for the current privilege configuration
qos-policy-input	for the current input QoS policy configuration
qos-policy-output	for the current output QoS policy configuration
radius	for the current RADIUS configuration
redirect-list	for the current redirect-list configuration
redundancy	for the current RPM redundancy configuration
resolve	for the current DNS configuration
rip	for the current RIP configuration
rmon	for the current RMON configuration
route-map	for the current route map configuration
sflow	for the current sFlow configuration
snmp	for the current SNMP configuration
spanning-tree	for the current spanning tree configuration
static	for the current static route configuration
status	for the file status information
support-assist	for the current SupportAssist configuration
tacacs+	for the current TACACS+ configuration
tftp	for the current TFTP configuration
trace-group	for the current trace-group configuration
trace-list	for the current trace-list configuration
uplink-state-group	for the uplink state group configuration
users	for the current users configuration
vlt	for the current VLT configuration
wred-profile	for the current wred-profile configuration

configured (OPTIONAL) Enter the keyword `configuration` to display line card interfaces with non-default configurations only.

status (OPTIONAL) Enter the keyword `status` to display the checksum for the running configuration and the start-up configuration.

compressed (Optional) Enter the keyword `compressed` to display the compressed group configuration. Displays the compressed configuration by grouping all similar configurations. The compression is done only for interface related configurations.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2.(0.0)	Added support for the tunnel and EIS interface types.
9.0.0.0	Added support for the VLT option.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added the hardware-monitor option.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Expanded to include the last configuration change, start-up last updated (date and time), and who made the change.
6.5.4.0	Added the status option.

Example

```
DellEMC# show running-config
Current Configuration ...
! Version 9-0(2-0)
! Last configuration change at Thu Apr 18 10:18:39 2013 by admin
! Startup-config last updated at Thu Apr 18 10:18:40 2013 by admin
!
boot system stack-unit 0 primary system: A:
boot system stack-unit 0 secondary tftp://10.16.127.35/Dell-
SI-9-0-2-0.bin
boot system stack-unit 0 default system: A:
boot system gateway 10.16.132.254
!
redundancy auto-synchronize full
redundancy disable-auto-reboot stack-unit
!
redundancy disable-auto-reboot stack-unit 0
redundancy disable-auto-reboot stack-unit 1
redundancy disable-auto-reboot stack-unit 2
redundancy disable-auto-reboot stack-unit 3
redundancy disable-auto-reboot stack-unit 4
redundancy disable-auto-reboot stack-unit 5
```

```
!
hardware watchdog stack-unit 0
hardware watchdog stack-unit 1
hardware watchdog stack-unit 2
```

Example

```
DellEMC# show running-config status
running-config bytes 10257, checksum 0xFD33339F
startup-config bytes 10257, checksum 0xFD33339F
```

Usage Information

The `status` option allows you to display the size and checksum of the running configuration and the startup configuration.

show startup-config

Display the startup configuration.

Syntax `show startup-config`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on S-Series
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Expanded to include the last configuration change, start-up last updated (date and time), and who made the change.

Example

```
DellEMC# show startup-config
! Version 9-0(2-0)
! Last configuration change at Thu Apr 18 10:18:39 2013 by admin
! Startup-config last updated at Thu Apr 18 10:18:40 2013 by admin
!
boot system stack-unit 0 primary system: A:
boot system stack-unit 0 secondary tftp://10.16.127.35/Dell-
SI-9-0-2-0.bin
boot system stack-unit 0 default system: A:
boot system gateway 10.16.132.254
!
```

```

redundancy auto-synchronize full
redundancy disable-auto-reboot stack-unit
...

```

Related Commands

- [show running-config](#) – displays the current (running) configuration.

show version

Display the current Dell EMC Networking Operating System (OS) version information on the system.

Syntax `show version`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(1.0)	Introduced on the S5048F-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Command Fields

Lines Beginning With	Description
Dell EMC Network...	Name of the operating system
Dell EMC Operating...	OS version number
Dell EMC Application...	Software version
Copyright (c)...	Copyright information
Build Time...	Software build's date stamp
Build Path...	Location of the software build files loaded on the system

Lines	Description
Beginning With	
Dell EMC Networking OS uptime is...	Amount of time the system has been up
System image...	Image file name
System Type:	System name
Control Processor:...	Control processor information and amount of memory on processor
128K bytes...	Amount and type of memory on system
1 Route Processor...	Hardware configuration of the system, including the number and type of physical interfaces available

Example (S-Series)

```
DellEMC# show version
Dell Real Time Operating System Software
Dell Operating System Version: 1.0
Dell Application Software Version: E7-8-1-13
Copyright (c) 1999-2008 by Dell Force10 Networks, Inc.
Build Time: Mon Nov 24 18:59:27 2008
Build Path: /sites/sjc/work/sw/build/build2/Release/E7-8-1/SW/SRC
Dell uptime is 1 minute(s)
System Type: S50V
Control Processor: MPC8451E with 252739584 bytes of memory.

32M bytes of boot flash memory.

 1 48-port E/FE/GE with POE (SB)
48 GigabitEthernet/IEEE 802.3 interface(s)
 4 Ten GigabitEthernet/IEEE 802.3 interface(s)
DellEMC#
```

upgrade system

Upgrade the Dell EMC Networking OS image. To upgrade the boot flash or boot selector image, use the `upgrade boot` command.

Syntax `upgrade system {flash: | ftp: | nfsmount: | scp: | stack-unit {stack-unit-id | all} | tftp: | usbflash:} file-url {A: |B:}`

Parameters	Description
system	Enter the keyword <code>system</code> to upgrade the operating system (OS) image.
flash: <i>file-url</i>	Enter the keyword <code>flash:</code> and specify the location of the image file in the format <code>//<i>directory-path</i></code> or press Enter to launch a prompt sequence.
ftp: <i>file-url</i>	Enter the keyword <code>ftp:</code> and specify the location of the image file in the format <code>//<i>userid:password@host-ip/filepath</i></code> or press Enter to launch a prompt sequence.
nfsmount:// <<i>mount-point</i>>/ <i>filepath</i>	Enter the keyword <code>nfsmount:</code> and specify the location of the image file in the format <code>//<<i>mount-point</i>>/<i>filepath</i></code> .
scp: <i>file-url</i>	Enter the keyword <code>scp:</code> and specify the location of the image file in the format <code><i>userid:password@host-ip/filepath</i></code> or press Enter to launch a prompt sequence.
stack-unit <i>stack-unit-id</i>	Enter the keyword <code>stack-unit</code> and specify the stack-unit ID to sync the image to that stack-unit.

stack-unit all	Enter the keyword <code>stack-unit</code> followed by the keyword <code>all</code> to sync the image on all stack-units.
tftp: file-url	Enter the keyword <code>tftp:</code> and specify the location of the image file in the format <code>//host-ip/filepath</code> or press Enter to launch a prompt sequence.
usbflash: file-path	Enter the keyword <code>usbflash:</code> and specify the location of the source file in the format <code>//directory-path</code> to upgrade from an external flash device or press Enter to launch a prompt sequence.
A: B:	Specify the flash partition of the operating-system image to be upgraded.

Defaults

none

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Enhanced to specify the MD5, SHA1, or SHA256 hash of the OS image that the system uses to validate the image during reboot.
9.12(1.0)	Introduced on the S5048F-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for NFS mount.
9.2(1.0)	Introduced on the Z9500.
9.0(0.0)	Added support for IPv6 for the <code>file-url</code> parameter.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000. Added support for the SSD on the Z9000 only.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added support for TFTP and SCP.
7.6.1.0	Introduced on the S-Series.

Usage Information

RFC 3986 specifies that IPv6 host addresses in a uniform resource identifier (URI) must be enclosed in square brackets, [X:X:X:X:X]. For maximum flexibility this command accepts IPv6 host addresses with or without the square brackets.

After you upgrade the system image, using the `upgrade system` command, specify the default boot location using the `boot system` command. Save the configuration to the startup configuration file using the `write memory` command and reload the system using the `reload` command to use the new Dell EMC Networking OS software.

If you enable the verified boot feature using the `verified boot` command, the `upgrade system` command prompts you to enter the hash value of the Dell EMC Networking OS image. This is applicable only for the local partitions such as A: or B:. You can get the hash from the iSupport page.

NOTE: You can apply a set of configurations, available only in the new version to which you want to upgrade the system to, without having to re-boot the system twice. In order to accomplish this seamless upgrade, perform the following tasks:

1. Upgrade the system image to the new image and configure the primary partition to boot from the new image using the `boot system` command.

- Update the startup configuration file with the new set of configurations and then reload the device using the `reload` command.

The new set of configurations are parsed from the startup configuration file and applied to the NVRAM. During the system boot up, the new set of configurations are applied to the system from the updated NVRAM configurations.

The following commands require NVRAM write to take effect in a single reload:

- Forwarding CLIs:
 - `hardware forwarding-table mode {scaled-l2-switch | scaled-l3-routes | scaled-l3-hosts}`
 - `cam-ipv6 extended-prefix {1024 | 2048 | 3072}`
 - `ip ecmp-group maximum-paths 2-64`
- ACL CAM carving related CLIs:
 - `cam-acl cli`
 - `cam-acl-vlan cli`
 - `cam-acl-egress cli`
- Feature keyword CLIs:
 - `feature udf-acl`
 - `feature acl-range`

Example

```
DellEMC# upgrade system tftp://10.11.8.12/dv-rainier-13 a:
00:39:32 : Discarded 1 pkts. Expected block num : 51.
Received block num: 50
!00:39:36 : Discarded 1 pkts. Expected block num : 65.
Received block num: 64
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
.....!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
93924044 bytes successfully copied
System image upgrade completed successfully.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Image upgraded to all
DellEMC#
```

The following example shows that the system prompts for the hash value of the OS image with the OS image verification feature enabled:

```
Dell# upgrade system tftp://10.16.127.35/FTOS-SE-9.11.0.1 A:
Hash Value: e42e2548783c2d5db239ea2fa9de4232
!!!!!!!!!!!!!!!!!!!!!!!!!!!!
```

upgrade

Upgrade the bootflash image or system image of the management unit.

Syntax

```
upgrade {boot | system} {ftp: | scp: | tftp: | flash: {A: |B:} | stack-unit
| usbflash | slot0:} file-url
```

Parameters

- boot** Enter the keyword `boot` to change the boot image.
- system** Enter the keyword `system` to change the system image.
- ftp:** After entering the keyword `ftp:`, you can either follow it with the location of the source file in this form: `//userid:password@hostip/filepath` or press Enter to launch a prompt sequence.

- scp:** After entering the keyword `scp:`, you can either follow it with the location of the source file in this form: `//userid:password@hostip/filepath` or press Enter to launch a prompt sequence.
- slot0:** After entering the keyword `slot0:`, you can either follow it with the location of the source file in this form: `//hostlocation/filepath` or press Enter to launch a prompt sequence.
- tftp:** After entering the keyword `tftp:`, you can either follow it with the location of the source file in this form: `//hostlocation/filepath` or press Enter to launch a prompt sequence.
- flash:** After entering the keyword `flash:`, you can either follow it with the location of the source file in this form: `flash//filepath` or press Enter to launch a prompt sequence.
- A: | B:** Enter the partition to upgrade from the flash.
- stack-unit:** Enter the keywords `stack-unit:` to synch the image to the stack-unit.
- file-url** Enter the following location keywords and information to upgrade using an Dell EMC Networking OS image other than the one currently running:
- To specify an Dell EMC Networking OS image on the internal flash, enter `flash:// file-path/filename`.
 - To specify an Dell EMC Networking OS image on an FTP server, enter `ftp:// user:password@hostip/filepath`.
 - To specify an Dell EMC Networking OS image on the external flash, enter `slot0://file-path/filename`.
 - To copy a file on a TFTP server, enter `tftp://hostip/filepath/ filename`.
- where `hostip` is either an IPv4 dotted decimal address or an IPv6 URI `[x:x:x::x]` format address.

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0(0.0)	Added support for IPv6 for the <code>file-url</code> parameter.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000. Added support for the SSD on the Z9000 only.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added support for TFTP and SCP.
7.6.1.0	Introduced on the S-Series.

Usage Information RFC 3986 specifies that IPv6 host addresses in a uniform resource identifier (URI) must be enclosed in square brackets, `[X:X:X::X]`. For maximum flexibility this command accepts IPv6 host addresses with or without the square brackets.

Reload Dell EMC Networking OS after executing this command. To copy Dell EMC Networking OS from the management unit to one or more stack members, use the upgrade `system stack-unit (S-Series stack member)` command.

Example

```
DellEMC# upgrade system ?
ftp: Copy from remote file system (ftp://userid:password@hostip/
```

```
filepath)
scp: Copy from remote file system (scp://userid:password@hostip/
filepath)
tftp: Copy from remote file system (tftp://hostip/filepath)
DellEMC# upgrade system ftp://username:password@10.11.1.1/FTOS-
SB-7.7.1.0.bin
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Erasing Sseries ImageUpgrade Table of Contents, please wait
.!.....
.....
.....
.....
.....
.....
.....
.....
.....!
12946259 bytes successfully copied
DellEMC# reload
DellEMC#
```

Control and Monitoring

This section contains command information to configure and monitor the system, including Telnet, file transfer protocol (FTP), and trivial file transfer protocol (TFTP).

Topics:

- [asf-mode](#)
- [banner exec](#)
- [banner login](#)
- [banner motd](#)
- [cam-acl](#)
- [cam-acl-vlan](#)
- [clear average-power](#)
- [clear line](#)
- [configure](#)
- [disable](#)
- [do](#)
- [enable](#)
- [enable optic-info-update interval](#)
- [enable xfp-power-updates](#)
- [end](#)
- [exec-timeout](#)
- [exit](#)
- [ftp-server enable](#)
- [ftp-server topdir](#)
- [ftp-server username](#)
- [hostname](#)
- [ip http source-interface](#)
- [ip ftp password](#)
- [ip ftp source-interface](#)
- [ip ftp username](#)
- [ip ftp vrf](#)
- [ip telnet server enable](#)
- [ip telnet server vrf](#)
- [ip telnet source-interface](#)
- [ip telnet vrf](#)
- [ip tftp source-interface](#)
- [ip tftp vrf](#)
- [line](#)
- [login concurrent-session](#)
- [login statistics](#)
- [motd-banner](#)
- [ping](#)
- [reload](#)
- [send](#)
- [service timestamps](#)
- [show alarms](#)
- [show cam-acl-vlan](#)
- [show command-history](#)
- [show cpu-traffic-stats](#)
- [show debugging](#)

- show environment
- show inventory
- show login statistics
- show memory
- show processes cpu
- show processes ipc flow-control
- show processes memory
- show reset-reason
- show software ifm
- show system
- show tech-support
- ssh-peer-stack-unit
- telnet
- telnet-peer-stack-unit
- terminal length
- traceroute
- undebg all
- virtual-ip
- write

asf-mode

Enable alternate store and forward (ASF) mode and forward packets as soon as a threshold is reached.

Syntax

```
asf-mode stack-unit {unit-id | all} queue size
```

To return to standard Store and Forward mode, use the `no asf-mode` command.

Parameters

- unit-id** Enter the stack member unit identifier of the stack member to reset.
- queue size** Enter the queue size of the stack member. The range is from 0 to 15.

Defaults

Not configured

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P1)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information

You *must* save the configuration and reload the system to implement ASF. When you enter the command, the system sends a message stating that the new mode is enabled when the system reloads.

banner exec

Configure a message that is displayed when you enter EXEC mode.

Syntax	<code>banner exec c line c</code>	To delete a banner, use the <code>no banner exec</code> command.
Parameters	c	Enter the keywords <code>banner exec</code> , then enter a character delineator, represented here by the letter <code>c</code> . Press ENTER .
	line	Enter a text string for your banner message ending the message with your delineator. In the following example, the delineator is a percent character (%); the banner message is "testing, testing".
Defaults	No banner is displayed.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original Command

Usage Information

After entering the banner login command, type one or more spaces and a delineator character. Enter the banner text then the second delineator character. When the user is connected to the router, if a message of the day banner is configured, it displays first. If no message of the day banner is configured, the login banner and prompt appear. After the user has logged in, the banner EXEC (if configured) displays.

Example

```
DellEMC(conf)# banner exec ?
LINE c banner-text c, where 'c' is a delimiting character
DellEMC(conf)# banner exec %
Enter TEXT message. End with the character '%'.
This is the banner%
DellEMC(conf)# end
DellEMC# exit
2d18h1m: %STKUNIT1-M:CP %SEC-5-LOGOUT: Exec session is terminated on
console

This is the banner

Dell con0 now available

Press RETURN to get started.
2d18h2m: %STKUNIT1-M:CP %SEC-5-LOGIN_SUCCESS: Login successful on console

This is the banner
DellEMC>
```

Related Commands

- [line](#) — enables and configures the console and virtual terminal lines to the system.

banner login

Set a message of the day banner to appear after logging on to the system.

Syntax

```
banner login {acknowledgement | keyboard-interactive | c line c}
```

Enter `no banner login` to delete the banner text. Enter `no banner login keyboard-interactive` to automatically go to the banner message prompt (does not require a carriage return).

Parameters

keyboard-interactive	Enter the <code>keyboard-interactive</code> keyword and then press Enter (carriage return) to retrieve the message banner prompt.
acknowledgement	Enter the <code>acknowledgement</code> keyword to require a positive acknowledgement from the user while logging in to the system.
c	Enter a delineator character to specify the start and end of the text banner. You cannot use the delineator character in the banner message.
line	Enter text string for your text banner message, with a maximum of 50 lines and up to 255 characters per line.

Defaults

No banner is configured and a carriage return (CR) is required when creating a banner.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced the <code>acknowledgement</code> keyword.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.2.1.0	Introduced the keyword <code>keyboard-interactive</code> .
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

Usage Information

Enter the banner login command, type one or more spaces and a delineator character, type the banner text, and then type the second delineator character. The message of the day banner displays first when you are connected to the router; otherwise the login banner and prompt appear. After you have logged in, the banner EXEC (if configured) displays.

Example

```
DelleMC(conf)#banner login ?
acknowledgement      Require positive acknowledgment after login
prompt
keyboard-interactive  Press enter key to get prompt
LINE                  c banner-text(max length 255) c, where 'c' is a
delimiting character
DelleMC(conf)#no banner login ?
acknowledgement      Disable positive acknowledgment required after
login prompt
keyboard-interactive  Prompt will be displayed by default
```

If you configure the `acknowledgement` keyword, the system requires a positive acknowledgement from the user while logging in to the system.

```
$ telnet 10.11.178.16
Trying 10.11.178.16...
Connected to 10.11.178.16.
Escape character is '^]'.
THIS IS A LOGIN BANNER. PRESS 'Y' TO ACKNOWLEDGE. ACKNOWLEDGE?

[y/n]: y
Login: admin
Password:
```

Related Commands

- [banner motd](#) — sets a Message of the Day banner.
- [banner exec](#) — enables the display of a text string when you enter EXEC mode.

banner motd

Set a message of the day (MOTD) banner.

Syntax	<code>banner motd c line c</code> To delete a Message of the Day banner, enter no banner motd .
Parameters	<p>c Enter a delineator character to specify the limits of the text banner. The delineator is a percent character (%).</p> <p>line Enter a text string for your MOTD banner the message with your delineator. The delineator is a percent character (%).</p>
Defaults	No banner is configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

Usage Information	After entering the banner login command, type one or more spaces and a delineator character. Enter the banner text then the second delineator character. When the user is connected to the router, if a message of the day banner is configured, it displays first. If no message of the day banner is configured, the login banner and prompt appear. After the user has logged in, the banner EXEC (if configured) displays.
Related Commands	<ul style="list-style-type: none">• banner exec — enables the display of a text string when you enter EXEC mode.• banner login — sets a banner to display after successful login to the system.

cam-acl

Allocate content addressable memory (CAM) for IPv4 and IPv6 ACLs.

Syntax

Parameters

default

Use the default CAM profile settings and set the CAM as follows:

- L2Acl : 2
- Ipv4Acl : 2
- Ipv6Acl : 0
- Ipv4Qos : 2
- L2Qos : 2
- L2PT : 0
- IpMacAcl : 1
- VmanQos : 0
- EtsAcl : 0
- FcoeAcl : 0
- iscsiOptAcl : 0
- ipv4pbr : 0
- vrfv4Acl : 0
- Openflow : 0
- fedgovacl : 0
- nlbclusteracl: 0

Allocate space to each CAM region.

Enter the CAM profile name then the amount of CAM space to be allotted. The total space allocated must equal to . The ipv6acl range must be a factor of 2.

Enter 4 or 8 for the number of OpenFlow FP blocks.

- 4: Creates 242 entries for use by the OpenFlow controller (256 total entries minus the 14 entries reserved for internal functionality)
- 8: Creates 498 entries for use by the OpenFlow controller (512 total entries minus the 14 entries reserved for internal functionality)

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.2(0.2)	Added support for the <code>fcoe</code> parameter on the S4810 and S4820T.
9.1(0.0)	Added support for OpenFlow on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Added the keywords <code>fcoeacl</code> and <code>iscsioptacl</code> on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Added the keywords <code>ecfmacl</code> , <code>vman-qos</code> , and <code>vman-dual-qos</code> .
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.

Usage Information

For the new settings to take effect, save the new CAM settings to the startup-config (`write-mem` or `copy run start`) then reload the system.

The total amount of space allowed is 16 FP Blocks. System flow requires three blocks and these blocks cannot be reallocated. The `ipv4acl` profile range is from 1 to 8.

When configuring space for IPv6 ACLs, the total number of Blocks must equal 13.

Ranges for the CAM profiles are from 1 to 10, except for the `ipv6acl` profile which is from 0 to 10. The `ipv6acl` allocation must be a factor of .

If you enabled BMP, to perform a reload on the chassis to upgrade any configuration changes that have changed the NVRAM content, use the `reload conditional nvram-cfg-change` command.

cam-acl-vlan

Specify the number of VFP blocks allocated to OpenFlow.

Syntax `cam-acl-vlan {default | vlanopenflow {0|1}}`

Defaults Disabled.

Parameters

default	Reset VLAN CAM ACL entries to default settings
vlanopenflow	Enter the number 1 to allocate VFP blocks and enable OpenFlow. (Default) Enter the number 0 to disable OpenFlow.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.1.(0.0)	Introduced on S4810.
8.3.19.0	Introduced on the S4820T.

Usage Information

Reboot the switch after changing the parameter values for changes to take effect.

For platform-specific instructions about using this command, see the SDN section of the *Dell EMC Networking OS Configuration Guide*.

clear average-power

Reset the average power and average power start time.

Syntax `clear average-power stack-unit {stack-unit-number}`

Parameters

stack-unit-number	Enter the stack unit number.
--------------------------	------------------------------

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.1P1)	Introduced on all Dell EMC Networking OS platforms

Usage Information

This command resets the average power and average power start time to the current time. Average power and average power start time will be calculated from the reset time (i.e current time).

Example

```
DellEMC#clear average-power stack-unit 1
Proceed to clear Average power ? Confirm [yes/no]:yes
DellEMC#
```

clear line

Reset a terminal line.

Syntax

```
clear line {line-number | console 0 | vty number}
```

Parameters

line-number	Enter a number for one of the 12 terminal lines on the system. The range is from 0 to 11.
aux 0	Enter the keywords <code>aux 0</code> to reset the auxiliary port.
console 0	Enter the keywords <code>console 0</code> to reset the console port.
vtv number	Enter the keyword <code>vtv</code> then a number to clear a terminal line. The range is from 0 to 9.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

configure

Enter CONFIGURATION mode from EXEC Privilege mode.

Syntax

```
configure [terminal]
```

Parameters

terminal (OPTIONAL) Enter the keyword `terminal` to specify that you are configuring from the terminal.

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

```
DellEMC# configure
DellEMC(conf)#
```

disable

Return to EXEC mode.

Syntax	<code>disable [level]</code>
Parameters	level (OPTIONAL) Enter a number for a privilege level of the Dell EMC Networking OS. The range is from 0 to 15. The default is 1 .
Defaults	1
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

do

Allows the execution of most EXEC-level commands from all CONFIGURATION levels without returning to the EXEC level.

Syntax	<code>do command</code>
Parameters	command Enter an EXEC-level command.
Defaults	none
Command Modes	<ul style="list-style-type: none">• CONFIGURATION• INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

The following commands are *not* supported by the do command:

- enable
- disable
- exit
- config

Example

```
DelleMC(conf-if-te-5/1)# do clear counters
Clear counters on all interfaces [confirm]
DelleMC(conf-if-te-5/1)#
DelleMC(conf-if-te-5/1)# do clear logging
Clear logging buffer [confirm]
DelleMC(conf-if-te-5/1)#
DelleMC(conf-if-te-5/1)# do reload
System configuration has been modified. Save? [yes/no]: n
Proceed with reload [confirm yes/no]: n
```

enable

Enter EXEC Privilege mode or any other privilege level configured. After entering this command, you may need to enter a password.

Syntax `enable [level]`

Parameters *level* (OPTIONAL) Enter a number for a privilege level of Dell EMC Networking OS. The range is from 0 to 15.

Defaults **15**

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

Users entering EXEC Privilege mode or any other configured privilege level can access configuration commands. To protect against unauthorized access, use the `enable password` command to configure a password for the `enable` command at a specific privilege level. If no privilege level is specified, the default is privilege level **15**.

 **NOTE:** If you are authorized for the EXEC Privilege mode by your role, you do not need to enter an `enable password`.

Related Commands

- `enable password` — configures a password for the `enable` command and to access a privilege level.

enable optic-info-update interval

Enable polling intervals of optical information updates for simple network management protocol (SNMP).

Syntax

```
enable optic-info-update [interval seconds]
```

To disable optical power information updates, use the `no enable optic-info-update interval` command.

Parameters

interval seconds Enter the keyword `interval` then the polling interval in seconds. The range is from 120 to 6000 seconds. The default is **300 seconds** (5 minutes).

Defaults

Disabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Replacement command for the S4820T. Replaces the <code>enable xfp-power-updates</code> command.
8.3.11.4	Replacement command for the Z9000. Replaces the <code>enable xfp-power-updates</code> command.
8.3.10.0	Replacement command for the S4810 only. Replaces the <code>enable xfp-power-updates</code> command.

Usage Information

To enable polling and to configure the polling frequency, use this command.

enable xfp-power-updates

Enable 10-gigabit small form-factor pluggable (XFP) power updates for SNMP.

Syntax	<code>enable xfp-power-updates interval seconds</code>
Parameters	interval <i>seconds</i> Enter the keyword <code>interval</code> then the polling interval in seconds. The range is from 120 to 6000 seconds. Default: 300 seconds (5 minutes).
Defaults	Disabled
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

Version	Description
8.3.19.0	Deprecated command for S4820T. Replaced by the <code>enable optic-info-update interval</code> command to update information on temperature and power monitoring in the SNMP MIB.
8.3.11.4	Deprecated command for Z9000. Replaced by the <code>enable optic-info-update interval</code> command to update information on temperature and power monitoring in the SNMP MIB.
8.3.10.0	Deprecated command for the S4810 only. Replaced by the <code>enable optic-info-update interval</code> command to update information on temperature and power monitoring in the SNMP MIB.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information

The chassis MIB contains the entry `chSysXfpRecvPower` in the `chSysPortTable` table. Periodically, IFA polls the XFP power for each of the ports and sends the values to IFM where it is cached.

To enable polling and to configure the polling frequency, use this command.

end

Return to EXEC Privilege mode from other command modes (for example, CONFIGURATION or ROUTER OSPF modes).

Syntax end

- Command Modes**
- CONFIGURATION
 - SPANNING TREE
 - MULTIPLE SPANNING TREE
 - LINE
 - INTERFACE
 - TRACE-LIST
 - VRRP
 - ACCESS-LIST
 - PREFIX-LIST
 - AS-PATH ACL
 - COMMUNITY-LIST
 - ROUTER OSPF
 - ROUTER RIP
 - ROUTER ISIS
 - ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.
E-Series	Original command.

Related Commands

- [exit](#) — returns to the lower command mode.

exec-timeout

Set a time interval that the system waits for input on a line before disconnecting the session.

Syntax `exec-timeout minutes [seconds]`

To return to default settings, use the `no exec-timeout` command.

Parameters

minutes Enter the number of minutes of inactivity on the system before disconnecting the current session. The range is from 0 to 35791. The default is **10 minutes** for the console line and **30 minutes** for the VTY line.

seconds (OPTIONAL) Enter the number of seconds. The range is from 0 to 2147483. The default is **0 seconds**.

Defaults **10 minutes** for console line; **30 minutes** for VTY lines; **0 seconds**

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information To remove the time interval, enter `exec-timeout 0 0`.

Example

```
Dell con0 is now available
Press RETURN to get started.
DellEMC>
```

exit

Return to the lower command mode.

Syntax `exit`

- Command Modes**
- EXEC Privilege
 - CONFIGURATION
 - LINE, INTERFACE
 - TRACE-LIST
 - PROTOCOL GVRP
 - SPANNING TREE
 - MULTIPLE SPANNING TREE
 - MAC ACCESS LIST
 - ACCESS-LIST
 - AS-PATH ACL
 - COMMUNITY-LIST
 - PREFIX-LIST
 - ROUTER OSPF
 - ROUTER RIP
 - ROUTER ISIS
 - ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Related Commands

- [end](#) — returns to EXEC Privilege mode.

ftp-server enable

Enable FTP server functions on the system.

Syntax `ftp-server [vrf vrf-name] enable`

Parameters `vrf vrf-name` Enter the keyword `vrf` and then the name of the VRF to enable the FTP server to listen to that VRF instance.

NOTE: Use this attribute to specify the VRF that is used by the FTP server to accept client connections. If no VRF is specified, then the default VRF is used.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

```
morpheus% ftp 10.31.1.111
Connected to 10.31.1.111.
220 DellEMC(1.0) FTP server ready
Name (10.31.1.111:dch): dch
331 Password required
Password:
230 User logged in
ftp> pwd
257 Current directory is "flash:"
ftp> dir
200 Port set okay
150 Opening ASCII mode data connection
size  date           time name
-----
512 Jul-20-2004 18:15:00 tgting
512 Jul-20-2004 18:15:00 diagnostic
512 Jul-20-2004 18:15:00 other
512 Jul-20-2004 18:15:00 tgt
226 Transfer complete
329 bytes received in 0.018 seconds (17.95 Kbytes/s)
ftp>
```

ftp-server topdir

Specify the top-level directory to be accessed when an incoming FTP connection request is made.

Syntax	<code>ftp-server topdir <i>directory</i></code>
Parameters	<i>directory</i> Enter the directory path.
Defaults	The internal flash is the default directory.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information	After you enable FTP server functions with the <code>ftp-server enable</code> command, Dell EMC Networking recommends specifying a top-level directory path. Without a top-level directory path specified, the Dell EMC Networking OS directs users to the flash directory when logging in to the FTP server.
Related Commands	<ul style="list-style-type: none">• ftp-server enable — enables FTP server functions on the E-Series.• ftp-server username — sets a username and password for incoming FTP connections to the E-Series.

ftp-server username

Create a user name and associated password for incoming FTP server sessions.

Syntax	<code>ftp-server username <i>username</i> <i>password</i> [<i>encryption-type</i>] <i>password</i></code> To delete a user name and its password, use the <code>no ftp-server username <i>username</i></code> command.
Parameters	<i>username</i> Enter a text string up to 40 characters long as the user name.

password Enter the keyword `password` then a string up to 40 characters long as the password. Without specifying an encryption type, the password is unencrypted.

password

encryption-type (OPTIONAL) After the keyword `password`, enter one of the following numbers:

- 0 (zero) for an unencrypted (clear text) password
- 7 (seven) for a hidden text password

Defaults Not enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

hostname

Set the host name of the system.

Syntax `hostname name`

Parameters **name** Enter a text string, up to 32 characters long.

Defaults Dell

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

The hostname is used in the prompt.

ip http source-interface

Specify an interface as the source interface for HTTP connections.

Syntax

ip http source-interface *interface*

To delete an interface, use the **no ip http source-interface** *interface* command.

Parameters

interface

Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

The IP address on the system that is closest to the Telnet address is used in the outgoing packets.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.1)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.3.11.1	Introduced on the Z9000
8.2.1.0	Increased number of VLANs to 4094 (was 2094)
8.1.1.0	Introduced on E-Series
7.6.1.0	Support added for S-Series
7.5.1.0	Introduced on C-Series

ip ftp password

Specify a password for outgoing FTP connections.

Syntax	<code>ip ftp password [<i>encryption-type</i>] <i>password</i></code> To remove a password and return to the default setting, use the <code>no ip ftp password [<i>password</i>]</code> command.
Parameters	<p><i>encryption-type</i> (OPTIONAL) Enter one of the following numbers:</p> <ul style="list-style-type: none"> 0 (zero) for an unencrypted (clear text) password 7 (seven) for a hidden text password <p><i>password</i> Enter a string up to 40 characters as the password.</p>
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

The password is listed in the configuration file; you can view the password by entering the `show running-config ftp` command.

Use the `ip ftp password` command when you use the `ftp: parameter` in the `copy` command.

Related Commands

ip ftp source-interface

Specify an interface's IP address as the source IP address for FTP connections.

Syntax `ip ftp source-interface interface`

To delete an interface, use the `no ip ftp source-interface interface` command.

Parameters

- interface** Enter the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
 - For a tunnel interface, enter the keyword `tunnel`.

Defaults The IP address on the system that is closest to the Telnet address is used in the outgoing packets.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
8.2.1.0	Increased number of VLANs on ExaScale to 4094 (was 2094).
8.1.1.0	Introduced on the E-Series ExaScale.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

ip ftp username

Assign a user name for outgoing FTP connection requests.

Syntax	<code>ip ftp username <i>username</i></code> To return to anonymous FTP connections, use the <code>no ip ftp username [<i>username</i>]</code> command.
Parameters	<i>username</i> Enter a text string as the user name up to 40 characters long.
Defaults	No user name is configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
E-Series	Original command.

Usage Information

Configure a password with the `ip ftp password` command.

Related Commands

- `ip ftp password` — sets the password for FTP connections.

ip ftp vrf

Configures an FTP client with a VRF that is used to connect to the FTP server.

Syntax

`ip ftp [vrf {vrf-name | management}]`

To undo the FTP client configuration, use the `ip ftp [vrf vrf-name]` command.

Parameters

vrf-name	Enter the <i>vrf-name</i> to specify the VRF that is used by the FTP client.
management	Enter the keyword <i>management</i> to specify that the VRF used by the FTP client is a management VRF.

Defaults

Disabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

Use this command to make the FTP clients VRF-aware. The VRF name that you specify is used by the FTP client to reach the FTP server. If no VRF name is specified, then the default VRF is used.

ip telnet server enable

Enable the Telnet server on the switch.

Syntax

`ip telnet server enable`

To disable the Telnet server, use the `no ip telnet server enable` command.

Defaults

Enabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Related Commands

- [ip ssh server](#) — enables the secure shell (SSH) server on the system.

ip telnet server vrf

Configures the TELNET server on either a specific VRF or a management VRF.

S5000

Syntax

```
ip telnet server vrf {vrf-name | any | management}
```

To undo the TELNET server configuration, use the `no ip telnet server [vrf vrf-name]` command.

Parameters

vrf-name	Enter the <code>vrf-name</code> to specify the VRF that is used by the TELNET server.
any	Enter the keyword <code>any</code> to enable server from any VRF.
management	Enter the keyword <code>management</code> to specify a management VRF that is used by the TELNET server.

Defaults

Disabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Usage Information

You can enable the TELNET server on either a management VRF or a user-defined VRF but not both. If you do not specify a VRF name, then the TELNET server is enabled on the default VRF.

Example

```
DellEMC(conf)# ip telnet server vrf vrf1
DellEMC(conf)# no ip telnet server vrf
DellEMC(conf)# ip telnet server vrf management
DellEMC(conf)# no ip telnet server vrf
DellEMC(conf)#
```

ip telnet source-interface

Set an interface's IP address as the source address in outgoing packets for Telnet sessions.

Syntax

```
ip telnet source-interface interface
```

To return to the default setting, use the `no ip telnet source-interface [interface]` command.

Parameters

interface

Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For Loopback interfaces, enter the keyword `loopback` then a number from zero (0) to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- For a tunnel interface, enter the keyword `tunnel`.

Defaults

The IP address on the system that is closest to the Telnet address is used in the outgoing packets.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
8.2.1.0	Increased number of VLANs on ExaScale to 4094 (was 2094).
8.1.1.0	Introduced on the E-Series ExaScale.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

Related Commands [telnet](#) — telnet to another device.

ip telnet vrf

Configures a TELNET client to use a specific VRF.

S5000

Syntax `ip telnet [vrf vrf-name]`
 To undo the TELENET client configuration, use the `ip telnet [vrf vrf-name]` command.

Parameters `vrf vrf-name` Enter the keyword `vrf` and then the name of the VRF to specify the VRF that is used by the TELENET client.

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *FTOS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Usage Information If you configure a TELNET client to use a specific VRF, then you need not explicitly specify the same VRF during the TELNET client sessions corresponding to that VRF.

Example

```
Dell(conf)# ip telnet vrf vrf1
Dell(conf)# do telnet 10.10.10.2
Dell(conf)# no ip telnet vrf vrf1
Dell(conf)#
```

ip tftp source-interface

Assign an interface's IP address in outgoing packets for TFTP traffic.

Syntax

```
ip tftp source-interface interface
```

To return to the default setting, use the `no ip tftp source-interface interface` command.

Parameters

interface

Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

The IP address on the system that is closest to the Telnet address is used in the outgoing packets.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4820T.
8.5.1.0	Added support for 4-port 40G line cards.
8.2.1.0	Increased number of VLANs to 4094 (was 2094).
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

ip tftp vrf

Configures an TFTP client with a VRF that is used to connect to the TFTP server.

Syntax	<code>ip tftp [vrf vrf-name]</code> To undo the TFTP client configuration, use the <code>no ip tftp [vrf vrf-name]</code> command.
Parameters	vrf vrf-name Enter the keyword <code>vrf</code> and then the name of the VRF to specify the VRF that is used by the TFTP client.
Defaults	Disabled
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Usage Information	Use this command to make the TFTP clients VRF aware. The VRF name that you specify is used by the TFTP client to reach the TFTP server. If no VRF is specified, then the default VRF is used.
Related Commands	<ul style="list-style-type: none">• ftp-server topdir — sets the directory to be used for incoming FTP connections.• ftp-server username — sets a username and password for incoming FTP connections.

line

Enable and configure console and virtual terminal lines to the system. This command accesses LINE mode, where you can set the access conditions for the designated line.

Syntax	<code>line {aux 0 console 0 vty number [end-number]}</code>
Parameters	aux 0 Enter the keyword <code>aux 0</code> to configure the auxiliary terminal connection. console 0 Enter the keyword <code>console 0</code> to configure the console port. The console option is <code><0-0></code> . vty number Enter the keyword <code>vty</code> then a number from 0 to 9 to configure a virtual terminal line for remote sessions. The system supports 10 remote sessions. end-number (OPTIONAL) Enter a number from 1 to 9 as the last virtual terminal line to configure. You can configure multiple lines at one time.
Defaults	Not configured
Command Modes	CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

Usage Information

You cannot delete a terminal connection.

Related Commands

- [access-class](#) — restricts the incoming connections to a particular IP address in an IP access control list (ACL).
- [password](#) — specifies a password for users on terminal lines.

login concurrent-session

Configures the limit of concurrent sessions for all users on console and virtual terminal lines.

Syntax

```
login concurrent-session {limit number-of-sessions | clear-line enable}  
no login concurrent-session {limit number-of-sessions | clear-line enable}
```

Parameters

- | | |
|--|---|
| limit <i>number-of-sessions</i> | Sets the number of concurrent sessions that any user can have on console and virtual terminal lines. The range is from 1 to 12 (10 VTY lines, one console, and one AUX line). |
| clear-line enable | Enables you to clear your existing sessions. |

Defaults

Not configured. You can use all the available sessions.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820, S5000, S6000, S6000-ON, and Z9500.

Usage Information

You must have either the System Administrator or Security Administrator privileges to configure login concurrent-session limit or to enable clear-line.

To limit the number of concurrent sessions that any user can have on console, auxiliary, and virtual terminal lines, use the `login concurrent-session limit number-of-sessions` command.

If the `login concurrent-session clear-line enable` command is configured, you are provided with an option to clear any of your existing sessions after a successful login authentication. When you reach the maximum concurrent session limit, you can still log in by clearing any of your existing sessions.

Example

The following example shows how to limit the number of concurrent sessions that any user can have to four:

```
DellEMC(conf)# login concurrent-session limit 4
DellEMC(conf)#
```

The following example shows how to use the `login concurrent-session clear-line enable` command.

```
DellEMC(conf)# login concurrent-session clear-line enable
DellEMC(conf)#
```

When you try to log in, the following message appears with all your existing concurrent sessions, providing an option to close any one of the existing sessions:

```
$ telnet 10.11.178.14
Trying 10.11.178.14...
Connected to 10.11.178.14.
Escape character is '^]'.
Login: admin
Password:
Current sessions for user admin:
Line          Location
2 vty 0       10.14.1.97
3 vty 1       10.14.1.97
Clear existing session? [line number/Enter to cancel]:
```

When you try to create more than the permitted number of sessions, the following message appears, prompting you to close one of your existing sessions. Close any of your existing sessions to log in to the system.

```
$ telnet 10.11.178.14
Trying 10.11.178.14...
Connected to 10.11.178.14.
Escape character is '^]'.
Login: admin
Password:
Maximum concurrent sessions for the user reached.
Current sessions for user admin:
Line          Location
2 vty 0       10.14.1.97
3 vty 1       10.14.1.97
```

```
4 vty 2 10.14.1.97
5 vty 3 10.14.1.97
Clear existing session? [line number/Enter to cancel]:
```

Related Commands

- [login statistics](#) — enable and configure user login statistics on console and virtual terminal lines.
- [show login statistics](#) — displays login statistics of users who have used the console or virtual terminal lines to log in to the system.

login statistics

Enable and configure user login statistics on console and virtual terminal lines.

Syntax

```
login statistics {enable | time-period days}
no login statistics {enable | time-period days}
```

Parameters

- enable** Enables login statistics for the last 30 days by default.
- time-period *days*** Sets the number of days the system stores user login statistics; range is from 1 to 30.

Defaults

Not configured

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820, S5000, S6000, S6000-ON, and Z9500.

Usage Information

Only the system and security administrators can configure login activity tracking and view the login activity details of other users.

If you enable user login statistics, the system displays the last successful login details of the current user, the details of any failed login attempts by others, and if the current user's permissions have changed since the last login.

If you use the `login statistics time-period days` command to set a custom time period, the system only reports the login statistics during that interval.

NOTE: Login statistics are not applicable for login sessions that do not use authentication on user names. For example, the system does not report login activity for a telnet session that prompts only a password field.

Example

When you log into the system, it displays a message similar to the following:

```
$ telnet 10.11.178.14
Trying 10.11.178.14...
Connected to 10.11.178.14.
Escape character is '^]'.

```

```

Login: admin
Password:
Last successful login: 12:52:01 UTC Tue Mar 22 2016 Line vty0 (
10.11.178.14 ).
There were 1 unsuccessful login attempt(s) since the last successful
login.
There were 1 unsuccessful login attempt(s) for user admin in the last 30
day(s).
There were 1 successful login attempt(s) for user admin in the last 30
day(s).

```

The preceding message shows that the user had previously logged in to the system using the VTY line from 10.11.178.14. It also displays the number of unsuccessful login attempts since the last login and the number of unsuccessful login attempts in the last 30 days.

```

$ telnet 10.11.178.14
Trying 10.11.178.14...
Connected to 10.11.178.14.
Escape character is '^]'.
Login: admin
Password:
Last successful login: 12:52:01 UTC Tue Mar 22 2016 on console
There were 2 unsuccessful login attempt(s) since the last successful
login.
There were 3 unsuccessful login attempt(s) for user admin in last 12
day(s).
There were 1 successful login attempt(s) for user admin in the last 30
day(s).

```

The preceding message shows that the user had previously logged in to the system using the console line. It also displays the number of unsuccessful login attempts since the last login and the number of unsuccessful login attempts during a custom time period.

Related Commands

- [login concurrent-session](#) — configures the limit of concurrent sessions for all users on console and virtual terminal lines.
- [show login statistics](#) — displays login statistics of users who have used the console or virtual terminal lines to log in to the system.

motd-banner

Enable a message of the day (MOTD) banner to appear when you log in to the system.

Syntax `motd-banner`

To disable the MOTD banner, use the `no motd-banner` command.

Defaults Enabled on all lines.

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command

ping

Test connectivity between the system and another device by sending echo requests and waiting for replies.

Syntax

```
ping [host | ip-address | ipv6-address] [count {number | continuous}]
[datagram-size] [timeout] [source (ip src-ipv4-address) | interface] [tos]
[df-bit (y|n)] [validate-reply(y|n)] [outgoing-interface] [pattern pattern]
[sweep-min-size] [sweep-max-size] [sweep-interval] [ointerface (ip src-
ipv4-address) | interface] [ethernet | vrf vrf-name]
```

Parameters

host	(OPTIONAL) Enter the host name of the devices to which you are testing connectivity.
ip-address	(OPTIONAL) Enter the IPv4 address of the device to which you are testing connectivity. The address must be in the dotted decimal format.
ipv6-address	(OPTIONAL) Enter the IPv6 address, in the x:x:x:x:x format, to which you are testing connectivity.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.
count	Enter the number of echo packets to be sent. The default is 5 . <ul style="list-style-type: none"> number: from 1 to 2147483647 continuous: transmit echo request continuously
datagram size	Enter the ICMP datagram size. The range is from 36 to 15360 bytes. The default is 100 .
timeout	Enter the interval to wait for an echo reply before timing out. The range is from 0 to 3600 seconds. The default is 2 seconds .
source	Enter the IPv4 or IPv6 source ip address or the source interface. For IPv6 addresses, you may enter global addresses only. Enter the IP address in A.B.C.D format. <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a port channel interface, enter the keywords <code>port-channel</code> then a number. For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094. For a Tunnel interface, enter the keyword <code>tunnel</code> then a number from 1 to 16383.

tos	(IPv4 only) Enter the type of service required. The range is from 0 to 255. The default is 0 .
df-bit	(IPv4 only) Enter Y or N for the "don't fragment" bit in IPv4 header. <ul style="list-style-type: none"> • N: Do not set the "don't fragment" bit. • Y: Do set "don't fragment" bit Default is No .
validate-reply	(IPv4 only) Enter Y or N for reply validation. <ul style="list-style-type: none"> • N: Do not validate reply data. • Y: Do validate reply data. Default is No .
outgoing-interface	(IPv6 link-local address) Enter the outgoing interface for ping packets to a destination link-local address.
pattern pattern	(IPv4 only) Enter the IPv4 data pattern. Range: 0-FFFF. Default: 0xABCD .
sweep-min-size	Enter the minimum size of datagram in sweep range. The range is from 52 to 15359 bytes.
sweep-max-size	Enter the maximum size of datagram in sweep range. The range is from 53 to 15359 bytes.
sweep-interval	Enter the incremental value for sweep size. The range is from 1 to 15308 seconds.
interface	(IPv4 only) Enter the outgoing interface for multicast packets. Enter the IP address in A.B.C.D format. <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
ethernet	Enter the keyword <code>ethernet</code> to test layer2 connectivity.
vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF to test connectivity to the VRF.

Defaults None.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)P5	Introduced on the S4048-ON.
9.8(0.0)P2	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.

Version	Description
8.3.19.0	Introduced on the S4820T. Added support for the <code>outgoing-interface</code> option for link-local IPv6 addressing on the S4820T.
8.3.12.0	Added support for the <code>outgoing-interface</code> option for link-local IPv6 addressing on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards.
8.4.1.0	IPv6 pinging available on management interface.
8.3.1.0	Introduced extended ping options.
8.2.1.0	Introduced on the E-Series (IPv6).
8.1.1.0	Introduced on the E-Series (IPv4).
7.9.1.0	Introduced VRF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for IPv6 address on the E-Series.

Usage Information

When you enter the `ping` command without specifying an IP/IPv6 address (Extended Ping), you are prompted for a target IP/IPv6 address, a repeat count, a datagram size (up to 1500 bytes), a timeout (in seconds), and for Extended Commands.

The following table provides descriptions for the `ping` command status response symbols displayed in the output.

Symbol	Description
!	Each exclamation point indicates receipt of a reply.
.	Each period indicates the network server timed out while waiting for a reply.
U	A destination unreachable error PDU was received.
Q	Source quench (destination too busy).
M	Could not fragment.
?	Unknown packet type.
&	Packet lifetime exceeded.

Example (IPv4)

```
DellEMC# ping 172.31.1.255
Type Ctrl-C to abort.
Sending 5, 100-byte ICMP Echos to 172.31.1.255, timeout is 2 seconds:
Reply to request 1 from 172.31.1.208 0 ms
Reply to request 1 from 172.31.1.216 0 ms
Reply to request 1 from 172.31.1.205 16 ms
::
Reply to request 5 from 172.31.1.209 0 ms
Reply to request 5 from 172.31.1.66 0 ms
Reply to request 5 from 172.31.1.87 0 ms
DellEMC#
```

Example (IPv6)

```
DellEMC# ping 100::1
Type Ctrl-C to abort.
```

```
Sending 5, 100-byte ICMP Echos to 100::1, timeout is 2 seconds:
!!!!
Success rate is 100.0 percent (5/5), round-trip min/avg/max = 0/0/0 (ms)
DellEMC#
```

reload

Reboot the system.

Syntax `reload [conditional nvr-am-cfg-change | no-confirm [discard-running]]`

Parameters

conditional	(OPTIONAL) Reload into the Dell EMC Networking Operating System (OS) if the condition is true. A configuration change to the NVRAM requires a switch reload. To reload the switch, select <code>nvr-am-cfg-change</code> .
nvr-am-cfg-change	
no-confirm	Reload the chassis without prompting for further confirmation.
[discard-running]	

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced the <code>no-confirm</code> option.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
9.1(0.0)	Added 'conditional' parameter.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information If you use only the `reload` command, the system boots into the Dell EMC Networking OS.

If there is a change in the running configuration, the system prompts you to save the new configuration when you reload the system using the `reload` command. You can also save your running configuration manually using the `copy running-config` command.

You can use the `conditional` parameter if any configuration changes made to the NVRAM, such as, stack-group and fanout configurations, must be saved.

send

Send messages to one or all terminal line users.

Syntax `send [*] | [line] | [console] | [vty]`

Parameters

- `*` Enter the asterisk character `*` to send a message to all tty lines.
- `line` Send a message to a specific line. The range is from 0 to 11.
- `console` Enter the keyword `console` to send a message to the primary terminal line.
- `vty` Enter the keyword `vty` to send a message to the virtual terminal.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

Usage Information Messages can contain an unlimited number of lines; however, each line is limited to 255 characters. To move to the next line, use `<CR>`. To send the message use `CTR-Z`; to abort a message, use `CTR-C`.

service timestamps

To debug and log messages, add time stamps. This command adds either the uptime or the current time and date.

Syntax `service timestamps {debug | log} [datetime [localtime] [msec] [show-timezone] | uptime]`

To disable timestamping, use the `no service timestamps [debug | log]` command.

Parameters	debug	(OPTIONAL) Enter the keyword <code>debug</code> to add timestamps to debug messages.
	log	(OPTIONAL) Enter the keyword <code>log</code> to add timestamps to log messages with severity from 0 to 6.
	datetime	(OPTIONAL) Enter the keyword <code>datetime</code> to have the current time and date added to the message.
	localtime	(OPTIONAL) Enter the keyword <code>localtime</code> to include the localtime in the timestamp.
	msec	(OPTIONAL) Enter the keyword <code>msec</code> to include milliseconds in the timestamp.
	show-timezone	(OPTIONAL) Enter the keyword <code>show-timezone</code> to include the time zone information in the timestamp.
	uptime	(OPTIONAL) Enter the keyword <code>uptime</code> to have the timestamp based on time elapsed since system reboot.

Defaults `datetime`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information If you do not specify parameters and enter service timestamps, it appears as service timestamps debug datetime in the running-configuration.

To view the current options set for the `service timestamps` command, use the `show running-config` command.

show alarms

View alarms currently active in the system.

Syntax `show alarms [threshold]`

Parameters **threshold** (OPTIONAL) Enter the keyword `threshold` to display the temperature thresholds in Celsius for each level.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Example

```
DellEMC#show alarms

-- Minor Alarms --
Alarm Type                                     Duration
-----
-- Major Alarms --
Alarm Type                                     Duration
-----
PEM 2 in unit 1 down                           13 min, 36 sec
Fan 1 in PSU 2 of Unit 1 is down or removed 13 min, 34 sec
DellEMC#
```

show cam-acl-vlan

Display the block sizes allocated for the VLAN CAM ACL.

Syntax `show cam-acl-vlan`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
Version 9.1.(0.0)	Introduced on S4810.
Version 8.3.19.0	Introduced on the S4820T.

show command-history

Display a buffered log of all commands all users enter along with a time stamp.

Syntax `show command-history`

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information One trace log message is generated for each command. No password information is saved to this file. A command-history trace log is saved to a file after failover. Dell EMC Networking TAC analyzes this file to help identify the root cause of it.

Example

```
DellEMC# show command-history
[11/20 15:47:22]: CMD-(CLI):[service password-encryption]by default from
console
[11/20 15:47:22]: CMD-(CLI):[service password-encryption hostname
Force10]by
default from console
- Repeated 3 times.
[11/20 15:47:23]: CMD-(CLI):[service timestamps log datetime]by default
from
console
```

```

[11/20 15:47:23]: CMD-(CLI):[hostname Force10]by default from console
[11/20 15:47:23]: CMD-(CLI):[enable password 7 *****]by default from console
[11/20 15:47:23]: CMD-(CLI):[username admin password 7 *****]by default from console
[11/20 15:47:23]: CMD-(CLI):[enable restricted 7 *****]by default from console
[11/20 15:47:23]: CMD-(CLI):[protocol spanning-tree rstp]by default from console
[11/20 15:47:23]: CMD-(CLI):[protocol spanning-tree pvst]by default from console
[11/20 15:47:23]: CMD-(CLI):[no disable]by default from console
[11/20 15:47:23]: CMD-(CLI):[interface tengigabitethernet 1/1]by default from console
[11/20 15:47:23]: CMD-(CLI):[ip address 1.1.1.1 /24]by default from console
[11/20 15:47:23]: CMD-(CLI):[ip access-group abc in]by default from console
[11/20 15:47:23]: CMD-(CLI):[no shutdown]by default from console
[11/20 15:47:23]: CMD-(CLI):[interface tengigabitethernet 1/2]by default from console
[11/20 15:47:23]: CMD-(CLI):[no ip address]by default from console
[11/20 15:47:23]: CMD-(CLI):[shutdown]by default from console
[11/20 15:47:23]: CMD-(CLI):[interface tengigabitethernet 1/3]by default from console
[11/20 15:47:23]: CMD-(CLI):[ip address 5.5.5.1 /24]by default from console
[11/20 15:47:23]: CMD-(CLI):[no shutdown]by default from console
[11/20 15:47:23]: CMD-(CLI):[interface tengigabitethernet 1/4]by default from console
[11/20 15:47:23]: CMD-(CLI):[no ip address]by default from console
[11/20 15:47:23]: CMD-(CLI):[shutdown]by default from console
[11/20 15:47:23]: CMD-(CLI):[interface tengigabitethernet 1/5]by default from console
[11/20 15:47:23]: CMD-(CLI):[no ip address]by default from console
[11/20 15:47:23]: CMD-(CLI):[shutdown]by default from console
[11/20 21:17:35]: CMD-(CLI):[line console 0]by default from console
[11/20 21:17:36]: CMD-(CLI):[exec-timeout 0]by default from console
[11/20 21:17:36]: CMD-(CLI):[exit]by default from console
[11/20 21:19:25]: CMD-(CLI):[show command-history]by default from console
DellEMC#

```

show cpu-traffic-stats

View the CPU traffic statistics.

Syntax	show cpu-traffic-stats [port number all cp]	
Parameters	port number	(OPTIONAL) Enter the port number to display traffic statistics on that port only. The range is from 1 to 1568.
	all	(OPTIONAL) Enter the keyword all to display traffic statistics on all the interfaces receiving traffic, sorted based on the traffic.
	cp	(OPTIONAL) Enter the keyword cp to display traffic statistics on the specified CPU.
Defaults	all	
Command Modes	EXEC	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series
6.2.1.1	Introduced on the E-Series.

Usage Information

Traffic statistics are sorted on a per-interface basis; the interface receiving the most traffic is displayed first. All CPU and port information is displayed unless a specific port or CPU is specified. Traffic information is displayed for router ports only; not for management interfaces. The traffic statistics are collected only after the `debug cpu-traffic-stats` command is executed; not from the system bootup.

NOTE: After debugging is complete, use the `no debug cpu-traffic-stats` command to shut off traffic statistics collection.

Example

```
DelleMC# show cpu-traffic-stats
Processor : CP
-----
Received 100% traffic on TenGigabitEthernet 8/2 Total packets:100
LLC:0, SNAP:0, IP:100, ARP:0, other:0
Unicast:100, Multicast:0, Broadcast:0
Processor : RP1
-----
Received 62% traffic on TenGigabitEthernet 8/2 Total packets:500
LLC:0, SNAP:0, IP:500, ARP:0, other:0
Unicast:500, Multicast:0, Broadcast:0
Received 37% traffic on TenGigabitEthernet 8/1 Total packets:300
LLC:0, SNAP:0, IP:300, ARP:0, other:0
Unicast:300, Multicast:0, Broadcast:0
Processor : RP2
-----
No CPU traffic statistics.
DelleMC#
```

show debugging

View a list of all enabled debugging processes.

Syntax `show debugging`

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series
E-Series	Original command.

Example

```
DellEMC# show debug
Generic IP:
  IP packet debugging is on for
    ManagementEthernet 0/0
    Port-channel 1-2
    Port-channel 5
    GigabitEthernet 4/0-3,5-6,10-11,20
    GigabitEthernet 5/0-1,5-6,10-11,15,17,19,21
  ICMP packet debugging is on for
    GigabitEthernet 5/0,2,4,6,8,10,12,14,16
DellEMC#
```

show environment

View system component status (for example, temperature or voltage).

Syntax `show environment [all | fan | pem | stack-unit unit-id | thermal-sensor]`

Parameters	
all	Enter the keyword <code>all</code> to view all components.
fan	Enter the keyword <code>fan</code> to view information on the fans. The output of this command is chassis-dependent.
pem	Enter the keyword <code>pem</code> to view only information on power entry modules.
stack-unit <i>unit-id</i>	Enter the keywords <code>stack-unit</code> then the <code>unit-id</code> to display information on a specific stack member. The range is from 0 to 1.
thermal-sensor	Enter the keywords <code>thermal-sensor</code> to view information on thermal sensors.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.1P1)	The CLI has been enhanced to show the power, average power and average power start time.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	The output of the <code>show environment fan</code> command for the S Series is changed to display fan speeds instead of showing the fan status as up or down.

Usage Information

The following example shows the output of the `show environment` command.

Example (all)

```

DellEMC# show environment

-- Fan Status --
Unit Bay TrayStatus Fan0 Speed Fan1 Speed Fan2 Speed Fan3 Speed
-----
0 0 absent
0 1 up up 12000 up 12000 up 12000 up 12000
0 2 up up 12000 up 12000 up 12000 up 12000
0 3 absent

Speed in RPM

-- Power Supplies --
Unit Bay Status Type FanStatus FanSpeed(rpm) Power AvgPower AvgPowerStartTime
-----
1 1 up AC up 6960 48 31 14/4/2017 17:24
1 2 up AC up 6656 40 26 14/4/2017 17:24
-- Thermal Sensor Readings (degree C) --

-- Unit 0--
-----
BASE BOARD 70 38 41 42 43 57 39 40
Module 0 43 44 36 37 33 31 - -
Module 1 43 44 36 31 32 31 - -
Module 2 42 42 36 32 30 31 - -
Module 3 42 43 36 31 31 31 - -

DellEMC# show environment thermal-sensor

```

```

-- Thermal Sensor Readings (degree C) --
-- Unit 0 --
-----
BASE BOARD      40   26   26   29   28   41   26   28
Module 0        30   31   22   19   23   20   -   -
Module 1        28   29   21   -   -   -   -   -
Module 2        20   25   24   21   22   23   -   -
Module 3        20   25   24   -   -   -   -   -

```

show inventory

Display the switch type, components (including media), and Dell EMC Networking Operating System (OS), including hardware identification numbers and configured protocols.

Syntax `show inventory [media slot]`

Parameters **media slot** (OPTIONAL) Enter the keyword `media` then the stack ID of the stack member for which you want to display pluggable media inventory.

NOTE: This parameter is available but not supported in Dell EMC Networking Operating System version 8.3.11.4. Because stacking is not supported, if you use this parameter, the output displays “Media not present or accessible” (refer to the *Usage Information* section).

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Added support to display 10GBASE-T information on the S4048, S4048T, S6000, S6000-ON, S6100, Z9500, S6010, and Z9100.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.4	Output expanded to include Piece Part ID (PPID) and eSR4 optics.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced this version of the command for S-Series. S-Series output differs from E-Series.

Usage Information

If there are no fiber ports in the unit, just the header under *show inventory media* displays. If there are fiber ports but no optics inserted, the output displays *Media not present or accessible*.

Related Commands

- [show interfaces](#) — displays the interface configuration.

show login statistics

Displays login statistics of users who have used the console or virtual terminal lines to log in to the system.

Syntax `show login statistics [all | [[successful-attempts | unsuccessful-attempts] [user login-id] [time-period days]] | user login-id]`

Parameters

all	(Optional)Displays the login statistics of all users in the last 30 days or the custom defined time period.
time-period days	(Optional)Displays the number of failed login attempts by the current user in the specified period.
successful-attempts	(Optional)Displays the number of successful login attempts by the current user in the last 30 days or the custom defined time period
unsuccessful-attempts	(Optional)Displays the number of failed login attempts by the current user in the last 30 days or the custom defined time period.
user login-id	(Optional)Displays the login statistics of a specific user in the last 30 days or the custom defined time period. When you use it with the <code>unsuccessful-attempts</code> keyword, the system displays the number of failed login attempts by a specific user in the last 30 days or the custom defined time period

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced the <code>successful-attempts</code> keyword.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820, S5000, S6000, S6000-ON, and Z9500.

Usage Information

To view the successful and failed login details of the current user in the last 30 days or the custom defined period, use the `show login statistics` command.

To view the successful and failed login details of all users in the last 30 days or the custom defined period, use the `show login statistics all` command. You can use this command only if you have system or security administrator rights.

To view the successful and failed login details of a specific user in the last 30 days or the custom defined time period, use the `show login statistics user user-id` command. If you have system or security administrator rights, you can view the login statistics of other users. If you do not have system or security administrator rights, you can view your login statistics but not the login statistics of others.

i **NOTE:** By default, these commands display the details for the last 30 days. If you set a custom-defined time period for login statistics using the `login statistics time-period days` command, these commands display details only for that period.

Example

The following is sample output of the `show login statistics` command.

```
DelleMC#show login statistics
-----
User: admin
Last login time: 12:52:01 UTC Tue Mar 22 2016
Last login location: Line vty0 ( 10.16.127.143 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 0
Successful login attempt(s) in last 30 day(s): 1
-----
```

The following is sample output of the `show login statistics all` command.

```
DelleMC#show login statistics all
-----
User: admin
Last login time: 08:54:28 UTC Wed Mar 23 2016
Last login location: Line vty0 ( 10.16.127.145 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 3
Successful login attempt(s) in last 30 day(s): 4
-----

-----
User: admin1
Last login time: 12:49:19 UTC Tue Mar 22 2016
Last login location: Line vty0 ( 10.16.127.145 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 3
Successful login attempt(s) in last 30 day(s): 2
-----

-----
User: admin2
Last login time: 12:49:27 UTC Tue Mar 22 2016
Last login location: Line vty0 ( 10.16.127.145 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 3
Successful login attempt(s) in last 30 day(s): 2
-----

-----
User: admin3
Last login time: 13:18:42 UTC Tue Mar 22 2016
Last login location: Line vty0 ( 10.16.127.145 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 3
Successful login attempt(s) in last 30 day(s): 2
-----
```

The following is sample output of the `show login statistics user user-id` command.

```
DelleMC# show login statistics user admin
-----
User: admin
Last login time: 12:52:01 UTC Tue Mar 22 2016
Last login location: Line vty0 ( 10.16.127.143 )
Unsuccessful login attempt(s) since the last successful login: 0
Unsuccessful login attempt(s) in last 30 day(s): 0
Successful login attempt(s) in last 30 day(s): 1
-----
```

The following is sample output of the `show login statistics unsuccessful-attempts` command.

```
DellEMC#show login statistics unsuccessful-attempts
There were 3 unsuccessful login attempt(s) for user admin in last 30
day(s).
```

The following is sample output of the `show login statistics unsuccessful-attempts time-period days` command.

```
DellEMC# show login statistics unsuccessful-attempts time-period 15
There were 0 unsuccessful login attempt(s) for user admin in last 15
day(s).
```

The following is sample output of the `show login statistics unsuccessful-attempts user login-id` command.

```
DellEMC# show login statistics unsuccessful-attempts user admin
There were 3 unsuccessful login attempt(s) for user admin in last 12
day(s).
```

The following is sample output of the `show login statistics successful-attempts` command.

```
DellEMC#show login statistics successful-attempts
There were 4 successful login attempt(s) for user admin in last 30
day(s).
```

Related Commands

- [login statistics](#) — enable and configure user login statistics on console and virtual terminal lines.
- [login concurrent-session](#) — configures the limit of concurrent sessions for all users on console and virtual terminal lines.

show memory

View current memory usage on the switch.

Syntax `show memory [stack-unit id]`

Parameters **stack-unit id** (OPTIONAL) Enter the keyword `stack-unit` then the stack unit ID to display memory information on the designated stack member.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.

Version	Description
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced this version of the command for the S-Series.

Usage Information

The output for `show memory` displays the memory usage of LP part (sysdlp) of the system. The `sysdlp` is an aggregate task that handles all the tasks running on the S-Series' CPU.

Example

```
DellEMC#show memory stack-unit 1
      Statistics On Unit 1 Processor
      =====
      Total (b)      Used (b)      Free (b)      Lowest (b)      Largest (b)
      3177185280     2310248     3174875032   3174676264     3174875032
DellEMC#
```

show processes cpu

Display CPU usage information based on processes running.

Syntax

```
show processes cpu [management-unit [1-99 | details] | stack-unit id
[1-99] | summary ]
```

Parameters

- management-unit [1-99 | details]** (OPTIONAL) Display processes running in the control processor. The 1-99 variable sets the number of tasks to display in order of the highest CPU usage in the past five (5) seconds. Add the keyword `details` to display all running processes (except `sysdlp`). Refer to Example (management-unit).
- stack-unit id** (OPTIONAL) Enter the keyword `stack-unit` then the stack member ID.
As an option of the `show processes cpu` command, this option displays CPU usage for the designated stack member. Or, as an option of the `command`, this option limits the output of memory statistics to the designated stack member.
Refer to Example (stack-unit).
- summary** (OPTIONAL) Enter the keyword `summary` to view CPU utilization of processes related to stack-unit processing.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.

Version	Description
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added the keywords management-unit [details].
7.6.1.0	Introduced on the S-Series.

Example

```
DelleMC# show processes cpu ?
management-unit      Management Unit
stack-unit           Unit Number
summary              Summary of CPU utilization
|                    Pipe through a command
```

```
DelleMC# show processes cpu summary

CPU utilization          5Sec      1Min      5Min
-----
UNIT1                    3%       3%       1%
```

```
DelleMC# show processes cpu stack-unit 1

CPUID          5sec          1min          5min
-----
CORE 0         13.17          11.53          0.00
CORE 2          9.38          12.16          0.00
Overall        11.28          11.84          0.00

CPU utilization of sysdpl for five seconds: 2%/0%; one minute: 3%; five minutes: 1%
PID          Runtime (ms)   Invoked      uSecs      5Sec      1Min      5Min TTY
Process
0xbb773000   5950           595          10000      1.00%    2.25%    1.22%  0
tExcTask
0xbab2a000   4030           403          10000      1.00%    1.33%    0.73%  0
frpagt
0xbacf3000    10             1            10000      0.00%    0.00%    0.00%  0
F10StkMgr
0xbad0c000    710            71           10000      0.00%    0.00%    0.03%  0
lcMgr
0xbad24000    30             3            10000      0.00%    0.00%    0.00%  0
dla
0xbad44000    50             5            10000      0.00%    0.00%    0.00%  0
sysAdmTsk
0xbad58000    650            65           10000      0.00%    0.00%    0.00%  0
timerMgr
0xbad6e000    50             5            10000      0.00%    0.00%    0.00%  0
PM
0xbad85000   1190           119          10000      0.00%    0.00%    0.00%  0
KP
0xbad9a000    0              0            0           0.00%    0.00%    0.00%  0
evagt
0xbadb4000    30             3            10000      0.00%    0.00%    0.00%  0
ipc
0xbadc9000    10             1            10000      0.00%    0.00%    0.00%  0
sysReaper
0xbae22000    60             6            10000      0.00%    0.00%    0.02%  0
tme
```

```
DelleMC# show processes cpu management-unit ?
<1-99>          Number of tasks with highest CPU usage last 5 seconds
details        Detail CPU utilization
|              Pipe through a command
DelleMC#show processes cpu management-unit details

CPUID          5sec          1min          5min
-----
CORE 0         11.73          10.79          12.82
CORE 2         11.73          12.05          14.31
Overall        11.73          11.42          13.56

PID          Runtime (ms)   Invoked      uSecs      5Sec      1Min      5Min TTY
Process
Process: system      PID: 0 CPU usage: 5sec - 13.12% 1min - 13.37% 5min - 12.94%
```

```

CoreID: 3
Process: sysdlp          PID: 428  CPU usage: 5sec - 3.78%  1min - 2.56%  5min - 3.40%
CoreID: 0
Process: sysd           PID: 410  CPU usage: 5sec - 1.59%  1min - 0.96%  5min - 2.50%
CoreID: 2

Thread      TID  Runtime(ms)      Invoked    uSecs      5Sec      1Min      5Min      TTY
-----
      usm      56      20              2          10000     0.00%    0.00%    0.00%    0
DHCLIENT
      cms      55      10              1          10000     0.00%    0.00%    0.00%    0
      cms      54      0               0           0         0.00%    0.00%    0.00%    0
portmirr    53      60              6          10000     0.00%    0.00%    0.00%    0
cfgDataSync 52      0               0           0         0.00%    0.00%    0.00%    0
sysCompMgr  51      0               0           0         0.00%    0.00%    0.00%    0
      statMgr  50      50              5          10000     0.00%    0.01%    0.00%    0
      sflCp   49      1010            101         10000     0.05%    0.07%    0.08%    0
      snmp   48      30              3          10000     0.00%    0.00%    0.00%    0
dpi_cmow    47      0               0           0         0.00%    0.00%    0.00%    0
dpi_taskcmo 46      0               0           0         0.00%    0.00%    0.00%    0

```

```

DelleMC# show processes cpu management-unit details ?
| Pipe through a command
DelleMC# show processes cpu management-unit ?
<1-99> Number of tasks with highest CPU usage last 5
seconds
details Detail CPU utilization
| Pipe through a command

```

```

DelleMC# show processes cpu management-unit

CPUID          5sec          1min          5min
-----
CORE 0         9.54          9.92         12.82
CORE 2        10.74        11.56        14.31
Overall       10.14        10.74        13.56

PID           Runtime(ms)   Invoked      uSecs      5Sec      1Min      5Min      TTY
-----
Process
0x00000000    45040        4504         10000     13.12%    13.20%    12.94%    0
system
0x000001ac    25750        2575         10000     2.78%     2.48%     3.40%     0
sysdlp
0x0000019a    10650        1065         10000     0.60%     1.16%     2.50%     0
sysd
0x000003a5     860         86           10000     0.40%     0.22%     0.28%     0
clish
0x000001ad     520         52           10000     0.20%     0.30%     0.16%     0
lACP
0x000004ba     330         33           10000     0.20%     0.36%     0.09%     0
clish
0x000000c9    1240        124           10000     0.20%     0.15%     0.44%     0
nvMgr
0x000000e0     530         53           10000     0.20%     0.12%     0.16%     0
igmp
0x00000132     420         42           10000     0.20%     0.10%     0.13%     0
vrrp
0x0000028d     410         41           10000     0.20%     0.05%     0.12%     0
ovsdbsvr
0x000000a9     200         20           10000     0.20%     0.03%     0.06%     0
arpM
0x00000253     100         10           10000     0.20%     0.02%     0.02%     0
otm
0x00000206     140         14           10000     0.20%     0.02%     0.03%     0
tnlMgr
0x00000012    1290        129           10000     0.00%     0.10%     0.12%     0
mount_mfs
0x0000024d     40          40           10000     0.00%     0.08%     0.14%     0
xstp
DelleMC#

```

Related Commands

- [show hardware layer2 acl](#) — displays Layer 2 ACL data for the selected stack member and stack member port-pipe.
- [show hardware layer3](#) — displays Layer 3 ACL or QoS data for the selected stack member and stack member port-pipe.

- [show hardware stack-unit](#) — displays the data plane or management plane input and output statistics of the designated component of the designated stack member.
- [show hardware system-flow](#) — displays Layer 3 ACL or QoS data for the selected stack member and stack member port-pipe.
- [show interfaces stack-unit](#) — displays information on all interfaces on a specific S-Series stack member.
- [show processes memory \(S-Series\)](#) — displays CPU usage information based on processes running in an S-Series.

show processes ipc flow-control

Display the single window protocol queue (SWPQ) statistics.

Syntax `show processes ipc flow-control [cp]`

Parameters **cp** (OPTIONAL) Enter the keyword `cp` to view the control processor's SWPQ statistics.

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information	Field	Description
	Source QID /Tx Process	Source Service Identifier
	Destination QID/Rx Process	Destination Service Identifier

Field	Description
Cur Len	Current number of messages enqueued
High Mark	Highest number of packets in the queue at any time
#of to / Timeout	Timeout count
#of Retr /Retries	Number of retransmissions
#msg Sent/Msg Sent/	Number of messages sent
#msg Ackd/Ack Rcvd	Number of messages acknowledged
Retr /Available Retra	Number of retries left
Total/ Max Retra	Number of retries allowed

Important Points:

- The SWP provides flow control-based reliable communication between the sending and receiving software tasks.
- A sending task enqueues messages into the SWP queue³ for a receiving task and waits for an acknowledgement.
- If no response is received within a defined period of time, the SWP timeout mechanism resubmits the message at the head of the FIFO queue.
- After retrying a defined number of times, the SWP-2-NOMORETIMEOUT timeout message is generated.
- In the S-Series example, a retry (Retries) value of zero indicates that the SWP mechanism reached the maximum number of retransmissions without an acknowledgement.

Example

```

DellEMC# show processes ipc flow-control cp

Q Statistics on CP Processor
TxProcess      RxProcess Cur High Time Retr Msg Ack Aval Max
              Len Mark Out ies Sent Rcvd Retra Retra
DHCP0          ACL0  0  1  1  1  1  1  25  25
DHCP0          IPMGR0 0  0  0  0  0  0  25  25
DHCP0          IPMGR1 0  0  0  0  0  0  25  25
DHCP0          IFMGR0 0  0  0  0  0  0  25  25
IPMGR0         NDPM0  0  0  0  0  0  0  60  60
IFMGR0         FEFD0  0 10  0  0 12 12  60  60
IFMGR0         SNMP0  0  1  0  0  1  1  60  60
IFMGR0         SFL_CP0 0 20  0  0 26 26  60  60
IFMGR0         PORTMIRR0 0 8  0  0  9  9  60  60
IFMGR0         EVENTTERMLOG0 0 1  0  0  1  1  60  60
IFMGR0         IPSECMGR0 0 8  0  0 11 11  60  60
IFMGR0         DHCP0  0  8  0  0 11 11  60  60
IFMGR0         IPMGR0 0 29  0  0 36 36  60  60
IFMGR0         IFAGT3  0  1  0  0  2  2  60  60
IFAGT3         IFMGR0  0  1  0  0  1  1  60  60
IFMGR0         OFMGR0  0 16  1  1 21 21  60  60
IFMGR0         ACL0  0  8  0  0 14 14  60  60
IFMGR0         VRRP0  0 10  0  0 17 17  60  60
IFMGR0         PIM0  0  1  0  0  1  1  5  5
IFMGR0         MACMGR0 0 0  0  0  0  0  60  60
IFMGR0         L2PM0  0 29  0  0 40 40  60  60
IFMGR0         DIFFSERV0 0 51  0  0 67 67  60  60
IFMGR0         RTM0  0  9  0  0 11 11  60  60
IFMGR0         LLDP0  0 12  0  0 12 12  60  60
IFMGR0         MRTM0  0 10  0  0 10 10  60  60
IFMGR0         IPMGR1  0 33  0  0 33 33  60  60
IFMGR0         LACP0  0 23  0  0 23 23  60  60
PORTMIRR0     ACL_AGENT2 0 0  0  0  0  0  50  50
IFMGR0         IGMP0  0  0  0  0  0  0  50  50
IFMGR0         IFAGT2  0  1  0  0  1  1  60  60
DellEMC#

```

show processes memory

Display memory usage information based on processes running in the S-Series or Z-Series system.

Syntax `show processes memory {management-unit | stack unit {unit-id | all | summary}}`

Parameters

- management-unit** Enter the keyword `management-unit` for CPU memory usage of the stack management unit.
- stack unit unit id** Enter the keyword `stack unit` then a stack unit ID of the member unit for which to display memory usage on the forwarding processor.
- all** Enter the keyword `all` for detailed memory usage on all stack members.
- summary** Enter the keyword `summary` for a brief summary of memory availability and usage on all stack members.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.7.1.0	Added the <code>management-unit</code> option.
7.6.1.0	Introduced on the S-Series.

Usage Information

show processes memory output Field	Description
Total:	Total system memory available
MaxUsed:	Total maximum memory used ever (history indicated with time stamp)
CurrentUsed:	Total memory currently in use
CurrentFree:	Total system memory available
SharedUsed:	Total used shared memory
SharedFree:	Total free shared memory
PID	Process ID
Process	Process Name

show processes memory output Field	Description
ResSize	Actual resident size of the process in memory
Size	Process test, stack, and data size
Allocs	Total dynamic memory allocated
Frees	Total dynamic memory freed
Max	Maximum dynamic memory allocated
Current	Current dynamic memory in use

The output for the `show process memory` command displays the memory usage statistics running on CP part (sysd) of the system. The sysd is an aggregate task that handles all the tasks running on S-Series' CP.

For the S-Series, the output of the `show memory` command and this command differ based on which Dell OS processes are counted.

- In the `show memory` output, the memory size is equal to the size of the application processes.
- In the output of this command, the memory size is equal to the size of the application processes plus the size of the system processes.

Example

```
DellEMC# show processes memory stack-unit 1
Total: 268435456, MaxUsed: 2420244, CurrentUsed: 2420244, CurrentFree:
266015212
TaskName TotalAllocated TotalFreed MaxHeld CurrentHolding
tme 435406 397536 54434 37870
ipc 16652 0 16652 16652
timerMgr 33304 0 33304 33304
sysAdmTsk 33216 0 33216 33216
tFib4 1943960 0 1943960 1943960
aclAgent 90770 16564 74206 74206
ifagt_1 21318 16564 21318 4754
dsagt 6504 0 6504 6504
MacAgent 269778 0 269778 269778
DellEMC#
```

Example (management-unit)

```
DellEMC# show processes management-unit

Total      : 151937024, MaxUsed : 111800320 [2/25/2008 4:18:53]
CurrentUsed: 98848768, CurrentFree: 53088256

SharedUsed : 13007848, SharedFree : 7963696
PID Process ResSize Size Allocs Frees Max Current
337 KernLrnAgMv 117927936 0 0 0 0 0
331 vrrp 5189632 249856 50572 0 50572 50572
323 frrp 5206016 241664 369238 0 369238 369238
322 xstp 7430144 2928640 38328 0 38328 38328
321 pim 5267456 823296 62168 0 62168 62168
314 igmp 4960256 380928 18588 16564 18588 2024
313 mrtm 6742016 1130496 72758 0 72758 72758
308 l2mgr 5607424 552960 735214 380972 619266 354242
301 l2pm 5001216 167936 1429522 1176044 286606 253478
298 arpm 4628480 217088 71092 33128 71092 37964
294 ospf 5468160 503808 724204 662560 78208 61644
288 dsm 6778880 1159168 39490 16564 39490 22926
287 rtm 5713920 602112 442280 198768 376024 243512
284 rip 4562944 258048 528 0 528 528
281 lacp 4673536 266240 221060 0 221060 221060
277 ipml 4837376 380928 83788 0 83788 83788
273 acl 5005312 512000 239564 149076 123616 90488
272 topoDPC 117927936 0 0 0 0 0
271 bcmNHOP 117927936 0 0 0 0 0
```

```

270 bcmDISC      117927936      0      0      0      0      0
269 bcmATP-RX   117927936      0      0      0      0      0
268 bcmATP-TX   117927936      0      0      0      0      0
267 bcmSTACK    117927936      0      0      0      0      0
266 bcmRX       117927936      0      0      0      0      0
265 bcmLINK.0   117927936      0      0      0      0      0
!----- output truncated -----!
DellEMC#

```

show reset-reason

Display the reason for the last system reboot.

Syntax `show reset-reason [stack-unit {stack-unit-number | all}]`

Parameters

stack-unit unit-number (OPTIONAL) Enter the keyword `stack-unit` and the stack unit number to view the reason for the last system reboot for that stack unit.

all (OPTIONAL) Enter the keyword `stack-unit` and the keyword `all` to view the reason for the last system reboot of all stack units in the stack.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced on the S3048-ON, S3100 series, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, C9010, MXL, M-IOA, and FN-IOM.

Usage Information You can use the `show reset-reason` without the `stack-unit` option to view the reason for the last system reboot of the local system.

Example — User-initiated reboot with the reload command

```

DellEMC#show reset-reason
Cause      : Reset by User through CLI command
Reset Time: 11/05/2017-08:36

```

Example — System reboot due to the upgrade command

```

DellEMC# show reset-reason
Cause: Reboot by Software upgrade Module.
Reset Time: 8/9/2017 1:39 PM.

```

Example — System reboot for unknown reasons

```

DellEMC# show reset-reason
Cause: N/A
Reload Time: N/A

```

Example — System reboot due to power loss or pressing the power button off and on. The example shows the reason for the last reboot as N/A for warm reset.

```

DellEMC#show reset-reason
Cause      : N/A
Reset Time  : N/A.

```

Example — System reboot due to watchdog timeout

```

DellEMC#show reset-reason
Cause: N/A.
Reset Time: N/A

```

Example — System reboot due to thermal shutdown

The example shows the reason for the last reboot as N/A for thermal shutdown.

```
DellEMC# show reset-reason
Cause: N/A
Reload Time: N/A
```

Example — System reboot due to BIOS boot fail

The example shows the reason for the last reboot as N/A for BIOS boot fail.

```
DellEMC#show reset-reason
Cause: NA
Reset Time: N/A.
```

Example — Unknown reason

If the reason for the last system reboot is not available, the system displays the reason as N/A.

```
DellEMC# show reload-reason
Cause: N/A
Time: N/A
```

Example — Reset reason of a single stack unit

```
DellEMC# show reset-reason stack-unit 1
Cause      : Reset by User through CLI command
Reset Time: 11/05/2017-08:36
```

Example — Reset reason of all stack units

```
DellEMC#show reset-reason stack-unit all
```

Last Reset Reason:

Type	Cause	Time
stack-unit 1	Reboot by Software	11/05/2017-09:04
stack-unit 2	Reboot by Software	11/05/2017-09:04
stack-unit 3	Cold Reset	N/A
stack-unit 4	N/A	N/A
stack-unit 5	N/A	N/A
stack-unit 6	N/A	N/A

show software ifm

Display interface management (IFM) data.

Syntax

```
show software ifm {clients [summary] | ifagt number | ifcb interface |
stack-unit unit-ID | trace-flags}
```

Parameters

- clients** Enter the keyword `clients` to display IFM client information.
- summary** (OPTIONAL) Enter the keyword `summary` to display brief information about IFM clients.
- ifagt *number*** Enter the keyword `ifagt` then the number of an interface agent to display software pipe and IPC statistics.
- ifcb *interface*** Enter the keyword `ifcb` then one of the following interface IDs then the interface information to display interface control block information for that interface:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- stack-unit *unit-ID*** Enter the keyword `stack-unit` then the stack member number to display IFM information for that unit.
- trace-flags** Enter the keyword `trace-flags` to display IFM information for internal trace flags.

Defaults None.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
7.6.1.0	Introduced for the C-Series and S-Series.

Example

```
DellEMC# show software ifm clients summary
ClntType Inst svcMask subSvcMask tlvSvcMask tlvSubSvc swp
IPM      0 0x00000000 0x00000000 0x90ff71f3 0x021e0e81 31
RTM      0 0x00000000 0x00000000 0x800010ff 0x01930000 43
VRRP     0 0x00000000 0x00000000 0x803330f3 0x00400000 39
L2PM     0 0x00000000 0x00000000 0x87ff79ff 0x0e032200 45
ACL      0 0x00000000 0x00000000 0x867f50c3 0x000f0218 44
OSPF     0 0x00000dfa 0x00400098 0x00000000 0x00000000 0
PIM      0 0x000000f3 0x00030000 0x00000000 0x00000000 0
IGMP     0 0x000e027f 0x00000000 0x00000000 0x00000000 0
SNMP     0 0x00000000 0x00000000 0x800302c0 0x00000002 30
EVTTERM  0 0x00000000 0x00000000 0x800002c0 0x00000000 29
MRTM     0 0x00000000 0x00000200 0x81f7103f 0x00000000 38
DSM      0 0x00000000 0x00000000 0x80771003 0x00000000 32
LACP     0 0x00000000 0x00000000 0x8000383f 0x00000000 35
DHCP     0 0x00000000 0x00000000 0x800000c2 0x0000c000 37
V6RAD    0 0x00000433 0x00030000 0x00000000 0x00000000 0
Unidentified Client0 0x006e0002 0x00000000 0x00000000 0x00000000 0x00000000 0
DellEMC#
```

show system

Display the status of all stack members or a specific member.

Syntax `show system [brief | stack-unit unit-id]`

Parameters

brief (OPTIONAL) Enter the keyword `brief` to view an abbreviated list of system information.

stack-unit *unit-id* (OPTIONAL) Enter the keywords `stack-unit` then the stack member ID for information on that stack member.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(1.0)	Introduced on the S5048F-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for the <code>disabled-ports</code> parameter .
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.4	The <code>brief</code> parameter no longer displays the current Reload mode. To display Reload mode, use the <code>show reload-type</code> command. Modified the <code>show system stack-unit</code> command output to support Piece Part ID (PPID).
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	The Boot Flash field displays the code level for boot code 2.8.1.1 and newer, while older boot codes display as "Present".
7.7.1.0	Added Master Priority field.
7.6.1.0	Introduced on the S-Series.

Example (show system brief)

Related Commands

- [show hardware stack-unit](#) – displays the data plane and management plane input and output statistics of a particular stack member.

show tech-support

Display a collection of data from other `show` commands, necessary for Dell EMC Networking technical support to perform troubleshooting.

Syntax

```
show tech-support [stack-unit unit-id | page]
```

Parameters

- stack-unit** (OPTIONAL) Enter the keywords `stack-unit` to view CPU memory usage for the stack member designated by `unit-id`.
- page** (OPTIONAL) Enter the keyword `page` to view 24 lines of text at a time. Press the SPACE BAR to view the next 24 lines. Press the ENTER key to view the next line of text.

When using the pipe command (|), enter one of these keywords to filter command output. For details about filtering commands, refer to [CLI Basics](#).

save Enter the keyword `save` to save the command output.

`flash:` Save to local flash drive (`flash://filename`). A maximum of 20 characters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced <code>save</code> to the file options.
7.6.1.0	Introduced on the S-Series.

Usage Information Without the `page` or `stack-unit` option, the command output is continuous. To interrupt the command output, use Ctrl-z.

The `save` option works with other filtering commands. This allows you to save specific information of a `show` command. The `save` entry must always be the last option. For example: `DellEMC#show tech-support |grep regular-expression |except regular-expression | find regular-expression | save flash://result`

This display output is an accumulation of the same information that is displayed when you execute one of the following `show` commands:

- `show version`
- `show clock`
- `show running-config`
- `show system stack-ports`
- `show interfaces`
- `show process memory`
- `show process cpu`
- `show file system`
- `show system`
- `show environment`
- `show ip traffic`
- `show ip management route`
- `show ip route summary`
- `show Inventory`
- `show log summary`
- `show command-history (last 20 commands)`

- show log

Example (S-Series)

```
DellEMC# show tech-support ?
page          Page through output
stack-unit    Unit Number
|            Pipe through a command
<cr>
DellEMC#show tech-support stack-unit 1 ?
|            Pipe through a command
<cr>
DellEMC# show tech-support stack-unit 1 | ?
except        Show only text that does not match a pattern
find          Search for the first occurrence of a pattern
grep          Show only text that matches a pattern
no-more       Don't paginate output
save          Save output to a file

DellEMC# show tech-support stack-unit 1 | save ?
flash:        Save to local file system (flash://filename (max 20
chars) )

DellEMC# show tech-support stack-unit 1 | save flash://LauraSave
Start saving show command report .....
DellEMC#

DellEMC# dir
Directory of flash:
1 drw- 16384   Jan 01 1980 00:00:00 +00:00 .
2 drwx 1536    Jul 13 1996 02:38:06 +00:00 ..
3 d--- 512     Nov 20 2007 15:46:44 +00:00 ADMIN_DIR
DellEMC#
```

Example

ssh-peer-stack-unit

Open an SSH connection to the peer stack-unit.

Syntax `ssh-peer-stack-unit [-l username]`

Parameters `-l username` (OPTIONAL) Enter the keyword `-l` then your user name. The default is the user name associated with the terminal.

Defaults Not configured.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.11.1	Introduced on the S-Series.

telnet

Connect through Telnet to a server. The Telnet client and server in Dell EMC Networking support IPv4 and IPv6 connections. You can establish a Telnet session directly to the router or a connection can be initiated from the router.

NOTE: The Telnet server and client are VRF-aware. Using the `vrf` parameter in this command, you can make a Telnet server or client to listen to a specific VRF. This capability enables a Telnet server or client to look up the correct routing table and establish a connection.

Syntax `telnet {host | ip-address | ipv6-address prefix-length | vrf vrf instance name} [/source-interface]`

Parameters

host	Enter the name of a server.
ip-address	Enter the IPv4 address in dotted decimal format of the server.
ipv6-address prefix-length	Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128. NOTE: The :: notation specifies successive hexadecimal fields of zeros.
vrf instance	(Optional) Enter the keyword <code>vrf</code> then the VRF instance name.
source-interface	(OPTIONAL) Enter the keywords <code>/source-interface</code> then the interface information to include the source interface. Enter the following keywords and the interface information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383. For a Null interface, enter the keyword <code>null</code> then the Null interface number. For a port channel interface, enter the keywords <code>port-channel</code> then a number. For Tunnel interface types, enter the keyword <code>tunnel</code> then the slot/ port information. The range is from 1 to 16383. For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.

Defaults Not configured.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810. Added support for <i>source-interface</i> for link-local IPv6 addressing.
8.3.11.1	Introduced on the Z9000.
8.2.1.0	Introduced on the E-Series (IPv6). Increased the number of VLANs to 4094 (was 2094).
8.1.1.0	Introduced on the E-Series (IPv4).
7.9.1.0	Introduced VRF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and added support for IPv6 address on the E-Series only.

Usage Information

The VRF configured using this command has a higher precedence than a VRF configured using the `ip telnet vrf vrf-name` command. If you do not use the VRF attribute in this command, then TELNET client uses the VRF configured using the `ip telnet vrf vrf-name` command.

The source interface configured using this command has a higher precedence than the source interface configured using the `ip telnet source-interface` command. If you do not configure a source interface using this command, then the TELNET client uses the source interface configured using the `ip telnet source-interface` command.

In case there is a mismatch between the VRF telnet source interface and the telnet VRF, then an error is reported.

Example

```
DellEMC# telnet vrf vrf1 10.10.10.2
```

telnet-peer-stack-unit

Open a Telnet connection to the peer stack unit.

Syntax `telnet-peer-stack-unit`

Defaults Not configured.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.11.1	Introduced on the S-Series.

terminal length

Configure the number of lines displayed on the terminal screen.

Syntax `terminal length screen-length`

Parameters **screen-length** Enter a number of lines. Entering zero causes the terminal to display without pausing. The range is from 0 to 512.

Defaults 24 lines

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

traceroute

View a packet's path to a specific device.

Syntax `traceroute {host | vrf instance | ip-address | ipv6-address}`

Parameters		
host		Enter the name of device.
vrf instance		(Optional) E-Series Only: Enter the keyword <code>vrf</code> then the VRF Instance name.
ip-address		Enter the IP address of the device in dotted decimal format.
ipv6-address		Enter the IPv6 address, in the x:x:x::x format, to which you are testing connectivity.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

- Defaults**
- Timeout = **5 seconds**
 - Probe count = **3**
 - 30 hops max
 - 40 byte packet size
 - UDP port = **33434**

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.2.1.0	Introduced on the E-Series with IPv6.

Version	Description
8.1.1.0	Introduced on the E-Series (IPv4 only).
7.9.1.0	Introduced VRF.
7.6.1.0	Added support for the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for IPv6 address on the E-Series.
E-Series	Original command.

Usage Information

When you enter the `traceroute` command without specifying an IP address (Extended Traceroute), you are prompted for a target and source IP address, timeout (in seconds) (default is **5**), a probe count (default is **3**), minimum TTL (default is **1**), maximum TTL (default is **30**), and port number (default is **33434**). To keep the default setting for those parameters, press the ENTER key.

For IPv6, you are prompted for a minimum hop count (default is **1**) and a maximum hop count (default is **64**).

Example (IPv4)

```
DellEMC# traceroute www.Dell EMC Networking.com

Translating "www.Dell EMC Networking.com"...domain server (10.11.0.1)
[OK]
Type Ctrl-C to abort.

-----
Tracing the route to www.Dell EMC Networking.com (10.11.84.18),
30 hops max, 40 byte packets
-----

TTL  Hostname                Probe1      Probe2      Probe3
 1  10.11.199.190 001.000 ms 001.000 ms 002.000 ms
 2  gwegress-sjc-02.Dell EMC Networking.com (10.11.30.126) 005.000 ms
    001.000 ms 001.000 ms
 3  fw-sjc-01.Dell EMC Networking.com (10.11.127.254) 000.000 ms 000.000
    ms 000.000 ms
 4  www.Dell EMC Networking.com (10.11.84.18) 000.000 ms 000.000 ms
    000.000 ms
DellEMC#
```

Example (IPv6)

```
DellEMC# traceroute 100::1

Type Ctrl-C to abort.

-----
Tracing the route to 100::1, 64 hops max, 60 byte packets
-----

Hops  Hostname                Probe1      Probe2      Probe3
 1    100::1 000.000 ms 000.000 ms 000.000 ms

DellEMC#traceroute 3ffe:501:ffff:100:201:e8ff:fe00:4c8b

Type Ctrl-C to abort.

-----
Tracing the route to 3ffe:501:ffff:100:201:e8ff:fe00:4c8b,
64 hops max, 60 byte packets
-----

Hops  Hostname                Probe1      Probe2      Probe3
 1    3ffe:501:ffff:100:201:e8ff:fe00:4c8b
      000.000 ms 000.000 ms 000.000 ms
DellEMC#
```

Related Commands

- [ping](#) — tests the connectivity to a device.

undebug all

Disable all debug operations on the system.

Syntax undebug all

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

virtual-ip

Configure a virtual IP address for the active management interface. You can configure virtual addresses both for IPv4 and IPv6 independently.

Syntax virtual-ip {ipv4-address | ipv6-address}

To return to the default, use the no virtual-ip {ipv4-address | ipv6-address} command.

Parameters

- ipv4-address** Enter the IP address of the active management interface in a dotted decimal format (A.B.C.D.).
- ipv6-address** Enter an IPv6 address of the active management interface, in the x:x:x:x:x format.  **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

You can configure both IPv4 and IPv6 virtual addresses simultaneously, but only one of each. Each time this command is issued, it replaces the previously configured address of the same family, IPv4 or IPv6. The `no virtual-ip` command takes an address/prefix-length argument, so that the desired address only is removed. If you enter the `no virtual-ip` command without any specified address, then both IPv4 and IPv6 virtual addresses are removed.

Related Commands

- [ip address](#) — assigns a primary and secondary IP address to the interface.

write

Copy the current configuration to either the startup-configuration file or the terminal.

Syntax `write [memory [compressed] | terminal]`

Parameters	
memory	Enter the keyword <code>memory</code> to copy the current running configuration to the startup configuration file. This command is similar to the <code>copy running-config startup-config</code> command.
compressed	Enter the keyword <code>compressed</code> to write the operating configuration to the startup-config file in the compressed mode.
terminal	Enter the keyword <code>terminal</code> to copy the current running configuration to the terminal. This command is similar to the <code>show running-config</code> command.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

**Usage
Information**

The `write memory` command saves the running-configuration to the file labeled startup-configuration. When using a LOCAL CONFIG FILE other than the startup-config not named "startup-configuration" (for example, you used a specific file during the `boot config` command), the running-config is not saved to that file; use the `copy` command to save any running-configuration changes to that local file.

802.1X

802.1X is a port-based Network Access Control (PNAC) that provides an authentication mechanism to devices wishing to attach to a LAN or WLAN. Until the authentication, only extensible authentication protocol over LAN (EAPOL) traffic is allowed through the port to which a client is connected. After authentication is successful, normal traffic passes through the port.

The Dell EMC Networking OS supports remote authentication dial-in service (RADIUS) and active directory environments using 802.1X Port Authentication.

Important Points to Remember

Dell EMC Networking OS limits network access for certain users by using virtual local area network (VLAN) assignments. 802.1X with VLAN assignment has these characteristics when configured on the switch and the RADIUS server.

- If the primary RADIUS server becomes unresponsive, the authenticator begins using a secondary RADIUS server, if configured.
- If no VLAN is supplied by the RADIUS server or if you disable 802.1X authorization, the port configures in its access VLAN after successful authentication.
- If you enable 802.1X authorization but the VLAN information from the RADIUS server is not valid, the port returns to the Unauthorized state and remains in the configured access VLAN. This safeguard prevents ports from appearing unexpectedly in an inappropriate VLAN due to a configuration error. Configuration errors create an entry in Syslog.
- If you enable 802.1X authorization and all information from the RADIUS server is valid, the port is placed in the specified VLAN after authentication.
- If you enable port security on an 802.1X port with VLAN assignment, the port is placed in the RADIUS server assigned VLAN.
- If you disable 802.1X on the port, it returns to the configured access VLAN.
- When the port is in the Force Authorized, Force Unauthorized, or Shutdown state, it is placed in the configured access VLAN.
- If an 802.1X port is authenticated and put in the RADIUS server assigned VLAN, any change to the port access VLAN configuration does not take effect.
- The 802.1X with VLAN assignment feature is not supported on trunk ports, dynamic ports, or with dynamic-access port assignment through a VLAN membership.

Topics:

- [debug dot1x](#)
- [dot1x auth-fail-vlan](#)
- [dot1x auth-server](#)
- [dot1x auth-type mab-only](#)
- [dot1x authentication \(Configuration\)](#)
- [dot1x authentication \(Interface\)](#)
- [dot1x critical-vlan](#)
- [dot1x profile](#)
- [dot1x static-mab](#)
- [dot1x guest-vlan](#)
- [dot1x host-mode](#)
- [dot1x mac-auth-bypass](#)
- [dot1x max-eap-req](#)
- [dot1x max-suplicants](#)
- [dot1x port-control](#)
- [dot1x quiet-period](#)
- [dot1x reauthentication](#)
- [dot1x reauth-max](#)
- [dot1x server-timeout](#)
- [dot1x supplicant-timeout](#)

- [dot1x tx-period](#)
- [mac](#)
- [show dot1x cos-mapping interface](#)
- [show dot1x interface](#)
- [show dot1x profile](#)

debug dot1x

Display 802.1X debugging information.

Syntax `debug dot1x [all | auth-pae-fsm | backend-fsm | eapol-pdu] [interface interface]`

Parameters	all	Enable all debugs in dot1x.
	auth-pae-fsm	Enable Authentication PAE FSM debugs in dot1x.
	backend-fsm	Enable Backend Auth FSM debugs in dot1x.
	eapol-pdu	Enable EAPOL frame trace in dot1x.
	interface interface	Restricts the debugging information to an interface. The interface option is available only when the interface is either operationally up or dot1x related interface configuration exists before enabling debugging for that interface.

Defaults Disabled

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Introduced on the C-Series and S-Series.

dot1x auth-fail-vlan

Configure an authentication failure VLAN for users and devices that fail 802.1X authentication.

Syntax `dot1x auth-fail-vlan vlan-id [max-attempts number]`

To delete the authentication failure VLAN, use the `no dot1x auth-fail-vlan vlan-id [max-attempts number]` command.

Parameters	<i>vlan-id</i>	Enter the VLAN Identifier. The range is from 1 to 4094.
	max-attempts <i>number</i>	(OPTIONAL) Enter the keywords <code>max-attempts</code> followed number of attempts desired before authentication fails. The range is from 1 to 5. The default is 3 .
Defaults	3	attempts
Command Modes	CONFIGURATION (<i>conf-if-interface-slot/port</i>)	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Introduced on the C-Series and S-Series.

Usage Information If the host responds to 802.1X with an incorrect login/password, the login fails. The switch attempts to authenticate again until the maximum attempts configured is reached. If the authentication fails after all allowed attempts, the interface moves to the authentication failed VLAN.

After the authentication VLAN is assigned, the port-state must be toggled to restart authentication. Authentication occurs at the next reauthentication interval (`dot1x reauthentication`).

- Related Commands**
- [dot1x port-control](#) — enable port control on an interface
 - [dot1x guest-vlan](#) — configure a guest VLAN for limited access users or for devices that are not 802.1X capable.
 - [show dot1x interface](#) — display the 802.1X configuration of an interface.

dot1x auth-server

Configure the authentication server to RADIUS.

Syntax	<code>dot1x auth-server radius</code>
Defaults	None
Command Modes	CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x auth-type mab-only

To authenticate a device with MAC authentication bypass (MAB), only use the host MAC address.

Syntax `dot1x auth-type mab-only`

Defaults Disabled

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.

Usage Information

The prerequisites for enabling MAB-only authentication on a port are:

- Enable 802.1X authentication globally on the switch and on the port (the `dot1x authentication` command).
- Enable MAC authentication bypass on the port (the `dot1x mac-auth-bypass` command).

In MAB-only authentication mode, a port authenticates using the host MAC address even though 802.1x authentication is enabled. If the MAB-only authentication fails, the host is placed in the guest VLAN (if configured).

To disable MAB-only authentication on a port, enter the `no dot1x auth-type mab-only` command.

Related Commands

- [dot1x mac-auth-bypass](#) — enable MAC authentication bypass.

dot1x authentication (Configuration)

Enable dot1x globally. Enable dot1x both globally and at the interface level.

Syntax

```
dot1x authentication
```

To disable dot1x on a globally, use the `no dot1x authentication` command.

Defaults

Disabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

**Related
Commands**

- [dot1x authentication \(Interface\)](#) — enable dot1x on an interface.

dot1x authentication (Interface)

Enable dot1x on an interface. Enable dot1x both globally and at the interface level.

Syntax `dot1x authentication`
To disable dot1x on an interface, use the `no dot1x authentication` command.

Defaults Disabled

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

**Related
Commands**

- [dot1x authentication \(Configuration\)](#) — enable dot1x globally.

dot1x critical-vlan

Configure critical-VLAN for users or devices when authentication server is not reachable.

Syntax `[no] dot1x critical-vlan vlan-id`

Parameters *vlan-id* Enter the VLAN identifier. The VLAN-ID range is from 1 to 4094.

Defaults Not Configured.

Command Modes INTERFACE
INTERFACE (BATCH MODE)

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series, S4048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, S6100-ON, the Configuration Terminal Batch mode on C9010, Z9100-ON, and Z9500.
9.9(0.0)	Introduced on the C9000 Series.

Usage Information

The `dot1x critical-vlan` command configures critical VLAN for the interface. If the authentication server is not reachable or not responding, the authenticator places the port or the supplicant in critical VLAN within the first attempt.

Use this command in Interface Batch mode to configure critical VLAN for users in a dual-homing setup.

Example

```
DellEMC(conf)#show dot1x interface twentyFiveGigE 1/41
```

```
802.1x information on Tf 1/41:
-----
Dot1x Status:           Enable
Port Control:          AUTO
Port Auth Status:      AUTHORIZED (CRITICAL-VLAN)
Re-Authentication:     Enable
Untagged VLAN id:      400
Guest VLAN:            Enable
Guest VLAN id:         400
Auth-Fail VLAN:        Enable
Auth-Fail VLAN id:     400
Auth-Fail Max-Attempts: 3
Critical VLAN:         Enable
Critical VLAN id:      400
Mac-Auth-Bypass:       Disable
Mac-Auth-Bypass Only:  Disable
Tx Period:              30 seconds
Quiet Period:           60 seconds
ReAuth Max:            2
Supplicant Timeout:    30 seconds
Server Timeout:        30 seconds
Re-Auth Interval:      60 seconds
Max-EAP-Req:           2
Host Mode:              SINGLE_HOST
Auth PAE State:         Authenticated
Backend State:          Idle
```

dot1x profile

Configure a dot1x profile to define a list of trusted supplicant MAC addresses.

Syntax	<code>[no] dot1x profile <i>profile-name</i></code>
Parameters	<i>profile-name</i> Enter a dot1x <i>profile-name</i> . The profile name length is limited to 32 characters.
Defaults	None
Command Modes	CONFIGURATION CONFIGURATION TERMINAL BATCH
Error Strings	NONE
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series, S4048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, S6100-ON, the Configuration Terminal Batch mode on C9010, Z9100-ON, and Z9500.
9.9(0.0)	Introduced on the C9010.

Usage Information

The `dot1x profile` command configures a dot1x profile to define a list of trusted supplicant MAC addresses. Maximum number of dot1x profiles is limited to 10. This command launches dot1x profile mode for entering profile related commands such as the `mac` command. The `dot1x static-mab` command assigns the dot1x profile to an interface.

Use this command in Configuration Terminal Batch mode to configure the dot1x profile in a dual-homing setup.

Related Commands

- [dot1x static-mab](#)
- [mac](#)

dot1x static-mab

Enable static MAC authorization bypass (MAB) and configure static MAB profile to an interface.

Syntax `[no] dot1x static-mab profile profile-name`

Parameters **profile *profile-name*** Enter the keyword `profile` and the *profile-name* to configure the static MAB profile name. The profile name length is limited to 32 characters.

Defaults Disabled.

Command Modes INTERFACE
INTERFACE (BATCH MODE)

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series, S4048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, S6100-ON, the Configuration Terminal Batch mode on C9010, Z9100-ON, and Z9500.
9.9(0.0)	Introduced on the C9010.

Usage Information

The `dot1x static-mab` command enables static MAB (mac auth bypass) and configures the associated profile on a dot1x interface. Static MAB bypasses the authentication server for the supplicant MAC addresses configured in the associated profile.

Before you enable static MAB, you must do the following:

- Enable MAC authentication bypass on the port by configuring the `dot1x mac-auth-bypass` command.
- Ensure that no configured profile exists at the time of configuring the `static-mab` command.
- Use this command in Interface Batch Mode to enable static MAB in a dual-homing setup.

Example

```
DellEMC(conf)#do show dot1x interface twentyFiveGigE 1/41
```

```
802.1x information on Tf 1/41:
-----
Dot1x Status:          Enable
```

```

Port Control:          AUTO
Port Auth Status:     AUTHORIZED (STATIC-MAB)
Re-Authentication:    Enable
Untagged VLAN id:     400
Guest VLAN:           Enable
Guest VLAN id:        400
Auth-Fail VLAN:       Enable
Auth-Fail VLAN id:    400
Auth-Fail Max-Attempts: 3
Critical VLAN:        Enable
Critical VLAN id:     400
Mac-Auth-Bypass:      Disable
Mac-Auth-Bypass Only: Disable
Static-MAB:           Enable
Static-MAB Profile:   Sample
Tx Period:            30 seconds
Quiet Period:         60 seconds
ReAuth Max:           2
Supplicant Timeout:   30 seconds
Server Timeout:       30 seconds
Re-Auth Interval:    60 seconds
Max-EAP-Req:          2
Host Mode:            SINGLE_HOST
Auth PAE State:       Authenticated
Backend State:        Idle

```

dot1x guest-vlan

Configure a guest VLAN for limited access users or for devices that are not 802.1X capable.

Syntax `dot1x guest-vlan vlan-id`
 To disable the guest VLAN, use the `no dot1x guest-vlan vlan-id` command.

Parameters **vlan-id** Enter the VLAN Identifier. The range is from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION (*conf-if-interface-slot/port*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Version	Description
7.6.1.0	Introduced on the C-Series, E-Series, and S-Series.

Usage Information

1X authentication is enabled when an interface is connected to the switch. If the host fails to respond within a designated amount of time, the authenticator places the port in the guest VLAN.

If a device does not respond within 30 seconds, it is assumed that the device is not 802.1X capable. Therefore, a guest VLAN is allocated to the interface and authentication, for the device, occurs at the next reauthentication interval (`dot1x reauthentication`).

If the host fails authentication for the designated number of times, the authenticator places the port in authentication failed VLAN (`dot1x auth-fail-vlan`).

NOTE: You can create the Layer 3 portion of a guest VLAN and authentication fail VLANs regardless if the VLAN is assigned to an interface or not. After an interface is assigned a guest VLAN (which has an IP address), routing through the guest VLAN is the same as any other traffic. However, the interface may join/leave a VLAN dynamically.

Related Commands

- [dot1x auth-fail-vlan](#) — Configure an authentication failure VLAN.
- [dot1x reauthentication](#) — Enable periodic re-authentication of the client.
- [dot1x reauth-max](#) —

Configure the maximum number of times to re-authenticate a port before it becomes unauthorized

dot1x host-mode

Enable single-host or multi-host authentication.

Syntax `dot1x host-mode {single-host | multi-host | multi-auth}`

Parameters		
single-host		Enable single-host authentication.
multi-host		Enable multi-host authentication.
multi-auth		Enable multi-suplicant authentication.

Defaults **single-host**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added the <code>multi-auth</code> option on the C-Series and S-Series.
8.3.2.0	Added the <code>single-host</code> and <code>multi-host</code> options on the C-Series, E-Series, and S-Series.

Usage Information

- Single-host mode authenticates only one host per authenticator port and drops all other traffic on the port.
- Multi-host mode authenticates the first host to respond to an Identity Request and then permits all other traffic on the port.
- Multi-supPLICANT mode authenticates every device attempting to connect to the network on the authenticator port.

Related Commands

- [show dot1x interface](#) — display the 802.1X configuration of an interface.

dot1x mac-auth-bypass

Enable MAC authentication bypass. If 802.1X times out because the host did not respond to the Identity Request frame, Dell EMC Networking OS attempts to authenticate the host based on its MAC address.

Syntax

```
dot1x mac-auth-bypass
```

To disable MAC authentication bypass on a port, use the `no dot1x mac-auth-bypass` command.

Defaults

Disabled

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Introduced on the C-Series and S-Series.

Usage Information

To disable MAC authentication bypass on a port, enter the `no dot1x mac-auth-bypass` command.

dot1x max-eap-req

Configure the maximum number of times an extensive authentication protocol (EAP) request is transmitted before the session times out.

Syntax	<code>dot1x max-eap-req number</code> To return to the default, use the <code>no dot1x max-eap-req</code> command.
Parameters	number Enter the number of times an EAP request is transmitted before a session time-out. The range is from 1 to 10. The default is 2 .
Defaults	2
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x max-suplicants

Restrict the number of supplicants that can be authenticated and permitted to access the network through the port. This configuration is only takes effect in Multi-auth mode.

Syntax	<code>dot1x max-suplicants number</code>
Parameters	number Enter the number of supplicants that can be authenticated on a single port in Multi-auth mode. The range is from 1 to 128. The default is 128 .
Defaults	128 hosts can be authenticated on a single authenticator port.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Introduced on the C-Series and S-Series.

Related Commands

- [dot1x host-mode](#) — enable single-host or multi-host authentication.

dot1x port-control

Enable port control on an interface.

Syntax `dot1x port-control {force-authorized | auto | force-unauthorized}`

Parameters

- force-authorized** Enter the keywords `force-authorized` to forcibly authorize a port.
- auto** Enter the keyword `auto` to authorize a port based on the 802.1X operation result.
- force-unauthorized** Enter the keywords `force-unauthorized` to forcibly de-authorize a port.

Defaults None

Command Modes Auto

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The authenticator completes authentication only when you set `port-control` to `auto`.

dot1x quiet-period

Set the number of seconds that the authenticator remains quiet after a failed authentication with a client.

Syntax `dot1x quiet-period seconds`
 To disable quiet time, use the `no dot1x quiet-time` command.

Parameters `seconds` Enter the number of seconds. The range is from 1 to 65535. The default is **60**.

Defaults **60** seconds

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x reauthentication

Enable periodic reauthentication of the client.

Syntax	<code>dot1x reauthentication [interval seconds]</code> To disable periodic reauthentication, use the <code>no dot1x reauthentication</code> command.
Parameters	interval <i>seconds</i> (Optional) Enter the keyword <code>interval</code> then the interval time, in seconds, after which reauthentication is initiated. The range is from 1 to 31536000 (one year). The default is 3600 (1 hour).
Defaults	3600 seconds (1 hour)
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x reauth-max

Configure the maximum number of times a port can re-authenticate before the port becomes unauthorized.

Syntax	<code>dot1x reauth-max number</code> To return to the default, use the <code>no dot1x reauth-max</code> command.
Parameters	number Enter the permitted number of re-authentications. The range is from 1 to 10. The default is 2 .
Defaults	2
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x server-timeout

Configure the amount of time after which exchanges with the server time-out.

Syntax `dot1x server-timeout seconds`
 To return to the default, use the `no dot1x server-timeout` command.

Parameters **seconds** Enter a time-out value in seconds. The range is from 1 to 300, where 300 is implementation dependant. The default is **30**.

Defaults **30** seconds

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

When you configure the `dot1x server-timeout` value, take into account the communication medium used to communicate with an authentication server and the number of RADIUS servers configured. Ideally, the `dot1x server-timeout` value (in seconds) is based on the configured RADIUS-server timeout and retransmit values and calculated according to the following formula: `dot1x server-timeout seconds > (radius-server retransmit seconds + 1) * radius-server timeout seconds`.

Where the default values are as follows: `dot1x server-timeout` (30 seconds), `radius-server retransmit` (3 seconds), and `radius-server timeout` (5 seconds).

Example

```
DellEMC(conf)# radius-server host 10.11.197.105 timeout 6
DellEMC(conf)# radius-server host 10.11.197.105 retransmit 4
DellEMC(conf)# interface tengigabitethernet 2/23
DellEMC(conf-if-te-2/23)# dot1x server-timeout 40
DellEMC(conf-if-te-2/23)#
```

dot1x supplicant-timeout

Configure the amount of time after which exchanges with the supplicant time-out.

Syntax `dot1x supplicant-timeout seconds`

To return to the default, use the `no dot1x supplicant-timeout` command.

Parameters **seconds** Enter a time-out value in seconds. The range is from 1 to 300, where 300 is implementation dependant. The default is **30**.

Defaults **30** seconds

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x tx-period

Configure the intervals at which EAPOL PDUs the Authenticator PAE transmits.

Syntax `dot1x tx-period seconds`
 To return to the default, use the `no dot1x tx-period` command.

Parameters **seconds** Enter the interval time, in seconds, that EAPOL PDUs are transmitted. The range is from 1 to 65535. The default is **30**.

Defaults **30** seconds

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

mac

Configure a list of supplicant MAC addresses for dot1x profile represented with a profile-name.

Syntax [no] mac {*mac-address1 mac-address2... mac-address6*}

Parameters

<i>mac-address1</i>	Enter the keyword <code>mac</code> and type the 48-bit MAC addresses using the H.H.H
<i>mac-address2...</i>	format. A maximum of 6 MAC addresses are allowed.
<i>mac-address6</i>	

Defaults None

Command Modes DOT1X PROFILE CONFIG (conf-dot1x-profile)
CONFIGURATION TERMINAL BATCH

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series, S4048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, S6100-ON, the Configuration Terminal Batch mode on C9010, Z9100-ON, and Z9500.
9.9(0.0)	Introduced on the C9010.

Usage Information The `mac` command configures a list of supplicant MAC addresses for a dot1x profile represented with a profile-name. You can configure up to 6 MAC addresses in a single `mac` command. The maximum number of MAC addresses that you can configure in a single profile is limited to 100.

Use this command in Configuration Terminal Batch mode to configure a list of supplicant MAC addresses for dot1x profile in a dual-homing setup.

Example

```
DellEMC(conf)#dot1x profile mySupPLICANTS
DellEMC(conf-dot1x-profile)#mac 00:50:56:AA:01:10 00:50:56:AA:01:11

DellEMC(conf-dot1x-profile)#show config
dot1x profile mySupPLICANTS
 mac 00:50:56:aa:01:10
 mac 00:50:56:aa:01:11
DellEMC(conf-dot1x-profile)#
DellEMC(conf-dot1x-profile)#exit
```

show dot1x cos-mapping interface

Display the CoS priority-mapping table the RADIUS server provides and applies to authenticated supplicants on an 802.1X-enabled system.

Syntax show dot1x cos-mapping interface *interface* [*mac-address mac-address*]

Parameters

<i>interface</i>	Enter one of the following keywords and the interface information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
<i>mac-address</i>	(Optional) MAC address of an 802.1X-authenticated supplicant.

Defaults None

- Command Modes**
- EXEC
 - EXEC privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.

Usage Information

Enter a supplicant's MAC address using the `mac-address` option to display CoS mapping information only for the specified supplicant.

You can display the CoS mapping information applied to traffic from authenticated supplicants on 802.1X-enabled ports that are in Single-Hot, Multi-Host, and Multi-Supplicant authentication modes.

Example

```
DellEMC# show dot1x cos-mapping interface tengigabitethernet 1/32
802.1p CoS re-map table on Te 1/32:
-----
Dot1p      Remapped Dot1p
0          7
1          6
2          5
3          4
4          3
5          2
6          1
7          0
DellEMC#

DellEMC# show dot1x cos-mapping interface tengigabitethernet 1/32 mac-
address 00:00:00:00:00:10
Supplicant Mac: 0 0 0 0 0 10 Lookup for Mac:

802.1p CoS re-map table on Te 0/32:
-----

802.1p CoS re-map table for Supplicant: 00:00:00:00:00:10

Dot1p      Remapped Dot1p
0          7
1          6
2          5
3          4
```

```

4          3
5          2
6          1
7          0
DellEMC#

```

show dot1x interface

Display the 802.1X configuration of an interface.

Syntax `show dot1x interface interface [mac-address mac-address]`

Parameters

interface Enter one of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

mac-address (Optional) MAC address of a supplicant.

Defaults None

Command Modes

- EXEC
- EXEC privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Added the <code>mac-address</code> option on the C-Series and S-Series.
7.6.1.0	Introduced on the C-Series, E-Series, and S-Series.

Usage Information If you enable 802.1X multi-supplicant authentication on a port, additional 802.1X configuration details (Port Authentication status, Untagged VLAN ID, Authentication PAE state, and Backend state) display for each supplicant, as shown in the following example.

Example

```
DellEMC# show dot1x interface tengigabitethernet 1/32
```

```

802.1x information on Te 1/32:
-----
Dot1x Status:           Enable
Port Control:           AUTO
Port Auth Status:      AUTHORIZED (MAC-AUTH-BYPASS)
Re-Authentication:     Disable
Untagged VLAN id:      400
Guest VLAN:            Enable
Guest VLAN id:         100
Auth-Fail VLAN:        Disable
Auth-Fail VLAN id:     NONE
Auth-Fail Max-Attempts: NONE
Mac-Auth-Bypass:       Enable
Mac-Auth-Bypass Only:  Enable
Tx Period:              3 seconds
Quiet Period:          60 seconds
ReAuth Max:            2
Supplicant Timeout:    30 seconds
Server Timeout:        30 seconds
Re-Auth Interval:      3600 seconds
Max-EAP-Req:           2
Host Mode:              SINGLE_HOST
Auth PAE State:        Authenticated
Backend State:         Idle
DellEMC#

```

Example (mac-address)

```

DellEMC# show dot1x interface tengigabitethernet 1/32 mac-address
00:00:00:00:00:10
Supplicant Mac: 0 0 0 0 0 10 Lookup for Mac:

```

```

802.1x information on Te 1/32:
-----
Dot1x Status:           Enable
Port Control:           AUTO
Re-Authentication:     Disable
Guest VLAN:            Enable
Guest VLAN id:         100
Auth-Fail VLAN:        Disable
Auth-Fail VLAN id:     NONE
Auth-Fail Max-Attempts: NONE
Mac-Auth-Bypass:       Enable
Mac-Auth-Bypass Only:  Enable
Tx Period:              3 seconds
Quiet Period:          60 seconds
ReAuth Max:            2
Supplicant Timeout:    30 seconds
Server Timeout:        30 seconds
Re-Auth Interval:      3600 seconds
Max-EAP-Req:           2
Host Mode:              MULTI_AUTH
Max-Supplicants:       128

```

Port status and State info for Supplicant: 00:00:00:00:00:10

```

Port Auth Status:      AUTHORIZED (MAC-AUTH-BYPASS)
Untagged VLAN id:      400
Auth PAE State:        Authenticated
Backend State:         Idle
DellEMC#

```

```

DellEMC# show dot1x interface tengigabitethernet 1/32 mac-address
00:00:00:00:00:11
Supplicant Mac: 0 0 0 0 0 10 Lookup for Mac:

```

```

802.1x information on Te 1/32:
-----
Dot1x Status:           Enable
Port Control:           AUTO
Re-Authentication:     Disable
Guest VLAN:            Enable

```

```

Guest VLAN id:          100
Auth-Fail VLAN:        Disable
Auth-Fail VLAN id:     NONE
Auth-Fail Max-Attempts: NONE
Mac-Auth-Bypass:      Enable
Mac-Auth-Bypass Only: Enable
Tx Period:             3 seconds
Quiet Period:         60 seconds
ReAuth Max:           2
Supplicant Timeout:   30 seconds
Server Timeout:       30 seconds
Re-Auth Interval:     3600 seconds
Max-EAP-Req:          2
Host Mode:            MULTI_AUTH
Max-Supplicants:      128

Port status and State info for Supplicant: 00:00:00:00:00:11

Port Auth Status:      AUTHORIZED(GUEST-VLAN)
Untagged VLAN id:     100
Auth PAE State:       Authenticated
Backend State:        Idle
DellEMC#

```

show dot1x profile

Display all the dot1x profiles or the details of a specific profile configured in the system.

Syntax	<code>show dot1x profile <i>profile-name</i></code>	
Parameters	<i>profile-name</i>	Specify a static dot1x <i>profile-name</i> . The maximum character limit for a profile name is 32 characters.
Defaults	None	
Command Modes	EXEC	
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series, S4048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, S6100-ON, C9010, Z9100-ON, and Z9500.
9.9(0.0)	Introduced on the C9010.

Example

```

DellEMC#show dot1x profile

802.1x profile information
-----
Dot1x Profile mySupplicants
Profile MACs
  00:50:56:aa:01:10  00:50:56:aa:01:11

```

Boot User Mode

All commands in this chapter are available in Boot User mode on the S5000.

To access this mode, press any key when the following line appears on the console during a system boot:

```
Hit any key to stop autoboot:
```

You enter Boot User mode immediately, as indicated by the `BOOT_USER#` prompt.

NOTE: You cannot use the Tab key to complete commands in this mode.

Topics:

- [boot change](#)
- [boot messages disable](#)
- [boot messages enable](#)
- [boot show net config retries](#)
- [boot write net config retries](#)
- [boot zero](#)
- [default gateway](#)
- [enable](#)
- [help](#)
- [ignore enable password](#)
- [enable sha256-password](#)
- [ignore startup config](#)
- [interface management ethernet ip address](#)
- [interface management port config](#)
- [no default-gateway](#)
- [no interface management ethernet ip address](#)
- [reload](#)
- [show boot blc](#)
- [show boot selection](#)
- [show bootflash](#)
- [show bootvar](#)
- [show default-gateway](#)
- [show interface management ethernet](#)
- [show interface management port config](#)

boot change

Change the boot parameters in the operating system.

S5000

Syntax `boot change {primary | secondary | default}`

Command Modes `BOOT USER`

Parameters

primary	Set the S5000 to boot up with the primary boot parameters.
secondary	Set the S5000 to boot up with the secondary boot parameters.

default Set the S5000 to boot up with the default boot parameters.

Default The S5000 boots up using the primary boot parameters if they are valid. If the primary parameters are not valid, the switch boots with the secondary parameters. If the secondary parameters are not valid, it boots with the default parameters.

Command History **Version 9.0(1.3)** Introduced on the S5000.

boot messages disable

Deactivate the NetBSD boot log. By default, the NetBSD log is disabled.

S5000

Syntax `boot messages disable`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

boot messages enable

Enable the NetBSD boot log. By default, the NetBSD log is disabled.

S5000

Syntax `boot messages enable`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Notes Dell recommends that the NetBSD log remain disabled on the S5000. Use the `boot messages enable` command only if you need to debug S5000 operation.

boot show net config retries

Display the number of retries for a network boot configuration failure.

S5000

Syntax `boot show net config retries`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

Example

```
BOOT_USER# boot show net config retries
```

Number of Network Boot Config Retries is : 0

boot write net config retries

Set the number of retries used for a network boot configuration failure.

S5000

Syntax `boot write net config retries number`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

Example

```
BOOT_USER# boot write net config retries 2
```

Updated number of Network Boot Config retries to 2.

boot zero

Clear the primary, secondary, or default boot parameters in the operating system.

S5000

Syntax `boot zero {primary | secondary | default}`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

default gateway

Set the IP address of the default gateway.

S5000

Syntax `default gateway ip-address`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

enable

Set the access privilege level.

S5000

Syntax `enable {user | admin}`

Command Modes BOOT USER

Command History**Version 9.0(1.3)** Introduced on the S5000.

help

Display the Help menu.

S5000

Syntax help**Command Modes** BOOT USER**Command History** **Version 9.0(1.3)** Introduced on the S5000.**Example**

```
BOOT_USER # help
***** Dell Force10 Boot Interface Help Information *****
Current access level: USER LEVEL
Use "syntax help" for more information on syntax.
Available command list (30 commands total):
  boot change [primary|secondary|default]
    change operating system boot parameters
  boot messages disable
    turn off netbsd boot messages
  boot messages enable
    turn on netbsd boot messages
  boot show net config retries
    show number of retries for network boot config failure
  boot write net config retries <int>
    write number of retries for network boot config failure
  boot zero [primary|secondary|default]
    zero operating system boot parameters
  default-gateway <ip-address>
  default-gateway - set the default gateway ip address
  enable [user|admin]
    change access privilege level
-(26%)-Use <CR> to continue, q to stop:
  help
    display help menu
  ignore enable-password
    ignore enable password
  ignore startup-config
    ignore system startup-config
  interface management ethernet ip address <ip/mask>
  set the management port ip address and mask
  interface management port config 1000m
    set the management port at 1000m
  interface management port config 100m
    set the management port at 100m
  interface management port config 10m
    set the management port at 10m
  interface management port config auto-negotiate
    set the management port to auto negotiate
  interface management port config full-duplex
    set the management port to full-duplex
  interface management port config half-duplex
    set the management port to half-duplex
-(60%)-Use <CR>> to continue, q to stop:
  interface management port config no auto-negotiate
    set the management port to no auto negotiate. set speed and duplex
  to def
    ault values of (100m/full-duplex)
  no default-gateway
    clear the default gateway ip address
  no interface management ethernet ip address
```

```

clear the management port ip address and mask
reload
  reload entire chassis
show boot blc
  show the boot loop counter value
show boot selection
  display rom bootstrap bootflash partition
show bootflash
  summary display of boot flash information
show bootvar
  summary display of operating system boot parameters
show default-gateway
  display the default gateway ip address
show interface management ethernet
  display the management port ip address and mask
-(93%)-Use <CR>to continue, q to stop:
show interface management port config
  show the management port boot characteristics
syntax help
  show syntax information

```

ignore enable password

Ignore the enabled password.

S5000

Syntax	<code>ignore enable password</code>
Command Modes	BOOT USER
Command History	Version 9.0(1.3) Introduced on the S5000.

enable sha256-password

Configure SHA-256 based password for the enable command.

Syntax	<code>enable sha256-password [level <i>level</i>] [<i>encryption-type</i>] <i>password</i></code> To delete a password, use the <code>no enable sha256-password [<i>encryption-type</i>] <i>password</i> [level <i>level</i>]</code> command.
Parameters	<p>sha256-password Enter the keyword <code>sha256-password</code> then the <code>encryption-type</code> or the password.</p> <p>level <i>level</i> (OPTIONAL) Enter the keyword <code>level</code> then a number as the level of access. The range is from 1 to 15.</p> <p><i>encryption-type</i> (OPTIONAL) Enter the number 8 or 0 as the encryption type. Enter 8 to enter the sha256-based hashed password.</p> <p><i>password</i> Enter a text string, up to 96 characters long, as the clear text password.</p>
Defaults	No password is configured. <i>level</i> = 15 .
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.13(0.0)	Changed the maximum length of the password from 32 to 96.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON, S6000, S6000-ON, S5000, S4810, S4820T, S3048-ON, S4048-ON, MXL, FN IOM, C9010, S3100, and Z9100-ON.

Related Commands

- [show running-config](#) — views the current configuration.
- [privilege level \(CONFIGURATION mode\)](#) — controls access to the command modes within the switch.

ignore startup config

Ignore the system startup configuration.

S5000

Syntax	<code>ignore startup config</code>
Command Modes	BOOT USER
Command History	Version 9.0(1.3) Introduced on the S5000.

interface management ethernet ip address

Set the IP address and mask of the management port.

S5000

Syntax	<code>interface management ethernet ip address <i>ip-address/mask</i></code>
Command Modes	BOOT USER
Command History	Version 9.0(1.3) Introduced on the S5000.

interface management port config

Set the speed or transmission mode of the management port.

S5000

Syntax	<code>interface management port config {10m 100m 1000m auto-negotiate no auto-negotiate full-duplex half-duplex}</code>	
Parameters	10m	Set the management port to operate at 10 Mbps.
	100m	Set the management port to operate at 100 Mbps.
	1000m	Set the management port to operate at 1000 Mbps.
	auto-negotiate	Set the management port to auto-negotiate its speed with a peer device.

no auto-negotiate	Remove auto-negotiation from the management port and reset it to the default values (transmit at 100 Mbps in full-duplex mode).
full-duplex	Set the management port to transmit in full-duplex mode.
half-duplex	Set the management port to transmit in half-duplex mode.

Default The management port transmits at 100 Mbps in full-duplex mode.

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

no default-gateway

Clear the IP address of the default gateway.

S5000

Syntax no default-gateway

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

no interface management ethernet ip address

Clear the IP address and mask of the management port.

S5000

Syntax no interface management ethernet ip address

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

reload

Reload the S5000 switch.

S5000

Syntax reload

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

show boot blc

Display the current boot-loop counter value.

S5000

- Syntax** show boot blc
- Command Modes** BOOT USER
- Command History** **Version 9.0(1.3)** Introduced on the S5000.
- Example**

```
BOOT_USER # show boot blc
Boot Loop Counter : 3
```

show boot selection

Display the currently selected bootflash partition to be used for a ROM bootstrap operation.

S5000

- Syntax** show boot selection
- Command Modes** BOOT USER
- Command History** **Version 9.0(1.3)** Introduced on the S5000.
- Example**

```
BOOT_USER # show boot selection
ROM BOOTSTRAP SELECTOR PARMETERS:
=====
Next ROM bootstrap set to occur from Bootflash partition A.
Last ROM bootstrap occurred from Bootflash partition B.
```

show bootflash

Display information about boot flash memory.

S5000

- Syntax** show bootflash
- Command Modes** BOOT USER
- Command History** **Version 9.0(1.3)** Introduced on the S5000.
- Example**

```
BOOT_USER # show bootflash
GENERAL BOOTFLASH INFO
=====
Bootflash Partition A:
```

```

Dell Force10 Networks System Boot
Official S5000_LP_IMG_BOOT_LOADER, BSP Release 1.3.1.2
Created Thu May 9 12:01:34 2013 by build on tools-sjc-01

Bootflash Partition B:
Dell Force10 Networks System Boot
Official S5000_LP_IMG_BOOT_LOADER, BSP Release 1.3.1.2
Created Thu May 9 19:24:22 2013 by build on tools-sjc-01

Boot Selector Partition:
Dell Force10 Networks System Boot
Official S5000_BTSEL_LP_IMG_BOOT_SELECTOR, BSP Release 1.3.0.1
Created Thu May 9 19:24:23 2013 by build on tools-sjc-01

BOOT_USER #

```

show bootvar

Display information about the boot parameters used in the operating system.

S5000

- Syntax** `show bootvar`
- Command Modes** BOOT USER
- Command History** **Version 9.0(1.3)** Introduced on the S5000.
- Example**

```

BOOT_USER # show bootvar

PRIMARY OPERATING SYSTEM BOOT PARAMETERS:
=====
boot device           : flash
file name             : systema (FTOS system://A Partition)

SECONDARY OPERATING SYSTEM BOOT PARAMETERS:
=====
boot device           : flash
file name             : systemb (FTOS system://B Partition)

DEFAULT OPERATING SYSTEM BOOT PARAMETERS:
=====
boot device           : flash
file name             : systema (FTOS system://A Partition)

BOOT_USER #

```

show default-gateway

Display the IP address of the default gateway.

S5000

- Syntax** `show default-gateway`
- Command Modes** BOOT USER
- Command History** **Version 9.0(1.3)** Introduced on the S5000.

Example

```
BOOT_USER # show default-gateway
Gateway IP address: 10.11.210.63
```

show interface management ethernet

Display the IP address and mask of the management port.

S5000

Syntax `show interface management ethernet`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

Example

```
BOOT_USER # show interface management ethernet
Management ethernet IP address: 10.11.210.35/16
```

show interface management port config

Display configuration information about the management port.

S5000

Syntax `show interface management port config`

Command Modes BOOT USER

Command History **Version 9.0(1.3)** Introduced on the S5000.

Example

```
BOOT_USER # show inter management port conf
Management ethernet Port Configuration: Auto Negotiate
```

Access Control Lists (ACL)

Access control lists (ACLs) are supported by the Dell EMC Networking OS.

Dell EMC Networking OS supports the following types of ACL, IP prefix list, and route maps:

- Commands Common to all ACL Types
- Common IP ACL Commands
- Standard IP ACL Commands
- Extended IP ACL Commands
- Common MAC Access List Commands
- Standard MAC ACL Commands
- Extended MAC ACL Commands
- IP Prefix List Commands
- Route Map Commands
- AS-Path Commands
- IP Community List Commands

 **NOTE:** For ACL commands that use the Trace function, see *Trace List Commands* section in [Security](#).

 **NOTE:** For IPv6 ACL commands, see [IPv6 Access Control Lists \(IPv6 ACLs\)](#).

Topics:

- [Commands Common to all ACL Types](#)
- [Common IP ACL Commands](#)
- [Standard IP ACL Commands](#)
- [Extended IP ACL Commands](#)
- [Common MAC Access List Commands](#)
- [Standard MAC ACL Commands](#)
- [Extended MAC ACL Commands](#)
- [IP Prefix List Commands](#)
- [Route Map Commands](#)
- [AS-Path Commands](#)
- [IP Community List Commands](#)
- [deny \(for Standard IP ACLs\)](#)
- [deny \(for Extended IP ACLs\)](#)
- [seq \(for Standard IPv4 ACLs\)](#)
- [deny tcp \(for Extended IP ACLs\)](#)
- [deny udp \(for Extended IP ACLs\)](#)
- [deny arp \(for Extended MAC ACLs\)](#)
- [deny icmp \(for Extended IP ACLs\)](#)
- [deny ether-type \(for Extended MAC ACLs\)](#)
- [deny \(for Standard MAC ACLs\)](#)
- [deny \(for Extended MAC ACLs\)](#)
- [permit \(for Standard IP ACLs\)](#)
- [permit arp \(for Extended MAC ACLs\)](#)
- [permit ether-type \(for Extended MAC ACLs\)](#)
- [permit icmp \(for Extended IP ACLs\)](#)
- [permit udp \(for Extended IP ACLs\)](#)
- [permit \(for Extended IP ACLs\)](#)
- [permit \(for Standard MAC ACLs\)](#)
- [seq \(for Standard MAC ACLs\)](#)
- [permit tcp \(for Extended IP ACLs\)](#)

- seq arp (for Extended MAC ACLs)
- seq ether-type (for Extended MAC ACLs)
- seq (for IP ACLs)
- seq (for IPv6 ACLs)
- permit udp (for IPv6 ACLs)
- permit tcp (for IPv6 ACLs)
- permit icmp (for IPv6 ACLs)
- permit (for IPv6 ACLs)
- deny udp (for IPv6 ACLs)
- deny tcp (for IPv6 ACLs)
- deny icmp (for Extended IPv6 ACLs)
- deny (for IPv6 ACLs)

Commands Common to all ACL Types

The following commands are available within each ACL mode and do not have mode-specific options. Some commands in this chapter may use similar names, but require different options to support the different ACL types (for example, the deny and permit commands).

remark

Enter a description for an ACL entry.

Syntax	<code>remark [remark-number] [description]</code>	
Parameters	remark-number	Enter the remark number. The range is from 0 to 65535 for MAC ACL and 0 to 4294967290 for IP ACL.
	 NOTE:	You can use the same sequence number for the remark and an ACL rule.
	description	Enter a description of up to 80 characters.
Defaults	Not configured.	
Command Modes	<ul style="list-style-type: none"> • CONFIGURATION-STANDARD-ACCESS-LIST • CONFIGURATION-EXTENDED-ACCESS-LIST • CONFIGURATION-MAC ACCESS LIST-STANDARD • CONFIGURATION-MAC ACCESS LIST-EXTENDED 	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced on the E-Series.

Usage Information

The `remark` command is available in each ACL mode. You can configure up to 4294967291 remarks for a given IP ACL and 65536 remarks for a given MAC ACL.

The following example shows the use of the `remark` command twice within CONFIGURATION-STANDARD-ACCESS-LIST mode. The same sequence number was used for the remark and for an associated ACL rule. The remark precedes the rule in the running-config because it is assumed that the remark is for the rule with the same sequence number, or the group of rules that follow the remark.

Example

```
DellEMC(config-std-nacl) # remark 10 Deny rest of the traffic
DellEMC(config-std-nacl) # remark 5 Permit traffic from XYZ Inc.
DellEMC(config-std-nacl) # show config
!
ip access-list standard test
remark 5 Permit traffic from XYZ Inc.
seq 5 permit 1.1.1.0/24
remark 10 Deny rest of the traffic
seq 10 deny any
DellEMC(config-std-nacl) #
```

Related Commands

- [show config](#) — display the current ACL configuration.

show config

Display the current ACL configuration.

Syntax `show config`

- Command Modes**
- CONFIGURATION-STANDARD-ACCESS-LIST
 - CONFIGURATION-EXTENDED-ACCESS-LIST
 - CONFIGURATION-MAC ACCESS LIST-STANDARD
 - CONFIGURATION-MAC ACCESS LIST-EXTENDED

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(config-std-nacl)# show conf
!
ip access-list standard test
 remark 5 Permit traffic from XYZ Inc.
 seq 5 permit 1.1.1.0/24 count
 remark 10 Deny traffic from ABC
 seq 10 deny 2.1.1.0/24 count
DellEMC(config-std-nacl)#
```

Common IP ACL Commands

The following commands are available within both Ingress and Egress IP ACL modes (Standard and Extended) and do not have mode-specific options. When an ACL is created without a rule and then is applied to an interface, ACL behavior reflects an implicit permit.

The platform supports both Ingress and Egress IP ACLs.

 **NOTE:** Also refer to the [Commands Common to all ACL Types](#) section.

access-class

Apply a standard ACL to a terminal line.

Syntax `access-class access-list-name [ipv4 | ipv6]`

To remove an ACL, use the `no access-class` command.

Parameters

- access-list-name** Enter the name of a configured Standard ACL, up to 140 characters.
- ipv4** Enter the keyword `ipv4` to configure an IPv4 access class.
- ipv6** Enter the keyword `ipv6` to configure an IPv6 access class.

Defaults Not configured.

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>ipv4</code> and <code>ipv6</code> parameters to the command.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increase the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

When you use the `access-class access-list-name` command without specifying the `ipv4` or `ipv6` attribute, both IPv4 as well as IPv6 rules that are defined in that ACL are applied to the terminal. This method is a generic way of configuring access restrictions.

To be able to filter access exclusively using either IPv4 or IPv6 rules, use either the `ipv4` or `ipv6` attribute along with the `access-class access-list-name` command. Depending on the attribute that you specify (`ipv4` or `ipv6`), the ACL processes either IPv4 or IPv6 rules, but not both. Using this configuration, you can set up two different types of access classes with each class processing either IPv4 or IPv6 rules separately.

However, if you already have configured generic IP ACL on a terminal line, then you cannot further apply IPv4 or IPv6 specific filtering on top of this configuration. Because, both IPv4 and IPv6 access classes are already configured on this terminal line. Before applying either IPv4 or IPv6 filtering, first undo the generic configuration using the `no access-class access-list-name` command.

Similarly, if you have configured either IPv4 or IPv6 specific filtering on a terminal line, you cannot apply generic IP ACLs on top of this configuration. Before applying the generic ACL configuration, first undo the existing configuration using the `no access-class access-list-name [ipv4 | ipv6]` command.

clear counters ip access-group

Erase all counters maintained for access lists.

Syntax `clear counters ip access-group [access-list-name]`

Parameters ***access-list-name*** (OPTIONAL) Enter the name of a configured access-list, up to 140 characters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increase the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

ip access-group

Assign an IP access list (IP ACL) to an interface.

Syntax `ip access-group access-list-name {in | out} [implicit-permit] [vlan vlan-id] [vrf vrf-name]`

To delete an IP access-group configuration, use the `no ip access-group access-list-name {in | out} [implicit-permit] [vlan vlan-id] [layer3]` command.

Parameters

<i>access-list-name</i>	Enter the name of a configured access list, up to 140 characters.
in	Enter the keyword <code>in</code> to apply the ACL to incoming traffic.
out	Enter the keyword <code>out</code> to apply the ACL to outgoing traffic.
implicit-permit	(OPTIONAL) Enter the keyword <code>implicit-permit</code> to change the default action of the ACL from implicit-deny to implicit-permit (that is, if the traffic does not match the filters in the ACL, the traffic is permitted instead of dropped).
vlan <i>vlan-id</i>	(OPTIONAL) Enter the keyword <code>vlan</code> then the ID numbers of the VLANs. The range is from 1 to 4094 (you can use IDs from 1 to 4094).
vrf <i>vrf-name</i>	(OPTIONAL) Enter the keyword <code>vrf</code> then the ID numbers of the VRFs. The range is from 1 to 63 (you can use IDs from 1 to 63).
	NOTE: When you specify a single VRF, use the name of the VRF instead of the VRF ID number. Use the VRF ID numbers only when you specify a range of VRFs.
layer3	(OPTIONAL) Enter the keyword <code>layer3</code> to enable layer 3 mode. It ensures that all the ACL rules in the access-group are applied only for L3 router packets.

Defaults	Not enabled.
Command Modes	INTERFACE/VRF MODE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information You can assign one ingress ACL and one egress ACL to an interface.

i **NOTE:** This command supports Loopback interfaces EE3 and EF series route processor modules (RPMs). This command does not support Loopback interfaces ED series RPMs and S-Series Loopback interfaces.

i **NOTE:** If you apply outbound(egress) IP acl on a switch port, the filter applies only for routed traffic egressing out of that port.

To associate an access-list to a non-default VRF, use the `vrf` attribute of this command. You can use this command at the interface context (physical/LAG) to apply the access-list to a range of VRFs.

The VRF MODE is not available for the default and management VRFs.

- Related Commands**
- [ip access-list standard](#) — configure a standard ACL.
 - [ip access-list extended](#) — configure an extended ACL.

ip control-plane egress-filter

Enable egress Layer 3 ACL lookup for IPv4 CPU traffic.

Syntax `ip control-plane egress-filter`

Defaults Not enabled.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

show ip accounting access-list

Display the IP access-lists created on the switch and the sequence of filters.

Syntax

```
show ip accounting {access-list access-list-name | cam_count} interface  
interface [vrf vrf-name]
```

Parameters

access-list-name	Enter the name of the ACL to be displayed.
cam_count	List the count of the CAM rules for this ACL.
interface interface	Enter the keyword <code>interface</code> then the one of the following keywords and the interface information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a port channel interface, enter the keywords <code>port-channel</code> then a number.For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
in out	Identify whether ACL is applied on the ingress or egress side.
vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF to view the IP accounting information on either a default or a non-default VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Updated the show command output to include monitor option.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for the 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced.

Usage Information

 **NOTE:** The vrf option is available only when VRF feature is enabled.

show ip accounting access-lists Field	Description
“Extended IP...”	Displays the name of the IP ACL.
“seq 5...”	Displays the filter. If the keywords <code>count</code> or <code>byte</code> were configured in the filter, the number of packets or bytes the filter processes is displayed at the end of the line.
“order 4”	Displays the QoS order of priority for the ACL entry.

Example

```
DelleMC# show ip accounting access-list
!
Standard Ingress IP access list test on TenGigabitEthernet 0/88
Total cam count 2
  seq 5 permit 1.1.1.0/24 any negotiate 150 monitor 300 count (0 packets)
  seq 10 deny 2.1.1.0/24 count (0 packets)
DelleMC#
```

show ip access-lists

Display all of the IP ACLs configured in the system, whether or not they are applied to an interface, and the count of matches/mismatches against each ACL entry displayed.

Syntax `show ip access-lists [access-list-name] [interface interface] [in | out] [vrf vrf-name]`

Parameters **access-list-name** Enter the name of a configured MAC ACL, up to 140 characters.

interface <i>interface</i>	Enter the keyword <code>interface</code> followed by the one of the following keywords and slot/port or number information: <ul style="list-style-type: none"> For a VLAN interface, enter the keyword <code>vlan</code> followed by the slot/port number. For a Port Channel interface, enter the keyword <code>port-channel</code> followed by a number. For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> followed by the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
in out	Identify whether ACL is applied on the ingress or egress side.
vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> and then the name of the VRF to display the access-lists that are configured on either the default or non-default VRFs.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.5.1.0	Added support for the 4-port 40G line cards on the E-Series.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Standard IP ACL Commands

When you create an ACL without any rule and then apply it to an interface, the ACL behavior reflects an implicit permit. The platform supports both Ingress and Egress IP ACLs.

 **NOTE:** Also refer to the [Commands Common to all ACL Types](#) and [Common IP ACL Commands](#) sections.

deny

To drop packets with a certain IP address, configure a filter.

Syntax `deny {source | any | host {ip-address}} [count [bytes] | log] [dscp value] [ecn value] [fragments] [monitor] [no-drop] [order]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {source [mask] | any | host ip-address}` command.

Parameters

source	Enter the IP address in dotted decimal format of the network from which the packet was sent.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host <i>ip-address</i>	Enter the keyword <code>host</code> and then enter the IP address to specify a host IP address only.

count	(OPTIONAL) Enter the keyword <code>count</code> to count the packets.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count the bytes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enter ACL matches in the log.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match the IP DSCP values. The range is from 0 to 63.
ecn	(OPTIONAL) Enter the keyword <code>ecn</code> to match the ECN bits. The range is from 0 to 3.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS order for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.  NOTE: For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults

Not configured.

Command Modes

CONFIGURATION-STANDARD-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option.
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the *Quality of Service* section in the *Dell EMC Networking OS Configuration Guide*.

The software cannot count both packets and bytes; when you enter the `count byte` options, only bytes increment.

Related Commands

- [ip access-list standard](#) — configure a standard ACL.
- [permit](#) — configure a permit filter.

ip access-list standard

Create a standard IP access list (IP ACL) to filter based on IP address.

Syntax `ip access-list standard access-list-name`
 To delete an access list, use the `no ip access-list standard access-list-name` command.

Parameters `access-list-name` Enter a string up to 140 characters long as the ACL name.

Defaults All IP access lists contain an implicit “deny any,” that is, if no match occurs, the packet is dropped.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option.

Version	Description
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

Dell EMC Networking OS supports one ingress and one egress IP ACL per interface.

Prior to Dell EMC Networking OS version 7.8.1.0, names are up to 16 characters long.

The number of entries allowed per ACL is hardware-dependent. For detailed specifications on entries allowed per ACL, refer to your line card documentation.

Example

```
DellEMC(conf)# ip access-list standard TestList
DellEMC(config-std-nacl)#
```

Related Commands

- [ip access-list extended](#) — create an extended access list.
- [show config](#) — display the current configuration.

permit

To permit packets from a specific source IP address to leave the switch, configure a filter.

Syntax

```
permit {source [mask] | any | host ip-address} [count [bytes] | log] [dscp value] [ecn value] [fragments] [monitor ] [no-drop] [order]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit {source [mask] | any | host ip-address}` command.

Parameters

source	Enter the IP address in dotted decimal format of the network from which the packet was sent.
mask	(OPTIONAL) Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address or hostname.
count	(OPTIONAL) Enter the keyword <code>count</code> to count the packets.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count the bytes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enter ACL matches in the log.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match the IP DSCP values. The range is from 0 to 63.
ecn	(OPTIONAL) Enter the keyword <code>ecn</code> to match the ECN bits. The range is from 0 to 3.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS order for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.  NOTE: For more information, see "Flow-based Monitoring" in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults	Not configured.
Command Modes	CONFIGURATION-STANDARD-ACCESS-LIST
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.12(0.0)	Removed the <i>session-ID</i> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <i>session-ID</i> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option.
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the “Quality of Service” section of the *Dell EMC Networking OS Configuration Guide*.

- Related Commands**
- `deny` — assign a IP ACL filter to deny IP packets.
 - `ip access-list standard` — create a standard ACL.

resequence access-list

Re-assign sequence numbers to entries of an existing access-list.

Syntax `resequence access-list {ipv4 | ipv6 | mac} {access-list-name StartingSeqNum Step-to-Increment}`

Parameters	ipv4 ipv6 mac	Enter the keyword <code>ipv4</code> or <code>mac</code> to identify the access list type to resequence.
	access-list-name	Enter the name of a configured IP access list.
	StartingSeqNum	Enter the starting sequence number to resequence. The range is from 0 to 4294967290.

Step-to-Increment Enter the step to increment the sequence number. The range is from 1 to 4294967290.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series (IPv6).
8.1.1.0	Introduced on the E-Series (IPv4).
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information When you have exhausted all the sequence numbers, this feature permits re-assigning a new sequence number to entries of an existing access-list.

seq

Assign a sequence number to a deny or permit filter in an IP access list while creating the filter.

Syntax `seq sequence-number {deny | permit} {source [mask] | any | host ip-address} [count [byte] | log] [dscp value] [ecn value] [fragments] [monitor] [no-drop] [order]`

To delete a filter, use the `no seq sequence-number` command.

Parameters	sequence-number Enter a number from 0 to 4294967290.
	deny Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition.
	permit Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this criteria.

source	Enter an IP address in dotted decimal format of the network from which the packet was received.
mask	(OPTIONAL) Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address or hostname.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count bytes the filter processes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enter ACL matches in the log.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match to the IP DSCP values. The range is from 0 to 63.
ecn	(OPTIONAL) Enter the keyword <code>ecn</code> to match to the ECN values. The range is from 0 to 3.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS order for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.  NOTE: For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured

Command Modes CONFIGURATION-STANDARD-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option.
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. The following applies:

- The `seq sequence-number` command is applicable only in an ACL group.
- The `order` option works across ACL groups that are applied on an interface via the QoS policy framework.
- The `order` option takes precedence over `seq sequence-number`.
- If you do not configure `sequence-number`, the rules with the same order value are ordered according to their configuration order.
- If you configure `sequence-number`, the sequence-number is used as a tie breaker for rules with the same order.

Related Commands

- `deny` — configure a filter to drop packets.
- `permit` — configure a filter to forward packets.

Extended IP ACL Commands

When an ACL is created without any rule and then applied to an interface, ACL behavior reflects an implicit permit.

The following commands configure extended IP ACLs, which in addition to the IP address, also examine the packet's protocol type.

The platform supports both Ingress and Egress IP ACLs.

 **NOTE:** Also refer to the [Commands Common to all ACL Types](#) and [Common IP ACL Commands](#) sections.

deny

Configure a filter that drops IP packets meeting the filter criteria.

Syntax

```
deny {ip | ip-protocol-number} {source mask | any | host ip-address}
{destination mask | any | host ip-address} [ttl operator] [count [byte] |
log] [dscp value] [order] [monitor] [fragments] [no-drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {ip | ip-protocol-number} {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ip	Enter the keyword <code>ip</code> to configure a generic IP access list. The keyword <code>ip</code> specifies that the access list denies all IP protocols.
ip-protocol-number	Enter a number from 0 to 255 to deny based on the protocol identified in the IP protocol header.

source	Enter the IP address of the network or host from which the packets were sent.
mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or noncontiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
destination	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>t11</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets that the filter processes.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes that the filter processes.
log	(OPTIONAL, E-Series only) Enter the keyword <code>log</code> to enter ACL matches in the log.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match to the IP DCSCP values.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see <i>Flow-based Monitoring</i> in the Port Monitoring section in the <i>Dell EMC Networking OS Configuration Guide</i> .
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t11</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the noncontiguous mask and added the <code>monitor</code> option.
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the Quality of Service section in the *Dell EMC Networking OS Configuration Guide*.

When you use the `log` option, the CP processor logs detail the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, see [Port Monitoring](#).

The C-Series and S-Series cannot count both packets and bytes, when you enter the count byte options, only bytes are incremented.

 **NOTE:** When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Related Commands

- [deny tcp](#) — assign a filter to deny TCP packets.
- [deny udp](#) — assign a filter to deny UDP packets.
- [ip access-list extended](#) — create an extended ACL.

deny icmp

To drop all or specific internet control message protocol (ICMP) messages, configure a filter.

Syntax

```
deny icmp {source mask | any | host ip-address} {destination mask | any | host ip-address} [ttl operator] [dscp] [count [byte] [order] [fragments] [monitor] [no-drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny icmp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

source Enter the IP address of the network or host from which the packets were sent.

mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
destination	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
dscp	Enter this keyword <code>dscp</code> to deny a packet based on the DSCP value. The range is from 0 to 63.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower order numbers have a higher priority) If you did not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see <i>Flow-based Monitoring</i> in the Port Monitoring section in the <i>Dell EMC Networking OS Configuration Guide</i> .
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(2.0P0)	Added the <code>type</code> parameter to filter the ICMP packets based on the type and code on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the keyword <code>dscp</code> .
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.4.1.0	Added support for non-contiguous mask and added the <code>monitor</code> option.
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the *Quality of Service* section of the *Dell EMC Networking OS Configuration Guide*.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, see [Port Monitoring](#).

deny tcp

Configure a filter that drops transmission control protocol (TCP) packets meeting the filter criteria.

Syntax

```
deny tcp {source mask | any | host ip-address} [bit] [operator port [port]]
{destination mask | any | host ip-address} [ttl operator] [dscp] [bit]
[operator port [port]] [count [bytes] [order] [fragments] [monitor] [no-
drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny tcp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

source	Enter the IP address of the network or host from which the packets are sent.
mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.

- `lt` (less than) — matches packets that contain a `ttl` value that is less than the specified `ttl` value.
- `range`(inclusive range of values) — matches packets that contain a `ttl` value that falls between the specified range of `ttl` values.

dscp Enter this keyword `dscp` to deny a packet based on the DSCP value. The range is from 0 to 63.

bit Enter a flag or combination of bits:

- `ack`: acknowledgement field
- `fin`: finish (no more data from the user)
- `psh`: push function
- `rst`: reset the connection
- `syn`: synchronize sequence numbers
- `urg`: urgent field

operator (OPTIONAL) Enter one of the following logical operand:

- `eq` = equal to
- `neq` = not equal to
- `gt` = greater than
- `lt` = less than
- `range` = inclusive range of ports (you must specify two ports for the `port` command)

port port Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is from 0 to 65535.

The following list includes some common TCP port numbers:

- 23 = Telnet
- 20 and 21 = FTP
- 25 = SMTP
- 169 = SNMP

destination Enter the IP address of the network or host to which the packets are sent.

mask Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.

count (OPTIONAL) Enter the keyword `count` to count packets the filter processes.

byte (OPTIONAL) Enter the keyword `byte` to count bytes the filter processes.

order (OPTIONAL) Enter the keyword `order` to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority) If you did not use the keyword `order`, the ACLs have the lowest order by default (255).

fragments Enter the keyword `fragments` to use ACLs to control packet fragments.

monitor (OPTIONAL) Enter the keyword `monitor` to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see *Flow-based Monitoring* in the Port Monitoring section in the *Dell EMC Networking OS Configuration Guide*.

no-drop Enter the keywords `no-drop` to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>tul</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(2.0P0)	Added the <code>established</code> parameter on the on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the keyword <code>dscp</code> .
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for non-contiguous mask and added the <code>monitor</code> option. Deprecated the keyword <code>established</code> .
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the Quality of Service section of the *Dell EMC Networking OS Configuration Guide*.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, see the [Port Monitoring](#) section.

The C-Series and S-Series cannot count both packets and bytes; when you enter the count byte options, only bytes are incremented.

NOTE: When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (for example, `gt`, `lt`, or `range`) may require more than one entry. The range of ports is configured in the CAM based on bit mask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000–8000 uses eight entries in the CAM.

Rule#	Data	Mask	From	To	#Covered
1	0000111110100000	1111111111100000	4000	4031	32

```

2 0000111111000000 1111111111000000 4032 4095 64
3 0001000000000000 1111100000000000 4096 6143 2048
4 0001100000000000 1111110000000000 6144 7167 1024
5 0001110000000000 1111111000000000 7168 7679 512
6 0001111000000000 1111111100000000 7680 7935 256
7 0001111100000000 1111111110000000 7936 7999 64
8 0001111101000000 1111111111111111 8000 8000 1

Total Ports: 4001

```

Example

An ACL rule with a TCP port 1023 uses only one entry in the CAM.

```

Rule# Data Mask From To #Covered
1 0000000000000000 1111110000000000 0 1023 1024

Total Ports: 1024

```

Related Commands

- `deny` — assign a filter to deny IP traffic.
- `deny udp` — assign a filter to deny UDP traffic.

deny udp

To drop user datagram protocol (UDP) packets meeting the filter criteria, configure a filter.

Syntax

```

deny udp {source mask | any | host ip-address} [operator port [port]]
{destination mask | any | host ip-address} [ttl operator] [dscp] [operator
port [port]] [count [byte] [order] [fragments] [monitor] [no-drop]

```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny udp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

- source** Enter the IP address of the network or host from which the packets were sent.
- mask** Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
- any** Enter the keyword `any` to specify that all routes are subject to the filter.
- host ip-address** Enter the keyword `host` then the IP address to specify a host IP address.
- ttl** Enter the keyword `ttl` to deny a packet based on the time to live value. The range is from 1 to 255.
- operator** Enter one of the following logical operand:
 - `eq`(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.
 - `neq`(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.
 - `gt`(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.
 - `lt` (less than) — matches packets that contain a ttl value that is less than the specified ttl value.
 - `range`(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
- dscp** Enter this keyword `dscp` to deny a packet based on the DSCP value. The range is from 0 to 63.
- operator** (OPTIONAL) Enter one of the following logical operand:
 - `eq` = equal to
 - `neq` = not equal to

- `gt` = greater than
- `lt` = less than
- `range` = inclusive range of ports (you must specify two ports for the `port` command)

<i>port port</i>	Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is from 0 to 65535.
<i>destination</i>	Enter the IP address of the network or host to which the packets are sent.
<i>mask</i>	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
<i>count</i>	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
<i>byte</i>	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
<i>order</i>	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority) If you did not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
<i>fragments</i>	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
<i>monitor</i>	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see <i>Flow-based Monitoring</i> in the Port Monitoring section in the <i>Dell EMC Networking OS Configuration Guide</i> .
<i>no-drop</i>	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the keyword <code>ds cp</code> .

Version	Description
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for non-contiguous mask and added the <code>monitor</code> option. Deprecated the keyword <code>established</code> .
6.5.1.0	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the Quality of Service section of the *Dell EMC Networking OS Configuration Guide*.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, see the [Port Monitoring](#) section.

The C-Series and S-Series cannot count both packets and bytes; when you enter the count byte options, only bytes are incremented.

NOTE: When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (for example, `gt`, `lt` or `range`) may require more than one entry. The range of ports is configured in the CAM based on bit mask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000–8000 uses eight entries in the CAM.

```

Rule#  Data                Mask                From To #Covered
1  00001111110100000  11111111111100000  4000 4031 32
2  00001111111000000  11111111111100000  4032 4095 64
3  00010000000000000  11111000000000000  4096 6143 2048
4  00011000000000000  11111100000000000  6144 7167 1024
5  00011100000000000  11111110000000000  7168 7679 512
6  00011110000000000  11111111000000000  7680 7935 256
7  00011111000000000  11111111110000000  7936 7999 64
8  00011111101000000  11111111111111111  8000 8000 1

Total Ports: 4001

```

Example

An ACL rule with a TCP port `lt 1023` uses only one entry in the CAM.

```

Rule#  Data                Mask                From To #Covered
1  00000000000000000  11111100000000000  0    1023 1024

Total Ports: 1024

```

Related Commands

- `deny` — assign a filter to deny IP traffic.
- `deny tcp` — assign a filter to deny TCP traffic.

ip access-list extended

Name (or select) an extended IP access list (IP ACL) based on IP addresses or protocols.

Syntax

```
ip access-list extended access-list-name
```

To delete an access list, use the `no ip access-list extended access-list-name` command.

Parameters	<i>access-list-name</i> Enter a string up to 140 characters long as the access list name.
Defaults	All access lists contain an implicit “deny any”; that is, if no match occurs, the packet is dropped.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information The number of entries allowed per ACL is hardware-dependent. For detailed specification about entries allowed per ACL, refer to your line card documentation.

Prior to 7.8.1.0, names are up to 16 characters long.

Example

```
DelleMC(conf)# ip access-list extended TESTListEXTEND
DelleMC(config-ext-nacl)#
```

- Related Commands**
- [ip access-list standard](#) — configure a standard IP access list.
 - [show config](#) — display the current configuration.

permit

To pass IP packets meeting the filter criteria, configure a filter.

Syntax

```
permit {source mask | any | host ip-address} {destination mask | any | host ip-address} [ttl operator] [count [bytes]] [dscp value] [order] [fragments] [monitor] [no-drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.

- Use the `no deny {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

source	Enter the IP address in dotted decimal format of the network from which the packet was sent.
mask	(OPTIONAL) Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address or hostname.
destination	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>t11</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count bytes processed by the filter.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match to the IP DCSCP values.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults

Not configured.

Command Modes

CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t11</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option.
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the “Quality of Service” section of the *Dell EMC Networking OS Configuration Guide*.

The software cannot count both packets and bytes; when you enter the count byte options, only bytes are incremented.

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit tcp](#) — assign a permit filter for TCP packets.
- [permit udp](#) — assign a permit filter for UDP packets.

permit tcp

To pass TCP packets meeting the filter criteria, configure a filter.

Syntax

```
permit tcp {source mask | any | host ip-address} [bit] [operator port
[port]] {destination mask | any | host ip-address} [bit] [ttl operator]
[dscp] [operator port [port]] [count [byte] [order] [fragments] [monitor]
[no-drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter’s sequence number.
- Use the `no permit tcp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

source	Enter the IP address of the network or host from which the packets were sent.
mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.

bit	Enter a flag or combination of bits: <ul style="list-style-type: none"> • <code>ack</code>: acknowledgement field • <code>fin</code>: finish (no more data from the user) • <code>psh</code>: push function • <code>rst</code>: reset the connection • <code>syn</code>: synchronize sequence numbers • <code>urg</code>: urgent field
ttl	Enter the keyword <code>t1</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
dscp	Enter the keyword <code>dscp</code> to permit a packet based on the DSCP value. The range is from 0 to 63.
operator	(OPTIONAL) Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the port parameter)
port port	Enter the application layer port number. Enter two port numbers if you are using the range logical operand. The range is from 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none"> • 23 = Telnet • 20 and 21 = FTP • 25 = SMTP • 169 = SNMP
destination	Enter the IP address of the network or host to which the packets are sent.
mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes the filter processes.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>tul</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(2.0P0)	Added the <code>established</code> parameter on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the keyword <code>dscp</code> .
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for non-contiguous mask and added the <code>monitor</code> option. Deprecated the keyword <code>established</code> .
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the “Quality of Service” section of the *Dell EMC Networking OS Configuration Guide*.

 **NOTE:** When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

The S-Series cannot count both packets and bytes; when you enter the count byte options, only bytes increment.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, see the [Port Monitoring](#) section.

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (for example, `gt`, `lt`, or `range`) may require more than one entry. The range of ports is configured in the CAM based on bit mask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000–8000 uses eight entries in the CAM.

```
DelleMC# Data Mask From To #Covered
1 00001111110100000 1111111111100000 4000 4031 32
2 00001111111000000 11111111111000000 4032 4095 64
3 00010000000000000 11111000000000000 4096 6143 2048
4 00011000000000000 11111100000000000 6144 7167 1024
5 00011100000000000 11111110000000000 7168 7679 512
6 00011110000000000 11111111000000000 7680 7935 256
7 00011111000000000 11111111100000000 7936 7999 64
8 00011111010000000 11111111111111111 8000 8000 1

Total Ports: 4001
```

Example

An ACL rule with a TCP port 1023 uses only one entry in the CAM.

```
DelleMC# Data Mask From To #Covered
1 00000000000000000 11111100000000000 0 1023 1024

Total Ports: 1024
```

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit](#) — assign a permit filter for IP packets.
- [permit udp](#) — assign a permit filter for UDP packets.

permit udp

To pass UDP packets meeting the filter criteria, configure a filter.

Syntax

```
permit udp {source mask | any | host ip-address} [operator port [port]]
{destination mask | any | host ip-address} [ttl operator] [dscp] [operator
port [port]] [count [byte] [order] [fragments] [monitor] [no-drop]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit udp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

- source** Enter the IP address of the network or host from which the packets were sent.
- mask** Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
- any** Enter the keyword `any` to specify that all routes are subject to the filter.
- host ip-address** Enter the keyword `host` and then enter the IP address to specify a host IP address.
- ttl** Enter the keyword `ttl` to permit a packet based on the time to live value. The range is from 1 to 255.
- operator** Enter one of the following logical operand:
- `eq`(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.
 - `neq`(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.
 - `gt`(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.
 - `lt` (less than) — matches packets that contain a ttl value that is less than the specified ttl value.
 - `range`(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.

dscp	Enter the keyword <code>dscp</code> to deny a packet based on the DSCP value. The range is from 0 to 63.
operator	(OPTIONAL) Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the <code>port</code> parameter)
port port	Enter the application layer port number. Enter two port numbers if you are using the <code>range</code> logical operand. The range is 0 to 65535.
destination	Enter the IP address of the network or host to which the packets are sent.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS priority for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see "Flow-based Monitoring" in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t11</code> parameter. Removed the <code>session-ID</code> option from the <code>monitor</code> parameter.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.3.1.0	Added the keyword <code>dscp</code> .
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for non-contiguous mask and added the <code>monitor</code> option. .
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `order` option is relevant in the context of the Policy QoS feature only. For more information, see the “Quality of Service” section of the *Dell EMC Networking OS Configuration Guide*.

NOTE: When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

The S-Series cannot count both packets and bytes; when you enter the `count byte` options, only bytes increment.

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, refer to [Port Monitoring](#).

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (for example, `gt`, `lt`, or `range`) may require more than one entry. The range of ports is configured in the CAM based on bit mask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000–8000 uses eight entries in the CAM.

```
DellEMC# Data                Mask                From To  #Covered
1 00001111110100000 1111111111100000 4000 4031 32
2 00001111111000000 1111111111100000 4032 4095 64
3 00010000000000000 11111000000000000 4096 6143 2048
4 00011000000000000 11111100000000000 6144 7167 1024
5 00011100000000000 11111110000000000 7168 7679 512
6 00011110000000000 11111111000000000 7680 7935 256
7 00011111000000000 11111111100000000 7936 7999 64
8 00011111010000000 11111111111111111 8000 8000 1

Total Ports: 4001
```

Example

An ACL rule with a TCP port `lt 1023` uses only one entry in the CAM.

```
DellEMC# Data                Mask                From To  #Covered
1 00000000000000000 11111100000000000 0     1023 1024

Total Ports: 1024
```

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit](#) — assign a permit filter for IP packets.
- [permit tcp](#) — assign a permit filter for TCP packets.

resequence access-list

Re-assign sequence numbers to entries of an existing access-list.

Syntax `resequence access-list {ipv4 | mac} {access-list-name StartingSeqNum Step-to-Increment}`

Parameters	ipv4 mac	Enter the keyword <code>ipv4</code> or <code>mac</code> to identify the access list type to resequence.
	<i>access-list-name</i>	Enter the name of a configured IP access list, up to 140 characters.
	<i>StartingSeqNum</i>	Enter the starting sequence number to resequence. The range is from 0 to 4294967290.
	<i>Step-to-Increment</i>	Enter the step to increment the sequence number. The range is from 1 to 4294967290.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series (IPv4).
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information When all sequence numbers are exhausted, this feature permits re-assigning a new sequence number to entries of an existing access-list.

seq

Assign a sequence number to a deny or permit filter in an extended IP access list while creating the filter.

Syntax

```
seq sequence-number {deny | permit} {ip-protocol-number | icmp | ip | tcp | udp} {source mask | any | host ip-address} {destination mask | any | host ip-address} [operator [portnumber ]] [ttl operator] [count [byte] | log] [dscp value] [ecn value] [fragments] [monitor [session-ID]] [no-drop] [order]
```

Parameters	<i>sequence-number</i>	Enter a number from 0 to 4294967290.
	deny	Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition.

permit	Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this criteria.
<i>ip-protocol-number</i>	Enter a number from 0 to 255 to filter based on the protocol identified in the IP protocol header.
icmp	Enter the keyword <code>icmp</code> to configure an ICMP access list filter.
ip	Enter the keyword <code>ip</code> to configure a generic IP access list. The keyword <code>ip</code> specifies that the access list permits all IP protocols.
tcp	Enter the keyword <code>tcp</code> to configure a TCP access list filter.
udp	Enter the keyword <code>udp</code> to configure a UDP access list filter.
source	Enter an IP address in dotted decimal format of the network from which the packet was received.
mask	(OPTIONAL) Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host <i>ip-address</i>	Enter the keyword <code>host</code> and then enter the IP address to specify a host IP address or hostname.
operator	(OPTIONAL) Enter one of the following logical operands: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the <code>port</code> parameter.)
<i>portnumber</i>	(OPTIONAL) Enter the application layer port number. Enter two port numbers if you are using the range logical operand. The range is from 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none"> • 23 = Telnet • 20 and 21 = FTP-DATA and FTP • 25 = SMTP • 169 = SNMP
<i>destination</i>	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>t1</code> to permit or deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
count	(OPTIONAL) Enter the keyword <code>count</code> to count the packets.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count the bytes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enter ACL matches in the log.
dscp	(OPTIONAL) Enter the keyword <code>dscp</code> to match to the IP DSCP values. The range is from 0 to 63.

ecn	(OPTIONAL) Enter the keyword <code>ecn</code> to match to the ECN values. The range is from 0 to 3.
order	(OPTIONAL) Enter the keyword <code>order</code> to specify the QoS order for the ACL entry. The range is from 0 to 254 (where 0 is the highest priority and 254 is the lowest; lower-order numbers have a higher priority). If you do not use the keyword <code>order</code> , the ACLs have the lowest order by default (255).
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> then the session-ID to describe the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. The session-ID range is from 0 to 65535.  NOTE: For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .
fragments	Enter the keyword <code>fragments</code> to use ACLs to control packet fragments.
no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults Not configured

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.11(2.0P0)	Included support for using logical names of a protocol to configure an IP access list in both TCP and UDP on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.11(0.0)	Added support for <code>session-ID</code> to the <code>monitor</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Add the DSCP value for ACL matching.
8.2.1.0	Allows ACL control of fragmented packets for IP (Layer 3) ACLs.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added support for the non-contiguous mask and added the <code>monitor</code> option. Deprecated the keyword <code>established</code> .

Version	Description
6.5.10	Expanded to include the optional QoS <code>order</code> priority for the ACL entry.

Usage Information

The `monitor` option is relevant in the context of flow-based monitoring only. For more information, refer to [Port Monitoring](#).

The `order` option is relevant in the context of the Policy QoS feature only. The following applies:

- The `seq sequence-number` command is applicable only in an ACL group.
- The `order` option works across ACL groups that are applied on an interface via the QoS policy framework.
- The `order` option takes precedence over `seq sequence-number`.
- If you do not configure `sequence-number`, the rules with the same order value are ordered according to their configuration order.
- If you configure `sequence-number`, the sequence-number is used as a tie breaker for rules with the same order.

When you use the `log` option, the CP processor logs details about the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

If you configure the `sequence-number`, the `sequence-number` is used as a tie breaker for rules with the same order.

 **NOTE:** When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Related Commands

- `deny` — configure a filter to drop packets.
- `permit` — configure a filter to forward packets.

Common MAC Access List Commands

The following commands are available within both MAC ACL modes (Standard and Extended) and do not have mode-specific options. These commands allow you to clear, display, and assign MAC ACL configurations.

The platform supports both Ingress and Egress MAC ACLs.

The MAC ACL can be applied on Physical, Port-channel and VLAN interfaces. As per the specified rules in the ACL, the traffic on the interface/ VLAN members or Port-channel members will be permitted or denied.

clear counters mac access-group

Clear counters for all or a specific MAC ACL.

Syntax `clear counters mac access-group [mac-list-name]`

Parameters `mac-list-name` (OPTIONAL) Enter the name of a configured MAC access list.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

mac access-group

Apply a MAC ACL to traffic entering or exiting an interface. You can apply a MAC ACL on a physical, port-channel, or VLAN interface.

Syntax `mac access-group access-list-name {in [vlan vlan-range] | out}`

To delete a MAC access-group, use the `no mac access-group mac-list-name` command.

Parameters

access-list-name Enter the name of a configured MAC access list, up to 140 characters.

 **NOTE:** This option is available only with the keyword `in` option.

vlan vlan-range (OPTIONAL) Enter the keyword `vlan` and then enter a range of VLANs. The range is from 1 to 4094 (you can use IDs 1 to 4094).

 **NOTE:** This option is available only with the keyword `in` option.

optimized Enter the keyword `optimized` to enable ACL optimization.

in Enter the keyword `in` to configure the ACL to filter incoming traffic.

out Enter the keyword `out` to configure the ACL to filter outgoing traffic.

NOTE:

1. If the MAC ACL is applied on VLAN, none of the VLAN members should have an access list applied for that VLAN.
2. If the MAC ACL is applied on a Physical or Port Channel interface, the VLAN in which this port is associated should not have an access list applied.
3. If the MAC ACL is applied on a VLAN, then that VLAN should not belong to VLAN ACL group.
4. If the MAC ACL is applied on a VLAN ACL group, then none of the VLANs in that group should have an access list applied on it.

Defaults none

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

You can assign one ingress ACL and one egress ACL (standard or extended) to an interface.

Related Commands

- [mac access-list standard](#) — configure a standard MAC ACL.
- [mac access-list extended](#) — configure an extended MAC ACL.

show mac access-lists

Display all of the Layer 2 ACLs configured in the system, whether or not they are applied to an interface, and the count of matches/mismatches against each ACL entry displayed.

Syntax `show mac access-lists [access-list-name] [interface interface] [in | out]`

Parameters

- access-list-name** Enter the name of a configured MAC ACL, up to 140 characters.
- interface interface** Enter the keyword `interface` then the one of the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
 - For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.
- in | out** Identify whether ACL is applied on ingress or egress side.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.1.0	Introduced.

show mac accounting access-list

Display MAC access list configurations and counters (if configured).

Syntax `show mac accounting access-list access-list-name interface interface in | out`

Parameters

access-list-name Enter the name of a configured MAC ACL, up to 140 characters.

interface
interface Enter the keyword `interface` then the one of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

in | out Identify whether ACL is applied on ingress or egress side.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series
6.1.1.0	Introduced on the E-Series.

Usage Information

The ACL hit counters increment the counters for each matching rule, not just the first matching rule.

Example

```
DellEMC# show mac accounting access-list TestMac interface
tengigabitethernet 1/8 in
Ingress Standard mac access-list TestMac on TenGigabitEthernet 1/89
Total cam count 2
  seq 5 permit aa:aa:aa:aa:00:00 00:00:00:00:ff:ff count (0 packets)
  seq 10 deny any count (20072594 packets)
DellEMC#
```

Standard MAC ACL Commands

When you create an access control list without any rule and then apply it to an interface, the ACL behavior reflects implicit permit. These commands configure standard MAC ACLs and support both Ingress and Egress MAC ACLs.

 **NOTE:** For more information, also refer to the [Commands Common to all ACL Types](#) and [Common MAC Access List Commands](#) sections.

deny

To drop packets with a the MAC address specified, configure a filter.

Syntax deny {any | *mac-source-address* [*mac-source-address-mask*]} [count [byte]] [log] [monitor]

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {any | mac-source-address mac-source-address-mask}` command.

Parameters

any Enter the keyword `any` to specify that all routes are subject to the filter.

mac-source-address Enter a MAC address in `nn:nn:nn:nn:nn:nn` format.

mac-source-address-mask	(OPTIONAL) Specify which bits in the MAC address must match. If no mask is specified, a mask of 00:00:00:00:00:00 is applied (in other words, the filter allows only MAC addresses that match).
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
log	(OPTIONAL, E-Series only) Enter the keyword <code>log</code> to log the packets.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see the “Flow-based Monitoring” in the Port Monitoring section in the <i>Dell EMC Networking OS Configuration Guide</i> .

Defaults Not enabled.

Command Modes CONFIGURATION-MAC ACCESS LIST-STANDARD

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the <code>monitor</code> option.

Usage Information When you use the `log` option, the CP processor logs detail the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets’ details.

 **NOTE:** When you configure ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

- Related Commands**
- `permit` — configures a MAC address filter to pass packets.
 - `seq` — configures a MAC address filter with a specified sequence number.

mac access-list standard

To configure a standard MAC ACL, name a new or existing MAC access control list (MAC ACL) and enter MAC ACCESS LIST mode. Also refer to the Commands Common to all ACL Types section and the Common MAC Access List Commands section.

Syntax `mac access-list standard mac-list-name`
To delete a MAC access list, use the `no mac access-list standard mac-list-name` command.

Parameters **mac-list-name** Enter a text string as the name of the standard MAC access list (140 character maximum).

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information Dell EMC Networking OS supports one ingress and one egress MAC ACL per interface.

The number of entries allowed per ACL is hardware-dependent. For detailed specifications about entries allowed per ACL, see your line card documentation.

 **NOTE:** Ingress ACLs are supported on C-Series and S-Series platforms only.

Example

```
DellEMC(conf)# mac-access-list access-list standard TestMAC
DellEMC(config-std-macl)# permit 00:00:00:00:00:00 00:00:00:00:ff:ff
count
DellEMC(config-std-macl)# deny any count
DellEMC(config-std-macl)#
```

permit

To forward packets from a specific source MAC address, configure a filter.

Syntax `permit {any | mac-source-address [mac-source-address-mask]} [count [byte]] | [log [interval minutes] [threshold-in-msgs [count]]] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit {any | mac-source-address mac-source-address-mask}` command.

Parameters	any	Enter the keyword <code>any</code> to forward all packets received with a MAC address.
	mac-source-address	Enter a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.
	mac-source-address-mask	(OPTIONAL) Specify which bits in the MAC address must match. If no mask is specified, a mask of <code>00:00:00:00:00:00</code> is applied (in other words, the filter allows only MAC addresses that match).
	count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
	byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
	log	(OPTIONAL) Enter the keyword <code>log</code> to include ACL messages in the log.
	threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see "Flow-based Monitoring" in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .

Defaults Not configured.

Command Modes CONFIGURATION-MAC ACCESS LIST-STANDARD

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

When you use the `log` option, the CP processor logs details about the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

 **NOTE:** When you configure the ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging `inst"ad`.

Related Commands

- `deny` — configure a MAC ACL filter to drop packets.
- `seq` — configure a MAC ACL filter with a specified sequence number.

seq

To a deny or permit filter in a MAC access list while creating the filter, assign a sequence number.

Syntax

```
deny {any | mac-source-address [mac-source-address-mask]} [count [byte]]
[log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {any | mac-source-address mac-source-address-mask}` command.

Parameters

any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
mac-source-address	Enter a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.
mac-source-address-mask	(OPTIONAL) Specify which bits in the MAC address must match. If no mask is specified, a mask of <code>00:00:00:00:00:00</code> is applied (in other words, the filter allows only MAC addresses that match).
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
log	(OPTIONAL) Enter the keyword <code>log</code> to include ACL messages in the log.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see "Flow-based Monitoring" in the Port Monitoring section in the <i>Dell EMC Networking OS Configuration Guide</i> .

Defaults Not configured

Command Modes CONFIGURATION-MAC ACCESS LIST-STANDARD

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the no-drop parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the <code>monitor</code> option.
6.1.1.0	Introduced on the E-Series.

Usage Information

When you use the `log` option, the CP processor logs details about the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

 **NOTE:** When you configure the ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Related Commands

- `deny` — configure a filter to drop packets.
- `permit` — configure a filter to forward packets.

Extended MAC ACL Commands

When an access-list is created without any rule and then applied to an interface, ACL behavior reflects implicit permit. The following commands configure Extended MAC ACLs.

The platform supports both Ingress and Egress MAC ACLs.

 **NOTE:** For more information, also refer to the [Commands Common to all ACL Types](#) and [Common MAC Access List Commands](#) sections.

deny

To drop packets that match the filter criteria, configure a filter.

Syntax

```
deny {any | host mac-address | mac-source-address mac-source-address-mask} {any | host mac-address | mac-destination-address mac-destination-address-mask} [ether-type-operator] [count [byte]] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.

- Use the `no deny {any | host mac-address | mac-source-address mac-source-address-mask} {any | host mac-address | mac-destination-address mac-destination-address-mask}` command.

Parameters

any	Enter the keyword <code>any</code> to drop all packets.
host mac-address	Enter the keyword <code>host</code> and then enter a MAC address to drop packets with that host address.
mac-source-address	Enter a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.
mac-source-address-mask	Specify which bits in the MAC address must match. The MAC ACL supports an inverse mask; therefore, a mask of <code>ff:ff:ff:ff:ff:ff</code> allows entries that do not match and a mask of <code>00:00:00:00:00:00</code> only allows entries that match exactly.
mac-destination-address	Enter the destination MAC address and mask in <code>nn:nn:nn:nn:nn:nn</code> format.
mac-destination-address-mask	Specify which bits in the MAC address must match. The MAC ACL supports an inverse mask; therefore, a mask of <code>ff:ff:ff:ff:ff:ff</code> allows entries that do not match and a mask of <code>00:00:00:00:00:00</code> only allows entries that match exactly.
ethertype operator	(OPTIONAL) To filter based on protocol type, enter one of the following Ethertypes: <ul style="list-style-type: none"> • <code>ev2</code> - is the Ethernet II frame format • <code>11c</code> - is the IEEE 802.3 frame format • <code>snap</code> - is the IEEE 802.3 SNAP frame format
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
log	(OPTIONAL) Enter the keyword <code>log</code> to include ACL messages in the log.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface. For more information, see “Flow-based Monitoring” in the Port Monitoring section of the <i>Dell EMC Networking OS Configuration Guide</i> .

Defaults Not configured.

Command Modes CONFIGURATION-MAC ACCESS LIST-EXTENDED

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the <code>monitor</code> option.
6.1.1.0	Introduced on the E-Series.

Usage Information

When you use the `log` option, the CP processor logs detail the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

 **NOTE:** When you configure the ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Related Commands

- `permit` — configure a MAC address filter to pass packets.
- `seq` — configure a MAC address filter with a specified sequence number.

mac access-list extended

Name a new or existing extended MAC access control list (extended MAC ACL).

Syntax

`mac access-list extended access-list-name [cpu-qos]`

To delete a MAC access list, use the `no mac access-list extended access-list-name` command.

Parameters

- access-list-name** Enter a text string as the MAC access list name, up to 140 characters.
- cpu-qos** Enter the keywords `cpu-qos` to assign this ACL to control plane traffic only (CoPP).

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

The number of entries allowed per ACL is hardware-dependent. For detailed specifications about entries allowed per ACL, refer to your line card documentation.

Prior to 7.8.1.0, names are up to 16 characters long.

Example

```
DelleMC(conf)# mac-access-list access-list extended TestMATExt
DelleMC(config-ext-macl)# remark 5 IPv4
DelleMC(config-ext-macl)# seq 10 permit any any ev2 eq 800 count bytes
DelleMC(config-ext-macl)# remark 15 ARP
DelleMC(config-ext-macl)# seq 20 permit any any ev2 eq 806 count bytes
DelleMC(config-ext-macl)# remark 25 IPv6
DelleMC(config-ext-macl)# seq 30 permit any any ev2 eq 86dd count bytes
DelleMC(config-ext-macl)# seq 40 permit any any count bytes
DelleMC(config-ext-macl)# exit
DelleMC(conf)# do show mac accounting access-list snickers interface
tengig 1/17 in
Extended mac access-list snickers on TenGigabitEthernet 1/17
seq 10 permit any any ev2 eq 800 count bytes (559851886 packets
191402152148
bytes)
seq 20 permit any any ev2 eq 806 count bytes (74481486 packets 5031686754
bytes)
seq 30 permit any any ev2 eq 86dd count bytes (7751519 packets 797843521
bytes)
```

Related Commands

- [mac access-list standard](#) — configure a standard MAC access list.
- [show mac accounting access-list](#) — display MAC access list configurations and counters (if configured).

permit

To pass packets matching the criteria specified, configure a filter.

Syntax

```
permit {any | host mac-address | mac-source-address mac-source-address-mask} {any | host mac-address | mac-destination-address mac-destination-address-mask} [ethertype operator] [count [byte]] | [log] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.

- Use the `no permit {any | host mac-address | mac-source-address mac-source-address-mask} {any | mac-destination-address mac-destination-address-mask}` command.

Parameters

any	Enter the keyword <code>any</code> to forward all packets.
host	Enter the keyword <code>host</code> then a MAC address to forward packets with that host address.
mac-source-address	Enter a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.
mac-source-address-mask	(OPTIONAL) Specify which bits in the MAC address must match. The MAC ACL supports an inverse mask; therefore, a mask of <code>ff:ff:ff:ff:ff:ff</code> allows entries that do not match and a mask of <code>00:00:00:00:00:00</code> only allows entries that match exactly.
mac-destination-address	Enter the destination MAC address and mask in <code>nn:nn:nn:nn:nn:nn</code> format.
mac-destination-address-mask	Specify which bits in the MAC address must be matched. The MAC ACL supports an inverse mask; therefore, a mask of <code>ff:ff:ff:ff:ff:ff</code> allows entries that do not match and a mask of <code>00:00:00:00:00:00</code> only allows entries that match exactly.
ethertype operator	(OPTIONAL) To filter based on protocol type, enter one of the following Ethertypes: <ul style="list-style-type: none"> • <code>ev2</code> - is the Ethernet II frame format • <code>11c</code> - is the IEEE 802.3 frame format • <code>snap</code> - is the IEEE 802.3 SNAP frame format
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes the filter processes.
log	(OPTIONAL, E-Series only) Enter the keyword <code>log</code> to log the packets.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.  NOTE: For more information, see Flow-based Monitoring in the “Port Monitoring” section of the <i>Dell EMC Networking OS Configuration Guide</i> .

Defaults Not configured.

Command Modes CONFIGURATION-MAC ACCESS LIST-EXTENDED

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the <code>monitor</code> option.
6.1.1.0	Introduced on the E-Series.

Usage Information

When you use the `log` option, the CP processor logs details about the packets that match. Depending on how many packets match the log entry and at what rate, the CP may become busy as it has to log these packets' details.

NOTE: When you configure the ACL logging and byte counters simultaneously, byte counters may display an incorrect value. Configure packet counters with logging instead.

Related Commands

- `deny` — configure a MAC ACL filter to drop packets.
- `seq` — configure a MAC ACL filter with a specified sequence number.

IP Prefix List Commands

When you create an access-list without any rule and then apply it to an interface, the ACL behavior reflects implicit permit. To configure or enable IP prefix lists, use these commands.

clear ip prefix-list

Reset the number of times traffic meets the conditions ("hit" counters) of the configured prefix lists.

Syntax	<code>clear ip prefix-list [prefix-name]</code>	
Parameters	<i>prefix-name</i>	(OPTIONAL) Enter the name of the configured prefix list to clear only counters for that prefix list, up to 140 characters long.
Defaults	Clears "hit" counters for all prefix lists unless a prefix list is specified.	
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increase the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip prefix-list](#) — configure a prefix list.

deny

To drop packets meeting the criteria specified, configure a filter.

Syntax `deny ip-prefix [ge min-prefix-length] [le max-prefix-length]`

To delete a drop filter, use the `no deny ip-prefix` command.

Parameters	
<i>ip-prefix</i>	Specify an IP prefix in the network/length format. For example, 35.0.0.0/ 8 means match the first 8 bits of address 35.0.0.0.
<i>ge min-prefix-length</i>	(OPTIONAL) Enter the keyword <code>ge</code> and then enter the minimum prefix length, which is a number from zero (0) to 32.
<i>le max-prefix-length</i>	(OPTIONAL) Enter the keyword <code>le</code> and then enter the maximum prefix length, which is a number from zero (0) to 32.

Defaults Not configured.

Command Modes PREFIX-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

Sequence numbers for this filter are automatically assigned starting at sequence number 5. If you do not use the `ge` or `le` options, only packets with an exact match to the prefix are filtered.

ip prefix-list

Enter the PREFIX-LIST mode and configure a prefix list.

Syntax

`ip prefix-list prefix-name`

To delete a prefix list, use the `no ip prefix-list prefix-name` command.

Parameters

prefix-name

Enter a string up to 16 characters long as the name of the prefix list, up to 140 characters long.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
6.2.1.1	Introduced on the E-Series.

Usage Information

Prefix lists redistribute OSPF and RIP routes meeting specific criteria.

Related Commands

- [show ip route list](#) — display IP routes in an IP prefix list.
- [show ip prefix-list summary](#) — display a summary of the configured prefix lists.

seq

To a deny or permit filter in a prefix list while configuring the filter, assign a sequence number.

Syntax

```
seq sequence-number {deny | permit} {any} | [ip-prefix /nn {ge min-prefix-length} {le max-prefix-length}] | [bitmask number]
```

To delete a specific filter, use the `no seq sequence-number {deny | permit} {any} | [ip-prefix {ge min-prefix-length} {le max-prefix-length}] | [bitmask number]`.

Parameters

sequence-number	Enter a number. The range is from 1 to 4294967294.
deny	Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition..
permit	Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this condition.
any	(OPTIONAL) Enter the keyword <code>any</code> to match any packets.
ip-prefix /nn	(OPTIONAL) Specify an IP prefix in the network/length format. For example, 35.0.0.0/8 means match the first 8 bits of address 35.0.0.0.
ge min-prefix-length	(OPTIONAL) Enter the keyword <code>ge</code> and then enter the minimum prefix length, which is a number from zero (0) to 32.
le max-prefix-length	(OPTIONAL) Enter the keyword <code>le</code> and then enter the maximum prefix length, which is a number from zero (0) to 32.
bitmask number	Enter the keyword <code>bitmask</code> then enter a bit mask number in dotted decimal format.

Defaults

Not configured.

Command Modes

PREFIX-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Added the <code>bit mask</code> option.

Usage Information

If you do not use the `ge` or `le` options, only packets with an exact match to the prefix are filtered.

show config

Display the current PREFIX-LIST configurations.

Syntax `show config`

Command Modes PREFIX-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-nprefix1)# show config
!
ip prefix-list snickers
DellEMC(conf-nprefix1)#
```

show ip prefix-list detail

Display details of the configured prefix lists.

Syntax	<code>show ip prefix-list detail [prefix-name]</code>
Parameters	prefix-name (OPTIONAL) Enter a text string as the name of the prefix list, up to 140 characters.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip prefix-list detail
Ip Prefix-list with the last deletion/insertion: PL_OSPF_to_RIP
ip prefix-list PL_OSPF_to_RIP:
count: 3, range entries: 1, sequences: 5 - 25
  seq 5 permit 1.1.1.0/24 (hit count: 0)
  seq 10 deny 2.1.0.0/16 ge 23 (hit count: 0)
  seq 25 permit 192.0.0.0 bitmask 192.0.0.0 (hit count: 800)
DellEMC#
```

show ip prefix-list summary

Display a summary of the configured prefix lists.

Syntax	<code>show ip prefix-list summary [prefix-name]</code>
Parameters	prefix-name (OPTIONAL) Enter a text string as the name of the prefix list, up to 140 characters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip prefix-list summary
Ip Prefix-list with the last deletion/insertion: PL_OSPF_to_RIP
ip prefix-list PL_OSPF_to_RIP:
count: 3, range entries: 1, sequences: 5 - 25
DellEMC#
```

Route Map Commands

When you create an access-list without any rule and then applied to an interface, the ACL behavior reflects implicit permit.

To configure route maps and their redistribution criteria, use the following commands.

continue

To a route-map entry with a higher sequence number, configure a route-map.

Syntax	<code>continue [sequence-number]</code>
Parameters	<i>sequence-number</i> (OPTIONAL) Enter the route map sequence number. The range is from 1 to 65535.
Defaults	Not configured.
Command Modes	ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048–ON.
9.8(0.0P2)	Introduced on the S3048–ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The `continue` feature allows movement from one route-map entry to a specific route-map entry (the sequence number). If you do not specify the sequence number, the `continue` feature simply moves to the next sequence number (also known as an implied continue). If a match clause exists, the `continue` feature executes only after a successful match occurs. If there are no successful matches, the `continue` feature is ignored.

Match clause with Continue clause

The `continue` feature can exist without a match clause. A continue clause without a match clause executes and jumps to the specified route-map entry.

With a match clause and a continue clause, the match clause executes first and the continue clause next in a specified route map entry. The continue clause launches only after a successful match. The behavior is:

- A successful match with a continue clause, the route map executes the set clauses and then goes to the specified route map entry upon execution of the continue clause.
- If the next route map entry contains a continue clause, the route map executes the continue clause if a successful match occurs.
- If the next route map entry does not contain a continue clause, the route map evaluates normally. If a match does not occur, the route map does not continue and falls through to the next sequence number, if one exists.

Set Clause with Continue Clause

If the route-map entry contains sets with the continue clause, set actions are performed first then the continue clause jumps to the specified route map entry.

- If a set action occurs in the first route map entry and then the same set action occurs with a different value in a subsequent route map entry, the last set of actions overrides the previous set of actions with the same `set` command.
- If `set community additive` and `set as-path prepend` are configure, the communities and AS numbers are prepended.

Related Commands

- [set community](#) — specify a COMMUNITY attribute.
- [set as-path](#) — configure a filter to modify the AS path.

description

Add a description to this route map.

Syntax `description {description}`

To remove the description, use the `no description {description}` command.

Parameters **description** Enter a description to identify the route map (80 characters maximum).

Defaults None

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
pre-7.7.1.0	Introduced.

Related Commands

- [route-map](#) — enable a route map.

match as-path

To match routes that have a certain AS number in their BGP path, configure a filter.

Syntax `match as-path as-path-name`

To delete a match AS path filter, use the `no match as-path as-path-name` command.

Parameters **as-path-name** Enter the name of an established AS-PATH ACL, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set as-path](#) — add information to the BGP AS_PATH attribute.

match community

To match routes that have a certain COMMUNITY attribute in their BGP path, configure a filter.

Syntax

`match community community-list-name [exact]`

To delete a community match filter, use the `no match community` command.

Parameters

community-list-name

Enter the name of a configured community list.

exact

(OPTIONAL) Enter the keywords `exact` to process only those routes with this community list name.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set community](#) — specify a COMMUNITY attribute.

match interface

To match routes whose next hop is on the interface specified, configure a filter.

Syntax

`match interface interface`

To remove a match, use the `no match interface interface` command.

Parameters

interface

Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Related Commands

- [match ip address](#) — redistribute routes that match an IP address.
- [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
- [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
- [match metric](#) — redistribute routes that match a specific metric.
- [match route-type](#) — redistribute routes that match a route type.
- [match tag](#) — redistribute routes that match a specific tag.

match ip address

To match routes based on IP addresses specified in an access list, configure a filter.

Syntax `match ip address prefix-list-name`
 To delete a match, use the `no match ip address prefix-list-name` command.

Parameters **prefix-list-name** Enter the name of configured prefix list, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.

Version	Description
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [match interface](#) — redistribute routes that match the next-hop interface.
- [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
- [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
- [match metric](#) — redistribute routes that match a specific metric.
- [match route-type](#) — redistribute routes that match a route type.
- [match tag](#) — redistribute routes that match a specific tag.

match ip next-hop

To match based on the next-hop IP addresses specified in an IP access list or IP prefix list, configure a filter.

Syntax `match ip next-hop {prefix-list prefix-list-name}`
 To delete a match, use the `no match ip next-hop {prefix-list prefix-list-name}` command.

Parameters **prefix-list *prefix-list-name*** Enter the keywords `prefix-list` and then enter the name of configured prefix list, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [match interface](#) — redistribute routes that match the next-hop interface.
- [match ip address](#) — redistribute routes that match an IP address.
- [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
- [match metric](#) — redistribute routes that match a specific metric.
- [match route-type](#) — redistribute routes that match a route type.
- [match tag](#) — redistribute routes that match a specific tag.

match ip route-source

To match based on the routes advertised by routes specified in IP access lists or IP prefix lists, configure a filter.

Syntax `match ip route-source {prefix-list prefix-list-name}`
 To delete a match, use the `no match ip route-source {prefix-list prefix-list-name}` command.

Parameters **prefix-list *prefix-list-name*** Enter the keywords `prefix-list` and then enter the name of configured prefix list, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names were up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

- Related Commands**
- [match interface](#) — redistribute routes that match the next-hop interface.
 - [match ip address](#) — redistribute routes that match an IP address.
 - [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
 - [match metric](#) — redistribute routes that match a specific metric.
 - [match route-type](#) — redistribute routes that match a route type.
 - [match tag](#) — redistribute routes that match a specific tag.

match metric

To match on a specified value, configure a filter.

Syntax `match metric metric-value`
 To delete a value, use the `no match metric [metric-value]` command.

Parameters ***metric-value*** Enter a value to match. The range is from zero (0) to 4294967295.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

- Related Commands**
- [match interface](#) — redistribute routes that match the next-hop interface.
 - [match ip address](#) — redistribute routes that match an IP address.
 - [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
 - [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
 - [match route-type](#) — redistribute routes that match a route type.
 - [match tag](#) — redistribute routes that match a specific tag.

match origin

To match routes based on the value found in the BGP path ORIGIN attribute, configure a filter.

Syntax `match origin {egp | igp | incomplete}`
To disable matching filter, use the `no match origin {igp | egp | incomplete}` command.

Parameters

egp	Enter the keyword <code>egp</code> to match routes originating outside the AS.
igp	Enter the keyword <code>igp</code> to match routes originating within the same AS.
incomplete	Enter the keyword <code>incomplete</code> to match routes with incomplete routing information.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
pre-6.1.1.0	Introduced on the E-Series.

match route-type

To match routes based on the how the route is defined, configure a filter.

Syntax `match route-type {external [type-1 | type-2] | internal | level-1 | level-2 | local}`
To delete a match, use the `no match route-type {local | internal | external [type-1 | type-2] | level-1 | level-2}` command.

Parameters

external [type-1] type-2]	Enter the keyword <code>external</code> then either <code>type-1</code> or <code>type-2</code> to match only on OSPF Type 1 routes or OSPF Type 2 routes.
internal	Enter the keyword <code>internal</code> to match only on routes generated within OSPF areas.
level-1	Enter the keyword <code>level-1</code> to match IS-IS Level 1 routes.

level-2	Enter the keyword <code>level-2</code> to match IS-IS Level 2 routes.
local	Enter the keyword <code>local</code> to match only on routes generated within the switch.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

- Related Commands**
- [match interface](#) — redistribute routes that match the next-hop interface.
 - [match ip address](#) — redistribute routes that match an IP address.
 - [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
 - [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
 - [match metric](#) — redistribute routes that match a specific metric.
 - [match tag](#) — redistribute routes that match a specific tag.

match tag

To redistribute only routes that match a specified tag value, configure a filter.

Syntax `match tag tag-value`
 To remove a match, use the `no match tag` command.

Parameters **tag-value** Enter a value as the tag on which to match. The range is from zero (0) to 4294967295.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [match interface](#) — redistribute routes that match the next-hop interface.
- [match ip address](#) — redistribute routes that match an IP address.
- [match ip next-hop](#) — redistribute routes that match the next-hop IP address.
- [match ip route-source](#) — redistribute routes that match routes advertised by other routers.
- [match metric](#) — redistribute routes that match a specific metric.
- [match route-type](#) — redistribute routes that match a route type.

route-map

Enable a route map statement and configure its action and sequence number. This command also places you in ROUTE-MAP mode.

Syntax

```
route-map map-name [permit | deny] [sequence-number]
```

To delete a route map, use the `no route-map map-name [permit | deny] [sequence-number]` command.

Parameters

<i>map-name</i>	Enter a text string of up to 140 characters to name the route map for easy identification.
permit	(OPTIONAL) Enter the keyword <code>permit</code> to set the route map default as permit. If you do not specify a keyword, the default is <code>permit</code> .
deny	(OPTIONAL) Enter the keyword <code>deny</code> to set the route map default as deny.
<i>sequence-number</i>	(OPTIONAL) Enter a number to identify the route map for editing and sequencing with other route maps. You are prompted for a sequence number if there are multiple instances of the route map. The range is from 1 to 65535.

Defaults

Not configured.

If you do not define a keyword (`permit` or `deny`) for the route map, the `permit` action is the default.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Use caution when you delete route maps because if you do not specify a sequence number, all route maps with the same *map-name* are deleted when you use the `no route-map map-name` command.

Example

```
DellEMC(conf)# route-map dempsey
DellEMC(config-route-map)#
```

Related Commands

- [show config](#) — display the current configuration.

set as-path

To modify the AS path for border gateway protocol (BGP) routes, configure a filter.

Syntax

```
set as-path prepend as-number [... as-number]
```

To remove an AS-Path setting, use the `no set as-path {prepend as-number | tag}` command.

Parameters

prepend as-number Enter the keyword `prepend` and then enter up to eight AS numbers to be inserted into the BGP path information. The range is from 1 to 65535.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

You can prepend up to eight AS numbers to a BGP route.

This command influences best path selection in BGP by inserting a tag or AS number into the AS_PATH attribute.

Related Commands

- [match as-path](#) — redistribute routes that match an AS-PATH attribute.

set automatic-tag

To automatically compute the tag value of the route, configure a filter.

Syntax

```
set automatic-tag
```

To return to the default, enter `no set automatic-tag`.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set level](#) — specify the OSPF area for route redistribution.
- [set metric](#) — specify the metric value assigned to redistributed routes.
- [set metric-type](#) — specify the metric type assigned to redistributed routes.
- [set tag](#) — specify the tag assigned to redistributed routes.

set comm-list delete

To remove the specified community list from the BGP route's COMMUNITY attribute, configure a filter.

Syntax `set comm-list community-list-name delete`
 To insert the community list into the COMMUNITY attribute, use the `no set comm-list community-list-name delete` command.

Parameters ***community-list-name*** Enter the name of an established Community list, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The community list used in the `set comm-list delete` command must be configured so that each filter contains only one community. For example, the filter `deny 100:12` is acceptable, but the filter `deny 120:13 140:33` results in an error.

If the `set comm-list delete` command and the `set community` command are configured in the same route map sequence, the deletion command (`set comm-list delete`) is processed before the insertion command (`set community`).

Related Commands

- [match community](#) — redistribute routes that match the COMMUNITY attribute.
- [set community](#) — specify a COMMUNITY attribute.

set community

Allows you to assign a BGP COMMUNITY attribute.

Syntax

```
set community {community-number | local-as | no-advertise | no-export | none} [additive]
```

To delete a BGP COMMUNITY attribute assignment, use the `no set community {community-number | local-as | no-advertise | no-export | none}` command.

Parameters

community-number	Enter the community number in AA:NN format where AA is the AS number (2 bytes) and NN is a value specific to that autonomous system.
local-AS	Enter the keywords <code>local-as</code> to drop all routes with the COMMUNITY attribute of NO_EXPORT_SUBCONFED. All routes with the NO_EXPORT_SUBCONFED (0xFFFFFFFF03) community attribute must not be advertised to external BGP peers.
no-advertise	Enter the keywords <code>no-advertise</code> to drop all routes containing the well-known community attribute of NO_ADVERTISE. All routes with the NO_ADVERTISE (0xFFFFFFFF02) community attribute must not be advertised to other BGP peers.
no-export	Enter the keywords <code>no-export</code> to drop all routes containing the well-known community attribute of NO_EXPORT. All routes with the NO_EXPORT (0xFFFFFFFF01) community attribute must not be advertised outside a BGP confederation boundary.
none	Enter the keyword <code>none</code> to remove the community attribute from routes meeting the route map criteria.
additive	(OPTIONAL) Enter the keyword <code>additive</code> to add the communities to already existing communities.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [match community](#) — redistribute routes that match the COMMUNITY attribute.
- [show ip bgp community](#) — display BGP community groups.

set level

To specify the IS-IS level or OSPF area to which matched routes are redistributed, configure a filter.

Syntax

```
set level {backbone | level-1 | level-1-2 | level-2 | stub-area}
```

To remove a set level condition, use the `no set level {backbone | level-1 | level-1-2 | level-2 | stub-area}` command.

Parameters

backbone	Enter the keyword <code>backbone</code> to redistribute matched routes to the OSPF backbone area (area 0.0.0.0).
level-1	Enter the keyword <code>level-1</code> to redistribute matched routes to IS-IS Level 1.
level-1-2	Enter the keyword <code>level-1-2</code> to redistribute matched routes to IS-IS Level 1 and Level 2.
level-2	Enter the keyword <code>level-2</code> to redistribute matched routes to IS-IS Level 2.
stub-area	Enter the keyword <code>stub</code> to redistributed matched routes to OSPF stub areas.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Dell EMC Networking OS Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set automatic-tag](#) — compute the tag value of the route.
- [set metric](#) — specify the metric value assigned to redistributed routes.
- [set metric-type](#) — specify the metric type assigned to redistributed routes.
- [set tag](#) — specify the tag assigned to redistributed routes.

set local-preference

To set the BGP LOCAL_PREF attribute for routers within the local autonomous system, configure a filter.

Syntax `set local-preference value`
 To delete a BGP LOCAL_PREF attribute, use the `no set local-preference` command.

Parameters **value** Enter a number as the LOCAL_PREF attribute value. The range is from 0 to 4294967295.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The `set local-preference` command changes the LOCAL_PREF attribute for routes meeting the route map criteria. To change the LOCAL_PREF for all routes, use the `bgp default local-preference` command.

Related Commands

- [bgp default local-preference](#) — change the default LOCAL_PREF attribute for all routes.

set metric

To assign a new metric to redistributed routes, configure a filter.

Syntax `set metric [+ | -] metric-value`
 To delete a setting, enter `no set metric`.

Parameters

- +** (OPTIONAL) Enter + to add a metric-value to the redistributed routes.
- (OPTIONAL) Enter - to subtract a metric-value from the redistributed routes.
- metric-value** Enter a number as the new metric value. The range is from zero (0) to 4294967295.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- `set automatic-tag` — compute the tag value of the route.
- `set level` — specify the OSPF area for route redistribution.
- `set metric-type` — specify the route type assigned to redistributed routes.
- `set tag` — specify the tag assigned to redistributed routes.

set metric-type

To assign a new route type for routes redistributed to OSPF, configure a filter.

Syntax `set metric-type {internal | external | type-1 | type-2}`
 To delete a setting, use the `no set metric-type` command.

Parameters	internal	external	type-1	type-2
	Enter the keyword <code>internal</code> to assign the Interior Gateway Protocol metric of the next hop as the route's BGP MULTI_EXIT_DES (MED) value.	Enter the keyword <code>external</code> to assign the IS-IS external metric.	Enter the keyword <code>type-1</code> to assign the OSPF Type 1 metric.	Enter the keyword <code>type-2</code> to assign the OSPF Type 2 metric.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.3.1.0	Implemented the keyword <code>internal</code> .
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set automatic-tag](#) — compute the tag value of the route.
- [set level](#) — specify the OSPF area for route redistribution.
- [set metric](#) — specify the metric value assigned to redistributed routes.
- [set tag](#) — specify the tag assigned to redistributed routes.

set next-hop

To specify an IP address as the next hop, configure a filter.

Syntax `set next-hop ip-address`
 To delete the setting, use the `no set next-hop ip-address` command.

Parameters `ip-address` Specify an IP address in dotted decimal format.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

If you configure the `set next-hop` command, its configuration takes precedence over the `neighbor next-hop-self` command in the ROUTER BGP mode.

If you configure the `set next-hop` command with the interface's IP address (either Loopback or physical), the software declares the route unreachable.

Related Commands

- [match ip next-hop](#) — redistribute routes that match the next-hop IP address.

set origin

To manipulate the BGP ORIGIN attribute, configure a filter.

Syntax

```
set origin {igp | egp | incomplete}
```

To delete an ORIGIN attribute setting, use the `no set origin` command.

Parameters

egp	Enter the keyword <code>egp</code> to set routes originating from outside the local AS.
igp	Enter the keyword <code>igp</code> to set routes originating within the same AS.
incomplete	Enter the keyword <code>incomplete</code> to set routes with incomplete routing information.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

set tag

To specify a tag for redistributed routes, configure a filter.

Syntax `set tag tag-value`

To delete a setting, use the `no set tag` command.

Parameters **tag-value** Enter a number as the tag. The range is from zero (0) to 4294967295.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [set automatic-tag](#) — compute the tag value of the route.
- [set level](#) — specify the OSPF area for route redistribution.
- [set metric](#) — specify the metric value assigned to redistributed routes.
- [set metric-type](#) — specify the route type assigned to redistributed routes.

set weight

To add a non-RFC compliant attribute to the BGP route to assist with route selection, configure a filter.

Syntax `set weight weight`

To delete a weight specification, use the `no set weight weight` command.

Parameters **weight** Enter a number as the weight used by the route meeting the route map specification. The range is from 0 to 65535. The default is router-originated = **32768** and all other routes = **0**.

When there are multiple routes to the same destination, the routes with a higher weight are preferred.

Defaults router-originated = **32768**; all other routes = **0**

Defaults Not configured.

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information If you do not use the `set weight` command, router-originated paths have a weight attribute of 32768 and all other paths have a weight attribute of zero.

show config

Display the current route map configuration.

Syntax `show config`

Command Modes ROUTE-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-nprefix1)# show config
!
ip prefix-list PL_OSPF_to_RIP
 seq 5 permit 1.1.1.0/24
 seq 10 deny 2.1.0.0/16 ge 23
 seq 25 permit 192.0.0.0 bitmask 192.0.0.0
DellEMC(conf-nprefix1)#
```

show route-map

Display the current route map configurations.

Syntax `show route-map [map-name]`

Parameters *map-name* (OPTIONAL) Enter the name of a configured route map, up to 140 characters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show route-map
route-map firpo, permit, sequence 10
Match clauses:
Set clauses:
tag 34
DellEMC#
```

Related Commands

- [route-map](#) — configure a route map.

AS-Path Commands

The following commands configure AS-Path ACLs.

ip as-path access-list

Enter AS-PATH ACL mode and configure an access control list based on the BGP AS_PATH attribute.

Syntax	<code>ip as-path access-list <i>as-path-name</i></code>
Parameters	<i>as-path-name</i> Enter the access-list name, up to 140 characters.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.

Version	Description
pre-Version 6.1.1.0	Introduced on the E-Series.

Usage Information

To apply the AS-PATH ACL to BGP routes, use the `match as-path` or `neighbor filter-list` commands.

Example

```
DellEMC(conf)# ip as-path access-list TestPath
DellEMC(config-as-path)#
```

Related Commands

- [match as-path](#) — match on routes contain a specific AS-PATH.

show ip as-path-access-lists

Display the all AS-PATH access lists configured on the E-Series.

Syntax `show ip as-path-access-lists`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
pre-Version 6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip as-path-access-lists
ip as-path access-list acc
  permit 750
  deny 10
DellEMC#
```

IP Community List Commands

IP community list commands are supported on the Dell EMC Networking OS.

ip community-list

Enter COMMUNITY-LIST mode and create an IP community-list for BGP.

Syntax `ip community-list comm-list-name`

To delete a community-list, use the `no ip community-list comm-list-name` command.

Parameters ***comm-list-name*** Enter a text string as the name of the community-list, up to 140 characters.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
pre-Version 6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf)# ip community-list TestComList
DellEMC(config-community-list)#
```

show ip community-lists

Display configured IP community lists in alphabetic order.

Syntax `show ip community-lists [name]`

Parameters ***name*** (OPTIONAL) Enter the name of the standard or extended IP community list, up to 140 characters.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, names are up to 16 characters long.
pre-Version 6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip community-lists
ip community-list ABC
  permit local-AS
  deny no-advertise
  permit no-export
DellEMC#
```

deny (for Standard IP ACLs)

To drop packets with a certain IP address, configure a filter.

Syntax `deny {source | any | host {ip-address}}[count [byte]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {source [mask] | any | host ip-address}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-STANDARD-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started

and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

- Related Commands**
- `ip access-list standard` — configure a standard ACL.
 - `permit` — configure a permit filter.

deny (for Extended IP ACLs)

Configure a filter that drops IP packets meeting the filter criteria.

Syntax

```
deny {ip | ip-protocol-number} {source mask | any | host ip-address}
{destination mask | any | host ip-address} [ttl operator] [count
[byte]] [dscp value] [order] [monitor] [fragments] [log [interval minutes]
[threshold-in-msgs [count]]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {ip | ip-protocol-number} {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters	ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
	operator	Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.• <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.• <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.• <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.• <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.

monitor (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based enable command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- [deny tcp](#) — assign a filter to deny TCP packets.
- [deny udp](#) — assign a filter to deny UDP packets.
- [ip access-list extended](#) — create an extended ACL.

seq (for Standard IPv4 ACLs)

Assign a sequence number to a deny or permit filter in an IP access list while creating the filter.

Syntax `seq sequence-number {deny | permit} {source [mask] | any | host ip-address} [count [bytes]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]]`

To delete a filter, use the `no seq sequence-number` command.

Parameters

- log** (OPTIONAL) Enter the keyword `log` to enable the triggering of ACL log messages.
- threshold-in-msgs count** (OPTIONAL) Enter the `threshold-in-msgs` keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the `seq`, `permit`, or `deny` commands. The threshold range is from 1 to 100.
- interval minutes** (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
- monitor** (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-STANDARD-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can

be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

- Related Commands**
- `deny` — configure a filter to drop packets.
 - `permit` — configure a filter to forward packets.

deny tcp (for Extended IP ACLs)

Configure a filter that drops transmission control protocol (TCP) packets meeting the filter criteria.

Syntax

```
deny tcp {source mask | any | host ip-address} [bit] [operator port [port]]
{destination mask | any | host ip-address} [ttl operator] [dscp] [bit]
[operator port [port]] [count [byte]] [order] [fragments] [log [interval
minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny tcp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters	ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
	operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t1</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added the support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added the support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `deny` — assign a filter to deny IP traffic.
- `deny udp` — assign a filter to deny UDP traffic.

deny udp (for Extended IP ACLs)

To drop user datagram protocol (UDP) packets meeting the filter criteria, configure a filter.

Syntax

```
deny udp {source mask | any | host ip-address} [operator port [port]]
{destination mask | any | host ip-address} [ttl operator] [dscp] [operator
port [port]] [count [byte]] [order] [fragments] [log [interval minutes]
[threshold-in-msgs [count]]]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny udp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ttl	Enter the keyword <code>t1</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand:

- `eq`(equal to) — matches packets that contain a `ttl` value that is equal to the specified `ttl` value.
- `neq`(not equal to) — matches packets that contain a `ttl` value that is not equal to the specified `ttl` value.
- `gt`(greater than) — matches packets that contain a `ttl` value that is greater than the specified `ttl` value.
- `lt` (less than) — matches packets that contain a `ttl` value that is less than the specified `ttl` value.
- `range`(inclusive range of values) — matches packets that contain a `ttl` value that falls between the specified range of `ttl` values.

log (OPTIONAL) Enter the keyword `log` to enable the triggering of ACL log messages.

threshold-in-msgs count (OPTIONAL) Enter the `threshold-in-msgs` keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the `seq`, `permit`, or `deny` commands. The threshold range is from 1 to 100.

interval minutes (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is five minutes.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t11</code> parameter.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

Related Commands

- `deny` — assign a filter to deny IP traffic.
- `deny tcp` — assign a filter to deny TCP traffic.

deny arp (for Extended MAC ACLs)

Configure an egress filter that drops ARP packets on egress ACL supported line cards. (For more information, refer to your line card documentation).

Syntax `deny arp {destination-mac-address mac-address-mask | any} vlan vlan-id {ip-address | any | opcode code-number} [count [byte]] [order] [log [interval minutes] [threshold-in-msgs [count]] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny arp {destination-mac-address mac-address-mask | any} vlan vlan-id {ip-address | any | opcode code-number}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny icmp (for Extended IP ACLs)

To drop all or specific internet control message protocol (ICMP) messages, configure a filter.

NOTE: Only the options that have been newly introduced in Release 9.3(0.0) and Release 9.4(0.0) are described here. For a complete description on all of the keywords and variables that are available with this command, refer the topic of this command discussed earlier in this guide.

Syntax

```
deny icmp {source mask | any | host ip-address} {destination mask | any | host ip-address} [ttl operator] [dscp] [message-type] [count [byte]] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny icmp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.• <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.• <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.• <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.• <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny ether-type (for Extended MAC ACLs)

Configure an egress filter that drops specified types of Ethernet packets on egress ACL supported line cards. (For more information, refer to your line card documentation).

Syntax

```
deny ether-type protocol-type-number {destination-mac-address mac-address-mask | any} vlan vlan-id {source-mac-address mac-address-mask | any} [count [byte]] [order] [log [interval minutes] [threshold-in-msgs [count]] [monitor]]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny ether-type protocol-type-number {destination-mac-address mac-address-mask | any} vlan vlan-id {source-mac-address mac-address-mask | any}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny (for Standard MAC ACLs)

To drop packets with a the MAC address specified, configure a filter.

Syntax

```
deny {any | mac-source-address [mac-source-address-mask]} [count [byte]]  
[log [interval minutes] [threshold-in-msgs [count]] [monitor]]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {any | mac-source-address mac-source-address-mask}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-MAC ACCESS LIST-STANDARD

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `permit` — configure a MAC address filter to pass packets.
- `seq` — configure a MAC address filter with a specified sequence number.

deny (for Extended MAC ACLs)

To drop packets that match the filter criteria, configure a filter.

Syntax

```
deny {any | host mac-address | mac-source-address mac-source-address-mask} {any | host mac-address | mac-destination-address mac-destination-address-mask} [ethertype-operator] [count [byte]][log [interval minutes] [threshold-in-msgs [count]] [monitor]]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {any | host mac-address | mac-source-address mac-source-address-mask} {any | host mac-address | mac-destination-address mac-destination-address-mask}` command.

Parameters

log (OPTIONAL) Enter the keyword `log` to enable the triggering of ACL log messages.

threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-MAC ACCESS LIST-EXTENDED

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `permit` — configure a MAC address filter to pass packets.
- `seq` — configure a MAC address filter with a specified sequence number.

permit (for Standard IP ACLs)

To permit packets from a specific source IP address to leave the switch, configure a filter.

Syntax `permit {source [mask]| any | host ip-address} [count [byte]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit {source [mask] | any | host ip-address}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-STANDARD-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

- Related Commands**
- `deny` — assign a IP ACL filter to deny IP packets.
 - `ip access-list standard` — create a standard ACL.

permit arp (for Extended MAC ACLs)

Configure a filter that forwards ARP packets meeting this criteria. This command is supported only on 12-port GE line cards with SFP optics; refer to your line card documentation for specifications.

Syntax

```
permit arp {destination-mac-address mac-address-mask | any} vlan vlan-id
[ip-address | any | opcode code-number] [count [byte]] [order] [fragments]
[log [interval minutes] [threshold-in-msgs [count]] [monitor]]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `{destination-mac-address mac-address-mask | any} vlan vlan-id {ip-address | any | opcode code-number}` command.

Parameters	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

permit ether-type (for Extended MAC ACLs)

Configure a filter that allows traffic with specified types of Ethernet packets. This command is supported only on 12-port GE line cards with SFP optics. For specifications, refer to your line card documentation.

Syntax

```
permit ether-type protocol-type-number {destination-mac-address mac-address-mask | any} vlan vlan-id {source-mac-address mac-address-mask | any} [count [byte]] [order] [log [interval minutes] [threshold-in-msgs [count]]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit ether-type protocol-type-number {destination-mac-address mac-address-mask | any} vlan vlan-id {source-mac-address mac-address-mask | any}` command.

Parameters

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

permit icmp (for Extended IP ACLs)

Configure a filter to allow all or specific ICMP messages.

Syntax

```
permit icmp {source mask | any | host ip-address} {destination mask | any | host ip-address} [ttl operator] [dscp] [count [byte]] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit icmp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.

interval <i>minutes</i>	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-STANDARD-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>t1</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

permit udp (for Extended IP ACLs)

To pass UDP packets meeting the filter criteria, configure a filter.

Syntax

```
permit udp {source mask | any | host ip-address} [operator port [port]]
           {destination mask | any | host ip-address} [ttl operator] [dscp] [operator
```

```
port [port]] [count [byte]] [order] [fragments] [log [interval minutes]
[threshold-in-msgs [count]][monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit udp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.

Version	Description
9.3.0.0	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit](#) — assign a permit filter for IP packets.
- [permit tcp](#) — assign a permit filter for TCP packets.

permit (for Extended IP ACLs)

To pass IP packets meeting the filter criteria, configure a filter.

Syntax

```
permit {source mask | any | host ip-address} {destination mask | any | host ip-address} [count [bytes]] [ttl operator] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no deny {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

t11	Enter the keyword <code>t11</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.

- interval *minutes*** (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
- monitor** (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added the support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added the support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, standard and extended IPv6 ACLs, and standard and extended MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit tcp](#) — assign a permit filter for TCP packets.
- [permit udp](#) — assign a permit filter for UDP packets.

permit (for Standard MAC ACLs)

To forward packets from a specific source MAC address, configure a filter.

Syntax `permit {any | mac-source-address [mac-source-address-mask]} [count [byte]] | [log [interval minutes] [threshold-in-msgs [count]] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit {any | mac-source-address mac-source-address-mask}` command.

Parameters	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is 5 minutes. By default, flow-based monitoring is not enabled.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows

that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `deny` — configure a MAC ACL filter to drop packets.
- `seq` —configure a MAC ACL filter with a specified sequence number.

seq (for Standard MAC ACLs)

To a deny or permit filter in a MAC access list while creating the filter, assign a sequence number.

Syntax `seq sequence-number {deny | permit} {any | mac-source-address [mac-source-address-mask]} [count [byte]] [log [interval minutes] [threshold-in-msgs [count]] [monitor]]`

To remove this filter, use the `no seq sequence-number` command.

Parameters

- log** (OPTIONAL) Enter the keyword `log` to enable the triggering of ACL log messages.
- threshold-in-msgs count** (OPTIONAL) Enter the `threshold-in-msgs` keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the `seq`, `permit`, or `deny` commands. The threshold range is from 1 to 100.
- interval minutes** (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
- monitor** (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-MAC ACCESS LIST-STANDARD

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `deny` — configure a filter to drop packets.
- `permit` — configure a filter to forward packets.

permit tcp (for Extended IP ACLs)

To pass TCP packets meeting the filter criteria, configure a filter.

Syntax

```
permit tcp {source mask | any | host ip-address} [bit] [operator port  
[port]] {destination mask | any | host ip-address} [bit] [ttl operator]  
[dscp] [operator port [port]] [count [byte]] [order] [fragments] [log  
[interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit tcp {source mask | any | host ip-address} {destination mask | any | host ip-address}` command.

Parameters

ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.• <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.• <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.• <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.• <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.

monitor (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- [ip access-list extended](#) — create an extended ACL.
- [permit](#) — assign a permit filter for IP packets.
- [permit udp](#) — assign a permit filter for UDP packets.

seq arp (for Extended MAC ACLs)

Configure an egress filter with a sequence number that filters ARP packets meeting this criteria. This command is supported only on 12-port GE line cards with SFP optics. For specifications, refer to your line card documentation.

NOTE: Only the options that have been newly introduced in Release 9.3(0.0) and Release 9.4(0.0) are described here. For a complete description on all of the keywords and variables that are available with this command, refer the topic of this command discussed earlier in this guide.

Syntax `seq sequence-number {deny | permit} arp {destination-mac-address mac-address-mask | any} vlan vlan-id {ip-address | any | opcode code-number} [count [byte]] [order] [log [interval minutes] [threshold-in-msgs [count]] [monitor]`

To remove this filter, use the `no seq sequence-number` command.

Parameters	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. You can enter a threshold in the range of 1-100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. You can enter an interval in the range of 1-10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is 5 minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, Z9000, and MXL 10/40GbE Switch IO Module platforms.
9.3.0.0	Added support for logging of ACLs on the S4810, S4820T, Z9000, and MXL 10/40GbE Switch IO Module platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is reenabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is reenabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, standard and extended IPv6 ACLs, and standard and extended MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based enable command in the Monitor Session mode. When you enable this capability, traffic with particular flows

that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

seq ether-type (for Extended MAC ACLs)

Configure an egress filter with a specific sequence number that filters traffic with specified types of Ethernet packets. This command is supported only on 12-port GE line cards with SFP optics. For specifications, refer to your line card documentation.

i **NOTE:** Only the options that have been newly introduced in Release 9.3(0.0) and Release 9.4(0.0) are described here. For a complete description on all of the keywords and variables that are available with this command, refer the topic of this command discussed earlier in this guide.

Syntax

```
seq sequence-number {deny | permit} ether-type protocol-type-number
{destination-mac-address mac-address-mask | any} vlan vlan-id {source-mac-
address mac-address-mask | any} [count [byte]] [order] [log [interval
minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, use the no seq *sequence-number* command.

Parameters

- log** (OPTIONAL) Enter the keyword `log` to enable the triggering of ACL log messages.
- threshold-in msgs count** (OPTIONAL) Enter the `threshold-in-msgs` keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the `seq`, `permit`, or `deny` commands. You can enter a threshold in the range of 1-100.
- interval minutes** (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. You can enter an interval in the range of 1-10 minutes.
- monitor** (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is 5 minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, Z9000, and MXL 10/40GbE Switch IO Module platforms.
9.3.0.0	Added support for logging of ACLs on the S4810, S4820T, Z9000, and MXL 10/40GbE Switch IO Module platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started

and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is reenabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is reenabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, standard and extended IPv6 ACLs, and standard and extended MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based enable command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

seq (for IP ACLs)

Assign a sequence number to a deny or permit filter in an extended IP access list while creating the filter.

Syntax `seq sequence-number {deny | permit} {ip-protocol-number | icmp | ip | tcp | udp} {source mask | any | host ip-address} {destination mask | any | host ip-address} [operator port [port]] [ttl operator] [count [byte]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs count]] [monitor]`

Parameters

ttl	Enter the keyword <code>ttl</code> to permit or deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.• <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.• <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.• <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.• <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100..
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes CONFIGURATION-EXTENDED-ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `deny` — configure a filter to drop packets.
- `permit` — configure a filter to forward packets.

seq (for IPv6 ACLs)

Assign a sequence number to a deny or permit the filter in an IPv6 access list while creating the filter.

Syntax

```
seq sequence-number {deny | permit} {ipv6-protocol-number | icmp | ip | tcp | udp} {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address} [operator port [portnumber ]] [count [byte]] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To delete a filter, use the `no seq sequence-number` command.

Parameters

sequence-number	Enter a number from 0 to 4294967290.
deny	Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition.

permit	Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this criteria.
ipv6-protocol-number	Enter a number to filter based on the protocol identified in the IPv6 protocol header.
icmp	Enter the keyword <code>icmp</code> to configure an ICMP access list filter.
ip	Enter the keyword <code>ip</code> to configure a generic IP access list. The keyword <code>ip</code> specifies that the access list permits all IP protocols.
tcp	Enter the keyword <code>tcp</code> to configure a TCP access list filter.
udp	Enter the keyword <code>udp</code> to configure a UDP access list filter.
source	Enter an IP address in dotted decimal format of the network from which the packet was received.
mask	(OPTIONAL) Enter a network mask in /prefix format (/x) .
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> and then enter the IPv6 address to specify a host IP address or hostname.
operator	(OPTIONAL) Enter one of the following logical operands: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the <code>port</code> parameter.)
portnumber	(OPTIONAL) Enter the application layer port number. Enter two port numbers if you are using the range logical operand. The range is from 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none"> • 23 = Telnet • 20 and 21 = FTP-DATA and FTP • 25 = SMTP • 169 = SNMP
destination	Enter the IP address of the network or host to which the packets are sent.
count	(OPTIONAL) Enter the keyword <code>count</code> to count the packets.
bytes	(OPTIONAL) Enter the keyword <code>bytes</code> to count the bytes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminate with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P0)	Included support for using logical names of a protocol to configure an IP access list in both TCP and UDP on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- [permit](#) – configure a filter to forward packets.

permit udp (for IPv6 ACLs)

Configure a filter to pass UDP packets meeting the filter criteria.

Syntax

```
permit udp {source address mask | any | host ipv6-address} [operator port [port]] {destination address | any | host ipv6-address} [operator port [port]] [ttl operator] [count [byte]] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit udp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters

ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand:

- `eq`(equal to) — matches packets that contain a `ttl` value that is equal to the specified `ttl` value.
- `neq`(not equal to) — matches packets that contain a `ttl` value that is not equal to the specified `ttl` value.
- `gt`(greater than) — matches packets that contain a `ttl` value that is greater than the specified `ttl` value.
- `lt` (less than) — matches packets that contain a `ttl` value that is less than the specified `ttl` value.
- `range`(inclusive range of values) — matches packets that contain a `ttl` value that falls between the specified range of `ttl` values.

log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes

ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3.0.0	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and

MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

permit tcp (for IPv6 ACLs)

Configure a filter to pass TCP packets that match the filter criteria.

Syntax

```
permit tcp {source address mask | any | host ipv6-address} [operator port  
[port]] {destination address | any | host ipv6-address} [bit] [operator  
port [port]] [ttl operator] [count [byte]] [log [interval minutes]  
[threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit tcp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters

source address mask	Enter a network mask in /prefix format (/x).
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
destination address	Enter the IPv6 address of the network or host to which the packets are sent.
bit	Enter a flag or combination of bits: <ul style="list-style-type: none">• <code>ack</code>: acknowledgement field• <code>fin</code>: finish (no more data from the user)• <code>psh</code>: push function• <code>rst</code>: reset the connection• <code>syn</code>: synchronize sequence numbers• <code>urg</code>: urgent field
operator	(OPTIONAL) Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code> = equal to• <code>neq</code> = not equal to• <code>gt</code> = greater than• <code>lt</code> = less than• <code>range</code> = inclusive range of ports (you must specify two ports for the port parameter)
port port	Enter the application layer port number. Enter two port numbers if you are using the range logical operand. The range is from 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none">• 23 = Telnet• 20 and 21 = FTP• 25 = SMTP• 169 = SNMP

ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes the filter processes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is 5 minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.11(2.0P0)	Added the <code>established</code> parameter on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.

Version	Description
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Related Commands

- `permit` – assign a permit filter for IP packets.

permit icmp (for IPv6 ACLs)

To allow all or specific internet control message protocol (ICMP) messages, configure a filter.

Syntax

```
permit icmp {source address mask | any | host ipv6-address} {destination
address | any | host ipv6-address} [message-type] [ttl operator] [count
[byte]] [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters

source address mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ip-v6address	Enter the keyword <code>host</code> then the IPv6 address to specify a host IP address.
destination	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.

- `range`(inclusive range of values) — matches packets that contain a `ttl` value that falls between the specified range of `ttl` values.

count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.11(2.0P1)	Added the <code>type</code> parameter to filter the ICMP packets based on the type and code on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

permit (for IPv6 ACLs)

To configure a filter that matches the filter criteria, select an IPv6 protocol number, ICMP, IPv6, TCP, or UDP.

Syntax `permit {ipv6-protocol-number | icmp | ipv6 | tcp | udp} [count [byte]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]]] [monitor] [no-drop]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no permit {ipv6-protocol-number | icmp | ipv6 | tcp | udp}` command

Parameters	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.
	no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny udp (for IPv6 ACLs)

Configure a filter to drop user datagram protocol (UDP) packets meeting the filter criteria.

Syntax

```
deny udp {source address mask | any | host ipv6-address} [operator port
[port]] {destination address | any | host ipv6-address} [operator port
[port]] [ttl operator] [count [byte]] [log [interval minutes] [threshold-
in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny udp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which

the generation of ACL logs is terminated. with the seq, permit, or deny commands. The threshold range is from 1 to 100.

interval *minutes* (OPTIONAL) Enter the keyword `interval` followed by the time period in minutes at which ACL logs must be generated. The threshold range is from 1 to 10 minutes.

monitor (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, Z9000, and MXL 10/40GbE Switch IO Module platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, Z9000, and MXL 10/40GbE Switch IO Module platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs.

You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny tcp (for IPv6 ACLs)

Configure a filter that drops TCP packets that match the filter criteria.

Syntax

```
deny tcp {source address mask | any | host ipv6-address} [operator port  
[port]] {destination address | any | host ipv6-address} [bit] [operator  
port [port]] [ttl operator] [count [byte]] [log [interval minutes]]  
[threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny tcp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

source address mask	Enter a network mask in /prefix format (/x).
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
destination address	Enter the IPv6 address of the network or host to which the packets are sent.
bit	Enter a flag or combination of bits: <ul style="list-style-type: none">• <code>ack</code>: acknowledgement field• <code>fin</code>: finish (no more data from the user)• <code>psh</code>: push function• <code>rst</code>: reset the connection• <code>syn</code>: synchronize sequence numbers• <code>urg</code>: urgent field
operator	(OPTIONAL) Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code> = equal to• <code>neq</code> = not equal to• <code>gt</code> = greater than• <code>lt</code> = less than• <code>range</code> = inclusive range of ports (you must specify two ports for the port parameter)
port port	Enter the application layer port number. Enter two port numbers if you are using the range logical operand. The range is from 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none">• 23 = Telnet• 20 and 21 = FTP• 25 = SMTP• 169 = SNMP
ttl	Enter the keyword <code>ttl</code> to permit a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value.• <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value.• <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value.• <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value.

- `range`(inclusive range of values) — matches packets that contain a `ttl` value that falls between the specified range of `ttl` values.

count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes the filter processes.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs <i>count</i>	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
interval <i>minutes</i>	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The interval range is from 1 to 10 minutes.
monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.11(2.0P0)	Added the <code>established</code> parameter on the on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based enable command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny icmp (for Extended IPv6 ACLs)

Configure a filter to drop all or specific ICMP messages.

NOTE: Only the options that have been newly introduced in Release 9.3(0.0) and Release 9.4(0.0) are described here. For a complete description on all of the keywords and variables that are available with this command, refer the topic of this command discussed earlier in this guide.

Syntax

```
deny icmp {source address mask | any | host ipv6-address} {destination
address | any | host ipv6-address} [message-type] [ttl operator] [count
[byte]] | [log [interval minutes] [threshold-in-msgs [count]] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

source address mask	Enter a network mask in /prefix format (/x) or A.B.C.D. The mask, when specified in A.B.C.D format, may be either contiguous or non-contiguous.
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> then the IPv6 address to specify a host IP address.
destination	Enter the IP address of the network or host to which the packets are sent.
ttl	Enter the keyword <code>ttl</code> to deny a packet based on the time to live value. The range is from 1 to 255.
operator	Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code>(equal to) — matches packets that contain a ttl value that is equal to the specified ttl value. • <code>neq</code>(not equal to) — matches packets that contain a ttl value that is not equal to the specified ttl value. • <code>gt</code>(greater than) — matches packets that contain a ttl value that is greater than the specified ttl value. • <code>lt</code> (less than) — matches packets that contain a ttl value that is less than the specified ttl value. • <code>range</code>(inclusive range of values) — matches packets that contain a ttl value that falls between the specified range of ttl values.
log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
threshold-in msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. You can enter a threshold in the range of 1-100.
interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. You can enter an interval in the range of 1-10 minutes.

monitor (OPTIONAL) Enter the keyword `monitor` when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.

Defaults

By default, 10 ACL logs are generated if you do not specify the threshold explicitly.

The default frequency at which ACL logs are generated is 5 minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>ttl</code> parameter.
9.11(2.0P0)	Added the <code>type</code> parameter to filter the ICMP packets based on the type and code on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.5(0.1)	Introduced on the Z9500.
9.3.0.0	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information

When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the `flow-based enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

deny (for IPv6 ACLs)

Configure a filter that drops IPv6 packets that match the filter criteria.

Syntax `deny {ipv6-protocol-number | icmp | ipv6 | tcp | udp} [count [byte]] [dscp value] [order] [fragments] [log [interval minutes] [threshold-in-msgs [count]]] [monitor] [no-drop]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny {ipv6-protocol-number | icmp | ipv6 | tcp | udp}` command

Parameters	log	(OPTIONAL) Enter the keyword <code>log</code> to enable the triggering of ACL log messages.
	threshold-in-msgs count	(OPTIONAL) Enter the <code>threshold-in-msgs</code> keyword followed by a value to indicate the maximum number of ACL logs that can be generated, exceeding which the generation of ACL logs is terminated. with the <code>seq</code> , <code>permit</code> , or <code>deny</code> commands. The threshold range is from 1 to 100.
	interval minutes	(OPTIONAL) Enter the keyword <code>interval</code> followed by the time period in minutes at which ACL logs must be generated. The time interval range is from 1 to 10 minutes.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> when the rule is describing the traffic that you want to monitor and the ACL in which you are creating the rule is applied to the monitored interface.
	no-drop	Enter the keywords <code>no-drop</code> to match only the forwarded packets.

Defaults By default, 10 ACL logs are generated if you do not specify the threshold explicitly. The default frequency at which ACL logs are generated is five minutes. By default, flow-based monitoring is not enabled.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>no-drop</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added support for flow-based monitoring on the S4810, S4820T, S6000, and Z9000 platforms.
9.3(0.0)	Added support for logging of ACLs on the S4810, S4820T, and Z9000 platforms.

Usage Information When the configured maximum threshold is exceeded, generation of logs is stopped. When the interval at which ACL logs are configured to be recorded expires, the subsequent, fresh interval timer is started and the packet count for that new interval commences from zero. If ACL logging was stopped previously because the configured threshold is exceeded, it is re-enabled for this new interval.

If ACL logging is stopped because the configured threshold is exceeded, it is re-enabled after the logging interval period elapses. ACL logging is supported for standard and extended IPv4 ACLs, IPv6 ACLs, and MAC ACLs. You can configure ACL logging only on ACLs that are applied to ingress interfaces; you cannot enable logging for ACLs that are associated with egress interfaces.

You can activate flow-based monitoring for a monitoring session by entering the flow-based `enable` command in the Monitor Session mode. When you enable this capability, traffic with particular flows that are traversing through the ingress and egress interfaces are examined and, appropriate ACLs can be applied in both the ingress and egress direction. Flow-based monitoring conserves bandwidth by monitoring only specified traffic instead all traffic on the interface. This feature is particularly useful when looking for malicious traffic. It is available for Layer 2 and Layer 3 ingress and egress traffic. You may specify traffic using standard or extended access-lists. This mechanism copies all incoming or outgoing packets on one port and forwards (mirrors) them to another port. The source port is the monitored port (MD) and the destination port is the monitoring port (MG).

Access Control List (ACL) VLAN Groups and Content Addressable Memory (CAM)

This section describes the access control list (ACL) virtual local area network (VLAN) group, and content addressable memory (CAM) enhancements.

Topics:

- [member vlan](#)
- [ip access-group](#)
- [show acl-vlan-group](#)
- [show cam-acl-vlan](#)
- [cam-acl-vlan](#)
- [show cam-usage](#)
- [show running config acl-vlan-group](#)
- [acl-vlan-group](#)
- [show acl-vlan-group detail](#)
- [description \(ACL VLAN Group\)](#)

member vlan

Add VLAN members to an ACL VLAN group.

Syntax `member vlan {VLAN-range}`

Parameters **VLAN-range** Enter the member VLANs using comma-separated VLAN IDs, a range of VLAN IDs, a single VLAN ID, or a combination. For example:

Comma-separated: 3, 4, 6

Range: 5-10

Combination: 3, 4, 5-10, 8

Default None

Command Modes CONFIGURATION (conf-acl-vl-grp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, and Z9000 platforms.

Usage Information

At a maximum, there can be only 32 VLAN members in all ACL VLAN groups. A VLAN can belong to only one group at any given time.

You can create an ACL VLAN group and attach the ACL with the VLAN members. The optimization is applicable only when you create an ACL VLAN group. If you apply an ACL separately on the VLAN interface, each ACL has a mapping with the VLAN and increased CAM space utilization occurs.

Attaching an ACL individually to VLAN interfaces is similar to the behavior of ACL-VLAN mapping storage in CAM prior to the implementation of the ACL VLAN group functionality.

ip access-group

Apply an egress IP ACL to the ACL VLAN group.

Syntax	<code>ip access-group {group name} out implicit-permit</code>	
Parameters	group-name	Enter the name of the ACL VLAN group where you want the egress IP ACLs applied, up to 140 characters.
	out	Enter the keyword <code>out</code> to apply the ACL to outgoing traffic.
	implicit-permit	Enter the keyword <code>implicit-permit</code> to change the default action of the ACL from <code>implicit-deny</code> to <code>implicit-permit</code> (that is, if the traffic does not match the filters in the ACL, the traffic is permitted instead of dropped).

Default None

Command Modes CONFIGURATION (conf-acl-vl-grp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, and Z9000 platforms.

Usage Information You can apply only an egress IP ACL on an ACL VLAN group.

show acl-vlan-group

Display all the ACL VLAN groups or display a specific ACL VLAN group, identified by name.

Syntax	<code>show acl-vlan-group {group-name detail}</code>	
Parameters	group-name	(Optional) Display only the ACL VLAN group that is specified, up to 140 characters.
	detail	Display information in a line-by-line format to display the names in their entirety. Without the detail option, the output displays in a table style and information may be truncated.

Default No default behavior or values

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.3.(0.0)	Introduced on the S4810, S4820T, Z9000 and MXL platforms

Usage Information

When an ACL-VLAN-Group name or the Access List Group Name contains more than 30 characters, the name is truncated in the show `acl-vlan-group` command output.

Examples

The following sample illustrates the output of the `show acl-vlan-group` command.

NOTE: Some group names and some access list names are truncated.

```
DellEMC# show running-config acl-vlan-group
!
acl-vlan-group Test
  member vlan 1-100
  ip access-group test in
DellEMC#show acl-vlan-group
Group Name      Egress IP Acl      Ingress IP Acl      Ingress V6 Acl
Vlan Members
Test            -                   test                 -
1-100
```

The following sample output is displayed when using the `show acl-vlan-group group-name` option.

NOTE: The access list name is truncated.

```
DellEMC# show acl-vlan-group TestGroupSeventeenTwenty
Group Name      Egress IP Acl      Ingress IP Acl      Ingress IPV6 Acl
Vlan Members   Test              -                   test
-              1-100
```

The following sample output shows the line-by-line style display when using the `show acl-vlan-group detail` option.

NOTE: No group or access list names are truncated

```
DellEMC# show acl-vlan-group detail

Group Name :
  Test
Egress IP Acl :
  -
Ingress IP Acl :
  test
Ingress IPV6 Acl :
  -
Vlan Members :
  1-100
```

show cam-acl-vlan

Display the number of flow processor (FP) blocks that is allocated for the different VLAN services.

Syntax `show cam-acl-vlan`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, Z9000 and MXL platforms

Usage Information

After CAM configuration for ACL VLAN groups is performed, you must reboot the system to enable the settings to be stored in nonvolatile storage. During the initialization of CAM, the chassis manager reads the NVRAM and allocates the dynamic VCAP regions.

The following table describes the output fields of this `show` command:

Field	Description
Chassis Vlan Cam ACL	Details about the CAM blocks allocated for ACLs for various VLAN operations at a system-wide, global level.
Stack Unit <number>	Details about the CAM blocks allocated for ACLs for various VLAN operations for a particular stack unit.
Current Settings(in block sizes)	Information about the number of FP blocks that are currently in use or allocated.
VlanOpenFlow	Number of FP blocks for VLAN open flow operations.
VlanIscsi	Number of FP blocks for VLAN internet small computer system interface (iSCSI) counters.
VlanHp	Number of FP blocks for VLAN high performance processes.
VlanFcoe	Number of FP blocks for VLAN Fiber Channel over Ethernet (FCoE) operations.
VlanAclopt	Number of FP blocks for ACL VLAN optimization feature.

Example

```
DellEMC# show cam-acl-vlan

-- Chassis Vlan Cam ACL --
Current Settings(in block sizes)
VlanOpenFlow : 0
VlanIscsi    : 0
VlanAclopt   : 2
VlanHp       : 1
VlanFcoe     : 1
DellEMC#
```

cam-acl-vlan

Allocate the number of flow processor (FP) blocks or entries for VLAN services and processes.

Syntax `cam-acl-vlan { default | vlanopenflow <0-2> | vlaniscsi <0-2> | vlnaclopt <0-2>`

Parameters	default
default	Reset the number of FP blocks to default. By default, 0 groups are allocated for the ACL in VCAP. ACL VLAN groups or CAM optimization is not enabled by default, and you need to allocate the slices for CAM optimization.
vlanopenflow <0-2>	Allocate the number of FP blocks for VLAN open flow operations.
vlaniscsi <0-2>	Allocate the number of FP blocks for VLAN iSCSI counters.
vlnaclopt <0-2>	Allocate the number of FP blocks for the ACL VLAN optimization feature.

Default If you use the `default` keyword with the `cam-acl-vlan` command, the FP blocks allocated for VLAN processes are restored to their default values. No FP blocks or dynamic VLAN Content Aware Processor (VCAP) groups are allocated for VLAN operations by default.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Introduced on the S4810 and Z9000 platforms.

Usage Information The VLAN ContentAware Processor (VCAP) application is a pre-ingress CAP that modifies the VLAN settings before packets are forwarded. To support the ACL CAM optimization functionality, the CAM carving feature is enhanced. A total of four VACP groups are present, of which two are for fixed groups and the other two are for dynamic groups. Out of the total of two dynamic groups, you can allocate zero, one, or two flow processor (FP) blocks to iSCSI Counters, OpenFlow and ACL Optimization. You can configure only two of these features at a point in time.

show cam-usage

View the amount of CAM space available, used, and remaining in each partition (including IPv4 Flow and Layer 2 ACL sub-partitions).

Syntax `show cam-usage [acl | router | switch]`

Parameters

acl	(OPTIONAL) Enter the keyword <code>acl</code> to display Layer 2 and Layer 3 ACL CAM usage.
router	(OPTIONAL) Enter the keyword <code>router</code> to display Layer 3 CAM usage.
switch	(OPTIONAL) Enter the keyword <code>switch</code> to display Layer 2 CAM usage.

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, Z9000 and MXL platforms

Usage Information The following regions must be provided in the `show cam-usage` output:

- L3AcICam
- L2AcICam
- V6AcICam

The following table describes the output fields of this `show` command:

Field	Description
StackUnit	The Stack unit number
Portpipe	The hardware path that packets follow through a system for ACL optimization
CAM Partition	Type of area in the CAM block that is used for ACL VLAN groups

Field	Description
Total CAM	Total amount of space in the CAM block
Used CAM	Amount of CAM space that is currently in use
Available CAM	Amount of CAM space that is free and remaining to be allocated for ACLs

**Example 1:
Output of the
show cam-usage
Command**

```

DelleMC#show cam-usage
Stackunit|Portpipe| CAM Partition | Total CAM | Used CAM |
Available CAM
=====|=====|=====|=====|=====|
=====
      1 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| |
| IN-L3 ACL | 1024 | 1 | 1023
| |
| IN-L3 FIB | 49152 | 6 | 49146
| |
| IN-V6 ACL | 0 | 0 | 0
| |
| IN-NLB ACL | 0 | 0 | 0
| |
| IPMAC ACL | 0 | 0 | 0
| |
| OUT-L2 ACL | 206 | 9 | 197
| |
| OUT-L3 ACL | 178 | 9 | 169
| |
| OUT-V6 ACL | 178 | 4 | 174
      2 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| |
| IN-L3 ACL | 1024 | 1 | 1023
| |
| IN-L3 FIB | 49152 | 6 | 49146
| |
| IN-V6 ACL | 0 | 0 | 0
| |
| IN-NLB ACL | 0 | 0 | 0
| |
| IPMAC ACL | 0 | 0 | 0
| |
| OUT-L2 ACL | 206 | 9 | 197
| |
| OUT-L3 ACL | 178 | 9 | 169
| |
| OUT-V6 ACL | 178 | 4 | 174
      3 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| |
| IN-L3 ACL | 1024 | 1 | 1023
| |
| IN-L3 FIB | 49152 | 6 | 49146
| |
| IN-V6 ACL | 0 | 0 | 0
| |
| IN-NLB ACL | 0 | 0 | 0
| |
| IPMAC ACL | 0 | 0 | 0
| |
| OUT-L2 ACL | 206 | 9 | 197
| |
| OUT-L3 ACL | 178 | 9 | 169
| |
| OUT-V6 ACL | 178 | 4 | 174
Codes: * - cam usage is above 90%.

```

**Example 2:
Output of the
show cam-usage
acl Command**

```

DelleMC#show cam-usage acl
Stackunit|Portpipe| CAM Partition | Total CAM | Used CAM |
Available CAM
=====|=====|=====|=====|=====|
1 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| | | | |
| IN-L3 ACL | 1024 | 1 | 1023
| | | | |
| IN-V6 ACL | 0 | 0 | 0
| | | | |
| OUT-L2 ACL | 206 | 9 | 197
| | | | |
| OUT-L3 ACL | 178 | 9 | 169
| | | | |
| OUT-V6 ACL | 178 | 4 | 174
2 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| | | | |
| IN-L3 ACL | 1024 | 1 | 1023
| | | | |
| IN-V6 ACL | 0 | 0 | 0
| | | | |
| OUT-L2 ACL | 206 | 9 | 197
| | | | |
| OUT-L3 ACL | 178 | 9 | 169
| | | | |
| OUT-V6 ACL | 178 | 4 | 174
3 | 0
| IN-L2 ACL | 1536 | 0 | 1536
| | | | |
| IN-L3 ACL | 1024 | 1 | 1023
| | | | |
| IN-V6 ACL | 0 | 0 | 0
| | | | |
| OUT-L2 ACL | 206 | 9 | 197
| | | | |
| OUT-L3 ACL | 178 | 9 | 169
| | | | |
| OUT-V6 ACL | 178 | 4 | 174
Codes: * - cam usage is above 90%.

```

**Example 3:
Output of the
show cam-usage
router Command**

```

DelleMC#show cam-usage router
Stackunit|Portpipe| CAM Partition | Total CAM | Used CAM |
Available CAM
=====|=====|=====|=====|=====|
1 | 0
| IN-L3 FIB | 49152 | 3 | 49149
| | | | |
| IN-L3 ACL | 1024 | 1 | 1023
| | | | |
| IN-V6 ACL | 0 | 0 | 0
| | | | |
| OUT-L3 ACL | 178 | 9 | 169
| | | | |
| OUT-V6 ACL | 178 | 4 | 174
2 | 0
| IN-L3 FIB | 49152 | 3 | 49149
| | | | |
| IN-L3 ACL | 1024 | 1 | 1023
| | | | |
| IN-V6 ACL | 0 | 0 | 0
| | | | |
| OUT-L3 ACL | 178 | 9 | 169
| | | | |
| OUT-V6 ACL | 178 | 4 | 174
3 | 0
| IN-L3 FIB | 49152 | 3 | 49149

```

```

| IN-L3  ACL          |          1024      |          1      |          1023
| IN-V6  ACL          |           0        |          0      |           0
| OUT-L3  ACL         |          178      |          9      |          169
| OUT-V6  ACL         |          178      |          4      |          174
Codes: * - cam usage is above 90%.

```

Example 4:
Output of the
show cam-usage
switch Command

```

DellEMC#show cam-usage switch
Stackunit|Portpipe| CAM Partition  | Total CAM  | Used CAM  |
Available CAM
=====|=====|=====|=====|=====|
=====
      1 | 0
| IN-L2 ACL          |          1536      |          0      |          1536
| OUT-L2 ACL         |           206      |          9      |          197
      2 | 0
| IN-L2 ACL          |          1536      |          0      |          1536
| OUT-L2 ACL         |           206      |          9      |          197
      3 | 0
| IN-L2 ACL          |          1536      |          0      |          1536
| OUT-L2 ACL         |           206      |          9      |          197
Codes: * - cam usage is above 90%.

```

show running config acl-vlan-group

Display the running configuration of all or a given ACL VLAN group.

Syntax `show running config acl-vlan-group group name`

Parameters ***group-name*** Display only the ACL VLAN group that is specified. The maximum group name is 140 characters.

Default None

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, Z9000 and MXL platforms

Examples The following sample output shows the line-by-line style display when using the `show running-config acl-vlan-group` option. Note that no group or access list names are truncated

```

Dell #show running-config acl-vlan-group
!
acl-vlan-group Test
member vlan 1-100
ip access-group test in

```

```
DellEMC#show running-config acl-vlan-group Test
!
acl-vlan-group Test
 member vlan 1-100
 ip access-group test in
DellEMC#
```

acl-vlan-group

Create an ACL VLAN group.

Syntax	<code>acl-vlan-group {group name}</code> To remove an ACL VLAN group, use the <code>no acl-vlan-group {group name}</code> command.
Parameters	group-name Specify the name of the ACL VLAN group. The name can contain a maximum 140 characters.
Default	No default behavior or values
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T and Z9000 platforms

Usage Information	<p>You can have up to eight different ACL VLAN groups at any given time. When you configure an ACL VLAN group, you enter the ACL VLAN Group Configuration mode.</p> <p>To avoid the problem of excessive consumption of CAM area, you can configure ACL VLAN groups that combines all the VLANs that are applied with the same ACL in a single group. A unique identifier for each of ACL attached to the VLAN is used as a handle or locator in the CAM area instead of the VLAN id. This method of processing significantly reduces the number of entries in the CAM area and saves memory space in CAM.</p> <p>You can create an ACL VLAN group and attach the ACL with the VLAN members. Optimization is applicable only when you create an ACL VLAN group. If you apply an ACL separately on the VLAN interface, each ACL maps with the VLAN and increased CAM space utilization occurs.</p> <p>Attaching an ACL individually to VLAN interfaces is similar to the behavior of ACL-VLAN mapping storage in CAM prior to the implementation of the ACL VLAN group functionality.</p>
--------------------------	--

show acl-vlan-group detail

Display all the ACL VLAN Groups or display a specific ACL VLAN Group by name. To display the names in their entirety, the output displays in a line-by-line format.

Syntax	<code>show acl-vlan-group detail</code>
Parameters	detail Display information in a line-by-line format to display the names in their entirety. Without the detail option, the output is displayed in a table style and information may be truncated.
Default	No default behavior or values

Command Modes EXEC

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, Z9000 and MXL platforms

Usage Information

The output for this command displays in a line-by-line format. This allows the ACL-VLAN-Group names (or the Access List Group Names) to display in their entirety.

Examples

The following sample output shows the line-by-line style display when using the `show acl-vlan-group detail` option. Note that no group or access list names are truncated

```
DellEMC# show acl-vlan-group detail
Group Name :
  Test
Egress IP Acl :
  -
Ingress IP Acl :
  test
Ingress IPV6 Acl :
  -
Vlan Members :
  1-100
DellEMC#
```

description (ACL VLAN Group)

Add a description to the ACL VLAN group.

Syntax `description description`

Parameters *description* Enter a description to identify the ACL VLAN group (80 characters maximum).

Default No default behavior or values

Command Modes CONFIGURATION (conf-acl-vl-grp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Introduced on the S4810, S4820T, and Z9000 platforms

Usage Information

Enter a description for each ACL VLAN group that you create for effective and streamlined administrative and logging purposes.

Bidirectional Forwarding Detection (BFD)

Bidirectional forwarding detection (BFD) is a detection protocol that provides fast forwarding path failure detection.

The Dell EMC Networking OS implementation is based on the standards specified in the IETF Draft draft-ietf-bfd-base-03, and supports BFD on all Layer 3 physical interfaces including VLAN interfaces and port-channels

Topics:

- [bfd all-neighbors](#)
- [bfd disable](#)
- [bfd enable \(Configuration\)](#)
- [bfd enable \(Interface\)](#)
- [bfd interval](#)
- [bfd protocol-liveness](#)
- [ip route bfd](#)
- [ip ospf bfd all-neighbors](#)
- [ipv6 ospf bfd all-neighbors](#)
- [ipv6 route bfd](#)
- [isis bfd all-neighbors](#)
- [neighbor bfd](#)
- [neighbor bfd disable](#)
- [show bfd neighbors](#)
- [vrrp bfd neighbor](#)

bfd all-neighbors

Enable BFD sessions with all neighbors discovered by Layer 3 protocols virtual router redundancy protocol (VRRP), intermediate system to intermediate system (IS-IS), open shortest path first (OSPF), OSPFv3, or border gateway protocol (BGP) on router interfaces, and (optionally) reconfigure the default timer values.

Syntax `bfd all-neighbors [interval interval min_rx min_rx multiplier value role {active | passive}]`

Parameters

interval <i>milliseconds</i>	(OPTIONAL) Enter the keyword <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 . Dell EMC recommends using more than 100 milliseconds.
min_rx <i>milliseconds</i>	Enter the keyword <code>min_rx</code> to specify the minimum rate at which the local system would like to receive control packets from the remote system. The range is from 50 to 1000. The default is 200 . Dell EMC recommends using more than 100 milliseconds.
multiplier <i>value</i>	Enter the keyword <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .
role [active passive]	Enter the role that the local system assumes: <ul style="list-style-type: none"> • Active — The active system initiates the BFD session. Both systems can be active for the same session. • Passive — The passive system does not initiate a session. It only responds to a request for session initialization from the active system. The default is active .

Defaults See *Parameters*.

Command Modes ROUTER OSPF
ROUTER OSPFv3
ROUTER BGP
ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced support for enabling BFD on non-default VRFs for IPv4 BGP, default, and non-default VRFs for IPv6 BGP on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, C9010, Z9500, and Z9100-ON.
9.11(2.1P1)	Introduced support for enabling BFD on non-default VRFs for OSPFv2 on all the remaining Dell EMC Networking OS platforms. Introduced support for enabling BFD on non-default VRFs for OSPFv3 on all the Dell EMC Networking OS platforms.
9.10(0.2)	Introduced support for enabling BFD on non-default VRFs for OSPFv2 on the S3048-ON, S4048-ON, S4048T-ON, S6010-ON, Z9100-ON, and S6100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced BFD for VRRP and OSPFv3 on Z9000, S4810, and S4820T.
9.0.0.0	Introduced BFD for BGP on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced BFD for BGP on the S4810.
8.4.1.3	Introduced BFD for BGP on the E-Series.
8.2.1.0	Introduced BFD for OSPF and ISIS on the E-Series.
7.6.1.0	Introduced BFD for OSPF on the C-Series.
7.5.1.0	Introduced BFD for ISIS on the E-Series.
7.4.1.0	Introduced BFD for OSPF on the E-Series.

Usage Information

All neighbors inherit the timer values configured with the `bfd neighbor` command except in the following cases:

- Timer values configured with the `isis bfd all-neighbors` or `ip ospf bfd all-neighbors` commands in INTERFACE mode override timer values configured with the `bfd neighbor` command. Likewise, using the `no bfd neighbor` command does not disable BFD on an interface if you explicitly enable BFD using the `isis bfd all-neighbors` command.
- Neighbors that have been explicitly enabled or disabled for a BFD session with the `bfd neighbor` or `neighbor bfd disable` commands in ROUTER BGP mode do not inherit the global BFD enable/

disable values configured with the `bfd neighbor` command or configured for the peer group to which a neighbor belongs. The neighbors inherit only the global timer values (configured with the `bfd neighbor` command).

You can only enable BFD for VRRP in INTERFACE command mode (`vrrp bfd all-neighbors`).

You can enable BFD on both default and nondefault VRFs for OSPF and BGP protocols for both IPv4 and IPv6 neighbors.

 **NOTE:** The `bfd all-neighbors` command is applicable for both IPv4 and IPv6 BGP sessions.

bfd disable

Disable BFD on an interface.

Syntax `bfd disable`

Re-enable BFD using the `no bfd disable` command.

Defaults BFD is disabled by default.

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.2)	Introduced on S4810.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

bfd enable (Configuration)

Enable BFD on all interfaces.

Syntax `bfd enable`

Disable BFD using the `no bfd enable` command.

Defaults BFD is disabled by default.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

bfd enable (Interface)

Enable BFD on an interface.

Syntax `bfd enable`

Defaults BFD is enabled on all interfaces when you enable BFD from CONFIGURATION mode.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

bfd interval

Specify non-default BFD session parameters beginning with the transmission interval.

Syntax `bfd interval interval min_rx min_rx multiplier value role {active | passive}`

Parameters	interval milliseconds	Enter the keywords <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 . Dell EMC recommends using more than 100 milliseconds.
	min_rx milliseconds	Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system would like to receive control packets from the remote system. The range is from 50 to 1000. The default is 200 . Dell EMC recommends using more than 100 milliseconds.
	multiplier value	Enter the keywords <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .
	role [active passive]	Enter the role that the local system assumes: <ul style="list-style-type: none">• Active — The active system initiates the BFD session. Both systems can be active for the same session.• Passive — The passive system does not initiate a session. It only responds to a request for session initialization from the active system. The default is Active .

Defaults Refer to *Parameters*.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-if-te-1/3)# bfd interval 250 min_rx 300 multiplier 4 role
passive
DellEMC(conf-if-te-1/3)#
```

bfd protocol-liveness

Enable the BFD protocol liveness feature.

Syntax	<code>bfd protocol-liveness</code>
Defaults	Disabled
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
7.4.1.0	Introduced on the E-Series.

Usage Information	Protocol Liveness is a feature that notifies the BFD Manager when a client protocol (for example, OSPF and ISIS) is disabled. When a client is disabled, all BFD sessions for that protocol are torn down. Neighbors on the remote system receive an Admin Down control packet and are placed in the Down state. Peer routers might take corrective action by choosing alternative paths for the routes that originally pointed to this router.
--------------------------	---

ip route bfd

Enable BFD for all neighbors configured through static routes.

Syntax	<code>ip route bfd [prefix-list prefix-list-name] [interval interval min_rx min_rx multiplier value role {active passive}]</code> To disable BFD for all neighbors configured through static routes, use the <code>no ip route bfd [vrf vrf-name] [prefix-list prefix-list-name] [interval interval min_rx min_rx multiplier value role {active passive}]</code> command.
---------------	--

Parameters	prefix-list prefix-list-name (Optional) Enter the keyword <code>prefix-list</code> followed by the name of the prefix list to enable or disable BFD on specific neighbors.
	interval milliseconds (OPTIONAL) Enter the keywords <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 .
	min_rx milliseconds Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system receives control packets from the remote system. The range is from 50 to 1000. The default is 200 .
	multiplier value Enter the keywords <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .

role [active | passive] Enter the role that the local system assumes:

- **Active** — active system initiates the BFD session. Both systems can be active for the same session.
- **Passive** — passive system does not initiate a session. It only responds to a request for session initialization from the active system.

The default is **Active**.

Defaults See *Parameters*.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced the <code>vrf</code> keyword on S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, C9010, Z9500, and Z9100-ON.
9.12(1.0)	Introduced on the S5048F-ON.
9.11(2.5)	Introduced the <code>vrf</code> keyword on the Z9100-ON.
9.11(0.0)	Introduced the <code>prefix-list</code> keyword.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3.(0.0)	Introduced on S6000.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on Z9000, S4810, and S4820T.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

ip ospf bfd all-neighbors

Establish BFD sessions with all OSPF neighbors on a single interface or use non-default BFD session parameters.

Syntax `ip ospf bfd all-neighbors [disable | [interval interval min_rx min_rx multiplier value role {active | passive}]]`

To disable all BFD sessions on an OSPF interface implicitly, use the `no ip ospf bfd all-neighbors disable` command in interface mode..

Parameters

disable (OPTIONAL) Enter the keyword `disable` to disable BFD on this interface.

interval milliseconds (OPTIONAL) Enter the keyword `interval` to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is **200**.

min_rx milliseconds	Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system receives control packets from the remote system. The range is from 50 to 1000. The default is 200 .
multiplier value	Enter the keyword <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .
role [active passive]	Enter the role that the local system assumes: <ul style="list-style-type: none"> • <code>Active</code> — active system initiates the BFD session. Both systems can be active for the same session. • <code>Passive</code> — passive system does not initiate a session. It only responds to a request for session initialization from the active system. The default is Active .

Defaults See *Parameters*.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.2)	Introduced support for enabling BFD on non-default VRFs for OSPFv2.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2.0.0	Introduced on the Z9000, S4820T, and S4810.

Usage Information

This command provides the flexibility to fine-tune the timer values based on individual interface needs when you configure `ip ospf bfd` in CONFIGURATION mode. Any timer values specified with this command overrides timers set using the `bfd all-neighbors` command. Using the `no` form of this command does not disable BFD if you configure BFD in CONFIGURATION mode.

To disable BFD on a specific interface while you configure BFD in CONFIGURATION mode, use the keyword `disable`.

ipv6 ospf bfd all-neighbors

Establish BFD sessions with all OSPFv3 neighbors on a single interface or use non-default BFD session parameters.

Syntax `ipv6 ospf bfd all-neighbors [disable | [interval interval min_rx min_rx multiplier value role {active | passive}]]`

To disable all BFD sessions on an OSPFv3 interface implicitly, use the `no ipv6 ospf bfd all-neighbors disable` command in interface mode..

Parameters

disable	(OPTIONAL) Enter the keyword <code>disable</code> to disable BFD on this interface.
interval milliseconds	(OPTIONAL) Enter the keyword <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 .
min_rx milliseconds	Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system receives control packets from the remote system. The range is from 50 to 1000. The default is 200 .

- multiplier *value*** Enter the keyword `multiplier` to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is **3**.
- role [active | passive]** Enter the role that the local system assumes:
- `Active` — active system initiates the BFD session. Both systems can be active for the same session.
 - `Passive` — passive system does not initiate a session. It only responds to a request for session initialization from the active system.
- The default is **Active**.

Defaults See *Parameters*.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2.0.0	Introduced on the Z9000, S4820T, and S4810.

Usage Information

This command provides the flexibility to fine-tune the timer values based on individual interface needs when you configure `ipv6 ospf bfd` in CONFIGURATION mode. Any timer values specified with this command overrides timers set using the `bfd all-neighbors` command. Using the `no` form of this command does not disable BFD if you configure BFD in CONFIGURATION mode.

To disable BFD on a specific interface while you configure BFD in CONFIGURATION mode, use the keyword `disable`.

ipv6 route bfd

Enable BFD for all IPv6 neighbors configured through static routes.

Syntax `ipv6 route bfd [vrf vrf-name] [prefix-list prefix-list-name] [interval interval min_rx min_rx multiplier value role {active | passive}]`

To disable BFD for all IPv6 neighbors configured through static routes, use the `no ipv6 route bfd [vrf vrf-name] [prefix-list prefix-list-name] [interval interval min_rx min_rx multiplier value role {active | passive}]` command.

Parameters

- vrf *vrf-name*** (Optional) Enter the keyword `vrf` and then the name of the VRF to enable or disable BFD on the next-hop IPv6 neighbor corresponding to that VRF.
- prefix-list *prefix-list-name*** (Optional) Enter the keyword `prefix-list` followed by the name of the prefix list to enable or disable BFD on specific IPv6 neighbors.
- interval *milliseconds*** (OPTIONAL) Enter the keywords `interval` to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is **200**.
- min_rx *milliseconds*** Enter the keywords `min_rx` to specify the minimum rate at which the local system receives control packets from the remote system. The range is from 50 to 1000. The default is **200**.

- multiplier *value*** Enter the keywords `multiplier` to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is **3**.
- role [active | passive]** Enter the role that the local system assumes:
- **Active** — active system initiates the BFD session. Both systems can be active for the same session.
 - **Passive** — passive system does not initiate a session. It only responds to a request for session initialization from the active system.
- The default is **Active**.

Defaults See *Parameters*.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6100-ON, C9010, and the Z9500.
9.12(1.0)	Introduced on the S5048F-ON.
9.11(2.5)	Introduced the <code>ipv6 route bfd</code> command on the Z9100-ON.

Example

```
DellEMC(conf)#ipv6 route bfd
DellEMC(conf)#ipv6 route bfd vrf vrf1 prefix-list p6_le
```

isis bfd all-neighbors

Enable BFD on all IS-IS neighbors discovered on an interface.

Syntax `isis bfd all-neighbors [disable | [interval interval min_rx min_rx multiplier value role {active | passive}]]`

To remove all BFD sessions with IS-IS neighbors discovered on this interface, use the `no isis bfd all-neighbors [disable | [interval interval min_rx min_rx multiplier value role {active | passive}]]` command.

Parameters

disable	(OPTIONAL) Enter the keyword <code>disable</code> to disable BFD on this interface.
interval <i>milliseconds</i>	(OPTIONAL) Enter the keywords <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 .
min_rx <i>milliseconds</i>	Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system would like to receive control packets from the remote system. The range is from 50 to 1000. The default is 200 .
multiplier <i>value</i>	Enter the keywords <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .
role [active passive]	Enter the role that the local system assumes:
	<ul style="list-style-type: none"> • Active — active system initiates the BFD session. Both systems can be active for the same session. • Passive — passive system does not initiate a session. It only responds to a request for session initialization from the active system.
	The default is Active .

Defaults See *Parameters*.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.0.0	Introduced on Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on S4810.
8.2.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information

This command provides the flexibility to fine-tune the timer values based on individual interface needs when ISIS BFD is configured in CONFIGURATION mode. Any timer values specified with this command overrides timers set using the `bfd all-neighbors` command. Using the `no` form of this command does not disable BFD if BFD is configured in CONFIGURATION mode.

To disable BFD on a specific interface while BFD is configured in CONFIGURATION mode, use the keyword `disable`.

neighbor bfd

Explicitly enable or disable a BFD session with a BGP neighbor or a BGP peer group.

Syntax `neighbor {ip-address | peer-group-name} bfd`

Parameters

- ip-address*** Enter the IP address of the BGP neighbor that you want to explicitly enable for BFD sessions in dotted decimal format (A.B.C.D).
- peer-group-name*** Enter the name of the peer group that you want to explicitly enable for BFD sessions.

Defaults None

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced support for enabling BFD on non-default VRFs for IPv4 BGP, default, and non-default VRFs for IPv6 BGP on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, C9010, Z9500, and Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.
8.4.1.3	Introduced on the E-Series.

Usage Information

When you enable a BFD session with a specified BGP neighbor or peer group using the `bfd neighbor` command, the default BFD session parameters are used (interval: **200** milliseconds, min_rx: **200** milliseconds, multiplier: **3** packets, and role: **active**) if you have not specified parameters with the `bfd neighbor` command.

When you explicitly enable a BGP neighbor for a BFD session with the `bfd neighbor` command:

- The neighbor does not inherit the global BFD enable values configured with the `bfd neighbor` command or configured for the peer group to which the neighbor belongs.
- The neighbor only inherits the global timer values configured with the `bfd neighbor` command: interval, min_rx, and multiplier.

Related Commands

- [neighbor bfd disable](#) — disable a BFD session explicitly with a BGP neighbor or a BGP peer group.

neighbor bfd disable

Explicitly disable a BFD session with a BGP neighbor or a BGP peer group.

Syntax `neighbor {ip-address | peer-group-name} bfd disable`

Parameters

- ip-address*** Enter the IP address of the BGP neighbor that you want to explicitly disable for BFD sessions in dotted decimal format (A.B.C.D).
- peer-group-name*** Enter the name of the peer group that you want to explicitly disable for BFD sessions.

Defaults None

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Introduced support for enabling BFD on non-default VRFs for IPv4 BGP, default, and non-default VRFs for IPv6 BGP on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, C9010, Z9500, and Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.
8.4.1.3	Introduced on the E-Series.

Usage Information

When you explicitly disable a BGP neighbor for a BFD session with the `neighbor bfd disable` command:

- The neighbor does not inherit the global BFD disable values configured with the `bfd neighbor` command or configured for the peer group to which the neighbor belongs.
- The neighbor only inherits the global timer values configured with the `bfd neighbor` command: `interval`, `min_rx`, and `multiplier`.

When you remove the Disabled state of a BFD for a BGP session with a specified neighbor by entering the `no neighbor bfd disable` command, the BGP link with the neighbor returns to normal operation and uses the BFD session parameters globally configured with the `bfd neighbor` command or configured for the peer group to which the neighbor belongs.

show bfd neighbors

Display BFD neighbor information on all interfaces or a specified interface.

Syntax

```
show bfd [vrf vrf name] neighbors [interface] [detail]
```

Parameters

vrf vrf name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF to display the BFD sessions with all neighbors within the VRF.
interface	(OPTIONAL) Enter one of the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
detail	(OPTIONAL) Enter the keyword <code>detail</code> to view detailed information about BFD neighbors.

Defaults

None

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.1P1)	Introduced the <code>vrf</code> keyword on all the remaining Dell EMC Networking OS platforms.
9.10(0.2)	Introduced the <code>vrf</code> keyword on the S3048-ON, S4048-ON, S4048T-ON, S6010-ON, Z9100-ON, and S6100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Added support for BFD for BGP on the S4810.
8.4.1.3	Added support for BFD for BGP on the E-Series.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.5.1.0	Added support for BFD for VLAN and port-channel interfaces on the E-Series.
7.4.1.0	Introduced BFD on physical ports on the E-Series.

Example

The following example shows the `show bfd neighbors` command output for the default VRF.

```
DellEMC# show bfd neighbors

*          - Active session role
Ad Dn     - Admin Down
B         - BGP
C         - CLI
I         - ISIS
O         - OSPF
O3        - OSPFv3
R         - Static Route (RTM)
M         - MPLS
V         - VRRP
VT        - Vxlan Tunnel

  LocalAddr  RemoteAddr          Interface State Rx-int Tx-int Mult
Clients
* 1.0.1.1    1.0.1.2                  Te 1/49 Up    200    200    3    B
* 3.3.3.3    192.168.122.135         Te 1/38 Up    1000   1000   3    VT
* 3.3.3.3    192.168.122.136         Te 1/42 Up    1000   1000   3    VT
* 3.3.3.3    192.168.122.137         Te 1/43 Up    1000   1000   3    VT
* 3.3.3.3    192.168.122.138         Te 1/38 Up    1000   1000   3    VT
* 3.3.3.3    192.168.122.139         Te 1/42 Up    1000   1000   3    VT
```

Example (Detail)

```
DellEMC# show bfd neighbors detail

Session Discriminator: 1
Neighbor Discriminator: 1
Local Addr: 10.1.3.2
Local MAC Addr: 00:01:e8:02:15:0e
Remote Addr: 10.1.3.1
Remote MAC Addr: 00:01:e8:27:2b:f1
Int: TenGigabitEthernet 1/3
State: Up
Configured parameters:
```

```

TX: 100ms, RX: 100ms, Multiplier: 3
Neighbor parameters:
TX: 250ms, RX: 300ms, Multiplier: 4
Actual parameters:
TX: 300ms, RX: 250ms, Multiplier: 3
Role: Active
Delete session on Down: False
Client Registered: CLI
Uptime: 00:02:04
Statistics:
Number of packets received from neighbor: 376
Number of packets sent to neighbor: 314
Number of state changes: 2
Number of messages from IFA about port state change: 0
Number of messages communicated b/w Manager and Agent: 6
DellEMC#

```

Related Commands

- [bfd all-neighbors](#) — establish BFD sessions with all neighbors discovered by the IS-IS protocol or OSPF protocol out of all interfaces.

vrrp bfd neighbor

Establish a BFD for VRRP session with a neighbor.

Syntax

```
vrrp bfd neighbor ip-address
```

To remove the BFD session with the neighbor, use the `no vrrp bfd neighbor ip-address` command.

Parameters

ip-address Enter the IP address of the neighbor in dotted decimal format (A.B.C.D).

Defaults

None

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series.
7.5.1.0	Added support for VLAN and port-channel interfaces on the E-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [show bfd neighbors](#) — display the BFD neighbor information on all interfaces or a specified interface.

Border Gateway Protocol

BGP is an external gateway protocol that transmits interdomain routing information within and between autonomous systems (AS). BGP version 4 (BGPv4) supports classless inter-domain routing (CIDR) and the aggregation of routes and AS paths. Basically, two routers (called neighbors or peers) exchange information including full routing tables and periodically sent messages to update those routing tables.

 **NOTE:** For more information about configuring the border gateway protocol (BGP), see the *BGP* section in the *Dell EMC Networking OS Configuration Guide*.

Topics:

- BGP IPv4 Commands
- address-family
- aggregate-address
- bgp add-path
- bgp always-compare-med
- bgp asnotation
- bgp bestpath as-path ignore
- bgp bestpath as-path multipath-relax
- bgp bestpath med confed
- bgp bestpath med missing-as-best
- bgp bestpath router-id ignore
- bgp client-to-client reflection
- bgp cluster-id
- bgp confederation identifier
- bgp confederation peers
- bgp connection-retry-timer
- bgp dampening
- bgp default local-preference
- bgp dmzlink-bw
- bgp enforce-first-as
- bgp fast-external-failover
- bgp four-octet-as-support
- bgp graceful-restart
- bgp log-neighbor-changes
- bgp non-deterministic-med
- bgp outbound-optimization
- bgp recursive-bgp-next-hop
- bgp regex-eval-optz-disable
- bgp router-id
- bgp soft-reconfig-backup
- capture bgp-pdu max-buffer-size
- capture bgp-pdu neighbor
- clear ip bgp
- clear ip bgp dampening
- clear ip bgp flap-statistics
- clear ip bgp peer-group
- debug ip bgp
- debug ip bgp dampening
- debug ip bgp events
- debug ip bgp keepalives
- debug ip bgp notifications

- debug ip bgp peer-group updates
- debug ip bgp soft-reconfiguration
- debug ip bgp updates
- default-metric
- description
- deny bandwidth
- distance bgp
- maximum-paths
- neighbor activate
- neighbor add-path
- neighbor advertisement-interval
- neighbor advertisement-start
- neighbor allowas-in
- neighbor default-originate
- neighbor description
- neighbor distribute-list
- neighbor ebgp-multihop
- neighbor fail-over
- neighbor filter-list
- neighbor graceful-restart
- neighbor local-as
- neighbor maximum-prefix
- neighbor next-hop-self
- neighbor password
- neighbor peer-group (assigning peers)
- neighbor peer-group (creating group)
- neighbor peer-group passive
- neighbor remote-as
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- neighbor send-community
- neighbor sender-side-loopdetect
- neighbor shutdown
- neighbor soft-reconfiguration inbound
- neighbor subnet
- neighbor timers
- neighbor update-source
- neighbor weight
- network
- network backdoor
- permit bandwidth
- redistribute
- router bgp
- shutdown all
- shutdown address-family-ipv4-multicast
- shutdown address-family-ipv4-unicast
- shutdown address-family-ipv6-unicast
- set extcommunity bandwidth
- show capture bgp-pdu neighbor
- show config
- show ip bgp
- show ip bgp paths
- show ip bgp cluster-list
- show ip bgp community
- show ip bgp community-list

- show ip bgp dampened-paths
- show ip bgp detail
- show ip bgp extcommunity-list
- show ip bgp filter-list
- show ip bgp flap-statistics
- show ip bgp inconsistent-as
- show ip bgp neighbors
- show ip bgp next-hop
- show ip bgp paths as-path
- show ip bgp paths community
- show ip bgp peer-group
- show ip bgp regexp
- show ip bgp summary
- show running-config bgp
- timers bgp
- MBGP Commands
- clear ip bgp flap-statistics
- debug ip bgp dampening
- clear ip bgp peer-group
- debug ip bgp updates
- distance bgp
- neighbor activate
- neighbor advertisement-interval
- neighbor default-originate
- neighbor distribute-list
- neighbor filter-list
- neighbor maximum-prefix
- neighbor next-hop-self
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- network
- redistribute
- redistribute ospf
- show ip bgp ipv4 multicast
- show ip bgp cluster-list
- show ip bgp community
- show ip bgp community-list
- show ip bgp dampened-paths
- show ip bgp filter-list
- show ip bgp flap-statistics
- show ip bgp inconsistent-as
- show ip bgp ipv4 multicast neighbors
- show ip bgp peer-group
- show ip bgp summary
- BGP Extended Communities (RFC 4360)
- deny
- deny regex
- description
- ip extcommunity-list
- match extcommunity
- permit
- permit regex
- set extcommunity rt
- set extcommunity soo
- show ip bgp ipv4 extcommunity-list

- `show ip bgp paths extcommunity`
- `show ip extcommunity-list`
- `show running-config extcommunity-list`

BGP IPv4 Commands

Border Gateway Protocol (BGP) is an external gateway protocol that transmits interdomain routing information within and between Autonomous Systems (AS). BGP supports classless interdomain routing (CIDR) and the aggregation of routes and AS paths. Basically, two routers (called neighbors or peers) exchange information including full routing tables and periodically send messages to update those routing tables.

NOTE: Dell EMC Networking OS supports 2-byte (16-bit) and 4-byte (32-bit) format for autonomous system numbers (ASNs), where the 2-byte format is 1 to 65535 and the 4-byte format is 1 to 4294967295.

NOTE: Dell EMC Networking OS supports dotted format as well as the traditional plain format for AS numbers. The dot format is displayed when using the `show ip bgp` commands. To determine the comparable dot format for an ASN from a traditional format, use `ASN/65536`. `ASN%65536`. For more information about using the 2- or 4-byte format, refer to the *Dell EMC Networking OS Configuration Guide*.

address-family

Enable the IPv4 multicast or the IPv6 address family.

Syntax	<code>address-family {ipv4 multicast ipv6 unicast} [vrf vrf-name]</code>	
Parameters	ipv4 multicast	Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to enable BGPv4 multicast mode.
	vrf vrf-name	Enter the keyword <code>vrf</code> and then the name of the VRF to enable VRF mode. NOTE: It is not possible to enable VRF mode for IPv6 unicast without configuring the corresponding IPv4 unicast mode for the same VRF. While deletion, whenever the IPv4 VRF mode is deleted for the VRF, Dell EMC Networking OS automatically deletes the IPv6 VRF configurations as well.
	ipv6 unicast	Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to enable BGPv6 mode.
Defaults	Not configured.	
Command Modes	ROUTER BGP	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for IPv6 VRF.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.5.1.0	Introduced

aggregate-address

To minimize the number of entries in the routing table, summarize a range of prefixes.

S5000

Syntax	<code>aggregate-address ip-address mask [advertise-map map-name] [as-set] [attribute-map map-name] [summary-only] [suppress-map map-name]</code>
Parameters	<p><i>ip-address mask</i> Enter the IP address and mask of the route to be the aggregate address. Enter the IP address in dotted decimal format (A.B.C.D) and mask in /prefix format (/x).</p> <p><i>advertise-map map-name</i> (OPTIONAL) Enter the keywords <code>advertise-map</code> then the name of a configured route map to set filters for advertising an aggregate route.</p> <p><i>as-set</i> (OPTIONAL) Enter the keyword <code>as-set</code> to generate path attribute information and include it in the aggregate. AS_SET includes AS_PATH and community information from the routes included in the aggregated route.</p> <p><i>attribute-map map-name</i> (OPTIONAL) Enter the keywords <code>attribute-map</code> then the name of a configured route map to modify attributes of the aggregate, excluding AS_PATH and NEXT_HOP attributes.</p> <p><i>summary-only</i> (OPTIONAL) Enter the keyword <code>summary-only</code> to advertise only the aggregate address. Specific routes are not advertised.</p> <p><i>suppress-map map-name</i> (OPTIONAL) Enter the keywords <code>suppress-map</code> then the name of a configured route map to identify which more-specific routes in the aggregate are suppressed.</p>
Defaults	Not configured.
Command Modes	<ul style="list-style-type: none"> ROUTER BGP ADDRESS FAMILY ROUTER BGP ADDRESS FAMILY IPv6
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

At least one of the routes included in the aggregate address must be in the BGP routing table for the configured aggregate to become active.

If routes within the aggregate are constantly changing, do not add the `as-set` parameter to the aggregate as the aggregate flaps to keep track of the changes in the `AS_PATH`.

In route maps used in the `suppress-map` parameter, routes meeting the `deny` clause are not suppressed; in other words, they are allowed. The opposite is also true: routes meeting the `permit` clause are suppressed.

If the route is injected via the `network` command, that route still appears in the routing table if the `summary-only` parameter is configured in the `aggregate-address` command.

The `summary-only` parameter suppresses all advertisements. If you want to suppress advertisements to only specific neighbors, use the `neighbor distribute-list` command.

In the `show ip bgp` command, aggregates contain an 'a' in the first column and routes suppressed by the aggregate contain an 's' in the first column.

When an aggregate address is denied using a peer's outbound route-map, individual routes suppressed by the aggregate address are advertised to that peer.

The attribute-map corresponding to an aggregate address is applied during the outbound update creation time; the value set in that attribute-map will not be shown in the output of the `show ip bgp aggregate route` command.

bgp add-path

Allow the advertisement of multiple paths for the same address prefix without the new paths replacing any previous ones.

Syntax `bgp add-path [send | receive | both] path-count`

Parameters		
send	Enter the keyword <code>send</code> to indicate that the system sends multiple paths to peers.	
receive	Enter the keyword <code>receive</code> to indicate that the system accepts multiple paths from peers.	
both	Enter the keyword <code>both</code> to indicate that the system sends and accepts multiple paths from peers.	
path-count	Enter the number paths supported. The range is from 2 to 64.	

Defaults Disabled

- Command Modes**
- ROUTER BGP
 - ROUTER BGP-address-family

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Related Commands

- [neighbor add-path](#) — specify that this neighbor/peer group can send/receive multiple path advertisements.

bgp always-compare-med

Allows you to enable comparison of the MULTI_EXIT_DISC (MED) attributes in the paths from different external ASs.

Syntax `bgp always-compare-med`
 To disable comparison of MED, enter `no bgp always-compare-med`.

Defaults Disabled (that is, the software only compares MEDs from neighbors within the same AS).

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced command.
7.7.1.0	Introduced on the C-Series.

Usage Information Any update without a MED attribute is the least preferred route.

If you enable this command, use the `clear ip bgp *` command to recompute the best path.

bgp asnotation

Allows you to implement a method for AS number representation in the command line interface (CLI).

Syntax `bgp asnotation [asplain | asdot+ | asdot]`
To disable a dot or dot+ representation and return to ASPLAIN, enter the `no bgp asnotation` command.

Defaults **asplain**

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced the dynamic application of AS notation changes.
8.2.1.0	Introduced.

Usage Information Before enabling this feature, enable the `enable bgp four-octet-as-support` command. If you disable the `four-octet-as-support` command after using dot or dot+ format, the AS numbers revert to asplain text.

When you apply an asnotation, it is reflected in the running-configuration. If you change the notation type, the running-config updates dynamically and the new notation shows.

Example

```
DelleMC(conf)# router bgp 1
DelleMC(conf-router_bgp)#bgp asnotation asdot
DelleMC(conf-router_bgp)# ex
DelleMC(conf)#do show run | grep bgp

router bgp 1
  bgp four-octet-as-support
  bgp asnotation asdot

DelleMC(conf)#router bgp 1
DelleMC(conf-router_bgp)# bgp asnotation asdot+
DelleMC(conf-router_bgp)# ex

DelleMC(conf)#do show run | grep bgp
router bgp 1
  bgp four-octet-as-support
  bgp asnotation asdot+

DelleMC(conf)#router bgp 1
DelleMC(conf-router_bgp)# bgp asnotation asplain
DelleMC(conf-router_bgp)# ex
```

```
DellEMC(conf)#do show run |grep bgp
router bgp 1
  bgp four-octet-as-support

DellEMC(conf)#
```

Related Commands

- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

bgp bestpath as-path ignore

Ignore the AS PATH in BGP best path calculations.

Syntax `bgp bestpath as-path ignore`
To return to the default, enter the `no bgp bestpath as-path ignore` command.

Defaults Disabled (that is, the software considers the AS_PATH when choosing a route as best).

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information If you enable this command, use the `clear ip bgp *` command to recompute the best path.

bgp bestpath as-path multipath-relax

Include prefixes received from different AS paths during multipath calculation.

Syntax `bgp bestpath as-path multipath-relax`
To return to the default BGP routing process, use the `no bgp bestpath as-path multipath-relax` command.

Defaults Disabled

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.4	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information The `bestpath router bgp configuration mode` command changes the default bestpath selection algorithm. The `multipath-relax` option allows load-sharing across providers with different (but equal-length) autonomous system paths. Without this option, ECMP expects the AS paths to be identical for load-sharing.

bgp bestpath med confed

Enable MULTI_EXIT_DISC (MED) attribute comparison on paths learned from BGP confederations.

Syntax `bgp bestpath med confed`

To disable MED comparison on BGP confederation paths, enter the `no bgp bestpath med confed` command.

Defaults Disabled

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The software compares the MEDs only if the path contains no external autonomous system numbers. If you enable this command, use the `clear ip bgp *` command to recompute the best path.

bgp bestpath med missing-as-best

During path selection, indicate preference to paths with missing MED (MULTI_EXIT_DISC) over paths with an advertised MED attribute.

Syntax `bgp bestpath med missing-as-best`
To return to the default selection, use the `no bgp bestpath med missing-as-best` command.

Defaults Disabled

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
6.3.1.0	Introduced

Usage Information

The MED is a 4-byte unsigned integer value and the default behavior is to assume a missing MED as 4294967295. This command causes a missing MED to be treated as 0. During path selection, paths with a lower MED are preferred over paths with a higher MED.

bgp bestpath router-id ignore

Do not compare router-id information for external paths during best path selection.

Syntax `bgp bestpath router-id ignore`

To return to the default selection, use the `no bgp bestpath router-id ignore` command.

Defaults Disabled

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced

Usage Information Configuring this option retains the current best-path. When sessions are then reset, the oldest received path is chosen as the best-path.

bgp client-to-client reflection

Allows you to enable route reflection between clients in a cluster.

Syntax `bgp client-to-client reflection`

To disable client-to-client reflection, use the `no bgp client-to-client reflection` command.

Defaults Enabled when a route reflector is configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

Route reflection to clients is not necessary if all client routers are fully meshed.

Related Commands

- [bgp cluster-id](#) — assign an ID to a BGP cluster with two or more route reflectors.
- [neighbor route-reflector-client](#) — configure a route reflector and clients.

bgp cluster-id

Assign a cluster ID to a BGP cluster with more than one route reflector.

Syntax

`bgp cluster-id {ip-address | number}`

To delete a cluster ID, use the `no bgp cluster-id {ip-address | number}` command.

Parameters

- ip-address** Enter an IP address as the route reflector cluster ID.
- number** Enter a route reflector cluster ID as a number from 1 to 4294967295.

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

When a BGP cluster contains only one route reflector, the cluster ID is the route reflector's router ID. For redundancy, a BGP cluster may contain two or more route reflectors. Assign a cluster ID with the `bgp`

`cluster-id` command. Without a cluster ID, the route reflector cannot recognize route updates from the other route reflectors within the cluster.

The default format for displaying the cluster-id is dotted decimal, but if you enter the cluster-id as an integer, it is displayed as an integer.

This command automatically restarts the BGP instance for the configuration to take effect.

Related Commands

- [bgp client-to-client reflection](#) — enable route reflection between the route reflector and clients.
- [neighbor route-reflector-client](#) — configure a route reflector and clients.
- [show ip bgp cluster-list](#) — view paths with a cluster ID.

bgp confederation identifier

Configure an identifier for a BGP confederation.

Syntax

`bgp confederation identifier as-number`

To delete a BGP confederation identifier, use the `no bgp confederation identifier as-number` command.

Parameters

as-number Enter the AS number. The range is from 0 to 65535 (2 byte), from 1 to 4294967295 (4 byte), or from 0.1 to 65535.65535 (dotted format).

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series. Added support for the 4-byte format

Usage Information

To accept 4-byte formats before entering a 4-byte AS number, configure your system. All the routers in the Confederation must be 4 byte or 2 byte identified routers. You cannot mix them.

The autonomous systems configured in this command are visible to the EBGp neighbors. Each autonomous system is fully meshed and contains a few connections to other autonomous systems. The next hop, MED, and local preference information is preserved throughout the confederation.

Dell EMC Networking OS accepts confederation EBGp peers without a LOCAL_PREF attribute. The software sends AS_CONFED_SET and accepts AS_CONFED_SET and AS_CONF_SEQ.

If a local-as is configured, BGP does not allow for the configuration of BGP confederation. Similarly, if BGP confederation is configured, then BGP does not allow the configuration of local-as.

If the neighbor is an eBGP neighbor, then BGP performs a check on the first AS number. In this scenario, it is mandatory that the first sequence in the AS path is of type AS_SEQUENCE or AS_CONFED_SEQUENCE (in the case of confederations). If the first entry appears as an AS_CONFED_SET and the neighbor is not in the local AS, then this is strictly a problem with the neighbor node.

This command automatically restarts the BGP instance for the configuration to take effect.

Related Commands

- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

bgp confederation peers

Specify the autonomous systems (ASs) that belong to the BGP confederation.

Syntax `bgp confederation peers as-number [...as-number]`

To return to the default, use the `no bgp confederation peers` command.

Parameters

<i>as-number</i>	Enter the AS number. The range is from 0 to 65535 (2 byte), from 1 to 4294967295 (4 byte), or from 0.1 to 65535.65535 (dotted format).
<i>...as-number</i>	(OPTIONAL) Enter up to 16 confederation numbers. The range is from 0 to 65535 (2 byte), from 1 to 4294967295 (4 byte), or from 0.1 to 65535.65535 (dotted format).

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series. Added support for the 4-byte format.

Usage Information All the routers in the Confederation must be 4 byte or 2 byte identified routers. You cannot mix them.

The autonomous systems configured in this command are visible to the EBGP neighbors. Each autonomous system is fully meshed and contains a few connections to other autonomous systems.

After specifying autonomous systems numbers for the BGP confederation, recycle the peers to update their configuration.

Related Commands

- [bgp confederation identifier](#) — configure a confederation ID.
- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

bgp connection-retry-timer

Configures the BGP connection retry timer.

Syntax	<code>bgp connection-retry-timer retry-timer-value</code> To return to the default configuration, enter the <code>no connection-retry-timer retry-timer-value</code> command.
Parameters	<i>retry-timer-value</i> Enter a value that denotes the time interval after which the session retries the connection. The valid range is from 10 to 65535.
Defaults	60 seconds.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.4.(0.0)	Introduced on the S4810.

bgp dampening

Enable BGP route dampening and configure the dampening parameters.

Syntax	<code>bgp dampening [half-life reuse suppress max-suppress-time] [route-map map-name]</code> To disable route dampening, use the <code>no bgp dampening [half-life reuse suppress max-suppress-time] [route-map map-name]</code> command.
Parameters	<i>half-life</i> (OPTIONAL) Enter the number of minutes after which the Penalty is decreased. After the router assigns a Penalty of 1024 to a route, the Penalty is decreased by half after the half-life period expires. The range is from 1 to 45. The default is 15 minutes . <i>reuse</i> (OPTIONAL) Enter a number as the reuse value, which is compared to the flapping route's Penalty value. If the Penalty value is less than the reuse value, the flapping route is once again advertised (or no longer suppressed). The range is from 1 to 20000. The default is 750 . <i>suppress</i> (OPTIONAL) Enter a number as the suppress value, which is compared to the flapping route's Penalty value. If the Penalty value is greater than the suppress value, the flapping route is no longer advertised (that is, it is suppressed). The range is from 1 to 20000. The default is 2000 . <i>max-suppress-time</i> (OPTIONAL) Enter the maximum number of minutes a route can be suppressed. The default is four times the half-life value. The range is from 1 to 255. The default is 60 minutes . <i>route-map map-name</i> (OPTIONAL) Enter the keyword <code>route-map</code> then the name of a configured route map. Only <code>match</code> commands in the configured route map are supported.
Defaults	Disabled.
Command Modes	<ul style="list-style-type: none">ROUTER BGPROUTER BGP-address-family

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

If you enter the `bgp dampening` command, the default values for *half-life*, *reuse*, *suppress*, and *max-suppress-time* are applied. The parameters are position-dependent; therefore, if you configure one parameter, configure the parameters in the order they appear in the CLI.

Route refresh is sent when you enable BGP dampening.

Related Commands

- [show ip bgp dampened-paths](#) — view the BGP paths.

bgp default local-preference

Change the default local preference value for routes exchanged between internal BGP peers.

Syntax

```
bgp default local-preference value
```

To return to the default value, use the `no bgp default local-preference` command.

Parameters

value Enter a number to assign to routes as the degree of preference for those routes. When routes are compared, the higher the degree of preference or local preference value, the more the route is preferred. The range is from 0 to 4294967295. The default is **100**.

Defaults

100

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

All routers apply the `bgp default local-preference` command setting within the AS. To set the local preference for a specific route, use the `set local-preference` command in ROUTE-MAP mode.

Related Commands

- [set local-preference](#) — assign a local preference value for a specific route.

bgp dmzlink-bw

Enables BGP Link Bandwidth.

S5000

Syntax

`bgp dmzlink-bw`

To disable BGP Link Bandwidth, enter the `no bgp dmzlink-bw` command.

Parameters

dmzlink-bw Enter the keyword `dmzlink-bw` to enable BGP Link Bandwidth in BGP multipath.

Defaults

N/A

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.
9.2(1.0)	Introduced on the Z9500.

Usage Information

Configuring or un-configuring the command brings down and brings up the BGP Route Manager, this results in tear down and re-establishment of all active sessions.

Link Bandwidth has to be configured on the router to tell it to associate Link Bandwidth with prefixes (paths) and/or to use Link Bandwidth in BGP Multipath route selection.

This is done under BGP configuration and is supported per address family – for IPv4 and IPv6 address families.

The configuration for a particular address family applies across all VRFs configured.

This command must be performed on the router which is attaching link bandwidth to prefixes (typically a border router) as well as the router which is expected to load share traffic proportional to the bandwidth of the external links.

bgp enforce-first-as

Disable (or enable) enforce-first-as check for updates received from EBGP peers.

Syntax	<code>bgp enforce-first-as</code> To turn off the default, use the <code>no bgp enforce-first-as</code> command.
Defaults	Enabled
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information This command is enabled by default, that is for all updates received from EBGP peers, BGP ensures that the first AS of the first AS segment is always the AS of the peer. If not, the update is dropped and a counter is increments. Use the `show ip bgp neighbors` command to view the “failed enforce-first-as check” counter.

If you disable the `enforce-first-as` command, it can be viewed using the `show ip protocols` command.

In the event of an enforce-first-as check failure, the existing BGP session is flapped.

Related Commands

- [show ip bgp neighbors](#) — view the information the BGP neighbors exchange.
- [show ip protocols](#) — view information on routing protocols.

bgp fast-external-failover

Enable the fast external failover feature, which immediately resets the BGP session if a link to a directly connected external peer fails.

S5000

Syntax	<code>bgp fast-external-failover</code> To disable fast external failover, use the <code>no bgp fast-external-failover</code> command.	
Defaults	Enabled	
Command Modes	ROUTER BGP	
Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	9.0(1.3)	Introduced on the S5000.
Usage Information	The <code>bgp fast-external-failover</code> command appears in the <code>show config</code> command output.	

bgp four-octet-as-support

Enable 4-byte support for the BGP process.

Syntax	<code>bgp four-octet-as-support</code> To disable fast external failover, use the <code>no bgp four-octet-as-support</code> command.	
Defaults	Disabled (supports 2-byte format)	
Command Modes	ROUTER BGP	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.2(1.0)	Introduced on the Z9500.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
Usage Information	Routers supporting 4-byte ASNs advertise that function in the OPEN message. The behavior of a 4-byte router is slightly different depending on whether it is speaking to a 2-byte router or a 4-byte router. When creating Confederations, all the routers in the Confederation must be 4 byte or 2 byte identified routers. You cannot mix them.	

Where the 2-byte format is from 1 to 65535, the 4-byte format is from 1 to 4294967295. Both formats are accepted and the advertisements reflect the entered format.

For more information about using the 2 byte or 4-byte format, refer to the *Dell EMC Networking OS Configuration Guide*.

This command automatically restarts the BGP instance for the configuration to take effect.

bgp graceful-restart

To support graceful restart as a receiver only, enable graceful restart on a BGP neighbor, a BGP node, or designate a local router.

Syntax `bgp graceful-restart [restart-time seconds] [stale-path-time seconds] [role receiver-only]`

To return to the default, use the `no bgp graceful-restart` command.

Parameters

restart-time seconds	Enter the keyword <code>restart-time</code> then the maximum number of seconds to restart and bring-up all the peers. The range is from 1 to 3600 seconds. The default is 120 seconds .
stale-path-time seconds	Enter the keyword <code>stale-path-time</code> then the maximum number of seconds to wait before restarting a peer's stale paths. The default is 360 seconds .
role receiver-only	Enter the keyword <code>role receiver-only</code> to designate the local router to support graceful restart as a receiver only.

Defaults as above

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information This feature is advertised to BGP neighbors through a capability advertisement. In Receiver Only mode, BGP saves the advertised routes of peers that support this capability when they restart.

BGP graceful restart is active only when the neighbor becomes established. Otherwise it is disabled. Graceful-restart applies to all neighbors with established adjacency.

This command automatically restarts the BGP instance for the configuration to take effect.

bgp log-neighbor-changes

Enable logging of BGP neighbor resets.

Syntax	<code>bgp log-neighbor-changes</code> To disable logging, use the <code>no bgp log-neighbor-changes</code> command.
Defaults	Enabled
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information	To view BGP neighbor resets, use the <code>show logging</code> command in EXEC mode. The <code>bgp log-neighbor-changes</code> command appears in the <code>show config</code> command output.
--------------------------	---

Related Commands	show logging — views logging settings and system messages logged to the system.
-------------------------	---

bgp non-deterministic-med

Compare MEDs of paths from different autonomous systems.

Syntax	<code>bgp non-deterministic-med</code> To return to the default, use the <code>no bgp non-deterministic-med</code> command.
Defaults	Disabled (that is, paths/routes for the same destination but from different ASs do not have their MEDs compared).
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

In Non-Deterministic mode, paths are compared in the order in which they arrive. This method can lead to Dell EMC Networking OS choosing different best paths from a set of paths, depending on the order in which they are received from the neighbors because MED may or may not get compared between adjacent paths. In Deterministic mode (`no bgp non-deterministic-med`), Dell EMC Networking OS compares MED between adjacent paths within an AS group because all paths in the AS group are from the same AS.

When you change the path selection from Deterministic to Non-Deterministic, the path selection for the existing paths remains Deterministic until you enter the `clear ip bgp` command to clear existing paths.

bgp outbound-optimization

Enables outbound optimization for IBGP peer-group members.

Syntax `bgp outbound-optimization`
 To disable outbound optimization, enter the `no bgp outbound-optimization` command.

Defaults Enabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.4.(0.0)	Introduced on the S4810.
9.2(1.0)	Introduced on the Z9500.

Usage Information

The updates are sent to all the neighbors in the peer-group and all the neighbors have the same attributes including next-hop.

Enabling or disabling outbound optimization dynamically resets all neighbor sessions.

When you enable outbound optimization, all peers receive the same update packets. Also, the next-hop address, which is chosen as one of the addresses of the neighbor's reachable interface, is the same for all peers.

bgp recursive-bgp-next-hop

Enable next-hop resolution through other routes learned by BGP.

Syntax	<code>bgp recursive-bgp-next-hop</code> To disable next-hop resolution, use the <code>no bgp recursive-bgp-next-hop</code> command.
Defaults	Enabled
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.2.1.0	Introduced.

Usage Information This command is a *knob* to disable BGP next-hop resolution using BGP learned routes. During the next-hop resolution, only the first route that the next-hop resolves through is verified for the route's protocol source and is checked if the route is learned from BGP or not.

The `clear ip bgp` command is required for this command to take effect and to keep the BGP database consistent. Execute the `clear ip bgp` command right after executing this command.

Related Commands

- `clear ip bgp` — clear the ip bgp.

bgp regex-eval-optz-disable

Disables the Regex Performance engine that optimizes complex regular expression with BGP.

Syntax	<code>bgp regex-eval-optz-disable</code> To re-enable optimization engine, use the <code>no bgp regex-eval-optz-disable</code> command.
Defaults	Enabled
Command Modes	ROUTER BGP (conf-router_bgp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced

Usage Information

BGP uses regular expressions (regex) to filter route information. In particular, the use of regular expressions to filter routes based on AS-PATHs and communities is common. In a large-scale configuration, filtering millions of routes based on regular expressions can be quite CPU intensive, as a regular expression evaluation involves generation and evaluation of complex finite state machines.

BGP policies, containing regular expressions to match as-path and communities, tend to use much CPU processing time, which in turn affects the BGP routing convergence. Additionally, the `show bgp` commands, which are filtered through regular expressions, use up CPU cycles particularly with large databases. The Regex Engine Performance Enhancement feature optimizes the CPU usage by caching and reusing regular expression evaluation results. This caching and reuse may be at the expense of RP1 processor memory.

Examples

```
DelleMC(conf-router_bgp)# no bgp regex-eval-optz-disable
DelleMC(conf-router_bgp)# do show ip protocols
Routing Protocol is "ospf 22222"
  Router ID is 2.2.2.2
  Area          Routing for Networks
  51            10.10.10.0/00

Routing Protocol is "bgp 1"
  Cluster Id is set to 10.10.10.0
  Router Id is set to 10.10.10.0
  Fast-external-falover enabled
  Regular expression evaluation optimization enabled
  Capable of ROUTE REFRESH
  For Address Family IPv4 Unicast
    BGP table version is 0, main routing table version 0
    Distance: external 20 internal 200 local 200

DelleMC(conf-router_bgp)#
```

Related Commands

- [show ip protocols](#) — view information on all routing protocols enabled and active on the E-Series.

bgp router-id

Assign a user-given ID to a BGP router.

Syntax	<code>bgp router-id ip-address</code> To delete a user-assigned IP address, use the <code>no bgp router-id</code> command.
Parameters	ip-address Enter an IP address in dotted decimal format to reset only that BGP neighbor.
Defaults	The router ID is the highest IP address of the Loopback interface or, if no Loopback interfaces are configured, the highest IP address of a physical interface on the router.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information	Peering sessions are reset when you change the router ID of a BGP router. This command automatically restarts the BGP instance for the configuration to take effect.
--------------------------	---

bgp soft-reconfig-backup

To avoid the peer from resending messages, use this command *only* when route-refresh is *not* negotiated.

Syntax	<code>bgp soft-reconfig-backup</code> To return to the default setting, use the <code>no bgp soft-reconfig-backup</code> command.
Defaults	Off
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.

Version 9.1(0.0)	Added support for IPv6.
9.2(1.0)	Introduced on the Z9500.
Version 9.0.2.0	Introduced on the S6000.
Version 8.3.19.0	Introduced on the S4820T.
Version 8.3.11.1	Introduced on the Z9000.
Version 8.3.7.0	Introduced on the S4810.
Version 7.8.1.0	Introduced on the S-Series.
Version 7.7.1.0	Introduced on the C-Series.
Version 7.2.1.0	Introduced.

Usage Information

When you enable soft-reconfiguration for a neighbor and you execute the `clear ip bgp soft in` command, the update database stored in the router is replayed and updates are re-evaluated. With this command, the replay and update process is triggered only if route-refresh request is not negotiated with the peer. If the request is indeed negotiated (after executing the `clear ip bgp soft in` command), BGP sends a route-refresh request to the neighbor and receives all of the peer's updates.

Related Commands

[clear ip bgp](#) — activates inbound policies without resetting the BGP TCP session.

capture bgp-pdu max-buffer-size

Set the size of the BGP packet capture buffer. This buffer size pertains to both IPv4 and IPv6 addresses.

Syntax `capture bgp-pdu max-buffer-size 100-102400000`

Parameters `100-102400000` Enter a size for the capture buffer.

Defaults **40960000 bytes.**

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced

Related Commands

[capture bgp-pdu neighbor](#) — enables capture of an IPv4 BGP neighbor packet.

[show capture bgp-pdu neighbor](#) — displays BGP packet capture information for an IPv6 address.

capture bgp-pdu neighbor

Enable capture of an IPv4 BGP neighbor packet.

Syntax	<code>capture bgp-pdu neighbor ipv4-address direction {both rx tx}</code> To disable capture of the IPv4 BGP neighbor packet, use the <code>no capture bgp-pdu neighbor ipv4-address</code> command.
Parameters	<p>ipv4-address Enter the IPv4 address of the target BGP neighbor.</p> <p>direction {both rx tx} Enter the keyword <code>direction</code> and a direction — either <code>rx</code> for inbound, <code>tx</code> for outbound, or <code>both</code>.</p>
Defaults	Not configured.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced.

Related Commands	capture bgp-pdu max-buffer-size — specifies a size for the capture buffer. show capture bgp-pdu neighbor — displays BGP packet capture information.
-------------------------	--

clear ip bgp

Reset BGP sessions. The `soft` parameter (BGP Soft Reconfiguration) clears the policies without resetting the TCP connection.

S5000

Syntax	<code>clear ip bgp [vrf vrf-name] [* <1-4294967295> <0.1-65535.65535> A.B.C.D {soft {in out}} X:X:X:X::X {soft {in out}} dampening flap-statistics ipv4 ipv6 peer-group]</code>
Parameters	<p>vrf vrf-name Enter the keyword <code>vrf</code> and then the name of the VRF to clear all BGP sessions corresponding to that VRF.</p> <p> NOTE: Use this attribute to clear a BGP instance corresponding to either a specific address family in a default VRF or an IPv4 address family in a non-default VRF.</p> <p>* Enter an asterisk (<code>*</code>) to reset all BGP sessions.</p> <p><1-4294967295> Enter <code><1-4294967295></code> to clear peers with the AS number.</p>

<0.1-65535.6553 5>	Enter <0.1-65535.65535> to clear peers with the AS number in dot format.
A.B.C.D	Enter the BGP neighbor address in the A.B.C.D format to clear.
X:X:X:X::X	Enter the BGP neighbor address in the X:X:X:X::X format to clear.
soft	(OPTIONAL) Enter the keyword <code>soft</code> to configure and activate policies without resetting the BGP TCP session, that is, BGP Soft Reconfiguration. i NOTE: If you enter the <code>clear ip bgp ip-address soft</code> command, both inbound and outbound policies are reset.
in	(OPTIONAL) Enter the keyword <code>in</code> to activate only inbound policies.
out	(OPTIONAL) Enter the keyword <code>out</code> to activate only outbound policies. i NOTE: You must execute the <code>clear ip bgp soft out</code> command whenever there is a change in the local policy. If you do not run this command after a local policy change, then these policy changes are not reflected in the responses to the peer's route refresh messages.
dampening	Enter the keyword <code>dampening</code> to clear the flap dampening information.
flap-statistics	Enter the keywords <code>flap-statistics</code> to clear the flap statistics information.
ipv4	Enter the ipv4 address family to clear.
ipv6	Enter the ipv6 address family to clear.
peer-group	Enter the peer-group to clear all members of the peer-group.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
6.5.1.0	Expanded to include the <code>as-number</code> option.

Related Commands

- [bgp recursive-bgp-next-hop](#) — disable next-hop resolution through other routes learned by the BGP.

clear ip bgp dampening

Clear information on route dampening and return the suppressed route to the Active state.

S5000

Syntax

```
clear ip bgp [vrf vrf-name] [ipv4 [multicast | unicast] | ipv6 unicast]
[dampening [ipv4-address mask | ipv6-address mask]]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to clear information on route dampening corresponding to that VRF i NOTE: You can use this attribute on a specific VRF to remove history routes corresponding to that VRF. You can also use this attribute to return the suppressed routes corresponding to a specific VRF to an active state.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to clear the ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to clear the ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to clear the ipv6 unicast routes.
ipv4-address mask	(OPTIONAL) Enter an IPv4 address in dotted decimal format and the prefix mask in slash format (/x) to clear dampening information only that BGP neighbor.
ipv6-address mask	(OPTIONAL) Enter the IPv6 address and the network mask to clear information on IPv6 route dampening.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4 multicast</code> and <code>ipv6 unicast</code> parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

After you enter this command, the software deletes the history routes and returns the suppressed routes to the Active state.

The `clear ip bgp dampening` command does not clear the history paths.

clear ip bgp flap-statistics

Clear BGP flap statistics, which includes number of flaps and the time of the last flap.

S5000

Syntax

```
clear ip bgp [vrf vrf-name] [ipv4 [multicast | unicast] | ipv6 unicast]
[flap-statistics [ipv4-address mask | ipv6-address mask] | filter-list as-
path-name | regexp regular-expression]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to clear BGP flap statistics corresponding to that VRF. i NOTE: You can use this attribute on a specific VRF to remove history routes corresponding to that VRF. You can also use this attribute to return the suppressed routes corresponding to a specific VRF to an active state.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to clear information related only to ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to clear information related only to ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to clear information related only to ipv6 unicast routes.
ipv4-address mask	(OPTIONAL) Enter an IPv4 address in dotted decimal format and the prefix mask in slash format (/x) to reset only that prefix.
ipv6-address mask	(OPTIONAL) Enter the IPv6 address followed by the network mask to reset only that prefix.
filter-list as-path-name	(OPTIONAL) Enter the keywords <code>filter-list</code> then the name of a configured AS-PATH list.
regexp regular-expression	(OPTIONAL) Enter the keyword <code>regexp</code> then regular expressions. Use one or a combination of the following: <ul style="list-style-type: none">• <code>.</code> = (period) any single character (including a white space).• <code>*</code> = (asterisk) the sequences in a pattern (0 or more sequences).• <code>+</code> = (plus) the sequences in a pattern (1 or more sequences).• <code>?</code> = (question mark) sequences in a pattern (either 0 or 1 sequences). i NOTE: Enter an escape sequence (CTRL+v) prior to entering the <code>?</code> regular expression.• <code>[]</code> = (brackets) a range of single-character patterns.• <code>()</code> = (parenthesis) groups a series of pattern elements to a single element.• <code>{ }</code> = (braces) minimum and the maximum match count.• <code>^</code> = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified.• <code>\$</code> = (dollar sign) the end of the output string.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

If you enter the `clear ip bgp flap-statistics` command without any parameters, all statistics are cleared.

Related Commands

- [show debugging](#) — view the enabled debugging operations.
- [show ip bgp flap-statistics](#) — view the BGP flap statistics.
- [undebug all](#) — disable all debugging operations.

clear ip bgp peer-group

Reset a peer-group's BGP sessions.

S5000

Syntax

```
clear ip bgp [vrf vrf-name] peer-group peer-group-name [ipv4 [multicast | unicast] | ipv6 unicast] [soft {in | out}]
```

Parameters

vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> and then the name of the VRF to reset the peer group corresponding to that VRF. i NOTE: You can use this attribute on a specific VRF to remove history routes corresponding to that VRF. You can also use this attribute to return the suppressed routes corresponding to a specific VRF to an active state.
<i>peer-group-name</i>	Enter the peer group name to reset the BGP sessions within that peer group.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to reset ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to reset ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to reset ipv6 unicast routes.

soft	(OPTIONAL) Enter the keyword <code>soft</code> to reset soft configuration.
in	Enter the keyword <code>in</code> to re-configure soft inbound updates.
out	Enter the keyword <code>out</code> to re-configure soft outbound updates.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4</code> multicast and <code>ipv6</code> unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

debug ip bgp

Display all information on BGP, including BGP events, keepalives, notifications, and updates.

S5000

Syntax `debug ip bgp [vrf vrf-name | A.B.C.D | X:X:X:X::X | peer-group peer-group-name] [in | out]`

To disable all BGP debugging, use the `no debug ip bgp` command.

Parameters

vrf vrf-name	Enter the keyword <code>vrf</code> and then the name of the VRF to debug BGP information corresponding to that VRF.  NOTE: Use this attribute to debug BGP protocol operations corresponding to either a default or non-default VRF.
A.B.C.D	Enter the IPv4 address of the neighbor in dotted decimal format.
X:X:X:X::X	(OPTIONAL) Enter an IPv6 address.
peer-group peer-group-name	Enter the keywords <code>peer-group</code> then the name of the peer group to debug.
in	(OPTIONAL) Enter the keyword <code>in</code> to view only information on inbound BGP routes.

out	(OPTIONAL) Enter the keyword <code>out</code> to view only information on outbound BGP routes.
A.B.C.D	Enter the IP address of peer in the A.B.C.D format.
X:X:X:X::X	Enter the IPv6 IP address of peer in the X:X:X:X::X format.
dampening	Enter the keyword <code>dampening</code> to view BGP dampening.
events	Enter the keyword <code>events</code> to view BGP protocol events.
ipv4	Enter the ipv4 IP address to view the IPV4 route information.
ipv6	Enter the ipv6 IP address to view the IPV6 route information.
keepalives	Enter the keyword <code>keepalives</code> to view BGP keepalives.
notifications	Enter the keyword <code>notifications</code> to view BGP notifications.
soft-reconfiguration	Enter the keywords <code>soft-reconfiguration</code> to view only information on inbound BGP soft reconfiguration.
updates	Enter the keyword <code>updates</code> to view BGP updates.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.4.(0.0)	Added support for VRF.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information To view information on both incoming and outgoing routes, do not include the `in` and `out` parameters in the debugging command. The `in` and `out` parameters cancel each other; for example, if you enter the `debug ip bgp in` command and then enter the `debug ip bgp out` command, you do not see information on the incoming routes.

Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

Related Commands

- [debug ip bgp events](#) — view information about BGP events.
- [debug ip bgp keepalives](#) — view information about BGP keepalives.
- [debug ip bgp notifications](#) — view information about BGP notifications.
- [debug ip bgp updates](#) — view information about BGP updates.
- [show debugging](#) — view enabled debugging operations.

debug ip bgp dampening

View information on routes being dampened.

S5000

Syntax `debug ip bgp [vrf vrf-name] [ipv4 {unicast | multicast} | ipv6 unicast] dampening`

To disable debugging, use the `no debug ip bgp dampening` command.

Parameters	vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF to view information on dampened routes corresponding to that VRF.
	ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view dampened-route information related only to ipv4 multicast routes.
	ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view dampened-route information related only to ipv4 unicast routes.
	ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to view dampened-route information related only to ipv6 unicast routes.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP support for the E-Series.

debug ip bgp events

Display information on local BGP state changes and other BGP events.

S5000

Syntax `debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] events [in | out]`

To disable debugging, use the `no debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] events [in | out]` command.

Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to display BGP state changes corresponding to that VRF.
	A.B.C.D	(OPTIONAL) Enter the IPv4 address of the neighbor.
	X:X:X:X::X	(OPTIONAL) Enter an IPv6 address.
	peer-group peer-group-name	(OPTIONAL) Enter the keyword <code>peer-group</code> then the name of the peer group.
	in	(OPTIONAL) Enter the keyword <code>in</code> to view only events on inbound BGP messages.
	out	(OPTIONAL) Enter the keyword <code>out</code> to view only events on outbound BGP messages.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information To remove all configured debug commands for BGP, enter the `no debug ip bgp` command.

debug ip bgp keepalives

Display information about BGP keepalive messages.

S5000

Syntax `debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] keepalives [in | out]`

To disable debugging, use the `no debug ip bgp [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] keepalives [in | out]` command.

Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to display BGP keepalive information corresponding to that VRF.
	A.B.C.D	(OPTIONAL) Enter the IPv4 address of the neighbor.
	X:X:X:X::X	(OPTIONAL) Enter an IPv6 address.
	peer-group peer-group-name	(OPTIONAL) Enter the keyword <code>peer-group</code> then the name of the peer group.
	in	(OPTIONAL) Enter the keyword <code>in</code> to view only inbound keepalive messages.
	out	(OPTIONAL) Enter the keyword <code>out</code> to view only outbound keepalive messages.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4</code> multicast and <code>ipv6</code> unicast parameters.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information To remove all configured debug commands for BGP, enter the `no debug ip bgp` command.

debug ip bgp notifications

Allows you to view information about BGP notifications received from neighbors.

Syntax `debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] notifications [in | out]`

To disable debugging, use the `no debug ip bgp [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] notifications [in | out]` command.

Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to view neighbor BGP notification information corresponding to that VRF.
	A.B.C.D	(OPTIONAL) Enter the IPv4 address of the neighbor.
	X:X:X:X::X	(OPTIONAL) Enter an IPv6 address.
	peer-group peer-group-name	(OPTIONAL) Enter the keyword <code>peer-group</code> then the name of the peer group.
	in	(OPTIONAL) Enter the keyword <code>in</code> to view BGP notifications received from neighbors.
	out	(OPTIONAL) Enter the keyword <code>out</code> to view BGP notifications sent to neighbors

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added ipv6 support.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information To remove all configured debug commands for BGP, enter the `no debug ip bgp` command.

debug ip bgp peer-group updates

View information about BGP peer-group updates.

Syntax `debug ip bgp peer-group peer-group-name updates [in | out]`

To disable debugging, use the `no debug ip bgp peer-group peer-group-name updates [in | out]` command.

Parameters	peer-group peer-group-name	Enter the keywords <code>peer-group</code> followed by the name of the peer-group.
	updates	Enter the keyword <code>updates</code> to view BGP update information.
	in	(OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors.
	out	(OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.

Command Modes EXEC Privilege

Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP on the E-Series.

debug ip bgp soft-reconfiguration

Enable soft-reconfiguration debug.

S5000

Syntax `debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group-name] soft-reconfiguration`

To disable, use the `debug ip bgp [A.B.C.D | X:X:X:X::X | peer-group-name] soft-reconfiguration` command.

Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable soft-reconfiguration debugging on that VRF.
	A.B.C.D	(OPTIONAL) Enter the IPv4 address of the neighbor in dotted decimal format.
	X:X:X:X::X	(OPTIONAL) Enter an IPv6 address.
	peer-group-name	(OPTIONAL) Enter the name of the peer group to disable or enable all routers within the peer group..

Defaults Disabled

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.2.1.0	Introduced.

Usage Information

This command turns on BGP soft-reconfiguration inbound debugging. If no neighbor is specified, debug turns on for all neighbors.

debug ip bgp updates

Allows you to view information about BGP updates.

S5000

Syntax

```
debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] updates [in | out | prefix-list prefix-list-name]
```

To disable debugging, use the `no debug ip bgp [vrf vrf-name] [A.B.C.D | X:X:X:X::X | peer-group peer-group-name] updates [in | out | prefix-list prefix-list-name] command.`

Parameters

vrf <i>vrf-name</i>	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to view BGP updates information corresponding to that VRF.
<i>A.B.C.D</i>	(OPTIONAL) Enter an IPv4 address of the neighbor.
<i>X:X:X:X::X</i>	(OPTIONAL) Enter an IPv6 address.
peer-group <i>peer-group-name</i>	(OPTIONAL) Enter the keyword <code>peer-group</code> followed by the name of the peer group.
in	(OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors.
out	(OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.
prefix-list <i>prefix-list-name</i>	(OPTIONAL) Enter the keyword <code>prefix-list</code> then the name of an established prefix list. If the prefix list is not configured, the default is permit (to allow all routes).
<i>ip-address</i>	(OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.

peer-group-name (OPTIONAL) Enter the name of the peer group to disable or enable all routers within the peer group.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information To remove all configured debug commands for BGP, enter the `no debug ip bgp` command.

default-metric

Allows you to change the metric of redistributed routes to locally originated routes. Use this command with the `redistribute` command.

S5000

Syntax `default-metric number`

To return to the default setting, use the `no default-metric` command.

Parameters **number** Enter a number as the metric to be assigned to routes from other protocols. The range is from 1 to 4294967295.

Defaults 0

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The `default-metric` command in BGP sets the value of the BGP MULTI_EXIT_DISC (MED) attribute for redistributed routes only.

Related Commands

- [bgp always-compare-med](#) — enable comparison of all BGP MED attributes.
- [redistribute](#) — redistribute routes from other routing protocols into BGP.

description

Enter a description of the BGP routing protocol.

Syntax

```
description {description}
```

To remove the description, use the `no description {description}` command.

Parameters

description Enter a description to identify the BGP protocol (80 characters maximum).

Defaults

none

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
pre-7.7.1.0	Introduced.

Related Commands

- [router bgp](#) — enter ROUTER mode on the switch.

deny bandwidth

Enables you to specify link band width extended-community attribute as the matching criteria to deny incoming or outgoing traffic.

Syntax `deny bandwidth`
To disable this setting, enter the `no deny bandwidth` command.

Parameters **bandwidth** Enter the keyword `bandwidth` to specify extended-community attribute as the matching criteria for denying traffic. The range is from 0 to 102400.

Defaults N/A

Command Modes EXTENDED COMMUNITY LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series and Z9500.

Related Commands

- [permit bandwidth](#) – specify link band width extended-community attribute as the matching criteria to permitting incoming or outgoing traffic.

distance bgp

Define an administrative distance for routes.

Syntax `distance bgp external-distance internal-distance local-distance`
To return to default values, use the `no distance bgp` command.

Parameters	<i>external-distance</i>	Enter a number to assign to routes learned from a neighbor external to the AS. The range is from 1 to 255. The default is 20 .
	<i>internal-distance</i>	Enter a number to assign to routes learned from a router within the AS. The range is from 1 to 255. The default is 200 .
	<i>local-distance</i>	Enter a number to assign to routes learned from networks listed in the network command. The range is from 1 to 255. The default is 200 .

- Defaults**
- external-distance = **20**
 - internal-distance = **200**
 - local-distance = **200**

Command Modes ROUTER BGP (conf-router_bgp_af)

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0)	Introduced on the S3048–ON and S4048–ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information

 **CAUTION: Dell EMC Networking recommends that you do not change the administrative distance of internal routes. Changing the administrative distances may cause routing table inconsistencies.**

The higher the administrative distance assigned to a route means that your confidence in that route is low. Routes assigned an administrative distance of 255 are not installed in the routing table. Routes from confederations are treated as internal BGP routes.

maximum-paths

Configure the maximum number of parallel routes (multipath support) BGP supports.

S5000

Syntax `maximum-paths {ebgp | ibgp} number`
 To return to the default values, enter the `no maximum-paths` command.

Parameters	ebgp	Enter the keyword <code>ebgp</code> to enable multipath support for External BGP routes.
	ibgp	Enter the keyword <code>ibgp</code> to enable multipath support for Internal BGP routes.
	number	Enter a number as the maximum number of parallel paths.

Defaults none

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Support from 2 to 64 paths on the S4810. Command syntax changed to <code>max-path</code> (was <code>maximum-paths</code>).
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information If you enable this command, use the `clear ip bgp *` command to recompute the best path.

neighbor activate

This command allows the specified neighbor/peer group to be enabled for the current AFI/SAFI (Address Family Identifier/Subsequent Address Family Identifier).

Syntax `neighbor [ip-address | peer-group-name] activate`
To disable, use the `no neighbor [ip-address | peer-group-name] activate` command.

Parameters

- ip-address** (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** (OPTIONAL) Enter the name of the peer group.
- activate** Enter the keyword `activate` to enable the neighbor/peer group in the new AFI/SAFI.

Defaults Disabled

Command Modes CONFIGURATION-ROUTER-BGP-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

By default, when you create a neighbor/peer group configuration in the Router BGP context, this enables IPv4/Unicast AFI/SAFI. When you use `activate` in the new context, the neighbor/peer group enables for AFI/SAFI.

It is not possible to de-activate a peer from the IPv4 unicast address family.

neighbor add-path

This command allows the specified neighbor/peer group to send/receive multiple path advertisements.

Syntax `neighbor [ip-address | peer-group-name] add-path [send | receive | both] path-count`

Parameters

- ip-address*** (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name*** (OPTIONAL) Enter the name of the peer group.
- send*** Enter the keyword `send` to indicate that the system sends multiple paths to peers.
- receive*** Enter the keyword `receive` to indicate that the system accepts multiple paths from peers.
- both*** Enter the keyword `both` to indicate that the system sends and accepts multiple paths from peers.
- path-count*** Enter the number paths supported. The range is from 2 to 64.

Defaults none

Command Modes CONFIGURATION-ROUTER-BGP-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Related Commands

- [bgp add-path](#) — allow the advertisement of multiple paths for the same address prefix without the new paths implicitly replacing any previous ones.

neighbor advertisement-interval

Set the advertisement interval between BGP neighbors or within a BGP peer group.

Syntax `neighbor {ip-address | peer-group-name} advertisement-interval seconds`
 To return to the default value, use the `no neighbor {ip-address | peer-group-name} advertisement-interval` command.

Parameters

- ip-address** (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to set the advertisement interval for all routers in the peer group.
- seconds** Enter a number as the time interval, in seconds, between BGP advertisements. The range is from 0 to 600 seconds. The default is **5 seconds** for internal BGP peers and **30 seconds** for external BGP peers.

Defaults

- seconds = **5 seconds** (internal peers)
- seconds = **30 seconds** (external peers)

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

neighbor advertisement-start

To send BGP routing updates, set the minimum interval before starting.

Syntax	<code>neighbor {ip-address} advertisement-start seconds</code> To return to the default value, use the <code>no neighbor {ip-address} advertisement-start</code> command.
Parameters	<p>ip-address (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.</p> <p>seconds Enter a number as the time interval, in seconds, before BGP route updates are sent. The range is from 0 to 3600 seconds.</p>
Defaults	none
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

neighbor allowas-in

Set the number of times an AS number can occur in the AS path.

Syntax	<code>neighbor {ip-address peer-group-name} allowas-in number</code>
---------------	--

To return to the default value, use the `no neighbor {ip-address | peer-group-name} allowas-in` command.

Parameters	<i>ip-address</i>	(OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
	<i>peer-group-name</i>	Enter the name of the peer group to set the advertisement interval for all routers in the peer group.
	<i>number</i>	Enter a number of times to allow this neighbor ID to use the AS path. The range is from 1 to 10.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information You cannot set this configuration for a peer that is associated with a peer group. Similarly, you cannot associate a peer to a peer group if that peer is already configured with these settings.

Related Commands

- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

neighbor default-originate

Inject the default route to a BGP peer or neighbor.

Syntax `neighbor {ip-address | peer-group-name} default-originate [route-map map-name]`

To remove a default route, use the `no neighbor {ip-address | peer-group-name} default-originate` command.

Parameters	<i>ip-address</i>	(OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
	<i>peer-group-name</i>	Enter the name of the peer group to set the default route of all routers in that peer group.

route-map map-name (OPTIONAL) Enter the keyword `route-map` then the name of a configured route map.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information If you apply a route map to a BGP peer or neighbor with the `neighbor default-originate` command configured, the software does not apply the set filters in the route map to that BGP peer or neighbor.

When you configure a route-map for a BGP peer or peer group with the `neighbor default-originate` command, the command checks for the existence of the route in BGP RIB.

Route-map configuration on a BGP peer or peer group works only when the LOC-RIB contains at least one route.

When you apply a default route to a BGP peer or peer group using the `neighbor default-originate` command, changes to the configured default route-map are applied to the BGP peer or peer group only after a delay of 15 seconds. As a result, you must wait for a period of 15 seconds before manually resetting BGP using the `clear ip bgp` command.

In case of eBGP, the `neighbor default-originate` command does not support *extended-community* as a non-transitive route-map attribute.

You cannot set this configuration for a peer that is associated with a peer group. Similarly, you cannot associate a peer to a peer group if that peer is already configured with these settings.

In order that settings corresponding to the `neighbor default-originate` command take effect, you must execute the `clear ip bgp` command immediately after you execute the `neighbor default-originate` command.

neighbor description

Assign a character string describing the neighbor or group of neighbors (peer group).

Syntax `neighbor {ip-address | peer-group-name} description text`
To delete a description, use the `no neighbor {ip-address | peer-group-name} description` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group.
- text** Enter a continuous text string up to 80 characters.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

neighbor distribute-list

Distribute BGP information via an established prefix list.

Syntax `neighbor {ip-address | peer-group-name} distribute-list prefix-list-name {in | out}`
To delete a neighbor distribution list, use the `no neighbor {ip-address | peer-group-name} distribute-list prefix-list-name {in | out}` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to apply the distribute list filter to all routers in the peer group.
- prefix-list-name** Enter the name of an established prefix list.

If the prefix list is not configured, the default is **permit** (to allow all routes).

in Enter the keyword `in` to distribute only inbound traffic.
out Enter the keyword `out` to distribute only outbound traffic.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information Other BGP filtering commands include: `neighbor filter-list`, `ip as-path access-list`, and `neighbor route-map`.

Related Commands

- [neighbor route-map](#) — assign a route map to a neighbor or peer group.

neighbor ebgp-multihop

Attempt and accept BGP connections to external peers on networks that are not directly connected.

Syntax `neighbor {ip-address | peer-group-name} ebgp-multihop [ttl]`
To disallow and disconnect connections, use the `no neighbor {ip-address | peer-group-name} ebgp-multihop` command.

Parameters

ip-address Enter the IP address of the neighbor in dotted decimal format.

peer-group-name Enter the name of the peer group.

ttl (OPTIONAL) Enter the number of hops as the Time to Live (ttl) value. The range is from 1 to 255. The default is **255**.

Defaults Disabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To prevent loops, the `neighbor ebgp-multihop` command does not install the default routes of the multihop peer. Networks not directly connected are not considered valid for best-path selection.

neighbor fail-over

Enable or disable fast fail-over for BGP neighbors.

S5000

Syntax

```
neighbor {ipv4-address | peer-group-name} fail-over
```

To disable, use the `no neighbor {ipv4-address | peer-group-name} fail-over` command.

Parameters

- ipv4-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group.

Defaults

Disabled.

Command Modes

ROUTER BGP

Command History

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0(1.3)	Introduced on the S5000.

Usage Information

When you enable fail-over, BGP keeps track of IP or IPv6 ability to reach the peer remote address and the peer local address. Whenever either address becomes unreachable (for example, no active route exists in the routing table for the peer IP or IPv6 destination/local address), BGP brings down the session with the peer.

Related Commands

[show ip bgp neighbors](#) – displays information on the BGP neighbors.

neighbor filter-list

Configure a BGP filter based on the AS-PATH attribute.

Syntax `neighbor {ip-address | peer-group-name} filter-list as-path-name {in | out}`
To delete a BGP filter, use the `no neighbor {ip-address | peer-group-name} filter-list as-path-name {in | out}` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to apply the filter to all routers in the peer group.
- as-path-name** Enter the name of an established AS-PATH access list (up to 140 characters).
If the AS-PATH access list is not configured, the default is **permit** (allow routes).
- in** Enter the keyword `in` to filter inbound BGP routes.
- out** Enter the keyword `out` to filter outbound BGP routes.

Defaults Not configured.

Command Modes

- ROUTER BGP
- ROUTER BGP-address-family

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Introduced on the S-Series. Increased the name string to accept up to 140 characters. Prior to 7.8.1.0, ACL names were up to 16 characters long.
7.7.1.0	Introduced on the C-Series.

Usage Information To enter AS-PATH ACL mode and configure the AS-PATH filters to deny or permit BGP routes based on information in their AS-PATH attribute, use the `ip as-path access-list` command in CONFIGURATION mode.

Related Commands [ip as-path access-list](#) — enter AS-PATH ACL mode and configure the AS-PATH filters.

neighbor graceful-restart

Enable graceful restart on a BGP neighbor.

Syntax `neighbor {ip-address | peer-group-name} graceful-restart [restart-time seconds] [stale-path-time seconds] [role receiver-only]`
To return to the default, enter the `no bgp graceful-restart` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to apply the filter to all routers in the peer group.

restart-time seconds	Enter the keyword <code>restart-time</code> then the maximum number of seconds to restart and bring-up all the peers. The range is from 1 to 3600 seconds. The default is 120 seconds .
stale-path-time seconds	Enter the keyword <code>stale-path-time</code> then the maximum number of seconds to wait before restarting a peer's stale paths. The default is 360 seconds .
role receiver-only	Enter the keyword <code>role receiver-only</code> to designate the local router to support graceful restart as a receiver only.

Defaults as above

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information This feature advertises to BGP neighbors through a capability advertisement. In Receiver Only mode, BGP saves the advertised routes of peers that support this capability when they restart.

neighbor local-as

To accept external routes from neighbors with a local AS number in the AS number path, configure Internal BGP (IBGP) routers.

Syntax `neighbor {ip-address | peer-group-name} local-as as-number [no-prepend]`
 To return to the default value, use the `no neighbor {ip-address | peer-group-name} local-as` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to set the advertisement interval for all routers in the peer group.
- as-number** Enter the AS number to reset all neighbors belonging to that AS. The range is from 0 to 65535 (2 byte), from 1 to 4294967295 (4 byte) or from 0.1 to 65535.65535 (dotted format).
- no prepend** Specifies that local AS values do not prepend to announcements from the neighbor.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

If a local-as is configured, BGP does not allow for the configuration of BGP confederation. Similarly, if BGP confederation is configured, then BGP does not allow the configuration of local-as.

This command automatically restarts the neighbor session for the configuration to take effect.

Related Commands

- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

neighbor maximum-prefix

Control the number of network prefixes received.

Syntax

```
neighbor {ip-address | peer-group-name} maximum-prefix maximum [threshold]
[warning-only]
```

To return to the default values, use the `no neighbor {ip-address | peer-group-name} maximum-prefix maximum` command.

Parameters

ip-address	Enter the IP address of the neighbor in dotted decimal format.
peer-group-name	Enter the name of the peer group.
maximum	Enter a number as the maximum number of prefixes allowed for this BGP router. The range is from 1 to 4294967295.
threshold	(OPTIONAL) Enter a number to be used as a percentage of the maximum value. When the number of prefixes reaches this percentage of the maximum value, the E-Series software sends a message. The range is from 1 to 100 percent. The default is 75 .
warning-only	(OPTIONAL) Enter the keyword <code>warning-only</code> to set the router to send a log message when the maximum value is reached. If this parameter is not set, the router stops peering when the maximum number of prefixes is reached.
	NOTE: When you set this option, the router accepts BGP prefixes only until the maximum configured value. After the maximum number is reached, the router drops any additional prefixes that it receives.

Defaults threshold = **75**

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

If you configure the `neighbor maximum-prefix` command and the neighbor receives more prefixes than the `neighbor maximum-prefix` command configuration allows, the neighbor goes down and the `show ip bgp summary` command displays (prfxd) in the State/PfxRcd column for that neighbor. The neighbor remains down until you enter the `clear ip bgp` command for the neighbor or the peer group to which the neighbor belongs or you enter the `neighbor shutdown` and `neighbor no shutdown` commands.

Related Commands

- [show ip bgp summary](#) — display the current BGP configuration.

neighbor next-hop-self

Allows you to configure the router as the next hop for a BGP neighbor.

Syntax

```
neighbor {ip-address | peer-group-name} next-hop-self [all]
```

To return to the default setting, use the `no neighbor {ip-address | peer-group-name} next-hop-self [all]` command.

Parameters

<i>ip-address</i>	Enter the IP address of the neighbor in dotted decimal format.
<i>peer-group-name</i>	Enter the name of the peer group.
all	Specifies that the route reflector is the next hop for both iBGP and eBGP-learned routes.

Defaults

Disabled.

Command Modes

ROUTER BGP

Command History

Version	Description
9.10(0.0)	Introduced the <code>all</code> keyword on the S4810, S4820, S4048-ON, S3048-ON, S3100 series, S6010-ON, S4040T-ON, S5000, S6000, S6000-ON, S6100-ON, Z9100-ON, and Z9500.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

If you configure the `set next-hop` command in ROUTE-MAP mode, the configuration takes precedence over the `neighbor next-hop-self` command.

If you do not use the `all` keyword, the next hop of only eBGP-learned routes is updated by the route reflector. If you use the `all` keyword, the next hop of both eBGP- and iBGP-learned routes are updated by the route reflector.

neighbor password

Enable message digest 5 (MD5) authentication on the TCP connection between two neighbors.

Syntax `neighbor {ip-address | peer-group-name} password [encryption-type] password`
 To delete a password, use the `no neighbor {ip-address | peer-group-name} password` command.

Parameters

ip-address	Enter the IP address of the router to be included in the peer group.
peer-group-name	Enter the name of a configured peer group.
encryption-type	(OPTIONAL) Enter 7 as the encryption type for the password entered. 7 means that the password is encrypted and hidden.
password	Enter a text string up to 80 characters long. The first character of the password must be a letter. You cannot use spaces in the password.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

This command automatically restarts the neighbor session for the configuration to take effect.

Configure the same password on both BGP peers or a connection does not occur. When you configure MD5 authentication between two BGP peers, each segment of the TCP connection between them is verified and the MD5 digest is checked on every segment sent on the TCP connection.

Configuring a password for a neighbor causes an existing session to be torn down and a new one established.

If you specify a BGP peer group by using the `peer-group-name` parameter, all the members of the peer group inherit the characteristic configured with this command.

If you configure a password on one neighbor, but you have not configured a password for the neighboring router, the following message appears on the console while the routers attempt to establish a BGP session between them:

```
%RPM0-P:RP1 %KERN-6-INT: No BGP MD5 from [peer's IP address]
:179 to [local router's IP address]:65524
```

Also, if you configure different passwords on the two routers, the following message appears on the console:

```
%RPM0-P:RP1 %KERN-6-INT: BGP MD5 password mismatch from
[peer's IP address] : 11502 to [local router's IP address] :179
```

neighbor peer-group (assigning peers)

Allows you to assign one peer to an existing peer group.

Syntax

```
neighbor {ip-address | peer-group peer-group-name} dmzlink-bw
```

To delete a peer from a peer group, use the `no neighbor {ip-address | peer-group peer-group-name}` command.

To disable `dmzlink-dw` for the peer group, use the `no neighbor ip-address dmzlink-dw` command.

Parameters

ip-address	Enter the IP address of the router to be included in the peer group.
peer-group-name	Enter the name of a configured peer group.
dmzlink-bw	Enter the keyword <code>dmzlink-bw</code> to attach a link bandwidth to received routes.  NOTE: If <code>dmzlink-bw</code> is configured for a peer, in order for the BGP peer to advertise the prefixes with <code>dmzlink-bw</code> attached to it, you must reset the the peer or peer-group using the <code>clear ip bgp session</code> command.

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the dmzlink-bw parameter.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

You can assign up to 256 peers to one peer group.

When you add a peer to a peer group, it inherits all the peer group's configured parameters. A peer cannot become part of a peer group if any of the following commands are configured on the peer:

- [neighbor advertisement-interval](#)
- [neighbor distribute-list](#)
- [neighbor route-map](#)
- [neighbor route-reflector-client](#)

if a neighbor's configuration is more specific than its peer group's configuration, the neighbor may retain its configuration after it is added to the peer group. The neighbor's configuration does not affect outgoing updates.

A peer group must exist (be enabled) before you add a peer to it. If the peer group is disabled (shutdown), the peers within that group are also disabled (shutdown).

In BGP, you cannot associate a peer to a peer-group without configuring the remote-as for Internal BGP (IBGP) or External BGP (EBGP).

This command automatically restarts the neighbor session for the configuration to take effect.

Related Commands

- [clear ip bgp](#) — reset BGP sessions.
- [neighbor peer-group \(creating group\)](#) — create a peer group.
- [show ip bgp peer-group](#) — view BGP peers.
- [show ip bgp neighbors](#) — view BGP neighbors configurations.

neighbor peer-group (creating group)

Allows you to create a peer group and assign it a name.

Syntax `neighbor peer-group-name peer-group`

To delete a peer group, use the `no neighbor peer-group-name peer-group` command.

Parameters `peer-group-name` Enter a text string up to 16 characters long as the name of the peer group.

Defaults Not configured.

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

When you create a peer group, it is disabled (Shut mode).

Related Commands

- [neighbor peer-group \(assigning peers\)](#) — assign routers to a peer group.
- [neighbor remote-as](#) — assign an indirectly connected AS to a neighbor or peer group.
- [neighbor shutdown](#) — disable a peer or peer group.

neighbor peer-group passive

Enable passive peering on a BGP peer group, that is, the peer group does not send an OPEN message, but responds to one.

Syntax

```
neighbor peer-group-name peer-group passive [ sessions ]
```

To delete a passive peer-group, use the `no neighbor peer-group-name peer-group passive` command.

Parameters

peer-group-name Enter a text string up to 16 characters long as the name of the peer group.

Defaults

Not configured.

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced the <code>limit</code> keyword on the S4810.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

After you configure a peer group as passive, assign it a subnet using the `neighbor soft-reconfiguration inbound` command.

For passive eBGP limits, the Remote AS must be different from the AS for this neighbor.

Related Commands

- [neighbor soft-reconfiguration inbound](#) — assign a subnet to a dynamically configured BGP neighbor.
- [neighbor remote-as](#) — assign an indirectly connected AS to a neighbor or peer group.

neighbor remote-as

Create and specify the remote peer to the BGP neighbor.

Syntax

```
neighbor {ip-address | peer-group-name} remote-as number
```

To delete a remote AS entry, use the `no neighbor {ip-address | peer-group-name} remote-as number` command.

Parameters

<i>ip-address</i>	Enter the IP address of the neighbor to enter the remote AS in its routing table.
<i>peer-group-name</i>	Enter the name of the peer group to enter the remote AS into routing tables of all routers within the peer group.
<i>number</i>	Enter a number of the AS. The range is from 0 to 65535 (2 byte) or from 1 to 4294967295 (4 byte).

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series. Added 4-byte support.

Usage Information

To accept 4-byte formats before entering a 4 byte AS Number, configure your system. If the `number` parameter is the same as the AS number used in the `router bgp` command, the remote AS entry in the neighbor is considered an internal BGP peer entry.

This command creates a peer and the newly created peer is disabled (Shutdown).

This command automatically restarts the neighbor session for the configuration to take effect.

Related Commands

- [router bgp](#) — enter ROUTER BGP mode and configures routes in an AS.
- [bgp four-octet-as-support](#) — enable 4-byte support for the BGP process.

neighbor remove-private-as

Remove private AS numbers from the AS-PATH of outgoing updates.

Syntax

```
neighbor {ip-address | peer-group-name} remove-private-as
```

To return to the default, use the `no neighbor {ip-address | peer-group-name} remove-private-as` command.

Parameters

- ip-address*** Enter the IP address of the neighbor to remove the private AS numbers.
- peer-group-name*** Enter the name of the peer group to remove the private AS numbers.

Defaults

Disabled (that is, private AS number are not removed).

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series. Added 4-byte support.

Usage Information

Applies to EBGp neighbors only.

Configure your system to accept 4-byte formats before entering a 4 byte AS Number.

If the AS-PATH contains both public and private AS number or contains AS numbers of an EBGp neighbor, the private AS numbers are not removed.

If a confederation contains private AS numbers in its AS-PATH, the software removes the private AS numbers only if they follow the confederation numbers in the AS path.

Private AS numbers are from 64512 to 65535 (2 byte).

neighbor route-map

Apply an established route map to either incoming or outbound routes of a BGP neighbor or peer group.

Syntax

```
neighbor {ip-address | peer-group-name} route-map map-name {in | out}
```

To remove the route map, use the `no neighbor {ip-address | peer-group-name} route-map map-name {in | out}` command.

Parameters

ip-address	Enter the IP address of the neighbor in dotted decimal format.
peer-group-name	Enter the name of the peer group.
map-name	Enter the name of an established route map. If the Route map is not configured, the default is deny (to drop all routes).
in	Enter the keyword <code>in</code> to filter inbound routes.
out	Enter the keyword <code>out</code> to filter outbound routes.

 **NOTE:** This command sends routes to peers only if an outbound policy is configured and if there is a change in the existing outbound policy.

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

When you apply a route map to outbound routes, only routes that match at least one section of the route map are permitted.

If you identify a peer group by name, the peers in that peer group inherit the characteristics in the Route map used in this command. If you identify a peer by IP address, the Route map overwrites either the inbound or outbound policies on that peer.

neighbor route-reflector-client

Configure the router as a route reflector and the specified neighbors as members of the cluster.

Syntax `neighbor {ip-address | peer-group-name} route-reflector-client`

To remove one or more neighbors from a cluster, use the `no neighbor {ip-address | peer-group-name} route-reflector-client` command. If you delete all members of a cluster, you also delete the route-reflector configuration on the router.

Parameters

- ip-address*** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name*** Enter the name of the peer group.
All routers in the peer group receive routes from a route reflector.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

A route reflector reflects routes to the neighbors assigned to the cluster. Neighbors in the cluster do not need not to be fully meshed. By default, when you use `no route-reflector`, the internal BGP (IBGP) speakers in the network must be fully meshed.

The first time you enter this command, the router configures as a route reflector and the specified BGP neighbors configure as clients in the route-reflector cluster.

When you remove all clients of a route reflector using the `no neighbor route-reflector-client` command, the router no longer functions as a route reflector.

If the clients of a route reflector are fully meshed, you can configure the route reflector to not reflect routes to specified clients by using the `no bgp client-to-client reflection` command.

This command automatically restarts the neighbor session for the configuration to take effect.

Related Commands

- [bgp client-to-client reflection](#) — enable route reflection between the route reflector and the clients.

neighbor send-community

Send a COMMUNITY attribute to a BGP neighbor or peer group. A COMMUNITY attribute indicates that all routes with that attribute belong to the same community grouping.

S5000

Syntax

```
neighbor {ip-address | peer-group-name} send-community [extended | standard]
```

To disable sending a COMMUNITY attribute, use the `no neighbor {ip-address | peer-group-name} send-community` command.

Parameters

ip-address	Enter the IP address of the peer router in dotted decimal format.
peer-group-name	Enter the name of the peer group to send a COMMUNITY attribute to all routers within the peer group.
extended	(OPTIONAL) Enter the keyword <code>extended</code> to send extended community attribute.
standard	(OPTIONAL) Enter the keyword <code>standard</code> to send standard community attribute.

Defaults

Not configured and COMMUNITY attributes are not sent to neighbors.

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
Version 9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To configure a COMMUNITY attribute, use the `set community` command in ROUTE-MAP mode.

In order that settings corresponding to the `neighbor send-community` command take effect, you must execute the `clear ip bgp` command immediately after you execute the `neighbor send-community` command.

If you do not set any of the optional parameters (standard or extended), then both standard as well as extended attributes are sent. If you set either the standard or extended parameter, only the attribute that is specified is sent.

neighbor sender-side-loopdetect

Enables sender-side loop detection for BGP.

Syntax

```
neighbor {ip-address | peer-group-name} sender-side-loopdetect
```

To disable sender-side loop detection, use the `no neighbor {ip-address | peer-group-name} sender-side-loopdetect` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to enable or disable all routers with in the peer group.
All routers in the peer group receive routes from a route reflector.

Defaults

Enabled.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

This command enables sender-side-loopdetect for a specified BGP neighbor. BGP does not advertise a route to a peer if the AS-Path of the route already contains the peer's AS.

NOTE: If you configure a neighbor to accept such routes using the `neighbor allowas-in` command, you must disable sender-side loop detection for that neighbor.

Related Commands

- [bgp client-to-client reflection](#) — enable route reflection between the route reflector and the clients.

neighbor shutdown

Disable a BGP neighbor or peer group.

Syntax

```
neighbor {ip-address | peer-group-name} shutdown
```

To enable a disabled neighbor or peer group, use the `neighbor {ip-address | peer-group-name}no shutdown` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to disable or enable all routers within the peer group.

Defaults

Enabled (that is, BGP neighbors and peer groups are disabled.)

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

Peers that are enabled within a peer group are disabled when their peer group is disabled.

The `neighbor shutdown` command terminates all BGP sessions on the BGP neighbor or BGP peer group. Use this command with caution as it terminates the specified BGP sessions. When a neighbor or peer group is shut down, use the `show ip bgp summary` command to confirm its status.

Related Commands

- [show ip bgp summary](#) — display the current BGP configuration.
- [show ip bgp neighbors](#) — display the current BGP neighbors.

neighbor soft-reconfiguration inbound

Enable soft-reconfiguration for BGP.

Syntax `neighbor {ip-address | peer-group-name} soft-reconfiguration inbound`
To disable, use the `no neighbor {ip-address | peer-group-name} soft-reconfiguration inbound` command.

Parameters

- ip-address*** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name*** Enter the name of the peer group to disable or enable all routers within the peer group.

Defaults Disabled

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information This command enables soft-reconfiguration for the BGP neighbor specified. BGP stores all the updates the neighbor receives but does not reset the peer-session.

You cannot set this configuration for a peer that is associated with a peer group. Similarly, you cannot associate a peer to a peer group if that peer is already configured with these settings.

 **CAUTION:** Inbound update storage is a memory-intensive operation. The entire BGP update database from the neighbor is stored in memory regardless of the inbound policy results applied on the neighbor.

 **NOTE:** This command is supported in BGP Router Configuration mode for IPv4 Unicast address only.

Related Commands

- `show ip bgp neighbors` — display routes received by a neighbor.

neighbor subnet

Enable passive peering so that the members of the peer group are dynamic.

Syntax `neighbor peer-group-name subnet subnet-number mask`
To remove passive peering, use the `no neighbor peer-group-name subnet subnet-number mask` command.

Parameters

subnet-number Enter a subnet number in dotted decimal format (A.B.C.D.) as the allowable range of addresses included in the Peer group.
To allow all addresses, enter 0.0.0.0/0.

mask Enter a prefix mask in / prefix-length format (/x).

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

neighbor timers

Set keepalive and hold time timers for a BGP neighbor or a peer group.

Syntax `neighbor {ip-address | peer-group-name} timers keepalive holdtime`
To return to the default values, use the `no neighbor {ip-address | peer-group-name} timers` command.

Parameters

ip-address Enter the IP address of the peer router in dotted decimal format.

peer-group-name Enter the name of the peer group to set the timers for all routers within the peer group.

keepalive Enter a number for the time interval, in seconds, between keepalive messages sent to the neighbor routers. The range is from 1 to 65535. The default is **60 seconds**.

holdtime Enter a number for the time interval, in seconds, between the last keepalive message and declaring the router dead. The range is from 3 to 65535. The default is **180 seconds**.

Defaults

- keepalive = **60 seconds**
- holdtime = **180 seconds**

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

Timer values configured with the `neighbor timers` command override the timer values configured with any other command.

When two neighbors, configured with different `keepalive` and `holdtime` values, negotiate for new values, the resulting values are as follows:

- the lower of the `holdtime` value is the new `holdtime` value, and
- whichever is the lower value; one-third of the new `holdtime` value, or the configured `keepalive` value, is the new `keepalive` value.

neighbor update-source

Enable the E-Series software to use Loopback interfaces for TCP connections for BGP sessions.

Syntax `neighbor {ip-address | peer-group-name} update-source interface`

To use the closest interface, use the `no neighbor {ip-address | peer-group-name} update-source interface` command.

Parameters	
<i>ip-address</i>	Enter the IP address of the peer router in dotted decimal format.
<i>peer-group-name</i>	Enter the name of the peer group to disable all routers within the peer group.
<i>interface</i>	Enter the keyword <code>loopback</code> then a number of the Loopback interface. The range is from 0 to 16383.

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

Loopback interfaces are up constantly and the BGP session may need one interface constantly up to stabilize the session. The `neighbor update-source` command is not necessary for directly connected internal BGP sessions.

Neighbors are sorted according to the source and destination ip addresses. If an update-source ip address exists, then the source ip address determines the order in which the neighbors are displayed.

neighbor weight

Assign a weight to the neighbor connection, which is used to determine the best path.

Syntax `neighbor {ip-address | peer-group-name} weight weight`
 To remove a weight value, use the `no neighbor {ip-address | peer-group-name} weight` command.

Parameters

- ip-address** Enter the IP address of the peer router in dotted decimal format.
- peer-group-name** Enter the name of the peer group to disable all routers within the peer group.
- weight** Enter a number as the weight. The range is from 0 to 65535. The default is **0**.

Defaults 0

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

In the Dell EMC Networking OS best path selection process, the path with the highest weight value is preferred.

 **NOTE:** In the Dell EMC Networking OS best-path selection process, the path with the highest weight value is preferred.

If you configure the `set weight` command in a route map applied to this neighbor, the weight set in that command overrides the weight set in the `neighbor weight` command.

Related Commands

- [set weight](#) — assign a weight to all paths meeting the route map criteria.

network

Specify the networks for the BGP process and enter them in the BGP routing table.

S5000

Syntax

```
network ip-address mask [route-map map-name]
```

To remove a network, use the `no network ip-address mask [route-map map-name]` command.

Parameters

- ip-address*** Enter an IP address in dotted decimal format of the network.
- mask*** Enter the mask of the IP address in the slash prefix length format (for example, /24).
The mask appears in command outputs in dotted decimal format (A.B.C.D).
- route-map map-name*** (OPTIONAL) Enter the keyword `route-map` then the name of an established route map.
Only the following ROUTE-MAP mode commands are supported:
- [match ip address](#)
 - [set community](#)
 - [set local-preference](#)
 - [set metric](#)
 - [set next-hop](#)
 - [set origin](#)
 - [set weight](#)
- If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

Dell EMC Networking OS software resolves the network address the `network` command configures with the routes in the main routing table to ensure that the networks are reachable using non-BGP routes and non-default routes.

As BGP does not query next-hop information corresponding to locally originated routes, a local route with an unreachable next-hop is chosen as the best route.

When a combination of locally originated and peer originated routes occurs, both these routes will exist in the RTM. However, only the best route is kept active in the RTM and the remaining route is rendered in-active.

It is possible to keep only one locally originated route in the BGP database. Network command has preference over the re-distributed routes. When the locally originated route is no longer present in the database the other route is automatically installed.

In BGP, the next-hop for the route is calculated from the information that is acquired through IGP or static routes.

Related Commands

- [redistribute](#) — redistribute routes into BGP.

network backdoor

Specify this IGP route as the preferred route.

Syntax

```
network ip-address mask backdoor
```

To remove a network, use the `no network ip-address mask backdoor` command.

Parameters

<i>ip-address</i>	Enter an IP address in dotted decimal format of the network.
<i>mask</i>	Enter the mask of the IP address in the slash prefix length format (for example, /24). The mask appears in command outputs in dotted decimal format (A.B.C.D).

Defaults Not configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information Although Dell EMC Networking OS does not generate a route due to the backdoor config, there is an option for injecting/sourcing a local route in the presence of network backdoor config on a learned route.

permit bandwidth

Enables you to specify link band width extended-community attribute as the matching criteria to permit incoming or outgoing traffic.

Syntax `permit bandwidth`

To disable this setting, enter the `no permit bandwidth` command.

Parameters **bandwidth** Enter the keyword `bandwidth` to specify extended-community attribute as the matching criteria for permitting traffic. The range is from 0 to 102400.

Defaults N/A

Command Modes EXTENDED COMMUNITY LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Related Commands

- [deny bandwidth](#) – link band width extended-community attribute as the matching criteria to deny incoming or outgoing traffic.

redistribute

Redistribute routes into BGP.

Syntax

`redistribute {connected | static} [route-map map-name]`

To disable redistribution, use the `no redistribute {connected | static}` command.

Parameters

connected	Enter the keyword <code>connected</code> to redistribute routes from physically connected interfaces.
static	Enter the keyword <code>static</code> to redistribute manually configured routes. These routes are treated as incomplete routes.
route-map map-name	(OPTIONAL) Enter the keyword <code>route-map</code> then the name of an established route map. Only the following ROUTE-MAP mode commands are supported: <ul style="list-style-type: none"> • match ip address • set community • set local-preference • set metric • set next-hop • set origin • set weight If the route map is not configured, the default is deny (to drop all routes).

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced the ability to substitute IGP cost for MED when a peer/peer-group outbound route-map is set as internal .
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

You can use the `redistribute` command to advertise the IGP cost as the MED on redistributed routes. When you set the route-map with metric-type internal and applied outbound to an EBGp peer/peer-group, the advertised routes corresponding to those peer/peer-groups have the IGP cost set as **MED**.

If you do not configure the `default-metric` command, in addition to the `redistribute` command, or there is no route map to set the metric, the metric for redistributed static and connected is "0".

To redistribute the default route (0.0.0.0/0), configure the `neighbor default-originate` command.

As BGP does not query next-hop information corresponding to locally originated routes, a local route with an unreachable next-hop is chosen as the best route.

When a combination of locally originated and peer originated routes occurs, both these routes will exist in the RTM. However, only the best route is kept active in the RTM and the remaining route is rendered in-active.

It is possible to keep only one locally originated route in the BGP database. Network command has preference over the re-distributed routes. When the locally originated route is no longer present in the database the other route is automatically installed.

Related Commands

- [neighbor default-originate](#) — inject the default route.

router bgp

To configure and enable BGP, enter ROUTER BGP mode.

Syntax `router bgp as-number`

To disable BGP, use the `no router bgp as-number` command.

Parameters `as-number` Enter the AS number. The range is from 1 to 65535 (2 byte), from 1 to 4294967295 (4 byte), or from 0.1 to 65535.65535 (dotted format).

Defaults Not enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

At least one interface must be in Layer 3 mode for the `router bgp` command to be accepted. If all interfaces are configured under VRF, at least one interface should be in the default VRF for the `router bgp` command to be accepted. If no interfaces are enabled for Layer 3, an error message appears:

```
% Error: No router id
configured
```

BGP does not allow 23456 (AS-TRANS) as a configured AS number.

Example

```
DellEMC(conf)# router bgp 3
DellEMC(conf-router_bgp)#
```

shutdown all

Disables all the BGP neighbors.

Syntax

```
shutdown all
```

Use the `no shutdown all` command to enable all the configured BGP neighbors.

Command Modes ROUTER BGP

Command History

Version	Description
9.11.0.0	Introduced on the S-Series, Z-Series, MXL, and IOM.

Usage Information

You can use this command to disable all the configured BGP neighbors.

This command is global for all VRFs.

shutdown address-family-ipv4-multicast

Disables all the BGP neighbors corresponding to the multicast IPv4 address families.

Syntax

```
shutdown address-family-ipv4-unicast
```

Use the `no shutdown address-family-ipv4-unicast` command to enable all the configured BGP neighbors corresponding to the multicast IPv4 address families.

Command Modes ROUTER BGP
CONFIGURATION

Command History	Version	Description
	9.11.0.0	Introduced on the S-Series, Z-Series, MXL, and IOM.
Usage Information	You can use this command to disable all the configured BGP neighbors corresponding to the multicast IPv4 address families.	
	This command is global for all VRFs.	

shutdown address-family-ipv4-unicast

Disables all the BGP neighbors corresponding to the unicast IPv4 address families.

Syntax	<code>shutdown address-family-ipv4-unicast</code>
	Use the <code>no shutdown address-family-ipv4-unicast</code> command to enable all the configured BGP neighbors corresponding to the unicast IPv4 address families.

Command Modes	ROUTER BGP CONFIGURATION
----------------------	-----------------------------

Command History	Version	Description
	9.11.0.0	Introduced on the S-Series, Z-Series, MXL, and IOM.

Usage Information	You can use this command to disable all the configured BGP neighbors corresponding to the unicast IPv4 address families.	
	This command is global for all VRFs.	

shutdown address-family-ipv6-unicast

Disables all the BGP neighbors corresponding to the unicast IPv6 address families.

Syntax	<code>shutdown address-family-ipv6-unicast</code>
	Use the <code>no shutdown address-family-ipv6-unicast</code> command to enable all the configured BGP neighbors corresponding to the unicast IPv6 address families.

Command Modes	ROUTER BGP CONFIGURATION
----------------------	-----------------------------

Command History	Version	Description
	9.11.0.0	Introduced on the S-Series, Z-Series, MXL, and IOM.

Usage Information	You can use this command to disable all the configured BGP neighbors corresponding to the unicast IPv6 address families.	
	This command is global for all VRFs.	

set extcommunity bandwidth

Enables you to set extended community bandwidth.

Syntax	<code>set extcommunity bandwidth</code>
	To disable extended community bandwidth, enter the <code>no set extcommunity bandwidth</code> command.

Parameters **bandwidth** Enter the keyword `bandwidth` to enable extended community bandwidth. The range is from 0 to 102400.

Defaults N/A

Command Modes ROUTER MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Usage Information A new policy command is introduced in order to attach the Link Bandwidth extended community only to the prefixes that are received from a neighbor that satisfy the desired conditions. This command is relevant for both inbound as well as outbound policy handling (for received prefixes). Also, there is no change to the set of supported conditions or filters.

During configuration, the bandwidth is specified in Mbps, not in bytes/second. While creating the actual LB extended community, the system will attach the AS number and encode the bandwidth in floating point format.

show capture bgp-pdu neighbor

Display BGP packet capture information for an IPv4 address on the system.

Syntax `show capture bgp-pdu neighbor ipv4-address`

Parameters **ipv4-address** Enter the IPv4 address (in dotted decimal format) of the BGP address to display packet information for that address.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced.

Example

```
DellEMC(conf-router_bgp)# show capture bgp-pdu neighbor 20.20.20.2

Incoming packet capture enabled for BGP neighbor 20.20.20.2
Available buffer size 40958758, 26 packet(s) captured using 680 bytes
PDU[1] : len 101, captured 00:34:51 ago
ffffff fffffff fffffff fffffff 00650100 00000013 00000000
00000000 419ef06c 00000000
00000000 00000000 00000000 00000000 0181a1e4 0181a25c 41af92c0
00000000 00000000 00000000
00000000 00000001 0181a1e4 0181a25c 41af9400 00000000
PDU[2] : len 19, captured 00:34:51 ago
ffffff fffffff fffffff fffffff 00130400
PDU[3] : len 19, captured 00:34:51 ago
ffffff fffffff fffffff fffffff 00130400
[. . .]

Outgoing packet capture enabled for BGP neighbor 20.20.20.2
Available buffer size 40958758, 27 packet(s) captured using 562 bytes
PDU[1] : len 41, captured 00:34:52 ago
ffffff fffffff fffffff fffffff 00290104 000100b4 14141401
0c020a01 04000100 01020080
00000000
PDU[2] : len 19, captured 00:34:51 ago
ffffff fffffff fffffff fffffff 00130400
PDU[3] : len 19, captured 00:34:50 ago
ffffff fffffff fffffff fffffff 00130400
[. . .]
DellEMC#
```

show config

View the current ROUTER BGP configuration.

Syntax show config

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Example

```
DellEMC(conf-router_bgp)# show config
!
router bgp 100
 network 1.1.11.1/32
 network 1.1.12.1/32
 network 1.1.13.1/32
 neighbor 10.1.1.2 remote-as 200
 neighbor 10.1.1.2 no shutdown
DellEMC(conf-router_bgp)#
```

show ip bgp

View the current BGP IPv4 routing table for the system.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 unicast] [network [network-mask] [longer-
prefixes]]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to view ipv4-unicast route information corresponding to that VRF.
ipv4 unicast	(OPTIONAL) Enter the keywords <code>ipv4 unicast</code> to view information only related to ipv4 unicast routes.
network	(OPTIONAL) Enter the network address (in dotted decimal format) of the BGP network to view information only on that network.
network-mask	(OPTIONAL) Enter the network mask (in slash prefix format) of the BGP network address.
longer-prefixes	(OPTIONAL) Enter the keywords <code>longer-prefixes</code> to view all routes with a common prefix.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Added the add-path option to the S4810. Output on the S4810 shows the ADDPATH parameters.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

When you enable the `bgp non-deterministic-med` command, the `show ip bgp` command output for a BGP route does not list the INACTIVE reason.

In BGP, this command displays the exact reason why the route is discarded.

The following describes the `show ip bgp` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

The `show ip bgp` command displays the `dmzlink-dw` details only if `dmzlink-bw` is enabled using the `bgp dmzlink-dw` command.

Example

```
DellEMC# show ip bgp
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, >
best
Path source: I - internal, a - aggregate, c - confed-external, r -
redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf Weight Path
*>  55.0.0.0/24        172.16.0.2
*>  66.0.0.0/24        172.16.0.2                0 200 i
```

All the show and debugs commands display the link band width extended-community prefixed with DMZ-Link-bw along with other extended communities.

```
DellEMC# show ip bgp 3.3.3.0/24
BGP routing table entry for 3.3.3.0/24
Paths: (1 available, table Default-IP-Routing-Table.)
Not advertised to any peer
Received from :
 1.1.1.2 (3.3.3.1)    Best
  AS_PATH :
  Next-Hop : 1.1.1.2, Cost : 0
  Origin IGP, Metric 0, LocalPref 100, Weight 0, internal
  Extended Communities :
    DMZ-Link Bw: 2000 kbytes*
```

**Related
Commands**

- [show ip bgp community](#) — view the BGP communities.
- [neighbor maximum-prefix](#) — control the number of network prefixes received.

show ip bgp paths

View all the BGP path attributes in the BGP database.

Syntax `show ip bgp[vrf vrf-name] paths [regexp regular-expression]`

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` to view all path attributes in the BGP database corresponding to that VRF.
- NOTE:** You can use this attribute to view information on all path attributes in the BGP database that correspond to either a default or a non-default VRF.
- regexp regular-expression** Enter a regular expression then use one or a combination of the following characters to match:
- `.` = (period) any single character (including a white space).
 - `*` = (asterisk) the sequences in a pattern (zero or more sequences).
 - `+` = (plus) the sequences in a pattern (one or more sequences).
 - `?` = (question mark) sequences in a pattern (either zero or one sequences).
- NOTE:** Enter an escape sequence (CTRL+v) prior to entering the `?` regular expression.
- `[]` = (brackets) a range of single-character patterns.
 - `()` = (parenthesis) groups a series of pattern elements to a single element.
 - `{ }` = (braces) minimum and the maximum match count.
 - `^` = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified.
 - `$` = (dollar sign) the end of the output string.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 9.4(0.0)** Added support for VRF for the S4810, S4820T, and S6000.
- Version 9.0.2.0** Introduced on the S6000.
- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.3.11.1** Introduced on the Z9000.

- Version 8.3.7.0** Introduced on the S4810.
- Version 7.8.1.0** Introduced on the S-Series.
- Version 7.7.1.0** Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp path` command shown in the following example.

Field	Description
Total	Displays the total number of BGP path attributes.
Address	Displays the internal address where the path attribute is stored.
Hash	Displays the hash bucket where the path attribute is stored.
Refcount	Displays the number of BGP routes using this path attribute.
Metric	Displays the MED attribute for this path attribute.
Path	Displays the AS path for the route, with the origin code for the route listed last. Numbers listed between braces {} are AS_SET information.

Example

```
Dell#show ip bgp paths ?
community          Display community information
extcommunity       Display extended community information
regex              Display path information based on a regular
expression         expression
|                  Pipe through a command

Dell#show ip bgp paths
Total 2 Paths
Refcount Metric Path
1          0          200 i
1          0          200 i
```

show ip bgp cluster-list

View BGP neighbors in a specific cluster.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]
cluster-list [cluster-id]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` and then the name of the VRF to view cluster information of BGP neighbors corresponding to that VRF.
- ipv4 multicast** (OPTIONAL) Enter the keywords `ipv4` followed by the keyword `multicast` to view information related only to ipv4 multicast routes.
- ipv4 unicast** (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `unicast` to view information related only to ipv4 unicast routes.
- ipv6 unicast** (OPTIONAL) Enter the keyword `ipv6` followed by the keyword `unicast` to view information related only to the ipv6 unicast routes.
- cluster-id** (OPTIONAL) Enter the cluster id in dotted decimal format. The range is 1 — 4294967295.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp cluster-list` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp cluster-list
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.6
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          Next Hop          Metric    LocPrf Weight Path
*>I 55.0.0.0/24     172.16.0.2        0          0 400 500 600 i
*>I 66.0.0.0/24     172.16.0.2        0          0 500 i
*>I 77.0.0.0/24     172.16.0.2        0          0 i

DellEMC# show ip bgp cluster-list 4.4.4.4
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.6
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          Next Hop          Metric    LocPrf Weight Path
*>I 55.0.0.0/24     172.16.0.2        0          0 400 500 600 i
*>I 66.0.0.0/24     172.16.0.2        0          0 500 i
*>I 77.0.0.0/24     172.16.0.2        0          0 i
DellEMC#
```

show ip bgp community

View information on all routes with Community attributes or view specific BGP community groups.

S5000

Syntax `show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast] community [community-number] [local-as] [no-export] [no-advertise]`

Parameters	vrf vrf-name	(OPTIONAL) Enter the keywords <code>vrf</code> and then the name of the VRF to view information either on all routes with community attributes or specific BGP community routes corresponding to that VRF.
	ipv4 unicast	(OPTIONAL) Enter the keywords <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
	ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
	ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
	community-number	Enter the community number in AA:NN format where AA is the AS number (2 bytes) and NN is a value specific to that autonomous system. You can specify up to eight community numbers to view information on those community groups.
	local-AS	Enter the keywords <code>local-AS</code> to view all routes with the COMMUNITY attribute of NO_EXPORT_SUBCONFED. All routes with the NO_EXPORT_SUBCONFED (0xFFFFFFFF03) community attribute must not be advertised to external BGP peers.
	no-advertise	Enter the keywords <code>no-advertise</code> to view all routes containing the well-known community attribute of NO_ADVERTISE. All routes with the NO_ADVERTISE (0xFFFFFFFF02) community attribute must not be advertised to other BGP peers.
	no-export	Enter the keywords <code>no-export</code> to view all routes containing the well-known community attribute of NO_EXPORT. All routes with the NO_EXPORT (0xFFFFFFFF01) community attribute must not be advertised outside a BGP confederation boundary.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To view the total number of COMMUNITY attributes found, use the `show ip bgp summary` command. The text line above the route table states the number of COMMUNITY attributes found.

The `show ip bgp community` command without any parameters lists BGP routes with at least one BGP community attribute and the output is the same as for the `show ip bgp` command output.

The following describes the `show ip bgp community` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp community ?
local-AS          Do not export outside local AS (well-known community)
no-advertise      Do not advertise to any peer (well-known community)
no-export         Do not export to next AS (well-known community)
aa:nn            Community number in aa:nn format
|               Pipe through a command

DellEMC# show ip bgp community
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf Weight Path
*>  55.0.0.0/24       172.16.0.2              0      200 i
*>  66.0.0.0/24       172.16.0.2              0      200 i

DellEMC# show ip bgp community no-advertise
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf Weight Path
*>  66.0.0.0/24       172.16.0.2              0      200 i
DellEMC#
```

show ip bgp community-list

View routes that a specific community list affects.

S5000

Syntax `show ip bgp [vrf vrf-name] [ipv4 {unicast | multicast} | ipv6 unicast] community-list community-list-name [exact-match]`

Parameters	vrf vrf-name	(OPTIONAL) Enter the keywords <code>vrf</code> and then the name of the VRF to view routes affected by a specific community list corresponding to that VRF.
	ipv4 unicast	(OPTIONAL) Enter the keywords <code>ipv4 unicast</code> to view information only related to ipv4 unicast routes.
	ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
	ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
	community-list-name	Enter the name of a configured IP community list (maximum 140 characters).
	exact-match	Enter the keyword for an exact match of the communities.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information The `show ip bgp community-list` command without any parameters lists BGP routes matching the Community List and the output is the same as for the `show ip bgp` command output.

The following describes the `show ip bgp community-list pass` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
DelleMC# conf t
DelleMC(conf)# ip community-list c11
DelleMC(config-community-list)# permit 1000:1
DelleMC(config-community-list)# end
DelleMC# show ip bgp community-list c11
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop           Metric    LocPrf Weight Path
*>  55.0.0.0/24       172.16.0.2         0         0    200 i
DelleMC# show ip bgp 55.0.0.0/24
BGP routing table entry for 55.0.0.0/24
Paths: (1 available, table Default-IP-Routing-Table.)
Not advertised to any peer

Received from :
 172.16.0.2 (172.16.0.2)   Best
  AS_PATH : 200

Next-Hop : 172.16.0.2, Cost : 0
Origin IGP, Metric 4294967295 (Default), LocalPref 100, Weight 0, external

Communities :
 200:1          1000:1          3000:1
DelleMC#
```

show ip bgp dampened-paths

View BGP routes that are dampened (non-active).

S5000

Syntax `show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast] dampened-paths`

Parameters	Description
vrf vrf-name	(OPTIONAL) Enter the keywords <code>vrf</code> and then the name of the VRF to view routes that are affected by a specific community list corresponding to that VRF.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keywords <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To determine a BGP session flap, both a route-down event and a subsequent route-up event corresponding to a single route are considered. As a result, a flap event is penalized only one time during the route-down event. The subsequent route-up event corresponding to the same route is not considered as a flap and is not penalized.

The history paths that the `show ip bgp` command displays contain only the prefix and the next-hop information. The next-hop information shows the ip address of the neighbor. It does not show the actual next-hop details.

The following describes the `show ip bgp damp` command shown in the following example.

Field	Description
Network	Displays the network ID to which the route is dampened.
From	Displays the IP address of the neighbor advertising the dampened route.
Reuse	Displays the hour:minutes:seconds until the dampened route is available.
Path	Lists all the ASs the dampened route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp dampened-paths
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, >
best
Path source: I - internal, a - aggregate, c - confed-external, r -
redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          From          Reuse          Path
d 55.0.0.0/24        172.16.0.2          00:36:23      200
DellEMC#
```

show ip bgp detail

Display BGP internal information for the IPv4 Unicast address family.

Syntax show ip bgp [ipv4 unicast] detail

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced.

Example

```
DelleMC# show ip bgp detail
Detail information for BGP Node
bgpNdP 0x41a17000 : NdTmrP 0x41a17000 : NdKATmrP 0x41a17014 : NdTics 74857 :
NhLocAS 1 : NdState 2 : NdRPMPrim 1 : NdListSoc 13
NdAuto 1 : NdEqCost 1 : NdSync 0 : NdDefOrg 0
NdV6ListSoc 14 NdDefDid 0 : NdConfedId 0 : NdMedConfed 0 : NdMedMissVal -1 :
NdIgrnrllId 0 : NdRRC2C 1 : NdClstId 33686273 : NdPaTblP 0x41a19088
NdASPTblP 0x41a19090 : NdCommTblP 0x41a19098 : NhOptTransTblP 0x41a190a0 :
NdRRClsTblP 0x41a190a8
NdPktPA 0 : NdLocCBP 0x41a6f000 : NdTmpPAP 0x419efc80 : NdTmpASPAP 0x41a25000 :
NdTmpCommP 0x41a25800
NdTmpRRClP 0x41a4b000 : NdTmpOptP 0x41a4b800 : NdTmpNHP : NdOrigPAP 0
NdOrgNHP 0 : NdModPathP 0x419efcc0 : NdModASPAP 0x41a4c000 : NdModCommP 0x41a4c800
NdModOptP 0x41a4d000 : NdModNHP : NdComSortBufP 0x41a19110 : NdComSortHdP
0x41a19d04 : NdUpdAFMsk 0 : AFRstSet 0x41a1a298 : NHopDfrdHdP 0x41a1a3e0 :

NumNhDfrd 0 : CfgHdrAFMsk 1
AFChkNetTmrP 0x41ee705c : AFRtDamp 0 : AlwysCmpMed 0 : LocrHld 10 : LocrRem 10 :
softReconfig 0x41a1a58c
DefMet 0 : AutoSumm 1 : NhopsP 0x41a0d100 : Starts 0 : Stops 0 : Opens 0
Closes 0 : Fails 0 : FataIs 0 : ConnExps 0 : HldExps 0 : KeepExps 0
RxOpens 0 : RxKeeps 0 : RxUpds 0 : RxNotifs 0 : TxUpds 0 : TxNotifs 0
BadEvs 0 : SynFails 0 : RxeCodeP 0x41a1b6b8 : RxHdrCodeP 0x41a1b6d4 : RxOpCodeP
0x41a1b6e4
RxUpdCodeP 0x41a1b704 : TxEcodeP 0x41a1b734 : TxHdrcodeP 0x41a1b750 : TxOpCodeP
0x41a1b760
TxUpdCodeP 0x41a1b780 : TrEvt 0 : LocPref 100 : tmpPathP 0x41a1b7b8 : LogNbrChgs 1
RecursiveNH 1 : PgCfId 0 : KeepAlive 0 : HldTime 0 : DioHdl 0 : AggrValTmrP
0x41ee7024
UpdNetTmrP 0 : RedistTmrP 0x41ee7094 : PeerChgTmrP 0 : CleanRibTmrP 0x41ee7104
PeerUpdTmrP 0x41ee70cc : DfrdNHTmrP 0x41ee7174 : DfrdRtselTmrP 0x41ee713c :
FastExtFallover 1 : FastIntFallover 0 : EnforcelstAS 1
```

```

PeerIdBitsP 0x41967120 : softOutSz 16 : RibUpdCtxCBP 0
UpdPeerCtxCBP 0 : UpdPeerCtxAFI 0 : TcpioCtxCB 0 : RedistBlk 1
NextCBPurg 1101119536 : NumPeerToPurge 0 : PeerIBGPCnt 0 : NonDet 0 : DfrdPathSel 0
BGPPrst 0 : NumGrCfg 1 : DfrdTmestmp 0 : SnmpTrps 0 : IgnrBestPthASP 0
RstOn 1 : RstMod 1 : RstRole 2 : AFFalgs 7 : RstInt 120 : MaxeorExtInt 361
FixedPartCrt 1 : VarParCrt 1
Packet Capture max allowed length 40960000 : current length 0

Peer Grp List
Nbr List
Confed Peer List
Address Family specific Information
AFIndex 0
NdSpFlag 0x41a190b0 : AFRtTP 0x41a0d200 : NdRTMMkrP 0x41a19d28 : NdRTMAFTblVer 0 :
NdRibCtxAddr 1101110688
NdRibCtxAddrLen 255 : NdAFPprefix 0 : NdAfNLRIP 0 : NdAFNLRILen 0 : NdAFWPtRP 0
NdAFWLen 0 : NdAfNH : NdAFRedRtTP 0x41a0d400 : NdRecCtxAdd 1101110868
NdRedCtxAddrLen 255 : NdAfRedMkrP 0x41a19e88 : AFAGgrRtTP 0x41a0d600 : AfAggrCtxAddr
1101111028 : AfAggrCtxAddrLen 255
AfNumAggrPfx 0 : AfNumAggrASSet 0 : AfNumSuppmap 0 : AfNumAggrValidPfx 0 :
AfMPathRtTP 0x41a0d700
MpathCtxAddr 1101111140 : MpathCtxAddrLen 255 : AfEorSet 0x41a19f98 : NumDfrdPfx 0
AfActPeerHd 0x41a1a3a4 : AfExtDist 1101112312 : AfIntDist 200 : AfLocDist 200
AfNumRRc 0 : AfRR 0 : AfNetRtTP 0x41a0d300 : AfNetCtxAddr 1101112392 :
AfNetCtxAddrLen 255
AfNwCtxAddr 1101112443 : AfNwCtxAddrLen 255 : AfNetBKDrRtTP 0x41a0d500 :
AfNetBKDRcnt 0 : AfDampLife 0
AfDampReuse 0 : AfDampSupp 0 : AfDampMaxHld 0 : AfDampCeiling 0 : AfDampRmapP
DelleMC#

```

show ip bgp extcommunity-list

View information on all routes with Extended Community attributes.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]
extcommunity-list [list name]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keywords <code>vrf</code> and then the name of the VRF to view information on all routes with extended community attributes corresponding to that VRF.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keywords <code>ipv4 unicast</code> to view information only related to ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
list name	Enter the extended community list name you wish to view. The range is 140 characters.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To view the total number of COMMUNITY attributes found, use the `show ip bgp summary` command. The text line above the route table states the number of COMMUNITY attributes found.

The `show ip bgp community` command without any parameters lists BGP routes with at least one BGP community attribute and the output is the same as for the `show ip bgp` command output.

Example

```
DellEMC# show run extcommunity-list
!
ip extcommunity-list ecl1
 permit rt 100:4
 permit soo 40:4
DellEMC#show ip bgp extcommunity-list ecl1
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf Weight Path
*>  55.0.0.0/24        172.16.0.2          0           0 200 i
*>  77.0.0.0/24        172.16.0.2          0           0 200 i
DellEMC#show ip bgp extcommunity-list ec
% Error: Extended community list does not exist.
DellEMC#
```

show ip bgp filter-list

View the routes that match the filter lists.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]
filter-list as-path-name
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` and then the name of the VRF to view route information that matches the filter lists corresponding to that VRF.
- ipv4 multicast** (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `multicast` to view information related only to ipv4 multicast routes.
- ipv4 unicast** (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `unicast` to view information related only to ipv4 unicast routes.

- ipv6 unicast** (OPTIONAL) Enter the keyword `ipv6` followed by the keyword `unicast` to view information related only to ipv6 unicast routes.
- as-path-name** Enter an AS-PATH access list name. The range is 140 characters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information The following describes the `show ip bgp filter-list hello` command shown in the following example.

Field	Description
Path source codes	Lists the path sources shown to the right of the last AS number in the Path column: <ul style="list-style-type: none"> • i = internal route entry • a = aggregate route entry • c = external confederation route entry • n = network route entry • r = redistributed route entry
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
DellEMC# show run as-path a1
!
ip as-path access-list a1
permit 500
```

```

DellEMC#
DellEMC# show ip bgp filter-list a1
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf Weight Path
*>  55.0.0.0/24        172.16.0.2
*>  66.0.0.0/24        172.16.0.2
DellEMC#

```

show ip bgp flap-statistics

View flap statistics on BGP routes.

S5000

Syntax

```

show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]
flap-statistics [ip-address [mask]] [filter-list as-path-name] [regex
regular-expression]

```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keywords `vrf` and then the name of the VRF to view flap statistics on BGP routes corresponding to that VRF.
- ipv4 multicast** (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `multicast` to view information related only to ipv4 multicast routes.
- ipv4 unicast** (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `unicast` to view information related only to ipv4 unicast routes.
- ipv6 unicast** (OPTIONAL) Enter the keyword `ipv6` followed by the keyword `unicast` to view information related only to ipv6 unicast routes.
- ip-address** (OPTIONAL) Enter the IP address (in dotted decimal format) of the BGP network to view information only on that network.
- mask** (OPTIONAL) Enter the network mask (in slash prefix (/x) format) of the BGP network address.
- filter-list as-path-name** (OPTIONAL) Enter the keyword `filter-list` then the name of a configured AS-PATH ACL. The range is 140 characters.
- regex regular-expression** Enter a regular expression then use one or a combination of the following characters to match. The range is 256 characters.
 - `.` = (period) any single character (including a white space).
 - `*` = (asterisk) the sequences in a pattern (zero or more sequences).
 - `+` = (plus) the sequences in a pattern (one or more sequences).
 - `?` = (question mark) sequences in a pattern (either zero or one sequences).
 - **NOTE:** Enter an escape sequence (CTRL+v) prior to entering the `?` regular expression.
 - `[]` = (brackets) a range of single-character patterns.
 - `()` = (parenthesis) groups a series of pattern elements to a single element.
 - `{ }` = (braces) minimum and the maximum match count.
 - `^` = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified.
 - `$` = (dollar sign) the end of the output string.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp flap` command shown in the following example.

Field	Description
Network	Displays the network ID to which the route is flapping.
From	Displays the IP address of the neighbor advertising the flapping route.
Flaps	Displays the number of times the route flapped.
Duration	Displays the hours:minutes:seconds since the route first flapped.
Reuse	Displays the hours:minutes:seconds until the flapped route is available.
Path	Lists all the ASs the flapping route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp flap-statistics
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          From            Flaps      Duration      Reuse      Path
h  77.0.0.0/24        172.16.0.2      1    00:00:03      00:00:00
d  55.0.0.0/24        172.16.0.2      3    00:00:25      00:30:44 200 i
*> 66.0.0.0/24        172.16.0.2      1    00:00:23      00:00:00 200 i
*>n 66.66.77.77/32    0.0.0.0          0    32768 i
DellEMC#
```

show ip bgp inconsistent-as

View routes with inconsistent originating autonomous system (AS) numbers; that is, prefixes that are announced from the same neighbor AS but with a different AS-Path.

Syntax `show ip bgp [vrf vrf-name] [ipv4 unicast] inconsistent-as`

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` and then the name of the VRF to view routes corresponding to the VRF that contain inconsistent originating AS numbers.
- ipv4 unicast** (OPTIONAL) Enter the keywords `ipv4 unicast` to view information only related to ipv4 unicast routes.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information The following describes the `show ip bgp inconsistent-as` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp inconsistent-as
BGP table version is 280852, local router ID is 10.1.2.100
Status codes: s suppressed, d damped, h history, * valid, > best
Path source: I - internal, c - confed-external, r - redistributed, n - network
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network Next Hop      Metric LocPrf Weight Path
*   3.0.0.0/8      63.114.8.33          0 18508 209 7018 80 i
*                   63.114.8.34          0 18508 209 7018 80 i
*                   63.114.8.60          0 18508 209 7018 80 i
*>                   63.114.8.33          0 18508 701 80 i
*> 3.18.135.0/24  63.114.8.60          0 18508 209 7018 ?
*                   63.114.8.34          0 18508 209 7018 ?
*                   63.114.8.33          0 18508 701 7018 ?
*                   63.114.8.33          0 18508 209 7018 ?
*> 4.0.0.0/8      63.114.8.60          0 18508 209 1 i
*                   63.114.8.34          0 18508 209 1 i
*                   63.114.8.33          0 18508 701 1 i
*                   63.114.8.33          0 18508 209 1 i
*   6.0.0.0/20    63.114.8.60          0 18508 209 3549 i
*                   63.114.8.34          0 18508 209 3549 i
*>                   63.114.8.33          0 18508 ?
*                   63.114.8.33          0 18508 209 3549 i
*   9.2.0.0/16   63.114.8.60          0 18508 209 701 i
*                   63.114.8.34          0 18508 209 701 i
--More--

DellEMC# show ip bgp vrf testinconsistent-as
BGP table version is 11, local router ID is 66.66.77.77
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

Network          Next Hop      Metric  LocPrf Weight Path
*>n 11.11.11.11/32 0.0.0.0        0         0      32768 i
*>n 22.22.22.22/32 0.0.0.0        0         0      32768 i
I 32.32.32.32/32  60.0.0.2       0         100     0 400 500 i
  I 32.32.33.33/32 60.0.0.2       0         100     0 400 500 i
*>n 33.33.33.33/32 0.0.0.0        0         0      32768 i
*>n 33.33.44.55/32 0.0.0.0        0         0      32768 i
*>n 44.44.44.44/32 0.0.0.0        0         0      32768 i
*>I 55.55.0.0/16   72.1.1.2       0         100     0 i
*>I 55.55.55.55/32 72.1.1.2       0         100     0 i
*>I 55.55.66.66/32 72.1.1.2       0         100     0 i
*>a 66.66.0.0/16   0.0.0.0        0         0      32768 i
*>n 66.66.66.77/32 0.0.0.0        0         0      32768 i
*>n 66.66.77.77/32 0.0.0.0        0         0      32768 i
DellEMC#
```

show ip bgp neighbors

Allows you to view the information BGP neighbors exchange.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]
neighbors [ip-address [advertised-routes | dampened-routes | detail | flap-
statistics | routes | {received-routes [network [network-mask]]} | {denied-
routes [network [network-mask]]}]
```

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` and then the name of the VRF to view information exchanged by BGP neighbors corresponding to that VRF.

i **NOTE:** You can use this attribute to view information exchanged by BGP neighbors that correspond to either a default or a non-default VRF.

ipv4 multicast (OPTIONAL) Enter the keyword `ipv4` followed by the keyword `multicast` to view information related only to ipv4 multicast routes.

ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
ip-address	(OPTIONAL) Enter the IP address of the neighbor to view only BGP information exchanged with that neighbor.
advertised-routes	(OPTIONAL) Enter the keywords <code>advertised-routes</code> to view only the routes the neighbor sent.
dampened-routes	(OPTIONAL) Enter the keywords <code>dampened-routes</code> to view information on dampened routes from the BGP neighbor.
detail	(OPTIONAL) Enter the keyword <code>detail</code> to view neighbor-specific internal information for the IPv4 Unicast address family.
flap-statistics	(OPTIONAL) Enter the keywords <code>flap-statistics</code> to view flap statistics on the neighbor's routes.
routes	(OPTIONAL) Enter the keyword <code>routes</code> to view only the neighbor's feasible routes.
received-routes [network [network-mask]	(OPTIONAL) Enter the keywords <code>received-routes</code> then either the network address (in dotted decimal format) or the network mask (in slash prefix format) to view all information received from neighbors.  NOTE: Configure the <code>neighbor soft-reconfiguration inbound</code> command prior to viewing all the information received from the neighbors.
denied-routes [network [network-mask]	(OPTIONAL) Enter the keywords <code>denied-routes</code> then either the network address (in dotted decimal format) or the network mask (in slash prefix format) to view all information on routes denied via neighbor inbound filters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4 multicast</code> and <code>ipv6 unicast</code> parameters.
9.4.(0.0)	Added support for VRF.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Added the <code>add-path</code> option to the S4810. Output on the S4810 shows the <code>ADDPATH</code> parameters.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

Version	Description
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Added the <code>detail</code> option. Output now displays the default MED value.
7.2.1.0	Added the <code>received</code> and <code>denied route</code> options.
6.3.10	The output is changed to display the total number of advertised prefixes.

Usage Information

After a peer reset, the contents of the notification log messages is displayed in hex values for debugging.

The neighbor information that this command displays does not include counts corresponding to ignored prefixes and updates. However, the martian case is an exception where neighbor information corresponding to ignored updates is displayed.

BGP shows the exact information that is exchanged between the BGP peers. It also indicates whether or not this information is received by the BGP peer.

The following describes the `show ip bgp neighbors` command shown in the following examples.

The Lines Beginning with:	Description
BGP neighbor	Displays the BGP neighbor address and its AS number. The last phrase in the line indicates whether the link between the BGP router and its neighbor is an external or internal one. If they are located in the same AS, the link is internal; otherwise the link is external.
BGP version	Displays the BGP version (always version 4) and the remote router ID.
BGP state	Displays the neighbor's BGP state and the amount of time in hours:minutes:seconds it has been in that state.
Last read	This line displays the following information: <ul style="list-style-type: none"> last read is the time (hours:minutes:seconds) the router read a message from its neighbor hold time is the number of seconds configured between messages from its neighbor keepalive interval is the number of seconds between keepalive messages to help ensure that the TCP session is still alive.
Received messages	This line displays the number of BGP messages received, the number of notifications (error messages), and the number of messages waiting in a queue for processing.
Sent messages	The line displays the number of BGP messages sent, the number of notifications (error messages), and the number of messages waiting in a queue for processing.
Received updates	This line displays the number of BGP updates received and sent.
Soft reconfiguration	This line indicates that soft reconfiguration inbound is configured.
Minimum time	Displays the minimum time, in seconds, between advertisements.
(list of inbound and outbound policies)	Displays the policy commands configured and the names of the Route map, AS-PATH ACL, or Prefix list configured for the policy.
For address family:	Displays the IPv4 Unicast as the address family.
BGP table version	Displays which version of the primary BGP routing table the router and the neighbor are using.
accepted prefixes	Displays the number of network prefixes the router accepts and the amount of memory used to process those prefixes.

The Lines Beginning with:	Description
Prefix advertised	Displays the number of network prefixes advertised, the number rejected, and the number withdrawn from the BGP routing table.
Connections established	Displays the number of TCP connections established and dropped between the two peers to exchange BGP information.
Last reset	Displays the amount of time since the peering session was last reset. Also states if the peer resets the peering session. If the peering session was never reset, the word never is displayed.
Local host:	Displays the peering address of the local router and the TCP port number.
Foreign host:	Displays the peering address of the neighbor and the TCP port number.

Example

```
DelleMC# show ip bgp neighbors 172.16.0.2
BGP neighbor is 172.16.0.2, remote AS 200, external link
  Member of peer-group port0 for session parameters
  BGP remote router ID 172.16.0.2
  BGP state ESTABLISHED, in this state for 00:13:55
  Last read 00:00:03, Last write 00:00:55
  Hold time is 180, keepalive interval is 60 seconds
  Received 50 messages, 0 in queue
    1 opens, 0 notifications, 34 updates
    15 keepalives, 0 route refresh requests
  Sent 18 messages, 0 in queue
    1 opens, 0 notifications, 0 updates
    16 keepalives, 0 route refresh requests

Route refresh request: received 0, sent messages 1
Minimum time between advertisement runs is 30 seconds
Minimum time before advertisements start is 0 seconds

Capabilities received from neighbor for IPv4 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)

Capabilities advertised to neighbor for IPv4 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  ADD_PATH(69)
  CISCO_ROUTE_REFRESH(128)

For address family: IPv4 Unicast
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
InQ : Added 0, Replaced 0, Withdrawn 0
OutQ : Added 0, Withdrawn 0
Allow local AS number 0 times in AS-PATH attribute
Prefixes accepted 2, withdrawn 15 by peer, martian prefixes ignored 0
Prefixes advertised 0, denied 0, withdrawn 0 from peer

Connections established 1; dropped 0
Last reset never
Local host: 172.16.0.1, Local port: 58145
Foreign host: 172.16.0.2, Foreign port: 179

DelleMC#
```

Related Commands

- [show ip bgp](#) — view the current BGP routing table.

show ip bgp next-hop

View all next hops (using learned routes only) with current reachability and flap status. This command only displays one path, even if the next hop is reachable by multiple paths.

S5000

Syntax `show ip bgp [vrf vrf-name] next-hop`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information The following describes the `show ip bgp next-hop` command shown in the following example.

Field	Description
Next-hop	Displays the next-hop IP address.
Via	Displays the IP address and interface used to reach the next hop.
RefCount	Displays the number of BGP routes using this next hop.
Cost	Displays the cost associated with using this next hop.
Flaps	Displays the number of times the next hop has flapped.
Flaps	Displays the number of times the next hop has flapped.

Example

```
DellEMC# show ip bgp next-hop
      Next-hop           Resolved
      172.16.0.2         YES
DellEMC#
```

show ip bgp paths as-path

View all unique AS-PATHs in the BGP database.

Syntax `show ip bgp [vrf vrf-name] paths as-path`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp paths as-path` command shown in the following example.

Field	Description
Address	Displays the internal address where the path attribute is stored.
Hash	Displays the hash bucket where the path attribute is stored.
Refcount	Displays the number of BGP routes using these AS-Paths.
AS-Path	Displays the AS paths for this route, with the origin code for the route listed last. Numbers listed between braces {} are AS_SET information.

Example

```
Dell#show ip bgp paths as-path
Total 13 AS-Paths
Address      Hash  Refcount  AS-Path
0x1ea3c1ec  251    1         42
0x1ea3c25c  251    1         22
0x1ea3c1b4  507    1         13
0x1ea3c304  507    1         33
0x1ea3c10c  763    1         {92 93}
0x1ea3c144  763    1         {102 103}
0x1ea3c17c  763    1         12
0x1ea3c2cc  763    1         32
0x1ea3c09c  764    1         {72 73}
0x1ea3c0d4  764    1         {82 83}
0x1ea3c224  1019   1         43
0x1ea3c294  1019   1         23
0x1ea3c02c  1021   4
Dell#
```

show ip bgp paths community

View all unique COMMUNITY numbers in the BGP database.

S5000

Syntax `show ip bgp [vrf vrf-name] paths community`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information The following describes the `show ip bgp paths community` command shown in the following example.

Field	Description
Address	Displays the internal address where the path attribute is stored.
Hash	Displays the hash bucket where the path attribute is stored.
Refcount	Displays the number of BGP routes using these communities.
Community	Displays the community attributes in this BGP path.

Example

```
DellEMC# show ip bgp paths community
Total 2 communities
Refcount   Community
1          NO-ADVERTISE
1          200:1           1000:1           3000:1
DellEMC#
```

show ip bgp peer-group

Allows you to view information on the BGP peers in a peer group.

S5000

Syntax

```
show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast]  
peer-group [peer-group-name [detail | summary]]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> to view information on BGP peers in a peer group corresponding to that VRF.  NOTE: You can use this attribute to view information on BGP peers in a peer group that correspond to either a default or a non-default VRF.
ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
peer-group-name	(OPTIONAL) Enter the name of a peer group to view information about that peer group only.
detail	(OPTIONAL) Enter the keyword <code>detail</code> to view detailed status information of the peers in that peer group.
summary	(OPTIONAL) Enter the keyword <code>summary</code> to view status information of the peers in that peer group. The output is the same as that found in the <code>show ip bgp summary</code> command.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4 multicast</code> and <code>ipv6 unicast</code> parameters. Introduced on S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Added the <code>add-path</code> option to the S4810. Output on the S4810 shows the <code>ADDPATH</code> parameters.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp peer-group` command shown in the following example.

Line beginning with: Description

Peer-group	Displays the peer group's name.
Administratively shut	Displays the peer group's status if the peer group is not enabled. If you enable the peer group, this line is not displayed.
BGP version	Displays the BGP version supported.
Minimum time	Displays the time interval between BGP advertisements.
For address family	Displays IPv4 Unicast as the address family.
BGP neighbor	Displays the name of the BGP neighbor.
Number of peers	Displays the number of peers currently configured for this peer group.
Peer-group members:	Lists the IP addresses of the peers in the peer group. If the address is outbound optimized, an * is displayed next to the IP address.

Example

```
DellEMC# show ip bgp peer-group
Peer-group port0, remote AS 200
BGP version 4
Minimum time between advertisement runs is 30 seconds
For address family: IPv4 Unicast
BGP neighbor is port0, peer-group external
Update packing has 4_OCTET_AS support enabled

Number of peers in this group 1
Maximum limit on the accepted connections 256

Peer-group members (* - outbound optimized):
172.16.0.2
DellEMC#
```

Related Commands

- [neighbor peer-group \(assigning peers\)](#) — assign a peer to a peer-group.
- [neighbor peer-group \(creating group\)](#) — create a peer group.

show ip bgp regexp

Display the subset of the BGP routing tables matching the regular expressions specified.

S5000

Syntax

```
show ip bgp [vrf vrf-name] regexp regular-expression [character]
```

Parameters

vrf vrf-name Enter the keyword `vrf` and then the name of the VRF to view the subset of BGP routing tables that match the regular expression specified on that VRF.

NOTE: You can use this attribute to view the subset of BGP routing tables that match the regular expression that is specified on either a default or a non-default VRF.

regular-expression
[character]

Enter a regular expression then use one or a combination of the following characters to match:

- . = (period) any single character (including a white space).
- * = (asterisk) the sequences in a pattern (zero or more sequences).
- + = (plus) the sequences in a pattern (one or more sequences).
- ? = (question mark) sequences in a pattern (either zero or one sequences).
-  **NOTE:** Enter an escape sequence (CTRL+v) prior to entering the ? regular expression.
- [] = (brackets) a range of single-character patterns.
- () = (parenthesis) groups a series of pattern elements to a single element.
- { } = (braces) minimum and the maximum match count.
- ^ = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified.
- \$ = (dollar sign) the end of the output string.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

The following describes the `show ip bgp regexp` command shown in the following example.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then non-BGP routes exist in the router's routing table.
Metric	Displays the BGP router's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight

Field	Description
Path	Lists all the AS paths the route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp regexp ^200
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r - redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          Next Hop           Metric      LocPrf Weight Path
*>  55.0.0.0/24      172.16.0.2         0           0 200 i
*>  66.0.0.0/24      172.16.0.2         0           0 200 i
DellEMC#
```

show ip bgp summary

Allows you to view the status of all BGP connections.

S5000

Syntax `show ip bgp [vrf vrf-name] [ipv4 {multicast | unicast} | ipv6 unicast] summary`

Parameters	Parameter	Description
	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to view the status of all BGP connections corresponding to that VRF.
	ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
	ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
	ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

In BGP, route attributes are maintained at different locations. When attributes that correspond to multiple routes change, then attribute counts that the `show ip bgp summary` command displays are calculated as summations of attributes corresponding to all the associated routes. For example, if `cluster_id` is an attribute associated with thousand routes that contain exactly the same set of attributes, then the `cluster_id` count is 1. If these thousand routes are set with different attribute values with the same `cluster_id`, then the `cluster_id` count is 1000, since the same value is stored for thousand different attribute records.

The attribute next-hop is a part of the BGP attribute data structure.

If two peers send the same route that contains similar path attributes, then two entries are maintained in the back-end, as both these entries have different next-hops. If this same route is sent to a different peer, an entry for each peer is created, as the next-hop is different. As a result, the BGP attributes count in the summary output will differ accordingly.

The following describes the `show ip bgp summary` command shown in the following example.

Field	Description
BGP router identifier	Displays the local router ID and the AS number.
BGP table version	Displays the BGP table version and the main routing table version.
network entries	Displays the number of network entries, route paths, and the amount of memory used to process those entries.
paths	Displays the number of paths and the amount of memory used.
denied paths	Displays the number of denied paths and the amount of memory used.
BGP path attribute entries	Displays the number of BGP path attributes and the amount of memory used to process them.
BGP AS-PATH entries	Displays the number of BGP AS_PATH attributes processed and the amount of memory used to process them.
BGP community entries	Displays the number of BGP COMMUNITY attributes processed and the amount of memory used to process them. The <code>show ip bgp community</code> command provides more details on the COMMUNITY attributes.
Dampening enabled	Displayed only when you enable dampening. Displays the number of paths designated as history, dampened, or penalized.
Neighbor	Displays the BGP neighbor address.
AS	Displays the AS number of the neighbor.
MsgRcvd	Displays the number of BGP messages that neighbor received.
MsgSent	Displays the number of BGP messages that neighbor sent.
TblVer	Displays the version of the BGP table that was sent to that neighbor.
InQ	Displays the number of messages from that neighbor waiting to be processed.
OutQ	Displays the number of messages waiting to be sent to that neighbor. If a number appears in parentheses, the number represents the number of messages waiting to be sent to the peer group.

Field	Description								
Up/Down	Displays the amount of time that the neighbor is in the Established stage. If the neighbor has never moved into the Established stage, the word never is displayed. The output format is:								
	<table border="1"> <thead> <tr> <th>Time Established</th> <th>Display Example</th> </tr> </thead> <tbody> <tr> <td>< 1 day</td> <td>00:12:23 (hours:minutes:seconds)</td> </tr> <tr> <td>< 1 week</td> <td>1d21h (DaysHours)</td> </tr> <tr> <td>> 1 week</td> <td>11w2d (WeeksDays)</td> </tr> </tbody> </table>	Time Established	Display Example	< 1 day	00:12:23 (hours:minutes:seconds)	< 1 week	1d21h (DaysHours)	> 1 week	11w2d (WeeksDays)
Time Established	Display Example								
< 1 day	00:12:23 (hours:minutes:seconds)								
< 1 week	1d21h (DaysHours)								
> 1 week	11w2d (WeeksDays)								
State/Pfxrcd	<p>If the neighbor is in Established stage, the number of network prefixes received.</p> <p>If a maximum limit was configured with the <code>neighbor maximum-prefix</code> command, (prfxd) appears in this column.</p> <p>If the neighbor is not in Established stage, the current stage is displayed (Idle, Connect, Active, OpenSent, OpenConfirm). When the peer is transitioning between states and clearing the routes received, the phrase (Purging) may appear in this column.</p> <p>If the neighbor is disabled, the phrase (Admin shut) appears in this column.</p>								

Example

```
DellEMC# show ip bgp summary
BGP router identifier 192.168.11.5, local AS number 100
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
2 network entrie(s) using 152 bytes of memory
2 paths using 208 bytes of memory
BGP-RIB over all using 210 bytes of memory
2 BGP path attribute entrie(s) using 144 bytes of memory
1 BGP AS-PATH entrie(s) using 10 bytes of memory
2 neighbor(s) using 16384 bytes of memory
```

Neighbor	AS	MsgRcvd	MsgSent	TblVer	InQ	OutQ	Up/Down	State/Pfx
172.16.0.2	200	10	8	0	0	0	00:05:34	2
192.168.10.2	100	0	22	0	0	0	00:00:00	(shut)

```
DellEMC#
```

show running-config bgp

To display the current BGP configuration, use this feature.

Syntax `show running-config bgp`

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Example

```
DellEMC# show running-config bgp
!
router bgp 100
 network 1.1.11.1/32
 network 1.1.12.1/32
 network 1.1.13.1/32
 neighbor 10.1.1.2 remote-as 200
 neighbor 10.1.1.2 no shutdown
DellEMC#
```

timers bgp

Adjust the BGP Keep Alive and Hold Time timers.

Syntax `timers bgp keepalive holdtime`

To return to the default, use the `no timers bgp` command.

Parameters

- keepalive*** Enter a number for the time interval, in seconds, between keepalive messages sent to the neighbor routers. The range is from 1 to 65535. The default is **60 seconds**.
- holdtime*** Enter a number for the time interval, in seconds, between the last keepalive message and declaring the router dead. The range is from 3 to 65535. The default is **180 seconds**.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

MBGP Commands

Multiprotocol BGP (MBGP) is an enhanced BGP that enables multicast routing policy throughout the internet and connecting multicast topologies between BGP and autonomous systems (ASs).

Dell EMC Networking OS MBGP is implemented as per IETF RFC 1858.

BGPv4 is supported in the following:

Dell EMC Networking OS Version	Platform Support
7.8.1.0, MBGP for IPv4 Multicast Only	S-Series

address family ipv4 multicast (MBGP)

This command changes the context to subsequent address family identifier (SAFI).

Syntax `address family ipv4 multicast`
 To remove SAFI context, use the `no address family ipv4 multicast` command.

Parameters

- ipv4** Enter the keyword `ipv4` to specify the address family as IPv4.
- multicast** Enter the keyword `multicast` to specify multicast as SAFI.

Defaults **IPv4 Unicast**

Command Modes ROUTER BGP (conf-router_bgp)

Command History

- Version 7.8.1.0** Introduced on the S-Series for MBGP IPv4 Multicast.
- Version 7.7.1.0** Introduced on the C-Series.

Usage Information After you execute this command, all subsequent commands apply to this address family. You can exit from this AFI/SAFI to the IPv4 Unicast (the default) family by entering `exit` and returning to the Router BGP context.

aggregate-address

Summarize a range of prefixes to minimize the number of entries in the routing table.

Syntax	<code>aggregate-address ip-address mask [advertise-map map-name] [as-set] [attribute-map map-name] [summary-only] [suppress-map map-name]</code>	
Parameters	<i>ip-address mask</i>	Enter the IP address and mask of the route to be the aggregate address. Enter the IP address in dotted decimal format (A.B.C.D) and mask in /prefix format (/x).
	<i>advertise-map map-name</i>	(OPTIONAL) Enter the keywords <code>advertise-map</code> followed by the name of a configured route map to set filters for advertising an aggregate route.
	<i>as-set</i>	(OPTIONAL) Enter the keyword <code>as-set</code> to generate path attribute information and include it in the aggregate. AS_SET includes AS_PATH and community information from the routes included in the aggregated route.
	<i>attribute-map map-name</i>	(OPTIONAL) Enter the keywords <code>attribute-map</code> followed by the name of a configured route map to modify attributes of the aggregate, excluding AS_PATH and NEXT_HOP attributes.
	<i>summary-only</i>	(OPTIONAL) Enter the keyword <code>summary-only</code> to advertise only the aggregate address. Specific routes are not advertised.
	<i>suppress-map map-name</i>	(OPTIONAL) Enter the keywords <code>suppress-map</code> followed by the name of a configured route map to identify which more-specific routes in the aggregate are suppressed.
Defaults	Not configured.	
Command Modes	ROUTER BGP Address Family (<code>conf-router_bgp_af</code>)	
Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
Usage Information	At least one of the routes included in the aggregate address must be in the BGP routing table for the configured aggregate to become active. If routes within the aggregate are constantly changing, do not add the <code>as-set</code> parameter to the aggregate as the aggregate flaps to keep track of the changes in the AS_PATH. In route maps used in the <code>suppress-map</code> parameter, routes meeting the <code>deny</code> clause are not suppress; in other words, they are allowed. The opposite is also true; routes meeting the <code>permit</code> clause are suppressed. If the route is injected via the <code>network</code> command, that route still appears in the routing table if the <code>summary-only</code> parameter is configured in the <code>aggregate-address</code> command. The <code>summary-only</code> parameter suppresses all advertisements. If you want to suppress advertisements to only specific neighbors, use the <code>neighbor distribute-list</code> command.	

bgp dampening

Enable MBGP route dampening.

Syntax	<code>bgp dampening [half-life time] [route-map map-name]</code> To disable route dampening, use the <code>no bgp dampening [half-life time] [route-map map-name]</code> command.
---------------	--

Parameters	<i>half-life time</i>	(OPTIONAL) Enter the number of minutes after which the Penalty is decreased. After the router assigns a Penalty of 1024 to a route, the Penalty is decreased by half after the half-life period expires. The range is 1 to 45. The default is 15 minutes .
	<i>route-map map-name</i>	(OPTIONAL) Enter the keyword <code>route-map</code> followed by the name of a configured route map. Only <code>match</code> commands in the configured route map are supported.
Defaults	Disabled.	
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)	
Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP support for the E-Series.

clear ip bgp ipv4 multicast

Reset MBGP sessions.

Syntax	<code>clear ip bgp ipv4 multicast * ip-address [dampening flap-statistics] peer-group</code>	
Parameters	*	Enter an asterisk (*) to reset all BGP sessions.
	<i>ip-address</i>	Enter an IP address in dotted decimal format to clear the prefixes from that neighbor.
	dampening	(OPTIONAL) Enter the keyword <code>dampening</code> to clear route flap dampening information.
	flap-statistics	(OPTIONAL) Enter the keywords <code>flap-statistics</code> to reset the flap statistics on all prefixes from that neighbor.
	peer-group	(OPTIONAL) Enter the keywords <code>peer-group</code> to clear all members of a peer-group.
Command Modes	EXEC Privilege	
Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.

clear ip bgp dampening

Clear information on route dampening.

Syntax	<code>clear ip bgp dampening ipv4 multicast network network-mask</code>	
Parameters	dampening	Enter the keyword <code>dampening</code> to clear route flap dampening information.
	<i>network</i>	(OPTIONAL) Enter the network address in dotted decimal format (A.B.C.D).
	<i>network-mask</i>	(OPTIONAL) Enter the network mask in slash prefix format (/x).
Command Modes	EXEC Privilege	

Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.
	Version 7.6.1.0	Introduced IPv6 MGBP on the E-Series.

clear ip bgp flap-statistics

Clear BGP flap statistics, which includes number of flaps and the time of the last flap.

Syntax	<code>clear ip bgp ipv4 multicast flap-statistics network filter-list list regexp regexp</code>	
Parameters	Network	(OPTIONAL) Enter the network address to clear flap statistics in dotted decimal format (A.B.C.D).
	filter-list as-path-name	(OPTIONAL) Enter the keyword <code>filter-list</code> followed by the name of a configured AS-PATH list (maximum 16 characters).
	regexp regular-expression	(OPTIONAL) Enter the keyword <code>regexp</code> followed by regular expressions. Use one or a combination of the following: <ul style="list-style-type: none"> • <code>.</code> = (period) any single character (including a white space). • <code>*</code> = (asterisk) the sequences in a pattern (0 or more sequences). • <code>+</code> = (plus) the sequences in a pattern (1 or more sequences). • <code>?</code> = (question mark) sequences in a pattern (either 0 or 1 sequences). <p> NOTE: You must enter an escape sequence (CTRL+v) prior to entering the <code>?</code> regular expression.</p> <ul style="list-style-type: none"> • <code>[]</code> = (brackets) a range of single-character patterns. • <code>()</code> = (parenthesis) groups a series of pattern elements to a single element. • <code>{ }</code> = (braces) minimum and the maximum match count. • <code>^</code> = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified. • <code>\$</code> = (dollar sign) the end of the output string.

Command Modes EXEC Privilege

Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP on the E-Series.

debug ip bgp dampening

View information on routes being dampened.

S5000

Syntax	<code>debug ip bgp [vrf vrf-name] [ipv4 {unicast multicast} ipv6 unicast] dampening</code>	
	To disable debugging, use the <code>no debug ip bgp dampening</code> command.	

Parameters	vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> followed by the name of the VRF to view information on dampened routes corresponding to that VRF.
	ipv4 <i>multicast</i>	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view dampened-route information related only to ipv4 multicast routes.
	ipv4 <i>unicast</i>	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to view dampened-route information related only to ipv4 unicast routes.
	ipv6 <i>unicast</i>	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view dampened-route information related only to ipv6 unicast routes.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP support for the E-Series.

clear ip bgp peer-group

Reset a peer-group's BGP sessions.

S5000

Syntax `clear ip bgp [vrf vrf-name] peer-group peer-group-name [ipv4 [multicast | unicast] | ipv6 unicast] [soft {in | out}]`

Parameters	vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> and then the name of the VRF to reset the peer group corresponding to that VRF.
	<i>peer-group-name</i>	Enter the peer group name to reset the BGP sessions within that peer group.

NOTE: You can use this attribute on a specific VRF to remove history routes corresponding to that VRF. You can also use this attribute to return the suppressed routes corresponding to a specific VRF to an active state.

ipv4 multicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to reset ipv4 multicast routes.
ipv4 unicast	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>unicast</code> to reset ipv4 unicast routes.
ipv6 unicast	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to reset ipv6 unicast routes.
soft	(OPTIONAL) Enter the keyword <code>soft</code> to reset soft configuration.
in	Enter the keyword <code>in</code> to re-configure soft inbound updates.
out	Enter the keyword <code>out</code> to re-configure soft outbound updates.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the <code>ipv4 multicast</code> and <code>ipv6 unicast</code> parameters.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

debug ip bgp updates

View information about BGP updates.

Syntax `debug ip bgp updates [in | out]`
 To disable debugging, use the `no debug ip bgp updates [in | out]` command.

Parameters

updates	Enter the keyword <code>updates</code> to view BGP update information.
in	(OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors.
out	(OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.

Defaults Disabled.

Command Modes EXEC Privilege

Command History	Version	Description
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP on the E-Series.

distance bgp

Configure three administrative distances for routes.

Syntax `distance bgp external-distance internal-distance local-distance`
 To return to default values, use the `no distance bgp` command.

Parameters

- external-distance** Enter a number to assign to routes learned from a neighbor external to the AS. The range is from 1 to 255. The default is **20**.
- internal-distance** Enter a number to assign to routes learned from a router within the AS. The range is from 1 to 255. The default is **200**.
- local-distance** Enter a number to assign to routes learned from networks listed in the network command. The range is from 1 to 255. The default is **200**.

Defaults

- external-distance = **20**
- internal-distance = **200**
- local-distance = **200**

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

CAUTION: Dell EMC Networking recommends not changing the administrative distance of internal routes. Changing the administrative distances may cause routing table inconsistencies.

The higher the administrative distance assigned to a route means that your confidence in that route is low. Routes assigned an administrative distance of 255 are not installed in the routing table. Routes from confederations are treated as internal BGP routes.

Related Commands

- [router bgp](#) — enter ROUTER mode on the switch.

neighbor activate

This command allows the specified neighbor/peer group to be enabled for the current AFI/SAFI.

Syntax	<code>neighbor [ip-address peer-group-name] activate</code> To disable, use the <code>no neighbor [ip-address peer-group-name] activate</code> command.								
Parameters	<p>ip-address (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.</p> <p>peer-group-name (OPTIONAL) Enter the name of the peer group.</p> <p>activate Enter the keyword <code>activate</code> to enable the neighbor/peer group in the new AFI/SAFI.</p>								
Defaults	Disabled								
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)								
Command History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>7.8.1.0</td><td>Introduced on the S-Series.</td></tr><tr><td>7.7.1.0</td><td>Introduced on the C-Series.</td></tr><tr><td>7.6.1.0</td><td>Introduced IPv6 MGBP on the E-Series.</td></tr></tbody></table>	Version	Description	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced IPv6 MGBP on the E-Series.
Version	Description								
7.8.1.0	Introduced on the S-Series.								
7.7.1.0	Introduced on the C-Series.								
7.6.1.0	Introduced IPv6 MGBP on the E-Series.								
Usage Information	By default, when you create a neighbor/peer group configuration in the Router BGP context, this enables IPv4/Unicast AFI/SAFI. By using <code>activate</code> in the new context, the neighbor/peer group enables for AFI/SAFI.								
Related Commands	address family ipv4 multicast (MGBP) – changes the context to SAFI.								

neighbor advertisement-interval

Set the advertisement interval between BGP neighbors or within a BGP peer group.

Syntax	<code>neighbor {ip-address peer-group-name} advertisement-interval seconds</code> To return to the default value, use the <code>no neighbor {ip-address peer-group-name} advertisement-interval</code> command.										
Parameters	<p>ip-address (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.</p> <p>peer-group-name Enter the name of the peer group to set the advertisement interval for all routers in the peer group.</p> <p>seconds Enter a number as the time interval, in seconds, between BGP advertisements. The range is 0 to 600 seconds. The default is 5 seconds for internal BGP peers and 30 seconds for external BGP peers.</p>										
Defaults	<ul style="list-style-type: none">seconds = 5 seconds (internal peers)seconds = 30 seconds (external peers)										
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)										
Command History	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.2(1.0)</td><td>Introduced on the Z9500.</td></tr><tr><td>7.8.1.0</td><td>Introduced on the S-Series.</td></tr><tr><td>7.7.1.0</td><td>Introduced on the C-Series.</td></tr><tr><td>7.6.1.0</td><td>Introduced IPv6 MGBP on the E-Series.</td></tr></tbody></table>	Version	Description	9.2(1.0)	Introduced on the Z9500.	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced IPv6 MGBP on the E-Series.
Version	Description										
9.2(1.0)	Introduced on the Z9500.										
7.8.1.0	Introduced on the S-Series.										
7.7.1.0	Introduced on the C-Series.										
7.6.1.0	Introduced IPv6 MGBP on the E-Series.										

neighbor default-originate

Inject the default route to a BGP peer or neighbor.

C-Series, E-Series TeraScale, S-Series

Syntax `neighbor {ip-address | peer-group-name} default-originate [route-map map-name]`

To remove a default route, use the `no neighbor {ip-address | peer-group-name} default-originate` command.

Parameters

- ip-address** (OPTIONAL) Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to set the default route of all routers in that peer group.
- route-map map-name** (OPTIONAL) Enter the keyword `route-map` followed by the name of a configured route map.

Defaults Not configured.

Command Modes ROUTER BGP Address Family (`conf-router_bgp_af`)

Command History

- Version 7.8.1.0** Introduced on the S-Series.
- Version 7.7.1.0** Introduced on the C-Series.
- Version 7.6.1.0** Introduced IPv6 MGBP on the E-Series.

neighbor distribute-list

Distribute BGP information using an established prefix list.

Syntax `neighbor [ip-address | peer-group-name] distribute-list prefix-list-name [in | out]`

To delete a neighbor distribution list, use the `no neighbor [ip-address | peer-group-name] distribute-list prefix-list-name [in | out]` command.

Parameters

- ip-address** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name** Enter the name of the peer group to apply the distribute list filter to all routers in the peer group.
- prefix-list-name** Enter the name of an established prefix list.
If the prefix list is not configured, the default is **permit** (to allow all routes).
- in** Enter the keyword `in` to distribute only inbound traffic.
- out** Enter the keyword `out` to distribute only outbound traffic.

Defaults Not configured.

Command Modes ROUTER BGP Address Family (`conf-router_bgp_af`)

Command History

Version	Description
9.2(1.0)	Introduced on the Z9500.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Version	Description
7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information

Other BGP filtering commands include: `neighbor filter-list`, `ip as-path access-list`, and `neighbor route-map`.

Related Commands

- [ip as-path access-list](#) – configures the IP AS-Path ACL.
- [neighbor filter-list](#) – assigns a AS-PATH list to a neighbor or peer group.
- [neighbor route-map](#) – assigns a route map to a neighbor or peer group.

neighbor filter-list

Configure a BGP filter based on the AS-PATH attribute.

C-Series, E-Series TeraScale, S-Series

Syntax

```
neighbor [ip-address | peer-group-name] filter-list aspath access-list-name
[in | out]
```

To delete a BGP filter, use the `no neighbor [ip-address | peer-group-name] filter-list aspath access-list-name [in | out]` command.

Parameters

- ip-address*** Enter the IP address of the neighbor in dotted decimal format.
- peer-group-name*** Enter the name of the peer group to apply the filter to all routers in the peer group.
- as-path-name*** Enter the name of an established AS-PATH access list (up to 140 characters).
If the AS-PATH access list is not configured, the default is **permit** (allow routes).
- in** Enter the keyword `in` to filter inbound BGP routes.
- out** Enter the keyword `out` to filter outbound BGP routes.

Defaults

Not configured.

Command Modes

ROUTER BGP Address Family (`conf-router_bgp_af`)

Command History

- Version 7.8.1.0** Introduced on the S-Series.
- Version 7.7.1.0** Introduced on the C-Series.
- Version 7.6.1.0** Introduced IPv6 MGBP on the E-Series.

Usage Information

Use the `ip as-path access-list` command in CONFIGURATION mode to enter AS-PATH ACL mode and configure the AS-PATH filters to deny or permit BGP routes based on information in their AS-PATH attribute.

Related Commands

- [ip as-path access-list](#) – enter AS-PATH ACL mode and configure the AS-PATH filters.

neighbor maximum-prefix

Control the number of network prefixes received.

C-Series, E-Series TeraScale, S-Series

Syntax `neighbor {ip-address | peer-group-name} maximum-prefix maximum [threshold] [warning-only]`

To return to the default values, use the `no neighbor {ip-address | peer-group-name} maximum-prefix maximum` command.

- Parameters**
- ip-address** Enter the IP address of the neighbor in dotted decimal format.
 - peer-group-name** Enter the name of the peer group.
 - maximum** Enter a number as the maximum number of prefixes allowed for this BGP router. The range is 1 to 4294967295.
 - threshold** (OPTIONAL) Enter a number to be used as a percentage of the maximum value. When the number of prefixes reaches this percentage of the maximum value, the E-Series software sends a message. The range is 1 to 100 percent. The default is **75**.
 - warning-only** (OPTIONAL) Enter the keyword `warning-only` to set the router to send a log message when the maximum value is reached. If this parameter is not set, the router stops peering when the maximum number of prefixes is reached.

Defaults threshold = 75

Command Modes ROUTER BGP Address Family (conf-router_bgp_af)

- Command History**
- Version 7.8.1.0** Introduced on the S-Series.
 - Version 7.7.1.0** Introduced on the C-Series.
 - Version 7.6.1.0** Introduced IPv6 MGBP on the E-Series.

neighbor next-hop-self

Allows you to configure the router as the next hop for a BGP neighbor.

C-Series, E-Series TeraScale, S-Series

Syntax `neighbor {ip-address | peer-group-name} next-hop-self`

To return to the default setting, use the `no neighbor {ip-address | peer-group-name} next-hop-self` command.

- Parameters**
- ip-address** Enter the IP address of the neighbor in dotted decimal format.
 - peer-group-name** Enter the name of the peer group.

Defaults Disabled.

Command Modes ROUTER BGP Address Family (conf-router_bgp_af)

- Command History**
- Version 7.8.1.0** Introduced on the S-Series.
 - Version 7.7.1.0** Introduced on the C-Series.
 - Version 7.6.1.0** Introduced IPv6 MGBP on the E-Series.

neighbor remove-private-as

Remove private AS numbers from the AS-PATH of outgoing updates.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>neighbor {ip-address peer-group-name} remove-private-as</code> To return to the default, use the <code>no neighbor {ip-address peer-group-name} remove-private-as</code> command.
Parameters	<i>ip-address</i> Enter the IP address of the neighbor to remove the private AS numbers. <i>peer-group-name</i> Enter the name of the peer group to remove the private AS numbers.
Defaults	Disabled (that is, private AS numbers are not removed).
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)
Command History	Version 7.8.1.0 Introduced on the S-Series. Version 7.7.1.0 Introduced on the C-Series. Added 4-byte support. Version 7.6.1.0 Introduced IPv6 MGBP on the E-Series.

neighbor route-map

Apply an established route map to either incoming or outbound routes of a BGP neighbor or peer group.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>neighbor {ip-address peer-group-name} route-map map-name {in out}</code> To remove the route map, use the <code>no neighbor {ip-address peer-group-name} route-map map-name {in out}</code> command.
Parameters	<i>ip-address</i> Enter the IP address of the neighbor in dotted decimal format. <i>peer-group-name</i> Enter the name of the peer group. <i>map-name</i> Enter the name of an established route map. If the Route map is not configured, the default is deny (to drop all routes). in Enter the keyword <code>in</code> to filter inbound routes. out Enter the keyword <code>out</code> to filter outbound routes.
Defaults	Not configured.
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)
Command History	Version 7.8.1.0 Introduced on the S-Series. Version 7.7.1.0 Introduced on the C-Series. Version 7.6.1.0 Introduced IPv6 MGBP on the E-Series.
Usage Information	When you apply a route map to outbound routes, only routes that match at least one section of the route map are permitted.

If you identify a peer group by name, the peers in that peer group inherit the characteristics in the Route map used in this command. If you identify a peer by IP address, the Route map overwrites either the inbound or outbound policies on that peer.

neighbor route-reflector-client

Configure a neighbor as a member of a route reflector cluster.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>neighbor {ip-address peer-group-name} route-reflector-client</code> To indicate that the neighbor is not a route reflector client or to delete a route reflector configuration, use the <code>no neighbor ip-address peer-group-name route-reflector-client</code> command.
Parameters	<i>ip-address</i> Enter the IP address of the neighbor in dotted decimal format. <i>peer-group-name</i> Enter the name of the peer group. All routers in the peer group receive routes from a route reflector.
Defaults	Not configured.
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)
Command History	Version 7.8.1.0 Introduced on the S-Series. Version 7.7.1.0 Introduced on the C-Series. Version 7.6.1.0 Introduced IPv6 MGBP on the E-Series.
Usage Information	The first time you enter this command, it configures the neighbor as a route reflector and members of the route-reflector cluster. If you configure a route reflector, internal BGP (IBGP) speakers do not need to be fully meshed. When you disable all clients of a route reflector, the neighbor is no longer a route reflector.

network

Specify the networks for the BGP process and enter them in the BGP routing table.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>network ip-address mask [route-map map-name]</code> To remove a network, use the <code>no network ip-address mask [route-map map-name]</code> command.
Parameters	<i>ip-address</i> Enter an IP address in dotted decimal format of the network. <i>mask</i> Enter the mask of the IP address in the slash prefix length format (for example, /24). The mask appears in command outputs in dotted decimal format (A.B.C.D). <i>route-map map-name</i> (OPTIONAL) Enter the keyword <code>route-map</code> followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ip address](#)
- [set community](#)
- [set local-preference](#)
- [set metric](#)
- [set next-hop](#)
- [set origin](#)
- [set weight](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGP Address Family (conf-router_bgp_af)

Command History

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information Dell Networking OS software resolves the network address configured by the `network` command with the routes in the main routing table to ensure that the networks are reachable using non-BGP routes and non-default routes.

Related Commands [redistribute](#) – redistributes routes into the BGP.

redistribute

Redistribute routes into BGP.

C-Series, E-Series TeraScale, S-Series

Syntax `redistribute [connected | static] [route-map map-name]`
 To disable redistribution, use the `no redistribution [connected | static] [route-map map-name]` command.

Parameters

connected Enter the keyword `connected` to redistribute routes from physically connected interfaces.

static Enter the keyword `static` to redistribute manually configured routes. These routes are treated as incomplete routes.

route-map map-name (OPTIONAL) Enter the keyword `route-map` followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ip address](#)
- [set community](#)
- [set local-preference](#)
- [set metric](#)
- [set next-hop](#)
- [set origin](#)
- [set weight](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults	Not configured.
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)
Command History	<p>Version 7.8.1.0 Introduced on the S-Series.</p> <p>Version 7.7.1.0 Introduced on the C-Series.</p> <p>Version 7.6.1.0 Introduced IPv6 MGBP on the E-Series.</p>
Usage Information	<p>If you do not configure the <code>default-metric</code> command, in addition to the <code>redistribute</code> command, or there is no route map to set the metric, the metric for redistributed static and connected is "0".</p> <p>To redistribute the default route (0.0.0.0/0), configure the <code>neighbor default-originate</code> command.</p>
Related Commands	neighbor default-originate – injects the default route.

redistribute ospf

Redistribute OSPF routes into BGP.

C-Series, E-Series TeraScale, S-Series

Syntax	<pre>redistribute ospf process-id [[match external {1 2}] [match internal]] [route-map map-name]</pre> <p>To stop redistribution of OSPF routes, use the <code>no redistribute ospf process-id</code> command.</p>	
Parameters	process-id	Enter the number of the OSPF process. The range is 1 to 65535.
	match external {1 2}	(OPTIONAL) Enter the keywords <code>match external</code> to redistribute OSPF external routes. You can specify 1 or 2 to redistribute those routes only.
	match internal	(OPTIONAL) Enter the keywords <code>match internal</code> to redistribute OSPF internal routes only.
	route-map map-name	(OPTIONAL) Enter the keywords <code>route-map</code> followed by the name of a configured route map.
Defaults	Not configured.	
Command Modes	ROUTER BGP Address Family (conf-router_bgp_af)	
Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP on the E-Series.
Usage Information	<p>When you enter the <code>redistribute isis process-id</code> command without any other parameters, Dell Networking OS redistributes all OSPF internal routes, external type 1 routes, and external type 2 routes. This feature is not supported by an RFC.</p> <p>This feature is not supported by an RFC.</p>	

show ip bgp ipv4 multicast

View the current MBGP routing table for the system.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>show ip bgp ipv4 multicast [detail network [network-mask] [length]]</code>	
Parameters	detail	(OPTIONAL) Enter the keyword <code>detail</code> to display BGP internal information for the IPv4 Multicast address family.
	network	(OPTIONAL) Enter the network address (in dotted decimal format) of the BGP network to view information only on that network.
	network-mask	(OPTIONAL) Enter the network mask (in slash prefix format) of the BGP network address.
	longer-prefixes	(OPTIONAL) Enter the keywords <code>longer-prefixes</code> to view all routes with a common prefix.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.
	7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information When you enable the `bgp non-deterministic-med` command, the `show ip bgp` command output for a BGP route does not list the INACTIVE reason.

The following describes the `show ip bgp ipv4 multicast` command shown the Example below.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0.0.0.0 is listed in this column, then local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
Dell#show ip bgp ipv4 multicast
BGP table version is 14, local router ID is 100.10.10.1
Status codes: s suppressed, S stale, d damped, h history, * valid, > best
Path source: I - internal, a - aggregate, c - confed-external, r -
redistributed, n - network
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network        Next Hop        Metric  LocPrf  Weight  Path
*>I 25.1.0.0/16    25.25.25.25     0       100     0      i
*>I 25.2.0.0/16    25.25.25.26     0       100     0      ?
*>I 25.3.0.0/16    211.1.1.165     0       100     0      ?
*>r 144.1.0.0/16   0.0.0.0 0        32768   ?
*>r 144.2.0.0/16   100.10.10.10    0        32768   ?
*>r 144.3.0.0/16   211.1.1.135     0        32768   ?
```

```
*>n 145.1.0.0/16 0.0.0.0 0 32768 i
Dell#
```

Related Commands

[show ip bgp community](#) – views the BGP communities.

show ip bgp cluster-list

View BGP neighbors in a specific cluster.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>show ip bgp ipv4 multicast cluster-list [cluster-id]</code>
Parameters	cluster-id (OPTIONAL) Enter the cluster id in dotted decimal format.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	<p>Version 7.8.1.0 Introduced on the S-Series.</p> <p>Version 7.7.1.0 Introduced on the C-Series.</p> <p>Version 7.6.1.0 Introduced IPv6 MGBP on the E-Series.</p>

show ip bgp community

View information on all routes with Community attributes or view specific BGP community groups.

Syntax	<code>show ip bgp ipv4 multicast community [community-number] [local-as] [no-export] [no-advertise]</code>
Parameters	<p>community-number Enter the community number in AA:NN format where AA is the AS number (2 bytes) and NN is a value specific to that autonomous system.</p> <p>You can specify up to eight community numbers to view information on those community groups.</p> <p>local-AS Enter the keywords <code>local-AS</code> to view all routes with the COMMUNITY attribute of NO_EXPORT_SUBCONFED.</p> <p>All routes with the NO_EXPORT_SUBCONFED (0xFFFFFFFF03) community attribute must not be advertised to external BGP peers.</p> <p>no-advertise Enter the keywords <code>no-advertise</code> to view all routes containing the well-known community attribute of NO_ADVERTISE.</p> <p>All routes with the NO_ADVERTISE (0xFFFFFFFF02) community attribute must not be advertised to other BGP peers.</p> <p>no-export Enter the keywords <code>no-export</code> to view all routes containing the well-known community attribute of NO_EXPORT.</p> <p>All routes with the NO_EXPORT (0xFFFFFFFF01) community attribute must not be advertised outside a BGP confederation boundary.</p>
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege

Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.
	Version 7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information

To view the total number of COMMUNITY attributes found, use the `show ip bgp summary` command. The text line above the route table states the number of COMMUNITY attributes found.

The `show ip bgp community` command without any parameters lists BGP routes with at least one BGP community attribute and the output is the same as for the `show ip bgp` command output.

show ip bgp community-list

View routes that are affected by a specific community list.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>show ip bgp ipv4 multicast community-list <i>community-list-name</i></code>	
Parameters	<i>community-list-name</i>	Enter the name of a configured IP community list (max 16 characters).
Command Modes	<ul style="list-style-type: none"> EXEC EXEC Privilege 	
Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.
	Version 7.6.1.0	Introduced IPv6 MGBP on the E-Series.

show ip bgp dampened-paths

View BGP routes that are dampened (non-active).

S5000

Syntax	<code>show ip bgp [<i>vrf vrf-name</i>] [<i>ipv4 {multicast unicast}</i>] <i>ipv6 unicast</i>] dampened-paths</code>	
Parameters	<i>vrf vrf-name</i>	(OPTIONAL) Enter the keywords <code>vrf</code> and then the name of the VRF to view routes that are affected by a specific community list corresponding to that VRF.
	<i>ipv4 multicast</i>	(OPTIONAL) Enter the keyword <code>ipv4</code> followed by the keyword <code>multicast</code> to view information related only to ipv4 multicast routes.
	<i>ipv4 unicast</i>	(OPTIONAL) Enter the keywords <code>ipv4</code> followed by the keyword <code>unicast</code> to view information related only to ipv4 unicast routes.
	<i>ipv6 unicast</i>	(OPTIONAL) Enter the keyword <code>ipv6</code> followed by the keyword <code>unicast</code> to view information related only to ipv6 unicast routes.
Command Modes	<ul style="list-style-type: none"> EXEC EXEC Privilege 	

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added the ipv4 multicast and ipv6 unicast parameters.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

Usage Information

To determine a BGP session flap, both a route-down event and a subsequent route-up event corresponding to a single route are considered. As a result, a flap event is penalized only one time during the route-down event. The subsequent route-up event corresponding to the same route is not considered as a flap and is not penalized.

The history paths that the `show ip bgp` command displays contain only the prefix and the next-hop information. The next-hop information shows the ip address of the neighbor. It does not show the actual next-hop details.

The following describes the `show ip bgp damp` command shown in the following example.

Field	Description
Network	Displays the network ID to which the route is dampened.
From	Displays the IP address of the neighbor advertising the dampened route.
Reuse	Displays the hour:minutes:seconds until the dampened route is available.
Path	Lists all the ASs the dampened route passed through to reach the destination network.

Example

```
DellEMC# show ip bgp dampened-paths
BGP local RIB : Routes to be Added 0, Replaced 0, Withdrawn 0
BGP local router ID is 192.168.11.5
Status codes: s suppressed, S stale, d dampened, h history, * valid, >
best
Path source: I - internal, a - aggregate, c - confed-external, r -
redistributed
              n - network, D - denied, S - stale
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          From          Reuse          Path
d 55.0.0.0/24        172.16.0.2          00:36:23      200
DellEMC#
```

show ip bgp filter-list

View the routes that match the filter lists.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>show ip bgp ipv4 multicast filter-list <i>as-path-name</i></code>	
Parameters	<i>as-path-name</i>	Enter the name of an AS-PATH.
Command Modes	<ul style="list-style-type: none">• EXEC• EXEC Privilege	
Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.
	Version 7.6.1.0	Introduced IPv6 MGBP on the E-Series.

show ip bgp flap-statistics

View flap statistics on BGP routes.

C-Series, E-Series TeraScale, S-Series

Syntax	<code>show ip bgp ipv4 multicast flap-statistics [<i>ip-address</i> [<i>mask</i>]] [<i>filter-list as-path-name</i>] [<i>regexp regular-expression</i>]</code>	
Parameters	<i>ip-address</i>	(OPTIONAL) Enter the IP address (in dotted decimal format) of the BGP network to view information only on that network.
	<i>mask</i>	(OPTIONAL) Enter the network mask (in slash prefix (/x) format) of the BGP network address.
	<i>filter-list as-path-name</i>	(OPTIONAL) Enter the keyword <code>filter-list</code> followed by the name of a configured AS-PATH ACL.
	<i>regexp regular-expression</i>	Enter a regular expression then use one or a combination of the following characters to match: <ul style="list-style-type: none">• <code>.</code> = (period) any single character (including a white space).• <code>*</code> = (asterisk) the sequences in a pattern (0 or more sequences).• <code>+</code> = (plus) the sequences in a pattern (1 or more sequences).• <code>?</code> = (question mark) sequences in a pattern (either 0 or 1 sequences). <p> NOTE: You must enter an escape sequence (CTRL+v) prior to entering the <code>?</code> regular expression.</p> <ul style="list-style-type: none">• <code>[]</code> = (brackets) a range of single-character patterns.• <code>()</code> = (parenthesis) groups a series of pattern elements to a single element.• <code>{ }</code> = (braces) minimum and the maximum match count.• <code>^</code> = (caret) the beginning of the input string. If you use the caret at the beginning of a sequence or range, it matches on everything BUT the characters specified.• <code>\$</code> = (dollar sign) the end of the output string.
Command Modes	<ul style="list-style-type: none">• EXEC• EXEC Privilege	

Command History	Version 7.8.1.0	Introduced on the S-Series.
	Version 7.7.1.0	Introduced on the C-Series.
	Version 7.6.1.0	Introduced IPv6 MGBP on the E-Series.

show ip bgp inconsistent-as

View routes with inconsistent originating AS numbers; that is, prefixes that are announced from the same neighbor AS but with a different AS-Path.

C-Series, S-Series

Syntax `show ip bgp ipv4 multicast inconsistent-as`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	7.8.1.0	Introduced on the S-Series.
	7.7.1.0	Introduced on the C-Series.

show ip bgp ipv4 multicast neighbors

Allows you to view the information exchanged by BGP neighbors.

C-Series, E-Series TeraScale, S-Series

Syntax `show ip bgp ipv4 multicast neighbors [ip-address [advertised-routes | dampened-routes | detail | flap-statistics | routes]]`

Parameters		
<i>ip-address</i>	(OPTIONAL)	Enter the IP address, in either IPv4 or IPv6 format, of the neighbor to view only BGP information exchanged with that neighbor.
advertised-routes	(OPTIONAL)	Enter the keywords <code>advertised-routes</code> to view only the routes the neighbor sent.
dampened-routes	(OPTIONAL)	Enter the keywords <code>dampened-routes</code> to view information on dampened routes from the BGP neighbor.
detail	(OPTIONAL)	Display detailed neighbor information.
flap-statistics	(OPTIONAL)	Enter the keywords <code>flap-statistics</code> to view flap statistics on the neighbor's routes.
routes	(OPTIONAL)	Enter the keyword <code>routes</code> to view only the neighbor's feasible routes.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History	Version	Description
	7.8.1.0	Introduced on the S-Series.

Version	Description
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information

The following describes the `show ip bgp ipv4 multicast neighbors` command shown in the Example below.

Lines beginning with:	Description
BGP neighbor	Displays the BGP neighbor address and its AS number. The last phrase in the line indicates whether the link between the BGP router and its neighbor is an external or internal one. If they are located in the same AS, then the link is internal; otherwise the link is external.
BGP version	Displays the BGP version (always version 4) and the remote router ID.
BGP state	Displays the neighbor's BGP state and the amount of time in hours:minutes:seconds it has been in that state.
Last read	This line displays the following information: <ul style="list-style-type: none"> • last read is the time (hours:minutes:seconds) the router read a message from its neighbor • hold time is the number of seconds configured between messages from its neighbor • keepalive interval is the number of seconds between keepalive messages to help ensure that the TCP session is still alive.
Received messages	This line displays the number of BGP messages received, the number of notifications (error messages) and the number of messages waiting in a queue for processing.
Sent messages	The line displays the number of BGP messages sent, the number of notifications (error messages) and the number of messages waiting in a queue for processing.
Received updates	This line displays the number of BGP updates received and sent.
Minimum time (list of inbound and outbound policies)	Displays the policy commands configured and the names of the Route map, AS-PATH ACL or Prefix list configured for the policy.
For address family:	Displays IPv4 Unicast as the address family.
BGP table version	Displays the which version of the primary BGP routing table the router and the neighbor are using.
accepted prefixes	Displays the number of network prefixes accepted by the router and the amount of memory used to process those prefixes.
Prefix advertised	Displays the number of network prefixes advertised, the number rejected and the number withdrawn from the BGP routing table.
Connections established	Displays the number of TCP connections established and dropped between the two peers to exchange BGP information.
Last reset	Displays the amount of time since the peering session was last reset. Also states if the peer resets the peering session. If the peering session was never reset, the word never is displayed.
Local host:	Displays the peering address of the local router and the TCP port number.
Foreign host:	Displays the peering address of the neighbor and the TCP port number.

Example

```
Dell#show ip bgp ipv4 multicast neighbors
BGP neighbor is 25.25.25.25, remote AS 6400, internal link
  BGP version 4, remote router ID 25.25.25.25
  BGP state ESTABLISHED, in this state for 00:02:18
  Last read 00:00:16, hold time is 180, keepalive interval is 60 seconds
  Received 1404 messages, 0 in queue
    3 opens, 1 notifications, 1394 updates
    6 keepalives, 0 route refresh requests
  Sent 48 messages, 0 in queue
    3 opens, 2 notifications, 0 updates
    43 keepalives, 0 route refresh requests
  Minimum time between advertisement runs is 5 seconds
  Minimum time before advertisements start is 0 seconds
  Capabilities received from neighbor for IPv4 unicast :
    MULTIPROTO_EXT(1)
    ROUTE_REFRESH(2)
    CISCO_ROUTE_REFRESH(128)
  Capabilities advertised to neighbor for IPv4 Multicast :
    MULTIPROTO_EXT(1)
    ROUTE_REFRESH(2)
    CISCO_ROUTE_REFRESH(128)
  Update source set to Loopback 0
  For address family: IPv4 Multicast
  BGP table version 14, neighbor version 14
  3 accepted prefixes consume 12 bytes
  Prefixes accepted 1 (consume 4 bytes), withdrawn 0 by peer
  Prefixes advertised 0, rejected 0, withdrawn 0 from peer
  Connections established 2; dropped 1
  Last reset 00:03:17, due to user reset

  Notification History
    'Connection Reset' Sent : 1 Recv: 0

Local host: 100.10.10.1, Local port: 179
Foreign host: 25.25.25.25, Foreign port: 2290

BGP neighbor is 211.1.1.129, remote AS 640, external link
  BGP version 4, remote router ID 0.0.0.0
  BGP state ACTIVE, in this state for 00:00:36
  Last read 00:00:41, hold time is 180, keepalive interval is 60 seconds
  Received 28 messages, 0 notifications, 0 in queue
  Sent 6 messages, 3 notifications, 0 in queue
  Received 18 updates, Sent 6 updates
  Route refresh request: received 0, sent 0
  Minimum time between advertisement runs is 30 seconds

  For address family: IPv4 Multicast
  BGP table version 14, neighbor version 0
  0 accepted prefixes consume 0 bytes
  Prefix advertised 0, rejected 0, withdrawn 0

  Connections established 3; dropped 3
  Last reset 00:00:37, due to user reset

  Notification History
    'Connection Reset' Sent : 3 Recv: 0
```

Related Commands

[show ip bgp](#) – views the current BGP routing table.

show ip bgp peer-group

Allows you to view information on the BGP peers in a peer group.

C-Series, E-Series TeraScale, S-Series

Syntax `show ip bgp ipv4 multicast peer-group [peer-group-name [detail | summary]]`

Parameters

- peer-group-name** (OPTIONAL) Enter the name of a peer group to view information about that peer group only.
- detail** (OPTIONAL) Enter the keyword `detail` to view detailed status information of the peers in that peer group.
- summary** (OPTIONAL) Enter the keyword `summary` to view status information of the peers in that peer group. The output is the same as that found in the `show ip bgp summary` command.

Command Modes

- EXEC
- EXEC Privilege

Command History

- Version 7.8.1.0** Introduced on the S-Series.
- Version 7.7.1.0** Introduced on the C-Series.
- Version 7.6.1.0** Introduced IPv6 MGBP on the E-Series.
- Version 7.5.1.0** Added the `detail` option.

Related Commands

- [neighbor peer-group \(assigning peers\)](#) – assigns a peer to a peer-group.
- [neighbor peer-group \(creating group\)](#) – creates a peer group.
- [show ip bgp peer-group \(multicast\)](#) – views information on the BGP peers in a peer group.

show ip bgp summary

Allows you to view the status of all BGP connections.

C-Series, E-Series TeraScale, S-Series

Syntax `show ip bgp ipv4 multicast summary`

Command Modes

- EXEC
- EXEC Privilege

Command History

Version	Description
9.2(1.0)	Introduced on the Z9500.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced IPv6 MGBP on the E-Series.

Usage Information The following describes the `show ip bgp ipv4 multicast summary` command shown in the Example below.

Field	Description
BGP router identifier	Displays the local router ID and the AS number.
BGP table version	Displays the BGP table version and the main routing table version.
network entries	Displays the number of network entries, route paths, and the amount of memory used to process those entries.
BGP path attribute entries	Displays the number of BGP path attributes and the amount of memory used to process them.
BGP AS-PATH entries	Displays the number of BGP AS_PATH attributes processed and the amount of memory used to process them.
BGP community entries	Displays the number of BGP COMMUNITY attributes processed and the amount of memory used to process them. The <code>show ip bgp community</code> command provides more details on the COMMUNITY attributes.
Dampening enabled	Displayed only when you enable dampening. Displays the number of paths designated as history, dampened, or penalized.
Neighbor	Displays the BGP neighbor address.
AS	Displays the AS number of the neighbor.
MsgRcvd	Displays the number of BGP messages that neighbor received.
MsgSent	Displays the number of BGP messages that neighbor sent.
TblVer	Displays the version of the BGP table that was sent to that neighbor.
InQ	Displays the number of messages from that neighbor waiting to be processed.
OutQ	Displays the number of messages waiting to be sent to that neighbor. If a number appears in parentheses, the number represents the number of messages waiting to be sent to the peer group.
Up/Down	Displays the amount of time (in hours:minutes:seconds) that the neighbor is in the Established stage. If the neighbor has never moved into the Established stage, the word never is displayed.
State/Pfxrcd	<p>If the neighbor is in Established stage, the number of network prefixes received.</p> <p>If a maximum limit was configured with the <code>neighbor maximum-prefix</code> command, (prfxd) appears in this column.</p> <p>If the neighbor is not in Established stage, the current stage is displayed (Idle, Connect, Active, OpenSent, OpenConfirm). When the peer is transitioning between states and clearing the routes received, the phrase (Purging) may appear in this column.</p> <p>If the neighbor is disabled, the phrase (Admin shut) appears in this column.</p>

Example (S4810)

```
Dell#sho ip bgp ipv4 multicast summary
BGP router identifier 100.10.10.1, local AS number 6400
BGP table version is 14, main routing table version 14
7 network entrie(s) and 7 paths using 972 bytes of memory
2 BGP path attribute entrie(s) using 112 bytes of memory
1 BGP AS-PATH entrie(s) using 35 bytes of memory

Neighbor      AS      MsgRcvd  MsgSent  TblVer  InQ  OutQ  Up/Down  State/Pfx
25.25.25.25   6400    21       9        14      0    0    00:02:04  3
211.1.1.129   640     28       6         0      0    0    00:00:21  Active
Dell#
```

BGP Extended Communities (RFC 4360)

BGP Extended Communities, as defined in RFC 4360, is an optional transitive BGP attribute.

BGP Extended Communities provides two major advantages over Standard Communities:

- The range is extended from 4-octet (AA:NN) to 8-octet (Type:Value) to provide enough number communities.
- Communities are structured using a new “Type” field (1 or 2-octets), allowing you to provide granular control/filter routing information based on the type of extended communities.

deny

To reject (deny) from the two types of extended communities, route origin (rt) or site-of-origin (soo), use this feature.

Syntax	<code>deny {rt soo} {as4 ASN4:NN ASN:NNNN IPADDR:NN}</code> To remove (delete) the rule, use the <code>no deny {rt soo} {as4 ASN4:NN ASN:NNNN IPADDR:NN}</code> command.										
Parameters	<table><tr><td>rt</td><td>Enter the keyword <code>rt</code> to designate a Route Origin community.</td></tr><tr><td>soo</td><td>Enter the keyword <code>soo</code> to designate a Site-of-Origin community (also known as Route Origin).</td></tr><tr><td>as4 ASN4:NN</td><td>Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format <code>ASN4:NN</code> (4-byte AS number:2-byte community value).</td></tr><tr><td>ASN:NNNN</td><td>Enter the 2-octet AS specific extended community number in the format <code>ASN:NNNN</code> (2-byte AS number:4-byte community value).</td></tr><tr><td>IPADDR:NN</td><td>Enter the IP address specific extended community in the format <code>IPADDR:NN</code> (4-byte IPv4 Unicast Address:2-byte community value).</td></tr></table>	rt	Enter the keyword <code>rt</code> to designate a Route Origin community.	soo	Enter the keyword <code>soo</code> to designate a Site-of-Origin community (also known as Route Origin).	as4 ASN4:NN	Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format <code>ASN4:NN</code> (4-byte AS number:2-byte community value).	ASN:NNNN	Enter the 2-octet AS specific extended community number in the format <code>ASN:NNNN</code> (2-byte AS number:4-byte community value).	IPADDR:NN	Enter the IP address specific extended community in the format <code>IPADDR:NN</code> (4-byte IPv4 Unicast Address:2-byte community value).
rt	Enter the keyword <code>rt</code> to designate a Route Origin community.										
soo	Enter the keyword <code>soo</code> to designate a Site-of-Origin community (also known as Route Origin).										
as4 ASN4:NN	Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format <code>ASN4:NN</code> (4-byte AS number:2-byte community value).										
ASN:NNNN	Enter the 2-octet AS specific extended community number in the format <code>ASN:NNNN</code> (2-byte AS number:4-byte community value).										
IPADDR:NN	Enter the IP address specific extended community in the format <code>IPADDR:NN</code> (4-byte IPv4 Unicast Address:2-byte community value).										
Defaults	Not configured.										
Command Modes	CONFIGURATION (conf-ext-community-list)										
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. <table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>7.8.1.0</td><td>Introduced on the S-Series.</td></tr><tr><td>7.7.1.0</td><td>Introduced on the C-Series.</td></tr><tr><td>7.6.1.0</td><td>Introduced on the E-Series.</td></tr></tbody></table>	Version	Description	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced on the E-Series.		
Version	Description										
7.8.1.0	Introduced on the S-Series.										
7.7.1.0	Introduced on the C-Series.										
7.6.1.0	Introduced on the E-Series.										
Related Commands	permit — configures to add (permit) rules. show ip extcommunity-list — displays the extended community list.										

deny regex

This feature allows you to specify an extended community to reject (deny) using a regular expression (regex).

Syntax	<code>deny regex {regex}</code> To remove, use the <code>no deny regex {regex}</code> command.
---------------	---

Parameters	<i>regex</i> Enter a regular expression.										
Defaults	Not configured.										
Command Modes	CONFIGURATION (conf-ext-community-list)										
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>7.8.1.0</td> <td>Introduced on the S-Series.</td> </tr> <tr> <td>7.7.1.0</td> <td>Introduced on the C-Series.</td> </tr> <tr> <td>7.6.1.0</td> <td>Introduced on the E-Series.</td> </tr> </tbody> </table>	Version	Description	9.2(1.0)	Introduced on the Z9500.	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced on the E-Series.
Version	Description										
9.2(1.0)	Introduced on the Z9500.										
7.8.1.0	Introduced on the S-Series.										
7.7.1.0	Introduced on the C-Series.										
7.6.1.0	Introduced on the E-Series.										
Usage Information	Duplicate commands are silently accepted.										
Example	<pre>Dell (conf-ext-community-list) #deny regex 123 Dell (conf-ext-community-list) #</pre>										
Related Commands	permit regex — permits a community using a regular expression.										

description

To designate a meaningful description to the extended community, use this feature.

Syntax	<pre>description {line}</pre> <p>To remove the description, use the <code>no description {line}</code> command.</p>										
Parameters	<i>line</i> Enter a description (maximum 80 characters).										
Defaults	Not configured.										
Command Modes	CONFIGURATION (conf-ext-community-list)										
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>7.8.1.0</td> <td>Introduced on the S-Series.</td> </tr> <tr> <td>7.7.1.0</td> <td>Introduced on the C-Series.</td> </tr> <tr> <td>7.6.1.0</td> <td>Introduced on the E-Series.</td> </tr> </tbody> </table>	Version	Description	9.2(1.0)	Introduced on the Z9500.	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced on the E-Series.
Version	Description										
9.2(1.0)	Introduced on the Z9500.										
7.8.1.0	Introduced on the S-Series.										
7.7.1.0	Introduced on the C-Series.										
7.6.1.0	Introduced on the E-Series.										

ip extcommunity-list

To enter the Extended Community-list mode, use this feature.

Syntax	<code>ip extcommunity-list word</code> To exit from this mode, use the <code>exit</code> command.
Parameters	word Enter a community list name (maximum 16 characters).
Defaults	none
Command Modes	CONFIGURATION (conf-ext-community-list)
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information This mode changes the prompt.

Example

```
Dell(conf)#ip extcommunity-list test
Dell(conf-ext-community-list)#
```

match extcommunity

To match an extended community in the Route Map mode, use this feature.

Syntax	<code>match extcommunity {extended community list name}</code> To change the match, use the <code>no match extcommunity {extended community list name}</code> command.
Parameters	extended community list name Enter the name of the extended community list.
Defaults	none
Command Modes	ROUTE MAP (config-route-map)
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

Like standard communities, you can use extended communities in the route-map to match the attribute.

Example

```
Dell(config-route-map)#match extcommunity Freedombird
Dell(config-route-map)#
```

permit

To add rules (permit) from the two types of extended communities, Route Origin (rt) or Site-of-Origin (soo), use this feature.

Syntax

```
permit {rt | soo} {as4 ASN4:NN | ASN:NNNN | IPADDR:NN}
```

To change the rules, use the `no permit {rt | soo} {as4 ASN4:NN | ASN:NNNN | IPADDR:NN}` command.

Parameters

rt	Enter the keyword <code>rt</code> to designate a Route Origin community.
soo	Enter the keyword <code>soo</code> to designate a Site-of-Origin community (also known as Route Origin).
as4 ASN4:NN	Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format <code>ASN4:NN</code> (4-byte AS number:2-byte community value).
ASN:NNNN	Enter the 2-octet AS specific extended community number in the format <code>ASN:NNNN</code> (2-byte AS number:4-byte community value).
IPADDR:NN	Enter the IP address specific extended community in the format <code>IPADDR:NN</code> (4-byte IPv4 Unicast Address:2-byte community value).

Defaults

Not configured.

Command Modes

CONFIGURATION (conf-ext-community-list)

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Related Commands

[deny](#) — configures to delete (deny) rules.
[show ip bgp extcommunity-list](#) — displays the extended community list.

permit regex

This feature allows you specify an extended community to forward (permit) using a regular expression (regex).

Syntax	<code>permit regex {regex}</code> To remove, use the <code>no permit regex {regex}</code> command.
Parameters	regex Enter a regular expression.
Defaults	Not configured.
Command Modes	CONFIGURATION (conf-ext-community-list)
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information Duplicate commands are silently accepted.

Example

```
Dell(conf-ext-community-list)#permit regexp 123
Dell(conf-ext-community-list)#
```

Related Commands `deny regex` — denies a community using a regular expression.

set extcommunity rt

To set Route Origin community attributes in Route Map, use this feature.

Syntax	<code>set extcommunity rt {as4 ASN4:NN [non-trans] ASN:NNNN [non-trans] IPADDR:NN [non-trans]} [additive]</code> To delete the Route Origin community, use the <code>no set extcommunity</code> command.
Parameters	as4 ASN4:NN Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format ASN4:NN (4-byte AS number:2-byte community value). ASN:NNNN Enter the 2-octet AS specific extended community number in the format ASN:NNNN (2-byte AS number:4-byte community value). IPADDR:NN Enter the IP address specific extended community in the format IPADDR:NN (4-byte IPv4 Unicast Address:2-byte community value). additive (OPTIONAL) Enter the keyword <code>additive</code> to add to the existing extended community. non-trans (OPTIONAL) Enter the keywords <code>non-trans</code> to indicate a non-transitive BGP extended community.

Defaults	none
Command Modes	ROUTE MAP (config-route-map)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T
8.3.11.1	Introduced on the Z-9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information	<p>If the set community <code>rt</code> and <code>soo</code> are in the same route-map entry, the behavior defines as:</p> <ul style="list-style-type: none"> • If the <code>rt</code> option comes before <code>soo</code>, with or without the <code>additive</code> option, <code>soo</code> overrides the communities <code>rt</code> sets. • If the <code>rt</code> option comes after <code>soo</code>, without the <code>additive</code> option, <code>rt</code> overrides the communities <code>soo</code> sets. • If the <code>rt</code> with the <code>additive</code> option comes after <code>soo</code>, <code>rt</code> adds the communities <code>soo</code> sets.
--------------------------	--

Related Commands	<ul style="list-style-type: none"> • set extcommunity soo — set the extended community site-of-origin in the route-map.
-------------------------	--

set extcommunity soo

To set extended community site-of-origin in Route Map, use this feature.

Syntax	<pre>set extcommunity soo {as4 ASN4:NN ASN:NNNN IPADDR:NN [non-trans]}</pre> <p>To delete the site-of-origin community, use the <code>no set extcommunity</code> command.</p>
---------------	---

Parameters	<p>as4 ASN4:NN Enter the keyword <code>as4</code> then the 4-octet AS specific extended community number in the format <code>ASN4:NN</code> (4-byte AS number:2-byte community value).</p> <p>ASN:NNNN Enter the 2-octet AS specific extended community number in the format <code>ASN:NNNN</code> (2-byte AS number:4-byte community value).</p> <p>IPADDR:NN Enter the IP address specific extended community in the format <code>IPADDR:NN</code> (4-byte IPv4 Unicast Address:2-byte community value).</p> <p>non-trans (OPTIONAL) Enter the keywords <code>non-trans</code> to indicate a non-transitive BGP extended community.</p>
-------------------	---

Defaults	none
Command Modes	ROUTE MAP (config-route-map)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

If the set community `rt` and `soo` are in the same route-map entry, the behavior defines as:

- If the `rt` option comes before `soo`, with or without the `additive` option, `soo` overrides the communities `rt` sets.
- If the `rt` option comes after `soo`, without the `additive` option, `rt` overrides the communities `soo` sets.
- If the `rt` with the `additive` option comes after `soo`, `rt` adds the communities `soo` sets.

Related Commands

- [set extcommunity rt](#) — set the extended community route origins using the route-map.

show ip bgp ipv4 extcommunity-list

To display the IPv4 routes matching the extended community list name, use this feature.

Syntax

```
show ip bgp [ipv4 [multicast | unicast] | ipv6 unicast] extcommunity-list
name
```

Parameters

multicast	Enter the keyword <code>multicast</code> to display the multicast route information.
unicast	Enter the keyword <code>unicast</code> to display the unicast route information.
ipv6 unicast	Enter the keywords <code>ipv6 unicast</code> to display the IPv6 unicast route information.
name	(OPTIONAL) Enter the name of the extcommunity-list.

Defaults

none

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

If there is a type or sub-type that is not well-known, it is displayed as:TTSS:XX:YYYY.

Where TT is type, SS is sub-type displayed in hexadecimal format, XX:YYYY is the value divided into 2-byte and 4-byte values in decimal format. This format is consistent with other vendors.

For example, if the extended community has type 0x04, sub-type 0x05, value 0x20 00 00 00 10 00, it displays as:0x0405:8192:4096.

Non-transitive extended communities are marked with an asterisk.

Example

```
Dell#show ip bgp ipv4 multicast extcommunity-list
BGP routing table entry for 192.168.1.0/24, version 2

Paths: (1 available, table Default-IP-Routing-Table.)
Not advertised to any peer
Received from :
  100.100.1.2 (2.4.0.1) Best
    AS_PATH : 200
    Next-Hop : 100.100.1.2, Cost : 0
    Origin IGP, Metric 4294967295 (Default), LocalPref 100, Weight 0,
external
    Communities :
      300:400 500:600

    Extended Communities :
      RT:1111:4278080 SoO:35:4 SoO:36:50529043 SoO:37:50529044
      SoO:38:50529045 SoO:0.0.0.2:33 SoO:506.62106:34 0x0303:254:11223*

Dell#
```

show ip bgp paths extcommunity

To display all BGP paths having extended community attributes, use this feature.

Syntax `show ip bgp paths extcommunity`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
Version 7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show ip bgp paths extcommunity` command shown in the following example.

Field	Description
Address	Displays the internal address where the path attribute is stored.
Hash	Displays the hash bucket where the path attribute is stored.
Refcount	Displays the number of BGP routes using these extended communities.
Community	Displays the extended community attributes in this BGP path.

Example

```
DellEMC# show ip bgp paths extcommunity
Total 1 Extended Communities

Address      Hash  Refcount  Extended Community
0x41d57024  12272  1          RT:7:200 SoO:5:300 SoO:0.0.0.3:1285

DellEMC#
```

show ip extcommunity-list

Display the IP extended community list.

Syntax `show ip extcommunity-list [word]`

Parameters **word** Enter the name of the extended community list you want to view.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip extcommunity-list test
ip extcommunity-list test
  deny RT:1234:12
  permit regexp 123
  deny regexp 234
  deny regexp 123
DellEMC#
```

show running-config extcommunity-list

To display the current configuration of the extended community lists, use this feature.

Syntax `show running-config extcommunity-list [word]`

Parameters *word* Enter the name of the extended community list you want to view.

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Example

```
Dell#show running-config extcommunity-list test

ip extcommunity-list test
  permit rt 65033:200
  deny soo 101.11.11.2:23
  permit rt as4 110212:340
  deny regex ^(65001_)$

Dell#
```

Bare Metal Provisioning (BMP)

Bare metal provisioning (BMP) is supported on the Dell Networking OS platform.

In a data center network, BMP automates the configuration and updating of switches, ensuring standard configurations across the installed devices.

You can configure autoconfiguration on a single switch or on multiple switches. BMP allows you to set up a stack with a minimum of effort, but is also useful for quick configuration of a single switch.

For more information about BMP in Auto-Configuration mode, refer to the *Open Automation Guide*.

BMP 3.0 eases configuration by providing the following key features:

- Boot images and running configurations are specified in a DHCP server.
- Files are automatically downloaded from a file server and the switch applies.
- Switch access is allowed through all ports (management and user ports) with or without DHCP-based dynamic IP address configuration of a switch.
- Booting up in Layer 3 mode with interfaces already in No Shutdown mode and some basic protocols enabled to protect the system and the network.
- Supports pre-configuration and post-configuration scripts to automatically load predefined configurations and Dell Networking OS images using DHCP and common file transfer mechanisms.

Topics:

- [reload-type](#)
- [show reload-type](#)
- [stop jump-start](#)

reload-type

Configure a switch to reload as a DHCP client in BMP mode with all ports configured for Layer 3 traffic or in Normal mode.

Syntax `reload-type [bmp | normal-reload {[auto-save {enable | disable}}] | [config-scr-download {enable | disable}] | [dhcp-timeout minutes] | retry-count number | vendor-class-identifier description]`

Use the `disable bmp` command to stop the BMP process.

Parameters		
bmp	(Default) Enable the BMP reload type. The system acts as a DHCP client and downloads the Dell Networking OS image, configuration and boot files from a specified DHCP server.	
normal-reload	Enable the normal reload type and disable BMP reload type. The system retrieves the Dell Networking OS image and startup-configuration files from the flash after performing a reload.	
auto-save	Configure the auto save option to save the downloaded configuration or script file. They are not saved by default. When auto save is configured, downloaded configurations are automatically saved to the startup configuration. Auto saving the downloaded configurations also requires enabling the config-scr-download parameter. Downloaded scripts are automatically saved to the autoexec script.	
config-scr-download {enable}	(Optional.) Configure whether the configuration file must be downloaded from the DHCP/file servers (enable).	
config-download {disable}	(Optional.) Configure if the downloaded file will not be downloaded from the DHCP/file servers.	

dhcp-timeout <i>minutes</i>	(Optional) Configure the DHCP timeout (in minutes) after which the BMP reload stops. The range is from 0 to 50. If a range of 0 is entered, the timeout is 0 (no limit). The default is disabled .
	 NOTE: Dell Networking recommends setting the value to 2 or higher.
retry-count <i>number</i>	Configure the number of times to retry loading the Dell Networking OS image and configuration download. The retry limit is 0–6. If the retry limit is 0, no retry is performed. The default is 0.
vendor-class-identifier <i>description</i>	(Optional) Enter a brief description for DHCP Option 60. Maximum is 64 characters long.
	 NOTE: This parameter replaces the deprecated parameter user-defined-string .

Defaults

BMP

Switches running BMP 3.0 reload in BMP mode as a DHCP client with all ports configured for Layer 3 traffic.

Command Modes GLOBAL CONFIGURATION

Command History

Version 9.0.2.0	Introduced on the S6000.
Version 9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
Version 9.2(0.0)	Introduced support for <code>vendor-class-identifier</code> that replaces deprecated parameter <code>user-defined-string</code> . Also added support for <code>retry-count</code> .
Version 9.1(0.0)	Introduced on the Z9000. Updated the command mode from EXEC Privilege to GLOBAL CONFIGURATION. Updated the parameter from <code>jumpstart</code> to <code>bmp</code> . Added support for the <code>config-scr-download</code> and <code>user-defined-string</code> commands.
Version 8.3.19.0	Introduced on the S4820T.
Version 8.3.1.0	Introduced on the S4810.

Usage Information

For an initial setup, the `config-scr-download` parameter of the `reload-type` command is enabled. After the configuration file is successfully downloaded, the `config-scr-download` parameter is automatically disabled. You can enable it again using the `reload-type` command.

Set the Auto Configuration mode (BMP or Normal reload) using the `reload-type` command. Next, enter the `reload` command to reload the switch in the configured mode.

When a switch reloads in BMP mode, all ports, including the management port, are automatically configured as Layer 3 physical ports. The switch runs DHCP client on all interfaces. You can reconfigure the default startup configuration and DHCP timeout values.

If the switch attempts to contact a DHCP server and one is not found, it enters a loop while reloading in BMP mode. To interrupt the reload and boot up in Normal mode, enter the `stop bmp` command. The startup configuration is then loaded from the local flash on the switch.

To toggle between Normal and BMP Auto Configuration modes, use the `reload-type` command in BMP 3.0. Reload settings for Auto Configuration mode that you configure are stored in memory and retained for future reboots and BMP software upgrades. To reload the switch in the last configured mode: Normal reload or BMP mode, you can enter the `reload` command at any time.

Upgrade any configuration changes that have changed the NVRAM content by performing a reload on the chassis.

While BMP is on, the Dell Networking OS Command Line Reference Guide prompt changes to “Dell-BMP”.

Related Commands

- [show reload-type](#) — displays the current reload mode (BMP or Normal mode).
- [stop jumpstart](#) — Stops the Jumpstart (BMP) process to prevent a loop if the DHCP server is not found

show reload-type

Display the reload type currently configured on the system.

Syntax	<code>show reload-type</code>
Defaults	none
Command Modes	EXEC Privilege
Command History	To execute the post-configuration script after applying the startup configuration, <ul style="list-style-type: none">Version 9.0.2.0 Introduced on the S6000.Version 9.2(0.0) Updated output example to include auto-save and retry-count parameters.Version 9.1(0.0) Updated reload type parameters.Version 8.3.19.0 Introduced on the S4820T.Version 8.3.11.4 Introduced on the Z9000.Version 8.3.10.0 Introduced for the S4810.

Usage Information Check the currently configured auto-configuration mode (BMP or Normal reload) on a switch running BMP 3.0 using the `show reload-type` command.

The `show bootvar` or `show system brief` commands can also be used to display the current reload mode for BMP 3.0. The commands include the path of the Dell Networking OS image file retrieved from a DHCP server.

Example

```
Dell#show reload-type
Reload-Type      : normal-reload [Next boot :bmp]
Auto-Save       : enable
Config-Download : enable
Dhcp-Timeout    : 30
Retry-Count      : 4
```

Related Commands [reload type](#) — Configure the reload mode as Normal or BMP.

stop jump-start

To prevent an infinite loop, stop the switch from reloading in BMP mode.

Syntax `stop jumpstart`

 **NOTE:** This command has been deprecated. It has been replaced by the `stop bmp` command.

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 9.0.2.0	Introduced on the S6000.
Version 9.1(0.0)	Deprecated command. Replaced by the <code>stop bmp</code> command.
Version 8.3.19.0	Introduced on the S4820T.
Version 8.3.11.4	Introduced on the Z9000.
Version 8.3.10.1	Introduced for the S4810.

**Usage
Information**

Use the `stop jumpstart` command on a switch running BMP 2.0 if the switch enters a loop while reloading in jumpstart mode; loop occurs when the switch is continuously trying to contact a DHCP server and a DHCP server is not found. The `stop jumpstart` command stops the switch from connecting to the DHCP server. After you use the `stop jumpstart` command, the next default reload type is a normal reload. This is indicated in the `show reload-type` command.

**Related
Commands**

[reload type](#) — configures the reload mode as normal or jumpstart (BMP).

Content Addressable Memory (CAM)

You can use content addressable memory (CAM) commands to configure the amount of memory allocated to CAM memory partitions.

NOTE: Not all CAM commands are supported on all platforms. Be sure to note the platform when looking for a command.

NOTE: If you are using these features for the first time, contact Dell EMC Networking Technical Assistance Center (TAC) for guidance.

Topics:

- [CAM Profile Commands](#)
- [cam-acl \(Configuration\)](#)
- [cam-acl-egress \(Configuration\)](#)
- [cam-optimization](#)
- [cam-threshold](#)
- [show cam-acl](#)
- [show cam-usage](#)
- [test cam-usage](#)

CAM Profile Commands

The CAM profiling feature allows you to partition the CAM to best suit your application. For example:

- Configure more Layer 2 forwarding information base (FIB) entries when the system is deployed as a switch.
- Configure more Layer 3 FIB entries when the system is deployed as a router.
- Configure more access control lists (ACLs) (when IPv6 is not employed).
- Hash multi-protocol label switching (MPLS) packets based on source and destination IP addresses for link aggregation groups (LAGs).
- Hash based on bidirectional flow for LAGs.
- Optimize the virtual local area network (VLAN) ACL Group feature, which permits group VLANs for IP egress ACLs.

Important Points to Remember

- Dell EMC Networking OS supports CAM allocations on the C-Series and S-Series.
- All line cards within a single system must have the same CAM profile (including CAM sub-region configurations); this profile must match the system CAM profile (the profile on the primary route processor module [RPM]).
- Dell EMC Networking OS automatically reconfigures the CAM profile on line cards and the secondary RPM to match the system CAM profile by saving the correct profile on the card and then rebooting it.
- The CAM configuration is applied to the entire system when you use the CONFIGURATION mode commands. Save the running-configuration to affect the change.
- When budgeting your CAM allocations for ACLs and quality of service (QoS) configurations, remember that ACL and QoS rules might consume more than one CAM entry depending on complexity. For example, transmission control protocol (TCP) and user datagram protocol (UDP) rules with `port range` options might require more than one CAM entry.
- After you install a secondary RPM, copy the running-configuration to the startup-configuration so that the new RPM has the correct CAM profile.
- You MUST save your changes and reboot the system for CAM profiling or allocations to take effect.

cam-acl (Configuration)

Select the default CAM allocation settings or reconfigure a new CAM allocation for Layer 2, IPv4, and IPv6 ACLs, Layer 2 and Layer 3 (IPv4) QoS, Layer 2 Protocol Tunneling (L2PT), IP and MAC source address validation for DHCP, Ethernet Connectivity Fault Management (CFM) ACLs, OpenFlow, and Policy-based Routing (PBR).

Syntax

```
cam-acl {default | l2acl number ipv4acl number ipv6acl number ipv4qos number l2qos number l2pt number ipmacacl number [vman-qos | vman-dual-qos number] ecfmacacl number [nlbclusteracl number] ipv4pbr number }openflow number | fcoe number} [iscsiptacl number] [vrfv4acl number]
```

Parameters

default	Use the default CAM profile settings and set the CAM as follows: <ul style="list-style-type: none">• L2Acl : 6• IPV4Acl : 4• IPV6Acl : 0• IPV4Qos : 2• L2Qos : 1• L2PT : 0• IpMacAcl : 0• VmanQos : 0• VmanDualQos : 0• EcfmAcl : 0• nlbclusteracl: 0• FcoeAcl : 0• iscsiOptAcl : 0• ipv4pbr : 0• Openflow : 0• fedgovacl : 0
l2acl number	Enter the keyword <code>l2acl</code> and then the number of l2acl blocks. The range is from 1 to 8.
ipv4acl number	Enter the keyword <code>ipv4acl</code> and then the number of FP blocks for IPv4. The range is from 0 to 8.
ipv6acl number	Enter the keyword <code>ipv6acl</code> and then the number of FP blocks for IPv6. The range is from 0 to 4.
ipv4qos number	Enter the keyword <code>ipv4qos</code> and then the number of FP blocks for IPv4. The range is from 0 to 8.
l2qos number	Enter the keyword <code>l2qos</code> and then the number of FP blocks for l2 qos. The range is from 1 to 8.
l2pt number	Enter the keyword <code>l2pt</code> and then the number of FP blocks for l2 protocol tunnelling. The range is from 0 to 1.
ipmacacl number	Enter the keyword <code>ipmacacl</code> and then the number of FP blocks for IP and MAC ACL. The range is from 0 to 6.
ecfmacacl number	Enter the keyword <code>ecfmacacl</code> and then the number of FP blocks for ECFM ACL. The range is from 0 to 5.
nlbclusteracl number	Enter the keyword <code>nlbclusteracl</code> and then the number of FP blocks for nlbcluster ACL. The range is from 0 to 2. By default, the value is 0 and it supports 8 NLB arp entries reserved for internal functionality. NOTE: When you reconfigure CAM allocation, use the <code>nlbclusteracl number</code> command to change the number of NLB ARP entries. The range is from 0 to 2. The default value is 0. At the default value of 0, eight NLB ARP entries are available for use. This platform supports up to 512 CAM entries. Select 1 to configure 256 entries. Select 2 to configure 512 entries. Even though you can perform CAM carving to allocate the maximum number of NLB

entries, Dell EMC Networking recommends that you use a maximum of 64 NLB ARP entries.

vman-qos	Enter the keyword <code>vman-qos</code> and then the number of FP blocks for VMAN QoS. The range is from 0 to 6.
vman-dual-qos number	Enter the keyword <code>vman-dual-qos</code> and then the number of FP blocks for VMAN dual QoS. The range is from 0 to 4.
ipv4pbr number	Enter the keyword <code>ipv4pbr</code> and then the number of FP blocks for ipv4pbr ACL. The range is from 0 to 8.
Openflow number	Enter the keyword <code>openflow</code> and then the number of FP blocks for open flow (multiples of 4). The range is from 0 to 8.
fcoeacl number	Enter the keyword <code>fcoeacl</code> and then the number of FP blocks for FCOE ACL. The range is from 0 to 6.
iscsiptacl number	Enter the keyword <code>iscsiptacl</code> and then the number of FP blocks for iSCSI optimization ACL. The range is from 0 to 2.
l2acl number	Allocate space to each CAM region.
ipv4acl number	Enter 4 or 8 for the number of OpenFlow FP blocks.
ipv6acl number,	<ul style="list-style-type: none"> • 4: Creates 242 entries for use by the OpenFlow controller (256 total entries minus the 14 entries reserved for internal functionality) • 8: Creates 498 entries for use by the OpenFlow controller (512 total entries minus the 14 entries reserved for internal functionality)
ipv4qos number	
l2qos number	The fcoe range is 0–6 groups. Each group has 128 entries; the value given must be an even number. This information is stored in the NVRAM and is effective after rebooting the switch.
l2pt number	
ipmacacl number	
ecfmacl number	
{nlbclusteracl}	
[vman-qos 	
vman-dual-qos	
number] ipv4pbr	
numberopenflow	
{4 8} 	
fcoe number	
[iscsiptacl	
number]	
[vrfv4acl	
number]	
[ipv4mirracl	Enter the <code>ipv4mirracl</code> keyword and then the number of FP blocks for IPv4 mirror ACL. The range is from 0 to 8. You cannot use the <code>ipv4mirracl</code> and <code>ipv4udfmirracl</code> commands at the same time.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Added the keyword <code>ipv4mirracl</code> .
9.11(0.0)	Added the keyword <code>ipv4udfmirracl</code> .
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Added the <code>n1bcluster</code> ACL keyword. Introduced on the S6000-ON.
9.4.(0.0)	Added support for PBR and VRF.
9.2(1.0)	Introduced on the Z9500.
9.2(0.2)	Added support for fcoe.
9.1.(0.0)	Added support for OpenFlow.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.2	Clarified block information for the S4810.
8.3.10.0	Introduced on the S4810.
8.3.1.0	Added the keywords <code>ecfmac1</code> , <code>vman-qos</code> , and <code>vman-dual-qos</code> .
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.

Usage Information

Save the new CAM settings to the startup-config (`write mem` or `copy run start`) then reload the system for the new settings to take effect.

The total amount of space allowed is 16 FP Blocks. System flow requires three blocks; these blocks cannot be reallocated. Only number of blocks can be configured by the user .

The `ipv6acl` allocation must be a factor of 2.

If allocation values are not entered for the CAM regions, the value is 0.

If you enable BMP, to perform a reload on the chassis to upgrade any configuration changes that have changed the NVRAM content, use the command `reload conditional nvram-cfg-change`.

cam-acl-egress (Configuration)

Select the FP groups for CAM access control lists for Layer 2, IPv4, and IPv6 ACLs.

Syntax `cam-acl-egress {default | l2acl number ipv4acl number ipv6acl number}`

Parameters

- default** Reset the egress CAM ACL entries to the default settings.
- l2acl number** Allocate space to each CAM region.
- ipv4acl number** Enter the CAM profile name followed by the amount of CAM space to be allotted. The total space allocated must equal 13. The l2acl range is 1 to 4. The ipv4acl range is 1 to 4. The ipv6acl range is 0 to 4.
- ipv6acl number**

Command Modes CONFIGURATION

Command History

Version	Description
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the keywords <code>ecfmac1</code> , <code>vman-qos</code> , and <code>vman-dual-qos</code> .
8.2.1.0	Introduced on the S-Series.

Version	Description
7.8.1.0	Introduced on the C-Series.

Usage Information

You must save the new CAM settings to the startup-config (`write-mem` or `copy run start`) then reload the system for the new settings to take effect.

There are four groups total. You must allocate at least one group for L2ACL and IPv4 ACL.

The range for the CAM profiles are 1 to 4 for l2acl. The range for the ipv6acl profile is 0 to 10. The ipv6acl allocation must be a factor of 2 (2, 4, 6, 8, 10).

cam-optimization

Optimize CAM utilization for QoS Entries by minimizing require policy-map CAM space.

Syntax `cam-optimization [qos]`

Parameters **qos** Optimize CAM usage for QoS.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0.	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.

Usage Information

When you enable this command, if a Policy Map containing classification rules (ACL and/or dscp/ ip-precedence rules) is applied to more than one physical interface on the same port pipe, only a single copy of the policy is written (only one FP entry is used).

NOTE: An ACL itself may still require more than a single FP entry, regardless of the number of interfaces. For more information, refer to the "IP Access Control Lists", "Prefix Lists", and "Route-map" sections in the *Dell EMC Networking OS Configuration Guide*.

cam-threshold

Configure CAM threshold value for sending the syslog message on CAM usage. Configure silence period for stop receiving syslog message on CAM usage.

Syntax	<code>cam-threshold threshold {default <i>threshold-percent</i>} silence-period {default <i>silence-period-value</i>}</code>								
Defaults	Enabled								
Parameters	<table><tr><td>threshold default</td><td>Enter the keyword <code>default</code> for CAM usage threshold for notification of the CAM usage through syslog message. The default threshold value is 90 percent.</td></tr><tr><td>threshold <i>threshold-percent</i></td><td>Enter the threshold percent for notification of the CAM usage through syslog message. The range is from 1 to 100 percent.</td></tr><tr><td>silence-period default</td><td>Enter the keyword <code>default</code> to set the silence period for receiving syslog message regarding CAM usage for CAM region, slot/portpipe. The default silence period is 0 seconds.</td></tr><tr><td>silence-period <i>silence-period-value</i></td><td>Enter the silence period for stop receiving syslog message for the respective CAM region, slot/portpipe. The range is from 0 to 65535 seconds.</td></tr></table>	threshold default	Enter the keyword <code>default</code> for CAM usage threshold for notification of the CAM usage through syslog message. The default threshold value is 90 percent.	threshold <i>threshold-percent</i>	Enter the threshold percent for notification of the CAM usage through syslog message. The range is from 1 to 100 percent.	silence-period default	Enter the keyword <code>default</code> to set the silence period for receiving syslog message regarding CAM usage for CAM region, slot/portpipe. The default silence period is 0 seconds.	silence-period <i>silence-period-value</i>	Enter the silence period for stop receiving syslog message for the respective CAM region, slot/portpipe. The range is from 0 to 65535 seconds.
threshold default	Enter the keyword <code>default</code> for CAM usage threshold for notification of the CAM usage through syslog message. The default threshold value is 90 percent.								
threshold <i>threshold-percent</i>	Enter the threshold percent for notification of the CAM usage through syslog message. The range is from 1 to 100 percent.								
silence-period default	Enter the keyword <code>default</code> to set the silence period for receiving syslog message regarding CAM usage for CAM region, slot/portpipe. The default silence period is 0 seconds.								
silence-period <i>silence-period-value</i>	Enter the silence period for stop receiving syslog message for the respective CAM region, slot/portpipe. The range is from 0 to 65535 seconds.								

Command Modes CONFIGURATION

Supported Modes

Command History	Version	Description
	9.13.0.0	Introduced on the MXL, FN IOM, S5000, S4048-ON, S6000, S6000-ON, S3048-ON, S3100 Series, C9010, S4048T-ON, Z9500, Z9100-ON, S6100-ON, S6010-ON.

Usage Information The `no cam-threshold` command will set the CAM threshold to 90 percent and silence period to 0. The CAM threshold and silence period configuration is applicable only for Ingress L2, IPv4, IPv6 and Egress L2, IPv4, and IPv6 ACL CAM groups. For other ACL CAM regions, the CAM threshold and silence period is not configurable and the values are fixed to 90 percent and 0 respectively.

Example

```
DellEMC(conf)#cam-threshold threshold 2 silence-period 2
DellEMC(conf)#do show running-config | g cam-threshold
cam-threshold threshold 2 silence-period 2
```

show cam-acl

Display the details of the CAM profiles on the chassis and all stack units.

Syntax	<code>show cam-acl</code>
Defaults	none
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .
Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series.

Usage Information

The display reflects the settings implemented with the `cam-acl` command.

Example

```
DellEMC# show cam-acl

-- Chassis Cam ACL --
      Current Settings(in block sizes)
      1 block = 128 entries
L2Acl      :      6
Ipv4Acl    :      4
Ipv6Acl    :      0
Ipv4Qos    :      2
L2Qos      :      1
L2PT       :      0
IpMacAcl   :      0
VmanQos    :      0
VmanDualQos :      0
EcfmAcl    :      0
FcoeAcl    :      0
iscsiOptAcl :      0
ipv4pbr    :      0
vrfv4Acl   :      0
Openflow   :      0
fedgovacl  :      0
nlbclusteracl:      0

-- stack-unit 0 --
      Current Settings(in block sizes)
      1 block = 128 entries
L2Acl      :      6
Ipv4Acl    :      4
Ipv6Acl    :      0
Ipv4Qos    :      2
L2Qos      :      1
L2PT       :      0
IpMacAcl   :      0
VmanQos    :      0
VmanDualQos :      0
EcfmAcl    :      0
FcoeAcl    :      0
iscsiOptAcl :      0
ipv4pbr    :      0
vrfv4Acl   :      0
Openflow   :      0
fedgovacl  :      0
```

```

nlbclusteracl:          0

-- stack-unit 1 --
      Current Settings(in block sizes)
      1 block = 128 entries
L2Acl      :          6
Ipv4Acl    :          4
Ipv6Acl    :          0
Ipv4Qos    :          2
L2Qos      :          1
L2PT       :          0
IpMacAcl   :          0
VmanQos    :          0
VmanDualQos :          0
EcfmAcl    :          0
FcoeAcl    :          0
iscsiOptAcl :          0
ipv4pbr    :          0
vrfv4Acl   :          0
Openflow   :          0
fedgovacl  :          0
nlbclusteracl:          0

```

show cam-usage

Display the amount of memory space used and available in each CAM partition (including Layer 2 ACL, Layer 3 ACL, and IPv4Flow)

Syntax `show cam-usage [acl | router | switch]`

Parameters

- acl** (OPTIONAL) Enter the keyword `acl` to display Layer 2 and Layer 3 ACL CAM usage.
- router** (OPTIONAL) Enter the keyword `router` to display Layer 3 CAM usage.
- switch** (OPTIONAL) Enter the keyword `switch` to display Layer 2 CAM usage.

Defaults none

Command Modes EXEC Privilege

Command History

Version	Description
9.11(2.0P1)	Optimized the ACL filters to support more than 200 egress ACL rules on the S6000, S6000-ON, S6100-ON, Z9100-ON.
9.11.0.0	The <code>show cam-usage</code> command is updated to display ECMP count information.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S6000 and Z9000.

Usage Information

The following regions must be provided in the `show cam-usage` output:

- L3AclCam
- L2AclCam
- V6AclCam

The following table describes the output fields of the `show cam-usage` command.

Table 1. Output fields of the show cam-usage command

Field	Description
Stackunit	Number of the stack unit that contains information on ACL VLAN groups
Portpipe	The hardware path that packets follow through a system for ACL optimization
CAM-Region	Type of area in the CAM block that is used for ACL VLAN groups
Total CAM space	Total amount of space in the CAM block
Used CAM	Amount of CAM space that is currently in use
Available CAM	Amount of CAM space that is free and remaining to be allocated for ACLs

Example

```
DelleMC#show cam-usage
Stackunit|Portpipe| CAM Partition | Total CAM | Used CAM |Available
CAM
=====|=====|=====|=====|=====|
0 | 0 | IN-L2 ACL | 1024 | 0 | 1024
| | IN-L3 ACL | 1024 | 1 | 1023
| | IN-L3 FIB | 163840 | 16 | 163824
| | IN-L3 ECMP GRP | 1024 | 0 | 1024
| | IN-V6 ACL | 0 | 0 | 0
| | IN-NLB ACL | 0 | 0 | 0
| | IPMAC ACL | 0 | 0 | 0
| | OUT-L2 ACL | 206 | 9 | 197
| | OUT-L3 ACL | 102 | 9 | 93
| | OUT-V6 ACL | 102 | 4 | 98
```

Example (show cam-usage router)

```
DelleMC#show cam-usage router
Stackunit|Portpipe| CAM Partition | Total CAM | Used CAM |
Available CAM
=====|=====|=====|=====|=====|
0 | 0
| IN-L3 ACL | 1024 | 1 | 1023
| |
| IN-L3 ECMP GRP | 1024 | 0 | 1024
| |
| IN-V6 ACL | 0 | 0 | 0
| |
| IN-L3-MIRR ACL | 0 | 0 | 0
| |
| IN-L3 FIB | 163840 | 15 | 163825
```

test cam-usage

Verify that enough CAM space is available for the IPv6 ACLs you have created.

Syntax `test cam-usage service-policy input input policy name stack-unit {number | all}`

Parameters *policy-map name* Enter the name of the policy-map to verify. Maximum is 32 characters.

number Enter `all` to get information for all the stack-units or enter the stack-unit number to get information for a specific stack-unit.

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced.

Usage Information This command applies to both IPv4 and IPv6 CAM Profiles, but is best used when verifying QoS optimization for IPv6 ACLs.

QoS Optimization for IPv6 ACLs does not impact the CAM usage for applying a policy on a single (or the first of several) interfaces. It is most useful when a policy is applied across multiple interfaces; it can reduce the impact to CAM usage across subsequent interfaces.

The following describes the `test cam-usage` command shown in the following example.

Term	Explanation
Stack-Unit	Lists the stack unit or units that are checked. Entering <code>all</code> shows the status for all stacks.
Portpipe	Lists the portpipe (port-set) or port pipes (port-sets) that are checked. Entering <code>all</code> shows the status for stack-units and port-pipes in the chassis. The port set value is from 0 to 0.
CAM Partition	Shows the CAM profile of the CAM.
Available CAM	Identifies the amount of CAM space remaining for that profile.
Estimated CAM per Port	Estimates the amount of CAM space the listed policy will require.
Status	Indicates whether or not the policy will be allowed in the CAM.

Example

```
DellEMC# test cam-usage service-policy input In stack-unit all
Stack-Unit | Portpipe | CAM Partition | Available CAM | Estimated CAM per Port| Status
-----
0 | 0 | IPv4Flow | 102 | 0| Allowed
0 | 0 | IPv4Flow | 102 | 0| Allowed
DellEMC#
!
DellEMC# test cam-usage service-policy input In stack-unit 0 port-set 0
Stack-Unit | Portpipe | CAM Partition | Available CAM | Estimated CAM per Port| Status
-----
```

Example

```
0 | 0 | IPv4Flow | 102 | 0 | Allowed
DellEMC#
```

```
DellEMC# test cam-usage service-policy input In stack-unit all
Stack-Unit | Portpipe | CAM Partition | Available CAM | Estimated CAM per Port | Status
-----
0 | 0 | IPv4Flow | 102 | 0 | Allowed
0 | 0 | IPv4Flow | 102 | 0 | Allowed
DellEMC#
!
DellEMC# test cam-usage service-policy input In stack-unit 0 port-set 0
Stack-Unit | Portpipe | CAM Partition | Available CAM | Estimated CAM per Port | Status
-----
0 | 0 | IPv4Flow | 102 | 0 | Allowed
DellEMC#
```

Control Plane Policing (CoPP)

Control plane policing (CoPP) uses access control list (ACL) rules and quality of service (QoS) policies to create filters for a system's control plane. The CoPP filters prevent traffic that is not identified as legitimate from reaching the control plane, and rate-limit traffic to an acceptable level.

Topics:

- [control-plane-cpuqos](#)
- [service-policy rate-limit-cpu-queues](#)
- [service-policy rate-limit-protocols](#)
- [ip unknown-unicast](#)
- [ipv6 unknown-unicast](#)
- [show cpu-queue rate cp](#)
- [show ip protocol-queue-mapping](#)
- [show ipv6 protocol-queue-mapping](#)
- [show mac protocol-queue-mapping](#)

control-plane-cpuqos

To manage control-plane traffic, enter control-plane mode and configure the switch.

Syntax `control-plane-cpuqos`

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

service-policy rate-limit-cpu-queues

Apply a policy map for the system to rate limit control traffic on a per-queue basis.

Syntax	<code>service-policy rate-limit-cpu-queues <i>policy-name</i></code>
Parameters	<i>policy-name</i> Enter the service-policy name, using a string up to 32 characters.
Defaults	Not configured.
Command Modes	CONTROL-PLANE-CPUQOS
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Usage Information	Create a policy-map by associating a queue number with the qos-policy. Create QoS policies prior to enabling this command. For CoPP, use the keyword <code>cpu-qos</code> when creating qos-policy-input.
--------------------------	---

Related Commands	<ul style="list-style-type: none">• qos-policy-input — create a QoS input policy map.• policy-map-input — create an input policy map.
-------------------------	--

service-policy rate-limit-protocols

Apply a policy for the system to rate limit control protocols on a per-protocol basis.

Syntax	<code>service-policy rate-limit-protocols <i>policy-name</i></code>
Parameters	<i>policy-name</i> Enter the service-policy name, using a string up to 32 characters.
Defaults	Not configured.
Command Modes	CONTROL-PLANE-CPUQOS
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Usage Information

This command applies the service-policy based on the type of protocol defined in the ACL rules.

Create ACL and QoS policies prior to enabling this command.

For CoPP, use the keyword `cpu-qos` when creating `qos-policy-input`.

Related Commands

- [ip access-list extended](#) — creates an extended IP ACL.
- [mac access-list extended](#) — creates an extended MAC ACL.
- [qos-policy-input](#) — creates a QoS input policy map.
- [class-map](#) — creates a QoS class map.
- [policy-map-input](#) — creates an input policy map.

ip unknown-unicast

Enable IPv4 catch-all route.

Syntax

```
ip unknown-unicast [vrf vrf-name]
```

To remove the IPv4 catch-all route (0.0.0.0/0) from the LPM route forwarding table in hardware which gets added as a default configuration after the initialization of FIB Agent module, use the `no ip unknown-unicast` command.

Defaults

None

Parameters

vrf vrf-name (Optional) Enter the keyword `vrf` followed by the name of the VRF to enable catch-all routes corresponding to that VRF.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S-Series.

Usage Information

Use this command to add the IPv4 catch-all route (0.0.0.0/0) in the LPM route forwarding table if it was deleted using the `no ip unknown-unicast` command previously. This will be the default configuration after reload.

ipv6 unknown-unicast

Disable soft forwarding of unknown IPv6 destination packets.

Syntax `[no] ipv6 unknown-unicast`

Defaults Soft forwarding is enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information

All the default catch-all entries in the longest prefix match (LPM) table collect and transmit all unresolved IPv6 packets to the CPU, even if they are destined for unknown destinations.

show cpu-queue rate cp

Display the rates for each CPU queue.

Syntax `show cpu-queue rate cp`

Defaults Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Usage Information

This command applies the service-policy based on the type of protocol defined in the ACL rules. Create ACL and QoS policies prior to enabling this command.

Example

```
DellEMC#show cpu-queue rate cp
Service-Queue          Rate (PPS)          Burst (Packets)
-----
Q0                      600                 512
Q1                      1000                50
Q2                      300                 50
Q3                      1300                50
Q4                      2000                50
Q5                      400                 50
Q6                      400                 50
Q7                      400                 50
Q8                      600                 50
Q9                      600                 50
Q10                     600                 50
Q11                     300                 50
DellEMC#
```

show ip protocol-queue-mapping

Display the queue mapping for each configured protocol.

Syntax `show ip protocol-queue-mapping`

Defaults Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Example

```

DellEMC# show ip protocol-queue-mapping
  Protocol  Src-Port  Dst-Port  TcpFlag  Queue  EgPort  Rate (kbps)
-----
TCP (BGP)   any/179   179/any   -         Q9     -        -
UDP (DHCP)  67/68    68/67    -         Q10    -        -
UDP (DHCP-R) 67       67       -         Q10    -        -
TCP (FTP)   any       21       -         Q6     -        -
ICMP        any       any       -         Q6     -        -
IGMP        any       any       -         Q11    -        -
TCP (MSDP)  any/639  639/any  -         Q11    -        -
UDP (NTP)   any       123      -         Q6     -        -
OSPF        any       any       -         Q9     -        -
PIM         any       any       -         Q11    -        -
UDP (RIP)   any       520      -         Q9     -        -
TCP (SSH)   any       22       -         Q6     -        -
TCP (TELNET) any      23       -         Q6     -        -
VRRP       any       any       -         Q10    -        -
DellEMC#

```

show ipv6 protocol-queue-mapping

Display the queue mapping for each configured IPv6 protocol.

Syntax `show ipv6 protocol-queue-mapping`

Defaults Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Example

```

DellEMC# show ipv6 protocol-queue-mapping
Protocol  Src-Port  Dst-Port  TcpFlag  Queue  EgPort  Rate (kbps)
-----
TCP (BGP)  any/179   179/any   -         Q9     -        -
ICMPV6 NA  any       any       -         Q6     -        -
ICMPV6 RA  any       any       -         Q6     -        -
ICMPV6 NS  any       any       -         Q5     -        -
ICMPV6 RS  any       any       -         Q5     -        -
ICMPV6    any       any       -         Q6     -        -
VRRPV6    any       any       -         Q10    -        -
OSPFV3    any       any       -         Q9     -        -
DellEMC#

```

show mac protocol-queue-mapping

Display the queue mapping for the MAC protocols.

Syntax `show mac protocol-queue-mapping`

Defaults Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Example

```
Dell EMC# show mac protocol-queue-mapping
Protocol Destination Mac EtherType Queue EgPort Rate (kbps)
-----
ARP any 0x0806 Q5/Q6 CP -
FRRP 01:01:e8:00:00:10/11 any Q7 CP -
LACP 01:80:c2:00:00:02 0x8809 Q7 CP -
LLDP any 0x88cc Q8 CP -
GVRP 01:80:c2:00:00:21 any Q8 CP -
STP 01:80:c2:00:00:00 any Q7 CP -
ISIS 01:80:c2:00:00:14/15 any Q9 CP -
09:00:2b:00:00:04/05 any Q9 CP -
Dell EMC#
```

Data Center Bridging (DCB)

Data center bridging (DCB) refers to a set of IEEE Ethernet enhancements that provide data centers with a single, robust, converged network to support multiple traffic types, including local area network (LAN), server, and storage traffic.

The Dell EMC Networking OS commands for data center bridging features include 802.1Qbb priority-based flow control (PFC), 802.1Qaz enhanced transmission selection (ETS), and the data center bridging exchange (DCBX) protocol.

This section includes the following:

- [DCB Command](#)
- [PFC Commands](#)
- [ETS Commands](#)
- [DCBX Commands](#)

Topics:

- [DCB Command](#)
- [PFC Commands](#)
- [ETS Commands](#)
- [DCBX Commands](#)
- [dcb-map](#)
- [priority-pgid](#)
- [pfc mode on](#)
- [priority-group bandwidth pfc](#)
- [dcb-map stack-unit all stack-ports all](#)
- [show qos dcb-map](#)
- [dcb pfc-shared-buffer-size](#)
- [dcb-buffer-threshold](#)
- [priority](#)
- [qos-policy-buffer](#)
- [dcb-policy buffer-threshold \(Interface Configuration\)](#)
- [dcb-policy buffer-threshold \(Global Configuration\)](#)
- [show qos dcb-buffer-threshold](#)
- [dcb pfc-total-buffer-size](#)
- [show running-config dcb-buffer-threshold](#)
- [service-class buffer shared-threshold-weight](#)
- [dcb pfc-queues](#)
- [dcb {ets | pfc} enable](#)

DCB Command

The following DCB command is supported on the Dell EMC Networking OS.

dcb-enable

Enable data center bridging.

Syntax `dcb enable [pfc-queues 1-4]`

To disable DCB, use the `no dcb enable` command.

Parameters *pfq-queues* Enter the pfq-queue range. To disable DCB, use the no dcb enable command. The range is from 1 to 4.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information By default, iSCSI is enabled on the unit and the flow control is enabled on all of the interfaces. It is also acts as defaults when the link-level flow control is enabled on one or more interfaces.

Enables priority flow control or enhance transmission selection on interface.

Related Commands

- [dcb <ets | pfq> enable](#) — enable priority flow control or enhanced transmission selection on interface.

PFC Commands

The following PFC commands are supported on the Dell EMC Networking OS.

clear pfc counters

Clear the PFC TLV counters and PFC statistics on an interface or stack unit.

Syntax `clear pfc counters [interface-type | stack-unit {unit number | all } all stack-ports all}}`

Parameters

interface <i>interface-type</i>	Enter the keywords <code>port-type</code> then the interface information.
stack-unit <i>unit number</i>	Enter the keywords <code>stack-unit</code> then the stack-unit number to be cleared.
statistics	Enter the keyword <code>statistics</code> to clear the hardware PFC counters.
stack-ports all	Enter the keywords <code>stack-ports all</code> to clear the counters on all stack ports.

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

If you do not use the `statistics` parameter, both hardware and DCBx counters clear.

description

Enter a text description of the DCB policy (PFC input or ETS output).

Syntax `description text`
 To remove the text description, use the `no description` command.

Parameters `text` Enter the description of the output policy. The maximum is 32 characters.

Defaults None

- Command Modes**
- DCB INPUT POLICY
 - DCB OUTPUT POLICY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

pfc mode on

Enable the PFC configuration on the port so that the priorities are included in DCBX negotiation with peer PFC devices.

Syntax `pfc mode on`
 To disable the PFC configuration, use the `no pfc mode on` command.

Defaults PFC mode is on.

Command Modes DCB INPUT POLICY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the S6000-ON and Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

NOTE: Please note that Dell Networking does not recommend to use this command as it has been deprecated in the current 9.4.(0.0) release. A warning message appears when you try to run this command indicating that you have to use the `dcb-map` commands in the future.

By applying a DCB input policy with PFC enabled, you enable PFC operation on ingress port traffic. To achieve complete lossless handling of traffic, also enable PFC on all DCB egress ports or configure the dot1p priority-queue assignment of PFC priorities to lossless queues (refer to `pfc no-drop queues`).

To disable PFC operation on an interface, enter the `no pfc mode on` command in DCB Input Policy Configuration mode. PFC is enabled and disabled as global DCB operation is enabled (`dcb-enable`) or disabled (`no dcb-enable`).

You cannot enable PFC and link-level flow control at the same time on an interface.

pfc no-drop queues

Configure the port queues that still function as no-drop queues for lossless traffic.

Syntax	<code>pfc no-drop queues queue-range</code> To remove the no-drop port queues, use the <code>no pfc no-drop queues</code> command.
Parameters	queue-range Enter the queue range. Separate the queue values with a comma; specify a priority range with a dash; for example, <code>pfc no-drop queues 1,3</code> or <code>pfc no-drop queues 7</code> or <code>pfc no-drop queues 0,7</code> . The range is from 0 to 3.
Defaults	No lossless queues are configured.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

- When you configure lossless queues on an interface, PFC priority configuration is not allowed on the `dcb-map` profile applied on the interface.
- The maximum number of lossless queues globally supported on the switch is two.
The following lists the dot1p priority-queue assignments.

dot1p Value in the Incoming Frame	Description heading
-----------------------------------	---------------------

0	1
1	0
2	2
3	3
4	4
5	5
6	6
7	7

- Before configuring the port queues to function as no-drop queues, you must first apply the dcb-map map with pfc mode off. To apply the dcb-map with pfc mode off, use the following commands:
dcb-map pfc off and no pfc mode on.

show dcb

Displays the data center bridging status, the number of PFC-enabled ports, and the number of PFC-enabled queues.

Syntax show dcb

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information Specify a stack-unit number on the Master switch in a stack.

Example

```
DellEMC# show dcb
stack-unit 1 port-set 0
  DCB Status : Enabled
  PFC Port Count : 56 (current), 56 (configured)
PFC Queue Count : 2 (current), 2 (configured)
DellEMC#
```

show interface pfc

Displays the PFC configuration applied to ingress traffic on an interface, including priorities and link delay.

Syntax `show interface port-type slot/port[] pfc {summary | statistics | detail | buffer-threshold}`

Parameters

port-type slot/port[] pfc	Enter the port-type slot and port PFC information.
{summary statistics detail buffer-threshold}	Enter the keyword <code>summary</code> for a summary list of results or enter the keyword <code>detail</code> for a full list of results. Enter the keyword <code>statistics</code> to view pfc statistics. Use the keyword <code>buffer-threshold</code> to display the buffer threshold details.

NOTE: This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Command Modes EXEC Privilege
CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the Z9500.
9.2.(0.0)	Down status messages added.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information To clear the PFC TLV counters, use the `clear pfc counters interface` command.

The following describes the `show interface pfc summary` command shown in the following example.

Field	Description
Interface	Interface type with stack-unit and port number.
Admin mode is on Admin is enabled	PFC admin mode is on or off with a list of the configured PFC priorities. When the PFC admin mode is on, PFC advertisements are enabled to be sent and received

Field	Description
	from peers; received PFC configuration take effect. The admin operational status for a DCBX exchange of PFC configuration is enabled or disabled.
Remote is enabled, Priority list Remote Willing Status is enabled	Operational status (enabled or disabled) of peer device for DCBX exchange of PFC configuration with a list of the configured PFC priorities. Willing status of peer device for DCBX exchange (Willing bit received in PFC TLV): enabled or disabled.
Local is enabled	DCBX operational status (enabled or disabled) with a list of the configured PFC priorities.
Operational status (local port)	Port state for current operational PFC configuration: <ul style="list-style-type: none"> • <code>Init</code>: Local PFC configuration parameters were exchanged with the peer. • <code>Recommend</code>: Remote PFC configuration parameters were received from the peer. • <code>Internally propagated</code>: PFC configuration parameters were received from the configuration source.
PFC DCBX Oper status	Operational status for the exchange of the PFC configuration on the local port: match (up) or mismatch (down).
State Machine Type	Type of state machine used for DCBX exchanges of the PFC parameters: Feature — for legacy DCBX versions; Symmetric — for an IEEE version.
TLV Tx Status	Status of the PFC TLV advertisements: enabled or disabled.
PFC Link Delay	Link delay (in quanta) used to pause specified priority traffic.
Application Priority TLV: FCOE TLV Tx Status	Status of FCoE advertisements in application priority TLVs from the local DCBX port: enabled or disabled.
Application Priority TLV: SCSI TLV Tx Status	Status of iSCSI advertisements in application priority TLVs from the local DCBX port: enabled or disabled.
Application Priority TLV: Local FCOE Priority Map	Priority bitmap the local DCBX port uses in FCoE advertisements in application priority TLVs.
Application Priority TLV: Local iSCSI Priority Map	Priority bitmap the local DCBX port uses in iSCSI advertisements in application priority TLVs.
Application Priority TLV: Remote FCOE Priority Map	Status of FCoE advertisements in application priority TLVs from the remote peer port: enabled or disabled.
Application Priority TLV: Remote iSCSI Priority Map	Status of iSCSI advertisements in application priority TLVs from the remote peer port: enabled or disabled.
PFC TLV Statistics: Input TLV pkts	Number of PFC TLVs received.
PFC TLV Statistics: Output TLV pkts	Number of PFC TLVs transmitted.

Field	Description
PFC TLV Statistics: Error pkts	Number of PFC error packets received.
PFC TLV Statistics: Pause Tx pkts	Number of PFC pause frames transmitted.
PFC TLV Statistics: Pause Rx pkts	Number of PFC pause frames received.

Example (Summary)

```
DelleMC# show interfaces tengigabitethernet 1/4 pfc summary
Interface TenGigabitEthernet 1/4
  Admin mode is on
  Admin is enabled
  Remote is enabled, Priority list is 4
  Remote Willing Status is enabled
  Local is enabled
  Oper status is Recommended
  PFC DCBX Oper status is Up
  State Machine Type is Feature
  TLV Tx Status is enabled
  PFC Link Delay 45556 pause quantams
  Application Priority TLV Parameters :
-----
  FCOE TLV Tx Status is disabled
  ISCSI TLV Tx Status is disabled
  Local FCOE PriorityMap is 0x8
  Local ISCSI PriorityMap is 0x10
  Remote FCOE PriorityMap is 0x8
  Remote ISCSI PriorityMap is 0x8

DelleMC# show interfaces tengigabitethernet 1/4 pfc detail
Interface TenGigabitEthernet 1/4
  Admin mode is on
  Admin is enabled
  Remote is enabled
  Remote Willing Status is enabled
  Local is enabled
  Oper status is recommended
  PFC DCBX Oper status is Up
  State Machine Type is Feature
  TLV Tx Status is enabled
  PFC Link Delay 45556 pause quanta
  Application Priority TLV Parameters :
-----
  FCOE TLV Tx Status is disabled
  ISCSI TLV Tx Status is disabled
  Local FCOE PriorityMap is 0x8
  Local ISCSI PriorityMap is 0x10
  Remote FCOE PriorityMap is 0x8
  Remote ISCSI PriorityMap is 0x8
  0 Input TLV pkts, 1 Output TLV pkts, 0 Error pkts,
  0 Pause Tx pkts, 0 Pause Rx pkts
```

show interface pfc statistics

Displays counters for the PFC frames received and transmitted (by dot1p priority class) on an interface.

Syntax `show interface port-type pfc statistics`

Parameters *port-type* Enter the port type and the interface information.

NOTE: This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Enabled to display the command output even without enabling DCB.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

You can use this command even without enabling DCB.

Example (Summary)

```
DellEMC#show int te 1/1 pfc statistics
Interface TenGigabitEthernet 1/1
Priority   Rx XOFF Frames      Rx Total Frames      Tx Total Frames
-----
0          0                    0                    0
1          0                    0                    0
2          0                    0                    0
3          0                    0                    0
4          0                    0                    0
5          0                    0                    0
6          0                    0                    0
7          0                    0                    0
```

show stack-unit stack-ports pfc details

Displays the PFC configuration applied to ingress traffic on stacked ports, including PFC Operational mode on each unit with the configured priorities, link delay, and number of pause packets sent and received.

Syntax `show stack-unit {all | stack-unit} stack-ports {all | port-number} pfc details`

Parameters

- stack-unit** Enter the stack unit.
- port-number** Enter the port number.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Example (Summary)

```
Dell(conf)# show stack-unit all stack-ports all pfc details

stack unit 0 stack-port all
  Admin mode is On
  Admin is enabled, Priority list is 4-5
  Local is enabled, Priority list is 4-5
  Link Delay 45556 pause quantum
  0 Pause Tx pkts, 0 Pause Rx pkts

stack unit 1 stack-port all
  Admin mode is On
  Admin is enabled, Priority list is 4-5
  Local is enabled, Priority list is 4-5
  Link Delay 45556 pause quantum
  0 Pause Tx pkts, 0 Pause Rx pkts
```

ETS Commands

The following ETS commands are supported on the Dell EMC Networking OS.

NOTE: Before configuring ETS, assign the etsacl space. using the `cam-ac1 12ac1 2 ipv4ac1 0 ipv6ac1 0 ipv4qos 2 12qos 0 12pt 0 ipmacac1 0 vman-qos 0 fcoeac1 2 etsacl 1 iscsi 2` command.

bandwidth-percentage

Configure the bandwidth percentage allocated to priority traffic in port queues.

Syntax `bandwidth-percentage percentage`
To remove the configured bandwidth percentage, use the `no bandwidth-percentage` command.

Parameters *percentage* (Optional) Enter the bandwidth percentage. The percentage range is from 1 to 100% in units of 1%.

Defaults none

Command Modes QOS-POLICY-OUT-ETS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

By default, equal bandwidth is assigned to each port queue and each dot1p priority in a priority group. To configure bandwidth amounts in associated dot1p queues, use the `bandwidth-percentage` command. When specified bandwidth is assigned to some port queues and not to others, the remaining bandwidth (100% minus assigned bandwidth amount) is equally distributed to unassigned non-strict priority queues in the priority group. The sum of the allocated bandwidth to all queues in a priority group must be 100% of the bandwidth on the link.

ETS-assigned bandwidth allocation applies only to data queues, not to control queues.

The configuration of bandwidth allocation and strict-queue scheduling is not supported at the same time for a priority group. If you configure both, the configured bandwidth allocation is ignored for priority-group traffic when you apply the output policy on an interface.

By default, equal bandwidth is assigned to each priority group in the ETS output policy applied to an egress port if you did not configure bandwidth allocation. The sum of configured bandwidth allocation to dot1p priority traffic in all ETS priority groups must be 100%. Allocate at least 1% of the total bandwidth to each priority group and queue. If bandwidth is assigned to some priority groups but not to others, the remaining bandwidth (100% minus assigned bandwidth amount) is equally distributed to nonstrict-priority groups which have no configured scheduler.

Related Commands

- [qos-policy-output ets](#) — create a QoS output policy.
- [scheduler](#) — schedule priority traffic in port queues.

clear ets counters

Clear all ETS TLV counters on an interface.

Syntax `clear ets counters port-type slot/port[]`

Parameters **port-type** Enter the keywords `port-type` then the slot/port information.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

dcb-enable

Enable data center bridging.

Syntax `dcb enable [pfc-queues 1-4]`
To disable DCB, use the `no dcb enable` command.

Parameters *pfc-queues* Enter the pfc-queue range. To disable DCB, use the no dcb enable command. The range is from 1 to 4.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information By default, iSCSI is enabled on the unit and the flow control is enabled on all of the interfaces. It is also acts as defaults when the link-level flow control is enabled on one or more interfaces.

Enables priority flow control or enhance transmission selection on interface.

Related Commands

- [dcb <ets | pfc> enable](#) — enable priority flow control or enhanced transmission selection on interface.

description

Enter a text description of the DCB policy (PFC input or ETS output).

Syntax `description text`
To remove the text description, use the no `description` command.

Parameters *text* Enter the description of the output policy. The maximum is 32 characters.

Defaults None

Command Modes

- DCB INPUT POLICY
- DCB OUTPUT POLICY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

priority-list

Configure the 802.1p priorities for the traffic on which you want to apply an ETS output policy.

Syntax `priority-list value`

To remove the priority list, use the `no priority-list` command.

Parameters **value** Enter the priority list value. Separate priority values with a comma; specify a priority range with a dash; for example, `priority-list 3,5-7`. The range is from 0 to 7.

Defaults None

Command Modes PRIORITY-GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information By default:

- All 802.1p priorities are grouped in priority group 0.
- 100% of the port bandwidth is assigned to priority group 0. The complete bandwidth is equally assigned to each priority class so that each class has 12 to 13%.

qos-policy-output ets

To configure the ETS bandwidth allocation and scheduling for priority traffic, create a QoS output policy.

Syntax `qos-policy-output policy-name ets`

To remove the QoS output policy, use the `no qos-policy-output ets` command.

Parameters **policy-name** Enter the policy name. The maximum is 32 characters.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

If an error occurs in an ETS output-policy configuration, the configuration is ignored and the scheduler and bandwidth allocation settings are reset to the ETS default values (all priorities are in the same ETS priority group and bandwidth is allocated equally to each priority).

If an error occurs when a port receives a peer's ETS configuration, the port's configuration is reset to the previously configured ETS output policy. If no ETS output policy was previously applied, the port is reset to the default ETS parameters.

You can only associate output QoS policy profiles with the priority groups in the DCB output profile context; output QoS policy profiles are not permitted on output policy-maps.

WRED, ECN, rate shaping, and rate limiting are not supported in output policies because DCBx does not negotiate these parameters with peer devices. You can apply a QoS output policy with WRED and/or rate shaping on a DCBx CIN-enabled interface.

If you enable the `scheduler` command for a QoS ETS output policy, no bandwidth percentage is assigned to the policy.

- Related Commands**
- [scheduler](#) — schedule the priority traffic in port queues.
 - [bandwidth-percentage](#) — bandwidth percentage allocated to the priority traffic in port queues.

scheduler

Configure the method used to schedule priority traffic in port queues.

Syntax `scheduler value`

To remove the configured priority schedule, use the `no scheduler` command.

Parameters **value** Enter schedule priority value. The range: strict: strict-priority traffic is serviced before any other queued traffic.

Defaults Weighted Elastic Round Robin (WERR) scheduling is used to queue priority traffic.

Command Modes POLICY-MAP-OUT-ETS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information dot1p priority traffic on the switch is scheduled to the current queue mapping. dot1p priorities within the same queue must have the same traffic properties and scheduling method.

ETS-assigned scheduling applies only to data queues, not to control queues.

The configuration of bandwidth allocation and strict-queue scheduling is not supported at the same time for a priority group. If you configure both, the configured bandwidth allocation is ignored for priority-group traffic when you apply the output policy on an interface.

If you enable this command for a QoS ETS output policy, no bandwidth percentage is assigned to the policy.

- Related Commands**
- [qos-policy-output ets](#) — configure the ETS bandwidth allocation.
 - [bandwidth-percentage](#) — bandwidth percentage allocated to priority traffic in port queues.

show interface ets

Displays the ETS configuration applied to egress traffic on an interface, including priority groups with priorities and bandwidth allocation.

Syntax `show interface port-type slot/port[] ets {summary | detail}`

Parameters **port-type slot/port[] ets** Enter the port-type slot and port ETS information.

{summary | detail} Enter the keyword `summary` for a summary list of results or enter the keyword `detail` for a full list of results.

i NOTE: This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.2)	Down status messages added.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Example (Summary)

```
DellEMC# show interface te 1/3 ets de

Interface TenGigabitEthernet 1/3
Max Supported TC Groups is 4
Number of Traffic Classes is 8
Admin mode is on

Admin Parameters :
-----
Admin is enabled

TC-grp Priority#   Bandwidth   TSA
-----
0                -           -
1                0,1,2      100%       ETS
2                3          0 %        SP
3                4,5,6,7   0 %        SP
4                -           -
5                -           -
6                -           -
7                -           -

Remote Parameters :
-----
Remote is disabled

Local Parameters :
-----
Local is enabled
```

TC-grp	Priority#	Bandwidth	TSA
0		-	-
1	0,1,2	100%	ETS
2	3	0 %	SP
3	4,5,6,7	0 %	SP
4		-	-
5		-	-
6		-	-
7		-	-

Oper status is init
ETS DCBX Oper status is Down
State Machine Type is Asymmetric
Conf TLV Tx Status is enabled
Reco TLV Tx Status is enabled

0 Input Conf TLV Pkts, 1955 Output Conf TLV Pkts, 0 Error Conf TLV Pkts
0 Input Reco TLV Pkts, 1955 Output Reco TLV Pkts, 0 Error Reco TLV Pkts

DelleMC# show int te 1/3 ets de

Interface TenGigabitEthernet 1/3
Max Supported TC Groups is 4
Number of Traffic Classes is 8
Admin mode is on

Admin Parameters :

Admin is enabled

TC-grp	Priority#	Bandwidth	TSA
0		-	-
1	0,1,2	100%	ETS
2	3	0 %	SP
3	4,5,6,7	0 %	SP
4		-	-
5		-	-
6		-	-
7		-	-

Remote Parameters :

Remote is disabled

Local Parameters :

Local is enabled

TC-grp	Priority#	Bandwidth	TSA
0		-	-
1	0,1,2	100%	ETS
2	3	0 %	SP
3	4,5,6,7	0 %	SP
4		-	-
5		-	-
6		-	-
7		-	-

Oper status is init
ETS DCBX Oper status is Down
State Machine Type is Asymmetric
Conf TLV Tx Status is enabled
Reco TLV Tx Status is enabled

0 Input Conf TLV Pkts, 1955 Output Conf TLV Pkts, 0 Error Conf TLV Pkts
0 Input Reco TLV Pkts, 1955 Output Reco TLV Pkts, 0 Error Reco TLV Pkts

DelleMC# show interfaces tengigabitethernet 1/1 ets detail

```

Interface TenGigabitEthernet 1/1
Max Supported TC Groups is 4
Number of Traffic Classes is 8
Admin mode is on
Admin Parameters :
-----
Admin is enabled
TC-grp Priority# Bandwidth TSA
0 0,1,2,3,4,5,6,7 100% ETS
1 0% ETS
2 0% ETS
3 0% ETS
4 0% ETS
5 0% ETS
6 0% ETS
7 0% ETS
Priority# Bandwidth TSA
0 13% ETS
1 13% ETS
2 13% ETS
3 13% ETS
4 12% ETS
5 12% ETS
6 12% ETS
7 12% ETS
Remote Parameters:
-----
Remote is disabled
Local Parameters :
-----
Local is enabled
TC-grp Priority# Bandwidth TSA
0 0,1,2,3,4,5,6,7 100% ETS
1 0% ETS
2 0% ETS
3 0% ETS
4 0% ETS
5 0% ETS
6 0% ETS
7 0% ETS
Priority# Bandwidth TSA
0 13% ETS
1 13% ETS
2 13% ETS
3 13% ETS
4 12% ETS
5 12% ETS
6 12% ETS
7 12% ETS
Oper status is init
Conf TLV Tx Status is disabled
Traffic Class TLV Tx Status is disabled
0 Input Conf TLV Pkts, 0 Output Conf TLV Pkts, 0 Error Conf TLV Pkts
0T LIVnput Traffic Class TLV Pkts, 0 Output Traffic Class TLV Pkts, 0
Error Traffic
Class
Pkts

```

Example (Detail)

```

DelleMC(conf)# show interfaces tengigabitethernet 1/1 ets detail
Interface TenGigabitEthernet 1/1
Max Supported TC Groups is 4
Number of Traffic Classes is 8
Admin mode is on
Admin Parameters :
-----
Admin is enabled
TC-grp Priority#          Bandwidth TSA
0      0,1,2,3,4,5,6,7  100%      ETS
1      0%                0%        ETS
2      0%                0%        ETS

```

```

3          0%      ETS
4          0%      ETS
5          0%      ETS
6          0%      ETS
7          0%      ETS

Priority#      Bandwidth TSA
0             13%      ETS
1             13%      ETS
2             13%      ETS
3             13%      ETS
4             12%      ETS
5             12%      ETS
6             12%      ETS
7             12%      ETS

Remote Parameters:
-----
Remote is disabled

Local Parameters :
-----
Local is enabled
TC-grp Priority#      Bandwidth TSA
0          0,1,2,3,4,5,6,7  100%    ETS
1          0%              ETS
2          0%              ETS
3          0%              ETS
4          0%              ETS
5          0%              ETS
6          0%              ETS
7          0%              ETS

Priority#      Bandwidth TSA
0             13%      ETS
1             13%      ETS
2             13%      ETS
3             13%      ETS
4             12%      ETS
5             12%      ETS
6             12%      ETS
7             12%      ETS

Oper status is init
Conf TLV Tx Status is disabled
Traffic Class TLV Tx Status is disabled
0 Input Conf TLV Pkts, 0 Output Conf TLV Pkts, 0 Error Conf TLV Pkts
0 Input Traffic Class TLV Pkts, 0 Output Traffic Class TLV Pkts, 0 Error
Traffic Class
TLV
Pkts

```

show qos priority-groups

Displays the ETS priority groups configured on the switch, including the 802.1p priority classes and ID of each group.

Syntax show qos priority-groups

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

**Example
(Summary)**

```
Dell# show qos priority-groups
priority-group ipc
  priority-list 4
  set-pgid 2
```

show stack-unit stack-ports ets details

Displays the ETS configuration applied to egress traffic on stacked ports, including ETS Operational mode on each unit and the configured priority groups with dot1p priorities, bandwidth allocation, and scheduler type.

Syntax `show stack-unit {all | stack-unit} stack-ports {all | port-number} ets details`

Parameters

- stack-unit*** Enter the stack unit identification.
- port-number*** Enter the port number.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

**Example
(Summary)**

```
Dell(conf)# show stack-unit all stack-ports all ets details

Stack unit 1 stack port all
Max Supported TC Groups is 4
Number of Traffic Classes is 1
Admin mode is on

Admin Parameters:
-----
Admin is enabled
TC-grp Priority#          Bandwidth TSA
-----
0      0,1,2,3,4,5,6,7    100%      ETS
1
2
3
4
5
6
7
8

Stack unit 2 stack port all
Max Supported TC Groups is 4
Number of Traffic Classes is 1
Admin mode is on
Admin Parameters:
-----
Admin is enabled
TC-grp Priority#          Bandwidth TSA
-----
0      0,1,2,3,4,5,6,7    100%      ETS
1
2
3
4
```

5	-	-
6	-	-
7	-	-
8	-	-

DCBX Commands

The following DCBX commands are supported on the Dell EMC Networking OS.

advertise dcbx-app-tlv

Configure DCBX to send iSCSI TLV advertisements.

Syntax	<code>advertise dcbx-app-tlv iscsi</code> To disable DCBX iSCSI TLV advertisements, use the <code>no advertise dcbx-app-tlv iscsi</code> command.								
Defaults	Enabled								
Command Modes	PROTOCOL LLDP								
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .								
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.3.12.0</td> <td>Introduced on the S4810.</td> </tr> <tr> <td>8.3.16.0</td> <td>Introduced on MXL 10/40GbE Switch IO Module.</td> </tr> </tbody> </table>	Version	Description	8.3.19.0	Introduced on the S4820T.	8.3.12.0	Introduced on the S4810.	8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.
Version	Description								
8.3.19.0	Introduced on the S4820T.								
8.3.12.0	Introduced on the S4810.								
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.								
Usage Information	You can configure iSCSI TLVs to send either globally or on a specified interface. The interface configuration takes priority over global configuration.								

advertise dcbx-appln-tlv

On a DCBX port with a manual role, configure the application priority TLVs advertised on the interface to DCBX peers.

Syntax	<code>advertise dcbx-appln-tlv {fcoe iscsi}</code> To remove the application priority TLVs, use the <code>no advertise dcbx-appln-tlv {fcoe iscsi}</code> command.				
Parameters	<p>{fcoe iscsi} Enter the application priority TLVs, where:</p> <ul style="list-style-type: none"> <code>fcoe</code>: enables the advertisement of FCoE in application priority TLVs. <code>iscsi</code>: enables the advertisement of iSCSI in application priority TLVs. 				
Defaults	Application priority TLVs are enabled to advertise FCoE and iSCSI.				
Command Modes	PROTOCOL LLDP				
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .				
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.7(0.0)</td> <td>Introduced on the S6000-ON and Z9500.</td> </tr> </tbody> </table>	Version	Description	9.7(0.0)	Introduced on the S6000-ON and Z9500.
Version	Description				
9.7(0.0)	Introduced on the S6000-ON and Z9500.				

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

To disable TLV transmission, use the `no` form of the command; for example, `no advertise dcbx-appln-tlv iscsi`.

advertise dcbx-tlv

On a DCBX port with a manual role, configure the PFC and ETS TLVs advertised to DCBX peers.

Syntax

```
advertise dcbx-tlv {ets-conf | ets-reco | pfc} [ets-conf | ets-reco | pfc]
[ets-conf | ets-reco | pfc]
```

To remove the advertised ETS TLVs, use the `no advertise dcbx-tlv` command.

Parameters

- {ets-conf | ets-reco | pfc}** Enter the PFC and ETS TLVs advertised, where:
- `ets-conf`: enables the advertisement of ETS configuration TLVs.
 - `ets-reco`: enables the advertisement of ETS recommend TLVs.
 - `pfc`: enables the advertisement of PFC TLVs.

Defaults

All PFC and ETS TLVs are advertised.

Command Modes

PROTOCOL LLDP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

You can configure the transmission of more than one TLV type at a time; for example: `advertise dcbx-tlv ets-conf ets-reco`.

You can enable ETS recommend TLVs (`ets-reco`) only if you enable ETS configuration TLVs (`ets-conf`). To disable TLV transmission, use the `no` form of the command; for example, `no advertise dcbx-tlv pfc ets-reco`.

DCBX requires that you enable LLDP to advertise DCBX TLVs to peers.

Configure DCBX operation at the INTERFACE level on a switch or globally on the switch. To verify the DCBX configuration on a port, use the `show interface dcbx detail` command.

dcbx port-role

Configure the DCBX port role the interface uses to exchange DCB information.

Syntax `dcbx port-role {config-source | auto-downstream | auto-upstream | manual}`
To remove DCBX port role, use the `no dcbx port-role {config-source | auto-downstream | auto-upstream | manual}` command.

Parameters

config-source auto-downstream auto-upstream manual	Enter the DCBX port role, where: <ul style="list-style-type: none">• <code>config-source</code>: configures the port to serve as the configuration source on the switch.• <code>auto-upstream</code>: configures the port to receive a peer configuration. The configuration source is elected from auto-upstream ports.• <code>auto-downstream</code>: configures the port to accept the internally propagated DCB configuration from a configuration source.• <code>manual</code>: configures the port to operate only on administer-configured DCB parameters. The port does not accept a DCB configuration received form a peer or a local configuration source.
---	---

Defaults **Manual**

Command Modes INTERFACE PROTOCOL LLDP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information DCBX requires that you enable LLDP to advertise DCBX TLVs to peers.

Configure DCBX operation at the INTERFACE level on a switch or globally on the switch. To verify the DCBX configuration on a port, use the `show interface dcbx detail` command.

dcbx version

Configure the DCBX version used on the interface.

Syntax `dcbx version {auto | cee | cin | ieee-v2.5}`
To remove the DCBX version, use the `dcbx version {auto | cee | cin | ieee-v2.5}` command.

Parameters

auto cee cin ieee-v2.5	Enter the DCBX version type used on the interface, where: <ul style="list-style-type: none">• <code>auto</code>: configures the port to operate using the DCBX version received from a peer.• <code>cee</code>: configures the port to use CDD (Intel 1.01).
-------------------------------------	---

- `cin`: configures the port to use Cisco-Intel-Nuova (DCBX 1.0).
 **NOTE:** For CIN, priority-group/traffic-class group wise bandwidth works and priority wise bandwidth configuration is ignored.
- `ieee-v2`: configures the port to use IEEE 802.1az (Draft 2.5).

Defaults Auto

Command Modes INTERFACE PROTOCOL LLDP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information DCBX requires that you enable LLDP to advertise DCBX TLVs to peers.

Configure DCBX operation at the INTERFACE level on a switch or globally on the switch. To verify the DCBX configuration on a port, use the `show interface dcbx detail` command.

debug dcbx

Enable DCBX debugging.

Syntax `debug dcbx {all | auto-detect-timer | config-exchng | fail | mgmt | resource | sem | tlv}`

To disable DCBX debugging, use the `no debug dcbx` command.

Parameters

{all auto-detect-timer config-exchng fail mgmt resource sem tlv}	Enter the type of debugging, where:
	<ul style="list-style-type: none"> • <code>all</code>: enables all DCBX debugging operations. • <code>auto-detect-timer</code>: enables traces for DCBX auto-detect timers. • <code>config-exchng</code>: enables traces for DCBX configuration exchanges. • <code>fail</code>: enables traces for DCBX failures. • <code>mgmt</code>: enables traces for DCBX management frames. • <code>resource</code>: enables traces for DCBX system resource frames. • <code>sem</code>: enables traces for the DCBX state machine. • <code>tlv</code>: enables traces for DCBX TLVs.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

fcoe priority-bits

Configure the FCoE priority advertised for the FCoE protocol in application priority TLVs.

Syntax `fcoe priority-bits priority-bitmap`
 To remove the configured FCoE priority, use the `no fcoe priority-bits` command.

Parameters *priority-bitmap* Enter the priority-bitmap range. The range is from 1 to FF.

Defaults 0x8

Command Modes PROTOCOL LLDP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information This command is available at the global level only.

iscsi priority-bits

Configure the iSCSI priority advertised for the iSCSI protocol in application priority TLVs.

Syntax `iscsi priority-bits priority-bitmap`
 To remove the configured iSCSI priority, use the `no iscsi priority-bits` command.

Parameters *priority-bitmap* Enter the priority-bitmap range. The range is from 1 to FF.

Defaults	0x10
Command Modes	PROTOCOL LLDP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information This command is available at the global level only.

show interface dcbx detail

Displays the DCBX configuration on an interface.

Syntax `show interface port-type dcbx detail`

Parameters *port-type* Enter the port type along with the port number.

 **NOTE:** This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.0.2.0	Introduced on the S6000.
9.2.(0.0)	Down status messages added.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information

To clear DCBX frame counters, use the `clear dcbx counters interface stack-unit/port` command.

The following describes the `show interface dcbx detail` command shown in the following example.

Field	Description
Interface	Interface type with chassis slot and port number.
Port-Role	Configured the DCBX port role: auto-upstream, auto-downstream, config-source, or manual.
DCBX Operational Status	Operational status (enabled or disabled) used to elect a configuration source and internally propagate a DCB configuration. The DCBX operational status is the combination of PFC and ETS operational status.
Configuration Source	Specifies whether the port serves as the DCBX configuration source on the switch: true (yes) or false (no).
Local DCBX Compatibility mode	DCBX version accepted in a DCB configuration as compatible. In auto-upstream mode, a port can only receive a DCBX version supported on the remote peer.
Local DCBX Configured mode	DCBX version configured on the port: CEE, cin , IEEE v2.5, or Auto (port auto-configures to use the DCBX version received from a peer).
Peer Operating version	DCBX version that the peer uses to exchange DCB parameters.
Local DCBX TLVs Transmitted	Transmission status (enabled or disabled) of advertised DCB TLVs (see TLV code at the top of the show command output).
Local DCBX Status: DCBX Operational Version	DCBX version advertised in Control TLVs.
Local DCBX Status: DCBX Max Version Supported	Highest DCBX version supported in Control TLVs.
Local DCBX Status: Sequence Number	Sequence number transmitted in Control TLVs.
Local DCBX Status: Acknowledgment Number	Acknowledgement number transmitted in Control TLVs.
Local DCBX Status: Protocol State	Current operational state of the DCBX protocol: ACK or IN-SYNC.
Peer DCBX Status: DCBX Operational Version	DCBX version advertised in Control TLVs received from the peer device.
Peer DCBX Status: DCBX Max Version Supported	Highest DCBX version supported in Control TLVs received from the peer device.

Field	Description
Peer DCBX Status: Sequence Number	Sequence number transmitted in Control TLVs received from the peer device.
Peer DCBX Status: Acknowledgment Number	Acknowledgement number transmitted in Control TLVs received from the peer device.
Total DCBX Frames transmitted	Number of DCBX frames sent from the local port.
Total DCBX Frames received	Number of DCBX frames received from the remote peer port.
Total DCBX Frame errors	Number of DCBX frames with errors received.
Total DCBX Frames unrecognized	Number of unrecognizable DCBX frames received.

Example

```
DelleMC# show interface tengigabitethernet 0/49 dcbx detail

E-ETS Configuration TLV enabled
  e-ETS Configuration TLV disabled
R-ETS Recommendation TLV enabled
  r-ETS Recommendation TLV disabled
P-PFC Configuration TLV enabled
  p-PFC Configuration TLV disabled
F-Application priority for FCOE enabled
  f-Application Priority for FCOE disabled
I-Application priority for iSCSI enabled
  i-Application Priority for iSCSI disabled
-----

Interface TenGigabitEthernet 0/49
  Remote Mac Address 00:00:00:00:00:11
  Port Role is Auto-Upstream
  DCBX Operational Status is Enabled
  Is Configuration Source? TRUE

Local DCBX Compatibility mode is CEE
  Local DCBX Configured mode is CEE
  Peer Operating version is CEE
  Local DCBX TLVs Transmitted: ErPfi

Local DCBX Status
-----
  DCBX Operational Version is 0
  DCBX Max Version Supported is 0
  Sequence Number: 2
  Acknowledgment Number: 2
  Protocol State: In-Sync

Peer DCBX Status:
-----
  DCBX Operational Version is 0
  DCBX Max Version Supported is 255
  Sequence Number: 2
  Acknowledgment Number: 2
  Total DCBX Frames transmitted 27
  Total DCBX Frames received 6
  Total DCBX Frame errors 0
  Total DCBX Frames unrecognized 0
```

dcb-map

Create a DCB map to configure priority flow control (PFC) and enhanced transmission selection (ETS) on Ethernet ports that support converged Ethernet traffic. Apply the DCB map to an Ethernet interface.

Syntax	<code>dcb-map map-name</code> To remove a DCB map from an ethernet interface, use the <code>no dcb-map</code> command.
Parameters	map-name Enter a DCB map name. The maximum number of alphanumeric characters is 32.
Defaults	None.
Command Modes	CONFIGURATION INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S4810 and S6000 platforms.

Usage Information	<p>A DCB map is a template used to configure DCB parameters and apply them on converged Ethernet interfaces. DCB parameters include priority-based flow control (PFC) and enhanced traffic selection (ETS).</p> <p>To display the PFC and ETS settings in DCB maps, enter the <code>show qos dcb-map name</code> command.</p> <p>Use the <code>dcb-map</code> command to create a DCB map to specify PFC and ETS settings and apply it on Ethernet ports. After you apply a DCB map to an interface, the PFC and ETS settings in the map are applied when the Ethernet port is enabled. DCBx is enabled on Ethernet ports by default.</p> <p>The <code>dcb-map</code> command is supported only on physical Ethernet interfaces.</p> <p>To remove a DCB map from an interface, enter the <code>no dcb-map map-name</code> command in Interface configuration mode.</p> <p>You can enable or disable pfc mode on the DCB mode using the <code>pfc mode on</code> or <code>pfc mode off</code> command.</p>
--------------------------	---

priority-pgid

Assign 802.1p priority traffic to a priority group in a DCB map.

Syntax	<code>priority-pgid dot1p0_group-num dot1p1_group-num dot1p2_group-num dot1p3_group-num dot1p4_group-num dot1p5_group-num dot1p6_group-num dot1p7_group-num</code>
Parameters	dot1p0-7_group-num Enter the priority group number for each 802.1p class of traffic in a DCB map.
Defaults	None
Command Modes	DCB MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S4810, S6000 platforms.

Usage Information

PFC and ETS settings are not pre-configured on Ethernet ports. You must use the `dcb-map` command to configure different groups of 802.1p priorities with PFC and ETS settings.

Using the `priority-pgid` command, you assign each 802.1p priority to one priority group. A priority group consists of 802.1p priority values that are grouped together for similar bandwidth allocation and scheduling, and that share latency and loss requirements. All 802.1p priorities mapped to the same queue must be in the same priority group. For example, the `priority-pgid 0 0 0 1 2 4 4 4` command creates the following groups of 802.1p priority traffic:

- Priority group 0 contains traffic with dot1p priorities 0, 1, and 2.
- Priority group 1 contains traffic with dot1p priority 3.
- Priority group 2 contains traffic with dot1p priority 4.
- Priority group 4 contains traffic with dot1p priority 5, 6, and 7.

To remove a `priority-pgid` configuration from a DCB map, enter the `no priority-pgid` command. For PFC enabled priorities, it is recommended to map single priority per Priority group.

pfc mode on

Enable the PFC configuration on the port so that the priorities are included in DCBX negotiation with peer PFC devices.

Syntax

```
pfc mode on
```

To disable the PFC configuration, use the `no pfc mode on` command.

Defaults

PFC mode is on.

Command Modes

DCB MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Introduced on the MXL 10/40GbE Switch with the FC Flex IO module.

Usage Information

By applying a DCB input policy with PFC enabled, you enable PFC operation on ingress port traffic. To achieve complete lossless handling of traffic, also enable PFC on all DCB egress ports or configure the dot1p priority-queue assignment of PFC priorities to lossless queues (refer to `pfc no-drop queues`).

To disable PFC operation on an interface, enter the `no pfc mode on` command in DCB Input Policy Configuration mode. PFC is enabled and disabled as global DCB operation is enabled (`dcb-enable`) or disabled (`no dcb-enable`).

You cannot enable PFC and link-level flow control at the same time on an interface.

i **NOTE:** We do not recommend to use this command as it has been deprecated in the current 9.4(0.0) release. A warning message appears when you try to run this command indicating that you have to use the `dcb-map` commands in the future.

priority-group bandwidth pfc

Configure the ETS bandwidth allocation and PFC mode used to manage port traffic in an 802.1p priority group.

Syntax `priority-group group-num {bandwidth percentage| strict-priority} [[committed | peak] | [peak | committed] {<0-10000>} [<0-10000>]] pfc {on | off}`

Parameters	priority-group group-num	Enter the keyword <code>priority-group</code> followed by the number of an 802.1p priority group. Use the <code>priority-pgid</code> command to create the priority groups in a DCB map.
	bandwidth percentage	Enter the keyword <code>bandwidth</code> followed by a bandwidth percentage allocated to the priority group. The range of valid values is 1 to 100. The sum of all allocated bandwidth percentages in priority groups in a DCB map must be 100%.
	strict-priority	Configure the priority-group traffic to be handled with strict priority scheduling. Strict-priority traffic is serviced first, before bandwidth allocated to other priority groups is made available.
	pfc {on off}	Configure whether priority-based flow control is enabled (on) or disabled (off) for port traffic in the priority group.

Defaults None

Command Modes DCB MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.6(0.0)	Added support to configure peak and committed rate on the S6000 platform.
9.3(0.0)	Introduced on the S4810, S6000 platforms.

Usage Information Use the `dcb-map` command to configure priority groups with PFC and/or ETS settings and apply them to Ethernet interfaces.

Use the `priority-pgid` command to map 802.1p priorities to a priority group. You can assign each 802.1p priority to only one priority group. A priority group consists of 802.1p priority values that are grouped together for similar bandwidth allocation and scheduling, and that share latency and loss requirements. All 802.1p priorities mapped to the same queue must be in the same priority group.

Repeat the `priority-group bandwidth pfc` command to configure PFC and ETS traffic handling for each priority group in a DCB map.

You can enable PFC on a maximum of two priority queues.

If you configure more than one priority group as strict priority, the higher numbered priority queue is given preference when scheduling data traffic.

If a priority group does not use its allocated bandwidth, the unused bandwidth is made available to other priority groups.

To remove a priority-group configuration in a DCB map, enter the `no priority-group bandwidth pfc` command.

By default, equal bandwidth is assigned to each dot1p priority in a priority group. Use the `bandwidth` parameter to configure the bandwidth percentage assigned to a priority group. The sum of the bandwidth allocated to all priority groups in a DCB map must be 100% of the bandwidth on the link. You must allocate at least 1% of the total port bandwidth to each priority group.

dcb-map stack-unit all stack-ports all

Apply the specified DCB map on all ports of the switch stack.

S5000

Syntax	<code>dcb-map stack-unit all stack-ports all dcb-map-name</code> To remove the PFC and ETS settings in a DCB map from all stack units, use the <code>no dcb-map stack-unit all stack-ports all</code> command.
Parameters	dcb-map-name Enter the name of the DCB map.
Defaults	none
Command Modes	CONFIGURATION
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	The <code>dcb-map stack-unit all stack-ports all</code> command overwrites any previous DCB maps applied to stack ports.
Related Commands	dcb-map – creates a DCB map to configure PFC and ETS parameters and applies the PFC and ETS settings on Ethernet ports.

show qos dcb-map

Display the DCB parameters configured in a specified DCB map.

Syntax	<code>show qos dcb-map map-name</code>								
Parameters	map-name Displays the PFC and ETS parameters configured in the specified map.								
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege								
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .								
	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.7(0.0)</td><td>Introduced on the S6000-ON.</td></tr><tr><td>9.3(0.0)</td><td>Introduced on the S4810 and S6000 platforms.</td></tr><tr><td>9.3(0.0)</td><td>Introduced on the FC Flex IO module installed in the MXL 10/40GbE Switch.</td></tr></tbody></table>	Version	Description	9.7(0.0)	Introduced on the S6000-ON.	9.3(0.0)	Introduced on the S4810 and S6000 platforms.	9.3(0.0)	Introduced on the FC Flex IO module installed in the MXL 10/40GbE Switch.
Version	Description								
9.7(0.0)	Introduced on the S6000-ON.								
9.3(0.0)	Introduced on the S4810 and S6000 platforms.								
9.3(0.0)	Introduced on the FC Flex IO module installed in the MXL 10/40GbE Switch.								
Usage Information	Use the <code>show qos dcb-map</code> command to display the enhanced transmission selection (ETS) and priority-based flow control (PFC) parameters used to configure server-facing Ethernet ports. S5000 Ethernet ports are DCBx-enabled by default.								

The following table describes the `show qos dcb-map` output shown in the example below.

Field	Description
State	Complete: All mandatory DCB parameters are correctly configured. In progress: The DCB map configuration is not complete. Some mandatory parameters are not configured.
PFC Mode	PFC configuration in DCB map: On (enabled) or Off.
PG	Priority group configured in the DCB map.
TSA	Transmission scheduling algorithm used by the priority group: Enhanced Transmission Selection (ETS).
BW	Percentage of bandwidth allocated to the priority group.
PFC	PFC setting for the priority group: On (enabled) or Off.
Priorities	802.1p priorities configured in the priority group.

Example

```
Dell# show qos dcb-map dcbmap2

State      :Complete
PfcMode:ON
-----
PG:0 TSA:ETS BW:50 PFC:OFF
Priorities:0 1 2 4 5 6 7

PG:1 TSA:ETS BW:50 PFC:ON
Priorities:3
```

dcb pfc-shared-buffer-size

Configure the maximum amount of shared buffer size for PFC packets in kilobytes.

Syntax `dcb pfc-shared-buffer-size buffer-size`

Parameters *buffer-size* Enter a number in the range of 0 to 7787.

Default The default is 832KB.

Command Modes CONFIGURATION mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P0)	The default value is changed to 1040 KB for the Z9100-ON and S6100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.6(0.0)	Introduced on the S5000.
9.3(0.0)	Introduced on the S4810, S4820T, and S6000 platforms.

Usage Information

Configure the maximum shared buffer available for PFC traffic. You can choose to increase or decrease the shared buffer that is allocated in the system by default. Configure the shared buffer size less than

the total PFC buffer size. If the shared buffer size is more than the total PFC buffer size value, the configuration is not saved and a system logging message is generated.

```
DellEMC(conf)#dcb pfc-shared-buffer-size 3000
% Error: Shared buffer size cannot be greater than the the available
buffer in the system
DellEMC(conf)#
```

Enter a smaller value for the shared buffer size or increase the total buffer size appropriately by using the `dcb pfc-total- buffer-size` command.

Example DellEMC(conf)#dcb pfc-shared-buffer-size 800

dcb-buffer-threshold

Configure the profile name for the DCB buffer threshold.

Syntax `dcb buffer-threshold profile-name`

Parameters **profile-name** Enter the name of the profile, which can be a string of up to 32 characters in length.

Default None

Command Modes CONFIGURATION mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.6(0.0)	Introduced on the S5000.
9.3(0.0)	Introduced on the S4810, S4820T, and S6000.

Usage Information When you enter the profile name, you enter the DCB buffer threshold configuration mode. You can specify the shared buffer threshold limit, the ingress buffer size, buffer limit for pausing the acceptance of packets, and the buffer offset limit for resuming the acceptance of received packets.

Example DellEMC(conf)#dcb-buffer-threshold test

Example of commands in dcb buffer-threshold mode `priority value buffer-size size pause-threshold threshold-value resume-offset threshold-value shared-threshold-weight size`

```
DellEMC(conf-dcb-buffer-thr)#priority 0 buffer-size 52 pause-threshold
16 resume-offset 10 shared-threshold-weight 7
```

`priority value buffer-size size pause-threshold threshold-value peak-headroom headroom-value resume-offset threshold-value shared-threshold-weight size`

```
DellEMC(conf-dcb-buffer)#priority value buffer-size size pause-threshold
threshold-value peak-headroom headroom-value resume-offset threshold-
value shared-threshold-weight size
```

priority

Configure the priority for the PFC threshold to be allocated to the buffer space parameters.

Syntax `priority value buffer-size size pause-threshold threshold-value resume-offset threshold-value shared-threshold-weight size`

Parameters	priority	Specify the priority of the queue for which the buffer space settings apply.
	value	Enter a number in the range of 0 to 7 to denote the priority to be allocated to the dynamic buffer control mechanism.
	buffer-size	Ingress buffer size.
	size	Size of the ingress buffer in KB. Enter a number in the range of 0 to 7787. The default is 45 KB.
	pause-threshold	Buffer limit for pause frames to be sent.  NOTE: In addition to the specified pause-threshold value, pause frames are sent only when the buffer usage exceeds some percentage of the shared buffer.
	threshold-value	Buffer limit at which the port sends the pause to peer in KB. Enter a number in the range of 0 to 7787. The default is 10 KB.
	resume-offset	Buffer offset limit for stopping the transmission of pause frames.
	threshold-value	Buffer offset limit at which the port resumes the peer in KB. Enter a number in the range of 1 to 7787. The default is 10 KB.
	shared-threshold-weight	Buffer shared threshold weight
	size	Weightage of the priorities on the shared buffer size in the system. Enter a number in the range of 0 to 9. The default shared threshold weight is 10.

Command Modes DCB-BUFFER-THRESHOLD mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P0)	Default values of buffer threshold profile parameters are changed for the Z9100-ON and S6100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Introduced on the S4810, S4820T, and S6000 platforms.

Usage Information For each priority, you can specify the shared buffer threshold limit, the ingress buffer size, buffer limit for pausing the acceptance of packets, and the buffer offset limit for resuming the acceptance of received packets. When PFC detects congestion on a queue for a specified priority, it sends a pause frame for the 802.1p priority traffic to the transmitting device.

You can use the `priority` command to set up both the administrative and peer-related PFC priorities. For example, you can configure the intended buffer configuration for all eight priorities. If you configure the number of lossless queues as 4 and if the administrator-configured priorities configured within the DCB input policy is applied, then the configuration for those priorities are pre-designed. However, if the peer-provided priorities are applied, although a DCB input policy is present, the peer-provided priorities become effective for buffer configuration. This method of configuration provides an easy and flexible technique to accommodate both administratively-configured and peer-configured priorities.

Example `DellEMC(conf-dcb-buffer-thr)# priority 0 buffer-size 52 pause-threshold 16 resume-offset 10 shared-threshold-weight 7`

qos-policy-buffer

Create a QoS policy buffer and enter the configuration mode to configure the no-drop queues, ingress buffer size, buffer limit for pausing, and buffer offset limit for resuming.

Syntax `qos-policy-buffer queue queue-num pause no-drop queue buffer-size size pause-threshold threshold-value resume-offset threshold-value shared-threshold-weight size`

Parameters	
policy-name	Name of the QoS policy buffer that is applied to an interface for this setting to be effective in conjunction with the DCB input policy. You can specify the shared buffer threshold limit, the ingress buffer size, buffer limit for pausing the acceptance of packets, and the buffer offset limit for resuming the acceptance of received packets. This method of configuration enables different peer-provided and administrative priorities to be set up because the intended queue is directly configured instead of determining the priority to queue mapping for local and remote parameters.
queue 0 to queue 7	Specify the queue number to which the QoS policy buffer parameters apply
pause	Pause frames to be sent at the specified buffer limit levels and pause packet settings
no-drop	The packets for this queue must not be dropped
value	Enter a number in the range of 0 to 7 to denote the priority to be allocated to the dynamic buffer control mechanism
buffer-size	Ingress buffer size
size	Size of the ingress buffer in KB. Enter a number in the range of 0 to 7787. The default is 45 KB.
pause-threshold	Buffer limit for pause frames to be sent
threshold-value	Buffer limit at which the port sends the pause to peer in KB. Enter a number in the range of 0 to 7787. The default is 10 KB.
resume-offset	Buffer offset limit for resuming in KB
threshold-value	Buffer offset limit at which the port resumes the peer in KB. Enter a number in the range of 1 to 7787. The default is 10 KB.
shared-threshold-weight	Buffer shared threshold weight
size	Weightage of the priorities on the shared buffer size in the system. Enter a number in the range of 0 to 9. The default shared threshold weight is 10.

Default The default size of the ingress buffer is 45 KB. The default buffer limit at which the port sends the pause to peer and recommences the sending of packets to the peer is 10 KB. The default threshold weight of the shared buffer space is 10.

Command Modes DCB-BUFFER-THRESHOLD mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S4810, S4820T, S6000, and MXL platforms.

Usage Information

You must apply this buffer policy at the interface level for the attributes to be applicable in conjunction with the DCB input policy.

For each QoS policy buffer, you can specify the shared buffer threshold limit, the ingress buffer size, buffer limit for pausing the acceptance of packets, and the buffer offset limit for resuming the acceptance of received packets. When PFC detects congestion on a queue for a specified priority, it sends a pause frame for the 802.1p priority traffic to the transmitting device.

You can use set up both the administrative and peer-related PFC priorities. For example, you can configure the intended buffer configuration for all 8 priorities. If you configure the number of lossless queues as 4 and if the administrator-configured priorities configured within the DCB input policy is applied, then the configuration for those priorities are pre-designed. However, if the peer-provided priorities are applied, although a DCB input policy is present, the peer-provided priorities become effective for buffer configuration. This method of configuration provides an easy and flexible technique to accommodate both administratively-configured and peer-configured priorities.

Example

```
Dell(conf)# qos-policy-buffer test

Dell(conf-qos-policy-buffer)#queue 0 pause no-drop buffer-size 128000
pause-threshold 103360 resume-threshold 83520

Dell(conf-qos-policy-buffer)# queue 4 pause no-drop buffer-size 128000
pause-threshold 103360 resume-threshold 83520
```

dcb-policy buffer-threshold (Interface Configuration)

Assign the DCB policy to the DCB buffer threshold profile on interfaces. This setting takes precedence over the global buffer-threshold setting.

Syntax `dcb-policy buffer-threshold profile-name`

Parameters

buffer-threshold	Configure the profile name for the DCB buffer threshold
<i>profile-name</i>	Enter the name of the profile, which can be a string of up to 32 characters in length.

Default None

Command Modes INTERFACE mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S4810, S4820T, and S6000 platforms.

Usage Information

You can configure up to a maximum of four lossless (PFC) queues. By configuring four lossless queues, you can configure four different priorities and assign a particular priority to each application that your network is used to process. For example, you can assign a higher priority for time-sensitive applications and a lower priority for other services, such as file transfers. You can configure the amount of buffer space to be allocated for each priority and the pause or resume thresholds for the buffer. This method of configuration enables you to effectively manage and administer the behavior of lossless queues.

Example

```
DellEMC(conf-if-te-1/1)# dcb-policy buffer-threshold test
```

dcb-policy buffer-threshold (Global Configuration)

Assign the dcb buffer threshold policy on the stack ports. To apply the dcb buffer threshold policy on the stack-units, use the configuration mode. To apply on front-end ports, use the interface mode.

Syntax	<code>dcb-policy buffer-threshold stack-unit all stack-ports all profile-name</code>	
Parameters	dcb-buffer-threshold	Configure the profile name for the DCB buffer threshold
	profile-name	Enter the name of the profile, which can be a string of up to 32 characters in length.
	stack-unit all	Enter the stack unit identification. Indicates the specific the stack unit or units. Entering all shows the status for all stacks.
	stack-port all	Enter the port number of a port in a switch stack.
Default	None	
Command Modes	CONFIGURATION mode	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.9(0.0)	Introduced on the S6000 and the S6000-ON.
9.8(0.0)	Introduced on the S4048-ON.
9.6(0.0)	Introduced on the S5000.
9.3(0.0)	Introduced on the S4810 and S4820T platforms.

Usage Information You can configure up to a maximum of four lossless (PFC) queues. By configuring four lossless queues, you can configure four different priorities and assign a particular priority to each application that your network is used to process. For example, you can assign a higher priority for time-sensitive applications and a lower priority for other services, such as file transfers. You can configure the amount of buffer space for each priority and the pause or resume thresholds for the buffer. This method of configuration enables you to manage and administer the behavior of lossless queues.

Example for Configuration Mode `Dell(conf)# dcb-policy buffer-threshold stack-unit all stack-ports all test`

Example for Interface Mode `Dell(conf-if-te-1/1)# dcb-policy buffer-threshold test`

show qos dcb-buffer-threshold

Displays the DCB buffer threshold assigned to a QoS policy.

Syntax	<code>show qos dcb buffer-threshold {name}</code>	
Parameters	name	Enter the name of the profile, which can be a string of up to 32 characters in length.
Command Modes	EXEC	
	EXEC Privilege	
Usage Information	The following table describes the output fields displayed for the <code>show</code> command:	

Field	Description
Name	Name of the DCB buffer threshold profile
Buffer threshold parameters	Buffer size allocated for the PFC priority queue and the priority of the queue

Example

```
Dell# show qos dcb buffer-threshold

Name      :      test1
Buffer threshold parameters:
pfc priority 0 buffer-size 40
pfc priority 3 buffer-size 50
```

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S6000 platform.

dcb pfc-total-buffer-size

Configure the total buffer size for PFC in kilobytes.

Syntax `dcb pfc-total-buffer-size buffer-size`

Parameters ***buffer-size*** Enter a number in the range of 0 to 7787.

Default The default is 6592KB.

Command Modes CONFIGURATION mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P0)	Default value is changed from 3088 KB to 2656 KB in the Z9100-ON and S6100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Introduced on the S5000.
9.3(0.0)	Introduced on the S6000, S4810, and S4820T.

Usage Information

Configure the maximum buffer available for PFC traffic. You can choose to increase or decrease the buffer size that is allocated in the system by default. However, if you modify the PFC buffer size lower than the previously configured size, the system determines whether this reduction in size is valid without disrupting the existing configuration. In such a scenario, disable and re-enable DCB.

The lossless queue limit per port is validated based on the `dcb pfc-queues` command. PFC queue configuration identifies the maximum number of queues a port can support. Although the queue limit per port is a baseline when dynamic buffering is enabled, the limit per port for queues depends on the availability of the buffer.

Example

```
DellEMC(conf)#dcb pfc-total-buffer-size 2800
DellEMC(conf)#

DellEMC#show dcb

DCB Status: Enabled, PFC Queue Count: 2

Total Buffer:          Total available buffer excluding the buffer pre-allocated
                      for guaranteed services like global headroom, queue's min
                      guaranteed buffer and CPU queues.

PFC Total Buffer:      Maximum buffer available for lossless queues.

PFC Shared Buffer:     Buffer used by ingress priority groups for shared usage.

PFC Headroom Buffer:   Buffer used by ingress priority group for shared headroom usage.
PFC Available Buffer:  Current buffer available for new lossless queues to be
                      Provisioned.

stack-unit Total Buffer PFC Total Buffer PFC Shared Buffer PFC Headroom Buffer PFC Available Buffer
          PP          (KB)          (KB)          (KB)          (KB)          (KB)          (KB)
-----
1          0.0      3399          2800          1040          1040          711
1          0.1      3399          2800          1040          1040          720
1          0.2      3399          2800          1040          1040          711
1          0.3      3399          2800          1040          1040          720
DellEMC#

DellEMC(conf)#dcb pfc-total-buffer-size 2000
% Error: Total buffer size should not be less than the buffer consumed already
in the system
DellEMC(conf)#
```

show running-config dcb-buffer-threshold

Displays the DCB buffer threshold details in the running configuration.

Syntax `show running-config dcb-buffer-threshold`

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S6000 platform.

Usage Information The following table describes the output fields displayed for the `show running-config dcb-buffer-threshold` command:

Field	Description
Field	Description
Profile name	Name of the DCB buffer threshold profile
Priority	The priority of the queue for which the buffer space settings apply
buffer-size	Ingress buffer size
pause-threshold-value	Buffer limit at which the port sends the pause to peer in KB.

Field	Description
resume-threshold-value	Buffer offset limit at which the port resumes the peer in KB.

Example

```
DellEMC# show running-config dcb-buffer-threshold
!
dcb-buffer-threshold test1
pfc priority 0 buffer-size 40
pfc priority 3 buffer-size 50
!
dcb-buffer-threshold test2
pfc priority 0 buffer-size 80 pause-threshold 50
!
dcb-buffer-threshold test3
pfc priority 0 buffer-size 80 pause-threshold 60 resume-threshold 30
```

On interface on which PFC is enabled:

```
Show interface tengigabitethernet 1/1 pfc buffer-threshold
-----
Queue#   Lossless   Buffer-size   Pause-threshold   Resume-offset   Shared threshold
(KB)      (KB)        (KB)          (KB)              weight
-----
0         No         -            -                 -              -
1         No         -            -                 -              -
2         Yes        -            20                -              9
3         Yes        52           25                15             0
4         Yes        -            45                25             5
5         No         -            -                 -              -
6         No         -            -                 -              -
7         No         -            -                 -              -
-        Denotes dynamic buffering is enabled in respective queues
```

On interface in which PFC is not enabled:

```
DellEMC#show interface tengigabitethernet 1/20 pfc buffer-threshold
```

The following table describes the output fields displayed for the `show interface pfc buffer-threshold` command:

Field	Description
queue	Number of the queue
lossless	Whether the queue is a lossy or lossless queue for which buffer threshold is configured
buffer-size	Ingress buffer size
pause-threshold-value	Buffer limit at which the port sends the pause to peer in KB.
resume-threshold-value	Buffer offset limit at which the port resumes the peer in KB.
shared threshold weight	Weightage of the priorities on the shared buffer size in the system.

service-class buffer shared-threshold-weight

Create a service class and associate the threshold weight of the shared buffer with each of the queues per port in the egress direction.

Syntax

```
[No] Service-class buffer shared-threshold-weight {[queue0 number] ||
[queue1 number] || [queue2 number] || [queue3 number] || [queue4 number] ||
[queue5 number] || [queue6 number] || [queue7 number]}
```

Parameters

buffer Define the shared buffer settings

shared-threshold-weight Specify the weight of a queue for the shared buffer space

queue 0 to queue 7 To apply the shared-threshold weight, specify the queue number

number Enter a weight for the queue on the shared buffer as a number in the range of 1 to 11.

Default The default threshold weight on the shared buffer for each queue is 9. Therefore, each queue can consume up to 66.67 percent of available shared buffer by default.

Command Modes INTERFACE mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.9(0.0)	Introduced on the Z9500, S4810, S4820T, S5000, and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Introduced on the S6000.

Usage Information You can configure all the data queues. You can configure queues 0-7.

The following table describes the mapping between the threshold weight of the shared buffer on the queue. It also shows the percentage of the available shared buffer used by the queues for each of the corresponding threshold weights of the shared buffer:

shared-threshold-weight on the queue	% of available shared buffer that can be consumed by the queue
0	No dynamic sharing; shared buffer = 0.
1	0.77%
2	1.54%
3	3.03%
4	5.88%
5	11.11%
6	20%
7	33.33%
8	50%
9	66.67%
10	80%
11	88.89%

Example

```
DellEMC(conf-if-te-1/8)# Service-class buffer shared-threshold-weight
queue5 4 queue7 6
```

dcb pfc-queues

Configure the number of PFC queues.

Syntax	<code>dcb pfc-queues value</code>
Parameters	value Enter the number of PFC queues in the range of 0 through 4. The number of ports supported based on lossless queues configured will depend on the buffer.
Default	The default number of PFC queues in the system is 2 for S4810 and 1 for S6000 platforms.
Command Modes	CONFIGURATION mode
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3(0.0)	Introduced on the S4810 and S6000 platforms.

Usage Information You can configure up to a maximum of four lossless (PFC) queues. By configuring four lossless queues, you can configure four different priorities and assign a particular priority to each application that your network is used to process. For example, you can assign a higher priority for time-sensitive applications and a lower priority for other services, such as file transfers. You can configure the amount of buffer space to be allocated for each priority and the pause or resume thresholds for the buffer. This method of configuration enables you to effectively manage and administer the behavior of lossless queues.

Example `DellEMC(conf)# dcb pfc-queues 4`

dcb {ets | pfc} enable

Enable priority flow control or enhanced transmission selection on interface.

Syntax `dcb {ets | pfc} enable`

- To disable ETS on interface, use “**no dcb ets enable**” command.
- To disable PFC on interface, use “**no dcb pfc enable**” command.

Defaults Enable

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.3 (0.1)	Introduced on S6000, S4810, and S4820T.

Usage Information PFC and ETS are enabled by default on the interfaces when DCB is globally enabled (refer to `dcb enable`). In some network topology, you may want to disable PFC on an interface and apply link level flow control; Similarly you may want to disable ETS on an interface and apply QoS bandwidth configurations.

Limitations

- “dcb-map” CLI on interface is mutually exclusive to “no dcb ets enable” and “no dcb pfc enable”.
- “pfc priority” CLI is mutually exclusive to “no dcb pfc enable” command.

Dynamic Host Configuration Protocol (DHCP)

Dynamic host configuration protocol (DHCP) is an application layer protocol that dynamically assigns IP addresses and other configuration parameters to network end-stations (hosts) based on the configuration policies the network administrators determine.

Topics:

- [Commands to Configure the System to be a DHCP Server](#)
- [Commands to Configure Secure DHCP](#)
- [Commands to Configure DNS](#)

Commands to Configure the System to be a DHCP Server

To configure the system to be a DHCP server, use the following commands.

clear ip dhcp

Reset the DHCP counters.

Syntax `clear ip dhcp [binding {address} | conflict | server statistics]`

Parameters	binding	Enter the keyword <code>binding</code> to delete all entries in the binding table.
	address	Enter the IP address to clear the binding entry for a single IP address.
	conflicts	Enter the keyword <code>conflicts</code> to delete all of the log entries created for IP address conflicts.
	server statistics	Enter the keywords <code>server statistics</code> to clear all the server counter information.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

Usage Information

Press Enter after the `clear ip dhcp binding` command clears all the IPs from the binding table.

debug ip dhcp server

Display Dell OS debugging messages for DHCP.

Syntax `debug ip dhcp server [events | packets]`

Parameters

- events** Enter the keyword `events` to display the DHCP state changes.
- packet** Enter the keyword `packet` to display packet transmission/reception.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

default-router

Assign a default gateway to clients based on the address pool.

Syntax	<code>default-router address [address2...address8]</code>
Parameters	address Enter a list of routers that may be the default gateway for clients on the subnet. You may specify up to eight routers. List them in order of preference.
Defaults	None
Command Modes	DHCP <POOL>
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

disable

Disable the DHCP server.

Syntax	<code>disable</code> DHCP Server is disabled by default. To enable the system to be a DHCP server, use the <code>no disable</code> command.
Defaults	Disabled
Command Modes	CONFIGURATION DHCP <POOL>
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

dns-server

Assign a DNS server to clients based on address pool.

Syntax	<code>dns-server address [address2...address8]</code>	
Parameters	<i>address</i>	Enter a list of DNS servers that may service clients on the subnet. You may list up to eight servers, in order of preference.
Defaults	None	
Command Modes	DHCP <POOL>	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

domain-name

Assign a domain to clients based on the address pool.

Syntax	domain-name <i>name</i>	
Parameters	<i>name</i>	Give a name to the group of addresses in a pool.
Defaults	None	
Command Modes	DHCP <POOL>	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

excluded-address

Prevent the server from leasing an address or range of addresses in the pool.

Syntax	excluded-address [<i>address</i> <i>low-address high-address</i>]	
Parameters	<i>address</i>	Enter a single address to be excluded from the pool.
	<i>low-address</i>	Enter the lowest address in a range of addresses to be excluded from the pool.
	<i>high-address</i>	Enter the highest address in a range of addresses to be excluded from the pool.
Defaults	None	

Command Modes DHCP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

hardware-address

For manual configurations, specify the client hardware address.

Syntax `hardware-address address`

Parameters **address** Enter the hardware address of the client.

Defaults None

Command Modes DHCP <POOL>

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

host

For manual (rather than automatic) configurations, assign a host to a single-address pool.

Syntax `host address`

Parameters `address/mask` Enter the host IP address and subnet mask.

Defaults None

Command Modes DHCP <POOL>

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

lease

Specify a lease time for the addresses in a pool.

Syntax `lease {days [hours] [minutes] | infinite}`

Parameters `days` Enter the number of days of the lease. The range is from 0 to 31.

`hours` Enter the number of hours of the lease. The range is from 0 to 23.

minutes Enter the number of minutes of the lease. The range is from 0 to 59.

infinite Specify that the lease never expires.

Defaults 24 hours

Command Modes DHCP <POOL>

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

netbios-name-server

Specify the NetBIOS Windows Internet Naming Service (WINS) name servers, in order of preference, that are available to Microsoft Dynamic Host Configuration Protocol (DHCP) clients.

Syntax netbios-name-server address [address2...address8]

Parameters **address** Enter the address of the NETBIOS name server. You may enter up to eight, in order of preference.

Defaults None

Command Modes DHCP <POOL>

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

netbios-node-type

Specify the NetBIOS node type for a Microsoft DHCP client. Dell EMC Networking recommends specifying clients as `hybrid`.

Syntax `netbios-node-type type`

Parameters

type	Enter the NETBIOS node type:
-------------	------------------------------

- Broadcast: Enter the keyword `b-node`.
- Hybrid: Enter the keyword `h-node`.
- Mixed: Enter the keyword `m-node`.
- Peer-to-peer: Enter the keyword `p-node`.

Defaults `Hybrid`

Command Modes `DHCP <POOL>`

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

network

Specify the range of addresses in an address pool.

Syntax	<code>network network /prefix-length</code>
Parameters	<i>network/ prefix-length</i> Specify a range of addresses. Prefix-length range is from 17 to 31.
Defaults	None
Command Modes	DHCP <POOL>
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

pool

Create an address pool.

Syntax	<code>pool name</code>
Parameters	<i>name</i> Enter the address pool's identifying name.
Defaults	None
Command Modes	DHCP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

show ip dhcp binding

Display the DHCP binding table.

Syntax `show ip dhcp binding`

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

show ip dhcp configuration

Display the DHCP configuration.

Syntax `show ip dhcp configuration [global | pool name]`

Parameters

pool name	Display the configuration for a DHCP pool.
global	Display the DHCP configuration for the entire system.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

Example

```
DellEMC# show ip dhcp configuration global

Protocol status      : Enabled
Number of ping packets : 1
DellEMC#

DellEMC# show ip dhcp configuration pool p1

Pool Name           : p1
Pool Type           : Dynamic
Domain Name         : dell.com
Lease Time          : 2Days 0Hrs 0Mins
DNS Servers         : 10.11.0.1
Default Routers    : 1.1.1.1
Network             : 1.1.1.0 255.255.255.0
```

show ip dhcp conflict

Display the address conflict log.

Syntax `show ip dhcp conflict address`

Parameters **address** Display a particular conflict log entry.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

show ip dhcp server

Display the DHCP server statistics.

Syntax `show ip dhcp server statistics`

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.

Commands to Configure Secure DHCP

DHCP, as defined by RFC 2131, provides no authentication or security mechanisms. Secure DHCP is a suite of features that protects networks that use dynamic address allocation from spoofing and attacks.

arp inspection

Enable dynamic arp inspection (DAI) on a VLAN.

Syntax `arp inspection`

Defaults Disabled

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
8.2.1.0	Introduced on the C-Series and S-Series.

Related Commands

- [arp inspection-trust](#) — specify a port as trusted so that ARP frames are not validated against the binding table.

arp inspection-trust

Specify a port as trusted so that ARP frames are not validated against the binding table.

Syntax `arp inspection-trust`

Defaults Disabled

- Command Modes**
- INTERFACE
 - INTERFACE PORT-CHANNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
8.2.1.0	Introduced on the C-Series and S-Series.

Related Commands

- [arp inspection](#) — enable dynamic ARP inspection on a VLAN.

clear ip dhcp snooping

Clear the DHCP binding table.

Syntax `clear ip dhcp snooping {binding | source-address-validation discard-counters [interface interface]}`

Parameters

binding	Clears the binding table.
source-address-validation discard-counters	Clears discard counters from all the interfaces configured with IP Source Guard.
interface <i>interface</i>	(OPTIONAL) Specifies an interface to clear the discard counters. Enter any of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Added the keywords <code>discard-counters</code> , <code>interface</code> , and the variable <code>interface</code> on the S4810, S4820T, S5000, S6000, Z9000, Z9500.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
8.2.1.0	Introduced on the C-Series and S-Series.

Example The following example shows how to clear the discard counters globally:

```
DelleMC> clear ip dhcp snooping source-address-validation discard-counters
```

The following example shows how to clear the discard counters on an interface:

```
DelleMC> clear ip dhcp snooping source-address-validation discard-counters interface TenGigE 1/10
```

The following example shows how to clear the discard counters on a port channel interface:

```
DelleMC> clear ip dhcp snooping source-address-validation discard-counters interface portchannel 1
```

Related Commands

- [show ip dhcp snooping](#) — display the contents of the DHCP binding table.

ip dhcp relay

Enable Option 82.

Syntax `ip dhcp relay information-option [remote-id {port | hostname:port | mac} | circuit-d {port | hostname:port | mac} | trust-downstream]`

Parameters		
remote-id		Enter the keyword <code>remote-id</code> to configure the system to enable the remote-id string in option-82.
remote-id port		Enter the keywords <code>remote-id port</code> to configure the port as the remote id in option-82.
remote-id hostname:port		Enter the keywords <code>remote-id hostname:port</code> to configure the format of the hostname and port attributes.
remote-id mac		Enter the keywords <code>remote-id mac</code> to configure the chassis MAC address as the remote-id in option-82.
circuit-id		Enter the keyword <code>circuit-id</code> to configure the system to enable the circuit-id string in option-82.
circuit-id port		Enter the keywords <code>circuit-id port</code> to configure the port as the circuit-id in option-82.
circuit-id hostname:port		Enter the keywords <code>circuit-id hostname:port</code> to configure the circuit-id format that is sent to the server.
circuit-id mac		Enter the keywords <code>circuit-id mac</code> to configure the chassis MAC address as the circuit-id in option-82.
trust-downstream		Configure the system to trust Option 82 when it is received from the previous-hop router.

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(0.2)	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping

Enable DHCP snooping globally.

Syntax [no] ip dhcp snooping

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the S4810 and S4820T.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.
8.2.1.0	Introduced on the C-Series and S-Series on Layer 2 interfaces.
7.8.1.0	Introduced on the C-Series and S-Series on Layer 3 interfaces.

Usage Information When enabled, no learning takes place until you enable snooping on a VLAN. After disabling DHCP snooping, the binding table deletes and Option 82, IP Source Guard, and Dynamic ARP Inspection are disabled.

Introduced in Dell EMC Networking OS version 7.8.1.0, DHCP snooping was available for Layer 3 only and dependent on DHCP Relay Agent (`ip helper-address`). Dell EMC Networking OS version 8.2.1.0 extends DHCP Snooping to Layer 2. You do not have to enable relay agent to snoop on Layer 2 interfaces.

ip dhcp snooping binding

Create a static entry in the DHCP binding table.

Syntax [no] ip dhcp snooping binding mac *address* vlan-id *vlan-id* ip *ip-address* interface *interface-type* lease *number*

Parameters

mac <i>address</i>	Enter the keyword <code>mac</code> then the MAC address of the host to which the server is leasing the IP address.
vlan-id <i>vlan-id</i>	Enter the keywords <code>vlan-id</code> then the VLAN to which the host belongs. The range is from 2 to 4094.
ip <i>ip-address</i>	Enter the keyword <code>ip</code> then the IP address that the server is leasing.

- interface *type*** Enter the keyword `interface` then the type of interface to which the host is connected:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- lease *time*** Enter the keyword `lease` then the amount of time the IP address are leased. The range is from 1 to 4294967295.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

- Related Commands**
- [show ip dhcp snooping](#) — display the contents of the DHCP binding table.

ip dhcp snooping database

Delay writing the binding table for a specified time.

Syntax `ip dhcp snooping database write-delay minutes`

Parameters ***minutes*** The range is from 5 to 21600.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping database renew

Renew the binding table.

Syntax `ip dhcp snooping database renew`

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping trust

Configure an interface as trusted.

Syntax [no] ip dhcp snooping trust

Defaults Untrusted

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp source-address-validation

Enable the IP Source Guard.

Syntax [no] ip dhcp source-address-validation [ipmac] [vlan *vlan-id*]

Parameters

ipmac	Enable IP+MAC Source Address Validation.
vlan <i>vlan-id</i>	(OPTIONAL) SAV validates the source IP address along with the source VLAN ID against the DHCP snooping binding table.

Defaults Disabled

Command Modes INTERFACE

INTERFACE PORTCHANNEL

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Added the <code>vlan</code> keyword and the <code>vlan-id</code> variable . Introduced support for SAV on port channels interfaces.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
8.2.1.0	Added the keyword <code>ipmac</code> .
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information

Allocate at least one FP block to `ipmacacl` before you can enable IP+MAC Source Address Validation and SAV with VLAN option.

1. Use the `cam-acl 12acl` command from CONFIGURATION mode.
2. Save the running-config to the startup-config.
3. Reload the system.

ip dhcp relay information-option

Enable Option 82.

Syntax

```
ip dhcp relay information-option [remote-id {hostname | mac | WORD}]  
[circuit-d {hostname:port}] [trust-downstream] [vpn]
```

Parameters

remote-id	Enter the keyword <code>remote-id</code> to configure the system to enable the remote-id string in option-82.
remote-id hostname	Enter the keywords <code>remote-id hostname</code> to configure the port as the remote id in option-82.
remote-id mac	Enter the keywords <code>remote-id mac</code> to configure the chassis MAC address as the remote-id in option-82.
remote-id WORD	Enter the <code>remote-id WORD</code> option to configure the system to enable the remote-id string in option 82.
circuit-id	Enter the keyword <code>circuit-id</code> to configure the system to enable the circuit-id string in option-82.

circuit-id hostname:port	Enter the keywords <code>circuit-id hostname:port</code> to configure the circuit-id format that is sent to the server.
trust-downstream	Configure the system to trust Option 82 when it is received from the previous-hop router.
vpn	Enter the keyword <code>vpn</code> to add VPN/VRF related sub-option to relay agent information Option 82. <i>i</i> NOTE: Adds the VPN/VRF related sub-options into the relay agent information option(82). When DHCP broadcasts are forwarded by the relay agent from clients to DHCP server.

Default Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P0)	Introduced the <code>circuit-id</code> attribute in the command.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on C-Series and S-Series.

Example

```
DellEMC(conf)# ip dhcp relay information-option vpn
```

ip dhcp snooping verify mac-address

Validate a DHCP packet's source hardware address against the client hardware address field (CHADDR) in the payload.

Syntax `[no] ip dhcp snooping verify mac-address`

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.2.1.0	Introduced on the C-Series and S-Series.

ip helper-address

Configures the destination broadcast address or the host address for DHCP server requests.

Syntax	<code>ip helper-address [vrf vrf-name] ip-address</code>
	To disable the destination broadcast address or the host address for DHCP server requests, use the <code>ip helper-address [vrf vrf-name] ip-address</code> command.
Parameters	
vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF through which the host address can be reached.
ip-address	Enter an IP address through which the host address can be reached.
Default	Disabled.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
Version 9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

Use this command on the interfaces where the DHCP clients are connected to forward the packets from clients to DHCP server and vice-versa.

Example

```
DellEMC(conf-if-te-1/12)# ip helper-address vrf jay 10.0.0.2
```

show ip dhcp snooping

Display the contents of the DHCP binding table or display the interfaces configured with IP Source Guard.

Syntax `show ip dhcp snooping [binding | source-address-validation [discard-counters [interface interface]]]`

Parameters

Parameters	Description
binding	Display the binding table.
source-address-validation	Display the interfaces configured with IP Source Guard.
discard-counters	(OPTIONAL) Display the number of dropped packets.
interface <i>interface</i>	(OPTIONAL) Specifies an interface to show the discard counters. Enter any of the following keywords and the interface information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a port channel interface, enter the keywords <code>port-channel</code> then a number.

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Added the <code>discard-counters</code> , <code>interface</code> keywords, and the <code>interface</code> variable.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.

Example

The following example displays the interfaces configured with IP Source Guard:

```
DellEMC> show ip dhcp snooping source-address-validation
ip sav access-list on TenGigabitEthernet 1/1
Total cam count 3
permit host 0.0.0.0 count (0 packets)
permit host 10.1.1.252 count (0 packets)
permit host 10.1.1.253 count (0 packets)
ipmac-vlan sav access-list on TenGigabitEthernet 1/2
Total cam count 4
permit host 0.0.0.0 host 00:00:00:00:00:00 count (0 packets)
permit vlan 10 host 10.1.1.1 host 00:00:00:aa:00:01 count (0 packets)
permit vlan 10 host 10.1.1.2 host 00:00:00:aa:00:02 count (0 packets)
permit vlan 20 host 10.2.2.1 host 00:00:00:aa:00:03 count (0 packets)
permit vlan 20 host 10.2.2.2 host 00:00:00:aa:00:04 count (0 packets)
```

The following example displays the port channel interfaces configured with IP Source Guard:

```
DellEMC> show ip dhcp snooping source-address-validation interface
portchannel 10
ipmac-vlan sav access-list on Port-channel 10 on stack-unit 0
Total cam count 5
permit host 0.0.0.0 host 00:00:00:00:00:00 count (0 packets)
permit vlan 10 host 1.1.1.1 host 00:00:00:00:01:01 count (0 packets)
permit vlan 10 host 1.1.1.2 host 00:00:00:00:01:02 count (0 packets)
permit vlan 10 host 1.1.1.3 host 00:00:00:00:01:03 count (0 packets)
ipmac-vlan sav access-list on Port-channel 10 on stack-unit 1
Total cam count 5
permit host 0.0.0.0 host 00:00:00:00:00:00 count (0 packets)
permit vlan 10 host 1.1.1.1 host 00:00:00:00:01:01 count (0 packets)
permit vlan 10 host 1.1.1.2 host 00:00:00:00:01:02 count (0 packets)
permit vlan 10 host 1.1.1.3 host 00:00:00:00:01:03 count (0 packets)
ipmac-vlan sav access-list on Port-channel 10 on stack-unit 2
Total cam count 5
permit host 0.0.0.0 host 00:00:00:00:00:00 count (0 packets)
permit vlan 10 host 1.1.1.1 host 00:00:00:00:01:01 count (0 packets)
permit vlan 10 host 1.1.1.2 host 00:00:00:00:01:02 count (0 packets)
permit vlan 10 host 1.1.1.3 host 00:00:00:00:01:03 count (0 packets)
```

 **NOTE:** The output for port-channel interfaces does not display the physical interface.

The following example displays the SAV discard counters on all interfaces:

```
DellEMC> show ip dhcp snooping source-address-validation discard-
counters
deny access-list on TenGigabitEthernet 1/1
Total cam count 1
deny count (0 packets)
deny access-list on TenGigabitEthernet 1/2
Total cam count 2
deny vlan 10 count (0 packets)
deny vlan 20 count (0 packets)
```

The following example displays the SAV discard counters on a particular interface:

```
DellEMC> show ip dhcp snooping source-address-validation discard-
counters interface TenGigabitEthernet 1/1
deny access-list on TenGigabitEthernet 1/1
Total cam count 2
deny vlan 10 count (0 packets)
deny vlan 20 count (0 packets)
```

The following example displays the SAV discard counters on a port channel interface:

```
DellEMC> show ip dhcp snooping source-address-validation discard-
counters interface portchannel 10
deny access-list on Port-channel 10 on stack-unit 0
Total cam count 1
deny vlan 10 count (0 packets)
deny access-list on Port-channel 10 on stack-unit 1
Total cam count 1
deny vlan 10 count (0 packets)
deny access-list on Port-channel 10 on stack-unit 2
Total cam count 1
deny vlan 10 count (0 packets)
```

NOTE: The output for port-channel interfaces does not display the physical interface. If the LAG member interfaces belong to different stack-units, the counters are displayed per stack-unit for that port channel.

Commands to Configure DNS

To configure the Domain Names Systems (DNS) on the system, use the following commands:

ip name-server

Configures one or more name server (DNS) IP addresses. You can configure up to six IP addresses.

Syntax `ip name-server [vrf vrf-name] ip-address [ip-address2] [ip-address3] [ip-address4] [ip-address5] [ip-address6]`

To undo the name server ip address configuration for VRF, use the `no ip name-server [vrf vrf-name] ip-address` command.

Parameters **vrf vrf-name** (Optional) Enter the key word `vrf` and then the name of the VRF to configure the name server IP addresses for that VRF.

ip-address [ip-address2] [ip-address3] [ip-address4] [ip-address5] [ip-address6] Enter the IP address of the name server in dotted decimal format.
NOTE: Use the additional `ip-address` parameters (`ip-address2` to `ip-address6`) in a sequential order to specify up to a maximum of six IP addresses per VRF.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information Use this command to associate the system with one or more DNS servers.

In a dual stack setup, the system sends both A (request for IPv4 — RFC 1035) and AAAA (request for IPv6 — RFC 3596) record requests to a DNS server even if only the `ip name-server` command is configured.

Example

```
• DellEMC(conf)#ip name-server vrf jay 2.2.2.2
• DellEMC(conf)#ip name-server vrf jay 2.2.2.2 3.3.3.3 4.4.4.4
  5.5.5.5 6.6.6.6 7.7.7.7
```

ip domain-name

Configures the default domain corresponding to a specific VRF. This domain is appended to the in complete DNS requests corresponding to the specified VRF.

Syntax `ip domain-name [vrf vrf-name] name`
To undo the domain name configuration corresponding to a specific VRF, use the `no ip domain-name [vrf vrf-name] name` command.

Parameters

vrf vrf-name	(Optional) Enter the key word <code>vrf</code> and then the name of the VRF to configure the domain corresponding to that VRF.
name	Enter the name of the domain to be appended to the in complete DNS requests corresponding to the specified VRF.

Defaults None

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S-Series and Z-Series.

Usage Information Use this command to configure a domain name corresponding to a VRF. This domain is appended to the in complete DNS requests corresponding to the specified VRF.

Example

```
DellEMC(conf)# ip domain-name vrf jay dell.com
```

ip domain-list

Adds a domain name to the DNS list. This domain name is appended to incomplete host names in DNS requests corresponding to a specific VRF.

Syntax `ip domain-list [vrf vrf-name] name`

To remove a domain name from DNS list, use the `no ip domain-list [vrf vrf-name] name` command.

Parameters

vrf vrf-name	(Optional) Enter the key word <code>vrf</code> and then the name of the VRF to add a domain name to the DNS list corresponding to that VRF.
name	Enter the name of the domain to be appended to the DNS list corresponding to the VRF.

Defaults None

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information Use this command to add domain names to the DNS lists corresponding to a specific VRF. You can add up to a maximum of six domain names to the DNS list corresponding to a VRF. This domain is used to complete the unqualified host names.

Example

```
DellEMC(conf)# ip domain-list vrf jay dell.com
DellEMC(conf)# ip domain-list vrf jay force10.com
```

ip host

Configures a mapping between the host name server and the IP address for a specific VRF. This mapping information is used by the name-to-IP address table to resolve host names.

Syntax `ip host [vrf vrf-name] name ip-address`

To undo the host name server to IP address mapping for VRFs, use the `no ip host [vrf vrf-name] name ip-address` command.

Parameters

vrf vrf-name	(Optional) Enter the key word <code>vrf</code> and then the name of the VRF to configure the name server to IP address mapping for that VRF.
---------------------	--

name Enter the name of the host to be associated with an IP address.

ip-address Enter the IP address of the name server in dotted decimal format.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information Use this command to create a mapping between a host name server and its IP addresses for a specific VRF.

Example

```
DellEMC(conf)# ip host vrf jay dell 1.1.1.1
```

clear host

Removes one or all dynamically learned host table entries for a specific VRF.

Syntax `clear host [vrf vrf-name] { * | host-name }`

Parameters

vrf vrf-name (Optional) Enter the key word `vrf` and then the name of the VRF to delete dynamically learned host table entries corresponding to that VRF.

host-name Enter the name of the host corresponding to which you want to delete the dynamically learnt host table entries.

***** Enter * to delete all host table entries.

Defaults None

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.4.(0.0)	Introduced on the S-Series and Z-Series.

**Usage
Information**

Use this command to delete one or all dynamically learned host table entries corresponding to a specific VRF.

Example

```
DelleMC# clear host vrf jay dell  
DelleMC# clear host vrf jay *
```

Equal Cost Multi-Path (ECMP)

Equal cost multi-path (ECMP) supports multiple "best paths" in next-hop packet forwarding to a destination device.

Topics:

- [ecmp-group](#)
- [hash-algorithm](#)
- [hash-algorithm ecmp](#)
- [hash-algorithm seed](#)
- [ip ecmp-group](#)
- [ip ecmp weighted](#)
- [link-bundle-monitor enable](#)
- [link-bundle-distribution trigger-threshold](#)
- [show config](#)
- [show link-bundle distribution](#)

ecmp-group

Provides a mechanism to monitor traffic distribution on an ECMP link bundle. A system log is generated when the standard deviation of traffic distribution on a member link exceeds a defined threshold.

Syntax `ecmp-group {ecmp-group-id interface interface | link-bundle-monitor}`
 To remove the selected interface, use the `ecmp-group no interface` command.
 To disable link bundle monitoring, use the `ecmp-group no link-bundle-monitor` command.

Parameters

ecmp-group ID Enter the identifier number for the ECMP group. The range is from 2 to 64.

interface Enter the following keywords and the interface information to add the interface to the ECMP group:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a LAG interface, enter the keywords `port-channel` then the slot/port information.

Defaults Off

Command Modes

- CONFIGURATION
- CONFIGURATION ECMP-GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

Usage Information

Using CONFIGURATION mode, create an ECMP group ID. You can then assign interfaces to the ECMP group using CONFIGURATION ECMP-GROUP mode. You can also enable on the port-channel configuration using the CONFIGURATION ECMP-GROUP command mode.

hash-algorithm

Changes the hash algorithm used to distribute traffic flows across a Port Channel and ECMP. The ECMP and LAG options are supported on the S-Series and Z-Series.

Syntax

```
hash-algorithm {algorithm-number | {ecmp {crc16 | crc16cc | crc32MSB |
crc32LSB | crc-upper | dest-ip | lsb | xor1 | xor2 | xor4 | xor8 | xor16}
[number] hg {crc16 | crc16cc | crc32MSB | crc32LSB | xor1 | xor2 | xor4
| xor8 | xor16} stack-unit stack-unit-number | port-set port-pipe | hg-
seed seed-value stack-unit | lag {checksum | crc | xor} [number] nh-ecmp
{checksum | crc | xor}[number] stack-unit number ip-sa-mask value ip-da-
mask value | seed seed-value }
```

To return to the default hash algorithm, use the `no hash-algorithm` command.

To return to the default ECMP hash algorithm, use the `no hash-algorithm ecmp algorithm-value` command.

Parameters

ecmp *crc16*
| *crc16cc* |
crc32MSB |
crc32LSB | *crc-*
upper | *dest-ip* |
lsb | *xor1* | *xor2*
| *xor4* | *xor8* |
xor16

Enter the keyword `ecmp` then one of the following options:

- *crc16*: Use CRC16_BISYNC — 16 bit CRC16-bisync polynomial (default)
- *crc16cc*: Use CRC16_CCITT — 16 bit CRC16 using CRC16-CCITT polynomial
- *crc32MSB*: Use CRC32_UPPER — MSB 16 bits of computed CRC32
- *crc32LSB*: Use CRC32_LOWER — LSB 16 bits of computed CRC32
- *crc-upper*: Uses the upper 32 bits of the key for the hash computation
- *dest-ip*: Uses the destination IP for ECMP hashing
- *lsb*: Returns the LSB of the key as the hash
- *xor1*: Use CRC16_BISYNC_AND_XOR1 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of xor1
- *xor2*: Use CRC16_BISYNC_AND_XOR2 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of xor2
- *xor4*: Use CRC16_BISYNC_AND_XOR4 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of xor4
- *xor8*: Use CRC16_BISYNC_AND_XOR8 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of xor8
- *xor16*: Use CR16 — 16 bit XOR

hg {*crc16* | *crc16cc* | *crc32MSB* | *crc32LSB* | *xor1* | *xor2* | *xor4* | *xor8* | *xor16*} stack-unit *stack-unit-number* | port-set *port-pipe*

Enter the keyword *hg* then one of the following options:

- *crc16*: Use CRC16_BISYNC — 16 bit CRC16-bisync polynomial (default)
- *crc16cc*: Use CRC16_CCITT — 16 bit CRC16 using CRC16-CCITT polynomial
- *crc32MSB*: Use CRC32_UPPER — MSB 16 bits of computed CRC32
- *crc32LSB*: Use CRC32_LOWER — LSB 16 bits of computed CRC32
- *xor1*: Use CRC16_BISYNC_AND_XOR1 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of *xor1*
- *xor2*: Use CRC16_BISYNC_AND_XOR2 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of *xor2*
- *xor4*: Use CRC16_BISYNC_AND_XOR4 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of *xor4*
- *xor8*: Use CRC16_BISYNC_AND_XOR8 — Upper 8 bits of CRC16-BISYNC and lower 8 bits of *xor8*
- *xor16*: Use CR16 — 16 bit XOR

Enter the keywords *stack-unit*, then a stack-unit number, to specify a stack-unit.

Enter the keywords *port-set* *port-pipe* then the port pipe number. The range is from 0 to 5.

hg-seed *seed-value* *stack-unit*

Enter the keywords *hg-seed* then the hash algorithm seed value. The range is from 0 to 2147483646.

Enter the keywords *stack-unit* then the stack unit number.

Enter the keywords *port-set* then the stack-unit port-pipe number.

lag *hash* *algorithm*

Enter the keywords *hg-seed* . The range is from 0 to 47.

nh-ecmp *hashalgorithm* *value*

(OPTIONAL) Enter the keyword **nh-ecmp** then the ECMP hash algorithm value.

stack-unit *number*

(OPTIONAL) : Enter the keyword **stack—unit** then the stack—unit slot number.

ip-sa-mask *value*

(OPTIONAL) Enter the keyword **ip-sa-mask** then the ECMP/LAG hash mask value. The range is from 0 to FF.

ip-da-mask *value*

(OPTIONAL) Enter the keyword **ip-da-mask** then the ECMP/LAG hash mask value. The range is from 0 to FF.

Defaults

IPSA and IPDA mask value is **FF** for the stack-unit.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.10(0.0)

Introduced on the S6100-ON.

9.9(0.0)

Added *flow-based-hashing* support for hashing on ECMP for S4820T, S6000, S4048 and Z9500.

9.8(2.0)

Introduced on the S3100 series.

9.8(1.0)

Introduced on the Z9100-ON.

9.8(0.0P5)

Introduced on the S4048-ON.

9.8(0.0P2)

Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Added the <code>nh-ecmp</code> option.
7.7.1.1	Added the <code>nh-ecmp</code> option.

Usage Information

To ensure that CRC is not used for LAG, set the default hash-algorithm method on E-Series systems. For example, `hash-algorithm ecmp xor lag checksum nh-ecmp checksum`.

The hash value calculated with the `hash-algorithm` command is unique to the entire unit. The hash algorithm command with the `stack-unit` option changes the hash for a particular stack-unit by applying the mask specified in the `IPSA` and `IPDA` fields.

The `stack-unit` option is applicable with the `lag-hash-align` microcode only. Any other microcode returns an error message as follows:

- `DellEMC(conf)#hash-algorithm linecard 5 ip-sa-mask ff ip-da-mask ff`
- `% Error: This command is not supported in the current microcode configuration`

In addition, the `linecard number ip-sa-mask value ip-da-mask value` option has the following behavior to maintain bi-directionality:

- When hashing is done on both `IPSA` and `IPDA`, the `ip-sa-mask` and `ip-da-mask` values must be equal. (Single Linecard).
- When hashing is done only on `IPSA` or `IPDA`, Dell EMC Networking OS maintains bi-directionality with masks set to `XX 00` for stack-unit 1 and `00 XX` for stack-unit 2 (`ip-sa-mask` and `ip-da-mask`). The mask value must be the same for both stack-units when using multiple stack-units as ingress (where `XX` is any value from `00` to `FF` for both stack-units). For example, assume that traffic is flowing between linecard 1 and linecard 2:
 - `hash-algorithm linecard 1 ip-sa-mask aa ip-da-mask 00`
 - `hash-algorithm linecard 2 ip-sa-mask 00 ip-da-mask aa`

The different hash algorithms are based on the number of Port Channel members and packet values. The default hash algorithm (number 0) yields the most balanced results in various test scenarios, but if the default algorithm does not provide a satisfactory distribution of traffic, use the `hash-algorithm` command to designate another algorithm.

When a Port Channel member leaves or is added to the Port Channel, the hash algorithm is recalculated to balance traffic across the members.

hash-algorithm ecmp

Change the hash algorithm used to distribute traffic flows across an ECMP (equal-cost multipath routing) group.

Term heading Description heading

Syntax

```
hash-algorithm ecmp {crc-upper} | {dest-ip} | {lsb}
```

To return to the default hash algorithm, use the `no hash-algorithm ecmp` command.

Term heading Description heading

Parameters	crc-upper	Uses the upper 32 bits of the key for the hash computation. The default is crc-lower .
	dest-ip	Uses the destination IP for ECMP hashing. The default is enabled .
	lsb	Returns the LSB of the key as the hash. The default is crc-lower .

Defaults	<ul style="list-style-type: none">• crc-lower• dest-ip enabled
-----------------	---

Command Modes	CONFIGURATION
----------------------	---------------

Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .
------------------------	---

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information	<p>The hash value calculated with the <code>hash-algorithm</code> command is unique to the entire chassis. The default ECMP hash configuration is crc-lower. This command takes the lower 32 bits of the hash key to compute the egress port and is the “fall-back” configuration if you have not configured anything else.</p> <p>The different hash algorithms are based on the number of ECMP group members and packet values. The default hash algorithm yields the most balanced results in various test scenarios, but if the default algorithm does not provide satisfactory distribution of traffic, use this command to designate another algorithm.</p> <p>When a member leaves or is added to the ECMP group, the hash algorithm is recalculated to balance traffic across the members.</p>
--------------------------	---

hash-algorithm seed

Select the seed value for the ECMP, LAG, and NH hashing algorithm.

Syntax	<code>hash-algorithm seed value [stack-unit slot/port] [port-set number]</code>
Parameters	seed value Enter the keyword <code>seed</code> then the seed value. The range is from 0 to 2,147,483,646.
	stack-unit slot/port Enter the keyword <code>stack-unit</code> then the slot/port number.
	port-set number Enter the keyword <code>port-set</code> then the port-pipe number. The value is 0.
Defaults	None
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the E-Series.

Usage Information

Deterministic ECMP sorts ECMPs in order even though RTM provides them in a random order. However, the hash algorithm uses as a seed the lower 12 bits of the chassis MAC, which yields a different hash result for every chassis. This behavior means that for a given flow, even though the prefixes are sorted, two unrelated chassis select different hops.

Dell provides a CLI-based solution for modifying the hash seed to ensure that on each configured system, the ECMP selection is same. When configured, the same seed is set for ECMP, LAG, and NH, and is used for incoming traffic only.

NOTE: While the seed is stored separately on each port-pipe, the same seed is used across all CAMs. You cannot separate LAG and ECMP but you can use different algorithms across the chassis with the same seed. If LAG member ports span multiple port-pipes and line cards, set the seed to the same value on each port-pipe to achieve deterministic behavior. If the hash algorithm configuration is removed, the hash seed does not go to the original factory default setting.

ip ecmp-group

Enable and specify the maximum number of ecmp that the L3 CAM hold for a route, By default, when maximum paths are not configured, the CAM can hold a maximum of 16 ecmp per route.

Syntax `ip ecmp-group {maximum-paths | {number} {path-fallback}`
To negate a command, use the `no ip ecmp-group maximum-paths {number}` command.

Parameters

- maximum-paths** Specify the maximum number of ECMP for a route. The range is 2 to 64.
- path-fallback** Use the keywords `path-fallback` to enable this feature. If you enable the feature, re-enter this keyword to disable the feature.

Defaults 16

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.

Usage Information

You must save the new ECMP settings to the startup-config (`write mem`) then reload the system for the new settings to take effect.

Related Commands

- [show ip cam stack-unit](#) – display content-addressable memory (CAM) entries for an S-Series switch.

ip ecmp weighted

Enables weighted ECMP calculations.

Syntax

`ip ecmp weighted`

To disable weighted ECMP calculations, enter the `no ip ecmp weighted` command.

Defaults

N/A

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series.

Usage Information

Enabling this CLI would inform the FIB to re-program the destination prefix paths with weights in the HW/CAM on the fly.

If disabled, the CLI would inform the FIB to re-program the destination prefix paths with no weights or regular ECMP.

Example

```
DellEMC(conf)# ip ecmp ?
weighted          Enables Weighted ECMP
DellEMC(conf)# ip ecmp weighted
DellEMC(conf)#do show running-config | grep ecmp
ip ecmp weighted
DellEMC(conf)#
DellEMC(conf)# no ip ecmp ?
```

```
weighted                               Disables Weighted ECMP
DellEMC(conf)# no ip ecmp weighted
DellEMC(conf)# do show running-config | grep ecmp
```

link-bundle-monitor enable

Provides a mechanism to enable monitoring of traffic distribution on an ECMP link bundle.

Syntax `link-bundle-monitor enable`
To exit from ECMP group mode, use the `exit` command.

Command Modes

- ECMP-GROUP
- PORT-CHANNEL INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

link-bundle-distribution trigger-threshold

Provides a mechanism to set the threshold to trigger when traffic distribution begins being monitored on an ECMP link bundle.

Syntax `link-bundle-distribution trigger-threshold [percent]`
To exit from ecmp group mode, use the `exit` command.

Parameters *percent* Indicate the threshold value when traffic distribution starts being monitored on an ECMP link bundle. The range is from 1 to 90%. The default is **60%**.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

show config

Display the ECMP configuration.

Syntax `show config`

Command Modes CONFIGURATION-ECMP-GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Related Commands

- [show running-config ecmp-group](#) — display interfaces, LAG, or LAG link bundles being monitored for uneven traffic distribution.

show link-bundle distribution

Display the link-bundle distribution for the interfaces in the bundle, type of bundle (LAG or ECMP), and the most recently calculated interface utilization (either bytes per second rate or maximum rate) for each interface.

Syntax `show link-bundle-distribution`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Example

```

DelleMC# show link-bundle-distribution
Link-bundle trigger threshold - 30

ECMP bundle - 64      Utilization[In Percent] - 0      Alarm State -
Inactive

Interface          Line Protocol  Utilization[In Percent]
Te 1/1             Up            0
Po 128             Up            0
Po 100             Up            0
DelleMC#

```

FIPS Cryptography

To configure federal information processing standards (FIPS) cryptography, use the following commands:

Topics:

- [fips mode enable](#)
- [show fips status](#)
- [show ip ssh](#)
- [ssh](#)

fips mode enable

Enable the FIPS cryptography mode on the platform.

Syntax	<code>[no] fips mode enable</code>														
	To disable the FIPS cryptography mode, use the <code>no fips mode enable</code> command.														
Default	Disabled														
Command Modes	CONFIGURATION														
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .														
	<table> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.5(0.1)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>9.1(0.0)</td> <td>Introduced on the Z9000.</td> </tr> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.3.12.0</td> <td>Introduced on the S4810.</td> </tr> </tbody> </table>	Version	Description	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.5(0.1)	Introduced on the Z9500.	9.1(0.0)	Introduced on the Z9000.	8.3.19.0	Introduced on the S4820T.	8.3.12.0	Introduced on the S4810.
Version	Description														
9.8(0.0P5)	Introduced on the S4048-ON.														
9.8(0.0P2)	Introduced on the S3048-ON.														
9.5(0.1)	Introduced on the Z9500.														
9.1(0.0)	Introduced on the Z9000.														
8.3.19.0	Introduced on the S4820T.														
8.3.12.0	Introduced on the S4810.														

Example

```
Dell (conf)# fips mode enable
WARNING: Enabling FIPS mode will close all SSH/Telnet connection,
restart those servers, and destroy all configured host keys.
proceed (y/n) ? y
Dell (conf)#
```

show fips status

Displays the status of the FIPS mode.

Syntax	<code>show fips status</code>
Defaults	None
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
9.1(0.0)	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
DelleMC# show fips status
FIPS Mode      : Disabled
DelleMC#

DelleMC#show fips status
FIPS Mode      : Enabled
DelleMC#
```

show ip ssh

Display information about established SSH sessions

Syntax show ip ssh

Defaults None

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Removed the support for hmac-sha2-256-96 algorithm.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
9.1(0.0)	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on S4810.

Example

```
DelleMC# show ip ssh
SSH server          : enabled.
SSH server version  : v2.
SSH server vrf      : default.
SSH server ciphers  : aes256-ctr, aes256-cbc, aes192-ctr, aes192-
cbc, aes128-ctr, aes128-cbc, 3des-cbc.
SSH server macs     : hmac-sha2-256, hmac-sha1, hmac-sha1-96,
hmac-md5, hmac-md5-96.
SSH server kex algorithms : diffie-hellman-group14-sha1.
Password Authentication : enabled.
Hostbased Authentication : disabled.
RSA Authentication    : disabled.
Vty Encryption HMAC Remote IP
```

With FIPS Mode enabled:

```
DelleMC# show ip ssh
SSH server : enabled.
SSH server version : v2.
SSH server vrf : default.
SSH server ciphers : 3des-cbc,aes128-cbc,aes192-cbc,aes256-
cbc,aes128-ctr,aes192-ctr,aes256-ctr.
SSH server macs : hmac-sha1-96.
SSH server kex algorithms : diffie-hellman-group14-sha1.
Password Authentication : enabled.
Hostbased Authentication : disabled.
RSA Authentication : disabled.
  Vty          Encryption      HMAC          Remote IP
0 3des-cbc hmac-sha1-96 10.1.20.48
1 3des-cbc hmac-sha1-96 10.1.20.48
```

With FIPS Mode disabled:

```
DelleMC# show ip ssh
SSH server : enabled.
SSH server version : v1 and v2.
SSH server vrf : default.
SSH server ciphers : 3des-cbc,aes128-cbc,aes192-cbc,aes256-
cbc,aes128-ctr,aes192-ctr,aes256-ctr.
SSH server macs : hmac-md5,hmac-md5-96,hmac-sha1,hmac-
sha1-96,hmac-sha2-256.
SSH server kex algorithms : diffie-hellman-group-exchange-sha1,diffie-
hellman-group1-sha1,diffie-hellman-group14-sha1.
Password Authentication : enabled.
Hostbased Authentication : disabled.
RSA Authentication : disabled.
  Vty          Encryption      HMAC          Remote IP
0 3des-cbc hmac-sha1-96 10.1.20.48
1 3des-cbc hmac-sha1-96 10.1.20.48
```

ssh

Open an SSH connection specifying the hostname, username, port number, and version of the SSH client.

Syntax `ssh {hostname|ipv4 address|ipv6 address} [-c encryption cipher|-l username|-m HMAC algorithm|-p port-number|-v {1|2}]`

Parameters

- | | |
|-----------------------------|--|
| hostname | (OPTIONAL) Enter the IP address or the hostname of the remote device. |
| ipv4 address | (OPTIONAL) Enter the IP address in dotted decimal format A.B.C.D. |
| ipv6 addressprefix | (OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128
 NOTE: The :: notation specifies successive hexadecimal fields of zeros. |
| -c encryption cipher | Enter the following encryption cipher to use. (For v2 clients only.) <ul style="list-style-type: none">• 3des-cbc: Force ssh to use 3des-cbc encryption cipher. FIPS mode is enabled or disabled: <ul style="list-style-type: none">• aes256-ctr: Force ssh to use the aes256-ctr encryption cipher.• aes256-cbc: Force ssh to use the aes128-cbc encryption cipher.• aes192-ctr: Force ssh to use the aes128-cbc encryption cipher.• aes192-cbc: Force ssh to use the aes256-cbc encryption cipher.• aes128-ctr: Force ssh to use the aes256-cbc encryption cipher.• aes128-cbc: Force ssh to use the aes128-cbc encryption cipher.• 3des-cbc: Force ssh to use 3des-cbc encryption cipher. |

- l username** (OPTIONAL) Enter the keyword `-l` then the user name used in this SSH session. The default is the user name of the user associated with the terminal.
- m HMAC algorithm** Enter one of the following HMAC algorithms to use. (For v2 clients only.):
Without the FIPS mode enabled:
- `hmac-sha1-96`: Force ssh to use the hmac-sha1-96 HMAC algorithm.
 - `hmac-sha1`: Force ssh to use the hmac-sha1 HMAC algorithm.
 - `hmac-md5-96`: Force ssh to use the hmac-md5-96 HMAC algorithm.
 - `hmac-md5`: Force ssh to use the hmac-md5 HMAC algorithm.
- With the FIPS mode enabled:
- `hmac-sha2-256`: Force ssh to use the hmac-sha2-256 HMAC algorithm.
 - `hmac-sha1-96`: Force ssh to use the hmac-sha1-96 HMAC algorithm.
 - `hmac-sha1`: Force ssh to use the hmac-sha1 HMAC algorithm.
 - `hmac-md5-96`: Force ssh to use the hmac-md5-96 HMAC algorithm.
 - `hmac-md5`: Force ssh to use the hmac-md5 HMAC algorithm.
- p port-number** (OPTIONAL) Enter the keyword `-p` then the port number. The range is 1 to 65535.
- v {1|2}** (OPTIONAL) Enter the keyword `-v` then the SSH version 1 or 2. The default: The version from the protocol negotiation.
-  **NOTE:** If the FIPS mode is enabled, this option does not display in the output.

Defaults See *Parameters*.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Removed the support for hmac-sha2-256-96 algorithm.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
9.1(0.0)	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Related Commands

- ip ssh server** Configure an SSH server.
- show ip ssh client-pub-keys** Display the client-public keys.

Usage Information Dell EMC Networking OS supports both inbound and outbound SSH sessions using IPv4 or IPv6 addressing. Inbound SSH supports accessing the system through the management interface as well as through a physical Layer 3 interface.

 **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

Example **If FIPS mode is not enabled:**

```
DellEMC# ssh 10.10.10.10 ?
-c Encryption cipher to use (for v2 clients only)
```

```

-l    User name option
-m    HMAC algorithm to use (for v2 clients only)
-p    SSH server port option (default 22)
-v    SSH protocol version
<cr>
Dell EMC# ssh 10.10.10.10 -c ?
3des-cbc          Force ssh to use 3des-cbc encryption cipher
aes128-cbc        Force ssh to use aes128-cbc encryption cipher
aes192-cbc        Force ssh to use aes192-cbc encryption cipher
aes256-cbc        Force ssh to use aes256-cbc encryption cipher
aes128-ctr        Force ssh to use aes128-ctr encryption cipher
aes192-ctr        Force ssh to use aes192-ctr encryption cipher
aes256-ctr        Force ssh to use aes256-ctr encryption cipher
Dell EMC# ssh 10.10.10.10 -m ?
hmac-md5          Force ssh to use hmac-md5 HMAC algorithm
hmac-md5-96       Force ssh to use hmac-md5-96 HMAC algorithm
hmac-sha1         Force ssh to use hmac-sha1 HMAC algorithm
hmac-sha1-96      Force ssh to use hmac-sha1-96 HMAC algorithm
hmac-sha2-256     Force ssh to use hmac-sha2-256 HMAC algorithm

```

With FIPS mode enabled:

```

Dell EMC# ssh 10.10.10.10 ?
-c    Encryption cipher to use (for v2 clients only)
-l    User name option
-m    HMAC algorithm to use (for v2 clients only)
-p    SSH server port option (default 22)
<cr>
Dell EMC# ssh 10.10.10.10 -c ?
3des-cbc          Force ssh to use 3des-cbc encryption cipher
aes128-cbc        Force ssh to use aes128-cbc encryption cipher
aes192-cbc        Force ssh to use aes192-cbc encryption cipher
aes256-cbc        Force ssh to use aes256-cbc encryption cipher
aes128-ctr        Force ssh to use aes128-ctr encryption cipher
aes192-ctr        Force ssh to use aes192-ctr encryption cipher
aes256-ctr        Force ssh to use aes256-ctr encryption cipher
Dell EMC#ssh 10.10.10.10 -m ?
hmac-sha1         Force ssh to use hmac-sha1 HMAC algorithm
hmac-sha1-96      Force ssh to use hmac-sha1-96 HMAC algorithm
hmac-sha2-256     Force ssh to use hmac-sha2-256 HMAC algorithm

```

FIP Snooping

In a converged Ethernet network, a switch can operate as an intermediate Ethernet bridge to snoop on FIP packets during the login process on Fibre Channel over Ethernet (FCoE) forwarders (FCFs). Acting as a transit FIP snooping bridge, the switch uses dynamically created access control lists (ACLs) to permit only authorized FCoE traffic to transmit between an FCoE end-device and an FCF.

Topics:

- [clear fip-snooping database interface vlan](#)
- [clear fip-snooping statistics](#)
- [debug fip snooping](#)
- [debug fip snooping rx](#)
- [feature fip-snooping](#)
- [fip-snooping enable](#)
- [fip-snooping fc-map](#)
- [fip-snooping max-sessions-per-enodemac](#)
- [fip-snooping port-mode fcf](#)
- [fip-snooping port-mode fcoe-trusted](#)
- [show fip-snooping config](#)
- [show fip-snooping enode](#)
- [show fip-snooping fcf](#)
- [show fip-snooping sessions](#)
- [show fip-snooping statistics](#)
- [show fip-snooping system](#)
- [show fip-snooping vlan](#)
- [show fips status](#)

clear fip-snooping database interface vlan

Clear FIP snooping information on a VLAN for a specified FCoE MAC address, ENode MAC address, or FCF MAC address, and remove the corresponding ACLs FIP snooping generates.

Syntax `clear fip-snooping database interface vlan {vlan-id} enode {enode-mac-address} | fcf {fcf-mac-address} | session {session-mac-address}`

Parameters

<i>enode-mac-address</i>	Enter the ENode MAC address of the session which has to be cleared.
<i>fcf-mac-address</i>	Enter the FCF MAC address of the session which has to be cleared.
<i>session-mac-address</i>	Enter the MAC address of the session which has to be cleared.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

clear fip-snooping statistics

Clears the statistics on the FIP packets snooped on all VLANs, a specified VLAN, or a specified port interface.

Syntax `clear fip-snooping statistics [interface vlan vlan-id | interface port-type slot/port | interface port-channel port-channel-number]`

Parameters

- vlan-id*** Enter the VLAN ID of the FIP packet statistics to be cleared.
- port-type slot/port*** Enter the slot number and port-type of the FIP packet statistics to be cleared.
- port-channel-number*** Enter the port channel number of the FIP packet statistics to be cleared.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100–ON.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

debug fip snooping

Enable debugging on FIP snooping.

Syntax `debug fip-snooping [all | acl | error | ifm | info | ipc | ns | rscn | rx | tx]`

Parameters

- all** Enter the keyword `all` to enable debugging on all the options.
- acl** Enter the keyword `acl` for ACL-specific debugging.
- error** Enter the keyword `error` for error-specific debugging.
- ifm** Enter the keyword `ifm` for IFM-specific debugging.

info	Enter the keyword <code>info</code> for information-specific debugging.
ipc	Enter the keyword <code>ipc</code> for IPC-specific debugging.
ns	Enter the keyword <code>ns</code> for name-server-specific debugging.
rscn	Enter the keyword <code>rscn</code> for RSCN-specific debugging.
rx	Enter the keyword <code>rx</code> for packet receive-specific debugging.
tx	Enter the keyword <code>tx</code> for packet transmit-specific debugging.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

debug fip snooping rx

Enable debugging for FIP snooping receive-specific packets.

Syntax `debug fip-snooping rx packet-type [all | discovery | ns | virtual-link-instantiation | virtual-link-maintenance | vlan-discovery] [interface]`

Parameters

packet-type Enter the keyword `packet-type` and then the option type on which to enable debugging. The options are:

- `all` — Enter the keyword `all` to enable debugging on all the options.
- `discovery` — Enter the keyword `discovery` to enable debugging on FCF advertisements and ENode solicitation.
- `ns` — Enter the keyword `ns` to enable debugging of the name-server packets.
- `virtual-link-instantiation` — Enter the keywords `virtual-link-instantiation` to enable debugging on FLOGI, FDISC, and FLOGO packets.
- `virtual-link-maintenance` — Enter the keywords `virtual-link-maintenance` to enable debugging on FIP clear virtual link frames and keepalives.
- `vlan-discovery` — Enter the keywords `vlan-discovery` to enable debugging on VLAN requests and notifications.

interface Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
9.2(0.2)	Introduced on the S4810 and S4820T. Added the receive parameters <code>packet-type</code> and <code>interfaces</code> and their options.

feature fip-snooping

Enable FCoE transit and FIP snooping on a switch.

Syntax

```
feature fip-snooping
```

To disable the FCoE transit feature, use the `no feature fip-snooping` command.

Defaults

Disabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information

Before enabling FIP snooping, assign the `fcoeacl` space using the `cam-acl` command. If not assigned, the following error message is displayed:

```
DellEMC(conf)#feature fip-snooping
% Error: Cannot enable fip snooping. CAM Region not allocated for Fcoe.

DellEMC(conf)#cam-acl 12acl 2 ipv4acl 0 ipv6acl 0 ipv4qos 2 l2qos 0 l2pt
0 ipmacacl 0 vman-qos 0 fcoeacl 2 etsacl 1 iscsi 2
DellEMC(conf)#feature fip-snooping
```

fip-snooping enable

Enable FIP snooping on all VLANs or on a specified VLAN.

Syntax `fip-snooping enable`
To disable the FIP snooping feature on all or a specified VLAN, use the `no fip-snooping enable` command.

Defaults FIP snooping is disabled on all VLANs.

- Command Modes**
- CONFIGURATION
 - VLAN INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information The maximum number of FCFs supported per FIP snooping-enabled VLAN is 12. The default number of FIP snooping sessions supported per ENode server is 32. The maximum number of FIP snooping sessions supported per ENode server is 64.

fip-snooping fc-map

Configure the FC-MAP value FIP snooping uses on all VLANs.

Syntax `fip-snooping fc-map fc-map-value`
To return the configured FM-MAP value to the default value, use the `no fip-snooping fc-map` command.

Parameters `fc-map-value` Enter the FC-MAP value FIP snooping uses. The range is from 0EFC00 to 0EFCFF.

Defaults `0x0EFC00`

- Command Modes**
- CONFIGURATION
 - VLAN INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

fip-snooping max-sessions-per-enodemac

Configure the maximum number of FIP-snooping sessions supported on the switch for an ENode MAC address.

S5000

Syntax	<code>fip-snooping max-sessions-per-enodemac max-value</code> To remove the configured number of supported sessions, use the <code>no fip-snooping max-sessions-per-enodemac</code> command.
Parameters	max-value Enter the maximum number of FIP snooping sessions with an ENode that are supported on the switch. The range is 1 to 64.
Defaults	32
Command Modes	• CONFIGURATION
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	The maximum number of supported FIP snooping sessions that you configure is displayed in the running configuration (if it is not the default value) and in <code>show fip-snooping config</code> output. If you configure a smaller number of supported sessions than was previously configured, all current FIP snooping sessions continue and a warning message is displayed. If a greater number of sessions are active with an ENode, additional sessions are not allowed as long as the total number is greater than the newly configured limit. When the maximum number of FIP snooping sessions for an ENode are already active on the switch, a log message is recorded if the ENode tries to log in to initiate another session.

fip-snooping port-mode fcf

Configure the port for bridge-to-FCF links.

Syntax	<code>fip-snooping port-mode fcf</code> To disable the bridge-to-FCF link on a port, use the <code>no fip-snooping port-mode fcf</code> command.						
Command Modes	INTERFACE						
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .						
	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S6100-ON.
Version	Description						
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.						
9.10(0.0)	Introduced on the S6100-ON.						

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information

The maximum number of FCFs supported per FIP snooping-enabled VLAN is four.

fip-snooping port-mode fcoe-trusted

Configure the port for bridge-to-bridge links. It is not recommended to use this command because multi-hop FSB is not supported.

Syntax `fip-snooping port-mode fcoe-trusted`

To remove the bridge-to-bridge link configuration from the port, use the `no fip-snooping port-mode fcoe-trusted` command.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	This command is deprecated.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Usage Information

 **NOTE:** This command is deprecated from the Dell EMC Networking OS.

show fip-snooping config

Display the FIP snooping status and configured FC-MAP values.

Syntax `show fip-snooping config`

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
DelleMC# show fip-snooping config
FIP Snooping Feature enabled Status: Enabled
FIP Snooping Global enabled Status: Enabled
Global FC-MAP Value: 0X0EFC00

FIP Snooping enabled VLANs
VLAN    Enabled    FC-MAP
----    -
100     TRUE       0X0EFC00
```

show fip-snooping enode

Display information on the ENodes in FIP-snooped sessions, including the ENode interface and MAC address, FCF MAC address, VLAN ID and FC-ID.

Syntax `show fip-snooping enode [enode-mac-address]`

Parameters

enode-mac-address Enter the MAC address of the ENodes to display.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information The following describes the `show fip-snooping enode` command shown in the following example.

Field	Description
ENode MAC	MAC address of the ENode.
ENode Interface	Slot/ port number of the interface connected to the ENode.
FCF MAC	MAC address of the FCF.

Field	Description
VLAN	VLAN ID number the session uses.
FC-ID	Fibre Channel session ID the FCF assigns.

Example

```
DellEMC# show fip-snooping enode
Enode MAC           Enode Interface  FCF MAC           VLAN FC-ID
-----
d4:ae:52:1b:e3:cd Te 1/11           54:7f:ee:37:34:40 100 62:00:11
```

show fip-snooping fcf

Display information on the FCFs in FIP-snooped sessions, including the FCF interface and MAC address, FCF interface, VLAN ID, FC-MAP value, FKA advertisement period, and number of ENodes connected.

Syntax `show fip-snooping fcf [fcf-mac-address]`

Parameters **fcf-mac-address** Enter the MAC address of the FCF to display.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information The following describes the `show fip-snooping fcf` command shown in the following example.

Field	Description
FCF MAC	MAC address of the FCF.
FCF Interface	Slot/port number of the interface to which the FCF is connected.
VLAN	VLAN ID number the session uses.
FC-MAP	FC-Map value the FCF advertises.
ENode Interface	Slot/ number of the interface connected to the ENode.
FKA_ADV_PERIOD	Time (in milliseconds) during which FIP keep-alive advertisements transmit.
No of ENodes	Number of ENodes connected to the FCF.
FC-ID	Fibre Channel session ID the FCF assigns.

Example

```
DellEMC# show fip-snooping fcf
FCF MAC           FCF Interface  VLAN FC-MAP FKA_ADV_PERIOD No. of Enodes
```

show fip-snooping sessions

Display information on FIP-snooped sessions on all VLANs or a specified VLAN, including the ENode interface and MAC address, the FCF interface and MAC address, VLAN ID, FCoE MAC address and FCoE session ID number (FC-ID), worldwide node name (WWNN) and the worldwide port name (WWPN).

C9000 Series

Syntax `show fip-snooping sessions [interface vlan vlan-id]`

Parameters *vlan-id* Enter the vlan-id of the specified VLAN to display.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information The following describes the `show fip-snooping sessions` command shown in the following example.

Field	Description
ENode MAC	MAC address of the ENode.
ENode Interface	Slot/ port number of the interface connected to the ENode.
FCF MAC	MAC address of the FCF.
FCF Interface	Slot/ port number of the interface to which the FCF is connected.
VLAN	VLAN ID number the session uses.
FCoE MAC	MAC address of the FCoE session the FCF assigns.
FC-ID	Fibre Channel ID the FCF assigns.
Port WWPN	Worldwide port name of the CNA port.
Port WWNN	Worldwide node name of the CNA port.

Example

```
Dell# show fip-snooping sessions
Enode MAC          Enode Intf  FCF MAC          FCF Intf  VLAN  FCoE MAC
-----
FC-ID             Port WWPN          Port WWNN
-----
aa:bb:cc:00:00:00 Te 1/1    aa:bb:cf:00:00:00 Te 4/1
```

```

2      0e:fc:00:01:00:02 01:00:02 31:00:0e:fc:00:00:00:00
21:00:0e:fc:00:00:00:00
aa:bb:cd:00:00:00 Te 2/1      aa:bb:cf:00:00:00 Te 4/1
2      0e:fc:00:01:00:01 01:00:01 31:00:0e:fc:00:00:00:01
21:00:0e:fc:00:00:00:01
aa:bb:ce:00:00:00 Te 3/1      aa:bb:cf:00:00:00 Te 4/1
2      0e:fc:00:01:00:03 01:00:03 31:00:0e:fc:00:00:00:02
21:00:0e:fc:00:00:00:02

```

```

Dell# show fip-snooping sessions
Enode MAC          Enode Intf  FCF MAC          FCF Intf VLAN  FCoE MAC
   FC-ID          Port WWPN          Port WWNN          -----
-----
aa:bb:cc:00:00:00 Te 1/1/1      aa:bb:cf:00:00:00 Te 4/1/1
2      0e:fc:00:01:00:02 01:00:02 31:00:0e:fc:00:00:00:00
21:00:0e:fc:00:00:00:00
aa:bb:cd:00:00:00 Te 2/1/1      aa:bb:cf:00:00:00 Te 4/1/1
2      0e:fc:00:01:00:01 01:00:01 31:00:0e:fc:00:00:00:01
21:00:0e:fc:00:00:00:01
aa:bb:ce:00:00:00 Te 3/1/1      aa:bb:cf:00:00:00 Te 4/1/1
2      0e:fc:00:01:00:03 01:00:03 31:00:0e:fc:00:00:00:02
21:00:0e:fc:00:00:00:02

```

```

Dell# show fip-snooping sessions
Enode MAC Enode Intf FCF MAC FCF Intf VLAN FCoE MAC
   FC-ID Port WWPN          Port WWNN
-----
00:00:c9:f1:e1:37 Te 1/2 54:7f:ee:34:77:4e Te 1/4 111
   0e:fc:00:b5:00:07 b5:00:07 10:00:00:00:c9:f1:e1:37
   20:00:00:00:c9:f1:e1:37
00:c0:dd:12:c0:05 Te 1/3 54:7f:ee:34:77:4e Te 1/5 111
   0e:fc:00:b5:00:75 b5:00:75 21:00:00:c0:dd:12:c0:05
   20:00:00:c0:dd:12:c0:05

```

show fip-snooping statistics

Display statistics on the FIP packets snooped on all interfaces, including VLANs, physical ports, and port channels.

Syntax `show fip-snooping statistics [interface vlan vlan-id | interface interface-type | interface port-channel port-channel-number]`

Parameters

- vlan-id*** Enter the VLAN ID of the FIP packet statistics displays.
- port-channel-number*** Enter the port channel number of the FIP packet statistics displays.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.

Version	Description
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information

The following describes the `show fip-snooping statistics` command shown in the following example.

Field	Description
Number of VLAN Requests	Number of FIP-snoop VLAN request frames received on the interface.
Number of VLAN Notifications	Number of FIP-snoop VLAN notification frames received on the interface.
Number of Multicast Discovery Solicits	Number of FIP-snoop multicast discovery solicit frames received on the interface.
Number of Unicast Discovery Solicits	Number of FIP-snoop unicast discovery solicit frames received on the interface.
Number of FLOGI	Number of FIP-snoop FLOGI request frames received on the interface.
Number of FDISC	Number of FIP-snoop FDISC request frames received on the interface.
Number of FLOGO	Number of FIP-snoop FLOGO frames received on the interface.
Number of ENode Keep Alives	Number of FIP-snoop ENode keep-alive frames received on the interface.
Number of VN Port Keep Alives	Number of FIP-snoop VN port (Virtual N-port) keep-alive frames received on the interface.
Number of Multicast Discovery Advertisements	Number of FIP-snoop multicast discovery advertisements received on the interface.
Number of Unicast Discovery Advertisements	Number of FIP-snoop unicast discovery advertisements received on the interface.
Number of FLOGI Accepts	Number of FIP FLOGI accept frames received on the interface.
Number of FLOGI Rejects	Number of FIP FLOGI reject frames received on the interface.
Number of FDISC Accepts	Number of FIP FDISC accept frames received on the interface.
Number of FDISC Rejects	Number of FIP FDISC reject frames received on the interface.
Number of FLOGO Accepts	Number of FIP FLOGO accept frames received on the interface.
Number of FLOGO Rejects	Number of FIP FLOGO reject frames received on the interface.
Number of CVLs	Number of FIP clear virtual link frames received on the interface.

Field	Description
Number of FCF Discovery Timeouts	Number of FCF discovery timeouts that occurred on the interface.
Number of VN Port Session Timeouts	Number of VN port session timeouts that occurred on the interface.
Number of Session failures due to Hardware Config	Number of session failures due to hardware configuration that occurred on the interface.

Example

```
DelleMC# show fip-snooping statistics interface vlan 100
Number of Vlan Requests           :0
Number of Vlan Notifications      :0
Number of Multicast Discovery Solicits :2
Number of Unicast Discovery Solicits :0
Number of FLOGI                   :2
Number of FDISC                    :16
Number of FLOGO                    :0
Number of Enode Keep Alive         :9021
Number of VN Port Keep Alive       :3349
Number of Multicast Discovery Advertisement :4437
Number of Unicast Discovery Advertisement :2
Number of FLOGI Accepts            :2
Number of FLOGI Rejects            :0
Number of FDISC Accepts            :16
Number of FDISC Rejects            :0
Number of FLOGO Accepts            :0
Number of FLOGO Rejects            :0
Number of CVL                      :0
Number of FCF Discovery Timeouts    :0
Number of VN Port Session Timeouts :0
Number of Session failures due to Hardware Config :0
DelleMC(conf)#
```

```
DelleMC# show fip-snooping statistics int tengigabitethernet 1/11
Number of Vlan Requests           :1
Number of Vlan Notifications      :0
Number of Multicast Discovery Solicits :1
Number of Unicast Discovery Solicits :0
Number of FLOGI                   :1
Number of FDISC                    :16
Number of FLOGO                    :0
Number of Enode Keep Alive         :4416
Number of VN Port Keep Alive       :3136
Number of Multicast Discovery Advertisement :0
Number of Unicast Discovery Advertisement :0
Number of FLOGI Accepts            :0
Number of FLOGI Rejects            :0
Number of FDISC Accepts            :0
Number of FDISC Rejects            :0
Number of FLOGO Accepts            :0
Number of FLOGO Rejects            :0
Number of CVL                      :0
Number of FCF Discovery Timeouts    :0
Number of VN Port Session Timeouts :0
Number of Session failures due to Hardware Config :0
```

Example (Port Channel)

```
DelleMC# show fip-snooping statistics interface port-channel 22
Number of Vlan Requests           :0
Number of Vlan Notifications      :2
Number of Multicast Discovery Solicits :0
Number of Unicast Discovery Solicits :0
Number of FLOGI                   :0
```

```

Number of FDISC :0
Number of FLOGO :0
Number of Enode Keep Alive :0
Number of VN Port Keep Alive :0
Number of Multicast Discovery Advertisement :4451
Number of Unicast Discovery Advertisement :2
Number of FLOGI Accepts :2
Number of FLOGI Rejects :0
Number of FDISC Accepts :16
Number of FDISC Rejects :0
Number of FLOGO Accepts :0
Number of FLOGO Rejects :0
Number of CVL :0
Number of FCF Discovery Timeouts :0
Number of VN Port Session Timeouts :0
Number of Session failures due to Hardware Config :0

```

show fip-snooping system

Display information on the status of FIP snooping on the switch (enabled or disabled), including the number of FCoE VLANs, FCFs, ENodes, and currently active sessions.

Syntax `show fip-snooping system`

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```

DellEMC# show fip-snooping system
Global Mode : Enabled
FCOE VLAN List (Operational) : 1, 100
FCFs : 1
Enodes : 2
Sessions : 17

```

show fip-snooping vlan

Display information on the FCoE VLANs on which FIP snooping is enabled.

Syntax `show fip-snooping vlan`

Command Modes

- EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the Z9500 and S6000-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
DellEMC# show fip-snooping vlan
* = Default VLAN
VLAN FC-MAP      FCFs Enodes Sessions
-----
*1    -          -    -    -
100   0X0EFC00  1    2    17
```

show fips status

Display the FIPs status on the platform.

- Syntax** `show fips status`
- Defaults** none
- Command Modes** EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Force10 Resilient Ring Protocol (FRRP)

FRRP is a proprietary protocol for that offers fast convergence in a Layer 2 network without having to run the spanning tree protocol (STP). The resilient ring protocol is an efficient protocol that transmits a high-speed token across a ring to verify the link status. All the intelligence is contained in the master node with practically no intelligence required of the transit mode.

Important Points to Remember

- FRRP is media- and speed-independent.
- FRRP is a Dell EMC Networking proprietary protocol that does not interoperate with any other vendor.
- Spanning Tree must be disabled on both primary and secondary interfaces before Resilient Ring protocol is enabled.
- A VLAN configured as the control VLAN for a ring cannot be configured as a control or member VLAN for any other ring.
- Member VLANs across multiple rings are not supported in Master nodes.
- If multiple rings share one or more member VLANs, they cannot share any links between them.
- Each ring can have only one Master node; all others are Transit nodes.

Topics:

- [clear frrp](#)
- [debug frrp](#)
- [description](#)
- [disable](#)
- [interface](#)
- [member-vlan](#)
- [mode](#)
- [protocol frrp](#)
- [show frrp](#)
- [timer](#)

clear frrp

Clear the FRRP statistics counters.

Syntax	<code>clear frrp [ring-id]</code>
Parameters	ring-id (Optional) Enter the ring identification number. The range is from 1 to 255.
Defaults	None
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.5.1.0	Introduced.

Usage Information

Executing this command without the optional `ring-id` command clears the statistics counters on all the available rings. Dell EMC Networking OS requires a command line confirmation before the command executes. This command clears the following counters:

- hello Rx and Tx counters
- Topology change Rx and Tx counters
- The number of state change counters

Example

```
DellEMC# clear frrp
Clear frrp statistics counter on all ring [confirm] yes
DellEMC#clear frrp 4
Clear frrp statistics counter for ring 4 [confirm] yes
DellEMC#
```

Related Commands

- [show frrp](#) — display the Resilient Ring Protocol configuration.

debug frrp

Clear the FRRP statistics counters.

Syntax

```
debug frrp {event | packet | detail} [ring-id] [count number]
```

To disable debugging, use the `no debug frrp {event | packet | detail} {ring-id} [countnumber]` command.

Parameters

event	Enter the keyword <code>event</code> to display debug information related to ring protocol transitions.
packet	Enter the keyword <code>packet</code> to display brief debug information related to control packets.
detail	Enter the keyword <code>detail</code> to display detailed debug information related to the entire ring protocol packets.
ring-id	(Optional) Enter the ring identification number. The range is from 1 to 255.

count *number* Enter the keyword `count` then the number of debug outputs. The range is from 1 to 65534.

Defaults Disabled.

Command Modes CONFIGURATION (conf-frpp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information Because the resilient ring protocol can potentially transmit 20 packets per interface, restrict debug information.

description

Enter an identifying description of the ring.

Syntax `description Word`
To remove the ring description, use the `no description [Word]` command.

Parameters **Word** Enter a description of the ring. Maximum: 255 characters.

Defaults None

Command Modes CONFIGURATION (conf-frpp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

disable

Disable the resilient ring protocol.

Syntax `disable`
 To enable the Resilient Ring Protocol, use the `no disable` command.

Defaults **Disabled**

Command Modes CONFIGURATION (conf-frpp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

interface

Configure the primary, secondary, and control-vlan interfaces.

S5000

Syntax `interface {primary interface secondary interface control-vlan vlan-id}`
To return to the default, use the `no interface {primary interface secondary interface control-vlan vlan-id}` command.

Parameters

primary *interface* Enter the keyword `primary` to configure the primary interface then one of the following interfaces and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

secondary *interface* Enter the keyword `secondary` to configure the secondary interface then one of the following interfaces and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

control-vlan *vlan-id* Enter the keyword `control-vlan` then the VLAN ID. The range is from 1 to 4094.

Defaults None

Command Modes CONFIGURATION (conf-frpp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.

Version	Description
---------	-------------

7.4.1.0	Introduced.
---------	-------------

Usage Information

This command causes the Ring Manager to take ownership of the two ports after IFM validates the configuration. Ownership is relinquished for a port only when the interface does not play a part in any control VLAN, that is, the interface does not belong to any ring.

Related Commands

- [show frrp](#) — display the Resilient Ring Protocol configuration information.

member-vlan

Specify the member VLAN identification numbers.

Syntax

```
member-vlan {vlan-range}
```

To return to the default, use the `no member-vlan [vlan-range]` command.

Parameters

<i>vlan-range</i>	Enter the member VLANs using VLAN IDs (separated by commas), a range of VLAN IDs (separated by a hyphen), a single VLAN ID, or a combination. For example: VLAN IDs (comma-separated): 3, 4, 6. Range (hyphen-separated): 5-10. Combination: 3, 4, 5-10, 8.
--------------------------	---

Defaults

None

Command Modes

CONFIGURATION (conf-frfp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
---------	-------------

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
-----------	---

9.10(0.0)	Introduced on the S3148.
-----------	--------------------------

9.10(0.0)	Introduced on the S6100-ON.
-----------	-----------------------------

9.8(2.0)	Introduced on the S3100 series.
----------	---------------------------------

9.8(1.0)	Introduced on the Z9100-ON.
----------	-----------------------------

9.8(0.0P5)	Introduced on the S4048-ON.
------------	-----------------------------

9.8(0.0P2)	Introduced on the S3048-ON.
------------	-----------------------------

9.7(0.0)	Introduced on the S6000-ON.
----------	-----------------------------

9.5(0.1)	Introduced on the Z9500.
----------	--------------------------

9.0.2.0	Introduced on the S6000.
---------	--------------------------

8.3.11.1	Introduced on the Z9000.
----------	--------------------------

8.3.7.0	Introduced on the S4810.
---------	--------------------------

8.2.1.0	Introduced on the C-Series.
---------	-----------------------------

7.4.1.0	Introduced.
---------	-------------

mode

Set the Master or Transit mode of the ring.

Syntax	<code>mode {master transit}</code> To reset the mode, use the <code>no mode {master transit}</code> command.
Parameters	master Enter the keyword <code>master</code> to set the Ring node to Master mode. transit Enter the keyword <code>transit</code> to set the Ring node to Transit mode.
Defaults	Mode None
Command Modes	CONFIGURATION (conf-frrp)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

protocol frrp

Enter the Resilient Ring Protocol and designate a ring identification.

Syntax	<code>protocol frrp {ring-id}</code> To exit the ring protocol, use the <code>no protocol frrp {ring-id}</code> command.
Parameters	ring-id Enter the ring identification number. The range is from 1 to 255.
Defaults	None
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced

Usage Information

This command places you into the resilient ring protocol. After executing this command, the command line prompt changes to `conf-frrp`.

show frrp

Display the resilient ring protocol configuration.

Syntax	<code>show frrp [ring-id [summary]] [summary]</code>	
Parameters	ring-id	Enter the ring identification number. The range is from 1 to 255
	summary	(OPTIONAL) Enter the keyword <code>summary</code> to view just a summarized version of the Ring configuration.
Defaults	None	
Command Modes	EXEC	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information

Executing this command without the optional `ring-id` command clears the statistics counters on all the available rings. Dell EMC Networking OS requires a command line confirmation before the command executes. This command clears the following counters:

- hello Rx and Tx counters
- Topology change Rx and Tx counters
- The number of state change counters

Usage Information

Executing this command without the optional `ring-id` command clears the statistics counters on all the available rings. Dell EMC Networking OS requires a command line confirmation before the command is executed. This command clears the following counters:

- hello Rx and Tx counters
- Topology change Rx and Tx counters
- The number of state change counters

Example (Summary)

```
DellEMC# show frrp summary
```

```
Ring-ID State Mode Ctrl_Vlan Member_Vlans
-----
2       UP   Master  2      11-20, 25,27-30
31      UP   Transit 31     40-41
50      Down Transit 50     32
DellEMC#
```

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information

Executing this command without the optional `ring-id` command clears the statistics counters on all the available rings. Dell EMC Networking OS requires a command line confirmation before the command executes. This command clears the following counters:

- hello Rx and Tx counters
- Topology change Rx and Tx counters
- The number of state change counters

Usage Information

Executing this command without the optional `ring-id` command clears the statistics counters on all the available rings. Dell EMC Networking OS requires a command line confirmation before the command is executed. This command clears the following counters:

- hello Rx and Tx counters
- Topology change Rx and Tx counters
- The number of state change counters

Example (Summary)

```
DellEMC# show frfp summary
```

```
Ring-ID State Mode Ctrl_Vlan Member_Vlans
-----
2 UP Master 2 11-20, 25,27-30
31 UP Transit 31 40-41
50 Down Transit 50 32
DellEMC#
```

Example (1)

```
DellEMC# show frfp 1
Ring protocol 1 is in Master mode
Ring Protocol Interface:
Primary : TenGigabitEthernet 1/16 State: Forwarding
Secondary: Port-channel 100 State: Blocking
Control Vlan: 1
Ring protocol Timers: Hello-Interval 50 msec Dead-Interval 150 msec
Ring Master's MAC Address is 00:01:e8:13:a3:19
Topology Change Statistics: Tx:110 Rx:45
Hello Statistics: Tx:13028 Rx:12348
Number of state Changes: 34
Member Vlans: 1000-1009
DellEMC#
```

Example (1)

```
DellEMC# show frfp 1
Ring protocol 1 is in Master mode
Ring Protocol Interface:
Primary : TenGigabitEthernet 1/16 State: Forwarding
Secondary: Port-channel 100 State: Blocking
Control Vlan: 1
Ring protocol Timers: Hello-Interval 50 msec Dead-Interval 150 msec
Ring Master's MAC Address is 00:01:e8:13:a3:19
Topology Change Statistics: Tx:110 Rx:45
Hello Statistics: Tx:13028 Rx:12348
Number of state Changes: 34
Member Vlans: 1000-1009
DellEMC#
```

Example (2 Summary)

```
DellEMC# show frfp 2 summary
```

```
DellEMC#show frfp 2 summary
Ring-ID State Mode Ctrl_Vlan Member_Vlans
-----
2 Up Master 2 11-20, 25, 27-30
DellEMC#
```

Related Commands

- [protocol frfp](#) — enter the resilient ring protocol and designate a ring identification.

timer

Set the hello interval or dead interval for the Ring control packets.

Syntax `timer {hello-interval milliseconds}| {dead-interval milliseconds}`
To remove the timer, use the `no timer {hello-interval [milliseconds] | {dead-interval milliseconds}` command.

Parameters

hello-interval <i>milliseconds</i>	Enter the keyword <code>hello-interval</code> then the time, in milliseconds, to set the hello interval of the control packets. The milliseconds must be entered in increments of 50 millisecond; for example, 50, 100, 150, and so on. If an invalid value is entered, an error message is generated. The range is from 50 to 2000 ms. Default: 500 ms .
dead-interval <i>milliseconds</i>	Enter the keyword <code>dead-interval</code> then the time, in milliseconds, to set the dead interval of the control packets. The range is from 50 to 6000 ms. Default: 1500 ms .  NOTE: The configured dead interval must be at least three times the hello interval.

Defaults

- **500 ms** for `hello-interval milliseconds`
- **1500 ms** for `dead-interval milliseconds`

Command Modes CONFIGURATION (conf-frpp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
7.4.1.0	Introduced.

Usage Information The `hello interval` command is the interval at which ring frames are generated from the primary interface of the master node. The `dead interval` command is the time that elapses before a time-out occurs.

GARP VLAN Registration (GVRP)

The Dell EMC Networking operating system supports the basic GVRP commands on the Dell EMC Networking OS.

The generic attribute registration protocol (GARP) mechanism allows the configuration of a GARP participant to propagate through a network quickly. A GARP participant registers or de-registers its attributes with other participants by making or withdrawing declarations of attributes. At the same time, based on received declarations or withdrawals, GARP handles attributes of other participants.

GVRP enables a device to propagate local VLAN registration information to other participant devices and dynamically update the VLAN registration information from other devices. The registration information updates local databases regarding active VLAN members and through which port the VLANs can be reached.

GVRP ensures that all participants on a bridged LAN maintain the same VLAN registration information. The VLAN registration information propagated by GVRP includes both manually configured local static entries and dynamic entries from other devices.

GVRP participants have the following components:

- The GVRP application
- GARP information propagation (GIP)
- GARP information declaration (GID)

Important Points to Remember

- GVRP is supported on Layer 2 ports only.
- All VLAN ports added by GVRP are tagged.
- GVRP is supported on untagged ports belonging to a default VLAN and tagged ports.
- GVRP cannot be enabled on untagged ports belonging to a non-default VLAN *unless* native VLAN is turned on.
- GVRP requires end stations with dynamic access NICs.
- Based on updates from GVRP-enabled devices, GVRP allows the system to dynamically create a port-based VLAN (unspecified) with a specific VLAN ID and a specific port.
- On a port-by-port basis, GVRP allows the system to learn about GVRP updates to an existing port-based VLAN with that VLAN ID and IEEE 802.1Q tagging.
- GVRP allows the system to send dynamic GVRP updates about your existing port-based VLAN.
- GVRP updates are not sent to any blocked spanning tree protocol (STP) ports. GVRP operates only on ports that are in the forwarding state.
- GVRP operates only on ports that are in the STP forwarding state. If you enable GVRP, a port that changes to the STP Forwarding state automatically begin to participate in GVRP. A port that changes to an STP state other than forwarding no longer participates in GVRP.
- VLANs created dynamically with GVRP exist only as long as a GVRP-enabled device is sending updates. If the devices no longer send updates, or GVRP is disabled, or the system is rebooted, all dynamic VLANs are removed.
- GVRP manages the active topology, not non-topological data such as VLAN protocols. If a local bridge must classify and analyze packets by VLAN protocols, manually configure protocol-based VLANs, and simply rely on GVRP for VLAN updates. But if the local bridge must know only how to reach a given VLAN, then GVRP provides all necessary information.
- The VLAN topologies that GVRP learns are treated differently from VLANs that are statically configured. The GVRP dynamic updates are not saved in NVRAM, while static updates are saved in NVRAM. When GVRP is disabled, the system deletes all VLAN interfaces that were learned through GVRP and leaves unchanged all VLANs that were manually configured.

Topics:

- [clear gvrp statistics](#)
- [debug gvrp](#)
- [disable](#)
- [garp timers](#)
- [gvrp enable](#)
- [gvrp registration](#)
- [protocol gvrp](#)

- [show config](#)
- [show garp timers](#)
- [show gvrp](#)
- [show gvrp statistics](#)

clear gvrp statistics

Clear GVRP statistics on an interface.

S5000

Syntax	<code>clear gvrp statistics interface <i>interface</i></code>
Parameters	<p>interface <i>interface</i></p> <p>Enter the following keywords and the interface information:</p> <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number.
Defaults	None
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Related Commands	<ul style="list-style-type: none"> • show gvrp statistics — display the GVRP statistics.
-------------------------	---

debug gvrp

Enable debugging on GVRP.

S5000

Syntax `debug gvrp {config | events | pdu}`

To disable debugging, use the `no debug gvrp {config | events | pdu}` command.

Parameters

- | | |
|---------------|---|
| config | Enter the keyword <code>config</code> to enable debugging on the GVRP configuration. |
| event | Enter the keyword <code>event</code> to enable debugging on the JOIN/LEAVE events. |
| pdu | Enter the keyword <code>pdu</code> then one of the following Interface keywords and the interface information: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number. |

Defaults Disabled.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

disable

Globally disable GVRP.

Syntax	<code>disable</code> To re-enable GVRP, use the <code>no disable</code> command.
Defaults	Enabled.
Command Modes	CONFIGURATION-GVRP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Related Commands	<ul style="list-style-type: none">• gvrp enable — enable GVRP on physical interfaces and LAGs.• protocol gvrp — access GVRP protocol.
-------------------------	--

garp timers

Set the intervals (in milliseconds) for sending GARP messages.

Syntax	<code>garp timers {join leave leave-all}</code> To return to the previous setting, use the <code>no garp timers {join leave leave-all}</code> command.
---------------	---

Parameters	join Enter the keyword <code>join</code> then the number of milliseconds to configure the join time. The range is from 100 to 147483647 milliseconds. The default is 200 milliseconds .
-------------------	---

 **NOTE:** Designate the milliseconds in multiples of 100.

leave Enter the keyword `leave` then the number of milliseconds to configure the leave time. The range is from 100 to 2147483647 milliseconds. The default is **600 milliseconds**.

 **NOTE:** Designate the milliseconds in multiples of 100.

leave-all Enter the keywords `leave-all` then the number of milliseconds to configure the leave-all time. The range is from 100 to 2147483647 milliseconds. The default is 1000 milliseconds.

 **NOTE:** Designate the milliseconds in multiples of 100.

Defaults As above.

Command Modes CONFIGURATION-GVRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Usage Information

- **Join Timer** — `Join` messages announce the willingness to register some attributes with other participants. For reliability, each GARP application entity sends a `Join` message twice and uses a join timer to set the sending interval.
- **Leave Timer** — `Leave` announces the willingness to de-register with other participants. Together with `Join`, `Leave` messages help GARP participants complete attribute reregistration and de-registration. The leave timer starts after receipt of a leave message sent for de-registering some attribute information. If a `Join` message is *not* received before the `Leave` time expires, the GARP application entity removes the attribute information as requested.
- **Leave All Timer** — The `Leave All` timer starts when a GARP application entity starts. When this timer expires, the entity sends a `Leave-all` message so that other entities can reregister their attribute information. Then the `Leave-all` time begins again.

Related Commands

- [show garp timers](#) — display the current GARP times.

gvrp enable

Enable GVRP on physical interfaces and LAGs.

Syntax	<code>gvrp enable</code> To disable GVRP on the interface, use the <code>no gvrp enable</code> command.
Defaults	Disabled.
Command Modes	CONFIGURATION-INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Related Commands	<ul style="list-style-type: none">disable — globally disable GVRP.
-------------------------	--

gvrp registration

Configure the GVRP register type.

Syntax	<code>gvrp registration {fixed normal forbidden}</code> To return to the default, use the <code>gvrp register normal</code> command.						
Parameters	<table><tr><td>fixed</td><td>Enter the keyword <code>fixed</code> then the VLAN range in a comma-separated VLAN ID set.</td></tr><tr><td>normal</td><td>Enter the keyword <code>normal</code> then the VLAN range in a comma-separated VLAN ID set. This setting is the default.</td></tr><tr><td>forbidden</td><td>Enter the keyword <code>forbidden</code> then the VLAN range in a comma-separated VLAN ID set.</td></tr></table>	fixed	Enter the keyword <code>fixed</code> then the VLAN range in a comma-separated VLAN ID set.	normal	Enter the keyword <code>normal</code> then the VLAN range in a comma-separated VLAN ID set. This setting is the default.	forbidden	Enter the keyword <code>forbidden</code> then the VLAN range in a comma-separated VLAN ID set.
fixed	Enter the keyword <code>fixed</code> then the VLAN range in a comma-separated VLAN ID set.						
normal	Enter the keyword <code>normal</code> then the VLAN range in a comma-separated VLAN ID set. This setting is the default.						
forbidden	Enter the keyword <code>forbidden</code> then the VLAN range in a comma-separated VLAN ID set.						
Defaults	normal						

Command Modes CONFIGURATION-INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Usage Information

Fixed registration prevents an interface, configured using the command line, to belong to a VLAN (static configuration) from being unconfigured when it receives a `Leave` message. Therefore, Registration mode on that interface is fixed.

Normal registration is the default registration. The port's membership in the VLAN depends on GVRP. The interface becomes a member of a VLAN after learning about the VLAN through GVRP. If the VLAN is removed from the port that sends GVRP advertisements to this device, the port stops being a member of the VLAN.

To advertise or learn about VLANs through GVRP, use the `forbidden` command when you do not want the interface.

Related Commands

- `show gvrp` — display the GVRP configuration including the registration.

protocol gvrp

Access GVRP protocol — (config-gvrp)#.

Syntax `protocol gvrp`

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Related Commands

- [disable](#) — globally disable GVRP.

show config

Display the global GVRP configuration.

Syntax `show config`

Command Modes CONFIGURATION-GVRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Related Commands

- [gvrp enable](#) — enable GVRP on physical interfaces and LAGs.

- [protocol gvrp](#) — access the GVRP protocol.

show garp timers

Display the GARP timer settings for sending GARP messages.

Syntax `show garp timers`

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Example

```
DellEMC# show garp timers
GARP Timers          Value (milliseconds)
-----
Join Timer           200
Leave Timer           600
LeaveAll Timer        10000
DellEMC#
```

Related Commands

- [garp timers](#) — set the intervals (in milliseconds) for sending GARP messages.

show gvrp

Display the GVRP configuration.

S5000

Syntax `show gvrp [brief | interface]`

- Parameters**
- brief** (OPTIONAL) Enter the keyword `brief` to display a brief summary of the GVRP configuration.
 - interface** (OPTIONAL) Enter the following keywords and the interface information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Usage Information If no ports are GVRP participants, the message output changes from `GVRP Participants running on <port_list>` to `GVRP Participants running on no ports`.

Example

```
DellEMC# show gvrp brief
GVRP Feature is currently enabled.
Port                GVRP Status      Edge-Port
-----
Te 3/1              Disabled          No
Te 3/2              Enabled           No
Te 3/3              Disabled          No
Te 3/4              Disabled          No
```

```

Te 3/5          Disabled      No
Te 3/6          Disabled      No
Te 3/7          Disabled      No
Te 3/8          Disabled      No
DellEMC# show gvrp brief

```

Related Commands

- [show gvrp statistics](#) — display the GVRP statistics.

show gvrp statistics

Display the GVRP configuration statistics.

S5000

Syntax

```
show gvrp statistics {interface interface | summary}
```

Parameters

- interface** (OPTIONAL) Enter the keyword `interface` then one of the interface keywords and the interface information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- summary** Enter the keyword `summary` to display just a summary of the GVRP statistics.

Defaults

None

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on C-Series, E-Series, and S-Series

Usage Information

Invalid messages/attributes skipped can occur in the following cases:

- The incoming GVRP PDU has an incorrect length.
- "End of PDU" was reached before the complete attribute could be parsed.
- The Attribute Type of the attribute that was being parsed was not the GVRP VID Attribute Type (0x01).

- The attribute that was being parsed had an invalid attribute length.
- The attribute that was being parsed had an invalid GARP event.
- The attribute that was being parsed had an invalid VLAN ID. The valid range is from 1 to 4095.

A failed registration can occur for the following reasons:

- Join requests were received on a port that was blocked from learning dynamic VLANs (GVRP Blocking state).
- An entry for a new GVRP VLAN could not be created in the GVRP database.

Example

```
DelleMC# show gvrp statistics int tengigabitethernet 1/1

Join Empty Received: 0
Join In Received: 0
Empty Received: 0
LeaveIn Received: 0
Leave Empty Received: 0
Leave All Received: 40
Join Empty Transmitted: 156
Join In Transmitted: 0
Empty Transmitted: 0
Leave In Transmitted: 0
Leave Empty Transmitted: 0
Leave All Transmitted: 41
Invalid Messages/Attributes skipped: 0
Failed Registrations: 0
DelleMC#
```

Related Commands

- `show gvrp` — display the GVRP configuration.

High Availability (HA)

High availability (HA) in the Dell EMC Networking OS is the configuration synchronization to minimize recovery time in the event of a route processor module (RPM) failure.

In general, a protocol is defined as “hitless” in the context of an RPM failure/failover and not failures of a line card, SFM, or power module. A protocol is defined as hitless if an RPM failover has no impact on the protocol.

You must specifically enable some protocols for HA. Some protocols are only hitless if related protocols are also enabled as hitless (for example, using the `redundancy protocol` command).

Topics:

- [patch flash://RUNTIME_PATCH_DIR](#)
- [process restartable](#)
- [redundancy disable-auto-reboot stack-unit](#)
- [redundancy force-failover](#)
- [redundancy primary](#)
- [redundancy protocol](#)
- [redundancy reset-counter](#)
- [redundancy sfm standby](#)
- [redundancy synchronize](#)
- [show patch](#)
- [show processes restartable](#)
- [show redundancy](#)

patch flash://RUNTIME_PATCH_DIR

Insert an In-Service Modular Hot-Fix patch.

Syntax	<code>patch flash://RUNTIME_PATCH_DIR/patch-filename</code> To remove the patch, use the <code>no patch flash://RUNTIME_PATCH_DIR/patch-filename</code> command.
Defaults	None
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.2.1.0	Introduced.

Usage Information	The patch filename includes the Dell EMC Networking OS version, the platform, the CPU, and the process it affects (<code>FTOS-platform-cpu-process-patchversion.rtp</code>). For example, a patch labeled “7.8.1.0-EH-rp2-l2mgr-1.rtp” identifies that this patch applies to Dell EMC Networking OS version
--------------------------	---

7.8.1.0 — E-Series platform, for RP2, addressing the layer 2 management process, and this patch is the first version of this patch.

There is no need to reload or reboot the system when you insert the patch. The In-Service Modular patch replaces the existing process code. After installation is complete, the system executes the patch code as though it was always there.

**Related
Commands**

- [show patch](#) — display the system patches loaded with the `in-service modular hot fix` command.

process restartable

Enable a process to be restarted. Restartability is subject to a maximum restart limit. This limit is defined as a configured number of restarts within a configured amount of time. On the software exception that exceeds the limit, the system reloads (for systems with a single RPM) or fails over (for systems with dual RPMs).

Syntax `process restartable [process] [count number] [period minutes]`

Parameters

- process** Configure a process to be restartable.
- count number** Enter the number of times a process can restart within the configured period. The range is from 1 to 3. The default is **3**.
- period minutes** Enter the amount of time within which the process can restart count times. The range is from 1 to 60 minutes. The default is **60 minutes**.

Default By default, a process can be restarted a maximum of three times within one hour. On the exception that exceeds this limit, the system reloads or fails over.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced on the E-Series.

**Related
Commands**

- [show processes restartable](#) — display processes and tasks configured for restartability.

redundancy disable-auto-reboot stack-unit

Prevent the S5000 stack management unit, stack member unit, and standby unit from rebooting if they fail.

S5000

Syntax `redundancy disable-auto-reboot stack-unit [members | 0-11]`

To re-enable the automatic reboot of a failed stack unit, use the `no redundancy disable-auto-reboot stack-unit` command.

Defaults Disabled (a failed switch automatically reboots).

Command Modes CONFIGURATION

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The range is 0 to 11. Entering this command disables the automatic reboot and keeps a failed stack unit in the Failed state. A failed switch does not reboot until you manually reload it. The disabling of the automatic reboot is displayed in the running-config.

Related Commands [show redundancy](#) – displays the current redundancy status.

redundancy force-failover

Force the secondary stack unit to become the primary stack unit. You can also use this command to upgrade the software on one stack unit from the other when the other has been loaded with the upgraded software.

Syntax `redundancy force-failover stack-unit`

Parameters **stack-unit** Enter the keyword `stack-unit` then the stack-unit ID number.

Default Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information To provide a hitless or warm upgrade, use this command. A hitless upgrade means that a software upgrade does not require a reboot of the line cards. A warm upgrade means that a software upgrade requires a reset of the line cards. A warm upgrade is possible for major releases and lower, while a hitless upgrade can only support patch releases.

redundancy primary

Set an RPM as the primary RPM.

Syntax `redundancy primary [rpm0 | rpm1]`
To delete a configuration, use the `no redundancy primary` command.

Parameters **rpm0** Enter the keyword `rpm0` to set the RPM in slot R0 as the primary RPM.

rpm1 Enter the keyword `rpm1` to set the RPM in slot R1 as the primary RPM.

Default The RPM in slot R0 is the Primary RPM.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

redundancy protocol

Enable hitless protocols.

Syntax `redundancy protocol {lacp | xstp}`
To disable a hitless protocol, use the `no redundancy protocol {lacp | xstp}` command.

Parameters

lacp	Enter the keyword <code>lacp</code> to make LACP hitless.
xstp	Enter the keyword <code>xstp</code> to invoke hitless STP (all STP modes — MSTP, PVST+, RSTP, and STP).

Default Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the E-Series.

Related Commands

- [show lacp](#) — display the lacp configuration.
- [show redundancy](#) — display the current redundancy configuration.

redundancy reset-counter

Reset failover counter and timestamp information displayed in the `show redundancy` command.

Syntax	<code>redundancy reset-counter</code>
Default	Not configured.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the E-Series.

redundancy sfm standby

Place the SFM in an offline state.

Syntax	<code>redundancy sfm standby</code> To place the SFM in an online state, use the <code>no redundancy sfm standby</code> command.
Default	The SFM is online by default.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Introduced on the C-Series.

Usage Information When you insert or remove a secondary RPM with logical SFM, the system must add or remove the backplane links to the switch fabric trunk. To avoid traffic disruption, use this command when you insert the secondary RPM. When you execute this command, the logical SFM on the standby RPM is immediately taken offline and the SFM state is set as "standby".

 **NOTE:** This command could affect traffic when taking the secondary SFM offline.

Example

```
Dell# show sfm all

Switch Fabric State: up

-- Switch Fabric Modules --
Slot Status
-----
0      active
1      active

Dell# configure
Dell(conf)# redundancy sfm standby
Taking secondary SFM offline...
!
Dell(conf)# do show sfm all

Switch Fabric State: up

-- Switch Fabric Modules --
Slot Status
-----
0      active
1      standby

Dell(conf)# no redundancy sfm
Taking secondary SFM online...
!
Dell(conf)# do show sfm all

Switch Fabric State: up
-- Switch Fabric Modules --
Slot Status
-----
0      active
1      active
```

redundancy synchronize

Manually synchronize data once between the Master and Stand-by stack units.

Syntax redundancy synchronize [full]

Parameters **full** Enter the keyword `full` to synchronize all data.

Default Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
7.6.1.0	Introduced on the E-Series.

show patch

Display the system patches loaded with the `In-Service Modular Hot Fix` command.

Syntax `show patch`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.

Related Commands

- [patch flash://RUNTIME_PATCH_DIR](#) — insert an In-Service Modular Hot-Fix patch.

show processes restartable

Display the processes and tasks configured for restartability.

Syntax `show processes restartable [history]`

Parameters **history** Display the last time the restartable processes crashed.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced on the E-Series.

Example

```
Dell# show processes restartable
-----
Process name State How many times restarted Timestamp last restarted
-----
radius      enabled                0 [-]
```

```

tacplus          enabled          0 [-]
-----
Dell#show processes restartable history
-----
Process name Timestamp last crashed
-----
radius          [5/23/2001 10:11:47]
-----

```

Related Commands

- [process restartable](#) — enable a process to restart.

show redundancy

Display the current redundancy configuration.

Syntax `show redundancy`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show redundancy` command shown in the following example.

Field	Description
RPM Status	Displays the following information: <ul style="list-style-type: none"> • Slot number of the RPM. • Whether the RPM is Primary or Standby. • The state of the RPM: Active, Standby, Booting, or Offline. • Whether the link to the second RPM is up or down.
PEER RPM Status	Displays the state of the second RPM, if present
RPM Redundancy Configuration	Displays the following information: <ul style="list-style-type: none"> • which RPM is the preferred Primary on next boot (the <code>redundancy primary</code> command) • the data sync method configured (the <code>redundancy synchronize</code> command) • the failover type (you cannot change this type; it is software-dependent). Hot Failover means that the running configuration and routing table are applied

Field	Description
	<p>on secondary RPM. Fast Failover means that the running configuration is not applied on the secondary RPM until failover occurs, and the routing table on line cards is cleared during failover.</p> <ul style="list-style-type: none"> the status of auto booting the RPM (the <code>redundancy disable-auto-reboot</code> command) the parameter for auto failover limit control (the <code>redundancy auto-failover-limit</code> command)
RPM Failover Record	<p>Displays the following information:</p> <ul style="list-style-type: none"> RPM failover counter (to reset the counter, use the <code>redundancy reset-counter</code> command) the time and date of the last RPM failover the reason for the last RPM failover
Last Data Sync Record	<p>Displays the data sync information and the timestamp for the data sync:</p> <ul style="list-style-type: none"> Start-up Config is the contents of the <code>startup-config</code> file. Line Card Config is the line card types configured and interfaces on those line cards. Runtime Event Log is the contents of the Event log. Running Config is the current <code>running-config</code>. <p>This field only appears when you enter the command from the Primary RPM.</p>

Example

```
DelleMC# show redundancy

-- RPM Status --
-----
RPM Slot ID:          1
RPM Redundancy Role: Primary
RPM State:            Active
RPM SW Version:       7.5.1.0
Link to Peer:         Up

-- PEER RPM Status --
-----
RPM State:            Standby
RPM SW Version:       7.5.1.0

-- RPM Redundancy Configuration --
-----
Primary RPM:          rpm0
Auto Data Sync:       Full
Failover Type:        Hot Failover
Auto reboot RPM:      Enabled
Auto failover limit: 3 times in 60 minutes

-- RPM Failover Record --
-----
Failover Count:       1
Last failover timestamp: Jul 13 2007 21:25:32
Last failover Reason:  User request

-- Last Data Block Sync Record: --
-----
Line Card Config:     succeeded Jul 13 2007 21:28:53
Start-up Config:      succeeded Jul 13 2007 21:28:53
SFM Config State:     succeeded Jul 13 2007 21:28:53
Runtime Event Log:    succeeded Jul 13 2007 21:28:53
Running Config:       succeeded Jul 13 2007 21:28:53
DelleMC#
```

Internet Group Management Protocol (IGMP)

The IGMP commands are supported on the Dell EMC Networking OS.

Topics:

- IGMP Commands
- clear ip igmp groups
- clear ip igmp snooping groups
- debug ip igmp
- debug ip igmp snooping
- ip igmp access-group
- ip igmp immediate-leave
- ip igmp last-member-query-interval
- ip igmp query-interval
- ip igmp query-max-resp-time
- ip igmp ssm-map
- ip igmp version
- show ip igmp groups
- show ip igmp interface
- show ip igmp ssm-map
- IGMP Snooping Commands
- ip igmp snooping enable
- ip igmp snooping fast-leave
- ip igmp snooping flood
- ip igmp snooping last-member-query-interval
- ip igmp snooping mrouter
- ip igmp snooping querier
- show ip igmp snooping groups
- show ip igmp snooping mrouter

IGMP Commands

Dell EMC Networking OS supports IGMPv1/v2/v3 and is compliant with RFC-3376.

Important Points to Remember

- Dell EMC Networking OS supports protocol-independent multicast-sparse (PIM-SM) and protocol-independent source-specific multicast (PIM-SSM) include and exclude modes.
- IGMPv2 is the default version of IGMP on interfaces. You can configure IGMPv3 on interfaces. It is backward compatible with IGMPv2.
- There is no hard limit on the maximum number of groups supported.
- IGMPv3 router interoperability with IGMPv2 and IGMPv1 routers on the same subnet is not supported.
- An administrative command (`ip igmp version`) is added to manually set the IGMP version.
- All commands previously used for IGMPv2 are compatible with IGMPv3.

clear ip igmp groups

Clear entries from the group cache table.

S5000

Syntax

```
clear ip igmp [vrf vrf-name] groups [group-address | interface]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.
 **NOTE:** Applies to specific VRF if input is provided, else applies to default VRF.
- group-address** (OPTIONAL) Enter the IP multicast group address in dotted decimal format.
- interface interface** Enter the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

clear ip igmp snooping groups

Clear snooping entries from the group cache table.

S5000

Syntax `clear ip igmp snooping groups [group-address interface | interface]`

Parameters

group-address	(OPTIONAL) Enter the IP multicast group address in dotted decimal format.
interface interface	Enter the following keywords and the interface information: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on S-Series and Z-Series.

Usage Information IGMP commands accept only non-VLAN interfaces — specifying VLAN does not yield results.

debug ip igmp

Enable debugging of IGMP packets.

S5000

Syntax `debug ip igmp [vrf vrf-name] [group address | interface]`

- To disable IGMP debugging, use the `no debug ip igmp [vrf vrf-name] [group address | interface]` command.
- To disable all debugging, use the `undebug all` command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable debugging of IGMP packets corresponding to that VRF.
---------------------	--

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

group-address (OPTIONAL) Enter the IP multicast group address in dotted decimal format.

interface
interface Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

Defaults Disabled.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information IGMP commands accept *only* non-VLAN interfaces — specifying VLAN does not yield results. This command displays packets for IGMP and IGMP snooping.

debug ip igmp snooping

Enable debugging of IGMP snooping packets on interfaces and groups.

S5000

Syntax `debug ip igmp snooping [group address | interface]`

- To disable debugging of IGMP snooping, use the `no debug ip igmp snooping [group address | interface]` command.
- To disable all debugging, use the `undebug all` command.

Parameters	<p>snooping Enter the keyword <code>snooping</code> to enable debugging of IGMP snooping.</p> <p>group-address (OPTIONAL) Enter the IP multicast group address in dotted decimal format.</p> <p>interface Enter the following keywords and the interface information:</p> <p>interface</p> <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. 																		
Defaults	Disabled.																		
Command Modes	EXEC Privilege																		
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																		
	<table border="0"> <thead> <tr> <th style="text-align: left;">Version</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> <tr> <td>9.8(1.0)</td> <td>Introduced on the Z9100-ON.</td> </tr> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.7(0.0)</td> <td>Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9000, and Z9500.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.	9.8(1.0)	Introduced on the Z9100-ON.	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9000, and Z9500.
Version	Description																		
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.																		
9.10(0.0)	Introduced on the S3148.																		
9.10(0.0)	Introduced on the S6100-ON.																		
9.8(2.0)	Introduced on the S3100 series.																		
9.8(1.0)	Introduced on the Z9100-ON.																		
9.8(0.0P5)	Introduced on the S4048-ON.																		
9.8(0.0P2)	Introduced on the S3048-ON.																		
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9000, and Z9500.																		
Usage Information	IGMP commands accept <i>only</i> non-VLAN interfaces — specifying VLAN does not yield results. This command displays packets for IGMP and IGMP snooping.																		

ip igmp access-group

To specify access control for packets, use this feature.

Syntax	<pre>ip igmp access-group access-list</pre> <p>To remove the feature, use the <code>no ip igmp access-group access-list</code> command.</p>										
Parameters	<p>access-list Enter the name of the extended ACL (16 characters maximum).</p>										
Defaults	Not configured										
Command Modes	INTERFACE (conf-if-interface-slot/port)										
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .										
	<table border="0"> <thead> <tr> <th style="text-align: left;">Version</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.
Version	Description										
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.										
9.10(0.0)	Introduced on the S3148.										
9.10(0.0)	Introduced on the S6100-ON.										
9.8(2.0)	Introduced on the S3100 series.										

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.
7.6.1.0	Introduced on E-Series.

Usage Information

The access list accepted is an extended ACL. To block IGMP reports from hosts, on a per-interface basis based on the group address and source address that you specify in the access list, use this feature.

ip igmp immediate-leave

Enable IGMP immediate leave.

Syntax

`ip igmp immediate-leave [group-list prefix-list-name]`

To disable `ip igmp immediate-leave`, use the `no ip igmp immediate-leave` command.

Parameters

group-list *prefix-list-name* Enter the keywords `group-list` then a string up to 16 characters long of the *prefix-list-name*.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

Querier normally sends some group-specific queries when a `leave` message is received for a group prior to deleting a group from the membership database. There may be situations when you require immediate deletion of a group from the membership database. This command provides a way to achieve the immediate deletion. In addition, this command provides a way to enable `immediate-leave processing` for specified groups.

ip igmp last-member-query-interval

Change the last member query interval, which is the Max Response Time inserted into Group-Specific Queries sent in response to Leave Group messages. This interval is also the interval between Group-Specific Query messages.

S5000

Syntax

```
ip igmp last-member-query-interval milliseconds
```

To return to the default value, use the `no ip igmp last-member-query-interval` command.

Parameters

milliseconds Enter the number of milliseconds as the interval. For IGMP version 2, the range is from 100 to 25599. For IGMP version 3, the range is from 100 to 65535. The default value is **1000 milliseconds**.

Defaults

1000 milliseconds

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	For IGMP version 2, the Interval range is from 100 to 25599. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
E-Series legacy command	

ip igmp query-interval

Change the transmission frequency of IGMP general queries the Querier sends.

S5000

Syntax	<code>ip igmp query-interval seconds</code> To return to the default values, use the <code>no ip igmp query-interval</code> command.																																				
Parameters	seconds Enter the number of seconds between queries sent out. The range is from 1 to 18000. The default is 60 seconds .																																				
Defaults	60 seconds																																				
Command Modes	INTERFACE																																				
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																																				
	<table> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> <tr> <td>9.8(1.0)</td> <td>Introduced on the Z9100-ON.</td> </tr> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.7(0.0)</td> <td>Maximum range of the Hello interval value is changed to 18000. Introduced on the S6000-ON.</td> </tr> <tr> <td>9.5(0.0)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>9.2(0.0)</td> <td>Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.</td> </tr> <tr> <td>9.0.2.0</td> <td>Introduced on the S6000.</td> </tr> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.3.11.1</td> <td>Introduced on the Z9000.</td> </tr> <tr> <td>8.3.7.0</td> <td>Introduced on the S4810.</td> </tr> <tr> <td>7.8.1.0</td> <td>Introduced on the S-Series.</td> </tr> <tr> <td>7.7.1.0</td> <td>Introduced on the C-Series.</td> </tr> <tr> <td>7.6.1.0</td> <td>Introduced on the S-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.	9.8(1.0)	Introduced on the Z9100-ON.	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.7(0.0)	Maximum range of the Hello interval value is changed to 18000. Introduced on the S6000-ON.	9.5(0.0)	Introduced on the Z9500.	9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.	9.0.2.0	Introduced on the S6000.	8.3.19.0	Introduced on the S4820T.	8.3.11.1	Introduced on the Z9000.	8.3.7.0	Introduced on the S4810.	7.8.1.0	Introduced on the S-Series.	7.7.1.0	Introduced on the C-Series.	7.6.1.0	Introduced on the S-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.
Version	Description																																				
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.																																				
9.10(0.0)	Introduced on the S3148.																																				
9.10(0.0)	Introduced on the S6100-ON.																																				
9.8(2.0)	Introduced on the S3100 series.																																				
9.8(1.0)	Introduced on the Z9100-ON.																																				
9.8(0.0P5)	Introduced on the S4048-ON.																																				
9.8(0.0P2)	Introduced on the S3048-ON.																																				
9.7(0.0)	Maximum range of the Hello interval value is changed to 18000. Introduced on the S6000-ON.																																				
9.5(0.0)	Introduced on the Z9500.																																				
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.																																				
9.0.2.0	Introduced on the S6000.																																				
8.3.19.0	Introduced on the S4820T.																																				
8.3.11.1	Introduced on the Z9000.																																				
8.3.7.0	Introduced on the S4810.																																				
7.8.1.0	Introduced on the S-Series.																																				
7.7.1.0	Introduced on the C-Series.																																				
7.6.1.0	Introduced on the S-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.																																				

Version	Description
7.5.1.0	Introduced on the C-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.

E-Series legacy command.

Usage Information

If you have configured the hello interval value to be greater than 18000, you must first reset that value to be less than or equal to 18000 before upload. Otherwise, the command execution fails during bootup and the hello interval value is set to the default value.

ip igmp query-max-resp-time

Set the maximum query response time advertised in general queries.

 **NOTE:** The IGMP query-max-resp-time value must be less than the IGMP query-interval value.

Syntax `ip igmp query-max-resp-time seconds`
 To return to the default values, use the `no ip igmp query-max-resp-time` command.

Parameters **seconds** Enter the number of seconds for the maximum response time. The range is from 1 to 25. The default is **10 seconds**.

Defaults **10 seconds**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the S-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.

Version	Description
7.5.1.0	Introduced on the C-Series in Interface VLAN mode only to enable the system to act as an IGMP Proxy Querier.
E-Series legacy command.	

ip igmp ssm-map

To translate (*,G) memberships to (S,G) memberships, use a statically configured list.

S5000

Syntax	<code>ip igmp [vrf vrf-name] ssm-map std-access-list source-address</code> Undo this configuration, that is, remove SSM map (S,G) states and replace them with (*,G) state, use the <code>ip igmp [vrf vrf-name] ssm-map std-access-list source-address</code> command.
Parameters	<p>vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure this setting on that VRF.  NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.</p> <p>std-access-list Specify the standard IP access list that contains the mapping rules for multicast groups.</p> <p>source-address Specify the multicast source address to which the groups are mapped.</p>
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF and Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.
7.7.1.0	Introduced on the E-Series.

Usage Information

Mapping applies to both v1 and v2 IGMP joins; any updates to the ACL are reflected in the IGMP groups. You may not use extended access lists with this command. When you configure a static SSM map and the router cannot find any matching access lists, the router continues to accept (*,G) groups.

Related Commands

- [ip access-list standard](#) — create a standard access list to filter based on IP address.

ip igmp version

Manually set the version of the router to IGMPv2 or IGMPv3.

S5000

Syntax `ip igmp version {2 | 3}`

Parameters

2	Enter the number 2 to set the IGMP version number to IGMPv2.
3	Enter the number 3 to set the IGMP version number to IGMPv3.

Defaults 2 (IGMPv2)

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Changed the default IGMP from version 2 to version 3. Introduced on the S6000-ON
9.5(0.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

show ip igmp groups

View the IGMP groups.

S5000

Syntax `show ip igmp [vrf vrf-name] groups [group-address [detail] | detail | interface [group-address [detail]]]`

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.

group-address (OPTIONAL) Enter the group address in dotted decimal format to view information on that group only.

interface (OPTIONAL) Enter the interface type and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

detail (OPTIONAL) Enter the keyword `detail` to display the IGMPv3 source information.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series and C-Series.
7.5.1.0	Expanded to support the <code>detail</code> option.

Version Description

E-Series legacy command.

Usage Information

This command displays the IGMP database, including configured entries for either all groups on all interfaces, all groups on specific interfaces, or specific groups on specific interfaces.

The following describes the `show ip igmp groups` command shown in the following example.

Field Description

Group Address	Lists the multicast address for the IGMP group.
Interface	Lists the interface type, slot and port number.
Mode	Displays the IGMP version used.
Uptime	Displays the amount of time the group has been operational.
Expires	Displays the amount of time until the entry expires.
Last Reporter	Displays the IP address of the last host to be a member of the IGMP group.

Example

```
DellEMC# show ip igmp groups
Total Number of Groups: 5
IGMP Connected Group Membership
Group Address Interface Uptime Expires
225.0.0.0      Vlan 100    00:00:05 00:02:04
225.0.0.1      Vlan 100    00:00:05 00:02:04
225.0.0.2      Vlan 100    00:00:05 00:02:04
225.0.0.3      Vlan 100    00:00:05 00:02:04
225.0.0.4      Vlan 100    00:00:05 00:02:04
```

Example (VLT)

i **NOTE:** The asterisk (*) after the port channel number (Po 2) highlighted in the following example indicates the port channel is VLT, that the local VLT port channel is down and the remote VLT port is up.

```
DellEMC# show ip igmp groups
Total Number of Groups: 5
IGMP Connected Group Membership
Group Address Interface Mode Uptime Expires Last Reporter
225.0.0.0      Vlan 100 IGMPv2 00:00:05 00:02:04 3.0.0.51
225.0.0.1      Vlan 100 IGMPv2 00:00:05 00:02:04 3.0.0.51
225.0.0.2      Vlan 100 IGMPv2 00:00:05 00:02:04 3.0.0.51
225.0.0.3      Vlan 100 IGMPv2 00:00:05 00:02:04 3.0.0.51
225.0.0.4      Vlan 100 IGMPv2 00:00:05 00:02:04 3.0.0.51
```

Example (Details)

```
DellEMC# show ip igmp group details
Interface          Vlan 20
Group              232.1.1.5
Uptime             00:11:22
Expires            Never
Router mode        INCLUDE
Last reporter      35.0.0.2
Group source list
Source address     Expires
65.0.0.1          00:01:22
```

65.0.0.2	00:01:22
65.0.0.3	00:01:22
65.0.0.4	00:01:22
65.0.0.5	00:01:22

show ip igmp interface

View information on the interfaces participating in IGMP.

S5000

Syntax

```
show ip igmp [vrf vrf-name] interface [interface]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to view IGMP interfaces associated with that VRF.
- interface** (OPTIONAL) Enter the interface type and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
---------	-------------

E-Series legacy command.

Usage Information

IGMP commands accept *only* non-VLAN interfaces — specifying VLAN does not yield results.

The `show ip igmp interface` command does not display information corresponding to the loop-back interfaces.

Example

```
DelleEMC# show ip igmp interface
TenGigabitEthernet 1/1 is down, line protocol is down
  Internet protocol processing disabled
TenGigabitEthernet 1/5 is down, line protocol is down
  Internet protocol processing disabled
TenGigabitEthernet 1/6 is down, line protocol is down
  Internet protocol processing disabled
TenGigabitEthernet 1/7 is up, line protocol is down
  Internet protocol processing disabled
Vlan 20
  Inbound IGMP access group is not set
  Internet address is 35.0.0.1/24
  IGMP is enabled on interface
  IGMP query interval is 60 seconds
  IGMP querier timeout is 125 seconds
  IGMP max query response time is 10 seconds
  IGMP last member query response interval is 1000 ms
  IGMP immediate-leave is enabled for all groups
  IGMP activity: 0 joins
  IGMP querying router is 35.0.0.1 (this system)
  IGMP version is 2
```

Example (VRF)

```
DelleEMC# show ip igmp vrf BLUE interface
TenGigabitEthernet 1/20
  Inbound IGMP access group is not set
  Internet address is 50.10.4.1/24
  IGMP is up on the interface
  IGMP query interval is 60 seconds
  IGMP querier timeout is 0 seconds
  IGMP max query response time is 10 seconds
  IGMP last member query response interval is 1000 ms
  IGMP immediate-leave is disabled
  IGMP activity: 0 joins
  IGMP querying router is 50.10.4.1 (this system)
  IGMP version is 3
Vlan 4007
  Inbound IGMP access group is not set
  Internet address is 50.30.124.4/24
  IGMP is up on the interface
  IGMP query interval is 60 seconds
  IGMP querier timeout is 83 seconds
  IGMP max query response time is 10 seconds
  IGMP last member query response interval is 1000 ms
  IGMP immediate-leave is disabled
  IGMP activity: 0 joins
  IGMP querying router is 50.30.124.1
  IGMP version is 3
DelleEMC#
```

show ip igmp ssm-map

Display is a list of groups that are currently in the IGMP group table and contain SSM mapped sources.

S5000

Syntax `show ip igmp [vrf vrf-name] ssm-map [group]`

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.
NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
- group** (OPTIONAL) Enter the multicast group address in the form A.B.C.D to display the list of sources to which this group is mapped.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.
7.7.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip igmp ssm-map
Interface          Vlan 20
Group              232.1.1.5
Uptime            00:11:22
Expires           Never
Router mode       INCLUDE
Last reporter     35.0.0.2
Group source list
Source address    Expires
65.0.0.1         00:01:22
65.0.0.2         00:01:22
65.0.0.3         00:01:22
65.0.0.4         00:01:22
65.0.0.5         00:01:22
```

**Related
Commands**

- `ip igmp ssm-map` — use a statically configured list to translate (*,G) memberships to (S,G) memberships.

IGMP Snooping Commands

Dell EMC Networking OS supports IGMP Snooping version 2 and 3 on all Dell EMC Networking systems.

Important Points to Remember for IGMP Snooping

- Dell EMC Networking OS supports version 1, version 2, and version 3 hosts.
- Dell EMC Networking OS IGMP snooping implementation is based on IP multicast address (not based on Layer 2 multicast mac address) and the IGMP snooping entries are in Layer 3 flow table not in Layer 2 forwarding information base (FIB).
- Dell EMC Networking OS IGMP snooping implementation is based on draft-ietf-magma-snoop-10.
- Dell EMC Networking OS supports IGMP snooping on JUMBO-enabled cards.
- IGMP snooping is not enabled by default on the switch.
- A maximum of 1800 groups and 600 VLAN are supported.
- IGMP snooping is not supported on a default VLAN interface.
- IGMP snooping is not supported over VLAN-Stack-enabled VLAN interfaces (you must disable IGMP snooping on a VLAN interface before configuring VLAN-Stack-related commands).
- IGMP snooping does not react to Layer 2 topology changes triggered by spanning tree protocol (STP).
- IGMP snooping reacts to Layer 2 topology changes multiple spanning tree protocol (MSTP) triggers by sending a general query on the interface that comes in the FWD state.

Important Points to Remember for IGMP Querier

- The IGMP snooping Querier supports version 2.
- You must configure an IP address to the VLAN interface for IGMP snooping Querier to begin. The IGMP snooping Querier disables itself when a VLAN IP address is cleared, and then it restarts itself when an IP address is reassigned to the VLAN interface.
- When enabled, IGMP snooping Querier does not start if there is a statically configured multicast router interface in the VLAN.
- When enabled, IGMP snooping Querier starts after one query interval in case no IGMP general query (with IP SA lower than its VLAN IP address) is received on any of its VLAN members.
- When enabled, IGMP snooping Querier periodically sends general queries with an IP source address of the VLAN interface. If it receives a general query on any of its VLAN member, it checks the IP source address of the incoming frame.

If the IP SA in the incoming IGMP general query frame is lower than the IP address of the VLAN interface, the switch disables its IGMP snooping Querier functionality.

If the IP SA of the incoming IGMP general query is higher than the VLAN IP address, the switch continues to work as an IGMP snooping Querier.

ip igmp snooping enable

Enable IGMP snooping on all or a single VLAN. This command is the master on/off switch to enable IGMP snooping.

Syntax `ip igmp snooping enable`

To disable IGMP snooping, use the `no ip igmp snooping enable` command.

Defaults Disabled.

Command Modes

- CONFIGURATION
- INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information

To enable IGMP snooping, enter this command. When you enable this command from CONFIGURATION mode, IGMP snooping enables on all VLAN interfaces (except the default VLAN).

 **NOTE:** Execute the `no shutdown` command on the VLAN interface for IGMP Snooping to function.

ip igmp snooping fast-leave

Enable IGMP snooping fast-leave for this VLAN.

S5000

Syntax

`ip igmp snooping fast-leave`

To disable IGMP snooping fast leave, use the `no igmp snooping fast-leave` command.

Defaults

Not configured.

Command Modes

INTERFACE VLAN — (conf-if-vl-n)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command.	

Usage Information

Queriers normally send some queries when a leave message is received prior to deleting a group from the membership database. There may be situations when you require a fast deletion of a group. When you enable IGMP fast leave processing, the switch removes an interface from the multicast group as soon as it detects an IGMP version 2 leave message on the interface.

ip igmp snooping flood

This command controls the flooding behavior of unregistered multicast data packets.

Syntax

`ip igmp snooping flood`

To undo this configuration, use the `no ip igmp snooping flood` command.

Defaults

Enabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and S-Series.
7.7.1.0	Introduced on the E-Series.
E-Series legacy command	

Usage Information

On the C-Series and S-Series, unregistered multicast data traffic drops when you disable flooding; they do not forward the packets to multicast router ports. On the C-Series and S-Series, in order to disable Layer 2 multicast flooding, disable Layer 3 multicast (`no ip multicast-routing`).

ip igmp snooping last-member-query-interval

The last member query interval is the maximum response time inserted into Group-Specific queries sent in response to Group-Leave messages.

S5000

Syntax

```
ip igmp snooping last-member-query-interval milliseconds
```

To return to the default value, use the `no ip igmp snooping last-member-query-interval` command.

Parameters

milliseconds Enter the interval in milliseconds. The range is from 100 to 65535. The default is **1000 milliseconds**.

Defaults

1000 milliseconds

Command Modes

INTERFACE VLAN

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

This last-member-query-interval is also the interval between successive Group-Specific Query messages. To change the last-member-query interval, use this command.

ip igmp snooping mrouter

Statically configure a VLAN member port as a multicast router interface.

S5000

Syntax `ip igmp snooping mrouter interface interface`
To delete a specific multicast router interface, use the `no igmp snooping mrouter interface interface` command.

Parameters

interface <i>interface</i>	Enter the following keywords and the interface information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a port channel interface, enter the keywords <code>port-channel</code> then a number. The range is from 1 to 128.
---	--

Defaults Not configured.

Command Modes INTERFACE VLAN — (conf-if-vl-n)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command.	

Usage Information The Dell EMC Networking OS provides the capability of statically configuring the interface to which a multicast router is attached. To configure a static connection to the multicast router, enter the `ip igmp snooping mrouter interface` command in the VLAN context. The interface to the router must be a part of the VLAN where you are entering the command.

ip igmp snooping querier

Enable IGMP querier processing for the VLAN interface.

S5000

Syntax `ip igmp snooping querier`
To disable IGMP querier processing for the VLAN interface, use the `no ip igmp snooping querier` command.

Defaults Not configured.

Command Modes INTERFACE VLAN — (conf-if-vl-n)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information This command enables the IGMP switch to send General Queries periodically. This behavior is useful when there is no multicast router present in the VLAN because the multicast traffic is not routed. Assign an IP address to the VLAN interface for the switch to act as a querier for this VLAN.

show ip igmp snooping groups

Display snooping related information for all the IGMP groups, interface or one group of one interface.

S5000

Syntax `show ip igmp snooping groups [group-address [detail] | detail | interface [group-address [detail]]]`

Parameters

- snooping** Enter the keyword `snooping` to display snooping related information.
- group-address** (OPTIONAL) Enter the group address in dotted decimal format to view information on that group only.
- interface** (OPTIONAL) Enter the interface type and the interface information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- detail** (OPTIONAL) Enter the keyword `detail` to display the IGMPv3 source information.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, Z9000, and Z9500.

Usage Information This command displays the IGMP database, including configured entries for either all groups on all interfaces, all groups on specific interfaces, or specific groups on specific interfaces.

The following describes the `show ip igmp groups` command shown in the following example.

Field	Description
Group Address	Lists the multicast address for the IGMP group.
Interface	Lists the interface type, slot and port number.
Mode	Displays the IGMP version used.
Uptime	Displays the amount of time the group has been operational.
Expires	Displays the amount of time until the entry expires.

Field	Description
Last Reporter	Displays the IP address of the last host to be a member of the IGMP group.
Member Ports	Indicates the port channel. If the port channel is VLT, an asterisk (*) after the port channel number indicates the port channel is locally down and that a remote VLT port is up.

Example

```
DellEMC# show ip igmp snooping groups
Total Number of Groups: 1
IGMP Connected Group Membership
Group Address      Interface      Mode          Uptime      Expires      Last
Reporter
225.1.1.1          Vlan 10       IGMPv2-Compat 00:00:07    00:02:09    1.1.1.2
  Member Ports: Te 1/17
DellEMC#
```

show ip igmp snooping mrouter

Display multicast router interfaces.

S5000

Syntax `show ip igmp snooping mrouter [vlan number]`

Parameters **vlan number** Enter the keyword `vlan` then the vlan number. The range is from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
---------	-------------

E-Series legacy command.

Usage Information

If the port channel is a VLT port channel, an asterisk (*) after the port channel number (Po 100*) indicates the port channel is locally down and that a remote VLT port is up.

Example

```
DellEMC# show ip igmp snooping mrouter
Interface Router Ports
Vlan 2 Te 1/3, Po 1
DellEMC#
```

Related Commands

- [ip igmp snooping mrouter](#) — configure a static connection to the multicast router.
- [show ip igmp groups](#) — view groups.

Interfaces

To configure egress, port channel, time domain, and UDP, use these interface commands.

Topics:

- [Basic Interface Commands](#)
- [Port Channel Commands](#)
- [Time Domain Reflectometer \(TDR\) Commands](#)
- [UDP Broadcast Commands](#)

Basic Interface Commands

The following commands are for Physical, Loopback, and Null interfaces.

clear counters

Clear the counters displayed in the show interfaces commands for all virtual router redundancy protocol (VRRP) groups, virtual local area networks (VLANs), and physical interfaces, or selected ones.

Syntax `clear counters [interface | vrrp {vr-id | ipv6 vr-id} | learning-limit | vlan vlan-id]`

- Parameters** *interface* (OPTIONAL) Enter any of the following keywords and the interface information to clear counters from a specified interface:
- For IPv4 access-group counters, enter the keyword `ip`.
 - For IPv6 access-group counters, enter the keyword `ipv6`.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For MAC access-group counters, enter the keyword `mac`.
 - For a Port Channel interface, enter the keywords `port-channel` then a number.
 - For the management interface, enter the keyword `ManagementEthernet` then slot/port information.
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a tunnel interface, enter the keyword `tunnel`. The range is from 1 to 16383.
- NOTE:** This command also enables you to clear the port configurations corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.
- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to clear the port configurations corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
 - For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to clear the port

configurations corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

- vrrp [ipv6 {vr-id} | vr-id]** (OPTIONAL) Enter the keyword `vrrp` to clear the counters of all VRRP groups. To clear the counters of VRRP groups on all IPv6 interfaces, enter `ipv6`. To clear the counters of a specified group, enter a VRID number from 1 to 255.
- learning-limit** (OPTIONAL) Enter the keywords `learning-limit` to clear unknown source address (SA) drop counters when MAC learning limit is configured on the interface.
- vlan *vlan-id*** Enter the keyword `vlan` followed by the interface VLAN number. The range is from 1 to 4094.

Defaults Without an interface specified, the command clears all interface counters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to clear the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Added the VLAN parameter.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.1.0	Added support (E-Series only) for VRRP groups in a VRF instance.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4093 VLANs on the E-Series. Prior to the release, 2094 was supported.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Updated the definition of the <code>learning-limit</code> option for clarity.

Example

```
DellEMC# clear counters
Clear counters on all interfaces [confirm]
DellEMC#
```

Related Commands

- [mac learning-limit](#) — allow aging of MACs even though a learning-limit is configured or disallow station move on learned MACs.

clear counters eee

Clear the counters for EEE on all copper ports or specific ports.

Syntax `clear counters [interface-type [slot/port | slot/port-range]] eee`

Parameters **interface-type** Enter the interface information as TenGigabitEthernet followed by the slot and the port number or range of port numbers.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S3100 series, S4820T, and S5000.

Usage Information

Use the `clear counters eee` command to clear counters for EEE on all the copper ports.

Use the `clear counters interface-type slot/port eee` command to clear the counters for EEE on the specified port.

Use the `clear counters interface-type slot/port-range eee` to clear the counters for EEE on the specified range of ports.

Example

```
DellEMC# clear counters eee
Clear eee counters on all Copper Ports [confirm] y
DellEMC#

DellEMC# clear counters tengigabitethernet 1/1 eee
Clear eee counters on Te 1/1 [confirm] y
DellEMC#

DellEMC# clear counters tengigabitethernet 1/1-10 eee
Clear eee counters on Te 1/1-10 [confirm] y
DellEMC#
```

clear dampening

Clear the dampening counters on all the interfaces or just the specified interface.

Syntax `clear dampening [interface]`

Parameters **interface** (OPTIONAL) Enter any of the following keywords and the interface information to clear counters from a specified interface:

- For a Port Channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults Without an interface specified, the command clears all interface dampening counters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC#clear dampening tegigabitethernet 1/10
Clear dampening counters on TeGi 1/10 [confirm] y
DellEMC#
```

Related Commands

- [show interfaces dampening](#) — display interface dampening information.
- [dampening](#) — configure dampening on an interface.

cx4-cable-length

Configure the length of the cable to be connected to the selected CX4 port.

Syntax [no] `cx4-cable-length {long | medium | short}`

Parameters

long | medium | short Enter the keyword that matches the cable length to be used at the selected port:

- `short` = For 1-meter and 3-meter cable lengths.
- `medium` = For 5-meter cable length.
- `long` = For 10-meter and 15-meter cable lengths.

Defaults `medium`

Command Modes INTERFACE

Command History

Version	Description
7.7.1.0	Introduced on the S-Series.

Usage Information This command only works on ports that the system recognizes as CX4 ports. The `show interfaces` command shown in the Example below describes an attempt to configure an XFP port in an S25P with the command after inserting a CX4 converter into the port.

NOTE: When using a long CX4 cable between the C-Series and the S-Series, to avoid errors, configure the cable using the `cx4-cable-length short` command only.

NOTE: The 15M CX4 active cable is not supported on the C-Series and S-series. It is only supported for S2410 with active end on the device.

NOTE: For information about using XFP ports with CX4 cables, refer to your S-Series hardware guide.

Example (Unsuccessful)

```
Dell#show interfaces tengigabitethernet 0/26 | grep "XFP type"
Pluggable media present, XFP type is 10GBASE-CX4

Dell(conf-if-te-0/26)#cx4-cable-length short
% Error: Unsupported command.
Dell(conf-if-te-0/26)#cx4-cable-length medium
% Error: Unsupported command.
Dell(conf-if-te-0/26)#cx4-cable-length long
% Error: Unsupported command.
Dell(conf-if-te-0/26)#
```

Example (Successful)

```
Dell#config
Dell(config)#interface tengigabitethernet 0/52
Dell(conf-if-0/52)#cx4-cable-length long
Dell(conf-if-0/52)#show config
!
interface TenGigabitEthernet 0/51
  no ip address
  cx4-cable-length long
  shutdown
Dell(conf-if-0/52)#exit
Dell(config)#
```

Related Commands

[show config](#) – displays the configuration of the selected interface.

dampening

Configure dampening on an interface.

Syntax dampening [[[*half-life*] [*reuse-threshold*]] [*suppress-threshold*]] [*max-suppress-time*]]

Parameters	<i>half-life</i>	Enter the number of seconds after which the penalty is decreased. The penalty decreases half after the half-life period expires. The range is from 1 to 30 seconds. The default is 5 seconds .
	<i>reuse-threshold</i>	Enter a number as the reuse threshold, the penalty value below which the interface state is changed to “up”. The range is from 1 to 20000. The default is 750 .
	<i>suppress-threshold</i>	Enter a number as the suppress threshold, the penalty value above which the interface state is changed to “error disabled”. The range is from 1 to 20000. The default is 2500 .
	<i>max-suppress-time</i>	Enter the maximum number for which a route can be suppressed. The default is four times the half-life value. The range is from 1 to 86400. The default is 20 seconds .

Defaults Disabled.

Command Modes INTERFACE (conf-if-)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

With each flap, Dell EMC Networking OS penalizes the interface by assigning a penalty (1024) that decays exponentially depending on the configured half-life. After the accumulated penalty exceeds the suppress threshold value, the interface moves to the Error-Disabled state. This interface state is deemed as “down” by all static/dynamic Layer 2 and Layer 3 protocols. The penalty is exponentially decayed based on the half-life timer. After the penalty decays below the reuse threshold, the interface enables. The configured parameters are as follows:

- `suppress-threshold` should be greater than `reuse-threshold`
- `max-suppress-time` should be at least 4 times `half-life`

 **NOTE:** You cannot apply dampening on an interface that is monitoring traffic for other interfaces.

Example

```
DellEMC(conf-if-te-1/10)# dampening 20 800 4500 120
DellEMC(conf-if-te-1/10)#
```

Related Commands

- [clear dampening](#) — clear the dampening counters on all the interfaces or just the specified interface.
- [show interfaces dampening](#) — display interface dampening information.

default interface

Reset a physical interface to its factory default settings.

Syntax

```
default interface interface-type slot/port - range
```

Parameters

- interface-type slot/port*** Enter the interface type and slot/port information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- range***
- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.

- For ON platforms, you can specify multiple ports as `slot/port/[subport]` - `slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, and Z9500.

Usage Information

Use the default `interface` command to set a Gigabit Ethernet, 10- Gigabit Ethernet, or 40-Gigabit Ethernet interface to its factory-default state. By default, a physical interface is disabled (shutdown) with no assigned IP address or switchport (no ip address). This command removes all software settings and all L3, VLAN, VXLAN, and port-channel configurations on a physical interface.

Example

```
DelleMC(conf-if-te-1/5)# show config
!
interface TenGigabitEthernet 1/5
description testconfig
no ip address
portmode hybrid
switchport
rate-interval 8
mac learning-limit 10 no-station-move
no shutdown
DelleMC(conf-if-te-1/5)#

DelleMC(conf)# default interface tengigabitethernet 1/5

DelleMC(conf-if-te-1/5)# show config
!
interface TenGigabitEthernet 1/5
no ip address
shutdown
```

Related Commands

- [show running-config](#) – display the current configuration.

description

Assign a descriptive text string to the interface.

Syntax `description desc_text`
 To delete a description, use the `no description` command.

Parameters `desc_text` Enter a text string up to 240 characters long.

Defaults None

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Modified for E-Series: Revised from 78 to 240 characters.

Usage Information

Important Points to Remember:

- To use special characters as a part of the description string, you must enclose the whole string in double quotes.
- Spaces between characters are not preserved after entering this command unless you enclose the entire description in quotation marks ("*desc_text*").
- Entering a text string after the `description` command overwrites any previous text string that you previously configured as the description.
- The `shutdown` and `description` commands are the only commands that you can configure on an interface that is a member of a port-channel.
- Use the `show interfaces description` command to display descriptions configured for each interface.

duplex (10/100 Interfaces)

Configure duplex mode on the Management Interface interfaces where the speed is set to 10/100.

Syntax

```
duplex {half | full}
```

To return to the default setting, use the `no duplex` command.

Parameters

half	Enter the keyword <code>half</code> to set the physical interface to transmit only in one direction.
full	Enter the keyword <code>full</code> to set the physical interface to transmit in both directions.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced

Usage Information

This command applies to any physical interface with speed set to 10/100.

NOTE: Starting with Dell EMC Networking OS version 7.8.1.0, when you use a copper SFP2 module with catalog number GP-SFP2-1T in the S25P model of the S-Series, you can manually set its speed with the `speed` command. When you set the speed to 10 Mbps or 100 Mbps, you can also execute the `duplex` command.

Related Commands

- `negotiation auto` — enable or disables auto-negotiation on an interface.

duplex (Management interface)

Configure duplex mode on a management interface whose speed is set to 10/100 Mb/s.

S5000

Syntax

```
duplex {half | full}
```

To return to the default setting, use the `no duplex` command.

Parameters

half	Enter the keyword <code>half</code> to set the physical interface to transmit only in one direction.
full	Enter the keyword <code>full</code> to set the physical interface to transmit in both directions.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information	This command applies only to management interfaces with speed set to 10/100 Mb/s using the <code>speed</code> command.  NOTE: When you set the speed to 10 or 100 Mbps, you can also execute the <code>duplex</code> command.
Related Commands	interface ManagementEthernet — configures the Management port on the system (either the primary or standby stack-unit).

eee

Enable Energy-Efficient Ethernet (EEE) on native or optional module copper ports.

Syntax	<code>eee</code> To disable EEE, use the <code>no eee</code> command.
Defaults	None.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.11(0.)	Introduced on the S3048-ON.
9.10(0.1)	Introduced on the S4820T and S5000.
9.10(0.0)	Introduced on the S3100 series.

Usage Information	EEE is an IEEE 802.3 az standard that reduces power consumptions on Ethernet ports. When EEE is enabled, transmission is stopped when there is no data to be transmitted and is resumed on arrival of new packets. You can enable EEE only on ten Gigabit native or optional module copper ports.
--------------------------	---

Example To enable EEE:

```
DellEMC(conf)# interface tengigabitethernet 1/1
DellEMC(conf-if-te-1/1)# eee
```

To disable EEE:

```
DellEMC(conf)# interface tengigabitethernet 1/1
DellEMC(conf-if-te-1/1)# no eee
```

flowcontrol

Control how the system responds to and generates 802.3x pause flow control frames.

Syntax	<code>flowcontrol {rx {off on} tx {off on} [negotiate pause-threshold value resume-offset value] [monitor session-ID]}</code> To return to the default, use the <code>no</code> form of this command.
---------------	--

Parameters	<p>rx on Enter the keywords <code>rx on</code> to process the received flow control frames on this port.  NOTE: Flow-control packets are mirrored only when flow-control <code>rx</code> is enabled on an interface.</p> <p>rx off Enter the keywords <code>rx off</code> to ignore the received flow control frames on this port.</p> <p>tx on Enter the keywords <code>tx on</code> to send control frames from this port to the connected device when a higher rate of traffic is received.</p>
-------------------	--

tx off	Enter the keywords <code>tx off</code> so that flow control frames are not sent from this port to the connected device when a higher rate of traffic is received.
pause-threshold	Enter the buffer threshold limit for generating <code>PAUSE</code> frames.
resume-offset	Enter the offset value for generating <code>PAUSE</code> frames to resume traffic.
negotiate	(Optional) Enter the keyword <code>negotiate</code> to enable the pause-negotiation with the egress port of the peer device. If the <code>negotiate</code> command is not used, pause-negotiation is disabled. 40-gigabit Ethernet interfaces do not support pause-negotiation
monitor	Enter the keyword <code>monitor</code> then the session-ID to enable mirror flow control frames on the interface. The range is from 0 to 65535.

Defaults

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Added support for monitor session.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6.0.0	Added support for the negotiate feature on the S4810 and S4820T.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
6.5.1.9 and 7.4.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series with the <code>thresholds</code> option.

Usage Information

The globally assigned 48-bit multicast address 01-80-C2-00-00-01 is used to send and receive pause frames. To allow full-duplex flow control, stations implementing the pause operation instruct the MAC to enable the reception of frames with a destination address equal to this multicast address.

When a port receives traffic at a higher rate than it can process, the frames are stored in the port buffer. As a result, buffer usage increases. When the buffer usage reaches the value specified in the “pause-threshold” argument, the port sends `PAUSE` frame to the connected link partner to stop sending the traffic. Eventually this reduces the buffer usage. When the buffer usage drops by the value specified in the “resume-threshold”, the port again sends a `PAUSE` frame with 0 as wait-time. This results in resume of the paused traffic flow.

Important Points to Remember

- Do not enable `tx pause` when buffer carving is enabled. For information and assistance, consult Dell EMC Networking TAC.
- The only configuration applicable to half duplex ports is `rx off tx off`. The following error is returned:

Can't configure flowcontrol when half duplex is configure, config ignored

- Half duplex cannot be configured when the flow control configuration is on (default is `rx on tx on`). The following error is returned:

Can't configure half duplex when flowcontrol is on, config ignored

NOTE: The flow control must be off (`rx off tx off`) before configuring the half duplex.

- Speeds less than one Gig cannot be configured when the asymmetric flow control configuration is on. The following error is returned:

Can't configure speed <1G when Asymmetric flowcontrol is on, config ignored

- Dell EMC Networking OS only supports `rx on tx on` and `rx off tx off` for speeds less than one Gig (Symmetric).

NOTE: If you use the `disable rx flow control` command, Dell EMC Networking recommends rebooting the system.

NOTE: Dell EMC Networking OS does not support mirroring of `tx pause` frames.

Example

```
DelleMC(conf-if-Te-1/1)# show config
!
interface TenGigabitEthernet 1/1
no ip address
switchport
no negotiation auto
flowcontrol rx off tx on
no shutdown
...
```

Example (Monitor Session)

```
DelleMC(conf-if-te-1/5)#show config
!
interface TenGigabitEthernet 1/5
no ip address
shutdown
flowcontrol monitor 5
```

Example (Values) This Example shows how Dell EMC Networking OS negotiates the flow control values between two Dell EMC Networking chassis connected back-to-back using 1G copper ports.

Configured	LocRxConf	LocTxConf	RemoteRxConf	RemoteTxConf
	off	off	off	off
			off	on
			on	off
			on	on
	off	on	off	off
			off	on
			on	off
			on	on
	on	off	off	off
			off	on
			on	off
			on	on
	on	on	off	off

		off	on
		on	off
		on	on
LocNegRx	LocNegTx	RemNegRx	RemNegTx
off	off	off	off
off	off	off	off
off	off	off	off
off	off	off	off
off	off	off	off
off	off	off	off
off	on	on	off
off	off	off	off
off	off	off	off
on	off	off	on
on	on	on	on
on	on	on	on
on	on	on	on
off	off	off	off
off	off	off	off
on	on	on	on
on	on	on	on

interface

Configure a physical or virtual interface on the switch.

Syntax `interface interface`

Parameters *interface*

Enter one of the following keywords and the interface information:

- For a null interface, enter the keyword `null` then the slot/port information. The Null interface number is 0.
- For the Management interface on the stack-unit, enter the keyword `ManagementEthernet` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Tunnel interface, enter the keyword `tunnel` then the tunnel ID. The range is from 1 to 16383.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- For a port channel interface, enter the keywords `port-channel` then a number.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added the support for interfaces.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced

Usage Information

You cannot delete a physical interface.

By default, physical interfaces are disabled (`shutdown`) and are not assigned to an IP address or switchport. To place an interface in Layer 2 mode, ensure that the interface's configuration does not contain an IP address and enter the `switchport` command.

You can create up to 64 tunnel interfaces. The tunnel is added as a logical interface with no default configuration. To delete a tunnel interface, use the `no interface tunnel tunnel-id` command.

The tunnel interface operates as an ECMP (equal cost multi path) only when the next hop to the tunnel destination is over a physical interface. If you select any other interface as the next hop to the tunnel destination, the tunnel interface does not operate as an ECMP.

Example

```
DelleMC(conf)# int tengigabitethernet 1/10
DelleMC(conf-if-te-1/10)# exit
DelleMC(conf)#
```

Related Commands

- [interface loopback](#) — configure a Loopback interface.
- [interface null](#) — configure a Null interface.
- [interface port-channel](#) — configure a port channel.
- [interface vlan](#) — configure a VLAN.

interface group

Create or delete group of VLANs with a single command. You can also use this command to apply a set of configurations on a group of interfaces.

Syntax

```
interface group [interface | vlan vlanid {- vlanid } ]
```

To delete a range of VLANs, use the following command:

```
no interface group vlan vlanid {- vlanid}
```

Parameters

interface,
interface,...

Enter the keywords `interface group` and one of the interfaces — slot/port or VLAN number. Select the range of interfaces for bulk configuration. Spaces are not required between the commas. Comma-separated ranges can include VLANs and physical interfaces.

Enter the member VLANs using VLAN IDs (separated by commas), a range of VLAN IDs (separated by a hyphen), a single VLAN ID, or a combination. For example: VLAN IDs (comma-separated): 3, 4, 6. Range (hyphen-separated): 5-10.

Slot/Port information need not contain a space before and after the dash. For example, both of the following commands are valid:
`interface group tengigabitethernet 1/1 - 5;` `interface group tengigabitethernet 1/1-5.`

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, Z9000, and MXL Switch.

Usage Information

The `interface group` command will create all the non-existent VLANs specified in the range. On successful command execution, the CLI switches to the interface group context.

The configuration commands inside the group context will be the similar to that of the existing range command.

Note: For release 9.4(0.0), the group command is supported only for VLANs and physical interfaces.

Example

```
DellEMC(conf)# interface group ?
fortyGigE          FortyGigabit Ethernet interface
gigabitethernet   GigabitEthernet interface IEEE 802.3z
tengigabitethernet TenGigabit Ethernet interface
vlan              VLAN keyword

DellEMC(conf)# interface group vlan 1 - 2 , tengigabitethernet 1/10
DellEMC(conf-if-group-vl-1-2,te-1/10)# no shutdown
DellEMC(conf-if-group-vl-1-2,te-1/10)# end
```

Related Commands

- [interface range](#) — configure a range of interfaces.
- [interface vlan](#) — configures a VLAN.

interface loopback

Configure a Loopback interface.

Syntax

```
interface loopback number
```

To remove a loopback interface, use the `no interface loopback number` command.

Parameters	<i>number</i>	Enter a number as the interface number. The range is from 0 to 16383.
Defaults	Not configured.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced

Example

```
DellEMC(conf)# interface loopback 1655
DellEMC(conf-if-lo-1655)#
```

Related Commands

- [interface](#) — configure a physical interface.
- [interface null](#) — configure a Null interface.
- [interface port-channel](#) — configure a port channel.
- [interface vlan](#) — configure a VLAN.

interface managementEthernet

Configure the Management port on the system (either the Primary or Standby RPM).

Syntax	<code>interface managementEthernet slot/port</code>	
Parameters	<i>slot/port</i>	Enter the keyword <code>managementEthernet</code> , then the slot number (0 or 1) and port number zero (0).
Defaults	Not configured.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.11.1	Introduced on the S55, S60, and S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced

Usage Information

You cannot delete a Management port.

The Management port is enabled by default (`no shutdown`). To assign an IP address to the Management port, use the `ip address` command.

Example

```
DellEMC(conf)# interface managementethernet 0/0
DellEMC(conf-if-ma-0/0)#
```

Related Commands

- [management route](#) — configure a static route that points to the Management interface or a forwarding router.
- [speed \(Management interface\)](#) — Set the speed for the Management interface.

interface null

Configure a Null interface on the switch.

Syntax `interface null number`

Parameters *number* Enter zero (0) as the Null interface number.

Defaults Not configured; number = 0

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Introduced

Usage Information

You cannot delete the Null interface. The only configuration command possible in a Null interface is `ip unreachable`.

Example

```
DelleMC(conf)# interface null 0
DelleMC(conf-if-nu-0)#
```

Related Commands

- [interface](#) — configure a physical interface.
- [interface loopback](#) — configure a Loopback interface.
- [interface port-channel](#) — configure a port channel.
- [interface vlan](#) — configure a VLAN.
- [ip unreachable](#) — enable generation of internet control message protocol (ICMP) unreachable messages.

interface range

This command permits configuration of a range of interfaces to which subsequent commands are applied (bulk configuration). Using the `interface range` command, you can enter identical commands for a range of interface.

Syntax

```
interface range interface {slot/port | port} - port}, interface {slot/port | port} - port},...
```

Parameters

***interface* {slot/port | port} — port}, *interface* {slot/port | port} — port},...** Enter `interface range` and one of the interfaces and then the interface information. Select the range of interfaces for bulk configuration. You can enter up to six comma-separated ranges. Spaces are not required between the commas. The ranges can include VLANs, port-channels, and physical interfaces.

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- For a Tunnel interface, enter the keyword `Tunnel` then a number from 1 to 16383.

Defaults

None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P2)	Introduced on the S4038-ON.
9.8(0.0P5)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.2.1.0	Added support for 4093 VLANs on E-Series. Prior releases supported 2094.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information When creating an interface range, interfaces appear in the order they are entered; they are not sorted. The command verifies that interfaces are present (physical) or configured (logical).

Important Points to Remember:

- Bulk configuration is created if at least one interface is valid.
- Non-existing interfaces are excluded from the bulk configuration with a warning message.
- The `interface range` prompt includes interface types with slot/port information for valid interfaces. The prompt allows for a maximum of 32 characters. If the bulk configuration exceeds 32 characters, it is represented by an ellipsis (...).
- When the `interface range` prompt has multiple port ranges, the smaller port range is excluded from the prompt.
- If overlapping port ranges are specified, the port range is extended to the smallest start port and the biggest end port.

Example (Bulk)

```
DellEMC(conf)# interface range tengigbitethernet 2/1 - 11, fortyGigE
3/3, tengigbitethernet 3/10
% Warning: Non-existing ports (not configured) are ignored by
interface-range
```

Example (Multiple Ports)

```
DellEMC(conf)# interface range tengigabitethernet 2/10 - 23,
tengigabitethernet 2/12 - 17
DellEMC(conf-if-range-te-2/10-23)#
```

Example (Overlapping Ports)

```
DelleMC(conf)# interface range tengigabitethernet 2/3 - 11,  
tengigabitethernet 2/3 - 23  
DelleMC(conf-if-range-te-2/3-23)#
```

Usage Information

Only VLAN and port-channel interfaces created using the `interface vlan` and `interface port-channel` commands can be used in the `interface range` command.

Use the `show running-config` command to display the VLAN and port-channel interfaces. VLAN or port-channel interfaces that are not displayed in the `show running-config` command cannot be used with the bulk configuration feature of the `interface range` command. You cannot create virtual interfaces (VLAN, Port-channel) using the `interface range` command.

NOTE: If a range has VLAN, physical and port-channel interfaces, only commands related to physical interfaces can be bulk configured. To configure commands specific to VLAN and port-channel only those respective interfaces should be configured in a particular range.

Example (Single Range)

This example shows a single range bulk configuration.

```
DelleMC(config)# interface range tengigabitethernet 5/3 - 23  
DelleMC(config-if-range-te-5/3-23)# no shutdown  
DelleMC(config-if-range-te-5/3-23)#
```

Example (Multiple Range)

This example shows how to use commas to add different interface types to a range of interfaces.

```
DelleMC(config-if)# interface range tengigabitethernet 5/1 - 5/23,  
tengigabitethernet 1/1 - 1/2  
DelleMC(config-if-range-te-1/1-2,te-5/1-23)# no shutdown  
DelleMC(config-if-range-te-1/1-2,te-5/1-23)#
```

Example (Multiple Range)

This example shows how to use commas to add VLAN and port-channel interfaces to the range.

```
DelleMC(config-if)# interface range tengigabitethernet 5/1 - 23,  
tengigabitethernet 1/1 - 2,  
Vlan 2-100, Port 1-25  
DelleMC(config-if-range-te-1/1-2,te-5/1-23,vl-2-100,po-1-25)# no shutdown  
DelleMC(config-if-range-te-5/1-24,te-1/1-2,vl-2-100,po-1-25)#
```

Related Commands

- [interface port-channel](#) — configure a port channel group.
- [interface vlan](#) — configure a VLAN interface.
- [show config \(from INTERFACE RANGE mode\)](#) — display the bulk configuration interfaces.
- [show range](#) — display the bulk configuration ranges.
- [interface range macro \(define\)](#) — define a macro for an interface-range.

interface range macro (define)

Defines a macro for an interface range and then saves the macro in the running configuration.

Syntax

```
define interface range macro name interface , interface , ...
```

Parameters

- name*** Enter up to 16 characters for the macro name.
- interface, interface,...*** Enter the keywords `interface range` and the interface information. Select the range of interfaces for bulk configuration. You can enter up to six comma-separated ranges. Spaces are not required between the commas. Comma-separated ranges can include VLANs, port-channels, and physical interfaces.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

- For a Tunnel interface, enter the keyword `tunnel` then the tunnel ID. The range is from 1 to 16383.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.2.1.0	Added support for 4093 VLANs on E-Series. Prior releases supported 2094.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.1.1.0	Introduced on the E-Series.

Example (Single Range) This example shows how to define an interface range macro named `test`. Execute the `show running-config` command to display the macro definition.

```
DelleMC(config)# define interface-range test tengigabitethernet 1/1 - 3,
tengigabitethernet 5/1 - 47, tengigabitethernet 3/1 - 12

DelleMC# show running-config | grep define
define interface-range test tengigabitethernet 1/1 - 3,
tengigabitethernet 5/1 - 47,
tengigabitethernet 3/1 - 12
DelleMC(config)#interface range macro test
DelleMC(config-if-range-te-1/1-3,te-5/1-47,te-3/1-12)#
```

- Related Commands**
- [interface range](#) – configure a range of command (bulk configuration).
 - [interface range macro name](#) – run an interface range macro.

interface range macro name

Run the interface-range macro to automatically configure the pre-defined range of interfaces.

Syntax `interface range macro name`

Parameters ***name*** Enter the name of an existing macro.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.0	Introduced

Example (Single Range) This example shows the macro named *test* that was defined earlier.

```
DellEMC(config)# interface range macro test
DellEMC(config-if-range-te-1/1-3, te-5/1-47, te-2/1-89) #
Dell
```

Related Commands

- [interface range](#) — configure a range of command (bulk configuration).
- [interface range macro \(define\)](#) — define a macro for an interface range (bulk configuration).

interface vlan

Configure a VLAN. You can configure up to 4094 VLANs.

Syntax `interface vlan vlan-id [of-instance{of-id}]`

Parameters ***vlan-id*** Enter a number as the VLAN Identifier. The range is from 1 to 4094.

of-instance{of-id} Enter the keyword **of-instance** then the OpenFlow instance ID to add the VLAN to the specified OpenFlow instance. The range is from 1 to 8.

NOTE: Associate the OpenFlow instance with the VLAN when the VLAN is created. An existing VLAN cannot be associated with an OpenFlow instance.

Defaults Not configured, except for the Default VLAN, which is configured as VLAN 1.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1.(0.0)	Introduced on the S4810; added support for OpenFlow.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Usage Information For more information about VLANs and the commands to configure them, see [Virtual LAN \(VLAN\) Commands](#).

FTP, TFTP, and SNMP operations are not supported on a VLAN. MAC ACLs and IP ACLs are supported. For more information, see [Access Control Lists \(ACL\)](#).

The following features are not supported on VLANs associated with an OpenFlow instance:

- IPv4
- IPv6
- MTU

If OpenFlow VLANs are configured on the switch, spanning-tree protocols cannot be enabled simultaneously.

Example (Single Range)

```
DellEMC(conf)# int vlan 3
DellEMC(conf-if-vl-3)#
```

- Related Commands**
- [interface](#) — configure a physical interface.
 - [interface loopback](#) — configure a loopback interface.
 - [interface null](#) — configure a null interface.
 - [interface port-channel](#) — configure a port channel group.
 - [show vlan](#) — display the current VLAN configuration on the switch.
 - [shutdown](#) — disable/enable the VLAN.
 - [tagged](#) — add a Layer 2 interface to a VLAN as a tagged interface.
 - [untagged](#) — add a Layer 2 interface to a VLAN as an untagged interface.

intf-type cr4 autoneg

Set the interface type as CR4 with auto-negotiation enabled. To set the interface type as CR4 with autonegotiation disabled, use the `no intf-type cr4 autoneg` command.

Syntax `intf-type cr4 autoneg`

Defaults Not configured

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.16.1	Introduced on the MXL 10/40GbE Switch IO Module.

Usage Information You can configure the interface type as CR4 with auto-negotiation enabled. If a DAC cable link is down, you can resolve the issue by setting the interface type as CR4.

Auto-negotiation is disabled by default. If the CR4 optic fails to come up, use the `autoneg` option.

Related Commands

- [Interfaces](#) — configure a physical interface.
- [interface loopback](#) — configure a loopback interface.
- [interface null](#) — configure a null interface.
- [interface port-channel](#) — configure a port channel group.

keepalive

Send keepalive packets periodically to keep an interface alive when it is not transmitting data.

Syntax `keepalive`

To stop sending keepalive packets, use the `no keepalive` command.

Defaults Enabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.2	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.1.1.0	Introduced on the E-Series.

Usage Information

When you configure `keepalive`, the system sends a self-addressed packet out of the configured interface to verify that the far end of a WAN link is up. When you configure `no keepalive`, the system does not send keepalive packets and so the local end of a WAN link remains up even if the remote end is down.

negotiation auto

Enable auto-negotiation on an interface.

Syntax `negotiation auto`
 To disable auto-negotiation, use the `no negotiation auto` command.

Defaults Enabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Usage Information

This command is supported on 10/100/1000 Base-T Ethernet interfaces.

The `no negotiation auto` command is only available if you first manually set the speed of a port to **10Mbits** or **100Mbits**.

The `negotiation auto` command provides a `mode` option for configuring an individual port to forced-master/forced slave after you enable auto-negotiation.

 **NOTE:** The `mode` option is not available on non-10/100/1000/10G Base-T Ethernet line cards.

If you do not use the `mode` option, the default setting is **slave**. If you do not configure forced-master or forced-slave on a port, the port negotiates to either a master or a slave state. Port status is one of the following:

- Forced-master
- Force-slave
- Master
- Slave
- Auto-neg Error — typically indicates that both ends of the node are configured with forced-master or forced-slave.

 **CAUTION:** Ensure that one end of your node is configured as forced-master and one is configured as forced-slave. If both are configured the same (that is, forced-master or forced-slave), the `show interfaces` command flaps between an auto-neg-error and forced-master/slave states.

You can display master/slave settings with the `show interfaces` command.

Example (Master/Slave)

```
DelleMC(conf)# interface tengigabitethernet 1/1
DelleMC(conf-if)# neg auto
DelleMC(conf-if-autoneg)# ?

end          Exit from configuration mode
exit        Exit from autoneg configuration mode
mode        Specify autoneg mode
no          Negate a command or set its defaults
show        Show autoneg configuration information
DelleMC(conf-if-autoneg)# mode ?
forced-master Force port to master mode
forced-slave Force port to slave mode
DelleMC(conf-if-autoneg)#
```

Example (Configured)

```
DelleMC# show interfaces configured
TenGigabitEthernet 1/18 is up, line protocol is up
Hardware is DelleMCeth, address is 00:01:e8:05:f7:fc
Current address is 00:01:e8:05:f7:fc
Interface index is 474791997
Internet address is 1.1.1.1/24
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 1000 Mbit, Mode full duplex, Master
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interfaces" counters 00:12:42
Queueing strategy: fifo
Input Statistics:
...
```

User Information Both sides of the link must have auto-negotiation enabled or disabled for the link to come up.

The following details the possible speed and auto-negotiation combinations for a line between two 10/100/1000 Base-T Ethernet interfaces.

Port 0

- auto-negotiation enabled* speed 1000 or auto
- auto-negotiation enabled speed 100
- auto-negotiation disabled speed 100
- auto-negotiation disabled speed 100
- auto-negotiation enabled* speed 1000 or auto

Port 1

- auto-negotiation enabled* speed 1000 or auto
- auto-negotiation enabled speed 100
- auto-negotiation disabled speed 100
- auto-negotiation enabled speed 100
- auto-negotiation disabled speed 100

Link Status Between Port 1 and Port 2

- Up at 1000 Mb/s
- Up at 100 Mb/s
- Up at 100 Mb/s
- Down
- Down

* You cannot disable auto-negotiation when the speed is set to 1000/10000/auto.

monitor interface

Monitor counters on a single interface or all interfaces. The screen is refreshed every five seconds and the CLI prompt disappears.

Syntax `monitor interface [interface]`

To disable monitoring and return to the CLI prompt, press the `q` key.

Parameters ***interface*** (OPTIONAL) Enter the following keywords and the interface information:

- For the Management interface on the stack-unit, enter the keyword `managementEthernet` then the slot/port information.
- For a port channel interface, enter the keyword `port-channel` and then a number.
- For a Tunnel interface, enter the keyword `tunnel` then the slot/port. The range is from 1 to 16383.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version	Introduced on the E-Series.
6.2.1.0	

Usage Information

In the Example, the delta column displays changes since the last screen refresh. The following are the `monitor` command menu options.

Key	Description
systest-3	Displays the host name assigned to the system.
monitor time	Displays the amount of time since the <code>monitor interface</code> command was entered.
time	Displays the amount of time the chassis is up (since last reboot).
m	Change the view from a single interface to all interfaces on the line card or visa-versa.
c	Refresh the view.
b	Change the counters displayed from Packets on the interface to Bytes.
r	Change the [delta] column from change in the number of packets/bytes in the last interval to rate per second.
l	Change the view to the next interface on the line card, or if in line card mode, the next line card in the chassis.
a	Change the view to the previous interface on the line card, or if in line card mode, the previous line card in the chassis.
T	Increase the screen refresh rate.
t	Decrease the screen refresh rate.
q	Return to the CLI prompt.

Example (Single Interface)

```
systest-3 Monitor time: 00:00:06 Refresh Intvl.: 2s Time: 03:26:26
Interface: te 1/3, Enabled, Link is Up, Linespeed is 10000 Mbit

Traffic statistics:      Current      Rate      Delta
      Input bytes:      9069828    43 Bps    86
      Output bytes:    606915800  43 Bps    86
      Input packets:      54001     0 pps     1
      Output packets:   9401589     0 pps     1
```

```

    64B packets:          67    0 pps    0
  Over 64B packets:    49166  0 pps    1
  Over 127B packets:   350    0 pps    0
  Over 255B packets:  1351    0 pps    0
  Over 511B packets:   286    0 pps    0
  Over 1023B packets: 2781    0 pps    0
  Error statistics:
    Input underruns:      0    0 pps    0
    Input giants:        0    0 pps    0
    Input throttles:     0    0 pps    0
    Input CRC:           0    0 pps    0
  Input IP checksum:    0    0 pps    0
    Input overrun:       0    0 pps    0
  Output underruns:     0    0 pps    0
  Output throttles:     0    0 pps    0

  m - Change mode          c - Clear screen
  l - Page up              a - Page down
  T - Increase refresh interval t - Decrease refresh interval
  q - Quit

```

Example (All Interfaces)

```

systest-3 Monitor time: 00:01:31 Refresh Intvl.: 2s Time: 03:54:14

Interface Link   In Packets   [delta] Out Packets
[delta]
  Te 0/0 Down         0           0           0
  Te 0/1 Down         0           0           0
  Te 0/2 Up          61512       52          66160       42
  Te 0/3 Up          63086       20          9405888     24
  Te 0/4 Up          14697471418 2661481     13392989657
2661385
  Te 0/5 Up           3759        3          161959604   832816
  Te 0/6 Up           4070        3           8680346     5
  Te 0/7 Up          61934       34          138734357   72
  Te 0/8 Up          61427       1           59960       1
  Te 0/9 Up           62039       53          104239232   3
  Te 0/10 Up         17740044091 372          7373849244  79
  Te 0/11 Up         18182889225 44           7184747584  138
  Te 0/12 Up         18182682056 0            3682        1
  Te 0/13 Up         18182681434 43           6592378911  144
  Te 0/14 Up          61349       55           86281941    15
  Te 0/15 Up          59808       58           62060       27
  Te 0/16 Up          59889       1           61616       1
  Te 0/17 Up           0           0          14950126    81293
  Te 0/18 Up           0           0           0           0
  Te 0/19 Down        0           0           0           0
  Te 0/20 Up          62734       54           62766       18
  Te 0/21 Up          60198       9           200899      9
  Te 0/22 Up          17304741100 3157554     10102508511
1114221
  Te 0/23 Up          17304769659 3139507     7133354895
523329
  m - Change mode          c - Clear screen
  b - Display bytes        r - Display pkts/bytes per sec
  l - Page up              a - Page down

```

mtu

Set the link maximum transmission unit (MTU) (frame size) for an Ethernet interface.

Syntax `mtu value`

To return to the default MTU value, use the `no mtu` command.

Parameters `value` Enter a maximum frame size in bytes. The range is from 594 to 12000.

Defaults `1554`

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Reduced the maximum size of the maximum transmission unit (MTU) to 9216 bytes on S6000, S6000-ON, S4048-ON, Z9500, and C9010. Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Usage Information

If the packet includes a Layer 2 header, the difference between the link MTU and IP MTU (`ip mtu` command) must be enough bytes to include the Layer 2 header.

When you enter the `no mtu` command, Dell EMC Networking OS reduces the IP MTU value to 1536 bytes.

Link MTU and IP MTU considerations for port channels and VLANs are as follows.

port channels:

- All members must have the same link MTU value and the same IP MTU value.
- The port channel link MTU and IP MTU must be less than or equal to the link MTU and IP MTU values configured on the channel members. For example, if the members have a link MTU of 2100 and an IP MTU 2000, the port channel's MTU values cannot be higher than 2100 for link MTU or 2000 bytes for IP MTU.

VLANs:

- All members of a VLAN must have same IP MTU value.
- Members can have different Link MTU values. Tagged members must have a link MTU 4 bytes higher than untagged members to account for the packet tag.
- The VLAN link MTU and IP MTU must be less than or equal to the link MTU and IP MTU values configured on the VLAN members. For example, the VLAN contains tagged members with Link MTU of 1522 and IP MTU of 1500 and untagged members with Link MTU of 1518 and IP MTU of 1500. The VLAN's Link MTU cannot be higher than 1518 bytes and its IP MTU cannot be higher than 1500 bytes.

The following shows the difference between Link MTU and IP MTU.

Layer 2 Overhead	Link MTU and IP MTU Delta
Ethernet (untagged)	18 bytes

Layer 2 Overhead	Link MTU and IP MTU Delta
VLAN Tag	22 bytes
Untagged Packet with VLAN-Stack Header	22 bytes
Tagged Packet with VLAN-Stack Header	26 bytes

portmode hybrid

To accept both tagged and untagged frames, set a physical port or port-channel. A port configured this way is identified as a hybrid port in report displays.

Syntax `portmode hybrid`

To return a port to accept either tagged or untagged frames (non-hybrid), use the `no portmode hybrid` command.

Defaults non-hybrid

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information

The following describes the `interface` command shown in the following example. This example sets a port as hybrid, makes the port a tagged member of VLAN 20, and an untagged member of VLAN 10, which becomes the native VLAN of the port. The port now accepts:

- untagged frames and classify them as VLAN 10 frames
- VLAN 20 tagged frames

The following describes the `do show interfaces` command shown in the following example. This example shows output with “Hybrid” as the newly added value for 802.1QTagged. The options for this field are:

- True — port is tagged
- False — port is untagged
- Hybrid — port accepts both tagged and untagged frames

The following describes the `interface vlan` command shown in the following example. This example shows unconfiguration of the hybrid port using the `no portmode hybrid` command.

NOTE: Remove all other configurations on the port before you can remove the hybrid configuration from the port.

Example

```
DelleMC(conf)# interface tengigabitethernet 1/1
DelleMC(conf-if-te-1/1)# portmode hybrid
DelleMC(conf-if-te-1/1)# interface vlan 10
DelleMC(conf-if-vl-10)# untagged tengigabitethernet 1/1
DelleMC(conf-if-vl-10)# interface vlan 20
DelleMC(conf-if-vl-20)# tagged tengigabitethernet 1/1
DelleMC(conf-if-vl-20)#
```

Example

```
DelleMC(conf-if-vl-20)# do show interfaces switchport
Name: TenGigabitEthernet 1/1
802.1QTagged: Hybrid
Vlan membership:
Vlan 10, Vlan 20
Native VlanId: 10
DelleMC(conf-if-vl-20)#
```

Example (Vlan)

```
DelleMC(conf-if-vl-20)# interface vlan 10
DelleMC(conf-if-vl-10)# no untagged tengigabitethernet 1/1
DelleMC(conf-if-vl-10)# interface vlan 20
DelleMC(conf-if-vl-20)# no tagged tengigabitethernet 1/1
DelleMC(conf-if-vl-20)# interface tengigabitethernet 1/1
DelleMC(conf-if-te-1/1)# no portmode hybrid
DelleMC(conf-if-vl-20)#
```

rate-interval

Configure the traffic sampling interval on the selected interface.

Syntax `rate-interval seconds`

Parameters **seconds** Enter the number of seconds for which to collect traffic data. The range is from 5 to 299 seconds.

NOTE: Because polling occurs every 15 seconds, the number of seconds designated here rounds to the multiple of 15 seconds lower than the entered value. For example, if 44 seconds is designated, it rounds to 30; 45 to 59 seconds rounds to 45.

Defaults **299 seconds**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced

Usage Information

The output of the `show interfaces` command displays the configured rate interval, along with the collected traffic data.

rate-interval (Configuration Mode)

Configure the traffic sampling interval for all physical and logical port-channel interfaces globally. The support to configure rate-interval globally enables you to modify the default interval rate for all physical and logical interfaces at one time.

Syntax

`rate-interval seconds`

Use the `no rate-interval` command to remove the sampling interval configuration.

Parameters

seconds

Enter the number of seconds for which to collect traffic data. The range is from 5 to 299 seconds.

NOTE: Because polling occurs every 15 seconds, the number of seconds designated here round to the multiple of 15 seconds lower than the entered value. For example, if 44 seconds is designated, it rounds to 30; 45 to 59 seconds rounds to 45. If you configure this value to be less than 5, then the entire buffer is cleared; the `show int stats` command shows the rate information to be 0 as the polling interval is less than 5.

Defaults

299 seconds

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
---------	-------------

9.11.0.0	Introduced on all Dell EMC Networking OS platforms.
----------	---

Usage Information

The output of the `show interfaces` command displays the configured rate interval, along with the collected traffic data.

When rate-interval is not configured in the global configuration mode or interface mode, the default value of 299 seconds is applied.

When rate-interval is configured only in the global configuration mode and not in the interface mode, the global rate-interval value is applied at the interface level also.

When rate-interval is configured at the interface level and not in the global configuration mode, the interface level rate-interval value is applied for an interface.

When rate interval is configured in both global configuration mode as well as interface mode, then the rate-interval value configured at interface level is applied as it takes precedence over the global value.

show config

Display the interface configuration.

Syntax `show config`

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-if-fo-1/4)# show config
!
interface fortyGigE 1/4
 no ip address
 mtu 9216
 switchport
 no shutdown
DellEMC(conf-if-fo-1/4)#
```

show config (from INTERFACE RANGE mode)

Display the bulk configured interfaces (`interface range`).

Syntax `show config`

Command Modes CONFIGURATION INTERFACE (conf-if-range)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example

```
DelleMC(conf)# interface range tengigabitethernet 1/1 - 2
DelleMC(conf-if-range-gi-1/1-2)# show config
!
interface TenGigabitEthernet 1/1
  no ip address
  switchport
  no shutdown
!
interface TenGigabitEthernet 1/2
  no ip address
  switchport
  no shutdown
DelleMC(conf-if-range-gi-1/1-2)#
```

show hardware

Display the hardware counters on a specified interface or on a specified stack unit.

Syntax `show hardware {counters interface interface-type slot/port | stack-unit stack-unit-number unit unit-number counters}`

Parameters	counters	Enter the keyword <code>counters</code> to display the counters on a specified interface.
	interface	Enter the keyword <code>interface</code> followed by the interface information and the slot/port number.
	stack-unit	Enter the keyword <code>stack-unit</code> followed by a stack unit-number to display the counters on a specified stack unit.
	unit	Enter the keyword <code>unit</code> followed by a unit-number.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the S3048-ON.
9.10(0.1)	Introduced on the S3100 series, S4820T, and S5000.

Usage Information Use the `show hardware counters interface interface-type slot/port` to view the hardware counters on the specified interface.

Use the `show hardware stack-unit stack-unit-number unit unit-number counters` to view the hardware counters on the specified stack unit.

Example

```
DelleMC#show hardware counters interface gigabitethernet 10/1
unit: 0 port: 1 (interface Gi 10/1)
Description                                     Value
RX - IPV4 L3 Unicast Frame Counter              0
RX - IPV4 L3 Routed Multicast Packets           0
RX - IPV6 L3 Unicast Frame Counter              0
RX - IPV6 L3 Routed Multicast Packets           0
RX - Unicast Packet Counter                     0
RX - 64 Byte Frame Counter                      0
RX - 65 to 127 Byte Frame Counter               0
RX - 128 to 255 Byte Frame Counter              0
RX - 256 to 511 Byte Frame Counter              0
RX - 512 to 1023 Byte Frame Counter             0
RX - 1024 to 1518 Byte Frame Counter            0
RX - 1519 to 1522 Byte Good VLAN Frame Counter 0
RX - 1519 to 2047 Byte Frame Counter           0
RX - 2048 to 4095 Byte Frame Counter           0
RX - 4096 to 9216 Byte Frame Counter           0
RX - Good Packet Counter                       0
RX - Packet/Frame Counter                      0
RX - Unicast Frame Counter                     0
RX - Multicast Frame Counter                   0
RX - Broadcast Frame Counter                   0
RX - Byte Counter                              0
RX - Control Frame Counter                     0
RX - Pause Control Frame Counter               0
RX - Oversized Frame Counter                   0
RX - Jabber Frame Counter                      0
RX - VLAN Tag Frame Counter                    0
RX - Double VLAN Tag Frame Counter             0
RX - RUNT Frame Counter                        0
RX - Fragment Counter                          0
RX - VLAN Tagged Packets                       0
RX - Ingress Dropped Packet                    0
RX - MTU Check Error Frame Counter             0
RX - PFC Frame Priority 0                      0
RX - PFC Frame Priority 1                      0
RX - PFC Frame Priority 2                      0
RX - PFC Frame Priority 3                      0
RX - PFC Frame Priority 4                      0
RX - PFC Frame Priority 5                      0
RX - PFC Frame Priority 6                      0
RX - PFC Frame Priority 7                      0
RX - Debug Counter 0                           0
RX - Debug Counter 1                           0
RX - Debug Counter 2                           0
RX - Debug Counter 3                           0
RX - Debug Counter 4                           0
RX - Debug Counter 5                           0
RX - Debug Counter 6                           0
RX - Debug Counter 7                           0
```

```

RX - Debug Counter 8 0
RX - EEE LPI Event Counter 0
RX - EEE LPI Duration Counter 0
TX - 64 Byte Frame Counter 0
TX - 65 to 127 Byte Frame Counter 0
TX - 128 to 255 Byte Frame Counter 0
TX - 256 to 511 Byte Frame Counter 0
TX - 512 to 1023 Byte Frame Counter 0
TX - 1024 to 1518 Byte Frame Counter 0
TX - 1519 to 1522 Byte Good VLAN Frame Counter 0
TX - 1519 to 2047 Byte Frame Counter 0
TX - 2048 to 4095 Byte Frame Counter 0
TX - 4096 to 9216 Byte Frame Counter 0
TX - Good Packet Counter 0
TX - Packet/Frame Counter 0
TX - Unicast Frame Counter 0
TX - Multicast Frame Counter 0
TX - Broadcast Frame Counter 0
TX - Byte Counter 0
TX - Control Frame Counter 0
TX - Pause Control Frame Counter 0
TX - Oversized Frame Counter 0
TX - Jabber Counter 0
TX - VLAN Tag Frame Counter 0
TX - Double VLAN Tag Frame Counter 0
TX - RUNT Frame Counter 0
TX - Fragment Counter 0
TX - PFC Frame Priority 0 0
TX - PFC Frame Priority 1 0
TX - PFC Frame Priority 2 0
TX - PFC Frame Priority 3 0
TX - PFC Frame Priority 4 0
TX - PFC Frame Priority 5 0
TX - PFC Frame Priority 6 0
TX - PFC Frame Priority 7 0
TX - Debug Counter 0 0
TX - Debug Counter 1 0
TX - Debug Counter 2 0
TX - Debug Counter 3 0
TX - Debug Counter 4 0
TX - Debug Counter 5 0
TX - Debug Counter 6 0
TX - Debug Counter 7 0
TX - Debug Counter 8 0
TX - Debug Counter 9 0
TX - Debug Counter 10 0
TX - Debug Counter 11 0
TX - EEE LPI Event Counter 0
TX - EEE LPI Duration Counter 0
<<Output Truncated>>

```

```

DelleMC#show hardware stack-unit 10 unit 0 counters
unit: 0 port: 1 (interface Gi 10/1)
Description Value
RX - IPV4 L3 Unicast Frame Counter 0
RX - IPV4 L3 Routed Multicast Packets 0
RX - IPV6 L3 Unicast Frame Counter 0
RX - IPV6 L3 Routed Multicast Packets 0
RX - Unicast Packet Counter 0
RX - 64 Byte Frame Counter 0
RX - 65 to 127 Byte Frame Counter 0
RX - 128 to 255 Byte Frame Counter 0
RX - 256 to 511 Byte Frame Counter 0
RX - 512 to 1023 Byte Frame Counter 0
RX - 1024 to 1518 Byte Frame Counter 0
RX - 1519 to 1522 Byte Good VLAN Frame Counter 0
RX - 1519 to 2047 Byte Frame Counter 0
RX - 2048 to 4095 Byte Frame Counter 0
RX - 4096 to 9216 Byte Frame Counter 0
RX - Good Packet Counter 0

```

RX - Packet/Frame Counter	0
RX - Unicast Frame Counter	0
RX - Multicast Frame Counter	0
RX - Broadcast Frame Counter	0
RX - Byte Counter	0
RX - Control Frame Counter	0
RX - Pause Control Frame Counter	0
RX - Oversized Frame Counter	0
RX - Jabber Frame Counter	0
RX - VLAN Tag Frame Counter	0
RX - Double VLAN Tag Frame Counter	0
RX - RUNT Frame Counter	0
RX - Fragment Counter	0
RX - VLAN Tagged Packets	0
RX - Ingress Dropped Packet	0
RX - MTU Check Error Frame Counter	0
RX - PFC Frame Priority 0	0
RX - PFC Frame Priority 1	0
RX - PFC Frame Priority 2	0
RX - PFC Frame Priority 3	0
RX - PFC Frame Priority 4	0
RX - PFC Frame Priority 5	0
RX - PFC Frame Priority 6	0
RX - PFC Frame Priority 7	0
RX - Debug Counter 0	0
RX - Debug Counter 1	0
RX - Debug Counter 2	0
RX - Debug Counter 3	0
RX - Debug Counter 4	0
RX - Debug Counter 5	0
RX - Debug Counter 6	0
RX - Debug Counter 7	0
RX - Debug Counter 8	0
RX - EEE LPI Event Counter	0
RX - EEE LPI Duration Counter	0
TX - 64 Byte Frame Counter	0
TX - 65 to 127 Byte Frame Counter	0
TX - 128 to 255 Byte Frame Counter	0
TX - 256 to 511 Byte Frame Counter	0
TX - 512 to 1023 Byte Frame Counter	0
TX - 1024 to 1518 Byte Frame Counter	0
TX - 1519 to 1522 Byte Good VLAN Frame Counter	0
TX - 1519 to 2047 Byte Frame Counter	0
TX - 2048 to 4095 Byte Frame Counter	0
TX - 4096 to 9216 Byte Frame Counter	0
TX - Good Packet Counter	0
TX - Packet/Frame Counter	0
TX - Unicast Frame Counter	0
TX - Multicast Frame Counter	0
TX - Broadcast Frame Counter	0
TX - Byte Counter	0
TX - Control Frame Counter	0
TX - Pause Control Frame Counter	0
TX - Oversized Frame Counter	0
TX - Jabber Counter	0
TX - VLAN Tag Frame Counter	0
TX - Double VLAN Tag Frame Counter	0
TX - RUNT Frame Counter	0
TX - Fragment Counter	0
TX - PFC Frame Priority 0	0
TX - PFC Frame Priority 1	0
TX - PFC Frame Priority 2	0
TX - PFC Frame Priority 3	0
TX - PFC Frame Priority 4	0
TX - PFC Frame Priority 5	0
TX - PFC Frame Priority 6	0
TX - PFC Frame Priority 7	0
TX - Debug Counter 0	0
TX - Debug Counter 1	0
TX - Debug Counter 2	0
TX - Debug Counter 3	0
TX - Debug Counter 4	0

```

TX - Debug Counter 5          0
TX - Debug Counter 6          0
TX - Debug Counter 7          0
TX - Debug Counter 8          0
TX - Debug Counter 9          0
TX - Debug Counter 10         0
TX - Debug Counter 11         0
TX - EEE LPI Event Counter    0
TX - EEE LPI Duration Counter 0

```

<<Output Truncated>>

Related Commands

- [show interfaces](#) — display information on a specific physical interface or virtual interface.

show interfaces

Display information on a specific physical interface or virtual interface.

Syntax `show interfaces interface-type[-range]`

Parameters

interface

Enter one of the following keywords and the interface information:

- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For stack-units, enter the keywords `stack-unit` then the slot/port information.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- For a tunnel interface, enter the keyword `tunnel` then the tunnel ID. The range is from 1 to 16383.

i **NOTE:** This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

-range

(Optional) Enter the range of interfaces for which you want to view the information. The format is `interface-type slot/port-port-slot/port`.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.12(0.0)

Added the OUI value in the command output for the Z9100-ON.

9.11(0.0)

Included the FEC BER details in the output for 100G interfaces of S6100-ON and Z9100-ON.

Added support to display 10GBASE-T information on the S4048, S4048T, S6000, S6000-ON, S6100, Z9500, S6010, and Z9100.

Included display information about EEE on the S3048-ON.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON. Included display information about EEE on the S3100 series, S4820T, and S5000.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.2)	Added support for the tunnel interface type.
9.1(0.0)	Updated Management Ethernet output to include two global IPv6 addresses on S4810 and Z9000 and added output example showing OpenFlow instance ID.
8.3.12.1	Updated command output to support multiple IPv6 addresses on S4810.
8.3.11.4	Output expanded to support eSR4 optics in Z9000.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.2	Included SFP and SFP+ optics power detail in the E-Series and C-Series output.
8.2.1.0	Added support for 4093 VLANs on the E-Series. Prior releases supported 2094.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Output expanded to include SFP+ media on the C-Series.
7.6.1.0	Introduced on the S Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Changed the organization of the display output.
6.3.1.0	Added the Pluggable Media Type field in the E-Series output.

Usage Information

Use the `show interfaces` command for details on a specific interface.

NOTE: In the CLI output, the power value is rounded to a 3-digit value. For receive/transmit power that is less than 0.000, an `snmp query` returns the corresponding dbm value even though the CLI displays as 0.000.

NOTE: After the counters are cleared, the line-rate continues to increase until it reaches the maximum line rate. When the maximum line rate is reached, there is no change in the line-rate.

User Information The following table describes the `show interfaces` command shown in the 10G example.

Line	Description
TenGigabitEthernet 1/1...	Interface type and administrative and line protocol status.
Hardware is...	Interface hardware information, assigned MAC address, and current address.

Line	Description
Pluggable media present...	<p>Present pluggable media wavelength, type, and rate. The error scenarios are:</p> <ul style="list-style-type: none"> • Wavelength, unknown — Unable to determine the optics type • Unknown — If the wavelength is reading an error <p>Dell EMC Networking allows unsupported SFP and XFP transceivers to be used, but Dell EMC Networking OS might not be able to retrieve some data about them. In that case, typically when the output of this field is "Pluggable media present, Media type is unknown", the Medium and the XFP/SFP receive power reading data might not be present in the output.</p>
Interface index...	Displays the interface index number the SNMP uses to identify the interface.
Internet address...	States whether an IP address is assigned to the interface. If an IP address is assigned, that address is displayed.
MTU 1554...	Displays link and IP MTU information.
LineSpeed	Displays the interface's line speed, duplex mode, and negotiation mode.
Energy Efficient Ethernet	Displays whether Energy Efficient Ethernet has been enabled or not.
ARP type:...	Displays the ARP type and the ARP timeout value for the interface.
Last clearing...	Displays the time when the <code>show interfaces</code> counters were cleared.
Queuing strategy...	States the packet queuing strategy. FIFO means first in first out.
Input Statistics:	<p>Displays all the input statistics including:</p> <ul style="list-style-type: none"> • Number of packets and bytes into the interface • Number of packets with VLAN tagged headers • Packet size and the number of those packets inbound to the interface • Number of Multicast and Broadcast packets: <ul style="list-style-type: none"> ◦ Multicasts = number of MAC multicast packets ◦ Broadcasts = number of MAC broadcast packets • Number of runs, giants, and throttles packets: <ul style="list-style-type: none"> ◦ runs = number of packets that are less than 64B ◦ giants = packets that are greater than the MTU size ◦ throttles = packets containing PAUSE frames • Number of CRC, overrun, and discarded packets: <ul style="list-style-type: none"> ◦ CRC = packets with CRC/FCS errors ◦ overrun = number of packets discarded due to FIFO overrun conditions ◦ discarded = the sum of runs, giants, CRC, and overrun packets discarded without any processing
Output Statistics:	<p>Displays output statistics sent out of the interface including:</p> <ul style="list-style-type: none"> • Number of packets, bytes, and underruns out of the interface • Packet size and the number of the packets outbound to the interface • Number of Multicast, Broadcast, and Unicast packets: <ul style="list-style-type: none"> ◦ Multicasts = number of MAC multicast packets ◦ Broadcasts = number of MAC broadcast packets ◦ Unicasts = number of MAC unicast packets • Number of VLANs, throttles, discards, and collisions: <ul style="list-style-type: none"> ◦ Vlans = number of VLAN tagged packets ◦ throttles = packets containing PAUSE frames ◦ discarded = number of packets discarded without any processing ◦ collisions = number of packet collisions ◦ wred=count both packets discarded in the MAC and in the hardware-based queues

Line	Description
Rate information...	Estimate of the input and output traffic rate over a designated interval (30 to 299 seconds). Traffic rate is displayed in bits, packets per second, and percent of line rate.
Time since...	Elapsed time since the last interface status change (hh:mm:ss format).

Example

Usage Information

The Management port is enabled by default (no shutdown). If necessary, use the `ip address` command to assign an IP address to the Management port. If two RPMs are installed in your system, use the `show redundancy` command to display which RPM is the Primary RPM.

Example

```
DelleMC# show interfaces tengigabitethernet 1/1
TenGigabitEthernet 1/1 is up, line protocol is down
Hardware is DelleMCeth, address is 00:01:e8:41:77:95
  Current address is 00:01:e8:41:77:95
Pluggable media present, SFP type is 1000BASE-SX
  Wavelength is 850nm
Interface index is 100974648
Port will not be disabled on partial SFM failure
Internet address is not set
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 1000 Mbit
Flowcontrol rx on tx on
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 1w0d5h
Queueing strategy: fifo
Input Statistics:
  0 packets, 0 bytes
  0 Vlans
  0 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
  0 Multicasts, 0 Broadcasts
  0 runts, 0 giants, 0 throttles
  0 CRC, 0 overrun, 0 discarded
Output Statistics:
  0 packets, 0 bytes, 0 underruns
  0 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
  0 Multicasts, 0 Broadcasts, 0 Unicasts
  0 Vlans, 0 throttles, 0 discarded, 0 collisions, 0 wredrops
Rate info (interval 299 seconds):
  Input 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
  Output 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Time since last interface status change: 1w0d5h
DelleMC#
```

```
DelleMC#show interfaces tengigabitethernet 0/0
TenGigabitEthernet 0/0 is down, line protocol is down
Hardware is DelleMCeth, address is 5c:f9:dd:ef:11:42
  Current address is 5c:f9:dd:ef:11:42
Pluggable media not present
Interface index is 1048580
Internet address is not set
Mode of IPv4 Address Assignment : NONE
DHCP Client-ID :5cf9ddef1142
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed auto, Mode auto
Auto-mdix enabled, Flowcontrol rx off tx off
Energy Efficient Ethernet: Yes
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 04:43:42
Queueing strategy: fifo
Input Statistics:
  401 packets, 48521 bytes
  0 64-byte pkts, 401 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
```

```
401 Multicasts, 0 Broadcasts, 0 Unicasts
0 runts, 0 giants, 0 throttles
0 CRC, 0 overrun, 0 discarded
Output Statistics:
```

**Example
(Management
Ethernet)**

```
DellEMC# show interfaces managementethernet 0/0
ManagementEthernet 0/0 is up, line protocol is up
Hardware is DellEMCEth, address is 00:01:e8:0b:a9:4c
Current address is 00:01:e8:0b:a9:4c
Pluggable media not present
Interface index is 503595208
Internet address is 10.11.201.5/16
Link local IPv6 address: fe80::201:e8ff:fe0b:a94c/64
Global IPv6 address: 2222::5/64
Virtual-IP is not set
Virtual-IP IPv6 address is not set
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 10 Mbit, Mode half duplex
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 04:01:08
Queueing strategy: fifo
Input 943 packets, 78347 bytes, 190 multicast
Received 0 errors, 0 discarded
Output 459 packets, 102388 bytes, 15 multicast
Output 0 errors, 0 invalid protocol
Time since last interface status change: 00:03:09
```

**Example
(Management
Ethernet, two
IPv6 addresses)**

```
DellEMC# show interfaces managementethernet 0/0
ManagementEthernet 0/0 is up, line protocol is up
Hardware is DellForce10Eth, address is 00:01:e8:a0:bf:f3
Current address is 00:01:e8:a0:bf:f3
Pluggable media not present
Interface index is 302006472
Internet address is 10.16.130.5/16
Link local IPv6 address: fe80::201:e8ff:fea0:bff3/64
Global IPv6 address: 1::1/
Global IPv6 address: 2::1/64
Virtual-IP is not set
Virtual-IP IPv6 address is not set
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 1000 Mbit, Mode full duplex
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 00:06:14
Queueing strategy: fifo
Input 791 packets, 62913 bytes, 775 multicast
Received 0 errors, 0 discarded
Output 21 packets, 3300 bytes, 20 multicast
Output 0 errors, 0 invalid protocol
Time since last interface status change: 00:06:03
```

**Example
(OpenFlow
instance)**

```
DellEMC# show interfaces vlan 6
Vlan 6 is down, line protocol is down
Address is 00:01:e8:8a:e1:8c, Current address is 00:01:e8:8a:e1:8c
```

```

Interface index is 1107525638
of-instance: 2
Internet address is not set
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed auto
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 00:05:12
Queueing strategy: fifo
Time since last interface status change: 00:05:12

```

Related Commands

- [show interfaces configured](#) – display any interface with a non-default configuration.
- [show ip interface](#) – display Layer 3 information about the interfaces.
- [show range](#) – display all interfaces configured using the interface range command.

show interfaces configured

Display any interface with a non-default configuration.

Syntax `show interfaces configured`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Changed the organization of the display output.

Example

```

DellEMC# show interfaces configured
TenGigabitEthernet 1/18 is up, line protocol is up
Hardware is DelleMCEth, address is 00:01:e8:05:f7:fc
Current address is 00:01:e8:05:f7:fc
Interface index is 474791997

```

```

Internet address is 1.1.1.1/24
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 1000 Mbit, Mode full duplex, Master
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interfaces" counters 00:12:42
Queueing strategy: fifo
Input Statistics:
  10 packets, 10000 bytes
   0 Vlans
   0 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
   0 over 255-byte pkts, 10 over 511-byte pkts, 0 over 1023-byte pkts
   0 Multicasts, 0 Broadcasts
   0 runts, 0 giants, 0 throttles
   0 CRC, 0 overrun, 0 discarded
Output Statistics:
  1 packets, 64 bytes, 0 underruns
  1 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
  0 Multicasts, 1 Broadcasts, 0 Unicasts
  0 Vlans, 0 throttles, 0 discarded, 0 collisions
Rate info (interval 299 seconds):
  Input 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
  Output 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Time since last interface status change: 00:04:59
DellEMC#

```

show interfaces dampening

Display interface dampening information.

Syntax `show interfaces dampening [[interface] [summary] [detail]]`

Parameters

interface

(Optional) Enter one of the following keywords and the interface information:

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

i **NOTE:** This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

summary

(OPTIONAL) Enter the keyword `summary` to display the current summary of dampening data, including the number of interfaces configured and the number of interfaces suppressed, if any.

detail

(OPTIONAL) Enter the keyword `detail` to display detailed interface dampening data.

Defaults None

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced

Example

```
DellEMC# show interfaces dampening
Interface Supp   Flaps Penalty Half-Life Reuse Suppress Max-Sup
  State
Te 1/2      Up     0     0       20     800   4500   120
Te 1/10    Up     0     0        5     750   2500   20
DellEMC#
```

Related Commands

- [dampening](#) — configure dampening on an interface.
- [show interfaces configured](#) — display any interface with a non-default configuration.

show interfaces eee

Display whether EEE is enabled on interfaces..

Syntax `show interfaces [interface-type [slot/port | slot/port-range]] eee`

Parameters *interface-type* Enter the interface information as TenGigabitEthernet followed by the slot and the port number or range of port numbers.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the S3048-ON.

Version	Description
9.10(0.1)	Introduced on the S3100 series, S4820T, and S5000.

Usage Information

The `show interfaces eee` command displays whether EEE has been enabled and shows the status of all the interfaces.

Use the `show interfaces interface-type slot/port eee` command to view the status of EEE on the specified port.

Use the `show interfaces interface-type slot/port-range eee` command to view the status of EEE on the specified range of ports.

Example

Example for all the interfaces:

S5000

```
DelleMC#show interfaces eee
Interface          EEE Status      Speed      Duplex
TenGigabitEthernet 0/0          Yes down      Auto       Auto
TenGigabitEthernet 0/1          Yes down      Auto       Auto
TenGigabitEthernet 0/2          Yes down      Auto       Auto
TenGigabitEthernet 0/3          Yes down      Auto       Auto
TenGigabitEthernet 0/4          Yes down      Auto       Auto
TenGigabitEthernet 0/5          Yes down      Auto       Auto
TenGigabitEthernet 0/6          Yes down      Auto       Auto
TenGigabitEthernet 0/7          Yes up       10000 Mbit   Full
TenGigabitEthernet 0/8          Yes up       10000 Mbit   Full
TenGigabitEthernet 0/9          Yes up       10000 Mbit   Full
TenGigabitEthernet 0/10         Yes up       10000 Mbit   Full
TenGigabitEthernet 0/11         Yes down     Auto        Auto
TenGigabitEthernet 0/12         N/A down     Auto        Auto
TenGigabitEthernet 0/13         N/A down     Auto        Auto
TenGigabitEthernet 0/14         N/A down     Auto        Auto
TenGigabitEthernet 0/15         N/A down     Auto        Auto
TenGigabitEthernet 0/16         N/A down     Auto        Auto
TenGigabitEthernet 0/17         N/A down     Auto        Auto
TenGigabitEthernet 0/18         N/A down     Auto        Auto
TenGigabitEthernet 0/19         N/A down     Auto        Auto

<<Output Truncated>>
```

Example for a specific interface:

S5000

```
DelleMC#show interfaces tengigabitethernet 0/0 eee
Interface          EEE Status      Speed      Duplex
TenGigabitEthernet 0/0          Yes down      Auto       Auto
```

Related Commands

- [show interfaces](#) — display information on a specific physical interface or virtual interface.

show interfaces eee statistics

Display the statistical details of Energy Efficient Ethernet (EEE).

Syntax

```
show interfaces [interface-type [slot/port | slot/port-range]] eee
statistics
```

Parameters

interface-type Enter the interface information as GigabitEthernet or TenGigabitEthernet followed by the slot and the port number or range of port numbers.

Defaults

None

Command Modes

- EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the S3048-ON.
9.10(0.1)	Introduced on the S3100 series, S4820T, and S5000.

Usage Information

The `show interfaces eee statistics` command displays the statistics of Energy Efficient Ethernet (EEE) on all interfaces.

Use the `show interfaces interface-type slot/port eee statistics` command to view the statistics of EEE on the specified port.

Use the `show interfaces interface-type slot/port-range eee statistics` command to view the statistics of EEE on the specified range of ports..

Example

Example for all the interfaces

S5000

```
DelleMC#show interfaces eee statistics
Port          EEE    LPI    TxLPIEventCount  TxLPIDuration
RxLPIEventCount RxLPIDuration
Te 0/0        Yes    Yes    0                0                0
0
Te 0/1        Yes    Yes    0                0                0
0
Te 0/2        Yes    Yes    0                0                0
0
Te 0/3        Yes    Yes    0                0                0
0
Te 0/4        Yes    Yes    0                0                0
0
Te 0/5        Yes    Yes    0                0                0
0
Te 0/6        Yes    Yes    0                0                0
0
Te 0/7        Yes    Yes    0                0                0
0
Te 0/8        Yes    Yes    0                0                0
0
Te 0/9        Yes    Yes    0                0                0
0
Te 0/10       Yes    Yes    0                0                0
0
Te 0/11       Yes    Yes    0                0                0
0
Te 0/12       N/A    -      -                -                -
-
Te 0/13       N/A    -      -                -                -
-
Te 0/14       N/A    -      -                -                -
-
Te 0/15       N/A    -      -                -                -
-
Te 0/16       N/A    -      -                -                -
-
Te 0/17       N/A    -      -                -                -
-
Te 0/18       N/A    -      -                -                -
-
Te 0/19       N/A    -      -                -                -
-
Te 0/20       N/A    -      -                -                -
-
Te 0/21       N/A    -      -                -                -
-
```

```

Te 0/22      N/A      -      -      -      -
-
Te 0/23      N/A      -      -      -      -
-
Te 0/36      N/A      -      -      -      -
-
Te 0/37      N/A      -      -      -      -
-
<<Output Truncated>>

```

Example for a specific interface

S5000

```

DellEMC#show interfaces tengigabitethernet 0/0 eee statistics
Port      EEE      LPI      TxLPIEventCount TxLPIDuration
RxLPIEventCount RxLPIDuration
Te 0/0      Yes      Yes      0              0              0
0

```

Related Commands

- [show interfaces](#) — display information on a specific physical interface or virtual interface.

show interfaces phy

Display auto-negotiation and link partner information.

Syntax

```
show interfaces gigabitethernet slot/port phy
```

Parameters

tengigabitethernet Enter the keyword `tengigabitethernet` then the slot or port information.



NOTE: This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.9(0.0)

Added support to display the interface configurations corresponding to a range of ports.

9.8(2.0)

Introduced on the S3100 series.

9.8(0.0P5)

Introduced on the S4048-ON.

9.8(0.0P2)

Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series and S-Series.
6.5.4.0	Introduced on the E-Series.

Usage Information

The following describes the `show interfaces gigabitethernet` command following example.

Mode Control	Indicates if <code>auto negotiation</code> is enabled. If so, indicates the selected speed and duplex.
Mode Status	Displays auto negotiation fault information. When the interface completes auto negotiation successfully, the <code>autoNegComplete</code> field and the <code>linkstatus</code> field read "True."
AutoNegotiation Advertise	Displays the control words the local interface advertises during negotiation. Duplex is either half or full. Asym- and Sym Pause is the types of flow control the local interface supports.
AutoNegotiation Remote Partner's Ability	Displays the control words the remote interface advertises during negotiation. Duplex is either half or full. Asym- and Sym Pause is the types of flow control the remote interface supports.
AutoNegotiation Expansion	<code>ParallelDetectionFault</code> is the handshaking scheme in which the link partner continuously transmit an "idle" data packet using the Fast Ethernet MLT-3 waveform. Equipment that does not support auto-negotiation must be configured to exactly match the mode of operation as the link partner or else no link can be established.
1000Base-T Control	1000Base-T requires auto-negotiation. The IEEE Ethernet standard does not support setting a speed to 1000 Mbps with the <code>speed</code> command without auto-negotiation. E-Series line cards support both full-duplex and half-duplex 1000BaseT.
Phy Specific Control	Values are: <ul style="list-style-type: none"> ● 0 - Manual MDI ● 1 - Manual MDIX ● 2 - N/A ● 3 - Auto MDI/MDIX
Phy Specific Status	Displays PHY-specific status information. Cable length represents a rough estimate in meters: <ul style="list-style-type: none"> ● 0 - < 50 meters ● 1 - 50 - 80 meters ● 2 - 80 - 110 meters ● 3 - 110 - 140 meters ● 4 - 140 meters <p>Link Status: Up or Down</p> <p>Speed:</p> <ul style="list-style-type: none"> ● Auto ● 1000MB ● 100MB ● 10MB

Example

```
DelleMC# show interfaces tengigabitethernet 1/0 phy
Mode Control:
  SpeedSelection:      10b
  AutoNeg:             ON
  Loopback:           False
  PowerDown:          False
  Isolate:            False
  DuplexMode:         Full
Mode Status:
  AutoNegComplete:    False
  RemoteFault:        False
  LinkStatus:         False
  JabberDetect:       False
AutoNegotiation Advertise:
  100MegFullDplx:     True
  100MegHalfDplx:     True
  10MegFullDplx:      False
  10MegHalfDplx:      True
  Asym Pause:         False
  Sym Pause:          False
AutoNegotiation Remote Partner's Ability:
  100MegFullDplx:     False
  100MegHalfDplx:     False
  10MegFullDplx:      False
  10MegHalfDplx:      False
  Asym Pause:         False
  Sym Pause:          False
AutoNegotiation Expansion:
  ParallelDetectionFault: False
...
```

show interfaces description

Display the descriptions configured on the interface.

Syntax `show interfaces [interface] description`

Parameters

interface

(Optional) Enter one of the following keywords and slot/port or number information:

- For a Fast Ethernet interface, enter the keyword `FastEthernet` followed by the slot/port information.
- For Loopback interfaces, enter the keyword `loopback` followed by a number from 0 to 16383.
- For the management interface on the RPM, enter the keyword `ManagementEthernet` followed by the slot/port information. The slot range is 0-1 and the port range is 0.
- For the Null interface, enter the keywords `null 0`.
- For a Port Channel interface, enter the keywords `port-channel` followed by a number. For the C-Series and S-Series, the range is 1 to 128. For the E-Series, the range is 1 to 255 for TeraScale and 1 to 512 for ExaScale.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For VLAN interfaces, enter the keyword `vlan` followed by a number from 1 to 4094.

i **NOTE:** This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

Version	Description
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
8.2.1.0	Added support for 4093 VLANs on the E-Series ExaScale. Prior releases supported 2094.
8.1.1.0	Introduced on the E-Series ExaScale.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show interfaces description` command shown in the Example below.

Field	Description
Interface	Displays the type of interface and associated slot and port number.
OK?	Indicates if the hardware is functioning properly.
Status	States whether the interface is enabled (up) or disabled (administratively down).
Protocol	States whether IP is enabled (up) or disabled (down) on the interface.
Description	Displays the description (if any) manually configured for the interface.

Example

```
Dell>
Interface      OK?      Status      Protocol      Description
GigabitEthernet 4/17 NO      admin down  down          ***connected-to-host***
GigabitEthernet 4/18 NO      admin down  down          ***connected-to-Tom***
GigabitEthernet 4/19 NO      admin down  down          ***connected-to-marketing***
GigabitEthernet 4/20 NO      admin down  down          ***connected-to-Bill***
GigabitEthernet 4/21 NO      up down    ***connected-to-Radius-Server***
GigabitEthernet 4/22 NO      admin down  down          ***connected-to-Web-Server***
GigabitEthernet 4/23 NO      admin down  down          ***connected-to-PC-client***
```

```
TenGigabitEthernet 6/0 NO admin down down
GigabitEthernet 8/0 YES up up
GigabitEthernet 8/1 YES up up
GigabitEthernet 8/2 YES up up
GigabitEthernet 8/3 YES up up
GigabitEthernet 8/4 YES up up
GigabitEthernet 8/5 YES up up
GigabitEthernet 8/6 YES up up
GigabitEthernet 8/7 YES up up
GigabitEthernet 8/8 YES up up
GigabitEthernet 8/9 YES up up
GigabitEthernet 8/10 YES up up
GigabitEthernet 8/11 YES up up
Dell>
```

Related Commands

[show interfaces](#) – displays information on a specific physical interface or virtual interface.

show interfaces stack-unit

Display information on all interfaces on a specific S-Series or Z-Series stack member.

Syntax `show interfaces stack-unit unit-number`

Parameters *unit-number* Enter the stack member number.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Example

```
DellEMC# show interfaces stack-unit 1
TenGigabitEthernet 1/1 is down, line protocol is down
Hardware is DelleMCeth, address is 00:01:e8:4c:f2:82
Current address is 00:01:e8:4c:f2:82
Pluggable media not present
Interface index is 34129154
Internet address is not set
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed auto, Mode auto
```

```

ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 3w0d17h
Queueing strategy: fifo
Input Statistics:
  0 packets, 0 bytes
  5144 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
  0 Multicasts, 0 Broadcasts
  0 runts, 0 giants, 0 throttles
  0 CRC, 0 overrun, 0 discarded
Output Statistics:
  0 packets, 0 bytes, 0 underruns
  0 64-byte pkts, 0 over 64-byte pkts, 0 over 127-byte pkts
  0 over 255-byte pkts, 0 over 511-byte pkts, 0 over 1023-byte pkts
  0 Multicasts, 0 Broadcasts, 0 Unicasts
  0 throttles, 0 discarded, 0 collisions
Rate info (interval 299 seconds):
  Input 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
  Output 00.00 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Time since last interface status change: 3w0d17h
TenGigabitEthernet 1/2 is down, line protocol is down
Hardware is DelleMCEth, address is 00:01:e8:4c:f2:83
Current address is 00:01:e8:4c:f2:83
!-----output truncated -----!

```

Related Commands

- [show hardware stack-unit](#) — display data plane and management plane input/output statistics.

show interfaces status

To display status information on a specific interface only, display a summary of interface information or specify a stack-unit slot and interface.

Syntax

```
show interfaces [interface | stack-unit slot-number] status
```

Parameters

interface

(OPTIONAL) Enter one of the following keywords the interface information:

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.



NOTE: This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.

- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

stack-unit slot-number

(OPTIONAL) Enter the keyword `stack-unit` then the slot number. The range is from 0 to 5.

Defaults

None

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Example

```
DellEMC# show interfaces status
Port      Description  Status  Speed      Duplex  Vlan
Te 1/1    Te 1/1       Up      1000 Mbit  Auto    --
Te 1/2    Te 1/2       Down    Auto       Auto    1
Te 1/3    Te 1/3       Down    Auto       Auto    1
Te 1/4    Te 1/4       Down    Auto       Auto    --
Te 1/5    DellPort    Up      1000 Mbit  Auto    30-130
Te 1/6    Te 1/6       Down    Auto       Auto    --
Te 1/7    Te 1/7       Down    Auto       Auto    --
Te 1/8    Te 1/8       Up      1000 Mbit  Auto    1502,1504,1506-1508,1602
Te 1/9    Te 1/9       Down    Auto       Auto    --
Te 1/10   Te 1/10      Down    Auto       Auto    --
Te 1/11   Te 1/11      Down    Auto       Auto    --
Te 1/12   Te 1/12      Down    Auto       Auto    --
Te 1/13   Te 1/13      Down    Auto       Auto    --
Te 1/14   Te 1/14      Down    Auto       Auto    --
Te 1/15   Te 1/15      Down    Auto       Auto    --
Te 1/16   Te 1/16      Down    Auto       Auto    -
DellEMC#
```

show interfaces switchport

Display only virtual and physical interfaces in Layer 2 mode. This command displays the Layer 2 mode interfaces' IEEE 802.1Q tag status and VLAN membership.

Syntax `show interfaces switchport [interface-type | stack-unit unit-id]`

Parameters *interface-type* (OPTIONAL) Enter one of the following keywords and the interface information:

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a backup interface for this interface, enter the keyword `backup`.

NOTE: This command also enables you to view information corresponding to a range of ports.

- For physical interfaces, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.
- For port-channel interfaces, you can specify multiple ports as `port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces port-channel 1 - 4`.

stack-unit *unit-id* (OPTIONAL) Enter the keywords `stack-unit` then the stack member number.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.2.1.0	Added support for 4093 VLANs on E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Support added for hybrid port/native VLAN, introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

The following describes the `show interfaces switchport` command for the following example.

Items	Description
Name	Displays the interface's type, slot/port number.
802.1QTagged	Displays whether if the VLAN tagged ("True"), untagged ("False"), or hybrid ("Hybrid"), which supports both untagged and tagged VLANs by the port.
Vlan membership	Lists the VLANs to which the interface is a member. Starting with Dell EMC Networking OS version 7.6.1, this field can display native VLAN membership by the port.

Example

```
DellEMC# show interfaces switchport
Name: TenGigabitEthernet 1/1
802.1QTagged: Hybrid
Vlan membership:
Vlan 2, Vlan 20
Native VlanId: 20

Name: TenGigabitEthernet 1/2
802.1QTagged: True
Vlan membership:
Vlan 2

Name: TenGigabitEthernet 1/3
802.1QTagged: True
Vlan membership:
Vlan 2

Name: TenGigabitEthernet 1/4
802.1QTagged: True
Vlan membership:
Vlan 2
--More--
```

Related Commands

- [interface](#) — configure a physical interface on the switch.
- [show ip interface](#) — display Layer 3 information about the interfaces.
- [show interfaces transceiver](#) — display the physical status and operational status of an installed transceiver. The output also displays the transceiver's serial number.

show interfaces transceiver

Display the details of an installed transceiver.

Syntax

```
show interfaces [interface number] transceiver
```

Parameters

- interfaces** (OPTIONAL) Enter one of the following keywords and then the interface information:
- interface number**
- For a port channel interface, enter the keywords `port-channel` then a number.
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
-  **NOTE:** This command also enables you to view information corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.
- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to display information corresponding to all ports

between 1 and 4, specify the port range as `show interfaces interface-type 1/1 - 4`.

- For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1/1/1 - 1/1/4`.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Added support to display 10GBASE-T information on the S4048, S4048T, S6000, S6000-ON, S6100, Z9500, S6010, and Z9100.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Output augmented with diagnostic data for pluggable media.
7.7.1.0	Removed three fields in the output: Vendor Name, Vendor OUI, and Vendor PN.
7.6.1.0	Introduced on the C-Series and S-Series.
6.5.4.0	Introduced on the E-Series.

Usage Information The following describes the columns displayed in the output of the `show interfaces transceiver` command:

Line	Description
Rx Power measurement type	Output depends on the vendor, typically either "Average" or "OMA" (Receiver optical modulation amplitude).
Tx Power measurement type	Output depends on the vendor, typically either "Supported" or "Not supported".
Temp High Alarm threshold	Factory-defined setting, typically in Centigrade. Value differs between SFPs and SFP+.

Line	Description
Voltage High Alarm threshold	Displays the interface index number used by SNMP to identify the interface.
Bias High Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
TX Power High Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
RX Power High Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Temp Low Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Voltage Low Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Bias Low Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
TX Power Low Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
RX Power Low Alarm threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Temp High Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Voltage High Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Bias High Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
TX Power High Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
RX Power High Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Temp Low Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Voltage Low Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Bias Low Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
TX Power Low Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Power Low Warning threshold	Factory-defined setting. Value can differ between SFP and SFP+.
Temperature	Current temperature of the SFPs. If this temperature crosses Temp High alarm/warning thresholds, the temperature high alarm/warning flag is set to true.

Line	Description
Voltage	Current voltage of the SFPs. If this voltage crosses voltage high alarm/warning thresholds, the voltage high alarm/warning flag is set to true.
Tx Bias Current	Present transmission (Tx) bias current of the SFP. If this crosses bias high alarm/warning thresholds, the TX bias high alarm/warning flag is set to true. If it falls below the low alarm/warning thresholds, the TX bias low alarm/warning flag is set to true.
Tx Power	Present Tx power of the SFP. If this crosses Tx power alarm/warning thresholds, the Tx power high alarm/warning flag is set to true. If it falls below the low alarm/warning thresholds, the Tx power low alarm/warning flag is set to true.
Rx Power	Present receiving (Rx) power of the SFP. This value is either average Rx power or OMA. This depends on the Rx Power measurement type displayed above. If this crosses Rx power alarm/warning thresholds, the Rx power high alarm/warning flag is set to true. If it falls below the low alarm/warning thresholds, the Rx power low alarm/warning flag is set to true.
Data Ready state Bar	This field indicates that the transceiver has achieved power up and data is ready. This is set to true if data is ready to be sent and set to false if data is being transmitted.
Rx LOS state	This is the digital state of the Rx_LOS output pin. This is set to true if the operating status is down.
Tx Fault state	This is the digital state of the Tx Fault output pin.
Rate Select state	This is the digital state of the SFP rate_select input pin.
RS state	This is the reserved digital state of the pin AS(1) per SFF-8079 and RS(1) per SFF-8431.
Tx Disable state	If the admin status of the port is down then this flag is set to true.
Temperature High Alarm Flag	This can be either true or false, depending on the Current temperature value displayed above.
Voltage High Alarm Flag	This can be either true or false, depending on the Current Voltage value displayed above.
Tx Bias High Alarm Flag	This can be either true or false, depending on the present Tx bias current value displayed above.
Tx Power High Alarm Flag	This can be either true or false, depending on the Current Tx bias power value displayed above.
Rx Power High Alarm Flag	This can be either true or false, depending on the Current Rx power value displayed above.
Temperature Low Alarm Flag	This can be either true or false, depending on the Current Temperature value displayed above.
Voltage Low Alarm Flag	This can be either true or false, depending on the Current voltage value displayed above.
Tx Bias Low Alarm Flag	This can be either true or false, depending on the Tx bias current value displayed above.
Tx Power Low Alarm Flag	This can be either true or false, depending on the Current Tx power value displayed above.
Rx Power Low Alarm Flag	This can be either true or false, depending on the Current Rx power value displayed above.
Temperature High Warning Flag	This can be either true or false, depending on the Current Temperature value displayed above.
Voltage High Warning Flag	This can be either true or false, depending on the Current Voltage value displayed above.

Line	Description
Tx Bias High Warning Flag	This can be either true or false, depending on the Tx bias current value displayed above.
Tx Power High Warning Flag	This can be either true or false, depending on the Current Tx power value displayed above.
Rx Power High Warning Flag	This can be either true or false, depending on the Current Tx power value displayed above.
Temperature Low Warning Flag	This can be either true or false, depending on the Current Temperature value displayed above.
Voltage Low Warning Flag	This can be either true or false, depending on the Current Voltage value displayed above.
Tx Bias Low Warning Flag	This can be either true or false, depending on the present Tx bias current value displayed above.
Tx Power Low Warning Flag	This can be either true or false, depending on the Current Tx power value displayed above.
Rx Power Low Warning Flag	This can be either true or false, depending on the Current Rx power value displayed above.

Example

```

DelleMC# show interfaces TengigabitEthernet 1/1 transceiver
SFP is present.

SFP 0 Serial Base ID fields
SFP 0 Id = 0x03
SFP 0 Ext Id = 0x04
SFP 0 Connector = 0x07
SFP 0 Transciever Code = 0x00 0x00 0x00 0x01 0x20 0x40 0x0c 0x05
SFP 0 Encoding = 0x01
SFP 0 BR Nominal = 0x15
SFP 0 Length(9um) Km = 0x00
SFP 0 Length(9um) 100m = 0x00
SFP 0 Length(50um) 10m = 0x1e
SFP 0 Length(62.5um) 10m = 0x0f
SFP 0 Length(Copper) 10m = 0x00
SFP 0 Vendor Rev = A
SFP 0 Laser Wavelength = 850 nm
SFP 0 CheckCodeBase = 0x66
SFP 0 Serial Extended ID fields
SFP 0 Options = 0x00 0x12
SFP 0 BR max= 0
SFP 0 BR min= 0
SFP 0 Vendor SN= P5N1ACE
SFP 0 Datecode = 040528
SFP 0 CheckCodeExt = 0x5b

SFP 1 Diagnostic Information
=====
SFP 1 Rx Power measurement type = Average
=====
SFP 1 Temp High Alarm threshold = 95.000C
SFP 1 Voltage High Alarm threshold = 3.900V
SFP 1 Bias High Alarm threshold = 17.000mA
SFP 1 TX Power High Alarm threshold = 0.631mW
SFP 1 RX Power High Alarm threshold = 1.259mW
SFP 1 Temp Low Alarm threshold = -25.000C
SFP 1 Voltage Low Alarm threshold = 2.700V
SFP 1 Bias Low Alarm threshold = 1.000mA
SFP 1 TX Power Low Alarm threshold = 0.067mW
SFP 1 RX Power Low Alarm threshold = 0.010mW
=====
SFP 1 Temp High Warning threshold = 90.000C
SFP 1 Voltage High Warning threshold = 3.700V
SFP 1 Bias High Warning threshold = 14.000mA
SFP 1 TX Power High Warning threshold = 0.631mW

```

```

SFP 1 RX Power High Warning threshold = 0.794mW
SFP 1 Temp Low Warning threshold     = -20.000C
SFP 1 Voltage Low Warning threshold  = 2.900V
SFP 1 Bias Low Warning threshold     = 2.000mA
SFP 1 TX Power Low Warning threshold = 0.079mW
SFP 1 RX Power Low Warning threshold = 0.016mW
=====
SFP 1 Temperature                    = 39.930C
SFP 1 Voltage                        = 3.293V
SFP 1 Tx Bias Current                = 6.894mA
SFP 1 Tx Power                      = 0.328mW
SFP 1 Rx Power                      = 0.000mW
=====
SFP 1 Data Ready state Bar           = False
SFP 1 Rx LOS state                   = True
SFP 1 Tx Fault state                 = False
SFP 1 Rate Select state              = False
SFP 1 RS state                       = False
SFP 1 Tx Disable state               = False
=====
SFP 1 Temperature High Alarm Flag    = False
SFP 1 Voltage High Alarm Flag        = False
SFP 1 Tx Bias High Alarm Flag        = False
SFP 1 Tx Power High Alarm Flag       = False
SFP 1 Rx Power High Alarm Flag       = False
SFP 1 Temperature Low Alarm Flag     = False
SFP 1 Voltage Low Alarm Flag         = False
SFP 1 Tx Bias Low Alarm Flag         = False
SFP 1 Tx Power Low Alarm Flag        = False
SFP 1 Rx Power Low Alarm Flag        = True
=====
!-----output truncated -----

```

Related Commands

- [interface](#) — configure a physical interface on the switch.
- [show ip interface](#) — display Layer 3 information about the interfaces.

show interfaces vlan

Display VLAN statistics.

Syntax `show interfaces vlan {vlan-id} [LINE] {description}`

Parameters

- vlan-id** Enter the interface VLAN number. The range is from 1 to 4094.
- LINE** (OPTIONAL) Enter the name of the VLAN.
- description** Displays the VLAN interface information with description.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

- NOTE:** This command also enables you to view information corresponding to a range of ports.
- You can specify multiple ports as `port-range`. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as `show interfaces interface-type 1 - 4`.

Example

```
DellEMC# show interfaces vlan 10
Vlan 10 is up, line protocol is down
Address is 90:b1:1c:f4:99:ce, Current address is 90:b1:1c:f4:99:ce
Interface index is 1107787786
Internet address is not set
Mode of IPv4 Address Assignment: NONE
DHCP Client-ID: 90b11cf499ce
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed auto
ARP type: ARPA, ARP Timeout 04:00:00
Last clearing of "show interface" counters 2d17h26m
Queueing strategy: fifo
Time since last interface status change: 2d17h26m
Input Statistics:
    0 packets, 0 bytes
Output Statistics:
    0 packets, 0 bytes, 0 underruns
```

show range

Display all interfaces configured using the `interface range` command.

Syntax `show range`

Command Modes INTERFACE RANGE (config-if-range)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.2.1.0	Added support for 4093 VLANs on E-Series.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced.

Example

```
DellEMC(conf-if-range-te-2/2,fo-2/56)# show range
2/2 - 0
2/56 - 0
DellEMC(conf-if-range-te-2/2,fo-2/56)#
```

Related Commands

- [interface](#) — configure a physical interface on the switch.
- [show ip interface](#) — display Layer 3 information about the interfaces.

show running-config ecmp-group

Display interfaces, LAG, or LAG link bundles being monitored for uneven traffic distribution using the `ecmp-group monitoring enable` command. The ECMP group could have a LAG or a list of interfaces (not just LAG link-bundles).

Syntax `show running-config ecmp-group`

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.

Related Commands

- [ecmp-group](#) — configure a mechanism to monitor traffic distribution.

shutdown

Disable an interface.

Syntax `shutdown`
To activate an interface, use the `no shutdown` command.

Defaults The interface is disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

The `shutdown` command marks a physical interface as unavailable for traffic. To discover if an interface is disabled, use the `show ip interface brief` command. Disabled interfaces are listed as down.

Disabling a VLAN or a port channel causes different behavior. When a VLAN is disabled, the Layer 3 functions within that VLAN are disabled. Layer 2 traffic continues to flow. Entering the `shutdown` command on a port channel disables all traffic on the port channel and the individual interfaces within the port channel. To enable a port channel, enter `no shutdown` on the port channel interface and at least one interface within that port channel.

The `shutdown` and `description` commands are the only commands that you can configure on an interface that is a member of a port channel.

Related Commands

- [interface port-channel](#) — create a port channel interface.
- [interface vlan](#) — create a VLAN.
- [show ip interface](#) — display the interface routing status. Add the keyword `brief` to display a table of interfaces and their status.

speed (for 10/100/1000/10000 interfaces)

Set the speed for 10/100/1000/10000 interfaces. Set both sides of a link to the same speed (10/100/1000/10000) or to auto or the link may not come up.

Syntax `speed {10 | 100 | 1000 | 10000 | auto}`

To return to the default setting, use the `no speed {10 | 100 | 1000 | 10000}` command.

Parameters

- | | |
|------------|---|
| 10 | Enter the keyword 10 to set the interface's speed to 10 Mb/s.
 NOTE: This interface speed is not supported on the LC-EH-GE-50P or the LC-EJ-GE-50P card. If the command is entered for these interfaces, an error message appears. |
| 100 | Enter the keyword 100 to set the interface's speed to 10/100 Mb/s.
 NOTE: When this setting is enabled, only 100Base-FX optics are supported on the LC-EH-GE-50P or the LC-EJ-GE-50P card. |

1000	Enter the keyword <code>1000</code> to set the interface's speed to 1000 Mb/s. Auto-negotiation is enabled. For more information, refer to <code>negotiation auto</code> .  NOTE: When this setting is enabled, only 1000Base-FX optics are supported on the LC-EH-GE-50P or the LC-EJ-GE-50P card.
10000	Enter the keyword <code>10000</code> to set the interface's speed to 10000 Mb/s. Auto-negotiation is enabled. For more information, refer to <code>negotiation auto</code> .
auto	Enter the keyword <code>auto</code> to set the interface to auto-negotiate its speed. Auto-negotiation is enabled. For more information, refer to <code>negotiation auto</code> .

Defaults

auto

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Added support for fanned-out 1 Gigabit SFP port.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Supported on LC-EH-GE-50P or the LC-EJ-GE-50P cards.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

This command is found on the 10/100/1000/10000 Base-T Ethernet interfaces.

When you enable `auto`, the system performs an automatic discovery to determine the optics installed and configure the appropriate speed.

When you configure a speed for the 10/100/1000/10000 interface, confirm the `negotiation auto` command setting. Both sides of the link must have auto-negotiation either enabled or disabled. For speed settings of 1000 or `auto`, the software sets the link to auto-negotiation and you cannot change that setting.

 **NOTE:** Starting with Dell EMC Networking OS version 7.8.1.0, when you use a copper SFP2 module with catalog number GP-SFP2-1T in the S25P model of the S-Series, you can manually set its speed with the `speed` command. When you set the speed to **10** or **100 Mbps**, you can also use the `duplex` command.

If you use an active optical cable (AOC), you can convert the QSFP+ port to a 10 Gigabit SFP+ port or 1 Gigabit SFP port. Use the `speed` command to enable the required speed.

Related Commands

- [duplex \(10/100 Interfaces\)](#) — configures duplex mode on physical interfaces.
- [negotiation auto](#) — enable or disable auto-negotiation on an interface.

speed (Management interface)

Set the speed for the Management interface.

Syntax `speed {10 | 100 | 1000 | auto}`

To return to the default setting, use the `no speed` command.

Parameters	10	Enter the keyword <code>10</code> to set the interface's speed to 10 Mb/s.
	100	Enter the keyword <code>100</code> to set the interface's speed to 100 Mb/s.
	1000	Enter the keyword <code>1000</code> to set the interface's speed to 1000 Mb/s.
	auto	Enter the keyword <code>auto</code> to set the interface to auto-negotiate its speed.

Defaults `auto`

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.11.1	Introduced on the S55, S60, and S4810
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Usage Information This command is found on the Management interface only.

Related Commands

- [interface ManagementEthernet](#) — configure the Management port on the system (either the Primary or Standby RPM).
- [management route](#) — configure a static route that points to the Management interface or a forwarding router.

stack-unit portmode

Split a single 40G port into four 10G ports.

Syntax `stack-unit stack-unit port number portmode quad`

Parameters `stack-unit` Enter the stack member unit identifier of the stack member to reset.

number	Enter the port number of the port to be split.
port	Enter the keyword <code>port</code> then the port number to specify the port where fanout mode is specified.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.7(0.0)	Added support for dynamically fanning-out of interfaces on S6000. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

Usage Information The port must be in a default configuration before it can be split. As the 40G port is lost in the configuration when the port is split, ensure that you remove the port from other L2/L3 feature configurations.

You cannot use this command if you use an LR4 optics.

Example (stack unit – Warning message when 13 ports are configured in any port range)

```
DelleMC(conf)# stack-unit 0 port 48 portmode quad
Maximum number of ports that can be made Quad mode in the range <0-63>
is configured. Ports 52,56,60, will be disabled on reload.
Do you wish to continue? [confirm yes/no]:yes
Please save and reset unit 0 for the changes to take effect.
DelleMC(conf)#
```

switchport

Place an interface in Layer 2 mode.

Syntax `switchport [[backup interface {interface | port-channel number}] | mode private-vlan {host | promiscuous | trunk}]`

To remove an interface from Layer 2 mode and place it in Layer 3 mode, enter the `no switchport` command. If a `switchport backup interface` is configured, first remove the backup configuration. To remove a `switchport backup interface`, enter the `no switchport backup interface` command.

Parameters

backup (OPTIONAL) Use this option to configure a redundant Layer 2 link without using Spanning Tree. The keyword `backup` configures a backup port so that if the primary port fails, the backup port changes to the up state. If the primary later comes up, it becomes the backup.

interface interface (OPTIONAL) Enter any of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.

- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

port-channel	(OPTIONAL) Enter the keywords <code>port-channel</code> if the backup port is a static or dynamic port channel.
mode	(OPTIONAL) Enter the keyword <code>mode</code> to set the interface mode.
private-vlan	(OPTIONAL) Enter the keywords <code>private-vlan</code> to set the interface mode to private VLAN mode.
host	(OPTIONAL) Enter the keyword <code>host</code> to set the private VLAN interface to host mode.
promiscuous	(OPTIONAL) Enter the keyword <code>promiscuous</code> to set the private VLAN interface to promiscuous mode.
trunk	(OPTIONAL) Enter the keyword <code>trunk</code> to set the private VLAN interface to trunk mode.

Defaults Disabled — interface is in Layer 3 mode.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.1.0	Added support for port-channel interfaces (the <code>port-channel number</code> option).
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Added the <code>backup interface</code> option.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Usage Information If an IP address or VRRP group is assigned to the interface, you cannot use the `switchport` command on the interface. To use the `switchport` command on an interface, only the `no ip address` and `no shutdown` statements must be listed in the `show config` output.

When you enter the `switchport` command, the interface is automatically added to the default VLAN.

To use the `switchport backup interface` command on a port, first enter the `switchport` command. For more information, see “Configuring Redundant Links” in the Layer 2 section in the *Dell EMC Networking OS Configuration Guide*.

wavelength

Set the wavelength for tunable 10-Gigabit SFP+ optics.

Syntax `wavelength`

To retain the existing wavelength, use the `no wavelength` command.

Defaults `none`

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
---------	-------------

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
------------------	---

9.10(0.0)	Introduced on the S6000, S6000-ON, S5000, S4810, S4820T, S3048-ON, S4048-ON, M I/O Aggregator, FN I/O Module, MXL, C9010, S3100 series, and Z9100-ON.
------------------	---

Usage Information

The wavelength can be configured only on a tunable 10-Gigabit SFP+ optic. The wavelength range is from 1528.3 nm to 1568.77nm.

If you configure the wavelength on a non-tunable optic, there is no change to the existing wavelength. The configured wavelength is saved in the running configuration and is applicable, when a tunable optic is used.

If you do not configure the wavelength on an inserted tunable optic, the existing wavelength is used.

Example

The following example shows the wavelength set for a tunable 10-Gigabit SFP+ optic:

```
DellEMC(conf-if-te-1/1)# wavelength 1528.30
```

Related Commands

- [show config](#) — displays the interface configuration.

Egress Interface Selection (EIS) Commands

The following commands are Egress Interface Selection (EIS) commands.

application

Configure the management egress interface selection.

Syntax `application {all | application-type}`

To remove a management application configuration, use the `no application {all | application-type}` command.

Parameters

- application-type*** Enter any of the following keywords:
- For DNS, enter the keyword `dns`.
 - For FTP, enter the keyword `ftp`.
 - For NTP, enter the keyword `ntp`.
 - For Radius, enter the keyword `radius`.

- For sFlow collectors, enter the keyword `sflow-collector`.
- For SNMP (traps and MIB responses), enter the keywords `snmp`.
- For SSH, enter the keyword `ssh`.
- For Syslog, enter the keyword `syslog`.
- For TACACS, enter the keyword `tacacs`.
- For Telnet, enter the keyword `telnet`.
- For TFTP, enter the keyword `tftp`.

all Configure all applications.

Defaults None.

Command Modes EIS Mode (conf-mgmt-eis)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

application (for HTTP and ICMP)

Configure the management egress interface selection for HTTP and ICMP.

NOTE: Only the options that have been newly introduced are described here. For a complete description on all of the keywords and variables that are available with this command, refer the respective Command Reference Guide of the applicable platform of the Release 9.2(0.0) documentation set.

Syntax `application {all | application-type}`

To remove a management application configuration, use the `no application {all | application-type}` command.

Parameters ***application-type*** Enter any of the following keywords:

- For HTTP, enter the keyword `http`.
- For ICMP, enter the keyword `icmp`.

all Configure all applications.

Defaults None.

Command Modes EIS Mode (conf-mgmt-eis)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3.(0.0)	Added support for the HTTP and ICMP traffic on the Z9000, S4810, and S4820T.

clear management application pkt-cntr

Clear management application packet counters for all management application types.

Syntax `clear management application pkt-cntr`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

clear management application pkt-fallback-cntr

Clear management application packet fallback counters for all management application types.

Syntax `clear management application pkt-fallback-cntr`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

management egress-interface-selection

To make configured application traffic egress through the management port instead of the front-end (FE) port, enable and configure a management egress interface.

Syntax `management egress-interface-selection`

To disable and remove management egress interface selection (EIS) configurations, use the `no management egress-interface-selection` command.

Defaults None.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.

show ip management-eis-route

Display the management routes used by EIS.

Syntax `show ip management-eis-route`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

Example

```
Dell EMC# show ip management-eis-route
Destination      Gateway          State      Route Source
-----
10.11.0.0/16     ManagementEthernet 0/0    Connected Connected
172.16.1.0/24    10.11.192.4     Active   Static
```

show management application pkt-ctr

Display the number of packets for each application type that have taken the management route.

Syntax `show management application pkt-ctr`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

Example

```
Dell EMC# show management application pkt-ctr
dns           : 2
ftp           : 0
ntp           : 0
radius        : 0
sflow-collector : 0
snmp          : 0
ssh           : 0
```

```
syslog      : 0
tacacs     : 0
telnet     : 0
tftp      : 0
```

show management application pkt-fallback-cntr

Display the number of packets for each application type that have been rerouted to the default routing table due to management port or route lookup failure.

Syntax `show management application pkt-fallback-cntr`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000, S4810, and S4820T.

Example

```
DellEMC# show management application pkt-fallback-cntr
dns          : 0
ftp         : 0
ntp         : 0
radius     : 0
sflow-collector : 0
snmp       : 0
ssh        : 2
syslog     : 0
tacacs    : 0
telnet    : 0
tftp      : 0
```

Port Channel Commands

A Link Aggregation Group (LAG) is a group of links that appear to a MAC client as if they were a single link according to IEEE 802.3ad. In Dell EMC Networking OS, a LAG is referred to as a Port Channel.

- The platform supports 128 port channels and 16 members per port channel.

As each port can be assigned to only one Port Channel, and each Port Channel must have at least one port, some of those nominally available Port Channels might have no function because they could have no members if there are not enough ports installed. But stack members can provide those ports.

NOTE: The Dell EMC Networking OS implementation of LAG or Port Channel requires that you configure a LAG on both switches manually. For information about Dell EMC Networking OS link aggregation control protocol (LACP) for dynamic LAGs, refer to the [Link Aggregation Control Protocol \(LACP\)](#) chapter. For more information about configuring and using Port Channels, refer to the *Dell EMC Networking OS Configuration Guide*.

channel-member

Add an interface to the Port Channel, while in INTERFACE PORTCHANNEL mode.

Syntax `channel-member interface`
To delete an interface from a Port Channel, use the `no channel-member interface` command.

Parameters **interface** (OPTIONAL) Enter any of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults Not configured.

Command Modes INTERFACE PORTCHANNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Usage Information Use the `interface port-channel` command to access this command.

You cannot add an interface to a Port Channel if the interface contains an IP address in its configuration. Only the `shutdown`, `description`, `mtu`, and `ip mtu` commands can be configured on an interface if it is added to a Port Channel. The `mtu` and `ip mtu` commands are only available when the chassis is in Jumbo mode.

Link MTU and IP MTU considerations for Port Channels are:

- All members must have the same link MTU value and the same IP MTU value.
- The Port Channel link MTU and IP MTU must be less than or equal to the link MTU and IP MTU values configured on the channel members. For example, if the members have a link MTU of 2100 and an IP

MTU 2000, the Port Channel's MTU values cannot be higher than 2100 for link MTU or 2000 bytes for IP MTU.

When an interface is removed from a Port Channel with the `no channel-member` command, the interface reverts to its configuration prior to joining the Port Channel.

An interface can belong to only one Port Channel.

You can have 16 interfaces per Port Channel. The interfaces can be located on different line cards but must be the same physical type and speed (for example, all 10-Gigabit Ethernet interfaces).

For more information about Port Channels, refer to the *Dell EMC Networking OS Configuration Guide*.

Related Commands

- [description](#) — assign a descriptive text string to the interface.
- [interface port-channel](#) — create a Port Channel interface.
- [shutdown](#) — disable/enable the port channel.

group

Group two LAGs in a supergroup (“fate-sharing group” or “failover group”).

Syntax

```
group group_number port-channel number port-channel number
```

To remove an existing LAG supergroup, use the `no group group_number` command.

Parameters

group_number	Enter an integer from 1 to 32 that uniquely identifies this LAG fate-sharing group.
port-channel number	Enter the keywords <code>port-channel</code> then an existing LAG number. Enter this keyword/variable combination twice, identifying the two paired LAGs.

Defaults

None

Command Modes

PORT-CHANNEL FAILOVER-GROUP (conf-po-failover-grp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series, E-Series, and S-Series.

Related Commands

- [port-channel failover-group](#) — access PORT-CHANNEL FAILOVER-GROUP mode to configure a LAG failover group.
- [show interfaces port-channel](#) — display information on configured Port Channel groups.

interface port-channel

Create a Port Channel interface, which is a link aggregation group (LAG) containing 16 physical interfaces on the S-Series.

Syntax

```
interface port-channel channel-number
```

To delete a Port Channel, use the `no interface port-channel channel-number` command.

Parameters

channel-number For a Port Channel interface, enter the keywords `port-channel` then a number. The range is from 1 to 128.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Increased the number of port channels to 4096.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on S4810.
8.3.11.1	Introduced on Z9000.
8.1.1.0	Introduced on E-Series.
7.6.1.0	Introduced on S-Series.
7.5.1.0	Introduced on C-Series.
pre-Version 6.2.1.0	Introduced on E-Series.

Usage Information

Port Channel interfaces are logical interfaces and can be either in Layer 2 mode (by using the `switchport` command) or Layer 3 mode (by configuring an IP address). You can add a Port Channel in Layer 2 mode to a VLAN.

The `shutdown`, `description`, and `name` commands are the only commands that you can configure on an interface while it is a member of a Port Channel. To add a physical interface to a Port Channel, the interface can only have the `shutdown`, `description`, and `name` commands configured. The Port Channel's configuration is applied to the interfaces within the Port Channel.

A Port Channel can contain any physical interface. Based on the first interface configured in the Port Channel and enabled, Dell EMC Networking OS determines the common speed. For more information, refer to [channel-member](#).

If the line card is in a Jumbo mode chassis, you can also configure the `mtu` and `ip mtu` commands. The Link MTU and IP MTU values configured on the channel members must be greater than the Link MTU and IP MTU values configured on the Port Channel interface.

NOTE: In a Jumbo-enabled system, all members of a Port Channel must be configured with the same link MTU values and the same IP MTU values.

Example

```
DellEMC(conf)# int port-channel 2
DellEMC(conf-if-po-2)#
```

Related Commands

- [channel-member](#) — add a physical interface to the LAG.
- [interface](#) — configure a physical interface.
- [interface loopback](#) — configure a Loopback interface.
- [interface null](#) — configure a null interface.
- [interface vlan](#) — configure a VLAN.
- [shutdown](#) — disable/enable the port channel.

minimum-links

Configure the minimum number of links in a LAG (Port Channel) that must be in “oper up” status for the LAG to be also in “oper up” status.

Syntax `minimum-links number`

Parameters `number` Enter the number of links in a LAG that must be in “oper up” status. The range is from 1 to 16. The default is **1**.

Defaults **1**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
pre-Version 6.2.1.0	Introduced on the E-Series.

Usage Information

If you use this command to configure the minimum number of links in a LAG that must be in “oper up” status, the LAG must have at least that number of “oper up” links before it can be declared as up. For example, if the required minimum is four, and only three are up, the LAG is considered down.

port-channel failover-group

To configure a LAG failover group, access PORT-CHANNEL FAILOVER-GROUP mode.

Syntax `port-channel failover-group`
 To remove all LAG failover groups, use the `no port-channel failover-group` command.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.

Usage Information

This feature groups two LAGs to work in tandem as a supergroup. For example, if one LAG goes down, the other LAG is taken down automatically, providing an alternate path to reroute traffic, avoiding oversubscription on the other LAG. You can use both static and dynamic (LACP) LAGs to configure failover groups. For more information, see the “Port Channel” section in the *Dell EMC Networking OS Configuration Guide*.

Related Command

- [group](#) — group two LAGs in a supergroup (“fate-sharing group”).
- [show interfaces port-channel](#) — display information on configured Port Channel groups.

show config

Display the current configuration of the selected LAG.

Syntax `show config`

Command Modes INTERFACE PORTCHANNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-Version 6.2.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-if-po-1)# show config
!
interface Port-channel 1
  no ip address
  shutdown
DellEMC(conf-if-po-1)#
```

show interfaces port-channel

Display information on configured Port Channel groups.

Syntax `show interfaces port-channel [channel-number] [brief] [description]`

Parameters

channel-number	For a Port Channel interface, enter the keyword <code>port-channel</code> then a number. The range is from 1 to 128. NOTE: This command also enables you to view information corresponding to a range of ports. <ul style="list-style-type: none">For port-channel interfaces, you can specify multiple ports as <code>port-range</code>. For example, if you want to display information corresponding to all ports between 1 and 4, specify the port range as <code>show interfaces port-channel 1 - 4</code>.
brief	(OPTIONAL) Enter the keyword <code>brief</code> to display only the port channel number, the state of the port channel, and the number of interfaces in the port channel.
description	(OPTIONAL) Displays the port-channel information with description.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Increased the number of port channels to 4096.
9.9(0.0)	Added support to display the interface configurations corresponding to a range of ports.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series. Modified to display the LAG failover group status.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information

The following describes the `show interfaces port-channel` command shown in the following example.

Field	Description
Port-Channel 1...	Displays the LAG's status. In the Example, the status of the LAG's LAG fate-sharing group ("Failover-group") is listed.
Hardware is...	Displays the interface's hardware information and its assigned MAC address.
Port-channel is part...	Indicates whether the LAG is part of a LAG fate-sharing group ("Failover-group").
Internet address...	States whether an IP address is assigned to the interface. If an IP address is assigned, that address is displayed.
MTU 1554...	Displays link and IP MTU.
LineSpeed	Displays the interface's line speed. For a port channel interface, it is the line speed of the interfaces in the port channel.
Members in this...	Displays the interfaces belonging to this port channel.
ARP type:...	Displays the ARP type and the ARP timeout value for the interface.
Last clearing...	Displays the time when the <code>show interfaces</code> counters were cleared.
Queueing strategy.	States the packet queuing strategy. FIFO means first in first out.

Field	Description
packets input...	Displays the number of packets and bytes into the interface.
Input 0 IP packets...	Displays the number of packets with IP headers, VLAN tagged headers, and MPLS headers. The number of packets may not add correctly because a VLAN tagged IP packet counts as both a VLAN packet and an IP packet.
0 64-byte...	Displays the size of packets and the number of those packets entering that interface. This information is displayed over two lines.
Received 0...	Displays the type and number of errors or other specific packets received. This information is displayed over three lines.
Output 0...	Displays the type and number of packets sent out the interface. This information is displayed over three lines.
Rate information...	Displays the traffic rate information into and out of the interface. Traffic rate is displayed in bits and packets per second.
Time since...	Displays the time since the last change in the configuration of this interface.

Example

```
DellEMC# show interfaces port-channel 20
Port-channel 20 is up, line protocol is up (Failover-group 1 is down)
Hardware address is 00:01:e8:01:46:fa
Port-channel is part of failover-group 1
Internet address is 1.1.120.1/24
MTU 1554 bytes, IP MTU 1500 bytes
LineSpeed 2000 Mbit
Members in this channel: Te 2/5 Te 2/18
ARP type: ARPA, ARP timeout 04:00:00
Last clearing of "show interfaces" counters 00:00:00
Queueing strategy: fifo
  44507301 packets input, 3563070343 bytes
  Input 44506754 IP Packets, 0 Vlans 0 MPLS
  41 64-byte pkts, 44502871 over 64-byte pkts, 249 over 127-byte pkts
  407 over 255-byte pkts, 3127 over 511-byte pkts, 606 over 1023-byte
  pkts
  Received 0 input symbol errors, 0 runts, 0 giants, 0 throttles
  0 CRC, 0 IP Checksum, 0 overrun, 0 discarded
  1218120 packets output, 100745130 bytes, 0 underruns
  Output 5428 Multicasts, 4 Broadcasts, 1212688 Unicasts
  1216142 IP Packets, 0 Vlans, 0 MPLS
  0 throttles, 0 discarded
Rate info (interval 299 sec):
  Input 01.50Mbits/sec, 2433 packets/sec
  Output 00.02Mbits/sec,4 packets/sec
Time since last interface status change: 00:22:34

DellEMC#
```

User Information The following describes the `show interfaces port-channel brief` command shown in the following example.

Field	Description
LAG	Lists the port channel number.
Mode	Lists the mode: <ul style="list-style-type: none"> • L3 — for Layer 3 • L2 — for Layer 2
Status	Displays the status of the port channel. <ul style="list-style-type: none"> • down — if the port channel is disabled (<code>shutdown</code>) • up — if the port channel is enabled (<code>no shutdown</code>)
Uptime	Displays the age of the port channel in hours:minutes:seconds.
Ports	Lists the interfaces assigned to this port channel.

Field	Description
(untitled)	<p>Displays the status of the physical interfaces (up or down).</p> <ul style="list-style-type: none"> In Layer 2 port channels, an * (asterisk) indicates which interface is the primary port of the port channel. The primary port sends out interface PDU. In Layer 3 port channels, the primary port is not indicated.

Example

```
DellEMC# show interfaces port-channel 1 brief

LAG Mode Status Uptime      Ports
1   L2   up      00:00:08   Te 3/1   (Up)  *
                        Te 3/2   (Down)
                        Te 3/3   (Up)

DellEMC#
```

Related Commands

- [show lacp](#) — display the LACP matrix.

show port-channel-flow

Display an egress port in a given port-channel flow.

Syntax

```
show port-channel-flow outgoing-port-channel number incoming-interface
interface {source-ip address destination-ip address} | {source-port number
destination-port number} | {source-mac address destination-mac address
{vlan vlanid | ether-type}}
```

Parameters

outgoing-port-channel <i>number</i>	<p>Enter the keywords <code>outgoing-port-channel</code> then the number of the port channel to display flow information.</p> <ul style="list-style-type: none"> For a Port Channel interface, enter the keywords <code>port-channel</code> then a number. The range is from 1 to 128.
incoming-interface <i>interface</i>	<p>Enter the keywords <code>incoming-interface</code> then the interface type and the interface information:</p> <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
source-ip <i>address</i>	Enter the keywords <code>source-ip</code> then the IP source address in IP address format.
destination-ip <i>address</i>	Enter the keywords <code>destination-ip</code> then the IP destination address in IP address format.
source-port <i>number</i>	Enter the keywords <code>source-port</code> then the source port number. The range is from 1 to 65536. The default is None .
destination-port <i>number</i>	Enter the keywords <code>destination-port</code> then the destination port number. The range is from 1 to 65536. The default is None .
source-mac <i>address</i>	Enter the keywords <code>source-mac</code> then the MAC source address in the <code>nn:nn:nn:nn:nn:nn</code> format.
destination-mac <i>address</i>	Enter the keywords <code>destination-mac</code> then the MAC destination address in the <code>nn:nn:nn:nn:nn:nn</code> format.
vlan <i>vlan-id</i>	Enter the keywords <code>vlan</code> then the VLAN-id. The range is from 0 to 4094.
ether-type	Enter the keywords <code>ether-type</code> in the <code>XX:XX</code> format.

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Increased the number of port channels to 4096.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.

Usage Information

Because this command calculates based on a Layer 2 hash algorithm, use this command to display flows for switched Layer 2 packets, not for routed packets (use the `show ip flow` command to display routed packets).

The `show port-channel-flow` command returns the egress port identification in a given port-channel if a valid flow is entered. A mismatched flow error occurs if MAC-based hashing is configured for a Layer 2 interface and you are trying to display a Layer 3 flow.

The output displays three entries:

- Egress port for unfragmented packets.
- In the event of fragmented packets, the egress port of the first fragment.
- In the event of fragmented packets, the egress port of the subsequent fragments.

NOTE: In the `show port channel flow` command output, the egress port for an unknown unicast, multicast, or broadcast traffic is not displayed.

The following example shows the `show port-channel-flow outgoing-port-channel number incoming-interface interface source-mac address destination-mac address`

- Load-balance is configured for MAC
- Load-balance is configured for IP 4-tuple/2-tuple
- A non-IP payload is going out of Layer 2 LAG interface that is a member of VLAN with an IP address

Example

```
DellEMC# show port-channel-flow outgoing-port-channel 1 incoming-
interface te 3/3
source-mac 00:00:50:00:00:00 destination-mac 00:00:a0:00:00:00
```

Egress Port for port-channel 1, for the given flow, is Te 13/2

Time Domain Reflectometer (TDR) Commands

TDR is useful for troubleshooting an interface that is not establishing a link; either it is flapping or not coming up at all. TDR detects open or short conditions of copper cables on 10G Base-T modules.

Important Points to Remember

- The interface and port must be enabled (configured—refer to the `interface` command) before running TDR. An error message is generated if you have not enabled the interface.
- The interface on the far-end device must be shut down before running TDR.

- Because TDR is an intrusive test on an interface that is not establishing a link, do not run TDR on an interface that is passing traffic.
- When testing between two devices, do not run the test on both ends of the cable.

tdr-cable-test

Test the condition of copper cables on 10G Base-T modules.

Syntax	<code>tdr-cable-test interface</code>	
Parameters	<i>interface</i>	Enter the keyword <code>TenGigabitEthernet</code> then the slot/port information for the 10G Ethernet interface.
Defaults	None	
Command Modes	EXEC	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.9(0.0)	Introduced on the C9010.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7.0.0	Introduced on the S5000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S Series.
7.6.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information The interface must be enabled to run the test or an error message is generated:

```
DelleMC# tdr-cable-test tengigabitethernet 11/1
% Error: Interface is disabled Te 11/1.
```

Syslog messages are generated when the link flaps during TDR tests.

Related Commands

- [show tdr](#) — display the results of the TDR test.

show tdr

Display the TDR test results.

Syntax	<code>show tdr interface</code>	
Parameters	<i>interface</i>	Enter the keyword <code>TenGigabitEthernet</code> then the slot/port information for the 10G Ethernet interface.

Defaults None

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.9(0.0)	Introduced on the C9010.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7.0.0	Introduced on the S5000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
6.1.1.0	Introduced.

Usage Information If the TDR test has not been run, an error message is generated:

```
%Error: Please run the TDR test first
```

The following describes the TDR test status.

Status	Definition
OK Status: Terminated	TDR test is complete, no fault is detected on the cable, and the test is terminated.
Length: 92 (+/- 1) meters, Status: Shorted	A short is detected on the cable. The location, in this Example is 92 meters. The short is accurate to plus or minus one meter.
Length: 93 (+/- 1) meters, Status: Open	An opening is detected on the cable. The location, in this Example is 93 meters. The open is accurate to plus or minus one meter.
Status: Impedance Mismatch	There is an impedance mismatch in the cables.

Example

```
DelleMC# show tdr tengigabitethernet 11/2
Time since last test: 00:00:11
  Pair A, Length: OK Status: Terminated
  Pair B, Length: OK Status: Terminated
  Pair C, Length: OK Status: Terminated
  Pair D, Length: OK Status: Terminated
```

Related Commands

- [tdr-cable-test](#) — run the TDR test.

UDP Broadcast Commands

The user datagram protocol (UDP) broadcast feature is a software-based method to forward low throughput (not to exceed 200 pps) IP/UDP broadcast traffic arriving on a physical or VLAN interface.

Important Points to Remember

- This feature is available only on the S4810, S4820T, S3048-ON, S4048-ON, Z9000 platforms.
- Routing information protocol (RIP) is not supported with the UDP Broadcast feature.
- If you configure this feature on an interface using the `ip udp-helper udp-port` command, the `ip directed-broadcast` command becomes ineffective on that interface.
- The existing `show interface` command has been modified to display the configured broadcast address.

debug ip udp-helper

Enable UDP debug and display the debug information on a console.

Syntax `debug ip udp-helper`
To disable debug information, use the `no debug ip udp-helper` command.

Defaults Debug disabled.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
Pre-version 8.3.7.0	Introduced on the E-Series.

Example

```
DellEMC# debug ip udp-helper
UDP helper debugging is on

01:20:22: Pkt rcvd on Gi 3/0 with IP DA (0xffffffff) will be sent on Gi
5/1 Gi 5/2
Vlan 3

01:44:54: Pkt rcvd on Gi 4/0 is handed over for DHCP processing.
```

```
DellEMC# debug ip udp-helper
UDP helper debugging is on

01:20:22: Pkt rcvd on Te 3/0 with IP DA (0xffffffff) will be sent on Gi
5/1 Gi 5/2
Vlan 3

01:44:54: Pkt rcvd on Te 4/0 is handed over for DHCP processing.
```

- Related Commands**
- [ip udp-helper udp-port](#) — enable the UDP broadcast feature on an interface.
 - [show ip udp-helper](#) — display the configured UDP helper(s) on all interfaces.

ip udp-helper udp-port

Enable the UDP broadcast feature on an interface either for all UDP ports or a specified list of UDP ports.

Syntax	<code>ip udp-helper udp-port [udp-port-list]</code> To disable the UDP broadcast on a port, use the <code>no ip udp-helper udp-port [udp-port-list]</code> command.
Parameters	udp-port-list (OPTIONAL) Enter up to 16 comma-separated UDP port numbers.  NOTE: If you do not use this option, all UDP ports are considered by default.
Defaults	None
Command Modes	INTERFACE (config-if)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
Pre-version 8.3.7.0	Introduced on the E-Series.

Usage Information

If you configure the `ip helper-address` command and `ip udp-helper udp-port` command, the behavior is that the UDP broadcast traffic with port numbers 67/68 is unicast relayed to the DHCP server per the `ip helper-address` configuration. This occurs regardless if the `ip udp-helper udp-port` command contains port numbers 67/68 or not.

If you only configure the `ip udp-helper udp-port` command, all the UDP broadcast traffic is flooded, including ports 67/68 traffic if those ports are part of the `udp-port-list`.

- Related Commands**
- [ip helper-address](#) — configure the destination broadcast or host address for the DHCP server.
 - [debug ip udp-helper](#) — enable debug and displays the debug information on a console.
 - [show ip udp-helper](#) — display the configured UDP helpers on all interfaces.

show ip udp-helper

Display the configured UDP helpers on all interfaces.

Syntax	<code>show ip udp-helper</code>
Defaults	None
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
Pre-version 8.3.7.0	Introduced on the E-Series.

Example

```
DellEMC# show ip udp-helper
-----
Port      UDP port list
-----
Te 10/2   656, 658
Te 10/3   All
```

Related Commands

- [debug ip udp-helper](#) — enable debug and displays the debug information on a console.
- [ip udp-helper udp-port](#) — enable the UDP broadcast feature on an interface either for all UDP ports or a specified list of UDP ports.

Fabric Services Commands

The following commands are supported for Fabric Services operation on the S5000.

Topics:

- `active-zoneset`
- `change fc-trace-level`
- `clear counters fibrechannel`
- `create fc-dump-support`
- `fc alias`
- `fc switch-mode fabric-services`
- `fc zone`
- `fc zoneset`
- `fcoe-map`
- `feature fc`
- `member — alias`
- `member — zone`
- `member — zoneset`
- `show fc alias`
- `show fc fabric`
- `show fc lsdbs`
- `show fc ns`
- `show fc route`
- `show fc switch`
- `show fc topology`
- `show fc-trace-level`
- `show fc zone`
- `show fc zoneset`

active-zoneset

Activate the zoneset.

S5000

Syntax `active-zoneset zoneset_name`

To change to the default zone behavior, use the `no active-zoneset zoneset_name` command.

Parameters **zoneset_name** Enter the zoneset name.

Command Modes FC FABRIC CONFIGURATION

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell(conf)# fcoe-map default_full_fabric
Dell(conf-fcoe-default_full_fabric)# fc-fabric
Dell(conf-fmap-default_full_fabric-fcfabric)# active-zoneset zs1
```

Related Commands [show fc zoneset](#) — displays the configured and active zoneset.

change fc-trace-level

For debugging purposes, change the FC trace level used to record FC information in the trace log.

S5000

Syntax `change fc-trace-level number`

Parameters *number* Trace level used to record FC information in the dump file. Range: 1 to 4, where:

- 0 turns FC traces off.
- 1 records FC error messages.
- 2 records FC warning messages.
- 3 records FC informational messages.
- 4 records all messages generated for FC operation on the switch.

Default: 4.

Defaults Trace level 4: All FC error messages on the switch are recorded in the FC dump file.

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information Use this command to specify the level of trace information to be included in the FC trace log. To display the trace log, enter the `show file fcmfs:/TRACE_LOG_FC/qstack_trace.log` command.

Example

```
Dell#change fc-trace-level 2
```

Related Commands [show fc-trace-level](#)— displays the currently configured FC trace level.

clear counters fibrechannel

Clear Fibre Channel statistics for an FC port.

S5000

Syntax `clear counters fibrechannel slot/port`

Parameters *slot/port* For *slot*, enter the stack-unit number assigned to the switch. The range of *slot* (stack-unit) numbers is 0 to 11. The range of *port* numbers is 0 to 47.

Defaults None

Command Modes CONFIGURATION

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information

Use the `clear counters fibrechannel` command to clear the statistics (counters) displayed in `show interfaces fibrechannel` command output for a specified FC port.

Example

```
Dell(conf)#clear counters fibrechannel 0/11
Clear counters on Fc 0/11 [confirm] yes
```

Related Commands

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch.
[show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

create fc-dump-support

Perform a dump of information on S5000 Fibre Channel operation.

S5000

Syntax `create fc-dump-support`

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information Use this command to perform a dump of S5000 Fibre Channel operation and store the FC dump file in `flash:/CORE_DUMP_DIR`. Syslog messages are generated at the start and end of the FC dump file creation.

Example

```
Dell#create fc-dump-support
```

fc alias

Create a zone alias name.

S5000

Syntax `fc alias ZoneAliasName`

To delete a zone alias name, use the `no fc zone ZoneAliasName` command.

Parameters **ZoneAliasName** Enter the zone alias name.

Command Modes CONFIGURATION

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell(conf)#fc alias za1
Dell(conf-fc-alias-za1)#
```

Related Commands

[show fc alias](#) — displays the configured alias.

fc switch-mode fabric-services

Change the switch mode from NPIV Gateway (NPG) mode to Fabric-Services mode.

S5000

Syntax	<code>fc switch-mode fabric-services</code> To change from Fiber Channel Forwarder (FCF) mode to Fabric-Services mode, use the <code>no feature fc</code> command. To change from FCF to NPG mode, use the <code>no feature fc</code> command and then the <code>feature fc</code> command
Parameters	fabric-services Enter the keywords <code>fabric-services</code> to configure fabric services mode.
Defaults	Disabled
Command Modes	CONFIGURATION
Command History	Version 9.1(1.0) Introduced on the S5000.
Usage Information	<p>All Fabric-Services mode CLI commands are enabled after changing to Fabric-Services mode.</p> <p>When you run the <code>fc switch-mode fabric-services</code> command, the following warning message displays:</p> <ul style="list-style-type: none">Warning!!!: Switch mode in running-config will be changed to 'fabric-services' :Continue? [yes/no]:<ul style="list-style-type: none">no – No effect on the running-config.yes – Changes the running-config to reflect the new switch-mode. <p>If an <code>fcoe-map</code> exists, the following warning message displays:</p> <ul style="list-style-type: none">Warning!!!: Existing fabric configuration detected, proceeding to REBOOT switch :Continue? [yes/no]:<ul style="list-style-type: none">no – Does not reboot the switch.yes – Reboots the switch and prompts the user to save the running config. <p>If no <code>fcoe-map</code> exists, the switch-mode moves to the newly configured switch-mode without any warning messages.</p>
Example	<pre>Dell(conf)# fc switch-mode fabric-services</pre>
Related Commands	show fc switch — displays FC switch parameters.

fc zone

Create a zone.

S5000

Syntax	<code>fc zone zonename</code> To delete a zone, use the <code>no fc zone zonename</code> command.
Parameters	zonename Enter the zone name.
Command Modes	CONFIGURATION

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell(conf)# fc zone z1
Dell(conf-fc-zone-z1)#
```

Related Commands

[show fc zone](#) — displays the configured zone.
[show fcoe-map](#) — displays the fabric parameters.

fc zoneset

Create a zoneset.

S5000

Syntax `fc zoneset zoneset_name`

To delete a zoneset, use the `no fc zoneset zoneset_name` command.

Parameters ***zoneset_name*** Enter the zoneset name.

Command Modes CONFIGURATION

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell(conf)# fc zoneset zs1
Dell(conf-fc-zoneset-zs1)#
```

Related Commands

[show fc zoneset](#) — displays the configured and active zoneset.
[show fcoe-map](#) — displays the fabric parameters.

fcoe-map

Create an FCoE map which contains the parameters used to configure the links between server CNAs and a SAN fabric. Apply the FCoE map on a server-facing Ethernet port.

S5000

Syntax `fcoe-map map-name`

Parameters ***map-name*** Maximum: 32 alphanumeric characters.

Defaults None

Command Modes CONFIGURATION
INTERFACE

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information

An FCoE map is a template used to map FCoE and FC parameters in a converged fabric. An FCoE map is used to virtualize upstream FC ports on an S5000 NPIV proxy gateway so that they appear to downstream server CNA ports as FCoE forwarder (FCF) ports on an FCoE network. When applied to FC

and Ethernet ports on an NPIV proxy gateway, an FCoE map allows the switch to operate as an FCoE-FC bridge between an FC SAN and an FCoE network by providing FCoE-enabled servers and switches with the necessary parameters to log in to a SAN fabric.

On an S5000 NPIV proxy gateway, an FCoE map is applied on fabric-facing FC ports and server-facing Ethernet ports. Use the `fcoe-map` command to apply an FCoE map on an Ethernet port. Use the `fabric` command to apply an FCoE map on an FC port.

An FCoE map consists of the following parameters: the dedicated FCoE VLAN used for storage traffic, the destination SAN fabric (FC-MAP value), FCF priority used by a server, and the FIP keepalive (FKA) advertisement timeout.

In each FCoE map, the fabric ID, FC-MAP value, and FCoE VLAN parameters must be unique. Use one FCoE map to access one SAN fabric. You cannot use the same FCoE map to access different fabrics.

To remove an FCoE map from an Ethernet interface, enter the `no fcoe-map map-name` command in Interface configuration mode.

Related Commands

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch.

[show fcoe-map](#) — displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

feature fc

Enable Fibre Channel capability on the S5000.

S5000

Syntax `feature fc`

Defaults The S5000 is not enabled to operate in Fibre Channel mode.

Command Modes CONFIGURATION

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information Use this command to configure the S5000 to interoperate with Fibre Channel devices in SAN fabrics. Enter the `no feature fc` command to disable the Fibre Channel command-line interface and free memory resources allocated to Fibre Channel operation.

Example

```
Dell(conf)#feature fc
```

Related Commands

[show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

member — alias

Add devices to an alias.

S5000

Syntax `member name`

To remove devices from the alias, use the `no member name` command

Parameters **name** Enter the WWPN, port ID, or domain/port.

Command Modes ALIAS CONFIGURATION

Command History

Version 9.1(1.0) Introduced on the S5000.

Example

```
Dell(conf)# fc alias alias1
Dell(conf-fc-alias-alias1)#member 30:11:11:02:0a:10:01:02
Dell(conf-fc-alias-alias1)#
```

Related Commands

[show fc zoneset](#) — displays the configured and active zoneset.

[show fc zone](#) — displays the configured zone.

member — zone

Add devices to a zone.

S5000

Syntax

`member name`

To remove devices from the zone, use the `no member name` command

Parameters

name Enter the WWPN, FC-ID, or Alias name.

Command Modes ZONE CONFIGURATION

Command History

Version 9.1(1.0) Introduced on the S5000.

Example

```
Dell(conf)# fc zone z1
Dell(conf-fc-zone-z1)# member 11:11:11:11:11:11:11:11
```

Related Commands

[show fc zone](#) — displays the configured zone.

[show fc zoneset](#) — displays the configured and active zoneset.

member — zoneset

Add zones into a zoneset.

S5000

Syntax

`member zonename`

To remove zones from the zoneset, use the `no member zonename` command

Parameters

zonename Enter the zone name.

Command Modes ZONESET CONFIGURATION

Command History

Version 9.1(1.0) Introduced on the S5000.

Example

```
Dell(conf)# fc zoneset zs1
Dell(conf-fc-zoneset-zs1)# member z1
```

Related Commands

[show fc zoneset](#) — displays the configured and active zoneset.

show fc alias

Display the configured alias.

S5000

- Syntax** `show fc alias [ZoneAliasName]`
- Parameters** **ZoneAliasName** Enter the zone alias name to display the details.
- Command Modes**
- EXEC
 - EXEC Privilege
- Command History**
- Version 9.1(1.0)** Introduced on the S5000.
- Example**

```
Dell#show fc alias

Zone Alias Name      all
0x030303

Dell#
```

Related Commands [fc alias](#) — creates a zone alias name.

show fc fabric

Display information of all the switches in the fabric.

S5000

- Syntax** `show fc fabric`
- Parameters** None
- Command Modes**
- EXEC
 - EXEC Privilege
- Command History**
- Version 9.1(1.0)** Introduced on the S5000.
- Example**

```
Dell#show fc fabric
Number of FC Switches = 2
Domain Id    Switch WWN                Switch Name  Mgmt IP addr
  1*         10:00:5c:f9:dd:ef:0a:00    Sonoma      127.10.11.11
  2          10:00:5c:f9:dd:ef:0a:80    Sonoma      127.10.11.11
Dell#
```

Related Commands [fc switch-mode fabric-services](#) — change the switch mode from NPIV Gateway (NPG) mode to fabric-services mode.

show fc lsdb

Display link state database information on the switch.

S5000

Syntax show fc lsdb

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show fc lsdb
Total number of Link State Data Base Entries = 3
Switch Name 10:00:5c:f9:dd:ef:0a:00
DomainId 1
Switch Port 1
Hops 1
Cost 125
Age 2
LinkCount 2
NeighborID 3
LocalPort 3
RemotePort 1
LinkCost 250
NeighborID 2
LocalPort 1
RemotePort 1
LinkCost 125
Switch Name 10:00:5c:f9:dd:ef:0a:80
DomainId 2
Switch Port N/A
Hops N/A
Cost N/A
Age N/A
LinkCount 2
NeighborID 1
LocalPort 1
RemotePort 1
LinkCost 125
NeighborID 3
LocalPort 3
RemotePort 3
LinkCost 125
Switch Name 10:00:5c:f9:dd:ef:16:80
DomainId 3
Switch Port 3
Hops 1
Cost 125
Age 1
LinkCount 2
NeighborID 1
LocalPort 1
RemotePort 3
LinkCost 250
NeighborID 2
LocalPort 3
RemotePort 3
LinkCost 125
Dell#
```

show fc ns

Display the devices in the name server database.

S5000

Syntax show fc ns { switch | fabric } [brief]

- Parameters**
- switch** Enter the keyword `switch` to display all the devices in the name server database of the switch.
 - fabric** Enter the keyword `fabric` to display all the devices in the name server database of the fabric.
 - brief** Enter the keyword `brief` to display in brief devices in the name server database.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show fc ns switch
Total number of devices = 1
Switch Name                10:00:5c:f9:dd:ef:0a:00
Domain Id                   1
Switch Port                 53
Port Id                     01:35:00
Port Name                   10:00:8c:7c:ff:17:f8:01
Node Name                   20:00:8c:7c:ff:17:f8:01
Class of Service           8
IP Address
Symbolic Port Name         Brocade-1860 | 3.0.3.0 | DV-SP-SERVER2 |
|
Symbolic Node Name         (NULL)
Port Type                  Node port
Registered with NameServer Yes
Registered for SCN         Yes
Display of local name server entries - brief version
Dell#

Dell#show fc ns switch brief
Total number of devices = 1
Intf#   Domain   FC-ID           Enode-WWPN
Enode-WWNN
53      1         01:35:00       10:00:8c:7c:ff:17:f8:01
20:00:8c:7c:ff:17:f8:01
Dell#

Dell#show fc ns fabric
Total number of devices = 3
Switch Name                10:00:5c:f9:dd:ef:0a:80
Domain Id                   2
Switch Port                 9
Port Id                     02:09:00
Port Name                   32:11:0e:fc:00:00:00:88
Node Name                   22:11:0e:fc:00:00:00:88
Class of Service           8
IP Address
Symbolic Port Name         (NULL)
Symbolic Node Name         (NULL)
Port Type                  Node port
Registered with NameServer No
Registered for SCN         No
Switch Name                10:00:5c:f9:dd:ef:0a:80
```

```

Domain Id 2
Switch Port 11
Port Id 02:0b:00
Port Name 31:11:0e:fc:00:00:00:77
Node Name 21:11:0e:fc:00:00:00:77
Class of Service 8
IP Address
Symbolic Port Name (NULL)
Symbolic Node Name (NULL)
Port Type Node port
Registered with NameServer No
Registered for SCN No
Switch Name 10:00:5c:f9:dd:ef:0a:00
Domain Id 1
Switch Port 53
Port Id 01:35:00
Port Name 10:00:8c:7c:ff:17:f8:01
Node Name 20:00:8c:7c:ff:17:f8:01
Class of Service 8
IP Address
Symbolic Port Name Brocade-1860 | 3.0.3.0 | DV-SP-SERVER2 |
|
Symbolic Node Name (NULL)
Port Type Node port
Registered with NameServer Yes
Registered for SCN Yes
Dell#

Dell#show fc ns fabric brief
Total number of devices = 2
Intf# Domain FC-ID Enode-WWPN
Enode-WWNN
9 2 02:09:00 32:11:0e:fc:00:00:00:88
22:11:0e:fc:00:00:00:88
11 2 02:0b:00 31:11:0e:fc:00:00:00:77
21:11:0e:fc:00:00:00:77
Dell#

```

show fc route

Display the fc route table on the switch.

S5000

Syntax show fc route

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```

Dell#show fc route
Domain Id 2

=====
Source                FCF-Bridge                Destination
=====
Te 0/18                5c:f9:dd:ef:1e:03         Fc 0/11
Te 0/19                5c:f9:dd:ef:1e:04         Fc 0/11

```

```
=====
Dell#
```

show fc switch

Display the switch configuration for Fibre Channel capability.

S5000

Syntax `show fc switch`

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The following table describes the `show fc switch` output shown in the following example.

Switch Mode	Fibre Channel mode of operation of an S5000 switch. Default: NPG (configured as an NPIV proxy gateway).
Switch WWN	Factory-assigned worldwide node (WWN) name of the S5000. The S5000 WWN name is not user-configurable.

Example

```
Dell# show fc switch
Switch Mode : Fabric-Services
Switch WWN  : 10:00:5c:f9:dd:ef:24:40
Dell#
```

Related Commands

[fc switch-mode fabric-services](#) — changes the switch mode from NPIV Gateway (NPG) mode to fabric-services mode.

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch.

[show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

show fc topology

Display topology information of the local port and the connected port.

S5000

Syntax `show fc topology`

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show fc topology
Local Port Info
```

```
-----  
Port FC 0/1  
Port WWN 20:01:5c:f9:dd:ef:24:40  
Port Type E  
  
Remote Link Information  
-----  
  
Port Type E  
Domain Id 01  
Port Name 20:03:5c:f9:dd:ef:1b:80  
Node Name 10:00:5c:f9:dd:ef:1b:80  
  
Dell#
```

show fc-trace-level

Display the currently configured FC trace level.

S5000

Syntax `show fc-trace-level`

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information Use the `show fc-trace-level` command to display the current trace level used to record FC information in the FC trace file, where:

- 0: FC traces are turned off.
- 1: FC error messages are recorded.
- 2: FC warning messages are recorded.
- 3: FC informational messages are recorded.
- 4: All messages generated for FC operation on the switch are recorded.

To set the FC trace level, use the `change fc-trace-level` command.

Example

```
Dell#show fc-trace-level  
FC Trace Level = 4 (All)  
Dell#
```

Related Commands [change fc-trace-level](#)— changes the FC trace level used to record FC information in the trace log.

show fc zone

Display the configured zone.

S5000

Syntax `show fc zone [zonename]`

Parameters **zonename** Enter the zone name to display the details.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show fc zone

ZoneName                               ZoneMember
=====
brcd_sanb                               brcd_cna1_wwpn1
                                         sanb_p2tgt1_wwpn

Dell#
```

- Related Commands**
- [fc zone](#) — creates a zone.
 - [member - alias](#) — adds devices to an alias.
 - [member - zone](#) — adds devices to a zone.

show fc zoneset

Display the configured and active zoneset.

S5000

Syntax show fc zoneset [*zoneset_name* | active | merged]

- Parameters**
- zoneset_name** Enter the zoneset name to display the zoneset name
 - active** Enter the keyword active to display the active zonesets.
 - merged** Enter the keyword merged to display the merge active zones.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show fc zoneset

ZoneSetName      ZoneName      ZoneMember
=====
fcoe_srv_fc_tgt      brcd_sanb      brcd_cna1_wwpn1
                                         sanb_p2tgt1_wwpn

Active Zoneset: fcoe_srv_fc_tgt

ZoneName                               ZoneMember
=====
brcd_sanb                               10:00:8c:7c:ff:21:5f:8d
                                         20:02:00:11:0d:03:00:00

Dell#
```

```

Dell#show fc zoneset active

Active Zoneset: fcoe_srv_fc_tgt

ZoneName                               ZoneMember
=====
brcd_sanb                               10:00:8c:7c:ff:21:5f:8d
                                           20:02:00:11:0d:03:00:00
Dell#

```

**Related
Commands**

- [fc zone](#) — creates a zone.
- [fc zoneset](#) — creates a zoneset.
- [active-zoneset](#) — activates the zoneset.
- [member - alias](#) — adds devices to an alias.
- [member - zone](#) — adds devices to a zone.
- [member - zoneset](#) — adds zones into a zoneset.

Fibre Channel Interface Commands

The following commands are supported for Fibre Channel operation on the S5000.

Topics:

- [fabric](#)
- [fc ping](#)
- [interface fibrechannel](#)
- [show interfaces fibrechannel](#)
- [speed](#)
- [Passthrough Commands](#)
- [show stack-unit port-group portmode](#)
- [stack-unit port-group portmode](#)

fabric

Configure the SAN fabric to which a Fibre Channel port connects.

S5000

Syntax	<code>fabric <i>fcoe-map</i></code>
Parameters	<i>fcoe-map</i> Enter the name of the FCoE map which contains the FCoE/FC fabric to which the Fibre Channel port connects.
Defaults	None
Command Modes	INTERFACE FIBRE_CHANNEL
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	Use the <code>fcoe-map</code> command to bind an FC port to an FC-FCOE fabric. When a Fibre Channel port operates in N mode, the principal switch in the fabric provides the FCoE Forwarder (FCF) attributes, such as MAC address, FIP priority, and FIP keepalive timeout. To removed the configured FCoE map, enter the <code>no fabric</code> command.
Example	<pre>Dell(conf)#interface fibrechannel 0/11 Dell(conf-if-fc-0/11)#fabric SAN_FABRIC_A</pre>
Related Commands	interface fibrechannel — configures a Fibre Channel interface on the switch. show interfaces fibrechannel — displays the configuration of a Fibre Channel interface.

fc ping

Sends FC ping packets to target.

Syntax `fc ping wwn [count | timeout]`

Parameters	count <1–10>	Enter the number of key request to send. The range is from 1 to 10.
Defaults	timeout is 5 count is 4	
Command Modes	INTERFACE FIBRE_CHANNEL	
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.	
	Version	Description
	E9.1.1	Introduced on the S5000.

interface fibrechannel

Configure a Fibre Channel (FC) interface on the switch.

S5000

Syntax	<code>interface fibrechannel slot/port</code>	
Parameters	slot/port	For <i>slot</i> , enter the stack-unit number assigned to the switch. The range of <i>slot</i> (stack-unit) numbers is from 0 to 11. The range of <i>port</i> numbers is from 0 to 47.  NOTE: In release 9.0.(1.3), an FC module can be installed only in expansion slot 0 (ports 0 to 11) on an S5000 switch.
Defaults	By default, a Fibre Channel port is shut down, configured to operate at autosensing speed in N port mode, and to receive Fibre Channel Forwarder (FCF) attributes, such as MAC address, FIP priority, and FC keepalive values, from the principal fabric switch. By default, the stack-unit number of a standalone S5000 switch is 0. FC ports are configured by default to operate in N port mode to connect to an F port on an FC switch in a fabric.	
Command Modes	CONFIGURATION	
Command History	Version 9.0(1.3)	Introduced on the S5000.
Usage Information	You can configure a Fibre Channel port to operate at 2G, 4G, or 8G FC speed. By default, Fibre Channel interfaces are disabled (<code>shutdown</code>). When you bring up a Fibre Channel port (<code>no shutdown</code>), the Fibre Channel link with a fabric is brought up and the port logs in to a peer switch in the fabric. When a Fibre Channel port is configured to operate as an NPIV proxy gateway: <ul style="list-style-type: none"> • When you shut down the port (<code>shutdown</code>), all FCoE virtual links associated with the port are removed. • When you bring up the port (<code>no shutdown</code>), the Fibre Channel link with a fabric is brought up, the FC port logs in to the principal switch, and the fabric starts sending FIP multicast advertisements over downstream 10GbE Ethernet ports. The worldwide name (WWN) received from the principal switch is used as the fabric name in FIP multicast advertisements. You can apply only one FCoE map on an FC port. When you apply an FCoE map on a fabric-facing FC port, the FC port becomes part of the FCoE fabric, whose settings in the FCoE map are configured on the port and exported to downstream server CNA ports. When you enable a fabric-facing FC port, the FCoE map applied on the port starts sending FIP multicast advertisements using the parameters in the	

FCoE map over server-facing Ethernet ports. A server sees the FC port with its applied FCoE map as an FCF port.

Example

```
Dell(conf)#interface fibrechannel 3/0
Dell(conf-if-fc-3/0)#exit#
```

Related Commands

[show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

show interfaces fibrechannel

Display the configuration of a Fibre Channel interface.

S5000

Syntax

```
show interfaces fibrechannel type slot/port
```

Parameters

fibrechannel Enter the keyword `FibreChannel` then the slot/port numbers. Valid slot numbers are from 0 to 11. The port range is from 0 to 47.
slot/port

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

Use the `show interfaces fibrechannel` command to display the current configuration and operation of a Fibre Channel port on the S5000.

NOTE: In release 9.0.(1.3), an FC module can be installed only in expansion slot 0 (ports 0 to 11) on an S5000 switch.

The following table describes the `show interfaces fibrechannel` command output shown in the following example.

Table 2. Output Fields for the show interfaces fibrechannel Command

Field	Description
Information:	
Fibrechannel 0/0 is down, FC link is down	Administrative state of the Fibre Channel interface (up/enabled or down/shutdown) and operational state of the FC link (up or down)
Pluggable media present, SFP+ type	Pluggable optic is inserted in the port or not, and the SFP+ optic type
Wavelength	Wavelength of the inserted optic
SFP+ receive power	Power received on SFP+ optic
Interface index	Index number of FC port.

Table 2. Output Fields for the show interfaces fibrechannel Command (continued)

Field	Description
MTU	Maximum transmission unit on interface (not user-configurable; fixed at 2148 bytes)
LinkSpeed	Configured transmission speed. Valid link speeds are: auto speed of the FC port (port autosenses speed of when the port link is down peer FC port), 2G, 4G, or 8G. or current speed when the port link is up
Port type, Max BB credits	The FC port type is fixed. The maximum number of buffer-to-buffer (BB) credits available is fixed at 16.
WWN, FC-ID	Factory-provided world-wide name (WWN) of FC port (in hexadecimal) that uniquely identifies the port on the switch (not user-configurable) and the unique FC port ID (24-bit in hexadecimal) received from an FC switch in the fabric after a successful login
Last clearing of "show interface" counters	Elapsed time since the interface counters displayed in show interfaces output were last cleared
Statistics:	
BBCR_FrameFailures	Number of link resets due to frames lost during buffer-to-buffer credit recovery (BBCR) period
BBCR_RRDYFrameFailures	Number of link resets due to multiple Receiver Ready (R_RDY) frames received during the credit recovery period
Class2FramesIn	Number of Class 2 frames received
Class2FramesOut	Number of Class 2 frames transmitted
Class3FramesIn	Number of Class 3 frames received
Class3FramesOut	Number of Class 3 frames transmitted
Class3Discards	Number of Class 3 frames dropped
DecodeErrors	Number of decode errors.

Table 2. Output Fields for the show interfaces fibrechannel Command (continued)

Field	Description
FBusy	Number of Fabric port. Busy (F_BSY) frames received
FReject	Number of Fabric port. Reject (F_RJT) frames received
AddressErrors	Number of frame-address. ID errors
LinkFailures	Number of link failures.
InvalidCRC	Number of cyclic redundancy check (CRC) errors
TotalRxBytes	Number of bytes received.
TotalTxBytes	Number of bytes. transmitted
LongFramesIn	Number of long frames. received
LossOfSync	Number of loss of. synchronization errors
ShortFramesIn	Number of truncated. frames received
RxLinkResets	Number of link resets on. received frames
TxLinkResets	Number of link resets on. transmitted frames
TotalLinkResets	Total number of link resets.
TotalRxFrames	Total number of frames. received
TotalTxFrames	Total number of frames. transmitted
RxOfflineSequences	Number of offline. sequences received
TxOfflineSequences	Number of offline. sequences transmitted
TotalOfflineSequences	Total number of offline. sequences
Rate Information:	
Input bytes/sec, frames/sec, % of line-rate	Incoming rate of FC traffic. in bytes per second, frames per second, and percentage of the total line rate

Table 2. Output Fields for the show interfaces fibrechannel Command (continued)

Field	Description
Output bytes/sec, frames/sec, % of line-rate	Outgoing rate of FC. traffic in bytes per second, frames per second, and percentage of the total line rate
Time since last interface status change	Elapsed time since the operational status of the interface last changed

Example

```
Dell#show interfaces fibreChannel 0/5
FibreChannel 0/5 is up, FC link is up
Pluggable media present, FC-SFP+ type is FC-8GBPS-SR
  Wavelength is 850nm
  SFP+ receive power reading is -2.9362dBm
Interface index is 35030024
MTU 2148 bytes
LineSpeed 8000 Mbit
Port type is F, Max BB Credits is 16
WWN is 20:05:5c:f9:dd:ef:0b:80, FC-ID is 010500
Last clearing of "show interface" counters 03:04:47
Statistics:
  BBCR_FrameFailures 0          TotalRxBytes 1540
  BBCR_RRDYFailures 0          TotalTxBytes 2072
  Class2FramesIn 0            LongFramesIn 0
  Class2FramesOut 0           LossOfSync 0
  Class3FramesIn 13           ShortFramesIn 0
  Class3FramesOut 14          RxLinkResets 0
  Class3Discard 0             TxLinkResets 1
  DecodeErrors 0              TotalLinkResets 1
  FReject 0                   TotalRxFrames 13
  FBusy 0                     TotalTxFrames 14
  AddressErrors 0             RxOfflineSeq 1
  LinkFailures 0              TxOfflineSeq 3
  InvalidCRC 0                TotalOfflineSeq 4
Rate info:
  Input 0 bytes/sec, 0 frames/sec, 0.00% of line-rate
  Output 0 bytes/sec, 0 frames/sec, 0.00% of line-rate
Time since last interface status change: 03:00:35
```

Related Commands

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch.

speed

Set the speed of a Fibre Channel port or configure the port to auto-negotiate its speed with a peer.

S5000

Syntax

```
speed {auto | 2G | 4G | 8G}
```

Parameters

- auto** The port autosenses the speed of a peer FC port .
- 2G** Port speed is 2 gigabits per second (Gbps).
- 4G** Port speed is 4 Gbps.
- 8G** Port speed is 8 Gbps.

Defaults An FC port autosenses the speed of a peer FC port.

Command Modes INTERFACE FIBRE_CHANNEL

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information When an FC port autosenses the speed of a peer FC port, it auto-negotiates to determine its speed. To removed the configured port speed, enter the `no speed {2G | 4G | 8G}` command.

Example

```
Dell(conf)#interface fibrechannel 0/11
Dell(conf-if- fc-0/11)#speed 8g
```

Related Commands

- [interface fibrechannel](#) — configures a Fibre Channel interface on the switch.
- [show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

Passthrough Commands

The following are passthrough commands supported on the S5000.

show stack-unit port-group portmode

Display the fibre channel port-group mode information.

S5000

Syntax `show system stack-unit unit-number port-group portmode`

Parameters **stack-unit *unit-number*** Enter the keywords `stack-unit` then the unit number. The range is from 0 to 11.

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell#show system stack-unit 0 port-group portmode
PortGroupId      Ports          Mode(Curr Boot) Mode(Next Boot)
0                0,1           FC              FC
1                2,3           FC              FC
2                4,5           ETH             FC
3                6,7           FC              ETH
4                8,9           FC              FC
5                10,11        FC              FC
Dell#
```

Related Commands [stack-unit port-group portmode](#) — configures a fibre channel port group to enable passthrough ethernet mode.

stack-unit port-group portmode

Configure a fibre channel port group to enable passthrough ethernet mode.

S5000

Syntax `stack-unit unit-number port-group number portmode ethernet`
To change to Fibre Channel mode, use the `no stack-unit unit-number port-group number portmode ethernet` command.

Parameters

stack-unit <i>unit-number</i>	Enter the keywords <code>stack-unit</code> then the unit number. The range is from 0 to 11.
port-group <i>number</i>	Enter the keywords <code>port-group</code> then the number of the port-group. The range is from 0 to 5.
portmode	Enter the keyword <code>portmode</code> then the keyword <code>ethernet</code> to enable Ethernet mode.

Command Modes CONFIGURATION

Command History **Version 9.1(1.0)** Introduced on the S5000.

Example

```
Dell(conf)#stack-unit 0 port-group 0 portmode ethernet
Changing port mode on slot 0 port-group 0 will make interface configs of
0 and 1 obsolete after a save and reload.
[confirm yes/no]:yes
Please save and reload for the changes to take effect.
Dell(conf)#
```

Related Commands [show stack-unit port-group portmode](#) — displays the fibre channel port-group mode information.

Internet Protocol Security (IPSec)

Internet protocol security (IPSec) is an end-to-end security scheme for securing IP communications by authenticating and encrypting all packets in a session. Use IPSec between hosts, gateways, or hosts and gateways.

IPSec uses a series of protocol functions to achieve information security:

- **Authentication Headers (AH)** — Connectionless integrity and origin authentication for IP packets.
- **Encapsulating Security Payloads (ESP)** — Confidentiality, authentication, and data integrity for IP packets.
- **Security Associations (SA)** — Algorithm-provided parameters required for AH and ESP protocols.

IPSec capability is available on control (protocol) and management traffic; end-node support is required.

IPSec supports two operational modes: Transport and Tunnel.

- Transport is the default mode for IPSec and encrypts only the payload of the packet. Routing information is unchanged.
- Tunnel mode is used to encrypt the entire packet, including the routing information in the IP header. Tunnel mode is typically used in creating virtual private networks (VPNs).

Transport mode provides IP packet payload protection using ESP. You can use ESP alone or in combination with AH to provide additional authentication. AH protects data from modification but does not provide confidentiality.

SA is the configuration information that specifies the type of security provided to the IPSec flow. The SA is a set of algorithms and keys used to authenticate and encrypt the traffic flow. The AH and ESP use SA to provide traffic protection for the IPSec flow.

NOTE:

The Dell EMC Networking OS supports IPSec only for FTP and telnet protocols (ports 20, 21, and 23). The system rejects if you configure IPSec for other protocols.

Topics:

- [crypto ipsec transform-set](#)
- [crypto ipsec policy](#)
- [management crypto-policy](#)
- [match](#)
- [session-key](#)
- [show crypto ipsec transform-set](#)
- [show crypto ipsec policy](#)
- [transform-set](#)

crypto ipsec transform-set

Create a transform set, or combination of security algorithms and protocols, of cryptos.

Syntax

```
crypto ipsec transform-set name {ah-authentication {md5|sha1|null} | esp-
authentication {md5|sha1|null} | esp-encryption {3des|cbc|des|null}}
```

To delete a transform set, use the `no crypto ipsec transform-set name {ah-authentication {md5|sha1|null} | esp-authentication {md5|sha1|null} | esp-encryption {3des|cbc|des|null}}` command.

Parameters

<i>name</i>	Enter the name for the transform set.
ah-authentication	Enter the keywords <code>ah-authentication</code> then the transform type of operation to apply to traffic. The transform type represents the encryption or authentication applied to traffic.

- md5 — Use Message Digest 5 (MD5) authentication.
- sha1 — Use Secure Hash Algorithm 1 (SHA-1) authentication.
- null — Causes an encryption policy configured for the area to not be inherited on the interface.

esp-authentication

Enter the keywords `esp-authentication` then the transform type of operation to apply to traffic. The transform type represents the encryption or authentication applied to traffic.

- md5 — Use Message Digest 5 (MD5) authentication.
- sha1 — Use Secure Hash Algorithm 1 (SHA-1) authentication.
- null — Causes an encryption policy configured for the area to not be inherited on the interface.

esp-encryption

Enter the keywords `esp-encryption` then the transform type of operation to apply to traffic. The transform type represents the encryption or authentication applied to traffic.

- 3des — Use 3DES encryption.
- cbc — Use CDC encryption.
- des — Use DES encryption.
- null — Causes an encryption policy configured for the area to not be inherited on the interface.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

- Usage Information**
- Both sides of the link must specify the same transform set.
 - You can create up to 64 transform sets.

Example

```
Dell(conf)# do show crypto ipsec transform-set

Transform-Set Name      : ts1
Transform-Set refCnt    : 0
AH Transform            : md5
ESP Auth Transform     :
ESP Encry Transform    :

Dell(conf)#
```

crypto ipsec policy

Create a crypto policy used by ipsec.

Syntax `crypto ipsec policy name seq-num ipsec-manual`

To delete a crypto policy entry, use the `no crypto ipsec policy name seq-num ipsec-manual` command.

Parameters	<p><i>name</i> Enter the name for the crypto policy set.</p> <p><i>seq-num</i> Enter the sequence number assigned to the crypto policy entry.</p>										
Defaults	None										
Command Modes	CONFIGURATION										
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .										
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.2(0.2)</td> <td>Introduced on the Z9000, S4810, and S4820T.</td> </tr> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> </tbody> </table>	Version	Description	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.	9.2(1.0)	Introduced on the Z9500.
Version	Description										
9.8(0.0P5)	Introduced on the S4048-ON.										
9.8(0.0P2)	Introduced on the S3048-ON.										
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.										
9.2(1.0)	Introduced on the Z9500.										
Usage Information	This command creates a crypto policy entry and enters the crypto policy configuration mode for configuring the flow parameters.										
Example	<pre>Dell(conf)# crypto ipsec policy West 10 ipsec-manual Dell(conf-crypto-policy)#</pre>										

management crypto-policy

Apply the crypto policy to management traffic.

Syntax	<p><code>management crypto-policy name</code></p> <p>To remove the management traffic crypto policy, use the <code>no management crypto-policy name</code> command.</p>										
Parameters	<p><i>name</i> Enter the name for the crypto policy..</p>										
Defaults	None										
Command Modes	CONFIGURATION										
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .										
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.2(0.2)</td> <td>Introduced on the Z9000, S4810, and S4820T.</td> </tr> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> </tbody> </table>	Version	Description	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.	9.2(1.0)	Introduced on the Z9500.
Version	Description										
9.8(0.0P5)	Introduced on the S4048-ON.										
9.8(0.0P2)	Introduced on the S3048-ON.										
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.										
9.2(1.0)	Introduced on the Z9500.										

match

Apply an match filter to the crypto policy.

Syntax `match seq-num tcp [sourceip address | ipv6 address {mask} {source-port number}] [destination ip address | ipv6 address {mask} {destination-port number}]`

To remove the match filter for the crypto map, use the `no match seq-num tcp [source ip address | ipv6 address {mask} {source-port number}] [destination ip address | ipv6 address {mask} {destination-port number}]` command.

Parameters

- seq-num** Enter the match command sequence number.
- sourceip-address / ipv6 address** Enter the keyword `source` then the IPv4 or IPv6 address for the source.
- mask** Enter the mask prefix length in /nn format.
- source-port number** Enter the source port number.
- destination-port number** Enter the destination port number.

Defaults None

Command Modes CONFIG-CRYPTO-POLICY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

Usage Information

- IPv4 addresses support only -/32 mask types.
- IPv6 addresses support only -/128 mask types.
- Configure match for bi-directional traffic for optimal routing.
- Only TCP is supported.

Example

```
match 0 tcp a::1 /128 0 a::2 /128 23
match 1 tcp a::1 /128 23 a::2 /128 0
match 2 tcp a::1 /128 0 a::2 /128 21
match 3 tcp a::1 /128 21 a::2 /128 0
match 4 tcp 1.1.1.1 /32 0 1.1.1.2 /32 23
match 5 tcp 1.1.1.1 /32 23 1.1.1.2 /32 0
match 6 tcp 1.1.1.1 /32 0 1.1.1.2 /32 21
match 7 tcp 1.1.1.1 /32 21 1.1.1.2 /32 0
```

session-key

Specify the session keys used in the crypto policy entry.

Syntax `session-key {inbound | outbound} {ah spi hex-key-string | esp spi encrypt hex-key-string auth hex-key-string}`

To delete the session key information from the crypto policy, use the `no session-key {inbound | outbound} {ah | esp}` command.

Parameters

name	Enter the name for the transform set.
inbound	Specify the inbound session key for IPSec.
outbound	Specify the outbound session key for IPSec.
ah	Use the AH protocol when you select the AH transform set in the crypto policy.
esp	Use the ESP protocol when you select the ESP transform set in the crypto policy.
spi	Enter the security parameter index number.
hex-key-string	Enter the session key in hex format (a string of 8, 16, or 20 bytes). For DES algorithms, specify at least 16 bytes per key. For SHA algorithms, specify at least 20 bytes per key.
encrypt	Indicates the ESP encryption transform set key string.
auth	Indicates the ESP authentication transform set key string.

Defaults None

Command Modes CONF-CRYPTO-POLICY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

Usage Information

- This command is only available in the ipsec-manual model.
- The key information entry is associated with the global method for enabling clear text or encrypted display in the running config.

show crypto ipsec transform-set

Display the transform set configuration.

Syntax `show crypto ipsec transform-set name`

Parameters **name** Enter the name of the transform set.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

Example

```
DellEMC# show crypto ipsec transform-set

Transform-Set Name      : dallas
Transform-Set refCnt    : 0
AH Transform            :
ESP Auth Transform     :
ESP Encry Transform    : 3des
DellEMC#
```

show crypto ipsec policy

Display the crypto policy configuration.

Syntax `show crypto ipsec policy`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

Example

```
DellEMC(conf-crypto-policy)# do show crypto ipsec policy

Policy name              : poll
Policy refcount          : 0
Sequence Num            : 1
SA Mode                  : IPSEC-MANUAL
Transform-Set Name      :
Peer IP Address         :
Inbound AH SPI          : 0
Inbound ESP Auth SPI   : 0
Inbound ESP Encry SPI  : 0
Inbound AH Key          : [0]::
Inbound ESP Auth Key   : [0]::
Inbound ESP Encry Key  : [0]::
Outbound AH SPI         : 0
Outbound ESP Auth SPI  : 0
Outbound ESP Encry SPI : 0
Outbound AH Key        : [0]::
Outbound ESP Auth Key  : [0]::
Outbound ESP Encry Key : [0]::

Match sequence Num      : 2
Protocol type           : tcp
IP or IPv6              : IP
```

```
Source address      : 1.1.1.1
Source mask        : /32
Source port        : 0
Destination address : 1.1.1.2
Destination mask   : /32
Destination port   : 23
source-interface name :
source-interface num  :

DellEMC(conf-crypto-policy) #
```

transform-set

Specify the transform set the crypto policy uses.

Syntax	<code>transform-set transform-set-name</code> To delete a transform set from the crypto policy, use the <code>no transform-set transform-set-name</code> command.
Parameters	<i>transform-set-name</i> Enter the name for the crypto policy transform set.
Defaults	None
Command Modes	CONFIG-CRYPTO-POLICY
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(1.0)	Introduced on the Z9500.

IPv4 Routing

The basic IPv4 commands are supported by Dell EMC Networking OS on the platform.

Topics:

- arp
- arp backoff-time
- arp learn-enable
- arp max-entries
- arp retries
- arp timeout
- clear arp-cache
- clear host
- clear ip fib stack-unit
- clear ip route
- clear tcp statistics
- debug arp
- debug ip dhcp
- debug ip icmp
- debug ip packet
- ip address
- ip directed-broadcast
- ip domain-list
- ip domain-lookup
- ip domain-name
- ip helper-address
- ip helper-address hop-count disable
- ip host
- ip icmp source-interface
- ipv6 icmp source-interface
- ip max-frag-count
- ip mtu
- ip name-server
- ip proxy-arp
- ip route
- ip source-route
- ip unreachable
- load balance
- management route
- show arp
- show arp retries
- show hosts
- show ip cam stack-unit
- show ip fib stack-unit
- show ip flow
- show ip interface
- show ip management-route
- show ip protocols
- show ip route
- show ip route list
- show ip route summary

- [show ip traffic](#)
- [show tcp statistics](#)

arp

To associate an IP address with a MAC address in the switch, use address resolution protocol (ARP).

Syntax `arp [vrf vrf-name] ip-address mac-address interface`

To remove an ARP address, use the `no arp ip-address` command.

Parameters	vrf vrf-name	Enter a VRF name to configure an ARP entry for that VRF. Use the VRF option after the keyword <code>arp</code> to configure a static arp on that particular VRF.
	ip-address	Enter an IP address in dotted decimal format.
	mac-address	Enter a MAC address in nnnn.nnnn.nnnn format.
	interface	(OPTIONAL) Enter any of the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Usage Information

You cannot use Class D or Class E IP addresses or zero IP address (0.0.0.0) when creating a static ARP. Zero MAC addresses (00:00:00:00:00:00) are also invalid.

You can use the `vrf` attribute of this command to create a static ARP entry on either a default or a non-default VRF. You cannot use this parameter to create any static ARPs corresponding to management VRFs. When a VRF is deleted using the `no ip vrf` command, all the static ARP configurations that belong to that VRF are removed automatically.

Although static ARP entries take precedence over dynamically-learned ARP entries, a static ARP entry that points to a wrong port is not included in the FIB or ARP entries.

Related Commands

- [clear arp-cache](#) — clear dynamic ARP entries from the ARP table.
- [show arp](#) — display the ARP table.

arp backoff-time

Set the exponential timer for resending unresolved ARPs.

Syntax `arp backoff-time seconds`

Parameters *seconds* Enter the number of seconds an ARP entry is black-holed. The range is from 1 to 3600. The default is **30**.

Defaults **30**

Command Mode CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Usage Information

This timer is an exponential backoff timer. Over the specified period, the time between ARP requests increases. This behavior reduces the potential for the system to slow down while waiting for a multitude of ARP responses.

Related Commands

- [show arp retries](#) — display the configured number of ARP retries.

arp learn-enable

Enable ARP learning using gratuitous ARP.

Syntax `arp learn-enable`

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced.

Usage Information In Dell EMC Networking OS versions prior to 8.3.1.0, if a gratuitous ARP is received some time after an ARP request is sent, only RP2 installs the ARP information. For example:

1. At time $t=0$, Dell EMC Networking OS sends an ARP request for IP *A.B.C.D*.
2. At time $t=1$, Dell EMC Networking OS receives an ARP request for IP *A.B.C.D*.
3. At time $t=2$, Dell EMC Networking OS installs an ARP entry for *A.B.C.D* only on RP2.

Beginning with Dell EMC Networking OS version 8.3.1.0, when a gratuitous ARP is received, Dell EMC Networking OS installs an ARP entry on all three CPUs.

arp max-entries

Enables you to configure the maximum number of ARP entries per VRF that are allowed for IPv4..

Syntax `arp max-entries [vrf vrf-name] max-number`

Parameters **vrf vrf-name** Enter the name of a specific VRF for which you want to configure maximum number of ARP entries that IPv4 allows.

max-number Enter the maximum number of ARP entries that a VRF RTM can hold. The range is from 0 to 65535.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S4810 and S4820T.

Usage Information Use this command to specify the maximum number of ARP entries that the Route Table Manager can hold for a specific VRF. This command does not apply to the management VRFs.

arp retries

Set the number of ARP retries in case the system does not receive an ARP reply in response to an ARP request.

Syntax `arp retries number`

Parameters ***number*** Enter the number of retries. The range is from 1 to 20. The default is **5**.

Defaults **5**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced.

Usage Information

Retries are 20 seconds apart.

Related Commands

- [show arp retries](#) — display the configured number of ARP retries.

arp timeout

Set the time interval for an ARP entry to remain in the ARP cache.

Syntax `arp timeout minutes`

Parameters *minutes* Enter the number of minutes. The range is from 0 to 35790. The default is **240 minutes**.

Defaults **240 minutes** (4 hours)

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

clear arp-cache

Clear the dynamic ARP entries from a specific interface or optionally delete (`no-refresh`) ARP entries from the content addressable memory (CAM).

S5000

Syntax	<code>clear arp-cache [vrf vrf-name interface ip ip-address] [no-refresh]</code>
Parameters	
vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to clear the ARP cache corresponding to that VRF.
interface	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
ip ip-address	(OPTIONAL) Enter the keyword <code>ip</code> then the IP address of the ARP entry you wish to clear.
no-refresh	(OPTIONAL) Enter the keywords <code>no-refresh</code> to delete the ARP entry from CAM. Or use this option with <code>interface</code> or <code>ip ip-address</code> to specify which dynamic ARP entries you want to delete.
	NOTE: Transit traffic may not be forwarded during the period when deleted ARP entries are resolved again and re-installed in CAM. Use this option with extreme caution.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.

Version	Description
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series (the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

clear host

Remove one or all dynamically learned host table entries.

Syntax `clear host name`

Parameters *name* Enter the name of the host to delete. Enter * to delete all host table entries.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

clear ip fib stack-unit

Clear all FIB entries in the specified stack unit (use this command with caution, refer to *Usage Information*.)

Syntax `clear ip fib stack-unit unit-number vrf vrf-name`

Parameters

- unit-number*** Enter the number of the stack unit.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to clear all FIB entries corresponding to that VRF.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.19.0	Introduced on the S4820T.

Usage Information To clear Layer 3 CAM inconsistencies, use this command.
 **CAUTION: Executing this command causes traffic disruption.**

Related Commands

- [show ip fib stack-unit](#) — show FIB entries on a specified stack-unit.

clear ip route

Clear one or all routes in the routing table.

Syntax `clear ip route [vrf vrf-name] {* | ip-address mask}`

Parameters

- vrf vrf-name*** (Optional) Enter the keyword `vrf` and then the name of the VRF to clear the routes corresponding to that VRF.
- *** Enter an asterisk (*) to clear all learned IP routes.
- ip-address mask*** Enter a specific IP address and mask in dotted decimal format to clear that IP address from the routing table.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

Use the `vrf vrf-name` attribute of this command to clear routes corresponding to either a specific VRF or the default VRF.

You cannot use this attribute to clear routes corresponding to a management VRF.

Related Commands

- [ip route](#) — assign an IP route to the switch.
- [show ip route](#) — view the routing table.
- [show ip route summary](#) — view a summary of the routing table.

clear tcp statistics

Clear TCP counters.

Syntax

```
clear tcp statistics [all | cp]
```

Parameters

all	Enter the keyword <code>all</code> to clear all TCP statistics maintained on all switch processors.
cp	(OPTIONAL) Enter the <code>cp</code> to clear only statistics from the Control Processor.
rp	(OPTIONAL) Enter the keyword <code>rp</code> to clear only the statistics from Route Processor.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

debug arp

View information on ARP transactions.

S5000

Syntax

```
debug arp [interface] [count value]
```

To stop debugging ARP transactions, use the `no debug arp` command.

Parameters

<i>interface</i>	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information.For a port channel interface, enter the keywords <code>port-channel</code> then a number.For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
<i>count value</i>	(OPTIONAL) Enter the keyword <code>count</code> then the count value. The range is from 1 to 65534.

Defaults

None

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series(the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Added the <code>count</code> option.

Usage Information

To stop packets from flooding the user terminal when debugging is turned on, use the `count` option.

debug ip dhcp

Enable debug information for dynamic host configuration protocol (DHCP) relay transactions and display the information on the console.

Syntax `debug ip dhcp`
To disable debug, use the `no debug ip dhcp` command.

Defaults Debug disabled

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.10	Introduced on the E-Series.

Example

```
DelleMC# debug ip dhcp
00:12:21 : %RELAY-I-PACKET: BOOTP REQUEST (Unicast) received at
interface 113.3.3.17 BOOTP
Request, hops = 0, XID = 0xbf05140f, secs = 0, hwaddr =
00:60:CF:20:7B:8C, giaddr = 0.0.0.0
00:12:21 : %RELAY-I-BOOTREQUEST: Forwarded BOOTREQUEST for
00:60:CF:20:7B:8C to 14.4.4.2
00:12:26 : %RELAY-I-PACKET: BOOTP REQUEST (Unicast) received at
interface 113.3.3.17 BOOTP
Request, hops = 0, XID = 0xbf05140f, secs = 5, hwaddr =
00:60:CF:20:7B:8C, giaddr = 0.0.0.0
00:12:26 : %RELAY-I-BOOTREQUEST: Forwarded BOOTREQUEST for
00:60:CF:20:7B:8C to 14.4.4.2
00:12:40 : %RELAY-I-PACKET: BOOTP REQUEST (Unicast) received at
interface 113.3.3.17 BOOTP
Request, hops = 0, XID = 0xda4f9503, secs = 0, hwaddr =
00:60:CF:20:7B:8C, giaddr = 0.0.0.0
00:12:40 : %RELAY-I-BOOTREQUEST: Forwarded BOOTREQUEST for
00:60:CF:20:7B:8C to 14.4.4.2
00:12:42 : %RELAY-I-PACKET: BOOTP REPLY (Unicast) received at interface
14.4.4.1 BOOTP Reply,
hops = 0, XID = 0xda4f9503, secs = 0, hwaddr = 00:60:CF:20:7B:8C, giaddr
= 113.3.3.17
00:12:42 : %RELAY-I-BOOTREPLY: Forwarded BOOTREPLY for 00:60:CF:20:7B:8C
to 113.3.3.254
00:12:42 : %RELAY-I-PACKET: BOOTP REQUEST (Unicast) received at
interface 113.3.3.17 BOOTP
Request, hops = 0, XID = 0xda4f9503, secs = 0, hwaddr =
00:60:CF:20:7B:8C, giaddr = 0.0.0.0
00:12:42 : %RELAY-I-BOOTREQUEST: Forwarded BOOTREQUEST for
00:60:CF:20:7B:8C to 14.4.4.2
00:12:42 : %RELAY-I-PACKET: BOOTP REPLY (Unicast) received at interface
14.4.4.1 BOOTP Reply,
hops = 0, XID = 0xda4f9503, secs = 0, hwaddr = 00:60:CF:20:7B:8C, giaddr
= 113.3.3.17
00:12:42 : %RELAY-I-BOOTREPLY: Forwarded BOOTREPLY for 00:60:CF:20:7B:8C
to 113.3.3.254
DelleMC#
```

Related Commands

- [ip helper-address](#) – specify the destination broadcast or host address for the DHCP server request.
- [ip helper-address hop-count disable](#) – disable the hop-count increment for the DHCP relay agent.

debug ip icmp

View information on the internal control message protocol (ICMP).

S5000

Syntax `debug ip icmp [interface] [count value]`
To disable debugging, use the `no debug ip icmp` command.

Parameters

interface	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
count value	(OPTIONAL) Enter the keyword <code>count</code> then the count value. The range is from 1 to 65534. The default is Infinity .

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series (the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Added the <code>count</code> option.

Example

```
ICMP: echo request rcvd from src 40.40.40.40
ICMP: src 40.40.40.40, dst 40.40.40.40, echo reply
ICMP: src 40.40.40.40, dst 40.40.40.40, echo reply
ICMP: echo request sent to dst 40.40.40.40
ICMP: echo request rcvd from src 40.40.40.40
ICMP: src 40.40.40.40, dst 40.40.40.40, echo reply
ICMP: src 40.40.40.40, dst 40.40.40.40, echo reply
ICMP: echo request sent to dst 40.40.40.40
```

Usage Information

To stop packets from flooding the user terminal when debugging is turned on, use the `count` option.

debug ip packet

View a log of IP packets sent and received.

S5000

Syntax

```
debug ip packet [access-group name] [count value] [interface]
```

To disable debugging, use the `no debug ip packet [access-group name] [count value] [interface]` command.

Parameters

- access-group name** Enter the keyword `access-group` then the access list name (maximum 16 characters) to limit the debug output based on the defined rules in the ACL.
- count value** (OPTIONAL) Enter the keyword `count` then the count value. The range is from 1 to 65534. The default is `Infinity`.
- interface** (OPTIONAL) Enter the following keywords and the interface information:
- - For the Management interface on the stack-unit, enter the keyword `ManagementEthernet` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series (the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Added the <code>access-group</code> option.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Added the <code>count</code> option.

Usage Information

The following describes the `debug ip packet` command in the following example.

Field	Description
s=	Lists the source address of the packet and the name of the interface (in parentheses) that received the packet.
d=	Lists the destination address of the packet and the name of the interface (in parentheses) through which the packet is being sent out on the network.
len	Displays the packet's length.
sending, rcvd, fragment, sending broad/multicast proto, unroutable	The last part of each line lists the status of the packet.
TCP src=	Displays the source and destination ports, the sequence number, the acknowledgement number, and the window size of the packets in that TCP packets.
UDP src=	Displays the source and destination ports for the UDP packets.
ICMP type=	Displays the ICMP type and code.
IP Fragment	States that it is a fragment and displays the unique number identifying the fragment (Ident) and the offset (in 8-byte units) of this fragment (fragment offset) from the beginning of the original datagram.

Example

```
IP: s=10.1.2.62 (local), d=10.1.2.206 (Ma 0/0), len 54, sending
    TCP src=23, dst=40869, seq=2112994894, ack=606901739, win=8191 ACK
    PUSH
IP: s=10.1.2.206 (Ma 0/0), d=10.1.2.62, len 40, rcvd
    TCP src=0, dst=0, seq=0, ack=0, win=0
IP: s=10.1.2.62 (local), d=10.1.2.206 (Ma 0/0), len 226, sending
    TCP src=23, dst=40869, seq=2112994896, ack=606901739, win=8192 ACK
    PUSH
IP: s=10.1.2.216 (Ma 0/0), d=10.1.2.255, len 78, rcvd
    UDP src=0, dst=0
IP: s=10.1.2.62 (local), d=10.1.2.3 (Ma 0/0), len 1500, sending fragment
    IP Fragment, Ident = 4741, fragment offset = 0
    ICMP type=0, code=0
IP: s=10.1.2.62 (local), d=10.1.2.3 (Ma 0/0), len 1500, sending fragment
    IP Fragment, Ident = 4741, fragment offset = 1480
IP: s=40.40.40.40 (local), d=224.0.0.5 (Gi 4/11), len 64, sending broad/
multicast
proto=89
IP: s=40.40.40.40 (local), d=224.0.0.6 (Gi 4/11), len 28, sending broad/
multicast
proto=2
IP: s=0.0.0.0, d=30.30.30.30, len 100, unroutable
```

```
ICMP type=8, code=0
IP: s=0.0.0.0, d=30.30.30.30, len 100, unroutable
ICMP type=8, code=0
```

Usage Information

To stop packets from flooding the user terminal when debugging is turned on, use the `count` option.

The `access-group` option supports only the equal to (`eq`) operator in TCP ACL rules. Port operators not equal to (`neq`), greater than (`gt`), less than (`lt`), or range are not supported in `access-group` option (refer to the following example). ARP packets (`arp`) and Ether-type (`ether-type`) are also not supported in the `access-group` option. The entire rule is skipped to compose the filter.

The `access-group` option pertains to:

- IP protocol number: from 0 to 255
- Internet control message protocol (`icmp`) but not the ICMP message type (from 0 to 255)
- Any internet protocol (`ip`)
- Transmission Control Protocol (`tcp`) but not on the `rst`, `syn`, or `urg` bits
- User Datagram Protocol (`udp`)

In the case of ambiguous access control list rules, the `debug ip packet access-control` command is disabled. A message appears identifying the error (refer to the Example below).

Example (Error Messages)

```
DellEMC# debug ip packet access-group test
%Error: port operator GT not supported in access-list debug
%Error: port operator LT not supported in access-list debug
%Error: port operator RANGE not supported in access-list debug
%Error: port operator NEQ not supported in access-list debug

DellEMC#00:10:45: %RPM0-P:CP
%IPMGR-3-DEBUG_IP_PACKET_ACL_AMBIGUOUS_EXP: Ambiguous rules not
supported in access-list debug, access-list debugging is turned off
DellEMC#
```

ip address

Assign a primary and secondary IP address to the interface.

Syntax `ip address ip-address mask [secondary]`

To delete an IP address from an interface, use the `no ip address [ip-address]` command.

Parameters

<i>ip-address</i>	Enter an IP address in dotted decimal format.
<i>mask</i>	Enter the mask of the IP address in slash prefix format (for example, /24).
<i>secondary</i>	(OPTIONAL) Enter the keyword <code>secondary</code> to designate the IP address as the secondary address.

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information

You must be in INTERFACE mode before you add an IP address to an interface. Assign an IP address to an interface prior to entering ROUTER OSPF mode.

ip directed-broadcast

Enables the interface to receive directed broadcast packets.

Syntax

`ip directed-broadcast`

To disable the interface from receiving directed broadcast packets, use the `no ip directed-broadcast` command.

Defaults

Disabled (that is, the interface does not receive directed broadcast packets)

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

ip domain-list

Configure names to complete unqualified host names.

Syntax `ip domain-list name`

To remove the name, use the `no ip domain-list name` command.

Parameters **name** Enter a domain name to be used to complete unqualified names (that is, incomplete domain names that cannot be resolved).

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information To configure a list of possible domain names, configure the `ip domain-list` command up to six times. If you configure both the `ip domain-name` and `ip domain-list` commands, the software tries to resolve the name using the `ip domain-name` command. If the name is not resolved, the software goes through the list of names configured with the `ip domain-list` command to find a match.

To enable dynamic resolution of hosts, use the following steps:

- specify a domain name server with the `ip name-server` command
- enable DNS with the `ip domain-lookup` command

To view current bindings, use the `show hosts` command. To view a DNS-related configuration, use the `show running-config resolve` command.

Related Commands

- [ip domain-name](#) — specify a DNS server.

ip domain-lookup

To address resolution (that is, DNS), enable dynamic host-name.

Syntax `ip domain-lookup`
 To disable DNS lookup, use the `no ip domain-lookup` command.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information To fully enable DNS, also specify one or more domain name servers with the `ip name-server` command.

Dell EMC Networking OS does not support sending DNS queries over a VLAN. DNS queries are sent out all other interfaces, including the Management port.

To view current bindings, use the `show hosts` command.

- Related Commands**
- [ip name-server](#) — specify a DNS server.
 - [show hosts](#) — view the current bindings.

ip domain-name

Configure one domain name for the switch.

Syntax `ip domain-name name`

To remove the domain name, use the `no ip domain-name` command.

Parameters **name** Enter one domain name to be used to complete unqualified names (that is, incomplete domain names that cannot be resolved).

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Usage Information You can only configure one domain name with the `ip domain-name` command. To configure more than one domain name, configure the `ip domain-list` command up to six times.

To enable dynamic resolution of hosts, use the following steps:

- specify a domain name server with the `ip name-server` command
- enable DNS with the `ip domain-lookup` command

To view current bindings, use the `show hosts` command.

Related Commands

- [ip domain-list](#) — configure additional names.

ip helper-address

Specify the address of a DHCP server so that DHCP broadcast messages can be forwarded when the DHCP server is not on the same subnet as the client.

Syntax `ip helper-address ip-address`

To remove a DHCP server address, use the `no ip helper-address` command.

Parameters `ip-address` Enter an IP address in dotted decimal format (A.B.C.D).

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Added support for IPv6.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information You can add multiple DHCP servers by entering the `ip helper-address` command multiple times. If multiple servers are defined, an incoming request is sent simultaneously to all configured servers and the reply is forwarded to the DHCP client.

Dell EMC Networking OS uses standard DHCP ports, that is UDP ports 67 (server) and 68 (client) for DHCP relay services. It listens on port 67 and if it receives a broadcast, the software converts it to unicast, and forwards to it to the DHCP-server with source port=68 and destination port=67.

The server replies with source port=67, destination port=67 and Dell EMC Networking OS forwards to the client with source port=67, destination port=68.

ip helper-address hop-count disable

Disable the hop-count increment for the DHCP relay agent.

Syntax `ip helper-address hop-count disable`
To re-enable the hop-count increment, use the `no ip helper-address hop-count disable` command.

Defaults Enabled; the hops field in the DHCP message header is incremented by default.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced for the E-Series.

Usage Information This command disables the incrementing of the hops field when boot requests are relayed to a DHCP server through Dell EMC Networking OS. If the incoming boot request already has a non-zero hops field, the message is relayed with the same value for hops. However, the message is discarded if the hops field exceeds 16, to comply with the relay agent behavior specified in RFC 1542.

Related Commands

- [ip helper-address](#) — specify the destination broadcast or host address for DHCP server requests.
- [show running-config](#) — display the current configuration and changes from the default values.

ip host

Assign a name and an IP address to the host-to-IP address mapping table.

Syntax `ip host name ip-address`

To remove an IP host, use the `no ip host name [ip-address]` command.

Parameters

<i>name</i>	Enter a text string to associate with one IP address.
<i>ip address</i>	Enter an IP address, in dotted decimal format, to be mapped to the name.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced for the E-Series.

ip icmp source-interface

Enable the ICMP error and unreachable messages to be sent with the source interface IP address, such as the loopback address, instead of the hops of the preceding devices along the network path to be used for easy debugging and diagnosis of network disconnections and reachability problems with IPv4 packets.

Syntax

```
ip icmp source-interface interface
```

Parameters

<i>interface</i>	Enter one of the following keywords and slot/port or number information: <ul style="list-style-type: none">For a Management Ethernet interface, enter the keyword <code>managementethernet</code>.
-------------------------	--

NOTE:

- When you configure the capability to enable the loopback IP address to be sent for easy debugging and diagnosis (IP addresses of the devices for which the ICMP source interface is configured), the source IP address of the outgoing ICMP error message is modified, although the packets are not sent out using the configured interface. Because the management interface is configured without any parameters such as

the IP address, it is treated to the management interface of the primary unit or the existing unit.

- For ICMP, a user can specify one source-interface for each VRF and let it be the default, management or any other VRF created. For other protocols (Telnet, SSH, FTP, TFTP), where the source interface can be specified, only one interface can be chosen. This is for all VRFs combined.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000 platforms.

Usage Information You can enable the mechanism to configure the source or the originating interface from which the packet (the device that generates the ICMP error messages) is received by the switch to send the loopback address instead of its source IP address to be used in the ICMP unreachable messages and in the `traceroute` command output. The loopback address must be unique in a particular domain.

In network environments that contain a large number of devices, ranging up to thousands of systems, and with each device configured for equal-cost multipath (ECMP) links, you cannot effectively and optimally use the `traceroute` and `ping` applications to examine the network reachability and identify any broken links for diagnostic purposes. In such cases, if the reply that is obtained from each hop on the network path contains the IP address of the adjacent, neighboring interface from which the packet is received, it is difficult to employ the `ping` and `traceroute` utilities. You can enable the ICMP unreachable messages to contain the loopback address of the source device instead of the previous hop's IP address to be able to easily and quickly identify the device and devices along the path because the DNS server maps the loopback IP address to the hostname and does not translate the IP address of every interface of the switch to the hostname.

Example

```
DellEMC(conf)# ip icmp source-interface tengigabitethernet 1/1
DellEMC(conf)#
```

ipv6 icmp source-interface

Enable the ICMP error and unreachable messages to be sent with the source interface IP address, such as the loopback address, instead of the hops of the preceding devices along the network path to be used for easy debugging and diagnosis of network disconnections and reachability problems with IPv6 packets.

Syntax `ipv6 icmp source-interface interface`

Parameters *interface*

Enter one of the following keywords and slot/port or number information:

- For a Management Ethernet interface, enter the keyword `managementethernet`.
- **NOTE:** When you configure the capability to enable the loopback IP address to be sent for easy debugging and diagnosis (IP addresses of the devices for which the ICMP source interface is configured), the source IP address of the outgoing ICMP error message is modified, although the packets are not sent out using the configured interface. Because the management interface is configurable only without any parameters such as the IP address, it is treated to the management interface of the primary unit or the existing unit.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000 platforms.

Usage Information

You can enable the mechanism to configure the source or the originating interface from which the packet (the device that generates the ICMP error messages) is received by the switch to send the loopback address instead of its source IP address to be used in the ICMP unreachable messages and in the `traceroute` command output. The loopback address must be unique in a particular domain.

In network environments that contain a large number of devices, ranging up to thousands of systems, and with each device configured for equal-cost multipath (ECMP) links, you cannot effectively and optimally use the `traceroute` and `ping` applications to examine the network reachability and identify any broken links for diagnostic purposes. In such cases, if the reply that is obtained from each hop on the network path

contains the IP address of the adjacent, neighboring interface from which the packet is received, it is difficult to employ the ping and traceroute utilities. You can enable the ICMP unreachable messages to contain the loopback address of the source device instead of the previous hop's IP address to be able to easily and quickly identify the device and devices along the path because the DNS server maps the loopback IP address to the hostname and does not translate the IP address of every interface of the switch to the hostname

Example

```
DellEMC(conf)# ipv6 icmp source-interface tengigabitethernet 1/1
DellEMC(conf)#
```

ip max-frag-count

Set the maximum number of fragments allowed in one packet for packet re-assembly.

Syntax `ip max-frag-count count`

To place no limit on the number of fragments allowed, use the `no ip max-frag-count` command.

Parameters `count` Enter a number for the number of fragments allowed for re-assembly. The range is from 2 to 256.

Defaults No limit is set on number of fragments allowed.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced for the E-Series.

Usage Information To avoid denial of service (DOS) attacks, keep the number of fragments allowed for re-assembly low.

ip mtu

Set the IP MTU (frame size) of the packet the RPM transmits for the line card interface. If the packet must be fragmented, Dell EMC Networking OS sets the size of the fragmented packets to the size specified in this command.

Syntax `ip mtu value`

To return to the default IP MTU value, use the `no ip mtu` command.

Parameters `value` Enter the maximum MTU size if the IP packet is fragmented. The range is from 576 to 9234. The default is **1500 bytes**.

Defaults **1500 bytes**

Command Modes INTERFACE (Gigabit Ethernet and 10-Gigabit Ethernet interfaces)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information When you enter the `no mtu` command, Dell EMC Networking OS reduces the `ip mtu` value to 1536 bytes. To return the IP MTU value to the default, use the `no ip mtu` command.

Starting with Dell EMC Networking OS Release 9.2(0.2), the `ip mtu` command is not supported to configure the IP MTU value that is used when the IP packet is fragmented. Instead of having to configure the IP MTU value, this value is automatically computed by the software when you configure an interface. As a result, the `ip mtu` command is not available for configuration. However, you can continue to specify the link MTU value by using the `mtu` command.

Compensate for Layer 2 header when configuring link MTU on an Ethernet interface or Dell EMC Networking OS may not fragment packets. If the packet includes a Layer 2 header, the difference between the link MTU and IP MTU (the `ip mtu` command) must be enough bytes to include for the Layer 2 header.

Link MTU and IP MTU considerations for Port Channels and VLANs are as follows

Port Channels:

- All members must have the same link MTU value and the same IP MTU value.
- The Port Channel link MTU and IP MTU must be less than or equal to the link MTU and IP MTU values configured on the channel members. For example, if the members have a link MTU of 2100 and an IP MTU 2000, the Port Channel's MTU values cannot be higher than 2100 for link MTU or 2000 bytes for IP MTU.

VLANs:

- All members of a VLAN must have same IP MTU value.
- Members can have different Link MTU values. Tagged members must have a link MTU 4 bytes higher than untagged members to account for the packet tag.
- The VLAN link MTU and IP MTU must be less than or equal to the link MTU and IP MTU values configured on the VLAN members. For example, the VLAN contains tagged members with Link MTU of 1522 and IP MTU of 1500 and untagged members with Link MTU of 1518 and IP MTU of 1500. The VLAN's Link MTU cannot be higher than 1518 bytes and its IP MTU cannot be higher than 1500 bytes.

The following describes the difference between Link MTU and IP MTU.

Layer 2 Overhead	Difference between Link MTU and IP MTU
Ethernet (untagged)	18 bytes
VLAN Tag	Tag 22 bytes
Untagged Packet with VLAN-Stack Header	22 bytes
Tagged Packet with VLAN-Stack Header	26 bytes

Related Commands

- `mtu` — set the link MTU for an Ethernet interface.

ip name-server

Enter up to six IPv4 addresses of name servers. The order you enter the addresses determines the order of their use.

Syntax

```
ip name-server ipv4-address [ipv4-address2...ipv4-address6]
```

To remove a name server, use the `no ip name-server ip-address` command.

Parameters

- ipv4-address** Enter the IPv4 address, in dotted decimal format, of the name server to be used.
- ipv4-address2...ipv4-address6** (OPTIONAL) Enter up to five more IPv4 addresses, in dotted decimal format, of name servers to be used. Separate the addresses with a space.

Defaults

No name servers are configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS does not support sending DNS queries over a VLAN. DNS queries are sent out on all other interfaces, including the Management port.

You can separately configure both IPv4 and IPv6 domain name servers.

In a dual stack setup, the system sends both A (request for IPv4 — RFC 1035) and AAAA (request for IPv6 — RFC 3596) record requests to a DNS server even if only the ip name-server command is configured.

ip proxy-arp

Enable proxy ARP on an interface.

Syntax

`ip proxy-arp`

To disable proxy ARP, use the `no ip proxy-arp` command.

Defaults

Enabled.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Related Commands

- [show ip interface](#) — display the interface routing status and configuration.

ip route

Assign a static route to the switch.

Syntax

```
ip route [vrf vrf-name] ip-address mask {ip-address | interface [ip-address]} [distance] [permanent] [tag tag-value] [vrf vrf-name] [weight weight-value]
```

To delete a specific static route, use the `no ip route destination mask` command.

To delete all routes matching a certain route, use the `no ip route destination mask` command.

Parameters

vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF to configure a static route corresponding to that VRF. Use this VRF option after the <code>ip route</code> keyword to configure a static route on that particular VRF.
destination	Enter the IP address in dotted decimal format of the destination device.
mask	Enter the mask in the slash prefix format (/x) of the destination IP address.
ip-address	Enter the IP address of the forwarding router in dotted decimal format.
interface	Enter one of the following keyword followed by the interface information <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383.• For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a Null interface, enter the keyword <code>null</code> then the Null interface number.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.• For a tunnel interface, enter the keyword <code>tunnel</code> then the tunnel interface number. The range is from 1 to 16383. <p>If you configure a static IPv6 route using an egress interface and enter the ping command to reach the destination IPv6 address, the ping operation may not work. Configure the IPv6 route using a next-hop IPv6 address in order for the ping command to detect the destination address.</p>
interface ip-address	Enter the keyword <code>interface</code> then the IP address.
distance	(OPTIONAL) Enter the value of the distance metric assigned to the route. The range is from 1 to 255.
permanent	(OPTIONAL) Enter the keyword <code>permanent</code> to specify that the route must not be removed even if the interface assigned to that route goes down. The route must be currently active to be installed in the routing table. If you disable the interface, the route is removed from the routing table.
tag tag-value	(OPTIONAL) Enter the keyword <code>tag</code> then a number to assign to the route. The range is from 1 to 4294967295.
vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF. Use this VRF option after the next hop to specify which VRF the next hop belongs to. This setting is

used in route leaking cases. See “Route Leaking VRFs” in the Virtual Routing and Forwarding (VRF) section of the Configuration guide.

weight *weight-value*

Enter the keyword `weight` followed by a weight value. The range is from 0 to 255.



NOTE: Weight for a static route can be added only for the destination address and not for the route pointing to destination a interface.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Included the <code>weighted</code> parameter to support weighted ECMP feature.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2.(0.0)	Added support for tunnel interface type.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series (the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Using the following example of a static route: `ip route 33.33.33.0 /24 tengigabitethernet 1/1 172.31.5.43`

- The software installs a next hop that is not on the directly connected subnet but which recursively resolves to a next hop on the interface's configured subnet. In the example, if `tengigabitethernet 1/1` has an ip address on subnet 2.2.2.0 and if 172.31.5.43 recursively resolves to 2.2.2.0, Dell EMC Networking OS installs the static route.
- When the interface goes down, Dell EMC Networking OS withdraws the route.
- When the interface comes up, Dell EMC Networking OS re-installs the route.
- When recursive resolution is “broken,” Dell EMC Networking OS withdraws the route.
- When recursive resolution is satisfied, Dell EMC Networking OS re-installs the route.

You can specify a weight for an IPv4 or IPv6 static route. If the weight value of a path is 0, then that path is not used for forwarding when weighted ECMP is in effect. Also, if a path corresponding to a static route (destination) has a non-zero weight assigned to it and other paths do not have any weight configured, then regular ECMP is used for forwarding.

You can specify the weight value only to destination address and not on the egress port.

A route is considered for weighted ECMP calculations only if each paths corresponding to that route is configured with a weight.

You cannot use the VRF attribute of this command to configure routes in a management VRF. When a specific VRF is deleted, all the configured static routes corresponding to that VRF are automatically removed.

Example

```
DelleMC(conf)# ip route 1.1.1.0/24 4.4.4.2 weight 100
DelleMC(conf)# ip route 1.1.1.0/24 6.6.6.2 weight 200
DelleMC(conf)# do show running-config | grep route ip route 1.1.1.0/24
4.4.4.2 weight 100 ip route 1.1.1.0/24 6.6.6.2 weight 200
DelleMC(conf)# ip route vrf test 1.1.1.0/24 4.4.4.2 weight 100
DelleMC(conf)# ip route vrf test 1.1.1.0/24 6.6.6.2 weight 200
DelleMC(conf)#
DelleMC(conf)# do show running-config | grep route ip route vrf test
1.1.1.0/24 4.4.4.2 weight 100 ip route vrf test 1.1.1.0/24 6.6.6.2
weight 200
```

Related Commands

- [show ip route](#) — view the switch routing table.

ip source-route

Enable Dell EMC Networking OS to forward IP packets with source route information in the header.

Syntax

```
ip source-route
```

To drop packets with source route information, use the `no ip route-source` command.

Defaults

Enabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

ip unreachableables

Enable the generation of internet control message protocol (ICMP) unreachable messages.

Syntax	<code>ip unreachableables</code> To disable the generation of ICMP messages, use the <code>no ip unreachableables</code> command.
Defaults	Disabled.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

load balance

By default, for the S5000, Dell Networking OS uses an IP 4-tuple (IP SA, IP DA, Source Port, and Destination Port) to distribute IP traffic over members of a Port Channel as well as equal-cost paths. To designate another method to balance traffic over Port Channel members, use the `load-balance` command.

S5000

Syntax

```
load-balance {ip-selection [dest-ip | source-ip]} | {mac [dest-mac | source-dest-mac | source-mac]} | {tcp-udp | ingress-port [enable]}
```

To return to the default setting (IP 4-tuple), use the `no load-balance {ip-selection [dest-ip | source-ip]} | {mac [dest-mac | source-dest-mac | source-mac]} | {tcp-udp | ingress-port [enable]}` command.

Parameters

ip-selection {dest-ip source-ip}	Enter the keywords to distribute IP traffic based on the following criteria: <ul style="list-style-type: none">• <code>dest-ip</code> — Uses destination IP address and destination port fields to hash. The hashing mechanism returns a 3-bit index indicating which port the packet should be forwarded.• <code>source-ip</code> — Uses source IP address and source port fields to hash. The hashing mechanism returns a 3-bit index indicating which port the packet should be forwarded.
mac {dest-mac source-dest-mac source-mac}	Enter the keywords to distribute MAC traffic based on the following criteria: <ul style="list-style-type: none">• <code>dest-mac</code> — Uses the destination MAC address, VLAN, Ethertype, source module ID and source port ID fields to hash. The hashing mechanism returns a 3-bit index indicating which port the packet should be forwarded.• <code>source-dest-mac</code> — Uses the destination and source MAC address, VLAN, Ethertype, source module ID and source port ID fields to hash. The hashing mechanism returns a 3-bit index indicating which port the packet should be forwarded.• <code>source-mac</code> — Uses the source MAC address, VLAN, Ethertype, source module ID and source port ID fields to hash. The hashing mechanism returns a 3-bit index indicating which port the packet should be forwarded.
tcp-udp enable	Enter the keywords to distribute traffic based on the following: <ul style="list-style-type: none">• <code>enable</code> — Takes the TCP/UDP source and destination ports into consideration when doing hash computations. (By default, this is enabled.)
ingress-port enable	Enter the keywords to distribute traffic based on the following: <ul style="list-style-type: none">• <code>enable</code> — Takes the source port into consideration when doing hash computations. (By default, this is disabled.)

Defaults

IP 4-tuple (IP SA, IP DA, Source Port, Destination Port)

Command Modes

CONFIGURATION

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

By default, Dell Networking OS distributes incoming traffic based on a hash algorithm using the following criteria:

- IP source address
- IP destination address
- TCP/UDP source port
- TCP/UDP destination port

Related Commands

[hash-algorithm ecmp](#) – changes the hash algorithm across an ECMP.

management route

Configure a static route that points to the Management interface or a forwarding router.

Syntax `management route {ip-address mask | ipv6-address 1.1.1.1prefix-length} {forwarding-router-address | managementethernet | fortyGigE | vlan | tengigabitethernet }`

To remove a static route, use the `no management route` command.

Parameters

- ip-address mask** Enter an IP address (dotted decimal format) and mask (/prefix format) of the destination subnet.
- ipv6-address prefix-length** Enter an IPv6 address (x:x:x:x format) and mask (/prefix format) of the destination subnet. Enter the IPv6 address in the x:x:x:x format followed by the prefix length in the /x format.
The range is from /0 to /128.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- forwarding-router-address** Enter an IP address (dotted decimal format) or an IPv6 address (x:x:x:x format) of a forwarding router.
- managementethernet** Enter the keyword `managementethernet` for the Management interface on the Primary RPM.
- fortyGigE** Enter the keyword `fortyGigE` to specify a forty Gigbit Ethernet interface.
- vlan** Enter the keyword `vlan` to specify a vlan interface.
- tengigabitethernet** Enter the keyword `tengigabitethernet` to specify a ten Gigabit Ethernet interface.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for forty gigabit, vlan, and tengigabit ethernet interfaces. Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000 and added support for IPv6.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

When a static route (or a protocol route) overlaps with Management static route, the static route (or a protocol route) is preferred over the Management Static route. Also, Management static routes and the Management Connected prefix are not reflected in the hardware routing tables. Separate routing tables are maintained for IPv4 and IPv6 management routes. This command manages both tables.

Related Commands

- [interface ManagementEthernet](#) — configure the Management port on the system (either the Primary or Standby RPM).
- [speed \(Management interface\)](#) — set the speed for the Management interface.

show arp

Display the ARP table.

S5000

Syntax

```
show arp [vrf vrf-name] [interface interface | ip ip-address [mask] |
macaddress mac-address [mac-address mask]] [retries] [static | dynamic]
[inspection {database | statistics}[summary]
```

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF. i NOTE: Use this attribute to start a BGP instance for either a specific address family corresponding to the default VRF or an IPv4 address family corresponding to a non-default VRF.
interface interface	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For the Management interface on the stack-unit, enter the keyword <code>ManagementEthernet</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
ip ip-address mask	(OPTIONAL) Enter the keyword <code>ip</code> then an IP address in the dotted decimal format. Enter the optional IP address mask in the slash prefix format (<code>/ x</code>).
inspection	Enter the keyword <code>inspection</code> with one of the following keywords to view ARP entries: <ul style="list-style-type: none"> • <code>database</code> — view a list of ARP entries learned using DAI • <code>statistics</code> — view DAI statistics
macaddress mac-address mask	(OPTIONAL) Enter the keyword <code>macaddress</code> then a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format. Enter the optional MAC address mask in <code>nn:nn:nn:nn:nn:nn</code> format also.
static	(OPTIONAL) Enter the keyword <code>static</code> to view entries entered manually.
retries	(OPTIONAL) Enter the keyword <code>retries</code> to show the number of ARP retries before a 20-second back off.
dynamic	(OPTIONAL) Enter the keyword <code>dynamic</code> to view dynamic entries.
summary	(OPTIONAL) Enter the keyword <code>summary</code> to view a summary of ARP entries.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF and added usage information for the <code>clear arp-cache</code> command.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added support for 4094 VLANs on the E-Series (the prior limit was 2094).
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.8.1.0	Augmented to display local ARP entries learned from private VLANs (PVLANS).
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information The following example shows two VLANs that are associated with a private VLAN (PVLAN) (refer to [Private VLAN \(PVLAN\)](#)).

If you have entered the `clear arp-cache` command to remove a large number of ARP entries and the command is still being processed in the background, an error message display if you attempt to enter the `show arp` command:

```
Clear arp in-progress. Please try after sometime!
```

The following describes the `show arp` command shown in the following example.

Description

Protocol	Displays the protocol type.
Address	Displays the IP address of the ARP entry.
Age(min)	Displays the age (in minutes) of the ARP entry.
Hardware Address	Displays the MAC address associated with the ARP entry.
Interface	Displays the first two letters of the interfaces type and the slot/port associated with the ARP entry.
VLAN	Displays the VLAN ID, if any, associated with the ARP entry.

Description

CPU Lists which CPU the entries are stored on.

Example

```
DellEMC> show arp
Protocol Address Age(min) Hardware Address Interface VLAN CPU
-----
Internet 192.2.1.254 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.253 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.252 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.251 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.250 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.251 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.250 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.249 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.248 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.247 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.246 1 00:00:c0:02:01:02 Te 2/13 - CP
Internet 192.2.1.245 1 00:00:c0:02:01:02 Te 2/13 - CP
```

Example (Private VLAN)

NOTE: In this example, Line 1 shows community VLAN 200 (in primary VLAN 10) in a PVLAN. Line 2 shows primary VLAN 10.

```
DellEMC# show arp
Protocol Address Age(min) Hardware Address Interface VLAN CPU
-----
Internet 5.5.5.1 - 00:01:e8:43:96:5e - V1 10 pv 200 CP
Internet 5.5.5.10 - 00:01:e8:44:99:55 - V1 10 CP
Internet 10.1.2.4 1 00:01:e8:d5:9e:e2 Ma 0/0 - CP
Internet 10.10.10.4 1 00:01:e8:d5:9e:e2 Ma 0/0 - CP
Internet 10.16.127.53 1 00:01:e8:d5:9e:e2 Ma 0/0 - CP
Internet 10.16.134.254 20 00:01:e8:d5:9e:e2 Ma 0/0 - CP
Internet 133.33.33.4 1 00:01:e8:d5:9e:e2 Ma 0/0 - CP
```

Usage Information

The following describes the `show arp summary` command shown in the following example.

Description

Total Entries Lists the total number of ARP entries in the ARP table.

Static Entries Lists the total number of configured or static ARP entries.

Dynamic Entries Lists the total number of learned or dynamic ARP entries.

CPU Lists which CPU the entries are stored on.

Example (Summary)

```
DellEMC# show arp summary
TotalEntries Static Entries Dynamic Entries CPU
-----
83 0 83 CP
DellEMC#
```

Related Commands

- [ip local-proxy-arp](#) — enable/disable Layer 3 communication in secondary VLANs.
- [switchport mode private-vlan](#) — set PVLAN mode of the selected port.

show arp retries

Display the configured number of ARP retries.

Syntax `show arp retries`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced.

- Related Commands**
- [arp retries](#) — set the number of ARP retries in case the system does not receive an ARP reply in response to an ARP request.

show hosts

View the host table and DNS configuration.

Syntax `show hosts`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
9.0.0.0	Added support for IPv6 addresses.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show hosts` command in the following example.

Field	Description
Default domain...	Displays the domain name (if configured).
Name/address lookup...	States if DNS is enabled on the system. <ul style="list-style-type: none"> • If DNS is enabled, the Name/Address lookup is domain service. • If DNS is not enabled, the Name/Address lookup is static mapping
Name servers are...	Lists the name servers, if configured.
Host	Displays the host name assigned to the IP address.
Flags	Classifies the entry as one of the following: <ul style="list-style-type: none"> • perm — the entry was manually configured and will not time out • temp — the entry was learned and will time out after 72 hours of inactivity. Also included in the flag is an indication of the validity of the route: <ul style="list-style-type: none"> • ok — the entry is valid. • ex — the entry expired. • ?? — the entry is suspect.
TTL	Displays the amount of time until the entry ages out of the cache. For dynamically learned entries only.
Type	Displays IP as the type of entry.
Address	Displays the IP addresses assigned to the host.

Example

```
DellEMC# show hosts
Default domain is not set
Name/address lookup uses static mappings
Name servers are not set
Host      Flags      TTL      Type      Address
-----
ks        (perm, OK) -      IP      2.2.2.2
4200-1    (perm, OK) -      IP      192.68.69.2
1230-3    (perm, OK) -      IP      192.68.99.2
ZZr       (perm, OK) -      IP      192.71.18.2
Z10-3    (perm, OK) -      IP      192.71.23.1
DellEMC#
```

Related Commands

- [traceroute](#) — view the DNS resolution.
- [ip host](#) — configure a host.

show ip cam stack-unit

Display CAM entries for a port-pipe of a stack-unit on a S-Series or Z-Series switch.

Syntax `show ip cam stack-unit {stack-unit-number} [port-set {pipe-number} | vrf vrf-name {ip-address mask [longer-prefixes [ecmp-group detail]]}| ecmp-group {detail | member-info [detail [group-index index-number]]}| summary]`

Parameters	stack-unit-number	Enter the stack-unit ID.
	port-set pipe-number	Enter the keyword <code>port-set</code> then the number of the stack unit's port-pipe.
	vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF to display CAM entries corresponding to that VRF.
	network mask [longer-prefixes [ecmp-group detail]]	(OPTIONAL) Enter the IP address and mask of a route to CAM entries for that route only. You can enter one of the following keywords to filter results. <ul style="list-style-type: none">• Enter the keyword <code>longer-prefixes</code> to view routes with a common prefix.• Enter the keyword <code>ecmp-group detail</code> to view the ECMP group index.
	ecmp-group {detail member-info [detail [group-index index-number]]}	(OPTIONAL) Enter the keyword <code>ecmp-group</code> then one of the following keywords to filter results. <ul style="list-style-type: none">• Enter the keyword <code>detail</code> to view the ECMP group index.• Enter the keyword <code>member-info</code> to view the member information for the ECMP group.• Enter the keyword <code>member-info detail</code> to view detailed ECMP membership and n-hop information.• Enter the keyword <code>group-index</code> then the index number to show ECMP membership per group. The range is from 0 to 1022.
	summary	(OPTIONAL) Enter the keyword <code>summary</code> to view a table listing route prefixes and the total number routes which can be entered in to CAM.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Increased the stacking range to 12 units in S3100 series.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added support for up to seven stack members.
7.6.1.0	Introduced on the S-Series.

Usage Information

The following describes the `show ip cam` command shown in the following example.

Field	Description
Destination	Displays the destination route of the index.
EC	Displays 1 if the route is an ECMP route. Else, displays 0.
C	This is the CPU bit. If it displays 1, then it indicates that a packet hitting this entry will be forwarded to the CPU.
V Id	Displays the VLAN ID. If the entry is 0, the entry is not part of a VLAN.
Mac Addr	Displays the next-hop router's MAC address.
Port	Displays the egress interface. <ul style="list-style-type: none">● CP = control processor● Gi = Gigabit Ethernet interface● Te = 10-Gigabit Ethernet interface

Example

```
DellEMC# show ip cam stack-unit 3 po 0 1.1.1.0/24 longer-prefixes
```

Destination	EC	C	VId	Mac-Addr	Port
1.1.1.2/32	0	0	3000	00:05:00:00:00:02	Te 3/44
1.1.1.1/32	0	1	0	00:00:00:00:00:00	CP
1.1.1.0/24	0	1	0	00:00:00:00:00:00	CP

```
DellEMC#
```

Example (ECMP-Group)

```
DellEMC# show ip cam stack-unit 3 po 0 ecmp-group detail
```

Destination	EC	C	VId	Mac-Addr	Port	ECMP Group-Index
1.1.1.2/32	0	0	1000	00:01:00:00:00:02	Te 3/42	-
2.1.1.2/32	0	0	20	00:03:00:00:00:02	Po 10	-
2.1.1.1/32	0	1	0	00:00:00:00:00:00	CP	-
1.1.1.1/32	0	1	0	00:00:00:00:00:00	CP	-
2.1.1.0/24	0	1	0	00:00:00:00:00:00	CP	-
1.1.1.0/24	0	1	0	00:00:00:00:00:00	CP	-
100.1.1.0/24	1	0	20	00:03:00:00:00:02	Po 10	0
100.1.1.0/24	1	0	1000	00:01:00:00:00:02	Te 3/42	0
0.0.0.0/0	0	1	0	00:00:00:00:00:00	CP	-

```
DellEMC#
```

Example (Member-Info)

```
DellEMC# show ip cam stack-unit 3 po 0 ecmp-group member-info detail
```

Group Index	Member Count	Mac-Addr	Port	Vlan ID
0	2	00:03:00:00:00:02	Po 10	20
		00:01:00:00:00:02	Te 3/42	1000

```
DellEMC#
```

show ip fib stack-unit

View all Forwarding Information Base (FIB) entries of a specific stack-unit.

Syntax

```
show ip fib stack-unit stack-unit-number vrf vrf-name [ip-address [mask]  
[longer-prefixes] | summary]
```

Parameters

- stack-unit-number*** Enter the stack unit ID.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to view FIB entries corresponding to that VRF.

- ip-address mask*** (OPTIONAL) Enter the IP address of the network destination to view only information on that destination. Enter the IP address in dotted decimal format (A.B.C.D). Enter the mask in slash prefix format (/X).
- longer-prefixes** (OPTIONAL) Enter the keywords `longer-prefixes` to view all routes with a common prefix.
- summary** (OPTIONAL) Enter the keyword `summary` to view the total number of prefixes in the FIB.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added support for up to seven stack members.
7.6.1.0	Introduced on the S-Series.

Usage Information The following describes the `show ip fib stack-unit` command shown in the following example.

Field	Description
Destination	Lists the destination IP address.
Gateway	Displays either the word "direct" and an interface for a directly connected route or the remote IP address used to forward the traffic.
First-Hop	Displays the first hop IP address.
Mac-Addr	Displays the MAC address.
Port	Displays the egress-port information.
Vid	Displays the VLAN ID. If no VLAN is assigned, zero (0) is listed.
EC	Displays the number of ECMP paths.

If weighted ECMP is enabled, then the `show ip fib stack-unit` command display a new column named W-EC (Weighted ECMP). This column displays either a value of `1` or `0` depending on whether or not a route is assigned with a weight.

Example

```
DellEMC# show ip fib stack-unit 1
-----
Destination Gateway First-Hop Mac-Addr Port Vid EC
```

```

1.1.1.2/32    via 1.1.1.2, V1 1000    1.1.1.2    00:01:00:00:00:02    Te 3/42    1000    0
2.1.1.2/32    via 2.1.1.2, V1 20     2.1.1.2    00:03:00:00:00:02    Po 10     20    0
0.0.0.0/0     -                      0.0.0.0    00:00:00:00:00:00    CP        0    0
1.1.1.0/24    Direct, V1 1000        0.0.0.0    00:00:00:00:00:00    CP        1000  0
1.1.1.1/32    via 127.0.0.1          127.0.0.1  00:00:00:00:00:00    CP        0    0
2.1.1.0/24    Direct, V1 20          0.0.0.0    00:00:00:00:00:00    CP        20    0
2.1.1.1/32    via 127.0.0.1          127.0.0.1  00:00:00:00:00:00    CP        0    0
100.1.1.0/24 via 1.1.1.2, V1 1000    1.1.1.2    00:01:00:00:00:02    Te 3/42    1000  1
100.1.1.0/24 via 2.1.1.2, V1 20     2.1.1.2    00:03:00:00:00:02    Po 10     20    1
DellEMC#

DellEMC# show ip route
S    10.1.1.0/24          via 1.1.1.2, V1 10
S    20.1.1.0/24          via 2.1.1.2, V1 20
S    100.1.1.0/24        via 3.1.1.2, V1 30
S    100.1.1.0/24        via 10.1.1.0, weight 7
S    100.1.1.0/24        via 20.1.1.0, weight 1

```

Example (Show command output with Weighted ECMP Enabled)

```

DellEMC# show ip fib stack-unit 1
Destination Gateway First-Hop Mac-Addr Port Vid EC RC W
-----
0.0.0.0/0 - 0.0.0.0 00:00:00:00:00:00 CP 0 0 --
1.1.0/24 Direct, Lo 0 0.0.0.0 00:00:00:00:00:00 CP 0 0 --
1.1.1.1/32 via 127.0.0.1 127.0.0.1 00:00:00:00:00:00 CP 0 0 --

```

The RC and W columns in the show output appear only if the weighted ECMP is enabled using the `ip ecmp weighted` command.

Related Commands

- [clear ip fib stack-unit](#) — clear FIB entries on a specified stack-unit.
- [ip ecmp weighted](#) — enable weighted ECMP calculations.

show ip flow

Show how a Layer 3 packet is forwarded when it arrives at a particular interface.

Syntax

```
show ip flow interface interface {source-ip address destination-ip address}
{protocol number [tcp | udp]} {src-port number destination-port number}
```

Parameters

- interface**
interface Enter the keyword *interface* then one of the following interface keywords.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- source-ip address** Enter the keywords *source-ip* then the IP source address in IP address format.
- destination-ip address** Enter the keywords *destination-ip* then the IP destination address in IP address format.
- protocol number [tcp | udp]** Enter the keyword *protocol* then one of the protocol type keywords: `tcp`, `udp`, or *protocol number*. The protocol number range is from 0 to 255. .
- src-port number** Enter the keywords *src-port* then the source port number.
- destination-port number** Enter the keywords *destination-port* then the destination port number.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command provides egress port information for a given IP flow. This information is useful in identifying which interface the packet follows in the case of Port-channel and Equal Cost Multi Paths. Use this command for routed packets only. For switched packets, use the `show port-channel-flow` command.

The `show ip flow` command does not compute the egress port information when `load-balance mac hashing` is also configured due to insufficient information (the egress MAC is not available).

S-Series produces the following error message: `%Error: Unable to read IP route table.`

Example

```
DellEMC# show ip flow interface te 2/42 20.1.1.1 100.1.1.2 protocol tcp
Flow: 20.1.1.1 100.1.1.2 6
Ingress interface: Te 2/42
Egress Interface: Te 2/43
DellEMC#
```

show ip interface

View IP-related information on all interfaces.

S5000

Syntax

```
show ip interface [interface | brief] [configured]
```

Parameters

interface (OPTIONAL)

Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.

- For the Management interface on the stack-unit, enter the keyword `ManagementEthernet` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- For a stack-unit interface, enter the keyword `stack-unit` then the stack unit number.
- For a tunnel interface, enter the keyword `tunnel` then the tunnel interface number. The range is from 1 to 16383.

brief (OPTIONAL) Enter the keyword `brief` to view a brief summary of the interfaces and whether an IP address is assigned.

configured (OPTIONAL) Enter the keyword `configured` to display the physical interfaces with non-default configurations only.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Updated the command output to include the unicast reverse path forwarding (uRPF) status.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
8.1.1.2	Supported on the E-Series E600i.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip interface tengigabitethernet 1/1
TenGigabitEthernet 1/1 is down, line protocol is down
Internet address is not set
IP MTU is 1500 bytes
Directed broadcast forwarding is disabled
Proxy ARP is enabled
```

```

Split Horizon is enabled
Poison Reverse is disabled
ICMP redirects are not sent
ICMP unreachable are not sent
IP unicast RPF check is not supported
DellEMC#

```

```

DellEMC# show ip interface port-channel 128
Port-channel 128 is down, line protocol is down
Internet address is 10.1.1.1/16
Broadcast address is 10.1.255.255
Address determined by user input
IP MTU is 1500 bytes
Directed broadcast forwarding is disabled
Proxy ARP is enabled
Split Horizon is enabled
Poison Reverse is disabled
ICMP redirects are not sent
ICMP unreachable are not sent
IP unicast RPF check is not supported
DellEMC#

```

```

DellEMC#show ip interface vlan 1
Vlan 1 is down, line protocol is down
Internet address is not set
IP MTU is 1500 bytes
Directed broadcast forwarding is disabled
Proxy ARP is enabled
Split Horizon is enabled
Poison Reverse is disabled
ICMP redirects are not sent
ICMP unreachable are not sent
IP unicast RPF check is not supported
DellEMC#

```

Usage Information

The following describes the `show ip interface brief` command shown in the following example.

Fields	Description
Interface	Displays type of interface and the associated slot and port number.
IP-Address	Displays the IP address for the interface, if configured.
Ok?	Indicates if the hardware is functioning properly.
Method	Displays "Manual" if the configuration is read from the saved configuration.
Status	States whether the interface is enabled (up) or disabled (administratively down).
Protocol	States whether IP is enabled (up) or disabled (down) on the interface.

Example (Brief)

```

DellEMC# show ip interface brief
Interface          IP-Address  OK? Method  Status
Protocol
TenGigabitEthernet 1/0  unassigned NO  Manual  administratively down
down
TenGigabitEthernet 1/1  unassigned NO  Manual  administratively down
down
TenGigabitEthernet 1/2  unassigned YES Manual  up
TenGigabitEthernet 1/3  unassigned YES Manual  up
TenGigabitEthernet 1/4  unassigned YES Manual  up
TenGigabitEthernet 1/5  10.10.10.1 YES Manual  up
TenGigabitEthernet 1/6  unassigned NO  Manual  administratively down
down

```

show ip management-route

View the IP addresses assigned to the Management interface.

- Syntax** `show ip management-route [all | connected | summary | static]`
- Parameters**
- all** (OPTIONAL) Enter the keyword `all` to view all IP addresses assigned to all Management interfaces on the switch.
 - connected** (OPTIONAL) Enter the keyword `connected` to view only routes directly connected to the Management interface.
 - summary** (OPTIONAL) Enter the keyword `summary` to view a table listing the number of active and non-active routes and their sources.
 - static** (OPTIONAL) Enter the keyword `static` to view non-active routes also.
- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip management-route

Destination      Gateway          State
-----
10.1.2.0/24      ManagementEthernet 1/1  Connected
172.16.1.0/24    10.1.2.4        Active
DellEMC#
```

show ip protocols

View information on all routing protocols enabled and active on the switch.

Syntax `show ip protocols`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Regular evaluation optimization enabled/disabled added to display output.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DelleMC# show ip protocols
Routing Protocol is "bgp 1"
  Cluster Id is set to 20.20.20.3
  Router Id is set to 20.20.20.3
  Fast-external-fallover enabled
  Regular expression evaluation optimization enabled
  Capable of ROUTE_REFRESH
  For Address Family IPv4 Unicast
    BGP table version is 0, main routing table version 0
    Distance: external 20 internal 200 local 200
  Neighbor(s):
    Address : 20.20.20.2
    Filter-list in : foo
    Route-map in : foo
    Weight : 0
    Address : 5::6
    Weight : 0
DelleMC#
```

show ip route

View information, including how they were learned, about the IP routes on the switch.

Syntax `show ip route [vrf vrf-name] hostname | ip-address [mask] [longer-prefixes] | list prefix-list | protocol [process-id | routing-tag] | all | connected | static | summary`

Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> and then the VRF name to list the routes in the route table of a specific VRF.
	ip-address	(OPTIONAL) Specify a name of a device or the IP address of the device to view more detailed information about the route.
	mask	(OPTIONAL) Specify the network mask of the route. Use this parameter with the IP address parameter.
	longer-prefixes	(OPTIONAL) Enter the keywords <code>longer-prefixes</code> to view all routes with a common prefix.
	list prefix-list	(OPTIONAL) Enter the keyword <code>list</code> and the name of a configured prefix list. For more information, refer to the show ip route list command.
	protocol	(OPTIONAL) Enter the name of a routing protocol (<code>bgp</code> , <code>isis</code> , <code>ospf</code> , <code>rip</code>) or the keywords <code>connected</code> or <code>static</code> .  NOTE: <code>bgp</code> , <code>isis</code> , <code>ospf</code> , and <code>rip</code> . <ul style="list-style-type: none">• If you enter <code>bgp</code>, you can include the BGP <code>as-number</code>.• If you enter <code>isis</code>, you can include the ISIS <code>routing-tag</code>.• If you enter <code>ospf</code>, you can include the OSPF <code>process-id</code>.
	process-id	(OPTIONAL) Specify that only OSPF routes with a certain process ID must be displayed.
	routing-tag	(OPTIONAL) Specify that only ISIS routes with a certain routing tag must be displayed.
	connected	(OPTIONAL) Enter the keyword <code>connected</code> to view only the directly connected routes.
	all	(OPTIONAL) Enter the keyword <code>all</code> to view both active and non-active routes.
	static	(OPTIONAL) Enter the keyword <code>static</code> to view only routes the <code>ip route</code> command configures.
	summary	(OPTIONAL) Enter the keyword <code>summary</code> . For more information, refer to the show ip route summary command.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.9.1.0	Introduced VRF on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show ip route all` command in the following example.

Field	Description
(undefined)	<p>Identifies the type of route:</p> <ul style="list-style-type: none"> ● C = connected ● S = static ● R = RIP ● B = BGP ● IN = internal BGP ● EX = external BGP ● LO = Locally Originated ● O = OSPF ● IA = OSPF inter area ● N1 = OSPF NSSA external type 1 ● N2 = OSPF NSSA external type 2 ● E1 = OSPF external type 1 ● E2 = OSPF external type 2 ● i = IS-IS ● L1 = IS-IS level-1 ● L2 = IS-IS level-2 ● IA = IS-IS inter-area ● * = candidate default ● > = non-active route ● + = summary routes <p>The weight for weighted ECMP route calculations is displayed for each path in the route in <code>show ip route</code> command. The ECMP weight is displayed only if weighted ECMP is enabled using the <code>ip ecmp weighted</code> command is enabled.</p> <p>If weighted ECMP is disabled, the <code>show ip route</code> command does not show the weighted ECMP route information.</p>
Destination	Identifies the route's destination IP address
Gateway	Identifies whether the route is directly connected and on which interface the route is configured.
Dist/Metric	Identifies if the route has a specified distance or metric.
Last Change	Identifies when the route was last changed or configured.

Example

```
DelleMC# show ip route all

Codes:C- connected, S - static, R - RIP
      B- BGP, IN - internal BGP, EX - external BGP, LO - Locally
Originated
      O- OSPF, IA - OSPF inter area N1 - OSPF NSSA external type 1
      N2- OSPF NSSA external type 2, E1 - OSPF external type 1
      E2- OSPF external type 2, i - IS-IS, L1 - IS-IS level-1
      L2- IS-IS level-2, IA - IS-IS inter area, * - candidate default
      >- non-active route + - summary route

Gateway of last resort is not set

      Destination          Gateway                    Dist/Metric Last Change
-----
R   3.0.0.0/8             via 100.10.10.10, Te 2/8 120/1      00:07:12
                        via 101.10.10.10, Te 2/9
      100.10.10.0/24      Direct, Te 2/8              0/0        00:08:54
> R 100.10.10.0/24      Direct, Te 2/8              120/0      00:08:54
C   101.10.10.0/24      Direct, Te 2/9              0/0        00:09:15
> R 101.10.10.0/24      Direct, Te 2/9              120/0      00:09:15
DelleMC#
```

Example (Summary)

```
DelleMC# show ip route summary

Route Source  Active Routes  Non-active Routes
connected     2                0
static        1                0
Total         3                0
Total 3 active route(s) using 612 bytes
R1_E600i>show ip route static ?
|
|           Pipe through a command
<cr>
R1_E600i>show ip route static
      Destination          Gateway                    Dist/Metric Last Change
-----
*S  0.0.0.0/0             via 10.10.91.9, Te 1/2      1/0        3d2h
DelleMC>
```

Example (vrf)

```
DelleMC# show ip route vrf test1

Codes: C - connected, S - static, R - RIP,
      B - BGP, IN - internal BGP, EX - external BGP, LO - Locally
Originated,
      O - OSPF, IA - OSPF inter area, N1 - OSPF NSSA external type 1,
      N2 - OSPF NSSA external type 2, E1 - OSPF external type 1,
      E2 - OSPF external type 2, i - IS-IS, L1 - IS-IS level-1,
      L2 - IS-IS level-2, IA - IS-IS inter area, * - candidate default,
      > - non-active route, + - summary route

Gateway of last resort is not set

      Destination          Gateway                    Dist/Metric Last Change
-----
C   13.0.0.0/24           Direct, Te 1/17            0/0        00:00:04
```

Example (With Weighted ECMP Enabled)

```
DelleMC(conf)# ip route 1.1.1.0/24 6.6.6.2 weight 100
DelleMC(conf)# ip route 1.1.1.0/24 6.6.6.2 weight 200
DelleMC(conf)# do show ip route
Codes: C - connected, S - static, R - RIP,
      B - BGP, IN - internal BGP, EX - external BGP, LO - Locally Originated,
      O - OSPF, IA - OSPF inter area, N1 - OSPF NSSA external type 1,
      N2 - OSPF NSSA external type 2, E1 - OSPF external type 1,
      E2 - OSPF external type 2, i - IS-IS, L1 - IS-IS level-1,
      L2 - IS-IS level-2, IA - IS-IS inter area, * - candidate default,
      > - non-active route, + - summary route
Gateway of last resort is not set
      Destination          Gateway                    Dist/Metric
Last Change
-----
```

```

-----
S    1.1.1.0/24          4.4.4.2, via Te 1/4 , weight 100          1/0    00:00:01
      6.6.6.2, via Te 1/16, weight 200
C    4.4.4.0/24          Direct, Te 1/4                             0/0    00:01:32
C    6.6.6.0/24          Direct, Te 1/16                             0/0    00:01:25

DelleMC# show ip route 1.1.1.0/24
Routing entry for 1.1.1.0/24
  Known via "static", distance 1, metric 0
  Last update 00:05:01 ago
  Routing Descriptor Blocks:
    * 4.4.4.2, via TenGigabitEthernet 1/4 weight 100
    * 6.6.6.2, via TenGigabitEthernet 1/16 weight 200
DelleMC(conf)#

```

Example (With Weighted ECMP Disabled)

```

DelleMC(conf)# ip route 1.1.1.0/24 6.6.6.2 weight 100
DelleMC(conf)# ip route 1.1.1.0/24 6.6.6.2 weight 200
DelleMC(conf)# do show ip route
Codes: C - connected, S - static, R - RIP,
       B - BGP, IN - internal BGP, EX - external BGP, LO - Locally Originated,
       O - OSPF, IA - OSPF inter area, N1 - OSPF NSSA external type 1,
       N2 - OSPF NSSA external type 2, E1 - OSPF external type 1,
       E2 - OSPF external type 2, i - IS-IS, L1 - IS-IS level-1,
       L2 - IS-IS level-2, IA - IS-IS inter area, * - candidate default,
       > - non-active route, + - summary route
Gateway of last resort is not set
  Destination          Gateway                Dist/Metric  Last
Change                -----
-----
S    1.1.1.0/24          4.4.4.2, via Te 1/4          1/0    00:00:01
      6.6.6.2, via Te 1/16
C    4.4.4.0/24          Direct, Te 1/4                0/0    00:01:32
C    6.6.6.0/24          Direct, Te 1/16                0/0    00:01:25

DelleMC(conf)#do show ip route 1.1.1.0/24
Routing entry for 1.1.1.0/24
  Known via "static", distance 1, metric 0
  Last update 00:05:01 ago
  Routing Descriptor Blocks:
    * 4.4.4.2, via TenGigabitEthernet 1/4
    * 6.6.6.2, via TenGigabitEthernet 1/16
DelleMC(conf)#

```

show ip route list

Display IP routes in an IP prefix list.

Syntax `show ip route [vrf vrf-name] list prefix-list`

Parameters

- prefix-list** Enter the name of a configured prefix list.
- vrf vrf-name** Enter the keyword `vrf` followed by the name of the VRF to display IP routes in an IP prefix list corresponding to that VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DelleMC# show ip route list test

Codes:C- connected, S - static, R - RIP,
      B- BGP, IN - internal BGP, EX - external BGP, LO - Locally
Originated,
      O- OSPF, IA - OSPF inter area, N1 - OSPF NSSA external type 1,
      N2- OSPF NSSA external type 2, E1 - OSPF external type 1,
      E2- OSPF external type 2, i - IS-IS, L1 - IS-IS level-1,
      L2- IS-IS level-2, IA - IS-IS inter area, * - candidate default,
      >- non-active route, + - summary route

Gateway of last resort is not set

      Destination          Gateway                Dist/Metric  Last Change
      -----
R    2.1.0.0/24            via 2.1.4.1, Te 4/43   120/2        3d0h
R    2.1.1.0/24            via 2.1.4.1, Te 4/43   120/2        3d1h
R    2.1.2.0/24            via 2.1.4.1, Te 4/43   120/1        3d0h
R    2.1.3.0/24            via 2.1.4.1, Te 4/43   120/1        3d1h
C    2.1.4.0/24            Direct, Te 4/43        0/0          3d1h
```

Related Commands

- [ip prefix-list](#) — enter CONFIGURATION-IP PREFIX-LIST mode and configures a prefix list.
- [show ip prefix-list summary](#) — display a summary of the configured prefix lists.

show ip route summary

View a table summarizing the IP routes in the switch.

Syntax `show ip route [vrf vrf-name] [summary]`

Parameters `vrf vrf-name` Enter the keyword `vrf` followed by the name of the VRF to view information on the IP routes corresponding to that VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show ip route summary` shown in the following example.

Column Heading	Description
Route Source	Identifies how the route is configured in Dell EMC Networking OS.
Active Routes	Identifies the best route if a route is learned from two protocol sources.
Non-active Routes	Identifies the back-up routes when a route is learned by two different protocols. If the best route or active route goes down, the non-active route becomes the best route.
ospf 100	If routing protocols (OSPF, RIP) are configured and routes are advertised, then information on those routes is displayed.
Total 1388 active...	Displays the number of active and non-active routes and the memory usage of those routes. If there are no routes configured in the Dell EMC Networking OS, this line does not appear.

Example

```
DellEMC> show ip route summary

Route Source      Active Routes  Non-active Routes
connected         17             0
static            3              0
ospf 100          1368           2
Intra-area: 762  Inter-area: 1  External-1: 600  External-2: 5
Total             1388           2
Total 1388 active route(s) using 222440 bytes
Total 2 non-active route(s) using 128 bytes
DellEMC>
```

Related Commands

- `show ip route` — display information about the routes found in the switch.

show ip traffic

View IP, ICMP, UDP, TCP and ARP traffic statistics.

Syntax `show ip traffic [all | cp | rp1 | rp2]`
 **NOTE:** These options are supported only on the E-Series.

Parameters

all	(OPTIONAL) Enter the keyword <code>all</code> to view statistics from all processors. If you do not enter a keyword, you also view all statistics from all processors.
cp	(OPTIONAL) Enter the keyword <code>cp</code> to view only statistics from the Control Processor.
rp1	(OPTIONAL) Enter the keyword <code>rp1</code> to view only the statistics from Route Processor 1.
rp2	(OPTIONAL) Enter the keyword <code>rp2</code> to view only the statistics from Route Processor 2.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	F10 Monitoring MIB available for the <code>ip traffic statistics</code> command.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information The following describes the `show ip traffic` summary shown in the following example.

Keyword	Definition
unknown protocol...	No receiver for these packets. Counts packets whose protocol type field is not recognized by Dell EMC Networking OS.
not a gateway...	Packets can not be routed; the host/network is unreachable.

Keyword	Definition
security failures...	Counts the number of received unicast/multicast packets that could not be forwarded due to: <ul style="list-style-type: none"> • route not found for unicast/multicast; ingress interfaces do not belong to the destination multicast group • destination IP address belongs to reserved prefixes; the host/network is unreachable
bad options...	Unrecognized IP option on a received packet.
Fragments:	IP fragments received.
... reassembled	Number of IP fragments that were reassembled.
... timeouts	Number of times a timer expired on a reassembled queue.
... too big	Number of invalid IP fragments received.
... couldn't fragment	Number of packets that could not be fragmented and forwarded.
...encapsulation failed	Counts packets which could not be forwarded due to ARP resolution failure. Dell EMC Networking OS sends an arp request prior to forwarding an IP packet. If a reply is not received, Dell EMC Networking OS repeats the request three times. These packets are counted in encapsulation failed.
Rcvd:	
...short packets	The number of bytes in the packet are too small.
...bad length	The length of the packet was not correct.
...no port broadcasts	The incoming broadcast/multicast packet did not have any listener.
...socket full	The applications buffer is full and the incoming packet are dropped.

The Dell Monitoring MIB provides access to the following statistics.

- **IP Statistics: Bcast: Received:** Object = f10BcastPktRecv, OIDs = 1.3.6.1.4.1.6027.3.3.5.1.1
- **IP Statistics: Bcast: Sent:** Object = f10BcastPktSent, OIDs = 1.3.6.1.4.1.6027.3.3.5.1.2
- **IP Statistics: Mcast: Received:** Object = f10McastPktRecv, OIDs = 1.3.6.1.4.1.6027.3.3.5.1.3
- **IP Statistics: Mcast: Sent:** Object = f10McastPktSent, OIDs = 1.3.6.1.4.1.6027.3.3.5.1.4
- **ARP Statistics: Rcvd: Request:** Object = f10ArpReqRecv, OIDs = 1.3.6.1.4.1.6027.3.3.5.2.1
- **ARP Statistics: Rcvd: Replies:** Object = f10ArpReplyRecv, OIDs = 1.3.6.1.4.1.6027.3.3.5.2.3
- **ARP Statistics: Sent: Request:** Object = f10ArpReqSent, OIDs = 1.3.6.1.4.1.6027.3.3.5.2.2
- **ARP Statistics: Sent: Replies:** Object = f10ArpReplySent, OIDs = 1.3.6.1.4.1.6027.3.3.5.2.4
- **ARP Statistics: Sent: Proxy:** Object = f10ArpProxySent, OIDs = 1.3.6.1.4.1.6027.3.3.5.2.5

Example

```
DelleMC# show ip traffic
Control Processor IP Traffic:

IP statistics:
  Rcvd: 23857 total, 23829 local destination
        0 format errors, 0 checksum errors, 0 bad hop count
        0 unknown protocol, 0 not a gateway
        0 security failures, 0 bad options
  Frags: 0 reassembled, 0 timeouts, 0 too big
        0 fragmented, 0 couldn't fragment
  Bcast: 28 received, 0 sent; Mcast: 0 received, 0 sent
  Sent: 16048 generated, 0 forwarded
        21 encapsulation failed, 0 no route
ICMP statistics:
  Rcvd: 0 format errors, 0 checksum errors, 0 redirects, 0 unreachable
        0 echo, 0 echo reply, 0 mask requests, 0 mask replies, 0 quench
        0 parameter, 0 timestamp, 0 info request, 0 other
  Sent: 0 redirects, 0 unreachable, 0 echo, 0 echo reply
        0 mask requests, 0 mask replies, 0 quench, 0 timestamp
        0 info reply, 0 time exceeded, 0 parameter problem
```

```

UDP statistics:
  Rcvd: 0 total, 0 checksum errors, 0 no port
        0 short packets, 0 bad length, 0 no port broadcasts, 0 socket full
  Sent: 0 total, 0 forwarded broadcasts
TCP statistics:
  Rcvd: 23829 total, 0 checksum errors, 0 no port
  Sent: 16048 total
ARP statistics:
  Rcvd: 156 requests, 11 replies
  Sent: 21 requests, 10 replies (0 proxy)
Routing Processor1 IP Traffic:

```

show tcp statistics

View information on TCP traffic through the switch.

Syntax	<code>show tcp statistics {all cp}</code>	
Parameters	all	Enter the keyword <code>all</code> to view all TCP information.
	cp	Enter the keyword <code>cp</code> to view only TCP information from the Control Processor.
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
6.4.1.0	Introduced

Usage Information The following describes the `show tcp statistics cp` command shown in the following example.

Field	Description
Rcvd:	Displays the number and types of TCP packets received by the switch. <ul style="list-style-type: none"> Total = total packets received no port = number of packets received with no designated port

Field	Description
0 checksum error...	Displays the number of packets received with the following: <ul style="list-style-type: none"> • checksum errors • bad offset to data • too short
329 packets...	Displays the number of packets and bytes received in sequence.
17 dup...	Displays the number of duplicate packets and bytes received.
0 partially...	Displays the number of partially duplicated packets and bytes received.
7 out-of-order...	Displays the number of packets and bytes received out of order.
0 packets with data after window	Displays the number of packets and bytes received that exceed the switch's window size.
0 packets after close	Displays the number of packet received after the TCP connection was closed.
0 window probe packets...	Displays the number of window probe and update packets received.
41 dup ack...	Displays the number of duplicate acknowledgement packets and acknowledgement packets with data received.
10184 ack...	Displays the number of acknowledgement packets and bytes received.
Sent:	Displays the total number of TCP packets sent and the number of urgent packets sent.
25 control packets...	Displays the number of control packets sent and the number retransmitted.
11603 data packets...	Displays the number of data packets sent.
24 data packets retransmitted	Displays the number of data packets resent.
355 ack..	Displays the number of acknowledgement packets sent and the number of packet delayed.
0 window probe...	Displays the number of window probe and update packets sent.
7 Connections initiated...	Displays the number of TCP connections initiated, accepted, and established.
14 Connections closed...	Displays the number of TCP connections closed, dropped.
20 Total rxmt...	Displays the number of times the switch tried to re-send data and the number of connections dropped during the TCP retransmit timeout period.
0 Keepalive....	Lists the number of keepalive packets in timeout, the number keepalive probes and the number of TCP connections dropped during keepalive.

Example

```
DellEMC# show tcp stat cp

Control Processor TCP:
Rcvd: 10585 Total, 0 no port
  0 checksum error, 0 bad offset, 0 too short
 329 packets (1263 bytes) in sequence
 17 dup packets (6 bytes)
 0 partially dup packets (0 bytes)
 7 out-of-order packets (0 bytes)
 0 packets ( 0 bytes) with data after window
 0 packets after close
 0 window probe packets, 41 window update packets
 41 dup ack packets, 0 ack packets with unsend data
```

```
10184 ack packets (12439508 bytes)
Sent: 12007 Total, 0 urgent packets
25 control packets (including 24 retransmitted)
11603 data packets (12439677 bytes)
24 data packets (7638 bytes) retransmitted
355 ack only packets (41 delayed)
0 window probe packets, 0 window update packets
7 Connections initiated, 8 connections accepted, 15 connections established
14 Connections closed (including 0 dropped, 0 embryonic dropped)
20 Total rxmt timeout, 0 connections dropped in rxmt timeout
0 Keepalive timeout, 0 keepalive probe, 0 Connections dropped in keepalive
```

Related Commands

- [show ip cam stack-unit](#) — display the CAM table.

IPv6 Access Control Lists (IPv6 ACLs)

IPv6 ACLs and IPv6 Route Map commands are supported on Dell EMC Networking OS.

NOTE: For IPv4 ACL commands, see [Access Control Lists \(ACL\)](#).

Important Points to Remember

- Certain platforms require manual CAM usage space allotment. For more information, see [cam-acl](#).
- Egress IPv6 ACL and IPv6 ACL on the Loopback interface is not supported.
- Reference to an empty ACL permits any traffic.
- ACLs are not applied to self-originated traffic (for example, Control Protocol traffic not affected by IPv6 ACL because the routed bit is not set for Control Protocol traffic and for egress ACLs the routed bit must be set).
- You can use the same access list name for both IPv4 and IPv6 ACLs.
- You can apply both IPv4 and IPv6 ACLs on an interface at the same time.
- You can apply IPv6 ACLs on physical interfaces and a logical interfaces (Port-channel/VLAN).
- Non-contiguous masks are not supported in source or destination addresses in IPv6 ACL entries.
- Because the prefix mask is specified in /x format in IPv6 ACLs, inverse mask is not supported.

Topics:

- [IPv6 ACL Commands](#)
- [cam-acl](#)
- [cam-acl-egress](#)
- [clear counters ipv6 access-group](#)
- [deny](#)
- [deny icmp](#)
- [deny tcp](#)
- [deny udp](#)
- [ipv6 access-group](#)
- [ipv6 control-plane egress-filter](#)
- [ipv6 access-list](#)
- [permit](#)
- [permit icmp](#)
- [permit tcp](#)
- [permit udp](#)
- [remark](#)
- [resequence access-list](#)
- [resequence prefix-list ipv6](#)
- [seq](#)
- [show cam-acl](#)
- [show cam-acl-egress](#)
- [show config](#)
- [show ipv6 accounting access-list](#)
- [show running-config acl](#)
- [test cam-usage](#)
- [IPv6 Route Map Commands](#)
- [match ipv6 address](#)
- [match ipv6 next-hop](#)
- [match ipv6 route-source](#)
- [route-map](#)

- [set ipv6 next-hop](#)
- [show config](#)
- [show route-map](#)

IPv6 ACL Commands

The following commands configure IPv6 ACLs.

cam-acl

Allocate space for IPv6 ACLs.

Syntax	<code>cam-acl {default l2acl 1-10 ipv4acl 1-10 ipv6acl 0-10 ipv4qos 1-10 l2qos 1-10}</code>																																		
Parameters	<p>default Use the default CAM profile settings, and set the CAM as follows:</p> <ul style="list-style-type: none"> • L3 ACL (ipv4acl): 6 • L2 ACL(l2acl): 5 • IPv6 L3 ACL (ipv6acl): 0 • L3 QoS (ipv4qos): 1 • L2 QoS (l2qos): 1 <p>l2acl 1-10 ipv4acl 1-10 ipv6acl 0-10 ipv4qos 1-10 l2qos 1-10 Allocate space to support IPv6 ACLs. Enter all of the profiles and a range. Enter the CAM profile name then the amount to be allotted. The total space allocated must equal 13. The <code>ipv6acl</code> range must be a factor of 2 (2, 4, 6, 8, 10).</p>																																		
Command Modes	CONFIGURATION																																		
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																																		
	<table border="0"> <thead> <tr> <th style="text-align: left;">Version</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> <tr> <td>9.8(1.0)</td> <td>Introduced on the Z9100-ON.</td> </tr> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.7(0.0)</td> <td>Introduced on the S6000-ON.</td> </tr> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>9.0.2.0</td> <td>Introduced on the S6000.</td> </tr> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.3.11.1</td> <td>Introduced on the Z9000.</td> </tr> <tr> <td>8.3.7.0</td> <td>Introduced on the S4810.</td> </tr> <tr> <td>8.4.2.0</td> <td>Introduced on the E-Series.</td> </tr> <tr> <td>8.2.1.0</td> <td>Introduced on the S-Series.</td> </tr> <tr> <td>7.8.1.0</td> <td>Introduced on the C-Series.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.	9.8(1.0)	Introduced on the Z9100-ON.	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.7(0.0)	Introduced on the S6000-ON.	9.2(1.0)	Introduced on the Z9500.	9.0.2.0	Introduced on the S6000.	8.3.19.0	Introduced on the S4820T.	8.3.11.1	Introduced on the Z9000.	8.3.7.0	Introduced on the S4810.	8.4.2.0	Introduced on the E-Series.	8.2.1.0	Introduced on the S-Series.	7.8.1.0	Introduced on the C-Series.
Version	Description																																		
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.																																		
9.10(0.0)	Introduced on the S3148.																																		
9.10(0.0)	Introduced on the S6100-ON.																																		
9.8(2.0)	Introduced on the S3100 series.																																		
9.8(1.0)	Introduced on the Z9100-ON.																																		
9.8(0.0P5)	Introduced on the S4048-ON.																																		
9.8(0.0P2)	Introduced on the S3048-ON.																																		
9.7(0.0)	Introduced on the S6000-ON.																																		
9.2(1.0)	Introduced on the Z9500.																																		
9.0.2.0	Introduced on the S6000.																																		
8.3.19.0	Introduced on the S4820T.																																		
8.3.11.1	Introduced on the Z9000.																																		
8.3.7.0	Introduced on the S4810.																																		
8.4.2.0	Introduced on the E-Series.																																		
8.2.1.0	Introduced on the S-Series.																																		
7.8.1.0	Introduced on the C-Series.																																		

Usage Information

For the new settings to take effect, save the new CAM settings to the startup-config (`write-mem` or `copy run start`) then reload the system.

The total amount of space allowed is 16 FP Blocks. System flow requires three blocks and these blocks cannot be reallocated. The `ipv4acl` profile range is from 1 to 4.

When configuring space for IPv6 ACLs, the total number of Blocks must equal 13.

Ranges for the CAM profiles are from 1 to 10, except for the `ipv6acl` profile which is from 0 to 10. The `ipv6acl` allocation must be a factor of 2 (2, 4, 6, 8, 10).

cam-acl-egress

Allocate space for IPv6 egress ACLs.

Syntax

```
cam-acl-egress {default | l2acl 1-4 ipv4acl 1-4 ipv6acl 0-4}
```

Parameters

default

Use the default CAM profile settings, and set the CAM as follows:

- L2 ACL(l2acl): **1**
- L3 ACL (ipv4acl): **1**
- IPv6 L3 ACL (ipv6acl): **2**

l2acl 1-4 ipv4acl 1-4 ipv6acl 0-4

Allocate space to support IPv6 ACLs. Enter all of the profiles and a range. Enter the CAM profile name then the amount to be allotted. The total space allocated must equal 4. The `ipv6acl` range must be a factor of 2.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.4.2.0	Introduced on the E-Series.
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.

Usage Information

For the new settings to take effect, save the new CAM settings to the startup-config (`write-mem` or `copy run start`), then reload the system.

The total amount of space allowed is 4 FP Blocks.

Example

```
Dell EMC# configure
Dell EMC(conf)# cam-acl-egress ?
default          Reset Egress CAM ACL entries to default setting
l2acl            Set L2-ACL entries
Dell EMC(conf)# cam-acl-egress l2acl ?
<1-4>           Number of FP blocks for l2acl
Dell EMC(conf)# cam-acl-egress l2acl 1 ?
ipv4acl         Set IPV4-ACL entries
Dell EMC(conf)# cam-acl-egress l2acl 1 ipv4acl 1 ?
ipv6acl         Set IPV6-ACL entries
Dell EMC(conf)# cam-acl-egress l2acl 1 ipv4acl 1 ipv6acl ?
<0-4>           Number of FP blocks for IPV6 (multiples of 2)
Dell EMC(conf)# cam-acl-egress l2acl 1 ipv4acl 1 ipv6acl 2
Dell EMC(conf)#
```

clear counters ipv6 access-group

Erase all counters maintained for the IPv6 access lists.

Syntax	<code>clear counters ipv6 access-group [access-list-name]</code>
Parameters	access-list-name (OPTIONAL) Enter the name of a configured access-list, up to 140 characters.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	<p>Version 9.0.2.0 Introduced on the S6000.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.3.11.1 Introduced on the Z9000.</p> <p>Version 8.3.7.0 Introduced on the S4810.</p> <p>Version 8.4.2.1 Introduced on the S-Series.</p> <p>Version 8.2.1.0 Introduced on the E-Series TeraScale.</p> <p>Version 7.8.1.0 Introduced on the C-Series.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale Added the <code>monitor</code> option.</p>

deny

Configure a filter that drops IPv6 packets that match the filter criteria.

Syntax	<code>deny {ipv6-protocol-number icmp ipv6 tcp udp}</code>
	To remove this filter, you have two choices:
	<ul style="list-style-type: none">Use the <code>no seq sequence-number</code> command syntax if you know the filter's sequence numberUse the <code>no deny {ipv6-protocol-number icmp ipv6 tcp udp}</code> command
Parameters	<p>ip-protocol-number Enter an IPv6 protocol number. The range is 0 to 255.</p> <p>icmp Enter the keyword <code>icmp</code> to deny Internet Control Message Protocol version 6.</p> <p>ipv6 Enter the keyword <code>ipv6</code> to deny any Internet Protocol version 6.</p>

tcp	Enter the keyword <code>tcp</code> to deny the Transmission Control protocol.
udp	Enter the keyword <code>udp</code> to deny the User Datagram Protocol.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series TeraScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale Added the <code>monitor</code> option.

deny icmp

Configure a filter to drop all or specific ICMP messages.

Syntax `deny icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address} [message-type] [count [byte]] | [log] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

source address	Enter the IPv6 address of the network or host from which the packets were sent in the <code>x:x:x:x:x</code> format followed by the prefix length in the <code>/x</code> format. The range is <code>/0</code> to <code>/128</code> . The <code>::</code> notation specifies successive hexadecimal fields of zero.
mask	Enter a network mask in <code>/prefix</code> format (<code>/x</code>).
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> followed by the IPv6 address of the host in the <code>x:x:x:x:x</code> format. The <code>::</code> notation specifies successive hexadecimal fields of zero.
destination address	Enter the IPv6 address of the network or host to which the packets are sent in the <code>x:x:x:x:x</code> format followed by the prefix length in the <code>/x</code> format. The range is <code>/0</code> to <code>/128</code> . The <code>::</code> notation specifies successive hexadecimal fields of zero.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
---------	-------------

9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series TeraScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale Added the <code>monitor</code> option.

deny tcp

Configure a filter that drops TCP packets that match the filter criteria.

Syntax

```
deny tcp {source address mask | any | host ipv6-address} [operator port
[port]] {destination address | any | host ipv6-address} [bit] [operator
port [port]] [count [byte]] | [log] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny tcp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

source address	Enter the IPv6 address of the network or host from which the packets were sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.
mask	Enter a network mask in /prefix format (/x).
any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
host ipv6-address	Enter the keyword <code>host</code> followed by the IPv6 address of the host in the x:x:x:x format. The :: notation specifies successive hexadecimal fields of zero.
operator	(OPTIONAL) Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the port command parameter).
port port	Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none"> • 23 = Telnet • 20 and 21 = FTP • 25 = SMTP • 169 = SNMP
destination address	Enter the IPv6 address of the network or host to which the packets are sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.
bit	Enter a flag or combination of bits: <ul style="list-style-type: none"> • <code>ack</code>: acknowledgement field • <code>fin</code>: finish (no more data from the user) • <code>psh</code>: push function

- `rst`: reset the connection
- `syn`: synchronize sequence numbers
- `urg`: urgent field

count (OPTIONAL) Enter the keyword `count` to count packets processed by the filter.

byte (OPTIONAL) Enter the keyword `byte` to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series TeraScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale Added the <code>monitor</code> option.

Usage Information

The C-Series cannot count both packets and bytes, so when you enter the `count byte` options, only bytes are incremented.

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (`gt`, `lt`, `range`) may require more than one entry. The range of ports is configured in the CAM based on bitmask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000 - 8000 uses eight entries in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000111110100000	1111111111100000	4000	4031	32
2	0000111111000000	1111111111100000	4032	4095	64
3	0001000000000000	1111100000000000	4096	6143	2048
4	0001100000000000	1111110000000000	6144	7167	1024
5	0001110000000000	1111111000000000	7168	7679	512
6	0001111000000000	1111111100000000	7680	7935	256
7	0001111100000000	1111111110000000	7936	7999	64
8	0001111101000000	1111111111111111	8000	8000	1
Total Ports: 4001					

Example

An ACL rule with TCP port `lt 1023` takes only one entry in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000000000000000	1111110000000000	0	1023	1024
Total Ports: 1024					

Related Commands

- `deny` – assigns a filter to deny IP traffic.
- `deny udp` – assigns a filter to deny UDP traffic.

deny udp

Configure a filter to drop user datagram protocol (UDP) packets meeting the filter criteria.

Syntax `deny udp {source address mask | any | host ipv6-address} [operator port [port]] {destination address | any | host ipv6-address} [operator port [port]] [count [byte]] | [log] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no deny udp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command

Parameters

source address Enter the IPv6 address of the network or host from which the packets were sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.

mask Enter a network mask in /prefix format (/x).

any Enter the keyword `any` to specify that all routes are subject to the filter.

host ipv6-address Enter the keyword `host` followed by the IPv6 address of the host in the x:x:x:x format. The :: notation specifies successive hexadecimal fields of zero.

operator (OPTIONAL) Enter one of the following logical operand:

- `eq` = equal to
- `neq` = not equal to
- `gt` = greater than
- `lt` = less than
- `range` = inclusive range of ports (you must specify two ports for the port command parameter).

port port Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is 0 to 65535.

destination address Enter the IPv6 address of the network or host to which the packets are sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.

count (OPTIONAL) Enter the keyword `count` to count packets processed by the filter.

byte (OPTIONAL) Enter the keyword `byte` to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series TeraScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale. Added the <code>monitor</code> option.

Usage Information The C-Series cannot count both packets and bytes, so when you enter the `count byte` options, only bytes are incremented.

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (`gt`, `lt`, `range`) may require more than one entry. The range of ports is configured in the CAM based on bitmask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range of 4000 - 8000 uses eight entries in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000111110100000	1111111111100000	4000	4031	32
2	0000111111000000	1111111111100000	4032	4095	64
3	0001000000000000	1111100000000000	4096	6143	2048
4	0001100000000000	1111110000000000	6144	7167	1024
5	0001110000000000	1111111000000000	7168	7679	512
6	0001111000000000	1111111100000000	7680	7935	256
7	0001111100000000	1111111110000000	7936	7999	64
8	0001111101000000	1111111111111111	8000	8000	1
Total Ports: 4001					

Example

An ACL rule with TCP port `lt 1023` takes only one entry in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000000000000000	1111110000000000	0	1023	1024
Total Ports: 1024					

Related Commands

`deny` – assigns a filter to deny IP traffic.

`deny tcp` – assigns a deny filter for TCP traffic.

ipv6 access-group

Assign an IPv6 access-group to an interface.

Syntax

```
ipv6 access-group access-list-name {in | out} [implicit-permit] [vlan range | optimized]
```

To delete an IPv6 access-group configuration, use the `no ipv6 access-group access-list-name {in} [implicit-permit] [vlan range | optimized]` command.

Parameters

- access-list-name*** Enter the name of a configured access list, up to 140 characters.
- in | out** Enter either the keyword `in` or `out` to apply the IPv6 ACL to incoming traffic (ingress) or outgoing traffic (egress).
- implicit-permit** (OPTIONAL) Enter the keywords `implicit-permit` to change the default action of the IPv6 ACL from `implicit-deny` to `implicit-permit` (that is, if the traffic does not match the filters in the IPv6 ACL, the traffic is permitted instead of dropped).
- vlan range** (OPTIONAL) Enter the keyword `vlan` followed by the VLAN range in a comma separated format. The range is 1 to 4094.
- optimized** (OPTIONAL) Enter the keyword `optimized` to enable ACL optimization

Defaults

Disabled.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.

9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, names are up to 16 characters long.
7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information

You can assign an IPv6 access group to a physical, LAG, or VLAN interface context.

Example

```
DellEMC(conf-if-te-1/1)#ipv6 access-group AclList1 in implicit-permit
vlan 10-20

DellEMC(conf-if-te-1/1)#show config
!
interface TenGigabitEthernet 1/1
  no ip address
  ipv6 access-group AclList1 in implicit-permit Vlan 10-20
  no shutdown
DellEMC(conf-if-te-1/1)#
```

ipv6 control-plane egress-filter

Enable egress Layer 3 ACL lookup for IPv6 CPU traffic.

Syntax `ipv6 control-plane egress-filter`

Defaults Not enabled.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

ipv6 access-list

Configure an access list based on IPv6 addresses or protocols.

Syntax `ipv6 access-list access-list-name cpu-qos`
To delete an access list, use the `no ipv6 access-list access-list-name` command.

Parameters

access-list-name	Enter the access list name as a string, up to 140 characters.
cpu-qos	Enter the keyword <code>cpu-qos</code> to assign this ACL to control plane traffic only (CoPP).
permit	Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this condition.
deny	Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition.
ospfv3	Specify that this ACL is for OSPFv3 control plane traffic

Defaults All access lists contain an implicit “deny any”; that is, if no match occurs, the packet is dropped.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for CoPP for OSPFv3 on the S4810, S4820T, S6000, and Z9000 platforms.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000
8.3.11.1	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, names are up to 16 characters long.
7.4.1.0	Introduced on the E-Series.

Usage Information The number of entries allowed per ACL is hardware-dependent. For detailed specification on entries allowed per ACL, refer to your line card documentation. You can create an IPv6 ACL for control-plane traffic policing for OSPFv3, in addition to the CoPP support for VRRP, BGP, and ICMP.

permit

To configure a filter that matches the filter criteria, select an IPv6 protocol number, ICMP, IPv6, TCP, or UDP.

Syntax `permit {ipv6-protocol-number | icmp | ipv6 | tcp | udp}`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command syntax if you know the filter's sequence number
- Use the `no permit {ipv6-protocol-number | icmp | ipv6 | tcp | udp}` command

Parameters	ip-protocol-number	Enter an IPv6 protocol number. The range is from 0 to 255.
	icmp	Enter the keyword <code>icmp</code> to filter internet Control Message Protocol version 6.
	ipv6	Enter the keyword <code>ipv6</code> to filter any internet Protocol version 6.
	tcp	Enter the keyword <code>tcp</code> to filter the Transmission Control protocol.
	udp	Enter the keyword <code>udp</code> to filter the User Datagram Protocol.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.

permit icmp

To allow all or specific internet control message protocol (ICMP) messages, configure a filter.

Syntax `permit icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address} [message-type] [count [byte]] | [log] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit icmp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters	source address	Enter the IPv6 address of the network or host from which the packets were sent in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128. The :: notation specifies successive hexadecimal fields of zero.
	mask	Enter a network mask in /prefix format (/x).
	host ipv6-address	Enter the keyword <code>host</code> then the IPv6 address of the host in the x:x:x::x format. The :: notation specifies successive hexadecimal fields of zero.
	destination address	Enter the IPv6 address of the network or host to which the packets are sent in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128. The :: notation specifies successive hexadecimal fields of zero.
	count	(OPTIONAL) Enter the keyword <code>count</code> to count packets the filter processes.
	byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes the filter processes.
	log	(OPTIONAL) Enter the keyword <code>log</code> to have the information kept in an ACL log file.
	monitor	(OPTIONAL) Enter the keyword <code>monitor</code> to monitor traffic on the monitoring interface specified in the flow-based monitoring session along with the filter operation.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series. Added the <code>monitor</code> option.

permit tcp

Configure a filter to pass TCP packets that match the filter criteria.

Syntax `permit tcp {source address mask | any | host ipv6-address} [operator port [port]] {destination address | any | host ipv6-address} [bit] [operator port [port]] [count [byte]] | [log] [monitor]`

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit tcp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters

source address Enter the IPv6 address of the network or host from which the packets were sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.

mask Enter a network mask in /prefix format (/x).

any Enter the keyword `any` to specify that all routes are subject to the filter.

host ipv6-address Enter the keyword `host` followed by the IPv6 address of the host in the x:x:x:x format. The :: notation specifies successive hexadecimal fields of zero.

operator (OPTIONAL) Enter one of the following logical operand:

- `eq` = equal to
- `neq` = not equal to
- `gt` = greater than
- `lt` = less than
- `range` = inclusive range of ports (you must specify two port for the port parameter.)

port port Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is 0 to 65535.

The following list includes some common TCP port numbers:

- 23 = Telnet
- 20 and 21 = FTP
- 25 = SMTP
- 169 = SNMP

destination address Enter the IPv6 address of the network or host to which the packets are sent in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128. The :: notation specifies successive hexadecimal fields of zero.

bit Enter a flag or combination of bits:

- `ack`: acknowledgement field
- `fin`: finish (no more data from the user)
- `psh`: push function
- `rst`: reset the connection
- `syn`: synchronize sequence numbers
- `urg`: urgent field

count (OPTIONAL) Enter the keyword `count` to count packets processed by the filter.

byte (OPTIONAL) Enter the keyword `byte` to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series ExaScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale. Added the <code>monitor</code> option.

Usage Information

Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (`gt`, `lt`, `range`) may require more than one entry. The range of ports is configured in the CAM based on bitmask boundaries; the space required depends on exactly what ports are included in the range.

Example

An ACL rule with a TCP port range 4000 - 8000 uses eight entries in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	00001111110100000	11111111111100000	4000	4031	32
2	00001111111000000	11111111111000000	4032	4095	64
3	00010000000000000	11111000000000000	4096	6143	2048
4	00011000000000000	11111100000000000	6144	7167	1024
5	00011100000000000	11111110000000000	7168	7679	512
6	00011110000000000	11111111000000000	7680	7935	256
7	00011111000000000	11111111100000000	7936	7999	64
8	00011111010000000	11111111111111111	8000	8000	1
Total Ports: 4001					

Example

An ACL rule with a TCP port `lt 1023` takes only one entry in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	00000000000000000	11111100000000000	0	1023	1024
Total Ports: 1024					

Related Commands

[permit](#) – assigns a permit filter for IP packets.

[permit udp](#) – assigns a permit filter for UDP packets.

permit udp

Configure a filter to pass UDP packets meeting the filter criteria.

Syntax

```
permit udp {source address mask | any | host ipv6-address} [operator port
[port]] {destination address | any | host ipv6-address} [operator port
[port]] [count [byte]] | [log] [monitor]
```

To remove this filter, you have two choices:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- Use the `no permit udp {source address mask | any | host ipv6-address} {destination address | any | host ipv6-address}` command.

Parameters

source address	Enter the IPv6 address of the network or host from which the packets were sent in the <code>x:x:x:x:x</code> format followed by the prefix length in the <code>/x</code> format. The range is <code>/0</code> to <code>/128</code> . The <code>::</code> notation specifies successive hexadecimal fields of zero.
mask	Enter a network mask in <code>/prefix</code> format (<code>/x</code>).

any Enter the keyword `any` to specify that all routes are subject to the filter.

host ipv6-address Enter the keyword `host` followed by the IPv6 address of the host in the `x:x:x:x::x` format. The `::` notation specifies successive hexadecimal fields of zero.

operator (OPTIONAL) Enter one of the following logical operand:

- `eq` = equal to
- `neq` = not equal to
- `gt` = greater than
- `lt` = less than
- `range` = inclusive range of ports (you must specify two port for the port parameter.)

port port (OPTIONAL) Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is 0 to 65535.

destination address Enter the IPv6 address of the network or host to which the packets are sent in the `x:x:x:x::x` format followed by the prefix length in the `/x` format. The range is `/0` to `/128`. The `::` notation specifies successive hexadecimal fields of zero.

count (OPTIONAL) Enter the keyword `count` to count packets processed by the filter.

byte (OPTIONAL) Enter the keyword `byte` to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series ExaScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale. Added the <code>monitor</code> option.

Usage Information Most ACL rules require one entry in the CAM. However, rules with TCP and UDP port operators (`gt`, `lt`, `range`) may require more than one entry. The range of ports is configured in the CAM based on bitmask boundaries; the space required depends on exactly what ports are included in the range.

Example An ACL rule with a TCP port range 4000 - 8000 uses eight entries in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000111110100000	1111111111100000	4000	4031	32
2	0000111111000000	1111111111100000	4032	4095	64
3	0001000000000000	1111100000000000	4096	6143	2048
4	0001100000000000	1111110000000000	6144	7167	1024
5	0001110000000000	1111111000000000	7168	7679	512
6	0001111000000000	1111111100000000	7680	7935	256
7	0001111100000000	1111111111000000	7936	7999	64
8	0001111101000000	1111111111111111	8000	8000	1
Total Ports: 4001					

Example An ACL rule with a TCP port `lt 1023` takes only one entry in the CAM:

Rule#	Data	Mask	From	To	#Covered
1	0000000000000000	1111110000000000	0	1023	1024

Total Ports: 1024

Related Commands

[permit](#) – assigns a permit filter for IP packets.
[permit tcp](#) – assigns a permit filter for TCP packets.

remark

Enter a description for an IPv6 ACL entry.

C-Series, E-Series, S-Series

Syntax

```
remark remark number [description]
```

To delete the description, use the `no remark remark number` command (it is not necessary to include the remark description that you are deleting).

Parameters

remark number Enter the remark number. The range is 0 to 4294967290.
 **NOTE:** You can use the same sequence number for the remark and an ACL rule.

description Enter a description of up to 80 characters.

Defaults

Not configured.

Command Modes ACCESS-LIST

Command History

Version 9.0.2.0 Introduced on the S6000.
Version 8.4.2.1 Introduced on the S-Series.
Version 8.2.1.0 Introduced on the E-Series ExaScale.
Version 7.8.1.0 Introduced on the C-Series.
Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

As shown in the Example below, the same sequence number is used for the remark and an ACL rule. The remark precedes the rule in the running-configuration because it is assumed that the remark is for that rule or that group of rules that follow the remark. You can configure up to 4294967290 remarks in a given ACL.

Example

```
Dell(config-ipv6-acl)#remark 10 Remark for Entry # 10
Dell(config-ipv6-acl)#show config
!
ipv6 access-list Acl1
  description IPV6 Access-list
  seq 5 permit ipv6 1111::2222/127 host 3333::1111 log count bytes
  remark 10 Remark for Entry # 10
  seq 10 permit icmp host 3333:: any mobile-advertisement log
  seq 15 deny tcp any any rst
  seq 20 permit udp any any gt 100 count
Dell(config-ipv6-acl)#
```

Related Commands

[show config](#) – displays the current ACL configuration.

resequence access-list

Re-assign sequence numbers to entries of an existing access-list.

S-Series

Syntax `resequence access-list {ipv4 | ipv6 | mac} {access-list-name StartingSeqNum Step-to-Increment}`

Parameters

- ipv4 | ipv6 | mac** Enter the keyword `ipv4`, `ipv6` or `mac` to identify the access list type to resequence.
- access-list-name** Enter the name of a configured IP access list, up to 140 characters. Increased name string to accept up to 140 characters. Prior to version 7.8.1.0, names are up to 16 characters long.
- StartingSeqNum** Enter the starting sequence number to resequence. The range is 0 to 4294967290.
- Step-to-Increment** Enter the step to increment the sequence number. The range is 1 to 4294967290.

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.0	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series ExaScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information When all sequence numbers have been exhausted, this feature permits re-assigning new sequence number to entries of an existing access-list.

Related Commands [resequence prefix-list ipv6](#) – resequences a prefix list.

resequence prefix-list ipv6

Re-assign sequence numbers to entries of an existing prefix list.

C-Series, E-Series, S-Series

Syntax `resequence prefix-list ipv6 {prefix-list-name StartingSeqNum Step-to-increment}`

Parameters

- prefix-list-name** Enter the name of configured prefix list, up to 140 characters. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, the names are up to 16 characters long.
- StartingSeqNum** Enter the starting sequence number to resequence. The range is 0 to 65535.

	Step-to-Increment	Enter the step to increment the sequence number. The range is 1 to 65535.
Defaults	none	
Command Modes	<ul style="list-style-type: none"> EXEC EXEC Privilege 	
Command History	<p>Version 9.0.2.0 Introduced on the S6000.</p> <p>Version 8.4.2.0 Introduced on the S-Series.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.8.1.0 Introduced on the C-Series.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>	
Usage Information	When all sequence numbers have been exhausted, this feature permits re-assigning new sequence number to entries of an existing access-list.	
Related Commands	resequence access-list – resequences an access-list.	

seq

Assign a sequence number to a deny or permit the filter in an IPv6 access list while creating the filter.

Syntax	<pre>seq <i>sequence-number</i> {deny permit} {<i>ipv6-protocol-number</i> icmp ip tcp udp} {<i>source address mask</i> any host <i>ipv6-address</i>} {<i>destination address</i> any host <i>ipv6-address</i>} [<i>operator port [port]</i>] [count [<i>byte</i>]] [log] [monitor]</pre>	
	To delete a filter, use the <code>no seq <i>sequence-number</i></code> command.	
Parameters	<i>sequence-number</i>	Enter a number from 0 to 4294967290.
	deny	Enter the keyword <code>deny</code> to configure a filter to drop packets meeting this condition.
	permit	Enter the keyword <code>permit</code> to configure a filter to forward packets meeting this criteria.
	<i>ipv6-protocol-number</i>	Enter an IPv6 protocol number. The range is 0 to 255.
	icmp	Enter the keyword <code>icmp</code> to configure an Internet Control Message Protocol version 6 filter.
	ipv6	Enter the keyword <code>ipv6</code> to configure any Internet Protocol version 6 filter.
	tcp	Enter the keyword <code>tcp</code> to configure a Transmission Control protocol filter.
	udp	Enter the keyword <code>udp</code> to configure a User Datagram Protocol filter.
	<i>source address</i>	Enter the IPv6 address of the network or host from which the packets were sent in the <code>x:x:x:x</code> format followed by the prefix length in the <code>/x</code> format. The range is <code>/0</code> to <code>/128</code> . The <code>::</code> notation specifies successive hexadecimal fields of zero.
	<i>mask</i>	Enter a network mask in <code>/prefix</code> format (<code>/x</code>).
	any	Enter the keyword <code>any</code> to specify that all routes are subject to the filter.
	host <i>ipv6-address</i>	Enter the keyword <code>host</code> followed by the IPv6 address of the host in the <code>x:x:x:x</code> format. The <code>::</code> notation specifies successive hexadecimal fields of zero.

operator	(OPTIONAL) Enter one of the following logical operands: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the port parameter.)
port port	(OPTIONAL) Enter the application layer port number. Enter two port numbers if using the range logical operand. The range is 0 to 65535. The following list includes some common TCP port numbers: <ul style="list-style-type: none"> • 23 = Telnet • 20 and 21 = FTP • 25 = SMTP • 169 = SNMP
destination address	Enter the IPv6 address of the network or host to which the packets are sent in the <code>x::x::x::x</code> format followed by the prefix length in the <code>/x</code> format. The range is <code>/0</code> to <code>/128</code> . The <code>::</code> notation specifies successive hexadecimal fields of zero.
message-type	(OPTIONAL) Enter an ICMP message type, either with the type (and code, if necessary) numbers or with the name of the message type. The range is 0 to 255 for ICMP type and 0 to 255 for ICMP code.
count	(OPTIONAL) Enter the keyword <code>count</code> to count packets processed by the filter.
byte	(OPTIONAL) Enter the keyword <code>byte</code> to count bytes processed by the filter.

Defaults Not configured.

Command Modes ACCESS-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.0.2.0	Introduced on the S6000.
8.4.2.1	Introduced on the E-Series TeraScale and S-Series.
8.2.1.0	Introduced on the E-Series ExaScale.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Added the <code>monitor</code> option.

Related Commands [deny](#) – configures a filter to drop packets.
[permit](#) – configures a filter to forward packets.

show cam-acl

Show space allocated for IPv6 ACLs.

Syntax `show cam-acl`

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.
8.4.2.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series.

Example

```
show cam-acl (non default)
DellEMC(conf)# cam-acl l2acl 2 ipv4acl 4 ipv6acl 4 ipv4qos 2 l2qos 1
l2pt 0 ipmacacl 0 vman-qos 0 ecfmacl 0
DellEMC#show cam-acl

-- Chassis Cam ACL --
      Current Settings(in block sizes)
          1 block = 128 entries
L2Acl      :      2
Ipv4Acl    :      4
Ipv6Acl    :      4
Ipv4Qos    :      2
L2Qos      :      1
L2PT       :      0
IpMacAcl   :      0
VmanQos    :      0
VmanDualQos :      0
EcfmAcl    :      0
FcoeAcl    :      0
iscsiOptAcl :      0
ipv4pbr    :      0
vrfv4Acl   :      0
Openflow   :      0
fedgovacl  :      F3940

-- stack-unit 0 --
      Current Settings(in block sizes)
          1 block = 128 entries
L2Acl      :      2
Ipv4Acl    :      4
Ipv6Acl    :      4
Ipv4Qos    :      2
L2Qos      :      1
L2PT       :      0+F394
IpMacAcl   :      0
VmanQos    :      0
VmanDualQos :      0
EcfmAcl    :      0
FcoeAcl    :      0
iscsiOptAcl :      0
ipv4pbr    :      0
```

```
vrfv4Acl      :      0
Openflow      :      0
fedgovacl     :      0

DellEMC#
```

Example (Manual Profiles)

```
DellEMC# show cam-acl

-- Chassis Cam ACL --
      Current Settings(in block sizes)
L2Acl   :      2
Ipv4Acl :      2
Ipv6Acl :      4
Ipv4Qos :      2
L2Qos   :      3

-- Line card 4 --
      Current Settings(in block sizes)
L2Acl   :      2
Ipv4Acl :      2
Ipv6Acl :      4
Ipv4Qos :      2
L2Qos   :      3

DellEMC#
```

Related Commands

- [cam-acl](#) — configure CAM profiles to support IPv6 ACLs.

show cam-acl-egress

Show information on FP groups allocated for egress ACLs.

Syntax `show cam-acl-egress`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.

Version	Description
8.4.2.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series.

Example

```
DellEMC# show cam-acl-egress

-- Chassis Egress Cam ACL --
      Current Settings(in block sizes)
L2Acl   :          1
Ipv4Acl :          1
Ipv6Acl :          2

-- Stack unit 0 --
      Current Settings(in block sizes)
L2Acl   :          1
Ipv4Acl :          1
Ipv6Acl :          2

DellEMC#show cam-acl
```

Related Commands

- [cam-acl](#) — configure CAM profiles to support IPv6 ACLs.

show config

View the current IPv6 ACL configuration.

C-Series, E-Series, S-Series

Syntax	show config
Command Modes	ACCESS-LIST
Command History	<p>Version 9.0.2.0 Introduced on the S6000.</p> <p>Version 8.4.2.1 Introduced on the S-Series.</p> <p>Version 8.4.2.0 Introduced on the E-Series TeraScale.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.8.1.0 Introduced on the C-Series.</p>

Example

```
Dell(conf-ipv6-acl)#show config
!
ipv6 access-list Acl1
  seq 5 permit ipv6 1111::2222/127 host 3333::1111 log count bytes
  seq 10 permit icmp host 3333:: any mobile-advertisement log
  seq 15 deny tcp any any rst
  seq 20 permit udp any any gt 100 count
Dell(conf-ipv6-acl)#
```

show ipv6 accounting access-list

View the IPv6 access-lists created on the E-Series and the sequence of filters.

Syntax `show ipv6 accounting access-list [access-list-name [cam_count | interface interface {in | out}]`

Parameters

- access-list-name*** Enter the name of the ACL to be displayed, up to 140 characters.
- cam_count*** List the count of the CAM rules for this ACL.
- interface interface*** Enter the keyword `interface` followed by the interface type and slot/port or number information:
 - For a Port Channel interface, enter the keywords `port-channel` followed by a number. For the C-Series and S-Series, the range is 1 to 128. For the E-Series, the range is 1 to 255 for TeraScale and 1 to 512 for ExaScale.
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` followed by the slot/port information.
- in | out*** Identify whether ACL is applied on ingress or egress side.

Command Modes

- EXEC
- EXEC Privilege

Command History	Version	Description
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.0.2.0	Introduced on the S6000.
	8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
	8.4.2.1	Introduced on the S-Series.
	8.2.1.0	Introduced on the E-Series ExaScale.
	7.8.1.0	Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, names are up to 16 characters long.
	7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information	Field	Description
	"Ingress IPv6..."	Displays the name of the IPv6 ACL, in this Example "AclList1".
	"seq 10..."	Displays the filter. If the keywords <code>count</code> or <code>byte</code> were configured in the filter, the number of packets or bytes processed by the filter is displayed at the end of the line.

Example

```
DellEMC#show ipv6 accounting access-list
!
Ingress IPv6 access list AclList1 on GigabitEthernet 9/0
Total cam count 15
  seq 10 permit icmp host 3333:: any mobile-advertisement log
  seq 15 deny tcp any any rst
  seq 20 permit udp any any gt 101 count (0 packets)
!
DellEMC#
```

show running-config acl

Display the ACL running configuration.

C-Series, E-Series, S-Series

Syntax `show running-config acl`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History	Version 9.0.2.0	Introduced on the S6000.
	Version 8.4.2.1	Introduced on the S-Series.
	Version 8.2.1.0	Introduced on the E-Series ExaScale.
	Version 7.8.1.0	Introduced on the C-Series.
	Version 7.4.1.0	Introduced on the E-Series TeraScale.

Example

```
Dell#show running-config acl
!
ip access-list extended ext-acl1
!
ip access-list standard std-acl1
!
ipv6 access-list Acl1
description IPV6 Access-list
seq 5 permit ipv6 1111::2222/127 host 3333::1111 log count bytes
remark 10 Remark for Entry # 10
seq 10 permit icmp host 3333:: any mobile-advertisement log
seq 15 deny tcp any any rst
seq 20 permit udp any any gt 100 count
Dell#
```

test cam-usage

Verify that enough ACL CAM space is available for the IPv6 ACLs you have created.

Syntax `test cam-usage service-policy input input policy name linecard {number | all}`

- Parameters**
- policy-map name*** Enter the name of the policy-map to verify.
 - number*** Enter all to get information for all the linecards, or enter the linecard number to get information for a specific card. The range is 0-6 for E-Series and 0-7 for C-Series.

Defaults none

Command Modes EXEC Privilege

Command History	Version	Description
	9.2(1.0)	Introduced on the Z9500.
	9.0.2.0	Introduced on the S6000.
	8.4.2.1	Introduced on the S-Series.
	8.2.1.0	Introduced on the E-Series ExaScale.
	7.8.1.0	Introduced on the C-Series and E-Series TeraScale.

Usage Information

This command applies to both IPv4 and IPv6 CAM Profiles, but is best used when verifying QoS optimization for IPv6 ACLs.

QoS Optimization for IPv6 ACLs does not impact the CAM usage for applying a policy on a single (or the first of several) interfaces. It is most useful when a policy is applied across multiple interfaces; it can reduce the impact to CAM usage across subsequent interfaces.

The following describes the `test cam-usage` command shown in the Example below.

Term	Explanation
Linecard	Lists the line card or linecards that are checked. Entering <code>all</code> shows the status for linecards in the chassis.
Portpipe	Lists the portpipe (port-set) or port pipes (port-sets) that are checked. Entering <code>all</code> shows the status for linecards and port-pipes in the chassis.
CAM Partition	Shows the CAM profile of the CAM.
Available CAM	Identifies the amount of CAM space remaining for that profile.
Estimated CAM per Port	Estimates the amount of CAM space the listed policy requires.
Status	Indicates whether or not the policy is allowed in the CAM

Example (C-Series)

```
Dell#test cam-usage service-policy input LauraMapTest linecard all
Linecard|Portpipe|CAM Partition|Available CAM|Estimated CAM per Port|
Status
-----
    2|    1|    IPv4Flow|    232|    0| Allowed
    2|    1|    IPv6Flow|     0|    0| Allowed
    4|    0|    IPv4Flow|    232|    0| Allowed
    4|    0|    IPv6Flow|     0|    0| Allowed
Dell#

Dell#test cam-usage service-policy input LauraMapTest linecard 4 port-set 0
Linecard|Portpipe|CAM Partition|Available CAM|Estimated CAM per Port|
Status
-----
    4|    0|    IPv4Flow|    232|    0| Allowed
    4|    0|    IPv6Flow|     0|    0| Allowed
Dell#

Dell#test cam-usage service-policy input LauraMapTest linecard 2 port-set 1
Linecard|Portpipe|CAM Partition|Available CAM|Estimated CAM per Port|
Status
-----
    2|    1|    IPv4Flow|    232|    0| Allowed
    2|    1|    IPv6Flow|     0|    0| Allowed
Dell#
```

IPv6 Route Map Commands

The following commands allow you to configure route maps and their redistribution criteria.

match ipv6 address

Configure a filter to match routes based on IPv6 addresses specified in an access list.

C-Series, E-Series, S-Series

Syntax	<code>match ipv6 address prefix-list-name</code> To delete a match, use the <code>no match ipv6 address prefix-list-name</code> command.
Parameters	prefix-list-name Enter the name of IPv6 prefix list, up to 140 characters.
Defaults	Not configured.
Command Modes	ROUTE-MAP
Command History	Version 8.4.2.1 Introduced on the S-Series. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.8.1.0 Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, the names are up to 16 characters long. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Related Commands	match ipv6 next-hop – redistributes routes that match the next-hop IP address. match ipv6 route-source – redistributes routes that match routes advertised by other routers.

match ipv6 next-hop

Configure a filter which matches based on the next-hop IPv6 addresses specified in the IPv6 prefix list.

C-Series, E-Series, S-Series

Syntax	<code>match ipv6 next-hop prefix-list prefix-list-name</code> To delete a match, use the <code>no match ipv6 next-hop prefix-list prefix-list-name</code> command.
Parameters	prefix-list prefix-list-name Enter the keywords <code>prefix-list</code> followed by the name of configured prefix list, up to 140 characters.
Defaults	Not configured.
Command Modes	ROUTE-MAP
Command History	Version 8.4.2.1 Introduced on the S-Series. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.8.1.0 Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, the names are up to 16 characters long. Version 7.4.1.0 Introduced on the E-Series TeraScale.

Related Commands [match ipv6 address](#) – redistributes routes that match an IP address.
[match ipv6 route-source](#) – redistributes routes that match routes advertised by other routers.

match ipv6 route-source

Configure a filter which matches based on the routes advertised in the IPv6 prefix lists.

C-Series, E-Series, S-Series

Syntax `match ipv6 route-source prefix-list prefix-list-name`
To delete a match, use the `no match ipv6 route-source prefix-list prefix-list-name` command.

Parameters **prefix-list *prefix-list-name*** Enter the keywords `prefix-list` followed by the name of configured prefix list, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History **Version 8.4.2.1** Introduced on the S-Series.
Version 8.2.1.0 Introduced on the E-Series ExaScale.
Version 7.8.1.0 Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, the names are up to 16 characters long.
Version 7.4.1.0 Introduced on the E-Series TeraScale.

Related Commands [match ipv6 address](#) – redistributes routes that match an IP address.
[match ipv6 next-hop](#) – redistributes routes that match the next-hop IP address.

route-map

Designate a IPv6 route map name and enter ROUTE-MAP mode.

C-Series, E-Series, S-Series

Syntax `route-map map-name`
To delete a route map, use the `no route-map map-name` command.

Parameters ***map-name*** Enter a text string to name the route map, up to 140 characters.

Defaults Not configured.

Command Modes ROUTE-MAP

Command History **Version 8.4.2.1** Introduced on the S-Series.
Version 8.2.1.0 Introduced on the E-Series ExaScale.
Version 7.8.1.0 Introduced on the C-Series. Increased the name string to accept up to 140 characters. Prior to version 7.8.1.0, the names are up to 16 characters long.
Version 7.4.1.0 Introduced on the E-Series TeraScale.

Example

```
Dell(conf)#route-map Rmap1
Dell(config-route-map)#match ?
...
ip IP specific information
ipv6 IPv6 specific information
...
```

Related Commands

[show config](#) – views the current configuration.

set ipv6 next-hop

Configure a filter that specifies IPv6 address as the next hop.

C-Series, E-Series, S-Series

Syntax

```
set ipv6 next-hop ipv6-address
```

To delete the setting, use the `no set ipv6 next-hop ipv6-address` command.

Parameters

ipv6-address

Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Defaults

Not configured.

Command Modes

ROUTE-MAP

Command History

Version 8.4.2.1 Introduced on the S-Series.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.8.1.0 Introduced on the C-Series.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage

Information

The `set ipv6 next-hop` command is the only way to set an IPv6 Next-Hop.

show config

View the current route map configuration.

C-Series, E-Series, S-Series

Syntax

```
show config
```

Command Modes

ROUTE-MAP

Command History

Version 8.4.2.1 Introduced on the S-Series.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.8.1.0 Introduced on the C-Series.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Example

```
Dell(config-route-map)#show config
!  
route-map Rmap1 permit 10  
  match ip address v4plist  
  match ipv6 address plist1  
  match ipv6 next-hop prefix-list plist2  
  match ipv6 route-source prefix-list plist3  
  set next-hop 1.1.1.1  
  set ipv6 next-hop 3333:2222::
```

show route-map

View the current route map configurations.

C-Series, E-Series, S-Series

Syntax show route-map

Command Modes • EXEC
 • EXEC Privilege

Command History

Version 8.4.2.1	Introduced on the S-Series.
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.8.1.0	Introduced on the C-Series.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

Example

```
Dell#show route-map  
!  
route-map Rmap1, permit, sequence 10  
Match clauses:  
  ip address: v4plist  
  ipv6 address: plist1  
  ipv6 next-hop prefix-lists: plist2  
  ipv6 route-source prefix-lists: plist3  
Set clauses:  
  next-hop 1.1.1.1  
  ipv6 next-hop 3333:2222::
```

Related Commands [route-map](#) – configures a route map.

IPv6 Basics

IPv6 basic commands are supported on the Dell EMC Networking OS.

NOTE: For information about the Dell EMC Networking OS version and platform that supports IPv6 in each software feature, see the *IPv6 Addressing* section in the *Dell EMC Networking OS Configuration Guide*.

Topics:

- `clear ipv6 fib`
- `clear ipv6 route`
- `clear ipv6 mld_host`
- `maximum dynamic-routes-ipv6`
- `ipv6 address autoconfig`
- `ipv6 address`
- `ipv6 address eui64`
- `ipv6 control-plane icmp error-rate-limit`
- `ipv6 flowlabel-zero`
- `ipv6 host`
- `ipv6 name-server`
- `ipv6 nd dad attempts`
- `ipv6 nd disable-reachable-timer`
- `ipv6 nd prefix`
- `ipv6 nd reachable-time`
- `ipv6 route`
- `ipv6 unicast-routing`
- `show ipv6 cam stack-unit`
- `show ipv6 control-plane icmp`
- `show ipv6 fib stack-unit`
- `show ipv6 flowlabel-zero`
- `show ipv6 interface`
- `show ipv6 management-route`
- `show ipv6 mld_host`
- `show ipv6 route`
- `trust ipv6-diffserv`

clear ipv6 fib

Clear (refresh) all forwarding information base (FIB) entries on a stack unit.

S5000

Syntax `clear ipv6 fib [vrf vrf-name] | stack-unit unit-number`

Parameters **vrf vrf-name** (Optional) Enter the keyword `vrf` followed by the name of the VRF to clear the neighbor corresponding to that VRF.

NOTE: If you do not specify this option, neighbors corresponding to the default VRF are cleared.

slot Enter the slot number to clear the FIB.

unit-number Enter the stack member number.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

clear ipv6 route

Clear (refresh) all or a specific route from the IPv6 routing table.

S5000

Syntax `clear ipv6 route [vrf vrf-name] [* | ipv6-address prefix-length]`

Parameters

vrf vrf-name (Optional) Enter the keyword vrf followed by the name of the VRF to clear the IPv6 routes corresponding to that VRF.

***** Enter the * to clear (refresh) all routes from the IPv6 routing table.

ipv6-address prefix-length Enter the IPv6 address in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

clear ipv6 mld_host

Clear the IPv6 MLD host counters and reset the elapsed time.

Syntax `clear ipv6 mld_host`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

maximum dynamic-routes-ipv6

Specify the maximum number of dynamic (protocol) IPv6 routes a VRF can have.

S5000

Syntax `maximum dynamic-routes-ipv6 limit {warn-threshold threshold-value | warning-only}`

To remove the limit on the maximum number of IPv6 routes used, use the `no maximum dynamic-routes-ipv6` command.

Parameters

limit	Maximum number of IPv6 routes allowed in a VRF. Valid range is from 1 to 8000 (or maximum allowable for that platform if smaller value).
warning-threshold	Warning threshold value is expressed as a percentage of the limit value. When the number of IPv6 routes reaches the specified percentage of the limit, a warning message is generated. Valid range is 1 to 100. When warn-threshold is used, once the limit is reached, additional routes will not be allowed into the RTM (route table manager) itself.

warning-only When the warning-only option is used, a syslog message will be thrown when maximum number of dynamic IPv6 routes reaches the limit. Additional dynamic IPv6 routes will still be allowed.

Defaults No limit is set on the maximum number of dynamic IPv6 routes for a VRF.

Command Modes CONFIGURATION-VRF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information If the maximum IPv6 route limit is not specified for a VRF (valid range is from 1 to 8000), then it has unlimited space that extends to the maximum number of entries allowed for the system. This command is not applicable to the default and management VRFs.

ipv6 address autoconfig

Configure IPv6 address auto-configuration for the management interface.

Syntax `ipv6 address autoconfig`
To disable the address autoconfig operation on the management interface, use the `no ipv6 address autoconfig` command.

Default Disabled

Command Modes INTERFACE (management interface only)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.1.(0.0)	Updated Usage Information section.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information • SAA can configure up to two addresses. If any preferred prefix or valid timers time out, the corresponding address are deprecated or removed. If an address is removed due to a time-out, an address from the current unused prefix is used to create a new address. If there are no remaining prefixes, the software waits to receive a new prefix from the RA.

- If auto-configuration is enabled, all IPv6 addresses on that management interface are auto-configured. Manual and auto-configurations are not supported on a single management interface.
- Removing auto-configuration removes all auto-configured IPv6 addresses and the link-local IPv6 address from that management interface.
- IPv6 addresses on a single management interface cannot be members of the same subnet.
- IPv6 secondary addresses on management interfaces across a platform must be members of the same subnet.
- IPv6 secondary addresses on management interfaces should not match the virtual IP address and should not be in the same subnet as the virtual IP.

ipv6 address

Configure an IPv6 address to an interface.

Syntax `ipv6 address {ipv6-address prefix-length}`
 To remove the IPv6 address, use the `no ipv6 address {ipv6-address prefix-length}` command.

Parameters

<i>ipv6-address</i>	Enter the IPv6 address in the x:x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.
<i>prefix-length</i>	

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Defaults None

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1(0.0)	Updated Usage Information.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.1.0	Added support on the management Ethernet port.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

- If two addresses are configured, delete an existing address before configuring a new address.
- If the last manually-configured global IPv6 address is removed using the “no” form of the command, the link-local IPv6 address is removed automatically.
- IPv6 addresses on a single management interface cannot be members of the same subnet.

- IPv6 secondary addresses on management interfaces across platform must be members of the same subnet.
- IPv6 secondary addresses on management interfaces should not match the virtual IP address and should not be in the same subnet as the virtual IP.

NOTE: Do not use the /128 prefix length on physical or port channel interfaces. You can use the /128 prefix length on loopback interfaces.

Example

```
DellEMC(conf)# interface tengigabitethernet 1/2
DellEMC(conf-if-te-1/2)# ipv6 address ?
X:X:X:X::X IPv6 address
DellEMC(conf-if-te-1/2)# ipv6 address 2002:1:2::3 ?
<0-128> Prefix length in bits
DellEMC(conf-if-te-1/2)# ipv6 address 2002:1:2::3 /96 ?
<cr>
DellEMC(conf-if-te-1/2)# ipv6 address 2002:1:2::3 /96
DellEMC(conf-if-te-1/2)# show config
!
interface TenGigabitEthernet 1/2
  no ip address
  ipv6 address 2002:1:2::3 /96
  no shutdown
```

ipv6 address eui64

Configure IPv6 EUI64 address configuration on the interface.

Syntax

```
ipv6 address {ipv6-address prefix-length} eui64
```

To disable IPv6 EUI64 address autoconfiguration, use the `no ipv6 address {ipv6-address prefix-length} eui64` command.

Parameters

ipv6-address
prefix-length

Enter the IPv6 prefix in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.

NOTE: The :: notation specifies successive hexadecimal fields of zeros.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.2)	Introduced.

Usage Information

This command allows you to create an EUI64 address based on the specified prefix and MAC address only. Prefixes may be configured on the interface using the `ipv6 nd prefix` command without creating an EUI64 address.

Example

```
DellEMC(conf)# int ten 1/4
DellEMC(conf-if-te-1/4)# ipv6 address 200:1::/64 eui64
```

```
DellEMC(conf)# int ten 1/6
DellEMC(conf-if-te-1/6)# ipv6 address 801:10::/64 eui64
```

ipv6 control-plane icmp error-rate-limit

Configure the maximum number of ICMP error packets per second that can be sent per second.

Syntax	<code>ipv6 control-plane icmp error-rate-limit {1-200}</code> To restore the default value, use the <code>no ipv6 control-plane icmp error-rate-limit</code> command.
Parameters	pps Enter the maximum number of error packets generated per second. The range is from 1 to 200, where 0 disables the rate-limiting.
Default	100 pps
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>DellEMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

ipv6 flowlabel-zero

Configure system to set the flow label field in the packets to zero.

Syntax	<code>ipv6 flowlabel-zero</code> To disable the 0 from being set in the field and allow the protocol operations to fill the field, use the <code>no ipv6 flowlabel-zero</code> command.
Default	Disabled
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>DellEMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information

If the flowlabel value is already set for BGP or SSH, the system defaults to the already configured value. All packets on the same connection are considered part of the same flow by the system. For new connections, set the new flowlabel to zero.

ipv6 host

Assign a name and IPv6 address the host-to-IPv6 address mapping table uses.

Syntax `ipv6 host name ipv6-address`
 To remove an IP host, use the `no ipv6 host name {ipv6-address}`.

Parameters

name	Enter a text string to associate with one IP address.
ipv6-address	Enter the IPv6 address (X:X:X::X) to be mapped to the name.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.1.0	Introduced on the E-Series.

ipv6 name-server

Enter up to six IPv6 addresses of name servers. The order you enter the addresses determines the order of their use.

Syntax `ipv6 name-server ipv6-address [ipv6-address2... ipv6-address6]`
 To remove a name server, use the `no ipv6 name-server ipv6-address` command.

Parameters

ipv6-address	Enter the IPv6 address (X:X:X::X) of the name server to be used. Note: The :: notation specifies successive hexadecimal fields of zeros.
ipv6-address2... ipv6-address6	(OPTIONAL) Enter up to five more IPv6 addresses, in the x:x:x::x format, of name servers to be used. Separate the IPv6 addresses with a space.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.1.0	Introduced on the E-Series.

Usage Information You can separately configure both IPv4 and IPv6 domain name servers.

In a dual stack setup, the system sends both A (request for IPv4 — RFC 1035) and AAAA (request for IPv6 — RFC 3596) record requests to a DNS server even if only the `ip name-server` command is configured.

ipv6 nd dad attempts

To perform duplicate address detection (DAD) on an interface, configure the number of neighbor solicitation messages that are sent.

Syntax `ipv6 nd dad attempts {number of attempts}`

To restore the default value, use the `no ipv6 nd dad attempts` command.

Parameters ***number of attempts*** Enter the number of attempts to be made to detect a duplicate address. The range is from 0 to 15. Setting the value to 0 disables DAD on the interface.

Default 3 attempts

Command Modes INTERFACE (management interface only)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

ipv6 nd disable-reachable-timer

Keep the learnt neighbor discovery entries stateless so that the entries do not time out.

Syntax	<code>ipv6 nd disable-reachable-timer</code> To restore to default, use the <code>no ipv6 nd disable-reachable-timer</code> command.
Default	Disabled
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.11.0.1	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S4810, S4820, S5000, S6000, S6010-ON, S6000-ON, S6100-ON, Z9100-ON, C9010, Z9500, MXL, and FN IOM.

ipv6 nd prefix

Specify which IPv6 prefixes are included in Neighbor Advertisements.

Syntax	<code>ipv6 nd prefix {<i>ipv6-prefix</i> <i>prefix-length</i> default} [no-advertise] [no-autoconfig] [no-rtr-address] [off-link] [lifetime {<i>valid</i> infinite}] {<i>preferred</i> infinite}]</code>																		
Parameters	<table><tr><td><i>ipv6-prefix</i></td><td>Enter an IPv6 prefix.</td></tr><tr><td><i>prefix-length</i></td><td>Enter the prefix then the prefix length. The length range is from 0 to 128.</td></tr><tr><td>default</td><td>Enter the keyword <code>default</code> to set default parameters for all prefixes.</td></tr><tr><td>no-advertise</td><td>Enter the keyword <code>no-advertise</code> to prevent the specified prefix from being advertised.</td></tr><tr><td>no-autoconfig</td><td>Enter the keywords <code>no-autoconfig</code> to disable Stateless Address Autoconfiguration.</td></tr><tr><td>no-rtr-address</td><td>Enter the keyword <code>no-rtr-address</code> to exclude the full router address from router advertisements (the R bit is not set).</td></tr><tr><td>off-link</td><td>Enter the keywords <code>off-link</code> to advertise the prefix without stating to recipients that the prefix is either on-link or off-link.</td></tr><tr><td><i>valid-lifetime</i> infinite</td><td>Enter the amount of time that the prefix is advertised, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 2592000. The maximum value means that the preferred lifetime does not expire for the valid-life time parameter.</td></tr><tr><td><i>preferred-lifetime</i> infinite</td><td>Enter the amount of time that the prefix is preferred, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 604800. The maximum value means that the preferred lifetime and does not expire.</td></tr></table>	<i>ipv6-prefix</i>	Enter an IPv6 prefix.	<i>prefix-length</i>	Enter the prefix then the prefix length. The length range is from 0 to 128.	default	Enter the keyword <code>default</code> to set default parameters for all prefixes.	no-advertise	Enter the keyword <code>no-advertise</code> to prevent the specified prefix from being advertised.	no-autoconfig	Enter the keywords <code>no-autoconfig</code> to disable Stateless Address Autoconfiguration.	no-rtr-address	Enter the keyword <code>no-rtr-address</code> to exclude the full router address from router advertisements (the R bit is not set).	off-link	Enter the keywords <code>off-link</code> to advertise the prefix without stating to recipients that the prefix is either on-link or off-link.	<i>valid-lifetime</i> infinite	Enter the amount of time that the prefix is advertised, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 2592000 . The maximum value means that the preferred lifetime does not expire for the valid-life time parameter.	<i>preferred-lifetime</i> infinite	Enter the amount of time that the prefix is preferred, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 604800 . The maximum value means that the preferred lifetime and does not expire.
<i>ipv6-prefix</i>	Enter an IPv6 prefix.																		
<i>prefix-length</i>	Enter the prefix then the prefix length. The length range is from 0 to 128.																		
default	Enter the keyword <code>default</code> to set default parameters for all prefixes.																		
no-advertise	Enter the keyword <code>no-advertise</code> to prevent the specified prefix from being advertised.																		
no-autoconfig	Enter the keywords <code>no-autoconfig</code> to disable Stateless Address Autoconfiguration.																		
no-rtr-address	Enter the keyword <code>no-rtr-address</code> to exclude the full router address from router advertisements (the R bit is not set).																		
off-link	Enter the keywords <code>off-link</code> to advertise the prefix without stating to recipients that the prefix is either on-link or off-link.																		
<i>valid-lifetime</i> infinite	Enter the amount of time that the prefix is advertised, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 2592000 . The maximum value means that the preferred lifetime does not expire for the valid-life time parameter.																		
<i>preferred-lifetime</i> infinite	Enter the amount of time that the prefix is preferred, or enter <code>infinite</code> for an unlimited amount of time. The range is from 0 to 4294967295. The default is 604800 . The maximum value means that the preferred lifetime and does not expire.																		
Command Modes	INTERFACE																		
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																		

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.2.0	Introduced on the E-Series, C-Series, and S-Series.

Usage Information

By default, all prefixes configured as addresses on the interface are advertised. This command allows control over the individual parameters per prefix; you can use the `default` keyword to use the default parameters for all prefixes. If a prefix has been configured with lifetime parameter values, the default values cannot be applied using the `ipv6 nd prefix default no-autoconfig` command.

ipv6 nd reachable-time

Configure the amount of time before an IPv6 neighbor is considered unreachable.

Syntax `ipv6 nd reachable-time reachable-time`
To restore to default, use the `no ipv6 nd reachable-time` command.

Parameters **reachable-time** Enter the reachable time in milliseconds. The value is from 0 to 3600000. The default value is 0.

Default Disabled

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(1.0)	Introduced on the S5048F-ON.
Legacy version	Introduced on the S series and Z series.

ipv6 route

Establish a static IPv6 route.

S5000

Syntax `ipv6 route [vrf vrf-name] ipv6-address prefix-length {ipv6-address | interface | interface ipv6-address} [distance] [tag value] [permanent] [weight weight-value]`
To remove the IPv6 route, use the `no ipv6 route` command.

Parameters **vrf vrf-name** (Optional) Enter the keyword `vrf` followed by the name of the VRF to install IPv6 routes in that VRF.
ipv6-address prefix-length Enter the IPv6 address in the `x:x:x::x` format then the prefix length in the `/x` format. The range is from `/0` to `/128`.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

interface

(OPTIONAL) Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a tunnel interface, enter the keyword `tunnel` then the tunnel interface number. The range is from 1 to 16383.
- For a VLAN interface, enter the keyword `VLAN` then the vlan number. The range is from 1 to 4094.

If you configure a static IPv6 route using an egress interface and enter the `ping` command to reach the destination IPv6 address, the ping operation may not work. Configure the IPv6 route using a next-hop IPv6 address in order for the `ping` command to detect the destination address.

ipv6-address

(OPTIONAL) Enter the forwarding router IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

distance

(OPTIONAL) Enter a number as the metric distance assigned to the route. The range is from 1 to 255.

tag value

(OPTIONAL) Enter the keyword `tag` then a tag value number. The range is from 1 to 4294967295.

permanent

(OPTIONAL) Enter the keyword `permanent` to specify that the route is not to be removed, even if the interface assigned to that route goes down.

 **NOTE:** If you disable the interface with an IPv6 address associated with the keyword `permanent`, the route disappears from the routing table.

weight weight-value

Enter the keyword `weight` followed by a weight value. The range is from 0 to 255.

 **NOTE:** Weight for a static route can be added only for the destination address and not for the route pointing to destination a interface.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.10(0.0)

Introduced on the S6100-ON.

9.8(2.0)

Introduced on the S3100 series.

9.8(1.0)

Introduced on the Z9100-ON.

9.8(0.0P5)

Introduced on the S4048-ON.

9.8(0.0P2)

Introduced on the S3048-ON.

9.7(0.0)

Added support for VRF. Also included the `weight` parameter to support weighted ECMP feature. Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

When the interface goes down, Dell EMC Networking OS withdraws the route. The route is re-installed, by Dell EMC Networking OS, when the interface comes back up. When a recursive resolution is “broken,” Dell EMC Networking OS withdraws the route. The route is re-installed, by Dell EMC Networking OS, when the recursive resolution is satisfied.

After an IPv6 static route interface is created, if an IP address is not assigned to a peer interface, the peer must be manually pinged to resolve the neighbor information.

You can specify a weight for an IPv4 or IPv6 static route. If the weight value of a path is 0, then that path is not used for forwarding when weighted ECMP is in effect. Also, if a path corresponding to a static route (destination) has a non-zero weight assigned to it and other paths do not have any weight configured, then regular ECMP is used for forwarding.

You can specify the weight value only to destination address and not on the egress port.

A route is considered for weighted ECMP calculations only if each paths corresponding to that route is configured with a weight.

Example

```
DellEMC(conf)# ipv6 route 44::/64 33::1 weight 100
DellEMC(conf)# ipv6 route 44::/64 33::2 weight 200
DellEMC(conf)# do show running-config | grep ipv6 route
DellEMC(conf)# ipv6 route vrf vrf_test 44::/64 33::1 weight 100
DellEMC(conf)# ipv6 route vrf vrf_test 44::/64 33::2 weight 200
DellEMC(conf)# do show running-config | grep ipv6 route vrf
```

Related Commands

- [show ipv6 route](#) — view the IPv6 configured routes.

ipv6 unicast-routing

Enable IPv6 unicast routing on the device.

Syntax

`ipv6 unicast-routing`

To disable unicast routing, use the `no ipv6 unicast-routing` command.

Defaults

Enabled

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *DellEMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.5(0.1)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

Because this command is enabled by default, it does not appear in the running configuration. When you disable unicast routing, the `no ipv6 unicast-routing` command is included in the running configuration. Whenever unicast routing is disabled or re-enabled, Dell EMC Networking OS generates a syslog message indicating the action.

Disabling unicast routing on an E-Series chassis causes the following behavior:

- static and protocol learned routes are removed from RTM and from the CAM; packet forwarding to these routes is terminated
- connected routes and resolved neighbors remain in the CAM and new IPv6 neighbors are still discoverable
- additional protocol adjacencies (OSPFv3 and BGP4) are brought down and no new adjacencies are formed
- the IPv6 address family configuration (under router bgp) is deleted
- IPv6 Multicast traffic continues to flow unhindered

show ipv6 cam stack-unit

Displays the IPv6 CAM entries for the specified stack-unit.

S5000

Syntax

```
show ipv6 cam [vrf vrf-name] stack-unit unit-number port-set {0-1} [summary | index | ipv6 address]
```

Parameters

vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to display IPv6 CAM entries corresponding to that VRF.  NOTE: If you do not specify this option, IPv6 CAM entries corresponding to the default VRF are displayed.
unit-number	Enter the stack unit's ID number.
port-set	Enter the keyword <code>Port Set</code> .
summary	(OPTIONAL) Enter the keyword <code>summary</code> to display a table listing network prefixes and the total number prefixes which can be entered into the IPv6 CAM.
index	(OPTIONAL) Enter the index in the IPv6 CAM.
ipv6-address	Enter the IPv6 address in the <code>x:x:x::x/n</code> format to display networks that have more specific prefixes. The range is from <code>/0</code> to <code>/128</code> .  NOTE: The <code>::</code> notation specifies successive hexadecimal fields of zeros.

Defaults

None

Command Modes • EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.1	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.

Usage Information

i **NOTE:** If a route has a mask greater than 64, no output is displayed and no output is displayed for `show ipv6 cam stack-unit unit-number port-set {0-1} ipv6-address`, but an equivalent /64 entry would be listed in the `show ipv6 cam stack-unit unit-number port-set {0-1}` output. Similarly, if there is more than one ECMP object with a destination route that has a mask greater than 64, if the first 64 bits in the destination routes of the ECMP objects are the same, only one route is installed in CAM even though multiple ECMP path entries exist.

show ipv6 control-plane icmp

Displays the status of the icmp control-plane setting for the error eate limit setting.

Syntax `show ipv6 control-plane icmp`
Default 100
Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Related Commands

- [ipv6 flowlabel-zero](#) — configure IPv6 address auto-configuration for the management interface.

show ipv6 fib stack-unit

View all FIB entries.

S5000

Syntax `show ipv6 fib [vrf vrf-name] stack-unit unit-number [summary | ipv6-address]`

Parameters

- vrf vrf-name** (Optional) Enter the keyword `vrf` followed by the name of the VRF to display neighbors corresponding to that VRF.
- slot-number** Enter the number of the stack unit.
- summary** (OPTIONAL) Enter the keyword `summary` to view a summary of entries in IPv6 cam.
- ipv6-address** Enter the IPv6 address in the `x:x:x::x/n` format to display networks that have more specific prefixes. The range is from `/0` to `/128`.
 **NOTE:** The `::` notation specifies successive hexadecimal fields of zeros.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the S-Series.

Usage Information Host tables are not stored in CAM tables on S-Series platforms. Entries for `camIndex` displays as zero (0) on the `show ipv6 fib stack-unit` output for neighbor entries, such as address resolution protocol (ARP) entries.

show ipv6 flowlabel-zero

Display the flow label zero setting.

Syntax `show ipv6 flowlabel-zero`

Default Disabled

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Related Commands

- [ipv6 nd dad attempts](#) — configure system to set the flow label field in the packets to zero.

show ipv6 interface

Display the status of interfaces configured for IPv6.

Syntax `show ipv6 interface interface {slot | slot/port} [brief] [configured] [stack-unit id]`

Parameters	Description
<i>interface</i>	(OPTIONAL) Enter the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a Null interface, enter the keyword <code>null</code> then the Null interface number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094. • For stacking, enter the keywords <code>stack-unit</code> then the stack-unit ID. • For a tunnel interface, enter the keyword <code>tunnel</code> then the tunnel ID.
<i>brief</i>	(OPTIONAL) View a summary of IPv6 interfaces.
<i>configured</i>	(OPTIONAL) View information on all IPv6 configured interfaces.
<i>managementethernet slot/port</i>	(OPTIONAL) View information on an IPv6 Management port. Enter the slot number (0-1) and port number zero (0).
<i>loopback</i>	(OPTIONAL) View information for IPv6 Loopback interfaces.
<i>port-channel</i>	(OPTIONAL) View information for IPv6 port channels.
<i>tengigabitethernet</i>	(OPTIONAL) View information for an IPv6 tengigabitethernet interface.
<i>fortyGigE</i>	(OPTIONAL) View information for an IPv6 fortygigabitethernet interface.
<i>stack-unit id</i>	(OPTIONAL) View information for stacking.
<i>tunnel tunnel-id</i>	(OPTIONAL) View information for a tunnel interface.
<i>vlan</i>	(OPTIONAL) View information for IPv6 VLANs.
Defaults	None
Command Modes	<ul style="list-style-type: none"> • EXEC • EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.11(0.0)	Updated the command output to include the unicast reverse path forwarding (uRPF) status.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Added support for IPv6 recursive DNS addresses on the Z9500.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Added support for tunnel interface.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.2.1	Introduced on the S-Series.
8.2.1.0	Introduced on the E-Series. Added support for the managementethernet slot/port parameter.
7.8.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The Management port is enabled by default (no shutdown). If necessary, use the `ipv6 address` command to assign an IPv6 address to the Management port.

Example

```
DellEMC# show ipv6 interface tengigabit 1/12
TenGigabitEthernet 1/12 is up, line protocol is up
IPV6 is enabled
Link Local address: fe80::201:e8ff:fea7:497e
Global Unicast address(es):
  100::2, subnet is 100::/64 (MANUAL)
  Remaining lifetime: infinite
Global Anycast address(es):
Joined Group address(es):
  ff02::1
  ff02::2
  ff02::1:ff00:2
  ff02::1:ffa7:497e
ND MTU is 0
ICMP redirects are not sent
DAD is enabled, number of DAD attempts: 3
ND reachable time is 39610 milliseconds
ND base reachable time is 30000 milliseconds
ND advertised reachable time is 0 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND router advertisements are sent every 198 to 600 seconds
ND router advertisements live for 1800 seconds
ND advertised hop limit is 64
IPv6 hop limit for originated packets is 64
IPv6 unicast RPF check is not supported
DellEMC#
```

```
DellEMC# show ipv6 interface port-channel 128
Port-channel 128 is down, line protocol is down
IPV6 is enabled
Link Local address: fe80::201:e8ff:fe8a:e846
Global Unicast address(es):
  aabb::aall, subnet is aabb::/64 (MANUAL)
  Remaining lifetime: infinite
Global Anycast address(es):
Joined Group address(es):
  ff02::1
```

```

ff02::2
ff02::1:ff00:aa11
ff02::1:ff8a:e846
ND MTU is 0
ICMP redirects are not sent
DAD is enabled, number of DAD attempts: 3
ND reachable time is 27550 milliseconds
ND base reachable time is 30000 milliseconds
ND advertised reachable time is 0 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND router advertisements are sent every 198 to 600 seconds
ND router advertisements live for 1800 seconds
ND advertised hop limit is 64
IPv6 hop limit for originated packets is 64
IPv6 unicast RPF check is not supported
DelleMC#

```

```

DelleMC# show ipv6 interface vlan 112
Vlan 112 is down, line protocol is down
IPv6 is enabled
Link Local address: fe80::201:e8ff:fe8a:e846
Global Unicast address(es):
  1111::bbbb, subnet is 1111::/64 (MANUAL)
  Remaining lifetime: infinite
Global Anycast address(es):
Joined Group address(es):
  ff02::1
  ff02::2
  ff02::1:ff00:bbbb
  ff02::1:ff8a:e846
ND MTU is 0
ICMP redirects are not sent
DAD is enabled, number of DAD attempts: 3
ND reachable time is 19390 milliseconds
ND base reachable time is 30000 milliseconds
ND advertised reachable time is 0 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND router advertisements are sent every 198 to 600 seconds
ND router advertisements live for 1800 seconds
ND advertised hop limit is 64
IPv6 hop limit for originated packets is 64
IPv6 unicast RPF check is not supported
DelleMC#

```

**Example
(Managementethernet)**

```

DelleMC# show ipv6 interface management 0/0
ManagementEthernet 0/0 is up, line protocol is up
IPv6 is enabled
Link Local address: fe80::201:e8ff:fea7:497e
Global Unicast address(es):
  Actual address is 300::1, subnet is 300::/64 (MANUAL)
  Remaining lifetime: infinite
  Virtual-IP IPv6 address is not set
Global Anycast address(es):
Joined Group address(es):
  ff02::1
  ff02::1:ff00:1
  ff02::1:ffa7:497e
ND MTU is 0
ICMP redirects are not sent
DAD is enabled, number of DAD attempts: 3
ND reachable time is 20410 milliseconds
ND base reachable time is 30000 milliseconds
ND retransmit interval is 1000 milliseconds
ND hop limit is 64
DelleMC#

```

Example (Brief)

```
DellEMC# show ipv6 interface brief
TenGigabitEthernet 1/2          [administratively down/down]
    fe80::201:e8ff:fea7:497e
    2002:1:2::3/96
TenGigabitEthernet 1/12         [up/up]
    fe80::201:e8ff:fea7:497e
    100::2/64
ManagementEthernet 1/0         [up/up]
    fe80::201:e8ff:fea7:497e
    300::1/64
DellEMC#
```

Example (Tunnel)

```
DellEMC# show ipv6 interface tunnel 1
Tunnel 1 is up, line protocol is up
  IPv6 is enabled
  Link Local address: fe80::201:e8ff:fea7:497e
  Global Unicast address(es):
    400::1, subnet is 400::/64 (MANUAL)
    Remaining lifetime: infinite
  Global Anycast address(es):
  Joined Group address(es):
    ff02::1
    ff02::2
    ff02::1:ff00:1
    ff02::1:ffa7:497e
  ND MTU is 0
  ICMP redirects are not sent
  DAD is enabled, number of DAD attempts: 3
  ND reachable time is 20410 milliseconds
  ND base reachable time is 30000 milliseconds
  ND advertised reachable time is 0 milliseconds
  ND advertised retransmit interval is 0 milliseconds
  ND router advertisements are sent every 198 to 600 seconds
  ND router advertisements live for 1800 seconds
  ND advertised hop limit is 64
  IPv6 hop limit for originated packets is 64
  IPv6 unicast RPF check is not supported
DellEMC#
```

show ipv6 management-route

Display the IPv6 static routes configured for the management interface.

Syntax `show ipv6 management-route [all | connected | summary | static]`

Parameters

all	(OPTIONAL) Enter the keyword <code>all</code> to view all IP addresses assigned to all Management interfaces on the switch.
connected	(OPTIONAL) Enter the keyword <code>connected</code> to view only routes directly connected to the Management interface.
summary	(OPTIONAL) Enter the keyword <code>summary</code> to view a table listing the number of active and non-active routes and their sources.
static	(OPTIONAL) Enter the keyword <code>static</code> to view non-active routes also.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.4.1.0	Introduced on the C- and E-Series.
8.3.7.0	Introduced on the S4810.

Example

```
DellEMC# show ipv6 management-route
IPv6 Destination      Gateway                State
-----
2001:34::0/64         ManagementEthernet 0/0  Connected
2001:68::0/64         2001:34::16          Active
DellEMC#
```

show ipv6 mld_host

Display the IPv6 MLD host counters.

Syntax `show ipv6 mld_host`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information The following describes the `show ipv6 mld-host` command shown in the following example.

Field	Description
Valid MLD Packets	The total number of packets received and sent from the last time the elapsed time was cleared.

Field	Description
Reports	The total number of reports (queries and unsolicited reports generated from joins or leaves) that have been received or sent.
Leaves	The number of Multicast leaves that have been sent.
MLDv1 queries	The number of MLDv1 queries that have been received.
MLDv2 queries	The number of MLDv2 queries that have been received.
Malformed Packets	The number of MLDv1 and MLDv2 packets that do not match the requirement for a valid MLD packet.

Example

```
MLD Host Traffic Counters
Elapsed time since counters cleared: 0028:33:52
Valid MLD Packets      Received    Sent
Reports                97962      18036
Leaves                 -----    0
MLDv2 Queries          18000      -----
MLDv1 Queries          0           -----
Errors:
Malformed Packets: 4510
```

show ipv6 route

Displays the IPv6 routes.

S5000

Syntax

```
show ipv6 route [ipv6-address prefix-length] [vrf vrf-name] [hostname]
[all] [bgp as number] [connected] [isis tag] [list prefix-list name] [ospf
process-id] [rip] [static] [summary]
```

Parameters

ipv6-address	(OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.
prefix-length	 NOTE: The :: notation specifies successive hexadecimal fields of zeros.
vrf vrf-name	(Optional) Enter the keyword vrf followed by the name of the VRF to display IPv6 routes corresponding to that VRF.  NOTE: If you do not specify this option, routes corresponding to the default VRF are displayed.
hostname	(OPTIONAL) View information for this IPv6 routes with Host Name.
all	(OPTIONAL) View information for all IPv6 routes.
bgp	(OPTIONAL) View information for all IPv6 BGP routes.
connected	(OPTIONAL) View only the directly connected IPv6 routes.
isis	(OPTIONAL) View information for all IPv6 IS-IS routes.
list	(OPTIONAL) View the IPv6 prefix list.
ospf	(OPTIONAL) View information for all IPv6 OSPF routes.
rip	(OPTIONAL for E-Series only) View information for all IPv6 RIP routes.
static	(OPTIONAL) View only routes configured by the <code>ipv6 route</code> command.
summary	(OPTIONAL) View a brief list of the configured IPv6 routes.

Defaults

none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show ipv6 route` command shown in the following examples.

Field	Description
(undefined)	Identifies the type of route: <ul style="list-style-type: none"> • L = Local • C = connected • S = static • R = RIP • B = BGP • IN = internal BGP • EX = external BGP • LO = Locally Originated • O = OSPF • IA = OSPF inter-area • N1 = OSPF NSSA external type 1 • N2 = OSPF NSSA external type 2 • E1 = OSPF external type 1 • E2 = OSPF external type 2 • i = IS-IS • L1 = IS-IS level-1 • L2 = IS-IS level-2 • IA = IS-IS inter-area • * = candidate default • > = non-active route • + = summary routes
Destination	Identifies the route's destination IPv6 address.
Gateway	Identifies whether the route is directly connected and on which interface the route is configured.

Field	Description
Dist/Metric	Identifies if the route has a specified distance or metric.
Last Change	Identifies when the route was last changed or configured.

Example (S-Series)

```
DellEMC# show ipv6 route

Codes: C - connected, L - local, S - static, R - RIP,
       B - BGP, IN - internal BGP, EX - external BGP, LO - Locally
Originated,
       O - OSPF, IA - OSPF inter area, N1 - OSPF NSSA external type 1,
       N2 - OSPF NSSA external type 2, E1 - OSPF external type 1,
       E2 - OSPF external type 2, i - IS-IS, L1 - IS-IS level-1,
       L2 - IS-IS level-2, IA - IS-IS inter area, * - candidate default,
Gateway of last resort is not set

      Destination  Dist/Metric,          Gateway,    Last Change
      -----
C      100::/64 [0/0]
      Direct, Te 1/12/1, 20:00:18
C      400::/64 [0/0]
      Direct, Tu 1, 00:09:02
S      800::/64 [1/0]
      via 100::1, Te 1/12/1, 00:00:50
L      fe80::/10 [0/0]
      Direct, Nu 0, 20:00:18
DellEMC#
```

Example (Summary)

```
show ipv6 route summary:
=====
DellEMC# show ipv6 route summary

Route Source           Active Routes  Non-active Routes
connected              3              0
static                 1              0
Total                  4              0
Total 4 active route(s) using 928 bytes
DellEMC#
```

trust ipv6-diffserv

Allows the dynamic classification of IPv6 DSCP.

Syntax	<code>trust ipv6-diffserv</code> To remove the definition, use the <code>no trust ipv6-diffserv</code> command.
Defaults	None
Command Modes	CONFIGURATION-POLICY-MAP-IN
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.7.0	Introduced on the S4810.
8.4.2.1	Introduced on the C-Series and S-Series.
8.2.1.0	Introduced on the E-Series.
7.4.1.0	Introduced on the E-Series.

**Usage
Information**

When you configure trust IPv6 diffserv, matched bytes/packets counters are not incremented in the `show qos statistics` command.

Trust diffserv (IPv4) can co-exist with trust ipv6-diffserv in an Input Policy Map. Dynamic classification happens based on the mapping as shown:

IPv6 Service Class Field	Queue ID
111XXXXX	7
110XXXXX	6
101XXXXX	5
100XXXXX	4
011XXXXX	3
010XXXXX	2
001XXXXX	1
000XXXXX	0

IPv6 Border Gateway Protocol (IPv6 BGP)

IPv6 Border Gateway Protocol (IPv6 BGP) is supported on Dell Networking platforms.

This chapter includes the following sections:

- IPv6 BGP Commands
- IPv6 MBGP Commands

Topics:

- IPv6 BGP Commands
- aggregate-address
- bgp always-compare-med
- bgp bestpath as-path ignore
- bgp bestpath med confed
- bgp bestpath med missing-as-best
- bgp client-to-client reflection
- bgp cluster-id
- bgp confederation identifier
- bgp confederation peers
- bgp dampening
- bgp default local-preference
- bgp enforce-first-as
- bgp fast-external-failover
- bgp four-octet-as-support
- bgp graceful-restart
- bgp log-neighbor-changes
- bgp non-deterministic-med
- bgp recursive-bgp-next-hop
- bgp regex-eval-optz-disable
- bgp router-id
- bgp soft-reconfig-backup
- capture bgp-pdu max-buffer-size
- capture bgp-pdu neighbor (ipv6)
- clear ip bgp * (asterisk)
- clear ip bgp as-number
- clear ip bgp ipv6-address
- clear ip bgp peer-group
- clear ip bgp ipv6 dampening
- clear ip bgp ipv6 flap-statistics
- clear ip bgp ipv6 unicast soft
- debug ip bgp
- debug ip bgp events
- debug ip bgp ipv6 dampening
- debug ip bgp ipv6 unicast soft-reconfiguration
- ipv6 prefix-list
- neighbor soft-reconfiguration inbound
- debug ip bgp keepalives
- debug ip bgp notifications
- debug ip bgp updates
- default-metric
- description
- distance bgp

- maximum-paths
- neighbor activate
- neighbor advertisement-interval
- neighbor allowas-in
- neighbor default-originate
- neighbor description
- neighbor distribute-list
- neighbor ebgp-multihop
- neighbor fall-over
- neighbor filter-list
- neighbor maximum-prefix
- neighbor next-hop-self
- neighbor peer-group (assigning peers)
- neighbor peer-group (creating group)
- neighbor peer-group passive
- neighbor remote-as
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- neighbor send-community
- neighbor shutdown
- neighbor soft-reconfiguration inbound
- neighbor subnet
- neighbor timers
- neighbor update-source
- neighbor weight
- neighbor X:X::X password
- network
- network backdoor
- redistribute
- redistribute isis
- redistribute ospf
- router bgp
- show capture bgp-pdu neighbor
- show config
- show ipv6 prefix-list
- show ip bgp ipv6 unicast
- show ip bgp ipv6 unicast cluster-list
- show ip bgp ipv6 unicast community
- show ip bgp ipv6 unicast community-list
- show ip bgp ipv6 unicast dampened-paths
- show ip bgp ipv6 unicast detail
- show ip bgp ipv6 unicast extcommunity-list
- show ip bgp ipv6 unicast filter-list
- show ip bgp ipv6 unicast flap-statistics
- show ip bgp ipv6 unicast inconsistent-as
- show ip bgp ipv6 unicast neighbors
- show ip bgp ipv6 unicast peer-group
- show ip bgp ipv6 unicast summary
- show ip bgp next-hop
- show ip bgp paths
- show ip bgp paths as-path
- show ip bgp paths community
- show ip bgp paths extcommunity
- show ip bgp regexp
- timers bgp

- IPv6 MBGP Commands
- address family
- aggregate-address
- bgp dampening
- clear ip bgp ipv6 unicast
- clear ip bgp ipv6 unicast dampening
- clear ip bgp ipv6 flap-statistics
- debug ip bgp ipv6 unicast dampening
- debug ip bgp ipv6 unicast peer-group updates
- debug ip bgp ipv6 unicast updates
- distance bgp
- neighbor activate
- neighbor advertisement-interval
- neighbor default-originate
- neighbor distribute-list
- neighbor filter-list
- neighbor maximum-prefix
- neighbor next-hop-self
- neighbor remove-private-as
- neighbor route-map
- neighbor route-reflector-client
- network
- redistribute
- show ipv6 mbgproutes
- show ip bgp ipv6 unicast
- show ip bgp ipv6 unicast cluster-list
- show ip bgp ipv6 unicast community
- show ip bgp ipv6 unicast community-list
- show ip bgp ipv6 unicast dampened-paths
- show ip bgp ipv6 unicast detail
- show ip bgp ipv6 unicast filter-list
- show ip bgp ipv6 unicast flap-statistics
- show ip bgp ipv6 unicast inconsistent-as
- show ip bgp ipv6 unicast neighbors
- show ip bgp ipv6 unicast peer-group
- show ip bgp ipv6 unicast summary

IPv6 BGP Commands

BGP is an external gateway protocol that transmits interdomain routing information within and between autonomous systems (AS). BGP version 4 (BGPv4) supports classless interdomain routing and the aggregation of routes and AS paths. Basically, two routers (called neighbors or peers) exchange information including full routing tables and periodically send messages to update those routing tables.

The following commands allow you to configure and enable BGP.

aggregate-address

Summarize a range of prefixes to minimize the number of entries in the routing table.

Syntax `aggregate-address ipv6-address prefix-length [advertise-map map-name] [as-set] [attribute-map map-name] [summary-only] [suppress-map map-name]`

Parameters	<p><i>ipv6-address</i> Enter the IPv6 address in the x:x:x::x format followed by the prefix length in the /x format. The range is from /0 to /128.</p> <p><i>prefix-length</i>  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p><i>advertise-map</i> (OPTIONAL) Enter the keywords <code>advertise-map</code> then the name of a configured route map to set filters for advertising an aggregate route.</p> <p><i>map-name</i></p> <p><i>as-set</i> (OPTIONAL) Enter the keywords <code>as-set</code> to generate path attribute information and include it in the aggregate. AS_SET includes AS_PATH and community information from the routes included in the aggregated route.</p> <p><i>attribute-map</i> (OPTIONAL) Enter the keywords <code>attribute-map</code> then the name of a configured route map to modify attributes of the aggregate, excluding AS_PATH and NEXT_HOP attributes.</p> <p><i>map-name</i></p> <p><i>summary-only</i> (OPTIONAL) Enter the keywords <code>summary-only</code> to advertise only the aggregate address. Specific routes are not advertised.</p> <p><i>suppress-map</i> (OPTIONAL) Enter the keywords <code>suppress-map</code> then the name of a configured route map to identify which more-specific routes in the aggregate are suppressed.</p> <p><i>map-name</i></p>
-------------------	--

Defaults Not configured.

Command Modes CONFIGURATION-ROUTER-BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information At least one of the routes included in the aggregate address must be in the BGP routing table for the configured aggregate to become active.

Do not add the `as-set` parameter to the aggregate if routes within the aggregate are constantly changing as the aggregate will flap to keep track of the changes in the AS_PATH.

In route maps used in the `suppress-map` parameter, routes meeting the `deny` clause are not suppress; in other words, they are allowed. The opposite is true: routes meeting the `permit` clause are suppressed.

If the route is injected using the `network` command, that route still appears in the routing table if you configure the `summary-only` parameter in the `aggregate-address` command.

The `summary-only` parameter suppresses all advertisements. If you want to suppress advertisements to only specific neighbors, use the `neighbor distribute-list` command.

In the `show ip bgp ipv6 unicast` command, aggregates contain an 'a' in the first column and routes suppressed by the aggregate contain an 's' in the first column.

bgp always-compare-med

Allows you to enable comparison of the MULTI_EXIT_DISC (MED) attributes in the paths from different external ASs.

Syntax `bgp always-compare-med`

To disable comparison of MED, use the `no bgp always-compare-med` command.

Defaults Disabled (that is, the software only compares MEDs from neighbors within the same AS).

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information Any update without a MED attribute is the least preferred route.

If you enable this command, use the `capture bgp-pdu max-buffer-size *` command to recompute the best path.

bgp bestpath as-path ignore

Ignore the AS PATH in BGP best path calculations.

Syntax `bgp bestpath as-path ignore`

To return to the default, use the `no bgp bestpath as-path ignore` command.

Defaults Disabled (that is, the software considers the AS_PATH when choosing a route as best).

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information If you enable this command, use the `capture bgp-pdu max-buffer-size *` command to recompute the best path.

bgp bestpath med confed

Enable MULTI_EXIT_DISC (MED) attribute comparison on paths learned from BGP confederations.

Syntax `bgp bestpath med confed`

To disable MED comparison on BGP confederation paths, use the `no bgp bestpath med confed` command.

Defaults Disabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The software compares the MEDs only if the path contains no external autonomous system numbers. If you enable this command, use the `capture bgp-pdu max-buffer-size *` command to recompute the best path.

bgp bestpath med missing-as-best

During path selection, indicate a preference to paths with missing MED (MULTI_EXIT_DISC) over those paths with an advertised MED attribute.

Syntax `bgp bestpath med missing-as-best`
To return to the default selection, use the `no bgp bestpath med missing-as-best` command.

Defaults Disabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The MED is a 4-byte unsigned integer value and the default behavior is to assume a missing MED as 4294967295. This command causes a missing MED to be treated as 0. During path selection, paths with a lower MED are preferred over those with a higher MED.

bgp client-to-client reflection

Allows you to enable route reflection between clients in a cluster.

Syntax `bgp client-to-client reflection`
To disable client-to-client reflection, use the `no bgp client-to-client reflection` command.

Defaults Enabled when a route reflector is configured.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

Route reflection to clients is not necessary if all client routers are fully meshed.

Related Commands

- [bgp cluster-id](#) – assigns an ID to a BGP cluster with two or more route reflectors.
- [neighbor route-reflector-client](#) – configures a route reflector and clients.

bgp cluster-id

Assign a cluster ID to a BGP cluster with more than one route reflector.

Syntax

`bgp cluster-id {ip-address | number}`

To delete a cluster ID, use the `no bgp cluster-id {ip-address | number}` command.

Parameters

- ip-address** Enter an IP address as the route reflector cluster ID.
- number** Enter a route reflector cluster ID as a number from 1 to 4294967295.

Defaults

Not configured.

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

When a BGP cluster contains only one route reflector, the cluster ID is the route reflector's router ID. For redundancy, a BGP cluster may contain two or more route reflectors and you assign a cluster ID with the `bgp cluster-id` command. Without a cluster ID, the route reflector cannot recognize route updates from the other route reflectors within the cluster.

The default format for displaying the cluster-id is dotted decimal, but if you enter the cluster-id as an integer, it displays as an integer.

Related Commands

- [bgp client-to-client reflection](#) – enables route reflection between the route reflector and the clients.
- [neighbor route-reflector-client](#) – configures a route reflector and clients.
- [show ip bgp ipv6 unicast cluster-list](#) – views paths with a cluster ID.

bgp confederation identifier

Configure an identifier for a BGP confederation.

Syntax	<code>bgp confederation identifier as-number</code> To delete a BGP confederation identifier, use the <code>no bgp confederation identifier as-number</code> command.
Parameters	<i>as-number</i> Enter the AS number. The range is from 1 to 65535.
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	The autonomous systems configured in this command are visible to the EBGP neighbors. Each autonomous system is fully meshed and contains a few connections to other autonomous systems. The next hop, MED, and local preference information is preserved throughout the confederation. The system accepts confederation EBGP peers without a LOCAL_PREF attribute. The software sends AS_CONFED_SET and accepts AS_CONFED_SET and AS_CONF_SEQ.

bgp confederation peers

Specify the autonomous systems (ASs) that belong to the BGP confederation.

Syntax	<code>bgp confederation peers as-number [...as-number]</code> To remove bgp confederation peers, use the <code>no bgp confederation peer</code> command.
Parameters	<i>as-number</i> Enter the AS number. The range is 1 to 65535. <i>...as-number</i> (OPTIONAL) Enter up to 16 confederation numbers. The range is from 1 to 65535.
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

The Autonomous Systems configured in this command are visible to the EBGp neighbors. Each Autonomous System is fully meshed and contains a few connections to other Autonomous Systems.

After specifying autonomous systems numbers for the BGP confederation, recycle the peers to update their configuration.

Related Commands

[bgp confederation identifier](#) – configures a confederation ID.

bgp dampening

Enable BGP route dampening and configure the dampening parameters.

Syntax

```
bgp dampening [half-life reuse suppress max-suppress-time] [route-map map-name]
```

Parameters

<i>half-life</i>	(OPTIONAL) Enter the number of minutes after which the Penalty is decreased. After the router assigns a Penalty of 1024 to a route, the Penalty is decreased by half, after the half-life period expires. The range is from 1 to 45. The default is 15 minutes .
<i>reuse</i>	(OPTIONAL) Enter a number as the reuse value, which is compared to the flapping route's Penalty value. If the Penalty value is less than the reuse value, the flapping route is once again advertised (or no longer suppressed). The range is from 1 to 20000. The default is 750 .
<i>suppress</i>	(OPTIONAL) Enter a number as the suppress value, which is compared to the flapping route's Penalty value. If the Penalty value is greater than the suppress value, the flapping route is no longer advertised (that is, it is suppressed). The range is from 1 to 20000. The default is 2000 .
<i>max-suppress-time</i>	(OPTIONAL) Enter the maximum number of minutes a route can be suppressed. The default is four times the half-life value. The range is from 1 to 255. The default is 60 minutes .
<i>route-map map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of a configured route map. Only match commands in the configured route map are supported.

Defaults

Disabled.

Command Modes

ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information

If you enter `bgp dampening`, the default values for `half-life`, `reuse`, `suppress`, and `max-suppress-time` are applied. The parameters are position-dependent; therefore, if you configure one parameter, you must configure the parameters in the order they appear in the command.

Related Commands

[show ip bgp ipv6 unicast dampened-paths](#) – views the BGP paths.

bgp default local-preference

Change the default local preference value for routes exchanged between internal BGP peers.

Syntax	<code>bgp default local-preference value</code> To return to the default value, use the <code>no bgp default local-preference</code> command.
Parameters	value Enter a number to assign to routes as the degree of preference for those routes. When routes are compared, the higher the degree of preference or local preference value, the more the route is preferred. The range is from 0 to 4294967295. The default is 100 .
Defaults	100
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.

bgp enforce-first-as

Disable (or enable) enforce-first-as check for updates received from EBGp peers.

Syntax	<code>bgp enforce-first-as</code> To turn off the default, use the <code>no bgp enforce-first-as</code> command.
Defaults	Enabled.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	This is enabled by default; that is, for all updates received from EBGp peers, BGP ensures that the first AS of the first AS segment is always the AS of the peer. If not, the update is dropped and a counter is incremented. To view the failed enforce-first-as check counter, use the <code>show ip bgp ipv6 unicast neighbors</code> command. If you disable <code>enforce-first-as</code> , view it using the <code>show ip protocols</code> command.

Related Commands `show ip bgp ipv6 unicast neighbors` – displays IPv6 routing information exchanged by BGP neighbors.
`show ip protocols` – views information on routing protocols.

bgp fast-external-failover

Enable the fast external failover feature, which immediately resets the BGP session if a link to a directly connected external peer fails.

S5000

Syntax `bgp fast-external-failover`
To disable fast external failover, use the `no bgp fast-external-failover` command.

Defaults Enabled

Command Modes ROUTER BGP

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The `bgp fast-external-failover` command appears in the `show config` command output.

bgp four-octet-as-support

Enable 4-byte support for the BGP process.

Syntax `bgp four-octet-as-support`
To disable fast external fallover, use the `no bgp four-octet-as-support` command.

Defaults Disabled (supports 2-Byte format)

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information Routers supporting 4-Byte ASNs advertise that function in the OPEN message. The behavior of a 4-Byte router is slightly different depending on whether it is speaking to a 2-Byte router or a 4-Byte router.

When creating Confederations, all the routers in the Confederation must be 4- or 2-byte identified routers. You cannot mix them.

Where the 2-Byte format is from 1 to 65535, the 4-Byte format is from 1 to 4294967295. Both formats are accepted, and the advertisements reflect the entered format.

For more information about using the 2- or 4-Byte format, refer to the *Dell Networking OS Configuration Guide*.

bgp graceful-restart

Enable graceful restart on a BGP neighbor, a BGP node, or designate a local router to support graceful restart as a receiver only.

Syntax `bgp graceful-restart [restart-time seconds] [stale-path-time seconds] [role receiver-only]`

To return to the default, enter the `no bgp graceful-restart` command.

Parameters

- | | |
|--|---|
| neighbor ip-address / peer-group-name | Enter the keyword <code>neighbor</code> then one of the options: <ul style="list-style-type: none">• <code>ip-address</code> of the neighbor in IP address format of the neighbor• <code>peer-group-name</code> of the neighbor peer group |
| restart-time seconds | Enter the keywords <code>restart-time</code> then the maximum number of seconds needed to restart and bring up all peers. The range is from 1 to 3600 seconds. The default is 120 seconds . |
| stale-path-time seconds | Enter the keywords <code>stale-path-time</code> then the maximum number of seconds to wait before restarting a peer's stale paths. The default is 360 seconds . |
| role receiver-only | Enter the keywords <code>role receiver-only</code> to designate the local router to support graceful restart as a receiver only. |

Defaults As above

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

Dell Networking OS

- | | |
|-------------------------|---------------------------------------|
| Version 8.3.19.0 | Introduced on the S4820T. |
| Version 8.4.2.1 | Introduced on the C-Series and S4810. |
| Version 8.2.1.0 | Introduced on the E-Series ExaScale. |
| Version 7.4.1.0 | Introduced on the E-Series TeraScale. |

Usage Information This feature is advertised to BGP neighbors through a capability advertisement. In Receiver Only mode, BGP saves the advertised routes of peers that support this capability when they restart.

bgp log-neighbor-changes

Enable logging of BGP neighbor resets.

Syntax `bgp log-neighbor-changes`
To disable logging, use the `no bgp log-neighbor-changes` command.

Defaults Enabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- | | |
|-------------------------|---------------------------------------|
| Version 8.3.19.0 | Introduced on the S4820T. |
| Version 8.4.2.1 | Introduced on the C-Series and S4810. |

- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The `bgp log-neighbor-changes` command appears in the `show config` command output.

Related Commands [show config](#) – views the current configuration.

bgp non-deterministic-med

Compare MEDs of paths from different autonomous systems (ASs).

- Syntax** `bgp non-deterministic-med`
To return to the default, use the `no bgp non-deterministic-med` command.
- Defaults** Disabled (that is, paths/routes for the same destination but from different ASs does not have their MEDs compared).
- Command Modes** ROUTER BGP
- Command History** This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.
The following is a list of the Dell Networking OS version history for this command.
 - Version 8.3.19.0** Introduced on the S4820T.
 - Version 8.4.2.1** Introduced on the C-Series and S4810.
 - Version 8.2.1.0** Introduced on the E-Series ExaScale.
 - Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information In Non-Deterministic mode, paths are compared in the order in which they arrive. This method can lead to the system choosing different best paths from a set of paths, depending on the order in which they are received from the neighbors because MED may or may not get compared between adjacent paths. In Deterministic mode (`no bgp non-deterministic-med`), the system compares MED between adjacent paths within an AS group because all paths in the AS group are from the same AS.

When you change the path selection from Deterministic to Non-Deterministic mode, the path selection for existing paths remains Deterministic until you enter the `capture bgp-pdu max-buffer-size` command to clear existing paths.

bgp recursive-bgp-next-hop

Enable next-hop resolution through other routes learned by BGP.

- Syntax** `bgp recursive-bgp-next-hop`
To disable next-hop resolution, use the `no bgp recursive-bgp-next-hop` command.
- Defaults** Enabled.
- Command Modes** ROUTER BGP
- Command History** This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.
The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

This command is a knob to disable BGP next-hop resolution using BGP learned routes. During the next-hop resolution, only the first route that the next-hop resolves through is verified for the route's protocol source and is checked if the route is learned from BGP or not.

For this command to take effect and to keep the BGP database consistent, you need the `clear ip bgp` command. Execute the `clear ip bgp` command right after executing this command.

Related Commands

[capture bgp-pdu max-buffer-size](#)

bgp regex-eval-optz-disable

Disables the Regex Performance engine that optimizes complex regular expression with BGP.

Syntax

`bgp regex-eval-optz-disable`

To re-enable optimization engine, use the `no bgp regex-eval-optz-disable` command.

Defaults

Enabled.

Command Modes

ROUTER BGP (conf-router_bgp)

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

BGP uses regular expressions (regex) to filter route information. In particular, the use of regular expressions to filter routes based on AS-PATHs and communities is quite common. In a large scale configuration, filtering millions of routes based on regular expressions can be quite CPU intensive, as a regular expression evaluation involves generation and evaluation of complex finite state machines.

BGP policies, containing regular expressions to match as-path and communities, tend to use a lot of CPU processing time, which in turn affects the BGP routing convergence. Additionally, the `show bgp` commands, which are filtered through regular expressions, use up CPU cycles particularly with large databases. The Regex Engine Performance Enhancement feature optimizes the CPU usage by caching and reusing regular expression evaluation results. This caching and reuse may be at the expensive of RP1 processor memory.

Related Commands

[show ip protocols](#) – views information on all routing protocols enabled and active.

bgp router-id

Assign a user-given ID to a BGP router.

Syntax	<code>bgp router-id ip-address</code> To delete a user-assigned IP address, use the <code>no bgp router-id</code> command.
Parameters	<i>ip-address</i> Enter an IP address in dotted decimal format to reset only that BGP neighbor.
Defaults	The router ID is the highest IP address of the Loopback interface or, if no Loopback interfaces are configured, the highest IP address of a physical interface on the router.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	Peering sessions are reset when you change the router ID of a BGP router.

bgp soft-reconfig-backup

Use this command *only* when route-refresh is *not* negotiated between peers to avoid having a peer re-send BGP updates.

Syntax	<code>bgp soft-reconfig-backup</code> To return to the default setting, use the <code>no bgp soft-reconfig-backup</code> command.
Defaults	Off
Command Modes	ROUTER BGPV6 ADDRESS FAMILY (conf-router_bgpv6_af)
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.1.0 Added support for IPv4 multicast and IPv6 unicast address families. Version 7.8.1.0 Introduced on the S4810. Version 7.7.1.0 Introduced on the C-Series. Version 7.2.1.0 Introduced on the E-Series TeraScale.
Usage Information	When you enable soft-reconfiguration for a neighbor and you execute the <code>clear ip bgp soft in</code> command, the update database stored in the router replays and updates are reevaluated. With this command, the replay and update process is triggered only if route-refresh request is <i>not</i> negotiated with the peer. If the request is negotiated (after execution of <code>clear ip bgp soft in</code>), BGP sends a route-refresh request to the neighbor and receives all of the peer's updates.

Related Commands [clear ip bgp ipv6 unicast soft](#) – activates inbound policies for IPv6 routes without resetting the BGP TCP session.

capture bgp-pdu max-buffer-size

Set the size of the BGP packet capture buffer. This buffer size pertains to both IPv4 and IPv6 addresses.

Syntax `capture bgp-pdu max-buffer-size 100-102400000`

Parameters **100-102400000** Enter a size for the capture buffer.

Defaults **40960000 bytes**

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Related Commands [capture bgp-pdu neighbor \(ipv6\)](#) – enables route reflection between the route reflector and the clients.
[show capture bgp-pdu neighbor](#) – configures a route reflector and clients.

capture bgp-pdu neighbor (ipv6)

Enable capture of an IPv6 BGP neighbor packet.

Syntax `capture bgp-pdu neighbor ipv6-address direction {both | rx | tx}`

To disable capture of the IPv6 BGP neighbor packet, use the `no capture bgp-pdu neighbor ipv6-address` command.

Parameters **ipv6-address** Enter the IPv6 address of the target BGP neighbor.
direction {both | rx | tx} Enter the keyword `direction` and a direction — either `rx` for inbound, `tx` for outbound, or `both`.

Defaults Not configured.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Related Commands

`capture bgp-pdu max-buffer-size` – enables route reflection between the route reflector and the clients.

`show capture bgp-pdu neighbor` – configures a route reflector and clients.

`capture bgp-pdu neighbor` – enables capture of an IPv4 BGP neighbor packet.

clear ip bgp * (asterisk)

Reset all BGP sessions in the specified category. The soft parameter (BGP Soft Reconfiguration) clears the policies without resetting the TCP connection.

Syntax `clear ip bgp * [ipv4 multicast soft [in | out] | ipv6 unicast soft [in | out] | soft [in | out]]`

Parameters	*	Enter an asterisk (*) to reset all BGP sessions.
	ipv4 multicast soft [in out]	(OPTIONAL) Enter the keywords <code>ipv4 multicast soft [in out]</code> to set options within the specified IPv4 address family.
	ipv6 unicast soft [in out]	(OPTIONAL) Enter the keywords <code>ipv6 multicast soft [in out]</code> to set options within the specified IPv6 address family.
	soft	(OPTIONAL) Enter the keyword <code>soft</code> to configure and activate policies without resetting the BGP TCP session, that is, BGP Soft Reconfiguration.  NOTE: If you enter <code>clear ip bgp ip6-address soft</code> , both inbound and outbound policies are reset.
	in	(OPTIONAL) Enter the keyword <code>in</code> to activate only inbound policies.
	out	(OPTIONAL) Enter the keyword <code>out</code> to activate only outbound policies.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

clear ip bgp as-number

Reset BGP sessions. The soft parameter (BGP Soft Reconfiguration) clears the policies without resetting the TCP connection.

Syntax `clear ip bgp as-number [flap-statistics | ipv4 {multicast {flap-statistics | soft {in | out}}} | unicast {flap-statistics | soft {in | out}} | ipv6 unicast {flap-statistics | soft {in | out}} | soft [in | out]`

Parameters	<i>as-number</i>	Enter an autonomous system (AS) number to reset neighbors belonging to that AS. If used without a qualifier, the keyword resets all neighbors belonging to that AS. The range is from 1 to 65535.
	flap-statistics	(OPTIONAL) Enter the keywords <code>flap-statistics</code> to clear all flap statistics belonging to that AS or a specified address family within that AS.
	ipv4	(OPTIONAL) Enter the keyword <code>ipv4</code> to select options for that address family.
	ipv6	(OPTIONAL) Enter the keyword <code>ipv6</code> to select options for that address family.
	unicast	(OPTIONAL) Enter the keyword <code>unicast</code> to select the unicast option within the selected address family.
	multicast	(OPTIONAL) Enter the keyword <code>multicast</code> to select the multicast option within the selected address family. Multicast is supported on IPv4 only.
	soft	(OPTIONAL) Enter the keyword <code>soft</code> to configure and activate policies without resetting the BGP TCP session; that is, BGP Soft Reconfiguration. i NOTE: If you enter <code>clear ip bgp ipv6-address soft</code> , both inbound and outbound policies are reset.
	in	(OPTIONAL) Enter the keyword <code>in</code> to activate only inbound policies.
	out	(OPTIONAL) Enter the keyword <code>out</code> to activate only outbound policies.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

clear ip bgp ipv6-address

Reset BGP sessions specific to an IPv6 address. The `soft` parameter (BGP Soft Reconfiguration) clears the policies without resetting the TCP connection.

Syntax

```
clear ip bgp ipv6-address [flap-statistics | ipv4 {multicast {flap-statistics | soft {in | out}} | unicast {flap-statistics | soft {in | out}} | ipv6 unicast {flap-statistics | soft {in | out}} | soft [in | out]
```

Parameters	<i>ipv6-address</i>	Enter an IPv6 address to reset neighbors belonging to that IP. Used without a qualifier, the keyword <code>ipv6-address</code> resets all neighbors belonging to that IP.
	flap-statistics	(OPTIONAL) Enter the keywords <code>flap-statistics</code> to clear all flap statistics belonging to that AS or a specified address family within that IP.
	ipv4	(OPTIONAL) Enter the keyword <code>ipv4</code> to select options for that address family.
	ipv6	(OPTIONAL) Enter the keyword <code>ipv6</code> to select options for that address family.
	unicast	(OPTIONAL) Enter the keyword <code>unicast</code> to select the unicast option within the selected address family.
	multicast	(OPTIONAL) Enter the keyword <code>multicast</code> to select the multicast option within the selected address family. Multicast is supported on IPv4 only.

soft	(OPTIONAL) Enter the keyword <code>soft</code> to configure and activate policies without resetting the BGP TCP session; that is, BGP Soft Reconfiguration.  NOTE: If you enter <code>clear ip bgp ipv6-address soft</code> , both inbound and outbound policies are reset.
in	(OPTIONAL) Enter the keyword <code>in</code> to activate only inbound policies.
out	(OPTIONAL) Enter the keyword <code>out</code> to activate only outbound policies.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

clear ip bgp peer-group

Reset a peer-group's BGP sessions.

Syntax `clear ip bgp peer-group peer-group-name`

Parameters **peer-group-name** Enter the peer group name to reset the BGP sessions within that peer group.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

clear ip bgp ipv6 dampening

Clear information on route dampening and return suppressed route to active state.

Syntax `clear ip bgp ipv6 unicast dampening [ipv6-address]`

Parameters **ipv6-address** Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information After you enter this command, the software deletes the history routes and returns the suppressed routes to the active state.

clear ip bgp ipv6 flap-statistics

Clear BGP flap statistics, which includes number of flaps and the time of the last flap.

Syntax `clear ip bgp ipv6 unicast flap-statistics [ipv6-address | filter-list as-path-name | regexp regular-expression]`

Parameters **ipv6-address** (OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

filter-list as-path-name (OPTIONAL) Enter the keywords `filter-list` then the name of a configured AS-PATH list.

regexp regular-expression (OPTIONAL) Enter the keyword `regexp` then the regular expressions. Use one or a combination of the following:

- . (period) matches on any single character, including white space
- * (asterisk) matches on sequences in a pattern (zero or more sequences)
- + (plus sign) matches on sequences in a pattern (one or more sequences)
- ? (question mark) matches sequences in a pattern (0 or 1 sequences)
- [] (brackets) matches a range of single-character patterns.
- ^ (caret) matches the beginning of the input string. (If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.)
- \$ (dollar sign) matches the end of the output string.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information If you enter the `clear ip bgp ipv6 flap-statistics` command without parameters, all the statistics clear.

Related Commands [show ip bgp ipv6 unicast flap-statistics](#) – views BGP flap statistics.

clear ip bgp ipv6 unicast soft

Clear and reapply policies for IPv6 unicast routes without resetting the TCP connection; that is, perform BGP soft reconfiguration.

Syntax	<code>clear ip bgp { * as-number ipv4-neighbor-addr ipv6-neighbor-addr peer-group name } ipv6 unicast soft [in out]</code>
Parameters	
*	Clear and reapply policies for all BGP sessions.
as-number	Clear and reapply policies for all neighbors belonging to the AS. The range is from 0 to 65535 (2 Byte), from 1 to 4294967295 (4 Byte), or from 0.1 to 0.65535.65535 (Dotted format).
ipv4-neighbor-addr ipv6-neighbor-addr	Clear and reapply policies for a neighbor.
peer-group name	Clear and reapply policies for all BGP routers in the specified peer group.
ipv6 unicast	Clear and reapply policies for all IPv6 unicast routes.
in	Reapply only inbound policies.  NOTE: If you enter <code>soft</code> , without an <code>in</code> or <code>out</code> option, both inbound and outbound policies are reset.
out	Reapply only outbound policies.  NOTE: If you enter <code>soft</code> , without an <code>in</code> or <code>out</code> option, both inbound and outbound policies are reset.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.4.1.0	Added support for IPv4 multicast and IPv6 unicast routes.
7.8.1.0	Introduced on the S4810.
7.7.1.0	Introduced on the C-Series.
7.2.1.0	Introduced on the E-Series.

debug ip bgp

Allows you to view all information on BGP, including BGP events, keepalives, notifications, and updates.

Syntax `debug ip bgp [ipv6-address | peer-group peer-group-name] [in | out]`
To disable all BGP debugging, use the `no debug ip bgp` command.

Parameters **ipv6-address** (OPTIONAL) Enter the IPv6 address in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group *peer-group-name* Enter the keywords `peer-group` then the name of the peer group.

in (OPTIONAL) Enter the keyword `in` to view only information on inbound BGP routes.

out (OPTIONAL) Enter the keyword `out` to view only information on outbound BGP routes.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

To view information on both incoming and outgoing routes, do not include the `in` and `out` parameters in the `debugging` command. The `in` and `out` parameters cancel each other; for example, if you enter `debug ip bgp in` and then enter `debug ip bgp out`, you do not see information on the incoming routes.

Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

Related Commands

[debug ip bgp events](#) – views information about BGP events.

[debug ip bgp keepalives](#) – views information about BGP keepalives.

[debug ip bgp notifications](#) – views information about BGP notifications.

[debug ip bgp updates](#) – views information about BGP updates.

debug ip bgp events

Allows you to view information on local BGP state changes and other BGP events.

Syntax `debug ip bgp [ipv6-address | peer-group peer-group-name] events [in | out]`

To disable debugging, use the `no debug ip bgp ipv6-address | peer-group peer-group-name] events` command.

Parameters ***ipv6-address*** (OPTIONAL) Enter the IPv6 address in the `x:x:x:x` format then the prefix length in the `/x` format. The range is from `/0` to `/128`.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group *peer-group-name* Enter the keywords `peer-group` then the name of the peer group.

in (OPTIONAL) Enter the keyword `in` to view only information on inbound BGP routes.

out (OPTIONAL) Enter the keyword `out` to view only information on outbound BGP routes.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

debug ip bgp ipv6 dampening

View information on dampened (non-active) IPv6 routes.

Syntax `debug ip bgp ipv6 unicast dampening [in | out]`
To disable debugging, use the `no debug ip bgp ipv6 unicast dampening` command.

Parameters

- in** (OPTIONAL) Enter the keyword `in` to view only inbound dampened routes.
- out** (OPTIONAL) Enter the keyword `out` to view only outbound dampened routes.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

Related Commands [show ip bgp ipv6 unicast dampened-paths](#) – views BGP dampened routes.

debug ip bgp ipv6 unicast soft-reconfiguration

Enable soft-reconfiguration debugging for IPv6 unicast routes.

Syntax `debug ip bgp [ipv4-address | ipv6-address | peer-group-name] ipv6 unicast soft-reconfiguration`

To disable debugging, use the `no debug ip bgp [ipv4-address | ipv6-address | peer-group-name] ipv6 unicast soft-reconfiguration` command.

Parameters

- ipv4-address | ipv6-address** Enter the IP address of the neighbor on which you want to enable soft-reconfiguration debugging.

peer-group-name Enter the name of the peer group on which you want to enable soft-reconfiguration debugging.

ipv6 unicast Debug soft reconfiguration for IPv6 unicast routes.

Defaults Disabled.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.4.1.0	Added support for IPv4 multicast and IPv6 unicast routes.
7.8.1.0	Introduced on the S4810.
7.7.1.0	Introduced on the C-Series.
7.2.1.0	Introduced on the E-Series.

Usage Information This command turns on BGP soft-reconfiguration inbound debugging for IPv6 unicast routes. If no neighbor is specified, debug is turned on for all neighbors.

ipv6 prefix-list

Configure an IPv6 prefix list.

Syntax `ipv6 prefix-list prefix-list name`

Parameters **prefix-list name** Enter the name of the prefix list.
 **NOTE:** There is a 140-character limit for prefix list names.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

neighbor soft-reconfiguration inbound

Enable a BGP soft-reconfiguration and start storing updates for inbound IPv6 unicast routes.

Syntax	<code>neighbor {<i>ipv4-address</i> <i>ipv6-address</i> <i>peer-group-name</i>} soft-reconfiguration inbound</code>
Parameters	<p><i>ipv4-address</i> <i>ipv6-address</i> Enter the IP address of the neighbor for which you want to start storing inbound routing updates.</p> <p><i>peer-group-name</i> Enter the name of the peer group for which you want to start storing inbound routing updates.</p>
Defaults	Disabled.
Command Modes	ROUTER BGPv6 ADDRESS FAMILY (conf-router_bgpv6_af)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.4.1.0	Added support for IPv4 multicast and IPv4 unicast address families.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Introduced on the S4810.
7.7.1.0	Introduced on the C-Series.
7.4.1.0	Introduced

Usage Information	<p>This command enables soft-reconfiguration for the specified BGP neighbor. BGP stores all updates for inbound IPv6 unicast routes the neighbor receives but does not reset the peer-session.</p> <p> CAUTION: Inbound update storage is a memory-intensive operation. The entire BGP update database from the neighbor is stored in memory regardless of the inbound policy results applied on the neighbor.</p>
--------------------------	--

debug ip bgp keepalives

Allows you to view information about BGP keepalive messages.

Syntax	<code>debug ip bgp [<i>ipv6-address</i> peer-group <i>peer-group-name</i>] keepalives [in out]</code> <p>To disable debugging, use the <code>no debug ip bgp [<i>ip-address</i> peer-group <i>peer-group-name</i>] keepalives [in out]</code> command.</p>
Parameters	<p><i>ipv6-address</i> (OPTIONAL) Enter the IPv6 address in the x:x:x:x format followed by the prefix length in the /x format. The range is /0 to /128.</p> <p> NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p><i>peer-group peer-group-name</i> (OPTIONAL) Enter the keywords <code>peer-group</code> followed by the name of the peer group.</p> <p><i>in</i> (OPTIONAL) Enter the keyword <code>in</code> to view only inbound keepalive messages.</p>

out (OPTIONAL) Enter the keyword `out` to view only outbound keepalive messages.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

debug ip bgp notifications

Allows you to view information about BGP notifications received from neighbors.

Syntax `debug ip bgp [ipv6-address | peer-group peer-group-name] notifications [in | out]`

To disable debugging, use the `no debug ip bgp [ip-address | peer-group peer-group-name] notifications [in | out]` command.

- Parameters**
- ipv6-address** (OPTIONAL) Enter the IPv6 address in the `x:x:x:x` format then the prefix length in the `/x` format. The range is from `/0` to `/128`.
 **NOTE:** The `::` notation specifies successive hexadecimal fields of zeros.
 - peer-group peer-group-name** (OPTIONAL) Enter the keywords `peer-group` then the name of the peer group.
 - in** (OPTIONAL) Enter the keyword `in` to view BGP notifications received from neighbors.
 - out** (OPTIONAL) Enter the keyword `out` to view BGP notifications sent to neighbors.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information Entering a `no debug ip bgp` command removes all configured debug commands for BGP.

debug ip bgp updates

Allows you to view information about BGP updates.

Syntax	<code>debug ip bgp [ipv6-address peer-group peer-group-name ipv6 unicast [ipv6-address]] updates [in out prefix-list prefix-list-name]</code> To disable debugging, use the <code>no debug ip bgp [ip-address peer-group peer-group-name ipv6 unicast [ipv6-address]] updates [in out]</code> command.
Parameters	<p>ipv6-address (OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group peer-group-name (OPTIONAL) Enter the keywords <code>peer-group</code> then the name of the peer group.</p> <p>ipv6 unicast [ipv6-address] (OPTIONAL) Enter the keywords <code>ipv6 unicast</code>, and, optionally, an ipv6 address.</p> <p>in (OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors.</p> <p>out (OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.</p>
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	Entering a <code>no debug ip bgp</code> command removes all configured debug commands for BGP.

default-metric

Allows you to change the metrics of redistributed routes to locally originated routes. Use this command with the `redistribute` command.

Syntax	<code>default-metric number</code> To return to the default setting, use the <code>no default-metric</code> command.
Parameters	number Enter a number as the metric to be assigned to routes from other protocols. The range is from 1 to 4294967295.
Defaults	0
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

The `default-metric` command in BGP sets the value of the BGP MULTI_EXIT_DISC (MED) attribute for redistributed routes only.

Related Commands

- [bgp always-compare-med](#) – enables comparison of all BGP MED attributes.
- [redistribute](#) – redistributes routes from other routing protocols into BGP.

description

Enter a description of the BGP routing protocol.

Syntax

`description {description}`

To remove the description, use the `no description {description}` command.

Parameters

description Enter a description to identify the BGP protocol (80 characters maximum).

Defaults

none

Command Modes

ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Related Commands

- [router bgp](#) – enters ROUTER mode on the switch.

distance bgp

Configure three administrative distances for routes.

Syntax

`distance bgp external-distance internal-distance local-distance`

To return to default values, use the `no distance bgp` command.

Parameters

- external-distance** Enter a number to assign to routes learned from a neighbor external to the AS. The range is from 1 to 255. The default is **20**.
- internal-distance** Enter a number to assign to routes learned from a router within the AS. The range is from 1 to 255. The default is **200**.
- local-distance** Enter a number to assign to routes learned from networks listed in the network command. The range is from 1 to 255. The default is **200**.

Defaults	<ul style="list-style-type: none"> external-distance = 20 internal-distance = 200 local-distance = 200
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	<p> CAUTION: Dell Force10 recommends that you do not change the administrative distance of internal routes. Changing the administrative distances may cause routing table inconsistencies.</p> <p>The higher the administrative distance assigned to a route means that your confidence in that route is low. Routes assigned an administrative distance of 255 are not installed in the routing table.</p> <p>Routes from confederations are treated as internal BGP routes.</p>

maximum-paths

Configure the maximum number of parallel routes (multipath support) BGP supports.

Syntax	<pre>maximum-paths {ebgp ibgp} number</pre> <p>To return to the default values, use the <code>no maximum-paths</code> command.</p>
Parameters	<p>ebgp Enter the keyword <code>ebgp</code> to enable multipath support for External BGP routes.</p> <p>ibgp Enter the keyword <code>ibgp</code> to enable multipath support for Internal BGP routes.</p> <p>number Enter a number as the maximum number of parallel paths. The range is from 1 to 16. The default is 1.</p>
Defaults	1
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	If you enable this command, use the <code>capture bgp-pdu max-buffer-size</code> command to recompute the best path.

neighbor activate

This command allows the specified neighbor/peer group to be enabled for the current AFI/SAFI.

Syntax	<code>neighbor {ipv6-address peer-group-name} activate</code> To disable, use the <code>no neighbor {ipv6-address peer-group-name} activate</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x:x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Identify a peer group by name.</p> <p>activate Enter the keyword <code>activate</code> to enable the identified neighbor or peer group in the new AFI/SAFI.</p>
Defaults	Disabled.
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	By default, when you create a neighbor/peer group configuration in the Router BGP context, it is enabled for the IPv6/Unicast AFI/SAFI. By using <code>activate</code> in the new context, the neighbor/peer group is enabled for AFI/SAFI.

neighbor advertisement-interval

Set the advertisement interval between BGP neighbors or within a BGP peer group.

Syntax	<code>neighbor {ipv6-address peer-group-name} advertisement-interval seconds</code> To return to the default value, use the <code>no neighbor {ipv6-address peer-group-name} advertisement-interval</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x:x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to set the advertisement interval for all routers in the peer group.</p> <p>seconds Enter a number as the time interval, in seconds, between BGP advertisements. The range is from 0 to 600 seconds. The default is 5 seconds for internal BGP peers and 30 seconds for external BGP peers.</p>
Defaults	<ul style="list-style-type: none">seconds = 5 seconds (internal peers)seconds = 30 seconds (external peers)
Command Modes	ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

neighbor allowas-in

Set the number of times an AS number can occur in the AS path.

Syntax

```
neighbor {ip-address | peer-group-name} allowas-in number
```

To return to the default value, use the `no neighbor {ip-address | peer-group-name} allowas-in` command.

Parameters

- ip-address** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name** Enter the name of the peer group to set the advertisement interval for all routers in the peer group.
- number** Enter a number of times to allow this neighbor ID to use the AS path. The range is from 1 to 10.

Defaults

Not configured.

Command Modes ROUTER BGP

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Related Commands

[bgp four-octet-as-support](#) – enables 4-Byte support for the BGP process.

neighbor default-originate

Inject the default route to a BGP peer or neighbor.

Syntax

```
neighbor {ipv6-address | peer-group-name} default-originate [route-map map-name]
```

To remove a default route, use the `no neighbor {ipv6-address | peer-group-name} default-originate [route-map map-name]` command.

Parameters	<p><i>ipv6-address</i> Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p><i>peer-group-name</i> Enter the name of the peer group to set the default route of all routers in that peer group.</p> <p><i>route-map map-name</i> (OPTIONAL) Enter the keywords <code>route-map</code> then the name of a configured route map.</p>
Defaults	Not configured.
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	If you apply a route map to a BGP peer or neighbor with the <code>neighbor default-originate</code> command configured, the software does not apply the set filters in the route map to that BGP peer or neighbor.

neighbor description

Assign a character string describing the neighbor or group of neighbors (peer group).

Syntax	<pre>neighbor {<i>ipv6-address</i> <i>peer-group-name</i>} description <i>text</i></pre> <p>To delete a description, use the <code>no neighbor {<i>ipv6-address</i> <i>peer-group-name</i>} description <i>text</i></code> command.</p>
Parameters	<p><i>ipv6-address</i> Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p><i>peer-group-name</i> Enter the name of the peer group.</p> <p><i>text</i> Enter a continuous text string up to 80 characters.</p>
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>

neighbor distribute-list

Distribute BGP information using an established prefix list.

Syntax `neighbor {ipv6-address | peer-group-name} distribute-list prefix-list-name {in | out}`

To delete a neighbor distribution list, use the `no neighbor {ipv6-address | peer-group-name} distribute-list prefix-list-name {in | out}` command.

- Parameters**
- ipv6-address*** Enter the IPv6 address in the x:x:x::x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
 - peer-group-name*** Enter the name of the peer group.
 - prefix-list-name*** Enter the name of an established prefix list. If the prefix list is not configured, the default is **permit** (to allow all routes).
 - in** Enter the keyword in to distribute only inbound traffic.
 - out** Enter the keyword out to distribute only outbound traffic.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Related Commands [neighbor filter-list](#) – assigns a AS-PATH list to a neighbor or peer group.
[neighbor route-map](#) – assigns a route map to a neighbor or peer group.

neighbor ebgp-multihop

Attempt and accept BGP connections to external peers on networks that are not directly connected.

Syntax `neighbor {ipv6-address | peer-group-name} ebgp-multihop [ttl]`

To disallow and disconnect connections, use the `no neighbor {ipv6-address | peer-group-name} ebgp-multihop [ttl]` command.

- Parameters**
- ipv6-address*** Enter the IPv6 address in the x:x:x::x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
 - peer-group-name*** Enter the name of the peer group.
 - ttl*** (OPTIONAL) Enter the number of hops as the time to live (ttl) value. The range is from 1 to 255. The default is **255**.

Defaults Disabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information To prevent loops, the `neighbor ebgp-multihop` command does not install default routes of the multihop peer. Networks not directly connected are not considered valid for best path selection.

neighbor fall-over

Enable or disable fast fall-over for BGP neighbors.

Syntax `neighbor {ipv6-address | peer-group-name} fall-over`
To disable, use the `no neighbor {ipv6-address | peer-group-name} fall-over` command.

Parameters

- ipv6-address*** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name*** Enter the name of the peer group.

Defaults Disabled.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information When you enable fall-over, BGP keeps track of IP or IPv6 reachability to the peer remote address and the peer local address. Whenever either address becomes unreachable (for example, no active route exists in the routing table for peer IP or IPv6 destination/local address), BGP brings down the session with the peer.

Related Commands [show ip bgp ipv6 unicast neighbors](#) – displays IPv6 routing information exchanged by BGP neighbors.

neighbor filter-list

Configure a BGP filter based on the AS-PATH attribute.

Syntax	<code>neighbor {ipv6-address peer-group-name} filter-list as-path-name {in out}</code> To delete a BGP filter, use the <code>no neighbor {ipv6-address peer-group-name} filter-list as-path-name {in out}</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to apply the filter to all routers in the peer group.</p> <p>in Enter the keyword <code>in</code> to filter inbound BGP routes.</p> <p>out Enter the keyword <code>out</code> to filter outbound BGP routes.</p>
Defaults	Not configured.
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command.
	Version 8.3.19.0 Introduced on the S4820T.
	Version 8.4.2.1 Introduced on the C-Series and S4810.
	Version 8.2.1.0 Introduced on the E-Series ExaScale.
	Version 7.4.1.0 Introduced on the E-Series TeraScale.

neighbor maximum-prefix

Control the number of network prefixes received.

Syntax	<code>neighbor {ipv6-address peer-group-name} maximum-prefix maximum [threshold] [warning-only]</code> To return to the default values, use the <code>no neighbor {ipv6-address peer-group-name} maximum-prefix maximum [threshold] [warning-only]</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group.</p> <p>maximum Enter a number as the maximum number of prefixes allowed for this BGP router. The range is from 1 to 4294967295.</p> <p>threshold (OPTIONAL) Enter a number to be used as a percentage of the maximum value. When the number of prefixes reaches this percentage of the maximum value, the software sends a message. The range is from 1 to 100 percent. The default is 75.</p>

warning-only (OPTIONAL) Enter the keyword `warning-only` to set the router to send a log message when the maximum value is reached. If this parameter is not set, the router stops peering when the maximum number of prefixes is reached.

Defaults threshold = 75

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

If you configure the `neighbor maximum-prefix` command and the neighbor receives more prefixes than allowed by the `neighbor maximum-prefix` command configuration, the neighbor goes down and the `show ip bgp ipv6 unicast summary` command displays (prfxd) in the State/PfxRcd column for that neighbor. The neighbor remains down until you enter the `capture bgp-pdu max-buffer-size` command for the neighbor or the peer group to which the neighbor belongs or you enter `neighbor shutdown` and `neighbor no shutdown` commands.

Related Commands

[show ip bgp ipv6 unicast summary](#) – displays the current BGP configuration.

neighbor next-hop-self

Allows you to configure the router as the next hop for a BGP neighbor. (This command is used for IBGP).

Syntax

```
neighbor {ipv6-address | peer-group-name} next-hop-self
```

To return to the default setting, use the `no neighbor {ipv6-address | peer-group-name} next-hop-self` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x::x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name (OPTIONAL) Enter the name of the peer group.

Defaults Disabled.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

If you configure the `set ipv6 next-hop` command in ROUTE-MAP mode, its configuration takes precedence over the `neighbor next-hop-self` command.

neighbor peer-group (assigning peers)

Allows you to assign one peer to a existing peer group.

Syntax	<code>neighbor ipv6-address peer-group peer-group-name</code> To delete a peer from a peer group, use the <code>no neighbor ipv6-address peer-group peer-group-name</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group peer-group-name Enter the keywords <code>peer-group</code> followed by the name of a configured peer group (maximum 16 characters).</p>
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	<p>You can assign up to 64 peers to one peer group.</p> <p>When you add a peer to a peer group, it inherits all the peer group's configured parameters. A peer cannot become part of a peer group if any of the following commands are configured on the peer:</p> <ul style="list-style-type: none">• neighbor advertisement-interval• neighbor distribute-list• neighbor filter-list• neighbor next-hop-self• neighbor route-map• neighbor route-reflector-client• neighbor send-community <p>A neighbor may keep its configuration after it was added to a peer group if the neighbor's configuration is more specific than the peer group's and the neighbor's configuration does not affect outgoing updates.</p> <p>A peer group must exist before you add a peer to it. If the peer group is disabled (<code>shutdown</code>) the peers within the group are also disabled (<code>shutdown</code>).</p>
Related Commands	<p>capture bgp-pdu max-buffer-size – resets BGP sessions.</p> <p>neighbor peer-group (creating group) – creates a peer group.</p> <p>show ip bgp ipv6 unicast peer-group – views BGP peers.</p> <p>show ip bgp ipv6 unicast neighbors – views BGP neighbors configurations.</p>

neighbor peer-group (creating group)

Allows you to create a peer group and assign it a name.

Syntax	<code>neighbor peer-group-name peer-group</code> To delete a peer group, use the <code>no neighbor peer-group-name peer-group</code> command.
Parameters	peer-group-name Enter a text string up to 16 characters long as the name of the peer group.
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell FTOS Command Line Reference Guide</i> . The following is a list of the FTOS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	When a peer group is created, it is disabled (<code>shut mode</code>).
Related Commands	neighbor peer-group (assigning peers) – assigns routers to a peer group. neighbor remote-as – assigns a indirectly connected AS to a neighbor or peer group. neighbor shutdown – disables a peer or peer group.

neighbor peer-group passive

Enable passive peering on a BGP peer group; that is, the peer group does not send an OPEN message, but does respond to one.

Syntax	<code>neighbor peer-group-name peer-group passive</code> To delete a passive peer-group, use the <code>no neighbor peer-group-name peer-group passive</code> command.
Parameters	peer-group-name Enter a text string up to 16 characters long as the name of the peer group.
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information	After you configure a peer group as passive, you must assign it a subnet using the <code>neighbor subnet</code> command.
Related Commands	neighbor subnet – assigns a subnet to a dynamically configured BGP neighbor.

neighbor remote-as

Create and specify the remote peer to the BGP neighbor.

Syntax	<code>neighbor {ipv6-address peer-group-name} remote-as number</code> To delete a remote AS entry, use the <code>no neighbor {ipv6-address peer-group-name} remote-as number</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x:x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter a text string up to 16 characters long as the name of the peer group.</p> <p>number Enter a number of the AS. The range is from 1 to 65535.</p>
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 8.2.1.0 Introduced on the E-Series ExaScale.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Usage Information	<p>If the <code>number</code> parameter is the same as the AS number used in the <code>router bgp</code> command, the remote AS entry in the <code>neighbor</code> is considered an internal BGP peer entry.</p> <p>This command creates a peer and the newly created peer is disabled (<code>shutdown</code>).</p>
Related Commands	router bgp – enters the ROUTER BGP mode and configure routes in an AS.

neighbor remove-private-as

Remove private AS numbers from the AS-PATH of outgoing updates.

Syntax	<code>neighbor {ipv6-address peer-group-name} remove-private-as</code> To return to the default, use the <code>no neighbor {ipv6-address peer-group-name} remove-private-as</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x:x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p>

peer-group-name Enter the name of the peer group to remove the private AS numbers.

Defaults Disabled (that is, the private AS number are not removed).

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information Applies to external border gateway protocol (EBGP) neighbors only.

If the AS-PATH contains both public and private AS number or contains AS numbers of an EBGP neighbor, the private AS numbers are not removed.

If a confederation contains private AS numbers in its AS-PATH, the software removes the private AS numbers only if they follow the confederation numbers in the AS path.

Private AS numbers are from 64512 to 65535.

neighbor route-map

Apply an established route map to either incoming or outbound routes of a BGP neighbor or peer group.

Syntax `neighbor {ipv6-address | peer-group-name} route-map map-name {in | out}`

To remove the route map, use the `no neighbor {ipv6-address | peer-group-name} route-map map-name {in | out}` command.

Parameters **ipv6-address** Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Enter the name of the peer group.

map-name Enter the name of an established route map. If the Route map is not configured, the default is **deny** (to drop all routes).

in Enter the keyword `in` to filter inbound routes.

out Enter the keyword `out` to filter outbound routes.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell FTOS Command Line Reference Guide*.

The following is a list of the FTOS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

When you apply a route map to outbound routes, only routes that match at least one section of the route map are permitted.

If you identify a peer group by name, the peers in that peer group inherit the characteristics in the Route map used in this command. If you identify a peer by IP address, the Route map overwrites either the inbound or outbound policies on that peer.

neighbor route-reflector-client

Configure a neighbor as a member of a route reflector cluster.

Syntax

```
neighbor {ipv6-address | peer-group-name} route-reflector-client
```

To indicate that the neighbor is not a route reflector client or to delete a route reflector configuration, use the `no neighbor {ipv6-address | peer-group-name} route-reflector-client` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Enter the name of the peer group. All routers in the peer group receive routes from a route reflector.

Defaults

Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

The first time you enter this command it configures the neighbor as a route reflector and members of the route-reflector cluster. Internal BGP (IBGP) speakers do not need to be fully meshed if you configure a route reflector.

When all clients of a route reflector are disabled, the neighbor is no longer a route reflector.

neighbor send-community

Send a COMMUNITY attribute to a BGP neighbor or peer group. A COMMUNITY attribute indicates that all routes with that attribute belong to the same community grouping.

Syntax

```
neighbor {ipv6-address | peer-group-name} send-community
```

To disable sending a COMMUNITY attribute, use the `no neighbor {ipv6-address | peer-group-name} send-community` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Enter the name of the peer group. All routers in the peer group receive routes from a route reflector.

Defaults Not configured and COMMUNITY attributes are not sent to neighbors.

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

neighbor shutdown

Disable a BGP neighbor or peer group.

Syntax `neighbor {ipv6-address | peer-group-name} shutdown`

To enable a disabled neighbor or peer group, use the `no neighbor {ipv6-address | peer-group-name} shutdown` command.

Parameters **ipv6-address** Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Enter the name of the peer group to disable or enable all routers within the peer group.

Defaults Enabled (that is, BGP neighbors and peer groups are disabled.)

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information Peers that are enabled within a peer group are disabled when their peer group is disabled.

The `neighbor shutdown` command terminates all BGP sessions on the BGP neighbor or BGP peer group. Use this command with caution as it terminates the specified BGP sessions. When a neighbor or peer group is shutdown, use the `show ip bgp ipv6 unicast summary` command to confirm its status.

Related Commands [show ip bgp ipv6 unicast summary](#) – displays the current BGP configuration.

[show ip bgp ipv6 unicast neighbors](#) – displays IPv6 routing information exchanged by BGP neighbors.

neighbor soft-reconfiguration inbound

Enable a BGP soft-reconfiguration and start storing updates for inbound IPv6 unicast routes.

Syntax	<code>neighbor {<i>ipv4-address</i> <i>ipv6-address</i> <i>peer-group-name</i>} soft-reconfiguration inbound</code>
Parameters	<p><i>ipv4-address</i> <i>ipv6-address</i> Enter the IP address of the neighbor for which you want to start storing inbound routing updates.</p> <p><i>peer-group-name</i> Enter the name of the peer group for which you want to start storing inbound routing updates.</p>
Defaults	Disabled.
Command Modes	ROUTER BGPv6 ADDRESS FAMILY (conf-router_bgpv6_af)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.4.1.0	Added support for IPv4 multicast and IPv4 unicast address families.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Introduced on the S4810.
7.7.1.0	Introduced on the C-Series.
7.4.1.0	Introduced

Usage Information	<p>This command enables soft-reconfiguration for the specified BGP neighbor. BGP stores all updates for inbound IPv6 unicast routes the neighbor receives but does not reset the peer-session.</p> <p> CAUTION: Inbound update storage is a memory-intensive operation. The entire BGP update database from the neighbor is stored in memory regardless of the inbound policy results applied on the neighbor.</p>
--------------------------	--

neighbor subnet

Enable passive peering so that the members of the peer group are dynamic.

Syntax	<code>neighbor <i>peer-group-name</i> subnet <i>subnet-number</i> <i>mask</i></code> <p>To remove passive peering, use the <code>no neighbor <i>peer-group-name</i> subnet <i>subnet-number</i> <i>mask</i></code> command.</p>
Parameters	<p><i>subnet-number</i> Enter a subnet number in dotted decimal format (A.B.C.D.) as the allowable range of addresses included in the Peer group. To allow all addresses, enter <code>0 : : 0 / 0</code>.</p> <p><i>mask</i> Enter a prefix mask in / prefix-length format (/x).</p>
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

neighbor timers

Set keepalive and hold time timers for a BGP neighbor or a peer group.

Syntax	<code>neighbor {ipv6-address peer-group-name} timers keepalive holdtime</code> To return to the default values, use the <code>no neighbor {ipv6-address peer-group-name} timers</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x:x:x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to set the timers for all routers within the peer group.</p> <p>keepalive Enter a number for the time interval, in seconds, between keepalive messages sent to the neighbor routers. the range is from 1 to 65535. the default is 60 seconds.</p> <p>holdtime Enter a number for the time interval, in seconds, between the last keepalive message and declaring the router dead. The range is from 3 to 65535. The default is 180 seconds.</p>
Defaults	<ul style="list-style-type: none">• keepalive = 60 seconds• holdtime = 180 seconds
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. <ul style="list-style-type: none">Version 8.3.19.0 Introduced on the S4820T.Version 8.4.2.1 Introduced on the C-Series and S4810.Version 8.2.1.0 Introduced on the E-Series ExaScale.Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	Timer values configured with the <code>neighbor timers</code> command override the timer values configured with the <code>timers bgp</code> command. When two neighbors, configured with different keepalive and holdtime values, negotiate for new values, the resulting values are as follows: <ul style="list-style-type: none">• the lower of the holdtime values is the new holdtime value• whichever is the lower value; one-third of the new holdtime value, or the configured keepalive value is the new keepalive value

neighbor update-source

Enable the software to use Loopback interfaces for TCP connections for BGP sessions.

Syntax	<code>neighbor {ipv6-address peer-group-name} update-source loopback interface</code> To use the closest interface, use the <code>no neighbor {ipv6-address peer-group-name} update-source loopback interface</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to set the timers for all routers within the peer group.</p> <p>loopback interface Enter the keyword <code>loopback</code> then a number of the loopback interface. The range is from 0 to 16383.</p>
Defaults	Not configured.
Command Modes	ROUTER BGP
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 8.2.1.0 Introduced on the E-Series ExaScale. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	Loopback interfaces are up constantly and the BGP session may need one interface constantly up to stabilize the session. The <code>neighbor update-source</code> command is not necessary for directly connected internal BGP sessions.

neighbor weight

Assign a weight to the neighbor connection, which is used to determine the best path.

Syntax	<code>neighbor {ipv6-address peer-group-name} weight weight</code> To remove a weight value, use the <code>no neighbor {ipv6-address peer-group-name} weight weight</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to set the timers for all routers within the peer group.</p> <p>weight Enter a number as the weight. The range is from 0 to 65535. The default is 0.</p>
Defaults	0
Command Modes	ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information In the system best path selection process, the path with the highest weight value is preferred.
 **NOTE:** To apply the weight to the connection and recompute the best path, reset the neighbor connection (the `capture bgp-pdu max-buffer-size * command`).

neighbor X:X:X::X password

Enable TCP MD5 Authentication for an IPv6 BGP peer session.

Syntax `neighbor x:x:x::x password {7 <encrypt-pass> | <clear-pass>}`
To return to the default setting, use the `no neighbor x:x:x::x password` command.

Parameters

- encrypt-pass*** Enter the encrypted password.
- clear-pass*** Enter the clear text password.

Defaults Disabled.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The TCP session is authentication and prevents the data from being compromised.

network

Specify the networks for the BGP process and enter them in the BGP routing table.

Syntax `network ipv6-address prefix-length [route-map map-name]`
To remove a network, use the `no network ip-address mask [route-map map-name]` command.

Parameters

- ipv6-address*** Enter the IPv6 address in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

mask Enter the mask of the IP address in the slash prefix length format (for example, /24). The mask appears in command outputs in dotted decimal format (A.B.C.D).

route-map map-name (OPTIONAL) Enter the keywords `route-map` followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ipv6 address](#)
- [match ipv6 next-hop](#)
- [match ipv6 route-source](#)
- [set ipv6 next-hop](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information The software resolves the network address configured by the `network` command with the routes in the main routing table to ensure that the networks are reachable using non-BGP routes and non-default routes.

Related Commands [redistribute](#) – redistributes routes into BGP.

network backdoor

Specify this IGP route as the preferred route.

Syntax `network ipv6-address prefix-length backdoor`

To remove a network, use the `no network ipv6-address prefix-length backdoor` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128.

prefix-length

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

Though the system does not generate a route due to backdoor config, there is an option for injecting/sourcing a local route in presence of network backdoor config on a learned route.

redistribute

Redistribute routes into BGP.

Syntax

```
redistribute {connected | static} [route-map map-name]
```

To disable redistribution, use the `no redistribution {connected | static}` command.

Parameters

connected Enter the keyword `connected` to redistribute routes from physically connected interfaces.

static Enter the keyword `static` to redistribute manually configured routes. These routes are treated as incomplete routes.

route-map map-name (OPTIONAL) Enter the keywords `route-map` followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ipv6 address](#)
- [match ipv6 next-hop](#)
- [match ipv6 route-source](#)
- [set ipv6 next-hop](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults

Not configured.

Command Modes

ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

If you do not configure the `default-metric` command, in addition to the `redistribute` command, or there is no route map to set the metric, the metric for redistributed static and connected is "0".

To redistribute the default route (0::0/0), configure the `neighbor default-originate` command.

Related Commands

[neighbor default-originate](#) – injects the default route.

redistribute isis

Redistribute IS-IS routes into BGP.

Syntax `redistribute isis [level-1 | level-1-2 | level-2] [metric metric-value | metric-type {external | internal}] [route-map map-name]`
To stop redistribution of IS-IS routes, use the `no redistribute isis` command.

Parameters

- level-1 | level-1-2 | level-2** (OPTIONAL) Enter the type (level) of routes to redistribute.
- metric** (OPTIONAL) Assign metric to an interface for use with IPv6 information.
- metric-type** (OPTIONAL) The external link type associated with the default route advertised into a routing domain. You must specify one of the following:
 - external
 - internal** (default)
- route-map *map-name*** (OPTIONAL) Enter the keywords `route-map` then the name of an established route map. Only the following ROUTE-MAP mode commands are supported:
 - [match ipv6 address](#)
 - [match ipv6 next-hop](#)
 - [match ipv6 route-source](#)
 - [set ipv6 next-hop](#)If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

redistribute ospf

Redistribute OSPFv3 routes into BGP.

Syntax `redistribute ospf process-id [[match external {1 | 2}] [match internal]] [route-map map-name]`
To stop redistribution of OSPF routes, use the `no redistribute ospf process-id` command.

Parameters

- process-id*** Enter the number of the OSPFv3 process. The range is from 1 to 65535.
- match external {1 | 2}** (OPTIONAL) Enter the keywords `match external` to redistribute OSPF external routes. You can specify 1 or 2 to redistribute those routes only.
- match internal** (OPTIONAL) Enter the keywords `match internal` to redistribute OSPFv3 internal routes only.

route-map *map-name* (OPTIONAL) Enter the keywords `route-map` followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ipv6 address](#)
- [match ipv6 next-hop](#)
- [match ipv6 route-source](#)
- [set ipv6 next-hop](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information When you enter the `redistribute ospf process-id` command without any other parameters, Dell Networking OS redistributes all OSPF internal routes, external type 1 routes, and external type 2 routes.

router bgp

Enter ROUTER BGP mode to configure and enable BGP.

Syntax `router bgp as-number`

To disable BGP, use the `no router bgp as-number` command.

Parameters ***as-number*** Enter the AS number. The range is from 1 to 65535.

Defaults Not enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

show capture bgp-pdu neighbor

Display BGP packet capture information for an IPv6 address.

Syntax `show capture bgp-pdu neighbor ipv6-address`

Parameters	<i>ipv6-address</i>	Enter the IPv6 address (X:X:X:X::X) of a BGP neighbor.										
Defaults	<ul style="list-style-type: none"> • EXEC • EXEC Privilege 											
Command Modes	CONFIGURATION											
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table border="0"> <thead> <tr> <th style="text-align: left;">Version</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.4.2.1</td> <td>Introduced on the C-Series and S4810.</td> </tr> <tr> <td>8.2.1.0</td> <td>Introduced on the E-Series ExaScale.</td> </tr> <tr> <td>7.4.1.0</td> <td>Introduced on the E-Series TeraScale.</td> </tr> </tbody> </table>		Version	Description	8.3.19.0	Introduced on the S4820T.	8.4.2.1	Introduced on the C-Series and S4810.	8.2.1.0	Introduced on the E-Series ExaScale.	7.4.1.0	Introduced on the E-Series TeraScale.
Version	Description											
8.3.19.0	Introduced on the S4820T.											
8.4.2.1	Introduced on the C-Series and S4810.											
8.2.1.0	Introduced on the E-Series ExaScale.											
7.4.1.0	Introduced on the E-Series TeraScale.											
Related Command	<p>capture bgp-pdu neighbor (ipv6) – enables capture of an IPv6 BGP neighbor packet.</p> <p>capture bgp-pdu max-buffer-size – specifies a size for the capture buffer.</p>											

show config

View the current ROUTER BGP configuration.

Syntax	show config
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Example	

```
Dell(conf-router_bgp)#show conf
!
router bgp 18508
 neighbor RR-CLIENT peer-group
 neighbor RR-CLIENT remote-as 18508
 neighbor RR-CLIENT no shutdown
 neighbor RR-CLIENT-PASSIV peer-group passive
 neighbor RR-CLIENT-PASSIV remote-as 18508
 neighbor RR-CLIENT-PASSIV subnet 9000::9:0/120
 neighbor RR-CLIENT-PASSIV no shutdown
 neighbor 1109::33 remote-as 18508
 neighbor 1109::33 update-source Loopback 101
 neighbor 1109::33 no shutdown
 neighbor 2222::220 remote-as 18508
 neighbor 2222::220 route-reflector-client
 neighbor 2222::220 update-source Loopback 100
 neighbor 2222::220 no shutdown
 neighbor 4000::33 remote-as 18508
 neighbor 4000::33 no shutdown
 neighbor 4000::60 remote-as 18508
 neighbor 4000::60 no shutdown
 neighbor 9000::1:2 remote-as 640
 no neighbor 9000::1:2 activate
 neighbor 9000::1:2 no shutdown

!
Dell#
```

show ipv6 prefix-list

Displays the specified IPv6 prefix list.

Syntax `show ipv6 prefix-list detail {prefix-list name} | summary`

Parameters

- detail** Display a detailed description of the selected IPv6 prefix list.
- prefix-list name** Enter the name of the prefix list.
 **NOTE:** There is a 140-character limit for prefix list names.
- summary** Display a summary of RPF routes.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.0.0	Introduced on the Z9000.
8.3.10.0	Introduced on the S4810.

Related Commands

- [ipv6 prefix-list](#) — configure an IPv6 prefix-list.

show ip bgp ipv6 unicast

View the current BGP information.

Syntax `show ip bgp ipv6 unicast [network [network-mask] [longer-prefixes]]`

Parameters

- network** (OPTIONAL) Enter the network address (in dotted decimal format) of the BGP network to view information only on that network.
- network-mask** (OPTIONAL) Enter the keywords `network mask` (in slash prefix format) of the BGP network address.
- longer-prefixes** (OPTIONAL) Enter the keywords `longer-prefixes` to view all routes with a common prefix.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information

When you enable the `bgp non-deterministic-med` command, the `show ip bgp` command output for a BGP route does not list the INACTIVE reason.

show ip bgp ipv6 unicast cluster-list

View BGP neighbors in a specific cluster.

Syntax `show ip bgp ipv6 unicast cluster-list [cluster-id]`

Parameters **cluster-id** (OPTIONAL) Enter the cluster id in dotted decimal format.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast community

View information on all routes with community attributes or view specific BGP community groups.

Syntax `show ip bgp ipv6 unicast community [community-number] [local-as] [no-export] [no-advertise]`

Parameters

community-number Enter the community number in AA:NN format where AA is the AS number (2 bytes) and NN is a value specific to that autonomous system. You can specify up to eight community numbers to view information on those community groups.

local-AS Enter the keywords `local-as` to view all routes with the COMMUNITY attribute of NO_EXPORT_SUBCONFED. All routes with the NO_EXPORT_SUBCONFED (0xFFFFFFFF03) community attribute must not be advertised to external BGP peers.

no-advertise Enter the keywords `no-advertise` to view all routes containing the well-known community attribute of NO_ADVERTISE. All routes with the NO_ADVERTISE (0xFFFFFFFF02) community attribute must not be advertised to other BGP peers.

no-export Enter the keywords `no-export` to view all routes containing the well-known community attribute of NO_EXPORT. All routes with the NO_EXPORT (0xFFFFFFFF01) community attribute must not be advertised outside a BGP confederation boundary.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information

To view the total number of COMMUNITY attributes found, use the `show ip bgp ipv6 unicast summary` command. The text line above the route table states the number of COMMUNITY attributes found.

show ip bgp ipv6 unicast community-list

View routes that are affected by a specific community list.

Syntax `show ip bgp ipv6 unicast community-list community-list-name [exact-match]`

Parameters

- community-list-name*** Enter the name of a configured IP community list.
- exact-match** (OPTIONAL) Enter the keywords `exact-match` to display only for an exact match of the communities.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast dampened-paths

View BGP routes that are dampened (non-active).

Syntax `show ip bgp ipv6 unicast dampened-paths`

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast detail

Display BGP internal information for IPv6 Unicast address family.

Syntax	<code>show ip bgp ipv6 unicast detail</code>								
Defaults	none								
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege								
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table><tr><td>Version 8.3.19.0</td><td>Introduced on the S4820T.</td></tr><tr><td>Version 8.4.2.1</td><td>Introduced on the C-Series and S4810.</td></tr><tr><td>Version 8.2.1.0</td><td>Introduced on the E-Series ExaScale.</td></tr><tr><td>Version 7.4.1.0</td><td>Introduced on the E-Series TeraScale.</td></tr></table>	Version 8.3.19.0	Introduced on the S4820T.	Version 8.4.2.1	Introduced on the C-Series and S4810.	Version 8.2.1.0	Introduced on the E-Series ExaScale.	Version 7.4.1.0	Introduced on the E-Series TeraScale.
Version 8.3.19.0	Introduced on the S4820T.								
Version 8.4.2.1	Introduced on the C-Series and S4810.								
Version 8.2.1.0	Introduced on the E-Series ExaScale.								
Version 7.4.1.0	Introduced on the E-Series TeraScale.								

show ip bgp ipv6 unicast extcommunity-list

View information on all routes with Extended Community attributes.

Syntax	<code>show ip bgp ipv6 unicast extcommunity-list [<i>list name</i>]</code>								
Parameters	<p><i>list name</i> Enter the extended community list name you wish to view.</p>								
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege								
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table><tr><td>Version 8.3.19.0</td><td>Introduced on the S4820T.</td></tr><tr><td>Version 8.4.2.1</td><td>Introduced on the C-Series and S4810.</td></tr><tr><td>Version 8.2.1.0</td><td>Introduced on the E-Series ExaScale.</td></tr><tr><td>Version 7.4.1.0</td><td>Introduced on the E-Series TeraScale.</td></tr></table>	Version 8.3.19.0	Introduced on the S4820T.	Version 8.4.2.1	Introduced on the C-Series and S4810.	Version 8.2.1.0	Introduced on the E-Series ExaScale.	Version 7.4.1.0	Introduced on the E-Series TeraScale.
Version 8.3.19.0	Introduced on the S4820T.								
Version 8.4.2.1	Introduced on the C-Series and S4810.								
Version 8.2.1.0	Introduced on the E-Series ExaScale.								
Version 7.4.1.0	Introduced on the E-Series TeraScale.								
Usage Information	<p>To view the total number of COMMUNITY attributes found, use the <code>show ip bgp ipv6 unicast summary</code> command. The text line above the route table states the number of COMMUNITY attributes found.</p> <p>The <code>show ip bgp ipv6 unicast community</code> command without any parameters lists BGP routes with at least one BGP community attribute and the output is the same as for the <code>show ip bgp ipv6 unicast</code> command output.</p>								

show ip bgp ipv6 unicast filter-list

View the routes that match the filter lists.

Syntax `show ip bgp ipv6 unicast filter-list as-path-name`

Parameters ***as-path-name*** Enter the name of an AS-PATH.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast flap-statistics

View flap statistics on BGP routes.

Syntax `show ip bgp ipv6 unicast flap-statistics [ipv6-address prefix-length] [filter-list as-path-name] [regexp regular-expression]`

Parameters ***ipv6-address prefix-length*** Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

filter-list as-path-name (OPTIONAL) Enter the keywords *filter-list* then the name of a configured AS-PATH ACL.

regexp regular-expression Enter a regular expression then use one or a combination of the following characters to match:

- . = (period) any single character (including a white space).
 - * = (asterisk) the sequences in a pattern (0 or more sequences).
 - + = (plus) the sequences in a pattern (1 or more sequences).
 - ? = (question mark) sequences in a pattern (either 0 or 1 sequences).
-  **NOTE:** You must enter an escape sequence (CTRL+v) prior to entering the ? regular expression.
- [] = (brackets) a range of single-character patterns.
 - ^ = (caret) the beginning of the input string. If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.
 - \$ = (dollar sign) the end of the output string.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast inconsistent-as

View routes with inconsistent originating autonomous system (AS) numbers; that is, prefixes that are announced from the same neighbor AS but with a different AS-Path.

Syntax `show ip bgp ipv6 unicast inconsistent-as`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast neighbors

Displays information on IPv6 unicast routes exchanged by BGP neighbors.

Syntax `show ip bgp ipv6 unicast neighbors [ipv4-neighbor-addr | ipv6-neighbor-addr] [advertised-routes | dampened-routes | detail | flap-statistics | routes | received-routes [network [network-mask]] | denied-routes [network [network-mask]]]`

- Parameters**
- ipv6 unicast** Enter the keywords `ipv6 unicast` to view information only related to IPv6 unicast routes.
 - ipv4-neighbor-addr | ipv6-neighbor-addr** (OPTIONAL) Enter the IP address of the neighbor to view only BGP route information exchanged with that neighbor.
 - advertised-routes** (OPTIONAL) Enter the keywords `advertised-routes` to view only the routes the neighbor sent.
 - dampened-routes** (OPTIONAL) Enter the keywords `dampened-routes` to view information on dampened routes from the BGP neighbor.
 - detail** (OPTIONAL) Enter the keyword `detail` to view neighbor-specific internal information for the IPv4 Unicast address family.
 - flap-statistics** (OPTIONAL) Enter the keywords `flap-statistics` to view flap statistics on the neighbor's routes.

routes	(OPTIONAL) Enter the keyword <code>routes</code> to view only the neighbor's feasible routes.
received-routes [network] [network-mask]	(OPTIONAL) Enter the keywords <code>received-routes</code> then either the network address (in dotted decimal format) or the network mask (in slash prefix format) to view all information received from neighbors. i NOTE: You must configure the <code>neighbor soft-reconfiguration inbound</code> command prior to viewing all the information received from the neighbors.
denied-routes [network] [network-mask]	(OPTIONAL) Enter the keywords <code>denied-routes</code> then either the network address (in dotted decimal format) or the network mask (in slash prefix format) to view all information on routes denied using neighbor inbound filters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.1.0	Added support for IPv4 multicast and IPv6 unicast address families
Version 8.2.1.0	Introduced on the E-Series ExaScale.
Version 7.8.1.0	Introduced on the S4810.
Version 7.7.1.0	Introduced on the C-Series.
Version 7.5.1.0	Added the <code>detail</code> option. Output now displays the default MED value.
Version 7.2.1.0	Added the <code>received</code> and <code>denied route</code> options.
Version 6.3.10	The output is changed to display the total number of advertised prefixes.

Usage Information The following describes the `show ip bgp ipv6 unicast neighbors` command shown in the Example below.

Lines Beginning With	Description
BGP neighbor	Displays the BGP neighbor address and its AS number. The last phrase in the line indicates whether the link between the BGP router and its neighbor is an external or internal one. If they are located in the same AS, then the link is internal; otherwise, the link is external.
BGP version	Displays the BGP version (always version 4) and the remote router ID.
BGP state	Displays the neighbor's BGP state and the amount of time in hours:minutes:seconds it has been in that state.
Last read	This line displays the following information: <ul style="list-style-type: none"> • last read is the time (hours:minutes:seconds) the router reads a message from its neighbor • hold time is the number of seconds configured between messages from its neighbor • keepalive interval is the number of seconds between keepalive messages to help ensure that the TCP session is still alive
Received messages	This line displays the number of BGP messages received, the number of notifications (error messages), and the number of messages waiting in a queue for processing.
Sent messages	The line displays the number of BGP messages sent, the number of notifications (error messages), and the number of messages waiting in a queue for processing.

Lines	Description
Beginning With	
Received updates	This line displays the number of BGP updates received and sent.
Soft reconfiguration	This line indicates that soft reconfiguration inbound is configured.
Minimum time	Displays the minimum time, in seconds, between advertisements.
(List of inbound and outbound policies)	Displays the policy commands configured and the names of the Route map, AS-PATH ACL, or Prefix list configured for the policy.
For address family:	Displays IPv6 Unicast as the address family.
BGP table version	Displays which version of the primary BGP routing table the router and the neighbor are using.
Prefixes accepted	Displays the number of network prefixes accepted by the router and the amount of memory used to process those prefixes.
Prefixes advertised	Displays the number of network prefixes advertised, the number rejected, and the number withdrawn from the BGP routing table.
Connections established	Displays the number of TCP connections established and dropped between the two peers to exchange BGP information.
Last reset	Displays the amount of time since the peering session was last reset. Also states if the peer resets the peering session. If the peering session was never reset, the word "never" is displayed.
Local host:	Displays the peering address of the local router and the TCP port number.
Foreign host:	Displays the peering address of the neighbor and the TCP port number.

Example

```
Dell#show ip bgp ipv6 unicast neighbors
BGP neighbor is 5ffe:10::3, remote AS 1, external link
  BGP version 4, remote router ID 5.5.5.3
  BGP state ESTABLISHED, in this state for 00:00:32
  Last read 00:00:32, last write 00:00:32
  Hold time is 180, keepalive interval is 60 seconds
  Received 1404 messages, 0 in queue
    3 opens, 1 notifications, 1394 updates
    6 keepalives, 0 route refresh requests
  Sent 48 messages, 0 in queue
    3 opens, 2 notifications, 0 updates
    43 keepalives, 0 route refresh requests
  Minimum time between advertisement runs is 30 seconds
  Minimum time before advertisements start is 0 seconds

Capabilities received from neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)

Capabilities advertised to neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)

For address family: IPv6 Unicast
BGP table version 12, neighbor version 12
2 accepted prefixes consume 32 bytes

Prefixes accepted 1 (consume 4 bytes), withdrawn 0 by peer
Prefixes advertised 0, rejected 0, withdrawn 0 from peer
Connections established 3; dropped 2
```

```

Last reset 00:00:39, due to Closed by neighbor

Notification History
  'OPEN error/Bad AS' Sent : 0 Recv: 1

Local host: 5ffe:10::4, Local port: 179
Foreign host: 5ffe:10::3, Foreign port: 35470

Notification History
  'Connection Reset' Sent : 1 Recv: 0

BGP neighbor is 5ffe:11::3, remote AS 1, external link
  BGP version 4, remote router ID 5.5.5.3
  BGP state ESTABLISHED, in this state for 00:00:28
  Last read 00:00:28, last write 00:00:28
  Hold time is 180, keepalive interval is 60 seconds
  Received 27 messages, 3 notifications, 0 in queue
  Sent 0 messages, 0 notifications, 0 in queue
  Received 8 updates, Sent 0 updates
  Route refresh request: received 0, sent 0
  Minimum time between advertisement runs is 30 seconds
  Minimum time before advertisements start is 0 seconds

Capabilities received from neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)
Capabilities advertised to neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)

For address family: IPv6 Unicast
BGP table version 12, neighbor version 12
2 accepted prefixes consume 32 bytes

Prefix advertised 0, rejected 0, withdrawn 0
Connections established 3; dropped 2
Last reset 00:00:41, due to Closed by neighbor

Notification History
  'OPEN error/Bad AS' Sent : 0 Recv: 1

Local host: 5ffe:11::4, Local port: 179

```

Related Commands

[show ip bgp ipv6 unicast](#) – views the current BGP routing table.

show ip bgp ipv6 unicast peer-group

Allows you to view information on the BGP peers in a peer group.

Syntax

```
show ip bgp ipv6 unicast peer-group [peer-group-name [summary]]
```

Parameters

- peer-group-name*** (OPTIONAL) Enter the name of a peer group to view information about that peer group only.
- detail** (OPTIONAL) Enter the keyword `detail` to view peer-group-specific information for the IPv6 address family.
- summary** (OPTIONAL) Enter the keyword `summary` to view status information of the peers in that peer group. The output is the same as that found in the `show ip bgp ipv6 unicast summary` command.

Command Modes • EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Example

```
Dell#show ip bgp peer-group

Peer-group RR-CLIENT, remote AS 18508
  BGP version 4
  Minimum time between advertisement runs is 5 seconds

  For address family: IPv4 Unicast
  BGP neighbor is RR-CLIENT, peer-group internal,
  Number of peers in this group 1
  Peer-group members (* - outbound optimized):
    9000::4:

Peer-group RR-CLIENT-PASSIV, remote AS 18508
  BGP version 4
  Minimum time between advertisement runs is 5 seconds

  For address family: IPv4 Unicast
  BGP neighbor is RR-CLIENT-PASSIV, peer-group internal,
  Number of peers in this group 1
  Peer-group members (* - outbound optimized):
    9000::9:2*

Dell#
```

show ip bgp ipv6 unicast summary

Allows you to view the status of all BGP connections.

Syntax `show ip bgp ipv6 unicast summary`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Example

```
Dell# show ip bgp summary
BGP router identifier 55.55.55.55, local AS number 18508
BGP table version is 0, main routing table version 0
6 BGP path attribute entrie(s) using 392 bytes of memory
6 BGP AS-PATH entrie(s) using 294 bytes of memory
```

```

6 BGP community entrie(s) using 234 bytes of memory

Neighbor  AS      MsgRcvd MsgSent  TblVer  InQ  OutQ  Up/Down  State/Pfx
1109::33  18508  0        0        0        0    0    never    Active
2222::220 18508  0        0        0        0    0    never    Active
4000::33  18508  0        0        0        0    0    never    Active
4000::60  18508  0        0        0        0    0    never    Active
9000::4:2  18508  0        0        0        0    0    never    Active
9000::5:2  1      35       32       0        0    0    00:16:42  0
9000::6:2  2      35       32       0        0    0    00:16:39  0
9000::7:2  3      35       32       0        0    0    00:16:41  0
9000::8:2  18508  35       32       0        0    0    00:16:42  0
9000::9:2  18508  44       19       0        0    0    00:16:41  0
9000::a:2  18508  35       32       0        0    0    00:16:43  0
9000::b:14 18508  29       29       0        0    0    00:13:01  0
Dell#

```

show ip bgp next-hop

View all next hops (using learned routes only) with current reachability and flap status. This command only displays one path, even if the next hop is reachable by multiple paths.

Syntax `show ip bgp next-hop [local-routes]`

Parameters **local-routes** (OPTIONAL) Show next-hop information for local routes.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Example

```

Dell#show ip bgp next-hop
Next-hop  Via          RefCount  Cost  Flaps  Time Elapsed
9000::5:2 9000::5:2, Gi 8/38  2      0    0    00:23:22
9000::6:2 9000::6:2, Gi 8/38  2      0    0    00:23:22
9000::7:2 9000::7:2, Gi 8/38  2      0    0    00:23:22
9000::8:2 9000::8:2, Gi 8/38  2      0    0    00:23:22
9000::9:2 9000::9:2, Gi 8/38  6000   0    0    00:23:16
9000::a:2 9000::a:2, Gi 8/38  2      0    0    00:23:22
Dell#

```

show ip bgp paths

View all the BGP path attributes in the BGP database.

Syntax `show ip bgp paths [regexp regular-expression]`

Parameters

regex *regular-expression*

Enter a regular expression then use one or a combination of the following characters to match:

- `.` = (period) any single character (including a white space).
 - `*` = (asterisk) the sequences in a pattern (0 or more sequences).
 - `+` = (plus) the sequences in a pattern (1 or more sequences).
 - `?` = (question mark) sequences in a pattern (either 0 or 1 sequences).
-  **NOTE:** You must enter an escape sequence (CTRL+v) prior to entering the `?` regular expression.
- `[]` = (brackets) a range of single-character patterns.
 - `^` = (caret) the beginning of the input string. If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.
 - `$` = (dollar sign) the end of the output string.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp paths as-path

View all unique AS-PATHs in the BGP database.

Syntax

```
show ip bgp paths as-path
```

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp paths community

View all unique COMMUNITY numbers in the BGP database.

Syntax

```
show ip bgp paths community
```

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp paths extcommunity

View all unique extended community information in the BGP database.

Syntax `show ip bgp paths extcommunity`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp regexp

Allows you to view the subset of BGP routing table matching the regular expressions specified.

Syntax `show ip bgp regexp regular-expression [character]`

Parameters

regular-expression
[*character*]

Enter a regular expression then use one or a combination of the following characters to match:

- . = (period) any single character (including a white space).
- * = (asterisk) the sequences in a pattern (0 or more sequences).
- + = (plus) the sequences in a pattern (1 or more sequences).
- ? = (question mark) sequences in a pattern (either 0 or 1 sequences).
-  **NOTE:** You must enter an escape sequence (CTRL+v) prior to entering the ? regular expression.
- [] = (brackets) a range of single-character patterns.
- ^ = (caret) the beginning of the input string. If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.
- \$ = (dollar sign) the end of the output string.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

timers bgp

Allows you to adjust the BGP network timers for all neighbors.

Syntax `timers bgp keepalive holdtimer`

To return to the default values, use the `no timers bgp` command.

- Parameters**
- keepalive*** Enter the time interval (in seconds) between which the system sends keepalive messages. The range is from 1 to 65535. The default is **60 seconds**.
 - holdtimer*** Enter the time interval (in seconds) that the the system waits since the last keepalive message before declaring a BGP peer dead. The range is from 3 to 65535. The default is **180 seconds**.

- Defaults**
- keepalive = **60 seconds**
 - holdtimer = **180 seconds**

Command Modes ROUTER BGP

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 8.2.1.0** Introduced on the E-Series ExaScale.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Related Commands [neighbor timers](#) – adjusts BGP timers for a specific peer or peer group.

IPv6 MBGP Commands

Multiprotocol BGP (MBGP) is an enhanced BGP that enables multicast routing policy throughout the Internet and connecting multicast topologies between BGP and autonomous systems (AS). The Dell Networking OS MBGP is implemented as per IETF RFC 1858.

address family

This command changes the context to subsequent address family identifier (SAFI).

Syntax	<code>address family ipv6 unicast</code> To remove SAFI context, use the <code>no address family ipv6 unicast</code> command.
Parameters	ipv6 Enter the keyword <code>ipv6</code> to specify the address family as IPv6. unicast Enter the keyword <code>unicast</code> to specify multicast as SAFI.
Defaults	IPv6 Unicast
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	After this command is executed, all subsequent commands apply to this address family. You can exit from this AFI/SAFI to the IPv6 Unicast (the default) family by entering the <code>exit</code> command and returning to the Router BGP context.

aggregate-address

Summarize a range of prefixes to minimize the number of entries in the routing table.

Syntax	<code>aggregate-address ipv6-address prefix-length [advertise-map map-name] [as-set] [attribute-map map-name] [summary-only] [suppress-map map-name]</code>
Parameters	ipv6-address Enter the IPv6 address in the x:x:x:x format then the prefix length in the / x format. The range is from /0 to /128. prefix-length  NOTE: The :: notation specifies successive hexadecimal fields of zeros. advertise-map map-name (OPTIONAL) Enter the keywords <code>advertise-map</code> then the name of a configured route map to set filters for advertising an aggregate route. as-set (OPTIONAL) Enter the keywords <code>as-set</code> to generate path attribute information and include it in the aggregate. AS_SET includes AS_PATH and community information from the routes included in the aggregated route.

attribute-map map-name	(OPTIONAL) Enter the keywords <code>attribute-map</code> then the name of a configured route map to modify attributes of the aggregate, excluding <code>AS_PATH</code> and <code>NEXT_HOP</code> attributes.
summary-only	(OPTIONAL) Enter the keywords <code>summary-only</code> to advertise only the aggregate address. Specific routes are not advertised.
suppress-map map-name	(OPTIONAL) Enter the keywords <code>suppress-map</code> then the name of a configured route map to identify which more-specific routes in the aggregate are suppressed.

Defaults Not configured.

Command Modes ROUTER-BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0	Introduced on the S4820T.
Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information

At least one of the routes included in the aggregate address must be in the BGP routing table for the configured aggregate to become active.

Do not add the `as-set` parameter to the aggregate. If routes within the aggregate are constantly changing, the aggregate flaps to keep track of the changes in the `AS_PATH`.

In route maps used in the `suppress-map` parameter, routes meeting the `deny` clause are not suppress; in other words, they are allowed. The opposite is true: routes meeting the `permit` clause are suppressed.

If the route is injected using the `network` command, that route stills appear in the routing table if the `summary-only` parameter is configured in the `aggregate-address` command.

The `summary-only` parameter suppresses all advertisements. If you want to suppress advertisements to only specific neighbors, use the `neighbor distribute-list` command.

bgp dampening

Enable BGP route dampening and configure the dampening parameters.

Syntax `bgp dampening [half-life reuse suppress max-suppress-time] [route-map map-name]`

Parameters	half-life	(OPTIONAL) Enter the number of minutes after which the Penalty is decreased. After the router assigns a Penalty of 1024 to a route, the Penalty is decreased by half, after the half-life period expires. The range is from 1 to 45. The default is 15 minutes .
	reuse	(OPTIONAL) Enter a number as the reuse value, which is compared to the flapping route's Penalty value. If the Penalty value is less than the reuse value, the flapping route is once again advertised (or no longer suppressed). The range is from 1 to 20000. The default is 750 .
	suppress	(OPTIONAL) Enter a number as the suppress value, which is compared to the flapping route's Penalty value. If the Penalty value is greater than the suppress value, the flapping route is no longer advertised (that is, it is suppressed). The range is from 1 to 20000. The default is 2000 .
	max-suppress-time	(OPTIONAL) Enter the maximum number of minutes a route can be suppressed. The default is four times the half-life value. The range is from 1 to 255. The default is 60 minutes .

route-map *map-name* (OPTIONAL) Enter the keywords `route-map` then the name of a configured route map. Only match commands in the configured route map are supported.

Defaults Disabled.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 8.2.1.0 Introduced on the E-Series ExaScale.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information If you enter `bgp dampening`, the default values for `half-life`, `reuse`, `suppress`, and `max-suppress-time` are applied. The parameters are position-dependent; therefore, if you configure one parameter, you must configure the parameters in the order they appear in the command.

Related Commands [show ip bgp ipv6 unicast dampened-paths](#) – views the BGP paths.

clear ip bgp ipv6 unicast

Reset MBGP sessions.

Syntax `clear ip bgp ipv6 unicast * ipv6-address prefix-length [dampening | flap-statistics] peer-group`

Parameters `*` Enter the character `*` to clear all peers.

ipv6-address prefix-length Enter the IPv6 address in the `x:x:x:x` format then the prefix length in the `/x` format. The range is from `/0` to `/128`.

 **NOTE:** The `::` notation specifies successive hexadecimal fields of zeros.

dampening (OPTIONAL) Enter the keyword `dampening` to clear route flap dampening information.

flap-statistics (OPTIONAL) Enter the keywords `flap-statistics` to reset the flap statistics on all prefixes from that neighbor.

peer-group (OPTIONAL) Enter the keywords `peer-group` to clear all members of a peer-group.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

clear ip bgp ipv6 unicast dampening

Clear information on route dampening.

Syntax	<code>clear ip bgp dampening ipv6 unicast [network network-mask]</code>
Parameters	<p>network (OPTIONAL) Enter the IPv6 network address in x:x:x::x format.</p> <p>network-mask If you enter the network address, next enter the network mask, from 0 to 128.</p>
Command Modes	EXEC Privilege
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>

clear ip bgp ipv6 flap-statistics

Clear BGP flap statistics, which includes the number of flaps and the time of the last flap.

C-Series, E-Series, S4810

Syntax	<code>clear ip bgp ipv6 unicast flap-statistics [network filter-list list regexp regexp]</code>
Parameters	<p>network (OPTIONAL) Enter the IPv6 network address in x:x:x::x format to clear flap statistics.</p> <p>filter-list list (OPTIONAL) Enter the keywords <code>filter-list</code> followed by the name of a configured AS-PATH list (maximum 16 characters).</p> <p>regexp regexp (OPTIONAL) Enter the keyword <code>regexp</code> followed by regular expressions. Use one or a combination of the following:</p> <ul style="list-style-type: none">• <code>.</code> (period) matches on any single character, including white space.• <code>*</code> (asterisk) matches on sequences in a pattern (zero or more sequences).• <code>+</code> (plus sign) matches on sequences in a pattern (one or more sequences).• <code>?</code> (question mark) matches sequences in a pattern (0 or 1 sequences).• <code>[]</code> (brackets) matches a range of single-character patterns.• <code>^</code> (caret) matches the beginning of the input string. (If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.)• <code>\$</code> (dollar sign) matches the end of the output string.
Command Modes	EXEC Privilege
Command History	<p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>

debug ip bgp ipv6 unicast dampening

View information on routes being dampened.

Syntax	<code>debug ip bgp ipv6 unicast dampening</code> To disable debugging, use the <code>no debug ip bgp ipv6 unicast dampening</code> command.
Parameters	dampening Enter the keyword <code>dampening</code> to clear route flap dampening information.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.

debug ip bgp ipv6 unicast peer-group updates

View information about BGP peer-group updates.

Syntax	<code>debug ip bgp ipv6 unicast peer-group <i>peer-group-name</i> updates [in out]</code> To disable debugging, use the <code>no debug ip bgp ipv6 unicast peer-group <i>peer-group-name</i> updates [in out]</code> command.
Parameters	peer-group <i>peer-group-name</i> Enter the keywords <code>peer-group</code> then the name of the peer-group. updates Enter the keyword <code>updates</code> to view BGP update information. in (OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors. out (OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.

debug ip bgp ipv6 unicast updates

View information about BGP updates.

Syntax	<code>debug ip bgp ipv6 unicast <i>ipv6-address prefix-length</i> updates [in out]</code>	
Parameters	<i>ipv6-address</i>	Enter the IPv6 address in the x:x:x::x format then the prefix length in the /x format. The range is from /0 to /128.
	<i>prefix-length</i>	 NOTE: The :: notation specifies successive hexadecimal fields of zeros.
	updates	Enter the keyword <code>updates</code> to view BGP update information.
	in	(OPTIONAL) Enter the keyword <code>in</code> to view only BGP updates received from neighbors.
	out	(OPTIONAL) Enter the keyword <code>out</code> to view only BGP updates sent to neighbors.
Defaults	Disabled.	
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> .	
	The following is a list of the Dell Networking OS version history for this command.	
Description		
8.3.19.0	Introduced on the S4820T.	
8.4.2.1	Introduced on the C-Series and S4810.	
7.4.1.0	Introduced on the E-Series TeraScale.	

distance bgp

Define an administrative distance for routes.

Syntax	<code>distance bgp <i>external-distance internal-distance local-distance</i></code> To return to default values, use the <code>no distance bgp</code> command.	
Parameters	<i>external-distance</i>	Enter a number to assign to routes learned from a neighbor external to the AS. The range is from 1 to 255. The default is 20 .
	<i>internal-distance</i>	Enter a number to assign to routes learned from a router within the AS. The range is from 1 to 255. The default is 200 .
	<i>local-distance</i>	Enter a number to assign to routes learned from networks listed in the network command. The range is from 1 to 255. The default is 200 .
Defaults	<ul style="list-style-type: none">external-distance = 20internal-distance = 200local-distance = 200	
Command Modes	ROUTER BGPV6-ADDRESS FAMILY	
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> .	
	The following is a list of the Dell Networking OS version history for this command.	
Version 8.3.19.0	Introduced on the S4820T.	

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

 **CAUTION: Dell Force10 recommends that you do not change the administrative distance of internal routes. Changing the administrative distances may cause routing table inconsistencies.**

The higher the administrative distance assigned to a route means that your confidence in that route is low. Routes assigned an administrative distance of 255 are not installed in the routing table.

Routes from confederations are treated as internal BGP routes.

neighbor activate

Allows you to enable a specified neighbor/peer group for the current address and subsequent address family identifier (AFI/SAFI).

Syntax

```
neighbor [ipv6-address | peer-group-name] activate
```

To disable, use the `no neighbor [ipv6-address | peer-group-name] activate` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Identify a peer group by name.

activate Enter the keyword `activate` to enable the identified neighbor or peer group in the new AFI/SAFI.

Defaults

Disabled.

Command Modes

ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information

By default, when a neighbor/peer group configuration is created in the Router BGP context, it is enabled for the IPv6/Unicast AFI/SAFI. By using `activate` in the new context, the neighbor/peer group is enabled for AFI/SAFI.

Related Command

[address family](#) – changes the context to SAFI.

neighbor advertisement-interval

Set the advertisement interval between BGP neighbors or within a BGP peer group.

Syntax

```
neighbor {ipv6-address | peer-group-name} advertisement-interval seconds
```

To return to the default value, use the `no neighbor {ipv6-address | peer-group-name} advertisement-interval` command.

Parameters

- ipv6-address** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name** Enter the name of the peer group to set the advertisement interval for all routers in the peer group.
- seconds** Enter a number as the time interval, in seconds, between BGP advertisements. The range is from 0 to 600 seconds. The default is **5 seconds** for internal BGP peers and **30 seconds** for external BGP peers.

Defaults

- seconds = **5 seconds** (internal peers)
- seconds = **30 seconds** (external peers)

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *FTOS Command Line Reference Guide*.

The following is a list of the FTOS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

neighbor default-originate

Inject the default route to a BGP peer or neighbor.

Syntax

```
neighbor {ipv6-address | peer-group-name} default-originate [route-map map-name]
```

To remove a default route, use the `no neighbor {ipv6-address | peer-group-name} default-originate` command.

Parameters

- ipv6-address** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name** Enter the name of the peer group to set the default route of all routers in that peer group.
- route-map map-name** (OPTIONAL) Enter the keywords `route-map` then the name of a configured route map.

Defaults

Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

neighbor distribute-list

Distribute BGP information using an established prefix list.

Syntax	<pre>neighbor {ipv6-address peer-group-name} distribute-list prefix-list-name {in out}</pre> <p>To delete a neighbor distribution list, use the <code>no neighbor {ipv6-address peer-group-name} distribute-list prefix-list-name {in out}</code> command.</p>
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group.</p> <p>prefix-list-name Enter the name of an established prefix list. If the prefix list is not configured, the default is permit (to allow all routes).</p> <p>in Enter the keyword in to distribute only inbound traffic.</p> <p>out Enter the keyword out to distribute only outbound traffic.</p>
Defaults	Not configured.
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>
Related Commands	<p>neighbor filter-list – assigns a AS-PATH list to a neighbor or peer group.</p> <p>neighbor route-map – assigns a route map to a neighbor or peer group.</p>

neighbor filter-list

Configure a BGP filter based on the AS-PATH attribute.

Syntax	<pre>neighbor [ipv6-address peer-group-name] filter-list aspath access-list-name [in out]</pre> <p>To delete a BGP filter, use the <code>no neighbor [ipv6-address peer-group-name] filter-list aspath access-list-name [in out]</code> command.</p>
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to apply the filter to all routers in the peer group.</p> <p>access-list-name Enter the name of an established AS-PATH access list. If the AS-PATH access list is not configured, the default is permit (to allow routes).</p> <p>in Enter the keyword in to filter inbound BGP routes.</p>

out Enter the keyword `out` to filter outbound BGP routes.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *FTOS Command Line Reference Guide*.

The following is a list of the FTOS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

neighbor maximum-prefix

Control the number of network prefixes received.

Syntax `neighbor {ipv6-address | peer-group-name} maximum-prefix maximum [threshold] [warning-only]`

To return to the default values, use the `no neighbor {ipv6-address | peer-group-name} maximum-prefix maximum [threshold] [warning-only]` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

peer-group-name Enter the name of the peer group.

maximum Enter a number as the maximum number of prefixes allowed for this BGP router. The range is from 1 to 4294967295.

threshold (OPTIONAL) Enter a number to be used as a percentage of the maximum value. When the number of prefixes reaches this percentage of the maximum value, the software sends a message. The range is from 1 to 100 percent. The default is **75**.

warning-only (OPTIONAL) Enter the keyword `warning-only` to set the router to send a log message when the maximum value is reached. If this parameter is not set, the router stops peering when the maximum number of prefixes is reached.

Defaults `threshold = 75`

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

neighbor next-hop-self

Allows you to configure the router as the next hop for a BGP neighbor.

Syntax	<code>neighbor {ipv6-address peer-group-name} next-hop-self</code> To return to the default setting, use the <code>no neighbor {ipv6-address peer-group-name} next-hop-self</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name (OPTIONAL) Enter the name of the peer group.</p>
Defaults	Disabled.
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.
Usage Information	If you configure the <code>set ipv6 next-hop</code> command in ROUTE-MAP mode, its configuration takes precedence over the <code>neighbor next-hop-self</code> command.

neighbor remove-private-as

Remove private AS numbers from the AS-PATH of outgoing updates.

Syntax	<code>neighbor {ipv6-address peer-group-name} remove-private-as</code> To return to the default, use the <code>no neighbor {ipv6-address peer-group-name} remove-private-as</code> command.
Parameters	<p>ipv6-address Enter the IPv6 address in the x:x:x::x format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p>peer-group-name Enter the name of the peer group to remove the private AS numbers.</p>
Defaults	Disabled (that is, the private AS number are not removed).
Command Modes	ROUTER BGPV6-ADDRESS FAMILY
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.

neighbor route-map

Apply an established route map to either incoming or outbound routes of a BGP neighbor or peer group.

Syntax `neighbor {ipv6-address | peer-group-name} route-map map-name {in | out}`
To remove the route map, use the `no neighbor {ipv6-address | peer-group-name} route-map map-name {in | out}` command.

Parameters

- ipv6-address** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name** Enter the name of the peer group.
- map-name** Enter the name of an established route map. If the Route map is not configured, the default is **deny** (to drop all routes).
- in** Enter the keyword `in` to filter inbound routes.
- out** Enter the keyword `out` to filter outbound routes.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *FTOS Command Line Reference Guide*.

The following is a list of the FTOS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information When you apply a route map to outbound routes, only routes that match at least one section of the route map are permitted.

If you identify a peer group by name, the peers in that peer group inherit the characteristics in the Route map used in this command. If you identify a peer by IP address, the Route map overwrites either the inbound or outbound policies on that peer.

neighbor route-reflector-client

Configure a neighbor as a member of a route reflector cluster.

Syntax `neighbor {ipv6-address | peer-group-name} route-reflector-client`
To indicate that the neighbor is not a route reflector client or to delete a route reflector configuration, use the `no neighbor {ipv6-address | peer-group-name} route-reflector-client` command.

Parameters

- ipv6-address** Enter the IPv6 address in the x:x:x:x format.
 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- peer-group-name** Enter the name of the peer group. All routers in the peer group receive routes from a route reflector.

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information The first time you enter this command it configures the neighbor as a route reflector and members of the route-reflector cluster. Internal BGP (IBGP) speakers do not need to be fully meshed if you configure a route reflector.

When all clients of a route reflector are disabled, the neighbor is no longer a route reflector.

network

Specify the networks for the BGP process and enter them in the BGP routing table.

Syntax `network ipv6-address [route-map map-name]`

To remove a network, use the `no network ipv6-address [route-map map-name]` command.

Parameters

ipv6-address Enter the IPv6 address in the x:x:x:x format.

 **NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

route-map map-name (OPTIONAL) Enter the keywords `route-map` then the name of an established route map. Only the following ROUTE-MAP mode commands are supported:

- [match ipv6 address](#)
- [match ipv6 next-hop](#)
- [match ipv6 route-source](#)
- [set ipv6 next-hop](#)

If the route map is not configured, the default is **deny** (to drop all routes).

Defaults Not configured.

Command Modes ROUTER BGPV6-ADDRESS FAMILY

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

Usage Information The software resolves the network address configured by the `network` command with the routes in the main routing table to ensure that the networks are reachable using non-BGP routes and non-default routes.

Related Commands [redistribute](#) – redistributes routes into BGP.

redistribute

Redistribute routes into BGP.

Syntax	<code>redistribute {connected static} [route-map map-name]</code> To disable redistribution, use the <code>no redistribution {connected static}</code> command.						
Parameters	<table><tr><td>connected</td><td>Enter the keyword <code>connected</code> to redistribute routes from physically connected interfaces.</td></tr><tr><td>static</td><td>Enter the keyword <code>static</code> to redistribute manually configured routes. These routes are treated as incomplete routes.</td></tr><tr><td>route-map map-name</td><td>(OPTIONAL) Enter the keywords <code>route-map</code> followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported:<ul style="list-style-type: none">• match ipv6 address• match ipv6 next-hop• match ipv6 route-source• set ipv6 next-hopIf the route map is not configured, the default is deny (to drop all routes).</td></tr></table>	connected	Enter the keyword <code>connected</code> to redistribute routes from physically connected interfaces.	static	Enter the keyword <code>static</code> to redistribute manually configured routes. These routes are treated as incomplete routes.	route-map map-name	(OPTIONAL) Enter the keywords <code>route-map</code> followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported: <ul style="list-style-type: none">• match ipv6 address• match ipv6 next-hop• match ipv6 route-source• set ipv6 next-hop If the route map is not configured, the default is deny (to drop all routes).
connected	Enter the keyword <code>connected</code> to redistribute routes from physically connected interfaces.						
static	Enter the keyword <code>static</code> to redistribute manually configured routes. These routes are treated as incomplete routes.						
route-map map-name	(OPTIONAL) Enter the keywords <code>route-map</code> followed by the name of an established route map. Only the following ROUTE-MAP mode commands are supported: <ul style="list-style-type: none">• match ipv6 address• match ipv6 next-hop• match ipv6 route-source• set ipv6 next-hop If the route map is not configured, the default is deny (to drop all routes).						
Defaults	Not configured.						
Command Modes	ROUTER BGPV6-ADDRESS FAMILY						
Command History	This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i> . The following is a list of the Dell Networking OS version history for this command. Version 8.3.19.0 Introduced on the S4820T. Version 8.4.2.1 Introduced on the C-Series and S4810. Version 7.4.1.0 Introduced on the E-Series TeraScale.						
Usage Information	If you do not configure the <code>default-metric</code> command, in addition to the <code>redistribute</code> command, or there is no route map to set the metric, the metric for redistributed static and connected is "0". To redistribute the default route (0::0/0), configure the <code>neighbor default-originate</code> command.						
Related Commands	neighbor default-originate – injects the default route.						

show ipv6 mbgproutes

Display the selected IPv6 MBGP route or a summary of all MBGP routes in the table.

Syntax	<code>show ipv6 mbgproutes ipv6-address prefix-length summary</code>						
Parameters	<table><tr><td>ipv6-address</td><td>(OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.</td></tr><tr><td>prefix-length</td><td> NOTE: The :: notation specifies successive hexadecimal fields of zeros.</td></tr><tr><td>summary</td><td>Display a summary of RPF routes.</td></tr></table>	ipv6-address	(OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.	prefix-length	 NOTE: The :: notation specifies successive hexadecimal fields of zeros.	summary	Display a summary of RPF routes.
ipv6-address	(OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.						
prefix-length	 NOTE: The :: notation specifies successive hexadecimal fields of zeros.						
summary	Display a summary of RPF routes.						
Command Modes	EXEC						

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.

show ip bgp ipv6 unicast

View the current MBGP route table.

C-Series, E-Series, S4810

Syntax

```
show ip bgp ipv6 unicast [network [network-mask] [length]]
```

Parameters

network	(OPTIONAL) Enter the network address (in dotted decimal format) of the BGP network to view information only on that network.
network-mask	(OPTIONAL) Enter the keywords <code>network mask</code> (in slash prefix format) of the BGP network address.
longer-prefixes	(OPTIONAL) Enter the keywords <code>longer-prefixes</code> to view all routes with a common prefix.

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 8.4.2.1	Introduced on the C-Series and S4810.
Version 7.4.1.0	Introduced on the E-Series TeraScale.

Usage Information

The following describes the `show ip bgp ipv6 unicast` command shown in the Example below.

Field	Description
Network	Displays the destination network prefix of each BGP route.
Next Hop	Displays the next hop address of the BGP router. If 0::0/0 is listed in this column, local routes exist in the routing table.
Metric	Displays the BGP route's metric, if assigned.
LocPrf	Displays the BGP LOCAL_PREF attribute for the route.
Weight	Displays the route's weight.
Path	Lists all the ASs the route passed through to reach the destination network.

Example

```
Dell#show ip bgp ipv6 unicast
BGP table version is 8, local router ID is 5.5.10.4
Status codes: s suppressed, S stale, d damped, h history, * valid, >
best Path source: I - internal, a
- aggregate, c - confed-external, r - redistributed, n - network Origin
codes: i - IGP, e - EGP, ? -
incomplete

Network Next Hop          Metric LocPrf Weight Path
```

```

h dead:1::/100 5ffe:10::3 0 0 1 i
h 5ffe:11::3 0 0 1 i
*> dead:2::/100 5ffe:10::3 0 0 1 i
* 5ffe:11::3 0 0 1 i
*> dead:3::/100 5ffe:10::3 0 0 1 i
* 5ffe:11::3 0 0 1 i
h dead:4::/100 5ffe:10::3 0 0 1 i
h 5ffe:11::3 0 0 1 i
Dell#show ip bgp ipv6 unicast dead:3::/100

BGP routing table entry for dead:3::/100, version 3
Paths: (2 available, table Default-MBGP-Routing-Table.)
Not advertised to any peer

Received from :
 5ffe:10::3 (5.5.5.3) Best
  AS_PATH : 1

  Next-Hop : 5ffe:10::3, Cost : 0
  Origin IGP, Metric 0, LocalPref 100, Weight 0, external

 5ffe:11::3 (5.5.5.3)
  AS_PATH : 1

  Next-Hop : 5ffe:11::3, Cost : 0
  Origin IGP, Metric 0, LocalPref 100, Weight 0, external
  Inactive reason: Peer IP address
Dell#

```

Related Commands

[show ip bgp ipv6 unicast community](#) – views BGP communities.

show ip bgp ipv6 unicast cluster-list

View BGP neighbors in a specific cluster.

Syntax `show ip bgp ipv6 unicast cluster-list [cluster-id]`

Parameters ***cluster-id*** (OPTIONAL) Enter the cluster id in dotted decimal format.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version 8.3.19.0 Introduced on the S4820T.

Version 8.4.2.1 Introduced on the C-Series and S4810.

Version 7.4.1.0 Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast community

View information on all routes with community attributes or view specific BGP community groups.

Syntax `show ip bgp ipv6 unicast community [community-number] [local-as] [no-export] [no-advertise]`

Parameters	<i>community-number</i>	Enter the community number in AA:NN format where AA is the AS number (2 bytes) and NN is a value specific to that autonomous system. You can specify up to eight community numbers to view information on those community groups.
	local-AS	Enter the keywords <code>local-AS</code> to view all routes with the COMMUNITY attribute of NO_EXPORT_SUBCONFED. All routes with the NO_EXPORT_SUBCONFED (0xFFFFFFFF03) community attribute must not be advertised to external BGP peers.
	no-advertise	Enter the keywords <code>no-advertise</code> to view all routes containing the well-known community attribute of NO_ADVERTISE. All routes with the NO_ADVERTISE (0xFFFFFFFF02) community attribute must not be advertised to other BGP peers.
	no-export	Enter the keywords <code>no-export</code> to view all routes containing the well-known community attribute of NO_EXPORT. All routes with the NO_EXPORT (0xFFFFFFFF01) community attribute must not be advertised outside a BGP confederation boundary.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information To view the total number of COMMUNITY attributes found, use the `show ip bgp ipv6 unicast summary` command. The text line above the route table states the number of COMMUNITY attributes found.

show ip bgp ipv6 unicast community-list

View routes that are affected by a specific community list.

Syntax `show ip bgp ipv6 unicast community-list community-list-name`

Parameters ***community-list-name*** Enter the name of a configured IP community list.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast dampened-paths

View BGP routes that are dampened (non-active).

Syntax `show ip bgp ipv6 unicast dampened-paths`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast detail

Display detailed BGP information.

Syntax `show ip bgp ipv6 unicast detail`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Example

```
R2_Training#show ip bgp ipv6 unicast detail

Detail information for BGP Node
bgpNdP 0x41a17000 :NdTmrP 0x41a17000 : NdKATmrP 0x41a17014 : NdTics
327741 :
NhLocAS 1 : NdState 2 : NdRPMPrim 1 : NdListSoc 13
NdAuto 1 : NdEqCost 1 : NdSync 0 : NdDefOrg 0
NdV6ListSoc 14 NdDefDid 0 : NdConfedId 0 : NdMedConfed 0 : NdMedMissVal
-1 :
NdIgnrIllId 0 : NdRRC2C 1 : NdClstId 33686273 : NdPaTblP 0x41a19088
NdASPTblP 0x41a19090 : NdCommTblP 0x41a19098 : NhOptTransTblP 0x41a190a0
:
NdRRC1sTblP 0x41a190a8
NdPktPA 0 : NdLocCBP 0x41a6f000 : NdTmpPAP 0x419efc80 : NdTmpASPAP
0x41a25000 :
NdTmpCommP 0x41a25800
NdTmpRRC1P 0x41a4b000 : NdTmpOptP 0x41a4b800 : NdTmpNHP : NdOrigPAP 0
NdOrgNHP 0 : NdModPathP 0x419efcc0 : NdModASPAP 0x41a4c000 : NdModCommP
0x41a4c800
NdModOptP 0x41a4d000 : NdModNHP : NdComSortBufP 0x41a19110 : NdComSortHdP
0x41a19d04 : NdUpdAFMsk 0 : AFRstSe
t 0x41a1a298 : NHopDfrdHdP 0x41a1a3e0 : NumNhDfrd 0 : CfgHdrAFMsk 1
```

show ip bgp ipv6 unicast filter-list

View the routes that match the filter lists.

Syntax	<code>show ip bgp ipv6 unicast filter-list <i>as-path-name</i></code>
Parameters	<i>as-path-name</i> Enter the name of an AS-PATH.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <p>Version 8.3.19.0 Introduced on the S4820T.</p> <p>Version 8.4.2.1 Introduced on the C-Series and S4810.</p> <p>Version 7.4.1.0 Introduced on the E-Series TeraScale.</p>

show ip bgp ipv6 unicast flap-statistics

View flap statistics on BGP routes.

Syntax	<code>show ip bgp ipv6 unicast flap-statistics [<i>ipv6-address prefix-length</i>] [<i>filter-list as-path-name</i>] [<i>regexp regular-expression</i>]</code>
Parameters	<p><i>ipv6-address prefix-length</i> Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.</p> <p> NOTE: The :: notation specifies successive hexadecimal fields of zeros.</p> <p><i>filter-list as-path-name</i> (OPTIONAL) Enter the keywords <code>filter-list</code> then the name of a configured AS-PATH ACL.</p> <p><i>regexp regular-expression</i> Enter a regular expression then use one or a combination of the following characters to match:</p> <ul style="list-style-type: none">. = (period) any single character (including a white space).* = (asterisk) the sequences in a pattern (0 or more sequences).+ = (plus) the sequences in a pattern (1 or more sequences).? = (question mark) sequences in a pattern (either 0 or 1 sequences). <p> NOTE: You must enter an escape sequence (CTRL+v) prior to entering the ? regular expression.</p> <ul style="list-style-type: none">[] = (brackets) a range of single-character patterns.^ = (caret) the beginning of the input string. If the caret is used at the beginning of a sequence or range, it matches on everything BUT the characters specified.\$ = (dollar sign) the end of the output string.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p>

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Example

```
Dell#show ip bgp ipv6 unicast flap-statistics
BGP table version is 8, local router ID is 5.5.10.4
Status codes: s suppressed, S stale, d damped, h history, * valid, >
best Path
source: I - internal, a - aggregate, c - confed-external, r -
redistributed, n -
network Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          From           Flaps    Duration Reuse Path
h  dead:1::/100     5ffe:10::3    1        00:03:20 1 i
h  dead:1::/100     5ffe:11::3    1        00:03:20 1 i
h  dead:4::/100     5ffe:10::3    1        00:04:39 1 i
h  dead:4::/100     5ffe:11::3    1        00:04:39 1 i

Dell#
```

show ip bgp ipv6 unicast inconsistent-as

View routes with inconsistent originating autonomous system (AS) numbers; that is, prefixes that are announced from the same neighbor AS but with a different AS-Path.

Syntax `show ip bgp ipv6 unicast inconsistent-as`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

show ip bgp ipv6 unicast neighbors

Allows you to view the information exchanged by BGP neighbors.

Syntax `show ip bgp ipv6 unicast neighbors [ipv6-address prefix-length [advertised-routes | dampened-routes | detail | flap-statistics | routes]]`

- Parameters**
- ipv6-address** (OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.
 - prefix-length** (OPTIONAL) Enter the prefix length in the /x format. The range is from /0 to /128.
 - advertised-routes** (OPTIONAL) Enter the keywords advertised-routes to view only the routes the neighbor sent.
- NOTE:** The :: notation specifies successive hexadecimal fields of zeros.

- dampened-routes** (OPTIONAL) Enter the keywords `dampened-routes` to view information on dampened routes from the BGP neighbor.
- flap-statistics** (OPTIONAL) Enter the keywords `flap-statistics` to view flap statistics on the neighbor's routes.
- detail** (OPTIONAL) Display detailed neighbor information.
- routes** (OPTIONAL) Enter the keyword `routes` to view only the neighbor's feasible routes.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.5.1.0** Added the `detail` option and added information to the output.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The following describes the `show ip bgp ipv6 unicast neighbors` command shown in the Example below.

Lines Beginning With	Description
BGP neighbor	Displays the BGP neighbor address and its AS number. The last phrase in the line indicates whether the link between the BGP router and its neighbor is an external or internal one. If they are located in the same AS, then the link is internal; otherwise, the link is external.
BGP version	Displays the BGP version (always version 4) and the remote router ID.
BGP state	Displays the neighbor's BGP state and the amount of time in hours:minutes:seconds it has been in that state.
Last read	This line displays the following information: <ul style="list-style-type: none"> • last read is the time (hours:minutes:seconds) the router reads a message from its neighbor • hold time is the number of seconds configured between messages from its neighbor • keepalive interval is the number of seconds between keepalive messages to help ensure that the TCP session is still alive
Received messages	This line displays the number of BGP messages received, the number of notifications (error messages), and the number of messages waiting in a queue for processing.
Sent messages	The line displays the number of BGP messages sent, the number of notifications (error messages), and the number of messages waiting in a queue for processing.
Received updates	This line displays the number of BGP updates received and sent.
Minimum time	Displays the minimum time, in seconds, between advertisements.
(List of inbound and outbound policies)	Displays the policy commands configured and the names of the Route map, AS-PATH ACL, or Prefix list configured for the policy.
For address family:	Displays IPv6 Unicast as the address family.

Lines	Description
Beginning With	
BGP table version	Displays which version of the primary BGP routing table the router and the neighbor are using.
Accepted Prefixes	Displays the number of network prefixes accepted by the router and the amount of memory used to process those prefixes.
Prefixes advertised	Displays the number of network prefixes advertised, the number rejected, and the number withdrawn from the BGP routing table.
Connections established	Displays the number of TCP connections established and dropped between the two peers to exchange BGP information.
Last reset	Displays the amount of time since the peering session was last reset. Also states if the peer resets the peering session. If the peering session was never reset, the word "never" is displayed.
Local host:	Displays the peering address of the local router and the TCP port number.
Foreign host:	Displays the peering address of the neighbor and the TCP port number.

Example

```
Dell#show ip bgp ipv6 unicast neighbors

BGP neighbor is 5ffe:10::3, remote AS 1, external link
  BGP version 4, remote router ID 5.5.5.3
  BGP state ESTABLISHED, in this state for 00:00:32
  Last read 00:00:32, last write 00:00:32
  Hold time is 180, keepalive interval is 60 seconds
  Received 1404 messages, 0 in queue
    3 opens, 1 notifications, 1394 updates
    6 keepalives, 0 route refresh requests
  Sent 48 messages, 0 in queue
    3 opens, 2 notifications, 0 updates
    43 keepalives, 0 route refresh requests
  Minimum time between advertisement runs is 30 seconds
  Minimum time before advertisements start is 0 seconds

Capabilities received from neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)

Capabilities advertised to neighbor for IPv6 Unicast :
  MULTIPROTO_EXT(1)
  ROUTE_REFRESH(2)
  CISCO_ROUTE_REFRESH(128)

For address family: IPv6 Unicast
  BGP table version 12, neighbor version 12
  2 accepted prefixes consume 32 bytes

Prefixes accepted 1 (consume 4 bytes), withdrawn 0 by peer
Prefixes advertised 0, rejected 0, withdrawn 0 from peer
Connections established 3; dropped 2
Last reset 00:00:39, due to Closed by neighbor

Notification History
  'OPEN error/Bad AS' Sent : 0 Recv: 1

Local host: 5ffe:10::4, Local port: 179
Foreign host: 5ffe:10::3, Foreign port: 35470

Notification History
  'Connection Reset' Sent : 1 Recv: 0

BGP neighbor is 5ffe:11::3, remote AS 1, external link
  BGP version 4, remote router ID 5.5.5.3
```

```

BGP state ESTABLISHED, in this state for 00:00:28
Last read 00:00:28, last write 00:00:28
Hold time is 180, keepalive interval is 60 seconds
Received 27 messages, 3 notifications, 0 in queue
Sent 0 messages, 0 notifications, 0 in queue
Received 8 updates, Sent 0 updates
Route refresh request: received 0, sent 0
Minimum time between advertisement runs is 30 seconds
Minimum time before advertisements start is 0 seconds

Capabilities received from neighbor for IPv6 Unicast :
MULTIPROTO_EXT(1)
ROUTE_REFRESH(2)
CISCO_ROUTE_REFRESH(128)
Capabilities advertised to neighbor for IPv6 Unicast :
MULTIPROTO_EXT(1)
ROUTE_REFRESH(2)
CISCO_ROUTE_REFRESH(128)

For address family: IPv6 Unicast
BGP table version 12, neighbor version 12
2 accepted prefixes consume 32 bytes
Prefix advertised 0, rejected 0, withdrawn 0

Connections established 3; dropped 2
Last reset 00:00:41, due to Closed by neighbor

Notification History
'OPEN error/Bad AS' Sent : 0 Recv: 1

Local host: 5ffe:11::4, Local port: 179

```

**Related
Commands**

[show ip bgp ipv6 unicast](#) – views the current BGP routing table.

show ip bgp ipv6 unicast peer-group

Allows you to view information on the BGP peers in a peer group.

Syntax

```
show ip bgp ipv6 unicast peer-group [peer-group-name [summary]]
```

Parameters

- peer-group-name*** (OPTIONAL) Enter the name of a peer group to view information about that peer group only.
- summary*** (OPTIONAL) Enter the keyword *summary* to view status information of the peers in that peer group. The output is the same as that found in the `show ip bgp ipv6 unicast summary` command.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

**Related
Commands**

[neighbor peer-group \(assigning peers\)](#) – assigns a peer to a peer-group.
[neighbor peer-group \(creating group\)](#) – creates a peer group.

show ip bgp ipv6 unicast summary

Allows you to view the status of all BGP connections.

Syntax `show ip bgp ipv6 unicast summary`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.4.2.1** Introduced on the C-Series and S4810.
- Version 7.4.1.0** Introduced on the E-Series TeraScale.

Usage Information The following describes the `show ip bgp ipv6 unicast summary` command shown in the Example below.

Field	Description
BGP router identifier	Displays the local router ID and the AS number.
BGP table version	Displays the BGP table version and the main routing table version.
network entries	Displays the number of network entries, route paths, and the amount of memory used to process those entries.
BGP path attribute entries	Displays the number of BGP path attributes and the amount of memory used to process them.
BGP AS-PATH entries	Displays the number of BGP AS_PATH attributes processed and the amount of memory used to process them.
BGP community entries	Displays the number of BGP COMMUNITY attributes processed and the amount of memory used to process them. The <code>show ip bgp ipv6 unicast community</code> command provides more details on the COMMUNITY attributes.
Dampening enabled	Displayed only when dampening is enabled. Displays the number of paths designated as history, dampened, or penalized.
Neighbor	Displays the BGP neighbor address.
AS	Displays the AS number of the neighbor.
MsgRcvd	Displays the number of BGP messages that neighbor received.
MsgSent	Displays the number of BGP messages that neighbor sent.
TblVer	Displays the version of the BGP table that was sent to that neighbor.
InQ	Displays the number of messages from that neighbor waiting to be processed.
OutQ	Displays the number of messages waiting to be sent to that neighbor. If a number appears in parentheses, the number represents the number of messages waiting to be sent to the peer group.
Up/Down	Displays the amount of time (in hours:minutes:seconds) that the neighbor is in the Established stage. If the neighbor has never moved into the Established stage, the word never is displayed.
State/Pfx	If the neighbor is in Established stage, the number of network prefixes received.

Field**Description**

If a maximum limit was configured with the `neighbor maximum-prefix` command, (prfxd) appears in this column.

If the neighbor is not in Established stage, the current stage is displayed (Idle, Connect, Active, OpenSent, OpenConfirm). When the peer is transitioning between states and clearing the routes received, the phrase (Purging) may appear in this column.

If the neighbor is disabled, the phrase (Admin shut) appears in this column.

Example

```
Dell#show ip bgp ipv6 unicast summary
BGP router identifier 5.5.10.4, local AS number 100
BGP table version is 12, main routing table version 12
2 network entrie(s) and 4 paths using 536 bytes of memory
1 BGP path attribute entrie(s) using 112 bytes of memory
1 BGP AS-PATH entrie(s) using 39 bytes of memory
Dampening enabled. 0 history paths, 0 dampened paths, 0 penalized paths

Neighbor    AS  MsgRcvd  MsgSent  TblVer  InQ  OutQ  Up/Down  State/Pfx
5ffe:10::3  1     28       0        12     0    0 00:01:01  2
5ffe:11::3  1     27       0        12     0    0 00:00:55  2
Dell#
```

iSCSI Optimization

Internet small computer system interface (iSCSI) optimization enables quality-of-service (QoS) treatment for iSCSI storage traffic on Dell EMC Networking OS platforms.

To configure and verify the iSCSI optimization feature, use the following Dell EMC Networking OS commands.

Topics:

- [advertise dcbx-app-tlv](#)
- [iscsi aging time](#)
- [iscsi cos](#)
- [iscsi enable](#)
- [iscsi priority-bits](#)
- [iscsi profile-compellant](#)
- [iscsi target port](#)
- [show iscsi](#)
- [show iscsi session](#)
- [show iscsi session detailed](#)
- [show run iscsi](#)

advertise dcbx-app-tlv

Configure DCBX to send iSCSI TLV advertisements.

Syntax	<code>advertise dcbx-app-tlv iscsi</code> To disable DCBX iSCSI TLV advertisements, use the <code>no advertise dcbx-app-tlv iscsi</code> command.
Defaults	Disabled.
Command Modes	PROTOCOL LLDP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048–ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Usage Information	You can configure iSCSI TLVs to send either globally or on a specified interface. The interface configuration takes priority over global configuration.
--------------------------	---

iscsi aging time

Set the aging time for iSCSI sessions.

Syntax	<code>iscsi aging time <i>time</i></code> To remove the iSCSI session aging time, use the <code>no iscsi aging time</code> command.
Parameters	<i>time</i> Enter the aging time for the iSCSI session. The range is from 5 to 43,200 minutes.
Defaults	10 minutes
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

iscsi cos

Set the QoS policy that is applied to the iSCSI flows.

Syntax	<code>iscsi cos {enable disable dot1p <i>vlan-priority-value</i> [remark] dscp <i>dscp-value</i> [remark]}</code> To disable the QoS policy, use the <code>no iscsi cos</code> command.
Parameters	<i>enable</i> Enter the keyword <code>enable</code> to allow the application of preferential QoS treatment to iSCSI traffic so that the iSCSI packets are scheduled in the switch with a dot1p priority 4 regardless of the VLAN priority tag in the packet. The default is: the iSCSI packets are handled with dotp1 priority 4 without remark. <i>disable</i> Enter the keyword <code>disable</code> to disable the application of preferential QoS treatment to iSCSI frames. <i>dot1p vlan-priority-value</i> Enter the dot1p value of the VLAN priority tag assigned to the incoming packets in an iSCSI session. The range is from 0 to 7. The default is the dot1p value in ingress iSCSI frames is not changed and is the same priority is used in iSCSI TLV advertisements if you did not enter the <code>iscsi priority-bits</code> command. <i>dscp dscp-value</i> Enter the DSCP value assigned to the incoming packets in an iSCSI session. The valid range is from 0 to 63. The default is: the DSCP value in ingress packets is not changed. <i>remark</i> Marks the incoming iSCSI packets with the configured dot1p or DSCP value when they egress to the switch. The default is: the dot1and DSCP values in egress packets are not changed.
Defaults	Disabled.
Command Modes	CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Usage Information

By default, iSCSI flows are assigned to dot1p priority 4.

iscsi enable

Globally enable iSCSI optimization.

Syntax

```
iscsi enable
```

To disable iSCSI optimization, use the `no iscsi enable` command.

Parameters

enable Enter the keyword `enable` to enable the iSCSI optimization feature.

Defaults

Disabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

iscsi priority-bits

Configure the priority bitmap that advertises in the iSCSI application TLVs.

Syntax

```
iscsi priority-bits
```

To remove the configured priority bitmap, use the `no iscsi priority-bits` command.

Defaults

4 (0x10 in the bitmap)

Command Modes PROTOCOL LLDP (only on the global, not on the interface)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

iscsi profile-compellant

Configure the auto-detection of Dell Compellent arrays on a port.

Syntax `iscsi profile-compellent`

Defaults Dell Compellent disk arrays are not detected.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

iscsi target port

Configure the iSCSI target ports and optionally, the IP addresses on which iSCSI communication is monitored.

Syntax `iscsi target port [tcp-port-2...tcp-port-16]ip-address [ip-address]`
To remove the configured iSCSI target ports or IP addresses, use the `no iscsi target port` command.

Parameters **tcp-port-2...tcpport-16** Enter the tcp-port number of the iSCSI target ports. The `tcp-port-n` is the TCP port number or a list of TCP port numbers on which the iSCSI target listens to requests. Separate port numbers with a comma. The default is **860, 3260**.

ip-address (Optional) Enter the ip-address that the iSCSI monitors. The ip-address specifies the IP address of the iSCSI target.

Defaults 860, 3260

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Usage Information You can configure up to 16 target TCP ports on the switch in one command or multiple commands.

When you use the `no iscsi target port` command and the TCP port you wish to delete is one bound to a specific IP address, the IP address value must be included in the command.

show iscsi

Display the currently configured iSCSI settings.

Syntax `show iscsi`

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Example

```
DelleMC# show iscsi
iscsi is enabled
iscsi session monitoring is disabled
iscsi COS : dot1p is 4 no-remark
Session aging time: 10
Maximum number of connections is 256
```

```
-----  
iSCSI Targets and TCP Ports:  
-----
```

```
TCP Port Target IP Address  
3260  
860
```

Related Commands

- [show iscsi session](#) — display information about active iSCSI sessions on the switch.
- [show iscsi session detailed](#) — display detailed information about active iSCSI sessions on the switch.
- [show run iscsi](#) — show run iscsi.

show iscsi session

Display information about active iSCSI sessions on the switch.

Syntax `show iscsi session`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Example

```
DellEMC# show iscsi session  
Session 0:  
-----  
Target: iqn.2001-05.com.equallogic:0-8a0906-0e70c2002-10a0018426a48c94-  
iom010  
Initiator: iqn.1991-05.com.microsoft:win-x918v27yajg  
ISID: 400001370000  
  
Session 1:  
-----  
Target: iqn.2001-05.com.equallogic:0-8a0906-0f60c2002-0360018428d48c94-  
iom011  
Initiator: iqn.1991-05.com.microsoft:win-x918v27yajg  
ISID: 400001370000.
```

Usage Information

Only sessions the switch observes are learned; sessions flowing through an adjacent switch are not learned.

After the switch is reloaded, any information exchanged during the initial handshake is not available. If the switch picks up the communication after reloading, it would detect a session was in progress but could not obtain complete information for it. Any incomplete information of this type would not be available in the show commands.

Related Commands

- [show iscsi](#) — display the currently configured iSCSI settings.
- [show iscsi session detailed](#) — display detailed information about active iSCSI sessions on the switch.
- [show run iscsi](#) — show run iscsi.

show iscsi session detailed

Display detailed information on active iSCSI sessions on the switch.

- Syntax** `show iscsi session detailed [session isid]`
- Parameters**
- isid*** Enter the session's iSCSI ID to display detailed information about the specified iSCSI session.
- Command Modes**
- EXEC
 - EXEC Privilege
- Command History**
- This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
DellEMC# show iscsi session detailed
Session 0 :
-----
Target:iqn.2010-11.com.ixia:ixload:iscsi-TG1
Initiator:iqn.2010-11.com.ixia:ixload:initiator-iscsi-2c
Up Time:00:00:01:28 (DD:HH:MM:SS)
Time for aging out:00:00:09:34 (DD:HH:MM:SS)
ISID:806978696102
Initiator Initiator Target      Target  Connection
IP Address TCP Port  IP Address  TCP Port ID
10.10.0.44 33345    10.10.0.101 3260   0
Session 1 :
-----
Target:iqn.2010-11.com.ixia:ixload:iscsi-TG1
Initiator:iqn.2010-11.com.ixia:ixload:initiator-iscsi-35
Up Time:00:00:01:22 (DD:HH:MM:SS)
Time for aging out:00:00:09:31 (DD:HH:MM:SS)
ISID:806978696102
Initiator Initiator Target      Target  Connection
IP Address TCP Port  IP Address  TCP Port ID
10.10.0.53 33432    10.10.0.101 3260   0
```

- Related Commands**
- [show iscsi](#) — display the currently configured iSCSI settings.
 - [show iscsi session](#) — display information about active iSCSI sessions on the switch.
 - [show run iscsi](#) — show run iscsi.

show run iscsi

Display all globally configured non-default iSCSI settings in the current Dell EMC Networking OS session.

- Syntax** `show run iscsi`
- Command Modes** EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.16.0	Introduced on MXL 10/40GbE Switch IO Module.

Related Commands

- [show iscsi](#) — display the currently configured iSCSI settings.
- [show iscsi session](#) — display detailed information about active iSCSI sessions on the switch.
- [show iscsi session detailed](#) — display detailed information on active iSCSI sessions on the switch.

Intermediate System to Intermediate System (IS-IS)

IS-IS is an interior gateway protocol that uses shortest-path-first algorithm. IS-IS facilitates the communication between open systems, supporting routers passing through both IP and OSI traffic.

A router is considered as an intermediate system. Networks are partitioned into manageable routing domains called areas. Intermediate systems send, receive, and forward packets to other routers within their area (Level 1 and Level 1-2 devices). Only Level 1-2 and Level 2 devices communicate with other areas.

IS-IS protocol standards are listed in the Standard Compliance chapter in the *Dell EMC Networking OS Configuration Guide*.

i **NOTE:** The fundamental mechanisms of IS-IS are the same for IPv4 and IPv6. However some command modes might vary when applied to IPV4 and IPV6. These variations have been explicitly explained for such commands. If the variation is not mentioned, then the information applies to both the protocol versions.

Topics:

- adjacency-check
- advertise
- area-password
- clear config
- clear isis
- clns host
- debug isis
- debug isis adj-packets
- debug isis local-updates
- debug isis snp-packets
- debug isis spf-triggers
- debug isis update-packets
- default-information originate
- description
- distance
- distribute-list in
- distribute-list out
- distribute-list redistributed-override
- domain-password
- graceful-restart ietf
- graceful-restart interval
- graceful-restart t1
- graceful-restart t2
- graceful-restart t3
- graceful-restart restart-wait
- hello padding
- hostname dynamic
- ignore-lsp-errors
- ip router isis
- ipv6 router isis
- isis circuit-type
- isis csnp-interval
- isis hello-interval
- isis hello-multiplier
- isis hello padding

- [isis ipv6 metric](#)
- [isis metric](#)
- [isis network point-to-point](#)
- [isis password](#)
- [isis priority](#)
- [is-type](#)
- [log-adjacency-changes](#)
- [lsp-gen-interval](#)
- [lsp-mtu](#)
- [lsp-refresh-interval](#)
- [max-area-addresses](#)
- [max-lsp-lifetime](#)
- [maximum-paths](#)
- [metric-style](#)
- [multi-topology](#)
- [net](#)
- [passive-interface](#)
- [redistribute](#)
- [redistribute bgp](#)
- [redistribute ospf](#)
- [router isis](#)
- [set-overload-bit](#)
- [show config](#)
- [show isis database](#)
- [show isis graceful-restart detail](#)
- [show isis hostname](#)
- [show isis interface](#)
- [show isis neighbors](#)
- [show isis protocol](#)
- [show isis traffic](#)
- [spf-interval](#)

adjacency-check

Verify that the “protocols supported” field of the IS-IS neighbor contains matching values to this router.

Syntax `adjacency-check`

To disable adjacency check, use the `no adjacency-check` command.

Defaults Enabled.

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Introduced on the E-Series.

Usage Information

To perform protocol-support consistency checks on hello packets, use this command. The adjacency-check is enabled by default.

If a BFD session goes down indicating that IPv4 or IPv6 connectivity to its neighbor is lost, it does not imply that the adjacency is lost altogether. The hello adjacency runs over Layer 2, and does not require IP connectivity. However, if IPv4 connectivity is lost to a neighbor, then when the next SPF calculation is performed, the system ensures that it does not calculate any IPv4 or IPv6 routes through that neighbor.

advertise

Leak routes between levels (distribute IP prefixes between Level 1 and Level 2 and vice versa).

Syntax

```
advertise {level1-into-level2 | level2-into-level1} prefix-list-name
```

To return to the default, use the `no advertise {level1-into-level2 | level2-into-level1} [prefix-list-name]` command.

Parameters

level1-into-level2	Enter the keywords <code>level1-into-level2</code> to advertise Level 1 routes into Level 2 LSPs. This setting is the default.
level2-into-level1	Enter the keywords <code>level2-into-level1</code> to advertise Level 2 inter-area routes into Level 1 LSPs. This behavior is described in RFC 2966.
prefix-list-name	Enter the name of a configured IP prefix list. Routes meeting the criteria of the IP Prefix list are leaked.

Defaults

level1-into-level2 (Level 1 to Level 2 leaking is enabled.)

level2-into-level1 (Level 2 to Level 1) leaking is disabled.

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added IPv6 ISIS support.
6.3.1.0	Version 6.3.1.0 Introduced

Usage Information

You cannot disable leaking from Level 1 to Level 2. Also, you cannot enable leaking from Level 2 to Level 1. However, you can regulate the rate flow from one level to another using an IP Prefix list. If you do not configure the IP Prefix list, all Level 1 routes are leaked.

You can find more information in IETF RFC 2966, *Domain-wide Prefix Distribution with Two-Level IS-IS*.

area-password

Configure a hash message authentication code (HMAC) password for an area.

Syntax

```
area-password [hmac-md5 | encryption-type] password
```

To delete a password, use the `no area-password` command.

Parameters

hmac-md5	(OPTIONAL) Enter the keywords <code>hmac-md5</code> to encrypt the password.
encryption-type	(OPTIONAL) Enter 7 to encrypt the password using DES.
password	Enter a 1 to 16-character length alphanumeric string to prevent unauthorized access or incorrect routing information corrupting the link state database. The password is processed as plain text, which only provides limited security.

Defaults

Not configured.

Command Modes

ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Version	Description
8.3.11.1	Introduced on the Z9000.

Usage Information

To prevent the link state database from receiving incorrect routing information from unauthorized routers, use the `area-password` command on routers within an area.

The configured password injects into Level 1 LSPs, CSNPs, and PSNPs.

Related Commands

- [domain-password](#) — set the authentication password for a routing domain.
- [isis password](#) — configure an authentication password for an interface.

clear config

Clear IS-IS configurations that display under the `router isis` heading of the `show running-config` command output.

Syntax `clear config`

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

Usage Information

 **CAUTION: Use caution when you enter this command. Back up your configuration prior to using this command or your IS-IS configuration will be erased.**

clear isis

Restart the IS-IS process. All IS-IS data is cleared.

S5000

Syntax `clear isis [vrf vrf-name] [tag] {* | database | traffic}`

Parameters	vrf <i>vrf-name</i>	(Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to restart the IS-IS process corresponding to that VRF.
	tag	(Optional) Enter an alphanumeric string to specify the IS-IS routing tag area.
	*	Enter the keyword <code>*</code> to clear all IS-IS information and restart the IS-IS process. This command removes IS-IS neighbor information and IS-IS LSP database information and the full SPF calculation is done.
	database	Clears IS-IS LSP database information.
	traffic	Clears IS-IS counters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

clns host

Define a name-to-network service mapping point (NSAP) that you use with commands that require NSAPs and system IDs.

Syntax `clns host name nsap`

Parameters	<i>name</i>	Enter an alphanumeric string to identify the name-to-NSAP mapping.
	<i>nsap</i>	Enter a specific NSAP address that is associated with the name parameter.

Defaults Not configured.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

To configure a shortcut name that you can use instead of entering a long string of numbers associated with an NSAP address, use this command.

Related Commands

- [hostname dynamic](#) — enable dynamic learning of host names from routers in the domain and allows the routers to advertise the host names in LSPs.

debug isis

Enable debugging for all IS-IS operations.

Syntax

`debug isis`

To disable debugging of IS-IS, use the `no debug isis` command.

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Entering `debug isis` enables all debugging parameters.

To display all debugging information in one output, use this command. To turn off debugging, you normally enter separate `no` forms of each command. To disable all debug messages for IS-IS at once, enter the `no debug isis` command.

debug isis adj-packets

Enable debugging on adjacency-related activity such as hello packets that are sent and received on IS-IS adjacencies.

S5000

Syntax `debug isis [vrf vrf-name] adj-packets [interface]`
To turn off debugging, use the `no debug isis [vrf vrf-name]adj-packets [interface]` command.

Parameters

vrf vrf-name (Optional) Enter the keyword `vrf` followed by the name of the VRF to enable the debug information on IS-IS for an adjacency tied to that VRF. This command displays the IIH related debug details.

interface (OPTIONAL) Identifies the interface type and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

debug isis local-updates

To debug IS-IS local update packets, enable debugging on a specific interface and provides diagnostic information.

S5000

Syntax `debug isis [vrf vrf-name] local-updates [interface]`
To turn off debugging, use the `no debug isis [vrf vrf-name] updates [interface]` command.

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to enable the debugging information on IS-IS corresponding to that VRF. This information contains local updates tied to the VRF that you specify. This command displays the local LSP debugging details of the current unit.

interface (OPTIONAL) Identifies the interface type as one of the following:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
6.3.1.0	Introduced.

debug isis snp-packets

To debug IS-IS complete sequence number PDU (CSNP) and partial sequence number PDU (PSNP) packets, enable debugging on a specific interface and provides diagnostic information.

S5000

Syntax `debug isis [vrf vrf-name] snp-packets [interface]`

To turn off debugging, use the `no debug isis [vrf vrf-name] snp-packets [interface]` command.

Parameters

vrf vrf-name (Optional) Enter the keyword `vrf` followed by the name of the VRF to enable debugging information on ISIS for CSNP/PSNP packets tied to that VRF. The command displays the SNP (CSNP/PSNP) related debugging information.

interface (OPTIONAL) Identifies the interface type as one of the following:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
6.3.1.0	Introduced.

debug isis spf-triggers

Enable debugging on the events that triggered IS-IS shortest path first (SPF) events for debugging purposes.

S5000

Syntax	<code>debug isis [vrf vrf-name] spf-triggers</code> To turn off debugging, use the <code>no debug isis [vrf vrf-name] spf-triggers</code> command.
Parameters	vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable debugging information on IS-IS corresponding to that VRF. This information contains SPF trigger detail tied to the VRF that you specify. When SPF is triggered, this debugging information is displayed.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
6.3.1.0	Introduced.

debug isis update-packets

Enable debugging on link state PDUs (LSPs) that a router detects.

S5000

Syntax	<code>debug isis [vrf vrf-name] update-packets [interface]</code> To turn off debugging, use the <code>no debug isis update-packets [interface]</code> command.
Parameters	vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable the debugging information on IS-IS. This information contains updates from neighbors tied to the VRF that you specify. This command displays the debugging details of the received LSPs from the neighbors.

- interface** (OPTIONAL) Identifies the interface type and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
6.3.1.0	Introduced.

default-information originate

Generates a default route into an IS-IS routing domain and controls the distribution of default information.

Syntax `default-information originate [always] [metric metric] [route-map map-name]`

To disable the generation of a default route into the specified IS-IS routing domain, use the `no default-information originate [always] [metric metric] [route-map map-name]` command.

Parameters

always	(OPTIONAL) Enter the keyword <code>always</code> to have the default route always advertised.
metric <i>metric</i>	(OPTIONAL) Enter the keyword <code>metric</code> then a number to assign to the route. The range is from 0 to 16777215.
route-map <i>map-name</i>	(OPTIONAL) A default route the routing process generates if the route map is satisfied.

Defaults Not configured.

- Command Modes**
- ROUTER ISIS (for IPv4)
 - CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (for IPv6)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added IPv6 ISIS support.
6.3.1.0	Introduced.

Usage Information

When you use this command to redistribute routes into a routing domain, the router becomes an autonomous system (AS) boundary router. An AS boundary router does not always generate a default route into a routing domain. The router still requires its own default route before it can generate one.

How a metric value assigned to a default route advertises depends on the `metric-style` command configuration. If the `metric-style` command is set for Narrow mode and the `metric` value in the `default-information originate` command is set to a number higher than 63, the metric value advertised in the LSPs is 63. If the `metric-style` command is set for Wide mode, the metric value in the `default-information originate` command is advertised.

Related Commands

- [redistribute](#) — redistribute routes from one routing domain to another routing domain.

description

Enter a description of the IS-IS routing protocol.

Syntax `description {description}`

To remove the description, use the `no description {description}` command.

Parameters `description` Enter a description to identify the IS-IS protocol (80 characters maximum).

Defaults None

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
pre-7.7.1.0	Introduced.

Related Commands

- [router isis](#) — enter ROUTER mode on the switch.

distance

Define the administrative distance for learned routes.

Syntax `distance weight [ip-address mask [prefix-list]]`

To return to the default values, use the `no distance weight` command.

Parameters

weight	The administrative distance value indicates the reliability of a routing information source. The range is from 1 to 255. (A higher relative value indicates lower reliability. Routes with smaller values are given preference.) The default is 115 .
ip-address mask	(OPTIONAL) Enter the next-hop address in dotted decimal format and enter a mask in either dotted decimal or /prefix format.
prefix-list	(OPTIONAL) Enter the name of a prefix list name.

Defaults weight = **115**

- Command Modes**
- ROUTER ISIS (*for IPv4*)
 - CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
6.3.1.0	Introduced.

Usage Information

The administrative distance indicates the trust value of incoming packets. A low administrative distance indicates a high trust rate. A high value indicates a lower trust rate. For example, a weight of 255 is interpreted that the routing information source is not trustworthy and should be ignored.

distribute-list in

Filter network prefixes received in updates.

S5000

Syntax

```
distribute-list prefix-list-name in [interface]
```

To return to the default values, use the `no distribute-list prefix-list-name in [interface]` command.

Parameters

- prefix-list-name*** Specify the prefix list to filter prefixes in routing updates.
- interface*** (OPTIONAL) Identifies the interface type and the interface following:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Added IPv6 ISIS support.
6.3.1.0	Introduced.

Related Commands

- [distribute-list out](#) — suppress networks from being advertised in updates.
- [redistribute](#) — redistribute routes from one routing domain to another routing domain.

distribute-list out

Suppress network prefixes from being advertised in outbound updates.

Syntax

```
distribute-list prefix-list-name out [connected | bgp as number | ospf process-id | rip | static]
```

To return to the default values, use the `no distribute-list prefix-list-name out [bgp as number connected | ospf process-id | rip | static]` command.

Parameters

- prefix-list-name*** Specify the prefix list to filter prefixes in routing updates.
- connected*** (OPTIONAL) Enter the keyword `connected` for directly connected routing process.
- ospf process-id*** (OPTIONAL) Enter the keyword `ospf` then the OSPF process-ID number. The range is from 1 to 65535.
- bgp as number*** (OPTIONAL) Enter the BGP then the AS Number. The range is from 1 to 65535.
- rip*** (OPTIONAL) Enter the keyword `rip` for RIP routes.
- static*** (OPTIONAL) Enter the keyword `static` for user-configured routing process.

Defaults

Not configured.

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Added IPv6 ISIS support.
6.3.1.0	Introduced.

Usage Information

You can assign a name to a routing process so a prefix list IS applied to only the routes derived from the specified routing process.

Related Commands

- [distribute-list in](#) — filter the networks received in updates.
- [redistribute](#) — redistribute routes from one routing domain to another routing domain.

distribute-list redistributed-override

Suppress flapping of routes when the same route is redistributed into IS-IS from multiple routers in the network.

Syntax

`distribute-list redistributed-override in`

To return to the default, use the `no distribute-list redistributed-override in` command.

Defaults

none

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Added IPv6 ISIS support.
6.3.1.0	Introduced.

Usage Information

When you execute this command, IS-IS does not download the route to the routing table if the same route was redistributed into IS-IS routing protocol on the same router.

domain-password

Set the authentication password for a routing domain.

Syntax	<code>domain-password [hmac-md5 encryption-type] password</code> To disable the password, use the <code>no domain-password</code> command.
Parameters	<p>hmac-md5 (OPTIONAL) Enter the keywords <code>hmac-md5</code> to encrypt the password using MD5.</p> <p>encryption-type (OPTIONAL) Enter <code>7</code> to encrypt the password using DES.</p> <p>password Enter an alphanumeric string up to 16 characters long. If you do not specify an <code>encryption type</code> or <code>hmac-md5</code> keywords, the password is processed as plain text which provides limited security.</p>
Defaults	No default password.
Command Modes	ROUTER ISIS
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
6.3.1.0	Introduced.

Usage Information	The domain password is inserted in Level 2 link state PDUs (LSPs), complete sequence number PDUs (CSNPs), and partial sequence number PDUs (PSNPs).
Related Commands	<ul style="list-style-type: none">• area-password — configure an IS-IS area authentication password.• isis priority — configure the authentication password for an interface.

graceful-restart ietf

Enable graceful restart on an IS-IS router.

Syntax	<code>graceful-restart ietf</code> To return to the default, use the <code>no graceful-restart ietf</code> command.
Parameters	ietf Enter <code>ietf</code> to enable graceful restart on the IS-IS router.
Defaults	Graceful restart disabled.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
6.3.1.0	Introduced on the E-Series.

Usage Information Every graceful restart enabled router's HELLO PDUs includes a restart TLV. This restart enables (re)starting as well as the existing ISIS peers to detect the GR capability of the routers on the connected network. A flag in the Restart TLV contains restart request (RR), restart acknowledge (RA) and suppress adjacency advertisement (SA) bit flags.

The ISIS graceful restart-enabled router can co-exist in mixed topologies where some routers are graceful restart-enabled and others are not. For neighbors that are not graceful restart-enabled, the restarting router brings up the adjacency per the usual methods.

graceful-restart interval

Set the graceful restart grace period, the time during that all graceful restart attempts are prevented.

Syntax `graceful-restart interval minutes`

To return to the default, use the `no graceful-restart interval` command.

Parameters **minutes** Enter the graceful-restart interval minutes. The range is from 1 to 20 minutes. The default is **5 minutes**.

Defaults **5 minutes**

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.

graceful-restart t1

Set the graceful restart wait time before unacknowledged restart requests are generated. This wait time is the interval before the system sends a restart request (an IIH with RR bit set in Restart TLV) until the CSNP is received from the helping router.

Syntax `graceful-restart t1 {interval seconds | retry-times value}`

To return to the default, use the `no graceful-restart t1` command.

Parameters	Parameter	Description
	interval	Enter the keyword <code>interval</code> to set the wait time. The range is from 5 to 120 seconds. The default is 5 seconds .
	retry-times	Enter the keywords <code>retry-times</code> to set the number of times the request interval is extended until a CSNP is received from the helping router. The range is from 1 to 10 attempts. The default is 1 .

Defaults See *Parameters*.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.1.0	Introduced on the E-Series.

graceful-restart t2

Configure the wait time for the graceful restart timer T2 that a restarting router uses as the wait time for each database to synchronize.

Syntax `graceful-restart t2 {level-1 | level-2} seconds`

To return to the default, use the `no graceful-restart t2` command.

Parameters

level-1, level-2 Enter the keywords `level-1` or `level-2` to identify the database instance type to which the wait interval applies.

seconds Enter the `graceful-restart t2` time in seconds. The range is from 5 to 120 seconds. The default is **30 seconds**.

Defaults **30 seconds**

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.

graceful-restart t3

Configure the overall wait time before graceful restart completes.

Syntax `graceful-restart t3 {adjacency | manual} seconds`

To return to the default, use the `no graceful-restart t3` command.

Parameters	adjacency	Enter the keyword <code>adjacency</code> so that the restarting router receives the remaining time value from its peer and adjusts its T3 value so if you have configured this option.
	manual	Enter the keyword <code>manual</code> to specify a time value that the restarting router uses. The range is from 50 to 120 seconds. The default is 30 seconds .

Defaults manual, **30 seconds**

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.

Usage Information The running router sets the remaining time value to the current adjacency hold time. You can override this setting by implementing this command.

Override the default restart-wait time by entering the `no graceful-restart restart-wait` command. When you disable `restart-wait`, the current adjacency hold time is used.

Set the `t3` timer to `adjacency` on the restarting router when implementing this command. The restarting router gets the remaining time value from its peer and adjusts its T3 value so only when you have configured `graceful-restart t3 adjacency`.

Related Commands

- [graceful-restart restart-wait](#) — enable the graceful restart maximum wait time before a restarting peer comes up.

graceful-restart restart-wait

Enable the graceful restart maximum wait time before a restarting peer comes up.

Syntax  **NOTE:** Set the `t3` timer to `adjacency` on the restarting router when implementing this command.

```
graceful-restart restart-wait seconds
```

To return to the default, use the `no graceful-restart restart-wait` command.

Parameters

seconds Enter the graceful restart time in seconds. The range is from 5 to 300 seconds. The default is **30 seconds**.

Defaults	30 seconds
Command Modes	ROUTER ISIS
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.

Related Commands

- [graceful-restart t3](#) — configure the overall wait time before graceful restart completes.

hello padding

Use to turn ON or OFF padding for LAN and point-to-point hello PDUs or to selectively turn padding ON or OFF for LAN or point-to-point hello PDUs.

Syntax

```
hello padding [multi-point | point-to-point]
```

To return to the default, use the `no hello padding [multi-point | point-to-point]` command.

Parameters

- multi-point** (OPTIONAL) Enter the keywords `multi-point` to pad only LAN hello PDUs.
- point-to-point** (OPTIONAL) Enter the keywords `point-to-point` to pad only point-to-point PDUs.

Defaults Both LAN and point-to-point hello PDUs are padded.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

IS-IS hellos are padded to the full maximum transmission unit (MTU) size. Padding IS-IS Hellos (IHS) to the full MTU provides early error detection of large frame transmission problems or mismatched MTUs on adjacent interfaces.

Related Commands

- [isis hello padding](#) — turn ON or OFF hello padding on an interface basis.

hostname dynamic

Enables dynamic learning of hostnames from routers in the domain and allows the routers to advertise the hostname in LSPs.

Syntax

`hostname dynamic`

To disable this command, use the `no hostname dynamic` command.

Defaults

Enabled.

Command Modes

ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

To build name-to-systemID mapping tables through the protocol, use this command. All `show` commands that display systems also display the hostname.

**Related
Commands**

- [clns host](#) — define a name-to-NSAP mapping.

ignore-lsp-errors

Ignore LSPs with bad checksums instead of purging those LSPs.

Syntax `ignore-lsp-errors`

To return to the default values, use the `no ignore-lsp-errors` command.

Defaults In IS-IS, the default deletes LSPs with internal checksum errors (`no ignore-lsp-errors`).

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information IS-IS normally purges LSPs with an incorrect data link checksum causing the LSP source to regenerate the message. A cycle of purging and regenerating LSPs can occur when a network link continues to deliver accurate LSPs even though there is a link causing data corruption. This process could cause disruption to your system operation.

ip router isis

Configure IS-IS routing processes on an interface and attach an area tag name to the routing process.

Syntax `ip router isis [tag]`

To disable IS-IS on an interface, use the `no ip router isis [tag]` command.

Parameters **tag** (OPTIONAL) The tag you specify identifies a specific area routing process. If you do not specify a tag, a null tag is assigned.

Defaults No processes are configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Introduced.

Usage Information

To assign a network entity title to enable IS-IS, use the `net` command.

This command accepts even if an IP address is not configured. This command is cached in the L3 Manager till the IP address is configured. When the IP address configuration reaches the L3Manager, the circuit add message is sent to IS-IS.

 **NOTE:** IP address is not mandatory for forming IS-IS adjacency.

Related Commands

- `net` — configure an IS-IS network entity title (NET) for the routing process.
- `router isis` — enable the IS-IS routing protocol.

ipv6 router isis

Enable the IPv6 IS-IS routing protocol and specify an IPv6 IS-IS process.

Syntax

```
ipv6 router isis [tag]
```

To disable IS-IS routing, use the `no router isis [tag]` command.

Parameters

tag (OPTIONAL) This parameter is a unique name for a routing process. A null tag is assumed if the tag option is not specified. The tag name must be unique for all IP router processes for a given router.

Defaults

Not configured.

Command Modes

ROUTER ISIS

Command History

s

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Introduced on the E-Series.

Usage Information

Configure a network entity title (the `net` command) to specify the area address and the router system ID.

To establish adjacencies and establish dynamic routing, enable routing on one or more interfaces.

You can configure only one IS-IS routing process to perform Level 2 routing. A `level-1-2` designation performs Level 1 and Level 2 routing at the same time.

Related Commands

- [net](#) — configure an IS-IS network entity title (NET) for the routing process.
- [is-type](#) — assign a type for a given area.

isis circuit-type

Configure the adjacency type on interfaces.

Syntax

```
isis circuit-type {level-1 | level-1-2 | level-2-only}
```

To return to the default values, use the `no isis circuit-type` command.

Parameters

level-1	You can form a Level 1 adjacency if there is at least one common area address between this system and neighbors. You cannot form Level 2 adjacencies on this interface.
level-1-2	You can form a Level 1 and Level 2 adjacencies when the neighbor is also configured as Level-1-2 and there is at least one common area, if not, a Level 2 adjacency is established. This setting is the default.
level-2-only	You can form a Level 2 adjacencies when other Level 2 or Level 1-2 routers and their interfaces are configured for Level 1-2 or Level 2. Level 1 adjacencies cannot be established on this interface.

Defaults

level-1-2

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Because the default establishes Level 1 and Level 2 adjacencies, you do not need to configure this command. Routers in an IS-IS system must be configured as a Level 1-only, Level 1-2, or Level 2-only system.

Only configure interfaces as Level 1 or Level 2 on routers that are between areas (for example, a Level 1-2 router) to prevent the software from sending unused hello packets and wasting bandwidth.

isis csnp-interval

Configure the IS-IS complete sequence number PDU (CSNP) interval on an interface.

Syntax

```
isis csnp-interval seconds [level-1 | level-2]
```

To return to the default values, use the `no isis csnp-interval [seconds] [level-1 | level-2]` command.

Parameters

seconds	Interval of transmission time between CSNPs on multi-access networks for the designated intermediate system. The range is from 0 to 65535. The default is 10 .
level-1	(OPTIONAL) Independently configures the interval of time between transmission of CSNPs for Level 1.
level-2	(OPTIONAL) Independently configures the interval of time between transmission of CSNPs for Level 2.

Defaults

seconds = **10**; **level-1** (if not otherwise specified)

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

The default values of this command are typically satisfactory transmission times for a specific interface on a designated intermediate system. To maintain database synchronization, the designated routers send CSNPs.

You can configure Level 1 and Level 2 CSNP intervals independently.

isis hello-interval

Specify the length of time between hello packets sent.

Syntax

```
isis hello-interval seconds [level-1 | level-2]
```

To return to the default values, use the `no isis hello-interval [seconds] [level-1 | level-2]` command.

Parameters

seconds	Allows you to set the length of time between hello packet transmissions. The range is from 1 to 65535. The default is 10 .
level-1	(OPTIONAL) Select this value to configure the hello interval for Level 1. This value is the default.
level-2	(OPTIONAL) Select this value to configure the hello interval for Level 2.

Defaults

seconds = **10**; **level-1** (if not otherwise specified)

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Hello packets are held for a length of three times the value of the hello interval. To conserve bandwidth and CPU usage, use a high hello interval seconds. Use a low hello interval seconds for faster convergence (but uses more bandwidth and CPU resources).

Related Commands

- [isis hello-multiplier](#) — specify the number of IS-IS hello packets a neighbor must miss before the router declares the adjacency as down.

isis hello-multiplier

Specify the number of IS-IS hello packets a neighbor must miss before the router declares the adjacency down.

Syntax

```
isis hello-multiplier multiplier [level-1 | level-2]
```

To return to the default values, use the `no isis hello-multiplier [multiplier] [level-1 | level-2]` command.

Parameters

multiplier	Specifies an integer that sets the multiplier for the hello holding time. Never configure a hello-multiplier lower than the default (3). The range is from 3 to 1000. The default is 3 .
level-1	(OPTIONAL) Select this value to configure the hello multiplier independently for Level 1 adjacencies. This value is the default.
level-2	(OPTIONAL) Select this value to configure the hello multiplier independently for Level 2 adjacencies.

Defaults multiplier = **3**; **level-1** (if not otherwise specified)

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

The holdtime (the product of the hello-multiplier multiplied by the hello-interval) determines how long a neighbor waits for a hello packet before declaring the neighbor is down so routes can be recalculated.

Related Commands

- [isis hello-interval](#) — specify the length of time between hello packets.

isis hello padding

Turn ON or OFF padding of hello PDUs from INTERFACE mode.

Syntax

```
isis hello padding
```

To return to the default, use the `no isis hello padding` command.

Defaults

Padding of hello PDUs is enabled (ON).

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Hello PDUs are "padded" only when both the global and interface padding options are ON. Turning either one OFF disables padding for the corresponding interface.

Related Commands

- [hello padding](#) — turn ON or OFF padding for LAN and point-to-point hello PDUs.

isis ipv6 metric

Assign metric to an interface for use with IPv6 information.

Syntax

```
isis ipv6 metric default-metric [level-1 | level-2]
```

To return to the default values, use the `no ipv6 isis metric [default-metric] [level-1 | level-2]` command.

Parameters

<i>default-metric</i>	Metric assigned to the link and used to calculate the cost from each other router via the links in the network to other destinations. You can configure this metric for Level 1 or Level 2 routing. The range is from 0 to 16777215. The default is 10 .
level-1	(OPTIONAL) Enter the keywords <code>level-1</code> to configure the shortest path first (SPF) calculation for Level 1 (intra-area) routing. This value is the default.
level-2	(OPTIONAL) Enter the keywords <code>level-2</code> to configure the SPF calculation for Level 2 (inter-area) routing.

Defaults

`default-metric` = **10**; **level-1** (if not otherwise specified)

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking recommends configuring metrics on all interfaces. Without configuring this command, the IS-IS metrics are similar to hop-count metrics.

isis metric

Assign a metric to an interface.

Syntax

```
isis metric default-metric [level-1 | level-2]
```

To return to the default values, use the `no isis metric [default-metric] [level-1 | level-2]` command.

Parameters

default-metric Metric assigned to the link and used to calculate the cost from each other router via the links in the network to other destinations. You can configure this metric for Level 1 or Level 2 routing. The range is from 0 to 16777215 irrespective of the metric style. The default is **10**.

If metric value is configured to more than 63, system throughs the following warning:Warning: for metrics greater than 63, 'metric-style wide' should be configured on level-1-2, or it will be capped at 63.

If the metric style is WIDE, the metric values that are greater than 63 are only effective.

level-1 (OPTIONAL) Enter the keywords `level-1` to configure the shortest path first (SPF) calculation for Level 1 (intra-area) routing. This setting is the default.

level-2 (OPTIONAL) Enter the keywords `level-2` to configure the SPF calculation for Level 2 (inter-area) routing.

Defaults

default-metric = **10**; level-1 (if not otherwise specified)

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Dell EMC Networking recommends configuring metrics on all interfaces. Without configuring this command, the IS-IS metrics are similar to hop-count metrics.

isis network point-to-point

Enable the software to treat a broadcast interface as a point-to-point interface.

Syntax

`isis network point-to-point`

To disable the feature, use the `no isis network point-to-point` command.

Defaults

Not enabled.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

isis password

Configure an authentication password for an interface.

Syntax `isis password [hmac-md5] password [level-1 | level-2]`
To delete a password, use the `no isis password [password] [level-1 | level-2]` command.

Parameters

<i>encryption-type</i>	(OPTIONAL) Enter 7 to encrypt the password using DES.
<i>hmac-md5</i>	(OPTIONAL) Enter the keywords <code>hmac-md5</code> to encrypt the password using MD5.
<i>password</i>	Assign the interface authentication password.
<i>level-1</i>	(OPTIONAL) Independently configures the authentication password for Level 1. The router acts as a station router for Level 1 routing. This setting is the default.
<i>level-2</i>	(OPTIONAL) Independently configures the authentication password for Level 2. The router acts as an area router for Level 2 routing.

Defaults No default password. **level-1** (if not otherwise specified).

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

To protect your network from unauthorized access, use this command to prevent unauthorized routers from forming adjacencies.

You can assign different passwords for different routing levels by using the keywords `level-1` and `level-2`.

The `no` form of this command disables the password for Level 1 or Level 2 routing, using the respective keywords `level-1` or `level-2`.

This password provides limited security as it is processed as plain text.

isis priority

Set the priority of the designated router you select.

Syntax	<code>isis priority value [level-1 level-2]</code> To return to the default values, use the <code>no isis priority [value] [level-1 level-2]</code> command.
Parameters	<p>value This value sets the router priority. The higher the value, the higher the priority. The range is from 0 to 127. The default is 64.</p> <p>level-1 (OPTIONAL) Specify the priority for Level 1. This setting is the default.</p> <p>level-2 (OPTIONAL) Specify the priority for Level 2.</p>
Defaults	value = 64 ; level-1 (if not otherwise specified).
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information You can configure priorities independently for Level 1 and Level 2. Priorities determine which router on a LAN is the designated router. Priorities are advertised within hellos. The router with the highest priority becomes the designated intermediate system (DIS).

 **NOTE:** Routers with a priority of 0 cannot be a designated router.

Setting the priority to 0 lowers the chance of this system becoming the DIS, but does not prevent it. If all the routers have priority 0, one with highest MAC address becomes DIS even though its priority is 0.

is-type

Configure IS-IS operating level for a router.

Syntax	<code>is-type {level-1 level-1-2 level-2-only}</code> To return to the default values, use the <code>no is-type</code> command.
Parameters	<p>level-1 Allows a router to act as a Level 1 router.</p>

level-1-2	Allows a router to act as both a Level 1 and Level 2 router. This setting is the default.
level-2-only	Allows a router to act as a Level 2 router.

Defaults

level-1-2

Command Modes ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

The IS-IS protocol automatically determines area boundaries and are able to keep Level 1 and Level 2 routing separate. Poorly planned use of this feature may cause configuration errors, such as accidental area partitioning.

If you are configuring only one area in your network, you do not need to run both Level 1 and Level 2 routing algorithms. You can configure the IS type as Level 1.

log-adjacency-changes

Generate a log messages for adjacency state changes.

Syntax

`log-adjacency-changes`

To disable this function, use the `no log-adjacency-changes` command.

Defaults

Adjacency changes are not logged.

Command Modes ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

This command allows you to monitor adjacency state changes, which are useful when you monitor large networks. Messages are logged in the system's error message facility.

lsp-gen-interval

Set the minimum interval between successive generations of link-state packets (LSPs).

Syntax

```
lsp-gen-interval [level-1 | level-2] interval seconds
[initial_wait_interval seconds [second_wait_interval seconds]]
```

To restore default values, use the `no lsp-gen-interval [level-1 | level-2] interval seconds [initial_wait_interval seconds [second_wait_interval seconds]]` command.

Parameters

- level-1** (OPTIONAL) Enter the keywords `level-1` to apply the configuration to generation of Level-1 LSPs.
- level-2** (OPTIONAL) Enter the keywords `level-2` to apply the configuration to generation of Level-2 LSPs.
- interval seconds** Enter the maximum number of seconds between LSP generations. The range is from 0 to 120 seconds. The default is **5 seconds**.
- initial_wait_interval seconds** (OPTIONAL) Enter the initial wait time, in seconds, before running the first LSP generation. The range is from 0 to 120 seconds. The default is **1 second**.
- second_wait_interval seconds** (OPTIONAL) Enter the wait interval, in seconds, between the first and second LSP generation. The range is from 0 to 120 seconds. The default is **5 seconds**.

Defaults

See *Parameters*.

Command Modes

ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added support for LSP Throttling Enhancement.

Usage Information

LSP throttling slows down the frequency at which LSPs are generated during network instability. Even though throttling LSP generations slows down network convergence, no throttling can result in a network not functioning as expected. If network topology is unstable, throttling slows down the scheduling of LSP generations until the topology regains its stability.

The first generation is controlled by the initial wait interval and the second generation is controlled by the second wait interval. Each subsequent wait interval is twice as long as the previous one until the wait interval reaches the maximum wait time specified (`interval seconds`). After the network calms down and there are no triggers for two times the maximum interval, fast behavior is restored (the initial wait time).

lsp-mtu

Set the maximum transmission unit (MTU) of IS-IS link-state packets (LSPs). This command only limits the size of LSPs this router generates.

Syntax `lsp-mtu size`

To return to the default values, use the `no lsp-mtu` command.

Parameters **size** The maximum LSP size, in bytes. The range is from 512 to 16000 for Non-Jumbo mode and from 128 to 9195 for Jumbo mode. The default is **1497**.

 **NOTE:** The appropriate interface circuit is brought down and removed.

Defaults **1497** bytes.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added support for LSP Throttling Enhancement.

Usage Information

The link MTU and the LSP MTU size must be the same.

Because each device can generate a maximum of 255 LSPs, consider carefully whether you use the `lsp-mtu` command.

lsp-refresh-interval

Set the link state PDU (LSP) refresh interval. LSPs must be refreshed before they expire. When the LSPs are not refreshed after a refresh interval, they are kept in a database until their `max-lsp-lifetime` reaches zero and then LSPs is purged.

Syntax `lsp-refresh-interval seconds`

To restore the default refresh interval, use the `no lsp-refresh-interval` command.

Parameters **seconds** The LSP refresh interval, in seconds. This value must be 300 seconds less than the value specified in the `max-lsp-lifetime` command. The range is from 1 to 65535 seconds. The default is **900**.

Defaults **900** seconds

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added support for LSP Throttling Enhancement.

Usage Information

The refresh interval determines the rate at which route topology information is transmitted preventing the information from becoming obsolete.

The refresh interval must be less than the LSP lifetime specified with the `max-lsp-lifetime` command. A low value reduces the amount of time that undetected link state database corruption can

persist at the cost of increased link utilization. A higher value reduces the link utilization the flooding of refreshed packets causes.

Related Commands

- [max-lsp-lifetime](#) — set the maximum interval that LSPs persist without being refreshed.

max-area-addresses

Configure manual area addresses.

Syntax

`max-area-addresses number`

To return to the default values, use the `no max-area-addresses` command.

Parameters

number

Set the maximum number of manual area addresses. The range is from 3 to 6. The default is **3**.

Defaults

3 addresses

Command Modes

ROUTER ISIS

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.5.1.0	Added support for LSP Throttling Enhancement.

Usage Information

To configure the number of area addresses on router, use this command. This value must be consistent with routers in the same area, otherwise the router forms only Level 2 adjacencies. The value must be same among all the routers to form Level 1 adjacencies.

max-lsp-lifetime

Set the maximum time that link-state packets (LSPs) exist without being refreshed.

Syntax

`max-lsp-lifetime seconds`

To restore the default time, use the `no max-lsp-lifetime` command.

Parameters *seconds* The maximum lifetime of LSP in seconds. This value must be greater than the `lsp-refresh-interval` command. The higher the value the longer the LSPs are kept. The range is from 1 to 65535. The default is **1200**.

Defaults **1200** seconds

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information Change the maximum LSP lifetime with this command. The maximum LSP lifetime must always be greater than the LSP refresh interval.

The `seconds` parameter enables the router to keep LSPs for the specified length of time. If the value is higher, the overhead is reduced on slower-speed links.

Related Commands • [lsp-refresh-interval](#) — set the link-state packet (LSP) refresh interval.

maximum-paths

Allows you to configure the maximum number of equal cost paths allowed in a routing table.

 **NOTE:** Enables you to configure a single system wide value that is common for both IPv4 and IPv6 addresses.

Syntax `maximum-paths number`

To return to the default values, use the `no maximum-paths` command.

Parameters *number* Enter a number as the maximum number of parallel paths an IP routing installs in a routing table. The range is from 1 to 64. The default is **4**.

Defaults **4**

Command Modes • ROUTER ISIS (*for IPv4*)
• CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Added support for multi-topology ISIS.
6.3.1.0	Introduced.

metric-style

To generate and accept old-style, new-style, or both styles of type, length, and values (TLV), configure a router.

Syntax `metric-style {narrow [transition] | transition | wide [transition]} [level-1 | level-2]`

To return to the default values, use the `no metric-style {narrow [transition] | transition | wide [transition]} [level-1 | level-2]` command.

Parameters		
narrow		Allows you to generate and accept old-style TLVs. The metric range is from 0 to 63.
transition		Allows you to generate both old-style and new-style TLVs. The metric range is from 0 to 63.
wide		Allows you to generate and accept only new-style TLVs. The metric range is from 0 to 16777215.
level-1		Enables the metric style on Level 1.
level-2		Enables the metric style on Level 2.

Defaults **narrow**; if no Level is specified, Level-1 and Level-2 are configured.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Usage Information

If you enter the `metric-style wide` command, the Dell EMC Networking OS generates and accepts only new-style TLVs. The router uses less memory and other resources rather than generating both old-style and new-style TLVs.

The new-style TLVs have wider metric fields than old-style TLVs.

When wide transition is configured, narrow metric is sent for the narrow metric TLV and the actual wide metric is sent in wide metric TLV. The receiver can choose to use the metric that it requires.

Related Commands

- [isis metric](#) — configure a metric for an interface.

multi-topology

Enables multi-topology IS-IS. It also allows enabling/disabling of old and new style TLVs for IP prefix information in the LSPs.

Syntax `multi-topology [transition]`

To return to a single topology configuration, use the `no multi-topology [transition]` command.

Parameters `transition`

Defaults Disabled

Command Modes CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.8.1.0	Introduced.

net

To configure an IS-IS network entity title (NET) for a routing process, use this mandatory command. If you did not configure a NET, the IS-IS process does not start.

Syntax `net network-entity-title`

To remove a net, use the `no net network-entity-title` command.

Parameters **network-entity-title** Specify the area address and system ID for an IS-IS routing process. The first 1 to 13 bytes identify the area address. The next 6 bytes identify the system ID. The last 1 byte is the selector byte, always identified as zero zero (00). This argument can be applied to an address or a name.

Defaults Not configured.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

passive-interface

Suppress routing updates on an interface. This command stops the router from sending updates on that interface.

Syntax `passive-interface interface`

To delete a passive interface configuration, use the `no passive-interface interface` command.

Parameters **interface** Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes ROUTER ISIS

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information Although the passive interface does not send nor receive routing updates, the network on that interface is still included in the IS-IS updates sent using other interfaces.

redistribute

Redistribute routes from one routing domain to another routing domain.

Syntax `redistribute {static | connected | rip} [level-1 | level-1-2 | level-2] [metric metric-value] [metric-type {external | internal}] [route-map map-name]`

To end redistribution or disable any of the specified keywords, use the `no redistribute {static | connected | rip} [metric metric-value] [metric-type {external | internal}] [level-1 | level-1-2 | level-2] [route-map map-name]` command.

Parameters

- connected** Enter the keyword `connected` to redistribute active routes into IS-IS.
- rip** Enter the keyword `rip` to redistribute RIP routes into IS-IS.
- static** Enter the keyword `static` to redistribute user-configured routes into IS-IS.

metric <i>metric-value</i>	(OPTIONAL) Assign a value to the redistributed route. The range is from 0 to 16777215. The default is 0 . Use a value that is consistent with the destination protocol.
metric-type {external internal}	(OPTIONAL) The external link type associated with the default route advertised into a routing domain. Specify one of the following: <ul style="list-style-type: none"> • external • internal
level-1	(OPTIONAL) Routes are independently redistributed into IS-IS as Level 1 routes.
level-1-2	(OPTIONAL) Routes are independently redistributed into IS-IS as Level-1-2 routes.
level-2	(OPTIONAL) Routes are independently redistributed into IS-IS as Level 2 routes. This setting is the default.
route-map <i>map-name</i>	(OPTIONAL) If you do not enter the route-map argument, all routes are redistributed. If a map-name value is not specified, no routes are imported.

Defaults

- metric metric-value = **0**
- metric-type= internal; **level-2**

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Added support for IPv6 ISIS.
6.3.1.0	Introduced.

Usage Information

To redistribute a default route (0.0.0.0/0), configure the `default-information originate` command.

Changing or disabling a keyword in this command does not affect the state of the other command keywords.

When an LSP with an internal metric is received, the Dell EMC Networking OS considers the route cost while considering the advertised cost to reach the destination.

Redistributed routing information is filtered with the `distribute-list out` command to ensure that the routes are properly passed to the receiving routing protocol.

How a metric value assigned to a redistributed route is advertised depends on how on the configuration of the `metric-style` command. If the `metric-style` command is set for Narrow or Transition mode and the metric value in the `redistribute` command is set to a number higher than 63, the metric value advertised in LSPs is 63. If the `metric-style` command is set for Wide mode, the metric value in the `redistribute` command is advertised.

Related Commands

- [default-information originate](#) — generate a default route for the IS-IS domain.
- [distribute-list out](#) — suppress networks from being advertised in updates. This command filters redistributed routing information.

redistribute bgp

Redistribute routing information from a BGP process.

Syntax

```
redistribute bgp AS number [level-1 | level-1-2 | level-2] [metric metric-value] [metric-type {external | internal}] [route-map map-name]
```

To return to the default values, use the `no redistribute bgp` command with the appropriate parameters.

Parameters

AS number	Enter a number that corresponds to the autonomous system number. The range is from 1 to 65355.
level-1	(OPTIONAL) Routes are independently redistributed into IS-IS Level 1 routes only.
level-1-2	(OPTIONAL) Routes are independently redistributed into IS-IS Level 1 and Level 2 routes.
level-2	(OPTIONAL) Routes are independently redistributed into IS-IS as Level 2 routes only. This setting is the default.
metric metric-value	(OPTIONAL) The value used for the redistributed route. Use a metric value that is consistent with the destination protocol. The range is from 0 to 16777215. The default is 0 .
metric-type {external internal}	(OPTIONAL) The external link type associated with the default route advertised into a routing domain. The two options are: <ul style="list-style-type: none"> • external • internal
route-map map-name	<code>map-name</code> is an identifier for a configured route map. The route map filters imported routes from the source routing protocol to the current routing protocol. If you do not specify a map-name, all routes are redistributed. If you specify a keyword, but fail to list route map tags, no routes are imported.

Defaults

IS-IS Level 2 routes only

Command Modes

- ROUTER ISIS (*for IPv4*)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Added support for IPv6 ISIS.
6.3.1.0	Introduced.

Usage Information

BGP to IS-IS redistribution supports “match” options using route maps. You can set the metric value, level, and metric-type of redistributed routes by the redistribution command. You can “set” more advanced options using route maps.

Example

```
DelleMC(conf)# router is
DelleMC(conf-router_isis)# redistribute bgp 1 level-1 metric 32 metric-
type
external route-map rmap-isis-to-bgp
DelleMC(conf-router_bgp)#show running-config isis
!
router isis
redistribute bgp 1 level-1 metric 32 metric-type external route-map
rmap-isis-to-bgp
```

redistribute ospf

Redistribute routing information from an OSPF process.

Syntax

```
redistribute ospf process-id [level-1 | level-1-2 | level-2] [match
{internal | external}] [metric metric-value] [metric-type {external |
internal}] [route-map map-name]
```

To return to the default values, use the `no redistribute ospf process-id [level-1 | level-1-2 | level-2] [match {internal | external}] [metric metric-value] [metric-type {external | internal}] [route-map map-name]` command.

Parameters

<i>process-id</i>	Enter a number that corresponds to the OSPF process ID to be redistributed. The range is from 1 to 65355.
<i>metric metric-value</i>	(OPTIONAL) The value used for the redistributed route. Use a metric value that is consistent with the destination protocol. The range is from 0 to 16777215. The default is 0 .
<i>metric-type</i> {<i>external</i> <i>internal</i>}	(OPTIONAL) The external link type associated with the default route advertised into a routing domain. The two options are: <ul style="list-style-type: none"> external internal
<i>level-1</i>	(OPTIONAL) Routes are independently redistributed into IS-IS as Level 1 routes.
<i>level-1-2</i>	(OPTIONAL) Routes are independently redistributed into IS-IS as Level-1-2 routes.
<i>level-2</i>	(OPTIONAL) Routes are independently redistributed into IS-IS as Level 2 routes. This setting is the default.
<i>match</i> {<i>external</i> <i>internal</i>}	(OPTIONAL) The command used for OSPF to route and redistribute into other routing domains. The values are

- `internal`
- `external`

route-map *map-name* `map-name` is an identifier for a configured route map. The route map should filter imported routes from the source routing protocol to the current routing protocol.

If you do not specify a `map-name`, all routes are redistributed. If you specify a keyword, but fail to list route map tags, no routes are imported.

Defaults See *Parameters*.

- Command Modes**
- `ROUTER ISIS` (*for IPv4*)
 - `CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6` (*for IPv6*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.5.1.0	Added support for IPv6 ISIS.
6.3.1.0	Introduced.

Usage Information How a metric value assigned to a redistributed route is advertised depends on how on the configuration of the `metric-style` command. If the `metric-style` command is set for Narrow mode and the metric value in the `redistribute ospf` command is set to a number higher than 63, the metric value advertised in LSPs is 63. If the `metric-style` command is set for wide mode, the metric value in the `redistribute ospf` command is advertised.

router isis

Allows you to enable the IS-IS routing protocol and to specify an IP IS-IS process.

Syntax `router isis [vrf vrf-name] [tag]`

To disable IS-IS routing, use the `no router isis [tag]` command.

Parameters

vrf *vrf-name* Enter the keyword `vrf` followed by the name of the VRF to enable the IS-IS routing protocol and to specify an IP IS-IS process on that VRF.

tag (OPTIONAL) This is a unique name for a routing process. A null tag is assumed if the `tag` option is not specified. The tag name must be unique for all IP router processes for a given router.

Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information	<p>Configure a network entity title (the <code>net</code> command) to specify the area address and the router system ID.</p> <p>Enable routing on one or more interfaces to establish adjacencies and establish dynamic routing.</p> <p>You can configure only one IS-IS routing process to perform Level 2 routing. A <code>level-1-2</code> designation performs Level 1 and Level 2 routing at the same time.</p>
--------------------------	--

Related Commands	<ul style="list-style-type: none"> • ip router isis — configure IS-IS routing processes for IP on interfaces and attaches an area designator to the routing process. • net — configure an IS-IS network entity title (NET) for a routing process. • is-type — assign a type for a given area.
-------------------------	--

set-overload-bit

To set the overload bit in zeroth fragment of non-pseudonode LSPs on the router, configure the router. This setting prevents other routers from using it as an intermediate hop in their shortest path first (SPF) calculations.

Syntax	<pre>set-overload-bit</pre> <p>To return to the default values, use the <code>no set-overload-bit</code> command.</p>
---------------	---

Defaults	Not set.
-----------------	----------

Command Modes	<ul style="list-style-type: none"> • ROUTER ISIS (<i>for IPv4</i>) • CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (<i>for IPv6</i>)
----------------------	--

Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .
------------------------	---

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
7.8.1.0	Added support for multi-topology ISIS.
6.3.1.0	Introduced.

Usage Information

Set the overload bit when a router experiences problems, such as a memory shortage due to an incomplete link state database which can result in an incomplete or inaccurate routing table. If you set the overload bit in its LSPs, other routers ignore the unreliable router in their SPF calculations until the router has recovered.

 **NOTE:** Enables you to configure a single system wide value that is common for both IPv4 and IPv6 address.

show config

Display the changes you made to the IS-IS configuration. Default values are not shown.

Syntax `show config`

- Command Modes**
- ROUTER ISIS (*for IPv4*)
 - CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (*for IPv6*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.1	Introduced on the S4810.

Example (Router-Isis) The bold section identifies that Multi-Topology IS-IS is enabled in Transition mode.

```
DellEMC(conf-router_isis)# show config
!
router isis
  clns host ISIS 49.0000.0001.F100.E120.0013.00
  log-adjacency-changes
  net 49.0000.0001.F100.E120.0013.00
!
  address-family ipv6 unicast
  maximum-paths 16
  multi-topology transition
  set-overload-bit
  spf-interval level-1 100 15 20
  spf-interval level-2 120 20 25
  exit-address-family
```

Example (Address-Family_IPv6) The bold section identifies that Multi-Topology IS-IS is enabled in Transition mode.

```
DellEMC(conf-router_isis-af_ipv6)# show conf
!
address-family ipv6 unicast
  maximum-paths 16
  multi-topology transition
  set-overload-bit
  spf-interval level-1 100 15 20
  spf-interval level-2 120 20 25
  exit-address-family
```

show isis database

Display the IS-IS link state database.

S5000

Syntax `show isis [vrf vrf-name] database [level-1 | level-2] [local] [detail | summary] [system-id] [lspid]`

Parameters	
vrf <i>vrf-name</i>	(Optional) Enter the keyword vrf followed by the name of the VRF to display IS-IS link state database corresponding to that VRF. i NOTE: If you do not specify this option, the IS-IS link state database corresponding to the default VRF are displayed.
level-1	(OPTIONAL) Displays the Level 1 IS-IS link-state database.
level-2	(OPTIONAL) Displays the Level 2 IS-IS link-state database.
local	(OPTIONAL) Displays local link-state database information.
detail	(OPTIONAL) Displays the detailed link-state database information of each LSP when specified. If not specified, a summary displays.
summary	(OPTIONAL) Displays the summary of link-state database information when specified.
<i>lspid</i>	(OPTIONAL) Display only the specified LSP.
<i>system-id</i>	(OPTIONAL) Displays the link-state database for system-id.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added supported for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.1	Introduced on the S4810.

Usage Information

The following describes the `show isis database` command shown in the following example.

Field	Description
IS-IS Level-1/ Level-2 Link State Database	Displays the IS-IS link state database for Level 1 or Level 2.
LSPID	<p>Displays the LSP identifier.</p> <p>The first six octets are the System ID of the originating router.</p> <p>The first six octets are the System ID of the originating router. The next octet is the pseudonode ID. If this byte is not zero, the LSP describes system links. If this byte is zero (0), the LSP describes the state of the originating router.</p> <p>The designated router for a LAN creates and floods a pseudonode LSP and describes the attached systems.</p> <p>The last octet is the LSP number. An LSP is divided into multiple LSP fragments if there is more data than cannot fit in a single LSP. Each fragment has a unique LSP number.</p> <p>An * after the LSPID indicates that the system originates an LSP where this command was issued.</p>
LSP Seq Num	This value is the sequence number for the LSP that allows other systems to determine if they have received the latest information from the source.
LSP Checksum	This is the checksum of the entire LSP packet.
LSP Holdtime	This value is the amount of time, in seconds, that the LSP remains valid. A zero holdtime indicates that this is a purged LSP and is being removed from the link state database. A value between brackets indicates the duration that the purged LSP stays in the database before being removed.
ATT	This value represents the Attach bit. This value indicates that the router is a Level 1-2 router and can reach other areas. Level 1-only routers and Level 1-2 routers that have lost connection to other Level 1-2 routers use the Attach bit to find the closest Level 1-2 router. They install a default route to the closest Level 1-2 router.

Field	Description
P	This value represents the P bit. This bit is always set to zero as Dell EMC Networking does not support area partition repair.
OL	This value represents the overload bit, determining congestion. If the overload bit is set, other routers do not use this system as a transit router when calculating routes.

Example

The bold sections identify that MultiTopology IS-IS is enabled.

```
DelleMC# show isis database

IS-IS Level-1 Link State Database
LSPID      LSP Seq Num LSP Checksum LSP Holdtime ATT/P/OL
ISIS.00-00 * 0x00000006 0xCF43      580          0/0/0

IS-IS Level-2 Link State Database
LSPID      LSP Seq Num LSP Checksum LSP Holdtime ATT/P/OL
ISIS.00-00 * 0x00000006 0xCF43      580          0/0/0
!
DelleMC# show isis database detail ISIS.00-00

IS-IS Level-1 Link State Database
LSPID      LSP Seq Num LSP Checksum LSP Holdtime ATT/P/OL
ISIS.00-00 * 0x0000002B 0x853B      1075         0/0/0
Area Address: 49.0000.0001
NLPID: 0xCC 0x8E
IP Address: 10.1.1.1
IPv6 Address: 1011::1
Topology: IPv4 (0x00) IPv6 (0x8002)
Metric: 10 IS OSPF.00
Metric: 10 IS (MT-IPv6) OSPF.00
Metric: 10 IP 15.1.1.0 255.255.255.0
Metric: 10 IPv6 (MT-IPv6) 1511::/64
Metric: 10 IPv6 (MT-IPv6) 2511::/64
Metric: 10 IPv6 (MT-IPv6) 1011::/64
Metric: 10 IPv6 1511::/64
Metric: 10 IP 10.1.1.0 255.255.255.0
Hostname: ISIS

IS-IS Level-2 Link State Database
LSPID      LSP Seq Num LSP Checksum LSP Holdtime ATT/P/OL
ISIS.00-00 * 0x0000002D 0xB2CD      1075         0/0/0
Area Address: 49.0000.0001
NLPID: 0xCC 0x8E
IP Address: 10.1.1.1
IPv6 Address: 1011::1
Topology: IPv4 (0x00) IPv6 (0x8002)
Metric: 10 IS OSPF.00
Metric: 10 IS (MT-IPv6) OSPF.00
Metric: 10 IP 10.1.1.0 255.255.255.0
Metric: 10 IP 15.1.1.0 255.255.255.0
Metric: 20 IP 10.3.3.0 255.255.255.0
Metric: 10 IPv6 (MT-IPv6) 1011::/64
Metric: 10 IPv6 (MT-IPv6) 1511::/64
Metric: 10 IPv6 (MT-IPv6) 2511::/64
Metric: 20 IPv6 (MT-IPv6) 1033::/64
Metric: 10 IPv6 2511::/64
Metric: 20 IPv6 1033::/64
Hostname: ISIS

DelleMC# show isis database detail
IS-IS Level-1 Link State Database
LSPID      LSP Seq Num LSP Checksum LSP Holdtime
ATT/P/OL
FTOS.00-00 * 0x00000009 0x79D8      941          1/0/0
NLPID:      0xCC
Area Address: 49.0000.0001
```

show isis graceful-restart detail

Display detailed IS-IS graceful restart related settings.

S5000

Syntax `show isis [vrf vrf-name] graceful-restart detail`

- Command Modes**
- EXEC
 - EXEC Privilege

Parameters **vrf vrf-name** (Optional) Enter the keyword vrf followed by the name if the VRF to display IS-IS graceful restart details corresponding to that VRF.

 **NOTE:** If you do not specify this option, the IS-IS graceful restart details corresponding to the default VRF are displayed.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Introduced on the E-Series.

Example

```
DelleMC# show isis graceful-restart detail
Configured Timer Value
=====
Graceful Restart      : Enabled
T3 Timer              : Manual
T3 Timeout Value     : 30
T2 Timeout Value     : 30 (level-1), 30 (level-2)
T1 Timeout Value     : 5, retry count: 1
Adjacency wait time  : 30

Operational Timer Value
=====
Current Mode/State   : Normal/RUNNING
T3 Time left         : 0
T2 Time left         : 0 (level-1), 0 (level-2)
Restart ACK rcv count : 0 (level-1), 0 (level-2)
Restart Req rcv count : 0 (level-1), 0 (level-2)
Suppress Adj rcv count : 0 (level-1), 0 (level-2)
```

```
Restart CSNP rcv count : 0 (level-1), 0 (level-2)
Database Sync count    : 0 (level-1), 0 (level-2)
```

show isis hostname

Display IS-IS host names configured or learned on the switch.

S5000

Syntax `show isis [vrf vrf-name] hostname`

Parameters `vrf vrf-name` Enter the keyword vrf followed by the name of the VRF to display IS-IS host names corresponding to that VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Example

```
DellEMC# show isis hostname
System Id      Dynamic Name  Static Name
*F100.E120.0013 Force10      ISIS
DellEMC#
```

show isis interface

Display detailed IS-IS interface status and configuration information.

S5000

Syntax `show isis [vrf vrf-name] interface [interface]`

Parameters

- vrf *vrf-name*** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to display IS-IS interface status information corresponding to that VRF.
- interface*** (OPTIONAL) Enter the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
DellEMC> show isis int
TenGigabitEthernet 1/7 is up, line protocol is up
  MTU 1497, Encapsulation SAP
  Routing Protocol: IS-IS
    Circuit Type: Level-1-2
    Interface Index 37847070, Local circuit ID 1
    Level-1 Metric: 10, Priority: 64, Circuit ID: systest-3.01
    Hello Interval: 10, Hello Multiplier: 3, CSNP Interval: 10
    Number of active level-1 adjacencies: 1
    Level-2 Metric: 10, Priority: 64, Circuit ID: systest-3.01
    Hello Interval: 10, Hello Multiplier: 3, CSNP Interval: 10
    Number of active level-2 adjacencies: 1
    Next IS-IS LAN Level-1 Hello in 2 seconds
    Next IS-IS LAN Level-2 Hello in 1 seconds
    LSP Interval: 33
TenGigabitEthernet 1/8 is up, line protocol is up
  MTU 1497, Encapsulation SAP
  Routing Protocol: IS-IS
    Circuit Type: Level-1-2
    Interface Index 38371358, Local circuit ID 2
    Level-1 Metric: 10, Priority: 64, Circuit ID: systest-3.02
    Hello Interval: 10, Hello Multiplier: 3, CSNP Interval: 10
```

```
Number of active level-1 adjacencies: 1
Level-2 Metric: 10, Priority: 64, Circuit ID: systest-3.02
Hello Interval: 10, Hello Multiplier: 3, CSNP Interval: 10
--More--
```

show isis neighbors

Display information about neighboring (adjacent) routers.

S5000

Syntax `show isis [vrf vrf-name] neighbors [level-1 | level-2] [detail] [interface]`

Parameters

- vrf *vrf-name*** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to display adjacent router information corresponding to that VRF.
- level-1** (OPTIONAL) Displays information about Level 1 IS-IS neighbors.
- level-2** (OPTIONAL) Displays information about Level 2 IS-IS neighbors.
- detail** (OPTIONAL) Displays detailed information about neighbors.
- interface*** (OPTIONAL) Enter the following keywords and the interface information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

Use this command to confirm that the neighbor adjacencies are operating correctly. If you suspect that they are not, you can verify the specified area addresses of the routers by using the `show isis neighbors` command.

The following describes the `show isis neighbors` command shown in the following example.

Field	Description
System Id	The value that identifies a system in an area.
Interface	The interface, slot, and port in which the router was discovered.
State	The value providing status about the adjacency state. The range is Up and Init.
Type	This value displays the adjacency type (Layer 2, Layer 2 or both).
Priority	IS-IS priority the neighbor advertises. The neighbor with highest priority becomes the designated router for the interface.
Uptime	Displays the interfaces uptime.
Circuit Id	The neighbor's interpretation of the designated router for the interface.

Example

The bold sections below identify that Multi-Topology IS-IS is enabled. This command displays only one IP address per line.

```
DellEMC# show isis neighbors
System Id Interface State Type Priority Uptime Circuit Id
TEST Te 7/1 Up L1L2(M) 127 09:28:01 TEST.02
!
DellEMC#show isis neighbors detail
System Id Interface State Type Priority Uptime Circuit Id
TEST Te 7/1 Up L1L2(M) 127 09:28:04 TEST.02 Area Address(es):
49.0000.0001
  IP Address(es): 25.1.1.3*
  MAC Address: 0000.0000.0000
  Hold Time: 28
  Link Local Address: fe80::201:e8ff:fe00:492c
Topology: IPv4 IPv6 , Common (IPv4 IPv6 )
Adjacency being used for MTs: IPv4 IPv6
DellEMC#
```

show isis protocol

Display IS-IS routing information.

S5000

Syntax `show isis [vrf vrf-name] protocol`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to display IS-IS routing information corresponding to that VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

The bold section identifies that Multi-Topology IS-IS is enabled.

```
DellEMC# show isis protocol
IS-IS Router: <Null Tag>
  System Id: F100.E120.0013 IS-Type: level-1-2
  Manual area address(es):
    49.0000.0001
  Routing for area address(es):
    49.0000.0001
  Interfaces supported by IS-IS:
    TenGigabitEthernet 1/1 - IP - IPv6
    TenGigabitEthernet 1/2 - IP - IPv6
    TenGigabitEthernet 1/10 - IP - IPv6
    Loopback 0 - IP - IPv6
  Redistributing:
  Distance: 115
  Generate narrow metrics: level-1-2
  Accept narrow metrics:   level-1-2
  Generate wide metrics:   none
  Accept wide metrics:     none
Multi Topology Routing is enabled in transition mode.
DellEMC#
```

show isis traffic

This command allows you to display IS-IS traffic interface information.

S5000

Syntax

```
show isis [vrf vrf-name] traffic [interface]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword *vrf* followed by the name of the VRF to display IS-IS traffic interface information corresponding to that VRF.
- interface** (OPTIONAL) Identifies the interface type and the interface following:
- For a 10-Gigabit Ethernet interface, enter the keyword *TenGigabitEthernet* then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword *fortyGigE* then the slot/port information.
 - For a port channel interface, enter the keywords *port-channel* then a number.

- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information

The following describes the `show isis traffic` command shown in the following example.

Item	Description
Level-1/Level-2 Hellos (sent/rcvd)	Displays the number of Hello packets sent and received.
PTP Hellos (sent/rcvd)	Displays the number of point-to-point Hellos sent and received.
Level-1/Level-2 LSPs sourced (new/refresh)	Displays the number of new and refreshed LSPs.
Level-1/Level-2 LSPs flooded (sent/rcvd)	Displays the number of flooded LSPs sent and received.
Level-1/Level-2 LSPs CSNPs (sent/rcvd)	Displays the number of CSNP LSPs sent and received.
Level-1/Level-2 LSPs PSNPs (sent/rcvd)	Displays the number of PSNP LSPs sent and received.
Level-1/Level-2 DR Elections	Displays the number of times designated router elections ran.
Level-1/Level-2 SPF Calculations	Displays the number of shortest path first calculations.
LSP checksum errors received	Displays the number of checksum errors LSPs received.

Item	Description
LSP authentication failures	Displays the number of LSP authentication failures.

Example

```
DelleMC# show is traffic
IS-IS: Level-1 Hellos (sent/rcvd) : 0/721
IS-IS: Level-2 Hellos (sent/rcvd) : 900/943
IS-IS: PTP Hellos (sent/rcvd) : 0/0
IS-IS: Level-1 LSPs sourced (new/refresh) : 0/0
IS-IS: Level-2 LSPs sourced (new/refresh) : 1/3
IS-IS: Level-1 LSPs flooded (sent/rcvd) : 0/0
IS-IS: Level-2 LSPs flooded (sent/rcvd) : 5934/5217
IS-IS: Level-1 LSPs CSNPs (sent/rcvd) : 0/0
IS-IS: Level-2 LSPs CSNPs (sent/rcvd) : 472/238
IS-IS: Level-1 LSPs PSNPs (sent/rcvd) : 0/0
IS-IS: Level-2 LSPs PSNPs (sent/rcvd) : 10/337
IS-IS: Level-1 DR Elections : 4
IS-IS: Level-2 DR Elections : 4
IS-IS: Level-1 SPF Calculations : 0
IS-IS: Level-2 SPF Calculations : 389
IS-IS: LSP checksum errors received : 0
IS-IS: LSP authentication failures : 0
DelleMC#
```

spf-interval

Specify the minimum interval between shortest path first (SPF) calculations.

Syntax `spf-interval [level-1 | level-2] interval seconds [initial_wait_interval seconds [second_wait_interval seconds]]`

To restore default values, use the `no spf-interval [level-1 | level-2] interval seconds [initial_wait_interval seconds [second_wait_interval seconds]]` command.

Parameters

level-1	(OPTIONAL) Enter the keyword <code>level-1</code> to apply the configuration to Level-1 SPF calculations.
level-2	(OPTIONAL) Enter the keyword <code>level-2</code> to apply the configuration to Level-2 SPF calculations.
interval seconds	Enter the maximum number of seconds between SPF calculations. The range is from 0 to 120 seconds. The default is 10 seconds .
initial_wait_interval seconds	(OPTIONAL) Enter the initial wait time, in seconds, before running the first SPF calculations. The range is from 0 to 120 seconds. The default is 5 seconds .
second_wait_interval seconds	(OPTIONAL) Enter the wait interval, in seconds, between the first and second SPF calculations. The range is from 0 to 120 seconds. The default is 5 seconds .

Defaults See *Parameters*.

Command Modes

- ROUTER ISIS (for IPv4)
- CONFIGURATION-ROUTER-ISIS-ADDRESS-FAMILY-IPV6 (for IPv6)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.8.1.0	Added support for multi-topology ISIS.
7.5.1.0	Added support for SPF Throttling Enhancement.

Usage Information

This command `spf-interval` in CONFIG-ROUTER-ISIS-AF-IPV6 mode is used for IPv6 Multi-Topology route computation only. If using Single Topology mode, use the `spf-interval` command in CONFIG-ROUTER-ISIS mode for both IPv4 and IPv6 route computations.

SPF throttling slows down the frequency at which route calculations are performed during network instability. Even though throttling route calculations slows down network convergence, not throttling can result in a network not functioning as expected. If network topology is unstable, throttling slows down the scheduling of route calculations until the topology regains its stability.

The first route calculation is controlled by the initial wait interval and the second calculation is controlled by the second wait interval. Each subsequent wait interval is twice as long as the previous one until the wait interval reaches the maximum wait time specified (`interval seconds`). After the network calms down and there are no triggers for two times the maximum interval, fast behavior is restored (the initial wait time).

Link Aggregation Control Protocol (LACP)

This section contains commands for Dell EMC Networks' implementation of the link aggregation control protocol (LACP) for creating dynamic link aggregation groups (LAGs) — known as "port-channels" in the Dell EMC Networking OS.

NOTE: For static LAG commands based on the standards specified in the IEEE 802.3 Carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications, see [Port Channel Commands](#) .

Topics:

- [clear lacp counters](#)
- [debug lacp](#)
- [lacp long-timeout](#)
- [lacp port-priority](#)
- [lacp system-priority](#)
- [port-channel mode](#)
- [port-channel-protocol lacp](#)
- [show lacp](#)

clear lacp counters

Clear port channel counters.

S5000

Syntax `clear lacp port-channel-number counters`

Parameters *port-channel-number* Enter a port-channel number. The range is from 1 to 128.

Defaults Without a Port Channel specified, the command clears all Port Channel counters.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [show lacp](#) — display the LACP configuration.

debug lacp

Debug LACP (configuration, events, and so on).

Syntax

```
debug lacp [config | events | pdu [interface-type [in | out]]]
```

To disable LACP debugging, use the `no [config | events | pdu [interface-type [in | out]]]` command.

Parameters

- config** (OPTIONAL) Enter the keyword `config` to debug the LACP configuration.
- events** (OPTIONAL) Enter the keyword `events` to debug the LACP event information.
- pdu** (OPTIONAL) Enter the keyword `pdu` to debug the LACP Protocol Data Unit information.
- interface-type in | out** (OPTIONAL) Enter the following keywords and the interface information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Optionally, enter an `in` or `out` parameter:

 - Receive enter `in`
 - Transmit enter `out`

Defaults

None

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

lacp long-timeout

Configure a long timeout period (30 seconds) for an LACP session.

Syntax `lacp long-timeout`
 To reset the timeout period to a short timeout (1 second), use the `no lacp long-timeout` command.

Defaults **1 second**

Command Modes INTERFACE (conf-if-po-number)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information	This command applies to dynamic port-channel interfaces only. When applied on a static port-channel, this command has no effect.
Related Commands	<ul style="list-style-type: none"> • show lacp — display the LACP configuration.

lacp port-priority

To influence which ports will be put in Standby mode when there is a hardware limitation that prevents all compatible ports from aggregating, configure the port priority.

Syntax	<code>lacp port-priority <i>priority-value</i></code>	
	To return to the default setting, use the <code>no lacp port-priority <i>priority-value</i></code> command.	
Parameters	<i>priority-value</i>	Enter the port-priority value. The higher the value number, the lower the priority. The range is from 1 to 65535. The default is 32768 .
Defaults	32768	
Command Modes	INTERFACE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

lacp system-priority

Configure the LACP system priority.

Syntax	<code>lacp system-priority <i>priority-value</i></code>
---------------	---

Parameters	<i>priority-value</i>	Enter the port-priority value. The higher the value number, the lower the priority. The range is from 1 to 65535. The default is 32768 .
Defaults	32768	
Command Modes	INTERFACE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.2(1.0)	Introduced on the Z9500.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	6.2.1.1	Introduced on the E-Series.

port-channel mode

Configure the LACP port channel mode.

Syntax	<code>port-channel <i>number</i> mode [active] [passive] [off]</code>	
Parameters	<i>number</i>	Enter the keywords <code>number</code> then a number. The range is from 1 to 128.
	<code>active</code>	Enter the keyword <code>active</code> to set the mode to the active state.  NOTE: LACP modes are defined in <i>Usage Information</i> .
	<code>passive</code>	Enter the keyword <code>passive</code> to set the mode to the passive state.  NOTE: LACP modes are defined in <i>Usage Information</i> .
	<code>off</code>	Enter the keyword <code>off</code> to set the mode to the off state.  NOTE: LACP modes are defined in <i>Usage Information</i> .
Defaults	<code>off</code>	
Command Modes	INTERFACE	

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

LACP Modes

Mode	Function
active	An interface is in an active negotiating state in this mode. LACP runs on any link configured in the active state and also automatically initiates negotiation with other ports by initiating LACP packets.
passive	An interface is not in an active negotiating state in this mode. LACP runs on any link configured in the passive state. Ports in a passive state respond to negotiation requests from other ports that are in active states. Ports in a passive state respond to LACP packets
off	An interface cannot be part of a dynamic port channel in off mode. LACP does not run on a port configured in off mode.

port-channel-protocol lacp

Enable LACP on any LAN port.

Syntax `port-channel-protocol lacp`

To disable LACP on a LAN port, use the `no port-channel-protocol lacp` command.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [show lacp](#) — display the LACP information.
- [show interfaces port-channel](#) — display information on configured Port Channel groups.

show lacp

Display the LACP matrix.

S5000

Syntax `show lacp port-channel-number [sys-id | counters]`

Parameters	Description
port-channel-number	Enter a port-channel number. The range is from 1 to 128.
sys-id	(OPTIONAL) Enter the keywords <code>sys-id</code> and the value that identifies a system.
counters	(OPTIONAL) Enter the keyword <code>counters</code> to display the LACP counters.

Defaults Without a Port Channel specified, the command clears all Port Channel counters.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

**Example
(Port-Channel-
Number)**

```
DelleMC# show lacp 1
Port-channel 1 admin up, oper up, mode lacp
Actor System ID:Priority 32768, Address 0001.e800.a12b
Partner System ID:Priority 32768, Address 0001.e801.45a5
Actor Admin Key 1, Oper Key 1, Partner Oper Key 1
LACP LAG 1 is an aggregatable link

A-Active LACP, B-Passive LACP, C-Short Timeout, D-Long Timeout
E-Aggregatable Link, F-Individual Link, G-IN_SYNC, H-OUT_OF_SYNC
I-Collection enabled, J-Collection disabled, K-Distribution enabled L-
Distribution disabled,
M-Partner Defaulted, N-Partner Non-defaulted, O-Receiver is in expired
state,
P-Receiver is not in expired state

Port Te 1/6 is enabled, LACP is enabled and mode is lacp
Actor Admin: State ACEHJLMP Key 1 Priority 128
Oper: State ACEGIKNP Key 1 Priority 128
Partner Admin: State BDFHJLMP Key 0 Priority 0
Oper: State BCEGIKNP Key 1 Priority 128
DelleMC#
```

Example (Sys-id)

```
DelleMC# show lacp 1 sys-id
Actor System ID: Priority 32768, Address 0001.e800.a12b
Partner System ID: Priority 32768, Address 0001.e801.45a5
DelleMC#
```

**Example
(Counter)**

```
DelleMC# show lacp 1 counters
-----
Port          LACP PDU      Marker PDU    Unknown      Illegal
              Xmit Recv    Xmit Recv    Pkts Rx      Pkts Rx
-----
Te 1/6        200   200         0    0           0             0
DelleMC#
```

**Related
Commands**

- [clear lacp counters](#) — clear the LACP counters.
- [show interfaces port-channel](#) — display information on configured Port Channel groups.

Layer 2

This section describes commands to configure Layer 2 features.

Topics:

- MAC Addressing Commands
- clear mac-address-table
- mac-address-table aging-time
- mac-address-table disable-learning
- mac-address-table static
- mac-address-table station-move threshold
- mac-address-table station-move refresh-arp
- mac learning-limit
- mac learning-limit learn-limit-violation
- mac learning-limit mac-address-sticky
- mac learning-limit station-move-violation
- mac learning-limit reset
- show cam mac stack-unit
- show mac-address-table
- show mac-address-table aging-time
- show mac accounting access-list
- show mac learning-limit
- Virtual LAN (VLAN) Commands
- description
- default vlan-id
- default-vlan disable
- name
- show config
- show vlan
- tagged
- track ip
- untagged
- Far-End Failure Detection (FEFD)
- debug fefd
- fefd
- fefd disable
- fefd-global
- fefd-global interval
- fefd interval
- fefd mode
- fefd reset
- show fefd

MAC Addressing Commands

The following commands are related to configuring, managing, and viewing MAC addresses.

clear mac-address-table

Clear the MAC address table.

Syntax	<code>clear mac-address-table {dynamic sticky }{address <i>mac-address</i> all interface <i>interface</i> vlan <i>vlan-id</i>}</code>	
Parameters	dynamic	Enter the keyword <code>dynamic</code> to specify dynamically-learned MAC addresses.
	sticky	Enter the keyword <code>sticky</code> to specify sticky MAC addresses.
	address <i>mac-address</i>	Enter the keyword <code>address</code> followed by a MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.
	all	Enter the keyword <code>all</code> to delete all MAC address entries in the MAC address table.
	terface <i>interface</i>	Enter the following keywords and slot/port or number information: <ul style="list-style-type: none">For a port channel interface, enter the keywords <code>port-channel</code> then a number.For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
	vlan <i>vlan-id</i>	Enter the keyword <code>vlan</code> followed by a VLAN ID number from 1 to 4094.

Command Modes EXEC Privilege

Command History	Version	Description
	9.7(0.0)	Introduced on the S6000-ON.
	9.0.2.0	Introduced on the S6000.
	8.3.12.0	Added support for sticky MAC addresses.
	8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
	8.3.7.0	Introduced on the S4810.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	6.1.1.1	Introduced on the E-Series.

mac-address-table aging-time

Specify an aging time for MAC addresses to remove from the MAC address table.

Syntax	<code>mac-address-table aging-time <i>seconds</i></code>	
Parameters	<i>seconds</i>	Enter either zero (0) or a number as the number of seconds before MAC addresses are relearned. To disable aging of the MAC address table, enter 0. The range is from 10 to 1000000. The default is 1800 seconds .

Defaults 1800 seconds

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	On the E-Series, available in INTERFACE VLAN context, reduced the minimum aging time in the INTERFACE VLAN context from 10 seconds to 1 second.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Related Commands

- [mac learning-limit](#) — set the MAC address learning limits for a selected interface.
- [show mac-address-table aging-time](#) — display the MAC aging time.

mac-address-table disable-learning

Disable MAC address learning from LACP or LLDP BPDUs.

Syntax `mac-address-table disable-learning [lacp | lldp]`

Parameters

lacp	Enter <code>lacp</code> to disable MAC address learning from LACP BPDUs.
lldp	Enter <code>LLDP</code> to disable MAC address learning from LLDP BPDUs.

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S3048-ON, S3100 series, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, Z9100-ON, and Z9500.

Usage Information If you use the `mac-address-table disable-learning` command without specifying any option, the system does not learn source MAC addresses from LACP or LLDP BPDUs.

mac-address-table static

Associate specific MAC or hardware addresses to an interface and VLANs.

S5000

Syntax `mac-address-table static mac-address {multicast vlan vlan-id output-range interface}{output interface vlan vlan-id}`

To remove a MAC address, use the `no mac-address-table static mac-address output interface vlan vlan-id` command.

Parameters

- mac-address** Enter the 48-bit hexadecimal address in nn:nn:nn:nn:nn:nn format.
- multicast** Enter a vlan port to where L2 multicast MAC traffic is forwarded.
 **NOTE:** Use this option if you want multicast functionality in an L2 VLAN without IGMP protocols.
- output interface** For a unicast MAC address, enter the keyword `output` then one of the following interfaces for which traffic is forwarded:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
- output-range interface** For a multicast MAC address, enter the keyword `output-range` then one of the following interfaces to indicate a range of ports for which traffic is forwarded:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
- vlan vlan-id** Enter the keyword `vlan` then a VLAN ID number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1(0.0)	Added support for output range parameter for S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Example (Unicast)

```
mac-address-table static 00:01:00:00:00:01 {output Te 1/2 vlan 2}
```

Example (Multicast)

```
mac-address-table static 01:00:5E:01:00:01 {multicast vlan 2 output-range Te 1/2, Te 1/3}
```

Related Commands

- [show mac-address-table](#) — display the MAC address table.

mac-address-table station-move threshold

Change the frequency with which the MAC address station-move trap is sent after a MAC address changes in a VLAN. A trap is sent if a station move is detected above a threshold number of times in a given interval.

Syntax

```
[no] mac-address-table station-move threshold number interval count
```

Parameters

- threshold *number*** Enter the keyword `threshold` then the number of times MAC addresses in VLANs can change before an SNMP trap is sent. The range is from 1 to 10.
- interval *seconds*** Enter the keyword `interval` then the number of seconds. The range is from 5 to 60.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

For information about the specific trap sent and the corresponding Syslog, see [SNMP Traps](#).

mac-address-table station-move refresh-arp

Ensure that address resolution protocol (ARP) refreshes the egress interface when a station move occurs due to a topology change.

Syntax

```
mac-address-table station-move refresh-arp
```

To disable the ARP refresh feature, use the `no mac-address-table station-move refresh-arp` command.

Defaults Enabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Modified the default option from none to Enabled.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Usage Information For more information about using this command, see *NIC Teaming* in the Layer 2 section of the *Dell EMC Networking OS Configuration Guide*.

mac learning-limit

Limit the maximum number of MAC addresses (static + dynamic) learned on a selected interface.

Syntax `mac learning-limit address_limit [vlan vlan-id] [station-move-violation [dynamic]] [dynamic [no-station-move| station-move]]`

Parameters

- address_limit** Enter the maximum number of MAC addresses that can be learned on the interface. The range is from 1 to 1000000.
- vlan vlan-id** Enter the keyword then the VLAN ID. The range is from 1 to 4094.
- dynamic** (OPTIONAL) Enter the keyword `dynamic` to allow aging of MACs even though a learning limit is configured.
- station-move-violation** (OPTIONAL) Enter the keywords `station-move` to allow a station move on learned MAC addresses.

Defaults

- On S-Series, the default behavior is dynamic.

 **NOTE:** “Static” means manually entered addresses, which do not age.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Deprecated the <code>no-station-move</code> command (replaced by the <code>mac-learning-limit mac-address-sticky</code> command).
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the <code>vlan</code> option on the E-Series.
8.2.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series. Added the <code>station-move</code> option.
6.5.1.0	Added support for MAC Learning-Limit on the LAG.

Usage Information

This command and its options are supported on physical interfaces, static LAGs, LACP LAGs, and VLANs.

If you do not specify the `vlan` option, the MAC address counters are not VLAN-based. That is, the sum of the addresses learned on all VLANs (not having any learning limit configuration) is counted against the MAC learning limit.

MAC Learning Limit violation logs and actions are not available on a per-VLAN basis.

With the keyword `no-station-move` option, MAC addresses learned through this feature on the selected interface persist on a per-VLAN basis, even if received on another interface. Enabling or disabling this option has no effect on already learned MAC addresses.

After the MAC address learning limit is reached, the MAC addresses do not age out unless you add the `dynamic` option. To clear statistics on MAC address learning, use the `clear counters` command with the `learning-limit` parameter.

 **NOTE:** If you configure this command on an interface in a routed VLAN, and after the MAC addresses learned reaches the limit set in the `mac learning-limit` command, IP protocols are affected. For example, VRRP sets multiple VRRP Masters and OSPF may not come up.

When a channel member is added to a port-channel and there is not enough ACL CAM space, the MAC limit functionality on that port-channel is undefined. When this occurs, un-configure the existing configuration first and then reapply the limit with a lower value.

Related Commands

- [mac learning-limit mac-address-sticky](#) — replace deprecated `no-station-move` parameter.
- [show mac learning-limit](#) — display MAC learning-limit configuration.

mac learning-limit learn-limit-violation

Configure an action for a MAC address learning-limit violation.

Syntax `mac learning-limit learn-limit-violation {log | shutdown}`
To return to the default, use the `no mac learning-limit learn-limit-violation {log | shutdown}` command.

Parameters

log	Enter the keyword <code>log</code> to generate a syslog message on a learning-limit violation.
shutdown	Enter the keyword <code>shutdown</code> to shut down the port on a learning-limit violation.

Defaults None

Command Modes INTERFACE (conf-if-interface-slot/port)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information This command is supported on physical interfaces, static LAGs, and LACP LAGs.

Related Commands

- [show mac learning-limit](#) — display details of the mac learning-limit.

mac learning-limit mac-address-sticky

Maintain the dynamically learned mac addresses as sticky MAC addresses on the selected port.

Syntax `mac learning-limit mac-address-sticky`

To convert the sticky MAC addresses to dynamic MAC addresses, use the `no mac learning-limit` command.

Parameters	<i>mac-address-sticky</i> Configures the dynamic MAC addresses as sticky on an interface.
Defaults	None
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Usage Information If you configure `mac-learn-limit` and the sticky MAC feature is enabled, dynamically learned MAC addresses are converted to sticky for that port. Any new MAC address that is learned also becomes sticky for that port.

Related Commands

- [show mac learning-limit](#) — display the details of the mac learning-limit.

mac learning-limit station-move-violation

Specify the actions for a station move violation.

Syntax `mac learning-limit station-move-violation {log | shutdown-both | shutdown-offending | shutdown-original}`

To disable a configuration, use the `no mac learning-limit station-move-violation` command, then the configured keyword.

Parameters	log Enter the keyword <code>log</code> to generate a syslog message on a station move violation.
	shutdown-both Enter the keyword <code>shutdown</code> to shut down both the original and offending interface and generate a syslog message.
	shutdown-offending Enter the keywords <code>shutdown-offending</code> to shut down the offending interface and generate a syslog message.

shutdown-original Enter the keywords `shutdown-original` to shut down the original interface and generate a syslog message.

Defaults None

Command Modes INTERFACE (conf-if-interface-slot/port)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the S-Series.
7.8.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information This command is supported on physical interfaces, static LAGs, and LACP LAGs.

Related Commands

- [show mac learning-limit](#) — display details of the mac learning-limit.

mac learning-limit reset

Reset the MAC address learning-limit error-disabled state.

Syntax `mac learning-limit reset`

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

show cam mac stack-unit

Display the content addressable memory (CAM) size and the portions allocated for MAC addresses and for MAC ACLs.

Syntax	<code>show cam mac stack-unit <i>unit_number</i> port-set <i>port-pipe</i> count [vlan <i>vlan-id</i>] [interface <i>interface</i>]</code>
Parameters	<p>stack-unit <i>unit_number</i> (REQUIRED) Enter the keyword <code>stack-unit</code> followed by a stack member number to select the stack unit.</p> <p>port-set <i>port-pipe</i> (REQUIRED) Enter the keywords <code>port-set</code> followed by a Port-Pipe number to select the Port-Pipe.</p> <p>address <i>mac-addr</i> (OPTIONAL) Enter the keyword <code>address</code> followed by a MAC address in the <code>nn:nn:nn:nn:nn:nn</code> format to display information on that MAC address.</p> <p>dynamic (OPTIONAL) Enter the keyword <code>dynamic</code> to display only those MAC addresses learned dynamically by the switch.</p> <p>static (OPTIONAL) Enter the keyword <code>static</code> to display only those MAC address specifically configured on the switch.</p> <p>interface <i>interface</i> (OPTIONAL) Enter the keyword <code>interface</code> followed by the interface type, slot and port information:</p> <ul style="list-style-type: none"> • For a Port Channel interface, enter the keywords <code>port-channel</code> followed by a number. For the S-Series, the range is 1 to 128. • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. <p>vlan <i>vlan-id</i> (OPTIONAL) Enter the keyword <code>vlan</code> followed by the VLAN ID to display the MAC address assigned to the VLAN. The range is 1 to 4094.</p>
Command Modes	<ul style="list-style-type: none"> • EXEC • EXEC Privilege

Command History	Version	Description
	9.8.2.0	Introduced on the S3100 series.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	8.5.1.0	Added support for 4-port 40G line cards on ExaScale.
	7.6.1.0	Introduced on the S-Series.

show mac-address-table

Display the MAC address table.

Syntax `show mac-address-table [address mac-address | interface interface | vlan vlan-id] [aging-time] [dynamic | static] [count [vlan vlan-id] [interface interface-type [slot [/port]]]]`

Parameters	
address <i>mac-address</i>	(OPTIONAL) Enter the keyword <code>address</code> then a MAC address in the <code>nn:nn:nn:nn:nn:nn</code> format to display information on that MAC address.
dynamic	(OPTIONAL) Enter the keyword <code>dynamic</code> to display only those MAC addresses the switch dynamically learns. Optionally, you can also add one of these combinations: <code>address/mac-address</code> , <code>interface/interface</code> , or <code>vlan vlan-id</code> .
static	(OPTIONAL) Enter the keyword <code>static</code> to display only those MAC addresses specifically configured on the switch. Optionally, you can also add one of these combinations: <code>address/mac-address</code> , <code>interface/interface</code> , or <code>vlan vlan-id</code> .
aging-time	Enter the keyword <code>aging-time</code> to display only aging-time information.
interface <i>interface</i>	(OPTIONAL) Enter the keyword <code>interface</code> and the interface information: <ul style="list-style-type: none"> For a port channel interface, enter the keywords <code>port-channel</code> then a number. For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
interface <i>interface-type</i>	(OPTIONAL) Instead of entering the keyword <code>interface</code> then the interface type, slot/port information, as above, you can enter the interface type, then just a slot number.
vlan <i>vlan-id</i>	(OPTIONAL) Enter the keyword <code>vlan</code> then the VLAN ID to display the MAC address assigned to the VLAN. The range is 1 to 4094.
count	(OPTIONAL) Enter the keyword <code>count</code> , then optionally, by an interface or VLAN ID, to display total or interface-specific static addresses, dynamic addresses, and MAC addresses in use.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Updated the output.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show mac-address-table` command shown in the following example.

Column Heading	Description
VlanId	Displays the VLAN ID number.
Mac Address	Displays the MAC address in nn:nn:nn:nn:nn:nn format.
Type	Lists whether the MAC address was manually configured (Static), learned dynamically (Dynamic), or associated with a specific port (Sticky).
Interface	Displays the interface type and slot/port information. The following abbreviations describe the interface types: <ul style="list-style-type: none"> • Po = port channel • Te = ten-gigabit Ethernet • Fo = forty-gigabit Ethernet
State	Lists if the MAC address is in use (Active) or not in use (Inactive).

Example

```
DellEMC(conf)# do show mac-address-table
Codes: *N - VLT Peer Synced MAC
VlanId   Mac Address           Type           Interface      State
2        00:00:00:00:00:01     Dynamic (N)    Po 128         Active
2        00:00:00:00:00:02     Dynamic (N)    Po 10          Active
2        00:00:00:00:00:03     Dynamic        Po 100         Active
2        00:00:00:00:00:04     Dynamic        Po 10          Active
```

Usage Information

The following describes the `show mac-address-table count` command shown in the following example.

Line	Description
Beginning With	
MAC Entries...	Displays the number of MAC entries learned per VLAN.
Dynamic Address...	Lists the number of dynamically learned MAC addresses.
Static Address...	Lists the number of user-defined MAC addresses.
Total MAC...	Lists the total number of MAC addresses the switch uses.

Example (Count)

```
DellEMC# show mac-address-table count
MAC Entries for all vlans :
Dynamic Address Count :          110
Static Address (User-defined) Count : 0
Sticky Address Count :          0
Total Synced Mac from Peer(N) :   100
Total MAC Addresses in Use:      110
DellEMC#
```

Related Commands

- [show mac-address-table aging-time](#) — display MAC aging time.

show mac-address-table aging-time

Display the aging times assigned to the MAC addresses on the switch.

Syntax `show mac-address-table aging-time [vlan vlan-id]`

Parameters `vlan vlan-id` (OPTIONAL) Enter the keyword `vlan` then the VLAN ID to display the MAC address assigned to the VLAN. The range is from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the <code>vlan</code> option on the E-Series.
7.7.1.0	Introduced on the C-Series and S-Series.
pre-6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC# show mac-address-table aging-time
Mac-address-table aging time : 1800

DellEMC#
```

Related Commands

- [show mac-address-table](#) — display the current MAC address configuration.

show mac accounting access-list

Display destination counters for Layer 2 traffic (available on physical interfaces only).

S5000

Syntax

```
show mac accounting {access-list name {interface type slot/port} {in | out}}
```

Parameters

- access-list *name*** Enter the name of a configured access-list, up to 140 characters.
- interface *type slot/port*** (OPTIONAL) Enter the keyword `interface` followed by the interface type, slot and port information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `tengigabitethernet` followed by slot/port numbers. The port range is 0 to 63.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` followed by slot/port numbers. The ports are 48, 52, 56, and 60.
 - For a Port Channel interface, enter the keywords `port-channel` followed by a number from 1 to 128.
- in | out** Identify whether the ACL is applied on the ingress or egress side.

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

MAC Accounting information can be accessed using SNMP via the Force10 MONITOR MIB. For more information about enabling SNMP, refer to the *Dell Networking OS Configuration Guide*.

NOTE: Currently, the Force10 MONITOR MIB does not return the MAC addresses in an increasing order using SNMP. As a workaround, you can use the `-C c` option in `snmpwalk` or `snmpbulkwalk` to access the Force10 MONITOR MIB. For example: `% snmpwalk -C c -v 2c -c public 133.33.33.131 enterprise.6027.3.3.3`

Example

```
Dell#show mac accounting access-list WORD interface tengigabitethernet
0/1 in

Destination          Out Port  VLAN  Packets Bytes
00:44:00:00:00:02    Te  11/0  1000  10000  5120000
```

```

00:44:00:00:00:01  Te  11/0  1000  10000  5120000
00:22:00:00:00:00  Te  11/0  1000  10000  5120000
00:44:00:00:00:02  Te  11/0  2000  10000  5120000
00:44:00:00:00:01  Te  11/0  2000  10000  5120000

Dell#

```

Related Commands

[show mac accounting access-list](#) – displays the MAC access list configurations and counters (if configured).

show mac learning-limit

Display MAC address learning limits set for various interfaces.

S5000

Syntax

```
show mac learning-limit [violate-action] [detail] [interface interface]
```

Parameters

- violate-action** (OPTIONAL) Enter the keywords `violate-action` to display the MAC learning limit violation status.
- detail** (OPTIONAL) Enter the keyword `detail` to display the MAC learning limit in detail.
- interface *interface*** (OPTIONAL) Enter the keyword `interface` with the following keywords and the interface information:
- For a port channel interface, enter the keywords `port-channel` then a number.
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on E-Series.
8.3.7.0	Introduced on the S4810.

Version	Description
8.3.1.0	Added the <code>vlan</code> option on the E-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Added support for the <code>violate-action</code> and <code>detail</code> options.
6.5.1.0	Added support for Port Channel.

Example

```
DelleMC# show mac learning-limit
Interface Learning Dynamic Static Unknown SA
Slot/port Limit MAC count MAC count Drops
Te 1/1 10 0 0 0
Te 1/2 5 0 0 0
DelleMC#show mac learning-limit interface tengigabithernet 1/1
Interface Learning Dynamic Static Unknown SA
Slot/port Limit MAC count MAC count Drops
Te 1/1 10 0 0 0
```

Virtual LAN (VLAN) Commands

The following commands configure and monitor virtual LANs (VLANs). VLANs are a virtual interface and use many of the same commands as physical interfaces.

You can configure an IP address and Layer 3 protocols on a VLAN called Inter-VLAN routing. FTP, TFTP, ACLs and SNMP are not supported on a VLAN.

Occasionally, while sending broadcast traffic over multiple Layer 3 VLANs, the VRRP state of a VLAN interface may continually switch between Master and Backup.

 **NOTE:** For more information, refer to [VLAN Stacking](#) and VLAN-related commands, such as `portmode hybrid` in the [Interfaces](#) chapter.

description

Add a description about the selected VLAN.

Syntax `description description`

Parameters **description** Enter a text string description to identify the VLAN (80 characters maximum).

Defaults none

Command Modes INTERFACE VLAN

Command History	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
6.3.1.1	Introduced on the E-Series.

Related Commands `show vlan` – displays the VLAN configuration.

default vlan-id

Specify a VLAN as the Default VLAN.

Syntax `default vlan-id vlan-id`
 To remove the default VLAN status from a VLAN and VLAN 1 does not exist, use the `no default vlan-id vlan-id` syntax.

Parameters `vlan-id` Enter the VLAN ID number of the VLAN to become the new Default VLAN. The range is from 1 to 4094. The default is **1**.

Defaults Default VLAN is VLAN **1**.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information To return VLAN 1 as the Default VLAN, use this command syntax (`default-vlan-id 1`). The Default VLAN contains only untagged interfaces.

Related Commands

- [interface vlan](#) — configure a VLAN.

default-vlan disable

Disable the default VLAN so that all switchports are placed in the Null VLAN until they are explicitly configured as a member of another VLAN.

Defaults Enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced

Usage Information The `no default vlan disable` command is not listed in the running-configuration, but when the default VLAN is disabled, `default-vlan disable` is listed in the running-configuration.

name

Assign a name to the VLAN.

Syntax `name vlan-name`

To remove the name from the VLAN, use the `no name` command.

Parameters ***vlan-name*** Enter up to 32 characters as the name of the VLAN.

Defaults Not configured.

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

To display information about a named VLAN, enter the `show vlan` command with the name parameter or the `show interfaces description` command.

Related Commands

- [interface vlan](#) — configure a VLAN.
- [show vlan](#) — display the current VLAN configurations on the switch.

show config

Display the current configuration of the selected VLAN.

Syntax `show config`

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(conf-if-vl-100)# show config
!
interface Vlan 100
  no ip address
  no shutdown
DellEMC(conf-if-vl-100)#
```

show vlan

Display the current VLAN configurations on the switch.

Syntax `show vlan [brief | id vlan-id | name vlan-name]`

Parameters

brief	(OPTIONAL) Enter the keyword <code>brief</code> to display the following information: <ul style="list-style-type: none"> • VLAN ID • VLAN name (left blank if none is configured) • Spanning Tree Group ID • MAC address aging time • IP address
id <i>vlan-id</i>	(OPTIONAL) Enter the keyword <code>id</code> then a number from 1 to 4094. Only information on the VLAN specified is displayed.
name <i>vlan-name</i>	(OPTIONAL) Enter the keyword <code>name</code> then the name configured for the VLAN. Only information on the VLAN named is displayed.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1.(0.0)	Updated to support OpenFlow.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Augmented to display PVLAN data for the C-Series and S-Series and revised the output to include the Description field to display a user-entered VLAN description.
7.6.1.0	Introduced on the S-Series and revised the output to display Native VLAN.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show vlan` command shown in the following example.

Column Heading	Description
(Column 1 — no heading)	<ul style="list-style-type: none"> • asterisk symbol (*) = Default VLAN • G = GVRP VLAN • P = primary VLAN • C = community VLAN • I = isolated VLAN • O = OpenFlow
NUM	Displays existing VLAN IDs.
Status	Displays the word <i>Inactive</i> for inactive VLANs and the word <i>Active</i> for active VLANs.
Q	<ul style="list-style-type: none"> • Displays G for GVRP tagged • M for member of a VLAN-Stack VLAN • T for tagged interface • U for untagged interface • x (not capitalized x) for Dot1x untagged • X (capitalized X) for Dot1x tagged • o (not capitalized o) for OpenFlow untagged • O (capitalized O) for OpenFlow tagged • H for VSN tagged • i (not capitalized i) for Internal untagged • I (capitalized I) for Internal tagged • v (not capitalized v) for VLT untagged • V (capitalized V) for VLT tagged
Ports	Displays the type, slot, and port information. <ul style="list-style-type: none"> • Po = port channel • Te = ten-gigabit Ethernet • Fo = forty-gigabit Ethernet

Example

```
DelleMC# show vlan

Codes: * - Default VLAN, G - GVRP VLANs, P - Primary, C - Community, I -
Isolated
Q: U - Untagged, T - Tagged, O - Openflow
   x - Dot1x untagged, X - Dot1x tagged
   o - OpenFlow untagged, O - OpenFlow tagged
```

```

G - GVRP tagged, M - Vlan-stack
i - Internal untagged, I - Internal tagged, v - VLT untagged, V - VLT
tagged
NUM  Status      Description  Q Ports
*   1   Inactive
   2   Active      U Po1(Te 1/1)
                                T Po20(Te 1/6), Te 1/25
                                T Te 1/7
   3   Active T Po20(Te 1/6)
                                T Te 1/7
                                U Te 1/1
   4   Active U Po2(Te 1/2)
                                T Po20(Te 1/6)
                                T Te 1/7
   5   Active T Po20(Te 1/6)
                                T Te 1/7
                                U Te 1/3
   6   Active U Po3(Te 1/4)
                                T Po20(Te 1/6)
                                T Te 1/7
   7   Active T Po20(Te 1/6)
                                T Te 1/7
                                U Te 1/5
P 100  Active T Po1(Te 1/1)
                                T Te 1/2
C 101  Inactive T Te 1/3
I 102  Inactive T Te 1/4
DelleMC#

```

Example (VLAN ID)

```

DelleMC# show vlan id 40

Codes: * - Default VLAN, G - GVRP VLANs
Q: U - Untagged, T - Tagged
   x - Dot1x untagged, X - Dot1x tagged
   G - GVRP tagged, M - Vlan-stack

NUM  Status Description Q Ports
 40   Active      M Te 1/47

DelleMC# show vlan id 41

Codes: * - Default VLAN, G - GVRP VLANs
Q: U - Untagged, T - Tagged
   x - Dot1x untagged, X - Dot1x tagged
   G - GVRP tagged, M - Vlan-stack

NUM  Status Description Q Ports
 41   Active      T Te 1/47

DelleMC# show vlan id 42

Codes: * - Default VLAN, G - GVRP VLANs
Q: U - Untagged, T - Tagged
   x - Dot1x untagged, X - Dot1x tagged
   G - GVRP tagged, M - Vlan-stack

NUM  Status Description Q Ports
 42   Active      U Te 1/47
DelleMC#

```

Example (Brief)

```

DelleMC# show vlan br
VLAN  Name  STG  MAC Aging  IP Address
-----
 1      0    1800  unassigned
 2      0    1800  2.2.2.2/24
 3      0    1800  3.3.3.2/24
DelleMC#

```

Example (Name)

```
Dellconf)# interface vlan 222
DellEMC(conf-if-vl-222)#name test
DellEMC(conf-if-vl-222)#do show vlan name test

Codes: * - Default VLAN, G - GVRP VLANs
Q: U - Untagged, T - Tagged
    x - Dot1x untagged, X - Dot1x tagged
    G - GVRP tagged, M - Vlan-stack

      NUM  Status Description  Q Ports
      222  Inactive              U Te 1/22
DellEMC(conf-if-vl-222)#
```

Example (OpenFlow instance)

	NUM	Status	Description	Q	Ports
*	1	Inactive			
	3	Inactive			
O	6	Inactive			
O	8	Inactive			
O	12	Inactive		O	Te 1/10

Related Commands

- [vlan-stack compatible](#) — enable the Stackable VLAN feature on the selected VLAN.
- [interface vlan](#) — configure a VLAN.

tagged

Add a Layer 2 interface to a VLAN as a tagged interface.

S5000

Syntax

`tagged interface`

To remove a tagged interface from a VLAN, use the `no tagged interface` command.

Parameters

interface

Enter the following keywords and the interface information:

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults

All interfaces in Layer 2 mode are untagged.

Command Modes

INTERFACE VLAN

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

When you use the `no tagged` command, the interface is automatically placed in the Default VLAN as an untagged interface unless the interface is a member of another VLAN. If the interface belongs to several VLANs, remove it from all VLANs to change it to an untagged interface.

Tagged interfaces can belong to multiple VLANs, while untagged interfaces can only belong to one VLAN at a time.

Related Commands

- [interface vlan](#) — configure a VLAN.
- [untagged](#) — specify which interfaces in a VLAN are untagged.

track ip

Track the Layer 3 operational state of a Layer 3 VLAN, using a subset of the VLAN member interfaces.

S5000

Syntax

```
track ip interface
```

To remove the tracking feature from the VLAN, use the `no track ip interface` command.

Parameters

<i>interface</i>	Enter the following keywords and the interface information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number.
-------------------------	--

Defaults

Not configured.

Command Modes

INTERFACE VLAN

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

When this command is configured, the VLAN is operationally UP if any of the interfaces specified in the `track ip` command are operationally UP, and the VLAN is operationally DOWN if none of the tracking interfaces are operationally UP.

If the `track ip` command is not configured, the VLAN's Layer 3 operational state depends on all the members of the VLAN.

The Layer 2 state of the VLAN, and the Layer 2 traffic, is not affected by the `track ip` command configuration.

Related Commands

- [interface vlan](#) — configure a VLAN.
- [tagged](#) — specify which interfaces in a VLAN are tagged.

untagged

Add a Layer 2 interface to a VLAN as an untagged interface.

S5000

Syntax

`untagged interface`

To remove an untagged interface from a VLAN, use the `no untagged interface` command.

Parameters

interface

Enter the following keywords and the interface information:

- For a port channel interface, enter the keywords `port-channel` then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults

All interfaces in Layer 2 mode are untagged.

Command Modes

INTERFACE VLAN

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

Untagged interfaces can only belong to one VLAN.

In the Default VLAN, you cannot use the `no untagged interface` command. To remove an untagged interface from all VLANs, including the Default VLAN, enter INTERFACE mode and use the `no switchport` command.

Related Commands

- [interface vlan](#) — configure a VLAN.
- [tagged](#) — specify which interfaces in a VLAN are tagged.

Far-End Failure Detection (FEFD)

The Dell EMC Networking operating software supports far-end failure detection (FEFD) on the Ethernet interfaces of the platform.

The FEFD feature detects and reports far-end link failures.

- FEFD is not supported on the Management interface.
- During an RPM failover, FEFD is operationally disabled for approximately 8 to 10 seconds.
- By default, FEFD is disabled.

debug fefd

Enable debugging of FEFD.

Syntax

```
debug fefd {events | packets} [interface]
```

To disable debugging of FEFD, use the `no debug fefd {events | packets} [interface]` command.

Parameters

- | | |
|----------------|--|
| events | Enter the keyword <code>events</code> to enable debugging of FEFD state changes. |
| packets | Enter the keyword <code>packets</code> to enable debugging of FEFD to view information on packets sent and received. |

interface

(OPTIONAL) Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version**Description**

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Legacy E-Series command.**Related Commands**

- [fefd](#) — enable far-end failure detection on an interface.
- [fefd reset](#) — enable FEFD globally on the system.

fefd

Enable Far-End Failure Detection on an interface, set the FEFD interval, or select the FEFD mode.

Syntax

```
fefd {disable|interval|mode {aggressive|normal}}
```

Parameters

disable	Enter the keyword disable to disable FEFD for the specified interface.
interval	Enter the keyword interval , followed by a value to specify the FEFD interval in seconds. Range is from 3 to 300. Default is 15.
mode	Enter the keyword mode followed by the mode type to specify the FEFD mode. <ul style="list-style-type: none"> • normal: Change the link state to “unknown” when a far-end failure is detected by the software on that interface. When the interface is placed in an “unknown” state, the software brings down the line protocol. • aggressive: Change the link state to “error-disabled” when a far-end failure is detected by the software on that interface. When an interface is placed in an “error-disabled” state, you must enter the <code>fefd reset</code> command to reset the interface state. Range is normal or aggressive. Default is normal.

Defaults Disabled.

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Usage Information

When you enter `no fefd` for an interface and `fefd-global`, FEFD is enabled on the interface because the `no fefd` command is not retained in the configuration file. To keep the interface FEFD disabled when the global configuration changes, use the `fefd reset` command.

Related Commands

- [fefd disable](#) — disable far-end failure detection on an interface.
- [fefd reset](#) — enable FEFD globally on the system.
- [fefd mode](#) — change FEFD mode on an interface.

fefd disable

Disable FEFD on an interface only. This command overrides the `fefd reset` command for the interface.

Syntax

```
fefd disable
```

To re-enable FEFD on an interface, use the `no fefd disable` command.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Legacy E-Series command.

Usage Information

FEFD `disable` command on the interface prevents the interface from running FEFD when FEFD is enabled globally.

Related Commands

- [fefd reset](#) — clear an interface in Err-disabled state. It doesn't work until the interface is in err-disabled state.
- [fefd mode](#) — change FEFD mode on an interface.

fefd-global

Enable FEFD globally on the system.

Syntax

`fefd-global [interval seconds][mode {normal | aggressive}]`

To disable FEFD globally, use the `no fefd-global [mode {normal | aggressive}]` command.

Parameters

- interval seconds** Enter the keyword `interval` followed by the number of seconds to wait between FEFD control packets. Range is from 3 to 300 seconds. Default is 15 seconds.
- normal** (OPTIONAL) Enter the keywords `mode normal` to change the link state to "unknown" when a far-end failure the software detects on that interface. When the interface is placed in "unknown" state, the software brings down the line protocol. The default is **Normal mode**.
- aggressive** (OPTIONAL) Enter the keywords `mode aggressive` to change the link state to "error-disabled" when a far-end failure the software detects on that interface. When an interface is placed in "error-disabled" state, t enter the `fefd reset` command to reset the interface state.

Defaults

Disabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Legacy E-Series command.

Usage Information

If you enter only the `fefd-global` syntax, the mode is normal and the default interval is 15 seconds. If you disable FEFD globally (`no fefd-global`), the system does not remove the FEFD interface configuration.

Related Commands

- [fefd](#) — enable far-end failure detection.
- [fefd-global interval](#) — configure an interval between FEFD control packets.
- [show fefd](#) — display the FEFD command output.

fefd-global interval

Configure an interval between FEFD control packets.

Syntax `fefd-global interval seconds`

To return to the default value, use the `no fefd-global interval` command.

Parameters **seconds** Enter a number as the time between FEFD control packets. The range is from 3 to 300 seconds. The default is **15 seconds**.

Defaults **15 seconds**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Legacy E-Series command.

Related Commands

- [fefd](#) — enable far-end failure detection.
- [fefd-global](#) — enable FEFD globally on the system.

fefd interval

Set an interval between control packets.

Syntax	<code>fefd interval seconds</code> To return to the default value, use the <code>no fefd interval</code> command.
Parameters	seconds Enter a number as the time between FEFD control packets. The range is from 3 to 255 seconds. The default is 15 seconds .
Defaults	15 seconds
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Legacy E-Series command.

Usage Information	You can set up the interval between control packets using the <code>fefd interval</code> command.
Related Commands	<ul style="list-style-type: none"><code>fefd</code> — enable far-end failure detection.

fefd mode

Change the FEFD mode on an interface.

Syntax	<code>fefd mode {normal aggressive}</code> To return the FEFD mode to the default of normal, use the <code>no fefd mode</code> command.
Parameters	normal (OPTIONAL) Enter the keyword <code>normal</code> to change the link state to “unknown” when a far-end failure the software detects on that interface. When the interface is placed in “unknown” state, the software brings down the line protocol. aggressive (OPTIONAL) Enter the keyword <code>aggressive</code> to change the link state to “error-disabled” when a far-end failure the software detects on that interface. When an

interface is placed in “error-disabled” state, enter the `fefd reset` command to reset the interface state.

Defaults Normal

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Legacy E-Series command.

Related Commands

- `fefd` — enable far-end failure detection.

fefd reset

Reset all interfaces or a single interface that was in “error-disabled” mode.

Syntax `fefd reset [interface]`

Parameters *interface* (OPTIONAL) Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults Not configured.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Legacy E-Series command.

Related Commands

- [fefd](#) — enable far-end failure detection.

show fefd

View FEFD status globally or on a specific interface.

Syntax `show fefd [interface]`

Parameters *interface* (OPTIONAL) Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.

Version Description

Legacy E-Series command.

Usage Information

The following describes the `show fefd` command shown in the following example.

Field Description

Interface Displays the interfaces type and number.

Mode Displays the mode (aggressive or normal) or NA if the interface contains `fefd reset` in its configuration.

Interval Displays the interval between FEFD packets.

State Displays the state of the interface and can be one of the following:

- bi-directional (interface is up, connected and hearing neighbor's echoes).
- err-disabled (only found when FEFD mode is aggressive and when the interface has not hearing its neighbor's echoes for three times the message interval. To reset an interface in this state, use the `fefd reset` command.)
- unknown (only found when FEFD mode is normal).
- locally disabled (interface contains the `fefd reset` command in its configuration).
- Admin Shutdown (interface is disabled with the `shutdown` command).

Example

```
DelleMC# show fefd
FEFD is globally 'ON', interval is 10 seconds, mode is 'Aggressive'.

INTERFACE MODE          INTERVAL  STATE
              (second)
Te 5/1    Aggressive    10       Admin Shutdown
Te 5/2    Aggressive    10       Admin Shutdown
Te 5/3    Aggressive    10       Admin Shutdown
Te 5/4    Aggressive    10       Admin Shutdown
Te 5/5    Aggressive    10       Admin Shutdown
Te 5/6    Aggressive    10       Admin Shutdown
Te 5/7    Aggressive    10       Admin Shutdown
Te 5/8    Aggressive    10       Admin Shutdown
Te 5/9    Aggressive    10       Admin Shutdown
Te 5/10   NA             NA       Locally disabled
Te 5/11   Aggressive    10       Err-disabled
DelleMC#
```

Related Commands

- [fefd](#) — enable far-end failure detection.
- [fefd disable](#) — disable FEFD on an interface only.
- [fefd-global](#) — enable FEFD globally on the system.
- [fefd reset](#) — reset all interfaces or a single interface that was in “error-disabled” mode.

Link Layer Discovery Protocol (LLDP)

The link layer discovery protocol (LLDP) advertises connectivity and management from the local station to the adjacent stations on an IEEE 802 LAN.

LLDP facilitates multi-vendor interoperability by using standard management tools to discover and make available a physical topology for network management. The Dell EMC Networking operating software implementation of LLDP is based on IEEE standard 801.1ab.

The starting point for using LLDP is invoking LLDP with the `protocol lldp` command in either CONFIGURATION or INTERFACE mode.

The information LLDP distributes is stored by its recipients in a standard management information base (MIB). You can access the information by a network management system through a management protocol such as simple network management protocol (SNMP).

Topics:

- [LLPD Commands](#)
- [LLDP-MED Commands](#)

LLPD Commands

The following are LLDP commands.

advertise dot1-tlv

Advertise dot1 TLVs (Type, Length, Value).

Syntax	<code>advertise dot1-tlv {port-protocol-vlan-id port-vlan-id vlan-name}</code>	
	To remove advertised dot1-tlv, use the <code>no advertise dot1-tlv {port-protocol-vlan-id port-vlan-id vlan-name}</code> command.	
Parameters	port-protocol-vlan-id	Enter the keywords <code>port-protocol-vlan-id</code> to advertise the port protocol VLAN identification TLV.
	port-vlan-id	Enter the keywords <code>port-vlan-id</code> to advertise the port VLAN identification TLV.
	vlan-name	Enter the keywords <code>vlan-name</code> to advertise the vlan-name TLV. This keyword is only supported on the C-Series and S-Series.
Defaults	Disabled.	
Command Modes	CONFIGURATION (<code>conf-lldp</code>) and INTERFACE (<code>conf-if-interface-lldp</code>)	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series. Added the <code>vlan-name</code> option.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [protocol lldp \(Configuration\)](#) — enable LLDP globally.
- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise dot3-tlv

Advertise dot3 TLVs (Type, Length, Value).

Syntax

```
advertise dot3-tlv {max-frame-size}
```

To remove advertised dot3-tlv, use the `no advertise dot3-tlv {max-frame-size}` command.

Parameters

max-frame-size Enter the keywords `max-frame-size` to advertise the dot3 maximum frame size TLV.

Defaults

None

Command Modes

CONFIGURATION (`conf-lldp`) and INTERFACE (`conf-if-interface-lldp`)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

advertise interface-port-desc

Advertise port descriptor.

Syntax `advertise interface-port-desc {description | port-id}`
 To remove the advertised port descriptor, use the `no advertise interface-port-desc {description | port-id}` command.

Parameters

description	Enter the keyword <code>description</code> then the interface description.
port-id	Enter the keyword <code>port-id</code> then the port-id. The range is from 0 to 7.

Defaults None

Command Modes CONFIGURATION (`conf-lldp`)
 INTERFACE (`conf-if-interface-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P1)	Introduced the <code>description</code> and <code>port-id</code> options.

Usage Information If you do not specify the option, by default the `port-id` takes higher precedence and sends the `port-id` in the LLDP packets.

advertise management-tlv

Advertise management TLVs (Type, Length, Value).

Syntax `advertise management-tlv {management-address | system-capabilities | system-description | system-name}`
 To remove advertised management TLVs, use the `no advertise management-tlv {management-address | system-capabilities | system-description | system-name}` command.

Parameters

management-address	Enter the keyword <code>management-address</code> to advertise the management IP address TLVs to the LLDP peer.
system-capabilities	Enter the keywords <code>system-capabilities</code> to advertise the system capabilities TLVs to the LLDP peer.

system-description	Enter the keywords <code>system-description</code> to advertise the system description TLVs to the LLDP peer.
system-name	Enter the keywords <code>system-name</code> to advertise the system name TLVs to the LLDP peer.

Defaults None

Command Modes CONFIGURATION (`conf-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Modified to support management-address parameter.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information The command options `management-address`, `system-capabilities`, `system-description`, and `system-name` can be invoked individually or together, in any sequence.

advertise management-tlv (Interface)

Advertise management type, length, values (TLVs) to the specified interface.

Syntax `advertise management-tlv {management-address | system-capabilities | system-description | system-name}`

To remove advertised management TLVs, use the `no advertise management-tlv {management-address | system-capabilities | system-description | system-name}` command.

Parameters	management-address	Enter the keywords <code>management-address</code> to advertise the management IP address TLVs to the specified interface.
	system-capabilities	Enter the keywords <code>system-capabilities</code> to advertise the system capabilities TLVs to the specified interface.
	system-description	Enter the keywords <code>system-description</code> to advertise the system description TLVs to the specified interface.
	system-name	Enter the keywords <code>system-name</code> to advertise the system name TLVs to the specified interface.

Defaults None

Command Modes INTERFACE (`conf-interface-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the Z9000 and S4810.
8.3.19.0	Introduced on the S4820T.

clear lldp counters

Clear LLDP transmitting and receiving counters for all physical interfaces or a specific physical interface.

Syntax	<code>clear lldp counters [interface <i>interface</i>]</code>
Parameters	<p>interface (OPTIONAL) Enter the following keywords and the interface information:</p> <p><i>interface</i></p> <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
Defaults	None
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

clear lldp neighbors

Clear LLDP neighbor information for all interfaces or a specific interface.

Syntax	<code>clear lldp neighbors [interface <i>interface</i>]</code>
Parameters	<p>interface (OPTIONAL)Enter the following keywords and the interface information:</p> <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
Defaults	None
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

debug lldp interface

To display timer events, neighbor additions or deletions, and other information about incoming and outgoing packets, enable LLDP debugging.

Syntax	<pre>debug lldp interface {<i>interface</i> all}{events packet {brief detail} {tx rx both}}</pre> <p>To disable debugging, use the <code>no debug lldp [interface {<i>interface</i> all}{events} {packet {brief detail} {tx rx both}}]</code> command.</p>
---------------	--

Parameters

interface <i>interface</i>	Enter the following keywords and slot/port or number information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
all	Enter the keyword <code>all</code> to display information on all interfaces.
events	Enter the keyword <code>events</code> to display major events such as timer events.
packet	Enter the keyword <code>packet</code> to display information regarding packets coming in or going out.
brief	Enter the keyword <code>brief</code> to display brief packet information.
detail	Enter the keyword <code>detail</code> to display detailed packet information.
tx	Enter the keyword <code>tx</code> to display transmit-only packet information.
rx	Enter the keyword <code>rx</code> to display receive-only packet information.
both	Enter the keyword <code>both</code> to display both receive and transmit packet information.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
NOS(conf)#do debug lldp interface managementethernet 1/1 packet detail rx
NOS(conf)#23:22:29 : Received LLDP pkt on Ma 1/1 of length 1514 :
23:22:29 : Packet dump:
23:22:29 : 01 80 c2 00 00 0e 64 00 6a e6 9a 58 88 cc 02 07
23:22:29 : 04 64 00 6a e6 9a 56 04 15 05 47 69 67 61 62 69
23:22:29 : 74 45 74 68 65 72 6e 65 74 20 31 2f 31 32 06 02
23:22:30 : 00 78 12 04 44 65 6c 6c 14 04 44 65 6c 6c 16 04
--Output truncated for brevity--
```

```
23:22:40 : TLV: Chassis ID, Len: 7, Subtype: Mac address (4) Value:
64:00:6a:e6:9a:56
23:22:40 : TLV: Port ID, Len: 21, Subtype: Interface name (5) Value:
GigabitEthernet 1/12
23:22:40 : TLV: TTL, Len: 2, Value: 120
23:22:40 : TLV: UNKNOWN TLV, Type: 9 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 10 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 11 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 12 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 13 Len: 4, Value: Dell
--Output truncated for brevity--
23:22:53 : TLV: ENDOFPDU, Len: 0
```

```
NOS(conf)#do debug lldp interface managementethernet 1/1 packet detail rx
NOS(conf)#23:22:29 : Received LLDP pkt on Ma 1/1 of length 1514 :
23:22:29 : Packet dump:
23:22:29 : 01 80 c2 00 00 0e 64 00 6a e6 9a 58 88 cc 02 07
23:22:29 : 04 64 00 6a e6 9a 56 04 15 05 47 69 67 61 62 69
23:22:29 : 74 45 74 68 65 72 6e 65 74 20 31 2f 31 32 06 02
23:22:30 : 00 78 12 04 44 65 6c 6c 14 04 44 65 6c 6c 16 04
--Output truncated for brevity--
23:22:40 : TLV: Chassis ID, Len: 7, Subtype: Mac address (4) Value:
64:00:6a:e6:9a:56
23:22:40 : TLV: Port ID, Len: 21, Subtype: Interface name (5) Value:
TenGigabitEthernet 1/12
23:22:40 : TLV: TTL, Len: 2, Value: 120
23:22:40 : TLV: UNKNOWN TLV, Type: 9 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 10 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 11 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 12 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 13 Len: 4, Value: Dell
--Output truncated for brevity--
23:22:53 : TLV: ENDOFPDU, Len: 0
```

```
NOS(conf)#do debug lldp interface managementethernet 1/1 packet detail rx
NOS(conf)#23:22:29 : Received LLDP pkt on Ma 1/1 of length 1514 :
23:22:29 : Packet dump:
23:22:29 : 01 80 c2 00 00 0e 64 00 6a e6 9a 58 88 cc 02 07
23:22:29 : 04 64 00 6a e6 9a 56 04 15 05 47 69 67 61 62 69
23:22:29 : 74 45 74 68 65 72 6e 65 74 20 31 2f 31 32 06 02
23:22:30 : 00 78 12 04 44 65 6c 6c 14 04 44 65 6c 6c 16 04
--Output truncated for brevity--
23:22:40 : TLV: Chassis ID, Len: 7, Subtype: Mac address (4) Value:
64:00:6a:e6:9a:56
23:22:40 : TLV: Port ID, Len: 21, Subtype: Interface name (5) Value:
FortyGigE 1/12
23:22:40 : TLV: TTL, Len: 2, Value: 120
23:22:40 : TLV: UNKNOWN TLV, Type: 9 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 10 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 11 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 12 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 13 Len: 4, Value: Dell
--Output truncated for brevity--
23:22:53 : TLV: ENDOFPDU, Len: 0
```

```
NOS(conf)#do debug lldp interface managementethernet 1/1 packet detail rx
NOS(conf)#23:22:29 : Received LLDP pkt on Ma 1/1 of length 1514 :
23:22:29 : Packet dump:
23:22:29 : 01 80 c2 00 00 0e 64 00 6a e6 9a 58 88 cc 02 07
23:22:29 : 04 64 00 6a e6 9a 56 04 15 05 47 69 67 61 62 69
23:22:29 : 74 45 74 68 65 72 6e 65 74 20 31 2f 31 32 06 02
23:22:30 : 00 78 12 04 44 65 6c 6c 14 04 44 65 6c 6c 16 04
--Output truncated for brevity--
23:22:40 : TLV: Chassis ID, Len: 7, Subtype: Mac address (4) Value:
64:00:6a:e6:9a:56
23:22:40 : TLV: Port ID, Len: 21, Subtype: Interface name (5) Value:
hundredGigE 1/12
23:22:40 : TLV: TTL, Len: 2, Value: 120
23:22:40 : TLV: UNKNOWN TLV, Type: 9 Len: 4, Value: Dell
```

```
23:22:40 : TLV: UNKNOWN TLV, Type: 10 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 11 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 12 Len: 4, Value: Dell
23:22:40 : TLV: UNKNOWN TLV, Type: 13 Len: 4, Value: Dell
--Output truncated for brevity--
23:22:53 : TLV: ENDOFPDU, Len: 0
```

disable

Enable or disable LLDP.

Syntax `disable`

To enable LLDP, use the `no disable` command.

Defaults Enabled — no disable.

Command Modes CONFIGURATION (`conf-lldp`) and INTERFACE (`conf-if-interface-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [protocol lldp \(Configuration\)](#) — enable LLDP globally.
- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

hello

Configure the rate at which the LLDP control packets are sent to its peer.

Syntax `hello seconds`

To revert to the default, use the `no hello seconds` command.

Parameters **seconds** Enter the rate, in seconds, at which the control packets are sent to its peer. The rate is from 5 to 180 seconds. The default is **30 seconds**.

Defaults **30 seconds**

Command Modes CONFIGURATION (conf-lldp) and INTERFACE (conf-if-interface-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

management-interface

Enable and configure LLDP protocol parameters on the management interface.

Syntax `management-interface`
To remove LLDP configuration on a management interface, use the `no management-interface` command.

Command Modes LLDP (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000 and S4810.

Usage Information

To enable LLDP on the management interface, use the `no disable` command in LLDP-MANAGEMENT-INTERFACE mode (`conf-lldp-mgmtIf`).

mode

To receive or transmit, set LLDP.

Syntax

```
mode {tx | rx}
```

To return to the default, use the `no mode` command.

Parameters

- | | |
|-----------|--|
| tx | Enter the keyword <code>tx</code> to set the mode to transmit. |
| rx | Enter the keyword <code>rx</code> to set the mode to receive. |

Defaults

Both **transmit** and **receive**.

Command Modes

CONFIGURATION (`conf-lldp`) and INTERFACE (`conf-if-interface-lldp`)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [protocol lldp \(Configuration\)](#) — enable LLDP globally.
- [show lldp neighbors](#) — display the LLDP neighbors.

multiplier

Set the multiple of the hello timer before LLDP declares the interface dead.

Syntax

```
multiplier number
```

To return to the default, use the `no multiplier` command.

Parameters *integer* Enter the number of consecutive misses before the LLDP declares the interface dead. The range is from 2 to 10.

Defaults 4

Command Modes CONFIGURATION (`conf-lldp`) and INTERFACE (`conf-if-interface-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

protocol lldp (Configuration)

Enable the LLDP globally on the switch.

Syntax `protocol lldp`
To disable LLDP globally on the chassis, use the `no protocol lldp` command.

Defaults Enabled.

Command Modes CONFIGURATION (`conf-lldp`)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

protocol lldp (Interface)

Enter the LLDP protocol in INTERFACE mode.

Syntax	<code>[no] protocol lldp</code> To return to the global LLDP configuration mode, use the <code>no protocol lldp</code> command from Interface mode.
Defaults	LLDP is not enabled on the interface.
Command Modes	INTERFACE (conf-if- <i>interface</i> -lldp)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Version	Description
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

Before LLDP can be configured on an interface, it must be enabled globally from CONFIGURATION mode. This command places you in LLDP mode on the interface; it does not enable the protocol.

When you enter the LLDP protocol in the Interface context, it overrides global configurations. When you execute the `no protocol lldp` from INTERFACE mode, interfaces begin to inherit the configuration from global LLDP CONFIGURATION mode.

show lldp neighbors

Display LLDP neighbor information for all interfaces or a specified interface.

Syntax `show lldp neighbors [interface interface] [detail]`

Parameters

interface interface	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
detail	(OPTIONAL) Enter the keyword <code>detail</code> to display all the TLV information, remote management IP addresses, timers, and LLDP tx and rx counters.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1.(0.0)	Modified output of detail parameter to display remote management IP addresses.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Version	Description
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

Omitting the keyword `detail` displays only the remote chassis ID, Port ID, and Dead Interval.

Example

```
DellEMC(conf-if-te-1/31)# do show lldp neighbors
Loc PortID Rem Host Name Rem Port Id Rem Chassis Id
-----
Te 1/21 R2 TenGigabitEthernet 2/11 00:01:e8:06:95:3e
Te 1/31 R3 TenGigabitEthernet 3/11 00:01:e8:09:c2:4a
```

Example (Detail)

```
DellEMC(conf)#do show lldp neighbors detail
=====
Local Interface TenGigabitEthernet 1/1 has 1 neighbor
Total Frames Out: 17
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 2 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4) ( 17, 4) (
18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4) ( 27, 4) (
28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4) ( 37, 4) (
38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4) ( 47, 4) (
48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4) ( 57, 4) (
58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4) ( 67, 4) (
68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4) ( 77, 4) (
78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4) ( 87, 4) (
88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4) ( 97, 4) (
98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4) (107, 4)
(108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4) (117, 4)
(118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:03
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/40
Local Port ID: TenGigabitEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 105 seconds
Time since last information change of this neighbor: 00:00:15
-----

=====
Local Interface TenGigabitEthernet 1/3 has 1 neighbor
Total Frames Out: 18
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 15 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4) ( 17, 4) (
18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4) ( 27, 4) (
28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4) ( 37, 4) (
38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4) ( 47, 4) (
48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4) ( 57, 4) (
58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4) ( 67, 4) (
68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4) ( 77, 4) (
78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4) ( 87, 4) (
88, 4)
```

```

( 98, 4) ( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4) ( 97, 4) (
(108, 4) ( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4) (107, 4)
(118, 4) (109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4) (117, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)

```

The neighbors are given below:

```

-----
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:01
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/38
Local Port ID: TenGigabitEthernet 1/3
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 107 seconds
Time since last information change of this neighbor: 00:00:13
-----

```

```

=====
Local Interface Management 1/1 has 1 neighbor

```

```

Total Frames Out: 122
Total Frames In: 123
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 0
Total TLVs Discarded: 0
Next packet will be sent after 1 seconds
UnknownTLVList:
The neighbors are given below:
-----

```

```

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:01:e8:8a:e4:c9
Remote Port Subtype: Interface name (5)
Remote Port ID: GigabitEthernet 0/13
Local Port ID: ManagementEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 95 seconds
Time since last information change of this neighbor: 01:03:07
Remote System Name: MANAGEMENT-C5
Remote System Desc: Force10 Networks Real Time Operating System
Software: Force10 Operating System Version: 1.0. Force10 Application
Software Version: 8.3.5.0. Copyright (c) 1999-2010 by Force10 Networks,
Inc. Build Time: Sat Dec 11 19:35:32 2010
Existing System Capabilities: Repeater Bridge Router
Enabled System Capabilities: Repeater Bridge Router
Remote Port Vlan ID: 1
-----

```

DelleMC(conf)#

```

DelleMC(conf)#do show lldp neighbors detail

```

```

=====
Local Interface GigabitEthernet 1/1 has 1 neighbor

```

```

Total Frames Out: 17
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 2 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4)
( 17, 4) ( 18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4)
( 27, 4) ( 28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4)
( 37, 4) ( 38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4)
( 47, 4) ( 48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4)
( 57, 4) ( 58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4)
( 67, 4) ( 68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4)
( 77, 4) ( 78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4)
( 87, 4) ( 88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4)
( 97, 4) ( 98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)
(117, 4) (118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----

```

```
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:03
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/40
Local Port ID: GigabitEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 105 seconds
Time since last information change of this neighbor: 00:00:15
-----
```

```
=====
Local Interface GigabitEthernet 1/3 has 1 neighbor
```

```
Total Frames Out: 18
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 15 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4)
( 17, 4) ( 18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4)
( 27, 4) ( 28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4)
( 37, 4) ( 38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4)
( 47, 4) ( 48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4)
( 57, 4) ( 58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4)
( 67, 4) ( 68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4)
( 77, 4) ( 78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4)
( 87, 4) ( 88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4)
( 97, 4) ( 98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)
(117, 4) (118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----
```

```
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:01
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/38
Local Port ID: GigabitEthernet 1/3
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 107 seconds
Time since last information change of this neighbor: 00:00:13
-----
```

```
=====
Local Interface Management 1/1 has 1 neighbor
```

```
Total Frames Out: 122
Total Frames In: 123
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 0
Total TLVs Discarded: 0
Next packet will be sent after 1 seconds
UnknownTLVList:
The neighbors are given below:
-----
```

```
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:01:e8:8a:e4:c9
Remote Port Subtype: Interface name (5)
Remote Port ID: GigabitEthernet 0/13
Local Port ID: ManagementEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 95 seconds
Time since last information change of this neighbor: 01:03:07
Remote System Name: MANAGEMENT-C5
Remote System Desc: Forcel0 Networks Real Time Operating System
Software: Forcel0 Operating System Version: 1.0. Forcel0 Application
Software Version: 8.3.5.0. Copyright (c) 1999-2010 by Forcel0 Networks,
Inc. Build Time: Sat Dec 11 19:35:32 2010
Existing System Capabilities: Repeater Bridge Router
```

Enabled System Capabilities: Repeater Bridge Router
Remote Port Vlan ID: 1

DellEMC(conf)#

DellEMC(conf)#do show lldp neighbors detail

Local Interface FortyGigE 1/1 has 1 neighbor

Total Frames Out: 17
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 2 seconds
UnknownTLVList:
(9, 4) (10, 4) (11, 4) (12, 4) (13, 4) (14, 4) (15, 4) (16, 4)
(17, 4) (18, 4)
(19, 4) (20, 4) (21, 4) (22, 4) (23, 4) (24, 4) (25, 4) (26, 4)
(27, 4) (28, 4)
(29, 4) (30, 4) (31, 4) (32, 4) (33, 4) (34, 4) (35, 4) (36, 4)
(37, 4) (38, 4)
(39, 4) (40, 4) (41, 4) (42, 4) (43, 4) (44, 4) (45, 4) (46, 4)
(47, 4) (48, 4)
(49, 4) (50, 4) (51, 4) (52, 4) (53, 4) (54, 4) (55, 4) (56, 4)
(57, 4) (58, 4)
(59, 4) (60, 4) (61, 4) (62, 4) (63, 4) (64, 4) (65, 4) (66, 4)
(67, 4) (68, 4)
(69, 4) (70, 4) (71, 4) (72, 4) (73, 4) (74, 4) (75, 4) (76, 4)
(77, 4) (78, 4)
(79, 4) (80, 4) (81, 4) (82, 4) (83, 4) (84, 4) (85, 4) (86, 4)
(87, 4) (88, 4)
(89, 4) (90, 4) (91, 4) (92, 4) (93, 4) (94, 4) (95, 4) (96, 4)
(97, 4) (98, 4)
(99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)
(117, 4) (118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:03
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/40
Local Port ID: FortyGigE 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 105 seconds
Time since last information change of this neighbor: 00:00:15

Local Interface FortyGigE 1/3 has 1 neighbor

Total Frames Out: 18
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 15 seconds
UnknownTLVList:
(9, 4) (10, 4) (11, 4) (12, 4) (13, 4) (14, 4) (15, 4) (16, 4)
(17, 4) (18, 4)
(19, 4) (20, 4) (21, 4) (22, 4) (23, 4) (24, 4) (25, 4) (26, 4)
(27, 4) (28, 4)
(29, 4) (30, 4) (31, 4) (32, 4) (33, 4) (34, 4) (35, 4) (36, 4)
(37, 4) (38, 4)
(39, 4) (40, 4) (41, 4) (42, 4) (43, 4) (44, 4) (45, 4) (46, 4)
(47, 4) (48, 4)
(49, 4) (50, 4) (51, 4) (52, 4) (53, 4) (54, 4) (55, 4) (56, 4)
(57, 4) (58, 4)
(59, 4) (60, 4) (61, 4) (62, 4) (63, 4) (64, 4) (65, 4) (66, 4)
(67, 4) (68, 4)
(69, 4) (70, 4) (71, 4) (72, 4) (73, 4) (74, 4) (75, 4) (76, 4)
(77, 4) (78, 4)
(79, 4) (80, 4) (81, 4) (82, 4) (83, 4) (84, 4) (85, 4) (86, 4)
(87, 4) (88, 4)
(89, 4) (90, 4) (91, 4) (92, 4) (93, 4) (94, 4) (95, 4) (96, 4)
(97, 4) (98, 4)
(99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)

```

(117, 4) (118, 4)
      (119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:01
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/38
Local Port ID: FortyGigE 1/3
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 107 seconds
Time since last information change of this neighbor: 00:00:13
-----

```

```

=====
Local Interface Management 1/1 has 1 neighbor

```

```

Total Frames Out: 122
Total Frames In: 123
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 0
Total TLVs Discarded: 0
Next packet will be sent after 1 seconds
UnknownTLVList:
The neighbors are given below:
-----

```

```

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:01:e8:8a:e4:c9
Remote Port Subtype: Interface name (5)
Remote Port ID: GigabitEthernet 0/13
Local Port ID: ManagementEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 95 seconds
Time since last information change of this neighbor: 01:03:07
Remote System Name: MANAGEMENT-C5
Remote System Desc: Forcel0 Networks Real Time Operating System
Software: Forcel0 Operating System Version: 1.0. Forcel0 Application
Software Version: 8.3.5.0. Copyright (c) 1999-2010 by Forcel0 Networks,
Inc. Build Time: Sat Dec 11 19:35:32 2010
Existing System Capabilities: Repeater Bridge Router
Enabled System Capabilities: Repeater Bridge Router
Remote Port Vlan ID: 1
-----

```

```

DellEMC(conf)#

```

```

DellEMC(conf)#do show lldp neighbors detail

```

```

=====
Local Interface hundredGigE 1/1 has 1 neighbor

```

```

Total Frames Out: 17
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 2 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4)
( 17, 4) ( 18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4)
( 27, 4) ( 28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4)
( 37, 4) ( 38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4)
( 47, 4) ( 48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4)
( 57, 4) ( 58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4)
( 67, 4) ( 68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4)
( 77, 4) ( 78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4)
( 87, 4) ( 88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4)
( 97, 4) ( 98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)
(117, 4) (118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:

```

```
-----
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:03
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/40
Local Port ID: hundredGigE 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 105 seconds
Time since last information change of this neighbor: 00:00:15
-----
```

```
=====
Local Interface hundredGigE 1/3 has 1 neighbor
```

```
Total Frames Out: 18
Total Frames In: 1
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 119
Total TLVs Discarded: 1
Next packet will be sent after 15 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4)
( 17, 4) ( 18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4)
( 27, 4) ( 28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4)
( 37, 4) ( 38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4)
( 47, 4) ( 48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4)
( 57, 4) ( 58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4)
( 67, 4) ( 68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4)
( 77, 4) ( 78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4)
( 87, 4) ( 88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4)
( 97, 4) ( 98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4)
(107, 4) (108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4)
(117, 4) (118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----
```

```
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:01
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 0/38
Local Port ID: hundredGigE 1/3
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 107 seconds
Time since last information change of this neighbor: 00:00:13
-----
```

```
=====
Local Interface Management 1/1 has 1 neighbor
```

```
Total Frames Out: 122
Total Frames In: 123
Total Neighbor information Age outs: 0
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 0
Total TLVs Discarded: 0
Next packet will be sent after 1 seconds
UnknownTLVList:
The neighbors are given below:
-----
```

```
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:01:e8:8a:e4:c9
Remote Port Subtype: Interface name (5)
Remote Port ID: GigabitEthernet 0/13
Local Port ID: ManagementEthernet 1/1
Locally assigned remote Neighbor Index: 1
Remote TTL: 120
Information valid for next 95 seconds
Time since last information change of this neighbor: 01:03:07
Remote System Name: MANAGEMENT-C5
Remote System Desc: Forcel0 Networks Real Time Operating System
Software: Forcel0 Operating System Version: 1.0. Forcel0 Application
Software Version: 8.3.5.0. Copyright (c) 1999-2010 by Forcel0 Networks,
```

```
Inc. Build Time: Sat Dec 11 19:35:32 2010
Existing System Capabilities: Repeater Bridge Router
Enabled System Capabilities: Repeater Bridge Router
Remote Port Vlan ID: 1
```

```
DellEMC(conf)#
```

Example (Detail) for a single interface

```
DellEMC(conf)#show lldp neighbors interface tengigabitethernet 1/54/4 detail
```

```
=====
Local Interface Te 1/54/4 has 1 neighbor
Total Frames Out: 2508
Total Frames In: 3
Total Neighbor information Age outs: 2
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 360
Total TLVs Discarded: 3
Next packet will be sent after 4 seconds
UnknownTLVList:
( 9, 4) (10, 4) (11, 4) (12, 4) (13, 4) (14, 4) (15, 4) (16, 4) (17, 4) (
18, 4)
(19, 4) (20, 4) (21, 4) (22, 4) (23, 4) (24, 4) (25, 4) (26, 4) (27, 4) (
28, 4)
(29, 4) (30, 4) (31, 4) (32, 4) (33, 4) (34, 4) (35, 4) (36, 4) (37, 4) (
38, 4)
(39, 4) (40, 4) (41, 4) (42, 4) (43, 4) (44, 4) (45, 4) (46, 4) (47, 4) (
48, 4)
(49, 4) (50, 4) (51, 4) (52, 4) (53, 4) (54, 4) (55, 4) (56, 4) (57, 4) (
58, 4)
(59, 4) (60, 4) (61, 4) (62, 4) (63, 4) (64, 4) (65, 4) (66, 4) (67, 4) (
68, 4)
(69, 4) (70, 4) (71, 4) (72, 4) (73, 4) (74, 4) (75, 4) (76, 4) (77, 4) (
78, 4)
(79, 4) (80, 4) (81, 4) (82, 4) (83, 4) (84, 4) (85, 4) (86, 4) (87, 4) (
88, 4)
(89, 4) (90, 4) (91, 4) (92, 4) (93, 4) (94, 4) (95, 4) (96, 4) (97, 4) (
98, 4)
(99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4) (107, 4)
(108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4) (117, 4)
(118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
```

```
The neighbors are given below:
```

```
-----
Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:04
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 1/39
Local Port ID: TenGigabitEthernet 1/54/4
Locally assigned remote Neighbor Index: 3
Remote TTL: 120
Information valid for next 117 seconds
Time since last information change of this neighbor: 00:00:03
-----
```

```
DellEMC(conf)#
```

```
DellEMC(conf)#show lldp neighbors interface gigabitethernet 1/1 detail
```

```
=====
Local Interface Gi 1/1 has 1 neighbor
Total Frames Out: 2508
Total Frames In: 3
Total Neighbor information Age outs: 2
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 360
Total TLVs Discarded: 3
Next packet will be sent after 4 seconds
UnknownTLVList:
( 9, 4) (10, 4) (11, 4) (12, 4) (13, 4) (14, 4) (15, 4) (16, 4) (17, 4) (
18, 4)
(19, 4) (20, 4) (21, 4) (22, 4) (23, 4) (24, 4) (25, 4) (26, 4) (27, 4) (
28, 4)
(29, 4) (30, 4) (31, 4) (32, 4) (33, 4) (34, 4) (35, 4) (36, 4) (37, 4) (
38, 4)
(39, 4) (40, 4) (41, 4) (42, 4) (43, 4) (44, 4) (45, 4) (46, 4) (47, 4) (
48, 4)
(49, 4) (50, 4) (51, 4) (52, 4) (53, 4) (54, 4) (55, 4) (56, 4) (57, 4) (
58, 4)
(59, 4) (60, 4) (61, 4) (62, 4) (63, 4) (64, 4) (65, 4) (66, 4) (67, 4) (
68, 4)
(69, 4) (70, 4) (71, 4) (72, 4) (73, 4) (74, 4) (75, 4) (76, 4) (77, 4) (
78, 4)
(79, 4) (80, 4) (81, 4) (82, 4) (83, 4) (84, 4) (85, 4) (86, 4) (87, 4) (
88, 4)
(89, 4) (90, 4) (91, 4) (92, 4) (93, 4) (94, 4) (95, 4) (96, 4) (97, 4) (
98, 4)
(99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4) (107, 4)
(108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4) (117, 4)
(118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
```

```
The neighbors are given below:
```

```

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:04
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 1/39
Local Port ID: GigabitEthernet 1/1
Locally assigned remote Neighbor Index: 3
Remote TTL: 120
Information valid for next 117 seconds
Time since last information change of this neighbor: 00:00:03
-----

DellEMC(conf)#

DellEMC(conf)#show lldp neighbors interface FortyGigE 1/1 detail
=====
Local Interface Fo 1/1 has 1 neighbor
Total Frames Out: 2508
Total Frames In: 3
Total Neighbor information Age outs: 2
Total Multiple Neighbors Detected: 0
Total Frames Discarded: 0
Total In Error Frames: 0
Total Unrecognized TLVs: 360
Total TLVs Discarded: 3
Next packet will be sent after 4 seconds
UnknownTLVList:
( 9, 4) ( 10, 4) ( 11, 4) ( 12, 4) ( 13, 4) ( 14, 4) ( 15, 4) ( 16, 4) ( 17, 4) (
18, 4)
( 19, 4) ( 20, 4) ( 21, 4) ( 22, 4) ( 23, 4) ( 24, 4) ( 25, 4) ( 26, 4) ( 27, 4) (
28, 4)
( 29, 4) ( 30, 4) ( 31, 4) ( 32, 4) ( 33, 4) ( 34, 4) ( 35, 4) ( 36, 4) ( 37, 4) (
38, 4)
( 39, 4) ( 40, 4) ( 41, 4) ( 42, 4) ( 43, 4) ( 44, 4) ( 45, 4) ( 46, 4) ( 47, 4) (
48, 4)
( 49, 4) ( 50, 4) ( 51, 4) ( 52, 4) ( 53, 4) ( 54, 4) ( 55, 4) ( 56, 4) ( 57, 4) (
58, 4)
( 59, 4) ( 60, 4) ( 61, 4) ( 62, 4) ( 63, 4) ( 64, 4) ( 65, 4) ( 66, 4) ( 67, 4) (
68, 4)
( 69, 4) ( 70, 4) ( 71, 4) ( 72, 4) ( 73, 4) ( 74, 4) ( 75, 4) ( 76, 4) ( 77, 4) (
78, 4)
( 79, 4) ( 80, 4) ( 81, 4) ( 82, 4) ( 83, 4) ( 84, 4) ( 85, 4) ( 86, 4) ( 87, 4) (
88, 4)
( 89, 4) ( 90, 4) ( 91, 4) ( 92, 4) ( 93, 4) ( 94, 4) ( 95, 4) ( 96, 4) ( 97, 4) (
98, 4)
( 99, 4) (100, 4) (101, 4) (102, 4) (103, 4) (104, 4) (105, 4) (106, 4) (107, 4)
(108, 4)
(109, 4) (110, 4) (111, 4) (112, 4) (113, 4) (114, 4) (115, 4) (116, 4) (117, 4)
(118, 4)
(119, 4) (120, 4) (121, 4) (122, 4) (123, 4) (124, 4) (125, 4) (126, 4)
The neighbors are given below:
-----

Remote Chassis ID Subtype: Mac address (4)
Remote Chassis ID: 00:00:00:00:00:04
Remote Port Subtype: Interface name (5)
Remote Port ID: TenGigabitEthernet 1/39
Local Port ID: FortyGigE 1/1
Locally assigned remote Neighbor Index: 3
Remote TTL: 120
Information valid for next 117 seconds
Time since last information change of this neighbor: 00:00:03
-----

DellEMC(conf)#

```

show lldp statistics

Display the LLDP statistical information.

Syntax show lldp statistics

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC# show lldp statistics
Total number of neighbors: 300
Last table change time   : Mon Oct 02 16:00:52 2006
Number of Table Inserts  : 1621
Number of Table Deletes  : 200
Number of Table Drops    : 0
Number of Table Age Outs : 400
DellEMC#
```

show management-interface

Display LLDP management interface configuration information.

Syntax `show management-interface`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the Z9000 and S4810.

show running-config lldp

Display the current global LLDP configuration.

Syntax `show running-config lldp`

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S8420T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC# show running-config lldp
!
protocol lldp
  advertise dot1-tlv port-protocol-vlan-id port-vlan-id
  advertise dot3-tlv max-frame-size
  advertise management-tlv system-capabilities system-description
  hello 15
  multiplier 3
  no disable
DellEMC#
```

snmp-notification-interval

Used to configure the value for the lldp notification interval, to throttle lldp notification messages.

Syntax [no] snmp-notification-interval [seconds]

To disable this feature, use the `no snmp-notification-interval` command.

Parameters **seconds** Enter a value from 5 to 3600 seconds.

Defaults 5 seconds

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.5)	Introduced on the S3048-ON, S4048-ON, S4048T-ON, S6010-ON and Z9100-ON

Usage Information SNMP notification for the changes in the lldp remote entry table is throttled by 5 seconds (default), or the configured time set using this command. If more than one notification message is generated within the configured time, only the first one will be sent and the remaining messages are suppressed.

LLDP-MED Commands

The following are the LLDP-MED (Media Endpoint Discovery) commands.

Dell EMC Networking OS LLDP-MED commands are an extension of the set of LLDP TLV advertisement commands.

As defined by ANSI/TIA-1057, LLDP-MED provides organizationally specific TLVs (Type Length Value), so that endpoint devices and network connectivity devices can advertise their characteristics and configuration information. The Organizational Unique Identifier (OUI) for the Telecommunications Industry Association (TIA) is 00-12-BB.

- LLDP-MED Endpoint Device — any device that is on an IEEE 802 LAN network edge, can communicate using IP, and uses the LLDP-MED framework.
- LLDP-MED Network Connectivity Device — any device that provides access to an IEEE 802 LAN to an LLDP-MED endpoint device, and supports IEEE 802.1AB (LLDP) and TIA-1057 (LLDP-MED). The Dell EMC Networking system is an LLDP-MED network connectivity device.

Regarding connected endpoint devices, LLDP-MED provides network connectivity devices with the ability to:

- manage inventory
- identify physical location
- identify network policy

advertise med guest-voice

To advertise a separate limited voice service for a guest user with their own IP telephony handset or other appliances that support interactive voice services, configure the system.

Syntax `advertise med guest-voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med guest-voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [protocol lldp \(Configuration\)](#) — enable LLDP globally.
- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med guest-voice-signaling

To advertise a separate limited voice service for a guest user when the guest voice control packets use a separate network policy than the voice data, configure the system.

Syntax

```
advertise med guest-voice-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}
```

To return to the default, use the `no advertise med guest-voice-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

vlan-id	Enter the VLAN ID. The range is from 1 to 4094.
layer2_priority	Enter the Layer 2 priority. The range is from 0 to 7.
DSCP_value	Enter the DSCP value. The range is from 0 to 63.
priority-tagged number	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults

Unconfigured.

Command Modes

CONFIGURATION (conf-lldp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med location-identification

To advertise a location identifier, configure the system.

Syntax `advertise med location-identification {coordinate-based value | civic-based value | ecs-elin value}`

To return to the default, use the `no advertise med location-identification {coordinate-based value | civic-based value | ecs-elin value}` command.

Parameters

- coordinate-based value** Enter the keywords `coordinate-based` then the coordinated based location in hexadecimal value of 16 bytes.
- civic-based value** Enter the keywords `civic-based` then the civic based location in hexadecimal format. The range is from 6 to 255 bytes.
- ecs-elin value** Enter the keywords `ecs-elin` then the Emergency Call Service (ecs) Emergency Location Identification Number (elin) numeric location string. The range is from 10 to 25 characters.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Version	Description
7.6.1.0	Introduced on the C-Series and E-Series.

Usage Information

- ECS — Emergency call service such as defined by TIA or the national emergency numbering association (NENA)
- ELIN — Emergency location identification number, a valid North America Numbering Plan format telephone number supplied for ECS purposes.

Related Commands

- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med power-via-mdi

To advertise the Extended Power via MDI TLV, configure the system.

Syntax

`advertise med power-via-mdi`

To return to the default, use the `no advertise med power-via-mdi` command.

Defaults

unconfigured.

Command Modes

CONFIGURATION (conf-lldp)

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.

Usage Information

Advertise the Extended Power via MDI on all ports that are connected to an 802.3af powered, LLDP-MED endpoint device.

Related Commands

- [debug lldp interface](#) — debugs LLDP.
- [show lldp neighbors](#) — displays the LLDP neighbors.

advertise med softphone-voice

To advertise softphone to enable IP telephony on a computer so that the computer can be used as a phone, configure the system.

Syntax `advertise med softphone-voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med softphone-voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med streaming-video

To advertise streaming video services for broadcast or multicast-based video, configure the system. This command does not include video applications that rely on TCP buffering.

Syntax `advertise med streaming-video {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med streaming-video {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med video-conferencing

To advertise dedicated video conferencing and other similar appliances that support real-time interactive video, configure the system.

Syntax `advertise med video-conferencing {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med video-conferencing {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-ldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med video-signaling

To advertise video control packets that use a separate network policy than video data, configure the system.

Syntax `advertise med video-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med video-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

-
- [debug lldp interface](#) — debug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med voice

To advertise a dedicated IP telephony handset or other appliances supporting interactive voice services, configure the system.

Syntax `advertise med voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med voice {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters

<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

Related Commands

- [debug lldp interface](#) — de bug LLDP.
- [show lldp neighbors](#) — display the LLDP neighbors.

advertise med voice-signaling

To advertise when voice control packets use a separate network policy than voice data, configure the system.

Syntax `advertise med voice-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}`

To return to the default, use the `no advertise med voice-signaling {vlan-id layer2_priority DSCP_value} | {priority-tagged number}` command.

Parameters	<i>vlan-id</i>	Enter the VLAN ID. The range is from 1 to 4094.
	<i>layer2_priority</i>	Enter the Layer 2 priority. The range is from 0 to 7.
	<i>DSCP_value</i>	Enter the DSCP value. The range is from 0 to 63.
	<i>priority-tagged number</i>	Enter the keywords <code>priority-tagged</code> , the Layer 2 priority, and then the DSCP value.

Defaults Unconfigured.

Command Modes CONFIGURATION (conf-lldp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series and E-Series.

- Related Commands**
- [debug lldp interface](#) — debug LLDP.
 - [show lldp neighbors](#) — display the LLDP neighbors.

Microsoft Network Load Balancing

Network load balancing (NLB) is a clustering functionality that is implemented by Microsoft on Windows 2000 Server and Windows Server 2003 operating systems. Microsoft NLB clustering allows multiple servers running Microsoft Windows to be represented by one MAC and one IP address to provide transparent failover and load-balancing. The Dell EMC Networking OS does not recognize server clusters by default; you must configure NLB functionality on a switch to support server clusters. The maximum NLB entry limit from 8 to 11 is increased and support for more CAM-ACL to increase.

Topics:

- [arp \(for Multicast MAC Address\)](#)
- [mac-address-table static \(for Multicast MAC Address\)](#)
- [ip vlan-flooding](#)

arp (for Multicast MAC Address)

To associate an IP address with a multicast MAC address in the switch when you configure multicast mode of network load balancing (NLB), use address resolution protocol (ARP).

Syntax `arp ip-address multicast-mac-address interface`

To remove an ARP address, use the `no arp ip-address` command.

Parameters	<i>ip-address</i>	Enter an IP address in dotted decimal format.
	<i>multicast-mac-address</i>	Enter a 48-bit hexadecimal address in nn:nn:nn:nn:nn:nn format for the static MAC address to be used to switch multicast traffic.
	<i>interface</i>	Enter any of the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • The interface specified here must be one of the interfaces configured using the <code>{output-range output} interface</code> option with the <code>mac-address-table static</code> command.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.3(0.0)	Added support for association of an IP address with multicast MAC address on the S4810, S4820T, S6000, and Z9000 platforms.

Usage Information For multicast mode of NLB, to associate an IP address with a multicast MAC address in the switch, use address resolution protocol (ARP) by entering the `arp ip-address multicast-mac-address` command in Global configuration mode. This setting causes the multicast MAC address to be mapped to the cluster IP address for NLB mode of operation of the switch.

**Related
Commands**

- `clear arp-cache` — clear dynamic ARP entries from the ARP table.
- `show arp` — display the ARP table.

mac-address-table static (for Multicast MAC Address)

For multicast mode of network load balancing (NLB), configure a static multicast MAC address, associate the multicast MAC address with the VLAN used to switch Layer 2 multicast traffic, and add output ports that will receive multicast streams on the VLAN. To delete a configured static multicast MAC address from the MAC address table on the router, enter the `no mac-address-table static multicast-mac-address` command.

Syntax

```
mac-address-table static multicast-mac-address multicast vlan vlan-id  
range-output {single-interface | interface-list | interface-range}
```

To remove a MAC address, use the `no mac-address-table static multicast-mac-address output interface vlan vlan-id` command.

Parameters

- multicast-mac-address** Enter the 48-bit hexadecimal address in nn:nn:nn:nn:nn:nn format.
- multicast** Enter a vlan port to where L2 multicast MAC traffic is forwarded.
 **NOTE:** Use this option if you want multicast functionality in an L2 VLAN without IGMP protocols.
- output interface** For a multicast MAC address, enter the keyword `output` then one of the following interfaces for which traffic is forwarded:
- For a Port Channel interface, enter the keywords `port-channel` then a number.
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- output-range interface** For a multicast MAC address, enter the keyword `output-range` then one of the following interfaces to indicate a range of ports for which traffic is forwarded:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Management interface, enter the keyword `managementethernet` followed by slot/port numbers.
 - For a Port Channel interface, enter the keywords `port-channel` followed by a number.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
- vlan vlan-id** Enter the keyword `vlan` then a VLAN ID number from 1 to 4094.

Defaults

Not configured.

Command Modes

CONFIGURATION

**Command
History**

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3(0.0)	Added support for multicast MAC address on the MXL platform.

**Example
(Multicast)**

```
mac-address-table static 01:00:5E:01:00:01 {multicast vlan 2 output-
range Te 1/2,Te 1/3
```

ip vlan-flooding

Enable unicast data traffic flooding on VLAN member ports.

Syntax `ip vlan-flooding`
 To disable, use the `no ip vlan-flooding` command.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.3(0.0)	Introduced on the S4810, S4820T, S6000, Z9000, and MXL platforms.

Default Disabled

Usage Information By default this command is disabled. There might be some ARP table entries which are resolved through ARP packets which had Ethernet MAC SA different from MAC information inside the ARP packet. This unicast data traffic flooding occurs only for those packets which use these ARP entries.

Multicast Source Discovery Protocol (MSDP)

Multicast source discovery protocol (MSDP) connects multiple PIM sparse-mode (PIM-SM) domains together.

MSDP peers connect using TCP port 639. Peers send keepalives every 60 seconds. A peer connection is reset after 75 seconds if no MSDP packets are received. MSDP connections are parallel with MBGP connections.

The Dell EMC Networking OS supports MSDP commands on the platform.

Topics:

- [clear ip msdp peer](#)
- [clear ip msdp sa-cache](#)
- [clear ip msdp statistic](#)
- [debug ip msdp](#)
- [ip msdp cache-rejected-sa](#)
- [ip msdp default-peer](#)
- [ip msdp log-adjacency-changes](#)
- [ip msdp mesh-group](#)
- [ip msdp originator-id](#)
- [ip msdp peer](#)
- [ip msdp redistribute](#)
- [ip msdp sa-filter](#)
- [ip msdp sa-limit](#)
- [ip msdp shutdown](#)
- [ip multicast-msdp](#)
- [show ip msdp](#)
- [show ip msdp sa-cache rejected-sa](#)

clear ip msdp peer

Reset the TCP connection to the peer and clear all the peer statistics.

Syntax	<code>clear ip msdp peer {peer address}</code>
Parameters	peer address Enter the peer address in a dotted decimal format (A.B.C.D.)
Defaults	Not configured.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
6.2.1.1	Introduced

clear ip msdp sa-cache

Clears the entire source-active cache, the source-active entries of a particular multicast group, rejected, or local source-active entries.

Syntax `clear ip msdp sa-cache [group-address | rejected-sa | local]`

Parameters

group-address	Enter the group IP address in dotted decimal format (A.B.C.D.).
rejected-sa	Enter the keywords <code>rejected-sa</code> to clear the cache source-active entries that are rejected because the RPF check failed, an SA filter or limit is configured, the RP or MSDP peer is unreachable, or because of a format error.
local	Enter the keyword <code>local</code> to clear out local PIM advertised entries. It applies the redistribute filter (if present) while adding the local PIM SA entries to the SA cache.

Defaults Without any options, this command clears the entire source-active cache.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.1	Introduced on the S4810.
7.8.1.0	Added the <code>local</code> option.
7.7.1.0	Added the <code>rejected-sa</code> option.
6.2.1.1	Introduced

clear ip msdp statistic

Clears the entire source-active cache, the source-active entries of a particular multicast group, rejected, or local source-active entries.

Syntax `clear ip msdp statistic peer peer-address`

Parameters

- peer** Enter the keyword `peer` to clear the MSDP peer entries.
- peer-address*** Enter the IP address of the MSDP peer.

Defaults Without any options, this command clears the entire source-active cache.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
7.8.1.0	Added the <code>local</code> option.
7.7.1.0	Added the <code>rejected-sa</code> option.
6.2.1.1	Introduced

debug ip msdp

Turn on MSDP debugging.

Syntax	<code>debug ip msdp {event peer address packet peer address pim}</code> To turn debugging off, use the <code>no debug ip msdp {event peer address packet peer address pim}</code> command.						
Parameters	<table><tr><td>event peer address</td><td>Enter the keyword <code>event</code> then the peer address in a dotted decimal format (A.B.C.D.).</td></tr><tr><td>packet peer address</td><td>Enter the keyword <code>packet</code> then the peer address in a dotted decimal format (A.B.C.D.).</td></tr><tr><td>pim</td><td>Enter the keyword <code>pim</code> to debug advertisement from PIM.</td></tr></table>	event peer address	Enter the keyword <code>event</code> then the peer address in a dotted decimal format (A.B.C.D.).	packet peer address	Enter the keyword <code>packet</code> then the peer address in a dotted decimal format (A.B.C.D.).	pim	Enter the keyword <code>pim</code> to debug advertisement from PIM.
event peer address	Enter the keyword <code>event</code> then the peer address in a dotted decimal format (A.B.C.D.).						
packet peer address	Enter the keyword <code>packet</code> then the peer address in a dotted decimal format (A.B.C.D.).						
pim	Enter the keyword <code>pim</code> to debug advertisement from PIM.						
Defaults	Not configured.						
Command Modes	EXEC Privilege						
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .						

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

ip msdp cache-rejected-sa

Enable an MSDP cache for the rejected source-active entries.

Syntax	<code>ip msdp cache-rejected-sa {number}</code> To clear the MSDP rejected source-active entries, use the <code>no ip msdp cache-rejected-sa {number}</code> command then the <code>ip msdp cache-rejected-sa {number}</code> command.		
Parameters	<table><tr><td>number</td><td>Enter the number of rejected SA entries to cache. The range is from 0 to 32766.</td></tr></table>	number	Enter the number of rejected SA entries to cache. The range is from 0 to 32766.
number	Enter the number of rejected SA entries to cache. The range is from 0 to 32766.		
Defaults	None		
Command Modes	CONFIGURATION		
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .		

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.4.1.0	Introduced

Related Commands

- [show ip msdp sa-cache rejected-sa](#) — display the rejected SAs in the SA cache.

ip msdp default-peer

Define a default peer from which to accept all source-active (SA) messages.

Syntax

```
ip msdp default-peer peer address [list name]
```

To remove the default peer, use the `no ip msdp default-peer {peer address} list name` command.

Parameters

<i>peer address</i>	Enter the peer address in a dotted decimal format (A.B.C.D.)
<i>list name</i>	Enter the keywords <code>list name</code> and specify a standard access list that contains the RP address that should be treated as the default peer. If no access list is specified, then all SAs from the peer are accepted.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added the <code>list</code> option and removed the <code>prefix-list</code> option.
7.4.1.0	Introduced

Usage Information

If a list is not specified, all SA messages received from the default peer are accepted. You can enter multiple `default peer` commands.

ip msdp log-adjacency-changes

Enable logging of MSDP adjacency changes.

Syntax

`ip msdp log-adjacency-changes`

To disable logging, use the `no ip msdp log-adjacency-changes` command.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

ip msdp mesh-group

To be a member of a mesh group, configure a peer.

Syntax `ip msdp mesh-group {name} {peer address}`
To remove the peer from a mesh group, use the `no ip msdp mesh-group {name} {peer address}` command.

Parameters

- name** Enter a string of up to 16 characters long for as the mesh group name.
- peer address** Enter the peer address in a dotted decimal format (A.B.C.D.).

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

Usage Information An MSDP mesh group is a mechanism for reducing SA flooding, typically in an intra-domain setting. When some subset of a domain's MSDP speakers are fully meshed, they can be configured into a mesh-group. If member X of a mesh-group receives a SA message from an MSDP peer that is also a member of the mesh-group, member X accepts the SA message and forwards it to all of its peers that are not part of the mesh-group. However, member X cannot forward the SA message to other members of the mesh-group.

ip msdp originator-id

Configure the MSDP Originator ID.

S5000

Syntax `ip msdp originator-id {interface}`
To remove the originator-id, use the `no ip msdp originator-id {interface}` command.

Parameters *interface* Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
6.2.1.1	Introduced

ip msdp peer

Configure an MSDP peer.

S5000

Syntax `ip msdp peer peer address [connect-source] [description] [sa-limit number]`
 To remove the MSDP peer, use the `no ip msdp peer peer address [connect-source interface] [description name] [sa-limit number]` command.

Parameters

peer address Enter the peer address in a dotted decimal format (A.B.C.D.).

connect-source interface Enter the keywords `connect-source` then one of the interfaces and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

description name (OPTIONAL) Enter the keyword *description* then a description name (maximum 80 characters) to designate a description for the MSDP peer.

sa-limit number (OPTIONAL) Enter the maximum number of SA entries in SA-cache. The range is from 1 to 100000. .

Defaults See *Parameters* .

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
7.5.1.0	Added option for SA upper limit and the <code>description</code> option.
6.2.1.1	Introduced

Usage Information The `connect-source` option is used to supply a source IP address for the TCP connection. When an interface is specified using the `connect-source` option, the primary configured address on the interface is used.

If the total number of SA messages received from the peer is already larger than the limit when this command is applied, those SA messages continue to be accepted. To enforce the limit in such situation, use the `clear ip msdp peer` command to reset the peer.

Related Commands

- `ip msdp sa-limit` — configure the MSDP SA Limit.
- `clear ip msdp peer` — clear the MSDP peer.
- `show ip msdp` — display the MSDP information.

ip msdp redistribute

Filter local PIM SA entries in the SA cache. SAs which the ACL denies time out and are not refreshed. Until they time out, they continue to reside in the MSDP SA cache.

Syntax	<code>ip msdp redistribute [list <i>acl-name</i>]</code>
Parameters	list <i>acl-name</i> Enter the name of an extended ACL that contains permitted SAs. If you do not use this option, all local entries are blocked.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced

Usage Information	Modifications to the ACL do not have an immediate effect on the sa-cache. To apply the redistribute filter to entries already present in the SA cache, use the <code>clear ip msdp sa-cache local</code> command.
--------------------------	--

ip msdp sa-filter

Permit or deny MSDP source active (SA) messages based on multicast source and/or group from the specified peer.

Syntax	<code>ip msdp sa-filter {in out} peer-address list [access-list name]</code> Remove this configuration using the <code>no ip msdp sa-filter {in out} peer address list [access-list name]</code> command.
Parameters	in Enter the keyword <code>in</code> to enable incoming SA filtering. out Enter the keyword <code>out</code> to enable outgoing SA filtering.

peer-address Enter the peer address of the MSDP peer in a dotted decimal format (A.B.C.D.).

access-list name Enter the name of an extended ACL that contains permitted SAs. If you do not use this option, all local entries are blocked.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the E-Series.

ip msdp sa-limit

Configure the upper limit of source-active (SA) entries in SA-cache.

Syntax `ip msdp sa-limit number`

To return to the default, use the `no ip msdp sa-limit number` command.

Parameters ***number*** Enter the maximum number of SA entries in SA-cache. The range is from 1 to 500000.

Defaults **50000**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.5.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS counts the SA messages originated by itself and those messages received from the MSDP peers. When the total SA messages reach this limit, the subsequent SA messages are dropped (even if they pass RPF checking and policy checking).

If the total number of SA messages is already larger than the limit when this command is applied, those SA messages that are already in Dell EMC Networking OS continue to be accepted. To enforce the limit in such situation, use the `clear ip msdp sa-cache` command.

Related Commands

- [ip msdp peer](#) — configure the MSDP peer.
- [clear ip msdp peer](#) — clear the MSDP peer.
- [show ip msdp](#) — display the MSDP information.

ip msdp shutdown

Administratively shut down a configured MSDP peer.

Syntax	<code>ip msdp shutdown {peer address}</code>
Parameters	peer address Enter the peer address in a dotted decimal format (A.B.C.D.).
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

ip multicast-msdp

Enable MSDP.

Syntax	<code>ip multicast-msdp</code> To exit MSDP, use the <code>no ip multicast-msdp</code> command.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

show ip msdp

Display the MSDP peer status, SA cache, or peer summary.

Syntax	<code>show ip msdp {peer peer address sa-cache summary}</code>
---------------	--

Parameters	peer <i>peer</i> address	Enter the keyword <code>peer</code> then the peer address in a dotted decimal format (A.B.C.D.).
	sa-cache	Enter the keywords <code>sa-cache</code> to display the Source-Active cache.
	summary	Enter the keyword <code>summary</code> to display an MSDP peer summary.

Defaults Not configured.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced

Example

```
DellEMC# show ip msdp peer 100.1.1.1

Peer Addr: 100.1.1.1
  Local Addr: 100.1.1.2(639) Connect Source: none
  State: Established Up/Down Time: 00:00:08
  Timers: KeepAlive 60 sec, Hold time 75 sec
  SourceActive packet count (in/out): 0/0
  SAs learned from this peer: 0
  SA Filtering:
    Input (S,G) filter: none
    Output (S,G) filter: none
DellEMC#
```

Example (Sa-cache)

```
DellEMC# show ip msdp sa-cache
MSDP Source-Active Cache - 1 entries
GroupAddr SourceAddr RPAddr LearnedFrom Expire UpTime
224.1.1.1 172.21.220.10 172.21.3.254 172.21.3.254 102 00:02:52
DellEMC#
```

Example (Summary)

```
DellEMC# show ip msdp summary
Peer Addr Local Addr State Source SA Up/Down
Description
5.5.5.32 6.6.6.32 Established Lo 32 20 00:07:17
Peer1
DellEMC#
```

show ip msdp sa-cache rejected-sa

Display the rejected SAs in the SA cache.

Syntax show ip msdp sa-cache rejected-sa

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
7.4.1.0	Introduced.

Example

```
DelleMC# show ip msdp sa-cache rejected-sa
MSDP Rejected SA Cache 200 rejected SAs received, cache-size 1000
UpTime   GroupAddr SourceAddr  RPAddr   LearnedFrom Reason
00:00:13 225.1.2.1 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.2 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.3 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.4 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.5 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.6 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.7 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.8 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.9 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.10 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.11 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.11 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.12 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.13 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.14 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.15 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.16 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.17 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.18 10.1.1.4    110.1.1.1 13.1.1.2 Rpf-Fail
00:00:13 225.1.2.19 10.1.1.3    110.1.1.1 13.1.1.2 Rpf-Fail
```

Multiple Spanning Tree Protocol (MSTP)

Multiple spanning tree protocol (MSTP), as implemented by the Dell EMC Networking OS, conforms to IEEE 802.1s.

This command supports the Dell EMC Networking OS.

Topics:

- [debug spanning-tree mstp](#)
- [description](#)
- [disable](#)
- [forward-delay](#)
- [hello-time](#)
- [max-age](#)
- [max-hops](#)
- [msti](#)
- [name](#)
- [protocol spanning-tree mstp](#)
- [revision](#)
- [show config](#)
- [show spanning-tree mst configuration](#)
- [show spanning-tree msti](#)
- [spanning-tree](#)
- [spanning-tree msti](#)
- [spanning-tree mstp](#)
- [tc-flush-standard](#)

debug spanning-tree mstp

Enable debugging of the multiple spanning tree protocol and view information on the protocol.

S5000

Syntax `debug spanning-tree mstp [all | bpdu interface {in | out} | events]`

To disable debugging, enter **no debug spanning-tree mstp**

Parameters	all	(OPTIONAL) Enter the keyword <code>all</code> to debug all spanning tree operations.
	bpdu <i>interface</i> {in out}	(OPTIONAL) Enter the keyword <code>bpdu</code> to debug bridge protocol data units (BPDU). (OPTIONAL) Enter the interface keyword along with the type slot/port of the interface you want displayed. Type slot/port options are the following: <ul style="list-style-type: none"> • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. <p>Optionally, enter an <code>in</code> or <code>out</code> parameter with the optional interface:</p> <ul style="list-style-type: none"> • For Receive, enter the keyword <code>in</code>. • For Transmit, enter the keyword <code>out</code>.

events (OPTIONAL) Enter the keyword `events` to debug MSTP events.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC# debug spanning-tree mstp bpdu tengigabitethernet 2/1 ?
in Receive (in)
out Transmit (out)
```

description

Enter a description of the multiple spanning tree.

Syntax `description {description}`
To remove the description, use the `no description {description}` command.

Parameters **description** Enter a description to identify the multiple spanning tree (maximum 80 characters).

Defaults none

Command Modes SPANNING TREE (The prompt is “config-mstp”.)

Command History

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
pre-7.7.1.0	Introduced

Related Commands

[protocol spanning-tree mstp](#) – enters MULTIPLE SPANNING TREE mode on the switch.

disable

Globally disable the multiple spanning tree protocol on the switch.

Syntax

`disable`

To enable MSTP, enter the `no disable` command.

Defaults

Disabled.

Command Modes

MULTIPLE SPANNING TREE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Related Commands

- [protocol spanning-tree mstp](#) — enter MULTIPLE SPANNING TREE mode.

forward-delay

The amount of time the interface waits in the Blocking State and the Learning State before transitioning to the Forwarding State.

Syntax	<code>forward-delay seconds</code> To return to the default setting, use the <code>no forward-delay</code> command.
Parameters	seconds Enter the number of seconds the interface waits in the Blocking State and the Learning State before transiting to the Forwarding State. The range is from 4 to 30. The default is 15 seconds .
Defaults	15 seconds
Command Modes	MULTIPLE SPANNING TREE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Related Commands	<ul style="list-style-type: none">• max-age — change the wait time before MSTP refreshes protocol configuration information.• hello-time — change the time interval between bridge protocol data units (BPDUs).
-------------------------	--

hello-time

Set the time interval between generation of MSTB bridge protocol data units (BPDUs).

Syntax	<code>hello-time seconds</code> To return to the default value, use the <code>no hello-time</code> command.
---------------	--

Parameters	<i>seconds</i>	Enter a number as the time interval between transmission of BPDUs. The range is from 1 to 10. The default is 2 seconds .
Defaults	2 seconds	
Command Modes	MULTIPLE SPANNING TREE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.2(1.0)	Introduced on the Z9500.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	6.5.1.0	Introduced.
Related Commands	<ul style="list-style-type: none"> • forward-delay — amount of time the interface waits in the Blocking State and the Learning State before transitioning to the Forwarding State. • max-age — change the wait time before MSTP refreshes protocol configuration information. 	

max-age

To maintain configuration information before refreshing that information, set the time interval for the MSTB.

Syntax	<code>max-age seconds</code>	To return to the default values, use the <code>no max-age</code> command.
Parameters	<i>max-age</i>	Enter a number of seconds the Dell EMC Networking OS waits before refreshing configuration information. The range is from 6 to 40. The default is 20 seconds .
Defaults	20 seconds	
Command Modes	MULTIPLE SPANNING TREE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Related Commands

- [forward-delay](#) — amount of time the interface waits in the Blocking State and the Learning State before transitioning to the Forwarding State.
- [hello-time](#) — change the time interval between BPDUs.

max-hops

Configure the maximum hop count.

Syntax `max-hops number`

To return to the default values, use the `no max-hops` command.

Parameters **range** Enter a number for the maximum hop count. The range is from 1 to 40. The default is **20**.

Defaults **20 hops**

Command Modes MULTIPLE SPANNING TREE

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.1	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Usage Information

The `max-hops` command is a configuration command that applies to both the IST and all MST instances in the MSTP region. The BPDUs sent out by the root switch set the remaining-hops parameter to the configured value of max-hops. When a switch receives the BPDU, it decrements the received value of the remaining hops and uses the resulting value as remaining-hops in the BPDUs. If the remaining-hops reach zero, the switch discards the BPDU and ages out any information that it holds for the port.

msti

Configure multiple spanning tree instance, bridge priority, and one or multiple VLANs mapped to the MST instance.

Syntax

`msti instance {vlan range | bridge-priority priority}`

To disable mapping or bridge priority, use the `no msti instance {vlan range | bridge-priority priority}` command.

Parameters

msti instance	Enter the MSTP instance. The range is from zero (0) to 63.
vlan range	Enter the keyword <code>vlan</code> then the identifier range value. The range is from 1 to 4094.
bridge-priority priority	Enter the keywords <code>bridge-priority</code> then a value in increments of 4096 as the bridge priority. The range is from zero (0) to 61440. Valid priority values are: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440. All other values are rejected.

Defaults

default bridge-priority is **32768**.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Usage Information

By default, all VLANs are mapped to MST instance zero (0) unless you use the `vlan range` command to map it to a non-zero instance.

name

The name you assign to the multiple spanning tree region.

Syntax

`name region-name`

To remove the region name, use the `no name` command.

Parameters

region-name Enter the MST region name. The range is 32 character limit.

Defaults

No default name.

Command Modes

MULTIPLE SPANNING TREE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Usage Information

For two MSTP switches to be within the same MSTP region, the switches must share the same region name (including matching case).

- Related Commands**
- [msti](#) — map the VLAN(s) to an MST instance.
 - [revision](#) — assign the revision number to the MST configuration.

protocol spanning-tree mstp

To enable and configure the multiple spanning tree group, enter MULTIPLE SPANNING TREE mode.

Syntax `protocol spanning-tree mstp`
To disable the multiple spanning tree group, use the `no protocol spanning-tree mstp` command.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information MSTP is not enabled when you enter MULTIPLE SPANNING TREE mode. To enable MSTP globally on the switch, enter the `no disable` command while in MULTIPLE SPANNING TREE mode.

For more information about the multiple spanning tree protocol, refer to the *Dell EMC Networking OS Configuration Guide*.

Example

```
DellEMC(conf)# protocol spanning-tree mstp
DellEMC(config-mstp)#no disable
```

- Related Commands**
- [disable](#) — disable multiple spanning tree.

revision

The revision number for the multiple spanning tree configuration.

Syntax	<code>revision range</code> To return to the default values, use the <code>no revision</code> command.
Parameters	range Enter the revision number for the MST configuration. The range is from 0 to 65535. The default is 0 .
Defaults	0
Command Modes	MULTIPLE SPANNING TREE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information	For two MSTP switches to be within the same MST region, the switches must share the same revision number.
Related Commands	<ul style="list-style-type: none">• <code>msti</code> — map the VLAN(s) to an MST instance.• <code>name</code> — assign the region name to the MST region.

show config

View the current configuration for the mode. Only non-default values are shown.

Syntax	<code>show config</code>
Command Modes	MULTIPLE SPANNING TREE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-mstp)# show config
!
protocol spanning-tree mstp
  no disable
  name CustomerSvc
  revision 2
  MSTI 10 VLAN 101-105
  max-hops 5
DellEMC(conf-mstp)#
```

show spanning-tree mst configuration

View the multiple spanning tree configuration.

Syntax `show spanning-tree mst configuration`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

Enable the multiple spanning tree protocol prior to using this command.

Example

```
DellEMC# show spanning-tree mst configuration
MST region name: CustomerSvc
Revision: 2
MSTI VID
 10 101-105
DellEMC#
```

show spanning-tree msti

View the multiple spanning tree instance.

Syntax

`show spanning-tree msti [instance-number [brief]] [guard]`

Parameters

- instance-number*** (Optional) Enter the multiple spanning tree instance number. The range is from 0 to 63.
- brief*** (Optional) Enter the keyword `brief` to view a synopsis of the MST instance.
- guard*** (Optional) Enter the keyword `guard` to display the type of guard enabled on an MSTP interface and the current port state.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Support for the optional keyword <code>guard</code> was added on the C-Series, S-Series, and E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Expanded to display the port error disable state (EDS) loopback BPDU inconsistency causes.

Usage Information

Enable the multiple spanning tree protocol prior to using this command.

Example

```
DelleMC# show spanning-tree msti 10
MSTI 10 VLANs mapped 101-105

Bridge Identifier has priority 32768, Address 0001.e802.3506
Configured hello time 2, max age 20, forward delay 15, max hops 5
Current root has priority 16384, Address 0001.e800.0a5c
Number of topology changes 0, last change occurred 3058087

Port 82 (TenGigabitEthernet 2/1) is designated Forwarding
Port path cost 0, Port priority 128, Port Identifier 128.82
Designated root has priority 16384, address 0001.e800.0a:5c
Designated bridge has priority 32768, address 0001.e802.35:06
Designated port id is 128.82, designated path cost
Number of transitions to forwarding state 1
BPDU (Mrecords): sent 1109, received 0
The port is not in the portfast mode

Port 88 (TenGigabitEthernet 2/6) is root Forwarding
Port path cost 0, Port priority 128, Port Identifier 128.88
Designated root has priority 16384, address 0001.e800.0a:5c
Designated bridge has priority 16384, address 0001.e800.0a:5c
Designated port id is 128.88, designated path cost
Number of transitions to forwarding state 4
BPDU (Mrecords): sent 19, received 1103
The port is not in the portfast mode

Port 89 (TenGigabitEthernet 2/7) is alternate Discarding
Port path cost 0, Port priority 128, Port Identifier 128.89
Designated root has priority 16384, address 0001.e800.0a:5c
Designated bridge has priority 16384, address 0001.e800.0a:5c
Designated port id is 128.89, designated path cost
Number of transitions to forwarding state 3
BPDU (Mrecords): sent 7, received 1103
The port is not in the portfast mode
```

Example (EDS and LBK)

The bold line shows the loopback BPDU inconsistency (LBK_INC).

```
DelleMC# show spanning-tree msti 0 brief
MSTI 0 VLANs mapped 1-4094

Executing IEEE compatible Spanning Tree Protocol
Root ID Priority 32768, Address 0001.e801.6aa8
Root Bridge hello time 2, max age 20, forward delay 15, max hops 20
Bridge ID Priority 32768, Address 0001.e801.6aa8
We are the root of MSTI 0 (CIST)
Configured hello time 2, max age 20, forward delay 15, max hops 20
CIST regional root ID Priority 32768, Address 0001.e801.6aa8
CIST external path cost 0
```

```

Interface                               Designated
Name   PortID   Prio Cost Sts Cost Bridge ID   PortID
-----
Te 1/1 128.257 128 20000 EDS 0 32768 0001.e801.6aa8 128.257

Interface
Name Role PortID Prio Cost Sts Cost Link-type Edge Boundary
-----
Te 1/1 ErrDis 128.257 128 20000 EDS 0 P2P No No

DellEMC# show spanning-tree msti 0
MSTI 0 VLANs mapped 1-4094

Root Identifier has priority 32768, Address 0001.e801.6aa8
Root Bridge hello time 2, max age 20, forward delay 15, max hops 20
Bridge Identifier has priority 32768, Address 0001.e801.6aa8
Configured hello time 2, max age 20, forward delay 15, max hops 20
We are the root of MSTI 0 (CIST)
Current root has priority 32768, Address 0001.e801.6aa8
CIST regional root ID Priority 32768, Address 0001.e801.6aa8
CIST external path cost 0
Number of topology changes 1, last change occurred 00:00:15 ago on Te 1/1

Port 257 (TenGigabitEthernet 1/1) is LBK_INC Discarding
Port path cost 20000, Port priority 128, Port Identifier 128.257
Designated root has priority 32768, address 0001.e801.6aa8
Designated bridge has priority 32768, address 0001.e801.6aa8
Designated port id is 128.257, designated path cost 0
Number of transitions to forwarding state 1
BPDU (MRecords): sent 21, received 9
The port is not in the Edge port mode

```

Usage Information

The following describes the `show spanning-tree msti 5 guard` command shown in the following example.

Field	Description
Interface Name	MSTP interface.
Instance	MSTP instance.
Sts	Port state: root-inconsistent (INCON Root), forwarding (FWD), listening (LIS), blocking (BLK), or shut down (EDS Shut).
Guard Type	Type of STP guard configured (Root, Loop, or BPDU guard).

Example (Guard)

```

DellEMC# show spanning-tree msti 5 guard
Interface
Name Instance Sts Guard type
-----
Te 1/1 5 INCON(Root) Rootguard
Te 1/2 5 FWD Loopguard
Te 1/3 5 EDS(Shut) Bpduguard

```

spanning-tree

Enable the multiple spanning tree protocol on the interface.

Syntax

`spanning-tree`

To disable the multiple spanning tree protocol on the interface, use the `no spanning-tree` command.

Parameters

spanning-tree Enter the keywords `spanning-tree` to enable the MSTP on the interface.

Defaults	Enable.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

spanning-tree msti

Configure multiple spanning tree instance cost and priority for an interface.

Syntax	<code>spanning-tree msti <i>instance</i> {cost <i>cost</i> priority <i>priority</i>}</code>	
Parameters	msti <i>instance</i>	Enter the keyword <code>msti</code> and the MST instance number. The range is from zero (0) to 63.
	cost <i>cost</i>	(OPTIONAL) Enter the keyword <code>cost</code> then the port cost value. The range is from 1 to 200000. The defaults are: <ul style="list-style-type: none"> • 100 Mb/s Ethernet interface = 200000 • 1-Gigabit Ethernet interface = 20000 • 10-Gigabit Ethernet interface = 2000 • Port Channel interface with one 100 Mb/s Ethernet = 200000 • Port Channel interface with one 1 Gigabit Ethernet = 20000 • Port Channel interface with one 10 Gigabit Ethernet = 2000 • Port Channel with two 1 Gigabit Ethernet = 18000 • Port Channel with two 10 Gigabit Ethernet = 1800 • Port Channel with two 100 Mbps Ethernet = 180000
	priority <i>priority</i>	Enter keyword <code>priority</code> then a value in increments of 16 as the priority. The range is from 0 to 240. The default is 128 .
Defaults	<ul style="list-style-type: none"> • cost = depends on the interface type • priority = 128 	

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

spanning-tree mstp

Configures a Layer 2 MSTP interface as an edge port with (optionally) a bridge protocol data unit (BPDU) guard, or enables the root guard or loop guard feature on the interface.

Syntax `spanning-tree mstp {edge-port [bpduguard [shutdown-on-violation]] | loopguard | rootguard}`

Parameters	edge-port	Enter the keywords <code>edge-port</code> to configure the interface as a multiple spanning tree edge port.
	bpduguard	(OPTIONAL) Enter the keyword <code>portfast</code> to enable Portfast to move the interface into forwarding mode immediately after the root fails. Enter the keyword <code>bpduguard</code> to disable the port when it receives a BPDU.
	shutdown-on-violation	(OPTIONAL) Enter the keywords <code>shutdown-on-violation</code> to hardware disable an interface when a BPDU is received and the port is disabled.
	loopguard	(C-, S-, and E-Series TeraScale only) Enter the keyword <code>loopguard</code> to enable STP loop guard on an MSTP port or port-channel interface.
	rootguard	(C-, S-, and E-Series TeraScale only) Enter the keyword <code>rootguard</code> to enable root guard on an MSTP port or port-channel interface.

Command Modes INTERFACE

Command History	Version	Description
	9.7(0.0)	Introduced on the S6000-ON.
	9.5(0.1)	Introduced on the Z9500.
	8.4.2.1	Introduced the <code>loopguard</code> and <code>rootguard</code> options on the E-Series TeraScale, C-Series, and S-Series.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.1	Introduced on the S4810.
	8.2.1.0	Introduced the <code>hardware shutdown-on-violation</code> option.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	6.1.1.0	Added support for the BPDU guard.

Usage Information

On an MSTP switch, a port configured as an edge port immediately transitions to the forwarding state. Only ports connected to end-hosts should be configured as an edge port. Consider an edge port similar to a port with `spanning-tree portfast` enabled.

If you do not enable `shutdown-on-violation`, BPDUs are still sent to the RPM CPU.

Root guard and loop guard cannot be enabled at the same time on a port. For example, if you configure loop guard on a port on which root guard is already configured, the following error message is displayed: %
Error: RootGuard is configured. Cannot configure LoopGuard.

When used in an MSTP network, if root guard blocks a boundary port in the CIST, the port is also blocked in all other MST instances.

Enabling Portfast BPDU guard and loop guard at the same time on a port results in a port that remains in a blocking state and prevents traffic from flowing through it. For example, when Portfast BPDU guard and loop guard are both configured:

- If a BPDU is received from a remote device, BPDU guard places the port in an err-disabled blocking state and no traffic is forwarded on the port.
- If no BPDU is received from a remote device, loop guard places the port in a loop-inconsistent blocking state and no traffic is forwarded on the port.

tc-flush-standard

Enable the MAC address flushing after receiving every topology change notification.

Syntax	<code>tc-flush-standard</code> To disable, use the <code>no tc-flush-standard</code> command.										
Defaults	Disabled.										
Command Modes	CONFIGURATION										
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .										
	<table border="1"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.
Version	Description										
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.										
9.10(0.0)	Introduced on the S3148.										
9.10(0.0)	Introduced on the S6100-ON.										
9.8(2.0)	Introduced on the S3100 series.										

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced

**Usage
Information**

By default, Dell EMC Networking OS implements an optimized flush mechanism for MSTP. This mechanism helps in flushing the MAC addresses only when necessary (and less often) allowing for faster convergence during topology changes. However, if a standards-based flush mechanism is needed, this `knob` command can be turned on to enable flushing MAC addresses after receiving every topology change notification.

Multicast

The multicast commands are supported by Dell EMC Networking OS.

Topics:

- [IPv4 Multicast Commands](#)
- [clear ip mroute](#)
- [ip mroute](#)
- [ip multicast-limit](#)
- [ip multicast-routing](#)
- [mtrace](#)
- [show ip mroute](#)
- [show ip rpf](#)
- [IPv6 Multicast Commands](#)
- [ip multicast-limit](#)

IPv4 Multicast Commands

The following section contains the IPv4 multicast commands.

clear ip mroute

Clear learned multicast routes on the multicast forwarding table. To clear the protocol-independent multicast (PIM) tree information base, use the `clear ip pim tib` command.

S5000

Syntax	<code>clear ip mroute [vrf vrf-name] {group-address [source-address] * snooping}</code>
Parameters	<p>vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure this setting on that VRF.</p> <p> NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.</p> <p>group-address [source-address] Enter the multicast group address and source address (if desired), in dotted decimal format, to clear information on a specific group.</p> <p>* Enter * to clear all multicast routes.</p> <p>snooping Enter the keyword <code>snooping</code> to delete multicast snooping route table entries.</p>
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .
Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Added support for keyword <code>snooping</code> on the Z9000, S4810, and S4820T.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series.

E-Series legacy command

Related Commands

- `show ip pim tib` — show the PIM tree information base.

ip mroute

Assign a static mroute.

S5000

Syntax

```
ip mroute [vrf vrf-name] destination mask {ip-address | null 0| {{bgp| ospf} process-id | isis | rip | static} {ip-address | tag | null 0}} [distance]
```

To delete a specific static mroute, use the `no ip mroute [vrf vrf-name] destination mask {ip-address | null 0| {{bgp| ospf} process-id | isis | rip | static} {ip-address | tag | null 0}} [distance]` command.

To delete all mroutes matching a certain mroute, use the `no ip mroute [vrf vrf-name] destination mask` command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to assign a static mroute to that VRF.  NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
destination	Enter the IP address in dotted decimal format of the destination device.
mask	Enter the mask in slash prefix formation (/x) or in dotted decimal format.
null 0	(OPTIONAL) Enter the keyword <code>null</code> then zero (0).
[protocol [process-id tag] ip-address]	(OPTIONAL) Enter one of the routing protocols: <ul style="list-style-type: none"> • Enter the BGP as-number then the IP address in dotted decimal format of the reverse path forwarding (RPF) neighbor. The range is from 1 to 65535. • Enter the OSPF process identification number then the IP address in dotted decimal format of the RPF neighbor. the range is from 1 to 65535. • Enter the IS-IS alphanumeric tag string then the IP address in dotted decimal format of the RPF neighbor.

- Enter the RIP IP address in dotted decimal format of the RPF neighbor.

static ip-address (OPTIONAL) Enter the Static IP address in dotted decimal format of the RPF neighbor.

ip-address (OPTIONAL) Enter the IP address in dotted decimal format of the RPF neighbor.

distance (OPTIONAL) Enter a number as the distance metric assigned to the mroute. The range is from 0 to 255.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
E-Series legacy command	

Related Commands

- [show ip mroute](#) — display the routing table.

ip multicast-limit

To limit the number of multicast entries on the system, use this feature.

S5000

Syntax `ip multicast-limit [vrf vrf-name] limit`

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to limit the number of multicast on the VRF.

limit Enter the desired maximum number of multicast entries on the system. The range is from 1 to 16000.

Defaults The default is 4000.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

This feature allows you to limit the number of multicast entries on the system. This number is the total of all the multicast entries on all line cards in the system. On each line card, the multicast module only installs the maximum number of entries, depending on the configured CAM profile.

To store multicast routes, use the IN-L3-McastFib CAM partition. It is a separate hardware limit that exists per port-pipe. This hardware space limitation can supersede any software-configured limit. The opposite is also true, the CAM partition might not be exhausted at the time the system-wide route limit set by the `ip multicast-limit` command is reached.

Related Commands

- [show ip igmp groups](#) — display the IGMP groups.

ip multicast-routing

Enable IP multicast forwarding.

S5000

Syntax	<code>ip multicast-routing [vrf vrf-name]</code> To disable multicast forwarding, use the <code>no ip multicast-routing [vrf vrf-name]</code> command.
Defaults	Disabled.
Parameters	vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable IP multicast forwarding on that VRF.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
E-Series legacy command	

Usage Information

After you enable multicast, you can enable IGMP and PIM on an interface. In INTERFACE mode, enter the `ip pim sparse-mode` command to enable IGMP and PIM on the interface.

Related Commands

- [ip pim sparse-mode](#) — enable IGMP and PIM on an interface.

mtrace

Trace a multicast route from the source to the receiver.

Syntax `mtrace [vrf vrf-name] {source-address/hostname} [destination-address/hostname] [group-address/hostname]`

Parameters

vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF. If VRF name is not mentioned, the default VRF will be used. Mtrace is not supported for management VRF.
source-address/hostname	Enter the source IP address in dotted decimal format (A.B.C.D). This is a unicast address of the beginning of the path to be traced.
destination-address/hostname	Enter the destination (receiver) IP address in dotted decimal format (A.B.C.D). If omitted, the mtrace starts from the system at which the command is typed.
group-address/hostnae	Enter the multicast group address in dotted decimal format (A.B.C.D). If group address is not given then software shall invokes a weak mtrace. A weak mtrace is one that follows the RPF path to the source, regardless of whether any router along the path has multicast routing table state

Command Modes EXEC Privilege

Command History

Version	Description
9.11.0.0	Re-introduced the mtrace command on the Dell EMC Networking OS.
7.5.1.0	Expanded to support originator.
7.4.1.0	Expanded to support the intermediate (transit) router.

Usage Information

Mtrace is an IGMP based protocol that provides a multicast trace route facility and is implemented according to the IETF draft “A *trace route* facility for IP Multicast” (draft-fenner-traceroute-ipm-01.txt). Dell EMC Networking OS supports the Mtrace client and transit functionality.

As an Mtrace client, Dell EMC Networking OS transmits Mtrace queries, receives, parses, and prints out the details in the response packet received.

A transit or intermediate router, forwards mtrace requests to the RPF neighbor after appending its response block to the packet. In case it is the first hop router, it sends a response.

As an Mtrace transit or intermediate router, Dell EMC Networking OS returns the response to Mtrace queries. After receiving the Mtrace request, Dell EMC Networking OS computes the RPF neighbor for the source, fills in the request and the forwards the request to the RPF neighbor.

Example

```
R1>mtrace 103.103.103.3 1.1.1.1 226.0.0.3
Type Ctrl-C to abort.

Querying reverse path for source 103.103.103.3 to destination 1.1.1.1
via group 226.0.0.3
From source (?) to destination (?)

-----
|Hop|      OIF IP          |Proto| Forwarding Code |Source Network/Mask|
-----
  0  1.1.1.1             -->   Destination
 -1  1.1.1.1             PIM   Reached RP/Core  103.103.103.0/24
 -2  101.101.101.102    PIM   -              103.103.103.0/24
 -3  2.2.2.1             PIM   -              103.103.103.0/24
 -4  103.103.103.3      -->   Source
-----
```

The mtrace command traverses the path of the response data block in the reverse direction of the multicast data traffic. The mtrace command traverses the reverse path to the source from the destination. As a result, the tabular output of the mtrace command displays the destination details in the first row, followed by the RPF router details along the path in the consequent rows, and finally the source details in the last row. The tabular output contains the following columns:

- Hop — a hop number(counted negatively to indicate reverse-path)
- OIF IP — outgoing interface address
- Proto — multicast routing protocol
- Forwarding code — error code as present in the response blocks
- Source Network/Mask — source mask

show ip mroute

View the multicast routing table.

Syntax

```
show ip mroute [vrf vrf-name] [static | group-address [source-address] |
count | snooping [vlan vlan-id] [group-address [source-address]] | summary
| vlt [group-address [source-address] | count]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.
 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.
- static** (OPTIONAL) Enter the keyword `static` to view static multicast routes.
- group-address [source-address]** (OPTIONAL) Enter the multicast group-address to view only routes associated with that group. Enter the source-address to view routes with that group-address and source-address.
- count** (OPTIONAL) Enter the keyword `count` to view the number of multicast routes and packets.
- snooping [vlan vlan-id] [group-address [source-address]]** Enter the keyword `snooping` to display information on the multicast routes PIM-SM snooping discovers.
 Enter a VLAN ID to limit the information displayed to the multicast routes PIM-SM snooping discovers on a specified VLAN. The VLAN ID range is from 1 to 4094.

Enter a multicast group address and, optionally, a source multicast address in dotted decimal format (A.B.C.D) to limit the information displayed to the multicast routes PIM-SM snooping discovers for a specified multicast group and source.

summary (OPTIONAL) Enter the keyword `summary` to view a summary of all routes.

vlt (OPTIONAL) Enter the keyword `vlt` to view multicast routes with a spanned incoming interface. Enter a multicast group address in dotted decimal format (A.B.C.D) to limit the information displayed to the multicast routes for a specified multicast group and optionally a source multicast address in dotted decimal format (A.B.C.D) to limit the information displayed for a specified multicast source. Enter the keyword `count` to display the total number of multicast routes with the spanned IIF.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2.(0.0)	Added support for keyword <code>vlt</code> to the Z9000, S4810, and S4820T.
8.4.1.1	Support for the keyword <code>snooping</code> and the optional <code>vlan vlan-id, group-address, and source-address</code> parameters were added on E-Series.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Example (Static)

```
DellEMC# show ip mroute static
Mroute: 23.23.23.0/24, interface: Lo 2
Protocol: static, distance: 0, route-map: none, last change: 00:00:23
```

Example (Snooping)

```
DellEMC# show ip mroute snooping
IPv4 Multicast Snooping Table
(*, 224.0.0.0), uptime 17:46:23
  Incoming vlan: Vlan 2
  Outgoing interface list:
```

```

TenGigabitEthernet 4/13
(*, 225.1.2.1), uptime 00:04:16
  Incoming vlan: Vlan 2
  Outgoing interface list:
    TenGigabitEthernet 4/11
    TenGigabitEthernet 4/13

(165.87.1.7, 225.1.2.1), uptime 00:03:17
  Incoming vlan: Vlan 2
  Outgoing interface list:
    TenGigabitEthernet 4/11
    TenGigabitEthernet 4/13
    TenGigabitEthernet 4/20

```

Example (VLT)

```

DellEMC# show ip mroute vlt
IP Multicast Routing Table
Flags: S - Synced
(*, 225.1.1.1), uptime 00:39:33 flags: S
Incoming interface: Vlan 10
Spanned outgoing interface list:
  Vlan 20 (S)
  Vlan 30

(50.1.1.2, 225.1.1.1), uptime 00:39:33 flags: S
Incoming interface: Vlan 10
Spanned outgoing interface list:
  Vlan 20 (S)

```

Usage Information

The following describes the `show ip mroute` command shown in the following example.

Field	Description
(S, G)	Displays the forwarding entry in the multicast route table.
uptime	Displays the amount of time the entry has been in the multicast forwarding table.
Incoming interface	Displays the reverse path forwarding (RPF) information towards the source for (S,G) entries and the RP for (*,G) entries.
Outgoing interface list:	Lists the interfaces that meet one of the following: <ul style="list-style-type: none"> • a directly connected member of the Group • statically configured member of the Group • received a (*,G) or (S,G) Join message

Example

```

DellEMC# show ip mroute

IP Multicast Routing Table

(*, 224.10.10.1), uptime 00:05:12
  Incoming interface: TenGigabitEthernet 3/12
  Outgoing interface list:
    TenGigabitEthernet 3/13

(1.13.1.100, 224.10.10.1), uptime 00:04:03
  Incoming interface: TenGigabitEthernet 3/4
  Outgoing interface list:
    TenGigabitEthernet 3/12
    TenGigabitEthernet 3/13

(*, 224.20.20.1), uptime 00:05:12
  Incoming interface: TenGigabitEthernet 3/12
  Outgoing interface list:
    TenGigabitEthernet 3/4

```

show ip rpf

View reverse path forwarding.

Syntax `show ip rpf`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

E-Series legacy command

Usage Information Network administrators use static mroutes to control the reach-ability of the multicast sources. If a PIM-registered multicast source is reachable using static mroute as well as unicast route, the distance of each route is examined and the route with shorter distance is the one the PIM selects for reach-ability.

 **NOTE:** The default distance of mroutes is zero (0) and is CLI configurable on a per route basis.

Example

```
DelleMC# show ip rpf
RPF information for 10.10.10.9
  RPF interface: Te 3/4
  RPF neighbor: 165.87.31.4
  RPF route/mask: 10.10.10.9/255.255.255.255
  RPF type: unicast
```

IPv6 Multicast Commands

.This section describes the IPv6 multicast commands.

ip multicast-limit

To limit the number of multicast entries on the system, use this feature.

S5000

Syntax	<code>ip multicast-limit [vrf vrf-name] limit</code>	
Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to limit the number of multicast on the VRF.
	limit	Enter the desired maximum number of multicast entries on the system. The range is from 1 to 16000.
Defaults	The default is 4000.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information This feature allows you to limit the number of multicast entries on the system. This number is the total of all the multicast entries on all line cards in the system. On each line card, the multicast module only installs the maximum number of entries, depending on the configured CAM profile.

To store multicast routes, use the IN-L3-McastFib CAM partition. It is a separate hardware limit that exists per port-pipe. This hardware space limitation can supersede any software-configured limit. The opposite is also true, the CAM partition might not be exhausted at the time the system-wide route limit set by the `ip multicast-limit` command is reached.

Related Commands

- [show ip igmp groups](#) — display the IGMP groups.

Neighbor Discovery Protocol (NDP)

The neighbor discovery protocol for IPv6 is defined in RFC 2461 as part of the Stateless Address Autoconfiguration protocol. It replaces the Address Resolution Protocol used with IPv4. NDP defines mechanisms for solving the following problems:

- Router discovery — hosts can locate routers residing on a link
- Prefix discovery — hosts can discover address prefixes for the link
- Parameter discovery
- Address autoconfiguration — configuration of addresses for an interface
- Address resolution — mapping from IP address to link-layer address
- Next-hop determination
- Neighbor unreachability detection (NUD) — determine that a neighbor is no longer reachable on the link.
- Duplicate address detection (DAD) — allow a node to check whether a proposed address is already in use.
- Redirect — the router can inform a node about a better first-hop.

NDP uses the following five ICMPv6 packet types in its implementation:

- Router Solicitation
- Router Advertisement
- Neighbor Solicitation
- Neighbor Advertisement
- Redirect

Topics:

- [clear ipv6 neighbors](#)
- [ipv6 nd mtu](#)
- [ipv6 neighbor](#)
- [show ipv6 neighbors](#)
- [IPv6 Router Advertisement \(RA\) Guard](#)

clear ipv6 neighbors

Delete all entries in the IPv6 neighbor discovery cache or neighbors of a specific interface. Static entries are not removed using this command.

S5000

Syntax	<code>clear ipv6 neighbors [vrf vrf-name] [ipv6-address interface]</code>	
Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to clear the neighbor corresponding to that VRF.  NOTE: If you do not specify this option, the neighbors in the default VRF are cleared.
	ipv6-address	Enter the IPv6 address of the neighbor in the <code>x::x::x</code> format to remove a specific IPv6 neighbor.  NOTE: The <code>::</code> notation specifies successive hexadecimal fields of zero.
	interface interface	To remove all neighbor entries learned on a specific interface, enter the keyword <code>interface</code> then the interface type and slot/port or number information of the interface:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

ipv6 nd mtu

Configure an IPv6 neighbor discovery.

Syntax `ipv6 nd mtu number`

Parameters **mtu *number*** Set the MTU advertisement value in Routing Prefix Advertisement packets. The range is 1280 to 9234.

Defaults none

Command Modes INTERFACE

Command History

Version	Description
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
8.3.1.0	Introduced

Usage Information

The `ip nd mtu` command sets the value advertised to routers. It does not set the actual MTU rate. For example, if `ip nd mtu` is set to 1280, the interface still passes 1500-byte packets.

The `mtu` command sets the actual frame size passed and can be larger than the advertised MTU. If the `mtu` setting is larger than the `ip nd mtu` command, an error message is sent, but the configuration is accepted. The error message is: `% Error: nd ra mtu is greater than link mtu, link mtu will be used.`

Related Commands

`mtu` – sets the maximum link MTU (frame size) for an Ethernet interface.

ipv6 neighbor

Configure a static entry in the IPv6 neighbor discovery.

S5000

Syntax

```
ipv6 neighbor [vrf vrf-name] {ipv6-address} {interface interface}
{hardware_address}
```

To remove a static IPv6 entry from the IPv6 neighbor discovery, use the `no ipv6 neighbor [vrf vrf-name] {ipv6-address} {interface interface}` command.

Parameters

vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to install IPv6 routes in that VRF.
ipv6-address	Enter the IPv6 address of the neighbor in the <code>x::x::x</code> format.  NOTE: The <code>::</code> notation specifies successive hexadecimal fields of zero.
interface interface	Enter the keyword <code>interface</code> then the interface type and slot/port or number information: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a Null interface, enter the keyword <code>null</code> then the Null interface number.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.• For a tunnel interface, enter the keyword <code>tunnel</code> then the tunnel interface number. The range is from 1 to 16383.
hardware_addresses	Enter a 48-bit hardware MAC address in <code>nn:nn:nn:nn:nn:nn</code> format.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

Usage Information

Neighbor Discovery Protocol for IPv6 is defined in RFC 2461 as part of the Stateless Address Autoconfiguration protocol. It replaces the Address Resolution Protocol used with IPv4. It defines mechanisms for solving problems, such as:

- Router discovery: Hosts can locate routers residing on a link.
- Prefix discovery: Hosts can discover address prefixes for the link.
- Parameter discovery .
- Address autoconfiguration — configuration of addresses for an interface .
- Address resolution — mapping from IP address to link-layer address.
- Next-hop determination.
- Neighbor Unreachability Detection (NUD): Determine that a neighbor is no longer reachable on the link.
- Duplicate Address Detection (DAD): Allow a node to check whether a proposed address is already in use.
- Redirect: The router can inform a node about a better first-hop.

Use the `ipv6 neighbor` command to manually configure the IPv6 address of a neighbor to be discovered by the switch.

show ipv6 neighbors

Display IPv6 discovery information. Entering the command without options shows all IPv6 neighbor addresses stored on the control processor (CP).

S5000

Syntax

```
show ipv6 neighbors [vrf vrf-name] [ipv6-address| interface interface]
```

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` and the name of the VRF to display the neighbors corresponding to that VRF.
-  **NOTE:** If you do not specify this option, neighbors corresponding to the default VRF are displayed.
- ipv6-address** Enter the IPv6 address of the neighbor in the `x::x::x::x` format.
-  **NOTE:** The `::` notation specifies successive hexadecimal fields of zero.
- interface interface** Enter the keyword `interface` then the interface type and slot/port or number information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

- For a Management interface, enter the keyword `managementethernet` followed by slot/port numbers.
- For a Port Channel interface, enter the keywords `port-channel` followed by a number.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.

Example

```
DellEMC# show ipv6 neighbors
IPv6 Address Expires(min) Hardware Address State Interface VLAN CPU
-----
100::1 0.03 00:00:00:00:00:22 DELAY Te 1/12 - CP
fe80::200:ff:fe00:22 232 00:00:00:00:00:22 STALE Te 1/12 - CP
500::1 0.60 00:01:e8:17:5c:af REACH Te 1/13 - CP
fe80::200:ff:fe00:17 232 00:00:00:00:00:29 REACH Te 1/14 - CP
900::1 0.60 00:01:e8:17:5c:b1 STALE Po 23 - CP
400::1 0.60 00:01:e8:17:5c:ae REACH Te 1/2 V1 100 CP
DellEMC#
```

IPv6 Router Advertisement (RA) Guard

The IPv6 RA guard provides support to perform conditional forwarding or blocking of the router advertisement messages that are received at the network device platform. This functionality analyzes and filters the RAs sent by the devices and compares the configuration information on the layer 2 device with the RA frame. Once the layer 2 device validates the content of the RA frame against the configuration, it forwards the RA to its unicast or multicast destination. On failure to validate the RA frame content, the RA frame is dropped.

The IPv6 RA guard supports two different modes:

- **Host mode** — When a policy with device role as host is applied on an interface, all the RA packets are dropped without validation. You can also configure the host mode policy with VLAN option to drop the RA packets on that specific VLAN and port.

- Router mode — When a policy with device role as router is applied on an interface, all the RA packets are validated based on the configuration information in the policy. Similarly, you can also apply this mode over any specific VLAN and the validation is performed only for that particular VLAN RA packets.

To configure the IPv6 RA guard, use the following Dell EMC Networking OS commands.

debug ipv6 nd ra-guard

Enable debugging for IPv6 RA guard snooping information.

Syntax	<code>debug ipv6 nd ra-guard [interface_type slot/port count value]</code>	
Parameters	interface_type slot/port	Enter the one of the following interfaces and slot/port information: <ul style="list-style-type: none"> • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
	count value	Enter the keyword <code>count</code> then the number of debug outputs. The range is from 1 to 65534. The default is infinity.
Defaults	None	
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

device-role

Specify the role of the device attached to the port.

Syntax	<code>device-role {host router}</code>	
	To reset the device role, use the <code>no device-role {host router}</code> command.	
Parameters	host	Enter the keyword <code>host</code> to set the device-role as host.
	router	Enter the keyword <code>router</code> to set the device-role as router.
Defaults	None	
Command Modes	POLICY LIST CONFIGURATION	

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands

- [ipv6 nd raguard policy policy-name](#) — define the RA guard policy name and enter the RA guard policy configuration mode.
- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.

hop-limit

Enable the verification of the advertised hop count limit. If this command is not configured, the verification process is bypassed.

Syntax

```
hop-limit {maximum | minimum limit}
```

To reset the hop count limit, use the `no hop-limit {maximum | minimum limit}` command.

Parameters

maximum <i>limit</i>	Enter the keyword <code>maximum</code> then the hop limit value. The range is from 0 to 254.
minimum <i>limit</i>	Enter the keyword <code>minimum</code> then the hop limit value. The range is from 0 to 254.

Defaults

None

Command Modes

POLICY LIST CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

- Related Commands**
- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
 - [ipv6 nd raguard policy policy-name](#) — define the RA guard policy name and enter the RA guard policy configuration mode.

ipv6 nd ra-guard attach-policy

Apply the IPv6 RA guard to a specific interface.

Syntax `ipv6 nd ra-guard attach-policy policy-name [vlan [vlan 1, vlan 2, vlan 3.....]]`

Parameters

policy *policy-name* Enter the keyword `policy` then the policy name. The policy-name allows a maximum of **140** characters.

vlan [vlan 1, vlan 2, vlan 3.....] Enter the keyword `vlan` then the VLAN range. The VLAN range is from 1 to 4094.

Defaults None

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

- Related Commands**
- [show ipv6 nd ra-guard policy](#) — display the configuration applied on all the RA guard policies or a specific RA guard policy.

ipv6 nd ra-guard enable

Allow you to configure the RA guard related commands.

Syntax `ipv6 nd ra-guard enable`

To disable the RA guard, use the `no ipv6 nd ra-guard enable` command.

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

ipv6 nd ra-guard policy

Define the RA guard policy name and enter the RA guard policy list configuration mode.

Syntax `ipv6 nd ra-guard policy policy-name`

Parameters **policy *policy-name*** Enter the keyword `policy` then the `policy-name`. The policy name allows a maximum of **140** characters.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.

managed-config-flag

Set the managed address configuration flag.

Syntax `managed-config-flag {on | off}`

To clear the flag, use the `no managed-config-flag {on | off}` command.

Parameters

on	Enter the keyword <code>on</code> to set the managed-config-flag value as ON.
off	Enter the keyword <code>off</code> to set the managed-config flag value as OFF.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

match ra

Enable verifying either of the configured source IPv6 address or prefix address or the source MAC address in the inspected messages. If this command is not configured, the verification process is bypassed.

Syntax `match ra {ipv6-access-list name | ipv6-prefix-list name | mac-access-list name}`

To reset the access list, use the `no match ra {ipv6-access-list | ipv6-prefix-list | mac-access-list}` command.

Parameters

ipv6-access-list name	Enter the keywords <code>ipv6-access-list</code> then the access-list name. The access-list name allows a maximum of 140 characters.
ipv6-prefix-list name	Enter the keywords <code>ipv6-prefix-list</code> then the prefix-list name. The prefix-list name allows a maximum of 140 characters.
ipv6-mac-access-list name	Enter the keywords <code>ipv6-mac-access-list</code> then the mac-access-list name. The mac-access-list name allows a maximum of 140 characters.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the RA guard policy name and enter the RA guard policy configuration mode.

mtu

Enable the verification of the configured maximum transmission unit (MTU) value in the received RA packets.

Syntax

`mtu value`

To reset the MTU value, use the `no mtu value` command.

Parameters

value Enter the maximum transmission unit value in bytes. The range is from 1,280 to 11,982 bytes.

Defaults

0

Command Modes POLICY LIST CONFIGURATION**Command History**

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, and Z9000 switches.

- Related Commands**
- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
 - [ipv6 nd raguard policy policy-name](#) — define the RA guard policy name and enter the RA guard policy configuration mode.

other-config-flag

Enable the verification of the advertised other configuration parameter. If this command is not configured, the verification process is bypassed.

Syntax `other-config-flag {on | off}`

To reset the other configuration parameter, use the `no other-config-flag {on | off}` command.

Parameters

on Enter the keyword `on` to set the other-config-flag value as ON.

off Enter the keyword `off` to set the other-config flag value as OFF.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, and Z9000 switches.

- Related Commands**
- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
 - [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

reachable-time

Enable the verification of the configured reachability time in the received RA packets.

Syntax `reachable-time value`

To reset the advertised reachability time, use the `no reachable-time value` command.

Parameters

value Enter the advertised reachability time in milliseconds. The range is from 0 to 3,600,000 milliseconds.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the RA guard policy name and enter the RA guard policy configuration mode.

retrans-time

Enable the verification of the configured retransmission timer value in the received RA packets.

Syntax

```
retrans-timer value
```

To reset the advertised retransmission interval, use the `no retrans-timer value` command.

Parameters

value Enter the advertised retransmission time interval in milliseconds. The range is from 100 to 4,294,967,295 milliseconds.

Defaults

None

Command Modes POLICY LIST CONFIGURATION**Command History**

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

[ipv6 nd ra-guard enable](#) — configure the RA guard related commands.

router-lifetime

Set the router lifetime.

Syntax `router-lifetime value`

Parameters **value** Enter the router lifetime in seconds. The range is from 0 to 9,000 seconds.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

router-preference maximum

Enable the verification of the advertised default router preference (DRP) value. The preference value is lower than or equal to the specified limit. If this command is not configured, the verification process is bypassed.

Syntax `router-preference maximum {high | low | medium}`

To reset the default router preference value, use the `no router-preference maximum {high | low | medium}` command.

Parameters

high Enter the keyword `high` to set the DRP value as high.

low Enter the keyword `low` to set the DRP value as low.

medium Enter the keyword `medium` to set the DRP value as medium.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

show config

Display the RA guard policy mode configurations.

Syntax `show config`

Command Modes `POLICY LIST CONFIGURATION`

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

Example

```
DellEMC(conf)# ipv6 nd ra-guard policy test
DellEMC(conf-ra_guard_policy_list)#show config
!
ipv6 nd ra-guard policy test
device-role router
hop-limit maximum 251
mtu 1350
```

```

other-config-flag on
reachable-time 540
retrans-timer 101
router-preference maximum medium
trusted-port
DellEMC(conf-ra_guard_policy_list)#

```

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd ra-guard policy](#) — define the RA guard policy name and enter the RA guard policy list configuration mode.
- [device-role](#) — specify the role of the device attached to the port.
- [hop-limit](#) — enable the verification of the advertised hop count limit.
- [mtu](#) — set the maximum transmission unit (MTU) value.
- [other-config-flag](#) — enable the verification of the advertised other configuration parameter.
- [reachable-time](#) — set the advertised reachability time.
- [retrans-timer](#) — set the advertised retransmission time.
- [router-preference maximum](#) — enable the verification of the advertised default router preference (DRP) value.
- [trusted-port](#) — apply the policy to trusted ports.

show ipv6 nd ra-guard policy

Display the configurations applied on all the RA guard policies or a specific RA guard policy.

Syntax `show ipv6 nd ra-guard policy policy-name`

Parameter **policy *policy-name*** Enter the keyword `policy` then the policy name. The policy name allows a maximum of **140** characters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, Introduced on the S6000-ON, and Z9000 switches.

Example

```

DellEMC# show ipv6 nd ra-guard policy test

ipv6 nd ra-guard policy test
device-role router

```

```

hop-limit maximum 1
match ra ipv6-access-list access
other-config-flag on
router-preference maximum medium
trusted-port
Interfaces :
Te 1/1
DellEMC#

```

Related Commands

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd ra-guard policy](#) — define the RA guard policy name and enter the RA guard policy list configuration mode.
- [device-role](#) — specify the role of the device attached to the port.
- [hop-limit](#) — enable the verification of the advertised hop count limit.
- [mtu](#) — set the maximum transmission unit (MTU) value.
- [other-config-flag](#) — enable the verification of the advertised other configuration parameter.
- [reachable-time](#) — set the advertised reachability time.
- [retrans-timer](#) — set the advertised retransmission time.
- [router-preference maximum](#) — enable the verification of the advertised default router preference (DRP) value.
- [trusted-port](#) — apply the policy to trusted ports.
- [ipv6 nd raguard attach-policy](#) — apply the IPv6 RA guard to a specific interface.

trusted-port

Allow bypassing the configured RA guard validation and forwards the RA packets received on the interface, which has the trusted port policy attached.

Syntax `trusted-port`

To reset the policy applied to the trusted port, use the `no trusted-port` command.

Defaults None

Command Modes POLICY LIST CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the C9010.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9000 switches.

**Usage
Information**

Use this command to disable all the RA guard policies.

**Related
Commands**

- [ipv6 nd ra-guard enable](#) — configure the RA guard related commands.
- [ipv6 nd raguard policy policy-name](#) — define the router advertisement (RA) guard policy name and enter the RA guard policy configuration mode.

Object Tracking

Object Tracking supports IPv4 and IPv6, and is available on the Dell EMC Networking platforms.

Object tracking allows you to define objects of interest, monitor their state, and report to a client when a change in an object's state occurs. The following tracked objects are supported:

- Link status of Layer 2 interfaces
- Routing status of Layer 3 interfaces (IPv4 and IPv6)
- Reachability of IPv4 and IPv6 routes
- Metric thresholds of IPv4 and IPv6 routes

You can configure client applications, such virtual router redundancy protocol (VRRP), to receive a notification when the state of a tracked object changes.

Topics:

- [IPv4 Object Tracking Commands](#)
- [IPv6 Object Tracking Commands](#)

IPv4 Object Tracking Commands

The following section describes the IPv4 VRRP commands.

debug track

Enables debugging for tracked objects.

Syntax `debug track [all | notifications | object-id]`

Parameters

- all** Enables debugging on the state and notifications of all tracked objects.
- notifications** Enables debugging on the notifications of all tracked objects.
- object-id*** Enables debugging on the state and notifications of the specified tracked object. The range is 1 to 500.

Defaults Enable debugging on the state and notifications of all tracked objects (`debug track all`).

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Example

```
DellEMC# debug track all

04:35:04: %RPM0-P:RP2 %OTM-5-STATE: track 6 - Interface
TenGigabitEthernet 1/2
line-protocol DOWN

04:35:04: %RPM0-P:RP2 %OTM-5-NOTIF: VRRP notification: resource ID 6 DOWN
```

delay

Configure the time delay used before communicating a change in the status of a tracked object to clients.

Syntax `delay {[up seconds] [down seconds]}`

To return to the default setting, use the `no delay` command.

Parameters ***seconds*** Enter the number of seconds the object tracker waits before sending a notification about the change in the UP and/or DOWN state of a tracked object to clients. The range is 0 to 180. The default is **0 seconds**.

Defaults **0 seconds**

Command Modes OBJECT TRACKING (*conf_track_object-id*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

You can configure an UP and/or DOWN timer for each tracked object to set the time delay before a change in the state of a tracked object is communicated to clients. The configured time delay starts when the state changes from UP to DOWN or vice-versa.

If the state of an object changes back to its former UP/DOWN state before the timer expires, the timer is cancelled and the client is not notified. For example, if the DOWN timer is running when an interface goes down and comes back up, the DOWN timer is cancelled and the client is not notified of the event.

If the timer expires and an object's state has changed, a notification is sent to the client. If no delay is configured, a notification is sent immediately after a change in the state of a tracked object is detected. The time delay in communicating a state change is specified in seconds.

Related Commands

- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.
- [track interface line-protocol](#) – configure object tracking on the line-protocol state of a Layer 2 interface.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.
- [track ip route reachability](#) – configure object tracking on the reachability of an IPv4 route.

description

Enter a description of a tracked object.

Syntax

```
description {text}
```

To remove the description, use the `no description {text}` command.

Parameters

text

Enter a description to identify a tracked object (80 characters maximum).

Defaults

None

Command Modes

OBJECT TRACKING (*conf_track_object-id*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Related Commands

- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.
- [track interface line-protocol](#) – configure object tracking on the line-protocol state of a Layer 2 interface.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.
- [track ip route reachability](#) – configure object tracking on the reachability of a specific IP address. Policy-based Routing uses the track command to track the next-hop ip address.

show running-config track

Display the current configuration of tracked objects.

Syntax

```
show running-config track [object-id]
```

Parameters *object-id* (OPTIONAL) Display information on the specified tracked object. The range is 1 to 500.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Example

```
DelleMC# show running-config track
track 1 ip route 23.0.0.0/8 reachability
track 2 ipv6 route 2040::/64 metric threshold
delay down 3
delay up 5
threshold metric up 200
track 3 ipv6 route 2050::/64 reachability
track 4 interface TenGigabitEthernet 1/2 ip routing
track 5 ip route 192.168.0.0/24 reachability vrf red
track resolution ip route isis 20
track resolution ip route ospf 10
```

Example (Object-id)

```
DelleMC# show running-config track 300
track 300 ip route 10.0.0.0/8 metric threshold
delay down 3
delay up 5
threshold metric up 100
```

Related Commands

- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.
- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.
- [track interface line-protocol](#) – configure object tracking on the line-protocol state of a Layer 2 interface.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.
- [track ip route reachability](#) – configure object tracking on the reachability of an IPv4 route.

show track

Display information about tracked objects, including configuration, current tracked state (UP or DOWN), and the clients which are tracking an object.

Syntax `show track [object-id [brief] | interface [brief] [vrf vrf-name] | ip route [brief] [vrf vrf-name] | resolution | vrf vrf-name [brief] | brief]`

Parameters	object-id	(OPTIONAL) Display information on the specified tracked object. The range is 1 to 500.
	interface	(OPTIONAL) Display information on all tracked interfaces (Layer 2 and IPv4 Layer 3).
	ip route	(OPTIONAL) Display information on all tracked IPv4 routes.
	resolution	(OPTIONAL) Display information on the configured resolution values used to scale protocol-specific route metrics. The range is 0 to 255.
	brief	(OPTIONAL) Display a single line summary of the tracking information for a specified object, object type, or all tracked objects.
	vrf vrf-name	(OPTIONAL) E-Series only: Display information on only the tracked objects that are members of the specified VRF instance. The maximum is 32 characters. If you do not enter a VRF name, information on the tracked objects from all VRFs displays.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information The following describes the `show track` command shown in the Example below.

Output	Description
Track object-id	Displays the number of the tracked object.
Interface type slot/port, IP route ip-address, IPv6 route ipv6-address	Displays the interface type and slot/port number or address of the IPv4/IPv6 route that is being tracked.
object is Up/Down	Up/Down state of tracked object; for example, IPv4 interface, reachability or metric threshold of an IP route.
number changes, last change time	Number of times that the state of the tracked object has changed and the time since the last change in <i>hours:minutes:seconds</i> .

Output	Description
First hop interface	Displays the type and slot/port number of the first-hop interface of the tracked route.
Tracked by	Client that is tracking an object's state; for example, VRRP.

Example

```
DelleMC# show track

Track 1
  IP route 23.0.0.0/8 reachability
  Reachability is Down (route not in route table)
  2 changes, last change 00:16:08
  Tracked by:

Track 2
  IPv6 route 2040::/64 metric threshold
  Metric threshold is Up (STATIC/0/0)
  5 changes, last change 00:02:16
  Metric threshold down 255 up 254
  First-hop interface is TenGigabitEthernet 1/2
  Tracked by:
    VRRP TenGigabitEthernet 2/3 IPv6 VRID 1

Track 3
  IPv6 route 2050::/64 reachability
  Reachability is Up (STATIC)
  5 changes, last change 00:02:16
  First-hop interface is TenGigabitEthernet 1/2
  Tracked by:
    VRRP TenGigabitEthernet 2/3 IPv6 VRID 1
```

Usage Information

The following describes the `show track brief` command shown in the Example below.

Output	Description
ResID	Number of the tracked object.
Resource	Type of tracked object.
Parameter	Detailed description of the tracked object.
State	Up or Down state of the tracked object.
Last Change	Time since the last change in the state of the tracked object.

Example (Brief)

```
DelleMC> show track brief
ResID Resource          Parameter      State LastChange
  1   IP route reachability 10.16.0.0/16 Up    00:01:08
  2   Interface line-protocol Ethernet0/2 Down 00:05:00
  3   Interface ip routing  VLAN100      Up    01:10:05
```

Related Commands

- [show running-config track](#) – display configuration information about tracked objects.
- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.
- [track interface line-protocol](#) – configure object tracking on the line-protocol state of a Layer 2 interface.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.
- [track ip route reachability](#) – configure object tracking on the reachability of an IPv4 route.

threshold metric

Configure the metric threshold used to determine the UP and/or DOWN state of a tracked IPv4 or IPv6 route.

Syntax `threshold metric {up number | down number}`

To return to the default setting, use the `no threshold metric {up number | down number}` command.

Parameters

- up number** Enter a number for the UP threshold to be applied to the scaled metric of an IPv4 or IPv6 route. The default UP threshold is **254**. The routing state is UP if the scaled route metric is less than or equal to the UP threshold.
- down number** Enter a number for the DOWN threshold to be applied to the scaled metric of an IPv4 or IPv6 route. The default DOWN threshold is **255**. The routing state is DOWN if the scaled route metric is greater than or equal to the DOWN threshold.

Defaults

None

Command Modes OBJECT TRACKING (`conf_track_object-id`)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to configure the UP and/or DOWN threshold for the scaled metric of a tracked IPv4 or IPv6 route.

Determine the UP/DOWN state of a tracked route by the threshold for the current value of the route metric in the routing table. To provide a common tracking interface for different clients, route metrics are scaled in the range 0 to 255, where 0 is connected and 255 is inaccessible. The scaled metric value communicated to a client always considers a lower value to have priority over a higher value.

The resulting scaled value is compared against the configured threshold values to determine the state of a tracked route as follows:

- If the scaled metric for a route entry is less than or equal to the UP threshold, the state of a route is UP.
- If the scaled metric for a route is greater than or equal to the DOWN threshold or the route is not entered in the routing table, the state of a route is DOWN.

Configure the UP and DOWN thresholds for each tracked route with the `threshold metric` command. The default UP threshold is 254; the default DOWN threshold is 255. The notification of a change in the state of a tracked object is sent when a metric value crosses a configured threshold.

The tracking process uses a protocol-specific resolution value to convert the actual metric in the routing table to a scaled metric in the range 0 to 255. You can configure the resolution value used to scale route metrics for supported protocols with the `track resolution ip route` and `track resolution ipv6 route` commands.

Related Commands

- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.
- [track resolution ip route](#) – configure the protocol-specific resolution value used to scale an IPv4 route metric.

track interface ip routing

Configure object tracking on the routing status of an IPv4 Layer 3 interface.

Syntax `track object-id interface interface ip routing`

To return to the default setting, use the `no track object-id` command.

Parameters

- object-id** Enter the ID number of the tracked object. The range is 1 to 500.
- interface** Enter one of the following values:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a tunnel interface, enter the keyword `tunnel`.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for <code>tunnel</code> interface.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to create an object that tracks the routing state of an IPv4 Layer 2 interface:

- The status of the IPv4 interface is UP only if the Layer 2 status of the interface is UP and the interface has a valid IP address.
- The Layer 3 status of an IPv4 interface goes DOWN when its Layer 2 status goes down (for a Layer 3 VLAN, all VLAN ports must be down) or the IP address is removed from the routing table.

Related Commands

- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.
- [track interface line-protocol](#) – configure object tracking on the line-protocol state of a Layer 2 interface.

track interface line-protocol

Configure object tracking on the line-protocol state of a Layer 2 interface.

Syntax `track object-id interface interface line-protocol`

To return to the default setting, use the `no track object-id` command.

Parameters

<i>object-id</i>	Enter the ID number of the tracked object. The range is 1 to 500.
<i>interface</i>	Enter one of the following values: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a tunnel interface, enter the keyword <code>tunnel</code>.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to create an object that tracks the line-protocol state of a Layer 2 interface by monitoring its operational status (UP or DOWN).

When the link-level status goes down, the tracked object status is considered to be DOWN; if the link-level status is up, the tracked object status is considered to be UP.

Related Commands

- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.
- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.

track ip route metric threshold

Configure object tracking on the threshold of an IPv4 route metric.

Syntax

```
track object-id ip route ip-address/prefix-len metric threshold [vrf vrf-name]
```

To return to the default setting, use the `no track object-id` command.

Parameters

<i>object-id</i>	Enter the ID number of the tracked object. The range is 1 to 500.
<i>ip-address/prefix-len</i>	Enter an IPv4 address in dotted decimal format. The valid IPv4 prefix lengths are from /0 to /32.

vrf vrf-name (Optional) E-Series only: You can configure a VPN routing and forwarding (VRF) instance to specify the virtual routing table to which the tracked route belongs.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to create an object that tracks the UP and/or DOWN threshold of an IPv4 route metric. In order for a route's metric to be tracked, the route must appear as an entry in the routing table.

A tracked IPv4 route is considered to match an entry in the routing table only if the exact IPv4 address and prefix length match a table entry. For example, when configured as a tracked route, 10.0.0.0/24 does not match the routing table entry 10.0.0.0/8. If no route-table entry has the exact IPv4 address and prefix length, the status of the tracked route is considered to be DOWN.

When you configure the threshold of an IPv4 route metric as a tracked object, the UP/DOWN state of the tracked route is also determined by the current metric for the route in the routing table.

To provide a common tracking interface for different clients, route metrics are scaled in the range 0 to 255, where 0 is connected and 255 is inaccessible. The scaled metric value communicated to a client always considers a lower value to have priority over a higher value. The resulting scaled value is compared against the configured threshold values to determine the state of a tracked route as follows:

- If the scaled metric for a route entry is less than or equal to the UP threshold, the state of a route is UP.
- If the scaled metric for a route is greater than or equal to the DOWN threshold or the route is not entered in the routing table, the state of a route is DOWN.

You configure the UP and DOWN thresholds for each tracked route by using the `threshold metric` command. The default UP threshold is **254**; the default DOWN threshold is **255**. The notification of a change in the state of a tracked object is sent when a metric value crosses a configured threshold.

Related Commands

- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.
- [threshold metric](#) – configure the metric threshold used to determine the UP and/or DOWN state of a tracked route.
- [track resolution ip route](#) – configure the protocol-specific resolution value used to scale an IPv4 route metric.

track ip host reachability

Configure object tracking on the reachability of an IPv4 host.

Syntax `track object-id ip host host-ip-address/prefix-len reachability [vrf vrf-name]`

To return to the default setting, use the `no track object-id` command.

Parameters	<i>object-id</i>	Enter the ID number of the tracked object. The range is 1 to 500.
	<i>ip-address/ prefix-len</i>	Enter an IPv4 address in dotted decimal format. The valid IPv4 prefix lengths are from /0 to /32.
	<i>vrf vrf-name</i>	(Optional) You can configure a VPN routing and forwarding (VRF) instance to specify the virtual routing table to which the tracked route belongs.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4820T, S4810, S6000, S5000, Z9000, Z9500, IOA, and MXL.

track ip route reachability

Configure object tracking on the reachability of an IPv4 route.

Syntax `track object-id ip route ip-address/prefix-len reachability [vrf vrf-name]`
To return to the default setting, use the `no track object-id` command.

Parameters	<i>object-id</i>	Enter the ID number of the tracked object. The range is 1 to 500.
	<i>ip-address/ prefix-len</i>	Enter an IPv4 address in dotted decimal format. The valid IPv4 prefix lengths are from /0 to /32.
	<i>vrf vrf-name</i>	(Optional) E-Series only: You can configure a VPN routing and forwarding (VRF) instance to specify the virtual routing table to which the tracked route belongs.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to create an object that tracks the reachability of an IPv4 route. In order for a route's reachability to be tracked, the route must appear as an entry in the routing table.

A tracked IPv4 route is considered to match an entry in the routing table only if the exact IPv4 address and prefix length match a table entry. For example, when configured as a tracked route, 10.0.0.0/24 does not match the routing table entry 10.0.0.0/8. If no route-table entry has the exact IPv4 address and prefix length, the status of the tracked route is considered to be DOWN.

When you configure IPv4 route reachability as a tracked object, the UP/DOWN state of the tracked route is also determined by the entry of the next-hop address in the ARP cache. A tracked route is considered to be reachable if there is an ARP cache entry for the route's next-hop address.

If the next-hop address in the ARP cache ages out for a route tracked for its reachability, an attempt is made to regenerate the ARP cache entry to if the next-hop address appears before considering the route DOWN.

Related Commands

- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.

track resolution ip route

Configure the protocol-specific resolution value used to scale an IPv4 route metric.

Syntax `track resolution ip route {isis resolution-value | ospf resolution-value}`

To return to the default setting, use the `no track object-id` command.

Parameters

object-id	Enter the ID number of the tracked object. The range is 1 to 500.
isis resolution-value	Enter the resolution used to convert the metric in the routing table for ISIS routes to a scaled metric.
ospf resolution-value	Enter the resolution used to convert the metric in the routing table for OSPF routes to a scaled metric.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information

Use this command to configure the protocol-specific resolution value that converts the actual metric of an IPv4 route in the routing table to a scaled metric in the range 0 to 255.

The UP/DOWN state of a tracked IPv4 route is determined by a user-configurable threshold (the `threshold metric` command) for the route's metric in the routing table. To provide a common

tracking interface for different clients, route metrics are scaled in the range 0 to 255, where 0 is connected and 255 is inaccessible.

The protocol-specific resolution value calculates the scaled metric by dividing a route's cost by the resolution value set for the route protocol:

- For ISIS, you can set the resolution in the range 1 to 1000, where the default is **10**.
- For OSPF, you can set the resolution in the range 1 to 1592, where the default is **1**.
- The resolution value used to map static routes is not configurable. By default, Dell EMC Networking OS assigns a metric of **0** to static routes.
- The resolution value used to map RIP routes is not configurable. The RIP hop-count is automatically multiplied by 16 to scale it. For example, a RIP metric of 16 (unreachable) scales to 256, which considers the route to be DOWN.

Related Commands

- [threshold metric](#) – configure the metric threshold used to determine the UP and/or DOWN state of a tracked route.
- [track ip route metric threshold](#) – configure object tracking on the threshold of an IPv4 route metric.

IPv6 Object Tracking Commands

The following section describes the IPv6 object tracking commands.

The following object tracking commands apply to IPv4 and IPv6:

- [debug track](#)
- [delay](#)
- [description](#)
- [show running-config track](#)
- [threshold metric](#)
- [track interface line-protocol](#)

show track ipv6 route

Display information about all tracked IPv6 routes, including configuration, current tracked state (UP or DOWN), and the clients which are tracking an object.

Syntax `show track ipv6 route [brief]`

Parameters **brief** (OPTIONAL) Display a single line summary of information for tracked IPv6 routes.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.

Version	Description
---------	-------------

8.4.1.0	Introduced.
---------	-------------

Usage Information

The following describes the `show track ipv6 route` command shown in the Example below.

Output	Description
--------	-------------

Track <i>object-id</i>	Displays the number of the tracked object.
-------------------------------	--

Interface <i>type slot/port, IP route ip-address, IPv6 route ipv6-address</i>	Displays the interface type and slot/port number or address of the IPv4/IPv6 route that is being tracked.
--	---

<i>object is Up/Down</i>	Up/Down state of tracked object; for example, IPv4 interface, reachability or metric threshold of an IP route.
---------------------------------	--

<i>number changes, last change time</i>	Number of times that the state of the tracked object has changed and the time since the last change in <i>hours:minutes:seconds</i> .
--	---

First hop interface	Displays the type and slot/port number of the first-hop interface of the tracked route.
----------------------------	---

Tracked by	Client that is tracking an object's state; for example, VRRP.
-------------------	---

Example

```
DelleMC# show track ipv6 route

Track 2
  IPv6 route 2040::/64 metric threshold
  Metric threshold is Up (STATIC/0/0)
  5 changes, last change 00:02:30
  Metric threshold down 255 up 254
  First-hop interface is TenGigabitEthernet 1/2
  Tracked by:
    VRRP TenGigabitEthernet 2/4 IPv6 VRID 1

Track 3
  IPv6 route 2050::/64 reachability
  Reachability is Up (STATIC)
  5 changes, last change 00:02:30
  First-hop interface is TenGigabitEthernet 1/2
  Tracked by:
    VRRP TenGigabitEthernet 2/4 IPv6 VRID 1
```

Usage Command The following describes the `show track ipv6 route brief` command shown in the Example below.

Ouput	Description
-------	-------------

ResID	Number of the tracked object.
--------------	-------------------------------

Resource	Type of tracked object.
-----------------	-------------------------

Parameter	Detailed description of the tracked object.
------------------	---

State	Up or Down state of the tracked object.
--------------	---

Last Change	Time since the last change in the state of the tracked object.
--------------------	--

Example (Brief)

```
DelleMC# show track ipv6 route brief

ResId Resource                Parameter State LastChange
  2   IPv6 route metric threshold 2040::/64 Up 00:02:36
  3   IPv6 route reachability     2050::/64 Up 00:02:36
```

Related Commands

- [show running-config track](#) – display configuration information about tracked objects.
- [show track](#) – display information about tracked objects, including configuration, current state, and clients which track the object.

- [track interface ipv6 routing](#) – configure object tracking on the routing status of an IPv6 Layer 3 interface.
- [track ipv6 route metric threshold](#) – configure object tracking on the threshold of an IPv6 route metric.
- [track ipv6 route reachability](#) – configure object tracking on the reachability of an IPv6 route.

track interface ipv6 routing

Configure object tracking on the routing status of an IPv6 Layer 3 interface.

Syntax `track object-id interface interface ipv6 routing`

To return to the default setting, use the `no track object-id` command.

Parameters

object-id Enter the ID number of the tracked object. The range is 1 to 500.

interface Enter one of the following values:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a tunnel interface, enter the keyword `tunnel`.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information Use this command to create an object that tracks the routing state of an IPv6 Layer 3 interface:

- The status of the IPv6 interface is UP only if the Layer 2 status of the interface is UP and the interface has a valid IP address.
- The Layer 3 status of an IPv6 interface goes DOWN when its Layer 2 status goes down (for a Layer 3 VLAN, all VLAN ports must be down) or the IP address is removed from the routing table.

Related Commands

- [show track ipv6 route](#) – display information about tracked IPv6 routes, including configuration, current state, and clients which track the route.
- [track interface ip routing](#) – configure object tracking on the routing status of an IPv4 Layer 3 interface.

track ipv6 route metric threshold

Configure object tracking on the threshold of an IPv4 route metric.

Syntax `track object-id ipv6 route ipv6-address/prefix-len metric threshold`
To return to the default setting, use the `no track object-id` command.

Parameters

object-id	Enter the ID number of the tracked object. The range is 1 to 500.
ipv6-address/ prefix-len	Enter an IPv6 address in X:X:X:X format. The valid IPv6 prefix lengths are from /0 to /128.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information Use this command to create an object that tracks the UP and/or DOWN threshold of an IPv6 route metric. In order for a route's metric to be tracked, the route must appear as an entry in the routing table.

A tracked IPv6 route is considered to match an entry in the routing table only if the exact IPv6 address and prefix length match a table entry. For example, when configured as a tracked route, 3333:100:200:300:400::/80 does not match routing table entry 3333:100:200:300::/64. If no route-table entry has the exact IPv6 address and prefix length, the status of the tracked route is considered to be DOWN.

When you configure the threshold of an IPv6 route metric as a tracked object, the UP/DOWN state of the tracked route is also determined by the current metric for the route in the routing table.

To provide a common tracking interface for different clients, route metrics are scaled in the range 0 to 255, where 0 is connected and 255 is inaccessible. The scaled metric value communicated to a client always considers a lower value to have priority over a higher value. The resulting scaled value is compared against the configured threshold values to determine the state of a tracked route as follows:

- If the scaled metric for a route entry is less than or equal to the UP threshold, the state of a route is UP.
- If the scaled metric for a route is greater than or equal to the DOWN threshold or the route is not entered in the routing table, the state of a route is DOWN.

You configure the UP and DOWN thresholds for each tracked IPv6 route by using the `threshold metric` command. The default UP threshold is **254**; the default DOWN threshold is **255**. The notification of a change in the state of a tracked object is sent when a metric value crosses a configured threshold.

Related Commands

- [show track ipv6 route](#) – display information about tracked IPv6 routes, including configuration, current state, and clients which track the route.
- [threshold metric](#) – configure the metric threshold used to determine the UP and/or DOWN state of a tracked route.

- [track resolution ipv6 route](#) – configure the protocol-specific resolution value used to scale an IPv6 route metric.

track ipv6 route reachability

Configure object tracking on the reachability of an IPv6 route.

Syntax `track object-id ipv6 route ip-address/prefix-len reachability`

To return to the default setting, use the `no track object-id` command.

Parameters

<i>object-id</i>	Enter the ID number of the tracked object. The range is 1 to 500.
<i>ipv6-address/prefix-len</i>	Enter an IPv6 address in X:X:X:X format. The valid IPv6 prefix lengths are from /0 to /128.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information Use this command to create an object that tracks the reachability of an IPv6 route. In order for a route's reachability to be tracked, the route must appear as an entry in the routing table.

A tracked route is considered to match an entry in the routing table only if the exact IPv6 address and prefix length match a table entry. For example, when configured as a tracked route, 3333:100:200:300:400::/80 does not match routing table entry 3333:100:200:300::/64. If no route-table entry has the exact IPv6 address and prefix length, the tracked route is considered to be DOWN.

When you configure IPv6 route reachability as a tracked object, the UP/DOWN state of the tracked route is also determined by the entry of the next-hop address in the ARP cache. A tracked route is considered to be reachable if there is an ARP cache entry for the route's next-hop address.

If the next-hop address in the ARP cache ages out for a route tracked for its reachability, an attempt is made to regenerate the ARP cache entry to if the next-hop address appears before considering the route DOWN.

Related Commands

- [show track ipv6 route](#) – display information about tracked IPv6 routes, including configuration, current state, and clients which track the route.
- [track ipv6 route reachability](#) – configure object tracking on the reachability of an IPv4 route.

track resolution ipv6 route

Configure the protocol-specific resolution value used to scale an IPv6 route metric.

Syntax `track resolution ipv6 route {isis resolution-value | ospf resolution-value}`
To return to the default setting, use the `no track object-id` command.

Parameters

object-id	Enter the ID number of the tracked object. Use the range to 1 to 500.
isis resolution-value	Enter the resolution used to convert the metric in the routing table for ISIS routes to a scaled metric.
ospf resolution-value	Enter the resolution used to convert the metric in the routing table for OSPF routes to a scaled metric.

Defaults None

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced.

Usage Information Use this command to configure the protocol-specific resolution value that converts the actual metric of an IPv6 route in the routing table to a scaled metric in the range 0 to 255.

The UP/DOWN state of a tracked IPv6 route is determined by the user-configurable threshold (the `threshold metric` command) for a route's metric in the routing table. To provide a common tracking interface for different clients, route metrics are scaled in the range 0 to 255, where 0 is connected and 255 is inaccessible.

The protocol-specific resolution value calculates the scaled metric by dividing a route's cost by the resolution value set for the route protocol:

- For ISIS, you can set the resolution in the range 1 to 1000, where the default is 10.
- For OSPF, you can set the resolution in the range 1 to 1592, where the default is 1.
- The resolution value used to map static routes is not configurable. By default, Dell EMC Networking OS assigns a metric of 0 to static routes.
- The resolution value used to map RIP routes is not configurable. The RIP hop-count is automatically multiplied by 16 to scale it. For example, a RIP metric of 16 (unreachable) scales to 256, which considers the route to be DOWN.

Related Commands

- [threshold metric](#) – configure the metric threshold used to determine the UP and/or DOWN state of a tracked route.
- [track ipv6 route metric threshold](#) – configure object tracking on the threshold of an IPv6 route metric.

NPIV Proxy Gateway

The N-port identifier virtualization (NPIV) Proxy Gateway (NPG) feature provides FCoE-FC bridging capability on the S5000 switch, allowing server CNAs to communicate with SAN fabrics over the S5000.

To configure the S5000 to operate as an NPIV proxy gateway, use the following commands:

Topics:

- [dcb-map](#)
- [description](#)
- [fabric](#)
- [fabric-id vlan](#)
- [fc-map](#)
- [fcf-priority](#)
- [feature fc](#)
- [fka-adv-period](#)
- [interface vlan \(NPIV proxy gateway\)](#)
- [keepalive](#)
- [priority-pgid](#)
- [priority-group bandwidth pfc](#)
- [show fcoe-map](#)
- [show npiv devices](#)
- [show fc switch](#)
- [show qos dcb-map](#)

dcb-map

Create a DCB map to configure priority flow control (PFC) and enhanced transmission selection (ETS) on Ethernet ports that support converged Ethernet traffic. Apply the DCB map to an Ethernet interface.

S5000

Syntax	<code>dcb-map map-name</code>
Parameters	map-name Enter a DCB map name. The maximum number of alphanumeric characters is 32.
Defaults	None. There are no pre-configured PFC and ETS settings on S5000 Ethernet interfaces.
Command Modes	CONFIGURATION INTERFACE
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	<p>A DCB map is a template used to configure DCB parameters and apply them on converged Ethernet interfaces. DCB parameters include priority-based flow control (PFC) and enhanced traffic selection (ETS).</p> <p>To display the PFC and ETS settings in DCB maps, enter the <code>show qos dcb-map</code> command.</p> <p>Use the <code>dcb-map</code> command to create a DCB map to specify PFC and ETS settings and apply it on Ethernet ports. After you apply a DCB map to an interface, the PFC and ETS settings in the map are applied when the Ethernet port is enabled. DCBx is enabled on Ethernet ports by default.</p>

The `dcb-map` command is supported only on physical Ethernet interfaces.

To remove a DCB map from an interface, enter the `no dcb-map map-name` command in Interface configuration mode.

Related Commands

[show qos dcb-map](#)— displays the dcb-map profiles configured on the system.

[dcb-map stack-unit all stack-ports all](#)— applies a DCB map on all ports of a switch stack.

description

In an FCoE map, add a text description of the FCoE and FC parameters used to transmit storage traffic over an S5000 NPIV proxy gateway in a converged fabric.

S5000

Syntax `description text`

Parameters **text** Enter a maximum of 32 characters.

Defaults None

Command Modes FCOE MAP

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The text description is displayed in `show fcoe-map` command output.

Related Commands [fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

[show fcoe-map](#)— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

fabric

Apply an FCoE map on a fabric-facing Fibre Channel (FC) port.

S5000

Syntax `fabric map-name`

Parameters **map-name** Maximum: 32 alphanumeric characters.

Defaults None

Command Modes INTERFACE FIBRE_CHANNEL

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information An FCoE map is a template used to map FCoE and FC parameters in a converged fabric. An FCoE map is used to virtualize upstream FC ports on an S5000 NPIV proxy gateway so that they appear to downstream server CNA ports as FCoE forwarder (FCF) ports on an FCoE network. When applied to FC and Ethernet ports on an NPIV proxy gateway, an FCoE map allows the switch to operate as an FCoE-FC bridge between an FC SAN and an FCoE network by providing FCoE-enabled servers and switches with the necessary parameters to log in to a SAN fabric. Use the `fcoe-map` command to create an FCoE map.

On an S5000 NPIV proxy gateway, an FCoE map is applied on fabric-facing FC ports and server-facing Ethernet ports. Use the `fabric` command to apply an FCoE map on an FC port. Use the `fcoe-map` command to apply an FCoE map on an Ethernet port.

After you apply an FCoE map on an FC interface, when the port is enabled (`no shutdown`), the NPIV proxy gateway starts sending FIP multicast advertisements on behalf of the FC port to downstream servers in order to advertise the availability of a new FCF port on the FCoE VLAN.

To remove an FCoE map from an FC interface, enter the `no fabric map-name` command in Interface configuration mode.

Related Commands

[fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch. .

[show fcoe-map](#)— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

fabric-id vlan

In an FCoE map, configure the association between the dedicated VLAN used to carry FCoE traffic between servers and a SAN, and the fabric where the desired storage arrays are installed.

S5000

Syntax `fabric-id fabric-num vlan vlan-id`

Parameters

fabric-id fabric-num	Enter a fabric ID number that is the same as the ID number of the dedicated VLAN used to carry FCoE storage traffic to the fabric specified in the FCoE map.
vlan vlan-id	Enter the ID number of the dedicated VLAN used to carry FCoE storage traffic between servers and a SAN fabric and specified with the <code>vlan</code> command in the FCoE map.

Defaults None

Command Modes FCOE MAP

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information

In the `fabric-id vlan` command, the fabric and VLAN ID numbers must be the same.

In each FCoE map, the fabric ID, FC-MAP value, and FCoE VLAN parameters must be unique.

To remove a fabric-VLAN association from an FCoE map, enter the `no fabric-id vlan` command.

Related Commands

[fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

[show fcoe-map](#)— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

fc-map

In an FCoE map, configure the FCoE mapped address prefix (FC-MAP) value which is used to identify FCoE traffic transmitted on the FCoE VLAN for the specified fabric.

S5000

Syntax `fc-map fc-map-value`

Parameters	<i>fc-map-value</i>	Enter the unique MAC address prefix used by a SAN fabric. The range of FC-MAP values is from 0EFC00 to 0ECFF.
Defaults	None	
Command Modes	FCOE MAP	
Command History	Version 9.0(1.3)	Introduced on the S5000.
Usage Information	<p>The FC-MAP value you enter must match the FC-MAP value used by an FC switch or FCoE forwarder (FCF) in the fabric. An FC switch accepts only FCoE traffic that uses the correct FC-MAP value.</p> <p>The FC-MAP value is used to generate the fabric-provided MAC address (FP-MAC). The FPMA is used by servers to transmit FCoE traffic to the fabric. An FC-MAP can be associated with only one FCoE VLAN and vice versa.</p> <p>In an FCoE map, the FC-MAP value, fabric ID, and FCoE VLAN parameters must be unique.</p> <p>To remove a configured FC-MAP value from an FCoE map, enter the <code>no fc-map</code> command.</p>	
Related Commands	<p>fcoe-map — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.</p> <p>show fcoe-map— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.</p>	

fcf-priority

In an FCoE map, configure the priority used by a server CNA to select an upstream FCoE forwarder (FCF).

S5000

Syntax	<code>fcf-priority priority</code>	
Parameters	<i>priority</i>	Enter the priority assigned to the S5000 NPIV proxy gateway, which appears to a downstream server CNA as an FCF. The range of FCF priority values is from 1 to 255.
Defaults	128	
Command Modes	FCOE MAP	
Command History	Version 9.0(1.3)	Introduced on the S5000.
Usage Information	<p>The FCF priority you assign to an S5000 is used by server CNAs to select an upstream FCF to use for a fabric login (FLOGI).</p> <p>To remove a configured FCF priority from an FCoE map, enter the <code>no fcf-priority</code> command.</p>	
Related Commands	<p>fcoe-map — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.</p> <p>show fcoe-map— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.</p>	

feature fc

Enable Fibre Channel capability on the S5000.

S5000

Syntax	<code>feature fc</code>
Defaults	The S5000 is not enabled to operate in Fibre Channel mode.
Command Modes	CONFIGURATION
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	Use this command to configure the S5000 to interoperate with Fibre Channel devices in SAN fabrics. Enter the <code>no feature fc</code> command to disable the Fibre Channel command-line interface and free memory resources allocated to Fibre Channel operation.

Example

```
Dell(conf)#feature fc
```

Related Commands [show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

fka-adv-period

In an FCoE map, configure the time interval used to transmit FIP keepalive (FKA) advertisements.

S5000

Syntax	<code>fka-adv-period <i>seconds</i></code>
Parameters	<i>seconds</i> Enter the time period (in seconds) used to send FIP keepalive messages to peer devices. The range is from 8 to 90 seconds.
Defaults	8 seconds
Command Modes	FCOE MAP
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	To delete the FIP keepalive time period from an FCoE map, enter the <code>no fka-adv-erpiod</code> command.
Related Commands	fcoe-map — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric. show fcoe-map — displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

interface vlan (NPIV proxy gateway)

Create a dedicated VLAN to be used to send and receive Fibre Channel traffic over FCoE links between servers and a fabric over an S5000 NPIV proxy gateway.

S5000

Syntax	<code>interface vlan <i>vlan-id</i></code>
Parameters	<i>vlan-id</i> Enter a number as the VLAN Identifier. The range is 1 to 4094.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	Version 9.0(1.3) Introduced on the S5000 configured as an NPIV proxy gateway.
Usage Information	<p>FCoE storage traffic received from servers on an S5000 NPIV proxy gateway is de-capsulated into Fibre Channel packets and forwarded over FC links to SAN switches in a specified fabric. You must configure a separate FCoE VLAN for each fabric to which FCoE traffic is forwarded. Any non-FCoE traffic sent on a dedicated FCoE VLAN will be dropped.</p> <p>You configure the association between a dedicated VLAN, which carries FCoE traffic from server CNAs over the NPIV proxy gateway to a SAN fabric in which destination storage arrays are installed, in an FCoE map by using the <code>fabric id vlan</code> command.</p> <p>When you apply an FCoE map to a server-facing Ethernet port, the port is automatically configured as a tagged member of the FCoE VLAN.</p> <p>For more information about VLANs and the commands to configure them, refer to the Virtual LAN (VLAN) Commands section of the Layer 2 chapter.</p>

Example (Single Range)

```
Dell(conf)#interface vlan 10
Dell(conf-if-vl-3)#
```

Related Commands

[fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

[show fcoe-map](#) — displays the Fibre Channel and FCoE configuration parameters in FCoE maps.

keepalive

In an FCoE map, enable the monitoring of FIP keepalive messages (if it is disabled).

S5000

Syntax	<code>keepalive</code>
Parameters	None
Defaults	FIP keepalive monitoring is enabled on Ethernet and Fibre Channel interfaces.
Command Modes	FCOE MAP
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	<p>FIP keepalive (FKA) messaging is used to detect if other FCoE devices are reachable.</p> <p>To remove FIP keepalive monitoring from an FCoE map, enter the <code>no keepalive</code> command.</p>

Related Commands	<p>fcoe-map — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.</p> <p>show fcoe-map— displays the Fibre Channel and FCoE configuration parameters in FCoE maps.</p>
-------------------------	--

priority-pgid

Assign 802.1p priority traffic to a priority group in a DCB map.

S5000

Syntax	<pre>priority-pgid dot1p0_group-num dot1p1_group-num dot1p2_group-num dot1p3_group-num dot1p4_group-num dot1p5_group-num dot1p6_group-num dot1p7_group-num</pre>
Parameters	<p><i>dot1p0_group-num</i> Enter the priority group number for each 802.1p class of traffic in a DCB map.</p> <p><i>dot1p1_group-num</i></p> <p><i>dot1p2_group-num</i></p> <p><i>dot1p3_group-num</i></p> <p><i>dot1p4_group-num</i></p> <p><i>dot1p5_group-num</i></p> <p><i>dot1p6_group-num</i></p> <p><i>dot1p7_group-num</i></p>
Defaults	None
Command Modes	DCB MAP
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	<p>PFC and ETS settings are not pre-configured on Ethernet ports. You must use the <code>dcb-map</code> command to configure different groups of 802.1p priorities with PFC and ETS settings.</p> <p>Using the <code>priority-pgid</code> command, you assign each 802.1p priority to one priority group. A priority group consists of 802.1p priority values that are grouped together for similar bandwidth allocation and scheduling, and that share latency and loss requirements. All 802.1p priorities mapped to the same queue must be in the same priority group. For example, the <code>priority-pgid 0 0 0 1 2 4 4 4</code> command creates the following groups of 802.1p priority traffic:</p> <ul style="list-style-type: none"> • Priority group 0 contains traffic with dot1p priorities 0, 1, and 2. • Priority group 1 contains traffic with dot1p priority 3. • Priority group 2 contains traffic with dot1p priority 4. • Priority group 4 contains traffic with dot1p priority 5, 6, and 7. <p>To remove a <code>priority-pgid</code> configuration from a DCB map, enter the <code>no priority-pgid</code> command.</p>
Related Commands	<p>dcb-map — creates a DCB map to configure PFC and ETS parameters and applies the PFC and ETS settings on Ethernet ports.</p>

[priority-group bandwidth pfc](#)— configures the ETS bandwidth allocation and the PFC setting used to manage the port traffic in an 802.1p priority group.

priority-group bandwidth pfc

Configure the ETS bandwidth allocation and PFC mode used to manage port traffic in an 802.1p priority group.

S5000

Syntax	<code>priority-group group-num {bandwidth percentage strict-priority} pfc {on off}</code>								
Parameters	<table><tr><td>priority-group group-num</td><td>Enter the keyword <code>priority-group</code> followed by the number of an 802.1p priority group. Use the <code>priority-pgid</code> command to create the priority groups in a DCB map.</td></tr><tr><td>bandwidth percentage</td><td>Enter the keyword <code>bandwidth</code> followed by a bandwidth percentage allocated to the priority group. The range of valid values is 1 to 100. The sum of all allocated bandwidth percentages in priority groups in a DCB map must be 100%.</td></tr><tr><td>strict-priority</td><td>Configure the priority-group traffic to be handled with strict priority scheduling. Strict-priority traffic is serviced first, before bandwidth allocated to other priority groups is made available.</td></tr><tr><td>pfc {on off}</td><td>Configure whether priority-based flow control is enabled (on) or disabled (off) for port traffic in the priority group.</td></tr></table>	priority-group group-num	Enter the keyword <code>priority-group</code> followed by the number of an 802.1p priority group. Use the <code>priority-pgid</code> command to create the priority groups in a DCB map.	bandwidth percentage	Enter the keyword <code>bandwidth</code> followed by a bandwidth percentage allocated to the priority group. The range of valid values is 1 to 100. The sum of all allocated bandwidth percentages in priority groups in a DCB map must be 100%.	strict-priority	Configure the priority-group traffic to be handled with strict priority scheduling. Strict-priority traffic is serviced first, before bandwidth allocated to other priority groups is made available.	pfc {on off}	Configure whether priority-based flow control is enabled (on) or disabled (off) for port traffic in the priority group.
priority-group group-num	Enter the keyword <code>priority-group</code> followed by the number of an 802.1p priority group. Use the <code>priority-pgid</code> command to create the priority groups in a DCB map.								
bandwidth percentage	Enter the keyword <code>bandwidth</code> followed by a bandwidth percentage allocated to the priority group. The range of valid values is 1 to 100. The sum of all allocated bandwidth percentages in priority groups in a DCB map must be 100%.								
strict-priority	Configure the priority-group traffic to be handled with strict priority scheduling. Strict-priority traffic is serviced first, before bandwidth allocated to other priority groups is made available.								
pfc {on off}	Configure whether priority-based flow control is enabled (on) or disabled (off) for port traffic in the priority group.								
Defaults	None								
Command Modes	DCB MAP								
Command History	Version 9.0(1.3) Introduced on the S5000.								
Usage Information	<p>Use the <code>dcb-map</code> command to configure priority groups with PFC and/or ETS settings and apply them to Ethernet interfaces.</p> <p>Use the <code>priority-pgid</code> command to map 802.1p priorities to a priority group. You can assign each 802.1p priority to only one priority group. A priority group consists of 802.1p priority values that are grouped together for similar bandwidth allocation and scheduling, and that share latency and loss requirements. All 802.1p priorities mapped to the same queue must be in the same priority group.</p> <p>Repeat the <code>priority-group bandwidth pfc</code> command to configure PFC and ETS traffic handling for each priority group in a DCB map.</p> <p>You can enable PFC on a maximum of two priority queues.</p> <p>If you configure more than one priority group as strict priority, the higher numbered priority queue is given preference when scheduling data traffic.</p> <p>If a priority group does not use its allocated bandwidth, the unused bandwidth is made available to other priority groups.</p> <p>To remove a priority-group configuration in a DCB map, enter the <code>no priority-group bandwidth pfc</code> command.</p> <p>By default, equal bandwidth is assigned to each dot1p priority in a priority group. Use the <code>bandwidth</code> parameter to configure the bandwidth percentage assigned to a priority group. The sum of the bandwidth allocated to all priority groups in a DCB map must be 100% of the bandwidth on the link. You must allocate at least 1% of the total port bandwidth to each priority group.</p>								
Related Commands	<p>dcb-map – creates a DCB map to configure PFC and ETS parameters and applies the PFC and ETS settings on Ethernet ports.</p> <p>priority-pgid – configures the 802.1p priority traffic in a priority group for a DCB map.</p>								

show fcoe-map

Display the Fibre Channel and FCoE configuration parameters in FCoE maps.

S5000

Syntax	<code>show fcoe-map [brief map-name]</code>	
Parameters	brief	Displays an overview of currently configured FCoE maps.
	map-name	Displays the FC and FCoE configuration parameters in a specified FCoE map. The FCoE map is applied on Ethernet (FCoE) and FC ports to transmit FC storage traffic to a specified fabric.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege	
Command History	Version 9.1(1.0)	Included support for Fabric Services mode, switch configuration, and switch zoning parameters.
	Version 9.0(1.3)	Introduced on the S5000.

Usage Information

Use the `show fcoe-map` command to display the FC and FCoE parameters used to configure server-facing Ethernet (FCoE) and fabric-facing FC ports in all FCoE maps on an S5000 NPIV proxy gateway.

In each FCoE map, the values for the fabric ID and FC-MAP that identify the SAN fabric to which FC storage traffic is sent, and the FCoE VLAN to be used must be unique.

An FCoE map is used to identify the SAN fabric to which FCoE storage traffic is sent and to virtualize S5000 FC ports so that they appear to downstream server CNA ports as FCoE Forwarder (FCF) ports on an FCoE network.

The following table describes the `show fcoe-map brief` and `show fcoe-map map-name` output shown in the examples below.

Field	Description
Fabric-Name	Name of a SAN fabric.
Fabric ID	The ID number of the SAN fabric to which FC traffic is forwarded.
VLAN ID	The dedicated FCoE VLAN used to transport FCoE storage traffic between servers and a fabric over the NPIV proxy gateway. The configured VLAN ID must be the same as the fabric ID.
VLAN priority	FCoE traffic uses VLAN priority 3. (This setting is not user-configurable.)
FC-MAP	FCoE MAC address-prefix value - The unique 24-bit MAC address prefix that identifies a fabric.
FKA-ADV-period	Time interval (in seconds) used to transmit FIP keepalive advertisements.
FCF Priority	The priority used by a server to select an upstream FCoE forwarder.
Config-State	Indicates whether the configured FCoE and FC parameters in the FCoE map are valid: Active (all mandatory FCoE and FC parameters are correctly configured) or Incomplete (either the FC-MAP value, fabric ID, or VLAN ID are not correctly configured).
Oper-State	Operational status of link to the fabric: Up (link is up and transmitting FC traffic), Down (link is down and not transmitting FC traffic), Link-wait (link is up and waiting for FLOGI to complete on peer FC port), or Removed (port has been shut down).
Members	S5000 Ethernet and FC ports that are members of the dedicated FCoE VLAN that carries storage traffic to the specified fabric.

Example

```
Dell#show fcoe-map brief
Fabric-Name      Fabric-Id Vlan-Id FC-MAP  FCF-Priority Config-State
Oper-State
default_full_fabric 1002      1002    0efc00  128        ACTIVE
UP
Dell#

Dell#show fcoe-map

Fabric Name      default_full_fabric

Fabric Type      full-fabric
Fabric Id        1002
Vlan Id          1002
Vlan priority    3
FC-MAP           0efc00
FKA-ADV-Period  8
Fcf Priority     128
Config-State     ACTIVE
Oper-State       UP
=====
Switch Config Parameters
=====
R_A_TOV (ms)     10000
R_T_TOV (ms)     100
E_D_TOV (ms)     2000
DomainID         2
DomainID-Locked OFF
Principal-Pri    254
=====
Switch Zoning Parameters
=====
Default Zone Mode: Deny
Active Zoneset:   None
=====
Members
Fc 0/0 Fc 0/1 Fc 0/2 Fc 0/3 Fc 0/4 Fc 0/5 Fc 0/6 Fc 0/7 Fc 0/8 Fc 0/9 Fc
0/10 Fc 0/11
=====
Dell#
```

Related Commands

[fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

[fc zoneset](#) — creates a zoneset.

show npiv devices

Display the FCoE and FC devices currently logged in to an S5000 NPIV proxy gateway.

S5000

Syntax show npiv devices [brief]

Parameters **brief** Displays an overview of current server CNA-fabric connections over an S5000 NPIV proxy gateway.

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

Use the `show npiv devices` command to display information on the server CNA, server-facing Ethernet and fabric-facing FC ports, and the SAN fabric in each server-fabric connection over an S5000 NPIV proxy gateway.

The following table describes the `show npiv devices brief` output shown in the example below.

Field	Description
ENode-Intf	S5000 Ethernet interface (<i>slot/port</i>) to which a server CNA is connected.
ENode-WWPN	Worldwide port name (WWPN) of a server CNA port.
FCoE-Vlan	VLAN ID of the dedicated VLAN used to transmit FCoE traffic to and from the fabric.
Fabric-Intf	Fabric-facing Fibre Channel port (<i>slot/port</i>) on which FC traffic is transmitted to the specified fabric.
Fabric-Map	Name of the FCoE map containing the FCoE/FC configuration parameters for the server CNA-fabric connection.
LoginMethod	Method used by the server CNA to log in to the fabric; for example: FLOGI - ENode logged in using a fabric login (FLOGI). FDISC - ENode logged in using a fabric discovery (FDISC).
Status	Operational status of the link between a server CNA port and a SAN fabric: Logged In - Server has logged in to the fabric and is able to transmit FCoE traffic.

Example

```
Dell# show npiv devices brief

Total NPIV Devices = 2
-----
ENode-Intf  ENode-WWPN          FCoE-Vlan  Fabric-Intf  Fabric-Map  LoginMethod  Status
-----
Te 0/12    2=0:01:00:10:18:f1:94:20  1003      Fc 0/5      fid_1003    FLOGI        LOGGED_IN
Te 0/13    10:00:00:00:c9:d9:9c:cb  1003      Fc 0/0      fid_1003    FDISC        LOGGED_IN
```

Usage Information

The following table describes the `show npiv devices` output shown in the example below.

Field	Description
ENode [number]	A server CNA that has successfully logged in to a fabric over an S5000 Ethernet port in ENode mode.
Enode MAC	MAC address of a server CNA port.
Enode Intf	Port number of a server-facing Ethernet port operating in ENode mode.
FCF MAC	Fibre Channel forwarder MAC: MAC address of S5000 FCF interface.
Fabric Intf	Fabric-facing Fibre Channel port (<i>slot/port</i>) on which FCoE traffic is transmitted to the specified fabric.
FCoE VLAN	ID of the dedicated VLAN used to transmit FCoE traffic from a server CNA to a fabric and configured on both the server-facing S5000 port and server CNA port.
Fabric Map	Name of the FCoE map containing the FCoE/FC configuration parameters for the server CNA-fabric connection.
Enode WWPN	Worldwide port name of the server CNA port.
Enode WWNN	Worldwide node name of the server CNA.
FCoE MAC	Fabric-provided MAC address (FPMA). The FPMA consists of the FC-MAP value in the FCoE map and the FC-ID provided by the fabric after a successful FLOGI. In the

Field	Description
	FPMA, the most significant bytes are the FC-MAP; the least significant bytes are the FC-ID.
FC-ID	FC port ID provided by the fabric.
LoginMethod	Method used by the server CNA to log in to the fabric; for example, FLOGI or FDISC.
Secs	Number of seconds that the fabric connection is up.
State	Status of the fabric connection: logged in.

Example

```

ENode[0]:
ENode MAC      :      00:10:18:f1:94:21
ENode Intf     :      Te 0/12
FCF MAC       :      5c:f9:dd:ef:10:c8
Fabric Intf    :      Fc 0/5
FCoE Vlan     :      1003
Fabric Map     :      fid_1003
ENode WWPN    :      20:01:00:10:18:f1:94:20
ENode WWNN    :      20:00:00:10:18:f1:94:21
FCoE MAC      :      0e:fc:03:01:02:01
FC-ID         :      01:02:01
LoginMethod    :      FLOGI
Secs          :      5593
Status        :      LOGGED_IN

ENode[1]:
ENode MAC      :      00:10:18:f1:94:22
ENode Intf     :      Te 0/13
FCF MAC       :      5c:f9:dd:ef:10:c9
Fabric Intf    :      Fc 0/0
FCoE Vlan     :      1003
Fabric Map     :      fid_1003
ENode WWPN    :      10:00:00:00:c9:d9:9c:cb
ENode WWNN    :      10:00:00:00:c9:d9:9c:cd
FCoE MAC      :      0e:fc:03:01:02:02
FC-ID         :      01:02:01
LoginMethod    :      FDISC
Secs          :      5593
Status        :      LOGGED_IN

```

Related Commands

[dcb-map](#) — creates a DCB map to configure DCB parameters on Ethernet ports that support converged Ethernet traffic.

[fcoe-map](#) — creates an FCoE map which contains the parameters used in the communication between servers and a SAN fabric.

show fc switch

Display the switch configuration for Fibre Channel capability.

S5000

Syntax `show fc switch`

Parameters None

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

Use the `show interfaces fibrechannel` command to display information on the Fibre Channel capability of a switch.

The following table describes the `show fc switch` output shown in the following example.

Switch Mode	Fibre Channel mode of operation of an S5000 switch. Default: NPG (configured as an NPIV proxy gateway).
Switch WWN	Factory-assigned worldwide node (WWN) name of the S5000. The S5000 WWN name is not user-configurable.

Example

```
Dell# show fc switch
Switch Mode : NPG
Switch WWN  : 10:00:5c:f9:dd:ef:10:c0
Dell#
```

Related Commands

[interface fibrechannel](#) — configures a Fibre Channel interface on the switch.

[show interfaces fibrechannel](#) — displays the configuration of a Fibre Channel interface.

show qos dcb-map

Display the DCB parameters configured in a specified DCB map.

S5000

Syntax

```
show qos dcb-map map-name
```

Parameters

map-name Displays the PFC and ETS parameters configured in the specified map.

Command Modes

- EXEC
- EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Usage Information

Use the `show qos dcb-map` command to display the enhanced transmission selection (ETS) and priority-based flow control (PFC) parameters used to configure server-facing Ethernet ports. S5000 Ethernet ports are DCBx-enabled by default.

The following table describes the `show qos dcb-map` output shown in the example below.

Field	Description
State	Complete: All mandatory DCB parameters are correctly configured. In progress: The DCB map configuration is not complete. Some mandatory parameters are not configured.
PFC Mode	PFC configuration in DCB map: On (enabled) or Off.
PG	Priority group configured in the DCB map.
TSA	Transmission scheduling algorithm used by the priority group: Enhanced Transmission Selection (ETS).
BW	Percentage of bandwidth allocated to the priority group.
PFC	PFC setting for the priority group: On (enabled) or Off.
Priorities	802.1p priorities configured in the priority group.

Example

```
Dell# show qos dcb-map dcbmap2

State      :Complete
PfcMode:ON
-----
PG:0 TSA:ETS  BW:50  PFC:OFF
Priorities:0 1 2 4 5 6 7

PG:1 TSA:ETS  BW:50  PFC:ON
Priorities:3
```

Related Commands

[dcb-map](#) — creates a DCB map to configure PFC and ETS parameters and applies the PFC and ETS settings on Ethernet ports.

Open Shortest Path First (OSPFv2 and OSPFv3)

Open Shortest Path First version 2 for IPv4 is supported on platform.

OSPF is an interior gateway protocol (IGP), which means that it distributes routing information between routers in a single autonomous system (AS). OSPF is also a link-state protocol in which all routers contain forwarding tables derived from information about their links to their neighbors.

The fundamental mechanisms of OSPF (flooding, DR election, area support, SPF calculations, and so on) are the same for OSPFv2 and OSPFv3. OSPFv3 runs on a per-link basis instead of on a per-IP-subnet basis.

The Dell EMC Networking OS versions 9.4(0.0) and 9.7(0.0) introduce support for VRF on OSPFv2 and OSPFv3 respectively. The multi-process OSPF feature supported on Dell EMC Networking OS version 7.8.1.0 is modified. In earlier versions, multiple OSPF processes were created without VRF (prior to 9.4(0.0)). In the Dell EMC Networking OS versions 9.4(0.0) and 9.7(0.0) (for OSPFv3), multiple OSPF processes can be created on a router, but with only one OSPF process per VRF. However, there can be one OSPFv2 and one OSPFv3 on the same VRF.

This section is divided into two sections. There is no overlap between the two sets of commands. You cannot use an OSPFv2 command in the IPv6 OSPFv3 mode. OSPFv2 is supported on IPv4 tunnels only and OSPFv3 is supported on IPv6 tunnels only.

Topics:

- [area default-cost](#)
- [area nssa](#)
- [area range](#)
- [area stub](#)
- [area virtual-link](#)
- [auto-cost](#)
- [clear ip ospf](#)
- [clear ip ospf statistics](#)
- [debug ip ospf](#)
- [default-information originate](#)
- [default-metric](#)
- [description](#)
- [distance](#)
- [distance ospf](#)
- [distribute-list in](#)
- [distribute-list out](#)
- [fast-convergence](#)
- [flood-2328](#)
- [graceful-restart grace-period](#)
- [graceful-restart helper-reject](#)
- [graceful-restart mode](#)
- [graceful-restart role](#)
- [ip ospf auth-change-wait-time](#)
- [ip ospf authentication-key](#)
- [ip ospf cost](#)
- [ip ospf dead-interval](#)
- [ip ospf hello-interval](#)
- [ip ospf message-digest-key](#)
- [ip ospf mtu-ignore](#)
- [ip ospf network](#)
- [ip ospf priority](#)

- [ip ospf retransmit-interval](#)
- [ip ospf transmit-delay](#)
- [log-adjacency-changes](#)
- [maximum-paths](#)
- [mib-binding](#)
- [network area](#)
- [passive-interface](#)
- [debug ip ospf](#)
- [redistribute bgp](#)
- [redistribute isis](#)
- [router-id](#)
- [router ospf](#)
- [show config](#)
- [show ip ospf](#)
- [show ip ospf asbr](#)
- [show ip ospf database](#)
- [show ip ospf database asbr-summary](#)
- [show ip ospf database external](#)
- [show ip ospf database network](#)
- [show ip ospf database nssa-external](#)
- [show ip ospf database opaque-area](#)
- [show ip ospf database opaque-as](#)
- [show ip ospf database opaque-link](#)
- [show ip ospf database router](#)
- [show ip ospf database summary](#)
- [show ip ospf interface](#)
- [show ip ospf neighbor](#)
- [show ip ospf routes](#)
- [show ip ospf statistics](#)
- [show ip ospf timers rate-limit](#)
- [show ip ospf topology](#)
- [show ip ospf virtual-links](#)
- [summary-address](#)
- [timers spf](#)
- [timers throttle lsa all](#)
- [timers throttle lsa arrival](#)
- [OSPFv3 Commands](#)

area default-cost

Set the metric for the summary default route the area border router (ABR) generates into the stub area. Use this command on the border routers at the edge of a stub area.

Syntax `area area-id default-cost cost`
 To return default values, use the `no area area-id default-cost` command.

Parameters

<i>area-id</i>	Specify the OSPF area in dotted decimal format (A.B.C.D.) or enter a number from zero (0) to 65535.
<i>cost</i>	Specifies the stub area's advertised external route metric. The range is from zero (0) to 65535.

Defaults `cost = 1`; no areas are configured.

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

In the Dell EMC Networking operating software (OS), `cost` is defined as reference bandwidth/bandwidth.

Related Commands

- [area stub](#) — create a stub area.

area nssa

Specify an area as a not so stubby area (NSSA).

Syntax

```
area area-id nssa [default-information-originate] [no-redistribution] [no-summary]
```

To delete an NSSA, use the `no area area-id nssa` command.

Parameters

<i>area-id</i>	Specify the OSPF area in dotted decimal format (A.B.C.D.) or enter a number from zero (0) to 65535.
no-redistribution	(OPTIONAL) Specify that the <code>redistribute</code> command does not distribute routes into the NSSA. This command can be used when the router is an autonomous system boundary router (ASBR) or area border router (ABR).
default-information-originate	(OPTIONAL) Allows external routing information to be imported into the NSSA by using Type 7 default.
no-summary	(OPTIONAL) Specify that no summary LSAs should be sent into the NSSA.

Defaults

Not configured.

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

area range

Summarize routes matching an address/mask at an area border router (ABR).

Syntax

```
area area-id range ip-address mask [not-advertise]
```

To disable route summarization, use the `no area area-id range ip-address mask` command.

Parameters

<i>area-id</i>	Specify the OSPF area in dotted decimal format (A.B.C.D.) or enter a number from zero (0) to 65535.
<i>ip-address</i>	Specify an IP address in dotted decimal format.
<i>mask</i>	Specify a mask for the destination prefix. Enter the full mask (for example, 255.255.255.0).
not-advertise	(OPTIONAL) Enter the keywords <code>not-advertise</code> to set the status to DoNotAdvertise (that is, the Type 3 summary-LSA is suppressed and the component networks remain hidden from other areas.)

Defaults

Not configured.

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

Only the routes within an area are summarized, and that summary is advertised to other areas by the ABR. External routes are not summarized.

Related Commands

- [area stub](#) — create a stub area.
- [router ospf](#) — enter ROUTER OSPF mode to configure an OSPF instance.

area stub

Configure a stub area, which is an area not connected to other areas.

Syntax

```
area area-id stub [no-summary]
```

To delete a stub area, use the `no area area-id stub` command.

Parameters

- area-id** Specify the OSPF area in dotted decimal format (A.B.C.D.) or enter a number from zero (0) to 65535.
- no-summary** (OPTIONAL) Enter the keywords `no-summary` to prevent the ABR from sending summary Link State Advertisements (LSAs) into the stub area.

Defaults

Disabled.

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

To configure all routers and access servers within a stub, use this command.

Related Commands

- [router ospf](#) — enter ROUTER OSPF mode to configure an OSPF instance.

area virtual-link

Set a virtual link and its parameters.

C-Series, E-Series, S-Series

Syntax

```
area area-id virtual-link router-id [[authentication-key [encryption-type]
key] | [message-digest-key keyid md5 [encryption-type] key]] [dead-interval
seconds] [hello-interval seconds] [retransmit-interval seconds] [transmit-
delay seconds]
```

To delete a virtual link, use the `no area area-id virtual-link router-id` command.

To delete a parameter of a virtual link, use the `no area area-id virtual-link router-id [[authentication-key [encryption-type] key] | [message-digest-key keyid md5 [encryption-type] key]] [dead-interval seconds] [hello-interval seconds] [retransmit-interval seconds] [transmit-delay seconds]` command syntax.

Parameters

<i>area-id</i>	Specify the OSPF area in dotted decimal format (A.B.C.D.) or enter a number from zero (0) to 65535.
<i>router-id</i>	Specify an ID (IP address in dotted decimal format) associated with a virtual link neighbor.
authentication-key [<i>encryption-type</i>] key message-digest-key <i>keyid</i> md5 [<i>encryption-type</i>] key	(OPTIONAL) Choose between two authentication methods: <ul style="list-style-type: none"> • Enter the keywords <code>authentication-key</code> to enable simple authentication followed by an alphanumeric string up to eight characters long. Optionally, for the <code>encryption-type</code> variable, enter the number seven before entering the <code>key</code> string to indicate that an encrypted password will follow. • Enter the keywords <code>message-digest-key</code> followed by a number from 1 to 255 as the <code>keyid</code>. After the <code>keyid</code>, enter the keyword <code>md5</code> followed by the

key. The key is an alphanumeric string up to 16 characters long. Optionally, for the `encryption-type` variable, enter the number seven before entering the key string to indicate that an encrypted password will follow.

dead-interval seconds	(OPTIONAL) Enter the keywords <code>dead-interval</code> followed by a number as the number of seconds for the interval. The range is 1 to 8192. The default is 40 seconds .
hello-interval seconds	(OPTIONAL) Enter the keywords <code>hello-interval</code> followed by the number of seconds for the interval. The range is 1 to 8192. The default is 10 seconds .
retransmit-interval seconds	(OPTIONAL) Enter the keywords <code>retransmit-interval</code> followed by the number of seconds for the interval. The range is 1 to 8192. The default is 5 seconds .
transmit-delay seconds	(OPTIONAL) Enter the keywords <code>transmit-delay</code> followed by the number of seconds for the interval. The range is 1 to 8192. The default is 1 second .

- Defaults**
- `dead-interval seconds` = **40 seconds**
 - `hello-interval seconds` = **10 seconds**
 - `retransmit-interval seconds` = **5 seconds**
 - `transmit-delay seconds` = **1 second**

Command Modes ROUTER OSPF

Command History	Version	Description
	9.7(0.0)	Introduced on the S6000-ON.
	8.3.12.0	Deprecated command on the S4810.
	8.3.7.0	Introduced on the S4810.
	7.8.1.0	Added support for the Multi-Process OSPF.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	6.1.1.1	Introduced on the E-Series.

Usage Information

All OSPF areas must be connected to a backbone area (usually Area 0). Virtual links connect broken or discontinuous areas.

You cannot enable both authentication options. Choose either the `authentication-key` or `message-digest-key` option.

Related Commands [router ospf](#) – enters ROUTER OSPF mode to configure an OSPF instance.

auto-cost

Specify how the OSPF interface cost is calculated based on the reference bandwidth method.

Syntax `auto-cost [reference-bandwidth ref-bw]`

To return to the default bandwidth or to assign cost based on the interface type, use the `no auto-cost [reference-bandwidth]` command.

Parameters `ref-bw` (OPTIONAL) Specify a reference bandwidth in megabits per second. The range is from 1 to 4294967. The default is **100 megabits per second**.

Defaults **100 megabits per second.**

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

clear ip ospf

Clear all OSPF routing tables.

Syntax

```
clear ip ospf process-id [vrf vrf-name] [process]
```

Parameters

<i>process-id</i>	Enter the OSPF Process ID to clear a specific process. If no Process ID is entered, all OSPF processes are cleared.
<i>vrf vrf-name</i>	Enter the keyword <code>vrf</code> and then the name of the VRF to clear all OSPF routing tables corresponding to that VRF.
<i>process</i>	(OPTIONAL) Enter the keyword <code>process</code> to reset the OSPF process.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

clear ip ospf statistics

Clear the packet statistics in interfaces and neighbors.

Syntax	<code>clear ip ospf [process-id] [vrf vrf-name] statistics [interface name {neighbor router-id}]</code>
Parameters	<p>process-id Enter the OSPF Process ID to clear a specific process. If no Process ID is entered, all OSPF processes are cleared.</p> <p>vrf vrf-name Enter the keyword <code>vrf</code> followed by the name of the VRF to clear all OSPF routing tables corresponding to that VRF.</p> <p>statistics Enter the keyword <code>statistics</code> to clear the packet statistics in interfaces and neighbors.</p> <p>interface name (OPTIONAL) Enter the keyword <code>interface</code> then one of the following interface keywords and slot/port or number information:</p> <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a VLAN, enter the keyword <code>vlan</code> then a number from 1 to 4094. For Port Channel groups, enter the keywords <code>port-channel</code> then a number. <p>neighbor router-id (OPTIONAL) Enter the keyword <code>neighbor</code> then the neighbor's router-id in dotted decimal format (A.B.C.D.).</p>
Defaults	None
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Related Commands

- [show ip ospf statistics](#) — display the OSPF statistics.

debug ip ospf

Display debug information on OSPF. Entering the `debug ip ospf` commands enables OSPF debugging for the first OSPF process.

S5000

Syntax `debug ip ospf process-id [bfd | event | packet | spf | database-timer rate-limit]`

To cancel the debug command, use the `no debug ip ospf` command.

Parameters	
process-id	Enter the OSPF Process ID to clear a specific process. If no Process ID is entered, all OSPF processes are cleared.
bfd	(OPTIONAL) Enter the keyword <code>bfd</code> to debug only OSPF BFD information.
event	(OPTIONAL) Enter the keyword <code>event</code> to debug only OSPF event information.
packet	(OPTIONAL) Enter the keyword <code>packet</code> to debug only OSPF packet information.
spf	(OPTIONAL) Enter the keyword <code>spf</code> to display the Shortest Path First information.
database-timer rate-limit	(OPTIONAL) Enter the keywords <code>database-timer rate-limit</code> to display the LSA throttling timer information.

Command Modes EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The following describes output for the `debug ip ospf` command shown in the Example below.

Field	Description
8:14	Displays the time stamp.
OSPF	Displays the OSPF process ID: instance ID.
v:	Displays the OSPF version. Dell Networking OS supports version 2 only.
t:	Displays the type of packet sent: <ul style="list-style-type: none"> • 1 - Hello packet • 2 - database description • 3 - link state request • 4 - link state update • 5 - link state acknowledgement
l:	Displays the packet length.
rid:	Displays the OSPF router ID.
aid:	Displays the Autonomous System ID.
chk:	Displays the OSPF checksum.
aut:	States if OSPF authentication is configured. One of the following is listed: <ul style="list-style-type: none"> • 0 - no authentication configured • 1 - simple authentication configured using the <code>ip ospf authentication-key</code> command • 2 - MD5 authentication configured using the <code>ip ospf message-digest-key</code> command
auk:	If the <code>ip ospf authentication-key</code> command is configured, this field displays the key used.
keyid:	If the <code>ip ospf message-digest-key</code> command is configured, this field displays the MD5 key
to:	Displays the interface to which the packet is intended.
dst:	Displays the destination IP address.
netmask:	Displays the destination IP address mask.
pri:	Displays the OSPF priority
N, MC, E, T	Displays information available in the Options field of the HELLO packet: <ul style="list-style-type: none"> • N + (N-bit is set) • N - (N-bit is not set) • MC+ (bit used by MOSPF is set and router is able to forward IP multicast packets) • MC- (bit used by MOSPF is not set and router cannot forward IP multicast packets) • E + (router is able to accept AS External LSAs) • E - (router cannot accept AS External LSAs) • T + (router can support TOS) • T - (router cannot support TOS)
hi:	Displays the amount of time configured for the HELLO interval.
di:	Displays the amount of time configured for the DEAD interval.
dr:	Displays the IP address of the designated router.
bdr:	Displays the IP address of the Border Area Router.

Example

```
Dell#debug ip ospf 1 packet
OSPF process 90, packet debugging is on

Dell#
08:14:24 : OSPF(100:00):
```

```
Xmt. v:2 t:1(HELLO) l:44 rid:192.1.1.1
aid:0.0.0.1 chk:0xa098 aut:0 auk: keyid:0 to:Te 4/3 dst:224.0.0.5
netmask:255.255.255.0 pri:1 N-, MC-, E+, T-,
hi:10 di:40 dr:90.1.1.1 bdr:0.0.0.0
```

default-information originate

To generate a default external route into an OSPF routing domain, configure Dell EMC Networking Operating System (OS).

Syntax `default-information originate [always] [metric metric-value] [metric-type type-value] [route-map map-name]`

To return to the default values, use the `no default-information originate` command.

Parameters	always	(OPTIONAL) Enter the keyword <code>always</code> to specify that default route information must always be advertised.
	metric <i>metric-value</i>	(OPTIONAL) Enter the keyword <code>metric</code> then a number to configure a metric value for the route. The range is from 1 to 16777214.
	metric-type <i>type-value</i>	(OPTIONAL) Enter the keywords <code>metric-type</code> then an OSPF link state type of 1 or 2 for default routes. The values are: <ul style="list-style-type: none"> • 1 = Type 1 external route • 2 = Type 2 external route
	route-map <i>map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of an established route map.

Defaults Disabled.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Related Commands

- redistribute — redistributes routes from other routing protocols into OSPF.

default-metric

Change the metrics of redistributed routes to a value useful to OSPF. Use this command with the `redistribute` command.

Syntax `default-metric number`

To return to the default values, use the `no default-metric [number]` command.

Parameters **number** Enter a number as the metric. The range is from 1 to 16777214.

Defaults Disabled.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

description

Add a description about the selected OSPF configuration.

Syntax `description description`

To remove the OSPF description, use the `no description` command.

Parameters *description* Enter a text string description to identify the OSPF configuration (80 characters maximum).

Defaults None

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Related Commands • [show ip ospf asbr](#) — display the VLAN configuration.

distance

Define an administrative distance for particular routes to a specific IP address.

Syntax `distance weight [ip-address mask access-list-name]`
To delete the settings, use the `no distance weight [ip-address mask access-list-name]` command.

Parameters

- weight** Specify an administrative distance. The range is from 1 to 255. The default is **110**.
- ip-address** (OPTIONAL) Enter a router ID in the dotted decimal format. If you enter a router ID, include the mask for that router address.
- mask** (OPTIONAL) Enter a mask in dotted decimal format or /n format.
- access-list-name** (OPTIONAL) Enter the name of an IP standard access list, up to 140 characters.

Defaults **110**

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

distance ospf

Configure an OSPF distance metric for different types of routes.

Syntax

```
distance ospf [external dist3] [inter-area dist2] [intra-area dist1]
```

To delete these settings, use the `no distance ospf` command.

Parameters

external <i>dist3</i>	(OPTIONAL) Enter the keyword <code>external</code> then a number to specify a distance for external type 5 and 7 routes. The range is from 1 to 255. The default is 110 .
inter-area <i>dist2</i>	(OPTIONAL) Enter the keywords <code>inter-area</code> then a number to specify a distance metric for routes between areas. The range is from 1 to 255. The default is 110 .
intra-area <i>dist1</i>	(OPTIONAL) Enter the keywords <code>intra-area</code> then a number to specify a distance metric for all routes within an area. The range is from 1 to 255. The default is 110 .

Defaults

- external *dist3* = **110**
- inter-area *dist2* = **110**
- intra-area *dist1* = **110**

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

To specify a distance for routes learned from other routing domains, use the `redistribute` command.

distribute-list in

Apply a filter to incoming routing updates from OSPF to the routing table.

Syntax

`distribute-list prefix-list-name in [interface]`

To delete a filter, use the `no distribute-list prefix-list-name in [interface]` command.

Parameters

- prefix-list-name*** Enter the name of a configured prefix list.
- interface*** (OPTIONAL) Enter one of the following keywords and slot/port or number information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For Port Channel groups, enter the keywords `port-channel` then a number.
 - For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

distribute-list out

To restrict certain routes destined for the local routing table after the SPF calculation, apply a filter.

Syntax	<code>distribute-list <i>prefix-list-name</i> out [bgp connected isis rip static]</code>
	To remove a filter, use the <code>no distribute-list <i>prefix-list-name</i> out [bgp connected isis rip static]</code> command.
Parameters	
<i>prefix-list-name</i>	Enter the name of a configured prefix list.
bgp	(OPTIONAL) Enter the keyword <code>bgp</code> to specify that BGP routes are distributed.  NOTE: BGP and ISIS routes are not available on the C-Series. BGP, ISIS, and RIP routes are not available on the S-Series.
connected	(OPTIONAL) Enter the keyword <code>connected</code> to specify that connected routes are distributed.
isis	(OPTIONAL) Enter the keyword <code>isis</code> to specify that IS-IS routes are distributed.  NOTE: BGP and ISIS routes are not available on the C-Series. BGP, ISIS, and RIP routes are not available on the S-Series.
rip	(OPTIONAL) Enter the keyword <code>rip</code> to specify that RIP routes are distributed.  NOTE: BGP and ISIS routes are not available on the C-Series. BGP, ISIS, and RIP routes are not available on the S-Series.
static	(OPTIONAL) Enter the keyword <code>static</code> to specify that only manually configured routes are distributed.

Defaults Not configured.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for the Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information The `distribute-list out` command applies to routes autonomous system boundary routers (ASBRs) redistributes into OSPF. It can be applied to external type 2 and external type 1 routes, but not to intra-area and inter-area routes.

fast-convergence

This command sets the minimum LSA origination and arrival times to zero (0), allowing more rapid route computation so that convergence takes less time.

Syntax `fast-convergence {number}`

To cancel fast-convergence, use the `no fast convergence` command.

Parameters *number* Enter the convergence level desired. The higher this parameter is set, the faster OSPF converge takes place. The range is from 1 to 4.

Defaults None.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on all platforms.

Usage Information

The higher this parameter is set, the faster OSPF converge takes place.

NOTE: The faster the convergence, the more frequent the route calculations and updates. This behavior impacts CPU utilization and may impact adjacency stability in larger topologies.

Generally, convergence level 1 meets most convergence requirements. Higher convergence levels should only be selected following consultation with Dell EMC Networking technical support.

flood-2328

Enable RFC-2328 flooding behavior.

Syntax

`flood-2328`

To disable, use the `no flood-2328` command.

Defaults

Disabled.

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information

In OSPF, flooding is the most resource-consuming task. The flooding algorithm, described in RFC-2328, requires that OSPF flood LSAs (Link State Advertisements) on all interfaces, as governed by LSA's flooding scope (see Section 13 of the RFC). When multiple direct links connect two routers, the RFC-2328 flooding algorithm generates significant redundant information across all links.

By default, Dell EMC Networking OS implements an enhanced flooding procedure that dynamically and intelligently determines when to optimize flooding. Whenever possible, the OSPF task attempts to reduce flooding overhead by selectively flooding on a subset of the interfaces between two routers.

When you enable `flood-2328` , this command configures Dell EMC Networking OS to flood LSAs on all interfaces.

graceful-restart grace-period

Specifies the time duration, in seconds, that the router's neighbors continue to advertise the router as fully adjacent regardless of the synchronization state during a graceful restart.

NOTE: This command enables OSPFv2 graceful restart globally by setting the grace period (in seconds) that an OSPFv2 router's neighbors continues to advertise the router as adjacent during a graceful restart.

Syntax

```
graceful-restart grace-period seconds
```

To disable the grace period, use the `no graceful-restart grace-period` command.

Parameters

seconds Time duration, in seconds, that specifies the duration of the restart process before OSPF terminates the process. The range is from 40 to 1800 seconds.

Defaults

Not Configured

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series. Added support for Multi-Process OSPF.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

The Helper mode is enabled by default on the device. To enable the restart mode also on the device, you must configure the grace period using this command. After you enable restart mode the router advertises the neighbor as fully adjacent during a restart.

graceful-restart helper-reject

Specify the OSPF router to not act as a helper during graceful restart.

Syntax

`graceful-restart helper-reject ip-address`

To return to default value, use the `no graceful-restart helper-reject` command.

Parameters

ip-address Enter the OSPF router-id, in IP address format, of the restart router that *will not* act as a helper during graceful restart.

Defaults

Not configured.

Command Modes

ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.8.1.0	<code>Restart role</code> enabled on the S-Series (Both <code>Helper</code> and <code>Restart</code> roles now supported on S-Series). Added support for Multi-Process OSPF.
7.7.1.0	Added <code>Helper-Role</code> support on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

graceful-restart mode

Enable the graceful restart mode.

Syntax	<code>graceful-restart mode [planned-only unplanned-only]</code> To disable graceful restart mode, use the <code>no graceful-restart mode</code> command.
Parameters	<p>planned-only (OPTIONAL) Enter the keywords <code>planned-only</code> to indicate graceful restart is supported in a planned restart condition only.</p> <p>unplanned-only (OPTIONAL) Enter the keywords <code>unplanned-only</code> to indicate graceful restart is supported in an unplanned restart condition only.</p>
Defaults	Support for both planned and unplanned failures.
Command Modes	ROUTER OSPF
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

graceful-restart role

Specify the role for your OSPF router during graceful restart.

Syntax	<code>graceful-restart role [helper-only restart-only]</code> To disable graceful restart role, use the <code>no graceful-restart role</code> command.
Parameters	<p>role helper-only (OPTIONAL) Enter the keywords <code>helper-only</code> to specify the OSPF router is a helper only during graceful restart.</p> <p>role restart-only (OPTIONAL) Enter the keywords <code>restart-only</code> to specify the OSPF router is a restart only during graceful-restart.</p>
Defaults	By default, OSPF routers are both helper and restart routers during a graceful restart.
Command Modes	ROUTER OSPF
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF. Added Restart and Helper roles support on the S-Series.
7.7.1.0	Added Helper-Role support on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

ip ospf auth-change-wait-time

OSPF provides a grace period while OSPF changes its interface authentication type. During the grace period, OSPF sends out packets with new and old authentication scheme until the grace period expires.

Syntax	<code>ip ospf auth-change-wait-time seconds</code> To return to the default, use the <code>no ip ospf auth-change-wait-time</code> command.
Parameters	seconds Enter the seconds. The range is from 0 to 300.

Defaults zero (0) seconds.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

ip ospf authentication-key

Enable authentication and set an authentication key on OSPF traffic on an interface.

Syntax `ip ospf authentication-key [encryption-type] key`

To delete an authentication key, use the `no ip ospf authentication-key` command.

Parameters

encryption-type	(OPTIONAL) Enter 7 to encrypt the key.
key	Enter an eight-character string. Strings longer than eight characters are truncated.

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

All neighboring routers in the same network must use the same password to exchange OSPF information.

ip ospf cost

Change the cost associated with the OSPF traffic on an interface.

Syntax

`ip ospf cost cost`

To return to default value, use the `no ip ospf cost` command.

Parameters

cost Enter a number as the cost. The range is from 1 to 65535.

Defaults

The default cost is based on the reference bandwidth.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

If this command is not configured, cost is based on the `auto-cost` command.

When you configure OSPF over multiple vendors, to ensure that all routers use the same cost, use the `ip ospf cost` command. Otherwise, OSPF routes improperly.

Related Commands

- [auto-cost](#) — control how the OSPF interface cost is calculated.

ip ospf dead-interval

Set the time interval since the last hello-packet was received from a router. After the interval elapses, the neighboring routers declare the router dead.

Syntax

```
ip ospf dead-interval seconds
```

To return to the default values, use the `no ip ospf dead-interval` command.

Parameters

seconds Enter the number of seconds for the interval. The range is from 1 to 65535. The default is **40 seconds**.

Defaults

40 seconds

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

By default, the dead interval is four times the default hello-interval.

Related Commands

- [ip ospf hello-interval](#) — set the time interval between the hello packets.

ip ospf hello-interval

Specify the time interval between the hello packets sent on the interface.

Syntax

```
ip ospf hello-interval seconds
```

To return to the default value, use the `no ip ospf hello-interval` command.

Parameters

seconds

Enter the number of seconds for the interval. The range is from 1 to 65535. The default is **10 seconds**.

Defaults

10 seconds

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

The time interval between the hello packets must be the same for routers in a network.

Related Commands

- [ip ospf dead-interval](#) — set the time interval before a router is declared dead.

ip ospf message-digest-key

Enable OSPF MD5 authentication and send an OSPF message digest key on the interface.

Syntax `ip ospf message-digest-key keyid md5 key`
To delete a key, use the `no ip ospf message-digest-key keyid` command.

Parameters

<i>keyid</i>	Enter a number as the key ID. The range is from 1 to 255.
<i>key</i>	Enter a continuous character string as the password.

Defaults No MD5 authentication is configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
9.1(0.0)	Included usage information on maximum number of digest keys per interface.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information You can configure a maximum of six digest keys on an interface. Of the available six digest keys, the switches select the MD5 key that is common. The remaining MD5 keys are unused.

To change to a different key on the interface, enable the new key while the old key is still enabled. Dell EMC Networking OS sends two packets: the first packet authenticated with the old key and the second packet authenticated with the new key. This process ensures that the neighbors learn the new key and communication is not disrupted by keeping the old key enabled.

After the reply is received and the new key is authenticated, delete the old key. Dell EMC recommends keeping only one key per interface.

NOTE: The MD5 secret is stored as plain text in the configuration file with service password encryption. Write down or otherwise record the key. You cannot learn the key once it is configured. Use caution when changing the key.

ip ospf mtu-ignore

Disable OSPF MTU mismatch detection upon receipt of database description (DBD) packets.

Syntax `ip ospf mtu-ignore`

To return to the default, use the `no ip ospf mtu-ignore` command.

Defaults Enabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

ip ospf network

Set the network type for the interface.

Syntax `ip ospf network {broadcast | point-to-point}`

To return to the default, use the `no ip ospf network` command.

Parameters

broadcast	Enter the keyword <code>broadcast</code> to designate the interface as part of a broadcast network.
point-to-point	Enter the keywords <code>point-to-point</code> to designate the interface as part of a point-to-point network.

Defaults Broadcast.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

ip ospf priority

To determine the designated router for the OSPF network, set the priority of the interface.

Syntax	<code>ip ospf priority <i>number</i></code> To return to the default setting, use the <code>no ip ospf priority</code> command.
Parameters	<i>number</i> Enter a number as the priority. The range is from 0 to 255. The default is 1 .
Defaults	1
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

Setting a priority of 0 makes the router ineligible for election as a designated router or backup designated router.

Use this command for interfaces connected to multi-access networks, not point-to-point networks.

ip ospf retransmit-interval

Set the retransmission time between lost link state advertisements (LSAs) for adjacencies belonging to the interface.

Syntax

```
ip ospf retransmit-interval seconds
```

To return to the default values, use the `no ip ospf retransmit-interval` command.

Parameters

seconds Enter the number of seconds as the interval between retransmission. The range is from 1 to 3600. The default is **5 seconds**.
This interval must be greater than the expected round-trip time for a packet to travel between two routers.

Defaults

5 seconds

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

Set the time interval to a number large enough to prevent unnecessary retransmissions.

ip ospf transmit-delay

To send a link state update packet on the interface, set the estimated time elapsed.

Syntax

```
ip ospf transmit-delay seconds
```

To return to the default value, use the `no ip ospf transmit-delay` command.

Parameters

seconds Enter the number of seconds as the interval between retransmission. The range is from 1 to 3600. The default is **1 second**.
This value must be greater than the transmission and propagation delays for the interface.

Defaults

1 second

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

log-adjacency-changes

To send a Syslog message about changes in the OSPF adjacency state, set Dell EMC Networking OS.

Syntax	<code>log-adjacency-changes</code> To disable the Syslog messages, use the <code>no log-adjacency-changes</code> command.
Defaults	Disabled.
Command Modes	ROUTER OSPF
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

maximum-paths

Enable the software to forward packets over multiple paths.

Syntax	<code>maximum-paths number</code> To disable packet forwarding over multiple paths, use the <code>no maximum-paths</code> command.
Parameters	number Specify the number of paths. The range for OSPFv2 is from 1 to 64. The default for OSPFv2 is 4 paths . The range for OSPFv3 is from 1 to 64. The default for OSPFv3 is 8 paths .
Defaults	4
Command Modes	ROUTER OSPF for OSPFv2

ROUTER OSPFv3 for OSPFv3

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1(0.0)	Introduced support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

mib-binding

Enable this OSPF process ID to manage the SNMP traps and process SNMP queries.

Syntax `mib-binding`

To mib-binding on this OSPF process, use the `no mib-binding` command.

Defaults none.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced to all platforms.

Usage Information

This command is either enabled or disabled. If no OSPF process is identified as the MIB manager, the first OSPF process is used.

If an OSPF process has been selected, it must be disabled prior to assigning new process ID the MIB responsibility.

network area

Define which interfaces run OSPF and the OSPF area for those interfaces.

Syntax

```
network ip-address mask area area-id
```

To disable an OSPF area, use the `no network ip-address mask area area-id` command.

Parameters

ip-address	Specify a primary or secondary address in dotted decimal format. The primary address is required before adding the secondary address.
mask	Enter a network mask in /prefix format. (/x)
area-id	Enter the OSPF area ID as either a decimal value or in a valid IP address. Decimal value range is from 0 to 65535. IP address format is dotted decimal format A.B.C.D.  NOTE: If the area ID is smaller than 65535, it is converted to a decimal value. For example, if you use an area ID of 0.0.0.1, it is converted to 1.

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced to all platforms.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

To enable OSPF on an interface, the `network area` command must include, in its range of addresses, the primary IP address of an interface.

 **NOTE:** An interface can be attached only to a single OSPF area.

If you delete all the network area commands for Area 0, the `show ip ospf` command output does not list Area 0.

passive-interface

Suppress both receiving and sending routing updates on an interface.

Syntax

```
passive-interface {default | interface}
```

To enable both the receiving and sending routing, use the `no passive-interface interface` command.

To return all OSPF interfaces (current and future) to active, use the `no passive-interface default` command.

Parameters

default	Enter the keyword <code>default</code> to make all OSPF interfaces (current and future) passive.
interface	Enter the following keywords and slot/port or number information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a VLAN, enter the keyword <code>vlan</code> then a number from 1 to 4094.

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Modified to include the keyword <code>default</code> .
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

Although the passive interface does not send or receive routing updates, the network on that interface is still included in OSPF updates sent using other interfaces.

The `default` keyword sets all interfaces as passive. You can then configure individual interfaces, where adjacencies are desired, using the `no passive-interface interface` command. The `no` form of this command is inserted into the configuration for individual interfaces when the `no passive-interface interface` command is issued while `passive-interface default` is configured.

This command behavior has changed as follows:

`passive-interface interface`

- The previous `no passive-interface interface` is removed from the running configuration.
- The ABR status for the router is updated.
- Save `passive-interface interface` into the running configuration.

`passive-interface default`

- All present and future OSPF interfaces are marked as *passive*.
- Any adjacency is explicitly terminated from all OSPF interfaces.
- All previous `passive-interface interface` commands are removed from the running configuration.
- All previous `no passive-interface interface` commands are removed from the running configuration.

`no passive-interface interface`

- Remove the interface from the passive list.
- The ABR status for the router is updated.
- If `passive-interface default` is specified, then save `no passive-interface interface` into the running configuration.

`No passive-interface default`

- Clear everything and revert to the default behavior.
- All previously marked passive interfaces are removed.
- May update ABR status.

On configuring suppression using the `passive-interface` command, the state of the OSPF neighbor does not change to INIT; instead, the state of the OSPF neighbor changes to DOWN after the dead-timer expires.

debug ip ospf

Display debug information on OSPF. Entering the `debug ip ospf` commands enables OSPF debugging for the first OSPF process.

S5000

Syntax `debug ip ospf process-id [bfd | event | packet | spf | database-timer rate-limit]`

To cancel the debug command, use the `no debug ip ospf` command.

Parameters	process-id	Enter the OSPF Process ID to clear a specific process. If no Process ID is entered, all OSPF processes are cleared.
	bfd	(OPTIONAL) Enter the keyword <code>bfd</code> to debug only OSPF BFD information.
	event	(OPTIONAL) Enter the keyword <code>event</code> to debug only OSPF event information.
	packet	(OPTIONAL) Enter the keyword <code>packet</code> to debug only OSPF packet information.
	spf	(OPTIONAL) Enter the keyword <code>spf</code> to display the Shortest Path First information.
	database-timer rate-limit	(OPTIONAL) Enter the keywords <code>database-timer rate-limit</code> to display the LSA throttling timer information.

Command Modes EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information The following describes output for the `debug ip ospf` command shown in the Example below.

Field	Description
8:14	Displays the time stamp.
OSPF	Displays the OSPF process ID: instance ID.
v:	Displays the OSPF version. Dell Networking OS supports version 2 only.
t:	Displays the type of packet sent: <ul style="list-style-type: none">• 1 - Hello packet• 2 - database description• 3 - link state request• 4 - link state update• 5 - link state acknowledgement
l:	Displays the packet length.
rid:	Displays the OSPF router ID.
aid:	Displays the Autonomous System ID.
chk:	Displays the OSPF checksum.
aut:	States if OSPF authentication is configured. One of the following is listed: <ul style="list-style-type: none">• 0 - no authentication configured• 1 - simple authentication configured using the <code>ip ospf authentication-key</code> command• 2 - MD5 authentication configured using the <code>ip ospf message-digest-key</code> command
auk:	If the <code>ip ospf authentication-key</code> command is configured, this field displays the key used.
keyid:	If the <code>ip ospf message-digest-key</code> command is configured, this field displays the MD5 key

to:	Displays the interface to which the packet is intended.
dst:	Displays the destination IP address.
netmask:	Displays the destination IP address mask.
pri:	Displays the OSPF priority
N, MC, E, T	Displays information available in the Options field of the HELLO packet: <ul style="list-style-type: none"> • N + (N-bit is set) • N - (N-bit is not set) • MC+ (bit used by MOSPF is set and router is able to forward IP multicast packets) • MC- (bit used by MOSPF is not set and router cannot forward IP multicast packets) • E + (router is able to accept AS External LSAs) • E - (router cannot accept AS External LSAs) • T + (router can support TOS) • T - (router cannot support TOS)
hi:	Displays the amount of time configured for the HELLO interval.
di:	Displays the amount of time configured for the DEAD interval.
dr:	Displays the IP address of the designated router.
bdr:	Displays the IP address of the Border Area Router.

Example

```
Dell#debug ip ospf 1 packet
OSPF process 90, packet debugging is on

Dell#
08:14:24 : OSPF(100:00):
Xmt. v:2 t:1(HELLO) l:44 rid:192.1.1.1
aid:0.0.0.1 chk:0xa098 aut:0 auk: keyid:0 to:Te 4/3 dst:224.0.0.5
netmask:255.255.255.0 pri:1 N-, MC-, E+, T-,
hi:10 di:40 dr:90.1.1.1 bdr:0.0.0.0
```

redistribute bgp

Redistribute BGP routing information throughout the OSPF instance.

Syntax `redistribute bgp as number [metric metric-value] | [metric-type type-value] | [tag tag-value]`

To disable redistribution, use the `no redistribute bgp as number [metric metric-value] | [metric-type type-value] [route-map map-name] [tag tag-value]` command.

Parameters

<i>as number</i>	Enter the autonomous system number. The range is from 1 to 65535.
<i>metric metric-value</i>	(OPTIONAL) Enter the keyword <code>metric</code> then the <i>metric-value</i> number. The range is from 0 to 16777214.
<i>metric-type type-value</i>	(OPTIONAL) Enter the keywords <code>metric-type</code> then one of the following: <ul style="list-style-type: none"> • 1 = for OSPF External type 1 • 2 = for OSPF External type 2
<i>route-map map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of the route map.
<i>tag tag-value</i>	(OPTIONAL) Enter the keyword <code>tag</code> to set the tag for routes redistributed into OSPF. The range is from 0 to 4294967295.

Defaults None

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.3	Added Route Map for BGP Redistribution to OSPF.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the keyword <code>default</code> .
pre- 6.1.1.1	Introduced on the E-Series.

redistribute isis

Redistribute IS-IS routing information throughout the OSPF instance.

Syntax `redistribute isis [tag] [level-1 | level-1-2 | level-2] [metric metric-value | metric-type type-value] [route-map map-name] [tag tag-value]`

To disable redistribution, use the `no redistribute isis [tag] [level-1 | level-1-2 | level-2] [metric metric-value | metric-type type-value] [route-map map-name] [tag tag-value]` command.

Parameters

<i>tag</i>	(OPTIONAL) Enter the name of the IS-IS routing process.
<i>level-1</i>	(OPTIONAL) Enter the keywords <code>level-1</code> to redistribute only IS-IS Level-1 routes.
<i>level-1-2</i>	(OPTIONAL) Enter the keywords <code>level-1-2</code> to redistribute both IS-IS Level-1 and Level-2 routes.
<i>level-2</i>	(OPTIONAL) Enter the keywords <code>level-2</code> to redistribute only IS-IS Level-2 routes.
<i>metric metric-value</i>	(OPTIONAL) Enter the keyword <code>metric</code> then a number. The range is from 0 (zero) to 4294967295.
<i>metric-type type-value</i>	(OPTIONAL) Enter the keywords <code>metric-type</code> then one of the following: <ul style="list-style-type: none">• 1 = for OSPF External type 1

- 2 = for OSPF External type 2

route-map *map-name* (OPTIONAL) Enter the keywords `route-map` then the name of the route map.

tag *tag-value* (OPTIONAL) Enter the keyword `tag` to set the tag for routes redistributed into OSPF. The range is from 0 to 4294967295.

Defaults Not configured.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

router-id

To configure a fixed router ID, use this command.

Syntax `router-id ip-address`

To remove the fixed router ID, use the `no router-id ip-address` command.

Parameters ***ip-address*** Enter the router ID in the IP address format.

Defaults None.

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

You can configure an arbitrary value in the IP address format for each router. However, each router ID must be unique. If you use this command on an OSPF router process, which is already active (that is, has neighbors), a prompt reminding you that changing the router-id brings down the existing OSPF adjacency. The new router ID is effective at the next reload.

Example

```
DelleMC(conf)# router ospf 100
DelleMC(conf-router_ospf)#router-id 1.1.1.1
Changing router-id will bring down existing OSPF adjacency [y/n]:

DelleMC(conf-router_ospf)#show config
!
router ospf 100
router-id 1.1.1.1
DelleMC(conf-router_ospf)# no router-id
Changing router-id will bring down existing OSPF adjacency [y/n]:
DelleMC#
```

router ospf

To configure an OSPF instance, enter ROUTER OSPF mode.

Syntax `router ospf process-id [vrf {vrf name}]`

To clear an OSPF instance, use the `no router ospf process-id` command.

Parameters

- process-id*** Enter a number for the OSPF instance. The range is from 1 to 65535.
- vrf name*** (Optional) Enter the VRF process identifier to tie the OSPF instance to the VRF. All network commands under this OSPF instance are then tied to the VRF instance.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1(0.0)	Added support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.9.1.0	Added support for VRF.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

You must have an IP address assigned to an interface to enter ROUTER OSPF mode and configure OSPF. You can create only one OSPFv2 process per VRF.

Example

```
DellEMC(conf)# router ospf 2
DellEMC(conf-router_ospf)#
```

show config

Display the non-default values in the current OSPF configuration.

Syntax show config

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC(conf-router_ospf)# show config
!
router ospf 3
passive-interface 0 TenGigabitEthernet 1/1
DellEMC(conf-router_ospf)#
```

show ip ospf

Display information on the OSPF process configured on the switch.

Syntax `show ip ospf [process-id | vrf vrf name]`

Parameters

- process-id** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf name** Show only the OSPF information tied to the VRF process.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Added output for LSA throttling timers.
8.3.7.0	Introduced on the S4810.
7.9.1.0	Added support for VRF.
7.8.1.0	Added support of Multi-Process OSPF.
7.8.1.0	Added the <i>process-id</i> option, in support of Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

If you delete all the network area commands for Area 0, the `show ip ospf` command output does not list Area 0.

The following describes the `show ip ospf` command shown in the following example.

Line Beginning with	Description
“Routing Process...”	Displays the OSPF process ID and the IP address associated with the process ID.
“Supports only...”	Displays the number of Type of Service (TOS) route supported.
“SPF schedule...”	Displays the delay and hold time configured for this process ID.
“Convergence Level”	
“Min LSA...”	Displays the intervals set for LSA transmission and acceptance.
“Number of...”	Displays the number and type of areas configured for this process ID.

Example

```
DellEMC# show ip ospf 10
Routing Process ospf 10 with ID 1.1.1.1 Virtual router default-vrf
Supports only single TOS (TOS0) routes
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Convergence Level 0
Min LSA origination 0 msec, Min LSA arrival 1000 msec
Min LSA hold time 5000 msec, Max LSA wait time 5000 msec
Number of area in this router is 1, normal 1 stub 0 nssa 0
  Area BACKBONE (0)
    Number of interface in this area is 1
    SPF algorithm executed 205 times
    Area ranges are
DellEMC#
```

Related Commands

- [show ip ospf database](#) — display information about the OSPF routes configured.
- [show ip ospf interface](#) — display the OSPF interfaces configured.
- [show ip ospf neighbor](#) — display the OSPF neighbors configured.

show ip ospf asbr

Display all autonomous system boundary router (ASBR) routers visible to OSPF.

Syntax	<code>show ip ospf [<i>process-id</i>] asbr</code>
Parameters	<i>process-id</i> Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
Defaults	None
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support of Multi-Process OSPF.
7.8.1.0	Added the <i>process-id</i> option, in support of Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information To isolate problems with external routes, use this command. In OSPF, external routes are calculated by adding the LSA cost to the cost of reaching the ASBR router. If an external route does not have the correct cost, use this command to determine if the path to the originating router is correct. The display output is not sorted in any order.

NOTE: ASBRs that are not in directly connected areas are also displayed.

You can determine if an ASBR is in a directly connected area (or not) by the flags. For ASBRs in a directly connected area, E flags are set. In the following example, router 1.1.1.1 is in a directly connected area since the Flag is E/-/-/. For remote ASBRs, the E flag is clear (-/-/-/).

Example

```
DellEMC# show ip ospf 1asbr

RouterID  Flags  Cost  Nexthop  Interface Area
3.3.3.3   -/-/-/  2     10.0.0.2  Te 1/1    1
```

```
1.1.1.1 E/-/-/ 0 0.0.0.0 - 0
DellEMC#
```

show ip ospf database

Display all LSA information. If you do not enable OSPF on the switch, no output is generated.

Syntax	<code>show ip ospf <i>process-id</i> [vrf <i>vrf-name</i>] database [database-summary]</code>	
Parameters	<i>process-id</i>	Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
	vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> and then the name of the VRF to view LSA information on OSPF processes corresponding to that VRF.
	database-summary	(OPTIONAL) Enter the keywords <code>database-summary</code> to display the number of LSA types in each area and the total number of LSAs.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege	

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support of Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information The following describes the `show ip ospf process-id database` command shown in the following example.

Field	Description
Link ID	Identifies the router ID.

Field	Description
ADV Router	Identifies the advertising router's ID.
Age	Displays the link state age.
Seq#	Identifies the link state sequence number. This number allows you to identify old or duplicate link state advertisements.
Checksum	Displays the Fletcher checksum of an LSA's complete contents.
Link count	Displays the number of interfaces for that router.

Example

```
DellEMC> show ip ospf 1 database

      OSPF Router with ID (11.1.2.1) (Process ID 1)
      Router (Area 0.0.0.0)
Link ID      ADV Router    Age  Seq#      Checksum Link count
11.1.2.1    11.1.2.1    673  0x80000005  0x707e    2
13.1.1.1    13.1.1.1    676  0x80000097  0x1035    2
192.68.135.2 192.68.135.2 1419 0x80000294  0x9cbd    1

      Network (Area 0.0.0.0)
Link ID      ADV Router    Age  Seq#      Checksum
10.2.3.2    13.1.1.1    676  0x80000003  0x6592
10.2.4.2    192.68.135.2 908  0x80000055  0x683e

      Type-5 AS External
Link ID      ADV Router    Age  Seq#      Checksum Tag
0.0.0.0     192.68.135.2 908  0x80000052  0xeb83   100
1.1.1.1     192.68.135.2 908  0x8000002a  0xbd27    0
10.1.1.0    11.1.2.1    718  0x80000002  0x9012    0
10.1.2.0    11.1.2.1    718  0x80000002  0x851c    0
10.2.2.0    11.1.2.1    718  0x80000002  0x7927    0
10.2.3.0    11.1.2.1    718  0x80000002  0x6e31    0
10.2.4.0    13.1.1.1    1184 0x80000068  0x45db    0
11.1.1.0    11.1.2.1    718  0x80000002  0x831e    0
11.1.2.0    11.1.2.1    718  0x80000002  0x7828    0
12.1.2.0    192.68.135.2 1663 0x80000054  0xd8d6    0
13.1.1.0    13.1.1.1    1192 0x8000006b  0x2718    0
13.1.2.0    13.1.1.1    1184 0x8000006b  0x1c22    0
172.16.1.0  13.1.1.1    148  0x8000006d  0x533b    0
DellEMC>
```

Related Commands

- [show ip ospf database asbr-summary](#) — display only ASBR summary LSA information.

show ip ospf database asbr-summary

Display information about autonomous system (AS) boundary LSAs.

Syntax

```
show ip ospf [process-id] database asbr-summary [link-state-id] [adv-router ip-address]
```

Parameters

process-id Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

link-state-id (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:

- the network's IP address for Type 3 LSAs or Type 5 LSAs
- the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
- the default destination (0.0.0.0) for Type 5 LSAs

adv-router ip-address (OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information The following describes the `show ip ospf database asbr-summary` command shown in the following example.

Field	Description
LS Age	Displays the LSA's age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none">• TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service.• DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits.• E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA's type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the advertising router's ID.
Checksum	Displays the Fletcher checksum of the LSA's complete contents.
Length	Displays the length in bytes of the LSA.

Field	Description
Network Mask	Displays the network mask implemented on the area.
TOS	Displays the Type of Service (TOS) options. Option 0 is the only option.
Metric	Displays the LSA metric.

Example

```
DelleEMC# show ip ospf 100 database asbr-summary
      OSPF Router with ID (1.1.1.10) (Process ID 100)
      Summary Asbr (Area 0.0.0.0)

LS age: 1437
Options: (No TOS-capability, No DC, E)
LS type: Summary Asbr
Link State ID: 103.1.50.1
Advertising Router: 1.1.1.10
LS Seq Number: 0x8000000f
Checksum: 0x8221
Length: 28
Network Mask: /0
      TOS: 0 Metric: 2

LS age: 473
Options: (No TOS-capability, No DC, E)
LS type: Summary Asbr
Link State ID: 104.1.50.1
Advertising Router: 1.1.1.10
LS Seq Number: 0x80000010
Checksum: 0x4198
Length: 28
--More--
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database external

Display information on the AS external (type 5) LSAs.

Syntax

```
show ip ospf [process-id | vrf vrf-name ] database external [link-state-id]
[adv-router ip-address]
```

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to view information on AS external LSAs corresponding to the OSPF processes that are tied to a specific VRF.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:
 - the network's IP address for Type 3 LSAs or Type 5 LSAs
 - the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
 - the default destination (0.0.0.0) for Type 5 LSAs
- adv-router ip-address*** (OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id database external` command shown in the following example.

Field	Description
LS Age	Displays the LSA's age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none">• TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service.• DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits.• E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA's type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the router ID of the LSA's originating router.
LS Seq Number	Identifies the link state sequence number. This number enables you to identify old or duplicate LSAs.
Checksum	Displays the Fletcher checksum of the LSA's complete contents.
Length	Displays the length in bytes of the LSA.
Network Mask	Displays the network mask implemented on the area.
Metrics Type	Displays the external type.
TOS	Displays the Type of Service (TOS) options. Option 0 is the only option.

Field	Description
Metric	Displays the LSA metric.
Forward Address	Identifies the address of the forwarding router. Data traffic is forwarded to this router. If the forwarding address is 0.0.0.0, data traffic is forwarded to the originating router.
External Route Tag	Displays the 32-bit field attached to each external route. The OSPF protocol does not use this field, but you can use the field for external route management.

Example

```
DellEMC# show ip ospf 1 database external

      OSPF Router with ID (20.20.20.5) (Process ID 1)

      Type-5 AS External

LS age: 612
Options: (No TOS-capability, No DC, E)
LS type: Type-5 AS External
Link State ID: 12.12.12.2
Advertising Router: 20.31.3.1
LS Seq Number: 0x80000007
Checksum: 0x4cde
Length: 36
Network Mask: /32
  Metrics Type: 2
  TOS: 0
  Metrics: 25
  Forward Address: 0.0.0.0
  External Route Tag: 43

LS age: 1868
Options: (No TOS-capability, DC)
LS type: Type-5 AS External
Link State ID: 24.216.12.0
Advertising Router: 20.20.20.8
LS Seq Number: 0x80000005
Checksum: 0xa00e
Length: 36
Network Mask: /24
  Metrics Type: 2
  TOS: 0
  Metrics: 1
  Forward Address: 0.0.0.0
  External Route Tag: 701
DellEMC#
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database network

Display the network (type 2) LSA information.

Syntax

```
show ip ospf [process-id] database network [link-state-id] [adv-router ip-address]
```

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:

- the network's IP address for Type 3 LSAs or Type 5 LSAs
- the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
- the default destination (0.0.0.0) for Type 5 LSAs

adv-router ip-address

(OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id database network` command shown in the following example.

Field	Description
LS Age	Displays the LSA's age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none"> • TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service. • DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits. • E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA's type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the router ID of the LSA's originating router.

Field	Description
Checksum	Identifies the link state sequence number. This number enables you to identify old or duplicate LSAs.
Length	Displays the Fletcher checksum of an LSA's complete contents.
Network Mask	Displays the length in bytes of the LSA.
Attached Router	Identifies the IP address of routers attached to the network.

Example

```
DellEMC# show ip ospf 1 data network
      OSPF Router with ID (20.20.20.5) (Process ID 1)
          Network (Area 0.0.0.0)
      LS age: 1372
      Options: (No TOS-capability, DC, E)
      LS type: Network
      Link State ID: 202.10.10.2
      Advertising Router: 20.20.20.8
      LS Seq Number: 0x80000006
      Checksum: 0xa35
      Length: 36
      Network Mask: /24
          Attached Router: 20.20.20.8
          Attached Router: 20.20.20.9
          Attached Router: 20.20.20.7

          Network (Area 0.0.0.1)
      LS age: 252
      Options: (TOS-capability, No DC, E)
      LS type: Network
      Link State ID: 192.10.10.2
      Advertising Router: 192.10.10.2
      LS Seq Number: 0x80000007
      Checksum: 0x4309
      Length: 36
      Network Mask: /24
          Attached Router: 192.10.10.2
          Attached Router: 20.20.20.1
          Attached Router: 20.20.20.5
DellEMC#
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database nssa-external

Display NSSA-External (type 7) LSA information.

Syntax

```
show ip ospf [process-id | vrf vrf-name ] database nssa-external [link-state-id] [adv-router ip-address]
```

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to view NSSA-External LSA information corresponding to the OSPF process that is tied to a specific VRF.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:
 - the network's IP address for Type 3 LSAs or Type 5 LSAs

- the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
- the default destination (0.0.0.0) for Type 5 LSAs

adv-router ip-address

(OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

- Related Commands**
- [show ip ospf database](#) — display OSPF database information.

show ip ospf database opaque-area

Display the opaque-area (type 10) LSA information.

Syntax `show ip ospf [process-id | vrf vrf-name] database opaque-area [link-state-id] [adv-router ip-address]`

Parameters

process-id Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

vrf vrf-name Enter the keyword `vrf` followed by the name of the VRF to view opaque-area LSA information corresponding to the OSPF process that is tied to a specific VRF.

link-state-id (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:

- the network's IP address for Type 3 LSAs or Type 5 LSAs
- the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
- the default destination (0.0.0.0) for Type 5 LSAs

adv-router ip-address

(OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id database opaque-area` command shown in the following example.

Item	Description
LS Age	Displays the LSA's age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none"> • TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service. • DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits. • E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA's type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the advertising router's ID.

Item	Description
Checksum	Displays the Fletcher checksum of the LSA's complete contents.
Length	Displays the length in bytes of the LSA.
Opaque Type	Displays the Opaque type field (the first 8 bits of the Link State ID).
Opaque ID	Displays the Opaque type-specific ID (the remaining 24 bits of the Link State ID).

Example

```
DellEMC> show ip ospf 1 database opaque-area

      OSPF Router with ID (3.3.3.3) (Process ID 1)
      Type-10 Opaque Link Area (Area 0)

LS age: 1133
Options: (No TOS-capability, No DC, E)
LS type: Type-10 Opaque Link Area
Link State ID: 1.0.0.1
Advertising Router: 10.16.1.160
LS Seq Number: 0x80000416
Checksum: 0x376
Length: 28
Opaque Type: 1
Opaque ID: 1
Unable to display opaque data

LS age: 833
Options: (No TOS-capability, No DC, E)
LS type: Type-10 Opaque Link Area
Link State ID: 1.0.0.2
Advertising Router: 10.16.1.160
LS Seq Number: 0x80000002
Checksum: 0x19c2
--More--
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database opaque-as

Display the opaque-as (type 11) LSA information.

Syntax `show ip ospf process-id database opaque-as [link-state-id] [adv-router ip-address]`

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:
 - the network's IP address for Type 3 LSAs or Type 5 LSAs
 - the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
 - the default destination (0.0.0.0) for Type 5 LSAs
- adv-router ip-address*** (OPTIONAL) Enter the keywords `adv-router` and the ip-address to display only the LSA information about that router.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database opaque-link

Display the opaque-link (type 9) LSA information.

Syntax	<code>show ip ospf [<i>process-id</i> vrf <i>vrf-name</i>] database opaque-link [<i>link-state-id</i>] [<i>adv-router ip-address</i>]</code>	
Parameters	<i>process-id</i>	Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
	vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> followed by the name of the VRF to view opaque-link LSA information corresponding to the OSPF process that is tied to a specific VRF.
	<i>link-state-id</i>	(OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following: <ul style="list-style-type: none"> • the network's IP address for Type 3 LSAs or Type 5 LSAs • the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs • the default destination (0.0.0.0) for Type 5 LSAs
	<i>adv-router ip-address</i>	(OPTIONAL) Enter the keywords <code>adv-router</code> then the IP address of an Advertising Router to display only the LSA information about that router.
Command Modes	<ul style="list-style-type: none"> • EXEC • EXEC Privilege 	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Related Commands

- `show ip ospf database` — display OSPF database information.

show ip ospf database router

Display the router (type 1) LSA information.

Syntax `show ip ospf [process-id | vrf vrf-name] database router [link-state-id] [adv-router ip-address]`

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to view the router LSA information corresponding to the OSPF process that is tied to a specific VRF.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:
 - the network's IP address for Type 3 LSAs or Type 5 LSAs
 - the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
 - the default destination (0.0.0.0) for Type 5 LSAs
- adv-router ip-address*** (OPTIONAL) Enter the keywords `adv-router` followed by the IP address of an Advertising Router to display only the LSA information about that router.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added supported for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.20	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id database router` command shown in the following example.

Item	Description
LS Age	Displays the LSA age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none"> • TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service. • DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits. • E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the router ID of the LSA's originating router.
LS Seq Number	Displays the link state sequence number. This number detects duplicate or old LSAs.
Checksum	Displays the Fletcher checksum of an LSA's complete contents.
Length	Displays the length in bytes of the LSA.
Number of Links	Displays the number of active links to the type of router (Area Border Router or AS Boundary Router) listed in the previous line.
Link connected to:	Identifies the type of network to which the router is connected.
(Link ID)	Identifies the link type and address.

Item	Description
(Link Data)	Identifies the router interface address.
Number of TOS Metric	Lists the number of TOS metrics.
TOS 0 Metric	Lists the number of TOS 0 metrics.

Example

```
DellEMC# show ip ospf 100 database router
      OSPF Router with ID (1.1.1.10) (Process ID 100)
      Router (Area 0)

LS age: 967
Options: (No TOS-capability, No DC, E)
LS type: Router
Link State ID: 1.1.1.10
Advertising Router: 1.1.1.10
LS Seq Number: 0x8000012f
Checksum: 0x3357
Length: 144
AS Boundary Router
Area Border Router
  Number of Links: 10

Link connected to: a Transit Network
  (Link ID) Designated Router address: 192.68.129.1
  (Link Data) Router Interface address: 192.68.129.1
  Number of TOS metric: 0
  TOS 0 Metric: 1

Link connected to: a Transit Network
  (Link ID) Designated Router address: 192.68.130.1
  (Link Data) Router Interface address: 192.68.130.1
  Number of TOS metric: 0
  TOS 0 Metric: 1

Link connected to: a Transit Network
  (Link ID) Designated Router address: 192.68.142.2
  (Link Data) Router Interface address: 192.68.142.2
  Number of TOS metric: 0
  TOS 0 Metric: 1

Link connected to: a Transit Network
  (Link ID) Designated Router address: 192.68.141.2
  (Link Data) Router Interface address: 192.68.141.2
  Number of TOS metric: 0
  TOS 0 Metric: 1

Link connected to: a Transit Network
  (Link ID) Designated Router address: 192.68.140.2
  (Link Data) Router Interface address: 192.68.140.2
  Number of TOS metric: 0
  TOS 0 Metric: 1

Link connected to: a Stub Network
  (Link ID) Network/subnet number: 11.1.5.0
--More--
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf database summary

Display the network summary (type 3) LSA routing information.

Syntax `show ip ospf [process-id | vrf vrf-name] database summary [link-state-id]
[adv-router ip-address]`

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to view LSA routing information corresponding to the OSPF process that is tied to a specific VRF.
- link-state-id*** (OPTIONAL) Specify LSA ID in dotted decimal format. The LSA ID value depends on the LSA type, and it can be one of the following:
 - the network's IP address for Type 3 LSAs or Type 5 LSAs
 - the router's OSPF router ID for Type 1 LSAs or Type 4 LSAs
 - the default destination (0.0.0.0) for Type 5 LSAs
- adv-router ip-address*** (OPTIONAL) Enter the keywords `adv-router` then the IP address of an Advertising Router to display only the LSA information about that router.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information The following describes the `show ip ospf process-id database summary` command shown in the following example.

Item	Description
LS Age	Displays the LSA age.
Options	Displays the optional capabilities available on router. The following options can be found in this item: <ul style="list-style-type: none"> • TOS-capability or No TOS-capability is displayed depending on whether the router can support Type of Service. • DC or No DC is displayed depending on whether the originating router can support OSPF over demand circuits. • E or No E is displayed on whether the originating router can accept AS External LSAs.
LS Type	Displays the LSA type.
Link State ID	Displays the Link State ID.
Advertising Router	Identifies the router ID of the LSA's originating router.
LS Seq Number	Displays the link state sequence number. This number allows you to identify old or duplicate LSAs.
Checksum	Displays the Fletcher checksum of an LSA's complete contents.
Length	Displays the length in bytes of the LSA.
Network Mask	Displays the network mask implemented on the area.
TOS	Displays the TOS options. Option 0 is the only option.
Metric	Displays the LSA metrics.

Example

```
DellEMC# show ip ospf 100 database summary
      OSPF Router with ID (1.1.1.10) (Process ID 100)
          Summary Network (Area 0.0.0.0)
LS age: 1551
Options: (No TOS-capability, DC, E)
LS type: Summary Network
Link State ID: 192.68.16.0
Advertising Router: 192.168.17.1
LS Seq Number: 0x80000054
Checksum: 0xb5a2
Length: 28
Network Mask: /24
      TOS: 0 Metric: 1

LS age: 9
Options: (No TOS-capability, No DC, E)
LS type: Summary Network
Link State ID: 192.68.32.0
Advertising Router: 1.1.1.10
LS Seq Number: 0x80000016
Checksum: 0x987c
Length: 28
Network Mask: /24
      TOS: 0 Metric: 1

LS age: 7
Options: (No TOS-capability, No DC, E)
LS type: Summary Network
Link State ID: 192.68.33.0
Advertising Router: 1.1.1.10
LS Seq Number: 0x80000016
Checksum: 0x1241
Length: 28
Network Mask: /26
      TOS: 0 Metric: 1
```

```
DellEMC#
```

Related Commands

- [show ip ospf database](#) — display OSPF database information.

show ip ospf interface

Display the OSPF interfaces configured. If OSPF is not enabled on the switch, no output is generated.

S5000

Syntax

```
show ip ospf [process-id | vrf vrf-name] interface [interface]
```

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf *vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to show the OSPF processes that are tied to a specific VRF.
- interface*** (OPTIONAL) Enter the following keywords and slot/port or number information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a Null interface, enter the keyword `null` then the Null interface number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id interface` command shown in the following example.

Item	Description
GigabitEthernet.. .	This line identifies the interface type slot/port and the status of the OSPF protocol on that interface.
Internet Address...	This line displays the IP address, network mask and area assigned to this interface.
Process ID...	This line displays the OSPF Process ID, Router ID, Network type and cost metric for this interface.
Transmit Delay...	This line displays the interface's settings for Transmit Delay, State, and Priority. In the State setting, BDR is Backup Designated Router.
Designated Router...	This line displays the ID of the Designated Router and its interface address.
Backup Designated...	This line displays the ID of the Backup Designated Router and its interface address.
Timer intervals...	This line displays the interface's timer settings for Hello interval, Dead interval, Transmit Delay (Wait), and Retransmit Interval.
Hello due...	This line displays the amount time until the next Hello packet is sent out this interface.
Neighbor Count...	This line displays the number of neighbors and adjacent neighbors. Listed below this line are the details about each adjacent neighbor.

Example

```
DellEMC> show ip ospf int

TenGigabitEthernet 1/7 is up, line protocol is up
  Internet Address 192.168.1.2/30, Area 0.0.0.1
  Process ID 1, Router ID 192.168.253.2, Network Type BROADCAST, Cost: 1
  Transmit Delay is 1 sec, State DR, Priority 1
  Designated Router (ID) 192.168.253.2, Interface address 192.168.1.2
  Backup Designated Router (ID) 192.168.253.1, Interface address
192.168.1.1
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
  Hello due in 00:00:02
  Neighbor Count is 1, Adjacent neighbor count is 1
    Adjacent with neighbor 192.168.253.1 (Backup Designated Router)

TenGigabitEthernet 1/8 is up, line protocol is up
  Internet Address 192.168.0.1/24, Area 0.0.0.1
  Process ID 1, Router ID 192.168.253.2, Network Type BROADCAST, Cost: 1
  Transmit Delay is 1 sec, State DROTHER, Priority 1
  Designated Router (ID) 192.168.253.5, Interface address 192.168.0.4
  Backup Designated Router (ID) 192.168.253.3, Interface address
192.168.0.2
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
  Hello due in 00:00:08
  Neighbor Count is 3, Adjacent neighbor count is 2
    Adjacent with neighbor 192.168.253.5 (Designated Router)
    Adjacent with neighbor 192.168.253.3 (Backup Designated Router)

Loopback 0 is up, line protocol is up
```

```
Internet Address 192.168.253.2/32, Area 0.0.0.1
Process ID 1, Router ID 192.168.253.2, Network Type LOOPBACK, Cost: 1
Loopback interface is treated as a stub Host.
DellEMC>
```

show ip ospf neighbor

Display the OSPF neighbors connected to the local router.

Syntax `show ip ospf [process-id | vrf vrf-name] neighbor`

Parameters

process-id Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

vrf vrf-name Enter the keyword `vrf` followed by the name of the VRF to show information corresponding to the OSPF neighbors that are tied to a specific VRF.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000..
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information The following describes the `show ip ospf process-id neighbor` command shown in the following example.

Item	Description
Neighbor ID	Displays the neighbor router ID.
Pri	Displays the priority assigned neighbor.

Item	Description
State	Displays the OSPF state of the neighbor.
Dead Time	Displays the expected time until the Dell OS declares the neighbor dead.
Address	Displays the IP address of the neighbor.
Interface	Displays the interface type slot/port information.
Area	Displays the neighbor's area (process ID).

Example

```
DelleMC# show ip ospf 34 neighbor

Neighbor ID Pri State          Dead Time Address Interface Area
20.20.20.7  1 FULL/DR      00:00:32 182.10.10.3 Te 1/1 0.0.0.2
192.10.10.2  1 FULL/DR      00:00:37 192.10.10.2 Te 1/2 0.0.0.1
20.20.20.1  1 FULL/DROTHER 00:00:36 192.10.10.4 Te 1/3 0.0.0.1
DelleMC#
```

show ip ospf routes

Display routes OSPF calculates and stores in OSPF RIB.

Syntax `show ip ospf [process-id | vrf vrf-name] routes`

Parameters

- process-id*** Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
- vrf vrf-name*** Enter the keyword `vrf` followed by the name of the VRF to show the OSPF RIB information corresponding to the OSPF processes that are tied to a specific VRF.

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information

This command is useful in isolating routing problems between the OSPF and the RTM. For example, if a route is missing from the RTM/FIB but is visible from the display output of this command, the problem is with downloading the route to the RTM.

This command has the following limitations:

- The display output is sorted by prefixes; intra-area ECMP routes are not displayed together.
- For Type 2 external routes, Type 1 cost is not displayed.

NOTE: Starting with Version 9.4(0.0), the loopback IP address advertised to the neighbor is not displayed in the output because they are not accounted as inactive OSPF routes, whereas the loopback IP address is displayed until Dell EMC Networking OS Version 9.3(0.0). Starting with Version 9.4(0.0), the `show ip ospf routes` command displays the interface and area ID information of connected networks in addition to the other settings, whereas these details are not displayed until Dell EMC Networking OS Version 9.3(0.0). Starting with Version 9.4(0.0), the metric of E2 routes in the output is displayed as an external metric, whereas until Dell EMC Networking OS Version 9.3(0.0), the number of hops to the ASBR for E2 routes are displayed in the output.

Example

```
DellEMC# show ip ospf 100 route
Prefix          Cost Nexthop   Interface Area  Type
1.1.1.1         1    0.0.0.0     Lo 0    0    Intra-Area
3.3.3.3         2    13.0.0.3    Te 1/47 1    Intra-Area
13.0.0.0        1    0.0.0.0     Te 1/47 0    Intra-Area
150.150.150.0   2    13.0.0.3    Te 1/47 -    External
172.30.1.0      2    13.0.0.3    Te 1/47 1    Intra-Area
DellEMC#
```

show ip ospf statistics

Display OSPF statistics.

S5000

Syntax

```
show ip ospf [process-id | vrf vrf-name] statistics global | [interface name {neighbor router-id}]
```

Parameters

<i>process-id</i>	Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.
<i>vrf vrf-name</i>	Enter the keyword <code>vrf</code> followed by the name of the VRF to display statistics corresponding to the OSPF process that is tied to a specific VRF.
<i>global</i>	Enter the keyword <code>global</code> to display the packet counts received on all running OSPF interfaces and packet counts OSPF neighbors receive and transmit.
<i>interface name</i>	(OPTIONAL) Enter the keyword <code>interface</code> then one of the following interface keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.

- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

neighbor *router-id* (OPTIONAL) Enter the keyword `neighbor` then the neighbor's router-id in dotted decimal format (A.B.C.D.).

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information The following describes the `show ip ospf statistics process-id global` command shown in the following example.

Row Heading	Description
Total	Displays the total number of packets the OSPF process receives/transmits.
Error	Displays the error count while receiving and transmitting packets by the OSPF process.
Hello	Number of OSPF Hello packets.
DDiscr	Number of database description packets.
LSReq	Number of link state request packets.
LSUpd	Number of link state update packets.
LSAck	Number of link state acknowledgement packets.

Row Heading	Description
TxQ-Len	The transmission queue length.
RxQ-Len	The reception queue length.
Tx-Mark	The highest number mark in the transmission queue.
Rx-Mark	The highest number mark in the reception queue.
Hello-Q	The queue, for transmission or reception, for the hello packets.
LSR-Q	The queue, for transmission or reception, for the link state request packets.
Other-Q	The queue, for transmission or reception, for the link state acknowledgement, database description, and update packets.

The following describes the error definitions for the `show ip ospf statistics process-id global` command.

Error Type	Description
Intf_Down	Received packets on an interface that is either down or OSPF is not enabled.
Non-Dr	Received packets with a destination address of ALL_DRS even though SELF is not a designated router.
Self-Org	Receive the self originated packet.
Wrong_Len	The received packet length is different to what was indicated in the OSPF header.
Invid-Nbr	LSA, LSR, LSU, and DDB are received from a peer which is not a neighbor peer.
Nbr-State	LSA, LSR, and LSU are received from a neighbor with stats less than the loading state.
Auth-Error	Simple authentication error.
MD5-Error	MD5 error
Cksum-Err	Checksum Error
Version	Version mismatch
AreaMismatch	Area mismatch
Conf-Issue	The received hello packet has a different hello or dead interval than the configuration.
No-Buffer	Buffer allocation failure.
Seq-no	A sequence no errors occurred during the database exchange process.
Socket	Socket Read/Write operation error.
Q-overflow	Packets dropped due to queue overflow.
Unknown-Pkt	Received packet is not an OSPF packet.

Example

```
DelleMC# show ip ospf 1 statistics global

OSPF Packet Count
  Total Error Hello DDiscr LSReq LSUpd LSAck
RX 10 0 8 2 0 0 0
TX 10 0 10 0 0 0 0

OSPF Global Queue Length
  TxQ-Len RxQ-Len Tx-Mark Rx-Mark
Hello-Q 0 0 0 2
LSR-Q 0 0 0 0
Other-Q 0 0 0 0

Error packets (Only for RX)
Intf-Down 0 Non-Dr 0 Self-Org 0
```

```

Wrong-Len 0      Invld-Nbr 0      Nbr-State 0
Auth-Err  0      MD5-Err  0      Chksum 0
Version  0      AreaMis  0      Conf-Issues 0
No-Buffer 0      Seq-No   0      Socket 0
Q-OverFlow 0    Unkown-Pkt 0

Error packets (Only for TX)

Socket Errors      0
DelleMC#

```

Usage Information

The `show ip ospf process-id statistics` command displays the error packet count received on each interface as:

- The hello-timer remaining value for each interface
- The wait-timer remaining value for each interface
- The grace-timer remaining value for each interface
- The packet count received and transmitted for each neighbor
- Dead timer remaining value for each neighbor
- Transmit timer remaining value for each neighbor
- The LSU Q length and its highest mark for each neighbor
- The LSR Q length and its highest mark for each neighbor

Example (Statistics)

```

DelleMC(conf-if-te-1/6)# do show ip ospf statistics
Interface TenGigabitEthernet 1/6
  Error packets (Receive statistics)
    Intf-Down 0 Non-Dr 0 Self-Org 0
    Wrong-Len 0 Invld-Nbr 0 Nbr-State 0
    Auth-Error 0 MD5-Error 0 Cksum-Err 0
    Version 0 AreaMismatch 0 Conf-Issue 0
    SeqNo-Err 0 Unknown-Pkt 0 Bad-LsReq 0
    RtidZero 0
  Neighbor ID 4.4.4.4
    Packet Statistics
      Hello DDiscr LSReq LSUpd LSAck
      RX 5 2 1 3 2
      TX 6 5 1 3 3
    Timers
      Hello 0 Wait 0 Grace 0
      Dead 39 Transmit 4
    Queue Statistics
      LSU-Q-Len 0 LSU-Q-Wmark 1
      LSR-Q-Len 0 LSR-Q-Wmark 1

DelleMC(conf-if-te-1/6)#

```

Related Commands

- [clear ip ospf statistics](#) — clear the packet statistics in all interfaces and neighbors.

show ip ospf timers rate-limit

Show the LSA currently in the queue waiting for timers to expire.

Syntax

```
show ip ospf [process-id] timers rate-limit
```

Parameters

process-id Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

Defaults

None

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Example

```
DellEMC# show ip ospf 10 timers rate-limit

List of LSAs in rate limit Queue
LSA id: 1.1.1.0 Type: 3 Adv Rtid: 3.3.3.3 Expiry time: 00:00:09.111
LSA id: 3.3.3.3 Type: 1 Adv Rtid: 3.3.3.3 Expiry time: 00:00:23.96
DellEMC#
```

show ip ospf topology

Display routers in directly connected areas.

Syntax `show ip ospf [process-id] topology`

Parameters *process-id* Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series and E-Series.

Usage Information

To isolate problems with inter-area and external routes, use this command. In OSPF inter-area and external routes are calculated by adding LSA cost to the cost of reaching the router. If an inter-area or external route is not of correct cost, the display can determine if the path to the originating router is correct or not.

Example

```
DellEMC# show ip ospf 1 topology

Router ID   Flags Cost   Nexthop   Interface Area
3.3.3.3     E/B/-/ 1       20.0.0.3  Te 13/1   0
1.1.1.1     E/-/-/ 1       10.0.0.1  Te 7/1    1
DellEMC#
```

show ip ospf virtual-links

Display the OSPF virtual links configured and is useful for debugging OSPF routing operations. If no OSPF virtual-links are enabled on the switch, no output is generated.

C-Series, E-Series, S-Series

Syntax `show ip ospf process-id virtual-links`

 **NOTE:** This command was deprecated.

Parameters `process-id` Enter the OSPF Process ID to show a specific process. If no Process ID is entered, command applies only to the first OSPF process.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

Version	Description
9.1(0.0)	Deprecated command on the S4810 and Z9000.
9.0(1.3)	Introduced on the S5000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre-Version 6.1.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip ospf process-id virtual-links` command shown in the Example below.

Items	Description
“Virtual Link...”	This line specifies the OSPF neighbor to which the virtual link was created and the link’s status.
“Run as...”	This line states the nature of the virtual link.
“Transit area...”	This line identifies the area through which the virtual link was created, the interface used, and the cost assigned to that link.
“Transmit Delay...”	This line displays the transmit delay assigned to the link and the State of the OSPF neighbor.
“Timer intervals...”	This line displays the timer values assigned to the virtual link. The timers are Hello is hello-interval, Dead is dead-interval, Wait is transmit-delay, and Retransmit is retransmit-interval.
“Hello due...”	This line displays the amount of time until the next Hello packet is expected from the neighbor router.
“Adjacency State...”	This line displays the adjacency state between neighbors.

Example

```
Dell# show ip ospf 1 virt
Virtual Link to router 192.168.253.5 is up
  Run as demand circuit
  Transit area 0.0.0.1, via interface GigabitEthernet 13/16, Cost of
  using 2
  Transmit Delay is 1 sec, State POINT_TO_POINT,
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
  Hello due in 00:00:02
Dell#
```

summary-address

To advertise one external route, set the OSPF ASBR.

Syntax `summary-address ip-address mask [not-advertise] [tag tag-value]`

To disable summary address, use the `no summary-address ip-address mask` command.

Parameters

<i>ip-address</i>	Specify the IP address in dotted decimal format of the address to summarize.
<i>mask</i>	Specify the mask in dotted decimal format of the address to summarize.
<i>not-advertise</i>	(OPTIONAL) Enter the keywords <code>not-advertise</code> to suppress that match the network prefix/mask pair.
<i>tag tag-value</i>	(OPTIONAL) Enter the keyword <code>tag</code> then a value to match on routes redistributed through a route map. The range is from 0 to 4294967295.

Defaults Not configured.

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information

The `area range` command summarizes routes for the different areas.

With the `not-advertise` parameter configured, you can use this command to filter out some external routes. For example, if you want to redistribute static routes to OSPF, but you don't want OSPF to advertise routes with prefix 1.1.0.0, you can configure the `summary-address 1.1.0.0 255.255.0.0 not-advertise` to filter out all the routes fall in range 1.1.0.0/16.

Related Commands

- [area range](#) — summarize routes within an area.

timers spf

Set the time interval between when the switch receives a topology change and starts a shortest path first (SPF) calculation.

S5000

Syntax

```
timers spf delay holdtime msec
```

To return to the default, use the `no timers spf` command.

Parameters

- | | |
|-----------------|--|
| delay | Enter a number as the delay. The range is from 0 to 2147483647. The default is 5 seconds . |
| holdtime | Enter a number as the hold time. The range is from 0 to 2147483647. The default is 10 seconds . |
| msec | Enter the keyword <code>msec</code> to specify the time interval value in milli seconds. |

 **NOTE:** If you do not specify the `msec` option, the timer values are considered as seconds.

- Defaults**
- delay = 5 seconds
 - holdtime = 10 seconds

Command Modes ROUTER OSPFv2

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11.0.0	Introduced the keyword <code>msec</code> .
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

Usage Information Setting the *delay* and *holdtime* parameters to a low number enables the switch to an alternate path quickly but requires more CPU usage.

Example

```
DellEMC# conf
DellEMC(conf)# router ospf 1
DellEMC(conf-router_ospf-1)# timer spf 2 5 msec
DellEMC(conf-router_ospf-1)# show config
!
router ospf 1
timers spf 2 5 msec
DellEMC(conf-router_ospf-1)# end
```

timers throttle lsa all

Configure LSA transmit intervals.

Syntax `timers throttle lsa all {start-interval | hold-interval | max-interval}`
 To return to the default, use the `no timers throttle lsa` command.

Parameters **start-interval** Set the minimum interval between initial sending and resending the same LSA. The range is from 0 to 600,000 milliseconds.

- hold-interval** Set the next interval to send the same LSA. This interval is the time between sending the same LSA after the start-interval has been attempted. The range is from 1 to 600,000 milliseconds.
- max-interval** Set the maximum amount of time the system waits before sending the LSA. The range is from 1 to 600,000 milliseconds.

- Defaults**
- start-interval: **0 msec**
 - hold-interval: **5000 msec**
 - max-interval: **5000 msec**

Command Modes ROUTER OSPF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
9.0.2.0	Introduced on the S6000..
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

Usage Information LSAs are sent after the start-interval and then after hold-interval until the maximum interval is reached. In throttling, exponential backoff is used when sending same LSA, so that the interval is multiplied until the maximum time is reached. For example, if the *start-interval 5000* and *hold-interval 1000* and *max-interval 100,000*, the LSA is sent at 5000 msec, then 1000 msec, then 2000 msec, then 4000 until 100,000 msec is reached.

timers throttle lsa arrival

Configure the LSA acceptance intervals.

Syntax `timers throttle lsa arrival arrival-time`
 To return to the default, use the `no timers throttle lsa` command.

Parameters *arrival-time* Set the interval between receiving the same LSA repeatedly, to allow sufficient time for the system to accept the LSA. The range is from 0 to 600,000 milliseconds.

Defaults **1000 msec**

Command Modes ROUTER OSPF

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.

OSPFv3 Commands

Open shortest path first version 3 (OSPFv3) for IPv6 is supported on the platform.

The fundamental mechanisms of OSPF (flooding, DR election, area support, SPF calculations, and so on) remain unchanged. However, OSPFv3 runs on a per-link basis instead of on a per-IP-subnet basis. Most changes were necessary to handle the increased address size of IPv6.

The Dell EMC Networking OS implementation of OSPFv3 is based on IETF RFC 2740.

area authentication

Configure an IPsec authentication policy for OSPFv3 packets in an OSPFv3 area.

Syntax

```
area area-id authentication ipsec spi number {MD5 | SHA1} [key-encryption-type] key
```

Parameters

area <i>area-id</i>	Area for which OSPFv3 traffic is to be authenticated. For <i>area-id</i> , you can enter a number. The range is from 0 to 4294967295.
ipsec spi <i>number</i>	Security Policy index (SPI) value that identifies an IPsec security policy. The range is from 256 to 4294967295.
MD5 SHA1	Authentication type: Message Digest 5 (MD5) or Secure Hash Algorithm 1 (SHA-1).
key-encryption-type	(OPTIONAL) Specifies if the key is encrypted. The values are 0 (key is not encrypted) or 7 (key is encrypted).
key	Text string used in authentication.

For MD5 authentication, the key must be 32 hex digits (non-encrypted) or 64 hex digits (encrypted).

For SHA-1 authentication, the key must be 40 hex digits (non-encrypted) or 80 hex digits (encrypted).

Defaults Not configured.

Command Modes ROUTER OSPFv3

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
8.4.2.0	Introduced on the E-Series.

Usage Information Before you enable IPsec authentication on an OSPFv3 area, you must first enable OSPFv3 globally on the router. Configure the same authentication policy (same SPI and key) on each interface in an OSPFv3 link.

An SPI number must be unique to one IPsec security policy (authentication or encryption) on the router.

If you have enabled IPsec encryption in an OSPFv3 area with the `area encryption` command, you cannot use the `area authentication` command in the area at the same time.

The configuration of IPsec authentication on an interface-level takes precedence over an area-level configuration. If you remove an interface configuration, an area authentication policy that has been configured is applied to the interface.

To remove an IPsec authentication policy from an OSPFv3 area, enter the `no area area-id authentication spi number` command.

Related Commands

- [ipv6 ospf authentication](#) – configure an IPsec authentication policy on an OSPFv3 interface.
- [show crypto ipsec policy](#) – display the configuration of IPsec authentication policies.

area encryption

Configure an IPsec encryption policy for OSPFv3 packets in an OSPFv3 area.

Syntax `area area-id encryption ipsec spi number esp encryption-algorithm [key-encryption-type] key authentication-algorithm [key-encryption-type] key`

Parameters

area *area-id* Area for which OSPFv3 traffic is to be encrypted. For *area-id*, enter a number. The range is from 0 to 4294967295.

ipsec spi *number* Security Policy index (SPI) value that identifies an IPsec security policy.

The range is from 256 to 4294967295.

**esp encryption-
algorithm**

Encryption algorithm used with ESP.

Valid values are: 3DES, DES, AES-CBC, and NULL.

For AES-CBC, only the AES-128 and AES-192 ciphers are supported.

**key-encryption-
algorithm**

(OPTIONAL) Specifies if the key is encrypted.

Valid values: 0 (key is not encrypted) or 7 (key is encrypted).

key

Text string used in encryption.

The required lengths of a non-encrypted or encrypted key are:

3DES - 48 or 96 hex digits; DES - 16 or 32 hex digits; AES-CBC -32 or 64 hex digits for AES-128 and 48 or 96 hex digits for AES-192.

**authentication-
algorithm**

Specifies the authentication algorithm to use for encryption.

Valid values are MD5 or SHA1.

**key-encryption-
type**

(OPTIONAL) Specifies if the authentication key is encrypted.

Valid values: 0 (key is not encrypted) or 7 (key is encrypted).

key

Text string used in authentication.

For MD5 authentication, the key must be 32 hex digits (non-encrypted) or 64 hex digits (encrypted).

For SHA-1 authentication, the key must be 40 hex digits (non-encrypted) or 80 hex digits (encrypted).

null

Causes an encryption policy configured for the area to not be inherited on the interface.

Defaults

Not configured.

Command Modes

ROUTER OSPFv3

**Command
History**

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.10(0.0)

Introduced on the S6100-ON.

9.8(2.0)

Introduced on the S3100 series.

9.8(1.0)

Introduced on the Z9100-ON.

9.8(0.0P5)

Introduced on the S4048-ON.

9.8(0.0P2)

Introduced on the S3048-ON.

9.2(1.0)

Introduced on the Z9500.

9.1.(0.0)

Introduced on the S4810 and Z9000.

8.4.2.0

Introduced on the E-Series.

8.3.19.0

Introduced on the S4820T.

**Usage
Information**

Before you enable IPsec encryption on an OSPFv3 interface, first enable OSPFv3 globally on the router. Configure the same encryption policy (same SPI and keys) on each interface in an OSPFv3 link.

An SPI value must be unique to one IPsec security policy (authentication or encryption) on the router.

When you configure encryption for an OSPFv3 area with the `area encryption` command, you enable both IPsec encryption and authentication. However, when you enable authentication on an area with the `area authentication` command, you do not enable encryption at the same time.

If you have enabled IPsec authentication in an OSPFv3 area with the `area authentication` command, you cannot use the `area encryption` command in the area at the same time.

The configuration of IPsec encryption on an interface-level takes precedence over an area-level configuration. If you remove an interface configuration, an area encryption policy that has been configured is applied to the interface.

To remove an IPsec encryption policy from an interface, enter the `no area area-id encryption spi number` command.

Related Commands

- [ipv6 ospf encryption](#) – configure an IPsec encryption policy on an OSPFv3 interface.
- [show crypto ipsec policy](#) – display the configuration of IPsec encryption policies.

auto-cost

Specify how the OSPF interface cost is calculated based on the reference bandwidth method.

S5000

Syntax

```
auto-cost [reference-bandwidth ref-bw]
```

To return to the default bandwidth or to assign cost based on the interface type, use the `no auto-cost [reference-bandwidth ref-bw]` command.

Parameters

ref-bw (OPTIONAL) Specify a reference bandwidth in megabits per second. The range is from 1 to 4294967. The default is **100 megabits per second**.

Defaults

100 megabits per second.

Command Modes

ROUTER OSPFv3

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.9(0.0)

Introduced on the S6000-ON, S6000, S4820T, S4810, S5000, Z9500, S3048-ON, and S4048-ON.

Usage

Information

Example

```
DelleMC# show running-config ospf
!
ipv6 router ospf 10
  log-adjacency-changes
  auto-cost reference-bandwidth 2000
DelleMC(conf-ipv6-router_ospf)# auto-cost reference-bandwidth ?
<1-4294967>          Reference bandwidth in Mbits/second (default =
100)
DelleMC(conf-ipv6-router_ospf)# no auto-cost ?
reference-bandwidth  Use reference bandwidth method to assign OSPF
cost
<cr>
DelleMC(conf-ipv6-router_ospf)#
```

clear ipv6 ospf process

Reset an OSPFv3 router process without removing or re-configuring the process.

S5000

Syntax	<code>clear ipv6 ospf [vrf vrf-name] process</code>
Parameters	vrf vrf-name (Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to clear IPv6 routes corresponding to that VRF.
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on the E-Series.

debug ipv6 ospf bfd

Display debug information and interface types for bidirectional forwarding detection (BFD) on OSPF IPv6 packets.

S5000

Syntax	<code>[no] debug ipv6 ospf bfd [interface] [vrf vrf-name]</code>
Parameters	interface (OPTIONAL) Enter one of the following keywords and slot/port or number information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a port channel interface, enter the keywords <code>port-channel</code> then a number.For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.

vrf vrf-name Enter the keyword `vrf` to view debugging information on OSPF corresponding to that VRF.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.1P1)	Introduced VRF support.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Introduced on the S4820T, S4810, and Z9000.

Usage Information The following section describes the command fields.

Lines	Description
Beginning With or Including	
OSPFv3...	Debugging is on for all OSPFv3 packets and all interfaces.
05:21:01	Displays the time stamp.
Sending Ver:3	Sending OSPF3 version..

Example

```
DellEMC(conf-if-te-1/2)# do debug ipv6 ospf bfd te 1/2
OSPFv3 bfd related debugging is on for TenGigabitEthernet 1/2
00:59:26 : OSPFv3INFO: Received Interface mode bfd config command on
interface Te 1/2 Enable 1, interval 0, min_rx 0, Multiplier 0, role 0,
Disable 0
00:59:26 : OSPFv3INFO: Enabling BFD on interface Te 1/2 Cmd Add Session
00:59:27 : OSPFv3INFO: Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
00:59:27 : OSPFv3INFO: Completed Enabling BFD on interface Te 1/2
00:59:27 : OSPFv3INFO: Completed Interface mode BFD configuration on Te
1/2!!
00:59:27 : OSPFv3INFO: Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
00:59:27 : OSPFv3INFO: Ospf3_register_bfd ospf key 27648
00:59:27 : OSPFv3INFO: OSPFV3 Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720 Interface Te 1/2 IfIndex 34145282
00:59:27 : OSPFv3INFO: BFD parameters interval 100 min_rx 100 mult 3
role active
00:59:27 : OSPFv3INFO: BFD parameters interval 100 min_rx 100 mult 3
role active
00:59:27 : OSPFv3INFO: Completed Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
Aug 25 11:19:59: %STKUNIT0-M:CP %BFDMGR-1-BFD_STATE_CHANGE: Changed
session state to Init for neighbor fe80::201:e8ff:fe8b:7720 on interface
Te 1/2 (diag: NBR_DN)
Aug 25 11:20:00: %STKUNIT0-M:CP %BFDMGR-1-BFD_STATE_CHANGE: Changed
session state to Up for neighbor fe80::201:e8ff:fe8b:7720 on interface
Te 1/2 (diag: NO_DIAG)
```

```
00:59:45 : OSPFv3INFO: OSPFV3 got BFD msg
00:59:45 : OSPFv3INFO: Bfd Msg Type Up for interface Te 1/2
00:59:45 : OSPFv3INFO: OSPFV3 updating NBR state
```

debug ipv6 ospf events

Display debug information and interface types on OSPF IPv6 events.

Syntax `debug ipv6 ospf events [interface] [vrf vrf-name]`

Parameters

interface (OPTIONAL) Enter one of the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

vrf vrf-name Enter the keyword `vrf` to view debugging information on OSPF corresponding to that VRF.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on E-Series.

Example

```
DellEMC# debug ipv6 ospf packet
OSPFv3 packet related debugging is on for all interfaces
05:21:01 : OSPFv3: Sending, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.254, Area ID:0, Inst:0, on Po 255
05:21:03 : OSPFv3: Received, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.255, Area ID:0, Chksum:a177, Inst:0, from Vl 100
05:20:25 : OSPFv3: Sending, Ver:3, Type:4(LS Update), Len:580, Router
ID:223.255.255.254, Area ID:0, Inst:0, on Vl 1000
07:21:40 : OSPFv3: Received, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.254, Area ID:0, Chksum:af8f, Inst:0, from Te 1/6
DellEMC#
```

Command Fields	Lines	Description
	Beginning With or Including	
	OSPFv3...	Debugging is on for all OSPFv3 packets and all interfaces.
	05:21:01	Displays the time stamp.
	Sending Ver:3	Sending OSPF3 version..
	type:	Displays the type of packet sent: <ul style="list-style-type: none"> • 1 - Hello packet • 2 - database description • 3 - link state request • 4 - link state update • 5 - link state acknowledgement
	Length:	Displays the OSPFv3 packet length.
	Router ID:	Displays the OSPFv3 router ID.
	Area ID:	Displays the OSPFv3 area ID.
	Checksum:	Displays the OSPFv3 checksum.

debug ipv6 ospf packet

Display debug information and interface types on OSPF IPv6 packets.

Syntax `debug ipv6 ospf packet [interface] [vrf vrf-name]`

Parameters		
interface	(OPTIONAL) Enter one of the following keywords and slot/port or number information:	<ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
vrf vrf-name	Enter the keyword <code>vrf</code> to view debugging information on OSPF corresponding to that VRF.	

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on E-Series.

Example

```
DellEMC# debug ipv6 ospf packet
OSPFv3 packet related debugging is on for all interfaces
05:21:01 : OSPFv3: Sending, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.254, Area ID:0, Inst:0, on Po 255
05:21:03 : OSPFv3: Received, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.255, Area ID:0, Chksum:a177, Inst:0, from Vl 100
05:20:25 : OSPFv3: Sending, Ver:3, Type:4(LS Update), Len:580, Router
ID:223.255.255.254, Area ID:0, Inst:0, on Vl 1000
07:21:40 : OSPFv3: Received, Ver:3, Type:1(Hello), Len:40, Router
ID:223.255.255.254, Area ID:0, Chksum:af8f, Inst:0, from Te 1/6
DellEMC#
```

Command Fields

Lines	Description
Beginning With or Including	
OSPFv3...	Debugging is on for all OSPFv3 packets and all interfaces.
05:21:01	Displays the time stamp.
Sending Ver:3	Sending OSPF3 version..
type:	Displays the type of packet sent: <ul style="list-style-type: none"> • 1 - Hello packet • 2 - database description • 3 - link state request • 4 - link state update • 5 - link state acknowledgement
Length:	Displays the OSPFv3 packet length.
Router ID:	Displays the OSPFv3 router ID.
Area ID:	Displays the OSPFv3 area ID.
Chksum:	Displays the OSPFv3 checksum.

debug ipv6 ospf spf

Display debug information for SPF timers on OSPF IPv6 packets.

Syntax [no] debug ipv6 ospf spf [vrf vrf-name]

Parameters

interface	(OPTIONAL) Enter one of the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number.
------------------	--

- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

vrf *vrf-name* Enter the keyword `vrf` to view debugging information on OSPF corresponding to that VRF.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following section describes the command fields.

Lines Beginning With or Including	Description
OSPFv3...	Debugging is on for all OSPFv3 packets and all interfaces.
05:21:01	Displays the time stamp.
Sending Ver:3	Sending OSPF3 version..

Example

```
DellEMC(conf-if-te-1/2)# do debug ipv6 ospf bfd te 1/2
OSPFv3 bfd related debugging is on for TenGigabitEthernet 1/2
00:59:26 : OSPFv3INFO: Received Interface mode bfd config command on
interface Te 1/2 Enable 1, interval 0, min_rx 0, Multiplier 0, role 0,
Disable 0
00:59:26 : OSPFv3INFO: Enabling BFD on interface Te 1/2 Cmd Add Session
00:59:27 : OSPFv3INFO: Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
00:59:27 : OSPFv3INFO: Completed Enabling BFD on interface Te 1/2
00:59:27 : OSPFv3INFO: Completed Interface mode BFD configuration on Te
1/2!!
00:59:27 : OSPFv3INFO: Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
00:59:27 : OSPFv3INFO: Ospf3_register_bfd ospf key 27648
00:59:27 : OSPFv3INFO: OSPFV3 Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720 Interface Te 1/2 IfIndex 34145282
00:59:27 : OSPFv3INFO: BFD parameters interval 100 min_rx 100 mult 3
role active
00:59:27 : OSPFv3INFO: BFD parameters interval 100 min_rx 100 mult 3
role active
00:59:27 : OSPFv3INFO: Completed Enabling BFD for NBRIP
fe80:0000:0000:0000:0201:e8ff:fe8b:7720
Aug 25 11:19:59: %STKUNIT0-M:CP %BFDMGR-1-BFD_STATE_CHANGE: Changed
session state to Init for neighbor fe80::201:e8ff:fe8b:7720 on interface
Te 1/2 (diag: NBR_DN)
Aug 25 11:20:00: %STKUNIT0-M:CP %BFDMGR-1-BFD_STATE_CHANGE: Changed
session state to Up for neighbor fe80::201:e8ff:fe8b:7720 on interface
Te 1/2 (diag: NO_DIAG)
00:59:45 : OSPFv3INFO: OSPFV3 got BFD msg
00:59:45 : OSPFv3INFO: Bfd Msg Type Up for interface Te 1/2
00:59:45 : OSPFv3INFO: OSPFV3 updating NBR state
```

default-information originate

Configure the Dell EMC Networking OS to generate a default external route into an OSPFv3 routing domain.

Syntax `default-information originate [always] [metric metric-value] [metric-type type-value] [route-map map-name]`

To return to the default values, use the `no default-information originate` command.

Parameters	always	(OPTIONAL) Enter the keyword <code>always</code> to specify that default route information must always be advertised.
	metric <i>metric-value</i>	(OPTIONAL) Enter the keyword <code>metric</code> then a number to configure a metric value for the route. The range is from 1 to 16777214.
	metric-type <i>metric-type-value</i>	(OPTIONAL) Enter the keywords <code>metric-type</code> then an OSPFv3 link state type of 1 or 2 for default routes. The values are: <ul style="list-style-type: none">• 1 = Type 1 external route• 2 = Type 2 external route
	route-map <i>map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of an established route map.

Defaults Disabled.

Command Modes ROUTER OSPFv3

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [redistribute](#) — redistribute routes from other routing protocols into OSPFv3.

graceful-restart grace-period

Enable OSPFv3 graceful restart globally by setting the grace period (in seconds) that an OSPFv3 router's neighbors continues to advertise the router as adjacent during a graceful restart.

Syntax `graceful-restart grace-period seconds`
To disable OSPFv3 graceful restart, enter `no graceful-restart grace-period`.

Parameters

<i>seconds</i>	Time duration, in seconds, that specifies the duration of the restart process before OSPFv3 terminates the process. The range is from 40 to 1800 seconds.
-----------------------	---

Defaults OSPFv3 graceful restart is disabled and functions in a helper-only role.

Command Modes ROUTER OSPFv3

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.2	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

By default, OSPFv3 graceful restart is disabled and functions only in a helper role to help restarting neighbor routers in their graceful restarts when it receives a Grace LSA.

To enable OSPFv3 graceful restart, enter the `ipv6 router ospf` command to enter OSPFv3 configuration mode and then configure a grace period using the `graceful-restart grace-period` command. The grace period is the length of time that OSPFv3 neighbors continue to advertise the restarting router as though it is fully adjacent. When graceful restart is enabled (restarting role), an OSPFv3 restarting expects its OSPFv3 neighbors to help when it restarts by not advertising the broken link.

When you enable the helper-reject role on an interface with the `ipv6 ospf graceful-restart helper-reject` command, you reconfigure OSPFv3 graceful restart to function in a “restarting-only” role. In a “restarting-only” role, OSPFv3 does not participate in the graceful restart of a neighbor.

graceful-restart mode

Specify the type of events that trigger an OSPFv3 graceful restart.

Syntax

```
graceful-restart mode {planned-only | unplanned-only}
```

To disable graceful restart mode, enter `no graceful-restart mode`.

Parameters

planned-only	(OPTIONAL) Enter the keywords <code>planned-only</code> to indicate graceful restart is supported in a planned restart condition only.
unplanned-only	(OPTIONAL) Enter the keywords <code>unplanned-only</code> to indicate graceful restart is supported in an unplanned restart condition only.

Defaults

OSPFv3 graceful restart supports both planned and unplanned failures.

Command Modes

ROUTER OSPFv3

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.2	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

OSPFv3 graceful restart supports planned-only and/or unplanned-only restarts. The default is support for both planned and unplanned restarts.

- A planned restart occurs when you enter the `redundancy force-failover rpm` command to force the primary RPM to switch to the backup RPM. During a planned restart, OSPF sends out a Type-11 Grace LSA before the system switches over to the backup RPM.
- An unplanned restart occurs when an unplanned event causes the active RPM to switch to the backup RPM, such as when an active process crashes, the active RPM is removed, or a power failure happens. During an unplanned restart, OSPF sends out a Grace LSA when the backup RPM comes online.

By default, both planned and unplanned restarts trigger an OSPFv3 graceful restart. Selecting one or the other mode restricts OSPFv3 to the single selected mode.

ipv6 ospf area

Enable IPv6 OSPF on an interface.

Syntax

```
ipv6 ospf process id area area id
```

To disable OSPFv6 routing for an interface, use the `no ipv6 ospf process-id area area-id` command.

Parameters

<i>process-id</i>	Enter the process identification number.
<i>area area-id</i>	Specify the OSPF area. The range is from 0 to 65535.

Defaults

None

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.4.1.0	Introduced on the E-Series and C-Series.

ipv6 ospf authentication

Configure an IPsec authentication policy for OSPFv3 packets on an IPv6 interface.

Syntax	<code>ipv6 ospf authentication {null ipsec spi number {MD5 SHA1} [key-encryption-type] key}</code>	
Parameters	null	Causes an authentication policy configured for the area to not be inherited on the interface.
	ipsec spi number	Security Policy index (SPI) value that identifies an IPsec security policy. The range is from 256 to 4294967295.
	MD5 SHA1	Authentication type: Message Digest 5 (MD5) or Secure Hash Algorithm 1 (SHA-1).
	key-encryption-type	(OPTIONAL) Specifies if the key is encrypted. Valid values: 0 (key is not encrypted) or 7 (key is encrypted).
	key	Text string used in authentication. For MD5 authentication, the key must be 32 hex digits (non-encrypted) or 64 hex digits (encrypted). For SHA-1 authentication, the key must be 40 hex digits (non-encrypted) or 80 hex digits (encrypted).
Defaults	Not configured.	
Command Modes	INTERFACE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on S4810 and Z9000.
8.4.2.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

Before you enable IPsec authentication on an OSPFv3 interface, first enable IPv6 unicast routing globally, configure an IPv6 address and enable OSPFv3 on the interface, and assign the interface to an area.

An SPI value must be unique to one IPsec security policy (authentication or encryption) on the router. Configure the same authentication policy (same SPI and key) on each OSPFv3 interface in a link.

To remove an IPsec authentication policy from an interface, enter the `no ipv6 ospf authentication spi number` command. To remove null authentication on an interface to allow the interface to inherit the authentication policy configured for the OSPFv3 area, enter the `no ipv6 ospf authentication null` command.

Related Commands

- [area authentication](#) – configure an IPsec authentication policy for an OSPFv3 area.
- [show crypto ipsec policy](#) – display the configuration of IPsec authentication policies.
- [show crypto ipsec sa ipv6](#) – display the security associations set up for OSPFv3 interfaces in authentication policies.

ipv6 ospf bfd all-neighbors

Establish BFD sessions with all OSPFv3 neighbors on a single interface or use non-default BFD session parameters.

Syntax

```
ipv6 ospf bfd all-neighbors [disable | [interval interval min_rx min_rx multiplier value role {active | passive}]]
```

To disable all BFD sessions on an OSPFv3 interface implicitly, use the `no ipv6 ospf bfd all-neighbors disable` command in interface mode..

Parameters

disable	(OPTIONAL) Enter the keyword <code>disable</code> to disable BFD on this interface.
interval milliseconds	(OPTIONAL) Enter the keyword <code>interval</code> to specify non-default BFD session parameters beginning with the transmission interval. The range is from 50 to 1000. The default is 200 .
min_rx milliseconds	Enter the keywords <code>min_rx</code> to specify the minimum rate at which the local system receives control packets from the remote system. The range is from 50 to 1000. The default is 200 .
multiplier value	Enter the keyword <code>multiplier</code> to specify the number of packets that must be missed in order to declare a session down. The range is from 3 to 50. The default is 3 .
role [active passive]	Enter the role that the local system assumes: <ul style="list-style-type: none">• <code>Active</code> — active system initiates the BFD session. Both systems can be active for the same session.• <code>Passive</code> — passive system does not initiate a session. It only responds to a request for session initialization from the active system. The default is Active .

Defaults

See *Parameters*.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2.0.0	Introduced on the Z9000, S4820T, and S4810.

Usage Information

This command provides the flexibility to fine-tune the timer values based on individual interface needs when you configure ipv6 ospf BFD in CONFIGURATION mode. Any timer values specified with this command overrides timers set using the `bfd all-neighbors` command. Using the `no` form of this command does not disable BFD if you configure BFD in CONFIGURATION mode.

To disable BFD on a specific interface while you configure BFD in CONFIGURATION mode, use the keyword `disable`.

ipv6 ospf cost

Explicitly specify the cost of sending a packet on an interface.

Syntax `ipv6 ospf interface-cost`

Parameters **interface-cost** Enter a unsigned integer value expressed as the link-state metric. The range is from 1 to 65535.

Defaults Default cost based on the bandwidth.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

In general, the path cost is calculated as:

$$10^8 / \text{bandwidth}$$

Using this formula, the default path cost is calculated as:

- GigabitEthernet — Default cost is 1
- TenGigabitEthernet — Default cost is 1
- FortygigEthernet — Default cost is 1
- Ethernet — Default cost is 10

ipv6 ospf dead-interval

Set the time interval since the last hello-packet was received from a router. After the time interval elapses, the neighboring routers declare the router down.

Syntax `ipv6 ospf dead-interval seconds`

To return to the default time interval, use the `no ipv6 ospf dead-interval` command.

Parameters **seconds** Enter the time interval in seconds. The range is from 1 to 65535 seconds.

Defaults 40 seconds (Ethernet).

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
7.8.1.0	Added support for C-Series.
7.4.1.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information By default, the dead interval is four times longer than the default hello-interval.

Related Commands

- [ipv6 ospf hello-interval](#) – specify the time interval between hello packets.

ipv6 ospf encryption

Configure an IPsec encryption policy for OSPFv3 packets on an IPv6 interface.

Syntax `ipv6 ospf encryption {null | ipsec spi number esp encryption-algorithm [key-encryption-type] key authentication-algorithm [key-encryption-type] key}`

Parameters

null Causes an encryption policy configured for the area to not be inherited on the interface.

ipsec spi number Security Policy index (SPI) value that identifies an IPsec security policy. The range is from 256 to 4294967295.

esp encryption- algorithm	Encryption algorithm used with ESP. Valid values are: 3DES, DES, AES-CBC, and NULL. For AES-CBC, only the AES-128 and AES-192 ciphers are supported.
key-encryption- type	(OPTIONAL) Specifies if the key is encrypted. Valid values: 0 (key is not encrypted) or 7 (key is encrypted).
key	Text string used in authentication. The required lengths of a non-encrypted or encrypted key are: 3DES - 48 or 96 hex digits; DES - 16 or 32 hex digits; AES-CBC -32 or 64 hex digits for AES-128 and 48 or 96 hex digits for AES-192.
authentication- algorithm	Specifies the authentication algorithm to use for encryption. Valid values are MD5 or SHA1.
key-encryption- type	(OPTIONAL) Specifies if the authentication key is encrypted. Valid values: 0 (key is not encrypted) or 7 (key is encrypted).
key	Text string used in authentication. For MD5 authentication, the key must be 32 hex digits (non-encrypted) or 64 hex digits (encrypted). For SHA-1 authentication, the key must be 40 hex digits (non-encrypted) or 80 hex digits (encrypted).

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

Before you enable IPsec encryption on an OSPFv3 interface, first enable IPv6 unicast routing globally, configure an IPv6 address and enable OSPFv3 on the interface, and assign the interface to an area.

An SPI value must be unique to one IPsec security policy (authentication or encryption) on the router. Configure the same encryption policy (same SPI and key) on each OSPFv3 interface in a link.

To remove an IPsec encryption policy from an interface, enter the `no ipv6 ospf encryption spi number` command. To remove null authentication on an interface to allow the interface to inherit the authentication policy configured for the OSPFv3 area, enter the `no ipv6 ospf no ipv6 ospf encryption null` command.

**Related
Commands**

- [area encryption](#) – configure an IPsec encryption policy for an OSPFv3 area.
- [show crypto ipsec policy](#) – display the configuration of IPsec encryption policies.
- [show crypto ipsec sa ipv6](#) – display the security associations set up for OSPFv3 interfaces in encryption policies.

ipv6 ospf graceful-restart helper-reject

Configure an OSPFv3 interface to not act upon the Grace LSAs that it receives from a restarting OSPFv3 neighbor.

Syntax `ipv6 ospf graceful-restart helper-reject`
To disable the helper-reject role, enter `no ipv6 ospf graceful-restart helper-reject`.

Defaults The helper-reject role is not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.2	Introduced on E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information By default, OSPFv3 graceful restart is disabled and functions only in a helper role to help restarting neighbor routers in their graceful restarts when it receives a Grace LSA.

When configured in a helper-reject role, an OSPFv3 router ignores the Grace LSAs that it receives from a restarting OSPFv3 neighbor.

The graceful-restart role command is not supported in OSPFv3. When you enable the helper-reject role on an interface, you reconfigure an OSPFv3 router to function in a “restarting-only” role.

ipv6 ospf hello-interval

Specify the time interval between the hello packets sent on the interface.

Syntax `ipv6 ospf hello-interval seconds`
To return to the default time interval, enter `no ipv6 ospf hello-interval`.

Parameters *seconds* Enter the time interval in seconds as the time between hello packets. The range is from 1 to 65525 seconds.

Defaults 10 seconds (Ethernet).

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information The time interval between hello packets must be the same for routers in a network.

Related Commands

- [ipv6 ospf dead-interval](#) – specify the time interval between hello packets was received from a router.

ipv6 ospf priority

To determine the Designated Router for the OSPFv3 network, set the priority of the interface.

Syntax `ipv6 ospf priority number`

To return to the default time interval, use the `no ipv6 ospf priority` command.

Parameters *number* Enter the number as the priority. The range is from 1 to 255.

Defaults 1

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

Setting a priority of 0 makes the router ineligible for election as a Designated Router or Backup Designated Router.

Use this command for interfaces connected to multi-access networks, not point-to-point networks.

ipv6 router ospf

Enable OSPF for IPv6 router configuration.

S5000

Syntax

`ipv6 router ospf process-id [vrf vrf-name]`

To exit OSPF for IPv6, use the `no ipv6 router ospf process-id` command.

Parameters

process-id	Enter the process identification number. The range is from 1 to 65535.
vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to install IPv6 routes in that VRF.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

maximum-paths

Enable the software to forward packets over multiple paths.

Syntax	<code>maximum-paths number</code> To disable packet forwarding over multiple paths, use the <code>no maximum-paths</code> command.
Parameters	number Specify the number of paths. The range is from 1 to 64. The default is 8 paths.
Defaults	8
Command Modes	ROUTER OSPF
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Added support for Multi-Process OSPF.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.1	Introduced on the E-Series.

passive-interface

Disable (suppress) sending routing updates on an interface.

S5000

Syntax	<code>passive-interface interface</code> To enable sending routing updates on an interface, use the <code>no passive-interface interface</code> command.
Parameters	interface Enter the following keywords and slot/port or number information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.

- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Enabled, that is sending of routing updates are enabled by default.

Command Modes ROUTER OSPF for OSPFv2
ROUTER OSPFv3 for OSPFv3

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information By default, no interfaces are *passive*. Routing updates are sent to all interfaces on which the routing protocol is enabled.

If you disable the sending of routing updates on an interface, the particular address prefix continues to be advertised to other interfaces, and updates from other routers on that interface continue to be received and processed.

OSPFv3 for IPv6 routing information is not sent or received through the specified router interface. The specified interface address appears as a stub network in the OSPFv3 for IPv6 domain.

On configuring suppression using the `passive-interface` command, the state of the OSPF neighbor does not change to INIT; instead, the state of the OSPF neighbor changes to DOWN after the dead-timer expires.

redistribute

Redistribute into OSPFv3.

Syntax `redistribute {bgp as number}{connected | static}[metric metric-value | metric-type type-value] [route-map map-name] [tag tag-value]`

To disable redistribution, use the `no redistribute {connected | static}` command.

Parameters **bgp as number** Enter the keyword `bgp` then the autonomous system number.
The range is from 1 to 65535.

connected	Enter the keyword <code>connected</code> to redistribute routes from physically connected interfaces.
static	Enter the keyword <code>static</code> to redistribute manually configured routes.
metric <i>metric-value</i>	Enter the keyword <code>metric</code> then the metric value. The range is from 0 to 16777214. The default is 20 .
metric-type <i>type-value</i>	(OPTIONAL) Enter the keywords <code>metric-type</code> then the OSPFv3 link state type of 1 or 2 for default routes. The values are: <ul style="list-style-type: none"> • 1 for a type 1 external route • 2 for a type 2 external route The default is 2 .
route-map <i>map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of an established route map. If the route map is not configured, the default is deny (to drop all routes).
tag <i>tag-value</i>	(OPTIONAL) Enter the keyword <code>tag</code> to set the tag for routes redistributed into OSPFv3. The range is from 0 to 4294967295 The default is 0 .

Defaults Not configured.

Command Modes ROUTER OSPF for OSPFv2
ROUTER OSPFv3 for OSPFv3

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information To redistribute the default route (x:x:x:x), use the `default-information originate` command.

Related Commands

- [default-information originate](#) – configure default external route into OSPFv3.

router-id

Designate a fixed router ID.

Syntax `router-id ip-address`

To return to the previous router ID, use the `no router-id ip-address` command.

Parameters ***ip-address*** Enter the router ID in the dotted decimal format.

Defaults The router ID is selected automatically from the set of IPv4 addresses configured on a router.

Command Modes ROUTER OSPF for OSPFv2
ROUTER OSPFv3 for OSPFv3

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information You can configure an arbitrary value in the IP address for each router. However, each router ID must be unique.

If this command is used on an OSPFv3 process that is already active (has neighbors), all the neighbor adjacencies are brought down immediately and new sessions are initiated with the new router ID.

Related Commands

- [clear ipv6 ospf process](#) – reset an OSPFv3 router process.

show crypto ipsec policy

Display the configuration of IPsec authentication and encryption policies.

Syntax `show crypto ipsec policy [name name]`

Parameters ***name name*** (OPTIONAL) Displays configuration details about a specified policy.

Defaults No default behavior or values.

Command Modes EXEC
EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

The `show crypto ipsec policy` command output displays the AH and ESP parameters configured in IPsec security policies, including the SPI number, keys, and algorithms used.

When configured in a helper-reject role, an OSPFv3 router ignores the Grace LSAs that it receives from a restarting OSPFv3 neighbor.

Related Commands

[show crypto ipsec sa ipv6](#)— displays the IPsec security associations used on OSPFv3 interfaces.

Example

```
DellEMC# show crypto ipsec policy

Crypto IPSec client security policy data

Policy name : OSPFv3-1-502
Policy refcount : 1
Inbound ESP SPI : 502 (0x1F6)
Outbound ESP SPI : 502 (0x1F6)
Inbound ESP Auth Key : 123456789a123456789b123456789c12
Outbound ESP Auth Key : 123456789a123456789b123456789c12
Inbound ESP Cipher Key :
123456789a123456789b123456789c123456789d12345678
Outbound ESP Cipher Key :
123456789a123456789b123456789c123456789d12345678
Transform set : esp-3des esp-md5-hmac

Crypto IPSec client security policy data

Policy name : OSPFv3-0-501
Policy refcount : 1
Inbound ESP SPI : 501 (0x1F5)
Outbound ESP SPI : 501 (0x1F5)
Inbound ESP Auth Key :
bbdd96e6eb4828e2e27bc3f9ff541e43faa759c9ef5706ba8ed8bb5efe91e97eb7c0
c30808825fb5
Outbound ESP Auth Key :
bbdd96e6eb4828e2e27bc3f9ff541e43faa759c9ef5706ba8ed8bb5efe91e97eb7c0
c30808825fb5
Inbound ESP Cipher Key :
bbdd96e6eb4828e2e27bc3f9ff541e43faa759c9ef5706ba10345a1039ba8f8a
Outbound ESP Cipher Key :
bbdd96e6eb4828e2e27bc3f9ff541e43faa759c9ef5706ba10345a1039ba8f8a
Transform set : esp-128-aes esp-sha1-hmac
```

show crypto ipsec policy Command Fields

Field	Description
Policy name	Displays the name of an IPsec policy.
Policy refcount	Number of interfaces on the router that use the policy.
Inbound ESP SPI and Outbound ESP SPI	The encapsulating security payload (ESP) security policy index (SPI) for inbound and outbound links.
Inbound ESP Auth Key and Outbound Auth Key	The ESP authentication key for inbound and outbound links.
Inbound ESP Cipher Key and Outbound ESP Cipher Key	The ESP encryption key for inbound and outbound links.
Transform set	The set of security protocols and algorithms used in the policy.
Inbound AH SPI and Outbound AH SPI	The authentication header (AH) security policy index (SPI) for inbound and outbound links.
Inbound AH Key and Outbound AH Key	The AH key for inbound and outbound links.

show crypto ipsec sa ipv6

Display the IPsec security associations (SAs) used on OSPFv3 interfaces.

Syntax	<code>show crypto ipsec sa ipv6 [interface <i>interface</i>]</code>	
Parameters	interface <i>interface</i>	(OPTIONAL) Displays information about the SAs used on a specified OSPFv3 interface, where <i>interface</i> is one of the following values: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.• For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.• For a port channel interface, enter the keywords <code>port-channel</code> then a number.• For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
Defaults	No default behavior or values.	
Command Modes	EXEC EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced on the S4810 and Z9000.
8.4.2.0	Introduced on the E-Series.
8.3.19.0	Introduced on the S4820T.

Usage Information

The `show crypto ipsec sa ipv6` command output displays security associations set up for OSPFv3 links in IPsec authentication and encryption policies on the router.

Related Commands

[show crypto ipsec policy](#) – displays the configuration of IPsec authentication and encryption policies.

Example

```
DelleMC# show crypto ipsec policy
DelleMC# show crypto ipsec sa ipv6

Interface: TenGigabitEthernet 1/1
Link Local address: fe80::201:e8ff:fe40:4d10
IPSecv6 policy name: OSPFv3-1-500

inbound ah sas
  spi : 500 (0x1f4)
  transform : ah-md5-hmac
  in use settings : {Transport, }
  replay detection support : N
  STATUS : ACTIVE

outbound ah sas
  spi : 500 (0x1f4)
  transform : ah-md5-hmac
  in use settings : {Transport, }
  replay detection support : N
  STATUS : ACTIVE

inbound esp sas

outbound esp sas

Interface: TenGigabitEthernet 1/2
Link Local address: fe80::201:e8ff:fe40:4d11
IPSecv6 policy name: OSPFv3-1-600

inbound ah sas

outbound ah sas

inbound esp sas
  spi : 600 (0x258)
  transform : esp-des esp-shal-hmac
  in use settings : {Transport, }
  replay detection support : N
  STATUS : ACTIVE

outbound esp sas
  spi : 600 (0x258)
  transform : esp-des esp-shal-hmac
  in use settings : {Transport, }
```

```
replay detection support : N
STATUS : ACTIVE
```

show crypto ipsec sa ipv6 Command Fields

Field	Description
Interface	IPv6 interface
Link local address	IPv6 address of interface
IPSecv6 policy name	Name of the IPsec security policy applied to the interface.
inbound/outbound ah	Authentication policy applied to inbound or outbound traffic.
inbound/outbound esp	Encryption policy applied to inbound or outbound traffic.
spi	Security policy index number used to identify the policy.
transform	Security algorithm that is used to provide authentication, integrity, and confidentiality.
in use settings	Transform that the SA uses (only transport mode is supported).
replay detection support	Y: An SA has enabled the replay detection feature. N: The replay detection feature is not enabled.
STATUS	ACTIVE: The authentication or encryption policy is enabled on the interface.

show ipv6 ospf database

Display information in the OSPFv3 database, including link-state advertisements (LSAs) in detail.

Syntax	<code>show ipv6 ospf [process-number] [vrf vrf-name] database [database-summary grace-lsa]</code>						
Parameters	<p>process-number Enter the OSPF process number.</p> <p>vrf vrf-name (Optional) Enter the keyword <code>vrf</code> followed by the name of the VRF to display neighbors corresponding to that VRF.</p> <p> NOTE: If you do not specify this option, neighbors corresponding to the default VRF are displayed.</p> <p>grace-lsa (OPTIONAL): Enter the keyword <code>grace-lsa</code> to display the Type-11 Grace LSAs sent and received on an OSPFv3 router.</p>						
Defaults	None						
Command Modes	EXEC EXEC Privilege						
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .						
	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.10(0.1)</td><td>Introduced on the S6010-ON and S4048T-ON.</td></tr><tr><td>9.10(0.0)</td><td>Introduced on the S3148.</td></tr></tbody></table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.
Version	Description						
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.						
9.10(0.0)	Introduced on the S3148.						

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Added support for OSPFv3 on the S4810 and Z9000.
8.4.2.2	Added support for the display of graceful restart parameters and Type-11 Grace LSAs on E-Series routers.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for C-Series.

Usage Information

The `show ipv6 ospf database` command output displays detailed information on the OSPFv3 database, including link-state advertisements (LSAs).

Example (grace-lsa)

```
DelleEMC# show ipv6 ospf 3 database grace-lsa
!
Type-11 Grace LSA (Area 0)

LS Age : 10
Link State ID : 6.16.192.66
Advertising Router : 100.1.1.1
LS Seq Number : 0x80000001
Checksum : 0x1DF1
Length : 36
Associated Interface : Te 1/3
Restart Interval : 180
Restart Reason : Switch to Redundant Processor
```

Example (database-summary)

```
DelleEMC# show ipv6 ospf 3 database database-summary

OSPFv3 Router with ID (1.1.1.1) (Process ID 1)

Process 1 database summary
Type          Count/Status
Oper Status   1
Admin Status  1
Area Bdr Rtr Status      1
AS Bdr Rtr Status        1
AS Scope LSA Count      0
AS Scope LSA Cksum sum   0
Originate New LSAS      50
Rx New LSAS             22
Ext LSA Count            0
Rte Max Eq Cost Paths    10
GR grace-period          180
GR mode                  planned and unplanned

Area 0 database summary
Type          Count/Status
Brd Rtr Count  1
AS Bdr Rtr Count      1
LSA count      6
Rtr LSA Count      2
Net LSA Count      1
Inter Area Pfx LSA Count 1
Inter Area Rtr LSA Count  0
Group Mem LSA Count  0
```

```

Type-7 LSA count          0
Intra Area Pfx LSA Count  2
Intra Area TE LSA Count   2

Area 1 database summary
Type          Count/Status
Brd Rtr Count      1
AS Bdr Rtr Count  1
LSA count         8
Rtr LSA Count      1
Net LSA Count      0
Inter Area Pfx LSA Count  5
Inter Area Rtr LSA Count  0
Group Mem LSA Count  0
Type-7 LSA count   0
Intra Area Pfx LSA Count  2
Intra Area TE LSA Count  2
E1200-T2C2#sh ipv6 ospf neighbor

```

```

Neighbor ID      Pri      State           Dead Time      Interface ID
Interface
63.114.8.36     1      FULL/DR        00:00:37      4 Te 1/4

```

show ipv6 ospf interface

View OSPFv3 interface information.

S5000

Syntax `show ipv6 ospf [process-number] [vrf vrf-name] [interface]`

Parameters

process-number Enter the OSPF process number.

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to display neighbors corresponding to that VRF.

 **NOTE:** If you do not specify this option, neighbors corresponding to the default VRF are displayed.

interface (OPTIONAL) Enter one of the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.2.(0.0)	Added support for showing BFD status on the S4820T, S4810, and Z9000.
9.1.(0.0)	Added support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

If you enable BFD at the global level, `show ipv6 ospf interface` shows the BFD provisioning.

If you enable BFD at the interface level, `show ipv6 ospf interface` shows the BFD interval timers.

Example

```
DelleMC# show ipv6 ospf 3 interface tengigabitethernet 1/2
TenGigabitEthernet 1/2 is up, line protocol is up
  Link Local Address fe80::201:e8ff:fe17:5bbd, Interface ID 67420217
  Area 0, Process ID 1, Instance ID 0, Router ID 11.1.1.1
  NetworkType BROADCAST, Cost: 1, Passive: No
  Transmit Delay is 100 sec, State DR, Priority 1
  Interface is using OSPF global mode BFD configuration.
  Designated router on this network is 11.1.1.1 (local)
  No backup designated router on this network
  Timer intervals configured, Hello 10, Dead 40, Wait 1, Retransmit 5
DelleMC#
```

show ipv6 ospf neighbor

Display the OSPF neighbor information on a per-interface basis.

S5000

Syntax

```
show ipv6 ospf [process-number] [vrf vrf-name] neighbor [interface]
```

Parameters

process-number Enter the OSPF process number.

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to display OSPF neighbors corresponding to that VRF.

 **NOTE:** If you do not specify this option, neighbors corresponding to the default VRF are displayed.

interface (OPTIONAL) Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults None

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.1.(0.0)	Introduced support for OSPFv3 on the S4810 and Z9000.
8.3.19.0	Introduced on the S4820T.
7.8.1.0	Added support for the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ipv6 ospf 3 neighbor gi 1/2

Neighbor ID  Pri   State           Dead Time   Interface  ID Interface
63.114.8.36  1    FULL/DR        00:00:38    4          Te 1/2

DellEMC#
```

timers spf

Set the time interval between when the switch receives a topology change and starts a shortest path first (SPF) calculation.

S5000

Syntax `timers spf delay holdtime msec`

To return to the default, use the `no timers spf` command.

Parameters

delay	Enter a number as the delay. The range is from 0 to 2147483647. The default is 5 seconds . When configured in milli seconds, 100 is the least value that is allowed to be configured.
holdtime	Enter a number as the hold time. The range is from 0 to 2147483647. The default is 10 seconds . When configured in milli seconds, 200 is the least value that is allowed to be configured.
msec	Enter the keyword <code>msec</code> to specify the time interval value in milli seconds.

 **NOTE:** If you do not specify the msec option, the timer values are considered as seconds.

- Defaults**
- delay = 5 seconds
 - holdtime = 10 seconds

Command Modes ROUTER OSPFv3 for OSPFv3 and ROUTER OSPFv2 for OSPFv2

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11.0.0	Introduced the keyword <code>msec</code> .
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S6000-ON, S6000, S4820T, S4810, S5000.

Usage Information Setting the *delay* and *holdtime* parameters to a low number enables the switch to an alternate path quickly but requires more CPU usage.

Example

```
DellEMC# conf
DellEMC(conf)# ipv6 router ospf 1
DellEMC(conf-ipv6-router_ospf)# timer spf 2 5 msec
DellEMC(conf-ipv6-router_ospf)# show config
!
ipv6 router ospf 1
timers spf 2 5 msec
DellEMC(conf-ipv6-router_ospf)#
DellEMC(conf-ipv6-router_ospf)# end
DellEMC#
```

Policy-based Routing (PBR)

Policy-based routing (PBR) allows you to apply routing policies to specific interfaces. To enable PBR, create a redirect list and apply it to the interface. After the redirect list is applied to the interface, all traffic passing through the interface is subject to the rules defined in the redirect list. PBR is supported by the Dell EMC Networking OS.

You can apply PBR to physical interfaces and logical interfaces (such as a link aggregation group [LAG] or virtual local area network [VLAN]). Trace lists and redirect lists do not function correctly when you configure both in the same configuration.

NOTE: Apply PBR to Layer 3 interfaces only.

NOTE: For more information, see [Content Addressable Memory \(CAM\)](#).

Topics:

- [description](#)
- [ip redirect-group](#)
- [ip redirect-list](#)
- [permit](#)
- [redirect](#)
- [seq](#)
- [show cam pbr](#)
- [show ip redirect-list](#)

description

Add a description to this redirect list.

Syntax	<code>description {description}</code> To remove the description, use the <code>no description {description}</code> command.
Parameters	description Enter a description to identify the IP redirect list (16 characters maximum).
Defaults	None
Command Modes	REDIRECT-LIST
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.2.0	Introduced on the E-Series.

Version	Description
7.7.1.0	Introduced on the E-Series.

Related Commands

- [ip redirect-list](#) – enable an IP Redirect List.

ip redirect-group

Apply a redirect list (policy-based routing) on an interface. You can apply multiple redirect lists to an interface by entering this command multiple times.

Syntax `ip redirect-group redirect-list-name test [l2-switch]`
 To remove a redirect list from an interface, use the `no ip redirect-group name` command.

Parameters

<i>redirect-list-name</i>	Enter the name of a configured redirect list.
l2-switch	Enter the keyword <code>l2-switch</code> to enable PBR on Layer2 (switched) traffic.

Defaults None

Command Modes INTERFACE (conf-if-vl-)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(2.0P1)	Introduced the <code>l2-switch</code> attribute.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.2.0	Introduced on the E-Series.
7.7.1.0	Introduced on the E-Series.

Usage Information

You can apply any number of redirect-groups to an interface. A redirect list can contain any number of configured rules. These rules includes the next-hop IP address where the incoming traffic is to be redirected.

If the next hop address is reachable, traffic is forwarded to the specified next hop. Otherwise, the normal routing table is used to forward traffic. When a redirect-group is applied to an interface and the next-hop is reachable, the rules are added into the PBR CAM region. When incoming traffic hits an entry in the CAM, the traffic is redirected to the corresponding next-hop IP address specified in the rule.

 **NOTE:** Apply the redirect list to physical, VLAN, or LAG interfaces only.

The Layer2 PBR option matches the layer2 traffic flow. If you un-configure this option, then the Layer2 traffic is not matched. You can apply the `l2-switch` option to redirect Layer2 traffic only on a VLAN interface. This VLAN interface must be configured with an IP address for ARP resolution.

i **NOTE:** The `l2-switch` option that redirects Layer2 traffic is applicable only on VLAN interfaces.

The Layer3 routing is not affected on the same interface on which Layer2 PBR is applied. The port from which Layer2 packets egress and the destination MAC are re-written from static ARP. Layer 2 packets with the re-written destination MAC are forwarded through the outgoing port on the same incoming VLAN interface. The `l2-switch` option ensures that the outgoing VLAN and MAC-SA are changed and TTL is not decremented.

Related Commands

- `show cam pbr` – display the content of the PBR CAM.
- `show ip redirect-list` – display the redirect-list configuration.

ip redirect-list

Configure a redirect list and enter REDIRECT-LIST mode.

Syntax

```
ip redirect-list redirect-list-name
```

To remove a redirect list, use the `no ip redirect-list` command.

Parameters

redirect-list-name Enter the name of a redirect list.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.2.0	Introduced on the E-Series.
6.5.3.0	Introduced on the E-Series.

permit

Configure a permit rule. A permit rule excludes the matching packets from PBR classification and routes them using conventional routing.

Syntax `permit {ip-protocol-number | protocol-type} {source mask | any | host ip-address} {destination mask | any | host ip-address} [bit] [operators]`

To remove the rule, use one of the following:

- If you know the filter sequence number, use the `no seq sequence-number` syntax command.
- You can also use the `no permit {ip-protocol-number | protocol-type} {source mask | any | host ip-address} {destination mask | any | host ip-address} [bit] [operators]` command.

Parameters	ip-protocol-number	Enter a number from 0 to 255 for the protocol identified in the IP protocol header.
	protocol-type	Enter one of the following keywords as the protocol type: <ul style="list-style-type: none">• <code>icmp</code> for internet control message protocol• <code>ip</code> for any internet protocol• <code>tcp</code> for transmission control protocol• <code>udp</code> for user datagram protocol
	source	Enter the IP address of the network or host from which the packets were sent.
	mask	Enter a network mask in /prefix format (/x).
	any	Enter the keyword <code>any</code> to specify that all traffic is subject to the filter.
	host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
	destination	Enter the IP address of the network or host to which the packets are sent.
	bit	(OPTIONAL) For the TCP protocol type only, enter one or a combination of the following TCP flags: <ul style="list-style-type: none">• <code>ack</code> = acknowledgement• <code>fin</code> = finish (no more data from the user)• <code>psh</code> = push function• <code>rst</code> = reset the connection• <code>syn</code> = synchronize sequence number• <code>urg</code> = urgent field
	operator	(OPTIONAL) For TCP and UDP parameters only. Enter one of the following logical operand: <ul style="list-style-type: none">• <code>eq</code> = equal to• <code>neq</code> = not equal to• <code>gt</code> = greater than• <code>lt</code> = less than• <code>range</code> = inclusive range of ports (you must specify two ports for the <code>portcommand</code> parameter.)

Defaults None

Command Modes REDIRECT-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.2.0	Introduced on the E-Series.
7.5.1.0	Introduced on the E-Series.

redirect

Configure a rule for the redirect list.

Syntax

```
redirect {ip-address | slot/port} | tunnel tunnel-id}[track <obj-id>] {ip-protocol-number | protocol-type [bit]} {source mask | any | host ip-address} {destination mask | any | host ip-address} [operator]
```

To remove this filter, use one of the following:

- Use the `no seq sequence-number` command if you know the filter's sequence number.
- You can also use the `redirect {ip-address | slot/port}| tunnel tunnel-id [track <obj-id>] {ip-protocol-number [bit] | protocol-type} {source mask | any | host ip-address} {destination mask | any | host ip-address} [operator]` command.

Parameters

redirect	Enter the keyword <code>redirect</code> to assign the sequence to the redirect list.
ip-address	Enter the IP address of the forwarding router.
slot/port	Enter the keyword <code>slot / port</code> followed by the slot/port information.
tunnel	Enter the keyword <code>tunnel</code> to configure the tunnel setting.
tunnel-id	Enter the keyword <code>tunnel-id</code> to redirect the traffic.
track	Enter the keyword <code>track</code> to enable the tracking.
track <obj-id>	Enter the keyword <code>track <obj-id></code> to track object-id.
ip-protocol-number	Enter a number from 0 to 255 for the protocol identified in the IP protocol header.
protocol-type	Enter one of the following keywords as the protocol type: <ul style="list-style-type: none"> • <code>icmp</code> for internet control message protocol • <code>ip</code> for any internet protocol • <code>tcp</code> for transmission control protocol • <code>udp</code> for user datagram protocol
bit	(OPTIONAL) For the TCP protocol type only, enter one or a combination of the following TCP flags: <ul style="list-style-type: none"> • <code>ack</code> = acknowledgement • <code>fin</code> = finish (no more data from the user) • <code>psh</code> = push function

- `rst` = reset the connection
- `syn` = synchronize sequence number
- `urg` = urgent field

source	Enter the IP address of the network or host from which the packets were sent.
mask	Enter a network mask in /prefix format (/x).
any	Enter the keyword <code>any</code> to specify that all traffic is subject to the filter.
host ip-address	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
destination	Enter the IP address of the network or host to which the packets are sent.
operator	(OPTIONAL) For TCP and UDP parameters only. Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the <code>port</code> command parameter.)

Defaults None

Command Modes REDIRECT-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Added support for the <code>track-id</code> on the S4810, S4820T, S6000, and Z9000.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
8.4.2.1	Introduced on the C-Series and S-Series.
8.4.2.0	Introduced on the E-Series.
7.7.1.0	Introduced on the E-Series.

seq

Configure a filter with an assigned sequence number for the redirect list.

Syntax `seq sequence-number {permit | redirect {ip-address | tunnel tunnel-id} [track <obj-id>] }}` `{ip-protocol-number | protocol-type} {source mask | any | host ip-address} {destination mask | any | host ip-address}`

```
[bit] [operator]{source-port source-port| source-port-range start-port -
end-port} {destination-port destination-port| destination-port-range start-
port - end-port}
```

To delete a filter, use the `no seq sequence-number` command.

Parameters

<i>sequence-number</i>	Enter a number from 1 to 65535.
<i>permit</i>	Enter the keyword <code>permit</code> assign the sequence to the permit list.
<i>redirect</i>	Enter the keyword <code>redirect</code> to assign the sequence to the redirect list.
<i>ip-address</i>	Enter the keyword <code>IP address</code> of the forwarding router.
<i>tunnel</i>	Enter the keyword <code>tunnel</code> to configure the tunnel setting.
<i>tunnel-id</i>	Enter the keyword <code>tunnel-id</code> to redirect the traffic.
<i>track</i>	Enter the keyword <code>track</code> to enable the tracking.
<i>track <obj-id></i>	Enter the keyword <code>track <obj-id></code> to track object-id.
<i>ip-protocol-number</i>	Enter the keyword <code>ip-protocol-number</code> then the number from 0 to 255 for the protocol identified in the IP protocol header.
<i>protocol-type</i>	Enter one of the following keywords as the protocol type: <ul style="list-style-type: none"> • <code>icmp</code> for internet control message protocol • <code>ip</code> for any internet protocol • <code>tcp</code> for transmission control protocol • <code>udp</code> for user datagram protocol
<i>source</i>	Enter the IP address of the network or host from which the packets were sent.
<i>mask</i>	Enter a network mask in /prefix format (/x).
<i>any</i>	Enter the keyword <code>any</code> to specify that all traffic is subject to the filter.
<i>host ip-address</i>	Enter the keyword <code>host</code> then the IP address to specify a host IP address.
<i>destination</i>	Enter the IP address of the network or host to which the packets are sent.
<i>bit</i>	(OPTIONAL) For the TCP protocol type only, enter one or a combination of the following TCP flags: <ul style="list-style-type: none"> • <code>ack</code> = acknowledgement • <code>fin</code> = finish (no more data from the user) • <code>push</code> = push function • <code>rst</code> = reset the connection • <code>syn</code> = synchronize sequence number • <code>urg</code> = urgent field
<i>operator</i>	(OPTIONAL) For the TCP and UDP parameters only. Enter one of the following logical operand: <ul style="list-style-type: none"> • <code>eq</code> = equal to • <code>neq</code> = not equal to • <code>gt</code> = greater than • <code>lt</code> = less than • <code>range</code> = inclusive range of ports (you must specify two ports for the port command parameter.)
<i>source port</i>	Enter the keywords <code>source-port</code> then the port number to be matched in the ACL rule in the ICAP rule
<i>destination-port</i>	Enter the keywords <code>destination-port</code> then the port number to be matched in the ACL rule in the ICAP rule.
<i>source-port-range</i>	Enter the keywords <code>Source-port-range</code> then the range of the start port to end port to be matched in the ACL rule in the ICAP rule.

destination-port-range Enter the keywords `destination-port-range` then the range of the start port to end port to be matched in the ACL rule in the ICAP rule.

Defaults none

Command Modes REDIRECT-LIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for the track-id on the S4810, S4820T, S6000, S6000-ON, and Z9000.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

show cam pbr

Display the PBR CAM content.

Syntax `show cam pbr {interface interface | stack-unit slot-number port-set number [pipeline number]} [summary]`

Parameters

<i>interface</i> <i>interface</i>	Enter the keyword <code>interface</code> then the name of the interface.
<i>stack-unit</i> <i>number</i>	Enter the keyword <code>stack-unit</code> then the slot number.
<i>port-set</i> <i>number</i>	Enter the keywords <code>port-set</code> then the port-pipe number.
<i>summary</i>	Enter the keyword <code>summary</code> to view only the total number of CAM entries.

Defaults none

Command Modes EXEC

Command History

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information

The `show cam pbr` command displays the PBR CAM content.

Example

```
DellEMC# show cam pbr stack-unit 1 port-set 0
TCP Flag: Bit 5 - URG, Bit 4 - ACK, Bit 3 - PSH, Bit 2 - RST,
Bit 1 - SYN, Bit 0 - FIN
```

Cam Index	Port	VlanID	Proto	Tcp Flag	Src Port	Dst Port	SrcIp	DstIp	Next-hop MAC	Egress Port
00000	5	N/A	IP	0x0	0	0	22.22.2.22/32	33.33.3.0/24	00:01:e8:8a:fd:76	0/0
00001	5	N/A	145	0x0	0	0	0.0.0.0/0	44.4.4.4/32	00:01:e8:8a:fd:76	V1 100(0/1)
00002	5	N/A	TCP	0x0	0	0	55.1.3.0/24	66.6.6.6/32	00:01:e8:8a:fd:76	Po 128
00003	5	N/A	UDP	0x0	0	0	55.1.3.0/24	66.6.6.6/32	00:01:e8:8a:fd:76	Po 128
00004	5	N/A	IP	0x0	0	0	0.0.0.0/0	0.0.0.0/0	00:01:e8:8a:fd:76	V1 1020(Po 100)

```
DellEMC#
```

Related Commands

- [ip redirect-group](#) – applies a redirect group to an interface.
- [show ip redirect-list](#) – displays the redirect-list configuration.

show ip redirect-list

View the redirect list configuration and the interfaces it is applied to.

Syntax `show ip redirect-list redirect-list-name`

Parameters *redirect-list-name* Enter the name of a configured Redirect list.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Example

```
DellEMC# show ip redirect-list explicit_tunnel
IP redirect-list explicit_tunnel:
Defined as:
seq 5 redirect tunnel 1 track 1 tcp 155.55.2.0/24 222.22.2.0/24, Track 1
[up],
Next-hop reachable (via Te 1/32)
seq 10 redirect tunnel 1 track 1 tcp any any, Track 1 [up], Next-hop
reachable
(via Te 1/32)
```

```
seq 15 redirect tunnel 2 udp 155.55.0.0/16 host 144.144.144.144, Track 1
[up],
  Next-hop reachable (via Te 1/32)
seq 35 redirect 155.1.1.2 track 5 ip 7.7.7.0/24 8.8.8.0/24, Track 5 [up],
  Next-hop reachable (via Po 5)
seq 30 redirect 155.1.1.2 track 6 icmp host 8.8.8.8 any, Track 5 [up],
  Next-hop reachable (via Po 5)
seq 35 redirect 42.1.1.2 icmp host 8.8.8.8 any, Next-hop reachable
(via Vl 20)
seq 40 redirect 43.1.1.2 tcp 155.55.2.0/24 222.22.2.0/24, Next-hop
reachable
(via Vl 30)
seq 45 redirect 31.1.1.2 track 200 ip 12.0.0.0 255.0.0.197 13.0.0.0
255.0.0.197,
Track 200 [up], Next-hop reachable (via Te 1/32)

, Track 200 [up], Next-hop reachable (via Vl 20)

, Track 200 [up], Next-hop reachable (via Po 5)

, Track 200 [up], Next-hop reachable (via Po 7)

, Track 200 [up], Next-hop reachable (via Te 2/18)

, Track 200 [up], Next-hop reachable (via Te 2/19)
DelleMC#
```

PIM-Sparse Mode (PIM-SM)

The protocol-independent multicast (PIM) commands are supported by the Dell EMC Networking operating software on the platform.

The following describes the IPv4 PIM-SM commands.

Topics:

- IPv4 PIM-Sparse Mode Commands
- `clear ip pim snooping tib`
- `clear ip pim tib`
- `clear ip pim rp-mapping`
- `debug ip pim`
- `ip pim bsr-border`
- `ip pim bsr-candidate`
- `ip pim dr-priority`
- `ip pim graceful-restart`
- `ip pim join-filter`
- `ip pim ingress-interface-map`
- `ip pim neighbor-filter`
- `ip pim query-interval`
- `ip pim register-filter`
- `ip pim rp-address`
- `ip pim rp-candidate`
- `ip pim snooping`
- `ip pim sparse-mode`
- `ip pim sparse-mode sg-expiry-timer`
- `ip pim ssm-range`
- `ip pim spt-threshold`
- `no ip pim snooping dr-flood`
- `show ip pim bsr-router`
- `show ip pim interface`
- `show ip pim neighbor`
- `show ip pim rp`
- `show ip pim snooping interface`
- `show ip pim snooping neighbor`
- `show ip pim snooping tib`
- `show ip pim ssm-range`
- `show ip pim summary`
- `show ip pim tib`
- `show running-config pim`

IPv4 PIM-Sparse Mode Commands

The following describes the IPv4 PIM-sparse mode (PIM-SM) commands.

clear ip pim snooping tib

Clear tree information discovered by PIM-SM snooping from the PIM database.

Syntax `clear ip pim snooping tib [vlan vlan-id] [group-address]`

Parameters

vlan *vlan-id* (OPTIONAL) Enter a VLAN ID to clear tree information base (TIB) information learned through PIM-SM snooping about a specified VLAN. The valid VLAN IDs are 1 to 4094.

group-address (OPTIONAL) Enter a multicast group address in dotted decimal format (A.B.C.D) to clear TIB information learned through PIM-SM snooping about a specified multicast group.

Command Modes EXEC Privilege

Command History

Version	Description
---------	-------------

8.4.1.1	Introduced on the E-Series ExaScale.
8.3.21.0	Introduced on the S5000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Related Commands [show ip pim snooping tib](#) – displays TIB information learned through PIM-SM snooping.

clear ip pim tib

Clear PIM tree information from the PIM database.

S5000

Syntax `clear ip pim [vrf vrf-name] tib [group]`

Parameters

vrf *vrf-name* (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

group (OPTIONAL) Enter the multicast group address in dotted decimal format (A.B.C.D).

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information

If you use this command on a local VLT node, all multicast routes from the local PIM TIB, the entire multicast route table, and all the entries in the data plane are deleted. The local VLT node sends a request to the peer VLT node to download multicast routes learned by the peer. Both local and synced routes are removed from the local VLT node multicast route table. The peer VLT node clears synced routes from the node.

If you use this command on a peer VLT node, only the synced routes are deleted from the multicast route table.

clear ip pim rp-mapping

The bootstrap router (BSR) feature uses this command to remove all or particular rendezvous point (RP) advertisement.

S5000

Syntax

```
clear ip pim [vrf vrf-name] rp-mapping [rp-address]
```

Parameters

<i>vrf vrf-name</i>	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure this setting on that VRF.  NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
<i>rp-address</i>	(OPTIONAL) Enter the RP address in dotted decimal format (A.B.C.D).

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information

This command re-applies the RP mapping logic for all the groups learnt by the node. Any stale information corresponding to the existing mapping configuration is updated. The existing BSR cache and the *,G's are deleted only if these entries are stale.

debug ip pim

View IP PIM debugging messages.

S5000

Syntax

```
debug ip pim [vrf vrf-name] [bsr | events | group | packet [in | out] | register | state | timer [assert | hello | joinprune | register]]
```

To disable PIM debugging, use the `no debug ip pim [vrf vrf-name]` command or use the `undebug all` to disable all debugging command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to view IP PIM debugging messages corresponding to that VRF.  NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
bsr	(OPTIONAL) Enter the keyword <code>bsr</code> to view PIM Candidate RP/BSR activities.
events	(OPTIONAL) Enter the keyword <code>group</code> to view PIM messages for a specific group.
group	(OPTIONAL) Enter the keyword <code>group</code> to view PIM messages for a specific group.
packet [in out]	(OPTIONAL) Enter the keyword <code>packet</code> to view PIM packets. Enter one of the optional parameters: <ul style="list-style-type: none"> <code>in</code>: to view incoming packets <code>out</code>: to view outgoing packets
register	(OPTIONAL) Enter the keyword <code>register</code> to view PIM register address in dotted decimal format (A.B.C.D).
state	(OPTIONAL) Enter the keyword <code>state</code> to view PIM state changes.
timer [assert hello joinprune register]	(OPTIONAL) Enter the keyword <code>timer</code> to view PIM timers. Enter one of the optional parameters: <ul style="list-style-type: none"> <code>assert</code>: to view the assertion timer <code>hello</code>: to view the PIM neighbor keepalive timer <code>joinprune</code>: to view the expiry timer (join/prune timer) <code>register</code>: to view the register suppression timer

Defaults Disabled.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

ip pim bsr-border

Define the border of PIM domain by filtering inbound and outbound PIM-BSR messages per interface.

Syntax `ip pim bsr-border`
 To return to the default value, use the `no ip pim bsr-border` command.

Defaults Disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information

This command is applied to the subsequent PIM-BSR. Existing BSR advertisements are cleaned up by time-out. To clean the candidate RP advertisements, use the `clear ip pim rp-mapping` command.

ip pim bsr-candidate

To join the Bootstrap election process, configure the PIM router.

S5000

Syntax

```
ip pim [vrf vrf-name] bsr-candidate interface [hash-mask-length] [priority]
```

To return to the default value, use the `no ip pim bsr-candidate [vrf vrf-name]` command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure the PIM router on a VRF.
interface	Enter the following keywords and slot/port or number information: <ul style="list-style-type: none"> For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383. For a Port Channel interface, enter the keywords <code>port-channel</code> then a number. For a VLAN, enter the keyword <code>vlan</code> then a number from 1 to 4094. For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
hash-mask-length	(OPTIONAL) Enter the hash mask length. The range is from zero (0) to 32. The default is 30 .
priority	(OPTIONAL) Enter the priority used in Bootstrap election process. The range is from zero (0) to 255. The default is zero (0) .

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
6.1.1.0	Added support for the VLAN interface.

ip pim dr-priority

Change the designated router (DR) priority for the interface.

Syntax	<code>ip pim dr-priority <i>priority-value</i></code> To remove the DR priority value assigned, use the <code>no ip pim dr-priority</code> command.
Parameters	<i>priority-value</i> Enter a number. Preference is given to larger/higher number. The range is from 0 to 4294967294. The default is 1.
Defaults	1
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series on port-channels and the S-Series.

Usage Information	The router with the largest value assigned to an interface becomes the designated router. If two interfaces contain the same designated router priority value, the interface with the largest interface IP address becomes the designated router.
--------------------------	---

ip pim graceful-restart

This feature permits configuration of non-stop forwarding (NSF or graceful restart) capability of a PIM router to its neighbors.

Syntax	<code>[ipv6] ip pim graceful-restart {helper-only nsf [restart-time stale-entry-time]}</code>	
Parameters	ipv6	Enter the keyword <code>ipv6</code> to enable graceful-restart for the IPv6 multicast routes.
	helper-only	Enter the keywords <code>helper-only</code> to configure as a receiver (helper) only by preserving the PIM status of a graceful restart PIM neighboring router.
	nsf	Enter the keyword <code>nsf</code> to configure the non-stop forwarding capability.
	restart-time	(OPTIONAL) Enter the keywords <code>restart-time</code> followed by the number of seconds estimated for the PIM speaker to restart. The range is 30 to 300 seconds. The default is 180 seconds .
	stale-entry-time	(OPTIONAL) Enter the keywords <code>stale-entry-time</code> followed by the number of seconds for which entries are kept alive after restart. The range is 30 to 300 seconds. The default is 60 seconds .
Defaults	as above	
Command Modes	CONFIGURATION	
Command History	Version	Description
	9.0(1.3)	Introduced on the S5000.
	8.2.1.0	Introduced on the E-Series ExaScale. Added the <code>ipv6</code> option for the E-Series.
	7.6.1.0	Introduced on the E-Series.
Usage Information	When an NSF-capable router comes up, it announces the graceful restart capability and restart duration as a <code>Hello</code> option. The receiving router notes the <code>Hello</code> option. Routers not NSF-capable discard the unknown <code>Hello</code> option and adjacency is not affected.	
	When an NSF-capable router goes down, the neighboring PIM speaker preserves the states and continues the forwarding of multicast traffic while the neighbor router restarts.	

ip pim join-filter

Permit or deny PIM Join/Prune messages on an interface using an extended IP access list. This command prevents the PIM-SM router from creating state based on multicast source and/or group.

Syntax	<code>ip pim [vrf vrf-name] join-filter ext-access-list [in out]</code> To remove the access list, use the <code>no ip pim [vrf vrf-name] join-filter ext-access-list</code> command.	
Parameters	vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to permit or deny PIM join or prune messages on an interface associated with that VRF.
	ext-access-list	Enter the name of an extended access list.
Defaults	none	
Command Modes	INTERFACE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Removed the in and out parameters. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series for the port-channels and the S-Series.
7.7.1.0	Introduced on the E-Series.

Usage Information

When you configure a join filter, it is applicable for both ingress and egress flows. There is no option to specify in or out parameters while configuring a join filter.

Example

```
DellEMC(conf)# ip access-list extended iptv-channels
DellEMC(config-ext-nacl)# permit ip 10.1.2.3/24 225.1.1.0/24
DellEMC(config-ext-nacl)# permit ip any 232.1.1.0/24
DellEMC(config-ext-nacl)# permit ip 100.1.1.0/16 any
DellEMC(config-if-te-1/1)# ip pim join-filter iptv-channels
DellEMC(config-if-te-1/1)# ip pim join-filter iptv-channels
```

Related Commands

- [ip access-list extended](#) — configure an access list based on IP addresses or protocols.

ip pim ingress-interface-map

When the Dell EMC Networking system is the RP, statically map potential incoming interfaces to (*,G) entries to create a lossless multicast forwarding environment.

Syntax `ip pim ingress-interface-map std-access-list`

Parameters `std-access-list` Enter the name of a standard access list.

Defaults none

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced

Example

```
DelleMC(conf)# ip access-list standard map1
DelleMC(config-std-nacl)# permit 224.0.0.1/24
DelleMC(config-std-nacl)# exit
DelleMC(conf)# int tengig 1/1
DelleMC(config-if-te-1/1)# ip pim ingress-interface-map map1
DelleMC(config-if-te-1/1)#
```

ip pim neighbor-filter

To prevent a router from participating in protocol independent multicast (PIM), configure this feature.

S5000

Syntax

```
ip pim [vrf vrf-name] neighbor-filter {access-list}
```

To remove the restriction, use the `no ip pim [vrf vrf-name] neighbor-filter {access-list}` command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to prevent that VRF from participating in PIM.  NOTE: Applies to specific VRF if input is provided, else applies to default VRF.
access-list	Enter the name of a standard access list. Maximum 16 characters.

Defaults

none

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series and S-Series.
7.6.1.0	Introduced on the E-Series.

Usage Information

Do not enter this command before creating the access-list.

ip pim query-interval

Change the frequency of PIM Router-Query messages.

Syntax `ip pim query-interval seconds`
 To return to the default value, use the `no ip pim query-interval seconds` command.

Parameters `seconds` Enter a number as the number of seconds between router query messages. The range is from 0 to 65535. The default is **30 seconds**.

Defaults **30 seconds**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series for the port-channels and the S-Series.

ip pim register-filter

To prevent a PIM source DR from sending register packets to an RP for the specified multicast source and group, use this feature.

S5000

Syntax `ip pim [vrf vrf-name] register-filter access-list`

To return to the default, use the `no ip pim [vrf vrf-name] register-filter access-list` command.

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

access-list Enter the name of an extended access list. Maximum 16 characters.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.
7.6.1.0	Introduced

Usage Information The access name is an extended IP access list that denies PIM register packets to RP at the source DR based on the multicast and group addresses. Do not enter this command before creating the access-list.

ip pim rp-address

Configure a static PIM rendezvous point (RP) address for a group or access-list.

S5000

Syntax `ip pim [vrf vrf-name] rp-address address {group-address group-address mask} [override]`

To remove an RP address, use the `no ip pim [vrf vrf-name] rp-address address {group-address group-address mask} [override]` command.

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF.
 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.
- address** Enter the RP address in dotted decimal format (A.B.C.D).
- group-address group-address mask** Enter the keywords `group-address` then a group-address mask, in dotted decimal format (/xx), to assign that group address to the RP.
- override** Enter the keyword `override` to override the BSR updates with static RP. The override takes effect immediately during enable/disable.
 **NOTE:** This option is applicable to multicast group range.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information

First-hop routers use this address by to send register packets on behalf of source multicast hosts. The RP addresses are stored in the order in which they are entered. The RP is chosen based on a longer prefix match for a group. The RP selection does not depend on dynamic or static RP assignments.

ip pim rp-candidate

Configure a PIM router to send out a Candidate-RP-Advertisement message to the bootstrap (BS) router or define group prefixes that are defined with the RP address to PIM BSR.

Syntax `ip pim [vrf vrf-name] rp-candidate {interface [priority] [acl-name]}`

To return to the default value, use the `no ip pim [vrf vrf-name] rp-candidate {interface [priority]}` command.

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF.
 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.
- interface** Enter the following keywords and slot/port or number information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.
 - For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.
- priority** (OPTIONAL) Enter the priority used in Bootstrap election process. The range is zero (0) to 255. The default is **192**.
- acl-name** (OPTIONAL) Enter the name of an ACL to configure a PIM router to act as an RP for a specific set of multicast group addresses that are defined in the ACL.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced the <code>acl-name</code> parameter.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
pre- 6.1.1.1	Introduced on the E-Series.

Usage Information Priority is stored at BSR router when receiving a Candidate-RP-Advertisement.

ip pim snooping

Enable PIM-SM snooping globally on a switch or on a VLAN interface.

- Syntax** `ip pim snooping [enable]`
To disable PIM-SM snooping, use the `no ip pim snooping [enable]` command.
- Defaults** Disabled.
- Command Modes**
- **CONFIGURATION:** To configure PIM-SM snooping globally, enter the `ip pim snooping enable` command in global configuration mode.
 - **VLAN INTERFACE:** To configure PIM-SM snooping on a VLAN interface, enter the `ip pim snooping` command in VLAN interface configuration mode.

Command History	Version	Description
	9.0(1.3)	Introduced on the S5000.
	8.3.12.0	Introduced on the S4810.
	8.4.1.1	Introduced on the E-Series ExaScale.

Usage Information

Because PIM-SM snooping is used in a Layer 2 environment, PIM-SM snooping and PIM multicast routing are mutually exclusive. PIM-SM snooping cannot be enabled on a switch/router if PIM-SM or PIM-DM is enabled.

If enabled at the global level, PIM-SM snooping is automatically enabled on all VLANs unless the `no ip pim snooping` command has been entered on a VLAN.

If enabled at the VLAN level, PIM-SM snooping requires that you also enter the `no shutdown` command to enable the interface.

PIM-SM snooping is supported with IGMP snooping, and forwards the IGMP report on the port that connects to the PIM DR. Dell Force10 recommends that you do not enable IGMP snooping on a PIM-SM snooping-enabled VLAN interface unless until it is necessary for VLAN operation.

PIM-SM snooping listens to PIM hello and PIM-SM join and prune messages while maintaining the VLAN- and port-specific information in multicast packets that are snooped.

To display information about the operation of PIM-SM snooping on a switch, enter the `show ip pim summary` command.

Related Commands [show ip pim snooping tib](#) – displays TIB information learned through PIM-SM snooping.

ip pim sparse-mode

Enable PIM sparse mode and IGMP on the interface.

- Syntax** `ip pim sparse-mode`
To disable PIM sparse mode and IGMP, use the `no ip pim sparse-mode` command.
- Defaults** Disabled.
- Command Modes** INTERFACE
- Command History** This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series for the port-channels and the S-Series.

Usage Information

The interface must be enabled (the `no shutdown` command) and not have the `switchport` command configured. Multicast must also be enabled globally (using the `ip multicast-lag-hashing` command). PIM is supported on the port-channel interface.

ip pim sparse-mode sg-expiry-timer

Enable expiry timers globally for all sources.

S5000

Syntax

```
ip pim [vrf vrf-name] sparse-mode sg-expiry-timer seconds [access-list-name]
```

To disable configured timers and return to default mode, use the `no ip pim [vrf vrf-name] sparse-mode sg-expiry-timer` command.

Parameters

vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to enable expiry timer for all sources on that VRF.  NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
seconds	Enter the number of seconds the S, G entries are retained. The range is from 211 to 65535.
access-list-name	(OPTIONAL) Enter the name of a previously configured Extended ACL to enable the expiry time to specified S,G entries.

Defaults

Disabled. The default expiry timer (with no times configured) is 210 sec.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Removed the <code>acl-access-list</code> parameter. Modified the max value of S, G entry second range from 86400 to 65535. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the C-Series for the port-channels and the S-Series.
7.7.1.1	Introduced

Usage Information

This command configures an expiration timer for all S.G entries, unless they are assigned to an Extended ACL.

Even though the FHR nodes act as RPs, these nodes still send *Register encap* messages to themselves and expect to receive a *Register stop* message (for Anycast RP support). As a result, if the DLT timer expires, SG is not deleted until the register state is deleted in the node. This register state expires 210 seconds after the last Null register is received.

ip pim ssm-range

Specify the SSM group range using an access list.

Syntax `ip pim [vrf vrf-name] ssm-range {access_list_name}`

Parameters

- vrf vrf-name** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to specify the SSM group range for that VRF.
 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.
- access_list_name** Enter the name of the access list.

Defaults Default SSM range is 232/8 and ff3x/32

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for VRF on S6000, S4810, S4820T, Z9000, Z9500, and S6000-ON.
9.7(0.0)	Added support for VRF.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS supports standard access lists for the SSM range. You cannot use extended ACLs for configuring the SSM range. If you configure an extended ACL and then used in the `ip pim ssm-range {access list name}` configuration, an error is reported.

However, if you configure `ip pim ssm-range {access list name}` first and then you configure the ACL as an Extended ACL, an error is not reported and the ACL is not applied to the SSM range.

Dell EMC Networking OS-recommended best-practices are to configure the standard ACL, and then apply the ACL to the SSM range. After the SSM range is applied, the changes are applied internally without requiring clearing of the tree information base (TIB).

When the ACL rules change, the ACL and protocol-independent multicast (PIM) modules apply the new rules automatically.

When you configure the SSM range, Dell EMC Networking OS supports SSM for configured group range as well as the default SSM range.

When you remove the SSM ACL, PIM SSM is supported for the default SSM range only.

ip pim spt-threshold

To switch to the shortest path tree when the traffic reaches the specified threshold value, configure the PIM router.

S5000

Syntax

```
ip pim [vrf vrf-name] spt-threshold [value | infinity]
```

To return to the default value, use the `no ip pim [vrf vrf-name] spt-threshold [infinity]` command.

Parameters

value	(OPTIONAL) Enter the traffic value in kilobits per second. The default is 10 packets per second . A value of zero (0) causes a switchover on the first packet.
vrf vrf-name	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure the PIM router on that VRF.
	 NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.
infinity	(OPTIONAL) Enter the keyword <code>infinity</code> to never switch to the source-tree.

Defaults

Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.

Usage Information This command is applicable to last hop routers on the shared tree towards the rendezvous point (RP).

no ip pim snooping dr-flood

Disable the flooding of multicast packets to the PIM designated router.

Syntax `no ip pim snooping dr-flood`
To re-enable the flooding of multicast packets to the PIM designated router, use the `ip pim snooping dr-flood` command.

Defaults Enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.0	Introduced on the E-Series.

Usage Information By default, when you enable PIM-SM snooping, a switch floods all multicast traffic to the PIM designated router (DR), including unnecessary multicast packets. To minimize the traffic sent over the network to the designated router, you can disable `designated-router flooding`.

When designated-router flooding is disabled, PIM-SM snooping only forwards the multicast traffic, which belongs to a multicast group for which the switch receives a join request, on the port connected towards the designated router.

If the PIM DR flood is not disabled (default setting):

- Multicast traffic is transmitted on the egress port towards the PIM DR if the port is not the incoming interface.
- Multicast traffic for an unknown group is sent on the port towards the PIM DR. When DR flooding is disabled, multicast traffic for an unknown group is dropped.

show ip pim bsr-router

View information on the Bootstrap router.

S5000

Syntax `show ip pim [vrf vrf-name] bsr-router`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Example

```
DellEMC# show ip pim bsr-router
PIMv2 Bootstrap information
This system is the Bootstrap Router (v2)
  BSR address: 7.7.7.7 (?)
  BSR Priority: 0, Hash mask length: 30
```

```
Next bootstrap message in 00:00:08

This system is a candidate BSR
Candidate BSR address: 7.7.7.7, priority: 0, hash mask length: 30
DellEMC#
```

show ip pim interface

View information on the interfaces with IP PIM enabled.

S5000

Syntax `show ip pim [vrf vrf-name] interface`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on this VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information The following describes the `show ip pim interface` command shown in the following example.

Field	Description
Address	Lists the IP addresses of the interfaces participating in PIM.
Interface	List the interface type, with either slot/port information or ID (VLAN or Port Channel), of the interfaces participating in PIM.
Ver/Mode	Displays the PIM version number and mode for each interface participating in PIM:

Field	Description
	<ul style="list-style-type: none"> v2 = PIM version 2 S = PIM Sparse mode
Nbr Count	Displays the number of PIM neighbors discovered over this interface.
Query Intvl	Displays the query interval for Router Query messages on that interface (configured with <code>ip pim query-interval</code> command).
DR Prio	Displays the Designated Router priority value configured on the interface (use the <code>ip pim dr-priority</code> command).
DR	Displays the IP address of the Designated Router for that interface.

The `show ip pim interface` command does not display information corresponding to the loop-back interfaces.

Example

```
DellEMC# show ip pim interface
Address          Interface  Ver/  Nbr   Query  DR      DR
                Mode      Mode Count Intvl  Prio
165.87.34.5     Te 1/10   v2/S  0     30     1       165.87.34.5
10.1.1.2        Vl 10     v2/S  1     30     1       10.1.1.2
20.1.1.5        Vl 20     v2/S  1     30     1       20.1.1.5
165.87.31.200   Vl 30     v2/S  1     30     1       165.87.31.201
DellEMC#
```

show ip pim neighbor

View PIM neighbors.

S5000

Syntax `show ip pim [vrf vrf-name] neighbor`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information

The following describes the `show ip pim neighbor` command shown in the following example.

Field	Description
Neighbor address	Displays the IP address of the PIM neighbor.
Interface	List the interface type, with either slot/port information or ID (VLAN or Port Channel), on which the PIM neighbor was found.
Uptime/expires	Displays the amount of time the neighbor has been up then the amount of time until the neighbor is removed from the multicast routing table (that is, until the neighbor hold time expires).
Ver	Displays the PIM version number. <ul style="list-style-type: none"> v2 = PIM version 2
DR prio/Mode	Displays the Designated Router priority and the mode. <ul style="list-style-type: none"> 1 = default Designated Router priority (use the <code>ip pim dr-priority</code> command) DR = Designated Router S = Sparse mode

Example

```
DelleMC# show ip pim neighbor
Neighbor   Interface  Uptime/Expires   Ver   DR
Address
127.87.3.4 Te 1/16      09:44:58/00:01:24 v2    1 / S
DelleMC#
```

show ip pim rp

View all multicast groups-to-RP mappings.

S5000

Syntax `show ip pim [vrf vrf-name] rp [mapping | group-address]`

Parameters

- vrf *vrf-name*** (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.
- mapping** (OPTIONAL) Enter the keyword `mapping` to display the multicast groups-to-RP mapping and information on how RP is learnt.
- group-address** (OPTIONAL) Enter the multicast group address mask in dotted decimal format to view RP for a specific group.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Example

```
DellEMC# show ip pim rp
Group          RP
224.2.197.115  165.87.20.4
224.2.217.146  165.87.20.4
224.3.3.3      165.87.20.4
225.1.2.1     165.87.20.4
225.1.2.2     165.87.20.4
229.1.2.1     165.87.20.4
229.1.2.2     165.87.20.4
DellEMC#
```

Example (Mapping)

```
DellEMC# show ip pim rp mapping
PIM Group-to-RP Mappings
Group(s): 224.0.0.0/4, Static
  RP: 50.40.4.4, v2
DellEMC#
```

Example (Address)

```
DellEMC# show ip pim rp 229.1.2.1
Group          RP
229.1.2.1     165.87.20.4
DellEMC#
```

show ip pim snooping interface

Display information on VLAN interfaces with PIM-SM snooping enabled.

Syntax `show ip pim snooping interface [vlan vlan-id]`

Parameters `vlan vlan-id` (OPTIONAL) Enter a VLAN ID to display information about a specified VLAN configured for PIM-SM snooping. The valid VLAN IDs range is from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip pim snooping interface` commands shown in the following example.

Field	Description
Interface	Displays the VLAN interfaces with PIM-SM snooping enabled.
Ver/Mode	Displays the PIM version number for each VLAN interface with PIM-SM snooping enabled: <ul style="list-style-type: none">v2 = PIM version 2S = PIM Sparse mode
Nbr Count	Displays the number of neighbors learned through PIM-SM snooping on the interface.
DR Prio	Displays the Designated Router priority value configured on the interface (<code>ip pim dr-priority</code> command).
DR	Displays the IP address of the Designated Router for that interface.

Example (#2)

```
DelleMC# show ip pim snooping interface
Interface Ver Nbr DR DR
          Count Prio
Vlan 2    v2  3   1  165.87.32.2
DelleMC#
```

show ip pim snooping neighbor

Display information on PIM neighbors learned through PIM-SM snooping.

Syntax

```
show ip pim snooping neighbor [vlan vlan-id]
```

Parameters

vlan *vlan-id* (OPTIONAL) Enter a VLAN ID to display information about PIM neighbors that PIM-SM snooping discovered on a specified VLAN. The valid VLAN IDs range is from 1 to 4094.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip pim snooping neighbor` commands shown in the following example.

Field	Description
Neighbor address	Displays the IP address of the neighbor learned through PIM-SM snooping.
Interface	Displays the VLAN ID number and slot/port on which the PIM-SM-enabled neighbor was discovered.
Uptime/expires	Displays the amount of time the neighbor has been up then the amount of time until the neighbor is removed from the multicast routing table (that is, until the neighbor hold time expires).
Ver	Displays the PIM version number: <ul style="list-style-type: none"> v2 = PIM version 2
DR prio/Mode	Displays the Designated Router priority and the mode: <ul style="list-style-type: none"> 1 = default Designated Router priority (use the <code>ip pim dr-priority</code> command) DR = Designated Router S = Sparse mode

Example

```
DelleMC# show ip pim snooping neighbor

Neighbor      Interface          Uptime/Expires    Ver  DR Prio
Address
165.87.32.2   V1 2 [Te 1/13 ]    00:04:03/00:01:42 v2   1
165.87.32.10 V1 2 [Te 1/11 ]    00:00:46/00:01:29 v2   0
165.87.32.12 V1 2 [Te 2/20 ]    00:00:51/00:01:24 v2   0
```

show ip pim snooping tib

Display information from the tree information base (TIB) PIM-SM snooping discovered about multicast group members and states.

Syntax

```
show ip pim snooping tib [vlan vlan-id] [group-address [source-address]]
```

Parameters

vlan <i>vlan-id</i>	(OPTIONAL) Enter a VLAN ID to display TIB information PIM-SM snooping discovered on a specified VLAN. The valid VLAN IDs range is from 1 to 4094.
<i>group-address</i>	(OPTIONAL) Enter the group address in dotted decimal format (A.B.C.D) to display TIB information PIM-SM snooping discovered for a specified multicast group.
<i>source-address</i>	(OPTIONAL) Enter the source address in dotted decimal format (A.B.C.D) to display TIB information PIM-SM snooping discovered for a specified multicast source.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show ip pim snooping tib` commands shown in the following example.

Field	Description
(S, G)	Displays the entry in the PIM multicast snooping database.
uptime	Displays the amount of time the entry has been in the PIM multicast route table.
expires	Displays the amount of time until the entry expires and is removed from the database.
RP	Displays the IP address of the RP/source for this entry.
flags	List the flags to define the entries: <ul style="list-style-type: none"> • S = PIM Sparse Mode • C = directly connected • L = local to the multicast group • P = route was pruned • R = the forwarding entry is pointing toward the RP • F = Dell EMC Networking OS is registering this entry for a multicast source • T = packets were received via Shortest Tree Path • J = first packet from the last hop router is received and the entry is ready to switch to SPT • K=acknowledge pending state
Incoming interface	Displays the reverse path forwarding (RPF) interface towards the RP/ source.
RPF neighbor	Displays the next hop from this interface towards the RP/source.
Outgoing interface list:	Lists the interfaces that meet one of the following criteria: <ul style="list-style-type: none"> • a directly connect member of the Group • statically configured member of the Group • received a (*,G) Join message

Example

```
DelleMC# show ip pim snooping tib

PIM Multicast Snooping Table
Flags: J/P - (*,G) Join/Prune, j/p - (S,G) Join/Prune
      SGR-P - (S,G,R) Prune
Timers: Uptime/Expires
* : Inherited port

(*, 225.1.2.1), uptime 00:00:01, expires 00:02:59, RP 165.87.70.1,
flags: J
  Incoming interface: Vlan 2, RPF neighbor 0.0.0.0
  Outgoing interface list:
    TenGigabitEthernet 2/11 RPF 165.87.32.2 00:00:01/00:02:59
    TenGigabitEthernet 2/13 Upstream Port -/-

DelleMC# show ip pim snooping tib vlan 2 225.1.2.1 165.87.1.7

PIM Multicast Snooping Table
Flags: J/P - (*,G) Join/Prune, j/p - (S,G) Join/Prune
      SGR-P - (S,G,R) Prune
```

```

Timers: Uptime/Expires
* : Inherited port

(165.87.1.7, 225.1.2.1), uptime 00:00:08, expires 00:02:52, flags: j
Incoming interface: Vlan 2, RPF neighbor 0.0.0.0
Outgoing interface list:
TenGigabitEthernet 2/11 Upstream Port -/-
TenGigabitEthernet 2/13 DR Port -/-
TenGigabitEthernet 2/20 RPF 165.87.32.10 00:00:08/00:02:52

```

show ip pim ssm-range

Display the non-default groups added using the SSM range feature.

S5000

Syntax	show ip pim [<i>vrf vrf-name</i>] ssm-range	
Parameters	vrf <i>vrf-name</i>	(OPTIONAL) Enter the keyword <i>vrf</i> followed by the name of the VRF to configure this setting on that VRF.
Defaults	none	
Command Modes	<ul style="list-style-type: none"> EXEC EXEC Privilege 	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for VRF on S6000, S4810, S4820T, Z9000, Z9500, and S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Example

```
Group Address / MaskLen
```

show ip pim summary

View information about PIM-SM operation.

S5000

Syntax `show ip pim [vrf vrf-name] summary`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.1	Support for the display of PIM-SM snooping status was added on E-Series.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Example

```
DelleMC# show ip pim summary

PIM TIB version 495
Uptime 22:44:52
Entries in PIM-TIB/MFC : 2/2

Active Modes :
    PIM-SNOOPING

Interface summary:
    1 active PIM interface
    0 passive PIM interfaces
    3 active PIM neighbors

TIB summary:
    1/1 (*,G) entries in PIM-TIB/MFC
    1/1 (S,G) entries in PIM-TIB/MFC
    0/0 (S,G,Rpt) entries in PIM-TIB/MFC
```

```

    0 PIM nexthops
    0 RPs
    0 sources
    0 Register states

Message summary:
  2582/2583 Joins sent/received
  5/0 Prunes sent/received
  0/0 Candidate-RP advertisements sent/received
  0/0 BSR messages sent/received
  0/0 State-Refresh messages sent/received
  0/0 MSDP updates sent/received
  0/0 Null Register messages sent/received
  0/0 Register-stop messages sent/received

Data path event summary:
  0 no-cache messages received
  0 last-hop switchover messages received
  0/0 pim-assert messages sent/received
  0/0 register messages sent/received
DellEMC#

```

show ip pim tib

View the PIM tree information base (TIB).

S5000

Syntax	<code>show ip pim [vrf vrf-name] tib [group-address [source-address]]</code>
Parameters	<p>vrf vrf-name (OPTIONAL) Enter the keyword <code>vrf</code> followed by the name of the VRF to configure this setting on that VRF.</p> <p> NOTE: Applies to specific VRF if input is provided, else applies to Default VRF.</p> <p>group-address (OPTIONAL) Enter the group address in dotted decimal format (A.B.C.D).</p> <p>source-address (OPTIONAL) Enter the source address in dotted decimal format (A.B.C.D).</p>
Command Modes	<ul style="list-style-type: none"> • EXEC • EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.

Usage Information

The following describes the `show ip pim tib` command shown in the following example.

Field	Description
(S, G)	Displays the entry in the multicast PIM database.
uptime	Displays the amount of time the entry has been in the PIM route table.
expires	Displays the amount of time until the entry expires and is removed from the database.
RP	Displays the IP address of the RP/source for this entry.
flags	List the flags to define the entries: <ul style="list-style-type: none"> • D = PIM Dense Mode • S = PIM Sparse Mode • C = directly connected • L = local to the multicast group • P = route was pruned • R = the forwarding entry is pointing toward the RP • F = Dell EMC Networking OS is registering this entry for a multicast source • T = packets were received via Shortest Tree Path • J = first packet from the last hop router is received and the entry is ready to switch to SPT • K = acknowledge pending state
Incoming interface	Displays the reverse path forwarding (RPF) interface towards the RP/ source.
RPF neighbor	Displays the next hop from this interface towards the RP/source.
Outgoing interface list:	Lists the interfaces that meet one of the following criteria: <ul style="list-style-type: none"> • a directly connect member of the Group • statically configured member of the Group • received a (*,G) Join message

Example

```
DellEMC# do show ip pim tib

PIM Multicast Routing Table
Flags: D - Dense, S - Sparse, C - Connected, L - Local, P - Pruned,
      R - RP-bit set, F - Register flag, T - SPT-bit set, J - Join SPT,
      M - MSDP created entry, A - Candidate for MSDP Advertisement
      K - Ack-Pending State
Timers: Uptime/Expires
Interface state: Interface, next-Hop, State/Mode

(*, 225.1.1.1), uptime 00:40:16, expires 00:00:00, RP 20.40.4.4, flags:
SCJ
  Incoming interface: Vlan 2007, RPF neighbor 20.30.124.4
  Outgoing interface list:
    Vlan 2006 Forward/Sparse 00:06:21/Never

(20.10.4.9, 225.1.1.1), uptime 00:06:21, expires 00:02:06, flags: CT
  Incoming interface: Vlan 2007, RPF neighbor 20.30.124.4
  Outgoing interface list:
    Vlan 2006 Forward/Sparse 00:06:21/Never
```

```
(*, 225.1.1.2), uptime 00:40:15, expires 00:00:00, RP 20.40.4.4, flags:
SCJ
  Incoming interface: Vlan 2007, RPF neighbor 20.30.124.4
  Outgoing interface list:
    Vlan 2006 Forward/Sparse 00:06:21/Never

(20.10.4.9, 225.1.1.2), uptime 00:06:21, expires 00:02:06, flags: CT
  Incoming interface: Vlan 2007, RPF neighbor 20.30.124.4
  Outgoing interface list:
    Vlan 2006 Forward/Sparse 00:06:21/Never
DellEMC#
```

show running-config pim

Display the current configuration of PIM-SM snooping.

Syntax `show running-config pim`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Introduced on the E-Series.

Example

```
Dell# show running-config pim
!
ip pim snooping enable
Dell#
```

PIM-Source Specific Mode (PIM-SSM)

The protocol-independent multicast source-specific mode (PIM-SSM) commands in this section are supported in the Dell Networking operating system.

Topics:

- IPv4 PIM Commands
- IPv4 PIM-Source Specific Mode Commands
- `ip pim ssm-range`
- `show ip pim ssm-range`
- IPv6 PIM-Source Specific Mode Commands

IPv4 PIM Commands

The following commands apply to IPv4 PIM-SM, IPv4 PIM-SSM, and PIM-DM.

- `clear ip pim tib`
- `debug ip pim`
- `ip pim dr-priority`
- `ip pim neighbor-filter`
- `ip pim query-interval`
- `show ip pim interface`
- `show ip pim neighbor`
- `show ip pim tib`

IPv4 PIM-Source Specific Mode Commands

The following IPv4 PIM-source specific mode (PIM-SSM) commands are supported:

- `ip pim ssm-range`
- `show ip pim ssm-range`

ip pim ssm-range

Specify the SSM group range using an access list.

Syntax `ip pim [vrf vrf-name] ssm-range {access_list_name}`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to specify the SSM group range for that VRF.

 **NOTE:** Applies to specific VRF if input is provided, else applies to Default VRF.

`access_list_name` Enter the name of the access list.

Defaults Default SSM range is 232/8 and ff3x/32

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for VRF on S6000, S4810, S4820T, Z9000, Z9500, and S6000-ON.
9.7(0.0)	Added support for VRF.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS supports standard access lists for the SSM range. You cannot use extended ACLs for configuring the SSM range. If you configure an extended ACL and then used in the `ip pim ssm-range {access list name}` configuration, an error is reported.

However, if you configure `ip pim ssm-range {access list name}` first and then you configure the ACL as an Extended ACL, an error is not reported and the ACL is not applied to the SSM range.

Dell EMC Networking OS-recommended best-practices are to configure the standard ACL, and then apply the ACL to the SSM range. After the SSM range is applied, the changes are applied internally without requiring clearing of the tree information base (TIB).

When the ACL rules change, the ACL and protocol-independent multicast (PIM) modules apply the new rules automatically.

When you configure the SSM range, Dell EMC Networking OS supports SSM for configured group range as well as the default SSM range.

When you remove the SSM ACL, PIM SSM is supported for the default SSM range only.

show ip pim ssm-range

Display the non-default groups added using the SSM range feature.

S5000

Syntax `show ip pim [vrf vrf-name] ssm-range`

Parameters `vrf vrf-name` (OPTIONAL) Enter the keyword `vrf` followed by the name of the VRF to configure this setting on that VRF.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON. Added support for VRF on S6000, S4810, S4820T, Z9000, Z9500, and S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.5.1.0	Introduced on the E-Series.

Example

```
Group Address / MaskLen
```

IPv6 PIM-Source Specific Mode Commands

This section describes the IPv6 PIM-SSM commands.

Port Monitoring

The port monitoring feature allows you to monitor network traffic by forwarding a copy of each incoming or outgoing packet from one port to another port.

Important Points to Remember

- Port monitoring is supported on physical ports and logical interfaces, such as port channels and virtual local area networks (VLANs).
- The monitoring (destination, “MG”) and monitored (source, “MD”) ports must be on the same switch.
- In general, a monitoring port should have `no ip address` and `no shutdown` as the only configuration; Dell EMC Networking OS permits a limited set of commands for monitoring ports; display them using the `?` command. A monitoring port also may not be a member of a VLAN.
- A total of 4 MG may be configured in a single port-pipe.
- MG and MD ports can be reside anywhere across a port-pipe.
- The Dell EMC Networking OS supports multiple source ports to be monitored by a single destination port in one monitor session.
- One monitor session can have only one MG port.

 **NOTE:** The monitoring port should not be a part of any other configuration.

Topics:

- [description](#)
- [erpm](#)
- [monitor session](#)
- [rate-limit](#)
- [show config](#)
- [show monitor session](#)
- [show running-config monitor session](#)
- [source \(port monitoring\)](#)

description

Enter a description of this monitoring session.

Syntax `description {description}`

To remove the description, use the `no description {description}` command.

Parameters **description** Enter a description regarding this session (80 characters maximum).

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-7.7.1.0	Introduced on the E-Series.

Related Commands

- [monitor session](#) — enables a monitoring session.

erpm

Configure the source and destination IP address for ERPM traffic.

Syntax `erpm source-ip ip-address dest-ip ip-address [gre-protocol value]`
 To remove the configuration, use the `no erpm source-ip IP-address dest-ip IP-address [gre-protocol value]` command.

Parameters

source-ip <i>ip-address</i>	Enter the keywords <code>source-ip</code> then the source IP address in dotted decimal format.
destination-ip <i>ip-address</i>	Enter the keywords <code>dest-ip</code> then the destination IP address in dotted decimal format.
gre-protocol <i>value</i>	(OPTIONAL) Enter the keywords <code>gre-protocol</code> then the protocol type value for ERPM type monitor session. The range is from 1 to 65535.

Command Modes MONITOR SESSION (conf-mon- sess-session-ID)

Example

```
DellEMC(conf-mon-sess-10)#erpm source-ip 10.10.10.1 dest-ip 5.1.1.2 gre-protocol 1111
```

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.11(0.0)	Introduced GRE protocol support.

monitor session

Create a session for monitoring traffic with port monitoring.

Syntax `monitor session session-ID [type { rpm | erpm [set ip dscp dscp_value | set ip ttl ttl_value]}}] [drop]`

To delete a session, use the `no monitor session session-ID` command.

To delete all monitor sessions, use the `no monitor session all` command.

Parameters	session-ID	Enter a session identification number. The range is from 0 to 65535.
	type	Specifies one of the following type: <ul style="list-style-type: none">• rpm• erpm
	rpm	Creates a remote port monitoring (rpm) session.
	erpm	Creates an encapsulated remote port monitoring (erpm) session.
	set ip dscp	Configures the Differentiated Services Code Point (DSCP) value of the packets in the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic. To revert to the default value, use the no form of this command.
	dscp_value	DSCP value of the packets in the ERSPAN traffic. The range is from 0 to 63. The default value is 0.
	set ip ttl	Configures the IP time-to-live (TTL) value of the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic. To revert to the default configuration, use the no form of this command.
	ttl_value	IP TTL value of the ERSPAN traffic. The range is from 1 to 255. The default value is 255.
	drop	Monitors only the dropped packets in the Ingress.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the drop parameter.
9.7(0.0)	Introduced on the S6000-ON. Introduced the <code>set ip dscp</code> and <code>set ip ttl</code> parameters.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.
9.0.2.0	Introduced on the S6000.
9.0.2.0	Introduced on the MXL.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.

Usage Information

The `monitor` command is saved in the running configuration at Monitor Session mode level and can be restored after a chassis reload.

Example

```
DellEMC# show monitor session
  SessID Source      Destination      Dir  Mode  Source IP      Dest IP
DSCP  TTL
-----
0      Te 1/12           remote-ip       rx   Flow  1.1.1.1      7.1.1.2        0
255
0      Po 1              remote-ip       tx   Flow  1.1.1.1      7.1.1.2        0
255
1      Vl 11            remote-ip       rx   Flow  5.1.1.1      3.1.1.2        0
255
```

Related Command

- [show monitor session](#) — displays the monitor session.
- [show running-config monitor session](#) — displays the running configuration of a monitor session.

rate-limit

Configure the rate-limit to limit the mirrored packets.

Syntax `rate-limit limit`
 To remove the limit, use the `no rate-limit limit` command.

Parameters **limit** Enter the rate-limit value. The range is from 0 to 40000 Megabits per second.

Defaults 60

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9500.

Related Commands

- [monitor session](#) — enable a monitoring session.
- [show monitor session](#) — display the monitor session.

show config

Display the current monitor session configuration.

Syntax `show config`

Defaults none

Command Modes MONITOR SESSION (conf-mon-sess-session-ID)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DellEMC(conf-mon-sess-1)# show config
!
monitor session 1
 source TenGigabitEthernet 1/1 destination Port-channel 1 direction rx
```

show monitor session

Display information about monitoring sessions.

Syntax `show monitor session {session-ID} [access-list]`

To display monitoring information for all sessions, use the `show monitor session` command.

Parameters

<i>session-ID</i>	(OPTIONAL) Enter a session identification number. The range is from 0 to 65535.
[access-list]	(OPTIONAL) Enter the <code>access-list</code> keyword to display the ACLs applied to monitor sessions.

Defaults none

Command Modes

- EXEC
- as
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>access-list</code> optional keyword to display the ACLs applied to monitor sessions on the S6000, S6100-ON and Z9100-ON.
9.11(0.0)	Introduced the support for GRE Protocol and FC Monitor in the command output.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4.0.0	Added support for the RPM / ERPM.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DelleMC# show monitor session 1
SessID Source          Destination          Dir Mode Source IP
Dest IP          DSCP  TTL  Drop  Rate  Gre-Protocol FcMonitor
-----
1 Te 1/2          remote-ip          rx Port 0.0.0.0
0.0.0.0          0      0    No    N/A    N/A       yes
DelleMC#

DelleMC# show monitor session
SessID Source          Destination          Dir Mode Source IP
Dest IP          DSCP  TTL  Drop  Rate  Gre-Protocol FcMonitor
-----
1 Te 1/2          remote-ip          rx Port 0.0.0.0
0.0.0.0          0      0    No    N/A    N/A       yes
DelleMC#
```

The following is an example output of the `show monitor session access-list` command.

```
DelleMC# show monitor session 13 access-list
Monitor session - 13
Interface          Mirror-access-list          Direction
-----
Te 1/1              mtACL                      in
Te 1/1              mtACL                      out
Te 1/2              mtACL2                     in
```

Related Commands

- [monitor session](#) — creates a monitoring session.
- [rate-limit](#) — configures the rate-limit.

show running-config monitor session

Display the running configuration of all monitor sessions or a specific session.

- Syntax** `show running-config monitor session {session-ID}`
- To display the running configuration for all monitor sessions, use the `show running-config monitor session` command.
- Parameters** *session-ID* (OPTIONAL) Enter a session identification number. The range from 0 to 65535.
- Defaults** none
- Command Modes**
- EXEC
 - EXEC Privilege
- Command History** This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information The monitoring command is saved in the running configuration at the Monitor Session mode level and can be restored after a chassis reload.

Example

```
DellEMC# show running-config monitor session
!
monitor session 1
source TenGigabitEthernet 1/1 destination TenGigabitEthernet 1/2
direction rx
!
monitor multicast-queue 7
DellEMC#
```

- Related Commands**
- [monitor session](#) — creates a monitoring session.
 - [show monitor session](#) — displays a monitoring session.

source (port monitoring)

Configure a port monitor source.

Syntax `source {interface | range | any} destination interface direction {rx | tx | both}`

To disable a monitor source, use the `no source interface destination interface direction {rx | tx | both}` command.

Parameters

- source interface** Enter one of the following keywords and slot/port information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a VLAN interface enter the keyword `VLAN` followed by a number from 1 to 4094.
 - For a port channel interface, enter the keywords `port-channel` then a number.
- range** Enter the keyword `range` to specify the list of interfaces.
- any** Enter the keyword `any` to specify all interfaces.
-  **NOTE:** This option is applicable only with drop monitor session.
- destination** Enter the keyword `destination` to specify the destination interface.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a port channel interface, enter the keywords `port-channel` then a number.
- interface** Enter one of the following keywords and slot/port information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.
 - For a port channel interface, enter the keywords `port-channel` then a number.
- direction {rx | tx | both}** Enter the keyword `direction` then one of the packet directional indicators.
- `rx`: to monitor receiving packets only.
 - `tx`: to monitor transmitting packets only.
 - `both`: to monitor both transmitting and receiving packets.

Defaults none

Command Modes MONITOR SESSION (conf-mon- sess-session-ID)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the <code>any</code> parameter.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4.0.0	Added support for Source and destination.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Example

```
DelleMC# monitor session 0
source Port-channel 10 destination TenGigabitEthernet 1/3 direction tx
DelleMC#
```

Per-VLAN Spanning Tree Plus (PVST+)

The Dell EMC Networking OS implementation of per-VLAN spanning tree plus (PVST+) is based on the IEEE 802.1w standard spanning tree protocol.

Dell EMC Networking OS supports PVST+ on the platform.

NOTE: For easier command line entry, the plus (+) sign is not used at the command line.

Topics:

- [description](#)
- [disable](#)
- [extend system-id](#)
- [protocol spanning-tree pvst](#)
- [show spanning-tree pvst](#)
- [spanning-tree pvst](#)
- [spanning-tree pvst err-disable](#)
- [tc-flush-standard](#)
- [vlan bridge-priority](#)
- [vlan forward-delay](#)
- [vlan hello-time](#)
- [vlan max-age](#)

description

Enter a description of the PVST+.

Syntax `description {description}`

To remove the description, use the `no description {description}` command.

Parameters **description** Enter a description to identify the spanning tree (80 characters maximum).

Defaults none

Command Modes SPANNING TREE PVST+ (The prompt is "config-pvst".)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
pre- 7.7.1.1	Introduced.

Related Commands

- [protocol spanning-tree pvst](#) — enter SPANNING TREE mode on the switch.

disable

Disable PVST+ globally.

Syntax `disable`
To enable PVST+, use the `no disable` command.

Defaults Disabled.

Command Modes CONFIGURATION (conf-pvst)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [protocol spanning-tree pvst](#) — enter PVST+ mode.

extend system-id

To augment the Bridge ID with a VLAN ID so that PVST+ differentiate between BPDUs for each VLAN, use extend system ID. If the VLAN receives a BPDU meant for another VLAN, PVST+ does not detect a loop, and both ports can remain in Forwarding state.

Syntax extend system-id

Defaults Disabled

Command Modes PROTOCOL PVST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced.

Example

```
DelleMC(conf-pvst)# do show spanning-tree pvst vlan 5 brief
VLAN 5
Executing IEEE compatible Spanning Tree Protocol
Root ID Priority 32773, Address 0001.e832.73f7
Root Bridge hello time 2, max age 20, forward delay 15
Bridge ID Priority 32773 (priority 32768 sys-id-ext 5), Address
0001.e832.73f7
We are the root of Vlan 5
Configured hello time 2, max age 20, forward delay 15

Interface Designated
Name      PortID  Prio  Cost  Sts Cost  Bridge ID      PortID
-----
Te 0/10  128.140 128   200000 FWD 0    32773 0001.e832.73f7 128.140
Te 0/12  128.142 128   200000 DIS 0    32773 0001.e832.73f7 128.142

Interface
Name      Role  PortID  Prio  Cost  Sts Cost  Link-type  Edge
-----
Te 1/10   Desg  128.140 128   200000 FWD 0    P2P        No
Te 1/12   Dis  128.142 128   200000 DIS 0    P2P        No
DelleMC(conf-pvst)#
```

Related Commands

- [protocol spanning-tree pvst](#) – enter SPANNING TREE mode on the switch.

protocol spanning-tree pvst

To enable PVST+ on a device, enter the PVST+ mode.

Syntax `protocol spanning-tree pvst`
To disable PVST+, use the `disable` command.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
8.3.1.0	Introduced.

Example

```
DelleMC# conf
DelleMC(conf)# protocol spanning-tree pvst
DelleMC(conf-pvst)# no disable
DelleMC(conf-pvst)# vlan 2 bridge-priority 4096
DelleMC(conf-pvst)# vlan 3 bridge-priority 16384
DelleMC(conf-pvst)#
DelleMC(conf-pvst)# show config
!
protocol spanning-tree pvst
  no disable
  vlan 2 bridge-priority 4096
  vlan 3 bridge-priority 16384
DelleMC#
```

Usage Information After you enable PVST+, the device runs an STP instance for each VLAN it supports.

- Related Commands**
- `disable` — disables PVST+.
 - `show spanning-tree pvst` — displays the PVST+ configuration.

show spanning-tree pvst

View the Per-VLAN spanning tree configuration.

Syntax	show spanning-tree pvst [vlan <i>vlan-id</i>] [brief] [guard]	
Parameters	vlan <i>vlan-id</i>	(OPTIONAL) Enter the keyword <code>vlan</code> then the VLAN ID. The range is 1 to 4094.
	brief	(OPTIONAL) Enter the keyword <code>brief</code> to view a synopsis of the PVST+ configuration information.
	interface	(OPTIONAL) Enter one of the interface keywords along with the slot/port information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a Port Channel interface, enter the keyword <code>port-channel</code> then a number:
	guard	(OPTIONAL) Enter the keyword <code>guard</code> to display the type of guard enabled on a PVST interface and the current port state.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.2.1	Support for the optional <code>guard</code> keyword was added on the C-Series, S-Series, and E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Expanded to display port error disable state (EDS) caused by loopback BPDU inconsistency and Port VLAN ID inconsistency.

Version Description

6.2.1.1 Introduced.

Usage Information

The following describes the `show spanning-tree pvst` command shown in the following examples.

Field Description

Interface Name PVST interface.

Instance PVST instance.

Sts Port state: root-inconsistent (INCON Root), forwarding (FWD), listening (LIS), blocking (BLK), or shut down (EDS Shut).

Guard Type Type of STP guard configured (Root, Loop, or BPDU guard).

Example (Brief)

```
DelleMC# show spanning-tree pvst vlan 3 brief
VLAN 3
Executing IEEE compatible Spanning Tree Protocol
Root ID Priority 4096, Address 0001.e801.6aa8
Root Bridge hello time 2, max age 20, forward delay 15
Bridge ID Priority 16384, Address 0001.e805.e306
Configured hello time 2, max age 20, forward delay 15

Interface
Name      PortID  Prio Cost Sts Cost   Designated
-----
Te 1/0    128.130 128 20000 FWD 20000 4096 0001.e801.6aa8 128.426
Te 1/1    128.131 128 20000 BLK 20000 4096 0001.e801.6aa8 128.427
Te 1/16   128.146 128 20000 FWD 20000 16384 0001.e805.e306 128.146
Te 1/17   128.147 128 20000 FWD 20000 16384 0001.e805.e306 128.147

Interface
Name      Role PortID  Prio Cost Sts Cost Link-type Edge
-----
Te 1/0    Root 128.130 128 20000 FWD 20000 P2P      No
Te 1/1    Altr 128.131 128 20000 BLK 20000 P2P      No
Te 1/16   Desg 128.146 128 20000 FWD 20000 P2P      Yes
Te 1/17   Desg 128.147 128 20000 FWD 20000 P2P      Yes
```

Example

```
DelleMC# show spanning-tree pvst vlan 2
VLAN 2
Root Identifier has priority 4096, Address 0001.e805.e306
Root Bridge hello time 2, max age 20, forward delay 15
Bridge Identifier has priority 4096, Address 0001.e805.e306
Configured hello time 2, max age 20, forward delay 15
We are the root of VLAN 2
Current root has priority 4096, Address 0001.e805.e306
Number of topology changes 3, last change occurred 00:57:00

Port 130 (TenGigabitEthernet 1/4) is designated Forwarding
Port path cost 20000, Port priority 128, Port Identifier 128.130
Designated root has priority 4096, address 0001.e805.e3:06
Designated bridge has priority 4096, address 0001.e805.e3:06
Designated port id is 128.130, designated path cost 0
Number of transitions to forwarding state 1
BPDU sent 1567, received 3
The port is not in the Edge port mode

Port 131 (TenGigabitEthernet 1/1) is designated Forwarding
Port path cost 20000, Port priority 128, Port Identifier 128.131
Designated root has priority 4096, address 0001.e805.e3:06
Designated bridge has priority 4096, address 0001.e805.e3:06
Designated port id is 128.131, designated path cost 0
Number of transitions to forwarding state 1
BPDU sent 1567, received 0
The port is not in the Edge port mode
```

```
Port 146 (TenGigabitEthernet 1/16) is designated Forwarding
Port path cost 20000, Port priority 128, Port Identifier 128.146
Designated root has priority 4096, address 0001.e805.e3:06
Designated bridge has priority 4096, address 0001.e805.e3:06
Designated port id is 128.146, designated path cost 0
Number of transitions to forwarding state 1
BPDU sent 1578, received 0
The port is in the Edge port mode
```

```
Port 147 (TenGigabitEthernet 1/17) is designated Forwarding
Port path cost 20000, Port priority 128, Port Identifier 128.147
Designated root has priority 4096, address 0001.e805.e3:06
Designated bridge has priority 4096, address 0001.e805.e3:06
Designated port id is 128.147, designated path cost 0
Number of transitions to forwarding state 1
BPDU sent 1579, received 0
The port is in the Edge port mode
DellEMC#
```

Example (EDS/ LBK)

```
DellEMC# show spanning-tree pvst vlan 2 interface tengigabitethernet 1/1
```

TenGigabitEthernet 1/1 of VLAN 2 is LBK_INC discarding

```
Edge port:no (default) port guard :none (default)
Link type: point-to-point (auto) bpdu filter:disable (default)
Bpdu guard :disable (default)
Bpdus sent 152, received 27562
```

```
Interface Designated
Name      PortID    Prio Cost   Sts Cost Bridge ID          PortID
-----
Te 1/1   128.1223 128   20000 EDS 0 32768 0001.e800.a12b 128.1223
DellEMC#
```

Example (EDS/ PVID)

```
DellEMC# show spanning-tree pvst vlan 2 interface tengigabitethernet 1/1
```

TenGigabitEthernet 1/1 of VLAN 2 is PVID_INC discarding

```
Edge port:no (default) port guard :none (default)
Link type: point-to-point (auto) bpdu filter:disable (default)
Bpdu guard :disable (default)
Bpdus sent 1, received 0
```

```
Interface Designated
Name      PortID    Prio Cost   Sts Cost Bridge ID          PortID
-----
Te 1/1   128.1223 128   20000 EDS 0 32768 0001.e800.a12b 128.1223
DellEMC#
```

Example (Guard)

```
DellEMC# show spanning-tree pvst vlan 5 guard
```

```
Interface
Name      Instance Sts          Guard type
-----
Te 1/1   5          INCON(Root) Rootguard
Te 1/2   5          FWD          Loopguard
Te 1/3   5          EDS(Shut)   Bpduguard
```

Related Commands

- [spanning-tree pvst](#) — configure PVST+ on an interface.

spanning-tree pvst

Configure a PVST+ interface with one of these settings: edge port with optional bridge port data unit (BPDU) guard, port disablement if an error condition occurs, port priority or cost for a VLAN range, loop guard, or root guard.

Syntax	<code>spanning-tree pvst {edge-port [bpduguard [shutdown-on-violation]] err-disable vlan <i>vlan-range</i> {cost <i>number</i> priority <i>value</i>} loopguard rootguard}</code>	
Parameters	edge-port	Enter the keywords <code>edge-port</code> to configure the interface as a PVST+ edge port.
	bpduguard	Enter the keyword <code>portfast</code> to enable Portfast to move the interface into Forwarding mode immediately after the root fails.
		Enter the keyword <code>bpduguard</code> to disable the port when it receives a BPDU.
	shutdown-on-violation	(OPTIONAL) Enter the keywords <code>shutdown-on-violation</code> to hardware disable an interface when a BPDU is received and the port is disabled.
	err-disable	Enter the keywords <code>err-disable</code> to enable the port to be put into the error-disable state (EDS) if an error condition occurs.
	vlan <i>vlan-range</i>	Enter the keyword <code>vlan</code> then the VLAN numbers. The range is from 1 to 4094.
	cost <i>number</i>	Enter the keyword <code>cost</code> then the port cost value. The range is from 1 to 200000. Defaults: <ul style="list-style-type: none">• 100 Mb/s Ethernet interface = 200000.• 1-Gigabit Ethernet interface = 20000.• 10-Gigabit Ethernet interface = 2000.• Port Channel interface with one 100 Mb/s Ethernet = 200000.• Port Channel interface with one 1 Gigabit Ethernet = 20000.• Port Channel interface with one 10 Gigabit Ethernet = 2000.• Port Channel with two 1 Gigabit Ethernet = 18000.• Port Channel with two 10 Gigabit Ethernet = 1800.• Port Channel with two 100 Mbps Ethernet = 180000.
	priority <i>value</i>	Enter the keyword <code>priority</code> then the Port priority value in increments of 16. The range is from 0 to 240. The default is 128 .
	loopguard	(C-, S-, and E-Series only) Enter the keyword <code>loopguard</code> to enable loop guard on a PVST+ port or port-channel interface.
rootguard	(C-, S-, and E-Series only) Enter the keyword <code>rootguard</code> to enable root guard on a PVST+ port or port-channel interface.	

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Introduced the <code>loopguard</code> and <code>rootguard</code> options on the E-Series, C-Series, and S-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced the <code>hardware shutdown-on-violation</code> option.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the optional Bridge Port Data Unit (BPDU) guard.
6.2.1.1	Introduced.

Usage Information

The BPDU guard option prevents the port from participating in an active STP topology in case a BPDU appears on a port unintentionally, or is misconfigured, or is subject to a DOS attack. This option places the port into the Error Disable state if a BPDU appears, and a message is logged so that the administrator can take corrective action.

NOTE: A port configured as an edge port, on a PVST switch, immediately transitions to the forwarding state. Only ports connected to end-hosts should be configured as an edge port. Consider an edge port similar to a port with a spanning-tree portfast enabled.

If you do not enable `shutdown-on-violation`, BPDUs are still sent to the route process module (RPM) CPU.

You cannot enable `root guard` and `loop guard` at the same time on a port. For example, if you configure `loop guard` on a port on which `root guard` is already configured, the following error message is displayed: `% Error: RootGuard is configured. Cannot configure LoopGuard.`

When used in a PVST+ network, `loop guard` is performed per-port or per-port channel at a VLAN level. If no BPDUs are received on a VLAN interface, the port or port-channel transitions to a Loop-Inconsistent (blocking) state only for this VLAN.

Enabling Portfast BPDU guard and `loop guard` at the same time on a port results in a port that remains in a Blocking state and prevents traffic from flowing through it. For example, when Portfast BPDU guard and `loop guard` are both configured:

- If a BPDU is received from a remote device, BPDU guard places the port in an Err-Disabled Blocking state and no traffic is forwarded on the port.
- If no BPDU is received from a remote device, `loop guard` places the port in a Loop-Inconsistent Blocking state and no traffic is forwarded on the port.

Example

```
DelleMC(conf-if-te-1/1)# spanning-tree pvst vlan 3 cost 1800
DelleMC(conf-if-te-1/1)# end
DelleMC(conf-if-te-1/1)# show config
!
interface TenGigabitEthernet 1/1
  no ip address
  switchport
  spanning-tree pvst vlan 3 cost 1800
  no shutdown
DelleMC(conf-if-te-1/1)# end

DelleMC#
```

Related Commands

- [show spanning-tree pvst](#) — views the PVST+ configuration.

spanning-tree pvst err-disable

Place ports in an Err-Disabled state if they receive a PVST+ BPDU when they are members an untagged VLAN.

Syntax	<code>spanning-tree pvst err-disable cause invalid-pvst-bpdu</code>
Defaults	Enabled; ports are placed in the Err-Disabled state if they receive a PVST+ BPDU when they are members of an untagged VLAN.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced.

Usage Information

Some non-Dell EMC Networking systems which have hybrid ports participating in PVST+ transmit two kinds of BPDUs: an 802.1D BPDU and an untagged PVST+ BPDU.

Dell EMC Networking systems do not expect PVST+ BPDU on an untagged port. If this happens, Dell EMC Networking OS places the port in the Error-Disable state. This behavior might result in the network not converging. To prevent Dell EMC Networking OS from executing this action, use the `no spanning-tree pvst err-disable` command `cause invalid-pvst-bpdu`.

Related Commands

- [show spanning-tree pvst](#) — views the PVST+ configuration.

tc-flush-standard

Enable the MAC address flushing after receiving every topology change notification.

Syntax	<code>tc-flush-standard</code>
---------------	--------------------------------

To disable, use the `no tc-flush-standard` command.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced.

Usage Information By default, Dell EMC Networking OS implements an optimized flush mechanism for PVST+. This implementation helps in flushing the MAC addresses only when necessary (and less often) allowing for faster convergence during topology changes. However, if a standards-based flush mechanism is needed, you can turn this *knob* command on to enable flushing MAC addresses after receiving every topology change notification.

vlan bridge-priority

Set the PVST+ bridge-priority for a VLAN or a set of VLANs.

Syntax `vlan vlan-range bridge-priority value`

To return to the default value, use the `no vlan bridge-priority` command.

Parameters

vlan <i>vlan-range</i>	Enter the keyword <code>vlan</code> then the VLAN numbers. The range is from 1 to 4094.
bridge-priority <i>value</i>	Enter the keywords <code>bridge-priority</code> then the bridge priority value in increments of 4096. The range is from 0 to 61440. The default is 32768 .

Defaults **32768**

Command Modes CONFIGURATION (conf-pvst)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced.

Related Commands

- [vlan forward-delay](#) — changes the time interval before Dell EMC Networking OS transitions to the Forwarding state.
- [vlan hello-time](#) — change the time interval between BPDUs.
- [vlan max-age](#) — changes the time interval before PVST+ refreshes.
- [show spanning-tree pvst](#) — displays the PVST+ configuration.

vlan forward-delay

Set the amount of time the interface waits in the Listening state and the Learning state before transitioning to the Forwarding state.

Syntax

```
vlan vlan-range forward-delay seconds
```

To return to the default setting, use the `no vlan forward-delay` command.

Parameters

vlan <i>vlan-range</i>	Enter the keyword <code>vlan</code> then the VLAN numbers. The range is from 1 to 4094.
forward-delay <i>seconds</i>	Enter the keywords <code>forward-delay</code> then the time interval, in seconds, that Dell EMC Networking OS waits before transitioning PVST+ to the forwarding state. The range is from 4 to 30 seconds. The default is 15 seconds .

Defaults

15 seconds

Command Modes

CONFIGURATION (conf-pvst)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced.

Related Commands

- [vlan bridge-priority](#) — sets the bridge-priority value.
- [vlan hello-time](#) — changes the time interval between BPDUs.
- [vlan max-age](#) — changes the time interval before PVST+ refreshes.
- [show spanning-tree pvst](#) — displays the PVST+ configuration.

vlan hello-time

Set the time interval between generation of PVST+ 7 BPDUs.

Syntax

```
vlan vlan-range hello-time seconds
```

To return to the default value, use the `no vlan hello-time` command.

Parameters

vlan <i>vlan-range</i>	Enter the keyword <code>vlan</code> then the VLAN numbers. The range is from 1 to 4094.
hello-time <i>seconds</i>	Enter the keywords <code>hello-time</code> then the time interval, in seconds, between transmission of BPDUs. The range is from 1 to 10 seconds. The default is 2 seconds .

Defaults

2 seconds

Command Modes

CONFIGURATION (conf-pvst)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced.

Related Commands

- [vlan bridge-priority](#) — sets the bridge-priority value.
- [vlan forward-delay](#) — changes the time interval before Dell EMC Networking OS transitions to the forwarding state.
- [vlan max-age](#) — changes the time interval before PVST+ refreshes.
- [show spanning-tree pvst](#) — displays the PVST+ configuration.

vlan max-age

To maintain configuration information before refreshing that information, set the time interval for the PVST+ bridge.

Syntax `vlan vlan-range max-age seconds`

To return to the default, use the `no vlan max-age` command.

Parameters

- vlan *vlan-range*** Enter the keyword `vlan` then the VLAN numbers. The range is from 1 to 4094.
- max-age *seconds*** Enter the keywords `max-age` then the time interval, in seconds, that Dell EMC Networking OS waits before refreshing configuration information. The range is from 6 to 40 seconds. The default is **20 seconds**.

Defaults **20 seconds**

Command Modes CONFIGURATION (conf-pvst)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced.

**Related
Commands**

- [vlan bridge-priority](#) — sets the bridge-priority value.
- [vlan forward-delay](#) — changes the time interval before Dell EMC Networking OS transitions to the forwarding state.
- [vlan hello-time](#) — changes the time interval between BPDUs.
- [show spanning-tree pvst](#) — displays the PVST+ configuration.

Quality of Service (QoS)

The Dell EMC Networking OS commands for quality of service (QoS) include traffic conditioning and congestion control. QoS commands are not universally supported on all Dell EMC Networking products.

Topics:

- Global Configuration Commands
- qos-rate-adjust
- Per-Port QoS Commands
- dot1p-priority
- rate police
- rate-shape
- service-class dot1p-mapping
- service-class dynamic dot1p
- service-class bandwidth-weight
- strict-priority unicast
- Policy-Based QoS Commands
- bandwidth-percentage
- class-map
- clear qos statistics
- description
- match ip access-group
- match ip dscp
- match ip precedence
- match ip vlan
- match ip vrf
- match mac access-group
- match mac dot1p
- match mac vlan
- policy-aggregate
- policy-map-input
- policy-map-output
- qos-policy-input
- qos-policy-output
- queue egress
- queue ingress
- rate-police
- rate-shape
- service-policy input
- service-policy output
- service-queue
- set
- show qos class-map
- show qos dot1p-queue-mapping
- show qos policy-map
- show qos policy-map-input
- show qos policy-map-output
- show qos qos-policy-input
- show qos qos-policy-output
- show qos statistics
- show qos wred-profile

- [test cam-usage](#)
- [threshold](#)
- [trust](#)
- [wred](#)
- [wred ecn](#)
- [wred-profile](#)

Global Configuration Commands

There is only one global configuration QoS command.

qos-rate-adjust

By default, while rate limiting, policing, and shaping, Dell EMC Networking OS does not include the Preamble, SFD, or the IFG fields. These fields are overhead; only the fields from MAC destination address to the CRC are used for forwarding and are included in these rate metering calculations. You can optionally include overhead fields in rate metering calculations by enabling QoS Rate Adjustment.

Syntax `qos-rate-adjustment overhead-bytes`

Parameters ***overhead-bytes*** Include a specified number of bytes of packet overhead to include in rate limiting, policing, and shaping calculations. The range is from 1 to 31.

Defaults QoS rate adjustment is disabled by default.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced.

Usage Information By default, when rate policing and shaping, the system does not include the Preamble, SFD, or the IFG fields. These fields are overhead; only the fields from MAC destination address to the CRC are used for forwarding and are included in these rate metering calculations.

Per-Port QoS Commands

Per-port QoS (port-based QoS) allows you to define the QoS configuration on a per-physical-port basis.

dot1p-priority

Assign a value to the IEEE 802.1p bits on the traffic this interface receives.

Syntax	<code>dot1p-priority priority-value</code> To delete the IEEE 802.1p configuration on the interface, use the <code>no dot1p-priority</code> command.												
Defaults	none												
Command Modes	INTERFACE												
Command History	<p>This guide is platform-specific. For command information about other platforms, refer to the relevant <i>Dell Networking OS Command Line Reference Guide</i>.</p> <p>The following is a list of the Dell Networking OS version history for this command.</p> <table><tr><td>Version 9.0.2.0</td><td>Introduced on the S6000.</td></tr><tr><td>Version 8.3.19.0</td><td>Introduced on the S4820T.</td></tr><tr><td>Version 8.3.11.1</td><td>Introduced on the Z9000.</td></tr><tr><td>Version 8.3.7.0</td><td>Introduced on the S4810.</td></tr><tr><td>Version 7.5.1.0</td><td>Introduced on the C-Series.</td></tr><tr><td>pre-Version 6.1.1.1</td><td>Introduced on the E-Series.</td></tr></table>	Version 9.0.2.0	Introduced on the S6000.	Version 8.3.19.0	Introduced on the S4820T.	Version 8.3.11.1	Introduced on the Z9000.	Version 8.3.7.0	Introduced on the S4810.	Version 7.5.1.0	Introduced on the C-Series.	pre-Version 6.1.1.1	Introduced on the E-Series.
Version 9.0.2.0	Introduced on the S6000.												
Version 8.3.19.0	Introduced on the S4820T.												
Version 8.3.11.1	Introduced on the Z9000.												
Version 8.3.7.0	Introduced on the S4810.												
Version 7.5.1.0	Introduced on the C-Series.												
pre-Version 6.1.1.1	Introduced on the E-Series.												
Usage Information	<p>The <code>dot1p-priority</code> command changes the priority of incoming traffic on the interface. The system places traffic marked with a priority in the correct queue and processes that traffic according to its queue.</p> <p>When you set the priority for a port channel, the physical interfaces assigned to the port channel are configured with the same value. You cannot assign the <code>dot1p-priority</code> command to individual interfaces in a port channel.</p>												

rate police

Police the incoming traffic rate on the selected interface.

Syntax	<code>rate police [kbps] committed-rate [burst-KB] [peak [kbps] peak-rate [burst-KB]] [vlan vlan-id]</code>										
Parameters	<table><tr><td>kbps</td><td>Enter the keyword <code>kbps</code> to specify the rate limit in Kilobits per second (Kbps). The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).</td></tr><tr><td>committed-rate</td><td>Enter the bandwidth in Mbps. The range is from 0 to 40000.</td></tr><tr><td>burst-KB</td><td>(OPTIONAL) Enter the burst size in KB. The range is from 16 to 200000. The default is 50.</td></tr><tr><td>peak peak-rate</td><td>(OPTIONAL) Enter the keyword <code>peak</code> then a number to specify the peak rate in Mbps. The range is from 0 to 40000.</td></tr><tr><td>vlan vlan-id</td><td>(OPTIONAL) Enter the keyword <code>vlan</code> then a VLAN ID to police traffic to those specific VLANs. The range is from 1 to 4094.</td></tr></table>	kbps	Enter the keyword <code>kbps</code> to specify the rate limit in Kilobits per second (Kbps). The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).	committed-rate	Enter the bandwidth in Mbps. The range is from 0 to 40000.	burst-KB	(OPTIONAL) Enter the burst size in KB. The range is from 16 to 200000. The default is 50 .	peak peak-rate	(OPTIONAL) Enter the keyword <code>peak</code> then a number to specify the peak rate in Mbps. The range is from 0 to 40000.	vlan vlan-id	(OPTIONAL) Enter the keyword <code>vlan</code> then a VLAN ID to police traffic to those specific VLANs. The range is from 1 to 4094.
kbps	Enter the keyword <code>kbps</code> to specify the rate limit in Kilobits per second (Kbps). The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).										
committed-rate	Enter the bandwidth in Mbps. The range is from 0 to 40000.										
burst-KB	(OPTIONAL) Enter the burst size in KB. The range is from 16 to 200000. The default is 50 .										
peak peak-rate	(OPTIONAL) Enter the keyword <code>peak</code> then a number to specify the peak rate in Mbps. The range is from 0 to 40000.										
vlan vlan-id	(OPTIONAL) Enter the keyword <code>vlan</code> then a VLAN ID to police traffic to those specific VLANs. The range is from 1 to 4094.										
Defaults	Granularity for <code>committed-rate</code> and <code>peak-rate</code> is Mbps unless you use the <code>kbps</code> option.										

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added the <code>kbps</code> option on the C-Series, E-Series, and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information  **NOTE:** Per Port rate police is supported for Layer 2 tagged and untagged switched traffic and for Layer 3 traffic. Per VLAN rate police is supported on only tagged ports with Layer 2 switched traffic.

S-Series

rate-shape

Shape the traffic output on the selected interface.

Syntax `rate shape [kbps] rate [burst-KB]`

Parameters

kbps	Enter the keyword <code>kbps</code> to specify the rate limit in Kilobits per second (Kbps). Enter the value in multiples of 64. The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).
rate	The range is from 10 to 40000.
burst-KB	(OPTIONAL) Enter the burst size in KB. The range is from 0 to 10000. The default is 50 .

Defaults Granularity for rate is **Mbps** unless you use the `kbps` option.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added the kbps option on the C-Series, E-Series, and S-Series.
7.6.1.0	Introduced on the S-Series and C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

If traffic is shaped between 64 and 1000 Kbs, for some values, the shaped rate is much less than the value configured.

On 40-port 10G stack-unit if the traffic is shaped between 64 and 1000 Kbs, for some values, the shaped rate is much less than the value configured.

NOTE: When packets of size greater than 7000 bytes are expected to be received from the network, Dell EMC Networking recommends that you configure the burst value to be more than 175 KB if you configured the rate shape. Such a setting ensures proper bandwidth sharing across queues.

Related Commands

- [rate-shape](#) — shapes traffic output as part of the designated policy.

service-class dot1p-mapping

Configure a service-class criterion based on a dot1p value.

Syntax	<code>service-class dot1p-mapping {dot1p0 queue dot1p1 queue dot1p2 queue dot1p3 queue dot1p4 queue dot1p5 queue dot1p6 queue dot1p7 queue}</code>
Parameters	queue Enter a value from 0 to 7.
Defaults	For each dot1p Priority, the default CoS queue value is: <ul style="list-style-type: none"> • Dot1p Priority : 0 1 2 3 4 5 6 7
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information

To apply dot1p-queue-mapping, use the `service-class dynamic dot1p` command.

Related Commands

- [show qos dot1p-queue-mapping](#) — displays the dot1p priority to queue mapping on the switch.

service-class dynamic dot1p

Honor all 802.1p markings on incoming switched traffic on an interface (from INTERFACE mode) or on all interfaces (from CONFIGURATION mode). A CONFIGURATION mode entry supersedes an INTERFACE mode entry.

Syntax

```
service-class dynamic dot1p
```

To return to the default setting, use the `no service-class dynamic dot1p` command.

Defaults

All dot1p traffic is mapped to Queue 0 unless you enable the `service-class dynamic dot1p` command. The default mapping is as follows:

Command Modes

- INTERFACE
- CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added the kbps option on the C-Series, E-Series, and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Expanded the command to permit configuration on port channels.
6.1.1.1	Introduced on the E-Series.

Usage Information

To honor all incoming 802.1p markings on incoming switched traffic on the interface, enter this command. By default, this facility is not enabled (that is, the 802.1p markings on incoming traffic are not honored).

You can apply this command on both physical interfaces and port channels. When you set the `service-class dynamic` for a port channel, the physical interfaces assigned to the port channel are automatically configured; you cannot assign the `service-class dynamic` command to individual interfaces in a port channel.

- All dot1p traffic is mapped to Queue 0 unless you enable the `service-class dynamic dot1p` command on an interface or globally.
- Layer 2 or Layer 3 service policies supersede dot1p service classes.

service-class bandwidth-weight

Specify a minimum bandwidth for queues.

C-Series, S-Series

Syntax `service-class bandwidth-weight queue0 number queue1 number queue2 number queue3 number`

Parameters *number* Enter the bandwidth-weight. The value must be a power of 2. The range is 1 to 1024.

Defaults none

Command Modes CONFIGURATION

Command History

Version	Description
9.0(1.3)	Introduced on the S5000.
8.2.1.0	Introduced on the C-Series and S-Series.

Usage Information

Guarantee a minimum bandwidth to different queues globally using the `service-class bandwidth-weight` command from CONFIGURATION mode. The command is applied in the same way as the `bandwidth-weight` command in an output QoS policy. The `bandwidth-weight` command in QOS-POLICY-OUT mode supercedes the `service-class bandwidth-weight` command.

strict-priority unicast

Configure a unicast queue as a strict-priority (SP) queue.

Syntax `strict-priority unicast number`

Parameters	unicast <i>number</i> Enter the keyword <code>unicast</code> then the queue number. The range is from 1 to 3.
Defaults	none
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information	After you configure a unicast queue as strict-priority, that particular queue, on the entire chassis, is treated as a <code>strict-priority unicast</code> . Traffic for a strict priority is scheduled before any other queues are serviced. For example, if you send 100% line rate traffic over the SP queue, it starves all other queues on the ports on which this traffic is flowing.
--------------------------	---

Policy-Based QoS Commands

Policy-based traffic classification is handled with class maps. These maps classify data traffic into one of eight classes . Dell EMC Networking OS enables you to match multiple class maps and specify multiple match criteria. Policy-based QoS is not supported on logical interfaces, such as port-channels, VLANs, or loopbacks.

bandwidth-percentage

Assign a percentage of weight to the class/queue.

Syntax	<code>bandwidth-percentage <i>percentage</i></code> To remove the bandwidth percentage, use the <code>no bandwidth-percentage</code> command.
Parameters	<i>percentage</i> Enter the percentage assignment of bandwidth to the class/queue. The range is from 1 to 100% (granularity 1%).
Defaults	none
Command Modes	CONFIGURATION (conf-qos-policy-out)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.1.9.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.2.1.1	Introduced on the E-Series.

Usage Information

The unit of bandwidth percentage is 1%. If the sum of the bandwidth percentages given to all eight classes exceeds 100%, the bandwidth percentage automatically scales down to 100%.

Related Commands

- [qos-policy-output](#) — creates a QoS output policy.

class-map

Create/access a class map. Class maps differentiate traffic so that you can apply separate quality-of-service policies to each class.

Syntax

```
class-map {match-all | match-any} class-map-name [cpu-qos] [layer2]
```

Parameters

match-all	Determines how packets are evaluated when multiple match criteria exist. Enter the keywords <code>match-all</code> to determine that the packets must meet all the match criteria in order to be a member of the class.
match-any	Determines how packets are evaluated when multiple match criteria exist. Enter the keywords <code>match-any</code> to determine that the packets must meet at least one of the match criteria in order to be a member of the class.
class-map-name	Enter a name of the class for the class map in a character format (32 character maximum).
cpu-qos	Enter the keyword <code>cpu-qos</code> to assign this Class Map to control plane traffic only (CoPP).
layer2	Enter the keyword <code>layer2</code> to specify a Layer 2 Class Map. The default is Layer 3 .

Defaults

Layer 3

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Class-map names can be 32 characters. Layer2 available on the C-Series and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Expanded to add support for Layer 2.

Usage Information

Packets arriving at the input interface are checked against the match criteria and configured using this command to determine if the packet belongs to that class. This command accesses CLASS-MAP mode, where the configuration commands include `thematch ip` and `match mac` options.

When you create a class map to filter protocol traffic for CoPP, you must enter the keyword `cpu-qos`.

Related Commands

- [ip access-list extended](#) — configures an extended IP ACL.
- [ip access-list standard](#) — configures a standard IP ACL.
- [match ip access-group](#) — configures the match criteria based on the access control list (ACL).
- [match ip precedence](#) — identifies the IP precedence values as match criteria.
- [match ip dscp](#) — configures the match criteria based on the DSCP value.
- [match mac access-group](#) — configures a match criterion for a class map based on the contents of the designated MAC ACL.
- [match mac dot1p](#) — configures a match criterion for a class map based on a dot1p value.
- [match mac vlan](#) — configures a match criterion for a class map based on VLAN ID.
- [service-queue](#) — assigns a class map and QoS policy to different queues.
- [show qos class-map](#) — views the current class map information.

clear qos statistics

Clear qos statistics clears statistics from show qos statistics.

Syntax `clear qos statistics interface-name`

Parameters **interface-name** Enter one of the following keywords:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.

- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.18.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

- Related Commands**
- [show qos statistics](#) — displays the QoS statistics.

description

Add a description to the selected policy map or QoS policy.

Syntax `description {description}`
 To remove the description, use the `no description {description}` command.

Parameters **description** Enter a description to identify the policies (80 characters maximum).

Defaults none

Command Modes CONFIGURATION (policy-map-input and policy-map-output; conf-qos-policy-in and conf-qos-policy-out; wred)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
pre- 7.7.1.0	Introduced.

Related Commands

- [policy-map-input](#) — creates an input policy map.
- [policy-map-output](#) — creates an output policy map.
- [qos-policy-input](#) — creates an input QoS-policy on the router.
- [qos-policy-output](#) — creates an output QoS-policy on the router.
- [wred-profile](#) — creates a WRED profile.

match ip access-group

Configure match criteria for a class map, based on the access control list (ACL).

NOTE: IPv6 class-maps and IP-any class-maps do not match. This condition is true for IPv6 and IP-any class-maps on both ACLs as well as VLANs.

Syntax

```
[seq sequence number] match ip access-group access-group-name [set-ip-dscp value | set-color value]
```

To remove ACL match criteria from a class map, use the `no [seq sequence number] match ip access-group access-group-name [set-ip-dscp value | set-color value]` command.

Parameters

- seq *sequence number*** (OPTIONAL) Enter the keyword `seq` then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.
- access-group-name*** Enter the ACL name whose contents are used as the match criteria in determining if packets belong to the class the class-map specifies.
- set-ip-dscp *value*** (OPTIONAL) Enter the keywords `set-ip-dscp` then the IP DSCP value. The matched traffic is marked with the DSCP value. The range is from 0 to 63.
- set-color *value*** (Optional) Enter the keyword `set-color` followed by a color value. Traffic that fulfills the match criteria is marked with the color value that you specify. The default value is Yellow.

Defaults

none

Command Modes

CLASS-MAP CONFIGURATION (config-class-map)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added the DSCP Marking option support on the S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series; added support for the DSCP Marking option.
6.1.1.1	Introduced on the E-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria. For `class-map match-any`, a maximum of five ACL match criteria are allowed. For `class-map match-all`, only one ACL match criteria is allowed.

Related Commands

- [class-map](#) — identifies the class map.

match ip dscp

Use a differentiated services code point (DSCP) value as a match criteria.

Syntax

```
[seq sequence number] match {ip | ipv6 | ip-any} dscp dscp-list [set-ip-dscp value]
```

To remove a DSCP value as a match criteria, use the `no [seq sequence number] match {ip | ipv6 | ip-any} dscp dscp-list [[multicast] set-ip-dscp value]` command.

Parameters

seq <i>sequence number</i>	(OPTIONAL) Enter the keyword <code>seq</code> then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.
ip	Enter the keyword <code>ip</code> to support IPv4 traffic.
ipv6	Enter the keyword <code>ipv6</code> to support IPv6 traffic.
ip-any	Enter the keyword <code>ip-any</code> to support IPv4 and IPv6 traffic.
<i>dscp-list</i>	Enter the IP DSCP values that is to be the match criteria. Separate values by commas — no spaces (1,2,3) or indicate a list of values separated by a hyphen (1-3). The range is from 0 to 63.

set-ip-dscp value (OPTIONAL) Enter the keywords `set-ip-dscp` then the IP DSCP value. The matched traffic is marked with the DSCP value. The range is from 0 to 63.

Defaults none

Command Modes CLASS-MAP CONFIGURATION (config-class-map)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added the ipv6 and ip-any options on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added the keyword <code>multicast</code> ; added the DSCP Marking option support on the S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series; added support for the DSCP Marking option.
6.2.1.1	Introduced on the E-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

The `match ip dscp` and `match ip precedence` commands are mutually exclusive.

Up to 64 IP DSCP values can be matched in one match statement. For example, to indicate IP DSCP values 0 1 2 3 4 5 6 7, enter either the `match ip dscp 0,1,2,3,4,5,6,7` or `match ip dscp 0-7` command.

 **NOTE:** Only one of the IP DSCP values must be a successful match criterion, not all of the specified IP DSCP values must match.

Related Commands

- `class-map` — identifies the class map.

match ip precedence

Use IP precedence values as a match criteria.

Syntax `[seq sequence number] match {ip | ipv6 | ip-any} precedence ip-precedence-list [set-ip-dscp value]`

To remove IP precedence as a match criteria, use the `no match {ip | ipv6 | ip-any} precedence ip-precedence-list [[multicast] set-ip-dscp value]` command.

Parameters

- seq sequence number** (OPTIONAL) Enter the keyword `seq` then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.
- ip** Enter the keyword `ip` to support IPv4 traffic.
- ipv6** Enter the keyword `ipv6` to support IPv6 traffic.
- ip-any** Enter the keyword `ip-any` to support IPv4 and IPv6 traffic.
- ip-precedence-list** Enter the IP precedence value(s) as the match criteria. Separate values by commas — no spaces (1,2,3) or indicate a list of values separated by a hyphen (1-3). The range is from 0 to 7.
- set-ip-dscp value** (OPTIONAL) Enter the keywords `set-ip-dscp` then the IP DSCP value. The matched traffic is marked with the DSCP value. The range is from 0 to 63.

Defaults

none

Command Modes CLASS-MAP CONFIGURATION (config-class-map)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Added support for the <code>ipv6</code> and <code>ip-any</code> options on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added the keyword <code>multicast</code> . Added support for the DSCP Marking option for the S-Series.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series. Added support for the DSCP Marking option.
6.1.1.1	Introduced on the E-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

The `match ip precedence` command and the `match ip dscp` command are mutually exclusive.

Up to eight precedence values can be matched in one match statement. For example, to indicate the IP precedence values 0 1 2 3, enter either the `match ip precedence 0-3` or `match ip precedence 0,1,2,3` command.

NOTE: Only one of the IP precedence values must be a successful match criterion, not all of the specified IP precedence values must match.

Related Commands

- `class-map` — identifies the class map.

match ip vlan

Uses a VLAN as the match criterion for an L3 class map.

Syntax `[seq sequence number] match ip vlan vlan-id` To remove VLAN as the match criterion, use the `no [seq sequence number] match ip vlan vlan-id` command.

Parameters

seq sequence number	(OPTIONAL) Enter the keyword <code>seq</code> then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.
vlan vlan-id	Enter the keyword <code>vlan</code> and then the ID of the VLAN. The range is from 1 to 4094.

Defaults None.

Command Modes CONF-CLASS-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

Use this command to match an IP class-map against a single VLAN ID .

Related Commands

- `class-map` — identifies the class map.

match ip vrf

Uses a VRF as the match criterion for an L3 class map.

S5000

Syntax `match ip vrf vrf-id`
To remove VRF as the match criterion, use the `no match ip vrf vrf-id` command.

Parameters **vlan *vlan-id*** Enter the keyword `vrf` and then the ID of the VRF. The range is from 1 to 63.

Defaults none

Command Modes CONF-CLASS-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5.(0.1)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

Use this command to match an IP class-map against a single VRF ID .

Related Commands

- [class-map](#) — identifies the class map.

match mac access-group

Configure a match criterion for a class map, based on the contents of the designated MAC ACL.

Syntax `[seq sequence number] match mac access-group {mac-acl-name}`

Parameters **mac-acl-name** Enter a MAC ACL name. Its contents is used as the match criteria in the class map.

Defaults none

Command Modes CLASS-MAP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the seq option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Available on the C-Series and S-Series.
7.5.1.0	Added support for the DSCP Marking option.
7.4.1.0	Introduced on the E-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

Related Commands

- [class-map](#) — identifies the class map.

match mac dot1p

Configure a match criterion for a class map based on a dot1p value.

Syntax `[seq sequence number] match mac dot1p {dot1p-list}`

Parameters

seq sequence number	(OPTIONAL) Enter the keyword <code>seq</code> then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.
dot1p-list	Enter a dot1p value. The range is from 0 to 7.

Defaults none

Command Modes CLASS-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Available on the C-Series and S-Series.
7.5.1.0	Added support for the DSCP Marking option.
7.4.1.0	Introduced on the E-Series.

Usage Information

To access this command, enter the `class-map` command. After the class map is identified, you can configure the match criteria.

Related Commands

- `class-map` — identifies the class map.

match mac vlan

Configure a match criterion for a class map based on VLAN ID.

Syntax `[seq sequence number] match mac vlan number`

Parameters

seq sequence number (OPTIONAL) Enter the keyword `seq` then the sequence number. The range is from 1 to 100. By default, the sequence number are assigned in multiples of five.

number Enter the VLAN ID. The range is from 1 to 4094.

Defaults none

Command Modes CLASS-MAP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the <code>seq</code> option for the <code>class-map</code> on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced.

- Usage Information** To access this command, enter the `class-map` command. You can match against only one VLAN ID.
- Related Commands**
- `class-map` — identifies the class map.

policy-aggregate

Allow an aggregate method of configuring per-port QoS via policy maps. An aggregate QoS policy is part of the policy map (output) applied on an interface.

- Syntax** `policy-aggregate qos-policy-name`
- To remove a policy aggregate configuration, use the `no policy-aggregate qos-policy-name` command.

- Parameters** `qos-policy-name` Enter the name of the policy map in character format (32 characters maximum).

- Defaults** none

- Command Modes** CONFIGURATION (policy-map-input and policy-map-output)

- Command History** This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Policy name character limit increased from 16 to 32.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

- Usage Information** An aggregate output QoS policy applies to all outbound port traffic. An aggregate output QoS policy can coexist with per-queue output QoS policies. If the rate shape exists in both aggregate and per-queue qos-policy, minimum of 2 take effect. Some of all Queue-rate will not exceed aggregate.

- Related Commands**
- `policy-map-input` — creates an input policy map.
 - `policy-map-output` — creates an output policy map.

policy-map-input

Create an input policy map.

Syntax `policy-map-input policy-map-name cpu-qos | [layer2] [cpu-qos]`
To remove an input policy map, use the `no policy-map-input policy-map-name cpu-qos | [layer2] [cpu-qos]` command.

Parameters

- policy-map-name*** Enter the name of the `policy map` in character format (32 characters maximum).
- cpu-qos*** Enter the `cpu-qos` keyword to assign this ACL to control plane traffic only.
- layer2*** (OPTIONAL) Enter the keyword `layer2` to specify a Layer 2 Class Map. The default is **Layer 3**.
- cpu-qos*** (OPTIONAL) Enter the keyword `cpu-qos` to create an input policy to be used to rate-limit control-plane traffic (CoPP).

Defaults **Layer 3**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Policy name character limit increased from 16 to 32.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Expanded to add support for Layer 2.
6.1.1.1	Introduced on the E-Series.

Usage Information The input policy map is used to classify incoming traffic to different flows using class-map, QoS policy, or incoming packets DSCP. This command enables Policy-Map-Input Configuration mode (`conf-policy-map-in`). When you configure an input policy map for CoPP, you must enter the keyword `cpu-qos`.

- Related Commands**
- [service-queue](#) — assigns a class map and QoS policy to different queues.
 - [service-policy input](#) — applies an input policy map to the selected interface.

policy-map-output

Create an output policy map.

Syntax	<code>policy-map-output <i>policy-map-name</i></code> To remove a policy map, use the <code>no policy-map-output <i>policy-map-name</i></code> command.
Parameters	<i>policy-map-name</i> Enter the name for the policy map in character format (32 characters maximum).
Defaults	none
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Policy name character limit increased from 16 to 32.
7.6.1.0	Introduced on the C-Series and S-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information	To assign traffic to different flows using QoS policy, use the Output Policy map. This command enables Policy-Map-Output Configuration mode (<code>conf-policy-map-out</code>).
Related Commands	<ul style="list-style-type: none">• service-queue — assigns a class map and QoS policy to different queues.• policy-aggregate — allows an aggregate method of configuring per-port QoS using policy maps.• service-policy output — applies an output policy map to the selected interface.

qos-policy-input

Create a QoS input policy on the router.

Syntax	<code>qos-policy-input <i>qos-policy-name</i> cpu-qos layer2</code> To remove an existing input QoS policy from the router, use the <code>no qos-policy-input <i>qos-policy-name</i> cpu-qos layer2</code> command.
---------------	--

Parameters	<i>qos-policy-name</i>	Enter the name for the policy map in character format (32 characters maximum).
	cpu-qos	(OPTIONAL) Enter the keyword <code>cpu-qos</code> keyword to assign this ACL to control plane traffic only.
	layer2	(OPTIONAL) Enter the keyword <code>layer2</code> to specify a Layer 2 Class Map. The default is Layer 3 .

Defaults **Layer 3**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Policy name character limit increased from 16 to 32.
7.6.1.0	Introduced on the C-Series and S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information Use this command to specify the name of the input QoS policy. Once input policy is specified, rate-police can be defined. This command enables the `qos-policy-input` configuration mode— (`conf-qos-policy-in`).

When changing a Service-Queue configuration in a QoS policy map, all QoS rules are deleted and re-added automatically to ensure that the order of the rules is maintained. As a result, the Matched Packets value shown in the `show qos statistics` command is reset.

If you create create a QoS input policy to be used for CoPP, you must enter the keyword `cpu-qos` .

Related Commands • [rate police](#) — incoming traffic policing function.

qos-policy-output

Create a QoS output policy.

Syntax `qos-policy-output qos-policy-name`

To remove an existing output QoS policy, use the `no qos-policy-output qos-policy-name` command.

Parameters **qos-policy-name** Enter your output QoS policy name in character format (32 characters maximum).

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Policy name character limit increased from 16 to 32.
7.6.1.0	Introduced on the C-Series and S-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information Use this command to specify the name of the output QoS policy. Once output policy is specified, rate-shape, scheduler strict, bandwidth-percentage, and WRED can be defined. This command enables the qos-policy-output configuration mode—(conf-qos-policy-out).

Related Commands

- [bandwidth-percentage](#) — assigns percentage of bandwidth to the class/queue.
- [wred](#) — assigns yellow or green drop precedence.

queue egress

Assign a WRED Curve to all eight egress Multicast queues or designate the percentage for the Multicast bandwidth queue.

Syntax

```
queue egress multicast linecard {slot number port-set number | all} [wred-profile name | multicast-bandwidth percentage]
```

To return to the default, use the no `queue egress multicast linecard {slot number port-set number | all} [wred-profile name | multicast-bandwidth percentage]` command.

Parameters

linecard number Enter the keyword `linecard` then the line card slot number.

port-set number Enter the keywords `port-set` then the line card's port pipe. The range is from 0 or 1.

all Enter the keyword `all` to apply to all line cards.

wred-profile
name (OPTIONAL) Enter the keywords `wred-profile` then your WRED profile name in character format (16 character maximum). Or use one of the pre-defined WRED profile names.

Pre-defined Profiles: `wred_drop`, `wred_ge_y`, `wred_ge_g`, `wred_teng_y`, `wred_teng_g`.

multicast-bandwidth
percentage (OPTIONAL) Enter the keywords `multicast-bandwidth` then the bandwidth percentage. The range is from 0 to 100%.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.8.10	Introduced on the S4810.
7.5.1.0	Added support for multicast-bandwidth.
7.4.1.0 and 6.5.3.0	Introduced on the E-Series.

Usage Information This command does not uniquely identify a queue, but rather identifies only a set of queues. The WRED curve is applied to all eight egress Multicast queues.

Important Points to Remember — Multicast-Bandwidth Option

- A unique multicast weighted fair queuing (WFQ) setting can be applied only on a per port-pipe basis. The minimum percentage of the multicast bandwidth assigned to any of the ports in the port-pipe takes effect for the entire port-pipe.
- If the percentage of multicast bandwidth is 0, control traffic going through multicast queues are dropped.
- The `no` form of the command without `multicast-bandwidth` and `wred-profile`, removes both the `wred-profile` and `multicast-bandwidth` configuration.
- On 10-Gigabit ports only, the multicast bandwidth option works only if the total unicast bandwidth is more than the multicast bandwidth.
- If strict priority is applied along with `multicast-bandwidth`, the effect of strict priority is on all ports where unicast and multicast bandwidth are applied.
- When multicast bandwidth is assigned along with unicast bandwidth, first multicast bandwidth is reserved for that port, then the remaining unicast bandwidth configured is adjusted according to the bandwidth available after reserving for multicast bandwidth.

queue ingress

Assign a WRED Curve to all eight ingress Multicast queues or designate the percentage for the Multicast bandwidth queue.

Syntax `queue ingress multicast {linecard slot number port-set number | all} [wred-profile name]`

To return to the default, use the `no queue ingress multicast {linecard slot number port-set number | all} [wred-profile name]` command.

Parameters **linecard number** Enter the keyword `linecard` then the line card slot number.

port-set *number* Enter the keywords `port-set` then the line card's port pipe. The range is from 0 or 1.

all Enter the keyword `all` to apply to all line cards.

wred-profile *name* (OPTIONAL) Enter the keywords `wred-profile` then your WRED profile name in character format (16 character maximum). Or use one of the pre-defined WRED profile names.

Pre-defined Profiles: `wred_drop`, `wred-ge_y`, `wred-ge_g`, `wred_teng_y`, `wred_teng_g`.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.
7.4.1.0 and 6.5.3.0	Introduced on the E-Series.

Usage Information This command does not uniquely identify a queue, but rather identifies only a set of queues. The WRED Curve is applied to all eight ingress Multicast queues.

NOTE: The `multicast-bandwidth` option is not supported on queue ingress. If you attempt to use the `multicast-bandwidth` option, the following reject error message is generated: `% Error:Bandwidth-percent is not allowed for ingress multicast.`

rate-police

Specify the policing functionality on incoming traffic.

Syntax `rate-police [kbps] committed-rate [burst-KB] [peak [kbps] peak-rate [burst-KB]]`

Parameters

- kbps** Enter the keyword `kbps` to specify the rate limit in Kilobits per second (Kbps). Make the following value a multiple of 64. The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).
- committed-rate** Enter the bandwidth in Mbps. The range is from 0 to 40000.
- burst-KB** (OPTIONAL) Enter the burst size in KB. The range is from 16 to 200000. The default is **100**.
- peak peak-rate** (OPTIONAL) Enter the keyword `peak` then a number to specify the peak rate in Mbps. The range is from 0 to 40000. The default is the same as designated for `committed-rate`.

Defaults Burst size is 100KB. `peak-rate` is by default the same as `committed-rate`. Granularity for `committed-rate` and `peak-rate` is Mbps unless you use the `kbps` option.

Command Modes QOS-POLICY-IN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added the <code>kbps</code> option on the C-Series, E-Series, and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

The default burst size is 100Kb. If a different value is required, you must configure the burst size to the required value.

Related Commands

- [rate police](#) — specifies traffic policing on the selected interface.
- [qos-policy-input](#) — creates a QoS output policy.

rate-shape

Shape traffic output as part of the designated policy.

Syntax `rate-shape [kbps | pps] peak-rate [burst-kbps | burst-packets] committed [kbps | pps] committed-rate [burst-kbps | burst-packets]`

Parameters

pps	Enter the keyword <code>pps</code> to specify the rate limit in packets per second (pps).
kbps	Enter the keyword <code>kbps</code> to specify the rate limit in Kilobits per second (Kbps). Make the following value a multiple of 64. The range is from 0 to 40000000. The default granularity is Megabits per second (Mbps).
burst-kbps	(OPTIONAL) Enter the burst size in KB. The range is from 0 to 40000. The default is 100 .
burst-packets	Enter the peak rate or committed rate burst size in packets per seconds.

Defaults

Burst size is 10KB. Granularity for rate is Mbps unless you use the `kbps` option.

Command Modes QOS-POLICY-OUT

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added the kbps option on the C-Series, E-Series, and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

On 40-port 10G stack-unit if the traffic is shaped between 64 and 1000 Kbs, for some values, the shaped rate is much less than the value configured. You must configure the peak rate and peak burst size using the same value: kilobits or packets per second. Similarly, you must configure the committed rate and committed burst size with the same measurement. Peak rate refers to the maximum rate for traffic arriving or exiting an interface under normal traffic conditions. Peak burst size indicates the maximum size of unused peak bandwidth that is aggregated. This aggregated bandwidth enables brief durations of burst traffic that exceeds the peak rate and committed burst. Committed rate refers to the guaranteed bandwidth for traffic entering or leaving the interface under normal network conditions. When traffic propagates at an average rate that is less than or equal to the committed rate, it is considered to be green-colored or coded. When the transmitted traffic falls below the committed rate, the bandwidth, which is not used by any traffic that is traversing the network, is aggregated to form the committed burst size. Traffic is considered to be green-colored up to the point at which the unused bandwidth does not exceed the committed burst size.

Related Commands

- [rate shape](#) — shapes traffic output as part of the designated policy.
- [qos-policy-output](#) — creates a QoS output policy.

service-policy input

Apply an input policy map to the selected interface.

Syntax

```
service-policy input policy-map-name [layer2]
```

To remove the input policy map from the interface, use the `no service-policy input policy-map-name [layer2]` command.

Parameters

- policy-map-name*** Enter the name for the policy map in character format (32 characters maximum). You can identify an existing policy map or name one that does not yet exist.
- layer2*** (OPTIONAL) Enter the keyword `layer2` to specify a Layer 2 Class Map. The default is **Layer 3**.

Defaults

Layer 3

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Expanded to add support for Layer 2.
6.1.1.1	Introduced on the E-Series.

Usage Information

You can attach a single policy-map to one or more interfaces to specify the service-policy for those interfaces. A policy map attached to an interface can be modified.

NOTE: The `service-policy` commands are not allowed on a port channel. The `service-policy input policy-map-name` command and the `service-class dynamic dot1p` command are not allowed simultaneously on an interface. However, the `service-policy input` command (without the `policy-map-name` option) and the `service-class dynamic dot1p` command are allowed on an interface.

Related Commands

- `policy-map-input` — creates an input policy map.

service-policy output

Apply an output policy map to the selected interface.

Syntax

```
service-policy output policy-map-name
```

To remove the output policy map from the interface, use the `no service-policy output policy-map-name` command.

Parameters

policy-map-name Enter the name for the policy map in character format (32 characters maximum). You can identify an existing policy map or name one that does not yet exist.

Defaults

none

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

A single policy-map can be attached to one or more interfaces to specify the service-policy for those interfaces. A policy map attached to an interface can be modified.

Related Commands

- [policy-map-output](#) — creates an output policy map.

service-queue

Assign a class map and QoS policy to different queues.

Syntax

```
service-queue queue-id [class-map class-map-name] [qos-policy qos-policy-name]
```

To remove the queue assignment, use the `no service-queue queue-id [class-map class-map-name] [qos-policy qos-policy-name]` command.

Parameters

<i>queue-id</i>	Enter the value used to identify a queue. The range is from 0 to 7.
<i>class-map class-map-name</i>	(OPTIONAL) Enter the keyword <code>class-map</code> then the class map name assigned to the queue in character format (32 character maximum).  NOTE: This option is available under <code>policy-map-input</code> only.
<i>qos-policy qos-policy-name</i>	(OPTIONAL) Enter the keywords <code>qos-policy</code> then the QoS policy name assigned to the queue in text format (32 characters maximum). This specifies the input QoS policy assigned to the queue under <code>policy-map-input</code> and output QoS policy under <code>policy-map-output</code> context.

Defaults

none

Command Modes CONFIGURATION (conf-policy-map-in and conf-policy-map-out)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Usage Information

There are eight queues per interface on the S6000 and four queues on the S-Series. This command assigns a class map or QoS policy to different queues.

Related Commands

- [class-map](#) — identifies the class map.
- [service-policy input](#) — applies an input policy map to the selected interface.
- [service-policy output](#) — applies an output policy map to the selected interface.

set

Mark outgoing traffic with a differentiated service code point (DSCP) or dot1p value.

Syntax

```
set {ip-dscp value | mac-dot1p value}
```

Parameters

- ip-dscp value** (OPTIONAL) Enter the keywords `ip-dscp` then the IP DSCP value. The range is from 0 to 63.
- mac-dot1p value** Enter the keywords `mac-dot1p` then the dot1p value. The range is from 0 to 7.

Defaults

none

Command Modes

CONFIGURATION (conf-qos-policy-in)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added mac-dot1p on the C-Series and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Added support for mac-dot1p.
6.1.1.1	Introduced on the E-Series.

Usage Information

After the IP DSCP bit is set, other QoS services can then operate on the bit settings.

show qos class-map

View the current class map information.

Syntax `show qos class-map [class-name]`

Parameters **class-name** (Optional) Enter the name of a configured class map.

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced the seq option on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos class-map
Class-map match-any CM
  seq 5 Match ip access-group ACL
DellEMC#
```

Related Commands

- [class-map](#) — identifies the class map.

show qos dot1p-queue-mapping

Displays the dot1p priority to queue mapping on the switch.

Syntax `show qos dot1p-queue-mapping`

Defaults

- Dot1p Priority : 0 1 2 3 4 5 6 7
- Queue : 0 0 0 1 2 3 3 3

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information `trust dot1p, do1p-priority, service-class dynamic dot1;` all these features work over the mapping in this command output.

Related Commands

- [service-class dot1p-mapping](#) — Identifies the class map.

show qos policy-map

View the QoS policy map information.

Syntax	<code>show qos policy-map {summary [<i>interface</i>] detail}</code>	
Parameters	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	summary <i>interface</i>	To view a policy map interface summary, enter the keyword <code>summary</code> and optionally one of the following keywords and slot/port or number information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
	detail	To view a policy map interface in detail, enter the keyword <code>detail</code> and optionally one of the following keywords and slot/port or number information: <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series only: Added <code>trust IPv6 diffserv</code> .
6.2.1.1	Introduced on the E-Series.

Example (IPv4)

Example (IPv6)

Example (Summary IPv4)

```
DellEMC#sho qos policy-map summary

Interface policy-map-input policy-map-output
Te 4/1      PM1              -
Te 4/2      PM2              PMOut
DellEMC#
```

show qos policy-map-input

View the input QoS policy map details.

Syntax `show qos policy-map-input [policy-map-name] [class class-map-name] [qos-policy-input qos-policy-name]`

Parameters

- policy-map-name*** Enter the policy map name.
- class *class-map-name*** Enter the keyword `class` then the class map name.
- qos-policy-input *qos-policy-name*** Enter the keyword `qos-policy-input` then the QoS policy name.

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Added Trust IPv6 diffserv.
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos policy-map-input

Policy-map-input PolicyMapInput
Aggregate Qos-policy-name AggPolicyIn
Queue# Class-map-name Qos-policy-name
0      ClassMap1      qosPolicyInput
DellEMC#
```

Example

```
DellEMC# show qos policy-map-input

Policy-map-input pmap1
Trust ipv6-diffserv
Queue# Class-map-name Qos-policy-name
0      c0              q0
1      c1              q1
2      c2              q2
3      c3              q3
4      c4              q4
5      c5              -
6      c6              q6
7      c7              q7
DellEMC#
```

show qos policy-map-output

View the output QoS policy map details.

Syntax

```
show qos policy-map-output [policy-map-name] [qos-policy-output qos-policy-name]
```

Parameters

policy-map-name Enter the policy map name.

qos-policy-output qos-policy-name Enter the keyword *qos-policy-output* then the QoS policy name.

Defaults

none

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos policy-map-output

Policy-map-output PolicyMapOutput
Aggregate Qos-policy-name AggPolicyOut
Queue#    Qos-policy-name
0         qosPolicyOutput
DellEMC#
```

show qos qos-policy-input

View the input QoS policy details.

Syntax `show qos qos-policy-input [qos-policy-name]`

Parameters **qos-policy-name** Enter the QoS policy name.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos qos-policy-input

Qos-policy-input QosInput
    Rate-police 100 50 peak 100 50
    Dscp 32
DellEMC#
```

show qos qos-policy-output

View the output QoS policy details.

Syntax `show qos qos-policy-output [qos-policy-name]`

Parameters ***qos-policy-name*** Enter the QoS policy name.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos qos-policy-output

Qos-policy-output qosOut
    Rate-limit 50 50 peak 50 50
    Wred yellow 1
```

```
Wred green 1
DellEMC#
```

show qos statistics

View QoS statistics.

Syntax

```
show qos statistics {egress-queue [interface]} | {wred-profile [interface]} |
[interface]
```

Parameters

egress-queue interface

Enter the keyword `egress-queue` to display the egress-queue statistics and optionally one of the following keywords and slot/port or number information.

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

wred-profile interface

Enter the keywords `wred-profile` and optionally one of the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

interface

Enter one of the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults

none

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Network OS Command Line Reference Guide*.

Version

Description

9.12(0.0)

Modified to display the global WRED state.

9.11(0.0)

Updated the `show qos statistics egress-queue` output to reflect per queue per port tx and drop rates.

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.10(0.0)

Introduced on the S6100-ON.

9.8(2.0)

Introduced on the S3100 series.

9.8(1.0)

Introduced on the Z9100-ON.

9.8(0.0P5)

Introduced on the S4048-ON.

9.8(0.0P2)

Introduced on the S3048-ON.

9.8(0.0)

Added the `egress-queue` keyword.

9.7(0.0)

Introduced on the S6000-ON.

9.2(1.0)

Introduced on the Z9500.

9.0.2.0

Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.1	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.1	Introduced on the E-Series.

Example of show qos statistics egress-queue with per queue per port tx and drop rates

```
DellEMC#show qos statistics egress-queue tengigabitethernet 1/1
Interface Te 1/1
Unicast/Multicast Egress Queue Statistics
-----
Queue# Q# Type TxPkts TxPkts/s TxBytes TxBytes/s DroppedPkts DroppedPkts/s DroppedBytes DroppedBytes/s
-----
0 UCAST 0 0 0 0 0 0 0 0
1 UCAST 0 0 0 0 0 0 0 0
2 UCAST 0 0 0 0 0 0 0 0
3 UCAST 1708252734 2340972 874625399808 1198000301 1357413570 0 694995747840 0
4 UCAST 0 0 0 0 0 0 0 0
5 UCAST 0 0 0 0 0 0 0 0
6 UCAST 0 0 0 0 0 0 0 0
7 UCAST 0 0 0 0 0 0 0 0
8 UCAST 0 0 0 0 0 0 0 0
9 UCAST 1132 1 143063 217 0 0 0 0
10 MCAST 0 0 0 0 0 0 0 0
11 MCAST 0 0 0 0 0 0 0 0
12 MCAST 0 0 0 0 0 0 0 0
13 MCAST 0 0 0 0 0 0 0 0
14 MCAST 0 0 0 0 0 0 0 0
15 MCAST 0 0 0 0 0 0 0 0
16 MCAST 0 0 0 0 0 0 0 0
17 MCAST 0 0 0 0 0 0 0 0
18 MCAST 0 0 0 0 0 0 0 0
19 MCAST 0 0 0 0 0 0 0 0
DellEMC#
```

Example of show qos statistics wred-profile

```
DellEMC(conf)#do show qos statistics wred-profile
Global Wred State : Enabled
Interface Te 1/11
Drop-statistic Dropped Pkts
Green 0
Yellow 6730113
Out of Profile 0
```

Usage Information

In a dual homing setup, you can use this command only from the primary VLT peer.
The following list describes output of the show qos statistics command in the example:

- **Queue #** — Queue Number.
- **Queued Bytes** — Snapshot of the byte count in that queue.
- **Queued Pkts** — Cumulative packet count in that queue.
- **Matched Pkts** — The number of packets that matched the class-map criteria.
 **NOTE:** When you configure trust, matched packet counters are not incremented in this field.
- **Matched Bytes** — The number of bytes that matched the class-map criteria.
 **NOTE:** When you configure trust, matched byte counters are not incremented in this field.
- **Dropped Pkts** — The total of the number of packets dropped for green, yellow and out-of-profile.

show qos wred-profile

View the WRED profile details.

Syntax show qos wred-profile wred-profile-name

Parameters *wred-profile-name* Enter the WRED profile name to view the profile details.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Modified to display the global WRED state.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.1.1.1	Introduced on the E-Series.

Example

```
DellEMC# show qos wred-profile

Global Wred State: Disabled

Wred-profile-name  min-threshold  max-threshold  max-drop-rate
wred_drop          0              0              100
wred_teng_y        467           4671          100
wred_teng_g        467           4671          50
wred_fortyg_y     467           4671          50
wred_fortyg_g     467           4671          25
DellEMC#
```

test cam-usage

Check the Input Policy Map configuration for the CAM usage.

Syntax `test cam-usage service-policy input policy-map stack-unit {[number port-set portpipe number] | [all]}`

- Parameters**
- policy-map*** Enter the policy map name.
 - stack-unit* *number*** (OPTIONAL) Enter the keyword `stack-unit` then the stack-unit slot number.
 - port-set* *portpipe* *number*** Enter the keywords `port-set` then the stack-unit port pipe number. The range is from 0 or 1.
 - stack-unit* all** (OPTIONAL) Enter the keywords `stack-unit` all to indicate all stack-unit.

Defaults none

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information

This feature allows you to determine if the CAM has enough space available before applying the configuration on an interface.

An input policy map with both Trust and Class-map configuration, the Class-map rules are ignored and only the Trust rule is programmed in the CAM. In such an instance, the Estimated CAM output column contains the size of the CAM space required for the Trust rule and not the Class-map rule.

The following describes the `test cam-usage service-policy input policy-map stack-unit` command shown in the following example.

Field	Description
stack-unit	Indicates the stack-unit slot number.
Portpipe	Indicates the portpipe number.
CAM Partition	The CAM space where the rules are added.
Available CAM	Indicates the free CAM space, in the partition, for the classification rules. <i>i</i> NOTE: The CAM entries reserved for the default rules are not included in the Available CAM column; free entries, from the default rules space, cannot be used as a policy map for the classification rules.
Estimated CAM per Port	Indicates the number of free CAM entries required (for the classification rules) to apply the input policy map on a single interface. <i>i</i> NOTE: The CAM entries for the default rule are not included in this column; a CAM entry for the default rule is always dedicated to a port and is always available for that interface.
Status (Allowed ports)	Indicates if the input policy map configuration on an interface belonging to a stack-unit/port-pipe is successful — Allowed (n) — or not successful — Exception. The allowed number (n) indicates the number of ports in that port-pipe on which the Policy Map can be applied successfully.

i **NOTE:** In a Layer 2 Policy Map, IPv4/IPv6 rules are not allowed; therefore, the output contains only L2ACL CAM partition entries.

Example

```
DellEMC# test cam-usage service-policy input pmap_l2 stack-unit all
For a L2 Input Policy Map pmap_l2, the output must be as follows,
stack-unit|Portpipe|CAM Partition|Available CAM|Estimated CAM per Port |
Status
|
| (Allowed ports)
0          0          L2ACL          500          200
0    Allowed (2)
Exception  1          L2ACL          100          200
1          0          L2ACL          1000         200
Allowed (5)
1          1          L2ACL           0          200
Exception
...
...
...
13         1          L2ACL          400          200          Allowed
(2)
DellEMC#
```

threshold

Specify the minimum and maximum threshold values for the configured WRED profiles.

Syntax

```
threshold min number max number max-drop-drop
```

To remove the threshold values, use the `no threshold min number max number` command.

Parameters

- min *number*** Enter the keyword `min` then the minimum threshold number for the WRED profile. The range is from 1 to 9360.
- max *number*** Enter the keyword `max` then the maximum threshold number for the WRED profile. The range is from 1 to 9360 KB.
- max-drop-drop *number*** Enter the keyword **max-drop-drop** followed by the maximum number of packets for the WRED profile. The range is from 0 to 100 KB

Defaults

none

Command Modes

CONFIGURATION (config-wred)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.8.0	Introduced on the S4810.
6.1.1.1	Introduced on the E-Series.

Usage Information

To configure the minimum and maximum threshold values for user-defined profiles, use this command. Additionally, to modify the minimum and maximum threshold values for the pre-defined WRED profiles, use this command. If you delete the threshold values of the pre-defined WRED profiles, the profiles revert to their original default values.

Related Commands

- [wred-profile](#) — creates a WRED profile.

trust

Specify dynamic classification (DSCP) or dot1p to trust.

Syntax

```
trust {diffserv [fallback]| dot1p [fallback]}
```

Parameters

diffserv	Enter the keyword <code>diffserv</code> to specify trust of DSCP markings.
dot1p	Enter the keyword <code>dot1p</code> to specify trust dot1p configuration.
fallback	Enter the keyword <code>fallback</code> to classify packets according to their DSCP or dot1p value as a secondary option in case no match occurs against the configured class maps.

Defaults

none

Command Modes

CONFIGURATION (conf-policy-map-in)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
8.3.1.0	Added <code>fallback</code> to the E-Series.
8.2.1.0	Added <code>dot1p</code> to the C-Series and S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added <code>dot1p</code> and <code>IPv6 DSCP</code> .
6.1.1.1	Introduced on the E-Series.

Usage Information

When you configure `trust`, matched bytes/packets counters are not incremented in the `show qos statistics` command.

Dynamic mapping honors packets marked according to the standard definitions of DSCP. The following lists the default mapping.

Table 3. Default Mapping

DSCP/CP hex Range (XXX)	DSCP Definition	Traditional IP Precedence	S6000 Internal Queue ID	S-Series Internal Queue ID	DSCP/CP Decimal
111XXX		Network Control	7	3	48–63
110XXX		Internetwork Control	6	3	48–63
101XXX	EF (Expedited Forwarding)	CRITIC/ECP	5	2	32–47
100XXX	AF4 (Assured Forwarding)	Flash Override	4	2	32–47
011XXX	AF3	Flash	3	1	16–31
010XXX	AF2	Immediate	2	1	16–31
001XXX	AF1	Priority	1	0	0–15
000XXX	BE (Best Effort)	Best Effort	0	0	0–15

wred

Designate the WRED profile to yellow or green traffic.

Syntax `wred {yellow | green} profile-name`

To remove the WRED drop precedence, use the `no wred {yellow | green} [profile-name]` command.

Parameters

yellow | green Enter the keyword `yellow` for yellow traffic. A DSCP value of xxx110 and xxx100, xxx101 maps to yellow.

Enter the keyword `green` for `green` traffic. A DSCP value of xxx0xx are green and DSCP 11111 are red packets.

profile-name Enter your WRED profile name in character format (32 character maximum). Or use one of the five pre-defined WRED profile names.

Pre-defined Profiles: wred_drop, wred-ge_y, wred-ge_g, wred_teng_y, wred_teng_.

Defaults When WRED green is applied, default WRED yellow profiles take effect and vice-versa.

Command Modes CONFIGURATION (conf-qos-policy-out)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information To assign drop precedence to green or yellow traffic, use this command. If there is no honoring enabled on the input, all the traffic defaults to green drop precedence.

Related Commands

- [wred-profile](#) — creates a WRED profile and name that profile.
- [trust](#) — defines the dynamic classification to trust DSCP.

wred ecn

To indicate network congestion, rather than dropping packets, use explicit congestion notification (ECN).

Syntax `wred ecn`

To stop marking packets, use the `no wred ecn` command.

Defaults none

Command Modes CONFIGURATION (conf-qos-policy-out)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820t.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information

When you enable `wred ecn`, and the number of packets in the queue is below the minimum threshold, packets are transmitted per the usual WRED treatment.

When you enable `wred ecn`, and the number of packets in the queue is between the minimum threshold and the maximum threshold, one of the following two scenarios can occur:

- If the transmission endpoints are ECN-capable and traffic is congested, and the WRED algorithm determines that the packet should have been dropped based on the drop probability, the packet is transmitted and marked so the routers know the system is congested and can slow transmission rates.
- If neither endpoint is ECN-capable, the packet may be dropped based on the WRED drop probability. This behavior is the identical treatment that a packet receives when WRED is enabled without ECN configured on the router.

When you enable `wred ecn`, and the number of packets in the queue is above the maximum threshold, packets are dropped based on the drop probability. This behavior is the identical treatment a packet receives when WRED is enabled without ECN configured on the router.

Related Commands

- [wred-profile](#) — creates a WRED profile and name that profile.

wred-profile

Create a WRED profile and name the profile.

Syntax

```
wred-profile wred-profile-name
```

To remove an existing WRED profile, use the `no wred-profile` command.

Parameters

wred-profile-name

Enter your WRED profile name in character format (32 character maximum). Or use one of the pre-defined WRED profile names. You can configure up to 26 WRED profiles plus the five pre-defined profiles, for a total of 31 WRED profiles.

Pre-defined Profiles: `wred_drop`, `wred_ge_y`, `wred_ge_g`, `wred_teng_y`, `wred_teng_g`.

Defaults

The five pre-defined WRED profiles. When you configure a new profile, the minimum and maximum threshold defaults to predefined `wred_ge_g` values.

If green profile is applied, default yellow also take effect and vice-versa.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
6.1.1.1	Introduced on the E-Series.

Usage Information

Use the default pre-defined profiles or configure your own profile. You cannot delete the pre-defined profiles or their default values. This command enables WRED configuration mode —(conf-wred).

Related Commands

- [threshold](#) — specifies the minimum and maximum threshold values of the WRED profile.

Private VLAN (PVLAN)

The private VLAN (PVLAN) feature of the Dell EMC Networking OS is supported on the platforms.

Private VLANs extend the Dell EMC Networking OS security suite by providing Layer 2 isolation between ports within the same private VLAN. A private VLAN partitions a traditional VLAN into subdomains identified by a primary and secondary VLAN pair. The Dell EMC Networking OS private VLAN implementation is based on RFC 3069.

For more information, see the following commands. The command output is augmented in Dell EMC Networking OS version 7.8.1.0 at later to provide PVLAN data:

- [show arp](#)
- [show vlan](#)

Private VLAN Concepts

Primary VLAN:

The primary VLAN is the base VLAN and can have multiple secondary VLANs. There are two types of secondary VLAN — community VLAN and isolated VLAN:

- A primary VLAN can have any number of community VLANs and isolated VLANs.
- Private VLANs block all traffic to isolated ports except traffic from promiscuous ports. Traffic received from an isolated port is forwarded only to promiscuous ports or trunk ports.

Community VLAN:

A community VLAN is a secondary VLAN of the primary VLAN:

- Ports in a community VLAN can talk to each other. Also, all ports in a community VLAN can talk to all promiscuous ports in the primary VLAN and vice versa.
- Devices on a community VLAN can communicate with each other using member ports, while devices in an isolated VLAN cannot.

Isolated VLAN:

An isolated VLAN is a secondary VLAN of the primary VLAN:

- Ports in an isolated VLAN cannot talk to each other. Servers would be mostly connected to isolated VLAN ports.
- Isolated ports can talk to promiscuous ports in the primary VLAN, and vice versa.

Port Types:

- *Community port* — a community port is a port that belongs to a community VLAN and is allowed to communicate with other ports in the same community VLAN and with promiscuous ports.
- *Isolated port* — an isolated port is a port that, in Layer 2, can only communicate with promiscuous ports that are in the same PVLAN.
- *Promiscuous port* — a promiscuous port is a port that is allowed to communicate with any other port type.
- *Trunk port* — a trunk port carries VLAN traffic across switches:
 - A trunk port in a PVLAN is always tagged.
 - A trunk port in Tagged mode carries primary or secondary VLAN traffic. The tag on the packet helps identify the VLAN to which the packet belongs.
 - A trunk port can also belong to a regular VLAN (non-private VLAN).

Topics:

- [ip local-proxy-arp](#)
- [private-vlan mode](#)
- [private-vlan mapping secondary-vlan](#)
- [show interfaces private-vlan](#)
- [show vlan private-vlan](#)
- [show vlan private-vlan mapping](#)
- [switchport mode private-vlan](#)

ip local-proxy-arp

Enable/disable Layer 3 communication between secondary VLANs in a private VLAN.

Syntax `[no] ip local-proxy-arp`

To disable Layer 3 communication between secondary VLANs in a private VLAN, use the `no ip local-proxy-arp` command in INTERFACE VLAN mode for the primary VLAN.

To disable Layer 3 communication in a particular secondary VLAN, use the `no ip local-proxy-arp` command in INTERFACE VLAN mode for the selected secondary VLAN.

NOTE: Even after you disable `ip-local-proxy-arp` (use `no ip-local-proxy-arp`) in a secondary VLAN, Layer 3 communication may happen between some secondary VLAN hosts, until the address resolution protocol (ARP) timeout happens on those secondary VLAN hosts.

Defaults Layer 3 communication is disabled between secondary VLANs in a private VLAN.

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

- Related Commands**
- [private-vlan mode](#) — sets the mode of the selected VLAN to community, isolated, or primary.
 - [private-vlan mapping secondary-vlan](#) — maps secondary VLANs to the selected primary VLAN.
 - [show arp](#) — displays the ARP table.
 - [switchport mode private-vlan](#) — sets PVLAN mode of the selected port.

private-vlan mode

Set PVLAN mode of the selected VLAN to community, isolated, or primary.

Syntax `[no] private-vlan mode {community | isolated | primary}`

To remove the PVLAN configuration, use the `no private-vlan mode {community | isolated | primary}` command syntax.

Parameters	community	Enter the keyword <code>community</code> to set the VLAN as a community VLAN.
	isolated	Enter the keyword <code>isolated</code> to configure the VLAN as an isolated VLAN.
	primary	Enter the keyword <code>primary</code> to configure the VLAN as a primary VLAN.

Defaults none

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information

The VLAN:

- can be in only one mode, either `community`, `isolated`, or `primary`.
- mode to `community` or `isolated` even before associating it to a primary VLAN. This secondary VLAN continues to work normally as a normal VLAN even though it is not associated to a primary VLAN. (A syslog message indicates this.)
- must not have a port in it when VLAN mode is being set.

Only ports (and port channels) configured as promiscuous, host, or PVLAN trunk ports (as previously described) can be added to the PVLAN. No other regular ports can be added to the PVLAN.

After using this command to configure a VLAN as a primary VLAN, use the `private-vlan mapping secondary-vlan` command to map secondary VLANs to this VLAN.

Related Commands

- [private-vlan mapping secondary-vlan](#) — maps secondary VLANs to the selected primary VLAN.
- [switchport mode private-vlan](#) — sets PVLAN mode of the selected port.

private-vlan mapping secondary-vlan

Map secondary VLANs to the selected primary VLAN.

Syntax `[no] private-vlan mapping secondary-vlan vlan-list`

To remove specific secondary VLANs from the configuration, use the `no private-vlan mapping secondary-vlan vlan-list` command syntax.

Parameters *vlan-list* Enter the list of secondary VLANs to associate with the selected primary VLAN. The list can be in comma-delimited or hyphenated-range format, following the convention for the range input.

Defaults none

Command Modes INTERFACE VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information The list of secondary VLANs can be:

- Specified in comma-delimited or hyphenated-range format.
- Specified with this command even before they have been created.
- Amended by specifying the new secondary VLAN to be added to the list.

Related Commands

- [private-vlan mode](#) — sets the mode of the selected VLAN to community, isolated, or primary.
- [switchport mode private-vlan](#) — sets PVLAN mode of the selected port.

show interfaces private-vlan

Display type and status of PVLAN interfaces.

Syntax `show interfaces private-vlan [interface interface]`

Parameters **interface** (OPTIONAL) Enter the keyword *interface* followed by the interface type and slot/port numbers or port-channel number to specify the port(s) for which you want to display PVLAN information.
interface

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information

This command has two types of display — a list of all PVLAN interfaces or for a specific interface. Examples of both types of output are shown below.

The following describes the `show interfaces private-vlan` command shown in the Examples below.

Field	Description
Interface	Displays the type of interface and associated slot and port number.
Vlan	Displays the VLAN ID of the designated interface.
PVLAN-Type	Displays the type of VLAN in which the designated interface resides.
Interface Type	Displays the PVLAN port type of the designated interface.
Status	States whether the interface is operationally up or down.

Example (All)

```
Dell# show interfaces private-vlan
Interface Vlan PVLAN-Type Interface Type Status
-----
Gi 2/1    10    Primary    Promiscuous  Up
Gi 2/2    100   Isolated   Host          Down
Gi 2/3    10    Primary    Trunk         Up
Gi 2/4    101   Community  Host          Up
```

Example (Specific)

```
Dell# show interfaces private-vlan Gi 2/2
Interface Vlan PVLAN-Type Interface Type Status
-----
Gi 2/2    100   Isolated   Host          Up
```

Related Commands

- [private-vlan mode](#) – sets the mode of the selected VLAN to community, isolated, or primary.
- [show vlan private-vlan](#) – displays the PVLANS and/or interfaces that are part of a PVLAN.
- [show vlan private-vlan mapping](#) – displays the primary-secondary VLAN mapping.
- [switchport mode private-vlan](#) – sets PVLAN mode of the selected port.

show vlan private-vlan

Display PVLANS and/or interfaces that are part of a PVLAN.

Syntax

```
show vlan private-vlan [vlan-id | community vlan-id | interface [interface
| isolated vlan-id | mapping vlan-id | primary primary_vlan]
```

Parameters

- vlan-id*** (OPTIONAL) Enter a VLAN ID number to display the PVLAN configuration.
- community *vlan-id*** (OPTIONAL) Enter the keyword `community` and a PVLAN ID number to display the configuration for a community PVLAN.
- interface *interface*** (OPTIONAL) Enter the keyword `interface` followed by the interface type and slot/port numbers or port-channel number to display the PVLAN configuration for a member interface. The range of Z9500 slot IDs is 0 to 2. The valid values are:
 - **port-channel** port-channel-number
 - **tengigabitethernet** slot/port

- **fortygigE** slot/port

isolated *vlan-id* (OPTIONAL) Enter the keyword `isolated` to display VLANs configured as isolated VLANs, along with their interfaces.

mapping *vlan-id* (OPTIONAL) Enter the keyword `mapping` to display the community and isolated PVLAN mapping to primary PVLANS.

primary *vlan-id* (OPTIONAL) Enter the keyword `primary` to display VLANs configured as primary VLANs, along with their interfaces.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.1	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information

Examples of all types of command output are shown below. The first type of output is the result of not entering an optional keyword. It displays a detailed list of all PVLANS and their member VLANs and interfaces. The other types of output show details about PVLAN subsets.

The following describes the `show private-vlan` command shown in the Examples below.

Field	Description
Primary	Displays the VLAN ID of the designated or associated primary VLAN(s).
Secondary	Displays the VLAN ID of the designated or associated secondary VLAN(s).
Type	Displays the type of VLAN in which the listed interfaces reside.
Active	States whether the interface is operationally up or down.
Ports	Displays the interface IDs in the listed VLAN.

Example (All)

```
Dell# show vlan private-vlan
Primary Secondary Type Active Ports
-----
10          100      primary   Yes   Gi 2/1,3
            101      isolated  Yes   Gi 2/2
            101      community Yes   Gi 2/10
20          200      primary   Yes   Po 10, 12-13
            3/1
            200      isolated  Yes   Gi 3/2,4-6
            201      community No
            202      community Yes   Gi 3/11-12
```

Example (Primary)

```
Dell# show vlan private-vlan primary
Primary Secondary Type Active Ports
-----
10          primary   Yes   Gi 2/1,3
20          primary   Yes   Gi 3/1,3
```

Example (Isolated)

```
Dell# show vlan private-vlan isolated
Primary Secondary Type Active Ports
-----
```

```

10          primary  Yes  Gi 2/1,3
          100    isolated Yes  Gi 2/2,4-6
          200    isolated Yes  Gi 3/2,4-6

```

**Example
(Community)**

```

Dell# show vlan private-vlan community
Primary Secondary Type      Active Ports
-----
10          primary  Yes  Gi 2/1,3
          101    community Yes  Gi 2/7-10
20          primary  Yes  Po 10, 12-13
          201    community No   Gi 3/1
          202    community Yes  Gi 3/11-12

```

**Example
(interface)**

```

Dell# show vlan private-vlan interface te 2/1
Primary Secondary Type      Active Ports
-----
10          primary  Yes  Te 2/1

```

**Example
(Specific)**

```

Dell# show vlan private-vlan interface Gi 2/1
Primary Secondary Type      Active Ports
-----
10          primary  Yes  Gi 2/1

```

**Example
(Mapping)**

```

Dell# show vlan private-vlan mapping

Private Vlan:
Primary      : 10
Isolated     : 30
Community    : 20

```

**Usage
Information**

If the VLAN ID is that of a primary VLAN, the entire private VLAN output is displayed, as shown below. If the VLAN ID is a secondary VLAN, only its primary VLAN and its particular secondary VLAN properties are displayed, as shown in the second Example.

Example

```

Dell# show vlan private-vlan 10
Primary Secondary Type      Active Ports
-----
10          primary  Yes  Gi 2/1,3
          102    isolated Yes  Gi 0/4
          101    community Yes  Gi 2/7-10

```

Example

```

Dell#show vlan private-vlan 102
Primary Secondary Type      Active Ports
-----
10          Primary  Yes  Po 1
          Gi 0/2
          102    Isolated Yes  Gi 0/4

```

**Related
Commands**

- [private-vlan mode](#) – sets the mode of the selected VLAN to community, isolated, or primary.
- [show interfaces private-vlan](#) – displays type and status of PVLAN interfaces.
- [show vlan private-vlan mapping](#) – displays the primary-secondary VLAN mapping.
- [switchport mode private-vlan](#) – sets PVLAN mode of the selected port.

show vlan private-vlan mapping

Display primary-secondary VLAN mapping.

Syntax `show vlan private-vlan mapping`

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History	Version	Description
	9.0.2.0	Introduced on the S6000.
	9.0(1.3)	Introduced on the S5000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.1	Introduced on the S4810.
	7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information The output of this command, shown below, displays the community and isolated VLAN IDs that are associated with each primary VLAN.

Example

```
Dell# show vlan private-vlan mapping
Private Vlan:
  Primary   : 100
  Isolated  : 102
  Community : 101
  Unknown   : 200
```

Related Commands

- [private-vlan mode](#) – sets the mode of the selected VLAN to community, isolated, or primary.
- [show interfaces private-vlan](#) – displays type and status of PVLAN interfaces.
- [show vlan private-vlan mapping](#) – displays the primary-secondary VLAN mapping.
- [switchport mode private-vlan](#) – sets PVLAN mode of the selected port.

switchport mode private-vlan

Set PVLAN mode of the selected port.

S5000

Syntax `[no] switchport mode private-vlan {host | promiscuous | trunk}`

To remove PVLAN mode from the selected port, use the `no switchport mode private-vlan` command.

Parameters		
host		Enter the keyword <code>host</code> to configure the selected port or port channel as an isolated interface in a PVLAN.
promiscuous		Enter the keyword <code>promiscuous</code> to configure the selected port or port channel as an promiscuous interface.
trunk		Enter the keyword <code>trunk</code> to configure the selected port or port channel as a trunk port in a PVLAN.

Defaults Disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information The assignment of the various PVLAN port types to port and port channel (LAG) interfaces is shown in the following example.

Example

```
DelleMC#conf
DelleMC(conf)# interface TenGigabitEthernet 2/1
DelleMC(conf-if-te-2/1)# switchport mode private-vlan promiscuous

DelleMC(conf)# interface TenGigabitEthernet 2/2
DelleMC(conf-if-te-2/2)# switchport mode private-vlan host

DelleMC(conf)# interface TenGigabitEthernet 2/3
DelleMC(conf-if-te-2/3)# switchport mode private-vlan trunk

DelleMC(conf)# interface port-channel 10
DelleMC(conf-if-te-2/3)# switchport mode private-vlan promiscuous
DelleMC(conf-if-te-2/3)#
```

- Related Commands**
- [private-vlan mode](#) — sets the mode of the selected VLAN to community, isolated, or primary.
 - [private-vlan mapping secondary-vlan](#) — sets the mode of the selected VLAN to primary and then associates the secondary VLANs to it.

Routing Information Protocol (RIP)

Routing information protocol (RIP) is a distance vector routing protocol. The Dell EMC Networking OS supports both RIP version 1 (RIPv1) and RIP version 2 (RIPv2).

The Dell EMC Networking OS implementation of RIP is based on IETF RFCs 2453 and RFC 1058. For more information about configuring RIP, see the *Dell EMC Networking OS Configuration Guide*.

Topics:

- [auto-summary](#)
- [clear ip rip](#)
- [debug ip rip](#)
- [default-information originate](#)
- [default-metric](#)
- [description](#)
- [distance](#)
- [distribute-list in](#)
- [distribute-list out](#)
- [ip poison-reverse](#)
- [ip rip receive version](#)
- [ip rip send version](#)
- [ip split-horizon](#)
- [maximum-paths](#)
- [neighbor](#)
- [network](#)
- [offset-list](#)
- [output-delay](#)
- [passive-interface](#)
- [redistribute](#)
- [redistribute isis](#)
- [redistribute ospf](#)
- [router rip](#)
- [show config](#)
- [show ip rip database](#)
- [show running-config rip](#)
- [timers basic](#)
- [version](#)

auto-summary

Restore the default behavior of automatic summarization of subnet routes into network routes. This command applies only to RIP version 2.

Syntax `auto-summary`

To send sub-prefix routing information, use the `no auto-summary` command.

Defaults Enabled.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

clear ip rip

Update all the RIP routes in the Dell EMC Networking OS routing table.

Syntax `clear ip rip`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

This command triggers updates of the main RIP routing tables.

debug ip rip

Examine RIP routing information for troubleshooting.

Syntax `debug ip rip [interface | database | events [interface] | trigger]`

To turn off debugging output, use the `no debug ip rip` command.

Parameters

interface	(OPTIONAL) Enter the interface type and ID as one of the following: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a Port Channel interface, enter the keywords <code>port-channel</code> then a number. For a VLAN, enter the keyword <code>vlan</code> then a number from 1 to 4094.
database	(OPTIONAL) Enter the keyword <code>database</code> to display messages when there is a change to the RIP database.
events	(OPTIONAL) Enter the keyword <code>events</code> to debug only RIP protocol changes.
trigger	(OPTIONAL) Enter the keyword <code>trigger</code> to debug only RIP trigger extensions.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

default-information originate

Generate a default route for the RIP traffic.

Syntax `default-information originate [always] [metric metric-value] [route-map map-name]`

To return to the default values, use the `no default-information originate` command.

Parameters	Parameter	Description
	always	(OPTIONAL) Enter the keyword <code>always</code> to enable the switch software to always advertise the default route.
	metric <i>metric-value</i>	(OPTIONAL) Enter the keyword <code>metric</code> then a number as the metric value. The range is from 1 to 16. The default is 1 .
	route-map <i>map-name</i>	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of a configured route-map.

Defaults Disabled. Metric: **1**.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information The default route must be present in the switch routing table for the `default-information originate` command to take effect.

default-metric

Change the default metric for routes. To ensure that all redistributed routes use the same metric value, use this command with the `redistribute` command.

Syntax `default-metric number`
To return the default metric to the original values, use the `no default-metric` command.

Parameters *number* Specify a number. The range is from 1 to 16. The default is **1**.

Defaults **1**

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information This command ensures that route information being redistributed is converted to the same metric value.

Related Commands

- [redistribute](#) — allows you to redistribute routes learned by other methods.

description

Enter a description of the RIP routing protocol.

Syntax	<code>description {description}</code> To remove the description, use the <code>no description {description}</code> command.
Parameters	description Enter a description to identify the RIP protocol (80 characters maximum).
Defaults	none
Command Modes	ROUTER RIP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0)	Introduced on the S3048-ON and S4048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 7.7.1.0	Introduced on the E-Series.

Related Commands	<ul style="list-style-type: none">• router rip — enters ROUTER mode on the switch.
-------------------------	--

distance

Assign a weight (for prioritization) to all routes in the RIP routing table or to a specific route. Lower weights (“administrative distance”) are preferred.

Syntax	<code>distance weight [ip-address mask [prefix-name]]</code> To return to the default values, use the <code>no distance weight [ip-address mask]</code> command.
Parameters	weight Enter a number from 1 to 255 for the weight (for prioritization). The default is 120 . ip-address (OPTIONAL) Enter the IP address, in dotted decimal format (A.B.C.D), of the host or network to receive the new distance metric.

mask If you enter an IP address, also enter a mask for that IP address, in either dotted decimal format or /prefix format (/x).

prefix-name (OPTIONAL) Enter a configured prefix list name.

Defaults weight = 120

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- **default-metric** — assigns one distance metric to all routes learned using the `redistribute` command.

distribute-list in

Configure a filter for incoming routing updates.

Syntax `distribute-list prefix-list-name in [interface]`

To delete the filter, use the `no distribute-list prefix-list-name in` command.

Parameters

prefix-list-name Enter the name of a configured prefix list.

interface (OPTIONAL) Identifies the interface type slot/port as one of the following:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Port Channel interface, enter the keywords `port-channel` then a number.
- For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.29.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip prefix-list](#) — enters PREFIX-LIST mode and configures a prefix list.

distribute-list out

Configure a filter for outgoing routing updates.

Syntax `distribute-list prefix-list-name out [interface | bgp | connected | isis | ospf | static]`

To delete the filter, use the `no distribute-list prefix-list-name out` command.

Parameters

prefix-list-name Enter the name of a configured prefix list.

interface (OPTIONAL) Identifies the interface type slot/port as one of the following:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Port Channel interface, enter the keywords `port-channel` then a number.
- For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.

connected (OPTIONAL) Enter the keyword `connected` to filter only directly connected routes.

isis	(OPTIONAL) Enter the keyword <code>isis</code> to filter only IS-IS routes.
ospf	(OPTIONAL) Enter the keyword <code>ospf</code> to filter all OSPF routes.
static	(OPTIONAL) Enter the keyword <code>static</code> to filter manually configured routes.

Defaults Not configured.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip prefix-list](#) — enters PREFIX-LIST mode and configures a prefix list.

ip poison-reverse

Set the prefix of the RIP routing updates to the RIP infinity value.

Syntax `ip poison-reverse`
To disable poison reverse, use the `no ip poison-reverse` command.

Defaults Disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip split-horizon](#) — sets the RIP routing updates to exclude routing prefixes.

ip rip receive version

To receive specific versions of RIP, set the interface. The RIP version you set on the interface overrides the version command in ROUTER RIP mode.

Syntax `ip rip receive version [1] [2]`
 To return to the default, use the `no ip rip receive version` command.

Parameters

1	(OPTIONAL) Enter the number 1 for RIP version 1.
2	(OPTIONAL) Enter the number 2 for RIP version 2.

Defaults **RIPv1** and **RIPv2**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

If you want the interface to receive both versions of RIP, use the `ip rip receive version 1 2` command.

Related Commands

- [ip rip send version](#) — sets the RIP version for sending RIP traffic on an interface.
- [version](#) — sets the RIP version the switch software uses.

ip rip send version

To send a specific version of RIP, set the interface. The version you set on the interface overrides the version command in ROUTER RIP mode.

Syntax

`ip rip send version [1] [2]`

To return to the default value, use the `no ip rip send version` command.

Parameters

- 1** (OPTIONAL) Enter the number 1 for RIP version 1. The default is RIP version 1.
- 2** (OPTIONAL) Enter the number 2 for RIP version 2.

Defaults

RIPv1

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

To enable the interface to send both version of RIP packets, use the `ip rip send version 1 2` command.

Related Commands

- [ip rip receive version](#) — sets the RIP version for the interface to receive traffic.
- [version](#) — sets the RIP version for the switch software.

ip split-horizon

Enable split-horizon for RIP data on the interface. As described in RFC 2453, the split-horizon scheme prevents any routes learned over a specific interface to be sent back out that interface.

Syntax

`ip split-horizon`

To disable split-horizon, use the `no ip split-horizon` command.

Defaults

Enabled

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip poison-reverse](#) — sets the prefix for RIP routing updates.

maximum-paths

Set RIP to forward packets over multiple paths.

Syntax	<code>maximum-paths number</code> To return to the default values, use the <code>no maximum-paths</code> commands.
Parameters	number Enter the number of paths. The range is from 1 to 16. The default is 4 paths.
Defaults	4
Command Modes	ROUTER RIP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information RIP supports a maximum of 16 ECMP paths.

neighbor

Define a neighbor router with which to exchange RIP information.

Syntax	<code>neighbor ip-address</code> To delete a neighbor setting, use the <code>no neighbor ip-address</code> command.
Parameters	ip-address Enter the IP address, in dotted decimal format, of a router with which to exchange information.

Defaults Not configured.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information When a neighbor router is identified, unicast data exchanges occur. Multiple neighbor routers are possible. To ensure that only specific interfaces are receiving and sending data, use the `passive-interface` command with the `neighbor` command.

Related Commands

- `passive-interface` — sets the interface to only listen to RIP broadcasts.

network

Enable RIP for a specified network. To enable RIP on all networks connected to the switch, use this command.

Syntax `network ip-address`

To disable RIP for a network, use the `no network ip-address` command.

Parameters

<i>ip-address</i>	Specify an IP network address in dotted decimal format. You cannot specify a subnet.
--------------------------	--

Defaults No RIP network is configured.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

You can enable an unlimited number of RIP networks.
RIP operates over interfaces configured with any address the `network` command specifies.

offset-list

Specify a number to add to the incoming or outgoing route metrics learned using RIP.

Syntax

```
offset-list prefix-list-name {in | out} offset [interface]
```

To delete an offset list, use the `no offset-list prefix-list-name {in | out} offset [interface]` command.

Parameters

- prefix-list-name** Enter the name of an established Prefix list to determine which incoming routes are modified.
- offset** Enter a number from zero (0) to 16 to be applied to the incoming route metric matching the access list specified. If you set an offset value to zero (0), no action is taken.
- interface** (OPTIONAL) Enter the following keywords and slot/port or number information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

ROUTER RIP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

When the offset metric is applied to an interface, that value takes precedence over an offset value that is not extended to an interface.

Related Commands

- [ip prefix-list](#) — enters PREFIX-LIST mode and configure a prefix list.

output-delay

Set the interpacket delay of successive packets to the same neighbor.

Syntax

`output-delay delay`

To return to the switch software defaults for interpacket delay, use the `no output-delay` command.

Parameters

delay Specify a number of milliseconds as the delay interval. The range is from 8 to 50.

Defaults

Not configured.

Command Modes

ROUTER RIP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

This command is intended for low-speed interfaces.

passive-interface

Suppress routing updates on a specified interface.

Syntax

`passive-interface interface`

To delete a passive interface, use the `no passive-interface interface` command.

Parameters

interface

Enter the following information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Port Channel interface, enter the keywords `port-channel` then a number.
- For a VLAN, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

ROUTER RIP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

Although the passive interface does not send or receive routing updates, the network on that interface still includes in RIP updates sent using other interfaces.

Related Commands

- [neighbor](#) — enables RIP for a specified network.
- [network](#) — defines a neighbor.

redistribute

Redistribute information from other routing instances.

Syntax

`redistribute {connected | static}`

To disable redistribution, use the `no redistribute {connected | static}` command.

Parameters

- connected** Enter the keyword `connected` to specify that information from active routes on interfaces is redistributed.
- static** Enter the keyword `static` to specify that information from static routes is redistributed.

Defaults

Not configured.

Command Modes

ROUTER RIP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

To redistribute the default route (0.0.0.0/0), configure the `default-information originate` command.

Related Commands

- [default-information originate](#) — generates a default route for RIP traffic.

redistribute isis

Redistribute routing information from an IS-IS instance.

Syntax

```
redistribute isis [tag] [level-1 | level-1-2 | level-2] [metric metric-value] [route-map map-name]
```

To disable redistribution, use the `no redistribute isis [tag] [level-1 | level-1-2 | level-2] [metric metric-value] [route-map map-name]` command.

Parameters

tag	(OPTIONAL) Enter the name of the IS-IS routing process.
level-1	(OPTIONAL) Enter the keywords <code>level-1</code> to redistribute only IS-IS Level-1 routes.
level-1-2	(OPTIONAL) Enter the keywords <code>level-1-2</code> to redistribute both IS-IS Level-1 and Level-2 routes.
level-2	(OPTIONAL) Enter the keywords <code>level-2</code> to redistribute only IS-IS Level-2 routes.
metric metric-value	(OPTIONAL) Enter the keyword <code>metric</code> then a number as the metric value. The range is from 0 to 16.
route-map map-name	(OPTIONAL) Enter the keywords <code>route-map</code> then the name of a configured route map.

Defaults

Not configured.

Command Modes

ROUTER RIP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
pre- 6.2.1.1	Introduced on the E-Series.

redistribute ospf

Redistribute routing information from an OSPF process.

Syntax	<code>redistribute ospf process-id [match external {1 2} match internal metric metric-value] [route-map map-name]</code> To disable redistribution, use the <code>no redistribute ospf process-id [match external {1 2} match internal metric metric-value] [route-map map-name]</code> command.
Parameters	<p>process-id Enter a number that corresponds to the OSPF process ID to redistribute. The range is from 1 to 65355.</p> <p>match external {1 2} (OPTIONAL) Enter the keywords <code>match external</code> then the numbers 1 or 2 to indicate that external 1 routes or external 2 routes should be redistributed.</p> <p>match internal (OPTIONAL) Enter the keywords <code>match internal</code> to indicate that internal routes should be redistributed.</p> <p>metric metric-value (OPTIONAL) Enter the keyword <code>metric</code> then a number as the metric value. The range is from 0 to 16.</p> <p>route-map map-name (OPTIONAL) Enter the keywords <code>route-map</code> then the name of a configured route map.</p>
Defaults	Not configured.
Command Modes	ROUTER RIP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.

Version	Description
pre- 6.2.1.1	Introduced on the E-Series.

router rip

To configure and enable RIP, enter ROUTER RIP mode.

Syntax `router rip`
To disable RIP, use the `no router rip` command.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information To enable RIP, assign a network address using the `network` command.

Example

```
DellEMC(conf)# router rip
DellEMC(conf-router_rip)#
```

Related Commands

- [network](#) — enables RIP.
- [exit](#) — returns to CONFIGURATION mode.

show config

Display the changes you made to the RIP configuration. The default values are not shown.

Syntax `show config`

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(conf-router_rip)# show config
!
router rip
 network 172.31.0.0
 passive-interface TenGigabitEthernet 1/1
DellEMC(conf-router_rip)#
```

show ip rip database

Display the routes that RIP learns. If the switch learned no RIP routes, no output is generated.

Syntax `show ip rip database [ip-address mask]`

Parameters

ip-address (OPTIONAL) Specify an IP address in dotted decimal format to view RIP information on that network only. If you enter an IP address, also enter a mask for that IP address.

mask (OPTIONAL) Specify a mask, in /network format, for the IP address.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information The following describes the `show ip rip database` command shown in the following example.

Field	Description
Total number of routes in RIP database	Displays the number of RIP routes stored in the RIP database.
100.10.10.0/24 directly connected	Lists the routes directly connected.
150.100.0.0 redistributed	Lists the routes learned through redistribution.
209.9.16.0/24...	Lists the routes and the sources advertising those routes.

Example

```
DellEMC# show ip rip database
Total number of routes in RIP database: 1624
204.250.54.0/24
    [50/1] via 192.14.1.3, 00:00:12, TenGigabitEthernet 1/15
204.250.54.0/24    auto-summary
203.250.49.0/24
    [50/1] via 192.13.1.3, 00:00:12, TenGigabitEthernet 1/14
203.250.49.0/24    auto-summary
210.250.40.0/24
    [50/2] via 1.1.18.2, 00:00:14, Vlan 18
    [50/2] via 1.1.130.2, 00:00:12, Port-channel 30
210.250.40.0/24    auto-summary
207.250.53.0/24
    [50/2] via 1.1.120.2, 00:00:55, Port-channel 20
    [50/2] via 1.1.130.2, 00:00:12, Port-channel 30
    [50/2] via 1.1.10.2, 00:00:18, Vlan 10
207.250.53.0/24    auto-summary
208.250.42.0/24
```

```
[50/2] via 1.1.120.2, 00:00:55, Port-channel 20
[50/2] via 1.1.130.2, 00:00:12, Port-channel 30
[50/2] via 1.1.10.2, 00:00:18, Vlan 10
208.250.42.0/24      auto-summary
DellEMC#
```

show running-config rip

Display the current RIP configuration.

Syntax show running-config rip

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.7.1.0	Introduced on the C-Series.
7.6.1.0	Introduced on the E-Series.

Example

```
DellEMC# show running-config rip
!
router rip
  distribute-list Test1 in
  distribute-list Test21 out
  network 10.0.0.0
  passive-interface GigabitEthernet 2/1
  neighbor 20.20.20.20
  redistribute ospf 999
  version 2
DellEMC#
```

timers basic

Manipulate the RIP timers for routing updates, invalid, holddown times, and flush time.

Syntax `timers basic update invalid holddown flush`
To return to the default settings, use the `no timers basic` command.

Parameters

- update*** Enter the number of seconds to specify the rate at which RIP routing updates are sent. The range is from zero (0) to 4294967295. The default is **30 seconds**.
- invalid*** Enter the number of seconds to specify the time interval before routing updates are declared invalid or expired. The invalid value should be at least three times the update timer value. The range is from zero (0) to 4294967295. The default is **180 seconds**.
- holddown*** Enter the number of seconds to specify a time interval during which the route is marked as unreachable but still sending RIP packets. The holddown value should be at least three times the update timer value. The range is from zero (0) to 4294967295. The default is **180 seconds**.
- flush*** Enter the number of seconds to specify the time interval during which the route is advertised as unreachable. When this interval expires, the route is flushed from the routing table. The flush value should be greater than the update value. The range is from zero (0) to 4294967295. The default is **240 seconds**.

- Defaults**
- update = **30 seconds**
 - invalid = **180 seconds**
 - holddown = **180 seconds**
 - flush = **240 seconds**

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Usage Information

If you change the timers on one router, also synchronize the timers on all routers in the RIP domain.

version

Specify either RIP version 1 or RIP version 2.

Syntax `version {1 | 2}`

To return to the default version setting, use the `no version` command.

Parameters

1	Enter the keyword 1 to specify RIP version 1.
2	Enter the keyword 2 to specify RIP version 2.

Defaults The Dell EMC Networking OS sends RIPv1 and receives RIPv1 and RIPv2.

Command Modes ROUTER RIP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
pre- 6.2.1.1	Introduced on the E-Series.

Related Commands

- [ip rip receive version](#) — sets the RIP version the interface receives.
- [ip rip send version](#) — sets the RIP version the interface sends.

Remote Monitoring (RMON)

Dell EMC Networking OS RMON is based on IEEE standards, providing both 32-bit and 64-bit monitoring and long-term statistics collection. Dell EMC Networking OS RMON supports the following RMON groups, as defined in RFC-2819, RFC-3273, RFC-3434, and RFC-4502:

- Ethernet Statistics Table; RFC-2819
- Ethernet Statistics High-Capacity Table; RFC-3273, 64bits
- Ethernet History Control Table; RFC-2819
- Ethernet History Table; RFC-2819
- Ethernet History High-Capacity Table; RFC-3273, 64bits
- Alarm Table; RFC-2819
- High-Capacity Alarm Table (64bits); RFC-3434, 64bits
- Event Table; RFC-2819
- Log Table; RFC-2819
- User History; RFC-4502
- Probe Configuration (Capabilities, SoftwareRev, HardwareRev, DateTime and ResetControl); RFC-4502

Dell EMC Networking OS RMON does not support the following statistics:

- etherStatsCollisions
- etherHistoryCollisions
- etherHistoryUtilization

NOTE: Only SNMP GET/GETNEXT access is supported. Configure RMON using the RMON commands. Collected data is lost during a chassis reboot.

Topics:

- [rmon alarm](#)
- [rmon collection history](#)
- [rmon collection statistics](#)
- [rmon event](#)
- [rmon hc-alarm](#)
- [show rmon](#)
- [show rmon alarms](#)
- [show rmon events](#)
- [show rmon hc-alarm](#)
- [show rmon history](#)
- [show rmon log](#)
- [show rmon statistics](#)

rmon alarm

Set an alarm on any MIB object.

Syntax `rmon alarm number variable interval {delta | absolute} rising-threshold value event-number falling-threshold value event-number [owner string]`

To disable the alarm, use the `no rmon alarm number` command.

Parameters

<i>number</i>	Enter the alarm integer number from 1 to 65535. The value must be unique in the RMON alarm table.
<i>variable</i>	Enter the MIB object to monitor. The variable must be in the SNMP OID format; for example, 1.3.6.1.2.1.1.3. The object type must be a 32-bit integer.

<i>interval</i>	Time, in seconds, the alarm monitors the MIB variables; this is the alarmSampleType in the RMON alarm table. The range is from 5 to 3600 seconds.
delta	Enter the keyword <code>delta</code> to test the change between MIB variables. This is the alarmSampleType in the RMON alarm table.
absolute	Enter the keyword <code>absolute</code> to test each MIB variable directly. This is the alarmSampleType in the RMON alarm table.
rising-threshold value event- number	Enter the keywords <code>rising-threshold</code> then the value (32 bit) the rising-threshold alarm is either triggered or reset. Then enter the event-number to trigger when the rising threshold exceeds its limit. This value is the same as the alarmRisingEventIndex or alarmTable of the RMON MIB. If there is no corresponding rising-threshold event, the value is zero.
falling-threshold value event- number	Enter the keywords <code>falling-threshold</code> then the value (32 bit) the falling-threshold alarm is either triggered or reset. Then enter the event-number to trigger when the falling threshold exceeds its limit. This value is the same as the alarmFallingEventIndex or the alarmTable of the RMON MIB. If there is no corresponding falling-threshold event, the value is zero.
owner string	(OPTIONAL) Enter the keyword <code>owner</code> then the owner name to specify an owner for the alarm. This is the alarmOwner object in the alarmTable of the RMON MIB.

Defaults

owner

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

rmon collection history

Enable the RMON MIB history group of statistics collection on an interface.

Syntax `rmon collection history {controlEntry integer} [owner name] [buckets number] [interval seconds]`

To remove a specified RMON history group of statistics collection, use the `no rmon collection history {controlEntry integer}` command.

Parameters

controlEntry <i>integer</i>	Enter the keyword <code>controlEntry</code> to specify the RMON group of statistics using a value. Then enter an integer value from 1 to 65535 that identifies the RMON group of statistics. The integer value must be a unique index in the RMON history table.
owner <i>name</i>	(OPTIONAL) Enter the keyword <code>owner</code> then the owner name to record the owner of the RMON group of statistics.
buckets <i>number</i>	(OPTIONAL) Enter the keyword <code>buckets</code> then the number of buckets for the RMON collection history group of statistics. The bucket range is from 1 to 1000. The default is 50 .
interval <i>seconds</i>	(OPTIONAL) Enter the keyword <code>interval</code> then the number of seconds in each polling cycle. The range is from 5 to 3600 seconds. The default is 1800 seconds .

Defaults none

Command Modes CONFIGURATION INTERFACE (config-if)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

rmon collection statistics

Enable RMON MIB statistics collection on an interface.

Syntax `rmon collection statistics {controlEntry integer} [owner name]`
To remove RMON MIB statistics collection on an interface, use the `no rmon collection statistics {controlEntry integer}` command.

Parameters

controlEntry integer	Enter the keyword <code>controlEntry</code> to specify the RMON group of statistics using a value. Then enter an integer value from 1 to 65535 that identifies the RMON Statistic Table. The integer value must be a unique in the RMON statistic table.
owner name	(OPTIONAL) Enter the keyword <code>owner</code> then the owner name to record the owner of the RMON group of statistics.

Defaults none

Command Modes CONFIGURATION INTERFACE (config-if)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

rmon event

Add an event in the RMON event table.

Syntax `rmon event number [log] [trap community] [description string]`
To disable RMON on an interface, use the `no rmon event number` command.

Parameters

number	Assign an event number in integer format. The range is from 1 to 65535. You must ensure that the value you enter is unique in the RMON event table.
---------------	---

log	(OPTIONAL) Enter the keyword <code>log</code> to generate an RMON event log. This option sets the <code>eventType</code> to either <code>log</code> or <code>log-and-snmptrap</code> in the RMON event table. The default is <code>None</code> .
trap <i>community</i>	(OPTIONAL) Enter the keyword <code>trap</code> followed by the SNMP community string to generate SNMP traps for an RMON event entry. This option sets the <code>eventType</code> to either <code>snmptrap</code> or <code>log-and-snmptrap</code> in the RMON event table. In addition to the SNMP traps, this option also generates a <code>syslog</code> .
description <i>string</i>	(OPTIONAL) Enter the keyword <code>description</code> then a string describing the event.
owner <i>name</i>	(OPTIONAL) Enter the keyword <code>owner</code> then the name of the owner of this event.

Defaults As noted in the *Parameters* section.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

rmon hc-alarm

Set an alarm on any MIB object.

Syntax `rmon hc-alarm number variable interval {delta | absolute} rising-threshold value event-number falling-threshold value event-number [owner string]`

To disable the alarm, use the `no rmon hc-alarm number` command.

Parameters

number Enter the alarm integer number from 1 to 65535. The value must be unique in the RMON alarm table.

variable The MIB object to monitor. The variable must be in the SNMP OID format; for example, 1.3.6.1.2.1.1.3 The object type must be a 64-bit integer.

<i>interval</i>	Time, in seconds, the alarm monitors the MIB variables; this is the alarmSampleType in the RMON alarm table. The range is from 5 to 3600 seconds.
delta	Enter the keyword <code>delta</code> to test the change between MIB variables. This is the alarmSampleType in the RMON alarm table.
absolute	Enter the keyword <code>absolute</code> to test each MIB variable directly. This is the alarmSampleType in the RMON alarm table.
rising-threshold value event- number	Enter the keywords <code>rising-threshold</code> then the value (64 bit) the rising-threshold alarm is either triggered or reset. Then enter the event-number to trigger when the rising threshold exceeds its limit. This value is the same as the alarmRisingEventIndex or alarmTable of the RMON MIB. If there is no corresponding rising-threshold event, the value is zero.
falling-threshold value event- number	Enter the keywords <code>falling-threshold</code> then the value (64 bit) the falling-threshold alarm is either triggered or reset. Then enter the event-number to trigger when the falling threshold exceeds its limit. This value is the same as the alarmFallingEventIndex or the alarmTable of the RMON MIB. If there is no corresponding falling-threshold event, the value is zero.
owner string	(OPTIONAL) Enter the keyword <code>owner</code> then the owner name to specify an owner for the alarm. This is the alarmOwner object in the alarmTable of the RMON MIB.

Defaults

owner

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

show rmon

Display the RMON running status including the memory usage.

Syntax	show rmon
Defaults	none
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example

```
DelleMC# show rmon
RMON status
total memory used 218840 bytes.
ether statistics table: 8 entries, 4608 bytes
ether history table: 8 entries, 6000 bytes
alarm table: 390 entries, 102960 bytes
high-capacity alarm table: 5 entries, 1680 bytes
event table: 500 entries, 206000 bytes
log table: 2 entries, 552 bytes
DelleMC#
```

show rmon alarms

Display the contents of the RMON alarm table.

Syntax	show rmon alarms [<i>index</i>] [<i>brief</i>]
Parameters	<i>index</i> (OPTIONAL) Enter the table index number to display just that entry.

brief (OPTIONAL) Enter the keyword `brief` to display the RMON alarm table in an easy-to-read format.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example (Index)

```
DellEMC# show rmon alarm 1
RMON alarm entry 1
  sample Interval: 5
  object: 1.3.6.1.2.1.1.3
  sample type: absolute value.
  value: 255161
  alarm type: rising or falling alarm.
  rising threshold: 1, RMON event index: 1
  falling threshold: 501, RMON event index: 501
  alarm owner: 1
  alarm status: OK
DellEMC#
```

Example (Brief)

```
DellEMC# show rmon alarm br
index      SNMP OID
-----
1          1.3.6.1.2.1.1.3
2          1.3.6.1.2.1.1.3
3          1.3.6.1.2.1.1.3
4          1.3.6.1.2.1.1.3
5          1.3.6.1.2.1.1.3
6          1.3.6.1.2.1.1.3
7          1.3.6.1.2.1.1.3
8          1.3.6.1.2.1.1.3
9          1.3.6.1.2.1.1.3
10         1.3.6.1.2.1.1.3
11         1.3.6.1.2.1.1.3
12         1.3.6.1.2.1.1.3
```

```

13      1.3.6.1.2.1.1.3
14      1.3.6.1.2.1.1.3
15      1.3.6.1.2.1.1.3
16      1.3.6.1.2.1.1.3
17      1.3.6.1.2.1.1.3
18      1.3.6.1.2.1.1.3
19      1.3.6.1.2.1.1.3
20      1.3.6.1.2.1.1.3
21      1.3.6.1.2.1.1.3
22      1.3.6.1.2.1.1.3
DellEMC#

```

show rmon events

Display the contents of the RMON event table.

Syntax `show rmon events [index] [brief]`

Parameters

- index** (OPTIONAL) Enter the table index number to display just that entry.
- brief** (OPTIONAL) Enter the keyword `brief` to display the RMON event table in an easy-to-read format.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example (Index)

```

DellEMC(conf)# rmon event 111 -> Default case
DellEMC(conf)# rmon event 112 log -> Only "log" option
DellEMC(conf)# rmon event 113 trap private -> Only "trap" option
DellEMC(conf)# rmon event 114 log trap public-> Both "log" and "trap"

```

```

options
DellEMC(conf)#do show rmon events
RMON event entry 111
  description:
  event type: none.
  event community:
  event last time sent: none
  event owner:
  event status: OK
RMON event entry 112
  description:
  event type: LOG.
  event community:
  event last time sent: none
  event owner:
  event status: OK
RMON event entry 113
  description:
  event type: SNMP TRAP.
  event community: private
  event last time sent: none
  event owner:
  event status: OK
RMON event entry 114
  description:
  event type: LOG and SNMP TRAP.
  event community: public
  event last time sent: none
  event owner:
  event status: OK

```

Example (Brief)

```

DellEMC# show rmon event brief
index      description
-----
1          1
2          2
3          3
4          4
5          5
6          6
7          7
8          8
9          9
10         10
11         11
12         12
13         13
14         14
15         15
16         16
17         17
18         18
19         19
20         20
21         21
22         22
DellEMC#

```

show rmon hc-alarm

Display the contents of RMON High-Capacity alarm table.

Syntax show rmon hc-alarm [*index*] [*brief*]

Parameters

index (OPTIONAL) Enter the table index number to display just that entry.

brief (OPTIONAL) Enter the keyword `brief` to display the RMON High-Capacity alarm table in an easy-to-read format.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example (Index)

```
DelleMC# show rmon hc-alarm 1
RMON high-capacity alarm entry 2
  object: 1.3.6.1.2.1.2.2.1.4.2099844
  sample interval: 10
  sample type: delta value.
  value: 0, value status: positive
  alarm type: rising or falling alarm.
  alarm rising threshold value: positive.
  rising threshold: 500, RMON event index: 3
  alarm falling threshold value: positive.
  falling threshold: 300, RMON event index: 4
  alarm sampling failed 0 times.
  alarm owner:
  alarm storage type: non-volatile.
  alarm status: OK
DelleMC#
```

Example (Brief)

```
DelleMC# show rmon hc-alarm brief
index      SNMP OID
-----
1          1.3.6.1.2.1.1.3
2          1.3.6.1.2.1.1.3
3          1.3.6.1.2.1.1.3
4          1.3.6.1.2.1.1.3
5          1.3.6.1.2.1.1.3
DelleMC#
```

show rmon history

Display the contents of the RMON Ethernet history table.

Syntax	<code>show rmon history [index] [brief]</code>	
Parameters	index	(OPTIONAL) Enter the table index number to display just that entry.
	brief	(OPTIONAL) Enter the keyword <code>brief</code> to display the RMON Ethernet history table in an easy-to-read format
Defaults	none	
Command Modes	EXEC	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example (Index)

```
DellEMC# show rmon history 6001
RMON history control entry 6001
interface: ifIndex.100974631 TenGigabitEthernet 2/1
bucket requested: 1
bucket granted: 1
sampling interval: 5 sec
owner: 1
status: OK
DellEMC#
```

Example (Brief)

```
DellEMC# show rmon history brief
index ifIndex interface
-----
6001 100974631 TenGigabitEthernet 2/2
6002 100974631 TenGigabitEthernet 2/2
6003 101236775 TenGigabitEthernet 2/1
6004 101236775 TenGigabitEthernet 2/1
```

```

9001 134529054 TenGigabitEthernet 3/2
9002 134529054 TenGigabitEthernet 3/2
9003 134791198 TenGigabitEthernet 3/1
9004 134791198 TenGigabitEthernet 3/1
DellEMC#

```

show rmon log

Display the contents of the RMON log table.

Syntax `show rmon log [index] [brief]`

Parameters

- index*** (OPTIONAL) Enter the table index number to display just that entry.
- brief*** (OPTIONAL) Enter the keyword `brief` to display the RMON log table in an easy-to-read format.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information The log table has a maximum of 500 entries. If the log exceeds that maximum, the oldest log entry is purged to allow room for the new entry.

Example (Index)

```

DellEMC# show rmon log 2
RMON log entry, alarm table index 2, log index 1
  log time: 14638 (THU AUG 12 22:10:40 2004)
  description: 2
DellEMC#

```

Example (Brief)

```
DellEMC# show rmon log br
eventIndex      description
-----
2                2
4                4
DellEMC#
```

show rmon statistics

Display the contents of RMON Ethernet statistics table.

Syntax `show rmon statistics [index] [brief]`

Parameters

index	(OPTIONAL) Enter the table index number to display just that entry.
brief	(OPTIONAL) Enter the keyword <code>brief</code> to display the RMON Ethernet statistics table in an easy-to-read format.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Example (Index)

```
DellEMC# show rmon statistics 6001
RMON statistics entry 6001
  interface: ifIndex.100974631 TenGigabitEthernet 2/1
  packets dropped: 0
  bytes received: 0
  packets received: 0
  broadcast packets: 0
  multicast packets: 0
```

```

CRC error: 0
under-size packets: 0
over-size packets: 0
fragment errors: 0
jabber errors: 0
collision: 0
64bytes packets: 0
65-127 bytes packets: 0
128-255 bytes packets: 0
256-511 bytes packets: 0
512-1023 bytes packets: 0
1024-1518 bytes packets: 0
owner: 1
status: OK
<high-capacity data>
HC packets received overflow: 0
HC packets received: 0
HC bytes received overflow: 0
HC bytes received: 0
HC 64bytes packets overflow: 0
HC 64bytes packets: 0
HC 65-127 bytes packets overflow: 0
HC 65-127 bytes packets: 0
HC 128-255 bytes packets overflow: 0
HC 128-255 bytes packets: 0
HC 256-511 bytes packets overflow: 0
HC 256-511 bytes packets: 0
HC 512-1023 bytes packets overflow: 0
HC 512-1023 bytes packets: 0
HC 1024-1518 bytes packets overflow: 0
HC 1024-1518 bytes packets: 0
DellEMC#

```

Example (Brief)

```

DellEMC# show rmon statistics br
index      ifIndex      interface
-----
6001      100974631    TenGigabitEthernet 2/2
6002      100974631    TenGigabitEthernet 2/2
6003      101236775    TenGigabitEthernet 2/1
6004      101236775    TenGigabitEthernet 2/1
9001      134529054    TenGigabitEthernet 3/2
9002      134529054    TenGigabitEthernet 3/2
9003      134791198    TenGigabitEthernet 3/1
9004      134791198    TenGigabitEthernet 3/1
DellEMC#

```

Rapid Spanning Tree Protocol (RSTP)

The Dell EMC Networking OS implementation of rapid spanning tree protocol (RSTP) is based on the IEEE 802.1w standard spanning-tree protocol. The RSTP algorithm configures connectivity throughout a bridged local area network (LAN) that is comprised of LANs interconnected by bridges.

Dell EMC Networking OS supports RSTP.

Topics:

- [bridge-priority](#)
- [debug spanning-tree rstp](#)
- [description](#)
- [disable](#)
- [forward-delay](#)
- [hello-time](#)
- [max-age](#)
- [protocol spanning-tree rstp](#)
- [show config](#)
- [show spanning-tree rstp](#)
- [spanning-tree rstp](#)
- [tc-flush-standard](#)

bridge-priority

Set the bridge priority for RSTP.

Syntax	<code>bridge-priority <i>priority-value</i></code> To return to the default value, use the <code>no bridge-priority</code> command.
Parameters	<i>priority-value</i> Enter a number as the bridge priority value in increments of 4096. The range is from 0 to 61440. The default is 32768 .
Defaults	32768
Command Modes	CONFIGURATION RSTP (conf-rstp)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [protocol spanning-tree rstp](#) — enters rapid spanning tree mode.

debug spanning-tree rstp

Enable debugging of RSTP and view information on the protocol.

Syntax `debug spanning-tree rstp [all | bpdu interface {in | out} | events]`

To disable debugging, use the `no debug spanning-tree rstp` command.

Parameters

all	(OPTIONAL) Enter the keyword <code>all</code> to debug all spanning tree operations.
bpdu <i>interface</i> {in out}	(OPTIONAL) Enter the keyword <code>bpdu</code> to debug the bridge protocol data units. (OPTIONAL) Enter the keyword <code>interface</code> along with the interface information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port-channel interface, enter the keywords <code>port-channel</code> then the port-channel ID. Optionally, enter an <code>in</code> or <code>out</code> parameter with the optional interface: <ul style="list-style-type: none"> • For Receive, enter <code>in</code>. • For Transmit, enter <code>out</code>.
events	(OPTIONAL) Enter the keyword <code>events</code> to debug RSTP events.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC# debug spanning-tree rstp bpdu tengigabitethernet 2/1 ?
in Receive (in)
out Transmit (out)
```

description

Enter a description of the rapid spanning tree.

Syntax `description {description}`

To remove the description, use the `no description {description}` command.

Parameters *description* Enter a description to identify the rapid spanning tree (80 characters maximum).

Defaults none

Command Modes SPANNING TREE (The prompt is "config-rstp".)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
pre-7.7.1.0	Introduced.

Related Commands

- [protocol spanning-tree rstp](#) — enters SPANNING TREE mode on the switch.

disable

Disable RSTP globally on the system.

Syntax	<code>disable</code> To enable Rapid Spanning Tree Protocol, use the <code>no disable</code> command.
Defaults	RSTP is disabled.
Command Modes	CONFIGURATION RSTP (conf-rstp)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands	<ul style="list-style-type: none">protocol spanning-tree rstp — enters SPANNING TREE mode on the switch.
-------------------------	--

forward-delay

Configure the amount of time the interface waits in the Listening State and the Learning State before transitioning to the Forwarding State.

Syntax	<code>forward-delay seconds</code> To return to the default setting, use the <code>no forward-delay</code> command.
Parameters	seconds Enter the number of seconds that Dell EMC Networking OS waits before transitioning RSTP to the forwarding state. The range is from 4 to 30. The default is 15 seconds .
Defaults	15 seconds
Command Modes	CONFIGURATION RSTP (conf-rstp)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [hello-time](#) — changes the time interval between BPDUs.
- [max-age](#) — changes the wait time before RSTP refreshes the protocol configuration information.

hello-time

Set the time interval between the generation of the RSTP bridge protocol data units (BPDUs).

Syntax `hello-time [milli-second] seconds`

To return to the default value, use the `no hello-time` command.

Parameters

seconds	Enter a number as the time interval between transmission of BPDUs. The range is from 1 to 10 seconds. The default is 2 seconds .
milli-second	Enter the keywords <code>milli-second</code> to configure a hello time on the order of milliseconds. The range is from 50 to 950 milliseconds

Defaults **2 seconds**

Command Modes CONFIGURATION RSTP (conf-rstp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Added the <code>milli-second</code> option to the S-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

The hello time is encoded in BPDUs in increments of 1/256ths of a second. The standard minimum hello time in seconds is 1 second, which is encoded as 256. Millisecond hello times are encoded using values less than 256; the millisecond hello time equals $(x/1000)*256$.

When you configure millisecond hellos, the default hello interval of 2 seconds is still used for edge ports; the millisecond hello interval is not used.

Related Commands

- [forward-delay](#) — changes the wait time before RSTP transitions to the Forwarding state.
- [max-age](#) — changes the wait time before RSTP refreshes the protocol configuration information.

max-age

To maintain configuration information before refreshing that information, set the time interval for the RSTP bridge.

Syntax

`max-age seconds`

To return to the default values, use the `no max-age` command.

Parameters

max-age Enter a number of seconds the Dell EMC Networking OS waits before refreshing configuration information. The range is from 6 to 40 seconds. The default is **20 seconds**.

Defaults

20 seconds

Command Modes

CONFIGURATION RSTP (conf-rstp)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- `forward-delay` — changes the wait time before RSTP transitions to the Forwarding state.
- `hello-time` — changes the time interval between BPDUs.

protocol spanning-tree rstp

To configure RSTP, enter RSTP mode.

Syntax `protocol spanning-tree rstp`
 To exit RSTP mode, use the `exit` command.

Defaults Not configured

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

RSTP is not enabled when you enter RSTP mode. To enable RSTP globally on the system, use the `no disable` command from RSTP mode.

Example

```
DellEMC(conf)# protocol spanning-tree rstp
DellEMC(config-rstp)# no disable
```

Related Commands

- `disable` — disables RSTP globally on the system.

show config

View the current configuration for the mode. Only non-default values are displayed.

Syntax `show config`

Command Modes CONFIGURATION RSTP (conf-rstp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(conf-rstp)# show config
!
protocol spanning-tree rstp
  no disable
  bridge-priority 16384
```

show spanning-tree rstp

Display the RSTP configuration.

Syntax `show spanning-tree rstp [brief] [guard]`

Parameters **brief** (OPTIONAL) Enter the keyword `brief` to view a synopsis of the RSTP configuration information.

guard (OPTIONAL) Enter the keyword `guard` to display the type of guard enabled on an RSTP interface and the current port state.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Added support for the optional <code>guard</code> keyword on the C-Series, S-Series, and E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.4.1.0	Expanded to display the port error disable state (EDS) caused by loopback BPDU inconsistency.
6.2.1.1	Introduced on the E-Series.

Usage Information The following describes the `show spanning-tree rstp guard` command shown in the following example.

Field	Description
Interface Name	RSTP interface.
Instance	RSTP instance.
Sts	Port state: root-inconsistent (INCON Root), forwarding (FWD), listening (LIS), blocking (BLK), disabled (DIS), or shut down (EDS Shut).
Guard Type	Types of STP guard configured (Root, Loop, or BPDU guard)

Example (Brief)

```
DelleMC# show spanning-tree rstp brief
Executing IEEE compatible Spanning Tree Protocol
Root ID Priority 8192, Address 0001.e805.e306
Root Bridge hello time 4, max age 20, forward delay 15
Bridge ID Priority 16384, Address 0001.e801.6aa8
Configured hello time 2, max age 20, forward delay 15
Interface                               Designated
Name   PortID Prio Cost Sts Cost      Bridge ID      PortID
-----
Te 4/2 128.418 128 20000 FWD 20000 16384 0001.e801.6aa8 128.418
```

```

Te 4/1 128.419 128 20000 FWD 20000 16384 0001.e801.6aa8 128.419
Te 4/8 128.426 128 20000 FWD 20000 8192 0001.e805.e306 128.130
Te 4/9 128.427 128 20000 BLK 20000 8192 0001.e805.e306 128.131

```

```

Interface
Name      Role PortID Prio Cost Sts Cost Link-type Edge
-----
Te 4/2 Desg 128.418 128 20000 FWD 20000 P2P Yes
Te 4/1 Desg 128.419 128 20000 FWD 20000 P2P Yes
Te 4/8 Root 128.426 128 20000 FWD 20000 P2P No
Te 4/9 Altr 128.427 128 20000 BLK 20000 P2P No
DelleMC#

```

Example (EDS, LBK)

i **NOTE:** "LBK_INC" (bold) means Loopback BPDU Inconsistency.

```

DelleMC# show spanning-tree rstp br
Executing IEEE compatible Spanning Tree Protocol
Root ID Priority 32768, Address 0001.e801.6aa8
Root Bridge hello time 2, max age 20, forward delay 15
Bridge ID Priority 32768, Address 0001.e801.6aa8
We are the root
Configured hello time 2, max age 20, forward delay 15

```

```

Interface                               Designated
Name      PortID Prio Cost Sts Cost      Bridge ID PortID
-----
Te 1/1 128.257 128 20000 EDS 0 32768 0001.e801.6aa8 128.257
Interface
Name      Role PortID      Prio Cost Sts Cost Link-type Edge
-----
Te 1/1 ErrDis 128.257 128 20000 EDS 0 P2P No

```

```

DelleMC# show spanning-tree rstp
Root Identifier has priority 32768, Address 0001.e801.6aa8
Root Bridge hello time 2, max age 20, forward delay 15, max hops 0
Bridge Identifier has priority 32768, Address 0001.e801.6aa8
Configured hello time 2, max age 20, forward delay 15, max hops 0
We are the root
Current root has priority 32768, Address 0001.e801.6aa8
Number of topology changes 1, last change occurred 00:00:31 ago on Te 1/1
Port 257 (TenGigabitEthernet 1/1) is LBK_INC Discarding
Port path cost 20000, Port priority 128, Port Identifier 128.257
Designated root has priority 32768, address 0001.e801.6aa8
Designated bridge has priority 32768, address 0001.e801.6aa8
Designated port id is 128.257, designated path cost 0
Number of transitions to forwarding state 1
BPDU : sent 27, received 9
The port is not in the Edge port mode

```

Example (Guard)

```

DelleMC# show spanning-tree rstp guard
Interface
Name      Instance Sts      Guard type
-----
Te 1/1 0      INCON(Root) Rootguard
Te 1/2 0      FWD      Loopguard
Te 1/3 0      BLK      Bpduguard

```

spanning-tree rstp

Configure an RSTP interface with one of these settings: port cost, edge port with optional bridge port data unit (BPDU) guard, port priority, loop guard, or root guard.

Syntax

```

spanning-tree rstp {cost port-cost | edge-port [bpduguard [shutdown-on-violation]] | priority priority | {loopguard | rootguard}}

```

Parameters

cost <i>port-cost</i>	Enter the keyword <code>cost</code> then the port cost value. The range is from 1 to 200000. The defaults are: <ul style="list-style-type: none">• 100 Mb/s Ethernet interface = 200000• 1-Gigabit Ethernet interface = 20000• 10-Gigabit Ethernet interface = 2000• Port Channel interface with one 100 Mb/s Ethernet = 200000• Port Channel interface with one 1 Gigabit Ethernet = 20000• Port Channel interface with one 10 Gigabit Ethernet = 2000• Port Channel with two 1 Gigabit Ethernet = 18000• Port Channel with two 10 Gigabit Ethernet = 1800• Port Channel with two 100 Mbps Ethernet = 180000
edge-port	Enter the keywords <code>edge-port</code> to configure the interface as a rapid spanning tree edge port.
bpduguard	(OPTIONAL) Enter the keyword <code>portfast</code> to enable Portfast to move the interface into Forwarding mode immediately after the root fails. Enter the keyword <code>bpduguard</code> to disable the port when it receives a BPDU.
shutdown-on-violation	(OPTIONAL) Enter the keywords <code>shutdown-on-violation</code> to hardware disable an interface when a BPDU is received and the port is disabled.
priority <i>priority</i>	Enter keyword <code>priority</code> then a value in increments of 16 as the priority. The range is from 0 to 240. The default is 128 .
loopguard	Enter the keyword <code>loopguard</code> to enable loop guard on an RSTP port or port-channel interface.
rootguard	Enter the keyword <code>rootguard</code> to enable root guard on an RSTP port or port-channel interface.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.2.1	Added support for the optional <code>guard</code> keyword on the C-Series, S-Series, and E-Series.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced the hardware <code>shutdown-on-violation</code> options.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Added the optional bridge port data unit (BPDU) guard.
6.2.1.1	Introduced on the E-Series.

Usage Information

The `BPDU guard` option prevents the port from participating in an active STP topology in case a BPDU appears on a port unintentionally, or is misconfigured, or is subject to a DOS attack. This option places the port into an Error Disable state if a BPDU appears and a message is logged so that the administrator can take corrective action.

NOTE: A port configured as an edge port, on an RSTP switch, immediately transitions to the Forwarding state. Only configure ports connected to end-hosts as edge ports. Consider an edge port similar to a port with a `spanning-tree portfast` enabled.

If you do not enable `shutdown-on-violation`, BPDUs are still sent to the RPM CPU.

You cannot enable STP root guard and loop guard at the same time on a port. For example, if you configure loop guard on a port on which root guard is already configured, the following error message displays: `% Error: RootGuard is configured. Cannot configure LoopGuard.`

Enabling Portfast BPDU guard and loop guard at the same time on a port results in a port that remains in a Blocking state and prevents traffic from flowing through it. For example, when Portfast BPDU guard and loop guard are both configured:

- If a BPDU is received from a remote device, BPDU guard places the port in an Err-Disabled Blocking state and no traffic is forwarded on the port.
- If no BPDU is received from a remote device, loop guard places the port in a Loop-Inconsistent Blocking state and no traffic is forwarded on the port.

Example

```
DelleMC(conf)# interface tengigabitethernet 4/1
DelleMC(conf-if-gi-4/0)# spanning-tree rstp edge-port
DelleMC(conf-if-gi-4/0)# show config
!
interface TenGigabitEthernet 4/1
  no ip address
  switchport
  spanning-tree rstp edge-port
  no shutdown
DelleMC#
```

tc-flush-standard

Enable the MAC address flushing after receiving every topology change notification.

Syntax `tc-flush-standard`
To disable, use the `no tc-flush-standard` command.

Defaults Disabled

Command Modes CONFIGURATION (conf-rstp)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

**Usage
Information**

By default, Dell EMC Networking OS implements an optimized flush mechanism for RSTP. This implementation helps in flushing MAC addresses only when necessary (and less often), allowing for faster convergence during topology changes. However, if a standards-based flush mechanism is needed, you can turn on this *knob* command to enable flushing MAC addresses after receiving every topology change notification.

Software-Defined Networking (SDN)

The Dell EMC Networking OS supports software-defined networking (SDN). For more information, see the *SDN Deployment Guide*.

Security

The commands in this chapter are available on Dell EMC Networking OS.

For configuration details, see the *Security* section in the *Dell EMC Networking OS Configuration Guide*.

i **NOTE:** Dell EMC Networking OS implements LEAP with MSCHAP v2 supplicant.

Topics:

- [AAA Accounting Commands](#)
- [Authorization and Privilege Commands](#)
- [Obscure Password Commands](#)
- [Authentication and Password Commands](#)
- [RADIUS Commands](#)
- [rate-limit](#)
- [replay-protection-window](#)
- [terminate-session](#)
- [TACACS+ Commands](#)
- [Port Authentication \(802.1X\) Commands](#)
- [SSH and SCP Commands](#)
- [Secure DHCP Commands](#)
- [Role-Based Access Control Commands](#)
- [ICMP Vulnerabilities](#)
- [System Security Commands](#)

AAA Accounting Commands

AAA Accounting enables tracking of services that users are accessing and the amount of network resources being consumed by those services. When you enable AAA Accounting, the network server reports user activity to the TACACS+ security server in the form of accounting records. Each accounting record is comprised of accounting AV pairs and is stored on the access control server.

As with authentication and authorization, you must configure AAA Accounting by defining a named list of accounting methods, and then applying that list to various interfaces.

aaa accounting

Enable AAA Accounting and create a record for monitoring the accounting function.

Syntax

```
aaa accounting {system | exec | commands level | role role-name} {name | default}{start-stop | wait-start | stop-only} {tacacs+}
```

To disable AAA Accounting, use the `no aaa accounting {system | exec | command level} {name | default}{start-stop | wait-start | stop-only} {tacacs+} command`.

Parameters

system	Enter the keyword <code>system</code> to send accounting information of any other AAA configuration.
exec	Enter the keyword <code>exec</code> to send accounting information when a user has logged in to EXEC mode.

commands {level role role-name}	Enter the keyword <code>command</code> then a privilege level for accounting of commands executed at that privilege level or enter the keyword <code>role</code> then the role name for accounting of commands executed by a user with that user role.
name default	Enter one of the following: <ul style="list-style-type: none"> • For <code>name</code>, enter a user-defined name of a list of accounting methods. • For <code>default</code>, the default accounting methods used.
start-stop	Enter the keywords <code>start-stop</code> to send a “start accounting” notice at the beginning of the requested event and a “stop accounting” notice at the end of the event.
wait-start	Enter the keywords <code>wait-start</code> to ensure that the TACACS+ security server acknowledges the start notice before granting the user’s process request.
stop-only	Enter the keywords <code>stop-only</code> to instruct the TACACS+ security server to send a “stop record accounting” notice at the end of the requested user process.
tacacs+	Enter the keyword <code>tacacs+</code> to use TACACS+ data for accounting. The Dell EMC Networking OS currently only supports TACACS+ accounting.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, and MXL
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Usage Information In the example above, TACACS+ accounting is used to track all usage of EXEC command and commands on privilege level 15.

Privilege level 15 is the default. If you want to track usage at privilege level 1 for example, use the `aaa accounting command 1` command.

Example

```
DellEMC(conf)# aaa accounting exec default start-stop tacacs+
DellEMC(conf)# aaa accounting command 15 default start-stop tacacs+
```

```
DellEMC(conf)# aaa accounting command role secaadmin default start-stop tacacs+
```

Related Commands

- [enable password](#) — changes the password for the `enable` command.
- [login authentication](#) — enables AAA login authentication on the terminal lines.
- [password](#) — creates a password.
- [tacacs-server host](#) — specifies a TACACS+ server host.

accounting

Apply an accounting method list to terminal lines.

Syntax `accounting {exec | commands {level | role role-name} method-list`

Parameters

<i>exec</i>	Enter the keyword <code>exec</code> to apply an EXEC level accounting method list.
<i>commands {level role role-name}</i>	Enter the keywords <code>commands level</code> to apply an EXEC and CONFIGURATION level accounting method list or enter the keyword <code>role</code> and then the role name for accounting of commands executed by a user with that user role.
<i>method-list</i>	Enter a method list that you defined using the <code>aaa accounting exec</code> or <code>aaa accounting commands</code> .

Defaults none

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Related Commands

- [aaa accounting](#) — enables AAA Accounting and creates a record for monitoring the accounting function.

aaa accounting suppress

Prevent the generation of accounting records of users with the user name value of NULL.

Syntax `aaa accounting suppress null-username`
To permit accounting records to users with user name value of NULL, use the `no aaa accounting suppress null-username` command.

Defaults Accounting records are recorded for all users.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4280T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Usage Information Dell EMC Networking OS issues accounting records for all users on the system, including users whose username string, due to protocol translation, is NULL. For example, a user who comes on line with the `aaa authentication login method-list none` command is applied. To prevent the accounting records from being generated for sessions that do not have user names associated to them, use the `aaa accounting suppress` command.

aaa radius group

Configure the RADIUS server group that is used for Authentication, Authorization and Accounting.

Syntax `aaa radius group group-name`
To remove the RADIUS group configuration, use the `no aaa radius group group-name` command.

Parameters *group-name* Enter the name of the RADIUS server group.

Defaults none

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

You can use this command to configure the group of RADIUS servers used for Authentication, Authorization, and Accounting purposes.

If the RADIUS group is not configured for Authentication, Authorization, and Accounting, then globally configured RADIUS servers are used for the purposes.

When the RADIUS group is removed, the AAA configuration is also removed.

Example

show accounting

Display the active accounting sessions for each online user.

Syntax `show accounting`

Defaults none

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Added support for roles on the Z9500.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Usage Information

This command steps through all active sessions and then displays the accounting records for the active account functions.

Example

```
DellEMC# show accounting
Active accounted actions on tty2, User admin Priv 1 Role
  Task ID 2, EXEC Accounting record, 00:02:03 Elapsed, service=shell
Active accounted actions on tty3, User ad Priv 15 Role
  Task ID 7, EXEC Accounting record, 00:01:22 Elapsed, service=shell
Active accounted actions on tty4, User ad Priv 15 Role
  Task ID 11, EXEC Accounting record, 00:00:35 Elapsed, service=shell
Active accounted actions on tty5, User ad1 Priv 1 Role sysadmin
  Task ID 16, EXEC Accounting record, 00:00:04 Elapsed, service=shell
DellEMC#
```

Related Commands

- [aaa accounting](#) — enables AAA Accounting and creates a record for monitoring the accounting function.

Authorization and Privilege Commands

To set command line authorization and privilege levels, use the following commands.

authorization

Apply an authorization method list to terminal lines.

Syntax

```
authorization {exec | commands {level | role role-name}} method-list
```

Parameters

exec	Enter the keyword <code>exec</code> to apply an EXEC level authorization method list.
commands {level role role-name}	Enter the keyword <code>commands</code> followed by either a privilege level for accounting of commands executed at that privilege level, or enter the keyword <code>role</code> then the role name for authorization of commands executed by a user with that user role.
method-list	Enter a method list that you defined using the <code>aaa accounting exec</code> or <code>aaa accounting commands</code> .

Defaults

none

Command Modes

LINE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Related Commands

- [aaa authorization commands](#) — sets the parameters that restrict (or permit) a user's access to EXEC and CONFIGURATION level commands.
- [aaa authorization exec](#) — sets the parameters that restrict (or permit) a user's access to EXEC level commands.

aaa authorization commands

Set parameters that restrict (or permit) a user's access to EXEC and CONFIGURATION level commands.

Syntax

```
aaa authorization commands {level | role role-name}{name|default} {local | tacacs+ | none}
```

Undo a configuration with the `no aaa authorization commands {level | role role-name} {name|default} {local | tacacs+ | none} command`.

Parameters

commands level	Enter the keyword <code>commands</code> then the command privilege level for command level authorization.
role role-name	Enter the keyword <code>role</code> then the role name.
name	Define a name for the list of authorization methods.
default	Define the default list of authorization methods.
local	Use the authorization parameters on the system to perform authorization.
tacacs+	Use the TACACS+ protocol to perform authorization.
none	Enter the keyword <code>none</code> to apply no authorization.

Defaults

none

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Added support for RADIUS.

Usage Information

Certain TACACS+ servers do not authenticate the device if you use the `aaa authorization commands level default local tacacs+ command`. To resolve the issue, use the `aaa authorization commands level default tacacs+ local command`.

aaa authorization config-commands

Set parameters that restrict (or permit) a user's access to EXEC level commands.

Syntax `aaa authorization config-commands`
 Disable authorization checking for CONFIGURATION level commands using the `no aaa authorization config-commands` command.

Defaults Enabled when you configure `aaa authorization commands` command.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the E-Series.

Usage Information

By default, the `aaa authorization` commands command configures the system to check both EXEC level and CONFIGURATION level commands. Use the command `no aaa authorization config-commands` to enable only EXEC-level command checking.

aaa authorization exec

Set parameters that restrict (or permit) a user's access to EXEC-level commands.

Syntax

```
aaa authorization exec {name | default} {local || tacacs+ || if-
authenticated || none}
```

To disable authorization checking for EXEC level commands, use the `no aaa authorization exec` command.

Parameters

name	Define a name for the list of authorization methods.
default	Define the default list of authorization methods.
local	Use the authorization parameters on the system to perform authorization.
tacacs+	Use the TACACS+ protocol to perform authorization.
none	Enter the keyword <code>none</code> to apply no authorization.

Defaults

none

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Added support for RADIUS.

privilege level (CONFIGURATION mode)

Change the access or privilege level of one or more commands.

Syntax	<code>privilege mode {level level command reset command}</code> To delete access to a level and command, use the <code>no privilege mode level level command</code> command.
Parameters	<p>mode Enter one of the following keywords as the mode for which you are controlling access:</p> <ul style="list-style-type: none"> • <code>configure</code> for CONFIGURATION mode • <code>exec</code> for EXEC mode • <code>interface</code> for INTERFACE modes • <code>line</code> for LINE mode • <code>route-map</code> for ROUTE-MAP mode • <code>router</code> for ROUTER OSPF, ROUTER RIP, ROUTER ISIS and ROUTER BGP modes <p>level level Enter the keyword <code>level</code> then a number for the access level. The range is from 0 to 15. Level 1 is EXEC mode and Level 15 allows access to all CLI modes and commands.</p> <p>reset Enter the keyword <code>reset</code> to return the security level to the default setting.</p> <p>command Enter the command's keywords to assign the command to a certain access level. You can enter one or all of the keywords.</p>
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information To define a password for the level to which you are assigning privilege or access, use the `enable password` command.

privilege level (LINE mode)

Change the access level for users on the terminal lines.

Syntax `privilege level level`
To delete access to a terminal line, use the `no privilege level level` command.

Parameters `level level` Enter the keyword `level` then a number for the access level. The range is from 0 to 15.
Level 1 is EXEC mode and Level 15 allows access to all CLI modes.

Defaults `level = 15`

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Obscure Password Commands

To enable the obscure password, use the following commands.

service obscure-passwords

Enable the obscuring of passwords and keys.

Syntax `service obscure-passwords`
Enable the obscuring of passwords and keys, including RADIUS, TACACS+ keys, router authentication strings, VRRP authentication, use the `service obscure-passwords` command.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Introduced on the S4810, S4820T, S5000, S6000, Z9000, Z9500, MXL

Usage Information By default, the `service password-encryption` command stores encrypted passwords. For greater security, you can also use the `service obscure-passwords` command to prevent a user from reading the passwords and keys, including RADIUS, TACACS+ keys, router authentication strings, VRRP authentication by obscuring this information. Passwords and keys are stored encrypted in the configuration file and by default are displayed in the encrypted form when the configuration is displayed. Enabling the `service obscure-passwords` command displays asterisks instead of the encrypted passwords and keys. This command prevents a user from reading these passwords and keys by obscuring this information with asterisks.

Password obscuring masks the password and keys for display only but does not change the contents of the file. The string of asterisks is the same length as the encrypted string for that line of configuration. To verify that you have successfully obscured passwords and keys, use the `show running-config` command or `show startup-config` command.

If you are using role-based access control (RBAC), only the system administrator and security administrator roles can enable the `service obscure-password` command.

Related Commands

- [show running-config](#)— Display the current configuration and display changes from the default values.
- [service password-encryption](#)— Encrypts all passwords configured in the system.

Authentication and Password Commands

To manage access to the system, use the following the commands.

aaa authentication enable

Configure AAA Authentication method lists for user access to EXEC privilege mode (the “Enable” access).

Syntax `aaa authentication enable {default | method-list-name} method [... method2]`
To return to the default setting, use the `no aaa authentication enable {default | method-list-name} method [... method2]` command.

Parameters

default	Enter the keyword <code>default</code> then the authentication methods to use as the default sequence of methods for the Enable login. The default is <code>default enable</code> .
<i>method-list-name</i>	Enter a text string (up to 16 characters long) to name the list of enabled authentication methods activated at login.
<i>method</i>	Enter one of the following methods: <ul style="list-style-type: none">• <code>enable</code>: use the password the <code>enable password</code> command defines in CONFIGURATION mode.• <code>line</code>: use the password the <code>password</code> command defines in LINE mode.• <code>none</code>: no authentication.• <code>radius</code>: use the RADIUS servers configured with the <code>radius-server host</code> command.• <code>tacacs+</code>: use the TACACS+ server(s) configured with the <code>tacacs-server host</code> command.
<i>... method2</i>	(OPTIONAL) In the event of a “no response” from the first method, Dell EMC Networking OS applies the next configured method.

Defaults Use the `enable` password.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
6.2.1.0	Introduced on the E-Series.

Usage Information

By default, the `Enable password` is used. If you configure `aaa authentication enable default`, Dell EMC Networking OS uses the methods defined for `Enable access` instead.

Methods configured with the `aaa authentication enable` command are evaluated in the order they are configured. If authentication fails using the primary method, Dell EMC Networking OS employs the second method (or third method, if necessary) automatically. The fallback to the second method would happen only if the authentication failure is due to a non-reachable server or invalid TACACS server key. The fallback would not occur if the authentication failure is due to invalid credentials. For example, if the TACACS+ server is reachable, but the server key is invalid, Dell EMC Networking OS proceeds to the next authentication method.

Related Commands

- [enable password](#) — changes the password for the `enable` command.
- [login authentication](#) — enables AAA login authentication on the terminal lines.
- [password](#) — creates a password.
- [radius-server host](#) — specifies a RADIUS server host.
- [tacacs-server host](#) — specifies a TACACS+ server host.

aaa authentication login

Configure AAA Authentication method lists for user access to EXEC mode (`Enable log-in`).

Syntax

```
aaa authentication login {method-list-name | default} method [... method4]
```

To return to the default setting, use the `no aaa authentication login {method-list-name | default}` command.

Parameters

<i>method-list-name</i>	Enter a text string (up to 16 characters long) as the name of a user-configured method list that can be applied to different lines.
default	Enter the keyword <code>default</code> to specify that the method list specified is the default method for all terminal lines.
<i>method</i>	Enter one of the following methods: <ul style="list-style-type: none"> • <code>enable</code>: use the password the <code>enable password</code> command defines in CONFIGURATION mode. Not available if <code>role-only</code> is in use. • <code>line</code>: use the password the <code>password</code> command defines in LINE mode. Not available if <code>role-only</code> is in use. • <code>local</code>: use the password for the userid contained in the local password database. • <code>none</code>: no authentication. Not available if <code>role-only</code> is in use. • <code>radius</code>: use the RADIUS servers configured with the <code>radius-server host</code> command. • <code>tacacs+</code>: use the TACACS+ servers configured with the <code>tacacs-server host</code> command.
<i>... method4</i>	(OPTIONAL) Enter up to four additional methods. In the event of a “no response” from the first method, the system applies the next configured method (up to four configured methods).

Defaults

Not configured (that is, no authentication is performed).

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Included a prompt to force the users to re-authenticate, when re-authentication is enabled.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Added support for roles Z9500.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Usage Information

By default, the locally configured username password is used. If you configure `aaa authentication login default`, Dell EMC Networking OS uses the methods this command defines for login instead.

Methods configured with the `aaa authentication login` command are evaluated in the order they are configured. If users encounter an error with the first method listed, Dell EMC Networking OS applies the next method configured. If users fail the first method listed, no other methods are applied. The only exception is the local method. If the user's name is not listed in the local database, the next method is applied. If the correct user name/password combination is not entered, the user is not allowed access to the switch.

NOTE: If authentication fails using the primary method, Dell EMC Networking OS employs the second method (or third method, if necessary) automatically. For example, if the TACACS+ server is reachable, but the server key is invalid, Dell EMC Networking OS proceeds to the next authentication method. The TACACS+ is incorrect, but the user is still authenticated by the secondary method.

After configuring the `aaa authentication login` command, configure the `login authentication` command to enable the authentication scheme on terminal lines.

Connections to the SSH server work with the following login mechanisms: local, radius, and tacacs.

Related Commands

- [login authentication](#) — enables AAA login authentication on the terminal lines.
- [password](#) — creates a password.
- [radius-server host](#) — specifies a RADIUS server host.
- [tacacs-server host](#) — specifies a TACACS+ server host.

aaa reauthenticate enable

Enable re-authentication of user whenever there is a change in the authenticators.

Syntax `aaa reauthenticate enable`

To disable the re-authentication option, use the `no aaa reauthenticate enable` command.

Defaults Disabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced this command.

Usage Information

When an operating system enables to change the user authenticators, the users might access resources and perform tasks that they do not have authorization.

Once re-authentication is enabled, Dell EMC Networking OS prompts the users to re-authenticate whenever there is a change in authenticators.

The change in authentication happens when:

- Add or remove an authentication server (RADIUS/TACACS+)
- Modify an AAA authentication/authorization list
- Change to role-only (RBAC) mode

The re-authentication is also applicable for authenticated 802.1x devices. When there is a change in the authentication servers, the supplicants connected to all the ports are forced to re-authenticate.

Example

```
DellEMC(config)#aaa reauthenticate enable
```

```
DellEMC(config)#aaa authentication login vty_auth_list radius  
Force all logged-in users to re-authenticate (y/n)?
```

```
DellEMC(config)#radius-server host 192.100.0.12  
Force all logged-in users to re-authenticate (y/n)?
```

access-class

Restrict incoming connections to a particular IP address in a defined IP access control list (ACL).

Syntax `access-class access-list-name`

To delete a setting, use the `no access-class` command.

Parameters **access-list-name** Enter the name of an established IP Standard ACL.

Defaults Not configured.

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Related Commands

- [line](#) — applies an authentication method list to the designated terminal lines.
- [ip access-list standard](#) — names (or selects) a standard access list to filter based on the IP address.
- [ip access-list extended](#) — names (or selects) an extended access list based on the IP addresses or protocols.

enable password

Change the password for the `enable` command.

Syntax	<code>enable password [level level] [encryption-type] password</code> To delete a password, use the <code>no enable password [encryption-type] password [level level]</code> command.
Parameters	<p>level level (OPTIONAL) Enter the keyword <code>level</code> then a number as the level of access. The range is from 1 to 15.</p> <p>encryption-type (OPTIONAL) Enter the number 7 or 0 as the encryption type. Enter a 7 then a text string as the hidden password. The text string must be a password that was already encrypted by a Dell EMC Networking router. Use this parameter only with a password that you copied from the <code>show running-config</code> file of another Dell EMC Networking router.</p> <p>password Enter a text string, up to 96 characters long, as the clear text password.</p>
Defaults	No password is configured. <code>level = 15</code> .
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.13(0.0)	Changed the maximum length of the password from 32 to 96.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

To control access to command modes, use this command to define a password for a level and use the `privilege level (CONFIGURATION mode)` command.

Passwords must meet the following criteria:

- Start with a letter, not a number.
- Passwords can have a regular expression as the password. To create a password with a regular expression in it, use `CNTL + v` prior to entering regular expression. For example, to create the password `abcd]e`, you type `"abcd CNTL v]e"`. When the password is created, you do not use the `CNTL + v` key combination and enter `"abcd]e"`.

 **NOTE:** The question mark (?) is not a supported character.

Related Commands

- [show running-config](#) — views the current configuration.
- [privilege level \(CONFIGURATION mode\)](#) — controls access to the command modes within the switch.

enable sha256-password

Configure SHA-256 based password for the `enable` command.

Syntax

```
enable sha256-password [level level] [encryption-type] password
```

To delete a password, use the `no enable sha256-password [encryption-type] password [level level]` command.

Parameters

sha256-password	Enter the keyword <code>sha256-password</code> then the <code>encryption-type</code> or the password.
level <i>level</i>	(OPTIONAL) Enter the keyword <code>level</code> then a number as the level of access. The range is from 1 to 15.
<i>encryption-type</i>	(OPTIONAL) Enter the number 8 or 0 as the encryption type. Enter 8 to enter the sha256-based hashed password.
<i>password</i>	Enter a text string, up to 96 characters long, as the clear text password.

Defaults

No password is configured. `level = 15`.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Changed the maximum length of the password from 32 to 96.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON, S6000, S6000-ON, S5000, S4810, S4820T, S3048-ON, S4048-ON, MXL, FN IOM, C9010, S3100, and Z9100-ON.

Related Commands

- [show running-config](#) — views the current configuration.
- [privilege level \(CONFIGURATION mode\)](#) — controls access to the command modes within the switch.

enable restricted

Allows Dell EMC Networking technical support to access restricted commands.

Syntax

`enable restricted [encryption-type] password`

To disallow access to restricted commands, use the `no enable restricted` command.

Parameters

- encryption-type** (OPTIONAL) Enter the number 7 as the encryption type.
- Enter 7 followed a text string as the hidden password. The text string must be a password that was already encrypted by a Dell EMC Networking router.
- Use this parameter only with a password that you copied from the `show running-config` file of another Dell EMC Networking router.
- password** Enter a text string, up to 32 characters long, as the clear text password.

Defaults

Not configured.

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Only Dell EMC Networking Technical Support staff use this command.

enable secret

Change the password for the `enable` command.

Syntax `enable secret [level level] [encryption-type] password`
To delete a password, use the `no enable secret [encryption-type] password [level level]` command.

Parameters

level level (OPTIONAL) Enter the keyword `level` then a number as the level of access. The range is from 1 to 15.

encryption-type (OPTIONAL) Enter the number 5 or 0 as the encryption type.
Enter a 5 then a text string as the hidden password. The text string must be a password that was already encrypted by a Dell EMC Networking router.
Use this parameter only with a password that you copied from the `show running-config` file of another Dell EMC Networking router.

password Enter a text string, up to 32 characters long, as the clear text password.

Defaults No password is configured. `level = 15`.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information To control access to command modes, use this command to define a password for a level and use the `privilege level (CONFIGURATION mode)` command.

Passwords must meet the following criteria:

- Start with a letter, not a number.
- Passwords can have a regular expression as the password. To create a password with a regular expression in it, use `CNTL + v` prior to entering regular expression. For example, to create the password `abcd]e`, you type "`abcd CNTL v]e`". When the password is created, you do not use the `CNTL + v` key combination and enter "`abcd]e`".

 **NOTE:** The question mark (?) is not a supported character.

**Related
Commands**

- [show running-config](#) — views the current configuration.
- [privilege level \(CONFIGURATION mode\)](#) — controls access to the command modes within the switch.

login authentication

To configure authentication for console or remote access, apply an authentication method list.

Syntax

```
login authentication {method-list-name | default}
```

To use the local user/password database for login authentication, use the `no login authentication` command.

Parameters

method-list-name

Enter the keywords `method-list-name` to specify that method list, created in the `aaa authentication login` command, to be applied to the designated terminal line.

default

Enter the keyword `default` to specify that the default method list, created in the `aaa authentication login` command, is applied to the terminal line.

Defaults

No authentication is performed on the console lines. Local authentication is performed on the virtual terminal and auxiliary lines.

Command Modes LINE

**Command
History**

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6.0.0	Revised introductory and usage guidelines description.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

**Usage
Information**

If you configure the `aaa authentication login default` command, the login authentication default command automatically is applied to all terminal lines.

When configuring authentication, consider the following:

- If you configure the default authentication list using the `default` keyword, the list applies it to all the local and remote connections globally, unless you have specified some another authentication list for a specific connection.
- If you configure an authentication lists other than default, you must apply those authentication lists to each connection.
- If you configure the `aaa authentication login default` command, the `login authentication default` command automatically is applied to all terminal lines.
- [aaa authentication login](#) — selects the login authentication methods.

Related Commands

password

Specify a password for users on terminal lines.

Syntax `password [encryption-type] password`

To delete a password, use the `no password password` command.

Parameters

encryption-type (OPTIONAL) Enter either zero (0) or 7 as the encryption type for the password entered. The options are

- 0 is the default and means the password is not encrypted and stored as clear text.
- 7 means that the password is encrypted and hidden.

password Enter a text string up to 96 characters long. The first character of the password must be a letter. You cannot use spaces in the password.

Defaults No password is configured.

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Changed the maximum length of the password from 32 to 96.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS prompts users for these passwords when the method for authentication or authorization used is "line".

Related Commands

- [enable password](#) — sets the password for the `enable` command.
- [login authentication](#) — configures an authentication method to log in to the switch.
- [service password-encryption](#) — encrypts all passwords configured in Dell EMC Networking OS.
- [radius-server key](#) — configures a key for all RADIUS communications between the switch and the RADIUS host server.
- [tacacs-server key](#) — configures a key for communication between a TACACS+ server and client.
- [username](#) — establishes an authentication system based on user names.

password-attributes

Configure the password attributes (strong password).

Syntax

```
password-attributes [min-length number] [max-retry number] [lockout-period minutes][character-restriction [upper number] [lower number] [numeric number] [special-char number]]
```

To return to the default, use the `no password-attributes [min-length number] [max-retry number] [lockout-period minutes] [character-restriction [upper number] [lower number] [numeric number] [special-char number]]` command.

Parameters

min-length <i>number</i>	(OPTIONAL) Enter the keywords <code>min-length</code> then the number of characters. The range is from 0 to 32 characters.
max-retry <i>number</i>	(OPTIONAL) Enter the keywords <code>max-retry</code> then the number of maximum password retries. The range is from 0 to 16.
lockout-period <i>minutes</i>	(OPTIONAL) Enter the keyword <code>lockout-period</code> then the number of minutes. The range is from 1 to 1440 minutes. The default is 0 minutes and the lockout-period is not enabled. This parameter enhances the security of the switch by locking out sessions on the Telnet or SSH sessions for which there has been a consecutive failed login attempts. The console is not locked out.
user-lockout-period <i>minutes</i>	(OPTIONAL) Enter the keyword <code>user-lockout-period</code> then the number of minutes. The range is from 1 to 1440 minutes. The default is 0 minutes and the lockout-period is not enabled. This parameter enhances the security of the switch by locking out the local user account if there are more number of unsuccessful login attempts than what is configured using the <code>max-retry</code> parameter. The default value is 3 times.
character-restriction	(OPTIONAL) Enter the keywords <code>character-restriction</code> to indicate a character restriction for the password.
upper <i>number</i>	(OPTIONAL) Enter the keyword <code>upper</code> then the upper number. The range is from 0 to 31.
lower <i>number</i>	(OPTIONAL) Enter the keyword <code>lower</code> then the lower number. The range is from 0 to 31.
numeric <i>number</i>	(OPTIONAL) Enter the keyword <code>numeric</code> then the numeric number. The range is from 0 to 31.
special-char <i>number</i>	(OPTIONAL) Enter the keywords <code>special-char</code> then the number of special characters permitted. The range is from 0 to 31.

The following special characters are supported:
! " # % & ' () ; < = > ? [\] * + , - . / : ^ _ { | } ~ @ \$

Defaults

none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced lockout-period option on the Z9500.
9.5(0.0)	Introduced <code>lockout-period</code> option on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.3.1.0	Introduced on the E-Series.

Example In the following example, after 5 un-successful login attempts, the session (SSH/TELNET) goes into a locked state for 5 minutes. If all the 10 sessions are locked out with 5 un-successful attempts in each session, no users can login during the lockout-period.

```
DellEMC(conf) # password-attributes max-retry 5 lockout-period 5
```

Related Commands

- [password](#) — specifies a password for users on terminal lines.

secure-cli enable

Enable the secured CLI mode.

Syntax `secure-cli enable`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced this command.

Usage Information The secured CLI mode prevents the users from enhancing the permissions or promoting the privilege levels. After entering the command, save the running-configuration.

Once you save the running-configuration, the secured CLI mode is enabled. If you do not want to enter the secured mode, do not save the running-configuration.

Once saved, to disable the secured CLI mode, you need to manually edit the startup-configuration file and reboot the system.

service password-encryption

Encrypt all passwords configured in Dell EMC Networking OS.

Syntax `service password-encryption`

To store new passwords as clear text, use the `no service password-encryption` command.

Defaults Enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

CAUTION: Encrypting passwords with this command does not provide a high level of security. When the passwords are encrypted, you cannot return them to plain text unless you re-configure them. To remove an encrypted password, use the `no password password` command.

To keep unauthorized people from viewing passwords in the switch configuration file, use the `service password-encryption` command. This command encrypts the clear-text passwords created for user name passwords, authentication key passwords, the privileged command password, and console and virtual terminal line access passwords.

To view passwords, use the `show running-config` command.

show privilege

View your access level.

Syntax `show privilege`

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show privilege
Current privilege level is 15.
DellEMC#

DellEMC# show privilege
Current privilege level is 14.
DellEMC#
DellEMC# show privilege
Current privilege level is 10.
DellEMC#
```

Related Commands

- [privilege level \(CONFIGURATION mode\)](#) — assign access control to different command modes.

show users

Allows you to view information on all users logged in to the switch.

Syntax `show users [all]`

Parameters **all** (OPTIONAL) Enter the keyword `all` to view all terminal lines in the switch.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Added support for roles on the Z9500.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show user` command shown in the following example.

Field	Description
(untitled)	Indicates with an asterisk (*) which terminal line you are using.
Line	Displays the terminal lines currently in use.
User	Displays the user name of all users logged in.
Host(s)	Displays the terminal line status.
Location	Displays the IP address of the user.

Example

```
DellEMC# show users
Authorization Mode: role or privilege
  Line      User              Role              Priv
Host(s)    Location
*  0  console 0          unassigned        1
idle
  2  vty 0      admin            unassigned        1
idle      10.16.127.35
  3  vty 1      ad              unassigned        15
idle      10.16.127.145
  4  vty 2      ad1            sysadmin          1
idle      10.16.127.141
  5  vty 3      ad1            sysadmin          1
idle      10.16.127.145
  6  vty 4      admin          unassigned        1
idle      10.16.127.141
  7  vty 5      ad              unassigned        15
idle      10.16.127.141
DellEMC#
```

Related Commands

- `username` — enables a user.

timeout login response

Specify how long the software waits for the login input (for example, the user name and password) before timing out.

Syntax `timeout login response seconds`

To return to the default values, use the `no timeout login response` command.

Parameters **seconds** Enter a number of seconds the software waits before logging you out. The range is:

- VTY — range is from 1 to 30 seconds, the default is **30 seconds**.
- Console — range is from 1 to 300 seconds, the default is **0 seconds** (no timeout).
- AUX — range is from 1 to 300 seconds, the default is **0 seconds** (no timeout).

Defaults See *Parameters*.

Command Modes LINE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information The software measures the period of inactivity defined in this command as the period between consecutive keystrokes. For example, if your password is “password” you can enter “p” and wait 29 seconds to enter the next letter.

username

Establish an authentication system based on user names.

Syntax `username name [access-class access-list-name] [nopassword | {password | secret | sha256-password} [encryption-type] password] [privilege level] [role role-name]`

If you do not want a specific user to enter a password, use the `nopassword` option.

To delete authentication for a user, use the `no username name` command.

Parameters

Defaults The default encryption type for `password` option is **0**. The default encryption type for `secret` option is **5**. The default encryption type for `sha256-password` option is **8**. The default value of `privilege level` is **1**.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(1.0)	Introduced on the S5048F-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Added support for the <code>sha256-password</code> option for S3100, S3048-ON, S4048-ON, S4810, S4820T, S5000, S6000, S6000-ON, Z9100-ON, MXL, and Z9500.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Added support for the <code>secret</code> option and the MD5 password encryption. Extended the name from 25 to 63 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information To view the defined user names, use the `show running-config user` command.

- Related Commands**
- [password](#) — specifies a password for users on terminal lines.
 - [show running-config](#) — views the current configuration.

RADIUS Commands

The following RADIUS commands are supported by Dell EMC Networking OS.

aaa radius auth-method

Configure the authentication method to use with RADIUS for user access.

Syntax	<code>aaa radius auth-method {pap mschapv2}</code> To undo the RADIUS authentication method configuration, use the <code>no aaa radius auth-method</code> command.				
Parameters	<table><tr><td>pap</td><td>Enter the keyword <code>pap</code> to use the Password Authentication Protocol (PAP) for RADIUS authentication. This protocol uses the username and password attributes in the access-request message sent to the RADIUS server.</td></tr><tr><td>mschapv2</td><td>Enter the keyword <code>mschapv2</code> to use the Microsoft Challenge-Handshake Authentication Protocol (MS-CHAPv2) for RADIUS authentication. This protocol is considered to be more secure than PAP and uses mutual authentication based on a random challenge and challenge response.</td></tr></table>	pap	Enter the keyword <code>pap</code> to use the Password Authentication Protocol (PAP) for RADIUS authentication. This protocol uses the username and password attributes in the access-request message sent to the RADIUS server.	mschapv2	Enter the keyword <code>mschapv2</code> to use the Microsoft Challenge-Handshake Authentication Protocol (MS-CHAPv2) for RADIUS authentication. This protocol is considered to be more secure than PAP and uses mutual authentication based on a random challenge and challenge response.
pap	Enter the keyword <code>pap</code> to use the Password Authentication Protocol (PAP) for RADIUS authentication. This protocol uses the username and password attributes in the access-request message sent to the RADIUS server.				
mschapv2	Enter the keyword <code>mschapv2</code> to use the Microsoft Challenge-Handshake Authentication Protocol (MS-CHAPv2) for RADIUS authentication. This protocol is considered to be more secure than PAP and uses mutual authentication based on a random challenge and challenge response.				
Defaults	PAP				
Command Modes	CONFIGURATION				
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .				
	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.11(2.0P1)</td><td>Introduced the command on all Dell EMC Networking OS platforms.</td></tr></tbody></table>	Version	Description	9.11(2.0P1)	Introduced the command on all Dell EMC Networking OS platforms.
Version	Description				
9.11(2.0P1)	Introduced the command on all Dell EMC Networking OS platforms.				
Usage Information	If an authentication method is not configured using this command, then PAP is used for authentication with the RADIUS server. You can configure the RADIUS authentication method to access the switch using the following applications: Console, Telnet, SSH, REST, and OMI.				

client

Configures trusted DAC clients.

Syntax	<code>client {ipv4-addr ipv6-addr hostname} [vrf vrf-name] [key [encryption-type] key]</code> To undo the DAC client configuration, enter the <code>no client host</code> command.												
Defaults	If VRF is not configured, default VRF is considered.												
Parameters	<table><tr><td>ipv4-addr</td><td>Enter the keyword <code>ipv4-addr</code> to specify the IPv4 address of the DAC.</td></tr><tr><td>ipv6-addr</td><td>Enter the keyword <code>ipv6-addr</code> to specify the IPv6 address of the DAC.</td></tr><tr><td>hostname</td><td>Enter the keyword <code>hostname</code> to enter the name of the host.</td></tr><tr><td>vrf vrf-name</td><td>Enter the keyword <code>vrf</code> followed by the name of the VRF to associate a VRF with the client.</td></tr><tr><td>key</td><td>(Optional) Enter the keyword <code>key</code> to specify an encryption key.</td></tr><tr><td>encryption-type</td><td>(Optional) Enter either 0 or 7 as the encryption type for the specified key. The options are:<ul style="list-style-type: none">0 – implies that the key is not encrypted and is stored as clear text.</td></tr></table>	ipv4-addr	Enter the keyword <code>ipv4-addr</code> to specify the IPv4 address of the DAC.	ipv6-addr	Enter the keyword <code>ipv6-addr</code> to specify the IPv6 address of the DAC.	hostname	Enter the keyword <code>hostname</code> to enter the name of the host.	vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF to associate a VRF with the client.	key	(Optional) Enter the keyword <code>key</code> to specify an encryption key.	encryption-type	(Optional) Enter either 0 or 7 as the encryption type for the specified key. The options are: <ul style="list-style-type: none">0 – implies that the key is not encrypted and is stored as clear text.
ipv4-addr	Enter the keyword <code>ipv4-addr</code> to specify the IPv4 address of the DAC.												
ipv6-addr	Enter the keyword <code>ipv6-addr</code> to specify the IPv6 address of the DAC.												
hostname	Enter the keyword <code>hostname</code> to enter the name of the host.												
vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF to associate a VRF with the client.												
key	(Optional) Enter the keyword <code>key</code> to specify an encryption key.												
encryption-type	(Optional) Enter either 0 or 7 as the encryption type for the specified key. The options are: <ul style="list-style-type: none">0 – implies that the key is not encrypted and is stored as clear text.												

- 7 – implies that the key is encrypted and hidden.

key

Enter a string that is the key to be exchanged between the switch and the dynamic authorization client. The key can be up to 42 characters long.

Command Modes • CONF-DYNAMIC-AUTH

Usage Information • It is possible to configure more than one dynamic authorization clients Duplicate (ipv4-addr or ipv6-addr or host-name) configurations are not allowed.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FM-IOM, and MXL.

client-key

Configures global shared key for the trusted DAC clients.

Syntax `client-key [encryption-type] key`

To remove the shared key configuration, enter the `no client-key` command.

Defaults None.

Parameters **encryption-type:** (OPTIONAL) Enter either 0 or 7 as the encryption type for the key entered. The options are:

- 0 — is the default and means the key is not encrypted and stored as clear text.
- 7 — means that the key is encrypted and hidden.

key Enter a string that is the key to be exchanged between the switch and RADIUS servers. It can be up to 42 characters long.

Command Modes • CONF-DYNAMIC-AUTH

Usage Information • Configure global shared key applicable for DA clients. If client configuration has shared key configured, that will take precedence.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

coa-bounce-port

Configure NAS to allow or reject the port bounce RADIUS messages from DAC.

Syntax `coa-bounce-port`

To remove the port bounce configuration, enter the `no coa-bounce-port` command.

Defaults Enabled.

Command Modes • CONF-DYNAMIC-AUTH

Usage Information • Configure `no coa-bounce-port` to drop radius CoA port-bounce requests from the DAC.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

coa-disable-port

Configure NAS to reject disable-port requests from DAC.

Syntax `coa-disable-port`
To undo this configuration, enter the `no coa-disable-port` command.

Defaults Enabled.

Command Modes • CONF-DYNAMIC-AUTH

Usage Information • Configure `no coa-disable-port DAS` to drop radius CoA disable-port requests from DAC.

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

coa-reauthenticate

Configure NAS to re-authenticate dot1x user session requests from DAC.

Syntax `coa-reauthenticate`
To allow or reject re-authentication requests, enter the `no coa-reauthenticate` command.

Defaults Enabled.

Command Modes • CONF-DYNAMIC-AUTH

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

debug radius

View RADIUS transactions to assist with troubleshooting.

Syntax	<code>debug radius</code> To disable debugging of RADIUS, use the <code>no debug radius</code> command.
Defaults	Disabled.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

da-rsp-timeout

Configure timeout value for the back end task to respond to DAC requests.

Syntax	<code>da-rsp-timeout minutes</code> To undo the configuration, enter the <code>no da-rsp-timeout</code> command.
Defaults	10 Minutes.
Parameters	minutes Enter the time out value.
Command Modes	<ul style="list-style-type: none">CONF-DYNAMIC-AUTH
Usage Information	<ul style="list-style-type: none">Time for DAS to wait before the back end response is received.
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> . The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

disconnect-user

Configure NAS to allow or reject DM requests corresponding to AAA users-sessions coming from the DAC.

Syntax `disconnect-user`

To undo this configuration, enter the `no disconnect-user` command.

Defaults Enabled.

Command Modes • CONF-DYNAMIC-AUTH

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

dynamic-auth-enable

Configure NAS to receive and process dynamic authorization messages.

Syntax `dynamic-auth-enable`

To stop NAS from receiving and processing dynamic authorization messages, use the `no dynamic-auth-enable` command.

Defaults Disabled.

Command Modes • CONF-DYNAMIC-AUTH

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

Usage Information If this configuration is not enabled, then dynamic authorization messages are not handled by the NAS.

ip radius source-interface

Specify an interface's IP address as the source IP address for RADIUS connections.

Syntax `ip radius source-interface interface`

To delete a source interface, use the `no ip radius source-interface` command.

Parameters *interface* Enter the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

port

Configures NAS port number to accept CoA or DM requests.

Syntax `port port-number`

To remove the NAS port configuration, enter the `no port` command.

Defaults 3799

Parameters *port-number* Enter the NAS port number to accept CoA and DM requests. The range is from 1 to 65535.

Command Modes • CONF-DYNAMIC-AUTH

Usage Information

- Optionally specify dynamic authorization port number. Default port is 3799.

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

radius dynamic-auth

Enters a new sub-mode, RADIUS-DYNAMIC-AUTH, which enables you to modify dynamic authorization settings.

Syntax

```
radius dynamic-auth
```

To remove the dynamic authorization method for RADIUS users, enter the `no radius dynamic-auth` command.

Defaults

Disabled.

Command Modes

- CONFIGURATION

Usage Information

- All dynamic authorization commands are configured by entering this mode.

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

radius-server deadline

Configure a time interval during which non-responsive RADIUS servers to authentication requests are skipped.

Syntax

```
radius-server deadline seconds
```

To disable this function or return to the default value, use the `no radius-server deadline` command.

Parameters

seconds

Enter a number of seconds during which non-responsive RADIUS servers are skipped. The range is from 0 to 2147483647 seconds. The default is **0 seconds**.

Defaults

0 seconds

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

radius-server group

Creates or deletes a group of radius servers.

Syntax	<code>radius-server group group-name</code>
Parameters	group-name Enter the group name that denotes the group of RADIUS servers.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Example

```
DellEMC(conf)# radius-server group group1
DellEMC(conf-radius-group)# radius-server host 1.1.1.1 key secret
DellEMC(conf-radius-group)# radius-server host 2.2.2.2 key secret
DellEMC(conf-radius-group)# radius-server vrf vrf1 source-interface
tengigabitethernet 1/36
DellEMC(conf-radius-group)# show config
!
```

```
radius-server group group1
radius-server vrf vrf1 source-interface TenGigabitEthernet 1/36
radius-server host 1.1.1.1 key 7 9a2f3ec0c65c6f41
radius-server host 2.2.2.2 key 7 9a2f3ec0c65c6f41
DellEMC(conf-radius-group) #
```

Related Commands

- [login authentication](#) — sets the database to be checked when a user logs in.
- [radius-server key](#) — sets an authentication key for RADIUS communications.
- [radius-server retransmit](#) — sets the number of times the RADIUS server attempts to send information.
- [radius-server timeout](#) — sets the time interval before the RADIUS server times out.

radius-server host

Configure a RADIUS server host.

Syntax

```
radius-server host {hostname | ipv4-address | ipv6-address} [auth-port
port-number] [retransmit retries] [timeout seconds] [key [encryption-type]
key]
```

Parameters

hostname	Enter the name of the RADIUS server host.
ipv4-address ipv6-address	Enter the IPv4 address (A.B.C.D) or IPv6 address (X:X:X::X) of the RADIUS server host.
auth-port port-number	(OPTIONAL) Enter the keywords <code>auth-port</code> then a number as the port number. The range is from zero (0) to 65535. The default port-number is 1812 .
retransmit retries	(OPTIONAL) Enter the keyword <code>retransmit</code> then a number as the number of attempts. This parameter overwrites the <code>radius-server retransmit</code> command. The range is from zero (0) to 100. The default is 3 attempts .
timeout seconds	(OPTIONAL) Enter the keyword <code>timeout</code> then the seconds the time interval the switch waits for a reply from the RADIUS server. This parameter overwrites the <code>radius-server timeout</code> command. The range is from 0 to 1000. The default is 5 seconds .
key [encryption-type] key	(OPTIONAL) Enter the keyword <code>key</code> then an optional encryption-type and a string up to 42 characters long as the authentication key. The RADIUS host server uses this authentication key and the RADIUS daemon operating on this switch. For the encryption-type, enter either zero (0) or 7 as the encryption type for the key entered. The options are: <ul style="list-style-type: none"> • 0 is the default and means the password is not encrypted and stored as clear text. • 7 means that the password is encrypted and hidden. Configure this parameter last because leading spaces are ignored.

Defaults

Not configured.

Command Modes

- RADIUS SERVER GROUP
- CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Included a prompt to force the users to re-authenticate when there is a change in the RADIUS server list.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added support for IPv6.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Authentication key length increased to 42 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Usage Information

To configure any number of RADIUS server hosts for each server host that is configured, use this command. Dell EMC Networking OS searches for the RADIUS hosts in the order they are configured in the software.

The global default values for the `timeout`, `retransmit`, and `key` optional parameters are applied, unless those values are specified in the `radius-server host` or other commands. To return to the global default values, if you configure the `timeout`, `retransmit`, or `key` values, include those keywords when using the `no radius-server host` command syntax.

You can use duplicate host names or IP addresses among RADIUS groups. However, you cannot use duplicate host names or IP addresses within the same RADIUS group. If a VRF is not configured on the RADIUS group, then servers configured in the group are considered to be on the default VRF. RADIUS servers that are configured in the CONFIGURATION mode are also considered to be on the default VRF.

You must configure the RADIUS group explicitly with the `aaa radius group` command in order for the AAA servers to use the group of RADIUS servers. The 802.1x servers use the group of RADIUS servers based on the VRF where the 802.1x request is received. As a result, it is possible that both globally configured RADIUS servers as well as the group-configured RADIUS servers (without VRF or default VRF) are used for processing the 802.1x requests that are received at the default VRF. The order in which the RADIUS servers are tried depends on the order in which the RADIUS servers are configured.

Example

```
DellEMC(config)#radius-server host 192.100.0.12
Force all logged-in users to re-authenticate (y/n)?
```

```
DellEMC(config)#no radius-server host 192.100.0.12
Force all logged-in users to re-authenticate (y/n)?
```

Related Commands

- [login authentication](#) — sets the database to be checked when a user logs in.
- [radius-server key](#) — sets an authentication key for RADIUS communications.
- [radius-server retransmit](#) — sets the number of times the RADIUS server attempts to send information.
- [radius-server timeout](#) — sets the time interval before the RADIUS server times out.

radius-server vrf

Create an association between a RADIUS server group and a VRF and source interface.

ud

Syntax `radius-server vrf vrf-name [source-interface interface]`

To delete the association between a RADIUS server group and a VRF and source interface, use the `no radius-server vrf vrf-name [source-interface interface]` command.

Parameters

- vrf vrf-name** Enter the keyword `vrf` and then the name of the VRF to associate a RADIUS server group with that VRF.
- interface** Enter the following keywords and slot/port or number information:
 - For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
 - For a port channel interface, enter the keywords `port-channel` then a number.
 - For a Null interface, enter the keyword `null` then the Null interface number.
 - For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes RADIUS SERVER GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

You can use this command to associate a group of RADIUS servers with a VRF and source interface. You can configure the source interface only with the VRF attribute and source interface is optional with the VRF attributes.

If VRF is not configured on the RADIUS group, then the group is considered to be on the default VRF. It is possible to use the default VRF name; however, you cannot configure the source interface with the default VRF as such a configuration results in conflicts between the source interfaces corresponding to the 802.1x supplicants on that default VRF.

RADIUS groups and VRFs have one-to-one mapping. If a VRF is configured with one RADIUS group, then you cannot use the same VRF with another RADIUS group. When the VRF is removed, then the corresponding RADIUS group is also removed automatically.

Example

```
DellEMC(conf)#radius-server group group1
DellEMC(conf-radius-group)#radius-server vrf vrf1 source-interface
tengigabitethernet 1/40

DellEMC(conf)#radius-server group group2
DellEMC(conf-radius-group)#radius-server vrf default
```

radius-server key

Configure a key for all RADIUS communications between the switch and the RADIUS host server.

Syntax `radius-server key [encryption-type] key`
To delete a password, use the `no radius-server key` command.

Parameters

encryption-type (OPTIONAL) Enter either zero (0) or 7 as the encryption type for the key entered. The options are:

- 0 is the default and means the key is not encrypted and stored as clear text.
- 7 means that the key is encrypted and hidden.

key Enter a string that is the key to be exchanged between the switch and RADIUS servers. It can be up to 96 characters long.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.13(0.0)	Changed the maximum length of the password from 32 to 96.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Authentication key length increased to 42 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Usage Information The key configured on the switch must match the key configured on the RADIUS server daemon.

If you configure the `key` parameter in the `radius-server host` command, the key configured with the `radius-server key` command is the default key for all RADIUS communications.

Related Commands

- [radius-server host](#) — configures a RADIUS host.

radius-server retransmit

Configure the number of times the switch attempts to connect with the configured RADIUS host server before declaring the RADIUS host server unreachable.

Syntax `radius-server retransmit retries`
To configure zero retransmit attempts, use the `no radius-server retransmit` command.
To return to the default setting, use the `radius-server retransmit 3` command.

Parameters `retries` Enter a number of attempts that the Dell OS tries to locate a RADIUS server. The range is from zero (0) to 100. The default is **3 retries**.

Defaults **3 retries**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Related Commands

- [radius-server host](#) — configures a RADIUS host.

radius-server timeout

To reply to a request, configure the amount of time the RADIUS client (the switch) waits for a RADIUS host server .

Syntax `radius-server timeout seconds`

To return to the default value, use the `no radius-server timeout` command.

Parameters	<i>seconds</i>	Enter the number of seconds between an unsuccessful attempt and the Dell EMC Networking OS times out. The range is from zero (0) to 1000 seconds. The default is 5 seconds .
Defaults	5 seconds	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

Related Commands	<ul style="list-style-type: none">• radius-server host — configure a RADIUS host.
-------------------------	---

rate-limit

Configure NAS to allow or reject RADIUS dynamic authorization (DA) packets based on the configurable rate limit value.

Syntax	<code>rate-limit <i>packets per minute</i></code> To undo the configuration, enter the <code>no rate-limit</code> command.
Defaults	30 packets per minute.
Parameters	<i>packet per minute</i> Enter the number of packets that you want processed per minute. The range is between 10 to 60 packets per minute.
Command Modes	<ul style="list-style-type: none">• CONF-DYNAMIC-AUTH
Usage Information	<ul style="list-style-type: none">• Packets are dropped after number of packets reaches the configured rate-limit.
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

replay-protection-window

Configure replay protection window period to drop the duplicate packets.

Syntax	<code>replay-protection-window minutes</code> To undo the configuration, enter the <code>no replay-protection-window</code> command.
Defaults	5 Minutes.
Parameters	minutes Enter the number of minutes to drop the packets. The range is from 1 to 10 minutes.
Command Modes	<ul style="list-style-type: none">CONF-DYNAMIC-AUTH
Usage Information	<ul style="list-style-type: none">Duplicate packets are dropped within replay-protection-window period if packet has same source IP address, source UDP port and identifier.
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

terminate-session

Configure NAS to reject dot1x terminate-session requests from DAC.

Syntax	<code>terminate-session</code> To drop the DM terminate-session requests from DAC, enter the <code>no terminate-session</code> command.
Defaults	Enabled.
Command Modes	<ul style="list-style-type: none">CONF-DYNAMIC-AUTH
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.13(0.0)	Introduced on the C9010, S3100, S3048-ON, S4048T-ON, S4048-ON, S5000, S6010-ON, S6000-ON, S6100-ON, S6000, Z9100-ON, Z9500, FN-IOM, and MXL.

TACACS+ Commands

Dell EMC Networking OS supports TACACS+ as an alternate method for login authentication.

tacacs-server group

Creates a group of TACACS servers to be used for Authentication, Authorization, and Accounting..

Syntax `aaa tacacsgroup group-name`
To delete a group of TACACS servers, use the `no tacacs-server group group-name` command.

Parameters **group-name** Enter the name of the TACACS server group.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information If the TACACS group is not configured for Authentication, Authorization, and Accounting, then globally configured TACACS servers are used for the purposes. When the TACACS group is removed, the AAA configuration is also removed.

Example

```
DellEMC(conf)# tacacs-server group group1
DellEMC(conf-tacacs-group)# tacacs-server host 1.1.1.1 key secret
DellEMC(conf-tacacs-group)# tacacs-server host 2.2.2.2 key secret
DellEMC(conf-tacacs-group)# tacacs-server vrf vrf1 source-interface
tengigabitethernet 1/47
DellEMC(conf)# exit
DellEMC(conf)# aaa tacacsgroup group1
DellEMC(conf)#
```

Related Commands

- [aaa authentication login](#) — specifies the login authentication method.
- [tacacs-server key](#) — configures a TACACS+ key for the TACACS server.

debug tacacs+

To assist with troubleshooting, view TACACS+ transactions.

Syntax `debug tacacs+`
To disable debugging of TACACS+, use the `no debug tacacs+` command.

Defaults	Disabled.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.0	Introduced on the E-Series.

ip tacacs source-interface

Specify an interface's IP address as the source IP address for TACACS+ connections.

Syntax	<code>ip tacacs source-interface <i>interface</i></code> To delete a source interface, use the <code>no ip tacacs source-interface</code> command.
---------------	---

Parameters	<p><i>interface</i> Enter the following keywords and the interface information:</p> <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383. • For a port channel interface, enter the keywords <code>port-channel</code> then a number. • For a Null interface, enter the keyword <code>null</code> then the Null interface number. • For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.
-------------------	---

Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

tacacs-server group

Creates a group of TACACS servers.

Syntax `tacacs-server group group-name` To delete a group of TACACS servers, use the `no tacacs-server group group-name` command.

Parameters `group-name` Enter the name of the TACACS server group.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

You can associate a TACACS server group with a VRF.

Example

```
DellEMC(conf)# tacacs-server group group1
DellEMC(conf-tacacs-group)# tacacs-server host 1.1.1.1 key secret
DellEMC(conf-tacacs-group)# tacacs-server host 2.2.2.2 key secret
DellEMC(conf-tacacs-group)# tacacs-server vrf vrf1 source-interface
tengigabitethernet 1/42
DellEMC(conf-tacacs-group)# show config
!
tacacs-server group group1
tacacs-server vrf vrf1 source-interface TenGigabitEthernet 1/42
tacacs-server host 1.1.1.1 key 7 9a2f3ec0c65c6f41
tacacs-server host 2.2.2.2 key 7 9a2f3ec0c65c6f41
DellEMC(conf-tacacs-group)#
```

Related Commands

- [aaa authentication login](#) — specifies the login authentication method.
- [tacacs-server key](#) — configures a TACACS+ key for the TACACS server.

tacacs-server host

Specify a TACACS+ host.

Syntax

```
tacacs-server host {hostname | ipv4-address | ipv6-address} [port number]
[timeout seconds] [key key]
```

Parameters

hostname	Enter the name of the TACACS+ server host.
ipv4-address ipv6-address	Enter the IPv4 address (A.B.C.D) or IPv6 address (X:X:X:X) of the TACACS+ server host.
port number	(OPTIONAL) Enter the keyword <code>port</code> then a number as the port to be used by the TACACS+ server. The range is from zero (0) to 65535. The default is 49 .
timeout seconds	(OPTIONAL) Enter the keyword <code>timeout</code> then the number of seconds the switch waits for a reply from the TACACS+ server. The range is from 0 to 1000. The default is 10 seconds .
key key	(OPTIONAL) Enter the keyword <code>key</code> then a string up to 42 characters long as the authentication key. This authentication key must match the key specified in the <code>tacacs-server key</code> for the TACACS+ daemon.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added support for IPv6.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Authentication key length increased to 42 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

To list multiple TACACS+ servers to be used by the `aaa authentication login` command, configure this command multiple times.

If you are not configuring the switch as a TACACS+ server, you do not need to configure the `port`, `timeout` and `key` optional parameters. If you do not configure a key, the key assigned in the `tacacs-server key` command is used.

You can use duplicate host names or IP addresses among TACACS groups. However, you cannot use duplicate host names or IP addresses within the same TACACS group.

If a VRF is not configured on the TACACS group, then servers configured in the group are considered to be on the default VRF. TACACS servers that are configured in the CONFIGURATION mode are also considered to be on the default VRF.

For AAA servers to use a group of TACACS servers, you must explicitly configure the group using the `aaa tacacs group group-name` command. The order in which the TACACS servers are tried depends on the order in which they are configured.

Example

```
DellEMC(conf)# tacacs-server group group1
DellEMC(conf-tacacs-group)# tacacs-server host 1.1.1.1 key secr-et
DellEMC(conf-tacacs-group)# no tacacs-server host 1.1.1.1
DellEMC(conf-tacacs-group)#
```

Related Commands

- [aaa authentication login](#) — specifies the login authentication method.
- [tacacs-server key](#) — configures a TACACS+ key for the TACACS server.

tacacs-server key

Configure a key for communication between a TACACS+ server and a client.

Syntax `tacacs-server key [encryption-type] key`

To delete a key, use the `no tacacs-server key key` command.

Parameters

encryption-type (OPTIONAL) Enter either zero (0) or 7 as the encryption type for the key entered. The options are:

- 0 is the default and means the key is not encrypted and stored as clear text.
- 7 means that the key is encrypted and hidden.

key Enter a text string, up to 42 characters long, as the clear text password. Leading spaces are ignored.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Authentication key length increased to 42 characters.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.2.1.1	Introduced on the E-Series.

Usage Information

The key configured with this command must match the key configured on the TACACS+ daemon.

tacacs-server vrf

Create an association between a TACACS server group and a VRF and source interface.

Syntax

```
tacacs-server vrf vrf-name [source-interface interface]
```

To delete the association between a TACACS server group and a VRF and source interface, use the `no tacacs-server vrf vrf-name [source-interface interface]` command.

Parameters

vrf vrf-name	Enter the keyword <code>vrf</code> and then the name of the VRF to associate a TACACS server group with that VRF.
interface	Enter the following keywords and slot/port or number information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383. For a port channel interface, enter the keywords <code>port-channel</code> then a number. For a Null interface, enter the keyword <code>null</code> then the Null interface number. For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

TACACS SERVER GROUP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Introduced on the S-Series and Z-Series.

Usage Information

You can use this command to associate a group of TACACS servers with a VRF and source interface. You can configure the source interface only with the VRF attribute and source interface is optional with the VRF attributes.

If VRF is not configured on the TACACS group, then the group is considered to be on the default VRF.

RADIUS groups and VRFs have one-to-one mapping. If a VRF is configured with one RADIUS group, then you cannot use the same VRF with another RADIUS group. When the VRF is removed, then the corresponding RADIUS group is also removed automatically.

Example

```
DellEMC(conf)# tacacs-server group group1
DellEMC(conf-tacacs-group)# tacacs-server vrf vrf1 source-interface
tengigabitethernet 1/36

DellEMC(conf)# tacacs-server group group2
DellEMC(conf-tacacs-group)# tacacs-server vrf default
```

Port Authentication (802.1X) Commands

An authentication server must authenticate a client connected to an 802.1X switch port. Until the authentication, only Extensible Authentication Protocol over LAN (EAPOL) traffic is allowed through the port to which a client is connected. After authentication is successful, normal traffic passes through the port.

Dell EMC Networking OS supports RADIUS and Active Directory environments using 802.1X Port Authentication.

Important Points to Remember

Dell EMC Networking OS limits network access for certain users by using VLAN assignments. 802.1X with VLAN assignment has these characteristics when configured on the switch and the RADIUS server.

- 802.1X is supported on Dell EMC Networking OS.
- 802.1X is not supported on the LAG or the channel members of a LAG.
- If no VLAN is supplied by the RADIUS server or if 802.1X authorization is disabled, the port is configured in its access VLAN after successful authentication.
- If 802.1X authorization is enabled but the VLAN information from the RADIUS server is not valid, the port returns to the Unauthorized state and remains in the configured access VLAN. This prevents ports from appearing unexpectedly in an inappropriate VLAN due to a configuration error. Configuration errors create an entry in Syslog.
- If 802.1X authorization is enabled and all information from the RADIUS server is valid, the port is placed in the specified VLAN after authentication.
- If port security is enabled on an 802.1X port with VLAN assignment, the port is placed in the RADIUS server assigned VLAN.
- If 802.1X is disabled on the port, it is returned to the configured access VLAN.
- When the port is in the Force Authorized, Force Unauthorized, or Shutdown state, it is placed in the configured access VLAN.

- If an 802.1X port is authenticated and put in the RADIUS server assigned VLAN, any change to the port access VLAN configuration does not take effect.
- The 802.1X with VLAN assignment feature is not supported on trunk ports, dynamic ports, or with dynamic-access port assignment through a VLAN membership.

dot1x authentication (Configuration)

Enable dot1x globally; dot1x must be enabled both globally and at the interface level.

Syntax	<code>dot1x authentication</code> To disable dot1x on globally, use the <code>no dot1x authentication</code> command.
Defaults	Disabled.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands	<ul style="list-style-type: none"> • dot1x authentication (Interface) — enable dot1x on an interface.
-------------------------	--

dot1x authentication (Interface)

Enable dot1x on an interface; dot1x must be enabled both globally and at the interface level.

Syntax	<code>dot1x authentication</code> To disable dot1x on an interface, use the <code>no dot1x authentication</code> command.
Defaults	Disabled.
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [dot1x authentication \(Configuration\)](#) — enable dot1x globally.

dot1x auth-fail-vlan

Configure an authentication failure VLAN for users and devices that fail 802.1X authentication.

Syntax	<code>dot1x auth-fail-vlan <i>vlan-id</i> [max-attempts <i>number</i>]</code>
	To delete the authentication failure VLAN, use the <code>no dot1x auth-fail-vlan <i>vlan-id</i> [max-attempts <i>number</i>]</code> command.
Parameters	
<i>vlan-id</i>	Enter the VLAN Identifier. The range is from 1 to 4094.
max-attempts <i>number</i>	(OPTIONAL) Enter the keywords <code>max-attempts</code> then number of attempts desired before authentication fails. The range is from 1 to 5. The default is 3 .
Defaults	3 attempts
Command Modes	CONFIGURATION (conf-if-interface-slot/port)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series, S-Series, and E-Series.

Usage Information

If the host responds to 802.1X with an incorrect login/password, the login fails. The switch attempts to authenticate again until the maximum attempts configured is reached. If the authentication fails after all allowed attempts, the interface is moved to the authentication failed VLAN.

After the authentication VLAN is assigned, the port-state must be toggled to restart authentication. Authentication occurs at the next re-authentication interval (`dot1x reauthentication`).

Related Commands

- [dot1x port-control](#) — enables port-control on an interface.
- [dot1x guest-vlan](#) — configures a guest VLAN for non-dot1x devices.
- [show dot1x interface](#) — displays the 802.1X information on an interface.

dot1x auth-server

Configure the authentication server to RADIUS.

Syntax `dot1x auth-server radius`

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x guest-vlan

Configure a guest VLAN for limited access users or for devices that are not 802.1X capable.

Syntax `dot1x guest-vlan vlan-id`
To disable the guest VLAN, use the `no dot1x guest-vlan vlan-id` command.

Parameters ***vlan-id*** Enter the VLAN Identifier. The range is from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION (conf-if-interface-slot/port)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series, S-Series, and E-Series.

Usage Information 802.1X authentication is enabled when an interface is connected to the switch. If the host fails to respond within a designated amount of time, the authenticator places the port in the guest VLAN.

If a device does not respond within 30 seconds, it is assumed that the device is not 802.1X capable. Therefore, a guest VLAN is allocated to the interface and authentication for the device occurs at the next re-authentication interval (`dot1x reauthentication`).

If the host fails authentication for the designated number of times, the authenticator places the port in authentication failed VLAN (`dot1x auth-fail-vlan`).

NOTE: The layer 3 portion of guest VLAN and authentication fail VLANs can be created regardless if the VLAN is assigned to an interface or not. After an interface is assigned a guest VLAN (which has an IP address), routing through the guest VLAN is the same as any other traffic. However, the interface may join/leave a VLAN dynamically.

- Related Commands**
- [dot1x auth-fail-vlan](#) — configures a VLAN for authentication failures.
 - [dot1x reauthentication](#) — enables periodic re-authentication.
 - [show dot1x interface](#) — displays the 802.1X information on an interface.

dot1x mac-auth-bypass

Enable MAC authentication bypass. If 802.1X times out because the host did not respond to the Identity Request frame, Dell EMC Networking OS attempts to authenticate the host based on its MAC address.

Syntax [no] dot1x mac-auth-bypass

Defaults Disabled

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.4	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.4.1.0	Introduced on the C-Series and S-Series.

Usage Information To disable MAC authentication bypass on a port, enter the `no dot1x mac-auth-bypass` command.

dot1x max-eap-req

Configure the maximum number of times an extensive authentication protocol (EAP) request is transmitted before the session times out.

Syntax dot1x max-eap-req *number*

To return to the default, use the `no dot1x max-eap-req` command.

Parameters *number* Enter the number of times an EAP request is transmitted before a session time-out. The range is from 1 to 10. The default is **2**.

Defaults 2

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands

- [interface range](#) — configure a range of interfaces.

dot1x port-control

Enable port control on an interface.

Syntax `dot1x port-control {force-authorized | auto | force-unauthorized}`

Parameters

- force-authorized** Enter the keywords `force-authorized` to forcibly authorize a port.
- auto** Enter the keyword `auto` to authorize a port based on the 802.1X operation result.
- force-unauthorized** Enter the keywords `force-unauthorized` to forcibly de-authorize a port.

Defaults none

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The authenticator performs authentication only when `port-control` is set to `auto`.

dot1x quiet-period

Set the number of seconds that the authenticator remains quiet after a failed authentication with a client.

Syntax `dot1x quiet-period seconds`
 To disable quiet time, use the `no dot1x quiet-time` command.

Parameters **seconds** Enter the number of seconds. The range is from 1 to 65535. The default is **30**.

Defaults **30 seconds**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x reauthentication

Enable periodic re-authentication of the client.

Syntax `dot1x reauthentication [interval seconds]`
 To disable periodic re-authentication, use the `no dot1x reauthentication` command.

Parameters **interval *seconds*** (Optional) Enter the keyword `interval` then the interval time, in seconds, after which re-authentication is initiated. The range is from 1 to 31536000 (1 year). The default is **3600 (1 hour)**.

Defaults **3600 seconds (1 hour)**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

Related Commands • [interface range](#) — configures a range of interfaces.

dot1x reauth-max

Configure the maximum number of times a port can re-authenticate before the port becomes unauthorized.

Syntax `dot1x reauth-max number`

To return to the default, use the `no dot1x reauth-max` command.

Parameters ***number*** Enter the permitted number of re-authentications. The range is from 1 to 10. The default is **2**.

Defaults **2**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x server-timeout

Configure the amount of time after which exchanges with the server time-out.

Syntax `dot1x server-timeout seconds`

To return to the default, use the `no dot1x server-timeout` command.

Parameters **seconds** Enter a time-out value in seconds. The range is from 1 to 300, where 300 is implementation dependant. The default is **30**.

Defaults **30 seconds**

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.

Version	Description
7.4.1.0	Introduced on the E-Series.

dot1x supplicant-timeout

Configure the amount of time after which exchanges with the supplicant time-out.

Syntax	<code>dot1x supplicant-timeout seconds</code> To return to the default, use the <code>no dot1x supplicant-timeout</code> command.
Parameters	seconds Enter a time-out value in seconds. The range is from 1 to 300, where 300 is implementation dependant. The default is 30 .
Defaults	30 seconds
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

dot1x tx-period

Configure the intervals at which EAPOL PDUs are transmitted by the Authenticator PAE.

Syntax	<code>dot1x tx-period seconds</code> To return to the default, use the <code>no dot1x tx-period</code> command.
Parameters	seconds Enter the interval time, in seconds, that EAPOL PDUs are transmitted. The range is from 1 to 65535 (1 year). The default is 30 .
Defaults	30 seconds
Command Modes	INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.
7.4.1.0	Introduced on the E-Series.

show dot1x interface

Display the 802.1X information on an interface.

Syntax `show dot1x interface interface`

Parameters *interface*

Enter one of the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.

Defaults none

Command Modes

- EXEC
- EXEC privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series, S-Series, and E-Series.

Example

```
DelleMC#show dot1x interface fortyGigE 1/48

802.1x information on Fo 1/48:
-----
Dot1x Status:                Enable
Port Control:                AUTO
Port Auth Status:            UNAUTHORIZED
Re-Authentication:          Disable
Untagged VLAN id:           None
Guest VLAN:                  Disable
Guest VLAN id:              NONE
Auth-Fail VLAN:             Disable
Auth-Fail VLAN id:         NONE
Auth-Fail Max-Attempts:    NONE
Mac-Auth-Bypass:            Disable
Mac-Auth-Bypass Only:      Disable
Tx Period:                   30 seconds
Quiet Period:                60 seconds
ReAuth Max:                  2
Supplicant Timeout:         30 seconds
Server Timeout:             30 seconds
Re-Auth Interval:           3600 seconds
Max-EAP-Req:                 2
Host Mode:                   SINGLE_HOST
Auth PAE State:              Initialize
Backend State:               Initialize
DelleMC#

DelleMC# show dot1x interface fortyGigE 1/48

802.1x information on Fo 1/48:
-----
Dot1x Status:                Enable
Port Control:                FORCE_AUTHORIZED
Port Auth Status:            UNAUTHORIZED
Re-Authentication:          Disable
Untagged VLAN id:           None
Guest VLAN:                  Disable
Guest VLAN id:              NONE
Auth-Fail VLAN:             Disable
Auth-Fail VLAN id:         NONE
Auth-Fail Max-Attempts:    NONE
Mac-Auth-Bypass:            Disable
Mac-Auth-Bypass Only:      Disable
Tx Period:                   30 seconds
Quiet Period:                60 seconds
ReAuth Max:                  2
Supplicant Timeout:         30 seconds
Server Timeout:             30 seconds
Re-Auth Interval:           3600 seconds
Max-EAP-Req:                 2
Host Mode:                   SINGLE_HOST
```

```
Auth PAE State:      Initialize
Backend State:      Initialize
DellEMC#
```

SSH and SCP Commands

Dell EMC Networking OS supports secure shell (SSH) protocol version 2.0. SSH is a protocol for secure remote login over an insecure network. SSH sessions are encrypted and use authentication.

crypto key generate

Generate keys for the SSH server.

Syntax

 **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

```
crypto key generate {rsa}
```

Parameters

rsa Enter the keyword `rsa` then the key size to generate a SSHv2 RSA host keys. The range is from 1024 to 2048 if you did not enable FIPS mode; if you enabled FIPS mode, you can only generate a 2048-bit key. The default is **1024**.

 **NOTE:** You must have a license to access the FIPS mode. For more information, contact your Dell EMC Networking representative.

Defaults

Key size **1024**; if you enable FIPS mode, the key size is **2048**.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Removed support for <code>rsa1</code> keys from all platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Added support for FIPS mode on the S4810.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

The host keys are required for key-exchange by the SSH server. If the keys are not found when you enable the server (`ip ssh server enable`), the keys are automatically generated.

This command requires user interaction and generates a prompt prior to overwriting any existing host keys.

 **NOTE:** Only a user with superuser permissions should generate host-keys.

Example

```
DellEMC(conf)# crypto key generate rsa
Enter key size <1024-2048>. Default<1024> :
Host key already exists. Overwrite (y/n)?y
Generating 1024-bit SSHv2 RSA key.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
DellEMC(conf)#
```

Related Commands

- [ip ssh server](#) — enables the SSH server.
- [show crypto](#) — displays the SSH host public keys.

crypto key zeroize rsa

Removes the generated RSA host keys and zeroize the key storage location.

Syntax `crypto key zeroize rsa`

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, MXL

debug ip ssh

Enables collecting SSH debug information.

Syntax `debug ip ssh {client | server}`

To disable debugging, use the `no debug ip ssh {client | server}` command.

Parameters

- client** Enter the keyword `client` to enable collecting debug information on the client.
- server** Enter the keyword `server` to enable collecting debug information on the server.

Defaults Disabled on both client and server.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information Debug information includes details for key-exchange, authentication, and established session for each connection.

ip scp topdir

Identify a location for files used in secure copy transfer.

Syntax `ip scp topdir directory`
To return to the default setting, use the `no ip scp topdir` command.

Parameters ***directory*** Enter a directory name.

Defaults The internal flash (`flash:`) is the default directory.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

To configure the switch as an SCP server, use the `ip ssh server` command.

Related Commands

- `ip ssh server` — enables the SSH and SCP server on the switch.

ip ssh authentication-retries

Configure the maximum number of attempts that should be used to authenticate a user.

Syntax `ip ssh authentication-retries 1-10`

Parameters `1-10` Enter the number of maximum retries to authenticate a user. The range is from 1 to 10. The default is **3**.

Defaults **3**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command specifies the maximum number of attempts to authenticate a user on an SSH connection with the remote host for password authentication. SSH disconnects when the number of password failures exceeds authentication-retries.

ip ssh challenge-response-authentication

Enable challenge response authentication for SSHv2.

Syntax

`ip ssh challenge-response-authentication enable`

To disable the challenge response authentication, use the `no ip ssh challenge-response-authentication enable` command.

Parameters

enable Enter the keyword `enable` to enable the challenge response authentication for SSHv2.

Defaults

Disabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the S4810, S4820T, S3048-ON, S3100 Series, S4048-ON, S5000, S6000, S6000-ON, Z9500, Z9100-ON, S6100-ON, S6010-ON, S4048T-ON, C9000, and MXL.

Usage Information

If both the challenge response authentication and password authentication methods are configured, the challenge response authentication takes priority.

ip ssh cipher

Configure the list of ciphers supported on both SSH client and SCP.

Syntax

`ip ssh cipher cipher-list`

Parameters

cipher cipher-list Enter the keyword `cipher` and then a space-delimited list of ciphers that the SSH client supports. The following ciphers are available.

- aes256-ctr
- aes256-cbc
- aes192-ctr
- aes192-cbc
- aes128-ctr
- aes128-cbc
- 3des-cbc

Defaults

The default list of ciphers is in the order as shown below:

- aes256-ctr
- aes256-cbc
- aes192-ctr
- aes192-cbc
- aes128-ctr
- aes128-cbc

- `3des-cbc`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON, S6000, S6000-ON, S5000, S4810, S4820T, S3048-ON, S4048-ON, MXL, C9010, S3100 series, and Z9100-ON.

Usage Information

- You can select one or more ciphers from the list.
- The default list of supported ciphers is same irrespective of whether FIPS mode is enabled or disabled.
- Client-supported cipher list gets preference over the server-supported cipher list in selecting the cipher for the SSH session.
- When the `cipher (-c)` option is used with the SSH CLI, it overrides the configured or default cipher list.
- When FIPS is enabled or disabled, the client ciphers get default configuration.

ip ssh connection-rate-limit

Configure the maximum number of incoming SSH connections per minute.

Syntax `ip ssh connection-rate-limit 1-60`

Parameters **1-60** Enter the number of maximum numbers of incoming SSH connections allowed per minute. The range is from 1 to 60 per minute. The default is **10 per minute**.

Defaults **10 per minute**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Increased the SSH rate-limit range.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

ip ssh hostbased-authentication

Enable hostbased-authentication for the SSHv2 server.

Syntax	<code>ip ssh hostbased-authentication enable</code>	
	To disable hostbased-authentication for SSHv2 server, use the <code>no ip ssh hostbased-authentication enable</code> command.	
Parameters	enable	Enter the keyword <code>enable</code> to enable hostbased-authentication for SSHv2 server.
Defaults	Disabled.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information	<p>If you enable this command, clients can log in without a password prompt. This command provides two levels of authentication:</p> <ul style="list-style-type: none"> • rhost-authentication is done with the file specified in the <code>ip ssh rhostfile</code> command. • checking client host-keys is done with the file specified in the <code>ip ssh pub-key-file</code> command. <p>NOTE: Administrators must specify the two files (<code>rhosts</code> and <code>pub-key-file</code>) to configure host-based authentication.</p>
Related Commands	<ul style="list-style-type: none"> • ip ssh pub-key-file — public keys of trusted hosts from a file. • ip ssh rhostsfile — trusted hosts and users for rhost authentication.

ip ssh key-size

Configure the size of the server-generated RSA SSHv1 key.

Syntax `ip ssh key-size 512-869`

Parameters **512-869** Enter the key-size number for the server-generated RSA SSHv1 key. The range is from 512 to 869. The default is **768**.

Defaults Key size **768**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information The server-generated key is used for SSHv1 key-exchange.

ip ssh mac

Configure the list of MAC algorithms supported on both SSH client and SCP.

Syntax `ip ssh mac mac-list`

Parameters **mac mac-list** Enter the keyword `mac` then a space-delimited list of message authentication code (MAC) algorithms supported by the SSH client. The following MAC algorithms are available.

When FIPS mode is enabled:

- `hmac-sha2-256`
- `hmac-sha1`
- `hmac-sha1-96`

When FIPS mode is disabled:

- `hmac-sha2-256`
- `hmac-sha1`
- `hmac-sha1-96`
- `hmac-md5`
- `hmac-md5-96`

Defaults The default list of MAC algorithm is in the order as shown below:

When FIPS mode is enabled:

- `hmac-sha2-256`
- `hmac-sha1`
- `hmac-sha1-96`

When FIPS mode is disabled:

- `hmac-sha2-256`
- `hmac-sha1`
- `hmac-sha1-96`
- `hmac-md5`
- `hmac-md5-96`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON, S6000, S6000-ON, S5000, S4810, S4820T, S3048-ON, S4048-ON, MXL, C9010, S3100 series, and Z9100-ON.

Usage Information

- You can select one or more MAC algorithms from the list.
- Client-supported MAC list gets preference over the server-supported MAC list in selecting the MAC algorithm for the SSH session.
- When the `MAC (-m)` option is used with the SSH CLI, it overrides the configured or default MAC list.
- When FIPS is enabled or disabled, the client MACs get default configuration.

ip ssh password-authentication

Enable password authentication for the SSH server.

Syntax `ip ssh password-authentication enable`

To disable password-authentication, use the `no ip ssh password-authentication enable` command.

Parameters **enable** Enter the keyword `enable` to enable password-authentication for the SSH server.

Defaults Enabled

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information With password authentication enabled, you can authenticate using the local, RADIUS, or TACACS+ password fallback order as configured.

ip ssh pub-key-file

Specify the file used for host-based authentication.

Syntax `ip ssh pub-key-file {WORD}`

Parameters **WORD** Enter the file name for the host-based authentication.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command specifies the file used for the host-based authentication. The `creates/` file overwrites the `flash://ADMIN_DIR/ssh/knownhosts` file and deletes the user-specified file. Even though this command is a global configuration command, it does not appear in the running configuration because you only need to run this command once.

The file contains the OpenSSH-compatible public keys of the host for which host-based authentication is allowed. An example known host file format:

```
poclab4,123.12.1.123 ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAox/
QQp8xYhzOxn07yh4VGPAoUfgKoieTH09G4sNV+ui+DWEc3cgYAcU5Lai1MU2ODrzhCwyDNp05tK
BU3t
ReG1o8AxLi6+S4hyEMqHzkzBFNVqHzpQc+Rs4p2urzV0F4pRKnaXdhf3Lk4D460HZRhhVrxqeNx
PDpEn WIMPJi0ds= ashwani@poclab4
```

 **NOTE:** For `rhostfile` and `pub-key-file`, the administrator must FTP the file to the chassis.

Example

```
DellEMC# conf
DellEMC(conf)# ip ssh pub-key-file flash://knownhosts
DellEMC(conf)#
```

Related Commands

- `show ip ssh client-pub-keys` — displays the client-public keys used for the host-based authentication.

ip ssh rekey

Configures the time rekey-interval or volume rekey-limit threshold at which to re-generate the SSH key during an SSH session.

Syntax

```
ip ssh rekey [time rekey-interval] [volume rekey-limit]
```

To reset to the default, use `no ip ssh rekey [time rekey-interval] [volume rekey-limit]` command.

Parameters

time minutes Enter the keywords `time` then the amount of time in minutes. The range is from 10 to 1440 minutes. The default is **60** minutes

volume rekey-limit Enter the keywords **volume** then the amount of volume in megabytes. The range is from 1 to 4096 to megabytes. The default is **1024 megabytes**

Defaults

The default time is **60** minutes. The default volume is **1024** megabytes.

Command Modes

CONFIGURATION mode

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, MXL

ip ssh rhostsfile

Specify the rhost file used for host-based authorization.

Syntax `ip ssh rhostsfile {WORD}`

Parameters **WORD** Enter the rhost file name for the host-based authentication.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC#conf
DellEMC(conf)# ip ssh rhostsfile flash://shosts
DellEMC(conf)#
```

Usage Information

This command specifies the rhost file used for host-based authentication. This `creates/` file overwrites the `flash:/ADMIN_DIR/ssh/shosts` file and deletes the user-specified file. Even though this command is a global configuration command, it does not appear in the running configuration because you only need to run this command once.

This file contains hostnames and usernames, for which hosts and users, rhost-authentication can be allowed.

 **NOTE:** For `rhostsfile` and `pub-key-file`, the administrator must FTP the file to the switch.

ip ssh rsa-authentication (Config)

Enable RSA authentication for the SSHv2 server.

Syntax `ip ssh rsa-authentication enable`

To disable RSA authentication, use the `no ip ssh rsa-authentication enable` command.

Parameters **enable** Enter the keyword `enable` to enable RSA authentication for the SSHv2 server.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information Enabling RSA authentication allows the user to log in without being prompted for a password. In addition, the OpenSSH compatible SSHv2 RSA public key must be added to the list of authorized keys (`ip ssh rsa-authentication my-authorized-keys device://filename` command).

ip ssh server

Syntax  **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

```
ip ssh server {ciphers cipher-list} {enable | port port-number} [kex key-exchange-algorithm] [mac hmac-algorithm] [version 2]
```

To disable SSH server functions, use the `no ip ssh server {ciphers cipher-list} {enable | port port-number} [kex key-exchange-algorithm] [mac hmac-algorithm]` command.

Parameters

enable Enter the key word `enable` to start the SSH server.

ciphers cipher-list Enter the keyword `ciphers` and then a space-delimited list of ciphers that the SSH server supports. The following ciphers are available.

- 3des-cbc
- aes128-cbc

- aes192-cbc
- aes256-cbc
- aes128-ctr
- aes192-ctr
- aes256-ctr

The default cipher list is used.

- 3des-cbc
- aes128-cbc
- aes192-cbc
- aes256-cbc
- aes128-ctr
- aes192-ctr
- aes256-ctr

**mac *hmac-
algorithm***

Enter the keyword `mac` then a space-delimited list of hash message authentication code (HMAC) algorithms supported by the SSH server for keying hashing for the message authentication.

The following HMAC algorithms are available:

- hmac-sha1
- hmac-sha1-96
- hmac-sha2-256

When FIPS is enabled, the default HMAC algorithm is `hmac-sha1-96`.

When FIPS is not enabled, the default HMAC algorithms are the following:

- hmac-md5
- hmac-md5-96
- hmac-sha1
- hmac-sha1-96
- hmac-sha2-256

**kex
*key-exchange-
algorithm***

Enter the keyword `kex` and then a space-delimited list of key exchange algorithms supported by the SSH server.

The following key exchange algorithms are available:

- diffie-hellman-group-exchange-sha1
- diffie-hellman-group1-sha1
- diffie-hellman-group14-sha1

When FIPS is enabled, the default key-exchange-algorithm is `diffie-hellman-group14-sha1`.

When FIPS is not enabled, the default key-exchange-algorithms are the following:

- diffie-hellman-group-exchange-sha1
- diffie-hellman-group1-sha1,
- diffie-hellman-group14-sha1

port *port-number* (OPTIONAL) Enter the keyword `port` then the port number of the listening port of the SSH server. The range is from 1 to 65535. The default is **22**.

[version 2] (OPTIONAL) Enter the keyword `version` then the SSH version 2, to specify SSHv2.

Defaults

- Default listening port is **22**.
- Default cipher list is `3des-cbc,aes128-cbc,aes192-cbc,aes256-cbc,aes128-ctr,aes192-ctr,aes256-ctr`.
- When FIPS is enabled, the default is `hmac-sha1-96`.
- When FIPS is not enabled, the default is `hmac-md5,hmac-md5-96,hmac-sha1,hmac-sha1-96,hmac-sha2-256`.
- *When FIPS is enabled, the default is `diffie-hellman-group14-sha1`.*
- When FIPS is not enabled, the default is `diffie-hellman-group-exchange-sha1,diffie-hellman-group1-sha1,diffie-hellman-group14-sha1`.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Removed support for SSHv1 from all platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Removed the support for <code>hmac-sha2-256-96</code> algorithm.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced the <code>cipher</code> , <code>kex</code> and <code>mac</code> options on the Z9500.
9.5(0.0)	Introduced the <code>cipher</code> , <code>kex</code> and <code>mac</code> options on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command enables the SSH server and begins listening on a port. If a port is not specified, listening is on SSH default port 22.

 **NOTE:** Starting with Dell EMC Networking OS Release 9.2(0.0), SSH server is enabled by default.

Example

```
DellEMC# conf
DellEMC(conf)# ip ssh server port 45
```

```
DellEMC(conf)# ip ssh server enable
DellEMC#
```

ip ssh server vrf

Configure an SSH server on either a specific VRF or a management VRF.

Syntax

NOTE: Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

```
ip ssh server vrf {any | management | vrf-name}
```

To disable the SSH server configuration, use the `no ip ssh server vrf {management | vrf-name}` command.

Parameters

any	Enter the keyword <code>any</code> to enable access to the server from any VRF.
vrf management	Enter the keyword <code>vrf</code> followed by the keyword <code>management</code> to configure an SSH server on a management VRF.
vrf vrf-name	Enter the keyword <code>vrf</code> followed by the VRF name to configure an SSH server on that VRF.

Defaults

None

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

You can enable the SSH server on either a management VRF or a user defined VRF but not both. If no VRF is specified, then the SSH server is enabled on the default VRF.

If the SSH server is enabled on a VRF with name `vrf1`, then use the following command to restart the SSH server on a VRF with name `vrf2`: `ip ssh server vrf vrf2`. If the SSH server is enabled on a VRF with name `vrf1`, then use the following command to restart the SSH server on the default VRF: `ip ssh server vrf`.

Example

```
• DellEMC(conf)# ip ssh server vrf any
• DellEMC(conf)# no ip ssh server vrf
• DellEMC(conf)# ip ssh server vrf vrf1
• DellEMC(conf)# no ip ssh server vrf
• DellEMC(conf)# ip ssh server vrf management
• DellEMC(conf)# no ip ssh server vrf
```

Related Commands

- `show ip ssh` — displays the ssh information.

ip ssh source-interface

Specifies an interface's IP address as the source IP address for an outgoing SSH connections.

Syntax `ip ssh source-interface interface`

To delete a source interface, use the `no ip ssh source-interface` command.

Parameters

interface

Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

The `source-interface interface` attribute is applicable for both the SSH `client` as well as the `COPY (SCP)` commands. Using these attributes the client session tags an error to the user during run time, in case there is a mismatch between this command and the `ip ssh vrf` command.

Example

```
DellEMC(conf)#ip ssh source-interface tengigabitethernet 1/42
DellEMC(conf)#do ssh 10.10.10.2 -l admin
DellEMC(conf)#no ip ssh source-interface
```

ip ssh vrf

Specify a VRF for an outgoing SSH connections.

Syntax `ip ssh vrf vrf-name`

To delete a VRF for an outgoing SSH connection, use the `no ip ssh vrf vrf-name` command.

Parameters **vrf vrf-name** Enter the keyword `vrf` and then the name of the VRF to configure that VRF for an outgoing SSH session.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information If you configure a VRF for an SSH session, then you need not explicitly mention the same VRF for the SSH client sessions intended for that VRF. The `vrf` attribute in the `ip ssh vrf` command is applicable for both the SSH client as well as the COPY (SCP) commands.

Example

```
DellEMC(conf)#ip ssh vrf vrf1
DellEMC(conf)#do ssh 10.10.10.2 -l admin
DellEMC(conf)#no ip ssh vrf vrf1
```

show crypto

Display the public part of the SSH host-keys.

Syntax  **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

`show crypto key mypubkey {rsa}`

Parameters

- Key** Enter the keyword `key` to display the host public key.
- mypubkey** Enter the keyword `mypubkey` to display the host public key.
- rsa** Enter the keyword `rsa` to display the host SSHv2 RSA public key.

Defaults none

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Removed support for rsa1 keys from all platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command is useful if the remote SSH client implements Strict Host Key Checking. You can copy the host key to your list of known hosts.

Example

```
DellEMC# show crypto key mypubkey rsa
ssh-rsa AAAAB3NzaC1yc2EAAAADAQABAAQGC9IYgcUcc8wQm+5KUQgW/
zAs8V5STa1Gq4/+S+6H9axpQnA+A0xweeo5iR5hvPP6Vc+HS+uWoQH+
VOJ8H5Jxsm347XnYv/gpSghgjZ/C5UwFiucVkfYu8RDcJViuQhLv
PEebIF5Q+sD8K89MXU90MAS/UdoiJZSOI1baCuSTW1Q==

DellEMC#
```

Related Commands

- [crypto key generate](#) — generates the SSH keys.

show ip ssh

Display information about established SSH sessions.

Syntax

 **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

```
show ip ssh
```

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Updated the output to include <code>challenge-response-authentication</code> option.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Removed the support for hmac-sha2-256-96 algorithm.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC# show ip ssh
SSH server                : enabled.
SSH server version       : v2.
SSH server vrf           : default.
SSH server ciphers       : aes256-ctr,aes256-cbc,aes192-ctr,aes192-
cbc,aes128-ctr,aes128-cbc,3des-cbc.
SSH server macs          : hmac-sha2-256,hmac-sha1,hmac-sha1-96,hmac-
md5,hmac-md5-96.
SSH server kex algorithms : diffie-hellman-group-exchange-sha1,diffie-
hellman-group1-sha1,diffie-hellman-group14-sha1.
Password Authentication  : enabled.
Hostbased Authentication : disabled.
RSA Authentication      : disabled.
Challenge Response Auth  : enabled.
  Vty      Encryption      HMAC      Remote IP
  2        aes128-cbc      hmac-md5  10.16.127.141
  4        aes128-cbc      hmac-md5  10.16.127.141
* 5        aes128-cbc      hmac-md5  10.16.127.141
DellEMC#
```

Related Commands

- [ip ssh server](#) — configures an SSH server.
- [show ip ssh client-pub-keys](#) — displays the client-public keys.

show ip ssh client-pub-keys

Display the client public keys used in host-based authentication.

Syntax `show ip ssh client-pub-keys`

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Network OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command displays the contents of the `flash://ADMIN_DIRssh/knownhosts` file.

Example

```
DellEMC# show ip ssh client-pub-keys
4.8.1.2 ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAu5NoTbmnLxBknaeXZmUJMupNwNUoGlo1/
yLPI5eehQTyaldRPhtGyPlcmMbCH+QJkqtiywDPmH4njyDMYDCXY85vc55ibWsN9qalagklnh2cj2q4nYj5x8+80OhYeFPaHiygd
FXict61jWs84ColUTsAgRzDJ9aUSS75TVac= root@dt-maa-linux-1.force10networks.c
om
2200:2200:2200:2200::2202 ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAu5NoTbmnLxBknaeXZmUJMupNwNUoGlo1/
yLPI5eehQTyaldRPhtGyPlcmMbCH+QJkqtiywDPmH4njyDMYDCXY85vc55ibWsN9qalagklnh2cj2q4nYj5x8+80OhYeFPaHiygd
FXict61jWs84ColUTsAgRzDJ9aUSS75TVac= root@dt-maa-li
nux-1.force10networks.com
10.16.151.48 ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAIEAu5NoTbmnLxBknaeXZmUJMupNwNUoGlo1/
yLPI5eehQTyaldRPhtGyPlcmMbCH+QJkqtiywDPmH4njyDMYDCXY85vc55ibWsN9qalagklnh2cj2q4nYj5x8+80OhYeFPaHiygd
FXict61jWs84ColUTsAgRzDJ9aUSS75TVac=
DellEMC#
```

Related Commands

- [ip ssh pub-key-file](#) — configures the filename for the host-based authentication.

show ip ssh rsa-authentication

Display the authorized-keys for the RSA authentication.

Syntax `show ip ssh rsa-authentication {my-authorized-keys}`

Parameters **my-authorized-keys** Display the RSA authorized keys.

Defaults none

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

This command displays the contents of the `flash:/ADMIN_DIR/ssh/authorized-keys.username` file.

Example

```
DellEMC# show ip ssh rsa-authentication my-authorized-keys
ssh-rsa
AAAAB3NzaC1yc2EAAAABIwAAAIEAyB17l4gFp4r2DRHIvMc1VZ
d0Sg5GQxRV1y1X1JOMeO6Nd0WuYzrQMM
4qJAoBwtneOXfLBcHF3V2hcMIqaZN+CRcnw/
zCm1nCf0+qVTd1oofsea5r09kS0xTp0CNfHXZ3NuGCq90v33m9+
U9tMwhS8vy8AVxdH4x4km3c3t5Jvc=
freedom@poclabb4

DellEMC#
```

Related Commands

- [ip ssh rsa-authentication \(Config\)](#) — configures the RSA authorized keys.

ssh

Open an SSH connection specifying the hostname, username, encryption cipher, HMAC algorithm, port number, and version of the SSH client.

Syntax

 **NOTE:** Some of the parameters in this command require licensing to access. For more information, contact your Dell EMC Networking representative.

```
ssh [vrf vrf-name] {hostname | ipv4 address | ipv6 address} [-c encryption
cipher | -l username | -m HMAC algorithm | -p port-number | -v {1 | 2}]
```

Parameters

vrf vrf-name (OPTIONAL) Enter the keyword `vrf` and then the name of the VRF to specify the VRF used with the SSH session.

 **NOTE:** The VRF configured using this command has a higher precedence than the VRF configured using the `ip ssh vrf vrf-name` command. If you do not configure a VRF using this command, then the SSH client uses the configured VRF (if any). If there is a mismatch between VRFs that are

configured using the `ip ssh source-interface` command and the `ssh vrf vrf-name` command, then an error is reported.

- hostname** (OPTIONAL) Enter the IP address or the host name of the remote device.
- vrf instance** (OPTIONAL) E-Series Only: Enter the keyword `vrf` then the VRF Instance name to open an SSH connection to that instance.
- ipv4 address** (OPTIONAL) Enter the IP address in dotted decimal format A.B.C.D.
- ipv6-address prefix-length** (OPTIONAL) Enter the IPv6 address in the x:x:x:x format then the prefix length in the /x format. The range is from /0 to /128.
- (i) NOTE:** The :: notation specifies successive hexadecimal fields of zeros.
- c encryption cipher** Enable the "FIPS mode enable", this mode will support the v2 client.
"no fips mode enable"(disable) will support v1 & v2 client. This comment is applicable for both ciphers & HMAC algorithms:
- `3des-cbc`: Force ssh to use 3des-cbc encryption cipher.
 - `aes128-cbc` : Force ssh to use aes128-cbc encryption cipher
 - `aes192-cbc` : Force ssh to use aes192-cbc encryption cipher
 - `aes256-cbc` : Force ssh to use aes256-cbc encryption cipher
 - `aes128-ctr` : Force ssh to use aes128-ctr encryption cipher
 - `aes192-ctr` : Force ssh to use aes192-ctr encryption cipher
 - `aes256-ctr` : Force ssh to use aes256-ctr encryption cipher
- l username** (OPTIONAL) Enter the keyword `-l` then the user name used in this SSH session. The default is the user name of the user associated with the terminal.
- m HMAC algorithm** Enter one of the following HMAC algorithms to use:
"no fips mode enable"(disable) will support v1 & v2 client.
- `hmac-md5`: Force ssh to use hmac-md5 HMAC algorithm.
 - `hmac-md5-96`: Force ssh to use hmac-md5-96 HMAC algorithm.
 - `hmac-sha1`: Force ssh to use hmac-sha1 HMAC algorithm.
 - `hmac-sha1-96` : Force ssh to use hmac-sha1-96 HMAC algorithm.
 - `hmac-sha2-256` : Force ssh to use hmac-sha2-256 HMAC algorithm.
- p port-number** (OPTIONAL) Enter the keyword `-p` then the port number. The range is from 1 to 65535. The default is **22**.
- v {1 | 2}** (OPTIONAL) Enter the keyword `-v` then the SSH version 1 or 2. The default is the version from the protocol negotiation.

Defaults As shown in the *Parameters* section.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Removed the support for hmac-sha2-256-96 algorithm.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Added support for the following ciphers and HMAC algorithms on the Z9000, S6000, S4820T, S4820T. S6000-ON. <ul style="list-style-type: none"> • aes128-cbc • aes192-cbc • aes256-cbc • aes128-ctr • aes192-ctr • aes256-ctr • hmac-sha2-256 • hmac-sha2-256-96
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.12.0	Added support for the <code>-c</code> and <code>-m</code> parameters on the S4810.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Added IPv6 support. Introduced on the C-Series.
pre-6.1.1.0	Introduced on the E-Series.

Usage Information

Dell EMC Networking OS supports both inbound and outbound SSH sessions using IPv4 or IPv6 addressing. Inbound SSH supports accessing the system through the management interface as well as through a physical Layer 3 interface.

Example

```
DellEMC#ssh 10.16.151.48 -l anvltest

Trying 10.16.151.48...
01:18:16: %STKUNIT0-M:CP %SEC-5-SSH_USAGE: Initiated SSH Client v2 (FIPS
Disabled) to anvltest@10.16.151.48 by default from console
anvltest@10.16.151.48's password:
Last login: Thu Jan 5 00:17:47 2012 from login-maa-101
[anvltest@dt-maa-linux-1 ~]# exit
logout
DellEMC#
```

Secure DHCP Commands

DHCP as defined by RFC 2131 provides no authentication or security mechanisms. Secure DHCP is a suite of features that protects networks that use dynamic address allocation from spoofing and attacks.

clear ip dhcp snooping

Clear the DHCP binding table.

Syntax `clear ip dhcp snooping binding`

Defaults `none`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Related Commands

- [show ip dhcp snooping](#) — display the contents of the DHCP binding table.

ip dhcp relay

Enable Option 82.

Syntax `ip dhcp relay information-option [trust-downstream | vrf]`

Parameters

trust-downstream	Configure the system to trust Option 82 when it is received from the previous-hop router.
vrf	Enter the keyword <code>vrf</code> to include VRF related information in the Option 82. This configuration enables the relay agent to include VRF related information when it forwards the broadcasts from client to DHCP server.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000–ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping

Enable DHCP Snooping globally.

Syntax [no] ip dhcp snooping

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000–ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information When enabled, no learning takes place until you enable snooping on a VLAN. After disabling DHCP Snooping, the binding table is deleted and Option 82, IP Source Guard, and Dynamic ARP Inspection are disabled.

Related Commands

- [ip dhcp snooping vlan](#) — enable DHCP Snooping on one or more VLANs.

ip dhcp snooping binding

Create a static entry in the DHCP binding table.

Syntax	<code>[no] ip dhcp snooping binding mac address vlan-id vlan-id ip ip-address interface type slot/port lease number</code>	
Parameters	mac address	Enter the keyword <code>mac</code> then the MAC address of the host to which the server is leasing the IP address.
	vlan-id vlan-id	Enter the keywords <code>vlan-id</code> then the VLAN to which the host belongs. The range is from 2 to 4094.
	ip ip-address	Enter the keyword <code>ip</code> then the IP address that the server is leasing.
	interface type	Enter the keyword <code>interface</code> then the type of interface to which the host is connected. <ul style="list-style-type: none">For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information.For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.For a Loopback interface, enter the keyword <code>loopback</code> then a number from 0 to 16383.
	slot/port	Enter the slot and port number of the interface.
	lease time	Enter the keyword <code>lease</code> then the amount of time the IP address is leased. The range is from 1 to 4294967295.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

- Related Commands**
- [show ip dhcp snooping](#) — displays the contents of the DHCP binding table.

ip dhcp snooping database

Delay writing the binding table for a specified time.

Syntax `ip dhcp snooping database write-delay minutes`

Parameters *minutes* The range is from 5 to 21600.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping database renew

Renew the binding table.

Syntax `ip dhcp snooping database renew`

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping trust

Configure an interface as trusted.

Syntax [no] ip dhcp snooping trust

Defaults Untrusted

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp source-address-validation

Enable IP source guard.

Syntax [no] ip dhcp source-address-validation

Defaults Disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

ip dhcp snooping vlan

Enable DHCP Snooping on one or more VLANs.

Syntax `[no] ip dhcp snooping vlan name`

Parameters *name* Enter the name of a VLAN on which to enable DHCP Snooping.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Usage Information When enabled, the system begins creating entries in the binding table for the specified VLANs.

 **NOTE:** Learning only happens if there is a trusted port in the VLAN.

Related Commands

- [ip dhcp snooping trust](#) — configure an interface as trusted.

show ip dhcp snooping

Display the contents of the DHCP binding table.

Syntax `show ip dhcp snooping binding`

Defaults none

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the C-Series and S-Series.

Related Commands

- [clear ip dhcp snooping](#) — clear the contents of the DHCP binding table.

Role-Based Access Control Commands

With Role-Based Access Control (RBAC), access and authorization is controlled based on a user's role. Users are granted permissions based on their user roles, not on their individual user ID. User roles are created for job functions and through those roles they acquire the permissions to perform their associated job function.

This section describes the syntax and usage of RBAC-specific commands. You can find information on other related security commands in this chapter:

- [aaa accounting](#)
- [aaa authentication login](#)
- [aaa authorization commands](#)
- [authorization](#)
- [show accounting](#)
- [show users](#)
- [username](#)

aaa authorization role-only

Configure authentication to use the user's role only when determining if access to commands is permitted.

Syntax	<code>aaa authorization role-only</code> To return to the default setting, use the <code>no aaa authentication role-only</code> command.				
Parameters	<table><tr><td><i>name</i></td><td>Enter a text string for the name of the user up to 63 characters. It cannot be one of the system defined roles (sysadmin, secadmin, netadmin, netoperator).</td></tr><tr><td><i>inherit existing-role-name</i></td><td>Enter the <code>inherit</code> keyword then specify the system defined role to inherit permissions from (sysadmin, secadmin, netadmin, netoperator).</td></tr></table>	<i>name</i>	Enter a text string for the name of the user up to 63 characters. It cannot be one of the system defined roles (sysadmin, secadmin, netadmin, netoperator).	<i>inherit existing-role-name</i>	Enter the <code>inherit</code> keyword then specify the system defined role to inherit permissions from (sysadmin, secadmin, netadmin, netoperator).
<i>name</i>	Enter a text string for the name of the user up to 63 characters. It cannot be one of the system defined roles (sysadmin, secadmin, netadmin, netoperator).				
<i>inherit existing-role-name</i>	Enter the <code>inherit</code> keyword then specify the system defined role to inherit permissions from (sysadmin, secadmin, netadmin, netoperator).				
Defaults	none				
Command Modes	CONFIGURATION				
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .				

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, and MXL.

Usage Information By default, access to commands are determined by the user's role (if defined) or by the user's privilege level. If the `aaa authorization role-only` command is enabled, then only the user's role is used.

Before you enable role-based only AAA authorization:

1. Locally define a system administrator user role. This will give you access to login with full permissions even if network connectivity to remote authentication servers is not available.
2. Configure login authentication on the console. This ensures that all users are properly identified through authentication no matter the access point
3. Specify an authentication method (RADIUS, TACACS+, or Local).
4. Specify authorization method (RADIUS, TACACS+ or Local).
5. Verify the configuration has been applied to the console or VTY line.

Related Commands login authentication, password, radius-server host, tacacs-server host

enable

Enter EXEC Privilege mode or any other privilege level configured. After entering this command, you may need to enter a password.

Syntax	<code>enable [level]</code>		
Parameters	<table><tr><td><i>level</i></td><td>(OPTIONAL) Enter a number for a privilege level of Dell EMC Networking OS. The range is from 0 to 15.</td></tr></table>	<i>level</i>	(OPTIONAL) Enter a number for a privilege level of Dell EMC Networking OS. The range is from 0 to 15.
<i>level</i>	(OPTIONAL) Enter a number for a privilege level of Dell EMC Networking OS. The range is from 0 to 15.		
Defaults	15		
Command Modes	EXEC		

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for roles on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.1.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series	Original command.

Usage Information

Users entering EXEC Privilege mode or any other configured privilege level can access configuration commands. To protect against unauthorized access, use the `enable password` command to configure a password for the `enable` command at a specific privilege level. If no privilege level is specified, the default is privilege level **15**.

 **NOTE:** If you are authorized for the EXEC Privilege mode by your role, you do not need to enter an `enable` password.

Related Commands

- `enable password` — configures a password for the `enable` command and to access a privilege level.

role

Changes command permissions for roles.

Syntax

```
role mode { { { addrole | deleterole } role-name } | reset } command
```

To delete access to a command, use the `no role mode role-name`

Parameters

mode

Enter one of the following keywords as the mode for which you are controlling access:

configure for CONFIGURATION mode

exec for EXEC mode

interface for INTERFACE modes

line for LINE mode

route-map for Route-map mode

	router for Router mode
addrole	Enter the keyword <code>addrole</code> to add permission to the command. You cannot add or delete rights for the <code>sysadmin</code> role.
deleterole	Enter the keyword <code>deleterole</code> to remove access to the command. You cannot add or delete rights for the <code>sysadmin</code> role.
role-name	Enter a text string for the name of the user role up to 63 characters. These are 3 system defined roles you can modify: <code>secadmin</code> , <code>netadmin</code> , and <code>netoperator</code> .
reset	Enter the keyword <code>reset</code> to reset all roles back to default for that command.
command	Enter the command's keywords to assign the command to a certain access level. You can enter one or more keywords.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, and MXL.

Related Commands

- [userrole](#) — creates user roles.

show role

Display information on permissions assigned to a command, including user role and/or permission level.

Syntax `show role mode {mode} {command}`

Parameters

command Enter the command's keywords to assign the command to a certain access level. You can enter one or all of the keywords.

mode mode Enter keyword then one of the following modes.

- `configure`
- `exec`
- `interface`
- `line`
- `route-map`
- `router`

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, MXL

Examples

```
DellEMC# show role mode configure username
Role access: sysadmin

DellEMC# show role mode configure management route
Role access: netadmin, sysadmin

DellEMC# show role mode configure management crypto-policy
Role access: secadmin, sysadmin
```

Related Commands

- [userrole](#) — create user roles.

show userroles

Display information on all defined user roles.

Syntax show userroles

Example

```
DellEMC# show userroles
Role      Inheritance  Modes
netoperator
netadmin                                     Exec Config Interface Line Router IP
                                                Route-map Protocol MAC
secadmin                                     Exec Config
sysadmin                                     Exec Config Interface Line Router IP
                                                Route-map Protocol MAC
netoperator
testadmin  netadmin    Exec Config Interface Line Router IP
                                                Route-map Protocol MAC
```

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, MXL.

Example

```
DellEMC# show userroles
Role          Inheritance  Modes
netoperator
netadmin      Exec Config Interface Line Router IP
Route-map Protocol MAC
secadmin      Exec Config
sysadmin      Exec Config Interface Line Router IP
Route-map Protocol MAC
netoperator
testadmin     netadmin    Exec Config Interface Line Router IP
Route-map Protocol MAC
```

Related Commands

- [userrole](#) — create user roles.

userrole

Create user roles for the role-based security model.

Syntax

```
userrole name inherit existing-role-name
```

To delete a role name, use the `no userrole name` command. Note that the reserved role names may not be deleted.

Parameters

- name*** Enter a text string for the name of the user up to 63 characters. It cannot be one of the system defined roles (sysadmin, secadmin, netadmin, netoperator).
- inherit existing-role-name*** Enter the `inherit` keyword then specify the system defined role to inherit permissions from (sysadmin, secadmin, netadmin, netoperator).

Defaults

none

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.5(0.0)	Introduced on the Z9000, S6000, S4820T, S4810, MXL.

Usage Information

Instead of using the system defined user roles, you can create a new user role that best matches your organization. When you create a new user role, you first inherit permissions from one of the system defined roles. Otherwise you would have to create a user role from scratch. You then restrict commands or add commands to that role. For information about this topic, See *Modifying Command Permissions for Roles*.

 **NOTE:** You can change user role permissions on system pre-defined user roles or user-defined user roles.

Important Points to Remember

Consider the following when creating a user role:

- Only the system administrator and user-defined roles inherited from the system administrator can create roles and usernames. Only the system administrator, security administrator, and roles inherited from these can use the `role` command to modify command permissions. The security administrator and roles inherited by security administrator can only modify permissions for commands they already have access to.
- Make sure you select the correct role you want to inherit.

 **NOTE:** If you inherit a user role, you cannot modify or delete the inheritance. If you want to change or remove the inheritance, delete the user role and create it again. If the user role is in use, you cannot delete the user role.

`role mode { { { addrole | deleterole } role-name } | reset } command` – Modifies (adds or deletes) command permissions for newly created user roles and system defined roles.

Related Commands

- `role mode { { { addrole | deleterole } role-name } | reset } command` — modifies (adds or deletes) command permissions for newly created user roles and system defined roles.

ICMP Vulnerabilities

The internet control message protocol (ICMP) is a network-layer internet protocol that provides message packets to report errors and other information regarding IP packet processing back to the source. Dell EMC Networking OS mainly addresses the following ICMP vulnerabilities:

- ICMP Mask Reply
- ICMP Timestamp Request
- ICMP Replies
- IP ID Values Randomness

You can configure the Dell EMC Networking OS to drop ICMP reply messages. When you configure the `drop icmp` command, the system drops the ICMP reply messages from the front end and management interfaces. By default, the Dell EMC Networking OS responds to all the ICMP messages. You can configure the Dell EMC Networking OS to suppress the following ICMPv4 and ICMPv6 message types:

Table 4. Suppressed ICMPv4 message types

ICMPv4 Message Types
Echo reply (0)
All sub types of destination unreachable (3)
Source quench (4)
Redirect (5)

Table 4. Suppressed ICMPv4 message types (continued)

ICMPv4 Message Types
Router advertisement (9)
Router solicitation (10)
Time exceeded (11)
IP header bad (12)
Timestamp request (13)
Timestamp reply (14)
Information request (15)
Information reply (16)
Address mask request (17)
Address mask reply (18)

i **NOTE:** The Dell EMC Networking OS does not suppress the ICMPv4 message type Echo request (8).

Table 5. Suppressed ICMPv6 message types

ICMPv6 Message Types
Destination unreachable (1)
Time exceeded (3)
IPv6 header bad (4)
Echo reply (129)
Who are you request (139)
Who are you reply (140)
Mtrace response (200)
Mtrace messages (201)

i **NOTE:** The Dell EMC Networking OS does not suppress the following ICMPv6 message types:

- Packet too big (2)
- Echo request (128)
- Multicast listener query (130)
- Multicast listener report (131)
- Multicast listener done (132)
- Router solicitation (133)
- Router advertisement (134)
- Neighbor solicitation (135)
- Neighbor advertisement (136)
- Redirect (137)
- Router renumbering (138)
- MLD v2 listener report (143)
- Duplicate Address Request (157)
- Duplicate Address Confirmation (158)

drop icmp

Drops the ICMPv4 and ICMPv6 packets.

Syntax `drop {icmp | icmp6}`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other Platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11.0.0	Introduced on the S4810, S4820T, S3048-ON, S3100 Series, S4048-ON, S5000, S6000, S6000-ON, Z9500, Z9100-ON, S6100-ON, S6010-ON, S4048T-ON, C9000, and MXL.

Usage Information When the `drop icmp` feature is configured, the system drops the ICMP reply messages on the front end and management interfaces. By default, the Dell EMC Networking OS responds to all the ICMP messages.

NOTE: There is no separate CLI to enable IP ID randomness. By default, the IP ID in the kernel is randomized.

For more information on the ICMP message types, see the [ICMP Commands](#) section.

System Security Commands

The following section lists the system security commands.

generate hash

Generate a hash checksum for the given file or the startup configuration using the MD5, SHA1, or SHA256 algorithm.

Syntax `generate hash {md5 | sha1 | sha256} {flash://filename | startup-config}`

Parameters	md5 sha1 sha256	Enter the keyword <code>md5</code> , <code>sha1</code> , or <code>sha256</code> to generate .
	flash:// filename	Enter the keyword <code>flash:</code> and enter the filename to generate the hash checksum for any file in the flash drive using the MD5, SHA1, or SHA256 algorithm.
	startup-config	Enter the keyword <code>shartup-config</code> to generate the hash checksum for the startup configuration using the MD5, SHA1, or SHA256 algorithm.

Defaults None

Command Modes EXEC Privilege

Command History	Version	Description
	9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.

Usage Information Use the `generate hash` command to generate a hash checksum for your startup configuration, and use the hash to verify using the `verified boot hash` command.

Example

```
DellEMC#generate hash md5 startup-config
MD5SUM(/f10/flash/startup-config) : f81812a64eea202c5b2ef782639bafc3
```

root-access password

Configure the root access password.

Syntax `root-access password [encryption-type] root-password`
To reset to the default password, use the `no root-access password` command.

Parameters

encryption-type (OPTIONAL) Enter an encryption type for the root password that you enter.

- 0 directs the system to store the password as clear text.
- 7 directs the system to store the password with a dynamic salt.
- 9 directs the system to encrypt the clear text password and store the encrypted password in an inaccessible location.

root-password Enter the root password.

Defaults Not configured

Command Modes CONFIGURATION

Command History

Version	Description
9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.

Usage Information

If you configure the `secure-cli` command on the system, the Dell EMC Networking OS resets any previously-configured root access password to the default root password without displaying any warning message. With the `secure-cli` command enabled on the system, the CONFIGURATION mode does not display the `root access password` option.

When you configure the root access password, ensure that your password meets the following criteria:

- A minimum of eight characters in length
- A minimum of one lower case letter (a to z)
- A minimum of one upper case letter (A to Z)
- A minimum of one numeric character (0 to 9)
- A minimum of one special character including a space (" !"#%&'()*+,-./:;<=>@[\\]^_`{|}~")

If your password does not meet the criteria, the system does not accept your password.

If you use encryption type 9, the system stores the clear text password in an inaccessible location on the system. The `show running-configuration` command does not display the password. This configuration is not portable between different systems.

Example

```
DellEMC)# show running-config | g root
root-access password 7
f4dc0cb9787722dd1084d17f417f164cc7f730d4f03d4f0215294cbd899614e3
```

verified boot

Enable OS image hash validation during system startup.

Syntax `verified boot`
To disable OS image hash validation, use the `no verified boot` command.

Defaults Not configured

Command Modes CONFIGURATION

Command History	Version	Description
	9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, MXL, and FN-IOM.
Usage Information	When you reboot the system using the <code>reload</code> command, the system performs OS image verification on the primary boot image. You can enable boot image hash validation only for images on local flash partitions such as A: or B:.	
Example	<pre>DellEMC(config)# verified boot</pre>	

verified boot hash

Verify and store the hash value of the startup configuration.

Syntax	<code>verified boot hash {system-image {A: B:} startup-config} hash value</code>				
Parameters	<p>system-image {A: B:} Enter the keyword <code>system-image</code> and A: or B:, depending on where the image is stored and then the hash value that is present on the iSupport page for your image.</p> <p>startup-config Enter the keyword <code>startup-config</code> and then the hash value for the startup configuration. You can get the hash value for the startup configuration using the <code>generate hash</code> command.</p> <p>hash value Enter the MD5, SHA1, or SHA256 hash.</p>				
Defaults	None				
Command Modes	EXEC Privilege				
Command History	<table border="0"> <tr> <td style="vertical-align: top;">Version</td> <td style="vertical-align: top;">Description</td> </tr> <tr> <td>9.13(0.0)</td> <td>Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.</td> </tr> </table>	Version	Description	9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.
Version	Description				
9.13(0.0)	Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.				
Usage Information	Dell EMC Networking OS supports MD5, SHA1, and SHA256.				
Example	<pre>DellEMC# verified boot hash system-image A: 619A8C1B7A2BC9692A221E2151B9DA9E</pre>				

verified startup-config

Enable hash validation for the startup configuration during system startup.

Syntax	<code>verified startup-config</code>
	To disable hash validation for the startup configuration, use the <code>no verified startup-config</code> command.
Defaults	Not configured
Command Modes	CONFIGURATION

Command History

Version

Description

9.13(0.0)

Introduced on the S3100 series, S3048-ON, S4048-ON, S4048T-ON, S5000, S6000, S6000-ON, S6010-ON, S6100-ON, Z9100-ON, Z9500, C9010, MXL, and FN-IOM.

Example

```
DellEMC(config)# verified startup-config
```

Service Provider Bridging

Service provider bridging is composed of virtual local area network (VLAN) Stacking, Layer 2 Protocol Tunneling, and Provider Backbone Bridging as described in the *Dell EMC Networking OS Configuration Guide Service Provider Bridging* section.

This section includes command line information (CLI) for the Dell EMC Networking OS Layer 2 Protocol Tunneling (L2PT). L2PT enables protocols to tunnel through an 802.1q tunnel.

Dell EMC Networking OS supports L2PT on Dell EMC Networking OS.

For more information, see [VLAN Stacking](#), [Spanning Tree Protocol \(STP\)](#), and [GARP VLAN Registration \(GVRP\)](#).

Important Points to Remember

- L2PT is enabled at the interface VLAN-Stack VLAN level. For more information about Stackable VLAN (VLAN-Stacking) commands, see [VLAN Stacking](#).
- The default behavior is to disable protocol packet tunneling through the 802.1q tunnel.
- Rate-limiting is required to protect against bridge protocol data units (BPDU) attacks.
- A port channel (including through link aggregation control protocol [LACP]) can be configured as a VLAN-Stack access or trunk port.
- Address resolution protocol (ARP) packets work as expected across the tunnel.
- Far-end failure detection (FEFD) works the same as with Layer 2 links.
- Protocols that use Multicast MAC addresses (for example, open shortest path first [OSPF]) work as expected and carry over to the other end of the VLAN-Stack VLAN.

Topics:

- [debug protocol-tunnel](#)
- [protocol-tunnel](#)
- [protocol-tunnel destination-mac](#)
- [protocol-tunnel enable](#)
- [protocol-tunnel rate-limit](#)
- [show protocol-tunnel](#)

debug protocol-tunnel

Enable debugging to ensure incoming packets are received and rewritten to a new MAC address.

Syntax `debug protocol-tunnel interface {in | out | both} [vlan vlan-id] [count value]`

To disable debugging, use the `no debug protocol-tunnel interface {in | out | both} [vlan vlan-id] [count value]` command.

Parameters

interface Enter one of the following interfaces and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.

in out both	Enter the keyword <code>in</code> , <code>out</code> , or <code>both</code> to debug incoming interfaces, outgoing interfaces, or both incoming and outgoing interfaces.
vlan <i>vlan-id</i>	Enter the keyword <code>vlan</code> then the VLAN ID. The range is from 1 to 4094.
count <i>value</i>	Enter the keyword <code>count</code> then the number of debug outputs. The range is from 1 to 100.

Defaults Debug disabled.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series, and E-Series.
7.4.1.0	Introduced

protocol-tunnel

Enable protocol tunneling on a stacked (Q-in-Q) VLAN for specified protocol packets.

Syntax `protocol-tunnel {rate-limit rate | stp}`

To disable protocol tunneling for a Layer 2 protocol, use the `no protocol-tunnel` command.

Parameters	rate-limit <i>rate</i>	Enter the keyword <code>rate-limit</code> followed by a number for the rate-limit for tunneled packets on the VMAN. The range is from 64 to 320.
	stp	Enter the keyword <code>stp</code> to enable protocol tunneling on a spanning tree, including STP, MSTP, RSTP, and PVST.

Defaults none

Command Modes CONF-IF-VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.5.1.1	Added support for 802.1X, E-LMI, GMRP, GVRP, LLDP, LACP, MMRP, MVRP, and OAM 802.3ah protocol traffic to the E-Series.
8.2.1.0	Introduced on the C-Series, E-Series, and E-Series.
7.4.1.0	Introduced

Example

```
DelleMC# conf
DelleMC(conf)#interface vlan 2
DelleMC(conf-if-vl-2)#vlan-stack compatible
DelleMC(conf-if-vl-2)#member Te 1/2-3
DelleMC(conf-if-vl-2)#protocol-tunnel stp
DelleMC(conf-if-vl-2)#protocol-tunnel enable
```

Related Command

- [show protocol-tunnel](#) — displays tunneling information for all VLANs.

protocol-tunnel destination-mac

Overwrite the BPDU destination MAC address with a specific value.

Syntax `protocol-tunnel destination-mac xstp address`

Parameters **stp** Change the default destination MAC address used for L2PT to another value.

Defaults The default destination MAC is 01:01:e8:00:00:00.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series, and S-Series.
7.4.1.0	Introduced

Usage Information

When you enable VLAN-Stacking, no protocol packets are tunneled.

Related Command

- [show protocol-tunnel](#) — displays tunneling information for all VLANs.

protocol-tunnel enable

Enable protocol tunneling globally on the system.

Syntax

`protocol-tunnel enable`

To disable protocol tunneling, use the `no protocol-tunnel enable` command.

Defaults

Disabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.4.1.0	Introduced

Usage Information

Dell EMC Networking OS must have the default CAM profile with the default microcode before you enable L2PT.

protocol-tunnel rate-limit

Enable traffic rate limiting per box.

Syntax `protocol-tunnel rate-limit rate`
To reset the rate limit to the default, use the `no protocol-tunnel rate-limit rate` command.

Parameters *rate* Enter the rate in frames per second. The range is from 75 to 3000. The default is **75**.

Defaults 75 frames per second.

Command Modes CONF-IF-VLAN-STACK

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series and E-Series. Maximum rate limit on E-Series reduced from 4000 to 3000.
7.4.1.0	Introduced

Example

```
DellEMC(conf-if-vl-2)# vlan-stack compatible
DellEMC(conf-if-vl-2-stack)#protocol-tunnle rate-limit 100 <<<<<<<< VLAN
stack mode
DellEMC(conf-if-vl-2-stack)#show config
!
interface Vlan 2
 no ip address
 mtu 1000
 vlan-stack compatible
 protocol-tunnel rate-limit 100
 shutdown
```

- Related Commands**
- [show protocol-tunnel](#) — displays tunneling information for all VLANs.
 - [show running-config](#) — displays the current configuration.

show protocol-tunnel

Display protocol tunnel information for all or a specified VLAN-Stack VLAN.

- Syntax** `show protocol-tunnel [vlan vlan-id]`
- Parameters** **vlan *vlan-id*** (OPTIONAL) Enter the keyword `vlan` then the VLAN ID to display information for the one VLAN. The range is from 1 to 4094.
- Defaults** none
- Command Modes** EXEC
- Command History** This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the C-Series, and E-Series.
7.4.1.0	Introduced

Example

```
DellEMC# show protocol-tunnel
System Rate-Limit: 75 frames/second
VLAN  Protocols  Interface
1000  STP,PVST     Te 5/7,Te 5/6
1001  LLDP,GVRP    Te 5/7,Te 5/6
1002  MMRP,MVRP    Te 5/7,Te 5/6
1003  LACP,DOT1X   Te 5/7,Te 5/6
1004  OAM,PAUSE    Te 5/7,Te 5/6
1005  E-LMI        Te 5/7,Te 5/6
```

Example (Specific VLAN)

```
DellEMC# show protocol-tunnel vlan 2
System Rate-Limit: 1000 Frames/second
Interface  Vlan  Protocol(s)
Te1/2      2     STP, PVST
DellEMC#
```

Related Commands

- [show running-config](#) — displays the current configuration.

The Dell EMC Networking OS supports sFlow commands.

The Dell EMC Networking OS sFlow monitoring system includes an sFlow Agent and an sFlow Collector.

- The sFlow Agent combines the flow samples and interface counters into sFlow datagrams and forwards them to the sFlow Collector.
- The sFlow Collector analyses the sFlow Datagrams received from the different devices and produces a network-wide view of traffic flows.

Important Points to Remember

- Dell EMC Networking recommends that the sFlow Collector be connected to the Dell EMC Networking chassis through a line card port rather than the route processor module (RPM) Management Ethernet port.
- Dell EMC Networking OS exports all sFlow packets to the sFlow Collector. A small sampling rate can equate to many exported packets. A backoff mechanism is automatically applied to reduce this amount. Some sampled packets may be dropped when the exported packet rate is high and the backoff mechanism is about to or is starting to take effect. The dropEvent counter, in the sFlow packet, is always zero.
- sFlow sampling is done on a per-port basis.
- Community list and local preference fields are not filled up in the extended gateway element in the sFlow datagram.
- The 802.1P source priority field is not filled up in the extended switch element in the sFlow datagram.
- Only Destination and Destination Peer AS numbers are packed in the dst-as-path field in the extended gateway element.
- If the packet being sampled is redirected using policy-based routing (PBR), the sFlow datagram may contain incorrect extended gateway/router information.
- sFlow does not support packing extended information for IPv6 packets. Only the first 128 bytes of the IPv6 packet is shipped in the datagram.
- The source virtual local area network (VLAN) field in the extended switch element is not packed if there is a routed packet.
- The destination VLAN field in the extended switch element is not packed if there is a multicast packet.
- The sFlow sampling functionality is supported only for egress traffic and not for ingress traffic.
- The maximum number of packets that can be sampled and processed per second is:
 - 7500 packets when no extended information packing is enabled.
 - 7500 packets when only extended-switch information packing is enabled (see [sflow extended-switch enable](#)).

Topics:

- [sflow collector](#)
- [sflow enable \(Global\)](#)
- [sflow ingress-enable](#)
- [sflow extended-switch enable](#)
- [sflow max-header-size extended](#)
- [sflow polling-interval \(Global\)](#)
- [sflow polling-interval \(Interface\)](#)
- [sflow sample-rate \(Global\)](#)
- [sflow sample-rate \(Interface\)](#)
- [show sflow](#)
- [show sflow stack-unit](#)

sflow collector

Configure a collector device to which sFlow datagrams are forwarded.

Syntax `sflow collector {ip-address | ipv6-address} agent-addr {ip-address | ipv6-address} [number [max-datagram-size number]] | [max-datagram-size number] [vrf management]`

To delete a configured collector, use the `no sflow collector {ip-address | ipv6-address} agent-addr {ipv4-address | ipv6-address} [number [max-datagram-size number]] | [max-datagram-size number] [vrf management]` command.

Parameters

sflow collector ip-address ipv6-address	Enter the IP address of the collector in dotted decimal format for IPv4 or x:x:x:x:x format for IPv6.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.
agent-addr ip-address ipv6-address	Enter the keyword <code>agent-addr</code> followed by the sFlow agent IP address in dotted decimal format for IPv4 or x:x:x:x:x format for IPv6.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.
number	(OPTIONAL) Enter the user datagram protocol (UDP) port number. The range is from 0 to 65535. The default is 6343.
max-datagram-size number	(OPTIONAL) Enter the keyword <code>max-datagram-size</code> then the size number in bytes. The range is from 400 to 1500. The default is 1400 .
vrf management	(OPTIONAL) Enter the keyword <code>vrf</code> followed by the keyword <code>management</code> to configure the collector device corresponding to the default VRF and the management VRF respectively.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.2.3	Added support for IPv6 sFlow collectors and agents on the E-series, C-Series, and S-Series.
8.4.1.1	Added support for IPv6 sFlow collectors and agents on the E-series.
8.3.7.0	Introduced on the S4810.

Version	Description
8.2.1.0	Introduced S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
6.5.1.0	Expanded the <code>no</code> form of the command to mirror the syntax used to configure.
6.2.1.1	Introduced on the E-Series.

Usage Information

You can configure up to two sFlow collectors (IPv4 or IPv6). If two collectors are configured, traffic samples are sent to both.

The sFlow agent address is carried in a field in SFlow packets and is used by the collector to identify the sFlow agent.

In sFlow, the agent address is a single invariant IPv4 or IPv6 address used to identify the agent to the collector. It is usually assigned the address of a loopback interface on the agent, which provides invariance. The agent address is carried as a field in the payload of the sFlow packets.

As part of the sFlow-MIB, if the SNMP request originates from a configured collector, Dell EMC Networking OS returns the corresponding configured agent IP in the MIB requests. Dell EMC Networking OS checks to ensure that two entries are not configured for the same collector IP with a different agent IP. Should that happen, Dell EMC Networking OS generates the following error: `%Error: Different agent-addr attempted for an existing collector.`

Example

```
DellEMC(conf)# sflow collector 10.1.1.25 agent-addr 10.1.1.10 vrf
management
```

sflow enable (Global)

Enable sFlow globally.

Syntax `sflow enable`
To disable sFlow, use the `no sflow enable` command.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

sFlow is disabled by default. In addition to this command, sFlow needs to be enable on individual interfaces where sFlow sampling is desired.

Related Commands

- [sflow enable \(Interface\)](#) — enable sFlow on interfaces.

sflow ingress-enable

Enable sFlow ingress on interfaces.

Syntax

`sflow ingress-enable`

To disable sFlow, use the `no sflow ingress enable` command.

Defaults

Disabled.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced on the S-Series, Z-Series, and MXL switch.
9.2(1.0)	Introduced on the Z9500.

Usage Information

When you enable ingress sFlow on an interface, flow sampling is done on any incoming traffic.

 **NOTE:** After a physical port is a member of a LAG, it inherits the sFlow configuration from the LAG port.

Related Commands

- [sflow enable \(Global\)](#) — turn sFlow globally.

sflow extended-switch enable

Enable packing information on a switch only.

Syntax `sflow extended-switch enable`

To disable packing information, use the `no sflow extended-switch [enable]` command.

Parameters **enable** Enter the keyword `enable` to enable global extended information.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information Dell EMC Networking OS enhances the sflow implementation for real time traffic analysis on the E-Series to provide extended gateway information in cases where the destination IP addresses are learned by different routing protocols and for cases where the destination is reachable over ECMP.

Related Commands

- [show sflow](#) — displays the sFlow configuration.

sflow max-header-size extended

Set the maximum header size of a packet to 256 bytes.

Syntax `sflow max-header-size extended`

To reset the maximum header size of a packet, use the `[no] sflow max-header-size extended` command.

Parameters	extended	Enter the keyword <code>extended</code> to copy 256 bytes from the sample packets to sFlow datagram.
Defaults	128 bytes	
Command Modes	CONFIGURATION INTERFACE	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.7(0.0)	Introduced on the S Series and Z Series switches.

Example

```
DellEMC(conf)# sflow max-header-size extended
```

sflow polling-interval (Global)

Set the sFlow polling interval at a global level.

Syntax `sflow polling-interval interval value`
To return to the default, use the `no sflow polling-interval interval` command.

Parameters ***interval value*** Enter the interval value in seconds. The range is from 15 to 86400 seconds. The default is **20 seconds**.

Defaults **20 seconds**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

The polling interval for an interface is the maximum number of seconds between successive samples of counters sent to the collector. This command changes the global default counter polling (20 seconds) interval. You can configure an interface to use a different polling interval.

Related Commands

- [sflow polling-interval \(Interface\)](#) — sets the polling interval for an interface.

sflow polling-interval (Interface)

Set the sFlow polling interval at an interface (overrides the global-level setting.)

Syntax

`sflow polling-interval interval value`

To return to the default, use the `no sflow polling-interval interval` command.

Parameters

interval value Enter the interval value in seconds. The range is from 15 to 86400 seconds. The default is **the global counter polling interval**.

Defaults

The same value as the current global default counter polling interval.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

This command sets the counter polling interval for an interface.

Related Commands

- [sflow polling-interval \(Global\)](#) — globally sets the polling interval.

sflow sample-rate (Global)

Change the global default sampling rate.

Syntax

`sflow sample-rate value`

To return to the default sampling rate, use the `no sflow sample-rate` command.

Parameters

value

Enter the sampling rate value. For the C-Series and S-Series, the range is from 256 to 8388608 packets. Enter values in powers of 2 only; for example, 4096, 8192, 16384, and so on. The default is **32768 packets**.

Defaults

32768 packets

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.

Version	Description
7.6.1.0	Introduced on the C-Series.
7.4.1.0	Introduced on the E-Series.

Usage Information

Sample-rate is the average number of packets skipped before the sample is taken. This command changes the global default sampling rate. You can configure an interface to use a different sampling rate than the global sampling rate. If the value entered is not a correct power of 2, the command generates an error message with the previous and next power of 2 value. Select one of these two packet numbers and re-enter the command.

Related Commands

- [sflow sample-rate \(Interface\)](#) — changes the interface sampling rate.

sflow sample-rate (Interface)

Change the interface default sampling rate.

Syntax `sflow sample-rate value`

To return to the default sampling rate, use the `no sflow sample-rate` command.

Parameters *value* Enter the sampling rate value. For the C-Series and S-Series, the range is from 256 to 8388608 packets. Enter values in powers of 2 only; for example, 4096, 8192, 16384, etc. The default is **32768** packets.

Defaults The Global default sampling.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

This command changes the sampling rate for an interface. By default, the sampling rate of an interface is set to the same value as the current global default sampling rate. If the value entered is not a correct power of 2, the command generates an error message with the previous and next power-of-2 value. Select one of these two number and re-enter the command.

Related Commands

- [sflow sample-rate \(Global\)](#) — changes the sampling rate globally.

show sflow

Display the current sFlow configuration.

Syntax `show sflow [interface]`

Parameters *interface* (OPTIONAL) Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For the Management interface on the, enter the keyword `ManagementEthernet` then the slot/port information.
- For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on S-Series Stacking.
8.1.1.0	Introduced on the E-Series.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

The dropEvent counter (sFlow samples dropped due to sub-sampling) shown in the following example always displays a value of zero.

Example

```
DellEMC#show sflow
sFlow services are enabled
Egress Management Interface sFlow services are disabled
Global default sampling rate: 32768
Global default counter polling interval: 20
Global default extended maximum header size: 128 bytes
Global extended information enabled: none
1 collectors configured
Collector IP addr: 100.1.1.1, Agent IP addr: 1.1.1.2, UDP port: 6343
VRF: Default
0 UDP packets exported
0 UDP packets dropped
0 sFlow samples collected

stack-unit 1 Port set 1
  Te 1/1: configured rate 16384, actual rate 16384 <<< sampling rate
based on line speed if global sampling rate is default
DellEMC#
```

show sflow stack-unit

Display the sFlow information on a stack-unit.

S5000

Syntax `show sflow stack-unit {unit-number}`

Parameters *unit-number* (OPTIONAL) Enter the stack-unit keyword followed by the unit number. The range is 0 to 11.

Command Modes

- EXEC
- EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on S5000.

Usage Information The dropEvent counter (sFlow samples dropped due to sub-sampling) shown in the Example below always displays a value of zero.

Example

```
Dell#show sflow stack-unit 0
Stack-Unit 0
  Samples rcvd from h/w           :0
  Total UDP packets exported      :0
  UDP packets exported            :0
  UDP packets dropped              :0
Dell#
```

Simple Network Management Protocol (SNMP) and Syslog

This section contains commands to configure and monitor the simple network management protocol (SNMP) v1/v2/v3 and Syslog. Both features are supported on Dell EMC Networking OS.

Topics:

- SNMP Commands
- show snmp
- show snmp engineID
- show snmp group
- show snmp user
- snmp ifmib ifalias long
- snmp-server community
- snmp-server contact
- snmp-server enable traps
- snmp-server engineID
- snmp-server group
- snmp-server host
- snmp-server location
- snmp-server packetsize
- snmp-server trap-source
- snmp-server user
- snmp-server user (for AES128-CFB Encryption)
- snmp-server view
- snmp-server vrf
- snmp trap link-status
- Syslog Commands
- clear logging
- default logging buffered
- default logging console
- default logging monitor
- default logging trap
- logging
- logging buffered
- logging console
- logging facility
- logging history
- logging history size
- logging monitor
- logging on
- logging source-interface
- logging synchronous
- logging trap
- show logging
- show logging driverlog stack-unit
- terminal monitor

SNMP Commands

The following SNMP commands are available in the Dell EMC Networking OS.

The simple network management protocol (SNMP) is used to communicate management information between the network management stations and the agents in the network elements. Dell EMC Networking OS supports SNMP versions 1, 2c, and 3, supporting both read-only and read-write modes. Dell EMC Networking OS sends SNMP traps, which are messages informing an SNMP management system about the network. Dell EMC Networking OS supports up to 16 SNMP trap receivers.

Important Points to Remember

- Typically, 5-second timeout and 3-second retry values on an SNMP server are sufficient for both LAN and WAN applications. If you experience a timeout with these values, the recommended best practice on Dell EMC Networking switches (to accommodate their high port density) is to increase the timeout and retry values on your SNMP server to the following:
 - SNMP Timeout — greater than 3 seconds.
 - SNMP Retry count — greater than 2 seconds.
- If you want to query an E-Series switch using SNMP v1/v2/v3 with an IPv6 address, configure the IPv6 address on a non-management port on the switch.
- If you want to send SNMP v1/v2/v3 traps from an E-Series using an IPv6 address, use a non-management port.
- SNMP v3 informs are not currently supported with IPv6 addresses.
- If you are using access control lists (ACLs) in an SNMP v3 configuration, group ACL overrides user ACL if the user is part of that group.
- SNMP operations are not supported on a virtual local area network (VLAN).

show snmp

Display the status of SNMP network elements.

Syntax `show snmp`

Command Modes • EXEC
 • EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Example

```
DellEMC# show snmp
 32685 SNMP packets input
   0 Bad SNMP version errors
   0 Unknown community name
   0 Illegal operation for community name supplied
   0 Encoding errors
96988 Number of requested variables
   0 Number of altered variables
31681 Get-request PDUs
   968 Get-next PDUs
   0 Set-request PDUs
61727 SNMP packets output
   0 Too big errors (Maximum packet size 1500)
   9 No such name errors
   0 Bad values errors
   0 General errors
 32649 Response PDUs
 29078 Trap PDUs
DellEMC#
```

Related Commands

- [snmp-server community](#) — enables the SNMP and set community string.

show snmp engineID

Display the identification of the local SNMP engine and all remote engines that are configured on the router.

Syntax `show snmp engineID`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Example

```
DellEMC# show snmp engineID
Local SNMP engineID: 0000178B02000001E80214A8
Remote Engine ID      IP-addr      Port
80001F88043132333435  172.31.1.3  5009
80001F88043938373635  172.31.1.3  5008
DellEMC#
```

Related Commands

- [snmp-server engineID](#) — configures local and remote SNMP engines on the router.

show snmp group

Display the group name, security model, status, and storage type of each group.

Syntax `show snmp group`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

The following Example displays a group named *ngroup*. The *ngroup* has a security model of version 3 (v3) with authentication (`auth`), the read and notify name is *nview* with no write view name specified, and finally the row status is active.

Example

```
DellEMC# show snmp group
groupname: v1v2creadg      security model: v1
```

```
readview : vlv2cdefault   writeview: no write view specified
notifyview: vlv2cdefault context: no context specified
row status: active
DellEMC#
```

Related Commands

- [snmp-server group](#) — configures an SNMP server group.

show snmp user

Display the information configured on each SNMP user name.

Syntax `show snmp user`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Example

```
DellEMC#show snmp user
  User name: vlv2creadu
  Engine ID: 0000178B02000001E80214A8
  storage-type: nonvolatile   active
  Authentication Protocol: None
  Privacy Protocol: None
DellEMC#
```

snmp ifmib ifalias long

Display the entire description string through the Interface MIB, which would be truncated otherwise to 63 characters.

Syntax snmp ifmib ifalias long

Defaults Interface description truncated beyond 63 characters.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
unknown	Introduced on the E-Series.

Example

```
DellEMC#config!-----command run on host connected to switch:
-----!
> snmpwalk -c public 10.10.10.130 .1.3.6.1.2.1.31 | grep -i alias | more
IF-MIB::ifAlias.134530304 = STRING: This is a port connected to Router2.
This
is a port connected to
IF-MIB::ifAlias.134792448 = STRING:

!-----command run on Dell EMC Networkingswitch: -----!
DellEMC#snmp ifmib ifalias long

!-----command run on server connected to switch: -----!
> snmpwalk -c public 10.10.10.130 .1.3.6.1.2.1.31 | grep -i alias | more
IF-MIB::ifAlias.134530304 = STRING: This is a port connected to Router2.
This
is a port connected to Router2. This is a port connected to Router2.
This is a
port connected to Router2. This is a port connected to Router2.
IF-MIB::ifAlias.134792448 = STRING:
DellEMC#config
```

snmp-server community

Configure a new community string access for SNMPv1 v2 and v3.

Syntax `snmp-server community community-name {ro | rw} [ipv6 ipv6-access-list-name [ipv6 ipv6-access-list-name | access-list-name | security-name name] | security-name name [ipv6 ipv6-access-list-name | access-list-name | security-name name] | access-list-name [ipv6 ipv6-access-list-name | access-list-name | security-name name]]]`

To remove access to a community, use the `no snmp-server community community-string {ro | rw} [security-name name [access-list-name | ipv6 access-list-name | access-list-name ipv6 access-list-name]]` command.

Parameters

- community-name** Enter a text string (up to 20 characters long) to act as a password for SNMP.
- ro** Enter the keyword `ro` to specify read-only permission.
- rw** Enter the keyword `rw` to specify read-write permission.
- ipv6 access-list-name** (Optional) Enter the keyword `ipv6` then an IPv6 ACL name (a string up to 16 characters long).
- security-name name** (Optional) Enter the keywords `security-name` then the security name as defined by the community MIB.
- access-list-name** (Optional) Enter a standard IPv4 access list name (a string up to 16 characters long).

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information The following example configures a community named *public* that is mapped to the security named *guestuser* with Read Only (`ro`) permissions.

The `security-name` parameter maps the community string to an SNMPv3 user/security name as defined by the community MIB.

If a community string is configured without a `security-name` (for example, `snmp-server community public ro`), the community is mapped to a default security-name/group:

- `v1v2creadu / v1v2creadg` — maps to a community with `ro` (read-only) permissions.
- `v1v2cwriteu/ v1v2cwriteg` — maps to a community with `rw` (read-write) permissions.

The `community-name` parameter indexes this command.

If you do not configure the `snmp-server community` command, you cannot query SNMP data. Only Standard IPv4 ACL and IPv6 ACL is supported in the optional `access-list-name`.

The command options `ipv6`, `security-name`, and `access-list-name` are recursive. In other words, each option can, in turn, accept any of the three options as a sub-option, and each of those sub-options can accept any of the three sub-options as a sub-option, and so forth. The second Example shows the creation of a standard IPv4 ACL called `snmp-ro-acl` and then assigning it to the SNMP community `guest`.

NOTE: For IPv6 ACLs, only IPv6 and UDP types are valid for SNMP; TCP and ICMP rules are not valid for SNMP. In IPv6 ACLs, port rules are not valid for SNMP.

Example

```
DellEMC# config
DellEMC(conf)# snmp-server community public ro
DellEMC(conf)# snmp-server community guest ro security-name guestuser
DellEMC(conf)#
```

Example

```
DellEMC(conf)# ip access-list standard snmp-ro-acl
DellEMC(config-std-nacl)#seq 5 permit host 10.10.10.224
DellEMC(config-std-nacl)#seq 10 deny any count
!
DellEMC(conf)# snmp-server community guest ro snmp-ro-acl
DellEMC(conf)#
```

Related Commands

- [ip access-list standard](#) — names (or selects) a standard access list to filter based on IP address.
- [ipv6 access-list](#) — configures an access list based on IPv6 addresses or protocols.
- [show running-config](#) — displays the current SNMP configuration and defaults.

snmp-server contact

Configure contact information for troubleshooting this SNMP node.

Syntax `snmp-server contact text`

To delete the SNMP server contact information, use the `no snmp-server contact` command.

Parameters `text` Enter an alphanumeric text string, up to 55 characters long.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

snmp-server enable traps

Enable SNMP traps.

Syntax `snmp-server enable traps [notification-type] [notification-option]`

To disable traps, use the `no snmp-server enable traps [notification-type] [notification-option]` command.

Parameters

- notification-type** Enter the type of notification from the following list:
- notification-option** For the `envmon` notification-type, enter one of the following optional parameters:
- `cam-utilization`
 - `fan`
 - `supply`
 - `temperature`
- For the `snmp` notification-type, enter one of the following optional parameters:
- `authentication`
 - `coldstart`
 - `linkdown`
 - `linkup`
 - `syslog-reachable`
 - `syslog-unreachable`

Defaults Not enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced MAC address notification traps on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the following two SNMP notification options: <code>syslog-reachable</code> and <code>syslog-unreachable</code> .
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.1(0.0)	Added support for copy-config and ECMP traps.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.4.1.0	Added support for VRRP traps.
7.6.1.0	Added support for STP and xSTP traps. Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information

Dell EMC Networking OS supports up to 16 SNMP trap receivers.

If you do not configure this command, traps that controlled by this command are not sent. If you do not specify a `notification-type` and `notification-option`, all traps are enabled.

Related Commands

- [snmp-server community](#) — enables SNMP and sets the community string.

snmp-server engineID

Configure the name for both the local and remote SNMP engines on the router.

Syntax

```
snmp-server engineID [local engineID] [remote ip-address vrf vrf-name udp-port port-number engineID]
```

To return to the default, use the `no snmp-server engineID [local engineID] [remote ip-address vrf vrf-name udp-port port-number engineID]` command.

Parameters

local engineID	Enter the keyword <code>local</code> followed by the engine ID number that identifies the copy of the SNMP on the local device. Format (as specified in RFC 3411): 12 octets. <ul style="list-style-type: none"> • The first four octets are set to the private enterprise number. • The remaining eight octets are the MAC address of the chassis.
remote ip-address	Enter the keyword <code>remote</code> followed by the IP address that identifies the copy of the SNMP on the remote device.
vrf vrf-name	Enter the keyword <code>vrf</code> followed by the name of the VRF that is used to reach the device.

NOTE: Use this attribute to specify the VRF that is used by the SNMP engine to reach the device. If no VRF is specified, then the default VRF is used.

udp-port port-number engineID Enter the keywords `udp-port` followed by the user datagram protocol (UDP) port number on the remote device. The range is from 0 to 65535. The default is **162**.

Defaults As above.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

Changing the value of the SNMP Engine ID has important side effects. A user's password (entered on the command line) is converted to a message digest algorithm (MD5) or secure hash algorithm (SHA) security digest. This digest is based on both the password and the local Engine ID. The command line password is then destroyed, as required by RFC 2274. Because of this deletion, if the local value of the Engine ID changes, the security digests of SNMPv3 users is invalid and the users will have to be reconfigured.

For the remote Engine ID, the host IP and UDP port are the indexes to the command that are matched to either overwrite or remove the configuration.

Related Commands

- [show snmp engineID](#) — displays the SNMP engine and all the remote engines that are configured on the router.
- [show running-config snmp](#) — displays the SNMP running configuration.

snmp-server group

Configure a new SNMP group or a table that maps SNMP users to SNMP views.

Syntax `snmp-server group [group_name {1 | 2c | 3 {auth | noauth | priv}}] [read name] [write name] [notify name] [access access-list-name | ipv6 access-list-name | access-list-name ipv6 access-list-name]`

To remove a specified group, use the `no snmp-server group [group_name {v1 | v2c | v3 {auth | noauth | priv}}] [read name] [write name] [notify name] [access access-list-name | ipv6 access-list-name | access-list-name ipv6 access-list-name]` command.

Parameters

- group_name** Enter a text string (up to 20 characters long) as the name of the group. The following groups are created for mapping to read/write community/security-names (defaults):
- `v1v2creadg` — maps to a community/security-name with `ro` permissions.
 - `1v2cwriteg` — maps to a community/security-name `rw` permissions.
- 1 | 2c | 3** (OPTIONAL) Enter the security model version number (1, 2c, or 3):
- 1 is the least secure version.
 - 3 is the most secure of the security modes.
 - 2c allows transmission of informs and counter 64, which allows for integers twice the width of what is normally allowed.
- The default is **1**.
- auth** (OPTIONAL) Enter the keyword `auth` to specify authentication of a packet without encryption.
- noauth** (OPTIONAL) Enter the keyword `noauth` to specify no authentication of a packet.
- priv** (OPTIONAL) Enter the keyword `priv` to specify both authentication and then scrambling of the packet.
- read name** (OPTIONAL) Enter the keyword `read` then a name (a string of up to 20 characters long) as the read view name. The default is **GlobalView** and is assumed to be every object belonging to the internet (1.3.6.1) OID space.
- write name** (OPTIONAL) Enter the keyword `write` then a name (a string of up to 20 characters long) as the write view name.
- notify name** (OPTIONAL) Enter the keyword `notify` then a name (a string of up to 20 characters long) as the notify view name.
- access access-list-name** (Optional) Enter the standard IPv4 access list name (a string up to 16 characters long).
- ipv6 access-list-name** (Optional) Enter the keyword `ipv6` then the IPv6 access list name (a string up to 16 characters long).
- access-list-name ipv6 access-list-name** (Optional) Enter both an IPv4 and IPv6 access list name.

Defaults As above.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.10.2	Added support for the <code>access</code> parameter.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

The following example specifies the group named *harig* as a version 3 user requiring both authentication and encryption and read access limited to the read named *rview*.

 **NOTE:** The number of configurable groups is limited to 16 groups.

Example

```
DellEMC# conf
DellEMC(conf)# snmp-server group harig 3 priv read rview
DellEMC#
```

Related Commands

- `show snmp group` — displays the group name, security model, view status, and storage type of each group.
- `show running-config` — displays the SNMP running configuration.

snmp-server host

Configure the recipient of an SNMP trap operation.

Syntax

```
snmp-server host ip-address | ipv6-address [vrf vrf-name] traps | informs
[version 1 | 2c | 3] [auth | no auth | priv] [community-string] [udp-port
port-number] [notification-type]
```

To remove the SNMP host, use the `no snmp-server host ip-address [vrf vrf-name] traps | informs [version 1 | 2c | 3] [auth | noauth | priv] [community-string] [udp-port number] [notification-type]` command.

Parameters

- ip-address*** Enter the keyword `host` then the IP address of the host (configurable hosts is limited to 16).
- ipv6-address*** Enter the keyword `host` then the IPv6 address of the host in the `x:x:x:x::x` format.
 **NOTE:** The `::` notation specifies successive hexadecimal fields of zero.
- vrf vrf-name*** Enter the keyword `vrf` and then the name of the VRF that the SNMP server uses to connect to the host.

i **NOTE:** You can use this attribute to inform the SNMP engine about the vrf instance to be used to reach the corresponding remote host to send Trap or Inform message. If no VRF is specified, then the default VRF is used.

traps (OPTIONAL) Enter the keyword `traps` to send trap notifications to the specified host. The default is **traps**.

informs (OPTIONAL) Enter the keyword `informs` to send inform notifications to the specified host. The default is **traps**.

version 1 | 2c | 3 (OPTIONAL) Enter the keyword `version` to specify the security model then the security model version number 1, 2c, or 3:

- Version 1 is the least secure version.
- Version 3 is the most secure of the security modes.
- Version 2c allows transmission of informs and counter 64, which allows for integers twice the width of what is normally allowed.

The default is version **1**.

auth (OPTIONAL) Enter the keyword `auth` to specify authentication of a packet without encryption.

noauth (OPTIONAL) Enter the keyword `noauth` to specify no authentication of a packet.

priv (OPTIONAL) Enter the keyword `priv` to specify both authentication and then scrambling of the packet.

community-string Enter a text string (up to 20 characters long) as the name of the SNMP community.

i **NOTE:** For version 1 and version 2c security models, this string represents the name of the SNMP community. The string can be set using this command; however, Dell EMC Networking OS recommends setting the community string using the `snmp-server community` command before executing this command. For version 3 security model, this string is the USM user security name.

udp-port port-number (OPTIONAL) Enter the keywords `udp-port` followed by the port number of the remote host to use. The range is from 0 to 65535. The default is **162**.

notification-type (OPTIONAL) Enter one of the following keywords for the type of trap to be sent to the host:

- `bgp` — Enable BGP state change traps.
- `ecfm` — Enable ECFM state change traps.
- `entity` — Enable entity change traps.
- `envmon` — Enable SNMP environmental monitor traps.
- `eoam` — Enable EOAM state change traps
- `ets` — Enable ets traps
- `fips` — Enable FIP Snooping state change traps
- `lACP` — Enable LACP state change traps.
- `mac` — Enable MAC address notification traps.
- `isis` — Enable ISIS adjacency change traps.
- `pfc` — Enable pfc traps.
- `snmp` — Enable SNMP trap.
- `stp` — Enable 802.1d state change traps.
- `vlt` — Enable VLT traps.
- `vrrp` — Enable VRRP state change traps.
- `xstp` — Enable 802.1s, 802.1w, and PVST+ state change traps.

The default is all trap types are sent to host.

Defaults As above.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.12(0.0)	Introduced MAC address notification traps on all the Dell EMC Networking OS platforms.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148 and S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.1(0.0)	Added support for config and ecmp traps.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.4.1.0	Added support for VRRP traps.
7.6.1.0	Added support for STP and xSTP notification types. Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

To configure the router to send SNMP notifications, enter at least one `snmp-server host` command. If you enter the command with no keywords, all trap types are enabled for the host. If you do not enter an `snmp-server host` command, no notifications are sent.

In order to enable multiple hosts, issue a separate `snmp-server host` command for each host. You can specify multiple notification types in the command for each host.

When multiple `snmp-server host` commands are given for the same host and type of notification (trap or inform), each succeeding command overwrites the previous command. Only the last `snmp-server host` command will be in effect. For example, if you enter an `snmp-server host inform` command for a host and then enter another `snmp-server host inform` command for the same host, the second command replaces the first command.

The `snmp-server host` command is used with the `snmp-server enable` command. Use the `snmp-server enable` command to specify which SNMP notifications are sent globally. For a host to receive most notifications, at least one `snmp-server enable` command and the `snmp-server host` command for that host must be enabled.

i **NOTE:** For v1 / v2c trap configuration, if the community-string is not defined using the `snmp-server community` command prior to using this command, the default form of the `snmp-server community` command automatically is configured with the community-name the same as specified in the `snmp-server host` command.

Configuring Informs

To send an inform, use the following steps:

1. Configure a remote engine ID.
2. Configure a remote user.
3. Configure a group for this user with access rights.
4. Enable traps.
5. Configure a host to receive informs.

Related Commands

- [snmp-server enable traps](#) — enables SNMP traps.
- [snmp-server community](#) — configures a new community SNMPv1 or SNMPv2c.

snmp-server location

Configure the location of the SNMP server.

Syntax `snmp-server location text`
 To delete the SNMP location, use the `no snmp-server location` command.

Parameters `text` Enter an alpha-numeric text string, up to 55 characters long.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

snmp-server packetsize

Set the largest SNMP packet size permitted. When the SNMP server is receiving a request or generating a reply, use the `snmp-server packetsize global configuration` command.

Syntax `snmp-server packetsize byte-count`

Parameters	<i>byte-count</i>	Enter one of the following values 8, 16, 24 or 32. Packet sizes are 8000 bytes, 16000 bytes, 32000 bytes, and 64000 bytes.
Defaults	8	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.2(1.0)	Introduced on the Z9500.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.
	7.6.1.0	Introduced on the S-Series.
	7.5.1.0	Introduced on the C-Series.
	E-Series legacy command	

snmp-server trap-source

Configure a specific interface as the source for SNMP traffic.

Syntax `snmp-server trap-source interface`
 To disable sending traps out a specific interface, use the `no snmp trap-source` command.

Parameters ***interface***

Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port channel interface, enter the keywords `port-channel` then a number.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults The IP address assigned to the management interface is the default.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

To enable this `snmp-server trap-source` command, configure an IP address on the interface and enable the interface configured as an SNMP trap source.

Related Commands

- [snmp-server community](#) — sets the community string.

snmp-server user

Configure a new user to an SNMP group.

Syntax

```
snmp-server user name {group_name remote ip-address vrf vrf-name udp-port port-number} [1 | 2c | 3] [encrypted] [auth {md5 | sha} auth-password] [priv {des56 | aes128} priv password] [access access-list-name | ipv6 access-list-name | access-list-name | access-list-name ipv6 access-list-name]
```

To remove a user from the SNMP group, use the `no snmp-server user name {group_name remote ip-address udp-port port-number} [1 | 2c | 3] [encrypted] [auth {md5 | sha} auth-password] [priv {des56 | aes128} priv password] [access access-list-name | ipv6 access-list-name | access-list-name | access-list-name ipv6 access-list-name]` command.

Parameters

- | | |
|--------------------------|---|
| <i>name</i> | Enter the name of the user (not to exceed 20 characters), on the host that connects to the agent. |
| <i>group_name</i> | Enter a text string (up to 20 characters long) as the name of the group. The following groups are created for mapping to read/write community/security-names (defaults): <ul style="list-style-type: none">• <code>v1v2creadu</code> — maps to a community with <code>ro</code> permissions.• <code>1v2cwriteu</code> — maps to a community <code>rw</code> permissions. |

remote ip-address	Enter the keywords <code>udp-port</code> then the user datagram protocol (UDP) port number on the remote device. The range is from 0 to 65535. The default is 162 .
vrf vrf-name	Enter the keywords <code>vrf</code> and then the name of the VRF this is used to connect to the SNMP server.  NOTE: Use this attribute to specify a VRF name that is used to connect to the remote host. If no VRF is specified, then the default VRF is used.
udp-port port-number	Enter the keywords <code>udp-port</code> then the UDP (User Datagram Protocol) port number on the remote device. The range is from 0 to 65535. The default is 162 .
1 2c 3	(OPTIONAL) Enter the security model version number (1, 2c, or 3): <ul style="list-style-type: none"> • 1 is the least secure version. • 3 is the most secure of the security modes. • 2c allows transmission of informs and counter 64, which allows for integers twice the width of what is normally allowed. The default is 1 .
encrypted	(OPTIONAL) Enter the keyword <code>encrypted</code> to specify the password appear in encrypted format (a series of digits, masking the true characters of the string).
auth	(OPTIONAL) Enter the keyword <code>auth</code> to specify authentication of a packet without encryption.
md5 sha	(OPTIONAL) Enter the keyword <code>md5</code> or <code>sha</code> to designate the authentication level. <ul style="list-style-type: none"> • <code>md5</code> — Message Digest Algorithm • <code>sha</code> — Secure Hash Algorithm
auth-password	(OPTIONAL) Enter a text string (up to 20 characters long) password that enables the agent to receive packets from the host. Minimum: eight characters long.
priv	(OPTIONAL) Enter the keywords <code>priv</code> to initiate a privacy authentication level setting.
des56 aes128	(OPTIONAL) Enter the keyword <code>des56</code> or <code>aes128</code> to specify the encryption mode. <ul style="list-style-type: none"> • <code>aes128</code> — Use 128 bit AES algorithm in CFB mode for encryption. • <code>des56</code> — Use 56 bit DES algorithm in CBC mode for encryption.
priv password	(OPTIONAL) Enter a text string (up to 20 characters long) password that enables the host to encrypt the contents of the message it sends to the agent. Minimum: eight characters long.
access access-list-name	(Optional) Enter the standard IPv4 access list name (a string up to 16 characters long).
ipv6 access-list-name	(Optional) Enter the keyword <code>ipv6</code> then the IPv6 access list name (a string up to 16 characters long).
access-list-name ipv6 access-list-name	(Optional) Enter both an IPv4 and IPv6 access list name.

Defaults As above.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6.(0.0)	Added aes 128 encryption algorithm parameter.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Usage Information

NOTE: For IPv6 ACLs, only IPv6 and UDP types are valid for SNMP. TCP and ICMP rules are not valid for SNMP. In IPv6 ACLs port rules are not valid for SNMP.

No default values exist for authentication or privacy algorithms and no default password exists. If you forget a password, you cannot recover it; the user must be reconfigured. You can specify either a plain-text password or an encrypted cypher-text password. In either case, the password is stored in the configuration in an encrypted form and displayed as encrypted in the `show running-config` command.

If you have an encrypted password, you can specify the encrypted string instead of the plain-text password. The following command is an Example of how to specify the command with an encrypted string.

NOTE: The number of configurable users is limited to 16.

Example

```
DellEMC# snmp-server user privuser v3group v3 encrypted auth md5
9fc53d9d908118b2804fe80e3ba8763d priv des56
d0452401a8c3ce42804fe80e3ba8763d
```

Usage Information

The following command is an example of how to enter a plain-text password as the string `authpasswd` for user `authuser` of group `v3group`.

Example

```
DellEMC#conf
DellEMC(conf)# snmp-server user authuser v3group v3 auth md5 authpasswd
```

Usage Information

The following command configures a remote user named `n3user` with a `v3` security model and a security level of `authNOPriv`.

Example

```
DellEMC#conf
DellEMC(conf)# snmp-server user n3user ngroup remote 172.31.1.3 udp-port
5009 3
auth md5 authpasswd
```

Related Commands

- `show snmp user` — displays the information configured on each SNMP user name.

snmp-server user (for AES128-CFB Encryption)

Specify that AES128-CFB encryption algorithm needs to be used for transmission of SNMP information. The Advanced Encryption Standard (AES) Cipher Feedback (CFB) 128-bit encryption algorithm is in compliance with RFC 3826. RFCs for SNMPv3 define two authentication hash algorithms, namely, HMAC-MD5-96 and HMAC-SHA1-96. These are the full forms or editions of the truncated versions, namely, HMAC-MD5 and HMAC-SHA1 authentication algorithms.

Syntax

```
snmp-server user name {group_name remote ip-address udp-port port-number}
[1 | 2c | 3] [encrypted] [auth {md5 | sha} auth-password] [priv {des56
| aes128-cfb} priv-password] [access access-list-name | ipv6 access-list-
name | access-list-name ipv6 access-list-name]
```

To remove a user from the SNMP group, use the `no snmp-server user name {group_name remote ip-address udp-port port-number} [1 | 2c | 3] [encrypted] [auth {md5 | sha} auth-password] [priv {des56 | aes128-cfb} priv-password] [access access-list-name | ipv6 access-list-name | access-list-name ipv6 access-list-name]` command.

Parameters

- auth-password** (OPTIONAL) Enter a text string (up to 20 characters long) password that enables the agent to receive packets from the host and to send packets to the host. Minimum: eight characters long.
- aes128** (OPTIONAL) Enter the keyword `aes128` to initiate the AES128-CFB encryption algorithm for transmission of SNMP packets.
- priv-password** (OPTIONAL) Enter a text string (up to 20 characters long) password that enables the host to encrypt the contents of the message it sends to the agent and to decrypt the contents of the message it receives from the agent. Minimum: eight characters long.

Defaults If no authentication or privacy option is configured, then the messages are exchanged (attempted anyway) without any authentication or encryption.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.3(0.0)	Added support for the AES128-CFB encryption algorithm on the S4820T, S4810, S6000 and Z-Series platforms

Usage Information To enable robust, effective protection and security for SNMP packets transferred between the server and the client, you can use the `snmp-server user username group groupname 3 auth authentication-type auth-password priv aes128 priv-password` to specify that AES128-CFB encryption algorithm needs to be used.

You cannot modify the FIPS mode if SNMPv3 users are already configured and present in the system. An error message is displayed if you attempt to change the FIPS mode by using the `fips mode enable`

command in Global Configuration mode. You can enable or disable FIPS mode only if SNMPv3 users are not previously set up. Otherwise, you must remove the previously configured users before you change the FIPS mode.

Example

```
DellEMC# snmp-server user privuser v3group v3 encrypted auth md5
9fc53d9d908118b2804fe80e3ba8763d priv aes128
d0452401a8c3ce42804fe80e3ba8763d
```

Related Commands

- [show snmp user](#) — Displays the information configured on each SNMP user name.

snmp-server view

Configure an SNMPv3 view.

Syntax

```
snmp-server view view-name oid-tree {included | excluded}
```

To remove an SNMPv3 view, use the `no snmp-server view view-name oid-tree {included | excluded}` command.

Parameters

<i>view-name</i>	Enter the name of the view (not to exceed 20 characters).
<i>oid-tree</i>	Enter the OID sub tree for the view (not to exceed 20 characters).
included	(OPTIONAL) Enter the keyword <code>included</code> to include the MIB family in the view.
excluded	(OPTIONAL) Enter the keyword <code>excluded</code> to exclude the MIB family in the view.

Defaults

none

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

The `oid-tree` variable is a full sub-tree starting from 1.3.6 and cannot specify the name of a sub-tree or a MIB. The following Example configures a view named `rview` that allows access to all objects under 1.3.6.1.

Example

```
DellEMC# conf
DellEMC#(conf) snmp-server view rview 1.3.6.1 included
```

Related Commands

- [show running-config snmp](#) — displays the SNMP running configuration.

snmp-server vrf

Configures an SNMP agent to bind to a specific VRF.

Syntax

```
snmp-server vrf vrf-name
```

To undo the SNMP agent configuration, use the `no snmp-server vrf vrf-name` command.

Parameters

vrf vrf-name

Enter the keyword `vrf` and then the name of the VRF to associate an SNMP agent with that VRF.

Defaults

Not Enabled.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

Use this command to bind an SNMP agent to a VRF. The SNMP agent processes the requests from the interfaces that belong to the specified VRF. If no VRF is specified, then the default VRF is used.

Related Commands

- [show snmp user](#) — display the information configured on each SNMP user name.

snmp trap link-status

Enable the interface to send SNMP link traps, which indicate whether the interface is up or down.

Syntax

```
snmp trap link-status
```

To disable sending link trap messages, use the `no snmp trap link-status` command.

Defaults

Enabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information If the interface is expected to flap during normal usage, you could disable this command.

Syslog Commands

The following commands allow you to configure logging functions on all Dell EMC Networking switches.

clear logging

Clear the messages in the logging buffer.

Syntax clear logging

Defaults none

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Related Commands

- [show logging](#) — display logging settings and system messages in the internal buffer.

default logging buffered

Return to the default setting for messages logged to the internal buffer.

Syntax `default logging buffered`

Defaults `size = 40960; level = 7 or debugging`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Related Commands

- [logging buffered](#) — set the logging buffered parameters.

default logging console

Return the default settings for messages logged to the console.

Syntax `default logging console`

Defaults **level = 7 or debugging**

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Related Commands

- [logging console](#) — set the logging console parameters.

default logging monitor

Return to the default settings for messages logged to the terminal.

Syntax `default logging monitor`

Defaults **level = 7 or debugging**

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Related Commands

- [logging monitor](#) — set the logging monitor parameters.
- [terminal monitor](#) — send system messages to the terminal/monitor.

default logging trap

Return to the default settings for logging messages to the Syslog servers.

Syntax `default logging trap`

Defaults **level = 6 or informational**

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Related Commands

- [logging trap](#) — limit messages logged to the Syslog servers based on severity.

logging

Configure an IP address or host name of a Syslog server where logging messages are sent. Multiple logging servers of both IPv4 and/or IPv6 can be configured.

Syntax `logging {ip-address | ipv6-address | hostname} {{udp {port}} | {tcp {port}}} [vrf vrf-name]`

To disable logging, use the `no logging` command.

Parameters

ip-address	Enter the IPv4 address in dotted decimal format.
ipv6-address	Enter the IPv6 address in the x:x:x::X format.  NOTE: The :: notation specifies successive hexadecimal fields of zeros.
hostname	Enter the name of a host already configured and recognized by the switch.
udp	Enter the keyword <code>udp</code> to enable transmission of log message over UDP followed by port number. The default port is 514
tcp	Enter the keyword <code>tcp</code> to enable transmission of log message over TCP followed by port number.
vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF to enable the logging process in VRF mode.  NOTE: Use this attribute to specify the VRF that is used to contact the host. By default, the default VRF is used.

Defaults Disabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Added udp and tcp keywords for the Z9500.
9.5(0.0)	Added udp and tcp keywords for the S4810, S4820T, S6000, Z9000, and MXL.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.4.1.0	Added support for IPv6.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information

Multiple logging servers of both IPv4 and/or IPv6 can be configured.

Related Commands

- [logging on](#) — enables the logging asynchronously to logging buffer, console, Syslog server, and terminal lines.
- [logging trap](#) — enables logging to the Syslog server based on severity.

logging buffered

Enable logging and specify which messages are logged to an internal buffer. By default, all messages are logged to the internal buffer.

Syntax

```
logging buffered [level] [size]
```

To return to the default values, use the default `logging buffered` command.

To disable logging stored to an internal buffer, use the `no logging buffered` command.

Parameters

level	(OPTIONAL) Indicate a value from 0 to 7 or enter one of the following equivalent words: <code>emergencies</code> , <code>alerts</code> , <code>critical</code> , <code>errors</code> , <code>warnings</code> , <code>notifications</code> , <code>informational</code> , or <code>debugging</code> . The default is 7 or debugging .
size	(OPTIONAL) Indicate the size, in bytes, of the logging buffer. The number of messages buffered depends on the size of each message. The range is from 40960 to 524288. The default is 40960 bytes .

Defaults

level = **7**; size = **40960 bytes**

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Usage Information

When you decrease the buffer size, all messages stored in the buffer are lost. Increasing the buffer size does not affect messages stored in the buffer.

Related Commands

- [clear logging](#) — clears the logging buffer.
- [default logging buffered](#) — returns the logging buffered parameters to the default setting.
- [show logging](#) — displays the logging setting and system messages in the internal buffer.

logging console

Specify which messages are logged to the console.

Syntax

`logging console [level]`

To return to the default values, use the `default logging console` command.

To disable logging to the console, use the `no logging console` command.

Parameters

level (OPTIONAL) Indicate a value from 0 to 7 or enter one of the following parameters: `emergencies`, `alerts`, `critical`, `errors`, `warnings`, `notifications`, `informational`, or `debugging`. The default is **7** or **debugging**.

Defaults

level = **7**; size = **debugging**

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Related Commands

- [clear logging](#) — clears the logging buffer.
- [default logging console](#) — returns the logging console parameters to the default setting.
- [show logging](#) — displays the logging setting and system messages in the internal buffer.

logging facility

Configure the Syslog facility used for error messages sent to Syslog servers.

Syntax

`logging facility [facility-type]`

To return to the default values, use the `no logging facility` command.

Parameters

- facility-type** (OPTIONAL) Enter one of the following parameters:
- `auth` (authorization system)
 - `cron` (Cron/at facility)
 - `daemon` (system daemons)
 - `kern` (kernel)
 - `local10` (local use)
 - `local11` (local use)
 - `local12` (local use)
 - `local13` (local use)
 - `local14` (local use)
 - `local15` (local use)
 - `local16` (local use)
 - `local17` (local use)
 - `lpr` (line printer system)
 - `mail` (mail system)
 - `news` (USENET news)
 - `sys9` (system use)
 - `sys10` (system use)

- `sys11` (system use)
- `sys12` (system use)
- `sys13` (system use)
- `sys14` (system use)
- `syslog` (Syslog process)
- `user` (user process)
- `uucp` (Unix to Unix copy process)

The default is **local7**.

Defaults `local7`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

- Related Commands**
- [logging](#) — enables logging to a Syslog server
 - [logging on](#) — enables logging.

logging history

Specify which messages are logged to the history table of the switch and the SNMP network management station (if configured).

Syntax `logging history level`

To return to the default values, use the `no logging history` command.

Parameters `level` Indicate a value from 0 to 7 or enter one of the following equivalent words: `emergencies`, `alerts`, `critical`, `errors`, `warnings`, `notifications`, `informational`, or `debugging`. The default is **4** or **warnings**.

Defaults	warnings or 4
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information	When you configure the <code>snmp-server trap-source</code> command, the system messages logged to the history table are also sent to the SNMP network management station.
Related Commands	<ul style="list-style-type: none"> show logging — displays information logged to the history buffer.

logging history size

Specify the number of messages stored in the Dell EMC Networking logging history table.

Syntax	<code>logging history size size</code>	
	To return to the default values, use the <code>no logging history size</code> command.	
Parameters	size	Indicate a value as the number of messages to be stored. The range is from 0 to 500. The default is 1 message .
Defaults	1 message	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

When the number of messages reach the limit you set with the `logging history size` command, older messages are deleted as newer ones are added to the table.

Related Commands

- [show logging](#) — displays information logged to the history buffer.

logging monitor

Specify which messages are logged to Telnet applications.

Syntax

```
logging monitor [level]
```

To disable logging to terminal connections, use the `no logging monitor` command.

Parameters

level Indicate a value from 0 to 7 or enter one of the following parameters: `emergencies`, `alerts`, `critical`, `errors`, `warnings`, `notifications`, `informational`, or `debugging`. The default is **7** or **debugging**.

Defaults

7 or **debugging**

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
E-Series legacy command	

Related Commands

- [default logging monitor](#) — returns the logging monitor parameters to the default setting.

logging on

Specify that debug or error messages are asynchronously logged to multiple destinations, such as the logging buffer, Syslog server, or terminal lines.

Syntax `logging on`
 To disable logging to logging buffer, Syslog server and terminal lines, use the `no logging on` command.

Defaults Enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

When you use the `no logging on` command, messages are logged only to the console.

Related Commands

- [logging](#) — enable logging to the Syslog server.
- [logging buffered](#) — set the logging buffered parameters.
- [logging console](#) — set the logging console parameters.
- [logging monitor](#) — set the logging parameters for the terminal connections.

logging source-interface

Specify that the IP address of an interface is the source IP address of Syslog packets sent to the Syslog server.

Syntax

`logging source-interface interface`

To disable this command and return to the default setting, use the `no logging source-interface` command.

Parameters

interface

Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For the Management interface, enter the keyword `ManagementEthernet` then the slot/port information.
- For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.
- For a Null interface, enter the keyword `null` then the Null interface number.
- For a VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

Syslog messages contain the IP address of the interface used to egress the router. By configuring the `logging source-interface` command, the Syslog packets contain the IP address of the interface configured.

Related Commands

- [logging](#) — enables logging to the Syslog server.

logging synchronous

Synchronize unsolicited messages and Dell EMC Networking OS output.

Syntax

```
logging synchronous [level level | all] [limit number-of-buffers]
```

To disable message synchronization, use the `no logging synchronous [level level | all] [limit number-of-buffers]` command.

Parameters

all	Enter the keyword <code>all</code> to ensure that all levels are printed asynchronously.
level <i>level</i>	Enter the keyword <code>level</code> then a number as the severity level. A high number indicates a low severity level and vice versa. The range is from 0 to 7. The default is 2 .
all	Enter the keyword <code>all</code> to turn off all.
limit <i>number-of-buffers</i>	Enter the keyword <code>limit</code> then the number of buffers to be queued for the terminal after which new messages are dropped. The range is from 20 to 300. The default is 20 .

Defaults

Disabled. If enabled without the `level` or `number-of-buffers` options specified, `level = 2` and `number-of-buffers = 20` are the defaults.

Command Modes

LINE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

When you enable `logging synchronous`, unsolicited messages appear between software prompts and outputs. Only the messages with a severity at or below the set level are sent to the console.

If the message queue limit is reached on a terminal line and messages are discarded, a system message appears on that terminal line. Messages may continue to appear on other terminal lines.

Related Commands

- [logging on](#) — enables logging.

logging trap

Specify which messages are logged to the Syslog server based the message severity.

Syntax

`logging trap [level]`

To return to the default values, use the default `logging trap` command.

To disable logging, use the `no logging trap` command.

Parameters

level Indicate a value from 0 to 7 or enter one of the following parameters: `emergencies`, `alerts`, `critical`, `errors`, `warnings`, `notifications`, `informational`, or `debugging`. The default is **6** or **informational**.

Defaults

6 or **informational**

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series, S55.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Usage Information

To block a type of message parameter, set the logging trap level to a lower number. For example, to block severity messages at level 6, set the level to 5.

Related Commands

- [logging](#) — enables the logging to another device.
- [logging on](#) — enables logging.

show logging

Display the logging settings and system messages logged to the internal buffer of the switch.

Syntax

```
show logging [number | history [reverse][number] | reverse [number] |
summary]
```

Parameters

number	(OPTIONAL) Enter the number of messages displayed in the output. The range is from 1 to 65535.
history	(OPTIONAL) Enter the keyword <code>history</code> to view only information in the Syslog history table.
reverse	(OPTIONAL) Enter the keyword <code>reverse</code> to view the Syslog messages in FIFO (first in, first out) order.
summary	(OPTIONAL) Enter the keyword <code>summary</code> to view a table showing the number of messages per type and per slot. Slots *7* and *8* represent RPMs.

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Example (Partial)

```
DelleMC#show logging
Syslog logging: enabled
  Console logging: level debugging
  Monitor logging: level debugging
  Buffer logging: level debugging, 5604 Messages Logged, Size (524288 bytes)
  Trap logging: level informational
Oct 8 09:25:37: %RPM1:RP1 %BGP-5-ADJCHANGE: Connection with neighbor 223.80.255.254 closed. Hold time expired
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.200.13.2 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.13 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 1.1.14.2 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.14 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 1.1.11.2 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.5 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.4.1.3 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.4 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.6 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.12 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.15 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.1.1.3 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.200.12.2 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 1.1.10.2 Up
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Session closed by neighbor 1.1.10.2 (Hold time expired)
Oct 8 09:25:38: %RPM1:RP1 %BGP-5-ADJCHANGE: Neighbor 192.200.14.7 Up
Oct 8 09:26:25: %RPM1:RP1 %BGP-5-ADJCHANGE: Connection with neighbor 1.1.11.2 closed. Neighbor recycled
Oct 8 09:26:25: %RPM1:RP1 %BGP-5-ADJCHANGE: Connection with neighbor 1.1.14.2 closed. Neighbor recycled
--More--
```

Example (History)

```
DelleMC#show logging history
Syslog History Table: 1 maximum table entries, saving level Warnings or higher
  SNMP notifications not Enabled
%RPM:0:0 %CHMGR-2-LINECARDDOWN - Line card 3 down - IPC timeout
DelleMC#
```

show logging driverlog stack-unit

Display the driver log for the specified stack member.

S5000

Syntax	<code>show logging driverlog stack-unit <i>unit-number</i></code>	
Parameters	stack-unit <i>unit-number</i>	Enter the keywords <code>stack-unit</code> followed by the unit number. The range is 0 to 11.
defaults	none	
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege	
Command History	Version 9.0(1.3)	Introduced on the S5000.
Usage Information	This command displays internal software driver information, which may be useful during troubleshooting switch initialization errors, such as a downed Port-Pipe.	

terminal monitor

Configure the Dell EMC Networking OS to display messages on the monitor/terminal.

Syntax	<code>terminal monitor</code>	
	To return to default settings, use the <code>terminal no monitor</code> command.	
defaults	Disabled.	
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
	9.10(0.0)	Introduced on the S3148.
	9.10(0.0)	Introduced on the S6100-ON.
	9.8(2.0)	Introduced on the S3100 series.
	9.8(1.0)	Introduced on the Z9100-ON.
	9.8(0.0P5)	Introduced on the S4048-ON.
	9.8(0.0P2)	Introduced on the S3048-ON.
	9.7(0.0)	Introduced on the S6000-ON.
	9.2(1.0)	Introduced on the Z9500.
	9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
	9.0.2.0	Introduced on the S6000.
	8.3.19.0	Introduced on the S4820T.
	8.3.11.1	Introduced on the Z9000.
	8.3.7.0	Introduced on the S4810.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

E-Series legacy command

Related Commands

- [logging monitor](#) — set the logging parameters on the monitor/terminal.

Spanning Tree Protocol (STP)

The commands in this section configure and monitor the IEEE 802.1d spanning tree protocol (STP) and are supported on the Dell EMC Networking switch/routing platform.

Topics:

- [bridge-priority](#)
- [debug spanning-tree](#)
- [description](#)
- [disable](#)
- [forward-delay](#)
- [hello-time](#)
- [max-age](#)
- [protocol spanning-tree](#)
- [show config](#)
- [show spanning-tree 0](#)
- [spanning-tree 0](#)

bridge-priority

Set the bridge priority of the switch in an IEEE 802.1D spanning tree.

Syntax `bridge-priority {priority-value | primary | secondary}`
To return to the default value, use the `no bridge-priority` command.

Parameters

<i>priority-value</i>	Enter a number as the bridge priority value. The range is from 0 to 65535. The default is 32768 .
primary	Enter the keyword <code>primary</code> to designate the bridge as the root bridge.
secondary	Enter the keyword <code>secondary</code> to designate the bridge as a secondary root bridge.

Defaults `priority-value = 32768`

Command Modes SPANNING TREE (The prompt is "config-stp".)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

debug spanning-tree

Enable debugging of the spanning tree protocol and view information on the protocol.

Syntax `debug spanning-tree {stp-id [all | bpdu | config | events | exceptions | general | root] | protocol}`

To disable debugging, use the `no debug spanning-tree` command.

Parameters	Parameter	Description
	stp-id	Enter zero (0). The switch supports one spanning tree group with a group ID of 0.
	protocol	Enter the keyword for the type of STP to debug, either <code>mstp</code> , <code>pvst</code> , or <code>rstp</code> .
	all	(OPTIONAL) Enter the keyword <code>all</code> to debug all spanning tree operations.
	bpdu	(OPTIONAL) Enter the keyword <code>bpdu</code> to debug bridge protocol data units.
	config	(OPTIONAL) Enter the keyword <code>config</code> to debug configuration information.
	events	(OPTIONAL) Enter the keyword <code>events</code> to debug STP events.
	general	(OPTIONAL) Enter the keyword <code>general</code> to debug general STP operations.
	root	(OPTIONAL) Enter the keyword <code>root</code> to debug STP root transactions.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

When you enable `debug spanning-tree bpdu` for multiple interfaces, the software only sends information on BPDUs for the last interface specified.

Related Commands

- [protocol spanning-tree](#) — enters SPANNING TREE mode on the switch.

description

Enter a description of the spanning tree.

Syntax

`description {description}`

To remove the description from the spanning tree, use the `no description {description}` command.

Parameters

description Enter a description to identify the spanning tree (80 characters maximum).

Defaults

none

Command Modes

SPANNING TREE (The prompt is “config-stp”.)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced

Related Commands

- [protocol spanning-tree](#) — enter SPANNING TREE mode on the switch.

disable

Disable the spanning tree protocol globally on the switch.

Syntax	<code>disable</code> To enable Spanning Tree Protocol, use the <code>no disable</code> command.
Defaults	Enabled (that is, the spanning tree protocol is disabled.)
Command Modes	SPANNING TREE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands	<ul style="list-style-type: none">protocol spanning-tree — enter SPANNING TREE mode on the switch.
-------------------------	--

forward-delay

The amount of time the interface waits in the Listening state and the Learning state before transitioning to the Forwarding state.

Syntax	<code>forward-delay seconds</code> To return to the default setting, use the <code>no forward-delay</code> command.
Parameters	seconds Enter the number of seconds the Dell EMC Networking OS waits before transitioning STP to the Forwarding state. The range is from 4 to 30. The default is 15 seconds .
Defaults	15 seconds
Command Modes	SPANNING TREE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [max-age](#) — changes the wait time before STP refreshes protocol configuration information.
- [hello-time](#) — changes the time interval between BPDUs.

hello-time

Set the time interval between generation of the spanning tree bridge protocol data units (BPDUs).

Syntax `hello-time seconds`

To return to the default value, use the `no hello-time` command.

Parameters **seconds** Enter a number as the time interval between transmission of BPDUs. The range is from 1 to 10. The default is **2 seconds**.

Defaults **2 seconds**

Command Modes SPANNING TREE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Related Commands

- [forward-delay](#) — changes the wait time before STP transitions to the Forwarding state.
- [max-age](#) — changes the wait time before STP refreshes protocol configuration information.

max-age

To maintain configuration information before refreshing that information, set the time interval for the spanning tree bridge.

Syntax `max-age seconds`

To return to the default values, use the `no max-age` command.

Parameters `seconds` Enter a number of seconds the Dell EMC Networking OS waits before refreshing configuration information. The range is from 6 to 40. The default is **20 seconds**.

Defaults `20 seconds`

Command Modes SPANNING TREE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

- Related Commands**
- [forward-delay](#) — changes the wait time before STP transitions to the Forwarding state.
 - [hello-time](#) — changes the time interval between BPDUs.

protocol spanning-tree

To enable and configure the spanning tree group, enter SPANNING TREE mode.

Syntax `protocol spanning-tree stp-id`

To disable the Spanning Tree group, use the `no protocol spanning-tree stp-id` command.

Parameters **stp-id** Enter zero (0). Dell EMC Networking OS supports one spanning tree group, group 0.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information STP is not enabled when you enter SPANNING TREE mode. To enable STP globally on the switch, use the `no disable` command from SPANNING TREE mode.

Example

```
DelleMC(conf)# protocol spanning-tree 0
DelleMC(config-stp)#
```

Related Commands

- [disable](#) — disables spanning tree group 0. To enable spanning tree group 0, use the `no disable` command.

show config

Display the current configuration for the mode. Only non-default values display.

Syntax `show config`

Command Modes SPANNING TREE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(config-stp)# show config
protocol spanning-tree 0
  no disable
DellEMC(config-stp)#
```

show spanning-tree 0

Display the spanning tree group configuration and status of interfaces in the spanning tree group.

Syntax `show spanning-tree 0 [active | brief | guard | interface interface | root | summary]`

Parameters	
0	Enter 0 (zero) to display information about that specific spanning tree group.
active	(OPTIONAL) Enter the keyword <code>active</code> to display only active interfaces in spanning tree group 0.
brief	(OPTIONAL) Enter the keyword <code>brief</code> to display a synopsis of the spanning tree group configuration information.
guard	(OPTIONAL) Enter the keyword <code>guard</code> to display the type of guard enabled on an STP interface and the current port state.

interface <i>interface</i>	(OPTIONAL) Enter the keyword <code>interface</code> and the type slot/port of the interface you want displayed. Type slot/port options are the following: <ul style="list-style-type: none"> • For a port-channel interface, enter the keywords <code>port-channel</code> then the port-channel ID. • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
root	(OPTIONAL) Enter the keyword <code>root</code> to display configuration information on the spanning tree group root.
summary	(OPTIONAL) Enter the keyword <code>summary</code> to only the number of ports in the spanning tree group and their state.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.4.2.1	Added support for the optional <code>guard</code> keyword on the C-Series, S-Series, and E-Series.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information Enable spanning tree group 0 prior to using this command.

The following describes the `show spanning-tree 0` command shown in the example.

Field	Description
“Bridge Identifier...”	Lists the bridge priority and the MAC address for this STP bridge.
“Configured hello...”	Displays the settings for hello time, max age, and forward delay.
“We are...”	States whether this bridge is the root bridge for the STG.
“Current root...”	Lists the bridge priority and MAC address for the root bridge.

Field	Description
“Topology flag...”	States whether the topology flag and the detected flag were set.
“Number of...”	Displays the number of topology changes, the time of the last topology change, and on what interface the topology change occurred.
“Timers”	Lists the values for the following bridge timers: hold time, topology change, hello time, max age, and forward delay.
“Times”	List the number of seconds since the last: <ul style="list-style-type: none"> • hello time • topology change • notification • aging
“Port 1...”	Displays the Interface type slot/port information and the status of the interface (Disabled or Enabled).
“Port path...”	Displays the path cost, priority, and identifier for the interface.
“Designated root...”	Displays the priority and MAC address of the root bridge of the STG that the interface belongs.
“Designated port...”	Displays the designated port ID.

Example

```

DelleMC# show spann 0

Executing IEEE compatible Spanning Tree Protocol
Bridge Identifier has priority 32768, Address 0001.e800.0a56
Configured hello time 2, max age 20, forward delay 15
We are the root of the spanning tree
Current root has priority 32768 address 0001.e800.0a56
Topology change flag set, detected flag set
Number of topology changes 1 last change occurred 0:00:05 ago
  from TenGigabitEthernet 1/3
Timers:hold 1, topology change 35
        hello 2, max age 20, forward_delay 15
Times:hello 1, topology change 1, notification 0, aging 2

Port 26 (TenGigabitEthernet 1/1) is Forwarding
Port path cost 4, Port priority 8, Port Identifier 8.26
Designated root has priority 32768, address 0001.e800.0a56
Designated bridge has priority 32768, address 0001.e800.0a56
Designated port id is 8.26, designated path cost 0
Timers: message age 0, forward_delay 0, hold 0
Number of transitions to forwarding state 1
BPDU: sent:18, received 0
The port is not in the portfast mode

Port 27 (TenGigabitEthernet 1/2) is Forwarding
Port path cost 4, Port priority 8, Port Identifier 8.27
Designated root has priority 32768, address 0001.e800.0a56
Designated bridge has priority 32768, address 0001.e800.0a56
Designated port id is 8.27, designated path cost 0
Timers: message age 0, forward_delay 0, hold 0
Number of transitions to forwarding state 1
BPDU: sent:18, received 0
The port is not in the portfast mode

Port 28 (TenGigabitEthernet 1/3) is Forwarding
Port path cost 4, Port priority 8, Port Identifier 8.28
Designated root has priority 32768, address 0001.e800.0a56
Designated bridge has priority 32768, address 0001.e800.0a56
Designated port id is 8.28, designated path cost 0
Timers: message age 0, forward_delay 0, hold 0
Number of transitions to forwarding state 1
BPDU: sent:31, received 0

```

```
The port is not in the portfast mode
DellEMC#
```

Example (Brief)

```
DellEMC# show span 0 brief
  Executing IEEE compatible Spanning Tree Protocol
  Root ID Priority 32768
    Address 0001.e800.0a56
  Root Bridge hello time 2, max age 20, forward delay 15
  Bridge ID Priority 32768,
    Address 0001.e800.0a56
  Configured hello time 2, max age 20, forward delay 15
Interface                               Designated
Name      PortID Prio Cost Sts Cost Bridge ID                               PortID
-----
Te 1/1 8.26  8   4   FWD 0   32768 0001.e800.0a56 8.26
Te 1/2 8.27  8   4   FWD 0   32768 0001.e800.0a56 8.27
Te 1/3 8.28  8   4   FWD 0   32768 0001.e800.0a56 8.28
DellEMC#
```

Usage Information

The following describes the `show spanning-tree 0 guard` command shown in the example.

Field	Description
Interface Name	STP interface.
Instance	STP 0 instance.
Sts	Port state: root-inconsistent (INCON Root), forwarding (FWD), listening (LIS), blocking (BLK), or shut down (EDS Shut).
Guard Type	Type of STP guard configured (Root, Loop, or BPDU guard).

Example (Guard)

```
DellEMC#show spanning-tree 0 guard
Interface
Name      Instance      Sts          Guard type
-----
Te 1/1    0              INCON(Root)  Rootguard
Te 1/2    0              LIS          Loopguard
Te 1/3    0              EDS (Shut)   Bpduguard
```

spanning-tree 0

Assigns a Layer 2 interface to STP instance 0 and configures a port cost or port priority, or enables loop guard, root guard, or the Portfast feature on the interface.

Syntax

```
spanning-tree stp-id {cost cost | {loopguard | rootguard} | portfast
[bpduguard [shutdown-on-violation]] | priority priority}
```

To disable Spanning Tree group on an interface, use the `no spanning-tree stp-id {cost cost | {loopguard | rootguard} | portfast [bpduguard [shutdown-on-violation]] | priority priority}` command.

Parameters

- stp-id*** Enter the STP instance ID. The range is 0.
- cost cost*** Enter the keyword `cost` followed by a number as the cost. The range is 1 to 65535. The defaults are:
 - 100 Mb/s Ethernet interface = **19**.
 - 1-Gigabit Ethernet interface = **4**.
 - 10-Gigabit Ethernet interface = **2**.
 - Port Channel interface with 100 Mb/s Ethernet = **18**.
 - Port Channel interface with 1-Gigabit Ethernet = **3**.
 - Port Channel interface with 10-Gigabit Ethernet = **1**.

loopguard	(C-, S-, and E-Series TeraScale and S4810 only) Enter the keyword <code>loopguard</code> to enable STP loop guard on a port or port-channel interface.
rootguard	(C-, S-, and E-Series TeraScale and S4810 only) Enter the keyword <code>rootguard</code> to enable STP root guard on a port or port-channel interface.
portfast [bpduguard [shutdown-on- violation]]	Enter the keyword <code>portfast</code> to enable Portfast to move the interface into Forwarding mode immediately after the root fails. Enter the optional keyword <code>bpduguard</code> to disable the port when it receives a BPDU. Enter the optional keyword <code>shutdown-on-violation</code> to hardware disable an interface when a BPDU is received and the port is disabled.
priority <i>priority</i>	Enter keyword <code>priority</code> followed by a number as the priority. The range is zero (0) to 15. The default is 8 .

Defaults cost = depends on the interface type; priority = **8**

Command Modes INTERFACE

Command History

Version 8.3.10.1	Introduced the <code>loopguard</code> and <code>rootguard</code> options on the S4810.
Version 8.4.2.1	Introduced the <code>loopguard</code> and <code>rootguard</code> options on the E-Series TeraScale, C-Series, and S-Series.
Version 8.3.7.0	Introduced on the S4810.
Version 8.2.1.0	Introduced the <code>shutdown-on-violation</code> option.
Version 7.7.1.0	Introduced on the S-Series.
Version 7.5.1.0	Introduced on the C-Series.
Version 6.2.1.1	Introduced on the E-Series.

Usage Information

If you enable `portfast bpduguard` on an interface and the interface receives a BPDU, the software disables the interface and sends a message stating that fact. The port is in `ERR_DISABLE` mode, yet appears in the `show interface` commands as enabled. If you do not enable `shutdown-on-violation`, BPDUs still are sent to the RPM CPU.

STP loop guard and root guard are supported on a port or port-channel enabled in any Spanning Tree mode: Spanning Tree Protocol (STP), Rapid Spanning Tree Protocol (RSTP), Multiple Spanning Tree Protocol (MSTP), and Per-VLAN Spanning Tree Plus (PVST+).

Root guard is supported on any STP-enabled port or port-channel except when used as a stacking port. When enabled on a port, root guard applies to all VLANs configured on the port.

STP root guard and loop guard cannot be enabled at the same time on a port. For example, if you configure loop guard on a port on which root guard is already configured, the following error message is displayed: `% Error: RootGuard is configured. Cannot configure LoopGuard.`

Do not enable Portfast BPDU guard and loop guard at the same time on a port. Enabling both features may result in a port that remains in a blocking state and prevents traffic from flowing through it. For example, when Portfast BPDU guard and loop guard are both configured:

- If a BPDU is received from a remote device, BPDU guard places the port in an Err-Disabled Blocking state and no traffic is forwarded on the port.
- If no BPDU is received from a remote device, loop guard places the port in a Loop-Inconsistent Blocking state and no traffic is forwarded on the port.

To display the type of STP guard (Portfast BPDU, root, or loop guard) enabled on a port, enter the `show spanning-tree 0` command.

Stacking Commands

All commands in this chapter are specific to the Dell Networking OS on the S5000 switch.

The commands are always available and operational. You can use the commands to pre-configure a switch so that the configuration settings are invoked when the switch is attached to other S5000 units.

For information about using the S5000 stacking feature, refer to the Stacking chapter in the *Dell Networking OS Configuration Guide* for the S5000.

CAUTION: You cannot enable S5000 stacking simultaneously with virtual link trunking (VLT). If you enable both at the same time, unexpected behavior occurs.

Topics:

- [redundancy disable-auto-reboot stack-unit](#)
- [redundancy force-failover stack-unit](#)
- [reset stack-unit](#)
- [show redundancy](#)
- [show system stack-ports](#)
- [show system stack-unit stack-group](#)
- [stack-unit location-led](#)
- [stack-unit priority](#)
- [stack-unit renumber](#)
- [stack-unit stack-group](#)
- [upgrade boot \(stack unit\)](#)
- [upgrade system \(stack unit\)](#)

redundancy disable-auto-reboot stack-unit

Prevent the S5000 stack management unit, stack member unit, and standby unit from rebooting if they fail.

S5000

Syntax	<code>redundancy disable-auto-reboot stack-unit [members 0-11]</code> To re-enable the automatic reboot of a failed stack unit, use the <code>no redundancy disable-auto-reboot stack-unit</code> command.
Defaults	Disabled (a failed switch automatically reboots).
Command Modes	CONFIGURATION
Command History	Version 9.0(1.3) Introduced on the S5000.
Usage Information	The range is 0 to 11. Entering this command disables the automatic reboot and keeps a failed stack unit in the Failed state. A failed switch does not reboot until you manually reload it. The disabling of the automatic reboot is displayed in the running-config.
Related Commands	show redundancy – displays the current redundancy status.

redundancy force-failover stack-unit

Force the standby unit in the stack to become the management unit.

Syntax	<code>redundancy force-failover stack-unit</code>
Defaults	Not enabled.
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Added the <code>members</code> option.

Usage Information Executing this command on the master unit reboots the master unit and the standby unit becomes the new master. A new standby unit is elected depending on the priority and MAC address.

Example

```
DellEMC#redundancy force-failover stack-unit
System configuration has been modified. Save? [yes/no]: yes
!
Apr 20 11:44:03: %STKUNIT1-M:CP %FILEMGR-5-FILESAVED: Copied running-
config to startup-config in flash by default
Synchronizing data to peer stack-unit
!!!

...
Proceed with stack-unit hot failover [confirm yes/no]:yes
```

reset stack-unit

Reset any designated stack member except the management unit (master unit).

Syntax	
Parameters	stack-unit Enter the stack-unit number. hard Reset the stack unit if the unit is in a problem state.
Defaults	none
Command Modes	EXEC
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.1.0	Added the <code>hard reset</code> option.

Usage Information

Resetting the management unit is not allowed, and an error message displays if you try to do so. Resetting is a soft reboot, including flushing the forwarding tables.

Starting with Dell EMC Networking OS version 7.8.1.0, you can run this command directly on the stack standby unit (standby master) to reset the standby. You cannot reset any other unit from the standby unit.

Example

Related Commands

- `reload` – reboots Dell EMC Networking OS.

show redundancy

Display the current redundancy configuration (status of automatic reboot configuration on stack management unit).

Syntax `show redundancy`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information

To modify your results, use the `show redundancy [pipe]` command, as follows:

- `except` — show only text that doesn't match a pattern.
- `find` — search for the first occurrence of a pattern.
- `grep` — show only text that matches a pattern.
- `no-more` — do not paginate the output.
- `save` — save the output to a file.

Example

show system stack-ports

Display information about the stacking ports on all switches in the stack.

Syntax	<code>show system stack-ports [status topology]</code>	
Parameters	status	(OPTIONAL) Enter the keyword <code>status</code> to display the command output without the Connection field.
	topology	(OPTIONAL) Enter the keyword <code>topology</code> to limit the table to just the Interface and Connection fields.

Defaults none

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Usage Information The following describes the `show system stack-ports` command shown in the following example.

Field	Description
Topology	Lists the topology of stack ports connected: Ring, Daisy chain, or Standalone.
Interface	The unit/port ID of the connected stack port on this unit.
Link Speed	Link Speed of the stack port (10 or 40) in Gb/s.
Admin Status	The only currently listed status is Up.
Connection	The stack port ID to which this unit's stack port is connected.

Example

Example (Status)

Example (Topology)

- Related Commands**
- [reset stack-unit](#) – resets the designated stack member.
 - [show hardware stack-unit](#) – displays the data plane or management plane input and output statistics of the designated component of the designated stack member.
 - [show system](#) – displays the current status of all stack members or a specific member.

show system stack-unit stack-group

Display the stacking group port information for the specified stack-unit.

Syntax `show system stack-unit stack-unit stack-group`

Defaults none

Command Modes GLOBAL

Command History **Version 8.3.10.2** Introduced on the S4810.

Example

```
Dell#show system stack-unit 0 stack-group
Stack Group      Ports
-----
0                0/0, 1, 2, 3
1                0/4, 5, 6, 7
2                0/8, 9, 10, 11
3                0/12, 13, 14, 15
4                0/16, 17, 18, 19
...
13              0/48
14              0/52
15              0/56
16              0/60
```

stack-unit location-led

Toggle the stack unit location LED on or off.

Syntax `stack-unit stack-unit-number location-led { off | on }`

Parameters **stack-unit *stack-unit-number*** Enter the keywords `stack-unit` and the stack unit number.

on | off Turn the stack unit location LED on or off.

Default None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.10(0.0)	Introduced on the S6100-ON and S5000.
9.8(1.0)	Introduced on the Z9100-ON.

Example

```
DellEMC#stack-unit 1 location-led on
```

stack-unit priority

Configure the ability of a switch to become the management unit of a stack.

Syntax `stack-unit stack-number priority priority-value`

Parameters **stack-number** Enter the stack member unit identifier.

priority-value This preference parameter allows you to specify the management priority of one backup switch over another, with 1 as the lowest priority and 14 being the highest. The switch with the highest priority value is chosen to become the management unit if the active management unit fails or on the next reload.

Defaults 1

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.

Related Commands

- [reload](#) – reboots Dell EMC Networking OS.

stack-unit renumber

Change the stack member ID of any stack member or a stand-alone unit.

Syntax `stack-unit 0-11 renumber 0-11`

Parameters

0-11 The first instance of this value is the stack member unit identifier, from 0 to 11, of the switch that you want add to the stack. The range is: 0 to 11. The second instance of this value is the desired new unit identifier number.

Defaults none

Command Modes EXEC Privilege

Command History

Version 8.3.19.0 Introduced on the S4820T.

Version 8.3.7.0 Introduced on the S4810.

Version 7.7.1.0 Introduced on the S-Series.

Usage Information

You can renumber any switch, including the management unit or a stand-alone unit.

You cannot renumber a unit to a number of an active member in the stack.

When executing this command on the master, the stack reloads. When the members are renumbered, only that specific unit is reset and comes up with the new unit number.

Example

```
Dell#stack-unit 5 renumber 6

Renumbering will reset the unit.
Warning: Interface configuration for current unit will be lost!
Proceed to renumber [confirm yes/no]:
```

Related Commands

- [reload](#) – reboots Dell Networking OS.
- [reset stack-unit](#) – resets the designated S-Series stack member.

stack-unit stack-group

Configure the stacking unit and stacking group by specifying an ID when adding units to a stack to ensure the unit is assigned to the correct group.

Syntax	<code>stack-unit unit-id stack-group stack-group-id</code> To remove the current stack group configuration, use the <code>no stack-unit unit-id stack-group stack-id</code> command.
Parameters	unit-id Enter the stack unit ID. stack-group-id
Defaults	none
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.0)	Introduced on the S6100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.1	Introduced on the S4810.
8.3.12.0	Reset command mode from EXEC to CONFIGURATION.

Usage Information

The following message displays to confirm the command.

```
Setting ports Fo 1/60 as stack group will make their interface configs obsolete after a reload.[confirm yes/no]: If "y" is entered, all non-default configurations on any member ports of the current stack group will be removed when the unit is rebooted.
```

NOTE: Any scripts used to streamline the stacking configuration process must be updated to reflect the Command Mode change from EXEC Privilege to CONFIGURATION to allow the scripts to work correctly.

upgrade boot (stack unit)

Upgrade the boot image (bootflash or bootselector) on one or all stack units in an S5000 stack from the master switch.

S5000

Syntax	<code>upgrade boot {bootflash-image bootselector-image} stack-unit {stack-unit-id all} {booted: flash://file-path ftp://file-path tftp://file-path usbflash://file-path}</code>
Parameters	boot Enter the keyword <code>boot</code> to change the boot image. bootflash-image Upgrade the boot image in the bootflash partition. bootselector-image Upgrade the boot image in the bootselector partition. You are prompted to enter the password.

stack-unit Enter the keyword `stack-unit`: followed by the stack unit ID of a member unit or `all` to upgrade the boot image on all stack member units. Valid stack-unit ID numbers are 0 to 11.

{stack-unit-id | all}

booted: Upgrade the stack using the image with which the master switch booted up.

flash: After the keyword `flash`:, enter the location of the source file in the internal flash in the format: `//file-pathname` or press **Enter** to launch a prompt sequence.

ftp: After the keyword `ftp`:, enter the location of the source file in the format: `//userid:password@host-ip-address/file-pathname` or press **Enter** to launch a prompt sequence.

tftp: After the keyword `tftp`:, enter the location of the source file in the format: `//host-ipaddress/file-pathname` or press **Enter** to launch a prompt sequence.

usbflash: After the keyword `usbflash`:, enter the location of the source file in the format: `//file-pathname` or press **Enter** to launch a prompt sequence.

file-path Enter the path and filename to be used to upgrade the boot image.

Defaults none

Command Modes EXEC Privilege

Command History **Version 9.0(1.3)** Introduced on the S5000.

Usage Information You must reload the stack after entering the upgrade `boot stack-unit` command to boot up stack units with the new boot code.

Example

```
Dell#upgrade boot bootselector-image stack-unit all booted

Password:

Current BootSelector information in the system:
=====

Card   BootSelector   Current Version   New Version
-----
Unit0  Boot Selector  1.3.0.0m          1.3.0.0m
Unit7  Boot Selector  1.3.0.0m          1.3.0.0m
Unit8  Boot Selector  1.3.0.0m          1.3.0.0m
Unit9  Boot Selector  1.3.0.0m          1.3.0.0m

*****
* Warning - Upgrading boot selectors is inherently risky and *
* should only be attempted when necessary. A failure at this *
* upgrade may cause a board RMA. Proceed with caution ! *
*****

Proceed Boot Selector image for all units [yes/no]: yes

Programming
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Bootselector image upgrade for all completed successfully.
Dell#

Dell#upgrade boot bootflash-image stack-unit all booted

Current BootFlash information in the system:
=====

Card   BootFlash   Current Version   New Version
-----
Unit0  Boot Flash B  1.3.1.1o          1.3.1.1p
Unit7  Boot Flash B  1.3.1.1o          1.3.1.1p
Unit8  Boot Flash A  1.3.1.1o          1.3.1.1p
```

```

Unit9 Boot Flash A 1.3.1.1o 1.3.1.1p

*****
* Warning - Upgrading boot flash is inherently risky and *
* should only be attempted when necessary. A failure at this *
* upgrade may cause a board RMA. Proceed with caution ! *
*****

Proceed Boot Flash image for all units [yes/no]: yes
Programming
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!.
01:01:29: %STKUNIT7-M:CP %SYSADM-5-CPU_THRESHOLD:
Overall cpu usage of management-unit is above threshold.
CpulminUsage (89%)
01:01:29: %STKUNIT7-M:CP %SYSADM-5-TASK_CPU_THRESHOLD:
lmin cpu utilization of management-unit has exceeded the threshold. Top
three processes are sysdlp (79.79%), system (7.60%), sysd (1.01%)
!!!!!!!!!!01:01:34: %STKUNIT7-M:CP %SYSADM-5-CPU_THRESHOLD:
Overall cpu usage of stack-unit 10 is above threshold.
CpulminUsage (90%)
01:01:34: %STKUNIT7-M:CP %SYSADM-5-TASK_CPU_THRESHOLD:
lmin cpu utilization of stack-unit 10 has exceeded the threshold.
Top three processes are dla (88.75%), KP (2.50%), frrpaRecv (0.00%)
!!!!!!!!!!01:01:40: %STKUNIT7-M:CP %SYSADM-5-CPU_THRESHOLD:
Overall cpu usage of stack-unit 9 is above threshold.
CpulminUsage (96%)
01:01:40: %STKUNIT7-M:CP %SYSADM-5-TASK_CPU_THRESHOLD:
lmin cpu utilization of stack-unit 9 has exceeded the threshold.
Top three processes are dla (94.83%), KP (2.17%), frrpaRecv (0.00%)
!!01:01:40: %STKUNIT7-M:CP %SYSADM-5-CPU_THRESHOLD:
Overall cpu usage of stack-unit 11 is above threshold.
CpulminUsage (96%)
01:01:40: %STKUNIT7-M:CP %SYSADM-5-TASK_CPU_THRESHOLD:
lmin cpu utilization of stack-unit 11 has exceeded the threshold.
Top three processes are dla (94.58%), KP (2.25%), frrpaRecv (0.00%)
!!!!!!!!!!01:01:45: %STKUNIT7-M:CP %SYSADM-5-CPU_THRESHOLD:
Overall cpu usage of stack-unit 0 is above threshold. CpulminUsage (91%)
01:01:46: %STKUNIT7-M:CP %SYSADM-5-TASK_CPU_THRESHOLD:
lmin cpu utilization of stack-unit 0 has exceeded the threshold.
Top three processes are dla (89.75%), KP (2.67%), frrpaRecv (0.00%)
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!.
Bootflash image upgrade for all completed successfully.

```

upgrade system (stack unit)

Upgrade the Dell Networking OS image on one or all stack units in an S5000 stack from the master switch.

S5000

Syntax `upgrade system {flash://file-path | ftp://file-path | scp://file-path | tftp://file-path | usbflash://file-path} | stack-unit {stack-unit-id | all} {A: | B:}}`

Parameters

- boot** Enter the keyword `system` to change the Dell Networking OS image.
- flash:** After the keyword `flash:`, enter the location of the source file in the internal flash in the format: `//file-pathname` or press **Enter** to launch a prompt sequence.
- ftp:** After the keyword `ftp:`, enter the location of the source file in the format: `//userid:password@host-ipaddress/file-pathname` or press **Enter** to launch a prompt sequence.

Storm Control

The Dell EMC Networking OS storm control feature allows you to limit or suppress traffic during a traffic storm (Broadcast/Unknown Unicast Rate Limiting or Multicast on the C-Series and S-Series).

Storm control is supported on Dell EMC Networking OS.

Important Points to Remember

- Interface commands can only be applied on physical interfaces (virtual local area networks [VLANs] and link aggregation group [LAG] interfaces are not supported).
 - An INTERFACE-level command only supports storm control configuration on ingress.
 - An INTERFACE-level command overrides any CONFIGURATION-level ingress command for that physical interface, if both are configured.
 - You can apply the CONFIGURATION-level storm control commands at ingress or egress and are supported on all physical interfaces.
 - When storm control is applied on an interface, the percentage of storm control applied is calculated based on the advertised rate of the line card. It is not based on the speed setting for the line card.
 - Do not apply per-VLAN quality of service (QoS) on an interface that has storm control enabled (either on an interface or globally).
 - When you enable broadcast storm control on an interface or globally on ingress, and DSCP marking for a DSCP value 1 is configured for the data traffic, the traffic goes to queue 1 instead of queue 0.
 - Similarly, if you enable unicast storm control on an interface or globally on ingress, and DSCP marking for a DSCP value 2 is configured for the data traffic, the traffic goes to queue 2 instead of queue 0.
- i NOTE:** Bi-directional traffic (unknown unicast and broadcast) along with egress storm control causes the configured traffic rates split between the involved ports. The percentage of traffic that each port receives after the split is not predictable. These ports can be in the same/different port pipes or the same/different line cards.
- i NOTE:** The policy discard drop counters are common across storm-control drops, ACL drops and QoS drops. If your configuration includes ACL and QoS, those drops are also computed and displayed in the policy discard drops counter field along with storm-control drops. The packets dropped by the storm control feature can be monitored by viewing the value of the Policy Discard Drops field of the output of the `show hardware stack-unit stack-unit-number drops` command.

Topics:

- [show storm-control broadcast](#)
- [show storm-control multicast](#)
- [show storm-control unknown-unicast](#)
- [storm-control broadcast \(Configuration\)](#)
- [storm-control broadcast \(Interface\)](#)
- [storm-control PFC/LLFC](#)
- [storm-control multicast \(Configuration\)](#)
- [storm-control multicast \(Interface\)](#)
- [storm-control unknown-unicast \(Configuration\)](#)
- [storm-control unknown-unicast \(Interface\)](#)

show storm-control broadcast

Display the storm control broadcast configuration.

Syntax `show storm-control broadcast [interface]`

Parameters	<i>interface</i>	(OPTIONAL) Enter one of the following interfaces to display the interface-specific storm control configuration: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
Defaults	none	
Command Modes	<ul style="list-style-type: none"> • EXEC • EXEC Privilege 	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

show storm-control multicast

Display the storm control multicast configuration.

Syntax	<code>show storm-control multicast [<i>interface</i>]</code>	
Parameters	<i>interface</i>	(OPTIONAL) Enter one of the following interfaces to display the interface specific storm control configuration: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. • For a port channel interface, enter the keywords <code>port-channel</code> then a number.
Defaults	None	

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-Series and S-Series.

Example

```
DellEMC# show storm-control multicast Tengigabitethernet 1/1
Multicast storm control configuration
Interface  Direction      Packets/Second
-----
Te 1/1      Ingress          5
DellEMC#
```

show storm-control unknown-unicast

Display the storm control unknown-unicast configuration.

Syntax `show storm-control unknown-unicast [interface]`

Parameters *interface* (OPTIONAL) Enter one of the following interfaces to display the interface specific storm control configuration:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a port channel interface, enter the keywords `port-channel` then a number.

Defaults None

Command Modes • EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.5.1.0	Added support for 4-port 40G line cards on the E-Series.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.5.1.0	Introduced on the E-Series.

storm-control broadcast (Configuration)

Configure the percentage of broadcast traffic allowed in the network.

Syntax	<code>storm-control broadcast [packets_per_second in]</code> To disable broadcast rate-limiting, use the <code>no storm-control broadcast [packets_per_second in]</code> command. storm-control broadcast [percentage decimal_value in out] [wred-profile name] [packets_per_second in] To disable broadcast rate-limiting, use the storm-control broadcast [percentage decimal_value in out] [wred-profile name] [packets_per_second in] command.
Parameters	<p>percentage decimal_value in out Enter the percentage of broadcast traffic allowed in or out of the network. Optionally, you can designate a decimal value percentage, for example, 55.5%. The decimal range is from .1 to .9.</p> <p>wred-profile name Enter the keyword wred-profile followed by the profile name to designate a wred-profile.</p> <p>packets_per_second in Enter the packets per second of broadcast traffic allowed into the network. The range is from 0 to 33554368.</p>
Defaults	none
Command Modes	CONFIGURATION (conf)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-MUX (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Added the <code>percentage decimal value</code> option.
6.5.1.0	Introduced on the E-Series.

Usage Information

Broadcast storm control is valid on Layer 2/Layer 3 interfaces only. Layer 2 broadcast traffic is treated as unknown-unicast traffic.

storm-control broadcast (Interface)

Configure the percentage of broadcast traffic allowed on an interface (ingress only).

Syntax

```
storm-control broadcast [packets_per_second in]
```

To disable broadcast storm control on the interface, use the `no storm-control broadcast [packets_per_second in]` command.

Parameters

packets_per_second in Enter the packets per second of broadcast traffic allowed into the network. The range is from 0 to 33554368.

Defaults

none

Command Modes INTERFACE (*conf-if-interface-slot/port*)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Added the <code>percentage decimal value</code> option.
6.5.1.0	Introduced on the E-Series.

storm-control PFC/LLFC

Shut down the port if it receives the PFC/LLFC frames more than the configured rate.

Syntax	<code>storm-control pfc-llfc [pps]in shutdown</code>	
Parameters	<i>pfc-llfc in</i>	Enter the keyword <i>pfc-llfc</i> to get the flow control traffic. The range is from 0 to 33554368 packets per second.
	shutdown	Enter the keyword <i>shutdown</i> to shut down the port when the rate exceeds.
Defaults	none	
Command Modes	INTERFACE (<i>conf-if-interface-slot/port</i>)	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell Networking OS Command Line Reference Guide</i> .	
	Version	Description
	9.9(0.0)	Introduced on the C9010, S4810, S4820T, S5000, S6000, Z9500, S3048-ON, S4048-ON, and S6000-ON.

Usage Information  **NOTE:** PFC/LLFC storm control enabled interfaces disable the interfaces if it receives continuous PFC/LLFC packets. It can be a result of a faulty NIC/Switch that sends spurious PFC/LLFC packets.

storm-control multicast (Configuration)

Configure the packets per second (pps) of multicast traffic allowed into the C-Series and S-Series networks only.

Syntax	<code>storm-control multicast packets_per_second in</code>	
	To disable storm-control for multicast traffic into the network, use the <code>no storm-control multicast packets_per_second in</code> command.	
Parameters	<i>packets_per_second in</i>	Enter the packets per second of multicast traffic allowed into the network. The range is from 0 to 33554368.

Defaults	none																																
Command Modes	CONFIGURATION (conf)																																
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																																
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> <tr> <td>9.8(1.0)</td> <td>Introduced on the Z9100-ON.</td> </tr> <tr> <td>9.8(0.0P5)</td> <td>Introduced on the S4048-ON.</td> </tr> <tr> <td>9.8(0.0P2)</td> <td>Introduced on the S3048-ON.</td> </tr> <tr> <td>9.7(0.0)</td> <td>Introduced on the S6000-ON.</td> </tr> <tr> <td>9.2(1.0)</td> <td>Introduced on the Z9500.</td> </tr> <tr> <td>9.0.2.0</td> <td>Introduced on the S6000.</td> </tr> <tr> <td>9.2(0.0)</td> <td>Introduced on the M I/O Aggregator. This command is supported in Programmable-MUX (PMUX) mode only.</td> </tr> <tr> <td>8.3.19.0</td> <td>Introduced on the S4820T.</td> </tr> <tr> <td>8.3.11.1</td> <td>Introduced on the Z9000.</td> </tr> <tr> <td>8.3.7.0</td> <td>Introduced on the S4810.</td> </tr> <tr> <td>7.6.1.0</td> <td>Introduced on the C-series and S-Series.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.	9.8(1.0)	Introduced on the Z9100-ON.	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.7(0.0)	Introduced on the S6000-ON.	9.2(1.0)	Introduced on the Z9500.	9.0.2.0	Introduced on the S6000.	9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-MUX (PMUX) mode only.	8.3.19.0	Introduced on the S4820T.	8.3.11.1	Introduced on the Z9000.	8.3.7.0	Introduced on the S4810.	7.6.1.0	Introduced on the C-series and S-Series.
Version	Description																																
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.																																
9.10(0.0)	Introduced on the S3148.																																
9.10(0.0)	Introduced on the S6100-ON.																																
9.8(2.0)	Introduced on the S3100 series.																																
9.8(1.0)	Introduced on the Z9100-ON.																																
9.8(0.0P5)	Introduced on the S4048-ON.																																
9.8(0.0P2)	Introduced on the S3048-ON.																																
9.7(0.0)	Introduced on the S6000-ON.																																
9.2(1.0)	Introduced on the Z9500.																																
9.0.2.0	Introduced on the S6000.																																
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-MUX (PMUX) mode only.																																
8.3.19.0	Introduced on the S4820T.																																
8.3.11.1	Introduced on the Z9000.																																
8.3.7.0	Introduced on the S4810.																																
7.6.1.0	Introduced on the C-series and S-Series.																																
Usage Information	Broadcast traffic (all 0xFs) should be counted against the broadcast storm control meter, not against the multicast storm control meter. It is possible, however, that some multicast control traffic may get dropped when storm control thresholds are exceeded.																																

storm-control multicast (Interface)

Configure the percentage of multicast traffic allowed on an C-Series or S-Series interface (ingress only) network only.

Syntax	<pre>storm-control multicast packets_per_second in</pre> <p>To disable multicast storm control on the interface, use the <code>no storm-control multicast packets_per_second in</code> command.</p>										
Parameters	<p>packets_per_second in Enter the packets per second of broadcast traffic allowed into the network. The range is from 0 to 33554368.</p>										
Defaults	none										
Command Modes	INTERFACE (conf-if-interface-slot/port)										
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .										
	<table border="0"> <thead> <tr> <th>Version</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>9.10(0.1)</td> <td>Introduced on the S6010-ON and S4048T-ON.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S3148.</td> </tr> <tr> <td>9.10(0.0)</td> <td>Introduced on the S6100-ON.</td> </tr> <tr> <td>9.8(2.0)</td> <td>Introduced on the S3100 series.</td> </tr> </tbody> </table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.
Version	Description										
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.										
9.10(0.0)	Introduced on the S3148.										
9.10(0.0)	Introduced on the S6100-ON.										
9.8(2.0)	Introduced on the S3100 series.										

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the C-series and S-Series.

storm-control unknown-unicast (Configuration)

Configure the percentage of unknown-unicast traffic allowed in or out of the network.

Syntax `storm-control unknown-unicast [packets_per_second in]`
 To disable storm control for unknown-unicast traffic, use the `no storm-control unknown-unicast [packets_per_second in]` command.

Parameters `packets_per_second in` Enter the packets per second of broadcast traffic allowed into the network. The range is from 0 to 33554368.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
7.4.1.0	E-Series Only: Added the <code>percentage decimal value</code> option.
6.5.1.0	Introduced on the E-Series.

Usage Information Unknown Unicast Storm-Control is valid for Layer 2 and Layer 2/Layer 3 interfaces.

storm-control unknown-unicast (Interface)

Configure percentage of unknown-unicast traffic allowed on an interface (ingress only).

Syntax `storm-control unknown-unicast [percentage decimal_value in] | [wred-profile name]] [packets_per_second in]`

To disable unknown-unicast storm control on the interface, use the `no storm-control unknown-unicast [percentage decimal_value in] | [wred-profile name]] [packets_per_second in]` command.

Parameters

percentage decimal_value [in out]	E-Series Only: Enter the percentage of broadcast traffic allowed in or out of the network. Optionally, you can designate a decimal value percentage, for example, 55.5%. The percentage is from 0 to 100: <ul style="list-style-type: none"> 0% blocks all related traffic. 100% allows all traffic into the interface. The decimal range is from 0.1 to 0.9.
wred-profile name	E-Series Only: (Optionally) Enter the keywords <code>wred-profile</code> followed by the profile name to designate a wred-profile.
packets_per_second in	C-Series and S-Series Only: Enter the packets per second of broadcast traffic allowed into the network. The range is from 0 to 33554431.

Defaults none

Command Modes INTERFACE (*conf-if-interface-slot/port*)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	E-Series Only: Added the percentage decimal value option.
6.5.1.0	Introduced on the E-Series.

SupportAssist

SupportAssist sends troubleshooting data securely to Dell. SupportAssist in this Dell EMC Networking OS release does not support automated email notification at the time of hardware fault alert, automatic case creation, automatic part dispatch, or reports. SupportAssist requires Dell EMC Networking OS 9.9(0.0) and SmartScripts 9.7 or later to be installed on the Dell EMC Networking device. For more information on SmartScripts, see *Dell EMC Networking Open Automation guide*.

NOTE: SupportAssist is enabled by default on the system. To disable SupportAssist, enter the `eula-consent support-assist reject` command in Global Configuration mode and save the configuration.

Topics:

- [eula-consent](#)
- [support-assist](#)
- [support-assist activate](#)
- [support-assist activity](#)
- [SupportAssist Commands](#)
- [SupportAssist Activity Commands](#)
- [SupportAssist Company Commands](#)
- [SupportAssist Person Commands](#)
- [SupportAssist Server Commands](#)
- [show eula-consent](#)
- [show running-config](#)
- [show support-assist status](#)

eula-consent

Accept or reject the end user license agreement (EULA).

Syntax	<code>eula-consent {support-assist} {accept reject}</code>	
Parameters	support-assist	Enter the keywords <code>support-assist</code> to either accept or reject the EULA for the specified service.
	accept	Enter the keyword <code>accept</code> to accept the EULA for the specified service.
	reject	Enter the keyword <code>reject</code> to reject the EULA for the specified service.
Defaults	None	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

- When you run the command, the system displays a message with the information directing to the URL for further information.
- Even before you accept or reject the EULA, the configuration data is sent to the default centrally deployed SupportAssist Server. If you reject the EULA, the configuration data is not transmitted to the SupportAssist server.
- If there is an existing SupportAssist configuration, the configuration is not removed and the feature is disabled.

Example

Accept the EULA:

```
DelleMC(conf)# eula-consent support-assist accept
I accept the terms of the license agreement. You can reject
the license agreement by configuring this command
'eula-consent support-assist reject'.
```

By installing SupportAssist, you allow Dell to save your contact information (e.g. name, phone number and/or email address) which would be used to provide technical support for your Dell products and services. Dell may use the information for providing recommendations to improve your IT infrastructure.

Dell SupportAssist also collects and stores machine diagnostic information, which may include but is not limited to configuration information, user supplied contact information, names of data volumes, IP addresses, access control lists, diagnostics & performance information, network configuration information, host/server configuration & performance information and related data ("Collected Data") and transmits this information to Dell. By downloading SupportAssist and agreeing to be bound by these terms and the Dell end user license agreement, available at: www.dell.com/aeula, you agree to allow Dell to provide remote monitoring services of your IT environment and you give Dell the right to collect the Collected Data in accordance with Dells Privacy Policy, available at: www.dell.com/privacypolicycountryspecific, in order to enable the performance of all of the various functions of SupportAssist during your entitlement to receive related repair services from Dell,. You further agree to allow Dell to transmit and store the Collected Data from SupportAssist in accordance with these terms. You agree that the provision of SupportAssist may involve international transfers of data from you to Dell and/or to Dells affiliates, subcontractors or business partners. When making such transfers, Dell shall ensure appropriate protection is in place to safeguard the Collected Data being transferred in connection with SupportAssist. If you are downloading SupportAssist on behalf of a company or other legal entity, you are further certifying to Dell that you have appropriate authority to provide this consent on behalf of that entity. If you do not consent to the collection, transmission and/or use of the Collected Data, you may not download, install or otherwise use SupportAssist.

Reject the EULA:

```
DelleMC(conf)#eula-consent support-assist reject
Aug 24 22:35:38: %STKUNIT1-M:CP %SUPPORT_ASSIST-6-SUPASSIST_EVT: Event
monitor service stopped
I do not accept the terms of the license agreement. The SupportAssist
feature has
been deactivated and can no longer be used.
To enable SupportAssist configurations, accept the terms of the license
agreement
by configuring this command 'eula-consent support-assist accept'.
DelleMC(conf)#
DelleMC(conf)#
Aug 24 22:35:49: %STKUNIT1-M:CP %SUPPORT_ASSIST-6-
SUPASSIST_PKG_UNINSTALLED: SupportAssist package uninstalled
DelleMC(conf)#
```

Related Commands

- [support-assist](#) — moves to the SupportAssist Configuration mode.

support-assist

Move to the SupportAssist configuration mode.

Syntax `support-assist`
To remove all the configuration of the SupportAssist service, use the `no support-assist` command.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information If you reject the EULA, the data is not transmitted to the SupportAssist server.

Related Commands • [eula-consent](#) — accept or reject the EULA.

support-assist activate

Launch the configuration wizard that enables SupportAssist service and guides through a series of commands to configure SupportAssist.

Syntax `support-assist activate`

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information You are guided through a series of queries to configure SupportAssist. The generated commands are added to the running configuration, including the DNS resolve commands, if configured.

This command starts the configuration wizard for the SupportAssist. At any time, you can exit by entering Ctrl-C. If necessary, you can skip some data entry.

Once you exit the wizard, the Dell EMC Networking OS starts a full transfer.

support-assist activity

Trigger an activity event immediately.

Syntax `support-assist activity {full-transfer | core-transfer} start now`

Parameters

full-transfer	Enter the keyword <code>full-transfer</code> to specify transfer of configuration, inventory, logs, and other information.
core-transfer	Enter the keyword <code>core-transfer</code> to specify transfer of core files.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information Use the command to trigger the activity that enables transfer of information. You can choose a full transfer that includes all the details or core transfer that includes only the core files.

 **NOTE:** The full transfer includes the core files as well in the information sent. The core transfer does not send core files that are older than 30 days.

SupportAssist Commands

Dell EMC Networking OS supports the following SupportAssist mode commands.

activity

Move to the SupportAssist Activity mode for an activity. Allow the user to configure customized details for a specific activity.

Syntax `activity {activity-name}`

To remove all customized detail for a specific activity, use the `no activity {activity-name}` command.

Parameters

activity-name	Enter one of the following keywords:
----------------------	--------------------------------------

- Enter the keyword `full-transfer` to enable or disable full transfer. You can create a custom file to transfer the outputs from a set of show commands. By default, the full transfer runs once in every 30 days.
- Enter the keyword `core-transfer` to enable or disable core transfer.
- Enter the keyword `event-transfer` to enable or disable event transfer. You can create a custom file to monitor a set of events.

Command Modes SUPPORTASSIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM. Introduced the <code>core-transfer</code> and <code>event-transfer</code> parameters.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

By default, each activity follows a set of default actions using a default schedule. Using this command, you can customize the set of actions and disable a certain activity.

contact-company

Configure the contact information for the company.

Syntax `contact-company name {company-name} [company-next-name] ... [company-next-name]`

To remove the contact company information, use the `no contact-company` command.

Parameters

<i>company-name</i>	Enter the name for the company. If there are multiple words in the name, use optional additional fields.
<i>company-next-name</i>	(OPTIONAL) Enter the next components of the company name, up to 5 components are allowed.

Command Modes SUPPORTASSIST

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

You can configure only one contact-company.

It is not possible to remove the components of the company name. The `no` form of the command removes the entire contact-company entry.

This command is optional for SupportAssist service configuration.

contact-person

Configure the contact name for an individual.

Syntax `contact-person [first <first-name>] last <last-name>`

To remove the contact person and all their details, use the `no contact-person [first <first-name>] last <last-name>` command.

Parameters	<i>first-name</i>	(Optional) Enter the first name for the contact person. This is optional provided each contact person name is unique. To include a space, enter a space within double quotes.
	<i>last-name</i>	Enter the last name for the contact person. To include a space, enter a space within double quotes.

Command Modes SUPPORTASSIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

Each contact person must be unique by their name.

You can configure only one contact person.

It is not possible to remove the first name or last name. The no form of the command removes the entire contact-person entry.

This command is optional for SupportAssist service configuration.

enable

Enable all activities and severs for the SupportAssist service.

Syntax `enable all`

To disable the SupportAssist activities temporarily, use the `no enable all` command.

Parameters **all** Enter the keyword `all` to enable all SupportAssist service activities.

Defaults Enabled or All Enabled

Command Modes SUPPORTASSIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

server

Configure the name of the remote SupportAssist Server and move to SupportAssist Server mode.

Syntax `server {default | server-name}`

To delete a server, use the `no server server-name` command.

Parameters

default	Enter the keyword <code>default</code> for the default server.
server-name	Enter the name of the custom server to which the logs would be transferred. To include a space, enter a space within double quotes.

Defaults Default server has URL `stor.g3.ph.dell.com`

Command Modes SUPPORTASSIST

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

The `server-name` is used as a reference only and is not required to be used as part of a URL definition.

There is a reserved name of `default` for the default server at `stor.g3.ph.dell.com`. You can customize the defaults for this server by entering the `server default` command and use the custom commands.

You can configure one additional server.

SupportAssist Activity Commands

Dell EMC Networking OS supports the following SupportAssist Activity mode commands.

action-manifest get

Copy an action-manifest file for an activity to the system.

Syntax `action-manifest get tftp | ftp | flash <file-specification> <local-file-name>`

Parameters

file-specification	Enter the full file specification for the action-manifest file. For example: <ul style="list-style-type: none">• <code>tftp://hostip/filepath</code>• <code>ftp://userid:password@hostip/filepath</code>• <code>scp://userid:password@hostip/filepath</code>
local-file-name	Enter the name of the local action-manifest file, up to 32 characters long. Allowable characters are: a to z, A to Z, 0 to 9, -, _, and space.

Command Modes SUPPORTASSIST ACTIVITY FULL-TRANSFER
SUPPORTASSIST ACTIVITY EVENT-TRANSFER

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

The remote file specification for full transfer includes the protocol that is used to copy the file from the remote system.

The default Manifest-file for full transfer includes records like alarms, logs, operational, and configuration data.

Related Commands

- [action-manifest install](#) — configure the action-manifest to use for a specific activity.
- [action-manifest show](#) — view the list of action-manifest for a specific activity.
- [action-manifest remove](#) — remove the action-manifest file for an activity.

action-manifest install

Configure action-manifest to transfer a set of customized records for full transfer and to monitor a set of specified events for event transfer.

Syntax

```
action-manifest install {default | <local-file-name>}
```

To revert to the default action-manifest file, use the `action-manifest install default` command.

Parameters

default	Enter the keyword <code>default</code> to revert back to the default set of actions for an activity.
local-file-name	Enter the name of the local action-manifest file. Allowable characters are: a to z, A to Z, 0 to 9, -, _, and space.

Defaults

Default

Command Modes

SUPPORTASSIST ACTIVITY FULL-TRANSFER
SUPPORTASSIST ACTIVITY EVENT-TRANSFER

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

To replace the default action-manifest with a customized one, copy the action-manifest file to the system using the `action-manifest get` command and then use the `action-manifest install` command. To revert to the default action-manifest file, use the `action-manifest install default` command.

- Related Commands**
- [action-manifest get](#) — copy an action-manifest file for an activity to the system.
 - [action-manifest show](#) — view the list of action-manifest for a specific activity.
 - [action-manifest remove](#) — remove the action-manifest file for an activity.

action-manifest remove

Remove the action-manifest file from Dell EMC Networking OS.

Syntax `action-manifest remove <local-file-name>`

Parameters **local-file-name** Enter the name of the local action-manifest file. Allowable characters are: a to z, A to Z, 0 to 9, -, _, and space.

Command Modes SUPPORTASSIST ACTIVITY FULL-TRANSFER
SUPPORTASSIST ACTIVITY EVENT-TRANSFER

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information To revert to the default action-manifest file, use the `action-manifest install` command. If necessary, you can then remove the custom action-manifest file.

- Related Commands**
- [action-manifest get](#) — copy an action-manifest file for an activity to the system.
 - [action-manifest install](#) — configure the action-manifest to use for a specific activity.
 - [action-manifest show](#) — view the list of action-manifest for a specific activity.

action-manifest show

View the list of action-manifest for a specific activity.

Syntax `action-manifest show {all}`

Parameters **all** Enter the keyword `all` to view the entire list of action-manifests that are available for an activity.

Command Modes SUPPORTASSIST ACTIVITY FULL-TRANSFER
SUPPORTASSIST ACTIVITY EVENT-TRANSFER

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.

Version	Description
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Related Commands

- [action-manifest get](#) — copy an action-manifest file for an activity to the system.
- [action-manifest install](#) — configure the action-manifest to use for a specific activity.
- [action-manifest remove](#) — remove the action-manifest file for an activity.

enable

Enable a specific SupportAssist activity.

Syntax

`enable`

To disable a particular SupportAssist activity, use the `no enable` command.

Defaults

Enabled

Command Modes

SUPPORTASSIST ACTIVITY FULL-TRANSFER
 SUPPORTASSIST ACTIVITY CORE-TRANSFER
 SUPPORTASSIST ACTIVITY EVENT-TRANSFER

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

Enter the specific SupportAssist activity mode and then enable it.

 **NOTE:** By default, the full transfer includes the core files. When you disable the core transfer activity, the full transfer excludes the core files.

Related Commands

- [activity](#) — move user to the SupportAssist Activity mode for that activity.

SupportAssist Company Commands

Dell EMC Networking OS supports the following SupportAssist Company mode commands.

address

Configure the address information for the company.

Syntax

`address [city company-city] [{province | region | state} name] [country company-country] [{postalcode | zipcode} company-code]`

To remove a portion of the company address information, use the `no address [city | province | region | state | country | postalcode | zipcode]` command. For example, to remove the city alone, use the `no address city` command.

To remove the complete company contact information, use the `no address` command.

Parameters

city <i>company-city</i>	(OPTIONAL) Enter the keyword <code>city</code> then the city or town for the company site. To include a space, enter a space within double quotes.
province region state <i>name</i>	(OPTIONAL) Enter the keyword <code>province</code> , <code>region</code> or <code>state</code> then the name of province, region or state for the company site. To include a space, enter a space within double quotes.
country <i>company-country</i>	(OPTIONAL) Enter the keyword <code>country</code> then the country for the company site. To include a space, enter a space within double quotes.
postalcode zipcode <i>company-code</i>	(OPTIONAL) Enter the keyword <code>postalcode</code> or <code>zipcode</code> then the postal code or zip code for the company site, as one string with no spaces.

Command Modes SUPPORTASSIST COMPANY

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

The optional parameters must be provided in the following order: `city state country postalcode`. If specified in a different order, the command returns an error as follows:

```
DellEMC(conf-supportassist-cmpy-test)# address city Minneapolis
postalcode 55344 country USA state Minnesota
                                     ^
% Error: Invalid input at "^" marker.
```

This command is optional for SupportAssist service configuration.

Example

```
DellEMC(conf-supportassist-cmpy-test)# address city Minneapolis state
Minnesota country USA postalcode 55344
```

street-address

Configure the street address information for the company.

Syntax

```
street-address {address1} [address2]...[address8]
```

To remove the street address, use the `no street-address` command.

Parameters

address1	Enter the street address for the company.
address2..address8	(OPTIONAL) Enter the street address of the company site. Up to 8 fields are allowed.

Command Modes SUPPORTASSIST COMPANY

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information This command is optional for SupportAssist service configuration.

territory

Configure the territory and set the coverage for the company site.

Syntax `territory company-territory`
 To remove the company territory information, use the `no territory` command.

Parameters **company-territory** Enter the territory name for the company. To include a space, enter a space within double quotes. Use three-letter country codes like USA, IND, FRA, GER and so on.

Command Modes SUPPORTASSIST COMPANY

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information This command is optional for SupportAssist service configuration.

SupportAssist Person Commands

Dell EMC Networking OS supports the following SupportAssist Person mode commands.

email-address

Configure the email addresses to reach the contact person.

Syntax `email-address primary email-address [alternate email-address]`
 To remove an email address, use the `no email-address` command. To remove the primary and the alternate email addresses, use the `no email-address primary` and `no email-address alternate` commands respectively.

Parameters	primary <i>email-address</i>	Enter the keyword <code>primary</code> then the primary email address for the person.
	alternate <i>email-address</i>	Enter the keyword <code>alternate</code> then the alternate email address for the person.

Command Modes SUPPORTASSIST PERSON

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information The email addresses must have the standard form of `<username>@<email system>` to be considered valid.

This command is optional for SupportAssist service configuration.

Related Commands

- [preferred-method](#) — configure the preferred method for contacting the person.

phone

Configure phone numbers to reach the contact person.

Syntax `phone primary phone [alternate phone]`

To remove a phone number, use the `no phone` command. To remove the primary and alternate phone numbers, use the `no phone primary` and `no phone alternate` commands respectively.

Parameters	primary <i>phone</i>	Enter the keyword <code>primary</code> then the primary phone number for the person.
	alternate <i>phone</i>	Enter the keyword <code>alternate</code> then the alternate phone number for the person.

Command Modes SUPPORTASSIST PERSON

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information The phone numbers may contain country codes, area codes and extensions, if necessary. Allowable characters are 0 to 9, x, (,), - and +.

This command is optional for SupportAssist service configuration.

Related Commands

- [preferred-method](#) — configure the preferred method for contacting the person.

preferred-method

Configure the preferred method for contacting the person.

Syntax `preferred-method {email | no-contact | phone}`

Parameters

email	Enter the keyword <code>email</code> to specify email as preferred method.
no-contact	Enter the keywords <code>no-contact</code> to specify that there is no preferred method.
phone	Enter the keyword <code>phone</code> to specify phone as preferred method.

Defaults `no-contact`

Command Modes `SUPPORTASSIST PERSON`

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Related Commands

- [email-address](#) — configure email addresses to reach the contact person.
- [phone](#) — configure phone numbers to reach the contact person.

time-zone

Configure the time zone for contacting the person.

Syntax `time-zone zone +-HH:MM[start-time HH:MM] [end-time HH:MM]`

To remove the time zone, use the `no time-zone [zone | start-time | end-time]` command.

Parameters

zone +-HH:MM	Enter the keyword <code>zone</code> then a time difference from GMT expressed as HH:MM. This number may be preceded by either a + or – sign.
start-time HH:MM	Enter the keywords <code>start-time</code> then a starting time expressed as HH:MM. Use the 24-hour clock format.
stop-time HH:MM	Enter the keywords <code>stop-time</code> then a stopping time expressed as HH:MM. Use the 24-hour clock format.

Command Modes `SUPPORTASSIST PERSON`

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

This command is optional for SupportAssist service configuration.

SupportAssist Server Commands

Dell EMC Networking OS supports the following SupportAssist Server mode commands.

proxy-ip-address

Configure a proxy for reaching the SupportAssist remote server.

Syntax `proxy-ip-address {ipv4-address | ipv6-address} port port-number [username userid password [encryption-type] password]`

To remove the proxy, use the `no proxy-ip-address` command.

Parameters

ipv4-address	Enter the IP address of the proxy server in a dotted decimal format (A.B.C.D).
ipv6-address	Enter the IPv6 address of the proxy server in the x:x:x:x format. <i>i</i> NOTE: The :: notation specifies successive hexadecimal fields of zeros.
	<i>i</i> NOTE: To use the IPv6 address, the Open Automation package should also support IPv6 communications. For this purpose, SupportAssist requires Dell EMC Networking Open Automation 9.10(0.0) package or later.
port port-number	Enter the keyword <code>port</code> then the TCP/IP port number. The port number range is from 1024 to 65534.
username userid	(OPTIONAL) Enter the keyword <code>username</code> then the user ID used for the proxy server.
password	Enter the keyword <code>password</code> then the encryption-type or the user password.
encryption-type	(OPTIONAL) Enter an encryption type for the <code>password</code> you enter. <ul style="list-style-type: none"> 0 directs the system to interpret the password as clear text. 7 indicates that the password is encrypted using a DES hashing algorithm.
password	Enter a string up to 32 characters long.

Defaults encryption-type for the password is 0.

Command Modes SUPPORTASSIST SERVER

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

The passwords are stored encrypted in the running configuration.

enable

Enable communication with the SupportAssist server.

Syntax `enable`

To disable communication to a specific SupportAssist server, use the `no enable` command.

Defaults Enabled

Command Modes SUPPORTASSIST SERVER

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Related Commands

- `server` — configure the name of the remote SupportAssist server.

url

Configure the URL to reach the SupportAssist remote server.

Syntax `url uniform-resource-locator`

To delete the URL for the server, use the `no url` command.

Parameters

uniform-resource-locator Enter a text string for the URL using one of the following formats:

- `http://[username:password@]<hostip>:<portNum>/<filepath>`
- `https://[username:password@]<hostip>:<portNum>/<filepath>`

 **NOTE:** The host IP for the server may be specified as an IPv4 address, an IPv6 address or as a DNS hostname. If using the DNS hostname, the DNS resolver will need to be configured and enabled.

Command Modes SUPPORTASSIST SERVER

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Usage Information

The URL should be formatted to follow the ISO format.

show eula-consent

Display the EULA for the feature.

Syntax `show eula-consent {support-assist | other feature}`

Parameters **support-assist | other feature** Enter the keywords `support-assist` or the text corresponding to other feature.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Example

```
DellEMC# show eula-consent support-assist

SupportAssist EULA has been: Accepted

Additional information about the SupportAssist EULA is as follows:

By installing SupportAssist, you allow Dell to save your contact
information
(e.g. name, phone number and/or email address) which would be used to
provide
technical support for your Dell products and services. Dell may use the
information
for providing recommendations to improve your IT infrastructure.

Dell SupportAssist also collects and stores machine diagnostic
information, which
may include but is not limited to configuration information, user
supplied contact
information, names of data volumes, IP addresses, access control lists,
diagnostics &
performance information, network configuration information, host/server
configuration
& performance information and related data (Collected Data) and
transmits this
information to Dell. By downloading SupportAssist and agreeing to be
bound by these
terms and the Dell end user license agreement, available at:
www.dell.com/aeula,
you agree to allow Dell to provide remote monitoring services of your IT
environment
and you give Dell the right to collect the Collected Data in accordance
with Dells
Privacy Policy, available at: www.dell.com/privacypolicycountryspecific,
in order to
enable the performance of all of the various functions of SupportAssist
during your
entitlement to receive related repair services from Dell,. You further
agree to
```

```

allow Dell to transmit and store the Collected Data from SupportAssist
in accordance
with these terms. You agree that the provision of SupportAssist may
involve
international transfers of data from you to Dell and/or to Dells
affiliates,
subcontractors or business partners. When making such transfers, Dell
shall ensure
appropriate protection is in place to safeguard the Collected Data being
transferred
in connection with SupportAssist. If you are downloading SupportAssist
on behalf
of a company or other legal entity, you are further certifying to Dell
that you
have appropriate authority to provide this consent on behalf of that
entity. If you
do not consent to the collection, transmission and/or use of the
Collected Data,
you may not download, install or otherwise use SupportAssist.
DellEMC#

```

show running-config

Display the current configuration and changes from the default values.

Syntax `show running-config support-assist`

Parameters **support-assist** Enter the keyword `support-assist` to view the detailed configuration for the feature.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Example

```

DellEMC# show running-config support-assist
!
support-assist
enable all
!
activity event-transfer
    enable
    action-manifest install default
!
activity core-transfer
    enable
!
contact-company name Dell
    street-address F lane , Sector 30
    address city Brussels state HeadState country Belgium postalcode S328J3
!
contact-person first Fred last Nash
    email-address primary des@sed.com alternate sed@dol.com
    phone primary 123422 alternate 8395729

```

```

preferred-method email
time-zone zone +05:30 start-time 12:23 end-time 15:23
!
server Dell
  enable
  url http://1.1.1.1:1332
DellEMC#

```

show support-assist status

Display information on SupportAssist feature status including any activities, status of communication, last time communication sent, and so on.

Syntax `show support-assist status`

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Introduced on the M I/O Aggregator and FN IOM.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the C9010, Z9100-ON, S6100-ON, and S3100 series.
9.9(0.0)	Introduced on the S4810, S4820T, S3048-ON, S4048-ON, S5000, S6000, S6000-ON, Z9500, MXL.

Example

```

DellEMC#show support-assist status
SupportAssist Service: Installed
EULA: Accepted
Server: default
  Enabled: Yes
  URL: https://stor.g3.ph.dell.com
Server: Dell
  Enabled: Yes
  URL: http://1.1.1.1:1332
Service status: Enabled

```

Activity	State	Last Start	Last Success
core-transfer 2016 09:43:56 IST	Success	Feb 15 2016 09:43:41 IST	Feb 15
event-transfer 2016 09:48:21 IST	Success	Feb 15 2016 09:47:43 IST	Feb 15
full-transfer 2016 09:38:27 IST	Success	Feb 15 2016 09:36:12 IST	Feb 15

```

DellEMC#

```

System Time and Date

The commands in this section configure time values on the system, either using the Dell EMC Networking OS, or the hardware, or using the network time protocol (NTP). With NTP, the switch can act only as a client to an NTP clock host.

For more information, see “Network Time Protocol” of the *Management* section in the *Dell EMC Networking OS Configuration Guide*.

The commands in this chapter are generally supported on Dell EMC Networking OS with some exceptions, as notes in the Command History fields.

Topics:

- [clock summer-time date](#)
- [clock summer-time recurring](#)
- [clock timezone](#)
- [debug ntp](#)
- [ntp authenticate](#)
- [ntp authentication-key](#)
- [ntp broadcast client](#)
- [ntp disable](#)
- [ntp multicast client](#)
- [ntp master <stratum>](#)
- [ntp offset-threshold](#)
- [ntp server](#)
- [ntp source](#)
- [ntp trusted-key](#)
- [show clock](#)
- [show ntp associations](#)
- [show ntp vrf associations](#)
- [show ntp status](#)

clock summer-time date

Set a date (and time zone) on which to convert the switch to daylight saving time on a one-time basis.

Syntax `clock summer-time time-zone date start-month start-day start-year start-time end-month end-day end-year end-time [offset]`

To delete a daylight saving time zone configuration, use the `no clock summer-time` command.

Parameters		
<i>time-zone</i>		Enter the three-letter name for the time zone. This name is displayed in the show clock output.
<i>start-month</i>		Enter the name of one of the 12 months in English. You can enter the name of a day to change the order of the display to time day month year.
<i>start-day</i>		Enter the number of the day. The range is from 1 to 31. You can enter the name of a month to change the order of the display to time day month year.
<i>start-year</i>		Enter a four-digit number as the year. The range is from 1993 to 2035.
<i>start-time</i>		Enter the time in hours:minutes. For the hour variable, use the 24-hour format; example, 17:15 is 5:15 pm.
<i>end-day</i>		Enter the number of the day. The range is from 1 to 31. You can enter the name of a month to change the order of the display to time day month year.

<i>end-month</i>	Enter the name of one of the 12 months in English. You can enter the name of a day to change the order of the display to time day month year.
<i>end-time</i>	Enter the time in hours:minutes. For the hour variable, use the 24-hour format; example, 17:15 is 5:15 pm.
<i>end-year</i>	Enter a four-digit number as the year. The range is from 1993 to 2035.
<i>offset</i>	(OPTIONAL) Enter the number of minutes to add during the summer-time period. The range is from 1 to1440. The default is 60 minutes .

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Related Commands

- [clock summer-time recurring](#) — sets a date (and time zone) on which to convert the switch to daylight saving time each year.
- [show clock](#) — displays the current clock settings.

clock summer-time recurring

Set the software clock to convert to daylight saving time on a specific day each year.

Syntax `clock summer-time time-zone recurring [start-week start-day start-month start-time end-week end-day end-month end-time [offset]]`

To delete a daylight saving time zone configuration, use the `no clock summer-time` command.

Parameters

time-zone Enter the three-letter name for the time zone. This name is displayed in the show clock output. You can enter up to eight characters.

start-week (OPTIONAL) Enter one of the following as the week that daylight saving begins and then enter values for start-day through end-time:

- `week-number`: Enter a number from 1 to 4 as the number of the week in the month to start daylight saving time.
- `first`: Enter this keyword to start daylight saving time in the first week of the month.
- `last`: Enter this keyword to start daylight saving time in the last week of the month.

start-day Enter the name of the day that you want daylight saving time to begin. Use English three letter abbreviations; for example, Sun, Sat, Mon, and so on. The range is from Sun to Sat.

start-month Enter the name of one of the 12 months in English.

start-time Enter the time in hours:minutes. For the hour variable, use the 24-hour format; example, 17:15 is 5:15 pm.

end-week Enter the one of the following as the week that daylight saving ends:

- `week-number`: enter a number from 1 to 4 as the number of the week to end daylight saving time.
- `first`: enter the keyword `first` to end daylight saving time in the first week of the month.
- `last`: enter the keyword `last` to end daylight saving time in the last week of the month.

end-day Enter the weekday name that you want daylight saving time to end. Enter the weekdays using the three letter abbreviations; for example Sun, Sat, Mon, and so on. The range is from Sun to Sat.

end-month Enter the name of one of the 12 months in English.

end-time Enter the time in hours:minutes:seconds. For the hour variable, use the 24-hour format; example, 17:15:00 is 5:15 pm.

offset (OPTIONAL) Enter the number of minutes to add during the summer-time period. The range is from 1 to 1440. The default is **60 minutes**.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.

Version	Description
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Updated the <code>start-day</code> and <code>end-day</code> options to allow for using the three-letter abbreviation of the weekday name.
6.1.1.0	Introduced on the E-Series.

Related Commands

- `ntp trusted-key` — configures a trusted key.
- `clock summer-time date` — sets a date (and time zone) on which to convert the switch to daylight saving time on a one-time basis.
- `show clock` — displays the current clock settings.

clock timezone

Configure a timezone for the switch.

Syntax `clock timezone timezone-name offset`

To delete a timezone configuration, use the `no clock timezone` command.

Parameters

- timezone-name*** Enter the name of the timezone. You cannot use spaces.
- offset*** Enter one of the following:
- a number from 1 to 23 as the number of hours in addition to universal time coordinated (UTC) for the timezone.
 - a minus sign (-) then a number from 1 to 23 as the number of hours.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

Coordinated universal time (UTC) is the time standard based on the International Atomic Time standard, commonly known as Greenwich Mean time. When determining system time, include the differentiator between UTC and your local timezone. For example, San Jose, CA is the Pacific Timezone with a UTC offset of -8.

debug ntp

Display network time protocol (NTP) transactions and protocol messages for troubleshooting.

Syntax `debug ntp {adjust | all | authentication | events | loopfilter | packets | select | sync}`

To disable debugging of NTP transactions, use the `no debug ntp {adjust | all | authentication | events | loopfilter | packets | select | sync}` command.

Parameters

adjust	Enter the keyword <code>adjust</code> to display information on NTP clock adjustments.
all	Enter the keyword <code>all</code> to display information on all NTP transactions.
authentication	Enter the keyword <code>authentication</code> to display information on NTP authentication transactions.
events	Enter the keyword <code>events</code> to display information on NTP events.
loopfilter	Enter the keyword <code>loopfilter</code> to display information on NTP local clock frequency.
packets	Enter the keyword <code>packets</code> to display information on NTP packets.
select	Enter the keyword <code>select</code> to display information on the NTP clock selection.
sync	Enter the keyword <code>sync</code> to display information on the NTP clock synchronization.

Command Modes EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

ntp authenticate

Enable authentication of NTP traffic between the switch and the NTP time serving hosts.

Syntax	<code>ntp authenticate</code> To disable NTP authentication, use the <code>no ntp authentication</code> command.
Defaults	Not enabled.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information	You also must configure an authentication key for NTP traffic using the <code>ntp authentication-key</code> command.
--------------------------	--

ntp authentication-key

Specify a key for authenticating the NTP server.

Syntax	<code>ntp authentication-key number md5 [0 7] key</code>
Parameters	
number	Specify a number for the authentication key. The range is from 1 to 4294967295. This number must be the same as the <code>number</code> parameter configured in the <code>ntp trusted-key</code> command.
md5	Specify that the authentication key is encrypted using MD5 encryption algorithm.
0	Specify that authentication key is entered in an unencrypted format (default).
7	Specify that the authentication key is entered in DES encrypted format.
key	Enter the authentication key in the previously specified format.

Defaults NTP authentication is not configured by default. If you do not specify the option [0 | 7], **0** is selected by default.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.2.1.0	Added options [0 7] for entering the authentication key.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information After configuring the `ntp authentication-key` command, configure the `ntp trusted-key` command to complete NTP authentication.

Dell EMC Networking OS versions 8.2.1.0 and later use an encryption algorithm to store the authentication key that is different from previous Dell EMC Networking OS versions; beginning in version 8.2.1.0, Dell EMC Networking OS uses DES encryption to store the key in the startup-config when you enter the `ntp authentication-key` command. Therefore, if your system boots with a startup-configuration from an Dell EMC Networking OS versions prior to 8.2.1.0 in which you have configured `ntp authentication-key`, the system cannot correctly decrypt the key, and cannot authenticate NTP packets. In this case you must re-enter this command and save the running-config to the startup-config.

Related Commands

- [ntp authenticate](#) — enables NTP authentication.
- [ntp trusted-key](#) — configures a trusted key.

ntp broadcast client

Set up the interface to receive NTP broadcasts from an NTP server.

Syntax `ntp broadcast client`
To disable broadcast, use the `no ntp broadcast client` command.

Defaults Disabled.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

ntp disable

Prevent an interface from receiving NTP packets.

Syntax `ntp disable`
 To re-enable NTP on an interface, use the `no ntp disable` command.

Defaults Disabled (that is, if you configure an NTP host, all interfaces receive NTP packets)

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.

Version	Description
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

ntp multicast client

To receive NTP information from the network via multicast, configure the switch.

Syntax `ntp multicast client [multicast-address]`
 To disable multicast reception, use the `no ntp multicast client [multicast-address]` command.

Parameters **multicast-address** (OPTIONAL) Enter a multicast address. Enter either an IPv4 address in dotted decimal format or an IPv6 address in X:X:X:X format. If you do not enter a multicast address, the address:

- 224.0.1.1 is configured if the interface address is IPv4
- ff05::101 is configured if the interface address is IPv6

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added support for IPv6 multicast addresses.
8.3.7.0	Introduced on the S4810.
6.1.1.0	Introduced on the E-Series.

ntp master <stratum>

Configure the switch as NTP Server.

Syntax `ntp master <stratum>`

Parameters	ntp master <stratum> Enter the <code>stratum</code> number to identify the NTP Server's hierarchy.
Defaults	Not configured.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Introduced on the S4810, S4820T, S5000, S6000, Z9000, and Z9500.
9.2(1.0)	Introduced on the Z9500.

ntp offset-threshold

Configure the threshold time interval before which the system generates an NTP audit log message if the time difference from the NTP server is greater than a threshold value (`offset-threshold`).

Syntax	<code>ntp offset-threshold threshold-value</code> To disable the threshold value, use the <code>no ntp offset-threshold</code> command.
---------------	--

Parameters	offset-threshold threshold-value (Optional) Enter the keyword <code>offset-threshold</code> and then the threshold value. The range is from 0 to 999.
-------------------	--

Defaults Not enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S3038-ON, S4048-ON, S3100 Series, S4810P, S4820T, S5000, S6000, S6000-ON, S6100-ON, Z9500, and Z9100-ON.

Usage Information The `ntp offset-threshold` command does not time synchronization.

Example

```
DellEMC(config)# ntp offset-threshold 4
```

ntp server

Configure an NTP time-serving host.

Syntax `ntp server[vrf vrf-name] {hostname | ipv4-address | ipv6-address} [key keyid] [prefer] [version number]`

Parameters	vrf vrf-name	(Optional) Enter the keyword <code>vrf</code> and then the name of the VRF to configure an NTP time-serving host corresponding to that VRF.
	ipv4-address ipv6-address	Enter an IPv4 address (A.B.C.D) or IPv6 address (X:X:X:X::X) of NTP server.
	hostname	Enter the host name of the server.
	key keyid	(OPTIONAL) Enter the keyword <code>key</code> and a number as the NTP peer key. The range is from 1 to 4294967295.
	prefer	(OPTIONAL) Enter the keyword <code>prefer</code> to indicate that this peer has priority over other servers.
	version number	(OPTIONAL) Enter the keyword <code>version</code> and a number to correspond to the NTP version used on the server. The range is from 1 to 4.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Added support for VRF.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added IPv6 support.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information You can configure multiple time-serving hosts. From these time-serving hosts, the Dell EMC Networking OS chooses one NTP host with which to synchronize. To determine which server is selected, use the `show ntp associations` command.

Because many polls to NTP hosts can affect network performance, Dell EMC Networking recommends limiting the number of hosts configured.

By default, the system performs a time synchronization if the time difference from the time source is greater than one second.

Related Commands

- [show ntp associations](#) — displays the NTP servers configured and their status.

ntp source

Specify an interface's IP address to be included in the NTP packets.

Syntax

```
ntp source interface
```

To delete the configuration, use the `no ntp source` command.

Parameters

interface

Enter the following keywords and slot/port or number information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- For a Loopback interface, enter the keyword `loopback` then a number from 0 to 16383.
- For a port-channel interface, enter the keywords `port-channel` then the port-channel ID.
- For VLAN interface, enter the keyword `vlan` then a number from 1 to 4094.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

ntp trusted-key

Set a key to authenticate the system to which NTP synchronizes.

Syntax

```
ntp trusted-key number
```

To delete the key, use the `no ntp trusted-key number` command.

Parameters

number

Enter a number as the trusted key ID. The range is from 1 to 4294967295.

Defaults

Not configured.

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10(0.1)

Introduced on the S6010-ON and S4048T-ON.

9.10(0.0)

Introduced on the S3148.

9.10(0.0)

Introduced on the S6100-ON.

9.8(2.0)

Introduced on the S3100 series.

9.8(1.0)

Introduced on the Z9100-ON.

9.8(0.0P5)

Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

The number parameter in the `ntp trusted-key` command must be the same number as the number parameter in the `ntp authentication-key` command. If you change the `ntp authentication-key` command, you must also change the `ntp trusted-key` command.

Related Commands

- [ntp authentication-key](#) — sets an authentication key for NTP.
- [ntp authenticate](#) — enables the NTP authentication parameters you set.

show clock

Display the current clock settings.

Syntax `show clock [detail]`

Parameters **detail** (OPTIONAL) Enter the keyword `detail` to view the source information of the clock.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.

Version	Description
6.1.1.0	Introduced on the E-Series.

Example

```
DellEMC#show clock
11:05:56.949 UTC Thu Oct 25 2001
DellEMC#
```

Example (Detail)

```
DellEMC# show clock detail
12:18:10.691 UTC Wed Jan 7 2009
Time source is RTC hardware
Summer time starts 02:00:00 UTC Sun Mar 8 2009
Summer time ends 02:00:00 ABC Sun Nov 1 2009
DellEMC#
```

Related Commands

- [clock summer-time recurring](#) — displays the time and date from the switch hardware clock.

show ntp associations

Display the NTP master and peers.

Syntax `show ntp associations`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information

The following describes the `show ntp associations` command shown in the Example below.

Field	Description
(none)	One or more of the following symbols could be displayed: <ul style="list-style-type: none"> • * means synchronized to this peer. • # means almost synchronized to this peer. • + means the peer was selected for possible synchronization. • - means the peer is a candidate for selection. • ~ means the peer is statically configured.
remote	Displays the remote IP address of the NTP peer.
ref clock	Displays the IP address of the remote peer's reference clock.
st	Displays the peer's stratum, that is, the number of hops away from the external time source. A 16 in this column means the NTP peer cannot reach the time source.
when	Displays the last time the switch received an NTP packet.
poll	Displays the polling interval (in seconds).
reach	Displays the reachability to the peer (in octal bitstream).
delay	Displays the time interval or delay for a packet to complete a round-trip to the NTP time source (in milliseconds).
offset	Displays the relative time of the NTP peer's clock to the switch clock (in milliseconds).
disp	Displays the dispersion.

Example

```
DellEMC# show ntp associations
remote      ref clock  st when poll reach delay  offset disp
=====
 10.10.120.5 0.0.0.0   16 - 256      0 0.00 0.000 16000.0
*172.16.1.33 127.127.1.0 11 6 16      377 -0.08 -1499.9 104.16
 172.31.1.33 0.0.0.0   16 - 256      0 0.00 0.000 16000.0
 192.200.0.2 0.0.0.0   16 - 256      0 0.00 0.000 16000.0
* master (syncd), # master (unsyncd), + selected, - candidate
DellEMC#
```

Related Commands

- [show ntp status](#) — displays the current NTP status.

show ntp vrf associations

Displays the NTP servers configured for the VRF instance <vrf-name>.

Syntax show ntp [*vrf*] <vrf-name> associations.

Command Modes EXEC/EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Added support for VRF.

Version	Description
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.4.1.0	Added IPv6 support.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

show ntp status

Display the current NTP status.

Syntax `show ntp status`

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.1.1.0	Introduced on the E-Series.

Usage Information The following describes the `show ntp status` command shown in the Example below.

Field	Description
“Clock is...”	States whether or not the switch clock is synchronized, which NTP stratum the system is assigned and the IP address of the NTP peer.
“frequency is...”	Displays the frequency (in ppm), stability (in ppm) and precision (in Hertz) of the clock in this system.

Field	Description
“reference time is...”	Displays the reference time stamp.
“clock offset is...”	Displays the system offset to the synchronized peer and the time delay on the path to the NTP root clock.
“root dispersion is...”	Displays the root and path dispersion.
“peer mode is...”	State what NTP mode the switch is. This should be Client mode.

Example

```
DelleMC# show ntp status
Clock is synchronized, stratum 2, reference is 100.10.10.10
frequency is -32.000 ppm, stability is 15.156 ppm, precision is
4294967290
reference time is BC242FD5.C7C5C000 (10:15:49.780 UTC Mon Jan 10 2000)
clock offset is clock offset msec, root delay is 0.01656 sec
root dispersion is 0.39694 sec, peer dispersion is peer dispersion msec
peer mode is client
DelleMC#
```

Related Commands

- [show ntp associations](#) — displays information on the NTP master and peer configurations.

u-Boot

All commands in this chapter are in u-Boot and are supported on the Dell Networking OS for S5000 platform.

To access this mode, press any key when the following line appears on the console during a system boot:

```
Hit any key to stop autoboot:
```

You enter u-Boot immediately, as indicated by the => prompt.

NOTE: This chapter describes only a few commands available in u-Boot.

NOTE: You cannot use the Tab key to complete commands in this mode.

Topics:

- [printenv](#)
- [reset](#)
- [save](#)
- [syntax help](#)
- [boot selection](#)

printenv

Display the current system boot variable and other system settings.

S5000

Syntax `printenv`

Command Modes `uBoot`

Command History **Version 9.0(1.0)** Introduced on the S5000.

Example

```
=> printenv
baudrate=9600
uboot_filesize=0x80000
bootfile=FTOS-SC-1.2.0.0E3.bin
bootcmd=echo Booting primary bootline...;$primary_boot;boot;echo
Failed;echo Booting secondary bootline...;$secondary_boot;boot;echo
Failed;echo Booting default bootline...;$default_boot;boot;echo
Failed;echo
Rebooting...;reset
bootdelay=5
loads_echo=1
rootpath=/opt/nfsroot
hostname=unknown
loadaddr=640000
ftpuser=force10
ftpasswd=force10
uboot=u-boot.bin
tftpflash=tftpboot $loadaddr $uboot; protect off 0xffff80000 +$filesize;
erase 0x
fff80000 +$filesize; cp.b $loadaddr 0xffff80000 $filesize; protect on
0xffff80000
+$filesize; cmp.b $loadaddr 0xffff80000 $filesize
```

```
ethact=eTSEC1
ethaddr=00:01:E8:82:09:B2
serverip=10.11.9.4

primary_boot=f10boot tftp://10.11.9.2/si-S4810-40g
secondary_boot=f10boot flash0
default_boot=f10boot tftp://192.168.128.1/FTOS-SC-1.2.0.0E3.bin

gatewayip=10.11.192.254

ipaddr=10.11.198.114

netmask=255.255.0.0
mgmtautoneg=true
mgmtspeed100=true
mgmtfullduplex=true
stdin=serial
stdout=serial
stderr=serial
Environment size: 1002/8188 bytes
=>
```

Usage Information

- ethaddr=00:01:E8:82:09:B2 is the MAC address.
- primary_boot=f10boot tftp://10.11.9.2/si-S4810-40g, secondary_boot=f10boot flash0, and default_boot=f10boot tftp://192.168.128.1/FTOS-SC-1.2.0.0E3.bin are the boot variables.
- gatewayip=10.11.192.254 is the default gateway address.
- ipaddr=10.11.198.114 is the management IP address.

reset

Reload the S5000 system.

S5000

Syntax reset

Command Modes uBoot

Command History **Version 9.0(1.0)** Introduced on the S5000.

Usage Information You must save your changes before resetting the system or all your changes will be lost.

save

Save configurations created in uBoot.

S5000

Syntax save

Command Modes uBoot

Command History **Version 9.0(1.0)** Introduced on the S5000.

Usage Information You must save your changes before resetting the system or all your changes will be lost.

syntax help

Display command syntax information.

S5000

Syntax syntax help

Command Modes BOOT USER

Command History **Version** **Introduced on the S5000.**
9.0(1.0)

Example

```
BOOT_USER # syntax help

***** Dell Networking Boot Interface Help Information *****
Current access level: USER LEVEL
Use "syntax help" for more information on syntax.
Available command list (30 commands total):
  boot change [primary|secondary|default]
    change operating system boot parameters
  boot messages disable
    turn off netbsd boot messages
  boot messages enable
    turn on netbsd boot messages
  boot show net config retries
    show number of retries for network boot config failure
  boot write net config retries
    write number of retries for network boot config failure
  boot zero [primary|secondary|default]
    zero operating system boot parameters
  default-gateway
    default-gateway - set the default gateway ip address
  enable [user|admin]
    change access privilege level
  help
    display help menu
  ignore enable-password
    ignore enable password
  ignore startup-config
    ignore system startup-config
  interface management ethernet ip address
    set the management port ip address and mask
  interface management port config 1000m
    set the management port at 1000m
  interface management port config 100m
    set the management port at 100m
  interface management port config 10m
    set the management port at 10m
  interface management port config auto-negotiate
    set the management port to auto negotiate
  interface management port config full-duplex
    set the management port to full-duplex
  interface management port config half-duplex
    set the management port to half-duplex
  interface management port config no auto-negotiate
    set the management port to no auto negotiate. set speed and duplex
to def
```

```

    ault values of (100m/full-duplex)
no default-gateway
    clear the default gateway ip address
no interface management ethernet ip address
    clear the management port ip address and mask
reload
    reload entire chassis
show boot blc
    show the boot loop counter value
show boot selection
    display rom bootstrap bootflash partition
show bootflash
    summary display of boot flash information
show bootvar
    summary display of operating system boot parameters
show default-gateway
    display the default gateway ip address
show interface management ethernet
    display the management port ip address and mask
show interface management port config
    show the management port boot characteristics
syntax help
    show syntax information
BOOT_USER #

```

boot selection

Set the bootflash partition to be used for a ROM bootstrap operation.

S5000

Syntax	boot selection {a b}
Command Modes	uBoot
Command History	Version 9.0(1.0) Introduced on the S5000.

Tunneling

Tunneling is supported on Dell EMC Networking OS.

Topics:

- [ip unnumbered](#)
- [ipv6 unnumbered](#)
- [tunnel allow-remote](#)
- [tunnel destination](#)
- [tunnel dscp](#)
- [tunnel flow-label](#)
- [tunnel hop-limit](#)
- [tunnel keepalive](#)
- [tunnel-mode](#)
- [tunnel source](#)

ip unnumbered

Configure a tunnel interface to operate without a unique IPv4 address and select the interface from which the tunnel borrows its address.

Syntax `ip unnumbered interface-type`

To set the tunnel back to default logical address use the `no ip unnumbered` command. If the tunnel was previously operational, the tunnel interface is operationally down unless you also configure the tunnel IPv6 address.

Parameters `interface-type` Enter the interface type, followed by a slot/port/subport number.

Defaults None

Command Modes INTERFACE TUNNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.1)	Introduced on the S4810, S4820T, S6000 and Z9000.
9.3(0.1)	Introduced on the S5000 and Z9000.

Usage Information

The `ip unnumbered` command fails in two conditions:

- If the logical ip address is configured.
- If Tunnel mode is `ipv6ip` (where ip address over tunnel interface is not possible).

To ping the unnumbered tunnels, the logical address route information must be present at both the ends.

NOTE: The `ip unnumbered` command can specify an interface name that does not exist or does not have a configured IPv6 address. The tunnel interface is not changed to operationally up until the logical IP address is identified from one of the address family.

ipv6 unnumbered

Configure a tunnel interface to operate without a unique IPv6 address and select the interface from which the tunnel borrows its address.

Syntax

```
ipv6 unnumbered {interface-type interface-number}
```

To set the tunnel back to default logical address use the `no ipv6 unnumbered` command. If the tunnel was previously operational, the tunnel interface is operationally down unless you also configure the tunnel IPv4 address.

Parameters

interface-type Enter the interface type, followed by the type, and then the slot/port/subport information.
interface-number

Defaults

None.

Command Modes

INTERFACE TUNNEL

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T.
9.3(0.1)	Introduced on the S6000 and Z9000.

Usage Information

The `ipv6 unnumbered` command fails in two conditions:

- If the logical IP address is configured.
- If Tunnel mode is `ipv6ip` (where ip address over tunnel interface is not possible).

To ping the unnumbered tunnels, the logical address route information must be present at both the ends.

NOTE: The `ipv6 unnumbered` command can specify an interface name that does not exist or does not have a configured IPv6 address. The tunnel interface is not changed to operationally up until the logical IP address is identified from one of the address family.

tunnel allow-remote

Configure an IPv4 or IPv6 address or prefix whose tunneled packets are accepted for decapsulation. If you do not configure allow-remote entries, tunneled packets from any remote peer address is accepted.

This feature is supported on Dell EMC Networking OS.

Syntax `tunnel allow-remote {ip-address | ipv6-address} [mask]`

To delete a configured allow-remote entry use the `no tunnel allow-remote` command. Any specified address/mask values must match an existing entry for the delete to succeed. If the address and mask are not specified, this command deletes all allow-remote entries.

Parameters

<i>ip-address</i>	Enter the source IPv4 address in A.B.C.D format.
<i>ipv6-address</i>	Enter the source IPv6 address in X:X:X::X format.
<i>mask</i>	(OPTIONAL) Enter a network mask in /prefix format (/x) or A.B.C.D to match a range of remote addresses. The default mask is /32 for IPv4 addresses and /128 for IPv6 addresses, which match only the specified address.

Defaults If you do not configure tunnel allow remote , all traffic which is destined to tunnel source address is decapsulated.

Command Modes INTERFACE TUNNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000 and Z9000.
9.3(0.1)	Introduced on the S6000 and Z9000.

Usage Information You can configure up to eight allow-remote entries on any multipoint receive-only tunnel.

This command fails if the address family entered does not match the outer header address family of the tunnel mode, tunnel source, or any other tunnel allow-remote.

If you configure any allow-remote , the tunnel source or tunnel mode commands fail if the outer header address family does not match that of the configured allow-remote.

tunnel destination

Set a destination endpoint for the tunnel.

Syntax `tunnel destination {ip-address | ipv6-address}`

To delete a tunnel destination address, use the `no tunnel destination {ip-address | ipv6-address}` command.

Parameters	<i>ip-address</i>	Enter the destination IPv4 address for the tunnel.
	<i>ipv6-address</i>	Enter the destination IPv6 address for the tunnel.
Defaults	none	
Command Modes	INTERFACE TUNNEL (conf-if-tu)	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Introduced on the S4810, S4820T, S6000 and Z9000.

Usage Information	<p>The tunnel interface is inoperable without a valid tunnel destination address for the configured Tunnel mode.</p> <p>To establish a logical tunnel to the particular destination address, use the destination address of the outer tunnel header. If you configure a tunnel interface or source address, the tunnel destination must be compatible.</p>
--------------------------	--

tunnel dscp

Configure the method to set the DSCP in the outer tunnel header.

C9000 Series

Syntax	<pre>tunnel dscp {mapped value}</pre> <p>To use the default tunnel mapping behavior, use the <code>no tunnel dscp value</code> command.</p>	
Parameters	mapped	Enter the keyword <code>mapped</code> to map the original packet DSCP (IPv4)/Traffic Class (IPv6) to the tunnel header DSCP (IPv4)/Traffic Class (IPv6) depending on the mode of tunnel.
	value	Enter a value to set the DSCP value in the tunnel header. The range is from 0 to 63. The default value of 0 denotes mapping of original packet DSCP (IPv4)/Traffic Class (IPv6) to the tunnel header DSCP (IPv4)/Traffic Class (IPv6) depending on the mode of tunnel.
Defaults	0 (Mapped)	
Command Modes	INTERFACE TUNNEL (conf-if-tu)	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.9(0.0)	Introduced on the C9010.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Introduced on the S6000, S4810, S4820T, Z9000.

Usage Information

This command configures the method used to set the high 6 bits (the differentiated services codepoint) of the IPv4 TOS or the IPv6 traffic class in the outer IP header.

A value of 0 copies original packet DSCP (IPv4)/Traffic Class (IPv6) to the tunnel header DSCP (IPv4)/Traffic Class (IPv6) depending on the mode of tunnel.

tunnel flow-label

Configure the method to set the IPv6 flow label value in the outer tunnel header.

Syntax

```
tunnel flow-label value
```

To return to the default value of 0, use the `no tunnel flow-label value` command.

Parameters

value Enter a value to set the IPv6 flow label value in the tunnel header. The range is from 0 to 1048575. The default value is **0**.

Defaults

0 (Mapped original packet flow-label value to tunnel header flow-label value)

Command Modes

INTERFACE TUNNEL (conf-if-tu)

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Introduced on the S6000, S4810, S4820T, Z9000.

Usage Information

This command is only valid for tunnel interfaces with an IPv6 outer header.

tunnel hop-limit

Configure the method to set the IPv4 time-to-live or the IPv6 hop limit value in the outer tunnel header.

Syntax	<code>tunnel hop-limit value</code> To restore the default tunnel hop-limit, use the <code>no tunnel hop-limit</code> command.
Parameters	value Enter the hop limit (ipv6) or time-to-live (ipv4) value to include in the tunnel header. The range is from 0 to 255. The default is 64 .
Defaults	64 (Time-to-live for IPv4 outer tunnel header or hop limit for IPv6 outer tunnel header)
Command Modes	INTERFACE TUNNEL (conf-if-tu)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.3(0.0)	Introduced on the S6000, S4810, S4820T, Z9000.

Usage Information A value of 0 copies the inner packet hop limit (ipv6) or time-to-live (ipv4) in the encapsulated packet to the tunnel header hop limit (ipv6) or time-to-live (ipv4) value.

tunnel keepalive

Configure the tunnel keepalive target, interval and attempts.

Syntax	<code>tunnel keepalive {ip-address ipv6-address}[interval {seconds}] [attempts {count unlimited}]</code> To disable the tunnel keepalive probes use the no tunnel keepalive command.
Parameters	ip-address ipv6 address Enter the IPv4 or IPv6 address of the peer to which the keepalive probes will be sent. interval seconds Enter the keyword <code>interval</code> then the interval time, in seconds, after which the restart process to keepalive probe packets. The range is from 5 to 255. The default is 5. count (OPTIONAL) Enter the keyword count to count packets processed by the filter. The range is from 3 to 10. The default is 3. unlimited Enter the keyword unlimited to specify the unlimited number of keepalive probe packets.

Defaults	Tunnel keepalive is disabled.
Command Modes	INTERFACE TUNNEL
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000 and Z9000.

Usage Information	<p>Enabling tunnel keepalive causes ICMP echo packets to be sent to the keepalive target. The ICMP echo will be sourced from the tunnel interface logical IPv4 or IPv6 address and will be tunnel encapsulated. The response will be accepted whether it returns tunnel encapsulated or not.</p> <p>When configuring tunnel keepalive at both end points of a tunnel interface it is recommended to set the tunnel keepalive target to the logical IPv4 or IPv6 address of the far end tunnel peer, rather than to the tunnel destination. This reduces the chance of both ends of the tunnel staying in keepalive down state. If both ends get into a keepalive down state that does not clear in a few seconds, then performing shutdown - no shutdown sequence on one end should bring both ends back to up.</p>
--------------------------	---

tunnel-mode

Enable a tunnel interface.

Syntax	<code>tunnel mode {<i>ipip</i> <i>ipv6</i> <i>ipv6ip</i>} [<i>decapsulate-any</i>]</code>
	To disable an active tunnel interface, use the no tunnel mode command.

Parameters	<i>ipip</i>	Enable tunnel in RFC 2003 mode and encapsulate IPv4 and/or IPv6 datagrams inside an IPv4 tunnel.
	<i>ipv6</i>	Enable tunnel in RFC 2473 mode and encapsulate IPv4 and/or IPv6 datagrams inside an IPv6 tunnel.
	<i>ipv6ip</i>	Enable tunnel in RFC 4213 mode and encapsulate IPv6 datagrams inside an IPv4 tunnel.
	<i>decapsulate-any</i>	(Optional) Enable tunnel in multipoint receive-only mode.

Defaults	There is no default tunnel mode.
Command Modes	INTERFACE TUNNEL
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added the decapsulate-any command.
9.3(0.1)	Introduced on the S6000 and Z9000.

Usage Information

To enable a tunnel interface, use this command. You must define a tunnel mode for the tunnel to function. If you previously defined the tunnel destination or source address, the tunnel mode must be compatible.

Including the decapsulate-any option causes the command to fail if any of the following tunnel transmit options are configured: tunnel destination, tunnel dscp, tunnel flow-label, tunnel hop-limit, or tunnel keepalive. Conversely, if you configure any tunnel allow-remote entries, the `tunnel-mode` command fails unless the decapsulate-any option is included.

Configuration of IPv6 commands over decapsulate-any tunnel causes an error.

tunnel source

Set a source address for the tunnel.

Syntax `tunnel source {ip-address | ipv6-address | interface-type-number | anylocal}`

To delete the current tunnel source address, use the `no tunnel source` command.

Parameters

<i>ip-address</i>	Enter the source IPv4 address in A.B.C.D format.
<i>ipv6-address</i>	Enter the source IPv6 address in X:X:X::X format.
<i>interface-type-number</i>	<ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a VLAN interface, enter the keyword <code>vlan</code> then a number from 1 to 4094. For a port-channel interface, enter the keywords <code>port-channel</code> then the port-channel ID.
<i>anylocal</i>	Enter the <code>anylocal</code> command to allow the multipoint receive-only tunnel to decapsulate tunnel packets destined to any local ip address.

Defaults none

Command Modes INTERFACE TUNNEL (conf-if-tu)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added the tunnel source anylocal command.
9.3(0.0)	Introduced on the S4810, S4820T, S6000 and Z9000.

**Usage
Information**

Added an optional keyword **“anylocal”** to the tunnel source command. The anylocal argument can be used in place of the ip address or interface, but only with the multipoint receive-only mode tunnels. The tunnel source `anylocal` command allows the multipoint receive-only tunnel to decapsulate tunnel packets addressed to any IPv4 or IPv6 (depending on the tunnel mode) address configured on the switch that is operationally **Up**.

Uplink Failure Detection (UFD)

Uplink failure detection (UFD) provides detection of the loss of upstream connectivity and, if you use this with NIC teaming, automatic recovery from a failed link.

Topics:

- [clear ufd-disable](#)
- [debug uplink-state-group](#)
- [description](#)
- [downstream](#)
- [downstream auto-recover](#)
- [downstream disable links](#)
- [enable](#)
- [show running-config uplink-state-group](#)
- [show uplink-state-group](#)
- [uplink-state-group](#)
- [upstream](#)

clear ufd-disable

Re-enable one or more downstream interfaces on the switch/router that are in a UFD-Disabled Error state so that an interface can send and receive traffic.

Syntax `clear ufd-disable {interface interface | uplink-state-group group-id}`

Parameters

interface ***interface***

Specify one or more downstream interfaces. For *interface*, enter one of the following interface types:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the *slot/port* | *slot/port-range*
- 40-Gigabit Ethernet: `fortyGigE` {*slot/port*}
- Port channel: `port-channel` {*1-128* | *port-channel-range*}

Where *port-range* and *port-channel-range* specify a range of ports separated by a dash (-) and/or individual ports/port channels in any order; for example: `gigabitethernet 1/1-2,5,9,11-12 port-channel 1-3,5`. A comma is required to separate each port and port-range entry.

uplink-state- **group *group-id***

Re-enables all UFD-disabled downstream interfaces in the group. The valid *group-id* values are from 1 to 16.

Defaults

A downstream interface in a UFD-disabled uplink-state group is also disabled and is in a UFD-Disabled Error state.

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Related Commands

- [downstream](#) — assigns a port or port-channel to the uplink-state group as a downstream interface.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

debug uplink-state-group

Enable debug messages for events related to a specified uplink-state group or all groups.

Syntax

`debug uplink-state-group [group-id]`

To turn off debugging event messages, enter the `no debug uplink-state-group [group-id]` command.

Parameters

group-id Enables debugging on the specified uplink-state group. The valid group-id values are from 1 to 16.

Defaults

none

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Related Commands

- [clear ufd-disable](#) — re-enable downstream interfaces that are in a UFD-Disabled Error state.

description

Enter a text description of an uplink-state group.

Syntax	<code>description text</code>
Parameters	text Text description of the uplink-state group. The maximum length is 80 alphanumeric characters.
Defaults	none
Command Modes	UPLINK-STATE-GROUP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Example

```
DellEMC(conf-uplink-state-group-16) # description test
DellEMC(conf-uplink-state-group-16) #
```

Related Commands

- [uplink-state-group](#) — create an uplink-state group and enables the tracking of upstream links.

downstream

Assign a port or port-channel to the uplink-state group as a downstream interface.

Syntax	<code>downstream interface</code>
	To delete an uplink-state group, enter the <code>no downstream interface</code> command.
Parameters	interface Enter one of the following interface types: <ul style="list-style-type: none">• For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the <code>slot/port slot/port-range</code>• 40-Gigabit Ethernet: <code>fortyGigE {slot/port}</code>• Port channel: <code>port-channel {1-128 port-channel-range}</code> Where <code>port-range</code> and <code>port-channel-range</code> specify a range of ports separated by a dash (-) and/or individual ports/port channels in any order; for example: <code>gigabitethernet 1/1-2,5,9,11-12 port-channel 1-3,5</code> . A comma is required to separate each port and port-range entry.
Defaults	none

Command Modes UPLINK-STATE-GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Usage Information

You can assign physical port or port-channel interfaces to an uplink-state group.

You can assign an interface to only one uplink-state group. Configure each interface assigned to an uplink-state group as either an upstream or downstream interface, but not both.

You can assign individual member ports of a port channel to the group. An uplink-state group can contain either the member ports of a port channel or the port channel itself, but not both.

Related Commands

- [upstream](#) — assigns a port or port-channel to the uplink-state group as an upstream interface.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

downstream auto-recover

Enable auto-recovery so that UFD-disabled downstream ports in an uplink-state group automatically come up when a disabled upstream port in the group comes back up.

Syntax `downstream auto-recover`

To disable auto-recovery on downstream links, use the `no downstream auto-recover` command.

Defaults The auto-recovery of UFD-disabled downstream ports is enabled.

Command Modes UPLINK-STATE-GROUP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Related Commands

- [downstream](#) — assign a port or port-channel to the uplink-state group as a downstream interface.
- [uplink-state-group](#) — create an uplink-state group and enables the tracking of upstream links.

downstream disable links

Configure the number of downstream links in the uplink-state group that are disabled if one upstream link in an uplink-state group goes down.

Syntax

`downstream disable links {number | all}`

To revert to the default setting, use the `no downstream disable links` command.

Parameters

<i>number</i>	Enter the number of downstream links the UFD brings down. The range is from 1 to 1024.
all	Brings down all downstream links in the group.

Defaults

No downstream links are disabled when an upstream link in an uplink-state group goes down.

Command Modes UPLINK-STATE-GROUP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Usage Information

When one upstream interface in an uplink-state group goes down, you can configure the number of downstream interfaces in an uplink-state group are put into a link-down state with an UFD-Disabled error message.

If all upstream interfaces in an uplink-state group go down, all downstream interfaces in the same uplink-state group are put into a link-down state.

Related Commands

- [downstream](#) — assigns a port or port-channel to the uplink-state group as a downstream interface.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

enable

Enable uplink state group tracking for a specific UFD group.

Syntax	<code>enable</code> To disable upstream-link tracking without deleting the uplink-state group, use the <code>no enable</code> command.
Defaults	Upstream-link tracking is automatically enabled in an uplink-state group.
Command Modes	UPLINK-STATE-GROUP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Related Commands	<ul style="list-style-type: none">uplink-state-group — create an uplink-state group and enables the tracking of upstream links.
-------------------------	---

show running-config uplink-state-group

Display the current configuration of one or more uplink-state groups.

Syntax	<code>show running-config uplink-state-group [group-id]</code>
Parameters	group-id Displays the current configuration of all uplink-state groups or a specified group. The valid group-id values are from 1 to 16.
Defaults	none
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Example

```
DellEMC# show running-config uplink-state-group
!
no enable
uplink state track 1
downstream twentyFiveGigE 1/2,4,6,11-19
upstream FortyGigE 1/49, 29
upstream PortChannel 1
!
uplink state track 2
downstream twentyFiveGigE 1/1,3,5,7-10
upstream FortyGigE 1/49,42
```

Related Commands

- [show uplink-state-group](#) — displays the status information on a specified uplink-state group or all groups.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

show uplink-state-group

Display status information on a specified uplink-state group or all groups.

Syntax

```
show uplink-state-group [group-id] [detail]
```

Parameters

<i>group-id</i>	Displays status information on a specified uplink-state group or all groups. The valid <i>group-id</i> values are from 1 to 16.
<i>detail</i>	Displays additional status information on the upstream and downstream interfaces in each group

Defaults

none

Command Modes

- EXEC
- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Example

```
DelleMC# show uplink-state-group
Uplink State Group: 1 Status: Enabled, Up
Uplink State Group: 3 Status: Enabled, Up
Uplink State Group: 5 Status: Enabled, Down
Uplink State Group: 6 Status: Enabled, Up
Uplink State Group: 7 Status: Enabled, Up
Uplink State Group: 16 Status: Disabled, Up

DelleMC# show uplink-state-group 16
Uplink State Group: 16 Status: Disabled, Up

DelleMC#show uplink-state-group detail
(U): Interface up (Dwn): Interface down (Dis): Interface disabled
Uplink State Group : 1 Status: Enabled, Up
Upstream Interfaces :
Downstream Interfaces :

Uplink State Group : 3 Status: Enabled, Up
Upstream Interfaces : Te 1/25(Up) Te 1/28(Up)
Downstream Interfaces : Te 5/1(Up) Te 5/1(Up) Te 5/3(Up) Te 5/5(Up) Te
5/6(Up)

Uplink State Group : 5 Status: Enabled, Down
Upstream Interfaces : Te 1/1(Dwn) Te 1/3(Dwn) Te 1/5(Dwn)
Downstream Interfaces : Te 5/2(Dis) Te 5/4(Dis) Te 5/11(Dis) Te
5/12(Dis) Te 5/13(Dis) Te 5/14(Dis) Te 5/15(Dis)

Uplink State Group : 6 Status: Enabled, Up
Upstream Interfaces :
Downstream Interfaces :

Uplink State Group : 7 Status: Enabled, Up
Upstream Interfaces :
Downstream Interfaces :

Uplink State Group : 16 Status: Disabled, Up
Upstream Interfaces : Te 1/25(Dwn) Po 8(Dwn)
Downstream Interfaces : Te 1/30(Dwn)
```

```
DelleMC# show uplink-state-group
Uplink State Group: 1 Status: Enabled, Up
Uplink State Group: 3 Status: Enabled, Up
Uplink State Group: 5 Status: Enabled, Down
Uplink State Group: 6 Status: Enabled, Up
Uplink State Group: 7 Status: Enabled, Up
Uplink State Group: 16 Status: Disabled, Up

DelleMC# show uplink-state-group 16
Uplink State Group: 16 Status: Disabled, Up

DelleMC#show uplink-state-group detail
(U): Interface up (Dwn): Interface down (Dis): Interface disabled
Uplink State Group : 1 Status: Enabled, Up
Upstream Interfaces :
Downstream Interfaces :

Uplink State Group : 3 Status: Enabled, Up
Upstream Interfaces : Te 1/25(Up) Te 1/28(Up)
Downstream Interfaces : Te 5/1(Up) Te 5/1(Up) Te 5/3(Up) Te 5/5(Up) Te
5/6(Up)

Uplink State Group : 5 Status: Enabled, Down
Upstream Interfaces : Te 1/1(Dwn) Te 1/3(Dwn) Te 1/5(Dwn)
Downstream Interfaces : Te 5/2(Dis) Te 5/4(Dis) Te 5/11(Dis) Te
```

```

5/12(Dis) Te 5/13(Dis) Te 5/14(Dis) Te 5/15(Dis)

Uplink State Group      : 6 Status: Enabled, Up
Upstream Interfaces     :
Downstream Interfaces   :

Uplink State Group      : 7 Status: Enabled, Up
Upstream Interfaces     :
Downstream Interfaces   :

Uplink State Group      : 16 Status: Disabled, Up
Upstream Interfaces     : Te 1/25(Dwn) Po 8(Dwn)
Downstream Interfaces   : Te 1/30(Dwn)

```

Related Commands

- [show running-config uplink-state-group](#) — displays the current configuration of one or more uplink-state groups.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

uplink-state-group

Create an uplink-state group and enable the tracking of upstream links on a switch or router.

Syntax `uplink-state-group group-id`

To delete an uplink-state group, enter the `no uplink-state-group group-id` command.

Parameters **group-id** Enter the ID number of an uplink-state group. The range is from 1 to 16.

Defaults none

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Usage Information

After you enter the command, to assign upstream and downstream interfaces to the group, enter Uplink-State-Group Configuration mode.

An uplink-state group is considered operationally up if at least one upstream interface in the group is in the Link-Up state.

An uplink-state group is considered operationally down if no upstream interfaces in the group are in the Link-Up state. No uplink-state tracking is performed when a group is disabled or in an operationally down state.

To disable upstream-link tracking without deleting the uplink-state group, use the `no enable` command in uplink-state-group configuration mode.

Example

```
DellEMC(conf)# uplink-state-group 16
DellEMC(conf)#
02:23:17: %RPM0-P:CP %IFMGR-5-ASTATE_UP: Changed uplink state group
Admin state to up: Group 16
DellEMC(conf)#
```

Related Commands

- [show running-config uplink-state-group](#) — displays the current configuration of one or more uplink-state groups.
- [show uplink-state-group](#) — displays the status information on a specified uplink-state group or all groups.

upstream

Assign a port or port-channel to the uplink-state group as an upstream interface.

Syntax

`upstream interface`

To delete an uplink-state group, use the `no upstream interface` command.

Parameters

interface

Enter one of the following interface types:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the `slot/port` | `slot/port-range`
- 40-Gigabit Ethernet: `fortyGigE {slot/port}`
- Port channel: `port-channel {1-128 | port-channel-range}`

Where `port-range` and `port-channel-range` specify a range of ports separated by a dash (-) and/or individual ports/port channels in any order; for example: `gigabitethernet 1/1-2,5,9,11-12 port-channel 1-3,5`. A comma is required to separate each port and port-range entry.

Defaults

none

Command Modes

UPLINK-STATE-GROUP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version

Description

9.10.0.2	Introduced on the Z9100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.2(1.0)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.
8.4.2.3	Introduced on the S-Series S50.

Usage Information

You can assign physical port or port-channel interfaces to an uplink-state group.

You can assign an interface to only one uplink-state group. Configure each interface assigned to an uplink-state group as either an upstream or downstream interface, but not both.

You can assign individual member ports of a port channel to the group. An uplink-state group can contain either the member ports of a port channel or the port channel itself, but not both.

Example

```
DellEMC(conf-uplink-state-group-16) # upstream tengigabitethernet 1/10-15  
DellEMC(conf-uplink-state-group-16) #
```

Related Commands

- [downstream](#) — assigns a port or port-channel to the uplink-state group as a downstream interface.
- [uplink-state-group](#) — creates an uplink-state group and enables the tracking of upstream links.

VLAN Stacking

With the virtual local area network (VLAN)-stacking feature (also called stackable VLANs and QinQ), you can “stack” VLANs into one tunnel and switch them through the network transparently.

The Dell EMC Networking OS supports this feature.

For more information about basic VLAN commands, see the *Virtual LAN (VLAN) Commands* section in [Layer 2](#).

Important Points to Remember

- If you do not enable the spanning tree protocol (STP) across the stackable VLAN network, STP bridge protocol data units (BPDUs) from the customer’s networks are tunneled across the stackable VLAN network.
- If you do enable STP across the stackable VLAN network, STP BPDUs from the customer’s networks are consumed and not tunneled across the stackable VLAN network unless you enable protocol tunneling.
 - **NOTE:** For more information about protocol tunneling on the E-Series, see [Service Provider Bridging](#).
- Layer 3 protocols are not supported on a stackable VLAN network.
- Assigning an IP address to a stackable VLAN is supported when all the members are only stackable VLAN trunk ports. IP addresses on a stackable VLAN-enabled VLAN are not supported if the VLAN contains stackable VLAN access ports. This facility is provided for the simple network management protocol (SNMP) management over a stackable VLAN-enabled VLAN containing only stackable VLAN trunk interfaces. Layer 3 routing protocols on such a VLAN are not supported.
- Dell EMC Networking recommends that you do not use the same MAC address, on different customer VLANs, on the same stackable VLAN.
- Interfaces configured using stackable VLAN access or stackable VLAN trunk commands do not switch traffic for the default VLAN. These interfaces are switch traffic only when they are added to a non-default VLAN.
- Starting with Dell EMC Networking OS version 7.8.1 for C-Series and S-Series (Dell EMC Networking OS version 7.7.1 for E-Series, 8.2.1.0 for E-Series ExaScale), a vlan-stack trunk port is also allowed to be configured as a tagged port and as an untagged port for single-tagged VLANs. When the vlan-stack trunk port is also a member of an untagged vlan, the port must be in Hybrid mode. For more information, see [portmode hybrid](#).

Topics:

- [dei enable](#)
- [dei honor](#)
- [dei mark](#)
- [member](#)
- [show interface dei-honor](#)
- [show interface dei-mark](#)
- [stack-unit stack-group](#)
- [vlan-stack access](#)
- [vlan-stack compatible](#)
- [vlan-stack dot1p-mapping](#)
- [vlan-stack protocol-type](#)
- [vlan-stack trunk](#)

dei enable

Enable packets to be dropped based on their DEI value.

Syntax `dei enable`

Command Modes CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the C-Series and S-Series.

Usage Information

When packets are colored green; no packets are dropped.

dei honor

Honor the incoming DEI value by mapping it to a Dell EMC Networking OS drop precedence. Enter the command once for 0 and once for 1.

Syntax `dei honor {0 | 1} {green | red | yellow}`

Parameters

0 1	Enter the bit value you want to map to a color.
green red yellow	Choose a color: <ul style="list-style-type: none">Green: High priority packets that are the least preferred to be dropped.Yellow: Lower priority packets that are treated as best-effort.Red: Lowest priority packets that are always dropped (regardless of congestion status).

Defaults Disabled; Packets with an unmapped DEI value are colored green.

Command Modes INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the C-Series and S-Series.

Usage Information

Enable DEI before using this command.

dei mark

Set the DEI value on egress according to the color currently assigned to the packet.

Syntax

```
dei mark {green | yellow} {0 | 1}
```

Parameters

0 1	Enter the bit value you want to map to a color.
green red yellow	Choose a color: <ul style="list-style-type: none"> Green: High priority packets that are the least preferred to be dropped. Yellow: Lower priority packets that are treated as best-effort.

Defaults

All the packets on egress are marked with DEI 0.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the C-Series and S-Series.

Usage Information

Enable DEI before using this command.

member

Assign a stackable VLAN access or trunk port to a VLAN. The VLAN must contain the `vlan-stack compatible` command in its configuration.

Syntax `member interface`

To remove an interface from a Stackable VLAN, use the `no member interface` command.

Parameters ***interface*** Enter the following keywords and the interface information:

- For a Port Channel interface, enter the keywords `port-channel`, and then a number.
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults Not configured.

Command Modes CONF-IF-VLAN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.11.1	Introduced on the Z9000.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series and S-Series.

Usage Information Enable the stackable VLAN (using the `vlan-stack compatible` command) on the VLAN prior to adding a member to the VLAN.

Related Commands

- [vlan-stack compatible](#) — enables stackable VLAN on a VLAN.

show interface dei-honor

Display the dei honor configuration.

Syntax `show interface dei-honor [interface slot/port | linecard number port-set number]`

Parameters ***interface slot/port*** Enter the interface type followed by the line card slot and port number.

linecard *number* Enter *linecard* followed by the line card slot number, then enter *port-set*
port-set *number* followed by the port-pipe number.

Command Modes EXEC Privilege

Command History

- Version 9.0.2.0** Introduced on the S6000.
- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.3.11.1** Introduced on the Z9000.
- Version 8.3.7.0** Introduced on the S4810.
- Version 8.3.1.0** Introduced on the C-Series and S-Series.

Example

```
Dell#show interface dei-honor

Default Drop precedence: Green
Interface      CFI/DEI          Drop precedence
-----
Gi 0/1         0                 Green
Gi 0/1         1                 Yellow
Gi 8/9         1                 Red
Gi 8/40        0                 Yellow
```

Related Commands [dei honor](#) — Honor the incoming DEI value by mapping it to an Dell Networking OS drop precedence.

show interface dei-mark

Display the dei mark configuration.

Syntax `show interface dei-mark [interface slot/port | linecard number port-set number]`

Parameters

- interface slot/port*** Enter the interface type followed by the line card slot and port number.
- linecard *number*** Enter *linecard* followed by the line card slot number, then enter *port-set*
port-set *number* followed by the port-pipe number.

Command Modes EXEC Privilege

Command History

- Version 9.0.2.0** Introduced on the S6000.
- Version 8.3.19.0** Introduced on the S4820T.
- Version 8.3.11.1** Introduced on the Z9000.
- Version 8.3.7.0** Introduced on the S4810.
- Version 8.3.1.0** Introduced on the C-Series and S-Series.

Example

```
Dell#show interface dei-mark

Default CFI/DEI Marking: 0
Interface      Drop precedence  CFI/DEI
-----
Gi 0/1         Green            0
Gi 0/1         Yellow           1
Gi 8/9         Yellow           0
Gi 8/40        Yellow           0
```

Related Commands [dei mark](#) — Set the DEI value on egress according to the color currently assigned to the packet.

stack-unit stack-group

Configure a stacking group specified by an ID.

Syntax `[no] stack-unit unit-id stack-group stack-group-id`
To remove the current stack group configuration, use the `no stack-unit unit-id stack-group stack-id` command.

Parameters

- unit-id*** Enter the stack unit ID.
- stack-group-id*** Enter the stack group ID. The range is from 0 to 16.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.10.2	Introduced on the S4810.

Usage Information

CAUTION: The following message displays to confirm the command: All non-default configurations on the related member ports ports (<ports listed here>) will be removed. Do you want to continue (y/n)? If you enter “y”, all non-default configurations on any member ports of the current stack group are removed when you reboot the unit.

vlan-stack access

Specify a Layer 2 port or port channel as an access port to the stackable VLAN network.

Syntax `vlan-stack access`
To remove access port designation, use the `no vlan-stack access` command.

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series and S-Series.

E-Series original Command

Usage Information

Prior to enabling this command, to place the interface in Layer 2 mode, enter the `switchport` command.

To remove the access port designation, remove the port (using the `no member interface` command) from all stackable VLAN-enabled VLANs.

vlan-stack compatible

Enable the stackable VLAN feature on a VLAN.

Syntax	<code>vlan-stack compatible</code> To disable the Stackable VLAN feature on a VLAN, use the <code>no vlan-stack compatible</code> command.
Defaults	Not configured.
Command Modes	CONF-IF-VLAN
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series and S-Series.

E-Series original Command

Usage Information

Prior to disabling the stackable VLAN feature, remove the members.

To view the stackable VLANs, use the `show vlan` command in EXEC Privilege mode. Stackable VLANs contain members, designated by the M in the Q column of the command output.

If you enabled VRF, you cannot enable the stacked VLAN feature using this command.

If you enabled IGMP snooping, you cannot enable the stacked VLAN feature using this command.

Example

```
DellEMC# show vlan
Codes: * - Default VLAN, G - GVRP VLANs

  NUM  Status    Q Ports
*  1    Inactive
  2    Active     M Te 1/13
                        M Te 1/1-3
  3    Active     M Po1(Te 1/14-15)
                        M Te 1/18
                        M Te 1/4
  4    Active     M Po1(Te 1/14-15)
                        M Te 1/18
                        M Te 1/5
  5    Active     M Po1(Te 1/14-15)
                        M Te 1/18
                        M Te 1/6

DellEMC#
```

vlan-stack dot1p-mapping

Map C-Tag dot1p values to an S-Tag dot1p value.

Syntax `vlan-stack dot1p-mapping c-tag-dot1p values sp-tag-dot1p value`

Parameters

- c-tag-dot1p value** Enter the keyword `c-tag-dot1p` then the customer dot1p value that is mapped to a service provider dot1p value. The range is from 0 to 7.
- sp-tag-dot1p value** Enter the keyword `sp-tag-dot1p` then the service provider dot1p value. The range is from 0 to 7.

Defaults none

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced on the C-Series and S-Series.

Usage Information

You can separate the C-Tag values by commas or dashed ranges. In the case of conflicts, dynamic mode CoS overrides any Layer 2 QoS configuration.

vlan-stack protocol-type

Define the stackable VLAN tag protocol identifier (TPID) for the outer VLAN tag (also called the VMAN tag). If you do not configure this command, the Dell EMC Networking OS assigns the value 0x9100.

Syntax `vlan-stack protocol-type number`

Parameters *number* Enter the hexadecimal number as the stackable VLAN tag.
You may specify both bytes of the 2-byte S-Tag TPID. The range is from 0 to FFFF. The default is **9100**.

Defaults 0x9100

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820.
8.3.7.0	Introduced on the S4810.

Version	Description
8.2.1.0	Introduced on the E-Series. C-Series and S-Series accept both bytes of the 2-byte S-Tag TPID.
8.2.1.0	Introduced on the E-Series.
7.6.1.0	Introduced on the C-Series and S-Series.

E-Series original Command

Usage Information

For specific interoperability limitations regarding the S-Tag TPID, see the *Dell EMC Networking OS Configuration Guide*.

The four characters you may enter are shown in the following table.

Number	Resulting TPID
1	0x0001
10	0x0010
81	0x0081
8100	0x8100

Related Commands

- [portmode hybrid](#) — sets a port (physical ports only) to accept both tagged and untagged frames. A port configured this way is identified as a hybrid port in report displays.
- [vlan-stack trunk](#) — specifies a Layer 2 port or port channel as a trunk port to the Stackable VLAN network.

vlan-stack trunk

Specify a Layer 2 port or port channel as a trunk port to the stackable VLAN network.

Syntax

```
vlan-stack trunk
```

To remove a trunk port designation from the selected interface, use the `no vlan-stack trunk` command.

Defaults

Not configured.

Command Modes

INTERFACE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.

Version	Description
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Introduced on the E-Series. C-Series and S-Series accept both bytes of the 2-byte S-Tag TPID.
7.8.1.0	Functionality augmented for C-Series and S-Series to enable multi-purpose use of the port.
7.7.1.0	Functionality augmented for E-Series to enable multi-purpose use of the port.
7.6.1.0	Introduced on the C-Series and S-Series.

E-Series original Command

Usage Information

Prior to using this command, to place the interface in Layer 2 mode, use the `switchport` command.

To remove the trunk port designation, first remove the port (using the `no member interface` command) from all stackable VLAN-enabled VLANs.

In Example 1, a VLAN-Stack trunk port is configured and then made part of a single-tagged VLAN.

In Example 2, the tag protocol identifier (TPID) is set to 88A8. The Te 3/10 port is configured to act as a VLAN-Stack access port; the Te 5/1 port acts as a VLAN-Stack trunk port, switching stackable VLAN traffic for VLAN 10, while also switching untagged traffic for VLAN 30 and tagged traffic for VLAN 40. (To allow VLAN 30 traffic, you need the native VLAN feature. Use the `portmode hybrid` command. For more information, see the [portmode hybrid](#) command.

Example 1

```
DelleMC(conf-if-te-1/42)# switchport
DelleMC(conf-if-te-1/42)# vlan-stack trunk
DelleMC(conf-if-te-1/42)# show config
!
interface TenGigabitEthernet 1/42
  no ip address
  switchport
  vlan-stack trunk
  no shutdown
DelleMC(conf-if-te-1/42)# interface vlan 100
DelleMC(conf-if-vl-100)# vlan-stack compatible
DelleMC(conf-if-vl-100-stack)# member tengigabitethernet 1/42
DelleMC(conf-if-vl-100-stack)# show config
!
interface Vlan 100
  no ip address
  vlan-stack compatible
  member TenGigabitEthernet 1/42
  shutdown
DelleMC(conf-if-vl-100-stack)# interface vlan 20
DelleMC(conf-if-vl-20)# tagged Tengigabitethernet 1/42
DelleMC(conf-if-vl-20)# show config
!
interface Vlan 20
  no ip address
  tagged TenGigabitEthernet 1/42
  shutdown
DelleMC(conf-if-vl-20)# do show vlan
Codes: * - Default VLAN, G - GVRP VLANs
Q: U - Untagged, T - Tagged
   x - Dot1x untagged, X - Dot1x tagged
   G - GVRP tagged, M - Vlan-stack

  NUM  Status Description      Q Ports
  * 1   Inactive
    20  Active                T Te 1/42
    100 Active                M Te 1/42
DelleMC(conf-if-vl-20)#
```

Example 2

```
DelleMC(config)# vlan-stack protocol-type 88A8
DelleMC(config)# interface TenGigabitEthernet 3/10
DelleMC(conf-if-te-3/10)# no shutdown
DelleMC(conf-if-te-3/10)# switchport
DelleMC(conf-if-te-3/10)# vlan-stack access
DelleMC(conf-if-te-3/10)# exit

DelleMC(config)# interface TenGigabitEthernet 5/1
DelleMC(conf-if-te-5/1)# no shutdown
DelleMC(conf-if-te-5/1)# portmode hybrid
DelleMC(conf-if-te-5/1)# switchport
DelleMC(conf-if-te-5/1)# vlan-stack trunk
DelleMC(conf-if-te-5/1)# exit

DelleMC(config)# interface vlan 10
DelleMC(conf-if-vlan)# vlan-stack compatible
DelleMC(conf-if-vlan)# member Te 4/1, Te 3/10, TenGi 5/1
DelleMC(conf-if-vlan)# exit

DelleMC(config)# interface vlan 30
DelleMC(conf-if-vlan)# untagged TenGi 5/1
DelleMC(conf-if-vlan)# exit
DelleMC(config)#

DelleMC(config)# interface vlan 40
DelleMC(conf-if-vlan)# tagged TenGi 5/1
DelleMC(conf-if-vlan)# exit
DelleMC(config)#
```

Virtual Routing and Forwarding (VRF)

Virtual routing and forwarding (VRF) allows multiple instances of a routing table to coexist on the same router at the same time.

Topics:

- [ip vrf](#)
- [ip http vrf](#)
- [description](#)
- [ip vrf forwarding](#)
- [ip route-export](#)
- [ip route-import](#)
- [ipv6 route-export](#)
- [ipv6 route-import](#)
- [match source-protocol](#)
- [redistribute](#)
- [interface management](#)
- [maximum dynamic-routes](#)
- [show ip vrf](#)
- [show run vrf](#)

ip vrf

Create or delete a customer VRF.

Syntax	<code>ip vrf {vrf-name management} [vrf_id]</code>	
	To delete a customer VRF, use the <code>no ip vrf {vrf-name management} [vrf_id]</code> command.	
Parameters	vrf-name	Enter the name of the VRF that you create.
	management	Enter the keyword <code>management</code> to create the management VRF.
	vrf_id	(Optional) Enter the ID of the VRF that you create.
Defaults	Available by default for management VRF. For creating other customer VRFs, enable the <code>feature vrf</code> option in Configuration mode.	
Command Modes	CONFIGURATION	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.4(0.0)	Introduced on the S4810 and S4820T.

Usage Information	You cannot use the keyword <code>default</code> as a VRF name as this name indicates a special VRF.
	To create a management VRF, use the keyword <code>management</code> .
	The VRF ID is optional.

ip http vrf

Configure an HTTP client with a VRF used to connect to the HTTP server.

S5000

Syntax	<code>ip http vrf {management vrf-name}</code> To undo the HTTP client configuration, use the <code>ip http vrf</code> command.																		
Parameters	<table><tr><td>management</td><td>Enter the keyword <code>management</code> for configuring the management VRF that uses an HTTP client.</td></tr><tr><td>vrf-name</td><td>Enter a VRF name that the HTTP client uses. If you do not specify a VRF name, the HTTP client uses the default VRF.</td></tr></table>	management	Enter the keyword <code>management</code> for configuring the management VRF that uses an HTTP client.	vrf-name	Enter a VRF name that the HTTP client uses. If you do not specify a VRF name, the HTTP client uses the default VRF.														
management	Enter the keyword <code>management</code> for configuring the management VRF that uses an HTTP client.																		
vrf-name	Enter a VRF name that the HTTP client uses. If you do not specify a VRF name, the HTTP client uses the default VRF.																		
Defaults	Disabled																		
Command Modes	CONFIGURATION																		
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .																		
	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.10(0.1)</td><td>Introduced on the S6010-ON and S4048T-ON.</td></tr><tr><td>9.10(0.0)</td><td>Introduced on the S3148.</td></tr><tr><td>9.10(0.0)</td><td>Introduced on the S6100-ON.</td></tr><tr><td>9.8(2.0)</td><td>Introduced on the S3100 series.</td></tr><tr><td>9.8(1.0)</td><td>Introduced on the Z9100-ON.</td></tr><tr><td>9.8(0.0P5)</td><td>Introduced on the S4048-ON.</td></tr><tr><td>9.8(0.0P2)</td><td>Introduced on the S3048-ON.</td></tr><tr><td>9.8(0.0)</td><td>Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.</td></tr></tbody></table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.	9.10(0.0)	Introduced on the S3148.	9.10(0.0)	Introduced on the S6100-ON.	9.8(2.0)	Introduced on the S3100 series.	9.8(1.0)	Introduced on the Z9100-ON.	9.8(0.0P5)	Introduced on the S4048-ON.	9.8(0.0P2)	Introduced on the S3048-ON.	9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.
Version	Description																		
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.																		
9.10(0.0)	Introduced on the S3148.																		
9.10(0.0)	Introduced on the S6100-ON.																		
9.8(2.0)	Introduced on the S3100 series.																		
9.8(1.0)	Introduced on the Z9100-ON.																		
9.8(0.0P5)	Introduced on the S4048-ON.																		
9.8(0.0P2)	Introduced on the S3048-ON.																		
9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.																		
Usage Information	To make the HTTP clients VRF-aware, use the <code>ip http vrf</code> command. The HTTP client uses the VRF name that you specify to reach the HTTP server. If you do not specify a VRF name, the HTTP client uses the default VRF.																		

description

Specify a name for a customer VRF.

Syntax	<code>description string</code> To delete the descriptive name for a customer VRF, use the <code>no description string</code> command.				
Parameters	<table><tr><td>string</td><td>Enter a descriptive name for the VRF.</td></tr></table>	string	Enter a descriptive name for the VRF.		
string	Enter a descriptive name for the VRF.				
Defaults	None.				
Command Modes	VRF MODE				
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .				
	<table><thead><tr><th>Version</th><th>Description</th></tr></thead><tbody><tr><td>9.10(0.1)</td><td>Introduced on the S6010-ON and S4048T-ON.</td></tr></tbody></table>	Version	Description	9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
Version	Description				
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.				

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048–ON.
9.8(0.0P2)	Introduced on the S3048–ON.
9.7(0.0)	Introduced on the S6000–ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series.

ip vrf forwarding

Attach an interface to a VRF.

Syntax `ip vrf forwarding {vrf-name | management}`
 To delete an interface associated with a configured VRF, use the `no ip vrf forwarding {vrf-name | management}` command.

Parameters

vrf-name	Enter name of the VRF that you want to associate the interface to.
management	Enter the keyword <code>management</code> to associate an interface to the management VRF.

Defaults none

Command Modes INTERFACE-CONFIG

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010–ON and S4048T–ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048–ON.
9.8(0.0P2)	Introduced on the S3048–ON.
9.7(0.0)	Introduced on the S6000–ON and Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Usage Information You can attach an interface to either a nondefault VRF or a management VRF.

To assign a port-back to a default VRF, remove the VRF association from the interface. You can use this only if there is no IP address configured on the interface.

There must be no prior Layer 3 configuration on the interface when configuring VRF.

You must enable VRF before using this command.

You can configure an IP subnet or address on a physical or VLAN interface that overlaps the same IP subnet or address configured on another interface only if the interfaces are assigned to different VRFs. If you assign two interfaces to the same VRF, you cannot configure overlapping IP subnets or the same IP address to them.

Example

```
DelleMC# configure terminal
DelleMC(conf)# ip vrf red
DelleMC(conf-vrf)# description "Red Network"
DelleMC(conf-vrf)# show config
!
ip vrf red 4
  description "Red Network"
DelleMC(conf-vrf)#

DelleMC(conf-if-te-1/45)# int te 7/46
DelleMC(conf-if-te-1/46)# no shut
DelleMC(conf-if-te-1/46)# ip vrf forwarding red
DelleMC(conf-if-te-1/46)# ip add 100.1.1.1/24
DelleMC(conf-if-te-1/46)#
DelleMC(conf-if-te-1/46)#
DelleMC(conf-if-te-1/46)#
DelleMC(conf-if-te-1/46)# show config
!
interface TenGigabitEthernet 1/46
  ip vrf forwarding red
  ip address 100.1.1.1/24
  no shutdown
DelleMC(conf-if-te-1/46)#
```

ip route-export

Enables route leaking between VRFs. This command exports or shares IPv4 routes corresponding to one VRF with other nondefault VRFs.

Syntax `ip route-export tag [route-map-name]`

Parameters	
route-export	Enter the keywords <code>route-export</code> to leak or share routes between VRFs.
tag	Enter a tag (export route target) to expose routes to other VRFs. This tag acts as an identifier for exported routes. Use this identifier while importing these routes into another nondefault VRF.
route-map-name	(Optional) Enter the name of the route-map to filter the exported routes. You can leak global routes to VRFs. As the global RTM usually contains a large pool of routes, when the destination VRF imports global routes, these routes are duplicated into the VRF's RTM. It is mandatory to use route-maps to filter out leaked routes while sharing global routes with VRFs.

- Command Modes**
- VRF mode
 - CONFIGURATION mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information

To export all the routes corresponding to a source VRF, you can use the `ip route-export tag` command without specifying the `route-map` attribute. This action exposes source VRF routes to various other VRFs, which then import these routes using the `ip route-import tag` command.

In Dell EMC Networking OS, you can configure one `route-export` per VRF as you can only expose one set of routes for leaking. However, you can configure multiple `route-import` targets because a VRF can accept routes from multiple VRFs.

You can expose a unique set of routes from the source VRF for leaking to other VRFs. When two VRFs leak or export routes, there is no option to discretely filter leaked routes from each source VRF. For example, you cannot import one set of routes from one VRF and another set of routes from another VRF.

Only active routes are eligible for leaking. For example, if one VRF has two routes corresponding to BGP and OSPF, in which the BGP route is not active, the OSPF route takes precedence over BGP. Even though the target VRF has specified filtering options to match BGP, the BGP route is not leaked as that route is not active in the Source VRF.

Related Commands

- [ip route-import](#) — imports routes from another VRF.

ip route-import

Imports IPv4 routes that another VRF leaks using the VRF tag during the export of these routes.

Syntax `ip route-import tag [route-map-name]`

Parameters

route-import	Enter the keywords <code>route-import</code> to import routes into the VRF.
tag	Enter a tag (ASN number) to specify an import route target for importing routes from another VRF. To import leaked routes from another VRF, use the same ASN number that is specified as the export route target at the source VRF.
route-map-name	Enter the name of the route-map to filter the imported routes.

NOTE: Use the `route-map` attribute while importing routes from the global RTM. Route-maps allow you to filter routes at the import end based on the matching criteria that you define in the route-map.

- Command Modes**
- CONFIGURATION
 - VRF mode

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information

It is possible to configure multiple import conditions per VRF depending on the exporting VRF.

The export-target and import-target support only the match protocol and match prefix-list options. Other options that are configured in the route-maps are ignored.

Related Commands

- [ip route-export](#) – exports routes to another VRF.

ipv6 route-export

Enables route leaking between VRFs. This command exports or shares IPv6 routes corresponding to one VRF with other nondefault VRFs.

Syntax `ipv6 route-export tag [route-map-name]`

Parameters

route-export	Enter the keywords route-export to leak or share routes between VRFs.
tag	Enter a tag (ASN number) as the export route target to expose routes to other VRFs. This tag acts as an identifier for exported routes. Use this identifier while importing these routes into another nondefault VRF.
route-map-name	(Optional) Enter the name of the route-map to filter the exported routes. You can leak global routes to be made available to VRFs. As the global RTM usually contains a large pool of routes, when the destination VRF imports global routes, these routes are duplicated into the VRF's RTM. It is mandatory to use route-maps to filter out leaked routes while sharing global routes with VRFs.

Defaults N/A

- Command Modes**
- VRF mode
 - CONFIGURATION mode

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information

To export all the routes corresponding to a source VRF, use the `ip route-export tag` command without specifying the route-map attribute. This action exposes source VRF routes to other VRFs, which then import these routes using the `ip route-import tag` command.

In Dell EMC Networking OS, you can configure one route-export per VRF as you can only expose one set of routes for leaking. However, you can configure multiple route-import targets because a VRF can accept routes from multiple VRFs.

You can expose a unique set of routes from the source VRF for leaking to other VRFs. When two VRFs leak or export routes, there is no option to discretely filter leaked routes from each source VRF. For example, you cannot import one set of routes from one VRF and another set of routes from another VRF.

Only active routes are eligible for leaking. For example, if one VRF has two routes corresponding to BGP and OSPF, in which the BGP route is not active, the OSPF route takes precedence over BGP. Even though the target VRF has specified filtering options to match BGP, the BGP route is not leaked as that route is not active in the source VRF.

Related Commands

- [ipv6 route-import](#) – imports IPv6 routes from another VRF.

ipv6 route-import

Imports IPv6 routes that another VRF leaks using the tag that VRF specifies during export of these routes.

Syntax `ipv6 route-import tag [route-map-name]`

Parameters

route-import Enter the keywords `route-import` to import IPv6 routes into the VRF.

tag Enter a tag (ASN number) to specify an import route target for importing routes from another VRF. To import leaked routes from another VRF, use the same ASN number that is specified as the export route target at the source VRF.

route-map-name Enter the name of the route-map to filter the imported routes.

 **NOTE:** Use the route-map attribute while importing routes from the global RTM. Route-maps allow you to filter routes at the import end based on the matching criteria that you define in the route-map.

Defaults N/A

- Command Modes**
- VRF mode
 - CONFIGURATION mode

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information

It is possible to configure multiple import conditions per VRF depending on the exporting VRF.

The export-target and import-target support only the match the protocol and prefix-list options. Other options that you configure in the route-maps are ignored.

Related Commands

- [ipv6 route-export](#) — exports IPv6 routes to another VRF.

match source-protocol

Specify matching source-protocol criteria while exporting or importing routes.

Syntax `match source-protocol {bgp | isis | ospf | connected | static}`

Parameters	bgp	Enter the keyword <code>bgp</code> to leak or share routes corresponding to the BGP protocol.
	isis	Enter the keyword <code>isis</code> to leak or share routes corresponding to the ISIS protocol.
	ospf	Enter the keyword <code>ospf</code> to leak or share routes corresponding to the OSPF protocol.
	connected	Enter the keyword <code>connected</code> to leak or share connected routes corresponding to the VRF.
	static	Enter the keyword <code>static</code> to leak or share static routes corresponding to the VRF.

Command Modes ROUTE MAP MODE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Usage Information Specify the matching criteria only after defining a route-map. Before using this command, you must enter Route Map mode using the `route-map route-map-name` command. The match criteria that you specify is associated with the route-map that you define.

The export-target and import-target options support only the match protocol and match prefix-list options. Other options that you configure in the route-maps are ignored.

Related Commands

- [ipv6 route-import](#) – imports IPv6 routes from another VRF.

redistribute

Redistributes leaked or exported routes corresponding to specific protocols.

Syntax `redistribute {imported-bgp | import-ospf | import-isis}`

Parameters	imported-bgp	Enter the keywords <code>imported-bgp</code> to redistribute leaked routes that are learned using the BGP protocol.
	imported-ospf	Enter the keywords <code>imported-ospf</code> to redistribute leaked routes that are learned using the OSPF protocol.
	imported-isis	Enter the keywords <code>imported-isis</code> to redistribute leaked routes that are learned using the ISIS protocol.

route-map Enter the name of the route-map to specify the filtering criteria for imported routes.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Related Commands

- [ip route-import](#) — import routes from another VRF.

interface management

Associates a management port with a management VRF.

Syntax `interface management`

To delete the association between a management port and a management VRF, use the `no interface management` command.

Command Modes VRF MODE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Usage Information When you use this command, the management ports corresponding to both the active unit and the standby unit are associated with the management VRF.

maximum dynamic-routes

Specify the maximum number of dynamic (protocol) routes a VRF can have.

Syntax	<code>maximum dynamic-routes limit {warn-threshold threshold-value warning-only}</code> To remove the limit on the maximum number of routes used, use the <code>no maximum dynamic-routes</code> command.						
Parameters	<table><tr><td>limit</td><td>Maximum number of routes allowed in a VRF. The valid range is from 1 to 16,000 (or maximum allowable for that platform if a smaller value).</td></tr><tr><td>warning-threshold</td><td>The warning threshold value is a percentage of the limit value. When the number of routes reaches the specified percentage of the limit, a warning message appears. The valid range is from 1 to 100. After the limit is reached, additional dynamic routes are not allowed.</td></tr><tr><td>warning-only</td><td>When you use the <code>warning-only</code> option, when the maximum number of dynamic routes reaches the limit, a warning message appears. After the limit is reached, additional dynamic routes are still allowed.</td></tr></table>	limit	Maximum number of routes allowed in a VRF. The valid range is from 1 to 16,000 (or maximum allowable for that platform if a smaller value).	warning-threshold	The warning threshold value is a percentage of the limit value. When the number of routes reaches the specified percentage of the limit, a warning message appears. The valid range is from 1 to 100. After the limit is reached, additional dynamic routes are not allowed.	warning-only	When you use the <code>warning-only</code> option, when the maximum number of dynamic routes reaches the limit, a warning message appears. After the limit is reached, additional dynamic routes are still allowed.
limit	Maximum number of routes allowed in a VRF. The valid range is from 1 to 16,000 (or maximum allowable for that platform if a smaller value).						
warning-threshold	The warning threshold value is a percentage of the limit value. When the number of routes reaches the specified percentage of the limit, a warning message appears. The valid range is from 1 to 100. After the limit is reached, additional dynamic routes are not allowed.						
warning-only	When you use the <code>warning-only</code> option, when the maximum number of dynamic routes reaches the limit, a warning message appears. After the limit is reached, additional dynamic routes are still allowed.						

Defaults No limit is set on the maximum number of dynamic routes for a VRF.

Command Modes CONFIGURATION-VRF

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.4(0.0)	Introduced on the S-Series.

Usage Information If you do not specify the maximum route limit for a VRF, the VRF has unlimited space that extends to the maximum number of entries allowed for the system.

show ip vrf

Displays information corresponding to the VRFs that you configure in the system.

Syntax	<code>show ip [vrf vrf-name]</code>		
Parameters	<table><tr><td>vrf vrf-name</td><td>Enter the keyword <code>vrf</code> then the name of the VRF to display information corresponding to that VRF.</td></tr></table>	vrf vrf-name	Enter the keyword <code>vrf</code> then the name of the VRF to display information corresponding to that VRF.
vrf vrf-name	Enter the keyword <code>vrf</code> then the name of the VRF to display information corresponding to that VRF.		
Command Modes	<ul style="list-style-type: none">EXECEXEC Privilege		

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Introduced on the Z9500.
9.4.(0.0)	Introduced on the S-Series and Z9000.

Example

```
DelleMC# show ip vrf
VRF-Name          VRF-ID Interfaces
-----
fault              0      Te 0/0-13,18-47,
                  Fo 0/48,52,56,60,
                  Ma 0/0,
                  Ma 1/0,
                  Ma 2/0,
                  Ma 3/0,
                  Ma 4/0,
                  Ma 5/0,
                  Ma 6/0,
                  Ma 7/0,
                  Ma 8/0,
                  Ma 9/0,
                  Ma 10/0,
                  Ma 11/0,
Nu 0,
                  Vl 1
test1              1      Te 0/14,16-17
test2              2      Te 0/15
management        64

DelleMC# show ip vrf test1
VRF-Name          VRF-ID Interfaces
-----
test1              1      Te 0/14,16-17
```

show run vrf

Displays configuration information corresponding to all the VRFs in the system.

Syntax `show run vrf vrf-name`

Parameters `vrf vrf-name` Enter the keyword `vrf` and then the name of the VRF.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON and Z9500.
9.4(0.0)	Introduced on the S-Series and Z9000.

Usage Information

This command displays information from the running-config corresponding to either a specific VRF or all the VRFs in the system.

Example

```
DellEMC# show run vrf test3
!
ip vrf test3
  description "Banking Customer Chennai"
DellEMC#
```

VLT Proxy Gateway

The virtual link trucking (VLT) proxy gateway feature allows a VLT domain to locally terminate and route L3 packets that are destined to a Layer 3 (L3) end point in another VLT domain. Enable the VLT proxy gateway using the link layer discover protocol (LLDP) method or the static configuration. For more information, see the *Command Line Reference Guide*.

Topics:

- [proxy-gateway lldp](#)
- [proxy-gateway static](#)
- [remote-mac-address exclude-vlan](#)
- [peer-domain-link port-channel exclude-vlan](#)
- [proxy-gateway peer-timeout](#)
- [vlt-peer-mac transmit](#)
- [show vlt-proxy-gateway](#)

proxy-gateway lldp

Enables the proxy-gateway feature using the LLDP protocol.

Syntax [no] proxy-gateway lldp

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information The configuration is cached and sent to LLDP only in one of the following conditions:

1. The port-channel connecting the two VLT domains, across the DC, is a VLT LAG.
2. The `protocol lldp` command is globally enabled.
3. The proxy-gateway LLDP configuration is applied.

Example

```
DellEMC(conf)# vlt-domain 1
DellEMC(conf-vlt-domain)# proxy-gateway lldp
DellEMC(conf-vlt-domain)#
```

proxy-gateway static

Enables the proxy-gateway feature using static configurations.

Syntax [no] proxy-gateway static

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, Z9000.

Usage Information When you add a proxy-gateway static configuration, the setting is saved in the Layer 2 module. When you remove the static proxy gateway configuration, each proxy-gateway static MAC configured is deleted from the Layer 2 module.

Example

```
DellEMC(conf)# vlt-domain 1
DellEMC(conf-vlt-domain)# proxy-gateway static
DellEMC(conf-vlt-domain)#
```

remote-mac-address exclude-vlan

Configure the proxy-gateway static entry and exclude a VLAN or a range of VLANs from proxy routing.

Syntax [no] remote-mac-address mac-address [exclude-vlan vlan-range]

Parameters **remote-mac-address** Specify the mac-addresses of the VLT peers which are in the remote VLT domain.

mac-address Enter the 48-bit hexadecimal address in nn:nn:nn:nn:nn:nn format.

vlan-range Enter the VLAN IDs in which proxy gateway is not needed. The VLANs are excluded from doing proxy gateway. The value can be a single VLAN ID, comma-separated VLAN IDs, a range of VLAN IDs, or a combination. For example:

Comma-separated: 3, 4, 6

Range: 5-10

Combination: 3, 4, 5-10, 8

Command Modes VLT DOMAIN PROXY GW STATIC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information

You can configure the MAC address of a VLT peer in a remote VLT domain to associate with the static VLT proxy gateway and exclude a VLAN, or a range of VLANs, from proxy routing.

Example

```
DellEMC(conf)# vlt-domain 1
DellEMC(conf-vlt-domain#proxy-gateway static
DellEMC(conf-vlt-domain-proxy-gw-static)# remote-mac-address
00:01:e8:06:95:ac exclude-vlan 3
DellEMC(conf-vlt-domain-proxy-gw-static)#
```

peer-domain-link port-channel exclude-vlan

Configure the VLT port channel, which is connected to the remote VLT domain, for the proxy gateway or configure the VLANs you want to exclude from VLT proxy gateway.

Syntax [no] peer-domain-link port-channel *interface-identifier* exclude-vlan *vlan-range*

Parameters

port-channel	Configure the proxy-gateway interface port-channel.
interface-identifier	Enter the interface type.
vlan-range	Enter the VLAN IDs that you want to exclude from the proxy gateway. The value can be a single VLAN ID, comma-separated VLAN IDs, a range of VLAN IDs, or a combination. For example: Comma-separated: 3, 4, 6 Range: 5-10 Combination: 3, 4, 5-10, 8

Command Modes VLT DOMAIN PROXY GW LLDP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information

You must configure the VLT port channel interface which is connecting to the remote VLT domain as peer-domain-link. You can also configure the VLANs you want to exclude from the VLT proxy gateway.

Example

```
DellEMC(conf)#vlt-domain 1
DellEMC(conf-vlt-domain)#proxy-gateway lldp
DellEMC(conf-vlt-domain-proxy-gw-lldp)#peer-domain-link port-channel 20
exclude-vlan 3
```

proxy-gateway peer-timeout

Enables the VLT node to timeout the transmission of the peer MAC address when the VLT peer is down.

Syntax

[no] peer-timeout *value*

Parameters

value Enter the timeout value (in seconds). The range is from 1 to 65535. The default is **infinity**.

Default

Infinity

Command Modes

VLT DOMAIN PROXY GW LLDP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Removed the default value on the S-Series and Z-Series.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, Z9000, and MXL Switch.

Usage Information

When a VLT peer goes down, the local VLT node stops sending its peer's MAC address. If you configure this timeout, the local VLT node sends its peer's MAC address until the timer expires.

Use this timer when you enable `vlt-peer-mac transmit`. A typical use example is a square VLT topology with a single link connecting to the remote peers.

Example

```
DellEMC(conf-vlt-domain-proxy-gw-lldp)# peer-timeout 5
```

vlt-peer-mac transmit

Enables the device to transmit the peer MAC address along with its own MAC address in LLDP TLV packets to the remote VLT domain.

Syntax [no] vlt-peer-mac transmit

Command Modes VLT DOMAIN PROXY GW LLDP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information This command enables the device to transmit its VLT peer MAC address along with its own MAC address to the remote VLT domain. By default, a node sends only its own MAC address to the remote VLT domain.

This configuration is applicable only for an LLDP proxy gateway. A typical use example is a square VLT topology with single link connecting to the remote peers.

Example

```
DellEMC(conf-vlt-domain-proxy-gw-lldp)# vlt-peer-mac transmit
```

show vlt-proxy-gateway

Displays the VLT proxy gateway configuration.

Syntax show vlt-proxy-gateway [info] {lldp | static}

Parameters

lldp	Enter the keyword <code>lldp</code> to display details about the LLDP VLT proxy gateway configuration.
static	Enter the keyword <code>static</code> to display details about the static VLT proxy gateway configuration.

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.

Version	Description
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4(0.0)	Introduced on the S4810, S4820T, S6000, and Z9000.

Usage Information

The proxy-gateway feature may go operationally down for any of the following reasons:

- LLDP is globally disabled.
- LDP is disabled per port.
- VLT port-channel is down.
- LLDP neighbor is down.

If any of these conditions is true, the proxy-gateway feature could be operationally down. If so, it is shown in the `show` command output.

When more than one VLT port-channel terminates on the same ToR, the `show vlt proxy-gateway info lldp` command output may show the port-channel ID incorrectly.

Example

```
DellEMC#show vlt proxy-gateway
VLT Proxy Gateway Brief
-----
Config Mode:                LLDP
Global LLDP Config Status:  Enabled
peer-mac-transmit Status:   Disabled

DellEMC#show vlt proxy-gateway info static
Mac Address                Exclude Vlan
-----
00:01:e8:8a:e8:f7         3,7-8
00:01:e8:8b:1c:c0         3,7-8

DellEMC#show vlt proxy-gateway info lldp
LagId Mac Address          Exclude Vlan
-----
Po 55 00:01:e8:8a:e8:f7 3,7-8 << Macs learnt via port-channel 55
Po 55 00:01:e8:8b:1c:c0 3,7-8
```

Virtual Link Trunking (VLT)

Virtual link trunking (VLT) allows physical links between two chassis to appear as a single virtual link to the network core. VLT eliminates the requirement for Spanning Tree protocols by allowing link aggregation group (LAG) terminations on two separate distribution or core switches, and by supporting a loop-free topology.

VLT provides Layer 2 multipathing, creating redundancy through increased bandwidth and enabling multiple parallel paths between nodes and load-balancing traffic where alternative paths exist.

i NOTE: When you launch the VLT link, the VLT peer-ship is not established if any of the following is **TRUE**:

- The VLT System-MAC configured on both the VLT peers do not match.
- The VLT Unit-Id configured on both the VLT peers are identical.
- The VLT System-MAC or Unit-Id is configured only on one of the VLT peers.
- The VLT domain ID is not the same on both peers.

If the VLT peer-ship is already established, changing the System-MAC or Unit-Id does not cause VLT peer-ship to go down.

Also, if the VLT peer-ship is already established and the VLT Unit-Id or System-MAC are configured on both peers, then changing the CLI configurations on the VLT Unit-Id or System-MAC is rejected if any of the following become **TRUE**:

- After making the CLI configuration change, the VLT Unit-Id becomes identical on both peers.
- After making the CLI configuration change, the VLT System-MAC do not match on both peers.

When the VLT peer-ship is already established, you can remove the VLT Unit-Id or System-MAC configuration from either or both peers. However, removing configuration settings can cause the VLT ports to go down if you configure the Unit-Id or System-MAC on only one of the VLT peers.

Topics:

- [back-up destination](#)
- [clear vlt statistics](#)
- [delay-restore](#)
- [delay-restore abort-threshold](#)
- [lACP ungroup member-independent](#)
- [multicast peer-routing timeout](#)
- [peer-link port-channel](#)
- [peer-routing](#)
- [peer-routing-timeout](#)
- [primary-priority](#)
- [show vlt brief](#)
- [show vlt backup-link](#)
- [show vlt counters](#)
- [show vlt detail](#)
- [show vlt inconsistency](#)
- [show vlt role](#)
- [show vlt statistics](#)
- [show vlt mismatch](#)
- [show vlt statistics igmp-snoop](#)
- [system-mac](#)
- [unit-id](#)
- [vlt domain](#)
- [vlt-peer-lag port-channel](#)

back-up destination

Configure the IPv4 or IPv6 address of the management interface on the remote VLT peer used as the VLT backup link endpoint for sending out-of-band (OOB) hello messages.

Syntax	<code>back-up destination {[ipv4-address] [ipv6 ipv6-address] [interval seconds]}</code>	
Parameters	ipv4-address	Enter the IPv4 address of the backup destination.
	ipv6	Enter the keyword <code>ipv6</code> then an IPv6 address in the X:X:X::X format.
	interval seconds	Enter the keyword <code>interval</code> to specify the time interval to send hello messages. The range is from 1 to 5 seconds. The default is 1 second.
Defaults	1 second	
Command Modes	VLT DOMAIN	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.2(0.2)	Added support for IPv6.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

clear vlt statistics

Clear the VLT operation statistics.

Syntax	<code>clear vlt statistics [arp domain igmp-snoop mac multicast ndp]</code>	
Parameters	domain	Clear the VLT statistics for the domain.
	multicast	Clear the VLT statistics for multicast.
	mac	Clear the VLT statistics for the MAC address.
	arp	Clear the VLT statistics for ARP.
	igmp-snoop	Clear the VLT statistics for IGMP snooping.

ndp Clear the VLT statistics for NDP.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.2(0.2)	Added <code>multicast</code> and <code>ndp</code> parameters.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
VLT ARP Statistics
-----
ARP Tunnel Pkts sent:0
ARP Tunnel Pkts Rcvd:0
ARP-sync Pkts Sent:0
ARP-sync Pkts Rcvd:0
ARP Reg Request sent:19
ARP Reg Request rcvd:10
```

Related Commands

- [show vlt statistics](#) — displays statistics on VLT operations.

delay-restore

Configure the delay in bringing up VLT ports after reload or peer-link restoration between the VLT peer switches.

Syntax `delay-restore`

Parameters **delay-restore** Enter the amount of time, in seconds, to delay bringing up the VLT ports after the VLTi device reloads or after the peer-link restores between VLT peer switches. The range from 1 to 1200. The default is **90 seconds**.

Defaults Not configured.

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S8420T.
8.3.12.0	Introduced on the S4810.

Usage Information

To delay the system from bringing up the VLT port for a brief period to allow IGMP snooping and Layer 3 routing protocols to converge, use the `delay-restore` command. Use this command:

- after a VLT device reloads.
- if the peer VLT device was up at the time the VLTi link failed.
- [show vlt statistics](#) — displays statistics on VLT operations.

Related Commands

delay-restore abort-threshold

Increase the boot up timer to a value greater than 60 seconds.

Syntax `delay-restore abort-threshold <interval>`

To remove the boot up timer value, use the `no delay-restore abort-threshold` command.

Parameters *interval* Enter the interval value (in seconds) for the delay restore timer to abort. The range is from 1 to 1800 seconds. The default is **60 seconds**.

This delay restore timer applies only during reload/boot-up and not in other scenarios (for example, during ICL flap).

Defaults 60 seconds

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S4820T, S4810, S6000, S5000, Z9000, S6000-ON and Z9500.

Usage Information

To abort the VLT delay restore timer value as the maximum threshold, during reload, apply the maximum time interval to the hold-down ICL peer-up in the start-up configurations.

lACP ungroup member-independent

Prevent possible loop during the VLT peer switch bootup or on a device that accesses the VLT domain.

Syntax `lACP ungroup member-independent {vlt | port-channel}`

Parameters

vlt	Force all VLT LACP members to become switchports.
port-channel	Force all LACP port-channel members to become switchports.

Defaults Not configured.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Added port-channel parameter on the S4810.
8.3.8.0	Introduced on the S4810.

Usage Information

LACP on the VLT ports (on a VLT switch or access device), which are members of the VLT, are not brought up until the VLT domain is recognized on the access device.

During boot-up in a stacking configuration, the system must be able to reach the DHCP server with the boot image and configuration image. To receive an offer on static LAGs between switches, only untagged DHCP requests are sent to the DHCP server. Configure the DHCP server to start in BMP mode.

If the switches are connected using LACP port-channels (for example, the VLT peer and top of rack [ToR]), use the `port-channel` option on the ToR-side configuration to allow member ports of an

ungrouped LACP port-channel to inherit VLAN membership of that port channel. This ensures untagged VLT peer device packets reach the DHCP server on the ToR.

To ungroup the VLT and port-channel configurations, use the `no lacp ungroup member independent` command on a VLT port channel.

If you reboot both VLT peers in BMP mode with static VLT LAGs, the DHCP server reply to the DHCP discover offer may not be forwarded by the ToR to the correct node. To avoid this issue, configure the VLT LAGs to the ToR and the ToR port channel to the VLT peers with LACP.

If supported by the ToR, enable the `lacp-ungroup` feature on the ToR using the `lacp ungroup member-independent port-channel` command.

If the `lacp-ungroup` feature is not supported on the ToR, reboot the VLT peers one at a time. After rebooting, verify that VLTi (ICL) is active before attempting DHCP connectivity.

Use the `lacp ungroup member-independent` command only if the system connects to nodes using bare metal provisioning (BMP) to upgrade or boot from the network. Otherwise, when the member links flap, the links become independent switch ports and forward the traffic even before LACP is formed on that port.

Ensure that you configure all port channels as hybrid ports and as untagged members of a VLAN where the LACP ungroup option is applicable.

BMP uses untagged dynamic host configuration protocol (DHCP) packets to communicate with the DHCP server.

To disable this feature on VLT and port channels, use `no lacp ungroup member-independent {vlt | port-channel}` command under the configuration mode.

Example

```
DellEMC(conf)#lacp ungroup member-independent ?
port-channel      LACP port-channel members become switchports
vlt                All VLT LACP members become
switchports
```

multicast peer-routing timeout

To retain synced multicast routes or synced multicast outgoing interface (OIF) after a VLT peer node failure, configure the timeout value for a VLT node.

Syntax `multicast peer-routing timeout value`

To restore the default value, use the `no multicast peer-routing timeout` command.

Parameters **value** Enter the timeout value (in seconds). The range is from 1 to 1200. The default is 150.

Command Modes VLT DOMAIN (conf-vlt-domain)

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.

Version	Description
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.0.2.0	Introduced on the S6000.

peer-link port-channel

Configure the specified port channel as the chassis interconnect trunk between VLT peers in the domain.

Syntax	<code>peer-link port-channel port-channel-number {peer-down-vlan vlan id}</code>	
Parameters	port-channel-number	Enter the port-channel number that acts as the interconnect trunk. The range is from 1 to 128.
	peer-down-vlan vlan id	Enter the keywords <code>peer-down-vlan</code> then a VLAN ID to configure the VLAN that the VLT peer link uses when the VLT peer is down.
Defaults	Not configured.	
Command Modes	VLT DOMAIN	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Added support for the <code>peer-down-vlan</code> option.
8.3.8.0	Introduced on the S4810.

Usage Information	To configure the VLAN from where the VLT peer forwards packets received over the VLTi from an adjacent VLT peer that is down, use the <code>peer-down-vlan</code> option. When a VLT peer with bare metal provisioning (BMP) is booting up, it sends untagged DHCP discover packets to its peer over the VLTi. To ensure that the DHCP discover packets are forwarded to the VLAN that has the DHCP server, use this configuration.
--------------------------	---

peer-routing

Enable Layer 3 (L3) VLT peer-routing. This command is applicable for both IPv6 and IPv4 interfaces.

Syntax	<code>peer-routing</code> To disable L3 VLT peer-routing, use the <code>no peer-routing</code> command.
Defaults	Disabled.
Command Modes	VLT DOMAIN (conf-vlt-domain)
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added the support for IPV6 / IPV4.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.

peer-routing-timeout

Configure the delay after which peer routing disables when the peer is unavailable. This command is applicable for both IPv6 and IPv4.

Syntax	<code>peer-routing-timeout value</code> To restore the default value, use the <code>no peer-routing-timeout</code> command.
Parameters	value Enter the timeout value (in seconds). The range is from 1 to 65535. The default value is infinity .
Command Modes	VLT DOMAIN (conf-vlt-domain)
Default	Infinity
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.

Version	Description
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Added support for default value on the S-Series and Z-Series.
9.5(0.1)	Introduced on the Z9500.
9.4(0.0)	Added the support for IPV6 / IPV4.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.0.2.0	Introduced on the S6000.

Usage Information

When the timer expires, the software checks to see if the VLT peer is available. If the VLT peer is not available, peer-routing disables on that peer.

If you do not configure this delay value, peer-routing is not disabled even when the peer is unavailable.

primary-priority

Assign the priority for master election among VLT peers.

Syntax [no] primary-priority

Parameters *value* To configure the primary role on a VLT peer, enter a lower value than the priority value of the remote peer. The range is from 1 to 65535. The default value is **32768**.

Default 32768

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information

After you configure a VLT domain on each peer switch and connect (cable) the two VLT peers on each side of the VLT interconnect, the system elects a primary and secondary VLT peer device. To configure

the primary and secondary roles before the election process, use the `primary-priority` command. Enter a lower value on the primary peer and a higher value on the secondary peer.

If the primary peer fails, the secondary peer (with the higher priority) takes the primary role. If the primary peer (with the lower priority) later comes back online, it is assigned the secondary role (there is no preemption).

show vlt brief

Displays summarized status information about VLT domains configured on the switch.

Syntax `show vlt brief`

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information The version shown in the `show vlt brief` output command displays the VLT version number which is different from the Dell EMC Networking OS version number. VLT version numbers begin with odd numbers.

Example (Brief)

```
DellEMC#show vlt brief
VLT Domain Brief
-----
Domain ID                : 1
Role                     : Secondary
Role Priority             : 32768
ICL Link Status          : Up
HeartBeat Status         : Up
VLT Peer Status          : Up
Version                  : 6(3)
Local System MAC address : 00:01:e8:8a:e9:91
Remote System MAC address : 00:01:e8:8a:e9:76
Remote system version    : 6(3)
Delay-Restore timer      : 90 seconds
Delay-Restore Abort Threshold : 60 seconds
Peer-Routing             : Disabled
Peer-Routing-Timeout timer : 0 seconds
```

```
Multicast peer-routing timeout: 150 seconds
DellEMC#
```

show vlt backup-link

Displays information about the backup link operation.

Syntax show vlt backup-link

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Example

```
Dell_VLTpeer1# show vlt backup-link

VLT Backup Link
-----
Destination:                10.11.200.18
Peer HeartBeat status:      Up
HeartBeat Timer Interval:   1
HeartBeat Timeout:         3
UDP Port:                   34998
HeartBeat Messages Sent:   1026
HeartBeat Messages Received: 1025
```

show vlt counters

Displays counter information.

Syntax show vlt counters [arp| igmp-snoop | interface | mac | ndp]

Parameters

arp	Enter the keyword <code>arp</code> to display the ARP counter information for the VLT.
igmp-snoop	Enter the keywords <code>igmp-snoop</code> to display the igmp-snooping counter information for the VLT.

interface	Enter the keyword <code>interface</code> to display the interface counter information for the VLT.
mac	Enter the keyword <code>mac</code> to display the MAC address counter information for the VLT.
ndp	Enter the keyword <code>ndp</code> to display the VLT counter information for NDP.

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Usage Information If you do not add a parameter such as `arp` or `mac`, the output displays all the counters.

Example

```
DelleMC# show vlt counter
Total VLT counters
-----
L2 Total MAC-Address Count :
IGMP MRouter Vlans count :
IGMP Mcast Groups count :
ARP entries count :
```

Example (igmp-snoop)

```
DelleMC# show vlt counter igmp-snoop
Total IGMP VLT counters
-----
IGMP MRouter Vlans count : 1
IGMP Mcast Groups count : 5
```

Example (igmp-snoop interface port-channel)

```
DelleMC# show vlt counter igmp-snoop interface port-channel 2
VLT Port-ID: 2 IGMP Counter
-----
IGMP MRouter Vlans count : 0
IGMP Mcast Groups count : 5

DelleMC# show vlt counter igmp-snoop interface port-channel 100
VLT Port-ID: 100 IGMP Counter
-----
IGMP MRouter Vlans count : 1
```

```
IGMP Mcast Groups count : 0
Ve
```

Example (NDP and Non-VLT ARP)

```
DellEMC#show vlt counters
Total VLT Counters
-----
L2 Total MAC-Address Count:          2
Total Arp Entries Learnt :           0
Total Arp Entries Synced :           0
Total Non-VLT Arp entries Learnt:    0
Total Non-VLT Arp Entries Synced     0
IGMP MRouter Vlans count :
IGMP Mcast Groups count :
Total VLT Ndp Entries Learnt :       2
Total VLT Ndp Entries Synced :       0
Total Non-VLT Ndp Entries Learnt :   0
Total Non-VLT Ndp Entries Synced :   0
```

show vlt detail

Displays detailed status information about VLT domains configured on the switch.

Syntax show vlt detail

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Example

```
DellEMC# DellEMC(conf-if-vl-100)#show vlt detail
Local LAG Id Peer LAG Id Local Status Peer Status Active VLANs
-----
10          10          UP          UP          100, 200, 300, 400,
```

show vlt inconsistency

Display run-time inconsistencies in the incoming interface (IIF) for spanned multicast routes (mroutes).

Syntax `show vlt inconsistency ip mroute`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.

Example

```
DellEMC#show vlt inconsistency ip mroute
Spanned Multicast Routing IIF Inconsistency

Multicast Route          LocalIIF          PeerIIF
-----
(22.22.22.200, 225.1.1.2) VLAN 5          VLAN 6
(*, 225.1.1.2)          VLAN 15          te 1/5
DellEMC#
```

show vlt role

Displays the VLT peer status, role of the local VLT switch, VLT system MAC address and system priority, and the MAC address and priority of the local VLT device.

Syntax `show vlt role`

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Example

```
Dell_VLTpeer1# show vlt role

VLT Role
-----
VLT Role:                Primary
System MAC address:      00:01:e8:8a:df:bc
System Role Priority:    32768
Local System MAC address: 00:01:e8:8a:df:bc
Local System Role Priority: 32768

Dell_VLTpeer2# show vlt role

VLT Role
-----
VLT Role:                Secondary
System MAC address:      00:01:e8:8a:df:bc
System Role Priority:    32768
Local System MAC address: 00:01:e8:8a:df:e6
Local System Role Priority: 32768
```

show vlt statistics

Displays VLT operations statistics.

Syntax `show vlt statistics [arp | domain | igmp-snoop | mac | multicast | ndp]`

Parameters	
arp	Enter the keyword <code>arp</code> to display the ARP VLT statistics.
domain	Enter the keyword <code>domain</code> to display the domain VLT statistics.
igmp-snoop	Enter the keywords <code>igmp-snoop</code> to display the IGMP snooping VLT statistics.
mac	Enter the keyword <code>mac</code> to display the VLT MAC addresses VLT statistics.
multicast	Enter the keyword <code>multicast</code> to display the multicast VLT statistics.
ndp	Enter the keyword <code>ndp</code> to display the NDP VLT statistics.

Default Not configured.

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Added parameters <code>multicast</code> and <code>ndp</code>
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Added support in the output for ARP, MAC, and IGMP snooping.
8.3.8.0	Introduced on the S4810.

Related Commands

- `clear vlt statistics` — clears the statistics on VLT operations.

Example

 **NOTE:** The following example shows the statistics for all the VLT parameters. If you enter a specific keyword, such as `mac`, only the statistics for that VLT parameter displays.

```
Dell_VLTpeer1# show vlt statistics
VLT Statistics
-----
HeartBeat Messages Sent:      930
HeartBeat Messages Received: 909
ICL Hello's Sent:            927
ICL Hello's Received:        910
Domain Mismatch Errors:      0
Version Mismatch Errors:     0
Config Mismatch Errors:      0

VLT MAC Statistics
-----
L2 Info Pkts sent:6, L2 Mac-sync Pkts Sent:0
L2 Info Pkts Rcvd:3, L2 Mac-sync Pkts Rcvd:2
L2 Reg Request sent:1
L2 Reg Request rcvd:2
L2 Reg Response sent:1
L2 Reg Response rcvd:1

VLT Igmp-Snooping Statistics
-----
IGMP Info Pkts sent:      4
IGMP Info Pkts Rcvd:      1
IGMP Reg Request sent:    1
IGMP Reg Request rcvd:    2
IGMP Reg Response sent:   1
IGMP Reg Response rcvd:   1
IGMP PDU Tunnel Pkt sent: 5
IGMP PDU Tunnel Pkt rcvd: 10
IGMP Tunnel PDUs sent:    10
IGMP Tunnel PDUs rcvd:    19

VLT Multicast Statistics
-----
Info Pkts Sent:           4
```

```

Info Pkts Rcvd:                2
Reg Request Sent:              2
Reg Request Rcvd:              2
Reg Response Sent:             1
Reg Response Rcvd:             0
Route updates sent to Peer:    0
Route updates rcvd from Peer:  0
Route update pkts sent to Peer: 0
Route update pkts rcvd from Peer: 0

VLT NDP Statistics
-----
NDP NA VLT Tunnel Pkts sent:16
NDP NA VLT Tunnel Pkts Rcvd:46
NDP NA Non-VLT Tunnel Pkts sent:0
NDP NA Non-VLT Tunnel Pkts Rcvd:0
Ndp-sync Pkts Sent:144
Ndp-sync Pkts Rcvd:105
Ndp Reg Request sent:25
Ndp Reg Request rcvd:24

```

show vlt mismatch

Display mismatches in VLT parameters.

Syntax `show vlt mismatch`

Command Modes EXEC

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced support for Q-in-Q implementation over VLT on the S-Series and Z-Series. Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.2)	Introduced on the Z9000, S4810, and S4820T.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.

Example

```

DellEMC#show vlt mismatch
Domain
-----
Parameters      Local      Peer
-----
Unit-ID         0          1

Vlan-config
-----

```

```

Vlan-ID          Local Mode  Peer Mode
-----          -
00               --          L3

Vlan IPv4 Multicast Status
-----
Vlan-ID          Local Status  Peer Status
-----          -
4094             Active      Inactive

DellEMC#

```

Example for Q-in-Q implementation over VLT

```

DellEMC#show vlt mismatch
Domain
-----
Parameters      Local      Peer
-----      -
PB for stp      Enabled    Disabled

Vlan-type-config
-----
Codes:: P - Primary, C - Community, I - Isolated, N - Normal vlan, M -
Vlan-stack

Vlan-ID          Local      Peer
-----          -
100              N          M

Port-type-config
-----
Codes:: p - PVLAN Promiscuous port, h - PVLAN Host port, t - PVLAN Trunk
port,
          mt - Vlan-stack trunk port, mu - Vlan-stack access port, n -
Normal port

Vlt Lag          Local      Peer
-----          -
128              mt         mu

Vlan-stack protocol-type
-----

Local            Peer
-----          -
0x4100           0x8100

VLT-VLAN config
-----

Local Lag  Peer Lag  Local VLANs  Peer VLANs
-----
128        128        4094         100

DellEMC#

```

show vlt statistics igmp-snoop

Displays the informational packets and IGMP control PDUs that are exchanged between VLT peer nodes.

Syntax show vlt statistics igmp-snoop

Default Not configured.

Command Modes EXEC

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.12.0	Introduced on the S4810.

Example

```
Dell_VLTpeer1#show vlt statistics igmp-snoop
VLT Igmp-Snooping Statistics
-----
IGMP Info Pkts sent:      4
IGMP Info Pkts Rcvd:     1
IGMP Reg Request sent:   1
IGMP Reg Request rcvd:   2
IGMP Reg Response sent:  1
IGMP Reg Response rcvd:  1
IGMP PDU Tunnel Pkt sent:5
IGMP PDU Tunnel Pkt rcvd:10
IGMP Tunnel PDUs sent:   10
IGMP Tunnel PDUs rcvd:   19
```

system-mac

Reconfigure the default MAC address for the domain.

Syntax `system-mac mac-address`

Parameters `mac-address` Enter the system MAC address for the VLT domain.

Defaults Not configured.

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information

When you create a VLT domain on a switch, the Dell EMC Networking OS automatically creates a VLT-system MAC address used for internal system operations.

To reconfigure the default MAC address for the domain, use the `system-mac` command. The MAC address must be in the `nn:nn:nn:nn:nn:nn` format. Also reconfigure the same MAC address on the VLT peer switch.

unit-id

Configure the default unit ID of a VLT peer switch.

Syntax `unit-id [0 | 1]`

Parameters **0 | 1** Configure the default unit ID of a VLT peer switch. Enter 0 for the first peer. Enter 1 for the second peer.

Defaults Automatically assigned based on the MAC address of each VLT peer. The peer with the lower MAC address is assigned unit 0; the peer with the higher MAC address is assigned unit 1.

Command Modes VLT DOMAIN

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information

When you create a VLT domain on a switch, the Dell EMC Networking OS automatically assigns a unique unit ID (0 or 1) to each peer switch. The unit IDs are used for internal system operations. To explicitly configure the unit ID of a VLT peer, use the `unit-id` command. Configure a different unit ID (0 or 1) on each peer switch.

This command minimizes the time required for the VLT system to determine the unit ID assigned to each peer switch when one peer reboots.

vlt domain

Enable VLT on a switch, configure a VLT domain, and enter VLT-Domain Configuration mode.

Syntax `vlt domain domain-id`

Parameters *domain-id* Enter the domain ID number. Configure the same domain ID on the peer switch. The range of domain IDs is from 1 to 1000.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information The VLT domain ID must be the same between the two VLT devices. If the domain ID is not the same, a syslog message generates and VLT does not launch.

Related Commands

- [show vlt brief](#) — display the delay-restore value.

vlt-peer-lag port-channel

Associate the port channel to the corresponding VLT peer port channel for the VLT connection to an attached device.

Syntax `vlt-peer-lag port-channel id-number`

Parameters *id-number* Enter the respective VLT port-channel number of the peer device. The range is from 1 to 128.

Defaults Not configured.

Command Modes INTERFACE PORT-CHANNEL

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.1)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.
9.2(0.0)	Introduced on the M I/O Aggregator. This command is supported in Programmable-Mux (PMUX) mode only.

Virtual Router Redundancy Protocol (VRRP)

Virtual router redundancy protocol (VRRP) is supported by the Dell EMC Networking OS.

Topics:

- [IPv4 VRRP Commands](#)
- [advertise-interval](#)
- [authentication-type](#)
- [clear counters vrrp](#)
- [debug vrrp](#)
- [description](#)
- [disable](#)
- [hold-time](#)
- [preempt](#)
- [priority](#)
- [show config](#)
- [show vrrp](#)
- [track](#)
- [virtual-address](#)
- [vrrp delay minimum](#)
- [vrrp delay reload](#)
- [vrrp-group](#)
- [IPv6 VRRP Commands](#)
- [clear counters vrrp ipv6](#)
- [debug vrrp ipv6](#)
- [show vrrp ipv6](#)
- [vrrp-ipv6-group](#)

IPv4 VRRP Commands

The following are IPv4 VRRP commands.

advertise-interval

Set the time interval between VRRP advertisements.

Syntax	<code>advertise-interval {seconds centiseconds centiseconds }</code>
	To return to the default settings, use the <code>no advertise-interval</code> command.
Parameters	
	seconds Enter the number of seconds. The range is from 1 to 255. The default is 1 second .
	centiseconds Enter the keyword <code>centiseconds</code> then the number of centiseconds in multiples of 25 centiseconds. The range is 25 to 4075 centiseconds in multiples of 25 centiseconds.
	centiseconds
Defaults	1 second or 100 centiseconds.
Command Modes	INTERFACE-VRRP
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for centiseconds on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

Dell EMC Networking recommends keeping the default setting for this command. If you do change the time interval between VRRP advertisements on one router, change it on all routers.

authentication-type

Enable authentication of VRRP data exchanges.

Syntax

`authentication-type simple [encryption-type] password`

To delete an authentication type and password, use the `no authentication-type` command.

Parameters

- simple** Enter the keyword `simple` to specify simple authentication.
- encryption-type** (OPTIONAL) Enter one of the following:
 - 0 (zero) specifies an unencrypted authentication data follows.
 - 7 (seven) specifies a hidden authentication data follows.
 - `LINE` is the unencrypted (cleartext) authentication data.
- password** Enter a character string up to eight characters long as a password. If you do not enter an encryption-type, the password is stored as clear text.

Defaults

Not configured.

Command Modes

VRRP

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.

Version	Description
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

The system encrypts the password and the `show config` command displays the encrypted text string.

clear counters vrrp

Clear the counters maintained on VRRP operations.

S5000

Syntax `clear counters vrrp [vrrp-id] [ipv6]`

Parameters

- vrrp-id** (OPTIONAL) Enter the number of the VRRP group ID to clear the group's counters. The range is from 1 to 255.
- ipv6** (OPTIONAL) Enter the keyword `ipv6` to clear counters from the IPv6 VRRP group.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.9(0.0)	Added support to clear the interface configurations corresponding to a range of ports.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

- NOTE:** This command also enables you to clear the port configurations corresponding to a range of ports. However, for Open Networking (ON) platforms the notation for specifying port range in the command is different from how you specify in non-ON platforms.
- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to clear the port configurations corresponding to all ports between 1 and 4, specify the port range as `clear counters interfaces interface-type 1/1 - 4`.
 - For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to clear the port configurations corresponding to all ports between 1 and 4, specify the port range as `clear counters interfaces interface-type 1/1/1 - 1/1/4`.

debug vrrp

Enable VRRP debugging.

Syntax `debug vrrp [vrrp-id] {all | bfd | database | interface | ipv6 | packets | state | timer}`

To disable debugging, use the `no debug vrrp [vrrp-id] {all | bfd | database | interface | ipv6 | packets | state | timer}` command.

Parameters

vrrp-id	(OPTIONAL) Enter a number from 1 to 255 as the VRRP group ID.
all	Enter the keyword <code>all</code> to enable debugging of all VRRP groups.
bfd	Enter the keyword <code>bfd</code> to enable debugging of VRRP BFD interactions.
database	Enter the keyword <code>database</code> to enable debugging of configuration changes.
interface	Enter the following keywords and the interface information: <ul style="list-style-type: none"> For Port Channel interface types, enter the keywords <code>port-channel</code> then the number. For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a VLAN interface, enter the keyword <code>vlan</code> then the VLAN ID. The VLAN ID range is from 1 to 4094.
interface	Enter the keyword <code>interface</code> to enable debugging of interface state changes.
ipv6	Enter the keyword <code>ipv6</code> to enable debugging for IPv6.
packets	Enter the keyword <code>packets</code> to enable debugging of VRRP control packets.

state Enter the keyword `state` to enable debugging of VRRP state changes.
timer Enter the keyword `timer` to enable debugging of the VRRP timer.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information If you do not specify an option, debug is active on all interfaces and all VRRP groups.

description

Configure a short text string describing the VRRP group.

Syntax `description text`
To delete a VRRP group description, use the `no description` command.

Parameters **text** Enter a text string up to 80 characters long.

Defaults Not enabled.

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

disable

Disable a VRRP group.

Syntax `disable`
 To re-enable a disabled VRRP group, use the `no disable` command.

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information To enable VRRP traffic, assign an IP address to the VRRP group using the `virtual-address` command and enter `no disable`.

Related Commands

- [virtual-address](#) — specify the IP address of the virtual router.

hold-time

Specify a delay (in seconds) before a switch becomes the MASTER virtual router. By delaying the initialization of the VRRP MASTER, the new switch can stabilize its routing tables.

Syntax `hold-time {seconds | centiseconds centiseconds}`
To return to the default value, use the `no hold-time` command.

Parameters

seconds	Enter the number of seconds. The range is from 0 to 65535. The default is zero (0) seconds .
centiseconds centiseconds	Enter the keyword <code>centiseconds</code> then the number of <i>centiseconds</i> in units of 25 centiseconds. The range is from 0 to 65525 in units of 25 centiseconds.

Defaults **zero (0) seconds or (0) centiseconds**

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.5(0.0)	Added support for centiseconds on the Z9000, S6000, S4820T, S4810, and MXL.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information If a switch is a MASTER and you change the hold timer, disable and re-enable VRRP for the new hold timer value to take effect.

Related Commands

- [disable](#) — disables a VRRP group.

preempt

To preempt or become the MASTER router, configure a BACKUP router with a higher priority value.

Syntax `preempt`

To prohibit preemption, use the `no preempt` command.

Defaults Enabled (that is, a BACKUP router can preempt the MASTER router).

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

priority

Specify a VRRP priority value for the VRRP group. The VRRP protocol uses this value during the MASTER election process.

Syntax `priority priority`

To return to the default value, use the `no priority` command.

Parameters *priority* Enter a number as the priority. Enter 255 only if the router's virtual address is the same as the interface's primary IP address (that is, the router is the OWNER). The range is from 1 to 255. The default is **100**.

Defaults **100**

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.16.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

To guarantee that a VRRP group becomes MASTER, configure the VRRP group's virtual address with same IP address as the interface's primary IP address and change the priority of the VRRP group to 255.

If you set the `priority` command to 255 and the `virtual-address` is not equal to the interface's primary IP address, an error message appears.

show config

View the non-default VRRP configuration.

Syntax `show config [verbose]`

Parameters **verbose** (OPTIONAL) Enter the keyword `verbose` to view all the VRRP group configuration information, including default information.

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Example

```
DellEMC(conf-if-vrid-4)# show config
 vrrp-group 4
  virtual-address 119.192.182.124
 !
DellEMC(conf-if-vrid-4)#
```

show vrrp

View the VRRP groups that are active. If no VRRP groups are active, the Dell EMC Networking OS returns `No Active VRRP group`.

S5000

Syntax

```
show vrrp [vrrp-id][brief][interface type][ipv6][interface type][vrf vrf-name]
```

Parameters

<i>vrrp-id</i>	(OPTIONAL) Enter the virtual router identifier for the VRRP group to view only that group. The range is from 1 to 255.
<i>brief</i>	(OPTIONAL) Enter the keyword <code>brief</code> to view a table of information about the VRRP groups.
<i>interface type</i>	(OPTIONAL) Enter the following keywords and the interface information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a VLAN interface, enter the keyword <code>vlan</code>, and then the VLAN ID. The VLAN ID range is from 1 to 4094.
<i>ipv6</i>	(OPTIONAL) Enter the keyword <code>ipv6</code> to view only VRRP IPv6 groups.
<i>vrf vrf-name</i>	(OPTIONAL) Enter the keyword <code>vrf</code> and then the name of the VRF to view active VRRP groups corresponding to that VRF.

- Command Modes**
- EXEC
 - EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.10(0.0)	Introduced on the S6100–ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100–ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.4.(0.0)	Added support for VRF.
9.2(1.0)	Introduced on the Z9500.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

The following describes the `show vrrp brief` command.

Item	Description
Interface	Lists the interface type, slot, and port of the configured VRRP group.
Grp	Displays the VRRP group ID.
Pri	Displays the priority value assigned to the interface. If you configured the <code>track</code> command to track that interface and you disable the interface, the cost is subtracted from the priority value assigned to the interface.
Pre	States whether preempt is enabled on the interface: <ul style="list-style-type: none"> • Y = Preempt is enabled. • N = Preempt is not enabled.
State	Displays the operational state of the interface using one of the following: <ul style="list-style-type: none"> • NA/IF (the interface is not available). • MASTER (the interface associated with the MASTER router). • BACKUP (the interface associated with the BACKUP router).
Master addr	Displays the IP address of the MASTER router.
Virtual addr(s)	Displays the virtual IP addresses of the VRRP routers associated with the interface.

Example (Brief)

```
DelleMC> Interface Grp Pri Pre State Master addr Virtual addr(s)
Description-----
Te 1/37 1 100 Y Master 200.200.200.200 200.200.200.201
Te 1/37 2 100 Y Master 200.200.200.200 200.200.200.202 200.200.200.203
Description
Te 1/37 3 100 Y Master 1.1.1.1 1.1.1.2
Te 1/37 4 100 Y Master 200.200.200.200 200.200.200.206 200.200.200.207
... short desc
Te 1/37 254 254 Y Master 200.200.200.200 200.200.200.204 200.200.200.205
DelleMC>
```

Usage Information

The following describes the `show vrrp` command.

Item	Description
TenGigabitEthernet 1/3...	Displays the interface, VRRP group ID, and network address. If the interface is not sending VRRP packets, 0.0.0.0 appears as the network address.
State: master...	Displays the interface's state: <ul style="list-style-type: none"> • Na/If (not available) • master (MASTER virtual router) • backup (BACKUP virtual router) Also displays the interface's priority and IP address of the MASTER.
Hold Down:...	Displays additional VRRP configuration information: <ul style="list-style-type: none"> • Hold Down displays the hold down timer interval in seconds. • Preempt displays TRUE if preempt is configured and FALSE if preempt is not configured. • AdvInt displays the Advertise Interval in seconds.
Adv rcvd:...	Displays counters for the following: <ul style="list-style-type: none"> • Adv rcvd displays the number of VRRP advertisements received on the interface. • Adv sent displays the number of VRRP advertisements sent on the interface. • Gratuitous ARP sent displays the number of gratuitous ARPs sent.
Virtual MAC address	Displays the virtual MAC address of the VRRP group.
Virtual IP address	Displays the virtual IP address of the interface's VRRP router.
Authentication:...	States whether authentication is configured for the VRRP group. If it is configured, this lists the authentication type and password.
Tracking states..	Displays if the <code>track</code> command is configured on an interface. Also displays the following information about the tracked interface: <ul style="list-style-type: none"> • Dn or Up states whether the interface is down or up. • The interface type slot/port information.

Example

```
DellEMC> show vrrp
-----
TenGigabitEthernet 1/3, VRID: 1, Net: 10.1.1.253
VRF: 0 default
State: Master, Priority: 105, Master: 10.1.1.253 (local)
Hold Down: 0 sec, Preempt: TRUE, AdvInt: 1 sec
Adv rcvd: 0, Adv sent: 1862, Gratuitous ARP sent: 0
Virtual MAC address:
    00:00:5e:00:01:01
Virtual IP address:
    10.1.1.252
Authentication: (none)
Tracking states for 1 interfaces:
    Up TenGigabitEthernet 1/17 priority-cost 10
-----
TenGigabitEthernet 1/4, VRID: 2, Net: 10.1.2.253
VRF: 0 default
State: Master, Priority: 110, Master: 10.1.2.253 (local)
Hold Down: 10 sec, Preempt: TRUE, AdvInt: 1 sec
Adv rcvd: 0, Adv sent: 1862, Gratuitous ARP sent: 0
Virtual MAC address:
    00:00:5e:00:01:02
Virtual IP address:
    10.1.2.252
Authentication: (none)
Tracking states for 2 interfaces:
    Up TenGigabitEthernet 2/1 priority-cost 10
    Up TenGigabitEthernet 1/17 priority-cost 10
DellEMC>
```

Example (VRRP VRF)

```
DellEMC# show vrrp vrf jay
-----
TenGigE 1/0, IPv4 VRID: 20, Version: 2, Net: 10.0.0.3
VRF: 1 jay
State: Master, Priority: 100, Master: 10.0.0.3 (local)
Hold Down: 0 sec, Preempt: TRUE, AdvInt: 1 sec
Adv rcvd: 0, Bad pkts rcvd: 0, Adv sent: 38, Gratuitous ARP sent: 0
Virtual MAC address:
  00:00:5e:00:01:14
Virtual IP address:
  10.0.0.2
Authentication: (none)
DellEMC# show vrrp vrf jay brief
Interface Group  Pri Pre State  Master addr Virtual addr(s) Description
-----
Te 1/0  IPv4 20  100 Y   Master 10.0.0.3      10.0.0.2
DellEMC#
```

track

Monitor an interface and lower the priority value of the VRRP group on that interface if it is disabled.

Syntax `track interface [priority-cost cost]`

To disable monitoring, use the `no track interface` command.

Parameters

- interface*** (OPTIONAL) Enter the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
 - For a VLAN interface, enter the keyword `vlan`, and then the VLAN ID. The VLAN ID range is from 1 to 4094.
- priority-cost*** (OPTIONAL) Enter a number as the amount to subtract from the priority value. The range is from 1 to 254. The default is **10**.

Defaults priority cost = **10**

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
7.6.1.0	Introduced on the S-Series (S50 only).
7.5.1.0	Introduced on the C-Series.

Version	Description
6.2.1.1	Introduced on the E-Series.

Usage Information

If you disable the interface, the cost value is subtracted from the priority value and forces a new MASTER election if the priority value is lower than the priority value in the BACKUP virtual routers.

virtual-address

Configure up to 12 virtual router IP addresses in the VRRP group. To start sending VRRP packets, set at least one virtual IP address for the VRRP group.

Syntax `virtual-address ip-address1 [... ip-address12]`

To delete one or more virtual IP addresses, use the `no virtual-address ip-address1 [... ip-address12]` command.

Parameters

ip-address1 Enter an IP address of the virtual router in dotted decimal format. The IP address must be on the same subnet as the interface's primary IP address.

... ip-address12 (OPTIONAL) Enter up to 11 additional IP addresses of virtual routers in dotted decimal format. Separate the IP addresses with a space. The IP addresses must be on the same subnet as the interface's primary IP address.

Defaults Not configured.

Command Modes VRRP

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
7.4.1.0	Introduced support for telnetting to the VRRP group IP address assigned using this command.
6.2.1.1	Introduced on the E-Series.

Usage Information

The VRRP group only becomes active and sends VRRP packets when you configure a virtual IP address. When you delete the virtual address, the VRRP group stops sending VRRP packets.

A system message appears after you enter or delete the `virtual-address` command.

To guarantee that a VRRP group becomes MASTER, configure the VRRP group's virtual IP address with the same address as the interface's primary IP address and change the priority of the VRRP group to 255.

You can ping the virtual IP addresses configured in all VRRP groups.

vrrp delay minimum

Set the delay time for VRRP initialization after an interface comes up.

Syntax	<code>vrrp delay minimum <i>seconds</i></code>
Parameters	<i>seconds</i> Enter the number of seconds for the delay for VRRP initialization after an interface becomes operational. The range is from 0 to 900 (0 indicates no delay).
Defaults	0
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information	This command applies to a single interface. When you use this command with the <code>vrrp delay reload</code> command, the later timer rules VRRP enabling. For example, if <code>vrrp delay reload</code> is 600 and <code>vrrp delay minimum</code> is 300: <ul style="list-style-type: none">When the system reloads, VRRP waits 600 seconds (10 minutes) to bring up VRRP on all interfaces that are up and configured for VRRP.When an interface comes up, whether as part of a system reload or an interface reload, the system waits 300 seconds (5 minutes) to bring up VRRP on that interface.
Related Command	<ul style="list-style-type: none">vrrp delay reload — sets the delay time for VRRP initialization after a system reboot.

vrrp delay reload

Set the delay time for VRRP initialization after a system reboot.

Syntax	<code>vrrp delay reload <i>seconds</i></code>
Parameters	<i>seconds</i> Enter the number of seconds for the delay. The frange is from 0 to 900 (0 indicates no delay).
Defaults	0
Command Modes	INTERFACE
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
9.0.0.0	Introduced on the Z9000.
8.3.19.0	Introduced on the S4820T.
8.3.8.0	Introduced on the S4810.

Usage Information

This command applies to all the VRRP interfaces on a system. When you use this command with the `vrrp delay minimum` command, the later timer rules VRRP enabling. For example, if `vrrp delay reload` is 600 and `vrrp delay minimum` is 300:

- When the system reloads, VRRP waits 600 seconds (10 minutes) to bring up VRRP on all interfaces that are up and configured for VRRP.
- When an interface comes up, whether as part of a system reload or an interface reload, the system waits 300 seconds (5 minutes) to bring up VRRP on that interface.

For the delay timers to take effect, save the configuration and reload the system.

Related Command

- [vrrp delay minimum](#) — sets the delay time for VRRP initialization after a line card reboot.

vrrp-group

Assign a VRRP ID to an interface. You can configure up to 12 VRRP groups per interface.

Syntax `vrrp-group vrrp-id`

Parameters `vrrp-id` Enter a number as the group ID. The range is from 1 to 255.

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.

Version	Description
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.6.1.0	Introduced on the S-Series.
7.5.1.0	Introduced on the C-Series.
6.2.1.1	Introduced on the E-Series.

Usage Information

The VRRP group only becomes active and sends VRRP packets when you configure a virtual IP address. When you delete the virtual IP address, the VRRP group stops sending VRRP packets.

Related Command

- [virtual-address](#) — assigns up to 12 virtual IP addresses per VRRP group.

IPv6 VRRP Commands

The following are IPv6 VRRP commands.

- [clear counters vrrp ipv6](#)
- [debug vrrp ipv6](#)
- [show vrrp ipv6](#)
- [vrrp-ipv6-group](#)

The following commands apply to IPv4 and IPv6:

- [advertise-interval](#)
- [description](#)
- [disable](#)
- [hold-time](#)
- [preempt](#)
- [priority](#)
- [show config](#)
- [virtual-address](#)

clear counters vrrp ipv6

Clear the counters recorded for IPv6 VRRP groups.

Syntax `clear counters vrrp ipv6 [vrid | vrf vrf-name]`

Parameters

- vrid** (OPTIONAL) Enter the number of an IPv6 VRRP group; range is from 1 to 255.
- vrf vrf-name** (OPTIONAL) Enter the name of a VRF instance to clear the counters of all IPv6 VRRP groups in the specified VRF. The maximum is 32 characters.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.

Version	Description
9.9(0.0)	Added support to clear the interface configurations corresponding to a range of ports.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.4.1.0	Introduced on E-Series, C-Series, and S-Series. Support was added for IPv6 VRRP groups in nondefault VRF instances.
8.3.2.0	Introduced on the E-Series.

Usage Information

- NOTE:** You can also clear the port configurations corresponding to a range of ports. For Open Networking (ON) platforms, the notation for specifying the port range in the command is different from how you specify the port range in non-ON platforms.
- For non-ON platforms, you can specify multiple ports as `slot/port-range`. For example, if you want to clear the port configurations corresponding to all ports between 1 and 4, specify the port range as `clear counters interfaces interface-type 1/1 - 4`.
 - For ON platforms, you can specify multiple ports as `slot/port/[subport] - slot/port/[subport]`. For example, if you want to clear the port configurations corresponding to all ports between 1 and 4, specify the port range as `clear counters interfaces interface-type 1/1/1 - 1/1/4`.

debug vrrp ipv6

Enable VRRP debugging.

Syntax `debug vrrp ipv6 interface [vrid] {all | packets | state | timer}`

Parameters	
interface	Enter the following keywords and the interface information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a Port Channel interface, enter the keywords <code>port-channel</code>, and then a number. For a VLAN interface, enter the keyword <code>vlan</code>, and then the VLAN ID. The VLAN ID range is from 1 to 4094.
vrid	(OPTIONAL) Enter a number from 1 to 255 as the VRRP group ID.
all	Enter the keyword <code>all</code> to enable debugging of all VRRP groups.
bfd	Enter the keyword <code>bfd</code> to enable debugging of all VRRP BFD interactions.
database	Enter the keyword <code>database</code> to display changes related to group, prefix, and interface entries in the VRRP table.
packets	Enter the keyword <code>packets</code> to enable debugging of VRRP control packets.

state	Enter the keyword <code>state</code> to enable debugging of VRRP state changes.
timer	Enter the keyword <code>timer</code> to enable debugging of the VRRP timer.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.4.1.0	Introduced on E-Series, C-Series, and S-Series. Support was added for IPv6 VRRP groups in nondefault VRF instances.
8.3.2.0	Introduced on the E-Series.

Usage Information If you do not specify an option, debugging is active on all interfaces and all VRRP groups.

show vrrp ipv6

View the active IPv6 VRRP groups. If no VRRP groups are active, the Dell EMC Networking OS returns `No Active VRRP group`.

Syntax `show vrrp ipv6 [vrid] [interface] [brief] [vrf vrf-name]`

Parameters	vrid	(OPTIONAL) Enter the virtual router identifier for the VRRP group to view only that group. The range is from 1 to 255.
	interface	Enter the following keywords and the number information: <ul style="list-style-type: none"> For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information. For a port channel interface, enter the keywords <code>port-channel</code>, and then a number. For a VLAN interface, enter the keyword <code>vlan</code>, and then a number from 1 to 4094.
	brief	(OPTIONAL) Enter the keyword <code>brief</code> to view a table of information on the VRRP groups.
	vrf vrf-name	Enter the keyword <code>vrf</code> then the name of the VRF to view IPv6 VRRP groups corresponding to that VRF.

Command Modes • EXEC

- EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Added support for VRF. Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.3.19.0	Introduced on the S4820T.
8.3.10.0	Introduced on the S4810.
8.3.2.0	Introduced on the E-Series.

Usage Information

The following describes the `show vrrp ipv6` command.

Line starting with	Description
GigabitEthernet.. .	Displays the interface, VRRP group ID, and network address. If the interface is not sending VRRP packets, 0.0.0.0 appears as the network IP address.
VRF	VRF instance to which the VRRP group interface belongs.
State: master...	Displays the interface's state: <ul style="list-style-type: none"> • Na/If (not available) • master (MASTER virtual router) • backup (BACKUP virtual router) Also displays the interface's priority and IP address of the MASTER.
Hold Down:...	Displays additional VRRP configuration information: <ul style="list-style-type: none"> • Hold Down displays the hold down timer interval in seconds. • Preempt displays TRUE if preempt is configured and FALSE if preempt is not configured. • AdvInt displays the Advertise Interval in seconds.
Adv rcvd:...	Displays counters for the following: <ul style="list-style-type: none"> • Adv rcvd displays the number of VRRP advertisements received on the interface. • Adv sent displays the number of VRRP advertisements sent on the interface. • Bad pkts rcvd displays the number of invalid packets received on the interface.
Virtual MAC address	Displays the virtual MAC address of the VRRP group.
Virtual IP address	Displays the virtual IP address of the VRRP router to which the interface is connected.
Tracking states...	Displays information on the tracked interfaces or objects configured for a VRRP group (<code>track</code> command), including: <ul style="list-style-type: none"> • UP or DOWN state of the tracked interface or object (Up or Dn). • Interface type and slot/port or object number, description, and time since the last change in the state of the tracked object.

Line starting with	Description
--------------------	-------------

- Cost subtracted from the VRRP group priority if the state of the tracked interface/object goes DOWN.

Example

```
DellEMC# show vrrp ipv6
-----
TenGigabitEthernet 5/6, IPv6 VRID: 255, Version: 3, Net:
fe80::201:e8ff:fe7a:6bb9
State: Master, Priority: 101, Master: fe80::201:e8ff:fe7a:6bb9 (local)
Hold Down: 0 centisec, Preempt: TRUE, AdvInt: 100 centisec
Accept Mode: FALSE, Master AdvInt: 100 centisec
Adv rcvd: 0, Bad pkts rcvd: 0, Adv sent: 64
Virtual MAC address:
  00:00:5e:00:02:ff
Virtual IP address:
  1::255 fe80::255
```

vrrp-ipv6-group

Assign an interface to a VRRP group.

Syntax `vrrp-ipv6-group vrid`

Parameters `vrid` Enter the virtual-router ID number of the VRRP group. The VRID range is from 1 to 255.

Defaults Not configured.

Command Modes INTERFACE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.2(1.0)	Introduced on the Z9500.
8.4.2.1	The range of valid VRID values on the E-Series when VRF microcode is loaded in CAM changed from 1 to 15.
8.4.1.0	Introduced on the E-Series, C-Series, and S-Series.
8.3.19.0	Introduced on the S4820T.
8.3.7.0	Introduced on the S4810.
8.3.2.0	Introduced on the E-Series.

Usage Information The VRRP group only becomes active and sends VRRP packets when you configure a link-local virtual IP address. When you delete the virtual address, the VRRP group stops sending VRRP packets.

- When you do not load the VRF microcode in the CAM, the VRID for a VRRP group is the same as the VRID number configured with the `vrrp-group` or `vrrp-ipv6-group` commands.
- When you load the VRF microcode in the CAM, the VRID for a VRRP group equals 16 times the `vrrp-group` or `vrrp-ipv6-group vrid` number, plus the `ip vrf vrf-id` number. For example, if you load the VRF microcode and you configure the VRRP group as 10 in VRF 2, the VRID for the VRRP group is $(16 \times 10) + 2$, or 162. This VRID value is used in the lowest byte of the virtual MAC address of the VRRP group and is also used for VRF routing.

 **NOTE:** For all routers to interoperate, configure the same VRID on neighboring routers (Dell EMC Networking or non- Networking) in the same VRRP group.

Related Commands

- [virtual-address](#) — assigns up to 12 virtual IP addresses per VRRP group.

Debugging and Diagnostics

The basic debugging and diagnostic commands are supported by the Dell Networking OS on the S5000 switch.

This chapter contains the following sections:

- [Offline Diagnostic Commands](#)
- [Buffer Tuning Commands](#)
- [Hardware Commands](#)

Topics:

- [Diagnostics and Monitoring Commands](#)
- [Offline Diagnostic Commands](#)
- [diag stack-unit](#)
- [offline stack-unit](#)
- [online stack-unit](#)
- [Buffer Tuning Commands](#)
- [buffer-profile \(Configuration\)](#)
- [show buffer-profile stack-unit](#)
- [Hardware Commands](#)
- [clear hardware stack-unit](#)
- [clear hardware system-flow](#)
- [clear hardware vlan-counters](#)
- [hardware watchdog](#)
- [show hardware mac](#)
- [show hardware ip](#)
- [show hardware stack-unit](#)
- [show hardware buffer interface](#)
- [show hardware buffer-stats-snapshot](#)
- [show hardware counters interface](#)
- [show hardware drops](#)
- [show hardware stack-unit buffer-stats-snapshot \(Total Buffer Information\)](#)
- [show hardware system-flow](#)
- [show hardware vlan-counters](#)

Diagnostics and Monitoring Commands

The following section describes the diagnostics and monitoring commands.

For similar commands, refer to the [Control and Monitoring](#) chapter.

logging coredump stack-unit

Enable coredump on a stack.

Syntax	<code>logging coredump stack-unit {<i>stack-unit-number</i> all}</code>
Parameters	<p><i>stack-unit stack-unit-number</i> Enter the stack-unit id to enable coredump in a particular stack-unit.</p> <p>all Enable coredump on all stack-unit.</p>
Defaults	Enabled.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S6100-ON and the S3148.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Usage Information The Kernel core dump can be large and may take up to 5 to 30 minutes to upload. Dell EMC Networking OS does not overwrite application core dumps so you should delete them as necessary to conserve space on the flash; if the flash is out of memory, the coredump is aborted. On the S-Series, if the FTP server is not reachable, the application coredump is aborted. Dell EMC Networking OS completes the coredump process and wait until the upload is complete before rebooting the system.

Offline Diagnostic Commands

The offline diagnostics test suite is useful for isolating faults and debugging hardware. While tests are running, Dell EMC Networking OS results are saved as a text file (TestReport-SU-X.txt) in the flash directory. This `show file` command is available only on master and standby.

Important Points to Remember

- Offline diagnostics can only be run when the unit is offline.
- You can only run offline diagnostics on a unit to which you are connected via the console. In other words, you cannot run diagnostics on a unit to which you are connected to via a stacking link.
- Diagnostic results are printed to the screen. Dell EMC Networking OS does not write them to memory.
- Diagnostics only test connectivity, not the entire data path.

diag stack-unit

Run offline diagnostics on a stack unit.

Syntax `diag stack-unit number [alllevels | level0 | level1 | level2] verbose testname`

Parameters

<i>number</i>	Enter the stack-unit id.
<i>alllevels</i>	Enter the keyword <code>alllevels</code> to run the complete set of offline diagnostic tests.
<i>level0</i>	Enter the keyword <code>level0</code> to run Level 0 diagnostics. Level 0 diagnostics check for the presence of various components and perform essential path verifications. In addition, they verify the identification registers of the components on the board.

level1	Enter the keyword <code>level1</code> to run Level 1 diagnostics. Level 1 diagnostics is a smaller set of diagnostic tests with support for automatic partitioning. They perform status/self test for all the components on the board and test their registers for appropriate values. In addition, they perform extensive tests on memory devices (for example, SDRAM, flash, NVRAM, EEPROM, and CPLD) wherever possible. There are no tests on 10G links. At this level, stack ports are shut down automatically.
level2	Enter the keyword <code>level2</code> to run Level 2 diagnostics. Level 2 diagnostics are a full set of diagnostic tests with no support for automatic partitioning. Level 2 diagnostics are used primarily for on-board loopback tests and more extensive component diagnostics. Various components on the board are put into Loopback mode and test packets are transmitted through those components. These diagnostics also perform snake tests using VLAN configurations. To test 10G links, physically remove the unit from the stack.
verbose	Enter the keyword <code>verbose</code> to run the diagnostic in Verbose mode. Verbose mode gives more information in the output than Standard mode.
testname	Enter the keyword <code>testname</code> to run a specific test case. Enclose the test case name in double quotes (" "). For example: <code>diag stack-unit 1 level1 testname "first"</code> . You can use this option only for interactive tests.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.3.1.0	Introduced the <code>verbose</code> option.
7.7.1.0	Introduced on the S-Series.

offline stack-unit

Place a stack unit in the offline state.

Syntax `offline stack-unit number`

Parameters *number* Enter the stack-unit id.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
8.2.1.0	Added a warning message to the off-line diagnostic.
7.7.1.0	Introduced on the S-Series.

Usage Information You cannot enter this command on a Master or Standby unit.

The system reboots when the off-line diagnostics complete. This reboot is an automatic process. A warning message appears when the `offline stack-unit` command is implemented.

Warning - Diagnostic execution will cause stack-unit to reboot after completion of diags.

```
Proceed with Offline-Diags [confirm yes/no]:y
```

online stack-unit

Place a stack unit in the online state.

Syntax `online stack-unit number`

Parameters *number* Enter the stack-unit number.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.

Version	Description
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4810.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Usage Information

You cannot enter this command on a Master or Standby unit.

The system reboots when the off-line diagnostics complete. This reboot is an automatic process. A warning message appears when the `offline stack-unit` command is implemented.

Warning - Diagnostic execution will cause stack-unit to reboot after completion of diags.

Proceed with Offline-Diags [confirm yes/no]:y

Buffer Tuning Commands

The following sections detail the buffer tuning commands.

NOTE: Altering the buffer allocations is a sensitive operation. Do not use any buffer tuning commands without first contacting the Dell Networking Technical Assistance Center (TAC).

buffer-profile (Configuration)

Create a buffer profile that can be applied to an interface.

Syntax

```
buffer-profile {fp | csf} profile-name {global {1Q | 4q}}
```

Parameters

fp	Enter the keyword <code>fp</code> to create a buffer profile for the Field Processor.
csf	Enter the keyword <code>csf</code> to create a buffer profile for the Switch Fabric Processor.
profile-name	Create a name for the buffer profile,
global	Apply one of two pre-defined buffer profiles to all of the port-pipes in the system.
1Q	Enter the keyword <code>1Q</code> to choose a pre-defined buffer profile for single queue (for example, non-QoS) applications.
4Q	Enter the keyword <code>4q</code> to choose a pre-defined buffer profile for four queue (for example, QoS) applications.

Defaults

Dynamic

Command Modes

CONFIGURATION

Command History

This guide is platform-specific. For command information about other platforms, refer to the relevant *Dell Networking OS Command Line Reference Guide*.

The following is a list of the Dell Networking OS version history for this command.

Version	Description
9.2(0.2)	Changed the default value from global 4q to Dynamic.

Version	Description
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
7.8.1.0	Added the <code>global</code> keyword.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.
7.6.1.0	Introduced on the C-Series.

Usage Information

The `buffer-profile global` command fails if you have already applied a custom buffer-profile on an interface. Similarly, when you configure `buffer-profile global`, you cannot not apply `buffer-profile` on any interface.

If the default buffer-profile is active, Dell Networking OS displays an error message instructing you to remove the default configuration using the `no buffer-profile global` command.

Reload the system for the global buffer-profile to take effect.

show buffer-profile stack-unit

Display the buffer profile that is applied to a stack-unit.

S5000

Syntax `show buffer-profile stack-unit unit-number`

Parameters

stack-unit unit-number Enter the keyword `stack-unit` followed by the unit number. The range is 0 to 11. If you do not type a unit number, Dell Networking OS displays buffer-profiles for all units.

Defaults none

Command Modes EXEC Privilege

Command History

Version 9.0(1.3) Introduced on the S5000.

Example (single unit)

```
Dell#show buffer-profile stack-unit 0
Stack-Unit  Current Buffer-Profile  Next-Boot Buffer-Profile
-----
0           Default (Dynamic)             Default (Dynamic)
Dell#
```

Related Commands

[buffer-profile \(Configuration\)](#) – creates a buffer profile that can be applied to an interface.

Hardware Commands

These commands display information from a hardware sub-component or ASIC.

clear hardware stack-unit

Clear statistics from selected hardware components.

Syntax `clear hardware stack-unit id {counters | cpu {data-plane statistics | i2c statistics | management statistics | party-bus statistics | sata-interface statistics} | unit number counters | stack-port stack-port-number}`

Parameters	stack-unit id	Enter the keywords <code>stack-unit</code> then a number to select a particular stack member and then enter one of the following command options to clear a specific collection of data.
	counters	Enter the keyword <code>counters</code> to clear the counters on the selected stack member.
	unit number counters	Enter the keyword <code>unit</code> along with a port-pipe number, then the keyword <code>counters</code> to clear the counters on the selected port-pipe. The range is from 0 to 0.
	cpu data-plane statistics	Enter the keywords <code>cpu data-plane statistics</code> to clear the data plane statistics.
	cpu i2c statistics	Enter the keywords <code>cpu i2c statistics</code> to clear the i2c devices statistics.
	cpu party-bus statistics	Enter the keywords <code>cpu party-bus statistics</code> to clear the management statistics.
	cpu sata-interface statistics	Enter the keywords <code>cpu sata-interface statistics</code> to clear the sata interface statistics.
	stack-port	Enter the keywords <code>stack-port</code> then the port number of the stacking port to clear the statistics of the particular stacking port.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Increased the stacking range to 12 units in S3100 series.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.

Version	Description
7.8.1.0	Introduced on the S-Series.

Related Commands

- [show hardware stack-unit](#) — display the data plane or management plane input and output statistics of the designated component of the designated stack member.

clear hardware system-flow

Clear system-flow statistics from selected hardware components.

Syntax `clear hardware system-flow layer2 stack-unit number port-set 0-0 counters`

Parameters

stack-unit <i>number</i>	Enter the keywords <code>stack-unit</code> then a number to select a particular stack member and then enter one of the following command options to clear a specific collection of data.
port-set <i>0-0</i> counters	Enter the keywords <code>port-set</code> along with a port-pipe number, then the keyword <code>counters</code> to clear the system-flow counters on the selected port-pipe. The range is from 0 to 0.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

Related Commands

- [show hardware stack-unit](#) — display the data plane or management plane input and output statistics of the designated component of the designated stack member.

clear hardware vlan-counters

Clear VLAN statistics.

Syntax `clear hardware vlan-counters vlan-id`

Parameters

<i>vlan-id</i>	Enter the interface VLAN number. The range is from 1 to 4094.
-----------------------	---

Defaults	None
Command Modes	EXEC Privilege
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced this command.

hardware watchdog

To trigger a reboot and restart the system, set the watchdog timer.

Syntax	<code>hardware watchdog stack-unit {stack-unit-number all}</code>
Defaults	Enabled.
Command Modes	CONFIGURATION
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

Usage Information	This command enables a hardware watchdog mechanism that automatically reboots an Dell EMC Networking OS switch/ router with a single unresponsive unit. This behavior is a last-resort mechanism intended to prevent a manual power cycle.
--------------------------	--

show hardware mac

Display MAC ACL entries for the specified stack-unit, port-pipe and pipeline ID.

Syntax	<code>show hardware mac {eg-acl in-acl} stack-unit id port-set 0-0</code>	
Parameters	eg-acl in-acl	Enter either the keyword <code>eg-acl</code> or the keyword <code>in-acl</code> to select between ingress or egress ACL data.
	stack-unit id	Enter the keyword <code>stack-unit</code> to select the stack unit ID.
	port-set 0-0	Enter the keywords <code>port-set</code> with a port-pipe number to display the MAC ACL entries for the specified port-pipe number. . The range is from 0 to 0.
Defaults	None	
Command Modes	EXEC Privilege	
Command History	This guide is platform-specific. For command information about other platforms, see the relevant <i>Dell EMC Networking OS Command Line Reference Guide</i> .	

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

Usage Information The unit numbers given are internal port numbers.

show hardware ip

Display ACL or QoS data for the selected stack member and stack member port-pipe.

Syntax	<code>show hardware layer3 {acl qos} stack-unit number port-set 0-0</code>	
Parameters	acl qos	Enter either the keyword <code>acl</code> or the keyword <code>qos</code> to select between ACL or QoS data.
	stack-unit number	Enter the keywords <code>stack-unit</code> then a number to select a stack ID.
	port-set 0-0	Enter the keyword <code>port-set</code> with a port-pipe number. The range is from 0 to 0.
Defaults	None	
Command Modes	EXEC Privilege	

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.0	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

show hardware stack-unit

Display the data plane or management plane input and output statistics of the designated component of the designated stack member.

Syntax

```
stack-unit stack-unit-number {buffer [ unit 0 ] total buffer | buffer unit 0 interface all queue [(0-14) | all] buffer-info}{cpu data-plane statistics | cpu management statistics | drops [unit number] | fpga register | party-bus statistics | stack-port | ti-monitor | unit 0-1 {counters | details | port-stats [detail] | register}}
```

Parameters

stack-unit stack-unit-number {command-option}	Enter the keywords <code>stack-unit</code> to select a particular stack member and then enter one of the following command options to display a collection of data based on the option entered.
buffer	Enter the keyword <code>buffer</code> . To display the total buffer statistics for the stack unit, enter the keyword <code>total-buffer</code> . To display buffer statistics for a all interface, enter the keyword <code>interface</code> followed by the keyword <code>all</code> . To display total buffer information for the port, enter the keywords <code>buffer-info</code> . To display a queue range, enter 0 to 14 for a specific queue or <code>all</code> .
cpu data-plane statistics	Enter the keywords <code>cpu data-plane statistics</code> then the keywords <code>stack port</code> and its number, to display the data plane statistics, which shows the High Gig (Higig) port raw input/output counter statistics to which the stacking module is connected.
cpu management statistics	Enter the keywords <code>cpu management statistics</code> to display the counters of the management port.
cpu party-bus statistics	Enter the keywords <code>cpu party-bus statistics</code> , to display the Management plane input/output counter statistics of the pseudo party bus interface.
drops [unit unit-number]	Enter the keyword <code>drops</code> to display internal drops on the selected stack member. Enter the optional keyword <code>unit unit-number</code> to display the internal drop counters of the specified port pipe.

- fpga register** Enter the keyword to display the register value of the fpga register.
- unit *unit-number* {counters | details | port-stats [*detail*] | register}** Enter the keyword `unit` then a number and then enter one of the keywords to troubleshoot errors on the selected port-pipe and to give status on why a port is not coming up to register level.
- TI monitor** Enter the unit keyword to show information regarding the TI register.

Defaults None

- Command Modes**
- EXEC
 - EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Increased the stacking range to 12 units in S3100 series.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Replaced the keyword <code>port</code> with <code>interface</code> .
9.7(0.0)	Introduced on the S6000-ON.
9.2(0.2)	Modified the <code>drops</code> keyword range, <code>unit</code> keyword range and added the <code>buffer</code> and <code>cpu management statistics</code> options.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.5	Added <code>i2c</code> statistics and <code>sata-interfaces</code> statistics.
8.3.11.4	Added user port information.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Example (Data-Plane)

```
DellEMC# show hardware stack-unit 1 cpu data-plane statistics
Input Statistics:
 1856 packets, 338262 bytes
 141 64-byte pkts, 1248 over 64-byte pkts, 11 over 127-byte pkts
 222 over 255-byte pkts, 236 over 511-byte pkts, 0 over 1023-byte pkts
 919 Multicasts, 430 Broadcasts
 0 runts, 0 giants, 0 throttles
 0 CRC, 0 overrun, 0 discarded
Output Statistics:
 325 packets, 27629 bytes, 0 underruns
 9 64-byte pkts, 310 over 64-byte pkts, 1 over 127-byte pkts
 1 over 255-byte pkts, 2 over 511-byte pkts, 2 over 1023-byte pkts
 0 Multicasts, 3 Broadcasts, 322 Unicasts
 0 throttles, 0 discarded, 0 collisions
Rate info (interval 299 seconds):
Input 00.00 Mbits/sec
```

```
Output 00.00 Mbits/sec
DellEMC#
```

Example (Party-Bus)

```
DellEMC# show hardware stack-unit 1 cpu party-bus statistics
Input Statistics:
  0 packets, 0 bytes
  0 dropped, 0 errors
Output Statistics:
  0 packets, 0 bytes
  0 errors
```

Example (Drops Unit)

```
DellEMC# sh hard stack-unit 1 drops unit 0
PortNumber Ingress Drops IngMac Drops Total Mmu Drops
1           0           0           0           0
2           0           0           0           0
3           0           0           0           0
4           0           0           0           0
EgMac Drops Egress Drops
0           0
0           0
0           0
0           0
DellEMC#
```

Example (Port-Stats)

```
DellEMC# show hardware stack-unit 1 unit 0 port-stats
ena/ speed/ link auto STP          lrn inter max loop
port link duplex scan neg? state pause discred ops face frame back
ge0  down - SW Yes Block Untag FA SGMII 1554
ge1  !ena - SW Yes Block Tag FA SGMII 1554
ge2  !ena - SW Yes Block Tag FA SGMII 1554
ge3  !ena - SW Yes Block Tag FA SGMII 1554
ge4  !ena - SW Yes Forward Tag F SGMII 1554
ge5  !ena - SW Yes Forward Tag F SGMII 1554
ge6  !ena - SW Yes Forward Tag F SGMII 1554
ge7  !ena - SW Yes Forward Tag F SGMII 1554
ge8  !ena - SW Yes Forward Tag F SGMII 1554
ge9  !ena - SW Yes Forward Tag F SGMII 1554
ge10 !ena - SW Yes Forward Tag F SGMII 9252
ge11 !ena - SW Yes Forward Tag F SGMII 9252
ge12 !ena - SW Yes Forward Tag F SGMII 1554
ge13 !ena - SW Yes Forward Tag F SGMII 1554
ge14 !ena - SW Yes Forward Tag F SGMII 1554
ge15 !ena - SW Yes Forward Tag F SGMII 1554
ge16 !ena - SW Yes Forward Tag F SGMII 1554
ge17 !ena - SW Yes Forward Tag F SGMII 1554
ge18 !ena - SW Yes Forward Tag F SGMII 1554
ge19 !ena - SW Yes Forward Tag F SGMII 1554
ge20 !ena - SW Yes Forward Tag F SGMII 1554
ge21 !ena - SW Yes Forward Tag F SGMII 1554
ge22 !ena - SW Yes Forward Tag F SGMII 1554
ge23 !ena - SW Yes Forward Tag F SGMII 1554
hg0  up 12G FD SW No Forward None F XGMII 16360
hg1  up 12G FD SW No Forward None F XGMII 16360
hg2  down 10G FD SW No Forward None F XGMII 16360
hg3  down 10G FD SW No Forward None F XGMII 16360
0
DellEMC#
```

Example (Register)

```
DellEMC# show hardware stack-unit 1 unit 1 register
0x0068003c AGINGCTRMEMDEBUG.mmu0 = 0x00000000
0x0068003d AGINGEXPMEDEBUG.mmu0 = 0x00000000
0x00680017 ASFCONFIG.mmu0 = 0x0000000e
0x0060004c ASFPORTSPEED.ge0 = 0x00000000
0x0060104c ASFPORTSPEED.ge1 = 0x00000000
0x0060204c ASFPORTSPEED.ge2 = 0x00000000
0x0060304c ASFPORTSPEED.ge3 = 0x00000000
0x0060404c ASFPORTSPEED.ge4 = 0x00000000
0x0060504c ASFPORTSPEED.ge5 = 0x00000000
0x0060604c ASFPORTSPEED.ge6 = 0x00000000
0x0060704c ASFPORTSPEED.ge7 = 0x00000000
0x0060804c ASFPORTSPEED.ge8 = 0x00000000
0x0060904c ASFPORTSPEED.ge9 = 0x00000000
0x0060a04c ASFPORTSPEED.ge10 = 0x00000000
0x0060b04c ASFPORTSPEED.ge11 = 0x00000000
0x0060c04c ASFPORTSPEED.ge12 = 0x00000000
0x0060d04c ASFPORTSPEED.ge13 = 0x00000000
```

```

0x0060e04c ASFPORTSPEED.ge14 = 0x00000000
0x0060f04c ASFPORTSPEED.ge15 = 0x00000000
0x0061004c ASFPORTSPEED.ge16 = 0x00000000
0x0061104c ASFPORTSPEED.ge17 = 0x00000000
0x0061204c ASFPORTSPEED.ge18 = 0x00000000
0x0061304c ASFPORTSPEED.ge19 = 0x00000000
0x0061404c ASFPORTSPEED.ge20 = 0x00000000
0x0061504c ASFPORTSPEED.ge21 = 0x00000000
0x0061604c ASFPORTSPEED.ge22 = 0x00000000
0x0061704c ASFPORTSPEED.ge23 = 0x00000005
0x0061804c ASFPORTSPEED.hg0 = 0x00000007
0x0061904c ASFPORTSPEED.hg1 = 0x00000007
0x0061a04c ASFPORTSPEED.hg2 = 0x00000000
0x0061b04c ASFPORTSPEED.hg3 = 0x00000000
0x0061c04c ASFPORTSPEED.cpu0 = 0x00000000
0x00780000 AUX_ARB_CONTROL.ipipe0 = 0x0000001c
0x0e700102 BCAST_BLOCK_MASK.ge0 = 0x00000000
0x0e701102 BCAST_BLOCK_MASK.ge1 = 0x00000000
0x0e702102 BCAST_BLOCK_MASK.ge2 = 0x00000000
0x0e703102 BCAST_BLOCK_MASK.ge3 = 0x00000000
0x0e704102 BCAST_BLOCK_MASK.ge4 = 0x00000000
0x0e705102 BCAST_BLOCK_MASK.ge5 = 0x00000000
0x0e706102 BCAST_BLOCK_MASK.ge6 = 0x00000000
0x0e707102 BCAST_BLOCK_MASK.ge7 = 0x00000000
0x0e708102 BCAST_BLOCK_MASK.ge8 = 0x00000000
0x0e709102 BCAST_BLOCK_MASK.ge9 = 0x00000000
0x0e70a102 BCAST_BLOCK_MASK.ge10 = 0x00000000
0x0e70b102 BCAST_BLOCK_MASK.ge11 = 0x00000000
0x0e70c102 BCAST_BLOCK_MASK.ge12 = 0x00000000
0x0e70d102 BCAST_BLOCK_MASK.ge13 = 0x00000000
0x0e70e102 BCAST_BLOCK_MASK.ge14 = 0x00000000
0x0e70f102 BCAST_BLOCK_MASK.ge15 = 0x00000000
0x0e710102 BCAST_BLOCK_MASK.ge16 = 0x00000000
0x0e711102 BCAST_BLOCK_MASK.ge17 = 0x00000000
0x0e712102 BCAST_BLOCK_MASK.ge18 = 0x00000000
0x0e713102 BCAST_BLOCK_MASK.ge19 = 0x00000000
0x0e714102 BCAST_BLOCK_MASK.ge20 = 0x00000000
0x0e715102 BCAST_BLOCK_MASK.ge21 = 0x00000000
0x0e716102 BCAST_BLOCK_MASK.ge22 = 0x00000000
0x0e717102 BCAST_BLOCK_MASK.ge23 = 0x00000000
0x0e718102 BCAST_BLOCK_MASK.hg0 = 0x00000000
0x0e719102 BCAST_BLOCK_MASK.hg1 = 0x00000000
0x0e71a102 BCAST_BLOCK_MASK.hg2 = 0x00000000
0x0e71b102 BCAST_BLOCK_MASK.hg3 = 0x00000000
0x0e71c102 BCAST_BLOCK_MASK.cpu0 = 0x00000000
0x0b700001 BCAST_STORM_CONTROL.ge0 = 0x00000000
0x0b701001 BCAST_STORM_CONTROL.ge1 = 0x00000000
0x0b702001 BCAST_STORM_CONTROL.ge2 = 0x00000000
0x0b703001 BCAST_STORM_CONTROL.ge3 = 0x00000000
0x0b704001 BCAST_STORM_CONTROL.ge4 = 0x00000000
0x0b705001 BCAST_STORM_CONTROL.ge5 = 0x00000000
0x0b706001 BCAST_STORM_CONTROL.ge6 = 0x00000000
0x0b707001 BCAST_STORM_CONTROL.ge7 = 0x00000000
0x0b708001 BCAST_STORM_CONTROL.ge8 = 0x00000000
0x0b709001 BCAST_STORM_CONTROL.ge9 = 0x00000000
0x0b70a001 BCAST_STORM_CONTROL.ge10 = 0x00000000
!----- output truncated -----!

```

Example (Counters)

```

DellEMC# show hardware stack-unit 1 unit 0 counters
unit: 0 port: 1 (interface Te 1/1)
Description                                     Value
RX - IPV4 L3 Unicast Frame Counter              0
RX - IPV4 L3 Routed Multicast Packets           0
RX - IPV6 L3 Unicast Frame Counter              0
RX - IPV6 L3 Routed Multicast Packets           0
RX - Unicast Packet Counter                     0
RX - 64 Byte Frame Counter                      336186
RX - 65 to 127 Byte Frame Counter               0
RX - 128 to 255 Byte Frame Counter              0

```

RX - 256 to 511 Byte Frame Counter	0
RX - 512 to 1023 Byte Frame Counter	0
RX - 1024 to 1518 Byte Frame Counter	0
RX - 1519 to 1522 Byte Good VLAN Frame Counter	0
RX - 1519 to 2047 Byte Frame Counter	0
RX - 2048 to 4095 Byte Frame Counter	0
RX - 4096 to 9216 Byte Frame Counter	0
RX - Good Packet Counter	336186
RX - Packet/Frame Counter	336186
RX - Unicast Frame Counter	0
RX - Multicast Frame Counter	336186
RX - Broadcast Frame Counter	0
RX - Byte Counter	21515904
RX - Control Frame Counter	0
RX - Pause Control Frame Counter	0
RX - Oversized Frame Counter	0
RX - Jabber Frame Counter	0
RX - VLAN Tag Frame Counter	0
RX - Double VLAN Tag Frame Counter	0
RX - RUNT Frame Counter	0
RX - Fragment Counter	0
RX - VLAN Tagged Packets	0
RX - Ingress Dropped Packet	0
RX - MTU Check Error Frame Counter	0
RX - PFC Frame Priority 0	0
RX - PFC Frame Priority 1	0
RX - PFC Frame Priority 2	0
RX - PFC Frame Priority 3	0
RX - PFC Frame Priority 4	0
RX - PFC Frame Priority 5	0
RX - PFC Frame Priority 6	0
RX - PFC Frame Priority 7	0
RX - Debug Counter 0	336186
RX - Debug Counter 1	336186
RX - Debug Counter 2	0
RX - Debug Counter 3	0
RX - Debug Counter 4	0
RX - Debug Counter 5	336186
RX - Debug Counter 6	0
RX - Debug Counter 7	0
RX - Debug Counter 8	0
TX - 64 Byte Frame Counter	166
TX - 65 to 127 Byte Frame Counter	112
TX - 128 to 255 Byte Frame Counter	0
TX - 256 to 511 Byte Frame Counter	0
TX - 512 to 1023 Byte Frame Counter	0
TX - 1024 to 1518 Byte Frame Counter	0
TX - 1519 to 1522 Byte Good VLAN Frame Counter	0
TX - 1519 to 2047 Byte Frame Counter	0
TX - 2048 to 4095 Byte Frame Counter	0
TX - 4096 to 9216 Byte Frame Counter	0
TX - Good Packet Counter	278
TX - Packet/Frame Counter	278
TX - Unicast Frame Counter	0
TX - Multicast Frame Counter	278
TX - Broadcast Frame Counter	0
TX - Byte Counter	18688
TX - Control Frame Counter	0
TX - Pause Control Frame Counter	0
TX - Oversized Frame Counter	0
TX - Jabber Counter	0
TX - VLAN Tag Frame Counter	0
TX - Double VLAN Tag Frame Counter	0
TX - RUNT Frame Counter	0
TX - Fragment Counter	0
TX - PFC Frame Priority 0	0
TX - PFC Frame Priority 1	0
TX - PFC Frame Priority 2	0
TX - PFC Frame Priority 3	0
TX - PFC Frame Priority 4	0
TX - PFC Frame Priority 5	0
TX - PFC Frame Priority 6	0

```

TX - PFC Frame Priority 7 0
TX - Debug Counter 0 0
TX - Debug Counter 1 0
TX - Debug Counter 2 0
TX - Debug Counter 3 0
TX - Debug Counter 4 0
TX - Debug Counter 5 0
TX - Debug Counter 6 0
TX - Debug Counter 7 0
TX - Debug Counter 8 0
TX - Debug Counter 9 0
TX - Debug Counter 10 0
TX - Debug Counter 11 0

-----
-----
-----
-----
-----
unit: 0 port: 61 (interface Fo 1/60)
Description Value
RX - IPV4 L3 Unicast Frame Counter 0
RX - IPV4 L3 Routed Multicast Packets 0
RX - IPV6 L3 Unicast Frame Counter 0
RX - IPV6 L3 Routed Multicast Packets 0
RX - Unicast Packet Counter 0
RX - 64 Byte Frame Counter 0
RX - 65 to 127 Byte Frame Counter 0
RX - 128 to 255 Byte Frame Counter 0
RX - 256 to 511 Byte Frame Counter 0
RX - 512 to 1023 Byte Frame Counter 0
RX - 1024 to 1518 Byte Frame Counter 0
RX - 1519 to 1522 Byte Good VLAN Frame Counter 0
RX - 1519 to 2047 Byte Frame Counter 0
RX - 2048 to 4095 Byte Frame Counter 0
RX - 4096 to 9216 Byte Frame Counter 0
RX - Good Packet Counter 0
RX - Packet/Frame Counter 0
RX - Unicast Frame Counter 0
RX - Multicast Frame Counter 0
RX - Broadcast Frame Counter 0
RX - Byte Counter 0
RX - Control Frame Counter 0
RX - Pause Control Frame Counter 0
RX - Oversized Frame Counter 0
RX - Jabber Frame Counter 0
RX - VLAN Tag Frame Counter 0
RX - Double VLAN Tag Frame Counter 0
RX - RUNT Frame Counter 0
RX - Fragment Counter 0
RX - VLAN Tagged Packets 0
RX - Ingress Dropped Packet 0
RX - MTU Check Error Frame Counter 0
RX - PFC Frame Priority 0 0
RX - PFC Frame Priority 1 0
RX - PFC Frame Priority 2 0
RX - PFC Frame Priority 3 0
RX - PFC Frame Priority 4 0
RX - PFC Frame Priority 5 0
RX - PFC Frame Priority 6 0
RX - PFC Frame Priority 7 0
RX - Debug Counter 0 0
RX - Debug Counter 1 0
RX - Debug Counter 2 0
RX - Debug Counter 3 0
RX - Debug Counter 4 0
RX - Debug Counter 5 0
RX - Debug Counter 6 0
RX - Debug Counter 7 0
RX - Debug Counter 8 0
TX - 64 Byte Frame Counter 0

```

```

TX - 65 to 127 Byte Frame Counter 0
TX - 128 to 255 Byte Frame Counter 0
TX - 256 to 511 Byte Frame Counter 0
TX - 512 to 1023 Byte Frame Counter 0
TX - 1024 to 1518 Byte Frame Counter 0
TX - 1519 to 1522 Byte Good VLAN Frame Counter 0
TX - 1519 to 2047 Byte Frame Counter 0
TX - 2048 to 4095 Byte Frame Counter 0
TX - 4096 to 9216 Byte Frame Counter 0
TX - Good Packet Counter 0
TX - Packet/Frame Counter 0
TX - Unicast Frame Counter 0
TX - Multicast Frame Counter 0
TX - Broadcast Frame Counter 0
TX - Byte Counter 0
TX - Control Frame Counter 0
TX - Pause Control Frame Counter 0
TX - Oversized Frame Counter 0
TX - Jabber Counter 0
TX - VLAN Tag Frame Counter 0
TX - Double VLAN Tag Frame Counter 0
TX - RUNT Frame Counter 0
TX - Fragment Counter 0
TX - PFC Frame Priority 0 0
TX - PFC Frame Priority 1 0
TX - PFC Frame Priority 2 0
TX - PFC Frame Priority 3 0
TX - PFC Frame Priority 4 0
TX - PFC Frame Priority 5 0
TX - PFC Frame Priority 6 0
TX - PFC Frame Priority 7 0
TX - Debug Counter 0 0
TX - Debug Counter 1 0
TX - Debug Counter 2 0
TX - Debug Counter 3 0
TX - Debug Counter 4 0
TX - Debug Counter 5 0
TX - Debug Counter 6 0
TX - Debug Counter 7 0
TX - Debug Counter 8 0
TX - Debug Counter 9 0
TX - Debug Counter 10 0
TX - Debug Counter 11 0

```

**Example
(Details)**

```

DelleEMC# show hardware stack-unit 1 unit 1 details
*****

The total no of FP & CSF Devices in the Card is 2
The total no of FP Devices in the Card is 2
The total no of CSF Devices in the Card is 0
The number of ports in device 0 is - 24
The number of Hg ports in devices 0 is - 4
The CPU Port of the device is 28
The number of ports in device 1 is - 24
The number of Hg ports in devices 1 is - 4
The CPU Port of the device is 28
The staring unit no the SWF in the device is 0
*****

The Current Link Status Is

Front End Link Status 0x000000000000400000000000
Front End Port Present Status 0x000000000000000000000000
Back Plane Link Status 0x00000000
*****

Link Status of all the ports in the Device - 1
The linkStatus of Front End Port 0 is FALSE

```

```

The linkStatus of Front End Port 1 is FALSE
The linkStatus of Front End Port 2 is FALSE
The linkStatus of Front End Port 3 is FALSE
The linkStatus of Front End Port 4 is FALSE
The linkStatus of Front End Port 5 is FALSE
The linkStatus of Front End Port 6 is FALSE
The linkStatus of Front End Port 7 is FALSE
The linkStatus of Front End Port 8 is FALSE
The linkStatus of Front End Port 9 is FALSE
The linkStatus of Front End Port 10 is FALSE
The linkStatus of Front End Port 11 is FALSE
The linkStatus of Front End Port 12 is FALSE
The linkStatus of Front End Port 13 is FALSE
The linkStatus of Front End Port 14 is FALSE
The linkStatus of Front End Port 15 is FALSE
The linkStatus of Front End Port 16 is FALSE
The linkStatus of Front End Port 17 is FALSE
The linkStatus of Front End Port 18 is FALSE
The linkStatus of Front End Port 19 is FALSE
The linkStatus of Front End Port 20 is FALSE
The linkStatus of Front End Port 21 is FALSE
The linkStatus of Front End Port 22 is FALSE
The linkStatus of Front End Port 23 is TRUE
The linkStatus of Hg Port 24 is TRUE
The linkStatus of Hg Port 25 is TRUE
The linkStatus of Hg Port 26 is FALSE
The linkStatus of Hg Port 27 is FALSE
!----- output truncated -----!

```

Example (Total-Buffer)

```

DelleMC# show hardware stack-unit 1 buffer total-buffer

DelleMC# show hardware stack-unit 1 buffer total-buffer
----- Buffer Details for Stack-Unit 1 -----
Total Buffers allocated per Stack-Unit 46080

```

Example displaying queue range

```

DelleMC# show hardware stack-unit 0 buffer unit 0 interface all queue 6
buffer-info
      Buffer Stats for Front End Ports
      =====
----- Buffer Stats for Interface Te 1/0 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/2 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/3 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/4 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/5 Queue 6 -----
Maximum Shared Limit: 7667
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/6 Queue 6 -----
<output truncated for brevity>

```

Related Commands

- [clear hardware system-flow](#) — clear the statistics from selected hardware components.

- [show interfaces stack-unit](#) — display information on all interfaces on a specific S-Series stack member.
- [show processes cpu \(S-Series\)](#) — display the CPU usage information based on the processes running in an S-Series.
- [show system](#) — display the current status of all the stack members or a specific member.

show hardware buffer interface

Display buffer statistics for a specific interface.

Syntax `show hardware buffer interface interface{priority-group { id | all } | queue { id| all}] buffer-info`

Parameters	interface <i>interface</i>	Enter any of the following keywords and slot/port or number information: <ul style="list-style-type: none"> • For a 10-Gigabit Ethernet interface, enter the keyword <code>TenGigabitEthernet</code> then the slot/port information. • For a 40-Gigabit Ethernet interface, enter the keyword <code>fortyGigE</code> then the slot/port information.
	priority-group	Enter the keyword <code>priority-group</code> followed by <i>id</i> for specific priority-group or keyword <i>all</i> .
	queue	Enter the keyword <code>queue</code> followed by <i>id</i> for specific queue or keyword <i>all</i> .
	buffer-info	To display total buffer information for the interface, enter the keywords <code>buffer-info</code> .

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9000, and Z9500.

Example displaying total-buffer information for the interface

```
DellEMC# show hardware buffer interface tengigabitethernet 1/1 buffer-info
----- Buffer Stats for Interface Te 1/1 -----
Maximum Shared Limit for the Interface: 38336
Default Packet Buffer allocate for the Interface: 120
Used Packet Buffer for the Interface: 0
```

Example displaying priority-group range

```
DellEMC# show hardware buffer interface tengigabitethernet 1/1 priority-group 0 buffer-info
----- Buffer stats for unit: 0 port: 1 (interface Te 1/1) -----
-----
PG# PRIORITIES          ALLOTED (CELLS)          COUNTER (CELLS)
      MIN    SHARED    MODE    HDRM    MIN    SHARED    HDRM
-----
0    -          61440    0      STATIC  174    0      0      0

DellEMC#
```

Example displaying queue range

```
DellEMC# show hardware buffer interface tengigabitethernet 1/1 queue all
buffer-info
----- Buffer Stats for Interface Te 1/1 Queue 0 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 1 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 2 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 3 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 4 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 5 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 6 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 7 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 8 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 9 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 10 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8
Used Packet Buffer: 0
----- Buffer Stats for Interface Te 1/1 Queue 11 -----
Maximum Shared Limit: 29514
Default Packet Buffer allocate for the Queue: 8

<output truncated for brevity>
```

show hardware buffer-stats-snapshot

Displays buffer statistics tracking resource information for a specific interface.

Syntax

```
show hardware buffer-stats-snapshot resource {headroom-pool [detail] |
service-pool [detail] interface interface {{priority-group {id | all} |
queue ucast {id | all} mcast {id | all} | all} [detail]}
```

Parameters

- | | |
|-----------------------------|--|
| headroom-pool detail | Enter the keyword <code>headroom-pool</code> followed by the keyword <code>detail</code> to view detailed information about the headroom pool usage. |
| service-pool detail | Enter the keyword <code>service-pool</code> followed by the keyword <code>detail</code> to view detailed information about the service pool usage. |

- interface**
interface
- Enter any of the following keywords and the interface information:
- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
 - For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.
- queue**
- Enter the keyword `queue` followed by *all* for displaying details of all queues, `ucast queue-id` or *all* for displaying Unicast queue details, and `mcast queue-id` or *all* for displaying Multicast queue details.
- priority-group**
- Enter the keyword `priority-group` followed by *id* for specific priority-group or keyword *all*.

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, Z9000, Z9500.

Usage Information `<Interface><slot/port>-Queue ucast/mcast` — Displays the total unicast/multicast buffer usage on per-port per-queue basis. For CPU port, counters for queues 0 to 11 displays and there is no differentiation between unicast and multicast queues.

Example displaying egress queue-level snapshot for both unicast and multicast packets for the specific interface

```
DellEMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 queue all
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
Q#  TYPE      Q#      TOTAL BUFFERED CELLS
-----
UCAST 0          0          0
UCAST 1          1          0
UCAST 2          2          0
UCAST 3          3          0
UCAST 4          4          0
UCAST 5          5          0
UCAST 6          6          0
UCAST 7          7          0
UCAST 8          8          0
UCAST 9          9          0
UCAST 10         10         0
UCAST 11         11         0
MCAST 0          0          0
MCAST 1          1          0
MCAST 2          2          0
MCAST 3          3          0
MCAST 4          4          0
MCAST 5          5          0
MCAST 6          6          0
```

```
MCAST      7      0
MCAST      8      0
```

Example displaying egress queue-level snapshot for unicast packets for the specific interface

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 queue ucast 10
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
Q# TYPE      Q#      TOTAL BUFFERED CELLS
-----
UCAST      10      0
```

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 queue ucast all
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
Q# TYPE      Q#      TOTAL BUFFERED CELLS
-----
UCAST      0      0
UCAST      1      0
UCAST      2      0
UCAST      3      0
UCAST      4      0
UCAST      5      0
UCAST      6      0
UCAST      7      0
UCAST      8      0
UCAST      9      0
UCAST     10      0
UCAST     11      0
```

Example displaying egress queue-level snapshot for multicast packets for the specific interface

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 queue mcast 3
Unit 1 unit: 0 port: 1 (interface Fo 0/0)
-----
Q# TYPE      Q#      TOTAL BUFFERED CELLS
-----
MCAST      3      0
```

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 queue mcast all
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
Q# TYPE      Q#      TOTAL BUFFERED CELLS
-----
MCAST      0      0
MCAST      1      0
MCAST      2      0
MCAST      3      0
MCAST      4      0
MCAST      5      0
MCAST      6      0
MCAST      7      0
MCAST      8      0
```

Example displaying ingress priority-group level snapshot for the specific interface

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 priority-group 7
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
PG#      SHARED CELLS      HEADROOM CELLS
-----
7        0                0

DelleMC# show hardware buffer-stats-snapshot resource interface
```

```

fortyGigE 0/0 priority-group all

Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
PG#          SHARED CELLS          HEADROOM CELLS
-----
0            0                    0
1            0                    0
2            0                    0
3            0                    0
4            0                    0
5            0                    0
6            0                    0
7            0                    0

```

show hardware counters interface

Display the counter information for a specific interface.

Syntax `show hardware counters interface interface`

Parameters

counters Enter the keywords `counters` to display counter value for the specified stack-member the port-pipe.

interface *interface* Enter any of the following keywords and the interface information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Introduced on the S4810, S4820T, S5000, S6000, S6000-ON, and Z9500.

Example

```

DellEMC# show hardware counters interfac tengigabitethernet 5/1
unit: 0 port: 2 (interface Te 5/1)
Description                                     Value
RX - IPV4 L3 Unicast Frame Counter                0
RX - IPV4 L3 Routed Multicast Packets             0
RX - IPV6 L3 Unicast Frame Counter                0
RX - IPV6 L3 Routed Multicast Packets             0
RX - Unicast Packet Counter                       0
RX - 64 Byte Frame Counter                        0

```

```

RX - 65 to 127 Byte Frame Counter          0
RX - 128 to 255 Byte Frame Counter        0
RX - 256 to 511 Byte Frame Counter        0
RX - 512 to 1023 Byte Frame Counter       0
RX - 1024 to 1518 Byte Frame Counter      0
RX - 1519 to 1522 Byte Good VLAN Frame Counter 0
RX - 1519 to 2047 Byte Frame Counter     0
RX - 2048 to 4095 Byte Frame Counter     0
RX - 4096 to 9216 Byte Frame Counter     0
RX - Good Packet Counter                  0
RX - Packet/Frame Counter                 0
RX - Unicast Frame Counter                 0
RX - Multicast Frame Counter              0
RX - Broadcast Frame Counter              0
RX - Byte Counter                          0
RX - Control Frame Counter                 0
RX - Pause Control Frame Counter          0
RX - Oversized Frame Counter              0
RX - Jabber Frame Counter                  0
RX - VLAN Tag Frame Counter               0
RX - Double VLAN Tag Frame Counter        0
RX - RUNT Frame Counter                    0
RX - Fragment Counter                      0
RX - VLAN Tagged Packets                   0
RX - Ingress Dropped Packet                0
RX - MTU Check Error Frame Counter        0
RX - PFC Frame Priority 0                  0
RX - PFC Frame Priority 1                  0
RX - PFC Frame Priority 2                  0
RX - PFC Frame Priority 3                  0
RX - PFC Frame Priority 4                  0
RX - PFC Frame Priority 5                  0
RX - PFC Frame Priority 6                  0
RX - PFC Frame Priority 7                  0
RX - Debug Counter 0                       0
RX - Debug Counter 1                       0
RX - Debug Counter 2                       0
<output truncated for brevity>

```

show hardware drops

Displays internal drops on the specified interface or for a range of interface.

Syntax `show hardware drops interface interface`

Parameters

drops Enter the keyword `drops` to display internal drops.

interface Enter any of the following keywords and the interface or interface range information:

- For a 10-Gigabit Ethernet interface, enter the keyword `TenGigabitEthernet` then the slot/port information.
- For a 40-Gigabit Ethernet interface, enter the keyword `fortyGigE` then the slot/port information.

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.11(0.0)	Included the FEC BER details in the output for 100G interfaces of S6100-ON and Z9100-ON . Included FCS Error Ratio in the output for all interfaces of S6000, S6000-ON, S6100-ON, and Z9100-ON.
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Removed the keywords <code>stack-unit</code> . Introduced on the Z9500.
9.7(0.0)	Introduced on the S6000-ON.
9.2(0.2)	Modified the <code>drops</code> keyword range, unit keyword range and added the <code>buffer</code> and <code>cpu management statistics</code> options.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.5	Added i2c statistics and sata-interfaces statistics.
8.3.11.4	Added user port information.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.7.1.0	Introduced on the S-Series.

Example displaying internal drops for the specific interface

Example displaying internal drops for FC port

```
DellEMC(conf)#do show hardware drops interface fibreChannel 0/1
Drops in Interface Fc 0/1:
  --- Ingress Drops      ---
Ingress Drops           : 0
IBP CBP Full Drops     : 0
PortSTPnotFwd Drops    : 0
IPv4 L3 Discards       : 0
Policy Discards        : 0
Packets dropped by FP   : 0
(L2+L3) Drops          : 0
Port bitmap zero Drops : 0
Rx VLAN Drops          : 0
  --- Ingress MAC counters---
Ingress FCSDrops       : 0
Ingress MTUExceeds    : 0
  --- MMU Drops          ---
Ingress MMU Drops      : 0
Ingress Drops Bytes    : 0
HOL DROPS (TOTAL)     : 0
HOL DROPS on COS0     : 0
HOL DROPS on COS1     : 0
HOL DROPS on COS2     : 0
HOL DROPS on COS3     : 0
```

```

HOL DROPS on COS4          : 0
HOL DROPS on COS5          : 0
HOL DROPS on COS6          : 0
HOL DROPS on COS7          : 0
HOL DROPS on COS8          : 0
HOL DROPS on COS9          : 0
HOL DROPS on COS10         : 0
HOL DROPS on COS11         : 0
HOL DROPS on COS12         : 0
HOL DROPS on COS13         : 0
HOL DROPS on COS14         : 0
TxPurge CellErr           : 0
Aged Drops                 : 0
--- Egress MAC counters---
Egress FCS Drops           : 0
--- Egress FORWARD PROCESSOR Drops ---
IPv4 L3UC Aged & Drops     : 0
TTL Threshold Drops        : 0
INVALID VLAN CNTR Drops   : 0
L2MC Drops                 : 0
PKT Drops of ANY Conditions : 0
Hg MacUnderflow            : 0
TX Err PKT Counter         : 0
--- Error counters---
Internal Mac Transmit Errors : 0
Unknown Opcodes            : 0
Internal Mac Receive Errors  : 0

```

show hardware stack-unit buffer-stats-snapshot (Total Buffer Information)

View the buffer statistics tracking resource information depending on the type of buffer information, such as device-level details, port-level counters, queue-based snapshots, or priority group-level snapshot in the egress and ingress direction of traffic.

Syntax `show hardware stack-unit <id> buffer-stats-snapshot unit <id> resource x`

Parameters

- | | |
|---|---|
| stack-unit <i>stack-unit-number</i> | Unique ID of the stack unit to select a particular stack member and then enter one of the following command options to display a collection of data based on the option entered. |
| buffer-stats-snapshot unit <i>number</i> | Display the historical snapshot of buffer statistical values unit Enter the keyword unit along with a port-pipe number. The range is from 0 to 0. |
| buffer-info | Buffer and traffic manager resources usage, where X can be one of the following: <ul style="list-style-type: none"> • All - Displays ingress and egress device, port, and queue snapshots • Interface all queue {all} - egress queue-level snapshot for both unicast and multicast packets • Interface all queue ucast {id all} - egress queue-level snapshot for unicast packets only • Interface all queue mcast {id all} - egress queue-level snapshot for multicast packets only • Interface all prio-group {id all} - ingress priority-group level snapshot |

Command Modes EXEC
EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.8(0.0)	Added the keyword <code>interface all</code> .
9.7(0.0)	Introduced on the S6000-ON.
9.6(0.0)	Introduced on the S5000.
9.3(0.0)	Introduced on the S6000, S4810, and S4820T.

Usage Information

The following information is displayed based on the `buffer-info` type, such as device-level details, queue-based snapshots, or priority group-level snapshot in the egress and ingress direction of traffic:

- Device-ingress – Displays total buffer accounting usage for the unit.
- Device-egress – Display total buffer usage for the unit, total multicast buffer usage for the unit and also on per-service-pool basis. Counters will be displayed for the 2 service-pools – one for normal traffic and other for DCB traffic.

When the `buffer-stats-snapshot` is disabled, the following informational message is displayed when you run the `show` command: `%Info: Buffer-stats-snapshot feature is disabled.`

Example

```
DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 priority-group 7
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
PG# PRIORITIES      SHARED CELLS      HEADROOM CELLS
-----
7   0-2,5           0                  0

DelleMC# show hardware buffer-stats-snapshot resource interface
fortyGigE 0/0 priority-group 7
Unit 0 unit: 0 port: 1 (interface Fo 0/0)
-----
PG# PRIORITIES      SHARED CELLS      HEADROOM CELLS
-----
0   -              0                  0
1   -              0                  0
2   -              0                  0
3   7              0                  0
4   6              0                  0
5   4              0                  0
6   3              0                  0
7   0-2,5         0                  0
```

show hardware system-flow

Display Layer 3 ACL or QoS data for the selected stack member and stack member port-pipe.

Syntax `show hardware system-flow stack-unit id port-set number [counters]`

Parameters

- stack-unit *id*** Enter the keywords `stack-unit` to select a stack member ID.
- port-set *number* [counters]** Enter the keywords `port-set` with a port-pipe number.
(OPTIONAL) Enter the keyword `counters` for the specified port-pipe.

Defaults None

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.0.2.0	Introduced on the S6000.
8.3.19.0	Introduced on the S4820T.
8.3.11.1	Introduced on the Z9000.
8.3.7.0	Introduced on the S4810.
7.8.1.0	Introduced on the S-Series.

Example

```
DellEMC# show hardware system-flow stack-unit 1 port-set 0 counters
-----
EntryId Description #HITS
-----
2048 STP BPDU Redirects 0
2047 LLDP BPDU Redirects 0
2045 LACP traffic Redirects 0
2044 GVRP traffic Redirects 0
2043 ARP Reply Redirects 0
2042 802.1x frames Redirects 0
2041 VRRP frames Redirects 0
2040 GRAT ARP 0
2039 DROP Cases 0
2038 OSPF1 STUB 0
2037 OSPF2 STUB 0
2036 VRRP STUB 0
2035 L2_DST_HIT+BC MAC+VLAN 4095 0
2034 L2_DST_HIT+BC MAC 0
2033 Catch all 0
384 OSPF[224.0.0.5] Packets 0
383 OSPF[224.0.0.6] Packets 0
382 VRRP Packets 0
380 BCast L2_DST_HIT on VLAN 4095 0
379 BCAST L2_DST_HIT Packets 0
4 Unknown L2MC Packets 0
3 L2DLF Packets 0
2 L2UCAST Packets 0
1 L2BCAST Packets 0
25
DellEMC#
```

Example

```
param1=0(0x00)},
  action={act=CosQCpuNew, param0=7(0x07), param1=0(0x00)},
  action={act=CopyToCpu, param0=0(0x00), param1=0(0x00)},
  action={act=UpdateCounter, param0=1(0x01), param1=0(0x00)},
  meter=NULL,
  counter={idx=1, mode=0x01, entries=1}

##### FP Entry for redirecting LACP traffic to CPU Port
#####
EID 2045: gid=1,
slice=15, slice_idx=0x02, prio=0x7fd, flags=0x82, Installed
tcam: color_indep=0, higig=0, higig_mask=0,
KEY=0x00000000 00000000 00000000 0180c200 00020000 00000000 00000000
```

```

, FPF4=0x00
  MASK=0x00000000 00000000 00000000 ffffffff ffff0000 00000000 00000000
,
  0x00
  action={act=Drop, param0=0(0x00), param1=0(0x00)},
  action={act=CosQCpuNew, param0=7(0x07), param1=0(0x00)},
  action={act=CopyToCpu, param0=0(0x00), param1=0(0x00)},
  action={act=UpdateCounter, param0=1(0x01), param1=0(0x00)},
  meter=NULL,
  counter={idx=2, mode=0x01, entries=1}

##### FP Entry for redirecting GVRP traffic to RSM
#####
  EID 2044: gid=1,
  slice=15, slice_idx=0x03, prio=0x7fc, flags=0x82, Installed
  tcam: color_indep=0, higig=0, higig_mask=0,
KEY=0x00000000 00000000 00000000 0180c200 00210000 00000000 00000000
, FPF4=0x00
MASK=0x00000000 00000000 00000000 ffffffff ffff0000 00000000 00000000
,
  0x00
  action={act=Drop, param0=0(0x00), param1=0(0x00)},
  action={act=CosQCpuNew, param0=7(0x07), param1=0(0x00)},
  action={act=CopyToCpu, param0=0(0x00), param1=0(0x00)},
  action={act=UpdateCounter, param0=1(0x01), param1=0(0x00)},
  meter=NULL,
  counter={idx=3, mode=0x01, entries=1}

##### FP Entry for redirecting ARP Replies to RSM
#####
  EID 2043: gid=1,
  slice=15, slice_idx=0x04, prio=0x7fb, flags=0x82, Installed
  tcam: color_indep=0, higig=0, higig_mask=0,
KEY=0x00000000 00000000 00000000 00000000 00000000 00000806 00001600
, FPF4=0x00
MASK=0x00000000 00000000 00000000 00000000 00000000 0000ffff 00001600
,
  0x00
  action={act=Drop, param0=0(0x00), param1=0(0x00)},
  action={act=CosQCpuNew, param0=6(0x06), param1=0(0x00)},
  action={act=CopyToCpu, param0=0(0x00), param1=0(0x00)},
  action={act=UpdateCounter, param0=1(0x01), param1=0(0x00)},
!----- output truncated -----!

```

show hardware vlan-counters

Display the hardware VLAN statistics.

Syntax show hardware vlan-counters *vlan-id*

Parameters *vlan-id* Enter the interface VLAN number. The range is from 1 to 4094.

Defaults None

Command Modes

- EXEC
- EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

Version	Description
9.10(0.1)	Introduced on the S6010-ON and S4048T-ON.
9.10(0.0)	Introduced on the S3148.
9.10(0.0)	Introduced on the S6100-ON.
9.8(2.0)	Introduced on the S3100 series.
9.8(1.0)	Introduced on the Z9100-ON.

Version	Description
9.8(0.0P5)	Introduced on the S4048-ON.
9.8(0.0P2)	Introduced on the S3048-ON.
9.7(0.0)	Introduced on the S6000-ON.
9.7(0.0)	Introduced this command.

Example

```
DellEMC# show hardware vlan-counters 1
Counters for vlanid: 1
-----
Total number of inpackets: 0
Total number of inbytes: 0
Total number of outpackets: 0
Total number of outbytes: 0
DellEMC#
```

Related Commands

- [clear hardware system-flow](#) — clear the statistics from selected hardware components.

X.509v3

X.509v3 is a standard for public key infrastructure (PKI) to manage digital certificates and public key encryption. This standard specifies a format for public-key certificates or digital certificates.

Dell EMC Networking OS supports X.509v3 standards.

Topics:

- [crypto ca-cert delete](#)
- [crypto ca-cert install](#)
- [crypto cert delete](#)
- [crypto cert generate](#)
- [crypto cert install](#)
- [crypto x509 oosp](#)
- [crypto x509 revocation](#)
- [debug crypto](#)
- [logging secure](#)
- [crypto x509 ca-keyid](#)
- [oosp-server](#)
- [oosp-server prefer](#)
- [show crypto ca-cert](#)
- [show crypto cert](#)

crypto ca-cert delete

Deletes a CA certificate.

Syntax `crypto ca-cert delete [index]`

Parameters **index** (Optional) Enter the keyword `index` to specify the index of the CA certificate. If `index` is not specified, the system deletes all of the installed CA certificates.

Defaults NA.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following RBAC roles are allowed to issue this command:

- `sysadmin`
- `secadmin`

Before deleting a CA certificate, the system checks whether that certificate is an issuer of other installed certificate on the system. If so, the system informs you to delete other installed certificates first.

Related Commands [crypto ca-cert install](#)[crypto cert generate](#)[crypto ca-cert install](#)

crypto ca-cert install

Downloads and installs the certificate of a Certificate Authority (CA) on to the device.

Syntax `crypto ca-cert install path`

Parameters **path** Enter the path where the CA certificate is available for download. The format that you use to specify the location of the CA certificate also includes the protocol that is used to contact the CA. You can use the following options that you can use to download and install a certificate from the CA:

- tftp — `tftp://ca-ip-address/tftp/CAcert.pem`
- usbflash: — `usbflash:/certs/CAcert.pem`
- ftp — `ftp://userid:password@ca-ip-address/certs/CAcert.pem`
- scp — `scp://userid:password@ca-ip-address/certs/CAcert.pem`
- http — `http://192.168.1.100/certs/CAcert.pem`
- flash — `flash://filepath/filename`

Defaults NA.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

Upon successful installation, the system displays a notification on the device. If remote logging is configured, the notification is also sent to the syslog server. Contents of the CA certificate's subject are displayed.

Related Commands

- [crypto cert install](#)

crypto cert delete

Deletes a trusted certificate.

Syntax `crypto cert delete`

Defaults NA.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following RBAC roles are allowed to issue this command:

- sysadmin

- `secadmin`

The certificate matching the current FIPS state is deleted. If the system is in FIPS mode, the FIPS certificate is deleted. If the system is in non-FIPS mode, the non-FIPS certificate is deleted.

Before deleting the system's trusted certificate, the system prompts you to specify whether to proceed with deletion. If you proceed, the system deletes the certificate and also the private key.

Related Commands

- [crypto ca-cert install](#)
- [crypto cert generate](#)

crypto cert generate

Generates a Certificate Signing Request (CSR) or a self-signed certificate.

Syntax `crypto cert generate {self-signed | request} [cert-file cert-path key-file {private | key-path}] [country 2-letter code] [state state] [locality city] [organization organization-name] [orgunit unit-name] [cname common-name] [email email-address] [validity days] [length length] [altname alt-name]`

Parameters

self-signed	Enter the keyword <code>self-signed</code> to create a self-signed certificate.
request	Enter the keyword <code>request</code> to create a certificate signing request.
cert-file	Enter the keyword <code>cert-file</code> to specify that the certificate needs to be created. i NOTE: If the <code>cert-file</code> option is not specified in the command, then the system interactively prompts you to fill in rest of the fields of the certificate signing request (CSR).
cert-path	Enter the path to locally store the self-signed certificate or CSR. The path can be a full path or a relative path. If the system accepts this path, a notification is sent indicating the location where the CSR file is stored. You can then export the CSR to a CA using the "copy" command. Following is an example of a path that you can specify: <code>flash://certs/s4810-001-request.csr</code> .
key-file	Enter the keyword <code>key-file</code> to specify the private key.
private	Enter the keyword <code>private</code> to specify that the key is stored in a hidden location in the NVRAM. Only one private key can exist in a hidden location at any given point in time.
key-path	Enter the absolute or relative location on the device where the key is stored.
country 2-letter-code	(OPTIONAL) Enter the keyword <code>country</code> followed by the two letter code that is used to identify the country name.
state state	(OPTIONAL) Enter the keyword <code>state</code> followed by the name of the state.
locality city	(OPTIONAL) Enter the keyword <code>locality</code> followed by the name of the city.
organization organization-name	(OPTIONAL) Enter the keyword <code>organization</code> followed by the name of the organization.
orgunit unit-name	(OPTIONAL) Enter the keyword <code>orgunit</code> followed by the name of the unit.
cname common-name	Enter the keyword <code>cname</code> followed by the common name that you want to assign. i NOTE: Common Name is an important attribute while creating a CSR or a self-signed certificate. Common name is the main identity presented to connecting entities. By default, the device's host name acts as the common name. However, you can still configure a different common name for the device. For example, you can specify an IP address to act as a Common Name for the device. If the Common Name does not match the device's presented identity, then even a properly signed certificate does not validate correctly.

email <i>email-address</i>	(OPTIONAL) Enter the keyword <code>email</code> followed a valid email address used for communication with the organization.
validity <i>days</i>	(OPTIONAL) Enter the keyword <code>validity</code> followed by the number of days for which the certificate is valid.  NOTE: For CSRs, validity has no effect. For self-signed certificates, if validity is not specified, it defaults to 3650 days, or 10 years.
length <i>length</i>	(OPTIONAL) Enter the keyword <code>length</code> followed by a bit length value. The default key length for both FIPS and non-FIPS mode is 2048. Minimum key length value for FIPS mode is 2048. The range is from 2048 to 4096. Minimum key length value for non-FIPS mode is 1024. The range is from 1024 to 4096.
altname <i>altname</i>	(OPTIONAL) Enter the keyword <code>altname</code> followed by the subject alternate name for the organization. For example, <code>altname IP:192.168.1.100</code> .

Defaults NA.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following RBAC roles are allowed to issue this command:

- `sysadmin`
- `secadmin`

If the `cert-file` option is not specified in the command, then the system interactively prompts you to fill in various fields of the certificate signing request (CSR). You are prompted to fill out some metadata information for the certificate. The following example shows the fields that you are prompted to fill:

```
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a
DN.
There are quite a few fields but you can leave some blank.
For some fields there will be a default value; if you enter '.', the
field will be left blank.
-----
Country Name (2 letter code) [US]:
State or Province Name (full name) [Some-State]:California
Locality Name (eg, city) []:San Francisco
Organization Name (eg, company) []:Starfleet Command
Organizational Unit Name (eg, section) []:NCC-1701A
Common Name (eg, YOUR name) [S4810-001]:
Email Address []:scotty@starfleet.com
```

You can enter only 256 characters per command. If you have field values that are larger than 256 characters in length, use the interactive mode of the command.

Related Commands

- [crypto ca-cert install](#)

crypto cert install

Installs a trusted certificate on a device.

Syntax `crypto cert install cert-file cert-path key-file {key-path | private} [password passphrase]`

Parameters

cert-file	Enter the keyword <code>cert-file</code> to specify that the certificate needs to be downloaded.
cert-path	Enter the path where the certificate is locally stored. The path can be a full path or a relative path. If the system accepts this path, a notification is sent indicating the location where the certificate file is stored. Following are example of a path that you can specify: <code>flash://certs/s4810-001-request.crt</code> and <code>usbflash:/certs/s4810-001-cert.pem</code> i NOTE: Before installing a trusted certificate, you first need to download it from a remote CA using the copy command.
key-file	Enter the keyword <code>key-file</code> to specify the private key.
private	Enter the keyword <code>private</code> to specify that the key is stored in a hidden location in the NVRAM. Only one private key can exist in a hidden location at any given point in time.
key-path	Enter the absolute or relative location on the device where the key is stored. i NOTE: After the certificate is successfully installed, the private key is deleted from the specified location and copied to the hidden location in NVRAM.
password passphrase	(Optional) Enter the keyword <code>password</code> followed by the password phrase used to decrypt the private key. i NOTE: You can generate the private key and certificate on another host. While doing so, you must keep the private key encrypted with a passphrase so that the private key is not compromised during transport. The password phrase acts a facility to decrypt the private key before installing it on the switch.

Defaults

NA.

Command Modes

EXEC Privilege

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command.

Version	Description
9.11.0.0	Introduced the command.

Usage Information

The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

Certain parameters must be met in order for this command to succeed:

- The downloaded certificate should be formatted properly.
- In order for verification to work, the CA certificate must be installed on the system before running this command.
- The downloaded certificate's public key must correspond to the private key.
- If the certificate is not self-signed, then the CA certificate (from the CA that has signed the certificate) must be installed on the system prior to running this command for verification to work.

i **NOTE:** It is possible for the switch to store two types of certificates: one for the FIPS mode and one for the non-FIPS mode. If the system is in FIPS mode, the certificate is installed as the FIPS certificate. If the system is in non-FIPS mode, the certificate is installed as the non-FIPS certificate. When FIPS mode is enabled or disabled, the certificates (and keys) are switched by the system.

i **NOTE:** For the switch, there are two possible certificates stored - one for FIPS mode, one for non-FIPS mode. If the system is in FIPS mode, the certificate will be installed as the FIPS certificate.

If the system is in non-FIPS mode, the certificate will be installed as the non-FIPS certificate. When FIPS mode is enabled/disabled, the certificates (and keys) are switched by the system.

**Related
Commands**

- [crypto ca-cert install](#)

crypto x509 ocs

Configures the OCS behavior.

Syntax `crypto x509 ocs [nonce] [sign-requests]`

Parameters

nonce	Enter the keyword <code>nonce</code> to use the nonce feature for the OCS requests to OCS responder communication. This is a one-time value that must be returned in the OCS response. If the OCS responder is using precomputed responses, then it does not reply with the nonce. The nonce feature is off by default. The <code>no</code> version of the command disables the nonce feature.
sign-requests	Enter the keyword <code>sign-requests</code> to sign the OCS requests to OCS responder communication with the system's own certificate so that the OCS responder may verify the requestor. The <code>sign-requests</code> feature is off by default. The <code>no</code> version of the command disables signing of requests.

Defaults NA.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced the command.

Usage Information The following RBAC roles are allowed to issue this command:

- `sysadmin`
- `secadmin`

**Related
Commands**

- [crypto ca-cert install](#)
- [crypto cert generate](#)
- [crypto cert install](#)

crypto x509 revocation

Configure the revocation check behavior for the certificate.

Syntax `crypto x509 revocation ocs {accept | reject}`

Parameters

ocs	Enter the method used to check certificate revocation details. In this release, OCS is the only option that is supported. So, you can specify OCS as the <code>method-list</code> value.
accept	Enter the keyword <code>accept</code> to accept the presented certificate and log in if OCS retrieval fails.
reject	Enter the keyword <code>reject</code> to reject the presented certificate and log in if OCS retrieval fails.

Defaults `crypto x509 revocation ocs accept`

Command Modes • CONFIGURATION Mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Related Commands • [crypto x509 ocsf](#)

debug crypto

This command allows you to test a certificate chain file for validity and checking revocation outside of its use in TLS communication.

Syntax `debug crypto {flash://path}`

Parameters **path** Enter the path to a local file where a certificate chain is stored in PEM format.

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

You can use this command to verify an X509 certificate outside of use with Syslog over TLS.

Related Commands • [crypto cert install](#)
• [crypto cert generate](#)
• [crypto ca-cert install](#)

logging secure

Creates a log file for various events related to X.509v3 certificates.

Syntax `logging {hostname} {secure | tcp | udp} [vrf vrf-name] [sha1 fingerprint] [port port-number]`

Parameters **hostname** Enter the name of the host or device for which you wish to record logs corresponding to the certificates.
 **NOTE:** The hostname can be an IPV4 address, an IPV6 address, or a DNS hostname—with or without DNS suffix.

secure Enter the keyword `secure` to enable the Syslog feature to communicate with a compatible Syslog server using the secure TLS protocol over the default port (6514). The range is from 1024 to 65535.

tcp	Enter the keyword <code>tcp</code> to enable TCP.
udp	Enter the keyword <code>udp</code> to enable UDP.
vrf <i>vrf-name</i>	Enter the keyword <code>vrf</code> followed by the name of the VRF.
sha1 <i>fingerprint</i>	Enter the keyword <code>sha1</code> followed by the finger print. This option is only available when the <code>secure</code> option is configured. This new option enables the Syslog feature to compare the received certificate's sha-1 fingerprint against this configured sha-1 fingerprint. If present, only the fingerprint is used for certificate revocation validation.
port <i>port-number</i>	Enter the keyword <code>port</code> followed by the port number. The default port number is 6514 for secure logging.

Defaults None.

Command Modes CONFIGURATION

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information The following RBAC roles are allowed to issue this command:

- `sysadmin`
- `secadmin`

Following are the pre-requisites to configure logging:

- The logging command must be configured to enable event logging.
- A certificate must be installed on the switch. This certificate is only used for secure logging.
- At least one CA certificate must be installed on the switch so that the logging server's certificate can be verified. If a SHA1 fingerprint is present, only the fingerprint is used for certificate revocation validation.

- Related Commands**
- [crypto cert install](#)
 - [crypto ca-cert install](#)
 - [crypto cert generate](#)

crypto x509 ca-keyid

Creates a per-certificate configuration context using the specified subject key identifier.

Syntax `crypto x509 ca-keyid subject-key-identifier`

Use to the `no crypto x509 ca-keyid` command to remove this configuration.

Parameters

subject-key-identifier Enter the content of the `SubjectKeyIdentifier` field from the CA certificate.

 **NOTE:** To get the subject key identifier details, enter the `show crypto ca-cert` command. This command displays the CA certificate details.

Defaults None.

Command Modes • CONFIGURATION Mode

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information

The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

When you use this command, the device maps the current certificate context in the certificate store to a CA certificate through the subject key identifier field. The subject key identifier field contains the SHA-1 hash of the CA's public key. This configuration provides a way to uniquely identify a CA and associate it with any CA-specific settings.

This context is used to store certificate-specific settings such as alternate CRL and OCSP locations. Incoming X.509 certificates whose `AuthorityKeyIdentifier` extensions match the configured subject key identifier has these settings applied to them.

The `crypto x509 ca-keyid` command when used with the `ocsp-server` command in the global configuration mode creates a per-certificate configuration context under which the remaining commands are entered.

Related Commands

- [ocsp-server](#)
- [crypto x509 ocsp](#)

ocsp-server

Configures OCSP server on a CA.

Syntax `ocsp-server url [nonce] [sign-requests]`

Parameters

url	Enter the URL for the OCSP responder using standard URI format. Either http or https protocol can be used. For example, <code>http://[1100::101]:8888</code> .
nonce	Enter the keyword <code>nonce</code> to use the nonce feature for the OCSP requests to OCSP responder communication. This number is a one-time value that must be returned in the OCSP response. If the OCSP responder is using precomputed responses, then it does not reply with the nonce. The nonce feature is off by default. The no version of the command disables the nonce feature.
sign-requests	Enter the keyword <code>sign-requests</code> to sign the OCSP requests to OCSP responder communication with the system's own certificate so that the OCSP responder may verify the requestor. The <code>sign-requests</code> feature is off by default. The no version of the command disables signing of requests.

Defaults None.

Command Modes CERTIFICATE

Command History

This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information

The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

Multiple OCSP responders may be configured per CA. The system tries each one until it gets a valid response. No priority may be specified or guaranteed; the system tries them in the order in which they were configured.

Related Commands

- [crypto x509 ocs](#)

ocsp-server prefer

Configures OCSP responder preference. You can configure the preference or order that the CA or a device should follow while contacting multiple OCSP responders.

Syntax `ocsp-server prefer`

Defaults None.

Command Modes CERTIFICATE

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information

The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

When this command is specified, the system checks the configured OCSP URLs before checking the URL of the OCSP server in the authorityInfoAccess extension of the certificate. If this command is not specified, then the system checks the OCSP server in the authorityInfoAccess extension of the certificate before checking the configured OCSP servers.

Related Commands

- [crypto x509 ocs](#)

show crypto ca-cert

Displays the certificate information corresponding to the root CA.

Syntax `show crypto ca-certs`

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information

The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

This show command should display the index, the certificate's subject field in plaintext, not-before and not-after dates, and the fingerprint in hexadecimal format. The index assigned to each CA certificate is used by the `crypto cert delete certificate-authority` command to allow the user to specify which certificate authority to remove.

Related Commands

- [crypto ca-cert install](#)

show crypto cert

Displays the certificate information that is specified.

Syntax `show crypto cert {path}`

Parameters

path	(OPTIONAL) Enter the path to a local file where a certificate chain is stored in PEM format. If a path is not specified, display the certificate that is currently installed on the system.
-------------	---

Defaults None.

Command Modes EXEC Privilege

Command History This guide is platform-specific. For command information about other platforms, see the relevant *Dell EMC Networking OS Command Line Reference Guide*.

The following is a list of the Dell EMC Networking OS version history for this command:

Version	Description
9.11.0.0	Introduced this command.

Usage Information The following RBAC roles are allowed to issue this command:

- sysadmin
- secadmin

Related Commands

- [crypto cert install](#)

ICMP Message Types

This section lists and describes the possible ICMP message type resulting from a ping. The first three columns list the possible symbol or type/code. For example, you would receive a ! or 03 as an echo reply from your ping.

Table 6. ICMP messages and their definitions

Symbol	Type	Code	Description	Query	Error
.			Timeout (no reply)		
!	0	3	echo reply	.	
U	3		destination unreachable:		
		0	network unreachable		.
		1	host unreachable		.
		2	protocol unreachable		.
		3	port unreachable		.
		4	fragmentation needed but don't fragment bit set		.
		5	source route failed		.
		6	destination network unknown		.
		7	destination host unknown		.
		8	source host isolated (obsolete)		.
		9	destination network administratively prohibited		.
		10	destination host administratively prohibited		.
		11	network unreachable for TOS		.
		12	host unreachable for TOS		.
		13	communication administratively prohibited by filtering		.
		14	host precedence violation		.
		15	precedence cutoff in effect		.
C	4	0	source quench		.
	5		redirect		.
		0	redirect for network		.
		1	redirect for host		.
		2	redirect for type-of-service and network		.
		3	redirect for type-of-service and host		.
	8	0	echo request	.	
	9	0	router advertisement	.	
	10	0	router solicitation	.	
&	11		time exceeded:		

Table 6. ICMP messages and their definitions (continued)

Symbol	Type	Code	Description	Query	Error
		0	time-to-live equals 0 during transit		.
		1	time-to-live equals 0 during reassembly		.
	12		parameter problem:		
		1	IP header bad (catchall error)		.
		2	required option missing		.
	13	0	timestamp request	.	
	14	0	timestamp reply	.	
	15	0	information request (obsolete)	.	
	16	0	information reply (obsolete)	.	
	17	0	address mask request	.	
	18	0	address mask reply	.	

SNMP Traps

This section lists the traps sent by the Dell EMC Networking OS. Each trap is listed by the fields Trap Type, Trap Name, Object Name, and MIB file.

Table 7. SNMP Trap List

TRAP TYPE	TRAP NAME	TRAP OID	Object Name	MIB File	Explanation
1	TR_COLD_START	1.3.6.1.6.3.1.1.5.1	COLDSTART	rfc3418.mib	SNMP COLD_START trap sent.
2	TR_WARM_START	1.3.6.1.6.3.1.1.5.2	WARMSTART	rfc3418.mib	SNMP WARM_START trap sent.
3	TR_LINK_DOWN	1.3.6.1.6.3.1.1.5.3	LINKDOWN	rfc3418.mib	changed interface state to down.
4	TR_LINK_UP	1.3.6.1.6.3.1.1.5.4	LINKUP	rfc3418.mib	changed interface state to up.
5	TR_AUTHENTICAT ION_FAILED	1.3.6.1.6.3.1.1.5.5	Authenticationfailur e	rfc3418.mib	SNMP Authentication failed.
9	TR_BER_ERR	1.3.6.1.4.1.6027.3.3. 1.2.0.3	Not available.	Not available.	High Ber detected on interface.
10	TR_BER_ERR_CL R	1.3.6.1.4.1.6027.3.3. 1.2.0.4	Not available.	Not available.	High Ber cleared on interface.
11	TR_CHM_CARD_D OWN	1.3.6.1.4.1.6027.3.2 6.1.5.1.1	dellNetSysAlarmCa rdDown	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a card operational status is down.
12	TR_CHM_CARD_U P	1.3.6.1.4.1.6027.3.2 6.1.5.1.2	dellNetSysAlarmCa rdUp	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a card operational status is up.
14	TR_CHM_CARD_O FFLINE	1.3.6.1.4.1.6027.3.2 6.1.5.1.3	dellNetSysAlarmCa rdOffline	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a card is set to offline.
15	TR_CHM_CARD_ MISMATCH	1.3.6.1.4.1.6027.3.2 6.1.5.1.4	dellNetSysAlarmCa rdMismatch	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a card is not the same as configured

Table 7. SNMP Trap List (continued)

19	TR_CHM_RPM_UP	1.3.6.1.4.1.6027.3.2 6.1.5.1.5	dellNetSysAlarmRpmUp	DELL-NETWORKING-CHASSIS-MIB.mib	The primary RPM generate this trap when the primary RPM or the secondary RPM is up and running.
20	TR_CHM_RPM_DOWN	1.3.6.1.4.1.6027.3.2 6.1.5.1.6	dellNetSysAlarmRpmDown	DELL-NETWORKING-CHASSIS-MIB.mib	The primary RPM generate this trap when the secondary RPM is down, either by software reset or being physically removed from the chassis.
21	TR_CHM_PWRSRC_DOWN	1.3.6.1.4.1.6027.3.2 6.1.5.1.7	dellNetSysAlarmPowersupplyDown	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a power supply is not operational.
22	TR_CHM_MIN_ALARM_TEMP	1.3.6.1.4.1.6027.3.2 6.1.5.1.8	dellNetSysAlarmMinorTemperatureHigh	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when the chassis's temperature exceed the minor threshold.
23	TR_CHM_MAJ_ALARM_TEMP	1.3.6.1.4.1.6027.3.2 6.1.5.1.9	dellNetSysAlarmMajorTemperatureHigh	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when the chassis's temperature exceede the major threshold.
24	TR_CHM_FANTRAY_BAD	1.3.6.1.4.1.6027.3.2 6.1.5.1.10	dellNetSysAlarmFanTrayDown	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan tray is missing or down.
25	TR_CHM_PWRSRC_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.11	dellNetSysAlarmPowersupplyClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a power supply is now operational.
26	TR_CHM_MIN_ALARM_TEMP_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.12	dellNetSysAlarmMinorTemperatureClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when the chassis's temperature within the minor threshold.
27	TR_CHM_MAJ_ALARM_TEMP_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.13	dellNetSysAlarmMajorTemperatureClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when the chassis's temperature within the minor threshold.

Table 7. SNMP Trap List (continued)

28	TR_CHM_FANTRAY_BAD_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.14	dellNetSysAlarmFanTrayClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan tray is now operational.
29	TR_CHM_MIN_FANBAD_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.15	dellNetSysAlarmMinorFanBadClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a minor fan tray that was bad is now operational.
30	TR_CHM_FANTRAY_OR_PSU_BAD	1.3.6.1.4.1.6027.3.2 6.1.5.1.25	dellNetSysAlarmFanTrayOrPsuDown	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan tray or psu is missing or down.
31	TR_CHM_FANTRAY_OR_PSU_BAD_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.26	dellNetSysAlarmFanTrayOrPsuClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan tray or psu is now operational
32	TR_CHM_PSUFAN_FAIL	1.3.6.1.4.1.6027.3.2 6.1.5.1.25	dellNetSysAlarmFanTrayOrPsuDown	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan in a psu is down.
33	TR_CHM_PSUFAN_FAIL_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.26	dellNetSysAlarmFanTrayOrPsuClear	DELL-NETWORKING-CHASSIS-MIB.mib	The driver/agent generate this trap when a fan in a psu is now operational
34	TR_DYNAMIC_FANOUT	1.3.6.1.4.1.6027.3.1.1 .4.0.59	Not available.	Not available.	This is an informational message indicating that a port has been fanned out/fanned in.
39	TR_CHM_CPU_CLOCK_DEGRD	1.3.6.1.4.1.6027.3.2 6.1.5.1.47	dellNetSysAlarmCPUCLKDegraded	DELL-NETWORKING-CHASSIS-MIB.mib	Trap generated when a degradation is detected in CPU I/O bus clock signal
40	TR_TME_TASK_SUSPEND	1.3.6.1.4.1.6027.3.2 6.1.5.1.35	dellNetSysAlarmTaskSuspend	DELL-NETWORKING-CHASSIS-MIB.mib	The system generate this trap when a task is suspended.
41	TR_TME_TASK_TERM	1.3.6.1.4.1.6027.3.2 6.1.5.1.36	dellNetSysAlarmTaskTerm	DELL-NETWORKING-CHASSIS-MIB.mib	The system generate this trap when a task is terminated
42	TR_STP_NEW_ROOT	1.3.6.1.2.1.17.0.1	newRoot	BRIDGE-MIB.mib	802.1d new root trap support.
43	TR_STP_TOPOLOGY_CHANGE	1.3.6.1.2.1.17.0.2	topologyChange	BRIDGE-MIB.mib	802.1d topology change trap support.

Table 7. SNMP Trap List (continued)

44	TR_MSTP_NEW_ROOT_BRIDGE	1.3.6.1.4.1.6027.20.2.0.1	Not Available	Not Available	MSTP Not Supporting
45	TR_MSTP_NEW_ROOT_PORT	1.3.6.1.4.1.6027.20.2.0.2	Not Available	Not Available	MSTP Not Supporting
46	TR_MSTP_TOPOLOGY_CHANGE	1.3.6.1.4.1.6027.20.2.0.3	Not Available	Not Available	MSTP Not Supporting
47	TR_RSTP_NEW_ROOT	1.3.6.1.2.1.17.0.1	newRoot	BRIDGE-MIB.mib	802.1w new root trap support.
48	TR_RSTP_TOPOLOGY_CHANGE	1.3.6.1.2.1.17.0.2	topologyChange	BRIDGE-MIB.mib	802.1w topology change trap support.
49	TR_PVST_NEW_ROOT	1.3.6.1.2.1.17.0.1	newRoot	BRIDGE-MIB.mib	PVST new root trap support.
50	TR_PVST_TOPOLOGY_CHANGE	1.3.6.1.2.1.17.0.2	topologyChange	BRIDGE-MIB.mib	PVST topology change trap support.
51	TR_VRRP_LEAVE_MASTER	1.3.6.1.4.1.6027.3.2.6.1.5.1.44	dellNetSysAlarmVrrpGoMaster	DELL-NETWORKING-CHASSIS-MIB.mib	The VRRP generate this trap when it become a backup
52	TR_VRRP_GIVEUP_MASTER	1.3.6.1.4.1.6027.3.2.6.1.5.1.45	dellNetSysAlarmVrrpGiveupMaster	DELL-NETWORKING-CHASSIS-MIB.mib	The VRRP generate this trap when it is no longer the master and has entered non-operational state
53	TR_VRRP_NEW_MASTER.	1.3.6.1.2.1.68.0.1	vrrpTrapNewMaster	rfc2787.mib	The newMaster trap indicates that the sending agent has transitioned to 'Master' state.
54	TR_VRRP_AUTH_FAILURE.	1.3.6.1.2.1.68.0.2	vrrpTrapAuthFailure	rfc2787.mib	A vrrpAuthFailure trap signifies that a packet has been received from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type. Implementation of this trap is optional
55	TR_VRRPV3_LEAVE_MASTER	1.3.6.1.4.1.6027.3.2.6.1.5.1.44	dellNetSysAlarmVrrpGoMaster	DELL-NETWORKING-CHASSIS-MIB.mib	The VRRP generate this trap when it become a backup

Table 7. SNMP Trap List (continued)

56	TR_VRRPV3_GIVEUP_MASTER	1.3.6.1.4.1.6027.3.26.1.5.1.45	dellNetSysAlarmVrrpGiveupMaster	DELL-NETWORKING-CHASSIS-MIB.mib	The VRRP generate this trap when it is no longer the master and has entered non-operational state
57	TR_VRRPV3_NEW_MASTER	1.3.6.1.2.1.68.0.1	vrrpTrapNewMaster	draft-ietf-vrrp-unified-mib-06.mib	The newMaster trap indicates that the sending agent has transitioned to 'Master' state.
58	TR_VRRPV3_PROTOCOL_ERROR_REASON	1.3.6.1.2.1.68.0.3	vrrpTrapProtoError	draft-ietf-vrrp-unified-mib-06.mib	The error trap indicates that the sending agent has encountered the protocol error indicated by vrrpTrapProtoError Reason.
59	TR_BGP4_ESTABLISHED	1.3.6.1.4.1.6027.20.1.1.0.1	dellNetBgpM2Established	DELL-NETWORKING-BGP4-V2-MIB.mib	The BGP Established event is generated when the BGP FSM enters the ESTABLISHED state
60	TR_BGP4_BACKWARD_TRANSITION	1.3.6.1.4.1.6027.20.1.1.0.2	dellNetBgpM2BackwardTransition	DELL-NETWORKING-BGP4-V2-MIB.mib	The BGPBackwardTransition Event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state.
61	TR_ECFM_FAULT_ALARM	1.0.8802.1.1.3.0.1	dot1agCfmFaultAlarm	stdecfm.mib	A MEP has a persistent defect condition. A notification (fault alarm) is sent to the management entity with the OID of the MEP that has detected the fault. Whenever a MEP has a persistent defect, it may or may not generate a Fault Alarm to warn the system administrator of the problem, as controlled by the MEP Fault Notification

Table 7. SNMP Trap List (continued)

					<p>Generator State Machine and associated Managed Objects. If a defect with a higher priority is raised after a Fault Alarm has been issued, another Fault Alarm is issued. The management entity receiving the notification can identify the system from the network source address of the notification, and can identify the MEP reporting the defect by the indices in the OID of the dot1agCfmMepHighestPrDefect variable in the notification: dot1agCfmMdlIndex - Also the index of the MEP's Maintenance Domain table entry (dot1agCfmMdTable). dot1agCfmMdlIndex - Also an index (with the MD table index) of the MEP's Maintenance Association table entry (dot1agCfmMaTable). dot1agCfmMepIdentifier - MEP Identifier and final index into the MEP table (dot1agCfmMepTable).</p>
62	TR_EOAM_THRSHLD_EVT	1.3.6.1.2.1.158.0.1	dot3OamThresholdEvent	stdeoam.mib	"A dot3OamThresholdEvent notification is sent when a local or remote threshold crossing event is detected. A local threshold

Table 7. SNMP Trap List (continued)

					<p>crossing event is detected by the local entity, while a remote threshold crossing event is detected by the reception of an Ethernet OAM Event Notification OAMPDU that indicates a threshold event.</p> <p>This notification should not be sent more than once per second. The OAM entity can be derived from extracting the ifIndex from the variable bindings. The objects in the notification correspond to the values in a row instance in the dot3OamEventLog Table. The management entity should periodically check dot3OamEventLog Table to detect any missed events.</p>
63	TR_EOAM_NON_THRSHLD_EVT	1.3.6.1.2.1.158.0.2	dot3OamNonThresholdEvent	stdeoam.mib	<p>A dot3OamNonThresholdEvent notification is sent when a local or remote non-threshold crossing event is detected. A local event is detected by the local entity, while a remote event is detected by the reception of an Ethernet OAM Event Notification OAMPDU that indicates a non-threshold crossing event. This notification should not be sent more than once per second. The OAM entity can be derived from extracting the</p>

Table 7. SNMP Trap List (continued)

					ifIndex from the variable bindings. The objects in the notification correspond to the values in a row instance of the dot3OamEventLog Table. The management entity should periodically check dot3OamEventLog Table to detect any missed events
64	TR_FIPS_MAX_FCF_LIMIT_RCH	1.3.6.1.4.1.6027.3.2 2.4.0.1	dellNetMaxFcfsInVlanLmtRchTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when number of FCFs reached maximum allowed limit in VLAN
65	TR_FIPS_MAX_ENODE_LIMIT_RCH	1.3.6.1.4.1.6027.3.2 2.4.0.2	dellNetMaxENodesLmtRchTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when number of ENodes reached maximum allowed limit in the system
66	TR_FIPS_MAX_SESSION_LIMIT_RCH	1.3.6.1.4.1.6027.3.2 2.4.0.3	dellNetMaxSessionLmtRchTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when number of sessions reached maximum allowed limit in the system
67	TR_FIPS_FCF_DROP	1.3.6.1.4.1.6027.3.2 2.4.0.4	dellNetFcfDroppedTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when a new FCF discovered (Discovery Advertisement is received from FCF) is dropped, as the maximum allowed FCFs limit in a VLAN is already reached.
68	TR_FIPS_ENODE_DROP	1.3.6.1.4.1.6027.3.2 2.4.0.5	dellNetENodeDroppedTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when a new ENode discovered is dropped, as the maximum allowed ENodes limit in the system is already reached
69	TR_FIPS_SESSION_DROP	1.3.6.1.4.1.6027.3.2 2.4.0.6	dellNetSessionRequestDroppedTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when a new session request received is dropped, as the maximum allowed

Table 7. SNMP Trap List (continued)

					session limit in system is already reached.
70	TR_FIPS_ACL_INSTALL_FAIL	1.3.6.1.4.1.6027.3.2.2.4.0.7	dellNetAcclInstallationFailureTrap	DELL-NETWORKING-FIPSNOOPING-MIB.mib	This trap is sent when there is a problem in installing the ACL entries due to no space or hardware failure
71	TR_ETS_MODULE_STATUS_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.1	dellNetETSModuleStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated when there is a change in the ETS Module status. This trap is generated only if dellNetETSGlobalEnableTrap is enabled to send the trap
72	TR_ETS_ADMIN_MODE_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.2	dellNetETSPortAdminStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the ETS Admin status and the dellNetETSGlobalEnableTrap is enabled to send the trap for ETS Admin mode change
73	TR_ETS_PEER_STATUS_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.3	dellNetETSPortPeerStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the DCBX Peer Status and the dellNetETSGlobalEnableTrap is enabled to send the trap for Peer Up or Peer Down
74	TR_ETS_OPERATIONAL_STATE_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.4	dellNetETSPortDcbxOperStateTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the ETS Operational State and the dellNetETSGlobalEnableTrap is enabled to send

Table 7. SNMP Trap List (continued)

					the trap for ETS state machine state change
75	TR_PFC_MODULE_STATUS_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.5	dellNetPFCModuleStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated when there is a change in the PFC Module status is enabled. This trap is generated only if dellNetPFCGlobalEnableTrap is enabled to send the trap
76	TR_PFC_ADMIN_MODE_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.6	dellNetPFCPortAdminStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the PFC Admin Status and the dellNetPFCGlobalEnableTrap is enabled to send the trap for PFC Admin Status change
77	TR_PFC_PEER_STATUS_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.7	dellNetPFCPortPeerStatusTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the DCBX Peer Status and the dellNetPFCGlobalEnableTrap is enabled to send the trap for Peer Up or Peer Down
78	TR_PFC_OPERATIONAL_STATE_CHANGE	1.3.6.1.4.1.6027.3.15.4.0.8	dellNetPFCPortDcbxOperStateTrap	DELL-NETWORKING-DCB-MIB.mib	This trap is generated in the following conditions. Whenever there is a change in the PFC Operational State and the dellNetPFCGlobalEnableTrap is enabled to send the trap for PFC state machine state change

Table 7. SNMP Trap List (continued)

79	TR_MPLS_TUNNEL_UP	1.3.6.1.2.1.10.166.3.0.1	mplsTunnelUp	rfc3812.mib	This trap is generated when an lsp on a tunnel changed its operational status to up
80	TR_MPLS_TUNNEL_DOWN	1.3.6.1.2.1.10.166.3.0.2	mplsTunnelDown	rfc3812.mib	This trap is generated when an lsp on a tunnel changed its operational status to down
81	TR_MPLS_TUNNEL_RRTD	1.3.6.1.2.1.10.166.3.0.3	mplsTunnelRerouted	rfc3812.mib	This trap is generated when the path taken by a tunnel was changed.
82	TR_MPLS_TUNNEL_REOP	1.3.6.1.2.1.10.166.3.0.4	mplsTunnelReoptimized	rfc3812.mib	This trap is generated when a tunnel was reoptimized.
89	TR_CHM_MAJ_ALARM_PS	1.3.6.1.4.1.6027.3.2.6.1.5.1.16	dellNetSysAlarmMajorPS	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a power supply major alarm is issued.
90	TR_CHM_MAJ_ALARM_PS_CLR	1.3.6.1.4.1.6027.3.2.6.1.5.1.17	dellNetSysAlarmMajorPSClr	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a power supply major alarm is cleared.
91	TR_CHM_MIN_ALARM_PS	1.3.6.1.4.1.6027.3.2.6.1.5.1.18	dellNetSysAlarmMinorPS	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a power supply minor alarm is issued.
92	TR_CHM_MIN_ALARM_PS_CLR	1.3.6.1.4.1.6027.3.2.6.1.5.1.19	dellNetSysAlarmMinorPSClr	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a power supply minor alarm is cleared.
93	TR_CHM_MIN_FANBAD	1.3.6.1.4.1.6027.3.2.6.1.5.1.20	dellNetSysAlarmMinorFanBad	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when fan is bad.
94	TR_SYSADM_CPU_THRESHOLD	1.3.6.1.4.1.6027.3.2.6.1.5.1.31	dellNetSysAlarmExdCpuThreshold	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when cpu utilization exceeded 80%.
95	TR_SYSADM_CPU_THRESHOLD_CLR	1.3.6.1.4.1.6027.3.2.6.1.5.1.32	dellNetSysAlarmClrCpuThreshold	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when cpu utilization falls below threshold.

Table 7. SNMP Trap List (continued)

96	TR_SYSADM_MEMORY_THRESHOLD	1.3.6.1.4.1.6027.3.2 6.1.5.1.33	dellNetSysAlarmExdMemThreshold	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when memory utilization exceeded 92%.
97	TR_SYSADM_MEMORY_THRESHOLD_CLR	1.3.6.1.4.1.6027.3.2 6.1.5.1.34	dellNetSysAlarmClrMemThreshold	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when memory utilization falls below threshold
98	TR_MACMGR_STATION_MOVE	1.3.6.1.4.1.6027.3.2 6.1.5.1.37	dellNetSysAlarmMacStationMove	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a MAC station move exceed the threshold
99	TR_CHM_RPM_PRIMARY	1.3.6.1.4.1.6027.3.2 6.1.5.1.21	dellNetSysAlarmRpmPrimary	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when a standby RPM become Primary RPM after failover.
100	TR_SNMP_IP_ACL_FAILED	1.3.6.1.4.1.6027.3.2 6.1.5.1.22	dellNetSysSnmplpAcIdeny	DELL-NETWORKING-CHASSIS-MIB.mib	The agent generate this trap when SNMP Agent deny a SNMP request based on the IP ACL rules.
102	TR_LLDP_REMOTE_TABLE_CHANGE	1.0.8802.1.1.2.0.0.1	lldpRemTablesChange	lldp.mib	A lldpRemTablesChange notification is sent when the value of lldpStatsRemTableLastChangeTime changes. It can be utilized by an NMS to trigger LLDP remote systems table maintenance polls. Note that transmission of lldpRemTablesChange notifications are throttled by the agent, as specified by the 'lldpNotificationInterval' object.
103	TR_LLDP_MED_TOPOLOGY_CHANGE	1.0.8802.1.1.2.1.5.47 95.0.1	lldpXMedTopologyChangeDetected	lldp-ext-med.mib	A notification generated by the local device sensing a change in the topology that indicates that a new remotedevice attached to a local port, or a

Table 7. SNMP Trap List (continued)

					remote device disconnected or moved from one port to another
104	TR_OPENFLOW_SNMP_CNTRLR_STATUS_TRAP	1.3.6.1.4.1.6027.3.2.0.2.0.1	ofSwitchCntlrSessionStatusChanged	DELL-NETWORKING-OPENFLOW-MIB.mib	This notification is sent when ever Controller's Session Status has changed
105	TR_OPENFLOW_SNMP_FLOW_TABLE_TRAP	1.3.6.1.4.1.6027.3.2.0.2.0.2	ofSwitchFlowTableFull	DELL-NETWORKING-OPENFLOW-MIB.mib	This notification is sent when ever Flow Table reached its maximum capacity. ofSwitchFlowTable Src gives the id of the Flow Table that reached max flows
106	TR_RMON_RISING_THRESHOLD	1.3.6.1.2.1.16.0.1	risingAlarm	rfc2819.mib	The SNMP trap that is generated when an alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps.
107	TR_RMON_FALLING_THRESHOLD	1.3.6.1.2.1.16.0.2	fallingAlarm	rfc2819.mib	The SNMP trap that is generated when an alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps.
108	TR_RMON_HC_RISING_THRESHOLD	1.3.6.1.2.1.16.29.2.0.1	hcRisingAlarm	rfc3434.mib	The SNMP notification that is generated when a high capacity alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps. The hcAlarmEntry object instances identified in the OBJECTS clause are from the entry that causes this notification to be generated.

Table 7. SNMP Trap List (continued)

109	TR_RMON_HC_FALLING_THRESHOLD	1.3.6.1.2.1.16.29.2.0.2	hcFallingAlarm	rfc3434.mib	The SNMP notification that is generated when a high capacity alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps. The hcAlarmEntry object instances identified in the OBJECTS clause are from the entry that causes this notification to be generated.
110	TR_COPY_CONFIG_COMPLETE	1.3.6.1.4.1.6027.3.5.1.2.0.1	copyConfigCompleted	DELL-NETWORKING-COPY-CONFIG-MIB.mib	The agent generate this trap when a copy operational is completed
111	TR_CONFIG_CONFLICT	1.3.6.1.4.1.6027.3.5.1.2.0.2	configConflict	DELL-NETWORKING-COPY-CONFIG-MIB.mib	The agent generate this trap when a configuration conflict found during audit.
112	TR_CONFIG_CONFLICT_CLEAR	1.3.6.1.4.1.6027.3.5.1.2.0.3	configConflictClear	DELL-NETWORKING-COPY-CONFIG-MIB.mib	The agent generate this trap when a configuration conflict resolved during audit
113	TR_BATCH_CONFIG_IN_PROGRESS	1.3.6.1.4.1.6027.3.5.1.2.0.4	batchConfigCommitProgress	DELL-NETWORKING-COPY-CONFIG-MIB.mib	The agent generate this trap when a configuration commit is initiated
114	TR_BATCH_CONFIG_COMPLETE	1.3.6.1.4.1.6027.3.5.1.2.0.5	batchConfigCommitCompleted	DELL-NETWORKING-COPY-CONFIG-MIB.mib	The agent generate this trap when a configuration commit is completed
115	TR_LINK_BUNDLE_UNEVEN_DISTRIBUTION	1.3.6.1.4.1.6027.3.2.2.1.1	linkBundleImbalance	DELL-NETWORKING-LINK-AGGREGATION-MIB.mib	Trap generated when traffic imbalance observed in Link Bundle
116	TR_LINK_BUNDLE_UNEVEN_DISTRIBUTION_ALARM_CLEAR	1.3.6.1.4.1.6027.3.2.2.1.2	linkBundleImbalanceClear	DELL-NETWORKING-LINK-AGGREGATION-MIB.mib	Trap generated when traffic imbalance is no longer observed

Table 7. SNMP Trap List (continued)

117	TR_CAM_THRESH OLD_EXCEED	1.3.6.1.4.1.6027.3.7. 1.2.0.1	camUsageThreshol dExceed	DELL- NETWORKING- SYSTEM- COMPONENT- MIB.mib	The agent generate this trap when the cam usage for a partition is exceeded
118	TR_CAM_IS_FULL	1.3.6.1.4.1.6027.3.7. 1.2.0.2	camIsFull	DELL- NETWORKING- SYSTEM- COMPONENT- MIB.mib	The agent generate this trap when the cam is fully used.
119	TR_CAM_AUDIT_E RROR	1.3.6.1.4.1.6027.3.7. 1.2.0.3	camAuditError	DELL- NETWORKING- SYSTEM- COMPONENT- MIB.mib	The agent generate this trap when a cam entry mismatches with the Software entry
128	TR_VLT_ROLE_C HANGE	1.3.6.1.4.1.6027.3.17 .2.0.1	dellNetVLTRoleCha nge	DELL- NETWORKING- VIRTUAL-LINK- TRUNK-MIB.mib	The agent generates this notification to denote the change in role of the VLT device in the VLT domain. This notification carries the information about the new role. The possible roles are as follows: 1. StandAlone 2. Primary 3. Secondary
129	TR_VLT_ICL_STA TUS_CHANGE	1.3.6.1.4.1.6027.3.17 .2.0.2	dellNetVLTIClStatu sChange	DELL- NETWORKING- VIRTUAL-LINK- TRUNK-MIB.mib	The agent generates this notification to denote the change in InterConnect Link Status.The notification contains information on the new ICL status. The possible states are as follows: 1. NotEstablished 2. LinkUp 3. LinkDown 4. LinkError"
130	TR_VLT_PEER_ST ATUS_CHANGE	1.3.6.1.4.1.6027.3.17 .2.0.3	dellNetVLTPeerSta tusChange	DELL- NETWORKING- VIRTUAL-LINK- TRUNK-MIB.mib	The agent generates this notification to denote the change in Status of the Peer in the VLT domain. This notification contains information on the

Table 7. SNMP Trap List (continued)

					new status of the peer device. The possible states are as follows: <ol style="list-style-type: none"> 1. NotEstablished 2. PeerUp 3. PeerDown 4. LinkDown"
131	TR_VLT_HBEAT_STATUS_CHANGE	1.3.6.1.4.1.6027.3.17.2.0.4	dellNetVLTHBeatStatusChange	DELL-NETWORKING-VIRTUAL-LINK-TRUNK-MIB.mib	The agent generates this notification to denote the change in Backup Link Status. The notification contains information on the new BackupLink Status. The possible states are as follows: <ol style="list-style-type: none"> 1. NotEstablished 2. LinkUp 3. LinkDown 4. LinkError"
132	TR_VLT_ICL_BW_THRESHOLD_EXCEEDED	1.3.6.1.4.1.6027.3.17.2.0.5	dellNetVLTiclBwUsageExceed	DELL-NETWORKING-VIRTUAL-LINK-TRUNK-MIB.mib	The IFM agent generates this notification to denote the change in Bandwidth usage of ICL Link, when it crosses the threshold above 80 %. The possible states are as follows: <ol style="list-style-type: none"> 0. Below threshold 1. Above threshold"
133	TR_VLT_DOMAIN_CFG_ERROR	1.3.6.1.4.1.6027.3.17.2.0.6	dellNetVLTDomainConfigError	DELL-NETWORKING-VIRTUAL-LINK-TRUNK-MIB.mib	The agent generates this notification to denote there is a error/conflict in the VLT domain config parameters (either locally or in remote node which prevent the peer up. The mismatch can be domain Id, unitId, version or system MAC. The notification contains information on the error/mismatch type

Table 7. SNMP Trap List (continued)

134	TR_ISIS_ADJ_CHANGE	1.3.6.1.4.1.6027.3.18.0.1	dellNetIsmAdjChanges	DELL-NETWORKING-ISIS-MIB.mib	This notification is generated when adjacency relationship changes take place
135	TR_LACP_STATE_CHANGE	1.3.6.1.4.1.6027.3.2.2.0.1	dot3adAggLacpStateChange	DELL-NETWORKING-LINK-AGGREGATION-MIB.mib	The dot3adAggLacpStateChange indicates that the agent has detected a change in the LACP state for one of the member ports of the aggregation link. This notification contains the information on the port which has gone through the state change and the operational state information of the actor and its partner
138	TR_ENT_CONFIG_CHANGE	1.3.6.1.2.1.47.2.0.1	entConfigChange	entity.mib	An entConfigChange notification is generated when the value of entLastChangeTime changes. It can be utilized by an NMS to trigger logical/physical entity table maintenance polls. An agent should not generate more than one entConfigChange 'notification-event' in a given time interval (five seconds is the suggested default). A 'notification-event' is the transmission of a single trap or inform PDU to a list of notification destinations. If additional configuration changes occur within the throttling period, then notification-events for these changes should be

Table 7. SNMP Trap List (continued)

					suppressed by the agent until the current throttling period expires. At the end of a throttling period, one notification-event should be generated if any configuration changes occurred since the start of the throttling period. In such a case, another throttling period is started right away. An NMS should periodically check the value of entLastChangeTime to detect any missed entConfigChange notification-events, e.g., due to throttling or transmission loss.
139	TR_CHM_STACK_UNIT_ROLE	1.3.6.1.4.1.6027.3.2 6.1.5.1.46	dellNetSysAlarmStackUnitRoleChanged	DELL-NETWORKING-CHASSIS-MIB.mib	Trap generated when a stack unit's role in a stack changes to management/standby/member
140	TR_CHM_VERSION_MISMATCH	1.3.6.1.4.1.6027.3.2 6.1.5.1.23	dellNetSysAlarmCardVersionMismatch	DELL-NETWORKING-CHASSIS-MIB.mib	Trap generated when the stack unit software version is not compatible.
141	TR_PROD_STATUSES_CHANGE	1.3.6.1.4.1.674.1089 5.3000.2.1.0.1	productStatusGlobalStatusChange	Dell_ITA.Rev_1_1.mib	This trap is sent when the product global status changes
142	TR_CHM_UNSUPPORTED_OPTICS	1.3.6.1.4.1.6027.3.2 6.1.5.1.24	dellNetSysAlarmUnsupportedOptic	DELL-NETWORKING-CHASSIS-MIB.mib	The Interface Agent generate this trap when an unsupported optic is inserted in a port
143	TR_HGLBM_IMBALANCE	1.3.6.1.4.1.6027.3.2 4.3.1.1	bpLinkBundleImbalance	DELL-NETWORKING-BPSTATS-MIB.mib	Trap generated when traffic imbalance observed in BP Link Bundles
144	TR_HGLBM_IMBALANCE_CLEAR	1.3.6.1.4.1.6027.3.2 4.3.1.2	bpLinkBundleImbalanceClear	DELL-NETWORKING-BPSTATS-MIB.mib	Trap generated when traffic imbalance is no

Table 7. SNMP Trap List (continued)

					longer observed on Bp Link bundles
145	TR_BRM_PE_UP	1.3.6.1.4.1.6027.3.2 6.1.5.1.27	dellNetSysAlarmPE Up	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a PE operational status is up. Applicable for C9010
146	TR_BRM_PE_DOWN	1.3.6.1.4.1.6027.3.2 6.1.5.1.28	dellNetSysAlarmPE Down	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a PE operational status is down
147	TR_BRM_PE_UNIT_UP	1.3.6.1.4.1.6027.3.2 6.1.5.1.29	dellNetSysAlarmPE UnitUp	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a PE Unit operational status is up
148	TR_BRM_PE_UNIT_DOWN	1.3.6.1.4.1.6027.3.2 6.1.5.1.30	dellNetSysAlarmPE UnitDown	DELL- NETWORKING- CHASSIS-MIB.mib	The driver/agent generate this trap when a PE Unit operational status is down
149	TR_SYSLOG_SERVER_CONNECTION_SUCCESSFUL	1.3.6.1.4.1.6027.3.3 0.1.1.2	Not Available	Not Available	Connecting to server with Valid configuration.
150	TR_SYSLOG_SERVER_CONNECTION_FAILURE	1.3.6.1.4.1.6027.3.3 0.1.1.1	Not Available	Not Available	Not able to connecting with server with Invalid configuration.