
 
Dell™ 1350cnw Color Printer Quick Reference Guide




About Your Printer

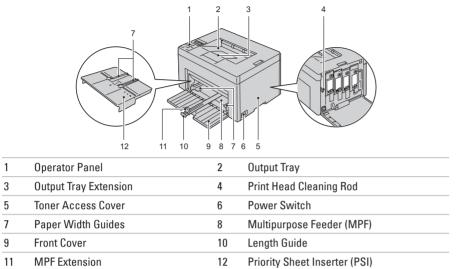




1	Ready/Error indicator	 Green: Printer is ready. Orange: An error has occurred. Orange and blinking: An unrecoverable print error has occurred.
2	LCD panel	Displays the printer status and messages.
3	C buttons	In the Menu mode, selects submenus or setting values.
4	√ button	In the Menu mode, displays the selected item and determines the selected value.
5	X (Cancel) button	Cancels the current print job.
6	🗐 (Menu) button	Switches between the Menu and the Print mode.
7	V A buttons	In the Menu mode, scrolls through menus or items.

Locating the Service Tag

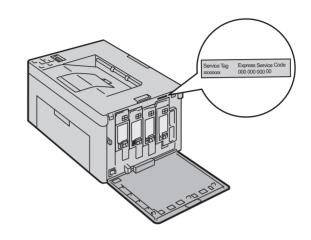

Loading Letterhead

Load the letterhead in the printer with the print-side facing up. Ensure that the title on the letter head enters the printer first.

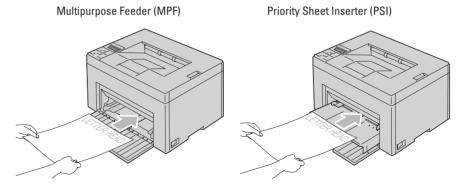



Loading Envelopes

Load envelopes in the printer as shown below:


- **NOTE:** When you print on envelopes, be sure to specify the envelope setting on the printer driver. If not specified, the print image will be rotated 180 degrees.
 - Envelope#10, DL, or Monarch
 - Multipurpose Feeder (MPF)

  Priority Sheet Inserter (PSI)





 To prevent DL and Monarch from being wrinkled, they are recommended to be loaded with the print-side facing up, flap opened, and facing you.






Priority Sheet Inserter (PSI)

 C5





Finding Information

For more information, see the following documents available on the *Drivers and Utilities* disc.

- Setup Guide Setup instructions for printer hardware. Access to software and drivers.
- User's Guide Additional information about printer components, paper jam clearance, and consumable replacement.

Troubleshooting


Clearing jams

- See "Clearing Jams" in the User's Guide
- Print quality and other printing problems
- See "Troubleshooting" in the User's Guide
- Common error messages
- See "Understanding Printer Messages" in the User's Guide

Identifying the Location of Paper Jams

The paper jams may occur at any of the locations shown below:

CAUTION: To avoid permanent damage to your printer, do not attempt to clear paper jams using any tools or instruments.

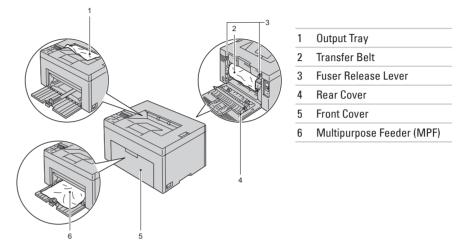

Printing the Printer Settings Page

- 1 In the operator panel, press the 🗐 (Menu) button.
- 2 Ensure that Report/List appears, and then press the \checkmark button.
- 3 Ensure that Printer Setting appears, and then press the √ button. The printer settings page is printed.

Cleaning the Printer

Vertical blanks appearing in prints

- See "Maintaining Your Printer" in the User's Guide
- An alert for the CTD sensor appears
- See "Maintaining Your Printer" in the User's Guide

Replacing Toners

To replace toners

See "Maintaining Your Printer" in the User's Guide