

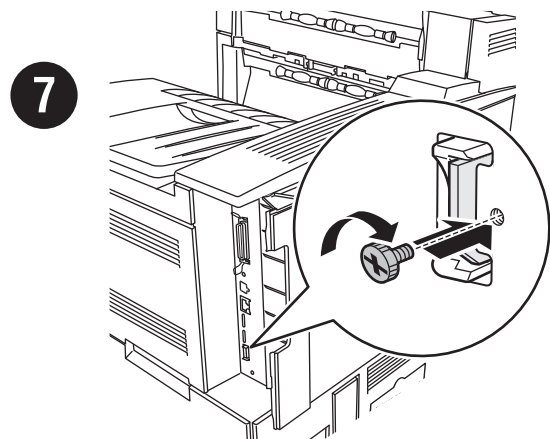
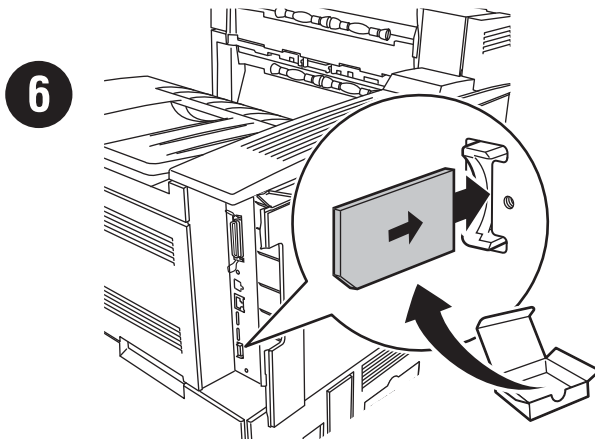
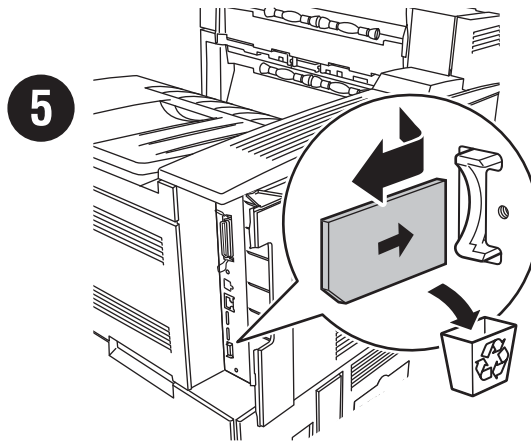
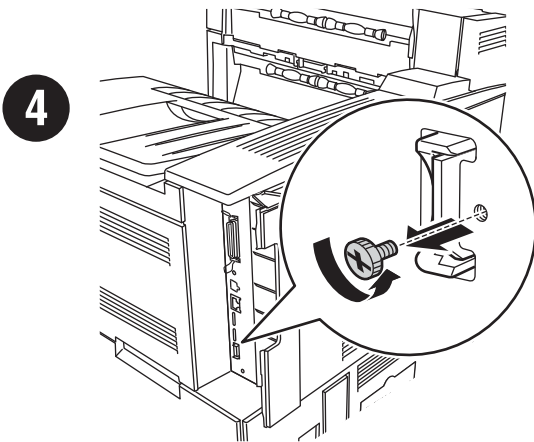
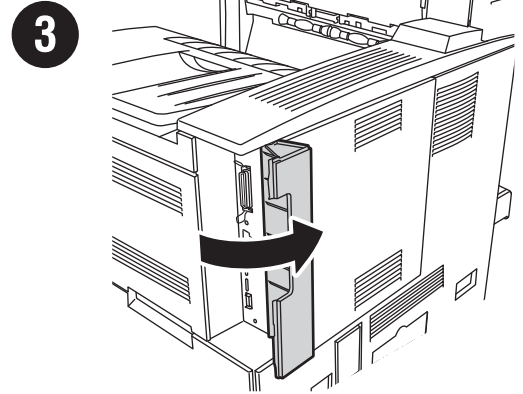
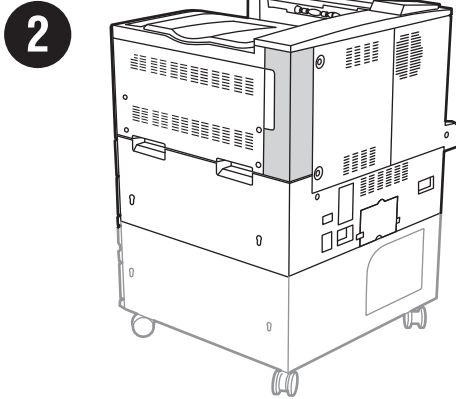


7330 Mono Laser Printer Configuration Card

Carte de configuration • Scheda di configurazione • Konfigurationskarte • Tarjeta de configuración

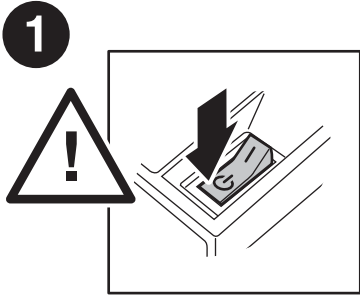

8

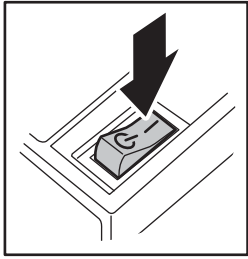

9

Confirm installation

Confirmez l'installation
Confermare l'installazione
Installation bestätigen
Confirmar instalación

Print Configuration Page

Imprimez la page de configuration
Stampare la pagina di configurazione
Konfigurationsseite drucken
Imprimir página de configuración

