


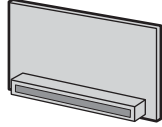
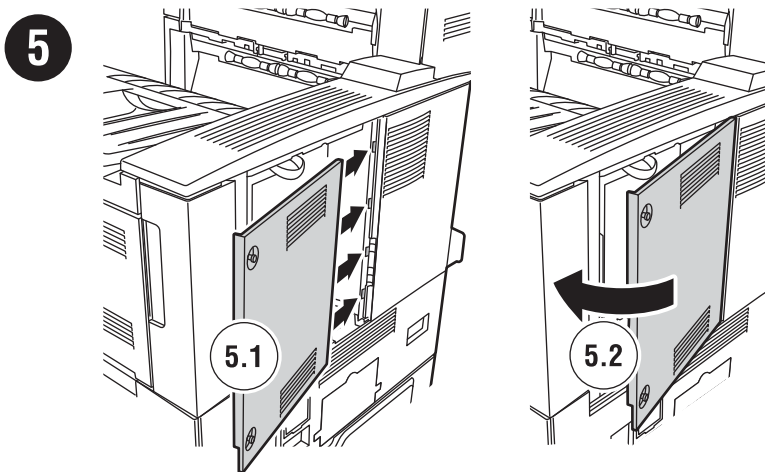
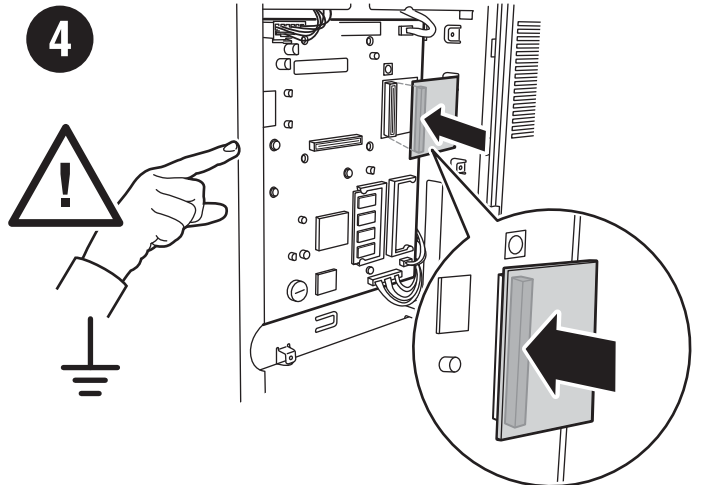


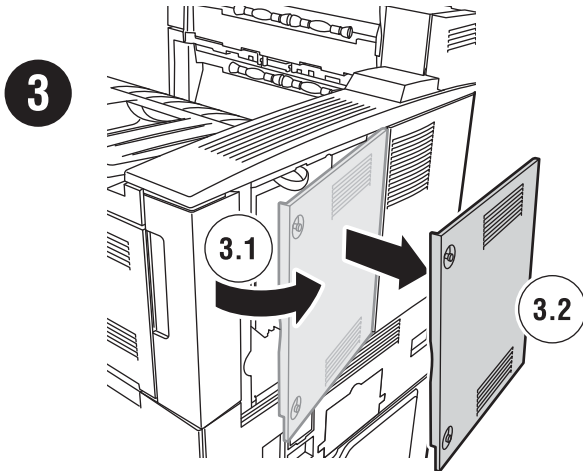


7330 Mono Laser Printer Flash Memory

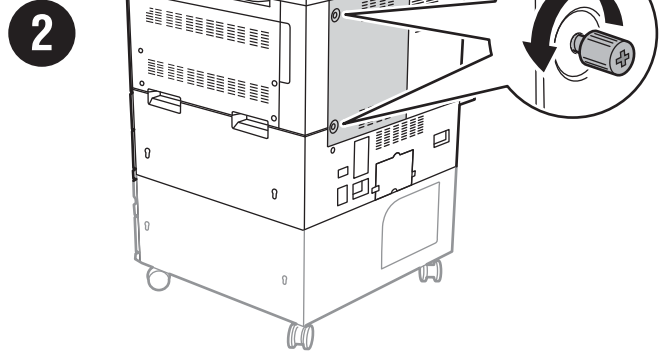


Mémoire Flash • Memoria Flash • Flash-Speicher • Memoria flash

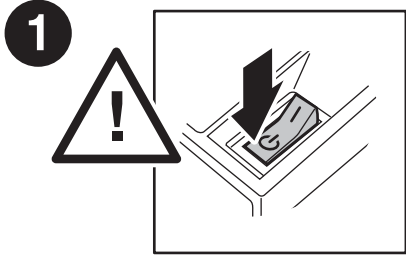

6

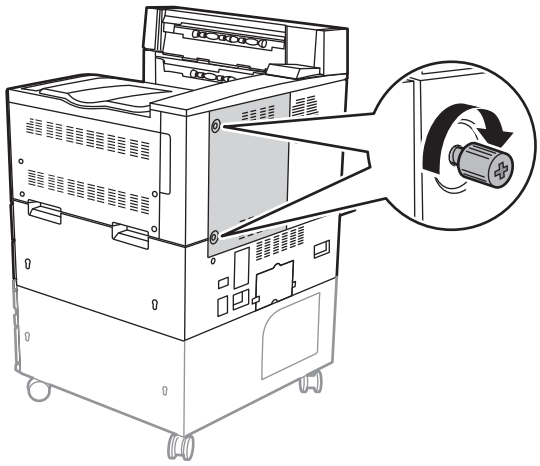

7

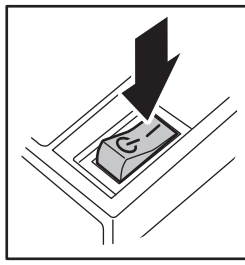

8

Confirm installation

Confirmez l'installation
 Confermare l'installazione
 Installation bestätigen
 Confirmar instalación

Print Configuration Page

Imprimez la page de configuration
 Stampare la pagina di configurazione
 Konfigurationsseite drucken
 Imprimir página de configuración

