


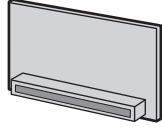
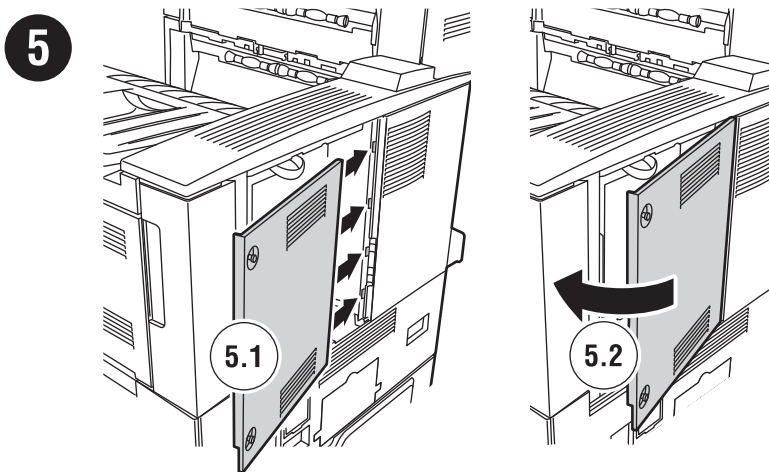
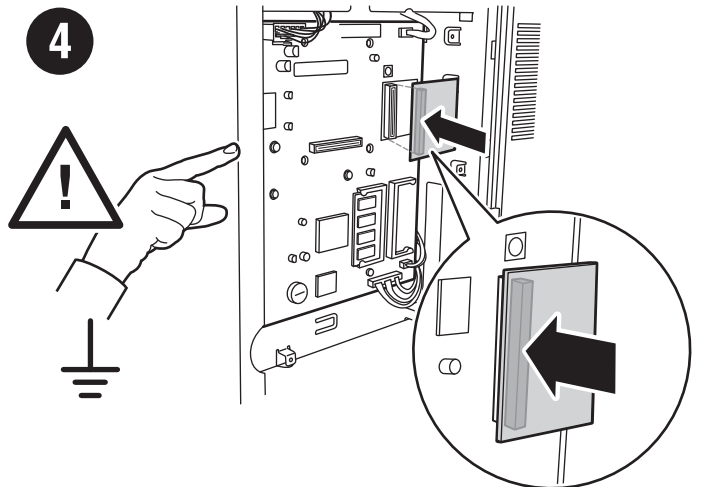


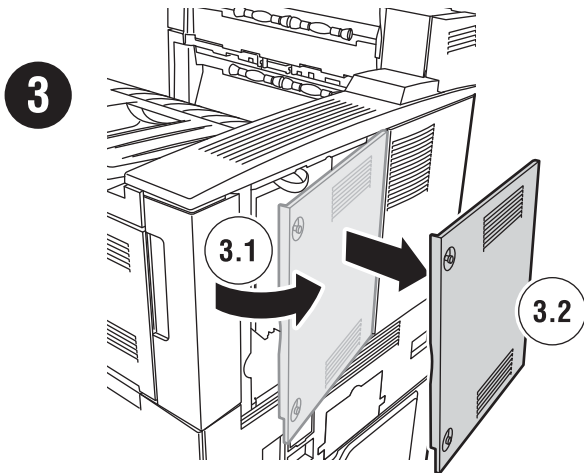


# 7330 Mono Laser Printer Flash Memory

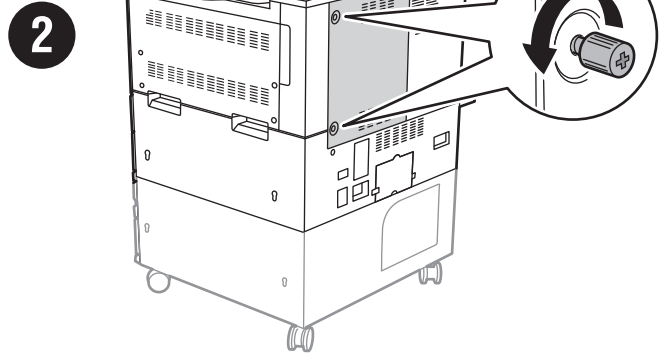


Mémoire Flash • Memoria Flash • Flash-Speicher • Memoria flash

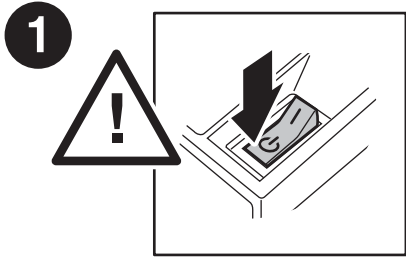

6

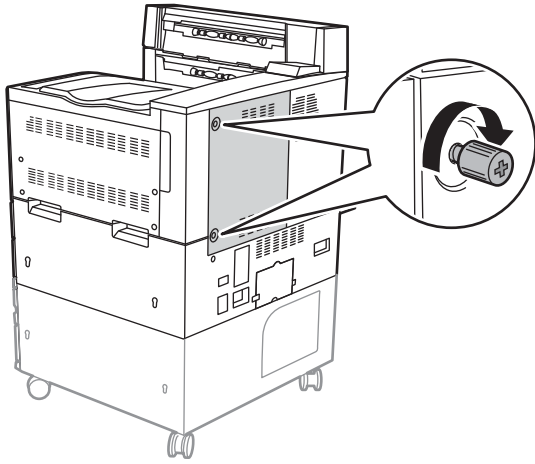

7

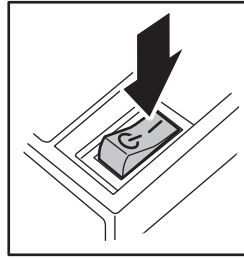

8

### Confirm installation

Confirmez l'installation  
 Confermare l'installazione  
 Installation bestätigen  
 Confirmar instalación

### Print Configuration Page

Imprimez la page de configuration  
 Stampare la pagina di configurazione  
 Konfigurationsseite drucken  
 Imprimir página de configuración

