


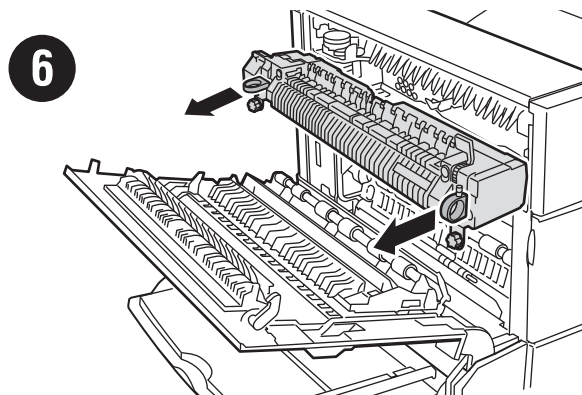
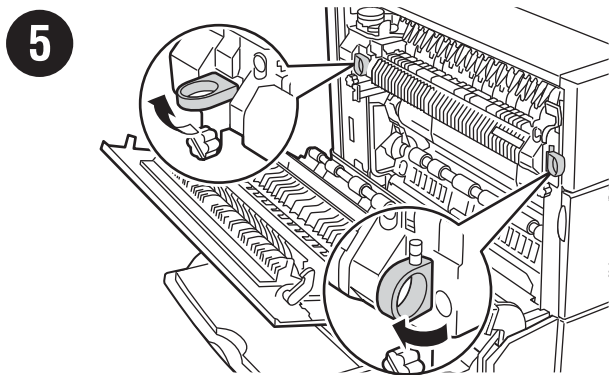
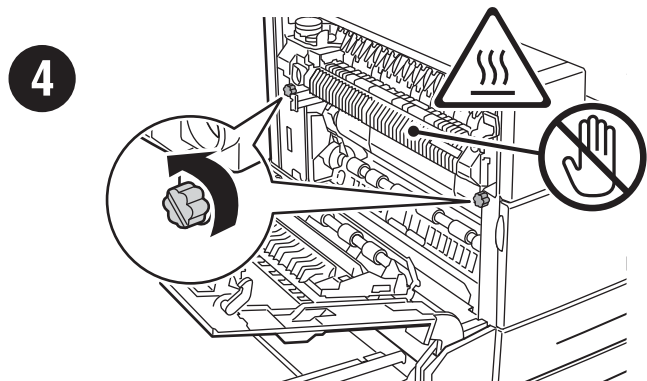
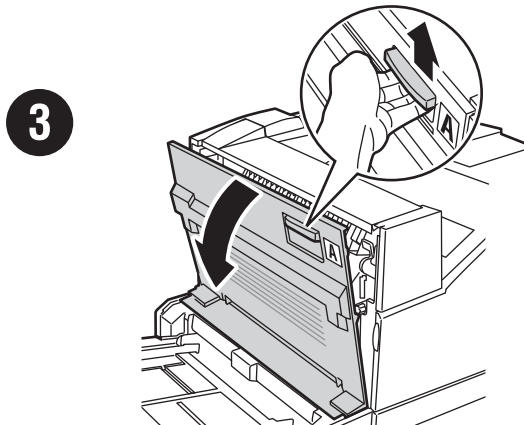
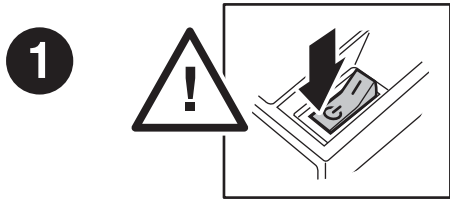
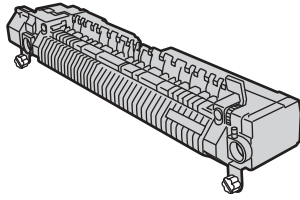
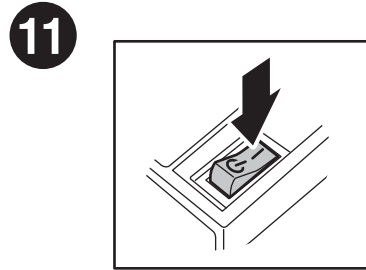
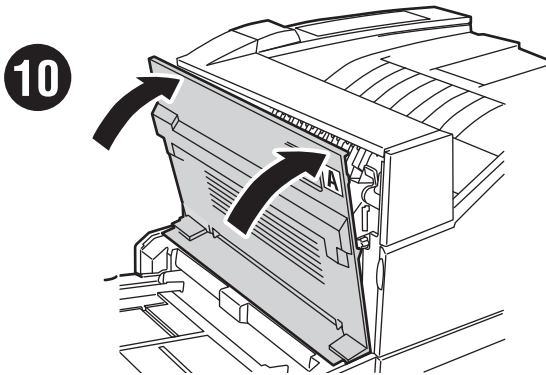


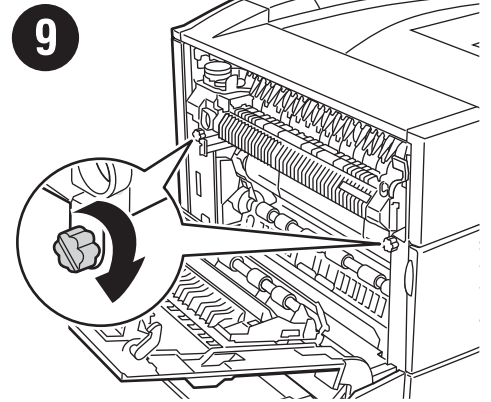


# 7330 Mono Laser Printer Fuser

Fuser • Fusore • Fixiereinheit • Fusor

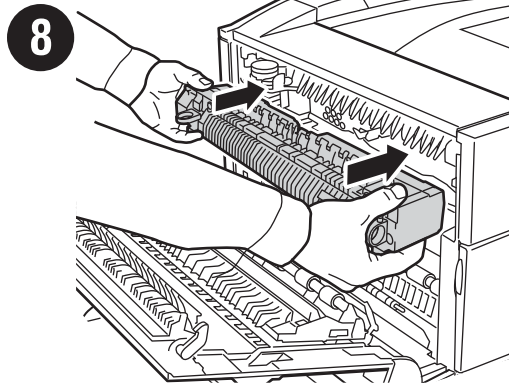

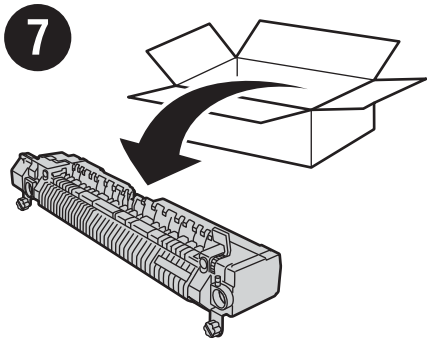

**12** **Print Menu Map**  
 Imprimez la carte du menu  
 Stampare il diagramma dei menu  
 Menüübersicht drucken  
 Imprimir mapa de menús

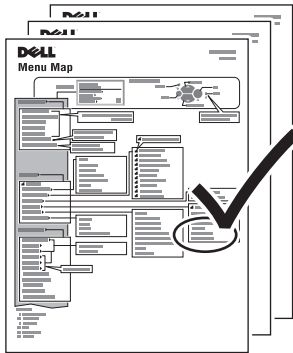

**Reset Fuser Life**  
 Réinitialisez le compteur du fuser  
 Ripristinare la durata del fusore  
 Lebensdauer der Fixiereinheit zurücksetzen  
 Restablecer vida útil del fusor

