

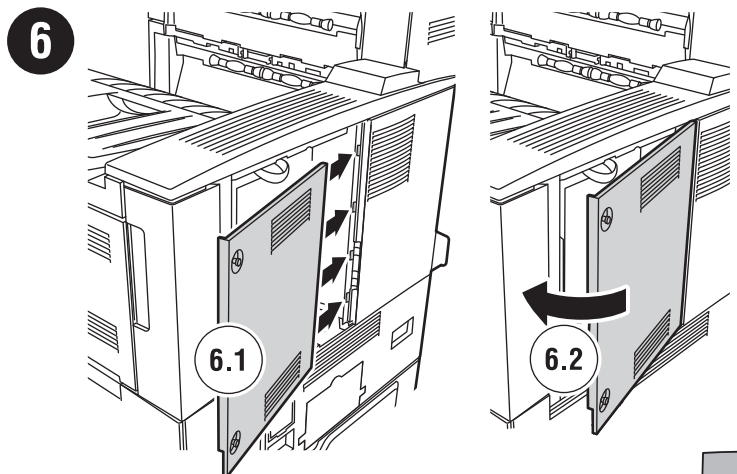
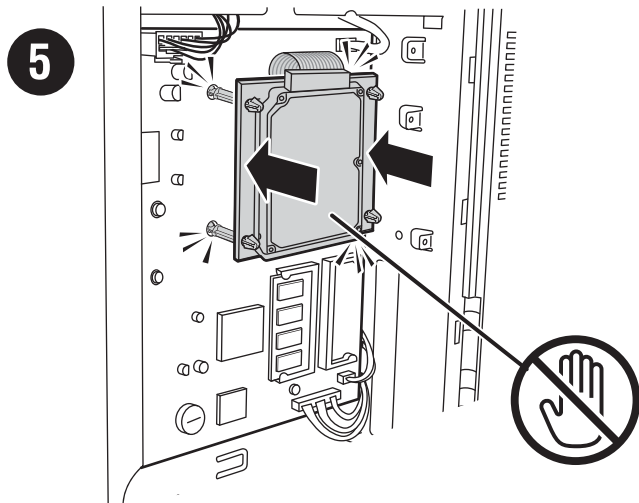
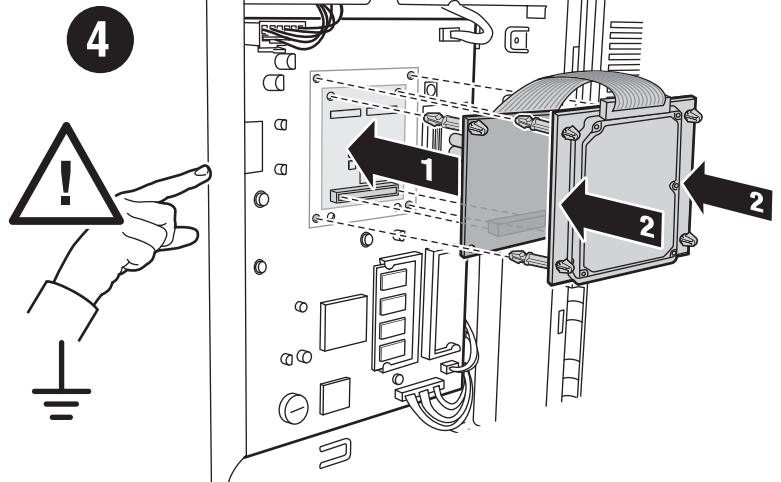
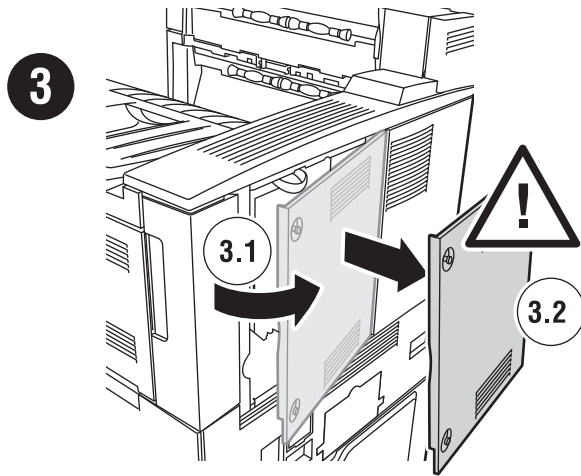
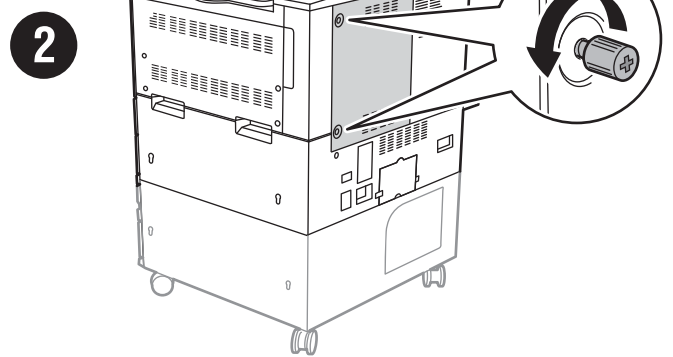


# 7330 Mono Laser Printer Hard Drive


Disque dur • Disco rigido • Festplatte • Unidad de disco duro

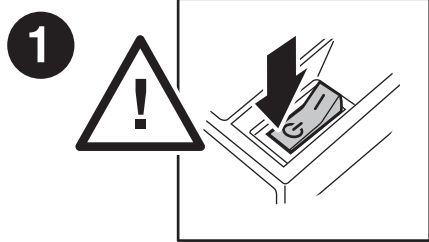

7

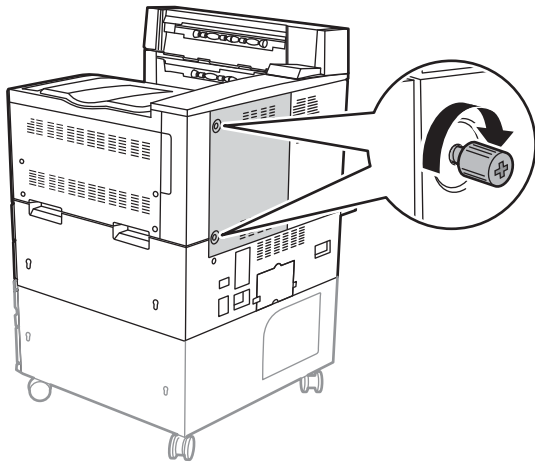

8

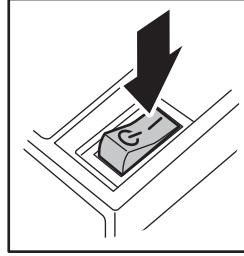

9

### Confirm installation

Confirmez l'installation  
 Confermare l'installazione  
 Installation bestätigen  
 Confirmar instalación

### Print Configuration Page

Imprimez la page de configuration  
 Stampare la pagina di configurazione  
 Konfigurationsseite drucken  
 Imprimir página de configuración

