

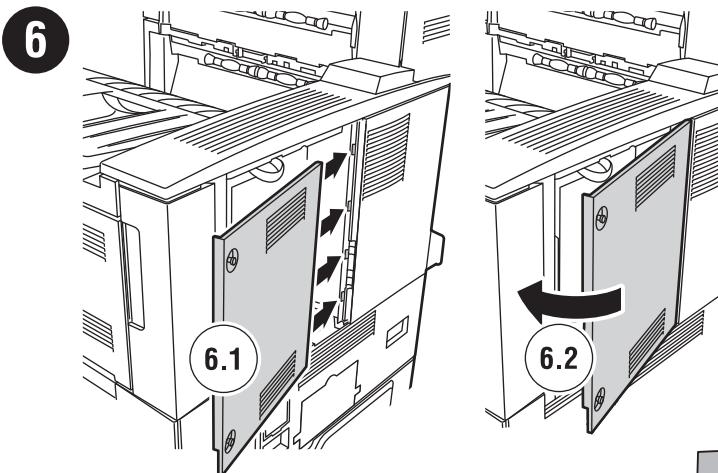
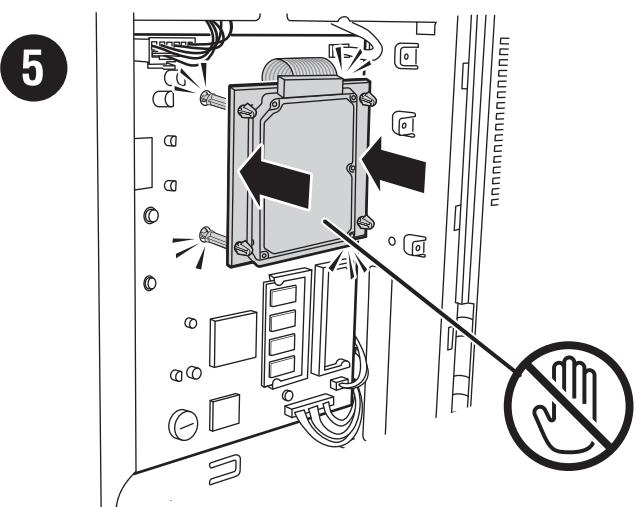
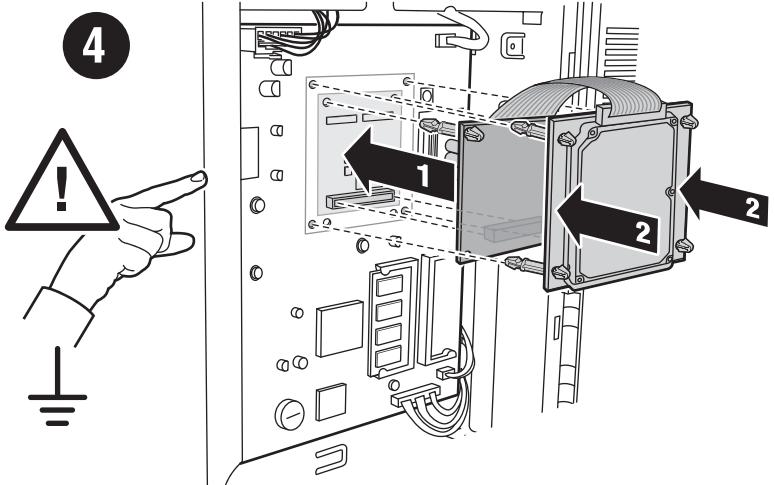
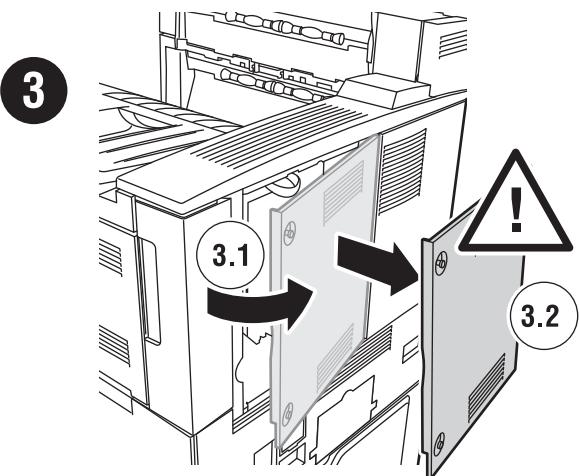
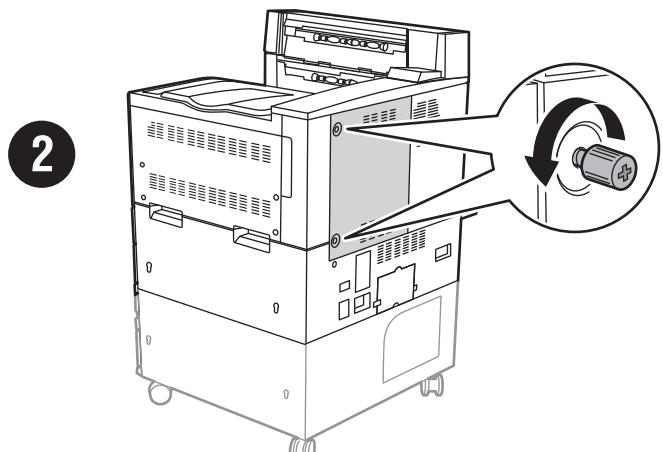
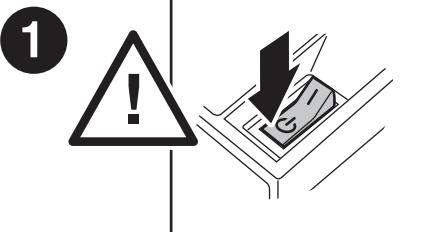
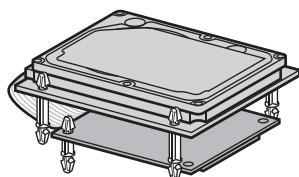


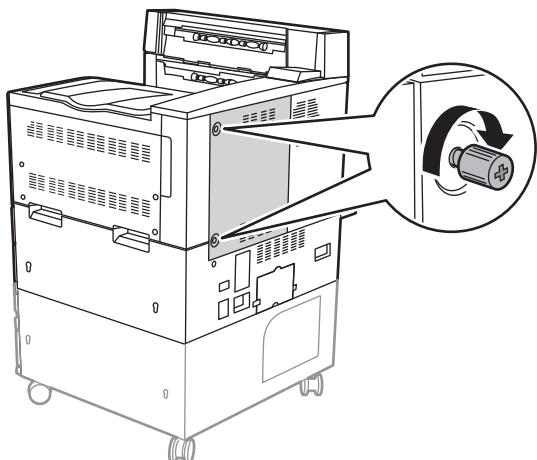

## 7330 Mono Laser Printer Hard Drive

Disque dur • Disco rígido • Festplatte • Unidad de disco duro

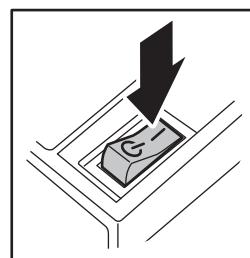

**7****8****9**

### Confirm installation

Confirmez l'installation  
Confermare l'installazione  
Installation bestätigen  
Confirmar instalación

### Print Configuration Page

Imprimez la page de configuration  
Stampare la pagina di configurazione  
Konfigurationsseite drucken  
Imprimir página de configuración

