

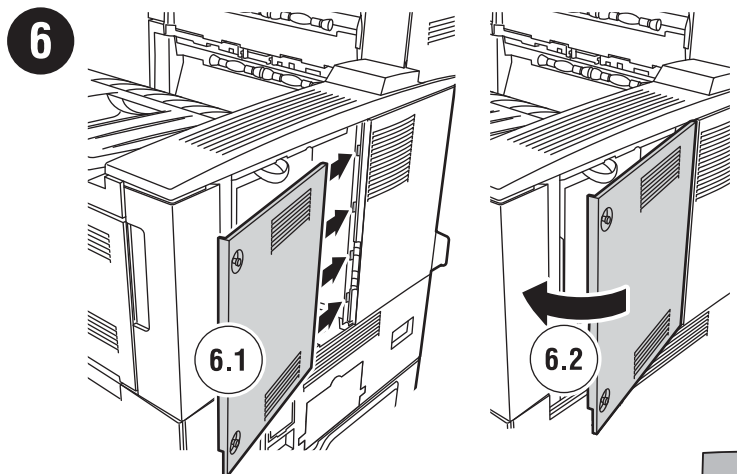
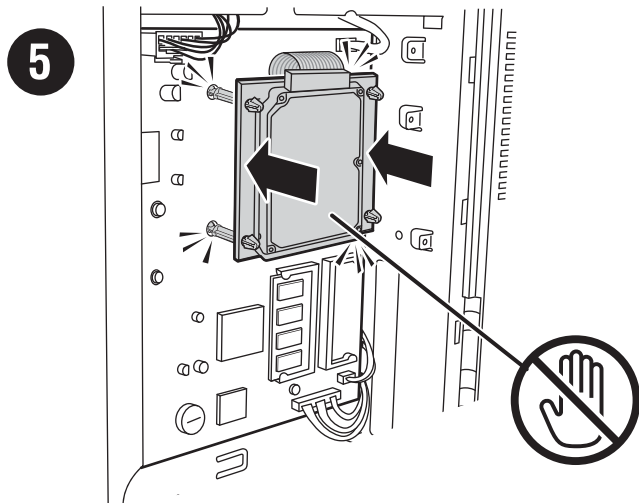
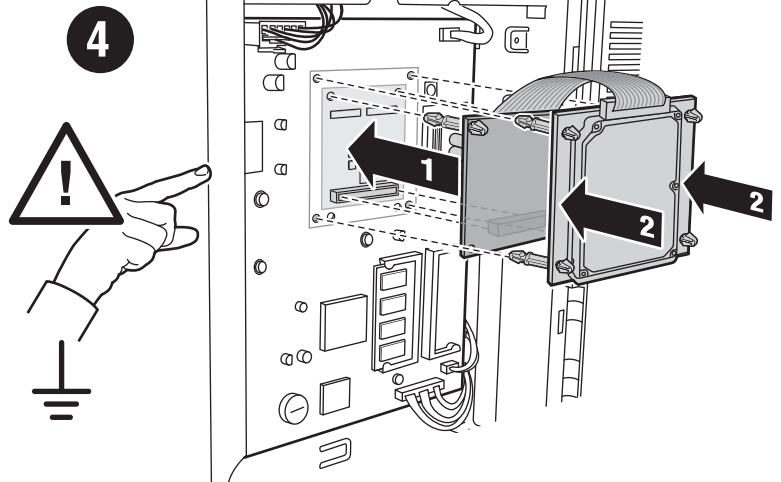
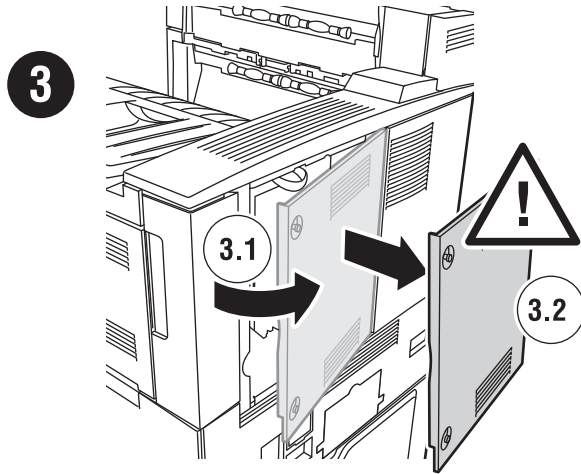
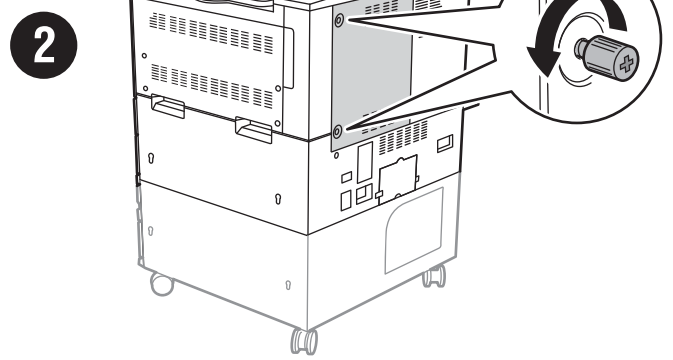


7330 Mono Laser Printer Hard Drive


Disque dur • Disco rigido • Festplatte • Unidad de disco duro

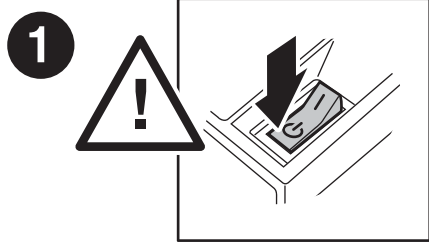

7

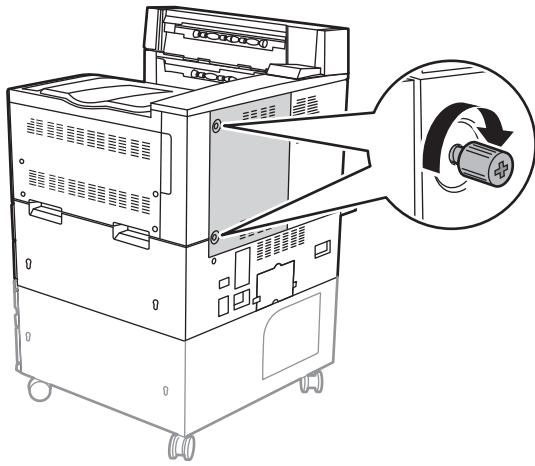

8

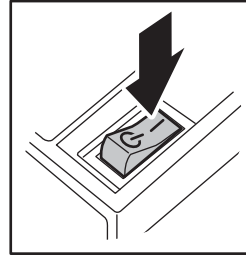

9

Confirm installation

Confirmez l'installation
 Confermare l'installazione
 Installation bestätigen
 Confirmar instalación

Print Configuration Page

Imprimez la page de configuration
 Stampare la pagina di configurazione
 Konfigurationsseite drucken
 Imprimir página de configuración

