


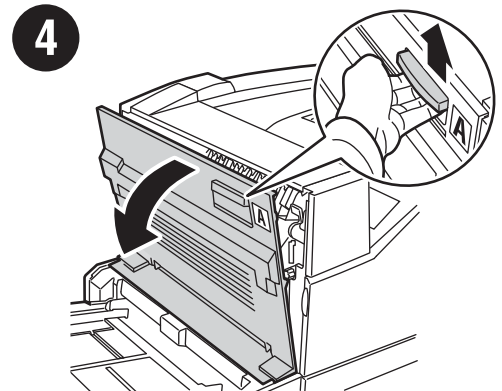
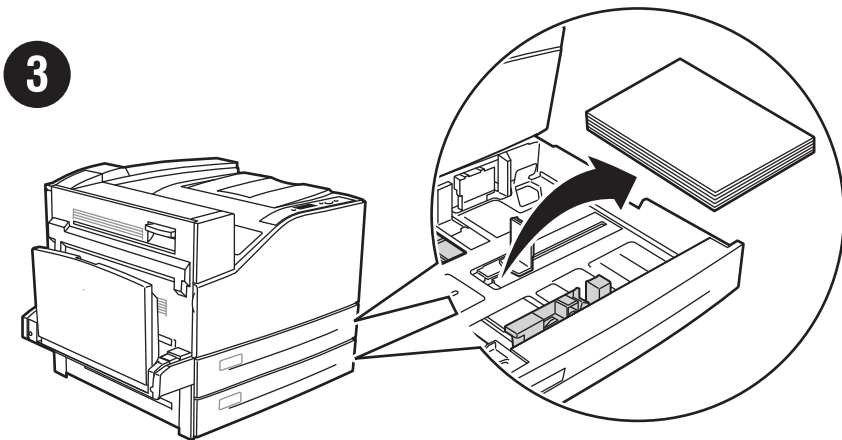
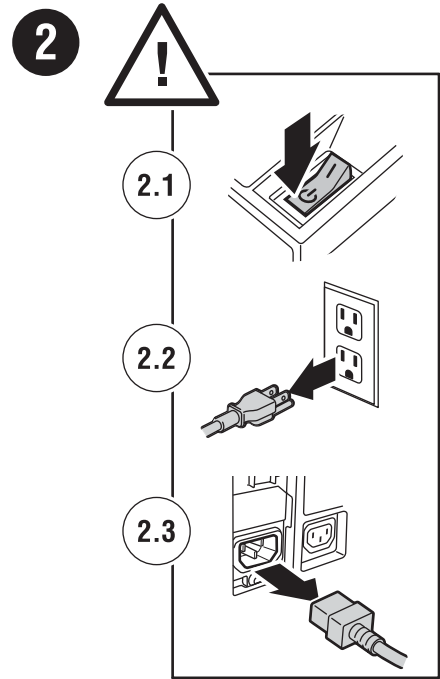
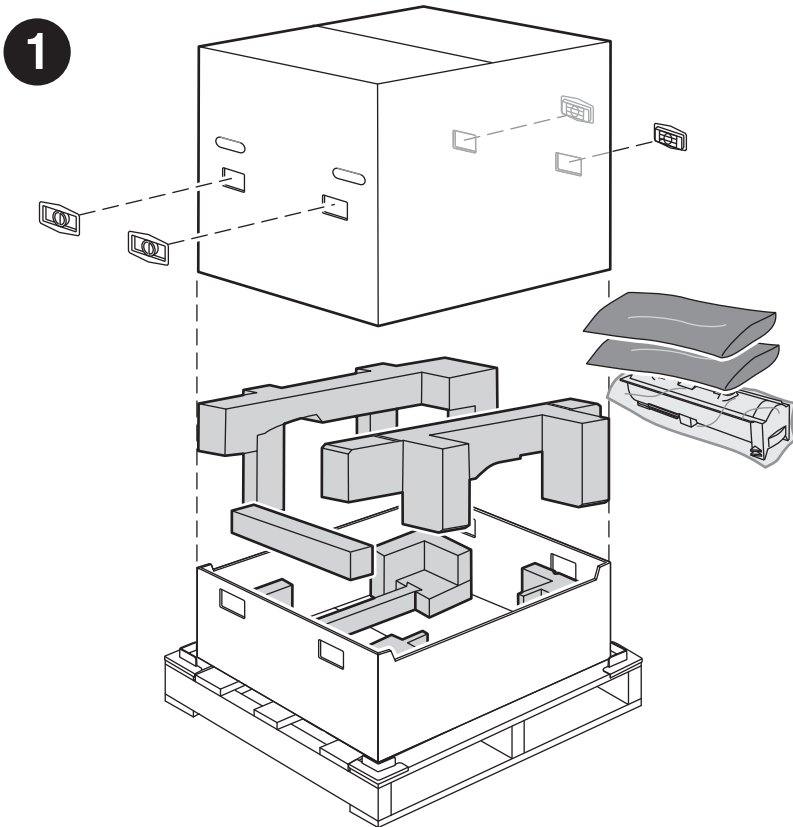
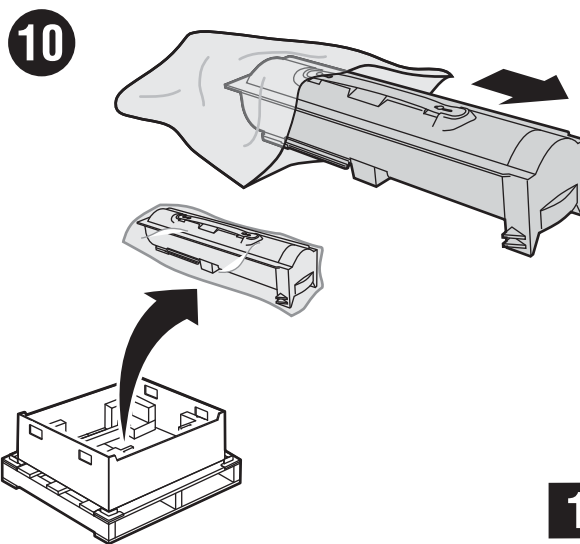
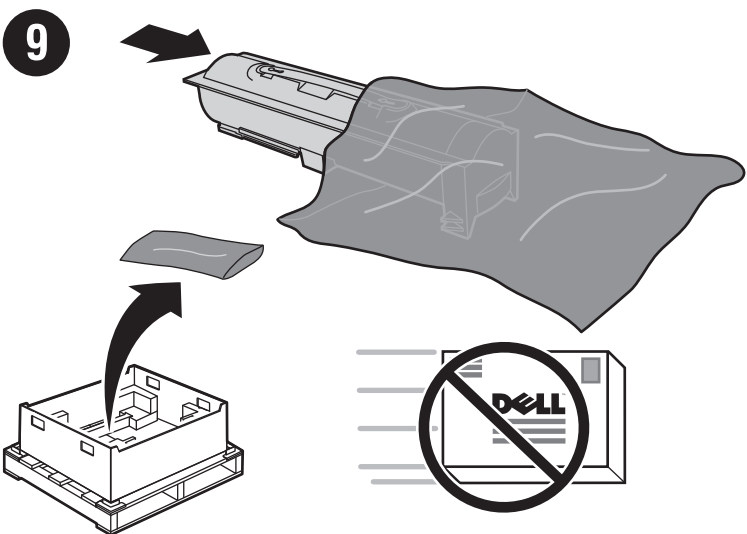
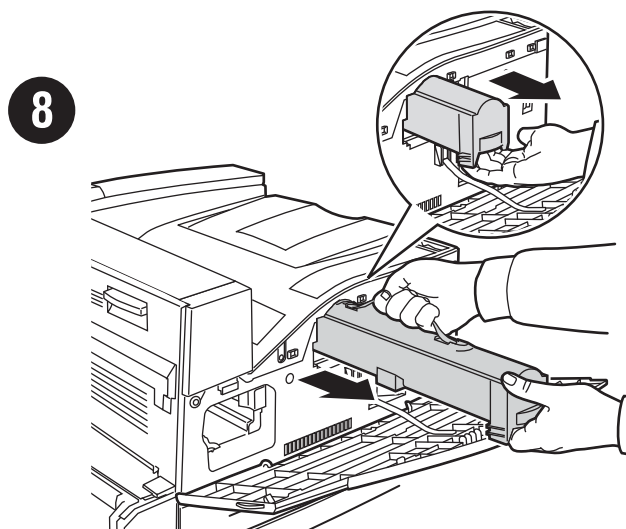


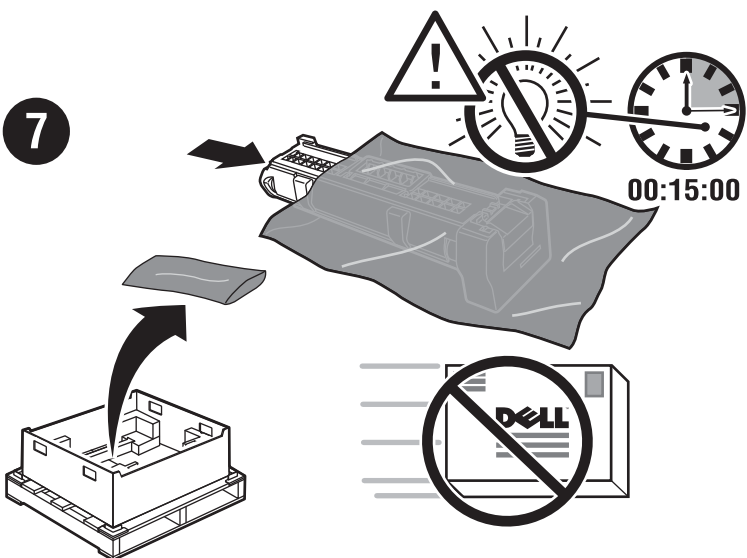


7330 Mono Laser Printer Repacking Instructions

Instructions d'emballage • Istruzioni per l'imballaggio • Hinweise für das Verpacken • Instrucciones de reembalaje

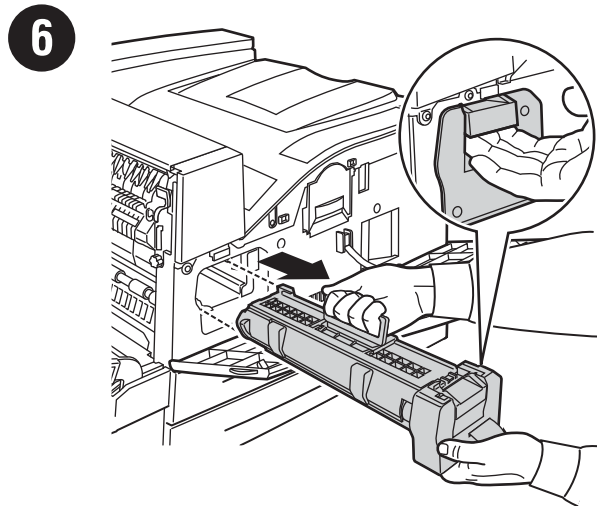


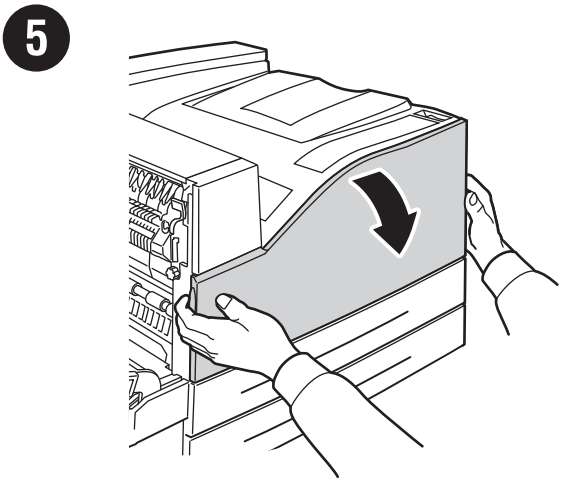


11

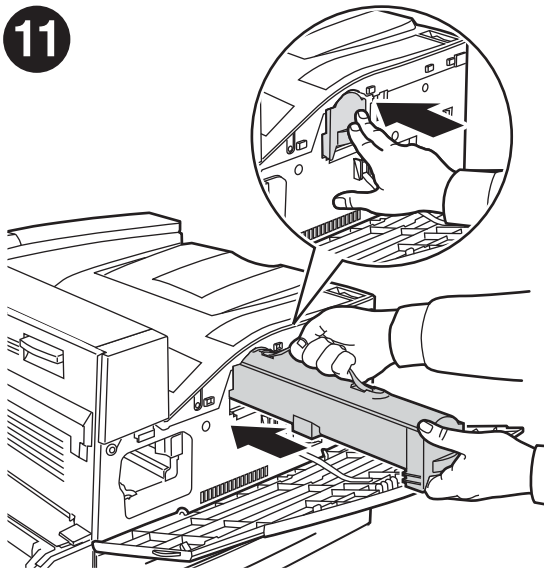


12

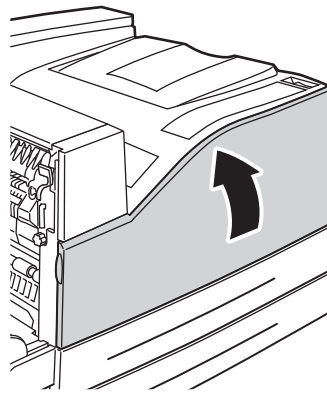


13

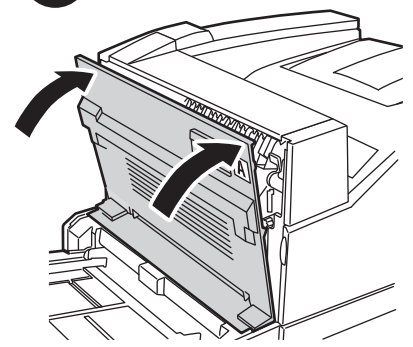

14

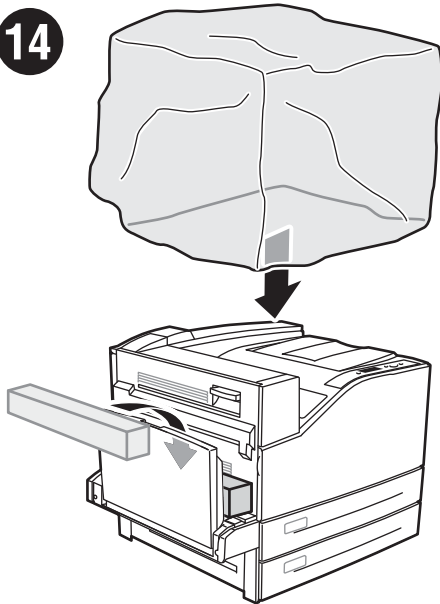

15

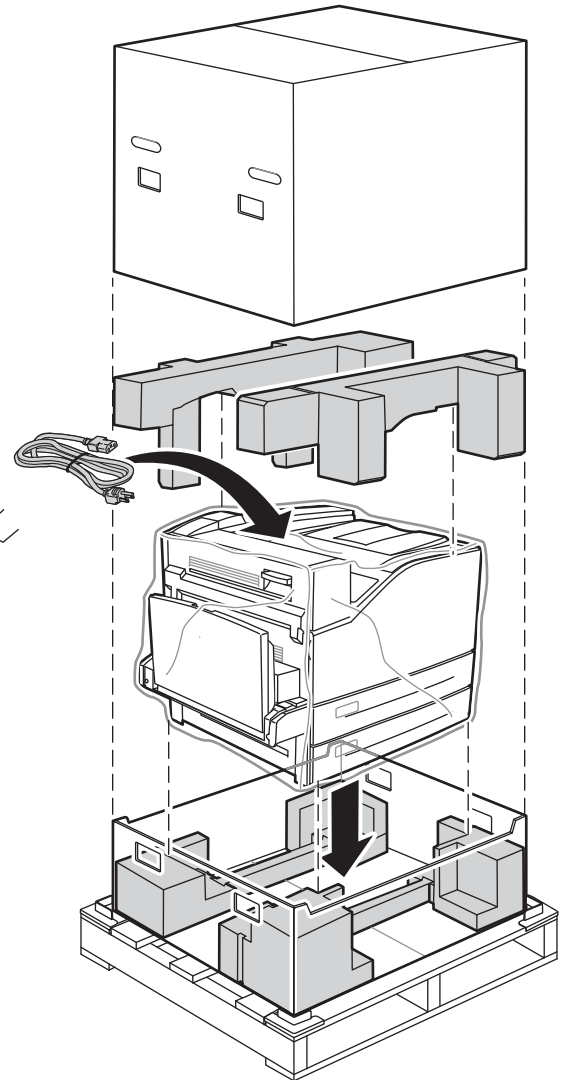

16

