

Dell™ PowerVault™ 600 Systems

Hardware Owner's Manual

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2007 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *Inspiron*, *Dell Precision*, *Dimension*, *OptiPlex*, *Latitude*, *PowerEdge*, *PowerVault*, *PowerApp*, *PowerConnect*, *XPS*, and *Dell OpenManage* are trademarks of Dell Inc.; *Intel* is a registered trademark of Intel Corporation; *Microsoft*, *Windows* and *MS-DOS* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *EMC* is a registered trademark of EMC Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Contents

1	About Your System	11
	System Orientation	12
	Other Information You May Need	12
	Accessing System Features During Startup	13
	Front-Panel Features and Indicators	14
	Hard-Drive Indicator Codes	17
	Back-Panel Features and Indicators	19
	Connecting External Devices	20
	Power Indicator Codes	20
	NIC Indicator Codes	21
	LCD Status Messages	22
	Solving Problems Described by LCD Status Messages	33
	Removing LCD Status Messages	34
	System Messages	34
	Warning Messages	46
	Diagnostics Messages	46
	Alert Messages	46

2	Using the System Setup Program	47
	Entering the System Setup Program	47
	Responding to Error Messages	47
	Using the System Setup Program	48
	System Setup Options	48
	Main Screen	48
	CPU Information Screens	51
	Integrated Devices Screen	52
	Serial Communication Screen	54
	System Security Screen	54
	Exit Screen	56
	System and Setup Password Features	56
	Using the System Password	56
	Using the Setup Password	59
	Disabling a Forgotten Password	60
	Baseboard Management Controller Configuration	61
	Entering the BMC Setup Module	61
	BMC Setup Module Options	61
3	Installing System Components	63
	Recommended Tools	63
	Opening and Closing the System	64
	Removing the Bezel	64
	Removing the Peripheral Bay Panel (Tower Only)	66
	Installing the Peripheral Bay Panel (Tower Only)	67
	Installing the Bezel	67

Opening the System	67
Closing the System	68
Hot-Plug Hard Drives	70
Before You Begin	71
Removing a Drive Blank	71
Installing a Drive Blank	72
Removing a Hot-Plug Hard Drive	72
Installing a Hot-Plug Hard Drive	72
Replacing a Hard-Drive Carrier	74
Removing a Hard Drive From a Hard-Drive Carrier	74
Installing a SAS Hard Drive Into a SATAu Drive Carrier	74
Installing a SATA Hard Drive Into a SATA Drive Carrier	76
Installing a SATA Hard Drive and Interposer Card Into a SATAu Hard-Drive Carrier	77
Power Supplies	79
Removing a Power Supply	79
Installing a Power Supply	80
Removing the Power Supply Blank	81
Installing the Power Supply Blank	81
Fans	81
Removing and Installing a Fan	83
Removing or Installing the Cooling Shroud Fan	85
Expansion Cards	87
Installing an Expansion Card	88
Removing an Expansion Card	90

Internal SCSI Tape Backup Unit	91
Removing an Internal SCSI Tape Backup Unit	91
Installing an Internal SCSI Tape Backup Unit	93
Optical Drive	94
Removing an Optical Drive	94
Installing an Optical Drive	95
Diskette Drive	97
Removing the Diskette Drive	97
Installing the Diskette Drive Into the Drive Carrier	99
Installing the Diskette Drive	99
System Battery	101
Replacing the System Battery	101
Cooling Shroud	103
Removing the Cooling Shroud	103
Installing the Cooling Shroud	105
Fan Brackets	105
Removing the Center Fan Bracket	105
Replacing the Center Fan Bracket	106
Removing the Back Fan Bracket	106
Replacing the Back Fan Bracket	106
Memory	107
General Memory Module Installation Guidelines	109
Non-Optimal Memory Configurations	109
Memory Sparing Support	109
Memory Mirroring Support	110
Installing Memory Modules	110
Removing Memory Modules	112

RAC Card	113
Removing a RAC Card	113
Installing a RAC Card	114
Activating the Integrated NIC TOE	116
Microprocessor	117
Replacing a Processor	117
1x8 SAS Backplane Board	121
Removing the 1x8 SAS Backplane Board	121
Installing the 1x8 SAS Backplane Board	122
Optional 1x2 Flex Bay Drive Bracket	123
Removing the 1x2 Flex Bay Drive Bracket	123
Installing the 1x2 Flex Bay Drive Bracket	125
SAS Controller Daughter Card	126
Replacing the SAS RAID Controller Daughter Card Battery	126
Removing the SAS Controller Daughter Card	127
Installing the SAS Controller Daughter Card	129
Cabling the SAS Backplane Boards	129
Cable Requirements	129
Cabling the SAS Controller (Non-RAID)	130
Cabling the SAS RAID Controller	130
Configuring the Boot Drive	133
Control Panel Assembly (Service-Only Procedure)	133
Removing the Control Panel Assembly	133
Installing the Control Panel Assembly	135
System Board (Service-Only Procedure)	136
Removing the System Board	136
Installing the System Board	139

Power Distribution Board (Service-Only Procedure) . . .	141
Removing the Power Distribution Board	141
Installing the Power Distribution Board	142
4 Troubleshooting Your System	145
Safety First—For You and Your System	145
Start-Up Routine	145
Checking the Equipment	146
Troubleshooting IRQ Assignment Conflicts	146
Troubleshooting External Connections	147
Troubleshooting the Video Subsystem	147
Troubleshooting the Keyboard	148
Troubleshooting the Mouse	149
Troubleshooting Basic I/O Functions	150
Troubleshooting a Serial I/O Device	150
Troubleshooting a USB Device	151
Troubleshooting a NIC	152
Troubleshooting a Wet System	153
Troubleshooting a Damaged System	154
Troubleshooting the System Battery	154
Troubleshooting Power Supplies	155
Troubleshooting System Cooling Problems	156
Troubleshooting a Fan	157
Troubleshooting System Memory	158
Troubleshooting a Diskette Drive	160

	Troubleshooting an Optical Drive	162
	Troubleshooting an External SCSI Tape Drive	163
	Troubleshooting a Hard Drive	164
	Troubleshooting a SAS or SAS RAID Controller Daughter Card	166
	Troubleshooting Expansion Cards	168
	Troubleshooting the Microprocessors	169
5	Running the System Diagnostics	173
	Using Server Administrator Diagnostics	173
	System Diagnostics Features	173
	When to Use the System Diagnostics	174
	Running the System Diagnostics	174
	System Diagnostics Testing Options	174
	Using the Custom Test Options	175
	Selecting Devices for Testing	175
	Selecting Diagnostics Options	175
	Viewing Information and Results	175
6	Jumpers and Connectors	177
	System Board Jumpers	177
	System Board Connectors	179

	SAS Backplane Connectors	182
	Disabling a Forgotten Password	183
7	Getting Help	185
	Technical Assistance	185
	Online Services	185
	AutoTech Service	186
	Automated Order-Status Service	187
	Technical Support Service	187
	Dell Enterprise Training and Certification	187
	Problems With Your Order	187
	Product Information	187
	Returning Items for Warranty Repair or Credit	188
	Before You Call	190
	Contacting Dell	190
	Glossary	215
	Index	227

About Your System

This section describes the physical, firmware, and software interface features that provide and ensure the essential functioning of your system. The physical connectors on your system's front and back panels provide convenient connectivity and system expansion capability. The system firmware, applications, and operating systems monitor the system and component status and alert you when a problem arises. System conditions can be reported by any of the following:


- Front or back panel indicators
- System messages
- Warning messages
- Diagnostics messages
- Alert messages

This section describes each type of message, lists the possible causes, and provides steps to resolve any problems indicated by a message. The system indicators and features are illustrated in this section.

System Orientation

Figure 1-1 shows the rack and tower versions of your system. The illustrations in this document are based on the rack version, unless otherwise indicated.

Figure 1-1. Tower and Rack-Mount Orientations

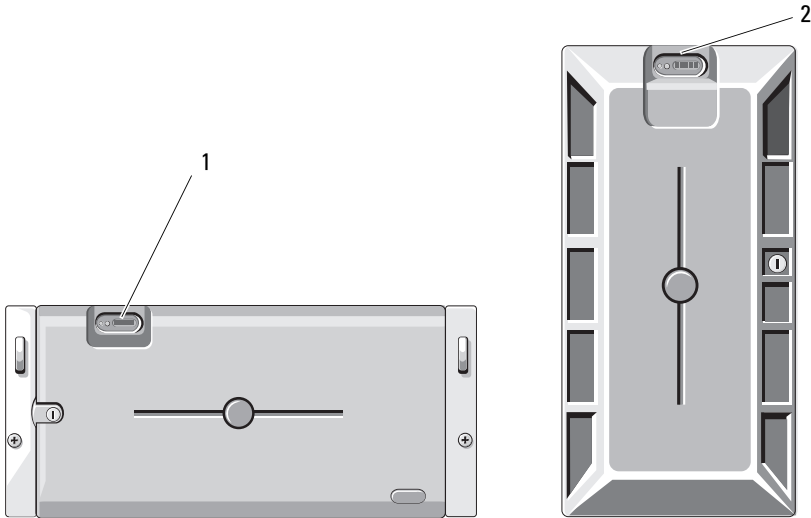

1 system control panel (rack) 2 system control panel (tower)

Other Information You May Need

⚠ CAUTION: The *Product Information Guide* provides important safety and regulatory information. Warranty information may be included within this document or as a separate document.

- The *Rack Installation Guide* and *Rack Installation Instructions* included with your rack solution describe how to install your system into a rack.
- The *Getting Started Guide* provides an overview of system features, setting up your system, and technical specifications.
- CDs included with your system provide documentation and tools for configuring and managing your system.

- Systems management software documentation describes the features, requirements, installation, and basic operation of the software.
- Operating system documentation describes how to install (if necessary), configure, and use the operating system software.
- Documentation for any components you purchased separately provides information to configure and install these options.
- Updates are sometimes included with the system to describe changes to the system, software, and/or documentation.



NOTE: Always check for updates on support.dell.com and read the updates first because they often supersede information in other documents.

- Release notes or readme files may be included to provide last-minute updates to the system or documentation or advanced technical reference material intended for experienced users or technicians.

Accessing System Features During Startup

Table 1-1 describes keystrokes that may be entered during startup to access system features. If your operating system begins to load before you enter the keystroke, allow the system to finish booting, and then restart your system and try again.

Table 1-1. Keystrokes for Accessing System Features

Keystroke	Description
<F2>	Enters the System Setup program. See "Using the System Setup Program" on page 47.
<F10>	Opens the utility partition, allowing you to run the system diagnostics. See "Running the System Diagnostics" on page 174.
<Ctrl+E>	Enters the Baseboard Management Controller (BMC) Management Utility, which allows access to the system event log (SEL). See the <i>BMC User's Guide</i> for more information on setup and use of BMC.
<Ctrl+C>	Enters the SAS Configuration Utility. See your SAS adapter <i>User's Guide</i> for more information.
<Ctrl+R>	Enters the RAID configuration utility, which allows you to configure an optional RAID card. For more information, see the documentation for your RAID card.

Table 1-1. Keystrokes for Accessing System Features (continued)

Keystroke	Description
<Ctrl+S>	Option is displayed only if you have PXE support enabled through the System Setup Program (see "Integrated Devices Screen" on page 52). This keystroke allows you to configure NIC settings for PXE boot. For more information, see the documentation for your integrated NIC.
<Ctrl+D>	If you have the optional Dell Remote Access Controller (DRAC), this keystroke allows access to selected DRAC configuration settings. See the DRAC User's Guide for more information on setup and use of DRAC.

Front-Panel Features and Indicators

Figure 1-2 shows the controls, indicators, and connectors located behind the optional rack bezel on the system's front panel. Table 1-2 provides component descriptions.

Figure 1-2. Front-Panel Features and Indicators

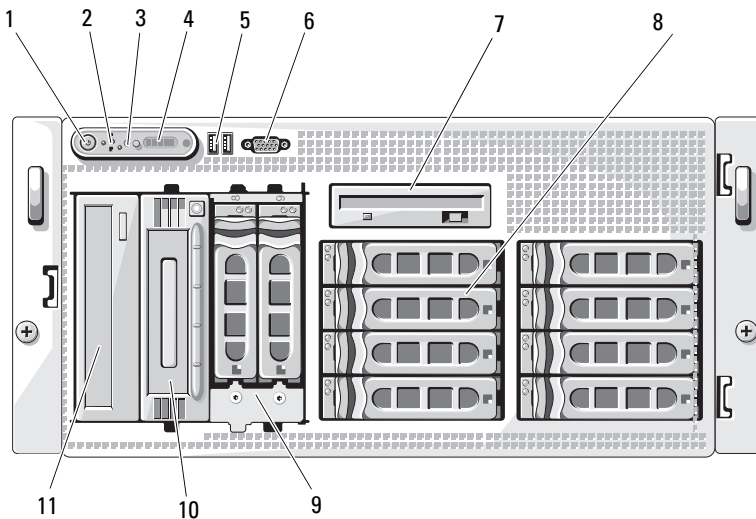


Table 1-2. Front-Panel Components






Item	Component	Icon	Description
1	Power-on indicator, power button		<p>The power-on indicator lights when the system power is on.</p> <p>The power button controls the DC power supply output to the system.</p> <p>NOTE: If you turn off the system using the power button and the system is running an ACPI-compliant operating system, the system performs a graceful shutdown before the power is turned off. If the system is not running an ACPI-compliant operating system, the power is turned off immediately after the power button is pressed.</p>
2	NMI button		<p>Used to troubleshoot software and device driver errors when using certain operating systems. This button can be pressed using the end of a paper clip.</p> <p>Use this button only if directed to do so by qualified support personnel or by the operating system's documentation.</p>
3	System identification button		<p>The identification buttons on the front and back panels can be used to locate a particular system within a rack. When one of these buttons is pushed, the LCD panel on the front and the blue system status indicator on the back blink until one of the buttons is pushed again.</p>


Table 1-2. Front-Panel Components (continued)

Item	Component	Icon	Description
4	LCD panel		<p>Provides system ID, status information, and system error messages.</p> <p>The LCD lights during normal system operation. Both the system management software and the identification buttons located on the front and back of the system can cause the LCD to flash blue to identify a particular system.</p> <p>The LCD lights amber when the system needs attention, and the LCD panel displays an error code followed by descriptive text.</p> <p>NOTE: If the system is connected to AC power and an error has been detected, the LCD lights amber regardless of whether the system has been powered on.</p>
5	USB connectors (2)		Connects USB 2.0-compliant devices to the system.
6	Video connector		Connects a monitor to the system.
7	Diskette drive		Optional.
8	Hard drives		Eight hot-pluggable bays for 3.5-inch SAS or SATA hard drives connected to a 1x8 SAS backplane.
9	Flex bay		Optional flex bay drive bracket with 1x2 SAS backplane for two additional 3.5-inch, hot-pluggable SAS or SATA hard drives.
10	Tape backup unit		Optional half-height SCSI tape backup unit (requires optional SCSI controller). Optional full-height SCSI tape backup unit also available.
11	Optical drive		Optional.

Hard-Drive Indicator Codes

The hard-drive carriers have two indicators—the drive-activity indicator and the drive-status indicator. See Figure 1-3. In RAID configurations, the drive-status indicator lights to indicate the status of the drive. In non-RAID configurations, only the drive-activity indicator lights; the drive-status indicator is off.

Figure 1-3. Hard-Drive Indicators

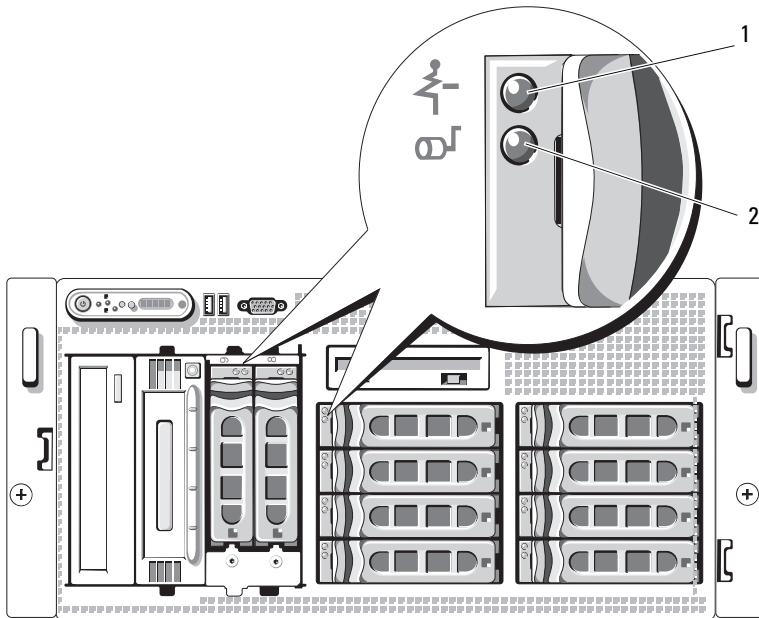

- 1 drive-status indicator (green and amber)
- 2 green drive-activity indicator

Table 1-3 lists the drive indicator patterns for RAID hard drives. Different patterns are displayed as drive events occur in the system. For example, if a hard drive fails, the "drive failed" pattern appears. After the drive is selected for removal, the "drive being prepared for removal" pattern appears, followed by the "drive ready for insertion or removal" pattern. After the replacement drive is installed, the "drive being prepared for operation" pattern appears, followed by the "drive online" pattern.


 **NOTE:** For non-RAID configurations, only the drive-activity indicator is active. The drive-status indicator is off.


Table 1-3. Hard-Drive Indicator Patterns for RAID

Condition	Drive-Status Indicator Pattern
Identify drive/preparing for removal	Blinks green two times per second
Drive ready for insertion or removal	Off
Drive predicted failure	Blinks green, amber, and off.
Drive failed	Blinks amber four times per second.
Drive rebuilding	Blinks green slowly.
Drive online	Steady green.
Rebuild aborted	Blinks green three seconds, amber three seconds, and off six seconds.

Back-Panel Features and Indicators

Figure 1-4 shows the controls, indicators, and connectors located on the system's back panel.

Figure 1-4. Back-Panel Features and Indicators

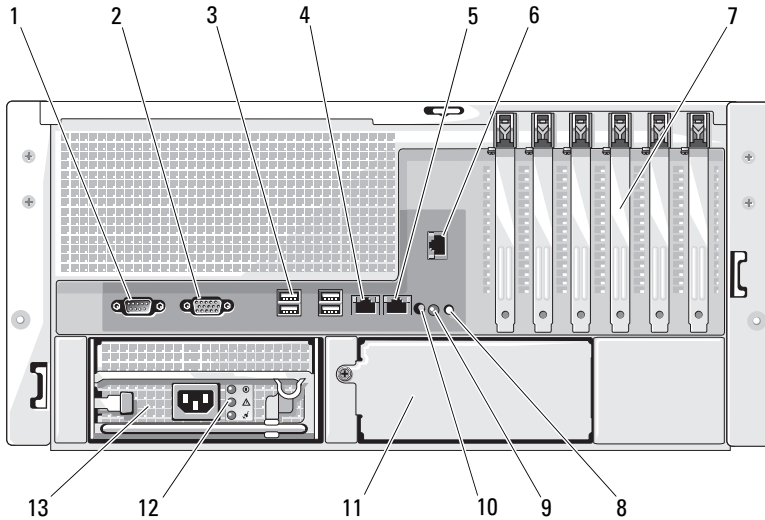

- | | | | | | |
|----|-----------------------------------|----|---------------------------|----|------------------------------------|
| 1 | serial connector | 2 | video connector | 3 | USB connectors (4) |
| 4 | NIC1 connector | 5 | NIC2 connector | 6 | remote access connector (optional) |
| 7 | expansion-card slots (6) | 8 | system status indicator | 9 | system identification button |
| 10 | system status indicator connector | 11 | power supply 2 (optional) | 12 | power supply status indicators |
| 13 | power supply 1 | | | | |

Connecting External Devices

When connecting external devices to your system, follow these guidelines:

- Most devices must be connected to a specific connector and device drivers must be installed before the device operates properly. (Device drivers are normally included with your operating system software or with the device itself.) See the documentation that accompanied the device for specific installation and configuration instructions.
- Always attach an external device while your system and the device are turned off. Next, turn on any external devices before turning on the system (unless the documentation for the device specifies otherwise).

See "Using the System Setup Program" on page 47 for information about enabling, disabling, and configuring I/O ports and connectors.

Power Indicator Codes


The power button on the front panel controls the power input to the system's power supplies. The power indicator lights green when the system is on.

The indicators on the optional redundant power supplies show whether power is present or whether a power fault has occurred (see Table 1-4 and Figure 1-5).

Table 1-4. Redundant Power Supply Indicators

Indicator	Function
Power supply status	Green indicates that the power supply is operational.
Power supply fault	Amber indicates a problem with the power supply.
AC line status	Green indicates that a valid AC source is connected to the power supply.

Figure 1-5. Redundant Power Supply Indicators

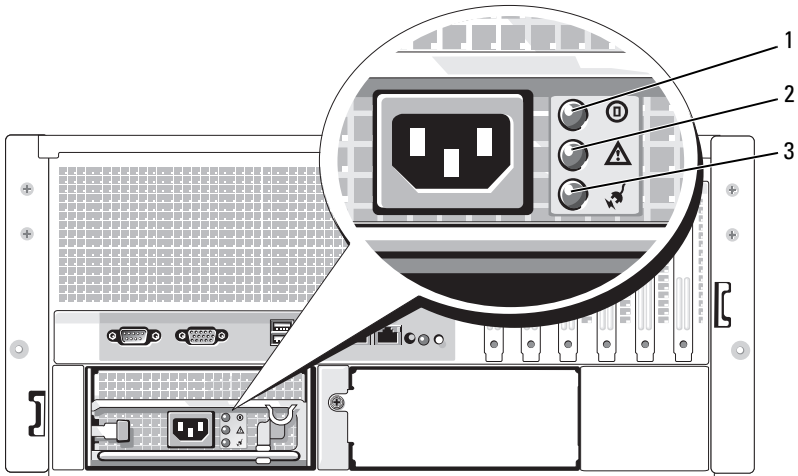


- 1 power supply status
- 2 power supply fault
- 3 AC line status

NIC Indicator Codes

Each NIC on the back panel has an indicator that provides information on network activity and link status. See Figure 1-6. Table 1-5 lists the NIC indicator codes.

Figure 1-6. NIC Indicators

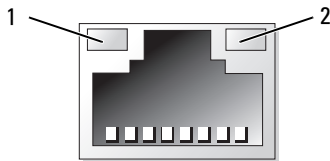

- 1 link indicator
- 2 activity indicator


Table 1-5. NIC Indicator Codes

Indicator	Indicator Code
Link and activity indicators are off	The NIC is not connected to the network.
Link indicator is green	The NIC is connected to a valid link partner on the network.
Activity indicator is amber blinking	Network data is being sent or received.

LCD Status Messages

The system's control panel LCD provides status messages to signify when the system is operating correctly or when the system needs attention. The LCD lights blue to indicate a normal operating condition and lights amber to indicate an error condition. The LCD scrolls a message that includes a status code followed by descriptive text.

Table 1-6 lists the LCD status messages that can occur and the probable cause for each message. The LCD messages refer to events recorded in the system event log (SEL). For information on the SEL and configuring system management settings, see the systems management software documentation.

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.



NOTE: If your system fails to boot, press the System ID button for at least five seconds until an error code appears on the LCD. Record the code, then see "Getting Help" on page 185.

Table 1-6. LCD Status Messages

Code	Text	Causes	Corrective Actions
N/A	<i>SYSTEM NAME</i>	A 62-character string that can be defined by the user in the System Setup program. The <i>SYSTEM NAME</i> displays under the following conditions: <ul style="list-style-type: none"> • The system is powered on. • The power is off and active POST errors are displayed. 	This message is for information only. You can change the system string in the System Setup program. See "Using the System Setup Program" on page 47.
E1000	FAILSAFE, Call Support		See "Getting Help" on page 185.
E1114	Temp Ambient	Ambient system temperature is out of acceptable range.	See "Troubleshooting System Cooling Problems" on page 156.
E1116	Temp Memory	Memory has exceeded acceptable temperature and has been disabled to prevent damage to the components.	See "Troubleshooting System Cooling Problems" on page 156.
E1210	CMOS Batt	CMOS battery is missing, or the voltage is out of acceptable range.	See "Troubleshooting the System Battery" on page 154.
E1211	ROMB Batt	RAID battery is either missing, bad, or unable to recharge due to thermal issues.	Reseat the RAID battery. See "Replacing the SAS RAID Controller Daughter Card Battery" on page 126, and "Troubleshooting System Cooling Problems" on page 156.
E12nn	XX PwrGd	Specified voltage regulator has failed.	See "Getting Help" on page 185.
E1229	CPU # VCORE	Processor # VCORE voltage regulator has failed.	See "Getting Help" on page 185.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1310	RPM Fan ##	RPM of specified cooling fan is out of acceptable operating range.	See "Troubleshooting System Cooling Problems" on page 156.
E1313	Fan Redundancy	The system is no longer fan-redundant. Another fan failure will put the system at risk of over-heating.	Check control panel LCD for additional scrolling messages. See "Troubleshooting System Cooling Problems" on page 156.
E1410	CPU # IERR	Specified microprocessor is reporting a system error.	See your system's <i>Information Update Tech Sheet</i> located on support.dell.com for the most current system information. If the problem persists, see "Getting Help" on page 185.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1414	CPU # Thermtrip	Specified microprocessor is out of acceptable temperature range and has halted operation.	See "Troubleshooting System Cooling Problems" on page 156. If the problem persists, ensure that the microprocessor heat sinks are properly installed. See "Troubleshooting the Microprocessors" on page 169. NOTE: The LCD continues to display this message until the system's power cord is disconnected and reconnected to the AC power source, or the SEL is cleared using either Server Assistant or the BMC Management Utility. See the <i>Dell OpenManage Baseboard Management Controller User's Guide</i> for information about these utilities.
E1418	CPU # Presence	Specified processor is missing or bad, and the system is in an unsupported configuration	See "Troubleshooting the Microprocessors" on page 169.
E141C	CPU Mismatch	Processors are in a configuration unsupported by Dell.	Ensure that your processors match and conform to the type described in the Microprocessor Technical Specifications outlined in your system's <i>Getting Started Guide</i> .

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E141F	CPU Protocol	The system BIOS has reported a processor protocol error.	See "Getting Help" on page 185.
E1420	CPU Bus PERR	The system BIOS has reported a processor bus parity error.	See "Getting Help" on page 185.
E1421	CPU Init	The system BIOS has reported a processor initialization error.	See "Getting Help" on page 185.
E1422	CPU Machine Chk	The system BIOS has reported a machine check error.	See "Getting Help" on page 185.
E1610	PS # Missing	No power is available from the specified power supply; specified power supply is improperly installed or faulty.	See "Troubleshooting Power Supplies" on page 155.
E1614	PS # Status	No power is available from the specified power supply; specified power supply is improperly installed or faulty.	See "Troubleshooting Power Supplies" on page 155.
E1618	PS # Predictive	Power supply voltage is out of acceptable range; specified power supply is improperly installed or faulty.	See "Troubleshooting Power Supplies" on page 155.
E161C	PS # Input Lost	Power source for specified power supply is unavailable, or out of acceptable range	Check the AC power source for the specified power supply. If problem persists, see "Troubleshooting Power Supplies" on page 155.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1620	PS # Input Range	Power source for specified power supply is unavailable, or out of acceptable range	Check the AC power source for the specified power supply. If problem persists, see "Troubleshooting Power Supplies" on page 155.
E1624	PS Redundancy	The power supply subsystem is no longer redundant. If the last supply fails, the system will go down.	See "Troubleshooting Power Supplies" on page 155.
E1710	I/O Channel Chk	The system BIOS has reported an I/O channel check error.	See "Getting Help" on page 185.
E1711	PCI PERR B## D## F## PCI PERR Slot #	The system BIOS has reported a PCI parity error on a component that resides in PCI configuration space at bus ##, device ##, function ##. The system BIOS has reported a PCI parity error on a component that resides in PCI slot #.	Remove and reseat the PCI expansion cards. If the problem persists, see "Troubleshooting Expansion Cards" on page 168. If the problem persists, the system board is faulty. See "Getting Help" on page 185.
E1712	PCI SERR B## D## F## PCI SERR Slot #	The system BIOS has reported a PCI system error on a component that resides in PCI configuration space at buss ##, device ##, function ##. The system BIOS has reported a PCI system error on a component that resides in slot #.	Remove and reseat the PCI expansion cards. If the problem persists, see "Troubleshooting Expansion Cards" on page 168. If the problem persists, the system board is faulty. See "Getting Help" on page 185.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1714	Unknown Err	The system BIOS has determined that there has been an error in the system, but is unable to determine its origin.	See "Getting Help" on page 185.
E171F	PCIE Fatal Err B## D## F## PCIE Fatal Err Slot #	The system BIOS has reported a PCIe fatal error on a component that resides in PCI configuration space at bus ##, device ##, function ##. The system BIOS has reported a PCIe fatal error on a component that resides in slot #.	Remove and reseat the PCI expansion cards. If the problem persists, see "Troubleshooting Expansion Cards" on page 168. If the problem persists, the system board is faulty. See "Getting Help" on page 185.
E1810	HDD ## Fault	The SAS subsystem has determined that hard drive ## has experienced a fault.	See "Troubleshooting a Hard Drive" on page 164.
E1811	HDD ## Rbld Abrt	The specified hard drive has experienced a rebuild abort.	See "Troubleshooting a Hard Drive" on page 164. If the problem persists, see your RAID documentation.
E1812	HDD ## Removed	The specified hard drive has been removed from the system.	Information only.
E1913	CPU & Firmware Mismatch	The BMC firmware does not support the CPU.	Update to the latest BMC firmware. See the <i>BMC User's Guide</i> for more information on setup and use of BMC.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1A10	PBD Pwr Cable	The power distribution board power cable is unseated, missing, or bad.	Ensure that the power distribution board power cable is seated properly. If the problem persists, replace the power distribution board power cable. See "Installing the Power Distribution Board" on page 142.
E1A14	SAS Cable A	SAS cable A is unseated, missing, or bad.	Check the cable connection to the SAS backplane. See "Cabling the SAS Backplane Boards" on page 129.
E1A15	SAS Cable B	SAS cable B is unseated, missing, or bad.	Check the cable connection to the SAS backplane. See "Cabling the SAS Backplane Boards" on page 129.
E1A16	SAS Cable FB	Flex bay SAS cable is unseated, missing, or bad.	Check the cable connection to the SAS backplane. See "Cabling the SAS Backplane Boards" on page 129.
E1A17	Pwr Cable FB	Flex bay power cable is unseated, missing, or bad.	Check the power cable connection to the flex bay backplane. See "Installing the 1x2 Flex Bay Drive Bracket" on page 125.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E1A18	PDB Ctrl Cable	The power distribution board control cable is unseated, missing, or bad.	Ensure that the power distribution board control cable is seated properly. If the problem persists, replace the power distribution board control cable. See "Installing the Power Distribution Board" on page 142.
E2010	No Memory	No memory is installed in the system.	Install memory. See "Memory" on page 107.
E2011	Mem Config Err	Memory detected, but is not configurable. Error detected during memory configuration.	See "Troubleshooting System Memory" on page 158.
E2012	Unusable Memory	Memory is configured, but not usable. Memory subsystem failure.	See "Troubleshooting System Memory" on page 158.
E2013	Shadow BIOS Fail	The system BIOS failed to copy its flash image into memory.	See "Troubleshooting System Memory" on page 158.
E2014	CMOS Fail	CMOS failure. CMOS RAM not functioning properly.	See "Getting Help" on page 185.
E2015	DMA Controller	DMA controller failure.	See "Getting Help" on page 185.
E2016	Int Controller	Interrupt controller failure.	See "Getting Help" on page 185.
E2017	Timer Fail	Timer refresh failure.	See "Getting Help" on page 185.
E2018	Prog Timer	Programmable interval timer error	See "Getting Help" on page 185.
E2019	Parity Error	Parity error.	See "Getting Help" on page 185.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E201A	SIO Err	SIO failure.	See "Getting Help" on page 185.
E201B	Kybd Controller	Keyboard controller failure.	See "Getting Help" on page 185.
E201C	SMI Init	System management interrupt (SMI) initialization failure.	See "Getting Help" on page 185.
E201D	Shutdown Test	BIOS shutdown test failure.	See "Getting Help" on page 185.
E201E	POST Mem Test	BIOS POST memory test failure.	See "Troubleshooting System Memory" on page 158. If problem persists, see "Getting Help" on page 185.
E201F	DRAC Config	Dell remote access controller (DRAC) configuration failure.	Check screen for specific error messages. Ensure that DRAC cables and connectors are properly seated. If problem persists, see your DRAC documentation.
E2020	CPU Config	CPU configuration failure.	Check screen for specific error messages.
E2021	Memory Population	Incorrect memory configuration. Memory population order incorrect.	Check screen for specific error messages. See "Troubleshooting System Memory" on page 158.
E2022	POST Fail	General failure after video.	Check screen for specific error messages.
E2110	MBE DIMM ## & ##	One of the DIMMs in the set implicated by "## & ##" has had a memory multi-bit error (MBE).	See "Troubleshooting System Memory" on page 158.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
E2111	SBE Log Disable DIMM ##	The system BIOS has disabled memory single-bit error (SBE) logging, and will not resume logging further SBEs until the system is rebooted. "##" represents the DIMM implicated by the BIOS.	See "Troubleshooting System Memory" on page 158.
E2112	Mem Spare DIMM ##	The system BIOS has spared the memory because it has determined that the memory had too many errors. "## & ##" represents the DIMM pair implicated by the BIOS.	See "Troubleshooting System Memory" on page 158.
E2113	Mem Mirror DIMM ## & ##	They system BIOS has disabled memory mirroring because it has determined that one half of the mirror has had too many errors. "## & ##" represents the DIMM pair implicated by the BIOS.	See "Troubleshooting System Memory" on page 158.
E2118	Fatal NB Mem CRC	One of the connections in the Fully Buffered DIMM (FBD) memory subsystem link on the Northbound side has failed.	See "Troubleshooting System Memory" on page 158.
E2119	Fatal SB Mem CRC	One of the connections in the FBD memory subsystem link on the Southbound side has failed.	See "Troubleshooting System Memory" on page 158.
I1910	Intrusion	System cover has been removed.	Information only.

Table 1-6. LCD Status Messages (continued)

Code	Text	Causes	Corrective Actions
I1911	>3 ERRs Chk Log	LCD overflow message. A maximum of three error messages can display sequentially on the LCD. The fourth message displays as the standard overflow message.	Check the SEL for details on the events.
I1912	SEL Full	System Event Log is full of events, and is unable to log any more events.	Clear the log by deleting event entries.
W1228	ROMB Batt < 24hr	Warns predictively that the RAID battery has less than 24 hours of charge left.	Replace RAID battery. See "Replacing the SAS RAID Controller Daughter Card Battery" on page 126.

NOTE: For the full name of an abbreviation or acronym used in this table, see the "Glossary" on page 215.

Solving Problems Described by LCD Status Messages

When a single message appears on the status LCD, locate the code in Table 1-6 and perform the suggested corrective action. The code on the LCD can often specify a very precise fault condition that is easily corrected. For example, if the code E0780 MISSING CPU 1 appears, you know that a microprocessor is not installed in socket 1.

In contrast, you might be able to determine the problem if multiple related errors occur. For example, if you receive a series of messages indicating multiple voltage faults, you might determine that the problem is a failing power supply.

Removing LCD Status Messages

For faults associated with sensors, such as temperature, voltage, fans, and so on, the LCD message is automatically removed when that sensor returns to a normal state. For example, if temperature for a component goes out of range, the LCD displays the fault; when the temperature returns to the acceptable range, the message is removed from the LCD. For other faults, you must take action to remove the message from the display:

- Clear the SEL — You perform this task from the system management software, but you will lose the event history for the system.
- Power cycle — Turn off the system and disconnect it from the electrical outlet; wait approximately ten seconds, reconnect the power cable, and restart the system.

Either of the preceding actions will remove fault messages and return the status indicators and LCD colors to the normal state. Error messages will reappear under the following conditions:

- The sensor returns to a normal state but fails again, resulting in a new SEL entry.
- A new error event is detected.
- A failure is recorded from another source that maps to the same display entry.

System Messages

System messages appear on the screen to notify you of a possible problem with the system. Table 1-7 lists the system messages that can occur and the probable cause and corrective action for each message.



NOTE: If you receive a system message that is not listed in Table 1-7, check the documentation for the application that is running when the message appears or the operating system's documentation for an explanation of the message and recommended action.



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and

support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

Table 1-7. System Messages

Message	Causes	Corrective Actions
Alert! Redundant memory disabled! Memory configuration does not support redundant memory.	Installed memory modules are not the same type and size; faulty memory module(s).	Ensure that all memory modules are of the same type and size and that they are properly installed. See "Memory" on page 107. If the problem persists, see "Troubleshooting System Memory" on page 158.
Attempting to update Remote Configuration. Please wait...	Remote Configuration request has been detected and is being processed.	Wait until the process is complete.
BIOS Update Attempt Failed!	Remote BIOS update attempt failed.	Retry the BIOS update. If problem persists, see "Getting Help" on page 185.
Caution! NVRAM_CLR jumper is installed on system board.	NVRAM_CLR jumper is installed. CMOS has been cleared.	Remove the NVRAM_CLR jumper. See Figure 6-1 for jumper location.
CPUs with different cache sizes detected!	Microprocessors with different cache sizes are installed.	Ensure that all microprocessors have the same cache size and that they are properly installed. See "Microprocessor" on page 117.
Decreasing available memory	Faulty or improperly installed memory modules.	See "Troubleshooting System Memory" on page 158.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
DIMM pairs must be matched in size, speed, and technology. The following DIMM pair is mismatched: DIMM x and DIMM y.	Mismatched or unmatched DIMMs installed; faulty or improperly seated memory module(s).	Ensure that all pairs of memory modules are of the same type and size and that they are properly installed. See "Memory" on page 107. If the problem persists, see "Troubleshooting System Memory" on page 158.
DIMMs must be populated in sequential order beginning with slot 1. The following DIMM is electrically isolated: DIMM x.	The specified DIMM is inaccessible to the system due to its location. DIMMs must be populated in sequential order, beginning with slot 1.	Populate 2, 4, 8, or 12 DIMMs sequentially beginning with slot 1. See "Memory" on page 107.
DIMMs should be installed in pairs. Pairs must be matched in size, speed, and technology.	Mismatched or unmatched DIMMs installed; faulty or improperly seated memory module(s). The system will operate in a degraded mode with reduced ECC protection. Only memory installed in channel 0 will be accessible.	Ensure that all pairs of memory modules are of the same type and size and that they are properly installed. See "Memory" on page 107. If the problem persists, see "Troubleshooting System Memory" on page 158.
Dual-rank DIMM paired with Single-rank DIMM - The following DIMM/rank has been disabled by BIOS: DIMM x Rank y	Mismatched DIMMs installed; faulty memory module(s). The system has detected a dual-rank DIMM paired with a single-rank DIMM. The second rank of the dual-rank DIMM will be disabled.	Ensure that all pairs of memory modules are of the same type and size and that they are properly installed. See "Memory" on page 107. If the problem persists, see "Troubleshooting System Memory" on page 158.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
Diskette drive <i>n</i> seek failure	Incorrect configuration settings in the System Setup program.	Run the System Setup program to correct the settings. See "Using the System Setup Program" on page 47.
	Faulty or improperly installed diskette drive.	Replace the diskette. If the problem persists, see "Troubleshooting a Diskette Drive" on page 160.
	Loose diskette drive interface cable, or loose power cable.	Reseat diskette drive interface cable, or power cable. See "Troubleshooting a Diskette Drive" on page 160.
Diskette read failure	Faulty or improperly inserted diskette.	Replace the diskette. If the problem persists, see "Troubleshooting a Diskette Drive" on page 160.
Diskette subsystem reset failed	Faulty or improperly installed diskette.	Replace the diskette. If the problem persists, see "Troubleshooting a Diskette Drive" on page 160.
Drive not ready	Diskette missing from or improperly inserted in diskette drive.	Replace the diskette. If the problem persists, see "Troubleshooting a Diskette Drive" on page 160.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
Error: Incorrect memory configuration. DIMMs must be installed in pairs of matched memory size, speed, and technology.	Mismatched or unmatched DIMMs installed; faulty or improperly seated memory module(s).	Ensure that all pairs of memory modules are of the same type and size and that they are properly installed. See "Memory" on page 107. If the problem persists, see "Troubleshooting System Memory" on page 158.
Error: Memory failure detected. Memory size reduced. Replace the faulty DIMM as soon as possible.	Faulty or improperly seated memory module(s).	See "Troubleshooting System Memory" on page 158.
!!*** Error: Remote Access Controller initialization failure*** RAC virtual USB devices may not be available...	Remote Access Controller initialization failure	Ensure that the Remote Access Controller is properly installed. See "Installing a RAC Card" on page 114.
FBD training error: The following branch has been disabled: Branch x	The specified branch (channel pair) contains DIMMs that are incompatible with each other.	Ensure that only Dell-qualified memory is used. Dell recommends purchasing memory upgrade kits directly from www.dell.com or your Dell sales agent to ensure compatibility.
Gate A20 failure	Faulty keyboard controller; faulty system board.	See "Getting Help" on page 185.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
General failure	The operating system is unable to carry out the command.	This message is usually followed by specific information. Note the information and take the appropriate action to resolve the problem.
Invalid NVRAM configuration, Resource Re-allocated	System detected and corrected a resource conflict.	No action is required.
Keyboard Controller failure	Faulty keyboard controller; faulty system board	See "Getting Help" on page 185.
Manufacturing mode detected	System is in manufacturing mode.	Reboot to take the system out of manufacturing mode.
MEMBIST failure - The following DIMM/rank has been disabled by BIOS: DIMM x Rank y	Faulty memory module(s).	See "Troubleshooting System Memory" on page 158.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
Memory address line failure at <i>address</i> , read <i>value</i> expecting <i>value</i>	Faulty or improperly installed memory modules.	See "Troubleshooting System Memory" on page 158.
Memory double word logic failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory odd/even logic failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory write/read failure at <i>address</i> , read <i>value</i> expecting <i>value</i>		
Memory tests terminated by keystroke.	POST memory test terminated by pressing the spacebar.	Information only.
No boot device available	Faulty or missing optical/diskette drive subsystem, hard drive, or hard-drive subsystem, or no boot disk in drive A.	Use a bootable diskette, CD, or hard drive. If the problem persists, see "Troubleshooting a Diskette Drive" on page 160, "Troubleshooting an Optical Drive" on page 162, and "Troubleshooting a Hard Drive" on page 164. See "Using the System Setup Program" on page 47 for information about setting the order of boot devices.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
No boot sector on hard drive	Incorrect configuration settings in System Setup program, or no operating system on hard drive.	Check the hard-drive configuration settings in the System Setup program. See "Using the System Setup Program" on page 47. If necessary, install the operating system on your hard drive. See your operating system documentation.
No timer tick interrupt	Faulty system board.	See "Getting Help" on page 185.
Northbound merge error - The following DIMM has been disabled by BIOS: DIMM x	The specified DIMM was unable to establish a successful data link with the memory controller.	See "Troubleshooting System Memory" on page 158.
Not a boot diskette	No operating system on diskette.	Use a bootable diskette.
PCIe Degraded Link Width Error: Embedded Bus# <i>nn</i> /Dev# <i>nn</i> /Func <i>n</i> Expected Link Width is <i>n</i> Actual Link Width is <i>n</i>	Faulty or improperly installed PCIe card in the specified slot.	Reseat the PCIe card in the specified slot number. See "Expansion Cards" on page 87. If the problem persists, see "Getting Help" on page 185.
PCIe Degraded Link Width Error: Slot <i>n</i> Expected Link Width is <i>n</i> Actual Link Width is <i>n</i>	Faulty or improperly installed PCIe card in the specified slot.	Reseat the PCIe card in the specified slot number. See "Expansion Cards" on page 87. If the problem persists, see "Getting Help" on page 185.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
PCIe Training Error: Embedded Bus# <i>nn</i> /Dev# <i>nn</i> /Funcn Slot <i>n</i>	Faulty or improperly installed PCIe card in the specified slot.	Reseat the PCIe card in the specified slot number. See "Expansion Cards" on page 87. If the problem persists, see "Getting Help" on page 185.
PCI BIOS failed to install	PCI device BIOS (Option ROM) checksum failure is detected during shadowing. Loose cables to expansion card(s); faulty or improperly installed expansion card.	Reseat the expansion cards. Ensure that all appropriate cables are securely connected to the expansion cards. If the problem persists, see "Troubleshooting Expansion Cards" on page 168.
Plug & Play Configuration Error	Error encountered in initializing PCI device; faulty system board.	Install the NVRAM_CLR jumper and reboot the system. See Figure 6-1 for jumper location. If the problem persists, see "Troubleshooting Expansion Cards" on page 168.
Read fault Requested sector not found	The operating system cannot read from the diskette or hard drive, the system could not find a particular sector on the disk, or the requested sector is defective.	Replace the diskette. Ensure that the diskette and hard drive cables are properly connected. See "Troubleshooting a USB Device" on page 151, "Troubleshooting a Diskette Drive" on page 160, or "Troubleshooting a Hard Drive" on page 164 for the appropriate drive(s) installed in your system.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
Remote configuration update attempt failed	System unable to process Remote Configuration request.	Retry Remote Configuration.
ROM bad checksum = address	Expansion card improperly installed or faulty.	Reseat the expansion cards. Ensure that all appropriate cables are securely connected to the expansion cards. If the problem persists, see "Troubleshooting Expansion Cards" on page 168.
Sector not found Seek error Seek operation failed	Faulty diskette or hard drive.	See "Troubleshooting a Diskette Drive" on page 160 or "Troubleshooting a Hard Drive" on page 164 for the appropriate drive(s) installed in your system.
Shutdown failure	Shutdown test failure.	See "Troubleshooting System Memory" on page 158.
The amount of system memory has changed	Memory has been added or removed or a memory module may be faulty.	If memory has been added or removed, this message is informative and can be ignored. If memory has not been added or removed, check the SEL to determine if single-bit or multi-bit errors were detected and replace the faulty memory module. See "Troubleshooting System Memory" on page 158.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
The following DIMM pair is not compatible with the memory controller: DIMM x and DIMM y	The specified DIMM(s) are incompatible with the system.	Ensure that only Dell-qualified memory is used. Dell recommends purchasing memory upgrade kits directly from www.dell.com or your Dell sales agent to ensure compatibility.
The following DIMMs are not compatible: DIMM x and DIMM y	The specified DIMM(s) are incompatible with the system.	Ensure that only ECC FBD1 memory is used. Dell recommends purchasing memory upgrade kits directly from www.dell.com or your Dell sales agent to ensure compatibility.
Time-of-day clock stopped	Faulty battery or faulty chip.	See "Troubleshooting the System Battery" on page 154.
Time-of-day not set - please run SETUP program	Incorrect Time or Date settings; faulty system battery.	Check the Time and Date settings. See "Using the System Setup Program" on page 47. If the problem persists, replace the system battery. See "System Battery" on page 101.
Timer chip counter 2 failed	Faulty system board.	See "Getting Help" on page 185.
Unsupported CPU combination Unsupported CPU stepping detected	Microprocessor(s) is not supported by the system.	Install a supported microprocessor or microprocessor combination. See "Microprocessor" on page 117.
Utility partition not available	The <F10> key was pressed during POST, but no utility partition exists on the boot hard drive.	Create a utility partition on the boot hard drive. See the CDs that came with your system.

Table 1-7. System Messages (continued)

Message	Causes	Corrective Actions
Warning! No microcode update loaded for processor <i>n</i>	Microcode update failed.	Update the BIOS firmware. See "Getting Help" on page 185.
Warning: Embedded RAID firmware is not present!	Embedded RAID firmware does not respond.	See the RAID controller documentation for information about installing or updating the RAID firmware.
Warning: Embedded RAID error!	Embedded RAID firmware responds with an error.	See "Troubleshooting a SAS or SAS RAID Controller Daughter Card" on page 166. See the RAID controller documentation for information about installing or updating the RAID firmware.
Warning: The current memory configuration is not optimal. Dell recommends a population of 2, 4, 8, or 12 DIMMs. DIMMs should be populated sequentially starting in slot 1.	System has detected a legal but non-optimal population of DIMMs (for example, 1 DIMM, 6 DIMMs, 4 DIMMs in slots 1, 2, 5, and 6, etc.). The system will run with all memory accessible but will experience sub-optimal performance.	Populate 2, 4, 8, or 12 DIMMs sequentially beginning with slot 1. See "Memory" on page 107.
Write fault Write fault on selected drive	Faulty diskette, optical/diskette drive assembly, hard drive, or hard-drive subsystem.	See "Troubleshooting a Diskette Drive" on page 160, "Troubleshooting an Optical Drive" on page 162, or "Troubleshooting a Hard Drive" on page 164.
NOTE: For the full name of an abbreviation or acronym used in this table, see the "Glossary" on page 215.		

Warning Messages

A warning message alerts you to a possible problem and prompts you to respond before the system continues a task. For example, before you format a diskette, a message will warn you that you may lose all data on the diskette. Warning messages usually interrupt the task and require you to respond by typing *y* (yes) or *n* (no).



NOTE: Warning messages are generated by either the application or the operating system. For more information, see the documentation that accompanied the operating system or application.

Diagnostics Messages

When you run system diagnostics, an error message may result. Diagnostic error messages are not covered in this section. Record the message on a copy of the Diagnostics Checklist in "Getting Help" on page 185, and then follow the instructions in that section for obtaining technical assistance.

Alert Messages

Systems management software generates alert messages for your system. Alert messages include information, status, warning, and failure messages for drive, temperature, fan, and power conditions. For more information, see the systems management software documentation.

Using the System Setup Program

After you set up your system, run the System Setup program to familiarize yourself with your system configuration and optional settings. Record the information for future reference.

You can use the System Setup program to:


- Change the system configuration stored in NVRAM after you add, change, or remove hardware
- Set or change user-selectable options—for example, the time or date
- Enable or disable integrated devices
- Correct discrepancies between the installed hardware and configuration settings

Entering the System Setup Program

- 1 Turn on or restart your system.
- 2 Press <F2> immediately after you see the following message display briefly on the screen:


<F2> = System Setup

If your operating system begins to load before you press <F2>, allow the system to finish booting, and then restart your system and try again.

 **NOTE:** To ensure an orderly system shutdown, see the documentation that accompanied your operating system.

Responding to Error Messages

You can enter the System Setup program by responding to certain error messages. If an error message appears while the system is booting, make a note of the message. Before entering the System Setup program, see "System Messages" on page 34 for an explanation of the message and suggestions for correcting errors.

 **NOTE:** After installing a memory upgrade, it is normal for your system to send a message the first time you start your system.

Using the System Setup Program

Table 2-1 lists the keys that you use to view or change information on the System Setup program screens and to exit the program.

Table 2-1. System Setup Program Navigation Keys

Keys	Action
Up arrow or <Shift><Tab>	Moves to the previous field.
Down arrow or <Tab>	Moves to the next field.
Spacebar, <+>, <->, left and right arrows	Cycles through the settings in a field. In many fields, you can also type the appropriate value.
<Esc>	Exits the System Setup program and restarts the system if any changes were made.
<F1>	Displays the System Setup program's help file.



NOTE: For most of the options, any changes that you make are recorded but do not take effect until you restart the system.

System Setup Options

Main Screen

When you enter the System Setup program, the main System Setup program screen appears (see Figure 2-1).

Figure 2-1. Main System Setup Program Screen

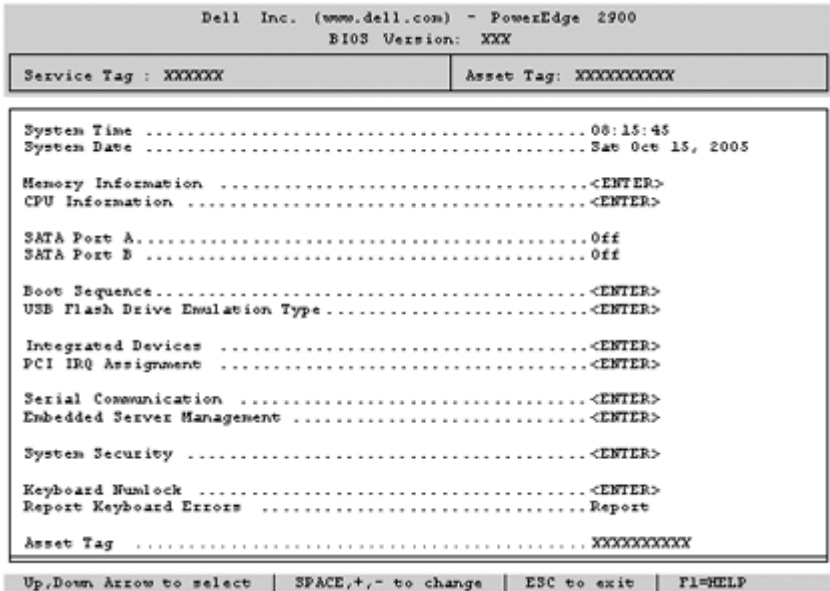


Table 2-2 lists the options and descriptions for the information fields that appear on the main System Setup program screen.



-  **NOTE:** The options for the System Setup program change based on the system configuration.
-  **NOTE:** The System Setup program defaults are listed under their respective options, where applicable.

Table 2-2. System Setup Program Options

Option	Description
System Time	Resets the time on the system's internal clock.
System Date	Resets the date on the system's internal calendar.
Memory Information	Displays information related to installed system, video, and redundant memory, including size, type, and speed of memory modules, system video memory size, system memory test option, and redundant memory status.

Table 2-2. System Setup Program Options (continued)

Option	Description
CPU Information	Displays information related to microprocessors (speed, cache size, and so on). Enable or disable Hyper-Threading technology by changing the setting of the Logical Processor option. See Table 2-3.
SATA Port X	Displays type and capacity of SATA drive attached to Port X on the system board.
Boot Sequence	Determines the order in which the system searches for boot devices during system startup. Available options can include the diskette drive, CD drive, hard drives, and network. NOTE: System boot is not supported from an external device attached to a SAS or SCSI adapter. See support.dell.com for the latest support information about booting from external devices.
USB Flash Drive Type (Auto default)	Determines the emulation type for a USB flash drive. Hard disk allows the USB flash drive to act as a hard drive. Floppy allows the USB flash drive to act as a removal diskette drive. Auto automatically chooses an emulation type.
Integrated Devices	See "Integrated Devices Screen" on page 52.
PCI IRQ Assignment	Displays a screen to change the IRQ assigned to each of the integrated devices on the PCI bus, and any installed expansion cards that require an IRQ.
Serial Communication	Displays a screen to configure serial communication, external serial connector, fail-safe baud rate, remote terminal type, and redirection after boot.
Embedded Server Management	Displays a screen to configure the front-panel LCD options and to set a user-defined LCD string.
System Security	Displays a screen to configure the system password and setup password features. See "Using the System Password" on page 56 and "Using the Setup Password" on page 59 for more information.
Keyboard NumLock (On default)	Determines whether your system starts up with the NumLock mode activated on 101- or 102-key keyboards (does not apply to 84-key keyboards).

Table 2-2. System Setup Program Options (continued)

Option	Description
Report Keyboard Errors (Report default)	Enables or disables reporting of keyboard errors during the POST. Select Report for host systems that have keyboards attached. Select Do Not Report to suppress all error messages relating to the keyboard or keyboard controller during POST. This setting does not affect the operation of the keyboard itself if a keyboard is attached to the system.
Asset Tag	Displays the customer-programmable asset tag number for the system if an asset tag number has been assigned.

CPU Information Screens

Table 2-3 lists the options and descriptions for the information fields that appear on the **CPU Information** screen.

Table 2-3. CPU Information Screen

Option	Description
64-bit Technology	Specifies if the installed processor(s) support Intel® 64-bit extensions.
Core Speed	Displays the clock speed of the processor(s).
Bus Speed	Displays the bus speed of the processor(s).
Logical Processor (Enabled default)	Displays when the processors support HyperThreading. Enabled permits all logical processors to be used by the operating system. Only the first logical processor of each processor installed in the system is used by the operating system if Disabled is selected.
Virtualization Technology (Disabled default)	Displays when the processor(s) support Virtualization Technology. Enabled permits virtualization software to use Virtualization Technology incorporated in the processor design. This feature can only be used by software that supports Virtualization Technology.
Adjacent Cache Line Prefetch (Enabled default)	Enables or disables optimal use of sequential memory access. Disable this option for applications that require high use of random memory access.

Table 2-3. CPU Information Screen

Option	Description
Hardware Prefetcher (Enabled default)	Enables or disables the hardware prefetcher.
Demand-Based Power Management (Disabled default)	Enables or disables demand-based power management. When enabled, the CPU Performance State tables will be reported to the operating system; when disabled, the CPU Performance State tables will not be reported to the operating system. If any of the CPUs do not support demand-based power management, the field will become read-only, and automatically set to Disabled .
Processor X ID	Displays the family and model number of each processor. A submenu displays processor core speed, amount of level 2 cache, and number of cores.

Integrated Devices Screen

Table 2-4 lists the options and descriptions for the information fields that appear on the **Integrated Devices** screen.

Table 2-4. Integrated Devices Screen Options

Option	Description
Integrated SAS Controller (Enabled default)	Enables or disables the integrated SAS controller. This option appears only if a SAS controller is installed.
Integrated RAID Controller (Enabled default)	Enables or disables the integrated RAID controller. This option appears only if a SAS RAID controller is installed.
Embedded SATA (Off default)	Allows the integrated SATA controller to be set to Off or ATA Mode .
IDE CD-ROM Controller (Auto default)	Enables the integrated IDE controller. When set to Auto , each channel of the integrated IDE controller is enabled if IDE devices are attached to the channel.

Table 2-4. Integrated Devices Screen Options (continued)

Option	Description
Diskette Controller (Auto default)	Enables or disables the system's diskette drive controller. When Auto is selected, the system turns off the controller when necessary to accommodate a controller card installed in an expansion slot. You can also configure the drive as Read-Only , or Off . When using the Read-Only setting, the drive cannot be used to write to a disk.
User Accessible USB Ports (All Ports On default)	Enables or disables the system's user accessible USB ports. Options are All Ports On , Only Back Ports On , and All Ports Off .
Embedded Gb NIC1 (Enabled with PXE default)	Enables or disables the system's integrated NIC1. Options are Enabled without PXE , Enabled with PXE , and Disabled . PXE support allows the system to boot from the network. Changes take effect after the system reboots.
MAC Address	Displays the MAC address for the integrated 10/100/1000 NIC. This field does not have user-selectable settings.
TOE Capability	Displays the TCP/IP Offload Engine (TOE) feature status of NIC1.
Embedded Gb NIC2 (Enabled without PXE default)	Enables or disables the system's integrated NIC2. Options are Enabled without PXE , Enabled with PXE , and Disabled . PXE support allows the system to boot from the network. Changes take effect after the system reboots.
MAC Address	Displays the MAC address for the integrated 10/100/1000 NIC. This field does not have user-selectable settings.
TOE Capability	Displays the TOE feature status of NIC2.

Serial Communication Screen

Table 2-5 lists the options and descriptions for the information fields that appear on the **Serial Communication** screen.

Table 2-5. Serial Communication Screen Options

Option	Description
Serial Communication (Off default)	Options are On with Console Redirection via COM2, and Off .
Failsafe Baud Rate (57600 default)	Displays the failsafe baud rate used for console redirection when the baud rate cannot be negotiated automatically with the remote terminal. This rate should not be adjusted.
Remote Terminal Type (VT 100/VT 220 default)	Select either VT 100/VT 220 or ANSI .
Redirection After Boot (Enabled default)	Enables or disables BIOS console redirection after your system boots to the operating system.


System Security Screen

Table 2-6 lists the options and descriptions for the information fields that appear on the **System Security** screen.

Table 2-6. System Security Screen Options

Option	Description
System Password	Displays the current status of your system's password security feature and allows you to assign and verify a new system password. NOTE: See "Using the System Password" on page 56 for instructions on assigning a system password and using or changing an existing system password.
Setup Password	Restricts access to the System Setup program in the same way that you restrict access to your system using the system password feature. NOTE: See "Using the Setup Password" on page 59 for instructions on assigning a setup password and using or changing an existing setup password.

Table 2-6. System Security Screen Options (continued)


Option	Description
Password Status	<p>Setting the Setup Password option to Enabled prevents the system password from being changed or disabled at system start-up.</p> <p>To <i>lock</i> the system password, assign a setup password in the Setup Password option and then change the Password Status option to Locked. In this state, you cannot change the system password using the System Password option and cannot be disabled at system start-up by pressing <Ctrl><Enter>.</p> <p>To <i>unlock</i> the system password, enter the setup password in the Setup Password field and then change the Password Status option to Unlocked. In this state, you can disable the system password at system start-up by pressing <Ctrl><Enter> and then change the password using the System Password option.</p>
Power Button	<p>Turns system's power off and on.</p> <ul style="list-style-type: none">• If you turn off the system using the power button and the system is running an ACPI-compliant operating system, the system can perform an orderly shutdown before power is turned off.• If the system is not running an ACPI-compliant operating system, power is turned off immediately after the power button is pressed. <p>The button is enabled in the System Setup program. When disabled, the button can only turn on system power.</p> <p>NOTE: You can still turn on the system by using the power button, even if the Power Button option is set to Disabled.</p>
NMI Button	<p> NOTICE: Use the NMI button only if directed to do so by qualified support personnel or by the operating system's documentation. Pressing this button halts the operating system and displays a diagnostic screen.</p> <p>Sets the NMI feature On or Off.</p>
AC Power Recovery (Last default)	<p>Determines how the system reacts when power is restored to the system. If system is set to Last, the system returns to the last power state. On turns on the system after power is restored. When set to Off, the system remains off after power is restored.</p>


Exit Screen

After you press <Esc> to exit the System Setup program, the **Exit** screen displays the following options:

- Save Changes and Exit
- Discard Changes and Exit
- Return to Setup

System and Setup Password Features

 **NOTICE:** The password features provide a basic level of security for the data on your system. If your data requires more security, use additional forms of protection, such as data encryption programs.

 **NOTICE:** Anyone can access the data stored on your system if you leave the system running and unattended without having a system password assigned or if you leave your system unlocked so that someone can disable the password by changing a jumper setting.

Your system is shipped to you without the system password feature enabled. If system security is a concern, operate your system only with system password protection.

To change or delete an existing password, you must know the password (see "Deleting or Changing an Existing System Password" on page 59). If you forget your password, you cannot operate your system or change settings in the System Setup program until a trained service technician changes the password jumper setting to disable the passwords, and erases the existing passwords. See "Disabling a Forgotten Password" on page 60.

Using the System Password

After a system password is assigned, only those who know the password have full use of the system. When the **System Password** option is set to **Enabled**, the system prompts you for the system password after the system starts.

Assigning a System Password

Before you assign a system password, enter the System Setup program and check the **System Password** option.

When a system password is assigned, the setting shown for the **System Password** option is **Enabled**. If the setting shown for the **Password Status** is **Unlocked**, you can change the system password. If the **Password Status** option is **Locked**, you cannot change the system password. When the system password feature is disabled by a jumper setting, the system password is **Disabled**, and you cannot change or enter a new system password.


When a system password is not assigned and the password jumper on the system board is in the enabled (default) position, the setting shown for the **System Password** option is **Not Enabled** and the **Password Status** field is **Unlocked**. To assign a system password:

- 1 Verify that the **Password Status** option is set to **Unlocked**.
- 2 Highlight the **System Password** option and press <Enter>.
- 3 Type your new system password.

You can use up to 32 characters in your password.

As you press each character key (or the spacebar for a blank space), a placeholder appears in the field.


The password assignment is not case-sensitive. However, certain key combinations are not valid. If you enter one of these combinations, an error message appears. To erase a character when entering your password, press <Backspace> or the left-arrow key.

 **NOTE:** To escape from the field without assigning a system password, press <Enter> to move to another field, or press <Esc> at any time prior to completing step 5.

- 4 Press <Enter>.
- 5 To confirm your password, type it a second time and press <Enter>.

The setting shown for the **System Password** changes to **Enabled**. Exit the System Setup program and begin using your system.

- 6 Either reboot your system now for your password protection to take effect or continue working.

 **NOTE:** Password protection does not take effect until you reboot the system.

Using Your System Password to Secure Your System



NOTE: If you have assigned a setup password (see "Using the Setup Password" on page 59), the system accepts your setup password as an alternate system password.

When the **Password Status** option is set to **Unlocked**, you have the option to leave the password security enabled or to disable the password security.

To leave the password security enabled:

- 1 Turn on or reboot your system by pressing <Ctrl><Alt>.
- 2 Type your password and press <Enter>.

To disable the password security:

- 1 Turn on or reboot your system by pressing <Ctrl><Alt>.
- 2 Type your password and press <Ctrl><Enter>.

When the **Password Status** option is set to **Locked**, whenever you turn on your system or reboot your system by pressing <Ctrl><Alt>, type your password and press <Enter> at the prompt.

After you type the correct system password and press <Enter>, your system operates as usual.

If an incorrect system password is entered, the system displays a message and prompts you to re-enter your password. You have three attempts to enter the correct password. After the third unsuccessful attempt, the system displays an error message showing the number of unsuccessful attempts and that the system has halted and will shut down. This message can alert you to an unauthorized person attempting to use your system.

Even after you shut down and restart the system, the error message continues to be displayed until the correct password is entered.



NOTE: You can use the **Password Status** option in conjunction with the **System Password** and **Setup Password** options to further protect your system from unauthorized changes.

Deleting or Changing an Existing System Password

- 1 When prompted, press <Ctrl><Enter> to disable the existing system password.

If you are asked to enter your setup password, contact your network administrator.

- 2 Enter the System Setup program by pressing <F2> during POST.
- 3 Select the **System Security** screen field to verify that the **Password Status** option is set to **Unlocked**.
- 4 When prompted, type the system password.
- 5 Confirm that **Not Enabled** is displayed for the **System Password** option.

If **Not Enabled** is displayed for the **System Password** option, the system password has been deleted. If **Enabled** is displayed for the **System Password** option, press the <Alt> key combination to restart the system, and then repeat steps 2 through 5.

Using the Setup Password

Assigning a Setup Password

You can assign (or change) a setup password only when the **Setup Password** option is set to **Not Enabled**. To assign a setup password, highlight the **Setup Password** option and press the <+> or <-> key. The system prompts you to enter and verify the password. If a character is illegal for password use, an error message appears.



NOTE: The setup password can be the same as the system password. If the two passwords are different, the setup password can be used as an alternate system password. However, the system password cannot be used in place of the setup password.

You can use up to 32 characters in your password.

As you press each character key (or the spacebar for a blank space), a placeholder appears in the field.

The password assignment is not case-sensitive. However, certain key combinations are not valid. If you enter one of these combinations, an error message appears. To erase a character when entering your password, press <Backspace> or the left-arrow key.

After you verify the password, the **Setup Password** setting changes to **Enabled**. The next time you enter the System Setup program, the system prompts you for the setup password.

A change to the **Setup Password** option becomes effective immediately (restarting the system is not required).

Operating With a Setup Password Enabled

If **Setup Password** is set to **Enabled**, you must enter the correct setup password before you can modify most of the System Setup options. When you start the System Setup program, the program prompts you to enter a password.

If you do not enter the correct password in three attempts, the system lets you view, but not modify, the System Setup screens—with the following exception: If **System Password** is not set to **Enabled** and is not locked through the **Password Status** option, you can assign a system password (however, you cannot disable or change an existing system password).



NOTE: You can use the **Password Status** option in conjunction with the **Setup Password** option to protect the system password from unauthorized changes.

Deleting or Changing an Existing Setup Password

- 1 Enter the System Setup program and select the **System Security** option.
- 2 Highlight the **Setup Password** option, press <Enter> to access the setup password window, and press <Enter> twice to clear the existing setup password.

The setting changes to **Not Enabled**.

- 3 If you want to assign a new setup password, perform the steps in "Assigning a Setup Password" on page 59.

Disabling a Forgotten Password

See "Disabling a Forgotten Password" on page 183.

Baseboard Management Controller Configuration

The Baseboard Management Controller (BMC) enables configuring, monitoring, and recovery of systems remotely. BMC provides the following features:

- Uses the system's serial port and integrated NIC
- Fault logging and SNMP alerting
- Access to system event log and sensor status
- Control of system functions including power on and off
- Support is independent of the system's power or operating state
- Provides text console redirection for system setup, text-based utilities, and operating system consoles



NOTE: To remotely access the BMC through the integrated NIC, you must connect the network connection to integrated NIC1. See Figure 1-4.

For additional information on using BMC, see the documentation for the BMC and systems management applications.

Entering the BMC Setup Module

- 1 Turn on or restart your system.
- 2 Press <Ctrl-E> when prompted after POST.

If your operating system begins to load before you press <Ctrl-E>, allow the system to finish booting, and then restart your system and try again.

BMC Setup Module Options

For information about the BMC Setup Module options and how to configure the emergency management port (EMP), see the *BMC User's Guide*.

Installing System Components

This section describes how to install the following system components:

- Hot-plug hard drives
- Power supplies
- Cooling fans
- Expansion cards
- Tape, optical, and diskette drives
- System battery
- System memory
- RAC card
- Microprocessors
- SAS backplane board
- SAS controller daughter card
- Control panel assembly
- System board
- Power distribution board

Recommended Tools

You may need the following items to perform the procedures in this section:

- Keys to the system keylocks
- #2 Phillips screwdriver
- T10 Torx driver
- Wrist grounding strap

Opening and Closing the System


The system is enclosed by an optional bezel and cover. To upgrade or troubleshoot the system, remove the bezel and cover to access the drives and internal system components.

Removing the Bezel

Removing the Rack Bezel

- 1 Unlock the keylock at the left end of the bezel. See Figure 3-1.
- 2 While grasping the bezel, press the release latch on the left edge of the bezel, adjacent to the keylock.
- 3 Rotate the left end of the bezel away from the front panel.
- 4 Unhook the right end of the bezel and pull the bezel away from the system. See Figure 3-1.

Figure 3-1. Installing and Removing the Optional Bezel (Rack)

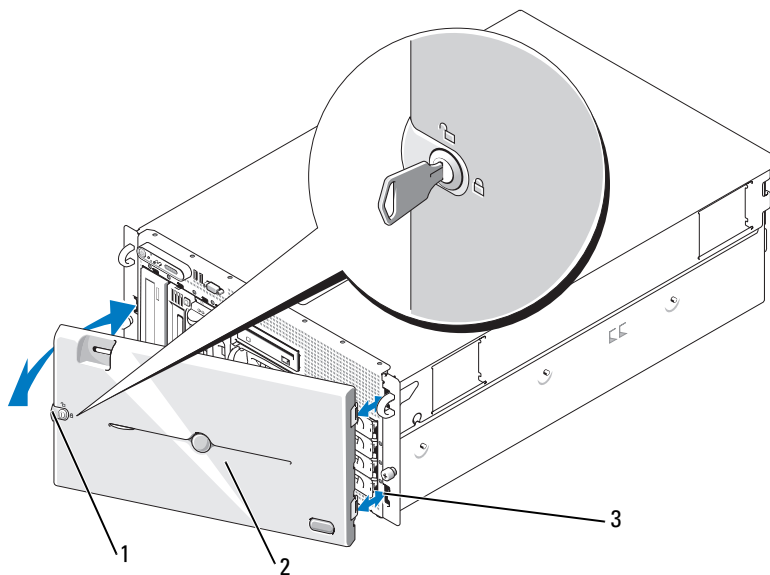

1 key lock


2 bezel (rack)

3 bezel slot (2)

Removing the Tower Bezel

- 1 Unlock the keylock at the right side of the bezel. See Figure 3-2.
- 2 While grasping the bezel, push the release latch on top of bezel to the left.
- 3 Rotate the top of the bezel away from the front panel.
- 4 Unhook the bottom of the bezel and pull the bezel away from the system. See Figure 3-2.

Figure 3-2. Installing and Removing the Optional Bezel (Tower)

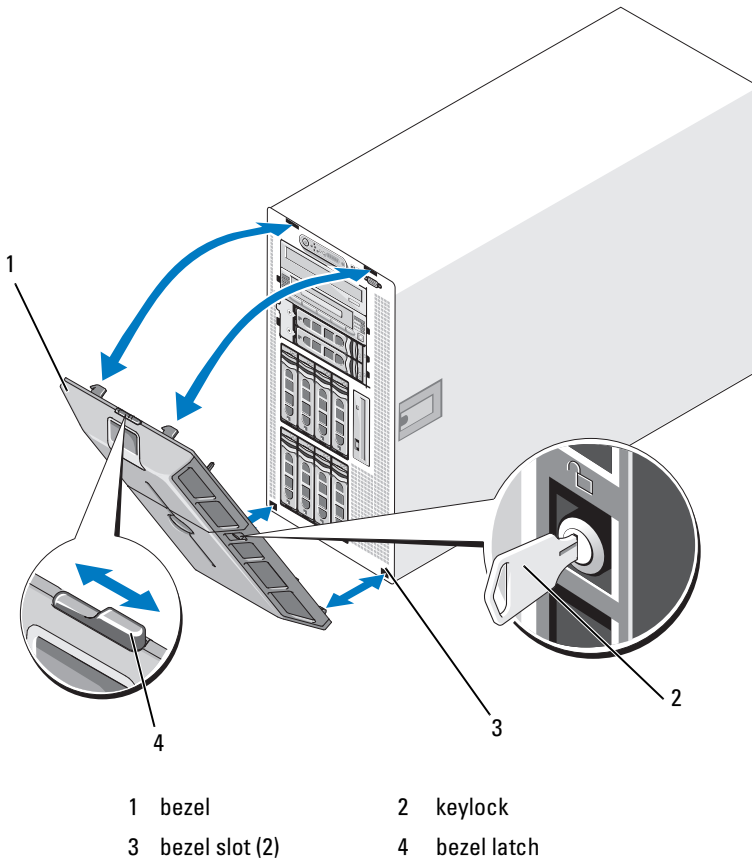


Removing the Peripheral Bay Panel (Tower Only)

NOTE: The peripheral bay panel can be removed only from inside the bezel.

- 1 With the bezel removed from the system, place the bezel face-down on a flat working surface.
- 2 Locate the release tabs inside the bezel at the bottom of the peripheral bay panel and press in on the tabs and push forward to slide the panel outward from the bezel. See Figure 3-3.
- 3 Remove the panel from the front side of the bezel.
- 4 Reinstall the bezel on the system. See "Installing the Bezel" on page 67.

Figure 3-3. Installing and Removing the Peripheral Bay Panel (Tower)

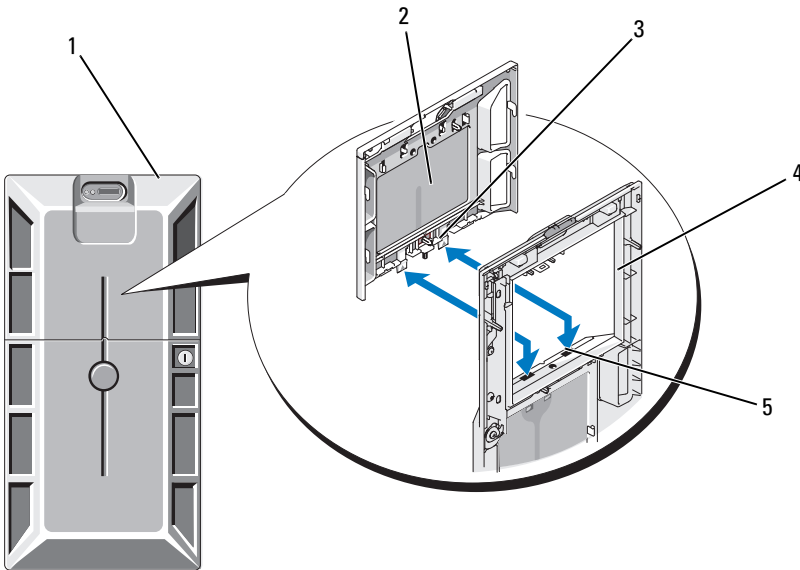

- | | | |
|---|------------------------|-----------|
| 1 tower bezel with peripheral bay panel | 2 peripheral bay panel | 3 tab (2) |
| 4 bezel (inside view) | 5 tab slot (2) | |


Installing the Peripheral Bay Panel (Tower Only)


- 1 With the bezel installed on the system, align the peripheral bay panel with the panel opening on the bezel and insert the panel, tab-end first, into the opening.
- 2 Slide the panel downward so that the tabs enter the slots in the bezel and lock into position.

Installing the Bezel

- 1 Insert the hooks on the end of the bezel into the bezel slots on the right (or bottom) side of the system front plate. See Figure 3-1 for rack systems or Figure 3-2 for tower systems.
- 2 Rotate the other end of the bezel toward the front panel and press the bezel onto the panel to engage the latch.
- 3 Lock the bezel.

Opening the System

 **CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.**

 **CAUTION: Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.**


- 1 Unless you are installing a hot-plug component such as a cooling fan or power supply, turn off the system and attached peripherals, and disconnect the system from the electrical outlet and peripherals.
- 2 If you are working with a tower system, place the system on its side on a flat stable surface with the feet overhanging the edge of the work surface.
- 3 If present, unlock and remove the Kensington cable lock on the back of the system chassis.
- 4 To remove the system cover, turn the latch release lock on the cover latch counterclockwise to the unlocked position. See Figure 3-4.
- 5 Lift up on the latch on top of the system. See Figure 3-4.

- 6 Grasp the cover on both sides and carefully lift the cover away from the system.

Closing the System

- 1 Lift up on the cover latch.
- 2 Place the cover on top of the system and offset the cover slightly back so that it clears the chassis J hooks and lays flat on the system chassis. See Figure 3-4.
- 3 Push the latch down to lever the cover into the closed position.
- 4 Turn the latch release lock clockwise to the locked position. See Figure 3-4.
- 5 Replace the Kensington cable lock on the back of the chassis. See Figure 1-4 for the location of the lock slot on the back of the chassis.

Figure 3-4. Installing and Removing the System Cover

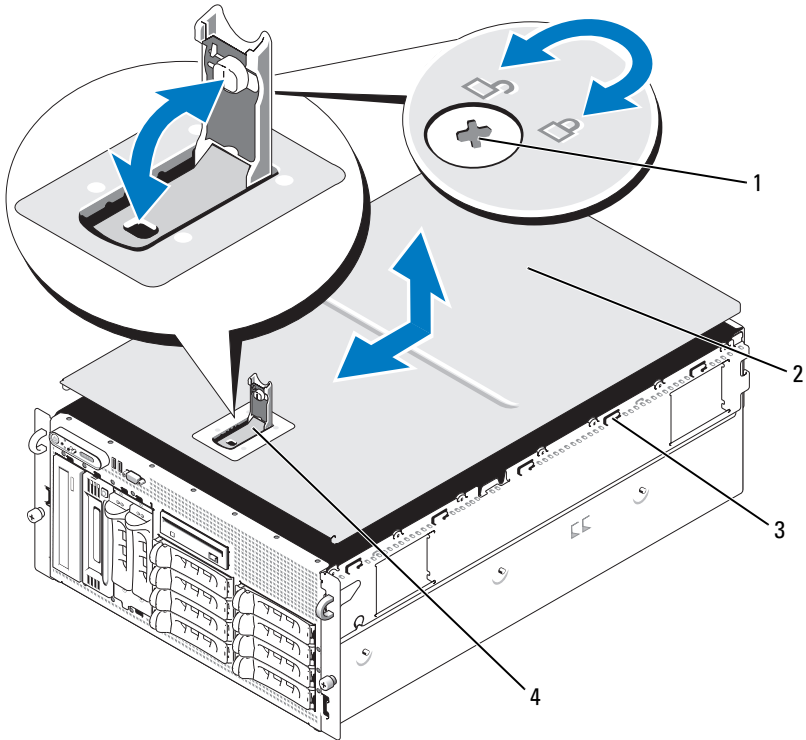


- | | |
|----------------------|----------------|
| 1 latch release lock | 2 system cover |
| 3 chassis hooks | 4 cover latch |

Hot-Plug Hard Drives

Figure 3-5 shows how the SAS/SATA hot-plug drive bays are numbered in the rack-mount orientation.

NOTE: For the tower orientation, drive bays 8 and 9 are reversed.

Figure 3-5. Hard-Drive Bay Numbers (Rack)

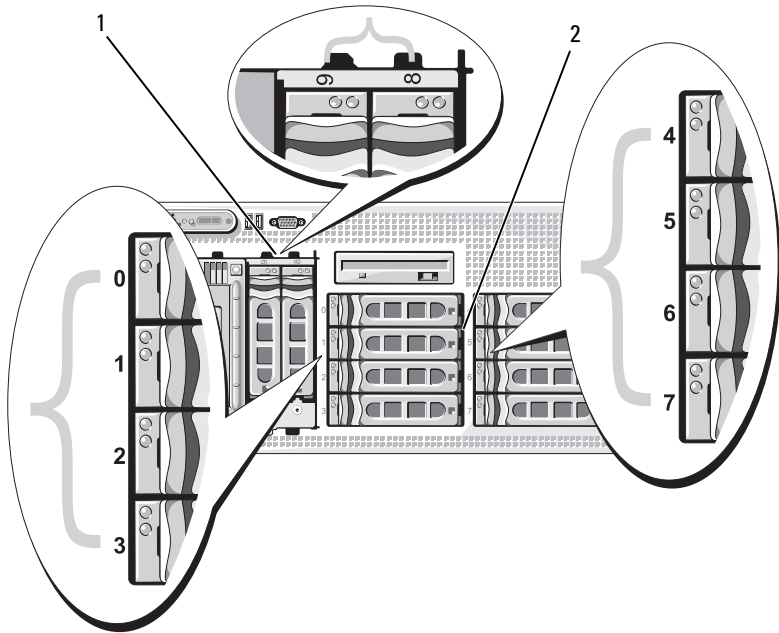



1 1x2 flex bay hard drives 2 1x8 backplane hard drives

Before You Begin


Hard drives are supplied in special hot-pluggable drive carriers that fit in the hard-drive bays. Depending on your configuration, you received one of the following two drive carrier types:

- SATA drive carrier — Usable only with a SATA hard drive.
- SATAu drive carrier — Usable with either a SAS hard drive or a SATA hard drive with a universal interposer card. The interposer card provides enhanced functionality that makes the SATA hard drive usable in some storage systems.

 **NOTICE:** Before attempting to remove or install a drive while the system is running, see the documentation for the optional SAS RAID controller daughter card to ensure that the host adapter is configured correctly to support hot-plug drive removal and insertion.


 **NOTE:** It is recommended that you use only drives that have been tested and approved for use with the SAS backplane board.

You may need to use different programs than those provided with the operating system to partition and format SAS or SATA hard drives.

 **NOTICE:** Do not turn off or reboot your system while the drive is being formatted. Doing so can cause a drive failure.

When you format a high-capacity hard drive, allow enough time for the formatting to be completed. Long format times for these drives are normal. A 9-GB hard drive, for example, can take up to 2.5 hours to format.

Removing a Drive Blank

 **NOTICE:** To maintain proper system cooling, all empty hard-drive bays must have drive blanks installed. If you remove a hard-drive carrier from the system and do not reinstall it, you must replace the carrier with a drive blank.

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Insert your finger under the shrouded end of the blank and press in on the latch to eject the blank outward from the bay.
- 3 Pry the ends of the blank outward until the blank is free.

Installing a Drive Blank

The drive blank is keyed to ensure correct insertion into the drive bay. To install a drive blank, insert the blank into the drive bay and press evenly on the ends of the blank until it is fully inserted and latched.

Removing a Hot-Plug Hard Drive

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 From the RAID management software, prepare the drive for removal and wait until the hard-drive indicators on the drive carrier signal that the drive can be removed safely. See your SAS RAID controller documentation for information about hot-plug drive removal.

If the drive has been online, the green activity/fault indicator will flash as the drive is powered down. When both drive indicators are off, the drive is ready for removal.

- 3 Open the drive carrier release handle to release the drive. See Figure 3-6.
- 4 Slide the hard drive out until it is free of the drive bay.
- 5 If you do not replace the hard drive, insert a drive blank in the vacated drive bay. See "Installing a Drive Blank" on page 72.




NOTICE: To maintain proper system cooling, all empty hard-drive bays must have drive blanks installed.

Installing a Hot-Plug Hard Drive

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 If a drive blank is present in the bay, remove it. See "Removing a Drive Blank" on page 71.

- 3 Install the hot-plug hard drive.
 - a Open the handle on the hard-drive carrier.

Figure 3-6. Installing a Hot-Plug Hard Drive

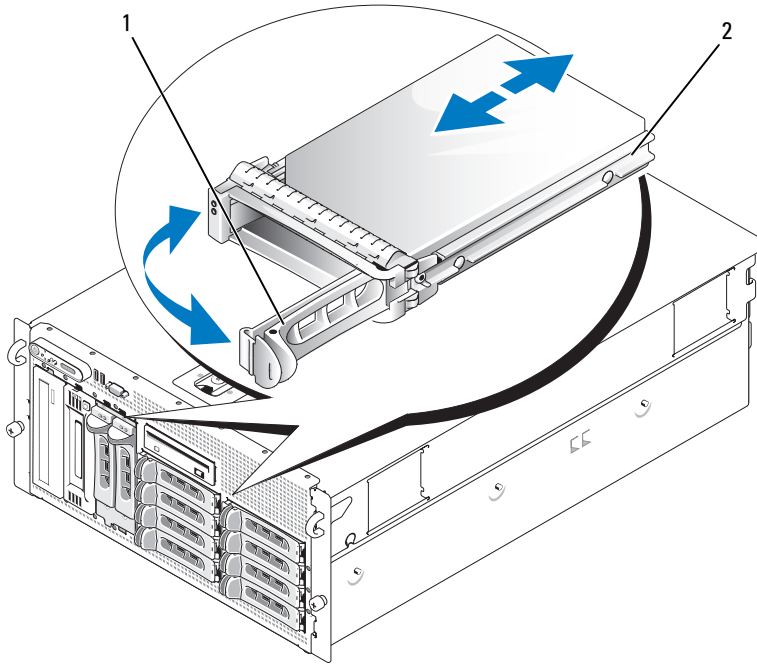

1 drive carrier release handle 2 drive carrier

- b Insert the hard-drive carrier into the drive bay until the carrier contacts the backplane.
 - c Close the handle to lock the drive in place.
- 4 Replace the front bezel, if it was removed in step 1.

Replacing a Hard-Drive Carrier

Removing a Hard Drive From a Hard-Drive Carrier

- 1 If you are removing a SATA hard drive from a SATAu drive carrier, remove the interposer card:
 - a Viewing the hard drive carrier from the rear, locate the release lever on the left end of the interposer card.
 - b Push the lever away from the carrier rail to release the left end of the card.
 - c Rotate the left end away from the hard drive to release the connector.
 - d Pull the right end of the interposer card clear of the slots in the carrier rail.
- 2 Remove the four screws from the slide rails on the hard-drive carrier and separate the hard drive from the carrier.


Installing a SAS Hard Drive Into a SATAu Drive Carrier



NOTE: SAS hard drives must be installed only in SATAu drive carriers. The SATAu drive carrier is labeled "SATAu" and also has marks indicating the SAS and SATA mounting screws.

- 1 Insert the SAS hard drive into the hard-drive carrier with the connector end of the drive at the rear. See Figure 3-7.
- 2 Viewing the assembly as shown in Figure 3-7, align the bottom rear screw hole on the hard drive with the hole labeled "SAS" on the hard drive carrier. When aligned correctly, the rear of the hard drive will be flush with the rear of the hard-drive carrier.
- 3 Attach the four screws to secure the hard drive to the hard-drive carrier. See Figure 3-7.

Figure 3-7. Installing a SAS Hard Drive Into a Drive Carrier

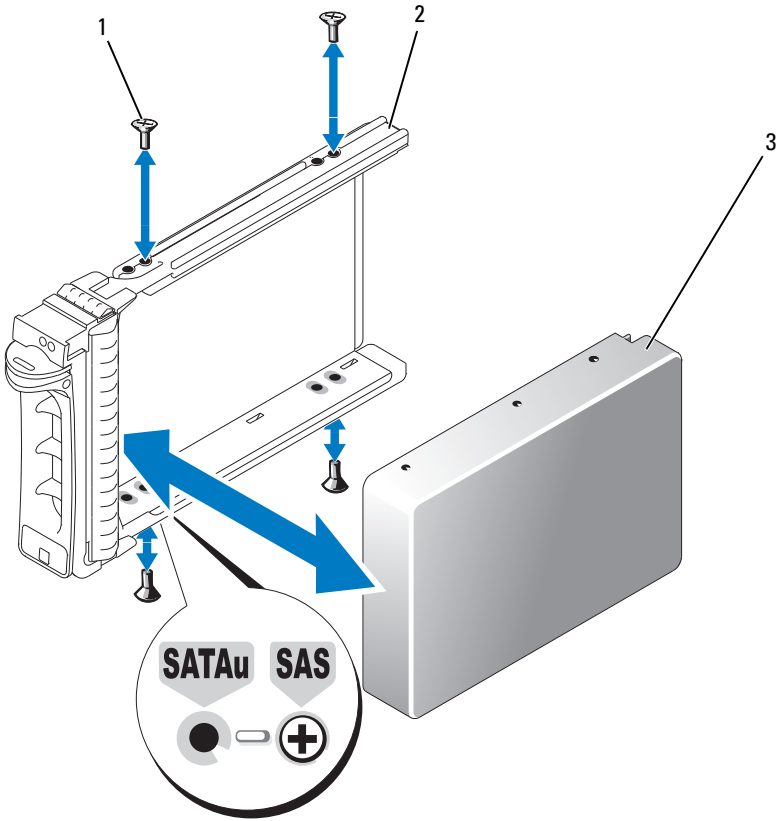


- 1 screws (4) 2 SATAu drive carrier 3 SAS hard drive

Installing a SATA Hard Drive Into a SATA Drive Carrier

NOTE: SATA hard drives that connect directly to the SAS backplane must be installed in SATA drive carriers (labeled "SATA"). Only SATA hard drives with interposer cards can be installed in SATAu drive carriers.

- 1 Insert the SATA hard drive into the hard-drive carrier with the connector end of the drive at the rear. See Figure 3-8.
- 2 Align the screw holes on the hard drive with the holes on the hard-drive carrier. See Figure 3-8.
- 3 Attach the four screws to secure the hard drive to the hard-drive carrier. See Figure 3-8.

Figure 3-8. Installing a SATA Hard Drive Into a SATA Drive Carrier

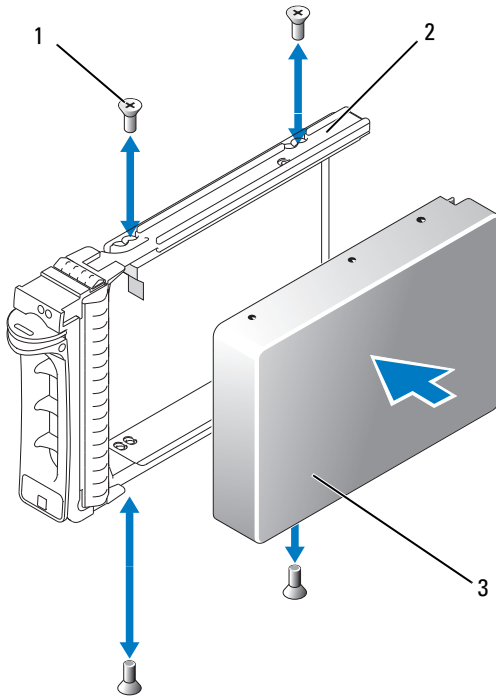

1 screws (4) 2 SATA drive carrier 3 SATA hard drive


Installing a SATA Hard Drive and Interposer Card Into a SATAu Hard-Drive Carrier



NOTE: When you install a SATA hard drive into a SATAu drive carrier, you must install an interposer card onto the back of the hard drive. The SATAu drive carrier is labeled "SATAu" and also has marks indicating the SAS and SATA mounting screws.

- 1** Insert the SATA hard drive into the SATAu hard-drive carrier with the connector end of the drive at the rear. See Figure 3-9.
- 2** Viewing the assembly as shown in Figure 3-9, align the bottom rear screw hole on the hard drive with the hole labeled "SATAu" on the hard drive carrier.
When aligned correctly, the rear of the interposer will be flush with the rear of the hard-drive carrier.
- 3** Attach the four screws to secure the hard drive to the hard-drive carrier. See Figure 3-9.
- 4** Attach the interposer card to the rear of the SATA hard drive:
 - a** Angle the top of the interposer card into the inside top carrier rail so that the tabs on the interposer card bracket attach to the slots on the inside of the carrier rail. See Figure 3-9.
 - b** Rotate the bottom end of the card toward the hard drive to seat the connector. See Figure 3-9.
 - c** Push the bottom end of the card to the hard drive until the latch on the card bracket clicks into place.


Figure 3-9. Installing a SATA Hard Drive and Interposer Card Into a SATAu Drive Carrier

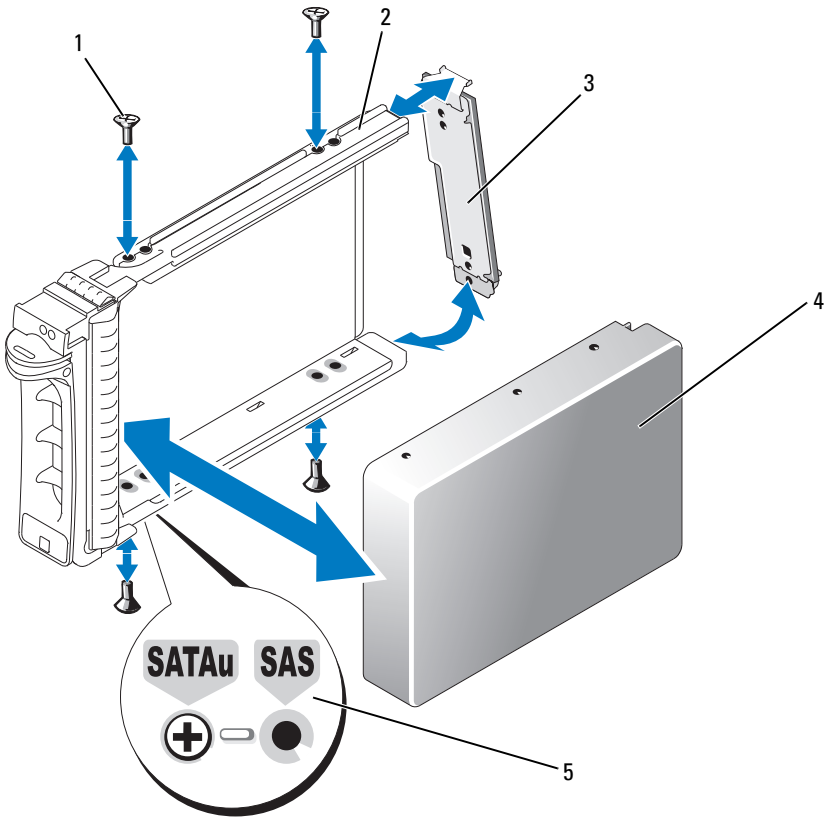


- 1 screws (4)
- 2 SATAu drive carrier
- 3 interposer card (SATA only)
- 4 SATA hard-drive
- 5 hole labels


Power Supplies

Your system supports one or two power supplies rated at an output of 930 W. If only one power supply is installed, it must be installed in the left power supply bay (1). If two power supplies are installed, the second power supply serves as a redundant, hot-plug power source.

 **NOTICE:** To ensure proper system cooling, the power supply blank must be installed on the unoccupied power supply bay in a non-redundant configuration.


Removing a Power Supply

 **NOTICE:** The system requires one power supply for the system to operate normally. The system is in the redundant mode when two power supplies are installed and both power supplies are connected to an AC power source. Remove and replace only one power supply at a time in a system that is powered on.

 **NOTE:** On a rack system, you may have to unlatch and lift the cable management arm if it interferes with power supply removal. For information about the cable management arm, see the system's *Rack Installation Guide*.

- 1 If your system has a single power supply, turn off the system and all attached peripherals. For a redundant system, you can leave the system running and proceed to the next step.
- 2 Disconnect the power supply power cable from the power source.
- 3 Disconnect the power cable from the power supply and remove the cable from the cable retention bracket.
- 4 Release the locking tab on the left side of the power supply, open the handle, and slide the power supply out of the chassis. See Figure 3-10.

Figure 3-10. Installing and Removing a Power Supply

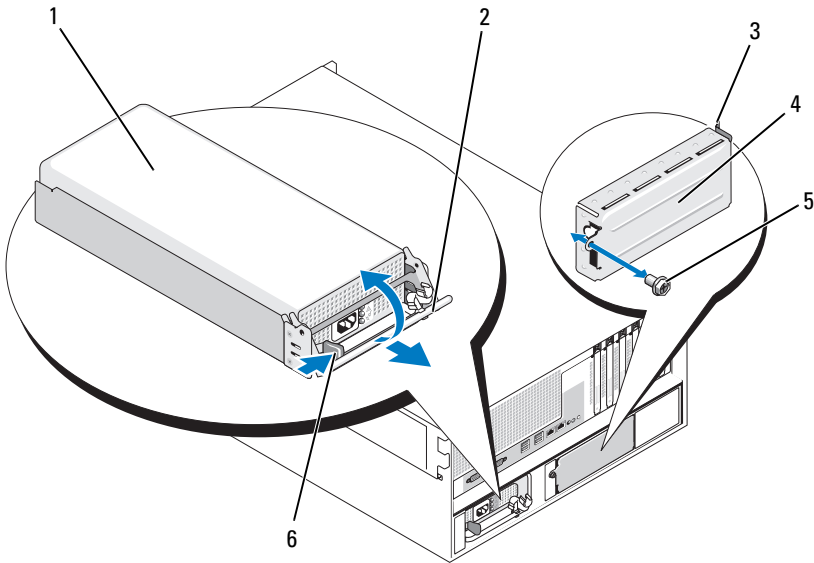

- | | | | | | |
|---|--------------------|---|--------|---|-------------|
| 1 | power supply | 2 | handle | 3 | tab |
| 4 | power supply blank | 5 | screw | 6 | locking tab |

Installing a Power Supply

- 1 If you are adding a second power supply, remove the power supply blank. See "Removing the Power Supply Blank" on page 81.
- 2 Holding the handle in the open position, slide the new power supply into the chassis until the release lever contacts the system chassis. See Figure 3-10.




NOTICE: On a rack system, you may need to temporarily unlatch and lift the cable management arm. For information about the cable management arm, see the system's *Rack Installation Guide*.

- 3 Close the handle until the power supply is fully seated and the locking tab snaps into place.
- 4 Connect the power cable to the power supply and the power outlet. Create a strain-relief loop in the cable at the back of the power supply and attach the cable to the cable retention bracket just past the loop. See the *Getting Started Guide*.

After installing a new power supply in a system with two power supplies, allow several seconds for the system to recognize the power supply and determine its status. The power-supply status indicator turns green to signify that the power supply is functioning properly (see Figure 1-5).

Removing the Power Supply Blank

Using a Phillips screwdriver, remove the screw on the left side of the blank, rotate the blank slightly to clear the bay, and remove from the chassis. See Figure 3-10.

-  **NOTICE:** To ensure proper system cooling, the power supply blank must be installed on the unoccupied power supply bay in a non-redundant configuration. Remove the power supply blank only if you are installing a second power supply.

Installing the Power Supply Blank

To install the power supply blank, insert the tab on the right edge of the blank into the slot in the power supply bay wall. Rotate the blank into the power supply bay and secure with the Phillips screw. See Figure 3-10.

Fans

The system contains six hot-plug cooling fans:

- One expansion-bay cooling fan (fan 1)
- Two processor cooling fans, one for each processor (fans 2 and 3)
- Three memory module cooling fans:
 - One fan on top of the memory cooling shroud (fan 4)
 - Two fans at the rear of the system (fans 5 and 6)


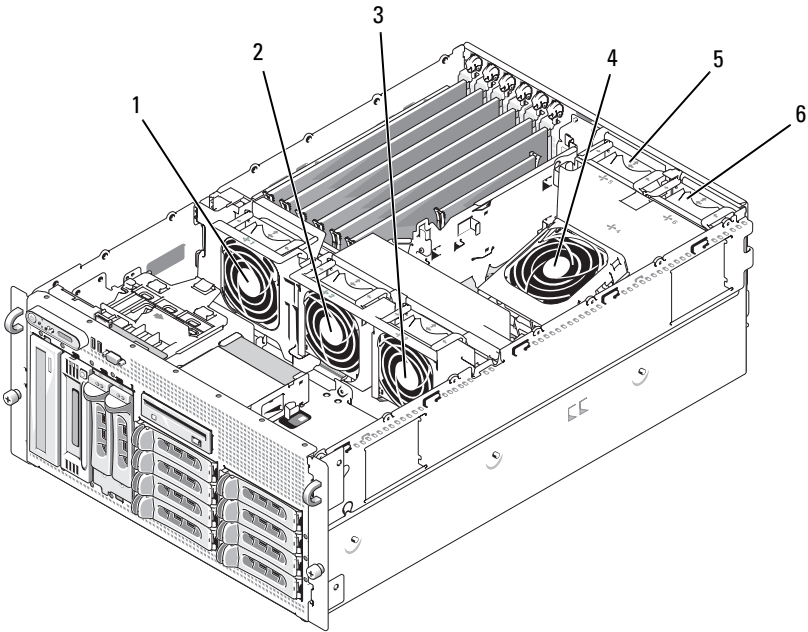
-  **NOTICE:** In the event of a problem with a particular fan, the fan's number is referenced by the systems management software, allowing you to easily identify and replace the proper fan.

Figure 3-11 shows the positions and identification numbers of the fans.

Figure 3-11. Cooling Fans



1 expansion-card fan (FAN1)

2 processor fan (FAN2)

3 processor fan (FAN3)

4 memory module fan (FAN4)

5 memory module fan (FAN5)

6 memory module fan (FAN6)

Removing and Installing a Fan



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


- 1 Open the system. See "Opening the System" on page 67.
- 2 Squeeze the release latches on top of the fan and lift the fan out of the fan bracket. See Figure 3-12.



NOTICE: Do not remove more than one fan at a time and do not operate the system with any fan removed for an extended period of time. Overheating can occur, resulting in a system shutdown and loss of data.

- 3 To replace the fan, align the connector on the fan with the fan connector on the system board and insert the fan into the fan bracket.
The fan will start when it seats into the connector.
- 4 Close the system. See "Closing the System" on page 68.

Figure 3-12. Installing and Removing a Fan From the Fan Brackets

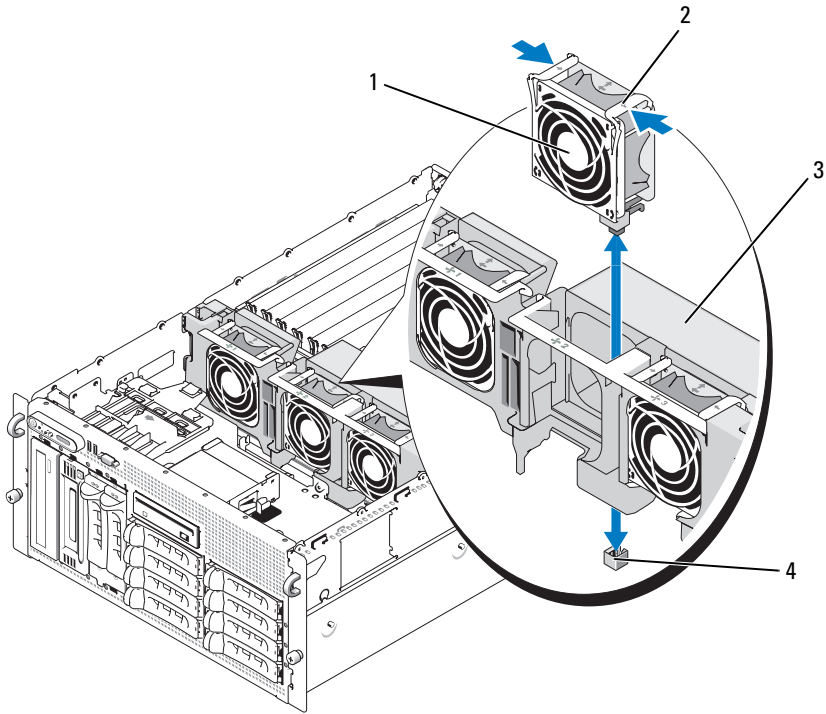

- | | |
|----------------------|---------------------------------|
| 1 fan | 2 release latch (2) |
| 3 center fan bracket | 4 fan connector on system board |

Removing or Installing the Cooling Shroud Fan



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.



NOTICE: Never remove the memory cooling shroud without first powering down the system. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Open the system. See "Opening the System" on page 67.
- 3 Release the fan bracket from the cooling shroud by squeezing the blue latches on each side of the fan bracket, and then rotate the bracket to the up position. See Figure 3-13.



NOTE: Do not remove the cooling shroud from the system to perform this step.


- 4 Remove the fan from the bracket by squeezing the release handles on top of the fan and pulling the fan out of the bracket. See Figure 3-13.



NOTICE: Do not remove more than one fan from the system at a time and do not operate the system with any fan removed for an extended period of time. Overheating can occur resulting in a system shutdown and loss of data.

- 5 Replace the fan.
- 6 Rotate the fan bracket toward the shroud and slightly squeeze the side tabs so that the tabs enter the latch slots.
- 7 Close the system. See "Closing the System" on page 68.
- 8 Replace the front bezel, if removed.

Figure 3-13. Removing and Replacing the Cooling Shroud Fan

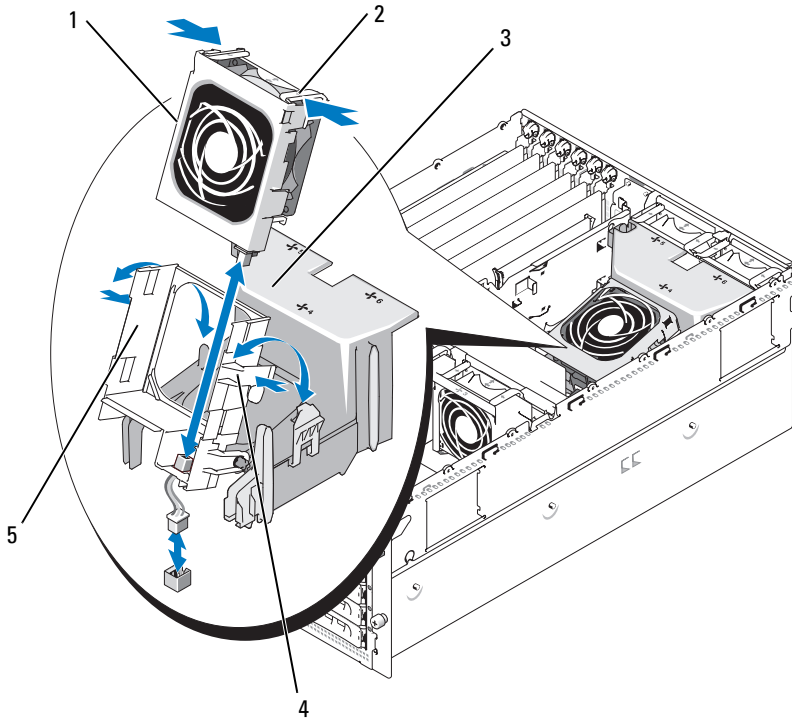

- | | | |
|-------------------------|-------------------------|------------------|
| 1 fan | 2 fan release latch (2) | 3 cooling shroud |
| 4 fan bracket latch (2) | 5 fan bracket | |


Expansion Cards

Your system provides six full-length expansion card slots configured as follows:

- Slot 1 and 2 are 64-bit, 133-MHz (3.3-V) PCI-X expansion slots. These slots will accommodate 133-MHz, 100-MHz, 66-MHz, and 33-MHz PCI cards and PCI-X cards.
- Slot 3 is a x8 lane-width PCIe expansion slot.
- Slots 4, 5, and 6 are x4 lane-width PCIe expansion slots.

Figure 3-14 shows the relative locations of these expansion-card slots

Figure 3-14. Expansion Slots

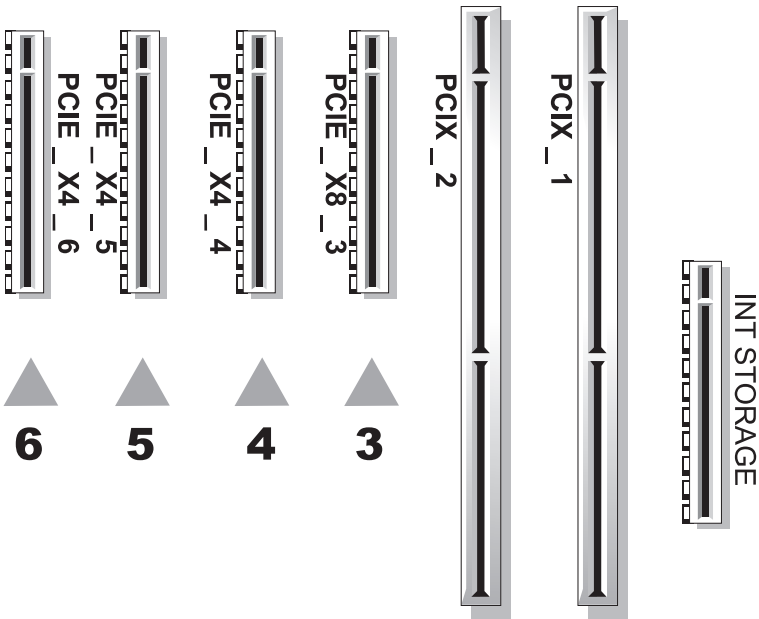


Installing an Expansion Card



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" on page 67.
- 3 Open the plastic expansion-card retainer adjacent to the back of the empty slot. See Figure 3-15.

Figure 3-15. Installing and Removing Expansion Cards

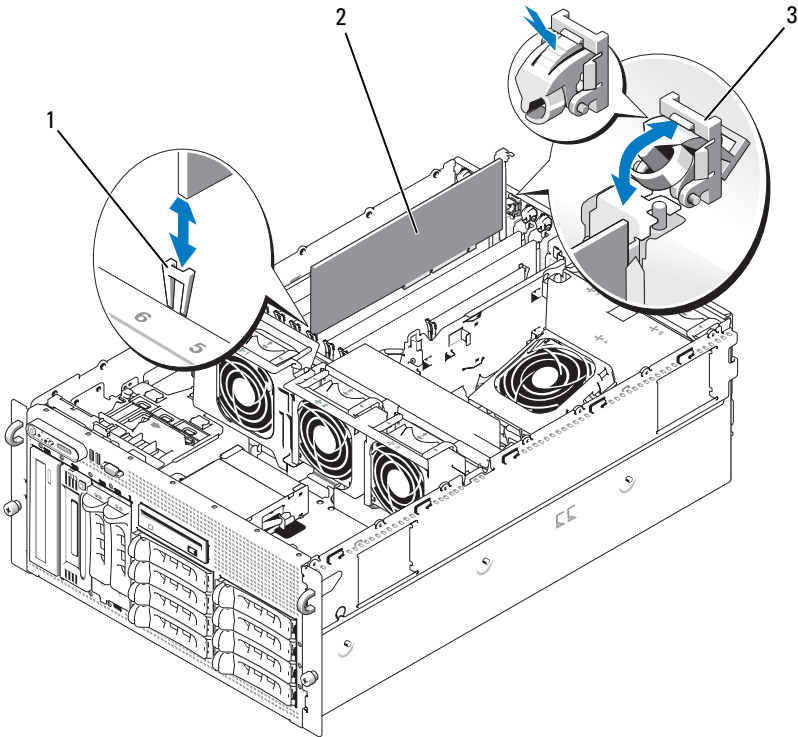


1 card-edge guide 2 expansion card 3 expansion-card retainer

- 4 Remove the filler bracket on the slot you will be using.

 **NOTE:** Keep this bracket if you need to remove the expansion card. Filler brackets must be installed over empty expansion-card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

- 5 Align the expansion card with the card-edge guides and insert the expansion card firmly into the expansion-card connector until the card is fully seated.

 **NOTE:** Ensure that the expansion-card bracket is also inserted into the securing slot on the back of the expansion-card cage.

- 6 Close the expansion-card retainer. See Figure 3-15.
- 7 Connect any internal or external cable(s) to the expansion card.
- 8 Close the system. See "Closing the System" on page 68.

Removing an Expansion Card



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" on page 67.
- 3 Disconnect any internal or external cable(s) that are connected to the expansion card.
- 4 Open the expansion-card retainer adjacent to the slot. See Figure 3-15.
- 5 Grasp the expansion card and carefully remove it from the socket connector.
- 6 If you are permanently removing the card, replace the metal filler bracket over the empty card-slot opening.



NOTE: Filler brackets must be installed over empty expansion-card slots to maintain FCC certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

- 7 Close the expansion-card retainer. See Figure 3-15.
- 8 Close the system. See "Closing the System" on page 68.

Internal SCSI Tape Backup Unit


Removing an Internal SCSI Tape Backup Unit



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Push the spring-loaded release latch on top of the peripheral bay to the left and eject the tape backup unit partially out of the bay. See Figure 3-16.
- 5 Disconnect the ribbon and power cables on the back of the unit.
- 6 Remove the tape backup unit from the system.
- 7 If you are not replacing the unit, insert the filler plate(s) in the peripheral bay.

Figure 3-16. Installing and Removing the Half-Height Tape Backup Unit or Optical Drive

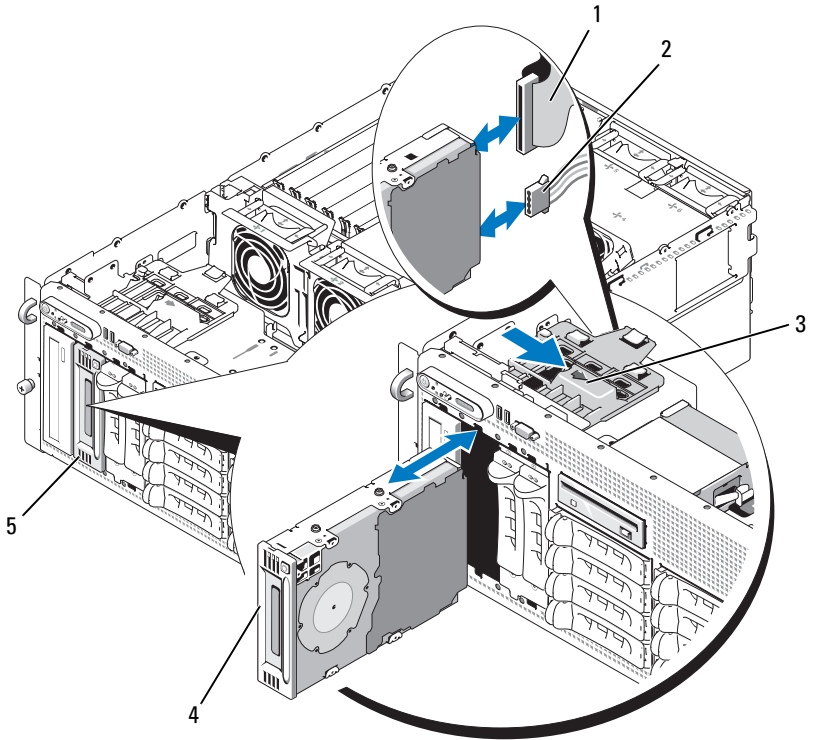



- 1 IDE or SCSI ribbon cable
- 2 power cable
- 3 release latch
- 4 half-height tape backup unit or optical drive
- 5 peripheral bay

Installing an Internal SCSI Tape Backup Unit

This subsection describes how to configure and install an internal SCSI tape backup unit in the peripheral bay.



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Unpack the tape drive (and controller card, if applicable) and configure the tape drive according to the documentation that came with the tape drive, based on the following guidelines:
 - a Each device attached to a SCSI host adapter must have a unique SCSI ID number. (Narrow SCSI devices use IDs 0 to 7; wide SCSI devices use IDs from 0 to 15). Set the drive's SCSI ID to avoid conflicts with other devices on the SCSI bus. For the default SCSI ID setting, see the documentation provided with the drive.
 **NOTE:** There is no requirement that SCSI ID numbers be assigned sequentially or that devices be attached to the cable in order by ID number.
 - b SCSI logic requires that the two devices at opposite ends of a SCSI chain be terminated and that all devices in between be unterminated. Therefore, you enable the tape drive's termination if it is the last device in a chain of devices (or sole device) connected to the SCSI controller.
- 5 If a controller card was included in the drive kit, install the card now. See "Installing an Expansion Card" on page 88.
- 6 Remove the filler plate(s) from the peripheral bay.
 **NOTE:** For a full-height tape backup unit, you must remove two filler plates.
- 7 If the mounting screws are not attached to the drive, install them now.

- 8 Insert the new tape drive three-quarters of the way into the drive slot on the peripheral bay, with the mounting screws entering the bay slide slots.
- 9 Connect the SCSI interface cable in the drive kit to the drive. See Figure 3-16.
- 10 Connect the SCSI interface cable to the SCSI connector on the optional SCSI controller card.
- 11 Connect the power cable to the power connector on the drive. If not already done, connect the other end of the power cable to the CD/TBU power connector on the SAS backplane. See Figure 6-3.
- 12 Push the tape drive the rest of the way into the bay until the spring latch engages.
- 13 Close the system. See "Closing the System" on page 68.
- 14 Replace the front bezel, if it was removed in step 1.
- 15 Reconnect the system and peripherals to their electrical outlets, and turn them on.
- 16 Finish configuring the SCSI tape backup unit according to the documentation you received with the device.
- 17 Perform a tape backup and verification test with the drive as instructed in the software documentation that came with the drive.

Optical Drive

Removing an Optical Drive



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.

- 4 Disconnect the cables from the SAS controller daughter card on the expansion-bay bracket and pull the cables out of the way of the center fans.
- 5 Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 6 Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.
- 7 Push the spring latch at the top of the peripheral bay to the right and partially extend the optical drive out of the bay. See Figure 3-16.
- 8 Remove the ribbon cable and the power cable from the back of the optical drive.
- 9 Remove the optical drive from the bay.
- 10 Replace the optical drive or insert the filler plate over the empty drive slot.
- 11 Replace the center fan bracket. See "Replacing the Center Fan Bracket" on page 106.
- 12 Replace the fans into the center fan bracket.
- 13 Reconnect the cables to the SAS controller daughter card.
- 14 Close the system. See "Closing the System" on page 68.
- 15 Replace the front bezel, if removed in step 2.
- 16 Reconnect the system and peripherals to their electrical outlets.

Installing an Optical Drive




CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.

- 4** Remove the filler plate from the drive slot on the peripheral bay.
- 5** Disconnect the cables from the SAS controller daughter card on the expansion-bay bracket and pull the cables out of the way of the center fans.
- 6** Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 7** Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.
- 8** If the mounting screws are not attached to the drive, install them now.
- 9** Insert the new optical drive three-quarters of the way into the drive slot on the peripheral bay, with the mounting screws entering the bay slide slots. See Figure 3-16.
- 10** Attach one end of the ribbon cable to the IDE connector on the system board (see Figure 6-2) and the other end to the connector on the rear of the optical drive.
- 11** Attach the power cable to the CD power connector (CD/TBU) at the top of the SAS backplane board (see Figure 6-3) and to the power connector on the rear of the optical drive.
- 12** Push the optical drive the rest of the way into the bay until the spring latch engages.
- 13** Replace the center fan bracket. See "Replacing the Center Fan Bracket" on page 106.
- 14** Replace the fans into the center fan bracket.
- 15** Reconnect the cables to the SAS controller daughter card.
- 16** Close the system. See "Closing the System" on page 68.
- 17** Replace the front bezel, if removed in step 2.
- 18** Reconnect the system and peripherals to their electrical outlets.


Diskette Drive

Removing the Diskette Drive

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Disconnect the power cable and ribbon cable from the back of the diskette drive.
- 5 Release the diskette drive carrier from the top of the peripheral bay.
 - a Push inward on the plastic tab on the side of the carrier until the tab clears the metal stop.
 - b Slide the carrier back and lift out of the chassis. See Figure 3-17.

Figure 3-17. Installing and Removing the Diskette Drive

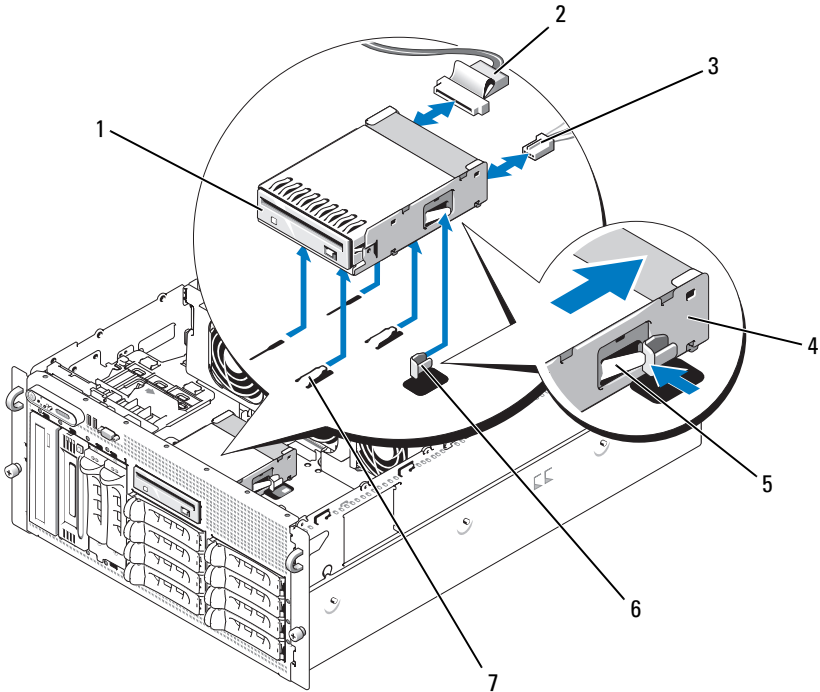


- | | | | | | |
|---|------------------------|---|-----------------------------|---|----------------------------|
| 1 | diskette drive | 2 | diskette drive ribbon cable | 3 | diskette drive power cable |
| 4 | diskette drive carrier | 5 | release tab | 6 | metal stop |
| 7 | drive bay tabs | | | | |

Installing the Diskette Drive Into the Drive Carrier

Place the diskette drive into the drive carrier with the connectors toward the back, align the screw holes, and secure with the three Phillips screws. See Figure 3-18.

Figure 3-18. Installing the Diskette Drive Into the Drive Carrier

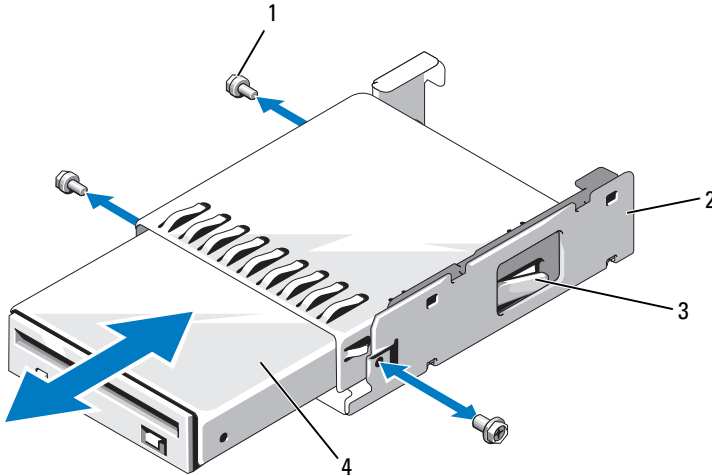

- | | | | |
|---|---------------|---|------------------------|
| 1 | screws (3) | 2 | diskette drive carrier |
| 3 | plastic latch | 4 | diskette drive |

Installing the Diskette Drive


⚠ CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.


- 4** If a diskette drive ribbon cable is already connected to your system board, skip to the next step. Otherwise, do the following:
 - a** Disconnect the cables from the SAS controller daughter card on the expansion-bay bracket and pull the cables out of the way of the center fan bracket.
 - b** Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
 - c** Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.
- 5** To remove the diskette drive filler plate, pull the retention spring slightly away from the filler plate, then lift the filler plate from the carrier.
- 6** Install the diskette drive carrier into the system:
 - a** Align the slots on the bottom of the diskette drive carrier with the drive bay tabs on top of the peripheral bay and lower the carrier onto the tabs.
 - b** Push the carrier toward the system front plate until the plastic latch on the carrier locks into position.
- 7** Attach one end of the ribbon cable to the floppy connector on the system board and the other end to the connector on the rear of the diskette drive.
- 8** Attach the power cable to the floppy connector (FDD) at the top of the SAS backplane board (see Figure 6-3) and to the power connector on the rear of the diskette drive.
- 9** If applicable, replace the components you removed in step 4:
 - a** Replace the center fan bracket. See "Replacing the Center Fan Bracket" on page 106.
 - b** Replace the fans into the center fan bracket.
 - c** Reconnect the cables to the SAS controller daughter card.
- 10** Close the system. See "Closing the System" on page 68.
- 11** Replace the front bezel, if removed in step 2.
- 12** Reconnect the system and peripherals to their electrical outlets.

System Battery

Replacing the System Battery


 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Enter the System Setup program and record the option settings on the System Setup screens. See "Using the System Setup Program" on page 47.
- 2 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 3 Open the system. See "Opening the System" on page 67.
- 4 See Figure 6-2 for the location of the system battery and then, starting with PCI slot 6, remove as many expansion cards as you need to create enough room in the expansion bay to work with the system battery. See "Removing an Expansion Card" on page 90.
- 5 Remove the system battery.

 **NOTICE:** To avoid damage to the battery connector, you must firmly support the connector while installing or removing a battery.

- a Support the battery connector by pressing down firmly on the positive side of the connector. See Figure 3-19.
- b While supporting the battery connector, push the battery toward the positive side of the connector and pry it up out of the securing tabs at the negative side of the connector.

Figure 3-19. Replacing the System Battery

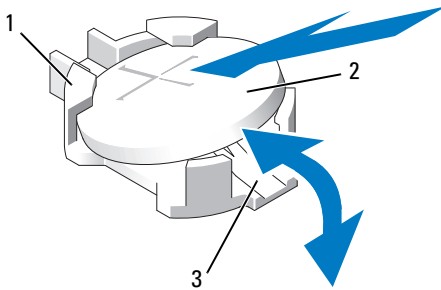


- | | | | | | |
|---|----------------------------|---|----------------|---|----------------------------|
| 1 | positive side of connector | 2 | system battery | 3 | negative side of connector |
|---|----------------------------|---|----------------|---|----------------------------|

- 6 Install the new system battery with the side labeled "+" facing up. See Figure 3-19.
- 7 Install the new system battery.
 - a Support the battery connector by pressing down firmly on the positive side of the connector.
 - b Hold the battery with the "+" facing up, and slide it under the securing tabs at the positive side of the connector.
 - c Press the battery straight down into the connector until it snaps into place.
- 8 Replace all the expansion cards you removed in step 4.
- 9 Close the system. See "Closing the System" on page 68.
- 10 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.
- 11 Enter the System Setup program to confirm that the battery operates properly.
- 12 From the main screen, select System Time to enter the correct time and date.
- 13 Re-enter any system configuration information that is no longer displayed on the System Setup screens, and then exit the System Setup program.
- 14 To test the newly installed battery, see "Troubleshooting the System Battery" on page 154.


Cooling Shroud

The cooling shroud produces and directs airflow over the system memory modules with an attached hot-plug fan. The fan need not be removed prior to removing the shroud.

Removing the Cooling Shroud

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.

 **NOTICE:** Never remove the memory cooling shroud without first powering down the system. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

- 2 Open the system. See "Opening the System" on page 67.
- 3 To remove the cooling shroud, release the blue latches on the shroud by pulling each latch outward from its securing tab. See Figure 3-20.
- 4 Lift the shroud straight up to disengage the fan connector from the system board, and then lift the shroud out of the system. See Figure 3-20.


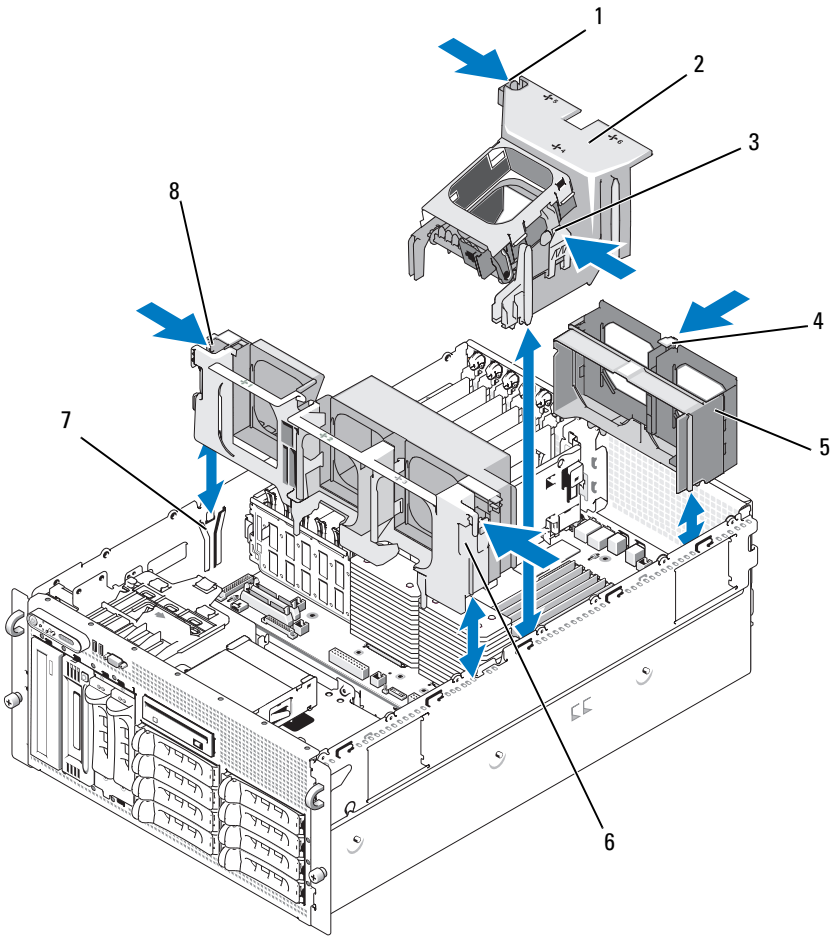
 **CAUTION:** The DIMMs are hot to the touch for some time after the system has been powered down. Allow time for the DIMMs to cool before handling them. Handle the DIMMs by the card edges and avoid touching the DIMM components.

Figure 3-20. Installing and Removing the Fan Brackets and Cooling Shroud



- | | | |
|----------------------------------|--|--------------------------------|
| 1 cooling shroud latch (left) | 2 cooling shroud | 3 cooling shroud latch (right) |
| 4 back fan bracket release latch | 5 back fan bracket | 6 center fan bracket |
| 7 chassis slot | 8 center fan bracket release latch (2) | |

Installing the Cooling Shroud

To install the cooling shroud, align the rails on the right side of the shroud with the tracks on the right chassis wall and then slowly lower the shroud straight down into the system until the fan connector engages and the latches snap into place. See Figure 3-20.



NOTICE: Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

Fan Brackets

Removing the Center Fan Bracket



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Disconnect the cables from the SAS controller daughter card on the expansion bay bracket.
- 5 Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 6 To release the fan bracket, use your index fingers and push inward on the blue latches on each end of the center fan bracket. Then slide the bracket straight up and out of the system. See Figure 3-20.
If the bracket does not disengage completely, push down slightly on the bracket when releasing the latches.

Replacing the Center Fan Bracket

- 1 Align the rails on each end of the fan bracket with the guide rails on the chassis walls and lower the bracket down into the system until the latches engage.
- 2 Reattach the cables to the SAS controller daughter card on the expansion bay bracket.
- 3 Replace the fans into the fan bracket.
- 4 Close the system. See "Closing the System" on page 68.
- 5 Replace the front bezel, if removed.
- 6 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.

Removing the Back Fan Bracket



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.
- 5 Remove the fans from the back fan bracket. See "Removing and Installing a Fan" on page 83.
- 6 To remove the back fan bracket, push down on the blue latch along the rear chassis wall and slide the bracket upwards. See Figure 3-20.

Replacing the Back Fan Bracket

- 1 Slide the left and right edges of the bracket into the two corresponding channels on the inside of the system chassis back panel. See Figure 3-20.

- 2 Lower the bracket into the system until the two tabs on the top edge of the bracket fit into the slots in the system back panel.
- 3 Replace the memory cooling shroud.
- ➡ **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 4 Replace the fans into the fan bracket.
- 5 Close the system. See "Closing the System" on page 68.
- 6 Replace the front bezel, if removed.
- 7 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.

Memory

You can upgrade your system memory to a maximum of 48 GB by installing 533MHz or, when available, 667MHz fully buffered DIMMs (FBDs) in dual sets of 256-MB, 512-MB, 1-GB, 2-GB, or 4-GB. The memory sockets are located on the system board beneath the cooling shroud. See Figure 6-2.

- ➡ **NOTICE:** If you remove your original memory modules from the system during a memory upgrade, keep them separate from any new memory modules that you may have. Use only 533 MHz or, when available, 667 MHz FBDs.

The memory module sockets are arranged on the system board in two equal branches (0 and 1). See Figure 3-21. Each branch consists of two channels:


- Channel 0 and channel 1 are in branch 0.
- Channel 2 and channel 3 are in branch 1.

Each channel consists of three DIMM sockets:

- Channel 0 contains DIMM_1, DIMM_5, and DIMM_9.
- Channel 1 contains DIMM_2, DIMM_6, and DIMM_10.
- Channel 2 contains DIMM_3, DIMM_7, and DIMM_11.
- Channel 3 contains DIMM_4, DIMM_8, and DIMM_12.

The first DIMM socket of each channel has white release tabs.

Figure 3-21. DIMM Sockets

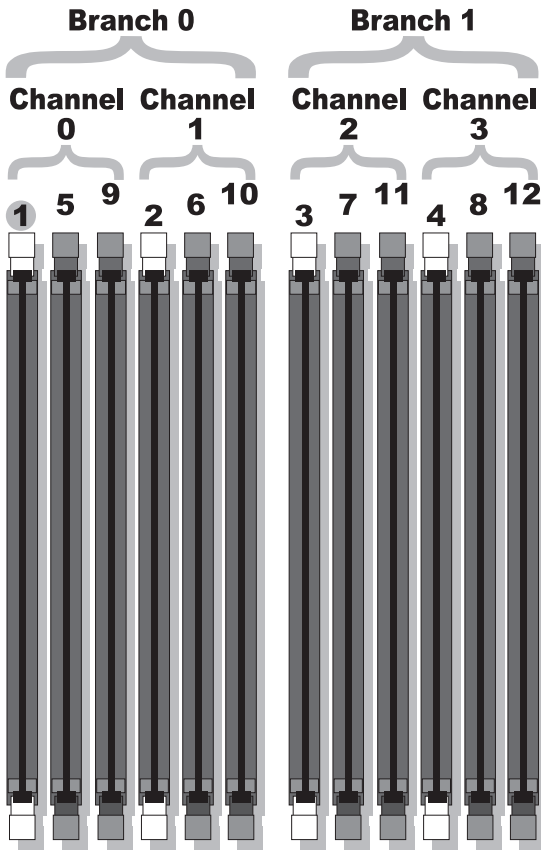

General Memory Module Installation Guidelines

To ensure optimal performance of your system, observe the following guidelines when configuring your system memory.

- Use only qualified FBDs. FBDs can be either single-ranked or dual-ranked. FBDs marked with a 1R are single-ranked and modules marked with a 2R are dual-ranked.
- A minimum of two identical FBDs must be installed.
- DIMM sockets must be populated by lowest number first.
- FBDs must be installed in pairs of matched memory size, speed, and technology, and the total number of FBDs in the configuration must total two, four, eight, or twelve. For best system performance, all four, eight, or twelve FBDs should be identical memory size, speed, and technology.
- Memory sparing and memory mirroring require eight or twelve FBDs, and all FBDs must be of identical memory size, speed, and technology.
- Memory sparing and memory mirroring cannot be implemented at the same time.

Non-Optimal Memory Configurations

System performance can be affected if your memory configuration does not conform to the preceding installation guidelines. Your system may issue an error message during startup stating that your memory configuration is non-optimal.

Memory Sparing Support

The system supports memory sparing if eight or twelve identical memory modules are installed in the system. The memory sparing feature must be enabled in the System Setup program and can be used only if memory mirroring is not enabled.

Memory sparing allocates four ranks of DIMM memory to the spare bank of memory sparing. These four ranks consist of the first rank of memory in DIMM sockets 1 through 4. For single-rank DIMMs, the entire capacity of the four DIMMs is allocated to sparing whereas for dual-rank DIMMs, only half of the four-DIMM capacity is allocated to sparing. Table 3-1 shows how memory sparing splits the available and spared memory in each of the single- and dual-ranked memory module combinations.


Table 3-1. Memory Sparing Configurations

DIMMs	Size/Type	Total Memory	Available	Spare
8	256-MB single-rank	2 GB	1 GB	1 GB
	512-MB single-rank	4 GB	2 GB	2 GB
	1-GB single-rank	8 GB	4 GB	4 GB
	2-GB single-rank	16 GB	8 GB	8 GB
	2-GB dual-rank	16 GB	12 GB	4 GB
	4-GB dual-rank	32 GB	24 GB	8 GB
12	256-MB single-rank	3 GB	2 GB	1 GB
	512-MB single-rank	6 GB	4 GB	2 GB
	1-GB single-rank	12 GB	8 GB	4 GB
	2-GB single-rank	24 GB	16 GB	8 GB
	2-GB dual-rank	24 GB	20 GB	4 GB
	4-GB dual-rank	48 GB	40 GB	8 GB

Memory Mirroring Support

The system supports memory mirroring if eight or twelve identical memory modules are installed in the system. Mirroring must be enabled in the System Setup program and can be used only if memory sparing is not enabled. In a mirrored configuration, the total available system memory is one-half of the total installed memory.

Installing Memory Modules

 **CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.**

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" on page 67.

3 Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.


➡ NOTICE: Never remove the memory cooling shroud without first powering down the system. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

4 Locate the memory module sockets on the system board. See Figure 6-2.

⚠ CAUTION: The DIMMs are hot to the touch for some time after the system has been powered down. Allow time for the DIMMs to cool before handling them. Handle the DIMMs by the card edges and avoid touching the DIMM components.

5 Press the ejectors on the memory module socket down and out, as shown in Figure 3-22, to allow the memory module to be inserted into the socket.

Figure 3-22. Installing and Removing a Memory Module

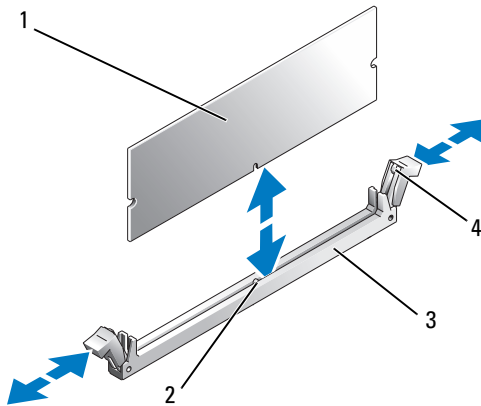

- | | | | |
|---|---------------|---|-----------------------------------|
| 1 | memory module | 2 | alignment key |
| 3 | socket | 4 | memory module socket ejectors (2) |

6 Align the memory module's edge connector with the alignment key on the memory module socket, and insert the memory module in the socket.

🔧 NOTE: The memory module socket has an alignment key that allows you to install the memory module in the socket in only one way.

- 7 Press down on the memory module with your thumbs while pulling up on the ejectors with your index fingers to lock the memory module into the socket.

When the memory module is properly seated in the socket, the ejectors on the memory module socket align with the ejectors on the other sockets that have memory modules installed.

- 8 Repeat step 3 through step 7 of this procedure to install the remaining memory modules.
- 9 Replace the memory cooling shroud.



NOTICE: Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.




- 10 Close the system. See "Closing the System" on page 68.
- 11 Reconnect the system and peripherals to power and turn them on.
- 12 (Optional) Press <F2> to enter the System Setup program, and check the System Memory setting on the main System Setup screen.
The system should have already changed the value to reflect the newly installed memory.
- 13 If the value is incorrect, one or more of the memory modules may not be installed properly. Repeat step 2 through step 12 of this procedure, checking to ensure that the memory modules are firmly seated in their sockets.
- 14 Run the system memory test in the system diagnostics. See "Running the System Diagnostics" on page 173.

Removing Memory Modules




CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.

- 2 Open the system. See "Opening the System" on page 67.
- 3 Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.
-  **NOTICE:** Never remove the memory cooling shroud without first powering down the system. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 4 Locate the memory module sockets on the system board. See Figure 6-2.
-  **CAUTION: The DIMMs are hot to the touch for some time after the system has been powered down. Allow time for the DIMMs to cool before handling them. Handle the DIMMs by the card edges and avoid touching the DIMM components.**
- 5 Press down and out on the ejectors on each end of the socket until the memory module pops out of the socket. See Figure 3-22.
- 6 Replace the memory cooling shroud.
-  **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 7 Close the system. See "Closing the System" on page 68.

RAC Card

Removing a RAC Card

- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" on page 67.
- 3 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 4 Remove the cooling fan. See "Removing or Installing the Cooling Shroud Fan" on page 85.
- 5 Remove the cooling shroud by pulling the release latches outward from their securing tabs and lifting the shroud out of the system. See Figure 3-20.
-  **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

-  **NOTICE:** Be careful when disconnecting cables from the system board that you do not damage the surrounding system board components. Be particularly careful that you do not push or bend the system capacitors near the connectors.
- 6 Disconnect the management cable from the system board.
 - 7 Disconnect the management cable from the RAC card.
 - 8 Disconnect the MII cable from the system board.
 - 9 Disconnect the MII cable from the RAC card.
 - 10 Press down on the two blue RAC retention clips.
 - 11 Rotate the RAC card away from the retention clips, and then slide the RAC card out toward the front of the chassis.

Installing a RAC Card


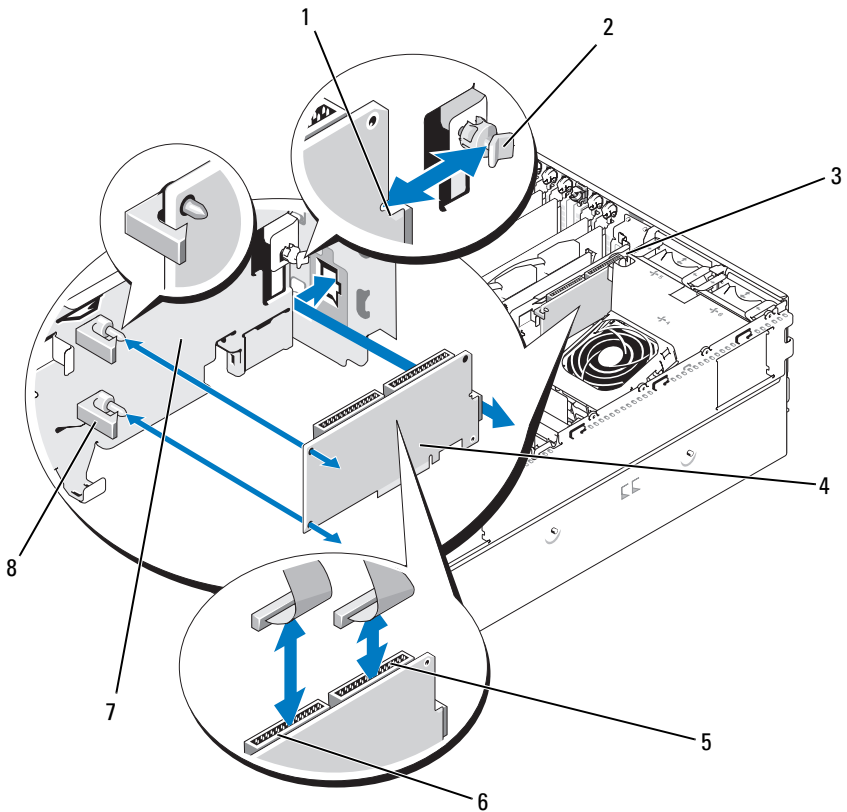
-  **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.
- 1 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
 - 2 Open the system. See "Opening the System" on page 67.
 - 3 Remove the cooling shroud by pulling the release latches outward from their securing tabs and lifting the shroud out of the system. See Figure 3-20.
 - 4 Remove the filler plug from the system back panel. See Figure 3-23.

Figure 3-23. Installing a RAC Card



- | | | |
|-------------------------|--------------------------------------|------------------------|
| 1 notch in card edge | 2 back standoff | 3 NIC connector cutout |
| 4 RAC card | 5 RAC connector 2 | 6 RAC connector 1 |
| 7 expansion-bay bracket | 8 standoffs with card-edge clips (2) | |

5 Angle the RAC card so that its NIC connector inserts through the back-panel RAC card opening. See Figure 3-23.

- 6 Attach the card to the expansion-bay bracket:
 - a Position the RAC card on the expansion-bay bracket so that the plastic standoff at the back of the bracket inserts into the notch on the edge of the RAC card.
 - b Carefully press the back end of the card onto the two plastic standoffs until the clips on the standoffs snap over the card edges. See Figure 3-23.
- 7 Attach the ribbon cables to the RAC card connectors and to the RAC connectors on the system board (see Figure 6-2):
 - ➔ **NOTICE:** Be careful when attaching cables to the system board that you do not damage the surrounding system board components. Be particularly careful that you do not push or bend the system capacitors near the connectors.
 - a Connect one cable to connector 1 on the RAC card and to RAC_CONN1 on the system board.
 - b Connect the second cable to connector 2 on the RAC card and to RAC_CONN2 on the system board.
- 8 Reinstall the cooling shroud.
 - ➔ **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 9 Close the system. See "Closing the System" on page 68.
- 10 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.
- 11 Enter the System Setup program and verify that the setting for the RAC card has changed to reflect the presence of the card. See "Using the System Setup Program" on page 47.

See the RAC card documentation for information on configuring and using the RAC card.


Activating the Integrated NIC TOE

To add TCP/IP Offload Engine (TOE) functionality to the system's integrated NIC, install the TOE NIC hardware key in the TOE_KEY socket on the system board (see Figure 6-2.)


Microprocessor


You can upgrade the system processor(s) to take advantage of future options in speed and functionality, or add a second processor. Each processor and its associated internal cache memory are contained in a land grid array (LGA) package that is installed in a ZIF socket on the system board.

Replacing a Processor

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


- 1 Prior to upgrading your system, download the latest system BIOS version on support.dell.com.
- 2 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 5 Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.

 **NOTICE:** When you remove the heat sink, the possibility exists that the processor might adhere to the heat sink and be removed from the socket. It is recommended that you remove the heat sink while the processor is still warm.

 **NOTICE:** Never remove the heat sink from a processor unless you intend to remove the processor. The heat sink is necessary to maintain proper thermal conditions.

- 6 Press the blue tab on the end of one of the heat-sink retention levers to disengage the lever, then lift the lever 90 degrees. See Figure 3-24.

Figure 3-24. Installing and Removing the Heat Sink

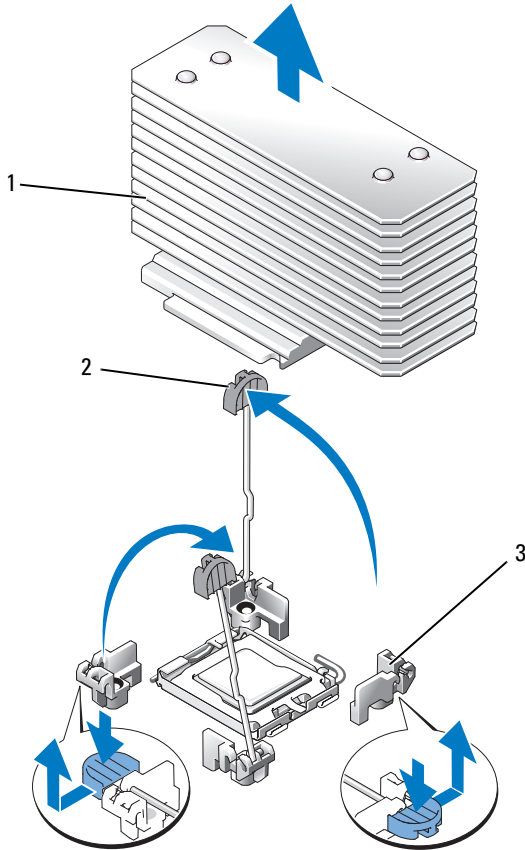

1 heat sink

2 heat-sink retention
lever (2)


3 retention lever latch

7 Wait 30 seconds for the heat sink to loosen from the processor.

8 Open the other heat sink retention lever.

- 9 If the heat sink has not separated from the processor, carefully rotate the heat sink in a clockwise, then counterclockwise, direction until it releases from the processor. Do not pry the heat sink off of the processor.
- 10 Lift the heat sink off of the processor and set the heat sink aside.
- 11 Pull the socket-release lever 90 degrees upward until the processor is released from the socket. See Figure 3-25.
- 12 Rotate the processor shield upward and out of the way.

Figure 3-25. Installing and Removing a Processor

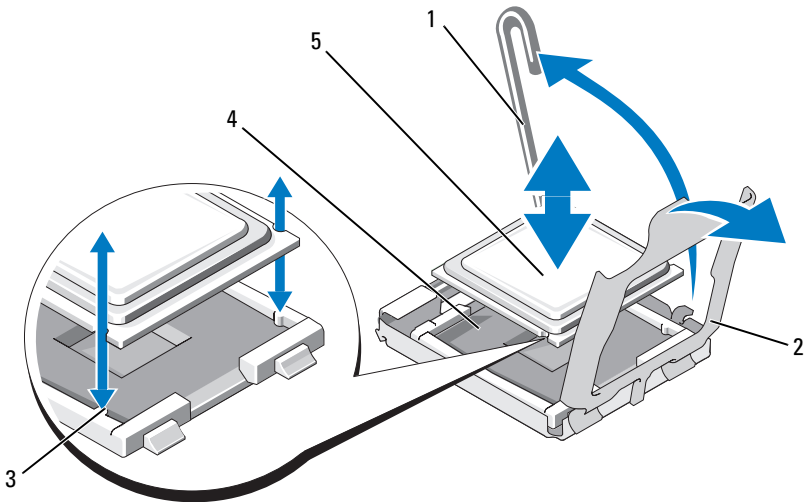




- | | | |
|------------------------|--------------------|------------------|
| 1 socket-release lever | 2 processor shield | 3 socket key (2) |
| 4 ZIF socket | 5 processor | |

- 13 Lift the processor out of the socket and leave the release lever up so that the socket is ready for the new processor.

➡ NOTICE: Be careful not to bend any of the pins on the ZIF socket when removing the processor. Bending the pins can permanently damage the system board.

- 14 Unpack the new processor.

- 15 Align the processor with the socket keys on the ZIF socket.
See Figure 3-25.
- 16 Install the processor in the socket.
 -  **NOTICE:** Positioning the processor incorrectly can permanently damage the system board or the processor when you turn it on. When placing the processor in the socket, be careful not to bend the pins in the socket.
 - a If the release lever on the processor socket is not positioned all the way up, move it to that position.
 - b With the processor and the socket keys aligned, set the processor lightly in the socket, making sure all pins are matched with the correct holes in the socket.
 -  **NOTICE:** Do not use force to seat the processor. When the processor is positioned correctly, it engages easily into the socket.
 - c When the processor is fully seated in the socket, rotate the socket release lever back down until it snaps into place, securing the processor. See Figure 3-25.
 - d Close the processor cover. See Figure 3-25.
- 17 Install the heat sink.
 - a Using a clean lint-free cloth, remove the existing thermal grease from the heat sink.
 -  **NOTE:** If you did not receive a replacement heat sink, use the heat sink that you removed in step 10.
 - b Remove the protective sheet from the thermal grease layer on top of the processor. If you receive the processor without the thermal grease pre-applied, open the grease packet included with your processor kit and apply thermal grease evenly to the top of the processor.
 - c Place the heat sink onto the processor. See Figure 3-24.
 - d Close one of the two heat sink retention levers until it locks. See Figure 3-24.
 - e Repeat for the other heat sink retention lever.
- 18 Reinstall the fans in the center fan bracket. See "Removing and Installing a Fan" on page 83.

- 19 Reinstall the center fan bracket. See "Replacing the Center Fan Bracket" on page 106.
- 20 Close the system. See "Closing the System" on page 68.
- 21 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.

As the system boots, it detects the presence of the new processor and automatically changes the system configuration information in the System Setup program.
- 22 Press <F2> to enter the System Setup program, and check that the processor information matches the new system configuration. See "Using the System Setup Program" on page 47 for instructions about using the System Setup program.
- 23 Run the system diagnostics to verify that the new processor operates correctly. See "Running the System Diagnostics" on page 173 for information about running the diagnostics and troubleshooting processor problems.

1x8 SAS Backplane Board

Removing the 1x8 SAS Backplane Board



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet and peripherals.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Disconnect the cables from the SAS controller daughter card on the expansion bay bracket and remove the cables from the center fan bracket.

- 5 Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 6 Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.
- 7 Disconnect all cables from the SAS backplane. See Figure 6-3.
- 8 Unlock and slide the hard drive(s) out of the system at least 5 cm (2 inches).
- ➔ **NOTICE:** If you completely remove the drives from the system, you must note the number of each drive and temporarily label them before removal, so you can replace them in the same locations.
- 9 Remove the SAS backplane:
 - a Lift the spring-loaded blue retention pin to release the backplane and then slide the backplane upward.
 - b When the backplane cannot slide upward any farther, pull the backplane toward the back of the system to remove it from the retention hooks.


Installing the 1x8 SAS Backplane Board

- 1 Insert the backplane into the system behind the drive bays. Ensure that all cables are out of the way when installing the new backplane.
- 2 Align the backplane with the retention hooks on the chassis, then fit the backplane onto the retention hooks.
- 3 Slide the backplane downward until the blue retention pin snaps into place.
- 4 Reconnect all cables to the backplane, being very careful to install them in their original locations.
- 5 Reinsert the hard drives.
- 6 Reinstall the fans in the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 7 Reinstall the center fan bracket. See "Replacing the Center Fan Bracket" on page 106.
- 8 Close the system. See "Closing the System" on page 68.

- 9 Replace the front bezel, if removed.
- 10 Reconnect the system to the electrical outlet and turn on the system and attached peripherals.


Optional 1x2 Flex Bay Drive Bracket

Removing the 1x2 Flex Bay Drive Bracket

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet and peripherals.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Push the latch on top of the peripheral bay to the right to release the flex bay bracket and push the back of the flex bay bracket partially out of the chassis. See Figure 3-26.
- 5 Note the order of SAS cable connections on the flex bay backplane and disconnect the SAS cables. See Figure 3-26.
- 6 Disconnect the power cable from the flex bay backplane. See Figure 3-26.
- 7 Remove the 1x2 flex bay drive bracket from the chassis bay.

Figure 3-26. Installing and Removing the Flex Bay Drive Bracket

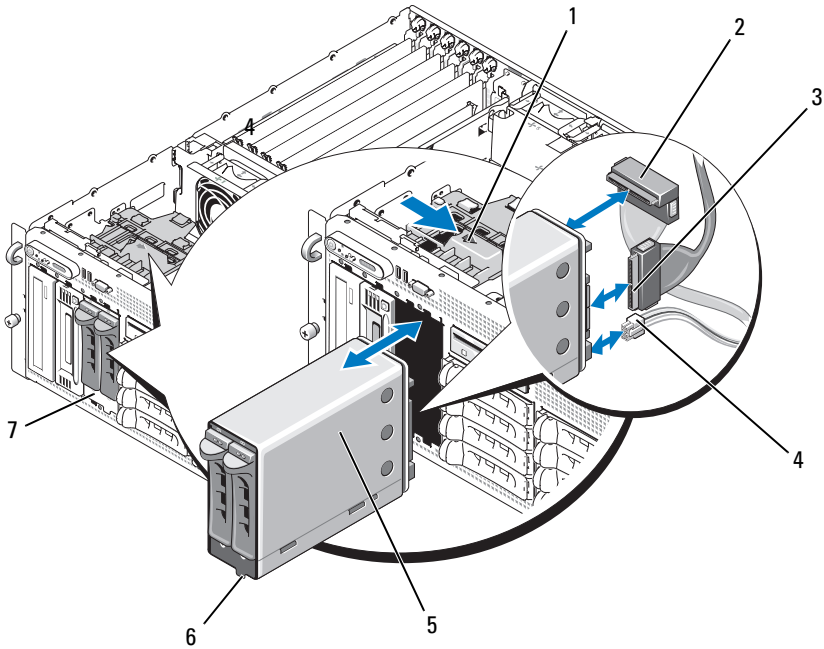

- | | | |
|--------------------------------|------------------------------|-----------------------------|
| 1 peripheral bay release latch | 2 SAS connector (SAS_B_IN) | 3 SAS connector (SAS_B_OUT) |
| 4 power connector | 5 1x2 flex bay drive bracket | 6 slot key |
| 7 flex bay | | |

Installing the 1x2 Flex Bay Drive Bracket



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet and peripherals.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Remove the flex bay filler panel, if present.
- 5 Insert the 1x2 flex bay bracket three-quarters of the way into the flex bay. See Figure 3-26.

The flex bay bracket is keyed for correct insertion into the flex bay.

- 6 Connect the SAS cables to the flex bay bracket backplane:
 - a Connect the SAS cable from the SAS_B connector on the 1x8 backplane board to the SAS_B_OUT connector on the flex bay backplane board. See Figure 6-3 for the location of the SAS_B connector on the 1x8 backplane board.
 - b Connect the SAS cable from the SAS RAID controller daughter card to the SAS_B_IN connector on the flex bay backplane board.
- 7 Connect the power cable to the flex bay backplane board (see Figure 3-26) and to the power connector on the 1x8 backplane board (see Figure 6-3).

SAS Controller Daughter Card

Your system has a dedicated slot (INT STORAGE) for a SAS controller daughter card. See Figure 3-14. The SAS controller daughter card provides the SAS storage subsystem for your system's internal hard drives.




NOTE: The non-RAID SAS controller daughter card supports a maximum of four SAS or SATA hard drives. The drives must occupy drive bays 0 through 3.

The optional SAS RAID controller daughter card supports up to 10 SAS or SATA hard drives and enables you to set up your hard drives in a RAID configuration. For more information, see the documentation that came with your SAS RAID controller daughter card.

Replacing the SAS RAID Controller Daughter Card Battery

- 1 Disconnect the battery cable from the SAS RAID controller daughter card by releasing the tab on the cable connector on the daughter card and pulling the battery cable free. See Figure 3-27.
- 2 Pull the connector through the routing hole on the expansion-bay bracket and then remove the battery from the expansion-bay bracket by sliding the battery up and out of the battery bay. See Figure 3-27.
- 3 Insert the new battery into the battery bay, ensuring that the battery is aligned and fully seated into the slots. See Figure 3-27.
- 4 Route the cable connector through the routing hole and connect the storage card battery cable to the SAS controller daughter card. See Figure 3-27.

Figure 3-27. Replacing a SAS RAID Controller Daughter Card Battery

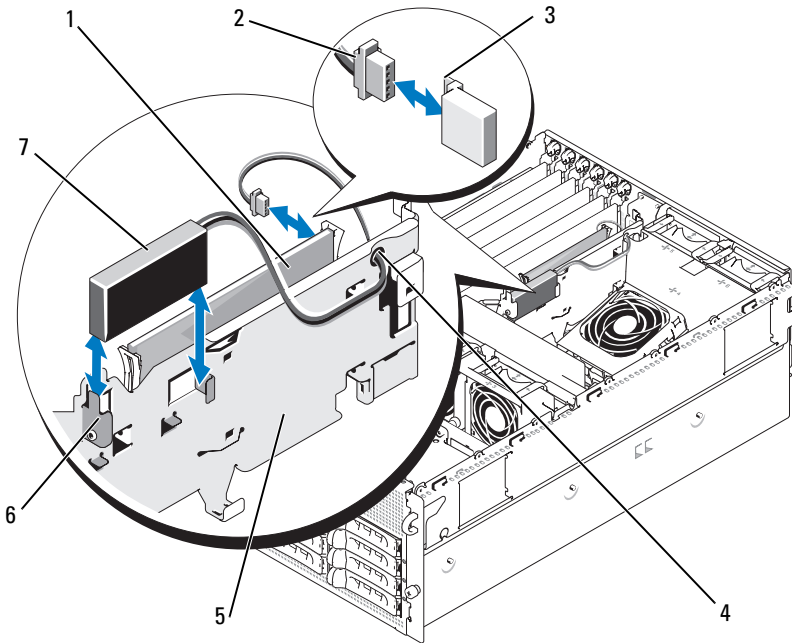

- | | | |
|---------------------------------------|-------------------------|-------------------------|
| 1 SAS RAID controller daughter card | 2 RAID battery cable | 3 connector release tab |
| 4 routing hole for RAID battery cable | 5 expansion-bay bracket | 6 battery bay |
| 7 RAID battery | | |

Removing the SAS Controller Daughter Card


The following procedure applies to either a SAS controller or a SAS RAID controller daughter card. A SAS RAID controller daughter card is illustrated in Figure 3-28.

- 1 If applicable, disconnect the RAID battery cable from the controller card by releasing the tab on the cable connector on the daughter card and pulling the battery cable free.

- 2 Push outward on the plastic guide rails and gently pull up on the card edges until the card-edge connector clears the socket on the system board. See Figure 3-28.
- 3 Continue to hold the guide rails outward as you pull the SAS controller daughter card upward from the rails.

If you need to replace the SAS daughter card battery, see "Replacing the SAS RAID Controller Daughter Card Battery" on page 126.

Figure 3-28. Installing and Removing the SAS Controller Daughter Card

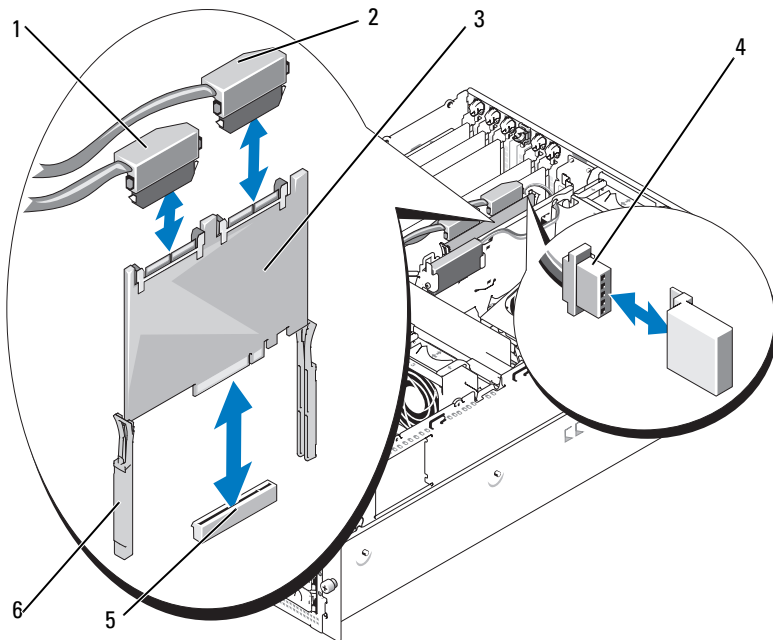

- | | | |
|--|--|--------------------------------|
| 1 SAS connector 0 (out to 1x8 backplane SAS_A connector) | 2 SAS connector 1 (SAS RAID only) (out to 1x8 backplane SAS_B connector or 1x2 SAS_B_IN connector) | 3 SAS controller daughter card |
| 4 RAID battery cable (SAS RAID only) | 5 daughter card slot socket | 6 slide rails (2) |

Installing the SAS Controller Daughter Card

The following procedure applies to either a SAS controller or a SAS RAID controller daughter card.

- 1 Hold the daughter card by its edges and align the card with the slide rails on the expansion-bay bracket. See Figure 3-28.



NOTE: When pushing the SAS controller daughter card into the socket connector, push only on the card edges and not on the DIMM or any part of the DIMM socket on the daughter card.

- 2 Insert the card into the slide rails and slide the card down until the card-edge connector seats into the dedicated storage socket (INT STORAGE) on the system board. See Figure 3-14 and Figure 3-28.
- 3 If present, connect the battery cable to the battery cable connector on the SAS controller daughter card.

If you need to replace the SAS daughter card battery, see "Replacing the SAS RAID Controller Daughter Card Battery" on page 126.

Cabling the SAS Backplane Boards

Cable Requirements

The cables needed to connect the SAS storage system depend on your configuration. Table 3-2 provides a listing of the available configurations for your SAS storage, the number of cables required, and the number of hard drives supported in each configuration.


Table 3-2. Cable Requirements

Configuration	Cables Required	Hard Drives Supported
SAS controller	1	4 (bays 0 through 3)
SAS RAID controller /no 1x2 flex bay backplane	2	8 (bays 0 through 7)
SAS RAID controller /1x2 flex bay backplane	3	10 (bays 0 through 9)

Cabling the SAS Controller (Non-RAID)

For a system with a non-RAID SAS controller daughter card installed, connect SAS_0 on the SAS controller daughter card to connector SAS_A on the SAS backplane board. See Figure 3-29.

Figure 3-29. Cabling the SAS Controller (Non-RAID)

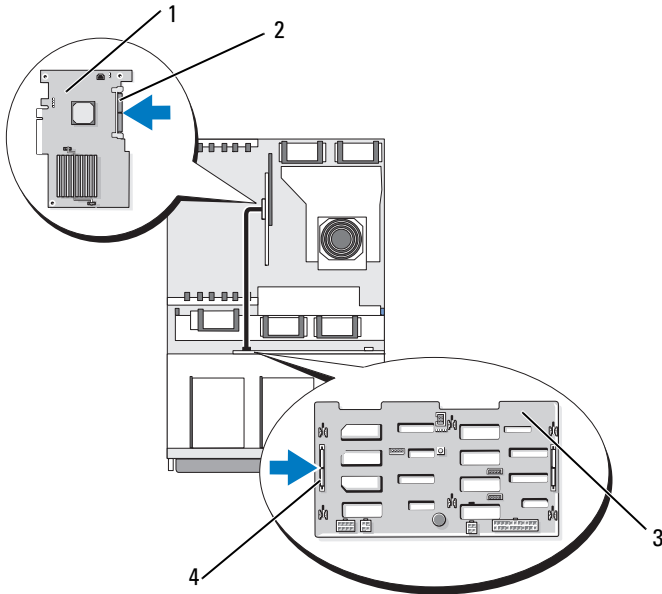

- | | |
|--------------------------------|-------------------|
| 1 SAS controller daughter card | 2 SAS connector |
| 3 1x8 SAS backplane | 4 SAS_A connector |


Cabling the SAS RAID Controller

For a system with the optional SAS RAID controller daughter card installed, you can configure your system to use the 1x8 SAS backplane only or the 1x8 SAS backplane with the optional 1x2 SAS backplane installed. Cabling for each configuration is discussed in the following subsections. See your SAS RAID controller documentation for details on the different RAID levels supported for your configuration and the drive requirements for specific RAID types.

1x8 Drive Configuration

For a 1x8 drive configuration with no optional 1x2 backplane installed in the system, connect SAS_0 on the SAS controller daughter card to connector SAS_A on the 1x8 backplane. Connect SAS_1 on the SAS controller daughter card to connector SAS_B on the 1x8 backplane. See Figure 3-30.

Figure 3-30. Cabling the SAS RAID Controller to the 1x8 Backplane

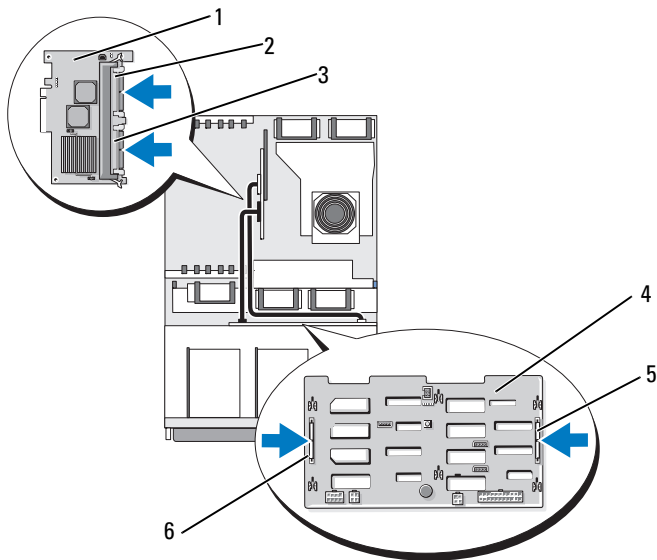

- | | | |
|--|-------------------|-------------------|
| 1 SAS RAID controller daughter card (DIMM not shown) | 2 SAS_1 connector | 3 SAS_0 connector |
| 4 1x8 SAS backplane | 5 SAS_B connector | 6 SAS_A connector |


1x8 Plus 1x2 Drive Configuration

If the optional 1x2 SAS backplane is installed in the flex bay, make the following cable connections:

- Connect SAS_0 on the SAS controller daughter card to connector SAS_A on the 1x8 SAS backplane board. See Figure .
- Connect SAS_1 on the SAS controller daughter card to SAS_B_IN on the 1x2 SAS backplane board. See Figure .

- Connect SAS_B_OUT on the 1x2 SAS backplane board to connector SAS_B on the 1x8 SAS backplane board. See Figure .

Figure 3-31. Cabling the SAS RAID Controller to the 1x8 and 1x2 Backplane

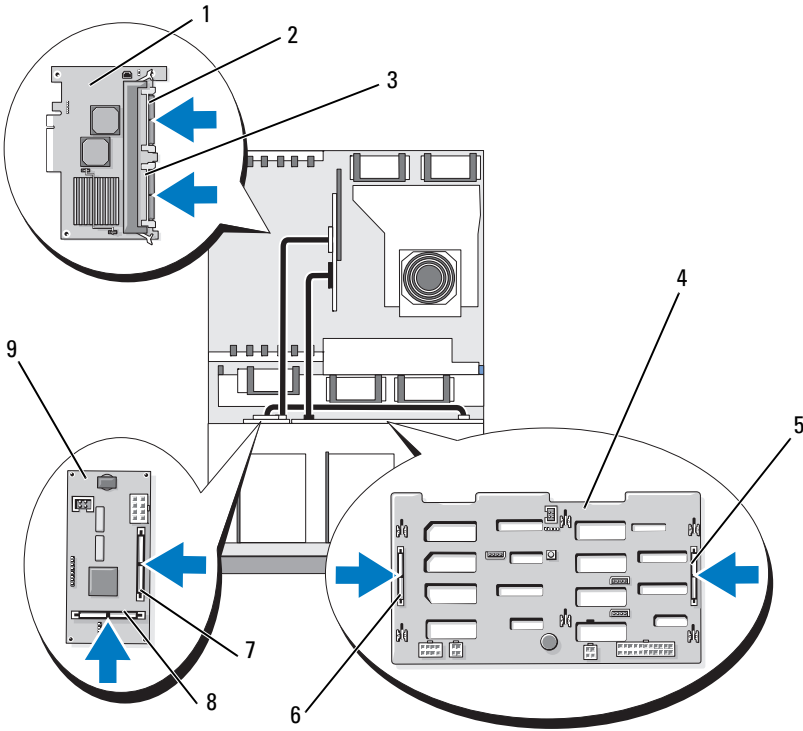

- | | | |
|--|--|--|
| 1 SAS RAID controller daughter card (DIMM not shown) | 2 SAS_1 connector (connect to SAS_B_IN connector) | 3 SAS_0 connector (connect to SAS_A connector) |
| 4 1x8 SAS backplane | 5 SAS_B connector | 6 SAS_A connector |
| 7 SAS_B_IN connector | 8 SAS_B_OUT connector (connect to SAS_B connector) | 9 1x2 SAS backplane |


Configuring the Boot Drive

By default, the system boots from drive 0 on the 1x8 SAS backplane. The order of boot devices is specified in the System Setup program. See "Using the System Setup Program" on page 47.

Control Panel Assembly (Service-Only Procedure)

Removing the Control Panel Assembly

The following procedure applies to either a rack or tower system. Figure 3-32 illustrates a control panel assembly in the rack orientation.

 **CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.**

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet and peripherals.
- 3 Open the system. See "Opening the System" on page 67.
- 4 If you have a tower system, remove the system top panel:


- a** Remove the screw on the top back of the system that secures the system top panel.
 - b** Slide the panel back until it clears the chassis hooks and lift up to remove the panel.
- 5** Disconnect the display module cable from the control panel board. See Figure 3-32.
- 6** Remove the three screws that secure the control panel board to the system chassis and remove the board. See Figure 3-32.
- 7** Disconnect the control panel cable from the back of the control panel. See Figure 3-32.



NOTICE: Do not pull on the cable to unseat the connector. Doing so can damage the cable.

- a** Squeeze the metal tabs on the ends of the cable connector.
 - b** Gently work the connector out of the socket.
- 8** Remove the display module:
 - a** Insert the end of a paper clip into the hole on the right side of the display module and gently pry the label off.
 - b** Using a T10 Torx driver, remove the two screws that secure the display module to the system chassis.
 - c** Remove the display module from the chassis cutout.

Figure 3-32. Removing the Control Panel Assembly

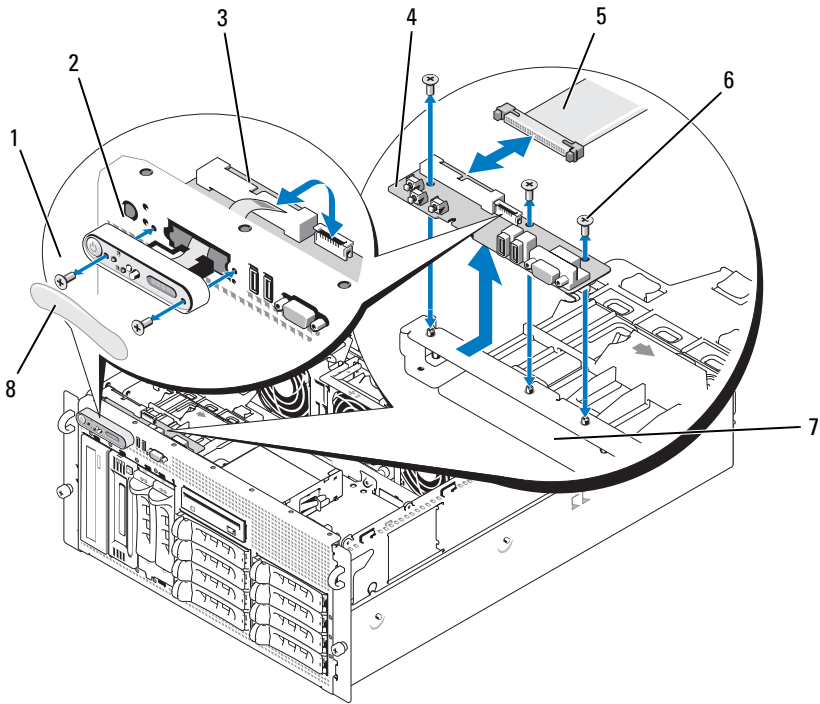

- | | | |
|-----------------------------|------------------------|------------------------|
| 1 display module screws (2) | 2 display module | 3 display module cable |
| 4 control panel board | 5 control panel cable | 6 screws (3) |
| 7 system chassis | 8 display module label | |

Installing the Control Panel Assembly


The following procedure applies to either a rack or tower system. Figure 3-32 illustrates a control panel assembly in the rack orientation.


- 1 Insert the control panel assembly display module into the chassis cutout and secure with the two Torx screws.
- 2 Affix the control panel label to the display module.

- 3 Install the control panel board in the system chassis and secure with the three Phillips screws. See Figure 3-32.
- 4 Connect the display module ribbon cable to the control panel board. See Figure 3-32.
- 5 Connect the control panel interface cable to the control panel board. See Figure 3-32.
- 6 Close the system. See "Closing the System" on page 68.
- 7 If applicable, reinstall the top panel on your tower system:
 - a Place the top panel on top of the system and offset slightly so that the panel can engage the chassis hooks.
 - b Slide the panel forward to closed position.
 - c Install the retaining screw to the top back of the system.
- 8 Reconnect the system to the power source and turn on the system and attached peripherals.
- 9 Replace the front bezel, if removed.

System Board (Service-Only Procedure)

Removing the System Board

 **CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.**

 **CAUTION: Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.**

- 1 Remove the front bezel, if attached. See "Removing the Bezel" on page 64.
- 2 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 3 Detach all cables from the front and rear of the system.
- 4 If the system is a tower system, place it on its side on top of a work surface.

- 5 Open the system. See "Opening the System" on page 67.
- 6 Disconnect any cables attached to expansion cards in the expansion-bay bracket.
- 7 Remove all of the cooling fans. See "Removing and Installing a Fan" on page 83 and "Removing or Installing the Cooling Shroud Fan" on page 85.
- 8 Remove the center and rear fan brackets. See "Removing the Center Fan Bracket" on page 105 and "Removing the Back Fan Bracket" on page 106.
- 9 Remove the memory cooling shroud.
- 10 Remove all expansion cards from the expansion bay. See "Removing an Expansion Card" on page 90.
- 11 Disconnect the SAS controller daughter card from the system board socket connector:
 - a Push outward on the plastic guide rails and gently pull up on the card edges until the card-edge connector clears the socket.
 - b Leave the SAS controller daughter card in the expansion-bay bracket.
- 12 If a RAC card is present in the system, disconnect the RAC cables from the system board. Leave the RAC card attached to the expansion-bay bracket.

Squeeze the metal tabs on the ends of the RAC cable connector and gently work the connector out of the socket.


- 13 Remove the expansion-bay bracket:
 - a Pull inward on the latch on the left side of the bracket along the system chassis wall.
 - b Pull the bracket slightly forward to free the bracket from the chassis tabs and lift the bracket up and out of the chassis.
- 14 Remove the TOE key, if present. See Figure 6-2.
- 15 Disconnect all cables from the connectors on the front edge of the system board.



CAUTION: The DIMMs are hot to the touch for some time after the system has been powered down. Allow time for the DIMMs to cool before handling them. Handle the DIMMs by the card edges and avoid touching the DIMM components.

- 16 Remove the memory modules. See "Removing Memory Modules" on page 112.
- 17 Remove the CPU processor(s). See "Replacing a Processor" on page 117.
- 18 To remove the system board:
 - a Lift up the blue retention pin and slide the system board toward the front of the system to disengage the board from the hooks on the chassis. See Figure 3-33.
 - b Lift the system board out of the system chassis.

Figure 3-33. Removing the System Board

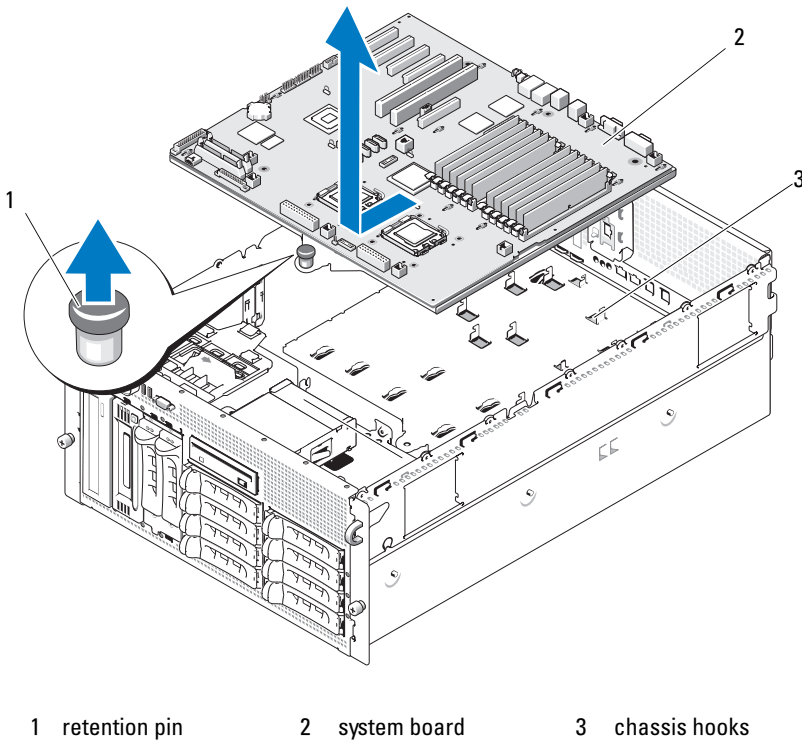

Installing the System Board




CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Unpack the new system board.
- 2 Install the system board.
 - a Hold the system board by its front edge and the memory module socket ejectors.
 - b Carefully lower the system board into the chassis with the DIMM-socket side of the board tilted down slightly to allow room for the board to clear the chassis wall slides. Ensure that the I/O connectors on the back edge of the board fit underneath the ledge on the inside of the chassis back panel.


When the board is properly positioned, the tabs on the chassis will fit through the corresponding slots in the system board.


- c Slide the system board tray toward the back of the chassis until the retention pin snaps into place.
- 3 Reinstall the CPU processor(s). See "Replacing a Processor" on page 117.
- 4 Reinstall the memory modules. See "Installing Memory Modules" on page 110.
- 5 Reconnect all cables to the connectors on the front edge of the system board.
- 6 Reinstall the TOE key, if applicable. See Figure 6-2.
- 7 Reinstall the expansion-bay bracket:
 - a Align the expansion-bay bracket with the tabs on the system board and the chassis wall and then carefully push the bracket into the tabs.
 - b Gently push the bracket toward the back of the chassis until the latch on the left side of the bracket engages.
- 8 Install all expansion cards. See "Installing an Expansion Card" on page 88.

- 9 Reinstall the SAS controller daughter card. See "SAS Controller Daughter Card" on page 126.
- 10 If a RAC card is present, attach the cables to the RAC connectors on the system board. See "Installing a RAC Card" on page 114.
- 11 Reinstall the center and rear fan brackets. See "Replacing the Center Fan Bracket" on page 106 and "Replacing the Back Fan Bracket" on page 106.
- 12 Install the memory cooling shroud. See "Installing the Cooling Shroud" on page 105.
-  **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 13 Install all of the cooling fans. See "Removing and Installing a Fan" on page 83
- 14 Reconnect all cables to the expansion cards.
- 15 Close the system. See "Closing the System" on page 68.
- 16 Reconnect all cables to the front and rear of the system.
- 17 Reconnect the system to the power source and turn on the system and attached peripherals.
- 18 Replace the front bezel, if removed.

Power Distribution Board (Service-Only Procedure)


Removing the Power Distribution Board

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

 **CAUTION:** Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.

- 1 Turn off power to the system and disconnect the power cable from the power source.
- 2 Detach all cables from the rear of the system.
- 3 If the system is a tower system, place it on its side on top of a work surface.
- 4 Open the system. See "Opening the System" on page 67.
- 5 Perform all of the additional steps to remove the system board in "Removing the System Board" on page 136.
- 6 Disconnect all cables connecting the system board to the SAS backplane board, the control panel, and any tape or hard drives in the peripheral or flex bays.
- 7 Disconnect the cables connecting the system board and SAS backplane board to the power distribution board.
- 8 Unlock the power supplies from the system and slide them back 5 cm (2 inches). See "Removing a Power Supply" on page 79
- 9 Using a #2 Phillips screwdriver, remove the five screws from the power distribution board. See Figure 3-34.
- 10 Remove the power distribution board from the system chassis. See Figure 3-34.

Figure 3-34. Removing the Power Distribution Board

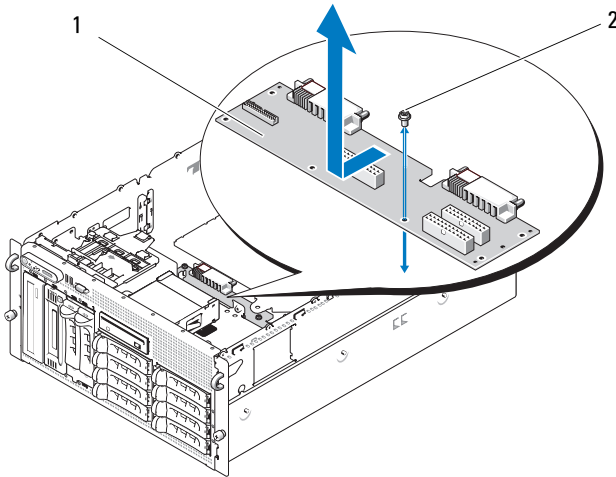

- 1 power distribution board 2 screws (5)

Installing the Power Distribution Board

⚠ CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Unpack the new power distribution board.
- 2 Holding the power distribution board by its edges, carefully lower the board into the chassis and align the board with the fastener holes at the bottom of the chassis. See Figure 3-34.
- 3 Using a #2 Phillips screwdriver, install the five screws to secure the power distribution board to the system chassis. See Figure 3-34.
- 4 Attach the power cables to the power distribution board.
- 5 Reinstall the system board. See "Installing the System Board" on page 139.

- 6** Attach the cables from the power distribution board to the system board.
- 7** Attach the cables from the power distribution board to the SAS backplane board.
- 8** Reconnect all cables from the system board to the SAS backplane board, the control panel, and any tape or hard drives in the peripheral or flex bays.
- 9** Close the system. See "Closing the System" on page 68.
- 10** Reinsert the power supplies. See "Installing a Power Supply" on page 80.
- 11** Reconnect the system to the peripherals and electrical outlet, and turn on the system.

Troubleshooting Your System

Safety First—For You and Your System

To perform certain procedures in this document, you must remove the system cover and work inside the system. While working inside the system, do not attempt to service the system except as explained in this guide and elsewhere in your system documentation.

⚠ CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

Start-Up Routine

Look and listen during the system's start-up routine for the indications described in Table 4-1.

Table 4-1. Start-Up Routine Indications

Look/listen for:	Action
A status or error message displayed on the front-panel LCD.	See "LCD Status Messages" on page 22.
An error message displayed on the monitor.	See "System Messages" on page 34.
Alert messages from the systems management software.	See the systems management software documentation.
The monitor's power indicator.	See "Troubleshooting the Video Subsystem" on page 147.
The keyboard indicators.	See "Troubleshooting the Keyboard" on page 148.

Table 4-1. Start-Up Routine Indications (continued)

Look/listen for:	Action
The USB diskette drive activity indicator.	See "Troubleshooting a USB Device" on page 151.
The USB CD drive activity indicator.	See "Troubleshooting a USB Device" on page 151.
The diskette drive activity indicator.	See "Troubleshooting a Diskette Drive" on page 160.
The CD drive activity indicator.	See "Troubleshooting an Optical Drive" on page 162.
The hard-drive activity indicator.	See "Troubleshooting a Hard Drive" on page 164.
An unfamiliar constant scraping or grinding sound when you access a drive.	See "Getting Help" on page 185.

Checking the Equipment

This section provides troubleshooting procedures for external devices attached to the system, such as the monitor, keyboard, or mouse. Before you perform any of the procedures, see "Troubleshooting External Connections" on page 147.

Troubleshooting IRQ Assignment Conflicts

Most PCI devices can share an IRQ with another device, but they cannot use an IRQ simultaneously. To avoid this type of conflict, see the documentation for each PCI device for specific IRQ requirements. Table 4-2 lists the IRQ assignments.

Table 4-2. IRQ Assignment Defaults

IRQ Line	Assignment
IRQ0	System timer
IRQ1	Keyboard controller
IRQ2	Interrupt controller 1 to enable IRQ8 through IRQ15
IRQ3	Serial port 2 (COM2 and COM4)

Table 4-2. IRQ Assignment Defaults (continued)

IRQ Line	Assignment
IRQ4	Serial port 1 (COM1 and COM3)
IRQ5	Remote access controller
IRQ6	Diskette drive controller
IRQ7	Reserved
IRQ8	Real-time clock
IRQ9	ACPI functions (used for power management)
IRQ10	<i>Available</i>
IRQ11	<i>Available</i>
IRQ12	PS/2 mouse port unless the mouse is disabled through the System Setup program
IRQ13	Math coprocessor
IRQ14	IDE CD drive controller
IRQ15	<i>Available</i>

Troubleshooting External Connections

Loose or improperly connected cables are the most likely source of problems for the system, monitor, and other peripherals (such as a printer, keyboard, mouse, or other external device). Ensure that all external cables are securely attached to the external connectors on your system. See Figure 1-2 for the front-panel connectors and Figure 1-4 for the back-panel connectors on your system.

Troubleshooting the Video Subsystem

Problem

- Monitor is not working properly.
- Video memory is faulty.

Action

- 1 Check the system and power connections to the monitor.
- 2 Determine whether the system has an expansion card with a video output connector.

In this system configuration, the monitor cable should normally be connected to the connector on the expansion card, *not* to the system's integrated video connector.

To verify that the monitor is connected to the correct video connector, turn off the system and wait for 1 minute, then connect the monitor to the other video connector and turn the system on again.

- 3 Determine whether the system has monitors attached to both the front and rear video connectors.

The system supports only one monitor attached to either the front or rear video connector. When a monitor is connected to the front panel, the back-panel video is disabled.

If two monitors are attached to the system, disconnect one monitor. If the problem is not resolved, continue to the next step.

- 4 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.

If the tests run successfully, the problem is not related to video hardware.

If the tests fail, see "Getting Help" on page 185.

Troubleshooting the Keyboard

Problem

- System message indicates a problem with the keyboard
- Keyboard is not functioning properly

Action

- 1 Enter the System Setup program and ensure that the USB ports are enabled. See "Using the System Setup Program" on page 47.
- 2 Examine the keyboard and its cable for signs of damage.

- 3** Swap the faulty keyboard with a working keyboard.
If the problem is resolved, replace the faulty keyboard. See "Getting Help" on page 185.
- 4** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
If the problem is not resolved, see "Getting Help" on page 185.

Troubleshooting the Mouse

Problem

- System message indicates a problem with the mouse.
- Mouse is not functioning properly.

Action

- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
If the test fails, continue to the next step.
- 2** Examine the mouse and its cable for signs of damage.
If the mouse is not damaged, go to step 4.
If the mouse is damaged, continue to the next step.
- 3** Swap the faulty mouse with a working mouse.
If the problem is resolved, replace the faulty mouse. See "Getting Help" on page 185.
- 4** Enter the System Setup program and ensure that the USB port is enabled. See "Using the System Setup Program" on page 47.
If the problem is not resolved, see "Getting Help" on page 185.

Troubleshooting Basic I/O Functions

Problem

- Error message indicates a problem with a serial port.
- Device connected to a serial port is not operating properly.

Action

- 1** Enter the System Setup program and ensure that the serial port is enabled and configured correctly for your application. See "Using the System Setup Program" on page 47.
- 2** If the problem is confined to a particular application, see the application documentation for specific port configuration requirements that the program may require.
- 3** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.

If the tests run successfully but the problem persists, see "Troubleshooting a Serial I/O Device" on page 150.

Troubleshooting a Serial I/O Device

Problem

- Device connected to the serial port is not operating properly.

Action

- 1** Turn off the system and any peripheral devices connected to the serial port.
- 2** Swap the serial interface cable with a working cable, and turn on the system and the serial device.

If the problem is resolved, replace the interface cable. See "Getting Help" on page 185.

- 3** Turn off the system and the serial device, and swap the device with a comparable device.
- 4** Turn on the system and the serial device.

If the problem is resolved, replace the serial device. See "Getting Help" on page 185.

If the problem persists, see "Getting Help" on page 185.

Troubleshooting a USB Device

Problem

- System message indicates a problem with a USB device.
- Device connected to a USB port is not operating properly.

Action

- 1** Enter the System Setup program, and ensure that the USB ports are enabled. See "Using the System Setup Program" on page 47.
- 2** Turn off the system and any USB devices.
- 3** Disconnect the USB devices, and connect the malfunctioning device to the other USB connector.
- 4** Turn on the system and the reconnected device.
If the problem is resolved, the USB connector might be defective. See "Getting Help" on page 185.
- 5** If possible, swap the interface cable with a working cable.
If the problem is resolved, replace the interface cable. See "Getting Help" on page 185.
- 6** Turn off the system and the USB device, and swap the device with a comparable device.
- 7** Turn on the system and the USB device.
If the problem is resolved, replace the USB device. See "Getting Help" on page 185.
If the problem persists, see "Getting Help" on page 185.

Troubleshooting a NIC

Problem

- NIC cannot communicate with network.

Action

- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 2** Check the appropriate indicator on the NIC connector.
 - If the link indicator does not light, check all cable connections.
 - If the activity indicator does not light, the network driver files might be damaged or missing.

Remove and reinstall the drivers if applicable. See the NIC's documentation.

- Change the autonegotiation setting, if possible.
- Use another connector on the switch or hub.

If you are using a NIC card instead of an integrated NIC, see the documentation for the NIC card.

- 3** Ensure that the appropriate drivers are installed and the protocols are bound. See the NIC's documentation.
- 4** Enter the System Setup program and confirm that the NICs are enabled. See "Using the System Setup Program" on page 47.
- 5** Ensure that the NICs, hubs, and switches on the network are all set to the same data transmission speed. See the network equipment documentation.
- 6** Ensure that all network cables are of the proper type and do not exceed the maximum length.

Troubleshooting a Wet System

Problem

- Liquid spilled on the system.
- Excessive humidity.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Open the system. See "Opening the System" on page 67.
- 3 Remove all expansion cards installed in the system. See "Removing an Expansion Card" on page 90.
- 4 Let the system dry thoroughly for at least 24 hours.
- 5 Close the system. See "Closing the System" on page 68.
- 6 Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.

If the system does not start properly, see "Getting Help" on page 185.

- 7 If the system starts properly, shut down the system and reinstall all of the expansion cards that you removed. See "Installing an Expansion Card" on page 88.
- 8 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
If the tests fail, see "Getting Help" on page 185.

Troubleshooting a Damaged System

Problem

- System was dropped or damaged.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Open the system. See "Opening the System" on page 67.
- 2 Ensure that the following components are properly installed:
 - Expansion cards
 - Power supplies
 - Fans
 - Processors and heat sinks
 - Memory modules
 - Drive-carrier connections to the SAS backplane board, if applicable
- 3 Ensure that all cables are properly connected.
- 4 Close the system. See "Closing the System" on page 68.
- 5 Run the system board tests in the system diagnostics. See "Running the System Diagnostics" on page 173.
If the tests fail, see "Getting Help" on page 185.

Troubleshooting the System Battery

Problem

- System message indicates a problem with the battery.
- System Setup program loses system configuration information.
- System date and time do not remain current.



NOTE: If the system is turned off for long periods of time (for weeks or months), the NVRAM may lose its system configuration information. This situation is caused by a defective battery.

Action

- 1 Re-enter the time and date through the System Setup program. See "Using the System Setup Program" on page 47.
- 2 Turn off the system and disconnect it from the electrical outlet for at least one hour.
- 3 Reconnect the system to the electrical outlet and turn on the system.
- 4 Enter the System Setup program.

If the date and time are not correct in the System Setup program, replace the battery. See "Replacing the System Battery" on page 101.

If the problem is not resolved by replacing the battery, see "Getting Help" on page 185.



NOTE: Some software may cause the system time to speed up or slow down. If the system seems to operate normally except for the time kept in the System Setup program, the problem may be caused by software rather than by a defective battery.

Troubleshooting Power Supplies

Problem

- System-status indicators are amber.
- Power-supply fault indicators are amber.
- Front-panel status LCD indicates a problem with the power supplies.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

1 Run the appropriate online diagnostics test. See "Using Server Administrator Diagnostics" on page 173.

2 Locate the faulty power supply.

The power supply's fault indicator is lit. See "Power Indicator Codes" on page 20.



NOTICE: You can hot-plug the power supplies. One power supply must be installed for the system to operate. The system is in the redundant mode when two power supplies are installed. Remove and install only one power supply at a time in a system that is powered on. Operating the system for extended periods of time with only one power supply installed and without a power supply blank installed can cause the system to overheat.

3 Ensure that the power supply is properly installed by removing and reinstalling it. See "Power Supplies" on page 79.



NOTE: After installing a power supply, allow several seconds for the system to recognize the power supply and to determine if it is working properly. The power indicator turns green to signify that the power supply is functioning properly. See "Power Indicator Codes" on page 20.

4 Check the indicators to see if the problem is resolved. If not, remove the faulty power supply. See "Removing a Power Supply" on page 79.

5 Install a new power supply. See "Installing a Power Supply" on page 80. If the problem persists, see "Getting Help" on page 185.

Troubleshooting System Cooling Problems

Problem

- Systems management software issues a fan-related error message.

Action

Ensure that none of the following conditions exist:

- System cover, cooling shroud, drive blank, or front or back filler panel is removed.
- Ambient temperature is too high.
- External airflow is obstructed.

- Cables inside the system obstruct airflow.
- An individual cooling fan is removed or has failed. See "Troubleshooting a Fan" on page 157.

Troubleshooting a Fan

Problem

- System-status indicator is amber.
- Systems management software issues a fan-related error message.
- Front panel LCD indicates a problem with the fan.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Run the appropriate diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 2 Open the system. See "Opening the System" on page 67.



CAUTION: The cooling fans are hot-pluggable. To maintain proper cooling while the system is on, only replace one fan at a time.

- 3 Locate the faulty fan indicated by the LCD panel or diagnostic software. For the identification number of each fan, see Figure 3-11.
- 4 Check the fan connection by removing and reseating the fan in its bracket slot. See "Removing and Installing a Fan" on page 83.



NOTE: Wait 30 seconds for the system to recognize the fan and determine whether it is working properly.

- 5 If the problem is not resolved, install a new fan. See "Removing and Installing a Fan" on page 83.

If the replacement fan is working properly, close the system. See "Closing the System" on page 68.

If the replacement fan does not operate, see "Getting Help" on page 185.

Troubleshooting System Memory

Problem

- Faulty memory module.
- Faulty system board.
- Front-panel status LCD indicates a problem with system memory.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


- 1** Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 2** Turn on the system and attached peripherals.
If an error message does not appear, continue to the next step.
If an error messages appears, go to step 13.
- 3** Enter the System Setup program and check the system memory setting. See "Using the System Setup Program" on page 47.
If the amount of memory installed matches the system memory setting, go to step 13.
- 4** Remove the bezel. See "Removing the Bezel" on page 64.
- 5** Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 6** Open the system. See "Opening the System" on page 67.
- 7** Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.



NOTICE: Never remove the memory cooling shroud without first powering down the system. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.



CAUTION: The DIMMs are hot to the touch for some time after the system has been powered down. Allow time for the DIMMs to cool before handling them. Handle the DIMMs by the card edges and avoid touching the DIMM components.

- 8 Reseat the memory modules in their sockets. See "Installing Memory Modules" on page 110.
- 9 Replace the memory cooling shroud.
-  **NOTICE:** Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.
- 10 Close the system. See "Closing the System" on page 68.
- 11 Reconnect the system to its electrical outlet, and turn on the system and attached peripherals.
- 12 Enter the System Setup program and check the system memory setting. See "Using the System Setup Program" on page 47.

If the amount of memory installed does not match the system memory setting, then perform the following steps:

- a Turn off the system and attached peripherals, and disconnect the system from its electrical outlet.
- b Open the system. See "Opening the System" on page 67.
- c Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.
- d Swap the memory module in socket 1 with another of the same capacity. See "Installing Memory Modules" on page 110.
- e Replace the memory cooling shroud.



NOTICE: Never operate your system with the memory cooling shroud removed. Overheating of the system can develop quickly resulting in a shutdown of the system and the loss of data.

- f Close the system. See "Closing the System" on page 68.
- g Reconnect the system to its electrical outlet, and turn on the system and attached peripherals.
- h As the system boots, observe the monitor screen and the indicators on the keyboard.

- 13 Perform the following steps:
 - a Turn off the system and attached peripherals, and disconnect the system from its electrical outlet.
 - b Open the system. See "Opening the System" on page 67.
 - c Remove the memory cooling shroud. See "Removing the Cooling Shroud" on page 103.
 - d Perform step d through step h in step 12 for each memory module installed.

If the problem persists, see "Getting Help" on page 185.

Troubleshooting a Diskette Drive

Problem

- Error message indicates a diskette drive problem.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Enter the System Setup program and verify that the diskette drive is configured correctly. See "Using the System Setup Program" on page 47.
- 2 Remove the bezel. See "Removing the Bezel" on page 64.
- 3 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 4 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 5 Open the system. See "Opening the System" on page 67.
- 6 Ensure that the diskette drive interface cable is securely connected to the diskette drive and the system board.
- 7 Ensure that a power cable is properly connected to the drive.

- 8** Close the system. See "Closing the System" on page 68.
- 9** Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 10** Run the appropriate online diagnostic test to see whether the diskette drive works correctly.
- 11** Turn off the system and attached peripherals, and disconnect the system from its electrical outlet.
- 12** Open the system. See "Opening the System" on page 67.
- 13** Remove all expansion cards installed in the system. See "Removing an Expansion Card" on page 90.
- 14** Close the system. See "Closing the System" on page 68.
- 15** Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 16** Run the appropriate online diagnostic test to see whether the diskette drive works correctly.

If the tests run successfully, an expansion card may be conflicting with the diskette drive logic, or an expansion card may be faulty. Continue to the next step.

If the tests fail, see "Getting Help" on page 185.

- 17** Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 18** Open the system. See "Opening the System" on page 67.
- 19** Reinstall one of the expansion cards you removed in step 13. See "Installing an Expansion Card" on page 88.
- 20** Close the system. See "Closing the System" on page 68.
- 21** Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 22** Run the appropriate online diagnostic test to see whether the diskette drive works correctly.
- 23** Repeat step 17 through step 22 until all expansion cards are reinstalled or one of the expansion cards causes the tests to fail.

If the problem is not resolved, see "Getting Help" on page 185.

Troubleshooting an Optical Drive

Problem

- System cannot read data from a CD or DVD in an optical drive.
- Optical drive indicator does not blink during boot.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Remove the bezel. See "Removing the Bezel" on page 64.
- 2 Try using a different CD or DVD that you know works properly.
- 3 Enter the System Setup program and ensure that the drive's IDE controller is enabled. See "Using the System Setup Program" on page 47.
- 4 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 5 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 6 Open the system. See "Opening the System" on page 67.
- 7 Ensure that the interface cable is securely connected to the optical drive and to the controller.
- 8 Ensure that a power cable is properly connected to the drive.
- 9 Close the system. See "Closing the System" on page 68.
- 10 Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
If the problem is not resolved, see "Getting Help" on page 185.

Troubleshooting an External SCSI Tape Drive

Problem

- Defective tape drive
- Defective tape cartridge
- Missing or corrupted tape-backup software or tape drive device driver
- Defective SCSI controller

Action

- 1 Remove the tape cartridge you were using when the problem occurred, and replace it with a tape cartridge that you know works.
- 2 Ensure that the SCSI device drivers for the tape drive are installed and are configured correctly.
- 3 Reinstall the tape-backup software as instructed in the tape-backup software documentation.
- 4 Ensure that the tape drive's interface/DC power cable is connected to the tape drive and SCSI controller card.
- 5 Verify that the tape drive is configured for a unique SCSI ID number and that the tape drive is terminated or not terminated, based on the interface cable used to connect the drive.

See the documentation for the tape drive for instructions on selecting the SCSI ID number and enabling or disabling termination.

- 6 Run the appropriate online diagnostics tests. See "Using Server Administrator Diagnostics" on page 173.
- 7 Open or remove the bezel. See "Removing the Bezel" on page 64.
- 8 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 9 Open the system. See "Opening the System" on page 67.

- 10 Ensure that the SCSI controller card is firmly seated in its connector. See "Installing an Expansion Card" on page 88.
- 11 Close the system. See "Closing the System" on page 68.
- 12 Reconnect the system to the electrical outlet, and turn on the system, including attached peripherals.
- 13 If the problem is not resolved, see the documentation for the tape drive for additional troubleshooting instructions.
- 14 If you cannot resolve the problem, see "Getting Help" on page 185 for information on obtaining technical assistance.

Troubleshooting a Hard Drive

Problem

- Device driver error.
- One or more hard drives not recognized by the system.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.



NOTICE: This troubleshooting procedure can destroy data stored on the hard drive. Before you proceed, back up all files on the hard drive.

- 1 Run the appropriate online diagnostics test. See "Using Server Administrator Diagnostics" on page 173.
Depending on the results of the diagnostics test, proceed as needed through the following steps.
- 2 Remove the bezel. See "Removing the Bezel" on page 64.
- 3 If you are experiencing problems with multiple hard drives, skip to step 8. For a problem with a single hard drive, continue to the next step.
- 4 Turn off your system, reseal the hard drive, and restart the system.

- 5 If your system has a SAS RAID controller daughter card, perform the following steps.
 - a Restart the system and press <Ctrl> <R> to enter the host adapter configuration utility program.

See the documentation supplied with the host adapter for information about the configuration utility.
 - b Ensure that the hard drive has been configured correctly for the RAID.
 - c Exit the configuration utility and allow the system to boot to the operating system.
- 6 Ensure that the required device drivers for your controller daughter card are installed and are configured correctly. See the operating system documentation for more information.



NOTICE: Do not perform the following step if you have a SAS RAID controller daughter card.

- 7 If you have the non-RAID SAS controller daughter card, remove the hard drive and swap its drive bay location with another hard drive that is functioning properly.

If the problem is resolved, reinstall the hard drive in the original bay. See "Installing a Hot-Plug Hard Drive" on page 72.

If the hard drive functions properly in the original bay, the drive carrier could have intermittent problems. Replace the hard-drive carrier. See "Getting Help" on page 185.

If the hard drive functioned properly in another bay but does not function in the original bay, the SAS backplane has a defective connector. See "Getting Help" on page 185.

- 8 Check the cable connections inside the system:
 - a Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
 - b Open the system. See "Opening the System" on page 67.
 - c Verify that the cable connections between SAS backplane(s) and the SAS daughter card are correct. See "Cabling the SAS Backplane Boards" on page 129.
 - d Verify that the SAS cables are securely seated in their connectors.

- e Verify that the power connectors on the SAS backplane(s) are securely seated in their connectors.
- f Close the system. See "Closing the System" on page 68.
- g Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.

If the problem persists, see "Getting Help" on page 185.

Troubleshooting a SAS or SAS RAID Controller Daughter Card



NOTE: When troubleshooting a SAS or SAS RAID controller daughter card, also see the documentation for your operating system and the controller daughter card.

Problem

- Error message indicates a problem with the SAS or SAS RAID controller daughter card.
- SAS or SAS RAID controller daughter card performs incorrectly or not at all.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 2 Enter the System Setup program and ensure that the SAS or SAS RAID controller daughter card is enabled. See "Using the System Setup Program" on page 47.

3 Restart the system and press the applicable key sequence to enter the configuration utility program:

- <Ctrl><C> for a SAS controller
- <Ctrl><R> for a SAS RAID controller

See the controller's documentation for information about configuration settings.

4 Check the configuration settings, make any necessary corrections, and restart the system.

If the problem is not resolved, continue to the next step.

5 Remove the bezel. See "Removing the Bezel" on page 64.

6 Turn off the system and attached peripherals, and disconnect the system from its electrical outlet.

7 Open the system. See "Opening the System" on page 67.

8 Ensure that the controller card is firmly seated into the system board connector. See "SAS Controller Daughter Card" on page 126.

9 If you have a SAS RAID controller daughter card, ensure that the following RAID components are properly installed and connected:

- Memory module
- Battery

10 Verify that the cable connections between the SAS backplane(s) and the SAS controller daughter card are correct. See "Cabling the SAS Backplane Boards" on page 129.

11 Ensure that the cables are firmly connected to the SAS controller daughter card, the SAS backplane board and, if applicable, the 1x2 expansion backplane.

12 Close the system. See "Closing the System" on page 68.

13 Reconnect the system to its electrical outlet, and turn on the system and attached peripherals. If the problem persists, proceed as follows:

- If you have a SAS controller daughter card, see "Getting Help" on page 185.

- If you have a SAS RAID controller daughter card, replace the SAS RAID daughter card battery. See "Replacing the SAS RAID Controller Daughter Card Battery" on page 126. If replacing the battery does not solve the problem, see "Getting Help" on page 185.

Troubleshooting Expansion Cards



NOTE: When troubleshooting an expansion card, see the documentation for your operating system and the expansion card.

Problem

- Error message indicates a problem with an expansion card.
- Expansion card performs incorrectly or not at all.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Run the appropriate online diagnostic test. See "Using Server Administrator Diagnostics" on page 173.
- 2 Open or remove the bezel. See "Removing the Bezel" on page 64.
- 3 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 4 Open the system. See "Opening the System" on page 67.
- 5 Ensure that each expansion card is firmly seated in its connector. See "Installing an Expansion Card" on page 88.
- 6 Close the system. See "Closing the System" on page 68.
- 7 Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
If the problem persists, go to the next step.
- 8 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.

- 9 Open the system. See "Opening the System" on page 67.
- 10 Remove all expansion cards installed in the system. See "Removing an Expansion Card" on page 90.
- 11 Close the system. See "Closing the System" on page 68.
- 12 Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 13 Run the appropriate online diagnostic test.
If the tests fail, see "Getting Help" on page 185.
- 14 For each expansion card you removed in step 10, perform the following steps:
 - a Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
 - b Open the system. See "Opening the System" on page 67.
 - c Reinstall one of the expansion cards.
 - d Close the system. See "Closing the System" on page 68.
 - e Run the appropriate diagnostic test.
If the tests fail, see "Getting Help" on page 185.

Troubleshooting the Microprocessors

Problem

- Error message indicates a processor problem.
- Front-panel status LCD indicates a problem with the processors or system board.
- A heat sink is not installed for each processor.

Action



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1** If possible, run the appropriate online diagnostics test. See "Using Server Administrator Diagnostics" on page 173.
- 2** Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 3** Open the system. See "Opening the System" on page 67.
- 4** Ensure that each processor and heat sink are properly installed. See "Replacing a Processor" on page 117.
- 5** Close the system. See "Closing the System" on page 68.
- 6** Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 7** If possible, run the appropriate online diagnostic test.
If the tests fail or the problem persists, continue to the next step.
- 8** Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 9** Open the system. See "Opening the System" on page 67.
- 10** If your system has dual processors, remove processor 2, leaving only processor 1 installed. See "Replacing a Processor" on page 117.
To locate the processors, see Figure 6-2.
If only one processor is installed, see "Getting Help" on page 185.
- 11** Close the system. See "Closing the System" on page 68.
- 12** Reconnect the system to the electrical outlet, and turn on the system and attached peripherals.
- 13** Run the appropriate online diagnostic test.
If the tests complete successfully, replace processor 2. See "Getting Help" on page 185.
- 14** Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 15** Open the system. See "Opening the System" on page 67.
- 16** Replace processor 1 with processor 2 or with a processor of the same capacity. See "Replacing a Processor" on page 117.

17 Close the system. See "Closing the System" on page 68.

18 Run the appropriate online diagnostic test.

If the tests complete successfully, replace processor 1. See "Getting Help" on page 185.

Running the System Diagnostics

If you experience a problem with your system, run the diagnostics before calling for technical assistance. The purpose of the diagnostics is to test your system's hardware without requiring additional equipment or risking data loss. If you are unable to fix the problem yourself, service and support personnel can use diagnostics test results to help you solve the problem.

Using Server Administrator Diagnostics

To assess a system problem, first use the online Server Administrator diagnostics. If you are unable to identify the problem, then use the system diagnostics.

To access the online diagnostics, log into the Server Administrator home page, and then click the **Diagnostics** tab. For information about using diagnostics, see the online help. For additional information, see the *Server Administrator User's Guide*.

System Diagnostics Features

The system diagnostics provides a series of menus and options for particular device groups or devices. The system diagnostics menus and options allow you to:


- Run tests individually or collectively.
- Control the sequence of tests.
- Repeat tests.
- Display, print, or save test results.
- Temporarily suspend testing if an error is detected or terminate testing when a user-defined error limit is reached.
- View help messages that briefly describe each test and its parameters.
- View status messages that inform you if tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

When to Use the System Diagnostics

If a major component or device in the system does not operate properly, component failure may be indicated. As long as the microprocessor and the system's input/output devices (monitor, keyboard, and diskette drive) are functioning, you can use the system diagnostics to help identify the problem.


Running the System Diagnostics

The system diagnostics is run from the utility partition on your hard drive.

 **NOTICE:** Use the system diagnostics to test only your system. Using this program with other systems may cause invalid results or error messages. In addition, use only the program that came with your system (or an updated version of that program).

- 1 As the system boots, press <F10> during POST.
- 2 From the utility partition main menu, select **Run System Diagnostics**, or select **Run Memory Diagnostics** if you are troubleshooting memory.

When you start the system diagnostics, a message is displayed stating that the diagnostics are initializing. Next, the **Diagnostics** menu appears. The menu allows you to run all or specific diagnostics tests or to exit the system diagnostics.

 **NOTE:** Before you read the rest of this section, start the system diagnostics so that you can see the utility on your screen.

System Diagnostics Testing Options

Click the testing option in the **Main Menu** window. Table 5-1 provides a brief explanation of testing options.

Table 5-1. System Diagnostics Testing Options

Testing Option	Function
Express Test	Performs a quick check of the system. This option runs device tests that do not require user interaction. Use this option to quickly identify the source of your problem.
Extended Test	Performs a more thorough check of the system. This test can take an hour or longer.
Custom Test	Tests a particular device.
Information	Displays test results.

Using the Custom Test Options

When you select **Custom Test** in the **Main Menu** window, the **Customize** window appears and allows you to select the device(s) to be tested, select specific options for testing, and view the test results.

Selecting Devices for Testing

The left side of the **Customize** window lists devices that can be tested. Devices are grouped by device type or by module, depending on the option you select. Click the (+) next to a device or module to view its components. Click (+) on any component to view the tests that are available. Clicking a device, rather than its components, selects all of the components of the device for testing.

Selecting Diagnostics Options

Use the **Diagnostics Options** area to select how you want to test a device. You can set the following options:

- **Non-Interactive Tests Only** — When checked, runs only tests that require no user intervention.
- **Quick Tests Only** — When checked, runs only the quick tests on the device. Extended tests will not run when you select this option.
- **Show Ending Timestamp** — When checked, time stamps the test log.
- **Test Iterations** — Selects the number of times the test is run.
- **Log output file pathname** — When checked, enables you to specify where the test log file is saved.

Viewing Information and Results

The tabs in the **Customize** window provide information about the test and the test results. The following tabs are available:

- **Results** — Displays the test that ran and the result.
- **Errors** — Displays any errors that occurred during the test.
- **Help** — Displays information about the currently selected device, component, or test.
- **Configuration** — Displays basic configuration information about the currently selected device.
- **Parameters** — If applicable, displays parameters that you can set for the test.

Jumpers and Connectors

This section provides specific information about the system jumpers and describes the connectors on the various boards in the system.

System Board Jumpers



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

Figure 6-1 shows the location of the configuration jumpers on the system board. Table 6-1 lists the jumper settings.



NOTE: To access the jumpers, remove the center fans and the center fan bracket. See "Removing and Installing a Fan" on page 83 and "Removing the Center Fan Bracket" on page 105.

Figure 6-1. System Board Jumpers

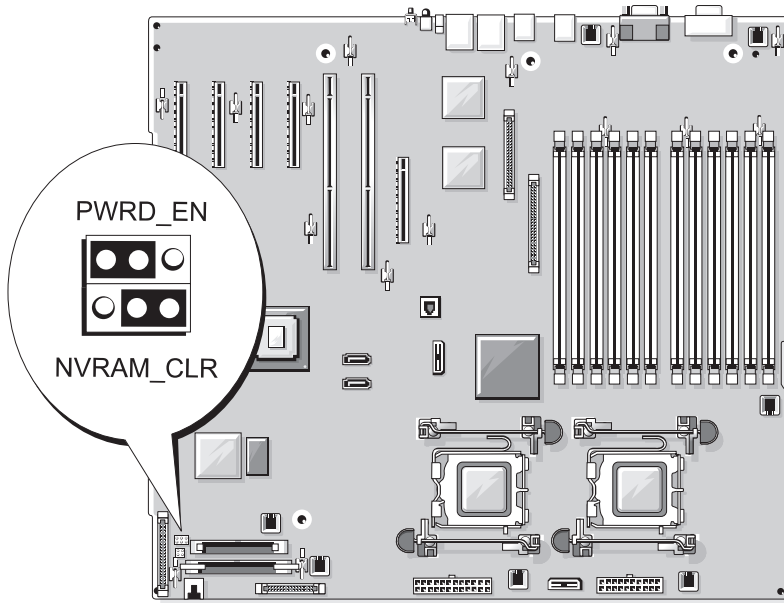


Table 6-1. System Board Jumper Settings

Jumper	Setting	Description
PWRD_EN	(default)	The password feature is enabled.
		The password feature is disabled.
NVRAM_CLR	(default)	The configuration settings in NVRAM are retained at system boot.
		The configuration settings in NVRAM are cleared at next system boot.

System Board Connectors



CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

See Figure 6-2 and Table 6-2 for the location and description of the system board connectors.

Figure 6-2. System Board Connectors

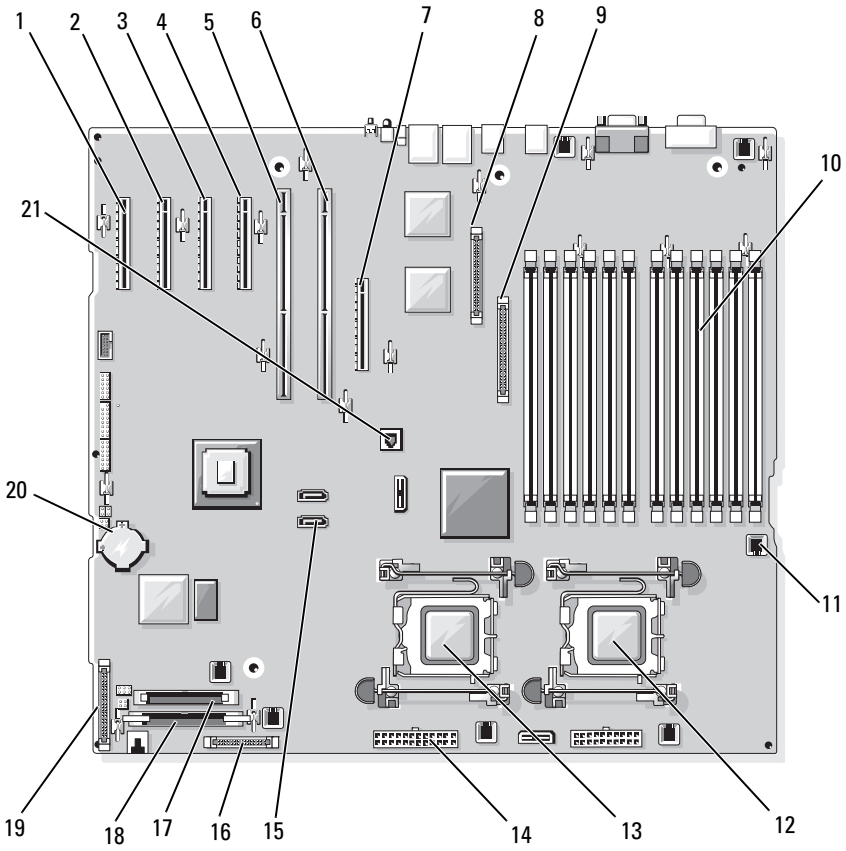


Table 6-2. System Board Connectors


Item	Connector	Description
1	PCIE_X4_6	PCIe x4 connector (slot 6)
2	PCIE_X4_5	PCIe x4 connector (slot 5)
3	PCIE_X4_4	PCIe x4 connector (slot 4)
4	PCIE_X8_3	PCIe x8 connector (slot 3)
5	PCIX_2	PCI-X 64-bit connectors (slot 2)
6	PCIX_1	PCI-X 64-bit connectors (slot 1)
7	INT_STORAGE	SAS daughter card connector
8	RAC_CONN	Connector for the remote access controller (RAC)
9	RAC_MII_CONN	RAC MII connector
10	DIMM n	Memory module connector (12), numbered by population order (see "Memory" on page 107)
11	FAN n	Fan power connector (6)
12	CPU1	Processor connector 1
13	CPU2	Processor connector 2
14	PWR n	Power supply connector (2)
15	SATA_ x	SATA connectors (2)
16	PWR_CTRL	Power supply connector
17	FLOPPY	Floppy disk drive connector
18	IDE	CD-ROM connector
19	CONTROL_PANEL	Control panel connector
20	BATTERY	Connector for the 3.0-V coin battery
21	TOE_KEY	TCP/IP Offload Engine Key

SAS Backplane Connectors

CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.


See Figure 6-3 for the location and description of the connectors on the back of the 1x8 SAS backplane board. See Figure 6-4 for the location and description of the connectors on the back of the optional 1x2 SAS backplane board.

Figure 6-3. 1x8 SAS Backplane Connectors

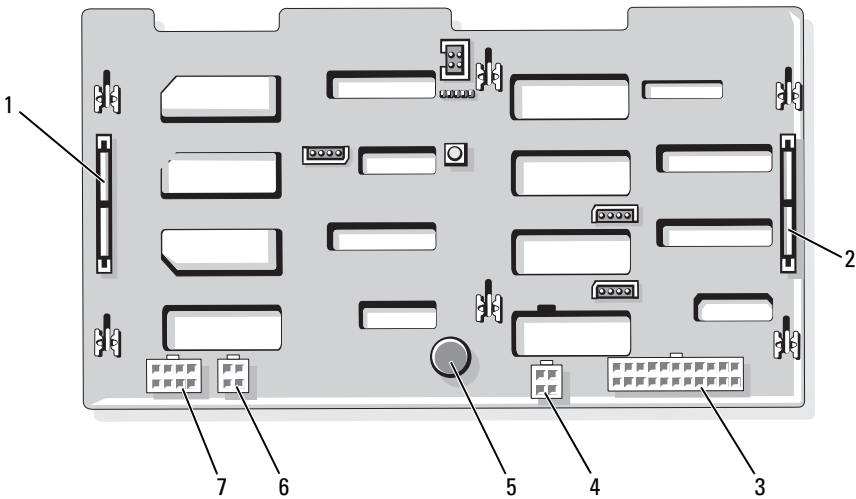

- | | | |
|--|-------------------|---|
| 1 SAS_A connector | 2 SAS_B connector | 3 power connector (BKPLN) |
| 4 diskette drive power connector (FDD) | 5 retention pin | 6 optical drive/tape backup unit connector (CD/TBU) |
| 7 power connector for 1x2 backplane (FLEX) | | |

Figure 6-4. 1x2 SAS Backplane Connectors

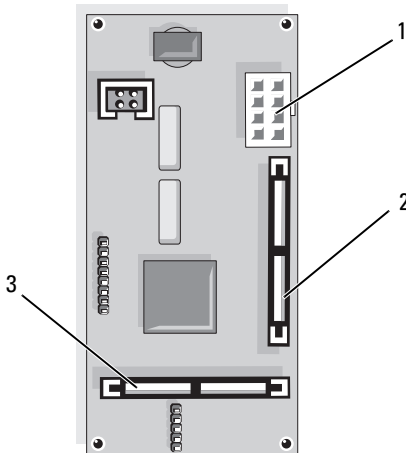


- 1 power connector 2 SAS_B_IN connector 3 SAS_B_OUT connector

Disabling a Forgotten Password

The password jumper on the system board enables the system password features or disables them and clears any password(s) currently in use.

⚠ CAUTION: Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

- 1 Turn off the system and attached peripherals, and disconnect the system from the electrical outlet.
- 2 Remove the bezel, if attached. See "Removing the Bezel" on page 64.
- 3 Open the system. See "Opening the System" on page 67.
- 4 Note the cable connections on the SAS daughter card, and then disconnect the cables from the storage daughter card and extend the cables away from the center fan bracket.

- 5 Remove the fans from the center fan bracket. See "Removing and Installing a Fan" on page 83.
- 6 Remove the center fan bracket. See "Removing the Center Fan Bracket" on page 105.
- 7 Remove the password jumper plug.
See Figure 6-1 to locate the password jumper on the system board.
- 8 Replace the center fan bracket (see "Replacing the Center Fan Bracket" on page 106) and replace the fans in the bracket.
- 9 Reconnect the storage daughter card cables.
- 10 Close the system. See "Closing the System" on page 68.
- 11 Reconnect the system to the electrical outlet, and turn on the system.
The existing passwords are not disabled (erased) until the system boots with the password jumper plug removed. However, before you assign a new system and/or setup password, you must install the jumper plug.
 **NOTE:** If you assign a new system and/or setup password with the jumper plug still removed, the system disables the new password(s) the next time it boots.
- 12 Turn off the system, including any attached peripherals, and disconnect the system from the electrical outlet.
- 13 Open the system.
- 14 Repeat step 4 through step 6.
- 15 Reinstall the password jumper plug in its original position to enable the password protection feature.
- 16 Replace the center fan bracket and fans and reconnect the storage daughter card cables.
- 17 Close the system, reconnect the system to the electrical outlet, and turn on the system.
- 18 Assign a new system and/or setup password.
To assign a new password using the System Setup program, see "Using the System Password" on page 56.

Getting Help

Technical Assistance

If you need assistance with a technical problem, perform the following steps:

- 1 Complete the procedures in "Troubleshooting Your System."
- 2 Run the system diagnostics and record any information provided.
- 3 Make a copy of the Diagnostics Checklist, and fill it out.
- 4 Use Dell's extensive suite of online services available at Dell Support at support.dell.com for help with installation and troubleshooting procedures.

For more information, see "Online Services" on page 185.

- 5 If the preceding steps have not resolved the problem, call Dell for technical assistance.



NOTE: Call technical support from a phone near or at the system so that technical support can assist you with any necessary procedures.



NOTE: Dell's Express Service Code system may not be available in all countries.

When prompted by Dell's automated telephone system, enter your Express Service Code to route the call directly to the proper support personnel. If you do not have an Express Service Code, open the **Dell Accessories** folder, double-click the **Express Service Code** icon, and follow the directions.

For instructions on using the technical support service, see "Technical Support Service" on page 187 and "Before You Call" on page 190.



NOTE: Some of the following services are not always available in all locations outside the continental U.S. Call your local Dell representative for information on availability.

Online Services

You can access Dell Support at support.dell.com. Select your region on the **WELCOME TO DELL SUPPORT** page, and fill in the requested details to access help tools and information.

You can contact Dell electronically using the following addresses:

- World Wide Web

www.dell.com/

www.dell.com/ap/ (Asian/Pacific countries only)

www.dell.com/jp (Japan only)

www.euro.dell.com (Europe only)

www.dell.com/la (Latin American countries)

www.dell.ca (Canada only)

- Anonymous file transfer protocol (FTP)

[ftp.dell.com/](ftp://ftp.dell.com/)

Log in as `user : anonymous`, and use your e-mail address as your password.

- Electronic Support Service

support@us.dell.com

apsupport@dell.com (Asian/Pacific countries only)

support.jp.dell.com (Japan only)

support.euro.dell.com (Europe only)

- Electronic Quote Service

apmarketing@dell.com (Asian/Pacific countries only)

sales_canada@dell.com (Canada only)

AutoTech Service

Dell's automated technical support service—AutoTech—provides recorded answers to the questions most frequently asked by Dell customers about their portable and desktop computer systems.

When you call AutoTech, use your touch-tone telephone to select the subjects that correspond to your questions.

The AutoTech service is available 24 hours a day, 7 days a week. You can also access this service through the technical support service. See the contact information for your region.

Automated Order-Status Service

To check on the status of any Dell™ products that you have ordered, you can go to support.dell.com, or you can call the automated order-status service. A recording prompts you for the information needed to locate and report on your order. See the contact information for your region.

Technical Support Service

Dell's technical support service is available 24 hours a day, 7 days a week, to answer your questions about Dell hardware. Our technical support staff use computer-based diagnostics to provide fast, accurate answers.

To contact Dell's technical support service, see "Before You Call" on page 190 and then see the contact information for your region.

Dell Enterprise Training and Certification

Dell Enterprise Training and Certification is available; see www.dell.com/training for more information. This service may not be offered in all locations.

Problems With Your Order

If you have a problem with your order, such as missing parts, wrong parts, or incorrect billing, contact Dell for customer assistance. Have your invoice or packing slip available when you call. See the contact information for your region.

Product Information

If you need information about additional products available from Dell, or if you would like to place an order, visit the Dell website at www.dell.com. For the telephone number to call to speak to a sales specialist, see the contact information for your region.

Returning Items for Warranty Repair or Credit

Prepare all items being returned, whether for repair or credit, as follows:

- 1** Call Dell to obtain a Return Material Authorization Number, and write it clearly and prominently on the outside of the box.

For the telephone number to call, see the contact information for your region.

- 2** Include a copy of the invoice and a letter describing the reason for the return.
- 3** Include a copy of any diagnostic information (including the Diagnostics Checklist) indicating the tests you have run and any error messages reported by the system diagnostics.
- 4** Include any accessories that belong with the item(s) being returned (such as power cables, media such as CDs and diskettes, and guides) if the return is for credit.
- 5** Pack the equipment to be returned in the original (or equivalent) packing materials.

You are responsible for paying shipping expenses. You are also responsible for insuring any product returned, and you assume the risk of loss during shipment to Dell. Collect-on-delivery (C.O.D.) packages are not accepted.

Returns that are missing any of the preceding requirements will be refused at our receiving dock and returned to you.

Diagnostics Checklist

Name:

Date:

Address:

Phone number:

Service Tag (bar code on the back or bottom of the computer):

Express Service Code:

Return Material Authorization Number (if provided by Dell support technician):

Operating system and version:

Devices:

Expansion cards:

Are you connected to a network? Yes No

Network, version, and network adapter:


Programs and versions:

See your operating system documentation to determine the contents of the system's start-up files. If the computer is connected to a printer, print each file. Otherwise, record the contents of each file before calling Dell.

Error message, beep code, or diagnostic code:

Description of problem and troubleshooting procedures you performed:

Before You Call

 **NOTE:** Have your Express Service Code ready when you call. The code helps Dell's automated-support telephone system direct your call more efficiently.

Remember to fill out the Diagnostics Checklist. If possible, turn on your system before you call Dell for technical assistance and call from a telephone at or near the computer. You may be asked to type some commands at the keyboard, relay detailed information during operations, or try other troubleshooting steps possible only at the computer system itself. Ensure that the system documentation is available.


 **CAUTION:** Before servicing any components inside your computer, see your *Product Information Guide* for important safety information.


Contacting Dell

To contact Dell electronically, you can access the following websites:

- www.dell.com
- support.dell.com (support)

For specific web addresses for your country, find the appropriate country section in the table below.

 **NOTE:** Toll-free numbers are for use within the country for which they are listed.

 **NOTE:** In certain countries, support specific to Dell XPS™ portable computers is available at a separate telephone number listed for participating countries. If you do not see a telephone number listed that is specific for XPS portable computers, you may contact Dell through the support number listed and your call will be routed appropriately.

When you need to contact Dell, use the electronic addresses, telephone numbers, and codes provided in the following table. If you need assistance in determining which codes to use, contact a local or an international operator.

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Anguilla	General Support	toll-free: 800-335-0031
Antigua and Barbuda	General Support	1-800-805-5924
Argentina (Buenos Aires) International Access Code: 00 Country Code: 54 City Code: 11	Website: www.dell.com.ar E-mail: us_latin_services@dell.com E-mail for desktop and portable computers: la-techsupport@dell.com E-mail for servers and EMC® storage products: la_enterprise@dell.com	Customer Care toll-free: 0-800-444-0730 Technical Support toll-free: 0-800-444-0733 Technical Support Services toll-free: 0-800-444-0724 Sales 0-810-444-3355
Aruba	General Support	toll-free: 800-1578
Australia (Sydney) International Access Code: 0011 Country Code: 61 City Code: 2	Website: support.ap.dell.com E-mail: support.ap.dell.com/contactus General Support	13DELL-133355

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Austria (Vienna) International Access Code: 900 Country Code: 43 City Code: 1	Website: support.euro.dell.com E-mail: tech_support_central_europe@dell.com Home/Small Business Sales Home/Small Business Fax Home/Small Business Customer Care Preferred Accounts/Corporate Customer Care Support for XPS portable computers only Home/Small Business Support for all other Dell computers Preferred Accounts/Corporate Support Switchboard	0820 240 530 00 0820 240 530 49 0820 240 530 14 0820 240 530 16 0820 240 530 81 0820 240 530 14 0660 8779 0820 240 530 00
Bahamas	General Support	toll-free: 1-866-278-6818
Barbados	General Support	1-800-534-3066
Belgium (Brussels) International Access Code: 00 Country Code: 32 City Code: 2	Website: support.euro.dell.com Tech Support for XPS portable computers only Tech Support for all other Dell computers Tech Support Fax Customer Care Corporate Sales Fax Switchboard	02 481 92 96 02 481 92 88 02 481 92 95 02 713 15 65 02 481 91 00 02 481 92 99 02 481 91 00
Bermuda	General Support	1-800-342-0671

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Bolivia	General Support	toll-free: 800-10-0238
Brazil	Website: www.dell.com/br	
International Access Code: 00	Customer Support, Tech Support	0800 90 3355
Country Code: 55	Technical Support Fax	51 481 5470
City Code: 51	Customer Care Fax	51 481 5480
	Sales	0800 90 3390
British Virgin Islands	General Support	toll-free: 1-866-278-6820
Brunei	Technical Support (Penang, Malaysia)	604 633 4966
Country Code: 673	Customer Care (Penang, Malaysia)	604 633 4888
	Transaction Sales (Penang, Malaysia)	604 633 4955

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Canada (North York, Ontario)	Online Order Status: www.dell.ca/ostatus	
International Access Code: 011	AutoTech (automated Hardware and Warranty Support)	toll-free: 1-800-247-9362
	Customer Service (Home Sales/Small Business)	toll-free: 1-800-847-4096
	Customer Service (med./large business, government)	toll-free: 1-800-326-9463
	Customer Service (printers, projectors, televisions, handhelds, digital jukebox, and wireless)	toll-free: 1-800-847-4096
	Hardware Warranty Support (Home Sales/Small Business)	toll-free: 1-800-906-3355
	Hardware Warranty Support (med./large bus., government)	toll-free: 1-800-387-5757
	Hardware Warranty Support (printers, projectors, televisions, handhelds, digital jukebox, and wireless)	1-877-335-5767
	Sales (Home Sales/Small Business)	toll-free: 1-800-387-5752
	Sales (med./large bus., government)	toll-free: 1-800-387-5755
	Spare Parts Sales & Extended Service Sales	1 866 440 3355
Cayman Islands	General Support	1-800-805-7541
Chile (Santiago)	Sales and Customer Support	toll-free: 1230-020-4823
Country Code: 56		
City Code: 2		

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
China (Xiamen) Country Code: 86 City Code: 592	Technical Support website: support.dell.com.cn Technical Support E-mail: cn_support@dell.com Customer Care E-mail: customer_cn@dell.com	
	Technical Support Fax	592 818 1350
	Technical Support (Dell™ Dimension™ and Inspiron)	toll-free: 800 858 2968
	Technical Support (OptiPlex™, Latitude™, and Dell Precision™)	toll-free: 800 858 0950
	Technical Support (servers and storage)	toll-free: 800 858 0960
	Technical Support (projectors, PDAs, switches, routers, and so on)	toll-free: 800 858 2920
	Technical Support (printers)	toll-free: 800 858 2311
	Customer Care	toll-free: 800 858 2060
	Customer Care Fax	592 818 1308
	Home and Small Business	toll-free: 800 858 2222
	Preferred Accounts Division	toll-free: 800 858 2557
	Large Corporate Accounts GCP	toll-free: 800 858 2055
	Large Corporate Accounts Key Accounts	toll-free: 800 858 2628
	Large Corporate Accounts North	toll-free: 800 858 2999
	Large Corporate Accounts North Government and Education	toll-free: 800 858 2955
	Large Corporate Accounts East	toll-free: 800 858 2020
	Large Corporate Accounts East Government and Education	toll-free: 800 858 2669

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
	Large Corporate Accounts Queue Team	toll-free: 800 858 2572
	Large Corporate Accounts South	toll-free: 800 858 2355
	Large Corporate Accounts West	toll-free: 800 858 2811
	Large Corporate Accounts Spare Parts	toll-free: 800 858 2621
Colombia	General Support	980-9-15-3978
Costa Rica	General Support	0800-012-0435
Czech Republic (Prague)	Website: support.euro.dell.com E-mail: czech_dell@dell.com	
International Access Code: 00	Technical Support	22537 2727
Country Code: 420	Customer Care	22537 2707
	Fax	22537 2714
	Technical Fax	22537 2728
	Switchboard	22537 2711
Denmark (Copenhagen)	Website: support.euro.dell.com	
International Access Code: 00	Technical Support for XPS portable computers only	7010 0074
Country Code: 45	Technical Support for all other Dell computers	7023 0182
	Customer Care (Relational)	7023 0184
	Home/Small Business Customer Care	3287 5505
	Switchboard (Relational)	3287 1200
	Switchboard Fax (Relational)	3287 1201
	Switchboard (Home/Small Business)	3287 5000
	Switchboard Fax (Home/Small Business)	3287 5001

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Dominica	General Support	toll-free: 1-866-278-6821
Dominican Republic	General Support	1-800-148-0530
Ecuador	General Support	toll-free: 999-119
El Salvador	General Support	01-899-753-0777
Finland (Helsinki)	Website: support.euro.dell.com	
International Access Code: 990	Technical Support	09 253 313 60
Country Code: 358	Customer Care	09 253 313 38
City Code: 9	Fax	09 253 313 99
	Switchboard	09 253 313 00
France (Paris) (Montpellier)	Website: support.euro.dell.com	
	Home and Small Business	
International Access Code: 00	Technical Support for XPS portable computers only	0825 387 129
Country Code: 33	Technical Support for all other Dell computers	0825 387 270
City Codes: (1) (4)	Customer Care	0825 823 833
	Switchboard	0825 004 700
	Switchboard (calls from outside of France)	04 99 75 40 00
	Sales	0825 004 700
	Fax	0825 004 701
	Fax (calls from outside of France)	04 99 75 40 01
	Corporate	
	Technical Support	0825 004 719
	Customer Care	0825 338 339
	Switchboard	01 55 94 71 00
	Sales	01 55 94 71 00
	Fax	01 55 94 71 01

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers	
Germany (Langen) International Access Code: 00 Country Code: 49 City Code: 6103	Website: support.euro.dell.com		
	E-mail: tech_support_central_europe@dell.com		
	Technical Support for XPS portable computers only	06103 766-7222	
	Technical Support for all other Dell computers	06103 766-7200	
	Home/Small Business Customer Care	0180-5-224400	
	Global Segment Customer Care	06103 766-9570	
	Preferred Accounts Customer Care	06103 766-9420	
	Large Accounts Customer Care	06103 766-9560	
Greece	Public Accounts Customer Care	06103 766-9555	
	Switchboard	06103 766-7000	
	Website: support.euro.dell.com		
	International Access Code: 00	Technical Support	00800-44 14 95 18
	Country Code: 30	Gold Service Technical Support	00800-44 14 00 83
		Switchboard	2108129810
Gold Service Switchboard		2108129811	
Sales		2108129800	
Fax	2108129812		
Grenada	General Support	toll-free: 1-866-540-3355	
Guatemala	General Support	1-800-999-0136	
Guyana	General Support	toll-free: 1-877-270-4609	

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Hong Kong	Website: support.ap.dell.com	
International Access Code: 001	Technical Support E-mail: HK_support@Dell.com	
Country Code: 852	Technical Support (Dimension and Inspiron)	2969 3188
	Technical Support (OptiPlex, Latitude, and Dell Precision)	2969 3191
	Technical Support (PowerApp™, PowerEdge™, PowerConnect™, and PowerVault™)	2969 3196
	Customer Care	3416 0910
	Large Corporate Accounts	3416 0907
	Global Customer Programs	3416 0908
	Medium Business Division	3416 0912
	Home and Small Business Division	2969 3105
India	E-mail: india_support_desktop@dell.com india_support_notebook@dell.com m india_support_Server@dell.com	
	Technical Support	1600338045 and 1600448046
	Sales (Large Corporate Accounts)	1600 33 8044
	Sales (Home and Small Business)	1600 33 8046

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Ireland (Cherrywood)	Website: support.euro.dell.com	
International Access Code: 00	E-mail: dell_direct_support@dell.com	
Country Code: 353	Technical Support for XPS portable computers only	1850 200 722
City Code: 1	Technical Support for all other Dell computers	1850 543 543
	U.K. Technical Support (dial within U.K. only)	0870 908 0800
	Home User Customer Care	01 204 4014
	Small Business Customer Care	01 204 4014
	U.K. Customer Care (dial within U.K. only)	0870 906 0010
	Corporate Customer Care	1850 200 982
	Corporate Customer Care (dial within U.K. only)	0870 907 4499
	Ireland Sales	01 204 4444
	U.K. Sales (dial within U.K. only)	0870 907 4000
	Fax/Sales Fax	01 204 0103
	Switchboard	01 204 4444

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Italy (Milan)	Website: support.euro.dell.com	
International Access Code: 00	Home and Small Business Technical Support	02 577 826 90
Country Code: 39	Customer Care	02 696 821 14
City Code: 02	Fax	02 696 821 13
	Switchboard	02 696 821 12
	Corporate	
	Technical Support	02 577 826 90
	Customer Care	02 577 825 55
	Fax	02 575 035 30
	Switchboard	02 577 821
Jamaica	General Support (dial from within Jamaica only)	1-800-682-3639
Japan (Kawasaki)	Website: support.jp.dell.com	
International Access Code: 001	Technical Support (servers)	toll-free: 0120-198-498
Country Code: 81	Technical Support outside of Japan (servers)	81-44-556-4162
City Code: 44	Technical Support (Dimension and Inspiron)	toll-free: 0120-198-226
	Technical Support outside of Japan (Dimension and Inspiron)	81-44-520-1435
	Technical Support (Dell Precision, OptiPlex, and Latitude)	toll-free:0120-198-433
	Technical Support outside of Japan (Dell Precision, OptiPlex, and Latitude)	81-44-556-3894
	Technical Support (PDAs, projectors, printers, routers)	toll-free: 0120-981-690

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
	Technical Support outside of Japan (PDAs, projectors, printers, routers)	81-44-556-3468
	Faxbox Service	044-556-3490
	24-Hour Automated Order Service	044-556-3801
	Customer Care	044-556-4240
	Business Sales Division (up to 400 employees)	044-556-1465
	Preferred Accounts Division Sales (over 400 employees)	044-556-3433
	Large Corporate Accounts Sales (over 3500 employees)	044-556-3430
	Public Sales (government agencies, educational institutions, and medical institutions)	044-556-1469
	Global Segment Japan	044-556-3469
	Individual User	044-556-1760
	Switchboard	044-556-4300
Korea (Seoul)	E-mail: krsupport@dell.com	
International Access Code: 001	Support	toll-free: 080-200-3800
Country Code: 82	Support (Dimension, PDA, Electronics and Accessories)	toll-free: 080-200-3801
City Code: 2	Sales	toll-free: 080-200-3600
	Fax	2194-6202
	Switchboard	2194-6000

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Latin America	Customer Technical Support (Austin, Texas, U.S.A.)	512 728-4093
	Customer Service (Austin, Texas, U.S.A.)	512 728-3619
	Fax (Technical Support and Customer Service) (Austin, Texas, U.S.A.)	512 728-3883
	Sales (Austin, Texas, U.S.A.)	512 728-4397
	SalesFax (Austin, Texas, U.S.A.)	512 728-4600 or 512 728-3772
Luxembourg	Website: support.euro.dell.com	
International Access Code: 00 Country Code: 352	Support	342 08 08 075
	Home/Small Business Sales	+32 (0)2 713 15 96
	Corporate Sales	26 25 77 81
	Customer Care	+32 (0)2 481 91 19
	Fax	26 25 77 82
Macao	Technical Support	toll-free: 0800 105
Country Code: 853	Customer Service (Xiamen, China)	34 160 910
	Transaction Sales (Xiamen, China)	29 693 115

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Malaysia (Penang)	Website: support.ap.dell.com	
International Access Code: 00	Technical Support (Dell Precision, OptiPlex, and Latitude)	toll-free: 1 800 880 193
Country Code: 60 City Code: 4	Technical Support (Dimension, Inspiron, and Electronics and Accessories)	toll-free: 1 800 881 306
	Technical Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 881 386
	Customer Care	toll-free: 1800 881 306 (option 6)
	Transaction Sales	toll-free: 1 800 888 202
	Corporate Sales	toll-free: 1 800 888 213
Mexico	Customer Technical Support	001-877-384-8979
International Access Code: 00		or 001-877-269-3383
Country Code: 52	Sales	50-81-8800
		or 01-800-888-3355
	Customer Service	001-877-384-8979
		or 001-877-269-3383
	Main	50-81-8800
		or 01-800-888-3355
Montserrat	General Support	toll-free: 1-866-278-6822
Netherlands Antilles	General Support	001-800-882-1519

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Netherlands (Amsterdam)	Website: support.euro.dell.com	
International Access Code: 00	Technical Support for XPS portable computers only	020 674 45 94
Country Code: 31	Technical Support for all other Dell computers	020 674 45 00
City Code: 20	Technical Support Fax	020 674 47 66
	Home/Small Business Customer Care	020 674 42 00
	Relational Customer Care	020 674 4325
	Home/Small Business Sales	020 674 55 00
	Relational Sales	020 674 50 00
	Home/Small Business Sales Fax	020 674 47 75
	Relational Sales Fax	020 674 47 50
	Switchboard	020 674 50 00
	Switchboard Fax	020 674 47 50
New Zealand	Website: support.ap.dell.com	
International Access Code: 00	E-mail: support.ap.dell.com/contactus	
Country Code: 64	General Support	0800 441 567
Nicaragua	General Support	001-800-220-1006

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Norway (Lysaker)	Website: support.euro.dell.com	
International Access Code: 00	Technical Support for XPS portable computers only	815 35 043
Country Code: 47	Technical Support for all other Dell products	671 16882
	Relational Customer Care	671 17575
	Home/Small Business Customer Care	23162298
	Switchboard	671 16800
	Fax Switchboard	671 16865
Panama	General Support	001-800-507-0962
Peru	General Support	0800-50-669
Poland (Warsaw)	Website: support.euro.dell.com	
International Access Code: 011	E-mail: pl_support_tech@dell.com	
Country Code: 48	Customer Service Phone	57 95 700
City Code: 22	Customer Care	57 95 999
	Sales	57 95 999
	Customer Service Fax	57 95 806
	Reception Desk Fax	57 95 998
	Switchboard	57 95 999
Portugal	Website: support.euro.dell.com	
International Access Code: 00	Technical Support	707200149
Country Code: 351	Customer Care	800 300 413
	Sales	800 300 410 or 800 300 411 or 800 300 412 or 21 422 07 10
	Fax	21 424 01 12
Puerto Rico	General Support	1-800-805-7545

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
St. Kitts and Nevis	General Support	toll-free: 1-877-441-4731
St. Lucia	General Support	1-800-882-1521
St. Vincent and the Grenadines	General Support	toll-free: 1-877-270-4609
Singapore (Singapore) International Access Code: 005 Country Code: 65	Website: support.ap.dell.com Technical Support (Dimension, Inspiron, and Electronics and Accessories) Technical Support (OptiPlex, Latitude, and Dell Precision) Technical Support (PowerApp, PowerEdge, PowerConnect, and PowerVault) Customer Care Transaction Sales Corporate Sales	toll-free: 1800 394 7430 toll-free: 1800 394 7488 toll-free: 1800 394 7478 toll-free: 1 800 394 7430 (option 6) toll-free: 1 800 394 7412 toll-free: 1 800 394 7419
Slovakia (Prague) International Access Code: 00 Country Code: 421	Website: support.euro.dell.com E-mail: czech_dell@dell.com Technical Support Customer Care Fax Tech Fax Switchboard (Sales)	02 5441 5727 420 22537 2707 02 5441 8328 02 5441 8328 02 5441 7585

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
South Africa (Johannesburg)	Website: support.euro.dell.com E-mail: dell_za_support@dell.com	
International Access Code:	Gold Queue	011 709 7713
09/091	Technical Support	011 709 7710
Country Code: 27	Customer Care	011 709 7707
City Code: 11	Sales	011 709 7700
	Fax	011 706 0495
	Switchboard	011 709 7700
Southeast Asian and Pacific Countries	Technical Support, Customer Service, and Sales (Penang, Malaysia)	604 633 4810
Spain (Madrid)	Website: support.euro.dell.com	
International Access Code: 00	Home and Small Business	
	Technical Support	902 100 130
Country Code: 34	Customer Care	902 118 540
City Code: 91	Sales	902 118 541
	Switchboard	902 118 541
	Fax	902 118 539
	Corporate	
	Technical Support	902 100 130
	Customer Care	902 115 236
	Switchboard	91 722 92 00
	Fax	91 722 95 83

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Sweden (Upplands Vasby) International Access Code: 00 Country Code: 46 City Code: 8	Website: support.euro.dell.com	
	Technical Support for XPS portable computers only	0771 340 340
	Technical Support for all other Dell products	08 590 05 199
	Relational Customer Care	08 590 05 642
	Home/Small Business Customer Care	08 587 70 527
	Employee Purchase Program (EPP) Support	20 140 14 44
	Technical Support Fax	08 590 05 594
	Sales	08 590 05 185
Switzerland (Geneva) International Access Code: 00 Country Code: 41 City Code: 22	Website: support.euro.dell.com	
	E-mail: Tech_support_central_Europe@ dell.com	
	Technical Support for XPS portable computers only	0848 33 88 57
	Technical Support (Home and Small Business) for all other Dell products	0844 811 411
	Technical Support (Corporate)	0844 822 844
	Customer Care (Home and Small Business)	0848 802 202
	Customer Care (Corporate)	0848 821 721
	Fax	022 799 01 90
Switchboard	022 799 01 01	

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
Taiwan	Website: support.ap.dell.com	
International Access Code: 002	E-mail: ap_support@dell.com	
Country Code: 886	Technical Support (OptiPlex, Latitude, Inspiron, Dimension, and Electronics and Accessories)	toll-free: 00801 86 1011
	Technical Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 00801 60 1256
	Customer Care	toll-free: 00801 60 1250 (option 5)
	Transaction Sales	toll-free: 00801 65 1228
	Corporate Sales	toll-free: 00801 651 227
Thailand	Website: support.ap.dell.com	
International Access Code: 001	Technical Support (OptiPlex, Latitude, and Dell Precision)	toll-free: 1800 0060 07
Country Code: 66	Technical Support (PowerApp, PowerEdge, PowerConnect, and PowerVault)	toll-free: 1800 0600 09
	Customer Care	toll-free: 1800 006 007 (option 7)
	Corporate Sales	toll-free: 1800 006 009
	Transaction Sales	toll-free: 1800 006 006
Trinidad/Tobago	General Support	1-800-805-8035
Turks and Caicos Islands	General Support	toll-free: 1-866-540-3355

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
U.K. (Bracknell)	Website: support.euro.dell.com	
International Access Code: 00	Customer Care website: support.euro.dell.com/uk/en/ECare/Form/Home.asp	
Country Code: 44	E-mail: dell_direct_support@dell.com	
City Code: 1344	Technical Support (Corporate/Preferred Accounts/PAD [1000+ employees])	0870 908 0500
	Technical Support for XPS portable computers only	0870 366 4180
	Technical Support (direct and general) for all other products	0870 908 0800
	Global Accounts Customer Care	01344 373 186
	Home and Small Business Customer Care	0870 906 0010
	Corporate Customer Care	01344 373 185
	Preferred Accounts (500–5000 employees) Customer Care	0870 906 0010
	Central Government Customer Care	01344 373 193
	Local Government & Education Customer Care	01344 373 199
	Health Customer Care	01344 373 194
	Home and Small Business Sales	0870 907 4000
	Corporate/Public Sector Sales	01344 860 456
	Home and Small Business Fax	0870 907 4006
Uruguay	General Support	toll-free: 000-413-598- 2521

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
U.S.A. (Austin, Texas) International Access Code: 011 Country Code: 1	Automated Order-Status Service	toll-free: 1-800-433-9014
	AutoTech (portable and desktop computers)	toll-free: 1-800-247-9362
	Hardware and Warranty Support (Dell TV, Printers, and Projectors) for Relationship customers	toll-free 1-877-459-7298
	Consumer (Home and Home Office) Support for all other Dell products	toll-free: 1-800-624-9896
	Customer Service	toll-free: 1-800-624-9897
	Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133
	Financial Services website: www.dellfinancialservices.com	
	Financial Services (lease/loans)	toll-free: 1-877-577-3355
	Financial Services (Dell Preferred Accounts [DPA])	toll-free: 1-800-283-2210
	Business	
	Customer Service and Support	toll-free: 1-800-456-3355
	Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133
	Printers and Projectors Support	toll-free: 1-877-459-7298
	Public (government, education, and healthcare)	
	Customer Service and Support	toll-free: 1-800-456-3355
	Employee Purchase Program (EPP) Customers	toll-free: 1-800-695-8133
Dell Sales	toll-free: 1-800-289-3355 or toll-free: 1-800-879-3355	

Country (City) International Access Code Country Code City Code	Department Name or Service Area, Website and E-Mail Address	Area Codes, Local Numbers, and Toll-Free Numbers
	Dell Outlet Store (Dell refurbished computers)	toll-free: 1-888-798-7561
	Software and Peripherals Sales	toll-free: 1-800-671-3355
	Spare Parts Sales	toll-free: 1-800-357-3355
	Extended Service and Warranty Sales	toll-free: 1-800-247-4618
	Fax	toll-free: 1-800-727-8320
	Dell Services for the Deaf, Hard-of-Hearing, or Speech-Impaired	toll-free: 1-877-DELLTTY (1-877-335-5889)
U.S. Virgin Islands	General Support	1-877-673-3355
Venezuela	General Support	8001-3605

Glossary

This section defines or identifies technical terms, abbreviations, and acronyms used in your system documents.

A — Ampere(s).

AC — Alternating current.

ACPI — Advanced Configuration and Power Interface. A standard interface for enabling the operating system to direct configuration and power management.

ambient temperature — The temperature of the area or room where the system is located.

ANSI — American National Standards Institute. The primary organization for developing technology standards in the U.S.

application — Software designed to help you perform a specific task or series of tasks. Applications run from the operating system.

ASCII — American Standard Code for Information Interchange.

asset tag — An individual code assigned to a system, usually by an administrator, for security or tracking purposes.

backup — A copy of a program or data file. As a precaution, back up your system's hard drive on a regular basis. Before making a change to the configuration of your system, back up important start-up files from your operating system.

backup battery — A battery that maintains system configuration, date, and time information in a special section of memory when the system is turned off.

beep code — A diagnostic message in the form of a pattern of beeps from your system's speaker. For example, one beep, followed by a second beep, and then a burst of three beeps is beep code 1-1-3.

BIOS — Basic input/output system. Your system's BIOS contains programs stored on a flash memory chip. The BIOS controls the following:

- Communications between the processor and peripheral devices
- Miscellaneous functions, such as system messages

bit — The smallest unit of information interpreted by your system.

blade — A module that contains a processor, memory, and a hard drive. The modules are mounted into a chassis that includes power supplies and fans.

BMC — Baseboard management controller.

boot routine — A program that clears all memory, initializes devices, and loads the operating system when you start your system. Unless the operating system fails to respond, you can reboot (also called *warm boot*) your system by pressing <Ctrl><Alt>. Otherwise, you must restart the system by pressing the reset button or by turning the system off and then back on.

bootable diskette — A diskette that is used to start your system if the system will not boot from the hard drive.

BTU — British thermal unit.

bus — An information pathway between the components of a system. Your system contains an expansion bus that allows the processor to communicate with controllers for the peripheral devices connected to the system. Your system also contains an address bus and a data bus for communications between the processor and RAM.

C — Celsius.

cache — A fast storage area that keeps a copy of data or instructions for quick data retrieval. When a program makes a request to a disk drive for data that is in the cache, the disk-cache utility can retrieve the data from RAM faster than from the disk drive.

CD — Compact disc. CD drives use optical technology to read data from CDs.

cm — Centimeter(s).

cmos — Complementary metal-oxide semiconductor.

component — As they relate to DMI, components include operating systems, computer systems, expansion cards, and peripherals that are compatible with DMI. Each component is made up of groups and attributes that are defined as relevant to that component.

COM n — The device names for the serial ports on your system.

control panel — The part of the system that contains indicators and controls, such as the power button and power indicator.

controller — A chip that controls the transfer of data between the processor and memory or between the processor and a peripheral.

conventional memory — The first 640 KB of RAM. Conventional memory is found in all systems. Unless they are specially designed, MS-DOS[®] programs are limited to running in conventional memory.

coprocessor — A chip that relieves the system's processor of specific processing tasks. A math coprocessor, for example, handles numeric processing.

CPU — Central processing unit. See *processor*.

DC — Direct current.

DDR — Double-data rate. A technology in memory modules that potentially doubles the output.

device driver — A program that allows the operating system or some other program to interface correctly with a peripheral. Some device drivers—such as network drivers—must be loaded from the `config.sys` file or as memory-resident programs (usually, from the `autoexec.bat` file). Others must load when you start the program for which they were designed.

DHCP — Dynamic Host Configuration Protocol. A method of automatically assigning an IP address to a client system.

diagnostics — A comprehensive set of tests for your system.

DIMM — Dual in-line memory module. See also *memory module*.

DIN — *Deutsche Industrie Norm*.

directory — Directories help keep related files organized on a disk in a hierarchical, “inverted tree” structure. Each disk has a “root” directory. Additional directories that branch off the root directory are called *subdirectories*. Subdirectories may contain additional directories branching off them.

DMA — Direct memory access. A DMA channel allows certain types of data transfer between RAM and a device to bypass the processor.

DMI — Desktop Management Interface. DMI enables the management of your system’s software and hardware by collecting information about the system’s components, such as the operating system, memory, peripherals, expansion cards, and asset tag.

DNS — Domain Name System. A method of translating Internet domain names, such as `www.dell.com`, into IP addresses, such as 143.166.83.200.

DRAM — Dynamic random-access memory. A system’s RAM is usually made up entirely of DRAM chips.

DVD — Digital versatile disc.

ECC — Error checking and correction.

EEPROM — Electronically erasable programmable read-only memory.

EMC — Electromagnetic compatibility.

EMI — Electromagnetic interference.

ERA — Embedded remote access. ERA allows you to perform remote, or “out-of-band,” server management on your network server using a remote access controller.

ESD — Electrostatic discharge.

ESM — Embedded server management.

expansion bus — Your system contains an expansion bus that allows the processor to communicate with controllers for peripherals, such as NICs.

expansion card — An add-in card, such as a NIC or SCSI adapter, that plugs into an expansion-card connector on the system board. An expansion card adds some specialized function to the system by providing an interface between the expansion bus and a peripheral.

expansion-card connector — A connector on the system board or riser board for plugging in an expansion card.

F — Fahrenheit.

FAT — File allocation table. The file system structure used by MS-DOS to organize and keep track of file storage. The Microsoft® Windows® operating systems can optionally use a FAT file system structure.

flash memory — A type of EEPROM chip that can be reprogrammed from a utility on diskette while still installed in a system; most EEPROM chips can only be rewritten with special programming equipment.

format — To prepare a hard drive or diskette for storing files. An unconditional format deletes all data stored on the disk.

FSB — Front-side bus. The FSB is the data path and physical interface between the processor and the main memory (RAM).

ft — Feet.

FTP — File transfer protocol.

g — Gram(s).

G — Gravities.

Gb — Gigabit(s); 1024 megabits or 1,073,741,824 bits.

GB — Gigabyte(s); 1024 megabytes or 1,073,741,824 bytes. However, when referring to hard-drive capacity, the term is usually rounded to 1,000,000,000 bytes.

graphics mode — A video mode that can be defined as x horizontal by y vertical pixels by z colors.

group — As it relates to DMI, a group is a data structure that defines common information, or attributes, about a manageable component.

guarding — A type of data redundancy in which a set of physical drives stores data and an additional drive stores parity data. See also *mirroring*, *striping*, and *RAID*.

h — Hexadecimal. A base-16 numbering system, often used in programming to identify addresses in the system's RAM and I/O memory addresses for devices. In text, hexadecimal numbers are often followed by *h*.

headless system — A system or device that functions without having a keyboard, mouse, or monitor attached. Normally, headless systems are managed over a network using an Internet browser.

host adapter — A host adapter implements communication between the system's bus and the controller for a peripheral device. (Hard-drive controller subsystems include integrated host adapter circuitry.) To add a SCSI expansion bus to your system, you must install or connect the appropriate host adapter.

Hz — Hertz.

I/O — Input/output. A keyboard is an input device, and a monitor is an output device. In general, I/O activity can be differentiated from computational activity.

ID — Identification.

IDE — Integrated drive electronics. A standard interface between the system board and storage devices.

integrated mirroring — Provides simultaneous physical mirroring of two drives. Integrated mirroring functionality is provided by the system's hardware. See also *mirroring*.

internal processor cache — An instruction and data cache built into the processor.

IP — Internet Protocol.

IPX — Internet package exchange.

IRQ — Interrupt request. A signal that data is about to be sent to or received by a peripheral device travels by an IRQ line to the processor. Each peripheral connection must be assigned an IRQ number. Two devices can share the same IRQ assignment, but you cannot operate both devices simultaneously.

jumper — Small blocks on a circuit board with two or more pins emerging from them. Plastic plugs containing a wire fit down over the pins. The wire connects the pins and creates a circuit, providing a simple and reversible method of changing the circuitry in a board.

K — Kilo-; 1000.

Kb — Kilobit(s); 1024 bits.

KB — Kilobyte(s); 1024 bytes.

Kbps — Kilobit(s) per second.

KBps — Kilobyte(s) per second.

key combination — A command requiring you to press multiple keys at the same time (for example, <Ctrl><Alt>).

kg — Kilogram(s); 1000 grams.

kHz — Kiloherzt.

KMM — Keyboard/monitor/mouse.

KVM — Keyboard/video/mouse. KVM refers to a switch that allows selection of the system from which the video is displayed and for which the keyboard and mouse are used.

LAN — Local area network. A LAN is usually confined to the same building or a few nearby buildings, with all equipment linked by wiring dedicated specifically to the LAN.

lb — Pound(s).

LCD — Liquid crystal display.

LED — Light-emitting diode. An electronic device that lights up when a current is passed through it.

Linux — An open-source operating system, similar to the UNIX[®] operating system, that runs on a variety of hardware systems. Linux is freely available; however, the full distribution of Linux along with technical support and training are available for a fee from vendors such as Red Hat[®] Software.

local bus — On a system with local-bus expansion capability, certain peripheral devices (such as the video adapter circuitry) can be designed to run much faster than they would with a traditional expansion bus. See also *bus*.

LVD — Low voltage differential.

m — Meter(s).

mA — Milliampere(s).

MAC address — Media Access Control address. Your system's unique hardware number on a network.

mAh — Milliampere-hour(s).

Mb — Megabit(s); 1,048,576 bits.

MB — Megabyte(s); 1,048,576 bytes. However, when referring to hard-drive capacity, the term is often rounded to mean 1,000,000 bytes.

Mbps — Megabits per second.

MBps — Megabytes per second.

MBR — Master boot record.

memory address — A specific location, usually expressed as a hexadecimal number, in the system's RAM.

memory module — A small circuit board containing DRAM chips that connects to the system board.

memory — An area in your system that stores basic system data. A system can contain several different forms of memory, such as integrated memory (ROM and RAM) and add-in memory modules (DIMMs).

MHz — Megahertz.

mirroring — A type of data redundancy in which a set of physical drives stores data and one or more sets of additional drives stores duplicate copies of the data. Mirroring functionality is provided by software. See also *guarding*, *integrated mirroring*, *striping*, and *RAID*.

mm — Millimeter(s).

ms — Millisecond(s).

MS-DOS® — Microsoft Disk Operating System.

NAS — Network Attached Storage. NAS is one of the concepts used for implementing shared storage on a network. NAS systems have their own operating systems, integrated hardware, and software that are optimized to serve specific storage needs.

NIC — Network interface controller. A device that is installed or integrated in a system to allow connection to a network.

NMI — Nonmaskable interrupt. A device sends an NMI to signal the processor about hardware errors.

ns — Nanosecond(s).

NTFS — The NT File System option in the Windows 2000 operating system.

NVRAM — Nonvolatile random-access memory. Memory that does not lose its contents when you turn off your system. NVRAM is used for maintaining the date, time, and system configuration information.

parity — Redundant information that is associated with a block of data.

partition — You can divide a hard drive into multiple physical sections called *partitions* with the **fdisk** command. Each partition can contain multiple logical drives. You must format each logical drive with the **format** command.

PCI — Peripheral Component Interconnect. A standard for local-bus implementation.

PDU — Power distribution unit. A power source with multiple power outlets that provides electrical power to servers and storage systems in a rack.

peripheral — An internal or external device, such as a diskette drive or keyboard, connected to a system.

PGA — Pin grid array. A type of processor socket that allows you to remove the processor chip.

pixel — A single point on a video display. Pixels are arranged in rows and columns to create an image. A video resolution, such as 640 x 480, is expressed as the number of pixels across by the number of pixels up and down.

POST — Power-on self-test. Before the operating system loads when you turn on your system, the POST tests various system components such as RAM and hard drives.

processor — The primary computational chip inside the system that controls the interpretation and execution of arithmetic and logic functions. Software written for one processor must usually be revised to run on another processor. *CPU* is a synonym for processor.

protected mode — An operating mode that allows operating systems to implement:

- A memory address space of 16 MB to 4 GB
- Multitasking
- Virtual memory, a method for increasing addressable memory by using the hard drive

The Windows 2000 and UNIX 32-bit operating systems run in protected mode. MS-DOS cannot run in protected mode.

PS/2 — Personal System/2.

PXE — Preboot eXecution Environment. A way of booting a system via a LAN (without a hard drive or bootable diskette).

RAC — Remote access controller.

RAID — Redundant array of independent disks. A method of providing data redundancy. Some common implementations of RAID include RAID 0, RAID 1, RAID 5, RAID 10, and RAID 50. See also *guarding*, *mirroring*, and *striping*.

RAM — Random-access memory. The system's primary temporary storage area for program instructions and data. Any information stored in RAM is lost when you turn off your system.

RAS — Remote Access Service. This service allows users running the Windows operating system to remotely access a network from their system using a modem.

readme file — A text file, usually shipped with software or hardware, that contains information supplementing or updating the product's documentation.

read-only file — A read-only file is one that you are prohibited from editing or deleting.

ROM — Read-only memory. Your system contains some programs essential to its operation in ROM code. A ROM chip retains its contents even after you turn off your system. Examples of code in ROM include the program that initiates your system's boot routine and the POST.

ROMB — RAID on motherboard.

rpm — Revolutions per minute.

RTC — Real-time clock.

SAS — Serial-attached SCSI.

SATA — Serial Advanced Technology Attachment. A standard interface between the system board and storage devices.

SCSI — Small computer system interface. An I/O bus interface with faster data transmission rates than standard ports.

SDRAM — Synchronous dynamic random-access memory.

sec — Second(s).

serial port — An I/O port used most often to connect a modem to your system. You can usually identify a serial port on your system by its 9-pin connector.

service tag — A bar code label on the system used to identify it when you call Dell for technical support.

simple disk volume — The volume of free space on a single dynamic, physical disk.

SMART — Self-Monitoring Analysis and Reporting Technology. Allows hard drives to report errors and failures to the system BIOS and then display an error message on the screen.

SMP — Symmetric multiprocessing. Used to describe a system that has two or more processors connected via a high-bandwidth link and managed by an operating system, where each processor has equal access to I/O devices.

SNMP — Simple Network Management Protocol. A standard interface that allows a network manager to remotely monitor and manage workstations.

spanning — Spanning, or concatenating, disk volumes combines unallocated space from multiple disks into one logical volume, allowing more efficient use of all the space and all drive letters on a multiple-disk system.

striping — Disk striping writes data across three or more disks in an array, but only uses a portion of the space on each disk. The amount of space used by a "stripe" is the same on each disk used. A virtual disk may use several stripes on the same set of disks in an array. See also *guarding*, *mirroring*, and *RAID*.

SVGA — Super video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards.

system board — As the main circuit board, the system board usually contains most of your system's integral components, such as the processor, RAM, controllers for peripherals, and various ROM chips.

system configuration information — Data stored in memory that tells a system what hardware is installed and how the system should be configured for operation.

system diskette — See *bootable diskette*.

system memory — See *RAM*.

System Setup program — A BIOS-based program that allows you to configure your system's hardware and customize the system's operation by setting features such as password protection. Because the System Setup program is stored in NVRAM, any settings remain in effect until you change them again.

system.ini file — A start-up file for the Windows operating system. When you start Windows, it consults the **system.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **system.ini** file records which video, mouse, and keyboard drivers are installed for Windows.

TCP/IP — Transmission Control Protocol/Internet Protocol.

termination — Some devices (such as the last device at each end of a SCSI cable) must be terminated to prevent reflections and spurious signals in the cable. When such devices are connected in a series, you may need to enable or disable the termination on these devices by changing jumper or switch settings on the devices or by changing settings in the configuration software for the devices.

TOE — TCP/IP offload engine.

UNIX — Universal Internet Exchange. UNIX, the precursor to Linux, is an operating system written in the C programming language.

uplink port — A port on a network hub or switch used to connect to other hubs or switches without requiring a crossover cable.

UPS — Uninterruptible power supply. A battery-powered unit that automatically supplies power to your system in the event of an electrical failure.

USB — Universal Serial Bus. A USB connector provides a single connection point for multiple USB-compliant devices, such as mice and keyboards. USB devices can be connected and disconnected while the system is running.

utility — A program used to manage system resources—memory, disk drives, or printers, for example.

UTP — Unshielded twisted pair. A type of wiring used to connect systems in a business or home to a telephone line.

V — Volt(s).

VAC — Volt(s) alternating current.

VDC — Volt(s) direct current.

VGA — Video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards.

video adapter — The logical circuitry that provides (in combination with the monitor) your system's video capabilities. A video adapter may be integrated into the system board or may be an expansion card that plugs into an expansion slot.

video driver — A program that allows graphics-mode application programs and operating systems to display at a chosen resolution with the desired number of colors. Video drivers may need to match the video adapter installed in the system.

video memory — Most VGA and SVGA video adapters include memory chips in addition to your system's RAM. The amount of video memory installed primarily influences the number of colors that a program can display (with the appropriate video drivers and monitor capabilities).

video resolution — Video resolution (800 x 600, for example) is expressed as the number of pixels across by the number of pixels up and down. To display a program at a specific graphics resolution, you must install the appropriate video drivers and your monitor must support the resolution.

W — Watt(s).

WH — Watt-hour(s).

win.ini file — A start-up file for the Windows operating system. When you start Windows, it consults the **win.ini** file to determine a variety of options for the Windows operating environment. The **win.ini** file also usually includes sections that contain optional settings for Windows application programs that are installed on the hard drive.

Windows 2000 — An integrated and complete Microsoft Windows operating system that does not require MS-DOS and that provides advanced operating system performance, improved ease of use, enhanced workgroup functionality, and simplified file management and browsing.

Windows Powered — A Windows operating system designed for use on NAS systems. For NAS systems, the Windows Powered operating system is dedicated to file service for network clients.

Windows Server 2003 — A set of Microsoft software technologies that enable software integration through the use of XML Web services. XML Web services are small reusable applications written in XML that allow data to be communicated between otherwise unconnected sources.

XML — Extensible Markup Language. XML is a way to create common information formats and to share both the format and the data on the World Wide Web, intranets, and elsewhere.

ZIF — Zero insertion force.

Index

A

- alert messages, 46
- asset tag, 51

B

- baseboard management controller
- battery, 101
 - SAS RAID controller daughter card, 126
 - system, 101
 - troubleshooting the RAID card battery, 166
 - troubleshooting the system battery, 154
- bezel (rack)
 - installing, 67
 - removing, 64
- bezel (tower)
 - installing, 67
 - peripheral bay panel, 66
 - removing, 65
- blank
 - hard drive, 71
 - power supply, 81
- BMC. *See* baseboard management controller
- boot drive

configuring, 133

boot sequence, 50

C

- cabling the SAS backplanes, 129
- CD drive
 - troubleshooting, 162
- checking equipment, 146
- closing the system, 68
- configuring
 - boot drive, 133
 - memory, 109
- connecting external devices, 20
- connectors
 - SAS backplane (1x8), 182
 - system board, 179
- control panel
 - installing, 135
 - removing, 133
- cooling fans
 - removing and installing, 83
 - troubleshooting, 157
- cooling shroud
 - installing, 105
 - removing, 103
- cooling shroud fan, 85

- cover
 - closing, 68
 - opening, 67
- CPU setup options, 51

D

- damaged systems
 - troubleshooting, 154
- Dell
 - contacting, 190
- diagnostics
 - testing options, 174
 - when to use, 174
- DIMM
 - installing, 110
 - removing, 112
 - sockets, 107
- diskette drive
 - drive carrier, 99
 - installing, 99
 - removing, 97
 - troubleshooting, 160
- drive blank
 - installing, 72
 - removing, 71
- drive carrier
 - diskette drive, 99
 - SAS hard drive (SATAu), 74
 - SATA hard drive (SATA), 76
 - SATA hard drive (SATAu), 77

E

- error messages, 47
 - LCD, 22
 - systems management, 34
- expansion cards
 - installing, 88
 - removing, 90
 - troubleshooting, 168
- expansion slots, 87
- expansion-bay bracket
 - installing, 139
 - removing, 137
- external devices
 - connecting, 20

F

- fan bracket
 - back, 106
 - center, 105
 - cooling shroud, 85
- fans, 81
 - installing and removing, 83
 - numbered, 82
- features
 - back-panel, 19
 - front-panel, 14
- flex bay drive bracket
 - installing, 125
 - removing, 123

G

guidelines for memory
installation, 109

H

hard drive
indicator codes, 17
installing, 72
installing SAS in a SATAu drive
carrier, 74
installing SATA in a SATA drive
carrier, 76
installing SATA in a SATAu drive
carrier, 77
removing, 72
removing from a drive carrier, 74
troubleshooting, 164

hard-drive bay, 70

hot-plug
fans, 83
hard drives, 72
power supplies, 79

I

indicators
back-panel, 19
front-panel, 14
hard drive, 17
LCD, 22
NIC, 21
power, 20

installing

back fan bracket, 106
bezel, 67
center fan bracket, 106
control panel, 135
cooling shroud, 105
diskette drive, 99
expansion cards, 88
expansion-bay bracket, 139
flex bay drive bracket, 125
hard drive blank, 72
hard drives, 72
memory, 110
memory guidelines, 109
optical drive, 95
peripheral bay panel (tower), 67
power distribution board, 142
power supply, 80
power supply blank, 81
processor, 117
RAC card, 114
RAID battery, 126
SAS backplane (1x8), 122
SAS controller daughter card, 129
SAS hard drive in a SATAu drive
carrier, 74
SATA hard drive in a SATA drive
carrier, 76
SATA hard drive in a SATAu drive
carrier, 77
system battery, 101
system board, 139
tape backup unit, 93

IRQs

avoiding conflicts, 146
configuring, 50
line assignments, 146

J

jumpers
system board, 177

K

keyboard
troubleshooting, 148

L

LCD panel
configuring, 50

M

memory
branches, 107
channels, 107
installation guidelines, 109
installing, 110
mirroring, 110
removing DIMMs, 112
socket arrangement, 108
sparing, 109
troubleshooting, 158

messages
alert, 46
error, 47
hard-drive indicator codes, 17
status LCD, 22
system, 34
warning, 46

microprocessor
replacing, 117
troubleshooting, 169

mirroring memory, 110

mouse
troubleshooting, 149

N

NICs
indicators, 21
troubleshooting, 152

NMI button, 15

O

opening the system, 67

optical drive
installing, 95
removing, 94

options
CPU setup, 51
integrated devices, 52
system security, 54
system setup, 48

P

password
disabling, 183
setup, 59
system, 56

PCIe/PCI-X expansion slots, 87

peripheral bay
optical drive, 94
tape backup unit, 93

peripheral bay panel
installing, 67
removing, 66

POST
accessing system features, 13

power
indicator, 20

power distribution board
installing, 142
removing, 141

power supply
installing, 80
removing, 79
troubleshooting, 155

power supply blank, 81

processor
replacing, 117

R

RAC card, 113
installing, 114
removing, 113

RAID cabling, 129

RAID controller. *See* SAS RAID
controller daughter card

recommended tools, 63

removing

back fan bracket, 106
center fan bracket, 105-106
control panel, 133
cooling shroud, 103
diskette drive, 97
expansion cards, 90
expansion-bay bracket, 137
fans, 83
flex bay drive bracket, 123
hard drive blank, 71
hard drive from a drive carrier, 74
hard drives, 72
memory, 112
optical drive, 94
peripheral bay panel (tower), 66
power distribution board, 141
power supply, 79
power supply blank, 81
processor, 117
RAC card, 113
rack bezel, 64
SAS backplane board (1x8), 121
SAS controller daughter card, 127
system board, 136
tape backup unit, 91
tower bezel, 65

S

safety, 145

SAS backplane (1x2)
cabling, 129
installing, 125
removing, 123

SAS backplane (1x8)

- cabling, 129
- connectors, 182
- installing, 122
- removing, 121
- SAS controller daughter card
 - installing, 129
 - removing, 127
 - troubleshooting, 166
- SAS controller. *See* SAS controller daughter card
- SAS RAID controller daughter card
 - battery replacement, 126
 - installing, 129
 - removing, 127
 - troubleshooting, 166
- securing your system, 58
- serial I/O device
 - troubleshooting, 150
- setup password
 - assigning, 59
 - changing, 60
 - using, 59
- spare bank, 109
- startup
 - accessing system features, 13
- status messages
 - LCD, 22
 - systems management, 34
- support
 - contacting Dell, 190
- system board
 - connectors, 179
 - installing, 139
 - jumpers, 177
 - removing, 136
- system cooling
 - troubleshooting, 156
- system features
 - accessing, 13
- system identification button, 15
- system messages, 34
- system password
 - assigning, 57
 - changing, 59
 - deleting, 59
 - using, 56
- system security, 50
- system setup
 - entering, 47, 61
 - navigation keys, 48
 - options, 48
- system setup screens
 - console redirection, 54
 - CPU information, 51
 - integrated devices, 52
 - main, 48
 - system security, 54

T

- tape backup unit
 - installing, 93
 - removing, 91

- tape drive
 - troubleshooting, 163
- troubleshooting
 - CD drive, 162
 - cooling fans, 157
 - damaged system, 154
 - diskette drive, 160
 - expansion cards, 168
 - external connections, 147
 - hard drive, 164
 - keyboard, 148
 - memory, 158
 - microprocessors, 169
 - mouse, 149
 - NIC, 152
 - power supplies, 155
 - SAS RAID controller daughter card, 166
 - serial I/O device, 150
 - start-up routine, 145
 - system battery, 154
 - system cooling, 156
 - tape drive, 163
 - USB device, 151
 - video, 147
 - wet system, 153

U

- USB device
 - troubleshooting, 151

V

- video
 - troubleshooting, 147

W

- warning messages, 46
- warranty, 12
- wet system
 - troubleshooting, 153

