

**Dell Openmanage
Deployment Toolkit
5.0.2 For Embedded
Linux**

Release Notes

Release Type and Definition

Deployment ToolKit

The Dell OpenManage Deployment Toolkit (DTK) includes a set of utilities, scripts, and sample configuration files that to deploy and your Dell system. You can use DTK to build script-based and RPM-based installation for deploying large number of systems on a preoperating system environment in a reliable way, without changing their current deployment processes.

In addition to the command line utilities used to configure various system features, DTK also provides sample scripts and configuration files to perform common deployment tasks and documentation.

Version

5.0.2

Release Date

December 2014

Previous Version

5.0.1

Importance

RECOMMENDED: Dell recommends applying this update during your next scheduled update cycle. The update contains feature enhancements or changes that will help keep your system software current and compatible with other system modules (firmware, BIOS, drivers and software).

Platforms Affected

For a complete list of supported Dell PowerEdge systems and supported Operating systems, see the Dell Systems Software Support Matrix available in the required version of OpenManage Software at dell.com/openmanagemanuals.

What Is Supported

Hardware and Software Requirements

Before installing the DTK components for embedded Linux, ensure that you have:

- The DTK ISO image, which contains the utilities, sample scripts, sample configuration files, and documentation to deploy your Dell system.
- A Linux workstation that has at least 200 MB of free hard-drive space.

When building customized Linux ISOs, you might need to incorporate the following Red Hat Package Managers (RPMs) provided by DTK to ensure a successful build:

- dtk-scripts
- raidcfg
- syscfg

If you have the DTK CD mounted under `"/mnt/cdrom,"` you can extract the DTK RPMs to build your customized ISO image under the "RPMs" folder at the root of the CD.

Operating System Requirements

Using DTK utilities you can deploy the following Linux operating systems:

- Red Hat Enterprise Linux 7.0 (64-bit)
- Red Hat Enterprise Linux 6.5 (64-bit)
- SUSE Linux Enterprise Server 11 SP3 (64-bit)

What's New

Note: DTK version 5.0.2 is supported only on the following systems:

- Dell PowerEdge T430
- PowerEdge FC630
- PowerEdge R530
- PowerEdge R430
- Dell PowerEdgeM630

The new features for this release include:

- Support for PERC H730P Slim

NOTE: For the list of supported operating systems and Dell servers, see the Dell Systems Software Support Matrix at dell.com/openmanagemanuals.

Important Notes

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

SYSCFG

- Some options may not be present on all systems, which may be due to the BIOS version or hardware feature set. The usage information generated by running SYSCFG without arguments shows only those options that are valid for your system.
- The "--devseq" option is present only if you have an available, bootable hard-disk partition. If this option is present in the configuration file, but not present on your system, you will receive a usage error.
- To enable certain options, to reboot your system. Dell recommends you use the "reboot" command on shell prompt or press the "Ctrl+Alt+Del" keys.
- It is required to perform a warm reboot after applying the syscfg settings changes on Dell PowerEdge 12G systems.
- If you perform operations that change the "--redmem" option, reboot your system immediately. It is applicable to both command line and "--infile" usage.
NOTE: Additionally, the "--redmem" option should not be issued with any other command and should be immediately followed by a system reboot. This is important when you develop scripts that can alter the "--redmem" setting.
- For options that use text strings such as username, password, hostname, and community string, using characters such as <space>, "<," ">," "|," "=" on the command line can be misinterpreted by the command line parser and may cause errors. To avoid such errors, use only alphanumeric characters.
- If you set the username using syscfg username option, Serial Over Lan (SOL) access for the corresponding user will be enabled by default. You can disable SOL access for a user using "syscfg solaction --userid=<userid> --action=disable" command.
- The legacy attribute values enable and disable are also supported for 12G systems for backward compatibility. In future releases these arguments might be deprecated. Try to use the values displayed in help message for BIOS options for 12G server.

RAIDCFG

- When creating virtual disks, the chunk (stripe) size is always in KBs. Do not specify any units of measure for the chunk size.
- When providing multiple physical disks for the "create virtual disk" command, do not separate the disks with spaces. For example, "-ad=1:4, 1:5" causes an error. The correct way to input multiple physical disks is "-ad=1:4,1:5,1:6" or "-ad=1:4:0,1:5:0,1:6:0".
- If you change the controller mode from SCSI to RAID mode, data loss may occur. Back up any data you require before changing the modes.

Known Issues

SYSCFG Issues

- The syscfg --bootseq command detects CD-ROM with SAS/SATA controllers as unk.emb.1.
- On R815, syscfg power --profile option sets apc. Though apc is not supported on R815, syscfg does not throw an error message.
- The option for "powerctl," "softshutdown," causes your system to reboot. If you use a customized kernel with Advanced Configuration and Power Interface (ACPI) support, this option will work as designed.
- Using the "solcfgparams" option may result in an error message saying "Hardware subsystem error" when an invalid value is used. It does not indicate a problem with the hardware. Check the option value and try again.
- The "--solbitrate" option in "solcfgparams" and the "--mgscommbitrate" option in "serialcfgparams" accept a baud rate of 57600, but tools such as "ipmish" and "solproxy" do not function at that baud rate for PowerEdge systems.
- The legacy attribute values enable and disable are also supported for 12G systems for backward compatibility. In future releases, these arguments might be deprecated. Try to use the values shown in help message for BIOS options for 12G server.

RAIDCFG Issues

- You can assign up to 10 Global hot spares using Raidcfg. Use the Dell OpenManage Server Administrator Storage Management for assigning more than 10 Global hot spares.
- USB keys should not be mounted to the /tmp directory. Inside the /tmp directory, create a new directory and mount the USB to this.
- On Dell PERC H310 controllers, conversion of a RAID Capable Disk to Non-RAID disk and vice versa is not supported using raidcfg.

Operating System Installation Issues

- Installation of legacy Red Hat Enterprise Linux operating systems may fail due to lack of support for new hardware. Modify the '%post' section of "ks.cfg" to update to a newer version of the kernel or use driver disk to install drivers.
- The Red Hat Enterprise Linux operating system installation may fail on systems equipped with multiple RAID and/or SCSI controllers, whether installed on the system board or in PCI slots. This failure may occur when using "Server Setup" or performing a manual installation. When two or more RAID or SCSI controllers are present, install Red Hat Enterprise Linux with only one configured RAID or SCSI controller. Configure the other controllers after you install the Red Hat Enterprise Linux operating system.
- When deploying SUSE Linux Enterprise Server version 11 on PowerEdge M915 using DTK automated script (autoinst.xml), do the following:

- 1) In device map section,

```
<device_map_entry>
  <firmware>hd0</firmware>
  <linux>/dev/sdc</linux>
</device_map_entry>
```

change hd0 to /dev/sdc

- 2) In grub config section, change `/dev/sda5` to `/dev/sda6`
- 3) If installer reports any missing packages, delete the packages from `autoinst.xml`.

Instrumentation Issues

The `/opt/dell/srvadmin` directory in the DTK ISO image should be writable. It enables the instrumentation services to work properly.

Installation Prerequisites

Before extracting Deployment Toolkit components, ensure that you have:

- The DTK ISO image available at support.dell.com.
- A workstation that has
- 512 MB RAM
- A writable CD drive and CD-writing software (optional)
- Network access
- A minimum BIOS version is recommended on some of the platforms for all the DTK options to work properly. In general, it is a good practice to use the latest ("n") version of BIOS firmware or the "n-1" version that is available on "support.dell.com."

Installation Procedure

For complete installation and deployment instructions, see the "Dell OpenManage Deployment Toolkit User's Guide."

Installation and Configuration Notes

- The sample scripts are provided as examples for customers who want to develop their own deployment process. Some customers may find that the scripts work well in their environment, while some customers may need to develop their own scripts entirely from scratch. Customers deploying multiple systems may need to provide unique information for each server when appropriate. For example, system host names, IP addresses, and BIOS asset tags need to be unique for each system. Modify the shell scripts and configuration files to reflect the unique information for each system being deployed. Many options are available to optimize this process.
- Because of security reasons, the "ssh" and "scp" services are not available in DTK. The mount command is available in the DTK CD.

Upgrading From Previous Versions

When upgrading from a previous release of the DTK, ensure that you create environment for the new DTK version separately from the previous version of DTK. This step is necessary because the environments and requirements for the new DTK versions are completely different.

Contacting Dell

NOTE: Dell provides several online and telephone-based support and service options. If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog. Availability varies by country and product, and some services may not be available in your area.

To contact Dell for sales, technical support, or customer-service issues:

- 1) Go to dell.com/contactdell.
- 2) Select your country or region from the interactive world map. When you select a region, the countries for the selected regions are displayed.
- 3) Select the appropriate language under the country of your choice.
- 4) Select your business segment. The main support page for the selected business segment is displayed.
- 5) Select the appropriate option depending on your requirement.

NOTE: If you have purchased a Dell system, you may be asked for the Service Tag.

Copyright © 2014 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws.

Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2014 - 12