

## Mini 3T1 Getting Started Guide




## Overview Front View Features



- 1 Volume buttons**  
Press to increase or decrease the volume level.
- 2 Back button**  
Press once to view the previous screen.
- 3 Navigation disc**  
Press the disc in the appropriate direction to navigate through menus.
- 4 OK button**  
Press to make a selection.
- 5 Home button**  
Press to view the Home screen.
- 6 Camera button**  
Press to activate the camera and capture photos or videos.
- 7 Touch screen**  
Displays information and enables you to make selections.
- 8 Front camera**  
Used for making video calls. The front camera is of a lower resolution than the rear camera.


## Back View Features

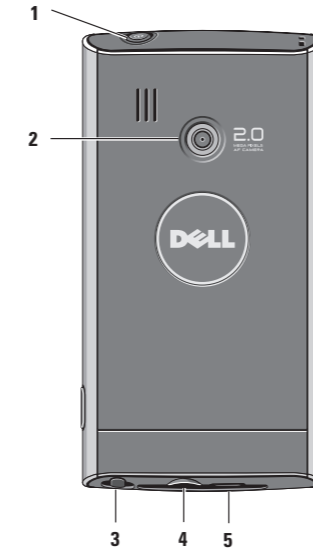

- 1 Power button**  
Press to lock/unlock the screen.  
Press and hold to turn on/off the phone.
- 2 Rear camera**  
Captures photos and videos.
- 3 Stylus**  
Used for making selections by tapping the screen and conveniently writing on the screen.  
To use the stylus, pull the stylus out from its slot.
- 4 3.5 mm headset connector**  
Connects to the headset for hands-free communication. Also connects to compatible headphones.
- 5 Mini-USB connector**  
Used for charging the phone and for data transfer.


## Setting Up Your Mini 3T1

### 1. Remove the back cover

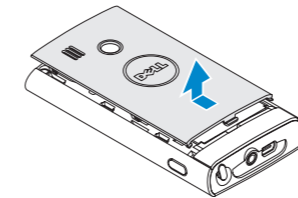


Press and slide the back cover towards the top of the phone and lift it up.

### 2. Install the SIM card

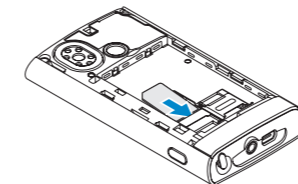


Slide the SIM card into the SIM card slot. Ensure that the SIM card's metal contacts are facing down and the beveled corner on the SIM card is facing the top of the phone.

### 3. Install the microSD card

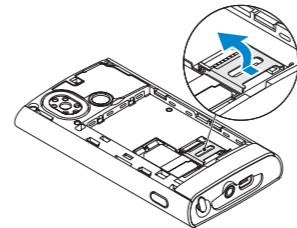


Push the microSD card retainer towards the top of the phone and lift it up.

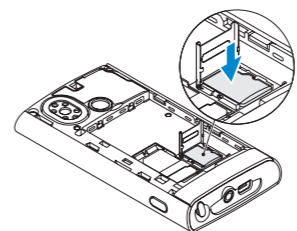


Place the microSD card in the microSD card slot and press the microSD card retainer down until it locks into place.

### 4. Install the battery

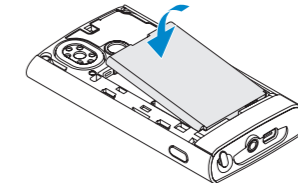


Align the battery's metal contacts with the connectors in the battery compartment and press the battery down until it locks into place.

### 5. Replace the back cover

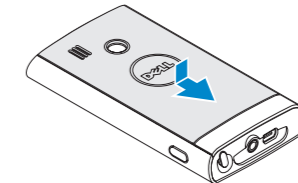

Align the tabs at the bottom of the back cover with the slots located along the edge of the phone. Press and slide the back cover towards the bottom of the phone until it locks into place.

### 6. Turn on the phone

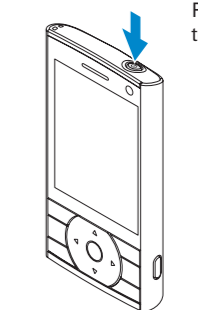

Press and hold the power button to turn on the phone.

## Main Menu

The Main Menu displays the applications available on your phone.

To view the Main Menu, press the Home button once.

To launch an application, tap the icon.

To switch between the Home screen and Main Menu, press the Home button.

Home screen





Main Menu




## Making Calls



To make a call using the dialer:

1. Tap anywhere on the Home screen to launch the dialer.
2. Tap the dial pad to enter the number you want to call.
3. Tap **Voice call**  or **Video call**  based on your preference.

To call a contact in your phone book:

Tap **Phone Book**  on the dialer and tap the contact you want to dial.


## Messaging

To launch messaging, tap **Menu** and then **Messages** from the Home screen.

To create a new message:

1. Tap **Create SMS** to create a text message or tap **Create MMS** to create a multimedia message.
2. Enter the message and the recipient's number or select a contact from the phone book.

You can also insert images, videos, or captured photos and sounds in your multimedia messages.

 **NOTE:** To view the messages stored on the phone, tap the appropriate folder.

## Browser

To launch the web browser, tap **Menu** and then **Internet** from the Home screen.

### Creating Bookmarks


To create bookmarks to your favorite web pages:

1. Tap **Options** and then tap **Bookmarks**.
2. Tap **Add current page as bookmark**.

## Search



To search for content on your phone:

1. Tap the Search icon  on the Home screen.
2. Enter the search criteria in the **Please input the key word** box.
3. Tap **OK** to start your search.


You can search within the call history, phone book, favorites, and messages.


## Multimedia



To browse and play multimedia content on your phone:

1. Tap **Menu** on the Home screen, and then tap **Multimedia**.
2. Tap **Music player** to play audio files or tap **Video player** to play video files.

 **NOTE:** The **Music player** allows you to view files by artist name, album name, and the complete music list.

 **NOTE:** You can also access other functions of the phone while playing music. To go back to the music player, tap **Menu** on the Home screen, tap **Multimedia**, and then tap **Music player**.


## Camera

To launch the camera:

- Press the camera button or
- Tap **Menu** on the Home screen, tap **Multimedia**, and then tap **Camera**.

To capture a picture, press the camera button.

You can save or transfer your pictures using the **Option** menu.

To launch the video application, press the camera button and tap the camera icon on the screen until the Video icon  appears.

To start recording a video, press the camera button. To stop recording the video, press the camera button again.

To switch between the front and the rear camera, tap the setup icon  and then tap **Change Camera**.

## Additional Information

The microSD card that shipped with your phone contains the following:

- **User's Manual** — Provides extensive information on other features and advanced options
- **PCSync tool** — Used to sync contacts, calendar, and personal content such as music and pictures between your phone and a computer

You can also download the User's Manual and PCSync tool from [support.dell.com](http://support.dell.com).

Information in this document is subject to change without notice.

© 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.

May 2010      P/N 2HDWT      Rev. A01