

VENUE 7


Quick Start Guide

快速入门指南



1 Connect the power cable and turn on your tablet

连接电源电缆并开启平板电脑

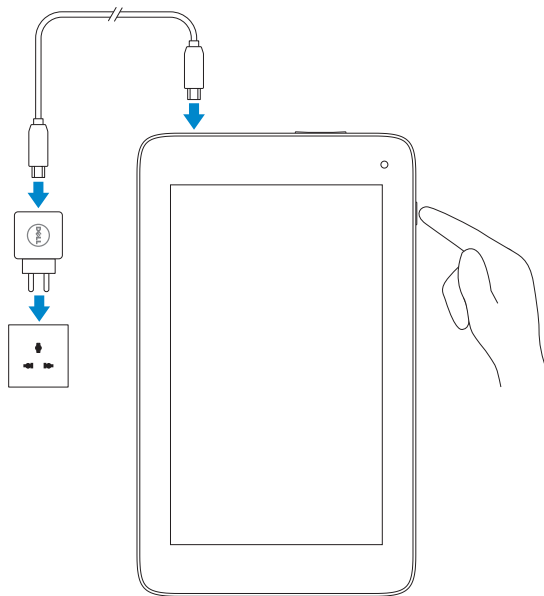

2 Customize your home screen

自定义您的主屏幕



3 Register your tablet

注册平板电脑

dell.com/support/retail

Product support and manuals

产品支持和手册

Contact Dell

与 Dell 联络

Regulatory and safety

管制与安全

Regulatory model/type

管制型号/类型

Model

型号

dell.com/support

dell.com/support/manuals

dell.com/contactdell


 
dell.com/regulatory_compliance

Venue 7 3736


Venue 7 3736

Features

功能部件

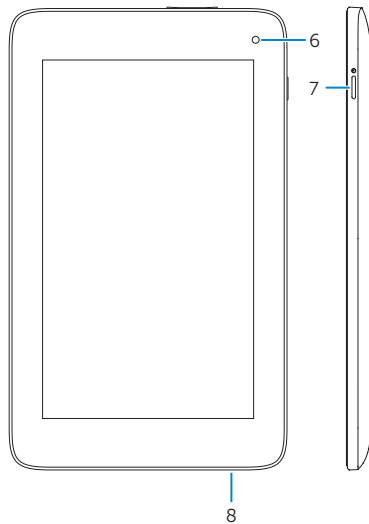

1. Micro-USB port
2. MicroSD-card slot
3. Microphone
4. Volume buttons (2)
5. Headset port
6. Camera
7. Power button
8. Speaker
9. Regulatory label
10. Service Tag label

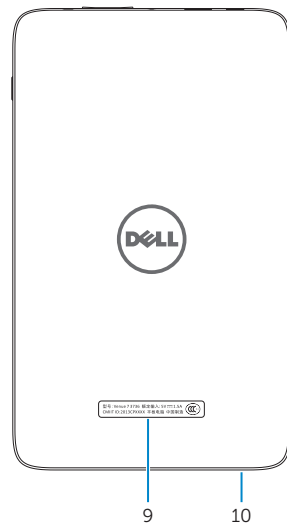

1. 微型 USB 端口
2. MicroSD 卡插槽
3. 麦克风
4. 音量按钮 (2 个)
5. 耳机端口
6. 摄像头
7. 电源按钮
8. 扬声器
9. 管制标签
10. 服务标签

Inserting MicroSD Card

插入 MicroSD 卡

