

Dell™ Streak 7
User's Manual



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2011 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™ and the DELL logo are trademarks of Dell Inc.

Adobe Acrobat is a trademark of Adobe Systems Incorporated which may be registered in certain jurisdictions; Microsoft®, Windows®, and Windows Vista® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

August 2011

A00

Contents


1	Dell Streak 7 Tablet Features	6
2	Setting Up Your Dell Streak 7 Tablet	11
	Getting Your Tablet Ready for Use	11
	Turning On Your Device	13
	Turning Off Your Device	13
	Turning Off the Screen	13
3	About Your Dell Streak 7 Tablet	14
	Touch Screen	14
	Screen Orientation	17
	Applications, Widgets, and Shortcuts	17
	Home Screen	18
	Navigation Buttons	20
	Notifications and Status	21
	Customizing Your Home Screen	25
	The Dell Stage Widgets	30
	Navigating the Applications	37
4	Using Your Dell Streak 7 Tablet	40

 
	Managing Contacts	40
	Messaging (on 3G model only)	44
	Pop-up Menu	50
	Swype Keyboard	51
	Dell Keyboard	55
	Google Search	58
	Managing Your Device Settings	59
5	Internet	62
	Connecting to the Internet	62
	Browsing the Internet	66
	E-mail	76
	Web Applications	79
	Synchronizing Your Google Data	103
6	Customizing Your Dell Streak 7 Tablet	104
	Power Management Settings	104
	Display Settings	105
	Sound and Ringtone Settings	106
	Date, Time, and Time Zone	107
	Language Settings	108
7	Protecting Your Dell Streak 7 Tablet	109

	Protect Your Device Data with a Screen Unlock Pattern	109
	Protect Your Device Data with a PIN	111
	Protect Your Device Data with a Password	112
	Protect Your SIM Card with the SIM Lock Password (on 3G model only)	113
8	Applications	114
	Camera	114
	Bluetooth®	116
	Gallery	119
	Music	122
	Calendar	124
	Clock	128
	Calculator	130
	Sound Recorder	131
9	Connect and Sync with a Computer Using Dell Mobile Sync	132
10	Troubleshooting	134
	Starting Your Device in the Safe Mode	136
	Emergency Recovery	137



 
Dell Streak 7 Tablet Features


This section provides information about the features available on your device.

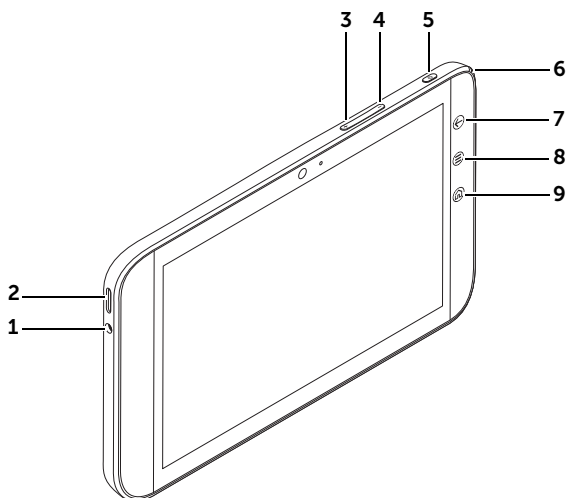 
 **NOTE:** The features or applications described in this *User's Manual* may not be all available on your device, and may vary depending on the model you purchase.



 
Buttons/Ports/Parts	Functionality
1 Headphone connector	Connects to headphones.
2 Speaker	Provides audio output for video and music playback.
3 Volume up button	<ul style="list-style-type: none">• Press to increase the volume by one level.• Press and hold to continuously increase the volume.
4 Volume down button	<ul style="list-style-type: none">• Press to decrease the volume by one level.• Press and hold to continuously decrease the volume.

Buttons/Ports/Parts	Functionality
<p>5 Power and Sleep/Wake button</p> 	<ul style="list-style-type: none"> • Press and hold to turn on the device. • Press to turn the screen on or off. • While the device is on, press and hold to turn off the device. Touch OK when the Power off menu appears.
<p>6 Battery status light</p>	<p>Indicates the battery charge status and pending notifications. The different lights indicate the following:</p> <ul style="list-style-type: none"> • Solid green — Battery is fully charged when connected to power. • Solid amber — Battery is charging. • Solid red — Battery charge is low and the battery is charging. • Blinking red — Battery charge is low. • Blinking green — Indicates pending notifications.
<p>7 Back button </p>	<p>Touch to return to the previous screen, close a dialog box, menu, or pop-up message, and to dismiss the keyboard.</p>
<p>8 Menu button </p>	<p>Touch to open or close options menus that display available tools for the current application or actions that you can perform on the current screen.</p>

Buttons/Ports/Parts	Functionality
9 Home button 	<ul style="list-style-type: none">• When viewing other Home screens, you can touch this button to return to the central Home screen.• When performing any function on the device, such as working with applications, widgets, and so on, you can touch this button to return to the last Home screen you viewed, or touch this button again to return to the central Home screen.

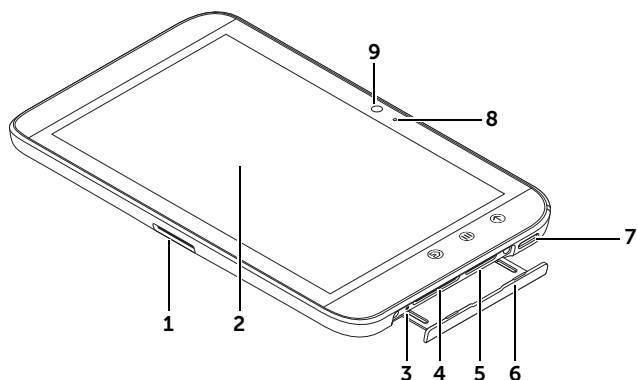

1 30-pin port	<ul style="list-style-type: none"> • Connects to the supplied USB cable for transferring files to and from a computer. • Connects to the supplied USB cable and USB wall-charger adapter to charge the device.
2 Touch screen	Touch the screen to use the on-screen controls including buttons, menu items, and the keyboard.
3 Force power-off button	Push the button to force power off the device.
4 SD card slot	Holds the SD card in place.
5 SIM card slot (on 3G model only)	Holds the SIM card in place.
6 Slot door	Provides access to the SIM card and SD card slots.
7 Speaker	Provides audio output for video and music playback.
8 Microphone	Used for making video calls with supportive web applications, such as Skype.
9 Front-facing camera	<ul style="list-style-type: none"> • Used for capturing a front view picture, for example, a self-portrait. • Used for making video calls with supportive web applications, such as Skype.

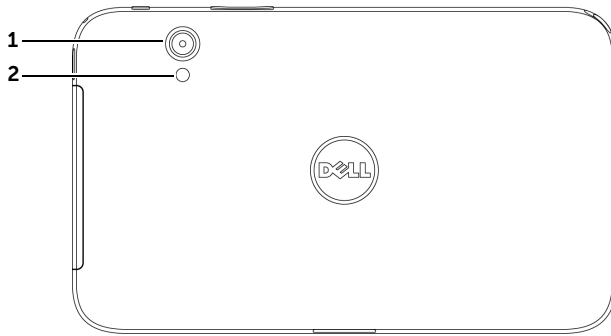 


1 Camera lens	Captures pictures and videos.
2 Camera flash	Used for capturing pictures and videos in dimly lit environments.

Setting Up Your Dell Streak 7 Tablet

 
Getting Your Tablet Ready for Use

Insert the SIM card on 3G model (Optional)

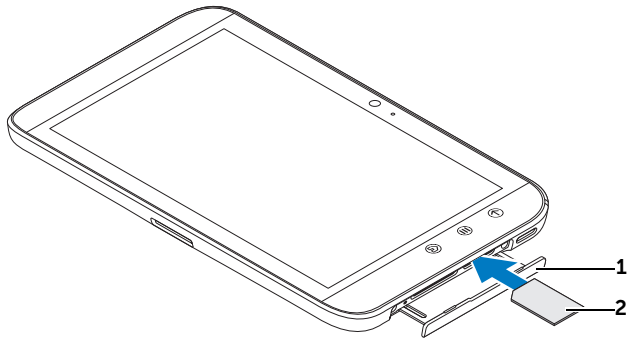

- 1 Pull out the slot door.
- 2 Hold the SIM card with the metal contacts facing down, and follow the SIM card illustration on the slot door label to insert the SIM card into the SIM card slot.


Insert the SD card

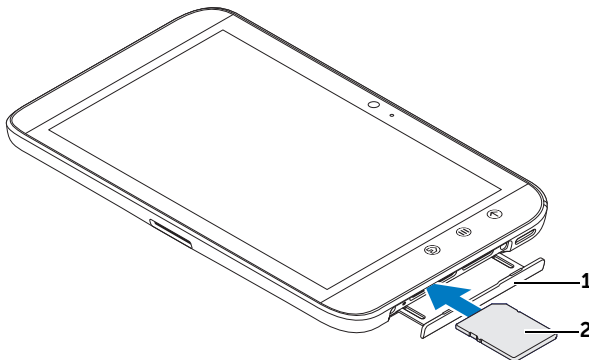


- 1 Pull out the slot door.

-
- 2 Hold the SD card with the metal contacts facing down, and follow the SD card illustration on the slot door label to insert the SD card into the SD card slot.
-

 
Charge the battery

 **CAUTION:** Charging your tablet when the ambient temperature is not between 0°C - 45°C can damage your tablet.


 **NOTE:** The battery cannot be charged by connecting your device to a computer.


 **NOTE:** The battery is not fully charged when first unpacked.

- 1 Connect the supplied USB cable's 30-pin connector to the 30-pin port on the device.

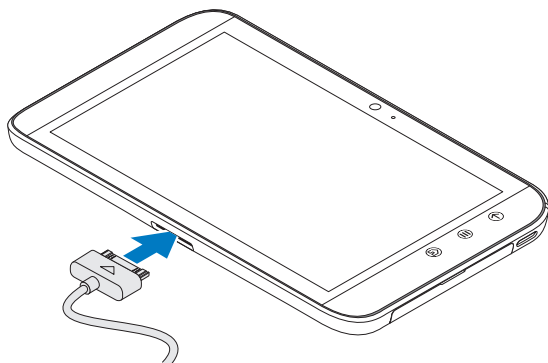



- 2 Connect the cable's USB connector to the supplied USB wall-charger adapter.
- 3 Connect the USB wall-charger adapter into an electrical outlet and charge the device until the battery is fully charged.

 **NOTE:** When charging the battery by connecting the device to an electrical outlet, the battery is fully charged in about 4 hours.

 **NOTE:** The cable is specific for this device: 30-pin to USB and the length is less than 3 meters.


Turning On Your Device

 **NOTE:** Use this device in an environmental temperature between -10°C and 55°C.


- 1 Press and hold the Power and Sleep/Wake button  to turn on your device.
- 2 If the lock screen appears, touch and hold the lock icon . When it turns into a circle, drag it to the edge of the larger circle that surrounds it to unlock the screen.
- 3 If your SIM card is locked by a Personal Identification Number (PIN), type the PIN by touching the corresponding number keys using the on-screen keypad. Touch the **OK** button to confirm your input.



The device is ready for use when the Home screen is displayed.

Turning Off Your Device

- 1 Press and hold the Power and Sleep/Wake button .
- 2 When the **Power off** menu appears, touch **OK**.

Turning Off the Screen

If both the device and the screen are on, press the Power and Sleep/Wake button  once to turn off the screen.

 **NOTE:** If the device is on, but the screen is off, press the Power and Sleep/Wake button  once to turn on the screen. For information on unlocking the screen, see "The Screen Lock Wallpaper" on page 39.

About Your Dell Streak 7 Tablet

Touch Screen

Your device has a multi-touch sensitive screen. You can touch the surface of the screen to operate the device.

Finger Gestures

Allows you to:

Touch

Tap gently on the screen with your fingertip.



- Select the items on the screen including options, entries, images, and icons.
- Start applications.
- Press the buttons on the screen.
- Input text using the on-screen keyboard.

Touch and hold

Touch and hold your finger on the screen



- Enable the moving mode of an item on the Home screen.
- Open the context menu.

Finger Gestures

Allows you to:

Drag

- 1 Touch and hold your finger on an item on the screen.
 - 2 Keeping your finger in contact with the screen, move your fingertip to the desired location.
 - 3 Take your finger off the screen to drop the item in the desired location.
- Move items such as images and icons on the screen.
 - Scroll through Home screens, web pages, lists, entries, photo thumbnails, contacts, and so on.



Flick or swipe

Move your finger in a vertical or horizontal direction on the screen.

Quickly scroll through Home screens, web pages, lists, entries, photo thumbnails, contacts, and so on.



 
Finger Gestures

Allows you to:

Zoom out

 
Move two fingers close together on the screen.

Reduce the view of an image or web page (zoom out).

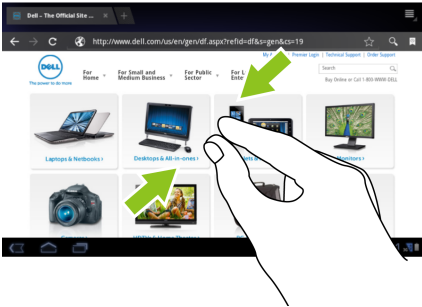



Zoom in

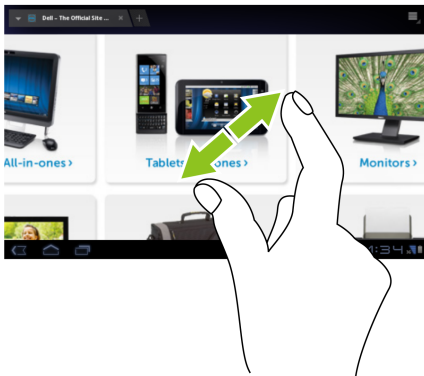Move two fingers apart on the screen. Enlarge the view of an image or web page (zoom in).

 




Screen Orientation

For optimal viewing experience, the screen orientation changes automatically to portrait or landscape format depending on how you hold the device.

To modify the default rotating behavior, open the rotation settings by touching the Home button  → **Apps** button  →

Settings  → **Screen** → **Auto-rotate screen**.

- To enable **Auto-rotate screen**, touch the setting option to select the check box . Once enabled, the screen orientation changes automatically when you rotate the device.
- To disable **Auto-rotate screen**, touch the setting option to clear the check box . Once disabled, the screen orientation locks in landscape format, and the orientation does not change when you rotate the device.

 **NOTE:** Applications downloaded from the Android Market may not support automatic screen rotation to portrait or landscape format.


Applications, Widgets, and Shortcuts

Application — Software which allows you to perform a specific task. Your device is preloaded with a variety of applications, and additional applications can be downloaded from the Android Market.

Widget — A small application which resides on the Home screen and provides quick and easy access to information. For example, the Facebook widget allows you to read posts on your wall and update your status.

 
Shortcut — A link that you can create on your Home screen to provide quicker access to an application, service, and so on.




Home Screen



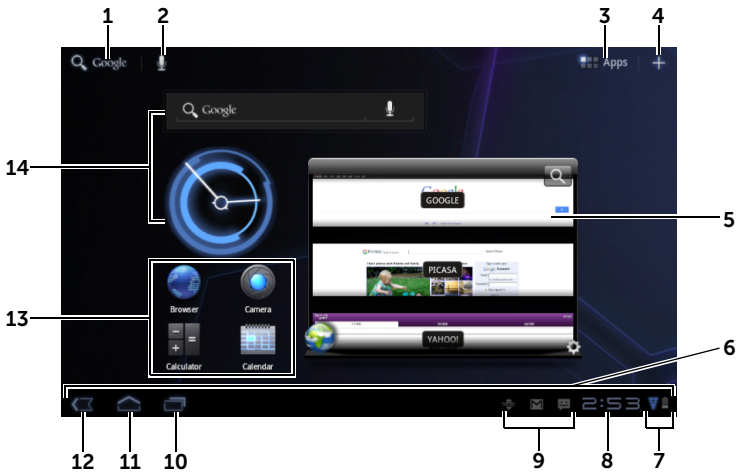

When you turn on and unlock your device, or touch the Home button , the Home screen appears. You can start from the Home screen to access all the features of your device.




The Home screen is composed of five panels. On the central Home screen, flick left/right or touch the screen edges to see more Home screen panels. You can personalize the Home screen by adding your own shortcuts or widgets, or by displaying your favorite picture as the desktop wallpaper. For more information, see "Customizing Your Home Screen" on page 25.




An example of the Home screen is provided as follows to help you familiarize with your device. Your Home screen may look different from the one below.



1	Google Search 	Search your device and the web by typing.
2	Voice Search 	Search your device and the web by speaking.
3	Apps 	Open the Apps screen to find all the applications installed on your device.

4	Customize 	<ul style="list-style-type: none"> • Add items to your Home screen, such as widgets and application shortcuts. • Change the wallpaper of your Home screen.
5	Web Stage widget	This is one of the Dell Stage widgets. From the Web Stage widget, you can access the bookmarked or frequently viewed websites. For more information on using Dell Stage widgets, see "The Dell Stage Widgets" on page 30.
6	System bar	From the system bar at the bottom of the Home screen, you can find navigation buttons, notification icons, time, and status icons.
7	Status icons	Indicate the status of your device. Touch the time/status icons area to display the Status Details panel.
8	Time	Display the current time.
9	Notification icons	Display icons to show notifications from the system or from an application. You can touch a notification icon to see more details.
10	Recent applications 	Open a list of thumbnail images of the applications you have accessed recently. Touch an application to open it.
11	Home 	<ul style="list-style-type: none"> • When viewing other Home screens, you can touch this button to return to the central Home screen. • When performing any function on the device, such as working with applications, widgets, and so on, you can touch this button to return to the last Home screen you viewed, or touch this button again to return to the central Home screen.
12	Back 	Return to the previous screen or option.
13	Shortcuts	You can add shortcuts to the Home screen to quickly open applications, web bookmarks, music playlists, and more.
14	Widgets	Widgets are small applications that reside on the Home screen to provide quick access to information.

 **NOTE:** The Home button  on the device and the Home button  on the screen perform the same function.

 **NOTE:** The Back button  on the device and the Back button  on the screen perform the same function.

To navigate across the Home screens

Flick or drag the desktop horizontally until the desired Home screen is displayed.







Navigation Buttons

You can find the navigation buttons from the left side of the system bar.



1 Back

- Return to the previous screen or option.
- If the on-screen keyboard is open, the button changes to . Touch it to close the keyboard.

2 Home 	<ul style="list-style-type: none"> • When viewing other Home screens, you can touch this button to return to the central Home screen. • When performing any function on the device, such as working with applications, widgets, and so on, you can touch this button to return to the last Home screen you viewed, or touch this button again to return to the central Home screen.
3 Recent applications 	<p>Open a list of thumbnail images of the applications you have accessed recently. Touch an application to open it.</p>
4 Menu 	<p>This button is only available in some applications. Touch it to open application's options menu.</p>


Notifications and Status

 
The right side of the system bar displays notification icons, the current time, and status icons.



1 Notifications area	<p>The notifications area displays notification icons to inform you of new e-mails, messages, and so on.</p>
2 Status area	<p>The status area displays status icons to show the current state of your device, such as battery power, charging progress, network connections, and so on.</p>
3 Time area	<p>Displays the current time.</p>

 
Managing Notifications

- To view the details about a notification, touch a notification icon.
- To remove a notification, touch .
- To view all your current notifications, touch the Time area to open the Notifications list. You can touch a notification summary to respond to it.

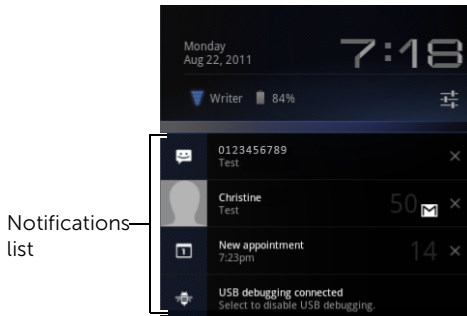

Status Details

 
- To view the details about the current date and time, network connections, and battery status, touch the Time area in the system bar to open the Status Details.
- To close the Status Details, touch any other part of the screen.

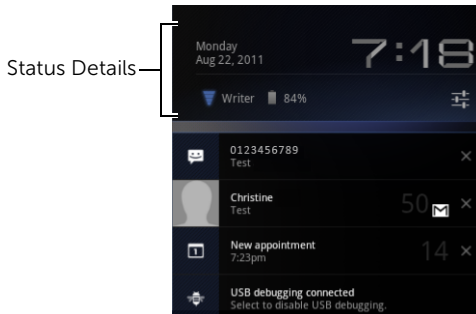

Quick Settings

The Quick Settings allow you to view or change the most common settings in your device conveniently.

- 1 Touch the Time area in the system bar to open the Status Details.
- 2 Touch anywhere in the Status Details. Then, the Quick Settings display below the Status Details.

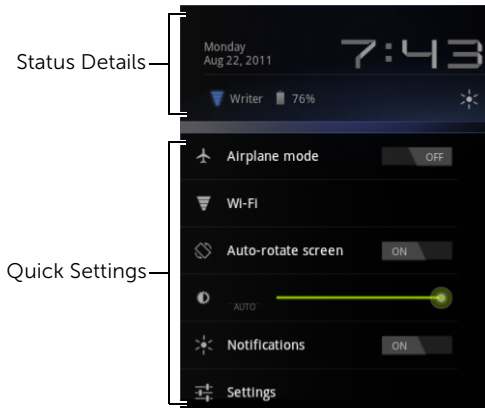


- 3 View or change the desired settings.

To close the Quick Settings, touch any other part of the screen.












The Quick Settings include the following items:


- **Airplane mode:** Drag the switch to **ON/OFF** to enable/disable the Airplane mode. For more information, see "Disable All Connections Using the Airplane Mode" on page 66.
- **Wi-Fi:** Touch to open the **Wi-Fi settings**. For more information, see "Wi-Fi" on page 63.
- **Auto-rotate screen:** Drag the switch to **ON/OFF** to enable/disable the Auto-rotate screen feature. For more information, see "Screen Orientation" on page 17.
- **Brightness:** Drag the slider to change the brightness level of the screen. Or, you can touch **AUTO** to allow the device to set screen brightness automatically according to the amount of light in your surroundings.

- **Notifications:** Drag the switch to **ON/OFF** to enable/disable system or application notifications. When disabled, the icon  appears. You can touch this icon to turn notifications back on.
- **Settings:** Touch to open Settings. For more information, see "Customizing Your Dell Streak 7 Tablet" on page 104.

The Status area may display some of the following icons:


The Status area of the system bar displays status icons to show the current state of your device. See the following table for more information.

 Battery status – 100% full	 No Internet connection
 Battery is low and needs to be charged	 3G data network is connected and in use (available on 3G model only)
 Battery is extremely low and needs to be charged immediately	 Connected to a Wi-Fi network (waves indicate signal strength)
 Battery is charging	 Bluetooth is enabled
 Airplane mode is enabled	 No SIM card inserted (on 3G model only)
 Searching GPS satellites	

 **NOTE:** The notifications area display notifications icons with detailed information. Touch a notification icon to read its information or instruction.

Customizing Your Home Screen

Adding an Item to a Home Screen

- 1 Touch the Home button .
- 2 Flick to a Home screen where you want to add the item.
- 3 Either touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen, until the following screen appears.




- 4 Items that can be added to a Home screen are divided into four categories. Touch a tab for the category of item you want to add, and flick the screen left or right to see more items, if available.
- 5 Do either one of the following:
 - Touch the item you want to add onto the current Home screen.
 - Touch and hold the item, and drag it onto a Home screen where you want to add it. If you pause before lifting your finger, the Home screen will enlarge, so you can drag to place the item on a specific position you want.

To add a widget to a Home screen


You can add widgets to display active Home screen windows or controls for your favorite applications or web-based services, such as an analog clock, the music player, the Google Search widget, or a calendar showing upcoming events.

You can also add Dell Stage widgets to provide direct access to your contacts, e-mail, pictures, music, Facebook & Twitter updates, frequently viewed websites, and recently used applications. For information on using Dell Stage widgets, see "The Dell Stage Widgets" on page 30.

- 1 Either touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen.
- 2 Touch the **Widgets** tab.
- 3 Flick the screen left or right to locate the desired widget.
- 4 Touch and hold the desired widget, and drag it to a Home screen.


To add an application shortcut to a Home screen

You can create application shortcuts on a Home screen, so you can touch the icons to open the applications quickly, without opening the Apps screen first.

- 1 Either touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen.
- 2 Touch the **Apps** tab.
- 3 Flick the screen left or right to locate the desired application.
- 4 Touch and hold the desired application, and drag it to a Home screen to create the shortcut.


To change the wallpaper

To change the wallpaper of your Home screen, follow the steps below:

- 1 Either touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen.
- 2 Touch the **Wallpapers** tab.
- 3 Select a desired wallpaper from the categories below, and touch the wallpaper to set it as the wallpaper of your Home screen.
 - **Gallery:** Open available photo albums on the device or on the web. Select a picture from the albums. To cut a portion of the picture as the wallpaper, move the crop frame and drag the angles to select the desired part. Touch **Ok** to set the wallpaper.
 - **Live wallpapers:** Select an animated and interactive wallpaper, and then touch **Set wallpaper**.
 - **Wallpapers:** Touch a picture thumbnail to set it as the wallpaper.

To add more shortcuts to a Home screen

You can add more shortcuts for items that you want to access directly from the Home screen.


- 1 Either touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen.
- 2 Touch the **More** tab.
- 3 Touch and hold the desired item, and drag it to a Home screen to create the shortcut.

A variety of items may be available as follows.

Items	Steps/Descriptions
Bookmark	<ol style="list-style-type: none"> 1 Flick through the Bookmarks list to locate the desired bookmark. 2 Touch the desired bookmark to create the shortcut on the Home screen.

Items	Steps/Descriptions
Contact	<ol style="list-style-type: none"> 1 Flick through the Choose a contact shortcut screen to locate the desired contact. 2 Touch the desired contact entry to create the shortcut on the Home screen.
Directions & Navigation	<p>Create a shortcut that you can touch to open Google Maps and view directions to a location.</p> <ol style="list-style-type: none"> 1 Type your destination in the text box. 2 Choose how you want to get to your destination by touching the driving, public transportation, bicycle, or walking icon (from left to right). 3 Enter a name for the shortcut. 4 Touch the shortcut icon that you want to use for the shortcut. 5 Touch the Save button. <p>NOTE: For more information on getting directions using Google Maps, see "To get directions" on page 91.</p>
Latitude	<p>Create a shortcut that you can touch to open Google Latitude to share locations with your friends and family who have signed in to the service with their Google accounts.</p>
Music playlist	<p>Create a Play all or a Recently added shortcut that you can touch to play all songs or recently added songs.</p>
Select settings	<ol style="list-style-type: none"> 1 Scroll through the settings to locate the desired setting. 2 Touch the desired setting to create the shortcut on the Home screen, where you can touch the shortcut to access the setting.

Adding an Application Shortcut from the Apps screen

- 1 Touch the **Apps** button  at the top-right of any Home screen to open the Apps screen.
- 2 On the Apps screen, touch and hold a desired application and drag it onto a Home screen. The application's icon appears on the Home screen.



NOTE: If you pause before lifting your finger, the Home screen will enlarge, so you can drag to place the item on a specific position you want.

Moving a Home Screen Item


- 1 Touch and hold the item you want to reposition until it becomes movable. The device vibrates to indicate that the item's moving mode is activated.




NOTE: To disable the item's moving mode, release the item.

- 2 With your finger remaining in contact with the item on the screen, drag the item to another location on the screen.
- 3 Release the item in the desired location.

Removing a Home Screen Item

- 1 Touch and hold an item such as a widget or shortcut that you want to remove, until it becomes movable.
- 2 Drag the item onto the top of the Trash icon  .
- 3 When the item turns red, release your finger from the screen.

The Dell Stage Widgets


 **NOTE:** Availability and functionality of the Dell Stage widgets described in this section may vary depending on the software version pre-installed on your device. It is recommended to upgrade to the latest software version for full functionality.

The Dell Stage widgets give you direct access to the following items from the Home screen:


- Kindle Books (see "Using the Books Stage Widget" on page 31.)
- Photos and videos (see "Using the Photo Stage Widget" on page 32.)
- Streaming radio stations (see "Using the Radio Stage Widget" on page 33.)
- Facebook & Twitter applications (see "Using the Social Stage Widget" on page 34.)
- Real-time weather information (see "Using the Weather Stage Widget" on page 36.)
- Bookmarked or frequently viewed websites (see "Using the Web Stage Widget" on page 35.)

Adding a Stage Widget

You can create Stage widgets on free Home screens to access the desired items.

- 1 Navigate to a free Home screen where you want to add a Stage widget.
- 2 Touch and hold an empty area on a Home screen, or touch the Customize button  at the top-right corner of a Home screen.
- 3 Touch the **Widgets** tab.
- 4 Flick the screen left or right to locate the desired Stage widget.
- 5 Touch and hold the desired Stage widget, and drag it to a Home screen.

 
Removing a Stage Widget



- 1 Touch and hold a Stage widget that you want to remove from a Home screen, until it becomes movable.
- 2 Drag the Stage widget onto the top of the Trash icon  .
- 3 When the Stage widget turns red, release your finger from the screen.

Using the Books Stage Widget

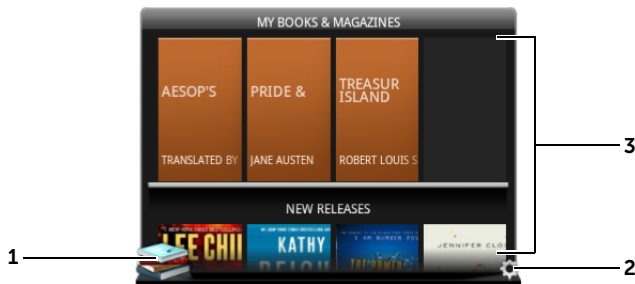


From the **Books** Stage widget, you can view the following book categories:

- MY BOOKS & MAGAZINES (Kindle books stored on your device)
- NEW RELEASES
- TOP PAID BOOKS
- TOP FREE BOOKS
- BEST SELLING MAGAZINES



 
-
- 1 Touch  to open the Kindle application.
 - 2 Touch  to enter the **BOOKS SETTINGS** mode.
 - 3 Drag or flick through the rows of the book tiles, and then touch a book tile to open the browser to the Kindle website at the book detail page.
-

To select the book categories to display on the Books Stage widget


- 1 Touch  to enter the **BOOKS SETTINGS** mode.
- 2 Touch  to select the categories.
- 3 Touch  when you have completed the settings.

Using the Photo Stage Widget


The **Photo** Stage widget displays the most recent photos and videos captured using the Camera application or stored in the “DCIM” folder on your device. Photos from the Facebook feed will be displayed as well once you have signed in to your Facebook account.

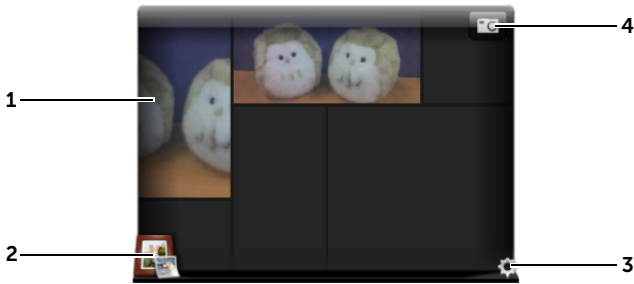

-
- 1
 - Drag or flick through the photo or video thumbnails.
 - Touch the thumbnail of a photo stored on the device to open the photo in the Gallery or the PhotoStage application.
 - Touch the thumbnail of a photo from the Facebook feed to open Facebook to the message where the photo was originally posted.
 - Touch the thumbnail of a video stored on the device to start playing the video.
-

 
- 2 Touch  to open the Gallery application.
-




- 3 Touch  to enter the **PHOTOS SETTINGS** mode.
-

-
- 4 Touch  to open the Camera application and capture a new photo or video.
-

Using the Radio Stage Widget

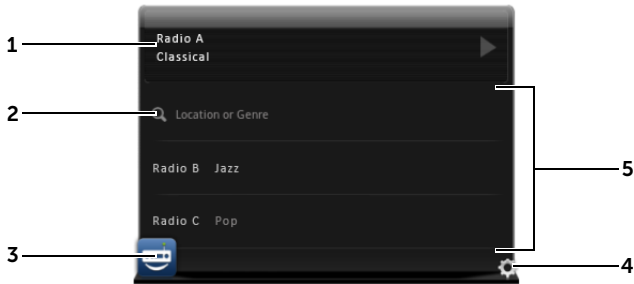
The **Radio** Stage widget displays a list of user presets or recently played streaming radio stations from the TuneIn Radio application.

 







-
- 1 The now-playing area displays the currently playing or last played station.
 - 2 Touch  to search for a radio station by typing keyword, such as its location or genre.
 - 3 Touch  to open the TuneIn Radio application.
 - 4 Touch  to enter the **RADIO SETTINGS** mode.
 - 5 Drag or flick through the list of radio stations, and then touch a station to open the TuneIn Radio application and tune in to the selected station.
-

Using the Social Stage Widget

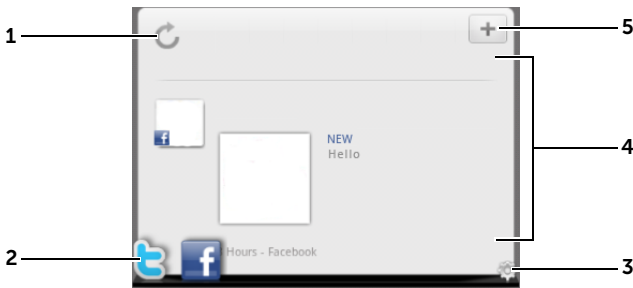The **Social** Stage widget displays your friends' latest postings retrieved from your Twitter or Facebook account. To use the Twitter and Facebook widgets, you need to sign in to your Twitter or Facebook account with your e-mail address and password.

 
 **NOTE:** You can access both your Facebook and Twitter accounts from one Social Stage widget. To do so, go to **SOCIAL SETTINGS**, and select the Twitter and Facebook check boxes to enable them.






- 1 Touch  to manually update the message feeds.
- 2 Touch  or  to open either the Twitter or Facebook application.
- 3 Touch  to enter the **SOCIAL SETTINGS** mode.
- 4 Drag or flick through the list of feeds, and then touch a feed to read more of the message or the details of the author.
- 5 Touch  to compose and post a new message to Twitter or Facebook.


Using the Web Stage Widget

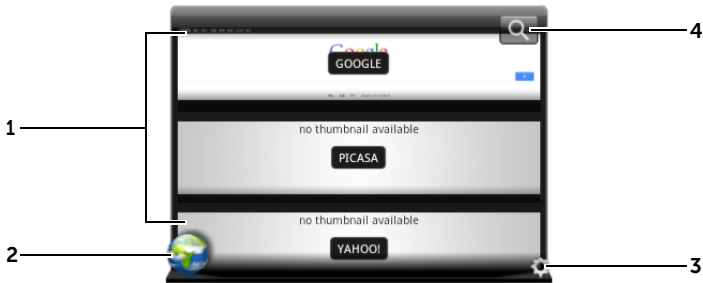The **Web Stage** widget displays thumbnails of bookmarked websites or the most visited websites.





- 1 Drag or flick through the thumbnails of web pages. Touch a web page thumbnail to load the web page in the Browser application.
- 2 Touch  to open the Browser application.
- 3 Touch  to enter the **WEB SETTINGS** mode.
- 4 Touch  to find the desired web page using Google Search.

To choose between viewing bookmarks or frequent sites

- 1 Touch  to enter the **WEB SETTINGS** mode.
- 2 To display all the available bookmarks in this widget view, touch **Bookmarks**. To display only the most frequently visited sites, touch **Most Visited Sites**.

 
To refresh web page thumbnails automatically


- 1 Touch  to enter the **WEB SETTINGS** mode.
- 2 Touch **Update Thumbnails**.

 **NOTE:** For more information on using the Browser application, see "Browsing the Internet" on page 66.


Using the Weather Stage Widget


The **Weather** Stage widget provides real-time weather information and 5 day weather forecast from AccuWeather.

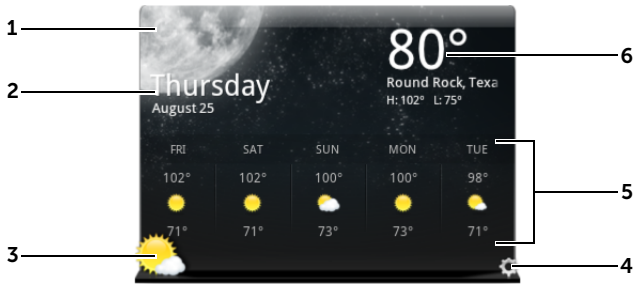

-
- 1 Touch  to manually update the weather information.

 - 2
 - Displays the date.
 - Touch to open the Calendar application.



 - 3 Touch  to open the browser and visit **AccuWeather.com** to see more weather information.




 - 4 Touch  to enter the **WEATHER SETTINGS** mode.
 - **My Agenda:** When this option is enabled, your agenda from the Calendar application will be displayed in this widget view.
 - **5 Day Forecast:** When this option is enabled, 5 day weather forecast will be displayed in this widget view.

 - 5 Displays 5 day weather forecast of your current location, which is detected by wireless networks or GPS satellites automatically, depending on your settings. Touch to visit **AccuWeather.com** to see more weather forecast.

 - 6 Displays the weather information of your current location. Touch to visit **AccuWeather.com** to see more details.
-

To display the weather information for a different location

- 1 Touch  to enter the **WEATHER SETTINGS** mode.
- 2 Touch **Current Location**.
- 3 Enter a city or postal code in the search box and touch . Select the desired location from the search results.

 **NOTE:** To change the temperature unit that the widget uses to display weather, touch  or .



Navigating the Applications

You can find applications available on your device in these screen elements:

Apps screen

The Apps screen can be accessed from any Home screen and contains all of the applications installed on the device, including those you have downloaded from the Android Market.





To open the Apps screen

- 1 Touch the Home button  to display the central Home screen on the desktop.
- 2 From any of the desktop Home screens, touch the **Apps** button .

To navigate pages of applications

Flick the Apps screen horizontally and touch an application to run it.


To close the Apps screen

To return to the last Home screen you viewed, touch the Home button  on the device or the Home button  on the screen. To return to the central Home screen, touch  or  again.

Application Shortcuts

 
To quickly launch applications on the Home screen, you can add shortcuts for frequently-used applications to the Home screen. For more information, see "Customizing Your Home Screen" on page 25.

To open an application using the application shortcuts


- 1 Touch the Home button .
- 2 If the desired application shortcut displays on the Home screen, touch the shortcut to run the application.

Recent Applications

To open a recently used application

- 1 Touch the Recent Applications button  to view the recently used applications.
- 2 Scroll the list of recently used applications, and touch the desired application thumbnail to run the application.



NOTE: To close the list of recently used applications, touch the Close button .

The Screen Lock Wallpaper

You can set the display to turn off automatically after a timeout period of inactivity, or turn it off manually by pressing the power button (⏻).

When you press the power button (⏻) to wake up the display, the screen lock wallpaper appears to help prevent unintentional touch of the screen.


When the screen lock wallpaper appears, touch and hold the lock icon (🔒). When it turns into a circle, drag it to the edge of the larger circle that surrounds it to unlock the screen.



NOTE: To set the duration the screen remains on before turning off after the last operation, touch the Home button (🏠) → **Apps** button (🗄️) → **Settings** → **Screen** → **Timeout**.


Using Your Dell Streak 7 Tablet

 
Managing Contacts

To view and manage your contacts, touch the Home button  →

Apps button  → **Contacts** .

To add a new contact

- 1 Touch  **New**.
- 2 Select the account where you want to add this contact, such as your Gmail account.

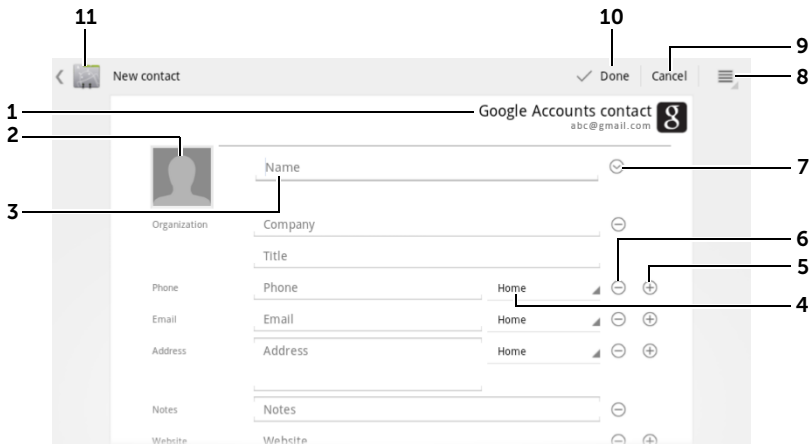

- 1 This area shows the account in which the new contact is stored.
- 2
 - **Take photo:** Touch to take a photo to use as the contact's visual caller ID.
 - **Select photo from Gallery:** Touch to select a photo from the **Gallery** application to use as the contact's visual caller ID.
- 3 Enter the contact information using the on-screen keyboard. Scroll the screen to find more items to fill.

-
- 4 Touch to replace a default information label with another label that you can choose from the list. For example, you can change the label from **Home** phone number to **Mobile** phone number.

 - 5 Touch to add a new item to the current information category. For example, you can add a second phone number.

 - 6 Touch to remove an item from the current information category.

 - 7 Touch to fill more information about the contact.



 - 8 Touch to display more options.

 - 9 Touch **Cancel** to return to your Contacts list.



 - 10 Touch **Done** to save the new contact to your Contacts list.

 - 11 Touch to return to your Contacts list.
-


To find a contact

- 1 To locate a contact, you can either:
 - Flick the Contacts list until you find the contact. Or, drag the scroll bar  on the left of the screen to scroll through the Contacts list.
 - Touch  **Find contacts**, and then type either the contact's full name or only the first letters of it into the text box. The screen displays the matching contacts.
- 2 Once the contact is located, touch the contact's entry to view the contact's details.

 

To e-mail or send a message to a contact

- 1 On the Contacts list, find a desired contact.
- 2 Touch the contact entry to view the contact details, and then touch  to send e-mail using the e-mail accounts you have set up on your device, or touch  to send a message.

To edit a contact

- 1 On the Contacts list, find a desired contact.
- 2 Touch the contact entry to view the contact details.
- 3 Touch  to edit the contact details.
- 4 Touch **Done** to save the changes.




To share a contact

- 1 On the Contacts list, find a desired contact.
- 2 Touch the contact entry to view the contact details.
- 3 Touch the Menu button  on the device or the Menu button  on the screen→ **Share contact**.
- 4 From the **Share contact via** menu that appears, select the way you want to share the contact information with your friends, such as through e-mail or Bluetooth.




To join contacts

Since your device can synchronize with a variety of accounts, when synchronizing contacts from these accounts with your device, you may have multiple contacts for the same person.




Joining contacts allows you to view all the contact's numbers, addresses, and so on, in one single contact entry.


- 1 On the Contacts list, find a desired contact.
- 2 Touch the contact entry to view the contact details, and then touch .
- 3 Touch the Menu button  on the device or the Menu button  on the screen→ **Join**.
- 4 From the **Join contacts** list, touch another contact to link, and then touch **Done**.

The joined contact's information is displayed with the original contact's information.



 **NOTE:** To separate the previously joined contacts, touch the contact entry →  →  → **Separate** → **OK**.


Contacts settings


In **Contacts** , touch the Menu button  on the device or the Menu button  on the screen.

Settings	Adjust the display options for your contacts.
Accounts NOTE: If you want to synchronize individual data manually, clear Auto-sync , and then from your account, touch a data item to start synchronization of that data. While data is syncing, the sync icon  appears on the option of the data being synced.	Contacts stored on your device can be synchronized with a computer using Dell Mobile Sync; contacts stored on your personal e-mail account such as Gmail can be synchronized through an Internet connection. <ul style="list-style-type: none">• To select the data to synchronize:<ol style="list-style-type: none">1 Select Background data to make all the sync options available.2 Select Auto-sync to let the device automatically synchronize the selected data in your Twitter account or e-mail account, which may include Twitter contacts and data, or Calendar, Contacts, Gmail, and Picasa Web Albums data.• To select the data to sync from your e-mail account:<ol style="list-style-type: none">1 Touch your e-mail account to open the Data & synchronization list.2 Select the data that you want the device to synchronize automatically, such as Sync Calendar, Sync Contacts, Sync Gmail, Sync Picasa Web Albums.
Import/Export	You can import contacts from your SIM card (on 3G model only) or SD card to your device, export contacts from your device to your SD card, and share visible contacts in multiple ways, such as Bluetooth or Gmail.

Messaging (on 3G model only)

To compose, send, and read text (SMS) or multimedia (MMS) messages, touch the Home button  → **Apps** button  →





Messaging . The Messaging screen opens with a list of messages or message threads representing all the received, sent, and draft messages.

 **NOTE:** For information about the message thread, see "Receiving text and multimedia messages" on page 48.

To compose and send a text message

- 1 On the Messaging screen, touch the **New message** thread. The composer screen opens.
- 2 In the **To** field, type the mobile phone number or the contact name of the recipient. As you type a phone number or contact name, matching contacts with their mobile numbers appear below the **To** field. Touch a matched contact to enter the contact's mobile number, or continue typing the desired phone number.
- 3 Repeat step 2 to enter more mobile numbers if you want to send the message to multiple mobile phone users.
- 4 Touch the **Type to compose** text field to start composing your message.
- 5 Touch the **Send** button to send the text message.
- 6 To start a text conversation similar to online instant messaging, you can continue to compose and send messages to the same recipient(s). All of the sent and received messages between you and recipient(s) appear in the form of chat logs.

To compose and send a multimedia message

- 1 In the **To** field, type the recipient's mobile phone number, e-mail address, or contact name. Matching contacts with their mobile numbers or e-mail addresses appear below the **To** field. Touch a matched contact, or continue typing the desired phone number or e-mail address.
- 2 If you want to add a subject line to the message, touch the Menu button  on the device or the Menu button  on the screen→ **Add subject**.
- 3 Touch the **Type to compose** text field to start composing your message.
- 4 While editing your message, you can touch the Menu button  on the device or the Menu button  on the screen→ **Attach** to insert media items into the message. See the following table for more information.
- 5 When you have completed editing the multimedia message, touch the **Send MMS** button to send the message.



You can attach any of the following items to a multimedia message:

Picture	Open the Gallery application and touch a picture file to attach it to your message.
Capture picture	Open the Camera application to capture a picture, and then attach it to your message. For more information about the Camera application, see "Camera" on page 114.
Video	Open the Gallery application and touch a video clip to attach it to your message.
Capture video	Open the Camera application to capture a video clip in camcorder mode, and then attach it to your message. For more information about using the camcorder feature, see "To start the camcorder mode" on page 115.
Audio	Open the Select music track menu. Touch a desired audio file, and then touch OK to attach the file to your message.




Ringtone

Open the **Select audio** menu. Touch a desired preloaded ringtone, and then touch **OK** to attach it to your message.

You can also manually copy new ringtones to the SD card and attach a ringtone to your MMS. To do so, follow the steps below:

- 1 Create a folder named Ringtones in the SD card.
- 2 Open the Ringtones folder.
- 3 Copy the ringtone you want to attach to your MMS into the Ringtones folder.
- 4 On the MMS composer screen, touch the Menu button  on the device or the Menu button  on the screen → **Attach** → **Ringtone**.
- 5 Select the ringtone to attach it to your MMS.



Record audio



- Open the **Sound Recorder** application to record an audio clip:
 - Touch  to start recording.
 - Touch  to stop recording.
 - Touch  to listen to the recording.
 - Touch **Use this recording** to attach the recording to your message.
-

Slideshow

Open the **Edit slideshow** screen to create a slide show and attach it to your message.

- 1 Touch **Add slide** to create new slides.
- 2 Touch a created slide such as **Slide 1** to open the slideshow editor screen.
- 3 Touch **Add picture**, and then select the picture you want to add to the slide.
- 4 You can touch the text field at the bottom of the screen to compose a caption for the displayed slide.


5 Touch the Menu button  on the device or the Menu button  on the screen to preview the slide, remove the picture, add music to the current slide, add a new slide, or change the slide duration or the text and picture layout.

 
6 When editing multiple slides, touch  to edit the next slide; touch  to return to the previous slide.

NOTE: You can create a slideshow of up to ten slides.

7 To replace a picture, on the slideshow editor screen, touch the **Replace picture** button and select a new picture to replace. To remove the current slide, touch the **Remove slide** button. To preview the slideshow, touch the **Preview** button.


8 When complete, touch the **Done** button to attach the slideshow to your message.




9 On the message composer screen, touch the slideshow attachment icon  to play back the slide show; touch **Edit** to modify the slideshow.

10 To remove the slideshow attachment from your message, touch **Edit** →  → **Discard slideshow**.

Receiving text and multimedia messages





Depending on your notification settings, the device rings, vibrates, or displays a message briefly in the Status area of the system bar as a new text or multimedia message is received.

A new message icon  appears and stays in the notifications area of the system bar to remind you of a new message.

 **NOTE:** To alter the notification settings for new messages, in the Messaging application, touch the Menu button  on the device or the Menu button  on the screen → **Settings**. Scroll the screen to locate the **Notifications settings** section. You can then decide whether to display a text notification in the Status area of the system bar when a new message arrives, select a ringtone that rings on the arrival of a new message, or let the device vibrate to notify a new message.

Text and multimedia messages that are sent to and received from the same contact or a number are grouped into message threads similar to text conversations of an online chat. You can see all of the messages exchanged between you and the contact. Message threads are listed according to when they are sent or received, with the latest message at the top.

To read a text message

- When a new text message arrives, the new text message icon  appears in the notifications area of the system bar. Touch the icon to open and read the message in the **Messaging** application.
- Touch the Home button  → **Apps** button  → **Messaging**  to open the message list, and then touch a text message or message thread to open and read it.


If the message includes a:

- Website link — touch the link to open the **Browser** application and visit the website.
- E-mail address — touch the e-mail address to open the **Email/Gmail** application and compose an e-mail to send to the address.

To forward the message


- 1 Touch and hold the message. The **Message options** menu pops up.
- 2 Select **Forward** to forward the message.


To view a multimedia message

- 1 When a new multimedia message arrives, the new multimedia message icon  appears in the notifications area of the system bar. Touch the icon to open and read the message in the **Messaging** application.

Or

Touch the Home button  → **Apps** button  →

Messaging  to open the message list, and then touch a multimedia message or message thread to open the message.

- 2 Touch the thumbnail of the attached picture to display the picture; touch the **Play** button  to play the attached video.



NOTE: To save the attached media item to your device, touch and hold the message until the **Message options** menu opens. Touch **Save attachment**.



To reply to a text or multimedia message

- 1 Touch a message or message thread to open it.
- 2 Type your reply message into the **Type to compose** text field.
- 3 Touch **Send** to send your message to the sender.



To delete a message or a message thread

- 1 In the Messaging list, touch and hold the message thread that you want to delete.
- 2 To delete the entire thread, touch **Delete thread** and then touch **Delete** to confirm deletion.
To delete a message within a thread, touch and hold the message to delete, and then touch **Delete message** on the **Message options** menu. Touch **Delete** to confirm deletion.





NOTE: To delete all messages in the Messaging list, touch the Menu button  on the device or the Menu button  on the screen→ **Delete all threads**.

 

To edit message settings

In the **Messaging** application, touch the Menu button  on the device or the Menu button  on the screen→ **Settings**. Follow the instructions on the screen to change the text or multimedia message settings.

Pop-up Menu

Touch the Menu button  on the device or the Menu button  on the screen to open or close the pop-up menu that lists available options for the current application, or actions that you can perform on the current screen.




To select an option or item on the pop-up menu

- 1 Touch the Menu button  on the device or the Menu button  on the screen to open the pop-up menu.
- 2 Touch the desired item on the pop-up menu.

Swype Keyboard

The Swype keyboard allows you to enter text by drawing a path through the letters of a word, instead of touching each key to type the word. The keyboard automatically rotates to either the portrait or landscape mode based on the device orientation.



To set the Swype keyboard as the input keyboard

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Language & input**.
- 2 Touch **Current input method** under the **Keyboard settings** section.
- 3 On the **Select input method** menu that appears, touch **Swype**.

 
To open the Swype keyboard

Touch a text box to open the Swype keyboard.

To close the Swype keyboard

Touch the Back button  on the device or the Close button  on the screen to close the Swype keyboard.

Swype Keyboard controls for composing an e-mail

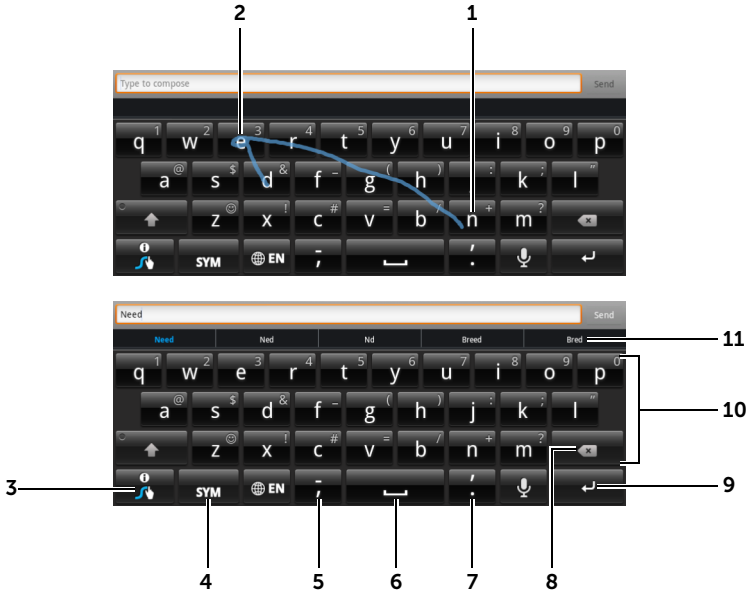

- 1 To enter the word “Need” for example, place your finger on the first letter “N” and glide to the following letters. Lift your finger after the last letter “d”. The keyboard predicts and enters the word according to the letters that the path you drew goes through. Letters irrelevant to the spelling of the word are ignored.

NOTE: You can still touch each key to type a word.






- 2 To enter the same letter twice, for example, “ee” for the word “Need”, do a quick back-and-forth scribble or draw a loop on the letter “e”.
- 3 When no word is entered into the text box, touch and hold the key to the following:
 - Read **Swype Help** for detailed information on using Swype.
 - **Tutorial:** Play the animated tutorial demonstrating how to use Swype.
 - **Settings:** Adjust the Swype keyboard settings.
- 4 Touch to show the keyboard for typing numbers, punctuation marks, and symbols.

-
- 5**
- Touch to enter “,”.
 - Touch and hold and then release to enter “-”.
 - To find more symbols available from this key, touch and hold the key until the symbols appear, and then touch the symbol you want to type.
-
- 6**
- Touch to enter a space.
 - Touch and hold and then release to enter a tab space.
-
- 7**
- Touch to enter “.”.
 - Touch and hold and then release to enter “^”.
 - To find more symbols available from this key, touch and hold the key until the symbols appear, and then touch the symbol you want to type.
-
- 8**
- Touch to delete a typed character, symbol, or a space.
 - Touch and hold to quickly delete typed text.
-
- 9** ENTER key.
-
- 10**
- To type the number or symbol displayed on the key, touch and hold the key, and when the number or symbol appears release the key.
 - To find more symbols available from the same key, touch and hold the key until the symbols appear, and then touch the symbol you want to type.
-
- 11** The Swype keyboard displays word suggestions when it cannot predict the word according to the trace you draw.
-


Creating your personal dictionary in the Swype keyboard

The Swype keyboard uses the default dictionary to display suggested words as you type. You can create a personal dictionary to include words not found in the main dictionary. The keyboard will also look at the words that are added to your personal dictionary to make word suggestions.




To add a word to the Swype dictionary

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Language & input**.
- 2 Touch **Configure input methods** under the **Keyboard settings** section.
- 3 Touch **Settings** under the **Swype** section.
- 4 Scroll to locate **Personal dictionary** under the **Swype Advanced Settings** section.
- 5 Touch .
- 6 Type a desired word into the **Personal dictionary** text box.
- 7 Touch .

To edit a word in the Swype dictionary

- 1 Repeat Step 1 to 4 in "To add a word to the Swype dictionary" to open **Personal dictionary**.
- 2 Touch a desired word.
- 3 Edit the spelling of the word in the text box.
- 4 Touch .




To delete a word from the Swype dictionary

- 1 Repeat Step 1 to 4 in "To add a word to the Swype dictionary" to open **Personal dictionary**.
- 2 Touch .
- 3 Select one or more words that you want to delete by touching the check box .
- 4 Touch  to confirm deletion.

Dell Keyboard

You can also type text using the Dell keyboard. The keyboard automatically rotates to either the portrait or landscape mode based on the device orientation.



To set the Dell keyboard as the input keyboard

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Language & input**.
- 2 Touch **Current input method** under the **Keyboard settings** section.
- 3 On the **Select input method** menu that appears, touch to select the Dell keyboard.

To open the Dell keyboard

Touch a text box to open the Dell keyboard.

To close the Dell keyboard


Touch the Back button  on the device or the Close button  on the screen to close the Dell keyboard.

Keyboard controls for composing an e-mail





- 1
 - Touch to type letters into the text box where the cursor appears.
 - Touch and hold to type accented letters for applicable languages.
- 2
 - Touch to delete a typed character, symbol, or a space.
 - Touch and hold to quickly delete typed text.
- 3 ENTER key.
- 4
 - Based on the letters being typed, the keyboard shows suggested words along the top of the keyboard with the most probable word highlighted in color.

NOTE: This function is enabled by default in the Portrait mode only. To enable this function in the Landscape mode, open the **Settings** application→ **Language & input**→ **Configure input methods**→ **Settings**, and then touch **Show correction suggestions** under the **Text correction** section. On the **Show correction suggestions** menu that appears, touch **Always show**.

- You can touch a suggested word to enter it into the text box.
 - Flick the list left or right to see more suggested words.
- 5
 - Touch once to show the uppercase keyboard for typing a capital letter.
 - Touch twice quickly to enable the Caps Lock mode. When enabled, the icon becomes .
 - Touch to change back to the lowercase keyboard.



-
- Touch to show the keyboard for typing numbers, punctuation marks, and symbols.
 - Touch to switch back to the alphabet keyboard.
-
- Touch to use voice input. Say the words you want to enter in the microphone. The device enters the words that it can recognize from your voice.
-

To configure the Dell keyboard settings

- Touch the Home button  → **Apps** button  → **Settings**



→ **Language & input.**

- Touch **Configure input method** under the **Keyboard settings** section.
- Touch **Settings** under the **Dell keyboard** section.
- To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .

Available Dell keyboard settings

Auto-capitalization	The first letter of the word in a new sentence is capitalized automatically.
Vibrate on keypress	The device vibrates when you touch a key.
Sound on keypress	The device beeps when you touch a key. NOTE: To activate this item, you also need to select Settings → Sound → Audible selection .


Word suggestion settings

Auto correction	Mark and correct wrong spellings and typos.
Show correction suggestions	Show suggested words as you type.

Google Search

You can use the Google Search widget to find websites and information on Google, applications installed on your device, and contacts stored in your Contacts list.


To search by typing





- 1 From the Google Search widget on the Home screen, touch  to open the Google Search widget below.



- 2 Type a keyword or text into the box using the keyboard. As you type, the search results that fully or partially match the text being typed appear.
- 3 Scroll the listed search results and touch the desired result.
- 4 The matching application or the browser with matching web links opens.
- 5 Touch the desired link if you want to view a web page.

To search by voice


- 1 Touch  that appears beside the search box.
- 2 Say the name or keyword of the item you want to search.
- 3 The browser with matching web links opens.

 **NOTE:** You can also access the Voice Search function by touching the Home button  → **Apps** button  → **Voice Search** .



Managing Your Device Settings

To check storage spaces

Touch the Home button  → **Apps** button  →

Settings  → **Storage**. The screen displays the total and available space on the device and on the SD card.

To erase unwanted application data to free storage space

1 Touch the Home button  → **Apps** button  →

Settings  → **Applications** → **Manage applications**.

- 2 Touch the application whose cache or data you want to remove.
- 3 Touch **Clear data** under **Storage** to erase unwanted application data; touch **Clear cache** under **Cache** to erase unwanted cache.


To remove the SD card safely

△ **CAUTION:** Removing the SD card while the device is working may cause data loss or result in application errors.

 
△ **CAUTION:** It is strongly recommended that you unmount the SD card before removing it.

1 Touch the Home button  → **Apps** button  →


Settings  → **Storage**.

- 2 Touch **Unmount SD card** under the **SD Card** section.
- 3 Press and hold the Power and Sleep/Wake button  until the **Power off** menu appears. Then, touch **OK** to turn off the device.

- 4 Pull out the slot door and then remove the SD card from your device as illustrated.

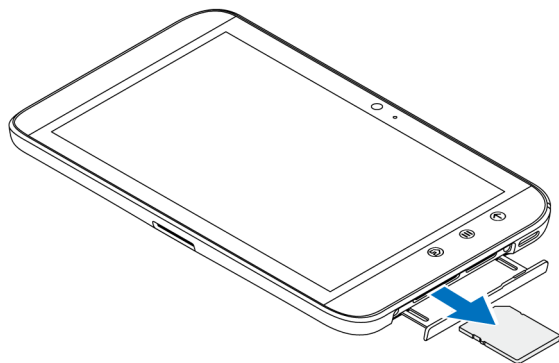

To erase all data from your device

 **CAUTION:** The following steps will erase all the data including your downloaded applications and Google account from your device. Ensure that you back up all the required data before you proceed.

- 1 Touch the Home button  → **Apps** button  →

 
Settings  → **Privacy** → **Factory data reset**.


- 2 Touch **Reset tablet**.

 **NOTE:** You must draw your screen unlock pattern if it is enabled.

- 3 Touch **Erase everything** after you read the warning.

To force power off your device

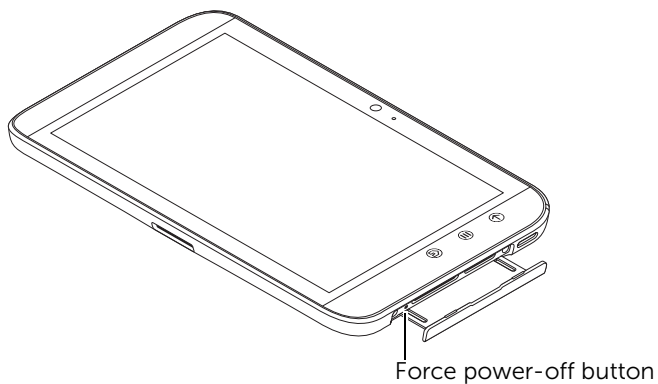

- 1 Pull out the slot door.
- 2 Push the force power-off button using a paper clip or other similar pointed objects.
- 3 Press and hold the Power and Sleep/Wake button  to turn on your device.

Internet

Connecting to the Internet

To browse the web and access web-based utilities such as instant messaging, one of the following data networking connections must be available:

- GPRS
- EDGE
- 3G
- HSPA
- Wi-Fi

GPRS/EDGE/3G/HSPA (on 3G model only)

To connect to the Internet using GPRS, EDGE, 3G, or HSPA


Your device is configured with the GPRS, EDGE, 3G, or HSPA network available with the service provider of the SIM card installed in your device. However, this is only limited to text messaging. If a Wi-Fi connection is currently available, the device automatically uses the Wi-Fi connection to access the Internet. The Internet connection through GPRS, EDGE, 3G, or HSPA becomes temporarily inactive, until the Wi-Fi connection ends.

If you want to connect to the Internet using a GPRS, EDGE, 3G, or HSPA data network:

- 1 Touch the Home button  → **Apps** button  →




Settings  → **Wireless & networks**, then touch **Wi-Fi** to clear the check box to disable it.

- 2 Touch **Mobile networks**. On the **Mobile network settings** menu that appears, touch **Data enabled** to enable it.




 **NOTE:** Depending on whether a GPRS, EDGE, 3G, or HSPA network is currently in use, a corresponding data network icon appears on the status bar after a data connection is established.

You can set the device to search for available networks if you are outside your home network or want to register to a different network.

To manually select a new network

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Wireless & networks** → **Mobile networks** → **Network operators**. The list of networks currently available is displayed.
- 2 Touch to select a network from the **Available networks** list.


To automatically select a new network

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Wireless & networks** → **Mobile networks**.
- 2 Touch **Select automatically** from the **Available networks** list.

Wi-Fi


You can connect your device to the Internet using Wi-Fi.

To connect to a Wi-Fi network, you need access to a wireless point or “hotspot” within a distance of up to 300 feet (91.44 meters).


 **NOTE:** The range and quality of the Wi-Fi signal is affected by the number of connected devices, infrastructure, and objects through which the signal is transmitted.


To turn on Wi-Fi and connect to a network

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Wireless & networks** → **Wi-Fi** to select the Wi-Fi check box. The device scans for available wireless networks.

- 2 Touch **Wi-Fi settings**. The network names and security settings (Open network or Secured with WEP/WPA/WPA2/WPS) of discovered Wi-Fi networks display in the **Wi-Fi networks** list.
- 3 Flick the list and touch to select a Wi-Fi network you want to connect to.
- 4 Enter a password (if necessary), then touch **Connect** to connect to the Wi-Fi network.



 **NOTE:** To connect to a network protected by Wired Equivalent Privacy (WEP), Wi-Fi Protected Access (WPA), WPA2, or Wireless Protected Setup (WPS), you must enter the WEP/WPA/WPA2/WPS security key to obtain authorized access to the network. The next time your device connects to a previously accessed secured wireless network, you will not be required to enter the WEP/WPA/WPA2/WPS key again, unless you reset your device to its factory default settings.

 **NOTE:** Your device has the ability to maintain a constant Internet connection through Wi-Fi or data networks (GPRS, EDGE, 3G, or HSPA). However, Wi-Fi connection has priority over mobile network connection if both are available.

To check the current Wi-Fi network connection

From the status area of the system bar:

When your device is connected to a wireless network, the Wi-Fi icon


 in the status area of the system bar indicates the signal strength (number of bands that light up). If **Wireless & networks** → **Wi-Fi settings** → **Network notification** is enabled, the  icon appears in the notifications area of the system bar, as the device discovers an accessible Wi-Fi network within range.

From the Wi-Fi network:

- 1 Touch the Home button  → **Apps** button  →


Settings  → **Wireless & networks** → **Wi-Fi settings**.




- 2 Touch the Wi-Fi network that the device is currently connected to (labeled **Connected**). A window opens displaying the Wi-Fi network's name, status, security information, signal strength, link speed, and IP address.

 **NOTE:** If you want to disconnect the Wi-Fi network from your device, touch **Forget** on this window. You will need to configure the Wi-Fi settings again if you want to restore connection to this wireless network.


To connect to another Wi-Fi network

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Wireless & networks** → **Wi-Fi settings**. The detected Wi-Fi networks are displayed in the **Wi-Fi networks** list.

 **NOTE:** To start a new search for available Wi-Fi networks, on the **Wi-Fi settings** screen, touch the Menu button  on the device or the Menu button  on the screen → **Scan**.


- 2 Flick through the **Wi-Fi networks** list and touch the name of the network you want to connect to.

 **NOTE:** If the wireless network you want to connect to is not in the list of detected networks, flick to the bottom of the list to touch **Add Wi-Fi network**. Enter the Wi-Fi network settings, and then touch **Save**.

Disable All Connections Using the Airplane Mode

Selecting the Airplane mode disables all mobile, Bluetooth, and Wi-Fi connections. This feature is useful when wireless connectivity is strictly prohibited, such as on an airplane.

- 1 Touch the Time area in the system bar to open the Status Details.
- 2 Touch anywhere in the Status Details. Then, the Quick Settings display below the Status Details.
- 3 Drag the switch to **ON** to enable the Airplane mode; drag the switch to **OFF** to disable the Airplane mode;

 **NOTE:** For more information, see "Quick Settings" on page 23.

Browsing the Internet



To open the browser

Touch the Home button  → **Apps** button  → **Browser** .

To use the browser controls bar



- 1 Touch to close the web page window.
- 2 Touch to open a new browser window and display the home page under a new tab.

-
- 3 Touch the Menu button  on the device or the Menu button  on the screen to access the following options:
- **New tab:** Open a web page in a new window under a new tab.
 - **New incognito tab:** Open a web page in a new window under a new tab, and the pages you view in this new window will not appear in your browsing history or search history. Read the on-screen instructions for more information.
 - **Find on page:** Search for contents on the current web page.
 - **Share page:** Send the web page URL using Bluetooth, Gmail, and so on.
 - **Save page:** Save the web page to **Downloads**.
 - **Page info:** View information about the current web page.
 - **Downloads:** View and manage recent downloads.
 - **Settings:** Access advanced settings to customize the **Browser** application.

-
- 4 Touch to open **Bookmarks** and **History** windows.
- **Bookmarks:** Display bookmarked websites. Scroll to view all bookmarks and touch an entry to open the website.
 - **History:** Display browsing history and the most visited web pages. To view the history, select a page, such as **Today, Yesterday, Last 7 days, Last month, Most visited**, and so on.

5 Touch to find the desired web page using Google Search or Voice Search.

6 Touch to bookmark the current web page.

7 Touch the web page address field and type the address of the web page you want to go to.

8 Touch to refresh the current web page.




9 Touch to view the next web page.

10 Touch to view the previous web page.

To go to a web page

 

- 1 On the browser screen, touch the web page address field on the screen.
- 2 Type the web page address using the on-screen keyboard. As you type the address, matching web page addresses appear.
- 3 Touch an address displayed on the screen to go directly to that web page.

Or

 

Complete typing the web page address, and then touch either the ENTER key ( or ) on the keyboard or  on the browser controls bar.

To set up your home page


To manually enter a home page:

- 1 Touch the Menu button  on the device or the Menu button  on the screen→ **Settings**→ **Set homepage**.
- 2 Enter the address of the website you want to use as your home page and then touch **OK**.

To set the current page as the home page:

- 1 Go to the web page that you want to set as the home page.
- 2 Touch the Menu button  on the device or the Menu button  on the screen→ **Settings**→ **Set homepage**.
- 3 Touch **Current page**→ **OK**.

To select a home page from bookmarks:

- 1 Touch  from the browser controls bar to open the **Bookmarks** and **History** windows, which display the lists of bookmarks, browsing history, and most visited sites.
- 2 Touch and hold a desired bookmark to open the commands menu→ **Set as homepage**.

Viewing Web Pages

To navigate on a web page

Flick your finger horizontally or vertically on the screen to scroll and view desired areas of a web page.

To zoom in on a web page

Pinch-out a desired area of a web page by moving two fingers apart on the screen.



To zoom out on a web page

Pinch-in a desired area of a web page by bringing two fingers closer together on the screen.




NOTE: You can also double-tap the desired area of a web page to switch between the zoom-in and zoom-out views of the area.


To view the next or previous web page

- From the browser controls bar, touch  to view the previous web page; touch  to view the next web page.

 

Or

- Touch the Back button  on the device to view the previous web page.

To open a new browser window

 
- From the browser controls bar, touch  to open a new browser window and display the home page under a new tab.


Or

- Touch the Menu button  on the device or the Menu button  on the screen → **New tab**. A new browser window opens and displays the home page under a new tab.



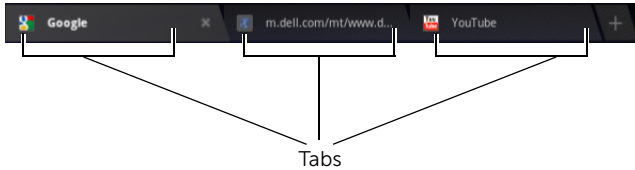

To switch between browser windows

You can open multiple browser windows. Touch the tabs to easily switch from one web page to another.



 **NOTE:** To close a browser window, touch .

To find text within a web page

- 1 When viewing a web page, touch the Menu button  on the device or the Menu button  on the screen → **Find on page**.
- 2 Type the search item in the search bar.
- 3 Touch  or  to go to the previous or next matching item.





 **NOTE:** Touch  to close the search bar.

To copy text on a web page

You can copy and paste text from a web page to your e-mail or text messages.

- 1 Go to the web page from where you want copy the text.
- 2 Locate the text you want to copy, and then touch and hold the text until the **Text selection** action bar appears on the top of the screen.



- 3 Move the  and  cursors to select the text you want to copy. Drag  to the start of the text you want to copy; drag  to the end of the text you want to copy. The copied text is highlighted in green.
- 4 Release your finger from the screen.

- 5 Touch **Copy** to copy the selected text to the clipboard first. To paste the copied text to an e-mail or text message, open the application. Touch and hold the text field on a message or e-mail screen, and then touch **Paste** on the context menu.


Using Web Links, History, and Downloads

To select a link on a web page

Move to a link you want on a web page. The link is framed by a highlighted box when you touch it.

Link type	Functionality
Web page address	<ul style="list-style-type: none">• Touch the link to open the web page.• Touch and hold the link to open a context menu that allows you to perform more functions, such as opening the web page, opening the web page in a new tab, saving the link, copying the link of the web page to the clipboard, or selecting text, and so on.
E-mail address	<ul style="list-style-type: none">• Touch to send an e-mail to the e-mail address.• Touch and hold till a context menu appears.<ul style="list-style-type: none">– Touch Send email to send an e-mail to the e-mail address.– Touch Copy to copy the e-mail address to the clipboard. You can paste the e-mail address later to a new contact or while composing a new e-mail.– Touch Select text to select the e-mail address. The Text selection action bar appears and you can choose to perform more functions.



To check the history of visited web pages

- 1 On the browser screen, touch .
- 2 Touch the **History** tab that display browsing history and the most visited web pages.
- 3 Select a page, such as **Today**, **Yesterday**, **Last 7 days**, **Last month**, **Most visited**, and so on, to locate when your desired web page was last visited.
- 4 Touch a web address to open the web page.

To allow download of web applications

 **CAUTION: Applications downloaded from the web can be from unknown sources. To protect your device and personal data, download applications only from trusted sources, such as Android Market.**



To download web applications, enable your device's downloading feature.

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Applications**.
- 2 Touch **Unknown sources** to select the check box.
- 3 When the **Attention** dialog box opens, touch **OK**.

To install an application

- 1 On the browser screen, touch the application you want to download.
- 2 The application details screen opens. Read details about the application, such as its cost, overall rating, comments by users, the developer contact info, and more.
- 3 To install the application, select either **Download** if the item is free or **Buy** if it requires purchase.

To check downloads

- On the browser screen, touch the Menu button  on the device or the Menu button  on the screen → **Downloads**.

Or

- Touch the Home button  → **Apps** button  →


Downloads




Manage Bookmarks

You can store as many bookmarks as you want on your device.

To bookmark a web page


- 1 On the browser screen, go to the web page you want to bookmark.
- 2 Touch  next to the web page address field. The **Bookmark this page** window opens.
 - In the **Label** field, type the bookmark name as needed.
 - In the **Address** field, edit the web address as needed.
 - In **Add to** field, select where you want to place this bookmark shortcut, such as **Home screen**, **Bookmarks**, or **Other folder**.
- 3 Touch **OK** to save the web page as a bookmark.

To open a bookmark

- 1 On the browser screen, touch . The **Bookmarks** window opens.
- 2 On the **Bookmarks** window, you can either:
 - Touch the bookmark you want to open in the same browser window.

- Touch and hold the bookmark you want to open. Then, on the context menu touch **Open** to open the bookmark in the same browser window, or touch **Open in new tab** to open the bookmark in a new window.



To manage your bookmarks

- 1 On the browser window, touch .
- 2 On the **Bookmarks** window, touch and hold a desired bookmark to open the context menu that provides the following options:

Open	Open the bookmarked website in the same browser window.
Open in new tab	Open the bookmarked website in a new window.
Edit bookmark	Touch to open the Edit bookmark window. For more information, see "To bookmark a web page" on page 73.
Add shortcut to home	Touch to create the bookmark's shortcut on the current Home screen. You can touch the shortcut on the Home screen to start the Browser application and go directly to the bookmarked page.

Share link	<p>Touch to share the bookmark's address through Bluetooth, Email, Facebook, Gmail, Messaging (on 3G model only), Twitter, and so on.</p> <ul style="list-style-type: none"> • Bluetooth: Turn on Bluetooth. Touch Scan for devices. Touch the device you want to share the link with under Found devices. • Gmail, Email: Touch to open the composing window with the bookmark's address automatically pasted on the text field. Send the bookmark's address to others through an e-mail. • Messaging: Touch to open the message composer with the bookmark's address automatically pasted on the text field. Send the bookmark's address to others with a text message. • Facebook, Twitter: Touch to open the message composing window with the bookmark address pasted. Post the bookmark onto Facebook or Twitter where your online friends can see it.
Copy link URL	Copy the web address of the bookmarked website to the clipboard.
Delete bookmark	Touch to delete the selected bookmark.
Set as homepage	Set the bookmarked website as your browser homepage.

To configure browser settings

On the browser screen, touch the Menu button  on the device or the Menu button  on the screen → **Settings** to adjust the browser settings.

E-mail

You can create POP3, IMAP, and exchange e-mail accounts from web-based e-mail services on your device.

To open the e-mail application

Touch the Home button  → **Apps** button  → **Email**  .

To set up an e-mail account

- 1 On the **Account setup** screen, type the e-mail address and password of the e-mail account you want to add.
- 2 Check the account options and then touch **Next**.





NOTE: If the e-mail account you want to set up is not in the device's e-mail database, you will be asked to manually enter the e-mail account settings, including the e-mail server, protocol, and so on after touching **Next**.

 


NOTE: Touch **Manual setup** rather than **Next** to directly enter incoming and outgoing settings for the account being set up.



- 3 Enter the name for the account and the name you want displayed in outgoing e-mails and then touch **Next**.

After adding an e-mail account to your device, touch the Menu button  on the device or the Menu button  on the screen → **Account settings** → **Add account** if you need to add another e-mail account.

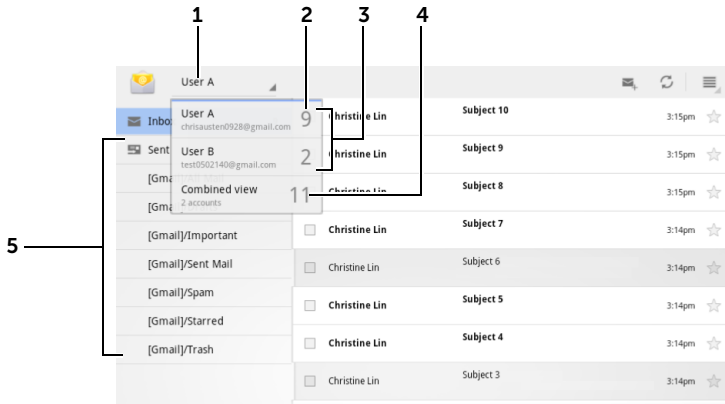 

To view your e-mails










- 1 Touch to display all the e-mail accounts you have added into the **Email** application.
- 2 The number of new e-mails received in this account.
- 3 Select an account to view e-mails received in the inbox of the account.
- 4 The **Combined view** contains all e-mails received in all your accounts.
- 5 Touch to view e-mails in the other folders of this account.

 **NOTE:** When you receive a new e-mail, the e-mail icon  appears in the notifications area of the system bar. Touch the icon to open the **Email** application to view it.


To select an account as default for sending e-mail

- 1 Touch the Menu button  on the device or the Menu button  on the screen → **Account settings**.
- 2 Select an account you want to set as default from the left side of the window that appears, select the **Default account** check box under **General settings**.






To compose and send e-mail

- 1 Touch the Home button  → **Apps** button  → **Email**  .
- 2 Select an e-mail account to use if you have set up more than one account on your device.
 **NOTE:** If you do not select an account, the account set as default will be the one used for sending e-mail.
- 3 In an e-mail account inbox, touch  to compose an e-mail.
- 4 Type the recipient's e-mail address in the **To** field. As you type information, matching contacts appear on the screen. Touch the recipient to automatically add the e-mail address, or continue typing the e-mail address manually. If you are sending the e-mail to multiple recipients, separate their e-mail addresses with a comma. You can add as many recipients as you need.
- 5 Type the subject.
- 6 Compose your message.
- 7 Touch **Send**.
 **NOTE:** If you want to save the message as a draft and modify it later, touch  or touch **Save draft**.




To delete an e-mail

- 1 On the e-mail account inbox, touch and hold the e-mail you want to delete.
- 2 From the action bar that appears on the top of the screen, touch  .

To delete or edit an e-mail account on your device

- 1 Touch the Home button  → **Apps** button  → **Email** .
- 2 Touch the Menu button  on the device or the Menu button  → **Account settings**.
 - To delete an e-mail account, touch to select the account you want to remove first. Scroll to the **Remove account** section, and then touch **Remove account**. When asked to confirm deletion, touch **OK**.
 - To edit an e-mail account, touch to select the account you want to edit, and then configure the available settings.

Web Applications

-  **NOTE:** To use the following applications, you require an active Wi-Fi or mobile data network connection (GPRS, EDGE, 3G, or HSPA). For more information about configuring your device for Internet connectivity, see "Connecting to the Internet" on page 62.
-  **NOTE:** The functionality and user interface of the applications may vary with new releases.
-  **NOTE:** Not all applications are available in all versions of this device.

Gmail


Gmail is a web-based e-mail service provided by Google.

To open Gmail


Touch the Home button  → **Apps** button  → **Gmail** .




To set up your Google account

You need to sign in to a Google account to use Google applications and services such as Gmail, Google Talk, and Android Market. Signing in to your Google account also synchronizes all e-mails, contacts, and calendar on your Google account with your device.


 **NOTE:** You will not be required to sign in with your Google account if you have already signed in when previously using an application that requires signing in to your Google account.

- 1 On the **Sign in with your Google Account** screen, type your Google user name and password, and then touch the **Sign in** button to proceed.

 
 **NOTE:** Touch **Create an account now** if you do not have a Google account.

 **NOTE:** Touch the Menu button  on the device or the Menu button  on the screen → **Browser sign-in**, if you want to sign in to a Google account using the **Browser** application.

- 2 Touch **Done** to complete the process.

 **NOTE:** Signing in to your Google Account requires an Internet connection. Ensure that your device has an active Wi-Fi or mobile data connection (GPRS, EDGE, 3G, or HSPA) before you sign in. For more information on setting up a data connection, see "Connecting to the Internet" on page 62.

Your Gmail inbox opens as the default Gmail view. All your received e-mails are delivered to your inbox.

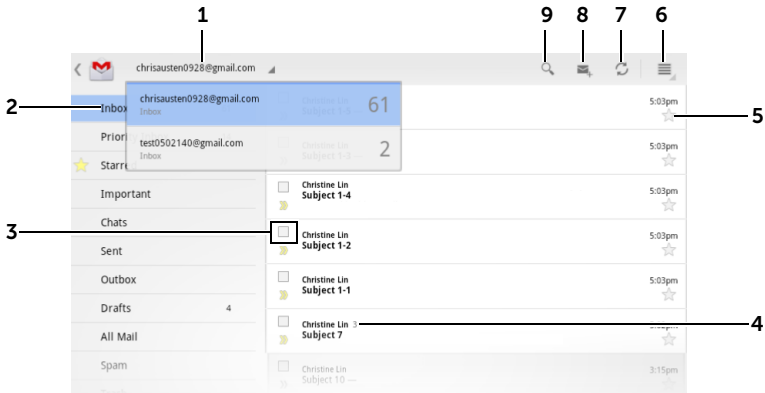





1 Touch to select an Gmail account if you have set up multiple accounts on your device.

2 Folder (or Label) and number of unread e-mails.

To view e-mails stored in the folders other than the **Inbox**, such as in the **Sent** or **All Mail** folder, or to view labeled or starred e-mails, touch the folder that stores the e-mails you want to view.

3 Touch the check box to select the e-mail thread to perform more options from the action bar that appears on the top.

- **Change labels:** Change label for the selected item.
 -  : mark the selected item as unread.
 -  : Star the selected item.
 -  : Archive the selected item by storing it in the **All Mail** folder.
 -  : Move the selected item to the Trash folder.
-


4 The number of e-mails grouped under the same subject.

 
5 Touch the star to add or remove the star.

6 Touch the Menu button  to access **Settings** and **Help**.

-
- 7 Touch the Refresh button to send or receive e-mails and to synchronize your e-mails with your Gmail account on the Internet.
-
- 8 Touch to compose an e-mail.
-
- 9 Touch to search for e-mails.
-

To read e-mails



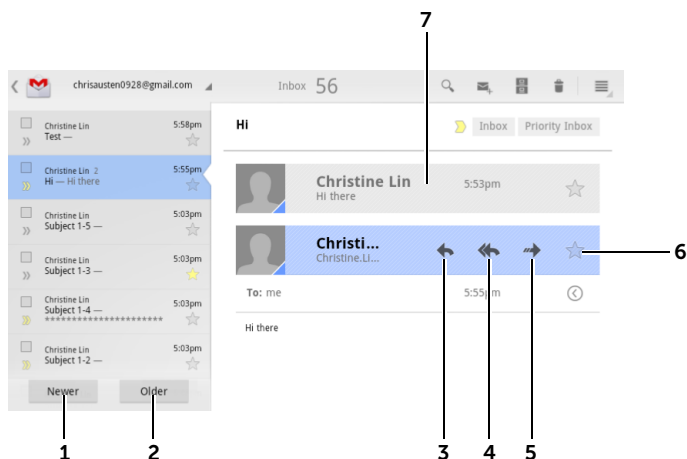




- When you receive a new e-mail in the **Gmail** application, the e-mail icon  appears in the notifications area of the system bar to alert you of a new e-mail. Touch the icon to open the new e-mail to view it in the **Gmail** application.
- While in the inbox or in any other folder, scroll the e-mail threads on the screen, and then touch an e-mail thread to view the e-mails inside.



-
- 1 Touch to read the next e-mail thread.
-
- 2 Touch to read the previous e-mail thread.
-
- 3 Touch **Reply** to reply to the contact.
-
- 4 Touch **Reply all** to reply to all contacts in the mail loop.
-
- 5 Touch **Forward** to forward the e-mail to another contact.
-
- 6 Touch to star an e-mail. To check the starred e-mails, go to the **Starred** folder.
-

-
- 7 Touch to view previous e-mails with the same subject.
-




To create and send an e-mail

- 1 Touch the Home button  → **Apps** button  → **Gmail**  .
 - 2 Select an e-mail account to use if you have set up more than one account on your device.
 - 3 In an e-mail account inbox, touch  to compose an e-mail.
 - 4 Type the contact's e-mail address in the **To** field. To send e-mail to multiple contacts, separate their e-mail addresses with a comma.
 - 5 Type the e-mail subject.
 - 6 Compose your e-mail. To attach a picture in your e-mail, touch the  icon. Select the picture you want to attach from the **Gallery** application.
-  **NOTE:** Touch  to remove an attachment.
- 7 Touch **Send** to send the e-mail.

Google Talk



Google Talk is an instant messaging program provided by Google.

To activate Google Talk


- 1 Touch the Home button  → **Apps** button  → **Talk**  .
- 2 Touch **Sign in** to sign in Google Talk with your Google account. If you do not have a Google account, follow the instructions on the screen to create an account (see "To set up your Google account" on page 80).
- 3 The Google Talk window opens with your friends list.


To sign in automatically


You can sign in to your Google Talk account automatically whenever you turn on the device.

- 1 In the friends list, touch the Menu button  on the device or the Menu button  on the screen→ **Settings**.
- 2 Select the **Sign in automatically** check box.

To add a new friend to your friends list

 **NOTE:** You can only add users who have a Google Account.

- 1 In the friends list, touch the  icon to add a friend.
- 2 Enter the Google Talk instant messaging ID or Gmail address of the friend you want to add to your friends list.


 **NOTE:** When you type the instant messaging ID of a friend who is already a contact saved in Contacts with the same ID, this matching contact will display on the screen before you finish typing. You can touch the contact whose ID is then entered automatically.

- 3 Touch **Send invitation**.


To view and accept an invitation

- 1 When receiving a chat invitation, the pop-up **Accept invitation** menu appears.
- 2 Touch **Accept**, **Decline**, or **Block**.


To change your online status and message

- 1 Touch the online status field, such as  **Available** to display more options.
- 2 Select the status you want, including **Available**, **Busy**, **Invisible**, or sign out from Google Talk.
- 3 To enter your status message, touch the **Status message** field. When the **Status message** text box opens, enter your message.
- 4 To change your ID photo, touch the photo icon to capture a picture or select a photo to use from the **Gallery** application.


To start a conversation

- 1 Touch to select a friend in the friends list.
- 2 Type your message in the text box.
- 3 Touch the  to send the message.


 

To add a friend to an active conversation

- 1 On the chat screen, close the on-screen keyboard, and then touch the  icon→ **Add to chat**.
- 2 Select the friend you want to invite to the current conversation.



 

To disable the chat log

- 1 On the chat screen, close the on-screen keyboard, and then touch the  icon→ **Go off the record**.
- 2 The subsequent chat conversations will not be recorded. To resume the chat log, touch **Stop chatting off the record**.


To close a conversation

- On a chat screen, touch  to close the current conversation.
- On a chat screen, touch the Menu button  on the device or the Menu button  on the screen→ **Close all chats** to close all the conversation.




To display all friends in your friends list

- To display all your friends in the friends list, touch the Menu button  on the device or the Menu button  on the screen→ **All friends**.
- To display only the friends that you chat with most frequently, touch the Menu button  on the device or the Menu button  on the screen→ **Most popular**.

 
To block a friend from sending you messages

- 1 In the friends list, find the friend to block.
- 2 Touch the friend's thumbnail, and then touch  → **Block friend**.



Your friend is removed from your friends list and is added to the blocked friends list.

 **NOTE:** To unblock a friend, touch the Menu button  on the device or the Menu button  on the screen → **Settings**. Scroll to touch **Blocked friends** under the **Account** section. Touch the friend you want to unblock, and then touch **OK** to confirm.

To permanently remove a friend


- 1 In the friends list, find the friend to remove.
- 2 Touch the friend's thumbnail, and then touch  → **Remove friend**.

To sign out from Google Talk

Touch the Menu button  on the device or the Menu button  on the screen → **Sign out**.

Maps

Google Maps helps you find your current location, view real-time traffic situations, and get directions to your destination. You can also use the search tool to locate addresses or places of interest on a map or in a street view.

 **NOTE:** The Google Maps application does not completely cover every location.


To enable location source

To search for desired places or find your current location using Google Maps, you need to enable My location sources:




1 Touch the Home button  → **Apps** button  →

Settings  → **Location & security**.


2 Select **Use wireless networks**, **Use GPS satellites**, or both.


 **NOTE:** Selecting **Use GPS satellites** allows you to pinpoint locations down to the street-level. However, this mode requires a clear view of the sky and consumes battery power.

To open Google Maps

Touch the Home button  → **Apps** button  → **Maps** .

To see your location on a map

On the Maps screen, touch . Your location is marked on the map with a blinking blue arrow.

 **NOTE:** Enabling GPS satellites allows you to pinpoint your current location down to the street-level. However, this mode requires a clear view of the sky and consumes more battery power.

To find a location on the map

1 On the Maps screen, touch the search box.

2 To search by typing:


a Type the place you want to find in the search box. You can enter an address, a city or country, or a type of business or organization such "restaurant" or "school".

b Touch the ENTER key ( or ) on the keyboard.

 
To search by voice:

a Touch .

b Say your destination.

 **NOTE:** As you enter information, previous searches or matching locations appear below the search box. You can touch a place name or address to show the location on the map.

3 The search results are marked on the map by lettered balloons.

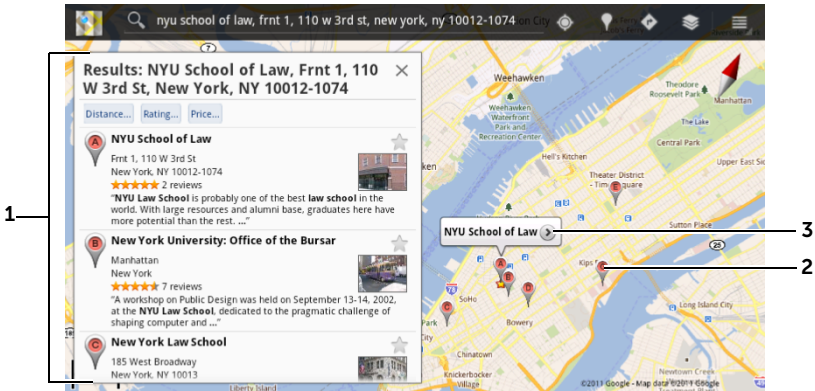 


1 Scroll the list to view search results.

2 The search result is marked by a lettered balloon. Touch the letter balloon to display the name of the place.

3 Touch the place name to view the address, details, and reviews for the place if the information is available (For more information, see "To view the details of a place" on page 89).

 
To view the details of a place

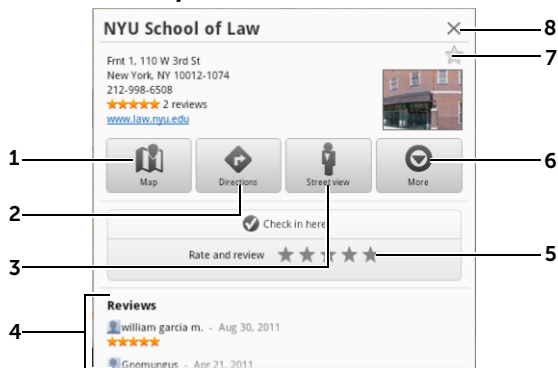

- 1 Touch to display the map view.
- 2 Touch to obtain directions. (For more information, see "To get directions" on page 91).
- 3 Touch to switch to street view for the location. (For more information, see "To view a map in street view" on page 91).
- 4 Scroll to view the address, details, and reviews for the place if the information is available.
- 5 Touch to rate and review this place.
- 6 Touch to display more advanced options if available.
- 7 Touch to star this place. A star indicator will be displayed on the map of this place.
- 8 Touch to close this window.

To move around a map

- 1 Flick or drag the map in any direction on the screen to view desired areas.
- 2 If you spot a place of interest while navigating the map, touch and hold the place to display the address (a picture thumbnail is also displayed if the street view for the location is available).

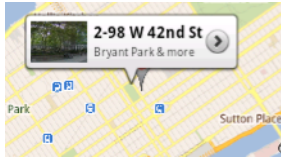



To zoom in or out on a map



Move two fingers close together on the screen to zoom out; move two fingers further apart to zoom in.

To change map layers

Google Maps opens with the default map layer. You can apply different types of layers to view additional information or images on the map.


- 1 Touch .
- 2 From the **Layers** menu, touch the desired layer to display it on the map.

 **NOTE:** For information about the layers, visit maps.google.com.


 **NOTE:** To remove all of the layers other than the map layer, touch  → **Clear Map.**

To view a map in street view

You can switch to street view for the location that you found on the map. The street view is composed of imagery captured from the streets.

- 1 Locate a place of interest on the map. For more information, see "To find a location on the map" on page 87 and "To move around a map" on page 90.
- 2 On the map, touch the name or address of the place.
- 3 On the location details screen, touch  .
- 4 To view the 360-degree panorama of the area around the place, turn the view on the screen with your finger.
- 5 To move the view along the street, drag Pegman to where you want to go.

 


NOTE: While viewing a street view of a location, touch the Menu button  → **Compass mode** to enable the compass mode, which allows you to view the area around the selected location by tilting or turning your device, rather than by moving the view on the screen with your finger.

To get directions


Use Google Maps to obtain directions to your destination.


- 1 When viewing a map:

 
Touch  from the action bar on the top of the screen.

Or

When a place is found:

- a Touch the place's name or address displayed on the map.
 - b On the location details screen, touch  .
- 2 Enter the starting point in the first text box and your destination in the second text box.

 **NOTE:** By default, your current location is the starting point, and the place you found on the map is your destination.

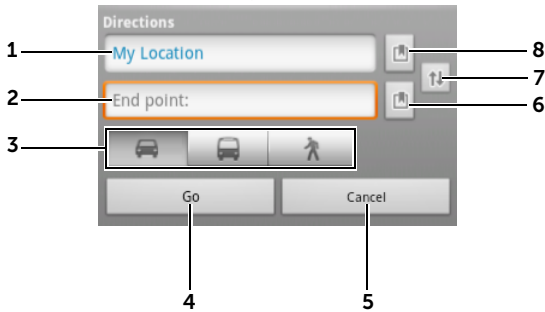

-
- 1 Start point.

 - 2 End point (Destination).

 - 3 Choose how you want to get to your destination: driving, public transportation, or walking.

 - 4 Touch to render directions.


 - 5 Touch to cancel.

 - 6 Touch to select a contact's address, pin a place on the map, or select a starred place as the destination.



 - 7 Touch to switch the Start point and End point fields.

 - 8 Touch to select a contact's address, pin a place on the map, or select a starred place as the start point.
-

- 3 Touch **Go**. The directions to your destination are listed.
- 4 Touch a direction instruction on the list to show the directions or routes on the map.

 **NOTE:** To obtain driving directions using the Google GPS navigation services, touch **Navigate**. For more information, see "Navigation" on page 97.

To clear a map

Touch the Menu button  on the device or the Menu button  on the screen → **Clear Map**. All the search results, directions and traffic indicators are deleted from the map.



Using Google Latitude



 

NOTE: To use Google Latitude, you will be required to sign in to a Google account.

The Google Latitude location service allows you to share locations with your friends and family who have signed in to the service with their Google accounts. You can also send instant messages and e-mails, and get directions to your friends' locations.



 


To let your friends view your location and accept their invitations, you need to enable **Latitude**.

- 1 While viewing a map in any mode, touch the Menu button  on the device or the Menu button  on the screen → **Join Latitude**.
- 2 Sign in to Google Latitude with your Google account. If you do not have a Google account, follow the instructions on the screen to create an account (see "To set up your Google account" on page 80).


 


NOTE: If you have set up two or more Google accounts on your device, and want to use Latitude with another account, touch the Menu button  on the device or the Menu button  → **Switch Account**.

To launch Latitude

- Touch the Home button  → **Apps** button  → **Latitude** .
- Or
- While viewing a map, touch the Menu button  on the device or the Menu button  → **Latitude**.

To invite friends to share locations

- 1 On the Latitude screen, touch the Menu button  on the device or the Menu button  → **Add friends**.
- 2 Choose the friends you want to share locations with:

- **Select from Contacts:** Select friends from your contacts. Friends already using Latitude have an icon next to their names.
 - **Add via email address:** Enter an e-mail address.
- 3 When the **Send sharing requests** menu appears, touch **Yes**.
 - 4 Your friends already using Latitude receive an e-mail request and a notification on Latitude requesting them to share locations. If they have not yet joined Latitude, they receive an e-mail that requests them to sign in to Latitude with their Google accounts.

To accept an invitation

When you receive a request to share your location with a friend on Latitude, touch the request and choose how you want to respond:

- **Accept and share back:** You can see your friend's location, and your friend can see yours.
- **Accept, but hide my location:** You can see your friend's location, but they cannot see yours.
- **Don't accept:** Reject the sharing request. No location information is shared.



To show your friends

You can show your friends on the map or in the list view.

- **Map view**

 
When you open Google Maps, it displays the locations of your friends. Each friend is marked by a photo icon with an arrow that indicates their location. To see a friend's profile and communicate with them, touch the photo, then touch their location callout right above their photo. To see other friends, touch either one of the arrow buttons next to the callout.

- **List view**

To show a list of your friends, touch the Menu button  on the device or the Menu button  → **Latitude**. To see a friend's profile and communicate with them, touch the friend's name from the list.

To connect with your friends

Touch a friend's name in map view or list view to open the friend's profile. In the profile screen, you can send messages to your friend and configure privacy options.

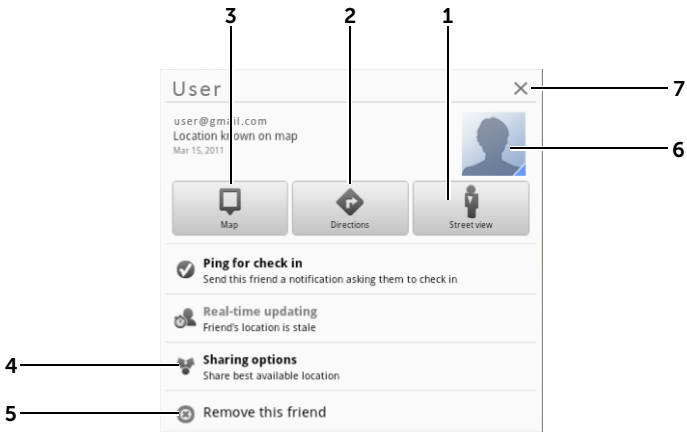

1 Switch to street view of the friend's location.

2 Get directions to the friend's location.

3 See a friend's location on the map.

4 Sharing options:

- **Share best available location:** Share street-level location with your friend.
- **Share only city level location:** Share only the city or the approximate area you are in, not the street-level location. Your friend can see your photo icon in the middle of the city you are in.
- **Hide from this friend:** Stop location sharing with this friend. Your friend cannot see your photo icon on the map.

5 **Remove this friend:** Remove this friend from your list and end all location sharing.

6 Touch the thumbnail to open the pop-up menu. Depending on available settings, you may use **Messaging** and **Gmail** services to send a message to your friend.

To control what to share and change your public profile

- 1 In **Latitude**, touch your name on the list of friends to open your public profile window.
- 2 Set the following options to your preferences.


 
View your location history Enable the Location History feature which helps store your past Latitude history.

Send location to others Send the address of your current location using Twitter, Facebook, Bluetooth, text messaging, or e-mail, and so on.

Edit privacy settings Manage how your location is shared with your friends:

- **Detect your location:** Latitude automatically detects and updates your current location.
- **Set your location:** Select a location from the map, contact addresses or nearby places, or type an address.
- **Do not update your location:** Your location is not updated and your family or friends cannot see it.

NOTE: To let Latitude report your location, you must enable My location sources. For more information, see "To enable location source" on page 86.

NOTE: For more information about how to customize more Latitude options, touch the Menu button  on the device or the Menu button  → **Help**.

Change your photo Change the picture that your friends see on the map or in their list of friends.

You can take a picture using the **Camera** application, or select a picture stored in **Gallery**.

Places


Touch the Home button  → **Apps** button  → **Places**  .

Places automatically detects your current location and offers guide to nearby restaurants, coffee shops, bars, hotels, attractions, ATMs, gas stations, and more.

- 1 Touch to select a category.
- 2 From the list of places, touch the desired place to view more details. For more information on using the controls on this screen, see "To view the details of a place" on page 89.

 
Navigation

 **NOTE:** Google Maps Navigation is not available in all areas.

 **WARNING:** It is your sole responsibility to use this application in a safe and responsible manner. You must obey local traffic laws, posted road signs, and safety regulations. Do not operate the device while driving.

Touch the Home button  → **Apps** button  → **Navigation**  .


Google Maps Navigation is an Internet-connected GPS satellite navigation system with voice guidance. Navigation provides the following features:

Feature	Description
Searching in plain language	Type the name or address of the place, the business, or the organization you want to find.
Searching by voice	Name your destination using Google Search by voice (English only).
Traffic view	Traffic view provides live traffic data and displays up-to-date traffic conditions on the screen. Press the Menu button  → Layers → Traffic to turn on Traffic view.

Feature	Description
Searching along route	Search for any kind of business along your route. Press the Menu button (☰) → Layers to access popular types of places.
Satellite View	Satellite view allows you to view your route overlaid on 3D satellite views with Google's high-resolution aerial imagery. Press the Menu button (☰) → Layers → Satellite to turn on Satellite view.
Street View	Street view helps visualize turns with Street View imagery. Navigation automatically switches to Street View as you approach your destination.
Navigation shortcut	<ul style="list-style-type: none"> • Speak Destination: Say your destination using Google voice search. • Type Destination: Type your destination. • Contacts: Select a destination from the location of your contacts. • Starred Places: Select a destination from the list of Starred Places.
Walking navigation	Get voice-guided navigation for walking directions. Your device vibrates for turn notifications.

YouTube



YouTube is an Internet video streaming service that allows you to view videos uploaded by YouTube members.

 **NOTE:** Browsing and watching videos does not require you to sign in to a YouTube account. However, to use full YouTube features, such as commenting on videos, adding videos to your favorites, or uploading videos, you must create and sign in to a YouTube account.

To open YouTube


Touch the Home button  → **Apps** button  → **YouTube** .

To search for a video by typing


- 1 Type the video name or keyword into the search box on the top of the YouTube screen using the on-screen keyboard. The search results that fully or partially match the text being typed appear below the search box. You can:
 - a Scroll the search results and touch the desired result.
 - b Touch the ENTER key ( or ) on the keyboard to search for results that match the entered text, and then touch a desired search result.

The videos that match the selected result are listed.

- 2 Touch the video to start playing the video.




 **NOTE:** You can touch **All time** at the top of the search results screen. From the Time filter menu that appears, select a time frame you want to filter the search results, such as **Today**, **This week**, **This month**, and **All time**. The videos that match the selected time frame will be listed.

To search for a video by voice command

- 1 Touch  next to the search box on the top of the YouTube screen.
- 2 Say the video name or a keyword.

- 3 The videos that match the words you said are listed.
- 4 Touch the video to start playing the video.





To watch videos in full screen


- 1 Hold the device in the Landscape orientation.
- 2 Select a video on the YouTube screen. Touch the video to start playback, and then touch  to enable the full screen mode.
- 3 To control video playback, touch anywhere on the screen to view the controls.
- 4 Touch the screen to display the pause icon. Touch the screen again to pause the playback.
- 5 Touch the screen again to resume the playback.
- 6 To end playback, touch the Back button  or the Home button .





NOTE: In full screen, you can touch **HD** to toggle to HD video mode if available.




To use more YouTube options

- Except for the full screen mode, you can touch  if you like the video, or touch  if you do not like the video while the video is playing.
- You can also touch the Menu button  on the device or the Menu button  on the screen to perform the following options:
 - **Favorite:** Add the video to your favorites.
 - **Save to:** Save the video to a playlist.
 - **Copy URL:** Copy the video's URL to the clipboard.
 - **Flag:** Flag the video.
- You can touch **Share** to share the video with family and friends using applications, such as Bluetooth, Email, Gmail, Messaging, and so on.

 **NOTE:** Some of the features above may require signing in to your YouTube account.


To customize YouTube settings

To customize YouTube settings, touch the Menu button  on the device or the Menu button  on the screen → **Settings**.




 **NOTE:** For more information on using YouTube, touch the Menu button  on the device or the Menu button  on the screen → **Help**.

Android Market

You can use Android Market to download and install applications and games on your device.

 **NOTE:** Applications downloaded from Android Market may not support automatic screen rotation to portrait or landscape.





To open Android Market

- 1 Touch the Home button  → **Apps** button  → **Market** .
- 2 Sign in to Android Market with your Google account. If you do not have a Google account, follow the instructions on the screen to create an account (see "To set up your Google account" on page 80).
- 3 Touch the **Accept** button after you read and agree with the **Android Market Terms of Service**.
- 4 The Android Market screen opens.

All applications available for download are sorted by categories, such as **TOP FREE**, **EDITORS' CHOICE**, **GAMES**, and more. Touch a category to view its applications.

To download and install an application

- 1 Scroll and browse listed applications to locate the desired application.
- 2 Touch the application you want to download and install.



- 3 On the application details screen, you can read the descriptions about the application or game, user ratings and reviews, and developer information.
- 4 On the application details screen, touch **DOWNLOAD** or **BUY** to download a free application or purchase an application. The application's screen will show the download and installation progress.
 -  **NOTE:** If the application requires access to any of your data or functions on your device, Market tells you what the application can access. Touch the **OK** button to start the download and installation.
 -  **NOTE:** During installation, the  icon appears in the notifications area of the system bar. Touch the icon to check the status of the download.
- 5 After the application is downloaded and installed on your device, the  icon appears in the notifications area of the system bar.

To open an application


From the Market screen:

- 1 Touch the **My apps** tab on the Market screen.
- 2 Touch the installed application in the list.
- 3 Touch **Open**. The selected application starts running.

From the main application menu:

- 1 Touch the Home button  → **Apps** button  → **My apps**.
- 2 Touch the application's icon to run the application.

From the notifications area of the system bar:

- 1 Touch the  icon to open a recently installed application.
- 2 Touch the name of the application you want to open.

To uninstall an application or game

- 1 Touch the **My apps** tab on the Market screen.
- 2 Select the application you want to uninstall.

3 Touch **Uninstall**.

Synchronizing Your Google Data



Through a web connection, your device can synchronize your Google data including Gmail, calendar, and contacts with your computer or any other device that you use to access your Google account.



To select the applications to synchronize

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Accounts & sync**.

- 2 Under the **General sync settings** section, touch to select the **Background data** check box to make all the sync options available.
- 3 Under the **General sync settings** section, touch to select **Auto-sync** to allow the device to automatically synchronize the selected data.
- 4 Under the **Manage accounts** section, touch your account to select the data that you want the device to synchronize automatically, such as **Sync Calendar**, **Sync Contacts**, **Sync Gmail**, **Sync Picasa Web Albums**.

 **NOTE:** If you want to synchronize individual applications manually, touch to clear the **Auto-sync** check box, then touch a data option to start synchronization of the selected data. To sync all of the data manually, touch the  icon on the top right corner of the screen.

 **NOTE:** While data is syncing, the sync icon  appears on the option of the data being synced.

Customizing Your Dell Streak 7 Tablet

You can customize your device using the options available in the


Settings  application.

Power Management Settings

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Power Management**.

- 2 Select a desired timeout duration from the **Timeout** menu that appears.

 **NOTE:** To conserve battery charge, the device automatically disconnects from a data network when the screen is turned off, based on the timeout duration you set. The device reconnects to the data network automatically when you turn on the screen.

- 3 Select from the following settings:

 

Standard Power Save - Recommended	Data connectivity is disabled only when the screen is turned off between the start time and end time that you define in this option. <ol style="list-style-type: none">1 Touch this option to select it.2 Set the start time and end time.
Aggressive Power Save	When the screen is turned off, data connectivity is always disabled after the timeout you define in this option. <ol style="list-style-type: none">1 Touch this option to select it.2 Touch the desired timeout period to select it.
None	If you select this option, data connectivity will not be disabled when the screen is turned off.

Display Settings

To change the display settings:

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Screen**.

- 2 To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .

Brightness

Manually adjust screen brightness.

- 1 Drag the brightness slider horizontally or touch the desired portion on the slider. The length of the highlighted bar on the slider determines the brightness of the screen.
- 2 Touch **OK** to confirm the adjustment.

NOTE: If **Automatic brightness** is enabled, the device will adjust the screen brightness automatically based on the surrounding light conditions.

Auto-rotate screen

If enabled, the screen will switch the orientation to landscape or portrait as you rotate the device.

Animation

Set the device to play an animation for opening and closing windows.

Timeout

- Set the duration the screen remains on after the last operation. Scroll the options and touch a preferred timeout period.
- The screen automatically turns off and locks itself based on the timeout duration you set.



NOTE: You must draw the unlock pattern if you have set up and enabled the screen lock pattern. For more information, see "Protect Your Device Data with a Screen Unlock Pattern" on page 109.

Sound and Ringtone Settings

To change the sound and ringtone settings:

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Sound**.




- 2 Flick the list to locate and touch a desired option.
- 3 To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .

General settings

Vibrate

Set the device to vibrate based on the available settings.

Volume

-  : Adjust the media volume for music and video playback.
-  : Adjust the ringer volume for notifications.
-  : Adjust the volume for alarm ringtone.

1 To adjust the volume, drag the sliders horizontally or touch the desired portion of the slider to increase or decrease volume.

2 Touch **OK** to confirm the adjustment.

NOTE: To enable the Silent mode, touch

either  or  to make these icons

become  and .

Notifications settings


- Notification ringtone** 1 Select a desired ringtone for notifications from the **Ringtones** menu that appears.
2 Touch **OK** to confirm the selection.
-

Feedback settings



- Audible selection** Plays a tone as you touch the screen to select items.
-
- Screen lock sounds** Plays a tone when the screen is locked and unlocked.
-
- Haptic feedback** The device vibrates when you touch the buttons or when specific interactions with the device occur.
-

Date, Time, and Time Zone

To manually set the date, time, and time zone:


- 1 Touch the Home button  → **Apps** button  →



- 2 Flick the **Settings** menus on the left of the screen to locate and touch **Date & time**.
- 3 Flick the list on the right to locate and touch the desired item.
- 4 To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .




-
- Select time source** Choose to set the device time manually or automatically from your mobile network or from the Internet.
-

- Automatic time zone** Use network-provide time zone automatically.
-

Set date	<p>1 Touch or touch and hold the up/down arrows to adjust the day, month, and year; you can also touch the day, month, or year to flick to the desired value.</p> <p>2 Touch Set to confirm the date.</p>
Set time	<p>1 Touch or touch and hold the up/down arrow keys to adjust the hour and minute; you can also touch the hour or minute to flick to the desired value.</p> <p>2 Touch the AM/PM field if the 12-hour format is in use.</p> <p>3 Touch Set to confirm the time.</p>
Set time zone	<p>Select a city or region that represents the time zone for your device. Touch the Menu button  to sort the time zone list alphabetically or by time zone.</p>
Use 24-hour format	<p>Clear this check box to display the time in 12-hour format.</p>
Select date format	<p>Select the format to be used for displaying the date.</p>

Language Settings

To set the language of the display text:

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Language & input** → **Select language**.
- 2 Select a language of your choice from the list that appears.

Protecting Your Dell Streak 7 Tablet

Protect Your Device Data with a Screen Unlock Pattern

You can protect your device data against unauthorized access by locking the touch screen with a screen unlock pattern. Once the unlock pattern is enabled and the screen is locked, you need to draw the correct unlock pattern to unlock the screen.

After you fail to draw the correct unlock pattern on the screen for five consecutive times, you will be asked to wait for 30 seconds before you can try again. If you no longer remember your screen unlock pattern, follow these steps to unlock your screen:

- 1 Touch **Forgot pattern**.
- 2 When prompted, sign in to the Google website using your Google account name and password.
- 3 Draw a new screen unlock pattern as described in "To create a screen unlock pattern" on page 109.



NOTE: If you are unable to obtain a new unlock pattern following the above steps, visit support.dell.com.


To create a screen unlock pattern

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Location & security**.


- 2 Touch **Configure lock screen** under the **Lock screen** section → **Pattern**.
- 3 Read the instructions on the screen and study the animated example of how to draw a pattern. Then, touch **Next** when you are ready to draw your own pattern.

- 4 Drag your finger to draw the unlock pattern by connecting at least four dots in a vertical, horizontal and/or diagonal direction. Take your finger off the screen when a pattern is drawn.

 **NOTE:** You must touch and drag your finger on the screen to create the pattern.


- 5 The device records the pattern if it is correctly drawn. Touch **Continue**.

- 6 Draw the pattern again as prompted, and then touch **Confirm**.

 **NOTE:** To change your unlock screen pattern, you need to draw the old pattern to confirm before you can create a new pattern.

To disable or change the screen unlock pattern


- 1 Touch the Home button  → **Apps** button  →

 

Settings  → **Location & security**.

- 2 Touch **Configure lock screen** under the **Lock screen** section.
- 3 Draw the pattern you created.
- 4 Select **Not secured** to disable screen unlock security; select **Pattern** to draw a new unlock pattern.

To change unlock pattern settings

- 1 Touch the Home button  → **Apps** button  →


Settings  → **Location & security**.

- 2 To enable a setting, touch the setting option to select the check box ; to disable a setting, touch the setting option to clear the check box .

Use visible pattern	Clear this option if you do not want the lines of the unlock pattern to display on the screen when you draw it.
Use tactile feedback	Clear this option if you do not want the device to give you tactile feedback when drawing the unlock pattern.

Protect Your Device Data with a PIN

- 1 Touch the Home button  → **Apps** button  →

Settings  → **Location & security.**

- 2 Touch **Configure lock screen** under the **Lock screen** section → **PIN.**
- 3 On the **Choose your PIN** page that appears, enter a PIN in the text box. Your PIN must be 4 characters at least.
- 4 Touch **Continue** to proceed.
- 5 Enter the PIN again to confirm.
- 6 Touch **OK.**




To disable or change PIN

- 1 Touch the Home button  → **Apps** button  →




Settings  → **Location & security.**

- 2 Touch **Configure lock screen** under the **Lock screen** section.
- 3 Enter the PIN you have enabled, and then touch **Continue.**
- 4 Select **Not secured** to disable the PIN; select **PIN** to change PIN.

Protect Your Device Data with a Password


- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Location & security**.
- 2 Touch **Configure lock screen** under the **Lock screen** section → **Password**.
- 3 On the **Choose your password** page that appears, enter a password in the text box. A valid password consists of at least 4 characters and contains at least one letter.
- 4 Touch **Continue** to proceed.
- 5 Enter the password again to confirm.
- 6 Touch **OK**.

To disable or change the password


- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Location & security**.
- 2 Touch **Configure lock screen** under the **Lock screen** section.
- 3 Enter the password you have enabled.
- 4 Select **Not secured** to disable the PIN; select **Password** to change the password.

Protect Your SIM Card with the SIM Lock Password (on 3G model only)

You can protect your SIM card against unauthorized use with a personal identification number (PIN). After a PIN is enabled to lock your SIM, you will need to enter the PIN each time you turn on the device in order to unlock your SIM.

 **NOTE:** The SIM card will be permanently locked if you enter the incorrect PIN for three consecutive times. You must then enter the Personal Unblocking Key (PUK) to unlock the SIM card. Contact your service provider to obtain the PUK.

To enable the SIM card PIN

1 Touch the Home button  → **Apps** button  →



Settings  → **Location & security.**


2 Touch **Set up SIM card lock** under the **SIM card lock** section

3 Touch **Lock SIM card** on the **SIM card lock settings** menu that appears.

4 Type your SIM card PIN, and then touch **OK**.

To change the SIM card PIN

1 Touch the Home button  → **Apps** button  →

Settings  → **Location & security.**

2 Touch **Set up SIM card lock** under the **SIM card lock** section

3 Touch **Change SIM PIN** on the **SIM PIN** menu that appears.

4 Type the old SIM card PIN, and then touch **OK**.

5 Type the new SIM card PIN, and then touch **OK**.

6 Type the new SIM card PIN again, and then touch **OK**.

Applications

 
Camera

Your device has a camera with auto-focus feature that allows you to capture and share high-quality pictures and videos.

To start the camera in picture mode

Touch the Home button  → **Apps** button  → **Camera** .

Camera controls

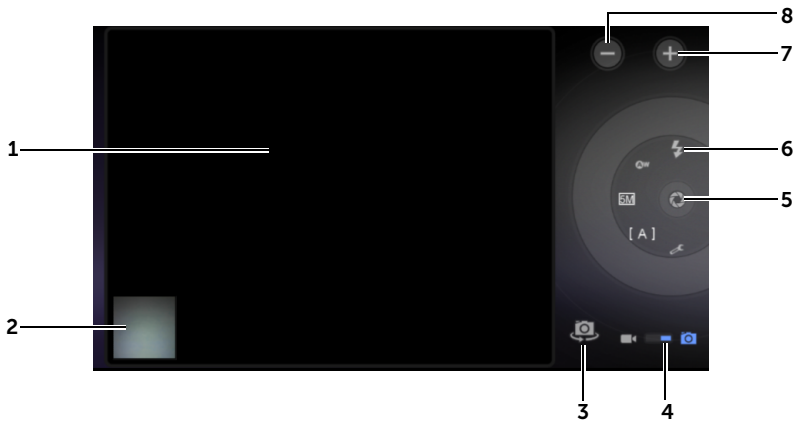

- 1 Viewfinder screen.
- 2 Touch the thumbnail view of the last taken picture to view and manage the picture using the **Gallery** application.
- 3 Switch between the front-facing camera and the rear-facing camera.
- 4 Drag this on-screen switch to toggle between the camera mode for capturing pictures, and the camcorder mode for capturing videos.

-
- 5 On-screen shutter button.

To capture a picture:


- a Focus on the object in the viewfinder screen.
- b Touch the on-screen shutter button and release to capture the picture.

-
- 6 Camera setting indicator. Touch each indicator to open the camera settings, and touch to select the desired setting.

-
- 7 Zoom-in.

-
- 8 Zoom-out.
-

To start the camcorder mode

Touch  to switch to the camcorder screen.

Camcorder controls



-
- 1 Viewfinder screen.

-
- 2 Touch the thumbnail view of the last captured video to play and manage the video using the **Gallery** application.

-
- 3 Switch between the front-facing camcorder and the rear-facing camcorder.

-
- 4 Drag this on-screen switch to toggle between the camera mode for capturing pictures, and the camcorder mode for shooting videos.

-
- 5 To start or stop recording, touch this on-screen video recording button.
-

-
- 6 Camcorder setting indicator. Touch each indicator to open the camcorder settings.

 - 7 Zoom-in.

 - 8 Zoom-out.

Bluetooth®

Bluetooth is a short-range wireless communications technology that allows your device to connect to other Bluetooth-enabled devices over a wireless network.


Bluetooth on your device operates in three different modes:

On	Bluetooth is turned on. Your device is enabled to detect Bluetooth devices within range, but will not be found by them.
Discoverable	Bluetooth is turned on, and other Bluetooth devices can detect your device.
Off	Bluetooth is turned off. Your device cannot send and receive data using Bluetooth.

To turn on Bluetooth and make the device discoverable

- 1 Touch the Home button  → **Apps** button  →






Settings  → **Wireless & networks**.

- 2 Select the **Bluetooth** check box to turn on Bluetooth. The Bluetooth icon  appears in the status area of the system bar.
- 3 Touch **Bluetooth settings**, then select the **Discoverable** check box to make the device recognizable by other nearby Bluetooth devices.





To pair with a Bluetooth device

- 1 Touch the Home button  → **Apps** button  →





Settings  → **Wireless & networks** → **Bluetooth settings**.

-  **NOTE:** Ensure Bluetooth has been enabled on the device you want to pair with, and the device is in Discoverable state.
- 2 Touch **Find nearby devices**. Your device starts to scan for Bluetooth devices within range and then displays all detected devices below the **Found devices** list.
-  **NOTE:** To detect more devices, touch **Scan for devices**.
- 3 To initiate a connection with a device, touch the name of the device.
- 4 You may be prompted to enter a password to authenticate. Enter the same password on both devices, or enter the password provided by the device manufacturer. Ensure that you read the documentation of the pairing device to check if it requires a default password.
- 5 When the pairing is successful, **Paired but not connected** is displayed under the paired device.
-  **NOTE:** To listen to the music using a Bluetooth headset, pair and connect it first with your device.
-  **NOTE:** The message indicating successful pairing may vary depending on the type of the paired device.
-  **NOTE:** Pairing is a one-time process. Once your device successfully pairs with another device, your device recognizes that device without the need to re-enter the password.




To terminate a pairing partnership

- 1 Touch the Home button  → **Apps** button  → **Settings**  → **Wireless & networks** → **Bluetooth settings**.
- 2 Under the **Paired devices** section, touch the  icon next to a paired device.
- 3 Touch **Unpair** to erase all pairing information with that device. You need to re-enter the password if you want to restore a Bluetooth connection to that device.

To change your device's Bluetooth name

- 1 Ensure that you have turned on Bluetooth on your device ( icon in the status area of the system bar indicates that Bluetooth is enabled).
- 2 Touch the Home button  → **Apps** button  → **Settings**  → **Wireless & networks** → **Bluetooth settings** → **Device name**.
- 3 Enter a name to identify the device when you connect using Bluetooth.
- 4 Touch **OK**.

Gallery

To view and manage the pictures and videos stored on your device, touch the Home button  → **Apps** button  → **Gallery** .




The **Gallery** application displays not only the pictures and videos stored on your SD card, but also those uploaded to the Picasa web album of your Gmail account which you signed in with on your device.

To share or delete albums





All pictures and videos are grouped in separate albums as overlapping thumbnails, according to their dates, sources, or folders in which they are stored. For example, pictures taken using the device camera are grouped as **Camera**, and downloaded pictures are grouped as **Download**.

- 1 Touch and hold an album until the album is highlighted and the action bar appears on the top of the screen.



- 2 Touch more albums to select them if you want to do the same task for those albums. To cancel selection, touch the album again.
 - Touch  to view information about the selected album.
 - Touch  to post the selected album to Picasa or video album to YouTube, or to send the album using Bluetooth, messaging, e-mail, and so on.
 - Touch  to delete the selected album.

To browse picture and video thumbnails

- 1 Touch an album to display the thumbnails of all pictures and videos in the album.
- 2 To browse the thumbnails:
 - Flick thumbnails horizontally until the desired thumbnail is located.
 - From the action bar on the top of the screen, touch **By album** or **Images and videos** to sort the thumbnails as desired.
- 3 To select a thumbnail, touch and hold a thumbnail until it is highlighted and the action bar appears on the top of the screen.
 - To post a selected picture or video to Picasa, YouTube, or to send it using Bluetooth, Messaging, or Email, Gmail, and so on, touch .
 - To delete a selected picture or video, touch .
 - To set a picture as the Home screen wallpaper, touch its thumbnail to display the picture in full screen, and touch the Menu button  → **Set picture as** → **Wallpaper**. Crop the picture as needed, and then touch **Ok** to confirm.
 - To set a picture as a contact's picture ID, touch its thumbnail to display the picture in full screen, and touch the Menu button  → **Set picture as** → **Contact photo**. Select a contact from the list that appears, and then touch **Ok** to confirm.

To display a full picture



Touch a desired picture thumbnail to display the picture in full screen.

- Flick the picture to view the next or previous one.
- To bring up the picture viewing controls, touch anywhere on the screen.
- To zoom the picture in or out, you can:
 - Pinch the picture with two fingers, and then move the fingers away from each other to enlarge the view of the picture, or bring them closer together to reduce the view of the picture.
 - To zoom in or out on a particular area of the picture, tap that area twice.
 - When a picture view is being enlarged, flick or drag the enlarged picture across the screen until the required area appears.

To play a video

1 Touch a video thumbnail to start playback of the video.

2 To control playback, use these controls below the viewing screen:

- Touch the  button to pause and the  button to resume playback.
- Touch or drag the playback progress bar at the bottom to rewind or fast-forward the video.

 
Music

To open Music

Touch the Home button  → **Apps** button  → **Music** .

The Music library screen opens, which is organized by **Artists**, **Albums**, **Songs**, and **Playlists** tabs. You can touch a tab to display your desired category.


To select a song

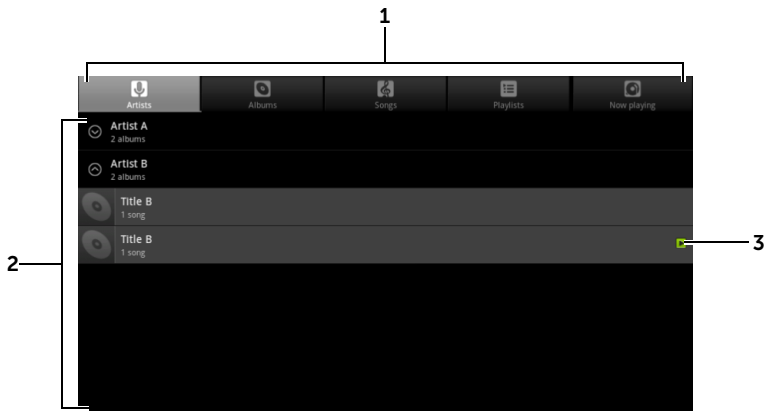

 
- 1 All the available music files are grouped into these categories: **Artists**, **Albums**, **Songs**, and **Playlists**. Touch a category to view the list within it.

NOTE: If you rotate your device to landscape mode, an additional **Now playing** category appears.

- 2 Flick the list until you find the music you want to play. For instance, to select music by artist:
 - a Flick the list of artists in alphabetical order.
 - b Touch the name of an artist. A list of albums by the artist appears.
 - c Touch an album to find the songs in the album.
 - d Touch a song to open the music playback screen and play the music.

- 3  indicates the current album or song being played.

To control music playback

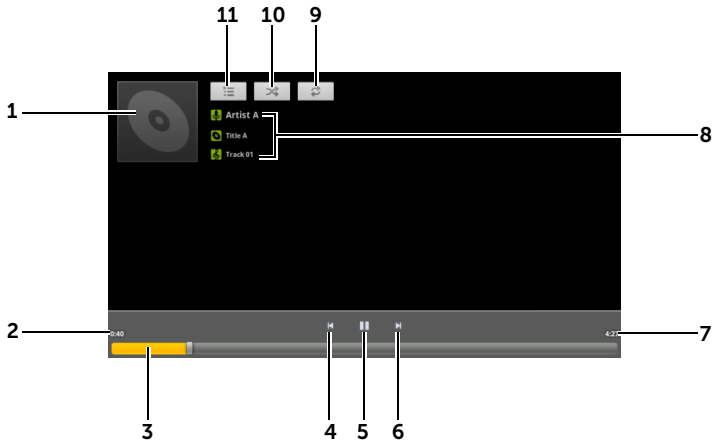

- 1 The album's cover image if present.
- 2 The passing playback time.
- 3
 - Touch the playback control bar to jump to any part of the song.
 - Drag and scroll the playback control bar forward to fast-forward the song.
 - Drag and scroll the playback control bar backward to rewind the song.
- 4
 - Touch once to jump to the beginning of the song.
 - Touch twice quickly to play the previous song.
- 5 Touch **⏮** to pause playback; touch **⏸** to resume playback.
- 6
 - Touch to play the next song.
 - Touch and hold to fast-forward the song.
- 7 The duration of the song.
- 8
 - The name of the artist, album, and the song being played.
 - Touch and hold the artist, album, or song to search for relevant information or videos from the Internet using the **Browser** or **YouTube** application, or do the search inside the **Music** application.
- 9 Touch to cycle through the repeat modes.
- 10 Touch to turn the shuffle mode on and off.

11 Go to the **Now playing** list.

 **NOTE:** Press the volume up button or volume down button to adjust the playback volume.

To create a playlist

- 1 On the **Music** screen, touch the **Artists, Albums, Songs** tabs as needed.
- 2 Flick the screen until you reach the artist, album, or song that you want to add to the playlist.
- 3 Touch and hold the artist, album, or song that you want to add in the playlist. A pop-up menu opens.
- 4 Touch **Add to playlist**.
- 5 In the **Add to playlist** window, touch **New**.
- 6 Enter the name for your new playlist in the text field and then touch **Save**.


Calendar

Use the calendar to schedule and manage your events, meetings, and appointments.

To open the calendar

Touch the Home button  → **Apps** button  → **Calendar** .

To set up an event

- 1 On any calendar view, touch the  icon around the top right corner to open the event details screen.
- 2 Type the event name using the on-screen keyboard.
- 3 If you have set up more than one account on your device, in the **Calendar** option, choose the account calendar to which to add the event.

- 4 If there is a time period for the event, touch and type the **From** and **To** date and time.

If the event is a special occasion such as a birthday or spans a whole day, set the **From** and **To** date, and then select the **All day** check box.

- 5 Type the event location and description.
- 6 Decide whether it is a recurring event in **Repetition** and choose how often it occurs.
- 7 In **Reminders**, set when the reminder appears before the event.
- 8 To invite your friends to join this event, type their e-mail addresses into the **Add guests** text box. The invitation will be e-mailed to them when this event is set up.
- 9 Touch **Done** and the event is created.



NOTE: To quickly set up an event in day, week, or month view, touch and hold an empty time slot. A new event details screen opens with the selected time slot and date in the **From** and **To** fields.

To view the calendar

You can display the calendar in daily, weekly, or monthly view. To change the calendar view, touch the **Day**, **Week**, or **Month** tab.

While viewing the calendar you can:

 
- In the Day or Week view, touch an event to open a quick view window of the event. On the quick view window, you can touch **Details** to view details about the event, or touch **Delete** to delete the event.
- Touch and hold an event to modify the event.

To view and synchronize multiple calendars

If you have set up more than one account on your device, you can view multiple calendars from the accounts on your device. You can configure which calendars to synchronize to the device, and which of those to show or hide on the device in **Calendar**.

To set whether calendars are visible, follow the steps below:

- 1 In **Calendar**, under the **Day** or **Week** view, the controls panel on the right displays all the calendars from the accounts you have on your device, indicated by tabs with different colors.
- 2 If you want to show the events from an account's calendar, touch the account name to make it highlighted.
- 3 If you want to hide the events from an account's calendar, touch the account name again to make it unhighlighted.

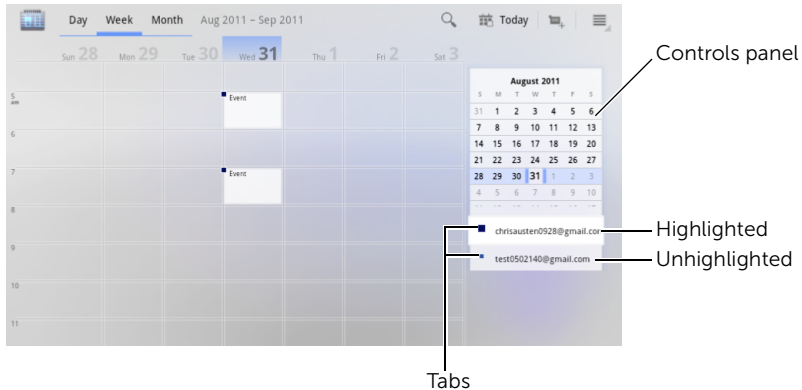


To set whether calendars are synchronized to the device, follow the instructions below:

In **Calendar**, touch the Menu button (☰) on the device or the Menu button (☰) on the screen → **Settings**. The screen displays all the calendars you have added or subscribed to for each account on your device, organized by account. Touch the name of an account, select/clear the **synced** check box to show/hide its calendar on your device.

Event reminders

If you set a reminder for an event, the upcoming event icon (🔔) appears in the notifications area of the system bar when the reminder time arrives.


To view, dismiss, or snooze a reminder

- 1 Touch the upcoming event icon to  open the notification.
- 2 Touch the upcoming event name to display the event.



NOTE: If you have other pending event reminders, these events will also appear on the screen.

 
- 3 On the **Calendar notifications** menu that appears, you can do the following:
 - Touch **Snooze all** to put off all event reminders for five minutes.
 - Touch **Dismiss all** to turn off all event reminders.

Press  to keep the reminders pending in the notifications area of the system bar.

Clock

Your device can work as a desk alarm clock to display current time and date, local weather, and play picture slideshow and music.

Touch the Home button  → Apps button  → Clock .

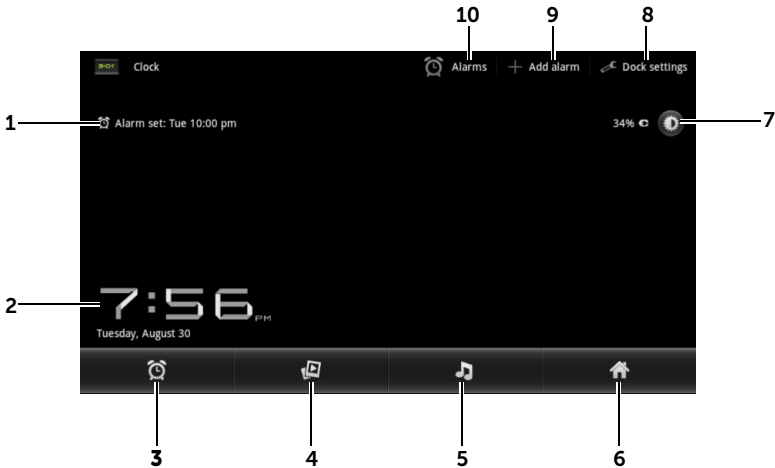

-
- 1 Displays the first active alarm time.

 - 2 The current time and date.

 - 3 Touch to set the alarm.

 - 4 Touch to play the slideshow of the pictures available in the **Gallery** application.

 - 5 Touch to start the **Music** application and choose the music to play.

 - 6 Touch to return to the last Home screen you viewed.

 - 7
 - Touch to turn the backlight down to the minimum level.
 - Touch and hold to turn off the backlight and only display the current time and date.

 - NOTE:** To turn on the backlight, touch anywhere on the screen.


 - 8 **Dock settings:** Allows you to configure dock settings, such as audio, insertion sound, and so on.

 - 9 **Add alarm:** Allows you to set alarms.

-
- 10 Alarms:** Allows you to open the **Alarms** screen and view the alarms that have been set.
-

To set an alarm

You can set multiple alarms.

- 1 On the **Clock** main screen, touch .
- 2 On the **Alarms** screen, touch **Add alarm**.
- 3 Set the alarm time from the **Set time** menu that appears. Adjust the time by touching the up/down arrow keys, or touch the hour and minute fields to flick to the desired value. Flick **AM** to change to **PM** or vice versa, then touch **Set** when done.
- 4 The **Set alarm** menu opens with these settings:

Turn alarm on	Turn on the alarm that you have set on the device.
Time	Display the alarm time you have set. Touch this field if you want to change the alarm time.
Repeat	Select the days you want the alarm to ring, then touch OK . NOTE: If you did not select any days for the alarm, your alarm will only go off once.
Ringtone	Select the alarm ringtone.
Vibrate	Select the check box if you want the device to vibrate when the alarm goes off.
Label	Give the alarm a name for a special event.

- 5 Touch **Done** to set the alarm.



NOTE: On the **Alarms** screen you can also add a new alarm by touching **Add alarm**.

To temporarily disable an alarm



On the **Alarms** screen, clear the green check box of the alarm time you want to disable.

To delete an alarm



- 1 On the **Alarms** screen, touch the alarm time you want to delete.
- 2 On the **Set alarm** screen, touch **Delete**.


To enable the alarm in silent mode


You can choose if the alarm should ring when the device is in silent mode.

- 1 On the **Alarms** screen, touch the Menu button  on the device or the Menu button  on the screen → **Settings**.
- 2 Touch **Alarm in silent mode** to set if the alarm should ring when the device is in silent mode.

Calculator


- Touch the Home button  → **Apps** button  →



Calculator . The basic calculator panel opens.

- Perform calculations by touching the corresponding buttons on the calculator panel; touch the  button to clear the displayed numbers or symbols.





Sound Recorder

Open this application to record voice and sounds and then play them back. You can also set the recording as a ringtone for your device.

 **NOTE:** The sound recorder only supports recording in the amr format.




1 Touch the Home button  → **Apps** button  → **Sound**

Recorder .


- Touch  to start recording.
- Touch  to end recording.
- Touch  to start playback of the recording; touch  to stop playback.

2 Touch **Save this recording** to save the recording in the internal storage memory.

3 To play back a sound recording again, touch the Home button


 → **Apps** button  → **Music**  → **Playlists** → **My**

recordings, and then select a recording to play. For information about **Music**, see "Music" on page 122.

 **NOTE:** For information about **Music**, see "Music" on page 122.

 
Connect and Sync with a Computer Using Dell Mobile Sync

The Dell Mobile Sync (powered by Nero™) software allows you to copy or sync music, photos, videos, and Outlook contacts between your device and a computer.

 **NOTE:** The Dell Mobile Sync software is supported by Microsoft Windows XP (SP3), Windows Vista, and Windows 7 operating systems.

To install the Dell Mobile Sync software on your computer

- 1 Connect the supplied USB cable to your device and a computer.

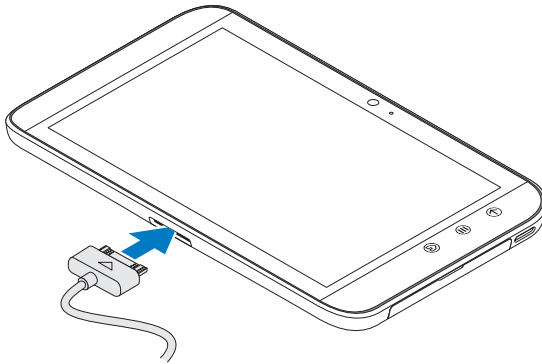

- 2 Obtain the device driver using one of the following methods and install the driver on your computer:
 - On your computer, find the driver named **Drivers.zip** from the removable drive which represents the internal tablet storage.
 - Download the driver from the following website:


support.dell.com/support/downloads.


After the driver installation is complete, the Dell Mobile Sync installer may start automatically on computers running the Microsoft Windows XP (SP3), Windows Vista, and Windows 7 operating systems.

- 3 If the Dell Mobile Sync installer does not start automatically:
 - a Double-click the new **Removable Disk** that appears on your computer.
 - b Navigate to the **Dell Mobile Sync** folder on the removable disk.
 - c Double-click the **InstallDellMSync.exe** file to start the installation.

 **NOTE:** You can also download and install the Dell Mobile Sync software from support.dell.com/support/downloads.

To sync music, photos, videos, and Outlook contacts:

- 1 Ensure that the supplied USB cable is connected to your device and a computer.
- 2 Double-click the Dell Mobile Sync icon  on the Windows desktop. Your device appears under the **Devices** section in the Dell Mobile Sync software.
- 3 After the copy or sync is complete, disconnect the USB cable.

 **NOTE:** For information about the Dell Mobile Sync software and to learn how to sync your device to a computer using Wi-Fi, see the documentation included in the Dell Mobile Sync software.

Troubleshooting

Problem	Possible causes	Possible solutions
PIN Code is blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card.
System problems		
Battery does not charge	The battery or battery charger is damaged.	Contact the dealer.
	The environmental temperature is lesser than 0°C or higher than 45°C.	Ensure that the environmental temperature is between 0°C and 45°C.
	Poor contact between the battery and charger.	Check all connectors to ensure that all connections have been properly made.
Unable to turn the device on.	The battery is fully discharged.	Charge the device.
Shortened standby time	The duration of standby time is affected by your service provider's system configuration. The same device used with different service providers' systems does not have the same duration of standby time.	If you are located in an area where the network signal is weak, temporarily turn off your device.
	If you are not able to connect to the network, the device will continue to send out signals as it attempts to locate a base station. This consumes battery charge and consequently shortens standby time.	Move to a location where the network is accessible, or temporarily turn off your device.

 
Problem	Possible causes	Possible solutions
Messaging problems		
Unable to send or receive text messages.	Your device is in Airplane mode with no wireless connectivity.	<ol style="list-style-type: none"> 1 Touch the Time area in the system bar to open the Status Details. 2 Touch anywhere in the Status Details. Then, the Quick Settings display below the Status Details. 3 Drag the switch to OFF to disable the Airplane mode.
	The signal strength is not strong enough.	Try moving to a different location for better signal reception.
Unable to send or receive e-mail.	The Internet connection or the e-mail setting is not configured properly.	Check your network connection, and confirm with your e-mail service provider if your e-mail setting has been configured correctly.

Problem	Possible causes	Possible solutions
Internet problems		
Unable to connect to the network.	Invalid SIM card.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space or if you are inside a building, move closer to a window.
	Your device is in Airplane mode with no wireless connectivity.	<ol style="list-style-type: none"> 1 Touch the Time area in the system bar to open the Status Details. 2 Touch anywhere in the Status Details. Then, the Quick Settings display below the Status Details. 3 Drag the switch to OFF to disable the Airplane mode.
Media problems		
Windows Media Player on my computer cannot play the sounds of the video captured using the device.	The device records video sounds in amr format, but Windows Media Player does not support amr format.	Play the video using a video player that supports amr format, such as QuickTime.


Starting Your Device in the Safe Mode


If you find your device does not work as expected because of an application you installed, try to start your device in the Safe mode. In the Safe mode, all third-party applications are disabled and you can remove any problematic applications to continue using your device normally.

To enter the Safe mode:

- 1** Ensure that your device is powered off.
- 2** Press and hold the Power and Sleep/Wake button  to turn on your device.

The DELL logo appears twice as the device starts up.





 
 

- 3 When the DELL logo appears the second time, touch and hold the Menu button  until "Safe mode" appears at the bottom of the screen.

 **NOTE:** To exit Safe mode, turn off your device and turn it on again.

Emergency Recovery



 
 

 



If your device does not turn on or respond due to corrupt system files, you can perform an emergency recovery by restoring your device to the factory default state, or by upgrading the software on your device.

To restore your device to the factory default state

- 1 Press and hold the power button  and then touch the **Power off** option on the screen to turn off the device.
- 2 Press and hold the volume up button , and without releasing  press and hold the power button , until the configuration menu appears on the screen.
- 3 To restore the device to the factory default state, press the volume up button  or the volume down button  to move the highlight bar on the menu to either of these options:
 - **Factory reset (User data only):** Restores the device to the factory default state and erases all your user data including contacts, settings, and downloaded applications from the internal application storage.
 - **Factory reset (User data and internal tablet storage):** Restores the device to the factory default state and erases the following data:
 - All your user data including contacts, settings, and downloaded applications stored in the internal application storage.
 - All your personal files except the preinstalled ones stored in the internal tablet storage.
- 4 Press the power button  to start the reset process.

- 5 Wait for the device to restart.

To upgrade the device software

- 1 Insert an SD card on your computer.
 - 2 On your computer, go to **support.dell.com** and follow the instructions to download the software upgrade package "update.pkg" and save it on the SD card.
-  **NOTE:** The device only recognizes the software upgrade package as "update.pkg". Rename the downloaded package to "update.pkg" if it is not named so.
- 3 Eject the SD card from the computer and install the SD card into the device.
 - 4 Press and hold the power button  and then touch the **Power off** option on the screen to turn off the device.
 - 5 Press and hold the volume up button , and without releasing  press and hold the power button , until the configuration menu appears on the screen.
 - 6 Press the volume up button  or the volume down button  to move the highlight bar to the **Software upgrade via update.pkg on SD card** option, and press the power button  to confirm your selection.
 - 7 Press the power button  to confirm and start upgrading the software package.
 - 8 Wait for the device to load the files and restart.

Index

A

- Airplane Mode, 66
- Alarm Clock, 128
- Android keyboard, 55
- Android Market, 101
- Applications
 - Definition, 17
 - Erase data, 59
 - Navigate, 37
 - Recently used, 38
 - Shortcuts, 38

B

- Battery
 - Charge, 12
- Bluetooth, 116
- Button
 - Back, 7
 - Home, 8
 - Menu, 7
 - Power and Sleep/Wake, 7
 - Volume up/down, 6

C

- Calculator, 130
- Calendar, 124

Camcorder, 115

- Camera, 114
 - Camcorder, 115
 - Shoot videos, 115
 - Take pictures, 115

Charging, 12

- Connection
 - Mobile networks, 62
 - Wi-Fi, 63

- Contacts, 40
 - Add, 40
 - Sync, 43
 - View, 41

- Controls, 6
 - Touch screen, 14

Customize, 104

D

Data connection, 62

Date, 107

Dell Mobile Sync, 132

- Dell Stage
 - widgets, 30

- Device
 - Customize, 104
 - Emergency recovery, 137
 - Factory reset, 137
 - Overview, 6

- Protect, 109
- Safe Mode, 136
- Settings, 59
- Setup, 11
- Software upgrade, 138
- Turn off, 13
- Turn on, 13

Disable all connections, 66

Display settings, 105

E

E-mail, 76

Emergency recovery, 137

Erase all data, 60

F

Factory reset, 137

Force power off, 61

G

Gallery, 119

Gmail, 80

Google Account
Setup, 80

Google Maps, 86

Google Maps Navigation, 97

Google Search, 58

Google Talk, 83

H

Home screen
Customize, 25

I

Internet
Browse, 66
Connection, 62

K

Keyboard
Android, 55
Swype, 51

L

Language, 108

M

Maps, 86

Messaging, 44
Compose, 44
Receive, 48

Mobile networks, 62

Music, 122
Create a playlist, 124
Playback, 123

N

Navigation, 97

P

Pictures and videos, 119

PIN

Change, 113

Device, 111

Enable, 113

Places, 97

Pop-Up menu, 50

Power Management

Settings, 104

R

Recorder, 131

Ringtone, 106

S

Safe Mode, 136

Screen

Orientation, 17

Turn off/on, 13

Screen Unlock Pattern, 109

Create, 109

Disable/change, 110

Settings, 110

SD card

Insert, 11

Remove, 59

Unmount, 59

Search, 58

Settings

Date and time, 107

Display, 105

Language, 108

Power Management, 104

Sound and ringtone, 106

Shortcuts, 38

Definition, 17

SIM card

Insert, 11

Software upgrade, 138

Sound, 106

Stage widgets, 30

Swype keyboard, 51

Synchronize Google Data, 103

Synchronize with Computer

Use Dell Mobile Sync, 132

T

Text message, 44

Time, 107

Time zone, 107

Touch screen, 14

Troubleshooting, 134

V

Voice Search, 58

W

Web

Applications, 79

Bookmarks, 73

Widgets

Definition, 17

Google Search, 58

Wi-Fi, 63

Y

YouTube, 99