



# Dell EMC Solutions for Microsoft Azure Stack HCI Networking Guide

## **Abstract**

This guide provides Microsoft Azure Stack HCI networking deployment examples using Dell EMC Storage Spaces Direct Ready Nodes and Dell EMC Networking switches.

May 2019

## Revisions

Date	Description
May 2019	Revised Appendix B
March 2019	Initial release

The information in this publication is provided "as is." Dell Inc. makes no representations or warranties of any kind with respect to the information in this publication, and specifically disclaims implied warranties of merchantability or fitness for a particular purpose.

Use, copying, and distribution of any software described in this publication requires an applicable software license.

© 2019 Dell Inc. or its subsidiaries. All Rights Reserved. Dell, EMC, Dell EMC and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Dell believes the information in this document is accurate as of its publication date. The information is subject to change without notice.

# Table of contents

<b>Revisions.....</b>	<b>2</b>
<b>1   Introduction.....</b>	<b>6</b>
1.1   Typographical conventions.....	6
1.2   Attachments.....	6
<b>2   Hardware Overview.....</b>	<b>7</b>
2.1   Dell EMC Networking S5248F-ON .....	7
2.2   Dell EMC Networking S3048-ON .....	7
2.3   Dell EMC S2D Ready Nodes.....	7
2.4   Management system .....	8
2.5   Supported Dell EMC Networking switches.....	8
<b>3   Topology.....</b>	<b>9</b>
3.1   Connections to leaf switches.....	10
3.2   Connections to OOB management switch .....	11
<b>4   Configuration planning .....</b>	<b>12</b>
4.1   RDMA overview.....	12
4.2   DCB overview.....	12
4.3   Ready Node network adapter options .....	12
4.3.1   QLogic FastLinQ QL41262.....	12
4.3.2   Mellanox ConnectX-4 Lx .....	12
4.4   Adapter/RDMA/DCB options .....	13
4.5   VLANs and IP addressing .....	13
<b>5   Configure network adapters .....</b>	<b>14</b>
5.1   Reset network adapters to factory defaults .....	14
5.2   Configure QLogic QL41262 adapters.....	15
5.3   Verify Mellanox ConnectX-4 Lx adapter settings .....	19
<b>6   Leaf switch configuration prerequisites .....</b>	<b>22</b>
6.1   Check switch OS version.....	22
6.2   Verify license installation .....	22
6.3   Factory default configuration .....	23
<b>7   Configure leaf switches .....</b>	<b>24</b>
7.1   General settings.....	25
7.2   Configure port-groups.....	25
7.3   Configure VLANs and VRRP.....	26
7.4   Configure storage interfaces .....	27
7.5   Configure in-band management interfaces .....	28

7.6	Configure VLT.....	29
7.7	Configure DCB.....	30
8	Switch validation.....	33
8.1	General commands .....	33
8.1.1	show interface status.....	33
8.1.2	show vlan.....	33
8.1.3	show lldp neighbors.....	34
8.1.4	show vrrp brief .....	34
8.2	VLT validation commands .....	35
8.2.1	show vlt <i>domain_id</i> .....	35
8.2.2	show vlt <i>domain_id</i> backup-link.....	35
8.2.3	show vlt <i>domain_id</i> mismatch.....	36
9	S2D Ready Node configuration and deployment.....	37
9.1	Initial state.....	37
9.2	Ensure DCB is disabled on Intel X710 adapters .....	38
9.3	Install roles and features .....	39
9.4	Configure the in-band management and VM network.....	39
9.5	Configure storage networks.....	40
9.5.1	Configure storage VLANs.....	40
9.5.2	Configure storage IP addresses .....	40
9.5.3	Enable RDMA.....	41
9.5.4	Enable iWARP on QLogic adapters .....	41
9.5.5	Enable jumbo frames on NICs.....	41
9.6	Join Ready Nodes to the Active Directory domain .....	42
9.7	Clean disks .....	42
9.8	Run the Test-Cluster cmdlet.....	44
9.9	Create the cluster .....	44
9.10	Configure a cluster witness .....	45
9.11	Enable S2D.....	46
9.12	Create storage volumes .....	46
9.13	Configure DCB on Ready Nodes.....	47
10	PowerShell validation commands and output .....	48
10.1	Get-NetAdapter.....	48
10.2	Get-VMSwitch.....	48
10.3	Get-NetIPAddress .....	49
10.4	Get-NetRoute.....	49

10.5	Get-DnsClientServerAddress .....	49
10.6	View VLAN IDs .....	49
10.7	Get-NetAdapterRdma.....	50
10.8	Ensure iWARP is enabled (QLogic adapters only).....	50
10.9	View jumbo frame settings .....	50
10.10	Storage validation commands .....	51
10.10.1	Get-PhysicalDisk .....	51
10.10.2	Get-StoragePool.....	52
10.10.3	Get-VirtualDisk .....	52
10.11	DCB validation commands .....	52
10.11.1	Get-NetQosPolicy.....	52
10.11.2	Get-NetAdapterQos.....	53
10.11.3	Get-NetQosFlowControl .....	54
10.11.4	Get-NetQosTrafficClass .....	54
10.11.5	Get-NetQosDcbxSetting.....	54
10.11.6	Verify Mellanox adapters are set to “Host in Charge” .....	54
11	Switch DCB validation commands .....	55
11.1	Show queuing statistics .....	55
11.2	Show interface priority flow control.....	55
A	Validated components .....	56
A.1	Dell EMC Networking Switches .....	56
A.2	S2D Ready Nodes .....	56
A.3	Management System.....	57
A.4	Dell EMC Networking Optics and Cables .....	58
A.5	S2D Ready Node and management system software .....	58
B	Port-groups.....	59
C	Technical resources .....	61
D	Fabric Design Center .....	62
E	Support and feedback .....	63

# Introduction

This guide provides Dell EMC Solutions for Microsoft Azure Stack HCI greenfield network deployment examples using Dell EMC Storage Spaces Direct Ready Nodes and Dell EMC Networking switches.

S2D is included with Microsoft Windows Server 2019 Datacenter and Windows Server 2016 Datacenter editions. S2D uses locally attached drives on industry-standard servers to create highly available software-defined storage.

S2D has two deployment options: converged and hyper-converged. In a converged deployment, storage and compute resources are in separate clusters which allow for scaling of storage and compute clusters independently from each other. A hyper-converged deployment uses one cluster for compute and storage. This allows Hyper-V virtual machines to run directly on the servers providing the storage which can simplify deployment and reduce hardware costs. This deployment guide uses a hyper-converged S2D deployment.

In an S2D-enabled cluster, storage and non-storage network traffic may share the same physical network connections (a converged network), or storage traffic may be placed on dedicated physical network connections (a non-converged network). The examples in this document use a non-converged network.

For more information, see the [Dell EMC Solutions for Microsoft Azure Stack HCI Deployment Guide](#).

## 1.1

## Typographical conventions

The CLI and GUI examples in this document use the following conventions:

Monospace Text

CLI examples

Underlined Monospace Text

CLI examples that wrap the page

*Italic Monospace Text*

Variables in CLI examples

**Bold Monospace Text**

Commands entered at the CLI prompt and highlighted information in CLI output

**Bold text**

UI elements and information entered in the GUI

## 1.2

## Attachments

This document in .pdf format includes one or more file attachments. To access attachments in Adobe Acrobat Reader, click the  icon in the left pane halfway down the page, then click the  icon.

## 2

# Hardware Overview

This section briefly describes the hardware used to validate the deployment examples in this document. [Appendix A](#) contains a complete listing of hardware and software validated for this guide.

## 2.1

### Dell EMC Networking S5248F-ON

The Dell EMC Networking S5248F-ON is a 1-Rack Unit (RU), multilayer switch with 48xSFP28 25GbE ports, 2xQSFP28-DD ports (2x100GbE per port), and 4xQSFP28 100GbE ports. This guide uses two S5248F-ONS as leaf switches for in-band traffic. Section 2.5 contains a list of supported leaf switches for S2D.



Figure 1 Dell EMC Networking S5248F-ON

## 2.2

### Dell EMC Networking S3048-ON

The Dell EMC Networking S3048-ON is a 1-RU switch with forty-eight 1000BASE-T ports and four 10GbE SFP+ ports. This guide uses one S3048-ON for out-of-band (OOB) management traffic.



Figure 2 Dell EMC Networking S3048-ON

## 2.3

### Dell EMC S2D Ready Nodes

Dell EMC Microsoft Storage Spaces Direct Ready Nodes are pre-configured with certified components that simplify ordering and reduce deployment risks. S2D Ready Nodes are built on Dell EMC PowerEdge R740xd2, R740xd, R640, and R440 servers and are available in Hybrid (mix of HDD and SSD), All-Flash (SSD), and NVMe storage configurations. See the [Dell EMC Microsoft Storage Spaces Direct Ready Nodes](#) page for detailed configuration options.

Four R740xd S2D Ready Nodes with Hybrid storage configurations are used in the examples in this guide.



Figure 3 PowerEdge R740xd S2D Ready Node

## 2.4

## Management system

A management system is used to deploy and manage the S2D cluster.

In this guide, a Dell EMC PowerEdge R640 server is used as the S2D management system. It also serves as the Active Directory (AD) domain controller and DNS server for the examples provided. Optionally, existing AD and DNS infrastructure may be used provided it has network connectivity to the S2D Ready Nodes via the in-band management network.

---

**Note:** The management system is not part of the S2D cluster and does not contribute storage to it.

---



Figure 4 PowerEdge R640 management system

## 2.5

## Supported Dell EMC Networking switches

The examples provided in this deployment guide use two Dell EMC Networking S5248F-ON switches running OS10 Enterprise Edition (OS10EE) for storage, in-band management, and VM traffic. One Dell EMC Networking S3048-ON switch is used for out-of-band management traffic.

For the complete list of supported Dell EMC Networking switches and minimum operating system versions, see [Support Matrix for Dell EMC Solutions for Microsoft Azure Stack HCI](#).

---

**Note:** Switch configuration steps in this deployment guide are specific to OS10EE. For switch configuration examples using OS9, see [Sample Switch Configurations - Dell EMC Solutions for Microsoft Azure Stack HCI](#).

---

### 3

## Topology

S2D clusters are limited to 16 nodes. In this deployment, four S2D Ready Nodes are installed in a single rack along with two leaf switches and one OOB management switch. The devices are cabled as shown in Figure 5.

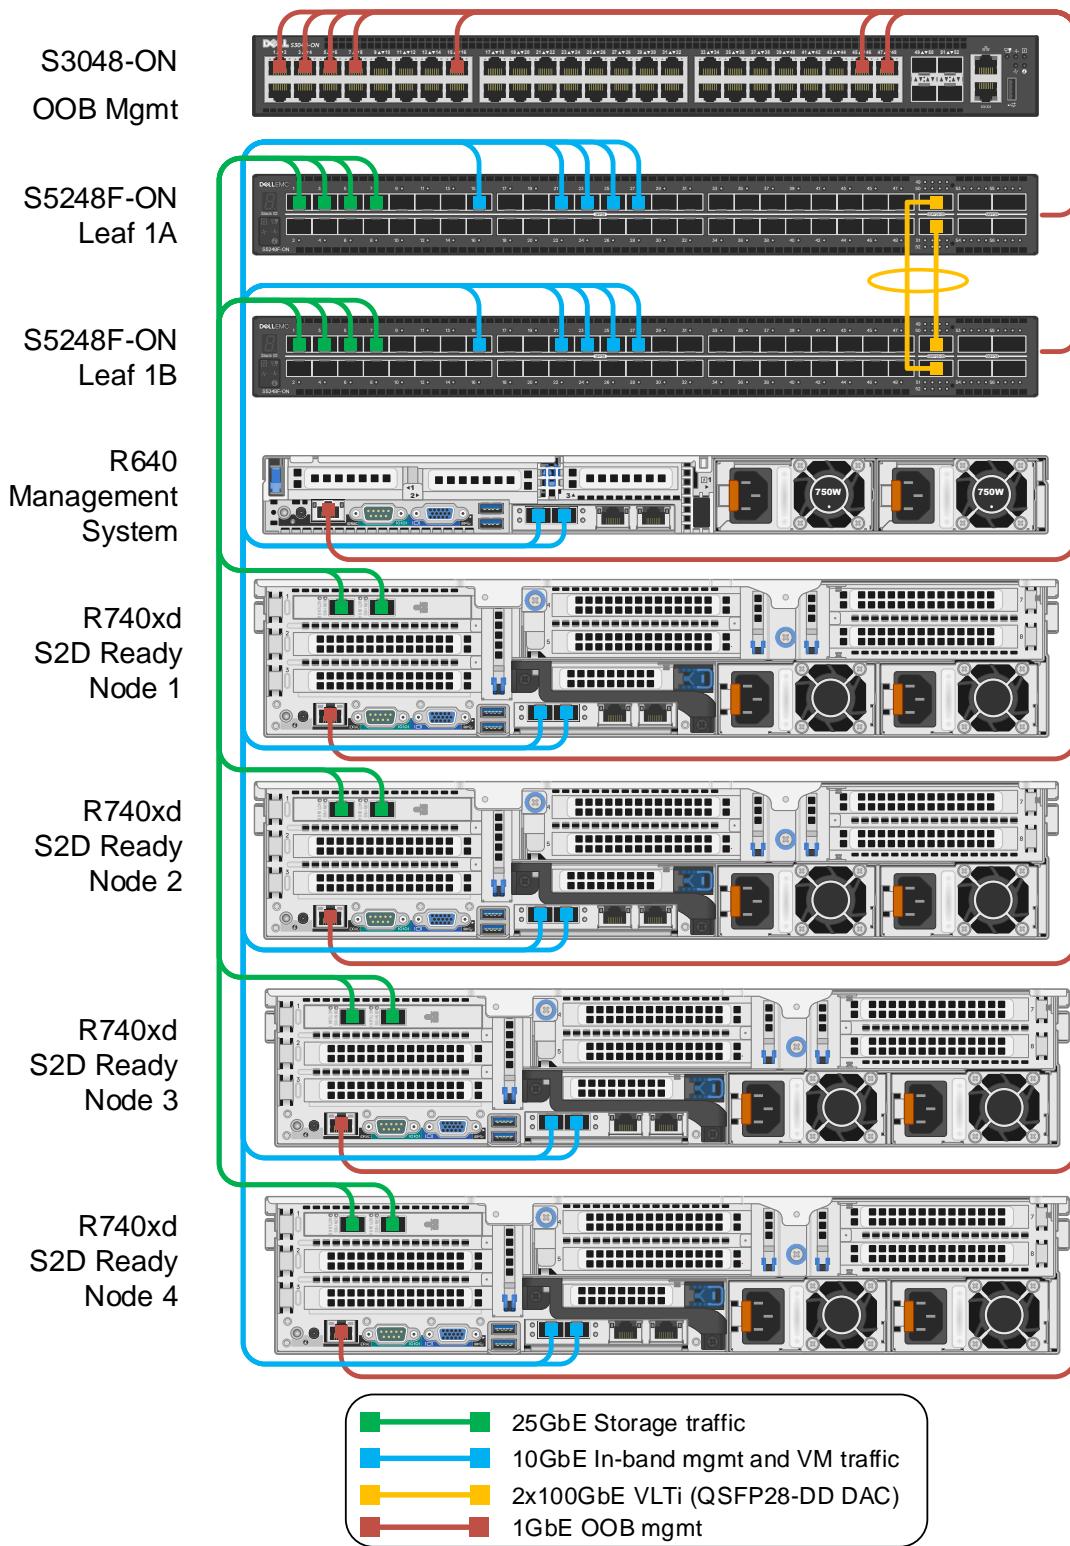


Figure 5 All cabling for the S2D environment

The two leaf switches are connected to spine switches upstream (not shown). Using two leaf switches provides fault tolerance and twice the bandwidth.

**Note:** Spine switch configuration is beyond the scope of this guide and is covered in [Dell EMC Networking Layer 3 Leaf-Spine Deployment and Best Practices with OS10EE](#).

### 3.1 Connections to leaf switches

Each S5248F-ON switch has 48x25GbE ports available for connections to S2D Ready Nodes and other servers in the rack. Connections from the Ready Nodes to the leaf switches are used for S2D storage traffic, in-band host management traffic, and VM traffic. All traffic may share the same physical connections (converged network), or storage traffic may be placed on dedicated network connections (non-converged network).

**Note:** All examples in this document use the non-converged network configuration shown in Figure 6.

Two 25GbE connections from each Ready Node, shown in green, are dedicated for S2D storage traffic. In-band host management and VM traffic share two 10GbE connections from the rNDC (rack server network daughter card), shown in blue, to the leaf switches.

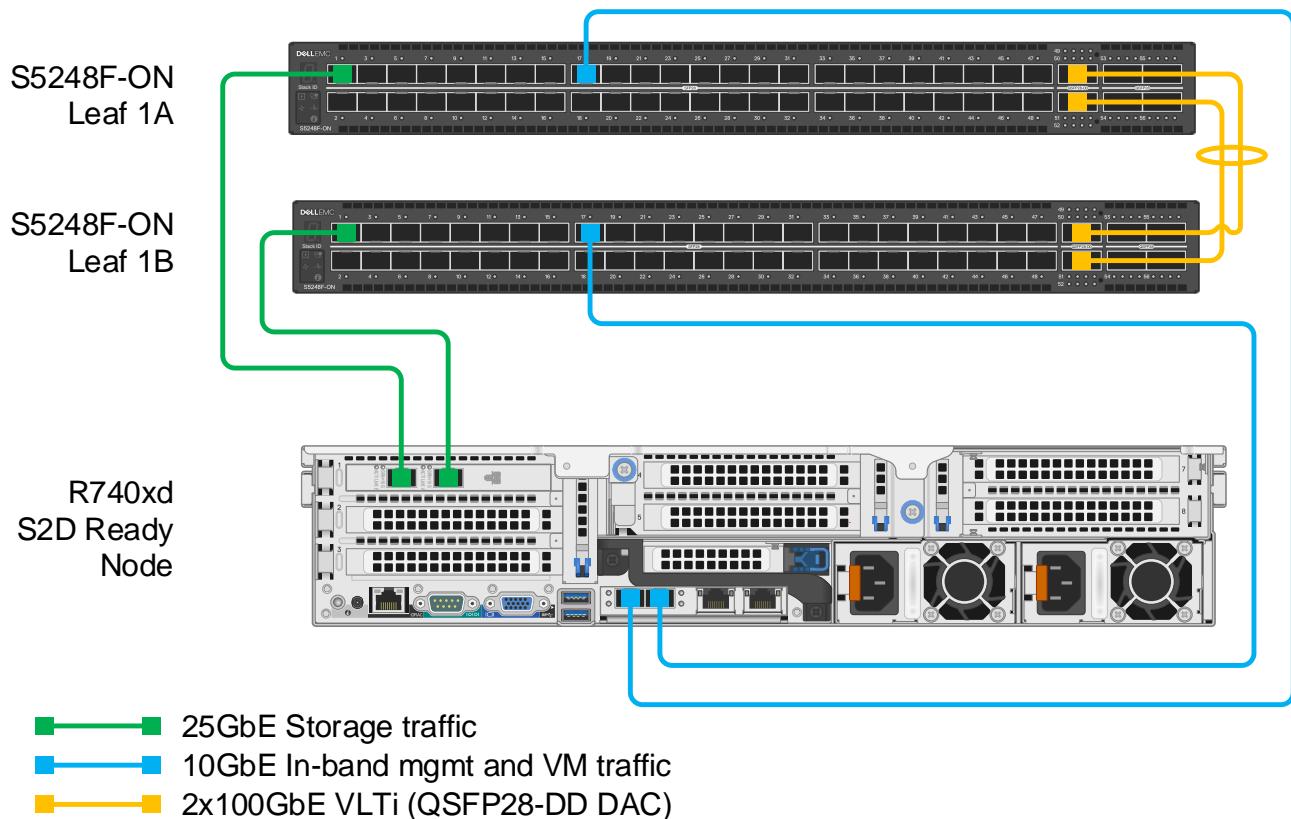


Figure 6 S2D Ready Node with non-converged connections

The Virtual Link Trunking interconnect (VLTi) connections use the two 2x100GbE QSFP28-DD ports available on each S5248F-ON.

### 3.2

## Connections to OOB management switch

The OOB management network is an isolated network for remote management of servers, switches, and other devices. It is also used to carry heartbeat messages sent between leaf switches configured as VLT peers.

Dell EMC recommends using at least one S3048-ON switch per 42-RU rack for OOB management network connections. Each S3048-ON has forty-eight 1GbE Base-T ports for connections to server iDRACs and leaf switch management ports as shown in Figure 7. Four 10GbE SFP+ ports are available on the S3048-ON for uplinks to the OOB management network core (links not shown).

**Note:** When running OS10EE, the S3048-ON will function as an OOB management switch with its factory default configuration. By default, all ports are in switchport mode, in VLAN 1, administratively up, and rapid per-VLAN spanning tree plus (RPVST+) is enabled. At a minimum, Dell EMC recommends changing the admin password to a complex password during the first login.

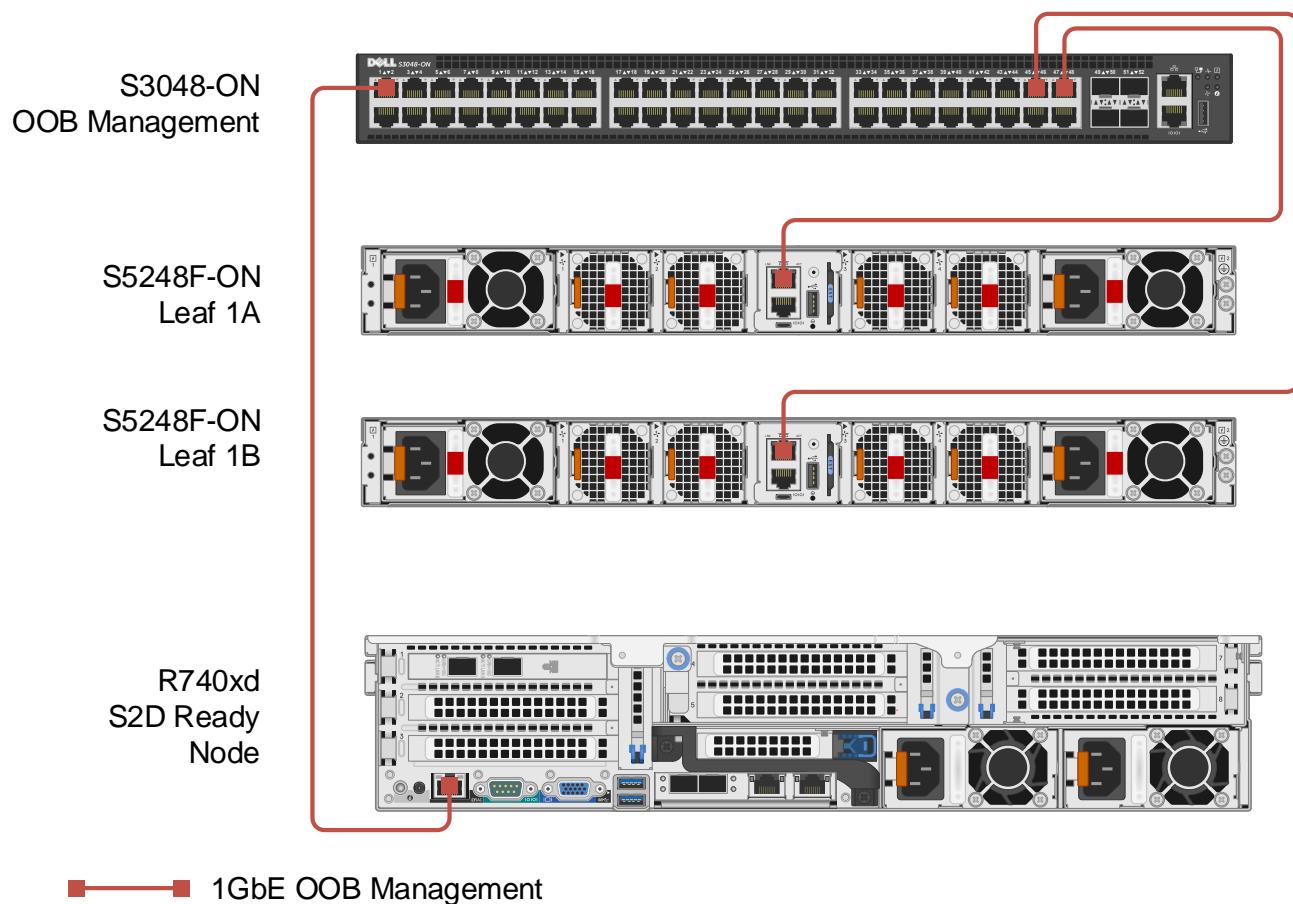


Figure 7 OOB management network connections

**Note:** An existing 1GbE Base-T switch may be used as an alternative to the S3048-ON. Optionally, for small deployments, the dedicated iDRAC port on each Ready Node may be connected to available ports on either one of the two S5248F-ON leaf switches. Use an SFP-1GbE Base-T adapter, Dell EMC part number XTY28, for each iDRAC connection. The S5248F-ON ports used for iDRAC connections must be in a port-group set to 10GbE with the mode `eth 10g-4x` command. See [Appendix B](#) for more information on port-groups.

## 4 Configuration planning

The network adapters installed in the Ready Nodes determine which Remote Direct Memory Access (RDMA) options are available and whether Data Center Bridging (DCB) is required or not.

### 4.1 RDMA overview

S2D Ready Nodes use network adapters that are RDMA capable. RDMA significantly increases throughput and lowers latency by performing direct memory transfers between servers.

There are two implementations of RDMA supported with S2D Ready Nodes:

1. RDMA over Converged Ethernet (RoCE). RoCE is defined by the InfiniBand Trade Association (IBTA). S2D Ready Nodes with Mellanox ConnectX-4 Lx adapters use RoCEv2. RoCEv2 uses UDP/IP as its transport protocol.
2. Internet Wide-area RDMA Protocol (iWARP). iWARP is defined by the Internet Engineering Task Force (IETF) and uses TCP/IP as its transport protocol.

### 4.2 DCB overview

DCB provides enhancements to Ethernet communication with Priority Flow Control (PFC) and Enhanced Transmission Selection (ETS). Priority flow control is used to prevent frame loss due to buffer overflows for selected traffic classes such as storage traffic. ETS is used to guarantee a minimum percentage of bandwidth for selected traffic classes. For example, 60% of available bandwidth may be reserved for storage traffic with the remaining 40% reserved for all other traffic.

---

**Note:** With ETS, 100% of the bandwidth is available for all traffic unless there is contention between traffic classes.

---

DCB is not required for this deployment. However, Dell EMC recommends using DCB if NVMe drives are in use on the Ready Nodes.

### 4.3 Ready Node network adapter options

#### 4.3.1 QLogic FastLinQ QL41262

The QLogic FastLinQ QL41262 is a dual port 25GbE network adapter that supports both iWARP and RoCE.

---

**Note:** Dell EMC S2D Ready Nodes with QLogic FastLinQ QL41262 adapters are only validated with iWARP. Ready Nodes with Mellanox ConnectX-4 Lx adapters are validated with RoCEv2.

---

If QLogic QL41262 adapters with iWARP enabled are used, DCB is not required. However, Dell EMC recommends using DCB if NVMe drives are in use.

#### 4.3.2 Mellanox ConnectX-4 Lx

The Mellanox ConnectX-4 Lx is a dual port 25GbE network adapter that supports RoCEv2.

If Mellanox ConnectX-4 adapters are used, DCB is not required. However, Dell EMC recommends using DCB if NVMe drives are in use.

## 4.4 Adapter/RDMA/DCB options

This guide is applicable to the following network adapter, RDMA, and DCB combinations:

- QLogic QL41262 – iWARP with or without DCB
- Mellanox ConnectX-4 Lx – RoCEv2 with or without DCB

## 4.5 VLANs and IP addressing

Table 2 shows the three VLANs used in this deployment. VLAN 1611 uses the 10GbE connections for in-band management and VM traffic. VLANs 1613 and 1614 are for storage traffic on the 25GbE links.

A gateway is configured using Virtual Router Redundancy Protocol (VRRP) to allow VLAN 1611 traffic to be routed. A virtual IP address, 172.16.11.254 in this example, is shared by the two leaf switches. Storage traffic on VLANs 1613 and 1614 is not routed in this deployment.

VLAN 1611 traffic uses a Hyper-V virtual switch (vSwitch), named **ProdSwitch** in this example, configured for Switch Embedded Teaming (SET). SET allows between one and eight physical Ethernet network adapters to be grouped into one or more software-based virtual network adapters.

The two storage VLANs in this deployment use the physical NICs instead of a vSwitch for best performance.

Table 1 VLANs and network IP addresses

VLAN ID	Description	Network	Gateway	vSwitch
1611	In-Band management and VM traffic	172.16.11.0/24	172.16.11.254	ProdSwitch
1613	Storage 1	172.16.13.0/24	Not used	Not used
1614	Storage 2	172.16.14.0/24	Not used	Not used

The FQDNs, VLAN IDs, and IP addresses used in this guide are shown in Table 3.

Table 2 Host VLAN and IP address configuration

Item	FQDN	VLAN ID	IP address
S2D Ready Node 1	storage-01.dell.lab	1611 1613 1614	172.16.11.1 172.16.13.1 172.16.14.1
S2D Ready Node 2	storage-02.dell.lab	1611 1613 1614	172.16.11.2 172.16.13.2 172.16.14.2
S2D Ready Node 3	storage-03.dell.lab	1611 1613 1614	172.16.11.3 172.16.13.3 172.16.14.3
S2D Ready Node 4	storage-04.dell.lab	1611 1613 1614	172.16.11.4 172.16.13.4 172.16.14.4
Management system	mgmt-01.dell.lab	1611	172.16.11.5
S2D Cluster	cluster-01.dell.lab	1611	172.16.11.250

## 5 Configure network adapters

**Note:** Exact iDRAC steps in this section may vary depending on hardware, software and browser versions used. See the PowerEdge server documentation for steps to connect to the iDRAC.

### 5.1 Reset network adapters to factory defaults

**Note:** These steps are only necessary for network adapters that have been modified from their factory default settings.

1. Connect to the server's iDRAC in a web browser and launch the virtual console.
2. In the virtual console, from the **Next Boot** menu, select **BIOS Setup**.
3. Reboot the server.
4. On the **System Setup Main Menu** page, select **Device Settings**.



Figure 8 Device Settings menu item

5. On the **Device Settings** page, click the first network adapter port in the list to launch the **Main Configuration Page** for the port.

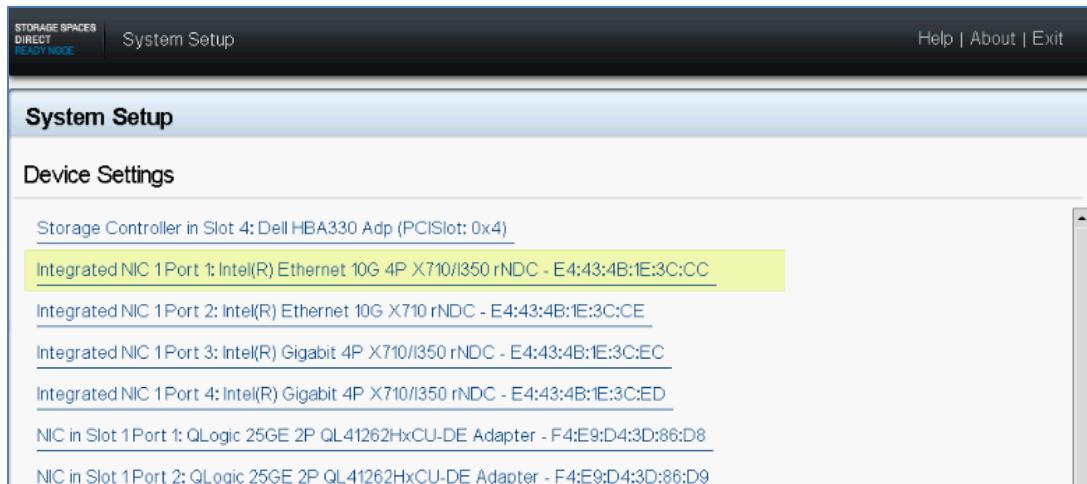


Figure 9 First NIC port in the device list

6. On the **Main Configuration Page** for the port, click the **Default** button followed by **Yes** to load the default settings. Click **OK** to acknowledge the **Success** message.
7. Click **Finish**. Notice if the message indicates a reboot is required for changes to take effect.
8. Click **Yes** to save changes. Click **OK** to acknowledge the **Success** message.
9. Repeat steps 5-8 for each network adapter port listed on the **Device Settings** page.
10. If a reboot is required per step 7, exit **System Setup** to reboot the system and press **F2** when prompted to return to **System Setup** to configure the QLogic QL41262 per Section 5.2 or Mellanox ConnectX-4 Lx per Section 5.3.

**Note:** Intel X710/i350 and Mellanox ConnectX-4 Lx adapters use their default **System Setup** configuration for this deployment.

## 5.2 Configure QLogic QL41262 adapters

This section configures the QL41262 adapters for iWARP with or without DCB. If Mellanox ConnectX-4 Lx adapters are used, skip to Section 5.3.

If the system is already in **System Setup** from the prior section, skip to step 4.

1. Connect to the server's iDRAC in a web browser and launch the virtual console.
2. In the virtual console, from the **Next Boot** menu, select **BIOS Setup**.
3. Reboot the server.
4. On the **System Setup Main Menu**, select **Device Settings**.
5. Click on the first QLogic QL41262 port to launch the **Main Configuration Page** for the port.



Figure 10 QL41262 adapter Port 1 menu item

6. On the **Main Configuration Page**, click **Device Level Configuration**.

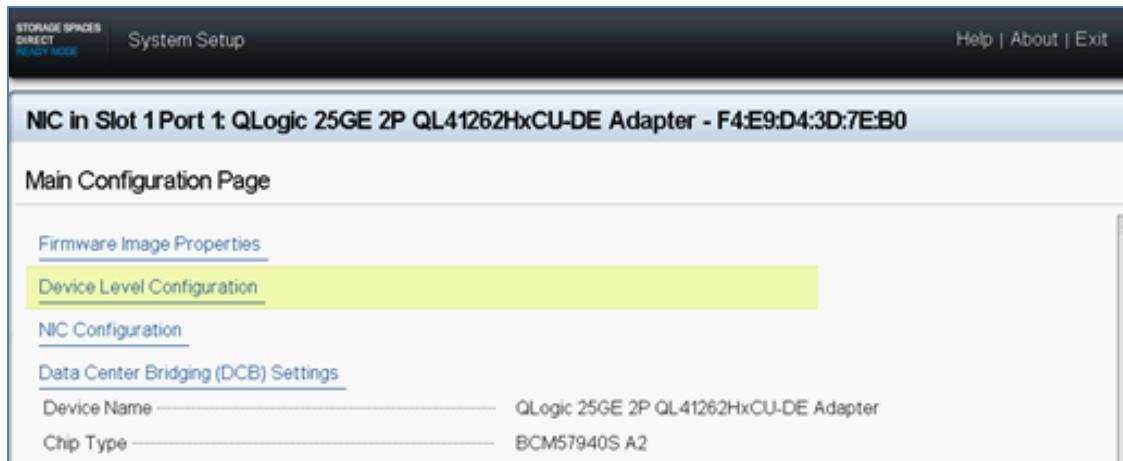


Figure 11 Device Level Configuration menu item

7. Verify **Virtualization Mode** is set to **None**.

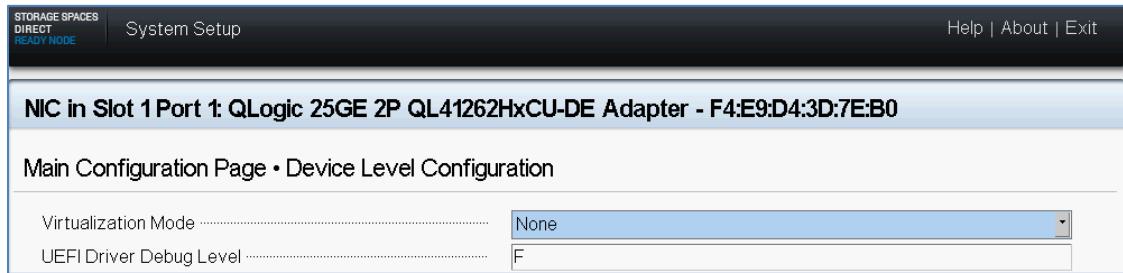


Figure 12 Virtualization Mode set to None

8. Click the **Back** button to return to the **Main Configuration Page**.
9. On the **Main Configuration Page**, click **NIC Configuration**.



Figure 13 NIC Configuration menu item

10. On the **NIC Configuration** page, make the following settings:

- a. Link Speed – **SmartAN**
- b. NIC + RDMA Mode – **Enabled**
- c. RDMA Operational Mode – **iWARP**
- d. Boot Protocol – **None**
- e. Virtual LAN Mode – **Disabled**
- f. Virtual LAN ID – **1**

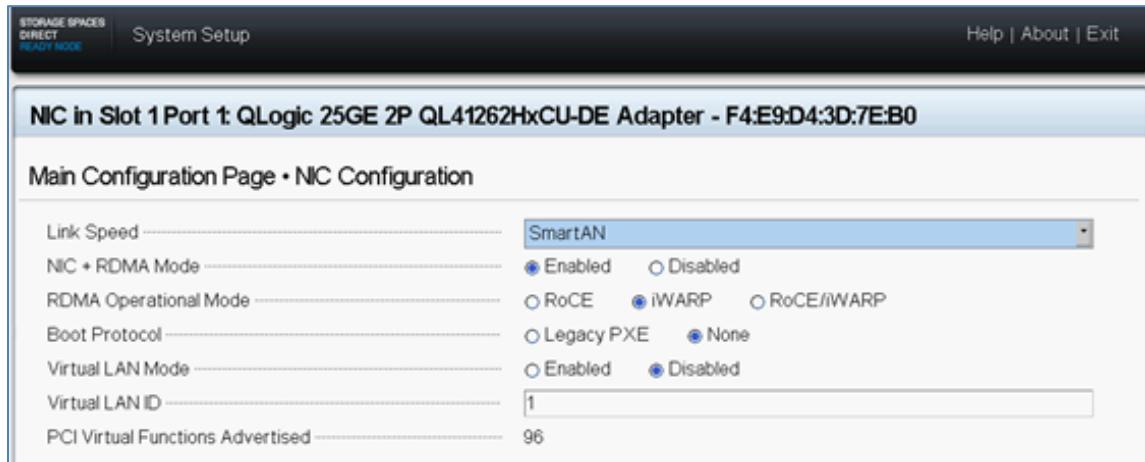


Figure 14 QLogic NIC port settings configured

11. Click the **Back** button to return to the **Main Configuration Page**.

12. On the **Main Configuration Page**, click **Data Center Bridging (DCB) Settings**.

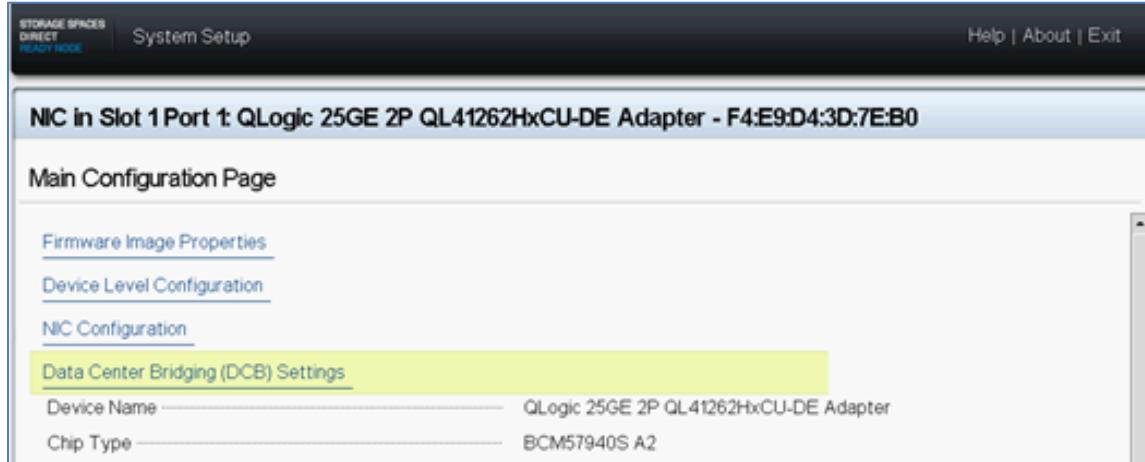


Figure 15 DCB Settings menu item

13. On the **Data Center Bridging (DCB) Settings** page, ensure the DCBX Protocol feature is set to **Disabled**.

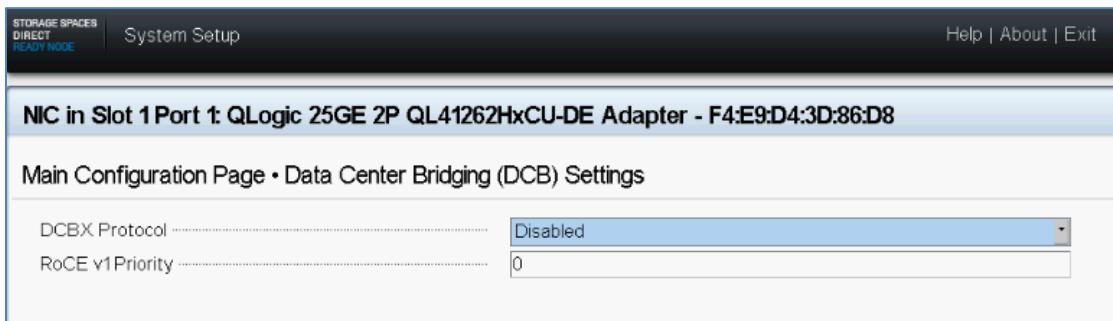


Figure 16 DCBX Protocol setting

**Note:** DCBx is a protocol used to exchange PFC and ETS configuration details between devices, such as a switch and a network adapter. DCBx is not used in this deployment because Microsoft recommends disabling it for S2D deployments. ETS and PFC settings are configured manually on the switch and the network adapter later in this guide.

14. Click **Back > Finish > Yes** (to save the changes if applicable) > **OK** (to acknowledge the change success message if applicable).

Repeat steps 5-14 above for the 2<sup>nd</sup> QLogic QL41262 adapter port.

15. When complete, exit **System Setup** and reboot the system.

## 5.3

## Verify Mellanox ConnectX-4 Lx adapter settings

This section verifies the Mellanox ConnectX-4 Lx adapters are configured properly.

**Note:** The settings shown in this section are factory defaults. This section may be skipped if the Mellanox ConnectX-4 Lx adapters are known to be at their factory default settings. There are no RDMA or DCB settings in **System Setup** for this adapter.

If the system is already in **System Setup** from Section 5.1, skip to step 4.

1. Connect to the server's iDRAC in a web browser and launch the virtual console.
2. In the virtual console, from the **Next Boot** menu, select **BIOS Setup**.
3. Reboot the server.
4. On the **System Setup Main Menu** page, select **Device Settings**.
5. Click on the first Mellanox ConnectX-4 adapter port to launch the **Main Configuration Page** for the port.

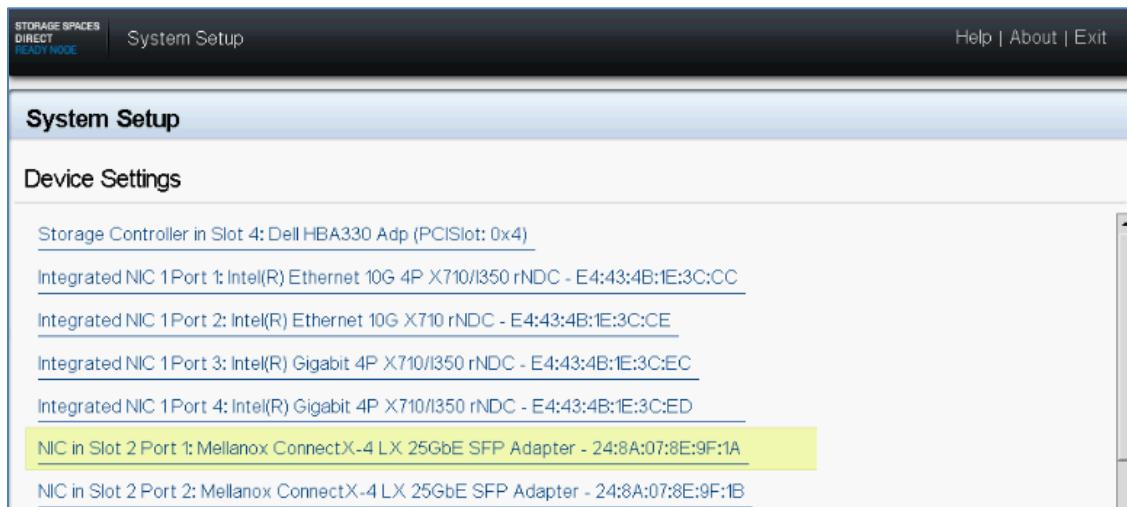


Figure 17 Mellanox adapter Port 1 highlighted

6. On the **Main Configuration Page**, click **NIC Configuration**.



Figure 18 NIC Configuration highlighted

7. On the **NIC Configuration** page, make sure the following items are configured:

- a. Legacy Boot Protocol - **None**
- b. Virtual LAN Mode - **Disabled**

The screenshot shows the 'Main Configuration Page • NIC Configuration' for a Mellanox ConnectX-4 LX 25GbE SFP Adapter. The configuration includes:

- Banner Message Timeout: 4
- Legacy Boot Protocol:  None,  PXE,  iSCSI
- Virtual LAN Mode:  Disabled,  Enabled
- Virtual LAN ID: 1
- Link Speed: Auto Negotiated
- Boot Retry Count: No Retry
- Boot Strap Type: Int 19h

Figure 19 NIC Configuration

8. Click the **Back** button to return to the **Main Configuration Page**.
9. On the **Main Configuration Page**, click **Device Level Configuration**.

The screenshot shows the 'Main Configuration Page' for the same NIC adapter. The 'Device Level Configuration' section is highlighted with a yellow background. The configuration includes:

- Firmware Image Properties
- NIC Configuration
- iSCSI Configuration
- Device Level Configuration**

Under 'Device Level Configuration':

- Blink LEDs: 15
- Device Name: Mellanox ConnectX-4 LX 25GbE SFP Adapter
- Chip Type: ConnectX-4 LX

Figure 20 Device Level Configuration highlighted

10. Verify **Virtualization Mode** is set to **None**.



Figure 21 Virtualization Mode set to None

11. Click **Back > Finish > Yes** (to save the changes if applicable) > **OK** (to acknowledge the change success message if applicable).

Repeat steps 5-11 above for the 2<sup>nd</sup> Mellanox adapter port.

12. When complete, exit **System Setup** and reboot the system.

# 6 Leaf switch configuration prerequisites

## 6.1 Check switch OS version

Leaf switches must be running a supported version of OS10EE.

---

**Note:** See Section 2.5 for minimum supported OS10EE versions by switch model.

---

Run the `show version` command to check the OS version. Dell EMC recommends upgrading to the latest release available on [Dell Digital Locker](#) (account required).

```
OS10# show version
Dell EMC Networking OS10-Enterprise
Copyright (c) 1999-2019 by Dell Inc. All Rights Reserved.
OS Version: 10.4.2.2
Build Version: 10.4.2.2.265
```

---

**Note:** For information on installing and upgrading OS10EE, see the [Dell EMC Networking OS10 Enterprise Edition Quick Start Guide](#).

---

## 6.2 Verify license installation

Run the command `show license status` to verify license installation. The `License Type:` field should indicate **PERPETUAL**, in bold below. If an evaluation license is installed, licenses purchased from Dell EMC are available for download on [Dell Digital Locker](#). Installation instructions are provided in the [OS10 Enterprise Edition User Guide Release 10.4.2.0](#).

```
OS10# show license status

System Information
-----
Vendor Name      : Dell EMC
Product Name     : S5248F-ON
Hardware Version: A01
Platform Name    : x86_64-dellemc_s5248f_c3538-r0
PPID             : CN046MRJCES0089K0011
Service Tag      : 68ZZZP2
License Details
-----
Software         : OS10-Enterprise
Version          : 10.4.2.2
License Type   : PERPETUAL
License Duration: Unlimited
License Status   : Active
License location: /mnt/license/68ZZZP2.lic
-----
```

---

**Note:** If OS10EE was factory installed, a perpetual license is already on the switch.

---

## 6.3

## Factory default configuration

The switch configuration commands in the sections that follow begin with the leaf switches at their factory default settings. Dell EMC Networking switches running OS10EE can be reset to their default configuration as follows:

```
OS10# delete startup-configuration
Proceed to delete startup-configuration [confirm yes/no(default)]:y

OS10# reload
System configuration has been modified. Save? [yes/no]:n
Proceed to reboot the system? [confirm yes/no]:y
```

The switch reboots to its factory default configuration.

---

**Note:** OS10EE at its default settings has Telnet disabled, SSH enabled, and the OOB management interface configured to get its IP address via DHCP. The default username and password are both `admin`. Dell EMC recommends changing the `admin` password to a complex password during the first login.

---

## Configure leaf switches

This chapter details the configuration commands issued to the S5248F-ON leaf switches. The switches start at their factory default settings per Section 6.3. The commands in the sections that follow should be entered in the order shown.

---

**Note:** S5248F-Leaf1A and S5248F-Leaf1B switch running-configuration files, with and without DCB, are provided as text file attachments to this .pdf. Section 1.2 describes how to access .pdf attachments.

---

The ports used in the leaf switch configuration examples are shown in Figure 22. Ports 1-4, highlighted in green, are the storage connections to the four Ready Nodes. Ports 21-24 and 31, highlighted in blue, are the in-band management connections to the four Ready Nodes and the management system. Ports 49-52 are used for the VLTi.

---

**Note:** The VLTi connections are made using two QSFP28 Double Density DAC cables, 2x100GbE per cable.

---

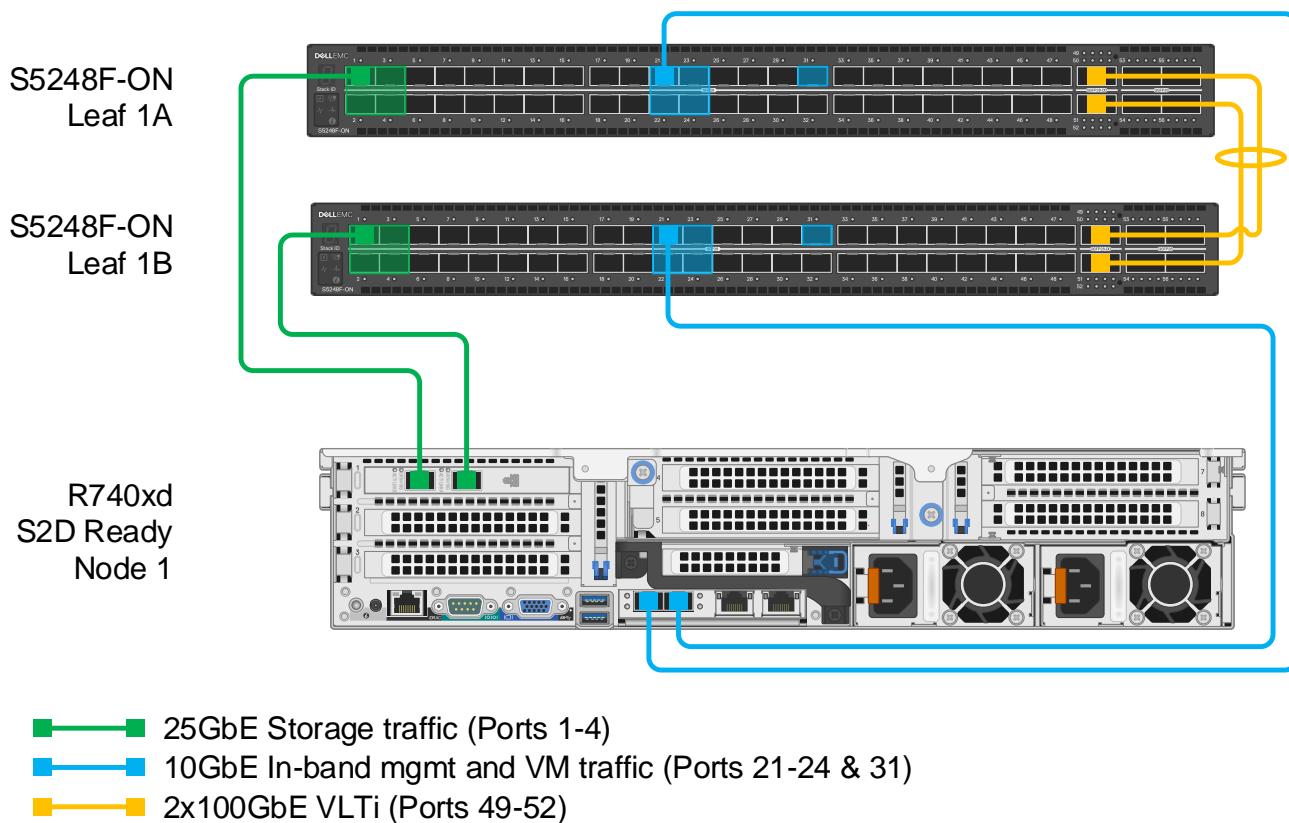


Figure 22 Connections and ports used

---

**Note:** This chapter ends with Section 7.7 - *Configure DCB*. If DCB is used in your deployment, follow the steps in Sections 7.1-7.7. If DCB is not used, follow the steps in Sections 7.1-7.6 and skip Section 7.7.

---

## 7.1 General settings

1. Enter configuration mode with the `configure terminal` command.
2. Configure the hostname.
3. If DHCP is not used, configure the OOB management IP address and default gateway.
4. Specify an NTP server accessible by the switch. In this example, this is an NTP server on the OOB management network.
5. Enable RSTP as a precaution against loops. Configure S5248F-Leaf1A as the primary RSTP root bridge using the `spanning-tree rstp priority 0` command and S5248F-Leaf1B as the secondary RSTP root bridge using the `spanning-tree rstp priority 4096` command.

Table 3 General settings – dual switch with VLT

S5248F-Leaf1A	S5248F-Leaf1B
<pre>configure terminal  hostname S5248F-Leaf1A  interface mgmt1/1/1 no ip address ip address 100.67.168.32/24 no shutdown <u>management route 0.0.0.0/0</u> <u>100.67.168.254</u>  ntp server 100.67.10.20  spanning-tree mode rstp spanning-tree rstp priority 0</pre>	<pre>configure terminal  hostname S5248F-Leaf1B  interface mgmt1/1/1 no ip address ip address 100.67.168.31/24 no shutdown <u>management route 0.0.0.0/0</u> <u>100.67.168.254</u>  ntp server 100.67.10.20  spanning-tree mode rstp spanning-tree rstp priority 4096</pre>

## 7.2 Configure port-groups

In this deployment example, S5248F-ON interfaces eth1/1/21-1/1/24 and 1/1/31 are connected to 10GbE Intel X710 adapters on the S2D Ready Nodes and management system. These ports must be changed on the switches from their native speed of 25GbE to 10GbE using the `port-group` command. See [Appendix B](#) for more information on port-groups.

---

**Note:** Changing interfaces eth1/1/21-1/1/24 and 1/1/31 to 10GbE also changes the interface names to eth1/1/21:1– 1/1/24:1 and 1/1/31:1 respectively.

---

1. Specify the port-group number.
2. Set the mode to 10GbE.

Table 4 Change port groups from 25GbE to 10GbE

S5248F-Leaf1A	S5248F-Leaf1B
<pre>port-group 1/1/6 mode eth 10g-4x  port-group 1/1/8 mode eth 10g-4x</pre>	<pre>port-group 1/1/6 mode eth 10g-4x  port-group 1/1/8 mode eth 10g-4x</pre>

## 7.3

## Configure VLANs and VRRP

In this section, VLANs are configured as shown in Table 2. VLAN 1611 is put in layer 3 mode by assigning an IP address. This allows routing of in-band management and/or VM traffic. VRRP is configured to provide gateway redundancy.

1. Create the in-band management and VM VLAN.
2. Assign a unique IP address on each switch to the VLAN interface.
3. Create a VRRP virtual router with the `vrrp-group number` command.

---

**Note:** VRRP is an active/standby first hop redundancy protocol. When used among VLT peers, it becomes active/active. Both VLT peers have the VRRP virtual MAC address in their forwarding table as a local destination address. This allows the backup VRRP router to forward intercepted frames whose destination MAC address matches the VRRP virtual MAC address.

---

4. Set the VRRP priority. The switch with the largest priority value becomes the master VRRP router.

---

**Note:** Priority 100 is the OS10EE default value for VRRP priority. When set to 100, as is done on Leaf1B below, the VRRP priority will not appear in the output of the `show running-configuration` command. The priority number can be verified using the `show vrrp brief` command.

---

5. Assign the same VRRP virtual address to both switches.
6. Create the two storage VLANs.

Table 5 Configure VLANs and VRRP

S5248F-Leaf1A	S5248F-Leaf1B
interface vlan1611 description Mgmt_and_VM ip address 172.16.11.252/24 vrrp-group 11 priority 150 virtual-address 172.16.11.254 no shutdown	interface vlan1611 description Mgmt_and_VM ip address 172.16.11.253/24 vrrp-group 11 priority 100 virtual-address 172.16.11.254 no shutdown
interface vlan1613 description Storage_1 no shutdown	interface vlan1613 description Storage_1 no shutdown
interface vlan1614 description Storage_2 no shutdown	interface vlan1614 description Storage_2 no shutdown

## 7.4

## Configure storage interfaces

Configure the interfaces for the storage connections. 25GbE interfaces 1/1/1 through 1/1/4 on both switches are used in this example.

1. Provide an interface description.
2. Use the `switchport mode trunk` command to enable ports to carry traffic for multiple VLANs.
3. Allow the two storage VLANs, 1613 and 1614, on the trunk ports.
4. Set the MTU to its maximum size, 9216 bytes. This improves storage traffic performance.
5. Enable `flowcontrol receive on` and `transmit off` for best storage performance if DCB is not used.

---

**Note:** Running the commands in the DCB configuration section of this guide, Section 7.7, will turn flow control off if it has been enabled.

---

6. Configure ports directly connected to nodes, servers, or other endpoints as STP edge ports.

Table 6 Storage interface configuration

S5248F-Leaf1A	S5248F-Leaf1B
interface ethernet1/1/1 description Node1_Stor_1 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge	interface ethernet1/1/1 description Node1_Stor_2 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge
interface ethernet1/1/2 description Node2_Stor_1 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge	interface ethernet1/1/2 description Node2_Stor_2 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge
interface ethernet1/1/3 description Node3_Stor_1 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge	interface ethernet1/1/3 description Node3_Stor_2 no shutdown switchport mode trunk <u>switchport trunk allowed vlan 1613-1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge
interface ethernet1/1/4 description Node4_Stor_1 no shutdown	interface ethernet1/1/4 description Node4_Stor_2 no shutdown

S5248F-Leaf1A	S5248F-Leaf1B
<pre>switchport mode trunk <u>switchport trunk allowed vlan 1613-</u> <u>1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge</pre>	<pre>switchport mode trunk <u>switchport trunk allowed vlan 1613-</u> <u>1614</u> mtu 9216 flowcontrol receive on flowcontrol transmit off spanning-tree port type edge</pre>

## 7.5

## Configure in-band management interfaces

Configure the interfaces for connections to the in-band management and VM network (VLAN 1611). 10GbE interfaces 1/1/21:1 through 1/1/24:1 and 1/1/31:1 are used in this example.

1. Provide an interface description.
2. Use the `switchport access vlan` command to make the port an access (untagged) port in the in-band management VLAN.
3. Configure ports directly connected to nodes, servers, or other endpoints as STP edge ports.

Table 7 In-band management interface configuration

S5248F-Leaf1A	S5248F-Leaf1B
<pre>interface ethernet1/1/21:1 description Node1_Mgmt_1 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>	<pre>interface ethernet1/1/21:1 description Node1_Mgmt_2 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>
<pre>interface ethernet1/1/22:1 description Node2_Mgmt_1 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>	<pre>interface ethernet1/1/22:1 description Node2_Mgmt_2 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>
<pre>interface ethernet1/1/23:1 description Node3_Mgmt_1 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>	<pre>interface ethernet1/1/23:1 description Node3_Mgmt_2 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>
<pre>interface ethernet1/1/24:1 description Node4_Mgmt_1 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>	<pre>interface ethernet1/1/24:1 description Node4_Mgmt_2 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>
<pre>interface ethernet1/1/31:1 description Mgmt_1-1 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>	<pre>interface ethernet1/1/31:1 description Mgmt_1-2 no shutdown switchport access vlan 1611 spanning-tree port type edge</pre>

## 7.6

## Configure VLT

The QSFP28-DD ports on the S5248F-ON are used for the VLTi between the two leaf switches as shown in Figure 5. The two physical QSFP28-DD ports provide four 100GbE interfaces, 1/1/49-1/1/52.

Configure the VLTi interfaces as follows:

1. Provide an interface description.
2. Remove each interface from Layer 2 mode with the `no switchport` command.
3. Set the MTU to its maximum size, 9216 bytes.

Configure the VLT domain as follows:

1. Create the VLT domain with the `vlt-domain domain_id_number` command. Use any number from 1-255 as the domain ID. Use the same ID number on both VLT peers.
2. Set the backup destination IP address. The backup destination is the OOB management IP address of the VLT peer switch.
3. Configure the interfaces used as the VLTi with the `discovery-interface` command.
4. Enable peer routing.

---

**Note:** For more information on VLT, see the [OS10 Enterprise Edition User Guide Release 10.4.2.0](#).

---

5. When the configuration is complete, exit configuration mode and save the configuration with the `end` and `write memory` commands.

Table 8 VLT configuration

S5248F-Leaf1A	S5248F-Leaf1B
interface ethernet1/1/49 description VLTi no shutdown no switchport mtu 9216	interface ethernet1/1/49 description VLTi no shutdown no switchport mtu 9216
interface ethernet1/1/50 description VLTi no shutdown no switchport mtu 9216	interface ethernet1/1/50 description VLTi no shutdown no switchport mtu 9216
interface ethernet1/1/51 description VLTi no shutdown no switchport mtu 9216	interface ethernet1/1/51 description VLTi no shutdown no switchport mtu 9216
interface ethernet1/1/52 description VLTi no shutdown no switchport mtu 9216	interface ethernet1/1/52 description VLTi no shutdown no switchport mtu 9216
vlt-domain 127 backup destination 100.67.168.31	vlt-domain 127 backup destination 100.67.168.32

S5248F-Leaf1A	S5248F-Leaf1B
<pre>discovery-interface ethernet1/1/49- 1/1/52 peer-routing end write memory</pre>	<pre>discovery-interface ethernet1/1/49- 1/1/52 peer-routing end write memory</pre>

## 7.7 Configure DCB

**Note:** This section is only applicable if DCB used. If DCB is not used, skip to Chapter 8. See Chapter 4 for more information on DCB options.

To configure DCB, complete the following steps:

1. Enter configuration mode with the `configure terminal` command.
2. Disable DCBx.

**Note:** DCBx is a protocol used to exchange PFC and ETS configuration details between devices, such as a switch and a network adapter. DCBx is not used in this deployment because Microsoft recommends disabling it for S2D deployments. ETS and PFC settings are configured manually on both the switch and the NIC.

3. Enter system QoS mode.
4. Configure the system to trust incoming dot1p values.
5. Exit system QoS mode.

Table 9 Global DCB configuration

S5248F-Leaf1A	S5248F-Leaf1B
<pre>configure terminal no dcbx enable system qos trust-map dot1p default exit</pre>	<pre>configure terminal no dcbx enable system qos trust-map dot1p default exit</pre>

Configure the system ETS policy as follows:

1. Create QoS maps to assign queues for each incoming Class of Service (CoS) value. In this example, queue 3 is for storage traffic, queue 5 is for cluster heartbeat traffic, and queue 0 is for all other traffic classes.
2. Create class-maps to be used by the ETS policy for queues 0, 3, and 5.
3. Create an ETS policy to guarantee a minimum bandwidth percentage for each queue. In this example, 49% is allocated to LAN traffic, 50% allocated to storage traffic, and 1% allocated to cluster heartbeat traffic.

**Note:** Adjust the ETS bandwidth percentages values according to the needs of your network. They must add up to 100%. Cluster heartbeat traffic is very small, and 1% allocation is more than enough.

Table 10 ETS configuration

S5248F-Leaf1A	S5248F-Leaf1B
<pre> qos-map traffic-class queue-map queue 0 qos-group 0-2,4,6-7 queue 3 qos-group 3 queue 5 qos-group 5  class-map type queuing q0 match queue 0  class-map type queuing q3 match queue 3  class-map type queuing q5 match queue 5  policy-map type queuing ets-policy class q0 bandwidth percent 49 class q3 bandwidth percent 50 class q5 bandwidth percent 1 </pre>	<pre> qos-map traffic-class queue-map queue 0 qos-group 0-2,4,6-7 queue 3 qos-group 3 queue 5 qos-group 5  class-map type queuing q0 match queue 0  class-map type queuing q3 match queue 3  class-map type queuing q5 match queue 5  policy-map type queuing ets-policy class q0 bandwidth percent 49 class q3 bandwidth percent 50 class q5 bandwidth percent 1 </pre>

Configure the system Priority Flow Control (PFC) policy:

1. Create the network-QoS class map for SMB storage traffic using CoS 3.
2. Create the network-QoS class map for cluster heartbeat (HB) traffic using CoS 5.
3. Create the policy map to apply priority flow control to CoS 3 and CoS 5 traffic.

Table 11 PFC configuration

S5248F-Leaf1A	S5248F-Leaf1B
<pre> class-map type network-qos SMB match qos-group 3  class-map type network-qos HB match qos-group 5  policy-map type network-qos pfc-policy class SMB pause pfc-cos 3 class HB pause pfc-cos 5 </pre>	<pre> class-map type network-qos SMB match qos-group 3  class-map type network-qos HB match qos-group 5  policy-map type network-qos pfc-policy class SMB pause pfc-cos 3 class HB pause pfc-cos 5 </pre>

Configure the interfaces participating in DCB. In this example, this includes the server-facing storage interfaces (Eth 1/1/1-1/1/4) and the VLTi interfaces (Eth 1/1/49-1/1/52).

**Note:** The commands shown are in addition to the interface configuration commands issued in the preceding sections.

1. Disable transmit and receive link level flow control using the `flowcontrol receive | transmit off` commands.
2. Assign the PFC service policy and enable priority flow control on the interfaces.
3. Assign the ETS service policy and enable ETS mode on the interfaces.
4. Apply the queuing traffic class map to the interfaces.
5. When the configuration is complete, exit configuration mode and save the configuration with the `end` and `write memory` commands.

Table 12 Interface DCB configuration

S5248F-Leaf1A	S5248F-Leaf1B
<pre>interface range ethernet1/1/1-1/1/4 flowcontrol receive off flowcontrol transmit off <u>service-policy input type network-qos</u> <u>pfc-policy</u> priority-flow-control mode on <u>service-policy output type queueing</u> <u>ets-policy</u> ets mode on qos-map traffic-class queue-map  interface range ethernet1/1/49-1/1/52 flowcontrol receive off flowcontrol transmit off <u>service-policy input type network-qos</u> <u>pfc-policy</u> priority-flow-control mode on <u>service-policy output type queueing</u> <u>ets-policy</u> ets mode on qos-map traffic-class queue-map  end write memory</pre>	<pre>interface range ethernet1/1/1-1/1/4 flowcontrol receive off flowcontrol transmit off <u>service-policy input type network-qos</u> <u>pfc-policy</u> priority-flow-control mode on <u>service-policy output type queueing</u> <u>ets-policy</u> ets mode on qos-map traffic-class queue-map  interface range ethernet1/1/49-1/1/52 flowcontrol receive off flowcontrol transmit off <u>service-policy input type network-qos</u> <u>pfc-policy</u> priority-flow-control mode on <u>service-policy output type queueing</u> <u>ets-policy</u> ets mode on qos-map traffic-class queue-map  end write memory</pre>

# Switch validation

Use the commands in this section to help verify the two leaf switches are configured correctly, and connections are properly established. The commands and output shown are for S5248F-Leaf1A. The output of its peer, S5248F-Leaf1B, is similar.

---

**Note:** For additional commands and output related to the leaf-spine portion of the topology, such as BGP and Uplink Failure Detection (UFD), see [Dell EMC Networking Layer 3 Leaf-Spine Deployment and Best Practices with OS10EE](#).

---

## 8.1 General commands

### 8.1.1 show interface status

The `show interface status | grep up` command is used to verify required interfaces are up, and links are established at their appropriate speeds.

```
S5248F-Leaf1A# show interface status | grep up
```

Port	Description	Status	Speed	Duplex	Mode	Vlan	Tagged-Vlans
Eth 1/1/1	Node1_Stor_1	up	25G	full	T	1	1613-1614
Eth 1/1/2	Node2_Stor_1	up	25G	full	T	1	1613-1614
Eth 1/1/3	Node3_Stor_1	up	25G	full	T	1	1613-1614
Eth 1/1/4	Node4_Stor_1	up	25G	full	T	1	1613-1614
Eth 1/1/21:1	Node1_Mgmt_1	up	10G	full	A	1611	-
Eth 1/1/22:1	Node2_Mgmt_1	up	10G	full	A	1611	-
Eth 1/1/23:1	Node3_Mgmt_1	up	10G	full	A	1611	-
Eth 1/1/24:1	Node4_Mgmt_1	up	10G	full	A	1611	-
Eth 1/1/31:1	Mgmt_1-1	up	10G	full	A	1611	-
Eth 1/1/49	VLTi	up	100G	full	-		
Eth 1/1/50	VLTi	up	100G	full	-		
Eth 1/1/51	VLTi	up	100G	full	-		
Eth 1/1/52	VLTi	up	100G	full	-		

### 8.1.2 show vlan

The `show vlan` command is used to view interfaces assigned to each VLAN and whether the interfaces are access/untagged (A) or trunk/tagged (T). Port channel (Po) 1000 is the VLTi. VLAN ID 4094 is reserved as an internal control VLAN for the VLT domain, and it is not user configurable.

```
S5248F-Leaf1A# show vlan
```

```
Codes: * - Default VLAN, M - Management VLAN, R - Remote Port Mirroring VLANs,
       @ - Attached to Virtual Network
Q: A - Access (Untagged), T - Tagged
      NUM      Status      Description          Q Ports
      *   1      Active
      1611    Active    InBand_Mgmt          A Po1000
      1/1/28,1/1/29:1,1/1/30:1,1/1/32:1,1/1/33-1/1/48,1/1/53-1/1/56
      1/1/25-1/1/26,1/1/27:1,1/1/29:1,1/1/30:1,1/1/32:1,1/1/33-1/1/48,1/1/53-1/1/56
      A Po1000
      T Po1000
```

				A
Eth1/1/21:1,1/1/22:1,1/1/23:1,1/1/24:1,1/1/31:1				
1613	Active	Storage_1		T Eth1/1/1-1/1/4
1614	Active	Storage_2		T Po1000
4094	Active			T Eth1/1/1-1/1/4
				T Po1000
				T Po1000

### 8.1.3 show lldp neighbors

The `show lldp neighbors` command is useful for identifying connected equipment by port.

---

**Note:** Mellanox ConnectX-4 Lx adapters set to “Host in Charge” per Section 9.12 have LLDP disabled. After the “Host in Charge” setting is made, switch ports connected to the Mellanox adapters will not appear in the output of this command.

---

```
S5248F-Leaf1A# show lldp neighbors
```

Loc	PortID	Rem Host Name	Rem Port Id	Rem Chassis Id
-----	-----	-----	-----	-----
ethernet1/1/1	Not Advertised		24:8a:07:8e:9f:1b	24:8a:07:8e:9f:1d
ethernet1/1/2	Not Advertised		24:8a:07:9a:ac:8b	24:8a:07:9a:ac:8d
ethernet1/1/21:1	Not Advertised		e4:43:4b:1e:3c:cc	e4:43:4b:1e:3c:cc
ethernet1/1/22:1	Not Advertised		e4:43:4b:1e:30:aa	e4:43:4b:1e:30:aa
ethernet1/1/23:1	Not Advertised		e4:43:4b:1e:3f:30	e4:43:4b:1e:3f:30
ethernet1/1/24:1	Not Advertised		e4:43:4b:1e:31:54	e4:43:4b:1e:31:54
ethernet1/1/3	Not Advertised		24:8a:07:9a:ac:a3	24:8a:07:9a:ac:a5
ethernet1/1/31:1	Not Advertised		18:66:da:71:50:a4	18:66:da:71:50:a4
ethernet1/1/4	Not Advertised		24:8a:07:8e:9d:fb	24:8a:07:8e:9d:fd
ethernet1/1/49	S5248F-Leaf1B		ethernet1/1/49	3c:2c:30:10:34:00
ethernet1/1/50	S5248F-Leaf1B		ethernet1/1/50	3c:2c:30:10:34:00
ethernet1/1/51	S5248F-Leaf1B		ethernet1/1/51	3c:2c:30:10:34:00
ethernet1/1/52	S5248F-Leaf1B		ethernet1/1/52	3c:2c:30:10:34:00
mgmt1/1/1	R168U39-S3048		ethernet1/1/38	74:e6:e2:f5:c8:80

### 8.1.4 show vrrp brief

In this deployment, VRRP is configured on the in-band management VLAN, 1611, to provide gateway redundancy for management and VM traffic. The output from the `show vrrp brief` command shows the master and virtual IP addresses and whether the switch is in the master or backup role. The switch configured with the largest priority value, shown in the Priority column, is the VRRP master.

```
S5248F-Leaf1A# show vrrp brief
```

Interface	Group	Priority	Prompt	State	Version	Master addr(s)	Virtual addr	
vlan1611	IPv4	11	150	true	master	2	172.16.11.252	172.16.11.254

## 8.2 VLT validation commands

### 8.2.1 show vlt domain\_id

This command is used to validate the VLT configuration status. The Role for one switch in the VLT pair is primary, and its peer switch, not shown, is assigned the secondary role. The VLTI Link Status and VLT Peer Status must both be up.

```
S5248F-Leaf1A# show vlt 127
```

```
Domain ID          : 127
Unit ID           : 1
Role              : primary
Version           : 2.0
Local System MAC address : 3c:2c:30:10:3a:00
Role priority     : 32768
VLT MAC address   : 3c:2c:30:10:3a:00
IP address         : fda5:74c8:b79e:1::1
Delay-Restore timer : 90 seconds
Peer-Routing       : Enabled
Peer-Routing-Timeout timer : 0 seconds
VLTi Link Status
  port-channel1000    : up
```

VLT Peer Unit ID	System MAC Address	Status	IP Address	Version
2	3c:2c:30:10:34:00	<b>up</b>	fda5:74c8:b79e:1::2	2.0

### 8.2.2 show vlt domain\_id backup-link

This command is used to verify VLT peers are communicating on the backup link over the OOB management network. The Destination is the management IP address of the peer. The Peer HeartBeat status must be Up.

```
S5248F-Leaf1A# show vlt 127 backup-link
VLT Backup Link
-----
Destination          : 100.67.168.31
Peer Heartbeat status : Up
Heartbeat interval   : 30
Heartbeat timeout    : 90
Destination VRF      : default
```

### 8.2.3 ***show vlt domain\_id mismatch***

This command highlights configuration issues between VLT peers. Mismatch examples include incompatible VLT configuration settings and VLAN differences. Any mismatches reported should be resolved before proceeding.

```
S5248F-Leaf1A# show vlt 127 mismatch
VLT-MAC mismatch:
No mismatch

Peer-routing mismatch:
No mismatch

VLAN mismatch:
No mismatch

VLT VLAN mismatch:
No mismatch

VLT Virtual Network Mismatch:
Virtual Network Name Mismatch:
No mismatch

Virtual Network VLTi-VLAN Mismatch:
No mismatch

Virtual Network Mode Mismatch:
No mismatch

Virtual Network Tagged Interfaces Mismatch:
No mismatch

Virtual Network Untagged Interfaces Mismatch:
No mismatch

Virtual Network VNI Mismatch:
No mismatch

Virtual Network Remote-VTEP Mismatch:
No mismatch
```

# S2D Ready Node configuration and deployment

These steps are applicable to Windows Server 2016 or 2019 Datacenter with Server Core or Server with Desktop Experience installations.

The network adapter names shown in the command examples may vary depending on adapters installed in the system. For PowerShell commands that require a network adapter name, use the `Get-NetAdapter` cmdlet to retrieve the name for the associated port.

---

**Note:** This chapter ends with Section 9.13 - *Configure DCB on Ready Nodes*. If DCB is used in your deployment, follow the steps in Sections 9.1-9.13. If DCB is not used, follow the steps in Sections 9.1-9.12.

---

**Note:** All PowerShell command examples in this guide are run as Administrator. For more information on the commands used, see the [Microsoft Storage Spaces Direct documentation](#), the [Microsoft Windows Server 2016 and 2019 RDMA Deployment Guide](#), and the [Dell EMC Solutions for Microsoft Azure Stack HCI Deployment Guide](#).

## 9.1 Initial state

The S2D Ready Nodes and management system in this deployment start at the following state:

- The same version of Windows Server Datacenter is installed on the management system and Ready Nodes. See [Appendix A.4](#) for Windows Server versions validated for this guide.
- The latest Windows updates are installed on each system.
- All device firmware and drivers on the Ready Nodes are up-to-date and are at the same or later versions as those listed in the [Support Matrix for Dell EMC Solutions for Microsoft Azure Stack HCI](#).

---

**Note:** The QLogic QL41262 adapter may not include a preinstalled driver with Windows Server 2016.

- Each Ready Node has been configured with a user-friendly hostname. In this example, the four nodes are named storage-01 through storage-04. This can be done with the `Rename-Computer` cmdlet as follows:

```
PS> Rename-Computer -NewName storage-01 -Restart
```

---

**Note:** All Ready Nodes are joined to the same Active Directory domain in Section 9.6.

## 9.2

## Ensure DCB is disabled on Intel X710 adapters

DCB, if used, is only configured on the QLogic or Mellanox adapters for this deployment. Dell EMC recommends disabling DCB on the Intel X710 adapters.

On each of the Ready Nodes, ensure Data Center Bridging is disabled for both Intel X710 network adapter ports as follows:

1. In Windows Server, go to **Device Manager > Network Adapters**.
2. Double click on the first Intel Ethernet 10G X710 port to open the **Properties** dialog box.
3. Click on the **Data Center** tab and ensure **Options** is set to **Disabled** as shown in Figure 23.

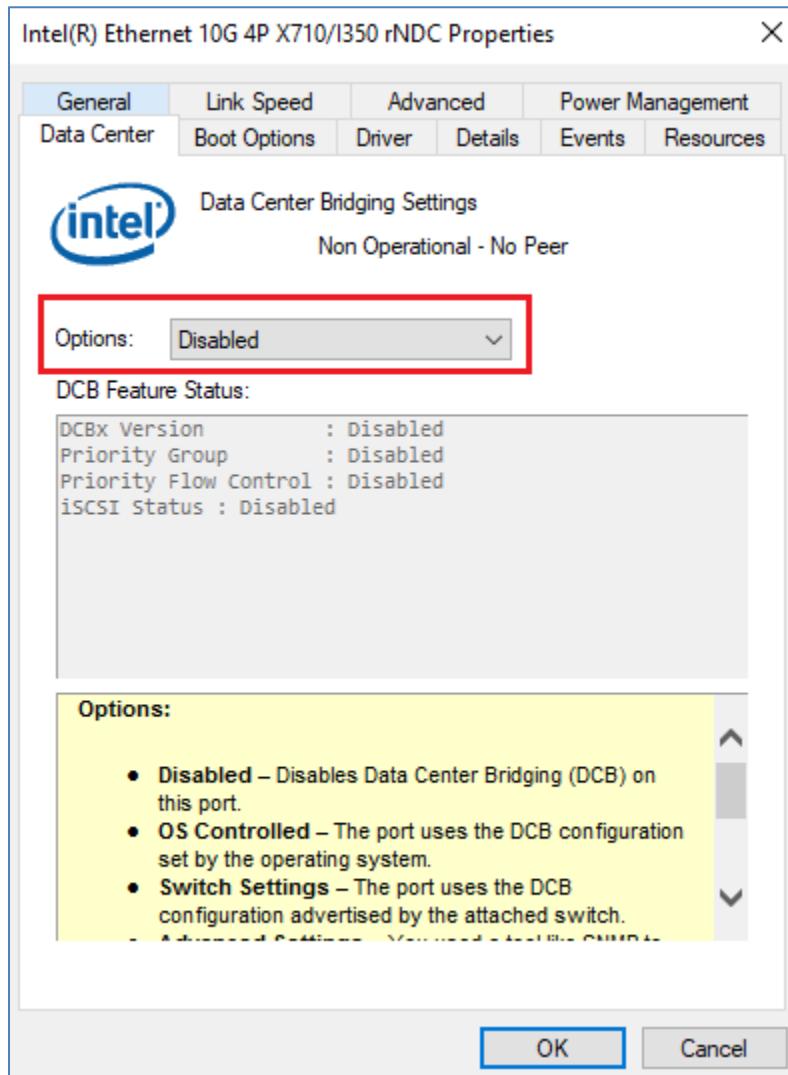


Figure 23 DCB disabled on X710 network adapter port

4. Repeat steps 2-3 for the second Intel Ethernet 10G X710 port.

## 9.3

## Install roles and features

On each of the Ready Nodes, install the Hyper-V, Failover Clustering, and, if DCB is used, the Data Center Bridging roles and features using the `Install-WindowsFeature` PowerShell cmdlet. The command below also installs the management tools for Hyper-V and Failover Clustering and restarts the system.

```
PS> Install-WindowsFeature -Name Hyper-V, Failover-Clustering, Data-Center-Bridging -IncludeAllSubFeature -IncludeManagementTools -Verbose -Restart
```

On the management system, only the management tools for Hyper-V and Failover Clustering need to be installed. Tools are installed, and the system restarted with the following command:

```
PS> Install-WindowsFeature -Name Hyper-V-Tools, Hyper-V-PowerShell, RSAT-Clustering-PowerShell, RSAT-Clustering-Mgmt -Verbose -Restart
```

---

**Note:** For this example, the management system is also the Active Directory domain controller and DNS server. To install these features using the `Install-WindowsFeature` cmdlet, the `-Name` parameters are `AD-Domain-Services` and `DNS` respectively.

---

## 9.4

## Configure the in-band management and VM network

In this section, the in-band management and VM network, VLAN 1611, is configured. The IP addresses used are from Table 3. To validate the commands below have taken effect, the associated `Get-` cmdlets and output examples are listed in Chapter 10.

---

**Note:** On WS2016, the default SET load balancing method is Dynamic. On WS2019, the default SET load balancing method is Hyper-V Port. Default load balancing methods are used in the examples in this guide.

---

1. In PowerShell, run the `New-VMSwitch` cmdlet on each Ready Node to create a SET switch. It is named ProdSwitch in this example.

```
PS> New-VMSwitch -Name ProdSwitch -AllowManagementOS 0 -NetAdapterName 'NIC1', 'NIC2' -MinimumBandwidthMode Weight -Verbose
```

---

**Note:** Retrieve the argument for the `NetAdapterName` parameters by using the `Get-NetAdapter` cmdlet in PowerShell. Use the adapters connected to the in-band management network. These are the 10GbE Intel X710 adapters named NIC1 and NIC2 in this example.

---

2. Run the following command on each Ready Node to create the VM network adapter for the in-band management and VM network VLAN (VLAN 1611).

```
PS> Add-VMNetworkAdapter -ManagementOS -Name 'Management' -SwitchName ProdSwitch -Passthru -Verbose | Set-VMNetworkAdapterVlan -Untagged -Verbose
```

3. Configure the Ready Node IP address and default gateway for the in-band management network with the following command:

```
PS> New-NetIPAddress -InterfaceAlias 'vEthernet (Management)' -IPAddress 172.16.11.1 -DefaultGateway 172.16.11.254 -PrefixLength 24 -AddressFamily IPv4 -Verbose
```

The example above is for Ready Node 1. IP addresses used for the Ready Nodes are listed in Table 3. The default gateway is set to the leaf pair's VRRP address, 172.16.11.254.

4. Configure the DNS server address on each Ready Node.

```
PS> Set-DnsClientServerAddress -InterfaceAlias 'vEthernet (Management)' -  
      ServerAddresses 172.16.11.5
```

---

**Note:** Since the management system is not running Hyper-V, its two 10GbE NICs connected to the leaf switches are simply configured as a switch independent NIC team. The IP address of the NIC team used in this example is 172.16.11.5/24.

---

## 9.5 Configure storage networks

Run the following commands on each Ready Node to configure VLANs and IP addresses on the 25GbE physical network adapters for Storage 1 and Storage 2 traffic. The VLAN IDs and IP addresses shown are from Table 3. To validate the commands below have taken effect, the associated Get- cmdlets and output examples are listed in Chapter 10.

---

**Note:** Use the Get-NetAdapter cmdlet in PowerShell to determine the network adapter port name used in the commands. These commands are not run on the management system as it is not part of the S2D cluster.

---

### 9.5.1 Configure storage VLANs

The following commands assign port 1 on the 25GbE network adapter to VLAN 1613 and port 2 to VLAN 1614.

```
PS> Set-NetAdapterAdvancedProperty 'SLOT 2 PORT 1' -RegistryKeyword VlanID -  
      RegistryValue "1613"
```

```
PS> Set-NetAdapterAdvancedProperty 'SLOT 2 PORT 2' -RegistryKeyword VlanID -  
      RegistryValue "1614"
```

### 9.5.2 Configure storage IP addresses

The following commands configure the IP address and subnet mask for the two storage network adapter ports. The IP addresses shown are specific to Ready Node 1.

```
PS> New-NetIPAddress -InterfaceAlias 'SLOT 2 PORT 1' -IPAddress 172.16.13.1 -  
      PrefixLength 24
```

```
PS> New-NetIPAddress -InterfaceAlias 'SLOT 2 PORT 2' -IPAddress 172.16.14.1 -  
      PrefixLength 24
```

### 9.5.3 Enable RDMA

RDMA is enabled on each storage network adapter port with the `Enable-NetAdapterRdma` cmdlet. The wildcard (\*) may be used because the same command applies to both ports in slot 2.

```
PS> Enable-NetAdapterRdma -Name 'SLOT 2*'
```

RDMA is enabled for Live Migration traffic with the following PowerShell command:

```
PS> Set-VMHost -VirtualMachineMigrationPerformanceOption SMB
```

### 9.5.4 Enable iWARP on QLogic adapters

**Note:** Skip this step for Mellanox adapters because they do not use iWARP. The command syntax varies depending on the Windows Server version installed as shown below.

To set the RDMA mode to iWARP on QLogic storage adapters, run the following commands on each Ready Node:

On Windows Server 2016:

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 1' -DisplayName  
'RDMA Mode' -DisplayValue 'iWARP'
```

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 2' -DisplayName  
'RDMA Mode' -DisplayValue 'iWARP'
```

On Windows Server 2019:

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 1' -DisplayName  
'NetworkDirect Technology' -displayvalue 'iWARP'
```

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 2' -DisplayName  
'NetworkDirect Technology' -displayvalue 'iWARP'
```

### 9.5.5 Enable jumbo frames on NICs

In this deployment, jumbo frames are enabled on NICs that carry storage traffic for best performance.

QLogic QL41262 and Mellanox ConnectX-4 Lx adapters support setting the jumbo frame size to 9014 bytes. Sizes allowed by other NIC makes and models may vary.

Enable jumbo frames of up to 9014 bytes on the storage NIC ports with the command:

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2*' -RegistryKeyword  
'*JumboPacket' -RegistryValue '9014'
```

## 9.6

## Join Ready Nodes to the Active Directory domain

Before the cluster is created, the nodes must be a part of an Active Directory (AD) domain. This task can be performed with the `Add-Computer` cmdlet. Run the following command on each Ready Node that will be a part of the Storage Spaces Direct cluster.

---

**Note:** Connecting to AD services using the host management network may require routing to the AD network. Ensure that this is in place before proceeding to domain join. In this deployment, the management system is also the AD controller and is on the same subnet, 172.16.11.0/24, as the Ready Nodes.

---

```
PS> $credential = Get-Credential  
PS> Add-Computer -DomainName dell.lab -Credential $credential -Restart
```

---

**Note:** Substitute `dell.lab` in the command above with your AD domain name. The command shown will restart the system.

---

## 9.7

## Clean disks

Execute the `Get-PhysicalDisk` cmdlet on each Ready Node to verify all disks are in a healthy state and that each has the same number of drives of each type.

---

**Note:** For more information, see <https://docs.microsoft.com/en-us/windows-server/storage/storage-spaces/drive-symmetry-considerations>.

---

```
PS> Get-PhysicalDisk
```

FriendlyName	Media	CanPool	OpStatus	HealthStatus	Usage	Size
ATA ST4000NM0	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NM0	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	True	OK	Healthy	Auto-Select	894.25 GB
ATA ST4000NM0	HDD	True	OK	Healthy	Auto-Select	3.64 TB
DELLBOSS VD	Unspe	False	OK	Healthy	Auto-Select	223.51 GB
ATA ST4000NM0	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	True	OK	Healthy	Auto-Select	894.25 GB

---

**Note:** The output above is identical on each of the four Ready Nodes in this deployment. The Dell BOSS drive displays `False` in the `CanPool` column because it is the Windows OS boot disk. Boot disks are not used in the storage pool.

---

If there are existing partitions or other data on the drives, the drives must be cleaned before creating the host cluster.

---

**Warning:** With the exception of the boot drives, the following script removes all data from all disks on the hosts specified in \$ServerList. For more information, see <https://docs.microsoft.com/en-us/windows-server/storage/storage-spaces/deploy-storage-spaces-direct>.

---

All disks eligible to be used in the storage pool may be cleaned by running the following script on the management system:

```
PS> $ServerList = "storage-01", "storage-02", "storage-03", "storage-04"

Invoke-Command ($ServerList) {
    Update-StorageProviderCache
    Get-StoragePool | ? IsPrimordial -eq $false | Set-StoragePool -IsReadOnly:$false -ErrorAction SilentlyContinue
    Get-StoragePool | ? IsPrimordial -eq $false | Get-VirtualDisk | Remove-VirtualDisk -Confirm:$false -ErrorAction SilentlyContinue
    Get-StoragePool | ? IsPrimordial -eq $false | Remove-StoragePool -Confirm:$false -ErrorAction SilentlyContinue
    Get-PhysicalDisk | Reset-PhysicalDisk -ErrorAction SilentlyContinue
    Get-Disk | ? Number -ne $null | ? IsBoot -ne $true | ? IsSystem -ne $true | ? PartitionStyle -ne RAW | % {
        $_ | Set-Disk -isoffline:$false
        $_ | Set-Disk -isreadonly:$false
        $_ | Clear-Disk -RemoveData -RemoveOEM -Confirm:$false
        $_ | Set-Disk -isreadonly:$true
        $_ | Set-Disk -isoffline:$true
    }
    Get-Disk | Where Number -Ne $Null | Where IsBoot -Ne $True | Where IsSystem -Ne $True | Where PartitionStyle -Eq RAW | Group -NoElement -Property FriendlyName
} | Sort -Property PsComputerName, Count
```

---

**Note:** Replace the names in \$ServerList above with the Ready Node names used in your environment.

---

When complete, the output of the above script lists disks and hostnames similar to the following:

Count	Name	PSCo mputerName
-----	-----	-----
2	ATA MZ7KM960HMJP0D3	storage-01
4	ATA ST4000NM0265-2DC	storage-01
2	ATA MZ7KM960HMJP0D3	storage-02
4	ATA ST4000NM0265-2DC	storage-02
2	ATA MZ7KM960HMJP0D3	storage-03
4	ATA ST4000NM0265-2DC	storage-03
2	ATA MZ7KM960HMJP0D3	storage-04
4	ATA ST4000NM0265-2DC	storage-04

## 9.8

## Run the Test-Cluster cmdlet

Before creating the S2D cluster, ensure the Ready Nodes are properly configured and are ready for the cluster creation. This is done using the `Test-Cluster` cmdlet.

Run the `Test-Cluster` cmdlet from the management system or one of the Ready Nodes:

```
PS> Test-Cluster -Node storage-01, storage-02, storage-03, storage-04 -
Include 'Storage Spaces Direct', 'Inventory', 'Network', 'System
Configuration'
```

---

**Note:** Replace the node names in the command above with the names used in your environment.

The `Test-Cluster` cmdlet generates a .htm report of all validations performed and the results. Review and resolve any warnings shown in the validation report and run the test again if needed.

When all tests pass, the output looks similar to the following:

LastWriteTime	Length	Name
-----	-----	-----
1/12/2019 3:50 PM	1823740	Validation Report 2019.01.12 At 15.49.35.htm

---

**Note:** The full path to the report is typically `C:\Users\username\AppData\Local\Temp\validation report name`.

## 9.9

## Create the cluster

The `New-Cluster` cmdlet is used to create the S2D cluster. Use the `-IgnoreNetwork` option to ignore the storage networks. Run the `New-Cluster` cmdlet from the management system or one of the Ready Nodes to create the cluster:

```
PS> New-Cluster -Name Cluster-01 -Node storage-01, storage-02, storage-03,
storage-04 -StaticAddress 172.16.11.250 -NoStorage -IgnoreNetwork
172.16.13.0/24, 172.16.14.0/24 -Verbose
```

---

**Note:** Replace the node names in the command above with the names used in your environment.

In the above command, the `-StaticAddress` parameter is used to specify an IP address for the cluster in the same IP subnet as the in-band management network. The `-NoStorage` parameter specifies that the cluster is to be created without any shared storage.

Example output follows:

```
VERBOSE: Adding static network 172.16.11.0/24.
WARNING: There were issues while creating the clustered role that may
prevent it from starting. For more information
view the report file below.
WARNING: Report file location: C:\Windows\cluster\Reports\Create Cluster
Wizard Cluster-01 on 2019.01.29 At
16.00.10.htm
```

---

Name

```
----  
Cluster-01
```

Review the cluster creation report for any warnings. The warning shown in the command output above is because a cluster witness has not been configured.

A witness is configured in the following section.

## 9.10 Configure a cluster witness

Microsoft recommends configuring a witness for a cluster with three or four nodes and requires a witness for a two-node cluster. Witness configuration is not required for clusters with five or more nodes.

---

**Note:** For more information see <https://docs.microsoft.com/en-us/windows-server/storage/storage-spaces/understand-quorum>.

---

A witness may be a file share or cloud-based. The following steps cover setting up a file share on the management system as the cluster witness:

1. Create a file share on the management system as follows:

```
PS> New-Item -Name "Witness" -ItemType Directory -Path C:\  
PS> New-SmbShare -Name Witness -Path C:\Witness -FullAccess  
dell\administrator  
PS> Set-SmbPathAcl -ShareName Witness
```

2. Configure a quorum using the file share by running the following command on any one of the Ready Nodes:

```
PS> Set-ClusterQuorum -FileShareWitness \\mgmt-01\Witness
```

---

**Note:** The above command fails if run from the management system because the Cluster Service is not running on it. The command only needs to be run on one node as it applies to the entire cluster.

---

3. Verify the quorum resource is configured by running the following command on any one of the Ready Nodes:

```
PS> Get-ClusterQuorum
```

Cluster	QuorumResource
-----	-----
Cluster-01	File Share Witness

---

**Note:** For more information, see <https://blogs.msdn.microsoft.com/clustering/2014/03/31/configuring-a-file-share-witness-on-a-scale-out-file-server>. For information about configuring a cloud-based witness, see <https://docs.microsoft.com/en-us/windows-server/failover-clustering/deploy-cloud-witness>.

---

## 9.11 Enable S2D

The `Enable-ClusterS2D` cmdlet puts the cluster in S2D mode. It creates the storage pool, configures the S2D cache drives, and creates capacity and performance tiers.

- Run the following command on any one of the Ready Nodes to enable S2D on the cluster:

```
PS> Enable-ClusterS2D -Verbose
```

**Note:** The command only needs to be run once as it applies to the entire cluster. The `-Verbose` option is useful as it shows the S2D configuration steps as they are executed on the screen. The above command will fail if run from the management system because the Cluster Service is not running on it. Optionally, the following command can be run from the management system to remotely execute the command on any one of the Ready Nodes (storage-01 in this example):

```
PS> Enable-ClusterS2D -CimSession storage-01 -Verbose
```

The following message is displayed:

```
Confirm  
Are you sure you want to perform this action?  
Performing operation 'Enable Cluster Storage Spaces Direct' on Target  
'Cluster-01'.  
[Y] Yes [A] Yes to All [N] No [L] No to All [S] Suspend [?] Help  
(default is "Y"):
```

- Answer `y` to proceed. When complete, output similar to the following is displayed:

Node	EnableReportName
---	-----
STORAGE-01	C:\Windows\Cluster\Reports\EnableClusterS2D on 2019.02.12-16.17.51.htm

- Review the report and address any warnings if they appear.

## 9.12 Create storage volumes

**Note:** The following commands are run on any one of the Ready Nodes. Microsoft recommends using the CSVFS\_ReFS filesystem and limiting the size of each volume to 32TB on Windows Server 2016 and 64TB on Windows Server 2019.

Create S2D storage volumes with the `New-Volume` cmdlet. The following commands create two 2TB volumes named Volume1 and Volume2:

```
PS> New-Volume -FriendlyName "Volume1" -FileSystem CSVFS_ReFS -  
StoragePoolFriendlyName S2D* -Size 2TB  
  
PS> New-Volume -FriendlyName "Volume2" -FileSystem CSVFS_ReFS -  
StoragePoolFriendlyName S2D* -Size 2TB
```

**Note:** After the volumes are created, each Ready Node has links to the volumes under C:\ClusterStorage.

## 9.13 Configure DCB on Ready Nodes

This section is only necessary if DCB is used. See Chapter 4 for more information on DCB options.

Run the following commands on each of the Ready Nodes in the cluster to configure DCB:

1. Create a new QoS policy with a match condition set to 445. The TCP port dedicated for Server Message Block (SMB) traffic is used to set the priority value to 3.

```
PS> New-NetQosPolicy -Name 'SMB' -NetDirectPortMatchCondition 445 -PriorityValue8021Action 3
```

2. Create a new QoS policy for cluster heartbeat messages and set the priority value to 5.

```
PS> New-NetQosPolicy -Name 'Cluster' -Cluster -PriorityValue8021Action 5
```

3. Enable QoS for the network adapter ports.

```
PS> Enable-NetAdapterQos -InterfaceAlias 'SLOT 2 PORT 1','SLOT 2 PORT 2'
```

---

**Note:** The `InterfaceAlias` values above are determined using the `Get-NetAdapter` PowerShell command.

4. Enable PFC on priority 3 and 5 traffic.

```
PS> Enable-NetQosFlowControl -priority 3  
PS> Enable-NetQosFlowControl -priority 5
```

5. Enable Windows ETS allocation for Priority 3 and 5.

```
PS> New-NetQosTrafficClass -Name 'SMB' -Priority 3 -BandwidthPercentage 50 -Algorithm ETS  
PS> New-NetQosTrafficClass -Name 'Cluster' -Priority 5 -BandwidthPercentage 1 -Algorithm ETS
```

---

**Note:** The bandwidth percentages set above must match that set on the leaf switches in Table 11.

6. Disable DCBx willing mode.

```
PS> Set-NetQosDcbxSetting -Willing $False
```

7. Set DCBx mode to “Host in charge” on Mellanox adapters.

---

**Note:** The following command is applicable to the Mellanox Connect-X4 Lx adapters only. This command also disables LLDP on the adapter.

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 1' -DisplayName 'Dcbxmode' -DisplayValue 'Host in charge'
```

```
PS> Set-NetAdapterAdvancedProperty -Name 'SLOT 2 PORT 2' -DisplayName 'Dcbxmode' -DisplayValue 'Host in charge'
```

DCB configuration on the server is verified with the `Get-` cmdlets shown in Section 10.11.

## 10 PowerShell validation commands and output

The following commands are run as needed on any of the S2D Ready Nodes to validate the configuration.

---

**Note:** Some output in the examples shown has been truncated to fit the page.

---

### 10.1 Get-NetAdapter

Use the `Get-NetAdapter` cmdlet to view physical and virtual network adapters and their status. The `vEthernet (Management)` adapter shown in the output below is created in Section 9.3.

```
PS> Get-NetAdapter
```

Name	InterfaceDescription	Status	LinkSpeed
NIC1	Intel(R) Ethernet 10G 4P X710/I350	Up	10 Gbps
NIC2	Intel(R) Ethernet 10G X710 rNDC	Up	10 Gbps
NIC3	Intel(R) Gigabit 4P X710/I350 rNDC	Disconnected	0 bps
NIC4	Intel(R) Gigabit 4P X710/I350 rNDC	Disconnected	0 bps
SLOT 2 Port 1	Mellanox ConnectX-4 Lx Ethernet Ad	Up	25 Gbps
SLOT 2 Port 2	Mellanox ConnectX-4 Lx Ethernet Ad	Up	25 Gbps
vEthernet (Management)	Hyper-V Virtual Ethernet Adapter	Up	10 Gbps

---

**Note:** The SET load balancing method used determines the `vEthernet (Management)` link speed shown in the output above. On WS2019, the default SET load balancing method is Hyper-V Port. With Hyper-V Port, the bandwidth is limited to a single interface (10 Gbps) as shown above. On WS2016, the default SET load balancing method is Dynamic, which displays the combined bandwidth of both interfaces (20 Gbps). The load balancing method used may be changed with this command:

```
PS> Set-VMSwitchTeam -Name
```

```
ProdSwitch -LoadBalancingAlgorithm Dynamic | HyperVPort
```

See <https://docs.microsoft.com/en-us/windows-server/virtualization/hyper-v-virtual-switch/rdma-and-switch-embedded-teaming#load-balancing-mode> for more information.

---

### 10.2 Get-VMSwitch

The `Get-VMSwitch` cmdlet is used to view virtual switches. The VMSwitch named `ProdSwitch` is created in Section 9.3.

```
PS> Get-VMSwitch
```

Name	SwitchType	NetAdapterInterfaceDescription
ProdSwitch	External	Teamed-Interface

## 10.3 Get-NetIPAddress

Use the `Get-NetIPAddress` cmdlet to view IP addresses configured on the node. The output that follows is from Ready Node 1.

```
PS> Get-NetIPAddress -AddressFamily IPv4 | Select InterfaceAlias, IPAddress

InterfaceAlias          IPAddress
-----                  -----
vEthernet (Management) 172.16.11.1
SLOT 2 Port 1           172.16.13.1
SLOT 2 Port 2           172.16.14.1
Loopback Pseudo-Interface 1 127.0.0.1
```

## 10.4 Get-NetRoute

The `Get-NetRoute` cmdlet is used to verify the default gateway configured on the Ready Node. The default gateway is configured in Section 9.3.

```
PS> Get-NetRoute -AddressFamily IPv4 | Select InterfaceAlias, NextHop

InterfaceAlias          NextHop
-----                  -----
vEthernet (Management) 172.16.11.254
```

## 10.5 Get-DnsClientServerAddress

Use the `Get-DnsClientServerAddress` cmdlet to view the DNS server address used by the Ready Node. The DNS server IP address is configured in Section 9.3.

```
PS> Get-DnsClientServerAddress -InterfaceAlias 'vEthernet (Management)'

InterfaceAlias          Interface Address ServerAddresses
Index      Family
-----      -----
vEthernet (Management) 23   IPv4    {172.16.11.5}
vEthernet (Management) 23   IPv6    {}
```

## 10.6 View VLAN IDs

VLAN IDs configured on physical NICs can be viewed with the `Get-NetAdapterAdvancedProperty` cmdlet. VLANs are configured for storage in Section 9.4.1.

```
PS> Get-NetAdapterAdvancedProperty -RegistryKeyword VlanID
```

Name	DisplayName	DisplayValue	RegistryKeyword	RegistryValue
NIC1	VLAN ID	0	VlanId	{0}
NIC2	VLAN ID	0	VlanId	{0}
NIC4	VLAN ID	0	VlanId	{0}
NIC3	VLAN ID	0	VlanId	{0}
SLOT 2 Port 2	VLAN ID	1614	VlanID	{1614}
SLOT 2 Port 1	VLAN ID	1613	VlanID	{1613}

## 10.7 Get-NetAdapterRdma

Use the `Get-NetAdapterRdma` cmdlet to verify storage adapters have RDMA enabled. RDMA is enabled in Section 9.4.3.

```
PS> Get-NetAdapterRdma
```

Name	InterfaceDescription	Enabled	PFC	ETS
vEthernet (Management)	Hyper-V Virtual Ethernet	False	NA	NA
SLOT 2 Port 1	Mellanox ConnectX-4 Lx E	True	True	True
SLOT 2 Port 2	Mellanox ConnectX-4 Lx E	True	True	True

## 10.8 Ensure iWARP is enabled (QLogic adapters only)

The following command is used to ensure QLogic adapters are set to iWARP. The command syntax varies depending on the version of Windows Server installed. iWARP is enabled in Section 9.5.4.

For Windows Server 2016, use the following command:

```
PS> Get-NetAdapterAdvancedProperty -DisplayName 'RDMA Mode'
```

Name	DisplayName	DisplayValue	RegistryKeyword	RegistryValue
SLOT 2 Port 2	RDMA Mode	iWARP	RDMAMode	{2}
SLOT 2 Port 1	RDMA Mode	iWARP	RDMAMode	{2}

For Windows Server 2019, use the following command:

```
PS> Get-NetAdapterAdvancedProperty -DisplayName 'NetworkDirect Technology'
```

Name	DisplayName	DisplayValue	RegistryKeyword	RegistryValue
SLOT 2 Port 2 NetworkDirect Tech	NetworkDirect Tech	iWARP	*NetworkDire... {1}	
SLOT 2 Port 1 NetworkDirect Tech	NetworkDirect Tech	iWARP	*NetworkDire... {1}	

## 10.9 View jumbo frame settings

The following command is used to ensure NICs carrying storage traffic have Jumbo frames enabled. In this example, jumbo frames of up to 9014 bytes are enabled on the ports in slot 2. Jumbo frames are enabled in Section 9.5.5.

```
PS> Get-NetAdapterAdvancedProperty -Name "*" -RegistryKeyword '*JumboPacket'
```

Name	DisplayName	DisplayValue	RegistryKeyword	RegistryValue
vEthernet (Management)	Jumbo Packet	Disabled	*JumboPacket	{1514}
NIC4	Jumbo Packet	Disabled	*JumboPacket	{1514}
SLOT 2 Port 2	Jumbo Packet	9014	*JumboPacket	{9014}
SLOT 2 Port 1	Jumbo Packet	9014	*JumboPacket	{9014}
NIC1	Jumbo Packet	Disabled	*JumboPacket	{1514}
NIC3	Jumbo Packet	Disabled	*JumboPacket	{1514}
NIC2	Jumbo Packet	Disabled	*JumboPacket	{1514}

## 10.10 Storage validation commands

### 10.10.1 Get-PhysicalDisk

The `Get-PhysicalDisk` cmdlet is run to verify disk health, size, and media type on a Ready Node.

The command output before the cluster is created shows only the local drives, and appears as follows on each of the Ready Nodes used in this example:

```
PS> Get-PhysicalDisk
```

FriendlyName	Media	CanPool	OpStatus	HealthStatus	Usage	Size
ATA ST4000NMO	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	True	OK	Healthy	Auto-Select	894.25 GB
ATA ST4000NMO	HDD	True	OK	Healthy	Auto-Select	3.64 TB
DELLBOSS VD	Unspe	False	OK	Healthy	Auto-Select	223.51 GB
ATA ST4000NMO	HDD	True	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	True	OK	Healthy	Auto-Select	894.25 GB

The command output after the cluster is created and S2D is enabled shows all drives in the storage pool, and appears as follows on each of the Ready Nodes used in this example:

```
PS> Get-PhysicalDisk
```

FriendlyName	Media	CanPool	OpStatus	HealthStatus	Usage	Size
DELLBOSS VD	Unspe	False	OK	Healthy	Auto-Select	223.51 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA MZ7KM960H	SSD	False	OK	Healthy	Journal	894.25 GB
ATA ST4000NMO	HDD	False	OK	Healthy	Auto-Select	3.64 TB

## 10.10.2 Get-StoragePool

The `Get-StoragePool` cmdlet can be run on any node to determine available space in the shared storage pool. In the following example, the cluster has 58.45TB of capacity and 12.06TB used space.

```
PS> Get-StoragePool -IsPrimordial $False
```

FriendlyName	Status	Health	Primordial	ReadOnly	Size	AllocatedSize
S2D on Cluster-01	OK	Healthy	False	False	58.45 TB	12.06 TB

## 10.10.3 Get-VirtualDisk

Use the `Get-VirtualDisk` cmdlet to view storage volumes created, redundancy, size, footprint on the storage pool, and storage efficiency. The output below shows the two volumes created in Section 9.12 configured with three-way mirroring. The redundancy configuration is the S2D default for the four-node cluster used in this guide. For more information, see <https://docs.microsoft.com/en-us/windows-server/storage/storage-spaces/storage-spaces-fault-tolerance>.

```
PS> Get-VirtualDisk
```

FriendlyName	ResilSetting	Redund	Status	Health	Size	Footprint	StorageEff
ClusterPerfHist	Mirror	2	OK	Healthy	10 GB	33 GB	30.30%
Volume2	Mirror	2	OK	Healthy	2 TB	6.01 TB	33.32%
Volume1	Mirror	2	OK	Healthy	2 TB	6.01 TB	33.32%

## 10.11 DCB validation commands

---

**Note:** The validation commands in this section are applicable only if DCB is configured on the Ready Nodes per Section 9.13.

---

### 10.11.1 Get-NetQosPolicy

The `Get-NetQosPolicy` cmdlet is run to verify the QoS policies and assigned priority values.

```
PS> Get-NetQosPolicy
```

```
Name      : Cluster
Owner     : Group Policy (Machine)
NetworkProfile : All
Precedence   : 127
Template    : Cluster
JobObject   :
PriorityValue : 5

Name      : SMB
Owner     : Group Policy (Machine)
NetworkProfile : All
Precedence   : 127
JobObject   :
NetDirectPort : 445
PriorityValue : 3
```

## 10.11.2 Get-NetAdapterQos

Use the `Get-NetAdapterQos` cmdlet to verify the NIC's DCB operational parameters.

Verify the `OperationalTrafficClasses` bandwidth and priorities match those configured on the switch, shown in Table 11, and `OperationalFlowControl` is enabled for priority 3 and 5 traffic as configured on the switch, shown in Table 12.

---

**Note:** The following output is from the Mellanox adapter. The output for the QLogic adapter is similar. Use the `Get-NetAdapter` cmdlet to retrieve the name for the associated adapter.

---

```
PS> Get-NetAdapterQos -name "Slot 2*
```

```
Name : SLOT 2 Port 2
Enabled : True
Capabilities : : Hardware Current
----- -----
MacSecBypass : NotSupported NotSupported
DcbxSupport : None None
NumTCs (Max/ETS/PFC) : 8/8/8 8/8/8

OperationalTrafficClasses : TC TSA Bandwidth Priorities
--- --- -----
0 ETS 49% 0-2,4,6-7
1 ETS 50% 3
2 ETS 1% 5

OperationalFlowControl : Priorities 3,5 Enabled
OperationalClassifications : Protocol Port/Type Priority
----- -----
Default 0
NetDirect 445 3

Name : SLOT 2 Port 1
Enabled : True
Capabilities : : Hardware Current
----- -----
MacSecBypass : NotSupported NotSupported
DcbxSupport : None None
NumTCs (Max/ETS/PFC) : 8/8/8 8/8/8

OperationalTrafficClasses : TC TSA Bandwidth Priorities
--- --- -----
0 ETS 49% 0-2,4,6-7
1 ETS 50% 3
2 ETS 1% 5

OperationalFlowControl : Priorities 3,5 Enabled
OperationalClassifications : Protocol Port/Type Priority
----- -----
Default 0
NetDirect 445 3
```

### 10.11.3 Get-NetQosFlowControl

Verify the priority flow control settings with the `Get-NetQosFlowControl` cmdlet. The output shown confirms PFC is enabled for priority 3 and 5 traffic.

```
PS> Get-NetQosFlowControl
```

Priority	Enabled	PolicySet	IfIndex	IfAlias
0	False	Global		
1	False	Global		
2	False	Global		
3	True	Global		
4	False	Global		
5	True	Global		
6	False	Global		
7	False	Global		

### 10.11.4 Get-NetQosTrafficClass

Verify Windows is configured to use the ETS algorithm and bandwidth percentages are correct with the `Get-NetQosTrafficClass` cmdlet.

```
PS> Get-NetQosTrafficClass
```

Name	Algorithm	Bandwidth (%)	Priority	PolicySet	IfIndex	IfAlias
[Default]	ETS	49	0-2,4,6-7	Global		
SMB	ETS	50	3	Global		
Cluster	ETS	1	5	Global		

### 10.11.5 Get-NetQosDcbxSetting

Use the `Get-NetQosDcbxSetting` cmdlet to ensure DCBx willing mode is disabled.

```
PS> Get-NetQosDcbxSetting
```

Willing	PolicySet	IfIndex	IfAlias
False	Global		

### 10.11.6 Verify Mellanox adapters are set to “Host in Charge”

Use the `Get-NetAdapterAdvancedProperty` cmdlet to verify Mellanox adapters are set to “Host in Charge.”

---

**Note:** This command is not applicable to QLogic adapters.

---

```
PS> Get-NetAdapterAdvancedProperty -Name 'Slot 2*' -DisplayName 'Dcbxmode'
```

Name	DisplayName	DisplayValue	RegistryKeyword	RegistryValue
SLOT 2 Port 1	DcbxMode	Host in Charge	DcbxMode	{ 0 }
SLOT 2 Port 2	DcbxMode	Host in Charge	DcbxMode	{ 0 }

# 11 Switch DCB validation commands

If DCB is used, the commands in this section will help verify DCB is configured correctly. The commands and output shown are for S5248F-Leaf1A. The output of its peer, S5248F-Leaf1B, is similar.

## 11.1 Show queuing statistics

Queuing statistics can be viewed to verify that traffic is applied to the correct queues and that storage and cluster heartbeat traffic (queues 3 and 5 respectively) is not dropped under heavy network loads.

```
S5248F-Leaf1A# show queuing statistics interface ethernet 1/1/1
Interface ethernet1/1/1
Queue  Packets          Bytes          Dropped-Packets   Dropped-Bytes
0      32082748        89906196746    17774345           26742951754
1      0                0               0                 0
2      0                0               0                 0
3      21947244        90065497612    0                 0
4      0                0               0                 0
5      1567             655233         0                 0
6      0                0               0                 0
7      0                0               0                 0
```

---

**Note:** The Dropped-Packets and Dropped-Bytes for LAN traffic (CoS 0/Queue 0) shown in the output above are the results of sending an overwhelming amount of LAN traffic over the physical storage links with an IXIA traffic generator. This was done to verify DCB was configured correctly and that no storage or cluster heartbeat traffic was dropped.

---

## 11.2 Show interface priority flow control

This command shows the count of PFC pause frames received and transmitted on each interface. Pause frames are sent under heavy loads to ensure frames are not dropped. In this example, pause frames were received from the host interface for CoS 3 and 5 traffic.

```
S5248F-Leaf1A# show interface ethernet 1/1/1 priority-flow-control details
ethernet1/1/1
Admin Mode : true
Operstatus: true
PFC Priorities: 3,5
Total Rx PFC Frames: 574
Total Tx PFC frames: 20
Cos      Rx          Tx
-----
0      0            0
1      0            0
2      0            0
3      287          20
4      0            0
5      287          0
6      0            0
7      0            0
```

## A Validated components

The following tables include the hardware, software, and firmware used to configure and validate the examples in this guide.

### A.1 Dell EMC Networking Switches

Table 13 Switches and OS versions

Qty	Item	OS Version
2	Dell EMC Networking S5248F-ON leaf switch	10.4.2.2
1	Dell EMC Networking S3048-ON management switch	10.4.2.2

---

**Note:** See Table 1 for supported Dell EMC Networking switches and OS versions.

---

### A.2 S2D Ready Nodes

---

**Note:** For the current list of supported firmware and driver versions, see the [Support Matrix for Dell EMC Solutions for Microsoft Azure Stack HCI](#).

---

A cluster of four PowerEdge R740xd S2D Ready Nodes was used to validate the examples in this guide. The nodes were each configured as shown in Table 15 for Windows Server 2016 and Table 16 for Windows Server 2019.

Table 14 PowerEdge R740xd S2D Ready Node components with WS2016

Qty per node	Item	Firmware	Driver
2	Intel Xeon Gold 6148 CPU @ 2.40GHz, 20 cores	-	-
12	16GB DDR4 DIMM (192GB total)	-	-
2	960GB SATA SSD	-	-
4	4TB SATA HDD	-	-
1	Dell HBA330 Storage Controller	15.17.09.06	2.51.21.2
1	Boot Optimized Storage Solution (BOSS) S1 Controller w/ 2x240GB SATA M.2 SSD	2.5.13.3011	1.2.0.1048
1	QLogic FastLinQ QL41262HxCU-DE 2x25GbE SFP28	14.07.07	8.24.5.0
1	Mellanox ConnectX-4 Lx 2x25GbE SFP28	14.21.30.12	2.0.19824.0
1	Intel X710 2x10GbE SFP+/I350 2x1000BASE-T rNDC	18.5.17	1.8.104.5
-	BIOS	1.5.6	-
-	iDRAC with Lifecycle Controller	3.21.23.22	-

Table 15 PowerEdge R740xd S2D Ready Node components with WS2019

Qty per node	Item	Firmware	Driver
2	Intel Xeon Gold 6148 CPU @ 2.40GHz, 20 cores	-	-
12	16GB DDR4 DIMM (192GB total)	-	-
2	960GB SATA SSD	-	-
4	4TB SATA HDD	-	-
1	Dell HBA330 Storage Controller	16.17.00.03	2.51.24.80
1	Boot Optimized Storage Solution (BOSS) S1 Controller w/ 2x240GB SATA M.2 SSD	2.5.13.3016	1.2.0.1048
1	QLogic FastLinQ QL41262HxCU-DE 2x25GbE SFP28	14.10.07	8.37.35.0
1	Mellanox ConnectX-4 Lx 2x25GbE SFP28	14.24.10.00	2.10.20286.0
1	Intel X710 2x10GbE SFP+/I350 2x1000BASE-T rNDC	18.8.9	1.9.230.2
-	BIOS	1.6.12	-
-	iDRAC with Lifecycle Controller	3.21.26.22	-

## A.3 Management System

The management system must be running the same version of Microsoft Windows Server as the S2D cluster nodes. The exact hardware configuration of the management system is not critical as long as it has sufficient resources and network connectivity to the nodes.

The management system used in this guide is a PowerEdge R640 configured as shown in the table below.

Table 16 PowerEdge R640 management system components with WS2019

Qty	Item	Firmware	Driver
1	Intel Xeon Gold 6126 CPU @ 2.60GHz, 12 cores	-	-
6	8GB DDR4 DIMM (48GB total)	-	-
2	120GB SATA SSD	-	-
1	PERC H330 Mini Storage Controller	25.5.5.0005	6.604.6.0
1	QLogic 57800 2x10GbE SFP+/2x1GbE BASE-T rNDC	14.07.06	7.13.57.103
-	BIOS	1.6.12	-
-	iDRAC with Lifecycle Controller	3.21.26.22	-

## A.4 Dell EMC Networking Optics and Cables

The optics and cables in the table below were used to validate the examples in this guide.

Table 17 Optics and cables

Qty	Item	Part Number
16	SFP28-25G-SR or SFP28-25G-SR-NOF optical transceiver	P7D7R or W4GPP
20	10G SFP+ SR optical transceiver	WTRD1
18	LC/LC OM3 MMF patch cable	-
2	DAC-Q28DD-200G-1.0M double density DAC cable	VPDFDJ

## A.5 S2D Ready Node and management system software

The examples in this guide used the Microsoft Windows Server Datacenter versions shown in the table below.

Table 18 Windows server versions

Operating System	Version
Windows Server 2016 Datacenter	1607 Build 14393.2759
Windows Server 2019 Datacenter	1809 Build 17763.292

## B Port-groups

In this deployment guide, S5248F-ON interfaces eth1/1/21-1/1/24 and 1/1/31 are connected to 10GbE Intel X710 adapters. These interfaces must be changed from their native speed of 25GbE to 10GbE. This is done on S5248F-ON switches using the `port-group` command.

---

**Note:** The `port-group` command is used in Section 7.2 of this guide.

---

To determine the port-group-to-interface mapping, run the `show port-group` command:

```
S5248F-Leaf1A# show port-group
```

Port-group	Mode	Ports	FEM	
port-group1/1/1	Eth 25g-4x	1 2 3 4	-	
port-group1/1/2	Eth 25g-4x	5 6 7 8	-	
port-group1/1/3	Eth 25g-4x	9 10 11 12	-	
port-group1/1/4	Eth 25g-4x	13 14 15 16	-	
port-group1/1/5	Eth 25g-4x	17 18 19 20	-	
<b>port-group1/1/6</b>	<b>Eth 25g-4x</b>	<b>21 22 23 24</b>	-	
port-group1/1/7	Eth 25g-4x	25 26 27 28	-	
<b>port-group1/1/8</b>	<b>Eth 25g-4x</b>	<b>29 30 31 32</b>	-	
port-group1/1/9	Eth 25g-4x	33 34 35 36	-	
port-group1/1/10	Eth 25g-4x	37 38 39 40	-	
port-group1/1/11	Eth 25g-4x	41 42 43 44	-	
port-group1/1/12	Eth 25g-4x	45 46 47 48	-	
port-group1/1/13	Eth 100g-2x	49 50	-	
port-group1/1/14	Eth 100g-2x	51 52	-	
port-group1/1/15	Eth 100g-1x	53	-	
port-group1/1/16	Eth 100g-1x	54	-	
port-group1/1/17	Eth 100g-1x	55	-	
port-group1/1/18	Eth 100g-1x	56	-	

In the output above, interfaces eth1/1/21-1/1/24 are in port-group 1/1/6, and interface eth 1/1/31 is in port group 1/1/8. The commands to change the interfaces in the two port-groups from 25GbE to 10GbE are as follows:

```
S5248F-Leaf1A# configure terminal
S5248F-Leaf1A(config)# port-group 1/1/6
S5248F-Leaf1A(conf-pg-1/1/6)# mode eth 10g-4x
S5248F-Leaf1A(conf-pg-1/1/6)# port-group 1/1/8
S5248F-Leaf1A(conf-pg-1/1/8)# mode eth 10g-4x
```

After a port group mode change is made, the interface naming will change from eth 1/1/x to eth 1/1/x:n; where x is the physical port number, and n is the logical port number. In this example, changing interfaces eth1/1/21-1/1/24 and 1/1/31 to 10GbE also changes the interface names to eth1/1/21:1– 1/1/24:1 and 1/1/31:1.

Port-group configuration options for the S5248F-ON are shown in Table 19.

Table 19 S5248F-ON port-group configuration options

<b>Port group number</b>	<b>Native physical interface</b>	<b>Native speed</b>	<b>Other supported speeds</b>	<b>Non-native logical interface name</b>
1/1/1	Eth 1/1/1-1/1/4	25g-4x	10g-4x	Eth 1/1/x:1
1/1/2	Eth 1/1/5-1/1/8	25g-4x	10g-4x	Eth 1/1/x:1
1/1/3	Eth 1/1/9-1/1/12	25g-4x	10g-4x	Eth 1/1/x:1
1/1/4	Eth 1/1/13-1/1/16	25g-4x	10g-4x	Eth 1/1/x:1
1/1/5	Eth 1/1/17-1/1/20	25g-4x	10g-4x	Eth 1/1/x:1
1/1/6	Eth 1/1/21-1/1/24	25g-4x	10g-4x	Eth 1/1/x:1
1/1/7	Eth 1/1/25-1/1/28	25g-4x	10g-4x	Eth 1/1/x:1
1/1/8	Eth 1/1/29-1/1/32	25g-4x	10g-4x	Eth 1/1/x:1
1/1/9	Eth 1/1/33-1/1/36	25g-4x	10g-4x	Eth 1/1/x:1
1/1/10	Eth 1/1/37-1/1/40	25g-4x	10g-4x	Eth 1/1/x:1
1/1/11	Eth 1/1/41-1/1/44	25g-4x	10g-4x	Eth 1/1/x:1
1/1/12	Eth 1/1/45-1/1/48	25g-4x	10g-4x	Eth 1/1/x:1
1/1/13	Eth 1/1/49-1/1/50	100g-2x	50g-4x 40g-2x 10g-8x 25g-8x	Eth 1/1/x:n
1/1/14	Eth 1/1/51-1/1/52	100g-2x	50g-4x 40g-2x 10g-8x 25g-8x	Eth 1/1/x:n
1/1/15	Eth 1/1/53	100g-1x	50g-2x 40g-1x 10g-4x 25g-4x	Eth 1/1/x:n
1/1/16	Eth 1/1/54	100g-1x	50g-2x 40g-1x 10g-4x 25g-4x	Eth 1/1/x:n
1/1/17	Eth 1/1/55	100g-1x	50g-2x 40g-1x 10g-4x 25g-4x	Eth 1/1/x:n
1/1/18	Eth 1/1/56	100g-1x	50g-2x 40g-1x 10g-4x 25g-4x	Eth 1/1/x:n

## C

# Technical resources

[Dell EMC Networking Guides](#)

[OS10 Enterprise Edition User Guide Release 10.4.2.0](#)

[Manuals and documentation for Dell EMC Networking S3048-ON](#)

[Manuals and documentation for Dell EMC Networking S5248F-ON](#)

[Dell EMC Solutions for Microsoft Azure Stack HCI page](#)

[Dell EMC Solutions for Microsoft Azure Stack HCI Deployment Guide](#)

[Support Matrix for Dell EMC Solutions for Microsoft Azure Stack HCI](#)

[Dell EMC Networking Layer 3 Leaf-Spine Deployment and Best Practices with OS10EE](#)

[Dell EMC Networking OS10 Enterprise Edition Quick Start Guide](#)

[Microsoft Storage Spaces Direct documentation](#)

[Microsoft Windows Server 2016 and 2019 RDMA Deployment Guide](#)

## D Fabric Design Center

The Dell EMC Fabric Design Center (FDC) is a cloud-based application that automates the planning, design, and deployment of network fabrics that power Dell EMC compute, storage and hyper-converged infrastructure solutions. The FDC is ideal for turnkey solutions and automation based on validated deployment guides.

FDC allows design customization and flexibility to go beyond validated deployment guides. For additional information, visit the [Dell EMC Fabric Design Center](#).

## E Support and feedback

### Contacting Technical Support

Support Contact Information

Web: <http://www.dell.com/support>

Telephone: USA: 1-800-945-3355

### Feedback for this document

We encourage readers to provide feedback on the quality and usefulness of this publication by sending an email to [Dell\\_Networking\\_Solutions@Dell.com](mailto:Dell_Networking_Solutions@Dell.com).