Alienware 15 R4 Setup and Specifications

Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© **2018 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2018 - 01

Rev. A00

Contents

Set up your computer	5
Set up the Virtual Reality (VR) headset—optional	
HTC Vive	
Oculus Rift	
Oculus Rift with touch	
Alienware Graphics Amplifier	
Views	11
Base	
Display	12
Front	
Back	
Left	14
Right	
Specifications	16
Computer model	
System information	
Operating system	
Dimensions and weight	
Memory	
Ports and connectors	
Communications	18
Wireless module	
Audio	
Storage	19

Intel Optane storage	19
Keyboard	19
Camera	20
Touch pad	20
Touchpad gestures	
Battery	21
Video	
Power adapter	22
Display	
Computer environment	
Keyboard shortcuts	25
Getting help and contacting Alienware.	26
Self-help resources	26
Contacting Alienware	26

Set up your computer

Connect the power adapter and press the power button.



Set up the Virtual Reality (VR) headset—optional

- NOTE: The VR headset is sold separately.
- NOTE: If you are using Alienware Graphics Amplifier with your computer, see <u>Alienware Graphics Amplifier</u>.

HTC Vive

1 Download and run the setup tools for your VR headset at <u>www.dell.com/VRsupport</u>.

- 2 Connect the HDMI cable of the HTC Vive headset to the back of your computer.
- 3 Connect the USB cable from the Vive hub to the USB 3.1 Gen 1 port at the right side of your computer.
- 4 Follow the on-screen instructions to complete the setup.


Oculus Rift

NOTE: The USB dongles are only shipped with computers that are Oculus certified.

- Download and run the setup tools for your VR headset at <u>www.dell.com/</u> VRsupport.
- 2 Connect the HDMI cable of the Oculus Rift headset to the back of your computer.



3 Connect the Oculus Rift headset to the USB Type-A port at the right side of your computer.

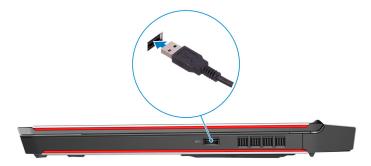

4 Connect the Oculus Rift tracker to the USB Type-A port at the left side of your computer.



5 Connect a USB Type-C to Type-A dongle to the Thunderbolt 3 (USB Type-C) port at the back of your computer.



6 Connect the XBOX controller to the USB Type-A port on the USB dongle.



7 Follow the on-screen instructions to complete the setup.

Oculus Rift with touch

NOTE: The USB dongles are only shipped with computers that are Oculus certified.

- 1 Download and run the setup tools for your VR headset at www.dell.com/VRsupport.
- 2 Connect the HDMI cable of the Oculus Rift headset to the back of your computer.




- 3 Connect the Oculus Rift headset to the USB Type-A port at the right side of your computer.
- **4** Connect a USB Type-C to Type-A dongle to the Thunderbolt 3 (USB Type-C) port on the back of your computer.



5 Connect the Oculus Rift tracker to the USB Type-A port at the left side of your computer.

6 Connect a USB Type-C to Type-A dongle to the USB 3.1 Gen 2 (Type-C) port at the left side of your computer.

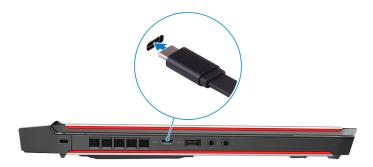

7 Connect the XBOX controller to the USB Type-A port on the USB dongle.



- **8** Connect the Oculus Rift tracker for Touch to the USB Type-A port on the dongle.
- **9** Follow the on-screen instructions to complete the setup.

Alienware Graphics Amplifier

Alienware Graphics Amplifier enables you to connect an external graphics card to your computer.

When using the Virtual Reality (VR) headset, connect the HDMI cable to the graphics card installed on your Alienware Graphics Amplifier. The USB cables from the VR headset can be connected either to your computer or your Alienware Graphics Amplifier.



NOTE: The USB dongle is not required, if you are connecting the USB 3.0 cables on your VR headset to the USB 3.0 Type-A port on your Alienware Graphics Amplifier.

For more information about Alienware Graphics Amplifier, see *Alienware Graphics Amplifier User's Guide* at http://www.dell.com/support.

Views

Base



Power button (Alienhead)

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



NOTE: You can customize the power-button behavior in Power Options.

2 Macro keys

Run pre-defined Macros.

Define the macro keys using the Alienware Command Center.

Display



l Left microphone

Provides digital sound input for audio recording and voice calls.

2 Camera

Enables you to video chat, capture photos, and record videos.

3 Camera-status light

Turns on when the camera is in use.

4 Right microphone

Provides digital sound input for audio recording and voice calls.

5 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Front




1 Left speaker

Provides audio output.

2 Right speaker

Provides audio output.

Back

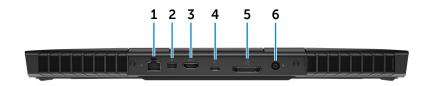

Network port (with lights)

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

The two lights next to the connector indicate the connectivity status and network activity.

2 Mini DisplayPort

Connect a TV or another DisplayPort-in enabled device. Provides video and audio output.

3 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

4 Thunderbolt 3 (USB Type-C) port

Supports USB 3.1 Gen 2, DisplayPort 1.2, Thunderbolt 3 and also enables you to connect to an external display using a display adapter.

Provides data transfer rates up to 10 Gbps for USB 3.1 Gen 2 and up to 40 Gbps for Thunderbolt 3.


5 External graphics port

Connect an Alienware Graphics Amplifier to enhance the graphics performance.

Power-adapter port 6

Connect a power adapter to provide power to your computer and charge the battery.

I eft

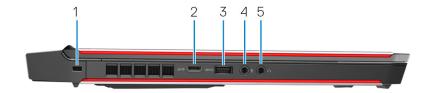

1 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

2 USB 3.1 Gen 2 (Type-C) port

Connect to external storage devices. Provides data transfer speeds up to 10 Gbps.



NOTE: This port does not support video/audio streaming.

3 USB 3.1 Gen 1 port with PowerShare

Connect peripherals such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.



NOTE: If the charge on your computer's battery is less than 10 percent, you must connect the power adapter to charge your computer, and USB devices connected to the PowerShare port.

- NOTE: If a USB device is connected to the PowerShare port before the computer is turned off or in hibernate state, you must disconnect and connect it again to enable charging.
- NOTE: Certain USB devices may not charge when the computer is turned off or in sleep state. In such cases, turn on the computer to charge the device.


4 Microphone/headphone port (configurable)

Connect an external microphone for sound input or headphones for sound output.

5 Headset port

Connect headphones or a headset (headphone and microphone combo).

Right

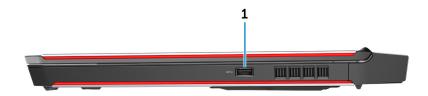

USB 3.1 Gen 1 port

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

Specifications

Computer model

Alienware 15 R4

System information

Table 1. System information

Processor 8th Generation Intel Core i5/i7/i9

Chipset Intel CM246

Operating system

Table 2. Operating system

Operating systems supported

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)

Dimensions and weight

Table 3. Dimensions and weight

 Height
 25.40 mm (1 in)

 Width
 389 mm (15.31 in)

 Depth
 305 mm (12 in)

 Weight
 3.49 kg (7.69 lb)



NOTE: The weight of your computer varies depending on the configuration ordered and the manufacturing variability.

Memory

Table 4. Memory specifications

Slots Two SODIMM slots

Type DDR4

Speed 2666 MHz

Configurations supported

Per memory module slot 4 GB, 8 GB, and 16 GB

Total memory 8 GB, 16 GB, and 32 GB

Ports and connectors

Table 5. Ports and connectors

Exte	rn	اد	
⊏xte	rn	aı	i

Network One RJ-45 port

USB • One USB 3.1 Gen 2 (Type-C) port

• One USB 3.1 Gen 1 port with

PowerShare

One USB 3.1 Gen 1 port

Thunderbolt 3 (USB Type-C) port

Audio/Video • One HDMI 2.0 port

• One microphone/headphone port

(configurable)

One headset port

One Mini DisplayPort 1.3

One external graphics port

Internal:

M.2 card

• Three M.2 card slots for solid-state

drive (SATA/PCIe)

 One M.2 card slot for Wi-Fi and Bluetooth combo card

Communications

Table 6. Communications specifications

Ethernet 10/100/1000 Mbps Ethernet

controller integrated on system board

Wireless • Wi-Fi 802.11ac

Bluetooth 4.1

Wireless module

Table 7. Wireless module specifications

Transfer rate Up to 1733 Mbps

Frequency bands supported Dual band 2.4 GHz/5 GHz

Encryption • WEP

WPA

EAP

WPS

PMF

TKIP

Audio

Table 8. Audio specifications

Controller Realtek ALC 3266

Speakers Stereo

Speaker output • Average: 4 W

Peak: 5 W

Microphone	Digital-array microphones
Volume controls	Media-control shortcut keys

Storage

Your computer supports one hard drive and three solid-state drives. Table 9. Storage specifications

Storage type	Interface type	Capacity
One 2.5-inch hard drive	SATA AHCI 6 Gbps	Up to 1 TB
One M.2 2242 solid-state drive	SATA AHCI 6 GbpsPCle NVMe up to 32 Gbps	Up to 1 TB
One M.2 2280 solid-state drive	SATA AHCI 6 GbpsPCle NVMe up to 32 Gbps	Up to 1 TB
One M.2 2280 solid-state drive	PCle NVMe up to 32 Gbps	Up to 1 TB

Intel Optane storage

Table 10. Intel Optane storage

Interface	PCIe 3.0 x2
Connector	M.2
Capacity	60 GB120 GB
Configurations supported	120 GB

Keyboard

Table 11. Keyboard specifications

Туре		RGB Backlit keyboard
------	--	----------------------

RGB per Key keyboard

Shortcut keys

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.



NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.

Keyboard shortcuts

Camera

Table 12. Camera specifications

Resolution

Still image: 2 megapixel

Video: 1920 x 1080 (Full HD) at

30 fps (maximum)

Diagonal viewing angle

74 degrees

Touch pad

Table 13. Touch pad specifications

Resolution • Horizontal: 1727

Vertical: 1092

Dimensions • Height: 56 mm (2.20 in)

• Width: 100 mm (3.94 in)

Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article <u>4027871</u> at <u>support.microsoft.com</u>.

Battery

Table 14. Battery specifications

Type 4-cell "smart" lithium-ion 6-cell "smart" lithium-ion

(68 WHr) (99 WHr)

Weight (maximum) 0.33 kg (0.72 lb) 0.43 kg (0.94 lb)

Voltage 15.20 VDC 11.40 VDC

Dimensions:

Height 13.50 mm (0.53 in)

Width 259.60 mm (10.22 in)

Depth 89.20 mm (3.51 in)

Temperature range:

Operating $0^{\circ}\text{C to }35^{\circ}\text{C }(32^{\circ}\text{F to }95^{\circ}\text{F})$

Storage -20°C to 60°C (-4°F to 140°F)

Charging time 4 hours (when the computer is off)

(approximate)

Life span (approximate) 300 discharge/charge cycles

Coin-cell battery CR-2032

Operating time Varies depending on operating conditions and can

significantly reduce under certain power-intensive

conditions.

Video

Table 15. Video specifications

	Integrated	Discrete
Controller	Intel UHD Graphics 630	 AMD Radeon RX 570 NVIDIA GeForce GTX 1060 NVIDIA GeForce GTX 1070 NVIDIA GeForce GTX 1080 with Max- Q Design Technology
Memory		6 GB GDDR58 GB GDDR58 GB GDDR5X

Power adapter

Table 16. Power adapter specifications

Туре	E180 W	E240 W
Input current (maximum)	2.34 A/2.50 A	3.50 A
Output current (continuous)	9.23 A	12.30 A
Diameter (connector)	7.40 mm	
Input voltage	100 VAC-240 VAC	
Input frequency	50 Hz-60 Hz	
Rated output voltage	19.50 VDC	
Temperature range:		
Operating	0°C to 40°C	(32°F to 104°F)
Storage	-40°C to 70°C	C (-40°F to 158°F)

Display

Table 17. Display specifications

Туре	15-inch FHD	15-inch UHD
G-Sync support	Optional	Yes
Resolution (maximum)	1920 x 1080	3840 x 2160
Pixel pitch	0.179 mm	0.090 mm
Operating angle	140 degrees	140 degrees
Viewing angle	80 degrees60/60/50/50 degrees	80 degrees
Refresh rate	• 60 Hz • 120 Hz	60 Hz
Dimensions: (excluding bezel)		
Width	344.16 mm (13.54 in)	345.60 mm (13.60 in)
Height	193.59 mm (7.62 in)	194.40 mm (7.65 in)
Diagonal	394.87 mm (15.54 in)	396.52 mm (15.61 in)
Controls	Brightness can be contro shortcut keys	olled using

Computer environment

Airborne contaminant level: G2 or lower as defined by ISA-S71.04-1985

Table 18. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)	0.66 GRMS	1.30 GRMS
Shock (maximum)*	110 G [†]	160 G ‡
Altitude (maximum)	-15.20 m to 3048 m (-50 ft to 10,000 ft)	-15.20 m to 10,668 m (-50 ft to 35,000 ft)

^{*} Measured using a random vibration spectrum that simulates user environment.

[†] Measured using a 2 ms half-sine pulse when the hard drive is in use.

 $^{\ \}ddagger$ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Keyboard shortcuts

Table 19. List of keyboard shortcuts

Keys	Description
FN + F1	Disconnect Alienware Graphics Amplifier
+ F2	Disable/enable wireless
FN F3	Mute audio
+ F4	Decrease volume
FN	Increase volume
+ E8	Switch to external display
+ F9	Decrease brightness
+ F10 0.	Increase brightness
FN + FII T-PAD	Disable/enable touch pad
FN + FIZ	Disable/enable AlienFX

Getting help and contacting Alienware

Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Table 20. Alienware products and online self-help resources

Information about Alienware products and services

www.alienware.com

Dell Help & Support app

Ö

Tips



Contact Support

In Windows search, type **Contact Support**, and press **Enter**.

Online help for operating system

www.dell.com/support/windows www.dell.com/support/linux

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on www.alienware.com/gamingservices

VR Support

www.dell.com/VRsupport

Videos providing step-by-step instructions to service your computer

www.youtube.com/alienwareservices

Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see www.alienware.com.

- NOTE: Availability varies by country and product, and some services may not be available in your country.
- NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.