

# Alienware Steam Machine R2

## Setup and Specifications

Computer Model: Alienware Steam  
Machine R2  
Regulatory Model: D07U  
Regulatory Type: D07U002/ D07U003



# Notes, cautions, and warnings

---



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2016-04

Rev. A00

# Contents

- Set up your computer.....4**
  - Remove the batteries from the Steam controller..... 8
- Controller Views..... 9**
  - Back..... 9
  - Front.....10
- Views..... 11**
  - Front.....11
  - Back..... 12
- Specifications..... 13**
  - Dimensions and weight..... 13
  - System information..... 13
  - Memory..... 13
  - Ports and connectors..... 14
  - Communications..... 14
  - Video..... 14
  - Audio..... 14
  - Storage.....15
  - Power adapter.....15
  - Computer environment..... 15
- Getting help and contacting Alienware..... 17**
  - Self-help resources..... 17
  - Contacting Alienware.....17

 
# Set up your computer

---


- 1 Connect the display.



- 2 Connect the network cable — optional.

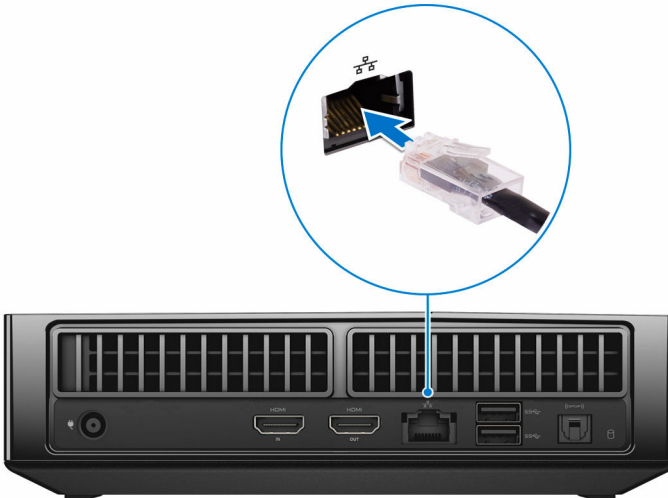

- 3** Connect the power adapter.

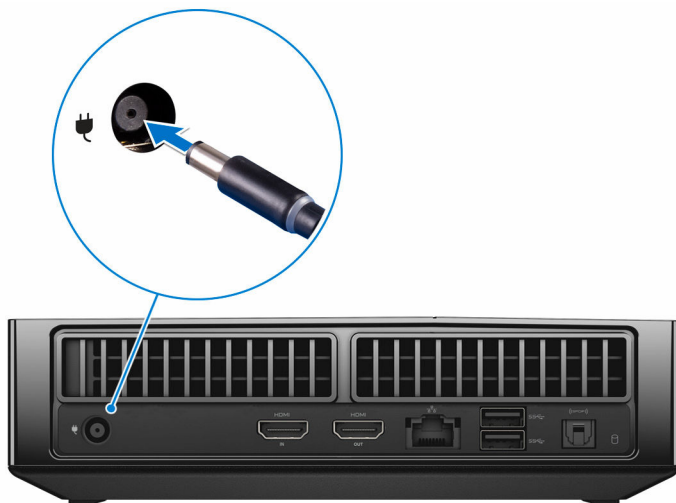 

- 4** Press the power button.



- 5 Insert the batteries in the Steam controller.



- 6** Turn on the controller.



## Remove the batteries from the Steam controller





# Controller Views

 
---

## Back



- 1 Right trigger
- 2 Mini USB port 2.0
- 3 Left Trigger
- 4 Left bumper
- 5 Left grip
- 6 Right grip
- 7 Right bumper

# Front

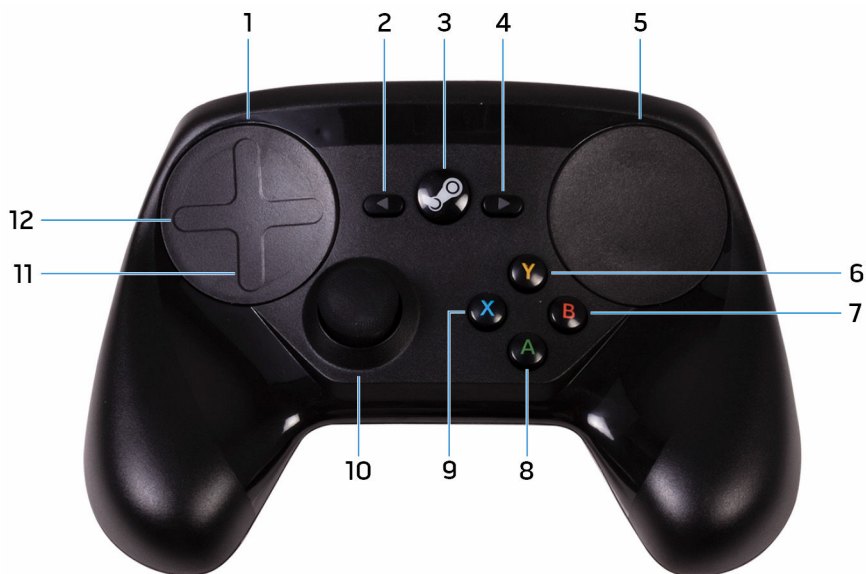


- 1 Left directional pad
- 2 Back button
- 3 Steam Home button
- 4 Start button
- 5 Right directional pad
- 6 Y button
- 7 B button
- 8 A button
- 9 X button
- 10 Analog stick
- 11 D-pad up/down
- 12 D-pad left/right

# Views

 ---

## Front

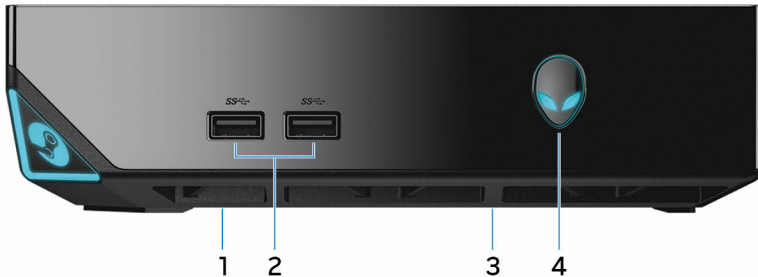

**1 USB 2.0 port (beneath USB port cover)**

Connect a Bluetooth/wireless dongle for wireless keyboard, mouse, and so on. Provides data transfer speeds up to 480 Mbps.

**2 USB 3.0 ports (2)**

Connect peripherals such as storage devices, printers, and so on. Provide data transfer speeds up to 5 Gbps.

**3 Service tag location**

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

**4 Power button**

Press to turn on the computer if it is turned off or in sleep state.

 
Press to shut down the computer if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.



**NOTE:** You can customize the power-button behavior in Power Options. For more information, see *Me and My Dell* at [www.dell.com/support](http://www.dell.com/support).

# Back

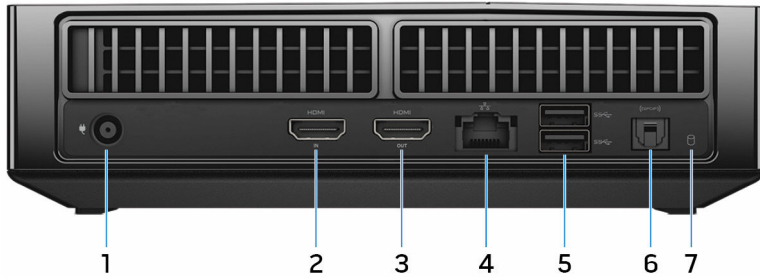

**1 Power-adaptor port**

Connect a power adapter to provide power to your computer.

**2 HDMI-in port**

Connect a gaming console, Blu-ray player, or other HDMI-out enabled devices.

**3 HDMI-out port**

Connect a monitor, TV, or other HDMI-in enabled devices. Provides video and audio output.

**4 Network port**

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or internet access.

**5 USB 3.0 ports (2)**

Connect peripherals such as storage devices, printers, and so on. Provide data transfer speeds up to 5 Gbps.

**6 Optical S/PDIF port**

Connect an amplifier, speakers, or a TV for digital audio output through optical cables.

**7 Hard-drive activity light**

Turns on when the computer reads from or writes to the hard drive.

# Specifications

---

## Dimensions and weight

Height	55 mm (2.17 in)
Width	200 mm (7.87 in)
Depth	200 mm (7.87 in)
Weight	1.81 kg (4 lb)



**NOTE:** The weight of your computer varies depending on the configuration ordered and the manufacturing variability.

## System information

Computer model	Alienware Steam Machine R2
Processor	<ul style="list-style-type: none"><li>▪ 6<sup>th</sup> Generation Intel Dual Core i3</li><li>▪ 6<sup>th</sup> Generation Intel Dual Core i5</li><li>▪ 6<sup>th</sup> Generation Intel Dual Core i7</li></ul>
Chipset	<ul style="list-style-type: none"><li>▪ Intel H110</li><li>▪ Intel H170</li></ul>
DMI speed	8.0 GT/s (64 bits)

## Memory

Slots	One SODIMM slot
Type	DDR4
Speed	2133 MHz
Configurations supported	4 GB and 8 GB

# Ports and connectors

---

**External:**

---

Network	One RJ45 port
USB	Four USB 3.0 ports
Video/Audio	<ul style="list-style-type: none"><li>• One optical S/PDIF port</li><li>• One HDMI-in port</li><li>• One HDMI-out port</li></ul>

---

**Internal:**

---

M.2 Card	One M.2 card slot for WLAN and Bluetooth
----------	--

## Communications

Ethernet	10/100/1000 Mbps Realtek RTL8111 Ethernet controller integrated on system board
Wireless	<ul style="list-style-type: none"><li>• Wi-Fi 802.11a/g/n</li><li>• Wi-Fi 802.11a/g/n/ac</li><li>• Bluetooth</li></ul>

## Video

Controller	Memory
NVIDIA GeForce GTX960 GPU	4GB
AMD Radeon R9 M470X	2 GB

## Audio

Controller	<ul style="list-style-type: none"><li>• Intel HD Audio</li><li>• Realtek ALC3234 for optical S/PDIF output</li></ul>
------------	--

# Storage

Interface	SATA 6 Gbps
Hard drive	One 2.5-inch drive
Solid-state drive	One M.2 slot

# Power adapter

Type	<ul style="list-style-type: none"><li>130 W</li><li>180 W</li></ul>
Input voltage	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz
Output current (continuous)	<ul style="list-style-type: none"><li>6.70 A</li><li>9.23 A</li></ul>
Rated output voltage	19.50 VDC
Temperature range: Operating	0°C to 40°C (32°F to 104°F)
Temperature range: Storage	–40°C to 70°C (–40°F to 158°F)

# Computer environment

**Airborne contaminant level:** G2 or lower as defined by ISA-S71.04-1985

	Operating	Storage
Temperature range	5°C to 35°C (41°F to 95°F)	–40°C to 65°C (–40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.26 GRMS	1.37 GRMS
Shock (maximum)	40 G for 2 ms with a change in velocity of 20 in/s (51 cm/s)†	105 G for 2 ms with a change in velocity of 52.5 in/s (133 cm/s)‡

	<b>Operating</b>	<b>Storage</b>
Altitude (maximum)	–15.20 m to 3048 m (–50 ft to 10,000 ft)	–15.20 m to 10,668 m (–50 ft to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.



# Getting help and contacting Alienware

---

## Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Information about Alienware products and services [www.alienware.com](http://www.alienware.com)

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on [www.alienware.com/gamingservices](http://www.alienware.com/gamingservices)

Videos providing step-by-step instructions to service your computer [www.youtube.com/alienwareservices](http://www.youtube.com/alienwareservices)

## Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see [www.alienware.com](http://www.alienware.com).



**NOTE:** Availability varies by country and product, and some services may not be available in your country.



**NOTE:** If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.