




# Dell Command | Monitor

Version 10.2.1 Reference Guide



## Anmerkungen, Vorsichtshinweise und Warnungen

-  **ANMERKUNG:** Eine ANMERKUNG macht auf wichtige Informationen aufmerksam, mit denen Sie Ihr Produkt besser einsetzen können.
-  **VORSICHT:** Ein VORSICHTSHINWEIS warnt vor möglichen Beschädigungen der Hardware oder vor Datenverlust und zeigt, wie diese vermieden werden können.
-  **WARNUNG:** Mit WARNUNG wird auf eine potenziell gefährliche Situation hingewiesen, die zu Sachschäden, Verletzungen oder zum Tod führen kann.

© 2008 -2019 Dell Inc. oder ihre Tochtergesellschaften. Alle Rechte vorbehalten. Dell, EMC und andere Marken sind Marken von Dell Inc. oder Tochterunternehmen. Andere Markennamen sind möglicherweise Marken der entsprechenden Inhaber.

<b>1 Introduction for Dell Command   Monitor 10.2.1</b>	<b>7</b>
<b>2 Dell Command   Monitor 10.2.1 Namespaces</b>	<b>8</b>
<b>3 Profiles for Dell Command   Monitor 10.2.1</b>	<b>9</b>
<b>4 Classes for Dell Command   Monitor 10.2.1</b>	<b>11</b>
<b>5 Dell Command   Monitor 10.2.1 classes and properties</b>	<b>12</b>
Classes supported for systems running Linux	12
Classes supported for systems running Windows	12
DCIM_AlertIndication	12
DCIM_ApplicationProxySetting	18
DCIM_BaseMetricDefinition	19
DCIM_Card	21
DCIM_Chassis	22
DCIM_Chip	26
DCIM_DesktopMonitor	27
DCIM_DHCPProtocolEndpoint	37
DCIM_EthernetPort	44
DCIM_FlatPanel	47
DCIM_IPProtocolEndpoint	49
DCIM_ImprovementProgramConsent	54
DCIM_ControllerView	54
DCIM_PhysicalDiskView	55
DCIM_VirtualDiskView	56
DCIM_PhysicalMemory	57
DCIM_PhysicalPackage	60
DCIM_ParallelPort	62
DCIM_RemoteServiceAccessPoint	65
DCIM_Slot	69
DCIM_SerialPort	73
DCIM_USBPort	79
DCIM_Memory	82
DCIM_PCIDevice	88
DCIM_DisplayController	90
DCIM_Fan	93
DCIM_IndicatorLED	97
DCIM_PowerSupply	100
DCIM_Battery	102
DCIM_Processor	108
DCIM_NumericSensor	117
DCIM_Sensor	124
DCIM_DeviceBay	129

DCIM_VideoHead.....	132
DCIM_Button.....	135
DCIM_LCDPanel.....	137
DCIM_NetworkPortConfigurationService.....	139
DCIM_TimeService.....	141
DCIM_AccountManagementService.....	143
DCIM_RoleBasedAuthorizationService.....	146
DCIM_PowerManagementService.....	148
DCIM_BootService.....	150
DCIM_IPConfigurationService.....	152
DCIM_PowerUtilizationManagementService.....	154
DCIM_BIOSService.....	157
DCIM_SoftwareInstallationService.....	160
DCIM_ComputerSystem.....	162
DCIM_RecordLog.....	167
DCIM_OperatingSystem.....	171
DCIM_SoftwareIdentity.....	175
DCIM_BIOSElement.....	177
DCIM_ConcreteJob.....	179
DCIM_BootSourceSetting.....	180
DCIM_BootConfigSetting.....	181
DCIM_IPAssignmentSettingData.....	182
DCIM_PowerAllocationSettingData.....	183
DCIM_AssetAcquisition.....	185
DCIM_AssetExtendedWarrantyInformation.....	186
DCIM_AssetOwnerInformation.....	186
DCIM_AssetSupportInformation.....	187
DCIM_AssetWarrantyInformation.....	188
DCIM_AssetSystemInformation.....	189
DCIM_AMTSettings.....	189
DCIM_ASFSettings.....	190
DCIM_VProSettings.....	190
DCIM_AlertIndicationSettingData.....	192
DCIM_HDDAlertIndicationSettingData.....	196
DCIM_BaseMetricValue.....	197
DCIM_LogEntry.....	198
DCIM_IndicatorLEDCapabilities.....	198
DCIM_ProcessorCapabilities.....	200
DCIM_AccountManagementCapabilities.....	201
DCIM_BootServiceCapabilities.....	201
DCIM_PlatformWatchdogServiceCapabilities.....	202
DCIM_DHCPCapabilities.....	203
DCIM_PowerUtilizationManagementCapabilities.....	204
DCIM_EnabledLogicalElementCapabilities.....	204
DCIM_ButtonCapabilities.....	205
DCIM_LCDPanelCapabilities.....	206
DCIM_PowerManagementCapabilities.....	207
DCIM_PhysicalAssetCapabilities.....	208
DCIM_RoleBasedManagementCapabilities.....	209
DCIM_AllocationCapabilities.....	209

DCIM_BIOSServiceCapabilities.....	211
DCIM_SoftwareInstallationServiceCapabilities.....	211
DCIM_ConcreteCollection.....	213
DCIM_RedundancySet.....	213
DCIM_Role.....	214
DCIM_IndicationSettingCollection.....	215
DCIM_ConfigurationCapacity.....	216
DCIM_Location.....	217
DCIM_BIOSEnumeration.....	218
DCIM_BIOSPassword.....	219
DCIM_BIOSString.....	220
DCIM_MemoryError.....	221
DCIM_IdentityContext.....	222
DCIM_OrderedComponent.....	222
DCIM_Container.....	222
DCIM_ConcreteComponent.....	222
DCIM_SystemDevice.....	223
DCIM_AccountOnSystem.....	223
DCIM_InstalledOS.....	223
DCIM_SystemBIOS.....	223
DCIM_SystemComponent.....	223
DCIM_SettingsDefineCapabilities.....	224
DCIM_DeviceSAPImplementation.....	225
DCIM_HostedAccessPoint.....	225
DCIM_HostedCollection.....	225
DCIM_HostedService.....	225
DCIM_VideoHeadOnController.....	226
DCIM_SAPSAPDependency.....	226
DCIM_ReferencedProfile.....	226
DCIM_MetricDefForME.....	226
DCIM_MetricForME.....	227
DCIM_MetricInstance.....	227
DCIM_ElementInConnector.....	227
DCIM_Docked.....	227
DCIM_ConcreteDependency.....	227
DCIM_Realizes.....	227
DCIM_ComputerSystemPackage.....	228
DCIM_RunningOS.....	228
DCIM_UseOfLog.....	228
DCIM_AssociatedIndicatorLED.....	228
DCIM_AssociatedCacheMemory.....	228
DCIM_AssociatedSensor.....	229
DCIM_RemoteAccessAvailableToElement.....	230
DCIM_ServiceServiceDependency.....	230
DCIM_DeviceConnection.....	230
DCIM_ElementSoftwareIdentity.....	230
DCIM_ElementCapabilities.....	231
DCIM_ElementSettingData.....	231
DCIM_OrderedMemberOfCollection.....	233
DCIM_MemberOfCollection.....	233

DCIM_OwningCollectionElement.....	234
DCIM_ElementConformsToProfile.....	234
DCIM_RoleLimitedToTarget.....	234
DCIM_ElementCapacity.....	234
DCIM_ServiceAffectsElement.....	234
DCIM_AssociatedPowerManagementService.....	236
DCIM_ServiceAvailableToElement.....	237
DCIM_LogManagesRecord.....	237
DCIM_InstalledSoftwareIdentity.....	237
DCIM_ConcretelIdentity.....	237
DCIM_SMARTAttributeInfo.....	238
DCIM_SettingsDefineState.....	238
DCIM_ElementLocation.....	239
DCIM_CredentialContext.....	239
DCIM_OwningJobElement.....	239
<b>6 BIOS settings supported in Dell Command   Monitor 10.2.1.....</b>	<b>240</b>
<b>7 Alerts in Dell Command   Monitor 10.2.1 .....</b>	<b>303</b>
<b>8 Sample scripts for Dell Command   Monitor 10.2.1.....</b>	<b>306</b>

# Introduction for Dell Command | Monitor

## 10.2.1

The Dell Command | Monitor software enables remote management of client systems by using application programs to access information, monitor the status, or change the state of the system, such as remotely shutting down the system. Dell Command | Monitor exposes, through standard interfaces, key system parameters that enable administrators to manage, inventory, monitor system health, and gather information about deployed Dell client systems. Dell Command | Monitor is designed for Dell Enterprise client systems, Dell IoT Gateway systems, and for Dell Embedded PCs. For more information on supported Dell systems see Release notes available at [dell.com/dellclientcommandsuite/manuals](https://dell.com/dellclientcommandsuite/manuals).

**NOTE:** Dell Command | Monitor was formerly Dell OpenManage Client Instrumentation (OMCI). After the OMCI version 8.2.1, OMCI is rebranded as Dell Command | Monitor.

**NOTE:** All classes or properties that are listed in the reference guide may not be supported on all Dell systems.

# Dell Command | Monitor 10.2.1 Namespaces

Namespaces are standards-based with implementation of multiple profiles as defined by the Distributed Management Task Force (DMTF). The following namespaces are available in Dell Command | Monitor:

- **root\dcim\sysman** - The CIM schema for this namespace is 2.17 and provides all the functionality of Dell Command | Monitor for Windows. Dell Command | Monitor for Windows, uses DASH-compliant namespace conventions. A DASH-compliant implementation uses a CIM-based data model for representing managed resources and services.
- **root/dcim/sysman** - The CIM schema for this namespace is 2.32.0 and provides all the functionality of Dell Command | Monitor for Linux.

# Profiles for Dell Command | Monitor 10.2.1

Dell Command | Monitor running on Microsoft Windows operating system uses industry standard profiles to represent the management data provided. These profiles are implemented either as defined or sometimes have Dell-specific extensions.

The following is a list of profiles that are implemented for Dell Command | Monitor for Windows:

## Non-extended profiles:

- **Base Metrics**—The Base Metrics Profile is a component profile that defines the minimum object model that is needed to provide dynamic metrics that are associated to existing managed elements and related associations.
- **Battery**—The Battery Profile extends the management capabilities of referencing profiles by adding the capability to represent batteries for manageability. The battery as a logical device is modeled as referencing the battery physical package for physical asset information, the sensor for sensor-reading information, and the profile registration for the schema implementation version information.
- **BIOS Management**—The BIOS Management Profile extends the management capabilities of referencing profiles by adding the capability to represent and configure BIOS settings, such as a Network Controller or IDE Controller. The individual BIOS settings' relationship with a respective device is also described.
- **Boot Control**—The Boot Control Profile describes the classes, associations, properties, and methods that are used to manage the boot control configurations of a physical or virtual computer system.
- **CPU**—The CPU Profile extends the management capability of referencing profiles by adding the capability to represent CPUs or processors in a managed system . CPU cache memory and associations with CPU physical aspects, and profile implementation version information, are modeled in this profile.
- **Fan**—The Fan Profile extends the management capabilities of referencing profiles by adding the capability to represent fans for manageability and describe fans in a redundant configuration. The fan as a logical device is modeled as referencing the fan physical package for physical asset information, a sensor for sensor reading information.
- **Indications**—The Indications Profile defines the CIM elements that are used to subscribe for indications of unsolicited events, to advertise the possible indications, and to represent indications used to report events in a managed system.
- **IP Interface**—The IP Interface Profile extends the management capability of referencing profiles by adding the capability to represent an IP interface of a managed system.
- **Operating system Status**—The operating system Status Profile extends the management capabilities of referencing profiles by adding the capability to perform basic management of operating systems installed on a system.
- **PCI Device**—The PCI Device Profile extends the management capabilities of referencing profiles by adding the capability to represent PCI devices for manageability, including PCI, PCI-X, PCI Express, bridge, and switch devices.
- **Physical Asset**—The Physical Asset Profile extends the management capability of the referencing profiles by adding the capability to describe the physical aspects of logical elements that the implementation is instantiating.
- **Power State Management**—The Power State Management Profile describes the classes, associations, properties, and methods that are used to manage the power of a computer system.
- **Profile Registration**—The Profile Registration extends the management capability of the referencing profiles by adding the capability to describe the registration and versioning of CIM profiles that are implemented by CIM-based system and component management instrumentations.
- **RecordLog**—The Record Log Profile is an autonomous profile that provides the management capabilities to represent logs of a managed system element.
- **Sensors**—The Sensors Profile extends the management capabilities of referencing profiles by adding the capability to represent sensors.
- **Software Inventory**—The Software Inventory Profile describes the CIM schema elements that are required to provide an inventory of installed BIOS, firmware, drivers, and related software in a managed system.
- **Device Tray**—The Device Tray Profile is a component profile for modeling a device tray of a modular system.
- **Software Update**—The Software Update Profile describes the classes, associations, properties, and methods used to support the installation and update of BIOS, firmware, drivers, and related software on a managed element within a managed system.
- **Base Desktop and Mobile**—The Base Desktop and Mobile Profile is an autonomous profile that defines the classes that are used to describe monolithic desktop or mobile computer hardware and related software. The scope of this profile is limited to monolithic desktop or mobile computer hardware and related software that are directly realized in physical components.

## Extended profiles:

- Asset Profile
- Ethernet Port Profile
- Event Configuration

- Serial Port
- Service processor Profile
- System Memory
- USB
- Docking Station
- Human Computer Interaction
- Display Controller

For more information about Profiles, see the website - [dmtf.org/standards/profiles](https://dmtf.org/standards/profiles).

## Classes for Dell Command | Monitor 10.2.1

Classes and properties are defined by the CIM schema. The profiles identify mandatory classes and properties to implement the profile.

For more information about CIM schema, classes and properties, see to the website - [dmtf.org/standards/cim](https://dmtf.org/standards/cim)

# Dell Command | Monitor 10.2.1 classes and properties

Dell Command | Monitor provides information for a namespace through different classes.

## Topics:

- [Classes supported for systems running Linux](#)
- [Classes supported for systems running Windows](#)

## Classes supported for systems running Linux

For systems running Linux operating system, only the following classes are currently supported:

- [DCIM\\_AlertIndication](#)
- [DCIM\\_AssetOwnerInformation](#)
- [DCIM\\_BIOSElement](#)
- [DCIM\\_BIOSEnumeration](#)
- [DCIM\\_BIOSPassword](#)
- [DCIM\\_BIOSService](#)
- [DCIM\\_Card](#)
- [DCIM\\_Chassis](#)
- [DCIM\\_ComputerSystem](#)
- [DCIM\\_ControllerView](#)
- [DCIM\\_Docked](#)
- [DCIM\\_Fan](#)
- [DCIM\\_LogEntry](#)
- [DCIM\\_Memory](#)
- [DCIM\\_Location](#)
- [DCIM\\_NumericSensor](#)
- [DCIM\\_PhysicalDiskView](#)
- [DCIM\\_Processor](#)
- [DCIM\\_VirtualDiskView](#)

## Classes supported for systems running Windows

The namespace to access the Dell Command | Monitor DMTF profiles is `root\dcim\sysman`.

The following tables describe the classes and properties associated with each class.

### DCIM\_AlertIndication

Table 1. AlertIndication

Property	Description	Supported Operating System(s)
<b>AlertingElementFormat</b>	The format of the AlertingManagedElement property is interpretable based on the value of this property.  Possible values are:	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
<b>AlertingManagedElement</b>	<ul style="list-style-type: none"> <li>• 0 = Unknown — The format is unknown or not meaningfully interpretable by a CIM client application.</li> <li>• 1 = Other — The format is defined by the value of the OtherAlertingElementFormat property.</li> <li>• 2 = CIMObjectPath — The format is a CIMObjectPath, with format NamespacePath:ClassName.Prop1 = <b>Value1</b>, Prop2=<b>Value2</b>, . . . specifying an instance in the CIM Schema.</li> </ul> <p>The identifying information of the entity (that is, the instance) for which this Indication is generated. The property contains the path of an instance, encoded as a string parameter — if the instance is modeled in the CIM Schema. If it is not a CIM instance, the property contains some identifying string that names the entity for which the Alert is generated. The path or identifying string is formatted per the AlertingElementFormat property.</p>	Microsoft Windows, Linux
<b>AlertType</b>	<p>Primary classification of the Indication.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other — The Indication's OtherAlertType property conveys its classification. Use of <b>Other</b> in an enumeration is a standard CIM convention. It means that the current Indication does not fit into the categories described by this enumeration.</li> <li>• 2 = Communications Alert — An Indication of this type is principally associated with the procedures and/or processes required to convey information from one point to another.</li> <li>• 3 = Quality of Service Alert — An Indication of this type is principally associated with a degradation or errors in the performance or function of an entity.</li> <li>• 4 = Processing Error — An Indication of this type is principally associated with a software or processing fault.</li> <li>• 5 = Device Alert — An Indication of this type is principally associated with an equipment or hardware fault.</li> <li>• 6 = Environmental Alert — An Indication of this type is principally associated with a condition relating to an enclosure in which the hardware resides, or other environmental considerations.</li> <li>• 7 = Model Change — The Indication addresses changes in the Information Model. For example, it may embed a Lifecycle Indication to convey the specific model change being alerted.</li> <li>• 8 = Security Alert — An Indication of this type is associated with security violations, detection of viruses, and similar issues.</li> </ul>	Microsoft Windows, Linux
<b>EventID</b>	<p>An instrumentation or provider-specific value that describes the underlying <b>real-world</b> event represented by the Indication. Two Indications with the same, non NULL EventID value are considered, by the creating entity, to represent the same event. The comparison of two EventID values is only defined for</p>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	Alert Indications with identical, non NULL values of SystemCreateClassName, SystemName, and ProviderName.	
<b>IndicationIdentifier</b>	<p>An identifier for the Indication. This property is similar to a key value in that it can be used for identification, when correlating Indications (see the CorrelatedIndications array). Its value SHOULD be unique as long as correlations are reported, but MAY be reused or left NULL if no future Indications will reference it in their CorrelatedIndications array. To ensure uniqueness, the value of IndicationIdentifier should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt;:&lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt;are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the IndicationIdentifier or that is a recognized ID that is assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness must not contain a colon (:). When using this algorithm, the first colon to appear in IndicationIdentifier must appear between &lt;OrgID&gt;and &lt;LocalID&gt; is chosen by the business entity and should not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity should assure that the resulting IndicationIdentifier is not reused across any IndicationIdentifiers that are produced by this or other providers for the NameSpace of this instance.</p>	Microsoft Windows
<b>IndicationTime</b>	<p>The time and date of creation of the Indication. The property may be set to NULL if the entity creating the Indication is not capable of determining this information.</p> <p><b>NOTE:</b> IndicationTime may be the same for two Indications that are generated in rapid succession.</p>	Microsoft Windows
<b>Message</b>	<p>The formatted message. This message is constructed by combining some or all of the dynamic elements specified in the MessageArguments property with the static elements uniquely identified by the MessageID in a message registry or other catalog associated with the OwningEntity.</p>	Microsoft Windows
<b>MessageArguments</b>	<p>An array containing the dynamic content of the message.</p>	Microsoft Windows, Linux
<b>MessageID</b>	<p>A string that uniquely identifies, within the scope of the OwningEntity, the format of the Message.</p>	Microsoft Windows
<b>OtherAlertingElementFormat</b>	<p>A string defining <b>Other</b> values for AlertingElementFormat. This value MUST be set to a non NULL value when AlertingElementFormat is set to</p>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	a value of 1 ( <b>Other</b> ). For all other values of AlertingElementFormat, the value of this string must be set to NULL.	
<b>OtherAlertType</b>	A string describing the Alert type — used when the AlertType property is set to 1, <b>Other State Change</b> .	Microsoft Windows, Linux
<b>OtherSeverity</b>	Holds the value of the user-defined severity value when <b>PerceivedSeverity</b> is 1 ( <b>Other</b> ).	Microsoft Windows, Linux
<b>OwningEntity</b>	A string that uniquely identifies the entity that owns the definition of the format of the Message described in this instance. OwningEntity MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity or standards body defining the format.	Microsoft Windows, Linux
<b>PerceivedSeverity</b>	<p>An enumerated value that describes the severity of the Alert Indication from the notifier's point of view:</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 and 0 — Information and Unknown (respectively) follow common usage. Literally, the AlertIndication is purely informational or its severity is unknown.</li> <li>• 1 = Other — By CIM convention, is used to indicate that the Severity's value can be found in the OtherSeverity property.</li> <li>• 3 = Degraded/Warning — Is used when it is appropriate to let the user decide if action is needed.</li> <li>• 4 = Minor — Is used to indicate that action is needed, but the situation is not serious now.</li> <li>• 5 = Major — Is used to indicate that action is needed NOW.</li> <li>• 6 = Critical — Is used to indicate that action is needed NOW and the scope is broad (perhaps an imminent outage to a critical resource results).</li> <li>• 7 = Fatal/Non recoverable — Is used to indicate that an error occurred, but it is too late to take remedial action.</li> </ul>	Microsoft Windows, Linux
<b>ProbableCause</b>	<p>An enumerated value that describes the probable cause of the situation that resulted in the AlertIndication.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Adapter/Card Error</li> <li>• 3 = Application Subsystem Failure</li> <li>• 4 = Bandwidth Reduced</li> <li>• 5 = Connection Establishment Error</li> <li>• 6 = Communications Protocol Error</li> <li>• 7 = Communications Subsystem Failure</li> <li>• 8 = Configuration/Customization Error</li> <li>• 9 = Congestion</li> <li>• 10 = Corrupt Data</li> </ul>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>· 11 = CPU Cycles Limit Exceeded</li> <li>· 12 = Dataset/Modem Error</li> <li>· 13 = Degraded Signal</li> <li>· 14 = DTE-DCE Interface Error</li> <li>· 15 = Enclosure Door Open</li> <li>· 16 = Equipment Malfunction</li> <li>· 17 = Excessive Vibration</li> <li>· 18 = File Format Error</li> <li>· 19 = Fire Detected</li> <li>· 20 = Flood Detected</li> <li>· 21 = Framing Error</li> <li>· 22 = HVAC Problem</li> <li>· 23 = Humidity Unacceptable</li> <li>· 24 = I/O Device Error</li> <li>· 25 = Input Device Error</li> <li>· 26 = LAN Error</li> <li>· 27 = Non-Toxic Leak Detected</li> <li>· 28 = Local Node Transmission Error</li> <li>· 29 = Loss of Frame</li> <li>· 30 = Loss of Signal</li> <li>· 31 = Material Supply Exhausted</li> <li>· 32 = Multiplexer Problem</li> <li>· 33 = Out of Memory</li> <li>· 34 = Output Device Error</li> <li>· 35 = Performance Degraded</li> <li>· 36 = Power Problem</li> <li>· 37 = Pressure Unacceptable</li> <li>· 38 = Processor Problem (Internal Machine Error)</li> <li>· 39 = Pump Failure</li> <li>· 40 = Queue Size Exceeded</li> <li>· 41 = Receive Failure</li> <li>· 42 = Receiver Failure</li> <li>· 43 = Remote Node Transmission Error</li> <li>· 44 = Resource at or Nearing Capacity</li> <li>· 45 = Response Time Excessive</li> <li>· 46 = Retransmission Rate Excessive</li> <li>· 47 = Software Error</li> <li>· 48 = Software Program Abnormally Terminated</li> <li>· 49 = Software Program Error (Incorrect Results)</li> <li>· 50 = Storage Capacity Problem</li> <li>· 51 = Temperature Unacceptable</li> <li>· 52 = Threshold Crossed</li> <li>· 53 = Timing Problem</li> <li>· 54 = Toxic Leak Detected</li> <li>· 55 = Transmit Failure</li> <li>· 56 = Transmitter Failure</li> <li>· 57 = Underlying Resource Unavailable</li> <li>· 58 = Version MisMatch</li> <li>· 59 = Previous Alert Cleared</li> <li>· 60 = Login Attempts Failed</li> <li>· 61 = Software Virus Detected</li> <li>· 62 = Hardware Security Breached</li> <li>· 63 = Denial of Service Detected</li> </ul>	

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>· 64 = Security Credential MisMatch</li> <li>· 65 = Unauthorized Access</li> <li>· 66 = Alarm Received</li> <li>· 67 = Loss of Pointer</li> <li>· 68 = Payload Mismatch</li> <li>· 69 = Transmission Error</li> <li>· 70 = Excessive Error Rate</li> <li>· 71 = Trace Problem</li> <li>· 72 = Element Unavailable</li> <li>· 73 = Element Missing</li> <li>· 74 = Loss of Multi Frame</li> <li>· 75 = Broadcast Channel Failure</li> <li>· 76 = Invalid Message Received</li> <li>· 77 = Routing Failure</li> <li>· 78 = Backplane Failure</li> <li>· 79 = Identifier Duplication</li> <li>· 80 = Protection Path Failure</li> <li>· 81 = Sync Loss or Mismatch</li> <li>· 82 = Terminal Problem</li> <li>· 83 = Real Time Clock Failure</li> <li>· 84 = Antenna Failure</li> <li>· 85 = Battery Charging Failure</li> <li>· 86 = Disk Failure</li> <li>· 87 = Frequency Hopping Failure</li> <li>· 88 = Loss of Redundancy</li> <li>· 89 = Power Supply Failure</li> <li>· 90 = Signal Quality Problem</li> <li>· 91 = Battery Discharging</li> <li>· 92 = Battery Failure</li> <li>· 93 = Commercial Power Problem</li> <li>· 94 = Fan Failure</li> <li>· 95 = Engine Failure</li> <li>· 96 = Sensor Failure</li> <li>· 97 = Fuse Failure</li> <li>· 98 = Generator Failure</li> <li>· 99 = Low Battery</li> <li>· 100 = Low Fuel</li> <li>· 101 = Low Water</li> <li>· 102 = Explosive Gas</li> <li>· 103 = High Winds</li> <li>· 104 = Ice Buildup</li> <li>· 105 = Smoke</li> <li>· 106 = Memory Mismatch</li> <li>· 107 = Out of CPU Cycles</li> <li>· 108 = Software Environment Problem</li> <li>· 109 = Software Download Failure</li> <li>· 110 = Element Reinitialized</li> <li>· 111 = Timeout</li> <li>· 112 = Logging Problems</li> <li>· 113 = Leak Detected</li> <li>· 114 = Protection Mechanism Failure</li> <li>· 115 = Protecting Resource Failure</li> <li>· 116 = Database Inconsistency</li> </ul>	

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>117 = Authentication Failure</li> <li>118 = Breach of Confidentiality</li> <li>119 = Cable Tamper</li> <li>120 = Delayed Information</li> <li>121 = Duplicate Information</li> <li>122 = Information Missing</li> <li>123 = Information Modification</li> <li>124 = Information Out of Sequence</li> <li>125 = Key Expired</li> <li>126 = Non-Repudiation Failure</li> <li>127 = Out of Hours Activity</li> <li>128 = Out of Service</li> <li>129 = Procedural Error</li> <li>130 = Unexpected Information</li> </ul>	
<b>ProviderName</b>	The name of the Provider generating this Indication.	Microsoft Windows, Linux
<b>SystemCreationClassName</b>	The scoping of the creation class name of the system for the provider, generating this indication.	Microsoft Windows, Linux
<b>SystemName</b>	The scoping name of the system for the provider, generating this indication.	Microsoft Windows, Linux
<b>Trending</b>	<p>Provides information on trending — trending up, down, or no change.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Not Applicable</li> <li>2 = Trending Up</li> <li>3 = Trending Down</li> <li>4 = No Change</li> </ul>	Microsoft Windows, Linux

## DCIM\_ApplicationProxySetting

Table 2. ApplicationProxySetting

Property	Description
<b>Proxy Address</b>	Proxy Hostname used by application
<b>Port Number</b>	Proxy Port used by application
<b>ChangeProxySetting (Method)</b>	<p>This method changes the proxy hostname and port number to be used by Dell Command   Monitor</p> <p>Parameters:</p> <ul style="list-style-type: none"> <li>New Hostname value to be set</li> <li>New Port value to be set</li> </ul> <p>Return Values:</p> <ul style="list-style-type: none"> <li>A return code of 0 indicates the proxy settings that were updated successfully.</li> <li>A return code of 1 indicates the proxy settings that were not updated successfully.</li> </ul>

# DCIM\_BaseMetricDefinition

Table 3. BaseMetricDefinition

Property	Description
<b>Caption</b>	The Caption property is a short textual description (one- line string) of the object.
<b>Description</b>	The Description property provides a textual description of the object.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>Accuracy</b>	Indicates the accuracy of the values reported for this metric.
<b>AccuracyUnits</b>	The accuracy is expressed as the value of theAccuracy property in the units specified by the AccuracyUnits property.
<b>BreakdownDimensions</b>	Defines one or more strings that can be used to refine (break down) queries against the BaseMetricValues along a certain dimension. An example is a transaction name, allowing the break down of the total value for all transactions into a set of values, one for each transaction name. Other examples might be application system or user group name. The strings are free format and should be meaningful to the end users of the metric data. The strings indicate which break down dimensions are supported for this metric definition, by the underlying instrumentation.
<b>Calculable</b>	<p>An enumerated value that describes the characteristics of the metric, for purposes of performing calculations.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 1 = Non-calculable</li><li>• 2 = Summable</li><li>• 3 = Non-summable</li></ul>
<b>ChangeType</b>	<p>ChangeType indicates how the metric value changes, in the form of typical combinations of finer grain attributes such as direction change, minimum and maximum values, and wrapping semantics.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 2 = N/A</li><li>• 3 = Counter</li><li>• 4 = Gauge</li><li>• 5..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li><li>• 3 = Counter</li></ul>
<b>DataType</b>	<p>The data type of the metric. These types represent the datatypes defined for CIM.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>1 = boolean</li> <li>2 = char16</li> <li>3 = datetime</li> <li>4 = real32</li> <li>5 = real64</li> <li>6 = sint16</li> <li>7 = sint32</li> <li>8 = sint64</li> <li>9 = sint8</li> <li>10 = string</li> <li>11 = uint16</li> <li>12 = uint32</li> <li>13 = uint64</li> <li>14 = uint8</li> </ul>
<b>GatheringType</b>	<p>GatheringType indicates how the metric values are gathered by the underlying instrumentation. This allows the client application to choose the right metric for the purpose.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = OnChange</li> <li>3 = Periodic</li> <li>4 = OnRequest</li> <li>5..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>Id</b>	A string that uniquely identifies the metric definition. The use of OSF UUID/ GUIDs is recommended.
<b>IsContinuous</b>	True
<b>Name</b>	The name of the metric. This name does not have to be unique, but should be descriptive and may contain blanks.
<b>ProgrammaticUnits</b>	Identifies the specific units of a value. The value of this property shall be a legal value of the Programmatic Units qualifier as defined in Appendix C.1 of DSP0004 V2.4 or later.
<b>SampleInterval</b>	If metric values are collected at regular intervals, the SampleInterval property indicates the length of the interval. If non-null, the value of the SampleInterval shall be expressed in interval notation. A value of NULL shall indicate the SampleInterval is unknown. A value of 99990101000000.000000+000 shall indicate the sampling interval is irregular.
<b>TimeScope</b>	<p>TimeScope indicates the time scope to which the metric value applies.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Point</li> <li>3 = Interval</li> <li>4 = StartupInterval</li> <li>5..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>Units</b>	Identifies the specific units of a value. Examples are Bytes, Packets, Jobs, Files, Milliseconds, and Amps.

# DCIM\_Card

Table 4. Card

Property	Description
<b>CanBeFRUed</b>	Boolean that indicates whether this PhysicalElement can be FRUed (TRUE) or not (FALSE).
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>HostingBoard</b>	Boolean indicating that this Card is a Motherboard or, more generically, a baseboard in a Chassis.
<b>Manufacturer</b>	The name of the organization responsible for producing the PhysicalElement. This organization may be the entity from whom the Element is purchased, but it is not necessarily true. The latter information is contained in the Vendor property of CIM_Product.
<b>Model</b>	The name by which the PhysicalElement is known.
<b>PackageType</b>	<p>Enumeration defining the type of the PhysicalPackage.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown — Indicates that the package type is not known.</li><li>• 1 = Other — The package type does not correspond to an existing enumerated value. The value is specified using the OtherPackageType property.</li><li>• 2 = Rack</li><li>• 3 = Chassis/Frame</li><li>• 4 = Cross Connect/Backplane</li><li>• 5 = Container/Frame Slot</li><li>• 6 = Power Supply</li><li>• 7 = Fan</li><li>• 8 = Sensor</li><li>• 9 = Module/Card</li><li>• 10 = Port/Connector</li><li>• 11 = Battery</li><li>• 12 = Processor</li><li>• 13 = Memory</li><li>• 14 = Power Source/Generator</li><li>• 15 = Storage Media Package (e.g., Disk or Tape Drive)</li><li>• 16 = Blade</li><li>• 17 = Blade Expansion</li></ul>

Property	Description
	<p><b>NOTE:</b> This enumeration expands on the list in the Entity MIB (the attribute, <code>entPhysicalClass</code>). The numeric values are consistent with CIM's enum numbering guidelines, but are slightly different than the MIB's values.</p> <p>The values <b>Rack</b> through <b>Port/Connector</b> are defined per the Entity-MIB (where the semantics of rack are equivalent to the MIB's <b>stack</b> value). The other values (for battery, processor, memory, power source/generator and storage media package) are self-explanatory. A value of <b>Blade</b> should be used when the <code>PhysicalPackage</code> contains the operational hardware aspects of a <code>ComputerSystem</code>, without the supporting mechanicals such as power and cooling. For example, a Blade Server includes processor(s) and memory, and relies on the containing chassis to supply power and cooling. In many respects, a Blade can be considered a <b>Module/Card</b>. However, it is tracked differently by inventory systems and differs in terms of service philosophy. For example, a Blade is intended to be hot-plugged into a hosting enclosure without requiring additional cabling, and does not require a cover to be removed from the enclosure for installation. Similarly, a <b>Blade Expansion</b> has characteristics of a <b>Blade</b> and a <b>Module/Card</b>. However, it is distinct from both due to inventory tracking and service philosophy, and because of its hardware dependence on a Blade. A Blade Expansion must be attached to a Blade prior to inserting the resultant assembly into an enclosure.</p>
<b>PartNumber</b>	The part number assigned by the organization that is responsible for producing or manufacturing the <code>PhysicalElement</code> .
<b>SKU</b>	The stock-keeping unit number for this <code>PhysicalElement</code> .
<b>Tag</b>	An arbitrary string that uniquely identifies the Physical Element and serves as the key of the Element. The Tag property can contain information such as asset tag or serial number data. The key for <code>PhysicalElement</code> is placed very high in the object hierarchy to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on. For example, a hotswappable or removable component can be taken from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for <code>PhysicalElement</code> is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.

## DCIM\_Chassis

Table 5. Chassis

Property	Description
<b>BreachDescription</b>	A free-form string providing more information if the <code>SecurityBreach</code> property indicates that a breach or some other security-related event occurred.
<b>CanBeFRUed</b>	Boolean that indicates whether this <code>PhysicalElement</code> can be FRUed (TRUE) or not (FALSE).
<b>ChassisPackageType</b>	Indicates the physical form factor for the type of Chassis. Possible values are:

Property	Description
	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = SMBIOS Reserved</li> <li>• 3 = Desktop</li> <li>• 4 = Low Profile Desktop</li> <li>• 5 = Pizza Box</li> <li>• 6 = Mini Tower</li> <li>• 7 = Tower</li> <li>• 8 = Portable</li> <li>• 9 = LapTop</li> <li>• 10 = Notebook</li> <li>• 11 = Hand Held</li> <li>• 12 = Docking Station</li> <li>• 13 = All in One</li> <li>• 14 = Sub Notebook</li> <li>• 15 = Space-Saving</li> <li>• 16 = Lunch Box</li> <li>• 17 = Main System Chassis</li> <li>• 18 = Expansion Chassis</li> <li>• 19 = SubChassis</li> <li>• 20 = Bus Expansion Chassis</li> <li>• 21 = Peripheral Chassis</li> <li>• 22 = Storage Chassis</li> <li>• 23 = SMBIOS Reseved</li> <li>• 24 = Sealed-Case PC</li> <li>• 25 = SMBIOS Reserved</li> <li>• 26 = CompactPCI</li> <li>• 27 = AdvancedTCA</li> <li>• 28 = Blade Enclosure</li> <li>• 29 = SMBIOS Reserved</li> <li>• 30 = Tablet</li> <li>• 31 = Convertible</li> <li>• 32 = Detachable</li> <li>• 33 = IoT Gateway</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000..0xFFFF = Vendor Reserved</li> </ul> <p>This property may have a value when the PackageType property contains the value 3 <b>Chassis Frame</b>. A value of 28 <b>Blade Enclosure</b> indicates that the Chassis is designed to contain one or more PhysicalPackage(s) of PackageType 16 <b>Blade</b> or PackageType 17 <b>Blade Expansion</b>.</p>
<b>ChassisTypeDescription</b>	A string providing more information on the ChassisPackageType.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.
	<p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly</p>

Property	Description
<b>LockPresent</b>	Boolean indicating whether the Frame is protected with a lock.
<b>Manufacturer</b>	The name of the organization responsible for producing the PhysicalElement. This organization may be the entity from whom the Element is purchased, but this is not necessarily true. The latter information is contained in the Vendor property of CIM_Product.
<b>Model</b>	The name by which the PhysicalElement is generally known.
<b>Name</b>	The Name property defines the label by which the object is known. When sub-classed, the Name property can be overridden to be a Key property.
<b>PackageType</b>	<p>Enumeration defining the type of the PhysicalPackage.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the package type is not known.</li> <li>• 1 = Other — The package type does not correspond to an existing enumerated value. The value is specified using the OtherPackageType property.</li> <li>• 2 = Rack</li> <li>• 3 = Chassis/Frame</li> <li>• 4 = Cross Connect/Backplane</li> <li>• 5 = Container/Frame Slot</li> <li>• 6 = Power Supply</li> <li>• 7 = Fan</li> <li>• 8 = Sensor</li> <li>• 9 = Module/Card</li> <li>• 10 = Port/Connector</li> <li>• 11 = Battery</li> <li>• 12 = Processor</li> <li>• 13 = Memory</li> <li>• 14 = Power Source/Generator</li> <li>• 15 = Storage Media Package (example, Disk or Tape Drive)</li> <li>• 16 = Blade</li> <li>• 17 = Blade Expansion</li> </ul>
	<p><b>NOTE:</b> This enumeration expands on the list in the Entity MIB (the attribute, entPhysicalClass). The numeric values are consistent with CIM's enum numbering guidelines, but are slightly different than the MIB's values.</p>
	<p>The values <b>Rack</b> through <b>Port/Connector</b> are defined per the Entity-MIB (where the semantics of rack are equivalent to the MIB's <b>stack</b> value).</p> <p>The other values (for battery, processor, memory, power source/generator and storage media package) are self-explanatory. A value of <b>Blade</b> should be used when the PhysicalPackage contains the operational hardware aspects of a ComputerSystem, without the supporting mechanicals such as power and cooling. For example, a Blade Server includes processor(s) and memory, and relies on the containing chassis to supply power and cooling.</p>

Property	Description
	<p>In many respects, a Blade can be considered a <b>Module/Card</b>. However, it is tracked differently by inventory systems and differs in terms of service philosophy. For example, a Blade is intended to be hot-plugged into a hosting enclosure without requiring additional cabling, and does not require a cover to be removed from the enclosure for installation. Similarly, a <b>Blade Expansion</b> has characteristics of a <b>Blade</b> and a <b>Module/Card</b>. However, it is distinct from both due to inventory tracking and service philosophy, and because of its hardware dependence on a Blade. A Blade Expansion must be attached to a Blade prior to inserting the resultant assembly into an enclosure.</p>
PartNumber	<p>The part number assigned by the organization that is responsible for producing or manufacturing the PhysicalElement.</p>
PropertyOwnershipTag	<p>Property Ownership Tag of a system.</p>
SecurityBreach	<p>An enumerated, integer-valued property indicating whether a physical breach of the Frame was attempted but unsuccessful (value = <b>4</b>) or attempted and successful (value = <b>5</b>).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 1 = Other</li> <li>· 2 = Unknown</li> <li>· 3 = No Breach</li> <li>· 4 = Breach Attempted</li> <li>· 5 = Breach Successful</li> </ul>
SKU	<p>The stock-keeping unit number for this PhysicalElement.</p>
Serial Number	<p>Manufacturer-allocated number is used to identify the physical element.</p>
Version	<p>Indicates the version of the identified physical element.</p>
Tag	<p>An arbitrary string that uniquely identifies the Physical Element and serves as the key of the Element. The Tag property can contain information such as asset tag or serial number data. The key for PhysicalElement is placed very high in the object hierarchy in order to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on. For example, a hotswappable or removable component can be taken from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for Physical Element is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.</p>
VendorCompatibilityStrings	<p>An array of strings that identify the component that is compatible with, and can be inserted in a slot that reports this string as one of the array element in the VendorCompatibilityStrings. This allows system administrators to determine whether it is appropriate to insert a package into a slot to ensure uniqueness within the NameSpace, each value defined by the vendor for use in the VendorCompatibilityStrings property SHOULD be constructed using the following <b>preferred</b> algorithm: : Where and are separated by a colon ':', and where MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority</p>

Property	Description
	(This is similar to the _ structure of Schema class names.) In addition, to ensure uniqueness MUST NOT contain a colon (':'). When using this algorithm, the first colon to appear in InstanceID MUST appear between and . is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements.
<b>ChangePropertyOwnershipTag (Method)</b>	This method allows a user to change the Property Ownership Tag of a system.
<b>ChangeAssetTag (Method)</b>	This method allows a user to change the Asset Tag of a system.

## DCIM\_Chip

Table 6. Chip

Property	Description
<b>CanBeFRUed</b>	Boolean that indicates whether this PhysicalElement can be FRUed (TRUE) or not (FALSE).
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often sub classed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>Manufacturer</b>	The name of the organization responsible for producing the PhysicalElement. This organization may be the entity from where the Element is purchased, but this is not necessarily true. The latter information is contained in the Vendor property of CIM_Product.
<b>Model</b>	The name by which the PhysicalElement is generally known.
<b>PartNumber</b>	The part number assigned by the organization that is responsible for producing or manufacturing the PhysicalElement.
<b>SerialNumber</b>	A manufacturer-allocated number used to identify the Physical Element.
<b>SKU</b>	The stock-keeping unit number for this PhysicalElement.
<b>Tag</b>	An arbitrary string that uniquely identifies the Physical Element and serves as the key of the Element. The Tag property can contain information such as asset tag or serial number data. The key for PhysicalElement is placed very high in the object hierarchy to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on.

Property	Description
	For example, a hotswappable or removable component can be taken from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for Physical Element is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.

## DCIM\_DesktopMonitor

Table 7. DesktopMonitor

Property	Description
<b>Bandwidth</b>	Monitor's bandwidth in Mega Hertz. If unknown, enter 0.
<b>Brightness</b>	This property represents the brightness/Luminance of the video output. The property value is from 0 to the MaxBrightness property value. If the Brightness property is implemented but the brightness is unknown at the time, the property has a value 0x80000000.
<b>Caption</b>	The Caption property is a short textual description (one- line string) of the object.
<b>ColorCodeFormatSupported</b>	Color code format supported.
<b>ColorDepthBits</b>	Color Bit Depth.
<b>ColorModePreset</b>	This property defines a specified color temperature of the display. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = sRGB</li> <li>• 3 = Display Native</li> <li>• 4 = 4000K</li> <li>• 5 = 5000K</li> <li>• 6 = 6500K</li> <li>• 7 = 7500K</li> <li>• 8 = 8200K</li> <li>• 9 = 9300K</li> <li>• 1011 = 10000K</li> <li>• 12 = 11500K</li> <li>• 13 = User 1</li> <li>• 14 = User</li> <li>• 2 .. = User 3</li> <li>• 32768..65535 = DMTF Reserved</li> </ul>
<b>ColorModePresetCapabilities</b>	This property lists the allowed values for ColorModePreset. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = sRGB</li> <li>• 3 = Display Native</li> <li>• 4 = 4000K</li> <li>• 5 = 5000K</li> <li>• 6 = 6500K</li> <li>• 7 = 7500K</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>8 = 8200K</li> <li>9 = 9300K</li> <li>1011 = 10000K</li> <li>12 = 11500K</li> <li>13 = User 1</li> <li>14 = User</li> <li>.. = User 3</li> <li>32768..65535 = DMTF Reserved</li> </ul>
<b>CommunicationStatus</b>	<p>Indicates the ability of the instrumentation to communicate with the underlying ManagedElement. A Null return indicates the implementation (provider) does not implement this property.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates that the implementation is in general capable of returning this property, but is unable to do so now.</li> <li>1 = Not Available — Indicates that the implementation (provider) is capable of returning a value for this property, but not ever for this particular piece of hardware/software or the property is intentionally not used because it adds no meaningful information (as in the case of a property that is intended to add additional info to another property).</li> <li>2 = Communication OK — indicates that communication is established with the element, but does not convey any quality of service.</li> <li>3 = Lost Communication — Indicates that the Managed Element is known to exist and has been contacted successfully in the past, but is unreachable.</li> <li>4 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>
<b>CompositSyncSignalOnGreenVideoSupported</b>	Composite Sync Signal on Green video is supported.
<b>CompositSyncSignalOnHorizontalSupported</b>	Composite Sync Signal on Horizontal is supported.
<b>ContinuousFrequency</b>	For EDID 1.3, this bit indicated support for or no support for GTF(using the default GTF parameter values). For EDID 1.4 this bit has been redefined to indicate Continuous frequency( <b>1</b> ) or Non-Continuous Frequency( <b>0</b> ).
<b>Contrast</b>	This property represents the contrast of the video output. The property value is from 0 to the MaxContrast property value. If the Contrast property is implemented but the contrast is unknown at the time, the property has a value 0x80000000.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>CurrentResolutionH</b>	This property indicated the current horizontal resolution in pixels.
<b>CurrentResolutionV</b>	This property indicated the current vertical resolution in pixels.
<b>Description</b>	Provides a textual description of the object.

Property	Description
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>DisplayCharacteristics</b>	<p>This array property represents various characteristics of a video output device. value.</p> <ul style="list-style-type: none"> <li>• StandbyModeSupported: the video output device can go into a stand by mode,</li> <li>• SuspendModeSupported: the video output device can go into a suspend mode,</li> <li>• VeryLowPowerSupported: the video output goes into a low power mode. If DisplayCharacteristics is implemented but the value is unknown, the property has an Unknown</li> </ul> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = StandbyModeSupported</li> <li>• 3 = SuspendModeSupported</li> <li>• 4 = VeryLowPowerSupported</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>DisplayMode</b>	<p>This property permits the selection of a preset optimized by manufacturer for an application type or the selection of a user-defined setting.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Standard/default mode</li> <li>• 3 = Productivity</li> <li>• 4 = Mixed</li> <li>• 5 = Movie</li> <li>• 6 = User defined</li> <li>• 7 = Games</li> <li>• 8 = Sports</li> <li>• 9 = Professional</li> <li>• 10 = Standard (intermediate power)</li> <li>• 11 = Standard(low power)</li> <li>• 12 = demonstration</li> <li>• 13 = Dynamic contrast</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>DisplayModeCapabilities</b>	<p>This property lists the allowed values for DisplayMode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Standard/default mode</li> <li>• 3 = Productivity</li> <li>• 4 = Mixed</li> <li>• 5 = Movie</li> <li>• 6 = User defined</li> <li>• 7 = Games</li> <li>• 8 = Sports</li> <li>• 9 = Professional</li> <li>• 10 = Standard (intermediate power)</li> <li>• 11 = Standard(low power)</li> <li>• 12 = demonstration</li> <li>• 13 = Dynamic contrast</li> <li>• .. = DMTF Reserved</li> </ul>

Property	Description
<b>EDIDGamma</b>	<ul style="list-style-type: none"> <li>32768..65535 = Vendor Reserved</li> </ul> <p>Display transfer characteristics(GAMMA).Range is from 1.00-&gt;3.54. GAMMA = (EDID Value + 100) / 100</p>
<b>EDIDVersionNumber</b>	EDID version and reversion number.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled</b> (value = <b>2</b>).</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = 4) and starting (value = 10) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li> <li>4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li> <li>6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li> <li>7 = In Test — Indicates that the element is in a test state.</li> <li>8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li> <li>9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>11..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>FrequencyH</b>	This property is a horizontal synchronization signal frequency in Hz as determined by the display.
<b>FrequencyV</b>	This property is a vertical synchronization signal frequency in Hz as determined by the display.
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — The implementation cannot report on HealthState now. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>15 = Minor failure — All functionality is available but some may be degraded.</li> <li>20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>25 = Critical failure — The element is nonfunctional and recovery may not be possible.</li> <li>30 = Non-recoverable error — The element has failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>.. = DMTF Reserved</li> </ul>
<b>IdentifyingDescriptions</b>	An array of free-form strings providing explanations and details behind the entries in the OtherIdentifyingInfo array. Each entry of this array is related to the entry in OtherIdentifyingInfo that is located at the same index.
<b>InputAnalog</b>	Input is an analog video signal interface.
<b>InputDigital</b>	Input is a digital video signal interface.
<b>InputDisplayPort</b>	DisplayPort is supported.
<b>InputDVI</b>	DVI is supported.
<b>InputHDMI</b>	HDMI is supported.
<b>InputSource</b>	<p>An enumerated value identifying the current input source. Writing a new value into this property changes the device's input source to the specified value, if the value is supported as specified in InputSourceCapabilities. If the requested value is not in InputSourceCapabilities, then the current value of InputSource is unchanged.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Analog Video (R/G/B) #1</li> <li>• 3 = Analog Video (R/G/B) #2</li> <li>• 4 = Digital Video (TMDS) #1</li> <li>• 5 = Digital Video (TMDS) #2</li> <li>• 6 = Composite Video #1</li> <li>• 7 = Composite Video #2</li> <li>• 8 = S-video #1</li> <li>• 9 = S-video #2</li> <li>• 1011 = Tuner - Analog #1</li> <li>• 12 = Tuner - Analog #2</li> <li>• 13 = Tuner - Digital #1</li> <li>• 14 = Tuner - Digital #2</li> <li>• 15 = Component Video #1</li> <li>• 16 = Component Video #2</li> <li>• 17 = Component Video #3</li> <li>• 18 = Digital Video (DisplayPort)</li> <li>• #1 .. = Digital Video (DisplayPort)</li> <li>• #2 32768..65535 = DMTF Reserved</li> </ul>
<b>InputSourceCapabilities</b>	<p>This property lists the allowed values for InputSource.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Analog Video (R/G/B) #1</li> <li>• 3 = Analog Video (R/G/B) #2</li> <li>• 4 = Digital Video (TMDS) #1</li> <li>• 5 = Digital Video (TMDS) #2</li> <li>• 6 = Composite Video #1</li> <li>• 7 = Composite Video #2</li> <li>• 8 = S-video #1</li> <li>• 9 = S-video #2</li> <li>• 1011 = Tuner - Analog #1</li> <li>• 12 = Tuner - Analog #2</li> <li>• 13 = Tuner - Digital #1</li> <li>• 14 = Tuner - Digital #2</li> <li>• 15 = Component Video #1</li> <li>• 16 = Component Video #2</li> <li>• 17 = Component Video #3</li> <li>• 18 = Digital Video (DisplayPort)</li> <li>• #1 .. = Digital Video (DisplayPort)</li> <li>• #2 32768..65535 = DMTF Reserved</li> </ul>
<b>MaxBrightness</b>	<p>This property defines the maximum value of brightness of the video output device. Different manufacturers may have different values.</p>
<b>MaxContrast</b>	<p>This property represents the maximum value of contrast of the video output device. Different manufacturers may have different values.</p>
<b>MaxQuiesceTime</b>	<p>The use of this property has been deprecated. When evaluating the use of Quiesce, it was determined that this single property is not adequate for describing when a device will automatically exit a quiescent state. In fact, the most likely scenario for a device to exit a quiescent state was determined to be based on the number of outstanding requests queued rather than on a maximum time. This decision is reevaluated and later. Deprecated description: Maximum time, in milliseconds, that a Device can run in a <b>Quiesced</b> state.</p>

Property	Description
<b>MCCSVersionNumber</b>	<p>The state is defined in its Availability and AdditionalAvailability properties, where <b>Quiesced</b> is conveyed by the value 21. What occurs at the end of the time limit is device-specific. The Device can unquiesce, can be offline, or can take other actions. A value of 0 indicates that a Device can remain quiesced indefinitely.</p> <p>This property represents the version number of the Monitor Command and Control Set (MCCS) standard recognized by the display.</p>
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Degraded</li> <li>• 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>• 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure soon.</li> <li>• 6 = Error</li> <li>• 7 = Non-Recoverable Error</li> <li>• 8 = Starting</li> <li>• 9 = Stopping</li> <li>• 10 = Stopped — Implies a clean and orderly stop</li> <li>• 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>• 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>• 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is unreachable.</li> <li>• 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>• 15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>• 16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>• 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>• 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul> <p>OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array</p>

Property	Description
	<p>property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.</p>
<b>PhysicalSizeH</b>	Horizontal screen size in cm.
<b>PhysicalSizeV</b>	Vertical screen size in cm.
<b>PrimaryStatus</b>	<p>Provides a high-level status value, intended to align with Red-Yellow-Green type representation of status. It should be used with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>PrimaryStatus consists of one of the following values:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the implementation is in general capable of returning this property, but is unable to do so now</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>ProductCode</b>	Product code of this monitor.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. When EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. <b>Unknown (0)</b> indicates that the last requested state for the element is unknown.</p>
	<p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, <b>RequestedState</b> should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. <b>Offline (6)</b> indicates that the element has been requested to transition to the <b>Enabled but Offline EnabledState</b>. There are two new values in <b>RequestedState</b> that build on the statuses of <b>EnabledState</b>. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. <b>Shut Down</b> requests an orderly transition to the <b>Disabled</b> state, and may involve removing power, to completely erase any existing state. The <b>Disabled</b> state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as <b>Start</b> or <b>StopService</b> on</p>

Property	Description
	<p><b>CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 Not Applicable.</b></p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>ScalerManufacturer</b>	<p>The name of the manufacturer of the controller chip used in a particular display.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Conexant</li> <li>• 3 = Genesis</li> <li>• 4 = Macronix</li> <li>• 5 = MRT</li> <li>• 6 = Mstar</li> <li>• 7 = Myson</li> <li>• 8 = Philips</li> <li>• 9 = Pixelworks</li> <li>• 10 = RealTek</li> <li>• 11 = Sage</li> <li>• 12 = SiliconImage</li> <li>• 13 = SmartASIC</li> <li>• 14 = STMicroelectronics</li> <li>• 15 = Topro</li> <li>• 16 = Trumpion</li> <li>• 17 = WellTrend</li> <li>• 18 = Samsung</li> <li>• 19 = Novatek</li> <li>• 20 = STK</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SerialNumber</b>	<p>Serial number of the monitor. Come from EDID.</p>
<b>SeparateSyncHVSsupported</b>	<p>Separate Sync H &amp; V Signals are supported.</p>

Property	Description
<b>sRGBStandardDefaultColorSpace</b>	If this bit is set to 1, the display uses the sRGB standard default color space as its primary color space.
<b>StandbyModeSupported</b>	<p>This property represents if the video output device can go into a stand by mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Supported</li> <li>• 3 = Not Supported</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SuspendModeSupported</b>	<p>This property represents if the video output device can go into a suspend mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Supported</li> <li>• 3 = Not Supported</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The creation class name of the scoping system.
<b>SystemName</b>	The system name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>
<b>VeryLowPowerSupported</b>	<p>This property represents if the video output device can go into a low power mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Supported</li> <li>• 3 = Not Supported</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>

# DCIM\_DHCPProtocolEndpoint

Table 8. DHCPProtocolEndpoint

Property	Description
<b>ClientState</b>	<p>ClientState represents the current state of the DHCP client. See RFC1541 for more information on the meaning of each state.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>· 0 = Unknown</li><li>· 1 = DMTF Reserved</li><li>· 2 = Init</li><li>· 3 = Selecting</li><li>· 4 = Requesting</li><li>· 5 = Rebinding</li><li>· 6 = Init-Reboot</li><li>· 7 = Rebooting</li><li>· 8 = Bound</li><li>· 9..32767 = DMTF Reserved</li><li>· 32768..65535 = Vendor specified</li></ul>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>· 2 = Enabled</li><li>· 3 = Disabled</li><li>· 5 = Not Applicable</li><li>· 6 = Enabled but Offline</li><li>· 7 = No Default</li><li>· 9 = Quiesce</li><li>· .. = DMTF Reserved</li><li>· 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled</b> (value = <b>2</b>).</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>· 0 = Unknown</li><li>· 1 = Other</li><li>· 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li></ul>

Property	Description
	<ul style="list-style-type: none"> <li>· 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>· 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>· 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>· 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>· 7 = In Test — Indicates that the element is in a test state.</li> <li>· 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>· 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>· 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>· 11..32767 = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	A string that identifies this ProtocolEndpoint with either a port or an interface on a device. To ensure uniqueness, the Name property should be prepended or appended with information from the Type or OtherTypeDescription properties. The method selected is described in the NameFormat property of this class.
<b>NameFormat</b>	Contains the naming heuristic that is selected to ensure that the value of the Name property is unique. For example, you may choose to prepend the name of the port or interface with the Type of ProtocolEndpoint (for example, IPv4) of this instance followed by an underscore.
<b>OtherTypeDescription</b>	A string that describes the type of ProtocolEndpoint when the Type property of this class (or any of its subclasses) is set to 1 (Other). This property should be set to null when the Type property is any value other than <b>1</b> .
<b>ProtocolIFType</b>	<p>An enumeration that is synchronized with the IANA ifType MIB. The ifType MIB is maintained at the URL, <a href="http://iana.org/assignments/ianaiftype-mib">iana.org/assignments/ianaiftype-mib</a>. Also, additional values defined by the DMTF are included. The property is used to categorize and classify instances of the ProtocolEndpoint class.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Regular 1822</li> <li>· 3 = HDH 1822</li> <li>· 4 = DDN X.25</li> <li>· 5 = RFC877 X.25</li> <li>· 6 = Ethernet CSMA/CD</li> <li>· 7 = ISO 802.3 CSMA/CD</li> <li>· 8 = ISO 802.4 Token Bus</li> <li>· 9 = ISO 802.5 Token Ring</li> <li>· 10 = ISO 802.6 MAN</li> <li>· 11 = StarLAN</li> <li>· 12 = Proteon 10Mbit</li> <li>· 13 = Proteon 80Mbit</li> <li>· 14 = HyperChannel</li> <li>· 15 = FDDI</li> <li>· 16 = LAP-B</li> <li>· 17 = SDLC</li> <li>· 18 = DS1</li> <li>· 19 = E1</li> <li>· 20 = Basic ISDN</li> </ul>

**Property****Description**

- 
- 21 = Primary ISDN
  - 22 = Proprietary Point-to-Point Serial
  - 23 = PPP
  - 24 = Software Loopback
  - 25 = EON
  - 26 = Ethernet 3Mbit
  - 27 = NSIP
  - 28 = SLIP
  - 29 = Ultra
  - 30 = DS3
  - 31 = SIP
  - 32 = Frame Relay
  - 33 = RS-232
  - 34 = Parallel
  - 35 = ARCNet
  - 36 = ARCNet Plus
  - 37 = ATM
  - 38 = MIO X.25
  - 39 = SONET
  - 40 = X.25 PLE
  - 41 = ISO 802.211c
  - 42 = LocalTalk
  - 43 = SMDS DXI
  - 44 = Frame Relay Service
  - 45 = V.35
  - 46 = HSSI
  - 47 = HIPPI
  - 48 = Modem
  - 49 = AAL5
  - 50 = SONET Path
  - 51 = SONET VT
  - 52 = SMDS ICIP
  - 53 = Proprietary Virtual/Internal
  - 54 = Proprietary Multiplexor
  - 55 = IEEE 802.12
  - 56 = Fibre Channel
  - 57 = HIPPI Interface
  - 58 = Frame Relay Interconnect
  - 59 = ATM Emulated LAN for 802.3
  - 60 = ATM Emulated LAN for 802.5
  - 61 = ATM Emulated Circuit
  - 62 = Fast Ethernet (100BaseT)
  - 63 = ISDN
  - 64 = V.11
  - 65 = V.36
  - 66 = G703 at 64K
  - 67 = G703 at 2Mb
  - 68 = QLLC
  - 69 = Fast Ethernet 100BaseFX
  - 70 = Channel
  - 71 = IEEE 802.11
  - 72 = IBM 260/370 OEMI Channel
  - 73 = ESCON
  - 74 = Data Link Switching

**Property****Description**

- 
- 75 = ISDN S/T Interface
  - 76 = ISDN U Interface
  - 77 = LAP-D
  - 78 = IP Switch
  - 79 = Remote Source Route Bridging
  - 80 = ATM Logical
  - 81 = DS0
  - 82 = DS0 Bundle
  - 83 = BSC
  - 84 = Async
  - 85 = Combat Net Radio
  - 86 = ISO 802.5r DTR
  - 87 = Ext Pos Loc Report System
  - 88 = AppleTalk Remote Access Protocol
  - 89 = Proprietary Connectionless
  - 90 = ITU X.29 Host PAD
  - 91 = ITU X.3 Terminal PAD
  - 92 = Frame Relay MPI
  - 93 = ITU X.213
  - 94 = ADSL
  - 95 = RADSL
  - 96 = SDSL
  - 97 = VDSL
  - 98 = ISO 802.5 CRFP
  - 99 = Myrinet
  - 100 = Voice Receive and Transmit
  - 101 = Voice Foreign Exchange Office
  - 102 = Voice Foreign Exchange Service
  - 103 = Voice Encapsulation
  - 104 = Voice over IP
  - 105 = ATM DXI
  - 106 = ATM FUNI
  - 107 = ATM IMA
  - 108 = PPP Multilink Bundle
  - 109 = IP over CDLC
  - 110 = IP over CLAW
  - 111 = Stack to Stack
  - 112 = Virtual IP Address
  - 113 = MPC
  - 114 = IP over ATM
  - 115 = ISO 802.5j Fibre Token Ring
  - 116 = TDLC
  - 117 = Gigabit Ethernet
  - 118 = HDLC
  - 119 = LAP-F
  - 120 = V.37
  - 121 = X.25 MLP
  - 122 = X.25 Hunt Group
  - 123 = Transp HDLC
  - 124 = Interleave Channel
  - 125 = FAST Channel
  - 126 = IP (for APPN HPR in IP Networks)
  - 127 = CATV MAC Layer
  - 128 = CATV Downstream

**Property****Description**

- 129 = CATV Upstream
- 130 = Avalon 12MPP Switch
- 131 = Tunnel
- 132 = Coffee
- 133 = Circuit Emulation Service
- 134 = ATM SubInterface
- 135 = Layer 2 VLAN using 802.1Q
- 136 = Layer 3 VLAN using IP
- 137 = Layer 3 VLAN using IPX
- 138 = Digital Power Line
- 139 = Multimedia Mail over IP
- 140 = DTM
- 141 = DCN
- 142 = IP Forwarding
- 143 = MSDSL
- 144 = IEEE 1394
- 145 = IF-GSN/HIPPI-6400
- 146 = DVB-RCC MAC Layer
- 147 = DVB-RCC Downstream
- 148 = DVB-RCC Upstream
- 149 = ATM Virtual
- 150 = MPLS Tunnel
- 151 = SRP
- 152 = Voice over ATM
- 153 = Voice over Frame Relay
- 154 = ISDL
- 155 = Composite Link
- 156 = SS7 Signaling Link
- 157 = Proprietary P2P Wireless
- 158 = Frame Forward
- 159 = RFC1483 Multiprotocol over ATM
- 160 = USB
- 161 = IEEE 802.3ad Link Aggregate
- 162 = BGP Policy Accounting
- 163 = FRF .16 Multilink FR
- 164 = H.323 Gatekeeper
- 165 = H.323 Proxy
- 166 = MPLS
- 167 = Multi-Frequency Signaling Link
- 168 = HDSL-2
- 169 = S-HDSL
- 170 = DS1 Facility Data Link
- 171 = Packet over SONET/SDH
- 172 = DVB-ASI Input
- 173 = DVB-ASI Output
- 174 = Power Line
- 175 = Non Facility Associated Signaling
- 176 = TR008
- 177 = GR303 RDT
- 178 = GR303 IDT
- 179 = ISUP
- 180 = Proprietary Wireless MAC Layer
- 181 = Proprietary Wireless Downstream
- 182 = Proprietary Wireless Upstream

**Property****Description**

- 183 = HIPERLAN Type 2
- 184 = Proprietary Broadband Wireless Access Point to Multipoint
- 185 = SONET Overhead Channel
- 186 = Digital Wrapper Overhead Channel
- 187 = ATM Adaptation Layer 2
- 188 = Radio MAC
- 189 = ATM Radio
- 190 = Inter Machine Trunk
- 191 = MVL DSL
- 192 = Long Read DSL
- 193 = Frame Relay DLCI Endpoint
- 194 = ATM VCI Endpoint
- 195 = Optical Channel
- 196 = Optical Transport
- 197 = Proprietary ATM
- 198 = Voice over Cable
- 199 = Infiniband
- 200 = TE Link
- 201 = Q.2931
- 202 = Virtual Trunk Group
- 203 = SIP Trunk Group
- 204 = SIP Signaling
- 205 = CATV Upstream Channel
- 206 = Econet
- 207 = FSAN 155Mb PON
- 208 = FSAN 622Mb PON
- 209 = Transparent Bridge
- 210 = Line Group
- 211 = Voice E&M Feature Group
- 212 = Voice FGD EANA
- 213 = Voice DID
- 214 = MPEG Transport
- 215 = 6To4
- 216 = GTP
- 217 = Paradyne EtherLoop 1
- 218 = Paradyne EtherLoop 2
- 219 = Optical Channel Group
- 220 = HomePNA
- 221 = GFP
- 222 = ciscoSLvlan
- 223 = actelisMetaLOOP
- 224 = Fcjp
- 225..4095 = IANA Reserved
- 4096 = IPv4
- 4097 = IPv6
- 4098 = IPv4/v6
- 4099 = IPX
- 4100 = DECnet
- 4101 = SNA
- 4102 = CONP
- 4103 = CLNP
- 4104 = VINES
- 4105 = XNS
- 4106 = ISDN B Channel Endpoint

Property	Description
	<ul style="list-style-type: none"> <li>· 4107 = ISDN D Channel Endpoint</li> <li>· 4108 = BGP</li> <li>· 4109 = OSPF</li> <li>· 4110 = UDP</li> <li>· 4111 = TCP</li> <li>· 4112 = 802.11a</li> <li>· 4113 = 802.11b</li> <li>· 4114 = 802.11g</li> <li>· 4115 = 802.11h</li> <li>· 4200 = NFS</li> <li>· 4201 = CIFS</li> <li>· 4202 = DAFS</li> <li>· 4203 = WebDAV</li> <li>· 4204 = HTTP</li> <li>· 4205 = FTP</li> <li>· 4300 = NDMP</li> <li>· 4400 = Telnet</li> <li>· 4401 = SSH</li> <li>· 4402 = SM CLP</li> <li>· 4403 = SMTP</li> <li>· 4404 = LDAP</li> <li>· 4405 = RDP</li> <li>· 4406 = HTTPS</li> <li>· .. = DMTF Reserved</li> <li>· 32768.. = Vendor Reserved</li> </ul>

**NOTE:** If the **ProcollFType** is set to **1 (Other)**, then the type information should be provided in the **OtherTypeDescription** string property.

### RequestedState

An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by **EnabledState**. This property is provided to compare the last requested and current enabled or disabled states.

**NOTE:** When **EnabledState** is set to **5 (Not Applicable)**, then this property has no meaning. See the **EnabledState** property description for explanations of the values in the **RequestedState** enumeration.

**NOTE:** The value **No Change (5)** has been deprecated instead of indicating the last requested state is **Unknown (0)**. If the last requested or desired state is unknown, **RequestedState** should have the value **Unknown (0)**, but may have the value **No Change (5)**.

There are two new values in **RequestedState** that build on the statuses of **EnabledState**. These are **Reboot (10)** and **Reset (11)**.

Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as **Start** or **StopService** on **CIM\_Service**), or can be overridden and defined as **WRITEable** in a subclass. The method approach is considered superior to a **WRITEable** property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last **RequestedState** is not supported for the **EnabledLogicalElement**, the property is **NULL** or has the value **12 Not Applicable**.

Possible values are:

- 0 = Unknown — Indicates the last requested state for the element is unknown.
- 2 = Enabled

Property	Description
	<ul style="list-style-type: none"> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change</li> <li>6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>7 = Test</li> <li>8 = Deferred</li> <li>9 = Quiesce</li> <li>10 = Reboot — Refers to performing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_EthernetPort

Table 9. EthernetPort

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of</p>

Property	Description
	<p><b>LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<p><b>EnabledDefault</b></p>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled</b> (value = 2).</p>
<p><b>EnabledState</b></p>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = 4) and starting (value = 10) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element does not run commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of moving to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode. Starting (<b>10</b>) indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 10 = Starting</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<p><b>Linktechnology</b></p>	<p>An enumeration of the types of links. When set to <b>1</b> (Other), the related property OtherLinkTechnology contains a string description of the type of link.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Ethernet</li> <li>• 3 = IB</li> <li>• 4 = FC</li> <li>• 5 = FDDI</li> <li>• 6 = ATM</li> <li>• 7 = Token Ring</li> <li>• 8 = Frame Relay</li> <li>• 9 = Infrared</li> <li>• 10 = Bluetooth</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>11 = Wireless LAN</li> </ul>
<b>Name</b>	The Name property defines the label by which the object is known. When subclassed, the Name property can be overridden to be a Key property.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration. <b>Unknown</b> (0) indicates the last requested state for the element is unknown.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, <b>RequestedState</b> should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. There are two new values in <b>RequestedState</b> that build on the statuses of <b>EnabledState</b>. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change</li> <li>6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>7 = Test</li> <li>8 = Deferred</li> <li>9 = Quiesce</li> <li>10 = Reboot — Refers to performing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The creation classname of the scoping system.
<b>SystemName</b>	The system name of the scoping system.
<b>TOEEnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of the TOE.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the TOE is enabled and running.</li> <li>3 = Disabled — Indicates that the TOE is disabled.</li> <li>4 = Not Applicable — Indicates that the ethernet port does not have TOE capability.</li> <li>5..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>

Property	Description
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_FlatPanel

Table 10. FlatPanel

Property	Description
<b>Brightness</b>	<p>The percentage (0 – 100) of total brightness of the video output device for system running on battery and AC power. The property is in the format BatteryBrightness:ACBrightness BuiltIn Defines whether the video output device is built in. <b>True</b> indicates that flat panel is directly attached to a portable computer and <b>False</b> means that flat panel is externally connected through graphics cable (such as VGA) to a computer.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = True</li> <li>• 3 = False</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>DeviceID</b>	<p>An address or other identifying information used to uniquely name the LogicalDevice.</p>
<b>DisplayType</b>	<p>An integer enumeration describing the type of flat panel display.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Passive Matrix LCD</li> <li>• 3 = Active Matrix LCD</li> <li>• 4 = Cholesteric LCD</li> <li>• 5 = Field Emission Display</li> <li>• 6 = Electro Luminescent Display</li> <li>• 7 = Gas Plasma 8 = LED</li> </ul>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p>

Property	Description
	<p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>HorizontalResolution</b>	The horizontal resolution in Pixels of the flat panel.
<b>MaxQuiesceTime</b>	The use of this property has been deprecated. When evaluating the use of <b>Quiesce</b> , it was determined that this single property is not adequate for describing when a device will automatically exit a quiescent state. In fact, the most likely scenario for a device to exit a quiescent state was determined to be based on the number of outstanding requests queued rather than on a maximum time. This decision will be re-evaluated and repositioned later. Depreciated description: Maximum time, in milliseconds, that a Device can run in a <b>Quiesced</b> state. The state is defined in its Availability and Additional Availability properties, where <b>Quiesced</b> is conveyed by the value <b>21</b> . What occurs at the end of the time limit is device-specific. The Device can unquiesce, can be offline, or can take other actions. A value of 0 indicates that a Device can remain <b>quiesced</b> indefinitely.
<b>ScanMode</b>	<p>The scan mode of a flat panel indicating either single (value = 2) or dual scan <b>3</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Single Scan</li> <li>· 3 = Dual Scan</li> </ul>
<b>SystemCreationClassName</b>	The creation class name of the scoping system.
<b>SystemName</b>	The system name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change — Indicates that no transition is in progress.</li> <li>· 6 = Offline</li> <li>· 7 = Test</li> <li>· 8 = Defer</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot</li> <li>· 11 = Reset</li> <li>· 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than 5 or 12 identifies the state to which the element is in the process of transitioning.</p>
<b>VerticalResolution</b>	Vertical resolution in Pixels of a flat panel.

# DCIM\_IPProtocolEndpoint

Table 11. IPProtocolEndpoint

Property	Description
<b>AddressOrigin</b>	<p>Identifies the method by which the IP Address, Subnet Mask, and Gateway were assigned to the IPProtocolEndpoint.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Not Applicable</li><li>• 3 = Static — Indicates the values were assigned manually.</li><li>• 4 = DHCP — Indicates the values were assigned utilizing the Dynamic Host Configuration Protocol. See RFC 2131 and related.</li><li>• 5 = BOOTP — Indicates the values were assigned utilizing BOOTP. See RFC 951 and related.</li><li>• 6 = IPv4 Link Local — Indicates the values were assigned using the IPv4 Link Local protocol. See RFC 3927.</li><li>• 7 = DHCPv6 — Indicates the values were assigned using DHCPv6. See RFC 3315.</li><li>• 8 = IPv6AutoConfig — Indicates the values were assigned using the IPv6 AutoConfig Protocol. See RFC 4862.</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 2 = Enabled</li><li>• 3 = Disabled</li><li>• 5 = Not Applicable</li><li>• 6 = Enabled but Offline</li><li>• 7 = No Default</li><li>• 9 = Quiesce</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled (value = 2)</b> .</p>

Property	Description
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>IPv4Address</b>	The IPv4 address that this ProtocolEndpoint represents.
<b>IPv6Address</b>	The IPv6 address that this ProtocolEndpoint represents.
<b>IPv6AddressType</b>	<p>Identifies the type of address found in the IPv6Address property. The values of this property are interpreted according to RFC4291, Section 2.4</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Unspecified</li> <li>• 3 = Loopback</li> <li>• 4 = Multicast</li> <li>• 5 = Link Local Unicast</li> <li>• 6 = Global Unicast</li> <li>• 7 = Embedded IPv4 Address</li> <li>• 8 = Site Local Unicast</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>IPv6SubnetPrefixLength</b>	Identifies the prefix length of the IPv6Address property that is used to specify a subnet
<b>IPVersionSupport</b>	<p>This property explicitly defines support for different versions of the IP protocol, for this Endpoint. It is deprecated since the ProtocolIFType also provides this functionality by describing an endpoint as IPv4 only (value = <b>4096</b>), IPv6 only (value = <b>4097</b>), or IPv4/v6 (value = <b>4098</b>).</p> <p>Possible values are:</p>

Property	Description
<b>Name</b>	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = IPv4 Only</li> <li>• 2 = IPv6 Only</li> <li>• 3 = Both IPv4 and IPv6</li> </ul> <p>A string that identifies this ProtocolEndpoint with either a port or an interface on a device. To ensure uniqueness, the Name property should be prepended or appended with information from the Type or OtherTypeDescription properties. The method selected is described in the NameFormat property of this class.</p>
<b>NameFormat</b>	<p>Contains the naming heuristic that is selected to ensure that the value of the Name property is unique. For example, you may choose to prepend the name of the port or interface with the Type of ProtocolEndpoint (for example, IPv4) of this instance followed by an underscore.</p>
<b>ProtocolIFType</b>	<p>ProtocolIFType's enumeration is limited to IP-related and reserved values for this subclass of ProtocolEndpoint.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 225..4095 = IANA</li> <li>• Reserved 4096 = IPv4</li> <li>• 4097 = IPv6</li> <li>• 4098 = IPv4/v6</li> <li>• 4301..32767 = DMTF Reserved</li> <li>• 32768.. = Vendor Reserved</li> </ul>
<b>ProtocolType</b>	<p>This property is deprecated instead of the ProtocolIFType enumeration. This deprecation was done to have better alignment between the IF-MIB of the IETF and this CIM class. Deprecation description: ProtocolType is an enumeration that provides information to categorize and classify different instances of this class. For most instances, information in this enumeration and the definition of the subclass overlap. However, there are several cases where a specific subclass of ProtocolEndpoint is not required (for example, there is no Fibre Channel subclass of ProtocolEndpoint). Therefore, this property is needed to define the type of Endpoint.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = IPv4</li> <li>• 3 = IPv6</li> <li>• 4 = IPX</li> <li>• 5 = AppleTalk</li> <li>• 6 = DECnet</li> <li>• 7 = SNA</li> <li>• 8 = CONP</li> <li>• 9 = CLNP</li> <li>• 10 = VINES</li> <li>• 11 = XNS</li> <li>• 12 = ATM</li> <li>• 13 = Frame Relay</li> <li>• 14 = Ethernet</li> <li>• 15 = TokenRing</li> <li>• 16 = FDDI</li> </ul>

## Property

## Description

### RequestedState

- 17 = Infiniband
- 18 = Fibre Channel
- 19 = ISDN BRI Endpoint
- 20 = ISDN B Channel Endpoint
- 21 = ISDN D Channel Endpoint
- 22 = IPv4/v6
- 23 = BGP
- 24 = OSPF
- 25 = MPLS
- 26 = UDP
- 27 = TCP

An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.

Possible values are:

- 0 = Unknown — Indicates the last requested state for the element is unknown.
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change
- 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.
- 7 = Test
- 8 = Deferred
- 9 = Quiesce
- 10 = Reboot — Refers to performing a **Shut Down** and then moving to an **Enabled** state.
- 11 = Reset — Indicates that the element is first **Disabled** and then **Enabled**.
- 12 = Not Applicable
- .. = DMTF Reserved
- 32768..65535 = Vendor Reserved

**NOTE:** When EnabledState is set to 5 (Not Applicable), then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration.

**NOTE:** The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5). There are two new values in RequestedState that build on the statuses of EnabledState. These are Reboot (10) and Reset (11).

Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM\_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because

Property	Description
<b>Status</b>	<p>it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or have the value 12 <b>Not Applicable</b>.</p> <p>A string indicating the current status of the object. Various operational and non-operational statuses are defined. This property is deprecated instead of OperationalStatus, which includes the same semantics in its enumeration. This change is made for the following reasons:</p> <ul style="list-style-type: none"> <li>• Status is more correctly defined as an array. This definition overcomes the limitation of describing status using a single value, when it is really a multi-valued property (for example, an element may be OK AND Stopped).</li> <li>• A MaxLen of 10 is too restrictive and leads to unclear enumerated values.</li> <li>• The change to a uint16 data type was discussed when CIM V2.0 was defined. However, existing V1.0 implementations used the string property and did not want to modify their code. Therefore, Status was grandfathered into the Schema. Use of the deprecated qualifier allows the maintenance of the existing property, but also permits an improved definition using OperationalStatus.</li> </ul> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• OK</li> <li>• Error</li> <li>• Degraded</li> <li>• Unknown</li> <li>• Pred Fail</li> <li>• Starting</li> <li>• Stopping</li> <li>• Service</li> <li>• Stressed</li> <li>• NonRecover</li> <li>• No Contact</li> <li>• Lost</li> <li>• Comm</li> <li>• Stopped</li> </ul>
<b>SubnetMask</b>	The mask for the IPv4 address of this ProtocolEndpoint, if one is defined.
<b>SystemCreationClassName</b>	The creation class name of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than 5 or 12 identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_ImprovementProgramConsent

Table 12. ImprovementProgramConsent

Property	Description
<b>CurrentValue</b>	<p>CurrentValue displays the User's Consent to participate in the Dell Command   Monitor improvement program.</p> <p><b>NOTE: Improvement Program is available for DCM 10.2.1 x64 bit version only.</b></p>
<b>OverrideImprovementProgramConsent (Method)</b>	<p>This method sets the User consent for the Dell Command   Monitor improvement program.</p> <p>Parameters and the current value:</p> <ul style="list-style-type: none"> <li>0 - I don't want to participate in the program</li> <li>1 - I want to participate in the program</li> </ul> <p><b>NOTE: Default Value is 0 (By default, you are not enrolled in Improvement Program).</b></p> <p>Return Values:</p> <ul style="list-style-type: none"> <li>A return code of 0 indicates that the user consent was updated successfully</li> <li>A return code of 1 indicates that the user consent was not updated successfully</li> </ul>

## DCIM\_ControllerView

Table 13. ControllerView

Property	Description
<b>BusType</b>	<p>The property represents the type of the PCI bus.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 =Unknown</li> <li>3 = PCI Bus</li> <li>4 = PCMCIA Bus</li> <li>0x8000 = DMTF Reserved</li> <li>0xffff = Vendor Reserved</li> </ul>
<b>ControllerFirmwareVersion</b>	<p>This property represents the firmware version.</p>
<b>Device</b>	<p>This property represents the device name.</p>
<b>Driver Version</b>	<p>This property represents the version of the driver.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p>

Property	Description
	<p><b>i</b> <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often sub-classed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>InstanceID</b>	This property contains the value of the Fully Qualified Device Description (FQDD).
<b>PrimaryStatus</b>	<p>This property represents the status of the device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = OK</li> <li>· 2 = Degraded</li> <li>· 3 = Error</li> </ul>
<b>ProductName</b>	This property represents the family name of the controller.

## DCIM\_PhysicalDiskView

Table 14. PhysicalDiskView

Property	Description
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>i</b> <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often sub-classed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>InstanceID</b>	The property contains the value of the Fully Qualified Device Description (FQDD).
<b>PrimaryStatus</b>	<p>This property represents the status of the device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = OK</li> <li>· 2 = Degraded</li> <li>· 3 = Error</li> <li>· 4 = Rebuilding</li> <li>· 5 = Offline</li> <li>· 0x8000 = DMTF Reserved</li> <li>· 0xFFFF = Vendor Reserved</li> </ul>
<b>DriveUsage</b>	<p>This property indicates if the physical disk is in a RAID set.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>0 = Not in a RAID Set</li> <li>1 = In a RAID Set</li> <li>2 = Hot Spare</li> </ul>
<b>Model</b>	This property represents the model name of the physical disk.
<b>SerialNumber</b>	This property represents the serial number of the physical disk.
<b>DriveAFStatus</b>	<p>This property indicates if the physical disk is an advanced format drive.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 - Non AF Drive</li> <li>1 - AF Drive</li> <li>2 - Unknown</li> </ul>

## DCIM\_VirtualDiskView

Table 15. VirtualDiskView

Property	Description
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>InstanceID</b>	The property contains the value of the Fully Qualified Device Description (FQDD).
<b>PrimaryStatus</b>	<p>This property represents the status of the device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = OK</li> <li>2 = Degraded</li> <li>3 = Error</li> <li>4 = Rebuilding</li> <li>5 = Offline</li> </ul>
<b>RAIDStatus</b>	<p>This property represents the RAID specific status.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Ready</li> <li>2 = Online</li> <li>3 = Foreign</li> <li>4 = Offline</li> <li>5 = Blocked</li> <li>6 = Failed</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>7 = Degraded</li> <li>8 = Rebuilding</li> </ul>
<b>RAIDTypes</b>	<p>This property represents the current RAID level.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>1 = No RAID</li> <li>2 = RAID-0</li> <li>4 = RAID-1</li> <li>64 = RAID-5</li> <li>128 = RAID- 6</li> <li>2048 = RAID-10</li> <li>8192 = RAID-50</li> <li>16384 = RAID- 60</li> </ul>
<b>SizeinMegabytes</b>	<p>The property represents the size of the virtual disk in megabytes.</p>
<b>StripeSize</b>	<p>This property represents the current strip size.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Default</li> <li>1 = 512Bytes</li> <li>2 = 1KB</li> <li>4 = 2KB</li> <li>8 = 4 KB</li> <li>16 = 8 kB</li> <li>32 = 16 KB</li> <li>64 = 32 KB</li> <li>128 = 64 KB</li> <li>256 = 128 KB</li> <li>512 = 256 KB</li> <li>1024 = 512 KB</li> <li>2048 = 1 MB</li> <li>4096 = 2 MB</li> <li>8192 = 4 MB</li> <li>16384 = 8 MB</li> <li>32768 = 16 MB</li> </ul>
<b>PhysicalDiskIDs</b>	<p>The property represents the array of physical disk FQDDs.</p>

## DCIM\_PhysicalMemory

Table 16. PhysicalMemory

Property	Description
<b>BankLabel</b>	<p>A string identifying the physically labeled bank where the Memory is located. For example, <b>Bank 0</b> or <b>Bank A</b>.</p>
<b>CanBeFRUed</b>	<p>Boolean that indicates whether this PhysicalElement can be FRUed (TRUE) or not (FALSE).</p>
<b>Capacity</b>	<p>The total capacity of this PhysicalMemory, in bytes.</p>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this</p>

Property	Description
<b>DataWidth</b>	<p>class, this property allows all instances of this class and its subclasses to be uniquely identified.</p> <p>Data width of the PhysicalMemory, in bits. A data width of 0 and a TotalWidth of 8 would indicate that the Memory is solely used to provide error correction bits.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>FormFactor</b>	<p>The implementation form factor for the Chip.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = SIP</li> <li>• 3 = DIP 4 = ZIP</li> <li>• 5 = SOJ</li> <li>• 6 = Proprietary</li> <li>• 7 = SIMM</li> <li>• 8 = DIMM</li> <li>• 9 = TSOP</li> <li>• 10 = PGA</li> <li>• 11 = RIMM</li> <li>• 12 = SODIMM</li> <li>• 13 = SRIMM</li> <li>• 14 = SMD</li> <li>• 15 = SSMP</li> <li>• 16 = QFP</li> <li>• 17 = TQFP</li> <li>• 18 = SOIC</li> <li>• 19 = LCC</li> <li>• 20 = PLCC</li> <li>• 21 = BGA</li> <li>• 22 = FPBGA</li> <li>• 23 = LGA</li> </ul> <p>For example, values such as SIMM (7), TSOP (9), or PGA (10) can be specified.</p>
<b>IsSpeedInMhz</b>	<p>Indicates if the Speed property or the MaxMemorySpeed contains the value of the memory speed. A value of TRUE indicates that the speed is represented by the MaxMemorySpeed property. A value of FALSE indicates that the speed is represented by the Speed property.</p>
<b>ManufactureDate</b>	<p>The date this PhysicalElement was manufactured.</p>

Property	Description
<b>Manufacturer</b>	The name of the organization responsible for producing the PhysicalElement. This organization may be the entity from where the Element is purchased, but this is not necessarily true. The latter information is contained in the Vendor property of CIM_Product.
<b>MemoryType</b>	<p>The type of PhysicalMemory. Synchronous DRAM is also known as SDRAM. Cache DRAM is also known as CDRAM. BRAM is also known as Block RAM.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = DRAM</li> <li>• 3 = Synchronous DRAM</li> <li>• 4 = Cache DRAM</li> <li>• 5 = EDO</li> <li>• 6 = EDRAM</li> <li>• 7 = VRAM</li> <li>• 8 = SRAM</li> <li>• 9 = RAM</li> <li>• 10 = ROM</li> <li>• 11 = Flash</li> <li>• 12 = EEPROM</li> <li>• 13 = FEPRAM</li> <li>• 14 = EPROM</li> <li>• 15 = CDRAM</li> <li>• 16 = 3DRAM</li> <li>• 17 = SDRAM</li> <li>• 18 = SGRAM</li> <li>• 19 = RDRAM</li> <li>• 20 = DDR</li> <li>• 21 = DDR-2</li> <li>• 22 = BRAM</li> <li>• 23 = FB-DIMM</li> <li>• 24 = DDR3</li> <li>• 25 = FBD2</li> <li>• 26 = DDR4</li> <li>• 27 = LPDDR</li> <li>• 28 = LPDDR2</li> <li>• 29 = LPDDR3</li> <li>• 30 = LPDDR4</li> <li>• 31..32567 = DMTF Reserved</li> <li>• 32568..65535 = Vendor Reserved</li> </ul>
<b>Model</b>	The name by which the PhysicalElement is generally known.
<b>PartNumber</b>	The part number assigned by the organization that is responsible for producing or manufacturing the PhysicalElement.
<b>SerialNumber</b>	A manufacturer-allocated number used to identify the Physical Element.
<b>SKU</b>	The stock-keeping unit number for this PhysicalElement.
<b>Speed</b>	The speed of the PhysicalMemory, in nanoseconds.

Property	Description
Tag	An arbitrary string that uniquely identifies the Physical Element and serves as the key of the Element. The Tag property can contain information such as asset tag or serial number data. The key for PhysicalElement is placed very high in the object hierarchy to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on. For example, a hotswappable or removable component can be taken from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for Physical Element is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.

## DCIM\_PhysicalPackage

Table 17. PhysicalPackage

Property	Description
CreationClassName	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
ElementName	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.  <b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.
ManufactureDate	The date that this PhysicalElement was manufactured.
Manufacturer	The name of the organization responsible for producing the PhysicalElement. This organization may be the entity from whom the Element is purchased, but this is not necessarily true. The latter information is contained in the Vendor property of CIM_Product.
Model	The name by which the PhysicalElement is generally known.
Name	The Name property defines the label by which the object is known. When subclassed, the Name property can be overridden to be a Key property.
OtherPackageType	A string describing the package when the instance's PackageType property is 1 ( <b>Other</b> ).
PackageType	Enumeration defining the type of the PhysicalPackage. Possible values are: <ul style="list-style-type: none"> <li>0 = Unknown — Indicates that the package type is not known.</li> <li>1 = Other — The package type does not correspond to an existing enumerated value. The value is specified using the OtherPackageType property.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>· 2 = Rack</li> <li>· 3 = Chassis/Frame</li> <li>· 4 = Cross Connect/Backplane</li> <li>· 5 = Container/Frame Slot</li> <li>· 6 = Power Supply</li> <li>· 7 = Fan</li> <li>· 8 = Sensor</li> <li>· 9 = Module/Card</li> <li>· 10 = Port/Connector</li> <li>· 11 = Battery</li> <li>· 12 = Processor</li> <li>· 13 = Memory</li> <li>· 14 = Power Source/Generator</li> <li>· 15 = Storage Media Package (example, Disk or Tape Drive)</li> <li>· 16 = Blade</li> <li>· 17 = Blade Expansion</li> </ul>
	<p><b>NOTE:</b> This enumeration expands on the list in the Entity MIB (the attribute, <code>entPhysicalClass</code>). The numeric values are consistent with CIM's enum numbering guidelines, but are slightly different than the MIB's values. The values Rack through Port/Connector are defined per the Entity-MIB (where the semantics of rack are equivalent to the MIB's stack value). The other values (for battery, processor, memory, power source/generator and storage media package) are self-explanatory.</p>
	<p>A value of <b>Blade</b> should be used when the <code>PhysicalPackage</code> contains the operational hardware aspects of a <code>ComputerSystem</code>, without the supporting mechanicals such as power and cooling. For example, a Blade Server includes processor(s) and memory, and relies on the containing chassis to supply power and cooling. In many respects, a Blade can be considered a <b>Module/Card</b>. However, it is tracked differently by inventory systems and differs in terms of service philosophy. For example, a Blade is intended to be hot-plugged into a hosting enclosure without requiring additional cabling, and does not require a cover to be removed from the enclosure for installation. Similarly, a <b>Blade Expansion</b> has characteristics of a <b>Blade</b> and a <b>Module/Card</b>. However, it is distinct from both due to inventory tracking and service philosophy, and because of its hardware dependence on a Blade. A Blade Expansion must be attached to a Blade prior to inserting the resultant assembly into an enclosure.</p>
<b>PartNumber</b>	The part number assigned by the organization that is responsible for producing or manufacturing the <code>PhysicalElement</code> .
<b>SerialNumber</b>	A manufacturer-allocated number used to identify the <code>PhysicalElement</code> .
<b>SKU</b>	The stock-keeping unit number for this <code>PhysicalElement</code> .
<b>Tag</b>	An arbitrary string that uniquely identifies the <code>PhysicalElement</code> and serves as the key of the <code>Element</code> . The <code>Tag</code> property can contain information such as asset tag or serial number data. The key for <code>PhysicalElement</code> is placed very high in the object hierarchy in order to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on. For example, a hotswappable or removable component can be taken

Property	Description
	from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for PhysicalElement is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.
Version	A string that indicates the version of the PhysicalElement.

## DCIM\_ParallelPort

Table 18. ParallelPort

Property	Description
BaseIOAddress	An integer value that represents the base I/O address used by the parallel port.
ConnectorType	<p>ConnectorType is defined to force consistent naming of the 'connector type' property in subclasses and to guarantee unique enum values for all instances of ParallelPort. When set to <b>3 (Proprietary)</b>, the related property OtherConnectorType contains a string description of the type of port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Centronics</li> <li>• 2 = Mini-Centronics</li> <li>• 3 = Proprietary</li> <li>• 4 = DB-25 Female</li> <li>• 5 = DB-25 Male</li> <li>• .. = DMTF Reserved</li> <li>• 32768.. = Vendor Reserved</li> </ul>
CreationClassName	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
DeviceID	An address or other identifying information used to uniquely name the LogicalDevice.
ElementName	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
EnabledDefault	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> </ul>

Property	Description
<b>EnabledState</b>	<ul style="list-style-type: none"> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p> <p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value= <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode. Starting (10) indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 10 = Starting</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>IRQLevel</b>	<p>An integer value that represents the IRQ level used by the parallel port.</p>
<b>Pinout</b>	<p>The pinout used by the I/O device on this parallel port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = XT/AT</li> <li>• 2 = PS/2</li> <li>• 3 = ECP</li> <li>• 4 = EPP</li> <li>• 5 = IEEE 1284</li> <li>• 25 = PC-98</li> <li>• 26 = PC-98-Hireso</li> <li>• .. = DMTF Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is</p>

## Property

## Description

represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to **5 (Not Applicable)**, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. **Unknown (0)** indicates the last requested state for the element is unknown.

**NOTE:** The value **No Change (5)** has been deprecated instead of indicating the last requested state is **Unknown (0)**. If the last requested or desired state is unknown, **RequestedState** should have the value **Unknown (0)**, but may have the value **No Change (5)**. **Offline (6)** indicates that the element has been requested to transition to the **Enabled** but **Offline EnabledState**. There are two new values in **RequestedState** that build on the statuses of **EnabledState**. These are **Reboot (10)** and **Reset (11)**. **Shut Down** requests an orderly transition to the **Disabled** state, and may involve removing power, to completely erase any existing state. The **Disabled** state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as **Start** or **StopService** on **CIM\_Service**), or can be overridden and defined as **WRITEable** in a subclass. The method approach is considered superior to a **WRITEable** property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last **RequestedState** is not supported for the **EnabledLogicalElement**, the pro

Possible values are:

- 0 = Unknown
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change
- 6 = Offline
- 7 = Test
- 8 = Deferred
- 9 = Quiesce
- 10 = Reboot — Refers to doing a **Shut Down** and then moving to an **Enabled** state.
- 11 = Reset — Indicates that the element is first **Disabled** and then **Enabled**.
- 12 = Not Applicable
- .. = DMTF Reserved
- 32768..65535 = Vendor Reserved

## Security

An enumeration indicating the operational security for the Controller. For example, information that the Device's external interface is locked out (valuemap = **3**) or **Boot Bypass (valuemap = 5)** can be described using this property.

Possible values are:

- 0 = Unknown
- 1 = Other

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = None</li> <li>• 3 = External Interface Locked Out</li> <li>• 4 = External Interface Enabled</li> <li>• 5 = Boot Bypass</li> <li>• .. = DMTF Reserved</li> <li>• 32768.. = Vendor Reserved</li> </ul>
<b>Speed</b>	The bandwidth of the Port in Bits per Second.
<b>SystemCreationClassName</b>	The creation class name of the scoping system.
<b>SystemName</b>	The system name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_RemoteServiceAccessPoint

Table 19. RemoteServiceAccessPoint

Property	Description
<b>AccessContext</b>	<p>The AccessContext property identifies the role this RemoteServiceAccessPoint is playing in the hosting system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Default Gateway</li> <li>• 3 = DNS Server</li> <li>• 4 = SNMP Trap Destination</li> <li>• 5 = MPLS Tunnel Destination</li> <li>• 6 = DHCP Server</li> <li>• 7 = SMTP Server</li> <li>• 8 = LDAP Server</li> <li>• 9 = Network Time Protocol (NTP) Server</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>

Property	Description
<b>AccessInfo</b>	Access or addressing information or a combination of this information for a remote connection. This information can be a host name, network address, or similar information.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> </ul>

Property	Description
<b>InfoFormat</b>	<ul style="list-style-type: none"> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>An enumerated integer that describes the format and interpretation of the AccessInfo property.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Host Name</li> <li>• 3 = IPv4 Address</li> <li>• 4 = IPv6 Address</li> <li>• 5 = IPX Address</li> <li>• 6 = DECnet Address</li> <li>• 7 = SNA Address</li> <li>• 8 = Autonomous System Number</li> <li>• 9 = MPLS Label</li> <li>• 10 = IPv4 Subnet Address</li> <li>• 11 = IPv6 Subnet Address</li> <li>• 12 = IPv4 Address Range</li> <li>• 13 = IPv6 Address Range</li> <li>• 100 = Dial String</li> <li>• 101 = Ethernet Address</li> <li>• 102 = Token Ring Address</li> <li>• 103 = ATM Address</li> <li>• 104 = Frame Relay Address</li> <li>• 200 = URL 201 = FQDN</li> <li>• 202 = User FQDN</li> <li>• 203 = DER ASN1 DN</li> <li>• 204 = DER ASN1 GN</li> <li>• 205 = Key ID .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the ServiceAccessPoint and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p><b>(i) NOTE: When EnabledState is set to 5 (Not Applicable), then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration.</b></p> <p><b>(i) NOTE: The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</b></p>

Property	Description
	<p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning. A value other than 5 or 12 identifies the state to which the element is in the process of transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in-progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions</li> </ul>

# DCIM\_Slot

Table 20. Slot

Property	Description
<b>ConnectorLayout</b>	<p>Describes the type of packaging normally associated with this type of connector.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = RS232</li><li>• 3 = BNC</li><li>• 4 = RJ11</li><li>• 5 = RJ45</li><li>• 6 = DB9</li><li>• 7 = Slot</li><li>• 8 = SCSI High Density</li><li>• 9 = SCSI Low Density</li><li>• 10 = Ribbon</li><li>• 11 = AUI</li><li>• 12 = Fiber SC</li><li>• 13 = Fiber ST</li><li>• 14 = FDDI-MIC</li><li>• 15 = Fiber-RTMJ</li><li>• 16 = PCI — Describes the generic PCI connector layout.</li><li>• 17 = PCI-X — Describes the PCI Extended connector layout.</li><li>• 18 = PCI-E — Describes the PCI Express connector layout, where the actual layout with respect to the length is unknown.</li><li>• 19 = PCI-E x1</li><li>• 20 = PCI-E x2</li><li>• 21 = PCI-E x4</li><li>• 22 = PCI-E x8</li><li>• 23 = PCI-E x16</li><li>• 24 = PCI-E x32</li><li>• 25 = PCI-E x64</li><li>• 26..32567 = DMTF Reserved</li><li>• 32568..65535 = Vendor Reserved</li></ul> <p>19 — 25 (PCI-E xN) — Describes the PCI Express connector layout, where N is the lane count that appropriately describes the length of the PCI-E connector.</p>
<b>ConnectorType</b>	<p>An array of integers defining the type of PhysicalConnector. An array is specified to allow the description of <b>combinations</b> of Connector information.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Male</li><li>• 3 = Female</li><li>• 4 = Shielded</li><li>• 5 = Unshielded</li><li>• 6 = SCSI (A) High-Density (50 pins)</li><li>• 7 = SCSI (A) Low-Density (50 pins)</li><li>• 8 = SCSI (P) High-Density (68 pins)</li><li>• 9 = SCSI SCA-I (80 pins)</li></ul>

**Property****Description**

- 10 = SCSI SCA-II (80 pins)
- 11 = Fibre Channel (DB-9, Copper)
- 12 = Fibre Channel (Optical Fibre)
- 13 = Fibre Channel SCA-II (40 pins)
- 14 = Fibre Channel SCA-II (20 pins)
- 15 = Fibre Channel BNC
- 16 = ATA 3-1/2 Inch (40 pins)
- 17 = ATA 2-1/2 Inch (44 pins)
- 18 = ATA-2
- 19 = ATA-3
- 20 = ATA/66
- 21 = DB-9
- 22 = DB-15
- 23 = DB-25
- 24 = DB-36
- 25 = RS-232C
- 26 = RS-422
- 27 = RS-423
- 28 = RS-485
- 29 = RS-449
- 30 = V.35
- 31 = X.21
- 32 = IEEE-488
- 33 = AUI
- 34 = UPT Category 3
- 35 = UPT Category 4
- 36 = UPT Category 5
- 37 = BNC
- 38 = RJ11
- 39 = RJ45
- 40 = Fiber MIC
- 41 = Apple AUI
- 42 = Apple GeoPort
- 43 = PCI
- 44 = ISA
- 45 = EISA
- 46 = VESA
- 47 = PCMCIA
- 48 = PCMCIA Type I
- 49 = PCMCIA Type II
- 50 = PCMCIA Type III
- 51 = ZV Port
- 52 = CardBus
- 53 = USB
- 54 = IEEE 1394
- 55 = HIPPI
- 56 = HSSDC (6 pins)
- 57 = GBIC
- 58 = DIN
- 59 = Mini-DIN
- 60 = Micro-DIN
- 61 = PS/2
- 62 = Infrared
- 63 = HP-HIL

**Property****Description**


- 64 = Access.bus
- 65 = NuBus
- 66 = Centronics
- 67 = Mini-Centronics
- 68 = Mini-Centronics Type-14
- 69 = Mini-Centronics Type-20
- 70 = Mini-Centronics Type-26
- 71 = Bus Mouse
- 72 = ADB
- 73 = AGP
- 74 = VME Bus
- 75 = VME64
- 76 = Proprietary
- 77 = Proprietary Processor Card Slot
- 78 = Proprietary Memory Card Slot
- 79 = Proprietary I/O Riser Slot
- 80 = PCI-66MHZ
- 81 = AGP2X
- 82 = AGP4X
- 83 = PC-98
- 84 = PC-98-Hireso
- 85 = PC-H98
- 86 = PC-98Note
- 87 = PC-98Full
- 88 = SSA SCSI
- 89 = Circular
- 90 = On Board IDE Connector
- 91 = On Board Floppy Connector
- 92 = 9 Pin Dual Inline
- 93 = 25 Pin Dual Inline
- 94 = 50 Pin Dual Inline
- 95 = 68 Pin Dual Inline
- 96 = On Board Sound Connector
- 97 = Mini-jack
- 98 = PCI-X
- 99 = Sbus IEEE 1396-1993 32 bit
- 100 = Sbus IEEE 1396-1993 64 bit
- 101 = MCA
- 102 = GIO
- 103 = XIO
- 104 = HIO
- 105 = NGIO
- 106 = PMC
- 107 = MTRJ
- 108 = VF-45
- 109 = Future I/O
- 110 = SC
- 111 = SG
- 112 = Electrical
- 113 = Optical
- 114 = Ribbon
- 115 = GLM
- 116 = 1x9
- 117 = Mini SG

Property	Description
	<ul style="list-style-type: none"> <li>• 118 = LC</li> <li>• 119 = HSSC</li> <li>• 120 = VHDCI Shielded (68 pins)</li> <li>• 121 = InfiniBand</li> <li>• 122 = AGP8X</li> </ul> <p>For example, one array entry could specify RS-232 (value = <b>25</b>), another DB-25 (value = <b>23</b>) and a third entry define the Connector as <b>Male</b> (value = <b>2</b>). This single property is being deprecated instead of using separate properties to describe the various aspects of the connector. The separation allows for a more generic means of describing the connectors. Obsolete connectors were intentionally removed from the new list.</p>
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>Number</b>	The Number property indicates the physical slot number, which can be used as an index into a system slot table, whether or not that slot is physically occupied.
<b>SupportsHotPlug</b>	Boolean indicating whether the Slot supports hot-plug of adapter Cards.
<b>Tag</b>	An arbitrary string that uniquely identifies the Physical Element and serves as the key of the Element. The Tag property can contain information such as asset tag or serial number data. The key for PhysicalElement is placed very high in the object hierarchy to independently identify the hardware or entity, regardless of physical placement in or on Cabinets, Adapters, and so on. For example, a hotswappable or removable component can be taken from its containing (scoping) Package and be temporarily unused. The object still continues to exist and can even be inserted into a different scoping container. Therefore, the key for Physical Element is an arbitrary string and is defined independently of any placement or location-oriented hierarchy.
<b>VendorCompatibilityStrings</b>	An array of strings that identify the components that are compatible and can be inserted in a slot. This allows vendors to provide clues to the system administrators by providing sufficient information to request the appropriate hardware that can populate the slot. To ensure uniqueness within the NameSpace, each value defined by the vendor for use in the VendorCompatibilityStrings property SHOULD be constructed using the following 'preferred' algorithm: : Where and are separated by a colon ':', and where MUST include a copyrighted, trademarked or otherwise unique

Property	Description
	name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the _ structure of Schema class names.) In addition, to ensure uniqueness MUST NOT contain a colon ':'. When using this algorithm, the first colon to appear in InstanceID MUST appear between and . is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements.

## DCIM\_SerialPort

Table 21. SerialPort

Property	Description
<b>BaseIOAddress</b>	An integer value that represents the base I/O address used by the serial port. Caption The Caption property is a short textual description (one- line string) of the object.
<b>ConnectorType</b>	<p>ConnectorType is defined to force consistent naming of the <b>connector type</b> property in subclasses and to guarantee unique enum values for all instances of SerialPort. When set to 1 (<b>Other</b>), related property OtherConnectorType contains a string description of the type of port. A range of values, DMTF_Reserved, has been defined that allows subclasses to override and define their specific types of ports.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Not Applicable</li> <li>• 3..15999 = DMTF Reserved</li> <li>• 16003 = DB9Male</li> <li>• 16004 = DB9Female</li> <li>• 16005 = DB25Male1</li> <li>• 16006 = DB25Female1</li> <li>• 16007 = RJ11</li> <li>• 16008 = RJ45</li> <li>• 16009 = Proprietary</li> <li>• 16010 = CircularDIN8Male</li> <li>• 16011 = CircularDIN8Female</li> <li>• 16160 = MiniCentronicsType14</li> <li>• 16161 = MiniCentronicsType26</li> <li>• 16162..65535 = Vendor Reserved</li> </ul>
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p> <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often</b></p>

Property	Description
<b>EnabledDefault</b>	<p data-bbox="842 226 1469 412"><b>subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p> <p data-bbox="804 450 1414 501">An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p data-bbox="804 521 1002 544">Possible values are:</p> <ul data-bbox="804 562 1187 815" style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="804 835 1291 857">By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p data-bbox="804 891 1481 1032">An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p data-bbox="804 1052 1002 1075">Possible values are:</p> <ul data-bbox="804 1093 1481 1767" style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, processes any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>HealthState</b>	<p data-bbox="804 1800 1474 1883">Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p data-bbox="804 1904 1002 1924">Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState now. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is nonfunctional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error</li> <li>• .. = DMTF Reserved — The element has failed, and recovery is not possible. All functionality provided by this element has been lost.</li> </ul>
<b>IRQLevel</b>	An integer value that represents the IRQ level used by the serial port.
<b>MaxSpeed</b>	The maximum bandwidth of the Port in Bits per Second.
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory. However, a few are not and are described here in more detail.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Degraded</li> <li>• 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>• 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure soon.</li> <li>• 6 = Error</li> <li>• 7 = Non-Recoverable Error</li> <li>• 8 = Starting</li> <li>• 9 = Stopping</li> <li>• 10 = Stopped — Implies a clean and orderly stop.</li> <li>• 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>• 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>• 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is unreachable.</li> <li>• 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> </ul>

## Property

## Description

- 15 = Dormant — Indicates that the element is inactive or quiesced.
- 16 = Supporting Entity in Error — Indicates that this element may be **OK** but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.
- 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).
- 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.
- .. = DMTF Reserved
- 0x8000.. = Vendor Reserved

OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.

## PortType

PortType is defined to force consistent naming of the **type** property in subclasses and to guarantee unique enum values for all instances of NetworkPort. When set to 1 (**Other**), related property OtherPortType contains a string description of the type of port. A range of values, DMTF\_Reserved, has been defined that allows subclasses to override and define their specific types of ports.

Possible values are:

- 0 = Unknown
- 1 = Other
- 2 = Not Applicable
- 3..15999 = DMTF Reserved
- 16192 = Parallel Port
- 16193 = Serial Port
- 16194 = Pointing Device
- 16195 = Keyboard
- 16196 = Processor
- 16197 = Memory Device
- 16198 = USB
- 16199 = Monitor
- 16200 = SCSI
- 16201..65535 = Vendor Reserved

## PrimaryStatus

Provides a high-level status value, intended to align with Red-Yellow-Green type representation of status. It should be used with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.

Possible values are:

Property	Description
	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Not Applicable</li> <li>• 3..15999 = DMTF Reserved</li> <li>• 16192 = Parallel Port</li> <li>• 16193 = Serial Port</li> <li>• 16194 = Pointing Device</li> <li>• 16195 = Keyboard</li> <li>• 16196 = Processor</li> <li>• 16197 = Memory Device</li> <li>• 16198 = USB</li> <li>• 16199 = Monitor</li> <li>• 16200 = SCSI</li> <li>• 16201..65535 = Vendor Reserved</li> </ul>
<b>PrimaryStatus</b>	<p>Provides a high-level status value, intended to align with Red-Yellow-Green type representation of status. It should be used with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the implementation is in general capable of returning this property, but is unable to do so now.</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedSpeed</b>	<p>The requested bandwidth of the Port in Bits per Second. The actual bandwidth is reported in LogicalPort.Speed.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. When EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5). There are two new values in RequestedState that build on the statuses of EnabledState. These are Reboot (10) and Reset (11).</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method</p>

Property	Description
	<p>approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Security</b>	<p>An enumeration indicating the operational security for the Controller. For example, information that the Device's external interface is locked out (value = <b>4</b>) or <b>Boot Bypass</b> (value = <b>6</b>) can be described using this property.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = None</li> <li>• 4 = External Interface Locked Out</li> <li>• 5 = External Interface Enabled</li> <li>• 6 = Boot Bypass</li> </ul>
<b>SerialPortCapabilities</b>	<p>The capabilities of this Serial port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = XT/AT compatible</li> <li>• 4 = 16450 compatible</li> <li>• 5 = 16550 compatible</li> <li>• 6 = 16550A compatible</li> <li>• 160 = 8251 compatible</li> <li>• 161 = 8251FIFO compatible</li> </ul>
<b>SystemCreationClassName</b>	<p>The creation class name of the scoping system.</p>
<b>SystemName</b>	<p>The system name of the scoping system.</p>
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_USBPort

Table 22. USBPort

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating a configuration of an administrator for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>

Property	Description
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be running commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>

For example, shutting down (value = **4**) and starting (value = **10**) are transient states between enabled and disabled.

Property	Description
<b>IdentifyingDescriptions</b>	An array of free-form strings providing explanations and details behind the entries in the OtherIdentifyingInfo array. Note that each entry of this array is related to the entry in OtherIdentifyingInfo that is located at the same index.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. <b>Unknown (0)</b> indicates the last requested state for the element is unknown.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, <b>RequestedState</b> should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Speed</b>	USB Port Speed in bits per second. This speed is determined and set by the attached Device. The <b>attached Device</b> is indicated using the USBConnection association. At this time, only several Port speeds are valid. These are: 1.5Mbps and 12Mbps. The value 0

Property	Description
	can also be specified to indicate that the current speed is <b>unknown</b> or 1 to indicate that the speed is <b>other</b> than 1.5 or 12Mbps. Possible values are: 0, 1, 1500000, 12000000
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	Indicates the target state to which the instance is transitioning. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.

## DCIM\_Memory

Table 23. Memory

Property	Description
<b>Access</b>	Access describes whether the media is readable (value = <b>1</b> ), writeable (value = <b>2</b> ), or both (value = <b>3</b> ). <b>Unknown (0)</b> and <b>Write Once (4)</b> can also be defined. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Readable</li> <li>• 2 = Writeable</li> <li>• 3 = Read/Write Supported</li> <li>• 4 = Write Once</li> </ul>
<b>BlockSize</b>	Size in bytes of the blocks which form this StorageExtent. If variable block size, then the maximum block size in bytes should be specified. If the block size is unknown or if a block concept is not valid (for example, for AggregateExtents, Memory or LogicalDisks), enter a 1.
<b>ConsumableBlocks</b>	The maximum number of blocks, of size BlockSize, which are available for consumption when layering StorageExtents using the BasedOn association. This property only has meaning when this StorageExtent is an Antecedent reference in a BasedOn relationship. For example, a StorageExtent could be composed of 120 blocks. However, the Extent itself may use 20 blocks for redundancy data. If another StorageExtent is BasedOn this Extent, only 100 blocks would be available to it. This information ( <b>100</b>

Property	Description
<b>CreationClassName</b>	<p><b>blocks is available for consumption)</b> is indicated in the ConsumableBlocks property.</p> <p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>DeviceID</b>	<p>An address or other identifying information used to uniquely name the LogicalDevice.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768.65535 = Vendor Reserved</li> </ul>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> </ul>

Property	Description
<b>ErrorMethodology</b>	<ul style="list-style-type: none"> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>ErrorMethodology for Memory is a string property that indicates whether parity or CRC algorithms, ECC or other mechanisms are used. Details on the algorithm can also be supplied.</p>
<b>FailOverState</b>	<p>An integer enumeration indicating that active memory has failed and the spare or backup memory may have taken over.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = None</li> <li>• 3 = Active</li> </ul>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>
<b>NumberOfBlocks</b>	<p>Total number of logically contiguous blocks, of size Block Size, which form this Extent. The total size of the Extent can be calculated by multiplying BlockSize by NumberOfBlocks. If the BlockSize is <b>1</b>, this property is the total size of the Extent.</p>
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p>

## Property

## Description

- 0 = Unknown
- 1 = Other
- 2 = OK
- 3 = Degraded
- 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of **Stressed** states are overload, overheated, and so on.
- 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.
- 6 = Error
- 7 = Non-Recoverable Error
- 8 = Starting
- 9 = Stopping
- 10 = Stopped
- 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.
- 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.
- 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.
- 14 = Aborted
- 15 = Dormant — Indicates that the element is inactive or quiesced.
- 16 = Supporting Entity in Error — Indicates that this element may be **OK** but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.
- 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).
- 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.
- .. = DMTF Reserved
- 0x8000.. = Vendor Reserved

OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.

## OtherIdentifyingInfo

Captures data, in addition to DeviceID information, that could be used to identify a LogicalDevice. For example, you could use this property to hold the operating system's user-friendly name for the Device.

Property	Description
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>Primordial</b>	<p>If true, <b>Primordial</b> indicates that the containing System does not have the ability to create or delete this operational element. This is important because StorageExtents are assembled into higher-level abstractions using the BasedOn association. Although the higher-level abstractions can be created and deleted, the most basic, (that is, primordial), hardware-based storage entities cannot. They are physically realized as part of the System, or are actually managed by some other System and imported as if they were physically realized. In other words, a Primordial StorageExtent exists in, but is not created by its System and conversely a non-Primordial StorageExtent is created in the context of its System. For StorageVolumes, this property will generally be false. One use of this property is to enable algorithms that aggregate StorageExtent. ConsumableSpace across all, StorageExtents but that also want to distinguish the space that underlies Primordial StoragePools. Since implementations are not required to surface all Component StorageExtents of a StoragePool, this information is not accessible in any other way. Purpose A free form string describing the media and/or its use. RedundancyConfiguration is an integer enumeration indicating the redundancy configuration when active memory fails.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Disabled</li> <li>• 3 = Spared</li> <li>• 4 = Mirrored</li> <li>• 5 = LockStep</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown,</p>

## Property

## Description

**RequestedState should have the value Unknown (0), but may have the value No Change (5).**

There are two new values in RequestedState that build on the statuses of EnabledState. These are **Reboot (10)** and **Reset (11)**. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM\_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value **12 (Not Applicable)**.

Possible values are:

- 0 = Unknown — Indicates the last requested state for the element is unknown.
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change
- 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.
- 7 = Test
- 8 = Deferred
- 9 = Quiesce
- 10 = Reboot — Refers to doing a **Shut Down** and then moving to an **Enabled** state.
- 11 = Reset - Indicates that the element is first **Disabled** and then **Enabled**.
- 12 = Not Applicable
- .. = DMTF Reserved
- 32768..65535 = Vendor Reserved

### SystemCreationClassName

The CreationClassName of the scoping system.

### SystemName

The System Name of the scoping system.

### TransitioningToState

Indicates the target state to which the instance is transitioning.

Possible values are:

- 0 = Unknown
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change — Indicates that no transition is in progress.
- 6 = Offline
- 7 = Test
- 8 = Defer
- 9 = Quiesce
- 10 = Reboot
- 11 = Reset
- 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.

Property	Description
<b>Volatile</b>	A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.  Volatile is a property that indicates whether this memory is volatile or not.

## DCIM\_PCIDevice

Table 24. PCIDevice

Property	Description
<b>BusNumber</b>	The bus number where this PCI device resides.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>Description</b>	Provides a textual description of the object.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>DeviceNumber</b>	The device number assigned to this PCI device for this bus.
<b>ElementName</b>	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.  <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b>
<b>EnabledDefault</b>	An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.  Possible values are: <ul style="list-style-type: none"> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 5 = Not Applicable</li> <li>· 6 = Enabled but Offline</li> <li>· 7 = No Default</li> <li>· 9 = Quiesce</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul> By default, the element is <b>Enabled (value = 2)</b> .
<b>EnabledState</b>	A number enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b> ) and restarting (value = <b>10</b> ) are temporary states between enabled and disabled.  Possible values are:

Property	Description
FunctionNumber	<ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>The function number for this PCI device.</p>
HealthState	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>
StatusInfo	<p>The use of this method is deprecated instead of a more clearly named property (EnabledState) that is inherited from ManagedSystemElement and that has additional enumerated values. Deprecated description: The StatusInfo property indicates whether the Logical Device is in an enabled state (value = <b>3</b>), disabled state (value = <b>4</b>), some other state (value = <b>1</b>), or an</p>

Property	Description
	<p>unknown state (value = <b>2</b>). If this property does not apply to the LogicalDevice, the value 5 (<b>Not Applicable</b>) should be used. If a Device is <b>Enabled (value = 3)</b>, it has been powered up and is configured and operational. The Device may or may not be functionally active, depending on whether its Availability (or AdditionalAvailability) indicates that it is <b>Running/Full Power (value = 3)</b> or <b>Off line (value = 8)</b>. In an enabled but offline mode, a Device may be performing out-of-band requests, such as running Diagnostics. If StatusInfo is <b>Disabled (value = 4)</b>, a Device can only be <b>enabled</b> or powered off. In a personal computer environment, <b>disabled</b> means that the driver of the device is not available in the stack. In other environments, a Device can be disabled by removing its configuration file. A disabled device is physically present in a System and consuming resources, but it cannot be communicated with until a driver is loaded, a configuration file is loaded, or some other <b>enabling</b> activity has occurred.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = Enabled</li> <li>• 4 = Disabled</li> <li>• 5 = Not Applicable</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_DisplayController

Table 25. DisplayController

Property	Description
<b>CapabilityDescriptions</b>	An array of free-form strings providing more detailed explanations for any of the video Accelerator features indicated in the Capabilities array. Note, each entry of this array is related to the entry in the Capabilities array that is located at the same index.

Property	Description
<b>CommunicationStatus</b>	<p>CommunicationStatus indicates the ability of the instrumentation to communicate with the underlying ManagedElement. CommunicationStatus consists of one of the following values: Unknown, None, Communication OK, Lost Communication, or No Contact. A Null return indicates the implementation (provider) does not implement this property.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>1 = Not Available — Indicates that the implementation (provider) is capable of returning a value for this property, but not ever for this particular piece of hardware/software or the property is intentionally not used because it adds no meaningful information (as in the case of a property that is intended to add additional info to another property).</li> <li>2 = Communication OK — Indicates communication is established with the element, but does not convey any quality of service.</li> <li>3 = Lost Communication — Indicates that the Managed Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>4 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>Description</b>	<p>Provides a textual description of the object.</p>
<b>DeviceID</b>	<p>An address or other identifying information used to uniquely name the LogicalDevice.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. By default, the element is <b>Enabled (value = 2)</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property defines the label by which the object is known. When subclassed, the Name property can be overridden to be a Key property.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests. This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code. If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_Fan

Table 26. Fan

Property	Description
<b>ActiveCooling</b>	ActiveCooling is a Boolean that indicates that the Cooling Device provides active (as opposed to passive) cooling.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>7 = In Test — Indicates that the element is in a test state.</li> <li>8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>9 = Quiesce - Indicates that the element is enabled but in a restricted mode.</li> <li>10 = Starting - Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>11..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>ErrorCleared</b>	<p>The use of this method is deprecated. Deprecated description: ErrorCleared is a Boolean property that indicates that the error reported in LastErrorCode is now cleared.</p>
<b>ErrorDescription</b>	<p>The use of this method is deprecated. Deprecated description: ErrorDescription is a free-form string that supplies more information about the error recorded in LastErrorCode and information on any corrective actions that can be taken.</p>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — The implementation cannot report on HealthState at this time. DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</li> <li>5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>15 = Minor failure — All functionality is available but some may be degraded.</li> <li>20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>.. = DMTF Reserved</li> </ul>

Property	Description
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory. However, a few are not and are described here in more detail.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Degraded</li> <li>• 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>• 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>• 6 = Error</li> <li>• 7 = Non-Recoverable Error</li> <li>• 8 = Starting</li> <li>• 9 = Stopping</li> <li>• 10 = Stopped - Implies a clean and orderly stop.</li> <li>• 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>• 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>• 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>• 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>• 15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>• 16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>• 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>• 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> <li>•</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5</b></p>

Property	Description
	<p><b>(Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. <b>Unknown (0)</b> indicates the last requested state for the element is unknown.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. <b>Offline (6)</b> indicates that the element has been requested to transition to the <b>Enabled but Offline EnabledState</b>. There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. <b>Reboot</b> refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state. <b>Reset</b> indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>. <b>Shut Down</b> requests an orderly transition to the <b>Disabled</b> state, and may involve removing power, to completely erase any existing state. The <b>Disabled</b> state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 (Not Applicable)</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>
<b>VariableSpeed</b>	Indication of whether the fan supports variable speeds.

## DCIM\_IndicatorLED

Table 27. IndicatorLED

Property	Description
<b>Color</b>	<p>Color This property indicates the current color of the LED. If the value of the ActivationState property is <b>4 (Off)</b> this property indicates the color of the LED the last time it was lit, or has the value <b>2 (Not Applicable)</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Not Applicable</li> <li>3 = White</li> <li>4 = Red</li> <li>5 = Green</li> <li>6 = Blue</li> <li>7 = Orange</li> <li>8 = Yellow</li> <li>9 = Black</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>ControlMode</b>	<p>ControlMode indicates the current control mode for the LED.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Automatic — Indicates the state of the LED is being controlled by the management infrastructure.</li> <li>3 = Manual — Indicates the state of the LED is being controlled by a management client.</li> <li>4 = Test — Indicates the LED is in a test mode.</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>ControlPattern</b>	<p>An LED may exhibit a range of behavior from very simple (ex. solid on) to very complicated (ex. a series of blinks of alternating color and duration). ControlPattern specifies the vendor or standard behavior exhibited by the LED if it cannot be described using one of the standard behaviors listed for the ActivationState property.</p> <p>If ActivationState has the value <b>5 (ControlPattern)</b>, the ControlPattern property is not NULL.</p> <p>The value of ControlPattern is constructed using the following <b>preferred</b> algorithm:</p> <pre>&lt;OrgID&gt;::&lt;Pattern&gt;</pre> <p>Where &lt;OrgID&gt; and &lt;Pattern&gt; are separated by two colons (::), and where &lt;OrgID&gt; includes a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the ControlPattern or that is a registered ID assigned to the business entity by a recognized global authority. If the definition of the value is specified by the DMTF, the value of &lt;OrgID&gt; is <b>DMTF</b>. &lt;Pattern&gt; is chosen by the</p>

Property	Description
	business entity and is not reused to identify different underlying (real-world) behaviors. If the behavior specified for the LED adheres to a standard or proprietary specification, <Pattern> is a uniquely assigned value identifying the behavior. If the behavior for the LED is described using a standard or proprietary grammar, <Pattern> is prefixed with a uniquely assigned identifier for the grammar.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DefaultActivationState</b>	Indicates the default state of an LED. See ActivationState for a description of the values. Possible values are: <ul style="list-style-type: none"> <li>• 2 = Lit</li> <li>• 3 = Blinking</li> <li>• 4 = Off</li> <li>• 5 = Control Pattern</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	Specifies an identifier for the LED. The value of ElementName is constructed using the following <b>preferred</b> algorithm: <OrgID>::<LocalID> Where <OrgID> and <LocalID> are separated by two colons (::), and where <OrgID> includes a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the ControlPattern or that is a registered ID assigned to the business entity by a recognized global authority. <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements.
<b>EnabledDefault</b>	An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. Possible values are: <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> By default, the element is <b>Enabled (value = 2)</b> .
<b>EnabledState</b>	It is an integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = 4) and starting (value = 10) are transient states between enabled and disabled. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> </ul>

Property	Description
<b>HealthState</b>	<ul style="list-style-type: none"> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

# DCIM\_PowerSupply

Table 28. PowerSupply

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 2 = Enabled</li><li>• 3 = Disabled</li><li>• 5 = Not Applicable</li><li>• 6 = Enabled but Offline</li><li>• 7 = No Default</li><li>• 9 = Quiesce</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Enabled — Indicates that the element is or could be executing commands, processes any queued commands, and queues new requests.</li><li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li><li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li><li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li><li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li><li>• 7 = In Test — Indicates that the element is in a test state.</li><li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li><li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li><li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li><li>• 11..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul>

Property	Description
<b>HealthState</b>	<p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState now.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is nonfunctional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Requests an immediate disabling of the element, such that it will not run or accept any commands or processing requests.</li> <li>• 4 = Shut Down — Requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state.</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p>

**NOTE:** The value **No Change (5)** has been deprecated instead of indicating the last requested state is **Unknown (0)**. If the last requested or desired state is unknown, **RequestedState** should have the value **Unknown (0)**, but may have the value **No Change (5)**.

There are two new values in RequestedState that build on the statuses of EnabledState. These are **Reboot (10)** and **Reset (11)**. This property is set as the result of a method

Property	Description
	<p>invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TotalOutputPower</b>	Represents the total output power of the PowerSupply in milli Watts. 0 denotes <b>unknown</b> .
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>
<b>TypeOfRangeSwitching</b>	<p>Describes the kind of input voltage range switching that is implemented in this PowerSupply.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = Manual</li> <li>• 4 = Autoswitch</li> <li>• 5 = Wide Range</li> <li>• 6 = Not Applicable</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_Battery

Table 29. Battery

Property	Description
<b>BatteryStatus</b>	<p>Description of the charge status of the Battery.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 3 = Fully Charged</li> <li>• 4 = Low</li> <li>• 5 = Critical</li> <li>• 6 = Charging</li> <li>• 7 = Charging and High</li> <li>• 8 = Charging and Low</li> <li>• 9 = Charging and Critical</li> <li>• 10 = Undefined</li> <li>• 11 = Partially Charged</li> <li>• 12 = Learning</li> <li>• 13 = Overcharged</li> </ul> <p>Values such as <b>Fully Charged</b> (value = <b>3</b>) or <b>Partially Charged</b> (value = <b>11</b>) can be specified. The value, <b>10</b>, is not valid in the CIM Schema because in DMI it represents that no battery is installed. In this case, this object should not be instantiated.</p>
<b>ChargingStatus</b>	<p>This property defines status information about the AC line in the notebook.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = Off- Line</li> <li>• 4 = On-Line</li> <li>• 5 = On Backup Power</li> </ul>
<b>Chemistry</b>	<p>An enumeration that describes the chemistry of the Battery.</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = Lead Acid</li> <li>• 4 = Nickel Cadmium</li> <li>• 5 = Nickel Metal Hydride</li> <li>• 6 = Lithium-ion</li> <li>• 7 = Zinc air</li> <li>• 8 = Lithium Polymer</li> </ul>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>DesignCapacity</b>	<p>The design capacity of the battery in m Watt-hours. If this property is not supported, enter 0.</p>
<b>DesignVoltage</b>	<p>The design voltage of the battery in mVolts. If this attribute is not supported, enter 0.</p>
<b>DeviceID</b>	<p>An address or other identifying information used to uniquely name the LogicalDevice.</p>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled</b> (value = <b>2</b>).</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>EstimatedChargeRemaining</b>	<p>An estimate of the percentage of full charge remaining.</p>
<b>EstimatedRunTime</b>	<p>An estimate in minutes of the time that battery charge depletion will occur under the present load conditions if the utility power is off, or is lost and remains off, or a Laptop is disconnected from a power source.</p>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>
<b>IdentifyingDescriptions</b>	<p>An array of free-form strings providing explanations and details behind the entries in the OtherIdentifyingInfo array. Note that each entry of this array is related to the entry in OtherIdentifyingInfo that is located at the same index.</p>
<b>Name</b>	<p>The Name property defines the label by which the object is known. When subclassed, the Name property can be overridden to be a Key property.</p>
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Degraded</li> <li>• 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>• 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>• 6 = Error</li> <li>• 7 = Non-Recoverable Error</li> <li>• 8 = Starting</li> <li>• 9 = Stopping</li> <li>• 10 = Stopped — Implies a clean and orderly stop</li> <li>• 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>• 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>• 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>• 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>• 15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>• 16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>• 17 = Completed - Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>• 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul> <p>OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and</p>

Property	Description
	OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.
<b>OtherIdentifyingInfo</b>	OtherIdentifyingInfo captures data, in addition to DeviceID information, that could be used to identify a LogicalDevice. For example, you could use this property to hold the operating system's user-friendly name for the Device.
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>RemainingCapacityMaxError</b>	The maximum error (as a percentage) in the mWatt-hour data reported by RemainingCapacity property.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate</p>

Property	Description
	<p>disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SmartBatteryVersion</b>	<p>The Smart Battery Data Specification version number that is supported by this Battery. If the Battery does not support this function, the value should be left blank.</p>
<b>Status</b>	<p>A string indicating the current status of the object. Various operational and non-operational statuses are defined. This property is deprecated instead of OperationalStatus, which includes the same semantics in its enumeration. This change is made for three reasons:</p> <ol style="list-style-type: none"> <li>1. Status is more correctly defined as an array. This definition overcomes the limitation of describing status using a single value, when it is really a multi-valued property (for example, an element may be OK AND Stopped).</li> <li>2. A MaxLen of 10 is too restrictive and leads to unclear enumerated values.</li> <li>3. The change to a uint16 data type was discussed when CIM V2.0 was defined. However, existing V1.0 implementations used the string property and did not want to modify their code. Therefore, Status was grandfathered into the Schema. Use of the deprecated qualifier allows the maintenance of the existing property, but also permits an improved definition using OperationalStatus.</li> </ol> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• OK</li> <li>• Error</li> <li>• Degraded</li> <li>• Unknown</li> <li>• Pred Fail</li> <li>• Starting</li> <li>• Stopping</li> <li>• Service</li> <li>• Stressed</li> <li>• NonRecover</li> <li>• No Contact</li> <li>• Lost Comm</li> <li>• Stopped</li> </ul>
<b>SystemCreationClassName</b>	<p>The CreationClassName of the scoping system.</p>
<b>SystemName</b>	<p>The System Name of the scoping system.</p>
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_Processor

Table 30. Processor

Property	Description
<b>Caption</b>	The Caption property is a short textual description (one- line string) of the object.
<b>CPUStatus</b>	<p>The CPUStatus property that indicates the current status of the Processor.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = CPU Enabled</li> <li>2 = CPU Disabled by User</li> <li>3 = CPU Disabled By BIOS (POST Error)</li> <li>4 = CPU Is Idle</li> <li>7 = Other</li> </ul> <p>For example, the Processor may be disabled by the user (value = <b>2</b>), or disabled due to a POST error (value = <b>3</b>). Information in this property can be obtained from SMBIOS, the Type 4 structure, and the Status attribute.</p>
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>CurrentClockSpeed</b>	The current speed (in MHz) of this Processor.
<b>Description</b>	Provides a textual description of the object.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>7 = In Test — Indicates that the element is in a test state.</li> <li>8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>11..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>ExternalBusClockSpeed</b>	<p>The speed (in MHz) of the external bus interface (also known as the front side bus).</p>
<b>Family</b>	<p>The Processor family type.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>1 = Other</li> <li>2 = Unknown</li> <li>3 = 8086</li> <li>4 = 80286</li> <li>5 = 80386</li> <li>6 = 80486</li> <li>7 = 8087</li> <li>8 = 80287</li> <li>9 = 80387</li> <li>10 = 80487</li> <li>11 = Pentium(R) brand</li> <li>12 = Pentium(R) Pro</li> <li>13 = Pentium(R) II</li> <li>14 = Pentium(R) processor with MMX(TM) technology</li> <li>15 = Celeron(TM)</li> <li>16 = Pentium(R) II Xeon(TM)</li> <li>17 = Pentium(R) III</li> <li>18 = M1 Family</li> <li>19 = M2 Family</li> <li>20 = Intel(R) Celeron(R) M processor</li> <li>21 = Intel(R) Pentium(R) 4 HT processor</li> </ul>

**Property****Description**

- 
- 24 = K5 Family
  - 25 = K6 Family
  - 26 = K6-2
  - 27 = K6-3
  - 28 = AMD Athlon(TM) Processor Family
  - 29 = AMD(R) Duron(TM) Processor
  - 30 = AMD29000 Family
  - 31 = K6-2+
  - 32 = Power PC Family
  - 33 = Power PC 601
  - 34 = Power PC 603
  - 35 = Power PC 603+
  - 36 = Power PC 604
  - 37 = Power PC 620
  - 38 = Power PC X704
  - 39 = Power PC 750
  - 40 = Intel(R) Core(TM) Duo processor
  - 41 = Intel(R) Core(TM) Duo mobile processor
  - 42 = Intel(R) Core(TM) Solo mobile processor
  - 43 = Intel(R) Atom(TM) processor
  - 48 = Alpha Family
  - 49 = Alpha 21064
  - 50 = Alpha 21066
  - 51 = Alpha 21164
  - 52 = Alpha 21164PC
  - 53 = Alpha 21164a
  - 54 = Alpha 21264
  - 55 = Alpha 21364
  - 56 = AMD Turion(TM) II Ultra Dual-Core Mobile M Processor Family
  - 57 = AMD Turion(TM) II Dual-Core Mobile M Processor Family
  - 58 = AMD Athlon(TM) II Dual-Core Mobile M Processor Family
  - 59 = AMD Opteron(TM) 6100 Series Processor
  - 60 = AMD Opteron(TM) 4100 Series Processor
  - 64 = MIPS Family
  - 65 = MIPS R4000
  - 66 = MIPS R4200
  - 67 = MIPS R4400
  - 68 = MIPS R4600
  - 69 = MIPS R10000
  - 80 = SPARC Family
  - 81 = SuperSPARC
  - 82 = microSPARC II
  - 83 = microSPARC IIep
  - 84 = UltraSPARC
  - 85 = UltraSPARC II
  - 86 = UltraSPARC Ili
  - 87 = UltraSPARC III
  - 88 = UltraSPARC IIIi
  - 96 = 68040
  - 97 = 68xxx Family
  - 98 = 68000
  - 99 = 68010
  - 100 = 68020
  - 101 = 68030

**Property****Description**

- 112 = Hobbit Family
- 120 = Crusoe(TM) TM5000 Family
- 121 = Crusoe(TM) TM3000 Family
- 122 = Efficeon(TM) TM8000 Family
- 128 = Weitek
- 130 = Itanium(TM) Processor
- 131 = AMD Athlon(TM) 64 Processor Family
- 132 = AMD Opteron(TM) Processor Family
- 133 = AMD Sempron(TM) Processor Family
- 134 = AMD Turion(TM) 64 Mobile Technology
- 135 = Dual-Core AMD Opteron(TM) Processor Family
- 136 = AMD Athlon(TM) 64 X2 Dual-Core Processor Family
- 137 = AMD Turion(TM) 64 X2 Mobile Technology
- 138 = Quad-Core AMD Opteron(TM) Processor Family
- 139 = Third-Generation AMD Opteron(TM) Processor Family
- 140 = AMD Phenom(TM) FX Quad-Core Processor Family
- 141 = AMD Phenom(TM) X4 Quad-Core Processor Family
- 142 = AMD Phenom(TM) X2 Dual-Core Processor Family
- 143 = AMD Athlon(TM) X2 Dual-Core Processor Family
- 144 = PA-RISC Family
- 145 = PA-RISC 8500
- 146 = PA-RISC 8000
- 147 = PA-RISC 7300LC
- 148 = PA-RISC 7200
- 149 = PA-RISC 7100LC
- 150 = PA-RISC 7100
- 160 = V30 Family
- 161 = Quad-Core Intel(R) Xeon(R) processor 3200 Series
- 162 = Dual-Core Intel(R) Xeon(R) processor 3000 Series
- 163 = Quad-Core Intel(R) Xeon(R) processor 5300 Series
- 164 = Dual-Core Intel(R) Xeon(R) processor 5100 Series
- 165 = Dual-Core Intel(R) Xeon(R) processor 5000 Series
- 166 = Dual-Core Intel(R) Xeon(R) processor LV
- 167 = Dual-Core Intel(R) Xeon(R) processor ULV
- 168 = Dual-Core Intel(R) Xeon(R) processor 7100 Series
- 169 = Quad-Core Intel(R) Xeon(R) processor 5400 Series
- 170 = Quad-Core Intel(R) Xeon(R) processor
- 171 = Dual-Core Intel(R) Xeon(R) processor 5200 Series
- 172 = Dual-Core Intel(R) Xeon(R) processor 7200 Series
- 173 = Quad-Core Intel(R) Xeon(R) processor 7300 Series
- 174 = Quad-Core Intel(R) Xeon(R) processor 7400 Series
- 175 = Multi-Core Intel(R) Xeon(R) processor 7400 Series
- 176 = Pentium(R) III Xeon(TM)
- 177 = Pentium(R) III Processor with Intel(R) SpeedStep(TM) Technology
- 178 = Pentium(R) 4
- 179 = Intel(R) Xeon(TM)
- 180 = AS400 Family
- 181 = Intel(R) Xeon(TM) processor MP
- 182 = AMD Athlon(TM) XP Family
- 183 = AMD Athlon(TM) MP Family
- 184 = Intel(R) Itanium(R) 2
- 185 = Intel(R) Pentium(R) M processor
- 186 = Intel(R) Celeron(R) D processor
- 187 = Intel(R) Pentium(R) D processor

**Property****Description**

- 188 = Intel(R) Pentium(R) Processor Extreme Edition
- 189 = Intel(R) Core(TM) Solo Processor
- 190 = Intel(R) Core(TM)
- 191 = Intel(R) Core(TM)2 Duo Processor
- 192 = Intel(R) Core(TM)2 Solo processor
- 193 = Intel(R) Core(TM)2 Extreme processor
- 194 = Intel(R) Core(TM)2 Quad processor
- 195 = Intel(R) Core(TM)2 Extreme mobile processor
- 196 = Intel(R) Core(TM)2 Duo mobile processor
- 197 = Intel(R) Core(TM)2 Solo mobile processor
- 198 = Intel(R) Core(TM) i7 processor
- 199 = Dual-Core Intel(R) Celeron(R) Processor
- 200 = S/390 and zSeries Family
- 201 = ESA/390 G4
- 202 = ESA/390 G5
- 203 = ESA/390 G6
- 204 = z/Architectur base
- 205 = Intel(R) Core(TM) i5 processor
- 206 = Intel(R) Core(TM) i3 processor
- 210 = VIA C7(TM)-M Processor Family
- 211 = VIA C7(TM)-D Processor Family
- 212 = VIA C7(TM) Processor Family
- 213 = VIA Eden(TM) Processor Family
- 214 = Multi-Core Intel(R) Xeon(R) processor
- 215 = Dual-Core Intel(R) Xeon(R) processor 3xxx Series
- 216 = Quad-Core Intel(R) Xeon(R) processor 3xxx Series
- 217 = VIA Nano(TM) Processor Family
- 218 = Dual-Core Intel(R) Xeon(R) processor 5xxx Series
- 219 = Quad-Core Intel(R) Xeon(R) processor 5xxx Series
- 221 = Dual-Core Intel(R) Xeon(R) processor 7xxx Series
- 222 = Quad-Core Intel(R) Xeon(R) processor 7xxx Series
- 223 = Multi-Core Intel(R) Xeon(R) processor 7xxx Series
- 224 = Multi-Core Intel(R) Xeon(R) processor 3400 Series
- 230 = Embedded AMD Opteron(TM) Quad-Core Processor Family
- 231 = AMD Phenom(TM) Triple-Core Processor Family
- 232 = AMD Turion(TM) Ultra Dual-Core Mobile Processor Family
- 233 = AMD Turion(TM) Dual-Core Mobile Processor Family
- 234 = AMD Athlon(TM) Dual-Core Processor Family
- 235 = AMD Sempron(TM) SI Processor Family
- 236 = AMD Phenom(TM) II Processor Family
- 237 = AMD Athlon(TM) II Processor Family
- 238 = Six-Core AMD Opteron(TM) Processor Family
- 239 = AMD Sempron(TM) M Processor Family
- 250 = i860
- 251 = i960
- 254 = Reserved (SMBIOS Extension)
- 255 = Reserved (Un-initialized Flash Content - Lo)
- 260 = SH-3
- 261 = SH-4
- 280 = ARM
- 281 = StrongARM
- 300 = 6x86
- 301 = MediaGX
- 302 = MII

Property	Description
	<ul style="list-style-type: none"> <li>320 = WinChip</li> <li>350 = DSP</li> <li>500 = Video Processor</li> <li>65534 = Reserved (For Future Special Purpose Assignment)</li> <li>65535 = Reserved (Un-initialized Flash Content - Hi)</li> </ul> <p>For example, values include <b>Pentium(R) processor with MMX(TM) technology</b> (value = <b>14</b>) and <b>68040</b> (value = <b>96</b>).</p>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>15 = Minor failure — All functionality is available but some may be degraded.</li> <li>20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>.. = DMTF Reserved</li> </ul>
<b>MaxClockSpeed</b>	The maximum speed (in MHz) of this Processor.
<b>NumberOfEnabledCores</b>	Number of processor cores enabled for processor.
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory. However, a few are not and are described here in more detail.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = OK</li> <li>3 = Degraded</li> <li>4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>6 = Error</li> <li>7 = Non-Recoverable Error</li> <li>8 = Starting</li> <li>9 = Stopping</li> <li>10 = Stopped — Implies a clean and orderly stop.</li> <li>11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>

OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.

### PrimaryStatus

Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.

Possible values are:

- 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.
- 1 = OK — Indicates the ManagedElement is functioning normally.
- 2 = Degraded — Indicates the ManagedElement is functioning below normal.
- 3 = Error - Indicates the ManagedElement is in an Error condition.
- .. = DMTF Reserved
- 0x8000.. = Vendor Reserved

### RequestedState

An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.

Possible values are:

- 0 = Unknown
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change
- 6 = Offline
- 7 = Test
- 8 = Deferred
- 9 = Quiesce
- 10 = Reboot
- 11 = Reset
- 12 = Not Applicable
- .. = DMTF Reserved
- 32768..65535 = Vendor Reserved

Property	Description
	<p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. Unknown (0) indicates the last requested state for the element is unknown.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5). Offline (6) indicates that the element has been requested to transition to the Enabled but Offline EnabledState. There are two new values in RequestedState that build on the statuses of EnabledState. These are Reboot (10) and Reset (11). Reboot refers to doing a Shut Down and then moving to an Enabled state. Reset indicates that the element is first Disabled and then Enabled.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>Stepping</b>	Stepping is a free-form string that indicates the revision level of the Processor within the Processor.Family.
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>
<b>UniqueID</b>	A global unique identifier for the processor. This identifier can be unique only within a processor family.
<b>UpgradeMethod</b>	<p>CPU socket information that includes data on how the processor can be upgraded (if upgrades are supported). This property is an integer enumeration.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Unknown</li> <li>• 3 = Daughter Board</li> <li>• 4 = ZIF Socket</li> <li>• 5 = Replacement/Piggy Back</li> <li>• 6 = None</li> <li>• 7 = LIF Socket</li> <li>• 8 = Slot 1</li> <li>• 9 = Slot 2</li> <li>• 10 = 370 Pin Socket</li> <li>• 11 = Slot A</li> <li>• 12 = Slot M</li> <li>• 13 = Socket 423</li> <li>• 14 = Socket A (Socket 462)</li> <li>• 15 = Socket 478</li> <li>• 16 = Socket 754</li> <li>• 17 = Socket 940</li> <li>• 18 = Socket 939</li> <li>• 19 = Socket mPGA604</li> <li>• 20 = Socket LGA771</li> <li>• 21 = Socket LGA775</li> <li>• 22 = Socket S1</li> <li>• 23 = Socket AM2</li> <li>• 24 = Socket F (1207)</li> <li>• 25 = Socket LGA1366</li> <li>• 26 = Socket G34</li> <li>• 27 = Socket AM3</li> <li>• 28 = Socket C32</li> <li>• 29 = Socket LGA1156</li> <li>• 30 = Socket LGA1567</li> <li>• 31 = Socket PGA988A</li> <li>• 32 = Socket BGA1288</li> <li>• 33 = rPGA988B</li> <li>• 34 = BGA1023</li> <li>• 35 = BGA1224</li> <li>• 36 = LGA1155</li> <li>• 37 = LGA1356</li> <li>• 38 = LGA2011</li> <li>• 39 = Socket FS1</li> <li>• 40 = Socket FS2</li> <li>• 41 = Socket FM1</li> <li>• 42 = Socket FM2</li> <li>• 43 = Socket LGA2011-3</li> <li>• 44 = Socket LGA1356-3</li> <li>• 45 = Socket LGA1150</li> <li>• 46 = Socket BGA1168</li> </ul>

# DCIM\_NumericSensor

Table 31. NumericSensor

Property	Description	Supported Operating System(s)
<b>BaseUnits</b>	<p>The base unit of the values returned by this Sensor. All the values returned by this Sensor are represented in the units obtained by (BaseUnits * 10 raised to the power of the UnitModifier). For example, if BaseUnits is Volts and the UnitModifier is -6, then the units of the values returned are MicroVolts. However, if the RateUnits property is set to a value other than <b>None</b>, then the units are further qualified as rate units. In the above example, if RateUnits is set to <b>Per Second</b>, then the values returned by the Sensor are in MicroVolts/Second. The units apply to all numeric properties of the Sensor, unless explicitly overridden by the Units qualifier.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Degrees C</li> <li>• 3 = Degrees F</li> <li>• 4 = Degrees K</li> <li>• 5 = Volts</li> <li>• 6 = Amps</li> <li>• 7 = Watts</li> <li>• 8 = Joules</li> <li>• 9 = Coulombs</li> <li>• 10 = VA</li> <li>• 11 = Nits</li> <li>• 12 = Lumens</li> <li>• 13 = Lux</li> <li>• 14 = Candelas</li> <li>• 15 = kPa</li> <li>• 16 = PSI</li> <li>• 17 = Newtons</li> <li>• 18 = CFM</li> <li>• 19 = RPM</li> <li>• 20 = Hertz</li> <li>• 21 = Seconds</li> <li>• 22 = Minutes</li> <li>• 23 = Hours</li> <li>• 24 = Days</li> <li>• 25 = Weeks</li> <li>• 26 = Mils</li> <li>• 27 = Inches</li> <li>• 28 = Feet</li> <li>• 29 = Cubic Inches</li> <li>• 30 = Cubic Feet</li> <li>• 31 = Meters</li> <li>• 32 = Cubic Centimeters</li> <li>• 33 = Cubic Meters</li> <li>• 34 = Liters</li> <li>• 35 = Fluid Ounces</li> <li>• 36 = Radians</li> <li>• 37 = Steradians</li> <li>• 38 = Revolutions</li> <li>• 39 = Cycles</li> </ul>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• 40 = Gravities</li> <li>• 41 = Ounces</li> <li>• 42 = Pounds</li> <li>• 43 = Foot-Pounds</li> <li>• 44 = Ounce-Inches</li> <li>• 45 = Gauss</li> <li>• 46 = Gilberts</li> <li>• 47 = Henries</li> <li>• 48 = Farads</li> <li>• 49 = Ohms</li> <li>• 50 = Siemens</li> <li>• 51 = Moles</li> <li>• 52 = Becquerels</li> <li>• 53 = PPM (parts/million)</li> <li>• 54 = Decibels</li> <li>• 55 = DbA</li> <li>• 56 = DbC</li> <li>• 57 = Grays</li> <li>• 58 = Sieverts</li> <li>• 59 = Color Temperature Degrees K</li> <li>• 60 = Bits</li> <li>• 61 = Bytes</li> <li>• 62 = Words (data)</li> <li>• 63 = DoubleWords</li> <li>• 64 = QuadWords</li> <li>• 65 = Percentage</li> <li>• 66 = Pascals</li> </ul>	
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.	Microsoft Windows, Linux
<b>CurrentReading</b>	The current value indicated by the Sensor.	Microsoft Windows, Linux
<b>CurrentState</b>	The current state indicated by the Sensor. This is always one of the <b>PossibleStates</b> .	Microsoft Windows, Linux
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.	Microsoft Windows, Linux
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>i</b> <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties. We have introduced new elements for Temperature sensor, Fan Speed Sensor, Current Supply and Voltage Numeric Sensor.</b></p>	Microsoft Windows, Linux
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
<b>EnabledState</b>	<ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p> <p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>	Microsoft Windows, Linux
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> </ul>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>.. = DMTF Reserved</li> </ul> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p>	
<b>LowerThresholdCritical</b>	The Sensor's threshold values specify the ranges (min and max values) for determining whether the Sensor is operating under Normal, NonCritical or Critical conditions. The CurrentState is Critical once the CurrentReading is below LowerThresholdCritical.	Microsoft Windows, Linux
<b>LowerThresholdNonCritical</b>	<p>The Sensor's threshold values specify the ranges (min and max values) for determining whether the Sensor is operating under Normal, NonCritical, Critical conditions. If CurrentReading is between LowerThresholdNonCritical and Upper ThresholdNonCritical, then the Sensor is reporting a normal value. If CurrentReading is between LowerThresholdNonCritical and LowerThresholdCritical, then the CurrentState is NonCritical.</p> <p>Example for Set command: wmic /namespace:\\root\dcim\sysman path dcim_numericsensor Where <b>ElementName like '%Temperature Sensor:%'</b> set LowerThresholdNonCritical = <b>30</b>. This sets the all temperature probes (lower threshold non critical) in the system to <b>30</b> degree Celsius.</p>	Microsoft Windows, Linux
<b>NormalMax</b>	NormalMax provides guidance for the user as to the normal maximum range for the NumericSensor.	Linux
<b>NormalMin</b>	NormalMin provides guidance for the user as to the normal minimum range for the NumericSensor.	Linux
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = OK</li> <li>3 = Degraded</li> <li>4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>6 = Error</li> <li>7 = Non-Recoverable Error</li> <li>8 = Starting</li> <li>9 = Stopping</li> <li>10 = Stopped — Implies a clean and orderly stop</li> <li>11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>15 = Dormant - Indicates that the element is inactive or quiesced.</li> <li>16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or</li> </ul>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<p>Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</p> <ul style="list-style-type: none"> <li>• 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul> <p>OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.</p>	
<b>PossibleStates</b>	<p>Enumerates the string outputs of the Sensor.</p> <p>Example 1 - A <b>Switch</b> Sensor may output the states <b>On</b>, or <b>Off</b>. Another implementation of the Switch may output the states <b>Open</b>, and <b>Close</b>.</p> <p>Example 2 - Is a NumericSensor supporting thresholds. This Sensor can report the states like <b>Normal</b>, <b>Upper Non-Critical</b>, <b>Lower Non-Critical</b>, and so on. A NumericSensor that does not publish readings and thresholds, but stores this data internally, can still report its states.</p>	Microsoft Windows, Linux
<b>RateUnits</b>	<p>Specifies if the units returned by this Sensor are rate units. All the values returned by this Sensor are represented in the units obtained by (BaseUnits * 10 raised to the power of the UnitModifier). This is true unless this property (RateUnits) has a value different than <b>None</b>. For example, if BaseUnits is Volts and the UnitModifier is -6, then the units of the values returned are MicroVolts. But, if the RateUnits property is set to a value other than <b>None</b>, then the units are further qualified as rate units. In the above example, if RateUnits is set to <b>Per Second</b>, then the values returned by the Sensor are in MicroVolts/Second. The units apply to all numeric properties of the Sensor, unless explicitly overridden by the Units qualifier. Any implementation of CurrentReading should be qualified with either a Counter or a Gauge qualifier, depending on the characteristics of the sensor being modeled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = None</li> <li>• 1 = Per MicroSecond</li> <li>• 2 = Per MilliSecond</li> <li>• 3 = Per Second</li> <li>• 4 = Per Minute</li> <li>• 5 = Per Hour</li> <li>• 6 = Per Day</li> <li>• 7 = Per Week</li> <li>• 8 = Per Month</li> <li>• 9 = Per Year</li> </ul>	Microsoft Windows, Linux
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may</p>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<p><b>have the value No Change (5). Offline (6) indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</b></p> <p><b>There are two new values in RequestedState that build on the statuses of EnabledState. These are Reboot (10) and Reset (11).</b></p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>	
<b>SensorType</b>	<p>The Type of the Sensor, e.g. Voltage or Temperature Sensor. If the type is set to <b>Other</b>, then the OtherSensorType Description can be used to further identify the type, or if the Sensor has numeric readings, then the type of the Sensor can be implicitly determined by the Units. A description of the different Sensor types is as follows: A Temperature Sensor measures the environmental temperature. Voltage and Current Sensors measure electrical voltage and current readings. A Tachometer measures speed/revolutions of a Device. For example, a Fan Device can have an associated Tachometer which measures its speed. A Counter is a general purpose Sensor that measures some numerical property of a Device. A Counter value can be cleared, but it never decreases. A Switch Sensor has states like Open/Close, On/Off, or Up/Down. A Lock has states of Locked/Unlocked. Humidity, Smoke Detection and Air Flow Sensors measure the equivalent environmental characteristics. A Presence Sensor detects the presence of a PhysicalElement. A Power Consumption Sensor measures the instantaneous power consumed by a managed element. A Power Production Sensor measures the instantaneous power produced by a managed element such as a power supply or a voltage regulator. A pressure sensor is used to report pressure. Intrusion sensor reports an intrusion of an enclosure regardless whether it was authorized or not.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Temperature</li> <li>• 3 = Voltage</li> <li>• 4 = Current</li> </ul>	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• 5 = Tachometer</li> <li>• 6 = Counter</li> <li>• 7 = Switch</li> <li>• 8 = Lock</li> <li>• 9 = Humidity</li> <li>• 10 = Smoke Detection</li> <li>• 11 = Presence</li> <li>• 12 = Air Flow</li> <li>• 13 = Power Consumption</li> <li>• 14 = Power Production</li> <li>• 15 = Pressure</li> <li>• 16 = Intrusion</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>	
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.	Microsoft Windows, Linux
<b>SystemName</b>	The System Name of the scoping system.	Microsoft Windows, Linux
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>	Microsoft Windows, Linux
<b>UnitModifier</b>	<p>The unit multiplier for the values returned by this Sensor. All the values returned by this Sensor are represented in the units obtained by (BaseUnits * 10 raised to the power of the UnitModifier).</p> <p>For example, if BaseUnits is Volts and the Unit Modifier is -6, then the units of the values returned are MicroVolts. However, if the RateUnits property is set to a value other than <b>None</b>, then the units are further qualified as rate units.</p> <p>In the above example, if RateUnits is set to <b>Per Second</b>, then the values returned by the Sensor are in MicroVolts/Second. The units apply to all numeric properties of the Sensor, unless explicitly overridden by the Units qualifier.</p>	Microsoft Windows, Linux
<b>UpperThresholdCritical</b>	The Sensor's threshold values specify the ranges (min and max values) for determining whether the Sensor is operating under Normal, NonCritical, Critical conditions. If the CurrentReading is above UpperThresholdCritical, then the Current State is critical.	Microsoft Windows, Linux
<b>UpperThresholdNonCritical</b>	The Sensor's threshold values specify the ranges (min and max values) for determining whether the Sensor is operating under Normal, NonCritical or Critical conditions. If the	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	<p>CurrentReading is between LowerThresholdNonCritical and UpperThresholdNonCritical, then the Sensor is reporting a normal value. If the CurrentReading is between UpperThreshold NonCritical and UpperThresholdCritical, then the CurrentState is NonCritical.</p> <p>Example for Set command: wmic /namespace:\\root\dcim\sysman path dcim_numericsensor Where <b>ElementName like '%Temperature Sensor:%'</b> set UpperThresholdNonCritical = <b>70</b></p>	
<b>ValueFormulation</b>	<p>Indicates the method used by the sensor to produce its reading.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Measured - Indicates the value is measured directly by the sensor.</li> <li>3 = Derived - Indicates the value is derived from other measured values that are not reported discretely by this sensor.</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>	Microsoft Windows, Linux
<b>SupportedThresholds</b>	<p>SupportedThresholds property is an array that contains the list of the implemented thresholds: LowerThresholdNonCritical, UpperThresholdNonCritical, LowerThresholdCritical, UpperThresholdCritical. When the implementation does not support any of these threshold properties, the CIM_NumericSensor.SupportedThresholds property shall be an empty array.</p>	Microsoft Windows, Linux
<b>SettableThresholds</b>	<p>SettableThresholds property is an array that contains the list of the settable implemented thresholds: LowerThresholdNonCritical, UpperThresholdNonCritical. The CIM_NumericSensor.SettableThresholds array shall contain the subset of values in the CIM_NumericSensor.SupportedThresholds array. When the implementation does not support any of the settable threshold properties, the CIM_NumericSensor.SettableThresholds property shall be an empty array.</p>	Microsoft Windows, Linux
<b>Caption</b>	A short textual description of an object.	Microsoft Windows, Linux
<b>Description</b>	A short textual description of an object.	Microsoft Windows, Linux

## DCIM\_Sensor

Table 32. Sensor

Property	Description
<b>Caption</b>	The Caption property is a short textual description (one- line string) of the object.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>CurrentState</b>	The current state indicated by the Sensor. This is always one of the <b>PossibleStates</b> .
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name,</b></p>

Property	Description
<b>EnabledDefault</b>	<p data-bbox="600 226 1469 315"><b>without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p> <p data-bbox="560 349 1469 405">An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p data-bbox="560 427 759 450">Possible values are:</p> <ul data-bbox="560 468 943 719" style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="560 736 1046 763">By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p data-bbox="560 797 1485 853">An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p data-bbox="560 875 759 898">Possible values are:</p> <ul data-bbox="560 916 1485 1503" style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="560 1520 1422 1570">For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>HealthState</b>	<p data-bbox="560 1603 1430 1659">Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p data-bbox="560 1682 1477 1738">DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p> <p data-bbox="560 1760 759 1783">Possible values are:</p> <ul data-bbox="560 1800 1469 1993" style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> </ul>

## Property

## Description

- 15 = Minor failure — All functionality is available but some may be degraded.
- 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.
- 25 = Critical failure — The element is non-functional and recovery may not be possible.
- 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.
- .. = DMTF Reserved

## OperationalStatus

Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory. However, a few are not and are described here in more detail.

**Stressed, Predictive Failure, In Service, No Contact, Lost Communication, Stopped** and **Aborted** are similar, although the former , while the latter **Dormant, Supporting Entity in Error, Completed, Power Mode, OperationalStatus** replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.

Possible values are:

- 0 = Unknown
- 1 = Other
- 2 = OK
- 3 = Degraded
- 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of **Stressed** states are overload, overheated, and so on.
- 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.
- 6 = Error
- 7 = Non-Recoverable Error
- 8 = Starting
- 9 = Stopping
- 10 = Stopped — Implies a clean and orderly stop.
- 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.
- 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.
- 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.
- 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.
- 15 = Dormant — Indicates that the element is inactive or quiesced.
- 16 = Supporting Entity in Error — Indicates that this element may be **OK** but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.
- 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).
- 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.
- .. = DMTF Reserved
- 0x8000.. = Vendor Reserved

Property	Description
<b>PossibleStates</b>	<p>Enumerates the string outputs of the Sensor. For example, a <b>Switch</b> Sensor may output the states <b>On</b>, or <b>Off</b>. Another implementation of the Switch may output the states <b>Open</b>, and <b>Close</b>. Another example is a NumericSensor supporting thresholds. This Sensor can report the states like <b>Normal</b>, <b>Upper Fatal</b>, <b>Lower Non-Critical</b>, and so on. A NumericSensor that does not publish readings and thresholds, but stores this data internally, can still report its states.</p>
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration. <b>Unknown (0)</b> indicates the last requested state for the element is unknown.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. <b>Offline (6)</b> indicates that the element has been requested to transition to the Enabled but Offline EnabledState. There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. <b>Reboot</b> refers to doing a Shut Down and then moving to an Enabled state. <b>Reset</b> indicates that the element is first Disabled and then Enabled.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Deferred</li> <li>9 = Quiesce</li> </ul>

Property	Description
<b>SensorType</b>	<ul style="list-style-type: none"> <li>· 10 = Reboot</li> <li>· 11 = Reset</li> <li>· 12 = Not Applicable</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul> <p>The Type of the Sensor, e.g. Voltage or Temperature Sensor. If the type is set to <b>Other</b>, then the OtherSensorType Description can be used to further identify the type, or if the Sensor has numeric readings, then the type of the Sensor can be implicitly determined by the Units. A description of the different Sensor types is as follows: A Temperature Sensor measures the environmental temperature. Voltage and Current Sensors measure electrical voltage and current readings. A Tachometer measures speed/revolutions of a Device. For example, a Fan Device can have an associated Tachometer which measures its speed. A Counter is a general purpose Sensor that measures some numerical property of a Device. A Counter value can be cleared, but it never decreases. A Switch Sensor has states like Open/Close, On/Off, or Up/Down. A Lock has states of Locked/Unlocked. Humidity, Smoke Detection and Air Flow Sensors measure the equivalent environmental characteristics. A Presence Sensor detects the presence of a PhysicalElement. A Power Consumption Sensor measures the instantaneous power consumed by a managed element. A Power Production Sensor measures the instantaneous power produced by a managed element such as a power supply or a voltage regulator. A pressure sensor is used to report pressure. Intrusion sensor reports an intrusion of an enclosure regardless whether it was authorized or not.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Temperature</li> <li>· 3 = Voltage</li> <li>· 4 = Current</li> <li>· 5 = Tachometer</li> <li>· 6 = Counter</li> <li>· 7 = Switch</li> <li>· 8 = Lock</li> <li>· 9 = Humidity</li> <li>· 10 = Smoke Detection</li> <li>· 11 = Presence</li> <li>· 12 = Air Flow</li> <li>· 13 = Power Consumption</li> <li>· 14 = Power Production</li> <li>· 15 = Pressure</li> <li>· 16 = Intrusion</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change — Indicates that no transition is in progress.</li> <li>· 6 = Offline</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_DeviceBay

Table 33. DeviceBay

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>Description</b>	Defines the physical location of the device bay. Provides a textual description of the object.
<b>DeviceBayLocation</b>	<p>Defines the type of Device Bay.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Other</li> <li>1 = Unknown</li> <li>2 = Proprietary Bay</li> <li>3 = Standard Desktop Device Bay</li> <li>4 = Standard Mobile Device Bay</li> <li>5 = Standard Ultra-Mobile Device Bay</li> <li>6..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>DeviceBayType</b>	<p>Defines the type of Device Bay.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Other</li> <li>1 = Unknown</li> <li>2 = Proprietary Bay</li> <li>3 = Standard Desktop Device Bay</li> <li>4 = Standard Mobile Device Bay</li> <li>5 = Standard Ultra-Mobile Device Bay</li> <li>6..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>DeviceCurrentlyAttached</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>DeviceSupported</b>	Defines a string containing a list of devices supported in this bay separated by commas.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name,</p>

Property	Description
<b>EnabledDefault</b>	<p data-bbox="590 224 1503 313"><b>without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p> <p data-bbox="542 336 1503 403">An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p data-bbox="542 414 1503 448">Possible values are:</p> <ul data-bbox="542 459 1503 716" style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="542 728 1503 761">By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p data-bbox="542 784 1503 851">An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p data-bbox="542 862 1503 896">Possible values are:</p> <ul data-bbox="542 907 1503 1500" style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>IdentifyingDescriptions</b>	<p data-bbox="542 1523 1503 1612">An array of free-form strings providing explanations and details behind the entries in the OtherIdentifyingInfo array. Note that each entry of this array is related to the entry in OtherIdentifyingInfo that is located at the same index.</p>
<b>LogicalModuleType</b>	<p data-bbox="542 1635 1503 1668">Identifies the type of LogicalModule this instance represents.</p> <p data-bbox="542 1680 1503 1713">Possible values are:</p> <ul data-bbox="542 1724 1503 2016" style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the LogicalModuleType is unknown.</li> <li>• 1 = Other — Indicates that the value is not one of the enumerated values. OtherLogicalModuleTypeDescription should contain additional information.</li> <li>• 2 = Device Tray — Indicates that the device is a device or media tray, for example in a modular system.</li> <li>• 3 = Line Card — Indicates that the module is a line card in a switch.</li> <li>• 4 = Blade — Indicates the module is a blade inserted into a switch.</li> <li>• 5..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>

Property	Description
<b>ModuleNumber</b>	Logical modules are often named by the physical or logical slot that they occupy within the containing device. ModuleNumber is the number assigned to the module by its parent.
<b>OtherIdentifyingInfo</b>	OtherIdentifyingInfo captures data, in addition to DeviceID information, that could be used to identify a LogicalDevice. For example, you could use this property to hold the operating system's user-friendly name for the Device.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b></li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_VideoHead

Table 34. VideoHead

Property	Description
<b>Caption</b>	The Caption property is a short textual description (one- line string) of the object.
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>CurrentBitsPerPixel</b>	The number of bits used to display each pixel.
<b>CurrentHorizontalResolution</b>	Current number of horizontal pixels.
<b>CurrentNumberOfColumns</b>	If in character mode, number of columns for this DisplayController. Otherwise, enter 0.
<b>CurrentNumberOfRows</b>	If in character mode, number of rows for this Video Controller. Otherwise, enter 0.
<b>CurrentScanMode</b>	Current scan mode. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Not Supported</li> <li>• 3 = Non-Interlaced Operation</li> <li>• 4 = Interlaced Operation</li> </ul>
<b>CurrentVerticalResolution</b>	Current number of vertical pixels.
<b>Description</b>	Provides a textual description of the object.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>ElementName</b>	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information. <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for</p>

Property	Description
<b>EnabledDefault</b>	<p data-bbox="600 226 1469 286"><b>instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p> <p data-bbox="560 322 1461 376">An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p data-bbox="560 394 756 421">Possible values are:</p> <ul data-bbox="560 439 943 689" style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="560 707 1043 734">By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p data-bbox="560 763 1477 817">An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p data-bbox="560 835 756 862">Possible values are:</p> <ul data-bbox="560 880 1490 1496" style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p data-bbox="560 1514 1422 1570">For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>RequestedState</b>	<p data-bbox="560 1599 1461 1715">An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p data-bbox="560 1733 756 1760">Possible values are:</p> <ul data-bbox="560 1778 1414 1986" style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>· 7 = Test</li> <li>· 8 = Deferred</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>· 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>· 12 = Not Applicable</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change — Indicates that no transition is in progress.</li> <li>· 6 = Offline</li> <li>· 7 = Test</li> <li>· 8 = Defer</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot</li> <li>· 11 = Reset</li> <li>· 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

# DCIM\_Button

Table 35. Button

Property	Description
<b>ButtonPurpose</b>	<p>The ButtonPurpose property identifies or defines the use of the button represented by the instance. If the type is set to <b>Other</b>, then the OtherButtonPurpose property can be used to further identify the purpose. Descriptions of the different Button purposes are as follows: A Power Button changes the power state of a device. A reset button is used to reset the state of a device. Undock is used to undock or disconnect a device or entire system from a separate device or system. An Open or Close button is used on a device that has an object that usually moves such as a drawer, door, or tray.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Power</li><li>• 3 = Reset</li><li>• 4 = Undock</li><li>• 5 = Open/Close</li><li>• 6..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul>
<b>ButtonType</b>	<p>The ButtonType property identifies or defines the type the button represented by the instance.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Momentary</li><li>• 3 = Toggle</li><li>• 4..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>If the type is set to <b>Other</b>, then the OtherButtonType property can be used to further identify the type. A momentary button is one that depressed for a moment to cause the desired affect the target device or circuit A toggle type button is one that will remain in a switched or depressed position until it is depressed or switched again.</p>
<b>CreationClassName</b>	<p>Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.</p>
<b>DeviceID</b>	<p>An address or other identifying information used to uniquely name the LogicalDevice.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 2 = Enabled</li><li>• 3 = Disabled</li><li>• 5 = Not Applicable</li><li>• 6 = Enabled but Offline</li><li>• 7 = No Default</li><li>• 9 = Quiesce</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled</b> (value = 2).</p>

Property	Description
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = 4) and starting (value = 10) are transient states between enabled and disabled.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline - Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot - Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p>

Property	Description
	<p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_LCDPanel

Table 36. LCDPanel

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>DeviceID</b>	An address or other identifying information used to uniquely name the LogicalDevice.
<b>DisplayDataCategory</b>	<p>Identifies the category of data to be displayed on the LCD Panel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = None</li> <li>• 3 = User Specified</li> <li>• 4 = Default</li> <li>• 5 = IPv4 Address</li> <li>• 6 = IDRAC MAC Address</li> <li>• 7 = Service Tag</li> <li>• 8 = System Name</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>9 = IPv6 Address</li> <li>10 = Ambient</li> <li>11 = System Power</li> </ul>
<b>DisplayModeUserString</b>	Contains a user configurable string to be displayed on the LCD panel if DisplayDataCategory has the value <b>3</b> .
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>7 = In Test — Indicates that the element is in a test state.</li> <li>8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>11..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>LocalConfigurationEnabled</b>	Indicates if the LCD panel may be used to modify the system configuration. A value of <b>true</b> indicates system configuration via the LCD panel is enabled. A value of <b>false</b> indicates system configuration via the LCD panel is disabled.
<b>SystemCreationClassName</b>	The CreationClassName of the scoping system.
<b>SystemName</b>	The System Name of the scoping system.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_NetworkPortConfigurationService

Table 37. NetworkPortConfigurationService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p>
	<p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p>
	<p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p>

Property	Description
	<p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 (Not Applicable)</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_TimeService

Table 38. TimeService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties. EnabledDefault An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>① <b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p>① <b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5). There are two new values in RequestedState that build on the statuses of EnabledState. These are Reboot (10) and Reset (11). Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_AccountManagementService

Table 39. AccountManagementService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.

Property	Description
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, processes any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p>

Property	Description
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not run or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	Indicates the target state to which the instance is transitioning.
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul>

Property	Description
	A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.

## DCIM\_RoleBasedAuthorizationService

Table 40. RoleBasedAuthorizationService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b></p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>Name</b>	The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

# DCIM\_PowerManagementService

Table 41. PowerManagementService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 2 = Enabled</li><li>• 3 = Disabled</li><li>• 5 = Not Applicable</li><li>• 6 = Enabled but Offline</li><li>• 7 = No Default</li><li>• 9 = Quiesce</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Enabled — Indicates that the element is or could be executing commands, processes any queued commands, and queues new requests.</li><li>• 3 = Disabled — Indicates that the element will not run commands and drops any new requests.</li><li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li><li>• 5 = Not Applicable — Indicates that the element does not support being enabled or disabled.</li><li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and drops any new requests.</li><li>• 7 = In Test — Indicates that the element is in a test state.</li><li>• 8 = Deferred — Indicates that the element may be completing commands, but queues any new requests.</li><li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li><li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li><li>• 11..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul>

Property	Description
<b>Name</b>	The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.
<b>OtherEnabledState</b>	A string that describes the enabled or disabled state of the element when the EnabledState property is set to <b>1 (Other)</b> . This property must be set to null when EnabledState is any value other than 1.
<b>PrimaryOwnerContact</b>	A string that provides information on how the primary owner of the Service can be reached (for example, phone number, e-mail address and so on).
<b>PrimaryOwnerName</b>	The name of the primary owner for the service, if one is defined. The primary owner is the initial support contact for the Service.
<b>PrimaryStatus</b>	<p>Provides a high-level status value, intended to align with Red-Yellow-Green type representation of status. It should be used with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates that the implementation is in general capable of returning this property, but is unable to do so now.</li> <li>1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change</li> <li>6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>7 = Test</li> <li>8 = Deferred</li> <li>9 = Quiesce</li> <li>10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p>

Property	Description
	<p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not run or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_BootService

Table 42. BootService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. By default, the element is <b>Enabled (value = 2)</b>.</p> <p>Possible values are:</p>

Property	Description
<b>EnabledState</b>	<ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test— Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting - Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable) , then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_IPConfigurationService

Table 43. IPConfigurationService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.

Property	Description
<b>EnabledDefault</b>	<p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p> <p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. By default, the element is <b>Enabled (value = 2)</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>SystemCreationClassName</b>	<p>The CreationClassName of the scoping System.</p>
<b>SystemName</b>	<p>The Name of the scoping System.</p>
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_PowerUtilizationManagementService

Table 44. PowerUtilizationManagementService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. By default, the element is <b>Enabled (value = 2)</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = 4) and starting (value = 10) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>7 = In Test — Indicates that the element is in a test state.</li> <li>8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>10 = Starting</li> <li>11..32767 = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.
<b>PendingPowerUtilizationAlgorithm</b>	<p>This property describes the pending requested algorithm to be employed by the service for power utilization.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = None — Indicates that currently the service is not employing any power utilization algorithm. If the property value is 2 (<b>None</b>), then the PowerUtilizationMode is equal to 2 (<b>None</b>).</li> <li>3 = Custom Settings Based — Indicates that the service is employing power utilization algorithm based on a specific settings. This settings may be represented by the DCIM_PowerUtilizationSettingData instance associated</li> <li>4 = Maximum Performance — Indicates that the service is employing a power utilization that yields the maximum performance for the affected managed elements. If the property value is 4 (<b>Maximum Performance</b>), then the PowerUtilizationMode is equal to 4 (<b>Static</b>).</li> <li>5 = Minimum Performance — Indicates that the service is employing a power utilization that yields the minimum power consumption for the affected managed elements. If the property value is 5 (<b>Minimum Performance</b>), then the PowerUtilizationMode is equal to 4 (<b>Static</b>).</li> <li>6 = OS Specific — Indicates that the service is employing a power utilization defined by the operating system. If the property value is 6 (<b>OS Specific</b>), then the PowerUtilizationMode is equal to 3 (<b>Dynamic</b>).</li> <li>7 = Active Power Utilization — Indicates that the service is employing a specific algorithm to yield the best power consumption and performance for the affected managed elements. If the property value is 7 (<b>Active Power Utilization</b>), then the PowerUtilizationMode is equal to 3 (<b>Dynamic</b>).</li> </ul>
<b>PowerUtilizationAlgorithm</b>	<p>Describes the algorithm employed by the service for power utilization. Depending on the performance and power needs of the managed element, the selection could be made for the appropriate algorithm to be deployed for the power utilization.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown(<b>Dynamic</b>).</li> <li>2 = None — Indicates that currently the service is not employing any power utilization algorithm. If the property value is 2 (<b>None</b>), then the PowerUtilizationMode is equal to 2 (<b>None</b>).</li> <li>3 = Custom Settings Based — Indicates that the service is employing power utilization algorithm based on a specific settings. This settings may be represented by the DCIM_PowerUtilizationSettingData instance associated</li> <li>4 = Maximum Performance — Indicates that the service is employing a power utilization that yields the maximum performance for the affected managed elements. If the property value is 4 (<b>Maximum Performance</b>), then the PowerUtilizationMode is equal to 4 (<b>Static</b>).</li> <li>5 = Minimum Performance — Indicates that the service is employing a power utilization that yields the minimum power consumption for the affected managed elements. If the property value is 5 (<b>Minimum Performance</b>), then the PowerUtilizationMode is equal to 4 (<b>Static</b>).</li> <li>6 = OS Specific — Indicates that the service is employing a power utilization defined by the operating system. If the property value is 6 (<b>OS Specific</b>), then the PowerUtilizationMode is equal to 3 (<b>Dynamic</b>).</li> </ul>

Property	Description
<b>PowerUtilizationMode</b>	<ul style="list-style-type: none"> <li>· 7 = Active Power Utilization — Indicates that the service is employing a specific algorithm to yield the best power consumption and performance for the affected managed elements. If the property value is 7 (<b>Active Power Utilization</b>), then the PowerUtilizationMode is equal to 3</li> </ul> <p>Indicates the current power utilization mode implemented by the service. The mode selection is a generally made infrequently as part of element configuration.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change</li> <li>· 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>· 7 = Test</li> <li>· 8 = Deferred</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>· 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>· 12 = Not Applicable</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change</li> <li>· 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>· 7 = Test</li> <li>· 8 = Deferred</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot - Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>· 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>· 12 = Not Applicable</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul> <p><b>NOTE:</b> When EnabledState is set to 5 (Not Applicable), then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value No Change (5) has been deprecated instead of indicating the last requested state is Unknown (0). If the last requested or desired state is unknown, RequestedState should have the value Unknown (0), but may have the value No Change (5).</p>
	<p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state.</p>

Property	Description
	<p>The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_BIOSService

Table 45. BIOSService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element. By default, the element is <b>Enabled</b> (value = 2).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> </ul>

Property	Description
<b>EnabledState</b>	<ul style="list-style-type: none"> <li>• 3 = Disabled</li> <li>• 5 = Not Applicable</li> <li>• 6 = Enabled but Offline</li> <li>• 7 = No Default</li> <li>• 9 = Quiesce</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be running commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not run commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>Name</b>	<p>The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.</p>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested. The actual state of the element is represented by EnabledState.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates that the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>

Property	Description
	<p>This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. See the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates that the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than 5 or 12 identifies the state to which the element is in the process of transitioning.</p>
<b>SetBIOSAttributes (Method)</b>	<p>This method is called to modify a group of BIOSAttribute instances associated with this BIOSService. The method may return the following errors:</p> <ul style="list-style-type: none"> <li>• <b>0 (Success)</b> — If the method is completed successfully.</li> <li>• <b>1 (Failure)</b> — If <ul style="list-style-type: none"> <li>• the possible value is out of range. For example, trying to set value other than 0 to 23 for the attribute Autoon Hour.</li> <li>• it is an unsupported BIOS operation. For example, trying to enable TPM when TPM is disabled.</li> </ul> </li> <li>• <b>2 (Authentication failure)</b> — If the BIOS password is incorrect.</li> <li>• <b>4294967295 (Invalid Possible Value)</b> — If the possible value is invalid; or read-only.</li> </ul>
	The method may return an instance of CIM_Error.
<b>RemoteBIOSUpdate (Method)</b>	This method is called to remotely update the BIOS image. It takes the hdr file of the BIOS image as the only parameter.

# DCIM\_SoftwareInstallationService

Table 46. SoftwareInstallationService

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass that is used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 2 = Enabled</li><li>• 3 = Disabled</li><li>• 5 = Not Applicable</li><li>• 6 = Enabled but Offline</li><li>• 7 = No Default</li><li>• 9 = Quiesce</li><li>• .. = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li><li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li><li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li><li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li><li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li><li>• 7 = In Test — Indicates that the element is in a test state.</li><li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li><li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li><li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li><li>• 11..32767 = DMTF Reserved</li><li>• 32768..65535 = Vendor Reserved</li></ul>
<b>Name</b>	The Name property uniquely identifies the Service and provides an indication of the functionality that is managed. This functionality is described in more detail in the Description property of the object.
<b>PrimaryOwnerContact</b>	A string that provides information on how the primary owner of the Service can be reached (for example, phone number, e-mail address, and so on).
<b>PrimaryOwnerName</b>	The name of the primary owner for the service, if one is defined. The primary owner is the initial support contact for the Service.

Property	Description
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change</li> <li>6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>7 = Test</li> <li>8 = Deferred</li> <li>9 = Quiesce</li> <li>10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>
<b>SystemCreationClassName</b>	The CreationClassName of the scoping System.
<b>SystemName</b>	The Name of the scoping System.

Property	Description
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change — Indicates that no transition is in progress.</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> <li>• 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>

## DCIM\_ComputerSystem

Table 47. ComputerSystem

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>Dedicated</b>	<p>Enumeration indicating the purpose(s) for which the ComputerSystem is dedicated, if any, and the functionality provided. For example, one could specify that the System is dedicated to <b>Print (value = 11)</b> or acts as a <b>Hub (value = 8)</b>.</p> <p>Also, a value = <b>0</b> indicates this is a general purpose system, <b>Not Dedicated</b> but that it also hosts <b>Print (value = 11)</b> or mobile phone <b>Mobile User Device (value = 17)</b> services.</p> <p>A clarification is needed with respect to the value <b>17 (Mobile User Device)</b>. An example of a dedicated user device is a mobile phone or a barcode scanner in a store that communicates via radio frequency. These systems are quite limited in functionality and programmability, and are not considered <b>general purpose</b> computing platforms. Alternately, an example of a mobile system that is <b>general purpose</b> (that is, is NOT dedicated) is a hand-held computer. Although limited in its programmability, new software can be downloaded and its functionality expanded by the user.</p> <p>The management scope of a <b>Management Controller</b> is typically a single managed system in which it is contained.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Not Dedicated</li> <li>• 1 = Unknown</li> <li>• 2 = Other</li> <li>• 3 = Storage</li> <li>• 4 = Router</li> <li>• 5 = Switch</li> <li>• 6 = Layer 3 Switch</li> <li>• 7 = Central Office Switch</li> <li>• 8 = Hub</li> <li>• 9 = Access Server</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 10 = Firewall</li> <li>• 11 = Print</li> <li>• 12 = I/O</li> <li>• 13 = Web Caching</li> <li>• 14 = Management — Indicates this instance is dedicated to hosting system management software.</li> <li>• 15 = Block Server</li> <li>• 16 = File Server</li> <li>• 17 = Mobile User Device</li> <li>• 18 = Repeater</li> <li>• 19 = Bridge/Extender</li> <li>• 20 = Gateway</li> <li>• 21 = Storage Virtualizer</li> <li>• 22 = Media Library</li> <li>• 23 = ExtenderNode</li> <li>• 24 = NAS Head</li> <li>• 25 = Self-contained NAS</li> <li>• 26 = UPS</li> <li>• 27 = IP Phone</li> <li>• 28 = Management Controller — Indicates this instance represents specialized hardware dedicated to systems management (i.e., a Baseboard Management Controller (BMC) or service processor).</li> <li>• 29 = Chassis Manager — Indicates this instance represents a system dedicated to management of a blade chassis and its contained devices. This value would be used to represent a Shelf Controller. A <b>Chassis Manager</b> is an aggregation point for management and may rely on subordinate management controllers for the management of constituent parts.</li> <li>• 30 = Host-based RAID controller — Indicates this instance represents a RAID storage controller contained within a host computer.</li> <li>• 31 = Storage Device Enclosure — Indicates this instance represents an enclosure that contains storage devices.</li> <li>• 32 = Desktop</li> <li>• 33 = Laptop</li> <li>• 34 = Virtual Tape Library — Is the emulation of a tape library by a Virtual Library System.</li> <li>• 35 = Virtual Library System — Uses disk storage to emulate tape libraries.</li> <li>• 36..32567 = DMTF Reserved</li> <li>• 32568..65535 = Vendor Reserved</li> </ul>

**ElementName** A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.

**NOTE:** The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.

**EnabledDefault** An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.

Possible values are:

- 2 = Enabled
- 3 = Disabled
- 5 = Not Applicable
- 6 = Enabled but Offline

Property	Description
	<ul style="list-style-type: none"> <li>· 7 = No Default</li> <li>· 9 = Quiesce</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>· 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>· 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>· 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>· 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>· 7 = In Test — Indicates that the element is in a test state.</li> <li>· 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>· 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>· 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>· 11..32767 = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>· 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>· 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>· 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>· 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>· 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>· 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>· .. = DMTF Reserved</li> </ul>
<b>IdentifyingDescriptions</b>	<p>An array of free-form strings providing explanations and details behind the entries in the OtherIdentifyingInfo array. Note, each entry of this array is related to the entry in OtherIdentifyingInfo that is located at the same index.</p>
<b>Name</b>	<p>The inherited Name serves as the key of a system instance in an enterprise environment.</p>

Property	Description
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Degraded</li> <li>• 4 = Stressed - Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>• 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>• 6 = Error</li> <li>• 7 = Non-Recoverable Error</li> <li>• 8 = Starting</li> <li>• 9 = Stopping</li> <li>• 10 = Stopped — Implies a clean and orderly stop.</li> <li>• 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>• 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>• 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>• 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>• 15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>• 16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>• 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>• 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul> <p>OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.</p>
<b>OtherIdentifyingInfo</b>	<p>Captures additional data, beyond System Name information, that could be used to identify a ComputerSystem. One example would be to hold the Fibre Channel World-Wide Name (WWN) of a node.</p> <p><b>NOTE:</b> If only the Fibre Channel name is available and is unique (able to be used as the System key), then this property would be NULL and the WWN would become the System key, its data placed in the Name property.</p>
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p>

Property	Description
<b>RequestedState</b>	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>• 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>• 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>• 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>• .. = DMTF Reserved</li> <li>• 0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 5 = No Change</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Deferred</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>• 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>• 12 = Not Applicable</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>. <b>Offline (6)</b> indicates that the element has been requested to transition to the <b>Enabled but Offline EnabledState</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 Not Applicable</b>.</p>
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions</li> </ul> <p>A value other than <b>5</b> or <b>12</b> identifies the state to which the element is in the process of transitioning.</p>
<b>RequestStateChange (Method)</b>	<p>Requests that the state of the element be changed to the value specified in the RequestedState parameter. When the requested state change takes place, the EnabledState and RequestedState of the element will be the same. Invoking the RequestStateChange method multiple times could result in earlier requests being overwritten or lost.</p> <p>A return code of 0 shall indicate the state change was successfully initiated.</p> <p>A return code of 3 shall indicate that the state transition cannot complete within the interval specified by the TimeoutPeriod parameter.</p> <p>A return code of 4096 (0x1000) shall indicate the state change was successfully initiated, a ConcreteJob has been created, and its reference returned in the output parameter Job. Any other return code indicates an error condition.</p>

## DCIM\_RecordLog

Table 48. RecordLog

Property	Description
<b>ElementName</b>	<p>ElementName A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>5 = Not Applicable</li> <li>6 = Enabled but Offline</li> <li>7 = No Default</li> <li>9 = Quiesce</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>

Property	Description
<b>EnabledState</b>	<p>An integer enumeration that indicates the enabled and disabled states of an element. It can also indicate the transitions between these requested states. For example, shutting down (value = <b>4</b>) and starting (value = <b>10</b>) are transient states between enabled and disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>HealthState</b>	<p>Indicates the current health of the element. This attribute expresses the health of this element but not necessarily that of its subcomponents.</p> <p>DMTF has reserved the unused portion of the continuum for additional HealthStates in the future.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown — The implementation cannot report on HealthState at this time.</li> <li>• 5 = OK — The element is fully functional and is operating within normal operational parameters and without error.</li> <li>• 10 = Degraded/Warning — The element is in working order and all functionality is provided. However, the element is not working to the best of its abilities. For example, the element may not be operating at optimal performance or it may be reporting recoverable errors.</li> <li>• 15 = Minor failure — All functionality is available but some may be degraded.</li> <li>• 20 = Major failure — The element is failing. It is possible that some or all of the functionality of this component is degraded or not working.</li> <li>• 25 = Critical failure — The element is non-functional and recovery may not be possible.</li> <li>• 30 = Non-recoverable error — The element has completely failed, and recovery is not possible. All functionality provided by this element has been lost.</li> <li>• .. = DMTF Reserved</li> </ul>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world)</p>

Property	Description
<b>LogState</b>	<p>elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p> <p>LogState is an integer enumeration that indicates the current state of a log represented by CIM_Log subclasses. LogState is to be used in conjunction with the EnabledState property to fully describe the current state of the log.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the state of the log is unknown.</li> <li>· 2 = Normal — Indicates that the log is or could be executing logging commands, will process any queued log entries, and will queue new logging requests.</li> <li>· 3 = Erasing — Indicates that the log is being erased.</li> <li>· 4 = Not Applicable — Indicates the log does not support representing a log state.</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>MaxNumberOfRecords</b>	<p>Maximum number of records that can be captured in the Log. If undefined, a value of zero should be specified.</p>
<b>OperationalStatus</b>	<p>Indicates the current statuses of the element. Various operational statuses are defined. Many of the enumeration's values are self-explanatory.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = OK</li> <li>· 3 = Degraded</li> <li>· 4 = Stressed — Indicates that the element is functioning, but needs attention. Examples of <b>Stressed</b> states are overload, overheated, and so on.</li> <li>· 5 = Predictive Failure — Indicates that an element is functioning nominally but predicting a failure in the near future.</li> <li>· 6 = Error</li> <li>· 7 = Non-Recoverable Error</li> <li>· 8 = Starting</li> <li>· 9 = Stopping</li> <li>· 10 = Stopped — Implies a clean and orderly stop</li> <li>· 11 = In Service — Describes an element being configured, maintained, cleaned, or otherwise administered.</li> <li>· 12 = No Contact — Indicates that the monitoring system has knowledge of this element, but has never been able to establish communications with it.</li> <li>· 13 = Lost Communication — Indicates that the ManagedSystem Element is known to exist and has been contacted successfully in the past, but is currently unreachable.</li> <li>· 14 = Aborted — Implies an abrupt stop where the state and configuration of the element may need to be updated.</li> <li>· 15 = Dormant — Indicates that the element is inactive or quiesced.</li> <li>· 16 = Supporting Entity in Error — Indicates that this element may be <b>OK</b> but that another element, on which it is dependent, is in error. An example is a network service or endpoint that cannot function due to lower-layer networking problems.</li> <li>· 17 = Completed — Indicates that the element has completed its operation. This value should be combined with either OK, Error, or Degraded so that a client can tell if the complete operation Completed with OK (passed), Completed with Error (failed), or Completed with Degraded (the operation finished, but it did not complete OK or did not report an error).</li> <li>· 18 = Power Mode — Indicates that the element has additional power model information contained in the Associated PowerManagementService association.</li> <li>· .. = DMTF Reserved</li> </ul>

Property	Description
<b>OperationalStatus</b>	<ul style="list-style-type: none"> <li>· 0x8000.. = Vendor Reserved</li> </ul> <p>OperationalStatus replaces the Status property on ManagedSystemElement to provide a consistent approach to enumerations, to address implementation needs for an array property, and to provide a migration path from today's environment to the future. This change was not made earlier because it required the deprecated qualifier. Due to the widespread use of the existing Status property in management applications, it is strongly recommended that providers or instrumentation provide both the Status and OperationalStatus properties. Further, the first value of OperationalStatus should contain the primary status for the element. When instrumented, Status (because it is single-valued) should also provide the primary status of the element.</p>
<b>OverwritePolicy</b>	<p>OverwritePolicy is an integer enumeration that indicates whether the log, represented by the CIM_Log subclasses, can overwrite its entries.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the log's overwrite policy is unknown.</li> <li>· 2 = Wraps When Full — Indicates that the log overwrites its entries with new entries when the log has reached its maximum capacity.</li> <li>· 7 = Never Overwrites — Indicates that the log never overwrites its entries by the new entries</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>PrimaryStatus</b>	<p>Provides a high level status value, intended to align with Red-Yellow-Green type representation of status. It should be used in conjunction with DetailedStatus to provide high level and detailed health status of the ManagedElement and its subcomponents.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the implementation is in general capable of returning this property, but is unable to do so at this time.</li> <li>· 1 = OK — Indicates the ManagedElement is functioning normally.</li> <li>· 2 = Degraded — Indicates the ManagedElement is functioning below normal.</li> <li>· 3 = Error — Indicates the ManagedElement is in an Error condition.</li> <li>· .. = DMTF Reserved</li> <li>· 0x8000.. = Vendor Reserved</li> </ul>
<b>RequestedState</b>	<p>An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown — Indicates the last requested state for the element is unknown.</li> <li>· 2 = Enabled</li> <li>· 3 = Disabled</li> <li>· 4 = Shut Down</li> <li>· 5 = No Change</li> <li>· 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.</li> <li>· 7 = Test</li> <li>· 8 = Deferred</li> <li>· 9 = Quiesce</li> <li>· 10 = Reboot — Refers to doing a <b>Shut Down</b> and then moving to an <b>Enabled</b> state.</li> <li>· 11 = Reset — Indicates that the element is first <b>Disabled</b> and then <b>Enabled</b>.</li> <li>· 12 = Not Applicable</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
	<p>The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to 5 (<b>Not Applicable</b>), then this property has no meaning. Refer to the</p>

Property	Description
	<p>EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, <b>RequestedState</b> should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>. Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value 12 <b>Not Applicable</b>.</p>

### TransitioningToState

Indicates the target state to which the instance is transitioning.

- 0 = Unknown
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change — indicates that no transition is in progress.
- 6 = Offline
- 7 = Test
- 8 = Defer
- 9 = Quiesce
- 10 = Reboot
- 11 = Reset
- 12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.

A value other than **5** or **12** identifies the state to which the element is in the process of transitioning.

## DCIM\_OperatingSystem

Table 49. OperatingSystem

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>CSCreationClassName</b>	The scoping ComputerSystem's CreationClassName.
<b>CSName</b>	The scoping ComputerSystem's Name.
<b>EnabledDefault</b>	<p>An enumerated value indicating an administrator's default or startup configuration for the Enabled State of an element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 1 = Other</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 2 = Enabled — Indicates that the element is or could be executing commands, will process any queued commands, and queues new requests.</li> <li>• 3 = Disabled — Indicates that the element will not execute commands and will drop any new requests.</li> <li>• 4 = Shutting Down — Indicates that the element is in the process of going to a Disabled state.</li> <li>• 5 = Not Applicable — Indicates the element does not support being enabled or disabled.</li> <li>• 6 = Enabled but Offline — Indicates that the element may be completing commands, and will drop any new requests.</li> <li>• 7 = In Test — Indicates that the element is in a test state.</li> <li>• 8 = Deferred — Indicates that the element may be completing commands, but will queue any new requests.</li> <li>• 9 = Quiesce — Indicates that the element is enabled but in a restricted mode.</li> <li>• 10 = Starting — Indicates that the element is in the process of going to an Enabled state. New requests are queued.</li> <li>• 11..32767 = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul> <p>By default, the element is <b>Enabled (value = 2)</b>.</p>
<b>LastBootUpTime</b>	Time when the operating system was last booted.
<b>LocalDateTime</b>	Operating system's notion of the local date and time of day.
<b>Name</b>	The inherited Name serves as key of an operating system instance within a computer system.
<b>OSType</b>	<p>A integer indicating the type of operating system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = MACOS</li> <li>• 3 = ATTUNIX</li> <li>• 4 = DGUX</li> <li>• 5 = DECNT</li> <li>• 6 = Tru64 UNIX</li> <li>• 7 = OpenVMS</li> <li>• 8 = HPUX</li> <li>• 9 = AIX</li> <li>• 10 = MVS</li> <li>• 11 = OS400</li> <li>• 12 = OS/2</li> <li>• 13 = JavaVM</li> <li>• 14 = MSDOS</li> <li>• 15 = WIN3x</li> <li>• 16 = WIN95</li> <li>• 17 = WIN98</li> <li>• 18 = WINNT</li> <li>• 19 = WINCE</li> <li>• 20 = NCR3000</li> <li>• 21 = NetWare</li> <li>• 22 = OSF</li> <li>• 23 = DC/OS</li> <li>• 24 = Reliant UNIX</li> <li>• 25 = SCO UnixWare</li> <li>• 26 = SCO OpenServer</li> </ul>

**Property****Description**

- 
- 27 = Sequent
  - 28 = IRIX
  - 29 = Solaris
  - 30 = SunOS
  - 31 = U6000
  - 32 = ASERIES
  - 33 = HP NonStop OS
  - 34 = HP NonStop OSS
  - 35 = BS2000
  - 36 = LINUX
  - 37 = Lynx
  - 38 = XENIX
  - 39 = VM
  - 40 = Interactive UNIX
  - 41 = BSDUNIX
  - 42 = FreeBSD
  - 43 = NetBSD
  - 44 = GNU Hurd
  - 45 = OS9
  - 46 = MACH Kernel
  - 47 = Inferno
  - 48 = QNX
  - 49 = EPOC
  - 50 = IxWorks
  - 51 = VxWorks
  - 52 = MiNT
  - 53 = BeOS
  - 54 = HP MPE
  - 55 = NextStep
  - 56 = PalmPilot
  - 57 = Rhapsody
  - 58 = Windows 2000
  - 59 = Dedicated
  - 60 = OS/390
  - 61 = VSE
  - 62 = TPF
  - 63 = Windows (R) Me
  - 64 = Caldera Open UNIX
  - 65 = OpenBSD
  - 66 = Not Applicable
  - 67 = Windows XP
  - 68 = z/OS
  - 69 = Microsoft Windows Server 2003
  - 70 = Microsoft Windows Server 2003 64-Bit
  - 71 = Windows XP 64-Bit
  - 72 = Windows XP Embedded
  - 73 = Windows Vista
  - 74 = Windows Vista 64-Bit
  - 75 = Windows Embedded for Point of Service
  - 76 = Microsoft Windows Server 2008
  - 77 = Microsoft Windows Server 2008 64-Bit
  - 78 = FreeBSD 64-Bit
  - 79 = RedHat Enterprise Linux
  - 80 = RedHat Enterprise Linux 64-Bit

Property	Description
	<ul style="list-style-type: none"> <li>• 81 = Solaris 64-Bit</li> <li>• 82 = SUSE</li> <li>• 83 = SUSE 64-Bit</li> <li>• 84 = SLES</li> <li>• 85 = SLES 64-Bit</li> <li>• 86 = Novell OES</li> <li>• 87 = Novell Linux Desktop</li> <li>• 88 = Sun Java Desktop System</li> <li>• 89 = Mandriva</li> <li>• 90 = Mandriva 64-Bit</li> <li>• 91 = TurboLinux</li> <li>• 92 = TurboLinux 64-Bit</li> <li>• 93 = Ubuntu</li> <li>• 94 = Ubuntu 64-Bit</li> <li>• 95 = Debian</li> <li>• 96 = Debian 64-Bit</li> <li>• 97 = Linux 2.4.x</li> <li>• 98 = Linux 2.4.x 64-Bit</li> <li>• 99 = Linux 2.6.x</li> <li>• 100 = Linux 2.6.x 64-Bit</li> <li>• 101 = Linux 64-Bit</li> <li>• 102 = Other 64-Bit</li> <li>• 103 = Microsoft Windows Server 2008 R2</li> <li>• 104 = VMware ESXi</li> <li>• 105 = Microsoft Windows 7</li> <li>• 106 = CentOS 32-bit</li> <li>• 107 = CentOS 64-bit</li> <li>• 108 = Oracle Enterprise Linux 32-bit</li> <li>• 109 = Oracle Enterprise Linux 64-bit</li> <li>• 110 = eComStation 32-bitx</li> <li>• 111 = Microsoft Windows Server 2011</li> <li>• 113 = Microsoft Windows Server 2012</li> <li>• 114 = Microsoft Windows 8</li> <li>• 115 = Microsoft Windows 8 64-bit</li> <li>• 116 = Microsoft Windows 8.1</li> <li>• 117 = Microsoft Windows 8.1 64-bit</li> <li>• 118 = Microsoft Windows 10</li> <li>• 119 = Microsoft Windows 10 64-bit</li> </ul>

### RequestedState

An integer enumeration that indicates the last requested or desired state for the element, irrespective of the mechanism through which it was requested.

Possible values are:

- 0 = Unknown — Indicates the last requested state for the element is unknown.
- 2 = Enabled
- 3 = Disabled
- 4 = Shut Down
- 5 = No Change
- 6 = Offline — Indicates that the element has been requested to transition to the Enabled but Offline EnabledState.
- 7 = Test
- 8 = Deferred
- 9 = Quiesce
- 10 = Reboot — Refers to doing a **Shut Down** and then moving to an **Enabled** state.
- 11 = Reset - Indicates that the element is first **Disabled** and then **Enabled**.

Property	Description
	<ul style="list-style-type: none"> <li>12 = Not Applicable</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul> <p>The actual state of the element is represented by EnabledState. This property is provided to compare the last requested and current enabled or disabled states. Note that when EnabledState is set to <b>5 (Not Applicable)</b>, then this property has no meaning. Refer to the EnabledState property description for explanations of the values in the RequestedState enumeration.</p> <p><b>NOTE:</b> The value <b>No Change (5)</b> has been deprecated instead of indicating the last requested state is <b>Unknown (0)</b>. If the last requested or desired state is unknown, RequestedState should have the value <b>Unknown (0)</b>, but may have the value <b>No Change (5)</b>.</p> <p>There are two new values in RequestedState that build on the statuses of EnabledState. These are <b>Reboot (10)</b> and <b>Reset (11)</b>.</p> <p>Shut Down requests an orderly transition to the Disabled state, and may involve removing power, to completely erase any existing state. The Disabled state requests an immediate disabling of the element, such that it will not execute or accept any commands or processing requests.</p> <p>This property is set as the result of a method invocation (such as Start or StopService on CIM_Service), or can be overridden and defined as WRITEable in a subclass. The method approach is considered superior to a WRITEable property, because it allows an explicit invocation of the operation and the return of a result code.</p> <p>If knowledge of the last RequestedState is not supported for the EnabledLogicalElement, the property is NULL or has the value <b>12 (Not Applicable)</b>.</p>
<b>TransitioningToState</b>	<p>Indicates the target state to which the instance is transitioning.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>4 = Shut Down</li> <li>5 = No Change — Indicates that no transition is in progress.</li> <li>6 = Offline</li> <li>7 = Test</li> <li>8 = Defer</li> <li>9 = Quiesce</li> <li>10 = Reboot</li> <li>11 = Reset</li> <li>12 = Not Applicable — Indicates the implementation does not support representing ongoing transitions.</li> </ul>
<b>Version</b>	<p>A string describing the Operating System's version number. The format of the version information is as follows: &lt;Major Number&gt;.&lt;Minor Number&gt;.&lt;Revision&gt; or &lt;Major Number&gt;.&lt;Minor Number&gt;.&lt;Revision Letter&gt;.</p>

## DCIM\_SoftwareIdentity

Table 50. OperatingSystem

Property	Description
<b>ClassificationDescriptions</b>	<p>An array of free-form strings providing more detailed explanations for any of the entries in the Classifications array. Note that each entry is related to one in the Classifications array located at the same index.</p>

Property	Description
<b>Classifications</b>	<p>An array of enumerated integers that classify this software. For example, the software MAY be instrumentation (value = 5) or firmware and diagnostic software (10 and 7). The use of value 6, Firmware/BIOS, is being deprecated. Instead, either the value 10 (Firmware) and/or 11 (BIOS/FCode) SHOULD be used. The value 13, Software Bundle, identifies a software package consisting of multiple discrete software instances that can be installed individually or together.</p> <p>Each contained software instance is represented by an instance of SoftwareIdentity that is associated to this instance of SoftwareIdentityinstance via a Component association.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Driver</li> <li>· 3 = Configuration Software</li> <li>· 4 = Application Software</li> <li>· 5 = Instrumentation</li> <li>· 6 = Firmware/BIOS</li> <li>· 7 = Diagnostic Software</li> <li>· 8 = Operating System</li> <li>· 9 = Middleware</li> <li>· 10 = Firmware</li> <li>· 11 = BIOS/FCode</li> <li>· 12 = Support/Service Pack</li> <li>· 13 = Software Bundle</li> <li>· .. = DMTF Reserved</li> <li>· 0x8000..0xFFFF = Vendor Reserved</li> </ul>
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <pre data-bbox="552 1473 759 1500">&lt;OrgID&gt; : &lt;LocalID&gt;</pre> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>IsEntity</b>	<p>The IsEntity property is used to indicate whether the SoftwareIdentity corresponds to a discrete copy of the software component or is being used to convey descriptive and identifying information about software that is not present in the management domain. A value of TRUE indicates that the SoftwareIdentity instance corresponds to a discrete copy</p>

Property	Description
	of the software component. A value of FALSE indicates that the SoftwareIdentity instance does not correspond to a discrete copy of the Software.
<b>Manufacturer</b>	Manufacturer of this software.
<b>ReleaseDate</b>	The date the software was released.
<b>RevisionNumber</b>	The revision or maintenance release component of the software's version information. For example, <b>3</b> from version 12.1(3)T. This property is defined as a numeric value to allow the determination of <b>newer</b> versus <b>older</b> releases. A <b>newer</b> revision is indicated by a larger numeric value.
<b>TargetTypes</b>	An array of strings that describes the compatible installer(s). The purpose of the array elements is to establish compatibility between a SoftwareIdentity and a SoftwareInstallationService that can install the SoftwareIdentity by comparing the values of the array elements of this property to the values of SoftwareInstallationServiceCapabilities.SupportedTargetTypes[] property's array elements.
<b>VersionString</b>	A string representing the complete software version information. For example, <b>12.1(3)T</b> . This string and the numeric major/minor/revision/build properties are complementary. Since vastly different representations and semantics exist for versions, it is not assumed that one representation is sufficient to permit a client to perform computations (i.e., the values are numeric) and a user to recognize the software's version (i.e., the values are understandable and readable). Hence, both numeric and string representations of version are provided.

## DCIM\_BIOSElement

Table 51. BIOSElement

Property	Description
<b>Manufacturer</b>	The name used to identify this SoftwareElement. Manufacturer of this SoftwareElement.
<b>Name</b>	The name used to identify this SoftwareElement.
<b>ReleaseDate</b>	Date that this BIOS was released.
<b>SoftwareElementID</b>	This is an identifier for the SoftwareElement and is designed to be used in conjunction with other keys to create a unique representation of the element.
<b>SoftwareElementState</b>	<p>The SoftwareElementState is defined in this model to identify various states of a SoftwareElement's life cycle.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Deployable — Describes the details necessary to successfully distribute it and the details (Checks and Actions) required to move it to the installable state (i.e., the next state).</li> <li>• 1 = Installable — Describes the details necessary to successfully install it and the details (Checks and Actions) required to create an element in the executable state (i.e., the next state).</li> <li>• 2 = Executable — Describes the details necessary to successfully start it and the details (Checks and Actions) required to move it to the running state (i.e., the next state).</li> <li>• 3 = Running — Describes the details necessary to manage the started element.</li> </ul>
<b>TargetOperatingSystem</b>	The TargetOperatingSystem property specifies the element's operating system environment. The value of this property does not ensure that it is binary executable. Two other pieces of information are needed. First, the version of the OS needs to be specified using the class, CIM_OSVersion Check. The second piece of information is the architecture that the OS runs on. This information is verified using CIM_ArchitectureCheck. The combination of these constructs clearly identifies the level of OS required for a particular SoftwareElement.


Property	Description
	Possible values are:
	<ul style="list-style-type: none"> <li data-bbox="542 280 1503 302">· 0 = Unknown</li> <li data-bbox="542 302 1503 324">· 1 = Other</li> <li data-bbox="542 324 1503 347">· 2 = MACOS</li> <li data-bbox="542 347 1503 369">· 3 = ATTUNIX</li> <li data-bbox="542 369 1503 392">· 4 = DGUX</li> <li data-bbox="542 392 1503 414">· 5 = DECNT</li> <li data-bbox="542 414 1503 436">· 6 = Tru64 UNIX</li> <li data-bbox="542 436 1503 459">· 7 = OpenVMS</li> <li data-bbox="542 459 1503 481">· 8 = HPUX</li> <li data-bbox="542 481 1503 504">· 9 = AIX</li> <li data-bbox="542 504 1503 526">· 10 = MVS</li> <li data-bbox="542 526 1503 548">· 11 = OS400</li> <li data-bbox="542 548 1503 571">· 12 = OS/2</li> <li data-bbox="542 571 1503 593">· 13 = JavaVM</li> <li data-bbox="542 593 1503 616">· 14 = MSDOS</li> <li data-bbox="542 616 1503 638">· 15 = WIN3x</li> <li data-bbox="542 638 1503 660">· 16 = WIN95</li> <li data-bbox="542 660 1503 683">· 17 = WIN98</li> <li data-bbox="542 683 1503 705">· 18 = WINNT</li> <li data-bbox="542 705 1503 728">· 19 = WINCE</li> <li data-bbox="542 728 1503 750">· 20 = NCR3000</li> <li data-bbox="542 750 1503 772">· 21 = NetWare</li> <li data-bbox="542 772 1503 795">· 22 = OSF</li> <li data-bbox="542 795 1503 817">· 23 = DC/OS</li> <li data-bbox="542 817 1503 840">· 24 = Reliant UNIX</li> <li data-bbox="542 840 1503 862">· 25 = SCO UnixWare</li> <li data-bbox="542 862 1503 884">· 26 = SCO OpenServer</li> <li data-bbox="542 884 1503 907">· 27 = Sequent</li> <li data-bbox="542 907 1503 929">· 28 = IRIX</li> <li data-bbox="542 929 1503 952">· 29 = Solaris</li> <li data-bbox="542 952 1503 974">· 30 = SunOS</li> <li data-bbox="542 974 1503 996">· 31 = U6000</li> <li data-bbox="542 996 1503 1019">· 32 = ASERIES</li> <li data-bbox="542 1019 1503 1041">· 33 = HP NonStop OS</li> <li data-bbox="542 1041 1503 1064">· 34 = HP NonStop OSS</li> <li data-bbox="542 1064 1503 1086">· 35 = BS2000</li> <li data-bbox="542 1086 1503 1108">· 36 = LINUX</li> <li data-bbox="542 1108 1503 1131">· 37 = Lynx</li> <li data-bbox="542 1131 1503 1153">· 38 = XENIX</li> <li data-bbox="542 1153 1503 1176">· 39 = VM</li> <li data-bbox="542 1176 1503 1198">· 40 = Interactive UNIX</li> <li data-bbox="542 1198 1503 1220">· 41 = BSDUNIX</li> <li data-bbox="542 1220 1503 1243">· 42 = FreeBSD</li> <li data-bbox="542 1243 1503 1265">· 43 = NetBSD</li> <li data-bbox="542 1265 1503 1288">· 44 = GNU Hurd</li> <li data-bbox="542 1288 1503 1310">· 45 = OS9</li> <li data-bbox="542 1310 1503 1332">· 46 = MACH Kernel</li> <li data-bbox="542 1332 1503 1355">· 47 = Inferno</li> <li data-bbox="542 1355 1503 1377">· 48 = QNX</li> <li data-bbox="542 1377 1503 1400">· 49 = EPOC</li> <li data-bbox="542 1400 1503 1422">· 50 = IxWorks</li> <li data-bbox="542 1422 1503 1444">· 51 = VxWorks</li> <li data-bbox="542 1444 1503 1467">· 52 = MiNT</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>• 53 = BeOS</li> <li>• 54 = HP MPE</li> <li>• 55 = NextStep</li> <li>• 56 = PalmPilot</li> <li>• 57 = Rhapsody</li> <li>• 58 = Windows 2000</li> <li>• 59 = Dedicated</li> <li>• 60 = OS/390</li> <li>• 61 = VSE</li> <li>• 62 = TPF</li> <li>• 63 = Windows (R) Me</li> <li>• 64 = Caldera Open UNIX</li> <li>• 65 = OpenBSD</li> <li>• 66 = Not Applicable</li> <li>• 67 = Windows XP</li> <li>• 68 = z/OS</li> <li>• 69 = Microsoft Windows Server 2003</li> <li>• 70 = Microsoft Windows Server 2003 64-Bit</li> <li>• 71 = Windows XP 64-Bit</li> <li>• 72 = Windows XP Embedded</li> <li>• 73 = Windows Vista</li> <li>• 74 = Windows Vista 64-Bit</li> <li>• 75 = Windows Embedded for Point of Service</li> <li>• 76 = Microsoft Windows Server 2008</li> <li>• 77 = Microsoft Windows Server 2008 64-Bit</li> </ul>
<b>Version</b>	Displays the version of the BIOS.

## DCIM\_ConcreteJob


Table 52. ConcreteJob

Property	Description
<b>Description</b>	Provides a textual description of the object.
<b>ErrorCode</b>	A vendor-specific error code. The value must be set to zero if the Job completed without error. Note that this property is also present in the JobProcessingStatistics class. This class is necessary to capture the processing information for recurring Jobs, because only the 'last' run error can be stored in this single-valued property.
<b>ErrorDescription</b>	A free-form string that contains the vendor error description. Note that this property is also present in the JobProcessingStatistics class. This class is necessary to capture the processing information for recurring Jobs, because only the <b>last</b> run error can be stored in this single-valued property.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <pre>&lt;OrgID&gt; : &lt;LocalID&gt;</pre> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon</p>

Property	Description
	to appear in InstanceID must appear between <OrgID> and <LocalID> . <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.
<b>JobRunTimes</b>	The number of times that the Job should be run. A value of 1 indicates that the Job is not recurring, while any non-zero value indicates a limit to the number of times that the Job will recur. Zero indicates that there is no limit to the number of times that the Job can be processed, but that it is terminated either after the UntilTime or by manual intervention. By default, a Job is processed once.
<b>JobStatus</b>	A free-form string that represents the status of the job. The primary status is reflected in the inherited OperationalStatus property. JobStatus provides additional, implementation-specific details.
<b>Name</b>	The user-friendly name for this instance of a Job. In addition, the user-friendly name can be used as a property for a search or query.   <b>NOTE: Name does not have to be unique within a namespace.</b>
<b>Priority</b>	Indicates the urgency or importance of execution of the Job. The lower the number, the higher the priority. Note that this property is also present in the JobProcessingStatistics class. This class is necessary to capture the setting information that would influence the results of a job.
<b>TimeBeforeRemoval</b>	The amount of time that the Job is retained after it has finished executing, either succeeding or failing in that execution. The job must remain in existence for some period of time regardless of the value of the DeleteOnCompletion property. The default is five minutes.

## DCIM\_BootSourceSetting


Table 53. ConcreteJob

Property	Description
<b>BIOSBootString</b>	A string identifying the boot source which corresponds to the string used by the BIOS to uniquely name the boot source. For example, in systems which implement the BIOS Boot Specification, the string could correspond to the descString string for entries in the IPL Table or BCV Table.
<b>ElementName</b>	The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.   <b>NOTE: The name does not have to be unique within a namespace.</b>
<b>FailThroughSupported</b>	An enumeration indicating the behavior when the attempt to boot using the boot source fails (no media, timeout).  Possible values are: <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Is Supported — Indicates that next boot source the boot order is used.</li> <li>· 2 = Not Supported — Indicates that the boot order is terminated and no other boot sources associated to the same CIM_BootConfigSetting are used).</li> </ul> The default value is <b>1</b> (is supported).
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value

Property	Description
	<p>of InstanceID should be constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt; : &lt;LocalID&gt; Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>StructuredBootString</b>	<p>A string identifying the boot source using the format <b>&lt;OrgID&gt;:&lt;identifier&gt;:&lt;index&gt;</b>, in which neither &lt;OrgID&gt;, &lt;identifier&gt; or &lt;index&gt; contains a colon (:). The value of &lt;OrgID&gt; is a copyrighted, trademarked or otherwise unique name that is owned by the entity defining the &lt;identifier&gt;, or is a registered ID that is assigned to the entity by a recognized global authority. For DMTF defined identifiers, the &lt;OrgID&gt; is set to <b>CIM</b>.</p> <p>The &lt;identifiers&gt; are:</p> <ul style="list-style-type: none"> <li>· <b>Floppy</b></li> <li>· <b>Hard-Disk</b></li> <li>· <b>CD/DVD</b></li> <li>· <b>Network</b></li> <li>· <b>PCMCIA</b></li> <li>· <b>USB</b></li> </ul> <p>The value of &lt;index&gt; is a non-zero integer.</p>

## DCIM\_BootConfigSetting


Table 54. BootConfigSetting

Property	Description
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt; : &lt;LocalID&gt; Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>ChangeBootOrder (Method)</b>	<p>This method is called to change the boot order within a boot configuration. An ordered array of BootSourceSetting instances is passed to this method. Each BootSourceSetting instance MUST already be associated with this BootConfigSetting instance via an instance</p>

Property	Description
	of OrderedComponent. If not, the implementation MUST return a value of <b>Invalid Parameter</b> . Upon execution of this method, the value of the AssignedSequence property on each instance of OrderedComponent will be updated such that the values are monotonically increasing in correlation with the position of the referenced BootSourceSetting instance in the source input parameter. That is, the first position in the array will have the lowest value for AssignedSequence. The second position will have the second lowest value, and so on. For BootSourceSetting instances which are associated with the BootConfigSetting instance via OrderedComponent and not present in the input array, the AssignedSequence property on the OrderedComponent association will be assigned a value of <b>0</b> .


## DCIM\_IPAssignmentSettingData

Table 55. IPAssignmentSettingData

Property	Description
<b>AddressOrigin</b>	<p>AddressOrigin identifies the method by which the IP Address, Subnet Mask, and Gateway were assigned to the IPProtocolEndpoint.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Not Applicable — Indicates that the application of the IPAssignmentSettingData instance does not affect these properties.</li> <li>· 3 = Static — Indicates that values for the properties are contained in the IPAssignmentSettingData instance.</li> <li>· 4 = DHCP — Indicates that the values will be assigned via DHCP.</li> <li>· 5 = BOOTP — Indicates that the values will be assigned via BOOTP.</li> <li>· 6..32767 = DMTF Reserved</li> <li>· 32768.. = Vendor Reserved</li> </ul>
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>

# DCIM\_PowerAllocationSettingData

Table 56. PowerAllocationSettingData

Property	Description
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE:</b> The name does not have to be unique within a namespace.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>Limit</b>	<p>This property specifies the upper bound, or maximum amount of resource that is granted for this allocation. For example, a system which supports memory paging may support setting the Limit of a Memory allocation below that of the VirtualQuantity, thus forcing paging to occur for this allocation.</p>
<b>PowerAllocationSettingPurpose</b>	<p>When power is consumed by or allocated to a ManagedSystemElement, there may be well-known or meaningful levels of allocation or consumption for the ManagedSystemElement. The PowerAllocationSettingPurpose property may be used to identify the well known level or provide context for the interpretation of the other values of the PowerAllocationSettingData instance. A value of <b>MaxConAuxiliary</b> indicates that the instance provides information about the maximum power allocated or consumed by the ManagedSystemElement as currently configured, while the ManagedSystemElement is turned off and drawing auxiliary power. Note that an alternate name for <b>auxiliary power</b> is <b>trickle power</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 1 = Other</li><li>• 2 = MaxConAuxiliary</li><li>• 3 = MinWhenOn — Indicates the instance provides information about the minimum value for power consumption for which a configuration of the ManagedSystemElement exists such that when it is powered on and operating in that configuration, the power consumption of the ManagedSystemElement is guaranteed not to exceed the specified amount.</li><li>• 4 = MaxAsConfigured — Indicates that the instance provides information about the maximum power that may be allocated to or consumed by the ManagedSystemElement as currently configured while powered on. The actual power consumed may be less.</li><li>• 5 = MaxIfAllHotPlug — Indicates that the instance provides information about the maximum power allocated or consumed by the ManagedSystemElement if all components that could be added to the ManagedSystemElement without requiring a power cycle of the ManagedSystemElement were added to the ManagedSystemElement.</li><li>• 6 = MaxIfAllColdPlug — Indicates that the instance provides information about the maximum power allocated or consumed by the ManagedSystemElement if all components that could be added to the ManagedSystemElement, including those that</li></ul>

Property	Description
	<p>require a power cycle of the ManagedSystemElement, were added to the ManagedSystemElement.</p> <ul style="list-style-type: none"> <li>• 7 = Allocated — Indicates that the instance provides information about the current power allocated to the ManagedSystemElement.</li> <li>• 8 = MinWithoutDegradation — Indicates that the instance provides information about the minimum power allocated or consumed by the ManagedSystemElement without causing performance degradation.</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>ResourceType</b>	<p>The type of resource this allocation setting represents.</p>
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = Computer System</li> <li>• 3 = Processor</li> <li>• 4 = Memory</li> <li>• 5 = IDE Controller</li> <li>• 6 = Parallel SCSI HBA</li> <li>• 7 = FC HBA</li> <li>• 8 = iSCSI HBA</li> <li>• 9 = IB HCA</li> <li>• 10 = Ethernet Adapter</li> <li>• 11 = Other Network Adapter</li> <li>• 12 = I/O Slot</li> <li>• 13 = I/O Device</li> <li>• 14 = Floppy Drive</li> <li>• 15 = CD Drive</li> <li>• 16 = DVD drive</li> <li>• 17 = Disk Drive</li> <li>• 18 = Tape Drive</li> <li>• 19 = Storage Extent</li> <li>• 20 = Other storage device</li> <li>• 21 = Serial port</li> <li>• 22 = Parallel port</li> <li>• 23 = USB Controller</li> <li>• 24 = Graphics controller</li> <li>• 25 = IEEE 1394 Controller</li> <li>• 26 = Partitionable Unit</li> <li>• 27 = Base Partitionable Unit</li> <li>• 28 = Power</li> <li>• 29 = Cooling Capacity</li> <li>• 30 = Ethernet Switch Port</li> <li>• 31 = Logical Disk</li> <li>• 32 = Storage Volume</li> <li>• 33 = Ethernet Connection</li> <li>• .. = DMTF reserved</li> <li>• 0x8000..0xFFFF = Vendor Reserved</li> </ul>


# DCIM\_AssetAcquisition

Table 57. AssetAcquisition

Property	Description
<b>CostCenter</b>	Identifying information for the accounting unit within the purchasing company that authorized the purchase.
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p><b>NOTE:</b> The name does not have to be unique within a namespace.</p>
<b>InstallationDate</b>	Date the system was put into service by the purchasing company.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; .&lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>PurchaseCost</b>	<p>The Purchase Cost field accepts whole numbers only. Entering commas, decimal points, or dollar signs results in an error message. Value expressed in currency unit that was paid for the system, for example, 25000.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>0..32767 = DMTF Reserved</li><li>32768..65535 = Vendor Reserved</li></ul>
<b>PurchaseDate</b>	Date the transaction for acquiring the system was completed.
<b>ReferenceToDeliverySlip</b>	<p>Identifying information for the waybill or delivery slip, such as a waybill number.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>0..32767 = DMTF Reserved</li><li>32768..65535 = Vendor Reserved</li></ul>
<b>ReferenceToPONumber</b>	<p>Number of the purchase order that authorized buying the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>0..32767 = DMTF Reserved</li><li>32768..65535 = Vendor Reserved</li></ul>


# DCIM\_AssetExtendedWarrantyInformation

Table 58. AssetExtendedWarrantyInformation

Property	Description
<b>Cost</b>	<p>Displays the total cost of the warranty service on a system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0..32767 = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>EndDate</b>	<p>Displays the date that extended warranty service ends.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>ProviderName</b>	<p>Displays the name of the business that is providing warranty service to the system owner.</p>
<b>StartDate</b>	<p>Displays the date that extended warranty service begins. This date usually follows the standard warranty service.</p>

# DCIM\_AssetOwnerInformation


Table 59. AssetOwnerInformation

Property	Description
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the</p>

Property	Description
	<Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID> . <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.
<b>InsuranceCompany</b>	The company that insures the system against theft or other loss.
<b>OwnerName</b>	The individual or business entity that holds legal title to the system.
<b>Type</b>	The individual or business entity that holds legal title to the system. Type Whether the system is owned, rented, leased, managed by transfer, or off-lease.  Possible values are: <ul style="list-style-type: none"> <li>· 0 = Owned</li> <li>· 1 = Leased</li> <li>· 3 = Rented</li> <li>· 4 = Off Lease</li> <li>· 5..32767 = Transfer</li> <li>· 32768..65535 = DMTF Reserved</li> </ul>
<b>SetAssetOwnerInformation (Method)</b>	This method allows the user to change the Insurance Company and Owner Name of the system.

## DCIM\_AssetSupportInformation



Table 60. AssetSupportInformation

Property	Description
<b>AutomaticFix</b>	Method used to fix the problem.
<b>ElementName</b>	The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.   <b>NOTE: The name does not have to be unique within a namespace.</b>
<b>HelpDesk</b>	Name of the help desk that provides technical support for your system;information provided by the help desk.
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:  <OrgID>:<LocalID>  Where <OrgID> and <LocalID> are separated by a colon (:), and where <OrgID> must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID>. <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID> set to CIM.

Property	Description
<b>Outsourced</b>	Indicates whether you have contracted with an outside business entity to provide technical support for your system.
<b>Type</b>	Indicates whether a support request is for a problem with your system's network connectivity or with a particular system component.  Possible values are: <ul style="list-style-type: none"> <li>· 0 = Network</li> <li>· 1 = Storage</li> <li>· 2..32767 = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>

## DCIM\_AssetWarrantyInformation


Table 61. AssetWarrantyInformation

Property	Description
<b>ElementName</b>	The customer-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.   <b>NOTE: The name does not have to be unique within a namespace.</b>
<b>Family</b>	Family that the product belongs to. A family refers to a set of products that are similar but not identical from a hardware or software point of view. Typically, a family is composed of different products, which have different configurations and pricing points. Products in the same family often have similar branding and cosmetic features.
<b>IdentifyingNumber</b>	Service Tag of the chassis
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:  <OrgID> : <LocalID>  Where <OrgID> and <LocalID> are separated by a colon (:), and where <OrgID> must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID>. <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID> set to CIM.
<b>LastRefreshStatus</b>	Indicates the last refresh status of Warranty information on device-  Possible values are: <ul style="list-style-type: none"> <li>· 0 = Success</li> <li>· 1 = Failure</li> </ul>  <b>NOTE: Failure can be due to Incorrect proxy settings, Internal Server Error, etc</b>
<b>LastRefreshed</b>	Last timestamp when warranty information was attempted to refresh on the system.
<b>Name</b>	Service Level Description of the warranty entitlement.
<b>WarrantyDuration</b>	If this Product is under warranty, the duration of the warranty in days.

Property	Description
<b>WarrantyEndDate</b>	If this Product is under warranty, the end date of the warranty.
<b>WarrantyStartDate</b>	If this Product is under warranty, the start date of the warranty.

## DCIM\_AssetSystemInformation

Table 62. AssetSystemInformation

Property	Description
<b>ChassisAssetTag</b>	Chassis Asset Tag of the system.
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt;structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>PrimaryUserName</b>	Text that provides the name for the person responsible for managing the system.
<b>PrimaryUserPhone</b>	Telephone number for the person responsible for managing the system.
<b>SystemLocation</b>	Alphanumeric text that specifies where the system is, such as building and room.
<b>SystemName</b>	Alphanumeric text that uniquely identifies the system.

## DCIM\_AMTSettings

Table 63. AMTSettings

Property	Description
<b>AMTSupported</b>	Defines if Intel AMT is supported.
<b>Description</b>	Provides a textual description of the object.
<b>IDEREnabled</b>	Defines if IDE redirection is enabled.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p>

Property	Description
	Where <OrgID> and <LocalID> are separated by a colon (:), and where <OrgID> must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID>. <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID> set to CIM.
<b>SOLEnabled</b>	Defines if Serial Over LAN capability is enabled.

## DCIM\_ASFSettings


Table 64. ASFSettings

Property	Description
<b>ASFEEnabled</b>	Defines if Intel ASF is enabled.
<b>Description</b>	Provides a textual description of the object.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt;:&lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>StructureVersion</b>	Defines the version of the Intel ASF structure.

## DCIM\_VProSettings

Table 65. VProSettings

Property	Description
<b>BIOSSupportedMaximumVAVersion</b>	Defines the maximum VA version supported by the BIOS. A value of 0 means the the highest version supported by BIOS is VA 2.6. A value of 1 means the the highest version supported by BIOS is VA 3.0.
<b>Description</b>	Provides a textual description of the object.
<b>ElementName</b>	The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.


Property	Description
	 <b>NOTE: The name does not have to be unique within a namespace.</b>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>LTTXTEnabledState</b>	<p>Defines CPU LT/TXT enabled state for vPro brand.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SMXState</b>	<p>Defines CPU SMX state for vPro brand.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SPIFlashhasPlatformDataRegionReserved</b>	<p>Defines if SPI flash has a platform data region reserved.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>SupportedBIOSsetup</b>	<p>SupportedBIOSsetup defines if BIOS setup properties are supported.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = SupportsMEinBIOSSetup — Defines if ME is supported in BIOS setup.</li> <li>• 3 = SupportsTPMinBIOSSetup — Defines if TPM is supported in BIOS setup.</li> <li>• 4 = SupportsTXTinBIOSSetup — Defines if TXT is supported in BIOS setup.</li> <li>• 5 = SupportsVAExtensions — Defines if VA extensions are supported by the BIOS.</li> <li>• 6 = SupportsVTdinBIOSSetup — Defines if VT-d is supported in BIOS setup.</li> <li>• 7 = SupportsVTxinBIOSSetup — Defines if VT-x is supported in BIOS setup</li> <li>• .. = DMTF Reserved</li> <li>• 32768..65535 = Vendor Reserved</li> </ul>
<b>TXTStateInMCHState</b>	<p>Defines TXT state in MCH for vPro brand.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>VMXState</b>	<p>Defines CPU VMX state for vPro brand.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>VProCharacteristics</b>	<p>VProCharacteristics defines if VPro setup properties are supported.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = CPUSupportsVTx — CPUSupportsVTx:Defines if the CPU supports VT-x for vPro brand.</li> <li>3 = MCHSupportForVTd — MCHSupportForVTd:Defines if the MCH supports TXT for vPro brand.</li> <li>4 = LTTXTCapability — LTTXTCapability:Defines CPU LT/TXT capability for vPro brand.</li> <li>5 = SupportsTPMOnBoard — SupportsTPMOnBoard:Defines if an on board TPM is supported for vPro brand.</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>VTdState</b>	<p>Defines VT-d state for vPro brand.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>
<b>VTxEnabledState</b>	<p>Defines CPU VT-x state for vPro brand.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>2 = Enabled</li> <li>3 = Disabled</li> <li>.. = DMTF Reserved</li> <li>32768..65535 = Vendor Reserved</li> </ul>

## DCIM\_AlertIndicationSettingData

Table 66. AlertIndicationSettingData

Property	Description
<b>AlertCategory</b>	<p>The identifying information of the entity (instance) for which this Indication is generated. The property contains the path of an instance, encoded as a string parameter — if the instance is modeled in the CIM Schema. If not a CIM instance, the property contains some identifying string that names the entity for which the Alert is generated. The path or identifying string is formatted per the AlertingElementFormat property.</p>
<b>AlertType</b>	<p>Primary classification of the Indication.</p> <p>Possible values are:</p>

Property	Description
	<ul style="list-style-type: none"> <li>1 = Other — The Indication's OtherAlertType property conveys its classification. Use of <b>Other</b> in an enumeration is a standard CIM convention. It means that the current Indication does not fit into the categories described by this enumeration.</li> <li>2 = Communications Alert — An Indication of this type is principally associated with the procedures and/or processes required to convey information from one point to another.</li> <li>3 = Quality of Service Alert — An Indication of this type is principally associated with a degradation or errors in the performance or function of an entity.</li> <li>4 = Processing Error — An Indication of this type is principally associated with a software or processing fault.</li> <li>5 = Device Alert — An Indication of this type is principally associated with an equipment or hardware fault.</li> <li>6 = Environmental Alert — An Indication of this type is principally associated with a condition relating to an enclosure in which the hardware resides, or other environmental considerations.</li> <li>7 = Model Change — The Indication addresses changes in the Information Model. For example, it may embed a Lifecycle Indication to convey the specific model change being alerted.</li> <li>8 = Security Alert — An Indication of this type is associated with security violations, detection of viruses, and similar issues.</li> </ul>
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>EventID</b>	The identification number for events of this type.
<b>IndicationIdentifier</b>	An identifier for the Alert indication. This property is similar to a key value in that it can be used for identification, when correlating Alert indications (see the Correlated indications array). Its value should be unique as long as Alert correlations are reported, but may be reused or left NULL if no future Alert indications will reference it in their Correlated indications array.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.LocalOnly.</p>
<b>LocalOnly</b>	This property shows if the events from this the event source should be reported to the local indication consumer only or should be reported to CIMOM as an indication. TRUE for reporting to local consumer only, and FALSE for reporting as an indication.
<b>MaxDisplayNotifications</b>	The maximum number of indications of this type that will be sent to the local display.
<b>MaxNTEventLogNotifications</b>	The maximum number of indications of this type that will be sent to the local display.
<b>Name</b>	The label by which the Configuration object is known.

Property	Description
<b>OtherAlertType</b>	A string describing the Alert type - used when the Alert type property is set to 1, <b>Other State Change</b> .
<b>PollEnabled</b>	This property shows if status-polling of the event source is enabled or not. TRUE for enable, and FALSE for disabled.
<b>PollingInterval</b>	The polling interval for event source, in seconds.
<b>ProbableCause</b>	<p>An enumerated value that describes the probable cause of the situation which resulted in the AlertIndication.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = Unknown</li> <li>· 1 = Other</li> <li>· 2 = Adapter/Card Error</li> <li>· 3 = Application Subsystem Failure</li> <li>· 4 = Bandwidth Reduced</li> <li>· 5 = Connection Establishment Error</li> <li>· 6 = Communications Protocol Error</li> <li>· 7 = Communications Subsystem Failure</li> <li>· 8 = Configuration/Customization Error</li> <li>· 9 = Congestion</li> <li>· 10 = Corrupt Data</li> <li>· 11 = CPU Cycles Limit Exceeded</li> <li>· 12 = Dataset/Modem Error</li> <li>· 13 = Degraded Signal</li> <li>· 14 = DTE-DCE Interface Error</li> <li>· 15 = Enclosure Door Open</li> <li>· 16 = Equipment Malfunction</li> <li>· 17 = Excessive Vibration</li> <li>· 18 = File Format Error</li> <li>· 19 = Fire Detected</li> <li>· 20 = Flood Detected</li> <li>· 21 = Framing Error</li> <li>· 22 = HVAC Problem</li> <li>· 23 = Humidity Unacceptable</li> <li>· 24 = I/O Device Error</li> <li>· 25 = Input Device Error</li> <li>· 26 = LAN Error</li> <li>· 27 = Non-Toxic Leak Detected</li> <li>· 28 = Local Node Transmission Error</li> <li>· 29 = Loss of Frame</li> <li>· 30 = Loss of Signal</li> <li>· 31 = Material Supply Exhausted</li> <li>· 32 = Multiplexer Problem</li> <li>· 33 = Out of Memory</li> <li>· 34 = Output Device Error</li> <li>· 35 = Performance Degraded</li> <li>· 36 = Power Problem</li> <li>· 37 = Pressure Unacceptable</li> <li>· 38 = Processor Problem (Internal Machine Error)</li> <li>· 39 = Pump Failure</li> <li>· 40 = Queue Size Exceeded</li> <li>· 41 = Receive Failure</li> <li>· 42 = Receiver Failure</li> <li>· 43 = Remote Node Transmission Error</li> </ul>


**Property****Description**

- 44 = Resource at or Nearing Capacity
- 45 = Response Time Excessive
- 46 = Retransmission Rate Excessive
- 47 = Software Error
- 48 = Software Program Abnormally Terminated
- 49 = Software Program Error (Incorrect Results)
- 50 = Storage Capacity Problem
- 51 = Temperature Unacceptable
- 52 = Threshold Crossed
- 53 = Timing Problem
- 54 = Toxic Leak Detected
- 55 = Transmit Failure
- 56 = Transmitter Failure
- 57 = Underlying Resource Unavailable
- 58 = Version MisMatch
- 59 = Previous Alert Cleared
- 60 = Login Attempts Failed
- 61 = Software Virus Detected
- 62 = Hardware Security Breached
- 63 = Denial of Service Detected
- 64 = Security Credential MisMatch
- 65 = Unauthorized Access
- 66 = Alarm Received
- 67 = Loss of Pointer
- 68 = Payload Mismatch
- 69 = Transmission Error
- 70 = Excessive Error Rate
- 71 = Trace Problem
- 72 = Element Unavailable
- 73 = Element Missing
- 74 = Loss of Multi Frame
- 75 = Broadcast Channel Failure
- 76 = Invalid Message Received
- 77 = Routing Failure
- 78 = Backplane Failure
- 79 = Identifier Duplication
- 80 = Protection Path Failure
- 81 = Sync Loss or Mismatch
- 82 = Terminal Problem
- 83 = Real Time Clock Failure
- 84 = Antenna Failure
- 85 = Battery Charging Failure
- 86 = Disk Failure
- 87 = Frequency Hopping Failure
- 88 = Loss of Redundancy
- 89 = Power Supply Failure
- 90 = Signal Quality Problem
- 91 = Battery Discharging
- 92 = Battery Failure
- 93 = Commercial Power Problem
- 94 = Fan Failure
- 95 = Engine Failure
- 96 = Sensor Failure
- 97 = Fuse Failure

Property	Description
	<ul style="list-style-type: none"> <li>• 98 = Generator Failure</li> <li>• 99 = Low Battery</li> <li>• 100 = Low Fuel</li> <li>• 101 = Low Water</li> <li>• 102 = Explosive Gas</li> <li>• 103 = High Winds</li> <li>• 104 = Ice Buildup</li> <li>• 105 = Smoke</li> <li>• 106 = Memory Mismatch</li> <li>• 107 = Out of CPU Cycles</li> <li>• 108 = Software Environment Problem</li> <li>• 109 = Software Download Failure</li> <li>• 110 = Element Reinitialized</li> <li>• 111 = Timeout</li> <li>• 112 = Logging Problems</li> <li>• 113 = Leak Detected</li> <li>• 114 = Protection Mechanism Failure</li> <li>• 115 = Protecting Resource Failure</li> <li>• 116 = Database Inconsistency</li> <li>• 117 = Authentication Failure</li> <li>• 118 = Breach of Confidentiality</li> <li>• 119 = Cable Tamper</li> <li>• 120 = Delayed Information</li> <li>• 121 = Duplicate Information</li> <li>• 122 = Information Missing</li> <li>• 123 = Information Modification</li> <li>• 124 = Information Out of Sequence</li> <li>• 125 = Key Expired</li> <li>• 126 = Non-Repudiation Failure</li> <li>• 127 = Out of Hours Activity</li> <li>• 128 = Out of Service</li> <li>• 129 = Procedural Error</li> <li>• 130 = Unexpected Information</li> </ul>
<b>StartDelay</b>	The start delay before polling the event source, in seconds.

## DCIM\_HDDAlertIndicationSettingData

Table 67. HDDAlertIndicationSettingData

Property	Description
<b>ElementName</b>	<p>The user-friendly name for this instance of SettingData. In addition, the user-friendly name can be used as an index property for a search or query.</p> <p> <b>NOTE: The name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the</p>

Property	Description
	<Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID> . <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.

## DCIM\_BaseMetricValue

Table 68. BaseMetricValue

Property	Description
<b>Duration</b>	Property that represents the time duration over which this metric value is valid. This property should not exist for timestamps that apply only to a point in time but should be defined for values that are considered valid for a certain time period (ex. sampling). If the <b>Duration</b> property exists and is non null, the TimeStamp is to be considered the end of the interval.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>MetricDefinitionId</b>	The key of the BaseMetricDefinition instance for this CIM_BaseMetricValue instance value.
<b>MetricValue</b>	The value of the metric represented as a string. Its original data type is specified in CIM_BaseMetricDefinition.
<b>TimeStamp</b>	Identifies the time when the value of a metric instance is computed. Note that this is different from the time when the instance is created. For a given CIM_BaseMetricValue instance, the TimeStamp changes whenever a new measurement snapshot is taken if Volatile is true. A managment application may establish a time series of metric data by retrieving the instances of CIM_BaseMetricValue and sorting them according to their TimeStamp.
<b>Volatile</b>	If true, Volatile indicates that the value for the next point in time may use the same object and just change its properties (such as the value or timestamp). If false, the existing objects remain unchanged and a new object is created for the new point in time.

# DCIM\_LogEntry

Table 69. LogEntry

Property	Description
<b>CreationTimeStamp</b>	A LogEntry may include a timestamp for the entry.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>RecordData</b>	<p>A string containing LogRecord data. If the corresponding RecordFormat property is &lt;empty&gt;, or cannot be parsed according to the recommended format, RecordData should be interpreted as a free-form string. If the RecordFormat property contains parseable format information (as recommended in the RecordFormat Description qualifier), the RecordData string SHOULD be parsed in accordance with this format. In this case, RecordData SHOULD begin with the delimiter character and this character SHOULD be used to separate substrings in the manner described. The RecordData string can then be parsed by the data consumer and appropriately typed.</p>
<b>RecordFormat</b>	<p>A string describing the data structure of the information in the property, RecordData. If the RecordFormat string is &lt;empty&gt;, RecordData should be interpreted as a free-form string.</p> <p>To describe the data structure of RecordData, the RecordFormat string should be constructed as follows:</p>
<b>RecordID</b>	<p>RecordID may be used to provide a representation of log entry ordering or pointers/handles for log entries.</p>

# DCIM\_IndicatorLEDCapabilities

Table 70. IndicatorLEDCapabilities

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p>

Property	Description
	<p data-bbox="560 230 767 257">&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p data-bbox="560 275 1489 618">Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>SupportedActivationStates</b>	<p data-bbox="560 645 1489 707">SupportedActivationStates indicates the supported activation states for the associated IndicatorLED. See CIM_IndicatorLED.ActivationState for descriptions of the values.</p> <p data-bbox="560 725 759 752">Possible values are:</p> <ul data-bbox="560 770 943 954" style="list-style-type: none"> <li data-bbox="560 770 663 797">· 2 = Lit</li> <li data-bbox="560 801 715 828">· 3 = Blinking</li> <li data-bbox="560 833 671 860">· 4 = Off</li> <li data-bbox="560 864 799 891">· 5 = Control Pattern</li> <li data-bbox="560 896 804 922">· .. = DMTF Reserved</li> <li data-bbox="560 927 943 954">· 32768..65535 = Vendor Reserved</li> </ul>
<b>SupportedColors</b>	<p data-bbox="560 981 1489 1043">This property indicates the colors supported by the associated instance of CIM_IndicatorLED.</p> <p data-bbox="560 1061 759 1088">Possible values are:</p> <ul data-bbox="560 1106 943 1420" style="list-style-type: none"> <li data-bbox="560 1106 695 1133">· 1 = Other</li> <li data-bbox="560 1137 700 1164">· 3 = White</li> <li data-bbox="560 1169 679 1196">· 4 = Red</li> <li data-bbox="560 1200 703 1227">· 5 = Green</li> <li data-bbox="560 1232 687 1258">· 6 = Blue</li> <li data-bbox="560 1263 715 1290">· 7 = Orange</li> <li data-bbox="560 1294 703 1321">· 8 = Yellow</li> <li data-bbox="560 1326 695 1352">· 9 = Black</li> <li data-bbox="560 1357 804 1384">· .. = DMTF Reserved</li> <li data-bbox="560 1388 943 1420">· 32768..65535 = Vendor Reserved</li> </ul>
<b>SupportedControlModes</b>	<p data-bbox="560 1447 1489 1509">SupportedControlModes indicates the control modes supported for the LED. See CIM_IndicatorLED.CurrentControlMode for more information.</p> <p data-bbox="560 1527 759 1554">Possible values are:</p> <ul data-bbox="560 1572 943 1724" style="list-style-type: none"> <li data-bbox="560 1572 743 1599">· 2 = Automatic</li> <li data-bbox="560 1603 715 1630">· 3 = Manual</li> <li data-bbox="560 1635 687 1662">· 4 = Test</li> <li data-bbox="560 1666 804 1693">· .. = DMTF Reserved</li> <li data-bbox="560 1697 943 1724">· 32768..65535 = Vendor Reserved</li> </ul>
<b>SupportedControlPatterns</b>	<p data-bbox="560 1751 1489 2007">SupportedControlPatterns describes the control patterns supported by the associated LED. The values of SupportedControlPatterns may be an exact match for values allowed for CIM_IndicatorLED.ControlPatterns or may indicate general categories of behavior. The interpretation of value is specific to the business entity identified by &lt;OrgID&gt;. Each value of SupportedControlPatterns is constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt;::&lt;&lt;Pattern&gt;Where &lt;OrgID&gt; and &lt; Pattern&gt; are separated by two colons (::), and where &lt;OrgID&gt; includes a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the ControlPattern or that is a registered ID assigned to the business entity by a recognized global authority. &lt;Pattern&gt; is</p>

Property	Description
	chosen by the business entity and is not reused to identify different underlying (real-world) behaviors. If the behavior specified for the LED adheres to a standard or proprietary specification, <Pattern> is a uniquely assigned value identifying the behavior. If the behavior for the LED is described using a standard or proprietary grammar, <Pattern> is prefixed with a uniquely assigned identifier for the grammar.
<b>SupportedIndicatedConditions</b>	<p>The conditions that may be indicated by the LED. See CIM_IndicatorLED.IndicatedCondition for a description of the values.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 1 = Other</li> <li>· 3 = Location</li> <li>· 4 = Attention</li> <li>· 5 = Activity</li> <li>· 6 = Powered On</li> <li>· 7 = Fault</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Reserved</li> </ul>

## DCIM\_ProcessorCapabilities

Table 71. ProcessorCapabilities

Property	Description
<b>ElementNameEditSupported</b>	Boolean indicating whether the ElementName can be modified.
<b>ElementNameMask</b>	This string expresses the restrictions on ElementName. The mask is expressed as a regular expression. See DMTF standard ABNF with the Profile Users Guide, appendix C for the regular expression syntax permitted. Since the ElementNameMask can describe the maximum length of the ElementName, then the requirements expressed in this property takes precedence of any length expressed in MaxElementNameLen.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>
<b>NumberOfHardwareThreads</b>	Number of hardware threads available for the processor. May be obtained from SMBIOS v2.5 4 offset 25h.
<b>NumberOfProcessorCores</b>	Number of processor cores available for processor. This number would not include cores disabled by hardware and may be obtained from SMBIOS 2.5 Type 4 offset 23h.

# DCIM\_AccountManagementCapabilities

Table 72. AccountManagementCapabilities

Property	Description
AccountManagementCapabilitiesElementNameEditSupported	Boolean indicating whether the ElementName can be modified.
InstanceID	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the Namespace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt;:&lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt;are separated by a colon ':', and where MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the &lt;Schema_Name&gt;_&lt;Class_Name&gt;structure of Schema class names.) In addition, to ensure uniqueness MUST NOT contain a colon (':'). When using this algorithm, the first colon to appear in InstanceID MUST appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's Namespace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the &lt;OrgID&gt;set to 'CIM'.</p>
OperationsSupported	<p>OperationsSupported describes the type of operations that are supported for an Account associated with the AccountManagementService.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = Create — Indicates the AccountManagementService may be used to create new accounts.</li> <li>· 3 = Modify — Indicates that the associated Accounts may be modified.</li> <li>· 4 = Delete — Indicates that associated Accounts may be deleted.</li> <li>· .. = DMTF Reserved</li> <li>· 0x8000..0xFFFF = Vendor Reserved</li> </ul>

# DCIM\_BootServiceCapabilities


Table 73. BootServiceCapabilities

Property	Description
BootStringsSupported	<p>An enumeration indicating the boot string properties in the CIM_BootSourceSetting which are supported. If the array contains a value, then all the BootSourceSetting instances managed by the service are guaranteed to have a non-null value for the corresponding property. Since this is an array, multiple values may be specified.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = BootString</li> <li>· 3 = BIOSBootString</li> <li>· 4 = StructuredBootString</li> </ul>
ElementName	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p><b>NOTE: Name does not have to be unique within a namespace.</b></p>
ElementNameEditSupported	Boolean indicating whether the ElementName can be modified.

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt; : &lt;LocalID&gt; Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon ':', and where &lt;OrgID&gt; MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness &lt;OrgID&gt; MUST NOT contain a colon (':'). When using this algorithm, the first colon to appear in InstanceID MUST appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the &lt;OrgID&gt; set to 'CIM'.</p>

## DCIM\_PlatformWatchdogServiceCapabilities


Table 74. PlatformWatchdogServiceCapabilities

Property	Description
<b>ActionOnExpirationSupported</b>	<p>ActionOnExpirationSupported indicates the actions which can be performed when the watchdog timer expires. See CIM_PlatformWatchdogService.ActionOnExpiration for a description of the values.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = None - Status Only</li> <li>· 3 = System Reset</li> <li>· 4 = System Power Off</li> <li>· 5 = System Power Off, then On</li> <li>· 6 = Generate System NonMaskableInterrupt (NMI)</li> <li>· 7 = Generate System Management Interrupt (SMI)</li> <li>· 8 = Reset Monitored Entity</li> </ul>
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p> <b>NOTE: Name does not have to be unique within a namespace.</b></p>
<b>ElementNameEditSupported</b>	<p>Boolean indicating whether the ElementName can be modified.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt; set to CIM.</p>

Property	Description
<b>LastExpirationDataSupported</b>	LastExpirationDataSupported indicates the data which is provided on the last expiration of the watchdog timer. The values in the enumeration are: A value set to 2 ( <b>Time</b> ) indicates that the time of the last expiration is provided.
<b>RequestedStatesSupported</b>	RequestedStatesSupported indicates the possible states that can be requested when using the method RequestStateChange on the EnabledLogicalElement. Possible values are: <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> </ul>
<b>WatchdogTimerDataSupported</b>	WatchdogTimerDataSupported indicates the data which is provided on the value of the watchdog timer. Possible values are: <ul style="list-style-type: none"> <li>• 2 = Current Value — Indicates that the time of the current value of the timer is provided.</li> <li>• 3 = Timer Resolution — Indicates that the timer resolution for the last expiration is provided.</li> </ul>

## DCIM\_DHCPCapabilities

Table 75. DHCPCapabilities

Property	Description
<b>ElementName</b>	The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as an index property for a search of query.  <b>NOTE: Name does not have to be unique within a namespace.</b>
<b>ElementNameEditSupported</b>	Boolean indicating whether the ElementName can be modified.
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:  <OrgID> : <LocalID>  Where <OrgID> and <LocalID> are separated by a colon (:), and where <OrgID> must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness, <OrgID> must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between <OrgID> and <LocalID> . <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.

# DCIM\_PowerUtilizationManagementCapabilities


Table 76. PowerUtilizationManagementCapabilities

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>RequiredCustomSettings</b>	<p>Array of custom power utilization algorithm settings required by the RequestPowerUtilizationAlgorithm and RequestPowerUtilizationAlgorithmEl methods' CustomSettingNames parameter, if the RequestedAlgorithm parameter has value of 2 (<b>Custom Settings Based</b>).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = CPUPowerMode</li> <li>• 3 = MemoryPowerMode</li> <li>• 4 = OtherMemoryPowerMode</li> <li>• 5 = FanPowerMode</li> </ul>
<b>SupportedMethods</b>	<p>Each enumeration corresponds to support for the like-named method of the MetricService.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• .. = DMTF Reserved</li> <li>• 32768 = RequestPowerUtilizationLimit</li> <li>• 32769 = RequestPowerUtilizationAlgorithm</li> <li>• 32770 = RequestPowerUtilizationAlgorithmEl</li> <li>• 32771..65535 = Vendor Specific</li> </ul>
<b>SupportedRequestedAlgorithms</b>	<p>Array of power utilization algorithms supported by the <b>RequestPowerUtilizationAlgorithm</b> and <b>RequestPowerUtilizationAlgorithmEl</b> methods RequestedAlgorithm parameter of the associated Service.</p>
<b>SupportedUtilizationLimitUnits</b>	<p>Array of programmatic units for power utilization limit supported by the RequestPowerUtilizationLimit method's UtilizationLimit parameter.</p>

# DCIM\_EnabledLogicalElementCapabilities

Table 77. EnabledLogicalElementCapabilities

Property	Description
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p>

Property	Description
	 <b>NOTE:</b> Name does not have to be unique within a namespace.
<b>ElementNameEditSupported</b>	Boolean indicating whether the ElementName can be modified.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>RequestedStatesSupported</b>	<p>RequestedStatesSupported indicates the possible states that can be requested when using the method RequestStateChange on the EnabledLogicalElement.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> </ul>

## DCIM\_ButtonCapabilities

Table 78. ButtonCapabilities

Property	Description
<b>ElementNameEditSupported</b>	Boolean indicating whether the ElementName can be modified.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other</p>

Property	Description
	providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.
<b>RequestedStatesSupported</b>	<p>RequestedStatesSupported indicates the possible states that can be requested when using the method RequestStateChange on the EnabledLogicalElement.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = Enabled</li> <li>• 3 = Disabled</li> <li>• 4 = Shut Down</li> <li>• 6 = Offline</li> <li>• 7 = Test</li> <li>• 8 = Defer</li> <li>• 9 = Quiesce</li> <li>• 10 = Reboot</li> <li>• 11 = Reset</li> </ul>


## DCIM\_LCDPanelCapabilities

Table 79. LCDPanelCapabilities

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>SupportedDisplayDataCategories</b>	<p>Identifies the category of data to be displayed on the LCD Panel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 2 = None</li> <li>• 3 = User Specified</li> <li>• 4 = Default</li> <li>• 5 = IPv4 Address</li> <li>• 6 = IDRAC MAC Address</li> <li>• 7 = Service Tag</li> <li>• 8 = System Name</li> <li>• 9 = IPv6 Address</li> <li>• 10 = Ambient</li> <li>• 11 = System Power</li> </ul>

# DCIM\_PowerManagementCapabilities


Table 80. PowerManagementCapabilities

Property	Description
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p> <b>NOTE: Name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>PowerChangeCapabilities</b>	<p>An enumeration indicating the specific power-related capabilities of a managed element. Since this is an array, multiple values may be specified.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Other</li><li>• 2 = Power Saving Modes Entered Automatically — Indicates that a managed element can change its power state based on usage or other criteria</li><li>• 3 = Power State Settable — Indicates that the RequestPowerStateChange method is supported</li><li>• 4 = Power Cycling Supported — Indicates that the RequestPowerStateChange method can be invoked with the PowerState input variable set to <b>Power Cycle (Off Soft)</b></li><li>• 5 = Timed Power On Supported — Indicates that the RequestPowerStateChange method can be invoked with the PowerState input variable set to 'Power On' and the Time parameter set to a specific date and time, or interval, for power on.</li><li>• 6 = Off Hard Power Cycling Supported</li><li>• 7 = HW Reset Supported</li><li>• 8 = Graceful Shutdown Supported — Indicates that the managed element can be sent a hardware signal requesting an orderly shutdown prior to the requested power state change.</li></ul>
<b>PowerStatesSupported</b>	<p>An enumeration that indicates the power states supported by a managed element. Because this is an array, multiple values can be specified. The current values in the enumeration are:</p> <ul style="list-style-type: none"><li>• 2 = On — Corresponds to ACPI state G0 or S0 or D0.</li><li>• 3 = Sleep - Light — C orresponds to ACPI state G1, S1/S2, or D1.</li><li>• 4 = Sleep - Deep — Ccorresponds to ACPI state G1, S3, or D2.</li><li>• 5 = Power Cycle (Off - Soft) — Corresponds to ACPI state G2, S5, or D3, but where the managed element is set to return to power state <b>On</b> at a pre-determined time.</li><li>• 6 = Off — Hard, corresponding to ACPI state G3, S5, or D3.</li><li>• 7 = Hibernate (Off - Soft) — Corresponds to ACPI state S4, where the state of the managed element is preserved and will be recovered upon powering on.</li><li>• 8 = Off — Soft, corresponding to ACPI state G2, S5, or D3.</li></ul>

Property	Description
	<ul style="list-style-type: none"> <li>9 = Power Cycle (Off-Hard) — Corresponds to the managed element reaching the ACPI state G3 followed by ACPI state S0.</li> <li>10 = Master Bus Reset, corresponds to the system reaching ACPI state S5 followed by ACPI state S0. This is used to represent system master bus reset.</li> <li>11 = Diagnostic Interrupt (NMI) — Corresponds to the system reaching ACPI state S5 followed by ACPI state S0. This is used to represent system non-maskable interrupt.</li> <li>12 = Off - Soft Graceful — Equivalent to Off Soft but preceded by a request to the managed element to perform an orderly shutdown.</li> <li>13 = Off - Hard Graceful — Equivalent to Off Hard but preceded by a request to the managed element to perform an orderly shutdown.</li> <li>14 = Master Bus Rest Graceful — Equivalent to Master Bus Reset but preceded by a request to the managed element to perform an orderly shutdown.</li> <li>15 = Power Cycle (Off - Soft Graceful) — Equivalent to Power Cycle (Off - Soft) but preceded by a request to the managed element to perform an orderly shutdown.</li> <li>16 = Power Cycle (Off - Hard Graceful) — Equivalent to Power Cycle (Off - Hard) but preceded by a request to the managed element to perform an orderly shutdown.</li> <li>.. = DMTF Reserved.</li> <li>0x7FFF..0xFFFF = Vendor Specific.</li> </ul>


## DCIM\_PhysicalAssetCapabilities

Table 81. PhysicalAssetCapabilities

Property	Description
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p> <b>NOTE: Name does not have to be unique within a namespace.</b></p>
<b>FRUInfoSupported</b>	<p>Boolean indicating whether the PartNumber, Serial Number, Model, Manufacturer, and SKU properties of PhysicalElement are non-null, non-blank values, and the availability of the complete FRU information.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>


# DCIM\_RoleBasedManagementCapabilities

Table 82. RoleBasedManagementCapabilities

Property	Description
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p> <b>NOTE: Name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>SharedPrivilegeSupported</b>	<p>Set to TRUE if this PrivilegeManagementService supports association of multiple subjects or targets to a particular Privilege. If False, the AssignAccess method supports at most one entry each in the Subjects and Targets parameters.</p>

# DCIM\_AllocationCapabilities

Table 83. AllocationCapabilities

Property	Description
<b>ElementName</b>	<p>The user friendly name for this instance of Capabilities. In addition, the user friendly name can be used as a index property for a search of query.</p> <p> <b>NOTE: Name does not have to be unique within a namespace.</b></p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (!:), and where &lt;OrgID&gt; MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness &lt;OrgID&gt; MUST NOT contain a colon (!:). When using this algorithm, the first colon to appear in InstanceID MUST appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the 'preferred' algorithm MUST be used with the &lt;OrgID&gt; set to 'CIM'.</p>
<b>ResourceType</b>	<p>The type of resource this allocation setting represents.</p>

**Property****Description**

Possible values are:

- 1 = Other
- 2 = Computer System
- 3 = Processor
- 4 = Memory
- 5 = IDE Controller
- 6 = Parallel SCSI HBA
- 7 = FC HBA
- 8 = iSCSI HBA
- 9 = IB HCA
- 10 = Ethernet Adapter
- 11 = Other Network Adapter
- 12 = I/O Slot
- 13 = I/O Device
- 14 = Floppy Drive
- 15 = CD Drive
- 16 = DVD drive
- 17 = Disk Drive
- 18 = Tape Drive
- 19 = Storage Extent
- 20 = Other Storage Device
- 21 = Serial port
- 22 = Parallel port
- 23 = USB Controller
- 24 = Graphics controller
- 25 = IEEE 1394 Controller
- 26 = Partitionable Unit
- 27 = Base Partitionable Unit
- 28 = Power
- 29 = Cooling Capacity
- 30 = Ethernet Switch Port
- 31 = Logical Disk
- 32 = Storage Volume
- 33 = Ethernet Connection
- .. = DMTF reserved
- 0x8000..0xFFFF = Vendor Reserved

**SharingMode**

Indicates how access to underlying resource is granted.

Possible values are:

- 0 = Unknown
- 1 = Other
- 2 = Dedicated — Exclusive access to underlying resource
- 3 = Shared — Shared use of underlying resource.
- .. = DMTF reserved
- 0x8000..0xFFFF = Vendor Reserved

Actual quantity is controlled by min, max size, weights, and so on.

# DCIM\_BIOSServiceCapabilities

Table 84. BIOSServiceCapabilities

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm: &lt;OrgID&gt; : &lt;LocalID&gt; Where &lt;OrgID&gt;and &lt;LocalID&gt; are separated by a colon ':', and where &lt;OrgID&gt; MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness &lt;OrgID&gt; MUST NOT contain a colon (':'). When using this algorithm, the first colon to appear in InstanceID MUST appear between &lt;OrgID&gt;and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the &lt;OrgID&gt; set to 'CIM'.</p>
<b>MethodsSupported</b>	<p>This property advertises the methods that are supported by the service .</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 0 = SetBIOSAttribute</li> <li>· 1 = RestoreBIOSDefaults</li> <li>· 2 = SetBIOSAttributeEmbeddedInstance</li> <li>· 3 = ReadRawBIOSData</li> <li>· 4 = WriteRawBIOSData</li> <li>· 5 = SetBIOSAttributes</li> <li>· 6..65535 = DMTF Reserved</li> <li>· 65536..4294967295 = Vendor Specified</li> </ul>

# DCIM\_SoftwareInstallationServiceCapabilities

Table 85. SoftwareInstallationServiceCapabilities

Property	Description
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>
<b>SupportedAsynchronousActions</b>	<p>Enumeration indicating what operations will be executed as asynchronous jobs. If an operation is included in both this and SupportedSynchronousActions then the underlying implementation is indicating that it may or may not create a job. If a Job is created, then the</p>

Property	Description
	<p>methods in SoftwareInstallationService return a reference to that Job as the Job parameter.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = Defer target/system reset</li> <li>· 3 = Force installation</li> <li>· 4 = Install</li> <li>· 5 = Update</li> <li>· 6 = Repair</li> <li>· 7 = Reboot</li> <li>· 8 = Password</li> <li>· 9 = Uninstall</li> <li>· 10 = Log</li> <li>· 11 = SilentMode</li> <li>· 12 = AdministrativeMode</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Specific</li> </ul>
<b>SupportedInstallOptions</b>	<p>An enumeration indicating the specific install related options supported by this service. Since this is an array, multiple values may be specified. See the InstallOptions parameter of the SoftwareInstallationService.InstallFromSoftwareIdentity method for the description of these values.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = Defer target/system reset</li> <li>· 3 = Force installation</li> <li>· 4 = Install</li> <li>· 5 = Update</li> <li>· 6 = Repair</li> <li>· 7 = Reboot</li> <li>· 8 = Password</li> <li>· 9 = Uninstall</li> <li>· 10 = Log</li> <li>· 11 = SilentMode</li> <li>· 12 = AdministrativeMode</li> <li>· .. = DMTF Reserved</li> <li>· 32768..65535 = Vendor Specific</li> </ul>
<b>SupportedTargetTypes</b>	<p>An array containing a list of SoftwareIdentity.TargetType properties that this service 'knows' how to install. TargetType is an application specific string which is invariant across version or name changes of the SoftwareIdentity and so can be used by a client to select Software Identities compatible with this service. If the service is generic (for example an OS installer), this array will be empty.</p>
<b>SupportedURISchemes</b>	<p>This property lists the URI schemes supported by the SoftwareInstallationService.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = data</li> <li>· 3 = file</li> <li>· 4 = ftp</li> <li>· 5 = http</li> <li>· 6 = https</li> <li>· 7 = nfs</li> <li>· 8 = tftp</li> <li>· .. = DMTF Reserved</li> <li>· 0x8000..0xFFFF = Vendor Specific</li> </ul>

# DCIM\_ConcreteCollection

Table 86. ConcreteCollection

Property	Description
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the &lt;OrgID&gt;set to CIM.</p>

# DCIM\_RedundancySet

Table 87. RedundancySet

Property	Description
<b>ElementName</b>	<p>ElementName A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon</p>

Property	Description
	to appear in InstanceID must appear between <OrgID> and <LocalID> . <LocalID> is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.
<b>MinNumberNeeded</b>	MinNumberNeeded indicates the smallest number of elements that MUST be operational in order to function. For example, in an N+1 redundancy relationship, the MinNumberNeeded property is set equal to N. In a 'LimitedSparing' environment, this property is meaningless and SHOULD be set to zero.
<b>RedundancyStatus</b>	RedundancyStatus provides information on the state of the RedundancyGroup. Possible values are: <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = DMTF Reserved</li> <li>2 = Fully Redundant — Indicates that all of the configured redundancy is still available</li> <li>3 = Degraded Redundancy — Indicates that some configured elements are degraded, missing or failed but that the number of elements in the set is still greater than the minimum required (<b>MinNumberNeeded</b>);</li> <li>4 = Redundancy Lost — Indicates that sufficient configured elements are missing or failed that no redundancy is available and the next failure experienced will cause overall failure.</li> <li>5 = Overall Failure — Indicates that there has been an overall failure of the RedundancySet.</li> </ul>
<b>TypeOfSet</b>	TypeOfSet provides information on the type of redundancy. - N+1 (=2) indicates all members are active, are unaware and function independent of one another. However, there exist at least one extra member to achieve functionality. <b>Sparing</b> is implied (i.e. each member can be a spare for the other(s)). An example of N+1 is a system that has 2 power supplies, but needs only 1 power supply to functioning properly. Possible values are: <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = N+1</li> <li>3 = Load Balanced — Indicates all members are active. However, their functionality is not independent of each other. Their functioning is determined by some sort of load balancing algorithm (implemented in hardware and/or software). <b>Sparing</b> is implied (i.e. each member can be a spare for the other(s)).</li> <li>4 = Sparing — Indicates that all members are active and are aware of each others. However, their functionality is independent until failover. Each member can be a spare for the other(s).</li> <li>5 = Limited Sparing — Indicates that all members are active, and they may or may not be aware of each and they are not spares for each other. Instead, their redundancy is indicated by the IsSpare relationship.</li> <li>.. = DMTF Reserved</li> <li>0x8000.. = Vendor Reserved</li> </ul>

## DCIM\_Role

Table 88. Role

Property	Description
<b>CommonName</b>	A Common Name is a (possibly ambiguous) name by which the role is commonly known in some limited scope (such as an organization) and conforms to the naming conventions of the country or culture with which it is associated.

Property	Description
<b>CreationClassName</b>	Indicates the name of the class or the subclass used in the creation of an instance. When used with the other key properties of this class, this property allows all instances of this class and its subclasses to be uniquely identified.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>Name</b>	The Name property defines the label by which the object is known. In the case of an LDAP-derived instance, the Name property value may be set to the distinguished name of the LDAP-accessed object instance.
<b>RoleCharacteristics</b>	<p>RoleCharacteristics provides descriptive information about the intended usage of the Role.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 2 = Static</li> <li>· 3 = Opaque</li> <li>· .. = DMTF Reserved</li> <li>· 32000..65535 = Vendor Specific</li> </ul> <p>When the value 2 <b>Static</b> is specified, no modification to the role is allowed. Any requests by client to change the privileges or the scope of the role by modifying the associated instances of CIM_Privilege or referencing associations fails.</p> <p>When the value 2 <b>Static</b> is not specified, the instance of CIM_Role may be modified by a client. The modification may include changing the scope of the role or rights granted. When the value 3 <b>Opaque</b> is specified, the rights granted by the CIM_Role instance is not explicitly modeled through aggregation of instances of CIM_Privilege.</p> <p>When the value 3 <b>Opaque</b> is not specified, the rights granted by the instance of CIM_Role is explicitly modeled through aggregation of instances of CIM_Privilege.</p>

## DCIM\_IndicationSettingCollection

Table 89. IndicationSettingCollection

Property	Description
<b>ElementName</b>	Human user oriented identifier for this instance.
<b>InstanceID</b>	<p>Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. To ensure uniqueness within the NameSpace, the value of InstanceID should be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt; : &lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon (:), and where &lt;OrgID&gt; must include a copyrighted, trademarked, or otherwise unique name that is owned by the business entity that is creating or defining the InstanceID or that is a registered ID assigned to the business entity by a recognized global authority. (This requirement is similar to the &lt;Schema Name&gt;_&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness, &lt;OrgID&gt; must not contain a colon (:). When using this algorithm, the first colon to appear in InstanceID must appear between &lt;OrgID&gt; and &lt;LocalID&gt; . &lt;LocalID&gt; is chosen by the business entity and should not be reused to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity must assure that the resulting InstanceID is not reused across any InstanceIDs produced by this or other</p>

Property	Description
	providers for the NameSpace of this instance. For DMTF-defined instances, the <b>preferred</b> algorithm must be used with the <OrgID>set to CIM.
<b>Name</b>	The name of the product-defined event sources.
<b>OccurrencesCount</b>	Defines TXT state in MCH for vPro brand (on/off).

## DCIM\_ConfigurationCapacity

Table 90. ConfigurationCapacity

Property	Description
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>Increment</b>	Increment in which Elements must be added or removed.
<b>MaximumCapacity</b>	Maximum number of Elements of type, ObjectType, that may be installed.
<b>Name</b>	The inherited Name serves as a part of the Configuration Capacity object key.
<b>ObjectType</b>	<p>The type of object (power supply, fan, disk drive, ...) whose capacities are indicated. This information is part of the class' key.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Other</li> <li>• 1 = Processors</li> <li>• 2 = Power Supplies</li> <li>• 3 = Fans</li> <li>• 4 = Batteries</li> <li>• 5 = I/O Slots</li> <li>• 6 = Memory Slots</li> <li>• 7 = MediaAccessDevices (Drives)</li> <li>• 8 = StorageMediaLocation Slots</li> <li>• 9 = StorageMediaLocation Magazines</li> <li>• 10 = StorageMediaLocation Panels</li> <li>• 11 = StorageMediaLocation InterLibrary Ports</li> <li>• 12 = StorageMediaLocation Limited Access Ports</li> <li>• 13 = Doors</li> <li>• 14 = MediaTransferDevice Pickers</li> <li>• 15 = MediaTransferDevice Changers</li> <li>• 16 = LabelReaders</li> <li>• 17 = Contained Chassis</li> <li>• 18 = Connected Chassis</li> <li>• 19 = Connected Frames</li> <li>• 20 = Front Side I/O Slots</li> <li>• 21 = Back Side I/O Slots</li> <li>• 22 = Cache Memory</li> <li>• 23 = NVS Memory</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>24 = Volatile Memory</li> <li>25 = Multi-Purpose</li> </ul>
<b>UsedCapacity</b>	This property defines the total capacity in use.
<b>VendorCompatibilityStrings</b>	<p>An array of strings that identifies the compatibility of the elements within the configuration capacity. This allows vendors to provide information to the system administrators by providing sufficient information to request the appropriate hardware that can populate the configuration. In order to ensure uniqueness within the NameSpace, each value defined by the vendor for use in the VendorCompatibilityStrings property SHOULD be constructed using the following <b>preferred</b> algorithm:</p> <p>&lt;OrgID&gt;:&lt;LocalID&gt;</p> <p>Where &lt;OrgID&gt; and &lt;LocalID&gt; are separated by a colon ':', and where &lt;OrgID&gt; MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the &lt;Schema Name&gt;.&lt;Class Name&gt; structure of Schema class names.) In addition, to ensure uniqueness &lt;OrgID&gt; MUST NOT contain a colon (':'). When using this algorithm, the first colon to appear in InstanceID MUST appear between &lt;OrgID&gt; and &lt;LocalID&gt;. &lt;LocalID&gt; is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements.</p>

## DCIM\_Location

Table 91. Location

Property	Description
<b>Address</b>	Address is a free-form string indicating a street, building, or other type of address for the location of the PhysicalElement.
<b>Altitude</b>	The altitude at which the managed resource is located.
<b>Building</b>	Free form string identifying the building in which the managed element resides.
<b>Campus</b>	Free form string identifying the campus in which the managed element resides.
<b>ChangeableType</b>	<p>Enumeration indicating intended usage of the DCIM_Location instance.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Not Changeable — Persistent — Indicates the instance of DCIM_Location reports read only location information and is not modifiable.</li> <li>1 = Changeable — Transient — Indicates the DCIM_Location reports location information that may be modified by the client but is not persisted.</li> <li>2 = Changeable — Persistent — Indicates the DCIM_Location reports location information that may be modified by the client that is persisted.</li> <li>3 = Not Changeable — Transient — Indicates the instance of DCIM_Location reports read only location information and is not modifiable.</li> </ul>
<b>City</b>	Free form string identifying the city in which the managed element resides.
<b>Country</b>	Free form string identifying the Country in which the managed element resides.
<b>ElementName</b>	Human user oriented identifier for this instance.
<b>Floor</b>	Free form string identifying the floor in which the managed element resides.
<b>GPSLatitude</b>	The latitude at which the managed resource is located.

Property	Description
<b>GPSLongitude</b>	The longitude at which the managed resource is located.
<b>MaxStringLength</b>	If ChangeableType has the value <b>1</b> or <b>2</b> , MaxStringLength specifies the maximum length for any property that may be modified by a client.
<b>Name</b>	Name is a free-form string defining a label for the Location. It is a part of the key for the object.
<b>PhysicalPosition</b>	Position is a free-form string that indicates the placement of a PhysicalElement. It can specify slot information on a HostingBoard, mounting site in a Cabinet, or latitude and longitude information, for example, from a GPS. It is part of the key of the Location object.
<b>PostalCode</b>	Free form string specifying postal code in which the managed element resides.
<b>Province</b>	Free form string identifying the province in which the managed element resides.
<b>Rack</b>	Free form string identifying the rack in which the managed element resides.
<b>RackCluster</b>	Free form string identifying the rack cluster in which the managed element resides.
<b>RackTheta</b>	Free form string identifying the rack theta.
<b>RackUnit</b>	A rack unit is a standard measurement of height used to denote the amount of space a physical component occupies in a rack. Rack capacity may be expressed in terms rack units. When used to indicate location, rack units indicate an offset from the bottom of rack. Thus RackUnit identifies a particular offset from the bottom of the rack that is occupied by the managed resource. It is implementation-specific whether the rack unit reported is the highest, lowest, or intermediate rack unit occupied by the managed resource.
<b>Row</b>	Free form string identifying the row in which the managed element resides.
<b>State</b>	Free form string identifying the state in which the managed element resides.
<b>StreetAddressOne</b>	Free form string for the first line of a street address.
<b>StreetAddressTwo</b>	Free form string for the second line of a street address. Uses of this property include consistency with form based address entry, or if the number of characters in the street address exceed MaxStringLength.
<b>SetLocation (Method)</b>	This method allows you to change the physical location of the system.

## DCIM\_BIOSEnumeration


Table 92. BIOSEnumeration

Property	Description
<b>AttributeName</b>	A string identifying the structured element name for a BIOS attribute using the format <b>&lt;OrgID&gt; : &lt;identifier&gt;</b> in which <OrgID>, does contain a colon (:). The value of <OrgID> is a copyrighted, trademarked or otherwise unique name that is owned by the entity defining the <identifier>, or is a registered ID that is assigned to the entity by a recognized global authority. For DMTF defined identifiers, the <OrgID> is set to <b>DMTF</b> and the <identifier> is specified in the BIOS Attribute Registry. <identifier>
<b>CurrentValue</b>	An array of strings representing the current value or values of the BIOS Attribute.
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm: <OrgID> : <LocalID> Where <LocalID> and <OrgID> are separated by a colon :, and where

Property	Description
	<OrgID> MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness <OrgID> MUST NOT contain a colon (:). When using this algorithm, the first colon to appear in InstanceID MUST appear between <OrgID> and <LocalID>. <LocalID> is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the <OrgID> set to <b>CIM</b> .
<b>IsReadOnly</b>	This property specifies if the underlying system BIOS or BIOSService will not allow the Attribute to be modified through calls to the methods CIM_BIOSService.SetBIOSAttribute or CIM_BIOSService.SetBIOSDefaults. This does not mean the Attribute can not be modified through other means. Only that the CIM interface is not capable of making a change.
<b>PossibleValues</b>	An array of strings containing possible value definitions for the Attribute. The first element SHOULD not be NULL and there SHOULD be no NULL or empty string elements intermixed with populated array element values. A Value of NULL indicates an element's value is unknown.
<b>PossibleValuesDescription</b>	An array of free-form strings providing explanations and details behind the entries in the CIM_BIOSEnumeration.PossibleValues array. Note that each entry of this array is related to the entry in PossibleValues array that is located at the same index.

## DCIM\_BIOSPassword

Table 93. BIOSPassword

Property	Description	Supported Operating System(s)
<b>AttributeName</b>	A string identifying the structured element name for a BIOS attribute using the format <b>&lt;OrgID&gt; : &lt;identifier&gt;</b> in which <OrgID> , does contain a colon (:). The value of <OrgID> is a copyrighted, trademarked or otherwise unique name that is owned by the entity defining the <identifier>, or is a registered ID that is assigned to the entity by a recognized global authority. For DMTF defined identifiers, the <OrgID> is set to <b>DMTF</b> and the <identifier> is specified in the BIOS Attribute Registry.	Microsoft Windows, Linux
<b>CurrentValue</b>	CurrentValue returns an empty array.	Microsoft Windows, Linux
<b>ElementName</b>	A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.   <b>NOTE: The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</b>	Microsoft Windows, Linux
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm: <OrgID> : <LocalID>Where <OrgID> and <LocalID> are separated by a colon &apos; : &apos;, and where <OrgID> MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized	Microsoft Windows, Linux

Property	Description	Supported Operating System(s)
	global authority (This is similar to the <Schema Name>_<Class Name> structure of Schema class names.) In addition, to ensure uniqueness <OrgID> MUST NOT contain a colon (:). When using this algorithm, the first colon to appear in InstanceID MUST appear between <OrgID> and <LocalID>. <LocalID> is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the <OrgID> set to <b>CIM</b> .	
<b>MaxLength</b>	This property specifies the maximum string length allowed when modifying this BIOS attribute. A value of NULL defines the maximum length is unknown. A value of 0 defines the maximum length as 18446744073709551615, the limitation of the property definition as uint64.	Microsoft Windows, Linux
<b>MinLength</b>	This property specifies the minimum string length allowed when modifying this BIOS attribute. A value of NULL is defined as zero.	Microsoft Windows, Linux
<b>PendingValue</b>	PendingValue returns an empty array.	Microsoft Windows

## DCIM\_BIOSString

Table 94. BIOSString

Property	Description
<b>AttributeName</b>	A string identifying the structured element name for a BIOS attribute using the format (:) in which , does contain a colon (:). The value of is a copyrighted, trademarked or otherwise unique name that is owned by the entity defining the , or is a registered ID that is assigned to the entity by a recognized global authority. For DMTF defined identifiers, the is set to <b>DMTF</b> and the is specified in the BIOS Attribute Registry.
<b>CurrentValue</b>	An array of strings representing the current value or values of the BIOS Attribute.
<b>InstanceID</b>	Within the scope of the instantiating Namespace, InstanceID opaquely and uniquely identifies an instance of this class. In order to ensure uniqueness within the NameSpace, the value of InstanceID SHOULD be constructed using the following <b>preferred</b> algorithm: :Where and are separated by a colon (:), and where MUST include a copyrighted, trademarked or otherwise unique name that is owned by the business entity creating/ defining the InstanceID, or is a registered ID that is assigned to the business entity by a recognized global authority (This is similar to the _ structure of Schema class names.) In addition, to ensure uniqueness MUST NOT contain a colon (:). When using this algorithm, the first colon to appear in InstanceID MUST appear between and . is chosen by the business entity and SHOULD not be re-used to identify different underlying (real-world) elements. If the above <b>preferred</b> algorithm is not used, the defining entity MUST assure that the resultant InstanceID is not re-used across any InstanceIDs produced by this or other providers for this instance's NameSpace. For DMTF defined instances, the <b>preferred</b> algorithm MUST be used with the set to <b>CIM</b> .
<b>MaxLength</b>	This property specifies the maximum string length allowed when modifying this BIOS attribute. A value of NULL defines the maximum length is unknown. A value of 0 defines the maximum length as 18446744073709551615, the limitation of the property definition as uint64.
<b>StringType</b>	The StringType property provides management applications with information defining implementation's capabilities regarding string values. A value of ASCII indicates a plain text formatting with no tabs formatting or bolds, plain text. A value of hex indicates a simple encoding of the numerals 0 to 9 and the letters A to F and is not case sensitive. A value of unicode indicates fully multi-lingual text support. A string BIOS Attribute with value of regex

Property	Description
	<p>is a regular expression and the CIM_BIOSString.ValueExpression is applied to values represented and any value that is attempted to be set by invoking SetBIOSAttribute().</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 2 = ASCII</li> <li>• 3 = hex</li> <li>• 4 = unicode</li> <li>• 5 = regex .. = DMTF Reserved</li> <li>• 65536..4294967295 = Vendor Reserved</li> </ul>

## DCIM\_MemoryError

Table 95. MemoryError

Property	Description
<b>DeviceCreationClassName</b>	The scoping StorageExtent's CreationClassName.
<b>DeviceID</b>	The scoping StorageExtent's DeviceID.
<b>ElementName</b>	<p>A user-friendly name for the object. This property allows each instance to define a user-friendly name in addition to its key properties, identity data, and description information.</p> <p><b>NOTE:</b> The Name property of ManagedSystemElement is also defined as a user-friendly name. But, it is often subclassed to be a Key. It is not reasonable that the same property can convey both identity and a user-friendly name, without inconsistencies. Where Name exists and is not a Key (such as for instances of LogicalDevice), the same information can be present in both the Name and ElementName properties.</p>
<b>ErrorInfo</b>	<p>An integer enumeration describing the type of error that occurred most recently. For example, single (value = <b>6</b>) or double bit errors (7) can be specified using this property. The values, 12 – 14, are undefined in the CIM Schema since in DMI, they mix the semantics of the type of error and whether it was correctable or not. The latter is indicated in the property, CorrectableError.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = OK</li> <li>• 3 = Bad Read</li> <li>• 4 = Parity Error</li> <li>• 5 = Single-Bit Error</li> <li>• 6 = Double-Bit Error</li> <li>• 7 = Multi-Bit Error</li> <li>• 8 = Nibble Error</li> <li>• 9 = Checksum Error</li> <li>• 10 = CRC Error</li> <li>• 32768 = DIMM Disabled via Spare Activation</li> </ul>
<b>StartingAddress</b>	Specifies the address of the memory error. The type of error is described by the ErrorInfo property. If the ErrorInfo property is equal to <b>3, OK</b> , then this property has no meaning.
<b>SystemCreationClassName</b>	The scoping System's CreationClassName.
<b>SystemName</b>	The scoping System's Name.

## DCIM\_IdentityContext

Table 96. IdentityContext

Property	Description
ElementInContext	An Identity whose context is defined.
ElementProvidingContext	The ManagedElement that provides context or scope for the Identity.

## DCIM\_OrderedComponent

Table 97. OrderedComponent

Property	Description
AssignedSequence	<p>AssignedSequence is an unsigned integer <b>n</b> that indicates the relative order of ManagedElement instances. When <b>n</b> is a positive integer, it indicates a place in the sequence of members, with smaller integers indicating earlier positions in the sequence. The special value <b>0</b> indicates <b>don't care</b>. If two or more members have the same non-zero sequence number, then the ordering between those members is irrelevant, but they must all be ordered at the appropriate place in the overall sequence. A series of examples will make ordering of members clearer: If all members have the same sequence number, regardless of whether it is <b>0</b> or non-zero, any order is acceptable. o The values: 1:MEMBER A 2:MEMBER B 1:MEMBER C 3:MEMBER D indicate two acceptable orders: A,C,B,D or C,A,B,D, since A and C can be ordered in either sequence, but only at the <b>1</b> position.</p> <p><b>NOTE: The non-zero sequence numbers need not start with 1, and they need not be consecutive. All that matters is their relative magnitude.</b></p>
GroupComponent	The parent element in the association.
PartComponent	The child element in the association.

## DCIM\_Container

Table 98. Container

Property	Description
GroupComponent	The PhysicalPackage that contains other PhysicalElements, including other Packages.
LocationWithinContainer	A free-form string representing the positioning of the PhysicalElement within the PhysicalPackage. Information relative to stationary elements in the Container (for example, second drive bay from the top), angles, altitudes and other data may be recorded in this property. This string could supplement or be used in place of instantiating the CIM_Location object.
PartComponent	The PhysicalElement which is contained in the Package.

## DCIM\_ConcreteComponent

Table 99. ConcreteComponent

Property	Description
GroupComponent	The parent element in the association.
PartComponent	The child element in the association.

# DCIM\_SystemDevice

Table 100. SystemDevice

Property	Description
GroupComponent	The aggregating system also provides name scoping for the Account.
PartComponent	The subordinate Account.

# DCIM\_AccountOnSystem

Table 101. AccountOnSystem

Property	Description
GroupComponent	The aggregating system also provides name scoping for the Account.
PartComponent	The subordinate Account.

# DCIM\_InstalledOS

Table 102. InstalledOS

Property	Description
GroupComponent	The ComputerSystem.
PartComponent	The OperatingSystem installed on the ComputerSystem.
PrimaryOS	Boolean indicating that the OperatingSystem is the default OS for the ComputerSystem.

# DCIM\_SystemBIOS

Table 103. SystemBIOS

Property	Description
GroupComponent	The ComputerSystem that boots from the BIOS.
PartComponent	The System's BIOS.

# DCIM\_SystemComponent

Table 104. SystemComponent

Property	Description
GroupComponent	The parent System in the Association.
PartComponent	The child element that is a component of a System.

# DCIM\_SettingsDefineCapabilities

Table 105. SettingsDefineCapabilities

Property	Description
<b>GroupComponent</b>	The Capabilities instance.
<b>PartComponent</b>	A Setting used to define the associated Capabilities instance.
<b>PropertyPolicy</b>	<p>PropertyPolicy defines whether or not the non-null, non-key properties of the associated SettingData instance are treated independently or as a correlated set. For instance, an independent set of maximum properties may be defined, when there is no relationship between each property. On the other hand, several correlated sets of maximum properties may need to be defined when the maximum values of each are dependent on some of the others.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Independent</li><li>• 1 = Correlated</li><li>• 2.. = DMTF Reserved</li></ul>
<b>ValueRange</b>	<p>The ValueRange property indicates further semantics on the interpretation of all non-null, non-key properties of the Component SettingData. <b>Minimums, Maximums, and Increments</b>, are only evaluated against non-null, non-key, non-enumerated, non-boolean, numeric properties of the SettingData instance. Each property of that set is mathematically comparable to other instances of that property.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Point — Indicates that this SettingData instance provides a single set of values.</li><li>• 1 = Minimums — Indicates that this SettingData instance provides minimum values for evaluated properties. When used with PropertyPolicy = <b>Independent</b>, only one such setting per particular SettingData instance is specified for any Capabilities. Unless restricted by a Maximums on the same set of properties, all values that compare higher than the specified values are also considered to be supported by the associated capabilities instance.</li><li>• 2 = Maximums — Indicates that this SettingData instance provides maximum values for evaluated properties. When used with PropertyPolicy = <b>Independent</b>, only one such setting per particular SettingData instance is specified for any Capabilities. Unless restricted by a Minimums on the same set of properties, all values that compare lower than the specified values are also considered to be supported by the associated capabilities instance.</li><li>• 3 = Increments — Indicates that this SettingData instance provides increment values for evaluated properties. For the associated Capabilities, if an evaluated property currently has no corresponding minimums or maximums, then the property has no affect. Otherwise, for each evaluated property: its value x is between the minimum and maximum, inclusively, and has the property that both the result of maximum minus x and the result of x minus minimum are each an integer multiple of the increment. If either minimum or maximum is not specified and the other is, then the missing value is respectively assumed to be the lowest or highest supported value for the property's data-type. Additionally, if both a minimum and a maximum are specified for an evaluated property, then the result of maximum minus minimum is an integer multiple of the increment.</li><li>• 4.. = DMTF Reserved</li></ul>
<b>ValueRole</b>	<p>The ValueRole property indicates further semantics on the interpretation of the non-null, non-key properties of the Component SettingData.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Default — Indicates that property values of the component SettingData instance will be used as default values, when a new SettingData instance is created for elements whose capabilities are defined by the associated Capabilities instance. Across instances</li></ul>

Property	Description
	<p>of settingdata, for particular properties having the same semantic purpose, at most one such settingdata instance is specified as a default.</p> <ul style="list-style-type: none"> <li>• 1 = Optimal — Indicates that the SettingData instance represents optimal setting values for elements associated with the associated capabilities instance. Multiple component SettingData instances may be declared as optimal.</li> <li>• 2 = Mean — Indicates that the non-null, non-key, non-enumerated, non-boolean, numeric properties of the associated SettingData instance represents an average point along some dimension. For different combinations of SettingData properties, multiple component SettingData instances may be declared as <b>Mean</b>.</li> <li>• 3 = Supported — Indicates that the non-null, non-key properties of the Component SettingData instance represents a set of supported property values that are not otherwise qualified.</li> <li>• 4.. = DMTF Reserved</li> </ul>

## DCIM\_DeviceSAPImplementation

Table 106. DeviceSAPImplementation

Property	Description
<b>Antecedent</b>	The LogicalDevice.
<b>Dependent</b>	The ServiceAccessPoint implemented using the LogicalDevice.

## DCIM\_HostedAccessPoint

Table 107. HostedAccessPoint

Property	Description
<b>Antecedent</b>	The hosting System.
<b>Dependent</b>	The SAPs that are hosted on this System.

## DCIM\_HostedCollection

Table 108. HostedCollection

Property	Description
<b>Antecedent</b>	The scoping system.
<b>Dependent</b>	The collection defined in the context of a system.

## DCIM\_HostedService

Table 109. HostedService

Property	Description
<b>Antecedent</b>	The hosting System.
<b>Dependent</b>	The Service hosted on the System.

# DCIM\_VideoHeadOnController

Table 110. VideoHeadOnController

Property	Description
<b>Antecedent</b>	The video device that includes the head.
<b>Dependent</b>	The head on the video device.

# DCIM\_SAPSAPDependency

Table 111. SAPSAPDependency

Property	Description
<b>Antecedent</b>	The required ServiceAccessPoint.
<b>Dependent</b>	The ServiceAccessPoint that is dependent on an underlying SAP.

# DCIM\_ReferencedProfile

Table 112. ReferencedProfile

Property	Description
<b>Antecedent</b>	The RegisteredProfile that is referenced by the Dependent Profile.
<b>Dependent</b>	A RegisteredProfile that references other profiles.

# DCIM\_MetricDefForME

Table 113. MetricDefForME

Property	Description
<b>Antecedent</b>	The CIM_ManagedElement that can have metrics of this type associated with it.
<b>Dependent</b>	A CIM_BaseMetricDefinition for a CIM_ManagedElement.
<b>MetricCollectionEnabled</b>	<p>MetricCollectionEnabled indicates whether the metric defined by the referenced CIM_BaseMetricDefinition is being collected for the referenced CIM_ManagedElement.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>· 2 = Enabled — Indicates the metric is being collected.</li><li>· 3 = Disabled — Indicates the metric is not being collected.</li><li>· 4 = Reserved .. = DMTF Reserved</li><li>· 32768..65535 = Vendor Reserved</li></ul> <p>When collection of a metric is reenabled, the metric is re-initialized such that any values for a current access metric reflect data collected after the time at which collection was reenabled.</p>
<b>RecordedSince</b>	<p>If a metric is being collected for an instance of CIM_ManagedElement, the RecordedSince indicates when the capturing of the metric began. If MetricCollectionEnabled is <b>3 (Disabled)</b>, the RecordedSince property has a value of 99990101000000.000000+000. A value of NULL indicates the beginning of the metric capture period is unknown.</p>

## DCIM\_MetricForME

Table 114. MetricForME

Property	Description
<b>Antecedent</b>	ManagedElement to which the metric values belong.
<b>Dependent</b>	A metric value for the ManagedElement.

## DCIM\_MetricInstance

Table 115. MetricInstance

Property	Description
<b>Antecedent</b>	The CIM_BaseMetricDefinition for this particular CIM_BaseMetricValue.
<b>Dependent</b>	A CIM_BaseMetricValue instance holding the Value.

## DCIM\_ElementInConnector

Table 116. ElementInConnector

Property	Description
<b>Antecedent</b>	The Connector into which the Element is inserted.
<b>Dependent</b>	The Element in the Connector.

## DCIM\_Docked

Table 117. Docked

Property	Description	Supported Operating System(s)
<b>Antecedent</b>	The Docking Station Chassis.	Microsoft Windows, Linux
<b>Dependent</b>	The System Chassis.	Microsoft Windows, Linux

## DCIM\_ConcreteDependency

Table 118. ConcreteDependency

Property	Description
<b>Antecedent</b>	Antecedent represents the independent object in this association.
<b>Dependent</b>	Dependent represents the object that is dependent on the Antecedent.

## DCIM\_Realizes

Table 119. Realizes

Property	Description
<b>Antecedent</b>	The physical component that implements the Device.

Property	Description
Dependent	The LogicalDevice.

## DCIM\_ComputerSystemPackage

Table 120. ComputerSystemPackage

Property	Description
Antecedent	Antecedent The PhysicalPackage(s) that realize a Unitary ComputerSystem.
Dependent	The UnitaryComputerSystem.
PlatformGUID	A Globally Unique Identifier for the System's Package.

## DCIM\_RunningOS

Table 121. RunningOS

Property	Description
Antecedent	The OperatingSystem currently running on the ComputerSystem.
Dependent	The ComputerSystem.

## DCIM\_UseOfLog

Table 122. UseOfLog

Property	Description
Antecedent	The Log.
Dependent	The ManagedSystemElement whose information is recorded in the Log.
RecordedData	A free-form string describing the use of the Log by the ManagedSystemElement.

## DCIM\_AssociatedIndicatorLED

Table 123. AssociatedIndicatorLED

Property	Description
Antecedent	The ManagedSystemElement that has an associated LED.
Dependent	The LED.

## DCIM\_AssociatedCacheMemory

Table 124. AssociatedCacheMemory

Property	Description
Antecedent	Memory installed on or associated with a Device.

Property	Description
<b>Associativity</b>	<p>An integer enumeration defining the system cache associativity. For example, 5 indicates a fully associative cache.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Direct Mapped</li> <li>3 = 2-way Set-Associative</li> <li>4 = 4-way Set-Associative</li> <li>5 = Fully Associative</li> <li>6 = 8-way Set-Associative</li> <li>7 = 16-way Set-Associative</li> </ul>
<b>CacheType</b>	<p>Defines whether this is for instruction caching (value = <b>2</b>), data caching (value = <b>3</b>) or both (value = <b>4, Unified</b>). Also, <b>Other (1)</b> and <b>Unknown (0)</b> can be defined.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Instruction</li> <li>3 = Data</li> <li>4 = Unified</li> </ul>
<b>Dependent</b>	The LogicalElement.
<b>ReadPolicy</b>	<p>Policy that is employed by the Cache for handling read requests. For example, <b>Read, Read-Ahead</b> or both can be specified using the values, 2, 3 or 4, respectively. If the read policy is determined individually (ie, for each request), then the value 5 (<b>Determination per I/O</b>) should be specified. <b>Other (1)</b> and <b>Unknown (0)</b> are also valid values.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Read</li> <li>3 = Read-Ahead</li> <li>4 = Read and Read-Ahead</li> <li>5 = Determination Per I/O</li> </ul>
<b>WritePolicy</b>	<p>Defines whether this is write-back (value = <b>2</b>) or write-through (value = <b>3</b>) Cache, or whether this information <b>Varies with Address (4)</b> or is defined individually for each I/O (5). Also, Other and <b>Unknown (0)</b> can be specified.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>1 = Other</li> <li>2 = Read</li> <li>3 = Read-Ahead</li> <li>4 = Read and Read-Ahead</li> <li>5 = Determination Per I/O</li> </ul>

## DCIM\_AssociatedSensor

Table 125. AssociatedSensor

Property	Description
<b>Antecedent</b>	The Sensor.

Property	Description
<b>Dependent</b>	The ManagedSystemElement for which information is measured by the Sensor.

## DCIM\_RemoteAccessAvailableToElement

Table 126. RemoteAccessAvailableToElement

Property	Description
<b>Antecedent</b>	The remote server or system.
<b>Dependent</b>	The EnabledLogicalElement which has knowledge of the remote server or system.
<b>IsDefault</b>	Indicates that this access information is defined as a default configuration for the system.
<b>OrderOfAccess</b>	When an element is accessing remote services and systems, it MAY be necessary to order those accesses. This property defines that ordering — where lower numbers indicate a higher priority for access. A value of 0 (default) indicates that ordering does not apply. If multiple RemoteAccessPoint instances have the same value for OrderOfAccess, then these AccessPoints MAY be used in any sequence defined by the implementation.

## DCIM\_ServiceServiceDependency

Table 127. ServiceServiceDependency

Property	Description
<b>Antecedent</b>	The required Service
<b>Dependent</b>	The Service that is dependent on an underlying Service.

## DCIM\_DeviceConnection

Table 128. DeviceConnection

Property	Description
<b>Antecedent</b>	A LogicalElement's Software Asset.
<b>Dependent</b>	The ManagedElement that requires or uses the software.

## DCIM\_ElementSoftwareIdentity

Table 129. ElementSoftwareIdentity

Property	Description
<b>Antecedent</b>	A LogicalElement's Software Asset.
<b>Dependent</b>	The ManagedElement that requires or uses the software.

# DCIM\_ElementCapabilities

Table 130. ElementCapabilities

Property	Description
Capabilities	The Capabilities object associated with the element.
ManagedElement	The managed element.

# DCIM\_ElementSettingData

Table 131. ElementSettingData

Property	Description
IsCurrent	<p>An enumerated integer that indicates that the referenced SettingData represents the last requested values for attributes of the Managed Element or that this information is unknown. Attributes of the SettingData itself indicate whether it represents the last configuration applied to the ManagedElement or is a transient snapshot of the requested settings. Current operational characteristics of a ManagedElement should be represented with properties of the ManagedElement. element or that this information is unknown. For a given ManagedElement and all instances of a SettingData subclass, there is at most one instance of ElementSettingData which references the ManagedElement and an instance of the SettingData sub-class where there is a specified non-null, non-key property of the SettingData sub-class, and the IsMaximum property on the referencing ElementSettingData instance has a value of <b>Is Maximum</b> or the IsMinimum property on the referencing ElementSettingData instance has a value of <b>Is Minimum</b> and the IsCurrent property on the referencing ElementSettingData instance has a value of <b>Is Current</b>. There is at most one instance of ElementSettingData which references a ManagedElement and an instance of a SettingData sub-class where the IsCurrent property has a value of <b>Is Current</b> and the IsMinimum property does not have a value of <b>Is Minimum</b> and the IsMaximum property does not have a value of <b>Is Maximum</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Is Current</li><li>• 2 = Is Not Current</li></ul>
IsDefault	<p>An enumerated integer that indicates that the referenced setting is a default setting for the element or that this information is unknown.</p> <p>Possible values are:</p> <ul style="list-style-type: none"><li>• 0 = Unknown</li><li>• 1 = Is Default</li><li>• 2 = Is Not Default</li></ul>
IsMaximum	<p>This property affects the interpretation of all non-null, non-enumerated, non-binary, numeric, non-key properties of the associated SettingData instance. All other properties of the associated SettingData instance are not affected by this property.</p> <p><b>NOTE:</b> It is assumed that the semantics of each property of this set are designed to be compared mathematically. When IsMaximum = Is Maximum, this property indicates that the affected property values specified in the associated SettingData instance defines desired maximum setting values. The operational maximum values should be modeled as a properties of the CIM_ManagedElement instance. When IsMaximum = Is Not Maximum, this property indicates that the affected property values specified in the associated SettingData instance does not define desired maximum setting values. When IsMaximum = Unknown, this property indicates that the affected property values specified in the associated SettingData instance may</p>

Property	Description
	<p><b>correspond to maximum desired setting values. When IsMaximum = Not Applicable, this property indicates that the affected property values specified in the associated SettingData instance is not interpreted with respect to whether each defines a desired maximum.</b></p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Not Applicable</li> <li>• 2 = Is Maximum</li> <li>• 3 = Is Not Maximum</li> </ul>
<b>IsMinimum</b>	<p>This property affects the interpretation of all non-null, non-enumerated, non-binary, numeric, non-key properties of the associated SettingData instance. All other properties of the associated SettingData instance are not affected by this property.</p> <p><b>NOTE:</b> It is assumed that the semantics of each property of this set are designed to be compared mathematically. When IsMinimum = Is Minimum, this property indicates that the affected property values specified in the associated SettingData instance defines desired minimum setting values. The operational minimum values should be modeled as a properties of the CIM_ManagedElement instance. When IsMinimum = Is Not Minimum, this property indicates that the affected property values specified in the associated SettingData instance does not define desired minimum setting values. When IsMinimum = Unknown, this property indicates that the affected property values specified in the associated SettingData instance may correspond to minimum desired setting values. When IsMinimum = Not Applicable, this property indicates that the affected property values specified in the associated SettingData instance is not interpreted with respect to whether each defines a desired minimum.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Not Applicable</li> <li>• 2 = Is Minimum</li> <li>• 3 = Is Not Minimum</li> </ul>
<b>IsNext</b>	<p>An enumerated integer indicating whether or not the referenced setting is the next setting to be applied. For example, the application could take place on a re-initialization, reset, reconfiguration request. This could be a permanent setting, or a setting used only one time, as indicated by the flag. If it is a permanent setting then the setting is applied every time the managed element reinitializes, until this flag is manually reset. However, if it is single use, then the flag is automatically cleared after the settings are applied. Also note that if this flag is specified (i.e. set to value other than <b>Unknown</b>), then this takes precedence over any SettingData that may have been specified as Default. For example: If the managed element is a computer system, and the value of this flag is <b>Is Next</b>, then the setting will be effective next time the system resets. And, unless this flag is changed, it will persist for subsequent system resets. However, if this flag is set to <b>Is Next For Single Use</b>, then this setting will only be used once and the flag would be reset after that to <b>Is Not Next</b>. So, in the above example, if the system reboots in a quick succession, the setting will not be used at the second reboot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Is Next</li> <li>• 2 = Is Not Next</li> <li>• 3 = Is Next For Single Use</li> </ul>
<b>IsPending</b>	<p>An enumerated integer that indicates whether or not the referenced CIM_SettingData instance represents outstanding changes to the configuration of the referenced</p>

Property	Description
	<p>CIM_ManagedElement that are known to be pending and are in the process of being applied. A value of 0 <b>Unknown</b> indicates that the referenced instance of CIM_SettingData may represent the last configuration applied to the referenced CIM_ManagedElement. A value of <b>2 (Is Pending)</b> indicates that the referenced instance of CIM_SettingData represents outstanding changes to the configuration of the referenced CIM_ManagedElement that are known to be pending. A value of <b>3 (Is Not Pending)</b> indicates that the referenced instance of CIM_SettingData does not represent outstanding changes to the configuration of the referenced CIM_ManagedElement.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = Unknown</li> <li>2 = Is Pending</li> <li>3 = Is Not Pending</li> <li>.. = DMTF Reserved</li> <li>32768.. = Vendor Reserved</li> </ul>
<b>ManagedElement</b>	The managed element.
<b>SettingData</b>	The SettingData object that is associated with the element.

## DCIM\_OrderedMemberOfCollection

Table 132. OrderedMemberOfCollection

Property	Description
<b>AssignedSequence</b>	<p>AssignedSequence is an unsigned integer <b>n</b> that indicates the relative position of members within a Collection. When <b>n</b> is a positive integer, it indicates a place in the sequence of members, with smaller integers indicating earlier positions in the sequence. The special value <b>0</b> indicates <b>don't care</b>. If two or more members have the same non-zero sequence number, then the ordering between those members is irrelevant, but they must all be ordered at the appropriate place in the overall sequence. A series of examples will make ordering of members clearer: If all members have the same sequence number, regardless of whether it is <b>0</b> or non-zero, any order is acceptable. The values are: 1:MEMBER A 2:MEMBER B 1:MEMBER C 3:MEMBER D indicate two acceptable orders: A,C,B,D or C,A,B,D, because A and C can be ordered in either sequence, but only at the <b>1</b> position.</p> <p><b>NOTE:</b> The non-zero sequence numbers do not need to start with 1, and they do not need to be consecutive. However, the sequence numbers must reflect their relative magnitude.</p>
<b>Collection</b>	The Collection that aggregates members.
<b>Member</b>	The aggregated member of the Collection.

## DCIM\_MemberOfCollection

Table 133. MemberOfCollection

Property	Description
<b>Collection</b>	The Collection that aggregates members.
<b>Member</b>	The aggregated member of the Collection.

## DCIM\_OwningCollectionElement

Table 134. OwningCollectionElement

Property	Description
<b>OwningElement</b>	The ManagedElement acting as the 'owner' or object that is responsible for the control of the Collection.
<b>OwnedElement</b>	The Collection owned or controlled by the ManagedElement.

## DCIM\_ElementConformsToProfile

Table 135. ElementConformsToProfile

Property	Description
<b>ManagedElement</b>	The ManagedElement that conforms to the RegisteredProfile.
<b>ConformantStandard</b>	The RegisteredProfile to which the ManagedElement conforms.

## DCIM\_RoleLimitedToTarget

Table 136. RoleLimitedToTarget

Property	Description
<b>TargetElement</b>	Reference to the target set that can be accessed from the Role.
<b>DefiningRole</b>	The Role whose target set is explicitly defined.

## DCIM\_ElementCapacity

Table 137. ElementCapacity

Property	Description
<b>Element</b>	The PhysicalElement being described.
<b>Capacity</b>	PhysicalCapacity describes the minimum and maximum requirements, and ability to support different types of hardware for a PhysicalElement.

## DCIM\_ServiceAffectsElement

Table 138. ServiceAffectsElement

Property	Description
<b>AffectedElement</b>	The Managed Element that is affected by the Service.
<b>AffectingElement</b>	The Service that is affecting the ManagedElement.
<b>AssignedSequence</b>	AssignedSequence is an unsigned integer 'n' that indicates the relative sequence in which order the ManagedElement instances are affected by the Service, which is associated to the ManagedElement instances through this class. The implementation of the Service uses the relative sequence to order all the managed elements represented by ManagedElements associated through this class for servicing or prioritizing. When <b>n</b> is a positive integer, it indicates a place in the sequence of affected elements, with smaller integers indicating

## Property

## Description

earlier positions in the sequence. NULL or the special value **0** indicates **don't care**. If two or more affected elements have the same non-zero sequence number, then the ordering between those elements is irrelevant, but they must all be serviced in the appropriate order in the overall sequence. A series of examples will make order of elements clearer: If all elements affected have the same sequence number, regardless of whether it is **0** or non-zero, any order is acceptable. The values, 1:ELEMENT A 2:ELEMENT B 1:ELEMENT C 3:ELEMENT D, indicate two acceptable orders: A,C,B,D or C,A,B,D, since A and C can be ordered in either sequence, but only at the **1** position.

**NOTE:** The non-zero sequence numbers need not start with 1, and they need not be consecutive. All that matters is their relative magnitude.

## ElementEffects

An enumeration that describes the effect on the ManagedElement. This array corresponds to the OtherElementEffectsDescriptions array, where the latter provides details that are related to the high-level effects enumerated by this property. Additional detail is required if the ElementEffects array contains the value 1 (Other).

Possible values are:

- 0 = Unknown
- 1 = Other
- 2 = Exclusive Use — Indicates that no other Service may have this association to the element.
- 3 = Performance Impact — Deprecated in favor of **Consumes, Enhances Performance, or Degrades Performance**. Execution of the Service may enhance or degrade the performance of the element. This may be as a side-effect of execution or as an intended consequence of methods provided by the Service.
- 4 = Element Integrity — Deprecated in favor of **Consumes, Enhances Integrity, or Degrades Integrity**. Execution of the Service may enhance or degrade the integrity of the element. This may be as a side-effect of execution or as an intended consequence of methods provided by the Service.
- 5 = Manages — The Service manages the element.
- 6 = Consumes — Execution of the Service consumes some or all of the associated element as a consequence of running the Service. For example, the Service may consume CPU cycles, which may affect performance, or Storage which may affect both performance and integrity. (For instance, the lack of free storage can degrade integrity by reducing the ability to save state. ) **Consumes** may be used alone or in conjunction with other values, in particular, **Degrades Performance** and **Degrades Integrity**. **Manages** and not **Consumes** should be used to reflect allocation services that may be provided by a Service.
- 7 = Enhances Integrity — The Service may enhance integrity of the associated element.
- 8 = Degrades Integrity — The Service may degrade integrity of the associated element.
- 9 = Enhances Performance — The Service may enhance performance of the associated element.
- 10 = Degrades Performance — The Service may degrade performance of the associated element.
- .. = DMTF Reserved
- 0x8000..0xFFFF = Vendor Reserved

## OtherElementEffectsDescriptions

Provides details for the effect at the corresponding array position in ElementEffects. This information is required if ElementEffects contains the value 1 (Other).

# DCIM\_AssociatedPowerManagementService

Table 139. AssociatedPowerManagementService

Property	Description
<b>OtherPowerState</b>	A string describing the additional power management state of the element, used when the PowerState is set to the value <b>1, Other</b> .
<b>OtherRequestedPowerState</b>	A string describing the additional power management state of the element, used when the RequestedPowerState is set to the value <b>1, Other</b> .
<b>PowerOnTime</b>	The time when the element will be powered on again, used when the RequestedPowerState has the value <b>2, On, 5, Power Cycle (Off - Soft)</b> or <b>6, Power Cycle (Off - Hard)</b> .
<b>PowerState</b>	<p>The current power state of the associated Managed System Element.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Other</li> <li>• 2 = On</li> <li>• 3 = Sleep - Light</li> <li>• 4 = Sleep -Deep</li> <li>• 5 = Power Cycle (Off - Soft)</li> <li>• 6 = Off - Hard</li> <li>• 7 = Hibernate (Off - Soft)</li> <li>• 8 = Off - Soft</li> <li>• 9 = Power Cycle (Off-Hard)</li> <li>• 10 = Master Bus Reset</li> <li>• 11 = Diagnostic Interrupt (NMI)</li> <li>• 12 = Off - Soft Graceful</li> <li>• 13 = Off - Hard Graceful</li> <li>• 14 = Master Bus Reset Graceful</li> <li>• 15 = Power Cycle (Off - Soft Graceful)</li> <li>• 16 = Power Cycle (Off - Hard Graceful)</li> <li>• .. = DMTF Reserved</li> <li>• 0x7FFF..0xFFFF = Vendor Specific</li> </ul>
<b>RequestedPowerState</b>	<p>The desired or the last requested power state of the associated Managed System Element, irrespective of the mechanism through which the request was made. If the requested power state is unknown, then the property has the value of <b>0 Unknown</b>. If the property has no meaning or is not supported, then the property has the value <b>12 Not Applicable</b>.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 = Unknown</li> <li>• 1 = Other</li> <li>• 2 = On</li> <li>• 3 = Sleep - Light</li> <li>• 4 = Sleep -_Deep</li> <li>• 5 = Power Cycle (Off - Soft)</li> <li>• 6 = Off - Hard</li> <li>• 7 = Hibernate (Off - Soft)</li> <li>• 8 = Off - Soft</li> <li>• 9 = Power Cycle (Off-Hard)</li> <li>• 10 = Master Bus Reset</li> <li>• 11 = Diagnostic Interrupt (NMI)</li> <li>• 12 = Not Applicable</li> <li>• 13 = Off - Soft Graceful</li> <li>• 14 = Off - Hard Graceful</li> <li>• 15 = Master Bus Reset Graceful</li> </ul>

Property	Description
	<ul style="list-style-type: none"> <li>· 16 = Power Cycle (Off - Soft Graceful)</li> <li>· 17 = Power Cycle (Off - Hard Graceful)</li> <li>· .. = DMTF Reserved</li> <li>· 0x7FFF..0xFFFF = Vendor Specific</li> </ul>
<b>ServiceProvided</b>	The Service that is available.
<b>UserOfService</b>	The ManagedElement that can use the Service.

## DCIM\_ServiceAvailableToElement

Table 140. ServiceAvailableToElement

Property	Description
<b>ServiceProvided</b>	The Service that is available.
<b>UserOfService</b>	The ManagedElement that can use the Service.

## DCIM\_LogManagesRecord

Table 141. LogManagesRecord

Property	Description
<b>Log</b>	The Log.
<b>Record</b>	The record managed by the Log.

## DCIM\_InstalledSoftwareIdentity

Table 142. InstalledSoftwareIdentity

Property	Description
<b>InstalledSoftware</b>	The SoftwareIdentity that is installed.
<b>System</b>	The system on which the software is installed.

## DCIM\_ConcretelIdentity

Table 143. ConcretelIdentity

Property	Description
<b>SameElement</b>	SameElement Another aspect of the ManagedElement.
<b>SystemElement</b>	One aspect of the ManagedElement. The use of 'System' in the name does not limit the scope of the association. This name is an artifact of the original definition of the association.

## DCIM\_SMARTAttributeInfo

Table 144. SMARTAttributeInfo

Property	Description
<b>AttributeID</b>	AttributeID represents the relative reliability of individual performance or calibration attributes. The valid range of attribute values begins from 1–253 decimal.
<b>AttributeName</b>	Name defined for the corresponding AttributeID.
<b>CurrentValue</b>	Current value of an attribute which represents the relative reliability of individual performance or calibration attributes.
<b>CustomThresholdValue</b>	Each attribute has a corresponding Custom Threshold Value which is used for direct comparison to the Current Value to indicate the existence of a degrading or faulty condition. The numerical value of the Custom Threshold Value is determined by the IT administrator and set the value lesser than the Threshold Value set by the Manufacturer. The valid range for Attribute Thresholds is from 1–253 decimal.
<b>DiskID</b>	Disk ID of the HDD/SSD.
<b>FirmwareVersion</b>	Firmware Version of the HDD/SSD.
<b>Manufacturer</b>	HDD/SSD Manufacturer.
<b>ModelNumber</b>	HDD/SSD Model Number.
<b>RawDataContent</b>	Raw data content in hexadecimal for the corresponding AttributeID (6 bytes).
<b>SerialNumber</b>	HDD/SSD Serial Number.
<b>StatusFlag</b>	A 2-byte number which represents the status of the corresponding AttributeID: <ul style="list-style-type: none"><li>• Bit 0: Prefail/Advisory bit</li><li>• Bit 1: Online data collection bit</li><li>• Bit 2–5: Vendor-specific</li><li>• Bit 6–15: Reserved</li></ul>
<b>ThresholdValue</b>	The (failure) limit of the attribute.
<b>WorstValue</b>	The worst (smallest) value ever found in the previous lifetime of the storage device.
<b>SetCustomThreshold (Method)</b>	This property represents the success or failure of the SMART operation. The method may return the following errors: <ul style="list-style-type: none"><li>• 0 (Success) - If the method is completed successfully.</li><li>• 1 (Failure) - If the Input parameter is out of range or IO operation fails.</li></ul>

## DCIM\_SettingsDefineState

Table 145. SettingsDefineState

Property	Description
<b>ManagedElement</b>	The managed element.
<b>SettingData</b>	The SettingData object that provides additional information about the current state and configuration of the ManagedElement.

## DCIM\_ElementLocation

Table 146. ElementLocation

Property	Description
<b>Element</b>	The ManagedElement whose location is specified.
<b>PhysicalLocation</b>	The location of the element.

## DCIM\_CredentialContext

Table 147. CredentialContext

Property	Description
<b>ElementInContext</b>	A Credential whose context is defined.
<b>ElementProvidingContext</b>	The ManagedElement that provides context or scope for the Credential.

## DCIM\_OwningJobElement

Table 148. OwningJobElement

Property	Description
<b>OwnedElement</b>	The Job created by the ManagedElement.
<b>OwningElement</b>	The ManagedElement responsible for the creation of the Job.

# BIOS settings supported in Dell Command | Monitor 10.2.1

Following is the list of BIOS settings supported in Dell Command | Monitor.

**Table 149. BIOS settings supported in Dell Command | Monitor 10.2.1**

BIOS Settings Name	Description	Supported Operating System(s)
<b>Absolute</b>	<p>Sets the value to the Absolute interface and controls the Absolute service.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - If enabled, then the Absolute service is activated or deactivated.</li> <li>• <b>Disable</b> - If disabled, then the Absolute service does not run.</li> <li>• <b>Permanently Disabled</b> - If the Absolute interface is permanently disabled, then the Absolute feature can be enabled by using the factory reset feature.</li> </ul>	Microsoft Windows, Linux
<b>Active State Power Management</b>	<p>Set the ASPM (Active State Power Management) level.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Auto — There is handshaking between the device and PCI Express hub to determine the best ASPM mode supported by the device.</li> <li>• Disabled — ASPM power management is turned off always.</li> <li>• L1 Only — ASPM power management is set to use L1.</li> </ul>	Microsoft Windows, Linux
<b>Activity LED</b>	<p>Sets the Network Activity Light Emitting Diode (LED) to any of the following:</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = EnableACPIOSControl — Sets the Activity LED controlled by an Advanced Configuration and Power Interface (ACPI) operating system and driver.</li> <li>• 2 = WirelessLANIndicator — Sets the Activity LED as a wireless Local Area Network (LAN) radio on/off indicator.</li> <li>• 3 = Off — Sets the Activity LED to off.</li> </ul>	Microsoft Windows, Linux
<b>AGP Slot</b>	<p>Enables or disables the on-board AGP slot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>AC Power Recovery Mode</b>	<p>Sets AC Power Recovery Mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Last</li> <li>• On</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Adjacent Cache Line Prefetch</b>	<p>If sets to Disable then the CPU will only fetch the cache line that contains the data currently required by the CPU.</p> <p>If sets to Enable then it enables the CPU to fetch the adjacent cache line in the other half of the sector.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Admin Setup Lockout</b>	<p>If the value of Admin Setup Lockout is <b>Enabled</b> and the Admin Password is set, users will not be allowed to see any part of the Setup screens unless they enter the correct Admin Password. If the Admin password is NOT set and Admin Setup Lockout is <b>Enabled</b>, users will be able to access Setup normally.</p> <p>If the value of Admin Setup Lockout is <b>Disabled</b> and the Admin Password is or is not set, users will be allowed to enter Setup normally. However, many fields may still be inaccessible, depending on how other Setup security settings are configured.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Adv Battery Charge Cfg</b>	<p>Configures the days settings based on BeginningOfDay and workperiod. Advanced Battery charge mode uses standard charging algorithm and other methods during working hours to maximize battery health. During working hours, express charge is used to charge the batteries faster. You can configure the days and the work period during which the battery has to be charged. To enable advanced battery charging, provide the day, and set the following:</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• BeginningOfDay — To configure the AdvanceBatteryCharge start time in 24 hours format. The value of hour must be in the range 0–23 and minute must be 0, 15, 30, or 45.</li> <li>• Workperiod — To configure the duration of charging.</li> </ul>	Microsoft Windows, Linux
<b>Advanced Battery Charging Mode</b>	<p>Configures all the batteries in the systems with Advance Battery Charging Mode to maximize the battery health.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 — Disable</li> <li>• 2 — Enable</li> </ul> <p><b>NOTE:</b> If Advanced Battery Charging Mode is disabled, Dell Command   Monitor shows the instances for Adv Battery Charge Cfg with all '0' values. User cannot set the values in Adv Battery Charge Cfg. When the Advanced Battery Charging Mode is enabled, instances for Adv Battery Charge Cfg reports the data retrieved from BIOS.</p>	Microsoft Windows, Linux
<b>Adv Battery Charge Cfg Sun</b>	<p>Configures the Advanced Battery charging configuration for Sunday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Beginning of day Hour</li> </ul>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
Adv Battery Charge Cfg Mon	<ul style="list-style-type: none"> <li>• 0 — 59 — Beginning of day Minute</li> <li>• 0 — 23 — Work Period Hour</li> <li>• 0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>• Adv Battery Charge Cfg Sun BodHour</li> <li>• Adv Battery Charge Cfg Sun BodMin</li> <li>• Adv Battery Charge Cfg Sun WpHour</li> <li>• Adv Battery Charge Cfg Sun WpMin</li> </ul> <p><b>NOTE:</b> The values defined for Minute field are 0, 15, 30 and 45. In case you set any other value, the value is round to the lower defined value.</p>	Microsoft Windows
Adv Battery Charge Cfg Tue	<p>Configures the Advanced Battery charging configuration for Monday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Beginning of day Hour</li> <li>• 0 — 59 — Beginning of day Minute</li> <li>• 0 — 23 — Work Period Hour</li> <li>• 0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>• Adv Battery Charge Cfg Mon BodHour</li> <li>• Adv Battery Charge Cfg Mon BodMin</li> <li>• Adv Battery Charge Cfg Mon WpHour</li> <li>• Adv Battery Charge Cfg Mon WpMin</li> </ul>	Microsoft Windows
Adv Battery Charge Cfg Wed	<p>Configures the Advanced Battery charging configuration for Tuesday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Beginning of day Hour</li> <li>• 0 — 59 — Beginning of day Minute</li> <li>• 0 — 23 — Work Period Hour</li> <li>• 0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>• Adv Battery Charge Cfg Tue BodHour</li> <li>• Adv Battery Charge Cfg Tue BodMin</li> <li>• Adv Battery Charge Cfg Tue WpHour</li> <li>• Adv Battery Charge Cfg Tue WpMin</li> </ul>	Microsoft Windows
Adv Battery Charge Cfg Thu	<p>Configures the Advanced Battery charging configuration for Wednesday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Beginning of day Hour</li> <li>• 0 — 59 — Beginning of day Minute</li> <li>• 0 — 23 — Work Period Hour</li> <li>• 0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>• Adv Battery Charge Cfg Wed BodHour</li> <li>• Adv Battery Charge Cfg Wed BodMin</li> <li>• Adv Battery Charge Cfg Wed WpHour</li> </ul>	Microsoft Windows


BIOS Settings Name	Description	Supported Operating System(s)
<b>Adv Battery Charge Cfg Thu</b>	<ul style="list-style-type: none"> <li>Adv Battery Charge Cfg Wed WpMin</li> </ul> <p>Configures the Advanced Battery charging configuration for Thursday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — 23 — Beginning of day Hour</li> <li>0 — 59 — Beginning of day Minute</li> <li>0 — 23 — Work Period Hour</li> <li>0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>Adv Battery Charge Cfg Thu BodHour</li> <li>Adv Battery Charge Cfg Thu BodMin</li> <li>Adv Battery Charge Cfg Thu WpHour</li> <li>Adv Battery Charge Cfg Thu WpMin</li> </ul>	Microsoft Windows
<b>Adv Battery Charge Cfg Fri</b>	<p>Configures the Advanced Battery charging configuration for Friday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — 23 — Beginning of day Hour</li> <li>0 — 59 — Beginning of day Minute</li> <li>0 — 23 — Work Period Hour</li> <li>0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>Adv Battery Charge Cfg Fri BodHour</li> <li>Adv Battery Charge Cfg Fri BodMin</li> <li>Adv Battery Charge Cfg Fri WpHour</li> <li>Adv Battery Charge Cfg Fri WpMin</li> </ul>	Microsoft Windows
<b>Adv Battery Charge Cfg Sat</b>	<p>Configures the Advanced Battery charging configuration for Saturday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — 23 — Beginning of day Hour</li> <li>0 — 59 — Beginning of day Minute</li> <li>0 — 23 — Work Period Hour</li> <li>0 — 59 — Work Period Minute</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>Adv Battery Charge Cfg Sat BodHour</li> <li>Adv Battery Charge Cfg Sat BodMin</li> <li>Adv Battery Charge Cfg Sat WpHour</li> <li>Adv Battery Charge Cfg Sat WpMin</li> </ul>	Microsoft Windows
<b>Always Allow Dell Docks</b>	<p>Allows or restricts Dell Type-C Thunderbolt docks to function when the Thunderbolt is disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — Restricts the Dell Type-C Thunderbolt docks to function when the Thunderbolt is disabled.</li> <li>Enable — Allows the Dell Type-C Thunderbolt docks to function even when the Thunderbolt is disabled.</li> </ul>	Microsoft Windows, Linux
<b>Ambient Light Sensor</b>	<p>Enables or Disables the Ambient Light Sensor.</p> <p>Possible values are:</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Intel AMT Capability</b>	<p>Set the Intel Active Management Technology (AMT) capability.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><b>Enabled</b> - If Intel Active Management Technology is enabled, MEBx is available through the F12 menu and you can provision AMT. MEBx may not be accessible if OROM Keyboard Access is disabled.</li> <li><b>Disabled</b> - If Intel Active Management Technology is disabled, MEBx is not available in pre-boot. Once disabled, Intel Active Management Technology can only be enabled through the BIOS interface. If the Intel AMT is already provisioned, AMT cannot be disabled. Un-provisioning AMT is required to disable AMT.</li> <li><b>Restrict MEBx Access</b> - If Intel Active Management Technology is enabled, MEBx is not available in pre-boot but you can provision AMT from the operating system.</li> </ul>	Microsoft Windows, Linux
<b>Enable AMD SmartShift</b>	<p>Sets the AMD SmartShift.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><b>Enable</b> - On a discrete GPU system, AMD SmartShift allows the system's CPU and discrete GPU to share the power limits. AMD SmartShift allows the potential performance that increases within the systems power or thermal limitation.</li> <li><b>Disable</b> - AMD SmartShift feature is disabled.</li> </ul>	Microsoft Windows, Linux
<b>AMD TSME</b>	<p>Sets the AMD Transparent Secure Memory Encryption (TSME).</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li><b>Enabled</b> - AMD Transparent Secure Memory Encryption (TSME) allows encryption of contents during residing on the memory DIMMS.</li> <li><b>NOTE:</b> For best results while diagnosing potential memory DIMM issues, turn off this feature prior to running diagnostic functions or tools.</li> <li><b>Disabled</b> - AMD Transparent Secure Memory Encryption (TSME) does not allow encryption on the memory DIMMS.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 1</b>	<p>Sets the defined Analog/Digital Interface mode for channel 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Unused — Channel is unused.</li> <li>1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 2</b>	<p>Sets the defined Analog/Digital Interface mode for channel 2.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Unused — Channel is unused.</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• 1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>• 2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>• 3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>• 8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	
<b>Analog Digital Interface Mode Channel 3</b>	<p>Sets the defined Analog/Digital Interface mode for channel 3.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — Unused — Channel is unused.</li> <li>• 1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>• 2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>• 3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>• 8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 4</b>	<p>Sets the defined Analog/Digital Interface mode for channel 4.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — Unused — Channel is unused.</li> <li>• 1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>• 2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>• 3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>• 8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 5</b>	<p>Sets the defined Analog/Digital Interface mode for channel 5.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — Unused — Channel is unused.</li> <li>• 1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>• 2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>• 3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>• 8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 6</b>	<p>Sets the defined Analog/Digital Interface mode for channel 6.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — Unused — Channel is unused.</li> <li>• 1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>• 2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>• 3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	
<b>Analog Digital Interface Mode Channel 7</b>	<p>Sets the defined Analog/Digital Interface mode for channel 7.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Unused — Channel is unused.</li> <li>1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Analog Digital Interface Mode Channel 8</b>	<p>Sets the defined Analog/Digital Interface mode for channel 8.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Unused — Channel is unused.</li> <li>1 — ADC Input — Sets the channel mode as Analog-to-Digital Converter (ADC) input.</li> <li>2 — DAC Output — Sets the channel mode as Digital-to-Analog Converter (DAC) output.</li> <li>3 — DAC and ADC — Sets the channel mode as DAC output, but can be monitored through ADC input.</li> <li>8 — GPIO — Sets the channel mode as General Purpose Input or Output.</li> </ul>	Microsoft Windows, Linux
<b>Attempt Legacy Boot</b>	<p>Determines if BIOS should attempt to boot from the legacy boot list when the UEFI boot list fails.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enabled — If the UEFI boot list fails, then BIOS attempts to boot from the Legacy boot list.</li> <li>Disabled — BIOS discontinues the booting process if the UEFI boot list fails.</li> </ul>	Microsoft Windows, Linux
<b>AudioMode</b>	<p>Onboard audio mode. Disabled mode completely un-assigns the onboard hardware resources. Half duplex mode allows only record or playback. Full duplex mode can record and play back sounds simultaneously.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Half Duplex</li> <li>Full Duplex</li> </ul>	Microsoft Windows
<b>Auto Fan Speed Intensity</b>	<p>Configures the fan speed control if the fan speed is set to Auto using fanspeed BIOS setting.</p> <p>Possible values are: 0 to 100</p> <ul style="list-style-type: none"> <li>0 — sets the fanspeed to the optimal speed level, and higher percentage provides enhanced cooling.</li> </ul>	Microsoft Windows, Linux
<b>Auto On</b>	<p>This property defines the auto-on configuration: disabled, everyday or weekdays (Monday — Friday).</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Everyday</li> <li>• Weekdays</li> <li>• Select days</li> </ul>	
<b>Auto On Hour</b>	Defines the hour when to turn on the system (0–23).	Microsoft Windows, Linux
<b>Auto On Minute</b>	Defines the minutes when to turn on the system (0–59).	Microsoft Windows, Linux
<b>Auto on Sunday</b>	Defines that the system must be automatically turned on Sundays.	Microsoft Windows, Linux
<b>Auto on Monday</b>	Defines that the system must be automatically turned on Mondays.	Microsoft Windows, Linux
<b>Auto on Tuesday</b>	Defines that the system must be automatically turned on Tuesdays.	Microsoft Windows, Linux
<b>Auto on Wednesday</b>	Defines that the system must be automatically turned on Wednesdays.	Microsoft Windows, Linux
<b>Auto on Thursday</b>	Defines that the system must be automatically turned on Thursdays.	Microsoft Windows, Linux
<b>Auto on Friday</b>	Defines that the system must be automatically turned on Fridays.	Microsoft Windows, Linux
<b>Auto on Saturday</b>	Defines that the system must be automatically turned on Saturdays.	Microsoft Windows, Linux
<b>Auto OS Recovery Threshold</b>	<p>Sets the threshold value for auto OS recovery. Controls the automatic boot flow for SupportAssist System Resolution console and for Dell OS Recovery Tool. The system boots to the SupportAssist System Resolution console and for Dell OS Recovery Tool if,</p> <ul style="list-style-type: none"> <li>• the primary operating system fails to boot consecutively</li> <li>• the count of boot failure is greater than or equal to the value of the Auto OS Recovery threshold setup option</li> <li>• the SupportAssist OS Recovery option is enabled</li> </ul> <p>Possible values are: 0 to 3</p> <p><b>i</b> <b>NOTE: If the Auto OS Recovery threshold is set to 0, then all automatic boot flow for SupportAssist System Resolution console and for Dell OS Recovery Tool is disabled.</b></p>	Microsoft Windows, Linux
<b>Auto Switch</b>	<p>Enable, Disable</p> <p>Possible values are: 1,2</p>	Microsoft Windows, Linux
<b>Auto Wake Period</b>	<p>Defines the time in minutes after which the system should automatically wake up from Standby, Hibernate, or Switched off mode.</p> <p>Possible values are: 0, integers ranging from 1 to 254</p> <p><b>i</b> <b>NOTE: The system wakes up from Sleep, Hibernate, or Switched off mode only if the Auto On option is enabled for everyday of the week.</b></p>	Microsoft Windows, Linux
<b>BIOS Auto Recovery</b>	<p>Enables or disables the BIOS auto recovery feature.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enabled — If BIOS corruption is detected, the system automatically recovers BIOS without any user interaction.</li> <li>Disabled — Disables BIOS auto recovery feature.</li> </ul>	
<b>Back Camera</b>	<p>Enables or disables the rearward facing camera.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — Disables the rearward facing camera.</li> <li>Enable — Enables the rearward facing camera.</li> </ul>	Microsoft Windows, Linux
<b>Battery Slice Charge Configuration</b>	<p>Configures the battery slice charging</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>1 - Adaptive</li> <li>2 - Standard</li> <li>3- Express</li> <li>4- PrimAcUse</li> <li>5- Custom</li> </ul>	Microsoft Windows, Linux
<b>BIOS Connect</b>	<p>Enables or disables the BIOS Connect feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>BIOS Connect Activation</b>	<p>Configures the state of the available BiosConnect boot paths.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Deactivate — BIOS setup options are not available and all BiosConnect boot paths are disabled.</li> <li>1 — Full Activation — BIOS Setup options are enabled and all BiosConnect boot paths are enabled.</li> <li>2 — Launchpad Activation Only — BIOS setup options are enabled and only launchpad code path is enabled.</li> </ul>	Microsoft Windows, Linux
<b>BIOS Enumeration Mode</b>	<p>BIOS Assist Enumeration, Native Enumeration</p> <p>Possible values are: 0,1</p>	Microsoft Windows, Linux
<b>Bios Integrity Check</b>	<p>Enables or disables the BIOS integrity check during the booting process.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>enable — BIOS checks the BIOS image integrity during every booting process.</li> <li>disable — BIOS checks the BIOS image integrity only if the previous booting process did not complete.</li> </ul> <p> <b>NOTE: BIOS checks the BIOS image integrity only if the biosautorecovery option is enabled.</b></p>	Microsoft Windows, Linux
<b>BIOS Recovery</b>	<p>Enables or disables the system BIOS Recovery option. This feature saves a recovery image to a primary hard disk drive storage, or to an external USB, and uses this recovery image to recover BIOS image when system BIOS fails.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable — BIOS stores the recovery image on primary hard disk drive storage. So BIOS recovery image is available both</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>from primary hard disk drive permanent storage and via an external USB.</p> <ul style="list-style-type: none"> <li>Disable — BIOS does not store the recovery image on primary hard disk drive storage. So BIOS recovery image is available only via an external USB.</li> </ul>	
<b>Bitsmart</b>	<p>Enables or disable the Bitsmart.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Bluetooth Devices</b>	<p>Enable or disable Bluetooth Devices</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>BlinkPSULED1</b>	<p>Provides the alert for the PSU 1. The Power Supply Unit(PSU) 1 LED starts to blink when it is enabled.</p> <p>Possible value:</p> <ul style="list-style-type: none"> <li>Enable</li> </ul>	Microsoft Windows
<b>BlinkPSULED2</b>	<p>Provides the alert for the PSU 2. The Power Supply Unit(PSU) 2 LED starts to blink when it is enabled.</p> <p>Possible value:</p> <ul style="list-style-type: none"> <li>Enable</li> </ul>	Microsoft Windows
<b>BlockS3</b>	<p>Enables or disables the Block S3 sleep state. If this option is Disabled, the system BIOS supports OSPM/ACPI S3 (suspend to RAM) operation. This moves the system authentication into the operating system and bypasses any Preboot Authentication on resume.</p> <p>If this option is Enabled, the system BIOS blocks all OSPM/ACPI S3 (suspend to RAM) requests and enforces Preboot Authentication on all non-S3 resumes.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Boot Mode</b>	<p>Determines the system's boot mode. Enables booting to Unified Extensible Firmware Interface (UEFI) capable operating systems. This ensures compatibility with operating systems that do not support UEFI.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>UEFI — Enables booting to Unified Extensible Firmware Interface (UEFI) capable operating systems.</li> <li>BIOS — Ensures compatibility with operating systems that do not support UEFI.</li> </ul> <p><b>NOTE: Legacy boot mode is not allowed when secure boot is enabled or legacy option ROM is disabled.</b></p>	Microsoft Windows, Linux
<b>Boot-time Video</b>	<p>Sets the Primary Video source.</p> <p>Possible values are:</p>	Microsoft Windows, Linux


BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>On board</li> <li>Add-in</li> </ul>	
<b>Boot Speed</b>	<p>Sets CPU speed to default or compatible (low speed). This feature is implementation-dependent. There is no set speed for Compatible, only that it is slower than default. Some platforms implement this by turning off cache and others by STPCLK throttling.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Default</li> <li>Compatible</li> </ul>	Microsoft Windows
<b>Broadcom ASF</b>	<p>Sets the ASF (Alert Standard Format) mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> <li>Alert only</li> <li>Dash and ASF</li> </ul>	Microsoft Windows
<b>Broadcom TruManage</b>	<p>Sets the Broadcom TruManage.</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows
<b>Bus Ratio</b>	<p>Sets Bus Ratio.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Max</li> <li>6.0</li> <li>7.0</li> <li>7.5</li> <li>8.0</li> <li>8.5</li> <li>9.0</li> <li>9.5</li> </ul>	Microsoft Windows
<b>Camera</b>	<p>Enables or disables the camera.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>CAN Bus</b>	<p>Enables or disables the Controller Area Network (CAN) Bus.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Cellular Radio</b>	<p>Enables or Disables the cellular radio, that is, the WWAN module.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Charger</b>	<p>Defines the charger details.</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>Chassis Intrusion</b>	<p>Enables the system to detect and report the Chassis Intrusion events to the system display on boot-up.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> <li>• Silent</li> </ul>	Microsoft Windows, Linux
<b>Chassis Intrusion Status</b>	<p>This property shows the status of the system with regards to Chassis Intrusion (Detected or Not Detected). A value of Unknown indicates one of two things: either Chassis Intrusion is not supported by this system, or Chassis Intrusion event reporting has been disabled by the user. If the value is Detected, the user may set it to Not Detected to enable the system to receive the next event and to stop generating events for now.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Tripped</li> <li>• Door open</li> <li>• Door closed</li> <li>• Trip reset</li> </ul>	Microsoft Windows, Linux
<b>Clear BIOS Log</b>	<p>Prevents or allows the BIOS event log to be cleared on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Does not clear the BIOS event log on the next boot.</li> <li>• Enable — Clears the BIOS event log on the next boot.</li> </ul>	Microsoft Windows, Linux
<b>Clear Power Log</b>	<p>Prevents or allows the Power log to be cleared on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Does not clear the Power log on the next boot.</li> <li>• Enable — Clears the Power log on the next boot.</li> </ul>	Microsoft Windows, Linux
<b>Clear System Event Log</b>	<p>Prevents or causes the system event log to be cleared on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Clear Thermal Log</b>	<p>Prevents or allows the Thermal log to be cleared on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Does not clear the Thermal log on the next boot.</li> <li>• Enable — Clears the Thermal log on the next boot.</li> </ul>	Microsoft Windows
<b>Cool and Quiet</b>	<p>Enables or disables the AMD Cool and Quiet processor feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> </ul>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
<b>Adjacent Cache Line Prefetch</b>	<ul style="list-style-type: none"> <li>Enable</li> </ul> <p>Enables or disables the AdjacentCacheLinePrefetch feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enabled — CPU fetches the adjacent cache line in the other half of the sector.</li> <li>Disabled — CPU only fetches the cache line that contains the data currently required by the CPU.</li> </ul>	Microsoft Windows, Linux
<b>CPU RSA</b>	<p>Enables or disables the Reliability Availability Serviceability (RSA) support on CPUs.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>CPU Snoop Mode</b>	<p>Configures the CPU snoop mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Early snoop — Enables early snoop mode. Use this mode for latency-sensitive applications that do not require high remote bandwidth.</li> <li>Home snoop — Enables home snoop mode. Use this mode for applications that require high memory bandwidth.</li> <li>Cluster on Die — Enables cluster on die mode. Dell recommends this mode for NUMA-optimized applications to achieve lowest local memory latency, and highest local memory bandwidth.</li> <li>Opportunistic Snoop — Enables opportunistic snoop mode. Directory with Opportunistic Snoop Broadcast (OSB) offers a good balance of latency and bandwidth.</li> <li>No snoop — Enables no snoop mode.</li> </ul>	Microsoft Windows, Linux
<b>CPU Virtualization Technology</b>	<p>Enables or disables CPU Virtualization.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Deep Sleep Control</b>	<p>Configures the system power mode when the system is in S4 and S5 state. If set to S5only, the system moves to the lowest-Power Off mode only in S5 state. If set to S4 and S5 state, the system moves to the lowest-Power Off mode in both S4 and S5 states. When the system is in low-power mode, it turns off most of the power-consuming circuitry, to meet the 1 W power limit. It disables PME, USB power, etc.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>S5 only</li> <li>S4 and S5</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>Dell Reliable Memory Technology</b>	<p>Configures the system to detect and correct the software errors in a block of RAM. When enabled, the system detects and corrects the software errors.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Dell Wyse P25 Bios Access</b>	<ul style="list-style-type: none"> <li>Enable</li> </ul> <p>Turns on or off the access to the BIOS setup through Dell Wyse P25 PCoIP client.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul>	Microsoft Windows
<b>dGPU External Display</b>	<p>Enables or disables discrete Graphics Procession (GPU) Unit external display.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Diskette</b>	<p>This property defines whether the built-in Floppy controller is enabled, auto or read-only.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Auto</li> <li>Read Only</li> <li>USB Internal</li> </ul>	Microsoft Windows
<b>Dock Display Port 1 Video Source</b>	<p>The Dock Display Port through Integrated Graphics feature enables the docking station DVI no1 or Display Port no1 interface to drive an external video display when Switchable Graphics is enabled and running from the integrated graphics controller.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>Enable — Uses the integrated video controller as video source.</li> <li>Disable — Uses the external video controller as video source.</li> </ul>	Microsoft Windows, Linux
<b>Dock Support On Battery</b>	<p>Enabling this option allows you to use the docking station, when AC power is absent, but only when the battery is preceding a certain charge percentage. The percentage may change per battery and per platform. For example, the dock may only be powered when the battery is at 60 percent charge or higher, and when the battery drops below this level (without AC power) the dock loses power.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>DRAM Prefetcher</b>	<p>Prevents DRAM references from triggering DRAM prefetch requests./Turns on the DRAM prefetch unit in the Northbridge.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Dust Filter Maintenance</b>	<p>Disabled, 15days, 30days, 60days, 90days, 120days, 150days, 180days</p> <p>Possible values are: 0, 1, 2, 3, 4, 5, 6, 7</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Dynamic Backlight Control</b>	<p>Enables or disables the Dynamic Backlight Control (DBC) feature within the BIOS.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>Dynamic Privacy Screen</b>	<p>Always On, enables, or disables the dynamic privacy screen.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - The Dynamic Privacy Screen is applied to the embedded display panel and can be toggled between public mode and privacy mode using the Fn+F9 key combination on the embedded keyboard.</li> <li>• <b>Disable</b> - The Dynamic Privacy Screen is not applied to the embedded display panel.</li> <li>• <b>Always On</b> - The Dynamic Privacy Screen is always on and cannot be turned off.</li> </ul>	Microsoft Windows, Linux
<b>Embedded SATA Controller</b>	<p>Sets the Integrated SATA Controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Combined</li> <li>• ATA</li> <li>• AHCI</li> <li>• RAID</li> <li>• QDMA</li> </ul>	Microsoft Windows, Linux
<b>Internal SD Card</b>	<p>Enables/disables the embedded SD Card port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Embedded Video Controller</b>	<p>Enables or disables the embedded video controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>eMMC</b>	<p>Embedded Multi-Media Controller</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Expansion Bay 1</b>	<p>Enables or disables Expansion Bay 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Expansion Bay 2</b>	<p>Enables or disables Expansion Bay 2.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Expansion Bay 3</b>	Enables or disables Expansion Bay 3. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Instant ON</b>	Enables or disables the Instant ON feature. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Enable Block SID</b>	Enables or disables Block SID feature. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>Enable Legacy Option ROMs</b>	Enables or disables detecting the BIOS and using the legacy expansion ROMs. This mode cannot be enabled with Secure Boot. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>Enable Tablet Button LED Sign of Life</b>	Enables or disables Tablet Button LED Sign of Life. Possible values are: 1,2 <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	
<b>Enclave Memory Size</b>	Displays the Intel(R) Software Guard Extensions(TM) (SGX) Enclave Processor Reserved Memory Size. Possible values are: <ul style="list-style-type: none"> <li>• 32MB</li> <li>• 64MB</li> <li>• 128MB</li> <li>• 256MB</li> </ul> <p> <b>NOTE: Enclave Memory Size option can be set from the BIOS setup screen only.</b></p>	Microsoft Windows, Linux
<b>Energy Star Logo</b>	Displays or hides the Energy Star logo during POST. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>e-SATA Ports</b>	Enable/disable e-SATA Ports Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Express Card</b>	This setting will enable the express card port, which allows the user to insert an express card into the slot and it will be configured.	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>Express Charge</b>	<p>Define the express charging.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> <li>• Enable once</li> </ul>	Microsoft Windows
<b>Extend Post Time</b>	<p>Delays the time of action taken by the system after pressing function keys such as F2,F12, etc. during post time.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — Does not delay the time of action.</li> <li>• 5 — Delays the time of action by 5 seconds.</li> <li>• 10 — Delays the time of action by 10 seconds.</li> </ul>	Microsoft Windows, Linux
<b>External Hotkey</b>	<p>Sets the External Hotkey to Scroll Lock or Disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Scroll lock</li> </ul>	Microsoft Windows, Linux
<b>External USB Ports</b>	<p>Enable/disable external USB ports.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>External WLAN Activity LED</b>	<p>Enables or disables the external (lid-mounted) WLAN indicator LED.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — LED does not display the state of the WLAN source activity.</li> <li>• Enable — LED displays the state of the WLAN source activity.</li> </ul>	Microsoft Windows, Linux
<b>F12 POST Display</b>	<p>Enables or disables the F12 key at POST.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>F2 POST Display</b>	<p>Enables or disables the F2 key at POST.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Fan Control Override</b>	<p>Controls the speed of the fan. When enabled the fan runs at full speed. When disabled, the fan controller uses the system environmental data to set the fan at its optimal speed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Fan Speed</b>	<ul style="list-style-type: none"> <li>Enable</li> </ul> <p>Sets the system fan speed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Auto</li> <li>High</li> <li>Medium High</li> <li>Medium Low</li> <li>Low</li> </ul>	Microsoft Windows, Linux
<b>Fan Speed Auto Level on Psu Zone</b>	<p>Sets the system to Fan Speed Auto Level on Psu Zone.</p> <p>Possible values are: 0 – 100</p> <ul style="list-style-type: none"> <li>Minimum Value</li> <li>Minimum Value</li> </ul>	Microsoft Windows, Linux
<b>Fan Speed Auto Level on Cpu Zone</b>	<p>Sets the system to Fan Speed Auto Level on Cpu Zone.</p> <p>Possible values are: 0 – 100</p> <ul style="list-style-type: none"> <li>Minimum Value</li> <li>Minimum Value</li> </ul>	Microsoft Windows, Linux
<b>Fan Speed Auto Level on Flex Bay Zone</b>	<p>Sets the system to Fan Speed Auto Level on Flex Bay Zone.</p> <p>Possible values are: 0 – 100</p> <ul style="list-style-type: none"> <li>Minimum Value</li> <li>Minimum Value</li> </ul>	Microsoft Windows, Linux
<b>Fan Speed Auto Level on Upper PCIe Zone</b>	<p>Sets the system to Fan Speed Auto Level on Upper Pcie Zone.</p> <p>Possible values are: 0 – 100</p> <ul style="list-style-type: none"> <li>Minimum Value</li> <li>Minimum Value</li> </ul>	Microsoft Windows, Linux
<b>Enable Fingerprint Reader Device</b>	<p>Enables or disables the Fingerprint Reader device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable - Fingerprint Reader device is enabled.</li> <li>Disable - Fingerprint Reader device is disabled.</li> </ul>	Microsoft Windows, Linux
<b>Enable Fingerprint Reader Single Sign On</b>	<p>Enables or disables the Fingerprint Reader Single Sign On device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable - Fingerprint Reader Single Sign On device is enabled.</li> <li>Disable - Fingerprint Reader Single Sign On device is disabled.</li> </ul>	Microsoft Windows, Linux
<b>Dell Reliable Memory Technology</b>	<p>Configures the system to detect and correct the software errors in a block of RAM. When enabled, the system detects and corrects the software errors.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Fault Tolerant Memory Log Clear</b>	<p>Enables or disables the Fault Tolerant Memory Log Clear option.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enabled — System clears fault tolerant memory log during the next boot.</li> <li>Disabled — Fault Tolerant Memory Log Clear option will be disabled, and no action will be taken during the next boot.</li> </ul> <p><b>NOTE: Fault Tolerant Memory Log Clear option will be reset to disabled state after log gets cleared.</b></p>	
<b>Fn Lock</b>	<p>Controls the behavior of the dual-function keys (&lt;F1&gt; — &lt;F12&gt;), when &lt;Fn&gt; key is pressed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — If disabled, holding the &lt;Fn&gt; key enables the secondary functions associated with the particular key.</li> <li>Enable — If enabled, holding the &lt;Fn&gt; key enables the labeled functions of the keys (&lt;F1&gt; — &lt;F12&gt;).</li> </ul>	Microsoft Windows, Linux
<b>Fn Lock Mode</b>	<p>Controls the behavior of the dual-function keys (&lt;F1&gt; — &lt;F12&gt;), when &lt;Fn&gt; key is pressed and when it is not.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — Holding &lt;Fn&gt; key enables the secondary functions associated with the particular key</li> <li>Enable — Without holding &lt;Fn&gt; key, the dual-function keys behave as labeled.</li> </ul>	Microsoft Windows, Linux
<b>Force PXE on Next Boot</b>	<p>Enables or disables the Force PXE on next boot in BIOS.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Front Panel USB Ports</b>	<p>Enables or disables the USB ports on the front of the chassis.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Front Power Button</b>	<p>Enables or disables the Front Power Button.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Full Screen Logo</b>	<p>Enables or disables the full screen logo.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>FX100 BIOS Access</b>	<p>Allows or blocks the remote user to access BIOS Setup via FX100 Portal.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul>	Microsoft Windows
<b>General Purpose Encryption</b>	<p>Enables or disables the general purpose encryption (GPE) on the system.</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	
<b>GPS on WWAN Radio</b>	<p>Enables or disables GPS WWAN Radio.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>GPS Radio</b>	<p>Enables or disables the internal GPS radio.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>Hard Disk Acoustic Mode</b>	<p>Sets the Hard Disk Acoustic Mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Bypass</li> <li>• Quiet</li> <li>• Suggested</li> <li>• Performance</li> </ul>	Microsoft Windows
<b>Hard-Disk Failover</b>	<p>Specifies which devices in the Hard-Disk Drive Sequence menu are attempted in the boot sequence. When set to OFF, only the first device in the list is attempted. When set to ON, all devices are attempted in order, as listed in the Hard-Disk Drive Sequence.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Hardware Prefetcher</b>	<p>Enables or disables the CPU's HW prefetcher.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Hard Drive Free Fall Protection</b>	<p>Enables or disables hard drive free fall protection.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Hardware Prefetch Training on Software Prefetch</b>	<p>Prevents hardware prefetcher from considering software prefetches when detecting strides for prefetch requests./ Hardware prefetcher considers software prefetches when detecting strides for prefetch requests.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>HDD Protection</b>	<p>If setting <b>On</b>, the HDD Protection OPRM will be loaded. If setting <b>Off</b>, the HDD Protection OPRM will be not loaded.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul>	
<b>HDD0 Fan Enable</b>	<p>Enables or disables checking errors on the fan controller FAN_HDD0. If the fan controller detects a valid fan, it enables it automatically.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>HDD1 Fan Enable</b>	<p>Enables or disables checking errors on the fan controller FAN_HDD1. If the fan controller detects a valid fan, it enables it automatically.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>HDD2 Fan Enable</b>	<p>Enables or disables checking errors on the fan controller FAN_HDD2. If the fan controller detects a valid fan, it enables it automatically.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>HDD3 Fan Enable</b>	<p>Enables or disables checking errors on the fan controller FAN_HDD3. If the fan controller detects a valid fan, it enables it automatically.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>HDD4 Fan Enable</b>	<p>Enables or disables checking errors on the fan controller FAN_HDD4. If the fan controller detects a valid fan, it enables it automatically.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Hot Undocking</b>	<p>Enables or disables warm and hot docking/undocking.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Hotkey to toggle WxAN Radio</b>	<p>Enables or disables the hotkey to toggle WxAN radio.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Ignition Enable</b>	<p>Enables or disables the external ignition pin. Disabled by default.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>Enable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> </ul>	
<b>Ignition On Delay</b>	<p>The delay is displayed in seconds, when the power button event is passed to the operating system to initiate the booting.</p> <p>Possible values are from (0 - 21600). By default the value is 5s.</p>	Microsoft Windows, Linux
<b>Ignition Off Delay</b>	<p>The delay is displayed in seconds until the power button event is passed to the operating system for shutting down the system.</p> <p>Possible values are from (0 - 21600). By default the value is 5s.</p>	Microsoft Windows, Linux
<b>Ignition De-bounce Cycle</b>	<p>De-Bounce Ignition Power Switch cycle time is displayed in milli seconds.</p> <p>Possible values are from (50 - 5000). By default the value is 50ms.</p>	Microsoft Windows, Linux
<b>I/O Module</b>	<p>Enables or disables the I/O module.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>I/O Module 2</b>	<p>Enables or disables the I/O module 2.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>I/O Module 3</b>	<p>Enables or disables the I/O module 3.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>I/O Module 4</b>	<p>Enables or disables the I/O module 4.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Intel Smart Connect Technology</b>	<p>Disables or enables the Intel Smart Connect technology.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Intel Speed Select Technology</b>	<p>Intel Speed Select Technology allows you to choose up to two additional base frequency conditions.</p> <p>Configuration 1: TDP Level 3</p> <p>Configuration 2: TDP Level 4</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Base</li> <li>Configuration 1</li> <li>Configuration 2</li> </ul>	Microsoft Windows, Linux
<b>Intel Speed Shift Technology</b>	<p>Disables or enables the Intel Speed Shift Technology.</p> <p>Possible values are:</p>	Microsoft Windows, Linux


BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>Intel Platform Trust Technology</b>	<p>Displays or hides the Intel Platform Trust Technology (PTT) device from the operating system on the next reboot. When disabled, the PTT device is not displayed to the operating system and no changes can be made to the PTT device or its content.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Intel Rapid Start Technology</b>	<p>Disables or enables the Intel Rapid Start Technology (iFFS) feature within the BIOS.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Intel Rapid Start Technology Timer</b>	<p>Allows configuring the time-out value for Intel Rapid Start Technology (IRST) mode.</p> <p>Possible value is:</p> <ul style="list-style-type: none"> <li>• 0 — 999</li> </ul> <p><b>NOTE: The value for IRST is a nonfixed value, which may change depending on the configuration.</b></p>	Microsoft Windows
<b>Intel Ready Mode Technology</b>	<p>Enables or disables Intel Ready Mode Technology (iRMT).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Integrated RAID</b>	<p>Enables or disables the Integrated RAID Controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Integrated SAS</b>	<p>Enables or disables the Integrated SAS Controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Integrated USB Hub</b>	<p>Sets the Integrated USB Hub to Compatible or High Speed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Internal USB</b>	<p>Enables or disables the Internal USB.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Internal USB Port</b>	<p>Enables or disables the Internal USB port.</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>Internal USB Port 1</b>	<p>Enables or disables the Internal USB port 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Internal USB Port 2</b>	<p>Enables or disables the Internal USB port 2.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>IDE</b>	<p>Defines whether the IDE controller is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Auto</li> </ul>	Microsoft Windows
<b>Intel Rapid Start Timer</b>	<p>Configures the timeout value (in minutes) for Intel Rapid Start Technology (IRST) mode. After the set timeout, the system enters IRST mode from the S3 system sleep mode. The acceptable values are in the range 0-999.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• integers ranging from 0 to 999</li> </ul>	Microsoft Windows
<b>Keyboard Backlight Active Color</b>	<p>Displays or sets an active color for the keyboard backlight for the rugged systems.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0— White</li> <li>• 1— Red</li> <li>• 2— Green</li> <li>• 3— Blue</li> <li>• 4 — Customcolor1</li> <li>• 5— Customcolor2</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Backlight Custom Color 1</b>	<p>Displays and configures the custom color 1 by specifying the Red, Green and Blue (RGB) values. The color can be selected using RGB components by mentioning it in 'R,G,B' format. Each color component value ranges from 0 to 255.</p> <p>Possible value is:</p> <ul style="list-style-type: none"> <li>• 0–255, 0–255, 0–255 — Red, Green, Blue</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Backlight Custom Color 2</b>	<p>Displays and configures the custom color 2 by specifying the Red, Green and Blue (RGB) values. The color can be selected using RGB components by mentioning it in 'R,G,B' format. Each color component value ranges from 0 to 255.</p> <p>Possible value is:</p> <ul style="list-style-type: none"> <li>• 0–255, 0–255, 0–255 — Red, Green, Blue</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Keyboard Backlight Color Enable</b>	<p>Displays or enables the supported colors on the keyboard backlight for the rugged systems. Press Fn+C to switch among the enabled colors.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — None</li> <li>• 1 — White</li> <li>• 2 — Red</li> <li>• 3 — Green</li> <li>• 4 — Blue</li> <li>• 5 — Customcolor1</li> <li>• 6 — Customcolor2</li> </ul> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• You can enable multiple colors at a time.</li> <li>• If '0 — None' is selected, keyboard backlight color switching by pressing Fn+C will not be possible. The value '0 — None' cannot be combined with any other color.</li> </ul>	Microsoft Windows
<b>Keyboard Click</b>	<p>Enables or disables the keyboard to 'click' each time a key is pressed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Backlight Timeout on AC</b>	<p>Configures the timeout value for the keyboard backlight when an AC adapter is plugged into the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 5 — Keyboard backlight stays on for 5 seconds.</li> <li>• 10 — Keyboard backlight stays on for 10 seconds.</li> <li>• 15 — Keyboard backlight stays on for 15 seconds.</li> <li>• 30 — Keyboard backlight stays on for 30 seconds.</li> <li>• 65 — Keyboard backlight stays on for 1 minute.</li> <li>• 69 — Keyboard backlight stays on for 5 minutes.</li> <li>• 79 — Keyboard backlight stays on for 15 minutes.</li> <li>• 191 — keyboard backlight always stays on.</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Backlight Timeout on Battery</b>	<p>Configures the timeout value for the keyboard backlight when the system is running only on battery power.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 5 — Keyboard backlight stays on for 5 seconds.</li> <li>• 10 — Keyboard backlight stays on for 10 seconds.</li> <li>• 15 — Keyboard backlight stays on for 15 seconds.</li> <li>• 30 — Keyboard backlight stays on for 30 seconds.</li> <li>• 65 — Keyboard backlight stays on for 1 minute.</li> <li>• 69 — Keyboard backlight stays on for 5 minutes.</li> <li>• 79 — Keyboard backlight stays on for 15 minutes.</li> <li>• 191 — keyboard backlight always stays on.</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Backlight with AC</b>	<p>Enables or disables the keyboard backlight when the system is running on AC power if an AC power adapter is plugged in.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enable — Enables the keyboard backlight even after the 10 seconds of inactivity.</li> <li>Disable — Disables the timer that fades the keyboard backlight after 10 seconds of inactivity.</li> </ul> <p><b>NOTE:</b> If the keyboard backlight is disabled by pressing &lt;Fn&gt;&lt;F10&gt;, then the keyboard backlight stays off even if the AC power adapter is plugged in.</p>	
<b>Keyboard Click</b>	<p>Enables or disables the keyboard to ‘click’ each time a key is pressed.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Keyboard Error Reporting</b>	<p>Enables or disables reporting of Keyboard errors by POST.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Keyboard Illumination</b>	<p>Sets the Keyboard Illumination to Enable, Disable, or Auto.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> <li>Auto</li> <li>25</li> <li>50</li> <li>75</li> <li>100</li> </ul>	Microsoft Windows, Linux
<b>Keypad</b>	<p>Changes the means of enabling the keypad.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>By numlock</li> <li>BY FN key</li> </ul>	Microsoft Windows, Linux
<b>Latitude ON</b>	<p>Enables or disables Latitude On.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Latitude ON Flash</b>	<p>Enables or disables the ability to boot to the Latitude ON Flash module.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Launch Control Policy</b>	<p>Set the Intel Software Guard Extensions Launch Control Policy.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Intel Locked Mode — Locks SGX to support only Intel Enclave Launch Provider.</li> <li>Runtime Selectable Mode — Allows OS or Hypervisor control of Enclave Launch Provider.</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>LCD Brightness On AC</b>	<p>Sets the panel brightness in effect when the system is using AC power.</p> <p>Possible values are: Integers ranging from 0 to 15</p>	Linux
<b>LCD Brightness On Battery</b>	<p>Sets the panel brightness in effect when the system is running on battery power.</p> <p>Possible values are: Integers ranging from 0 to 15</p>	Linux
<b>Lid Switch</b>	<p>Enables or disables the lid switch functions.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Display will not be affected when lid is closed.</li> <li>• Enable — OS setting determines the display behavior when lid is closed.</li> </ul>	Microsoft Windows, Linux
<b>Liquid Cooler 1</b>	<p>Enables or disables the liquid cooler 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable — Enables the liquid cooler 1.</li> <li>• Disable — Disables the liquid cooler 1.</li> </ul>	Microsoft Windows, Linux
<b>Liquid Cooler 2</b>	<p>Enables or disables the liquid cooler 2.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable — Enables the liquid cooler 2.</li> <li>• Disable — Disables the liquid cooler 2.</li> </ul>	Microsoft Windows, Linux
<b>Limit CPUID Value</b>	<p>Enables or disables the Limit CPUID Value feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>M2 PCIE SSD 0</b>	<p>Enables or disables M2 PCIE SSD 0.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>M2 PCIE SSD 1</b>	<p>Enables or disables M2 PCIE SSD 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Management Driver</b>	<p>Sets to Present: the system-management instrumentation sets this BIOS setting when it loads to instruct that BIOS that operating system level software is handling any out-of-range management condition — if a critical threshold is passed, the driver takes responsibility for shutting down the operating system and powering off the system. The instrumentation is responsible for de-registering itself via the Absent BIOS setting when it unloads. Implementation.</p> <p><b>NOTE: To maintain compatibility with Dell Command   Monitor, a BIOS that implements this BIOS setting via an Indexed I/O access method must ensure that an AND-mask of 0xFB and an OR-value of 0x04 maintains</b></p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<p><b>the present status— i.e. the status is in bit 2 of the indexed I/O location.</b></p> <p>Sets to Absent: this BIOS setting indicates to the system BIOS that any system-management monitoring is its responsibility. If an out-of-range management condition occurs in the system, the BIOS powers off the system to prevent hardware damage. Implementation Note: To maintain compatibility with Dell Command   Monitor, a BIOS that implements of this BIOS setting via an Indexed I/O access method must ensure that an AND-mask of 0xFB and an OR-value of 0x00 maintains the <b>absent</b> status — i.e. the status is in bit 2 of the indexed I/O location.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Present</li> <li>• Absent</li> </ul>	
<b>Master Password Lockout</b>	<p>Enables or disables master password settings.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enabled — The master password cannot be used to <ul style="list-style-type: none"> <li>• clear other passwords</li> <li>• unlock and access Hard Disk Drive</li> <li>• erase data from Hard Disk Drive</li> </ul> </li> <li>• Disabled — The master password can be used to <ul style="list-style-type: none"> <li>• clear other passwords</li> <li>• unlock and access Hard Disk Drive</li> <li>• erase data from Hard Disk Drive</li> </ul> </li> </ul>	Microsoft Windows, Linux
<b>Media Card</b>	<p>Enables or disables the media card. If disabled, the media card is hidden from the OS and not seen in the Device Manager.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Media Card and 1394</b>	<p>Enables or disables the Media Card and 1394 devices.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Memory Fault Tolerance Time Limit</b>	<p>Configures the time limit value of the memory fault tolerance. Possible values are: 0 to 36000 in 1/10th of a second.</p> <p>Possible values are: 0 to 36000</p> <p> <b>NOTE: Memory fault tolerance feature is disabled when the value is set to 0.</b></p>	Microsoft Windows, Linux
<b>Memory Performance Monitor</b>	<p>Enables or disables the memory performance monitor feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Memory RSA</b>	<p>Enables or disables the Reliability Availability Serviceability (RSA) support on memory modules.</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>MEMs Sensors</b>	<p>Enables or disables the Micro Electro Mechanical Sensors.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Microphone</b>	<p>Enable or disable notebook internal or external microphone.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>MiniPCI Device</b>	<p>Enables or disables the internal PCI device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Multiple CPU Cores</b>	<p>Enables or disables Multiple CPU Core support on next boot. The Disabled state prevents the OS from seeing additional cores present on a single CPU package.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>MmioAbove4Gb</b>	<p>Enables or disables the Memory mapped I/O above 4GB option.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Modern Standby Control</b>	<p>Determines which sleep mode is used by the operating system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• OS Automatic Selection — Allows the operating system to select the appropriate sleep mode automatically.</li> <li>• Force S3 — Forces the operating system to use the S3 sleep mode only.</li> </ul>	Microsoft Windows, Linux
<b>Module Bay Device</b>	<p>Enables or disables the Module Bay Device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Module Bay Battery Charge Configuration</b>	<p>Configures the module bay battery charging.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 - Standard Charge — Charges the battery over a long period of time</li> <li>• 2 - Express Charge — Switches the module bay battery to Express Charge mode using the express charging algorithm</li> </ul>	Microsoft Windows
<b>Mouse</b>	<p>Sets the Pointing Device.</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>Monitor Toggling</b>	<p>Enables or disables Monitor Toggling.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Multi Display</b>	<p>Enables or disables the multi-display feature, that is integrated and add-in Gfx.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Near Field Computing</b>	<p>Enables or disables the Near Field Computing (NFC) device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>NIC 1</b>	<p>This property defines whether the built-in NIC 1 is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable non PXE</li> <li>• Enable</li> <li>• Enable iSCSI</li> <li>• Enable RPL</li> <li>• Enable image server</li> </ul>	Microsoft Windows, Linux
<b>NIC 2</b>	<p>This property defines whether the built-in NIC 2 is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable non PXE</li> <li>• EnabledwithoutPXE</li> <li>• Enable iSCSI</li> <li>• Enable RPL</li> <li>• Enable image server</li> </ul>	Microsoft Windows, Linux
<b>Network Activity LED</b>	<p>This selection will allow the Activity LED to be controlled by an ACPI OS and driver/ set Activity LED as a wireless LAN radio on/off indicator/ force the Activity LED to be always OFF.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable ACPI OS control</li> <li>• Wireless LAN Indicator</li> </ul>	Microsoft Windows, Linux
<b>Node Interleaving</b>	<p>Enables or disables Node Interleave.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>NMI Button</b>	<p>Enables or disables the NMI Button.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows
<b>Num Lock</b>	<p>Enables or disables Num Lock.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>On Reader</b>	<p>Enables or disables the Reader feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Onboard 1394</b>	<p>Enables or disables on-board 1394 controller on next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Onboard Modem</b>	<p>Enables or disables the Onboard Modem.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Onboard Sound Device</b>	<p>Enables or disables the onboard sound devices.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Onboard Unmanaged NIC</b>	<p>Configures the state of the Onboard Unmanaged Network Interface Card (NIC).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the secondary, unmanaged network interface card.</li> <li>• Enable — Enables the secondary, unmanaged network interface card.</li> <li>• Enabled with PXE — Enables the secondary, unmanaged network interface card and supports the preboot execution environment for network boot.</li> </ul>	Microsoft Windows, Linux
<b>On-board Serial ATA 2 Controller</b>	<p>Enable or disables on-board Serial ATA 2 controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows
<b>On Screen Buttons</b>	<p>Configures the onscreen display (OSD) of the All-In-One systems.</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	
<b>Optical Drive Controller</b>	<p>Enables or disables the Optical Drive Controller.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows
<b>Optimus</b>	<p>Enables or disables the Optimus.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>	Microsoft Windows
<b>Optional Boot Sequence</b>	<p>Allows or prevents the installation of Windows operating system on client systems with more than one operating system volume.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>	Microsoft Windows
<b>OpRomUIProtection</b>	<p>Prompts you to enter the administrator password to enter the OptionROM user interface if the password has been set.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>OROM Keyboard Access</b>	<p>Sets an option to enter the Option ROM Configuration screens using hotkeys during boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> <li>• Onetime Enable — Allows configuring the access to Option ROM using hotkeys during system startup.</li> </ul>	Microsoft Windows, Linux
<b>OS Install Mode</b>	<p>Enables or disables OS Install Mode (Limit System Memory feature).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows
<b>Parallel Mode</b>	<p>This property defines the parallel port mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• AT</li> <li>• PS2</li> <li>• ECP</li> <li>• EPP</li> <li>• ECP DMA1</li> <li>• ECP DMA3</li> </ul>	Microsoft Windows, Linux
<b>Parallel Port</b>	<p>This property defines the parallel port configuration.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>· LPT1</li> <li>· LPT2</li> <li>· LPT3</li> </ul>	
<b>PartComponent</b>	<p>Defines the boot sequence for the next system boot. Boot Sequence information can be found under the class DCM_OrderedComponent.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Diskette first</li> <li>· HD only</li> <li>· Device list</li> <li>· CDROM first</li> </ul>	Microsoft Windows
<b>Password Bypass</b>	<p>Sets the Password Bypass feature to one of the supported settings.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Off</li> <li>· Reboot</li> <li>· Resume</li> <li>· Reboot and resume</li> </ul>	Microsoft Windows, Linux
<b>Password Status Lock</b>	<p>Password Status lock/unlock.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Locked</li> <li>· Unlocked</li> </ul>	Microsoft Windows, Linux
<b>PC Card</b>	<p>Enables or disables the PC Card.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows
<b>PC Card and 1394</b>	<p>Enables or disables the PC Card and 1394 devices.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows
<b>PCI Bus</b>	<p>Sets the maximum number of PCI bus count for the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· 64</li> <li>· 128</li> <li>· 256</li> </ul>	Microsoft Windows, Linux
<b>PCIe Bus Allocation</b>	<p>PCIe Bus Allocation controls on how the PCIe bus resources are allocated among the PCIe SLOTS.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Default</li> <li>· Optimize for Thunderbolt</li> <li>· Option1</li> <li>· Option2</li> <li>· Option3</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>PCIe RSA</b>	<p>Enables or disables the Reliability Availability Serviceability (RSA) support on PCIe devices.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Pci Resource Allocation Ratio</b>	<p>Allocates PCI resources, buses, memory-mapped I/O (MMIO) space, and I/O space. If set to <b>Allocate Evenly</b>, equal amount of memory is allocated to all the resources when two CPUs are installed. When set to <b>Allocate More to CPU1</b>, larger amount of device-specific memory is allocated, which in turn reduces the usable memory on a system with a 32-bit operating system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Allocate Evenly</li> <li>• Allocate More to CPU1</li> </ul>	Microsoft Windows
<b>Pci Mmio Space Size</b>	<p>It allows you to reserve large or small device-specific memory regions to decrease or increase the usable memory on systems with a 32-bit operating system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Small — Allocates a small region of memory to PCI memory mapped I/O.</li> <li>• Large — Allocates a large region of memory to PCI memory mapped I/O. This reserves the large device-specific memory regions, but reduces the amount of usable memory in 32-bit operating system.</li> </ul>	Microsoft Windows, Linux
<b>PCI Slots</b>	<p>Enables or Disables the PC Card.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>PCIE0</b>	<p>Enables or Disables the PCIE1 Card.</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>PCIE1</b>	<p>Enables or Disables the PCIE0 Card.</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>PCIE0_CPU1</b>	<p>Enables or Disables the PCIE0_CPU1 Card.</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>PCIE1_CPU1</b>	<p>Enables or Disables the PCIE1_CPU1 Card.</p> <p>Possible values are: 1,2</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>PCMCIA</b>	<p>Enables or disables the PCMCIA device slot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Pen Missing Indication</b>	<p>Enables or disables the Missing Pen Indication.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Pen Resume On</b>	<p>Enables or disables the Resume On Pen setting.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Peak Shift</b>	<p>Peak Shift can be used to minimize AC consumption during peak power times of day. For each weekday listed, set a start and end time to run in Peak Shift mode. During these times the system will run from the battery even if the AC is attached as long as the battery stays above the threshold specified in the Battery threshold field. After the end time specified the system will run from AC if attached but will not charge the battery. The system will again function normally using AC and recharging the battery after the Charge Start time is specified.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 — Disable</li> <li>• 2 — Enable</li> </ul>	Microsoft Windows, Linux
<b>Peak Shift Sun</b>	<p>Configures the power usage configuration for Sunday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Sun StartHour</li> <li>• Peak Shift Sun StartMin</li> <li>• Peak Shift Sun EndHour</li> <li>• Peak Shift Sun EndMin</li> <li>• Peak Shift Sun ChargeStartHour</li> <li>• Peak Shift Sun ChargeStartMin</li> </ul> <p><b>(i) NOTE: To use Peak Shift mode, the values of Peak Shift Start Time, Peak Shift End Time, Peak Shift Charge Start Time, and Peak Shift battery threshold are necessary.</b></p> <p><b>(i) NOTE: It is recommended to input values as per the following: Start Time &lt;= End Time &lt;= Charge Start Time. Dell Command   Monitor can set the</b></p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
<b>Peak Shift Mon</b>	<p><b>out-of-range values. BIOS behavior is unknown at this point of time for such values.</b></p> <p><b>NOTE:</b> The values defined for Minute field are 0, 15, 30 and 45. In case you set any other value, the value is round to the lower defined value.</p> <p>Configures the power usage configuration for Monday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Mon StartHour</li> <li>• Peak Shift Mon StartMin</li> <li>• Peak Shift Mon EndHour</li> <li>• Peak Shift Mon EndMin</li> <li>• Peak Shift Mon ChargeStartHour</li> <li>• Peak Shift Mon ChargeStartMin</li> </ul>	Microsoft Windows
<b>Peak Shift Tue</b>	<p>Configures the power usage configuration for Tuesday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 – 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Tue StartHour</li> <li>• Peak Shift Tue StartMin</li> <li>• Peak Shift Tue EndHour</li> <li>• Peak Shift Tue EndMin</li> <li>• Peak Shift Tue ChargeStartHour</li> <li>• Peak Shift Tue ChargeStartMin</li> </ul>	Microsoft Windows
<b>Peak Shift Wed</b>	<p>Configures the power usage configuration for Wednesday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Wed StartHour</li> <li>• Peak Shift Wed StartMin</li> </ul>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
<b>Peak Shift Thu</b>	<ul style="list-style-type: none"> <li>• Peak Shift Wed EndHour</li> <li>• Peak Shift Wed EndMin</li> <li>• Peak Shift Wed ChargeStartHour</li> <li>• Peak Shift Wed ChargeStartMin</li> </ul> <p>Configures the power usage configuration for Thursday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Thu StartHour</li> <li>• Peak Shift Thu StartMin</li> <li>• Peak Shift Thu EndHour</li> <li>• Peak Shift Thu EndMin</li> <li>• Peak Shift Thu ChargeStartHour</li> <li>• Peak Shift Thu ChargeStartMin</li> </ul>	Microsoft Windows
<b>Peak Shift Fri</b>	<p>Configures the power usage configuration for Friday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Fri StartHour</li> <li>• Peak Shift Fri StartMin</li> <li>• Peak Shift Fri EndHour</li> <li>• Peak Shift Fri EndMin</li> <li>• Peak Shift Fri ChargeStartHour</li> <li>• Peak Shift Fri ChargeStartMin</li> </ul>	Microsoft Windows
<b>Peak Shift Sat</b>	<p>Configures the power usage configuration for Saturday.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 0 — 23 — Start Hour</li> <li>• 0 — 59 — Start Minute</li> <li>• 0 — 23 — End Hour</li> <li>• 0 — 59 — End Minute</li> <li>• 0 — 23 — Charge Start Hour</li> <li>• 0 — 59 — Charge Start Min</li> </ul> <p>BIOS setting names for Set operation:</p> <ul style="list-style-type: none"> <li>• Peak Shift Sat StartHour</li> <li>• Peak Shift Sat StartMin</li> <li>• Peak Shift Sat EndHour</li> </ul>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Peak Shift Sat EndMin</li> <li>Peak Shift Sat ChargeStartHour</li> <li>Peak Shift Sat ChargeStartMin</li> </ul>	
<b>Peak Shift Battery Threshold</b>	<p>If Battery stays above the threshold system will run from battery even if AC is attached during the times as configured in Start/End/Charge Start time.</p> <p>Possible value is based on user input.</p> <ul style="list-style-type: none"> <li>&gt;= 15% Possible Value &lt;= 100%.</li> </ul> <p>BIOS setting name for Set operation:</p> <ul style="list-style-type: none"> <li>Peak Shift Battery Threshold</li> </ul>	Microsoft Windows, Linux
<b>Pointing Device</b>	<p>This property defines whether the built-in pointing device port is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>External serial</li> <li>External PS2</li> <li>SW TPAD</li> </ul>	Microsoft Windows, Linux
<b>POST Help Desk Key</b>	<p>Enables or Disables POST MEBx Key.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul>	Microsoft Windows
<b>POST MEBx Key Setting</b>	<p>Enables or Disables POST MEBx Key.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul>	Microsoft Windows, Linux
<b>POST Testing</b>	<p>Enables or Disables fast booting.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Min</li> <li>Max</li> <li>Auto</li> </ul>	Microsoft Windows, Linux
<b>Power Button</b>	<p>Enables, disables, or Partially disables the power button.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> <li>Partial disable</li> </ul>	Microsoft Windows, Linux
<b>Power Management</b>	<p>This property defines the power management settings.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Min</li> <li>Regular</li> <li>Max</li> </ul>	Microsoft Windows
<b>Power Warning</b>	<p>Enables or disables performance limitation messages based on power supply capacity.</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Power On Lid Open</b>	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul> <p>Sets the Power On Lid Open feature.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <b>Enable</b> - If the feature is set to enable, the system powers up from the off state whenever the lid is opened. This system powers on when powered either by the AC adapter or the system battery.</li> <li>• <b>Disable</b> - If this feature is set to disable, the system does not power up from the off state whenever the lid is opened.</li> </ul>	Microsoft Windows, Linux
<b>Power Off Intel 8260 When Engaging Stealth Mode</b>	<p>Enables or disables the Power Off Intel 8260 When Engaging Stealth Mode feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enabled — Disconnects power from the Intel 8260 Wireless NIC when the Stealth Mode is enabled.</li> <li>• Disabled — Does not disconnect power from the Intel 8260 Wireless NIC when the Stealth Mode is enabled.</li> </ul> <p><b>NOTE: Disabling Stealth Mode does not automatically restore the power or functionality of the card until the next complete boot. This non-standard mode is available as an option for Stealth Mode control of the Intel 8260 card for the following use cases: pre-boot applications, Linux OS, or Windows OS without Dell recommended drivers.</b></p>	Microsoft Windows, Linux
<b>Power Usage Mode</b>	<p>Sets the system power usage modes.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>• <b>Power Saver</b> - This mode reduces processor sustained power to benefit battery life depending on usage cases. This mode may reduce system performance.</li> <li>• <b>Balanced</b> - This mode balances performance, noise, temperature, and battery life. This is the default mode.</li> <li>• <b>Performance</b> - This mode uses processor typical power and utilizes discrete graphics.</li> <li>• <b>High Performance</b> - This mode increases processor sustained power to produce higher system performance and produces more noise, increases system surface temperature, and reduces the battery life.</li> </ul>	Microsoft Windows, Linux
<b>PPI Bypass for Block SID Command</b>	<p>Enables or disables the PPI Bypass for Block SID Command feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>PPI Bypass for TPM Clear</b>	<p>Enables or disables the PPI Bypass for TPM Clear feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Processor CMP</b>	Rolls the number of enabled cores in each processor. By default, the maximum number of cores per processor will be enabled. Possible values are: <ul style="list-style-type: none"> <li>· All</li> <li>· 1</li> <li>· 2</li> <li>· 4</li> <li>· 6</li> <li>· 8</li> <li>· 10</li> <li>· 12</li> <li>· 14</li> <li>· 16</li> </ul>	Microsoft Windows, Linux
<b>Processor Core Count</b>	Enables the number of cores in each processor. Possible values are: <ul style="list-style-type: none"> <li>· 0 — Enables all cores.</li> <li>· 1–N — Enables the specified number of cores.</li> </ul>	Microsoft Windows, Linux
<b>Processor Execute Disable</b>	Enables or disables the No Execute (NX) flag. Possible values are: <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>Processor HT Assist</b>	Allows user to disable the Probe Filter chipset option from BIOS setup. There are some applications that may have lower performance with the chipset feature enabled. Possible values are: <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>Processor Virtualization Technology</b>	Enables or disables processor Virtualization. Possible values are: <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>Processor C State Control</b>	Enables or disable the C States Control. Possible values are: <ul style="list-style-type: none"> <li>· Enable</li> <li>· Disable</li> </ul>	Microsoft Windows, Linux
<b>Processor Core Based Turbo Mode</b>	Enables or Disables Single Core Turbo Mode. Possible values are: <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>Processor Logical Processor (HyperThreading)</b>	Enables or Disables hyperthreading on next boot. On some Dell platforms, this property will show Enabled or Disabled despite the platform not supporting hyperthreading. The platforms in question are those that support Multi-Core processor technology, but do not support hyperthreading. In this case, the	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>property actually toggles the multi-core capability on and off, rather than hyperthreading.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	
<b>Primary Battery Charge Configuration</b>	<p>Configures the primary battery charging.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Standard Charge — Charges the battery over a long period of time</li> <li>• 2 = Express Charge — Switches the primary battery to Express Charge mode using the express charging algorithm</li> <li>• 3 = AC Use — Recommended setting for users who primarily operate the battery when it is plugged in</li> <li>• 4 = Auto Charge — The battery places itself in a mode based on periodic evaluation of customer usage to deliver the best balance of capacity</li> <li>• 5 = Custom Charge — The battery starts and stops charging based on the user input</li> </ul>	Microsoft Windows, Linux
<b>Primary Battery Custom Charge Limit</b>	<p>Charges the battery based on the user input.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• 1 = Primary Battery Custom Charge Start Limit — Is applicable to the DCIM_BIOSService for setting the start limit for charging the battery.</li> <li>• 2 = Primary Battery Custom Charge Stop Limit — Is applicable to the DCIM_BIOSService for setting the stop limit for charging the battery.</li> </ul> <p>Possible values for the Start and Stop limit are:</p> <ul style="list-style-type: none"> <li>• Start limit = 50 — 95</li> <li>• Stop limit = 55 — 100</li> <li>• Granularity — Dead band in binary format. For example, if the dead band is 5%, the <b>stop charging</b> value is 5% greater than the <b>start charging</b> value, but is not allowed to exceed 100.</li> </ul>	Microsoft Windows
<b>Primary Battery Custom Charge Start Limit</b>	<p>Sets the start limit for charging the battery.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Integers ranging from 50 to 95</li> </ul>	Linux
<b>Primary Battery Custom Charge Stop Limit</b>	<p>Sets the stop limit for charging the battery.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Integers ranging from 55 to 100</li> </ul>	Linux
<b>Primary IDE Channel, Master Device</b>	<p>Enables or Disables primary Parallel ATA master channel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows
<b>Primary IDE Channel, Slave Device</b>	<p>Enables or disables primary Parallel ATA slave channel.</p> <p>Possible values are:</p>	Microsoft Windows


BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Primary Video Device Slot</b>	<p>Configures the slot for primary video display.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 — Sets the onboard video device slot as primary video device slot.</li> <li>1-15 — Sets the specified slot number as a primary video device slot.</li> <li>255 — Scans PCI buses and uses the first video device slot, found with video card as a primary video device slot.</li> </ul> <p><b>NOTE: If a video card is not available in the specified slot number, the system will scan the PCI buses and uses the first video device slot, found with video card as a primary video device.</b></p>	Microsoft Windows, Linux
<b>Prompt On Error</b>	<p>Enables or disable the Prompt on Error.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Rear Single USB</b>	<p>Allows the users to electrically enable or disable the Rear Single USB ports. If disabled, they are unusable in any OS.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>On</li> </ul>	Microsoft Windows, Linux
<b>Rear Dual USB 2nd stack</b>	<p>Enables or disable the Rear Dual USB 2nd stack.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Rear Quad USB</b>	<p>This feature allows the users to electrically enable or disable the Rear Quad USB ports. If disabled, they are unusable in any OS.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Rear USB Ports</b>	<p>Enables or disables all the rear ports.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Rear USB 3 Port</b>	<p>Enables or disables the third rear USB port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Report Logo Type</b>	<p>Sets Dell logo or Custom logo.</p> <p>Possible values are: 0,1</p>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• Dell logo</li> <li>• Custom logo</li> </ul>	
<b>Radio Transmission</b>	<p>Enables or disables the radio transmission (MiniPCI Wireless or Bluetooth module).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Rugged Dock Non-Video Devices</b>	<p>Enables or disables all the non-video devices (serial, audio, LAN, and USB ports) on a rugged dock.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Sata Controllers</b>	<p>Enables or disable all SATA Controllers.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>SATA DIPM</b>	<p>This property will allow users to disable or enable the feature that allows SATA HDDs to initiate link power management transitions.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>Secondary IDE Channel, Master Device</b>	<p>Enables or disables secondary Parallel ATA master channel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows
<b>Secondary IDE Channel, Slave Device</b>	<p>Enables or disables secondary Parallel ATA slave channel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows
<b>Selective USB</b>	<p>Enable Selective USB feature to disable all USB ports, except for the 2 Selective USB ports. This option will allow only keyboard/mouse connected to the Selective USB ports for the boot process to continue.</p> <p>Disable Selective USB feature to resume normal USB status and normal boot procedure.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>SATA Port 0</b>	<p>Enables or disables Serial ATA channel 1.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>SATA Port 1</b>	Enables or disables Serial ATA channel 2. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 2</b>	Enables or disables Serial ATA channel 3. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 3</b>	Enables or disables Serial ATA channel 4. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 4</b>	Enables or disables Serial ATA channel 5. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 5</b>	Enables or disables Serial ATA channel 6. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 6</b>	Enables or disables Serial ATA channel 7. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 7</b>	Enables or disables Serial ATA channel 8. Possible values are: <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SATA Port 8</b>	Enables or disables Serial ATA channel 9. Possible values are: 1, 2 <ul style="list-style-type: none"> <li>• Off</li> <li>• Auto</li> </ul>	Microsoft Windows, Linux
<b>SD Card Boot</b>	Enables or disables the system to boot from SD card. Possible values are: <ul style="list-style-type: none"> <li>• Enabled — Allows the system to boot from SD card.</li> <li>• Disabled — Restricts the system to detect SD card and boot from the SD card.</li> </ul>	Microsoft Windows, Linux
<b>Secure Boot</b>	The BIOS performs a Secure Boot authentication while attempting to boot from a UEFI partition. It refers to this setting to decide on the POST behavior. Possible values are:	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enable — When enabled, BIOS only performs Secure Boot and boot in UEFI mode without loading the Compatibility Support Model (CSM).</li> </ul> <p><b>i</b> <b>NOTE: You can disable secure boot only from the BIOS setup screen.</b></p>	
<b>Secure Boot Mode</b>	<p>Configures the Secure Boot Mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Deployed Mode</li> <li>Audit Mode</li> </ul>	Microsoft Windows, Linux
<b>Secure Boot Policy</b>	<p>Configures the secure boot policy.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Standard — The BIOS uses the system manufacturer's keys and certificates to authenticate preboot images.</li> <li>Custom — The BIOS uses user-defined keys and certificates. Secure Boot Policy is Standard by default.</li> </ul>	Microsoft Windows, Linux
<b>Secure Guard Extensions</b>	<p>Configures the Software Guard Extensions (SGX) feature. You can select Enabled or Software Controlled if this option is Disabled.</p> <p><b>i</b> <b>NOTE: Using Dell Command   Monitor, you cannot do the following:</b></p> <ul style="list-style-type: none"> <li><b>Disable this feature if the current state is Enabled or Software Controlled</b></li> <li><b>Enable this feature if the current state is Software Controlled</b></li> <li><b>Change this feature to Software Controlled if the current state is Enabled</b></li> </ul> <p><b>i</b> <b>NOTE: One of the methods of configuring the Software Guard Extensions (SGX) feature is from the BIOS setup screen.</b></p>	Microsoft Windows, Linux
<b>Serial Communications</b>	<p>Sets the Serial Communication.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>On without console redirection</li> <li>On with console redirection (COM1)</li> <li>On with console redirection (COM2)</li> <li>On with console redirection</li> </ul>	Microsoft Windows
<b>Serial Port 1</b>	<p>Configures the 1st serial port of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — Disables the 1st serial port.</li> <li>Auto — Enables the auto-configuration of the 1st serial port.</li> <li>COM1</li> <li>COM2</li> <li>COM3</li> <li>COM4</li> <li>BMC Serial</li> <li>BMC NIC</li> </ul>	Microsoft Windows, Linux


BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>• RAC</li> <li>• COM1BMC</li> <li>• RS232</li> <li>• RS422</li> <li>• RS485</li> </ul>	
<b>Serial Port 2</b>	<p>Configures the 2nd serial port of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the 2nd serial port.</li> <li>• Auto — Enables the auto-configuration of the 2nd serial port.</li> <li>• COM2</li> <li>• COM4</li> <li>• RS232</li> <li>• RS422</li> <li>• RS485</li> </ul>	Microsoft Windows, Linux
<b>Serial Port 3</b>	<p>Configures the 3rd serial port of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the 3rd serial port.</li> <li>• Auto — Enables the auto-configuration of the 3rd serial port.</li> <li>• RS232</li> <li>• RS422</li> <li>• RS485</li> </ul>	Microsoft Windows, Linux
<b>Serial Port 4</b>	<p>Configures the 4th serial port of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the 4th serial port.</li> <li>• Auto — Enables the auto-configuration of the 4th serial port.</li> <li>• RS232</li> <li>• RS422</li> <li>• RS485</li> </ul>	Microsoft Windows, Linux
<b>Serial Port 5</b>	<p>Configures the system's 5th serial port.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the 5th serial port.</li> <li>• Auto — Enables the auto-configuration of the 5th serial port.</li> </ul>	Microsoft Windows, Linux
<b>Serial Port 6</b>	<p>Configures the 6th serial port of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the 6th serial port.</li> <li>• Auto — Enables the auto-configuration of the 6th serial port.</li> </ul>	Microsoft Windows, Linux
<b>SERR DMI Message</b>	<p>Enables or Disables SERR DMI Messages.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• On</li> </ul>	Microsoft Windows, Linux


BIOS Settings Name	Description	Supported Operating System(s)
<b>Service OS Clear</b>	<p>Deletes the service OS non-volatile region.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Enable - Deletes the service OS non-volatile region and changes the BIOS setting status to Disabled.</li> <li>• Disable - Does not delete the service OS non-volatile region.</li> </ul>	Microsoft Windows, Linux
<b>Set CMOS To Default</b>	<p>Request or do not request a default of CMOS values on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>SFP</b>	<p>Enables or disables Small Formfactor Pluggable (SFP) device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable — Disables the SFP device.</li> <li>• Enable — Enables the SFP device.</li> <li>• Enable With PXE— Enables the SFP device with PXE support.</li> </ul> <p> <b>NOTE: SFP device is listed as boot device only if this BIOS setting is enabled with PXE.</b></p>	Microsoft Windows, Linux
<b>SFP Wake on LAN</b>	<p>Possible values:</p> <ul style="list-style-type: none"> <li>• SFP - Allows the system to wake-up by special SFP signals.</li> <li>• LAN or PXE - Allows the system to wake-up either by LAN, or by SFP signals.</li> <li>• SFP PXE - Allows the system to wake-up by SFP signals, and immediately boot to PXE.</li> </ul>	Microsoft Windows, Linux
<b>Side USB Ports</b>	<p>Enables or disables all the side ports.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Sign of Life Indication</b>	<p>During POST, system acknowledges that the power button has been pressed in a manner that the user can either hear or feel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Signed Firmware Update</b>	<p>Enforces the verification of digital signatures in the BIOS update payload before updating the BIOS. Once enabled, the system BIOS cannot be updated to any revision that does not contain a valid digital signature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>SmartCard Reader</b>	<p>Enables or Disables the Smart Card Reader.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• Off</li> <li>• Enable</li> </ul>	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
<b>Slice Battery Custom Charge Limit</b>	<p>Customs the charging limit.</p> <p>Possible values are: 50, 100, 5</p> <ul style="list-style-type: none"> <li>· Allow Start Charging Limit</li> <li>· Allow Stop Charging Limit</li> <li>· Allow Stop Granularity</li> </ul>	Microsoft Windows
<b>SMART Errors</b>	<p>Enables or Disables SMART Errors.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>SMM Security Mitigation</b>	<p>Enables or Disables SMM Security Mitigation.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Enable</li> <li>· Disable</li> </ul>	Microsoft Windows, Linux
<b>Sound Device</b>	<p>Status of the system's built-in sound device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows, Linux
<b>Speaker</b>	<p>The volume of the speaker.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> <li>· Low</li> <li>· Medium</li> <li>· High</li> </ul>	Microsoft Windows, Linux
<b>SpeedStep</b>	<p>Sets SpeedStep to Automatic, Disabled, Max Performance, or Max Battery.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Maximum performance</li> <li>· Maximum battery life</li> <li>· Auto</li> </ul>	Microsoft Windows, Linux
<b>Splash Screen</b>	<p>Enable/Disable the Splash Screen.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Disable</li> <li>· Enable</li> </ul>	Microsoft Windows
<b>Spread Spectrum</b>	<p>Tokens Used in Dell Command   Monitor.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>· Enable</li> <li>· Disable</li> </ul>	Microsoft Windows
<b>SR-IOV Global Enable</b>	<p>Enable/Disable BIOS support for SRIOV devices.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Standby State</b>	<p>Selects the power management suspend mode.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Standby S1</li> <li>Standby S3</li> </ul>	Microsoft Windows
<b>Stealth Mode</b>	<p>Enables or disables the pre-programmed stealth mode of operation of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — The system elements operate in the normal mode.</li> <li>Enable — The system elements operate in the pre-programmed stealth mode.</li> </ul> <p>For example,</p> <ul style="list-style-type: none"> <li>If stealth mode is enabled and the device stealth mode is set to <b>Turn off</b>, it turns the device off while pressing Fn+F7 keys.</li> <li>If the stealth mode is enabled and the device stealth mode is set to <b>Unchanged</b>, then the device retains its status and remains unchanged while pressing Fn+F7 keys.</li> <li>If the stealth mode is disabled, then the state of the device cannot be changed by the individual device stealth modes.</li> </ul> <p>Following are the system elements that have effect of stealth mode on them:</p> <ul style="list-style-type: none"> <li>Stealth Mode Quiet Bluetooth</li> <li>Stealth Mode Quiet Fans</li> <li>Stealth Mode Quiet GPS</li> <li>Stealth Mode Quiet LCD</li> <li>Stealth Mode Quiet LEDs</li> <li>Stealth Mode Quiet Speakers</li> <li>Stealth Mode Quiet WLAN</li> <li>Stealth Mode Quiet WWAN</li> <li>Stealth Mode WiGig Radio</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet Bluetooth</b>	<p>Configures the state of the bluetooth radio depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the bluetooth radio if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the bluetooth.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet Fans</b>	<p>Configures the state of the fans depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the fan if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the fan.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet GPS</b>	<p>Configures the state of the GPS radio depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Turn off - Turns off the GPS radio if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the GPS radio.</li> </ul>	
<b>Stealth Mode Quiet LCD</b>	<p>Configures the state of the LCD screen backlight depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the LCD screen backlight if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the LCD screen backlight.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet LEDs</b>	<p>Configures the state of the LEDs depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the system LEDs if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the system LEDs.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet Speakers</b>	<p>Configures the state of the onboard speakers depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the onboard speakers if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the onboard speakers.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet WLAN</b>	<p>Configures the state of the WLAN (and WiGig) radio depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the WLAN if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the WLAN.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode Quiet WWAN</b>	<p>Configures the state of the WWAN (and WiGig) radio depending on the Stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off - Turns off the WWAN (and WiGig) radio if the stealth mode is enabled.</li> <li>Unchanged - Retains the current state of the WWAN (and WiGig) radio.</li> </ul>	Microsoft Windows, Linux
<b>Stealth Mode WiGig Radio</b>	<p>Configures or displays the state of Wireless Gigabit Alliance (WiGig) radio depending on the Unobtrusive mode or stealth mode is enabled or disabled.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Turn off — Turns off the WiGig radio if the Unobtrusive mode or stealth mode is enabled.</li> <li>Unchanged — Retains the current state of the Wigig radio.</li> </ul>	Microsoft Windows, Linux
<b>Strong Password</b>	<p>Enable/Disable Strong Password.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Surround View</b>	<p>This feature will allow user to enable SurroundView that allow user to use an additional AMD PCIE video card in conjunction with the onboard graphics card which would give you ability to use multiple monitors at once. Notes: it's only for AMD platform/ disable SurroundView that disable multiple monitor support with additional AMD PCIE video card. Notes: it's only for AMD platform.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Switchable Graphics</b>	<p>Configures the Switchable Graphics technology.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>System Isochronous Mode</b>	<p>Enables or disables System Isochronous mode.</p> <p> <b>NOTE: Isochronous mode may be best for audio and video streaming applications.</b></p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable — Enable this mode to reduce the latency of memory transactions at the expense of bandwidth.</li> <li>Disable — Disable this mode for applications that need high memory bandwidth.</li> </ul>	
<b>Tablet Buttons</b>	<p>Enables or Disables Tablet Buttons.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>TCM Visibility</b>	<p>Hides or unhides the TCM from the operating system on the next boot.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Hidden</li> <li>Visible</li> </ul>	Microsoft Windows
<b>Tertiary IDE Channel, Master Device</b>	<p>Enables or Disables tertiary Parallel ATA master channel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>Auto</li> </ul>	Microsoft Windows
<b>Tertiary IDE Channel, Slave Device</b>	<p>Enables or Disables tertiary Parallel ATA master channel.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>Auto</li> </ul>	Microsoft Windows
<b>Thunderbolt</b>	<p>Enables or disables the thunderbolt controller in the system.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Thunderbolt Boot Support</b>	<p>Enables or disables booting from the Thunderbolt device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Thunderbolt Pre Boot Module</b>	<p>Enables or disables OROMs and pre-boot UEFI drivers provided by Thunderbolt devices or PCIe devices.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Thunderbolt Security Level</b>	<p>Configures the thunderbolt security level.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>No Security — Disables the thunderbolt security.</li> <li>User Authorization — Allows minimum user notification. Connection manager requests connection approval from the host software, based on the unique ID of the connecting device, auto approval might or might not be given.</li> <li>Secure Connect — Allows one-time saved key device. Connection manager requests connection approval from the host software; approval is given only if the host challenge to device is acceptable.</li> <li>Display Port Only — Allows to connect only display port.</li> </ul>	Microsoft Windows, Linux
<b>Touch Screen</b>	<p>Enables or disables the touchscreen of the device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>TPM Hash Algorithm</b>	<p>Selects the hash algorithm used for TPM 2.0 measurements.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 = SHA-1</li> <li>1 = SHA-256</li> <li>2 = SHA-384</li> <li>3 = SHA-512</li> </ul> <p> <b>NOTE: This value cannot be changed if the TPM is already owned.</b></p>	Microsoft Windows, Linux
<b>Trusted Execution</b>	<p>New processor execution mode and BIOS hooks to enable a protected execution environment and main memory protection.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>On</li> <li>Off</li> </ul>	Microsoft Windows, Linux
<b>Trusted Platform Module</b>	<p>Enables or Disables the Trusted Platform Module (TPM).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Trusted Platform Module Activation</b>	<p>This property is used to activate the TPM if it is deactivated, unowned and a BIOS Admin password is set and has been verified; otherwise this property reports the status of the TPM Activation BIOS option.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Deactivate</li> <li>Activate</li> </ul>	Microsoft Windows, Linux
<b>TPM PPI ACPI Support</b>	<p>Enables or disables the TPM ACPI physical presence commands.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>TPM PPI Provision Override</b>	<p>Enables or disables the physical presence for the ACPI TPM PPI provision operations.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>TPM PPI Deprovision Override</b>	<p>Enables or disables the physical presence for the ACPI TPM PPI deprovision operations.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>Type-C Battery Overload Protection</b>	<p>Configures the maximum power for type-C connector.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>0 – 7.5 Watts</li> <li>1 – 15 Watts</li> </ul>	Microsoft Windows, Linux
<b>UART Power Down</b>	<p>Allow the operating system to power down or Prohibit OS from powering down UART.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Uefi Boot Path Security</b>	<p>Determines whether the system should prompt the user to enter the Admin password, if set, while booting from a UEFI boot path, from the F12 Boot Menu.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Always except internal hdd — All UEFI boot paths require the user to enter the Admin password, except for the boot paths that are hosted on an internal hard disk drives.</li> <li>Always Except Internal HDD and PXE - All UEFI boot paths requires the Admin password, except for boot paths hosted on internal hard disk drives or PXE Boot.</li> <li>Always — Booting from any UEFI boot path requires the user to enter the Admin password.</li> <li>Never — The Admin password is not required for booting from UEFI boot paths.</li> </ul>	Microsoft Windows, Linux
<b>UEFI Network Stack</b>	<p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enable — UEFI networking protocols are available permitting preOS image of the network, including PXE.</li> <li>Disable — UEFI networking protocols are not available in the preOS environment and network boot by PXE is disabled. This setting will improve boot times.</li> </ul>	
<b>UEFI Capsule</b>	<p>Enables or disables BIOS updates via UEFI capsule update packages.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul> <p><b>i</b> <b>NOTE: Disabling this option blocks the BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS).</b></p>	Microsoft Windows, Linux
<b>Unobtrusive Mode</b>	<p>Enables or disables the &lt;Fn&gt;&lt;B&gt; key combination, which controls the light emissions from the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — Disables the &lt;fn&gt;&lt;B&gt; key combination</li> <li>Enable — Enables the &lt;fn&gt;&lt;B&gt; key combination</li> </ul>	Microsoft Windows, Linux
<b>USB</b>	<p>Enables, Disables, or sets the system's USB port to No Boot (if supported).</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> <li>No boot</li> </ul>	Microsoft Windows
<b>USB 3.0</b>	<p>Enable or Disable USB 3.0</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Emulation</b>	<p>Enables or Disables USB keyboard and mouse support for Operating systems that do not natively support USB keyboards and mice.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable</li> <li>Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Flash Drive Emulation</b>	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>Auto</li> <li>Floppy</li> <li>HD only</li> </ul>	Microsoft Windows
<b>USB Port 0</b>	<p>Enables or Disables USB Port 00.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 1</b>	<p>Enables or Disables USB Port 01.</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>USB Port 2</b>	Enables or Disables USB Port 02. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 3</b>	Enables or Disables USB Port 03. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 4</b>	Enables or Disables USB Port 04. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 5</b>	Enables or Disables USB Port 05. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 6</b>	Enables or Disables USB Port 06. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 7</b>	Enables or Disables USB Port 07. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 8</b>	Enables or Disables USB Port 08. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 9</b>	Enables or Disables USB Port 09. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 10</b>	Enables or Disables USB Port 10. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>USB Port 11</b>	Enables or Disables USB Port 11.	Microsoft Windows

BIOS Settings Name	Description	Supported Operating System(s)
	Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	
<b>USB Port 12</b>	Enables or Disables USB Port 12. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>USB Port 13</b>	Enables or Disables USB Port 13. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>USB Port 14</b>	Enables or Disables USB Port 14. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>USB Port 15</b>	Enables or Disables USB Port 15. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>USB Port 16</b>	Enables or Disables USB Port 16. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 17</b>	Enables or Disables USB Port 17. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 18</b>	Enables or Disables USB Port 18. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 19</b>	Enables or Disables USB Port 19. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 20</b>	Enables or Disables USB Port 20. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux

<b>BIOS Settings Name</b>	<b>Description</b>	<b>Supported Operating System(s)</b>
<b>USB Port 21</b>	Enables or Disables USB Port 21. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 22</b>	Enables or Disables USB Port 22. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 23</b>	Enables or Disables USB Port 23. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 24</b>	Enables or Disables USB Port 24. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 25</b>	Enables or Disables USB Port 25. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 26</b>	Enables or Disables USB Port 26. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 27</b>	Enables or Disables USB Port 27. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 28</b>	Enables or Disables USB Port 28. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Port 29</b>	Enables or Disables USB Port 29. Possible values are: <ul style="list-style-type: none"> <li>• Enable</li> <li>• Disable</li> </ul>	Microsoft Windows, Linux
<b>USB Provision</b>	Enables or disables provisioning of Intel AMT from a USB storage device. Possible values are:	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Enabled — Intel AMT can be provisioned using the local provisioning file via a USB storage device.</li> <li>Disabled — Provisioning of Intel AMT from a USB storage device is blocked.</li> </ul>	
<b>USB PowerShare</b>	<p>Enables or disables the USB PowerShare feature.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>User Accessible USB Ports</b>	<p>Enables or disables user accessible USB ports.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>All off</li> <li>Back only</li> <li>All on</li> </ul>	Microsoft Windows
<b>USB Wake from S4</b>	<p>Enables or disables the USB wake from s4 power state of the system.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Enable - Enables the USB wake from s4 power state of the system.</li> <li>Disable - Disables the USB wake from s4 power state of the system.</li> </ul>	Microsoft Windows, Linux
<b>USB Wake Support</b>	<p>Enables or Disables USB Wake setting.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Video Expansion</b>	<p>Enables or Disables Video Expansion.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Video Memory Size</b>	<p>Enables or Disables Video Expansion.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>Auto</li> <li>1MB</li> <li>8MB</li> <li>16MB</li> <li>32MB</li> <li>64MB</li> <li>128MB</li> <li>256MB</li> <li>512MB</li> <li>1GB</li> </ul>	Microsoft Windows
<b>VT for Direct IO</b>	<p>Intel Virtualization Technology for Direct I/O (VT-d) – new chipset feature that enhances I/O support (DMA) when running a Virtual Machine Monitor.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	
<b>Watchdog OS Boot Protection</b>	<p>Enables or disables Watchdog OS Boot Protection.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable - The application cannot configure a chipset-based timer to reset or shutdown the system. By default the Application Watchdog Timer is disabled</li> <li>Enable - The application configures a chipset-based timer to reset or shutdown the system.</li> </ul>	Microsoft Windows, Linux
<b>Wake on Dock</b>	<p>Enables or disables waking the system when a docking connection is made.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Wake On LAN</b>	<p>Defines the wake On LAN feature. This property defines whether Wakeup On LAN is disabled, enabled for on-board NIC only or enabled for add-in NIC only, if Enabled with boot to NIC option is selected, the system boots from the NIC boot-ROM upon a remote wakeup.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable_AIC</li> <li>Enable_OnBoard</li> <li>Enable All</li> <li>Lan or WLAN</li> <li>WLAN only</li> <li>LAN with PXE boot</li> </ul>	Microsoft Windows
<b>Wake on 2nd LAN (RJ-45/SFP)</b>	<p>Defines the wake on 2nd LAN feature.</p> <p>Possible values are: 1, 2, 3</p> <ul style="list-style-type: none"> <li>Disabled</li> <li>LanOnly</li> <li>LanWithPxeBoot</li> </ul>	Microsoft Windows
<b>Wake-On-LAN Boot Override</b>	<p>If enabled then when the system powers on due to a Wake-on-LAN event, the NIC boot-ROM is automatically given the highest boot priority, pre-pending the PXE boot-ROM to the system's current boot sequence. If the system powers on due to some other event, this selection does not influence the boot sequence. If disabled then the boot override feature is disabled and the system boot sequence is in effect for all types of system power on.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Warnings And Errors</b>	<p>During POST the system continues to boot or pauses when warnings or errors are detected. This feature can be used for the remotely managed systems that do not have a keyboard or a consoles available for use.</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<p>Possible values are:</p> <ul style="list-style-type: none"> <li>1 = Disabled – System pauses for the user to respond when warnings or errors are detected.</li> <li>2 = Continue on Warnings – System continues to boot when warnings are detected, but pauses for the user to respond when errors are detected.</li> <li>3 = Continue on Warnings and Errors – System continues to boot when warnings or errors are detected.</li> </ul>	
<b>Watchdog Timer</b>	<p>The system will/will not reboot/reset if the watchdog timer expires</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Adapter</b>	<p>Enables or disables Wireless Adapter.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Device</b>	<p>If disabled then wireless devices are always disabled.</p> <p>If set to APP then wireless devices can be controlled by an application such as QuickSet</p> <p>If set to Hotkey then wireless devices can be controlled by an application such as QuickSet</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>APP</li> <li>Hotkey</li> </ul>	Microsoft Windows
<b>WiFi Catcher Changes</b>	<p>Permits or Denies WiFi Catcher changes. If the administrator password is not set, this setting will have no effect.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Deny</li> <li>Permit</li> </ul>	Microsoft Windows
<b>WiFi Locator</b>	<p>Enables or Disables the WiFi Locator.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>Wireless LAN</b>	<p>Enables or Disables the wireless LAN module.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Radio Control Switch</b>	<p>Enables or disables the Wireless Gigabit (WiGig) radio control switch on the dock.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>Wireless Switch Bluetooth Control</b>	Enables or Disables wireless switch Bluetooth control. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Switch Cellular Control</b>	Enables or Disables wireless switch cellular control. This switch has no effect on the state of the cellular radio for systems with a physical wireless on/off switch. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Switch Change</b>	Permits or Denies Wireless Switch changes. If the administrator password is not set, this setting will have no effect. Possible values are: <ul style="list-style-type: none"> <li>• Deny</li> <li>• Permit</li> </ul>	Microsoft Windows
<b>Wireless Switch Wireless LAN Control</b>	Enables or Disables wireless switch wireless LAN control. This switch has no effect on the state of the wireless LAN radio for systems with a physical wireless on/off switch. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows, Linux
<b>Wireless Switch WLAN-WiGIG Control</b>	Enables or disables the effect of physical wireless switch on wireless LAN and WiGig radio. Possible values are: <ul style="list-style-type: none"> <li>• Disable — The wireless physical switch does not affect the wireless LAN and WiGig radios.</li> <li>• Enable — If the wireless physical switch is on, turns the wireless LAN on and WiGig radio on. If the wireless switch is off, turns the wireless LAN on and WiGig radio off.</li> </ul>	Microsoft Windows, Linux
<b>Wireless UWB</b>	Enable/Disable UWB card. Possible values are: <ul style="list-style-type: none"> <li>• Disable</li> <li>• Enable</li> </ul>	Microsoft Windows
<b>WLAN Region Code</b>	Sets the WLAN code for specific region. Possible values are: <ul style="list-style-type: none"> <li>• 0 = Rest of the World — Sets the WLAN region code for the rest of the world. This option is selected by default.</li> <li>• 1 = North America (FCC) — Sets the WLAN region code for Canada, and the United States.</li> <li>• 2 = Europe — Sets the WLAN region code for Australia, Belgium, Czech Republic, Denmark, Finland, France, Germany, Ireland, Italy, Luxembourg, Netherlands, Norway, Poland, Portugal, Slovakia, Spain, Sweden, Switzerland, Turkey, and United Kingdom.</li> <li>• 3 = Japan — Sets the WLAN region code for Japan only.</li> </ul>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
	<ul style="list-style-type: none"> <li>4 = Australia — Sets the WLAN region code for Australia, New Zealand, Saudi Arabia, South Africa, UAE, and Vietnam.</li> <li>5 = China South Asia — Sets the WLAN region code for China, and India.</li> <li>6 = Taiwan — Sets the WLAN region code for Colombia, Peru, and Taiwan.</li> <li>7 = Indonesia — Sets the WLAN region code for Indonesia only.</li> </ul>	
<b>WWAN Radio</b>	<p>Configures the WWAN radio.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>WLAN on</li> <li>WWAN on</li> <li>If set to <b>Disable</b> then it disables both WLAN and WWAN;</li> <li>If set to <b>WLAN ON</b> then it toggles between WLAN radio on and WWAN radio off;</li> <li>If set to <b>WWAN ON</b> then it toggles between WWAN radio on and WLAN radio off.</li> </ul>	Microsoft Windows, Linux
<b>Wireless Switch GPS On WWAN Radio</b>	<p>Enables or disables the effect of physical wireless switch on the GPS radio of the wireless WAN card.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable — If disabled, wireless switch does not have any effect on the state of the GPS radio of the wireless WAN card.</li> <li>Enable — If enabled, wireless switch turns the GPS radio of the wireless WAN card on or off.</li> </ul>	Microsoft Windows, Linux
<b>WWan Bus Mode</b>	<p>WWan Bus Mode sets the interface type of the Wireless Wan (WWAN) card. It is recommended that the system running Microsoft Windows must set this field to PCIe mode, while all the other systems must set this field to USB mode.</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>PCIe mode</li> <li>USB mode</li> </ul>	Microsoft Windows, Linux
<b>WWAN Connection Auto Sense</b>	<p>When the WWAN is enabled, this BIOS setting enables the feature that automatically turns off the WWAN when it is connected to the network.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows, Linux
<b>WLAN Connection Auto Sense</b>	<p>When the WLAN is enabled, this BIOS setting enables the feature that automatically turns off the WLAN when it is connected to the network.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>Disable</li> <li>Enable</li> </ul>	Microsoft Windows
<b>XD Card</b>	<p>Enables or disables the embedded XD Card port.</p> <p>Possible values are:</p>	Microsoft Windows, Linux

BIOS Settings Name	Description	Supported Operating System(s)
<b>ZigBee</b>	<ul style="list-style-type: none"><li>• Disable</li><li>• Enable</li></ul> Enables or disables the ZigBee option. Possible values are: <ul style="list-style-type: none"><li>• Disable</li><li>• Enable</li></ul>	Microsoft Windows, Linux

# Alerts in Dell Command | Monitor 10.2.1

Local alerting involves displaying user messages and writing to the Windows event log. Remote alerting is accomplished through WMI indications. When Dell Command | Monitor detects an event, it generates an alert, which can be transmitted through the WMI service to a remote management application that is subscribed to that alert type.

When an alert is generated, Dell Command | Monitor supports following types of notification:

For Windows,

- Windows event log—available at Windows Logs > System
- CIM Indication— available through DCIM\_AlerIndication class
- SNMP traps — available through 10909.mib file
- History — available through DCIM\_LogEntry class instances

For Linux,

- Syslog — available at /var/log
- CIM Indication— available through DCIM\_AlerIndication class
- Application log—available through DCIM\_LogEntry class
- History — available through DCIM\_LogEntry class instances

In Dell Command | Monitor, each type of event (for example, CurrentProbe, TemperatureProbe, Smart, and so on) that gets logged is provided with a unique event ID number. The events have unique IDs to enable log scraping; this way you can programmatically look at the event log and determine what Dell Command | Monitor events have occurred.

In Dell Command | Monitor for Windows, you are also provided with an option to receive either a single alert or a limited number of alerts of the occurrence of an event, of a given type. You can mask out specific events and can generate single alert messages for only those events.

**NOTE:** Configuring the selected events is not supported for Dell Command | Monitor for Linux.

Dell Command | Monitor recognizes the following eight CIM severity levels using perceived severity (represented by integers 0 through 7):


- UNKNOWN = 0
- OTHER = 1
- INFORMATION = 2
- WARNING\_DEGRADED = 3
- MINOR = 4
- MAJOR = 5
- CRITICAL = 6
- FATAL\_NONRECOVERABLE = 7


**NOTE:** Events with CRITICAL severity cause Dell Command | Monitor to shut down the local system.

The lowest WMI severity level that Dell Command | Monitor sends is WARNING\_DEGRADED and the highest is CRITICAL. The severities of Dell Command | Monitor events are listed in Table 2 to 1. Dell Command | Monitor sends local alerting and remote alerting for all the listed events.

**Table 150. Events Polled by Dell Command | Monitor**

Dell Command   Monitor Event (Windows event log Number)	Description
<b>AlertTemperatureProbeWarning (1053)</b>	Temperature probe has detected a warning value.
<b>AlertTemperatureProbeFailure (1054)</b>	Temperature probe has detected a failure value.
<b>AlertTemperatureProbeNonRecoverable (1055)</b>	Temperature probe has detected a nonrecoverable value.

Dell Command   Monitor Event (Windows event log Number)	Description
<b>FanProbe (1103)</b>	A cooling device has exceeded a minor threshold.
<b>AlertCoolingDeviceFailure (1104)</b>	Cooling device sensor has detected a failure value.
<b>AlertCoolingDeviceNonRecoverable (1105)</b>	Cooling device sensor has detected a nonrecoverable value.
<b>AlertVoltageProbeWarning (1153)</b>	Voltage probe has detected a warning value.
<b>AlertVoltageProbeFailure (1154)</b>	Voltage probe has detected a failure value.
<b>AlertVoltageProbeNonRecoverable (1155)</b>	Voltage probe has detected a nonrecoverable value.
<b>CurrentProbe (1203)</b>	An electrical current probe has exceeded a minor threshold. One of the hard-disk drive is running out of free space.
<b>AlertAmperageProbeFailure (1204)</b>	Amperage probe has detected a failure value.
<b>AlertAmperageProbeNonRecoverable (1205)</b>	Amperage probe has detected a nonrecoverable value.
<b>ChassisIntrusionNormal (1252)</b>	Chassis intrusion has returned to normal.
<b>ChassisIntrusion (1254)</b>	System chassis intrusion alert.
<b>EccMemory (1403)</b>	A memory checksum failure has occurred.  <b>NOTE: This event is not supported on the system running RHEL.</b>
<b>RAIDControllerFailure (1801)</b>	A RAID controller has failed.
<b>RAIDControllerOffline (1802)</b>	A RAID controller is offline.
<b>RAIDControllerPowerOff (1803)</b>	A RAID controller is turned off.
<b>AlertRaidControllerDegraded (1804)</b>	A RAID controller has degraded.
<b>PhysicalDiskDegraded (1811)</b>	A physical hard-disk drive is degraded.
<b>AlertPhysicalDiskRebuilding (1812)</b>	A physical hard-disk drive is rebuilding.
<b>PhysicalDiskFailed (1813)</b>	A physical hard-disk drive has failed.
<b>PhysicalDiskOffline (1814)</b>	A physical hard-disk drive is offline.
<b>VirtualDiskDegraded (1821)</b>	A virtual hard-disk drive is degraded.
<b>VirtualDiskRebuilding (1822)</b>	A virtual hard-disk drive is rebuilding.
<b>VirtualDiskFailed (1823)</b>	A virtual hard-disk drive has failed.
<b>VirtualDiskOffline (1824)</b>	A virtual hard-disk drive is offline.
<b>NumberOfDisksIncreased (2030)</b>	A hard-disk drive has been added.
<b>NumberOfDisksDecreased (2031)</b>	A hard-disk drive has been removed.
<b>MemorySizeIncreased (2032)</b>	The memory size has been increased.
<b>MemorySizeDecreased (2033)</b>	The memory size has been decreased.

Dell Command   Monitor Event (Windows event log Number)	Description
<b>DiskCapacity (2034)</b>	In the current version, two user-defined thresholds are used. An event is generated only when the conditions of both thresholds are met. The first threshold, expressed as an absolute value in megabytes, specifies the size of the hard-disk drive to be monitored. Hard-disk drives with a capacity smaller than the specified size are ignored. The second threshold is expressed as a percentage of the hard-disk drive size. An event is generated when the available free space on one of the monitored hard-disk drives falls below this percentage.
<b>NumberOfProcessorsIncreased (2035)</b>	Number of processors on the system has increased.
<b>NumberOfProcessorsDecreased (2036)</b>	A processor has been removed.
<b>HDD Smart Failure(2037)</b>	<ul style="list-style-type: none"> <li>· A hard-disk drive condition has occurred that may eventually lead to a hard-disk drive failure.</li> <li>· <b>Error message</b> is displayed when the current value exceeds the threshold value.</li> <li>· <b>Warning message</b> is displayed when the current value exceeds the custom threshold value.</li> </ul>
	<p> <b>NOTE: Extended Error and Warning messages are supported only on Embedded box personal computer 3000/5000.</b></p>
<b>DiskSizeIncreased (2038)</b>	The size of at least one hard-disk drive has increased.
<b>DiskSizeDecreased (2039)</b>	The size of at least one hard-disk drive has decreased.

# Sample scripts for Dell Command | Monitor

## 10.2.1

To run various functionalities in Dell Command | Monitor, see the sample PowerShell and VB scripts available at [Dell Knowledge Library, Dell Command | Monitor page](#).