

# Dell OpenManage Deployment Toolkit 5.4 for Microsoft Windows Preinstallation Environment Release Notes

## Topics:

- [Release Type and Definition](#)
- [Importance](#)
- [Platforms Affected](#)
- [What Is Supported](#)
- [What's New](#)
- [Important Notes](#)
- [Known Issues](#)
- [Installation Prerequisites](#)
- [Upgrading From Previous Versions](#)
- [Contacting Dell](#)

This document describes the new features, enhancements, and fixed issues in Dell Openmanage Deployment Toolkit 5.4 for Embedded Linux

This document describes the new features, enhancements, and fixed issues in Dell Openmanage Deployment Toolkit 5.4 for Microsoft Windows Preinstallation Environment

## Release Type and Definition

### Deployment Toolkit

The Dell OpenManage Deployment Toolkit (DTK) includes a set of utilities, scripts, and sample configuration files that to deploy and your Dell system. You can use DTK to build script-based and RPM-based installation for deploying large number of systems on a pre-operating system environment in a reliable way, without changing their current deployment processes.

In addition to the command line utilities used to configure various system features, DTK also provides sample scripts and configuration files to perform common deployment tasks and documentation.

### Version

5.4.0

### Release Date

Oct 2016

### Previous Version

5.3.0

# Importance

RECOMMENDED: Dell recommends applying this update during your next scheduled update cycle. The update contains feature enhancements or changes that will help keep your system software current and compatible with other system modules (firmware, BIOS, drivers and software).

## Platforms Affected

For a complete list of supported Dell PowerEdge systems and supported Operating systems, see the *Dell Systems Software Support Matrix* available in the required version of OpenManage Software at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).

## What Is Supported

### Hardware and Software Requirements

Before installing the DTK components for embedded Linux, ensure that you have:

- The DTK ISO image, which contains the utilities, sample scripts, sample configuration files, and documentation to deploy your Dell system.
- A Linux workstation that has at least 200 MB of free hard-drive space.
- When building customized Linux ISOs, you might need to incorporate the following Red Hat Package Managers (RPMs) provided by DTK to ensure a successful build:
  - dtk-scripts
  - raidcfg
  - syscfg
- If you have the DTK CD mounted under "/mnt/cdrom," you can extract the DTK RPMs to build your customized ISO image under the "RPMs" folder at the root of the CD.

### Operating Systems Requirements

Using DTK utilities you can deploy the following Linux operating systems:

- Red Hat Enterprise Linux 7.2 (64-bit)
- Red Hat Enterprise Linux 6.8 (64-bit)
- SUSE Linux Enterprise Server 11 SP4 (64-bit)
- SUSE Linux Enterprise Server 12 SP1 (64-bit)
- CentOS 6.7 (64-bit)
- CentOS 7.2 (64-bit)

 **NOTE: CentOS deployment is supported only on DSS1510, DSS1500, DSS2500 platforms.**

### Hardware and Software Requirements

Before beginning the deployment process, ensure that you have the following tools, software, and information ready to use:

- Advanced knowledge of Windows.
- Windows Automated Installation Kit (AIK) or Windows Assessment and Deployment Kit (ADK) to build Windows PE.
- Working knowledge of Microsoft Remote Installation Services (RIS) and Automated Deployment Services (ADS) (including setting up of RIS and ADS environments), or any other third-party deployment system or tool.
- Working knowledge of Windows Deployment Services (WDS) or any other third-party deployment system or tool for Windows PE.
- A workstation with the following capabilities:
  - A writable CD/DVD drive and CD/DVD writing software
  - Network access
- A target system with a CD/DVD drive if you are performing a local deployment or network access if you are performing a network deployment.
- All Deployment Toolkit utilities, sample scripts, and sample configuration files.

- All required Windows PE drivers, operating system drivers, and the Dell utility partition image file.
- A minimum BIOS version is recommended on some of the platforms for all the DTK options to work correctly. In general, it is good practice to use the latest ("n") version of BIOS firmware or the "n-1" version that is available on "dell.com/support." For more information see the Dell Systems Software Support Matrix available in the required version of OpenManage Software at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).

## Operating Systems Requirements

DTK Utilities (SYSCFG and RAIDCFG) and scripts (sample) supports Windows PE 3.0, Windows PE 4.0, Windows PE 5.1 and Windows PE 10.0.

For Microsoft WinPE and OS deployment support limitations refer to <http://technet.microsoft.com/en-us/library/hh824993.aspx>.

DTK helps deploy the following Microsoft Windows Server Operating Systems:

- Microsoft Windows Server 2008 SP2 (32-bit and 64-bit)
  - ⓘ **NOTE: On Dell's PowerEdge 13th generation and later servers, Microsoft Windows Server 2008 SP2 (32-bit and 64-bit) deployment is not supported. Microsoft Windows Server 2008 R2 SP1( 64-bit)**
- Microsoft Windows Server 2008 R2 SP1 (64-bit)
- Microsoft Windows Server 2012 Foundation, Essentials, Standard, and Datacenter editions
- Microsoft Windows Server 2012 R2 Foundation, Essentials, Standard, and Datacenter editions
- Microsoft Windows Server 2016 Essentials, Standard, and Datacenter editions

## What's New

The new features for this release include:

- Windows PE 10.0 Support for Deployment of Windows Server 2016 and Windows 10
  - ⓘ **NOTE:**  
**Windows 10 Operating system is support only on Dell Precision R7910 server.**
  - ⓘ **NOTE: For the list of supported operating systems and Dell servers, see the *Dell Systems Software Support Matrix* at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).**
- Support for the following network cards
  - Intel XL710 DP 40Gb QSFP+ Rack NDC
  - Intel 40GbE 2P XL710 Adapter
  - Intel(R) X550 Dual Port 10GBASE-T Networking Adapter
  - Broadcom 10GbE 2P 57402S Adapter
  - Broadcom 25GbE 2P 57404S Adapter
  - Broadcom 10GbE Base-T 2P 57406 Adapter
  - Mellanox Connect X-4 LX DP 25Gb SFP rNDC
  - Mellanox 25GBE 2P Connect X-4 LX Adapter
  - Intel 82599 DP 10G Mezzanine Adapter (Supported only on Dell PowerEdge C6320)
- Added support for the following Dell PowerEdge servers:
  - R830
- Support for installation and deployment of the following operating system in BIOS and UEFI mode
  - Red Hat Enterprise Linux 6.8 (64-bit)
  - CentOS 7.2 (64-bit)
  - ⓘ **NOTE: CentOS deployment is supported only on DSS1510, DSS1500, DSS2500 platforms.**
  - ⓘ **NOTE: For the list of supported operating systems and Dell servers, see the *Dell Systems Software Support Matrix* at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).**

## Important Notes

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

Use both DTK and the Server Administrator from the same release version to get complete supported features of Server Administrator.

From DTK 4.4.1 onwards, the product carries GNU Bash update packages to fix the Shellshock vulnerability (CVE-2014-7169 and CVE-2014-6271).

## DTK operating system deployment limitation:

DTK does not support operating system deployment, when multiple boot VDs exist on a single controller or when the server has multiple boot controllers. If multiple boot controllers exist on the server, the boot VD must be created on any one of the controllers, and the boot VD must be set as first boot device in system BIOS.

**NOTE:** During booting WinPE ISO image for Windows PE 4.0, Windows PE 5.0 and Windows PE 10.0 user will not be prompted for entering any key to continue.

DTK does not support Linux operating system deployment in Non RAID (Volume) and SWRAID mode on s100/s300/S110/S130 controllers.

## SYSCFG

- Some options may not be present on all systems, which may be due to the BIOS version or hardware feature set. The usage information generated by running **SYSCFG** without arguments shows only those options that are valid for your system.
- The **--devseq** option is present only if you have an available, bootable hard-disk partition. If this option is present in the configuration file, but not present on your system, you will receive a usage error.
- To enable certain options, to reboot your system. Dell recommends you use the "reboot" command on shell prompt or press the **Ctrl +Alt+Del** keys.
- It is required to perform a warm reboot after applying the SYSCFG settings changes on Dell's 12th generation of PowerEdge systems.
- If you perform operations that change the **--redmem** option, reboot your system immediately. It is applicable to both command line and **--infile** usage.

**NOTE:** Additionally, the **--redmem** option should not be issued with any other command and should be immediately followed by a system reboot. This is important when you develop scripts that can alter the **--redmem** setting.
- For options that use text strings such as username, password, hostname, and community string, using characters such as "<," ">," "|," "=" on the command line can be misinterpreted by the command line parser and may cause errors. To avoid such errors, use only alphanumeric characters.
- If you set the username using SYSCFG username option, Serial Over Lan (SOL) access for the corresponding user will be enabled by default. You can disable SOL access for a user using `syscfg solaction --userid=--action=disable` command.
- The legacy attribute values enable and disable are also supported for Dell's 12th generation of PowerEdge systems for backward compatibility. In future releases these arguments might be deprecated. Try to use the values displayed in help message for BIOS options for Dell's 12th generation of PowerEdge systems
- It is required to perform a warm reboot after applying the SYSCFG settings changes on Dell PowerEdge 12th generation of PowerEdge systems.
- If you perform operations that change the "--redmem" option, reboot your system immediately. It is applicable to both command line and "--infile" usage.

**NOTE:** Additionally, the **--redmem** option should not be issued with any other command and should be immediately followed by a system reboot. This is important when you develop scripts that can alter the **--redmem** setting.
- For options that use text strings such as username, password, hostname, and community string, using characters such as <space>, "<," ">," "|," "=" on the command line can be misinterpreted by the command line parser and may cause errors. To avoid such errors, use only alphanumeric characters.
- If you set the username using syscfg username option, Serial over LAN (SOL) access for the corresponding user will be enabled by default. You can disable SOL access for a user using `syscfg solaction --userid=<userid> --action=disable` command.
- The legacy attribute values enable and disable are also supported for 12G systems for backward compatibility. In future releases these arguments might be deprecated. Try to use the values displayed in help message for BIOS options for Dell's 12th generation of PowerEdge systems.

## RAIDCFG

- When creating virtual disks, the chunk (stripe) size is always in KBs. Do not specify any units of measure for the chunk size.
- When providing multiple physical disks for the "create virtual disk" command, do not separate the disks with spaces.

For example, "-ad=1:4, 1:5" causes an error. The correct way to input multiple physical disks is "-ad=1:4,1:5,1:6" or "-ad=1:4:0,1:5:0,1:6:0".

- If you change the controller mode from SCSI to RAID mode, data loss may occur. Back up any data you require before changing the modes.
- Use the slots 0-3 of the system to create a boot VD or assigning hot spare (dedicated or global) on Dell PERC S130 controller. If you use any other slots, the system encounters issues during wake up from hibernation.

## Known Issues

### Network limitation:

On spanning tree-enabled network, SUSE Linux Enterprise Server 12 / Red Hat Enterprise Linux 7.x operating system installation on Dell Power Edge systems might not be successful due to DHCP client time-out.

Workaround: Add **netwait=90** in the boot loader option of the `suseinst.sh/lininst7.sh` script.

For example, `suseinst.sh, kernel/linux/linux autoyast=$DT_SUSE_AUTOINST install=$DT_OS_IMG_PATH netwait=90`

```
lininst7.sh, kernel/linux/vmlinuz ks=hd:sda$(( $GRUB_PART_NO + 1 )):/linux/ks.cfg inst.repo=nfs:$
{DT_OS_NFS_LOC} netwait=90
```

### SYSCFG Issues

- In DRAC 5, the **--virtualmedia** and **--vflash** options do not work if there is an active virtual media session. Disconnect the virtual media using the DRAC GUI. Log into DRAC. **Click Media > Virtual Media > Disconnect.**
- The `syscfg --bootseq` command detects CD-ROM with SAS/SATA controllers as `unk.emb.1`.
- On R815, `syscfg power --profile` option sets `apc`. Though `apc` is not supported on R815, SYSCFG does not throw an error message.
- The option for **powerctl, softshutdown**, causes your system to reboot. If you use a customized kernel with Advanced Configuration and Power Interface (ACPI) support, this option will work as designed.
- Using the **solcfgparams** option may result in an error message saying **Hardware subsystem error** when an invalid value is used. It does not indicate a problem with the hardware. Check the option value and try again.
- The **--solbitrate** option in **solcfgparams** and the **--mgscmmbitrate** option in **serialcfgparams** accept a baud rate of 57600, but tools such as **ipmishand solproxy** do not function at that baud rate for PowerEdge systems.
- The legacy attribute values `enable` and `disable` are also supported for Dell's 12th generation of PowerEdge systems for backward compatibility. In future releases, these arguments might be deprecated. Try to use the values shown in help message for BIOS options for Dell's 12th generation of PowerEdge systems.
- DTK 5.4 is not supported on Dell PowerEdge T100. PowerEdge T100 has a BIOS version that is incompatible with the current HAPI drivers.
- The option for **powerctl**, which is **softshutdown**, does not work on Windows PE.
- On Windows PE 3.0, when you run the `syscfg` command to list all available options, if you press CTR + C before the command fully executes, an error message is displayed. Click OK. You can ignore the message.
- The **--solbitrate** option in **solcfgparams** and the **--mgscmmbitrate** option in **serialcfgparams** accept a baud rate of 57600, but tools such as "ipmish" and "solproxy" do not function at that baud rate for PowerEdge systems.
- The legacy attribute values `enable` and `disable` are also supported for Dell's 12th generation of PowerEdge systems for backward compatibility. In future releases, these arguments might be deprecated. Try to use the values shown in help message for BIOS options for Dell's 12th generation of PowerEdge systems.
- DTK 5.4 does not boot on Dell PowerEdge T100. PowerEdge T100 has a BIOS version that is incompatible with the current HAPI drivers.

### RAIDCFG Issues

- You can assign up to 10 Global hot spares using `Raidcfg`. Use the Dell OpenManage Server Administrator Storage Management for assigning more than 10 Global hot spares.
- S300 controller `CachePolicy` setting is **Not Applicable**. Hence VD created with different `cachepolicy` settings from OROM utility will be displayed as "Not Applicable".
- RAIDCFG does not support Non RAID (Volume) mode on s100/s300/S110 controller.
- USB keys should not be mounted to the `/tmp` directory. Inside the `/tmp` directory, create a new directory and mount the USB to this.

- On Dell PERC H310 controllers, conversion of a RAID Capable Disk to Non-RAID disk and vice versa is not supported using RAIDCFG.

## Operating System Installation Issues

- Installation of legacy Red Hat Enterprise Linux operating systems may fail due to lack of support for new hardware. Modify the **%post** section of `ks.cfg` to update to a newer version of the kernel or use driver disk to install drivers.
- The Red Hat Enterprise Linux operating system installation may fail on systems equipped with multiple RAID and/or SCSI controllers, whether installed on the system board or in PCI slots. This failure may occur when using "Server Setup" or performing a manual installation. When two or more RAID or SCSI controllers are present, install Red Hat Enterprise Linux with only one configured RAID or SCSI controller. Configure the other controllers after you install the Red Hat Enterprise Linux operating system.
- The virtual media should be disabled for SLES 12 OS installation on Dell's 11th generation of PowerEdge servers.
- When deploying SUSE Linux Enterprise Server version 11 on PowerEdge M915 using DTK automated script (autoinst.xml), do the following:
  1. In device map section,

```
<device_map_entry>
<firmware>hd0</firmware>
<linux>/dev/sdc</linux>
</device_map_entry>
```

Change hd0 to `/dev/sdc`

2. In grub config section, change `/dev/sda5` to `/dev/sda6`
3. If installer reports any missing packages, delete the packages from `autoinst.xml`.

## Secure Boot limitation on UEFI mode:

On installation of the operating system in UEFI mode when secure boot BIOS option is enabled, DTK ELI is not supported. This is due to the CentOS 6.5 core operating system limitation.

## Instrumentation Issues

The `/opt/dell/srvadmin` directory in the DTK ISO image should be writable. It enables the instrumentation services to work properly.

## DTK tools installation limitation:

DTK tools installation is not supported on CentOS operating system.

## RACADM Issues

- If you use virtual media to boot into Windows PE, executing certain RACADM commands may cause Windows PE to crash.
- After generating the rac configuration file using the `racadm getconfig -f <file_name>` command, comment out the following properties in the configuration file before you update a configuration using the `racadm config -f <file_name>` command:
  - `#cfgRacTuneCtrlEConfigDisable=0`
  - `#cfgRacTuneLocalConfigDisable=0`
- VLAN objects (`cfgNicVlanEnable`, `cfgNicVlanId`, and `cfgNicVlanPriority`) displayed using the local RACADM command `racadm getconfig -g cfgLanNetworking` or VLAN objects generated in the configuration file using the local RACADM command `racadm getconfig -f <file name>` do not contain the leading `"#"` symbol, which indicates that they are read-only.

## Windows PE Issues

- Running `partcfg.bat` may fail when virtual media is enabled. For the hard disk, `partcfg.bat` uses the driver letter `"c:"`. When virtual media is enabled, sometimes, the virtual device gets assigned with the drive letter `"c:"` And, `partcfg.bat` execution fails. To run `partcfg.bat` successfully, either disable the virtual media or use the `diskpart` command to assign a free driver letter for `partcfg.bat`.
- Windows PE 3.0 and 4.0 for 64-bit do not support `racadm.exe` for DRAC 4.

- When you install Windows 2008 R2 SP1 using WinPE 3.0, the interfaces of Mellanox ConnectX-3 Dual Port 10 GbE DA/SFP+ network adapter do not display on WinPE 3.0 due to firmware limitation. To resolve the issue on post OS, install the Out of Box drivers downloaded from [dell.com/support](http://dell.com/support).
- To boot to winPE3.x (32-bit and 64-bit) in BIOS boot mode on all Dell's 13th generation of PowerEdge platforms, and Dell Precision 7910, disable USB3.0 and Memory Mapped IO.
- To boot to WinPE3.x (64-bit) in UEFI mode on all Dell's 13th generation of PowerEdge platforms, and Dell Precision 7910, enable Load Legacy Video Option ROM.
- Software RAID S100 and S300 supported only on Windows 2008 32-bit operating system.
- Software RAID S110 and S130 supported only on Windows 64-bit operating system.

## Installation Prerequisites

Before extracting Deployment Toolkit components, ensure that you have:

- A workstation that has 512 MB RAM
- A writable CD drive and CD-writing software (optional)
- Network access
- A minimum BIOS version is recommended on some of the platforms for all the DTK options to work properly. In general, it is a good practice to use the latest ("n") version of BIOS firmware or the "n-1" version that is available on "[dell.com/support](http://dell.com/support)."

## Installation Procedure

For complete installation and deployment instructions, see the *Dell OpenManage Deployment Toolkit User's Guide* and the *Dell OpenManage Deployment Toolkit Installation Guide* available at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).

## Installation and Configuration Notes

- The sample scripts are provided as examples for customers who want to develop their own deployment process. Some customers may find that the scripts work well in their environment, while some customers may need to develop their own scripts entirely from scratch. Customers deploying multiple systems to provide unique information for each server when appropriate. For example, system host names, IP addresses, and BIOS asset tags need to be unique for each system. Modify the shell scripts and configuration files to reflect the unique information for each system being deployed. Many options are available to optimize this process.
- Because of security reasons, the "ssh" and "scp" services are not available in DTK. The mount command is available in the DTK CD
- Installation of Dell utility partition is no longer supported on Windows PE.

## Upgrading From Previous Versions

When upgrading from a previous release of the DTK, ensure that you create environment for the new DTK version separately from the previous version of DTK. This step is necessary because the environments and requirements for the new DTK versions are completely different.

## Contacting Dell

**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

Go to [dell.com/contactdell](http://dell.com/contactdell).

**© 2016 Dell Inc. All rights reserved.** This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.