

# Dell EMC iDRAC Service Module 3.1 Release Notes

Topics:

- [Importance](#)
- [What's New](#)
- [Known Issues and Resolutions](#)
- [Installation](#)
- [Limitation](#)

## Release Type and Definition

The Integrated Dell Remote Access Controller (iDRAC) Service Module is a lightweight optional software application that can be installed on Dell 12G Servers or later. The iDRAC Service Module complements iDRAC interfaces — Graphical User Interface (GUI), RACADM CLI and Web Service Management (WSMAN) with additional monitoring data. You can configure the features on the supported operating system depending on the features to be installed and the unique integration needs in your environment.

## Version

3.1

## Release Date

December 2017

## Previous Version

2.5

## Importance

**RECOMMENDED:** Dell recommends applying this update during your next scheduled update cycle. This version contains some new features, feature enhancements and bug fix.

## What's New

- Support for Redhat Enterprise Linux 6.9 operating system
- Support for Redhat Enterprise Linux 7.4 operating system
- Support for SUSE Linux Enterprise Server 12 SP3 operating system
- Support for VMware ESXi 6.0 U3 and ESXi 6.5 U1 (Live VIB Installation Only)
- Support for Citrix XenServer 7.1 operating system
- Support for Ubuntu 16.04 operating system on 14th Generation server
- Enabling In-band SNMP Get feature for both Linux and Windows operating systems
- iDRAC GUI launcher for Windows operating systems
- iDRAC Service Module man page support added for Linux operating systems

**NOTE:** For a complete list of supported platforms and supported operating systems, see the Dell EMC Systems Software Support Matrix available in the required version of OpenManage Software at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).

## Known Issues and Resolutions

### Issue 1

Description: If DSET 3.4 or later is running, and iDRAC Service Module is shut down or uninstalled; a **Watchdog Timer Expiry** event is observed.

### Issue 2

Description: On Microsoft Windows 2012 operating systems; if an iDRAC reset operation is performed when any of the iDRAC sessions are opened using **iDRAC access via Host OS** feature, then the connection between iDRAC Service Module and iDRAC may not be re-established. Also, the Microsoft Windows service **IP Helper** might stop running.

**NOTE:** Microsoft KB3156418 update package fixes the above problem.

In such scenarios, the following steps will resolve the issue.

1. Restart the iDRAC Service Module.
2. Restart the Microsoft Windows **IP Helper** service.
3. If Open Manage Server Administrator is running; restart the `dsm_sa_datamgr` service.

Example:

- Open iDRAC GUI via the **iDRAC access via Host OS** feature.
- Perform an iDRAC firmware update from the GUI. This will reboot iDRAC with the new firmware.
- The **iDRAC Service Module** in the Host does not restart communication with iDRAC.
- IP Helper services stops running.

You can configure the Windows Remote Management (WinRM) Listener using a server authenticating certificate. If the server authenticating certificate is not available, iDRAC Service Module will force-enable the WinRM listener using a self-sign certificate. To configure the Windows Remote Management (WinRM) listener, you can create a self-signed certificate using the PowerShell cmdlet `New-SelfSignedCertificate` from Microsoft Windows Server 2012 or later. In operating systems prior to Microsoft Windows Server 2012 you cannot create a self-signed certificate due to the absence of PowerShell cmdlet.

### Issue 3

Description: After performing an iDRAC Hard Reset operation on certain Linux operating systems, the IPMI driver (`ipmi_si`) may become unresponsive because of an existing issue in the IPMI driver. If the IPMI driver becomes unresponsive, reload the IPMI driver (`ipmi_si`).

The issue is seen on Linux kernel version prior to 3.15. An update is available in the following operating systems with Linux kernel version 3.15 or later.

Steps to reload the IPMI driver:

- `modprobe -r ipmi_si` — If the removal fails, then all applications (such as iDRAC Service Module and OpenManage Server Administrator) using the `ipmi_si` need to be stopped and retry the operation.
- `modprobe ipmi_si` — Alternatively, the administrator can also restart the Host OS to resolve the issue.

### Issue 4

Description: After performing an iDRAC Hard Reset operation on certain VMware ESXi operating systems, the IPMI driver (`ipmi_si_drv`) may become unresponsive because of an existing issue in the IPMI driver. If the IPMI driver becomes unresponsive, reload the IPMI driver (`ipmi_si_drv`).

The issue is observed on all iDRAC Service Module v3.1 supported ESXi versions.

Steps to reload the `ipmi_si_drv`:

- `/etc/init.d/sfcbd-watchdog stop`
- `esxcfg-module -u ipmi_si_drv => unload ipmi_si_drv`

- `esxcfg-module ipmi_si_drv => load ipmi_si_drv`
- `/etc/init.d/sfcbd-watchdog start` — Alternatively, the administrator can also restart the Host OS to resolve the issue.

## Issue 5

When iDRAC Service Module is installed and running with the watchdog feature enabled on the host which has Redhat Enterprise Linux 7.x OS versions, a graceful shutdown issued through iDRAC will result in the expiry of the BMC watchdog timer with a "watchdog timer expired" event logged in the iDRAC Life Cycle Logs. When the BMC watchdog expires the configured recovery action will be taken (e.g. power cycle).

The Graceful shutdown on iDRAC may happen in the following scenarios:

1. When the "Graceful Shutdown" on iDRAC GUI is manually executed by the user.
2. The DUP Firmware updates are done for any of the Hardware Components.

This event occurs due to a known issue documented for Redhat Enterprise Linux 7.x OS versions ([http://topics-cdn.dell.com/pdf/red-hat-entps-lx-v7.0\\_release%20notes\\_en-us.pdf](http://topics-cdn.dell.com/pdf/red-hat-entps-lx-v7.0_release%20notes_en-us.pdf)).

No action is required by the user for this LCL event.

Workaround: Before performing either of the above mentioned scenarios, the 'Watchdog Auto System Recovery' action should be set as "None".

## Installation

On the Red Hat Enterprise Linux and SUSE Linux Enterprise Server operating systems, to perform an **Express Install** execute **dcism-setup.sh -x** from the **SYSMGMT/ISM/linux** directory.

**NOTE: On Red Hat Enterprise Linux, SUSE Linux Enterprise Server, and VMware ESX Operating Systems, you will not have the permission to run the script directly on the disk partition. Please use the format "sh ISM\_LX.sh" to run the script and initiate iDRAC Service Module installation.**

For more information on installation instructions, including silent installation options, see the *iDRAC Service Module Installation Guide*.

## Limitation

- Do not specify user profile folders such as a desktop folder (`C:\Users\administrator\Desktop`) as custom installation paths for installing iDRAC Service Module. This is because services running on the system account cannot access such folders.
- Lifecycle Controller logs are not seen in the new folder in the Event Viewer (169898) if you have recently changed the folder name of the Lifecycle Controller logs in the Event Viewer, Microsoft recommends that you reboot the operating system to be able to view the Lifecycle Controller logs under the new view name (BITS113354).
- On Windows operating system, a feature that is enabled using the installer and disabled using any interface other than the installer, can only be enabled using the same interface or the installer in GUI mode (BITS180635).
- Feature Lifecycle Log Replication on OS Log shows one-hour difference in the **EventTimeStamp** displayed in OS log, when daylight saving is applied. (BITS088419)
- The iDRAC Access via Host OS feature is not supported on VMware ESXi Operating Systems.
- When Local RACADM set is disabled through iDRAC interfaces,
  - The iDRAC Service Module will fail to configure the OS to iDRAC Pass-through in the USB NIC mode.
  - If OS to iDRAC Pass-through in the USB NIC mode is already configured, Watchdog feature does not work resulting in ASR000 event.

iDRAC Service Module functionality is restored when "Local racadm set" is enabled.

- EventID for Lifecycle Controller Logs replicated to OS log will be 0 for some of the past events.
- TrapID for In-band SNMP Traps will be 0 for some of the past traps.

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

**Copyright © 2017 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.