Inspiron 7306 2-in-1 Black

Setup and Specifications



Regulatory Model: P125G Regulatory Type: P125G002 July 2021 Rev. A02

Notes, cautions, and warnings

(i) NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2020-2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Chapter 1: Set up your Inspiron 7306 2-in-1 Black	5
Chapter 2: Views of Inspiron 7306 2-in-1 Black	7
Right	7
Left	7
Base	
Display	9
Bottom	10
Modes	
Chapter 3: Using the privacy shutter	12
Chapter 4: Dell Chargeable Active Pen	13
Active Pen Features	
Pairing the Active Pen with new computer	14
Using the pen garage	
Using the tail button	14
Pairing the Active Pen with existing computer	
Using the pen garage	
Using the tail button	
Reconnecting Bluetooth on the Active Pen	
Using the pen garage	
Using the tail button	
Charging the Active Pen	
Checking the Active Pen battery status	
Using Windows Settings	
Using Windows taskbar	
Functions of the Active Pen	
Configuring the tail button in Windows	
Configuring tail button in Pen & Windows Ink	
Specifications of Active Pen	
Active Pen troubleshooting	
Chapter 5: Specifications of Inspiron 7306 2-in-1 Black	
Dimensions and weight	
Processor	
Chipset	
Operating system	
Memory	
External ports	
Internal slots	
Wireless module	
Audio	
Storage	

Intel Optane Memory H10 with solid-state storage (optional)	27
Media-card reader	27
Keyboard	
Keyboard Camera	
Touchpad	29
Power adapter	29
Dallelv	
Display	
Fingerprint reader	
GPU—Integrated	
Operating and storage environment	
Chapter 6: Keyboard shortcuts	33
Chapter 7: Getting help and contacting Dell	35

Set up your Inspiron 7306 2-in-1 Black

(i) NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.



- **NOTE:** The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.
- 2. Finish Windows setup.
 - Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:
 - Connect to a network for Windows updates.
 - **NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
 - If connected to the Internet, sign in with or create a Microsoft account. If not connected to the Internet, create an offline account.
 - On the **Support and Protection** screen, enter your contact details.
- **3.** Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps

Resources	Description
Deel	My Dell Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and
	software updates if available. SupportAssist
	SupportAssist proactively and predictively identifies hardware and software issues on your
	computer and automates the engagement process with Dell Technical support. It addresses performance and stabilization issues, prevents security threats, monitors, and detects hardware

Table 1. Locate Dell apps (continued)

Resources	Description
	 failures. For more information, see SupportAssist for Home PCs User's Guide at www.dell.com/serviceabilitytools. Click SupportAssist and then, click SupportAssist for Home PCs. NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.
₹ ≎	Dell Update Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article 000149088 at www.dell.com/support.
	Dell Digital Delivery Download software applications, which are purchased but not preinstalled on your computer. For more information about using Dell Digital Delivery, see the knowledge base article 000129837 at www.dell.com/support.

Views of Inspiron 7306 2-in-1 Black

Right



1. microSD-card slot

Reads from and writes to the microSD-card. The computer supports the following card types:

- micro-Secure Digital (mSD)
- micro-Secure Digital High Capacity (mSDHC)
- micro-Secure Digital Extended Capacity (mSDXC)

2. Headset port

Connect headphones or a headset (headphone and microphone combo).

3. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

Left



1. Power and battery-status light

Indicates the power state and battery state of the computer.

Solid white—Power adapter is connected and the battery is charging.

Solid amber—Battery charge is low or critical.

Off—Battery is fully charged.

2. HDMI port

Connect to a TV, external display or another HDMI-in enabled device. Provides video and audio output.

3. Thunderbolt 4 USB Type-C port with Power Delivery

Supports USB4 Gen 3 Type-C, DisplayPort 2.0, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 20 Gbps for USB4 Gen 3 and up to 40 Gbps for Thunderbolt 4. Supports Power Delivery that enables two-way power supply between devices. Provides up to 5 V/3 A power output that enables faster charging.

NOTE: You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, see the knowledge base article 000124295 at www.dell.com/support.

INOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

NOTE: Connecting a USB Type-C power adapter to this port provides power to your computer and also charges the battery.

Base



1. Pen garage

Allows you to charge the Active Pen. Replace the Active Pen here after use.

2. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

3. Left-click area

Press to left-click.

4. Right-click area

Press to right-click.

5. Power button with fingerprint reader


Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

Place your finger on the power button to log in with the fingerprint reader.

NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

Display

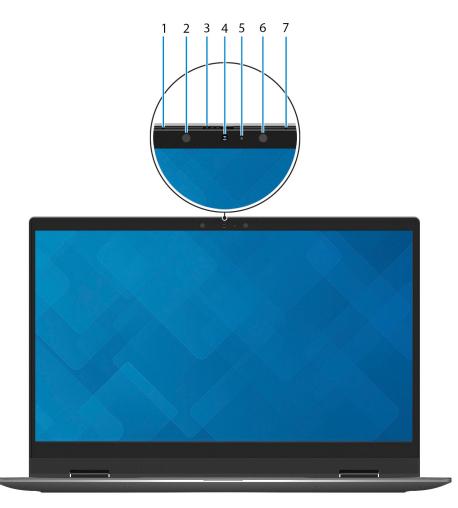

1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

3. Privacy shutter

Slide the privacy shutter to cover the camera lens and protect your privacy when the camera is not in use.

4. Camera (RGB and Infrared)

This camera provides both three color channel (RGB) functionality that enables you to video chat, capture photos, and record videos as well as Infrared (IR) functionality that enables Windows Hello tracking.

5. Camera-status light

Turns on when the camera is in use.

6. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

7. Right microphone

Provides digital sound input for audio recording and voice calls.

Bottom



1. Left speaker

Provides audio output.

2. Right speaker

Provides audio output.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Modes

Notebook



Tablet




Stand



Tent



Using the privacy shutter

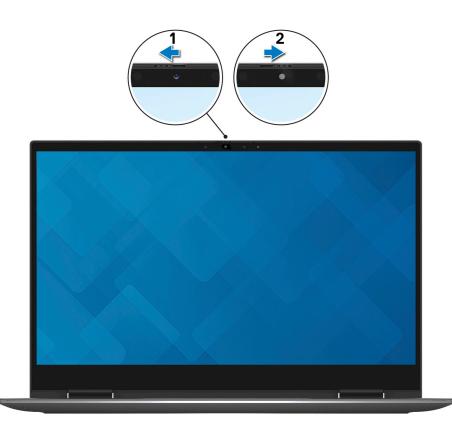

- 1. Slide the privacy shutter to the left to access the camera lens.
- 2. Slide the privacy shutter to the right to cover the camera lens.

Dell Chargeable Active Pen

The Dell Chargeable Active Pen is a digital input device that enables you to write and draw. It contains integrated rechargeable lithium-ion battery and supports Bluetooth 5.

Active Pen Features



1. Tail button

Use the tail button to erase the content that is written on the screen using the pen.

2. Active Pen status light

Indicates the different status of the Active Pen as listed in the following table.

NOTE: The Active Pen status light is hidden. It only turns on when there is activity such as Bluetooth pairing, low battery indication, or when battery is getting charged.

Activity	Light status	What it means?
Bluetooth pairing	White - Slow continuous pulsing (dim to bright) white light for 60 seconds.	Active Pen is in pairing mode.
Bluetooth pairing	White - Solid white light for 3 seconds and turns off	Bluetooth connection is established.
Low battery	Amber - Flashing amber light for 5 seconds and turns off	Battery is low or less than 10%.
Charging	White - Solid	Active Pen is getting charged and will turn off when charging is complete.
Windows Ink apps	White - Flicker once	The Windows Ink apps are displayed.
Bluetooth reconnection failed	Amber - Flickers continuously	Indicates the Bluetooth reconnection failure.

Table 2. Active Pen status light

3. Pogo pins (2)

Enables charging the Active Pen when the pen is placed in the garage.

(i) NOTE: Ensure both pogo pins on the Active Pen are aligned with the contact points on the pen garage.

4. Barrel button

This button opens the context menu or enables right-click.

5. Tip

Use the tip to move the pointer on the touchscreen. Enables you to write, draw, and select objects.

Pairing the Active Pen with new computer

Using the pen garage

(i) NOTE: Ensure that the Bluetooth on your computer is turned on before performing the following steps.

To pair the Active Pen on a new computer, do the following:

- 1. Place the Active Pen in the pen garage.
- Show notifications connect using Swift Pair appears on the right side of the taskbar.
- 2. Click Yes.
 - New Bluetooth found appears on the right side of the taskbar.
- 3. Click Connect.

Using the tail button

(i) NOTE: Ensure that the Bluetooth on your computer is turned on before performing the following steps.

To pair the Active Pen to a new computer using the tail button, do the following:

- Press and hold the tail button for five seconds, until the LED starts to blink white. Show notifications connect using Swift Pair appears on the right side of the task bar.
- Click Yes. New Bluetooth found appears on the right side of the taskbar.
- 3. Click Connect.

Pairing the Active Pen with existing computer

Using the pen garage

(i) NOTE: Ensure that the Bluetooth on your computer is turned on before performing the following steps.

To pair the Active Pen to a existing computer, do the following:

- Place the Active Pen in the pen garage. On the taskbar, a notification appears to add bluetooth or other devices.
- 2. Click Add Bluetooth or other devices. Add a device window appears.
- 3. Click Bluetooth.
 - A list of bluetooth enabled devices within the range are displayed.
- 4. Click PN771M Pen from the list of devices displayed.
- 5. Click Connect, and then click Done.

Using the tail button

(i) NOTE: Ensure that the Bluetooth on your computer is turned on before performing the following steps.

You can also pair the Active Pen to existing computer, using the tail button.

- 1. Press and hold the tail button for five seconds, until the LED starts to blink white. **New Bluetooth pen found** message is displayed on the taskbar.
- 2. Click Add Bluetooth or other devices. Add a device window appears.
- 3. Click Bluetooth.

- A list of bluetooth enabled devices within the range are displayed.
- 4. Click PN771M Pen from the list of devices displayed.
- 5. Click Connect, and then click Done.

Reconnecting Bluetooth on the Active Pen

If the Active Pen is out of the Bluetooth range, you can reconnect the Active Pen to your computer.

Using the pen garage

(i) NOTE: Ensure that the bluetooth on your computer is turned on before performing the following steps.

To reconnect the Bluetooth, do the following:

- 1. Place the Active Pen in the pen garage.
- 2. In the taskbar, click **Bluetooth**, and then click **Go to Settings**. The **Bluetooth & other devices** window is displayed.
- 3. In Bluetooth & other devices window, the status of the Active Pen is changed from paired to connected.

Using the tail button

(i) NOTE: Ensure that the Bluetooth on your computer is turned on before performing the following steps.

You can also reconnect the Active Pen using the tail button.

- 1. Click the tail button one time, until the LED starts to blink white.
- In the taskbar, click Bluetooth, and then click Go to Settings. The Bluetooth & other devices window is displayed.
- 3. In Bluetooth & other devices window, the Active Pen status changes from paired to connected.

Charging the Active Pen

To charge the Active Pen, do the following:

- 1. Align the two pogo pins on the Active Pen with the contact points on the Active Pen garage.
- 2. Place the Active Pen into the Active Pen garage. The Active Pen starts charging.
 - **NOTE:** The estimated time taken to charge the Active Pen is given in the following table.

Table 3. Charging time

Estimated charging time	Battery charge status
5 minutes	0% to 20%
30 minutes	0% to 98%
45 minutes	100%

Checking the Active Pen battery status

Using Windows Settings

You can check the Active Pen battery status in the **Bluetooth & other devices** window.

- 1. Click Settings.
- Click Bluetooth & other devices. The battery status of the Active Pen is displayed under Mouse, keyboard & pen.

Using Windows taskbar

You can also view the battery status of the Active Pen from the taskbar.

- 1. On the taskbar, click **Bluetooth Devices.**
- 2. Click Show Bluetooth Devices.

The **Bluetooth & other devices** window is displayed. The battery status of the Active Pen is displayed under **Mouse**, **keyboard & pen** category.

Functions of the Active Pen

(i) NOTE: The functions of the Active Pen that is listed below work only on supported applications such as Microsoft Whiteboard.

1. Draw

Touch the tip of the Active Pen on the screen and start drawing.





2. Enabling right-click

- **a.** Press and hold the barrel button on the Active Pen.
- **b.** Tap the tip of the Active Pen on the screen once to right-click.



3. Make a selection

- **a.** Press and hold the barrel button on the Active Pen.
- **b.** Place the tip of the Active Pen on the screen and continue moving it to select the content.



4. Erase

Place the tail button of the Active Pen on the screen and continue moving it to erase the content.



Configuring the tail button in Windows

When the Active Pen is paired using Windows, it supports Windows Ink workshop shortcuts. You can configure the shortcuts as listed below.

- 1. Click Start.
- 2. Select Settings 统. The Settings window is displayed.
- Click Pen & Windows Ink. The Pen & Windows Ink window is displayed.

Configuring tail button in Pen & Windows Ink

1. Click once

When the tail button is clicked once, the screen snipping is enabled by default. Then place the tip of the Active Pen on the screen and draw the selection area that you want to snip.

NOTE: You can also configure to open other applications like Windows Ink Workspace, OneNote, Launch a classic app or Launch a universal app on a single click of the tail button.

2. Double-click

When the tail button is clicked twice, the screen snipping is enabled and once the snip is completed, it launches Snip & Sketch application for editing.

() NOTE: You can also configure to open other applications like Windows Ink Workspace, OneNote, Launch a classic app or Launch a universal app, along with home, Microsoft Whiteboard, Sticky Notes and Snip & Sketch to edit the snipped images on double-click of the tail button.

3. Press and hold

Long pressing of the tail button opens sticky notes by default.

() NOTE: You can also configure to open other applications like Windows Ink Workspace, OneNote, Launch a classic app or Launch a universal app, along with home, Microsoft Whiteboard, Sticky Notes and Snip & Sketch on double-click of the tail button.

Specifications of Active Pen

The following table lists the specifications of the Active Pen on your Inspiron 7306 2-in-1 Black.

Table 4. Active Pen specifications

Description	Values
Model	PN771M
Dimensions:	
Length	137.05 mm (5.39 in.)
Diameter	9 mm (0.35 in.)
Weight	14 g (0.031 lbs)
Wireless	Bluetooth 5
Wireless operating range	10 m (32.81 ft)
Minimum height for pen tip detection	8 mm (0.31 in.)
Batteries	Integrated lithium-ion rechargeable battery
Supported operating system	Windows 10Windows 11

Active Pen troubleshooting

Table 5. Active Pen troubleshooting

Problem	Possible causes	Possible solutions
Active Pen does not work	Integrated lithium-ion battery has no charge left	 Place the Active Pen in the pen garage to charge the pen and retry. NOTE: Ensure that the Active Pen is always placed in the pen garage when not in use.
Default functions of the barrel button do not work	Functions are not supported by the application	Test the barrel button functionality using Microsoft OneNote or any other application that supports these features.

Table 5. Active Pen troubleshooting (continued)

Problem	Possible causes	Possible solutions
Pressing the tail button once does not open the required application	 The application is not installed. Active Pen is not paired with your computer. 	 Ensure the application is installed on your computer. Ensure that the Active Pen is paired with your computer. For more information, see Pairing the Active Pen.
Pressing the tail button twice does not capture screenshot	 Active Pen is not paired with your computer. Windows update KB2968599 is not installed on your computer. 	 Install the latest Bluetooth driver on your computer. Install the Windows update KB2968599 from the Microsoft website.
Unable to pair the Active Pen with your computer	 The device that you are trying to pair the Active Pen with is not supported. Bluetooth driver on your computer is not the latest. 	 Active Pen works only with Inspiron 7306 2-in-1 Black computer. Install the latest Bluetooth driver on your computer.
Bluetooth device list displays the Active Pen as 'Not Connected'	Active Pen is not paired with your computer correctly.	 Install the latest Bluetooth driver on your computer. Remove the Active Pen from the list of available Bluetooth devices and pair it again. For more information, see Reconnecting Bluetooth on the Active Pen.

Specifications of Inspiron 7306 2-in-1 Black

Dimensions and weight

The following table lists the height, width, depth, and weight of your Inspiron 7306 2-in-1 Black.

Table 6. Dimensions and weight

Description	Values
Height:	
Front height	15.94 mm (0.63 in.)
Rear height	16.74 mm (0.66 in.)
Width	305.20 mm (12.02 in.)
Depth	206.40mm (8.13 in.)
Weight (maximum)	 1.37 kg (3.02 lb) NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.

Processor

The following table lists the details of the processors supported by your Inspiron 7306 2-in-1 Black.

Table 7. Processor

Description	Option one	Option two
Processor type	11 th Generation Intel Core i5-1135G7	11 th Generation Intel Core i7-1165G7
Processor wattage	15 W	15 W
Processor core count	4	4
Processor thread count	8	8
Processor speed	Up to 4.2 GHz	Up to 4.7 GHz
Processor cache	8 MB	12 MB
Integrated graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics

Chipset

The following table lists the details of the chipset supported by your Inspiron 7306 2-in-1 Black.

Table 8. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	11 th Generation Intel Core i5/i7
DRAM bus width	128-bit
Flash EPROM	16+8 MB
PCIe bus	Up to Gen3

Operating system

Your Inspiron 7306 2-in-1 Black supports the following operating systems:

- Windows 11 Home, 64-bit
- Windows 11 Pro, 64-bit
- Windows 11 Pro National Academic, 64-bit
- Windows 10 Home, 64-bit
- Windows 10 Pro, 64-bit

Memory

The following table lists the memory specifications of your Inspiron 7306 2-in-1 Black.

Table 9. Memory specifications

Description	Values
Memory slots	No memory slots () NOTE: The memory module is integrated on the system board.
Memory type	Dual-channel LPDDR4x
Memory speed	4267 MHz
Maximum memory configuration	16 GB
Minimum memory configuration	8 GB
Memory size per slot	4 GB and 8 GB
Memory configurations supported	 8 GB, 2 x 4 GB, LPDDR4x, 4267 MHz, dual-channel 16 GB, 2 x 8 GB, LPDDR4x, 4267 MHz, dual-channel

External ports

The following table lists the external ports on your Inspiron 7306 2-in-1 Black.

Table 10. External ports

Description	Values
USB ports	 One USB 3.2 Gen 1 port One Thunderbolt 4 Type-C port with Power Delivery
Audio port	One headset (headphone and microphone combo) port
Video port	One HDMI 2.0 port
Media-card reader	One microSD-card slot
Docking port	Not supported
Power-adapter port	Supported through USB Type-C (65 W)
Security	Not supported

Internal slots

The following table lists the internal slots of your Inspiron 7306 2-in-1 Black.

Table 11. Internal slots

Description	Values
M.2	 One M.2 2230 slot for WiFi and Bluetooth combo card One M.2 2280 slot for solid-state drive/Intel Optane Memory/Intel Optane Storage (i) NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article 000144170 at www.dell.com/support.

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module supported on your Inspiron 7306 2-in-1 Black.

(i) NOTE: The wireless module is integrated on the system board.

Table 12. Wireless module specifications

Description	Values
Model number	Intel AX201
Transfer rate	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz
Wireless standards	 WiFi 802.11a/b/g Wi-Fi 4 (WiFi 802.11n) Wi-Fi 5 (WiFi 802.11ac) Wi-Fi 6 (WiFi 802.11ax)

Table 12. Wireless module specifications (continued)

Description	Values
Encryption	64-bit/128-bit WEPAES-CCMPTKIP
Bluetooth	Bluetooth 5

Audio

The following table lists the audio specifications of your Inspiron 7306 2-in-1 Black.

Table 13. Audio specifications

Description		Values
Audio controller		Realtek ALC3254
Stereo conversion		Supported
Internal audio interface		High-definition audio
External audio interface		Universal audio jack
Number of speakers		Тwo
Internal-speaker amplifier		Supported
External volume controls		Keyboard shortcut controls
Speaker output:		
Average spe	aker output	2 W
Peak speake	r output	2.5 W
Subwoofer output		Not supported
Microphone		Dual-array microphones

Storage

This section lists the storage options on your Inspiron 7306 2-in-1 Black.

Your Inspiron 7306 2-in-1 Black supports one of the following storage configurations:

- One M.2 2230/2280 solid-state drive
- One M.2 2280 Intel Optane Memory H10

The primary drive of your Inspiron 7306 2-in-1 Black varies with the storage configuration. For computers:

- with the M.2 2230/2280 solid-state drive, the solid-state drive is the primary drive.
- with the M.2 2280 Intel Optane Memory H10, the Intel Optane Memory is the primary drive.

Table 14. Storage specifications

Storage type	Interface type	Capacity
One M.2 2230 PCIe/NVMe solid-state drive	PCIe Gen3 x4 NVMe, up to 32 Gbps	Up to 512 GB

Table 14. Storage specifications (continued)

Storage type	Interface type	Capacity
One M.2 2280 PCIe/NVMe solid-state drive	PCle Gen3 x4 NVMe, up to 32 Gbps	Up to 2 TB
One M.2 2280 Intel Optane Memory H10 with Solid State Storage	PCle Gen3 x2 NVMe, up to 32 Gbps	Up to 1 TB

Intel Optane Memory H10 with solid-state storage (optional)

Intel Optane Memory technology utilizes 3D XPoint memory technology and functions as a non-volatile storage cache/ accelerator and/or storage device depending on the Intel Optane Memory installed in your computer.

Intel Optane Memory H10 with solid-state storage functions as both a non-volatile storage cache/accelerator (enabling enhanced read/write speeds for hard-drive storage) and a solid-state storage solution. It neither replaces nor adds to the memory (RAM) installed on your computer.

Table 15. Intel Optane Memory H10 with solid-state storage specifications

Description	Values
Interface	PCle Gen3 x4 NVMe
Connector	M.2
Form factor	2280
Capacity (Intel Optane memory)	Up to 32 GB
Capacity (solid-state storage)	Up to 1 TB

(i) NOTE: Intel Optane Memory H10 with solid-state storage is supported on computers that meet the following requirements:

- 9th Generation or higher Intel Core i3/i5/i7 processors
- Windows 10 64-bit version or higher
- Intel Rapid Storage Technology driver version 15.9.1.1018 or higher

Media-card reader

The following table lists the media cards supported by your Inspiron 7306 2-in-1 Black.

Table 16. Media-card reader specifications

Description	Values
Media-card type	One microSD-card slot
Media-cards supported	 micro-Secure Digital (mSD) micro-Secure Digital High Capacity (mSDHC) micro-Secure Digital Extended Capacity (mSDXC)
(i) NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.	

Keyboard

The following table lists the keyboard specifications of your Inspiron 7306 2-in-1 Black.

Table 17. Keyboard specifications

Description	Values
Keyboard type	Backlit keyboard
Keyboard layout	QWERTY
Number of keys	 United States and Canada: 81 keys United Kingdom: 82 keys
Keyboard size	X=18.7 mm key pitch Y=18.05 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key. (i) NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program. For more information, see keyboard shortcuts.Keyboard shortcuts

Camera

The following table lists the camera specifications of your Inspiron 7306 2-in-1 Black.

Table 18. Camera specifications

Description		Values
Nurr	ber of cameras	One
Carr	iera type	RGB-Infrared (RGB-IR) HD camera
Carr	nera location	Front
Carr	nera sensor type	CMOS sensor technology
Carr	iera resolution:	
	Still image	0.92 megapixel
	Video	1280 x 720 (HD) at 30 fps
Infrared camera resolution:		
	Still image	0.23 megapixel
	Video	640 x 360 at 30 fps
Diagonal viewing angle:		
	Camera	77.7 degrees

Table 18. Camera specifications (continued)

Description		Values
	Infrared camera	77.7 degrees

Touchpad

The following table lists the touchpad specifications of your Inspiron 7306 2-in-1 Black.

Table 19. Touchpad specifications

Description Touchpad resolution:		Values	
	Horizontal	1920	
	Vertical	1080	
Touchpad dimensions:			
	Horizontal	105 mm (4.13 in.)	
	Vertical	60 mm (2.36 in.)	
Touchpad gestures		For more information about touchpad gestures available on Windows, see the Microsoft knowledge base article 4027871 at support.microsoft.com.	

Power adapter

The following table lists the power adapter specifications of your Inspiron 7306 2-in-1 Black.

Table 20. Power adapter specifications

Description	Values
Туре	65 W
Input voltage	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz
Input current (maximum)	1.50 A
Output current (continuous)	3.25 A
Rated output voltage	20 VDC
Temperature range:	
Operating	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)

Battery

The following table lists the battery specifications of your Inspiron 7306 2-in-1 Black.

Table 21. Battery specifications

Description		Values	
Battery type		60 Wh, 4-cell "smart" lithium-ion	
Battery volta	ige	7.60 VDC	
Battery weig	ht (maximum)	0.27 kg (0.59 lb)	
Battery dime	nsions:		
	Height	5.70 mm (0.22 in.)	
	Width	238 mm (9.37 in.)	
	Depth	95.90 mm (3.77 in.)	
Temperature	range:		
	Operating	0°C to 35°C (32°F to 95°F)	
	Storage	-40°C to 65°C (-40°F to 149°F)	
Battery oper	ating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	
Battery charging time (approximate) (i) NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on www.dell.com.		4 hours (when the computer is off)	
Coin-cell battery		CR2032	

Display

The following table lists the display specifications of your Inspiron 7306 2-in-1 Black.

Table 22. Display specifications

Description		Option one	Option two
Display type		13.3-inch Full High Definition (FHD)	13.3-inch Ultra High Definition (UHD)
Display-panel technology		Wide-Viewing Angle (WVA)	Wide-Viewing Angle (WVA)
Display-panel dimensions (active area):			
	Height	165.24 mm (6.51 in.)	165.24 mm (6.51 in.)
	Width	293.76 mm (11.57 in.)	293.76 mm (11.57 in.)
	Diagonal	337.82 mm (13.30 in.)	337.82 mm (13.30 in.)

Description	Option one	Option two
Display-panel native resolution	1920 x 1080	3840 x 2160
Luminance (typical)	300 nits	300 nits
Megapixels	2.07	8.29
Color gamut	100% (sRGB)	100% (sRGB)
Pixels Per Inch (PPI)	166	332
Contrast ratio (min.)	800:1	1000:1
Response time (max.)	35 ms	35 ms
Refresh rate	60 Hz	60 Hz
Horizontal view angle	80 +/-	80 +/-
Vertical view angle	80 +/-	80 +/-
Pixel pitch	0.15 mm	0.08 mm
Power consumption (maximum)	1.99 W	4.6 W
Anti-glare vs glossy finish	TrueLife	TrueLife
Touch options	Yes	Yes

Table 22. Display specifications (continued)

Fingerprint reader

The following table lists the fingerprint-reader specifications of your Inspiron 7306 2-in-1 Black.

(i) NOTE: The fingerprint reader is located on the power button.

Table 23. Fingerprint reader specifications

Description	Values
Fingerprint-reader sensor technology	Capacitive
Fingerprint-reader sensor resolution	500 dpi
Fingerprint-reader sensor pixel size	80 x 64

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Inspiron 7306 2-in-1 Black.

Table 24. GPU—Integrated

Controller	Memory size	Processor
Intel Iris Xe Graphics	Shared system memory	11 th Generation Intel Core i5/i7

Operating and storage environment

This table lists the operating and storage specifications of your Inspiron 7306 2-in-1 Black.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 25. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10,000 ft)	-15.2 m to 10668 m (-49.87 ft to 35,000 ft)

 \ast Measured using a random vibration spectrum that simulates user environment.

 $\ensuremath{^\dagger}$ Measured using a 2 ms half-sine pulse when the hard drive is in use.

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift** + **2**, **e** is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing Fn + Esc. Subsequently, multi-media control can be invoked by pressing Fn and the respective function key. For example, mute audio by pressing Fn + F1.

NOTE: You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in BIOS setup program.

Function key Re-defined key (for multi-media Behavior control) ⊲×_{F1} ⊲× Mute audio Fn ⊄'_{F2} **⊲**° Fn Decrease volume **⊲**»_{F3} し 》 Fn Increase volume ⊳II Play/Pause Fn ·ビィ_{F5} Fn `Ľ Toggle keyboard backlight (optional) Fn Decrease brightness ₩_{F7} Fn ☀ Increase brightness ட் _{F8} Fn Switch to external display prt sc F10 prt sc Fn Print screen

Table 26. List of keyboard shortcuts

Table 26. List of keyboard shortcuts (continued)

Function key	Re-defined key (for multi-media control)	Behavior
home F11	Fn + home	Home
end F12	Fn + end F12	End

The ${f Fn}$ key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 27. List of keyboard shortcuts

Function key	Behavior
Fn + B	Pause/Break
Fn + insert	Sleep
Fn + H	Toggle between power and battery-status light
Fn + S	Toggle scroll lock
Fn + R	System request
Fn + ctrl	Open application menu
Fn + esc 📾	Toggle Fn-key lock
Fn + page up	Page up
Fn + page down	Page down

7

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 28. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	Deell
Tips	·••
Contact Support	In Windows search, type Contact Support, and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support. For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer.
Dell knowledge base articles for a variety of computer concerns	 Go to www.dell.com/support. On the menu bar at the top of the Support page, select Support > Knowledge Base. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

(i) NOTE: Availability varies by country/region and product, and some services may not be available in your country/region.

NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.