

Inspiron 7415 2-in-1

Service Manual



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: Working inside your computer	6
Before working inside your computer.....	6
Safety instructions.....	6
Radiation Exposure Statement	7
Electrostatic discharge—ESD protection.....	7
ESD field service kit	8
Transporting sensitive components.....	9
After working inside your computer.....	9
Chapter 2: Removing and installing components	10
Recommended tools.....	10
Screw list.....	10
Major components of Inspiron 7415 2-in-1.....	11
Base cover.....	13
Removing the base cover.....	13
Installing the base cover.....	15
Battery.....	17
Lithium-ion battery precautions.....	17
Removing the 3-cell or 4-cell battery.....	17
Installing the 3-cell or 4-cell battery.....	19
Coin-cell battery.....	21
Removing the coin-cell battery.....	21
Installing the coin-cell battery.....	22
Memory module.....	23
Removing the memory module.....	23
Installing the memory module.....	24
Wireless card.....	26
Removing the wireless card.....	26
Installing the wireless card.....	27
Solid-state drive.....	28
Removing the M.2 2280 solid-state drive.....	28
Installing the M.2 2280 solid-state drive.....	29
Removing the M.2 2230 solid-state drive.....	31
Installing the M.2 2230 solid-state drive.....	32
Speakers.....	34
Removing the speakers.....	34
Installing the speakers.....	35
Heat sink.....	35
Removing the heat sink.....	35
Installing the heat sink.....	37
Display assembly.....	39
Removing the display assembly.....	39
Installing the display assembly.....	41
Touchpad.....	43


Removing the touchpad.....	43
Installing the touchpad.....	44
Fan.....	45
Removing the fan.....	45
Installing the fan.....	45
I/O board.....	46
Removing the I/O board.....	46
Installing the I/O board.....	47
Power button.....	49
Removing the power button.....	49
Installing the power button	49
Removing the power button with fingerprint reader	50
Installing the power button with fingerprint reader	51
System board.....	52
Removing the system board.....	52
Installing the system board.....	55
Palm-rest and keyboard assembly.....	59
Removing the palm-rest and keyboard assembly.....	59
Installing the palm-rest and keyboard assembly.....	60
Chapter 3: Drivers and downloads.....	61
Chapter 4: System setup.....	62
BIOS overview.....	62
Entering BIOS setup program.....	62
Navigation keys.....	62
Boot Sequence.....	62
One time boot menu.....	63
System setup options.....	63
System and setup password.....	66
Assigning a system setup password.....	67
Deleting or changing an existing system setup password.....	67
Clearing CMOS settings.....	68
Clearing BIOS (System Setup) and System passwords.....	68
Updating the BIOS.....	68
Updating the BIOS in Windows.....	68
Updating the BIOS using the USB drive in Windows.....	68
Updating the BIOS from the F12 One-Time boot menu.....	69
Chapter 5: Troubleshooting.....	70
Handling swollen Lithium-ion batteries.....	70
SupportAssist diagnostics.....	70
Locate the Service Tag or Express Service Code of your Dell computer	71
System diagnostic lights.....	71
Built-in self-test (BIST).....	72
Recovering the operating system.....	72
Backup media and recovery options.....	72
WiFi power cycle.....	73
Drain residual flea power (perform hard reset).....	73

Chapter 6: Getting help and contacting Dell..... 74




Working inside your computer

Before working inside your computer

About this task








 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. Click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Disconnect your computer and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
 **CAUTION:** To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.
5. Remove any media card and optical disc from your computer, if applicable.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at www.dell.com/regulatory_compliance.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable.

When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.

CAUTION: Press and eject any installed card from the media-card reader.

CAUTION: Exercise caution when handling Lithium-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

NOTE: The color of your computer and certain components may appear differently than shown in this document.

Radiation Exposure Statement

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W

NOTE: Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.
- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

ESD protection summary


It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

Removing and installing components

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdrivers #0
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary with the configuration ordered.

Table 1. Screw list














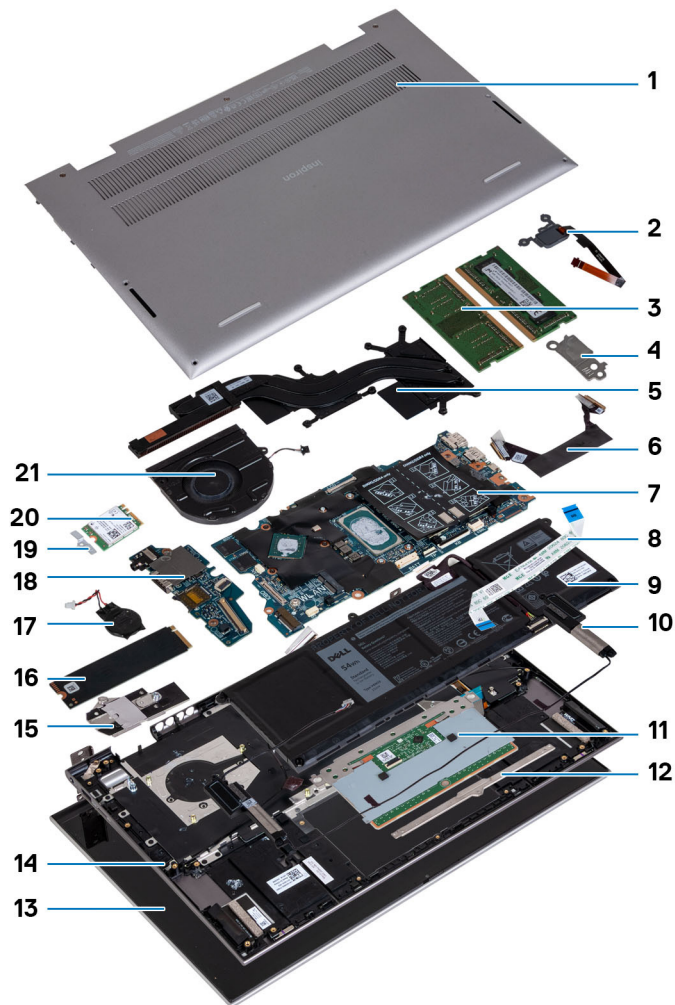
Component	Secured to	Screw type	Quantity	Screw image
Base cover	Palm-rest and keyboard assembly	M2x4	4	
Battery	Palm-rest and keyboard assembly	M2x3	5 (For computers shipped with a 4-cell battery) 3 (For computers shipped with a 3-cell battery)	
Wireless-card bracket	Wireless card and system board	M2x3	1	
Solid-state bracket	System board	M1.6x2.5	1	
M.2 2230 Solid-state drive	System board	M2x3	1	
Fan	Palm-rest and keyboard assembly	M2x3	2	
Touchpad bracket	Palm-rest and keyboard assembly	M1.6x2	3	

Table 1. Screw list (continued)

Component	Secured to	Screw type	Quantity	Screw image
Touchpad	Palm-rest and keyboard assembly	M2x1.8	2	
I/O board	Palm-rest and keyboard assembly	M2x3	2	
Display hinges	Palm-rest and keyboard assembly	M2.5x3.5	4	
Power button/Power button with fingerprint reader	Palm-rest and keyboard assembly	M1.6X2	2	
USB Type-C bracket	Palm-rest and keyboard assembly	M2.5x4.5	2	
System board	Palm-rest and keyboard assembly	M2x1.8	2	

Major components of Inspiron 7415 2-in-1

The following image shows the major components of Inspiron 7415 2-in-1.



1. Base cover
2. Power button with optional fingerprint reader
3. Memory modules
4. USB Type-C bracket
5. Heat sink
6. I/O-board cable
7. System board
8. Touchpad cable
9. Battery
10. Speakers
11. Touchpad
12. Touchpad-bracket
13. Display assembly
14. Palm-rest and keyboard assembly
15. Solid-state drive bracket
16. M.2 2280 solid-state drive
17. Coin-cell battery
18. I/O board
19. Wireless-card bracket
20. Wireless card
21. Fan

i NOTE: Dell provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in [Before working inside your computer.](#)

About this task

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.





3x
M2x7.5



4x
M2x4



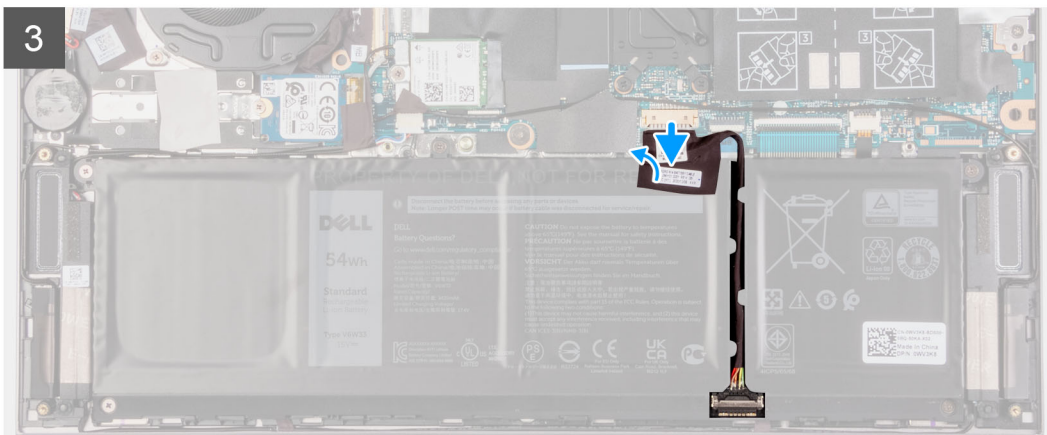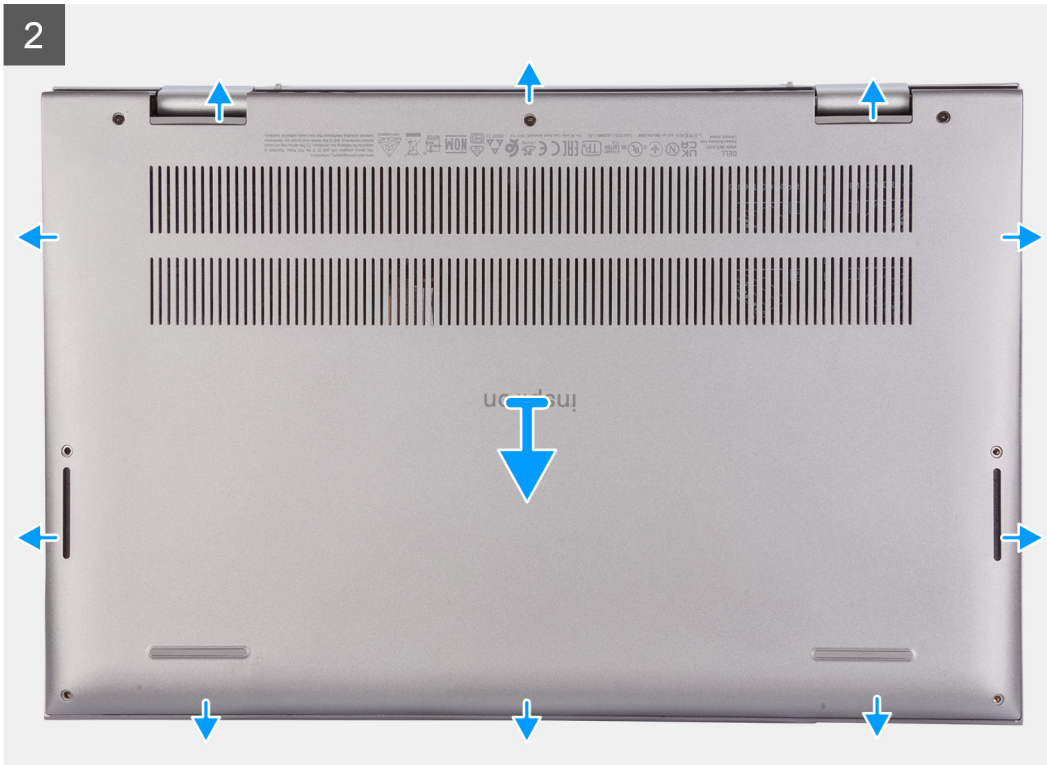

Steps

1. Remove the four screws (M2x4) that secure the base cover to the palm-rest and keyboard assembly.
2. Loosen the three captive screws that secure the base cover to the palm-rest and keyboard assembly.
 - i** **NOTE:** Upon loosening the three captive screws, the base cover will open up creating a gap between the base cover and the palm-rest assembly.
3. Starting from the top-left corner, pry the base cover to release the base cover from the palm-rest and keyboard assembly.
4. Peel the tape that secures the battery cable to the system board and disconnect the battery cable from the system board.
5. Turn the computer over and open the display.

6. Press and hold the power button for 15 seconds to ground the computer and drain the flea power. After draining the flea power, close the display, and turn the computer over.


Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.

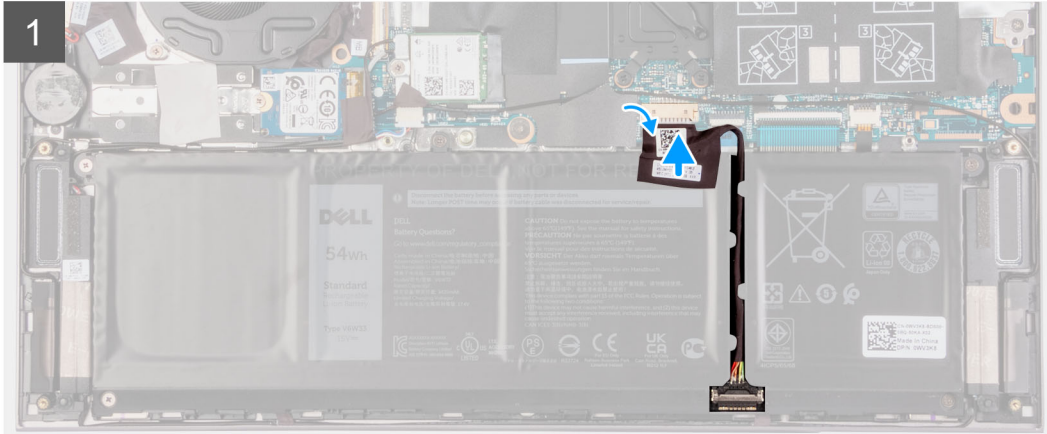

3x
M2x7.5



4x
M2x4



Steps

1. Connect the battery-cable connector to the system board and adhere the tape that secures the battery cable to the battery.

2. Align the screw holes on the base cover with the screw holes on the palm-rest and keyboard assembly, and then snap the base cover into place.
3. Replace the four screws (M2x4) that secure the base cover to the palm-rest and keyboard assembly.
4. Tighten the three captive screws that secure the base cover to the palm-rest and keyboard assembly.

Next steps

1. Follow the procedure in [After working inside your computer](#).

Battery

Lithium-ion battery precautions

⚠ CAUTION:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the system and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See www.dell.com/contactdell.
- Always purchase genuine batteries from www.dell.com or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen Lithium-ion batteries, see [Handling swollen Lithium-ion batteries](#).

Removing the 3-cell or 4-cell battery

Removing the 3-cell battery

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the battery and provides a visual representation of the removal procedure.



3x
M2x3

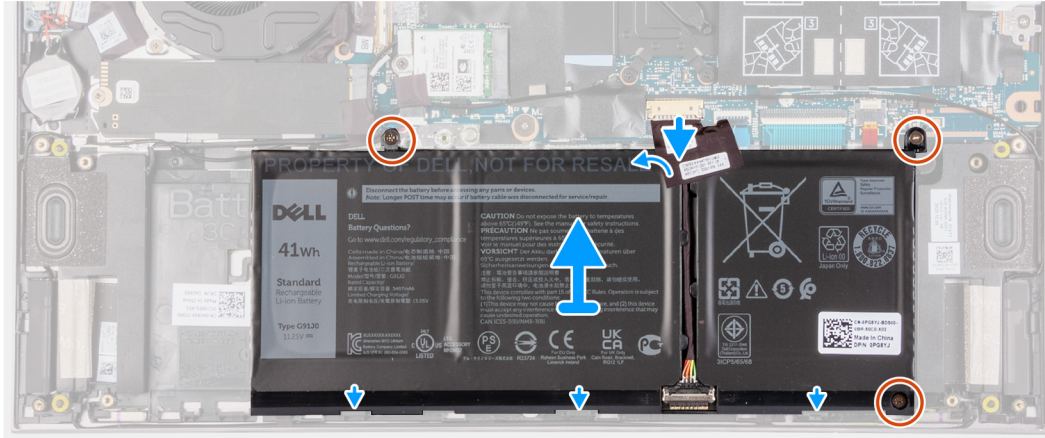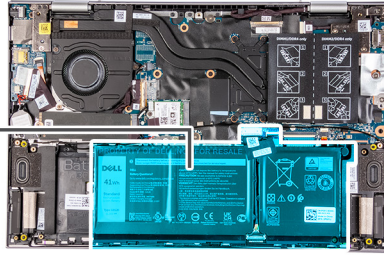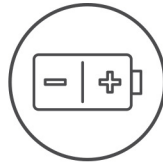

Steps

1. Peel the tape that secures the battery cable to the system board (applicable only if not peeled earlier).
2. Disconnect the battery cable from the system board (applicable only if not disconnected earlier).
3. Remove the three screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
4. Lift the battery off the palm-rest and keyboard assembly.




Removing the 4-cell battery

About this task

The following image indicates the location of the battery and provides a visual representation of the removal procedure.



5x
M2x3

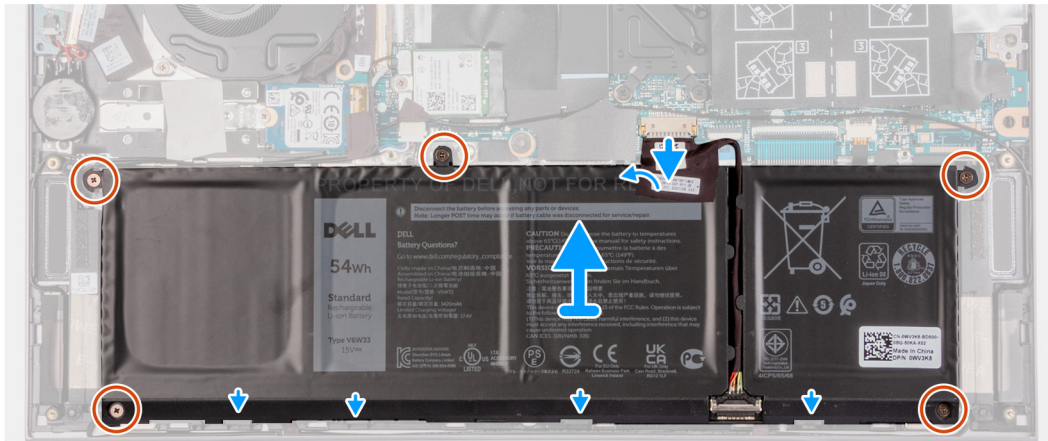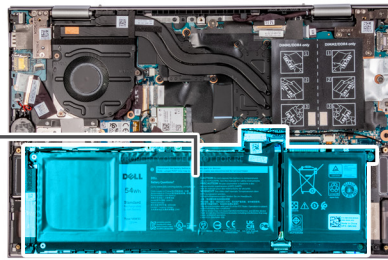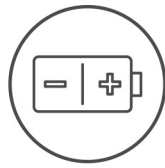

Steps

1. Peel the tape that secures the battery cable to the system board (applicable only if not peeled earlier).
2. Disconnect the battery cable from the system board (applicable only if not disconnected earlier).
3. Remove the five screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
4. Lift the battery off the palm-rest and keyboard assembly.

Installing the 3-cell or 4-cell battery

Installing the 3-cell battery

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the battery and provides a visual representation of the installation procedure.



3x
M2x3

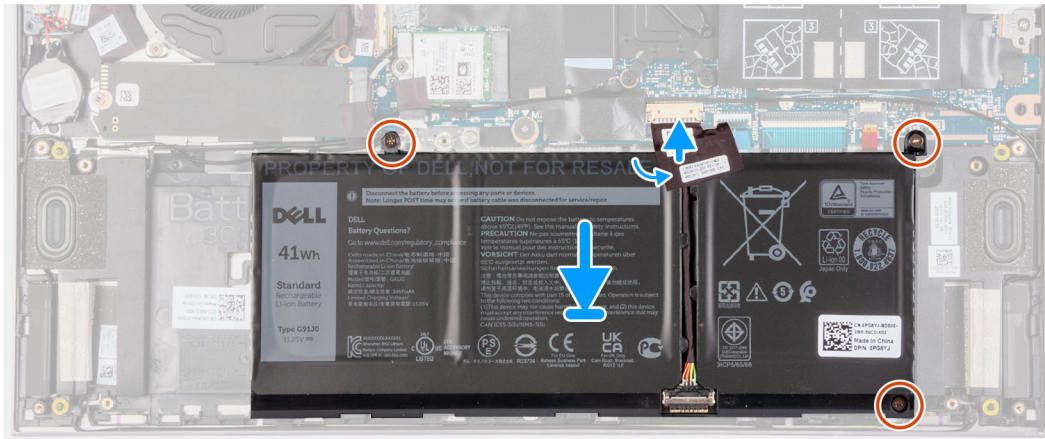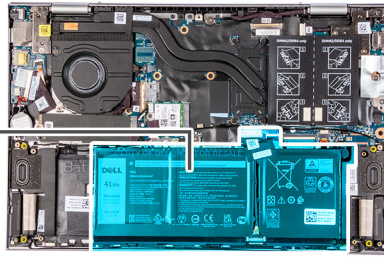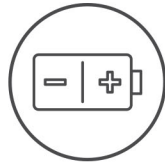

Steps

1. Using the alignment posts, place the battery on the palm-rest and keyboard assembly.
2. Replace the three screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the system board.


Installing the 4-cell battery

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the battery and provides a visual representation of the installation procedure.

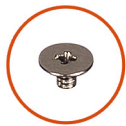

5x
M2x3

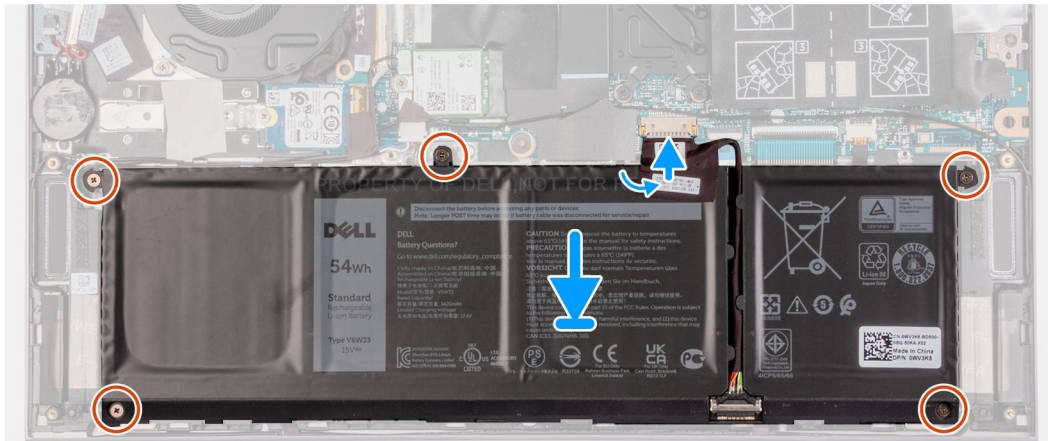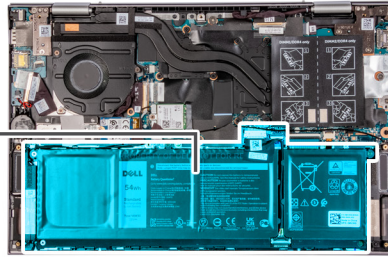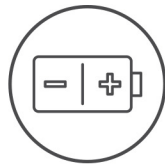

Steps

1. Using the alignment posts, place the battery on the palm-rest and keyboard assembly.
2. Replace the five screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Coin-cell battery



Removing the coin-cell battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the removal procedure.

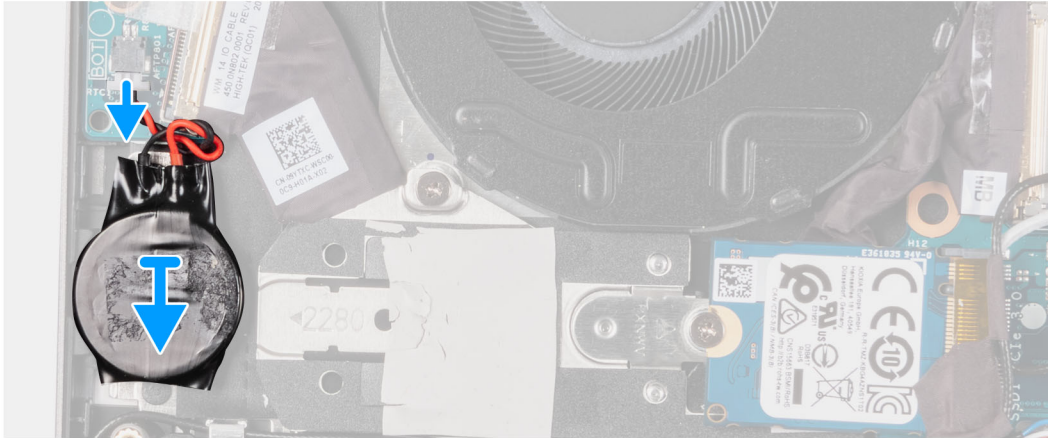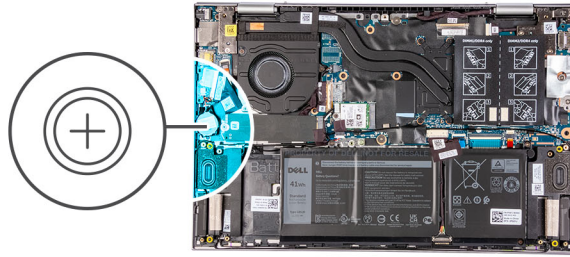

Steps

1. Disconnect the coin-cell battery from the I/O board.
2. Peel the coin-cell battery and lift it off the slot on the palm-rest and keyboard assembly.



Installing the coin-cell battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the installation procedure.

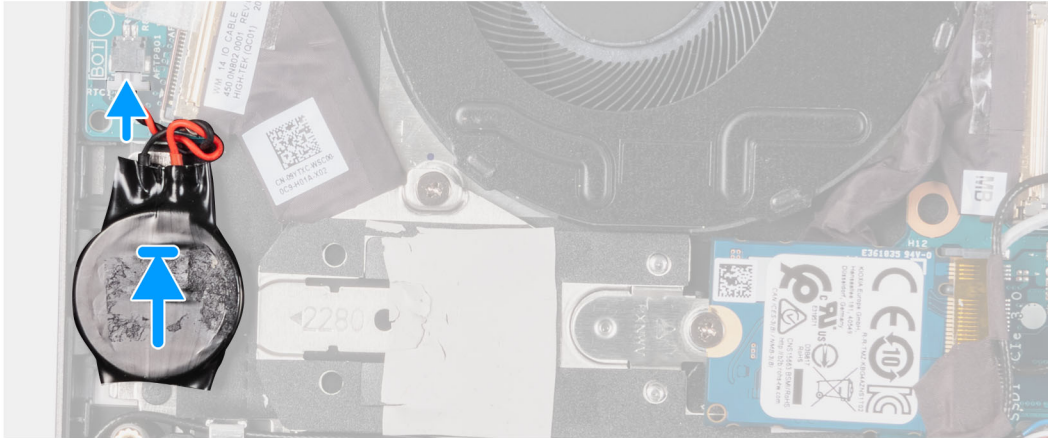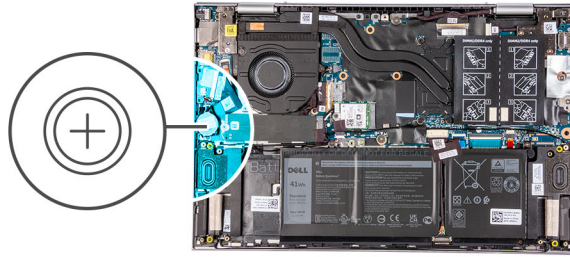

Steps

1. Adhere the coin-cell battery to the slot on the palm-rest and keyboard assembly.
2. Connect the coin-cell battery cable to the I/O board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Memory module



Removing the memory module

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the memory modules and provides a visual representation of the removal procedure.

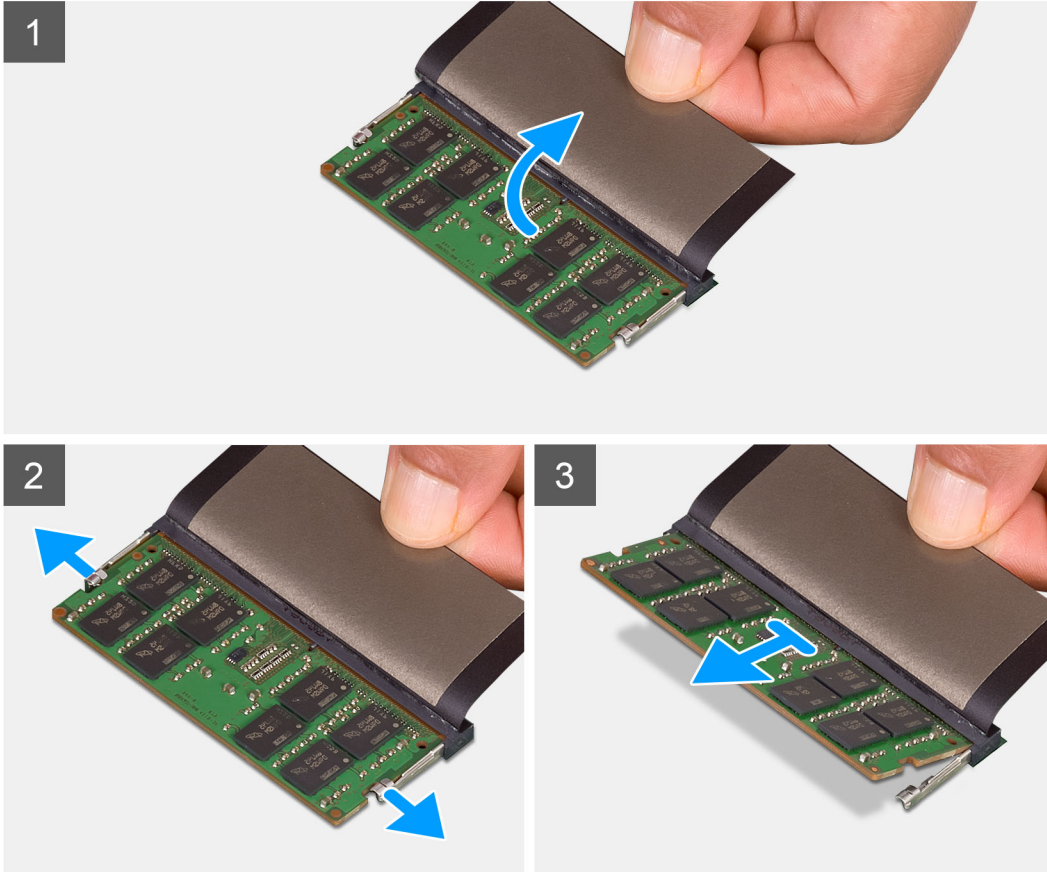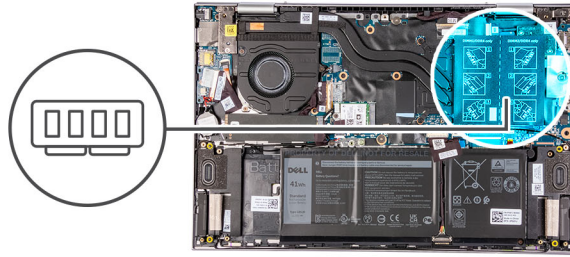

Steps

1. Lift the flap to access the memory module.
2. Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.
3. Slide and remove the memory module from the memory-module slot.

i **NOTE:** Repeat step 2 to step 3 to remove any other memory modules installed in your computer.



Installing the memory module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the memory modules and provides a visual representation of the installation procedure.

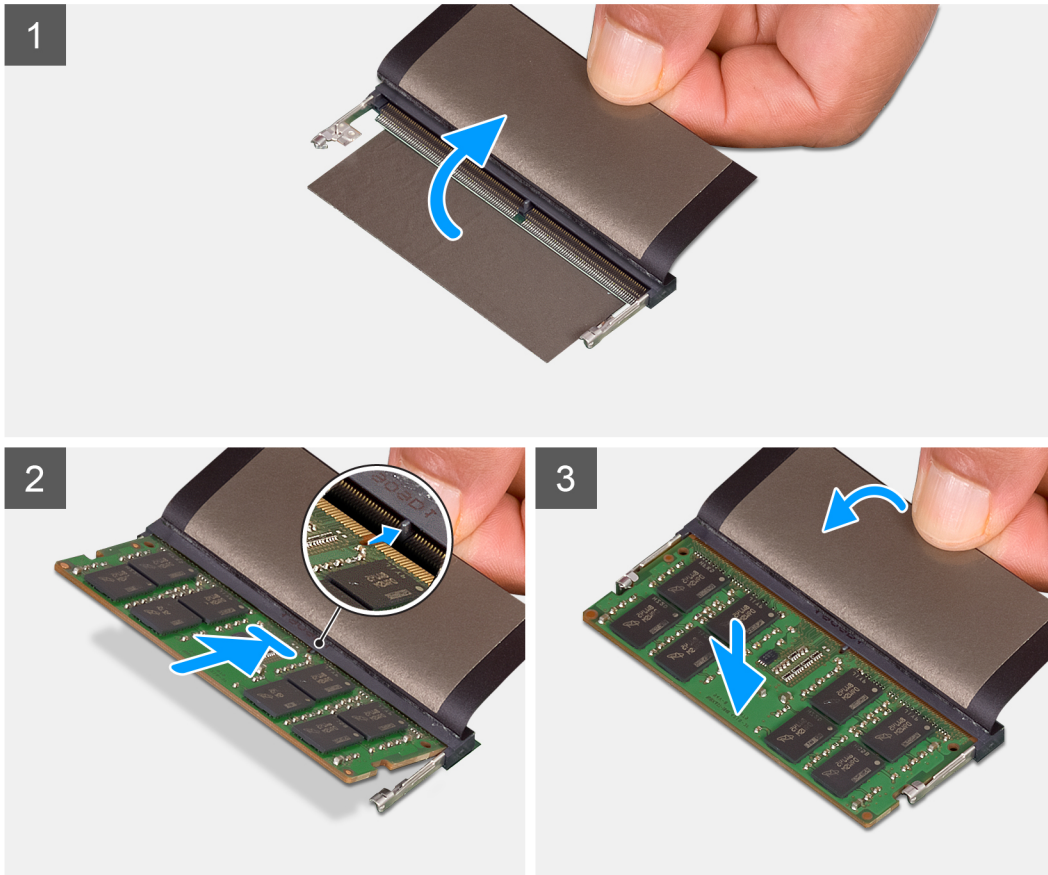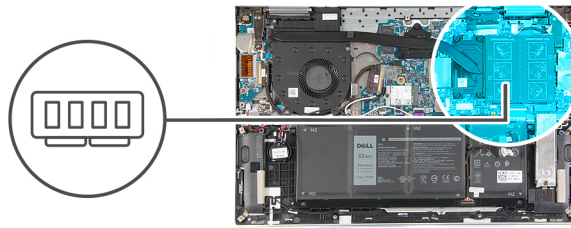

Steps

1. Lift the flap to access the memory-module slot.
 2. Align the notch on the memory module with the tab on the memory-module slot.
 3. Slide the memory module firmly at an angle, into the memory-module slot.
 4. Press the memory module down until it clicks into place.
- i** **NOTE:** If you do not hear the click, remove the memory module and reinstall it.

i **NOTE:** Repeat step 2 to step 4 to install any other memory modules in your computer.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Wireless card

Removing the wireless card

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.



1x
M2x3

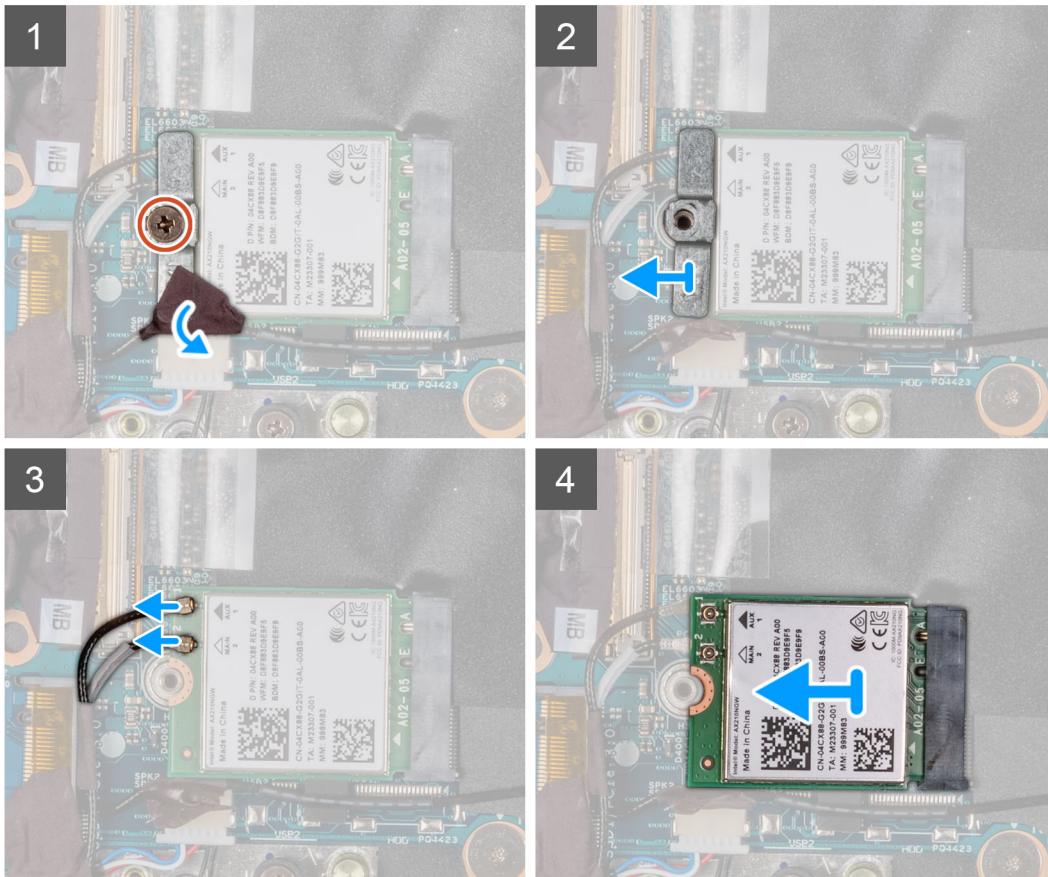

Steps

1. Peel the tape that secures the antenna cable to the wireless-card bracket.
2. Remove the screw (M2x3) that secures the wireless-card bracket to the wireless card and system board.
3. Remove the wireless-card bracket from the wireless card.
4. Disconnect the antenna cables from the wireless card.
5. Slide and remove the wireless card from the wireless-card slot.

Installing the wireless card

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the wireless card and provides a visual representation of the installation procedure.



1x
M2x3

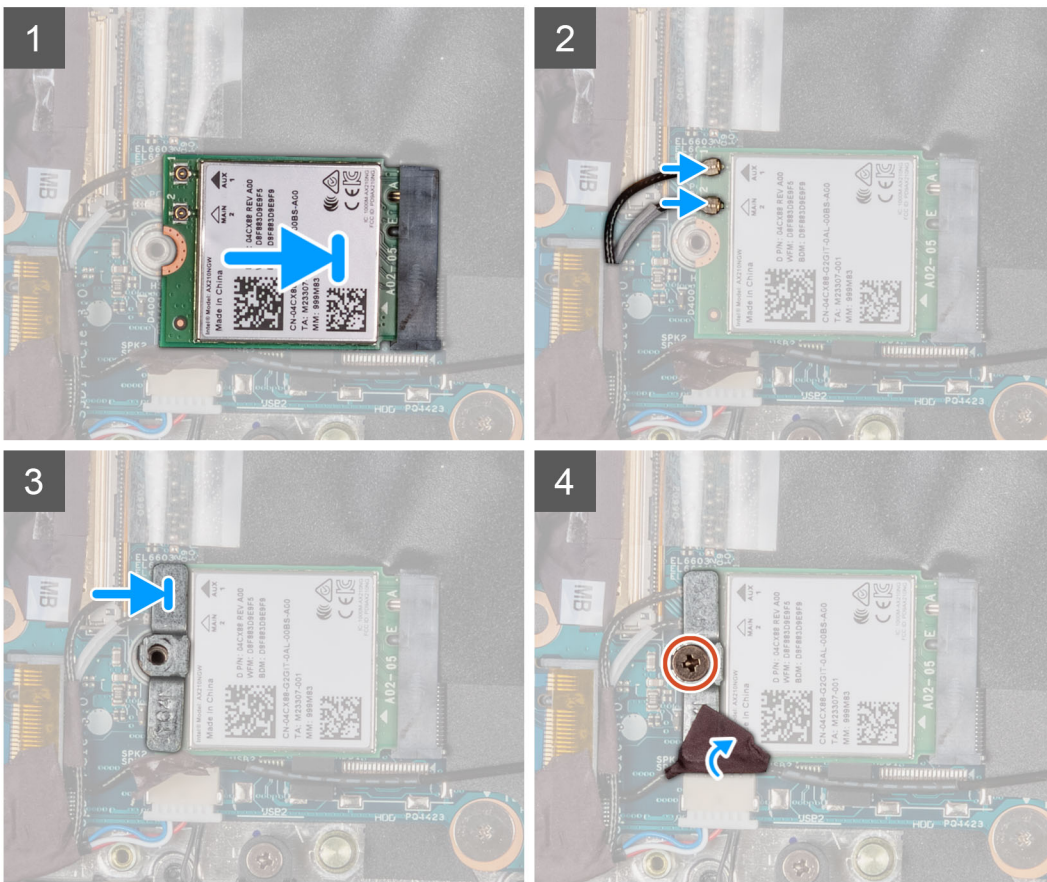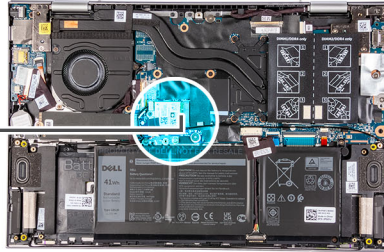

Steps

1. Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card that is supported by your computer.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

2. Align the notch on the wireless card with the tab on the wireless-card slot and insert the wireless card at an angle into the wireless-card slot.
3. Align the screw hole on the wireless-card bracket with the screw hole on the wireless card and palm-rest and keyboard assembly.
4. Replace the screw (M2x3) that secures the wireless-card bracket to the wireless card and system board.
5. Adhere the tape that secures the antenna cable to the wireless-card bracket.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Solid-state drive


Removing the M.2 2280 solid-state drive

Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the M.2 2280 solid-state drive and provides a visual representation of the removal procedure.

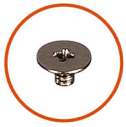

1x
M2x3

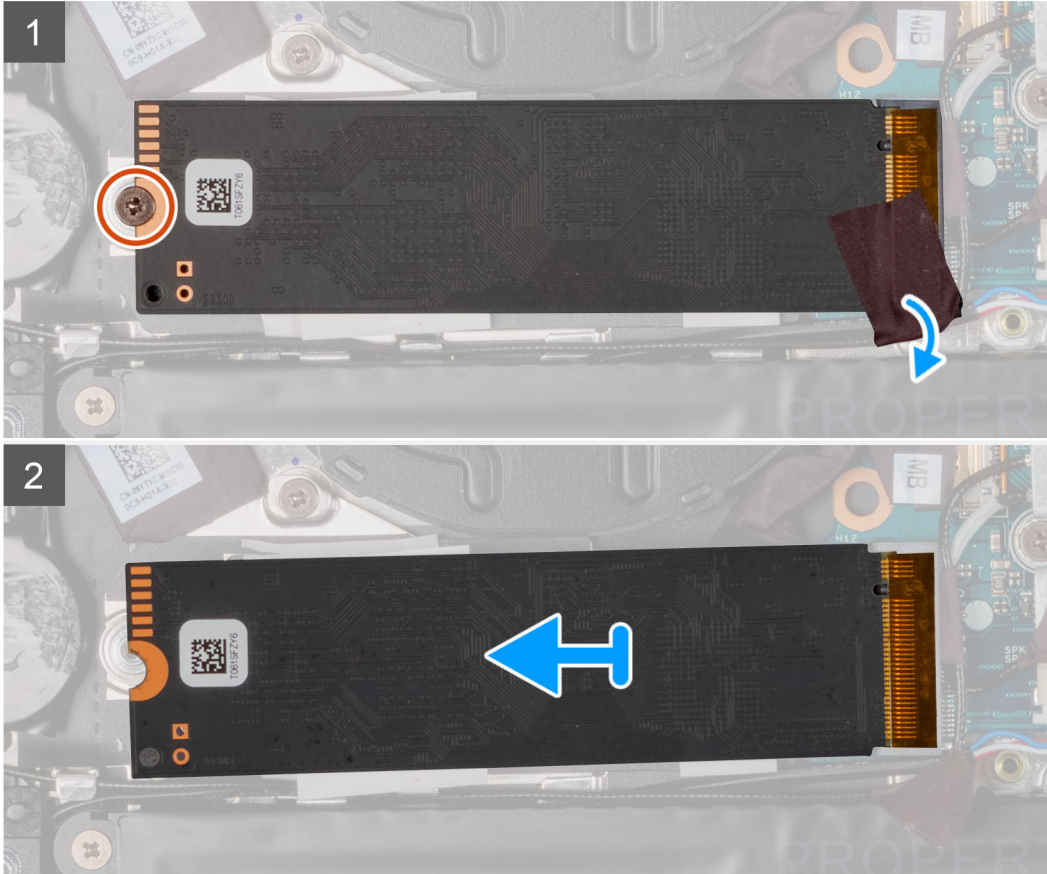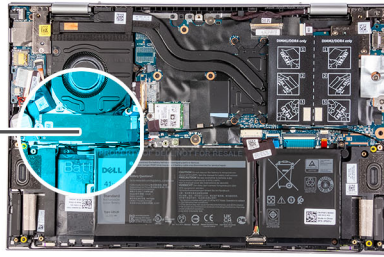

Steps

1. Peel the tape that secures the antenna cable to the solid-state drive.
2. Remove the screw (M2x3) that secures the solid-state drive to the palm-rest and keyboard assembly.
3. Slide and remove the solid-state drive from the solid-state drive slot.

Installing the M.2 2280 solid-state drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task


This computer supports two solid-state drive form factors.

- M.2 2230
- M.2 2280

If you are replacing the M.2 2280 solid-state drive with an M.2 2230 solid-state drive, the following images indicate where to install the solid-state drive bracket based on the form factor.





1x
M1.6x2.5

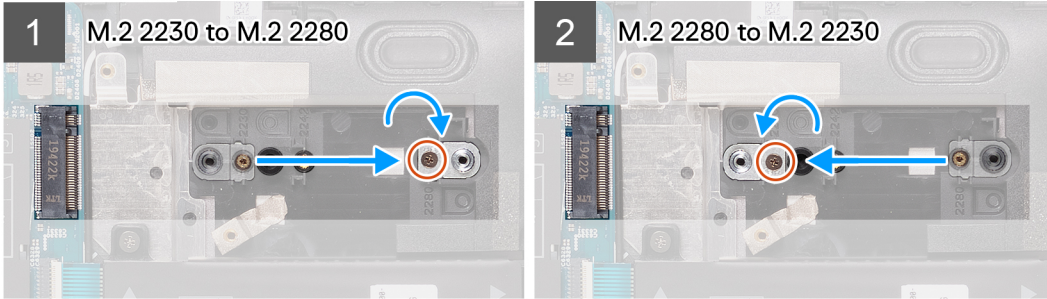

The following image indicates the location of the M.2 2280 solid-state drive and provides a visual representation of the installation procedure.



1x
M2x3

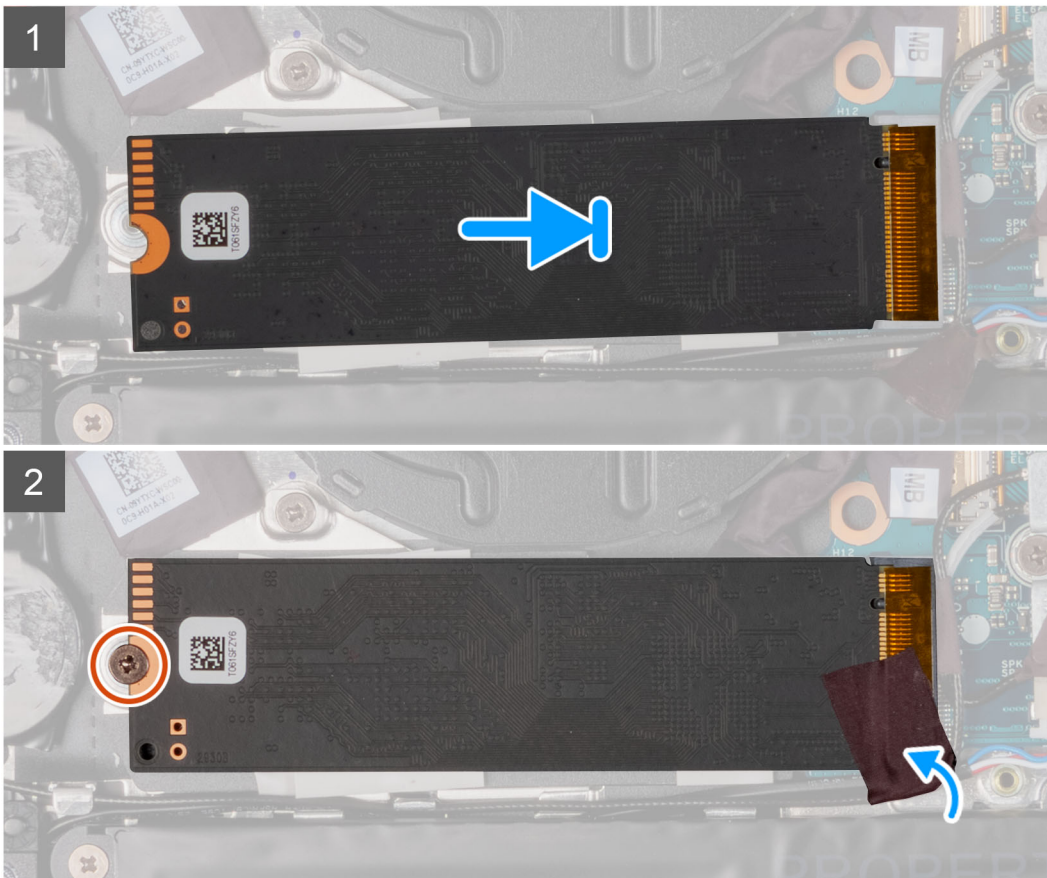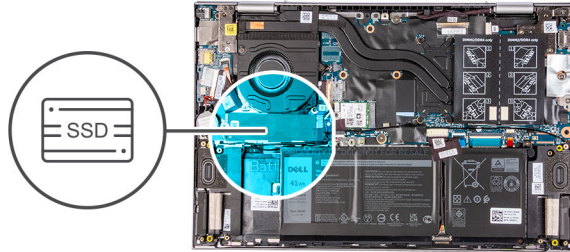

i **NOTE:** Perform step 1 to step 4 if you are replacing the M.2 2230 solid-state drive with an M.2 2280 solid-state drive.

Steps

1. Remove the screw (M1.6x2.5) that secures the solid-state drive bracket to the palm-rest and keyboard assembly.
2. Turn the solid-state drive bracket at an angle of 180 degrees.
3. Insert the solid-state drive bracket into the other solid-state drive bracket slot on the palm-rest and keyboard assembly.
4. Replace the screw (M1.6x2.5) that secures the solid-state drive bracket to the palm-rest and keyboard assembly.
5. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
6. Slide the solid-state drive firmly into the solid-state drive slot at an angle.
7. Replace the screw (M2x3) that secures the solid-state drive to the solid-state drive bracket.
8. Adhere the tape that secures the antenna cable to the palm-rest and solid-state drive.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the M.2 2230 solid-state drive

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the removal procedure.



1x
M2x3

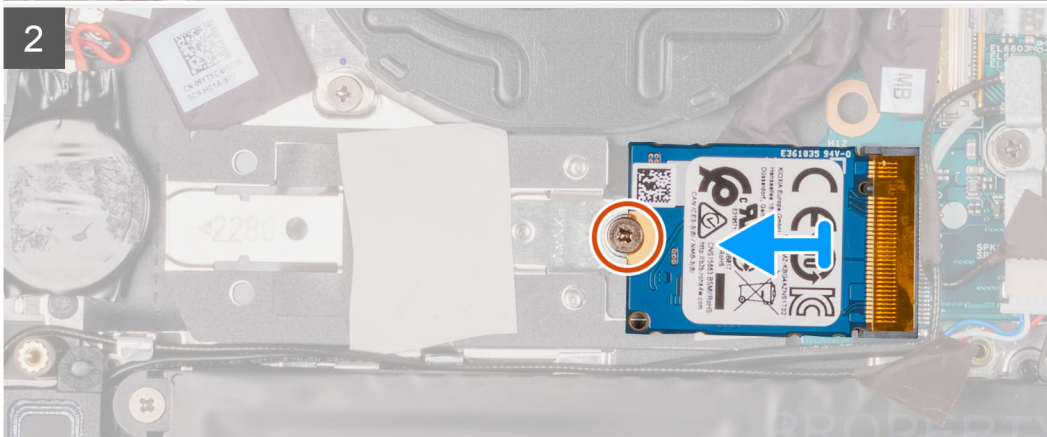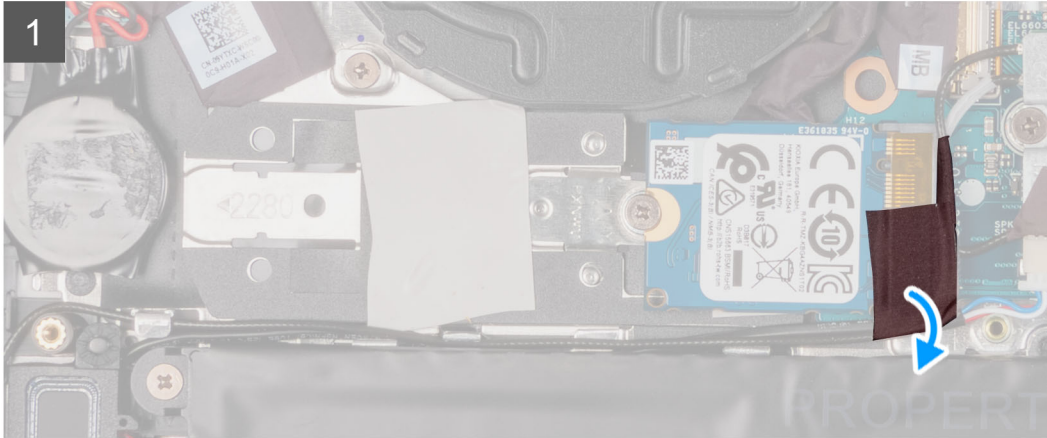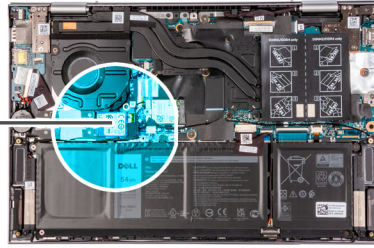

Steps

1. Peel the tape that secures the antenna cable to the solid-state drive.
2. Lift the solid-state drive thermal bracket off the palm-rest and keyboard assembly.
3. Remove the screw (M2x3) that secures the solid-state drive to the solid-state drive bracket.
4. Slide and remove the solid-state drive from the solid-state drive slot.

Installing the M.2 2230 solid-state drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task


This computer supports two solid-state drive form factors.

- M.2 2230
- M.2 2280

If you are replacing the M.2 2230 solid-state drive with an M.2 2280 solid-state drive, the following images indicate where to install the solid-state drive bracket based on the form factor.





1x
M1.6x2.5

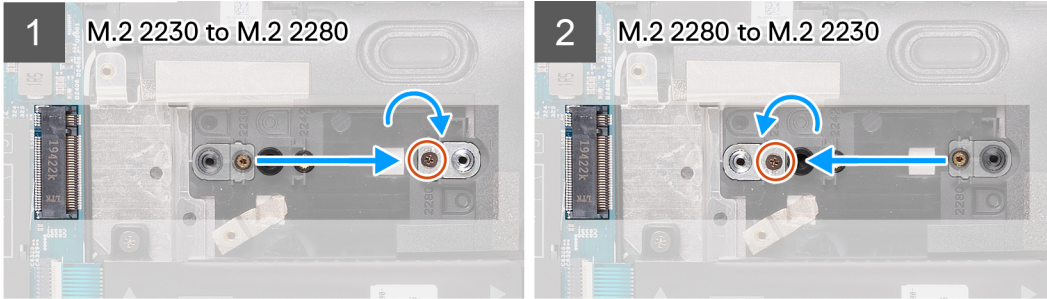

The following image indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the installation procedure.



1x
M2x3

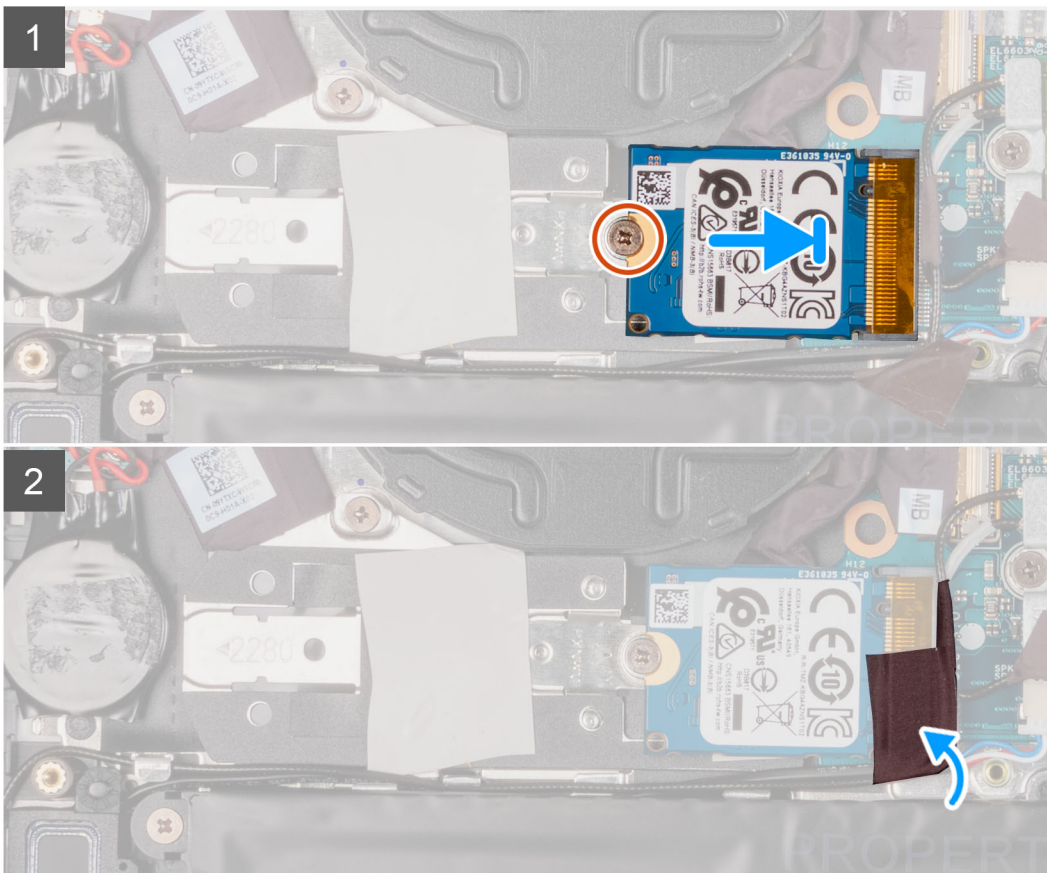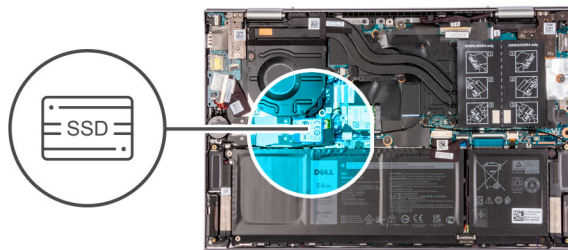

NOTE: Perform step 1 to step 4 if you are replacing the M.2 2230 solid-state drive with an M.2 2280 solid-state drive.

Steps

1. Remove the screw (M1.6x2.5) that secures the solid-state drive bracket to the palm-rest and keyboard assembly.
2. Turn the solid-state drive bracket at an angle of 180 degrees.
3. Insert the solid-state drive bracket into the other solid-state drive bracket slot on the palm-rest and keyboard assembly.
4. Replace the screw (M1.6x2.5) that secures the solid-state drive bracket to the palm-rest and keyboard assembly.
5. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
6. Slide the solid-state drive firmly into the solid-state drive slot at an angle.
7. Replace the screw (M2x3) that secures the solid-state drive to the solid-state drive bracket.
8. Adhere the tape that secures the antenna cable to the solid-state drive.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Speakers


Removing the speakers

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

About this task

The following image indicates the location of the speakers and provides a visual representation of the removal procedure.

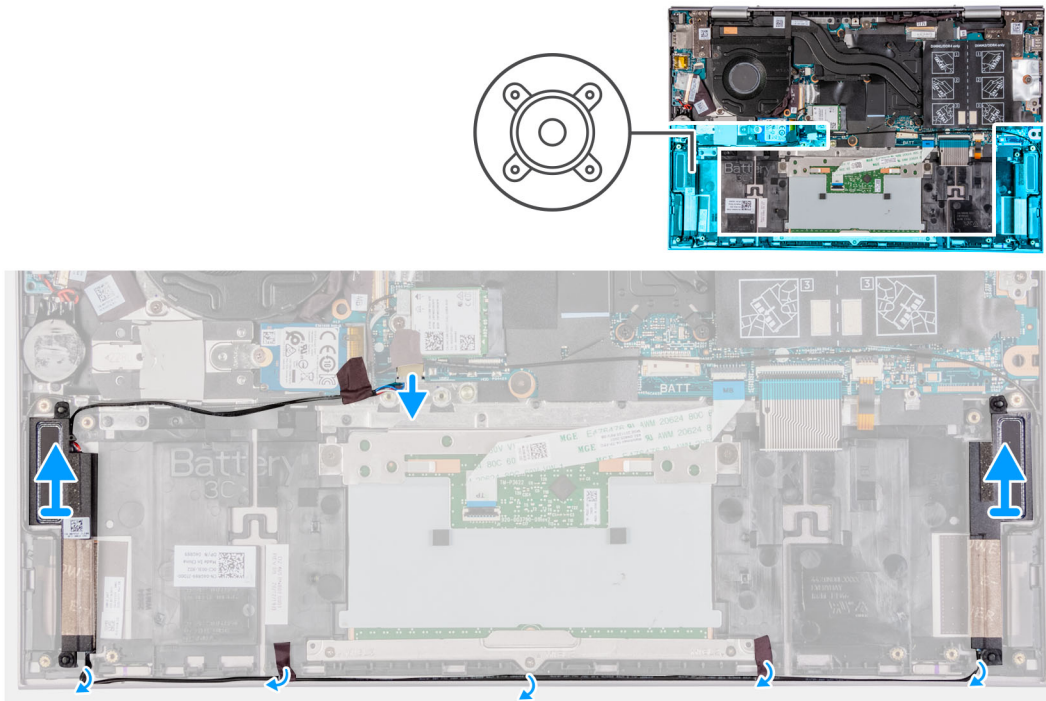

Steps

1. Disconnect the speaker cable from the system board.
2. Peel the tapes that secure the speaker cable to the palm-rest and keyboard assembly.

3. Note the speaker cable routing, and remove the speaker cable from the routing guides on the palm-rest and keyboard assembly.
4. Lift the speakers along with the cables, off the palm-rest and keyboard assembly.


Installing the speakers

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the speakers and provides a visual representation of the installation procedure.

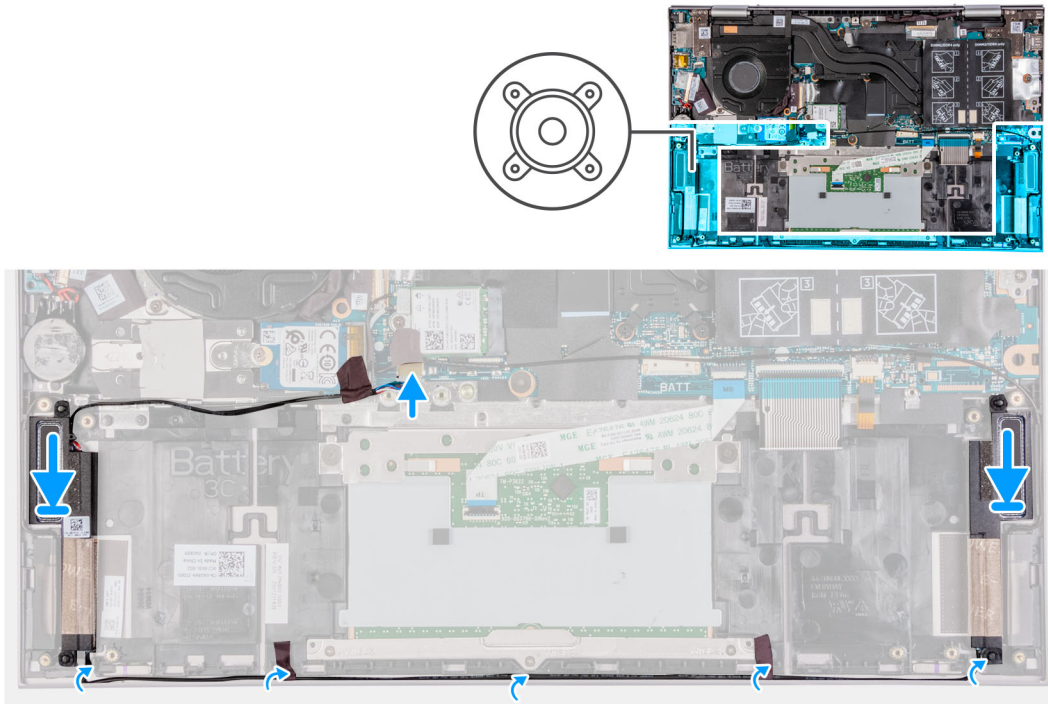

Steps

1. Using the alignment posts and rubber grommets, place the speakers on the slots of the palm-rest and keyboard assembly.
2. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly.
3. Adhere the tapes that secure the speaker cable to the palm-rest and keyboard assembly.
4. Connect the speaker cable to the system board.

Next steps

1. Install the [battery](#)
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Heat sink

Removing the heat sink

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

NOTE: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

2. Remove the [base cover](#).




About this task

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.




NOTE: The number of captive screws and the appearance of the heat sink may vary depending on the configuration you ordered.



4x
M2x2

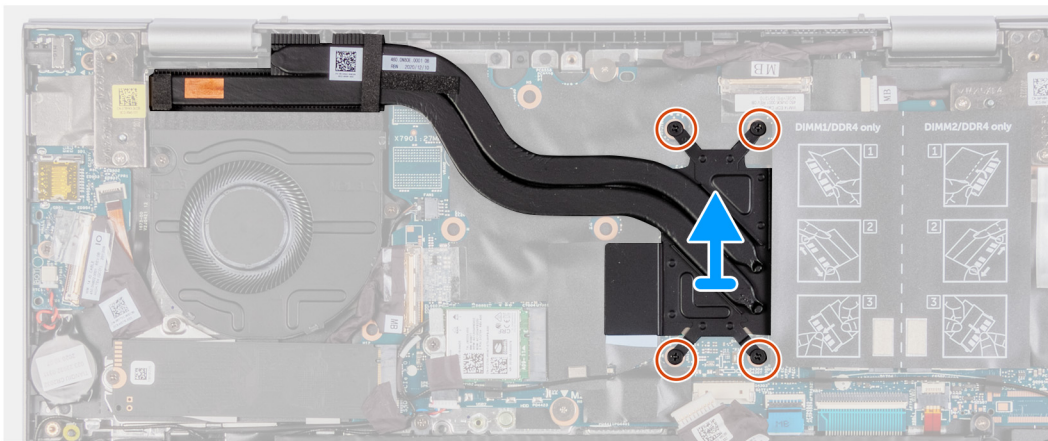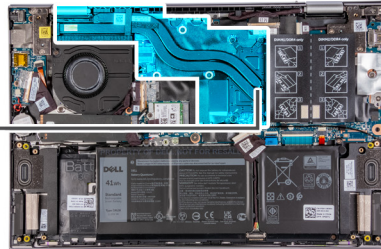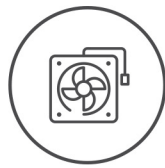

7x
M2x2

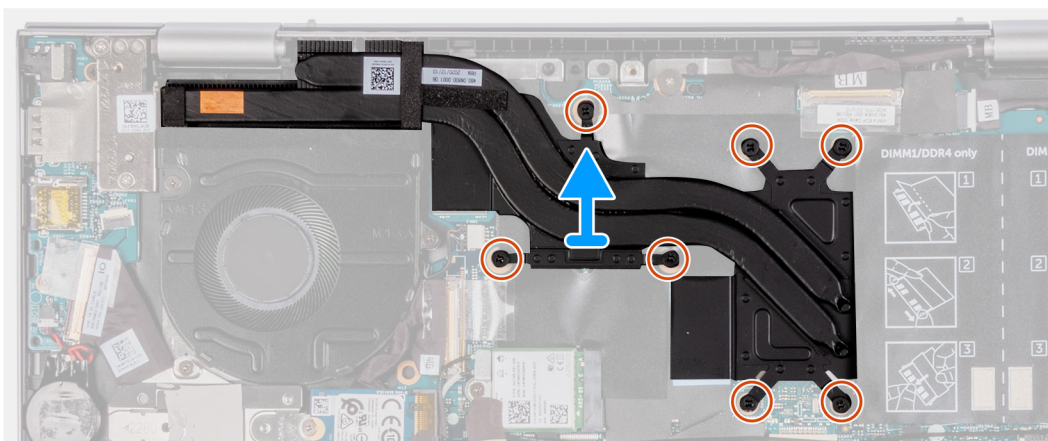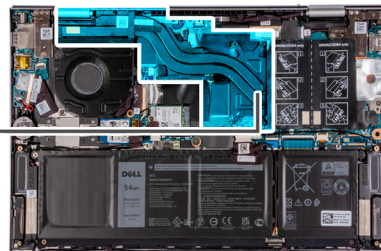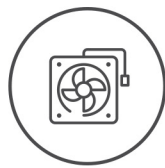

Steps


1. In reverse sequential order (as indicated on the heat sink), loosen the four or seven captive screws that secure the heat sink to the system board.
2. Lift the heat sink off the system board.

Installing the heat sink

Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

 **CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.**

 **NOTE:** If either the system board or the heat sink is replaced, use the thermal pad/paste provided in the kit to ensure that thermal conductivity is achieved.




About this task

The following image indicates the location of the heat sink and provides a visual representation of the installation procedure.




 **NOTE:** The number of captive screws and the appearance of the heat sink may vary depending on the configuration you ordered.



4x
M2x2

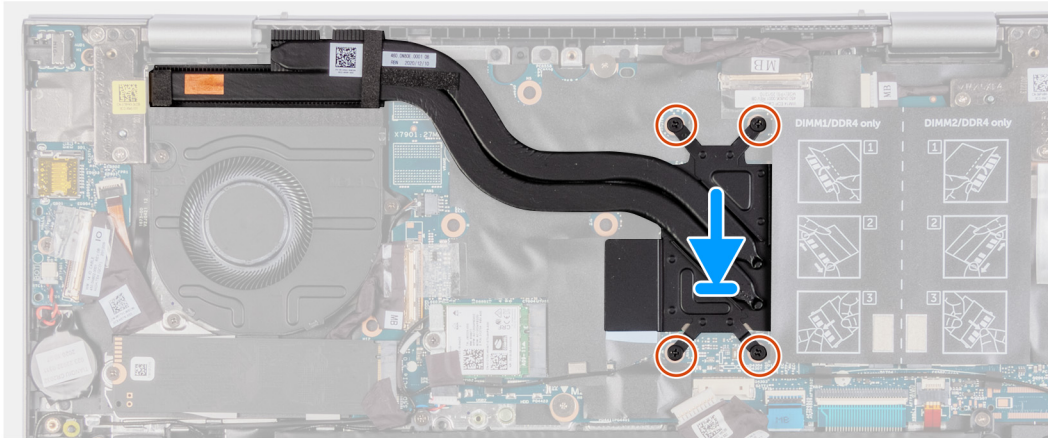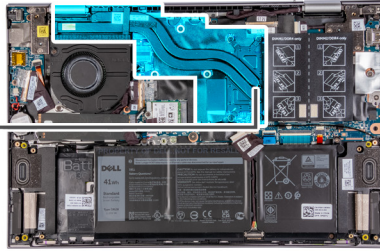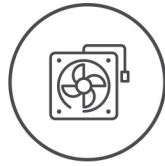

7x
M2x2

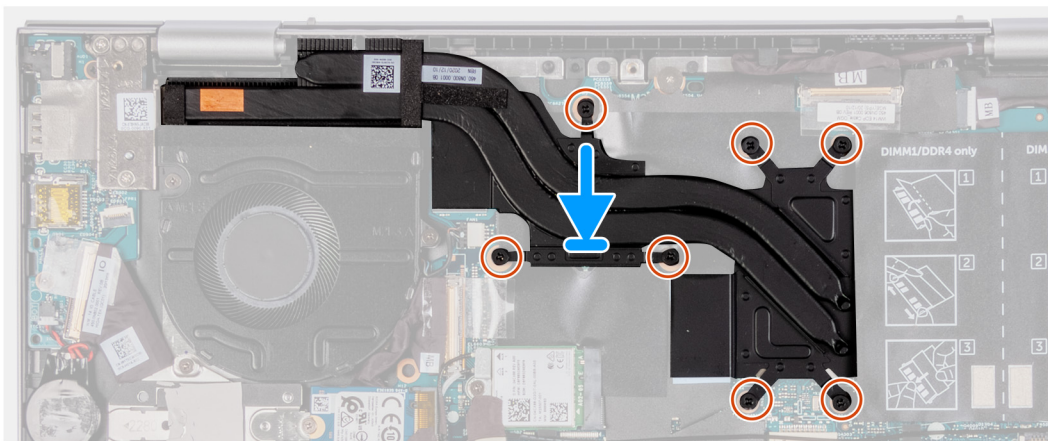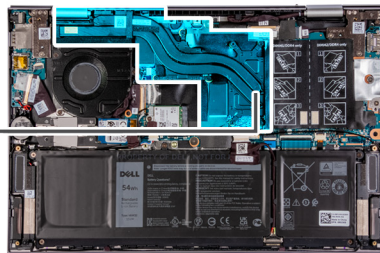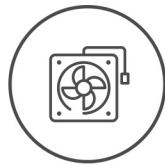

Steps

1. Align the screw holes on the heat sink with the screw holes on the system board.
2. In sequential order (as indicated on the heat sink), tighten the four or seven captive screws that secure the heat sink to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Display assembly

Removing the display assembly

Prerequisites






1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the display assembly and provides a visual representation of the removal procedure.



4x
M2.5x3.5

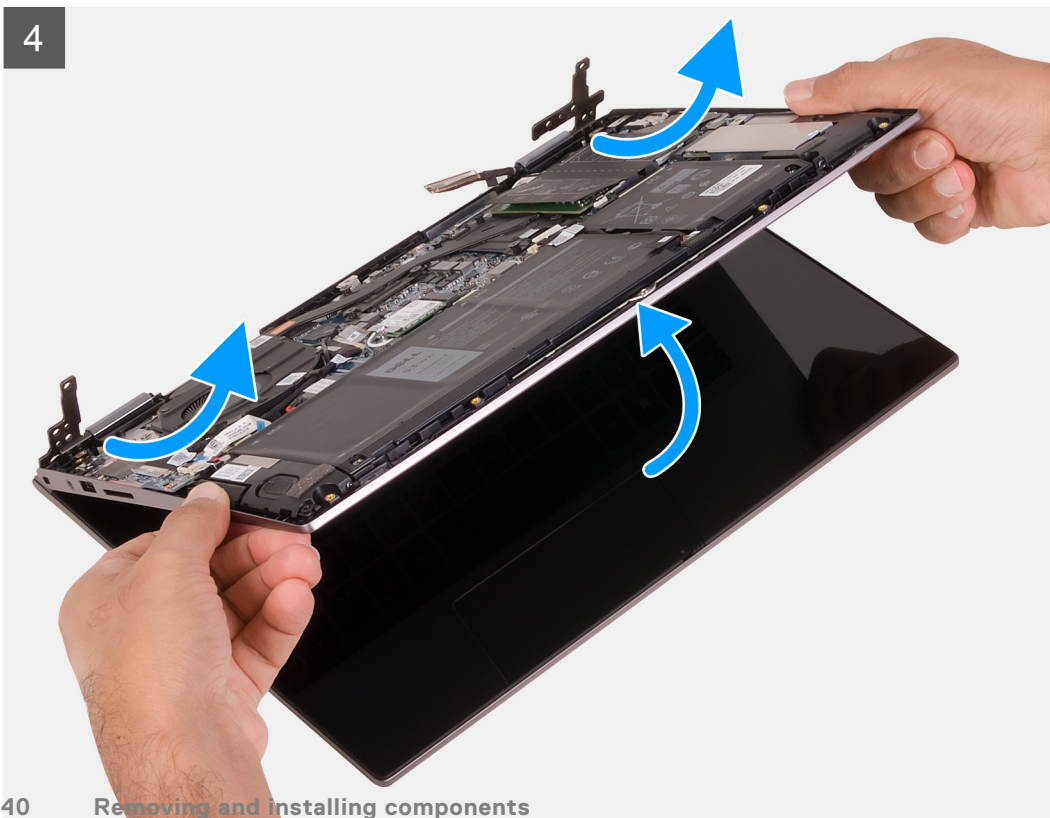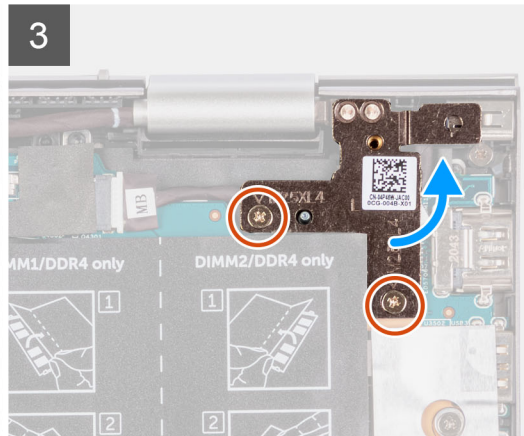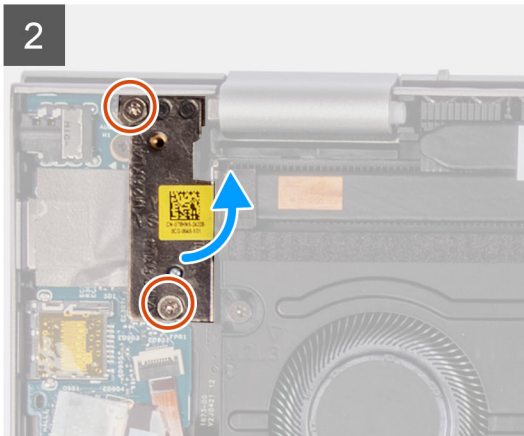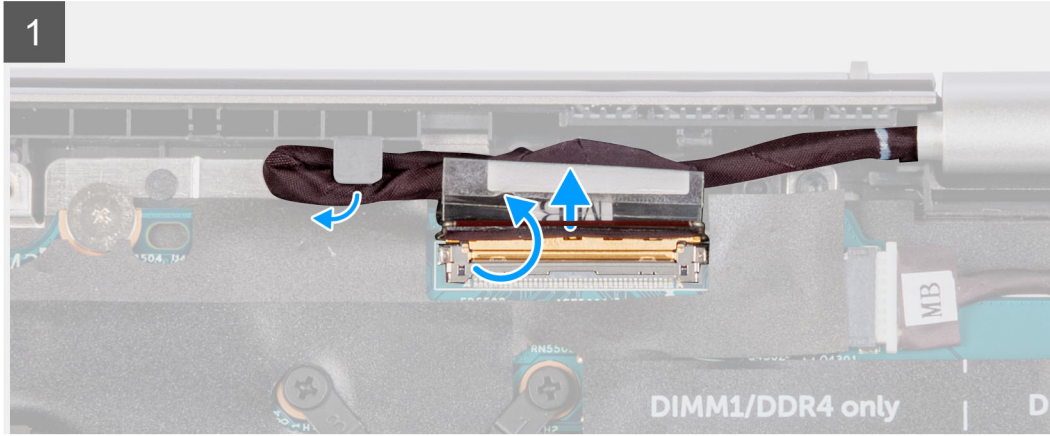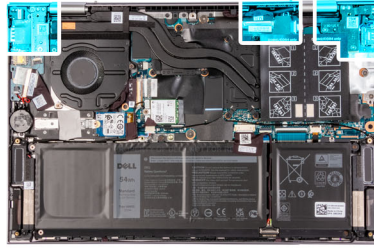



Steps

1. Peel the tape that secures the display cable to the system board.
2. Open the latch, and disconnect the display cable from the system board.
3. Remove the display cable from the routing guide on the palm-rest and keyboard assembly.
4. Remove the four screws (M2.5x3.5) that secure the display hinges to the palm-rest and keyboard assembly.
5. Lift at an angle and slide the display assembly off the palm-rest and keyboard assembly.


Installing the display assembly

Prerequisites





If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the display assembly and provides a visual representation of the installation procedure.

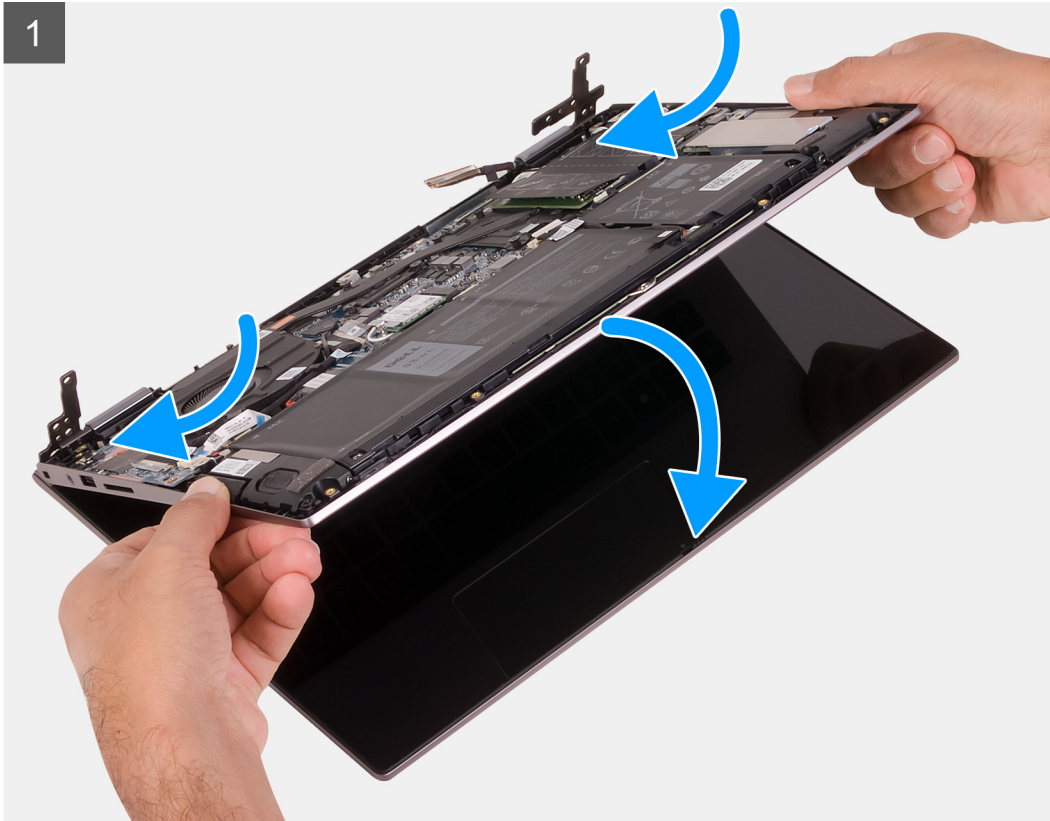

4x
M2.5x3.5

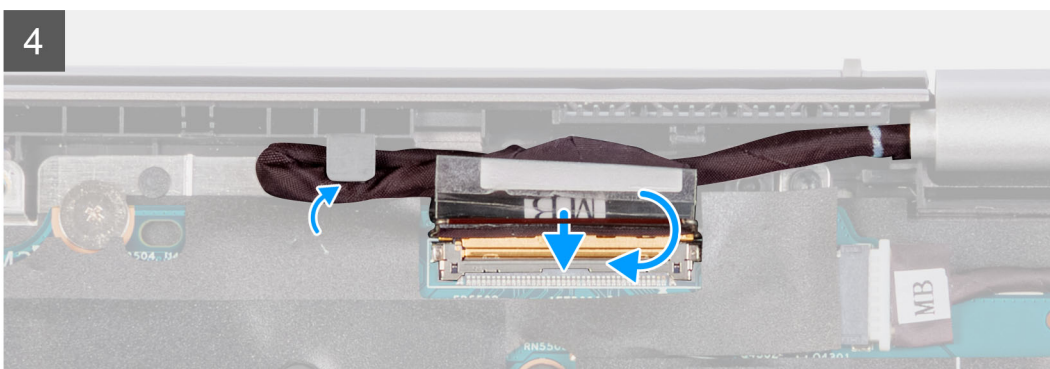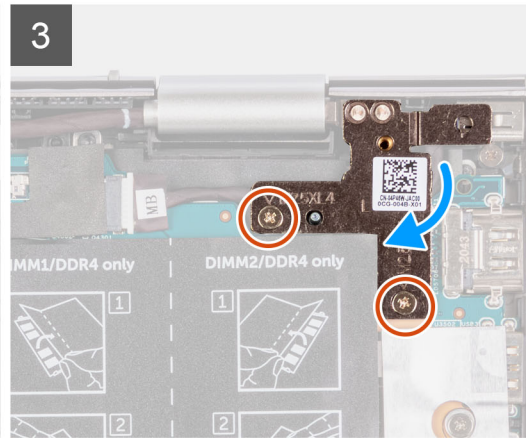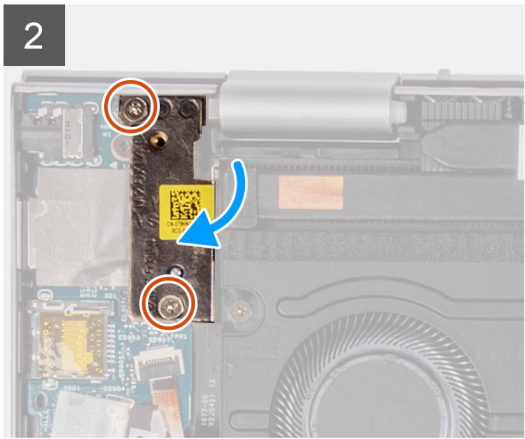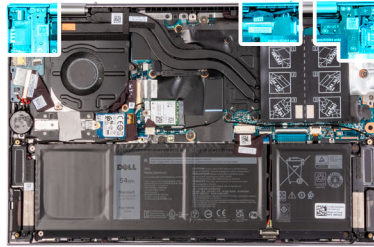

Steps

1. Slide the display assembly at an angle, and place the display assembly on the palm-rest and keyboard assembly.
2. Replace the four screws (M2.5x3.5) that secure the display hinges to the palm-rest and keyboard assembly.
3. Route the display cable through the routing guide on the palm-rest and keyboard assembly.
4. Slide the display cable into the connector on the system board and close the latch to secure the cable.
5. Connect the display-cable connector to the system board and close the latch to secure the cable.
6. Adhere the tape that secures the display cable to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Touchpad


Removing the touchpad

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

About this task

The following image indicates the location of the touchpad and provides a visual representation of the removal procedure.

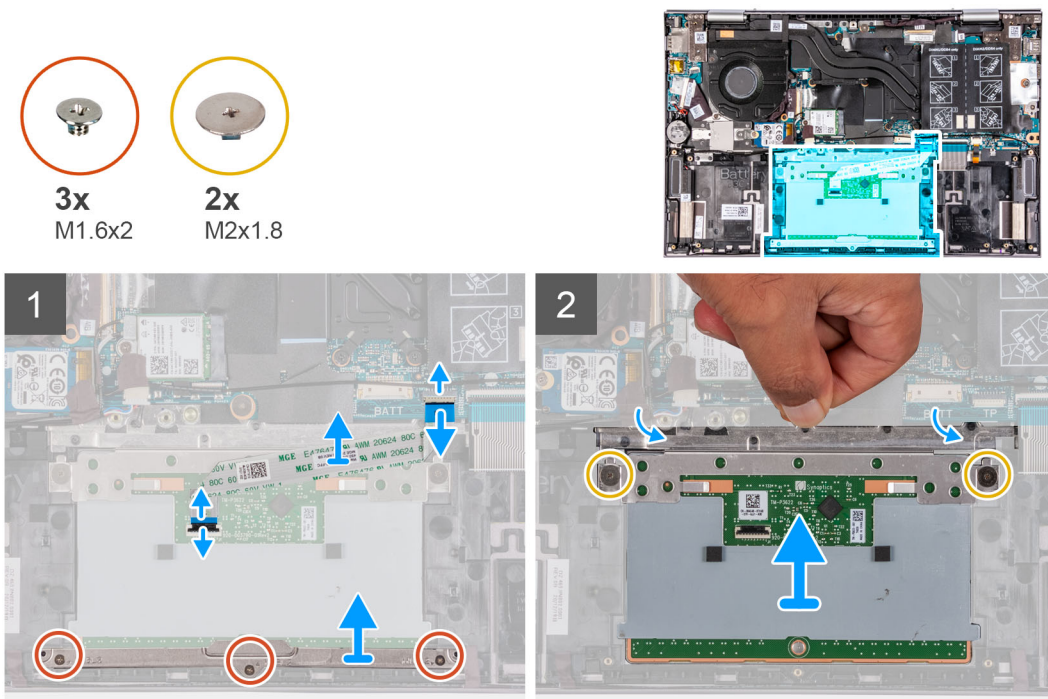

Steps

1. Remove the three screws (M1.6x2) that secure the touchpad bracket to the palm-rest and keyboard assembly.
2. Lift the touchpad bracket off the palm-rest and keyboard assembly.
3. Open the latch, and disconnect the touchpad cable from the touchpad and system board.
4. Place the touchpad cable on a clean surface.

- Lift the transparent flap and remove the two screws (M2x1.8) that secure the touchpad to the palm-rest and keyboard assembly.
- Slide and lift the touchpad off the palm-rest and keyboard assembly.


Installing the touchpad

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.


About this task

The following image indicates the location of the touchpad and provides a visual representation of the installation procedure.

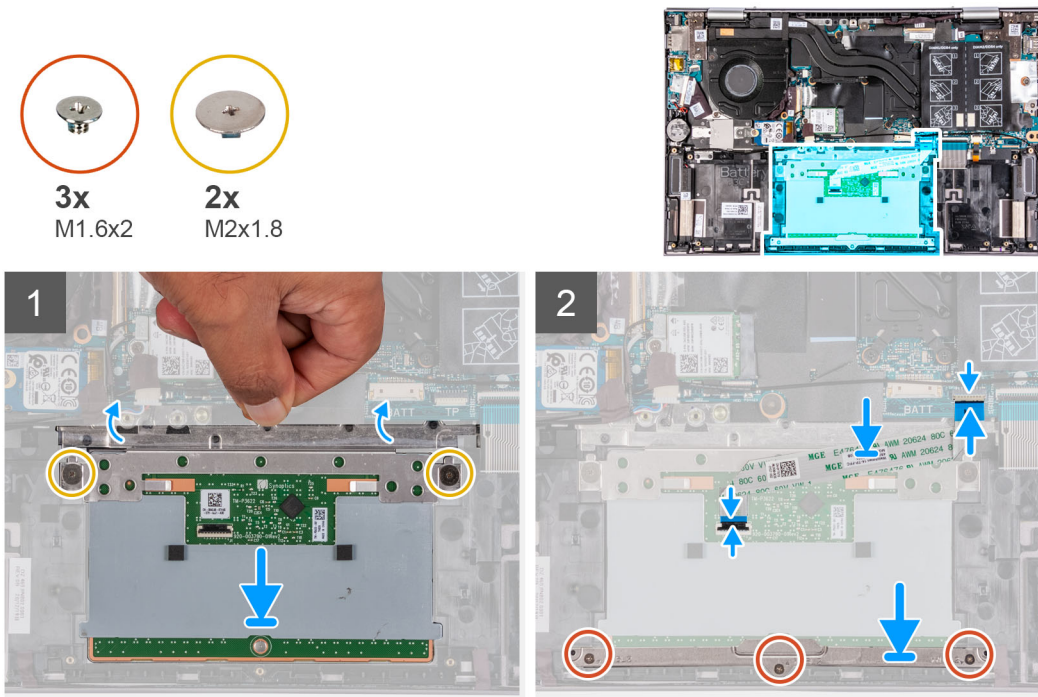

Steps

- Lift the transparent flap and slide the touchpad into the slot on the palm-rest and keyboard assembly.
- Lift the transparent flap and replace the two screws (M2x1.8) that secure the touchpad to the palm-rest and keyboard assembly.
 - NOTE:** Ensure that the touchpad is aligned with the guides available on the palm-rest and keyboard assembly, and the gap on either sides of the touchpad is equal.
 - NOTE:** The following image shows the proper alignment of touchpad on your computer.

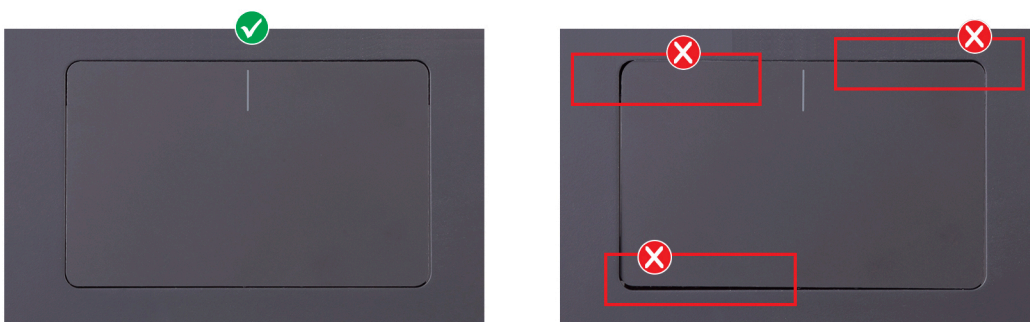

3. Slide the touchpad cable into the connector on the touchpad and system board and close the latch to secure the cable.
4. Place the touchpad bracket into the slot on the palm-rest and keyboard assembly.
5. Replace the three screws (M1.6x2) that secure the touchpad bracket to the palm-rest and keyboard assembly.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Fan


Removing the fan

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the fan and provides a visual representation of the removal procedure.

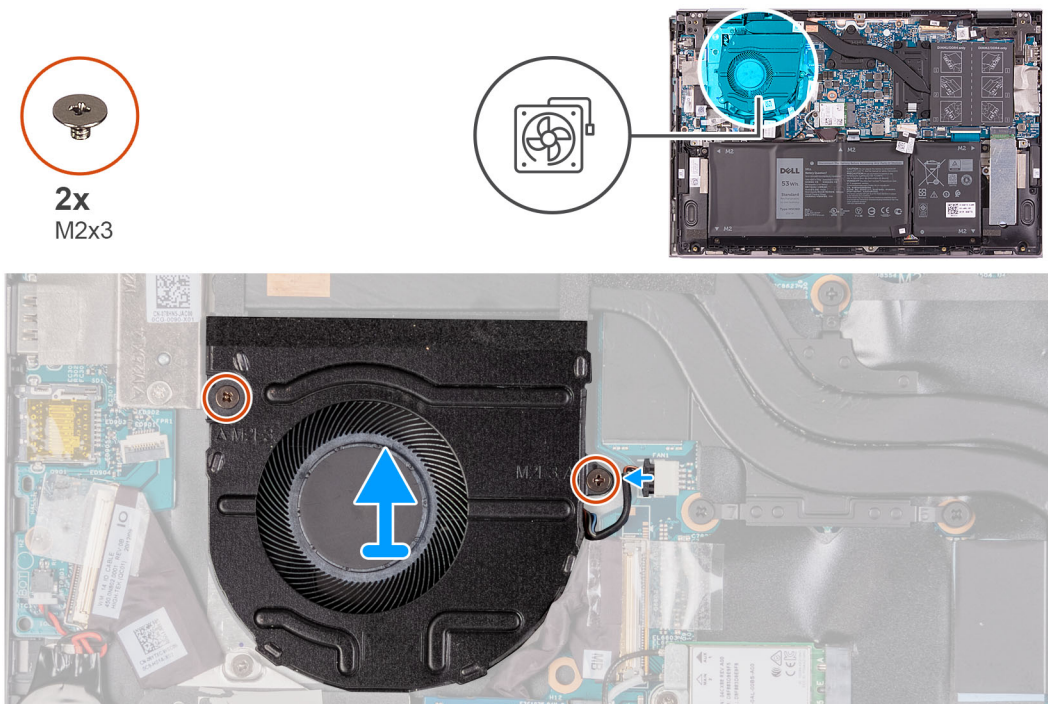

Steps

1. Disconnect the fan cable from the system board.
2. Remove the two screws (M2x3) that secure the fan to the palm-rest and keyboard assembly.
3. Lift the fan off the palm-rest and keyboard assembly.


Installing the fan

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the fan and provides a visual representation of the installation procedure.

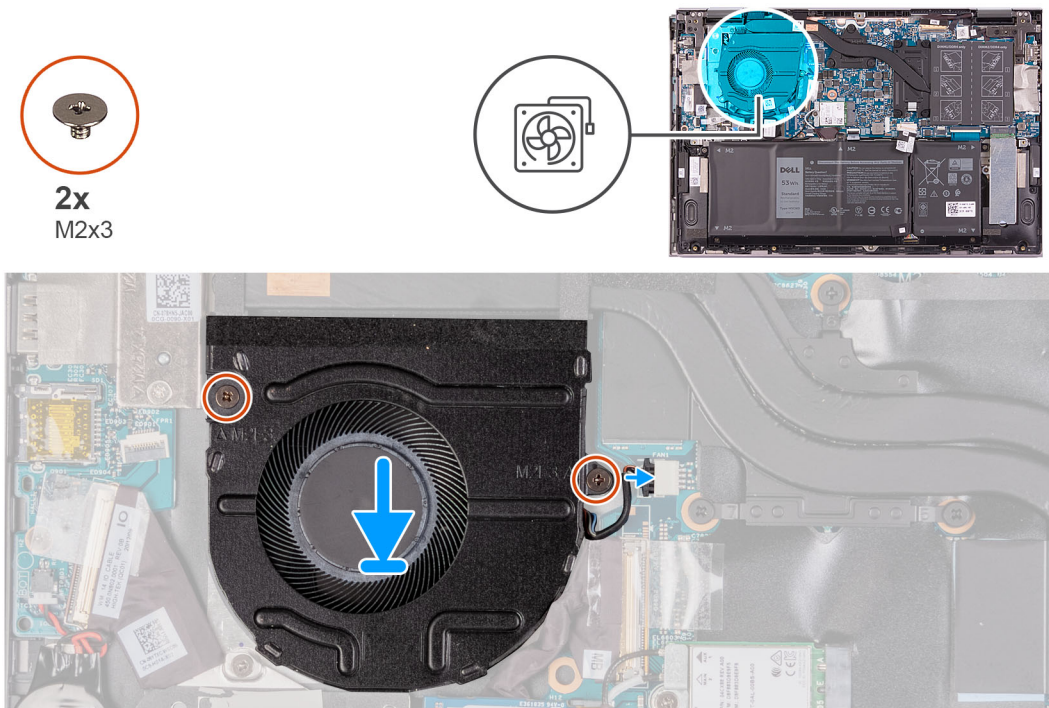

Steps

1. Using the alignment posts, place the fan on the palm-rest and keyboard assembly.
2. Remove the two screws (M2x3) that secure the fan to the palm-rest and keyboard assembly.
3. Connect the fan cable to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

I/O board




Removing the I/O board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the I/O-board and provides a visual representation of the removal procedure.

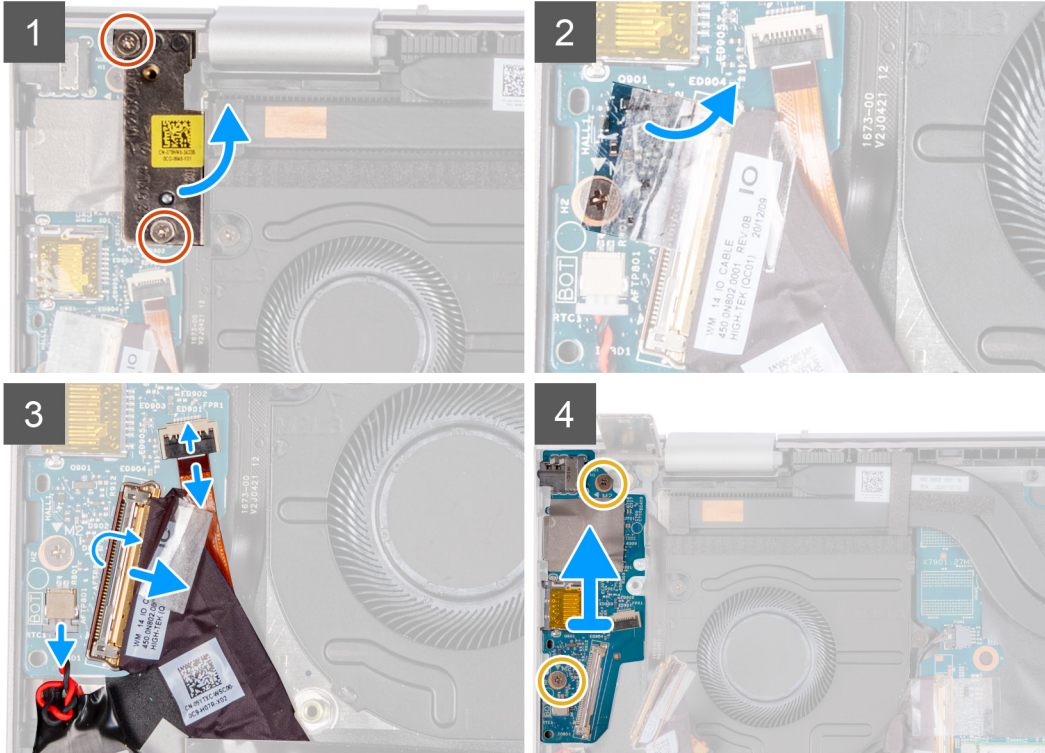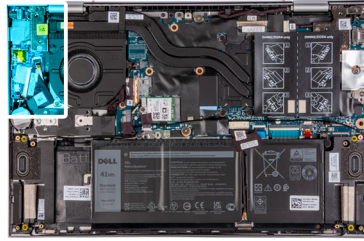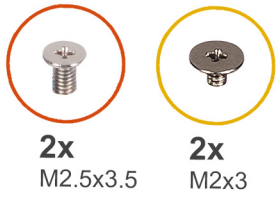

Steps

1. Remove the two screws (M2.5x3.5) that secure the right display hinge to the I/O board and palm-rest and keyboard assembly.
2. Open the right display hinge at an angle of 90 degrees.
3. Peel the tape that secures the I/O-board cable to the I/O board.
4. Open the latch, and disconnect the I/O-board cable from the I/O board.
5. Open the latch, and disconnect the fingerprint reader-cable from the I/O board.
6. Disconnect the coin-cell battery cable from the I/O board.
7. Remove the two screws (M2x3) that secure the I/O board to the palm-rest and keyboard assembly.
8. Slide and lift the I/O board off the palm-rest and keyboard assembly.






Installing the I/O board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the installation procedure.

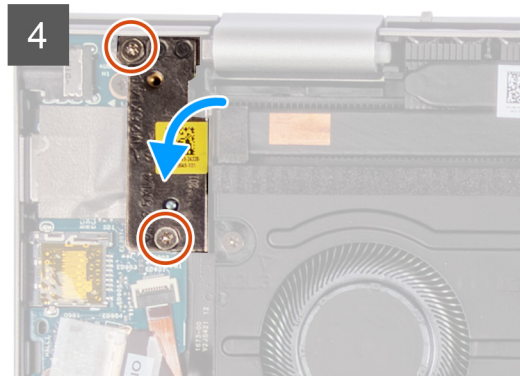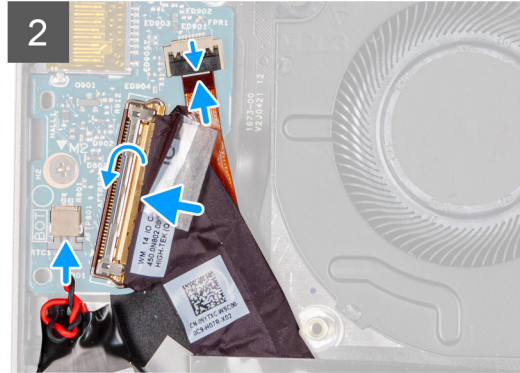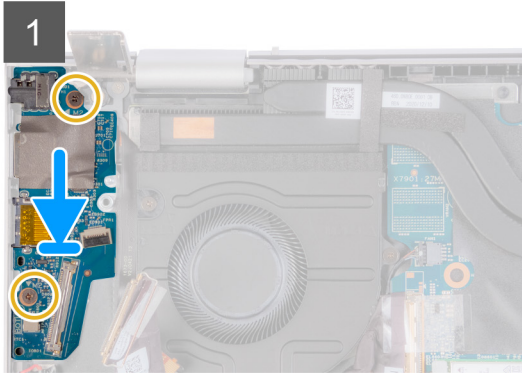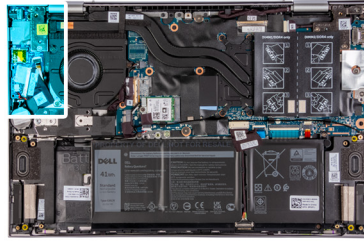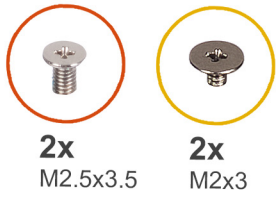

Steps

1. Place the I/O board into the slots on the palm-rest and keyboard assembly.
2. Align the screw hole on the I/O board with the screw hole on the palm-rest and keyboard assembly.
3. Replace the two screws (M2x3) that secures the I/O board to the palm-rest and keyboard assembly.
4. Slide the fingerprint reader-cable into the connector on the I/O board and close the latch to secure the cable.
5. Connect the I/O-board cable to the connector on the I/O board and close the latch to secure the cable.
6. Adhere the tape that secures the I/O-board cable to the I/O board.
7. Connect the coin-cell battery cable to the I/O board.
8. Close the right display hinge.
9. Replace the screw (M2.5x3.5) that secures the right display hinge to the I/O board and palm-rest and keyboard assembly.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Power button


Removing the power button

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [fan](#).
4. Remove the [display assembly](#).
5. Remove the [I/O board](#).

About this task

The following image indicates the location of the power button and provides a visual representation of the removal procedure.

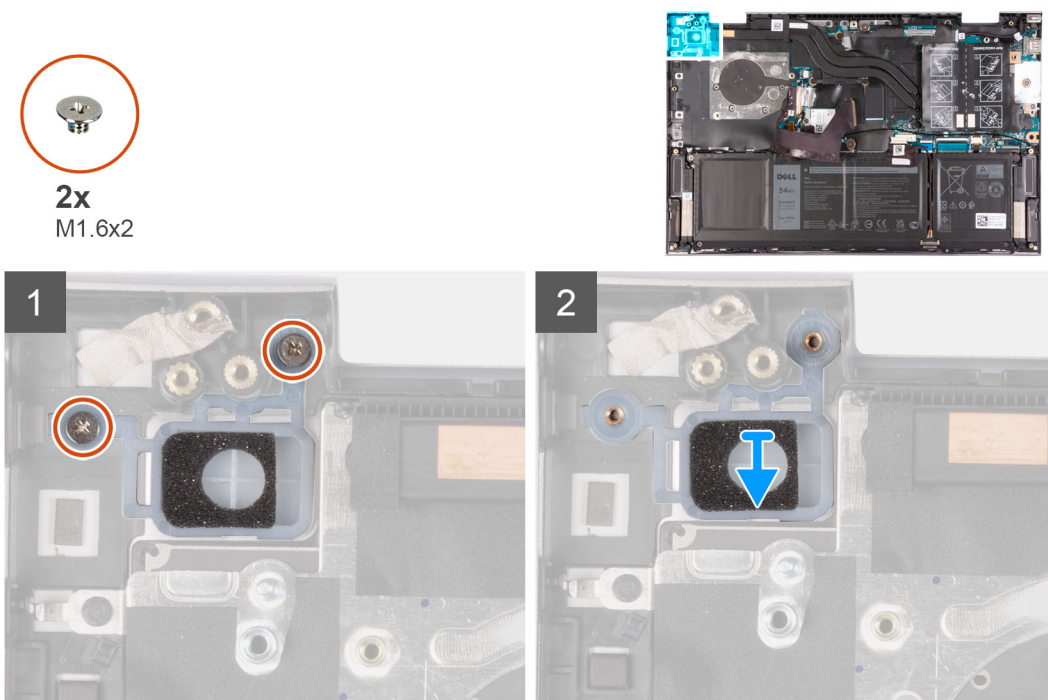

Steps

1. Remove the two screws (M1.6x2) that secure the power button to the palm-rest and keyboard assembly.
2. Lift the power button off the slot on the palm-rest and keyboard assembly.

Installing the power button

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power button and provides a visual representation of the installation procedure.



2x
M1.6x2

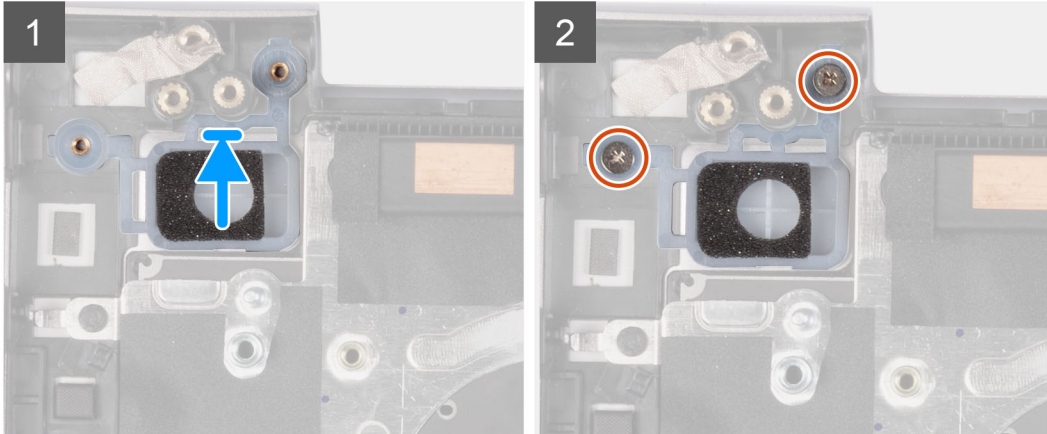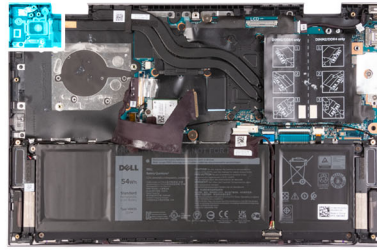

Steps

1. Align the screw holes on the power button with the screw holes on the palm-rest and keyboard assembly.
2. Replace the two screws (M1.6x2) that secure power button to the palm-rest and keyboard assembly.

Next steps

1. Install the [I/O board](#).
2. Install the [display assembly](#).
3. Install the [fan](#).
4. Install the [base cover](#).
5. Follow the procedure in [After working inside your computer](#).

Removing the power button with fingerprint reader

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [fan](#).
4. Remove the [display assembly](#).
5. Remove the [I/O board](#).

About this task

The following image indicates the location of the power button with fingerprint reader and provides a visual representation of the removal procedure.



2x
M1.6x2

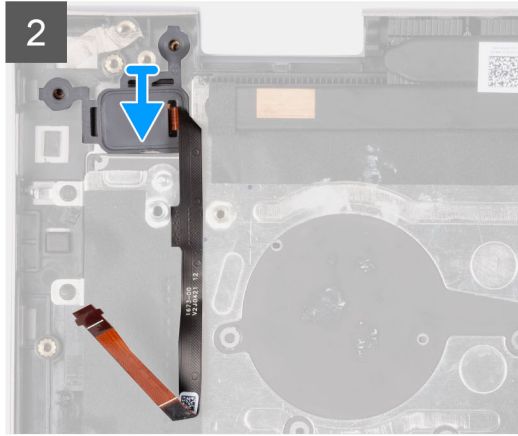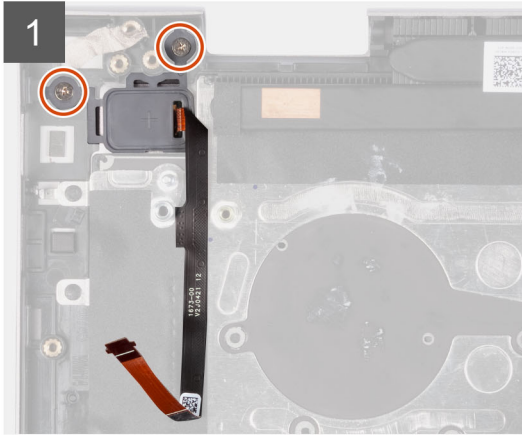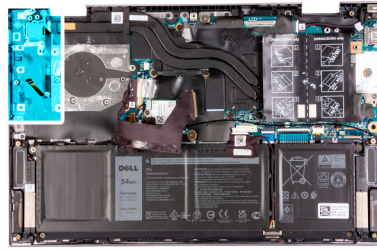

Steps




1. Remove the two screws (M1.6x2) that secure the power button to the palm-rest and keyboard assembly.
2. Lift the power button, along with the fingerprint-reader cable, off the slot on the palm-rest and keyboard assembly.

Installing the power button with fingerprint reader

Prerequisites



2x
M1.6x2

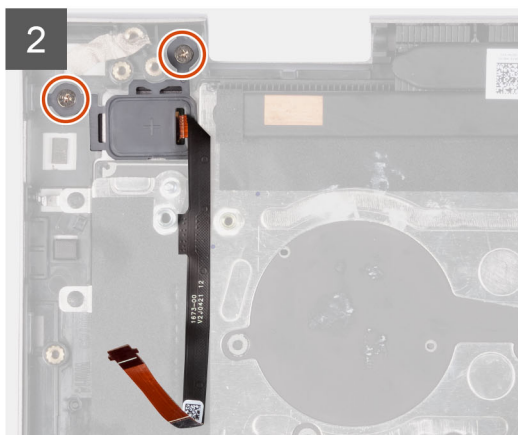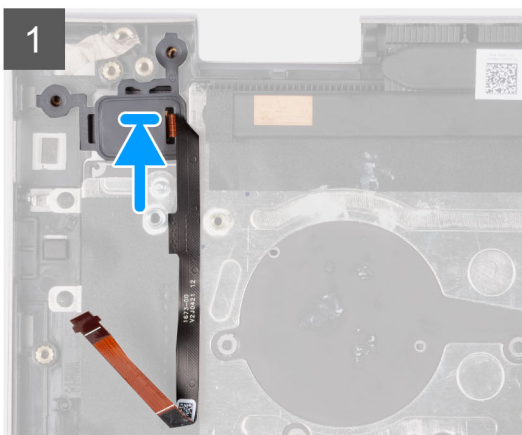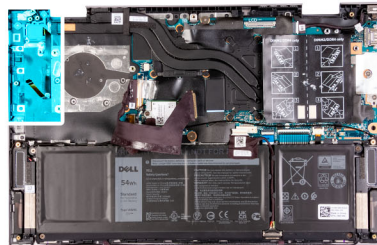

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power button with fingerprint reader and provides a visual representation of the installation procedure.

Steps

1. Align and place the power button, along with the fingerprint-reader cable, on the slot of the palm-rest and keyboard assembly.
2. Align the screw holes on the power button with the screw holes on the palm-rest and keyboard assembly.
3. Replace the two screws (M1.6x2) that secure power button to the palm-rest and keyboard assembly.

Next steps

1. Install the [I/O board](#).
2. Install the [display assembly](#).
3. Install the [fan](#).
4. Install the [base cover](#).
5. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [memory modules](#).
5. Remove the [wireless card](#).
6. Remove the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#), whichever applicable.
7. Remove the [heat sink](#).
8. Remove the [fan](#).

About this task

The following image indicates the connectors on your system board.

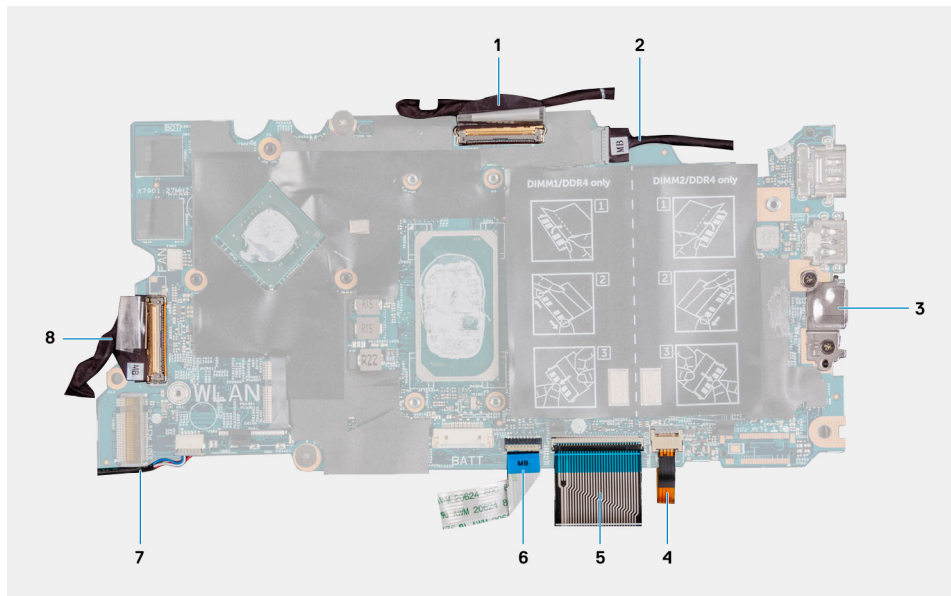


Figure 1. System-board connectors

- | | |
|----------------------------|--|
| 1. Display cable | 2. Power-adaptor port cable (optional) |
| 3. USB Type-C port bracket | 4. Keyboard-backlight cable |
| 5. Keyboard cable | 6. Touchpad cable |
| 7. Speaker cable | 8. I/O-board cable |




The following image indicates the location of the system board and provides a visual representation of the removal procedure.




4x
M2.5x3.5



2x
M2x1.8

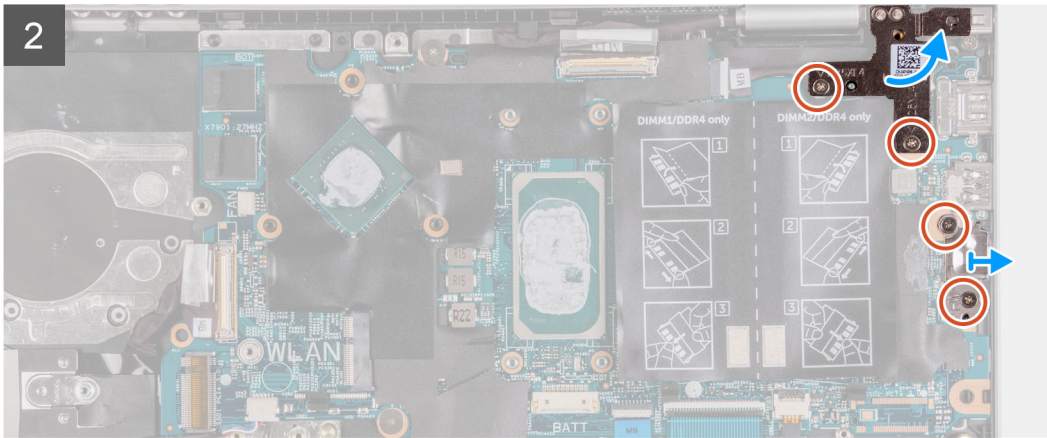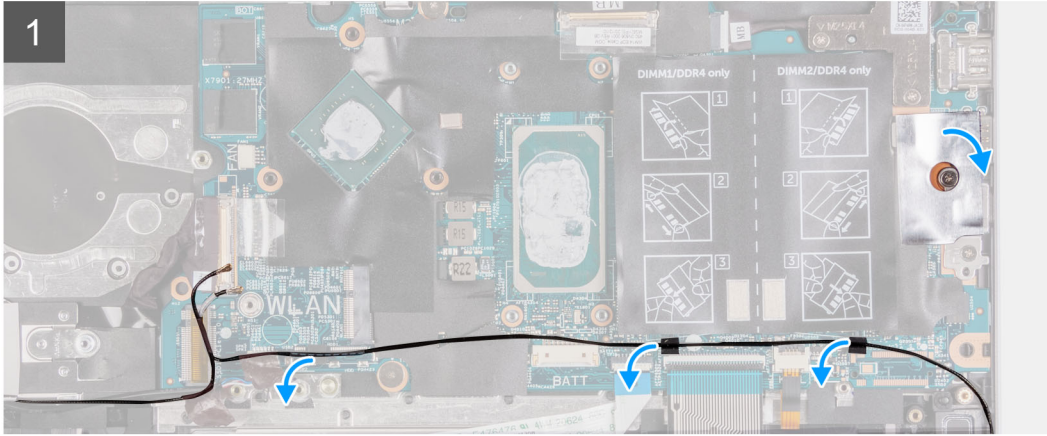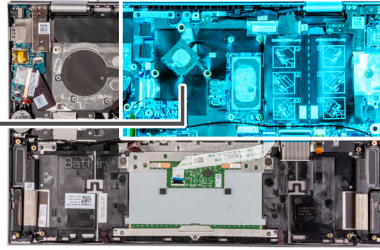

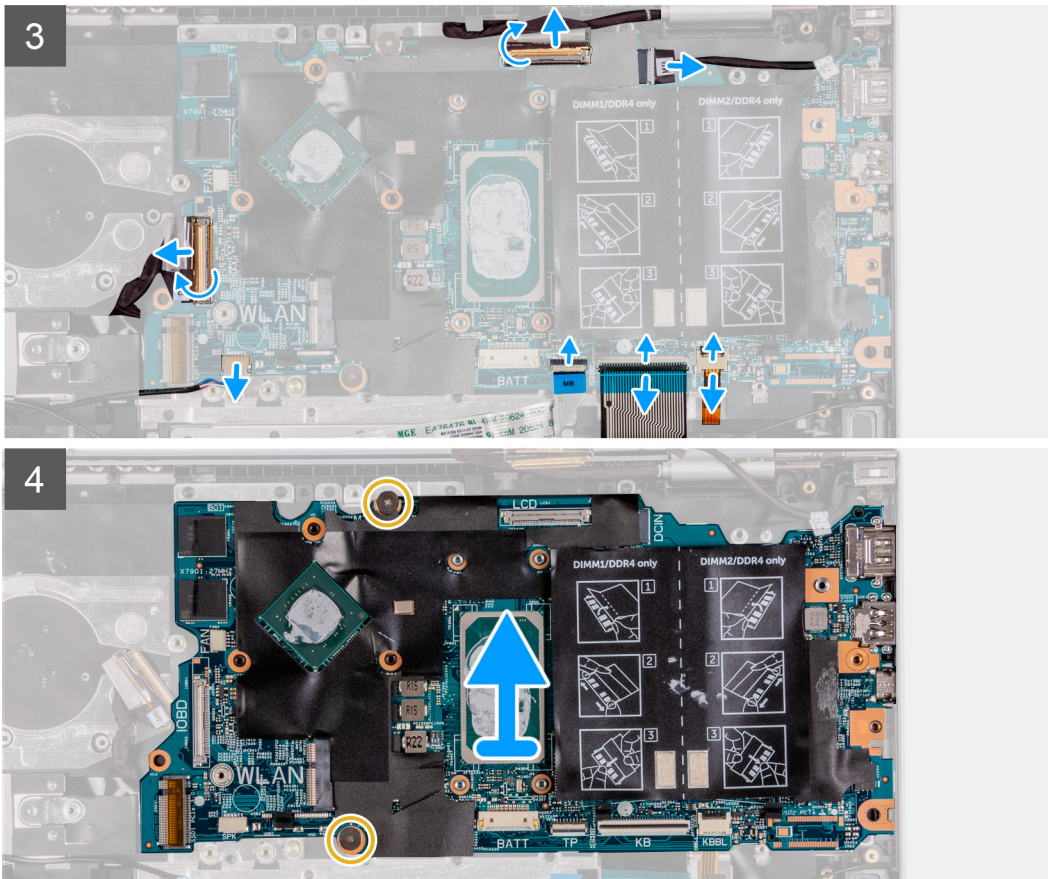

Steps

1. Peel the tape that secures the USB Type-C port bracket to the system board.
2. Remove the antenna cables from the routing guides on the system board.
3. Remove the two screws (M2.5x3.5) that secure the left display hinge to the system board and palm-rest and keyboard assembly.
4. Open the hinge at an angle of 90 degrees.
5. Remove the two screws (M2.5x3.5) that secure the USB Type-C bracket to the system board and palm-rest and keyboard assembly.
6. Lift the USB Type-C port bracket off the system board and palm-rest and keyboard assembly.
7. Peel the tape that secures the display cable to the system board.
8. Open the latch, and disconnect the display cable from the system board.
9. Open the latch, and disconnect the keyboard-backlight cable from the system board.
10. Open the latch, and disconnect the keyboard cable from the system board.
11. Open the latch, and disconnect the touchpad cable from the system board.
12. Disconnect the speaker cable from the system board.
13. Peel the tape that secures the I/O-board cable to the system board.
14. Open the latch, and disconnect the I/O-board cable from the system board.
15. Remove the two screws (M2x1.8) that secures the system board to the palm-rest and keyboard assembly.
16. Lift the system board off the palm-rest and keyboard assembly.

Installing the system board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the connectors on your system board.

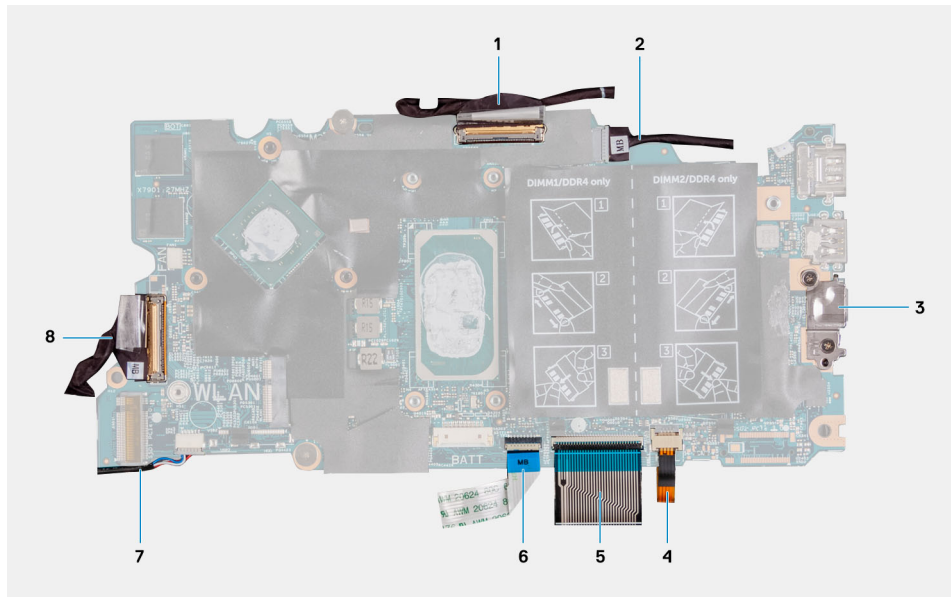


Figure 2. System-board connectors

- | | |
|----------------------------|--|
| 1. Display cable | 2. Power-adaptor port cable (optional) |
| 3. USB Type-C port bracket | 4. Keyboard-backlight cable |
| 5. Keyboard cable | 6. Touchpad cable |
| 7. Speaker cable | 8. I/O-board cable |




The following image indicates the location of the system board and provides a visual representation of the installation procedure.



4x
M2.5x3.5



2x
M2x1.8

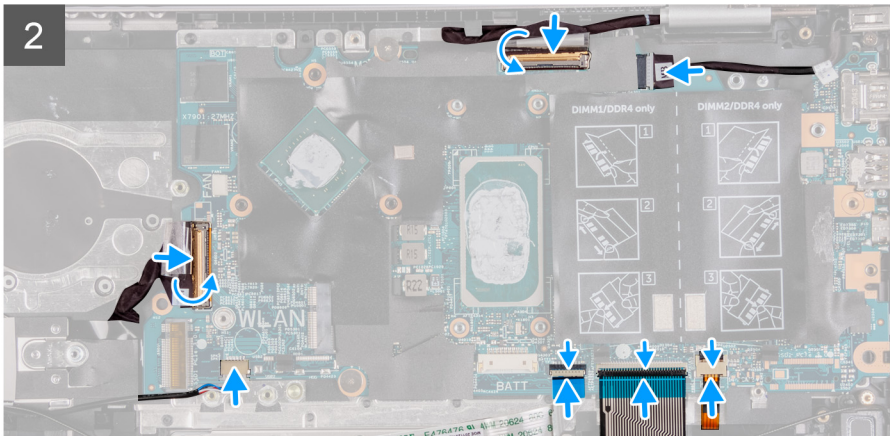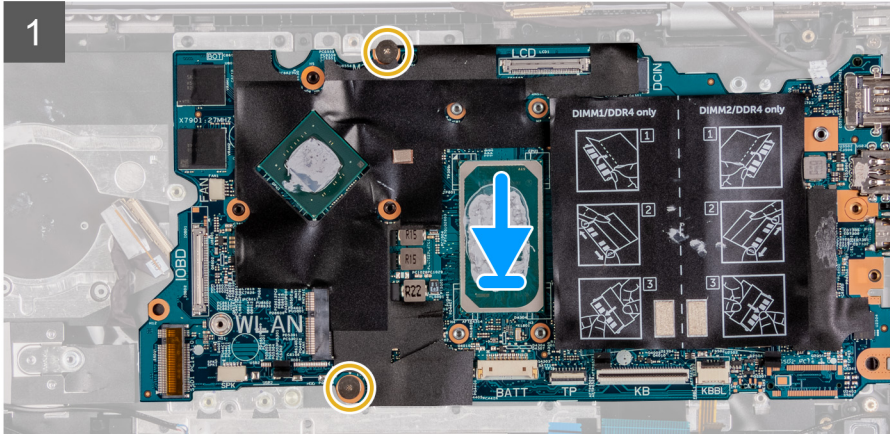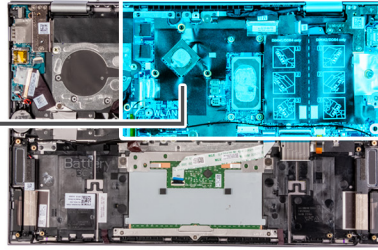



Steps

1. Align and place the system board on the palm-rest and keyboard assembly.
2. Replace the two screws (M2x1.8) that secure the system board to the palm-rest and keyboard assembly.
3. Connect the display cable to the connector on the system board and close the latch to secure the cable.
4. Adhere the tape that secures the display cable to the system board.
5. Connect the keyboard-backlight cable into the connector on the system board and close the latch to secure the cable.
6. Connect the keyboard cable to the connector on the system board and close the latch to secure the cable.
7. Connect the touchpad cable to the connector on the system board and close the latch to secure the cable.
8. Connect the speaker cable to the system board.
9. Connect the I/O-board cable to the connector on the system board and close the latch to secure the cable.
10. Adhere the tape that secures the I/O-board cable to the system board.
11. Close the left display hinge.
12. Replace the two screws (M2.5x3.5) that secure the left display hinge to the system board and palm-rest and keyboard assembly.
13. Align the screw holes on the USB Type-C port bracket with the screw holes on the system board.
14. Replace the two screws (M2.5x3.5) that secure the USB Type-C port bracket to the system board.
15. Adhere the tape that secures the USB Type-C port bracket to the system board.
16. Route the antenna cables through the routing guides on the system board.

Next steps

1. Install the [fan](#).
2. Install the [heat sink](#).
3. Install the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#), whichever applicable.
4. Install the [wireless card](#).
5. Install the [memory modules](#).
6. Install the [battery](#).


7. Install the [base cover](#).
8. Follow the procedure in [After working inside your computer](#).

Palm-rest and keyboard assembly

Removing the palm-rest and keyboard assembly

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [coin-cell battery](#).
5. Remove the [memory modules](#).
6. Remove the [wireless card](#).
7. Remove the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#), whichever applicable.
8. Remove the [I/O board](#).
9. Remove the [speakers](#).
10. Remove the [heat sink](#).
11. Remove the [fan](#).
12. Remove the [touchpad](#).
13. Remove the [power button](#) or [power button with fingerprint reader](#).
14. Remove the [display assembly](#).
15. Remove the [system board](#).

 **NOTE:** The system board can be removed along with the heat sink.

About this task

The following image indicates the location of the palm-rest and keyboard assembly and provides a visual representation of the removal procedure.



Steps

After performing the steps in the pre-requisites, you are left with the palm-rest and keyboard assembly.

Installing the palm-rest and keyboard assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the palm-rest and keyboard assembly and provides a visual representation of the installation procedure.



Steps

Place the palm-rest and keyboard assembly on a clean and flat surface.

Next steps

1. Install the [system board](#).
2. Install the [display assembly](#).
3. Install the [power button](#) or [power button with fingerprint reader](#).
4. Install the [touchpad](#).
5. Install the [fan](#).
6. Install the [heat sink](#).
7. Install the [speakers](#).
8. Install the [I/O board](#).
9. Install the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#), whichever applicable.
10. Install the [wireless card](#).
11. Install the [memory modules](#).
12. Install the [coin-cell battery](#).
13. Install the [battery](#).
14. Install the [base cover](#).
15. Follow the procedure in [After working inside your computer](#).

Drivers and downloads

When troubleshooting, downloading or installing drivers it is recommended that you read the Dell Knowledge Based article, Drivers and Downloads FAQ [000123347](#).

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

BIOS overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

Entering BIOS setup program

About this task

Turn on (or restart) your computer and press F2 immediately.

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
i **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F12 immediately.

i **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
i **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

System setup options

i **NOTE:** Depending on your computer and its installed devices, the items listed in this section may or may not appear.

Table 3. System setup options—Main menu

Main	
System Time	Displays the current time in hh:mm:ss format.
System Date	Displays the current date in mm/dd/yyyy format.
BIOS Version	Displays the BIOS version.
Product Name	Displays the model number of your computer.
Service Tag	Displays the service tag of your computer.
Asset Tag	Displays the asset tag of your computer.
CPU Type	Displays the processor type.
CPU Speed	Displays the processor speed.
CPU ID	Displays the processor identification code.
CPU Cache	
L1 Cache	Displays the processor L1 cache size.
L2 Cache	Displays the processor L2 cache size.
L3 Cache	Displays the processor L3 cache size.
First HDD	Displays the type of hard drive installed.

Table 3. System setup options—Main menu (continued)

Main

M.2 PCIe SSD	Display the M.2 PCIe SSD device information of the computer.
AC Adapter Type	Displays the type of AC adapter.
System Memory	Displays the size of memory installed.
Memory Speed	Displays the speed of memory.
Keyboard Type	Displays the type of keyboard installed on the computer.

Table 4. System setup options—Advance menu

Advanced

Virtualization	Enables or disables the Virtualization technology. Default: Enabled
USB Emulation	Enables or disables the USB emulation feature. This feature defines how the BIOS, in the absence of a USB-aware operating system, handles USB devices. USB emulation is always enabled during POST. i NOTE: You cannot boot any type of USB device (floppy, hard drive, or memory key) when this option is off. Default: Enabled
SATA Operation	Allows you to configure the operating mode of the integrated SATA hard drive controller. Default: AHCI
Adapter Warnings	Allows you to choose if the computer should display warning messages when you use AC adapters that are not supported by your computer. Default: Enabled
Function Key Behavior	Allows you to set function key or multimedia key as the default function key behavior. Default: Multimedia key
Keyboard Illumination	Selects the operating mode of the keyboard illumination feature. Default: Bright
Keyboard Backlight with AC	Selects the timeout value for the keyboard backlight when an AC adapter is plugged into the computer. Default: 1 minute
Keyboard Backlight with Battery	Selects the timeout value for the keyboard backlight when the computer is running on battery power. Default: 1 minute
Battery Health	Displays the battery health.
Camera	Enables or disables the camera. Default: Disabled
Battery Charge Configuration	Set the battery charge settings with a preselected custom charge start and stop. Default: Adaptive

Table 4. System setup options—Advance menu (continued)

Advanced	
Advance Battery Charge Configuration	Enable Advance Battery Charge Configuration from the beginning of the day to a specified work period. Default: Disabled
Power on LID open	Selects the power-on option when the display is open. Default: Disabled
Maintenance	
Data Wipe on next boot	Enables or disables data wipe on the next boot. Default: Disabled
BIOS Recovery from Hard Drive	Enables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.
BIOS Auto-Recovery	Enables BIOS to automatically recover BIOS without user actions. Default: Disabled
SupportAssist System Resolution	
Auto OS Recovery Threshold	Controls the automatic boot flow for SupportAssist System Resolution Console and for the Dell OS Recovery tool. Default: 2
SupportAssist OS Recovery	Enables or disables the boot flow for the SupportAssist OS Recovery tool in the even of certain system errors. Default: Disabled

Table 5. System setup options—Security menu

Security	
Admin Password	Displays if the administrator password is clear or set.
System Password	Displays if the system password is clear or set. Default: Not Set
Asset tag	Set your system's Asset Tag
Admin Password	Allows you to set the administrator password. The administrator password controls access to the system setup utility.
System Password	Allows you to set the system password. The system password controls access to the computer at boot.
Password Change	Allows you to permit or deny system password or HDD password changes. Default: Permitted
Absolute	Enables or disables the BIOS module interface of the optional Computrace Service from Absolute Software. Default: Deactivate
Absolute Status	Enables or disables SED Block SID Authentication. Default: Disabled
Firmware TPM	Enable or disable the firmware TPM. Default: Enabled

Table 5. System setup options—Security menu (continued)

Security	
PPI Bypass for Clear Command	Allows you to control the TPM Physical Presence Interface (PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing the Clear command. Changes to this setting take effect immediately. Default: Disabled
UEFI Firmware Capsule Updates	Enables or disables BIOS updates through UEFI capsule update packages. Default: Enabled
Secure Boot	Enables or disables configuration of platform features on Dell Client Systems with WSMT-enabled BIOS. Default: Enabled

Table 6. System setup options—Boot menu

Boot	
File Browser Add Boot Option	Allows you to add the boot options.
Windows Boot Manager	Display boot options in Windows
UEFI Boot	Enables or disables UEFI boot. Default: Disabled

Table 7. System setup options—Exit menu

Exit	
Exit Saving Changes	Allows you to exit system setup and save your changes.
Save Change Without Exit	Allows you to save your changes without exiting the BIOS setup.
Exit Discarding Changes	Allows you to exit the BIOS setup without saving the changes.
Load Optimal Defaults	Allows you to restore default values for all system setup options.
Discard Changes	Allows you to load previous values for all system setup options.

System and setup password

Table 8. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - At least one special character: ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | }
 - Numbers 0 through 9.
 - Upper case letters from A to Z.
 - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the pop-up message.
5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F12 immediately after a power-on or reboot.

Steps


1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.


Steps

1. Turn off your computer.
2. Remove the [base cover](#).
 -  **NOTE:** The battery must be disconnected from the system board (see step 4 in [Removing the base cover](#)).
3. Press and hold the power button for 15 seconds to drain the flea power.
4. Before you turn on your computer, follow the steps in [Installing the base cover](#).
5. Turn on your computer.

Clearing BIOS (System Setup) and System passwords

About this task


To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

 **NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Updating the BIOS

Updating the BIOS in Windows

Steps

1. Go to www.dell.com/support.
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.
 -  **NOTE:** If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.

For more information, see knowledge base article [000124211](http://www.dell.com/support) at www.dell.com/support.

Updating the BIOS using the USB drive in Windows

Steps

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, see the knowledge base article [000145519](http://www.dell.com/support) at www.dell.com/support.
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.

6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the F12 One-Time boot menu


Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

About this task

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.


 **NOTE:** Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION: Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.**

Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

Troubleshooting

Handling swollen Lithium-ion batteries

Like most laptops, Dell laptops use lithium-ion batteries. One type of lithium-ion battery is the lithium-ion polymer battery. Lithium-ion polymer batteries have increased in popularity in recent years and have become standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to lithium-ion polymer battery technology is the potential for swelling of the battery cells.

Swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and should be replaced and disposed of properly. We recommend contacting Dell product support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing Lithium-ion batteries are as follows:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery before removing it from the system. To discharge the battery, unplug the AC adapter from the system and operate the system only on battery power. When the system will no longer power on when the power button is pressed, the battery is fully discharged.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell product support at <https://www.dell.com/support> for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from <https://www.dell.com> or otherwise directly from Dell.

Lithium-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information on how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, see [Dell Laptop Battery - Frequently Asked Questions](#).

SupportAssist diagnostics

About this task

The SupportAssist diagnostics (previously known as ePSA diagnostics) performs a complete check of your hardware. The SupportAssist diagnostics is embedded in the BIOS and is launched by it internally. The SupportAssist diagnostics provides a set of options for particular devices or device groups. It allows you to:

- Run tests automatically or in an interactive mode.
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options and provide extra information about the failed device(s)
- View status messages that indicate if the tests are completed successfully

- View error messages that indicate if problems were encountered during the test

NOTE: Some tests are meant for specific devices and require user interaction. Ensure that you are present in front of the computer when the diagnostic tests are performed.

For more information, see [SupportAssist Pre-Boot System Performance Check](#).

Locate the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at www.dell.com/support.

For more information on how to find the Service Tag for your computer, see [Locate the Service Tag for your Dell Laptop](#).

System diagnostic lights

Battery-status light

Indicates the power and battery-charge status.

Solid white — Power adapter is connected and the battery has more than 5 percent charge.

Amber — Computer is running on battery and the battery has less than 5 percent charge.

Off

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The battery-status light blinks amber along with beep codes indicating failures.

For example, the battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

Table 9. LED codes

Diagnostic light codes	Problem description
2,1	Processor failure
2,2	System board: BIOS or Read-Only Memory (ROM) failure
2,3	No memory or Read-Only Memory (ROM) detected
2,4	Memory or Read-Only Memory (ROM) failure
2,5	Invalid memory installed
2,6	System-board or chipset error
2,7	Display failure
2,8	Display failure - EC detection of power rail failure
3,1	Coin-cell battery failure
3,2	PCI, video card/chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid
3,5	Power-rail failure
3,6	System BIOS Flash incomplete

Camera status light: Indicates whether the camera is in use.

- Solid white — Camera is in use.
- Off — Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white — Caps Lock enabled.
- Off — Caps Lock disabled.

Built-in self-test (BIST)

About this task

There are three different types of BIST to check the performance of display, power rail, and system board. These tests are important to evaluate if an LCD or system board needs a replacement.

1. M-BIST: M-BIST is the system board built-in self-test diagnostics tool that improves the diagnostics accuracy of system board embedded controller (EC) failures. M-BIST must be manually initiated before POST and can also run on a dead system .
2. L-BIST: L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST.
3. LCD-BIST: LCD BIST is an enhanced diagnostic test that is introduced through Preboot System Assessment (PSA) on legacy systems.

Table 10. Functions

	M-BIST	L-BIST
Purpose	Evaluates the health condition of the system board.	Checks if the system board is supplying power to the LCD by performing an LCD Power Rail test.
Trigger	Press the <M> key and the power button.	Integrated into the single LED error code diagnostics. Automatically initiated during POST.
Indicator of fault	Battery LED light with Solid Amber	Battery LED error code of [2,8] blinks Amber x2, then pause, then blinks White x8.
Repair instruction	Indicates a problem with the system board.	Indicates a problem with the system board.

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at www.dell.com/serviceabilitytools. Click **SupportAssist** and then, click **SupportAssist OS Recovery**.


Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell proposes multiple options for recovering Windows operating system on your Dell PC. For more information, see [Dell Windows Backup Media and Recovery Options](#).

WiFi power cycle

About this task

If your computer is unable to access the Internet due to WiFi connectivity issues, a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.

Steps

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not power on or boot into the operating system.

To drain residual flea power (perform a hard reset)

Steps

1. Turn off your computer.
2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.



 **NOTE:** For more information about performing a hard reset, see the knowledge base article [000130881](https://www.dell.com/support) at www.dell.com/support.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 11. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.