

Dell EMC OpenManage Mobile

Version 3.0 User's Guide (Android)

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

1 About OpenManage Mobile.....	7
What is new in this release.....	7
Key features of OpenManage Mobile (OMM).....	7
2 Setting up OpenManage Mobile.....	8
Installing OpenManage Mobile.....	8
Starting OpenManage Mobile.....	8
Logging in by using fingerprint authentication.....	10
Viewing OpenManage Mobile home screen.....	10
Navigation menu.....	11
Demo Mode.....	12
Configuring analytics settings.....	12
Resetting OpenManage Mobile.....	13
3 Managing OpenManage Essentials console.....	14
Adding an OpenManage Essentials console.....	14
Viewing OpenManage Essentials dashboard.....	15
Refreshing OpenManage Mobile data for OpenManage Essentials.....	16
Viewing devices in an OpenManage Essential console.....	17
Viewing alerts in OpenManage Essentials.....	19
Editing connection details of an OpenManage Essentials console.....	22
Deleting an OpenManage Essentials console.....	22
Deleting multiple hosts.....	22
Performing power control operations.....	23
Performing power control operations on a server managed by OpenManage Essentials.....	23
4 Managing OpenManage Enterprise.....	24
Adding an OpenManage Enterprise console.....	24
Viewing OpenManage Enterprise dashboard.....	25
Refreshing OpenManage Mobile data for OpenManage Enterprise.....	26
Viewing devices in an OpenManage Enterprise console.....	27
Viewing software details.....	28
Viewing hardware log.....	28
Viewing the warranty information.....	28
Accessing Dell Quick Resource Locator website.....	29
Viewing alerts in OpenManage Enterprise.....	29
Performing an action on multiple alerts.....	29
Acknowledging an alert.....	30
Sharing an alert.....	30
Deleting an alert.....	31
Editing connection details of an OpenManage Enterprise console.....	32
Deleting an OpenManage Enterprise console.....	32

Deleting multiple hosts.....	32
Performing power control operations.....	33
Performing power control operations on a server managed by OpenManage Enterprise.....	33
5 Managing iDRAC.....	34
Adding an iDRAC.....	34
Adding an iDRAC using WS-Man Protocol.....	34
Adding multiple iDRACs using the IP range.....	35
Adding an iDRAC using iDRAC Quick Sync Read.....	36
Viewing iDRAC dashboard.....	39
Viewing hardware logs of an iDRAC.....	39
Viewing firmware details of an iDRAC.....	40
Viewing network details of an iDRAC.....	40
Viewing health status of an iDRAC.....	41
Viewing the warranty information of an iDRAC.....	41
Accessing Dell Quick Resource Locator website through iDRAC.....	42
Generating and Sharing the iDRAC Report.....	42
Sharing iDRAC Details.....	42
Viewing the remote desktop.....	42
Editing connection details of an iDRAC.....	43
Deleting an iDRAC.....	44
RACADM Commands.....	44
Performing RACADM Command operations.....	44
Device inventory.....	45
Editing the BIOS configuration.....	46
Viewing iDRAC details in web browser	46
Performing power control operations on an iDRAC.....	46
Changing the configuration of an iDRAC.....	47
Activating or deactivating the system ID LED.....	48
AutoConfiguration using XML configuration file.....	48
iDRAC configuration using WS-MAN protocol.....	49
Template deploy.....	49
Creating a Deployment template.....	50
Applying a Deployment template.....	51
OpenManage Mobile Diagnostics using Quick Sync 2.....	51
Diagnostics using Quick Sync 2.....	51
6 Managing an MX7000 chassis.....	53
Adding an MX7000 Chassis.....	53
Viewing an MX7000 Chassis dashboard.....	54
Editing connection details of an MX7000 chassis.....	55
Deleting an MX7000 chassis.....	56
Viewing additional MX7000 chassis options.....	56
Configuring an MX7000 chassis.....	56
Managing IOMs.....	57

7 Inventory collection.....	58
To add a service tag.....	58
To share the service tag information.....	58
8 Push notifications.....	59
Configuring alert notifications settings.....	59
Viewing alerts using push notifications.....	59
9 Using the OpenManage Mobile Password.....	61
Changing the OpenManage Mobile password.....	61
Disabling the OpenManage Mobile password.....	62
Using fingerprint to log in.....	63
Enabling or disabling fingerprint authentication from the Settings screen.....	63
Managing fingerprints.....	63
Adding a fingerprint.....	63
Renaming a fingerprint.....	64
Deleting a fingerprint.....	64
10 Viewing OpenManage Mobile information.....	65
Viewing the OpenManage Mobile application log.....	65
Viewing the OpenManage Mobile application version.....	65
Viewing the OpenManage Mobile TechCenter page.....	65
Viewing the OpenManage Mobile manuals and documentation.....	66
Viewing the OpenManage Mobile End User License Agreement and Open source licence.....	66
11 Sharing feedback.....	67
12 Troubleshooting OpenManage Mobile.....	68
Unable to view BLE enabled servers in Android 7.0 and 7.1.1.....	68
Unable to add OpenManage Essentials to OpenManage Mobile.....	68
Unable to add iDRAC to OpenManage Mobile.....	68
Unable to add iDRAC to OpenManage Mobile using iDRAC Quick Sync Read.....	69
Slow data retrieval.....	69
Updated information not displayed in OpenManage Mobile.....	69
Incomplete device information.....	69
Unable to register for push notifications.....	69
Delay in receiving push notifications.....	70
Unable to log in to OpenManage Mobile.....	70
Unable to retrieve iDRAC data.....	70
VNC connection failed!.....	71
Known issues.....	71
13 Uninstalling OpenManage Mobile.....	73
14 Related documents and resources.....	74
Other documents you may need.....	74

Contacting Dell..... 74
Accessing documents from the Dell EMC support site.....74

About OpenManage Mobile

OpenManage Mobile is a systems management application that enables you to monitor your data center from an Android mobile device. OpenManage Mobile enables you to add one or more OpenManage Essentials consoles and/or Integrated Dell Remote Access Controllers (iDRACs) 7 or later and/or OpenManage Enterprise consoles and/or Chassis. OpenManage Mobile provides OpenManage Essentials and OpenManage Enterprise alerts to your mobile device and enables you to troubleshoot your hardware in case of emergencies. In addition, OpenManage Mobile allows you to view the health of your data center and perform basic tasks such as power control functions.

This document provides information about installing, using, and troubleshooting OpenManage Mobile.

Topics:

- [What is new in this release](#)
- [Key features of OpenManage Mobile \(OMM\)](#)

What is new in this release

What is new in this release

The release highlights are:

NOTE: For new features and latest fixes, it is recommended that you upgrade to OpenManage Mobile version 3.0.

NOTE: OpenManage Mobile version 3.0 is supported for Android versions 6.0 and above.

Chassis management - In OpenManage Mobile you can manage your chassis. You can perform the following tasks using OMM:

- Add, Edit, or Delete an MX7000 chassis.
- View the inventory of MX7000 chassis, sleds, health status, and logs.
- Configure MX7000 chassis and sleds.

OpenManage Enterprise - You can perform the following tasks using OMM:

- Add, Edit, or Delete an OpenManage Enterprise console.
- View the inventory of an OpenManage Enterprise console.
- View the alerts in an OpenManage Enterprise console.

Key features of OpenManage Mobile (OMM)

You can perform the following tasks by using OpenManage Mobile (OMM):

- Monitor and manage devices by using OpenManage Essentials and OpenManage Enterprise.
- Monitor, manage, and access servers remotely or physically (at-the-server) by using the Quick Sync 2 module.
- Monitor, manage, and access by physically interacting with the MX7000 chassis (at-the-chassis).

Setting up OpenManage Mobile

This chapter provides information about installing and starting OpenManage Mobile.

Topics:

- [Installing OpenManage Mobile](#)
- [Starting OpenManage Mobile](#)
- [Viewing OpenManage Mobile home screen](#)
- [Demo Mode](#)
- [Configuring analytics settings](#)
- [Resetting OpenManage Mobile](#)

Installing OpenManage Mobile

Prerequisites to install OpenManage Mobile:

- Ensure that you have Android version 6.0 or later on your mobile device.
- Ensure that you have access to Google Play Store Application on your Android device.
- To receive alert notifications in OpenManage Mobile on Android version 6.0, you must have a Google account registered on your device.

To install OpenManage Mobile:

- 1 On your mobile device, open the **Google Play Store** application.
- 2 Search for **OpenManage Mobile**.
- 3 Tap **OpenManage Mobile** in the search result, and tap **Install**.
- 4 Tap **Accept** to accept the permissions required by **OpenManage Mobile**.
OpenManage Mobile installation is complete.

Starting OpenManage Mobile

To start OpenManage Mobile:

NOTE: An Internet connection is required when you start OpenManage Mobile for the first time. The application attempts to install a Google Cloud Messaging (GCM) token.

- 1 Search for **OMM** in the list of applications on your mobile device, and then tap **OMM** to start.
The OpenManage Mobile End User License and Evaluation Agreement is displayed.
- 2 Read the terms in the agreement, and tap **Agree**.

NOTE: The **Diagnostics and Usage** screen is displayed only when you open OpenManage Mobile for the first time. If you want to enable sharing **Diagnostics and usage** at a later time, see [Resetting OpenManage Mobile](#).

The **Diagnostics and Usage** screen is displayed.

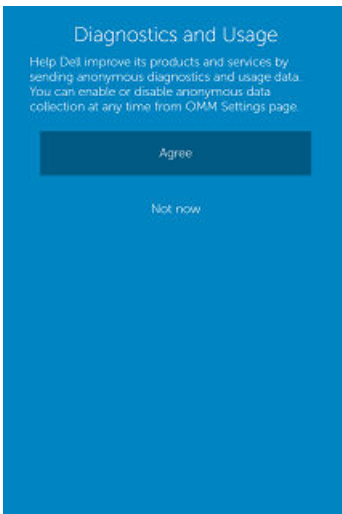 


Figure 1. Diagnostics and Usage

- 3 Tap **Agree**.
The **PASSWORD SETTINGS** screen is displayed.

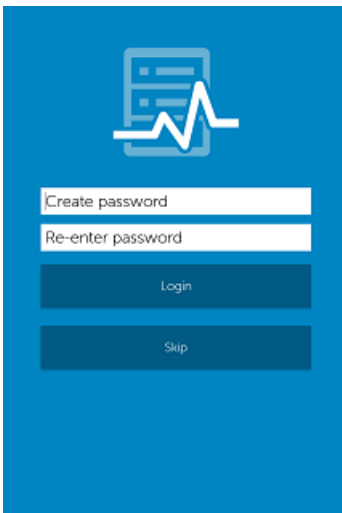 


Figure 2. Password settings

- 4 Complete one of the following based on your preference:
 - To set the authentication type for OpenManage Mobile:
 - 1 For password authentication, type a password and reconfirm the password.
 - 2 If you also want to use your fingerprint to log in, select **Use fingerprint to authenticate**.
 - ① **NOTE:** The **Use fingerprint to authenticate** option is displayed only on devices with a fingerprint sensor.
 - ① **NOTE:** When you start OpenManage Mobile for the first-time, it is mandatory to enter the password. Fingerprint authentication is available only from the next time you start OpenMange Mobile.
 - 3 Tap **Login**.
To skip setting the authentication for OpenManage Mobile, tap **Skip**.
- 5 The **Demo Mode** screen is displayed. Tap one of the following based on your preference:
 - **Try Demo mode now:** To open OpenManage Mobile in demo mode, see [Enabling or Disabling Demo Mode](#).

- **Continue to OpenManage Mobile:** To open the OpenManage Mobile home screen.

The OpenManage Mobile home screen is displayed.

Logging in by using fingerprint authentication

Fingerprint authentication must be enabled in OpenManage Mobile to login using your registered fingerprint.

To login using fingerprint authentication:

- 1 Start OpenManage Mobile.

The **Login to OMM** screen is displayed.

Login to OMM

Provide your fingerprint to login to OpenManage Mobile.



Touch sensor

CANCEL

Figure 3. Login to OMM

- 2 Swipe your registered fingerprint on the fingerprint sensor.

If the authentication is successful, the **Fingerprint recognised** message is displayed.

The OpenManage Mobile home screen is displayed.

Viewing OpenManage Mobile home screen

To view the OpenManage Mobile home screen:

- 1 Start OpenManage Mobile.

- 2 If applicable, enter the OpenManage Mobile password and tap **Login**.

The OpenManage Mobile home screen is displayed. By default, all the Servers, OpenManage Essentials, Chassis, and OpenManage Enterprise are displayed. You can filter the devices by using the drop-down menu available on the top of the Home page.

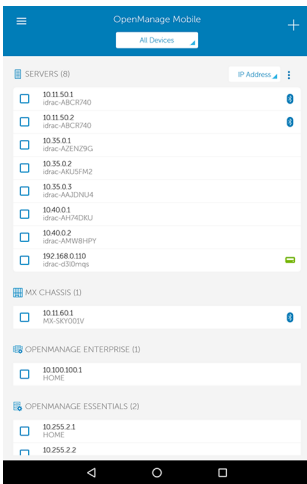 


Figure 4. Home screen

- ① **NOTE:** To add an OpenManage Essentials console, see [Adding OpenManage Essentials](#).
- ① **NOTE:** To add an iDRAC, see [Adding iDRAC](#).
- ① **NOTE:** To add a Chassis, see [Adding an MX7000 Chassis](#).
- ① **NOTE:** To add an OpenManage Enterprise console, see [Adding OpenManage Enterprise](#).

Navigation menu

The navigation menu allows you to quickly navigate to various screens. The following are the available navigation options:

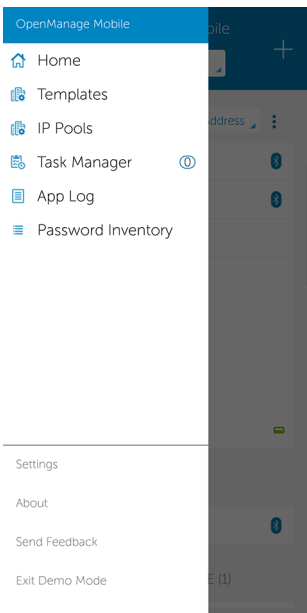 


Figure 5. Navigation menu

- **Home** — Navigates to the OpenManage Mobile home screen.

- **Templates** — Allows you to manage templates by creating, editing, and deleting using OpenManage Mobile.
- **IP Pools** — Allows you to specify a range of IP for template deploy using OpenManage Mobile.
- **Task Manager** — Allows you to view the actions that are performed in OpenManage Mobile.
- **App Log** — Displays the application log severity and details.
- **Password Inventory** — Extract the service tag, MAC address, and password details using the QR code available on the server.
- **Settings** — Navigates to the **Settings** screen.
- **Send Feedback** — Allows you to send an email feedback to Dell using the default email application.
- **About** — Allows you to view the OpenManage Mobile version and links to related resources.

Accessing the navigation menu

To access the navigation menu:

Tap  from any screen.

The navigation options are displayed.

Demo Mode

Demo mode allows you to explore the features of OpenManage Mobile. You can work on basic OpenManage Mobile features such as creating and deleting hosts, viewing alerts, and so on.

 **NOTE: Features that require a network connection will not work in demo mode.**

 **NOTE: Enabling demo mode does not clear the information saved by you on OpenManage Mobile. When you disable demo mode the information saved by you will be restored to OpenManage Mobile.**

To enable to disable demo mode:

- 1 Tap the Navigation menu icon.
- 2 Tap **Settings** .
The **Settings** screen is displayed.
- 3 Use the **Enable Demo Mode** toggle switch to enable or disable the demo mode.


Configuring analytics settings

The analytics settings in OpenManage Mobile collects information about the actions you perform in OpenManage Mobile and sends it to Dell. The information is used by Dell to enhance the functionality of the application. You can choose to enable to disable analytics settings based on your preference.

 **NOTE: The analytics data collected by OpenManage Mobile does not contain any Personally Identifiable Information (PII). The collected data will be treated in accordance with the Dell Privacy Policy available for review at Dell.com/privacy.**

 **NOTE: You will be prompted to configure the analytics settings when you start OpenManage Mobile for the first time after an installation or upgrade.**

To configure the analytics settings:

- 1 Tap .
- 2 Tap **Settings**.
The **Settings** screen is displayed.
- 3 Use the **Share Anonymous Data** toggle switch to enable or disable sharing Analytics Data Collection.

Resetting OpenManage Mobile

This feature allows you to reset OpenManage Mobile to original settings and start a new session. You can use the reset option if the OpenManage Mobile password is not retrievable.

NOTE: Resetting OpenManage Mobile with delete all user entered information such as Login Password, Saved hosts, Logs, Analytics data, and so on.

To reset OpenManage Mobile:

- 1 Tap the Navigation menu icon.
- 2 Tap **Settings**.
The **Settings** screen is displayed.
- 3 Tap **Reset OpenManage Mobile**.
The **Are you sure?** pop up message is displayed.
- 4 Tap **Yes** to reset OpenManage Mobile application.
The **Confirm Reset** pop up message is displayed.
- 5 Tap **Reset**.
You will be redirected to the OpenManage **End User Licence Agreement** screen.

Managing OpenManage Essentials console

This section provides information you require to add, edit, or delete an OpenManage Essentials console in OpenManage Mobile.

Topics:


- [Adding an OpenManage Essentials console](#)
- [Viewing OpenManage Essentials dashboard](#)
- [Editing connection details of an OpenManage Essentials console](#)
- [Deleting an OpenManage Essentials console](#)
- [Deleting multiple hosts](#)
- [Performing power control operations](#)
- [Performing power control operations on a server managed by OpenManage Essentials](#)

Adding an OpenManage Essentials console

Prerequisites to add an OpenManage Essentials:

- Ensure that you have installed the latest OpenManage Essentials version.
- Ensure that you have VPN or internal Wi-Fi access to the OpenManage Essentials network on the Android device.

To add an OpenManage Essentials console:

- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile password and tap **Login**.
The OpenManage Mobile home screen is displayed.
- 3 On the OpenManage Mobile home screen, tap  on the top right corner.
The **Add** options are displayed.
- 4 Tap **OpenManage Essentials** and click **Next**.
- 5 Type the **Hostname or IP**, **Username**, **Password**, **Domain** (if applicable), and **Description** (optional) of the OpenManage Essentials console.

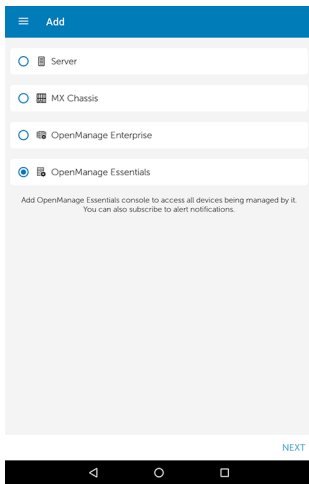 


Figure 6. Adding OpenManage Essentials

- 6 To save the connection details, tap **Add OME**.
The OpenManage Essentials SSL certificate is displayed.
- 7 Tap **Yes** to accept the certificate and save the OpenManage Essentials console.
- 8 On the next screen, select the appropriate alert filter for push notifications .

NOTE: To set a custom alert filter, see *OpenManage Essentials User's Guide*.

NOTE: If you do not want to receive push notifications, you can disable it using the *enable push notifications* toggle box.

NOTE: In certain situations, there may be a delay in receiving push notifications in OpenManage Mobile. For more information about this, see [Troubleshooting OpenManage Mobile](#).

The newly added OpenManage Essentials console dashboard is displayed.

Viewing OpenManage Essentials dashboard

To view the OpenManage Essentials dashboard:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Essentials console.
The appropriate OpenManage Essentials dashboard is displayed.

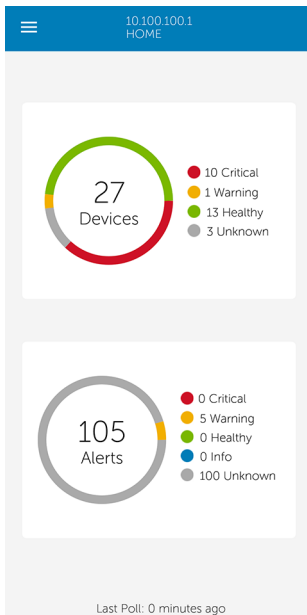 









Figure 7. OpenManage Essentials dashboard

-  indicates the number of devices or alerts that are critical.
 -  indicates the number of devices or alerts that are with warning status.
 -  indicates the number of devices or alerts that are healthy.
 -  indicates the number of devices or alerts that are unknown.
 -  indicates the available information about the devices or alerts.
- 2 Tap **Devices** to view the devices managed by OpenManage Essentials and tap **Alerts** to view the alerts.
-  **NOTE:** To share the information using an application available on your device, tap  and select the share option.

Refreshing OpenManage Mobile data for OpenManage Essentials

To refresh the information displayed in OpenManage Mobile:

Perform one of the following:

- Touch and swipe down on any screen.
- On any screen, tap the overflow menu and then tap **Refresh**.

NOTE: The overflow symbol may differ from device to device. For example, in some devices it is displayed as a  symbol, or at the lower left corner of the screen., or at the lower right corner of the screen.

Viewing devices in an OpenManage Essential console

To view the devices of an OpenManage Essential console:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Essentials console.
- 2 In the OpenManage Essentials dashboard, tap **Devices**.

The **All Devices** screen is displayed.

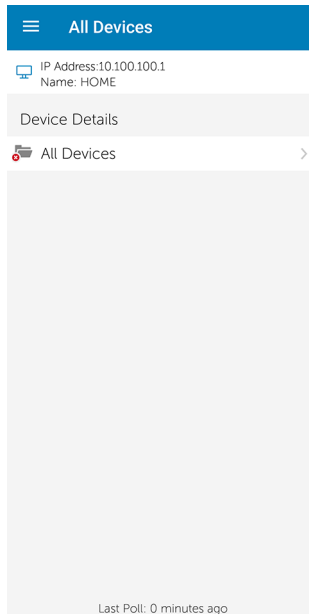 


Figure 8. All devices

- 3 Tap the appropriate device category (for example, **RAC**), and then tap to select the device you want to view. The inventory information of the devices managed by OpenManage Essentials is displayed.

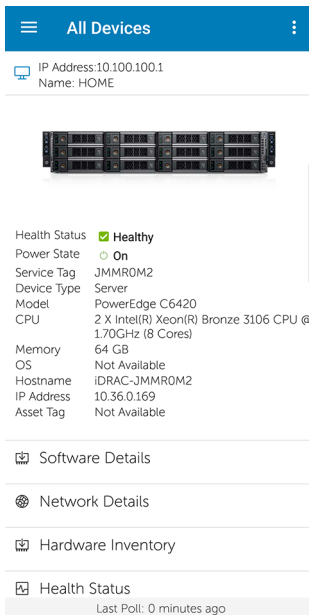 



Figure 9. Device details

- 4 Tap **Software Details** to view the software details of the device, tap **Hardware Log** to view the hardware log, tap **Alerts** to view the alerts, tap **Warranty** to view warranty information of the device.
- 5 Tap  and tap **Support** to access the Dell Quick Resource Locator website.

Viewing software details

To view the software details:

- On the **Device Details** screen, tap **Software details**.
The **Software Details** screen is displayed with the software information of an OpenManage Essentials.

Viewing hardware log

To view the hardware log:

- On the **Device Details** screen, tap **Hardware Log**.
The **Hardware log** screen is displayed.

Viewing the warranty information

To view the warranty information:

- On the **Device Details** screen, tap **Warranty**.
The **Warranty** screen is displayed.

 **NOTE:** An internet connection is required to view the warranty information.

Accessing Dell Quick Resource Locator website

To access the Dell QRL website:

- On the **Device Details** screen, tap  and tap **Support** .
The Dell Quick Resource Locator website is displayed in a new web browser.

 **NOTE:** An internet connection is required to access the Dell Quick Resource Locator website.

Viewing alerts in OpenManage Essentials

To view the alerts in OpenManage Essentials:

- On the OpenManage Mobile home screen, tap the OpenManage Essentials console you want to view alerts for.
- Tap **Alerts**.

 **NOTE:** You can filter the alerts by using the drop-down menu available on the top of the Alerts page.

 **NOTE:** You can perform action on multiple alerts, for more information see [Performing action on multiple alerts](#).

The alerts that are associated with the selected OpenManage Essentials are displayed.

- Tap the alert you want to view details for.

The **Alert Details** screen is displayed.

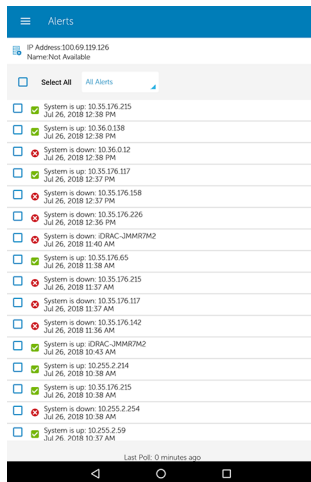 



Figure 10. Alerts

You can forward, acknowledge, or delete an alert.

Performing an action on multiple alerts


To perform an action on multiple alerts:

- On the **OpenManage Essentials Console** screen, tap **Alerts**.
The **Alerts** screen is displayed.
- Select multiple alerts by selecting the check box on the left of each alert. Tap  and tap **Delete** to delete the alerts, tap **Acknowledge** to acknowledge the alerts, or tap **Share** to share the selected alerts.
- In the next window, tap **Task Manager** to view the status of the action.

 **NOTE:** You can also cancel the performed action in the task manager.

Acknowledging an alert

To acknowledge an alert:

- 1 On the **Alert Details** screen, tap  and then tap **Acknowledge** to acknowledge an alert.
- 2 Tap **Yes** to confirm.

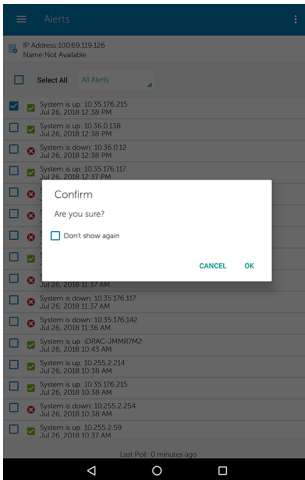 



Figure 11. Confirm acknowledgment

The alert is acknowledged, and the **Alert Details** screen is automatically refreshed.

 **NOTE:** To share the information using an application available on your device, tap  and then tap **Share**.

Sharing an alert

To share an alert:

- 1 On the **Alert Details** screen, tap  and then tap **Share** to share an alert.
- 2 Select the option you want to use to share the alert details.

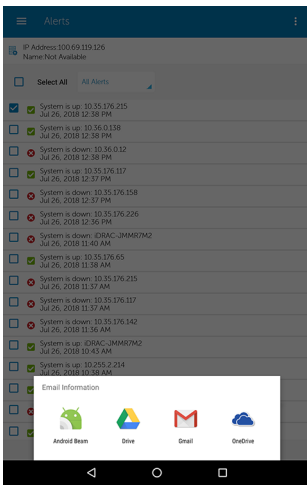 


Figure 12. Alert sharing options

Deleting an alert

To delete an alert:

- 1 On the **Alert Details** screen, tap  and then tap **Delete** to delete an alert.

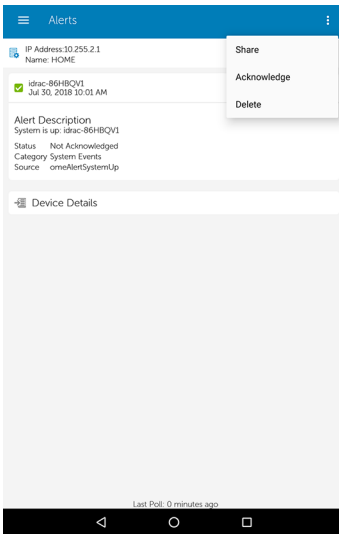 


Figure 13. Deleting alerts

- 2 In the **Delete Confirmation** box, tap **Yes** to confirm.

The alert is deleted, and you are returned to the **Alerts** list screen.

Editing connection details of an OpenManage Essentials console


To edit the connection details of the OpenManage Essentials console:

- 1 Press and hold the OpenManage Essentials console you want to edit.
- 2 Tap **Edit Connection**.
- 3 Edit the **Hostname or IP**, **Username**, **Password**, **Domain** (if applicable), and **Description** (optional) as required.
- 4 Tap **Next**.
On the next screen, edit the alert filter subscription if needed.
- 5 Tap **OK** to save the connection.

The OpenManage Essentials dashboard is displayed.

Deleting an OpenManage Essentials console

To delete an OpenManage Essentials console from OpenManage Mobile:


- 1 On the OpenManage Mobile home screen, perform one of the following steps:
 - Select the OpenManage Essentials console that you want to remove, and tap .
- NOTE:** If you want to remove multiple OpenManage Essentials consoles, select each console that you want to remove.
- Press and hold the OpenManage Essentials console.
 - 1 Tap **Edit Connection**.
 - 2 Tap **Delete OME**.
- NOTE:** If OpenManage Mobile is unable to contact the OpenManage Essentials server when the console is deleted, the OpenManage Essentials server retains the device in its mobile subscribers list until it is manually deleted. For more information about deleting a mobile subscriber, see *OpenManage Essentials User's Guide*.
- 2 The **Delete Confirmation** screen is displayed.
 - 3 Tap **Yes**.

The OpenManage Essentials console is deleted from OpenManage Mobile.

Deleting multiple hosts

To delete multiple hosts (OpenManage Essentials consoles and iDRACs) from OpenManage Mobile:

- 1 On the OpenManage Mobile home screen, select the hosts that you want to remove.

NOTE: If OpenManage Mobile is unable to contact the OpenManage Essentials server when the host is deleted, the OpenManage Essentials server retains the device in its mobile subscribers list until it is manually deleted. For more information about deleting a mobile subscriber, see *OpenManage Essentials User's Guide*.
- 2 Tap .
The **Confirm Deletion** screen is displayed.
- 3 Tap **Yes**.

The hosts are deleted from OpenManage Mobile.

Performing power control operations


You can perform power control operations on a server managed by OpenManage Essentials or an iDRAC.

- [Performing power control operations on a server managed by OpenManage Essentials](#)
- [Performing Power Control Operations on an iDRAC](#)

Performing power control operations on a server managed by OpenManage Essentials

For devices managed by OpenManage Essentials, power control operations are supported only on iDRACs and servers.

To perform a power control operation:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Essentials console.
- 2 In the OpenManage Essentials dashboard, tap **Devices**.
The **All Devices** screen is displayed.
- 3 Tap the appropriate device category (for example, **RAC**), and then tap to select the device you want to perform power control operation on.
The **Device Details** screen is displayed.
- 4 Tap  and then tap **Reboot**.

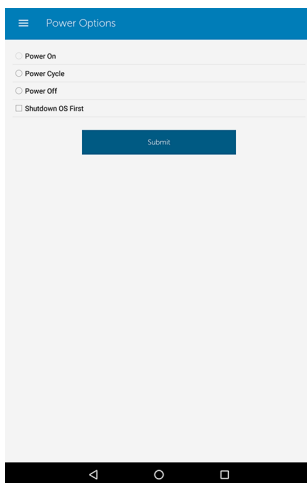 


Figure 14. Power control options

The supported power control operations are displayed.

- 5 Select the power control operation that you want to perform.

NOTE: The **Enable All** option allows you to perform a power control operation independent of the discovery protocol. **Power On** operation is performed through the iDRAC and all other power control operations are performed through the server host OS.

NOTE: For all tasks except **Power On**, the server needs to be discovered in addition to the iDRAC.

- 6 Tap **Submit**.
OpenManage Mobile performs the power control operation and then displays the result of the operation.

Managing OpenManage Enterprise

This section provides information you require to add, edit, or delete an OpenManage Enterprise console in OpenManage Mobile.

Topics:


- [Adding an OpenManage Enterprise console](#)
- [Viewing OpenManage Enterprise dashboard](#)
- [Refreshing OpenManage Mobile data for OpenManage Enterprise](#)
- [Viewing devices in an OpenManage Enterprise console](#)
- [Viewing alerts in OpenManage Enterprise](#)
- [Editing connection details of an OpenManage Enterprise console](#)
- [Deleting an OpenManage Enterprise console](#)
- [Deleting multiple hosts](#)
- [Performing power control operations](#)
- [Performing power control operations on a server managed by OpenManage Enterprise](#)

Adding an OpenManage Enterprise console

Prerequisites to add an OpenManage Enterprise:

- Ensure that you have installed the latest OpenManage Enterprise version.
- Ensure that you have VPN or internal Wi-Fi access to the OpenManage Enterprise network on the Android device.

To add an OpenManage Enterprise console:

- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile password and tap **Login**.
The OpenManage Mobile home screen is displayed.
- 3 On the OpenManage Mobile home screen, tap  on the top right corner.
The **Add** options are displayed.
- 4 Tap **OpenManage Enterprise** and click **Next**.
- 5 Type the **Hostname or IP**, **Username**, **Password**, **Domain** (if applicable), and **Description** (optional) of the OpenManage Enterprise console.

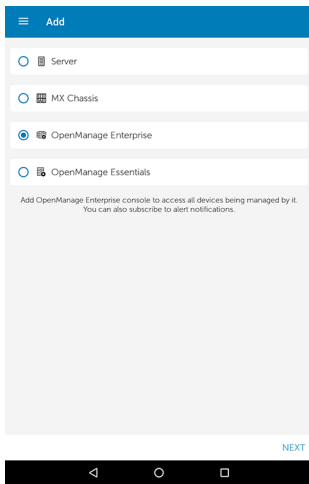 


Figure 15. Adding OpenManage Enterprise

- 6 To save the connection details, tap **Add OME**.
The OpenManage Enterprise SSL certificate is displayed.
- 7 Tap **Yes** to accept the certificate and save the OpenManage Enterprise console.
- 8 On the next screen, select the appropriate alert filter for push notifications .

NOTE: To set a custom alert filter, see *OpenManage Enterprise User's Guide*.

NOTE: If you do not want to receive push notifications, you can disable it using the *enable push notifications* toggle box.

NOTE: In certain situations, there may be a delay in receiving push notifications in OpenManage Mobile. For more information about this, see [Troubleshooting OpenManage Mobile](#).

The newly added OpenManage Enterprise console dashboard is displayed.

Viewing OpenManage Enterprise dashboard

To view the OpenManage Enterprise dashboard:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Enterprise console.
The appropriate OpenManage Enterprise dashboard is displayed.

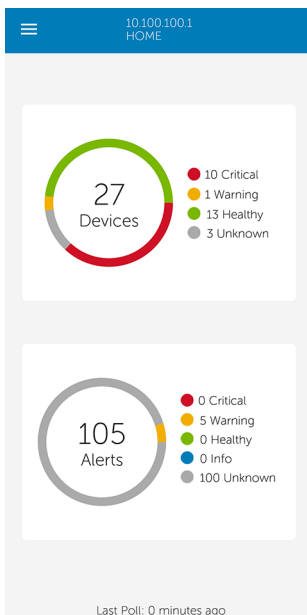 









Figure 16. OpenManage Enterprise dashboard

-  indicates the number of devices or alerts that are critical.
 -  indicates the number of devices or alerts that are with warning status.
 -  indicates the number of devices or alerts that are healthy.
 -  indicates the number of devices or alerts that are unknown.
 -  indicates the available information about the devices or alerts.
- 2 Tap **Devices** to view the devices managed by OpenManage Enterprise and tap **Alerts** to view the alerts.
-  **NOTE:** To share the information using an application available on your device, tap  and select the share option.

Refreshing OpenManage Mobile data for OpenManage Enterprise

To refresh the information displayed in OpenManage Mobile:

Perform one of the following:

- Touch and swipe down on any screen.
- On any screen, tap the overflow menu and then tap **Refresh**.

① **NOTE:** The overflow symbol may differ from device to device. For example, in some devices it is displayed as a  symbol, or at the lower left corner of the screen, or at the lower right corner of the screen.

Viewing devices in an OpenManage Enterprise console

To view the devices by health of an OpenManage Enterprise console:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Enterprise console.
- 2 In the OpenManage Enterprise dashboard, tap **Devices**.

The **All Devices** screen is displayed.

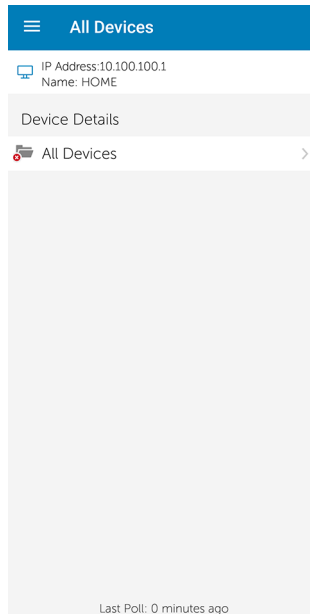 


Figure 17. All devices

- 3 Tap the appropriate device category (for example, **RAC**), and then tap to select the device you want to view.

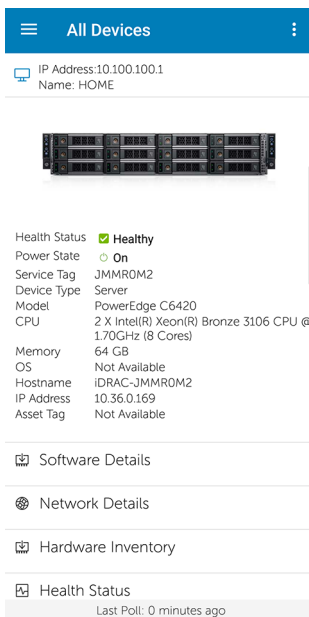 



Figure 18. Device details

The inventory information of the devices managed by OpenManage Enterprise is displayed.

- 4 Tap **Software Details** to view the software details of the device, tap **Hardware Log** to view the hardware log, tap **Alerts** to view the alerts, tap **Warranty** to view warranty information of the device, tap **Network Details** to view the network details, and tap **Health Status** to view the health status.
- 5 Tap  and then tap **Support** to access the Dell Quick Resource Locator website.

Viewing software details

To view the software details:

- On the **Device Details** screen, tap **Software details**.
The **Software Details** screen is displayed with the software information of an OpenManage Enterprise.

Viewing hardware log

To view the hardware log:

- On the **Device Details** screen, tap **Hardware Log**.
The **Hardware log** screen is displayed.

Viewing the warranty information

To view the warranty information:

- On the **Device Details** screen, tap **Warranty**.
The **Warranty Information** screen is displayed.

 **NOTE:** An internet connection is required to view the warranty information.

Accessing Dell Quick Resource Locator website

To access the Dell QRL website:

- Tap **i** on the **Device Details** screen and then tap **Support**.
The Dell Quick Resource Locator website is displayed in a new web browser.

i | **NOTE:** An internet connection is required to access the Dell Quick Resource Locator website.

Viewing alerts in OpenManage Enterprise

To view the alerts in OpenManage Enterprise:

- 1 On the OpenManage Mobile home screen, tap the OpenManage Enterprise console you want to view alerts for.
- 2 Tap **Alerts**.

i | **NOTE:** You can filter the alerts by using the drop-down menu available on the top of the Alerts page.

i | **NOTE:** You can perform action on multiple alerts, for more information see [Performing action on multiple alerts](#).

The alerts that are associated with the selected OpenManage Enterprise are displayed.

- 3 Tap the alert you want to view details for.

The **Alert Details** screen is displayed.

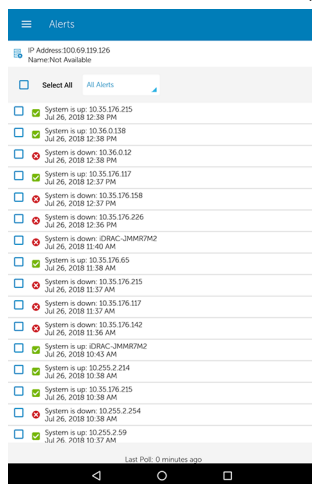 


Figure 19. Alerts

You can forward, acknowledge, or delete an alert.

Performing an action on multiple alerts

To perform an action on multiple alerts:

- 1 On the **OpenManage Enterprise Console** screen, tap **Alerts**.
The **Alerts** screen is displayed.
- 2 Select multiple alerts by selecting the check box on the left of each alert. Tap **i** and tap **Delete** to delete the alerts, tap **Acknowledge** to acknowledge the alerts, or tap **Share** to share the selected alerts.

- 3 In the next window, tap **Task Manager** to view the status of the action.

NOTE: You can also cancel the performed action in the task manager.

Acknowledging an alert

To acknowledge an alert:

- 1 On the **Alert Details** screen, tap **⋮** and then tap **Acknowledge** to acknowledge an alert.
- 2 Tap **Yes** to confirm.

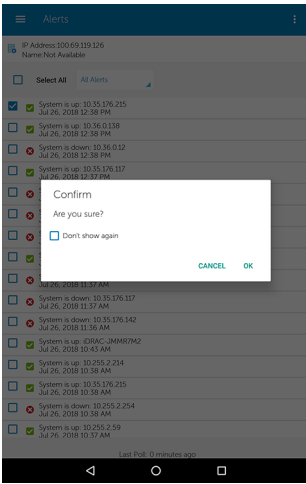 


Figure 20. Confirm acknowledgment

The alert is acknowledged, and the **Alert Details** screen is automatically refreshed.

NOTE: To share the information using an application available on your device, tap **⋮** and then tap **Share**.

Sharing an alert

To share an alert:

- 1 On the **Alert Details** screen, tap **⋮** and then tap **Share** to share an alert.
- 2 Select the option you want to use to share the alert details.

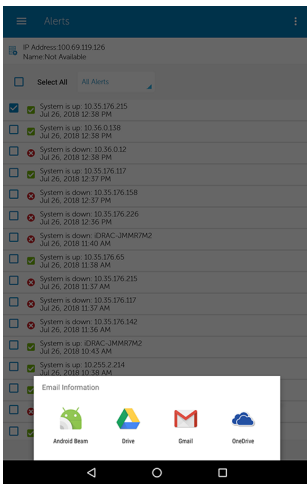 


Figure 21. Alert sharing options

Deleting an alert

To delete an alert:

- 1 On the **Alert Details** screen, tap  and then tap **Delete** to delete an alert.

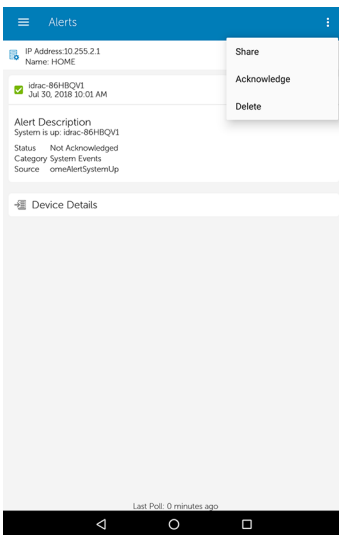 


Figure 22. Deleting alerts

- 2 In the **Delete Confirmation** box, tap **Yes** to confirm.

The alert is deleted, and you are returned to the **Alerts** list screen.

Editing connection details of an OpenManage Enterprise console


To edit the connection details of the OpenManage Enterprise console:

- 1 On the OpenManage Mobile home screen, perform the following steps:
 - a Press and hold the OpenManage Enterprise console entry you want to edit.
 - b Tap **Edit Connection**.The **Edit Connection** screen is displayed.
- 2 Edit the **Hostname or IP**, **Username**, **Password**, **Domain** (if applicable), and **Description** (optional) as required.
- 3 Tap **Next**.
On the next screen, edit the alert filter subscription if needed.
- 4 Tap **OK** to save the connection.

The OpenManage Enterprise dashboard is displayed.

Deleting an OpenManage Enterprise console

To delete an OpenManage Enterprise console from OpenManage Mobile:

- 1 On the OpenManage Mobile home screen, perform one of the following steps:
 - Select the OpenManage Enterprise console that you want to remove, and tap .

NOTE: If you want to remove multiple OpenManage Enterprise consoles, select each console that you want to remove.

 - Press and hold the OpenManage Enterprise console.
 - 1 Tap **Edit Connection**.
 - 2 Tap **Delete OME**.


NOTE: If OpenManage Mobile is unable to contact the OpenManage Enterprise server when the console is deleted, the OpenManage Enterprise server retains the device in its mobile subscribers list until it is manually deleted. For more information about deleting a mobile subscriber, see *OpenManage Enterprise User's Guide*.
- 2 The **Delete Confirmation** screen is displayed.
- 3 Tap **Yes**.

The OpenManage Enterprise console is deleted from OpenManage Mobile.

Deleting multiple hosts

To delete multiple hosts (OpenManage Enterprise consoles and iDRACs) from OpenManage Mobile:

- 1 On the OpenManage Mobile home screen, select the hosts that you want to remove.

NOTE: If OpenManage Mobile is unable to contact the OpenManage Enterprise server when the host is deleted, the OpenManage Enterprise server retains the device in its mobile subscribers list until it is manually deleted. For more information about deleting a mobile subscriber, see *OpenManage Enterprise User's Guide*.
- 2 Tap .
- 3 Tap **Yes**.

The hosts are deleted from OpenManage Mobile.

Performing power control operations


You can perform power control operations on a server managed by OpenManage Enterprise or an iDRAC.

- [Performing power control operations on a server managed by OpenManage Enterprise](#)
- [Performing Power Control Operations on an iDRAC](#)

Performing power control operations on a server managed by OpenManage Enterprise

For devices managed by OpenManage Enterprise, power control operations are supported only on iDRACs and servers.

To perform a power control operation:

- 1 On the OpenManage Mobile home screen, tap the appropriate OpenManage Enterprise console.
- 2 In the OpenManageEnterprise dashboard, tap **Devices**.
The **All Devices** screen is displayed.
- 3 Tap the appropriate device category (for example, **RAC**), and then tap to select the device you want to perform power control operation on.
The **Device Details** screen is displayed.
- 4 Tap  and then tap **Reboot**.
The supported power control operations are displayed.

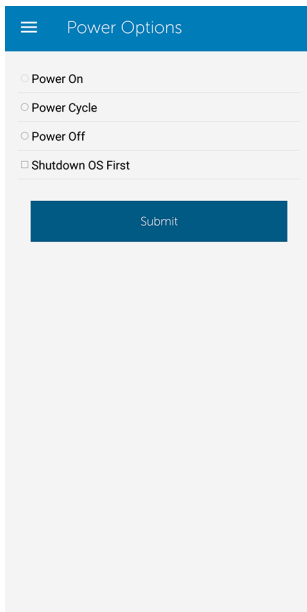 


Figure 23. Power control options

- 5 Tap **Submit**.
OpenManage Mobile performs the power control operation and then displays the result of the operation.

Managing iDRAC

This section provides information you require to add, edit, or delete an iDRAC in OpenManage Mobile.

Topics:

- Adding an iDRAC
- Viewing iDRAC dashboard
- Editing connection details of an iDRAC
- Deleting an iDRAC
- RACADM Commands
- Device inventory
- Editing the BIOS configuration
- Viewing iDRAC details in web browser
- Performing power control operations on an iDRAC
- Changing the configuration of an iDRAC
- Activating or deactivating the system ID LED
- AutoConfiguration using XML configuration file
- Template deploy
- OpenManage Mobile Diagnostics using Quick Sync 2

Adding an iDRAC

Prerequisites to add an iDRAC:


- Ensure that you have iDRAC 7 or later with Enterprise or Express edition license.
- Ensure that you have VPN or internal Wi-Fi access to the iDRAC network from your Android device.

You can add an iDRAC :

- Using WS-Man Protocol
- Using iDRAC Quick Sync Read
- Using IP range

Adding an iDRAC using WS-Man Protocol

To add an iDRAC using WS-Man Protocol:

- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile password and tap **Login**.
The OpenManage Mobile home screen is displayed.
- 3 On the OpenManage Mobile home screen, tap  on the top right corner.
The **Add** options are displayed.
- 4 Tap the appropriate option from the list.

- 5 Type the **Hostname or IP**, **Username**, **Password**, **Domain** (if applicable), and **Description** (optional) of the iDRAC.

Figure 24. Adding iDRAC

- 6 To save the connection details, tap **Add iDRAC**.
The iDRAC SSL certificate is displayed.
- 7 Tap **Yes** to accept the certificate and save the iDRAC.

The **iDRAC Details** screen is displayed.

Adding multiple iDRACs using the IP range


This feature allows you to add multiple iDRACs using iDRAC range.

NOTE: You can add multiple iDRACs only if the username and password is the same.

To add multiple iDRACs:

- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile password and tap **Login**.

OpenManage Mobile home screen is displayed.

- 3 Tap  on the top right corner.

The Add screen is displayed.

- 4 Tap **Server** and click **Next**.

The Add server screen is displayed.

- 5 Tap **Add via Network** and click **Next**.
- 6 You can add all the iDRACs in the range using a * for the last octet. For example, 192.168.0. or you can type the start and end range of the iDRACs in the last octet separated by a dash in the **IP/Hostname**. For example 192.168.0.50-100.
- 7 Type the **Username**, **Password**, and **Domain** (if applicable) of the iDRAC and tap **Add**.The process of adding multiple iDRACs is initiated. You can check the status of the process in the task manager.
- 8 Tap **Add iDRAC**.

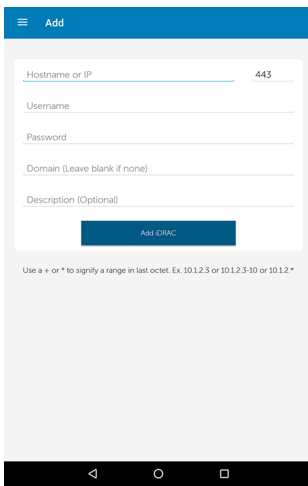 


Figure 25. Adding multiple iDRACs

The process of adding multiple iDRACs is initiated. You can check the status of the process in the task manager.

Adding an iDRAC using iDRAC Quick Sync Read

The iDRAC Quick Sync Read feature enables your mobile device to act as a proximity reader to read data from your server when the device is in contact with the iDRAC Quick Sync Bezel.

- ① **NOTE:** For the latest bug fixes, we recommend upgrading your iDRAC firmware. For more information about upgrading the iDRAC firmware see, *iDRAC User's Guide*.
- ① **NOTE:** This feature is applicable only for Dell's 13th generation of PowerEdge servers with the iDRAC Quick Sync Bezel.
- ① **NOTE:** Reading iDRAC information via Quick Sync is not password protected. Making configuration changes via iDRAC Quick Sync requires iDRAC credentials with appropriate permission.

To add an iDRAC using iDRAC Quick Sync Read:


- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile Password and tap **Login**.
The OpenManage Mobile homescreen is displayed.
- 3 Tap the  symbol.
The **Add** screen is displayed.
- 4 Select **iDRAC Quick Sync Read**.
- 5 Tap **Launch iDRAC Quick Sync**.



Figure 26. iDRAC Quick Sync Read

- 6 Turn on the iDRAC Quick Sync Bezel.
- 7 Place your mobile device in contact with the activation switch of the iDRAC Quick Sync Bezel on your server and hold your mobile for at least 3 seconds.

NOTE: The Near-Field Communication (NFC) chip in the mobile device should be in contact with the iDRAC Quick Sync activation switch. Refer to your mobile device's documentation to find the location of the NFC chip.

Your server will be added to the list of servers managed by OpenManage Mobile.


NOTE: The iDRAC Quick Sync Bezel remains activated for about 30 seconds. If you do not manage to add the iDRAC within the 30 seconds, reactivate the iDRAC Quick Sync Bezel and retry step 7.

Quick Sync 2

Quick Sync 2 uses the built-in wireless capabilities of Quick Sync 2 equipped PowerEdge servers to directly manage those servers. Quick Sync 2 uses encrypted Bluetooth Low Energy (BLE) and dedicated Wifi connections. Quick Sync 2 is activated on the server via the connection button.

An infrastructure network will use your Wifi base station or VPN connection to communicate with the iDRAC IP-based management network connected to the iDRAC's wired Ethernet port. The connection will use the WS-Man protocol.

Adding an iDRAC using Quick Sync 2

- 1 On the OpenManage Mobile home screen, tap  on the top right corner. The Add screen is displayed.

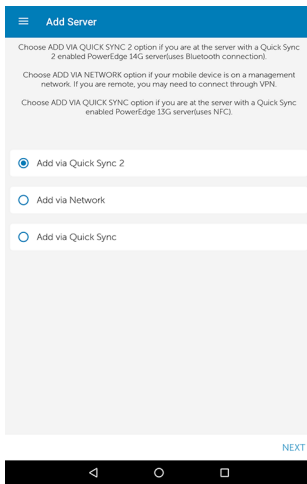 


Figure 27. Quick Sync 2

- 2 Tap **Server** and click **Next**.
The Add server screen is displayed.
- 3 Tap **Add via Quick Sync 2** and click **Next**.
A video on how to enable the bluetooth connection is displayed.
- 4 Click **Next**
The bluetooth permission pop up message is displayed.
- 5 Tap **Allow**.

NOTE: Go to **Settings** to enable the bluetooth.

The BLE Device Scan screen is displayed.

- 6 Select the appropriate server and click next.
The certificate acceptance screen is displayed.
- 7 Tap **Yes** to proceed.
The iDRAC authentication screen is displayed.

NOTE: To display the iDRAC authentication pop up, ensure the **Read Authentication** option is enabled in the server.

- 8 You can authenticate the iDRAC in one of the following ways:

QR Scan:

- a On the credentials page, Tap **SCAN QR CODE**.
The camera access permission pop up message is displayed.
- b The credential is auto populated. Tap **Add Device**.
Position the camera to scan the QR.

NOTE: To enter the credentials manually or by using QR Scan, enable **Read authentication** on the server.

Manual credentials:

- a Tap **ENTER MANUALLY**.
- b Enter the credentials to add the iDRAC.
- c Tap **Add iDRAC**.

The appropriate iDRAC server is added to the homepage.

Viewing iDRAC dashboard

To view the iDRAC dashboard:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC console.
The iDRAC dashboard is displayed.

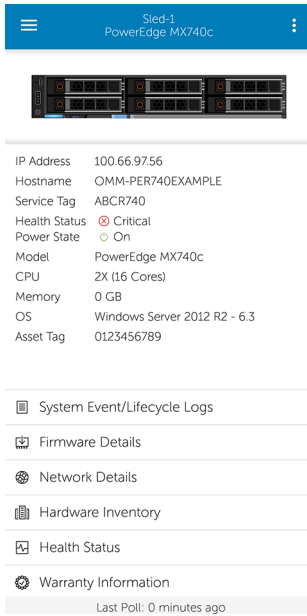 





Figure 28. iDRAC dashboard (phone view)

- 2 You can view the detail and status of the options below
 - **System Event/Lifecycle Logs**- View the hardware logs.
 - **Firmware Details**- View the firmware details.
 - **Network Details**- View the network details.
 - **Hardware Inventory**- View the Hardware Inventory. You can view the **Memory** and **CPU** details.
 - **Health Status**- View the health status.
 - **Warranty Information**- View the warranty information.
 - **Location Details** - View the Data Center, Room, Aisle, Rack, and Slot.
 - Tap  and then tap **Support**- Access the Dell Quick Resource Locator website.

 **NOTE:** To share the information using an application available on your device, tap  and select the share option.

Viewing hardware logs of an iDRAC

To view the hardware logs of an iDRAC:

- 1 In the **iDRAC Details** screen, tap **System Event/Lifecycle Logs**.
The logs screen is displayed.
 -  **NOTE:** Tap  and then tap **Share Logs** to share the list of **System Event/Lifecycle Logs**.
- 2 Select **System Event Log** or **Lifecycle Log** from the list that is displayed.
- 3 Tap the appropriate log entry for additional details.

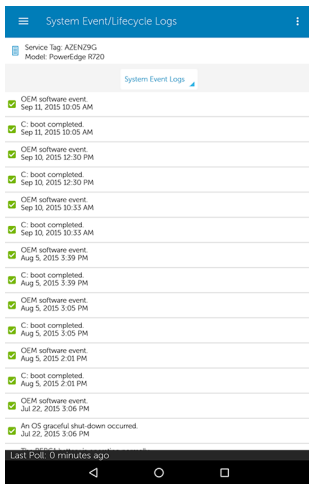 


Figure 29. Hardware logs

NOTE: Retrieving hardware logs may take a few minutes.

Viewing firmware details of an iDRAC

To view the firmware details of an iDRAC:

- In the **iDRAC Details** screen, tap **Firmware Details**.

The **Firmware Details** screen is displayed.

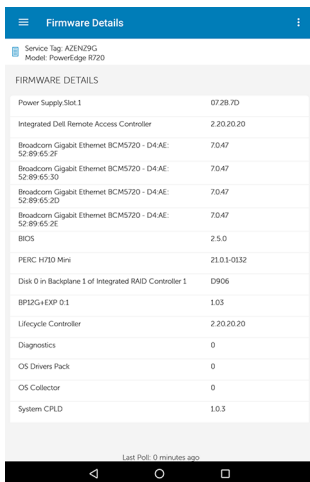 


Figure 30. Firmware details

Viewing network details of an iDRAC

To view the network details of an iDRAC:

In the **iDRAC Details** screen, tap **Network Details**.

The **Network Details** screen is displayed.

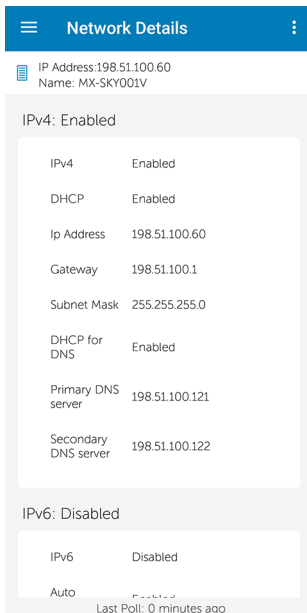 


Figure 31. Network details

Viewing health status of an iDRAC

To view the health status of an iDRAC:

- In the **iDRAC Details** screen, tap **Health Status**.

The **Health Status** screen is displayed with the **Temperature** and **Power** values.

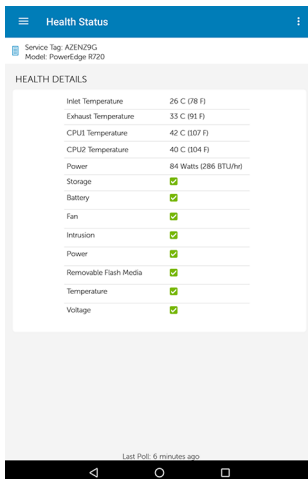 


Figure 32. Health status

Viewing the warranty information of an iDRAC

To view the warranty information of an iDRAC:

- In the **iDRAC Details** screen, tap **Warranty Information**.

The warranty information of the server is displayed.

① | **NOTE: An internet connection is required to view the warranty information.**

Accessing Dell Quick Resource Locator website through iDRAC

To access the Dell Quick Resource Locator website:


- In the **iDRAC Details** screen, tap  and then tap **Support**.

The Dell Quick Resource Locator website is displayed in a new web browser.

① | **NOTE: An internet connection is required to access the Dell Quick Resource Locator website.**


Generating and Sharing the iDRAC Report

To generate the iDRAC report:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC console.
The iDRAC dashboard is displayed.
- 2 Tap  and tap **Report**.
The **Report** page is displayed.
- 3 If required, clear the check boxes of the iDRAC pages you do not want to include in the report.
- 4 Tap **Generate Report**.
- 5 Tap **Share Report** to share the generated report using an email application.

Sharing iDRAC Details


To share the iDRAC details:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC console.
The iDRAC dashboard is displayed.
- 2 Navigate to the details page you want to share. For example, tap **Hardware Logs**, **Firmware Details**, **Network Details**, or **Health Status**.
- 3 Tap  and then tap **Share** to share the details using an email application.

Viewing the remote desktop

To view the remote desktop, your mobile device must have bVNC Viewer installed.

To view the remote desktop:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC console.
The iDRAC dashboard is displayed.
- 2 Tap  and then tap **Launch Virtual Console**.
The **Launch Remote Desktop** screen is displayed.

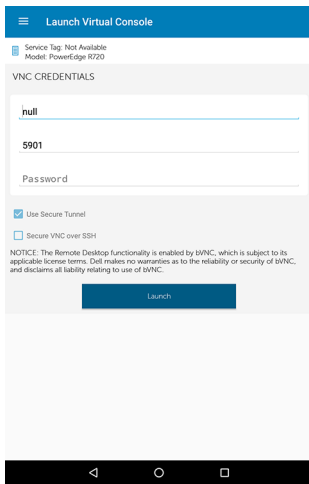 


Figure 33. Launch remote desktop

- 3 Type the **Remote Desktop Password**, and then tap **Launch**. This is the VNC password that is set in iDRAC settings. For more information on the VNC password, see iDRAC user's guide.
bVNC Viewer starts and the remote desktop is displayed.

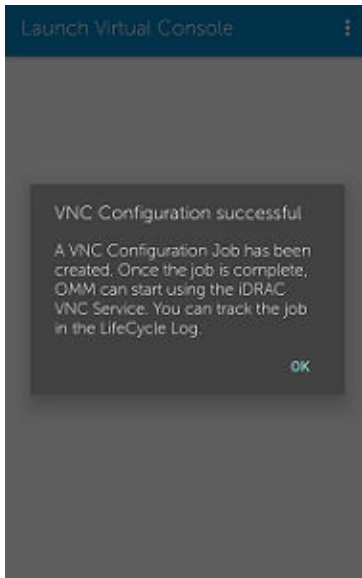 


Figure 34. VNC configuration confirmation

- NOTE:** Check the **Use Secure Tunnel** check box when the encryption is set to 128-bit or more in iDRAC.
- NOTE:** If the iDRAC does not support remote desktop or if there is no remote desktop password set, bVNC displays an error message that it cannot connect to the remote desktop.

Editing connection details of an iDRAC

To edit the connection details of an iDRAC:

- 1 On the OpenManage Mobile home screen, perform the following steps:
 - Press and hold the iDRAC server on the OpenManage Mobile home screen.

Tap **Edit Connection**.

The **Edit Connection** screen is displayed.


- 2 Edit the **Hostname**, **Username**, **Password**, and **Domain** (if applicable).
- 3 Tap **Save** to save the connection details.
- 4 Tap **OK**.

The **iDRAC Details** screen is displayed.

Deleting an iDRAC

To delete an iDRAC from OpenManage Mobile:

- 1 On the OpenManage Mobile home screen, perform one of the following steps:

- Select the device you want to remove, and tap .

 **NOTE:** If you want to remove multiple iDRACs, select each iDRAC that you want to remove.

- Press and hold the iDRAC on the OpenManage Mobile home screen.

- 1 Tap **Edit Connection**.

- 2 Tap **Delete iDRAC**.

- 2 The **Delete Confirmation** message is displayed.

- 3 Tap **Yes**.

The iDRAC is deleted from OpenManage Mobile.

RACADM Commands

RACADM Commands

 **NOTE:** Only users with iDRAC configure privileges are allowed to modify the settings.

RACADM Commands allows you to run a set of predefined commands. The generic GET and SET sub-commands are used to configure and retrieve the objects. The available **RACADM commands** are as mentioned below:

- **System Information**
- **Hardware Inventory**
- **License Information**
- **Software Inventory**
- **Job Information**
- **Custom Command**

Performing RACADM Command operations

Performing RACADM Command operations

Ensure the device is connected to the appropriate server and network.

 **NOTE:** The RACADM commands can also be performed via WSMAN or Quick Sync over WIFI.

To perform **RACADM command** operations:

- 1 From the Home screen, tap the appropriate server.

- 2 Tap .

- 3 Tap **Run RACADM command** .
The **RACADM commands** screen is displayed.
- 4 Tap one of the following commands mentioned below:
 - **System Information**
 - **Hardware Inventory**
 - **License Information**
 - **Software Inventory**
 - **Job Information**
 - **Custom Command** - You can manually type a RACADM command to perform any server operation.

The available report is displayed.

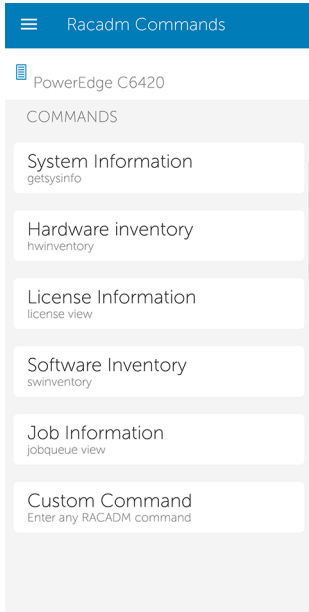 


Figure 35. RACADM Commands

Device inventory

You can view the following device inventory information of a server (iDRAC connection), an OpenManage Essentials, or an OpenManage Enterprise— managed device.

Table 1. Device inventory


Information	Description
Power State	Displays the power status of the device
IP Address	If this server was added individually, this value is the IP address used to connect to the iDRAC. If this device is discovered through OpenManage Essentials or OpenManage Enterprise, there could be multiple IP addresses associated with the device
Service Tag	The service tag associated with the device
Device Type	Displays the type of device
Device Model	The device model
CPUs	The processor model, number of processors, and number of cores

Information	Description
Memory	Total system memory in the server
Operating System	The name of the operating system. This may require OpenManage Server Administrator (OMSA) to be installed on the system
Host name	The host name of the server

 **NOTE: Not all details are available for all managed devices.**

Editing the BIOS configuration

To view the BIOS information


- 1 On the OpenManage home screen, tap the appropriate device.
- 2 Tap .
- 3 Select **'Configure'** and tap **iDRAC Configuration**.
The Configure Server page is displayed.
- 4 Tap **'Manual Configuration'**.
- 5 Tap **BIOS Configuration** to view the BIOS tasks.

You can edit or view the BIOS configurations.

 **NOTE: A reboot is required to apply the BIOS changes. The changes will reflect upon successful reboot.**


Viewing iDRAC details in web browser

To view the iDRAC details in the web browser

- 1 On the iDRAC details screen, tap the  symbol.
- 2 Tap **Launch iDRAC GUI**.
- 3 The iDRAC details will be displayed in the device browser.

Performing power control operations on an iDRAC

To perform power control operations on an iDRAC:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC server.
- 2 Tap .
- 3 Tap **Power Options**.
The supported power control operations are displayed.
- 4 Select the power control operation you want to perform, and tap **Submit**.

 **NOTE: Shutdown OS First option is supported only for those power control operations that support a normal shutdown of the operating system.**

 **NOTE: The Power Options screen displays the task credentials used to add the iDRAC. If you want to use a different user name and password for the power control operations, edit the username and password fields.**

OpenManage Mobile performs the requested power control operation and then displays the result of the operation.

Changing the configuration of an iDRAC

This feature is applicable only for 13G servers with the iDRAC Quick Sync Bezel.

NOTE: Reading iDRAC information through Quick Sync is not password protected. Making configuration changes through iDRAC Quick Sync requires iDRAC credentials with appropriate permission.

To change the configuration of an iDRAC:

- 1 On the OpenManage Mobile home screen, tap the appropriate iDRAC to change the configuration.
- 2 Tap **⋮** and then tap **Configure**.

The **iDRAC Configuration** screen is displayed.

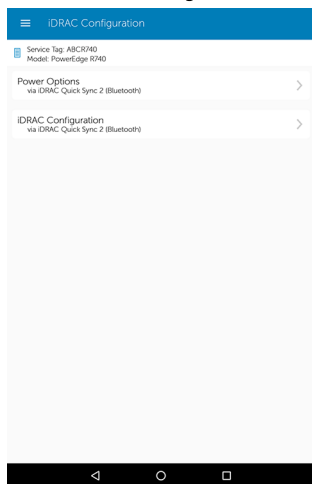 


Figure 36. iDRAC configuration

- 3 Tap **iDRAC Configuration** and then tap **Manual Configuration**.

The **Manual Configuration** screen is displayed.

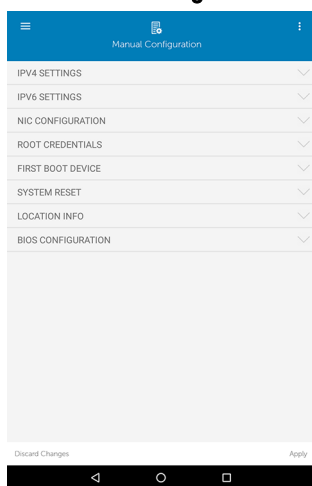 


Figure 37. iDRAC configuration

- 4 Tap **IPv4 Settings** to change the IPv4 settings, **IPv6 Settings** to change the IPv6 settings, **Root Credentials** to change the root credentials, **First Boot Device** to change the boot settings, tap **System Reset** to change the power options.
- 5 Make changes in the configuration and tap **Apply**.

- 6 Type **Username** and **Password** of the iDRAC in the **Task Credentials** section.
- 7 Tap **Sync Now** to sync.
- 8 Turn on the iDRAC Quick Sync Bezel.
- 9 Place your mobile device in contact with the iDRAC Quick Sync Bezel activation switch on your server and hold your mobile for at least 3 seconds.

NOTE: Configuration changes may take up to a minute to apply.

Activating or deactivating the system ID LED

OpenManage Mobile allows you to identify a server by activating or deactivating the system ID LED.

To activate or deactivate the system ID LED:

- 1 Tap the iDRAC of the server you want to activate or deactivate the system ID LED.
- 2 Tap **LED**.
- 3 Tap **Blink LED**.
The **Select Blink LED Timeout or Turn Off** options are displayed.
- 4 Tap one of the following options to activate or deactivate the System ID LED:
 - **4 Minutes**
 - **Blink LED until turned off**
 - **Blink off**

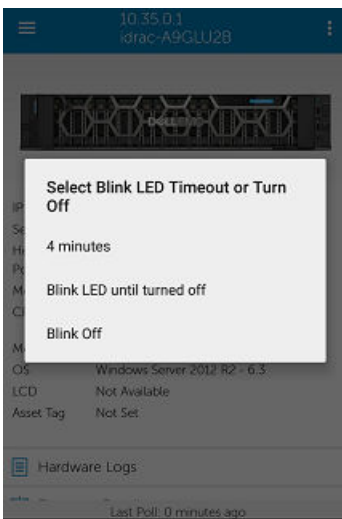 


Figure 38. Blink LED options

AutoConfiguration using XML configuration file

AutoConfiguration using XML configuration file

You can utilize the XML configuration file in OpenManage Mobile. The XML file can be accessed from the shared network folder. The XML files are configured uniquely using the DHCP sever. The available **DHCP Provisioning** options are:


- **Enable once**
- **Enable once after reset**
- **Enable always**

NOTE: This option is available only for servers with iDRAC Enterprise license.

iDRAC configuration using WS-MAN protocol

iDRAC configuration using WS-MAN portal

To configure the iDRAC configuration using WS-MAN portal:

- 1 From the Home screen, tap the appropriate server.
- 2 Tap .
- 3 Tap **Configure**.
- 4 Tap **iDRAC Configuration**.
- 5 Enable **Auto Config** using the toggle switch.
The **Select DHCP Provisioning** dialog box is displayed.
- 6 Tap one of the following options to configure the **DHCP Provisioning**:
 - **Enable Once**
 - **Enable Once After Reset**
 - **Disabled**
- 7 Tap **Next**.
The configuration is saved and the status can be viewed in the **Task Manager**.

Template deploy

You can perform the initial server deployment using OpenManage Mobile. You can edit and save the server configurations mentioned below:

- IPV4 Settings
- IPV6 Settings
- NIC Configuration
- BIOS Configuration
- Root Configuration
- Location Information
- First Boot device

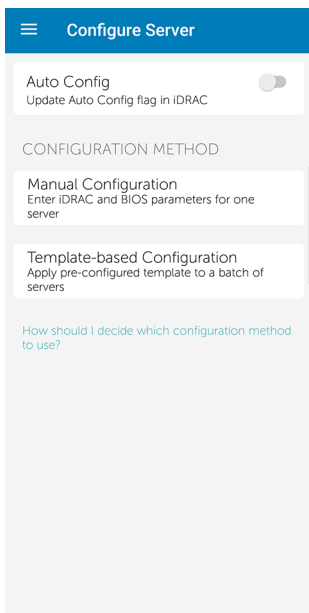 



Figure 39. Configure Server

Creating a Deployment template

NOTE: Template deploy is available only for 14G servers.

To create a deployment template in OpenManage Mobile

- 1 Tap  from the OMM home page.
- 2 Tap **Templates**.
- 3 Tap **Add**.

The **Template Configuration** screen is displayed.



Figure 40. Template Configuration



- 4 Enter the appropriate configuration and Tap **Save**.

The created template is displayed on the **Manage Templates** screen.

Applying a Deployment template

- Ensure Quick Sync 2 is enabled and the access is set to read-write.
- You need to be within the BLE signal range to complete the deployment.

To deploy a template in OpenManage Mobile

- 1 Tap  from the OpenManage Mobile home page.
- 2 Tap **Configure**.
- 3 Tap **Select Servers**.
The available 14G servers are displayed.
- 4 Select the appropriate servers.
- 5 Tap **Next**
The **Configure Server** screen is displayed. Auto Config and Configuration Method.
- 6 In **Configuration Method**, select **Template-based Configuration**.
- 7 Tap the appropriate *Template*
A message *Read in progress* is displayed. The **Device Detail** page is displayed. You can view the inventory of the server.
 **NOTE: Ensure to fill the mandatory configuration fields.**
- 8 Tap **Deploy** to deploy the new template.





OpenManage Mobile Diagnostics using Quick Sync 2

OpenManage Mobile allows technicians to perform additional at-the-box troubleshooting using Quick Sync 2. OpenManage Mobile allows the technician to download Tech Support Reports (TSR), Screen shots, and, Crash Screen Videos to diagnose and identify the point of failure. These actions are enabled in the OpenManage servers and accessed remotely using WS-MAN.

Diagnostics using Quick Sync 2

Ensure the device is connected to the server.

To run diagnostics on a server using Quick Sync 2:

- 1 From the Home screen, Tap the appropriate server.
- 2 Tap .
- 3 Tap **Diagnostics**.
 **NOTE: Accept all the storage permissions.**
- 4 To view the real-time status, tap one of the **Visual Diagnostics** option
 - OS Screen Preview
 - Last Crash Screen
 - Last Boot Capture
 - Last Crash Video
- 5 To generate the **SupportAssist Report**, tap **Download**.
 **NOTE: If the file takes a long time to download due to the size of the download, you can cancel the message and view the progress in the Task Manager.**
 **NOTE: The reports can also be performed via WSMAN or Quick Sync over WiFi.**

6 You can email the downloaded attachment to Dell EMC support for more assistance.

Managing an MX7000 chassis

This section provides information you require to add, edit, or delete an MX7000 chassis in OpenManage Mobile.

A chassis is a combination of sleds, storage enclosures, fan slots and power units. A chassis allows you to view the details in a chassis enclosure. You can view a storage enclosure you can blink and view the enclosure detail and basic sled configuration

Topics:

- [Adding an MX7000 Chassis](#)
- [Viewing an MX7000 Chassis dashboard](#)
- [Editing connection details of an MX7000 chassis](#)
- [Deleting an MX7000 chassis](#)
- [Viewing additional MX7000 chassis options](#)
- [Configuring an MX7000 chassis](#)
- [Managing IOMs](#)


Adding an MX7000 Chassis

Prerequisites to add an MX7000 chassis:

- Ensure that the chassis has a quick sync module installed.

 **NOTE: You cannot add a chassis via cellular network.**

To add an MX7000 chassis:

- 1 Start OpenManage Mobile.
- 2 If applicable, type the OpenManage Mobile password and tap **Login**.
The OpenManage Mobile home screen is displayed.
- 3 On the OpenManage Mobile home screen, tap  on the top right corner.
The **Add** options are displayed.
- 4 Tap the appropriate option from the list.

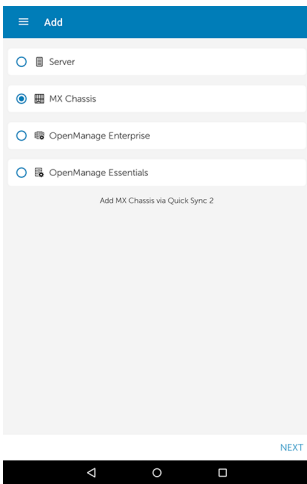 


Figure 41. Adding an MX7000 Chassis

NOTE: You will be prompted to allow access to the location and camera when you start OpenManage Mobile for the first time after an installation or upgrade.

- 5 Tap the appropriate chassis.
- 6 You can authenticate the chassis in one of the following ways:

QR Scan:

- a On the credentials page, Tap **SCAN**.
The camera access permission pop up message is displayed.
- b The credential is auto populated. Tap **Add Device**.
Position the camera to scan the QR code displayed on the LCD panel of the chassis.

NOTE: To enter the credentials manually or by using QR scan, ensure that the Read authentication is Enabled on the server.

Manual credentials:

- a Enter the credentials to add the chassis.
- b Type the credentials.

NOTE: The connection status of the chassis is displayed on the bottom banner and on the chassis LCD display.

The newly added Chassis is displayed on the home screen.

Viewing an MX7000 Chassis dashboard

To view the MX7000 Chassis dashboard:

- 1 On the OpenManage Mobile home screen, tap the appropriate Chassis console.
The Chassis dashboard is displayed.

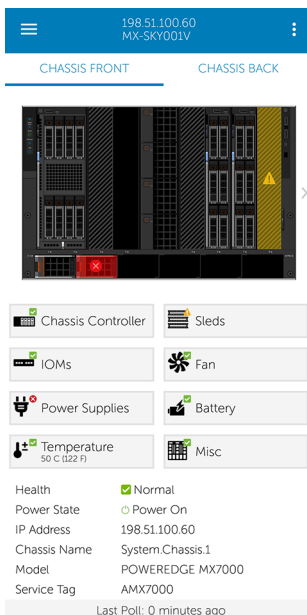 


Figure 42. Chassis dashboard (phone view)

- 2 You can view the detail and status of the options mentioned below:
 - **Chassis Controller**- View the MSM details.
 - **Sleds**- View details of the compute and storage sleds in the chassis.
 - **IOMs**- View details of the Network and Storage IOMs in the chassis.
 - **Fans**- View the health of the fans on the front and rear of the chassis.
 - **Power Supplies**- Number of active and unused Power Supply Units.
 - **Battery**- View the chassis CMOS battery information.
 - **Temperature**- View the temperature in the chassis.
 - **Misc** - View miscellaneous logs.

NOTE: To share the information using an application available on your device, tap  and select the share option.

Editing connection details of an MX7000 chassis


To edit the connection details of an MX7000 chassis:

- 1 On the OpenManage Mobile home screen, perform the following steps:
 - a Press and hold the chassis that you want to edit.
 - b Tap **Edit Connection**.
 The **Edit Connection** screen is displayed.
- 2 Edit the **Username, Password, Domain** (if applicable) as required.
- 3 Tap **Save** .
- 4 Tap **Ok** to save the connection.
- 5 To view the new changes, you need to manually reconnect the chassis.
 - a On the OpenManage home screen, tap the chassis and swipe down to refresh.
The chassis is reconnected.

Deleting an MX7000 chassis

To delete an MX7000 chassis from OpenManage Mobile:

1 On the OpenManage Mobile home screen, perform one of the following steps:

- Select the device you want to remove, and tap .


 **NOTE:** If you want to remove multiple chassis, select each chassis that you want to remove.

- Press and hold the chassis on the OpenManage Mobile home screen.
 - 1 Tap **Edit Connection**.
 - 2 Tap **Delete chassis**.
- 2 The **Delete Confirmation** message is displayed.
- 3 Tap **Yes**.

The chassis is deleted from OpenManage Mobile.

Viewing additional MX7000 chassis options


To view the additional MX7000 chassis options:

- 1 Tap .
- The options menu is displayed.
- 2 You can view the details of the options mentioned below:
- **Configure**- To configure the **Power Options** and **Chassis Configuration** via Quick Sync 2 (Bluetooth).
 - **Report**- To generate a comprehensive report about the **System Overview, Health Status, Location, Network Details, Sub Components**.
 - **Share**- To share the system details such as **Chassis Name, Firmware Version, Model, Service Tag, and more** via Email.
 - **Power Options**- To power cycle the chassis.
 - **Blink LED**- To activate or deactivate the system ID LED.
 - **Quick Deploy**- To perform the initial chassis deployment using OpenManage Mobile.
 - **Support** - The Dell.com/support website is displayed in a new web browser.

For more information on sleds, see [Managing iDRAC](#) .

Configuring an MX7000 chassis

To configure an MX7000 chassis:

- 1 Tap  and then tap **Configure**.
- 2 You can view the following power options:
- **Power on** - To power on the chassis.
 - **Power cycle** - To power cycle the chassis.
 - **Shutdown** - To shutdown the chassis.
 - **Shutdown OS first** - To do a graceful shutdown of the chassis.
- 3 You can also configure the following network options for the chassis:
- **IPv4 Settings** - To enable or disable IPv4 settings.
 - **IPv6 Settings** - To enable or disable IPv6 settings.
 - **Root Credentials** - To set the root credentials for the chassis

- **Location information** - To specify the location of the MX7000 chassis
- **Join Chassis group** - For multi chassis management, you can make a standalone chassis to join a group.

Managing IOMs

To manage IOMs:

- 1 Select **IOM** from the Inventory page of the chassis.
- 2 You can choose the following from the IOM details page:
 - **Network IOM**
 - **Storage IOM**
- 3 You will have the following options for all the network and storage IOMs from the toolbar:
 - **Share**- To share the inventory details of the IOM.
 - **Power options**- To perform power tasks on IOM. The following are the additional power options that you can perform:
 - **Power on** - To power on the IOM.
 - **Shutdown** - To shutdown the IOM.
 - **Power cycle** - To power cycle the IOM.
 - **Power reset** - To reset the IOM.
 - **Blink LED**
 - **Blink until turn off**
 - **Blink off**
- 4 For IOMs, that support configuration and management the following options are available:
 - **IPv4 Settings** - To enable or disable IPv4 settings.
 - **IPv6 Settings** - To enable or disable IPv6 settings.
 - **Root Credentials** - To set the root credentials password for the IOM.

Inventory collection



The OpenManage mobile Inventory collection feature allows you to scan QR codes to save the systems service tag and MAC address. This inventory can be exported as a XML file.

Topics:

- [To add a service tag](#)
- [To share the service tag information](#)


To add a service tag

Ensure that you have pulled out the tag with the QR code information available on the server.

- 1 Tap .
- 2 Tap **Password Inventory**.
- 3 Tap .
The camera permission pop up message is displayed.
- 4 Tap **Allow**.
Scan the QR code available on the lower side of the pull out tag.
The **SCAN SUCCESSFUL** message is displayed.
- 5 Tap **OK**.
The server information is displayed on the inventory screen.

To share the service tag information

Ensure the device is connected to the internet.

- 1 Tap .
- 2 Tap **Share**.
The **EXPORT INVENTORY** pop up message is displayed.
- 3 Enter an encryption password for a secure transfer and Tap **SUBMIT**.
You can share the XML file using the applications available in your device.

Push notifications

Push notifications enable OpenManage Mobile to notify you when a subscribed OpenManage Essentials console or OpenManage Enterprise console receives alerts from a monitored device. The notification appears in the status bar of your mobile device, similar to notifications that are displayed for messages, downloads, and so on. OpenManage Mobile allows you to configure the type of push notification you want to receive.


Topics:

- [Configuring alert notifications settings](#)
- [Viewing alerts using push notifications](#)

Configuring alert notifications settings

To configure alert notification settings:

- 1 On the OpenManage Mobile home screen, tap the overflow menu.

Overflow symbol differs from device to device. For example, it can be displayed as a  symbol, or at the lower-left or lower-right corner of the screen next to the Home button.

- 2 In the list that is displayed, tap **Settings**.

The **Settings** page is displayed.

- 3 Tap **Notification Settings**.

The **Notification Settings** screen is displayed.

- 4 Select one or both of the following:

- **Play Sound** to enable your mobile device to play a sound when an alert is received.
- **Vibrate** to enable your mobile device to vibrate when an alert is received.

Viewing alerts using push notifications

To view the alerts using push notifications:

- 1 Tap the alert notification to start OpenManage Mobile.

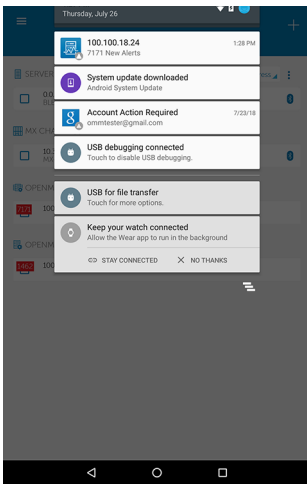 


Figure 43. Push notifications

- 2 If applicable, enter the OpenManage Mobile password and tap **Login**.
The dashboard of the OpenManage Essentials console or OpenManage Enterprise console displays the newly received alert.
- 3 Tap **New alerts** to view the alerts associated with the push notification.

Using the OpenManage Mobile Password

To ensure OpenManage Mobile is secure, you can set a password. You can enable password authentication using the **Enable Password** option in **Settings**.


- If a password is set and you do not use the device for more than 15 minutes, OpenManage Mobile is automatically locked, and then the login page of OpenManage Mobile is displayed.
- You can manage your OpenManage Mobile password by:
 - Changing the OpenManage Mobile password
 - Disabling the OpenManage Mobile password

Topics:

- [Changing the OpenManage Mobile password](#)
- [Disabling the OpenManage Mobile password](#)
- [Using fingerprint to log in](#)
- [Managing fingerprints](#)

Changing the OpenManage Mobile password

To change the current OpenManage Mobile password:

- 1 Perform one of the steps:
 - Start OpenManage Mobile, and tap **Change Password** in the **Enter Password** screen.
 - On the OpenManage Mobile home screen:
 - 1 Tap . In the menu that is displayed, tap **Settings**.
The **Settings** screen is displayed.
 - 2 Tap **Change Password**.
- 2 The **Change Password** screen is displayed.

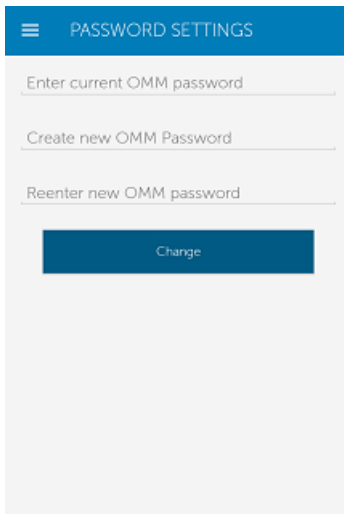 


Figure 44. Change password (phone view)

- 3 Type the current OpenManage Mobile password, new password, reconfirm the new password.
- 4 Tap **Change**.

Disabling the OpenManage Mobile password

To disable the OpenManage Mobile password:

- 1 On the OpenManage Mobile home screen, tap the overflow menu.
- 2 In the menu that is displayed, tap **Settings**.
The **Settings** screen is displayed.

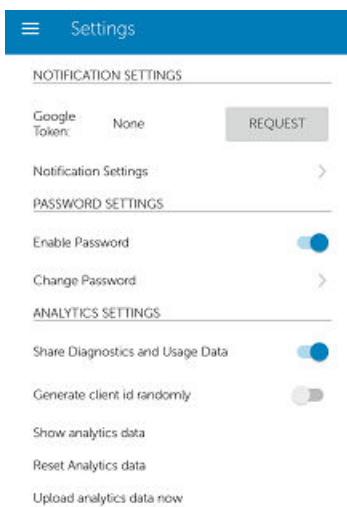 


Figure 45. Settings

- 3 Clear the **Enable Password** option.
A confirmation message is displayed.
- 4 Tap **Yes**.

Using fingerprint to log in

You can log in to OpenManage Mobile using fingerprint authentication. For instructions to enable fingerprint authentication, see [Adding a fingerprint](#).

NOTE: The fingerprint option is not available on devices without a fingerprint reader.

NOTE: OpenManage Mobile allows you 5 consecutive attempts after which the fingerprint authentication will be disabled for approximately 1 minute. If necessary, you can type the login password to access OpenManage Mobile.


You can enable fingerprint authenticated login through one of the following:

- On successful installation
- At first-time login
- From the Settings screen

NOTE: OpenManage Mobile provides fingerprint authentication access to all the fingerprint registered users.

Enabling or disabling fingerprint authentication from the Settings screen

NOTE: You can enable or disable fingerprint authentication from the setting menu.

- 1 Tap .
- 2 Tap **Settings**.
- 3 Use the toggle button to enable or disable fingerprint authentication.
The **Login to OMM** screen is displayed.
- 4 Tap **Yes**.
The **Fingerprint authentication is enabled** message is displayed.

Managing fingerprints

You should enroll your fingerprint in your device to enable the fingerprint authentication for OpenManage Mobile.

NOTE: You must set a pattern, PIN, or password to protect your fingerprints.

You can choose to:

- Add a fingerprint
- Rename a fingerprint
- Delete a fingerprint

Adding a fingerprint

To add a fingerprint on your device:

- 1 Tap **Settings**.
- 2 Tap **Lock screen and security > Fingerprints**.
- 3 Tap **Add fingerprint**.
- 4 Follow the on screen instructions to register the fingerprint and password.

Renaming a fingerprint

To rename a fingerprint on your device:

- 1 Tap **Settings**.
- 2 Tap **Lock screen and security > Fingerprints**.
- 3 Tap the fingerprint you want to rename.
- 4 Enter the new name.
- 5 Tap **Rename**.

Deleting a fingerprint

To delete a fingerprint from your device:

- 1 Tap **Settings**.
- 2 Tap **Lock screen and security > Fingerprints**.
- 3 Touch and hold the fingerprint that you want to delete.
- 4 Tap **Remove**.

Viewing OpenManage Mobile information


This section provides information about viewing the OpenManage Mobile log, Version, End User License Agreement (EULA), OMM Dell Tech Center, Manuals and Documentation, Contact Dell.

Topics:

- [Viewing the OpenManage Mobile application log](#)
- [Viewing the OpenManage Mobile application version](#)
- [Viewing the OpenManage Mobile TechCenter page](#)
- [Viewing the OpenManage Mobile manuals and documentation](#)
- [Viewing the OpenManage Mobile End User License Agreement and Open source licence](#)

Viewing the OpenManage Mobile application log

To view the OpenManage Mobile application log:


- 1 On the Home screen, tap .
- 2 Tap **App Log**.

The application log displays the following types of activities that are performed on the Open Manage Mobile:

- Adding an OpenManage Mobile console or iDRAC.
- Removing an OpenManage Essentials console, iDRAC, or an OpenManage Enterprise console.
- Acknowledging an alert from an OpenManage Essentials console or an OpenManage Enterprise console.
- Deleting an alert from an OpenManage Essentials console or an OpenManage Enterprise console.
- Performing a power control operation on OpenManage Essentials or OpenManage Enterprise — managed device or iDRAC and the result of the operation.

Viewing the OpenManage Mobile application version

To view the OpenManage Mobile application version:

- 1 On the Home screen, tap .
- 2 Tap **About**.

The OpenManage Mobile version is displayed on the screen.

Viewing the OpenManage Mobile TechCenter page


To view the OpenManage Mobile TechCenter page:

- 1 On the Home screen, tap .
- 2 Tap **About**.
The OpenManage Mobile product information is displayed.
- 3 Tap **OMM Dell Tech Center**.

The OpenManage Mobile DellTech Center page is displayed.


Viewing the OpenManage Mobile manuals and documentation

To view the OpenManage Mobile manuals and documentation:

- 1 On the Home screen, tap .
- 2 Tap **About**.
The OpenManage Mobile product information is displayed.
- 3 Tap **Manuals and Documentation**.
The OpenManage Mobile Manuals and Documentation is displayed.


Viewing the OpenManage Mobile End User License Agreement and Open source licence

To view the OpenManage Mobile EULA that was displayed during the installation:

- 1 On the Home screen, tap .
- 2 Tap **About**.
The OpenManage Mobile product information is displayed.
- 3 Tap **View EULA**.
The OpenManage Mobile EULA and Open source licence are displayed.

Sharing feedback

You can share your feedback to Dell about OpenManage Mobile.
To share your feedback:

- 1 Start OpenManage Mobile and tap .
- 2 Tap **Send Feedback**.
The default email application is displayed.
- 3 Enter your feedback and send the email.

You can also email your feedback to om_mobile_feedback@dell.com.

Troubleshooting OpenManage Mobile

Unable to view BLE enabled servers in Android 7.0 and 7.1.1

Sometimes, on devices running Android version 7.0 or later Quicksync 2 does not detect bluetooth low energy (BLE) enabled servers.

Workaround:

Restart the device and try again.

Unable to add OpenManage Essentials to OpenManage Mobile

If you are unable to add an OpenManage Essentials to OpenManage Mobile, you can try the following workarounds:

Workarounds:

- *Verify network configuration:* To add an OpenManage Essentials server to OpenManage Mobile, OpenManage Essentials must be available on the specified web port (default 2607) and not stopped by any firewall or other security mechanism. Make sure that VPN and/or wireless network is connected, enabled, and configured. Verify if you are able to connect to the OpenManage Essentials host from your device by using a web browser.
- *Verify credentials:* Make sure that the user name and password are correct to log in to the remote system. If you use domain credentials, make sure that the domain name is entered in the correct format supported by your directory server (such as companyname or companyname.com).
- *Verify OpenManage Essentials version:* OpenManage Mobile requires the latest OpenManage Essentials version 2.5 and above.

Unable to add iDRAC to OpenManage Mobile

If you are unable to add an iDRAC to OpenManage Mobile, you can try the following workarounds:

Workarounds:

- *Verify network configuration:* To add an iDRAC to OpenManage Mobile, iDRAC web server must be enabled. Ensure the port ID number in the iDRAC UI and the OpenManage Mobile device are the same. Ensure that VPN and/or wireless network is connected, enabled, and configured. Verify if you are able to connect to the iDRAC host from your device using a web browser.
- *Verify credentials:* Make sure that user name and password are correct to log in to the remote system. If you use domain credentials, make sure that the domain name is entered in the correct format supported by your directory server (such as companyname or companyname.com).
- *Verify iDRAC version:* OpenManage Mobile requires iDRAC version 7 or later with Enterprise or Express license, which is available in most 12th generation or later PowerEdge servers.

Unable to add iDRAC to OpenManage Mobile using iDRAC Quick Sync Read

If you are unable to add an iDRAC to OpenManage Mobile using iDRAC Quick Sync Read, you can try the following workarounds:

Workarounds:

- Update the iDRAC firmware. For more information about updating the iDRAC firmware see, *iDRAC User's Guide*.
- Update the OpenManage Mobile to the latest available version.
- The Near-Field Communication (NFC) chip in the mobile device should be in contact with the iDRAC Quick Sync activation switch. Refer to your mobile device's documentation to find the location of the NFC chip.
- Remove the protective casing from the mobile device.

Slow data retrieval

There is a delay of several minutes in retrieving data.


Workaround: Internet connection on your phone may be slow. Use OpenManage Mobile on WiFi or 3G or later network.

Operations such as viewing event logs through OpenManage Essentials require OpenManage Essentials to retrieve data from the managed nodes and sometimes there is a delay of several minutes in retrieving data.

Updated information not displayed in OpenManage Mobile

Information displayed in OpenManage Mobile does not match the information displayed in OpenManage Essentials or iDRAC.

Workaround: OpenManage Mobile uses a data cache to improve performance. Tap **Refresh** on the overflow menu of the screen to update displayed information.

Overflow symbol differs from device to device. For example, it can be displayed as a  symbol, or at the lower-left or lower-right corner of the screen next to the Home button.

Incomplete device information

- The operating system name or hostname is not displayed.

Workaround: To receive the hostname or operating system name, you might need to install OpenManage Server Administrator (OMSA) on the managed node.

- Incomplete information for devices managed by OpenManage Essentials.

Workaround: Make sure that data is correctly inventoried in OpenManage Essentials. For more information, see *OpenManage Essentials User's Guide*.

Unable to register for push notifications

Unable to register for push notifications.

Workaround: To register for push notifications from an OpenManage Essentials, perform the following steps:

- 1 Tap .
- 2 Tap **Settings**.
- 3 Tap **Notifications**.
- 4 In **OpenManage Mobile** ensure **Allow Notifications** is enabled.

Delay in receiving push notifications

- Either alert notification is not received, or there is a delay of several hours in receiving alerts.

Workarounds:

- *Verify OpenManage Essentials operation:* Make sure that OpenManage Essentials is receiving alerts, and it is successfully transmitting the alerts to the Dell Message Forwarding Service. For more information about transmitting alerts from OpenManage Essentials to the Dell Message Forwarding Service, see *OpenManage Essentials User's Guide*. During normal operation, it takes up to two minutes for the alerts to transmit from OpenManage Essentials to Dell Message Forwarding Service.
- *Understand provider limitations:* The Dell Message Forwarding Service uses provider notifications services including Google Cloud Messaging. Google imposes a notification limitation on a per device and per application basis. If your alert notifications are more than 100 per day, select a more specific filter to reduce the number of alerts transmitted to your mobile device.
- *Verify phone network connectivity:* Push notification requires an internet connection on your phone or a wireless connection (that may not be available in certain areas, such as remote locations and places with poor signal).

Carriers, internet service providers, and networking equipment may end the connection to Google servers if your mobile device is inactive. Notifications cannot be received until the connection is restored.

- A message is displayed in OpenManage Essentials if it is unable to communicate with a specific device as it is not registered.

Workaround: If OpenManage Mobile is backed up and restored on to your mobile device, the GCM registration token may need to be refreshed. Go to the **Settings** screen and tap **Refresh** to reinstall the GCM token. You must have an internet connection for this request to be successful.

NOTE: If you refresh the GCM token, edit the connections of all the OpenManage Essentials added and resubscribe to the alert filters.

Unable to log in to OpenManage Mobile

You cannot log in to OpenManage Mobile if:

- **Don't keep Activities** option is selected in **Settings > Developer options** screen.

Workaround: Make sure that **Don't keep Activities** option is not selected in **Settings > Developer options** screen.

- You forget your OpenManage Mobile password.

Workarounds:

- To retrieve your OpenManage Mobile password, tap **Forgot Password**. Your password hint is displayed.
- If you are unable to retrieve your OpenManage Mobile password using the password hint displayed, delete the OpenManage Mobile data, and then create a new password. To delete the OpenManage Mobile data, go to **Settings > Apps > OMM**, and then tap **Clear data**.

NOTE: If application data is deleted or application is reinstalled, you need to add the OpenManage Essentials and iDRAC instances again to OpenManage Mobile.

Unable to retrieve iDRAC data

OpenManage Mobile displays a connection not successful message if you refresh an iDRAC details screen multiple times to retrieve data.

Workaround: Refresh **iDRAC Details** screen after one minute.

If incorrect credentials are entered while adding an iDRAC or while performing power operations on an iDRAC, the iDRAC might disable all incoming requests and appear disabled for some time. For more information about this behavior, see *iDRAC User's Guide*. iDRAC will be enabled after some time. Wait till the iDRAC is enabled, and then retry the operation with correct credentials.

VNC connection failed!

Error message "VNC connection failed!" is displayed when you attempt to launch RDP session for an iDRAC if VNC RDP session is already running or if another active bVNC session is running on a different mobile device for the same iDRAC because iDRAC VNC only supports one connection at a time. You cannot connect to the same iDRAC using any instance of a VNC client, whether from the same mobile device or a different device.

Workaround: Reset the iDRAC to establish the connection.

Known issues

- OpenManage Mobile fails to connect using Quick Sync 2 wirelessly, if the device wifi frequency is set to 5.0 GHz. iDRAC supports only 2.4 GHz frequency band for direct wifi.
- OpenManage Mobile does not provide the appropriate output logs for the following RACADM commands:
 - a **storage get controllers -o**
 - b **storage get enclosures -o**
 - c **raid get controller**
 - d **raid get pdisks -o**
 - e **lclog**

A message **Command Successful** is displayed, which is not the expected output.

- To receive alert notifications in OpenManage Mobile on Android, you must have a Google account registered on the device.
- If you are not connected to a network and tap the network button for a server added using quick sync, you will be prompted to check the certificate repeatedly.
- If you try to connect to a network that was
- **Unsupported device:**
 - Sony Xperia Tablet Z (SGP321 TABLET Z)
- **Issue:** User is prompted to enter the wireless password for saved networks.

Workaround: To connect to the saved network, you can try any one of the following steps:

 - Close and restart the settings application. Try to connect to the wireless network.
 - Restart the wifi on your device.
 - Cancel the password prompt and retry the connection till it gets connected.
- **Issue:** Unable to power on a server if the KG key value in the RAC GUI page is set to a non-default value.

For iDRAC shown in OpenManage Essentials and OpenManage Enterprise, OpenManage Mobile will not perform the operation with non-default values.
- If the log in page appears again after you exit OpenManage Mobile, use home button to minimize the application.
- If you have more than 100 devices in the **All Devices** group, the devices are sorted by health only on the first screen. From the next screen, you can view the devices but they are not sorted by health.
- If the SSL encryption is changed, OpenManage Mobile will prompt you to set the VNC password.
- **Issue:** The pop up message *Quick Sync lost* appears while performing manual configuration.


This is due to an android limitation. You will see this message when the bluetooth connection is dropped. It will connect automatically and this does not interrupt the configuration process.
- **Issue:** When you delete a server added via quick sync 2 and try to scan again for the same server, it does not appear on the scan page.

Workaround: Close the OpenManage Mobile application and relaunch it to view the deleted sever on the scan page.
- You will be prompted to check the certificate everytime, if you are connecting to a secured network.

- OpenManage Mobile displays only 100 LC log entries under WSMAN added devices and 10 LC log entries under BLE added devices. This is a known issue.
- OpenManage Mobile offline data cache will be lost if the phone is rebooted or if OpenManage Mobile is inactive for long periods.
- While powering down the server, ensure Titan quick sync is active. If Titan quick sync is inactive all Titan quick sync features will be disabled. To enable titan quick sync 2 again, you must press the quick sync button on the server.
- Upgrade install for OpenManage Mobile is supported for OpenManage Mobile version 1.4 and 1.5 only. If you have an earlier version of Openmanage Mobile installed on your device you need to uninstall the older version and install the latest application.
- OpenManage Mobile offline cache can be lost if your mobile device has limited memory.
- OpenManage Mobile displays only the top 100 log entries from an iDRAC.
- OpenManage Mobile is not supported on 11th generation or earlier generations of iDRAC.
- Unable to receive push notifications if OpenManage Essentials is re- installed by retaining the same database as an earlier OpenManage Essentials installation.
- Unable to acknowledge or delete an alert received by a user who is a member of the OMEssentialsPowerUsers group.
- Last successful remote desktop session is seen when multiple VNC sessions are running at the same time because bVNC is an open source component and its behavior is outside the scope and control of OpenManage Mobile. OpenManage Mobile has limited control over launch interactions and subsequent activity.

Uninstalling OpenManage Mobile

To uninstall OpenManage Mobile:

- 1 Tap .
- 2 Tap **Settings**.
- 3 Tap **General**.
- 4 In the **Storage and iCloud Usage**, tap **Manage Storage**.
- 5 Tap **OMM** application.
- 6 Tap **Delete**.
Tap **Yes** to complete the uninstallation.
- 7 At the **Do you want to uninstall this app?** prompt, tap **OK**.

Related documents and resources

Other documents you may need

Besides this you can find the following documents on the Dell EMC OpenManage Mobile Support website at delltechcenter.com/omm

- Dell EMC OpenManage Essentials version 2.5 User's Guide.
- Integrated Dell Remote Access Controller 9 User's Guide.
- Dell EMC OpenManage Enterprise Version 3.0 User's Guide.
- Dell EMC PowerEdge MX7000 Enclosure Installation and Service Manual.

Topics:

- [Contacting Dell](#)
- [Accessing documents from the Dell EMC support site](#)

Contacting Dell

NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Go to **Dell.com/support**.
- 2 Select your support category.
- 3 Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
- 4 Select the appropriate service or support link based on your need.

Accessing documents from the Dell EMC support site

You can access the required documents using the following links:

- For Dell EMC Enterprise Systems Management documents — www.dell.com/SoftwareSecurityManuals
- For Dell EMC OpenManage documents — www.dell.com/OpenManageManuals
- For Dell EMC Remote Enterprise Systems Management documents — www.dell.com/esmanuals
- For iDRAC and Dell EMC Lifecycle Controller documents — www.dell.com/idracmanuals
- For Dell EMC OpenManage Connections Enterprise Systems Management documents — www.dell.com/OMConnectionsEnterpriseSystemsManagement
- For Dell EMC Serviceability Tools documents — www.dell.com/ServiceabilityTools
- a Go to www.dell.com/Support/Home.
- b Click **Choose from all products**.
- c From **All products** section, click **Software & Security**, and then click the required link from the following:
 - **Enterprise Systems Management**

- **Remote Enterprise Systems Management**
- **Serviceability Tools**
- **Dell Client Command Suite**
- **Connections Client Systems Management**

d To view a document, click the required product version.

• Using search engines:

- Type the name and version of the document in the search box.