

# Dell OptiPlex 3060 Small Form Factor

## Setup and specifications guide



## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.


 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

<b>Chapter 1: Set up your computer</b> .....	<b>5</b>
<b>Chapter 2: Chassis</b> .....	<b>8</b>
Front view.....	8
Back view.....	9
<b>Chapter 3: System specifications</b> .....	<b>10</b>
Processor.....	10
Memory.....	11
Storage.....	11
Chipset.....	12
HDD and Optane memory configuration .....	12
Audio.....	12
Video.....	13
Communications.....	14
Ports and connectors.....	14
System board connectors.....	14
Power supply.....	15
Physical system dimensions.....	15
Security.....	15
Environmental.....	16
<b>Chapter 4: BIOS setup</b> .....	<b>17</b>
BIOS overview.....	17
Entering BIOS setup program.....	17
Navigation keys.....	17
One time boot menu.....	18
System setup options.....	18
General options.....	18
System information.....	19
Video screen options.....	20
Security.....	20
Secure boot options.....	21
Intel Software Guard Extensions options.....	22
Performance.....	23
Power management.....	23
Post behavior.....	24
Virtualization support.....	25
Wireless options.....	25
Maintenance.....	25
System logs.....	26
Advanced configuration.....	26
SupportAssist System Resolution.....	26
Updating the BIOS.....	26


Updating the BIOS in Windows.....	26
Updating the BIOS in Linux and Ubuntu.....	27
Updating the BIOS using the USB drive in Windows.....	27
Updating the BIOS from the F12 One-Time boot menu.....	27
System and setup password.....	28
Assigning a system setup password.....	28
Deleting or changing an existing system setup password.....	28
Clearing BIOS (System Setup) and System passwords.....	29
<b>Chapter 5: Software.....</b>	<b>30</b>
Supported operating systems.....	30
Downloading Windows drivers.....	30
Network adapter drivers.....	30
Audio drivers.....	31
Display adapter.....	31
Security drivers.....	31
Storage controller.....	31
System device drivers.....	31
Other device drivers.....	32
<b>Chapter 6: Getting help.....</b>	<b>34</b>
Contacting Dell.....	34

# Set up your computer


1. Connect the keyboard and mouse.

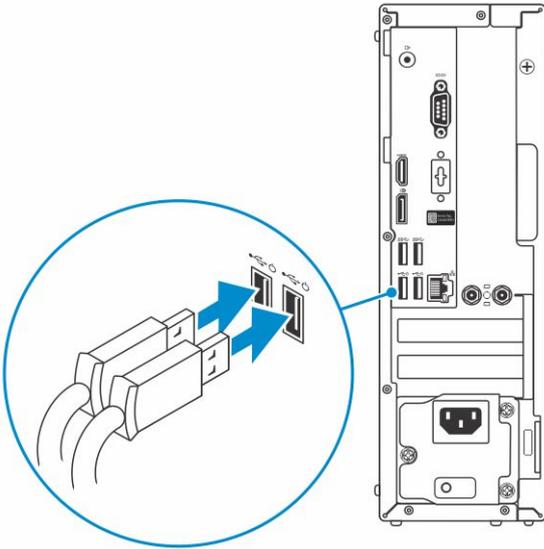

2. Connect to your network using a cable, or connect to a wireless network.

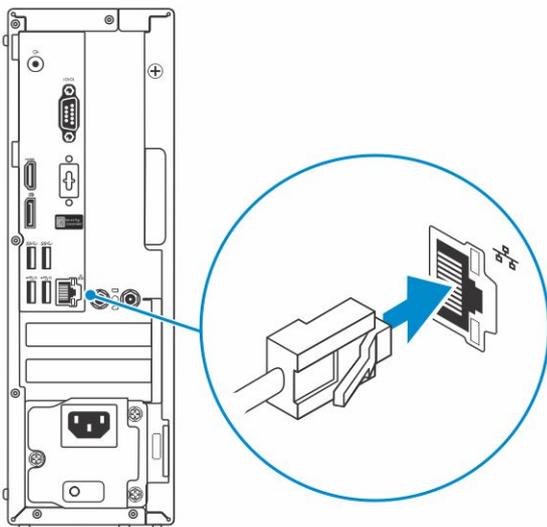


3. Connect the display.

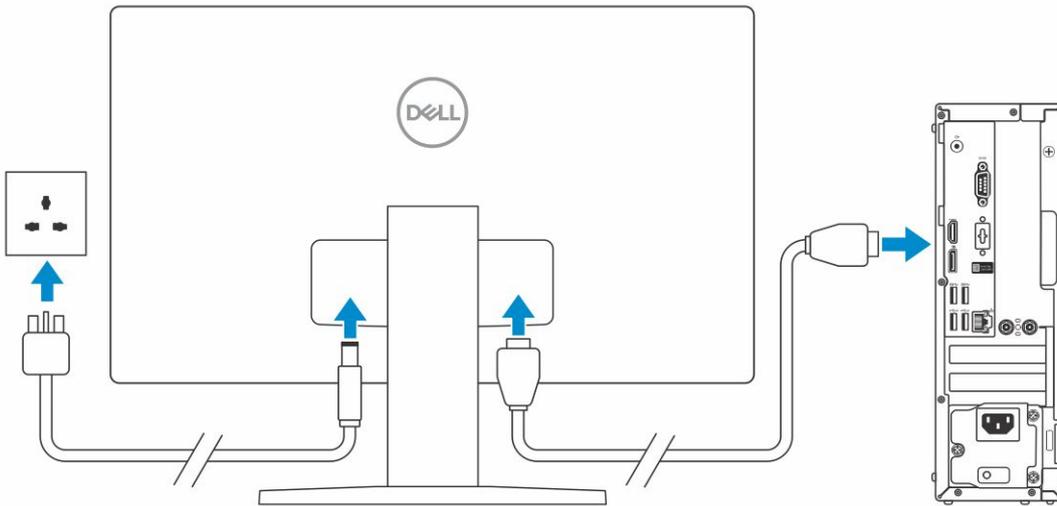


**i** **NOTE:** If you ordered your computer with a discrete graphics card, the HDMI and the display ports on the back panel of your computer are covered. Connect the display to the discrete graphics card.

4. Connect the power cable.

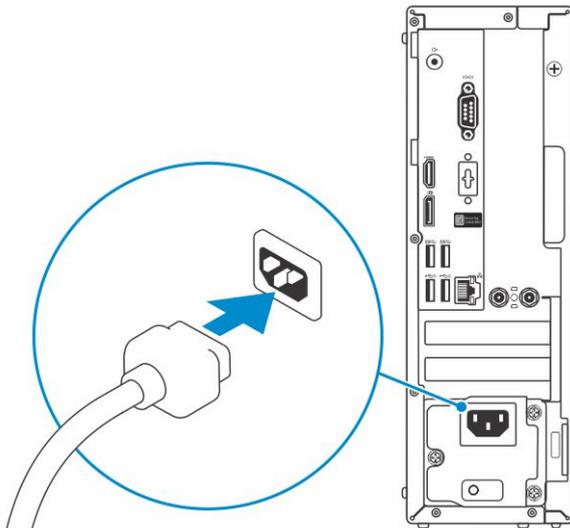


5. Press the power button.

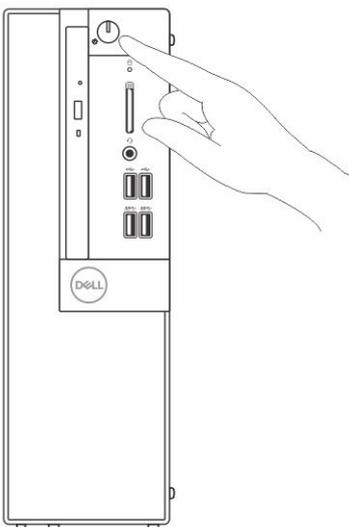


6. Follow the instructions on the screen to finish Windows setup:

a. Connect to a network.

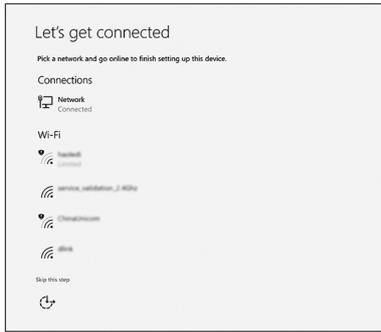


b. Sign-in to your Microsoft account or create a new account.

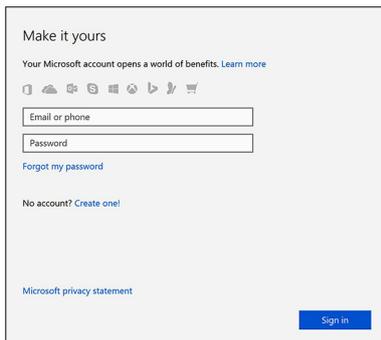

7. Locate Dell apps.

**Table 1. Locate Dell apps**

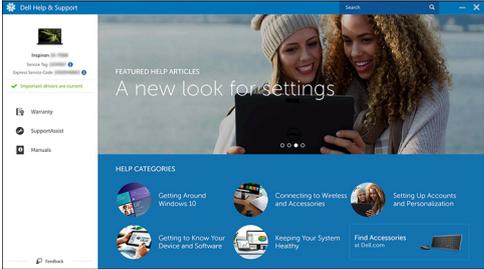Dell Apps	Description
	Register your computer
	Dell Help & Support 
	SupportAssist — Check and update your computer


## Chassis

This chapter illustrates the multiple chassis views along with the ports and connectors and also explains the FN hot key combinations.

### Topics:

- [Front view](#)
- [Back view](#)


## Front view

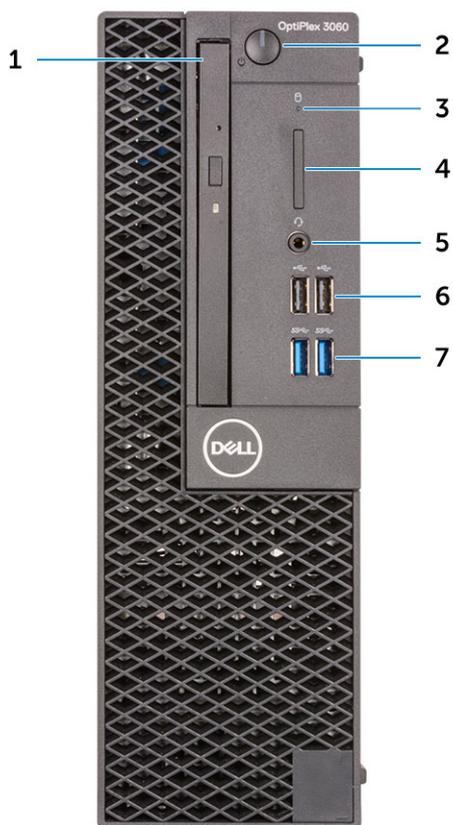

1. Optical drive (optional)
2. Power button and power light/diagnostic LED
3. Hard-drive activity light
4. Memory card reader (optional)
5. Headset/Universal audio jack port (3.5 mm headphone/microphone combo port)
6. USB 2.0 ports (2)

7. USB 3.1 Gen 1 ports (2)

## Back view

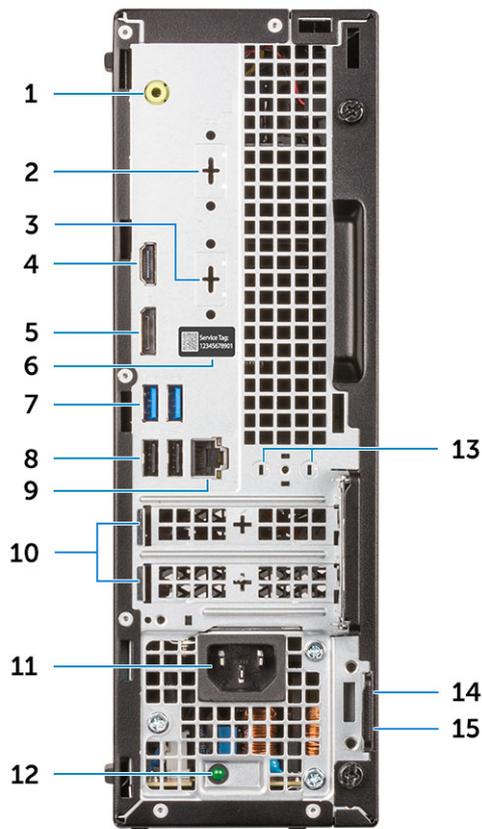

- |  |  |
|--|--|
| 1. Line-out port                                   | 2. Serial Port (optional)                      |
| 3. DP1.2/HDMI2.0/VGA/Serial/Serial-PS/2 (Optional) | 4. HDMI port                                   |
| 5. DisplayPort                                     | 6. Service tag                                 |
| 7. USB 3.1 Gen 1 ports (2)                         | 8. USB 2.0 ports (2) (supports Smart Power On) |
| 9. Network port                                    | 10. Expansion card slots (2)                   |
| 11. Power connector port                           | 12. Power supply diagnostic light              |
| 13. External antenna connectors (2) (optional)     | 14. Kensington security cable slot             |
| 15. Padlock ring                                   |  |

# System specifications

**NOTE:** Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to **Help and Support** in your Windows operating system and select the option to view information about your computer.

## Topics:

- Processor
- Memory
- Storage
- Chipset
- HDD and Optane memory configuration
- Audio
- Video
- Communications
- Ports and connectors
- System board connectors
- Power supply
- Physical system dimensions
- Security
- Environmental

## Processor

Global Standard Products (GSP) are a subset of Dell's relationship products that are managed for availability and synchronized transitions on a worldwide basis. They ensure the same platform is available for purchase globally. This allows customers to reduce the number of configurations managed on a worldwide basis, thereby reducing their costs. They also enable companies to implement global IT standards by locking in specific product configurations worldwide. The following GSP processors identified below will be made available to Dell customers.

**NOTE:** Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

**Table 2. Processor specifications**

Type	UMA Graphics
Intel Celeron G4900 (2 Cores/2 MB cache/2 Threads/up to 3.1 GHz/65 W); supports Windows 10/Linux	Intel UHD Graphics 610 with shared graphics memory
Intel Pentium Gold G5400 (2 Cores/4 MB cache/4 Threads/3.7 GHz/65 W); supports Windows 10/Linux	Intel UHD Graphics 610 with shared graphics memory
Intel Pentium Gold G5500 (2 Cores/4 MB cache/4 Threads/3.8 GHz/65 W); supports Windows 10/Linux	Intel Ultra HD Graphics 630
Intel Core i3-8100 (4 Cores/6 MB cache/4 Threads/3.6 GHz/65 W); supports Windows 10/Linux	Intel HD Graphics 630
Intel Core i3-8300 (4 Cores/8 MB cache/4 Threads/3.7 GHz/65 W); supports Windows 10/Linux	Intel HD Graphics 630

**Table 2. Processor specifications (continued)**

Type	UMA Graphics
Intel Core i5-8400 (6 Cores/9 MB cache/6 Threads/up to 4.0 GHz/65 W); supports Windows 10/Linux	Intel HD Graphics 630
Intel Core i5-8500 (6 Cores/9 MB cache/6 Threads/up to 4.1 GHz/65 W); supports Windows 10/Linux	Intel HD Graphics 630
Intel Core i7-8700 (6 Cores/12 MB cache/12 Threads/up to 4.6 GHz/65 W); supports Windows 10/Linux	Intel HD Graphics 630

## Memory

**Table 3. Memory specifications**

Features	Specifications
Minimum memory configuration	4 GB
Maximum memory configuration	32 GB
Number of slots	2 UDIMM
Maximum memory supported per slot	16 GB
Memory options	<ul style="list-style-type: none"> <li>● 4 GB - 1 x 4 GB</li> <li>● 8 GB - 1 x 8 GB</li> <li>● 8 GB - 2 x 4 GB</li> <li>● 16 GB - 2 x 8 GB</li> <li>● 16 GB - 1 x 16 GB</li> <li>● 32 GB - 2 x 16 GB</li> </ul>
Type	DDR4 SDRAM Non-ECC memory
Speed	<ul style="list-style-type: none"> <li>● 2666 MHz</li> <li>● 2400 MHz on Celeron, Pentium, and i3 processor</li> </ul>

## Storage

**Table 4. Storage specifications**

Type	Form factor	Interface	Capacity
One Solid-State Drive (SSD)	M.2 2230 or 2280	<ul style="list-style-type: none"> <li>● SATA AHCI, Up to 6 Gbps</li> <li>● PCIe 2.0 x 4 (NVMe SSD) Up to 16Gbps.</li> <li>● SATA C20 SED SSD</li> </ul>	<ul style="list-style-type: none"> <li>● Up to 512 GB</li> <li>● Up to 1 TB</li> <li>● Up to 512 GB</li> </ul>
One 3.5 inch		SATA 3.0, Up to 6 Gbps	Up to 2 TB, up to 7200 RPM
One 2.5 inch Hard-Disk Drive (HDD)		SATA AHCI, Up to 6 Gbps	Up to 2 TB, up to 7200 RPM
One 2.5 inch Self-encrypting drive Hard-Disk Drive (SED HDD)		SATA AHCI, Up to 6 Gbps	Up to 512 GB, up to 7200 RPM

# Chipset

**Table 5. Chipset specifications**

Type	Intel H370
Non-volatile memory on chipset	Yes
BIOS configuration SPI (Serial Peripheral Interface)	256 Mbit (32 MB) located at SPI_FLASH on chipset
Trusted Platform Module (TPM) 2.0 Security Device (Discrete TPM Enabled)	24 KB located at TPM 2.0 on chipset
Firmware-TPM (Discrete TPM disabled)	By default the Platform Trust Technology feature is visible to the OS
NIC EEPROM	LOM configuration contained within LOM e-fuse – no dedicated LOM EEPROM

# HDD and Optane memory configuration

**Table 6. HDD and Optane memory configuration**

Primary/Boot drive	Specifications
1 x 2.5 inch HDD with M.2 Optane	2.5 500 GB 7200 rpm HDD + Intel Optane Memory
1 x 2.5 inch HDD with M.2 Optane	2.5 1 TB 7200 rpm HDD + Intel Optane Memory
1 x 2.5 inch HDD with M.2 Optane	2.5 2 TB 5400 rpm HDD + Intel Optane Memory
1 x 3.5 inch HDD with M.2 Optane	3.5 500 GB 7200 rpm HDD + Intel Optane Memory
1 x 3.5 inch HDD with M.2 Optane	3.5 1 TB 7200 rpm HDD + Intel Optane Memory
1 x 3.5 inch HDD with M.2 Optane	3.5 2 TB 7200 rpm HDD + Intel Optane Memory

# Audio

**Table 7. Audio specifications**

Features	Specifications
Controller	Realtek ALC3234
Type	Integrated
Speakers	Internal speaker (mono)
Interface	<ul style="list-style-type: none"> <li>• Headset port/Universal audio jack port - 3.5 mm headphone/microphone combo port (Front)</li> <li>• Lineout port (Back)</li> <li>• Dell 2.0 Speaker System - AE215 (optional)</li> <li>• Dell 2.1 Speaker System - AE415 (optional)</li> <li>• Dell AX210 USB Stereo speakers (optional)</li> <li>• Dell Wireless 360 Speaker System - AE715 (optional)</li> <li>• AC511 Sound Bar (optional)</li> <li>• Dell Professional Sound Bar - AE515 (optional)</li> </ul>

**Table 7. Audio specifications (continued)**

Features	Specifications
	<ul style="list-style-type: none"> <li>• Dell Stereo Soundbar - AX510 (optional)</li> <li>• Dell Performance USB Headset - AE2 (optional)</li> <li>• Dell Pro Stereo Headsets - UC150/UC350 (optional)</li> </ul>
Internal speaker amplifier	2 W (RMS) per channel

## Video

**Table 8. Video**

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
Intel UHD Graphics 630	UMA	Intel Pentium Gold G5500T	Integrated	Shared system memory	DisplayPort 1.2 HDMI 1.4 DP/HDMI 2.0b/VGA (optional)	<b>DP 1.2 Max 4096x2304 @ 60Hz</b> <b>HDMI 1.4 Max 4096x2160 @ 30 Hz,</b> <b>1.VGA Max 1920x1080 @60Hz</b> <b>2.DP 1.2 4096x2304 @ 60Hz</b>
Intel UHD Graphics 610	UMA	Intel Celeron G4900T Intel Pentium Gold G5400T	Integrated	Shared system memory	DisplayPort 1.2 HDMI 1.4 DP/HDMI 2.0b/VGA (optional)	<b>DP 1.2 Max 4096x2304 @ 60Hz</b> <b>HDMI 1.4 Max 4096x2160 @ 30 Hz,</b> <b>1.VGA Max 1920x1080 @60Hz</b> <b>2.DP 1.2 4096x2304 @ 60Hz</b>
Intel HD Graphics 630	UMA	Intel Core i3-8100T Intel Core i3-8300T Intel Core i5-8400T Intel Core i5-8500T Intel Core i7-8700T	Integrated	Shared system memory	DisplayPort 1.2 HDMI 1.4 DP/HDMI 2.0b/VGA (optional)	<b>DP 1.2 Max 4096x2304 @ 60Hz</b> <b>HDMI 1.4 Max 4096x2160 @ 30 Hz,</b> <b>1.VGA Max 1920x1080 @60Hz</b> <b>2.DP 1.2 4096x2304 @ 60Hz</b>

# Communications

**Table 9. Communications**

Features	Specifications
Network adapter	Realtek RTL8111HSD-CG Ethernet LAN 10/100/1000
Wireless	<ul style="list-style-type: none"> <li>• Qualcomm QCA9377 Dual-band 1x1 802.11ac Wireless with MU-MIMO + Bluetooth 4.1; 2.4 Ghz - 5 Ghz.</li> <li>• Qualcomm QCA61x4A Dual-band 2x2 802.11ac Wireless with MU-MIMO + Bluetooth 4.2; 2.4 Ghz - 5 Ghz.</li> <li>• Intel Wireless-AC 9560, Dual-band 2x2 802.11ac Wi-Fi with MU-MIMO + Bluetooth 5; 2.4 Ghz - 5 Ghz.</li> </ul>

# Ports and connectors

**Table 10. Ports and connectors**

Feature	Specification
Memory card reader	SD 4.0 memory card reader (Optional)
USB	<ul style="list-style-type: none"> <li>• Two USB 2.0 ports</li> <li>• Two USB 2.0 ports (supports Smart Power On)</li> <li>• Four USB 3.1 Gen 1 ports</li> </ul>
Security	Kensington lock slot
Audio	<ul style="list-style-type: none"> <li>• Universal audio jack (3.5 mm headphone/microphone combo port)</li> <li>• Line out port</li> </ul>
Video	<ul style="list-style-type: none"> <li>• DisplayPort 1.2</li> <li>• HDMI 1.4 (UMA)</li> <li>• DP/HDMI2.0b/VGA port (optional)</li> </ul>
Network adapter	One RJ-45 connector
Serial port	One serial port (optional)
Parallel port	One parallel port (optional)

# System board connectors

**Table 11. System board connectors**

Connector	Description
M.2 Connectors	1 - 2230/2280 (2280 for storage)
M.2 Connectors	1 - 2230 (keyed to support Integrated or Discrete WiFi)
Serial ATA (SATA) connector	1 - Support Standard Rev 2.0
PCIe X16 slot	1 - Support Standard Rev 3.0
PCIe X1 slot	1

# Power supply

**Table 12. Power supply**

Features	Specifications
Input Voltage	100-240 V, 1.6 A, 50-60 Hz
Input current (maximum)	<ul style="list-style-type: none"> <li>• 200 W PSU (APFC Full range) (China only)</li> <li>• 200 W PSU (EPA Bronze)</li> <li>• 200 W PSU (EPA Platinum) (Brazil only)</li> </ul>

# Physical system dimensions

**Table 13. Physical system dimensions**

Features	Specifications
Chassis volume (liters)	7.8
Chassis weight (pounds / kilograms)	11.57/5.26

**Table 14. Chassis dimensions**

Features	Specifications
Height (inches / centimeters)	11.42/29
Width (inches / centimeters)	3.65/9.26
Depth (inches / centimeters)	11.50/29.2
Shipping weight (pounds / kilograms – includes packaging materials)	14.19/6.45

**Table 15. Packaging parameters**

Features	Specifications
Height (inches / centimeters)	10.38/26.4
Width (inches / centimeters)	19.2/48.7
Depth (inches / centimeters)	15.5/39.4

# Security

**Table 16. Security**

Specifications	Optiplex 3060 Small Form Factor
Trusted Platform Module (TPM) 2.0 <sup>1</sup>	Integrated on system board
Cable Cover	Optional
Chassis Intrusion Switch	Optional
Dell Smartcard Keyboard	Optional
Chassis lock slot and loop support	Standard

<sup>1</sup>TPM is not available in all countries.

## Environmental

 **NOTE:** For more details on Dell environmental features, please go to the environmental attributes section. See your specific region for availability.

**Table 17. Environmental**

<b>Detail</b>	<b>Specifications</b>
Energy efficient power supply	Optional
80 plus bronze certification	200 W EPA bronze
80 plus platinum certification	200 W EPA platinum
Customer replaceable unit	No
Recyclable packaging	Yes
MultiPack packaging	Optional, US only

# BIOS setup

**CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

**NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

**NOTE:** Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

## Topics:

- [BIOS overview](#)
- [Entering BIOS setup program](#)
- [Navigation keys](#)
- [One time boot menu](#)
- [System setup options](#)
- [Updating the BIOS](#)
- [System and setup password](#)
- [Clearing BIOS \(System Setup\) and System passwords](#)

## BIOS overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

## Entering BIOS setup program

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS setup program.

**NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

## Navigation keys

**NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

**Table 18. Navigation keys**

Keys	Navigation
Up arrow	Moves to the previous field.

**Table 18. Navigation keys (continued)**

Keys	Navigation
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area. <b>i</b>   <b>NOTE:</b> For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

## One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F12 immediately.

**i** | **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)  
**i** | **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

## System setup options

**i** | **NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not appear.

### General options

**Table 19. General**

Option	Description
System Information	<p>Displays the following information:</p> <ul style="list-style-type: none"> <li>• System Information: Displays <b>BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date,</b> and the <b>Express Service Code.</b></li> <li>• Memory Information: Displays <b>Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM 1 Size,,</b> and <b>DIMM 2 Size.</b></li> <li>• PCI Information: Displays Slot1, Slot2, Slot3_M.2, Slot4_M.2</li> <li>• Processor Information: Displays <b>Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable,</b> and <b>64-Bit Technology.</b></li> <li>• Device Information: Displays <b>SATA-0, SATA 1, SATA 2, , M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Audio Controller, Wi-Fi Device,</b> and <b>Bluetooth Device.</b></li> </ul>

**Table 19. General (continued)**

Option	Description
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list.
Advanced Boot Options	Allows you to select the Enable Legacy Option ROMs option, when in UEFI boot mode. By default, this option is selected. <ul style="list-style-type: none"> <li>● Enable Legacy Option ROMs—Default</li> <li>● Enable Attempt Legacy Boot</li> </ul>
UEFI Boot Path Security	This option controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu.
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

## System information

**Table 20. System Configuration**

Option	Description
Integrated NIC	Allows you to control the on-board LAN controller. The option 'Enable UEFI Network Stack' is not selected by default. The options are: <ul style="list-style-type: none"> <li>● Disabled</li> <li>● Enabled</li> <li>● Enabled w/PXE (default)</li> </ul> <p><b>i</b> <b>NOTE:</b> Depending on the computer and its installed devices, the items listed in this section may or may not appear.</p>
Serial Port	Determines how the built-in serial port operates. Choose any one option: <ul style="list-style-type: none"> <li>● Disabled</li> <li>● COM1 (selected by default)</li> <li>● COM2</li> <li>● COM3</li> <li>● COM4</li> </ul>
SATA Operation	Allows you to configure the operating mode of the integrated hard drive controller. <ul style="list-style-type: none"> <li>● Disabled = The SATA controllers are hidden</li> <li>● AHCI = SATA is configured for AHCI mode</li> <li>● RAID ON = SATA is configured to support RAID mode (selected by default)</li> </ul>
Drives	Allows you to enable or disable the various drives on-board: <ul style="list-style-type: none"> <li>● SATA-0 (enabled by default)</li> <li>● SATA-1 (enabled by default)</li> <li>● SATA-2 (enabled by default)</li> <li>● M.2 PCIe SSD-0 (enabled by default)</li> </ul>
Smart Reporting	This field controls whether hard drive errors for integrated drives are reported during system startup. The <b>Enable Smart Reporting option</b> is disabled by default.
USB Configuration	Allows you to enable or disable the integrated USB controller for: <ul style="list-style-type: none"> <li>● Enable USB Boot Support</li> <li>● Enable Front USB Ports</li> <li>● Enable Rear USB Ports</li> </ul> <p>All the options are enabled by default.</p>

**Table 20. System Configuration (continued)**

Option	Description
Front USB Configuration	Allows you to enable or disable the front USB ports. All the ports are enabled by default.
Rear USB Configuration	Allows you to enable or disable the back USB ports. All the ports are enabled by default.
USB PowerShare	This option allows you to charge the external devices, such as mobile phones, music player. This option is disabled by default.
Audio	Allows you to enable or disable the integrated audio controller. The option <b>Enable Audio</b> is selected by default. <ul style="list-style-type: none"> <li>• Enable Microphone</li> <li>• Enable Internal Speaker</li> </ul> Both the options are selected by default.
Dust Filter Maintenance	Allows you to enable or disable BIOS messages for maintaining the optional dust filter installed in your computer. BIOS will generate a pre-boot reminder to clean or replace the dust filter based on the interval set. The option <b>Disabled</b> is selected by default. <ul style="list-style-type: none"> <li>• Disabled</li> <li>• 15 days</li> <li>• 30 days</li> <li>• 60 days</li> <li>• 90 days</li> <li>• 120 days</li> <li>• 150 days</li> <li>• 180 days</li> </ul>
Miscellaneous Devices	Allows you to enable or disable various on board devices.. The option <b>Enable Secure Digital (SD) Card</b> is selected by default. <ul style="list-style-type: none"> <li>• Enable Secure Digital (SD) Card</li> <li>• Secure Digital (SD) Card Boot</li> <li>• Secure Digital (SD) Card Read-Only Mode</li> </ul>

## Video screen options

**Table 21. Video**

Option	Description
Primary Display	Allows you to select the primary display when multiple controllers are available in the system. <ul style="list-style-type: none"> <li>• Auto (default)</li> <li>• Intel HD Graphics</li> </ul>  <b>NOTE:</b> If you do not select Auto, the on-board graphics device will be present and enabled.

## Security

**Table 22. Security**

Option	Description
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for a administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart.

**Table 22. Security (continued)**

Option	Description
	<ul style="list-style-type: none"> <li>Disabled — Always prompt for the system and internal HDD password when they are set. This option is disabled by default.</li> <li>Reboot Bypass — Bypass the password prompts on Restarts (warm boots).</li> </ul> <p><b>NOTE:</b> The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.</p>
Password Change	<p>This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set.</p> <p><b>Allow Non-Admin Password Changes</b> - This option is enabled by default.</p>
UEFI Capsule Firmware Updates	<p>This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)</p>
TPM 2.0 Security	<p>Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system.</p> <ul style="list-style-type: none"> <li>TPM On (default)</li> <li>Clear</li> <li>PPI Bypass for Enable Commands</li> <li>PPI Bypass for Disable Commands</li> <li>PPI Bypass for Clear Commands</li> <li>Attestation Enable (default)</li> <li>Key Storage Enable (default)</li> <li>SHA-256 (default)</li> </ul> <p>Choose any one option:</p> <ul style="list-style-type: none"> <li>Disabled</li> <li>Enabled (default)</li> </ul>
Computrace	<p>This field lets you Activate or Disable the BIOS module interface of the optional Computrace Service from Absolute Software. Enables or disables the optional Computrace service designed for asset management.</p> <ul style="list-style-type: none"> <li>Deactivate</li> <li>Disable</li> <li>Activate - This option is selected by default.</li> </ul>
Chassis Intrusion	<p>This field controls the chassis intrusion feature.</p> <p>Choose any one of the option:</p> <ul style="list-style-type: none"> <li>Disabled (default)</li> <li>Enabled</li> <li>On-Silent</li> </ul>
Admin Setup Lockout	<p>Allows you to prevent users from entering Setup when Admin password is set. This option is not set by default.</p>
SMM Security Mitigation	<p>Allows you to enable or disable additional UEFI SMM Security Mitigation protections. This option is not set by default.</p>

## Secure boot options

**Table 23. Secure Boot**

Option	Description
Secure Boot Enable	Allows you to enable or disable Secure Boot feature

**Table 23. Secure Boot (continued)**

Option	Description
	<ul style="list-style-type: none"> <li>● Secure Boot Enable</li> </ul> <p>This option is not selected by default.</p>
Secure Boot Mode	<p>Allows you to modify the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures.</p> <ul style="list-style-type: none"> <li>● Deployed Mode (default)</li> <li>● Audit Mode</li> </ul>
Expert key Management	<p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The <b>Enable Custom Mode</b> option is disabled by default. The options are:</p> <ul style="list-style-type: none"> <li>● PK (default)</li> <li>● KEK</li> <li>● db</li> <li>● dbx</li> </ul> <p>If you enable the <b>Custom Mode</b>, the relevant options for <b>PK, KEK, db, and dbx</b> appear. The options are:</p> <ul style="list-style-type: none"> <li>● <b>Save to File</b>- Saves the key to a user-selected file</li> <li>● <b>Replace from File</b>- Replaces the current key with a key from a user-selected file</li> <li>● <b>Append from File</b>- Adds a key to the current database from a user-selected file</li> <li>● <b>Delete</b>- Deletes the selected key</li> <li>● <b>Reset All Keys</b>- Resets to default setting</li> <li>● <b>Delete All Keys</b>- Deletes all the keys</li> </ul> <p> <b>NOTE:</b> If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.</p>

## Intel Software Guard Extensions options

**Table 24. Intel Software Guard Extensions**

Option	Description
<b>Intel SGX Enable</b>	<p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS.</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> <li>● <b>Disabled</b></li> <li>● <b>Enabled</b></li> <li>● <b>Software controlled</b>—Default</li> </ul>
<b>Enclave Memory Size</b>	<p>This option sets <b>SGX Enclave Reserve Memory Size</b></p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> <li>● <b>32 MB</b></li> <li>● <b>64 MB</b></li> <li>● <b>128 MB</b>—Default</li> </ul>

## Performance

Table 25. Performance

Option	Description
<b>Multi Core Support</b>	<p>This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores.</p> <ul style="list-style-type: none"> <li>• <b>All</b>—Default</li> <li>• <b>1</b></li> <li>• <b>2</b></li> <li>• <b>3</b></li> </ul>
<b>Intel SpeedStep</b>	<p>Allows you to enable or disable the Intel SpeedStep mode of processor.</p> <ul style="list-style-type: none"> <li>• <b>Enable Intel SpeedStep</b></li> </ul> <p>This option is set by default.</p>
<b>C-States Control</b>	<p>Allows you to enable or disable the additional processor sleep states.</p> <ul style="list-style-type: none"> <li>• <b>C states</b></li> </ul> <p>This option is set by default.</p>
<b>Intel TurboBoost</b>	<p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p> <ul style="list-style-type: none"> <li>• <b>Enable Intel TurboBoost</b></li> </ul> <p>This option is set by default.</p>
<b>Hyper-Thread Control</b>	<p>Allows you to enable or disable the HyperThreading in the processor.</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b></li> <li>• <b>Enabled</b>—Default</li> </ul>

## Power management

Table 26. Power Management

Option	Description
AC Recovery	<p>Determines how the system responds when AC power is re-applied after a power loss. You can set the AC Recovery to:</p> <ul style="list-style-type: none"> <li>• Power Off</li> <li>• Power On</li> <li>• Last Power State</li> </ul> <p>This option is Power Off by default.</p>
Enable Intel Speed Shift Technology	<p>Allows you to enable or disable Intel Speed Shift Technology support. The option <b>Enable Intel Speed Shift Technology</b> is set by default.</p>
Auto On Time	<p>Sets time to automatically turn on the computer. Time is kept in standard 12-hour format (hour:minutes:seconds). Change the startup time by typing the values in the time and AM/PM fields.</p> <p> <b>NOTE:</b> This feature does not work if you turn off your computer using the switch on a power strip or surge protector or if <b>Auto Power is set to disabled</b>.</p>
Deep Sleep Control	<p>Allows you to define the controls when Deep Sleep is enabled.</p> <ul style="list-style-type: none"> <li>• Disabled</li> </ul>

**Table 26. Power Management (continued)**

Option	Description
	<ul style="list-style-type: none"> <li>Enabled in S5 only</li> <li>Enabled in S4 and S5</li> </ul> Disabled (by default).
Fan Control Override	This field determines the speed of the fan. When enabled the system fan runs at full speed. This option is disabled by default.
USB Wake Support	Allows you to enable the USB devices to wake the computer from standby mode. The option "Enable USB Wake Support" is selected by default
Wake on LAN/WWAN	This option allows the computer to power up from the off state when triggered by a special LAN signal. This feature only works when the computer is connected to AC power supply. <ul style="list-style-type: none"> <li><b>Disabled</b> - Does not allow the system to power on by special LAN signals when it receives a wake-up signal from the LAN or wireless LAN.</li> <li><b>LAN or WLAN</b> - Allows the system to be powered on by special LAN or wireless LAN signals.</li> <li><b>LAN Only</b> - Allows the system to be powered on by special LAN signals.</li> <li><b>LAN with PXE Boot</b> - A wakeup packet sent to the system in either the S4 or S5 state, that will cause the system to wake-up and immediately boot to PXE.</li> <li><b>WLAN Only</b> - Allows the system to be powered on by special WLAN signals.</li> </ul> This option is Disabled by default.
Block Sleep	Allows you to block entering to sleep (S3 state) in OS environment. This option is disabled by default.

## Post behavior

**Table 27. POST Behavior**

Option	Description
Numlock LED	Allows you to enable or disable the Numlock feature when your computer starts. This option is enabled by default.
Keyboard Errors	Allows you to enable or disable the keyboard error reporting when the computer starts. The option <b>Enable Keyboard Error Detection</b> is enabled by default.
Fast Boot	This option can speed up the boot process by bypassing some compatibility steps: <ul style="list-style-type: none"> <li>Minimal — The system boots quickly, unless the BIOS has been updated, memory changed, or the previous POST did not complete.</li> <li>Thorough — The system does not skip any steps in the boot process.</li> <li>Auto — This allows the operating system to control this setting (this works only when the operating system supports Simple Boot Flag).</li> </ul> This option is set to <b>Thorough</b> by default.
Extend BIOS POST Time	This option creates an additional pre-boot delay. <ul style="list-style-type: none"> <li>0 seconds (default)</li> <li>5 seconds</li> <li>10 seconds</li> </ul>
Full Screen Logo	This option will display full screen logo if your image match screen resolution. The option <b>Enable Full Screen Logo</b> is not set by default.
Warnings and Errors	This option causes the boot process to only pause when warning or errors are detected. Choose any one of the option: <ul style="list-style-type: none"> <li>Prompt on Warnings and Errors</li> <li>Continue on Warnings</li> <li>Continue on Warnings and Errors</li> </ul>

## Virtualization support

**Table 28. Virtualization Support**

Option	Description
Virtualization	This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by the Intel Virtualization technology. <ul style="list-style-type: none"> <li>• <b>Enable Intel Virtualization Technology</b></li> </ul> This option is set by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by the Intel Virtualization technology for direct I/O. <ul style="list-style-type: none"> <li>• <b>Enable VT for Direct I/O</b></li> </ul> This option is set by default.

## Wireless options

**Table 29. Wireless**

Option	Description
Wireless Device Enable	Allows you to enable or disable the internal wireless devices. The options are: <ul style="list-style-type: none"> <li>• <b>WLAN/WiGig</b></li> <li>• <b>Bluetooth</b></li> </ul> All the options are enabled by default.

## Maintenance

**Table 30. Maintenance**

Option	Description
Service Tag	Displays the service tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
SERR Messages	Controls the SERR message mechanism. This option is set by default. Some graphics cards require that the SERR message mechanism be disabled.
BIOS Downgrade	Allows you to flash previous revisions of the system firmware. <ul style="list-style-type: none"> <li>• <b>Allow BIOS Downgrade</b></li> </ul> This option is set by default.
Bios Recovery	<p><b>BIOS Recovery from Hard Drive</b>—This option is set by default. Allows you to recover the corrupted BIOS from a recovery file on the HDD or an external USB key.</p> <p><b>BIOS Auto-Recovery</b>— Allows you to recover the BIOS automatically.</p> <p> <b>NOTE:</b> <b>BIOS Recovery from Hard Drive</b> field should be enabled.</p> <p><b>Always Perform Integrity Check</b>—Performs integrity check on every boot.</p>
First Power On Date	Allows you the set Ownership date. The option <b>Set Ownership Date</b> is not set by default.

# System logs

Table 31. System Logs

Option	Description
BIOS events	Allows you to view and clear the System Setup (BIOS) POST events.

# Advanced configuration

Table 32. Advanced configuration

Option	Description
ASPM	Allows you to set the ASPM level. <ul style="list-style-type: none"><li>• Auto (default) - There is handshaking between the device and PCI Express hub to determine the best ASPM mode supported by the device</li><li>• Disabled - ASPM power management is turned off at all time</li><li>• L1 Only - ASPM power management is set to use L1</li></ul>

# SupportAssist System Resolution

Option	Description
<b>Auto OS Recovery Threshold</b>	Allows you to control the automatic boot flow for SupportAssist System. Options are: <ul style="list-style-type: none"><li>• Off</li><li>• 1</li><li>• 2 (Enabled by default)</li><li>• 3</li></ul>
<b>SupportAssist OS Recovery</b>	Allows you to recover the SupportAssist OS Recovery (Disabled by default)

# Updating the BIOS

## Updating the BIOS in Windows

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

1. Go to [www.dell.com/support](http://www.dell.com/support).
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.  
**NOTE:** If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.

For more information, see knowledge base article [000124211](https://www.dell.com/support/article/000124211) at [www.dell.com/support](http://www.dell.com/support).

## Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](https://www.dell.com/support/article/000131486) at [www.dell.com/support](http://www.dell.com/support).

## Updating the BIOS using the USB drive in Windows

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, see the knowledge base article [000145519](https://www.dell.com/support/article/000145519) at [www.dell.com/support](http://www.dell.com/support).
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

### BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.

**NOTE:** Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

### Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

**CAUTION:** Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.  
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

## System and setup password

**Table 33. System and setup password**

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data that is stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

## Assigning a system setup password

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

To enter the system setup, press F12 immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to assign the system password:
  - A password can have up to 32 characters.
  - At least one special character: ! " # \$ % & ' ( ) \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | }
  - Numbers 0 through 9.
  - Upper case letters from A to Z.
  - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the pop-up message.
5. Press Y to save the changes.  
The computer restarts.

## Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F12 immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.

2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
  -  **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.  
The computer restarts.

## Clearing BIOS (System Setup) and System passwords

To clear the system or BIOS passwords, contact Dell technical support as described at [www.dell.com/contactdell](http://www.dell.com/contactdell).

-  **NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

# Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

## Topics:

- Supported operating systems
- Downloading Windows drivers
- Network adapter drivers
- Audio drivers
- Display adapter
- Security drivers
- Storage controller
- System device drivers
- Other device drivers

## Supported operating systems

**Table 34. Supported operating systems**

Supported operating systems	Description
Windows operating system	<ul style="list-style-type: none"> <li>• Microsoft Windows 10 Home (64-bit)</li> <li>• Microsoft Windows 10 Pro (64-bit)</li> <li>• Microsoft Windows 10 Pro National Academic (64-bit)</li> <li>• Microsoft Windows 10 Home National Academic (64-bit)</li> </ul>
Other	<ul style="list-style-type: none"> <li>• Ubuntu 16.04 SP1 LTS (64-bit)</li> <li>• Neokylin v6.0 SP4 (China only)</li> </ul>

## Downloading Windows drivers

1. Turn on the .
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your , and then click **Submit**.  
 **NOTE:** If you do not have the Service Tag, use the auto detect feature or manually browse for your model.
4. Click **Drivers and Downloads**.
5. Select the operating system installed on your .
6. Scroll down the page and select the driver to install.
7. Click **Download File** to download the driver for your .
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the driver file icon and follow the instructions on the screen.

## Network adapter drivers

Verify if the Network adapter drivers are already installed in the system.

- ▼  Network adapters
  -  Realtek PCIe GBE Family Controller

## Audio drivers

Verify if the audio drivers are already installed in the computer.

- ▼  Audio inputs and outputs
  -  Speakers (2- High Definition Audio Device)
- ▼  Sound, video and game controllers
  -  High Definition Audio Device
  -  High Definition Audio Device

## Display adapter

Verify if the display adapter drivers are already installed in the system.

- ▼  Display adapters
  -  Intel(R) UHD Graphics 630

## Security drivers

Verify if the security drivers are already installed in the system.

- ▼  Security devices
  -  Trusted Platform Module 2.0

## Storage controller

Verify if the storage control drivers are already installed in the system.

- ▼  Storage controllers
  -  Intel(R) Desktop/Workstation/Server Express Chipset SATA RAID Controller
  -  Microsoft Storage Spaces Controller

## System device drivers

Verify if the system device drivers are already installed in the system.

- System devices
    - ACPI Fan
    - ACPI Fixed Feature Button
    - ACPI Power Button
    - ACPI Processor Aggregator
    - ACPI Thermal Zone
    - CannonLake LPC Controller (H370) - A304
    - CannonLake PCI Express Root Port #5 - A33C
    - CannonLake SMBus - A323
    - CannonLake SPI (flash) Controller - A324
    - CannonLake Thermal Subsystem - A379
    - Composite Bus Enumerator
    - High Definition Audio Controller
    - High precision event timer
    - Intel(R) Management Engine Interface
    - Intel(R) Power Engine Plug-in
    - Intel(R) Xeon(R) E3 - 1200/1500 v5/6th Gen Intel(R) Core(TM) Gaussian Mixture Model - 1911
    - Microsoft ACPI-Compliant System
    - Microsoft System Management BIOS Driver
    - Microsoft UEFI-Compliant System
    - Microsoft Virtual Drive Enumerator
    - Microsoft Windows Management Interface for ACPI
    - Microsoft Windows Management Interface for ACPI
    - Microsoft Windows Management Interface for ACPI
    - NDIS Virtual Network Adapter Enumerator
    - Numeric data processor
    - PCI Express Root Complex
    - PCI standard host CPU bridge
    - PCI standard RAM Controller
    - Plug and Play Software Device Enumerator
    - Programmable interrupt controller
    - Remote Desktop Device Redirector Bus
    - System CMOS/real time clock
    - System timer
    - UMBus Root Bus Enumerator

## Other device drivers

Verify if the following drivers are already installed in the system.

### Universal Serial Bus Controller

- Universal Serial Bus controllers
    - Intel(R) USB 3.1 eXtensible Host Controller - 1.10 (Microsoft)
    - USB Root Hub (USB 3.0)

## Software components

- ▼  Software devices
  -  Microsoft Device Association Root Enumerator
  -  Microsoft GS Wavetable Synth

## Ports (COM and LPT)

- ▼  Ports (COM & LPT)
  -  Communications Port (COM1)

## Mice and other pointing devices

- ▼  Mice and other pointing devices
  -  HID-compliant mouse

## Firmware

- ▼  Firmware
  -  System Firmware

# Getting help

## Topics:

- [Contacting Dell](#)

## Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.