

Dell Vostro 5390

Setup and specifications guide



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Set up your computer.....	5
Chapter 2: Create a USB recovery drive for Windows.....	7
Chapter 3: Chassis overview.....	8
Display view.....	8
Left view.....	9
Right view.....	9
Palmrest view.....	10
Bottom view.....	11
Keyboard shortcuts.....	11
Chapter 4: Technical specifications.....	13
System information.....	13
Processor.....	14
Memory.....	14
Storage.....	14
System board connectors.....	15
Media card-reader.....	15
Audio.....	15
Video card.....	16
Camera.....	16
Wireless.....	16
Ports and connectors.....	16
Display.....	17
Keyboard.....	17
Touchpad.....	18
Fingerprint reader (FPR)—optional.....	18
Operating system.....	19
Battery.....	19
Power adapter.....	19
Sensor and control specifications.....	20
Dimensions and weight.....	20
Computer environment.....	20
Security.....	21
Security Software.....	21
Chapter 5: Drivers and downloads.....	22
Chapter 6: BIOS setup.....	23
BIOS overview.....	23
Entering BIOS setup program.....	23
Navigation keys.....	23
One time boot menu.....	24


System setup options.....	24
General options.....	24
System information.....	25
Video.....	26
Security.....	26
Secure boot.....	27
Intel Software Guard Extensions.....	28
Performance.....	28
Power management.....	29
POST behavior.....	29
Virtualization support.....	30
Wireless.....	30
Maintenance screen.....	31
System logs.....	31
SupportAssist System Resolution.....	31
Updating the BIOS.....	32
Updating the BIOS in Windows.....	32
Updating the BIOS in Linux and Ubuntu.....	32
Updating the BIOS using the USB drive in Windows.....	32
Updating the BIOS from the F12 One-Time boot menu.....	33
System and setup password.....	33
Assigning a system setup password.....	34
Deleting or changing an existing system setup password.....	34
Clearing BIOS (System Setup) and System passwords.....	34

Chapter 7: Getting help and contacting Dell..... 35

Set up your computer

1. Connect the power adapter and press the power button.

NOTE: To conserve battery power, the battery might enter power saving mode.

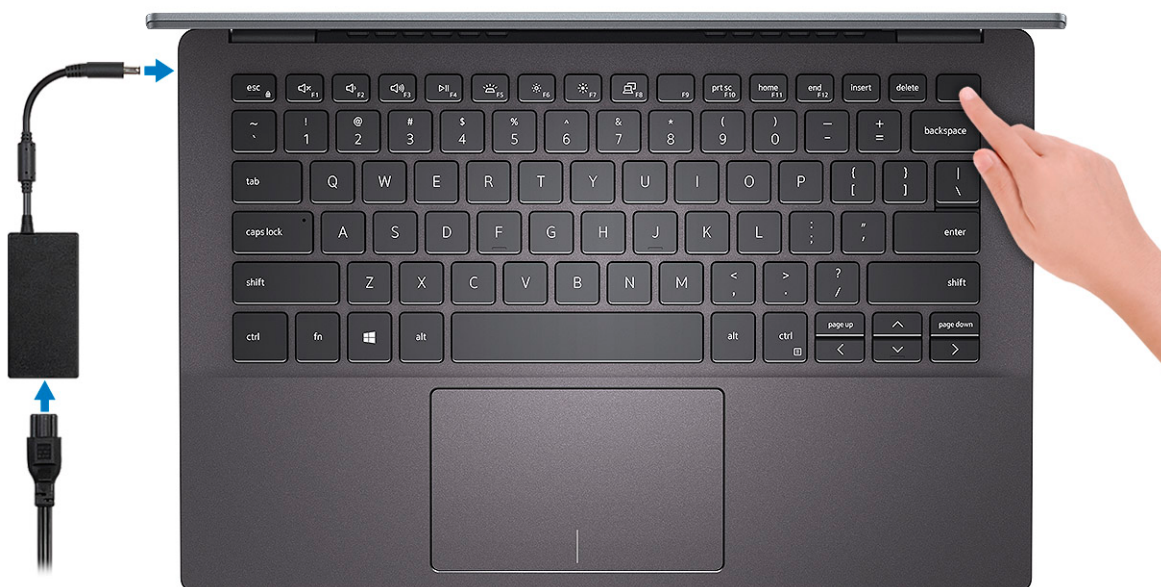

2. Finish Windows system setup.

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.
NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended

Table 1. Locate Dell apps

Dell apps	Details
	Dell Product Registration Register your computer with Dell.
	Dell Help & Support Access help and support for your computer.

Table 1. Locate Dell apps (continued)

Dell apps	Details
	SupportAssist Proactively checks the health of your computer's hardware and software.  NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.
	Dell Update Updates your computer with critical fixes and important device drivers as they become available.
	Dell Digital Delivery Download software applications including software that is purchased but not preinstalled on your computer.

4. Create recovery drive for Windows.

 **NOTE:** It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see [Create a USB recovery drive for Windows](#).

Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

 **NOTE:** This process may take up to an hour to complete.

 **NOTE:** The following steps may vary depending on the version of Windows installed. Refer to the [Microsoft support site](#) for latest instructions.


1. Connect the USB flash drive to your computer.
2. In Windows search, type **Recovery**.
3. In the search results, click **Create a recovery drive**.
The **User Account Control** window is displayed.
4. Click **Yes** to continue.
The **Recovery Drive** window is displayed.
5. Select **Back up system files to the recovery drive** and click **Next**.
6. Select the **USB flash drive** and click **Next**.
A message appears, indicating that all data in the USB flash drive will be deleted.
7. Click **Create**.
8. Click **Finish**.
For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.

Chassis overview

Topics:

- [Display view](#)
- [Left view](#)
- [Right view](#)
- [Palmrest view](#)
- [Bottom view](#)
- [Keyboard shortcuts](#)

Display view

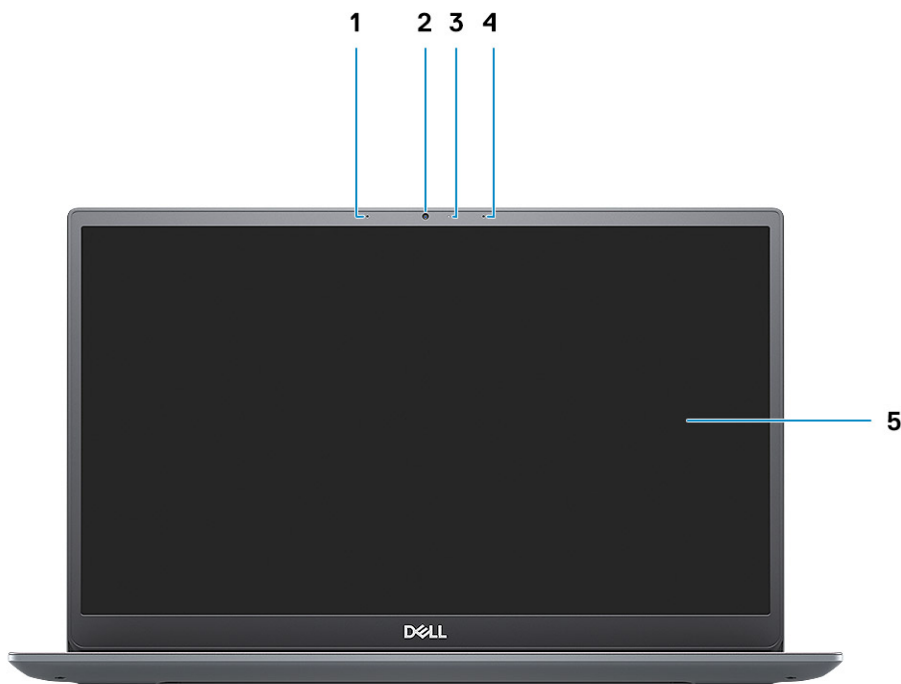

1. Left microphone
2. Camera
3. Camera-status light
4. Right microphone
5. LCD panel

Left view

1. Power connector port
2. Status light
3. HDMI port
4. USB 3.1 Gen1 Type-C port with Display port
5. microSD card slot

Right view



1. Headset port
2. USB 3.1 Gen 1 port




1. uSIM card tray (Black PC only)
2. Universal audio jack (headset/microphone combo)
3. USB 3.1 Gen 1

Palmrest view



1. Power button with optional fingerprint reader
2. Keyboard
3. Touchpad

Bottom view

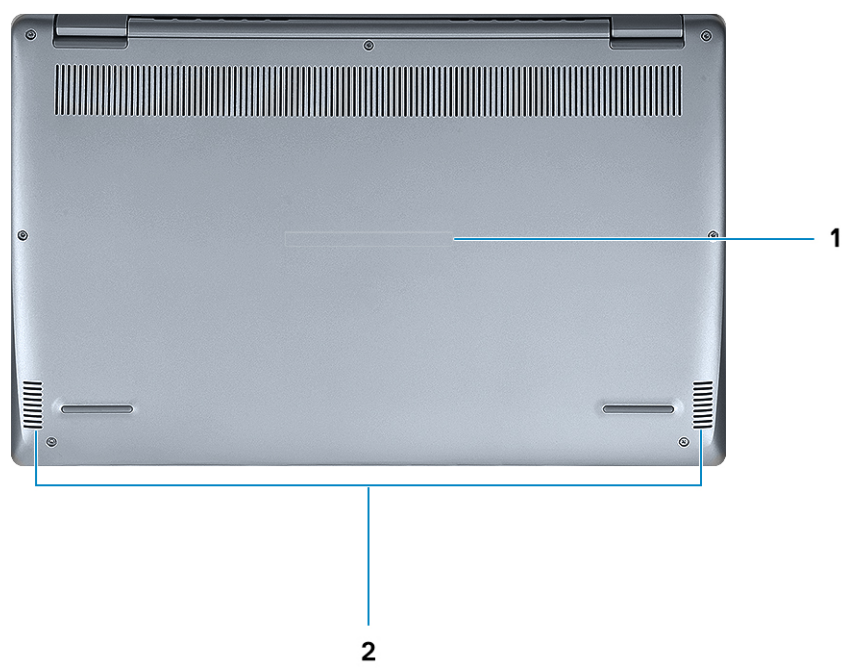

- 1. Service Tag label
- 2. Speakers

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Table 2. List of keyboard shortcuts

Keys	Description
Fn + Esc	Toggle Fn-key lock
Fn + F1	Mute audio
Fn + F2	Decrease volume
Fn + F3	Increase volume
Fn + F4	Play / Pause
Fn + F5	Turn on/off keyboard backlight
Fn + F6	Decrease brightness

Table 2. List of keyboard shortcuts (continued)

Keys	Description
Fn + F7	Increase brightness
Fn + F8	Switch to external display
Fn + F10	Print screen
Fn + F11	Home
Fn + 12	End
Fn + Ctrl	Open application menu

Technical specifications

NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to Help and Support in your Windows operating system and select the option to view information about your computer.

Topics:

- [System information](#)
- [Processor](#)
- [Memory](#)
- [Storage](#)
- [System board connectors](#)
- [Media card-reader](#)
- [Audio](#)
- [Video card](#)
- [Camera](#)
- [Wireless](#)
- [Ports and connectors](#)
- [Display](#)
- [Keyboard](#)
- [Touchpad](#)
- [Fingerprint reader \(FPR\)—optional](#)
- [Operating system](#)
- [Battery](#)
- [Power adapter](#)
- [Sensor and control specifications](#)
- [Dimensions and weight](#)
- [Computer environment](#)
- [Security](#)
- [Security Software](#)

System information

Table 3. System information

Feature	Specifications
Chipset	Integrated in the processor
DRAM bus width	64-bit
FLASH EPROM	32 MB
PCIe bus	Up to Gen3
External bus frequency	Up to 8 GT/s

Processor

NOTE: Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

Table 4. Processor specifications

Type	UMA Graphics
8th Gen Intel Core i7-8565U processor (8 MB cache, 4 core count/ 8 threads, Up to 4.6 GHz, 15 W TDP)	Intel UHD Graphics 620
8th Gen Intel Core i5-8365U processor (6 MB cache, 4 core count/ 8 threads, Up to 4.1 GHz, 15 W TDP)	Intel UHD Graphics 620
8th Gen Intel Core i5-8265U processor (6 MB cache, 4 core count/ 8 threads, Up to 3.9 GHz, 15 W TDP)	Intel UHD Graphics 620
8th Gen Intel Core i3-8145U processor (4 MB cache, 2 core count/ 4 threads, Up to 3.5 GHz, 15 W TDP)	Intel UHD Graphics 620

Memory

Table 5. Memory specifications

Feature	Specifications
Minimum memory configuration	4 GB
Maximum memory configuration	16 GB
Number of slots	Solder down
Maximum memory supported per slot	16 GB
Memory options	• 4 GB (1 x 4 GB) • 8 GB (2 x 4 GB) • 8 GB (1 x 8 GB) • 16 GB (2 x 8 GB) • 16 GB (1 x 16 GB)
Type	LPDDR3
Speed	2133Mhz

Storage

Table 6. Storage specifications

Type	Form factor	Interface	Capacity
Primary Storage	• M.2 2230 SSD • M.2 2280 SSD	• Class 35 • Class 40	• Up to 512 GB • Up to 512 GB
Secondary Storage	M.2 2230	Class 35	Up to 512 GB (Black PC WLAN configuration only, uses the WWAN M.2 slot)

System board connectors

Table 7. System board connectors

Feature	Specifications
M.2 Connectors	

Media card-reader

Table 8. Media-card reader specifications

Feature	Specifications
Type	MicroSD Card - supports up to 2 TB

Audio

Table 9. Audio specifications

Feature	Specifications
Controller	Realtek ALC3204 with Waves MaxxAudio Pro
Stereo conversion	24-bit DAC (Digital-to-Analog) and ADC (Analog-to-Digital)
Type	HD Audio
Speakers	Two
Interface	Internal: • Intel HDA (high-definition audio) External: • 7.1 channel output via HDMI • Digital microphone input on camera module • Headset combo jack (stereo headphones/microphone-in)
Internal speaker amplifier	Integrated in ALC3204 (Class-D 2 W)
External volume controls	Media-control shortcut keys
Speaker output:	Average: 2 W Peak: 2.5 W
Microphone	Digital-array microphones

Video card

Table 10. Video card specifications

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
NVIDIA M250	Discrete	- Intel Core i7-8665U CPU - Intel Core i7-8565U CPU - Intel Core i5-8365U CPU - Intel Core i5-8265U CPU	GDDR5	2 GB	HDMI 1.4b port	1920 x 1200@60 Hz

Camera

Table 11. Camera specifications

Feature	Specifications
Camera Type	2.7mm, 4-element lens, HD RGB camera
Resolution	Still image: 0.92 megapixel Video: 1280 x 720 (HD) at 30 fps
Diagonal viewing angle	74.9 degrees
Sensor type	CMOS sensor technology

Wireless

Table 12. Wireless specifications

Feature	Specifications
WLAN	- Intel Dual Band Wireless AC 9560 Wi-Fi (802.11ac) 2x2 + Bluetooth 5.0 (Bluetooth Optional) - Intel Dual Band Wireless AC 9462 Wi-Fi (802.11ac) 1x1 + Bluetooth 5.0
WWAN	Intel XMM 7360 LTE-Advanced, Cat 9

Ports and connectors

Table 13. Ports and connectors

Feature	Specifications
Memory card reader	1 x MicroSD 3.0 Card Reader

Table 13. Ports and connectors (continued)

Feature	Specifications
USB	1 x USB Type C 3.1 Gen 1 w/ Power Delivery & DisplayPort 1.2 1 x USB 3.1 Gen 1
Audio	1 x Universal Audio Jack (Headset/Mic combo)
Video	1 x HDMI 1.4
Others	1 x DC-in, 4.5mm barrel 1 x Optional Touch Fingerprint Reader in Power Button

Display

Table 14. Display specifications

Feature	Specifications	
Type	Full High Definition (FHD)	High Definition (HD)
Height (Active area)	165.24 mm (6.50 in)	165.20 mm (6.50 in)
Width (Active area)	293.76 mm (11.60 in)	293.83 mm (11.60 in)
Diagonal	337.04 mm (13.30 in)	337.09 mm (13.30 in)
Pixels Per Inch (PPI)	166	118
Contrast ratio	400:1	400:1
Luminance/Brightness (typical)	300 nits	220 nits
Refresh rate	60 Hz	60 Hz
Horizontal viewing angle (min)	+/- 80 degrees	+/- 45 degrees
Vertical viewing angle (min)	+/- 80 degrees	Upper 15 degrees, lower 35 degrees
Power consumption (max)	4.6 W	4.5 W

Keyboard

Table 15. Keyboard specifications

Feature	Specifications
Number of keys	- United states and Canada : 81 keys - United Kingdom : 82 Keys - Japan : 85 keys
Size	- X= 18.70 mm key pitch - Y= 18.05 mm key pitch
Backlit keyboard	Optional (backlit and Non-backlit)

Table 15. Keyboard specifications (continued)

Feature	Specifications
Layout	QWERTY

Touchpad

Table 16. Touchpad specifications

Feature	Specifications
Resolution	1920 x 1080
Dimensions	- Width : 105 mm (4.13 in.) - Height : 65 mm (2.56 in.)

Table 17. Supported gestures

Supported gestures	Windows 10
Cursor moving	Supported
Clicking/ tapping	Supported
Click and drag	Supported
2-finger scroll	Supported
2-finger Pinch/ Zoom	Supported
2-finger tap (Right Clicking)	Supported
3-finger tap (Invoke Cortana)	Supported
3-finger swipe up (See all open windows)	Supported
3-finger swipe down (Show the desktop)	Supported
3-finger swipe right or left (Switch between open windows)	Supported
4-finger tap (Invoke Action Center)	Supported
4-finger swipe right or left (Switch virtual desktops)	Supported

Fingerprint reader (FPR)—optional

Table 18. Fingerprint reader specifications

Feature	Specifications
Type	FPR in power button
Sensor technology	Capacitive
Sensor resolution	500 ppi
Sensor area	4.06 mm x 3.25 mm

Operating system

Table 19. Operating system

Feature	Specifications
Operating systems supported	• Windows 10 Home (64 bit) • Windows 10 Professional (64bit) • Ubuntu 16.04 LTS 64-bit

Battery

Table 20. Battery

Feature	Specifications	
Type	• 4-cell "smart" lithium-ion (45 WHr) • 4-cell "smart" lithium-ion (52 WHr)	
Dimension	Width	4.30 mm (0.17 in.)
	Depth	257.60 mm (10.17 in.)
	Height	97.04 mm (3.82 in.)
Weight (maximum)	0.22 kg (0.49 lb)	
Voltage	7.60 VDC	
Life span	300 discharge/charge cycles	
Charging time when the computer is off (approximate)	4 hours (when the computer is off)	
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	
Temperature range: Operating	0°C to 35°C (32°F to 95°F)	
Temperature range: Storage	-40°C to 65°C (-40°F to 149°F)	
Coin-cell battery	CR-2032  NOTE: It is recommended that you use a Dell coin-cell battery for your computer. Dell does not provide warranty coverage for problems caused by using accessories, parts, or components not supplied by Dell.	

Power adapter

Table 21. Power adapter specifications

Feature	Specifications	
Type	65 W E4	65 W Type C
External diameter (mm)	4.50 mm	
Internal diameter (mm)	2.90 mm	
Input Voltage	100 VAC - 240 VAC	100 VAC - 240 VAC

Table 21. Power adapter specifications (continued)

Feature	Specifications	
Input current (maximum)	1.6 A /1.7 A	1.7 A
Input frequency	50 Hz to 60 Hz	50 Hz to 60 Hz
Output current	3.34 A (continuous)	20 V/3.25 A (continuous) 15 V/3 A (continuous) 9.0 V/3 A (continuous) 5.0 V/3 A (continuous)
Rated output voltage	19.50 VDC	20 VDC/15 VDC/9 VDC/5 VDC
Weight	0.29 kg (0.64 lbs)	0.22 kg (0.48 lbs)
Adapter size	Dimensions In Inches: 1.10 x 1.90 x 4.30 In mm: 28 x 47 x 108	Dimensions In Inches: 1.1 x 2.0 x 4.4 In mm: 28 x 51 x 112
Temperature range (Operating)	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Storage (Operating)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Sensor and control specifications

Table 22. Sensor and control specifications

Specifications
1. Free fall sensor on motherboard
2. Hall Effect Sensor (Detects when the lid is closed)

Dimensions and weight

Table 23. Dimensions and weight

Feature	Specifications
Height	16.80 mm / 0.66 in.(PC) 14.90 mm / 0.59 in.(AI)
Width	307.6mm / 12.11 in.(PC) 307.6mm / 12.11 in.(AI)
Depth	204.50 mm / 8.05 in.(PC) 204.50 mm / 8.05 in.(AI)
Weight	1.18 kg / 2.61 lb (PC) 1.17 kg / 2.59 lb (AI)

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 24. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	10% to 95% (non-condensing)
Vibration (maximum)	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G‡
Altitude (maximum)	-15.2 m to 3048 m (-50 ft to 10,000 ft)	N/A

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Security

Table 25. Security

Feature	Specifications
Trusted Platform Module (TPM) 2.0	Integrated on the system board
Firmware TPM	Optional
Windows Hello Support	Yes, optional fingerprint on power button
FIPS 140-2 certification for TPM	Yes
Fingerprint Reader Only	Touch Fingerprint reader in power button tied to Control vault 3

Security Software

Table 26. Security Software specifications

Specifications
Dell Client Command Suite
Optional Dell Data Security and Management Software • Dell Endpoint Security Suite Enterprise • Dell Data Guardian • Dell Encryption Enterprise • Dell Encryption Personal • Dell Threat Defense • MozyPro or MozyEnterprise • RSA NetWitness Endpoint • RSA SecurID Access • VMware Workspace ONE • Absolute Endpoint Visibility and Control

Drivers and downloads

When troubleshooting, downloading or installing drivers it is recommended that you read the Dell Knowledge Based article, Drivers and Downloads FAQ [000123347](#).

BIOS setup

 **CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

 **NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

 **NOTE:** Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Topics:

- [BIOS overview](#)
- [Entering BIOS setup program](#)
- [Navigation keys](#)
- [One time boot menu](#)
- [System setup options](#)
- [Updating the BIOS](#)
- [System and setup password](#)
- [Clearing BIOS \(System Setup\) and System passwords](#)

BIOS overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

Entering BIOS setup program

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS setup program.

 **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Navigation keys

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Table 27. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.

Table 27. Navigation keys (continued)

Keys	Navigation
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.  NOTE: For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F12 immediately.

 **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
 **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

System setup options

 **NOTE:** Depending on the laptop and its installed devices, the items listed in this section may or may not appear.

General options

Table 28. General

Option	Description
System Information	Displays the following information: • System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code. • Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM A size, and DIMM B size • Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology. • Device Information: Displays Primary HDD, ODD Device, M.2 SATA SSD, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Video BIOS Version, Video Memory, Panel type, Native Resolution, Audio Controller, Wi-Fi Device, and Bluetooth Device.
Battery Information	Displays the battery status health and whether the AC adapter is installed.

Table 28. General (continued)

Option	Description
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list.
Advanced Boot Options	Allows you to select the Legacy Option ROMs option, when in UEFI boot mode. By default, no option is selected. • Enable Legacy Option ROMs • Enable Attempt Legacy Boot
UEFI Boot Path Security	This option controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu. • Always, Except Internal HDD—Default • Always • Never
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

System information

Table 29. System Configuration

Option	Description
Integrated NIC	Allows you to configure the on-board LAN controller. • Disabled = The internal LAN is off and not visible to the operating system. • Enabled = The internal LAN is enabled. • Enabled w/PXE = The internal LAN is enabled (with PXE boot) (selected by default)
SATA Operation	Allows you to configure the operating mode of the integrated hard drive controller. • Disabled = The SATA controllers are hidden • AHCI = SATA is configured for AHCI mode • RAID ON = SATA is configured to support RAID mode (selected by default)
Drives	Allows you to enable or disable the various drives on-board: • SATA-0 (enabled by default) • SATA-1 (enabled by default) • SATA-2 (enabled by default) • M.2 PCIe SSD-0 (enabled by default)
Smart Reporting	This field controls whether hard drive errors for integrated drives are reported during system startup. The Enable Smart Reporting option is disabled by default.
USB Configuration	Allows you to enable or disable the integrated USB controller for: • Enable USB Boot Support • Enable External USB Port All the options are enabled by default.
Audio	Allows you to enable or disable the integrated audio controller. The option Enable Audio is selected by default. • Enable Microphone • Enable Internal Speaker Both the options are selected by default.
Miscellaneous Devices	Allows you to enable or disable the following devices: • Enable Camera (enabled by default)

Video

Option Description

LCD Brightness Allows you to set the display brightness depending up on the power source—On Battery and On AC. The LCD brightness is independent for battery and AC adapter. It can be set using the slider.

 **NOTE:** The video setting is visible only when a video card is installed into the system.

Security

Table 30. Security

Option	Description
Admin Password	Allows you to set, change, and delete the admin password.
System Password	Allows you to set, change, and delete the system password.
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for a administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart. - Disabled — Always prompt for the system and internal HDD password when they are set. This option is enabled by default. - Reboot Bypass — Bypass the password prompts on Restarts (warm boots).  NOTE: The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.
Password Change	This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set. Allow Non-Admin Password Changes - This option is enabled by default.
Non-Admin Setup Changes	Determines whether changes to the setup option are permitted when an administrator password is set.
UEFI Capsule Firmware Updates	This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)
TPM 2.0 Security	Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system. - TPM On (default) - Clear - PPI Bypass for Enable Commands - PPI Bypass for Disable Commands - PPI Bypass for Clear Commands - Attestation Enable (default) - Key Storage Enable (default) - SHA-256 (default) Choose any one option: - Disabled - Enabled (default)

Table 30. Security (continued)

Option	Description
Computrace(R)	This field lets you Activate or Disable the BIOS module interface of the optional Computrace Service from Absolute Software. Enables or disables the optional Computrace service designed for asset management. - Deactivate - Disable - Activate - This option is selected by default.
OROM Keyboard Access	This option determines whether users are able to enter Option ROM configuration screen via hotkeys during boot. - Enabled (default) - Disabled - One Time Enable
Admin Setup Lockout	Allows you to prevent users from entering Setup when Admin password is set. This option is not set by default.
Master Password Lockout	Allows you to disable master password support Hard Disk passwords need to be cleared before the settings can be changed. This option is not set by default.
SMM Security Mitigation	Allows you to enable or disable additional UEFI SMM Security Mitigation protections. This option is not set by default.

Secure boot

Table 31. Secure Boot

Option	Description
Secure Boot Enable	Allows you to enable or disable Secure Boot feature Secure Boot Enable This option is selected by default.
Secure Boot Mode	Allows you to modify the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures. - Deployed Mode (default) - Audit Mode
Expert key Management	Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are: - PK (default) - KEK - db - dbx If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are: Save to File- Saves the key to a user-selected file Replace from File- Replaces the current key with a key from a user-selected file Append from File- Adds a key to the current database from a user-selected file Delete- Deletes the selected key Reset All Keys- Resets to default setting Delete All Keys- Deletes all the keys  NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.

Intel Software Guard Extensions

Table 32. Intel Software Guard Extensions

Option	Description
Intel SGX Enable	This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS. Click one of the following options: • Disabled • Enabled • Software controlled—Default
Enclave Memory Size	This option sets SGX Enclave Reserve Memory Size Click one of the following options: • 32 MB • 64 MB • 128 MB—Default

Performance

Table 33. Performance

Option	Description
Multi Core Support	This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores. • All—Default • 1
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep mode of processor. • Enable Intel SpeedStep This option is set by default.
C-States Control	Allows you to enable or disable the additional processor sleep states. • C states This option is set by default.
Intel TurboBoost	Allows you to enable or disable the Intel TurboBoost mode of the processor. • Enable Intel TurboBoost This option is set by default.
Hyper-Thread Control	Allows you to enable or disable the HyperThreading in the processor. • Disabled • Enabled—Default

Power management

Option	Description
AC Behavior	Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected. Default setting: Wake on AC is not selected.
Enable Intel Speed Shift Technology	• Enable Intel Speed Shift Technology Default setting: Enabled
Auto On Time	Allows you to set the time at which the computer must turn on automatically. The options are: • Disabled • Every Day • Weekdays • Select Days Default setting: Disabled
USB Wake Support	Allows you to enable USB devices to wake the system from Standby.  NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power. • Enable USB Wake Support
Wake on WLAN	Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal. • Disabled • WLAN Default setting: Disabled
Peak Shift	This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached. • Enable peak shift—is disabled • Set battery threshold (15% to 100%) - 15 % (enabled by default)
Advanced Battery Charge Configuration	This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non work hours to improve the battery health. Enable Advanced Battery Charge Mode- is disabled
Primary Battery Charge Configuration	Allows you to select the charging mode for the battery. The options are: • Adaptive—enabled by default • Standard—Fully charges your battery at a standard rate. • ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology. • Primarily AC use • Custom If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.  NOTE: All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.

POST behavior

Option	Description
Adapter Warnings	Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters.

Option	Description
	Default setting: Enable Adapter Warnings
Numlock Enable	Allows you to enable the Numlock option when the computer boots. Enable Network. This option is enabled by default.
Fn Lock Options	Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are: • Fn Lock—enabled by default • Lock Mode Disable/Standard—enabled by default • Lock Mode Enable/Secondary
Fastboot	Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are: • Minimal—enabled by default • Thorough • Auto
Extended BIOS POST Time	Allows you to create an extra preboot delay. The options are: • 0 seconds—enabled by default. • 5 seconds • 10 seconds
Full Screen Log	• Enable Full Screen Logo—not enabled
Warnings and errors	• Prompt on warnings and errors—enabled by default • Continue on warnings • Continue on warnings and errors
Sign of Life Indication	• Enable Sign of Life Keyboard Backlight Indication—enabled by default

Virtualization support

Option	Description
Virtualization	This field specifies whether a virtual Machine Monitor (VMM) can utilize the conditional hardware capabilities provided by Intel Virtualization Technology. Enable Intel Virtualization Technology—enabled by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable VT for Direct I/O - enabled by default.
Trusted Execution	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and the Virtualization technology for direct I/O must be enabled to use this feature. Trusted Execution - disabled by default.

Wireless

Option Description

Wireless Switch	Allows to set the wireless devices that can be controlled by the wireless switch. The options are: • WLAN • Bluetooth
------------------------	--

Option Description

All the options are enabled by default.

 **NOTE:** For WLAN enable or disable controls are tied together and they cannot be enabled or disabled independently.

Wireless Device Enable	Allows you to enable or disable the internal wireless devices. • WLAN • Bluetooth All the options are enabled by default.
-------------------------------	---

Maintenance screen

Option	Description
Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
BIOS Downgrade	This controls flashing of the system firmware to previous revisions. Option 'Allow BIOS downgrade' is enabled by default.
Data Wipe	This field allows users to erase the data securely from all internal storage devices. Option 'Wipe on Next boot' is not enabled by default. The following is list of devices affected: • Internal SATA HDD/SSD • Internal M.2 SATA SDD • Internal M.2 PCIe SSD • Internal eMMC
BIOS Recovery	This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key. • BIOS Recovery from Hard Drive—enabled by default • Always perform integrity check—disabled by default

System logs

Option	Description
BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.
Thermal Events	Allows you to view and clear the System Setup (Thermal) events.
Power Events	Allows you to view and clear the System Setup (Power) events.

SupportAssist System Resolution

Option	Description
Auto OS Recovery Threshold	Allows you to control the automatic boot flow for SupportAssist System. Options are: • Off • 1 • 2 (Enabled by default) • 3
SupportAssist OS Recovery	Allows you to recover the SupportAssist OS Recovery (Disabled by default)

Updating the BIOS

Updating the BIOS in Windows

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

1. Go to www.dell.com/support.
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, see knowledge base article [000124211](https://www.dell.com/support/article/000124211) at www.dell.com/support.

Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](https://www.dell.com/support/article/000131486) at www.dell.com/support.

Updating the BIOS using the USB drive in Windows

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, see the knowledge base article [000145519](https://www.dell.com/support/article/000145519) at www.dell.com/support.
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

CAUTION: If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.

NOTE: Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

CAUTION: Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

System and setup password

Table 34. System and setup password

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

CAUTION: The password features provide a basic level of security for the data on your computer.

CAUTION: Anyone can access the data that is stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

To enter the system setup, press F12 immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - At least one special character: ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | }
 - Numbers 0 through 9.
 - Upper case letters from A to Z.
 - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the pop-up message.
5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F12 immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Clearing BIOS (System Setup) and System passwords

To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

 **NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 35. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support. For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer.
Dell knowledge base articles for a variety of computer concerns	1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.