



# User's Guide

Dell C7017T

Regulatory model: C7017Tf



 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

**© 2016 Dell Inc. All rights reserved.**

Information in this document is subject to change without notice. Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™ and the DELL logo are trademarks of Dell Inc.; Microsoft®, Windows®, and the Windows start button logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

**2016 –07      Rev. A01**

# Contents


<b>About Your Monitor</b> .....	<b>5</b>
Package Contents .....	5
Product Features .....	7
Remote Control .....	8
Identifying Parts and Controls .....	11
Monitor Specifications .....	14
Plug and Play Capability .....	23
LCD Monitor Quality & Pixel Policy .....	27
Maintenance Guidelines .....	28
<b>Setting Up the Monitor</b> .....	<b>29</b>
Connecting Your Monitor .....	29
Wall Mounting .....	32
<b>Operating the Monitor</b> .....	<b>33</b>
Power On the Monitor .....	33
Using the Front-Panel Controls .....	33
Using the On-Screen Display (OSD) Menu .....	34
Touch OSD Control .....	47
OSD Messages .....	48
Setting the Maximum Resolution .....	51
Dell Web Management for Monitors .....	53






<b>Troubleshooting</b> .....	<b>59</b>
Self-Test .....	59
Built-in Diagnostics .....	60
Common Problems .....	61
Product-Specific Problems .....	64
Universal Serial Bus (USB) Specific Problems .....	65
Mobile High-Definition Link (MHL) Specific Problems .....	66
Touch Problems .....	66
Ethernet Problems .....	67
<b>Appendix</b> .....	<b>68</b>
Safety Instructions . 678FCC Notices (U.S. Only) and Other Regulatory Information .....	68
Contact Dell. ....	68

# About Your Monitor

## Package Contents

Your monitor ships with all the components shown below. Ensure that you have received all the components and **Contact Dell** if anything is missing.

 **NOTE:** Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.

	<ul style="list-style-type: none"><li>• Monitor</li></ul>
	<ul style="list-style-type: none"><li>• Remote Control &amp; Batteries (AAA x 2)</li></ul>
	<ul style="list-style-type: none"><li>• Remote control holder</li></ul>
	<ul style="list-style-type: none"><li>• Stylus</li></ul>
	<ul style="list-style-type: none"><li>• Stylus holder</li></ul>

 <p>LSA1U</p>	<ul style="list-style-type: none"> <li>• LSA1U Wall Mount Kit</li> </ul>
	<ul style="list-style-type: none"> <li>• Wire Saddle</li> </ul>
	<ul style="list-style-type: none"> <li>• Power Cable (varies with countries)</li> </ul>
	<ul style="list-style-type: none"> <li>• VGA Cable</li> </ul>
	<ul style="list-style-type: none"> <li>• HDMI Cable</li> </ul>
	<ul style="list-style-type: none"> <li>• DP Cable</li> </ul>
	<ul style="list-style-type: none"> <li>• USB 3.0 upstream cable (enables the USB ports on the monitor)</li> </ul>
	<ul style="list-style-type: none"> <li>• Drivers and Documentation media</li> <li>• Quick Setup Guide</li> <li>• Safety and Regulatory Information</li> </ul>

# Product Features

The Dell C7017T flat-panel display has an active matrix, Thin-Film Transistor, Liquid Crystal Display and LED backlight. The monitor's features include:

- **C7017T:** 176.563 cm (69.513 inches) diagonal viewable image size, 1920 x 1080 resolution, plus full-screen support for lower resolutions.
- Video Electronics Standards Association (VESA) 400 mm mounting holes.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media which includes an information file (INF), Image Color Matching File (ICM), and product documentation.
- Dell Display Manager Software.
- ENERGY STAR certificated.
- Asset Management Capability.
- CECP (for China).
- Energy Gauge shows the energy level being consumed by the monitor in real time.
- Analog backlight dimming control for flicker free display.




# Remote Control



## 1. Power On/Off

Switch this monitor on or off.

## 2. Input Source

Select input source. Press  or  button to select from VGA or DP or HDMI1 or HDMI2 or HDMI3 . Press  button to confirm and exit.

## 3. Up

Press to move the selection up in OSD menu.

## 4. Left

Press to move the selection left in OSD menu.

## 5. Down

Press to move the selection down in OSD menu.

## 6. Menu

Press to turn on the OSD menu.

## 7. Brightness -

Press to decrease the Brightness.

## 8. Volume -

Press to decrease the Volume.

## 9. MUTE

Press to turn the mute function on/off.

## 10.Preset Modes

Display information about Preset Modes.

## 11. Right

Press to move the selection right in OSD menu.

## 12. OK

Confirm an entry or selection.

## 13. Exit

Press to exit the Menu.

## 14. Brightness +

Press to increase the Brightness.

## 15. Volume +

Press to increase the Volume.



## How to enter and exit White Board Mode :


The OSD menu must not be on the screen for this feature, Press ◀ button, the White Board Mode be active, Press ▶ button ,the mode is disabled.

## Inserting the batteries in the remote control

The remote control is powered by two 1.5V AAA batteries.

To install or replace batteries:

1. Press and then slide the cover to open it.
2. Align the batteries according to the (+) and (-) indications inside the battery compartment.
3. Replace the cover.

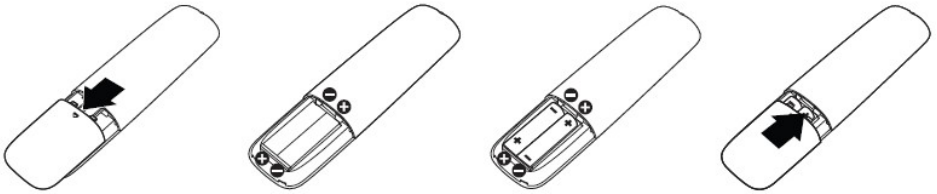

**CAUTION:** The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- Place “AAA” batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- Do not mix battery types.
- Do not combine new batteries with used ones. It causes shorter life or leakage of batteries.
- Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.



**NOTE:** If you do not intend to use the remote control for a long period, remove the batteries.

## Handling the remote control


- Do not subject to strong shock.
- Do not allow water or other liquids to splash on the remote control. If the remote control gets wet, wipe it dry immediately.
- Avoid exposure to heat and steam.
- Other than to install the batteries, do not open the remote control.

# Operating range of the remote control

Point the top of the remote control toward the LCD monitor's remote sensor during button operation.

Use the remote control within a distance of about 8 m from remote control sensor or at a horizontal and vertical angle of within  $15^\circ$  within a distance of about 5.6 m.

 **NOTE:** The remote control may not function properly when the remote control sensor on the display is under direct sunlight or strong illumination, or when there is an obstacle in the path of signal transmission.

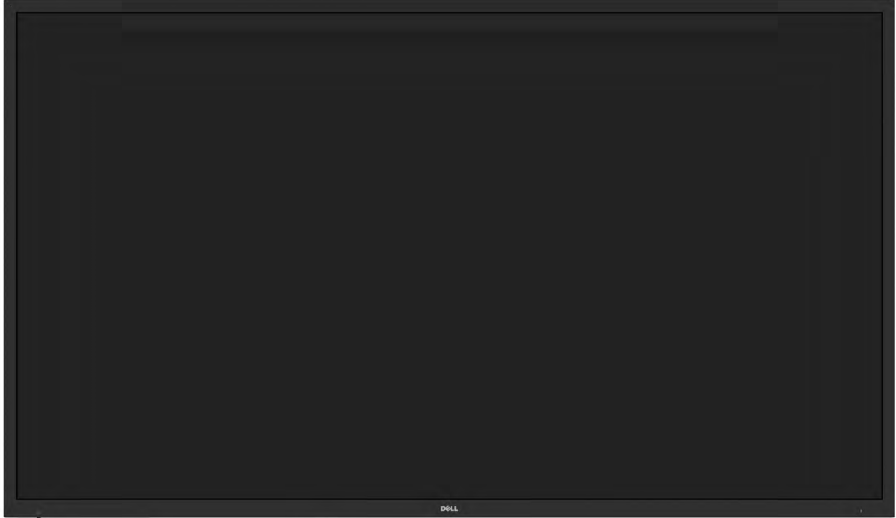


# Identifying Parts and Controls

Front View




1	IR Lens (with LED indicator)
2	Function buttons (For more information, see <a href="#">Operating the Monitor</a> )
3	Power On/Off button (with LED indicator)

## Back View

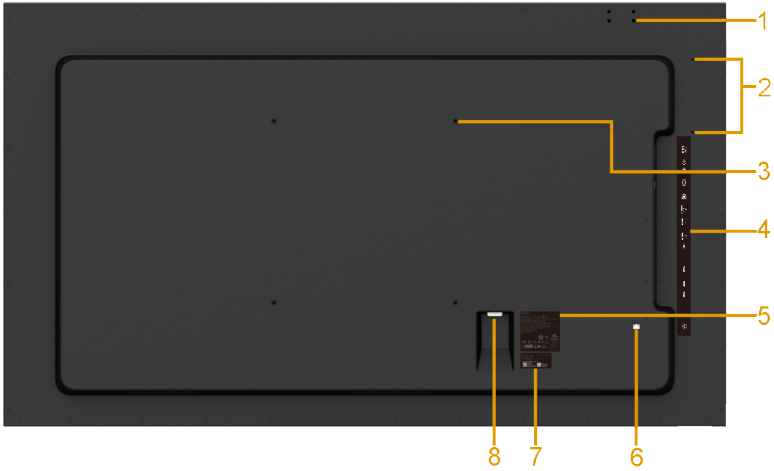

Label	Description	Use
1	Screw Hole	For Accessory mounting.
2	Wire Saddle hole	For accessory wire saddle placement.
3	VESA mounting holes (400 mm)	To mount the monitor.
4	RCA label	Indicates the connector type.
5	Regulatory rating label	Lists the regulatory approvals.
6	RJ-45 connector	For remote control use.
7	Barcode serial number label	Refer to this label if you need to contact Dell for technical support.
8	AC power connector	Connect the monitor power cable.

## Side View

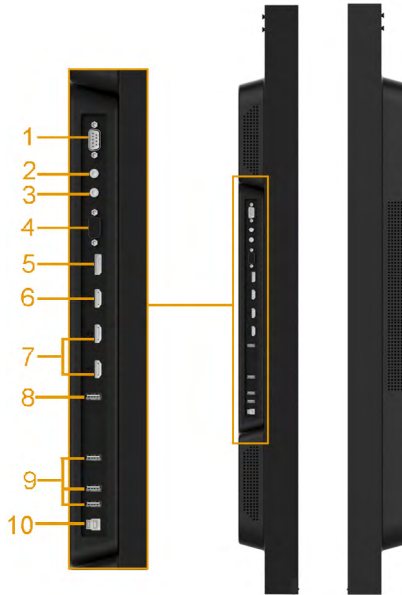

Label	Description	Use
1	RS232 connector	Connect your computer with RS232 cable.
2	Audio Out	Connect the soundbar mini stereo plug (Supports two channel output ).
3	Audio in	Analog audio (two channel) input.
4	VGA connector	Connect your computer to the monitor with VGA cable.
5	DisplayPort connector	Connect your computer with DP cable.
6	HDMI/MHL connector	Connect your computer with HDMI cable. Connect your MHL devices with MHL cable.
7	HDMI connector	Connect your computer with HDMI cable.
8	USB Down Stream Port (Dedicated Charging Port)	Connect your USB devices for charging. DCP port is for charging devices and has no data lines.
9	USB Down Stream Port	Connect your USB devices.
10	USB upstream port	Connect the USB cable that came with your monitor to the computer. Once this cable is connected, you can use the USB connectors on the monitor.

## Bottom View



1	Speakers
---	----------

## Monitor Specifications


The following sections give you information about the various power management modes and pin assignments for the various connectors of your monitor.

### Power Management Modes

If you have VESA's DPM compliance display card or software installed in your PC, the monitor automatically reduces its power consumption when not in use. This is referred to as Power Save Mode. If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power-saving feature:


VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	White	230 W (Maximum)** 145 W (Typical)
Active-off mode	Inactive	Inactive	Blank	Glowing white	Less than 0.5 W
Switch off	-	-		Off	Less than 0.3 W *
Network Standby mode	Inactive	Inactive	Blank	Glowing white	Less than 3 W

Energy Star	Power Consumption
P <sub>ON</sub>	120 W***

 **NOTE:** Based on IEC/EN 62301 test method, the power consumption of Active-off mode & Switch off mode is measured with the network disabled.

It supports normal operation & Network Standby mode While enable to network feature.

The OSD will only function in the *normal operation* mode. When any button except power button is pressed in Active-off mode, the following messages will be displayed:

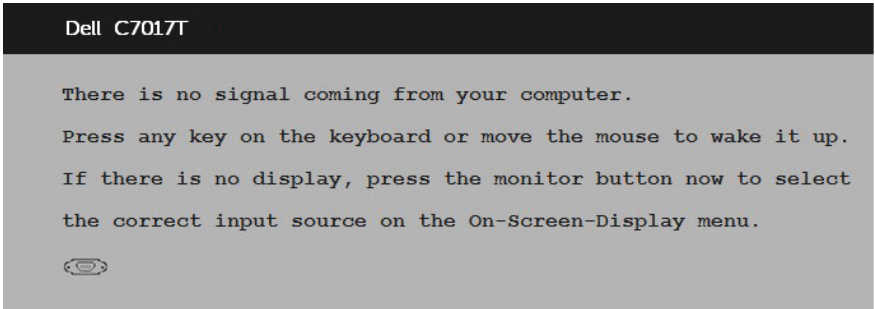

Activate the computer and monitor to gain access to the **OSD**.

 **NOTE:** The Dell C7017T monitor is ENERGY STAR®-certificated.




- \* Zero-power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.
- \*\* Maximum power consumption with max luminance and contrast.
- \*\*\* Energy consumption (On Mode) is tested at 230 Volts / 50 Hz.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.


# Pin Assignments

## RS232 connector

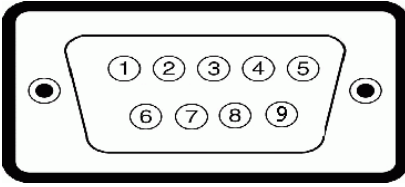

Pin Number	Monitor Side of the 9-pin Side Signal Cable
1	
2	RX
3	TX
4	
5	GND
6	
7	Not Used
8	Not Used
9	

## VGA connector

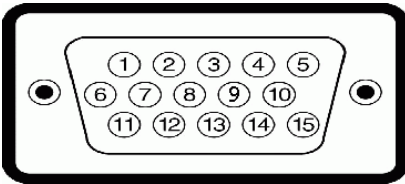


Pin Number	Monitor Side of the 15-pin Side Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B




9	DDC +5 V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

### DisplayPort Connector

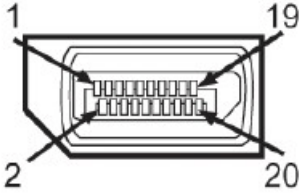


Pin Number	20-pin Side of the Connected Signal Cable
1	ML0(p)
2	GND
3	ML0(n)
4	ML1(p)
5	GND
6	ML1(n)
7	ML2(p)
8	GND
9	ML2(n)
10	ML3(p)
11	GND
12	ML3(n)
13	GND
14	GND
15	AUX(p)
16	GND
17	AUX(n)
18	HPD
19	DP_PWR_Return
20	+3.3 V DP_PWR

## HDMI Connector

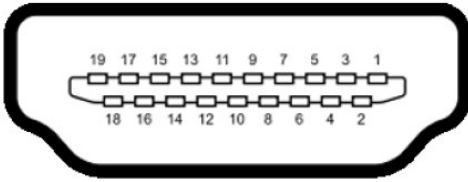



Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5V POWER
19	HOT PLUG DETECT

## MHL Connector

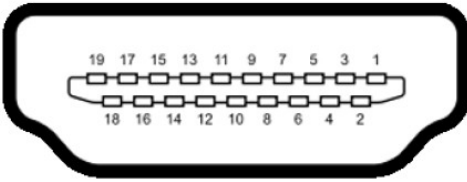

Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	GND
6	TMDS DATA 1-
7	MHL+
8	TMDS DATA 0 SHIELD
9	MHL-
10	TMDS CLOCK+
11	GND
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	GND
18	VBUS (+5V, 900mA maximum)
19	CBUS

# RJ-45 Connector

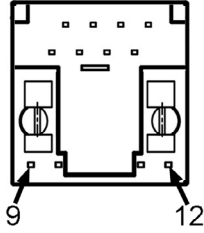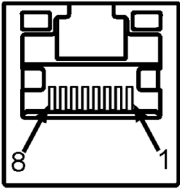

Pin Number	12-pin Side of the Connector
1	D+
2	RCT
3	D-
4	D+
5	RCT
6	D-
7	GND
8	GND
9	LED2_Y+
10	LED2_Y-
11	LED1_G+
12	LED1_G-


# Universal Serial Bus (USB) Interface

This section gives you information about the USB ports that are available on the monitor.

**NOTE :** This monitor is Super-Speed USB 3.0 compatible.

Transfer Speed	Data Rate	Power Consumption
Super-Speed	5 Gbps	4.5W (Max, each port)
High Speed	480 Mbps	4.5W (Max, each port)
Full Speed	12 Mbps	4.5W (Max, each port)

## USB Upstream Connector

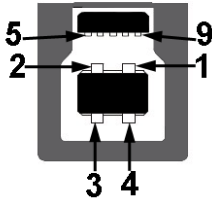

Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSTX-
6	SSTX+
7	GND
8	SSRX-
9	SSRX+

## USB Downstream Connector



Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSTX-
6	SSTX+
7	GND
8	SSRX-
9	SSRX+

### USB Ports

- 1 upstream
- 3 downstream
- 1 Dedicated Charging Port (DCP) - DCP port is for charging devices and has no data lines.



**NOTE:** USB 3.0 functionality requires a USB 3.0-capable computer.



**NOTE:** The monitor's USB interface works only when the monitor is On or in the power-save mode. If you turn Off the monitor and then turn it On, the attached peripherals may take a few seconds to resume normal functionality.

# Plug and Play Capability

You can install the monitor in any Plug and Play compatible system. The monitor automatically provides the computer with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so that the system can configure itself and optimize the monitor settings. Most monitor installations are automatic. You can select different settings if required.


## Flat-Panel Specifications

<b>Model number</b>	<b>C7017T</b>
Screen type	Active matrix - TFT LCD
Panel Type	Vertical Alignment
Viewable image	
Diagonal	1765.63 mm (69.513 inches)
Horizontal Active Area	1538.88 mm (60.59 inches)
Vertical Active Area	865.62 mm (34.08 inches)
Active Area	1332085.31 mm <sup>2</sup> (2064.91 inches <sup>2</sup> )
Pixel pitch	0.802 x 0.802 mm
Viewing angle:	
Horizontal	176° typical
Vertical	176° typical
Luminance output	380 cd/m <sup>2</sup> (typical)
Contrast ratio	3800 to 1 (typical)
Faceplate coating	Antiglare with hard-coating 2H
Backlight	LED light bar system
Response Time	8 ms typical (gray to gray)
Color Depth	1.07 billion colors
Color Gamut	86 % (typical) *

\* C7017T color gamut (typical) is based on CIE1976 (86 %) and CIE1931 (72 %) test standards.


# Touch Specifications

<b>Model number</b>	<b>C7017T</b>
Type	Infrared Touch
Panel Diagonal	69.58 inch
Active Area	Extended beyond Viewing Area
Touch Input Method	Finger, Passive Stylus
Max number of multi-touch	10 points
Touch Accuracy	≤ 2 mm (Over 90% of screen)
Touch Response Time	≤ 15 ms
Operating system	Windows XP, Vista, 7, 8, 8.1, 10, Chrome OS, Android, Linux Mac OS, iOS
Glass Surface	Anti-Glare, Anti-Smudge, Hardness (5H)
Glass Thickness	4 mm

 **NOTE:** Windows XP, Vista, Mac OS are Single Touch.

# Touch OS Compatibility

OS	Version	Touch Points
Windows	XP	Single Touch
	Vista	
	7 home basic	
	7 (Ultimate, Professional, Home Premium)	Multi Touch
	8 (Pro, Enterprise) (Non-OEM version)	
	8.0 / 8.1(Pro, Enterprise) (Non-OEM version)	
	10 (Home, Professional, Enterprise, Educaiton, Non-OEM only)	
Chrome	ver 38 and above	Multi Touch
Mac	Ver 10.11 and above	Single Touch
	Ver 10.6 - 10.10	
	Below Ver 10.6	
Android	Kernel version 3.0 and above	Single Touch

 **NOTE:** Mac OS required install the calibration driver "UDPP" for support single/ multi touch functions. Kindly download the driver from <http://support.dell.com> .



# Resolution Specifications

<b>Model number</b>	<b>C7017T</b>
Scan range	
<ul style="list-style-type: none"> <li>Horizontal</li> <li>Vertical</li> </ul>	30 kHz to 83 kHz (automatic) 23 Hz to 120 Hz (automatic)
Maximum preset resolution	1920 x 1080 at 60 Hz

# Electrical Specifications

<b>Model number</b>	<b>C7017T</b>
Video input signals	<ul style="list-style-type: none"> <li>Analog RGB: 0.7 Volts <math>\pm</math> 5 %, 75 ohm input impedance</li> <li>DisplayPort, 600mV for each differential line, 100 ohm input impedance per differential pair</li> <li>HDMI (MHL), 600mV for each differential line, 100 ohm input impedance per differential pair</li> </ul>
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-free TTL level, SOG (Composite SYNC on green)
AC input voltage / frequency / current	100 VAC to 240 VAC / 50 Hz or 60 Hz $\pm$ 3 Hz / 4.0 A (Max)
Inrush current	120 V: 40 A (Max.) 240 V: 80 A (Max.)

# Preset Display Modes

The following table lists the preset modes for which Dell guarantees image size and centering:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 720 x 400	31.5	70.8	28.3	-/+
VESA, 640 x 480	31.5	59.9	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+

VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 900	60.0	60.0	108.0	+/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+

## MHL Source Display Modes

Display Mode	Frequency (Hz)
640 x 480 p	59.94
720 x 480 p	59.94
720 x 576p	50
1280 x 720p	60
1280 x 720p	50
1920 x 1080i	60
1920 x 1080i	50
1920 x 1080p	30
720 (1440) x 480i	60
720 (1440) x 576i	50

## Physical Characteristics

The following table lists the monitor's physical characteristics:

Model Number	C7017T
Connector type	15-pin D-subminiature (Black connector) DP, Black connector HDMI (MHL)
Signal cable type	VGA DisplayPort HDMI (MHL)
Dimensions:	
Height	932.61 mm (36.72 inches)
Width	1593.5 mm (62.74 inches)
Depth	95.1 mm (3.74 inches)

Weight:	
Weight with packaging	78.6 kg (173.28 lb)
Weight (For wall mount or VESA mount considerations - no cables)	55.5 kg (122.36 lb)

## Environmental Characteristics

The following table lists the environmental conditions for your monitor:

Model Number	C7017T
Temperature	
<ul style="list-style-type: none"> <li>Operating</li> <li>Non-operating</li> </ul>	0 °C to 40 °C (32 °F to 104 °F) Storage: -20 °C to 60 °C (-4 °F to 140 °F) Shipping: -20 °C to 60 °C (-4 °F to 140 °F)
Humidity	
<ul style="list-style-type: none"> <li>Operating</li> <li>Non-operating</li> </ul>	10 % to 80 % (non-condensing) Storage: 5 % to 90 % (non-condensing) Shipping: 5 % to 90 % (non-condensing)
Altitude	
<ul style="list-style-type: none"> <li>Operating</li> <li>Non-operating</li> </ul>	5,000 m (16,404 ft) max 12,191 m (40,000 ft) max
Thermal dissipation	784.99 BTU/hour (maximum) 495.89 BTU/hour (typical)

## LCD Monitor Quality & Pixel Policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state. The visible result is a fixed pixel that appears as an extremely tiny dark or bright discolored spot. When the pixel remains permanently lit, it is known as a "bright dot." When the pixel remains black, it is known as a "dark dot."


In almost every case, these fixed pixels are hard to see and do not detract from display quality or usability. A display with 1 to 5 fixed pixels is considered normal and within competitive standards. For more information, see Dell Support site at:

<http://www.dell.com/support/monitors>.

# Maintenance Guidelines

## Caring for Your Monitor

 **CAUTION: Read and follow the safety instructions before cleaning the monitor.**

 **CAUTION: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.**

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your antistatic screen, slightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- Use a slightly dampened, warm cloth to clean the plastics. Avoid using detergent of any kind as some detergents leave a milky film on the plastics.
- If you notice a white powder when you unpack your monitor, wipe it off with a cloth. This white powder occurs during the shipping of the monitor.
- Handle your monitor with care as a darker-colored monitor may scratch and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and power off your monitor when not in use.

# Setting Up the Monitor


## Connecting Your Monitor

**⚠ WARNING:** Before you begin any of the procedures in this section, follow the **Safety Instructions**.


To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect the VGA / DP / HDMI / MHL cable to the corresponding video port on the back of your computer.


## Connecting VGA Cable

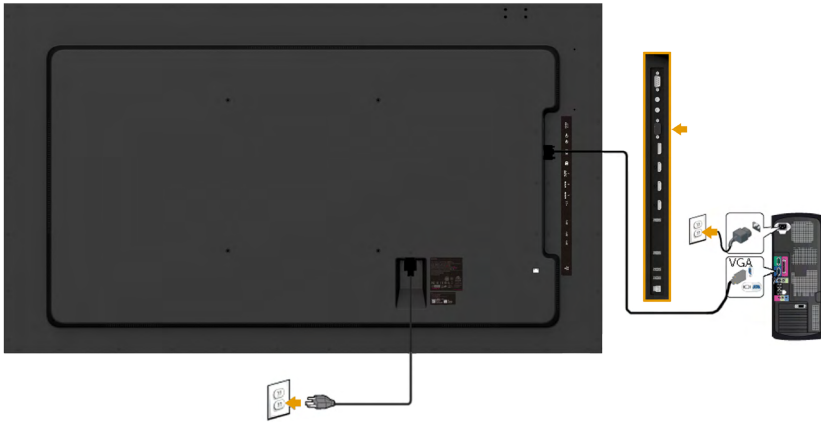


## Connecting DP Cable

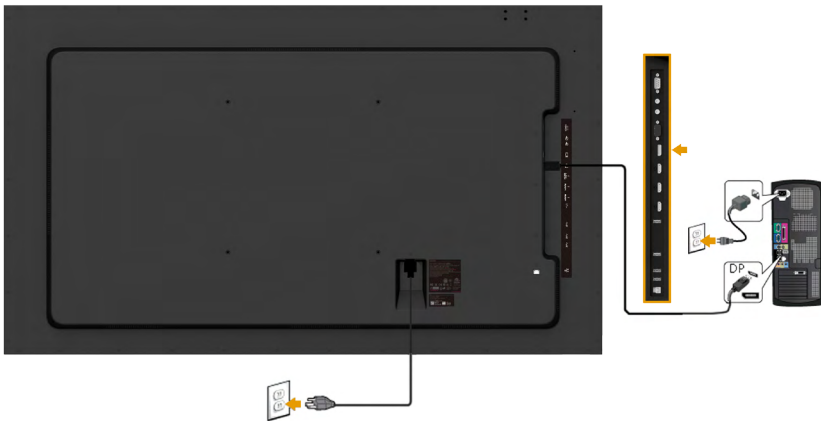

# Connecting HDMI cable

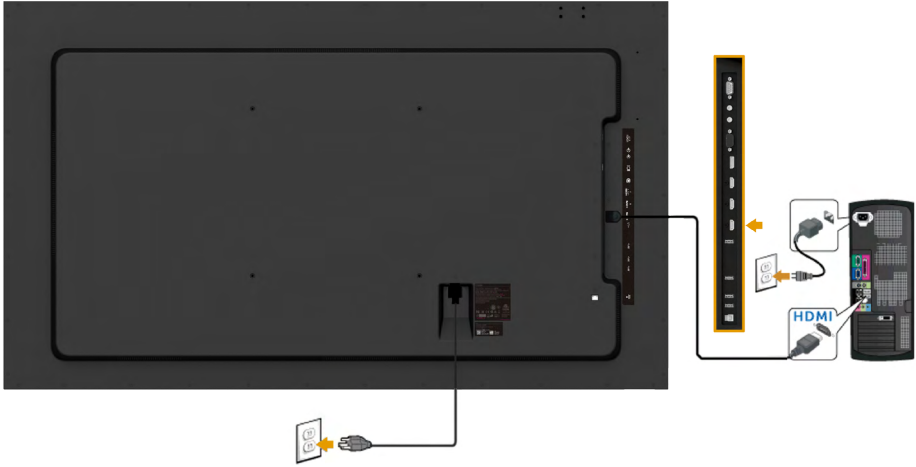


# Connecting MHL cable

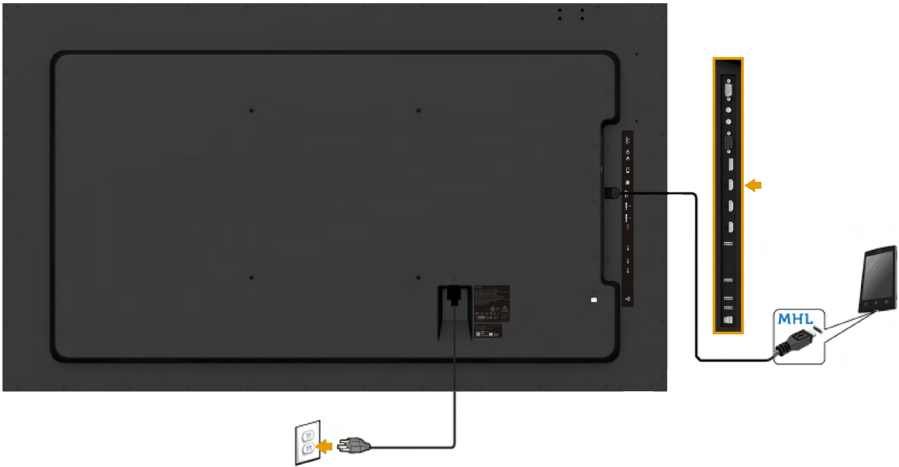

# Connecting USB cable

After you have completed connecting the VGA / DP / HDMI / MHL cable, follow the procedures below to connect the USB cable to the computer and complete your monitor setup:

1. Connect the upstream USB port (cable supplied) to an appropriate USB port on your computer. (See **Side view** for details.)
2. Connect the USB peripherals to the downstream USB ports on the monitor.
3. Plug the power cables for your computer and monitor into a nearby outlet.
4. Turn on the monitor and the computer. If your monitor displays an image, installation is complete. If it does not display an image, see **Solving Problems**.

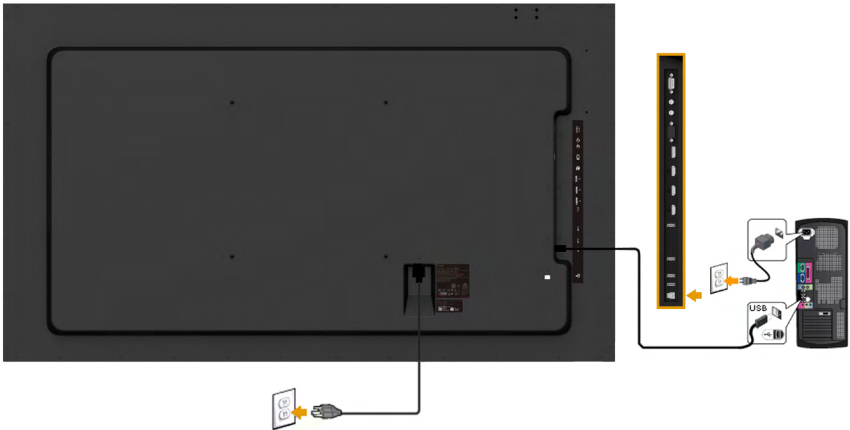

**NOTE:** The graphics are used for the purpose of illustration only. Appearance on the computer may vary.

## Wall Mounting



(Screw dimension: M8 x 20 ~ 30 mm).

Refer **INSTALLATION INSTRUCTIONS** to that come with LSA1U Wall Mount kit and the VESA-compatible base mounting kit (400 x 400 mm distance).

1. Install Wall Plate to Wall.
2. Place the monitor panel on a soft cloth or cushion on a stable flat table
3. Attach the mounting brackets from the wall mounting kit to the monitor.
4. Install Display to Wall Plate.


For more information, see the Wall Mount provider website located at


[http://www.milestone.com/~media/Files/Chief/Manuals/MSA1U\\_MTA1U\\_LSA1U\\_LTA1U-I.pdf](http://www.milestone.com/~media/Files/Chief/Manuals/MSA1U_MTA1U_LSA1U_LTA1U-I.pdf).



# Operating the Monitor

## Power On the Monitor



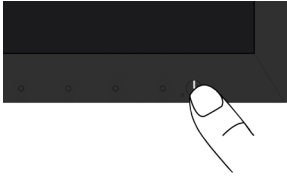

Press the  button to turn on the monitor.



## Using the Front-Panel Controls


Use the keys on the front of the monitor to adjust the image settings.






Front-Panel Keys	Description
A  <b>Preset modes</b>	Use the <b>Preset modes</b> key to choose from a list of preset color modes. See <a href="#">Using the OSD Menu</a> .
B  <b>Volume</b>	Use the <b>Volume</b> key to direct access to the "Volume" control menu.
C  <b>Menu</b>	Use the <b>Menu</b> key to open the on-screen display (OSD).
D  <b>Exit</b>	Use the <b>Exit</b> key to exit on-screen display (OSD) from menu and sub-menus.

## Front-Panel Keys




Front-Panel Keys	Description
A  <b>Up</b>	Use the <b>Up</b> key to adjust (increase ranges) items in the OSD menu.

B	 <b>Down</b>	Use the <b>Down</b> key to adjust (decrease ranges) items in the OSD menu.
C	 <b>OK</b>	Use the <b>OK</b> key to confirm your selection.
D	 <b>Back</b>	Use the <b>Back</b> key to go back to the previous menu.


## Using the On-Screen Display (OSD) Menu


### Accessing the Menu System





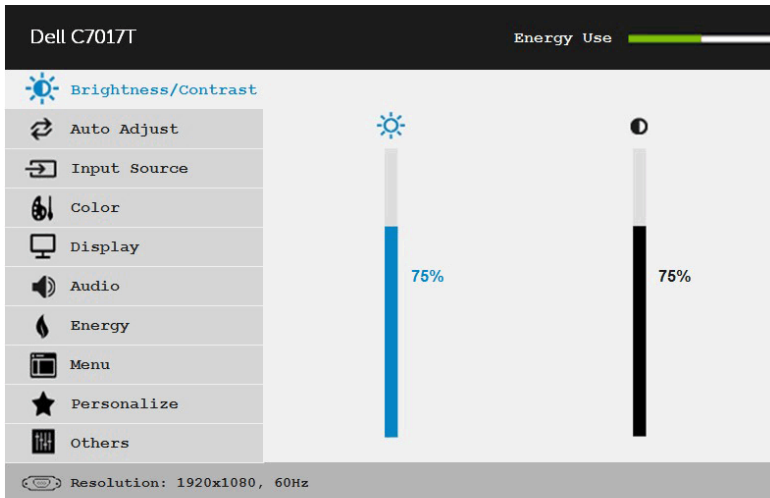



 **NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.



1. Press the  button to open the OSD menu and display the main menu.

#### Main Menu


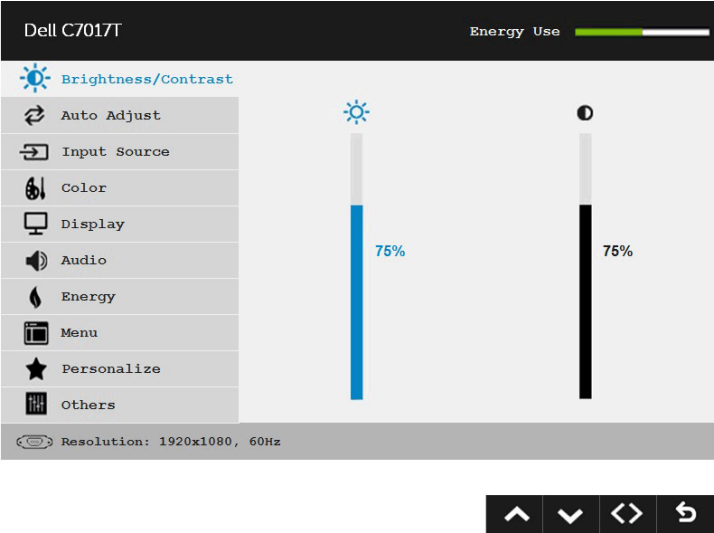






 **NOTE:** Auto Adjust is only available when you use the analog (VGA) connector.

2. Press the  and  buttons to toggle between options in the Menu. As you move from one icon to another, the option name is highlighted.
3. To select the highlighted item on the menu press the  button again.
4. Press the  and  buttons to select the desired parameter.
5. Press the  button to enter the slide bar and then use the  or  buttons, according to the indicators on the menu, to make your changes.

6. Select the  to return to previous menu without accepting current settings or  to accept and return to previous menu.


The table below provides a list of all the OSD menu options and their functions.

Icon	Menu and Submenus	Description
	<b>Energy Use</b>	This meter shows the energy level being consumed by the monitor in real time.
	<b>Brightness/ Contrast</b>	<p>Use the <b>Brightness/Contrast</b> menu to adjust the Brightness/ Contrast.</p> 
	<b>Brightness</b>	<p>Allows you to adjust the brightness or luminance of the backlight.</p> <p>Press the  key to increase brightness and press the  key to decrease brightness (min 0 ~ max 100).</p>
	<b>Contrast</b>	<p>Allows you to adjust the contrast or the degree of difference between darkness and lightness on the monitor screen. Adjust brightness first, and adjust contrast only if you need further adjustment.</p> <p>Press the  key to increase contrast and press the  key to decrease contrast (min 0 ~ max 100).</p>



## Auto Adjust

Use this key to activate automatic setup and adjust menu.

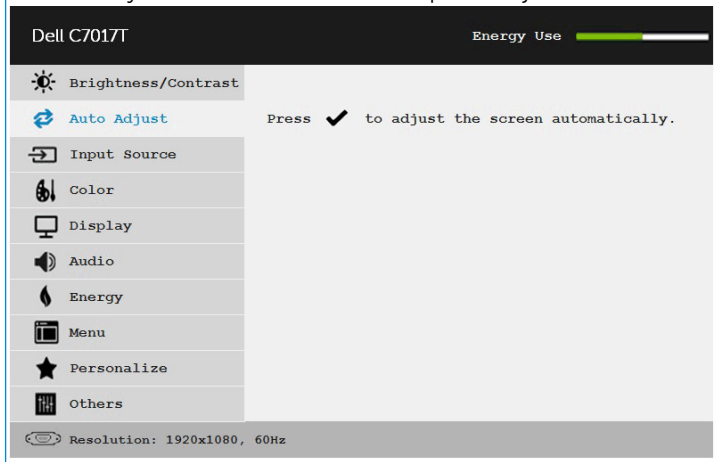

The following dialog appears on a black screen as the monitor self-adjusts to the current input:



Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under **Display**.


**NOTE:** Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables.

This option is only available when you are using the **analog (VGA)** connector.



### Input Source

Use the **Input Source** menu to select between different video signals that may be connected to your monitor.

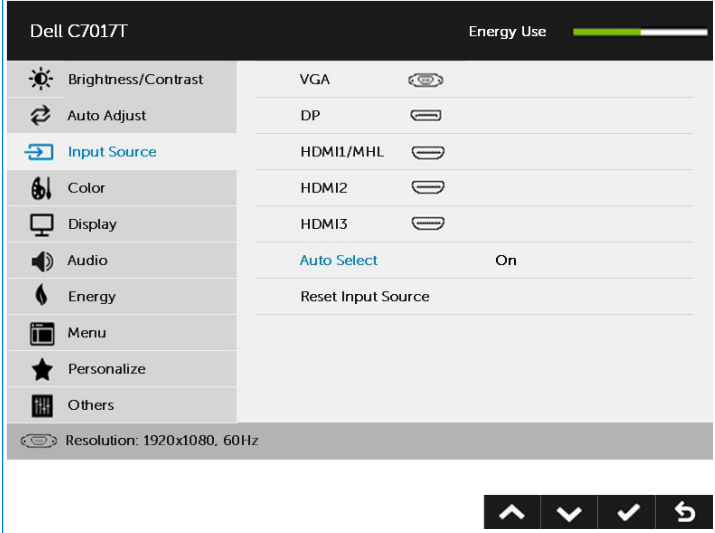

#### VGA

Select **VGA** input when you are using the analog (VGA) connector. Push **▼** to select the VGA input source.

#### DP

Select **DP** input when you are using the DP connector. Push **▼** to select the DP input source.

#### HDMI1/MHL

Select **HDMI1/MHL** input when you are using the HDMI1/MHL connector. Push **▼** to select the HDMI1/MHL input source.

#### HDMI2 HDMI3


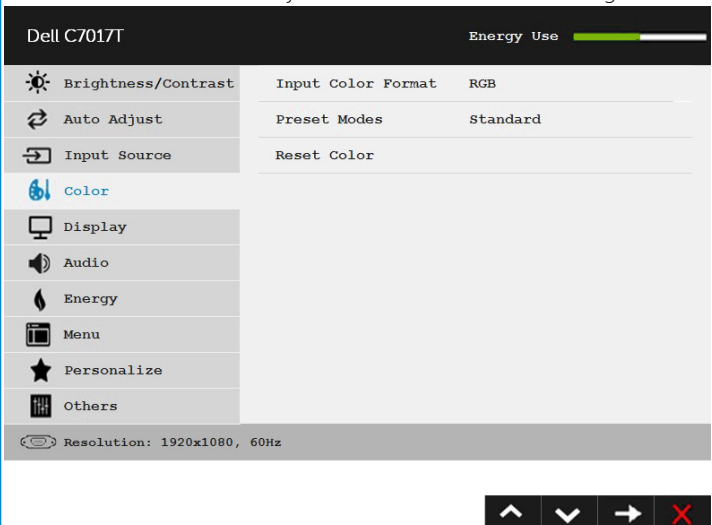
Select **HDMI2 or HDMI3** input when you are using the HDMI2 or HDMI3 connector. Push **▼** to select the HDMI2 or HDMI3 input source.




#### Auto Select


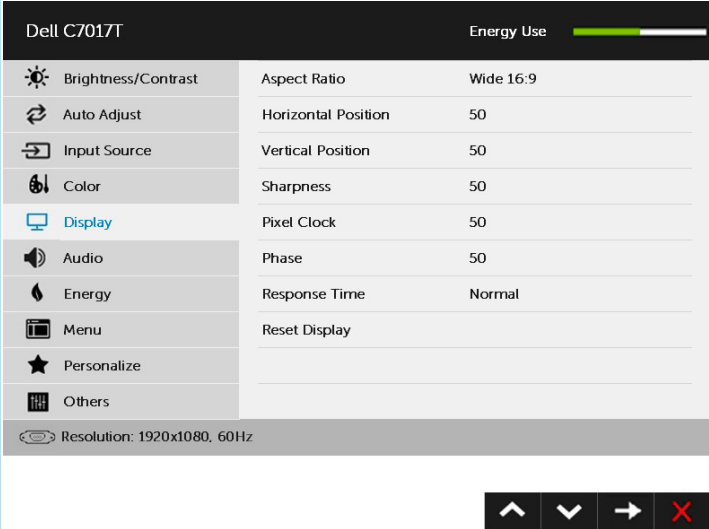








Select **Auto Select** to scan for available input signals.

#### Reset Input Source

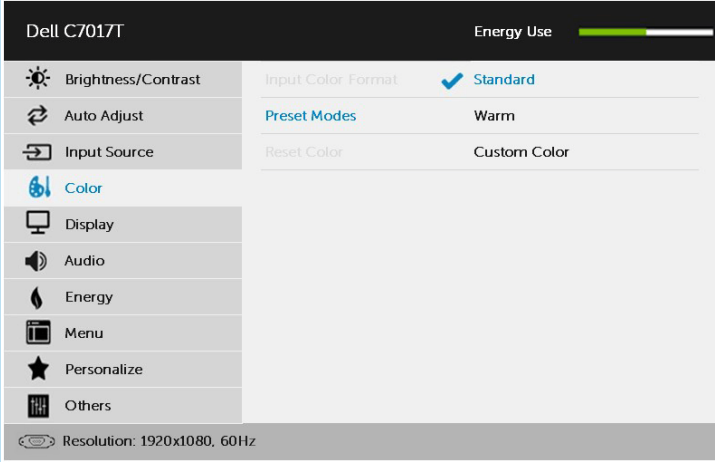Resets your monitor's Input Source settings to the factory defaults.

	<b>Color</b>	<p>Use the <b>Color</b> menu to adjust the monitor's color settings.</p> 
	<b>Input Color Format</b>	<p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> <li>• <b>RGB:</b> Select this option if your monitor is connected to a computer or DVD player using the DP adapter.</li> <li>• <b>YPbPr:</b> Select this option if your DVD player supports only YPbPr output.</li> </ul>


<p><b>Preset Modes</b></p>	<p>Allows you to choose from a list of preset color modes.</p>  <p>The screenshot shows the 'Color' menu on a Dell C7017T monitor. The top bar displays 'Dell C7017T' and 'Energy Use' with a green progress bar. The 'Color' menu is highlighted in blue. Under 'Color', there are three options: 'Standard' (selected with a blue checkmark), 'Warm', and 'Custom Color'. The 'Input Color Format' is also set to 'Standard'. Below the menu, the resolution is shown as 'Resolution: 1920x1080, 60Hz'. At the bottom right of the menu, there are four navigation buttons: up, down, checkmark, and back.</p> <ul style="list-style-type: none"> <li>• <b>Standard:</b> Loads the monitor's default color settings. This is the default preset mode.</li> <li>• <b>Warm:</b> Increases the color temperature. The screen appears warmer with a red/yellow tint.</li> <li>• <b>Custom Color:</b> Allows you to manually adjust the color settings. Press the  and  keys to adjust the Red, Green, and Blue values and create your own preset color mode.</li> </ul>
<p><b>Reset Color</b></p>	<p>Resets your monitor's color settings to the factory defaults.</p>

	<b>Display</b>	<p>Use the <b>Display</b> menu to adjust the monitor's display settings.</p> 
	<b>Aspect Ratio</b>	Adjusts the image ratio as Wide 16:9, 4:3, or 5:4. <b>NOTE:</b> Wide 16:9 adjustment is not required at maximum preset resolution 1920 x 1080 .
	<b>Horizontal Position</b>	Use  or  the buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+).
	<b>Vertical Position</b>	Use the  or  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+). <b>NOTE:</b> Horizontal Position and Vertical Position adjustments are only available for "VGA" input.
	<b>Sharpness</b>	This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from '0' to '100'.
	<b>Pixel Clock</b>	The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference. Use  or  buttons to adjust for best image quality.
	<b>Phase</b>	If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use Phase (fine), again. <b>NOTE:</b> Pixel Clock and Phase adjustment are only available for VGA input.
	<b>Response Time</b>	Allows you to set the Response Time to <b>Normal</b> or <b>Fast</b> . <b>NOTE:</b> Normal (G to G typical /Ave.) : 8 ms Fast (G to G typical /Ave.) : 6 ms
	<b>Reset Display</b>	Select this option to restore default display settings.


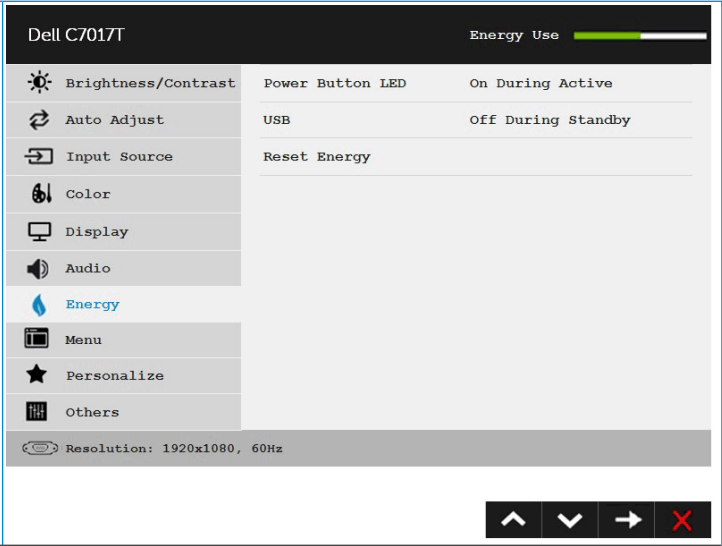




# Audio

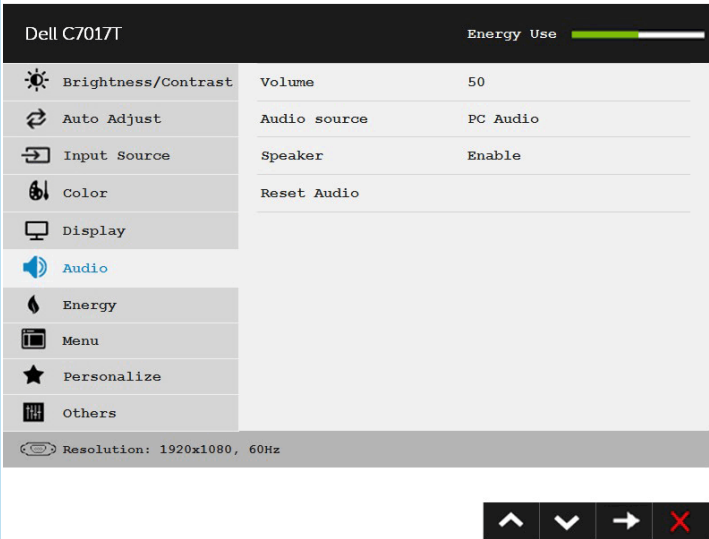


<b>Volume</b>	Use the buttons to adjust the volume. Minimum is '0' (-). Maximum is '100' (+).
<b>Audio Source</b>	Allows you to set the Audio Source mode to: <ul style="list-style-type: none"> <li>• PC Audio</li> <li>• HDMI / DP</li> </ul>
<b>Speaker</b>	Allows you to enable or disable Speaker function.
<b>Reset Audio</b>	Select this option to restore default display settings.

	<h2>Energy</h2>	
	<b>Power Button LED</b>	Allows you to set the power LED indicator on or off during active to save energy.
	<b>USB</b>	Allows you to enable or disable USB function during monitor standby mode. <b>NOTE:</b> USB ON/OFF under standby mode is only available when USB upstream cable is unplugged. This option will be greyed out when USB upstream cable is plugged in.
	<b>Reset Energy</b>	Select this option to restore default Energy settings.



**Menu**

Select this option to adjust the settings of the OSD such as, the languages of the OSD, the amount of time the menu remains on screen, and so on.

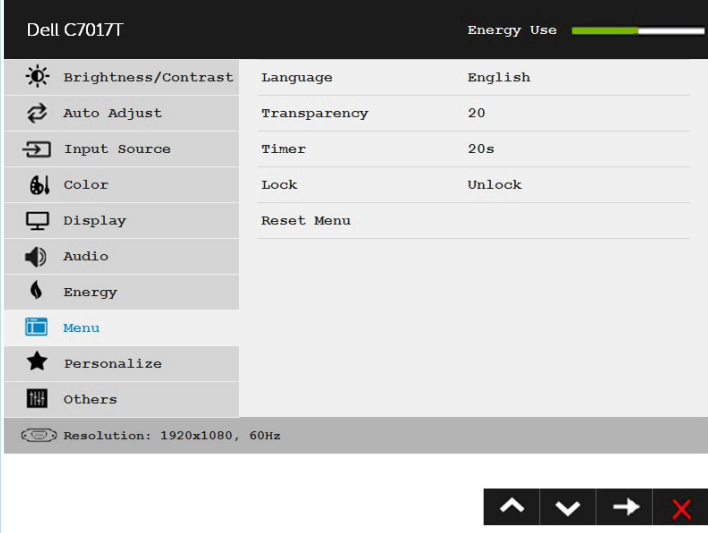

**Language**

Allows you to set the OSD display to one of eight languages: English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese.

**Transparency**

Allows you to adjust the OSD background from opaque to transparent.

**Timer**

Allows you to set the time for which the OSD remains active after you press a key on the monitor.  
Use the and keys to adjust the slider in 1 second increments, from 5 to 60 seconds.

**Lock**

Controls user access to adjustments. When Lock is selected, no user adjustments are allowed. All keys are locked except key.  
To unlock, please use one of the following options :

1. Press the **menu** key of **remote control** takes you directly to the OSD menu to unlock.
2. Press and hold key of the **monitor** for 6 seconds to unlock.

**Warning:**

1. During lock, OSD & power key will lock.
2. The power button and OSD keys must be unlocked when it is required to power off the monitor.

**Reset Menu**

Select this option to restore default menu settings.



## Personalize

Selecting this option allows you to set two shortcut keys.

Dell C7017T Energy Use

Brightness/Contrast	Shortcut Key 1	Preset Modes
Auto Adjust	Shortcut Key 2	Volume
Input Source	Reset Personalization	
Color		
Display		
Audio		
Energy		
Menu		
<b>★ Personalize</b>		
Others		

Resolution: 1920x1080, 60Hz

Navigation:

## Shortcut Key 1

User can select from "Preset Modes", "Brightness/Contrast", "Auto Adjust", "Input Source", "Aspect Ratio" "Volume" and set as shortcut key.

Dell C7017T Energy Use


Brightness/Contrast	Shortcut Key 1	<input checked="" type="checkbox"/> Preset Modes
Auto Adjust	Shortcut Key 2	Brightness/Contrast
Input Source	Reset Personalization	Auto Adjust
Color		Input Source
Display		Aspect Ratio
Audio		Volume
Energy		
Menu		
<b>★ Personalize</b>		
Others		

Resolution: 1920x1080, 60Hz

Navigation:

**Shortcut Key 2**

User can select from "Preset Modes", "Brightness/Contrast", "Auto Adjust", "Input Source", "Aspect Ratio", "Volume" and set as shortcut key.

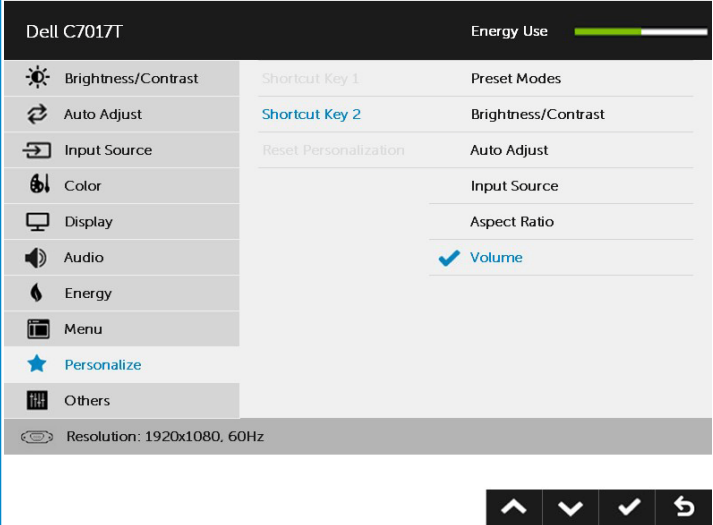




**Reset Personalization**

Allows you to restore shortcut key to the default setting.



**Others**

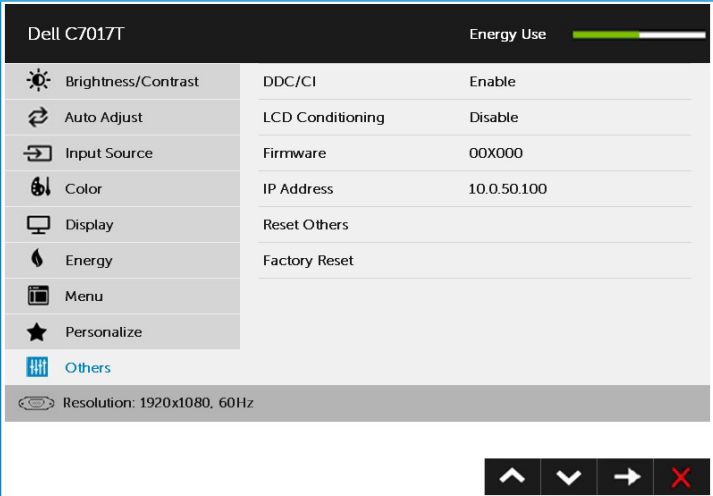


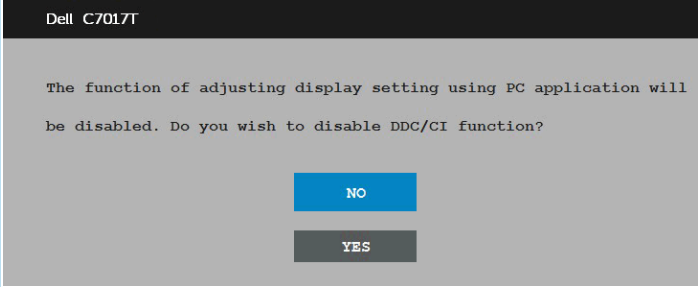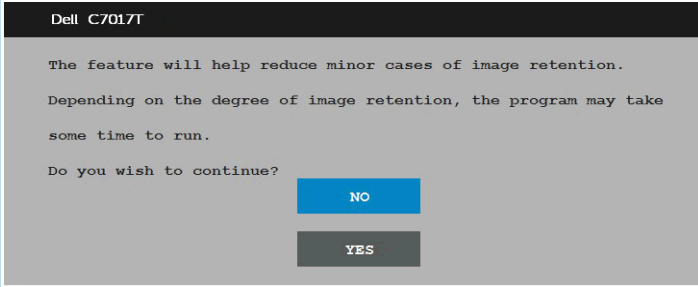
<p><b>DDC/CI</b></p>	<p>DDC/CI (Display Data Channel/Command Interface) allows a software on your computer to adjust the monitor display settings like the brightness, color balance etc.</p> <p>Enable (Default): Optimizes the performance of your monitor and provides a better customer experience.</p> <p>Disable: Disables the DDC/CI option and the following message appears on the screen.</p>  <p>The screenshot shows a dialog box with a black header containing 'Dell C7017T'. The main text reads: 'The function of adjusting display setting using PC application will be disabled. Do you wish to disable DDC/CI function?'. There are two buttons at the bottom: a blue 'NO' button and a grey 'YES' button.</p>
<p><b>LCD Conditioning</b></p>	<p>This feature will help reduce minor cases of image retention. If an image appears to be stuck on the monitor, select <b>LCD Conditioning</b> to help eliminate any image retention. Using the LCD Conditioning feature may take some time. LCD Conditioning feature cannot remove severe cases of image retention or burn-in.</p> <p><b>NOTE:</b> Use LCD Conditioning only when you experience a problem with image retention.</p> <p>The below warning message appears once user selects "Enable" LCD Conditioning.</p>  <p>The screenshot shows a dialog box with a black header containing 'Dell C7017T'. The main text reads: 'The feature will help reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. Do you wish to continue?'. There are two buttons at the bottom: a blue 'NO' button and a grey 'YES' button.</p>
<p><b>Firmware</b></p>	<p>Current Firmware version.</p>
<p><b>IP Address</b></p>	<p>Shown IP Address.</p>
<p><b>Reset Other</b></p>	<p>Select this option to restore default other settings, such as DDC/CI.</p>
<p><b>Factory Reset</b></p>	<p>Resets all OSD settings to the factory preset values.</p>

# Touch OSD Control

This monitor comes with Touch OSD Functionality. Press the keypad buttons (A, B or C) first to activate the OSD Touch Function.


When the OSD Menu is on screen, only the OSD Touch Function is available. To use the normal Touch Function, exit OSD Menu.

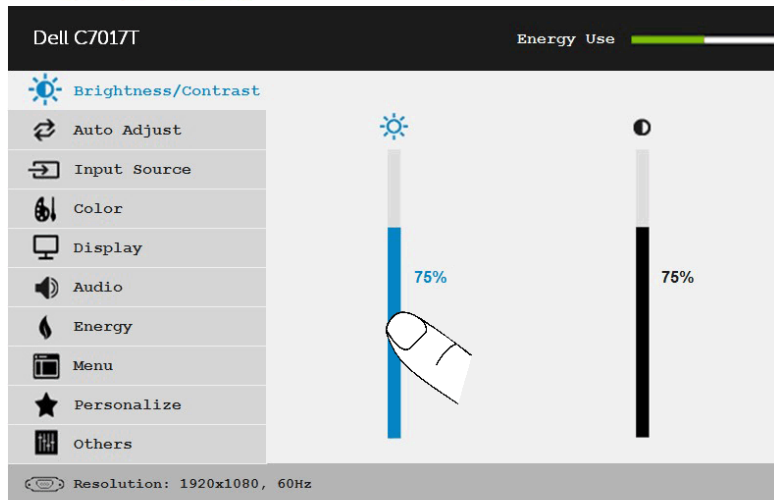

Touch Operation Guide	
Function	Descriptions
Execute	Touch the ICONS to activate the function
Quit	Touch the  to exit


# OSD Messages

When the monitor does not support a particular resolution mode you will see the following message:

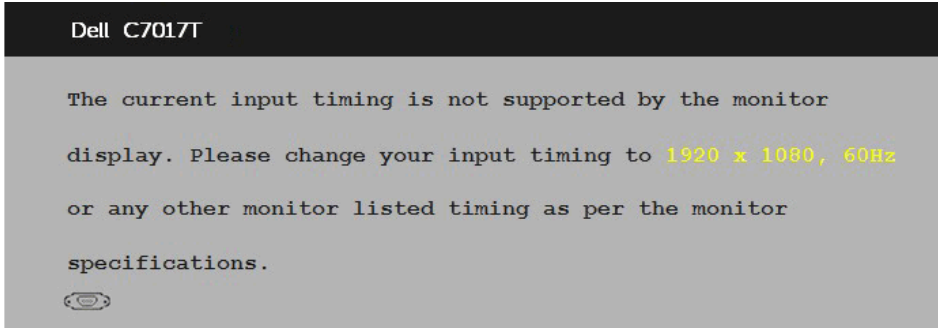


This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See **Monitor Specifications** for the horizontal and vertical frequency ranges addressable by this monitor. Recommended mode is 1920 x 1080.

You will see the following message before the DDC/CI function is disabled.

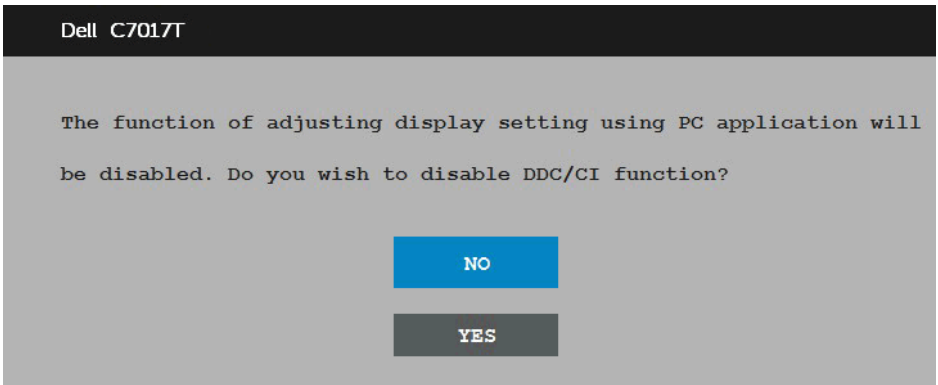

When the monitor enters the **Power Save** mode, the following message appears:

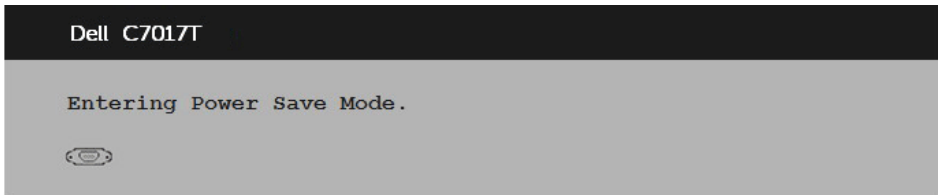

Activate the computer and wake up the monitor to gain access to the **OSD**.

If you press any button other than the power button, the following messages will appear depending on the selected input:



## Dell C7017T

There is no signal coming from your computer.

Press any key on the keyboard or move the mouse to wake it up.

If there is no display, press the monitor button now to select the correct input source on the On-Screen-Display menu.



If VGA, DP, HDMI1/MHL, HDMI2 or HDMI3 cable is not connected, a floating dialog box as shown below appears. The monitor will enter **Power Save Mode after 4 minutes** if left at this state.

## Dell C7017T



No VGA Cable

The display will go into Power Save Mode in 4 minutes.




[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

## Dell C7017T



No DP Cable

The display will go into Power Save Mode in 4 minutes.




[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

Dell C7017T



  No HDMI1/MHL Cable

The display will go into Power Save Mode in 4 minutes.



[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

Dell C7017T



  No HDMI2 Cable

The display will go into Power Save Mode in 4 minutes.



[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

Dell C7017T

  No HDMI3 Cable

The display will go into Power Save Mode in 4 minutes.



[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

See [Solving Problems](#) for more information.

# Setting the Maximum Resolution

For optimal display performance while using the Microsoft Windows operating systems, set the display resolution to 1920 x 1080 pixels by performing the following steps:

## **In Windows Vista, Windows 7, Windows 8 or Windows 8.1:**

1. For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
2. Right-click on the desktop and click **Screen Resolution**.
3. Click the dropdown list of the screen **resolution** and select 1920 x 1080.
4. Click OK.

## **In Windows 10:**

1. Right-click on the desktop and click **Display settings**.
2. Click **Advanced display settings**.
3. Click the dropdown list of **Resolution** and select 1920 x 1080.
4. Click **Apply**.


If you do not see 1920 x 1080 as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided

**1: If you have a Dell desktop or a Dell portable computer with Internet access**

**2: If you have a non Dell desktop, portable computer, or graphics card**

## If you have a Dell desktop or a Dell portable computer with Internet access

1. Go to <http://www.dell.com/support>, enter your service tag, and download the latest driver for your graphics
2. After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 again.

 **NOTE:** If you are unable to set the resolution to 1920 x 1080, please contact Dell to inquire about a graphics adapter that supports these resolutions.


## If you have a non Dell desktop, portable computer, or graphics card

### In Windows Vista, Windows 7, Windows 8 or Windows 8.1:

1. For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
2. Right-click on the desktop and click **Personalization**.
3. Click **Change Display Settings**.
4. Click **Advanced Settings**.
5. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
6. Please refer to the graphics card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com> ).
7. After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 again.


### In Windows 10:

1. Right-click on the desktop and click **Display settings**.
2. Click **Advanced display settings**.
3. Click **Display adapter properties**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Please refer to the graphics card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com> ).
6. After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 again.


 **NOTE:** If you are unable to set the resolution to 1920 x 1080, please contact the manufacturer of your computer or consider purchasing a graphics adapter that will support the video resolution of 1920 x 1080 .

# Dell Web Management for Monitors


This monitor comes with networking capability which lets you remotely access and change settings such as Input Source Selection, Brightness and Volume. Before accessing the Dell Monitor Web Management feature, ensure that you have a working Ethernet cable connected to the RJ45 port at the rear of the monitor.

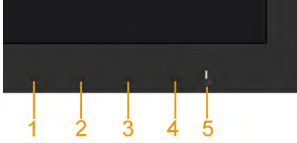

- **Ethernet Enable**











Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn on , A network icon  appears and is shown on Top - left corner for 5 seconds .

- **Ethernet Disable**

Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn off , A network icon  appears and is shown on Top - left corner for 5 seconds .


To access the Dell Monitor Web Management tool you need to set the IP Addresses for your computer and the monitor.

1. Press the **Menu** key on the remote control to display the IP Address of the monitor, or by navigating to OSD Menu > **Others**. By default, the IP Address is 10.0.50.100

Dell C7017T		Energy Use
 Brightness/Contrast	DDC/CI	Enable
 Auto Adjust	LCD Conditioning	Disable
 Input Source	Firmware	00X000
 Color	IP Address	10.0.50.100
 Display	Reset Others	
 Energy	Factory Reset	
 Menu		
 Personalize		
 Others		
 Resolution: 1920x1080, 60Hz		



2. In the computer's IP Properties tab, specify an IP Address by selecting Use the following IP Address and enter the following values: For IP Address: 10.0.50.101 and for Subnet Mask: 255.0.0.0 (leave all other entries as blanks).

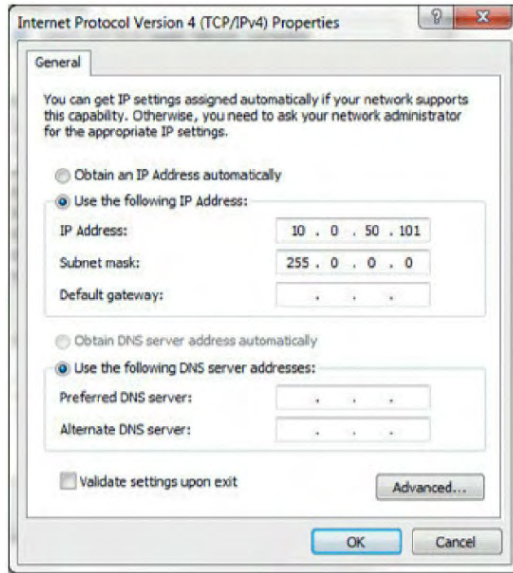

3. The IP Address configuration would now look like this:




Configure notebook IP Address to 10.0.50.101




Monitor IP Address 10.0.50.100

To access and use the web management tool, follow these steps:


1. Open a web browser and type the monitor's IP Address (10.0.50.100) in the address bar.

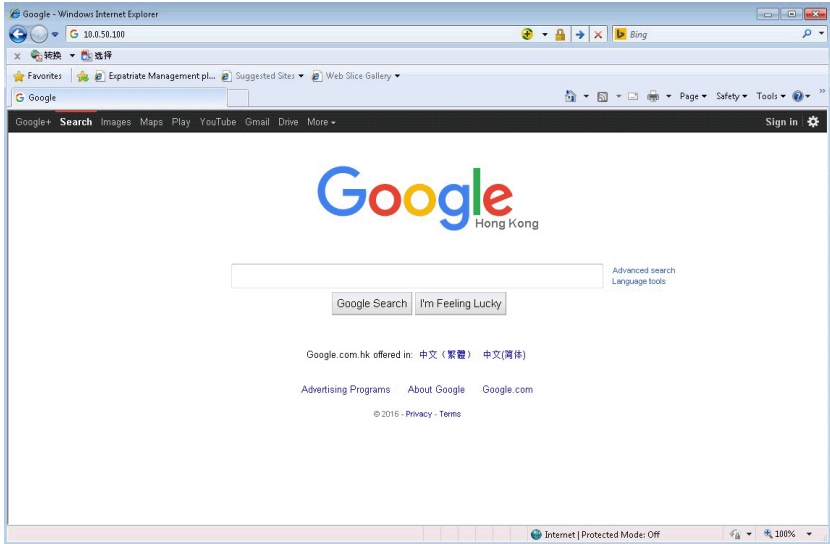


2. The log-in page opens. Enter the Administrator Password to continue.

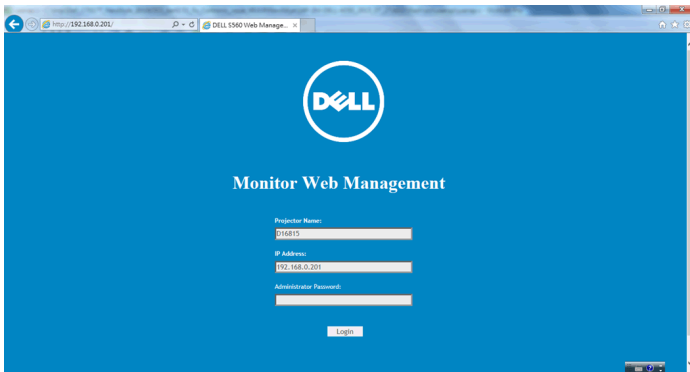

### 3. The Home page opens:

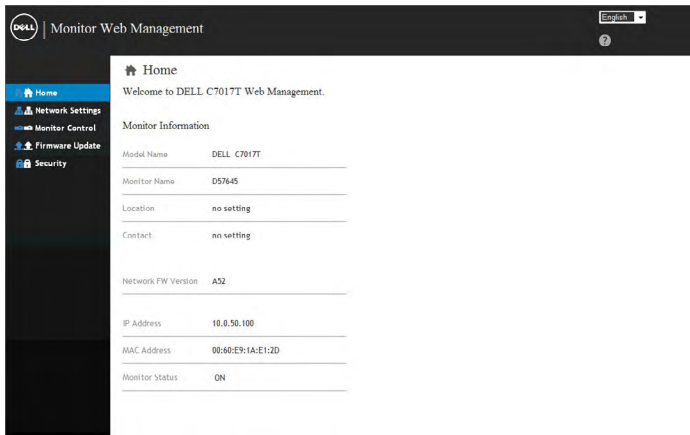


### 4. Click **Network Settings** tab to see the network settings.

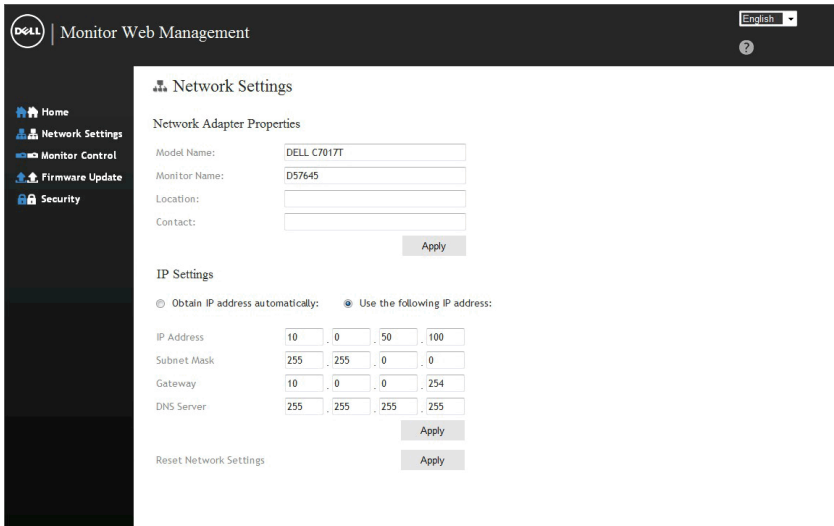



5. Click **Monitor Control** to see the monitor's status. It takes about 3 to 5 mins for the monitor information to be updated on the Web Management.

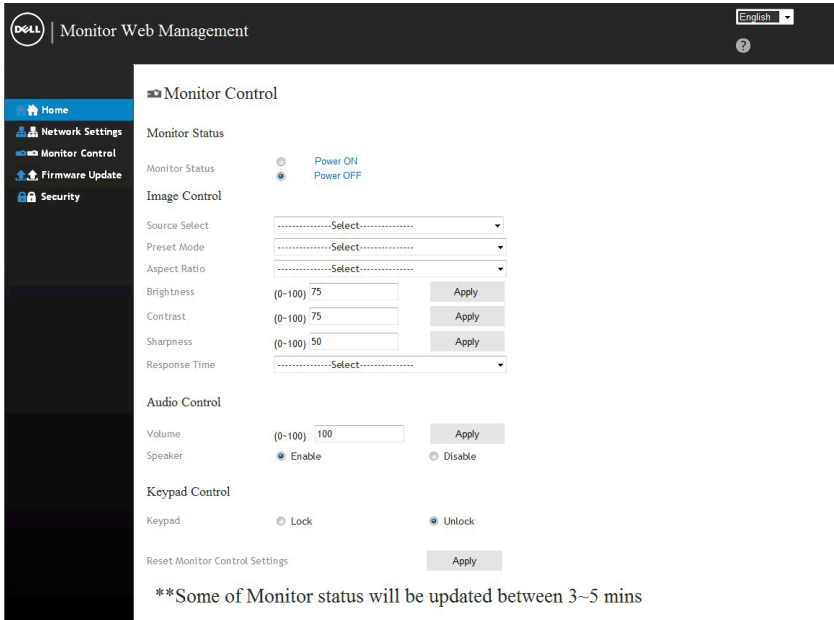


The screenshot shows the Dell Monitor Web Management interface. The top header includes the Dell logo and the text "Monitor Web Management" with a language dropdown set to "English". A left sidebar contains navigation options: Home, Network Settings, Monitor Control (highlighted), Firmware Update, and Security. The main content area is titled "Monitor Control" and contains several sections:

- Monitor Status:** Shows "Monitor Status" with radio buttons for "Power ON" (selected) and "Power OFF".
- Image Control:** Includes "Source Select", "Preset Mode", and "Aspect Ratio" (all dropdown menus). Below these are sliders for "Brightness" (0-100, set to 75), "Contrast" (0-100, set to 75), and "Sharpness" (0-100, set to 50), each with an "Apply" button. A "Response Time" dropdown menu is also present.
- Audio Control:** Includes a "Volume" slider (0-100, set to 100) with an "Apply" button, and "Speaker" control with "Enable" (selected) and "Disable" radio buttons.
- Keypad Control:** Includes "Keypad" control with "Lock" and "Unlock" (selected) radio buttons.
- A "Reset Monitor Control Settings" button with an "Apply" label.

At the bottom of the page, a note states: "\*\*Some of Monitor status will be updated between 3~5 mins


6. Click **Security** to set a password.

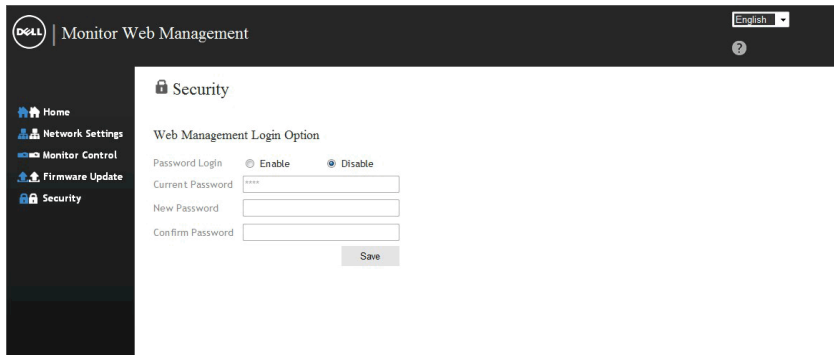

The screenshot shows the Dell Monitor Web Management interface with the "Security" page selected. The top header and sidebar are identical to the previous screenshot. The main content area is titled "Security" and contains the "Web Management Login Option" section:

- "Password Login" with radio buttons for "Enable" and "Disable" (selected).
- "Current Password" field with masked characters (\*\*\*\*).
- "New Password" field.
- "Confirm Password" field.
- A "Save" button.

- Update **Firmware** for your monitor's network card. You can download the latest network firmware, if available, from the Dell Support website at [www.dell.com/support](http://www.dell.com/support).

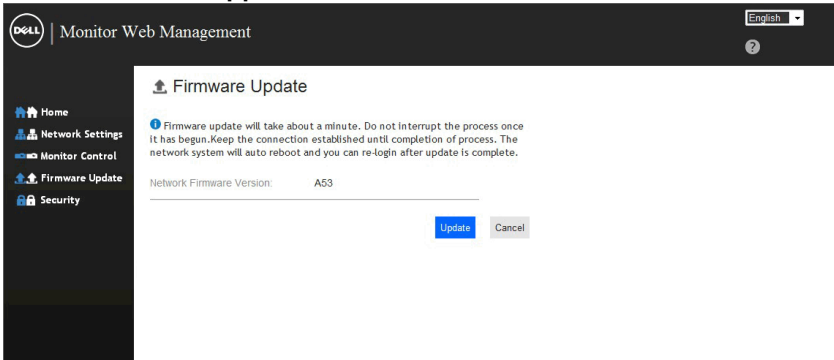

# Troubleshooting


**⚠ WARNING:** Before you begin any of the procedures in this section, follow the Safety Instruction

## Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cables from the back of the computer. To ensure proper Self-Test operation, remove all VGA, DP, HDMI1 /MHL, HDMI2, HDMI3 cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

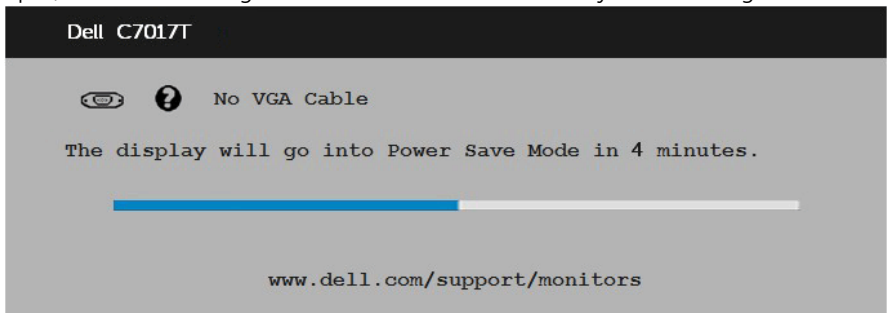

4. This box also appears during normal system operation, if the video cable becomes disconnected or damaged. The monitor will enter **Power Save Mode after 4 minutes** if left at this state.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

# Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.



**NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the **Button 1** on the front panel for 5 seconds. A gray screen appears.
4. Carefully inspect the screen for abnormalities.
5. Press the **Button 1** on the front panel again. The color of the screen changes to red.
6. Inspect the display for any abnormalities.
7. Repeat steps 5 and 6 to inspect the display in green, blue, black, white screens.

The test is complete when the Text screen appears. To exit, press the **Button 1** again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.


# Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions.




Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li> <li>• Verify that the power outlet is functioning properly using any other electrical equipment.</li> <li>• Ensure that the power button is depressed fully.</li> <li>• Ensure that the correct input source is selected via the <b>Input Source</b> Select button.</li> <li>• Check the "Power LED Button" option under Energy in OSD Menu.</li> </ul>
No Video/Power LED on	No picture or no brightness	<ul style="list-style-type: none"> <li>• Increase brightness &amp; contrast controls via OSD.</li> <li>• Perform monitor self-test feature check.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Ensure that the correct input source is selected via the <b>Input Source</b> Select menu.</li> <li>• Run the built-in diagnostics.</li> </ul>
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> <li>• Perform Auto Adjust via OSD.</li> <li>• Adjust the Phase and Pixel Clock controls via OSD.</li> <li>• Eliminate video extension cables.</li> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Change the video resolution to the correct aspect ratio (16:9).</li> </ul>
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> <li>• Perform Auto Adjust via OSD.</li> <li>• Adjust the Phase and Pixel Clock controls via OSD.</li> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Check environmental factors.</li> <li>• Relocate the monitor and test in another room.</li> </ul>

Remote control no working	Cannot control LCD Monitor	<ul style="list-style-type: none"> <li>• Check remote control batteries have been installed properly.</li> <li>• Ensure the remote control sensor is toward to monitor's remote control sensor on left bottom side.</li> </ul>
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> <li>• Cycle power on-off.</li> <li>• Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> </ul> <p>For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at:  <a href="http://www.dell.com/support/monitors">http://www.dell.com/support/monitors</a>.</p>
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> <li>• Cycle power on-off.</li> <li>• Pixel that is permanently off is a natural defect that can occur in LCD technology.</li> </ul> <p>For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at:  <a href="http://www.dell.com/support/monitors">http://www.dell.com/support/monitors</a>.</p>
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Auto Adjust via OSD.</li> <li>• Adjust brightness &amp; contrast controls via OSD.</li> </ul>
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Auto Adjust via OSD.</li> <li>• Adjust brightness &amp; contrast controls via OSD.</li> </ul>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Perform Auto Adjust via OSD.</li> <li>• Adjust Phase and Pixel Clock controls via OSD.</li> <li>• Perform monitor self-test feature check and determine if these lines are also in self-test mode.</li> <li>• Check for bent or broken pins in the video cable connector.</li> </ul>

Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Perform Auto Adjust via OSD.</li> <li>• Adjust Phase and Pixel Clock controls via OSD.</li> <li>• Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Restart the computer in the safe mode.</li> </ul>
Safety-Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> <li>• Do not perform any troubleshooting steps.</li> <li>• <b>Contact Dell immediately.</b></li> </ul>
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Reset the monitor to <b>Factory Settings</b>.</li> <li>• Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
Missing Color	Picture missing color	<ul style="list-style-type: none"> <li>• Perform monitor self-test feature check.</li> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong Color	Picture color not good	<ul style="list-style-type: none"> <li>• Change the Color Mode in the Color OSD to Graphics or Video depending on the application.</li> <li>• Try different Color Preset Settings in Color OSD. Adjust R/G/B value in Color OSD if the Color Management is turned off.</li> <li>• Change the Input Color Format to PC RGB or YPbPr in the <b>Color OSD</b>.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> <li>• Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <b><u>Power Management Modes</u></b>).</li> <li>• Alternatively, use a dynamically changing screensaver.</li> </ul>

 **NOTE:** When choosing DP , HDMI1/MHL , HDMI2, HDMI3 mode, the Auto Adjust function is not available.

## Product-Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"><li>• Check the <b>Aspect Ratio</b> setting in the <b>Display OSD</b>.</li><li>• Reset the monitor to <b>Factory Settings</b>.</li></ul>
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"><li>• Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.</li><li>• Check whether the OSD menu and Power button is locked. If yes, press and hold the button beside the Power button for 6 seconds to unlock (for more information, see Lock). Or pressing the menu key of remote control takes you directly to the OSD settings menu, with OSD 'Lock' pre-selected on entry, use the  and  keys of remote control to select 'Unlock', press  of remote control to unlock. (for more information, see <b>Lock</b>)</li></ul>
No Input Signal when user controls are pressed	No picture, the LED light is white. When you press "up", "down" or "Menu" key, the message " No input signal" will appear.	<ul style="list-style-type: none"><li>• Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard.</li><li>• Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary.</li><li>• Reset the computer or video player.</li></ul>
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"><li>• Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.</li><li>• Run the built-in diagnostics.</li></ul>



# Universal Serial Bus (USB) Specific Problems

Common Symptoms	What You Experience	Possible Solutions
USB interface is not working	USB peripherals are not working	<ul style="list-style-type: none"> <li>• Check that your monitor is turned ON.</li> <li>• Reconnect the upstream cable to your computer.</li> <li>• Reconnect the USB peripherals (downstream connector).</li> <li>• Switch off and then turn on the monitor again.</li> <li>• Re-start the computer.</li> <li>• Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.</li> </ul>
High Speed USB 3.0 interface is slow.	High Speed USB 3.0 peripherals working slowly or not working at all	<ul style="list-style-type: none"> <li>• Check that your computer is USB 3.0-capable.</li> <li>• Some computers have both USB 3.0 and USB 2.0 and USB 1.1 ports. Ensure that the correct USB port is used.</li> <li>• Reconnect the upstream cable to your computer.</li> <li>• Reconnect the USB peripherals (downstream connector).</li> <li>• Re-start the computer.</li> </ul>




# Mobile High-Definition Link (MHL) Specific Problems

Common Symptoms	What You Experience	Possible Solutions
MHL interface is not working.	Cannot see MHL device image shown on monitor.	<ul style="list-style-type: none"> <li>• Re-connect the upstream cable. Ensure your MHL cable and MHL device are MHL certified.</li> <li>• Check your MHL device is turned On.</li> <li>• Check your MHL device is not in Standby mode.</li> <li>• Check physical MHL cable connection is corresponding to input source selected on OSD Menu i.e., HDMI (MHL) .</li> <li>• Wait for 30 seconds after connecting MHL cable as some MHL devices require longer recovery time.</li> </ul>

# Touch Problems


Common Symptoms	What You Experience	Possible Solutions
No touchscreen response in saving mode	Could not wake up monitor and computer by touching the screen in saving mode	<ul style="list-style-type: none"> <li>• Ensure that the USB cable connecting to PC and the monitor properly secured.</li> <li>• Access Device Manager and choose HID Interface Device under Human Device.</li> <li>• Select HID- compliant device Properties.</li> <li>• Allow the device to wake the computer.</li> </ul>

# Ethernet Problems

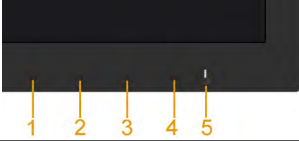Common Symptoms	What You Experience	Possible Solutions
Ethernet not working	Dell Web Management for Monitors Webpage control is not working	<ul style="list-style-type: none"> <li>• Ensure that the Network cable connecting the Monitor is properly secured.</li> <li>• Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn on , A network icon  appears and is shown on Top - left corner for 5 seconds .</li> <li>• Press and hold the Button 1 and Button 3 on the front panel for 3 seconds to turn off , A network icon  appears and is shown on Top - left corner for 5 seconds .</li> </ul> 

# Appendix

## Safety Instructions

 **WARNING:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the *Safety, Environmental, and Regulatory Information*.

## FCC Notices (U.S. Only) and Other Regulatory Information


For FCC notices and other regulatory information, see the regulatory compliance website located at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received including interference that may cause undesired operation

## Contact Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

**Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.**

To get online monitor support content:

1. Visit [www.dell.com/support/monitors](http://www.dell.com/support/monitors)

2. To contact Dell for sales, technical support, or customer service issues:

1. Visit [www.dell.com/contactdell](http://www.dell.com/contactdell).
2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the top left of the page.
3. Click **Contact Us** on the top left side of the page.
4. Select the appropriate service or support link based on your need.
5. Choose the method of contacting Dell that is convenient for you.