DELL S2319HS

Go to contents page

- 1. Disassembly Procedures:
 - S1 Open the Pizza carton with a proper tool.



Take out all of the accessories including QSG, DP cable, power cable, USB cable, CD&user's manual, stand and base from the carton from the carton.(Note: It depends on whether users returning the accessories)





S3

S2

Take out of the Paper-top and monitor from the carton, then take out the monitor from the EPE bag and put the LCD monitor on a protective cushion.



S4

S5

Use a Philips-head screwdriver to remove four screws for unlocking mechanisms. (No.1~4 screw size=M4x10; Torque=12±0.5kgfxcm)



Wedge your fingers between the rear cover and the middle bezel on the corners of the top side of the monitor to release the rear cover, then use one hand to press the middle bezel, the other hand to pull up carefully the rear cover in order of arrow preference for unlocking mechanisms of rear cover.





S6

Lift the rear cover up carefully. Disconnect the USB FFC cable from the connector of the interface board, and then remove the rear cover.



Go to contents page

Use a Philips-head screwdriver to remove one screw for unlocking the USB board unit, then release the USB board unit and put it aside.

(No.1 screw size=M3x6, Torque=4±0.5kgfxcm)






S7

Tear off two pieces of the aluminium foils for unfixing the bracket chassis base.



S9

Unplug the panel power cable from the connector of the panel module, then release the function by tearing the tapes on the back of the cable, and then release the cable from the hooks of the middle bezel.

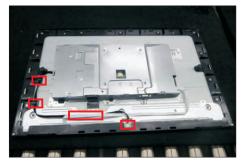


S10

Use a proper tool to release the function key cable from the connector, then pull the function key cable high for releasing the function key cable.



S11

Use a Philips-head screwdriver to remove 2pcs screws for unlocking the bracket with the panel. Push the earing-lock, and disconnect the LVDS cable from the connector of LCD panel module. (No.1~2 screw size=M3x2.8, Torque=2~3kgfxcm)

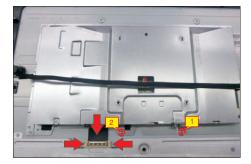

Use a Philips-head screwdriver to remove 13pcs screws for unlocking the middle bezel with the assembled unit.

(No.1~11 screw size=M3x4, Torque=3~4kgfxcm;

No.12~13 screw size=M1.6x1.7, Torque=0.6~1kgfxcm)




S13 th

S12

Take away the middle bezel, and put it on a fixture, then use a Philips-head screwdriver to remove 3pcs screws for unlocking the function key board with the middle bezel.



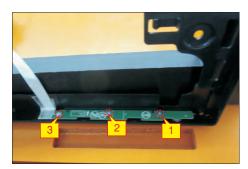

3 DELL S2319HS

Go to contents page



S14

Lift up the panel module for releasing the front bezel away from the panel module.



S15

Take away the bracket chassis module and then put the bracket chassis module on a protective cushion.






Use a Hex-head screwdriver to remove two screws for unlocking the D-Sub connector.

S16

(No.1~2 screws size=M3x8, Torque=6±0.5kgfxcm) Use a Philips-head screwdriver to remove two screws for unlocking the AC power outlet.

(No.3~4 screw size=M3x8, Torque=6~7kgfxcm)

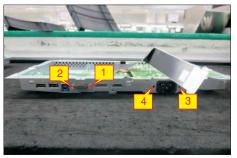


S17

Remove the Mylar from the hooks of the bracket. Use a Philips-head screwdriver to remove six screws for unlocking the circuit board, release all the cables from the hooks.


(No.1~5 screw size=M3x7.5, Torque=6±0.5kgfxcm; No. 6 screw size=M4x8, Torque=6±0.5kgfxcm)



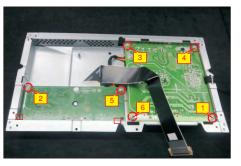

S18


Remove the interface board and power board from the bracket chassis module carefully, and disconnect all the cables.

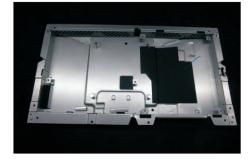

S1-Remove electrolyte capacitors (red mark) from printed circuit boards




S1 -1 Cut the glue between bulk cap. and PCB with a knife

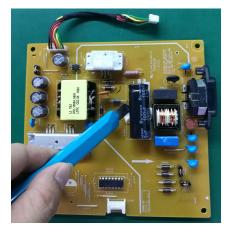

S1 -2 Ensure cutting path within the glue, don't touch bulk cap. or PCB



S1 -3 Cut into the bottom of bulk cap. and pull it up carefully

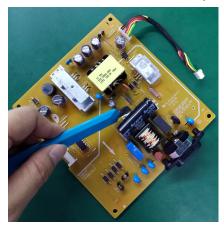


DELL S2319HS 5

S1 -4 Take out bulk cap. pin solder with soldering iron and absorber



S1 -5 Lift the bulk cap. up and away from the PCB

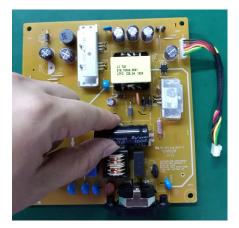

. Product material information

The following substances, preparations, or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

Capacitors / condensers (containing	No used
PCB/PCT)	
Mercury containing components	No used
Batteries	No used
Printed circuit boards (with a surface	Product has printed circuit boards (with a
greater than 10 square cm)	surface greater than 10 square cm)
Component contain toner, ink and	No used
liquids	
Plastic containing BFR	No used
Component and waste contain	No used
asbestos	
CRT	No used
Component contain CFC, HCFC, HFC	No used
and HC	
Gas discharge lamps	No used
LCD display > 100 cm2	Product has an LCD greater than 100 cm2
External electric cable	Product has external cables
Component contain refractory	No used
ceramic fibers	
Component contain radio-active	No used
substances	
Electrolyte capacitors (height	Product has electrolyte capacitors (height >
> 25mm, diameter > 25mm)	25mm, diameter > 25mm)

. Tools Required

List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description:

- Screwdriver (Phillip head) #1
- Screwdriver (Phillip head) #2
- Penknife
- Soldering iron and absorber