


Alienware m15 R6 Service Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Working inside your computer	6
Before working inside your computer.....	6
Safety instructions.....	6
Electrostatic discharge—ESD protection.....	7
ESD field service kit	7
Transporting sensitive components.....	8
After working inside your computer.....	8
Chapter 2: Removing and installing components	9
Recommended tools.....	9
Screw list.....	9
Major components of Alienware m15 R6	10
Base cover.....	12
Removing the base cover.....	12
Installing the base cover.....	15
Battery.....	17
Lithium-ion battery precautions.....	17
Removing the battery.....	18
Installing the battery.....	19
Battery cable.....	20
Lithium-ion battery precautions.....	20
Removing the battery cable.....	20
Installing the battery cable.....	21
Solid-state drive.....	22
Removing the 2230 solid-state drive in SSD slot one.....	22
Installing the 2230 solid-state drive in SSD slot one.....	23
Removing the 2280 solid-state drive in SSD slot one.....	24
Installing the 2280 solid-state drive in SSD slot one.....	25
Removing the 2230 solid-state drive in SSD slot two.....	26
Installing the 2230 solid-state drive in SSD slot two.....	27
Removing the 2280 solid-state drive in SSD slot two.....	28
Installing the 2280 solid-state drive in SSD slot two.....	29
Procedure to move the screw mount in SSD slot one.....	30
Procedure to move the screw mount in SSD slot two.....	31
Speakers.....	32
Removing the speakers.....	32
Installing the speakers.....	33
Audio and ethernet daughterboard.....	34
Removing the audio and ethernet daughterboard (FFC).....	34
Installing the audio and ethernet daughterboard (FFC).....	35
Removing the audio and ethernet daughterboard (M.2 interface).....	37
Installing the audio and ethernet daughterboard (M.2 interface).....	38
Memory module.....	39
Removing the memory module.....	39
Installing the memory module.....	40

Wireless card.....	41
Removing the wireless card.....	41
Installing the wireless card.....	42
Rear-I/O cover.....	44
Removing the rear I/O-cover.....	44
Installing the rear I/O-cover.....	45
Touchpad.....	46
Removing the touchpad.....	46
Installing the touchpad.....	47
Power-adapter port.....	49
Removing the power-adapter port.....	49
Installing the power-adapter port.....	50
Display assembly.....	51
Removing the display assembly.....	51
Installing the display assembly.....	53
Keyboard-controller board.....	56
Removing the keyboard-controller board.....	56
Installing the keyboard-controller board.....	56
System board.....	57
Removing the system board.....	57
Installing the system board.....	63
Heat-sink assembly.....	68
Removing the heat-sink assembly.....	68
Installing the heat-sink assembly.....	69
USB board.....	71
Removing the USB board.....	71
Installing the USB board.....	72
Power button.....	73
Removing the power button.....	73
Installing the power button.....	74
Palm-rest and keyboard assembly.....	75
Removing the palm-rest and keyboard assembly.....	75
Installing the palm-rest and keyboard assembly.....	76

Chapter 3: Drivers and downloads..... 78

Chapter 4: System setup..... 79


BIOS overview.....	79
Entering BIOS setup program.....	79
Navigation keys.....	79
Boot Sequence.....	79
System setup options.....	80
System and setup password.....	90
Assigning a system setup password.....	90
Deleting or changing an existing system setup password.....	91
Clearing CMOS settings.....	91
Clearing BIOS (System Setup) and System passwords.....	92
Updating the BIOS.....	92
Updating the BIOS in Windows.....	92

Updating the BIOS using the USB drive in Windows.....	92
Updating the BIOS from the F12 One-Time boot menu.....	92
Chapter 5: Troubleshooting.....	94
Handling swollen Lithium-ion batteries.....	94
SupportAssist diagnostics.....	94
Recovering the operating system.....	95
System-diagnostic lights.....	95
Backup media and recovery options.....	96
WiFi power cycle.....	96
Drain residual flea power (perform hard reset).....	96
Chapter 6: Getting help and contacting Alienware.....	98

Working inside your computer

Before working inside your computer


About this task

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Save and close all open files and exit all open applications.

2. Shut down your computer. Click **Start** >  **Power** > **Shut down**.

 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

3. Disconnect your computer and all attached devices from their electrical outlets.


4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.

 **CAUTION:** To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.

5. Remove any media card and optical disc from your computer, if applicable.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your computer.


 **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


 **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.

 **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.

 **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.

 **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at www.dell.com/regulatory_compliance.

 **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.

 **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.

 **CAUTION:** Press and eject any installed card from the media-card reader.

⚠ CAUTION: Exercise caution when handling Lithium-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

i NOTE: The color of your computer and certain components may appear differently than shown in this document.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the

best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.

- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

ESD protection summary

It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

After working inside your computer

About this task

 **CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.**

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

Removing and installing components

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary with the configuration ordered.

Table 1. Screw list
























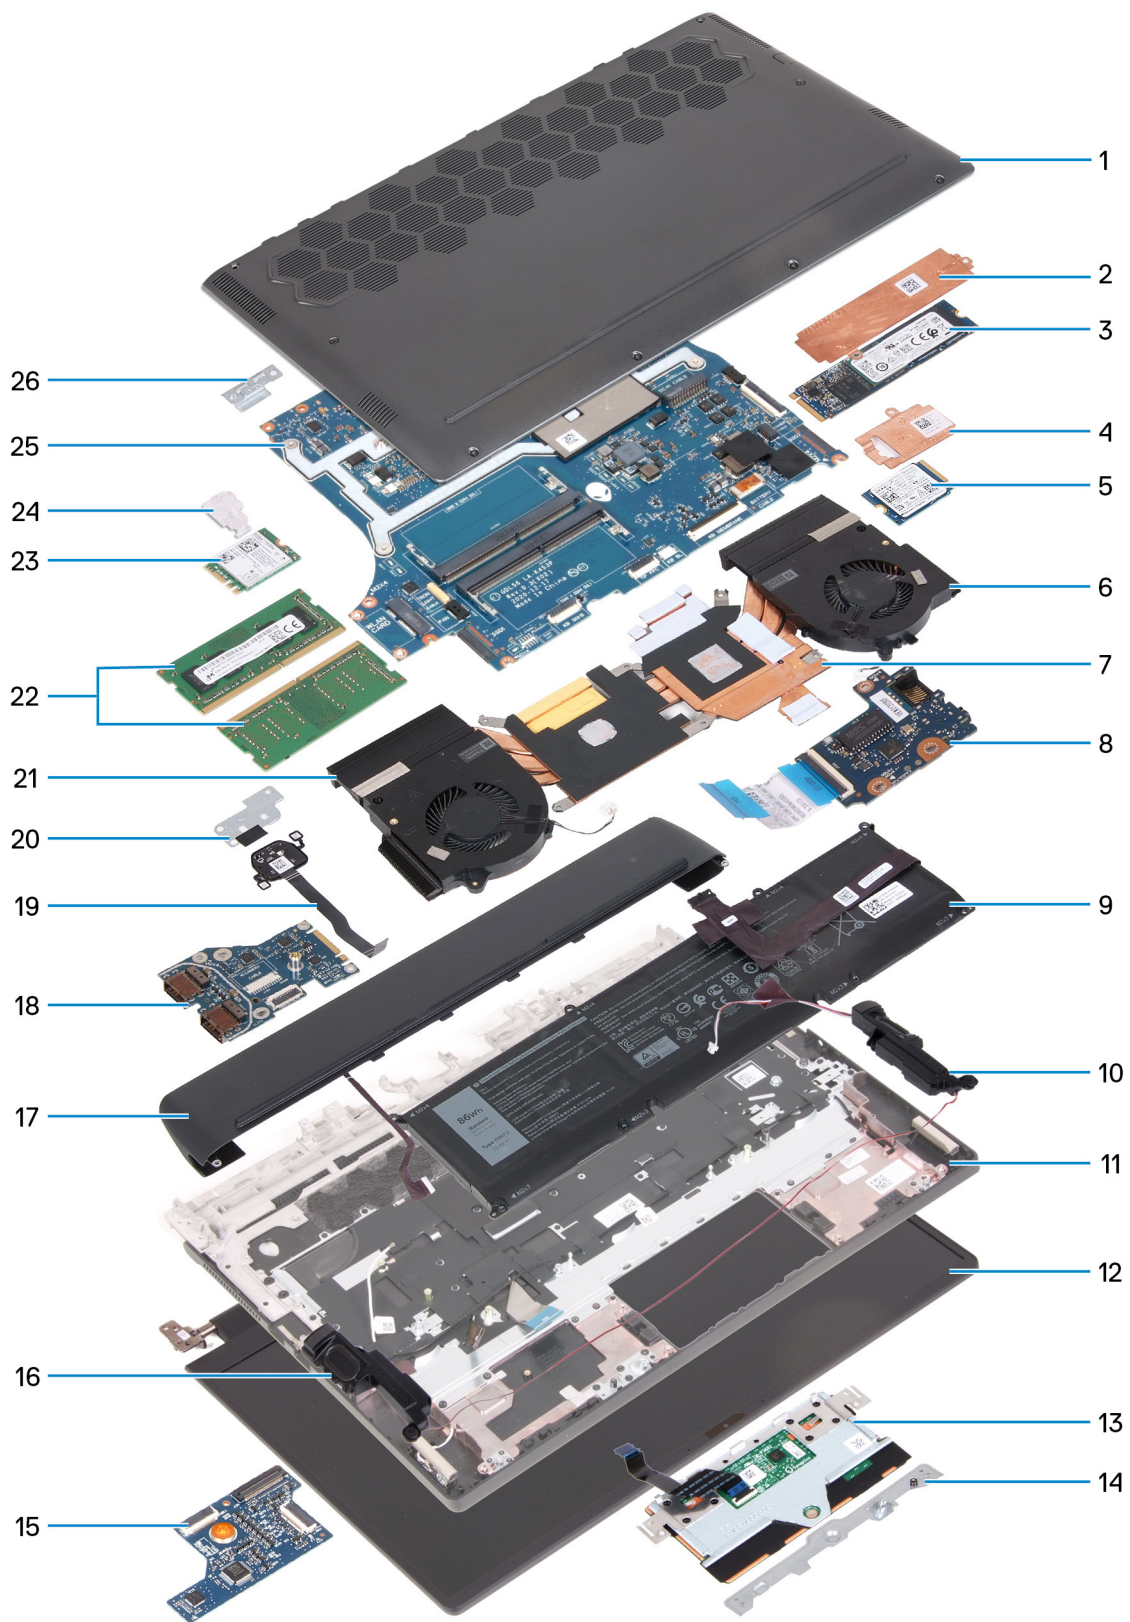
Component	Screw type	Quantity	Screw image
Base cover	M2.5x1.7 (captive screw)	4	
Base cover	M2.5x8.5 (captive screw)	2	
Base cover	M2.5x5	2	
Solid-state drive in SSD Slot one	M2x4	2	
Solid-state drive in SSD Slot two	M2x4	2	
Audio and ethernet daughterboard with a flexible flat cable (FFC)	M2x4	1	
Audio and ethernet daughterboard with a flexible flat cable (FFC)	M2x2	1	
Audio and ethernet daughterboard with a flexible flat cable (FFC) NOTE: This audio and ethernet daughterboard is featured on the computer that ships with the NVIDIA	M2x4	2	

Table 1. Screw list (continued)

Component	Screw type	Quantity	Screw image
GeForce RTX 3050 Ti discrete GPU controller.			
Audio and ethernet daughterboard with a M.2 interface	M2x4	2	
Wireless-card bracket	M2x4	1	
Display hinges	M2.5x5	6	
Battery	M2x4	4	
Battery	M2x3	4	
Touchpad bracket	M2.5x2.5	2	
Touchpad	M2x2	2	
Keyboard-controller board	M2x2	1	
Rear I/O cover	M2x4	2	
Rear I/O cover	M2.5x5	2	
Power-adaptor port-bracket	M2x4	2	
System board	M2x4	9	
Heat-sink assembly	M2x4	6	
USB board	M2x4	2	
Power button	M2x2	3	

Major components of Alienware m15 R6

The following image shows the major components of Alienware m15 R6 .



1. Base cover
2. 2280 solid-state drive thermal shield
3. 2280 solid-state drive
4. 2230 solid-state drive thermal shield
5. 2230 solid-state drive
6. Left fan

7. Heat sink
8. Audio and ethernet daughterboard
9. Battery
10. Left speaker
11. Palm-rest and keyboard assembly
12. Display assembly
13. Touchpad
14. Touchpad bracket
15. Keyboard controller board
16. Right speaker
17. Rear I/O cover
18. USB board
19. Power button
20. Power-button bracket
21. Right fan
22. Memory modules
23. Wireless card
24. Wireless card bracket
25. System board
26. USB Type-C port bracket

i **NOTE:** Dell provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

About this task

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.



2x
M2.5x5





4x
M2.5x1.7+3.3



2x
M2.5x8.5+3.5

1



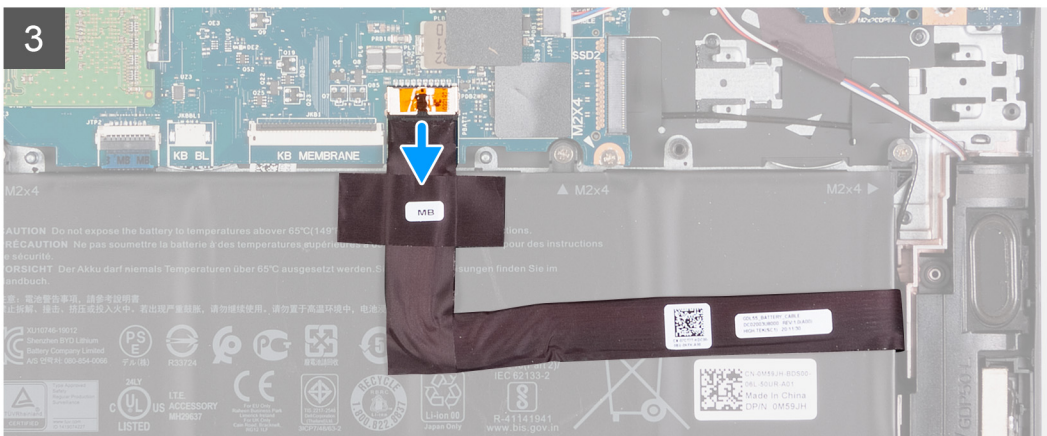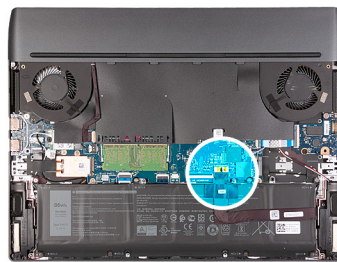

Steps

1. Remove the two screws (M2.5x5) that secure the base cover to the palm-rest and keyboard assembly.
2. Loosen the two captive screws (M2.5x8.5+3.5) that secure the base cover to the palm-rest and keyboard assembly.
3. Loosen the four captive screws (M2.5x1.7+3.3) that secure the base cover to the palm-rest and keyboard assembly.

NOTE: Loosening the four screws creates a gap, which can be used to pry and lift the base cover off the palm-rest and keyboard assembly.

4. Using your fingertips, pry open the base cover from the middle of the front edge of base cover, and then pry the left and right sides of the base cover.
5. Lift the base cover off the palm-rest and keyboard assembly.
 - ① **NOTE:** The following steps are applicable only if you want to further remove any other component from your computer.
6. Disconnect the battery cable from the system board.
7. Turn your computer over and press the power button for 20 seconds to drain the flea power.



Installing the base cover

Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.

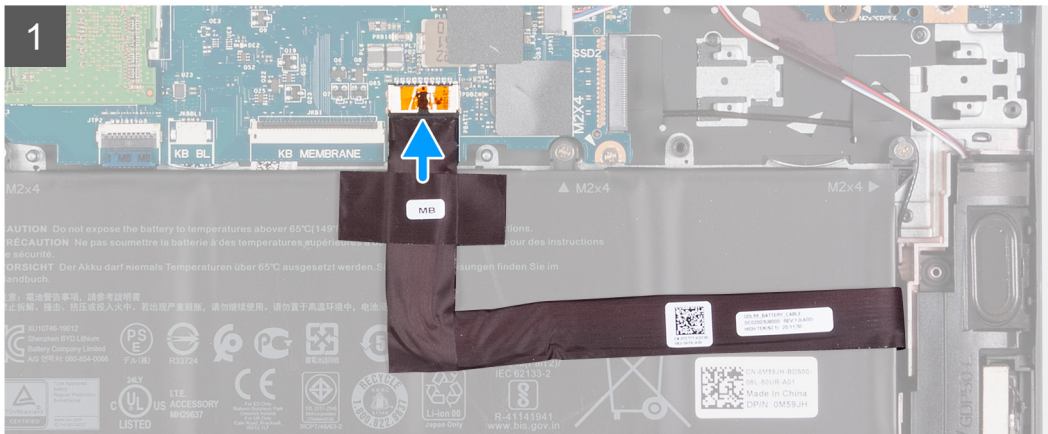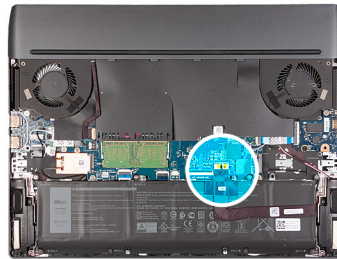

2

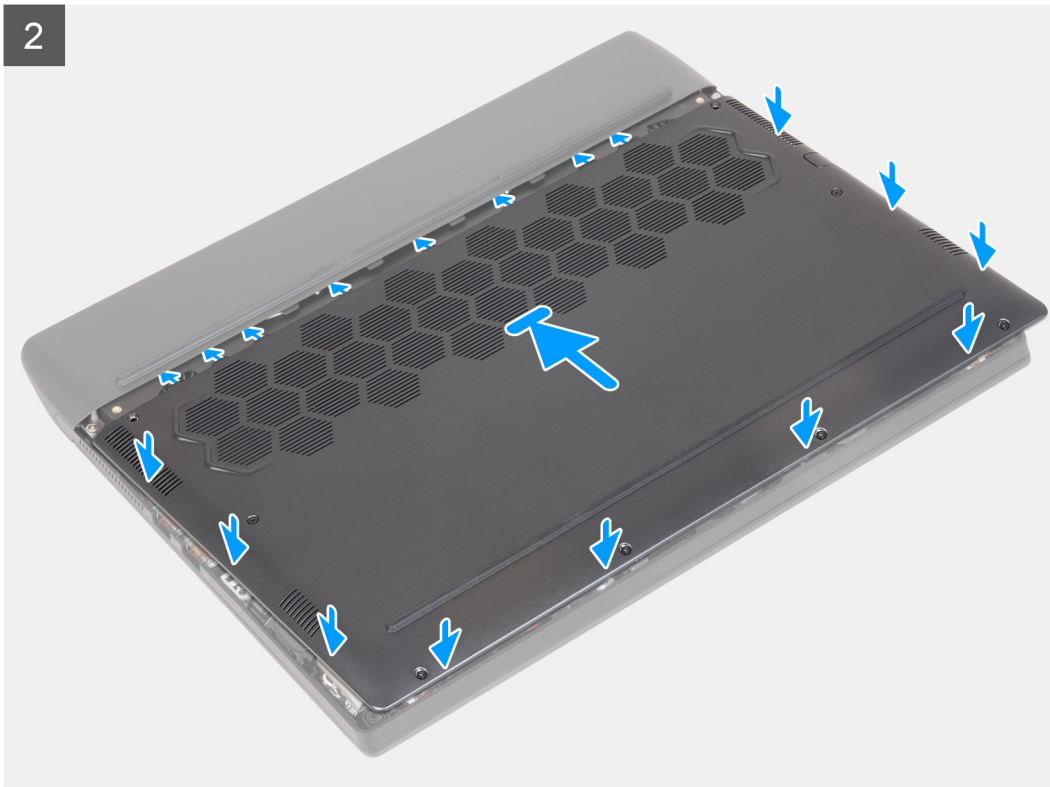



2x
M2.5x5



4x
M2.5x1.7+3.3



2x
M2.5x8.5+3.5

3



Steps

1. Connect the battery cable to the system board.
2. Slide the notches on the top of the base cover under the rear I/O-cover, and snap the base cover into place on the palm-rest and keyboard assembly.
3. Replace the two screws (M2.5x5) that secure the base cover to the palm-rest and keyboard assembly.
4. Tighten the two captive screws (M2.5x8.5+3.5) that secure the base cover to the palm-rest and keyboard assembly.
5. Tighten the four captive screws (M2.5x1.7+3.3) that secure the base cover to the palm-rest and keyboard assembly.

Next steps

1. Follow the procedure in [After working inside your computer](#).

Battery

Lithium-ion battery precautions

 CAUTION:

- Exercise caution when handling Lithium-ion batteries.

- Discharge the battery completely before removing it. Disconnect the AC power adapter from the system and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See www.dell.com/contactdell.
- Always purchase genuine batteries from www.dell.com or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen Lithium-ion batteries, see [Handling swollen Lithium-ion batteries](#).


Removing the battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the battery and provides a visual representation of the removal procedure.

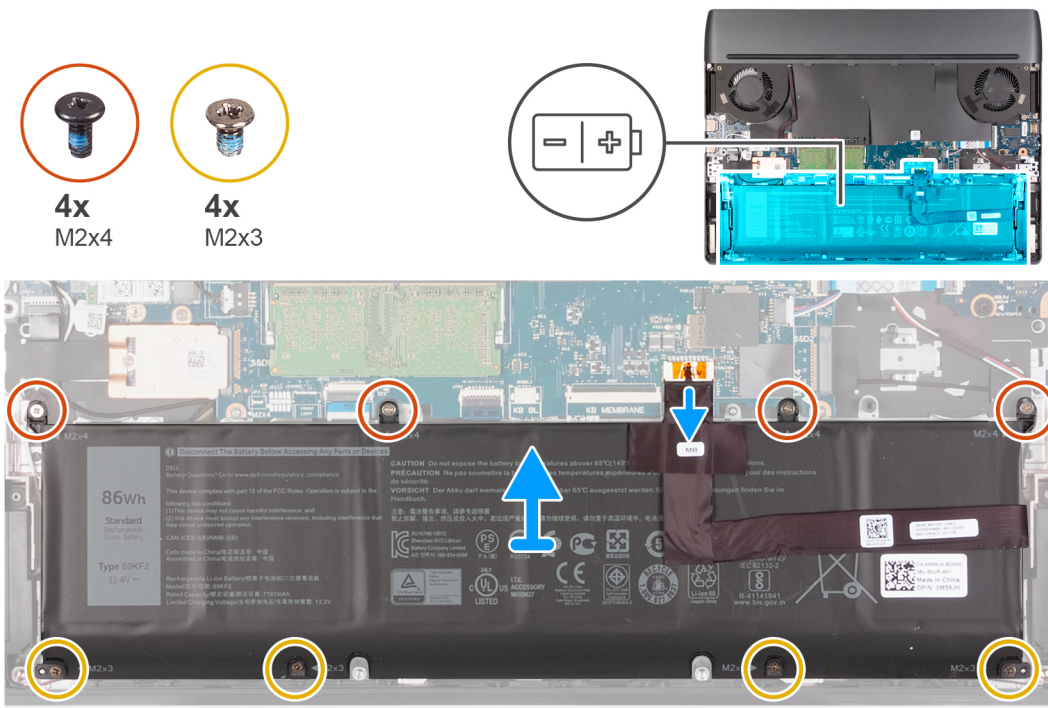

Steps

1. Disconnect the battery cable from the system board (applicable only if not disconnected earlier).

NOTE: After removing the battery, store the battery cable safely. The replacement battery will not be shipped with the battery cable. If you want to replace the battery cable, it has to be purchased separately.

2. Remove the four screws (M2x4) that secure the battery to the palm-rest and keyboard assembly.
3. Remove the four screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
4. Lift the battery off the palm-rest and keyboard assembly.


Installing the battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the battery and provides a visual representation of the installation procedure.

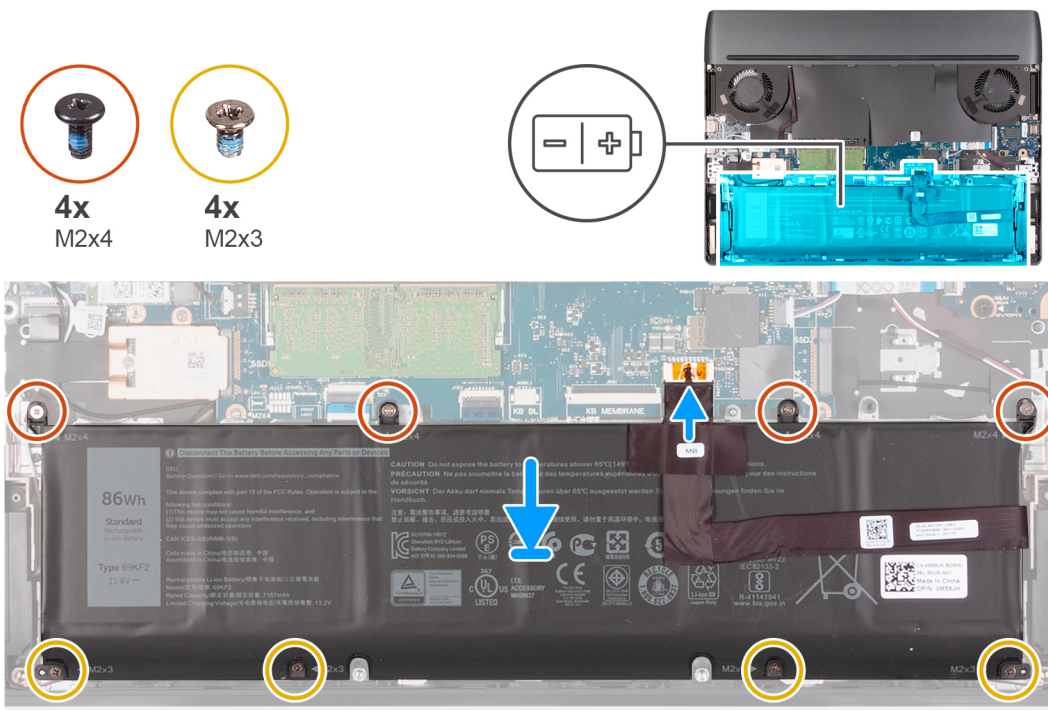

Steps

1. Using the alignment posts, place the battery on the palm-rest and keyboard assembly.
2. Align the screw holes on the battery with the screw holes on the palm-rest and keyboard assembly.
3. Replace the four screws (M2x4) that secure the battery to the palm-rest and keyboard assembly.
4. Replace the four screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
5. Connect the battery cable to the system board.

NOTE: If you are replacing your old battery with the new battery, use the battery cable that came with the old battery. If you want to replace the battery cable, it has to be purchased separately.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Battery cable

Lithium-ion battery precautions

△ CAUTION:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the system and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See www.dell.com/contactdell.
- Always purchase genuine batteries from www.dell.com or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen Lithium-ion batteries, see [Handling swollen Lithium-ion batteries](#).

Removing the battery cable

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

ⓘ **NOTE:** If battery is disconnected from system board for service, then there is a delay during system boot as the computer undergoes RTC battery reset.

About this task

The following images indicate the location of the battery cable and provide a visual representation of the removal procedure.



Steps

1. Flip the battery and remove the battery cable from the routing guides on the battery.
2. Disconnect the battery cable from the connector on the battery.
3. Lift the battery cable off the battery.



Installing the battery cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the battery cable and provides a visual representation of the installation procedure.

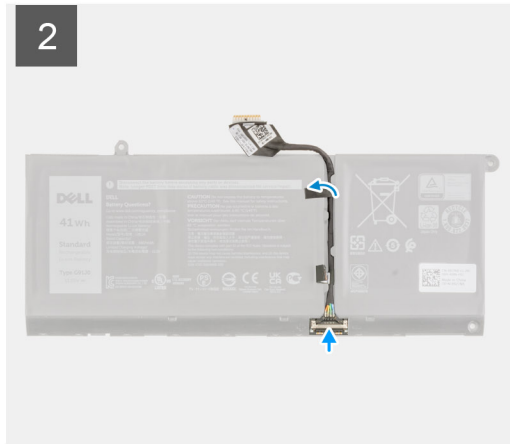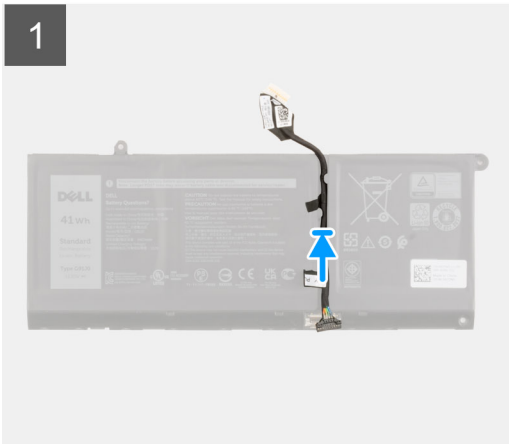

Steps

1. Align and place the battery cable on the battery.
2. Route the battery cable through the routing guides on the battery.
3. Connect the battery cable to the connector on the battery.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working on your computer](#).

Solid-state drive

Removing the 2230 solid-state drive in SSD slot one

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

 **CAUTION:** Solid-state drives are fragile. Exercise care when handling the solid-state drive.



 **CAUTION:** To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.

2. Remove the [base cover](#).

About this task

 **NOTE:** This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot one.

The following image indicates the location of the 2230 solid-state drive that is installed in SSD slot one and provides a visual representation of the removal procedure.

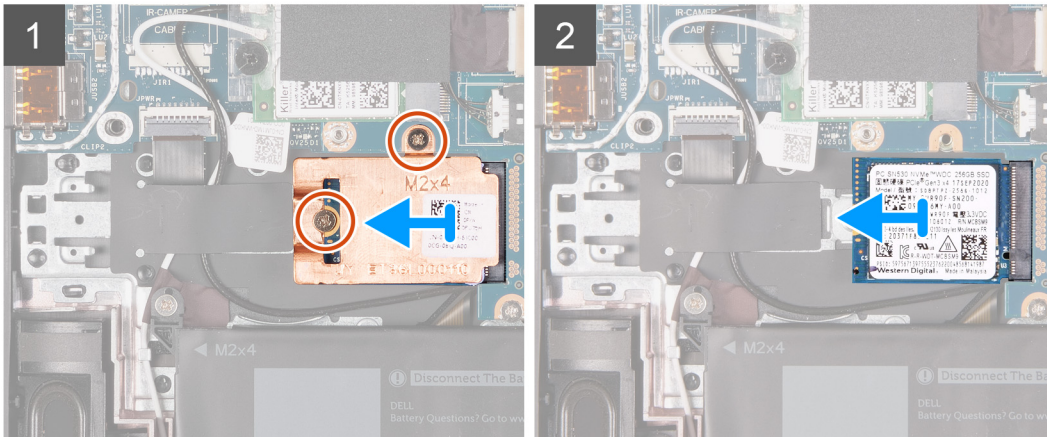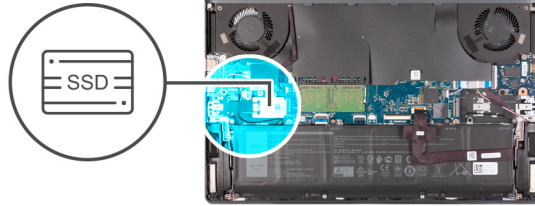

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.
2. Lift the thermal shield off the solid-state drive.
3. Slide and lift the solid-state drive off the solid-state drive slot on the system board.

Installing the 2230 solid-state drive in SSD slot one

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



- NOTE:** This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot one.
- NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot one.

If you want to replace your 2230 solid-state drive with a 2280 solid-state drive, see [procedure to move the screw mount](#).

The following image indicates the location of the 2230 solid-state drive that is installed in SSD slot one and provides a visual representation of the installation procedure.



2x
M2x4

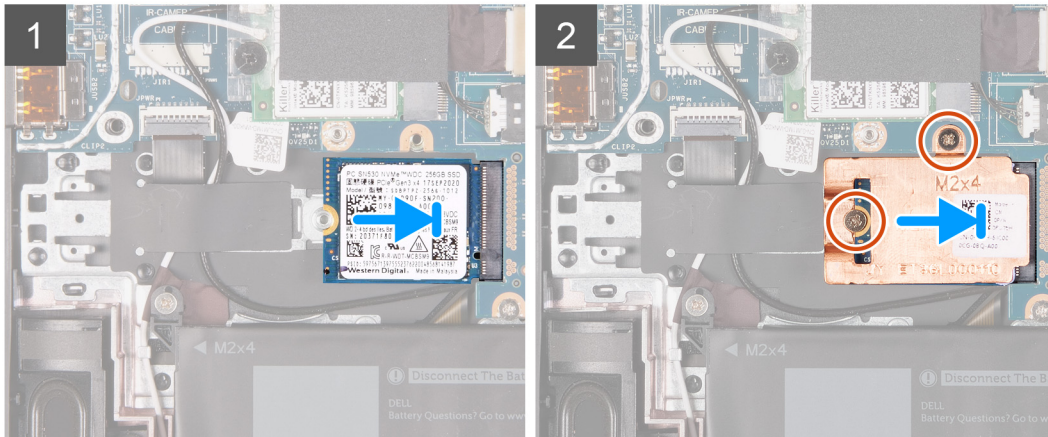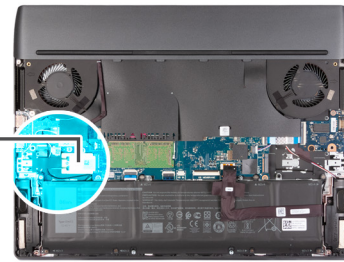

Steps



1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the thermal shield on the solid-state drive.
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.

Next steps



1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the 2280 solid-state drive in SSD slot one



Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2.  **CAUTION: Solid-state drives are fragile. Exercise care when handling the solid-state drive.**
 **CAUTION: To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.**
3. Remove the [base cover](#).

About this task

-  **NOTE:** This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot one.
-  **NOTE:** Slot one supports both PCIe Gen3/Gen4 SSD.

The following image indicates the location of the 2280 solid-state drive that is installed in SSD slot one and provides a visual representation of the removal procedure.

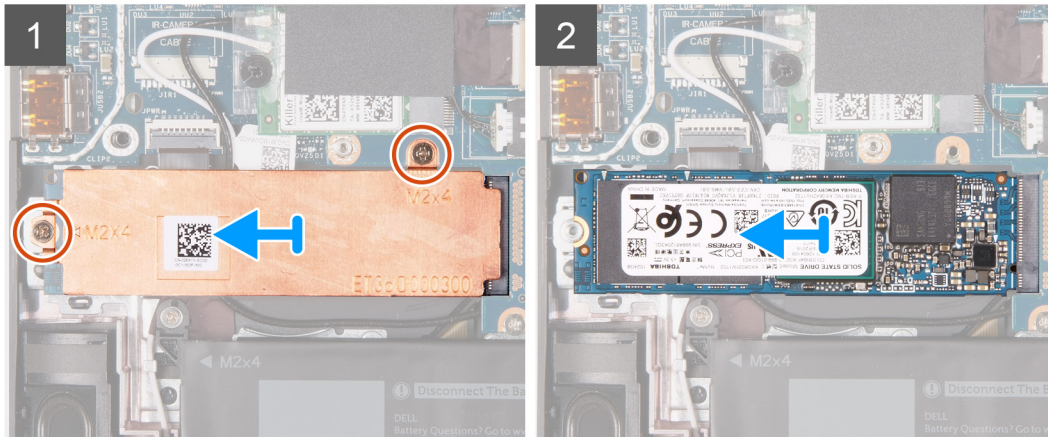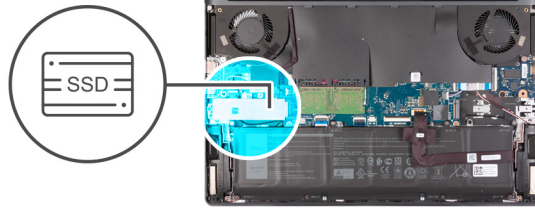

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.
2. Lift the thermal shield off the solid-state drive.
3. Slide and lift the solid-state drive off the solid-state drive slot on the system board.

Installing the 2280 solid-state drive in SSD slot one

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



- NOTE:** This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot one.
- NOTE:** Slot one supports both PCIe Gen3/Gen4 SSD.
- NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot one.

If you want to replace your 2230 solid-state drive with a 2280 solid-state drive, see [procedure to move the screw mount](#).

The following image indicates the location of the 2280 solid-state drive that is installed in SSD slot one and provides a visual representation of the installation procedure.



2x
M2x4

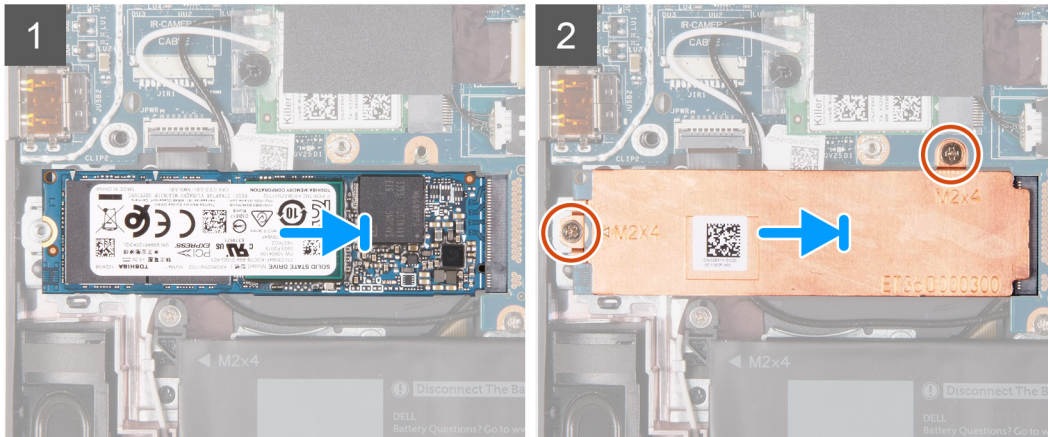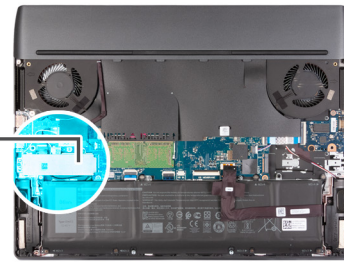

Steps



1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the thermal shield on the solid-state drive.
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.

Next steps



1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the 2230 solid-state drive in SSD slot two

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2.  **CAUTION: Solid-state drives are fragile. Exercise care when handling the solid-state drive.**
 **CAUTION: To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.**
3. Remove the [base cover](#).



About this task

-  **NOTE:** This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot two.
-  **NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot two.

The following image indicates the location of the 2230 solid-state drive that is installed in SSD slot two and provides a visual representation of the removal procedure.



2x
M2x4

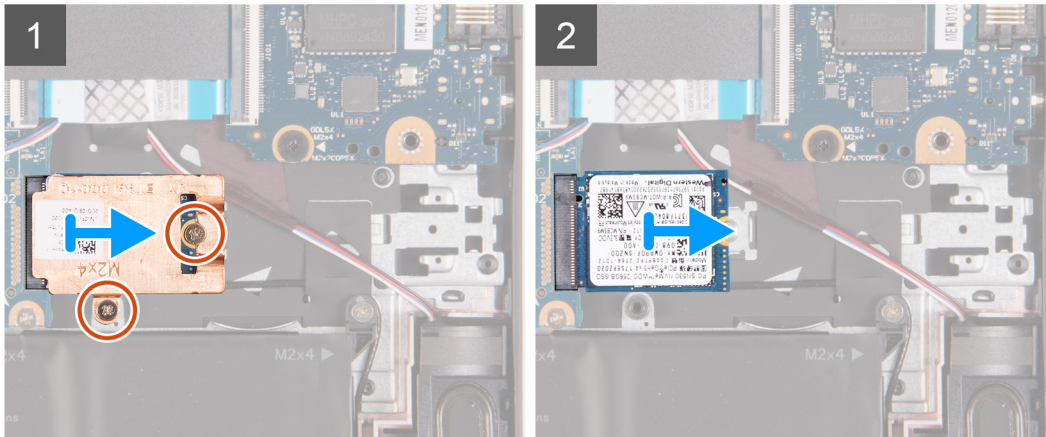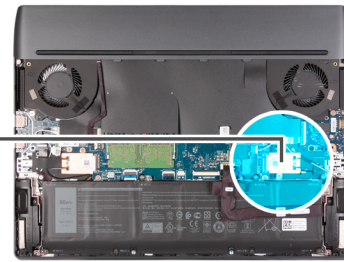

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the solid-state drive and system board.
2. Lift the thermal shield off the solid-state drive.
3. Slide and lift the solid-state drive off the solid-state drive slot on the system board.

Installing the 2230 solid-state drive in SSD slot two

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



- NOTE:** This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot two.
- NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot two.

If you want to replace your 2280 solid-state drive with a 2230 solid-state drive, see [procedure to change the screw mount](#).

The following image indicates the location of the 2230 solid-state drive installed in SSD slot two and provides a visual representation of the installation procedure.



2x
M2x4

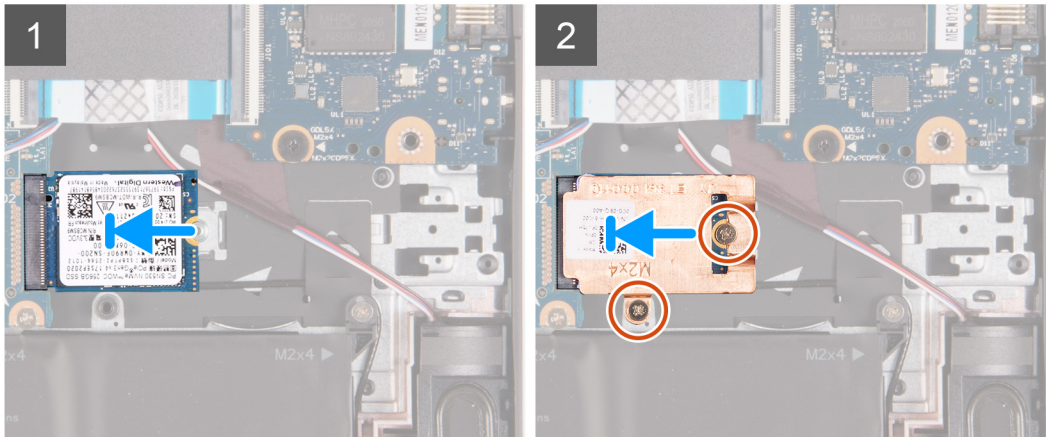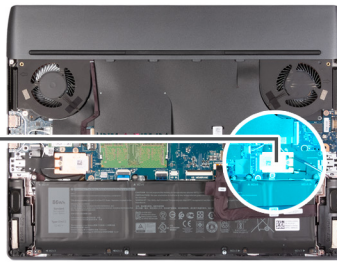

Steps



1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the thermal shield on the solid-state drive.
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x4) that secure the solid-state drive to the system board.

Next steps




1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the 2280 solid-state drive in SSD slot two

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2.  **CAUTION: Solid-state drives are fragile. Exercise care when handling the solid-state drive.**
3.  **CAUTION: To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.**
3. Remove the [base cover](#).



About this task

-  **NOTE:** This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot two.
-  **NOTE:** Slot two supports PCIe Gen3 SSD only.
-  **NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot two.

The following image indicates the location of the 2280 solid-state drive that is installed in SSD slot two and provides a visual representation of the removal procedure.



2x
M2x4

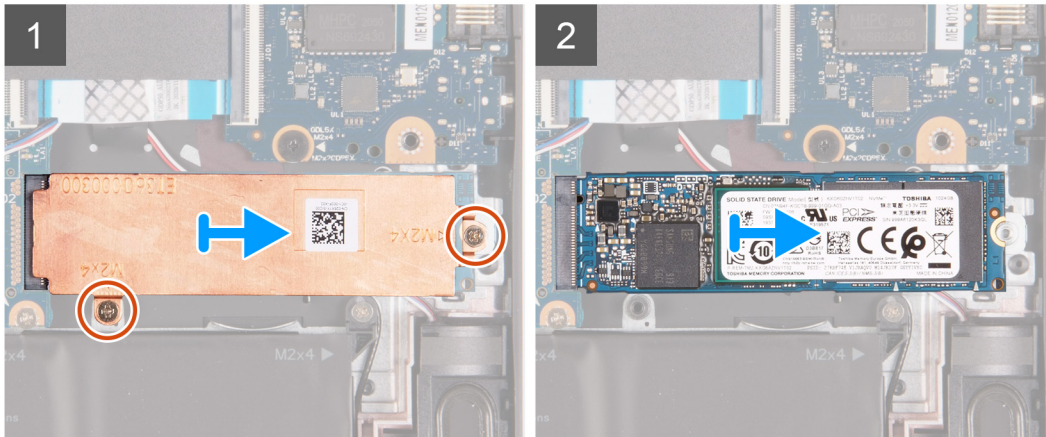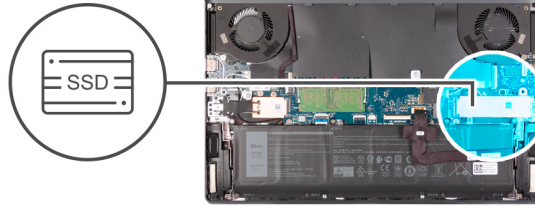

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the solid-state drive and system board.
2. Lift the thermal shield off the solid-state drive.
3. Slide and lift the solid-state drive off the solid-state drive slot on the system board.

Installing the 2280 solid-state drive in SSD slot two

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

- NOTE:** This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot two.
- NOTE:** Slot two supports PCIe Gen3 SSD only.
- NOTE:** Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot two.

If you want to replace your 2280 solid-state drive with a 2230 solid-state drive, see [procedure to change the screw mount](#).

The following image indicates the location of the 2280 solid-state drive installed in SSD slot two and provides a visual representation of the installation procedure.

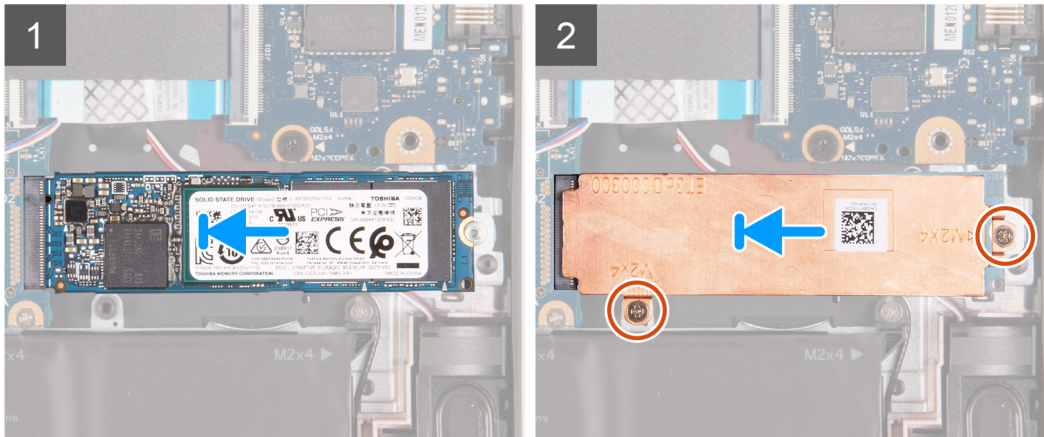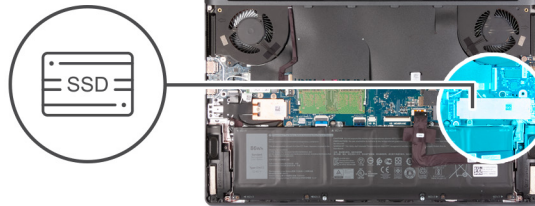

Steps

1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the thermal shield on the solid-state drive.
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x4) that secure the solid-state drive to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Procedure to move the screw mount in SSD slot one

About this task


This computer supports two solid-state drive form factors in SSD slot one:

- M.2 2230
- M.2 2280

If you are replacing the current solid-state drive in SSD slot one, with another solid-state drive that is of a different form factor, see the following procedure to move the location of the screw mount in SSD slot one.

Steps

1. Slide to remove the screw mount from the palm-rest and keyboard assembly.
2. Slide the screw mount into the other screw mount slot on the palm-rest and keyboard assembly.

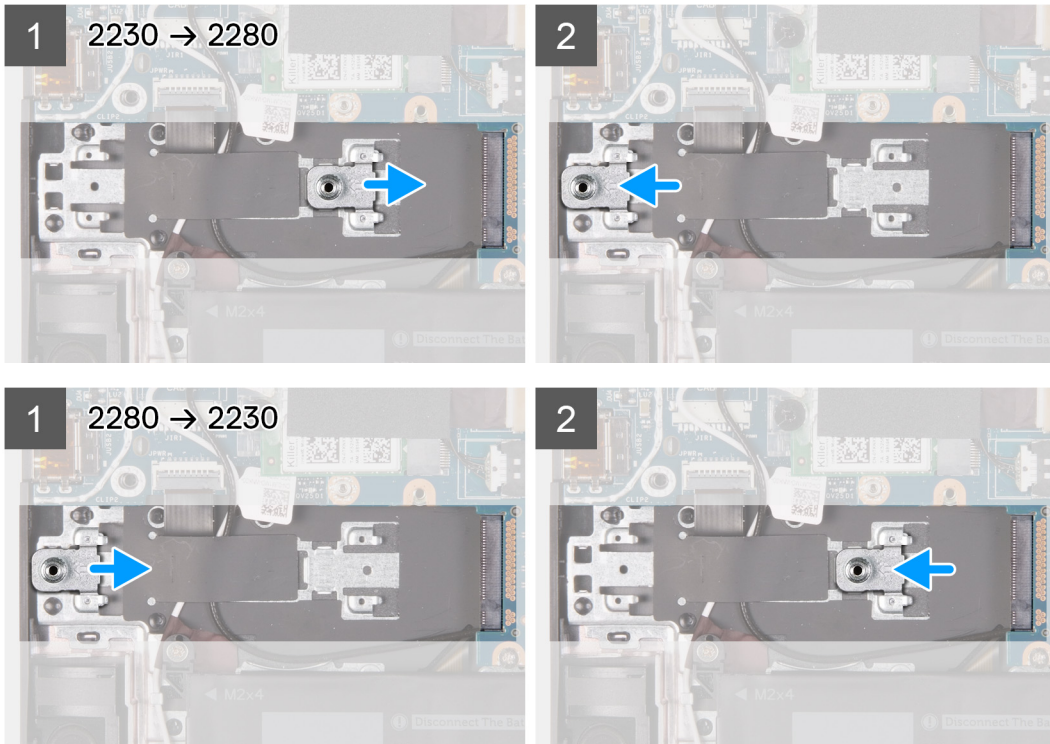

3. To install a 2230 solid-state drive in SSD slot one, see [installing the 2230 solid-state drive in SSD slot one](#).
4. To install a 2280 solid-state drive in SSD slot one, see [installing the 2280 solid-state drive in SSD slot one](#).

Procedure to move the screw mount in SSD slot two

About this task


This computer supports two solid-state drive form factors in SSD slot two:


- M.2 2230
- M.2 2280

If you are replacing the current solid-state drive in SSD slot two, with another solid-state drive that is of a different form factor, see the following procedure to move the location of the screw mount in SSD slot two.

Steps

1. Slide to remove the screw mount from the palm-rest and keyboard assembly.
2. Slide the screw mount into the other screw mount slot on the palm-rest and keyboard assembly.

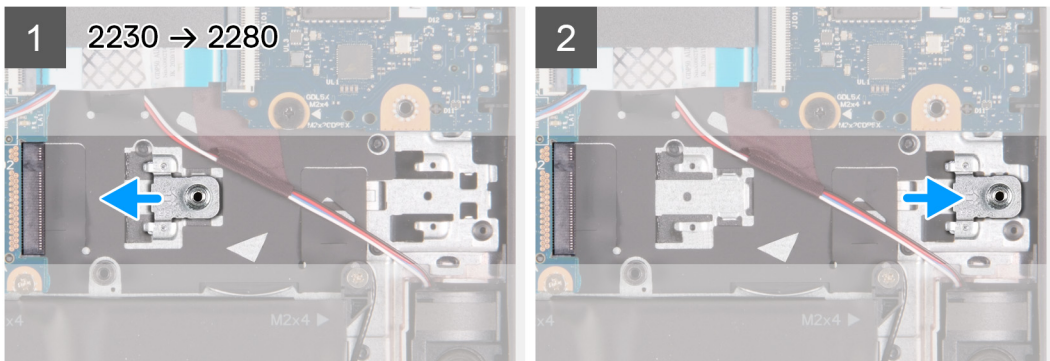

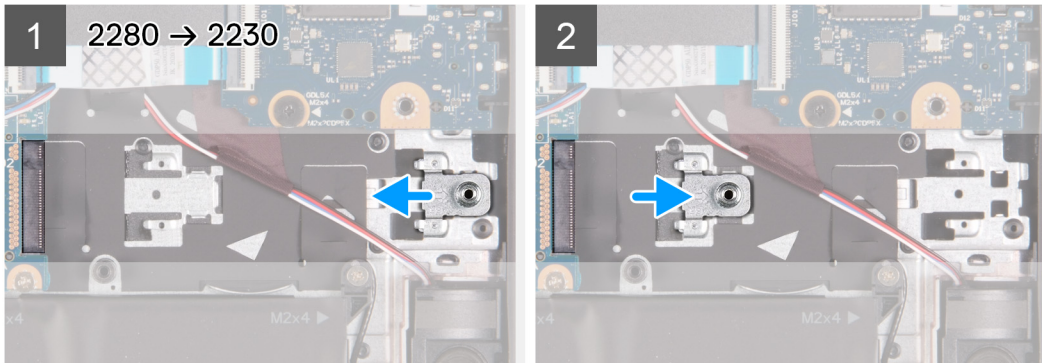

3. To install a 2230 solid-state drive in SSD slot two, see [installing the 2230 solid-state drive in SSD slot two](#).
4. To install a 2280 solid-state drive in SSD slot two, see [installing the 2280 solid-state drive in SSD slot two](#).

Speakers


Removing the speakers

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
 2. Remove the [base cover](#).
 3. Remove the [battery](#).
 4. Remove the [2280 solid-state drive in SSD slot 2](#).
- i** **NOTE:** This step is required if the device is shipped with a 2280 solid-state drive in SSD slot 2.

About this task

The following image indicates the location of the speakers and provides a visual representation of the removal procedure.

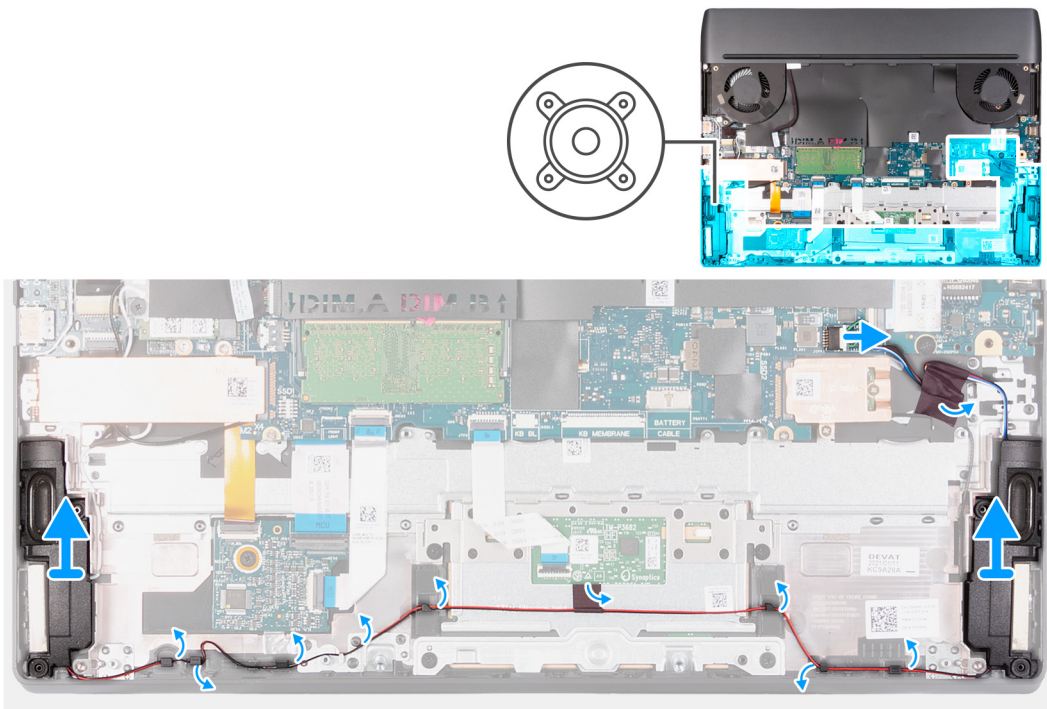

Steps

1. Disconnect the speaker cable from the system board.
2. Peel the tape that secures the speaker cable to the palm-rest and keyboard assembly.
3. Peel the tape that secures the speaker cable to the touchpad bracket.
4. Note the speaker cable routing, and remove the speaker cable from the routing guides on the palm-rest and keyboard assembly.
5. Lift the speakers, along with the cables, off the palm-rest and keyboard assembly.


Installing the speakers

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the speakers and provides a visual representation of the installation procedure.

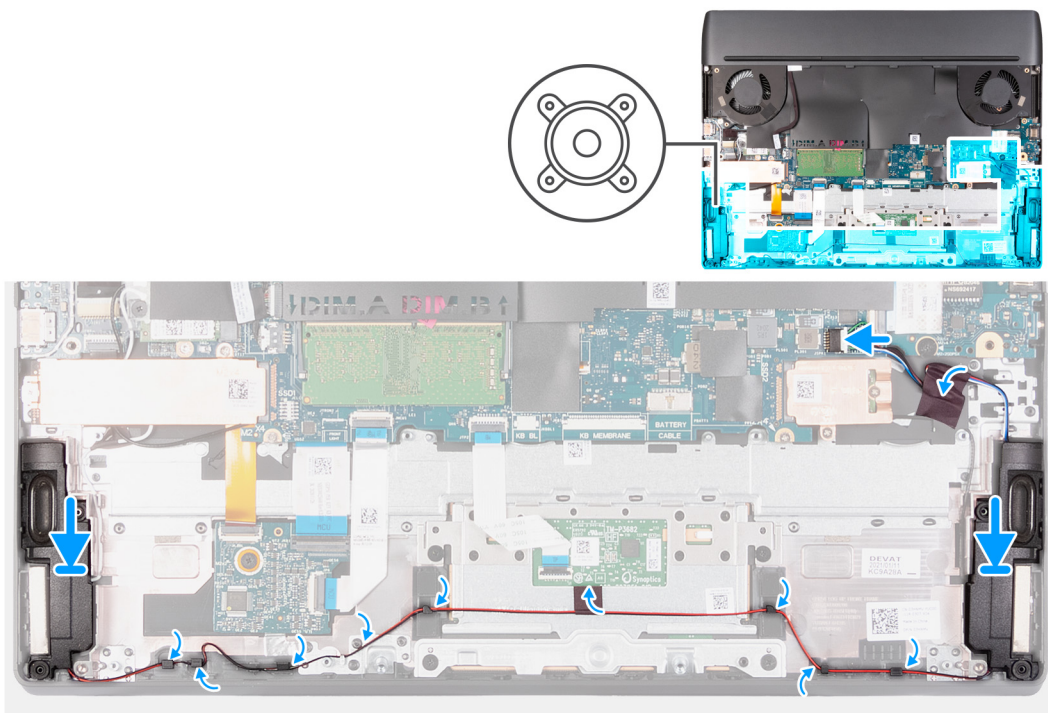

Steps

1. Using the alignment posts and rubber grommets, place the speakers in the slots on the palm-rest and keyboard assembly.
NOTE: If the rubber grommets are pushed out of the speakers when removing the speakers, push them back in place before replacing the speakers.
2. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly.
3. Adhere the tape that secures the speaker cable to the touchpad bracket.
4. Adhere the tapes that secure the speaker cable to the palm-rest and keyboard assembly.
5. Connect the speaker cable to the system board.

Next steps

1. Install the [2280 solid-state drive 2 in SSD slot 2](#).
NOTE: This step is required if the device is shipped with a 2280 solid-state drive in SSD slot 2.
2. Install the [battery](#).
3. Install the [base cover](#).

4. Follow the procedure in [After working inside your computer.](#)

Audio and ethernet daughterboard




Removing the audio and ethernet daughterboard (FFC)

Prerequisites

1. Follow the procedure in [Before working inside your computer.](#)
2. Remove the [base cover.](#)

About this task

The following images indicate the location of the audio and ethernet daughterboard and provide a visual representation of the removal procedure.

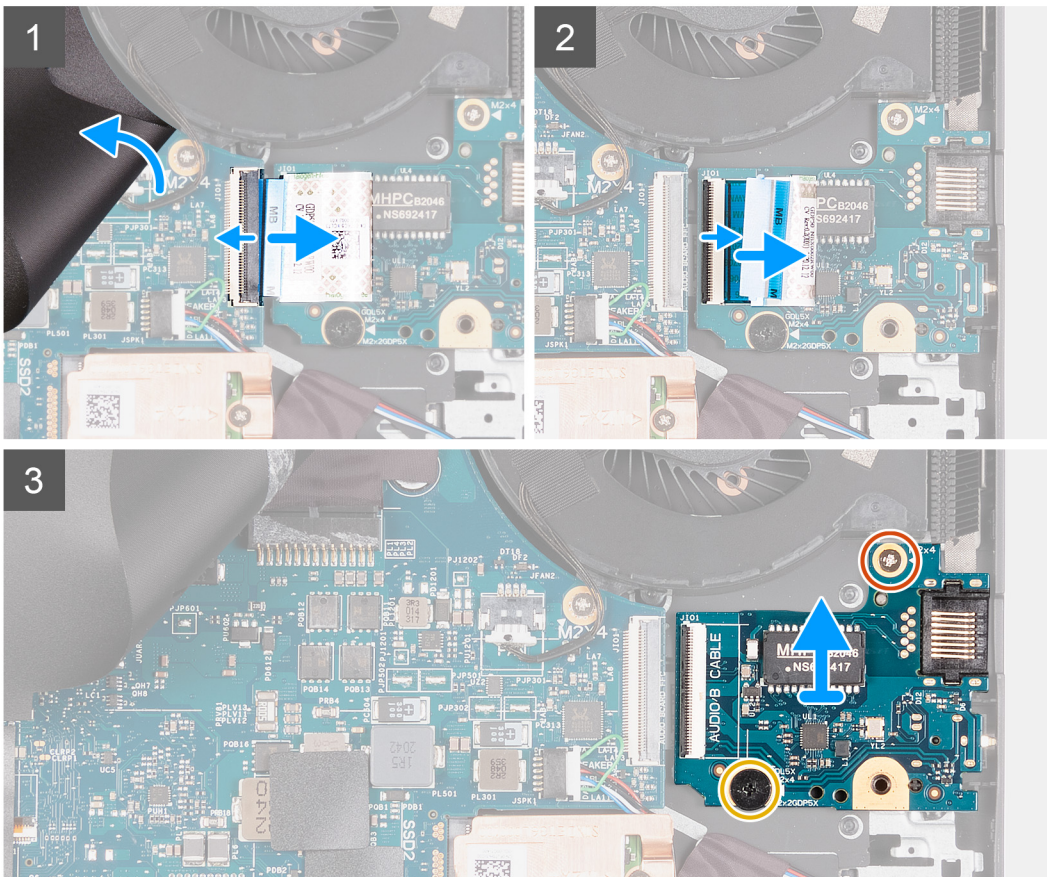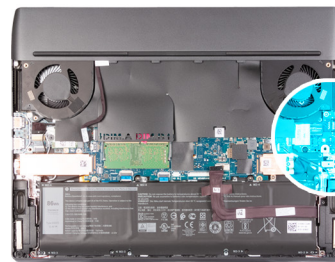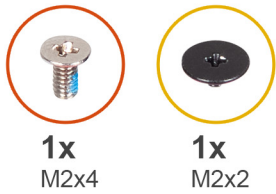

NOTE: The audio and ethernet daughterboard features a flexible flat cable (FFC).

Steps

1. Lift the system board Mylar and open the latch to disconnect the flexible flat cable from the system board.

2. Open the latch to disconnect the flexible flat cable from the audio and ethernet daughterboard.
3. Remove the screw (M2x4) that secures the audio and ethernet daughterboard to the palm-rest and keyboard assembly.
 - ⓘ **NOTE:** If the computer is shipped with the NVIDIA GeForce RTX 3050 Ti discrete GPU controller, there are two screws (M2x4) that secure the audio and ethernet daughterboard to the palm-rest and keyboard assembly. Remove the two screws (M2x4) and go to step 5.
4. Loosen the captive screw (M2x2) that secures the audio and ethernet daughterboard to the palm-rest and keyboard assembly.
 - ⓘ **NOTE:** If your computer is shipped with the NVIDIA GeForce RTX 3050 Ti discrete GPU controller, skip this step and go to step 5.
5. Lift the audio and ethernet daughterboard off the palm-rest and keyboard assembly.




Installing the audio and ethernet daughterboard (FFC)

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the audio and ethernet daughterboard and provide a visual representation of the installation procedure.

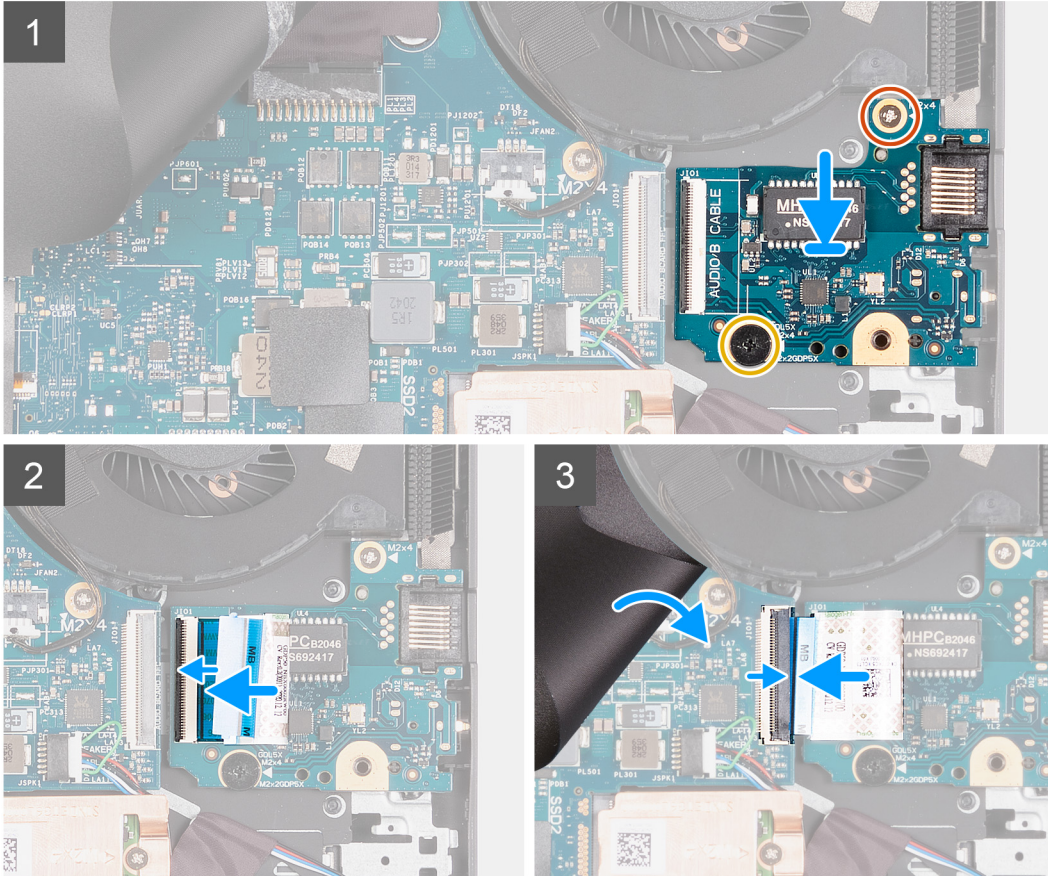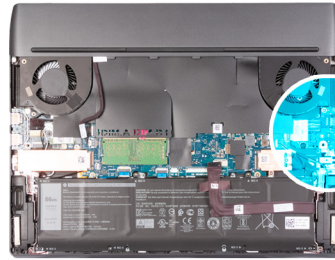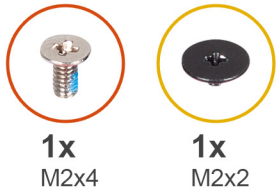

NOTE: The audio and ethernet daughterboard features a flexible flat cable (FFC).

Steps

1. Peel back the system board Mylar.
2. Align and place the audio and ethernet daughterboard on the palm-rest and keyboard assembly.
3. Replace the screw (M2x4) that secures the audio and ethernet daughterboard to the palm-rest and keyboard assembly.
 - NOTE:** If the device is shipped with the NVIDIA GeForce RTX 3050 Ti discrete GPU controller, replace the two screws (M2x4) that secure the audio and ethernet daughterboard to the palm-rest and keyboard assembly. Go to step 5.
4. Tighten the captive screw (M2x2) that secures the audio and ethernet daughterboard to the palm-rest and keyboard assembly.
 - NOTE:** If the device is shipped with the NVIDIA GeForce RTX 3050 Ti discrete GPU controller, skip this step and go to step 5.
5. Connect the flexible flat cable to the audio and ethernet daughterboard and close the latch to secure the cable.
6. Connect the flexible flat cable to the system board and close the latch to secure the cable.
7. Place the system board Mylar back on the system board.

Next steps

1. Install the [base cover](#).

2. Follow the procedure in [After working inside your computer.](#)


Removing the audio and ethernet daughterboard (M.2 interface)

Prerequisites

1. Follow the procedure in [Before working inside your computer.](#)
 2. Remove the [base cover.](#)
 3. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
 4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
 5. Remove the [memory module.](#)
 6. Remove the [wireless card.](#)
 7. Remove the [display assembly.](#)
 8. Remove the [battery.](#)
 9. Remove the [rear I/O-cover.](#)
 10. Follow the procedure from step 1 to step 18 in [Removing the system board.](#)
- i** **NOTE:** The system board can be removed with the heat-sink assembly and USB board attached. This applies to the computer, which is shipped with an audio and ethernet daughterboard (M.2 interface).

About this task

The following images indicate the location of the audio and ethernet daughterboard and provide a visual representation of the removal procedure.

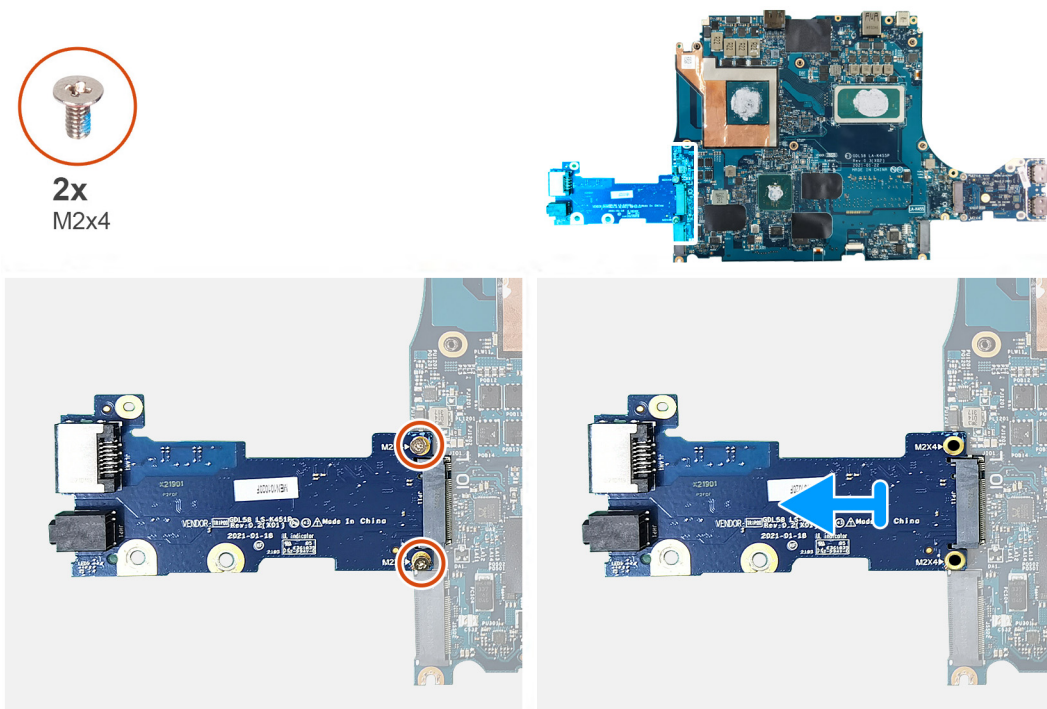

i **NOTE:** The audio and ethernet daughterboard features a M.2 interface.

Steps

1. Turn the system board over and remove the two screws (M2x4) that secure the audio and ethernet daughterboard to the system board.
2. Pull the audio and ethernet daughterboard to disconnect the board from the M.2 connector on the system board.


Installing the audio and ethernet daughterboard (M.2 interface)

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the audio and ethernet daughterboard and provide a visual representation of the installation procedure.

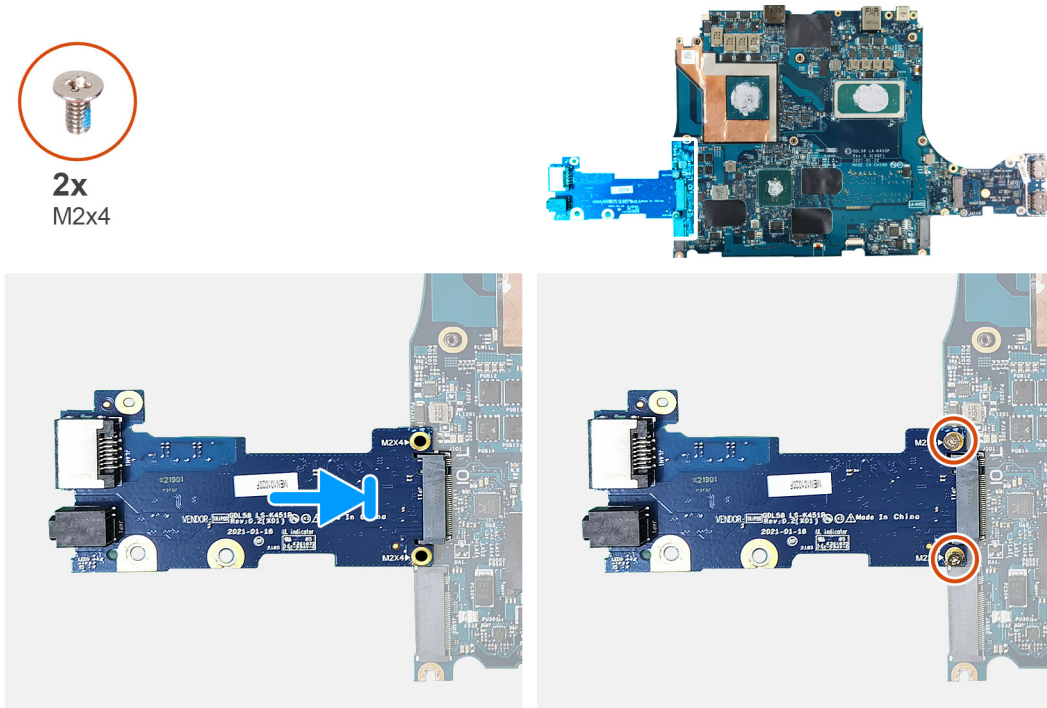

NOTE: The audio and ethernet daughterboard features a M.2 interface.

Steps

1. Turn over the system board, insert the audio and ethernet daughterboard into the M.2 connector on the system board.
2. Replace the two screws (M2x4) that secure the audio and ethernet daughterboard to the system board.

Next steps

1. Follow the procedure from step 5 to step 21 in [Installing the system board](#).
2. Install the [rear I/O-cover](#).
3. Install the [battery](#).
4. Install the [display assembly](#).
5. Install the [wireless card](#).
6. Install the [memory module](#).
7. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
8. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
9. Install the [base cover](#).
10. Follow the procedure in [After working inside your computer](#).

Memory module





Removing the memory module

Prerequisites

1. Follow the procedure in [Before working inside your computer.](#)
2. Remove the [base cover.](#)

About this task

The following image indicates the location of the memory module and provides a visual representation of the removal procedure.

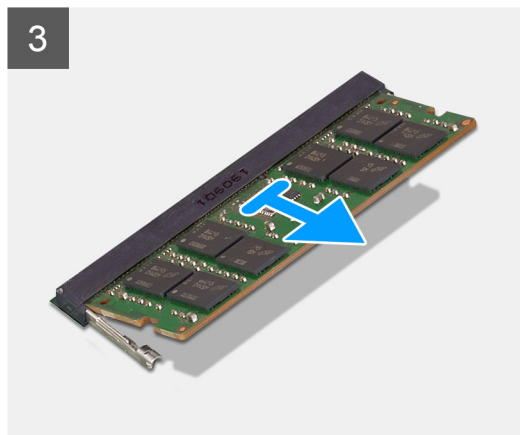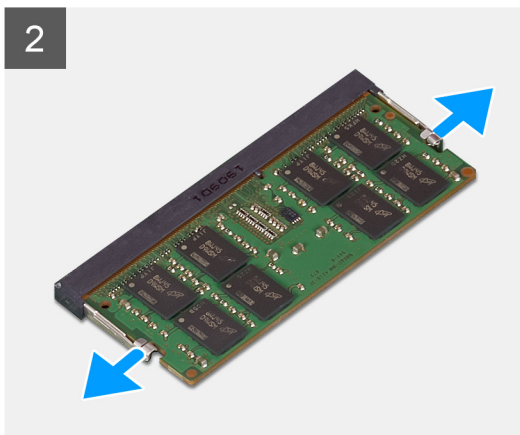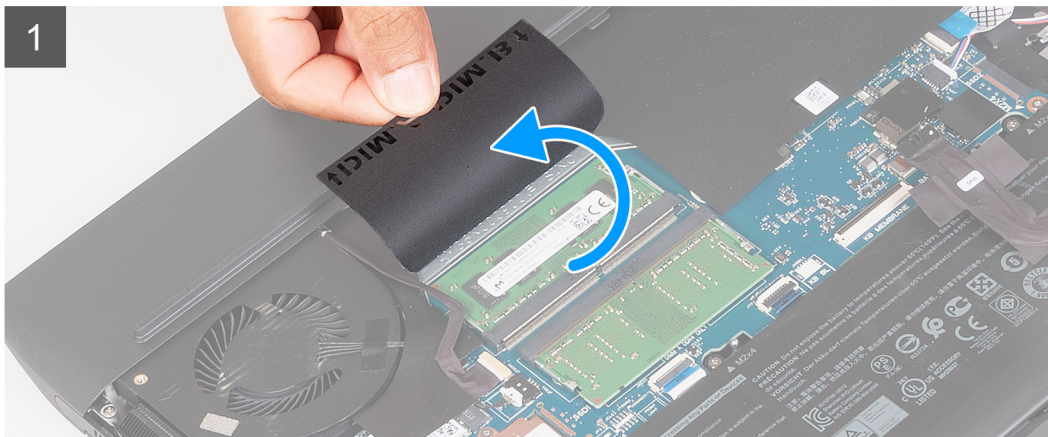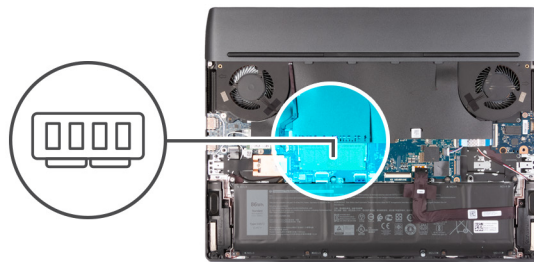

Steps

1. Lift the system board Mylar to access the memory module.
2. Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.
3. Remove the memory module from the memory-module slot.

i | **NOTE:** Repeat step 1 and step 3 to remove the other memory module, if installed on your computer.



Installing the memory module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the memory module and provides a visual representation of the installation procedure.

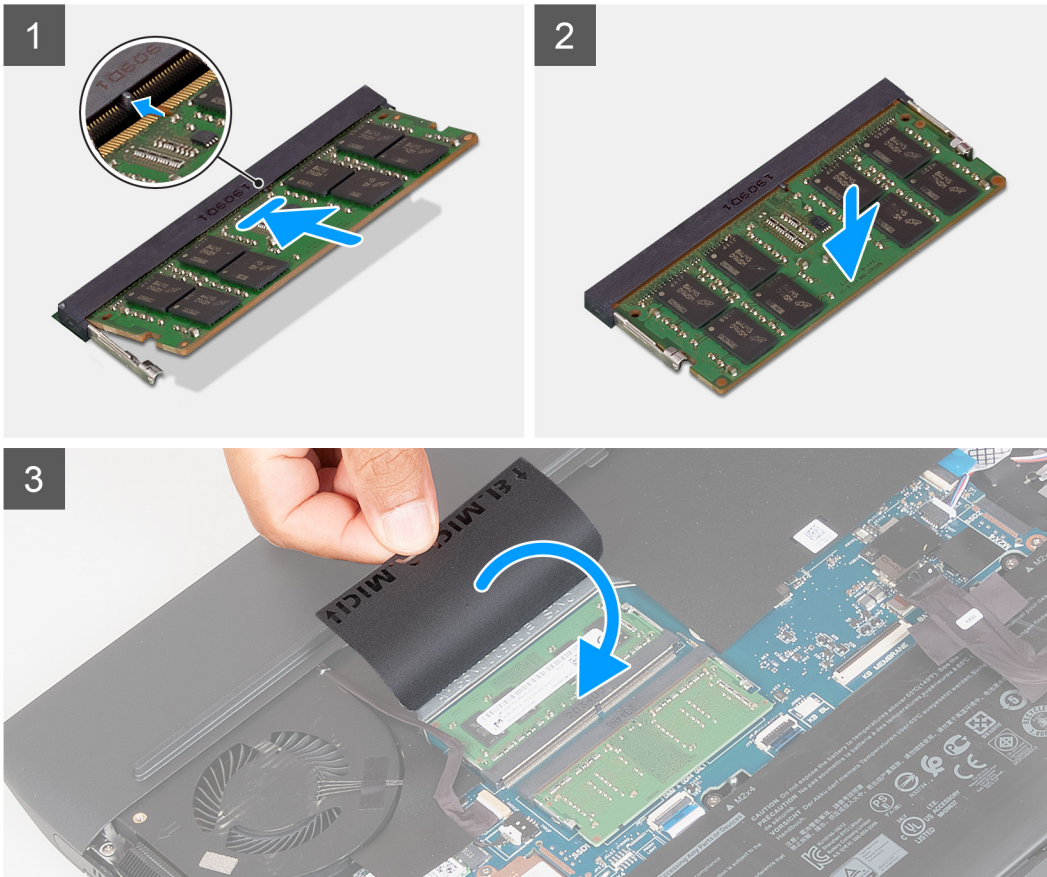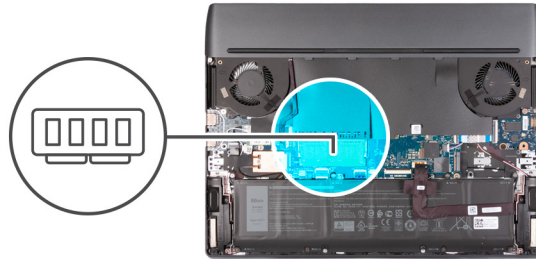

Steps

1. Lift the system board Mylar to access the memory-module slot.
2. Align the notch on the memory module with the tab on the memory-module slot.
3. Slide the memory module firmly into the slot at an angle.
4. Press the memory module down until it clicks into place.

i | **NOTE:** If you do not hear the click, remove the memory module and reinstall it.

i | **NOTE:** Repeat step 1 to step 4 to install the other memory module, if available on your computer.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Wireless card

Removing the wireless card

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.



1x
M2x4

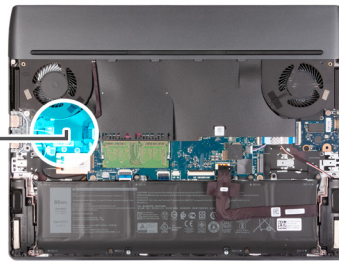

Steps

1. Lift the system board Mylar to access the wireless card.
2. Remove the screw (M2x4) that secures the wireless-card bracket to the system board and palm-rest and keyboard assembly.
3. Lift the wireless-card bracket off the wireless card.
4. Disconnect the antenna cables from the wireless card.
5. Slide and remove the wireless card from the wireless-card slot.

Installing the wireless card

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the wireless card and provides a visual representation of the installation procedure.



1x
M2x4

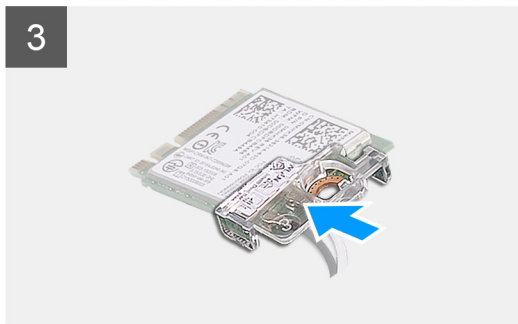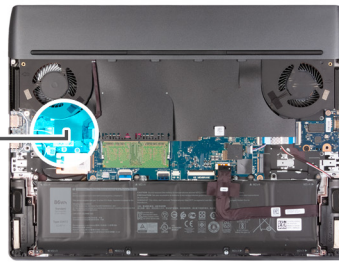

Steps

1. Lift the system board Mylar to access the wireless-card slot.
2. Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card that is supported by your computer.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

3. Align the notch on the wireless card with the tab on the wireless-card slot and insert the wireless card at an angle into the wireless-card slot.
4. Align and place the wireless-card bracket on the wireless card.
5. Replace the screw (M2x4) that secures the wireless-card bracket to the system board and palm-rest and keyboard assembly.

- Secure the wireless-card cables to the palm-rest and keyboard assembly with the keyboard Mylar.

Next steps

- Install the [base cover](#).
- Follow the procedure in [After working inside your computer](#).

Rear-I/O cover

Removing the rear I/O-cover

Prerequisites

- Follow the procedure in [Before working inside your computer](#).
- Remove the [base cover](#).

About this task



The following image indicates the location of the rear I/O-cover and provides a visual representation of the removal procedure.



2x
M2.5x5



2x
M2x4

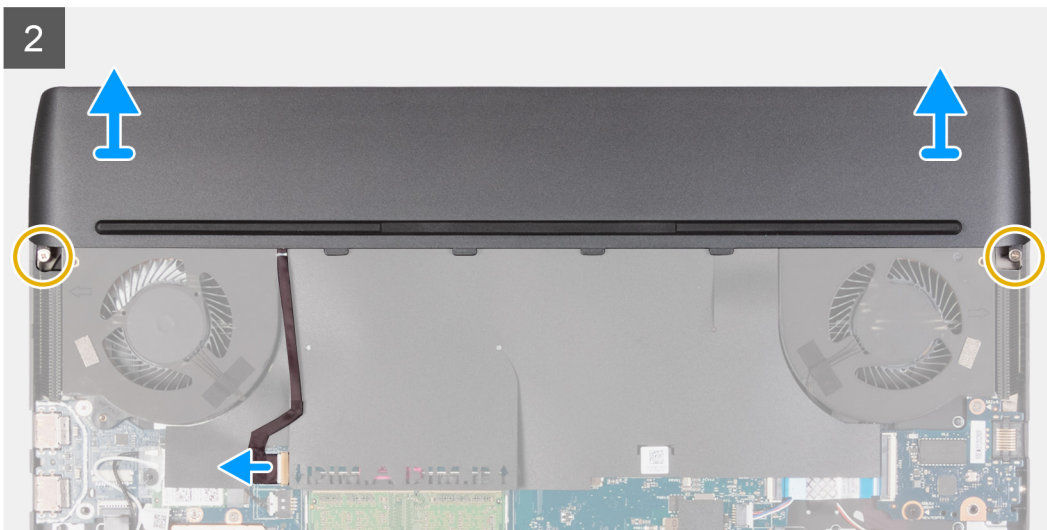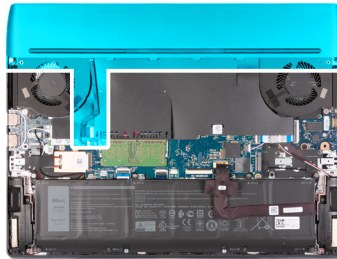

Steps

- Remove the two screws (M2x4) that secure the rear I/O-cover to the palm-rest and keyboard assembly.

2. Remove the two screws (M2.5x5) that secure the rear I/O-cover to the palm-rest and keyboard assembly.
3. Disconnect the Tron light cable from the system board.
4. Firmly grasp the sides of your computer with both hands and push the rubber feet on the rear I/O-cover outwards with your thumbs to release the rear I/O-cover from the palm-rest and keyboard assembly.
5. Slide the rear I/O-cover away from the palm-rest and keyboard assembly.


Installing the rear I/O-cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the rear I/O-cover and provides a visual representation of the installation procedure.

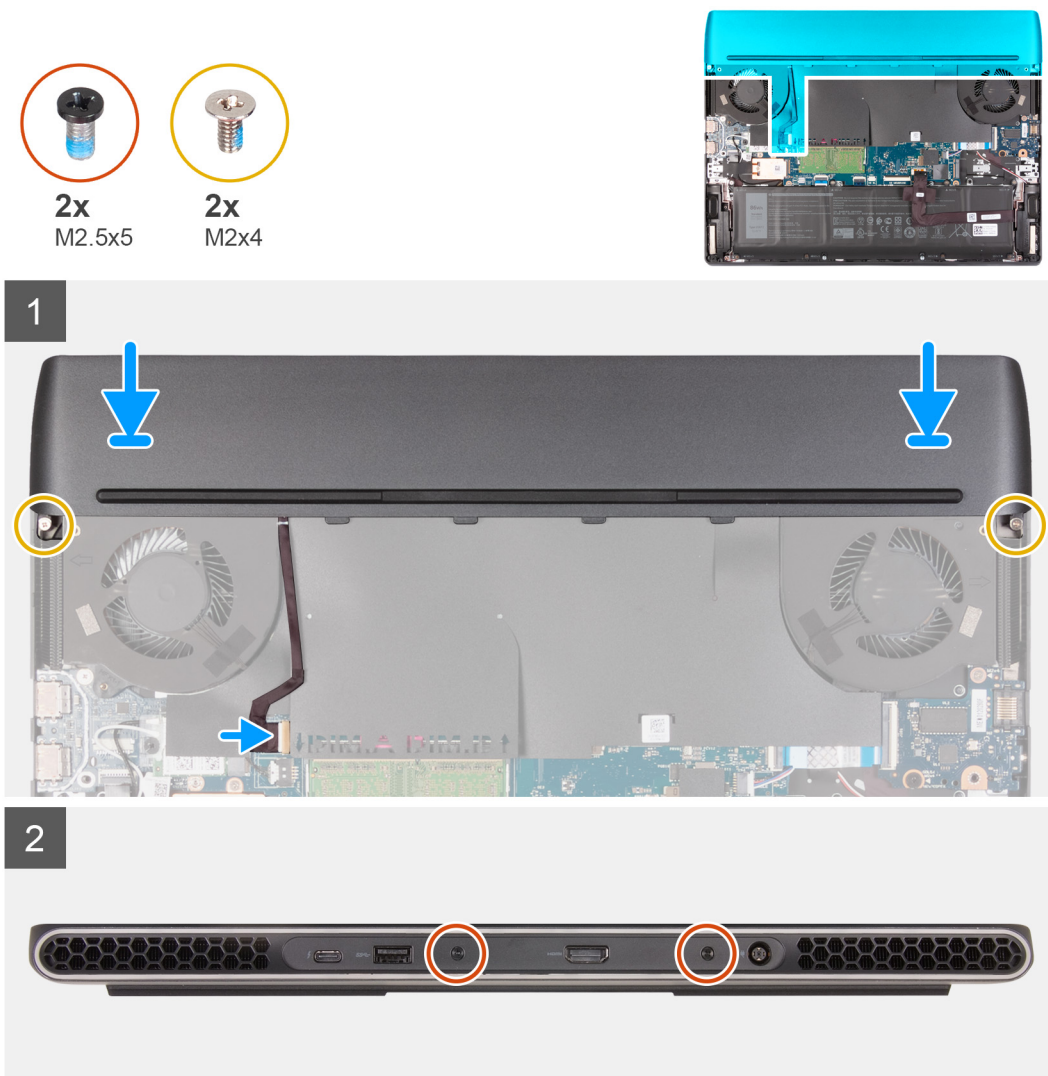

Steps

1. Slide the rear I/O-cover onto the palm-rest and keyboard assembly until it snaps into place.
2. Replace the two screws (M2x4) that secure the rear I/O-cover to the palm-rest and keyboard assembly.
3. Connect the Tron light cable to the system board.
4. Replace the two screws (M2.5x5) that secure the rear I/O-cover to the palm-rest and keyboard assembly.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Touchpad


Removing the touchpad

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

About this task

The following image indicates the location of the touchpad and provides a visual representation of the removal procedure.

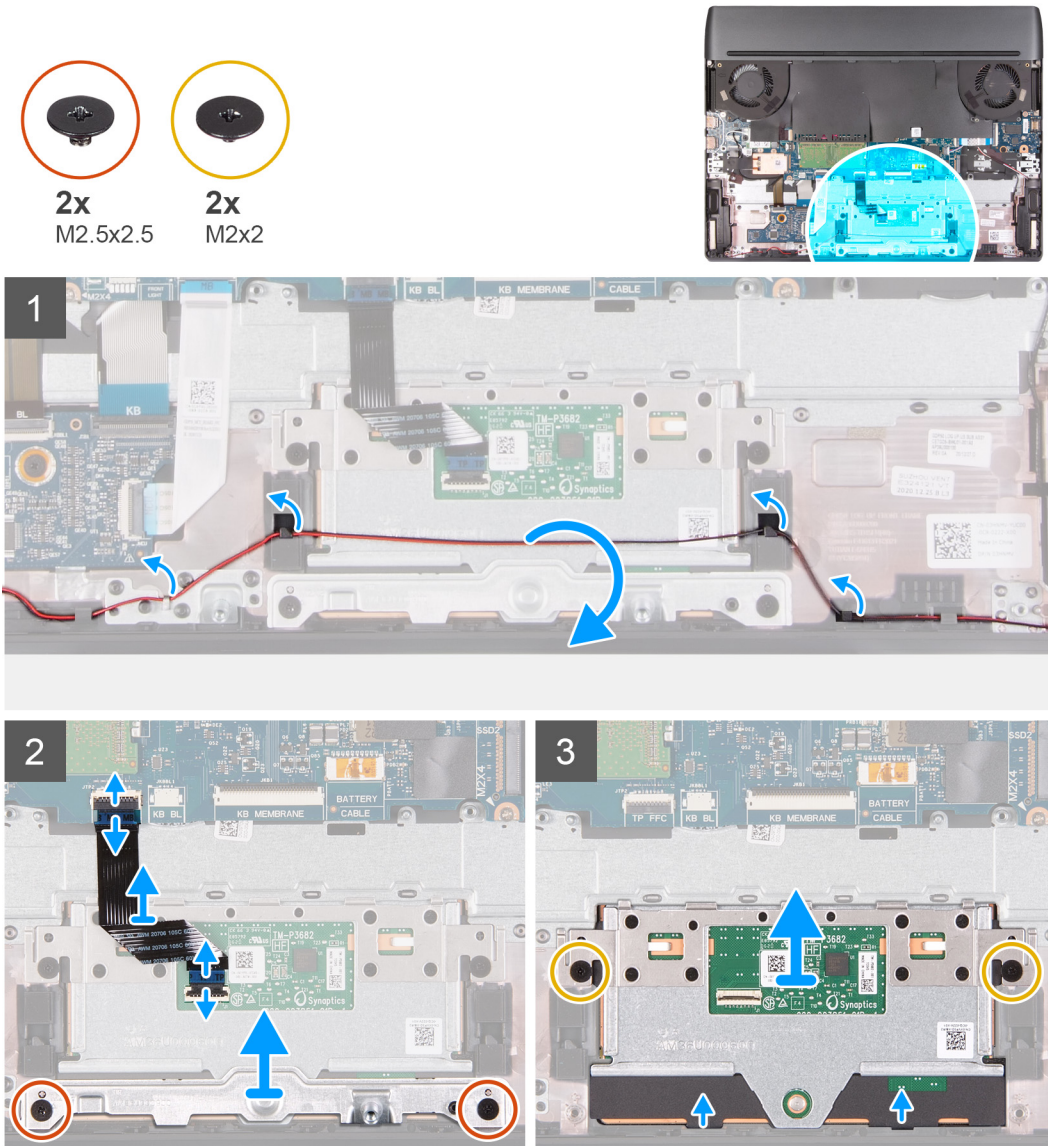

Steps

1. Remove the speaker cable from the routing guides on the palm-rest and keyboard assembly.
2. Open the latch and disconnect the touchpad cable from the system board.
3. Open the latch and disconnect the touchpad cable from the touchpad.
4. Remove the two (M2.5x2.5) screws that secure the touchpad bracket to the palm-rest and keyboard assembly.
5. Lift the touchpad bracket off the palm-rest and keyboard assembly.
 - ⓘ **NOTE:** Install the touchpad bracket on the replacement palm-rest and keyboard assembly. The touchpad bracket is not available on the replacement palm-rest and keyboard assembly.
6. Remove the two (M2x2) screws that secure the touchpad to the palm-rest and keyboard assembly.
7. Lift the touchpad off the palm-rest and keyboard assembly.
 - ⓘ **NOTE:** After removing the touchpad, if the replacement touchpad is not installed immediately, replace the touchpad bracket to the palm-rest and keyboard assembly.




Installing the touchpad

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the touchpad and provides a visual representation of the installation procedure.

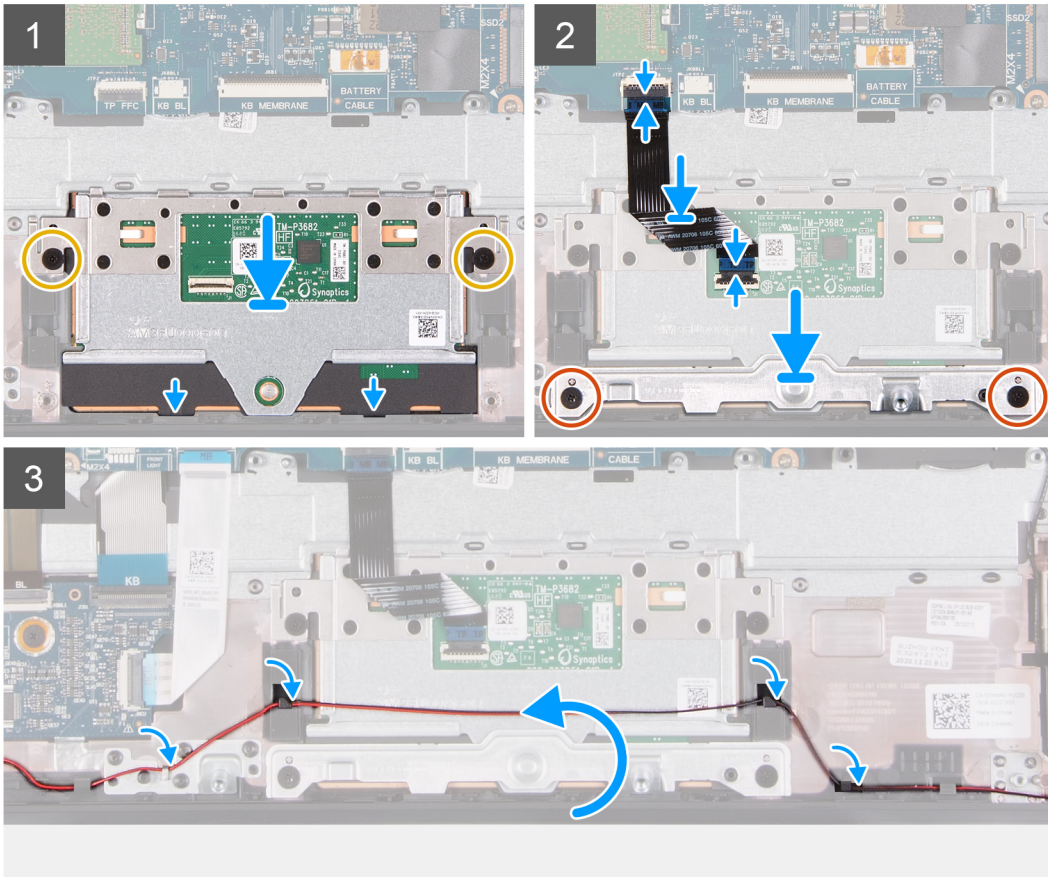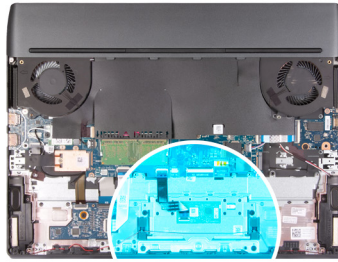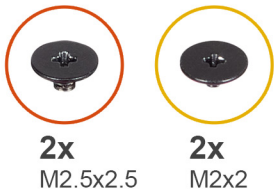

Steps

1. Align and place the touchpad into the slot on the palm-rest and keyboard assembly.
2. Replace the two (M2x2) screws that secure the touchpad to the palm-rest and keyboard assembly.
3. Connect the touchpad cable to the system board and close the latch to secure the cable.
4. Connect the touchpad cable to the touchpad and close the latch to secure the cable.
5. Align and place the touchpad bracket into the slot on the palm-rest and keyboard assembly.
6. Replace the two (M2.5x2.5) screws that secure the touchpad bracket to the palm-rest and keyboard assembly.
7. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Power-adapter port

Removing the power-adapter port

Prerequisites


1. Follow the procedure in [Before working inside your computer.](#)
2. Remove the [base cover.](#)
3. Remove the [rear I/O-cover.](#)

About this task

The following image indicates the location of the power-adapter port and provides a visual representation of the removal procedure.



2x
M2x4

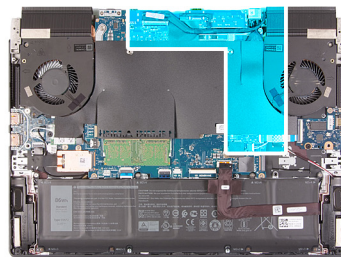

Steps

1. Open the latch and disconnect the display cable from the system board.
2. Disconnect the Alienhead LED cable from the system board.
3. Peel the display cable from the system board and remove the display cable from the slot on the system board.
4. Lift the system board Mylar next to the left fan to access the power-adapter port.
5. Remove the two screws (M2x4) on the power-adapter port-bracket that secures the power-adapter port bracket to the system board.
6. Lift the power-adapter port-bracket off the system board.

7. Disconnect the power-adapter port-cable from the system board.
8. Peel and lift the power-adapter port, along with its cable, off the system board.

Installing the power-adapter port

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power-adapter port and provides a visual representation of the installation procedure.



2x
M2x4

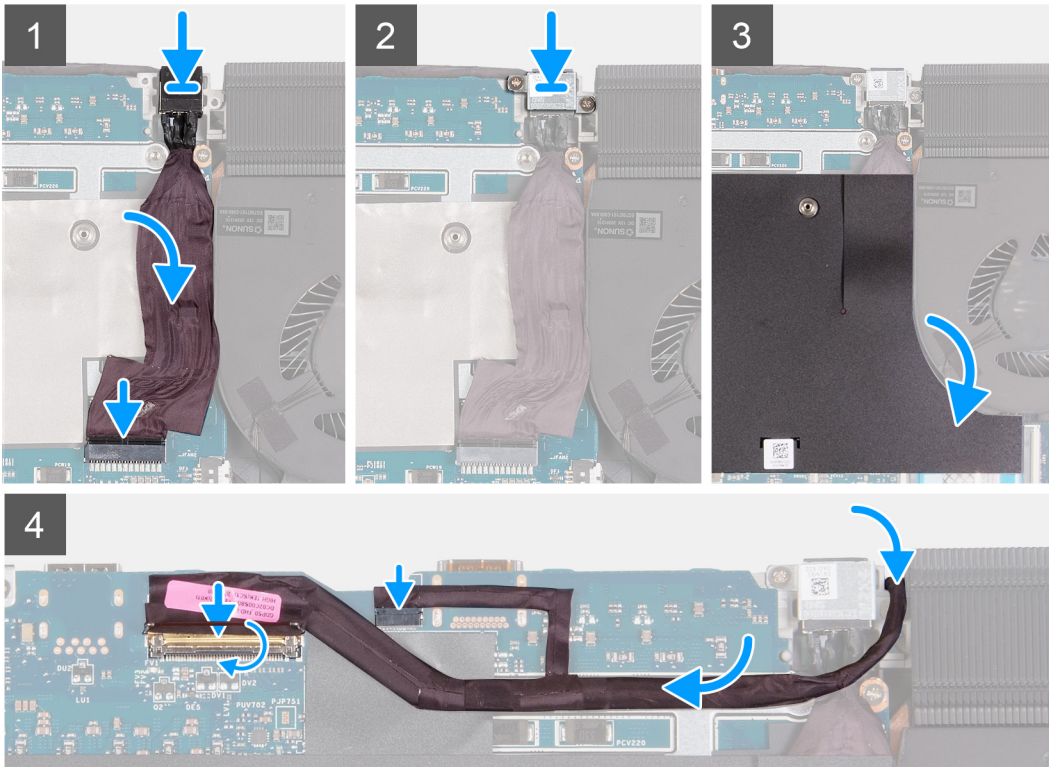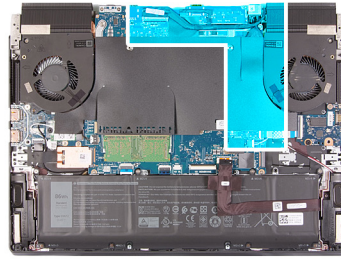

Steps

1. Lift the system board Mylar next to the left fan to access the power-adapter port slot.
2. Place the power-adapter port into the slot on the system board.
3. Connect the power-adapter port cable to the system board.
4. Adhere the power-adapter port cable on the system board.
5. Align the screw holes on the power-adapter port bracket to the screw holes on the system board.
6. Replace the two screws (M2x4) that secure the power-adapter port bracket to the system board.
7. Replace the system board Mylar back to the edge of the left fan.
8. Route the display cable through the opening between the power-adapter port and the heat-sink assembly.

9. Connect the display cable on the system board and close the latch to secure the cable.
10. Connect the Alienhead LED cable to the system board.
11. Adhere the display cable to the system board.

Next steps

1. Install the [rear I/O-cover](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Display assembly



Removing the display assembly

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [rear I/O-cover](#).

About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.

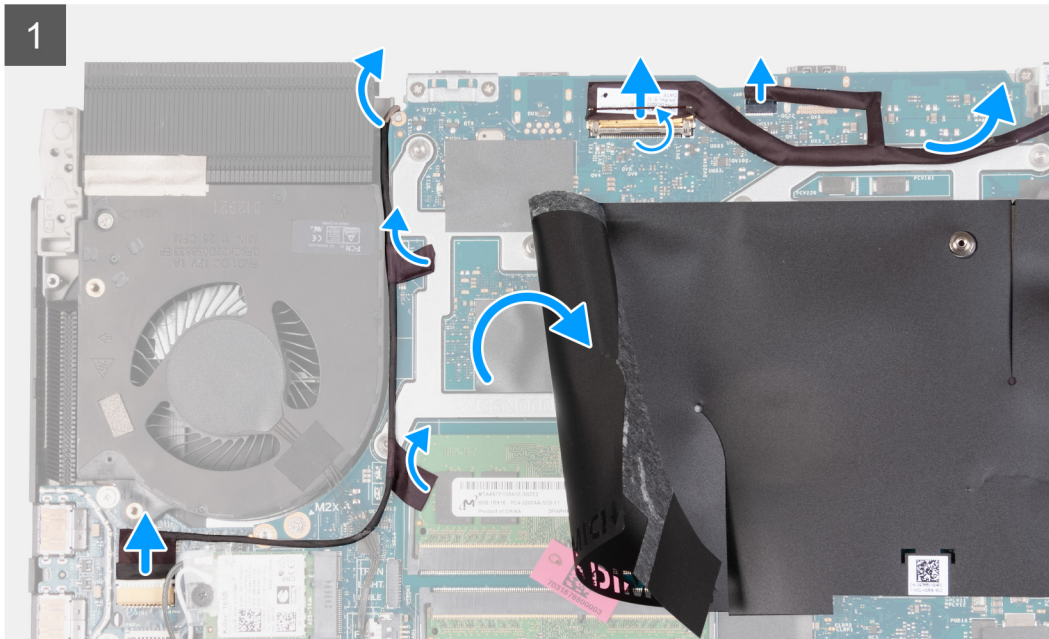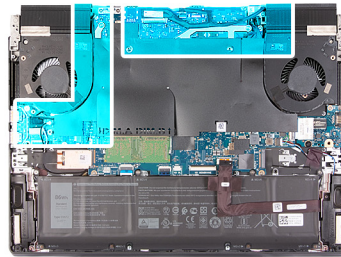



6x
M2.5x5



Steps

1. Open the latch and disconnect the display cable from the system board.
2. Disconnect the Alienhead LED cable from the system board.
3. Disconnect the RGB-IR camera cable from the USB board.
(i) NOTE: This step applies to devices that are shipped with a hybrid RGB-IR camera module.
4. Lift the system board Mylar and peel the tapes that secure the RGB-IR camera cable to the system board.
(i) NOTE: This step applies to devices that are shipped with a hybrid RGB-IR camera module.
5. Lift the RGB-IR camera cable off the system board.
(i) NOTE: This step applies to devices that are shipped with a hybrid RGB-IR camera module.
6. Turn the computer over and place the computer on a clean and flat surface.
7. Remove the display cable from the routing guides on the palm-rest and keyboard assembly.
8. Remove the RGB-IR camera cable from the routing guides on the palm-rest and keyboard assembly.
(i) NOTE: This step applies to devices that are shipped with a hybrid RGB-IR camera module.
9. Remove the six screws (M2.5x5) that secure the display hinges to the palm-rest and keyboard assembly.

10. Lift the display assembly off the palm-rest and keyboard assembly.
11. After performing all the above steps, you are left with the display assembly.



Installing the display assembly

Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.



About this task

The following image indicates the location of the display assembly and provides a visual representation of the installation procedure.



6x
M2.5x5

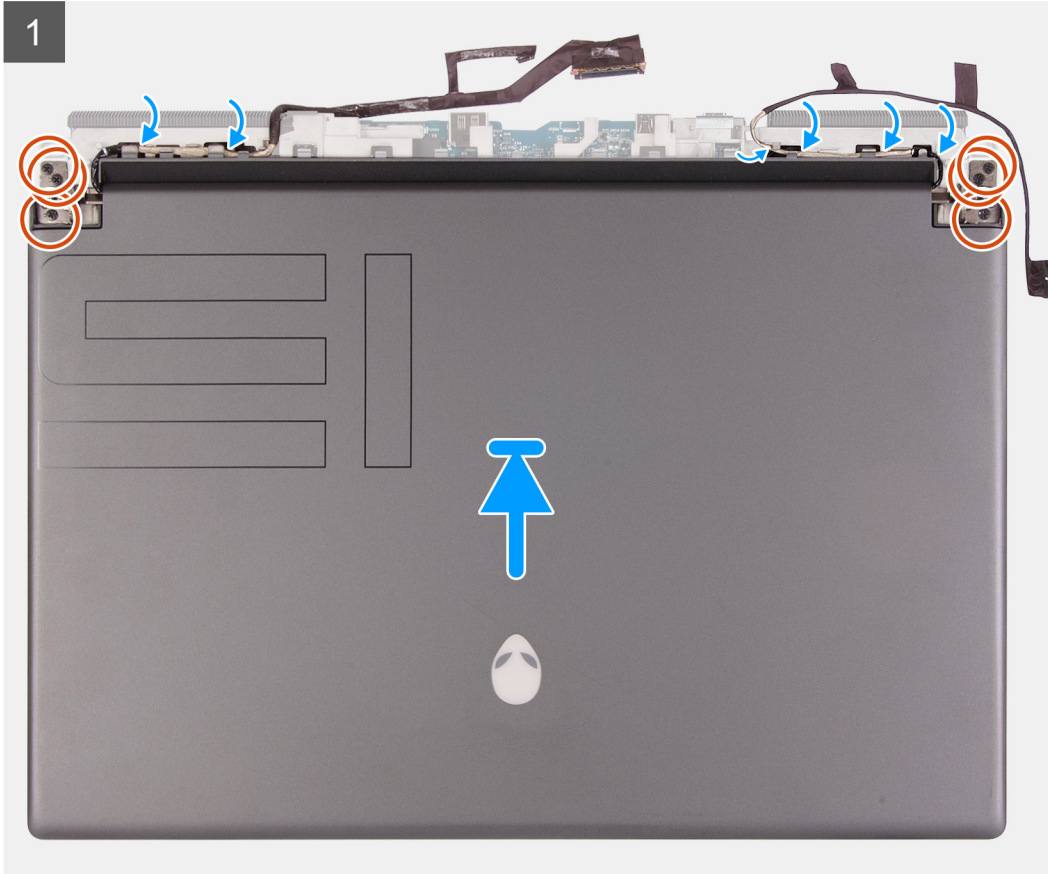

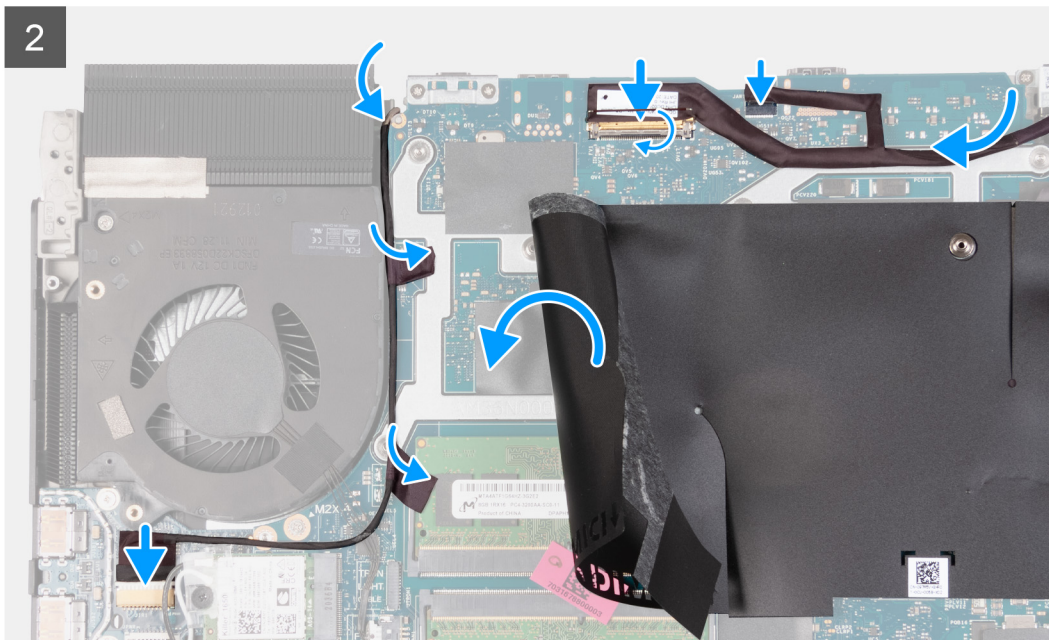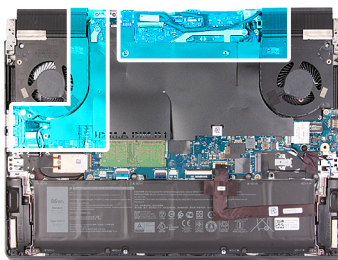

Steps

1. Align the screw holes on the display hinges with screw holes on the palm-rest and keyboard assembly and place the display assembly on the palm-rest and keyboard assembly.
2. Route the display cable through the routing guides on the palm-rest and keyboard assembly.
3. Route the RGB-IR camera cable through the slot on the palm-rest and keyboard assembly.
 - (i) **NOTE:** This step applies to devices that are shipped with a hybrid RGB-IR camera module.
4. Replace six screws (M2.5x5) that secure the display hinges to the palm-rest and keyboard assembly.
5. Turn the computer over.
6. Connect the display cable to the connector on the system board and close the latch to secure the cable.
7. Connect the Alienhead LED cable to the system board.
8. Adhere the display cable to the system board.
9. Lift the system board Mylar.
10. Adhere the RGB-IR camera cable to the system board along the edge of right fan of the heatsink assembly.
 - (i) **NOTE:** This step applies to devices that are shipped with a hybrid RGB-IR camera module.
11. Connect the RGB-IR camera cable to the USB board.
 - (i) **NOTE:** This step applies to devices that are shipped with a hybrid RGB-IR camera module.
12. Place the system board Mylar back onto the system board.

Next steps

1. Install the [rear I/O-cover](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Keyboard-controller board


Removing the keyboard-controller board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

About this task

The following image indicates the location of the keyboard-controller board and provides a visual representation of the removal procedure.

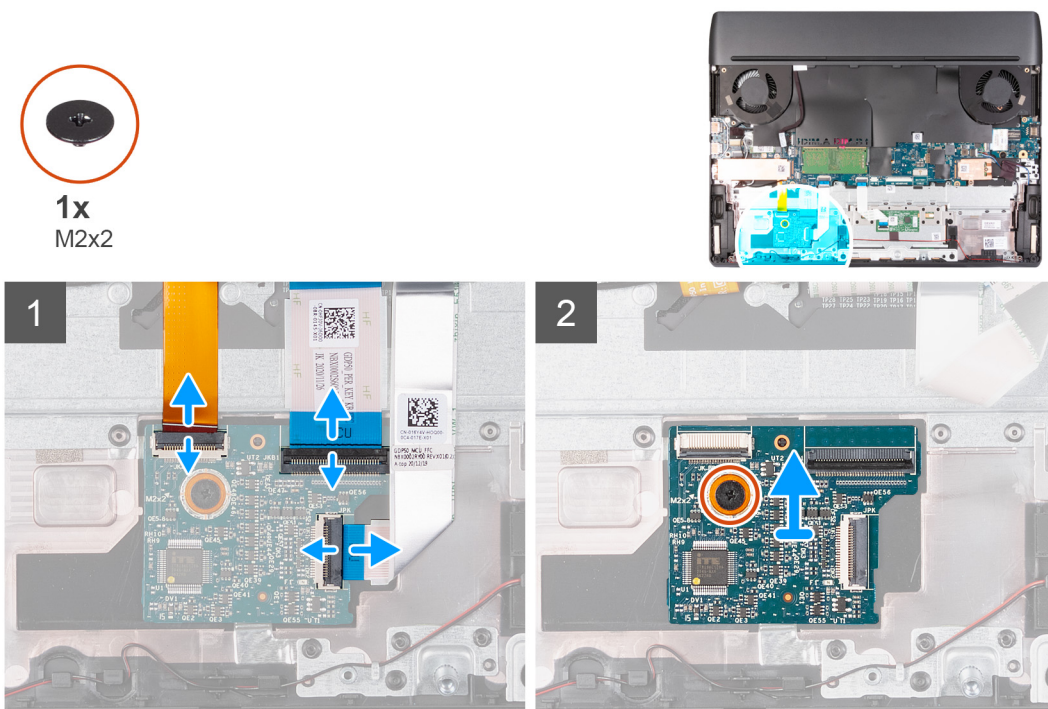

Steps

1. Open the latch and disconnect the keyboard-backlight cable from the keyboard-controller board.
2. Open the latch and disconnect the keyboard cable from the keyboard-controller board.
3. Open the latch and disconnect the keyboard-controller board cable from the keyboard-controller board.
4. Remove the screw (M2x2) that secures the keyboard-controller board to the palm-rest and keyboard assembly.
5. Remove the keyboard-controller board off the palm-rest and keyboard assembly.

Installing the keyboard-controller board

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the keyboard-controller board and provides a visual representation of the installation procedure.



1x
M2x2

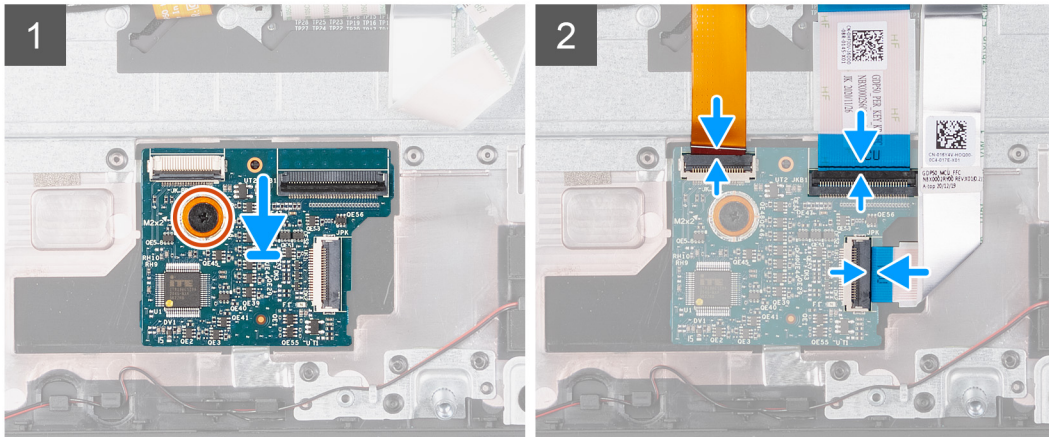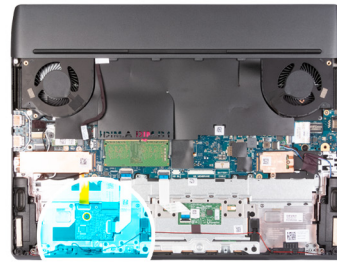

Steps

1. Using the alignment posts, adhere the keyboard-controller board into the slot on the palm-rest and keyboard assembly.
2. Align the screw hole on the keyboard-controller board with the screw hole on the palm-rest and keyboard assembly.
3. Replace the screw (M2x2) that secures the keyboard-controller board to the palm-rest and keyboard assembly.
4. Connect the keyboard-controller board cable to the keyboard-controller board and close the latch to secure the cable.
5. Connect the keyboard cable to the keyboard-controller board and close the latch to secure the cable.
6. Connect the keyboard-backlight cable to the keyboard-controller board and close the latch to secure the cable.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
 - ① **NOTE:** Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. Make the appropriate changes again after you replace the system board.
 - ① **NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
5. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
6. Remove the [memory module](#).
7. Remove the [wireless card](#).

8. Remove the [rear I/O-cover](#).

About this task

The following image indicates the connectors on your system board.

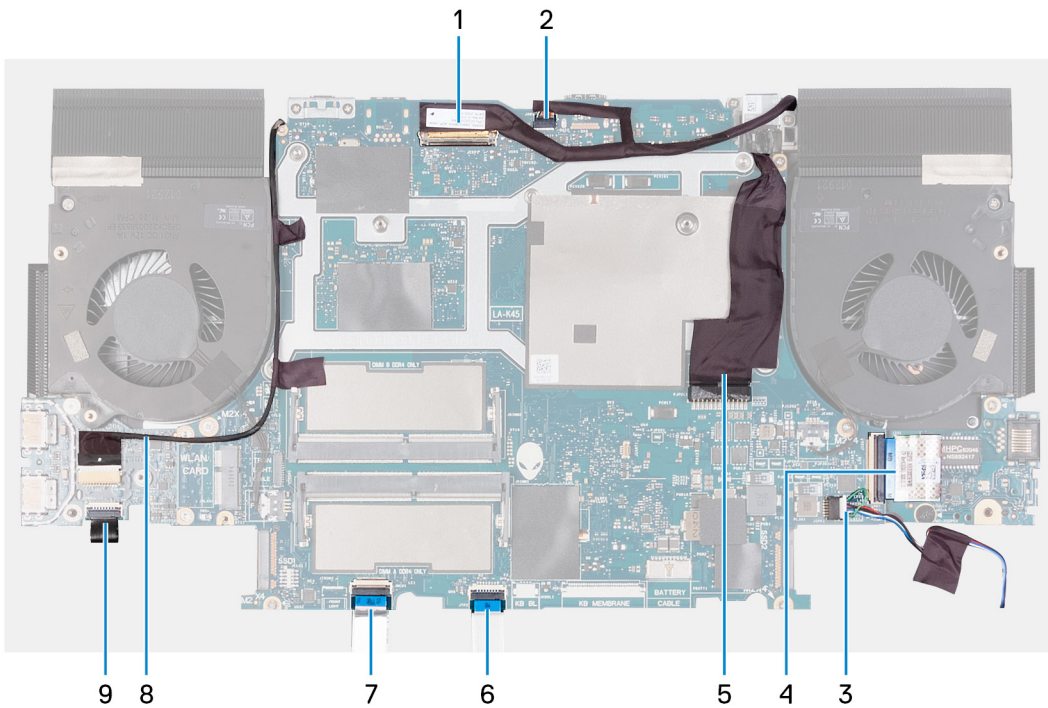




1. Display cable
2. Alienhead LED cable
3. Speaker cable
4. Audio and ethernet-daughterboard flexible flat cable (FFC)
(i) NOTE: This applies to the computer that ships with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
5. Power-adapter port cable
6. Touchpad cable
7. Keyboard-controller board cable
8. RGB-IR camera cable
(i) NOTE: This applies to devices that are shipped with a hybrid RGB-IR camera module.
9. Power-button board cable


The following images indicate the location of the system board and provides a visual representation of the removal procedure.

- (i) NOTE:** The following images are applicable to the system board that features the audio and ethernet daughterboard with a flexible flat cable.







10x
M2x4

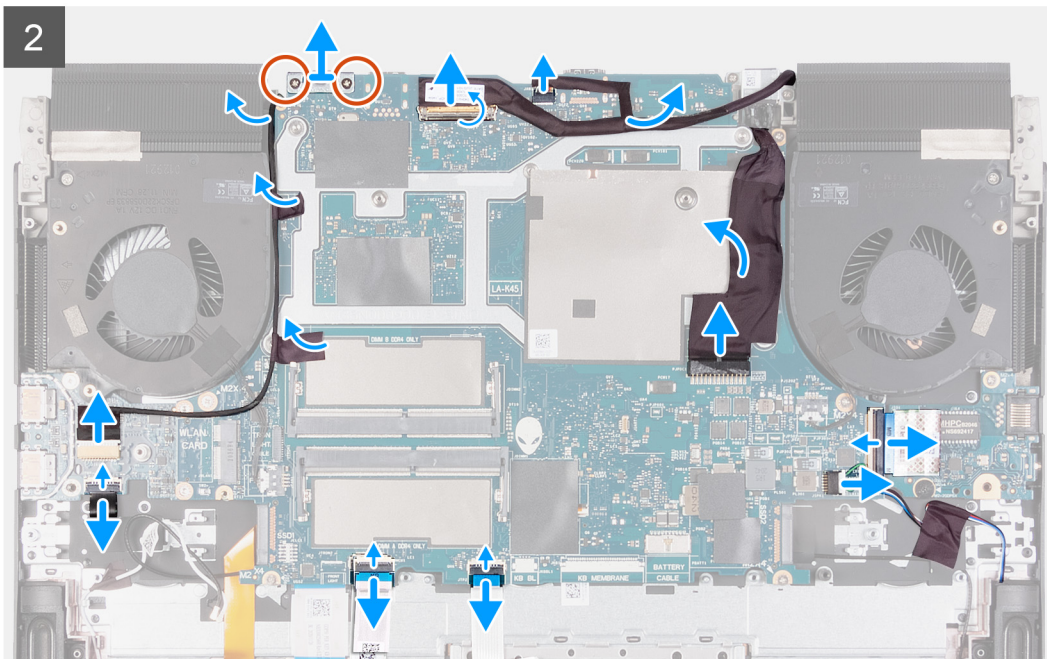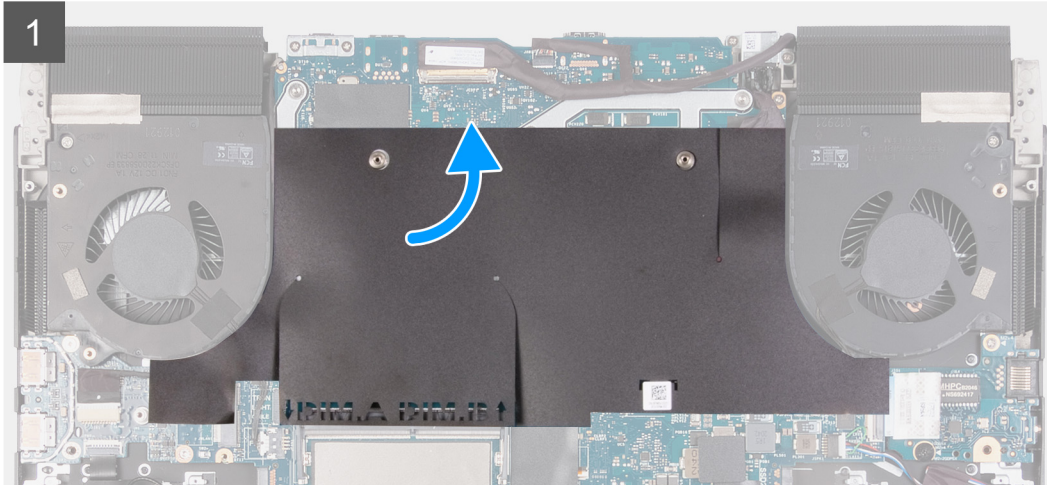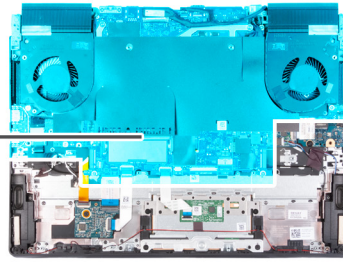

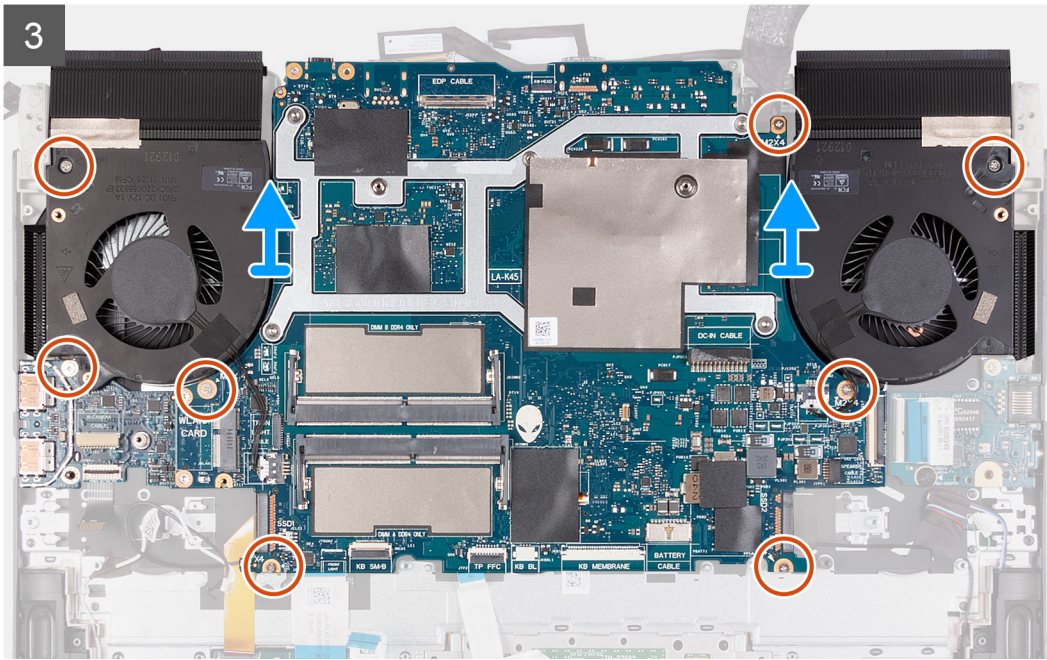

The following images indicate the location of the system board and provides a visual representation of the removal procedure.
 ⓘ **NOTE:** The following images are applicable to the system board that features the audio and ethernet daughterboard with a M.2 interface.

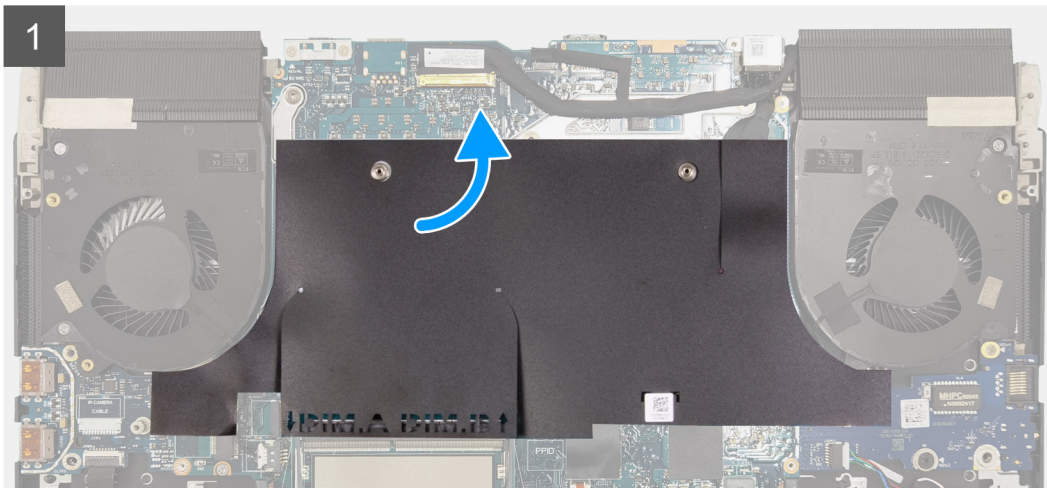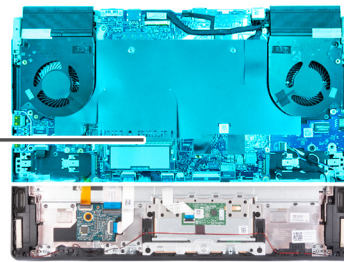

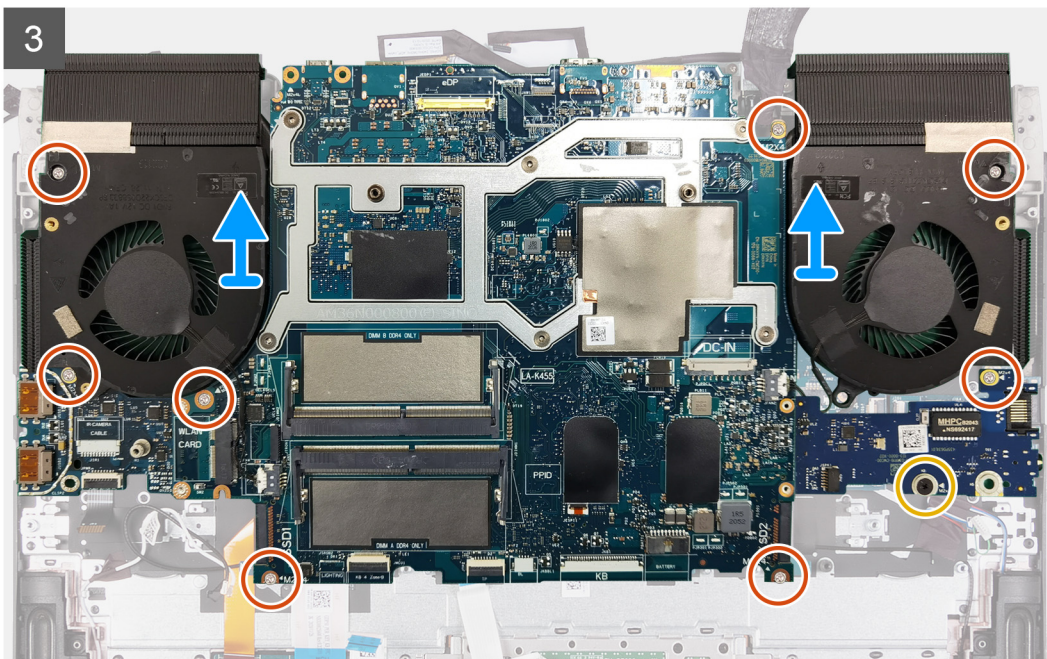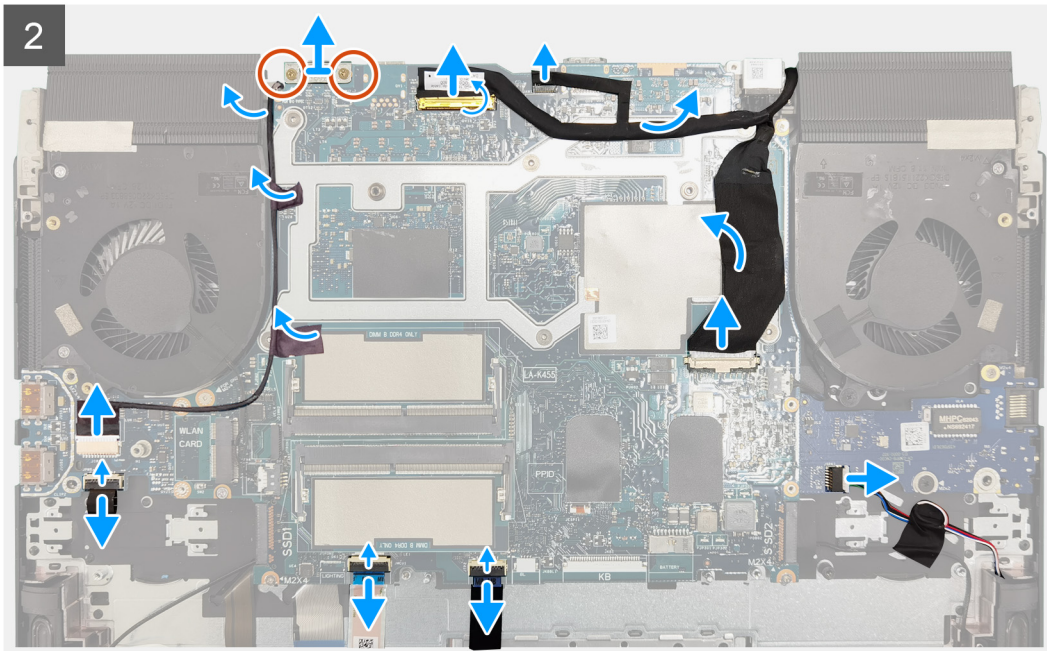


Steps

1. Peel the system board Mylar off the system board.
2. Remove the two screws (M2x4) that secure the USB Type-C port bracket to the system board.
3. Remove the USB Type-C port bracket from the system board.
4. Open the latch, and disconnect the display cable from the system board.
5. Disconnect the Alienhead LED cable from the system board.
6. Peel the display cable from the system board.
7. Disconnect the power-adapter port cable from the system board.
8. Peel the power-adapter port cable from the system board.
9. Open the latch, and disconnect the flexible flat cable of the audio and ethernet daughterboard from the system board.

(i) NOTE: Skip this step if the audio and ethernet daughterboard features the M.2 interface.

10. Disconnect the speaker cable from the system board.

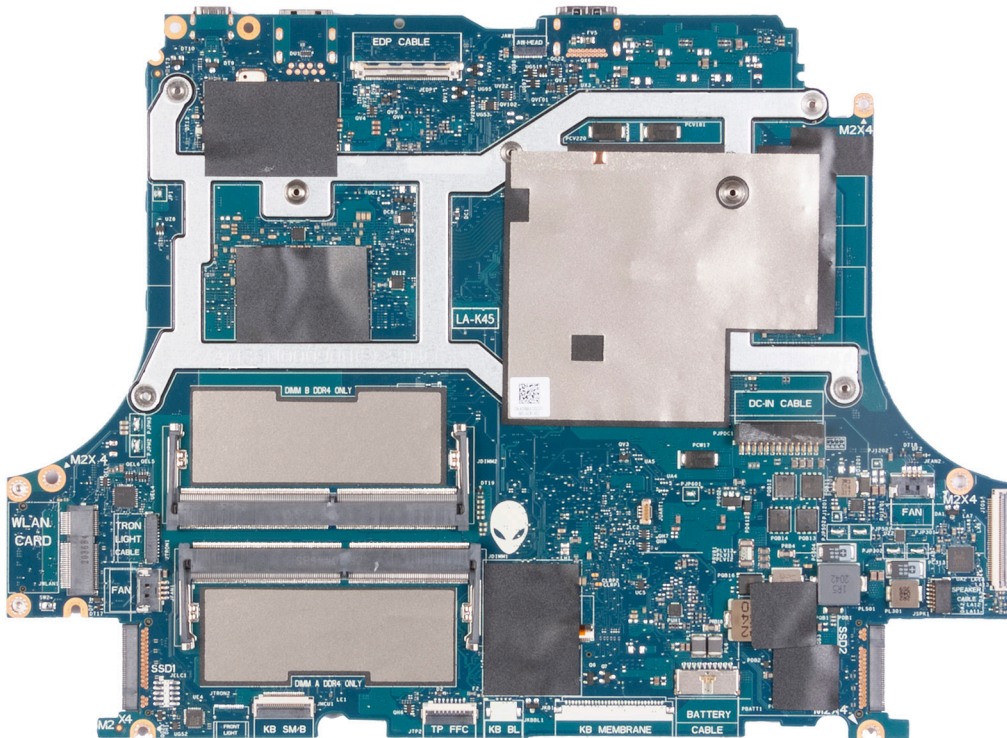

Installing the system board


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

- ① **NOTE:** When replacing/accessing other parts, the system board can be installed with the heat sink attached in order to simplify the procedure and preserve the thermal bond between the system board and heat-sink.
- ① **NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.
- ① **NOTE:** Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

About this task

The following image indicates the connectors on your system board.

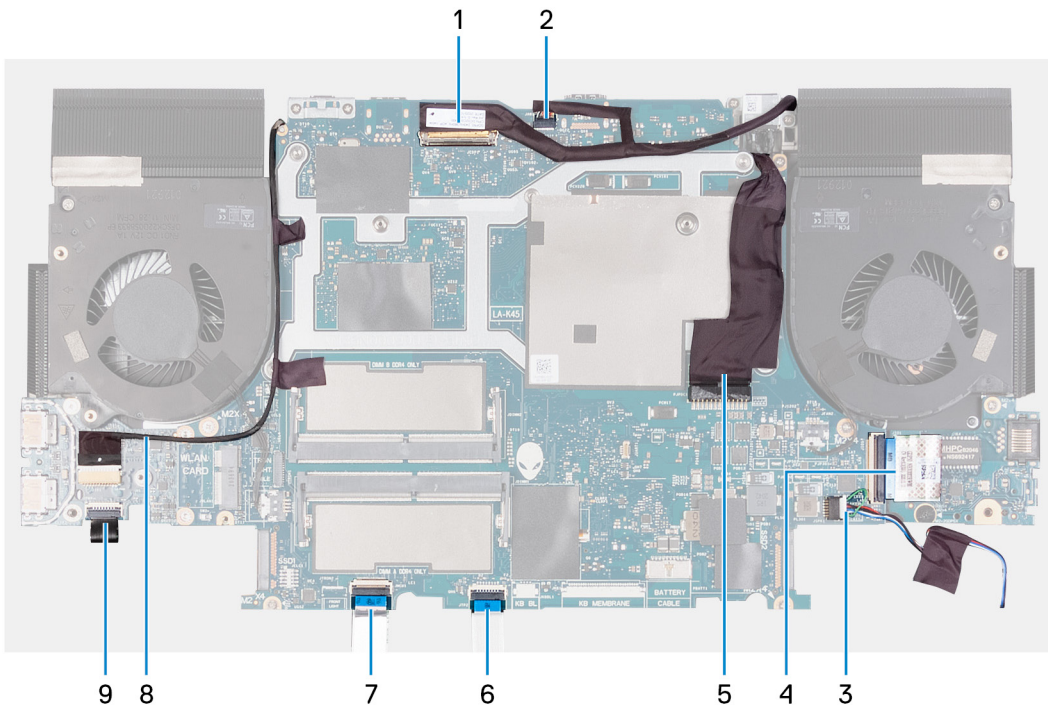




1. Display cable
2. Alienhead LED cable
3. Speaker cable
4. Audio and ethernet daughterboard flexible flat cable (FFC)
 - ⓘ **NOTE:** This applies to the computer that ships with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
5. Power-adapter port cable
6. Touchpad cable
7. Keyboard cable
8. RGB-IR camera cable
 - ⓘ **NOTE:** This applies to devices that are shipped with a hybrid RGB-IR camera module.
9. Power button cable


The following images indicate the location of the system board and provides a visual representation of the installation procedure.

- ⓘ **NOTE:** The following images are applicable to the system board that features the audio and ethernet daughterboard with a flexible flat cable.



10x
M2x4

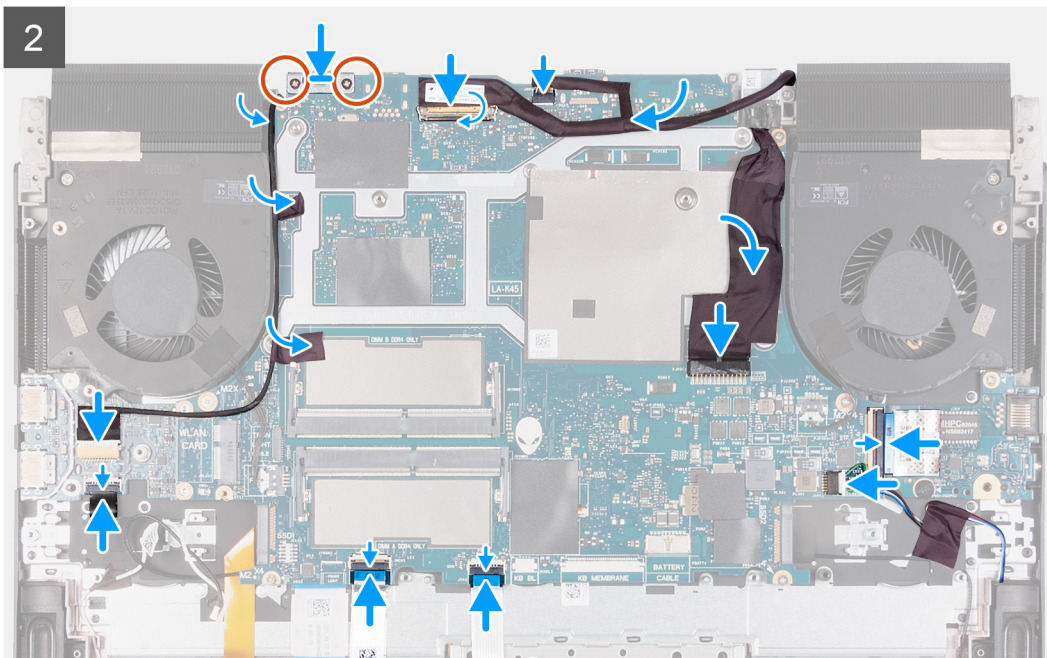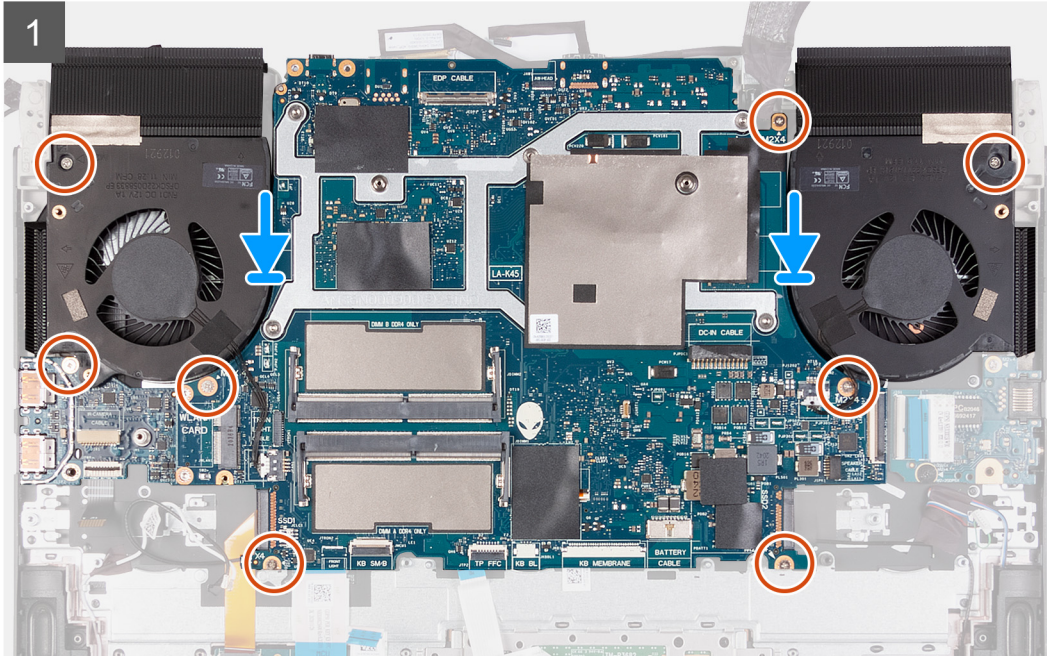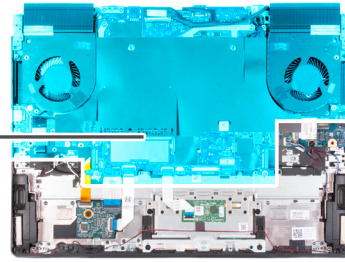

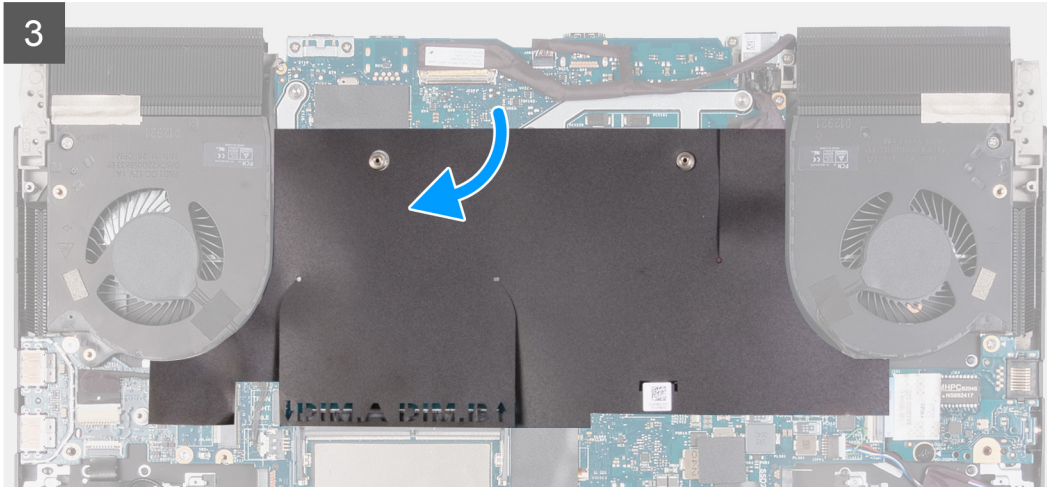



The following images indicate the location of the system board and provides a visual representation of the installation procedure.
 ⓘ **NOTE:** The following images are applicable to the system board that features the audio and ethernet daughterboard with a M.2 interface.





10x
M2x4




1x
M2x2

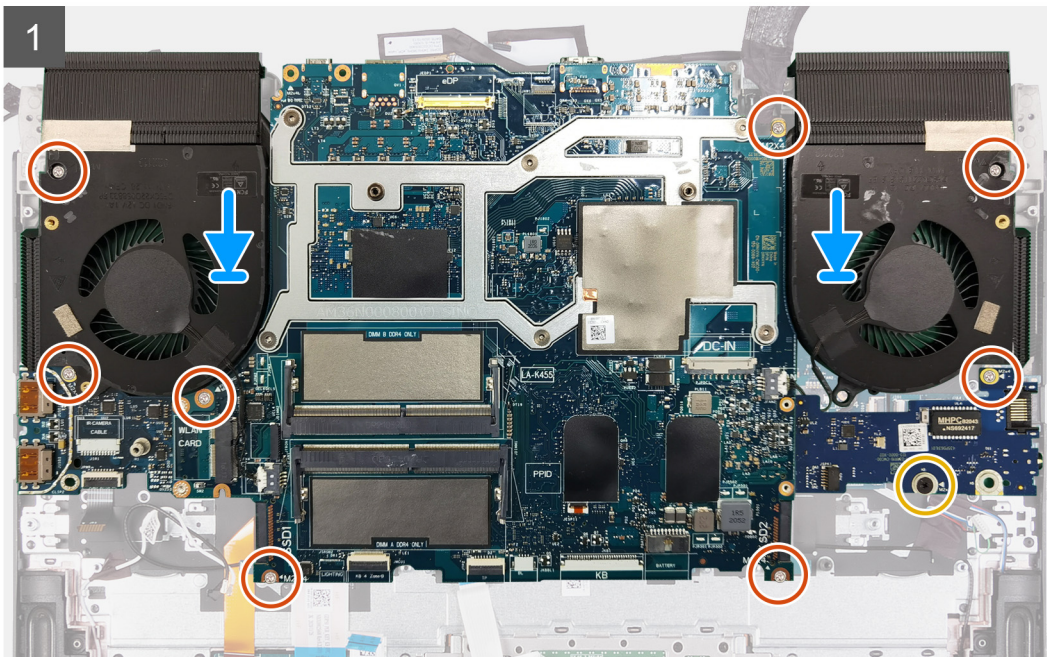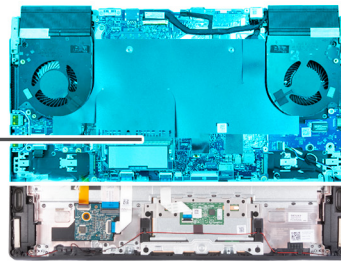

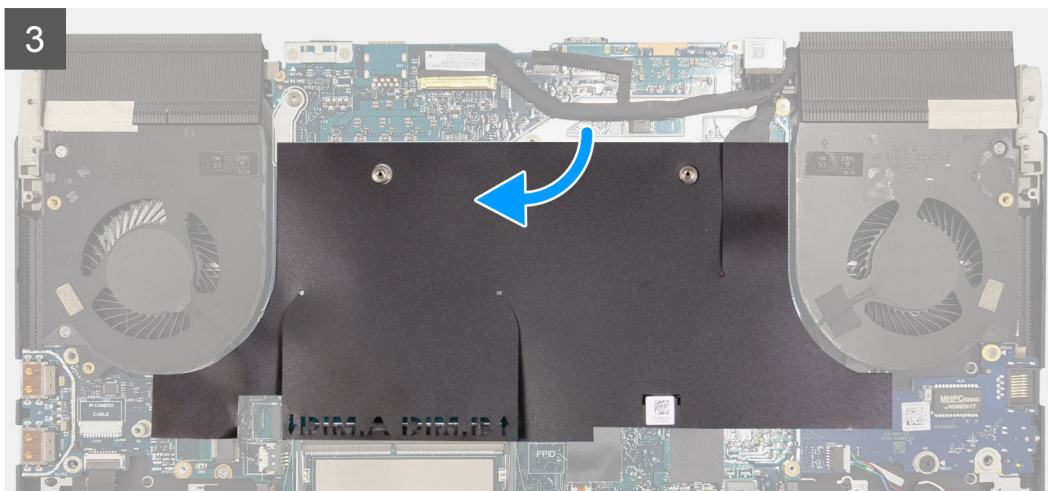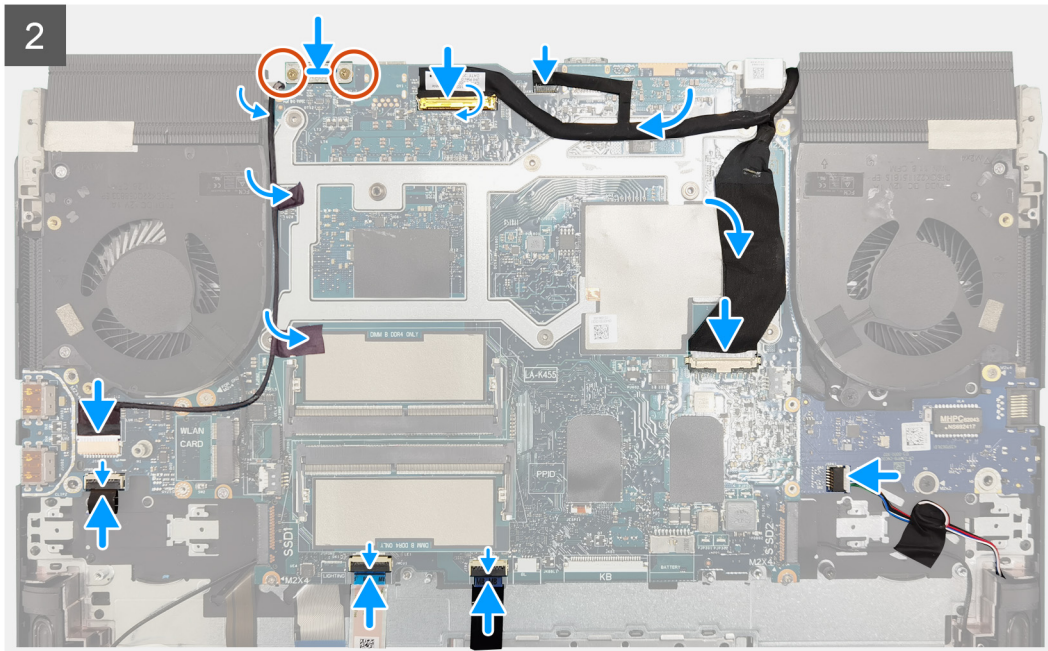


Steps


1. ⓘ **NOTE:** Place the system board on a clean and flat surface.
Replace the [USB board](#).
2. Replace the [heat-sink assembly](#).
3. Replace the [audio and ethernet daughterboard with the M.2 interface](#).
ⓘ **NOTE:** Skip this step if the audio and ethernet daughterboard features a flexible flat cable.
4. Turn the system-board assembly over.
5. Align the screw holes on the system-board assembly with the screw holes on the palm-rest and keyboard assembly.
6. Route the power-button board cable under the USB board.
7. Replace the eight screws (M2x4) that secure the system-board assembly to the palm-rest and keyboard assembly.
8. Align the screw holes on the USB Type-C port bracket with the screw holes on the system board.
ⓘ **NOTE:** The USB Type-C port bracket must be removed from the previous system board and placed at the new system board.
This step is applicable if a new system board is replacing the previous system board.
9. Replace the two screws (M2x4) that secure the USB Type-C bracket to the system board.
10. Connect the display cable to the system board and close the latch to secure the cable.

 **NOTE:** Move in clock-wise direction to connect the cables to the system board.


11. Connect the Alienhead LED cable to the system board.
12. Adhere the display cable to the system board.
13. Adhere the power-adapter port cable to the system board, and connect the power-adapter port cable to the system board.
14. Connect the flexible flat cable of the audio and ethernet daughterboard to the system board and close the latch to secure the cable.

 **NOTE:** Skip this step if the audio and ethernet daughterboard features the M.2 interface.

15. Connect the speaker cable to the system board.
16. Connect the touchpad cable to the system board and close the latch to secure the cable.
17. Connect the keyboard-controller board-cable to the system board and close the latch to secure the cable.
18. Connect the power-button board cable to the USB board and close the latch to secure the cable.
19. Adhere the RGB-IR camera cable to the system board along the edge of right fan of the heatsink assembly.

 **NOTE:** This step is applicable for computers that are shipped with a hybrid RGB-IR camera module.

20. Connect the RGB-IR camera cable to the connector on the USB board and close the latch to secure the cable on the USB board.

 **NOTE:** This step is applicable for computers that are shipped with a hybrid RGB-IR camera module.

21. Replace the system board Mylar on the system board.

Next steps


1. Install the [rear I/O-cover](#).
2. Install the [wireless card](#).
3. Install the [memory module](#).
4. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
5. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
6. Install the [battery](#).
7. Install the [base cover](#).
8. Follow the procedure in [After working inside your computer](#).


Heat-sink assembly

Removing the heat-sink assembly


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

 **CAUTION:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

 **NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

2. Remove the [base cover](#).
3. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
5. Remove the [memory module](#).
6. Remove the [wireless card](#).
7. Remove the [battery](#).
8. Remove the [rear I/O-cover](#).
9. Follow the procedure from step 1 to step 18 in [Removing the system board](#).

 **NOTE:** The system board can be removed with the heat-sink assembly and USB board attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).


NOTE: The system board can be removed with the heat-sink assembly, USB board, and audio and ethernet daughterboard attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a M.2 interface.

About this task

The following image indicates the location of the heat-sink assembly and provides a visual representation of the removal procedure.



6x
M2x4

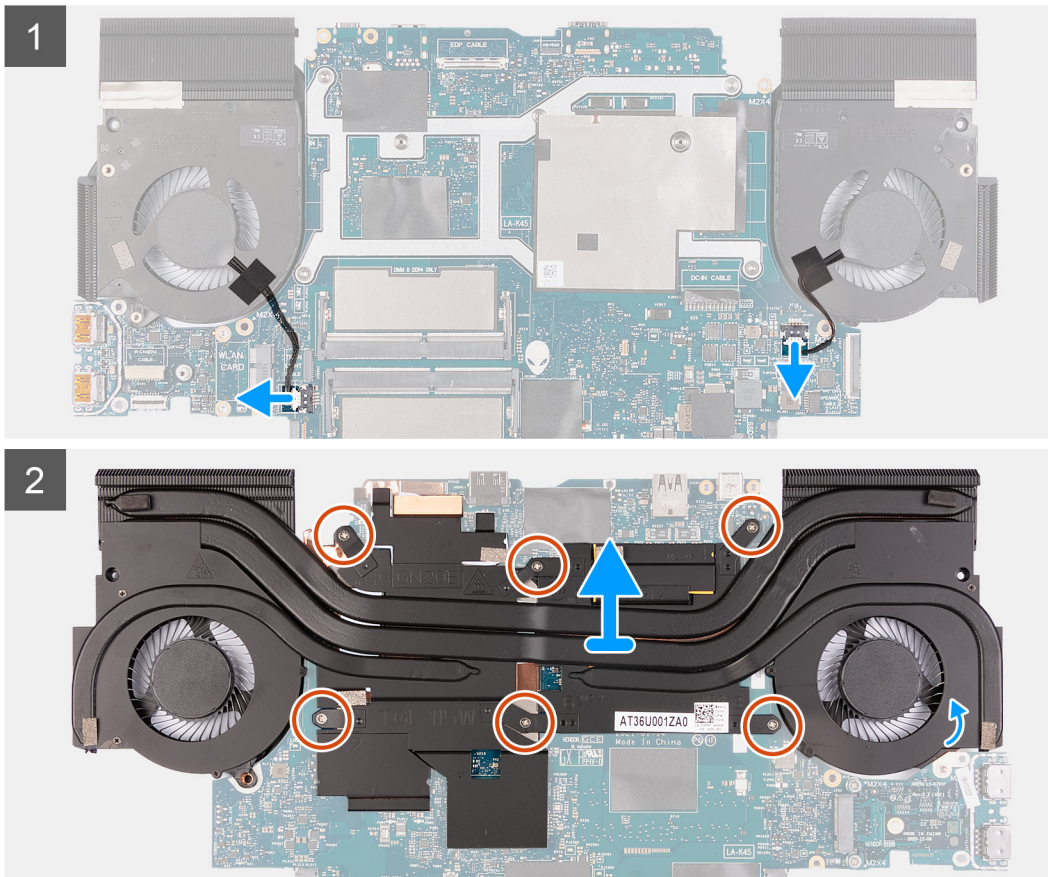

Steps

1. Disconnect the left and right fan cables from the system board.
2. Turn the system-board assembly over.
3. Remove the six screws (M2x4) that secure the heat-sink assembly to the system board.
4. Lift the heat-sink assembly off the system board.

Installing the heat-sink assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



The following image indicates the location of the heat-sink assembly and provides a visual representation of the installation procedure.

△ **CAUTION:** Incorrect alignment of the heat sink can damage the system board and processor.

△ **CAUTION:** If either the processor or the heat sink is replaced, use the thermal grease that is provided in the kit to ensure that thermal conductivity is achieved.



6x
M2x4

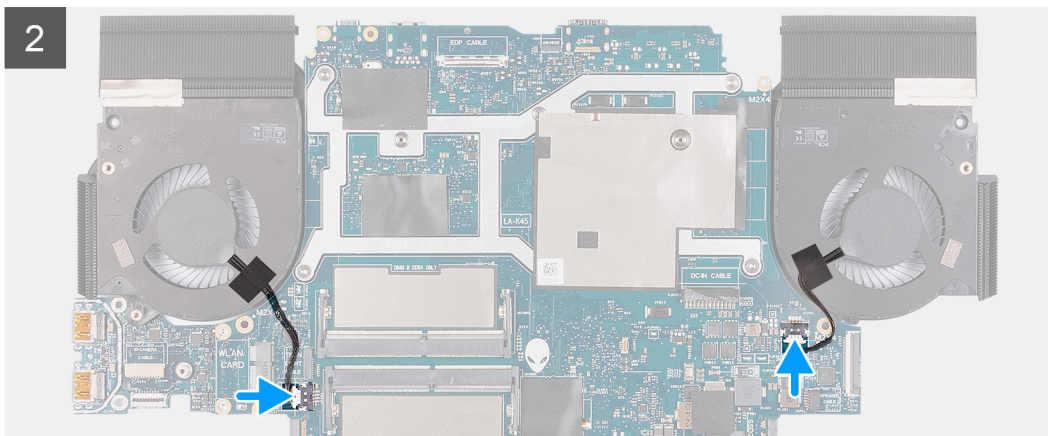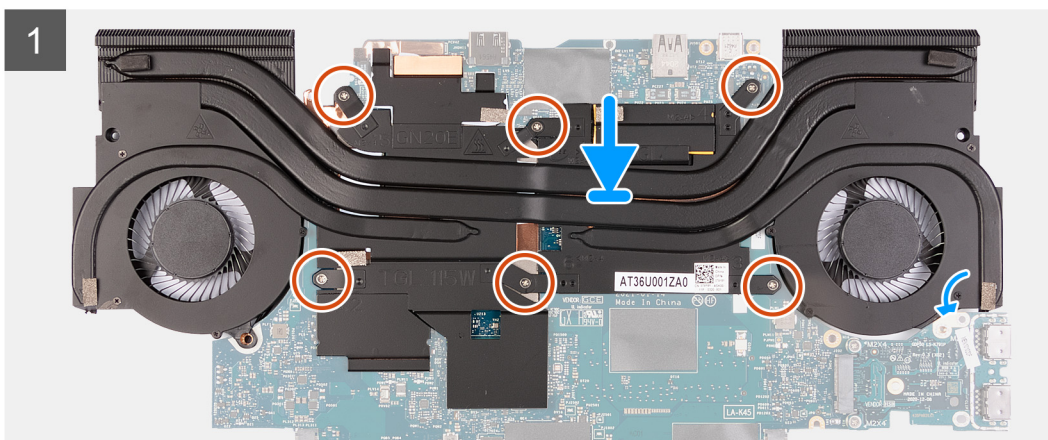

Steps

1. Place the heat-sink assembly on the system board.
2. Align the screw holes on the heat-sink assembly with the screw holes on the system board.
3. Replace the six screws (M2x4) that secure the heat-sink assembly to the system board.
4. Turn the system board over, and connect the left and right fan cables.

Next steps

1. Follow the procedure from step 5 to step 21 in [Installing the system board](#).
2. Install the [rear I/O-cover](#).
3. Install the [battery](#).
4. Install the [wireless card](#).

5. Install the [memory module](#).
6. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
7. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
8. Install the [base cover](#).
9. Follow the procedure in [After working inside your computer](#).

USB board

Removing the USB board

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
5. Remove the [memory module](#).
6. Remove the [wireless card](#).
7. Remove the [battery](#).
8. Remove the [rear I/O-cover](#).
9. Follow the procedure from step 1 to step 18 in [Removing the system board](#).

i **NOTE:** The system board can be removed with the heat-sink assembly and USB board attached. This applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).

i **NOTE:** The system board can be removed with the heat-sink assembly, USB board, and audio and ethernet daughterboard attached. This applies to the computer, which is shipped with an audio and ethernet daughterboard that features a M.2 interface.

About this task

The following image indicates the location of the USB board and provides a visual representation of the removal procedure.

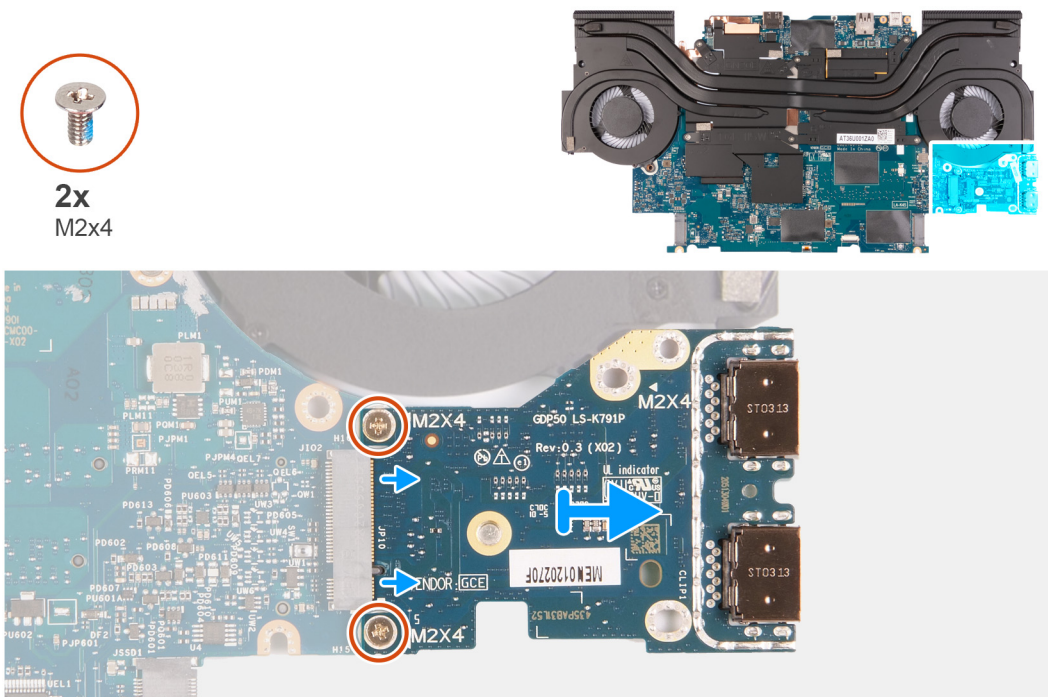

Steps

1. Turn the system-board assembly over.
2. Remove the two screws (M2x4) that secure the USB board to the system board.
3. Remove the USB board off the system board.


Installing the USB board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the USB board and provides a visual representation of the installation procedure.

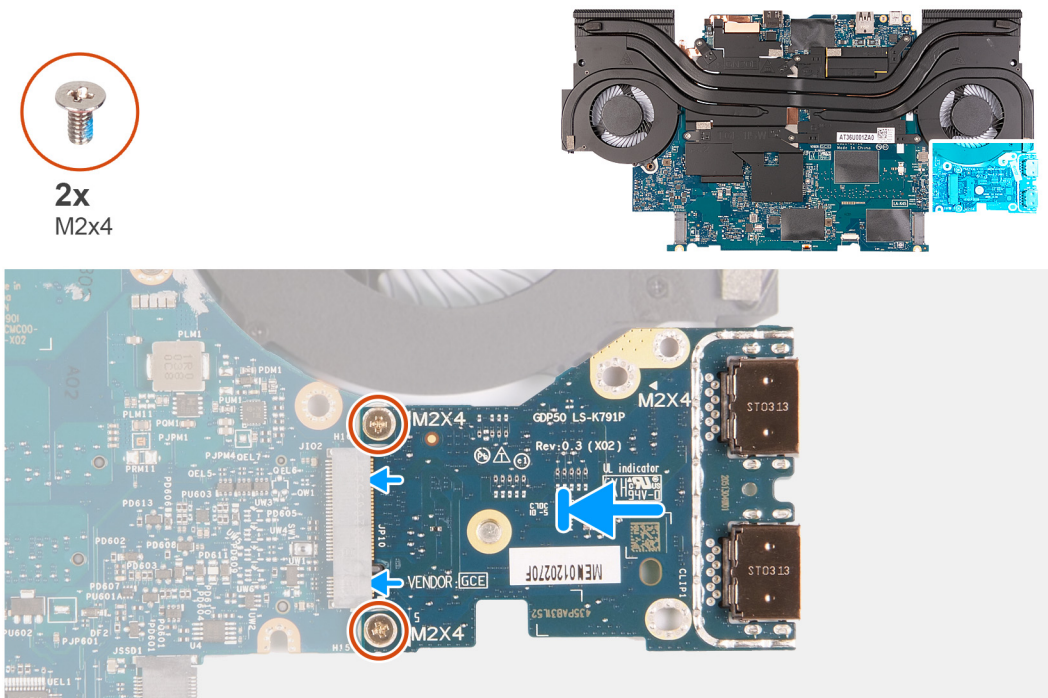

Steps

1. Align the screw holes on the USB board with the screw holes on the system board.
2. Replace the two screws (M2x4) that secure the USB board to the system board.

Next steps

1. Follow the procedure from step 5 to step 21 in [Installing the system board](#).
2. Install the [rear I/O cover](#).
3. Install the [battery](#).
4. Install the [wireless card](#).
5. Install the [memory module](#).
6. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
7. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
8. Install the [base cover](#).
9. Follow the procedure in [After working inside your computer](#).

Power button


Removing the power button

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
5. Remove the [memory module](#).
6. Remove the [wireless card](#).
7. Remove the [display assembly](#).
8. Remove the [battery](#).
9. Remove the [rear I/O-cover](#).
10. Follow the procedure from step 1 to step 18 in [Removing the system board](#).
 - ① **NOTE:** The system board can be removed with the heat-sink assembly and USB board attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
 - ① **NOTE:** The system board can be removed with the heat-sink assembly, USB board, and audio and ethernet daughterboard attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a M.2 interface.

About this task

The following images indicate the location of the power button and provide a visual representation of the removal procedure.

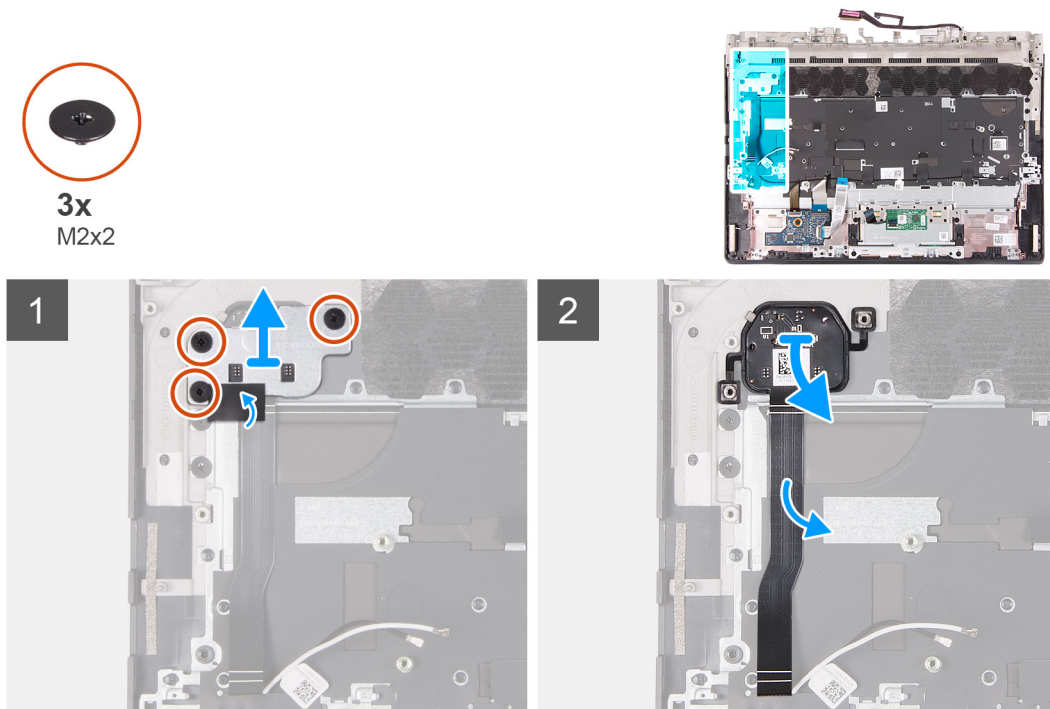

Steps

1. Remove the three screws (M2x2) that secure the power-button bracket to the palm-rest and keyboard assembly.
2. Lift the power-button bracket off the palm-rest and keyboard assembly.
3. Peel and lift the power button off the palm-rest and keyboard assembly.


Installing the power button

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power button and provides a visual representation of the installation procedure.

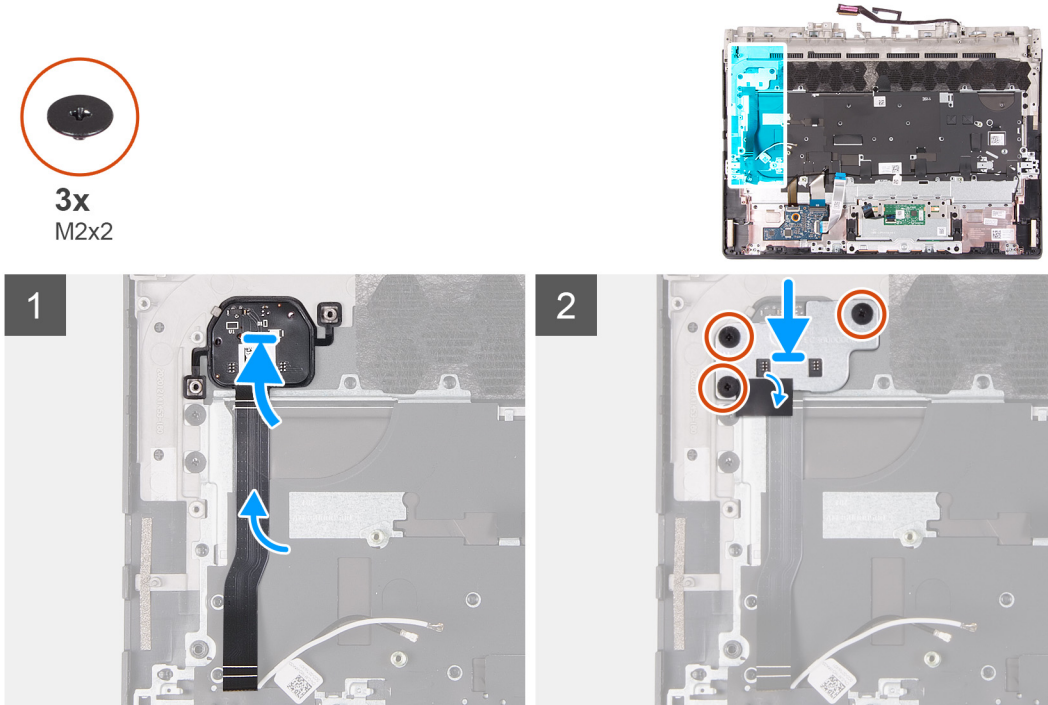

Steps

1. Place the power button on the slot on the palm-rest and keyboard assembly.
2. Align the screw holes on the power-button bracket with the screw holes on the palm-rest and keyboard assembly.
3. Replace the three screws (M2x2) that secure the power-button bracket to the palm-rest and keyboard assembly.

Next steps

1. Follow the procedure from step 5 to step 21 in [Installing the system board](#).
2. Install the [rear I/O-cover](#).
3. Install the [battery](#).
4. Install the [display assembly](#).
5. Install the [wireless card](#).
6. Install the [memory module](#).
7. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
8. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
9. Install the [base cover](#).
10. Follow the procedure in [After working inside your computer](#).

Palm-rest and keyboard assembly

Removing the palm-rest and keyboard assembly


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
4. Remove the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
5. Remove the [memory module](#).
6. Remove the [wireless card](#).
7. Remove the [display assembly](#).
8. Remove the [battery](#).
9. Remove the [rear I/O-cover](#).
10. Remove the [touchpad](#).
11. Follow the procedure from step 1 to step 18 in [Removing the system board](#).
 - ① **NOTE:** The system board can be removed with the heat-sink assembly and USB board attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
 - ① **NOTE:** The system board can be removed with the heat-sink assembly, USB board, and audio and ethernet daughterboard attached. This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a M.2 interface.
12. Remove the [audio and ethernet daughterboard that features a flexible flat cable \(FFC\)](#).
 - ① **NOTE:** This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
13. Remove the [power button](#).

About this task

After we have performed the steps in the pre-requisites, we are left with the palm-rest and keyboard assembly.

- ① **NOTE:** When you are replacing the palm-rest and keyboard assembly, the solid-state drive mounting brackets have to be removed from the existing palm-rest and keyboard assembly and transferred to the replacement palm-rest and keyboard assembly.

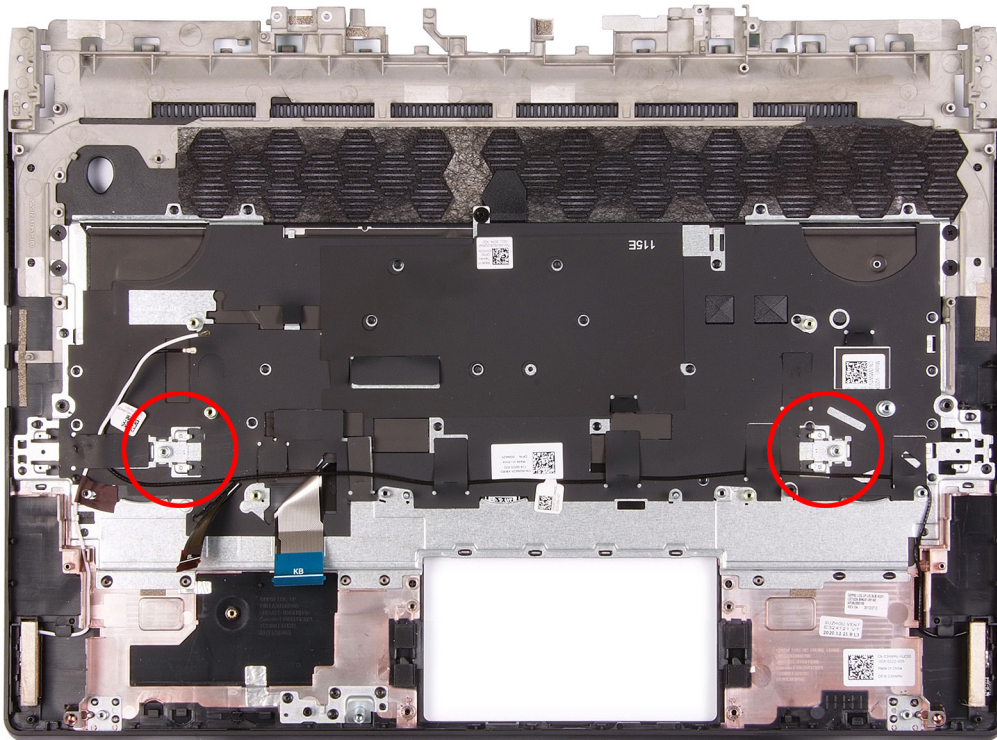

Installing the palm-rest and keyboard assembly


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

Place the palm-rest and keyboard assembly on a flat surface.

(i) NOTE: When you are replacing the palm-rest and keyboard assembly, the solid-state drive mounting brackets have to be transferred from the old palm-rest and keyboard assembly to the replacement palm-rest and keyboard assembly.

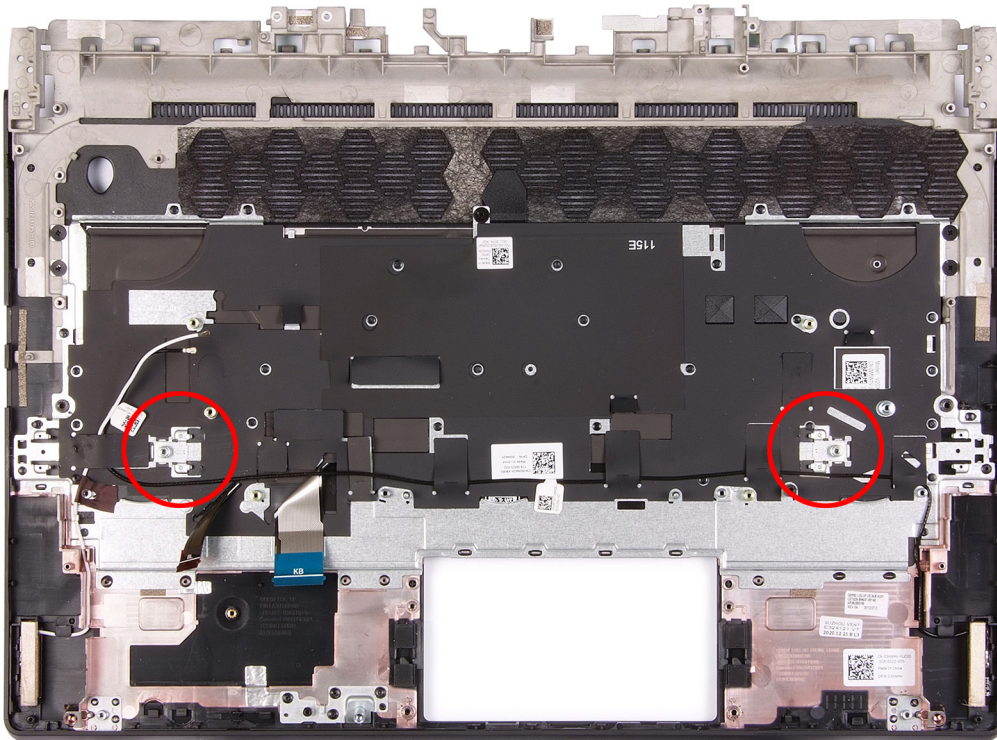

Next steps

1. Install the [power button](#).
2. Install the [audio and ethernet daughterboard that features a flexible flat cable \(FFC\)](#).
i **NOTE:** This step applies to the computer, which is shipped with an audio and ethernet daughterboard that features a flexible flat cable (FFC).
3. Follow the procedure from step 5 to step 21 in [Installing the system board](#).
4. Install the [touchpad](#).
5. Install the [rear I/O-cover](#).
6. Install the [battery](#).
7. Install the [display assembly](#).
8. Install the [wireless card](#).
9. Install the [memory module](#).
10. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot one](#), whichever applicable.
11. Install the [2230 solid-state drive](#) or [2280 solid-state drive in SSD slot two](#), whichever applicable.
12. Install the [base cover](#).
13. Follow the procedure in [After working inside your computer](#).

Drivers and downloads

When troubleshooting, downloading or installing drivers it is recommended that you read the Dell Knowledge Based article, Drivers and Downloads FAQ [000123347](#).

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

BIOS overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

Entering BIOS setup program

Steps

1. Turn on (or restart) your computer.
2. During POST, when the DELL logo is displayed, watch for the F2 prompt to appear, and then press F2 immediately.

NOTE: The F2 prompt indicates that the keyboard is initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
- **i** **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

System setup options

i **NOTE:** Depending on this computer and its installed devices, the items that are listed in this section may or may not be displayed.

Table 3. System setup options—System information menu

Overview	
Alienware m15 R6	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the express service code of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Signed Firmware Update	Displays whether the signed firmware update is enabled. Default: Enabled
BATTERY	
Primary	
Battery Level	Displays the battery level.
Battery State	Displays the battery state.
Health	Displays the battery health information.
AC Adapter	Displays whether an AC adapter is connected. If connected, the AC adapter type.
PROCESSOR	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Minimum Clock Speed	Displays the minimum processor clock speed.
Current Clock Speed	Displays the current processor clock speed.
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Processor L2 Cache	Displays the processor L2 Cache size.
Processor L3 Cache	Displays the processor L3 Cache size.
Microcode Version	Displays the microcode version.
Intel® Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.

Table 3. System setup options—System information menu (continued)

Overview	
64-Bit Technology	Displays whether 64-bit technology is used.
MEMORY	
Memory Installed	Displays the total computer memory installed.
Memory Available	Displays the total computer memory available.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology that is used for the memory.
DIMM A Size	Displays the memory configuration of DIMM A.
DIMM B Size	Displays the memory configuration of DIMM B.
DEVICES	
Panel Type	Displays the Panel Type of the computer.
Video Controller	Displays the integrate graphics information of the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the Wi-Fi device that is installed in the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Audio Controller	Displays the audio controller information of the computer.
Bluetooth® Device	Displays whether a Bluetooth device is installed in the computer.
LOM MAC Address	Displays the MAC address of the LAN on Motherboard (LOM).
dGPU Video Controller	Displays the discrete graphics controller.

Table 4. System setup options—Boot Configuration menu

Boot Configuration	
Boot Sequence	
Boot Mode: UEFI only	Displays the boot mode of this computer.
Boot Sequence	Enables or disables Windows Boot Manager and UEFI Hard Drive. By default, Windows Boot Manager is selected By default, UEFI Hard Drive is selected
Secure Boot	
Enable Secure Boot	Enables secure boot using only validated boot software. Default: OFF
Secure Boot Mode	Displays the secure boot mode . Default: Deployed Mode
Expert Key Management	
Enable Custom Mode	Allows the PK, KEK, db, and dbx security key databases to be modified. Default: OFF
Custom Mode Key Management	Allows for selection of key database. Default: PK

Table 5. System setup options—Integrated Devices menu

Integrated Devices	
Date/Time	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between 12-hour and 24-hour clock. Changes to the time take effect immediately.
Camera	
Enable Camera	Enables or disables the camera. By default, Enable Camera is selected.
Audio	
Enable Audio	Enables or disables all integrated audio controller. Default: ON
Enable Microphone	Enables or disables microphone. By default, Enable Microphone is selected.
Enable Internal Speaker	Enables or disables internal speaker. By default, Enable Internal Speaker is selected.
USB/Thunderbolt Configuration	
Enable External USB Ports	Enables or disables all external USB ports in an OS environment. By default, Enable External USB Ports is selected.
Enable USB Boot Support	Enables or disables booting from USB mass storage devices such as external hard drive, optical drive, and USB drive. By default, Enable USB Boot Support is selected.
Enable Thunderbolt™ Boot Support	Enables or disables Thunderbolt™ adapter peripheral devices and USB devices connected to the Thunderbolt™ adapter to be used during BIO's pre-boot. Default: OFF
Enable Thunderbolt™ (and PCIe behind TBT) pre-boot modules	Enables or disables PCIe devices that are connected through a Thunderbolt™ adapter to run the PCIe device's UEFI Option ROM(s) during pre-boot. Default: OFF

Table 6. System setup options—Storage menu

Storage	
SATA/NVMe Operation	
SATA/NVMe Operation	Sets the operating mode of the integrated storage device controller. By default, AHCI/NVMe is selected.
Storage Interface	
Port Enablement	Enables or disables the onboard drives.
M.2 PCIe SSD-0	Enables or disables the M.2 PCIe SSD-0. Default: ON
M.2 PCIe SSD-1	Enables or disables the M.2 PCIe SSD-1. Default: ON
SMART Reporting	

Table 6. System setup options—Storage menu (continued)

Storage	
Enable SMART Reporting	Enables or disables Self-Monitoring, Analysis, and Reporting Technology (SMART). Default: OFF
Drive Information	Displays the information of various onboard drives.

Table 7. System setup options—Display menu

Display	
Display Brightness	
Brightness on battery power	Sets the screen brightness when the computer is running on battery power. Default: 50
Brightness on AC power	Sets the screen brightness when the computer is running on AC power. Default: 100
Full Screen Logo	
Full Screen Logo	When turned on, the full screen logo is displayed if the image matches the screen resolution. Default: OFF
Hybrid Graphics / Advanced Optimus	
Enable Hybrid Graphics / Advanced Optimus (when available)	When turned on, the system allows both integrated and discrete graphics controllers to work together for optimized capability and battery life. When turned off, the discrete graphics controller will drive all displays to prioritize graphics capability over battery life. Default: ON
	<p>NOTE: Linux is not supported with Hybrid Graphics enabled.</p> <p>NOTE: This option is available for the computer that features the following discrete GPUs:</p> <ul style="list-style-type: none"> • NVIDIA GeForce RTX 3060 • NVIDIA GeForce RTX 3070 • NVIDIA GeForce RTX 3080

Table 8. System setup options—Connection menu

Connection	
Network Controller Configuration	
Integrated NIC	Controls the onboard LAN controller. Default: Enabled with PXE
Wireless Device Enable	
WLAN	Enable or disable internal WLAN devices. By default, WLAN is selected.
Bluetooth®	Enable or disable internal Bluetooth devices. By default, Bluetooth is selected.
Enable UEFI Network Stack	
Enable UEFI Network Stack	Enables or disables UEFI networking protocols, if they are installed and available.

Table 8. System setup options—Connection menu (continued)

Connection	
	Default: ON
HTTP(s) Boot Feature	
HTTP(s) Boot	Enable or disable HTTP(s) Boot feature. Default: ON
HTTP(s) Boot Modes	Configures HTTP(s) Boot Modes. Default: Auto Mode. HTTP(s) Boot automatically extracts Boot URL from the Dynamic Host Configuration (DHCP). NOTE: Provisioning of the Certificate is required to connect to HTTPs Boot server.

Table 9. System setup options—Power menu

Power	
Battery 1 Charge Mode	
Battery 1 Charge Mode	Enables the computer to run on battery during peak power usage hours. Use the below options to prevent AC power usage between certain times of each day. Default: Adaptive. Battery settings are adaptively optimized based on your typical battery usage pattern.
Advanced Configuration	
Enable Advanced Battery Charge Configuration	Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day. Default: OFF
USB PowerShare	
Enable USB PowerShare	Enables external devices such as phones and portable music players to be powered or charged using the stored system battery.. Default: OFF
Thermal Management	
Thermal Management	Enables the cooling fan and processor heat management to adjust system performance, noise, and temperature. Default: Optimized. Standard settings for cooling fan and processor heat management. This setting is a balance of performance, noise, and temperature.
Block Sleep	
Block Sleep	Blocks the computer from entering Sleep (S3) mode in the operating system. Default: OFF NOTE: If enabled, the computer will not go to sleep, Intel® Rapid Start will be disabled automatically, and the operating system power option will be blank if it was set to Sleep.
Lid Switch	
Enable Lid Switch	Enable or disable the lid switch. Default: ON
Power On Lid Open	Enables the computer to turn on from the off state whenever the lid is opened. Default: ON

Table 9. System setup options—Power menu (continued)

Power	
<p>Intel Speed Shift Technology</p> <p>Intel Speed Shift Technology</p>	<p>Enables or disables the Intel Speed Shift Technology support. Setting this option to enable allows the operating system to select the appropriate processor performance automatically.</p> <p>Default: ON</p>

Table 10. System setup options—Security menu

Security	
<p>Intel® Platform Trust Technology</p> <p>Intel® Platform Trust Technology On</p>	<p>Enable or disable the Intel® Platform Trust Technology (PPT) feature in the OS.</p> <p>Default: ON</p>
<p>PPI Bypass for Clear Commands</p>	<p>Enables or disables the Trusted Platform Model (TPM) Physical Presence Interface (PPI). When enabled, the OS will skip BIOS Physical Presence Interface (PPI) user prompts when issuing the Clear command.</p> <p>Default: OFF</p>
<p>Clear</p>	<p>Enables or disables the computer to clear the PTT owner information, and returns the PTT to the default state.</p> <p>Default: OFF</p>
<p>SMM Security Mitigation</p> <p>SMM Security Mitigation</p>	<p>Enables or disables additional UEFI SMM Security Mitigation protections.</p> <p>Default: OFF</p> <p>NOTE: This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.</p>
<p>Data Wipe on Next Boot</p> <p>Start Data Wipe</p>	<p>When enabled, the BIOS will schedule a data wipe cycle for all storage devices that are connected to the system board on the next reboot.</p> <p>Default: OFF</p>
<p>Absolute®</p> <p>Absolute®</p>	<p>Enables, disables or permanently disable the BIOS module interface of the optional Absolute Persistence Module service from Absolute Software.</p> <p>Default: Enabled</p>
<p>UEFI Boot Path Security</p> <p>UEFI Boot Path Security</p>	<p>Determines if the system will prompt the user to enter the admin password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>Default: Always Except Internal HDD.</p>

Table 11. System setup options—Passwords menu

Passwords	
<p>Admin Password</p>	<p>Enables you to set, change, or delete the administrator (admin) password. The admin password enables several security features</p>
<p>System Password</p>	<p>Enables you to set, change, or delete the system password.</p>
<p>M.2 PCIe SSD-0</p>	<p>Enables you to set, change, or delete the M.2 PCIe SSD-0 password.</p>
<p>Password Configuration</p>	

Table 11. System setup options—Passwords menu (continued)

Passwords	
Upper Case Letter	Enforces password restriction that the password must contain at least one upper case letter. Default: OFF
Lower Case Letter	Enforces password restriction that the password must contain at least one lower case letter. Default: OFF
Digit	Enforces password restriction that the password must contain at least one digit. Default: OFF
Special Character	Enforces password restriction that the password must contain at least one special character. Default: OFF
Minimum Characters	Controls the minimum number of characters allowed for password. Default: 04
Password Bypass	
Password Bypass	Bypass the System (Boot) Password and the internal hard drive password prompts during a system restart. Default: Disabled
Password Changes	
Enable Non-Admin Password Changes	Bypass the System (Boot) Password and the internal hard drive password prompts during a system restart. Default: Disabled
Enable Non-Admin Password Changes	Enables or disables the user to change the system and hard drive password without the need for admin password. Default: ON
Admin Setup Lockout	
Enable Admin Setup Lockout	Enables or disables the user from entering BIOS Setup when an Admin Password is set. Default: OFF
Master Password Lockout	
Enable Master Password Lockout	Enables or disables master password support. Default: OFF
	NOTE: Hard drive passwords must be cleared before the setting can be changed.
Allow Non-Admin PSID Revert	
Enable Allow Non-Admin PSID Revert	Controls access to the Physical Security ID (PSID) revert of NVMe hard-drives from the Dell Security Manager prompt. Default: OFF

Table 12. System setup options—Update,Recovery menu

Update,Recovery	
UEFI Capsule Firmware Updates	
Enable UEFI Capsule Firmware Updates	Enables or disables BIOS updates through UEFI capsule update packages. Default: ON

Table 12. System setup options—Update,Recovery menu (continued)

Update,Recovery	
BIOS Recovery from Hard Drive	
BIOS Recovery from Hard Drive	<p>Enables the computer to recover from a bad BIOS image, as long as the Boot Block portion is intact and functioning.</p> <p>Default: ON</p> <p>NOTE: BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p>
BIOS Downgrade	
Allow BIOS Downgrade	<p>Controls flashing of the system firmware to previous revisions.</p> <p>Default: ON</p>
SupportAssist OS Recovery	
	<p>Enables or disables the boot flow for SupportAssist OS Recovery tool, in the event of certain system error.</p> <p>Default: ON</p>
BIOSConnect	
BIOSConnect	<p>Enables or disables cloud Service OS recovery if the main OS fails to boot within the number of failures equal or greater than the value specified by Dell Auto OS Recovery Threshold, and local Service does not boot, or is not installed.</p> <p>Default: ON</p>
Dell Auto OS Recovery Threshold	
Dell Auto OS Recovery Threshold	<p>Controls the automatic boot flow for SupportAssist System Resolution Console and for Dell operating system Recovery tool.</p> <p>Default: 2.</p>

Table 13. System setup options—System Management menu

System Management	
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Creates a system Asset Tag that can be used by an IT administrator to uniquely identify a particular system. Once set in BIOS, the Asset Tag cannot be changed.
AC Behavior	
Wake on AC	<p>Enables or disables basic checks when AC power is applied to the device. The checks include determining how the AC Recovery option is set. The system will boot up if Wake on AC is enabled, the system will power off, if Wake on AC is disabled.</p> <p>Default: OFF</p>
Auto On Time	
Auto On Time	<p>Controls automatic powering up of system for defined days and times.</p> <p>Default: Every Day</p>
First Power On Date	
Set Ownership Date	<p>Enables the user to configure the Ownership date.</p> <p>Default: OFF</p>

Table 14. System setup options—Keyboard menu



Keyboard	
Fn Lock Options	
Fn Lock Options	Enables or disables the Fn lock mode. Default: ON
Lock Mode	Controls operation of function keys F1-F12. Default: Lock Mode Standard
Keyboard Backlight Timeout on AC	
Keyboard Backlight Timeout on AC	Enables the user to define the timeout value for the keyboard backlight when an AC adapter is plugged into the system. Default: Never
Keyboard Backlight Timeout on Battery	
Keyboard Backlight Timeout on Battery	Enables the user to define the timeout value for the keyboard backlight when the system is operating only on battery power. Default: Never
RGB Per Key Keyboard Language	
	Enables the user to select the language that matches the keyboard installed on the system. Default: English US
	 WARNING: Selecting the incorrect language may cause the keyboard and lighting malfunction.
RGB Per Key Keyboard Color	
	Enables the user to select the keyboard color that matches the keyboard installed on the system. Default: Dark
	 WARNING: Selecting the incorrect language may cause the keyboard and lighting malfunction.

Table 15. System setup options—Pre-boot Behavior menu


Pre-boot Behavior	
Adapter warnings	
Enable Adapter warnings	Enables or disables the computer to display adapter warning messages when adapters with too little power capacity are detected. Default: ON
Warnings and Errors	
Warnings and Errors	Selects an action on encountering a warning or error during boot. Default: Prompt on Warnings and Errors. Stop, prompt, and wait for user input when warnings or errors are detected.
	 NOTE: Errors deemed critical to the operation of the computer hardware will always halt the computer.
USB-C Warnings	
	Specify the maximum number of characters allowed for Admin password. Default: 32
Enable Dock Warning Messages	Enable or disable dock warning messages. Default: ON
Fastboot	
Fastboot	Configures the speed of the UEFI boot process.

Table 15. System setup options—Pre-boot Behavior menu (continued)

Pre-boot Behavior	
	Default: Thorough. Performs complete hardware and configuration initialization during boot.
Extend BIOS POST Time	
Extend BIOS POST Time	Configures the BIOS POST (Power-On Self-Test) load time. Default: 0 seconds

Table 16. System setup options—Virtualization Support menu

Virtualization	
Intel® Virtualization Technology	
Enable Intel® Virtualization Technology (VT)	Enables the computer to run a virtual machine monitor (VMM). Default: ON
VT for Direct I/O	
Enable Intel® VT for Direct I/O	Enables the computer to perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O. Default: ON

Table 17. System setup options—Performance menu

Performance	
Multi-Core Support	
Active Cores	Changes the number of CPU cores available to the operating system. The default value is set to the maximum number of cores. Default: All
Intel® SpeedStep	
Enable Intel® SpeedStep Technology	Enables or disables the Intel® SpeedStep Technology to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production. Default: ON
C-States Control	
Enable C-State Control	Enables or disables the CPU's ability to enter and exit low-power states. Default: ON
Enable Adaptive C-States for Discrete Graphics	Allows to dynamically detect high usage of discrete graphics and adjust system parameters for higher performance during that time period. Default: ON
Intel® Turbo Boost Technology	
Enable Intel® Turbo Boost Technology	Enabled or disabled the Intel® TurboBoost mode of the processor. If enabled, the Intel® TurboBoost driver increases the performance of the CPU or graphics processor. Default: ON
Intel® Hyper-Threading Technology	
Enable Intel® Hyper-Threading Technology	Enabled or disabled the Intel® Hyper-Threading mode of the processor. If enabled, the Intel® Hyper-Threading increases the efficiency of the processor resources when multiple threads run on each core. Default: ON

Table 17. System setup options—Performance menu (continued)

Performance	
Extreme Memory Profile	
Extreme Memory Profile	Enables the user to select one of two alternate memory time profiles, in order to take advantage of the fastest possible memory performance. Default: DIMM profile
TCC Activation Offset	
TCC Activation Offset	Enables user to adjust CPU's Tcc offset to moderate the performance of the CPU. Default: 00

Table 18. System setup options—System Logs menu

System Logs	
BIOS Event Log	
Clear BIOS Event Log	Select keep or clear BIOS events. Default: Keep Log
Thermal Event Log	
Clear Thermal Event Log	Select keep or clear Thermal events. Default: Keep Log
Power Event Log	
Clear Power Event Log	Select keep or clear Power events. Default: Keep Log

System and setup password


Table 19. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - At least one special character: ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | }
 - Numbers 0 through 9.
 - Upper case letters from A to Z.
 - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the pop-up message.
5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.

Steps

1. Remove the [base cover](#).
2. Disconnect the battery cable from the system board.
3. Press the power button for 20 seconds.
4. Wait for one minute.
5. Connect the battery cable to the system board.
6. Install the [base cover](#).

Clearing BIOS (System Setup) and System passwords

About this task

To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

NOTE: For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Updating the BIOS

Updating the BIOS in Windows

Steps

1. Go to www.dell.com/support.
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.
NOTE: If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, see knowledge base article 000124211 at www.dell.com/support.

Updating the BIOS using the USB drive in Windows

Steps

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, see the knowledge base article 000145519 at www.dell.com/support.
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

About this task

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.

 **NOTE:** Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION: Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.**

Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

Troubleshooting

Handling swollen Lithium-ion batteries

Like most laptops, Dell laptops use lithium-ion batteries. One type of lithium-ion battery is the lithium-ion polymer battery. Lithium-ion polymer batteries have increased in popularity in recent years and have become standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to lithium-ion polymer battery technology is the potential for swelling of the battery cells.

Swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and should be replaced and disposed of properly. We recommend contacting Dell product support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing Lithium-ion batteries are as follows:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery before removing it from the system. To discharge the battery, unplug the AC adapter from the system and operate the system only on battery power. When the system will no longer power on when the power button is pressed, the battery is fully discharged.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell product support at <https://www.dell.com/support> for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from <https://www.dell.com> or otherwise directly from Dell.


Lithium-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information on how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell Laptop Battery in the Knowledge Base Resource at www.dell.com/support.

SupportAssist diagnostics

About this task

The SupportAssist diagnostics (previously known as ePSA diagnostics) performs a complete check of your hardware. The SupportAssist diagnostics is embedded in the BIOS and is launched by it internally. The SupportAssist diagnostics provides a set of options for particular devices or device groups. It allows you to:

- Run tests automatically or in an interactive mode.
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options and provide extra information about the failed device(s)
- View status messages that indicate if the tests are completed successfully
- View error messages that indicate if problems were encountered during the test

 **NOTE:** Some tests are meant for specific devices and require user interaction. Ensure that you are present in front of the computer when the diagnostic tests are performed.

For more information, see [SupportAssist Pre-Boot System Performance Check](#).

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at www.dell.com/serviceabilitytools. Click **SupportAssist** and then, click **SupportAssist OS Recovery**.

System-diagnostic lights

Power and battery-status light

The power and battery status light indicates the power and battery status of the computer. These are the power states:

Solid white:Power adapter is connected and the battery has more than 5% charge.

Amber:Computer is running on battery and the battery has less than 5% charge.

Off:

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light may also blink red or blue according to pre-defined "beep codes" indicating various failures.

For example, the power and battery-status light blinks red two times followed by a pause, and then blinks blue three times followed by a pause. This 2,3 pattern continues until the computer is turned off, indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.


 **NOTE:** The following diagnostic light codes and recommended solutions are intended for Dell service technicians to troubleshoot problems. You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.

Table 20. Diagnostic-light LED codes

Diagnostic light codes	Problem description
1,1	TPM detection failure
1,2	Unrecoverable SPI Flash Failure
1,3	Short in hinge cable tripped OCP1 (camera/touchpad)
1,4	Short in hinge cable tripped OCP2 (display)
1,5	EC unable to program i-Fuse
1,6	Generic catch-all for ungraceful EC code flow errors
2,1	Processor failure
2,2	System board: BIOS or ROM (Read-Only Memory) failure
2,3	No memory or RAM (Random-Access Memory) detected
2,4	Memory or RAM (Random-Access Memory) failure
2,5	Invalid memory installed

Table 20. Diagnostic-light LED codes (continued)

Diagnostic light codes	Problem description
2,6	System-board or chipset error
2,7	Display failure - SBIOS message
2,8	Display failure - EC detection of power rail failure
3,1	RTC power failure
3,2	PCI, video card/chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid
3,5	Power-rail failure
3,6	System BIOS Flash incomplete
3,7	Management Engine (ME) error


Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell proposes multiple options for recovering Windows operating system on your Dell PC. For more information, see [Dell Windows Backup Media and Recovery Options](#).

WiFi power cycle

About this task

If your computer is unable to access the internet due to WiFi connectivity issues a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.

Steps

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not power on or boot into the operating system.

To drain residual flea power (perform a hard reset)

Steps

1. Turn off your computer.
2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.



 **NOTE:** For more information about performing a hard reset, search in the Knowledge Base Resource at www.dell.com/support.

Getting help and contacting Alienware

Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Table 21. Alienware products and online self-help resources

Self-help resources	Resource location
Information about Alienware products and services	www.alienware.com
My Dell app	
Tips	
Contact Support	In Windows search, type Contact Support , and press Enter .
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Alienware computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
VR Support	www.dell.com/VRsupport
Videos providing step-by-step instructions to service your computer	www.youtube.com/alienwareservices

Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see www.alienware.com.

- ① **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.
- ① **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.