

Dell Wyse ThinLinux

Version 2.0 Administrator's Guide



Notes, cautions, and warnings

 | **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 | **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 | **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

1 Introduction.....	5
About this guide.....	5
Key features.....	5
Supported platform.....	6
Dell Technical Support.....	6
Related documentation and services.....	6
Dell Online Community.....	6
2 Getting started.....	7
Logging in to your thin client device.....	7
Application overview screen.....	7
Using the taskbar.....	8
Viewing system information.....	8
BIOS settings.....	9
3 Configuring thin client settings locally.....	11
Changing system settings.....	12
Customizing the display.....	12
Setting the date and time.....	16
Selecting the language.....	18
Configuring the addons	18
Configure the power saving setting.....	20
Configuring desktop appliance.....	21
Delayed update settings	24
Other settings.....	25
Peripherals.....	26
Setting the keyboard preferences.....	27
Setting the mouse preferences.....	27
Configuring the printer settings.....	28
Configuring the sound settings for Wyse 3040 thin client.....	30
Configuring the sound settings on Wyse 5070 thin client.....	32
Network.....	36
Configuring the wi-fi settings.....	37
Configuring wired network connection settings.....	39
Configuring the network proxy settings.....	41
Adding a network connection.....	41
802.1x configuration.....	44
Personalization.....	48
Setting the desktop wallpaper.....	49
Configuring universal access.....	49
Original Equipment Manufacturer branding.....	51
4 Configuring Connections locally	53

Configuring and managing the browser connections.....	53
Configuring and managing Citrix connections.....	55
Configuring the server connection type.....	56
Configuring Global Citrix settings.....	59
Managing PAM login.....	64
Citrix ICA Client RTME.....	65
Configuring and managing the custom connections.....	66
Configuring and managing the Ericom PowerTerm connections.....	68
Configuring and managing RDP connections.....	72
Configuring and managing the SSH connections.....	78
Configuring and managing VMware connections.....	79
Configuring and managing the VNC viewer connections.....	83
5 Security settings.....	87
Managing SSH server preferences.....	87
Managing the certificates.....	88
Setting VNC server preferences	89
Managing the accounts settings.....	90
6 Additional management configurations.....	92
Configuration management.....	92
HAgent.....	94
INI management.....	95
Logs and Tools	96
SCEP configuration management.....	100
Wyse Device Agent	101
7 Viewing XTerm.....	104
8 Imaging solutions.....	105
Merlin imaging.....	105
Merlin Imaging from file server without management server.....	105
9 Password encoding.....	106
Base64 passwords encoding.....	106
AES password encoding.....	106
A Central configuration—Automating updates and configurations.....	107
How INI files are employed.....	107
Setting up the automatic configurations and updates.....	108
Preparing the root directory and folder structure on the server.....	108
Directing the thin client to the server.....	109
B DHCP options tags.....	110
C Data recovery imaging.....	112

Introduction

Wyse ThinLinux from Dell simplifies the user management paradigm with elegant application icons and comes with a single built-in user to enhance user experience along with having the benefits of a single-operating system. ThinLinux software combines the security, flexibility and market-leading usability of enterprise-grade Linux with Dell's thin computing optimizations in management. It is ideal for organizations that want to run server-based, Web-based or local applications including legacy applications without the deployment and security concerns of a nonstandard Linux distribution.

Topics:

- [About this guide](#)
- [Key features](#)
- [Supported platform](#)
- [Dell Technical Support](#)

About this guide

This guide is intended for administrators of thin clients running Dell Wyse ThinLinux . It provides information and detailed system configurations to help you design and manage a Dell Wyse ThinLinux environment.

Key features

This section provides the details on the key features in this release.

- BIOS - UEFI
- User friendly screen
- System settings
- Connections and VDI
- Import/Export configurations
- Desktop appliance
- Management solution
- 802.1x / SCEP
- INI configuration
- Network and wireless modules
- ENERGY STAR compliance
- Add-ons compatibility
- Imaging solutions
- Mozilla Firefox web browser
- Google Chrome web browser
- System information
- Lock screen
- Recovery imaging
- Dell Command | Monitor (DCM) support
- Multi-display support on Wyse 5070 Extended thin client

Supported platform

This section provides the information about the supported platforms.

Table 1. Supported platforms

Hardware platform	Memory configuration—eMMC / RAM
Wyse 3040 thin client	16 GB / 2 GB
Wyse 5070 thin client—Celeron Processor	16 GB / 4 GB
Wyse 5070 thin client—Pentium Processor	16 GB / 4 GB
Wyse 5070 Extended thin client—Pentium Processor	16 GB / 4 GB

Dell Technical Support

To access Dell Wyse technical resources, visit www.dell.com/support/contents/us/en/19/article/Product-Support/Dell-Subsidiaries/wyse. For more information, you can submit cases to [Dell TechDirect](#) or contact Dell at www.dell.com/support/contents/us/en/04/category/contact-information.

Related documentation and services

Fact sheets containing features of the hardware products are available on the Dell Wyse website. Go to www.dell.com/wyse and select your hardware product to locate and download the fact sheet.

To get support for your Wyse product, check your product Service Tag or serial number.

- For Dell service tagged products, find knowledge base articles and drivers on the Dell Wyse product pages.
- For Non-Dell Service Tagged Products, find all the support needed by accessing the www.dell.com/support/contents/us/en/04/article/Product-Support/Self-support-Knowledgebase/Dell-Subsidiaries/wyse.

Dell Online Community

Dell maintains an online community where users of our products can seek and exchange information about user forums. Visit the Dell Online Community forums at Dell.com/community.

Getting started

Use the following information to learn the basics and get started using your thin client:

- [Logging in to your thin client device](#)
- [Using your ThinLinux desktop](#)
- [Configuring thin client settings and connections](#)
- [Viewing system information](#)
- [BIOS settings](#)

Logging in to your thin client device

On your initial configuration, Dell recommends that you connect by using a wired connection by plugging in the network connected Ethernet cable to your thin client.

After you turn on your thin client, you are automatically logged in to the thinuser account. The default password of the thinuser account is **thinuser**. For information about changing the default password, see [Managing the account settings](#).

NOTE: If a GDM login is needed (for example, AD/Domain login, PNAgent login, and so on), the autologin option can be turned off through the GUI or by using the INI parameter.

Admin mode enables you to perform system administration tasks such as adding or removing connections and setting up specific device settings. To switch to Admin mode, click the **Switch to Admin** button on the Settings application screen and enter the default root password in the **Authentication required** window. The default root password is **admin**. For information about changing the default password, see [Managing the account settings](#).

Application overview screen

ThinLinux 2.0 boots to the application overview screen. This is the default ThinLinux screen that is displayed after you log in to the thin client (without auto-start of any connections or application).

- **Application Icons**—To access the application icons, click the dots on the lower-right corner of the screen. You can start the application by clicking a particular application icon. If there are more application icons, then the icons are displayed on multiple pages.
- **Taskbar**—The taskbar is displayed at the bottom of the Application Overview screen (ThinLinux Desktop).

The Application Overview Screen consists of the following screen elements:

- **Search Entry**—User can search for applications by typing the application name in the **Search** text box.
- **Multi Monitor**—This is only applicable when you are connected to multiple monitors. The Application overview screen icons are displayed only on the primary monitor. On the rest of the connected monitors, only background is displayed. For instance, if an application is running on the secondary monitor in the Desktop View, then a thumb nail of the application is displayed on the secondary monitor on the Application overview screen.
- **Firefox Browser**—Starts the Mozilla Firefox web browser.
- **Chrome Browser**—Starts the Google Chrome web browser.
- **Settings**—The Settings Application is the integrated application for system settings in both user and admin mode. This application icon appears in the **System Application Overview screen** upon system startup in both user and admin mode.
- **XTerm**—XTerm is the standard terminal emulator for the X Window System. Use the terminal emulator window for X to access a text terminal and all its applications such as command line interfaces (CLI) and text user interface applications. It is applicable for Admin mode.

Desktop view—This is the desktop view for running applications. The desktop automatically switches to the **Desktop view** mode when you launch any application by clicking the icon. The system remains in this desktop view as long as there is at least one open window. When all the windows are closed, the system automatically switches back to the Application Overview screen.

In the case of multiple monitors, the primary monitor displays the running applications and the rest of the connected monitors display the background by default. You can move the application from the primary monitor to the rest of the monitors or from the rest of the monitors to primary monitor. You can also switch to the Desktop screen by clicking the **Show Desktop** button on the taskbar (even when no applications are open). You can toggle between the Desktop screen and Application Overview screen by clicking the **Show Desktop** button.

Using the taskbar

Use the taskbar to view the time, configure the volume settings, view system information, view network information, shutdown the thin client, view keyboard settings and switch to desktop screen.

The taskbar consists of quick launch icons and taskbar buttons:

- **Show Desktop** – Click this button to switch between the Desktop view screen and Application Overview Screen.
 - **Shutdown** – Use this button to shut down or restart the thin client. If you click this button, the Power Off dialog box is displayed. If you do not select any option in the dialog box, the system will automatically power off in sixty seconds. You can cancel the power off by clicking the Cancel button. You can restart or Power Off the thin client by clicking the respective buttons.
- ① **NOTE: When auto-login is disabled or if the user has switched to the admin mode, a logout button is displayed in the Power Off dialog box and you can log out by clicking this button.**
- **Activities** – The application icon is added to the taskbar whenever a new application is started. Taskbar displays a single icon for a single running application. If multiple instances of the same application are running, multiple icons are displayed in the Taskbar. Hover the mouse pointer over the Taskbar to view the tooltip for application name. The icon of the current running application that is in focus is highlighted in the taskbar.
 - **Date and Time** – Use this icon to view the date and time.
 - **Volume icon** – Use this option to increase or decrease the speaker volume or mute the speaker.
 - **Network icon** – Use this icon to view the Network details.
 - **Keyboard icon**– Click this icon to view the available keyboard layout. You can switch between the keyboard layouts using this option.
 - **System Information** – Use the System Information screen to view Identity, Network, Packages, and Copyright information. For more information, see [Viewing System Information](#).

Viewing system information

Use the System Information UI to view the Identity, Network, Packages, and Copyright information.

To view system information:

- 1 Click the **System Information** icon on taskbar.

The System Information dialog box is displayed. System Information contains the following tabs:

- Identity tab
- Network tab
- Packages tab
- Copyright tab

The System Information dialog box displays the following information:

- **Identity tab**—Displays identity information such as:
 - **System**
 - Current User

- Terminal Name
- Product Name
- Platform
- Build
- OS Version
- Uptime
- **Hardware**
 - Processor
 - Processor Speed
 - Total Memory
 - Free Memory
 - Media Size
 - Serial Number
- **BIOS**
 - BIOS Version
- **Network tab**—Displays network information such as:
 - **Network Device**
 - **Interface Information**
 - MAC address
 - Network Speed
 - Maximum Transmission Unit (MTU)
 - **IP Information**
 - IP Address
 - IPv6 Address
 - Subnet Mask
 - Gateway
 - Domain
 - Primary DNS
 - Secondary DNS
 - DHCP Server
 - Lease
 - Elapsed
- **Packages tab**—The packages tab displays the add-ons. The add-ons are listed with the attributes—package, version, status and size. The **Original** value in the **Status** column specifies the built-in add-ons in ThinLinux image. Original add-ons are displayed in **Black** color, and the add-ons upgraded from Dell Wyse are displayed in **Green** color.

The packages can be sorted by Package Name, Version, Status or Size by clicking the respective buttons. By default, only Dell Wyse packages are displayed. To view all packages, click the **Show All Packages** button.
- **Copyright tab**—Displays the software copyright and patent notices.

BIOS settings

This section describes the procedure to invoke UEFI BIOS settings and select boot source for Wyse 3040 thin client and Wyse 5070 thin client.

The standard UEFI BIOS features and boot options are as follows:

- Boot from UEFI: Hard Drive, Partition 2 – Boots from the internal eMMC storage.

- Boot from IP4 Realtek PCIe GBE Family Controller – Boots from the network through PXE.
- Boot from IP6 Realtek PCIe GBE Family Controller – Boots from the network through PXE.
- Boot from USB – Boots the USB storage from any of the USB ports (this option gets display if plugin in the Bootable USB devices).

The following are the UEFI BIOS Hot Key functions while booting:

- F12-Key – The key invokes the boot selection menu. It is used to select boot order or to do a BIOS flash update.
- F2-Key – The key invokes the BIOS settings that are protected by a password. The default password is `Fireport`.

Configuring thin client settings locally

This chapter contains information to help you set up your thin client hardware, look and feel, and system settings. To configure your thin client settings, click the **Switch to Admin** button to enter into the **Admin mode**. Enter the default password in the displayed window. The default password is **admin**.

Click the **Settings** icon on the Desktop. The **System Settings** page is displayed.

The **System Settings** consists of the following tabs:

- System
- Peripherals
- Network
- Personalization
- Connections
- Security
- Management

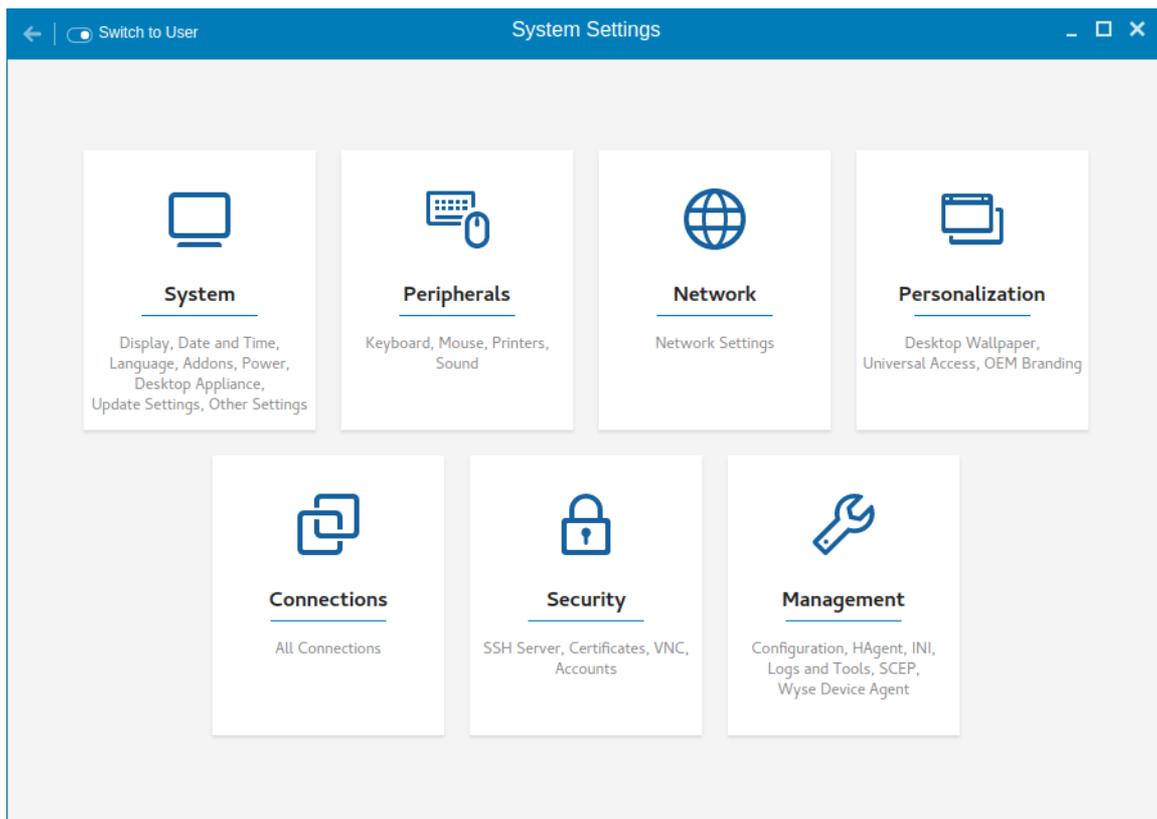


Figure 1. System settings

Topics:

- [Changing system settings](#)
- [Peripherals](#)

- Network
- Personalization

Changing system settings

On the **System Settings** page, click the **System** icon. The following tabs are displayed on the left pane of the **System Settings** page.

- Display
- Date and Time
- Language
- Addons
- Power
- Desktop Appliance
- Update Settings
- Other Settings

Customizing the display

NOTE: This section is applicable to Wyse 3040 thin client and Wyse 5070 thin client.

By default, the **Customize your display** screen is available in both user mode and admin mode. Any changes to display preferences are saved and available for the built-in user named **thinuser**. In a **Dual-monitor** configuration, if both monitors are connected, then by default, the monitors are in extended mode. The primary monitor is on the left (monitor 1), and the secondary monitor is on the right (monitor 2). The resolutions of the monitors are auto detected by the system by analyzing the monitor capabilities.

To customize the display, do the following:

- 1 Click the **Display** tab.
The **Customize Your Display** page is displayed.

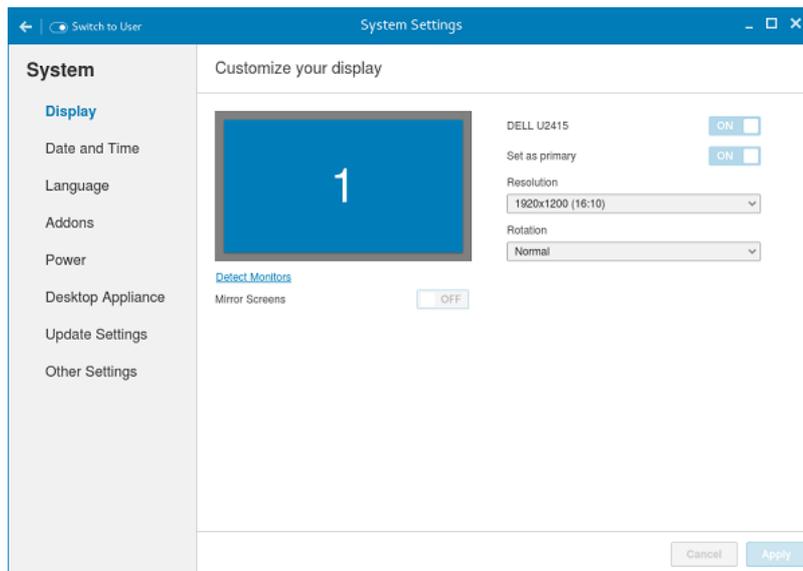


Figure 2. Display settings

- 2 From the **Resolution** drop-down list, select the preferred resolution.
- 3 From the **Rotation** drop-down list, select the rotation.
 - Normal

- Right
 - Left
 - Upside-down
- 4 To enable the screen mirroring for secondary displays in a multi-monitor configuration, click the **ON/OFF** button.
 - 5 To enable the **Set as primary** option, click the **ON/OFF** button. This option allows you to set the selected monitor as primary.
 - 6 To enable the **monitor On/Off** option, click the **ON/OFF** button. This option allows you to turn off and turn on the preferred monitor in a dual monitor configuration.

Customizing the display on Wyse 5070 extended thin client

NOTE: This section is applicable only to Wyse 5070 extended thin client.

By default, the **Customize your display** screen is available in both user mode and admin mode. Any changes to display preferences are saved and available for the built-in user named **thinuser**. To enable the multi display feature, change the primary display to ATI Radeon HD Graphics in BIOS settings. For information about hardware capability and ports preferences, see *Dell Wyse ThinLinux 2.0 Release Notes* at www.dell.com/support.

To customize the display, do the following:

- 1 Click the **Display** tab.
The **Customize Your Display** page is displayed.

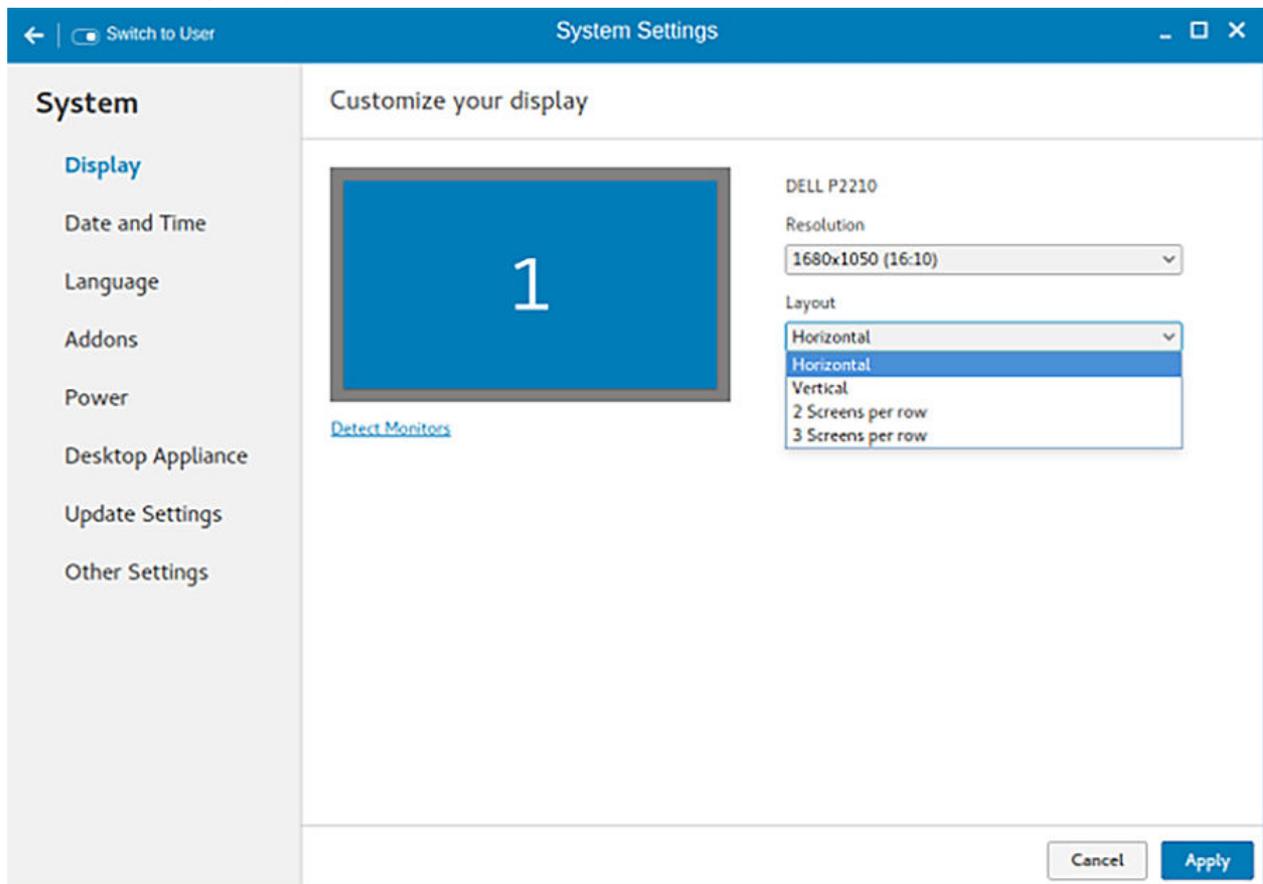


Figure 3. Display settings

- 2 From the **Resolution** drop-down list, select the preferred resolution.
- 3 From the **Layout** drop-down list, select any of the following layout types:
 - **Horizontal**—Enables you to drag the applet window horizontally, from the primary monitor to the rest of the monitors.

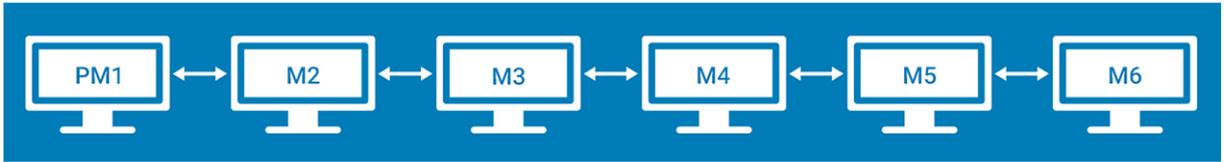


Figure 4. Horizontal layout

- **Vertical**—Enables you to drag the applet window vertically, from the primary monitor to the rest of the monitors.

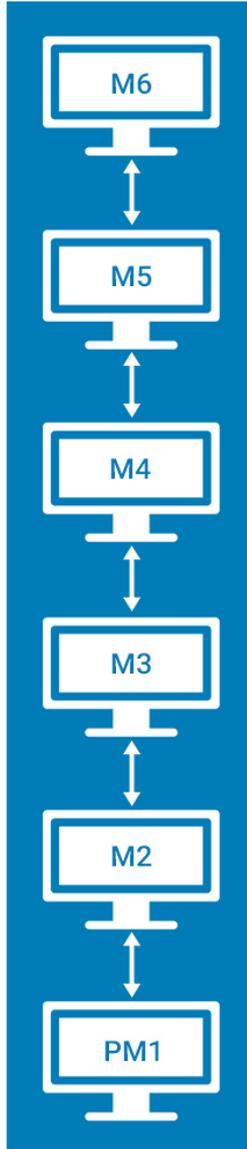


Figure 5. Vertical layout

- **2 screens per row**—Enables you to drag the applet window from the primary monitor to the rest of the monitors as described in the following table. For example, you can drag the applet window from the primary monitor to monitor 2 horizontally, or to monitor 3 vertically.

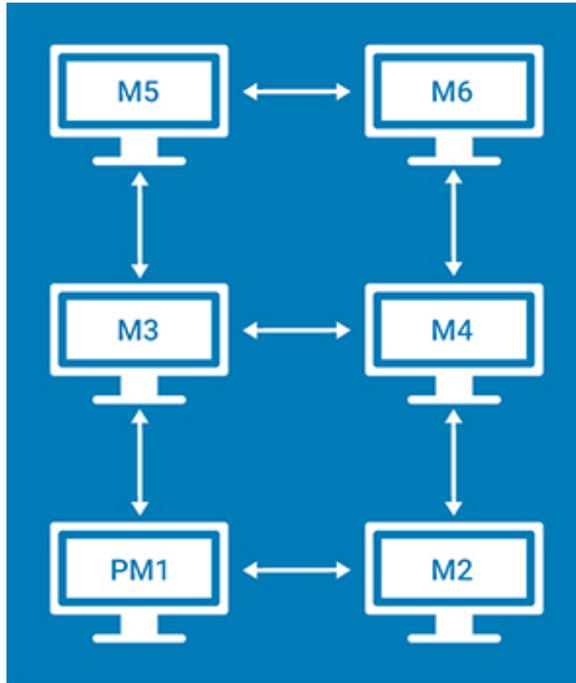


Figure 6. 2 Screens Per Row Layout

Table 2. 2 screens per row layout

Applet window placement at monitor	Traverse horizontally to monitor	Traverse vertically to monitor
Primary monitor (Monitor 1)	Monitor 2	Monitor 3
Monitor 2	Primary monitor (Monitor 1)	Monitor 4
Monitor 3	Monitor 4	Monitor 5, Primary monitor (Monitor 1)
Monitor 4	Monitor 3	Monitor 2, Monitor 6
Monitor 5	Monitor 6	Monitor 3
Monitor 6	Monitor 5	Monitor 4

NOTE:

- You cannot drag the applet window diagonally across the monitors.
- Dell recommends that you set up even number of monitors for a better user experience. 3-monitor setup and 5-monitor setup are not recommended.

3 screens per row—Enables you to drag the applet window from the primary monitor to the rest of the monitors as described in the following table. For example, you can drag the applet window from the primary monitor to monitor 2 horizontally, or to monitor 4 vertically.

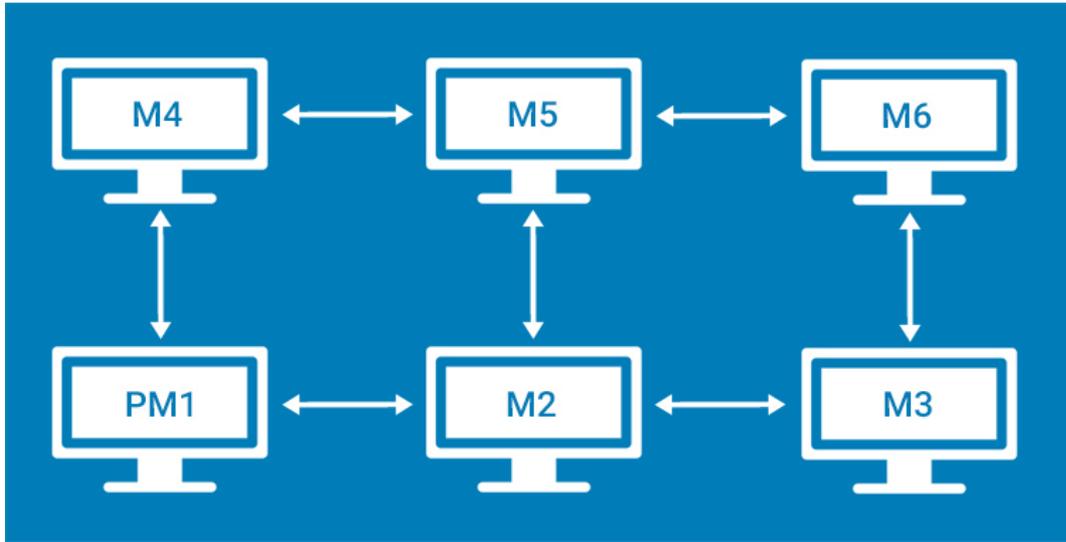


Figure 7. 3 Screens Per Row Layout

Table 3. 3 screens per row layout

Applet window placement at monitor	Traverse horizontally to monitor	Traverse vertically to monitor
Primary monitor (Monitor 1)	Monitor 2	Monitor 4
Monitor 2	Monitor 3, Primary monitor (Monitor 1)	Monitor 5
Monitor 3	Monitor 2	Monitor 6
Monitor 4	Monitor 5	Primary monitor (Monitor 1)
Monitor 5	Monitor 4, Monitor 6	Monitor 2
Monitor 6	Monitor 5	Monitor 3

NOTE:

- You cannot drag the applet window diagonally across the monitors.
- Dell recommends that you set up six monitors for a better user experience. 4-monitor setup and 5-monitor setup are not recommended.

Setting the date and time

- 1 Click the **Date and Time** tab to set the date and time on your thin client.

The Date and Time screen enables you to set the device's date, time, time zone, and whether or not the device should sync its time with an NTP (Network Time Protocol) server. You can configure the Date and Time either manually or automatically. The date, month and the year along with the time is displayed at the top of the screen.

The **Time Format** can be changed by using the Time Format drop-down list, and the **Time Zone** can be changed by using the Time Zone drop-down list. The default time zone is America/Los_Angeles. Both changes can be performed regardless of the ON or OFF state of the **Set Time Automatically** switch.

NOTE: By default, the Date and Time screen is available only in Admin mode

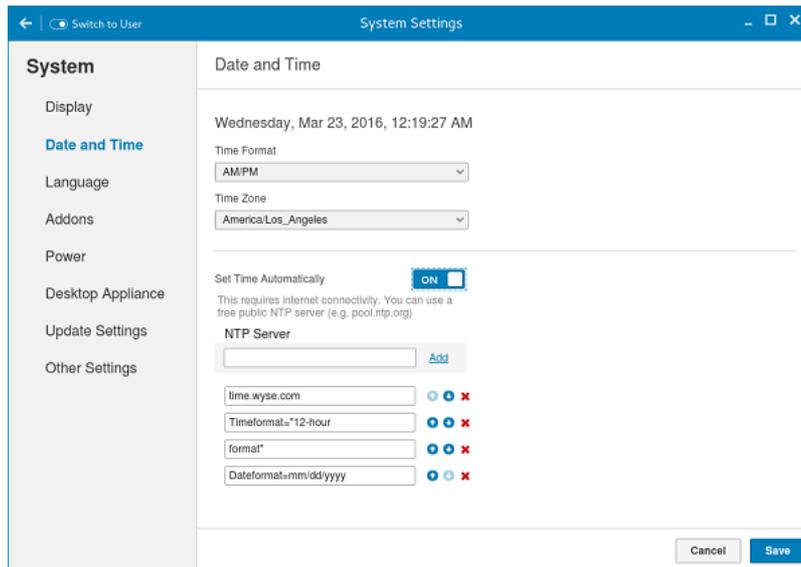


Figure 8. Date and time settings

- 2 To configure the **Date and Time** settings manually when the **Set Time Automatically** switch is in **OFF** position.
 - a Click the date field and select the year, month and date.
Any changes performed in the date field such as, the time format is selected as 24 Hours or an additional AM/PM format, is displayed at the top of screen.

The time field consists of Hour and Minute drop-down list.
 - b Click **Save** to save the changes. Clicking **Save** when **Set Time Automatically** switch is in the OFF state also disables NTP synchronization.

NOTE: The Date and Time screen detects whether or not the NTP daemon is activated. By default, the NTP daemon is deactivated. The manual setting time zone/date/time page is displayed, if the NTP daemon is deactivated. Otherwise, the auto setting time zone page is displayed.
- 3 To configure the **Date and Time** automatically:
 - a Click the **Set Time Automatically** button, to turn on the automatic settings. Note that internet access is required to use this option. Turning on this option activates the NTP daemon and enables the NTP daemon to start syncing the device's time with the specified NTP server.
 - b Click the **+** icon to add a new **NTP** server. The **NTP Server IP or FQDN** box is displayed on the page.
 - c Enter the NTP Server IP or FQDN Server IP in the **NTP Server IP or FQDN** box. The **+** icon and **x** icons are displayed on the right side of the box, when you start typing the characters in the box.
 - Click the **+** icon to add the specified NTP server/FQDN to the NTP Server list. If a proper NTP server IP is not entered, then a warning message is displayed on the page.
 - Click the **x** icon to clear the IP address you have entered in the box.
 - d The **Delete**, **Up arrow** and **Down arrow** icons are displayed next to the NTP Server name when you hover the mouse over a particular NTP server in the NTP Server list.
 - Click the **Delete** icon to delete the specified NTP server from the NTP Server list.
 - Click **Up arrow** and **Down arrow** to change the order of the particular NTP server in the NTP Server list.

NOTE:

 - The **Up arrow** is enabled when the particular NTP server can be moved to the top in the NTP Server list and it is disabled when the particular NTP server is listed at the top of the NTP Server list.
 - Click **Down arrow** to change the order of the particular NTP by moving it down in the list.
 - The **Down arrow** is enabled when the particular NTP server can be moved down in the NTP Server list and it is disabled when the particular NTP server is listed at the bottom of the NTP Server list.
- 4 Click **Save** to save the changes. Clicking **Save** button when, **Set Time Automatically** is in **ON** position, enables NTP synchronization.

Selecting the language

By default, the **Language** applet is available only in Admin mode. Any changes made through Language applet is saved and continued for the built-in thinuser.

From the **Select Language** drop-down list, select the language of the screen from the list of supported languages and click **Save** to save your settings.

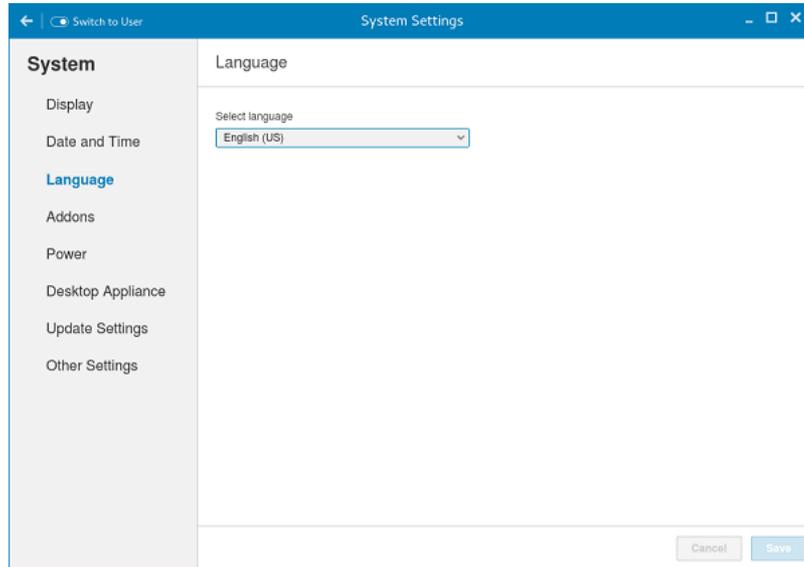


Figure 9. Language settings

Configuring the addons

The Add-ons page enables you to install and remove Add-ons from INI server.

As a prerequisite, you must configure the location of add-ons on the **Manager INI Configuration** page. For more information about INI management, see [INI Management](#).

NOTE: The Addons screen is available only in Admin mode.

- 1 Click the **+** icon to Install the Add-ons.
A list of available add-ons is displayed.

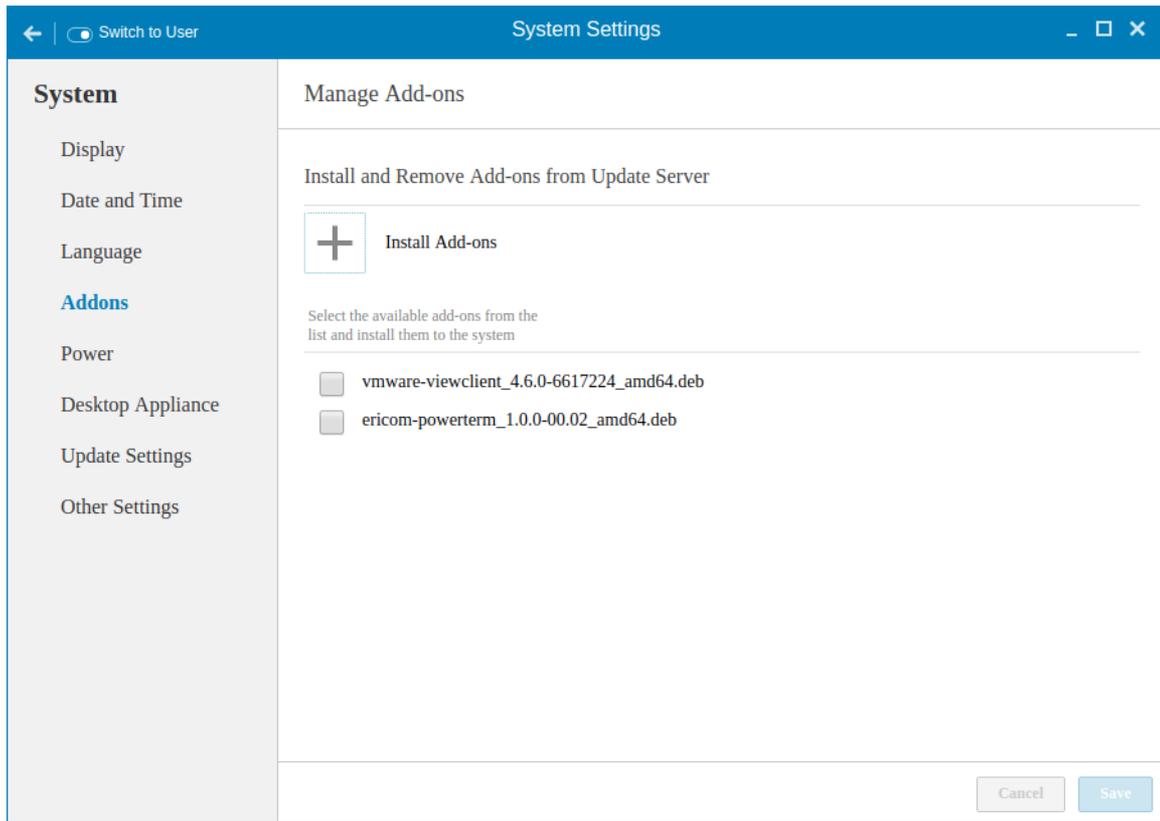


Figure 10. Install Add-ons

- 2 Select the required add-ons and install them to the system. You can select multiple add-ons at a time.
- 3 Click the **x** icon to remove the Add-ons from the installed add-ons list.

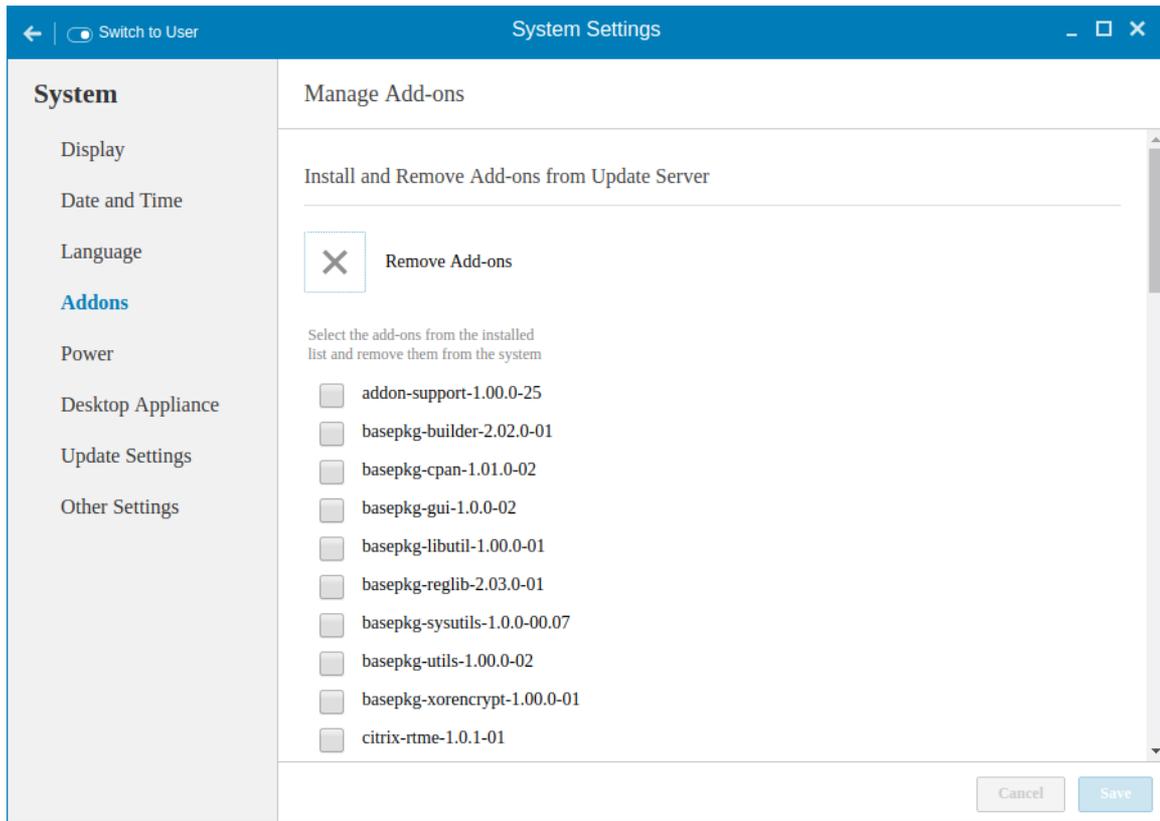


Figure 11. Remove Add-ons

- 4 Select the add-ons that you want to remove and click **Remove Add-ons**.
- 5 Click **Save** to save the changes.

Configure the power saving setting

The **Power Setting** page enables you to set **Monitor Sleep mode**.

- 1 From the **Turn off screen after** drop-down menu, select the time in seconds to set the monitor to turn off after the specified idle time.
- 2 From the **Auto Lock Screen after Turn off screen** drop-down menu, select the time in seconds to set the turned off screen to lock the thin client after the specified idle time.

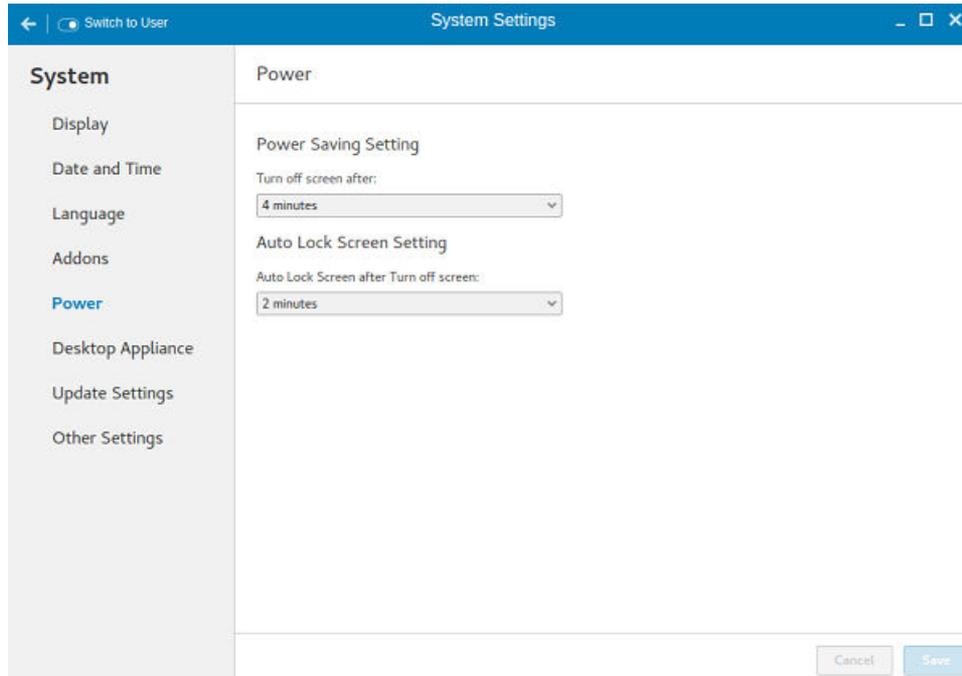


Figure 12. Power settings

NOTE: ThinLinux supports the display turn off, and by default it is set for 4 minutes of idle time to comply with Energy Star category. If you select never option from the drop down list, it corresponds to idle time of 0 minutes.

Configuring desktop appliance

We can configure Desktop Appliance (Power On to Power Off VDI theme) using GUI, INI and DHCP. For INI configuration, refer the tags description of DesktopAppliance, CitrixConnectionType, PNAgentServer and Storename INI parameters.

For DHCP configuration,

- 181—Configure Citrix server url—either specify pnaagent url xyz.com/citrix/pnagent/config.xml, storefront xyz.com/citrix/store/discovery, or IP/FQDN.
- 203—Type of VDI theme
- 204—Type of Citrix server
- 205—Storename. For more information, see [DHCP Option Tags](#)

By default, the **Desktop Appliance** screen is available only in Admin mode. Any changes made through **Desktop Appliance** screen is saved and continued for the built-in thinuser.

- 1 Click the **ON/OFF** button to enable or disable the **VDI theme** option after you log in to the session.
- 2 From the drop-down list, select your preferred VDI theme.

NOTE: Only Citrix theme is supported in this release.

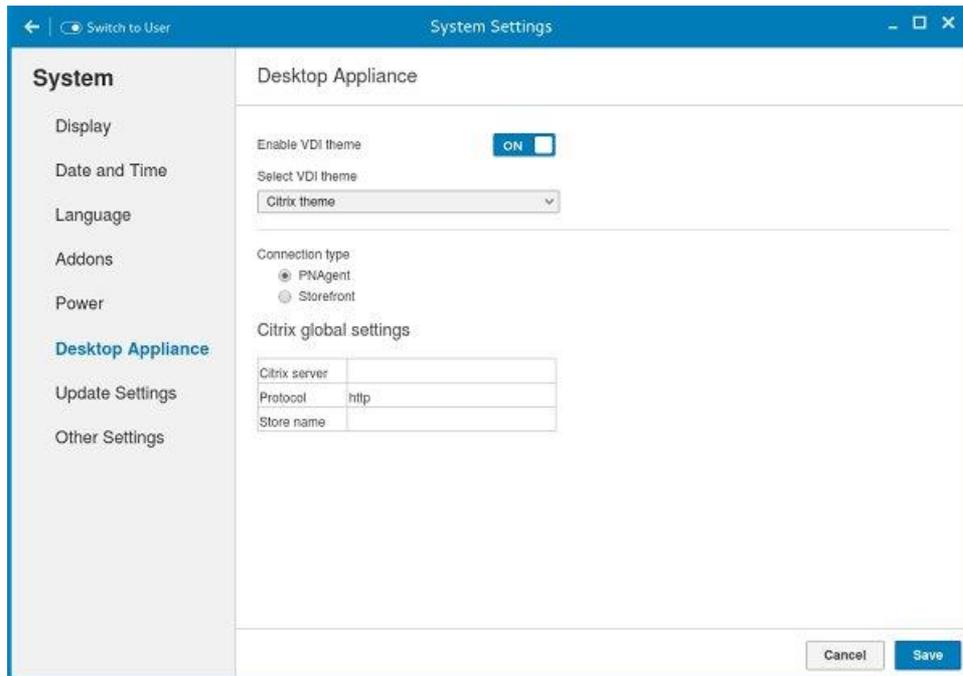


Figure 13. Desktop appliance settings

- 3 Select the type of Citrix Server.
Citrix server, Protocol and Storename can be configured from **Change global settings** page. Go to **All connections** page, select the **Citrix** option and then select the **Change global settings** option to configure the Citrix settings. For more settings for Applications or Desktops, go to All connections page, select Citrix option and then select Change global settings option to configure the Applications or Desktops settings.
- 4 Click **Save**.
You are prompted to restart the system.
- 5 Click **OK** to save the changes and restart the system in selected theme.
- 6 After the system is restarted, a **log on** button is displayed.
 - a Click the **Log On** button.

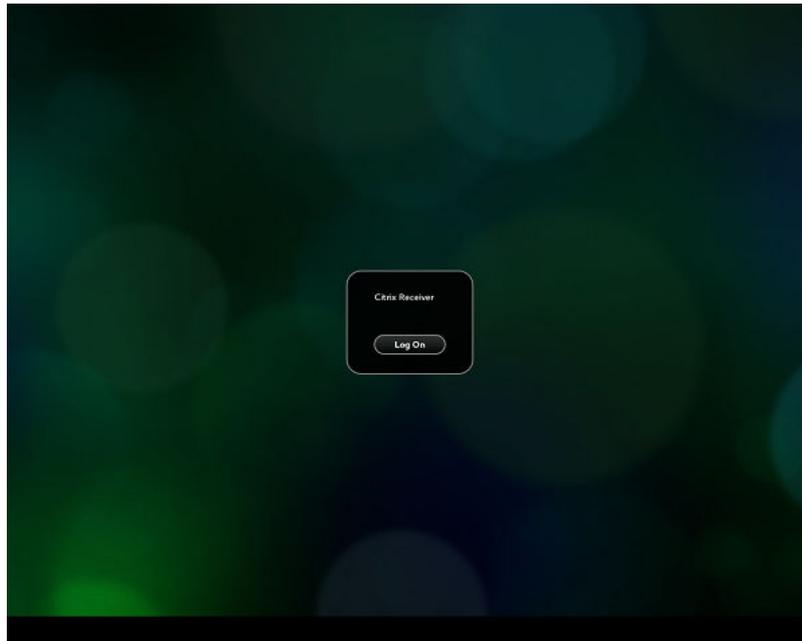


Figure 14. Login screen

You are required to authenticate by entering the following credentials:

- User name
- Password
- Domain

You are logged on to the Citrix receiver.

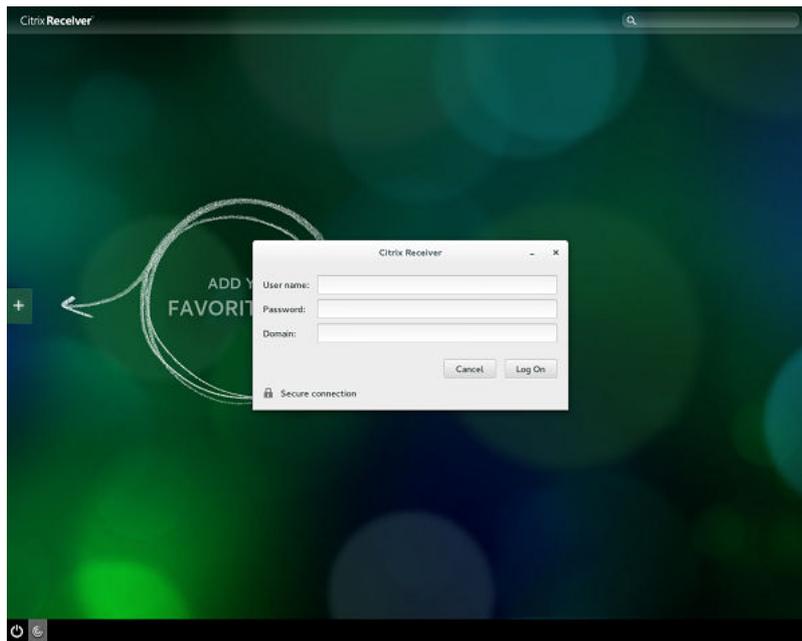


Figure 15. Authentication screen

If the logon authentication fails, you are prompted with a screen. Click **try again** to query the server again.

NOTE: You can break kiosk mode and enter into admin mode at any point of time by using the shortcut key. The shortcut key is <Control><Alt><Shift>F11.

- b After the successful login, you can add the required applications or desktops from the left + button.
- c Click the application or desktop to start it. You are prompted with an error if there as an error message.
- d You can logout at any point of time by clicking the power icon on task bar. Depending on whether any application is opened, you are prompted with an error message.

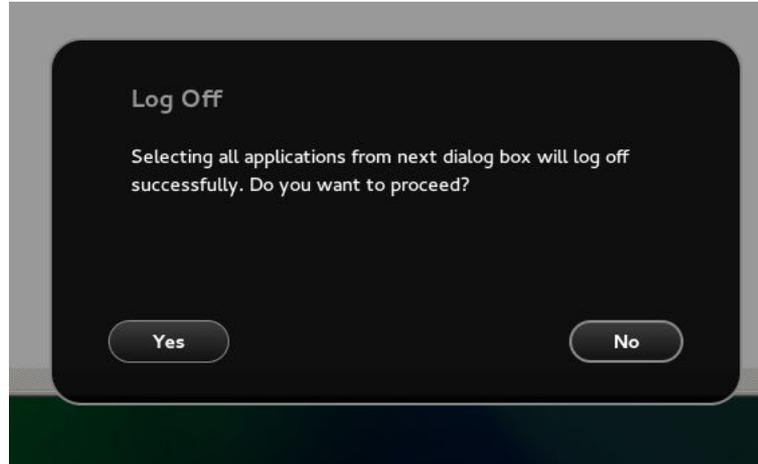


Figure 16. Log Off screen

- e If any applications are running, connection center window is displayed, select each application and either log off or disconnect. Following which click the cross to close the control center and logoff completely.

NOTE: If you do not follow above procedure to log off, you may see sessions active and running behind the displayed log on button.

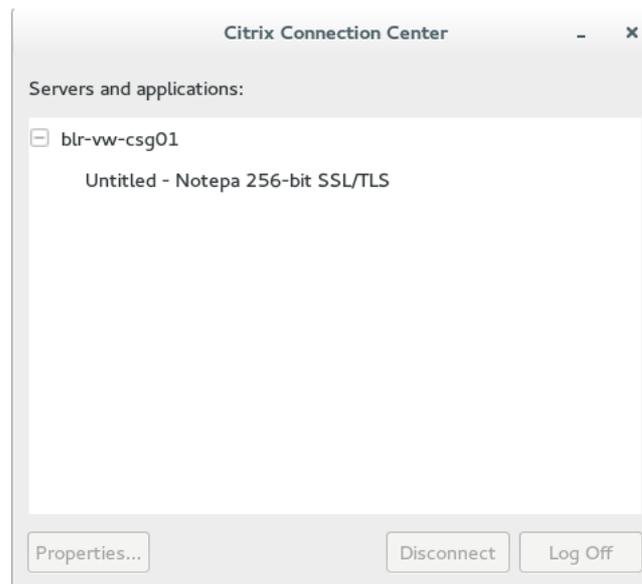


Figure 17. Citrix connection center

Delayed update settings

The **Delayed Update Settings** page enables you to set the delayed updates. By default, the update settings screen is available in Admin mode.

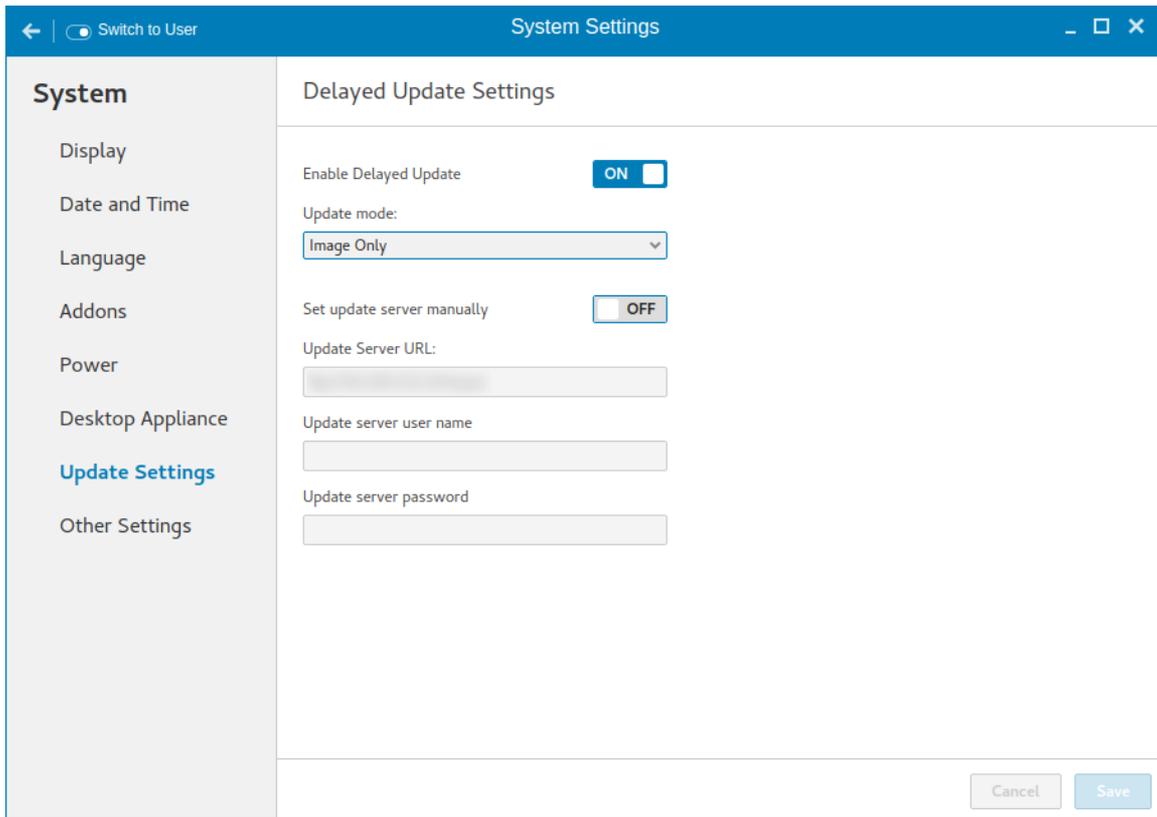


Figure 18. Delayed update settings

- 1 Click the **ON/OFF** button to enable or disable the **Delayed update**.
- 2 From the **Update Mode** drop-down list, select the **Image Only** option.

NOTE: Do not turn on the **Set update server manually** option. Other options such as **Update Server URL**, **Update server user name**, and **Update server password** are disabled.

- 3 Click **Save** to save the changes.

Other settings

The **Other Settings** page enables you to enter the host name of the thin client to add or delete the additional entries to the `/ect/hosts` file in the device.

Any changes made through **Other Settings** screen is saved and preserved over reboots for the built-in thinuser. The **Other Settings** screen is available only in admin mode.

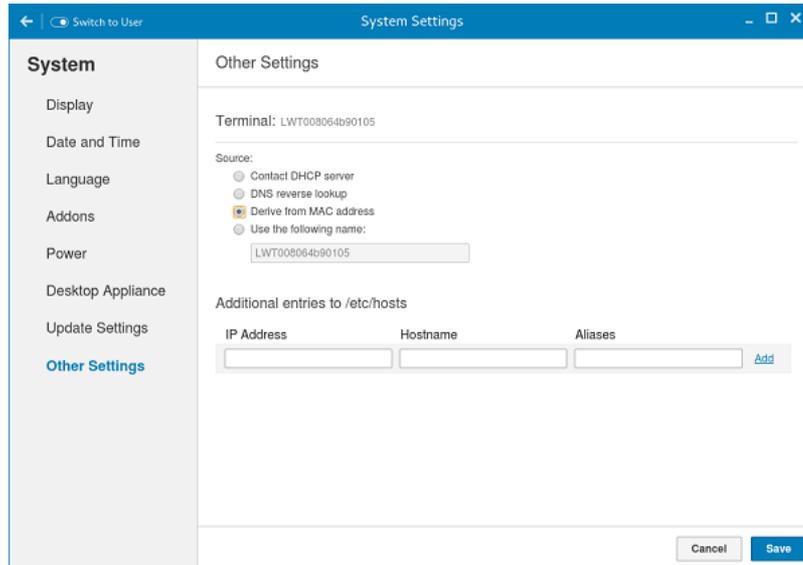


Figure 19. Other settings

- **Contact DHCP server:** If you set the host name of the thin client by selecting the DHCP server option, the host name is set to the standard **host-name** tag received from the DHCP server. If the DHCP server does not provide the **host-name** tag, then the device retains the previously set host name.
- **DNS reverse lookup:** . If you select **DNS reverse lookup** option to enter the host name of the thin client , a reverse DNS lookup operation is performed using thin clients existing IPv4 address of the thin client and the host name is then set to the received value.
 - ① **NOTE:** The previous host name is retained if the device cannot perform a successful reverse DNS look up operation due to reasons such as, network connection is not established, DNS servers are not established or are invalid, and the IP address is not included in the DNS server’s list.
- **Derive from MAC address:** Select the **Derive from MAC address** option to specify the thin clients **host name**. You can specify the thin clients host name by using the MAC address. The Ethernet of the thin client interfaces with the MAC address. It creates the thin clients host name by extracting the MAC address from its field separators, such as, (:) and the MAC address is prefixed with the string **LWT**. For example, a device with MAC address of **00:80:64:c1:8b:14** has MAC derived host name as **LWT008064c18b14**. Manually specify the device host name should be used with caution. If the manually named device is to be used as a seed device for Merlin image pulling. The changed host name is pushed to other devices resulting all devices end up with the same **host name**. Only through device **factory reset** can recover the default back by using MAC Address
- **Use the following name:** This option enables you to enter the preferred host name in the box provided. When you log in to the session, the screen displays the previous host name in the box and in the Terminal option.
 - ① **NOTE:** The host name entered is not authenticated, if the string entered has a white space. The first part of the string up to the first white space is used to set the host name of the devices. All white spaces at the beginning of the string are ignored and the maximum host name string size is 64.

You can set the device name by incorporating one of the following methods—The **Additional entries to /etc/hosts** option on the page is used to update the entries on the thin client’s **/etc/hosts** file. It allows you to add to the preset default data, and to update or delete the existing.

- 1 Enter the **IP address**, **host name** and **Aliases** in the box provided.
- 2 Click **Add** option at the right-end to update the default data.
- 3 Click **Save** to save the changes.

Peripherals

On the **System Settings** page, click the **Peripherals** icon. The following tabs are displayed on the left pane of the System Settings page.

- Keyboard
- Mouse
- Printers

Setting the keyboard preferences

The **Keyboard** setting page enables you to set the Keyboard preferences and make the Keyboard layout.

NOTE: By default, the Keyboard screen is available in both User mode and Admin mode. Any changes made through Keyboard preferences screen is saved and preserved over reboots for the built-in thinuser

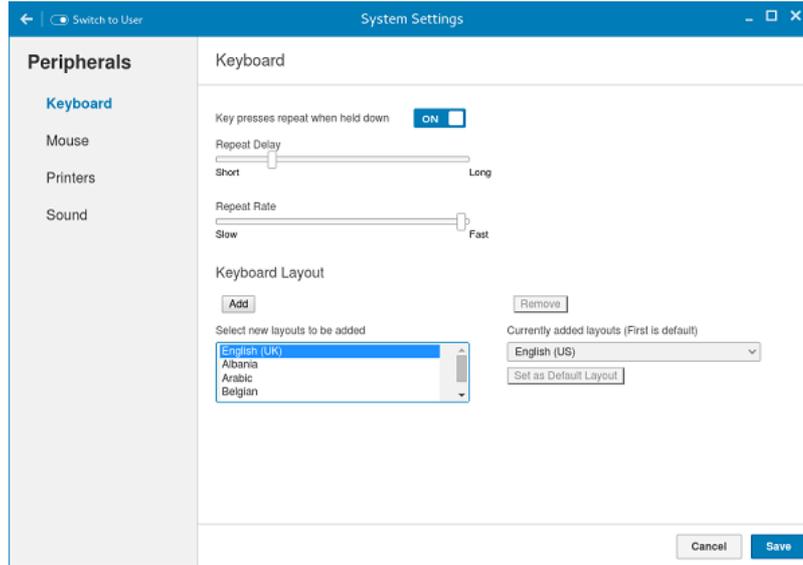


Figure 20. Keyboard preferences

- 1 Click the **ON/OFF** button to disable or enable the **Key presses repeat when held down** option after you log in to the session.
- 2 Move the slider to the left to decrease the repeated delay time of the pointer or move the slider to the right to increase the repeated delay time of the pointer.
- 3 Move the slider to the left to decrease the repeat rate of the pointer or move the slider to the right to increase the repeat rate of the pointer.
- 4 In the **keyboard layout** box, select the layout you want to use and click **Add** to include the preferred layout in the **currently added layouts** list.
- 5 Select the preferred keyboard layout from the currently added layouts list, and click **Set as Default Layout** button to set the default layout.

NOTE: The default keyboard layout is listed on the top of the currently added layout list.

- 6 Click **Save** to save your changes.

Setting the mouse preferences

By default, the **Mouse** screen is available in both User mode and Admin mode. Any changes made through the Mouse preferences screen is saved and preserved over reboots for the built-in thinuser.

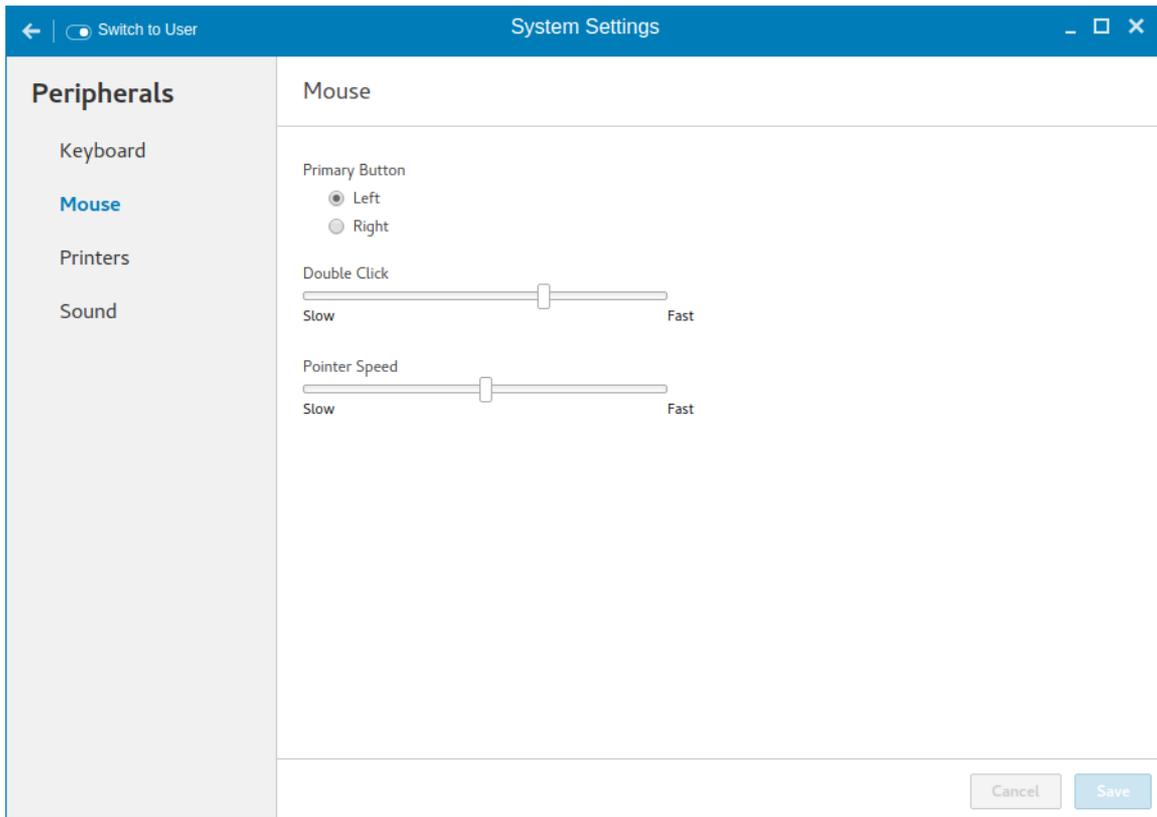


Figure 21. Mouse settings

The Mouse setting page enables you to set the Mouse preferences.

- 1 Click **Right** or **Left** to set the primary button of the mouse.
- 2 Move the slider to the left to increase the speed of the pointer when double-clicked or move the slider to the right to decrease the length of double-clicked.
- 3 Move the slider to the left to increase the speed of the mouse pointer or move the slider to the right to decrease the speed of the mouse pointer.
- 4 Click **Save** to save your changes.

Configuring the printer settings

By default, the **Printers** screen is available only in Admin mode.

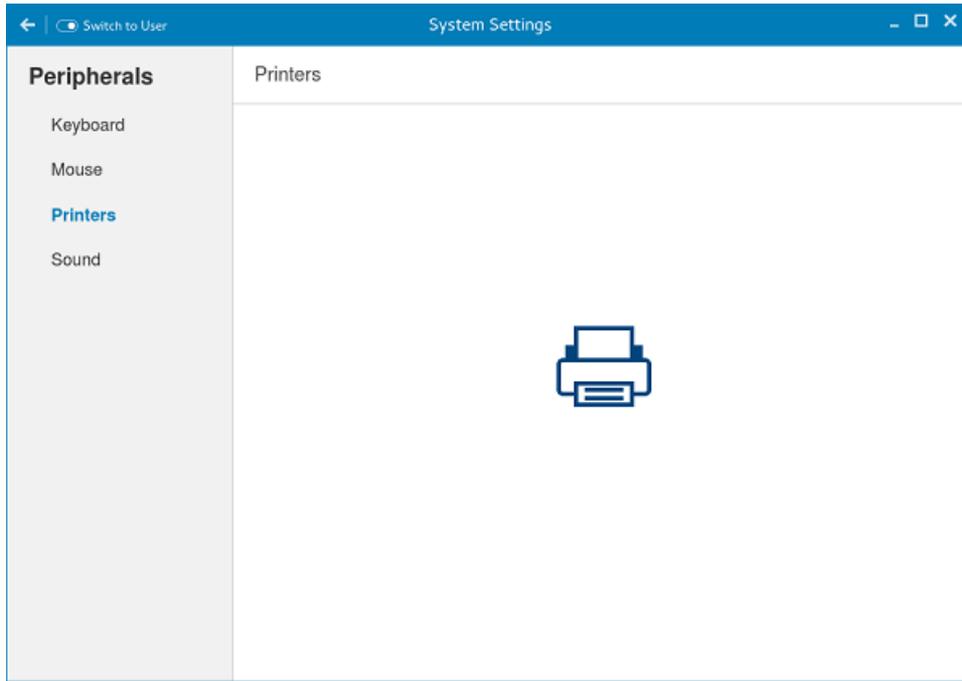


Figure 22. Printer settings

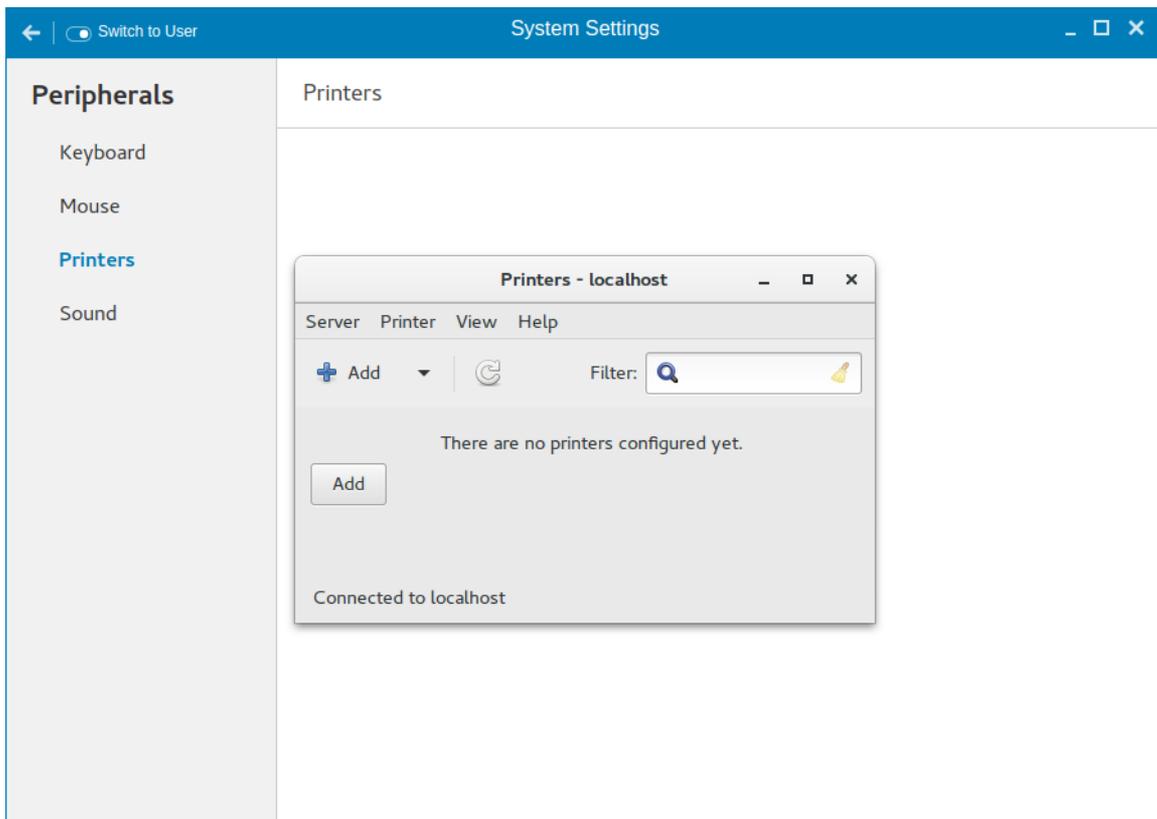


Figure 23. Printers - localhost

- 1 Click the printer icon.
The **Printers - localhost** dialog box is displayed.
- 2 Click the **Add** button to include a new printer.

The **New Printer** window is displayed. You can configure the printer type based on your preference.

NOTE: If a USB printer is connected, then it is displayed by default. The printer is not found if wrong address is provided or the USB is not attached.

- 3 Select a device type from the following options:
 - **LPT Port**—Select this option if your printer is attached to the thin client through an LPT port, and enter valid values.
 - **Serial Port**—Select this option if your printer is attached to the thin client through a serial port, and enter valid values.
 - **Enter URL**—Select this option to enter URL for a local printer, and enter valid values.
 - **Network Printer**—Select this option if you are using a network printer. Use any one of the options for configure your network printer:
 - **Windows Printer via SAMBA**
 - **Internet Printing Protocol (ipp)**
 - **LPD/LPR Host or Printer**
 - **Internet Printing Protocol (https)**
 - **Internet Printing Protocol (ipp14)**
 - **Internet Printing Protocol (ipp)**
 - **AppSocket/HP Jet Direct**

Enter valid values to search for your printer host on network.

- 4 After you configure the printer based on your preference, click **Forward**.
The thin client searches for the available printer drivers.
- 5 Select a printer driver, and click **Forward**. You can select the printer driver from database or search for a printer driver to download. You can also browse to the location where you have saved the PostScript Printer Description (PPD) files, and select the appropriate file.
- 6 Specify the **Printer Name**, **Description**, and **Location**.
- 7 Click **Apply**.
The printer is listed on the screen.

NOTE: You can click **Print Test Page** to test the printer.

- 8 Right-click the printer icon, and click **Properties**.
- 9 Configure the following tabs based on your printing preference:
 - **Settings**—Use this tab to configure the location, device URL, model, and printer state.
 - **Policies**—Use this tab to configure the printer state, error policy, operation policy, starting banner, and ending banner.
 - **Access Control**—Use this tab to set the printing privileges to users.
 - **Printer Options**—Use this tab to configure the general printer settings, such as media size.
 - **Job Options**—Use this tab to specify the default job options for the printer.
 - **Ink/Toner Levels**—Use this tab to view the marker levels and status messages of the printer.
- 10 Click **OK**.
The thin client is ready to print.

Configuring the sound settings for Wyse 3040 thin client

NOTE: This section is applicable to Wyse 3040 thin client.

By default, the sound screen is available in both User mode and Admin mode. Any changes made on the sound screen are saved and retained for the built-in user named **thinuser**.

To configure the sound settings:

- 1 Click the **Output** tab to configure the audio output settings.

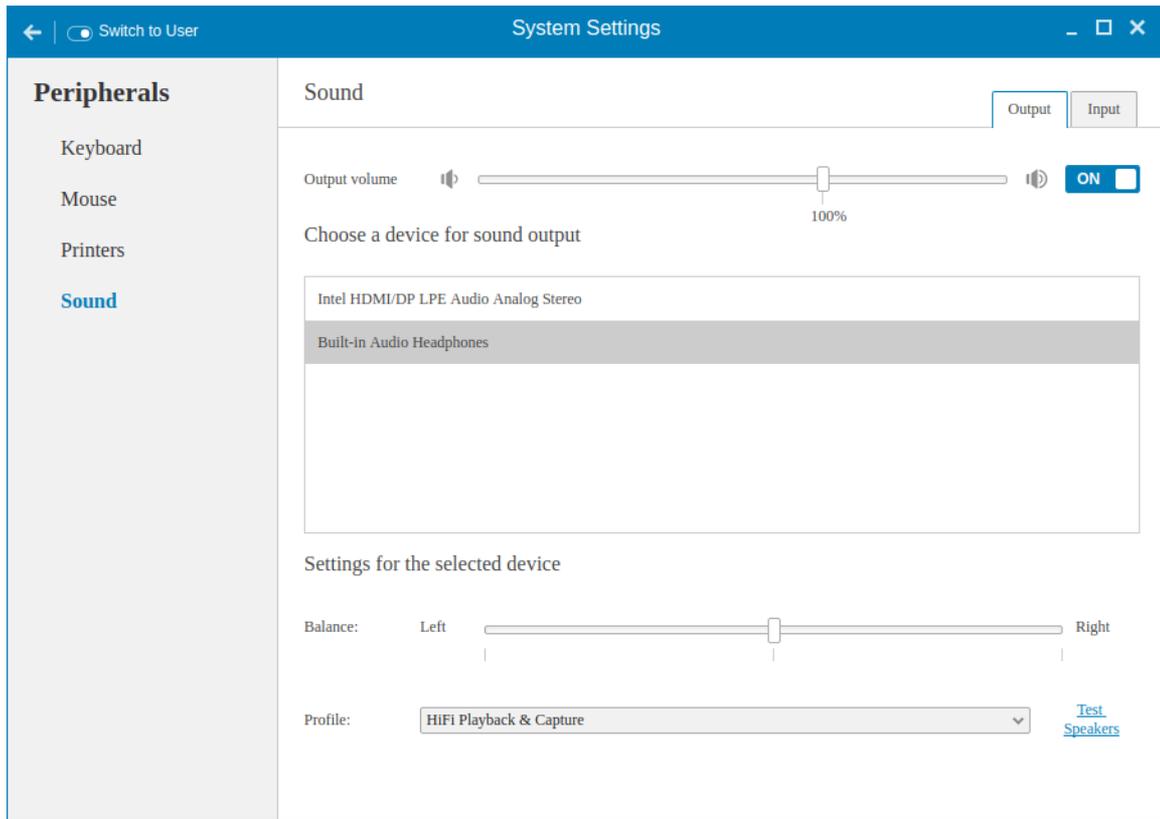


Figure 24. Sound output

- a Move the **Output volume** slider to adjust the output or speaker volume. Click the **ON/OFF** button to enable or disable the output volume.
 - b From the output devices list, select a device for sound output. The default audio output is the Analog Output.
 - c Based on the channels available for the selected output device and profile, move the **Balance** slider to adjust the sound balance.
 - d From the drop-down list, select an audio profile.
 - e Click **Test Speakers**. A dialog box is displayed. You can test the speaker by playing sample wave files.
- 2 Click the **Input** tab to configure the audio input settings.

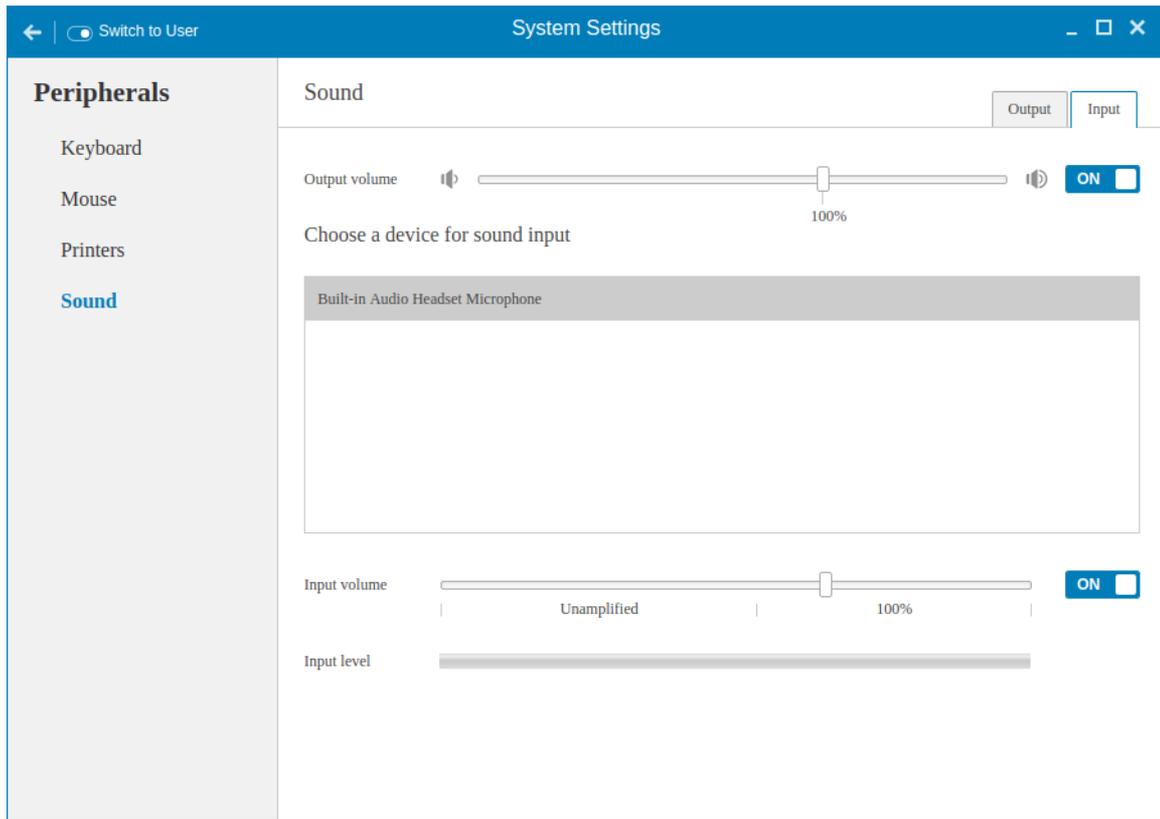


Figure 25. Sound input

- a Move the **Output volume** slider to adjust the output or speaker volume. Click the **ON/OFF** button to enable or disable the output volume.
- b From the input devices list, select a device for sound input. The default audio input is the Analog input.
- c Move the **Input Volume** slider to adjust the input or Mic volume. Click the **ON/OFF** button to enable or disable the input volume. The **Input level** bar displays the input volume peak level.

Configuring the sound settings on Wyse 5070 thin client

NOTE: This section is applicable to Wyse 5070 thin client.

By default, the sound screen is available in both user mode and admin mode. Any changes to the sound settings are saved and available for the built-in user named **thinuser**.

To configure the sound settings, do the following:

- 1 Move the **Output volume** slider to adjust the output or speaker volume. Click the **ON/OFF** button to enable or disable the output volume.
- 2 Click the **Output** tab, and do the following:

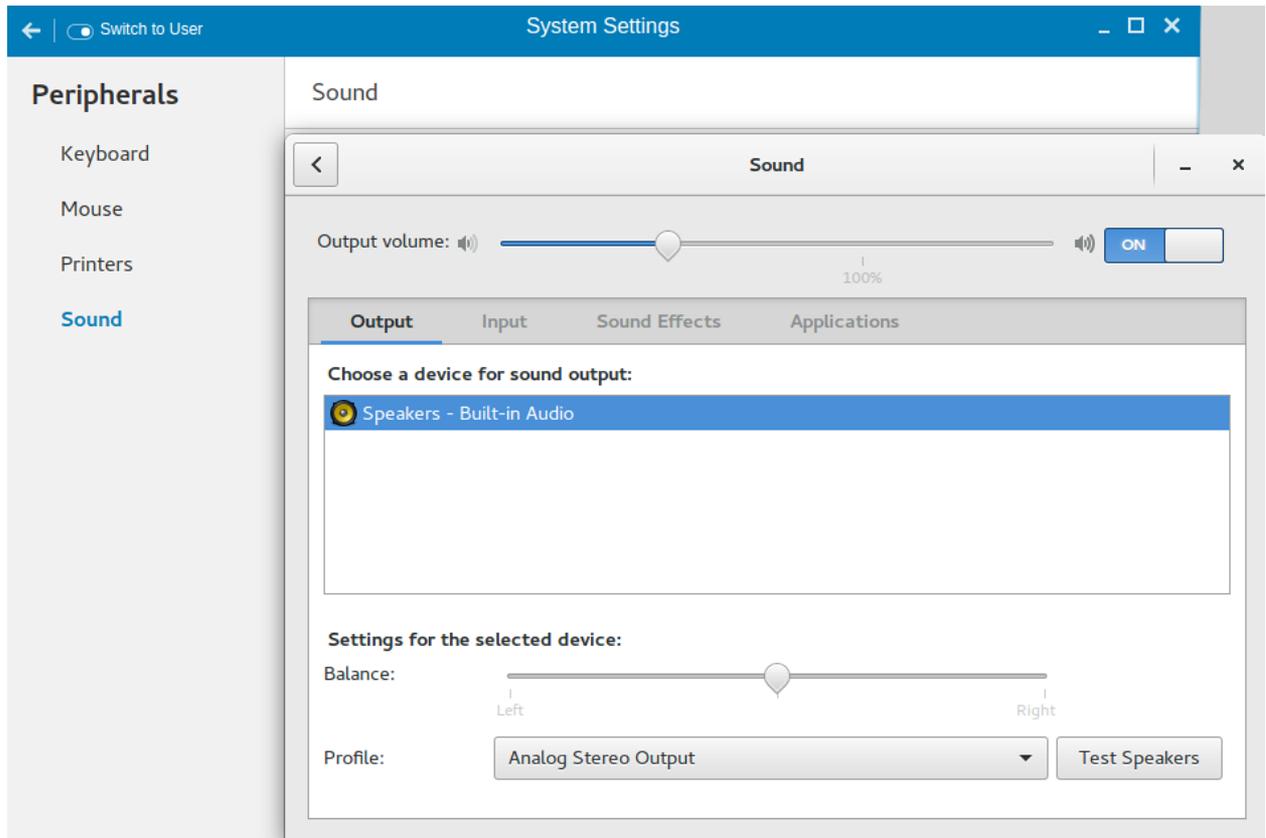


Figure 26. Sound output

- a From the output devices list, select a device for sound output. The default audio output is the Analog Output.
 - b Based on the channels available for the selected output device and profile, move the **Balance** slider to adjust the sound balance.
 - c From the drop-down list, select an audio profile.
 - d Click **Test Speakers**. A dialog box is displayed. You can test the speaker by playing sample wave files.
- 3 Click the **Input** tab, and do the following:

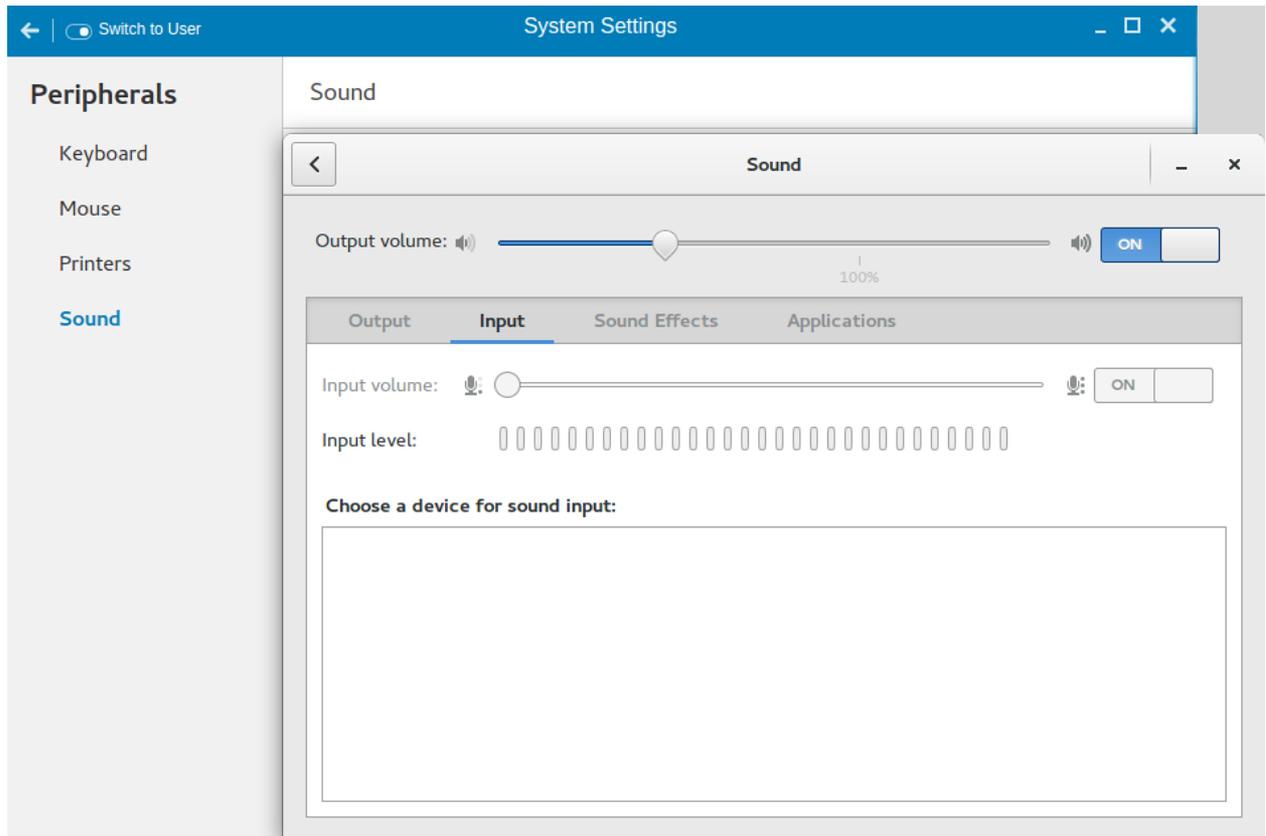


Figure 27. Sound input

- a From the input devices list, select a device for sound input. The default audio input is the Analog Input.
 - b Move the **Input Volume** slider to adjust the input or Mic volume. Click the **ON/OFF** button to enable or disable the input volume. The **Input level** bar displays the input volume peak level.
- 4 Click the **Sound Effects** tab, and do the following:

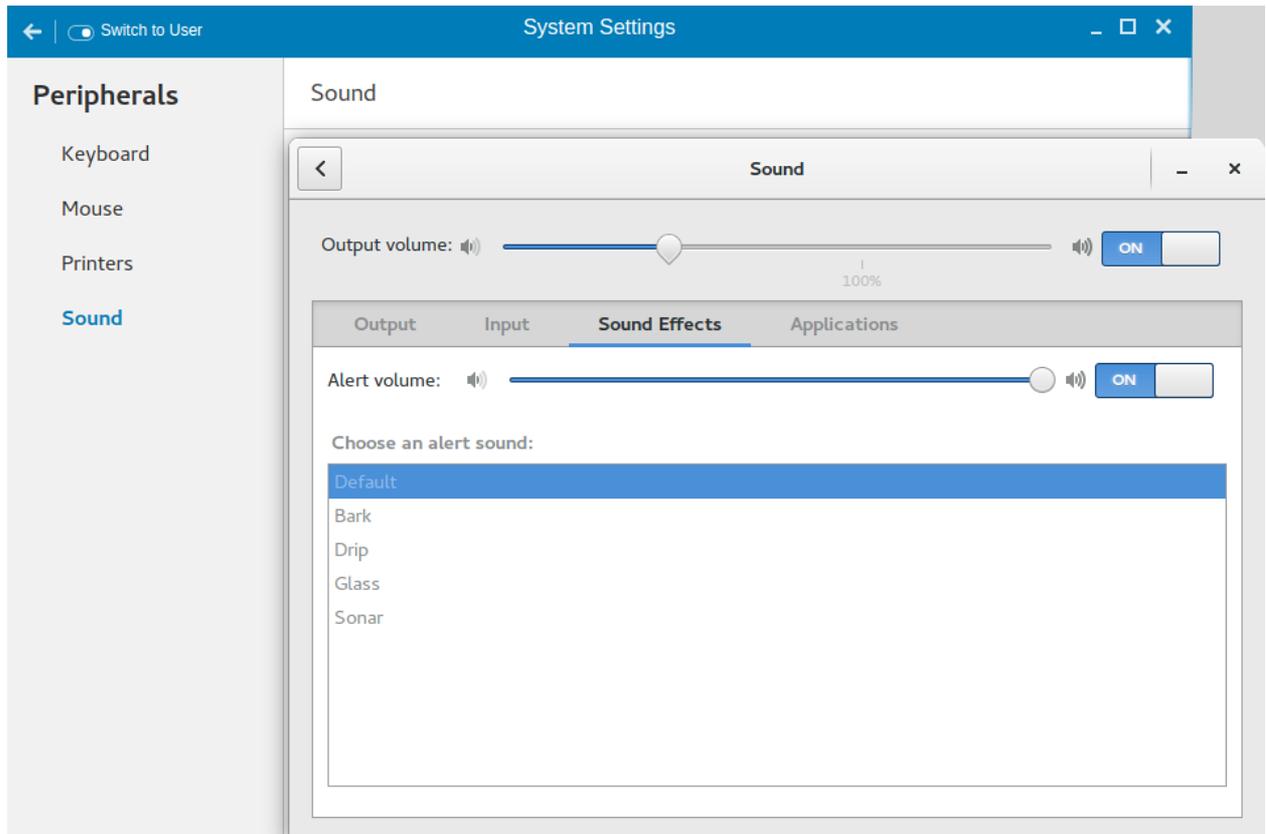


Figure 28. Sound effects

- a From the alert sound list, select an alert sound theme.
 - b Move the **Alert Volume** slider to adjust the volume level of alert sounds. Click the **ON/OFF** button to enable or disable the alert volume.
- 5 Click the **Applications** tab to view all the applications that are currently playing a sound file, or recording audio.

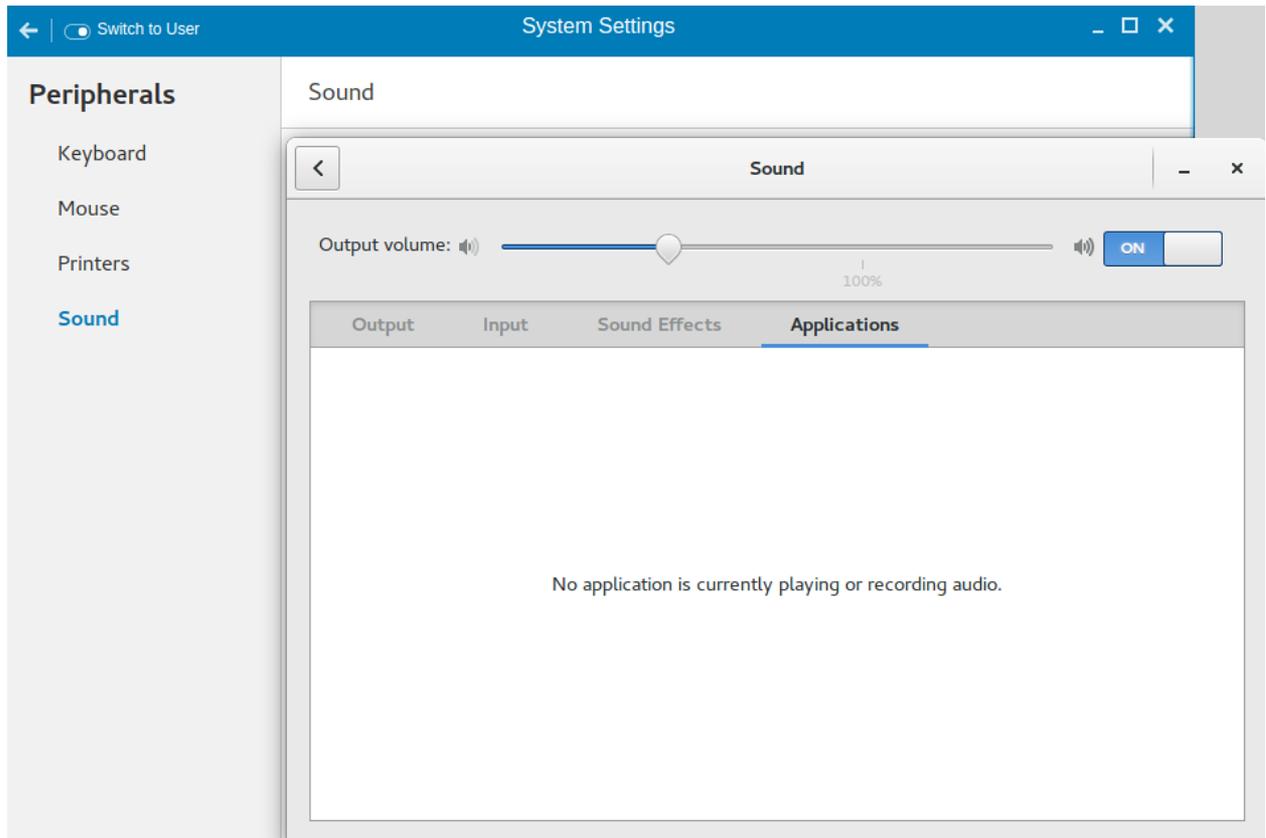


Figure 29. Applications

Network

On the **System Settings** page, click the **Network** tab to view the **Network Settings** page.

- 1 Click the **Network** icon.

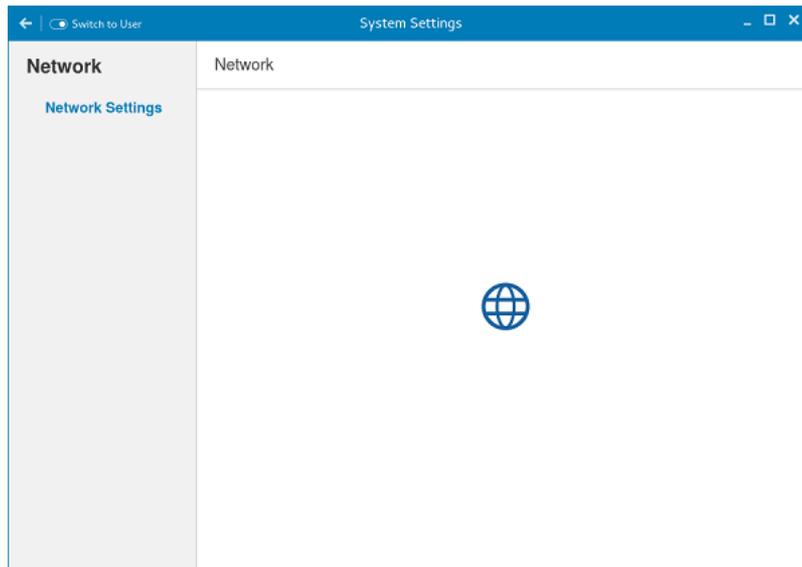


Figure 30. Network Settings

- 2 The **Network settings** page is displayed. In the left-pane, the following tabs are available for you to configure.
 - Wi-Fi
 - Wired
 - Network proxy

Configuring the wi-fi settings

To configure the Wi-Fi settings, perform the following steps:

- 1 In the left-pane, click **Wi-Fi** tab.
- 2 Click the **ON/OFF** button to enable or disable the Wi-Fi option. The list of wireless SSID is displayed if broadcast is enabled.

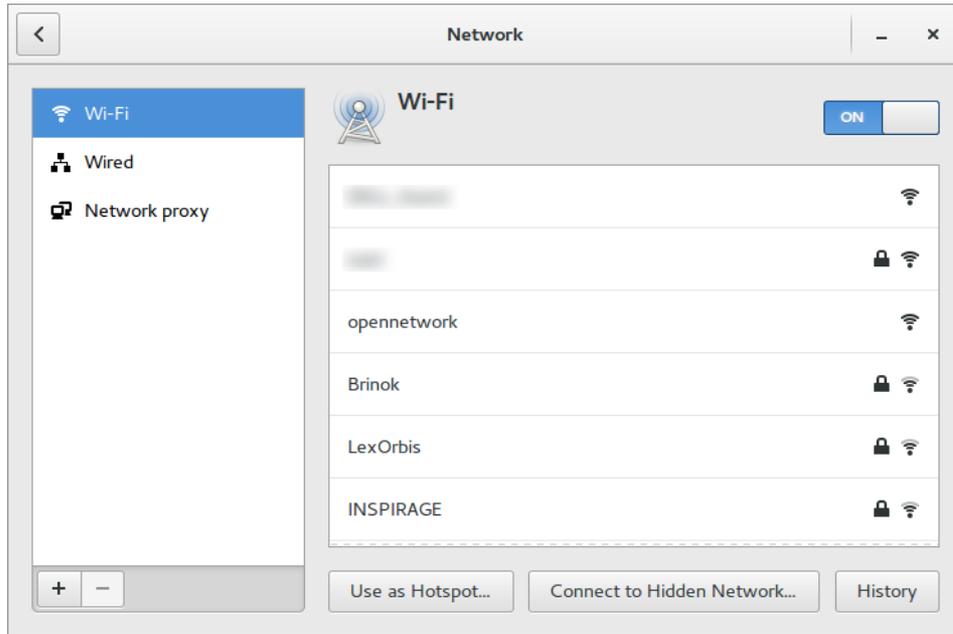


Figure 31. Wi-Fi settings

- 3 To connect to Wi-Fi connection, select the preferred wireless SSID from the list displayed.
- 4 Click the **Connect to Hidden Wi-Fi Network** button. The Connect to Hidden Wi-Fi Network window is displayed.



Figure 32. Hidden Wi-Fi network

- 5 Enter the name and security details of the hidden network that you want to connect to.

Table 4. Hidden network

Parameter	Description
Connection	From the drop-down list, select the type of connection.
Network name	Enter the preferred network name.
Wi-Fi security	From the drop-down list, select the security type.

- 6 On the **Network** page, click the **History** button to view the previous Wi-Fi connections and details.

Configuring wired network connection settings

To configure the wired connection settings, perform the following steps:

- 1 Click the **Wired** tab. The following attributes are displayed if the network cable is connected to your thin client and wired connection is established.
 - IP Address
 - Hardware Address
 - Default Route
 - DNS

 **NOTE: After the network is disconnected, only hardware address and last used information are displayed.**

- 2 On the lower-right corner of the page, click the **Settings** icon to configure the Wired Network connections.
 - a In the **Details** tab, the following attributes are displayed.
 - IP Address
 - Link Speed
 - Hardware Address
 - Default Route
 - DNS
- 3 Click the **Security** tab to configure the 802.1x security settings.
 - a Click the **ON** button to enable the 802.1x Security for your network connection.
 - b From the **Authentication** drop-down list, select the type of authentication you want to set for your network connection. The available options are:
 - TLS
 - Protected EAP (PEAP)

You must configure TLS and PEAP using the INI parameters only. Options that you configure using the INI parameters are populated on the UI screen. For more information about the usage of INI parameters, see Dell Wyse ThinLinux INI Reference Guide.

 **NOTE: You cannot configure the 802.1x authentication settings using the GUI options.**

- 4 Click the **Identity** tab and configure the following settings:

 **NOTE: Only Administrators are allowed to authenticate these settings by entering the admin password in the root privilege authentication dialog box after a particular setting is changed or configured.**

- a **Name**—Specifies the default name of the wired connection. If you want to set your preferred name for the connection, enter the name and then click **Apply**.
 - b **MAC Address**—Specifies the MAC address of the network connection.
 - c **Cloned Address**—Specifies the IP address that is cloned by the router.
 - d **Maximum transmission unit (MTU)**—Specifies the size (in bytes) of the largest protocol data unit that the protocol layer can pass onwards.
 - e **Firewall Zone**—Specifies the security level of the connection.
 - f **Connect automatically**— Select this check box to automatically connect to the network after you plug-in the network wire.
 - g **Make available to other users**— Select this check box if you want to allow other users to configure these settings.
- 5 Click the **IPv4** tab and do the following:
 - a Enable the **IPv4** button to configure the IPv4 settings.
 - b From the **Addresses** drop-down menu, select the type of IPv4 configuration. The available options are:
 - Automatic (DHCP)
 - Manual

- Link-Local Only
- c If **Automatic (DHCP)** option is selected, you must configure the following options.

Table 5. Automatic (DHCP)

Parameter	Description
DNS	Enable the Automatic button, if you want the thin client to automatically fetch the DNS Server.
Server	Specifies the IP address of the DNS Server. Click the + icon to add a new DNS server to the list.
Routes	Enable the Automatic button to turn on the automatic IPv4 routing.
Address	Specifies the Router IP address.
Netmask	Specifies the Netmask. Netmask is used to divide an IP address into subnets and specify the network's available hosts.
Gateway	Specifies the IP address of the default Gateway.
Metric	Specifies the Metric value for the network connection.
Use this connection only for resources on its network	Select this check box, if you want to allow the wired connection only for resources on its network.

- d If **Manual option** is selected, you must specify the IP address, Netmask IP and Gateway IP along with the parameters mentioned in the Automatic (DHCP) table.
- e If **Link-Local Only** option is selected, the DNS and Routes options are disabled. This is applicable only for communications within the host link or the host domain.
- 6 Click the **IPv6** tab and do the following:
- a Enable the **IPv6** button to configure the IPv6 settings.
 - b From the **Addresses** drop-down menu, select the type of IPv6 configuration. The available options are:
 - Automatic
 - Automatic, DHCP only
 - Manual
 - Link-Local Only

The IPv6 configuration is similar to configuring the IPv4 Settings. For IPv4 configuration, see the IPv4 settings in this section.

- 7 Click the **Reset** tab and do the following:
- a Click **Reset** to reset the settings for your network connection, including passwords. However, the previous network is displayed as a preferred network.
 - b Click **Forget** to remove all details relating to this network that you do not want to automatically connect to.
- 8 Click **Apply** to save your configured settings.

NOTE: Click the **Add Profile** tab to add a new network profile. On the right pane, you must configure the following options:

- Security
- Identity
- IPv4
- IPv6

The configuration of all these tabs are similar to **Wired Network connections configurations** described in this section.

Configuring the network proxy settings

To configure the Network proxy settings, complete the following task:

- 1 Click the **Network proxy** tab.
- 2 From the Proxy drop-down menu, select the type of Proxy method you want to deploy. The available Proxy methods are:
 - None
 - Manual
 - Automatic
- 3 If **Manual proxy** method is selected, you must configure the following options:
 - a Enter the **HTTP Proxy** port details for your network connection.
 - b Enter the **HTTPS Proxy** port details for your network connection.
 - c Enter the **FTP Proxy** port details for your network connection.
 - d Enter the **SOCKS host** port details for your network connection.
 - e Use the **Ignore Hosts** option to set up proxy to ignore all local addresses.
- 4 If **Automatic proxy** method is selected, you must type the configuration URL address in the field.

NOTE: Web Proxy Autodiscovery is used when a Configuration URL is not provided. Dell does not recommend this option for untrusted public networks.

Adding a network connection

NOTE: Adding additional wired Ethernet connections is allowed but the added interface is not used in any of the ThinLinux features.

To add a new network connection, complete the following tasks:

- 1 On the lower-left corner of the page, click the **+** icon.
The **Add Network Connection** dialog box is displayed. The following options are listed for you to configure.
 - VPN
 - Bond
 - Team
 - Bridge
 - VLAN
- 2 Click **VPN** to add a VPN network connection. You must import a file from the stored location to configure the VPN settings.
- 3 Click **Bond** to add and configure the Bond network connection for your thin client.
 - a Click the **General tab**, and configure the following options:
 - Select any of the following check boxes based on your requirement:
 - Automatically connect to this network when it is available.
 - All users may connect to this network.
 - Automatically connect to VPN when using this connection.
 - From the drop-down menu, select the firewall zone.
 - b Click the **Bond** tab, and configure the following options:
 - 1 Type a name for your network interface.
 - 2 The number of bonded connections that are set up are listed here. To add a new bond connection, click the **Add** button and select the type of connection you want to create. The available options are Ethernet, InfiniBand, Bond, Bridge, Team, and VLAN.
 - 3 Select the type of Network Mode from the drop-down list. The available options are:

- Round-robin
 - Active Backup
 - XOR
 - Broadcast
 - 802.3ad
 - Adaptive transmit load balancing
 - Adaptive load balancing
- 4 **Link Monitoring** — Select the type of link monitoring from the drop-down list. The available options are:
- MII (recommended)
 - ARP
- 5 Enter the time in ms for the link up delay duration.
- 6 Enter the time in ms for the link down delay duration.
- c Click the **IPv4 Settings** tab, and do the following:
- 1 From the drop-down list select the following method for IPv4 authentication.
 - If **Automatic (DHCP)** method is selected, you must configure the following options:
 - 1 Additional DNS Servers — Type the IP addresses of domain name users that are used to resolve host names. Use commas to separate multiple domain name server addresses.
 - 2 Additional Search Domains — Type the IP addresses of domains used when resolving host names. Use commas to separate multiple domains.
 - 3 DHCP client ID — Enter the ID for the DHCP client. This client identifier allows the network administrator to customize your computer's configuration.
 - 4 Require IPv4 addressing for this connection to complete — The IPv4 address is required to complete the connection. If the IPv4 address is not available, then the connection is not configured.
 - 5 Click the **Routes** button to edit IPv4 routes for Bond connection.
 - a Click **Add** to add an IP address. After an IP is added, Netmask, Gateway and Metric specific to that IP are displayed.
 - b Select the check box if you want to ignore the automatically obtained routes.
 - c Select this check box if you want to use your connection only for resources on that particular network.
 - If **Automatic (DHCP) addresses only** method is selected, you must configure the following options:
 - 1 DNS Servers — Type the IP addresses of domain name users that are used to resolve host names. Use commas to separate multiple domain name server addresses.
 - 2 Search domains — Type the IP addresses of domains that are used when resolving host names. Use commas to separate multiple domains.
 - 3 DHCP client ID — Enter the ID for the DHCP client. This client identifier allows you to customize your computer's configuration.

 **NOTE: The other settings remain same as described in automatic (DHCP) method for IPv4 authentication.**

- If **Manual** method is selected, you must configure the following options:
 - 1 Click **Add** to add an IP address. After an IP is added, Netmask, Gateway specific to that IP are displayed.
 - 2 DNS Servers — Type the IP addresses of domain name users that are used to resolve host names. Use commas to separate multiple domain name server addresses.
 - 3 Search domains — Type the IP addresses of domains used when resolving host names. Use commas to separate multiple domains.

 **NOTE: The DHCP client ID option and Ignore automatically obtained routes check boxes are disabled.**
The other settings remains the same as described in automatic (DHCP) method for IPv4 authentication.

- If **Link-Local Only** method is selected, the DNS Servers, Search domains, DHCP client ID, and Routes options are disabled. You can select the **Require IPv4 addressing for this connection to complete** check box to allow the connection to complete. The IPv4 address is required to complete the connection. If the IPv4 address is not available, then the connection is not configured.
 - If **Shared to other computers** method is selected, the DNS Servers, Search domains, DHCP client ID, and Routes options are disabled. You can select the **Require IPv4 addressing for this connection to complete** check box to allow the connection to complete. The IPv4 address is required to complete the connection. If the IPv4 address is not available, then the connection is not configured.
 - If **Disabled** option is selected, IPv4 is not available for this connection.
- d Click the **IPv6 Settings** tab. From the drop-down list, select the following method type for IPv4 authentication. The available options are:
- Ignore
 - Automatic
 - Automatic, addresses only
 - Manual
 - Link-Local Only

 **NOTE:** The settings are same as configuring the IPv4 settings tab described in this section.

- 4 Click **Team** to add and configure the team network connection for your thin client.
- a Click the **Team** tab, and configure the following options:
 - 1 Interface name—Type the name of your network interface.
 - 2 MTU—Specifies the size (in bytes) of the largest protocol data unit that the protocol layer can pass onwards.
 - 3 Teamed connections—Lists the number of team connections that are configured. To add a new team connection, click **Add** and select the type of connection you want to create. The available options are Ethernet, Bond, Bridge, Team, and VLAN.
 - 4 JSON config— If you have already added a new team connection, you can enter a custom JSON configuration string in the text box or import a configuration file.
 - b To configure the **General** tab, **IPv4 Settings** tab, and **IPv6 Settings** tab for team connection, see the configuration details for Bond connection in this section.
- 5 Click **Bridge** to add and configure the bridge network connection for your thin client.
- a Click the **Bridge** tab, and configure the following options:
 - 1 Interface name — Type the name for your network interface.
 - 2 Bridged connections — The number of bonded connections that are set up are listed here. To add a new bond connection, click the Add button and select the type of connection you want to create. The available options are Ethernet, Wi-Fi, and VLAN.
 - 3 Aging time — Enter the Aging time duration in seconds.
 - 4 Enable IGMP snooping—Select this check box to monitor Internet Group Management Protocol (IGMP) communications among devices.
 - 5 Enable STP — Select this check box to enable the Spanning Tree Protocol (STP) for your connection.
 - 6 Priority — Enter the priority value.
 - 7 Forward delay — Enter the forward delay duration in seconds.
 - 8 Hello time — Enter the hello time duration in seconds.
 - 9 Max age — Enter the value for the maximum age.
 - b To configure the **General** tab, **IPv4 Settings** tab, and **IPv6 Settings** tab for Bridge connection, see the configuration details for Bond connection in this section.
- 6 Click **VLAN** to add and configure the VLAN network connection for your thin client.
- a Click the **VLAN** tab, and configure the following options:
 - 1 Parent interface — Type the name for your parent interface.
 - 2 VLAN ID — Enter the value for the VLAN id.
 - 3 VLAN interface name — Type the name for your VLAN interface.

- 4 Cloned MAC address — Type the cloned MAC address.
 - 5 MTU —Specifies the size (in bytes) of the largest protocol data unit that the protocol layer can pass onwards.
 - 6 Flags—Select the Reorder headers, Generic VLAN Registration Protocol (GVRP), Loose binding, and Multiple VLAN Registration Protocol (MVRP) check boxes to enable the respective functions for your VLAN connection.
- b To configure the **General** tab, **IPv4 Settings** tab, and **IPv6 Settings** tab for VLAN connection, see the configuration details for Bond connection in this section.
- 7 Click **Save** to save your settings.


802.1x configuration

To configure the network connections:

NOTE: Currently, 802.1x configuration by using the Enable802 INI parameter is supported only for Wired connections and supported authentications are EAP-PEAP (MSCHAPv2) and EAP-TLS using SCEP.

- Supported seamless 802.1x authentication works with Linux thin clients by using Active Directory domain user credentials for EAP-MSCHAPv2 authentication, see [EAP PEAP MSCHAPv2 Authentication Workflow](#).
- EAP-TLS is certificate-based authentication which uses SCEP for certificate enrollment, see [EAP TLS Authentication Workflow](#).

The following diagram depicts communication between the components in an 802.1x Linux thin client solution.

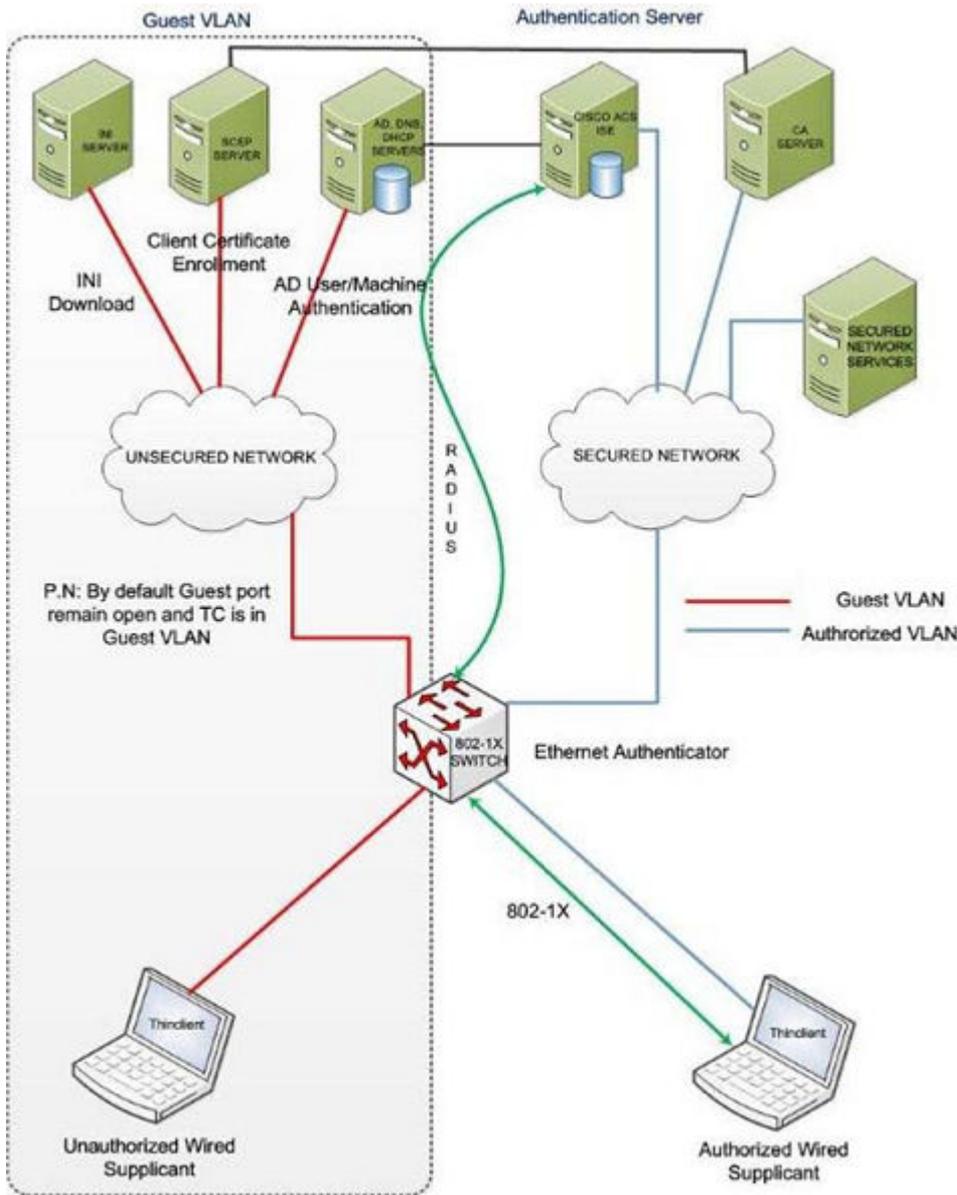

NOTE: EAP-TLS security requires client side and server side certificates for mutual authentication. Every user and client, including the authentication server that participates in EAP-TLS, must have at least the following two certificates:

- Client certificate signed by the certificate authority (CA).
- Copy of the CA root certificate.

IMPORTANT: Dell recommends you to set INI values for all the 802.1x parameters because these parameters are part of the persistent registry which will remain across the reboot and if any parameter is not set, it will take the previously set value, which may show inconsistent behaviors.

EAP-PEAP MSCHAPv2 authentication workflow

When a Linux thin client is initially connected to the network, the thin client obtains Guest VLAN resources by default, that is TC should be able to reach INI server to fetch the INI configurations required for 802.1x configuration.

Pre-requisites for EAP-PEAP (MSCHAPv2) 802.1x authentication:

- Make sure that the INI file has the configurations for 802.1x, Active Directory server, and Domain and Import certs. If you are pushing a CA certificate by using the Dell Wyse Device Manager (WDM), the Imports Certs INI is not required, but you must be sure that the CA certificate name is correct in the 802.1x INI parameter. For more information, see *Dell Wyse ThinLinux INI Guide*.
- If you are using CA certificate for 802.1x authentication, then use the ImportCerts INI parameter to import CA certificates into the device. Ignoring CA certificate is considered as the default option, if the CA certificate name is not included in the 802-1x INI configuration.
- Domain List INI parameter is required to display the available domains on the GDM login screen.

EAP-PEAP (MSCHAPv2) 802.1x authentication can be configured in two different modes:

- User Authentication
- Machine Authentication

EAP-PEAP MSCHAPv2 user authentication

To authenticate 802.1x by using an Active Directory username account:

- 1 Turn on your thin client device.
After the INI is downloaded to the thin client, you can access the domain that is configured in the INI from the domain drop-down list on the GDM Login screen.
- 2 On the GDM login screen, select the domain, and then enter the user domain credentials.
- 3 Click **Log in**.
The 802-1 authentication automatically starts.

NOTE: The GDM Authentication module performs the Network Manager configuration required for 802.1x PEAP (MSCHAPv2) authentication by using the credentials entered and 802.1x configurations from INI. Then, it reinitializes the network to do a direct 802.1x authentication with the switch.

- If **log in** is successful, then the thin client gets IP address from the protected VLAN and you can start the local thin client session (GNOME session). You can also start RDP, ICA, PCOIP sessions using the same domain credentials provided in the GDM login. These credentials will be preexisting in the connection manager, and you need not reenter the same again.

NOTE:

- If you set `Is802DirectEnabled=yes`, the direct authentication is enabled which will trigger the 802.1x authentication from the GDM login screen. In this case the `ActiveDirectoryServer` parameter is not required.
- If you set `Is802DirectEnabled=no`, the 802.1x authentication is triggered after the user logs in to the thin client. In this case you need to include the `ActiveDirectoryServer` parameter in the INI.

- If **log in** is unsuccessful, the 802.1x authentication fails and the thin client remains in the Guest VLAN.

- 4 When you log out or restart the device, thin client will again move to Guest VLAN by sending an EAPOL logoff to switch and disabling the 802.1x configuration at Network Connections applet.

The following is an example of the INI configuration for EAP-PEAP (MSCHAPv2) 802.1x User authentication.

For AD and Domain settings

```
DomainList=npac.local DisableDomain=no
```

For Imports Certificates

```
ImportCerts=no
```

For **802.1x Configuration**

```
Enable802=yes Authentication=PEAP InnerAuthentication=MSCHAPv2 PromptPassword=no AuthMode=User  
Is802DirectEnabled=yes CACertificate=SCEP PeapVersion=Auto
```

EAP-PEAP MSCHAPv2 machine authentication

To enable EAP-PEAP (MSCHAPv2) machine authentication:

- Your machine must have an account created in the Active Directory database with Hostname as the username field.
- Set the same password for all machine/host name accounts to be created.
- The INI parameter should contain a **MachinePassword** Field that can be used for authentication.

To authenticate 802.1x using Machine name (Host name):

- 1 Turn on your thin client device.

Once the INI is downloaded to the thin client and all the 802.1x parameters for machine PEAP authentication are retrieved from the INI server, the authentication starts in the background.

The Authentication module performs the Network Manager configuration required for 802.1x PEAP MSCHAPv2 authentication by using the host name and password from INI and 802.1x configurations from INI.

- If 802.1x authentication is successful, then thin client gets IP Address from protected VLAN.
 - If 802.1x authentication fails due to any wrong 802.1x configuration, then thin client remains in the Guest VLAN.
- 2 When you restart your thin client, the device moves to Guest VLAN by sending an EAPOL logoff to switch and disabling the 802.1x configuration at Network Connections applet.

The following is an example of the INI configuration for EAP-PEAP (MSCHAPv2) 802.1x machine authentication:

For **AD and Domain settings**

```
DomainList=npac.local DisableDomain=no
```

For **Imports Certificates**

```
ImportCerts=yes Certs=npac-ca-cert.cer
```

For **802.1x Configuration**

```
Enable802=yes Authentication=PEAP InnerAuthentication=MSCHAPv2 PeapVersion=Auto  
PromptPassword=no CACertificate=npac-ca-cert.cer Authmode=Machine MachinePassword=tangocharlie
```

EAP TLS authentication workflow

When a Linux thin client is initially connected to the network, it should be able to obtain the Guest VLAN resources by default. It should be able to reach AD, DNS, SCEP and the INI server to fetch the INI configurations required for Active Directory Domain User Authentication, 802.1x, SCEP, and so on.

EAP-TLS 802.1x authentication can be configured in INI in two different modes:

- Machine Authentication.
- User Authentication.

EAP TLS – Machine authentication

The following steps are involved with 802.1x authentication:

- When the thin client restarts, it remains in the Guest VLAN and downloads the INI configuration from the INI server.

- The INI file must have the configurations for 802.1x EAP-TLS with AuthMode set for Machine Authentication and SCEP.
- After the INI is downloaded to the thin client, SCEP client enrolls the client certificate with Machine hostname and Domain configured in the INI.
- 802.1x EAP-TLS machine authentication will then begin and the thin client will move to an Authorized VLAN

NOTE:

You can view the network progress icon on the taskbar.

- If 802.1x authentication fails due to any wrong 802.1x configuration, the thin client will automatically fall back to the Guest VLAN, with a notification message **Failed to connect to trusted network. Please contact your system administrator**, in the right pane of the GNOME panel. The user receives the same notification in the case of an expired CA certificate.
- When a user restarts the device, the thin client will again move to the Guest VLAN by sending an EAPOL logoff to switch and disable the 802.1x configuration at the Network Connections applet.

This is an example of the INI configuration for 802.1x TLS Machine authentication.

```
Enable802=yes Authentication=TLS PromptPassword=no CACertificate=scep UserCertificate=scep
PrivateKey=scep PrivateKeyPassword=ZG90MXg= AuthMode=Machine
```

EAP TLS User authentication

To authenticate 802.1x:

- 1 Turn on your thin client device.
When the thin client restarts, the thin client remains in the Guest VLAN and downloads the ini configuration from the INI server.
- 2 After the INI is downloaded to the thin client, you can access the domain that is configured in the INI from the domain drop-down list on the GDM Login screen.
- 3 On the GDM login screen, select the domain, and then enter the user domain credentials.
Domain User authentication is performed against the AD server mentioned in the INI configuration.
- 4 Click **Log in**.
 - If domain user login is successful, then the user certificate will be enrolled via SCEP, and 802.1x authentication will begin and you can see the network progress icon on the taskbar and the thin client will move to Authorized VLAN.
 - If 802.1x authentication fails due to any wrong 802.1x configuration or if the CA certificate has expired, the thin client will automatically fall back to Guest VLAN, and a notification message **Failed to connect to trusted network. Please contact your system administrator** is displayed in the right corner of GNOME panel.
 - When you log out or restart the thin client, the thin client as suggested above to Guest VLAN by sending an EAPOL logoff to switch and disabling the 802.1x configuration at the Network Connections applet.

This is an example of the INI configuration for 802.1x TLS User authentication.

```
Enable802=yes Authentication=TLS PromptPassword=no CACertificate=scep UserCertificate=scep
PrivateKey=scep PrivateKeyPassword=ZG90MXg= AuthMode=User
```

Personalization

You can customize your desktop settings such as color, background in addition to enable various option that helps to improve the look and feel of the screen. Some of the important parameters such as display settings, audio settings, typing settings and pointer settings can be personalized.

On the **System Settings** page, click **Personalization** icon. The following tabs are listed on the left pane of the **System Settings** page.

- Desktop Wallpaper
- Universal Access
- OEM Branding

Setting the desktop wallpaper

Click the **Desktop Wallpaper** tab.

 **NOTE:** You can add wallpapers using USB drive.

Configuring universal access

The Universal Access page allows you to configure the display settings, audio settings, typing settings and pointer settings. The **Universal Access Menu** allows you to improve the look and feel of the desktop.

- 1 Click the desktop icon on the **Universal access** page.
- 2 Click the **ON/OFF** button to enable or disable the option. If enabled, the Universal Access menu can be viewed always.
- 3 Configure the following options:
 - Seeing
 - Hearing
 - Typing
 - Pointing and Clicking

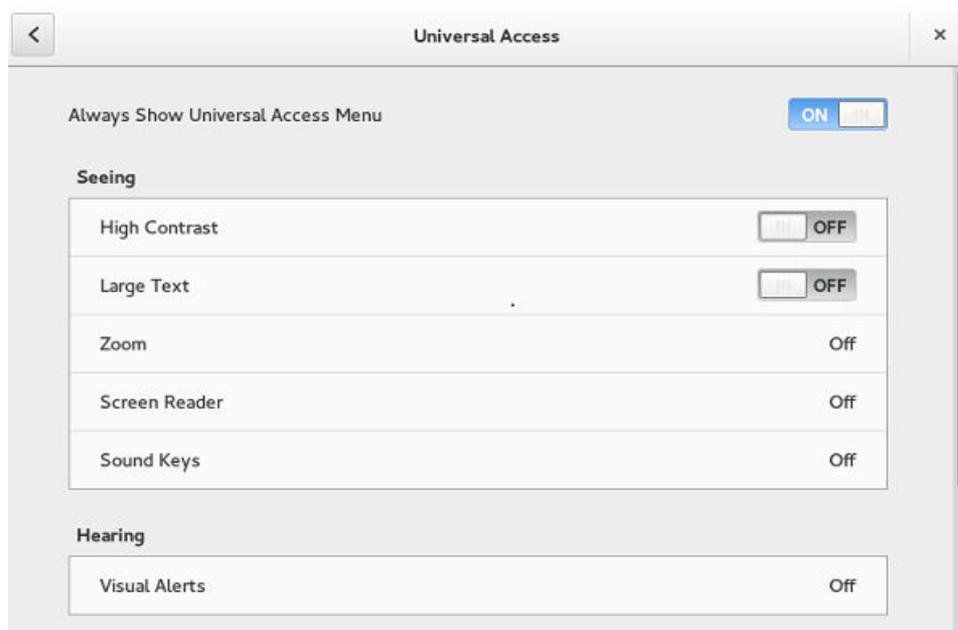


Figure 33. Universal access

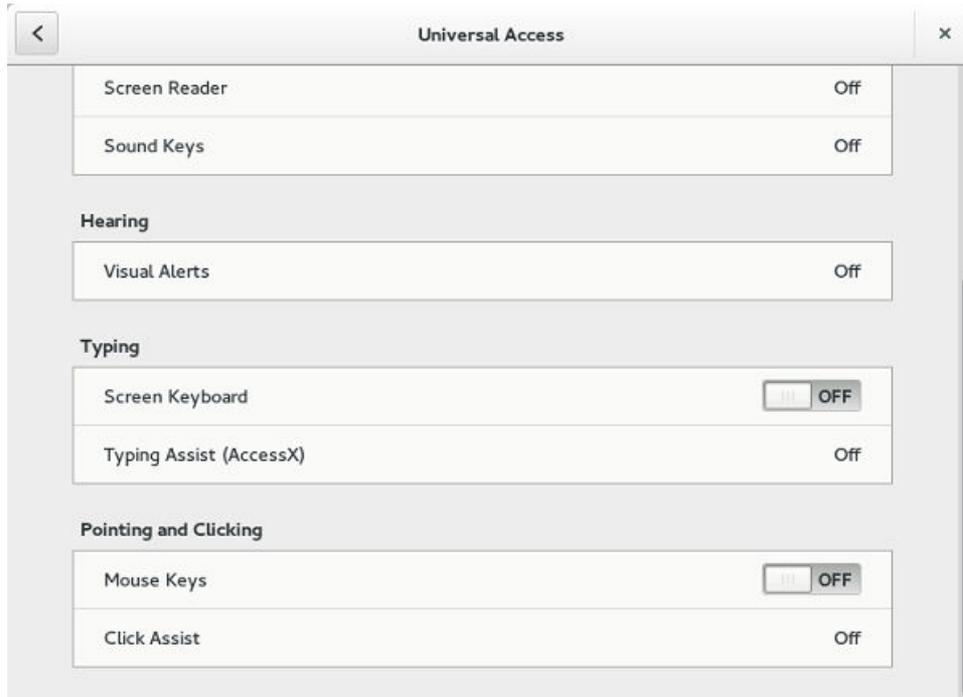


Figure 34. Universal access

Seeing

The **Seeing** tab enables you to configure the display settings.

- 1 Click the **ON/OFF** button to enable or disable the High contrast option. If enabled, the contrast is increased and you can see the difference instantly.
- 2 Click the **ON/OFF** button to enable or disable the Large text option. If enabled, the text size is increased and you can see the difference instantly.
- 3 Click the **ON/OFF** button to enable or disable the zoom option. If enabled, the screen is zoomed in and you can control the screen by using the mouse.
 - a Click the **Magnifier** tab to configure the following settings:

Table 6. Magnifier

Parameter	Description
Magnification	Click + to increase the magnification value and click — to decrease the magnification value.
Magnifier Position	Select the Magnifier Position. <ul style="list-style-type: none"> • If you select Follow mouse cursor, the other option is disabled. • If you select Screen part, select the screen resolution from the drop-down list.

- b Click **Crosshairs** tab to configure the following settings:
 - Move the slider to the right to increase the **Thickness** and **Length** of the crosshairs.
 - Click the **Color** tab, and select the preferred color.
- c Click **Color Effects** tab to configure the following settings:
 - Click the **ON/OFF** button to enable or disable the White on Black option.

- Move the slider to the right to increase the **Brightness, Contrast** and **Color**
 - d Click **Close**.
- 4 Click the **ON/OFF** button to enable or disable the Screen Reader option. If enabled, the screen reader reads the displayed text as you move the text.
 - 5 Click the **ON/OFF** button to enable or disable the Sound Keys option. If enabled the beep sound when number lock or caps lock is clicked is turned ON.

Hearing

This section allows you to configure the Audio alerts by providing an visual indication.

- 1 Click **Visual Alerts** to configure the visual effects.
- 2 Click the **ON/OFF** button to enable or disable the option.
- 3 Select the preferred options in Visual Alerts.
- 4 Click the **Test flash** tab to have a flash on the screen.
- 5 Click **Close**.

Typing

This section allows you to configure the typing settings:

- 1 Click the **ON/OFF** button to disable or enable the keyboard display on the screen.
- 2 Click the **Typing Assist (AccessX)** to configure the keyboard setting.
 - a Click the **ON/OFF** button to enable the features using keyboard.
 - b Click the **ON/OFF** button to enable or disable the Sticky Keys option.
 - c Click the **ON/OFF** button to enable the long keypress and set the delay using Slow Keys option.
There is a delay between the action and the result when a key is pressed.
 - d Click the **ON/OFF** button to enable or disable the Bounce Keys option.
This option is used to avoid using the fast duplicate keypress and set the delay.
- 3 Click **Close**.

Pointing and clicking

This section allows you to configure the Mouse settings.

- 1 Click the **ON/OFF** button to enable or disable the Mouse Keys option.
- 2 Click the **Click Assist** tab to configure the settings.

Original Equipment Manufacturer branding

Original Equipment Manufacturer (OEM) branding page allows you to customize the manufacturer information for your ThinLinux client. You can customize the Bootsplash screen, Desktop wallpaper, Browser home page, and Product name in the **System Information** tab.

To set your OEM branding, do the following:

- 1 Import the OEM branding file to the thin client using any one of the following options:
 - **Remote server**—Select this option, and enter a valid server URL. To access the remote server, use the anonymous login option or enter the valid login credentials.

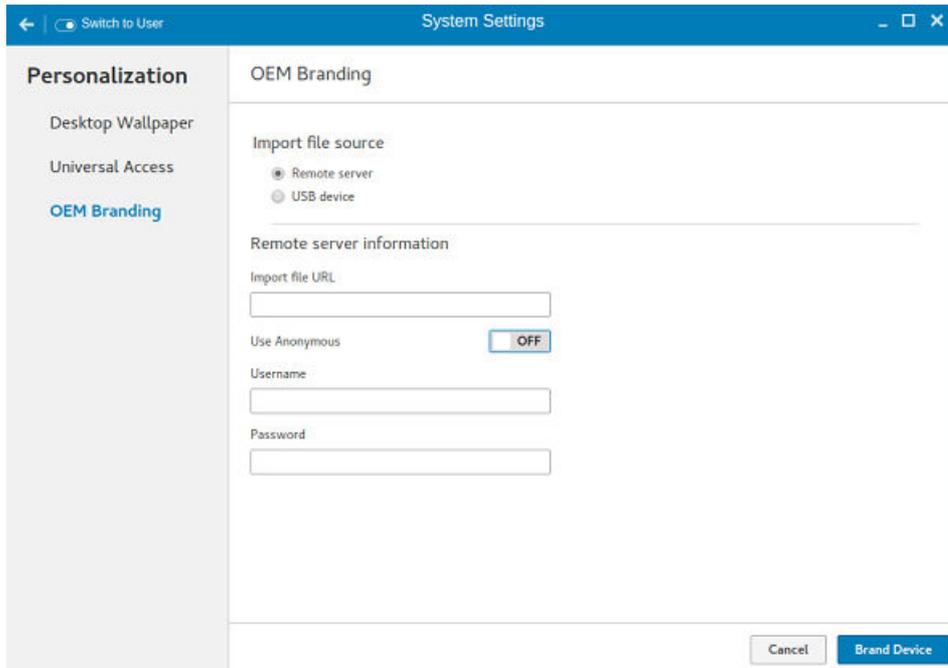


Figure 35. OEM branding - Remote server

- **USB device**—Select this option, and navigate to browse the file from the USB drive.

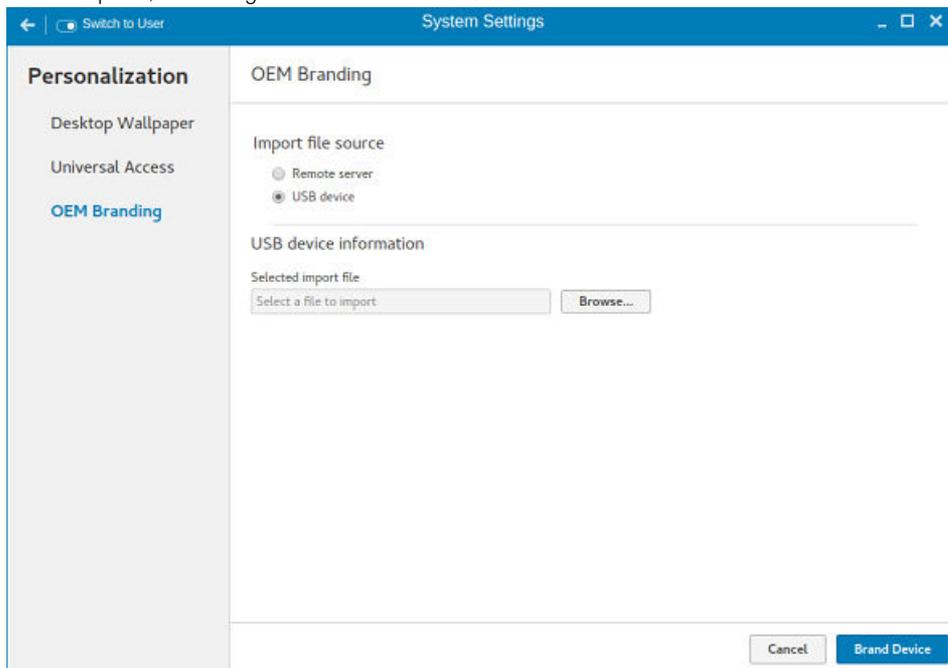


Figure 36. OEM branding - USB device

- 2 Click **Brand Device**.
The thin client restarts, and the device branding is customized based on your requirement.

Configuring Connections locally

On the **System Settings** page, click the **Connections** icon. The Connections page contains the following tabs:

- Browser
- Citrix
- Custom
- Ericom PowerTerm
- RDP
- SSH
- VMware
- VNC Viewer

 **NOTE:** The description names for all the connections can not be edited once you create the connection.

Topics:

- [Configuring and managing the browser connections](#)
- [Configuring and managing Citrix connections](#)
- [Configuring and managing the custom connections](#)
- [Configuring and managing the Ericom PowerTerm connections](#)
- [Configuring and managing RDP connections](#)
- [Configuring and managing the SSH connections](#)
- [Configuring and managing VMware connections](#)
- [Configuring and managing the VNC viewer connections](#)

Configuring and managing the browser connections

The **Browser Connections** page enables you to create and manage Firefox browser connections for your thin client. To create a new browser connection:

- 1 Click the **+** icon to add a new browser connection.
The **Browser connection** page is displayed.

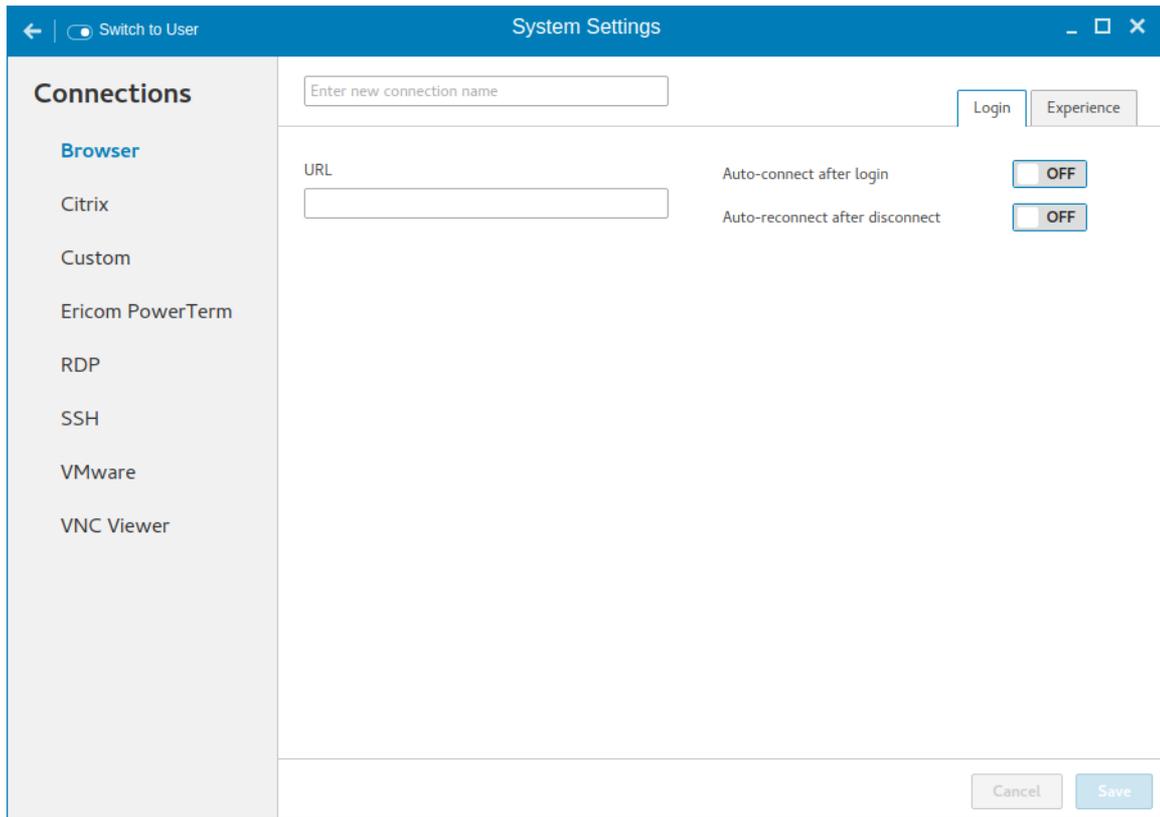


Figure 37. Browser connection login settings

- 2 In the **Login** tab, enter the URL address of the browser connection you want to connect to.
- 3 Enter the name of the Browser connection for which you have specified the URL address.
- 4 Click the **ON/OFF** button to enable or disable the auto-connect option after you log in to the session.
- 5 Click the **ON/OFF** button to enable or disable the auto-reconnect option after you disconnect from the session. If the **Auto-reconnect** option is enabled, you can enter the **Delay duration (in seconds)** to reconnect to the session. The default value is 30 seconds.
- 6 Click the **Experience** tab to set the window resolution and Kiosk mode.

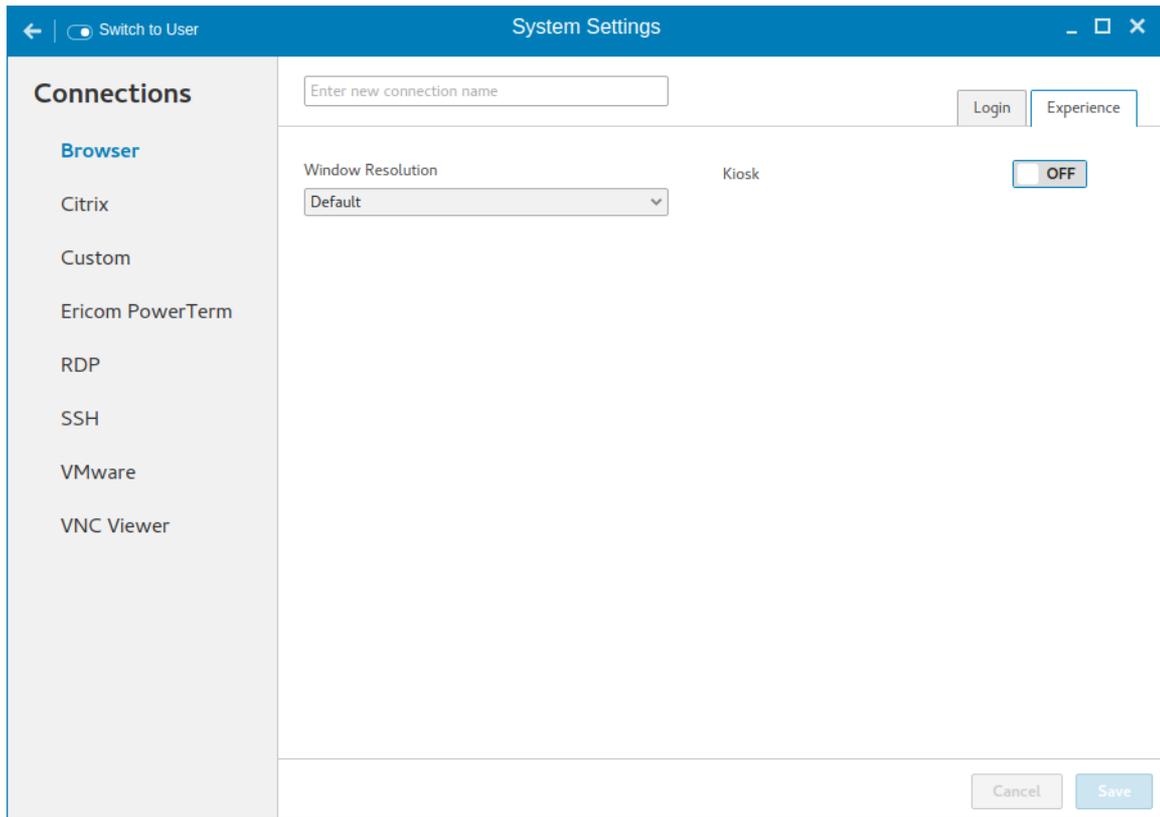


Figure 38. Browser connection experience settings

- a From the drop-down list, select the window resolution you want to set for your Browser window.
- b Click the **Kiosk** button to enable the Kiosk mode for your browser.

NOTE: When the Kiosk is Enabled, you cannot change window resolution.

- 7 Click **Save** to save the changes.

The browser connection created by you is displayed in the Browser Connections list.

To manage a **Browser** connection:

- 1 Hover the mouse over a particular browser connection name. The Edit, Remove, and Connect options are displayed next to the browser connection name.
- 2 Click **Edit** to edit the URL address and other settings of the browser connection.
- 3 Click **Remove** to remove the browser connection from the list.
- 4 Click **Connect** to connect to the URL address you have specified for your browser connection. The webpage opens on your default browser.

Configuring and managing Citrix connections

The **Citrix Connections** page enables you to create and manage Citrix connections both locally and globally.

To configure the local **Citrix** settings:

- 1 Click the **+** icon to add a new **Citrix Connection**.

The **Citrix Connections** page is displayed.

- 2 Enter the name of the **Citrix connection** for which you will specify the Server URL address.

- 3 From the **Connection Type** drop-down list, select any of the following connection type. For more information, see [Configuring the server connection type](#)
 - Server
 - Published Application
 - Storefront
- 4 Click **Save** to save the changes.

Configuring the server connection type

If **Server** is selected as the Connection type, the following options must be configured in the **Login** tab.

The screenshot shows the 'System Settings' window with the 'Login' tab selected. The 'Connections' sidebar on the left lists various connection types, with 'Citrix' highlighted. The main area contains the following settings:

- Enter new connection name:** Text input field.
- Connection type:** Dropdown menu set to 'Server'.
- Browsing protocol:** Dropdown menu set to 'TCP/IP + HTTP server location'.
- Citrix server:** Text input field.
- Smartcard login:** Toggle switch set to 'OFF'.
- Username:** Text input field.
- Password:** Text input field.
- Domain:** Text input field.
- Ping before connect:** Toggle switch set to 'OFF'.
- Auto-Connect after login:** Toggle switch set to 'OFF'.
- Auto-Reconnect after disconnect:** Toggle switch set to 'OFF'.
- Application command line:** Text input field.
- Serial number:** Text input field.
- Working directory:** Text input field.
- Show advanced settings:** Link.

Buttons for 'Cancel' and 'Save' are located at the bottom right of the window.

Figure 39. Citrix connection login settings

Table 7. Server

Parameter	Description
Browsing Protocol	From the drop-down list, select your preferred Browsing Protocol .
Citrix Server	Enter the specific Citrix Server .
Username	Enter the Username of the server.
Password	Enter the Password of the server.
Domain	Enter the preferred Domain for the server connection.

Parameter	Description
Ping before connect	Click the ON/OFF button to enable or disable this option. If enabled, the connection is checked before connecting to a session.
Auto-Connect after login	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically established after you log in to your thin client.
Auto-Reconnect after disconnect	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically established after you disconnect from the session.
When disconnect, reconnect	Select the time duration in seconds to delay the reconnection attempt after a disconnection occurs.
Smartcard login	Click the ON button to enable smart card login to the thin client. The User Name, Password, and Domain are not required. NOTE: Smart Card Login is applicable only for Server and Storefront Connections
Smartcard type	This field is enabled when you select Smart Card Login . Select the type of smart card you are using from the drop-down list.
Application command line	Enter the command line for the program on the server.
Serial number	Enter the serial number for environments that require the thin client license serial number.
Working directory	Enter the working directory for the program. NOTE: Working Directory is applicable only for Server Connections.

Click the **Show advance settings** to view and configure the advanced options for your Citrix server connection.

NOTE:

The advanced options are available only for server connections.

Table 8. Advanced options

Parameter	Description
Alternate Firewall	From the drop-down list, Select Yes to use an alternate address for firewalls.
Auto-detect proxy	Click the ON button to automatically detect the proxy type. Click the OFF button to manually enter the proxy type.
Proxy type	From the drop-down list, Select a proxy type.
Proxy Address	From the drop-down list, Select a proxy address. NOTE: If you select Secure (HTTPS) or SOCKS as the Proxy Type, you must enter the Proxy Address and Port.

If **Published Application** or **Storefront** is selected as the **Connection Type**, the following options must be configured in addition to the options listed for **Server Connections** Table.

Store Name—Enter your preferred store name. Multiple store names are not supported.

NOTE:

- **SmartCard** Login option is not available for Published applications.
- The Storefront option is applicable only for **Citrix XenDesktop 7.0** and later versions. Select this option to specify the name of a Store Front server to display the applications available in that sever.
- **Smart card type** option is not applicable for Server connections.

The following options must be configured in the **Experience** tab.

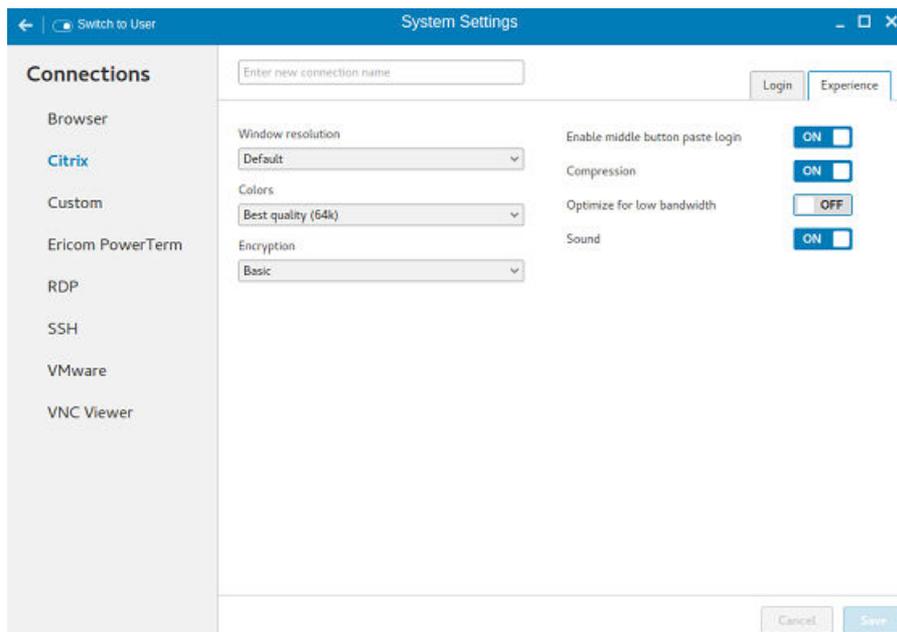


Figure 40. Citrix connection experience settings

Table 9. Experience

Parameter	Description
Windows resolution	Select the Windows resolution that you want to use on your monitor. The available resolutions are: Default 640 X 480 800 X 600 1024 X 768 1280 X 1024 1600 X 1200 Full Screen
Colors	Specifies the number of colors to display for each pixel. Select the session color mode to get the faster display performance on your monitor. The available options are: 256

Parameter	Description
	Best quality (64k) 16 million
Encryption	Specifies the connection security level. Select the preferred option. Basic RC5 (128 bit-login only) RC5 (40-bit) RC5 (56-bit) RC5 (128-bit) <div style="border-left: 1px solid #0070C0; padding-left: 10px;"> <p>NOTE:</p> <ul style="list-style-type: none"> The highest level is 128-bit security and the lowest level is Basic. Only Basic, and RC5 128-bit support Citrix XenDesktop 7.15. RC5 40-bit, and RC5 56-bit support Citrix XenDesktop 7.15 and earlier versions. RC5 40-bit and RC5-56 bit support has been deprecated since XenDesktop 7.9. </div>
Enable middle button paste login	Click the ON/OFF button to enable or disable this option. If enabled, you can use the mouse middle click to paste content into your text documents.
Compression	Click the ON/OFF button to enable or disable this option.
Optimize for low bandwidth	Click the ON/OFF button to enable or disable this option.
Sound	Click the ON/OFF button to enable or disable this option.

Configuring Global Citrix settings

When you log out and log in, you are prompted for credentials to log in to a Citrix session for the selected domain. When you successfully log in, all the applications and desktops on the remote session are listed on the local desktop.

- 1 Click **Manage Citrix Global Settings**.
The **Manage Citrix Global Settings** page is displayed.
- 2 On the **Login** tab, configure the following options to enable Citrix PAM login and enable the PAM login using the slider, in the Managing PAM login page. The Domain details also need to be provided on the Managing PAM login page.

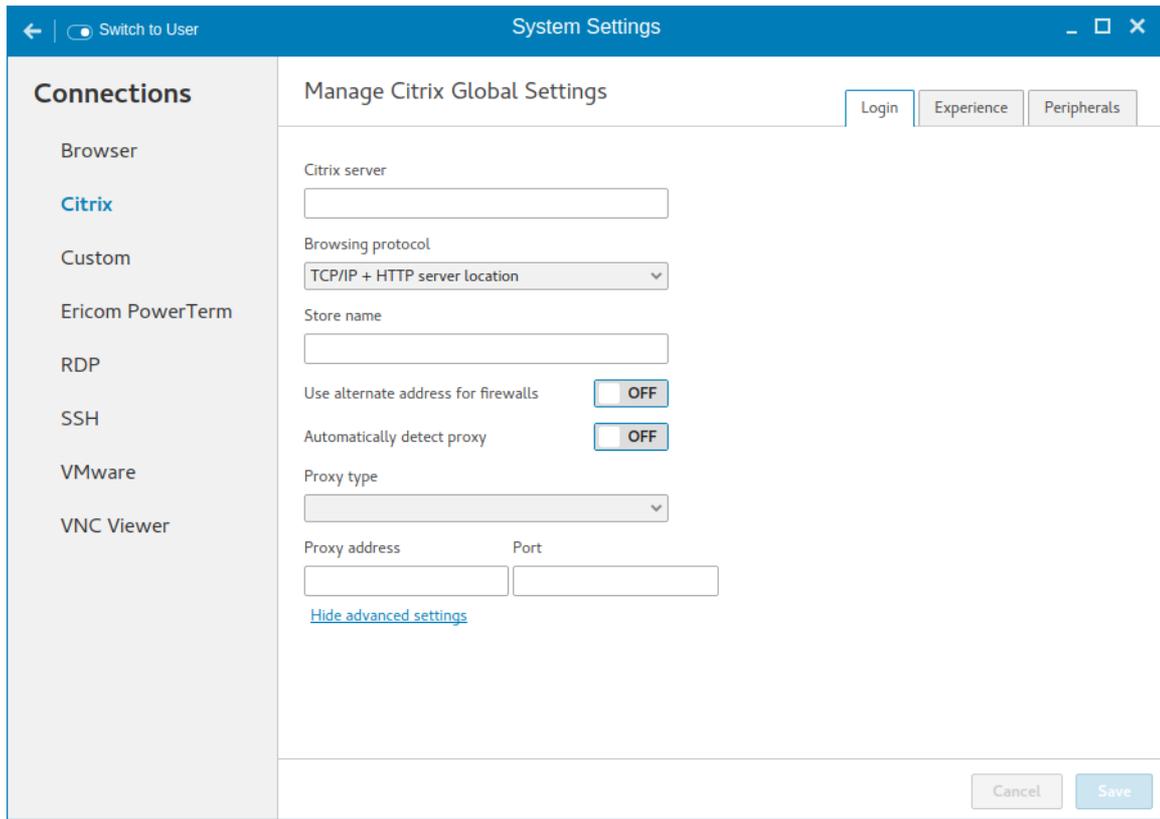


Figure 41. Citrix global login settings

- a Enter the Citrix server.
 - b From the drop-down list, select the required browsing protocol. The available options are:
 - TCP/IP + HTTP server location
 - TCP/IP
 - SSL/TLS + HTTPS server location
 - c Enter the storename.
 - d Click **Show Advance Settings** to view and configure the advanced options.
 - 1 Click the **ON/OFF** button to enable or disable the Use Alternate address for firewall option. If enabled, an alternate address can be used for firewall configuration.
 - 2 Click the **ON** button to automatically detect the proxy type or click the **OFF** button to manually enter the proxy type.
 - 3 From the drop-down list, select a proxy type
- 3 On the **Experience** tab, configure the following options.

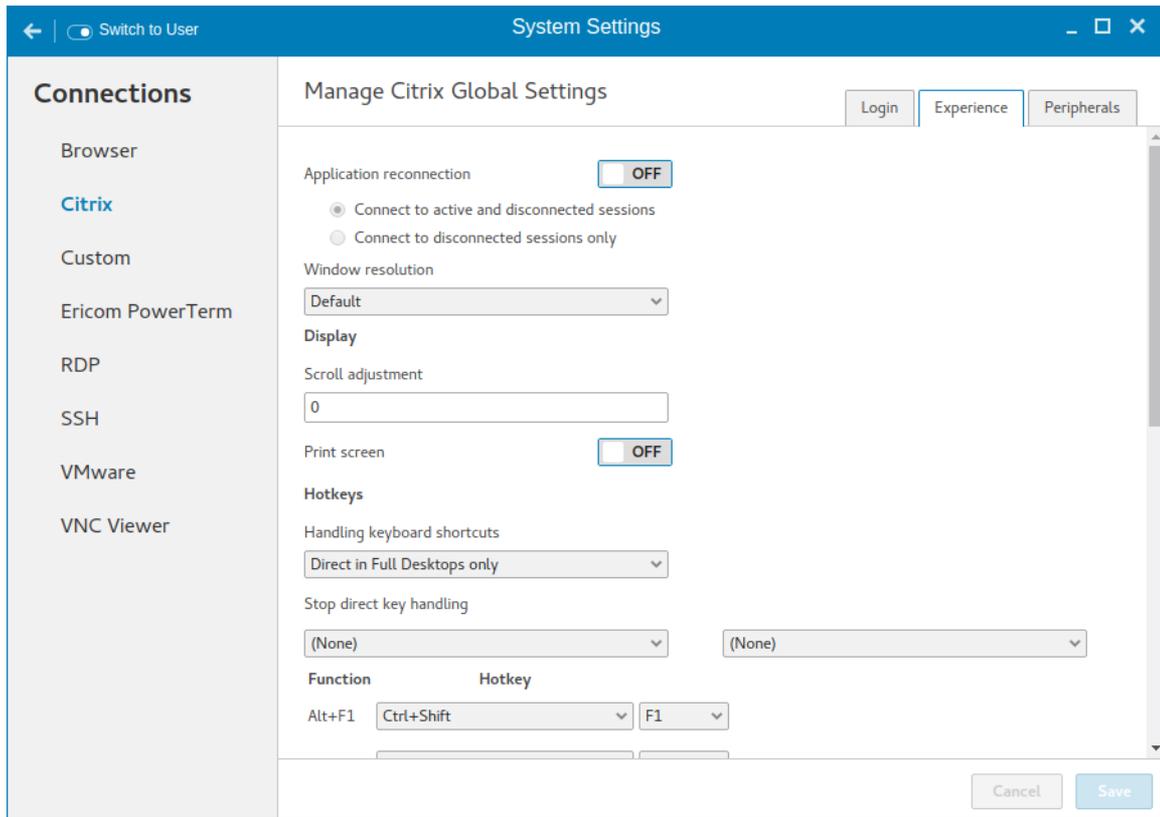


Figure 42. Citrix global experience settings

- a Click the **ON/OFF** button to enable or disable the Application Reconnection option. If enabled, the connection is automatically re-established after you disconnect from the session.
- b Select the Windows resolution you can use to get the best display on your monitor.
- c If you come across over-scrolling when using certain published applications, increase the adjustment by 100 until the display improves.

NOTE: The maximum scroll adjustment is 1000.

- d Click the **ON/OFF** button to enable or disable the PrintScreen option. Select the option to use the Print Screen key to capture an image of the desktop to the Clipboard.
 - e Use this section to map hotkeys on the thin client.
 - From the drop-down list, select the preferred keyboard shortcuts.
 - If you select **Direct** option for handling keyboard shortcuts, then from the drop-down list, Select the direct key to handle keyboard shortcuts.
 - If you select **Direct in Full Desktops only** or **Translated** option for handling keyboard shortcuts, then complete the following steps:
 - 1 Click the **Hotkeys** tab to map hotkeys on the thin client.
 - 2 Select a **Hotkey** option using the Hotkey lists for each **function** you want.
- 4 Click the **Peripherals** tab, and configure the following options:
 - a **Drive Mapping:**
 - **Dynamic Mapping**—Dynamic client drive mapping enables virtual desktops to access mass storage devices, such as USB flash drives, configured on the endpoint. The virtual (not local) desktop is responsible for controlling USB drives and displaying them in the user interface. When a USB drive is connected to an endpoint, it is automatically mounted and freely accessible. USB drives accessed using dynamic client drive mapping are treated as network drives. For this reason, you cannot check, reformat, or perform other local operations on them.

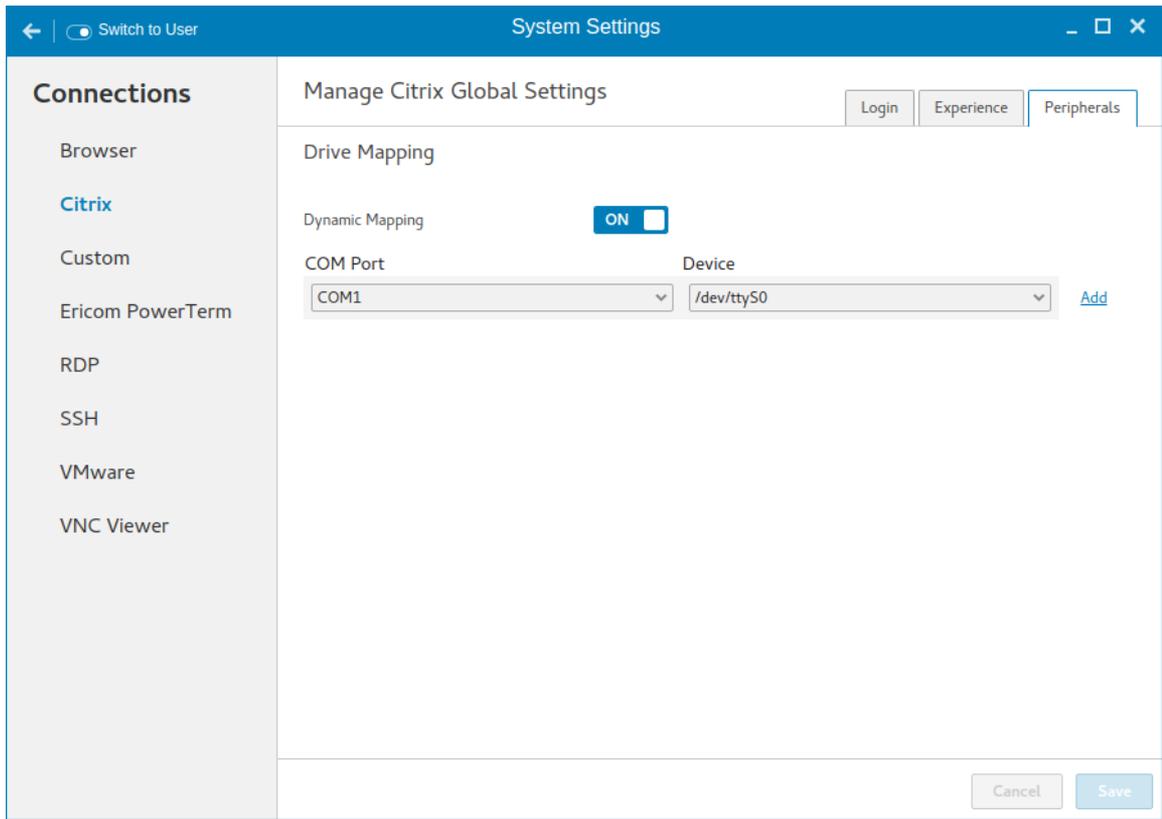


Figure 43. Dynamic mapping

- **Mapping all devices**—This option is same as Dynamic mapping but the you will be given an option to select the drive letter and read-write permissions for the drives. When this option is enabled all the usb storage devices which are mounted on /run/media/ will be mapped to the Citrix session. You are provided the option to choose the drive letter and read or write permissions for the drives which have been mounted on to the thin client. The device name value remains constant as /run/media/.

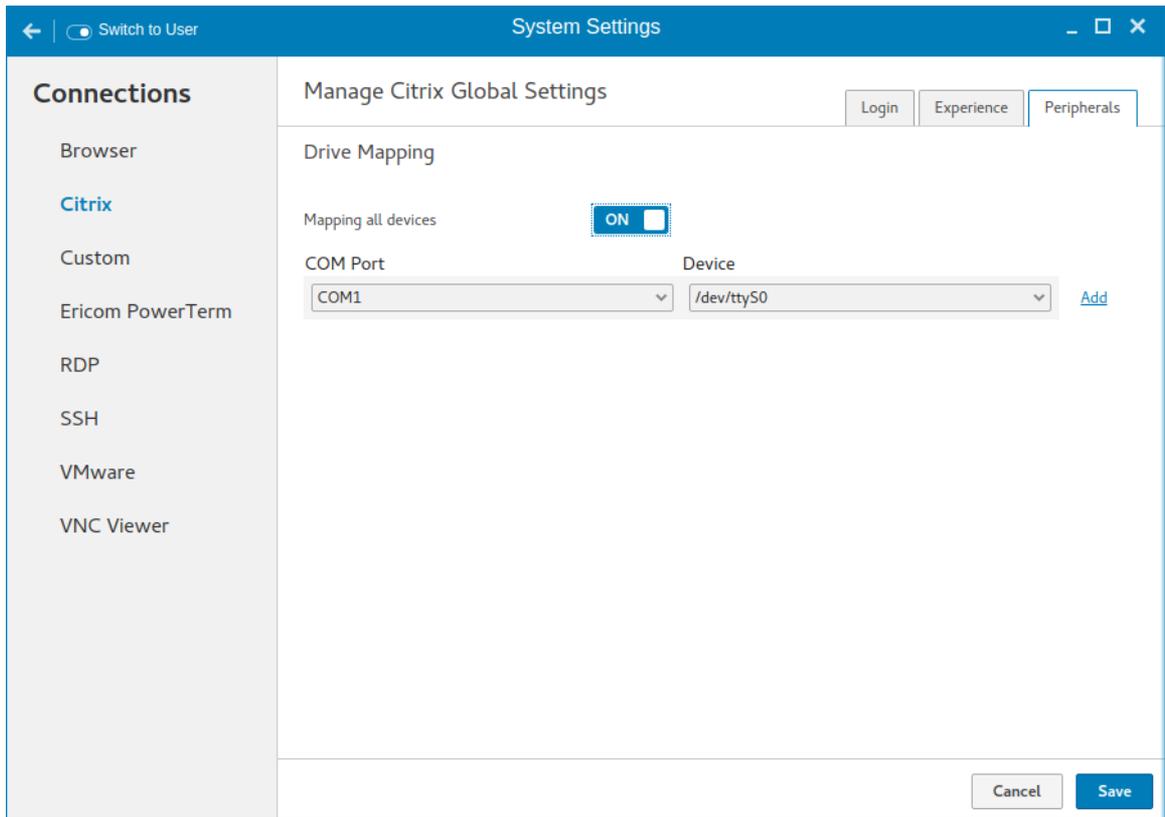


Figure 44. Mapping all devices

- **Mapping a single device**—Unlike the previous two options, this option enables you to select an individual device that should be redirected to the session. The device name lists all the devices that has been successfully mounted on to the thin client. You will be able to select a drive letter and read-write permission for individual drives that redirect to the session.

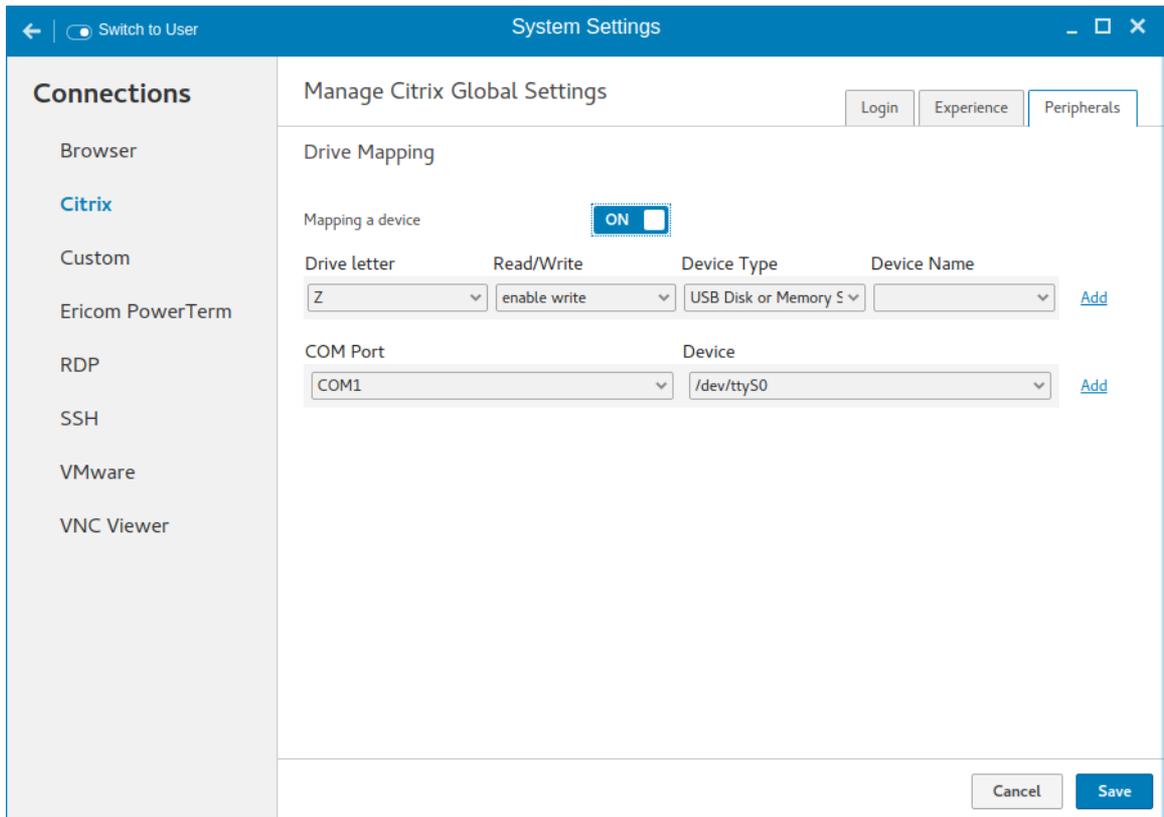


Figure 45. Mapping a single device

To add a COM port, complete the following task:

- a Click **Add**.
- b From the **COM Port** list, select a COM port—1 to 4.
- c Select a device from the device list.

To delete a COM port, click the **X** icon next to the COM port that you want to delete.

- 5 Click **Save** to save the changes.

Managing PAM login

- 1 Click **PAM Login**.

The **Manage PAM Login Settings** page is displayed. The PAM login page displays the settings that are used for PNAgent server connection. It allows you to enable or disable the PAM login, and to enter the domain for PNAgent server.

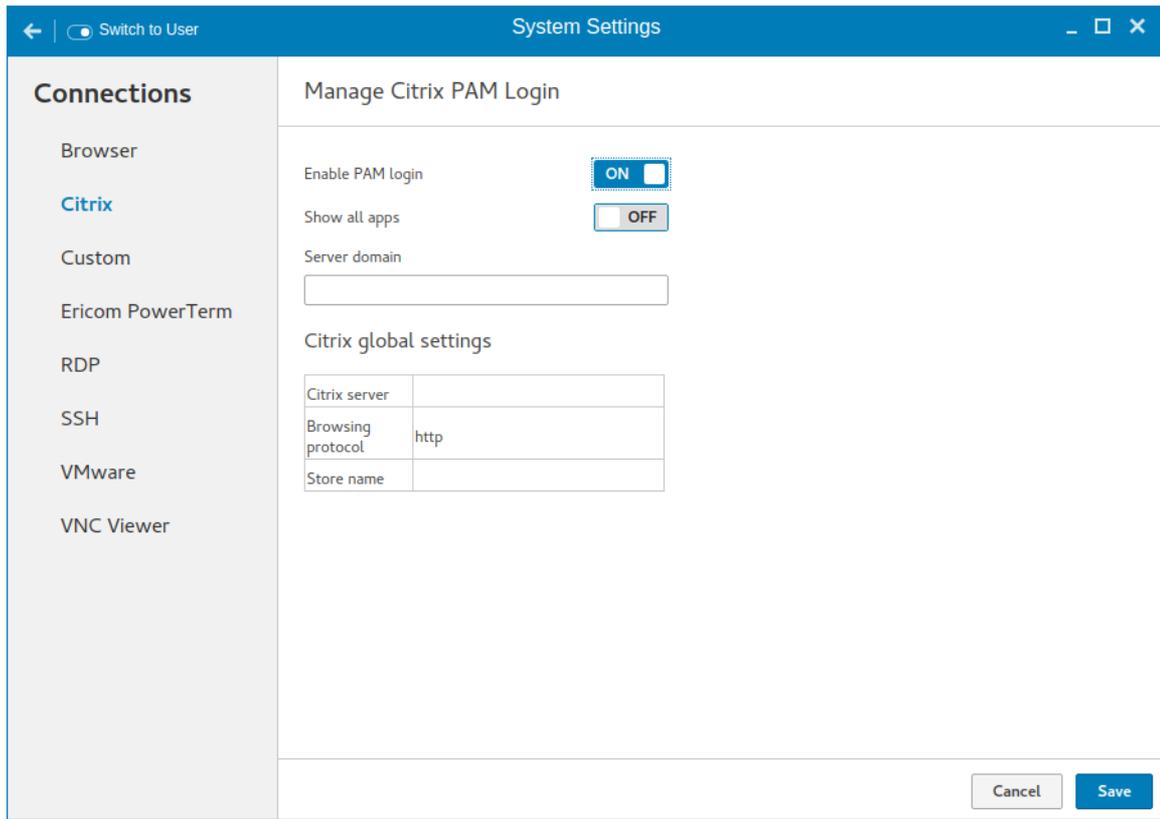


Figure 46. PAM login settings

- 2 Click the **ON/OFF** button to enable Citrix PAM login option.
- 3 Click the **ON/OFF** button to enable or disable the Show All Apps option.
- 4 Enable the **Enable Citrix PAM login** option to enter the Citrix server domain.
The **Citrix Global Settings** table provides you the information about Citrix server, protocol, and Store Name and you are restricted from editing the content.
- 5 Click **Save** to save the changes.

Citrix ICA Client RTME

Starting from HDX RealTime Media Engine (RTME) 2.3, Citrix supports 64-bit Linux operating systems. Hence, there is no need to install any optional 32-bit add-ons as it is now packaged along with base image. This feature is enabled by default.

Features of RTME

The following are the features of RTME (Real Time Media Engine):

- Improved audio and video quality:
 - Support for H.264 Scalable Video Coding (SVC): SVC handles the transmission of video over varied network and device environments. The sending system includes different levels for the information transmitted such as frames per second, image size, and quality granularity. The receiving device selects the required information from the transmission and optimizes the experience on those devices.
 - SILK audio codec: Delivers higher audio quality across a wide range of network environments, including the public Internet and mobile networks.
 - Improved audio and video quality over lossy connections: By enabling the forward error correction (FEC), we provide higher-quality content over lossy connections.

- Support for 64-bit architecture: Linux 64-bit operating systems are now supported for the Real-Time Media Engine.
 - Endpoint identification for location services:
 - Enhanced 9-1-1 (E9-1-1) and E999, E100, and so on: An international emergency dispatch feature that associates a 911 (or an international emergency) call with a specific location information. This information includes street address and the floor number for office buildings. Responders are directed to the correct emergency location. For more information, see [Technet.microsoft.com/en-us/library/dn951423.aspx](https://technet.microsoft.com/en-us/library/dn951423.aspx).
 - Support for Quality of Experience (QoE) reporting: Use Quality of Experience data to keep a record of the quality of your users' audio and video calls, including:
 - Number of network packets lost
 - Background noise
 - Amount of jitter (differences in packet delay)
 - Names of devices used for a call
 - Names of devices used for a call
 - ICE Warning flags
 - Endpoint statistics
 - Skype for Business users can communicate with Skype users.
 - Flexible upgrades: Simplified backward compatibility for upgrading from version 2.0.x
 - Fallback mode control: You can disable fallback mode or limit fallback control to server-side media processing for audio only (no video), which reduces CPU impact.
 - Administrator control of system notification balloons: You can enable or disable the system notification balloons the Optimization Pack displays.
 - The Real-Time Optimization Pack About page: The following information can be viewed in the About page:
 - Status of Real-Time Optimization Pack
 - Skype for Business version number
 - Operating systems on which the Real-Time Connector and Real-Time Media Engine are running
- NOTE:** In the fallback mode, the version and operating system fields for Real-Time Connector and Real-Time Media Engine display the same values because the Real-Time Optimization Pack uses the Real-Time Media Engine within the Real-Time connector.
- Localization: Real-Time Media Engine installers for Linux 64-bit OS are localized and available in German, French, Spanish, Japanese, and Simplified Chinese.
 - Skype for Business 2016: The current Skype for Business 2016 client does not support Real-Time Optimization pack.

Configuring and managing the custom connections

The **Custom Connections** page enables you to create and manage the Custom connection based on shell commands. The main Custom page has options to create a Custom connection.

To configure the **Custom Settings**, complete the following task:

- 1 Click the **+** icon to add a new Custom Connection.
The **Custom Connections** page is displayed.
- 2 Enter the name of the Custom connection.
- 3 The following options must be configured in the **Login** tab.

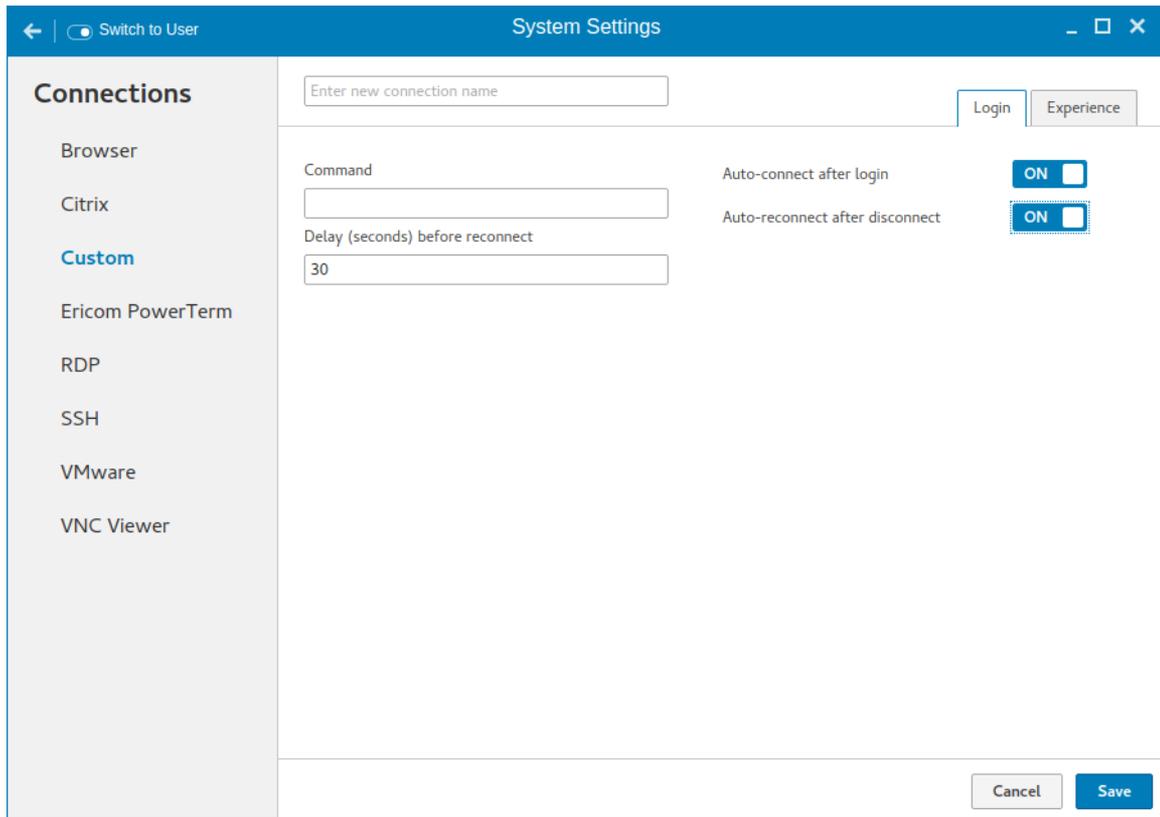


Figure 47. Custom connection login settings

- a Enter the shell command. The shell command is performed when you click the connection icon on the desktop.
 - b Click the **ON/OFF** button to enable or disable the Auto-connect after login option. If enabled, the connection is automatically connected after you log in to your thin client.
 - c Click the **ON/OFF** button to enable or disable the Auto-reconnect after disconnected option. If enabled, the connection is automatically re-connected after you disconnect from the session.
 - d Select the time duration in seconds to delay the reconnection attempt after a disconnection occurs.
- 4 The following options must be configured in the **Experience** tab.

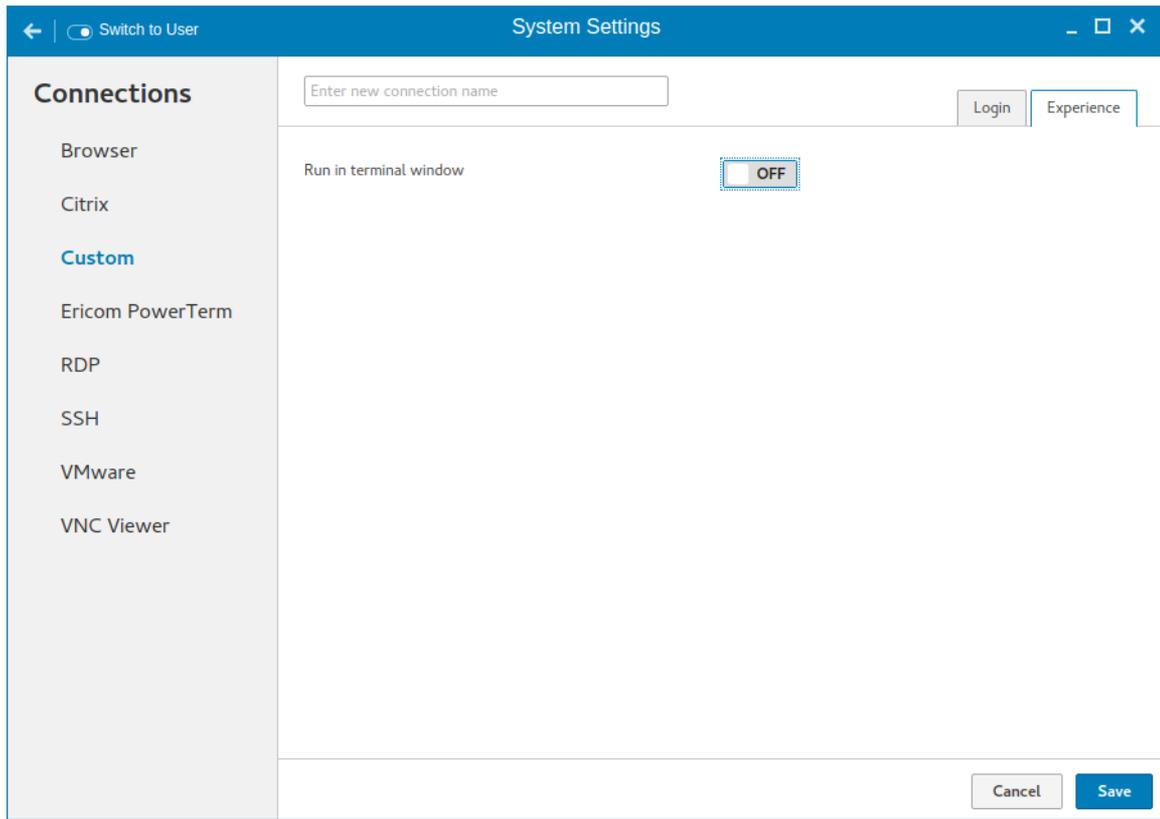


Figure 48. Custom connection experience settings

- a Click the **ON/OFF** button to enable or disable the Run in terminal window option.
- 5 Click **Save** to save the changes.

Configuring and managing the Ericom PowerTerm connections

The Ericom PowerTerm connections page enables you to create and manage the Ericom PowerTerm connections. To configure the Ericom PowerTerm Connection Settings, complete the following task:

- 1 Click the + icon to add a new Ericom PowerTerm Connection. The Ericom PowerTerm Connections page is displayed.
- 2 Enter the name of the Ericom PowerTerm connection.
- 3 The following options must be configured in the **Login** tab .

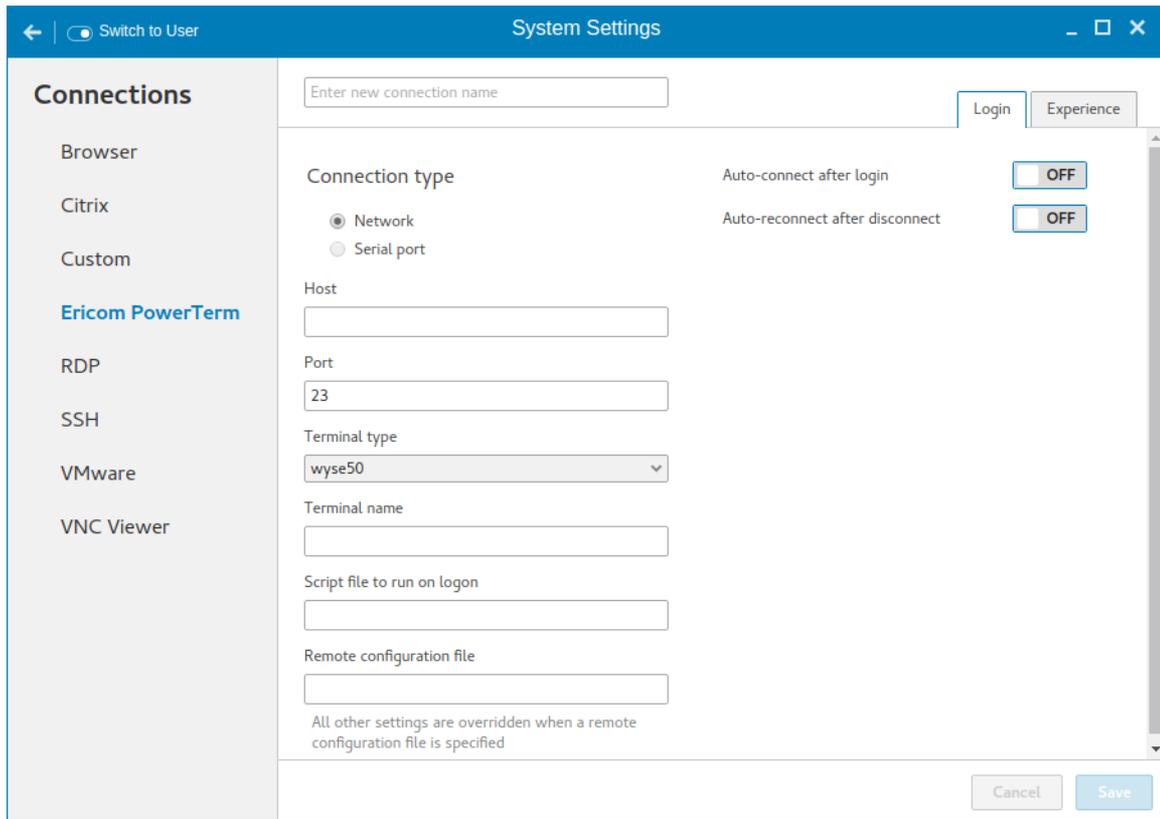


Figure 49. Ericom PowerTerm login settings

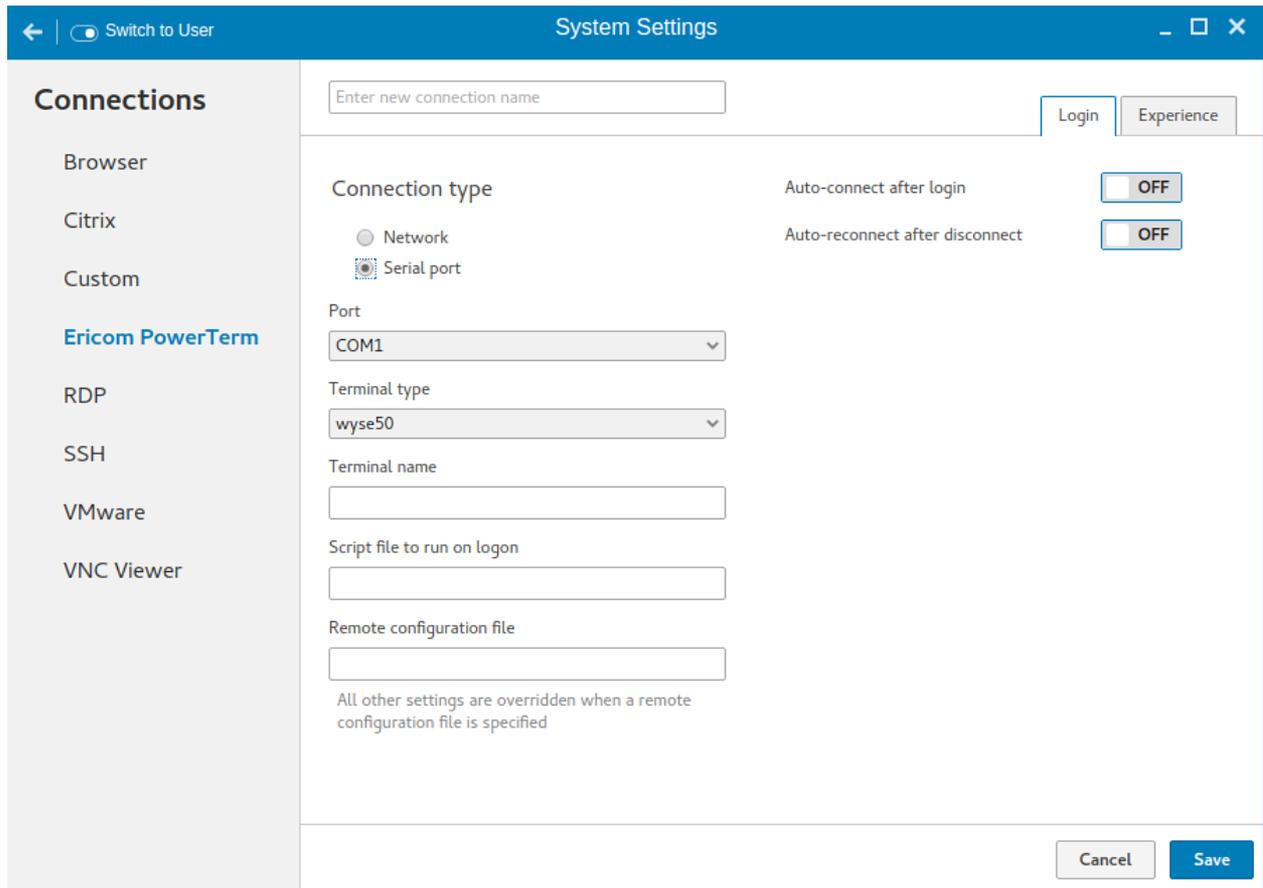


Figure 50. Ericom PowerTerm login settings

Table 10. Ericom PowerTerm login settings

Parameter	Description
Connection type	On the Connection Type page, click the Network or Serial Port radio button depending upon the requirement. By default, the Network option is selected. Serial Port radio button is disabled if the application does not detect any active serial ports.
Host	Enter the Ericom server host's IP or FQDN address in the Host field. This field is hidden, if the connection is through Serial Port.
Port	Specify the port number used to connect the Ericom server in the Port field. This is available if the connection is through the network. In case of Serial Port, this field displays as COM port and the available serial ports are listed in the drop-down list.
Terminal type	Select the terminal type to be emulated from the drop-down list in the Terminal Type field.
Terminal name	Type the name of the Ericom PowerTerm terminal window in the Terminal Name field
Script file to run on logon	Specify the path of the script file (if any) to be executed in the remote system in the Script file to run on Logon field.

Parameter	Description
Remote configuration file	Specify the location of the remote configuration files in the Remote configuration file field.
Auto-connect after login	<p>a Click the ON/OFF button to enable or disable the Auto-connect after login option. If enabled, the connection is automatically connected after you log in to your thin client.</p> <p>b Click the ON/OFF button to enable or disable the Auto-reconnect after disconnected option. If enabled, the connection is automatically re-connected after you disconnect from the session.</p> <p>c Select the time duration in seconds to delay the reconnection attempt after a disconnection occurs.</p>

4 The following options must be configured in the Experience tab.

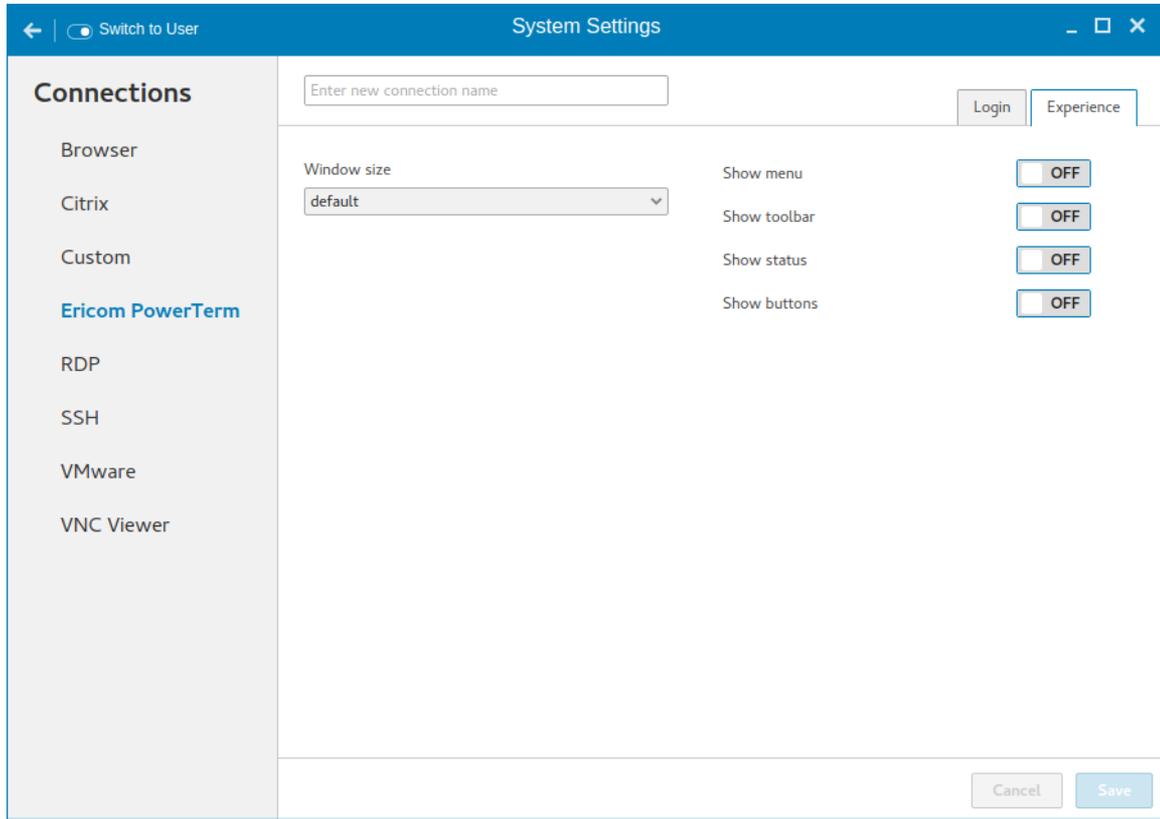


Figure 51. Ericom PowerTerm experience settings

Table 11. Ericom PowerTerm Experience Settings

Parameter	Description
Window size	Select the desired terminal window size from the drop-down list in the Window Size field.
Show menu	Click the ON/OFF button to enable or disable this option. It enables the top menu option on the Ericom PowerTerm window.
Show toolbar	Click the ON/OFF button to enable or disable this option. It enables the toolbar option on the Ericom PowerTerm window.

Parameter	Description
Show status	Click the ON/OFF button to enable or disable this option. It enables the status bar on the Ericom PowerTerm window.
Show buttons	Click the ON/OFF button to enable or disable this option. It enables the soft buttons on the Ericom PowerTerm window.
Echo locally	When the connection is configured through Serial Port then additional option Echo locally option will be available on the Experience tab. If this option is set to ON, it will set the local echo option of the generated Ericom PowerTerm terminal window.

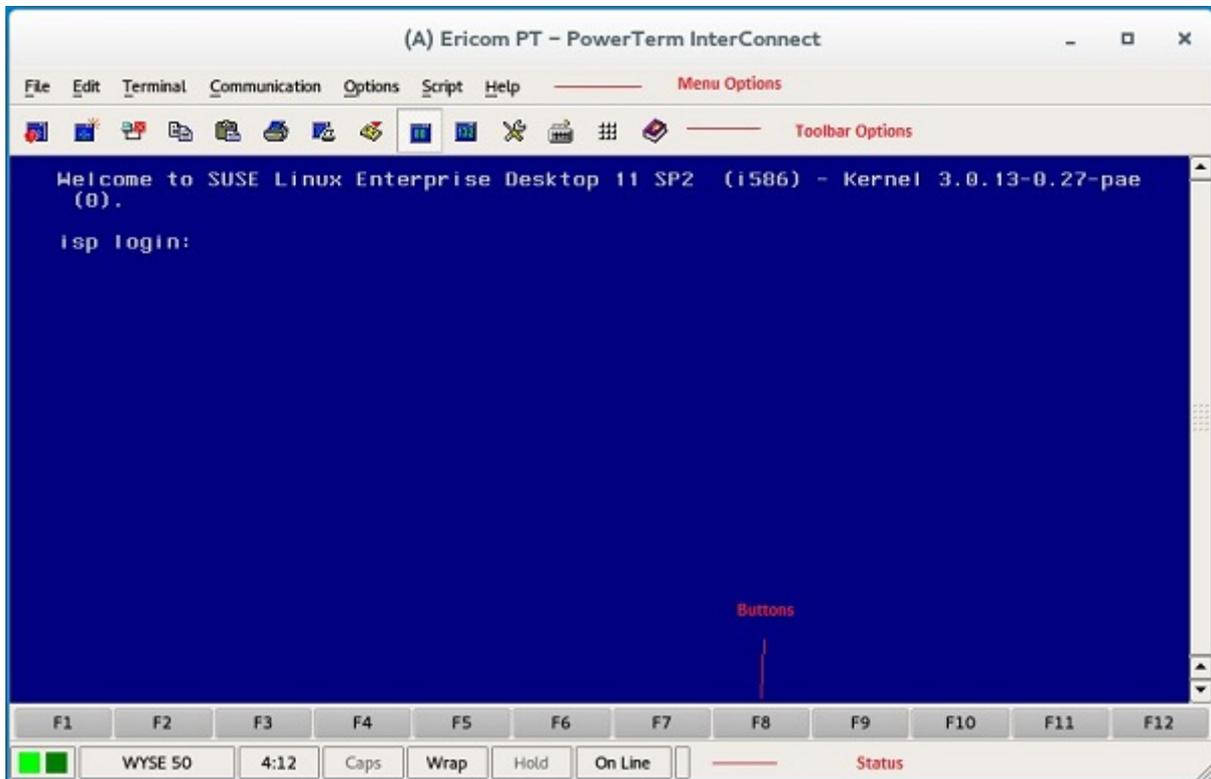


Figure 52. Ericom PT — PowerTerm Interconnect

Configuring and managing RDP connections

The **RDP connections** page enables you to create and manage the RDP connection. The main RDP page has options to create an RDP connection and modify existing connections.

To configure the RDP Settings, complete the following tasks:

- 1 Click the **+** icon to add a new RDP Connection.

The **RDP Connections** page is displayed.

- 2 Enter the name of the RDP connection.
- 3 Configure the following tasks in the **Login** tab:

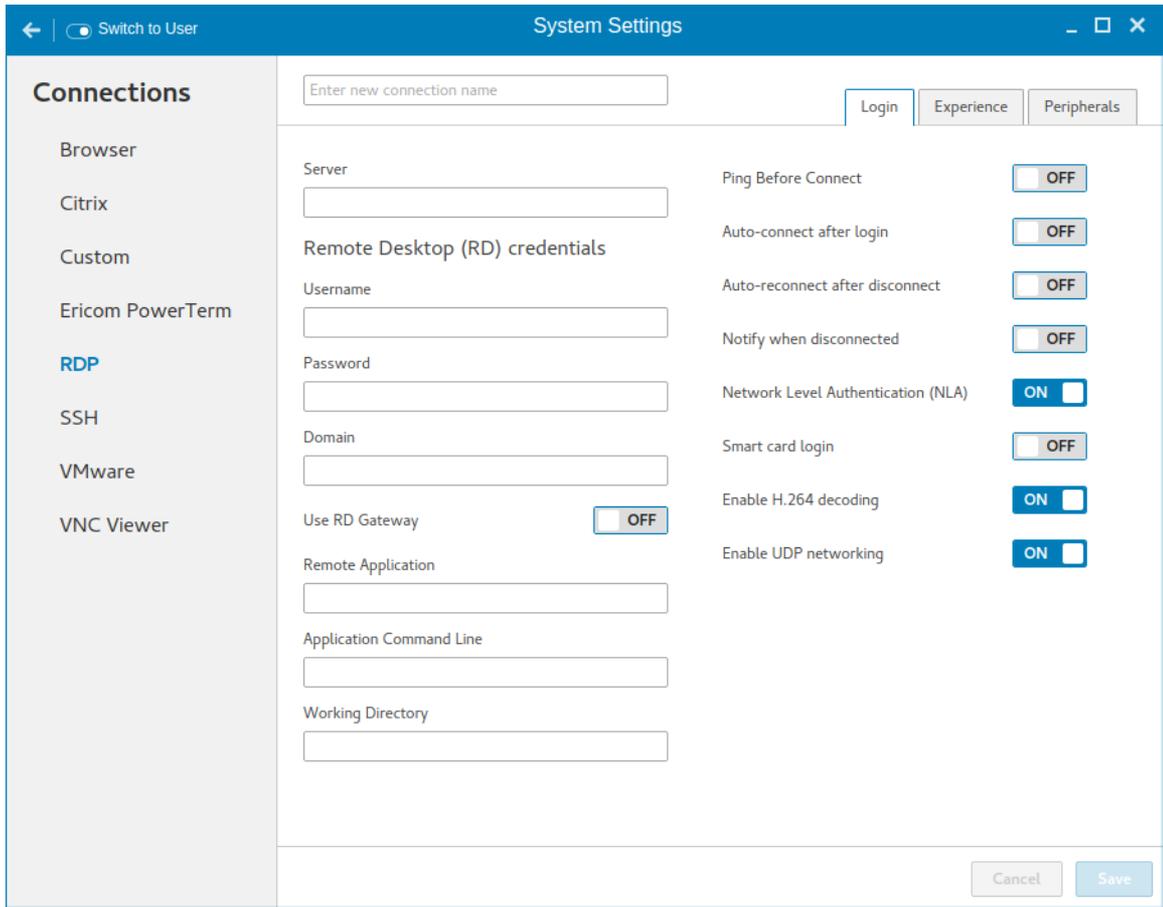


Figure 53. RDP login settings

Table 12. RDP login settings

Parameter	Description
Server	Enter the IP address or FQDN of the RDP server to which you want to establish a connection.
Username	Enter the Username to log in to the RDP Server.
Password	Enter the Password to log in to the RDP Server.
Domain	Enter the Domain to log in to the RDP Server.
Use RD Gateway	Select to enable and configure an RD Gateway to connect to your remote computers, if required by your network administrator and then do one of the following: <ul style="list-style-type: none"> To configure the RD Server, and then Use Remote Desktop Credentials for RD Gateway—Enter the RD Server IP address or URL of the Remote Desktop Gateway server, and then select the Use Remote Desktop credentials for RD Gateway check box, if the server credentials are the same credentials as your RDP host remote computer credentials. To configure the RD Server, and then Manually enter RD User Name, RD Password, RD Domain—Enter the RD Server IP address or URL of the Remote Desktop Gateway

Parameter	Description
	<p>server. Clear the Use Remote Desktop credentials for RD Gateway check box and then manually enter the Username, Password, and Domain of the RD Gateway server, if required.</p> <p>NOTE: An RD Gateway server is a type of gateway that enables authorized users to connect to remote computers on a corporate network from any computer with an Internet connection. An RD Gateway server enables Remote Desktop connections to a corporate network from the Internet without having to set up virtual private network (VPN) connections. Ask your network administrator whether you need to specify an RD Gateway server.</p>
Remote Application	Enter the Remote Application name.
Application Command Line	Enter the command line for the program on the server.
Working Directory	Enter the Working Directory for the program.
	<p>NOTE: Working Directory is applicable only for Server Connections.</p>
Ping Before Connect	Click the ON/OFF button to enable or disable this option. If enabled, the connection is checked before connecting to a session.
Auto-Connect after login	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically established after you log in to your thin client.
Auto-reconnect after disconnect	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically re-established after you disconnect from the session. If the Auto-reconnect option is enabled, you must enter the Delay duration (in seconds) when you reconnect to the session. The default time duration is 30 seconds.
Notify when disconnected	Click the ON/OFF button to enable or disable this option. It notifies when the connection is disconnected.
Network Level Authentication (NLA)	Click the ON/OFF button to enable or disable this option. Enable the Network Level Authentication (NLA), if NLA is enabled on your remote computer. Your remote computer requires NLA user authentication before you establish a full Remote Desktop connection and the login screen is displayed.
Smart card login	Click the ON/OFF button to enable smart card login to the thin client. The User Name, Password, and Domain are not required.
Enable H.264 decoding	Click the ON/OFF button to enable or disable this option. Enable this option to allow H.264 decoding in Microsoft RDP Client. The RDP client uses H.264 decoding, provided the agent supports H.264 software encoding. If the agent does not support H.264 software encoding, the RDP client uses JPG/PNG decoding. Disable this option if you want to use JPG/PNG decoding.
Enable UDP networking	Click the ON/OFF button to enable or disable this option. Enable this option to allow UDP networking in Microsoft RDP Client. The RDP client uses UDP networking, provided UDP connectivity is available. If the UDP networking is blocked, the

Parameter	Description
	RDP client uses TCP networking. Disable this option to use TCP networking.

4 The following options can be configured in the **Experience** tab.

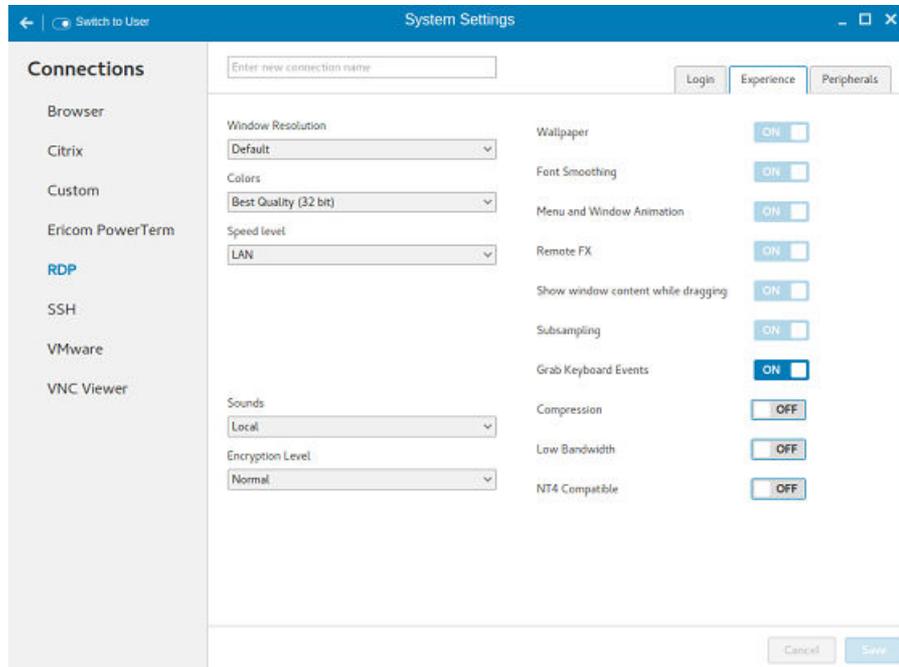


Figure 54. RDP experience settings

Table 13. RDP Experience Settings

Parameter	Description
Window Resolution	Select the Windows resolution you can use to get the best display on your monitor. The available options are: Default 640 X 480 800 X 600 1024 X 768 1280 X 1024 1600 X 1200 Full Screen
Colors	Specifies the number of colors to display for each pixel. Select the session color mode to get the faster display performance on your monitor. The available options are: High Color (15-bit) High Color (16-bit) True Color (24-bit)

Parameter	Description
	Best Quality (32-bit)
Speed Level	Select a speed level to describe the network connection. <ul style="list-style-type: none"> • Modem • Broadband • LAN • Custom
Sounds	Select the relevant option from the drop-down list. You can choose to redirect the audio on the remote session to the local device, or not allow the audio to play on the remote session on the local device, or leave the audio playing on the remote session. <ul style="list-style-type: none"> • Off • Local • Remote
Encryption Level	Select an encryption level, either Normal or None. For servers with data encryption settings, you must select Normal for the encryption level.
Wallpaper	Click the ON/OFF button to enable or disable this option.
Font Smoothing	Click the ON/OFF button to enable or disable this option.
Menu and Window Animation	Click the ON/OFF button to enable or disable this option.
Remote FX	Click the ON/OFF button to enable or disable this option.
Show window content while dragging	Click the ON/OFF button to enable or disable this option. This option shows the window content when the user drags the window on screen.
Subsampling	Click the ON/OFF button to enable or disable this option. It enables color space conversion required for Chroma subsampling. Chroma Subsampling is the practice of encoding/compressing images for a higher transmission experience.
Grab Keyboard Events	Click the ON/OFF button to enable or disable this option. It enables all keyboard events within the connection window to be sent to the connection's applications.
Compression	Click the ON/OFF button to enable or disable this option.
Low Bandwidth	Click the ON/OFF button to enable or disable this option. If enabled, following options are automatically disabled: Wallpaper Font Smoothing Menu and Window Animation Remote FX—This feature will be supported in next release.

Parameter	Description
	Show window content while dragging Subsampling Enables low-bandwidth optimization.
NT4 Compatible	Click the ON/OFF button to enable or disable this option.

5 Configure the following tasks in the **Peripherals** tab.

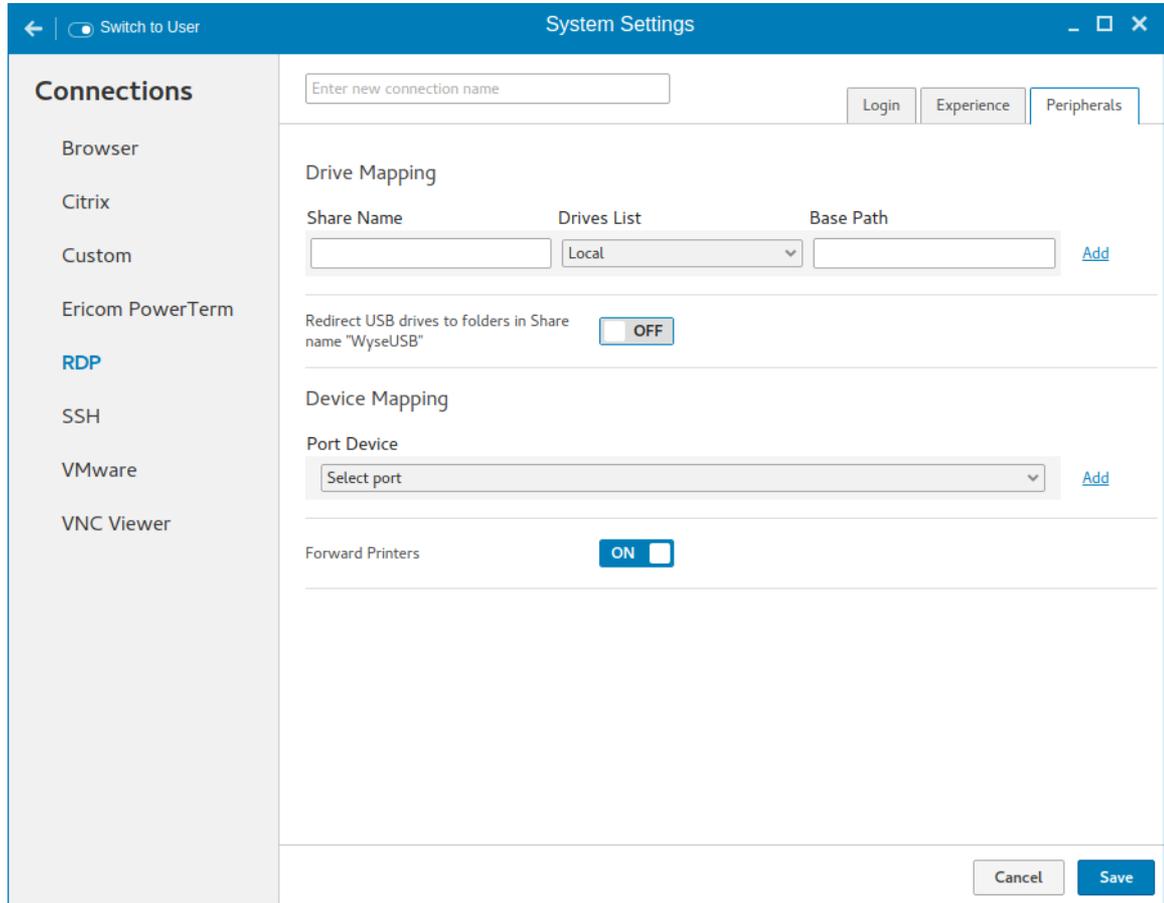


Figure 55. RDP peripherals settings

- **Drive Mapping:** Drive mapping tab is used to share map names on the server to USB mass storage devices attached to the thin client, and to view and manage the list of current server share names including the drive information mapped on the thin client.
 - a Enter the share name.
 - b The list includes the available drives.
 - c The Base path is an entry to a directory within the drive.
 - d Click the **ON/OFF** button to enable or disable the Redirect all USB drives to folders in Share named 'WyseUSB' option. If enabled, it redirects all USB drives to folders in Share name **WyseUSB**. You can redirect all your USB drives such as USB Floppy, USB CDROM, USB Disk or Memory stick, and local or mounted disk to the folders in share name **WyseUSB** and if this is enabled **Individual Drive Mapping** is disabled.
- **Device Mapping:** Device mapping tab is used to map devices to ports on the thin client, and to view and manage the list of current devices that are mapped on the thin client.
 - a Select your preferred port devices.


- b Click the **ON/OFF** button to enable or disable the **Forward Printers** option.
- 6 Click **Save** to save the changes.

Configuring and managing the SSH connections

The **SSH connections** page enables you to create and manage the SSH connections. The main SSH connections page has options to create an SSH connection.

To configure the SSH connection, complete the following task:

- 1 Click the **+** icon to add a new SSH Connection.
The **SSH Connections** page is displayed.
- 2 Enter the name of the SSH connection.

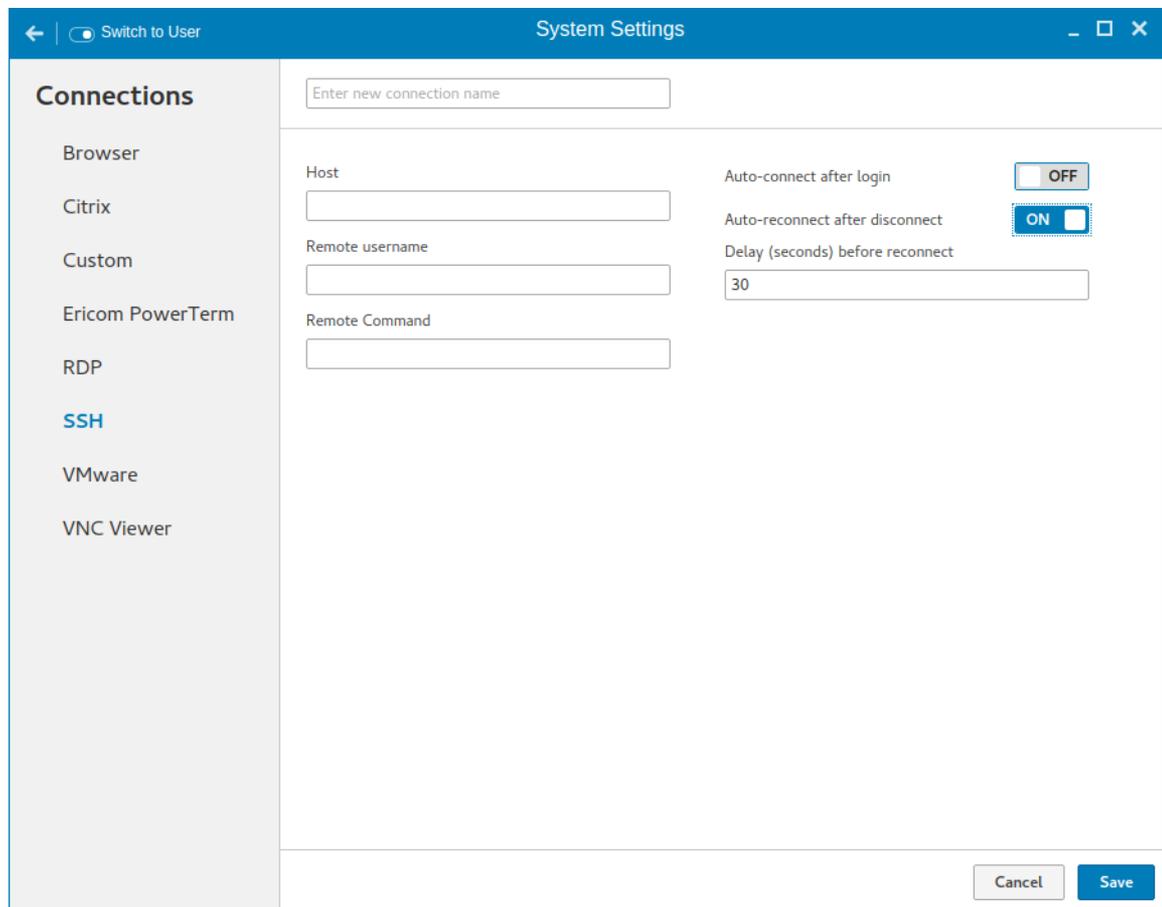

The screenshot shows the 'System Settings' window with the 'SSH' connection configuration page. The window title is 'System Settings' and it has a 'Switch to User' button in the top left. The left sidebar is titled 'Connections' and lists various connection types: Browser, Citrix, Custom, Ericom PowerTerm, RDP, SSH (highlighted in blue), VMware, and VNC Viewer. The main content area is for configuring a new SSH connection. It features a text input field at the top labeled 'Enter new connection name'. Below this are four input fields: 'Host', 'Remote username', and 'Remote Command'. To the right of these fields are three settings: 'Auto-connect after login' with an 'OFF' toggle, 'Auto-reconnect after disconnect' with an 'ON' toggle, and 'Delay (seconds) before reconnect' with a text input field containing the value '30'. At the bottom right of the window are 'Cancel' and 'Save' buttons.

Figure 56. SSH connection settings

- 3 Enter the IP address or FQDN of the SSH server that you want to connect.
- 4 Enter the Username to log in to the remote SSH Server.
- 5 Enter the command to run the program.
- 6 Click the **ON/OFF** button to enable or disable the Auto-connect after login option. If enabled, the connection is automatically connected after you log in to your thin client.
- 7 Click the **ON/OFF** button to enable or disable the Auto-reconnect after disconnected option. If enabled, the connection is automatically re-connected after you disconnect from the session.
- 8 Select the time duration in seconds to delay the reconnection attempt after a disconnection occurs.
- 9 Click **Save** to save the changes.

Configuring and managing VMware connections

The **VMware connections** page enables you to create and manage the View client 3.5 connections.

To configure the VMware settings, complete the following task:

- 1 Click the **+** icon to add a new VMware Connection.

The **VMware Connections** page is displayed.

- 2 Enter the name of the **VMware connection**.
- 3 Configure the following options in the **Login** tab.

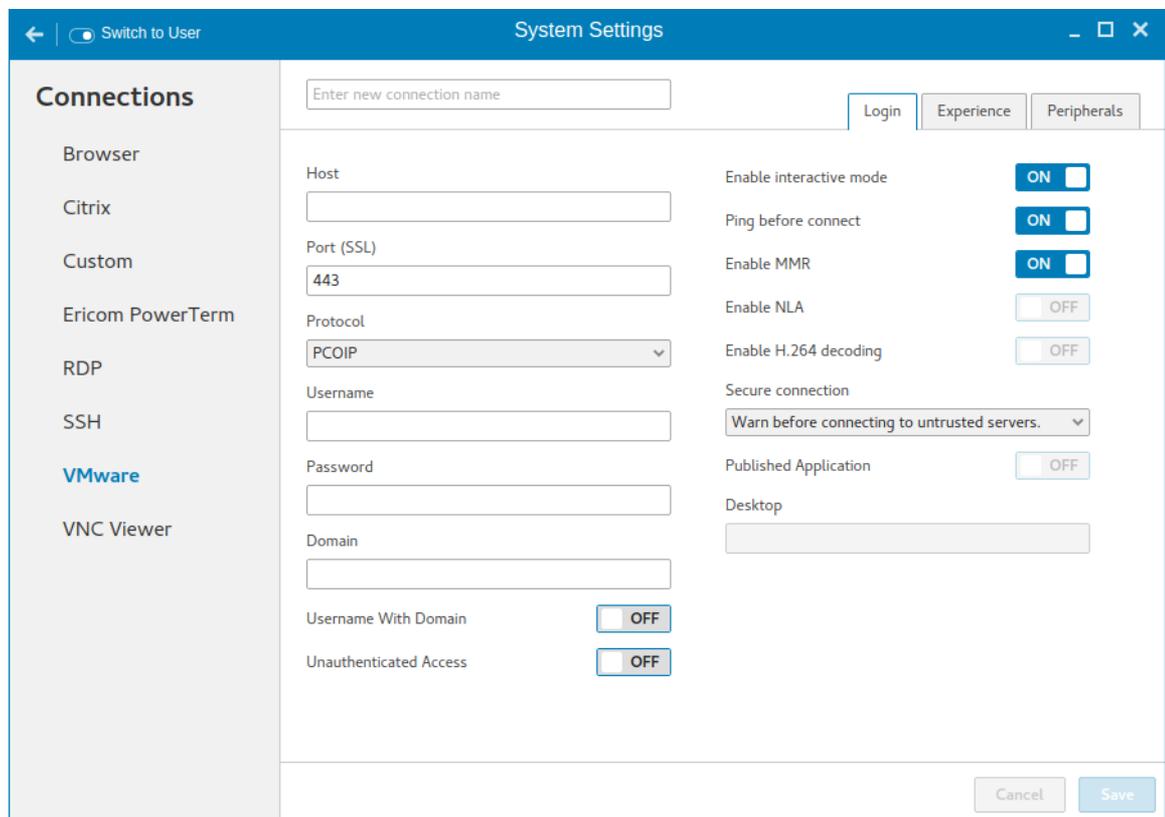


Figure 57. VMware connection login settings

Table 14. Login

Parameter	Description
Host	Enter the host name or IP address or FQDN of the Horizon of the VMware View Server.
Port	Enter the port number of the host.
Protocol	From the drop-down list, select the specific protocol. The available options are: <ul style="list-style-type: none"> • PCOIP • RDP • Blast

Parameter	Description
Username	Enter the User ID that is used to log in to the remote Horizon server.
Password	Enter the password that is used to log in to the remote Horizon server.
Domain	Enter the Domain name. It is used to log in the remote Horizon server.
Username with Domain	Click the ON/OFF button to enable or disable this option. If enabled, specify the domain along with user name.
Unauthenticated Access	Click the ON/OFF button to enable or disable this option. If enabled, specify the unauthenticated access username. Password and domain credentials are not required.
Enable interactive mode	Click the ON/OFF button to enable or disable this option. If enabled, then after a successful connection to the server, it displays all the published application and desktop icons. You can start the applications or desktop sessions based on your choice If disabled, then the Published Applications option is enabled in the Login tab, and selecting that option enables you to directly start the application or desktop that you specify.
Ping before connect	Click the ON/OFF button to enable or disable this option. If enabled, it pings the connection is checked in server IP/FQDN before connecting to a session.
Enable MMR	Click the ON/OFF button to enable or disable the multimedia redirection (MMR) feature. If enabled, the multimedia stream is processed on the thin client using a virtual channel.
Enable NLA	This option is available to configure when you select the protocol as RDP. Click the ON/OFF button to enable or disable this option. Enable the Network Level Authentication (NLA), if NLA is enabled on your remote computer. Your remote computer requires NLA user authentication before you establish a full Remote Desktop connection and the login screen is displayed.
Enable H.264 decoding	Click the ON/OFF button to enable or disable this option. Select this option to allow H.264 decoding in Horizon Client. When this option is selected (the default setting), Horizon Client uses H.264 decoding, if the agent supports H.264 software encoding. If the agent does not support H.264 software encoding, Horizon Client uses JPG/PNG decoding. Deselect this option to always use JPG/PNG decoding. This option is applicable only for VMware Blast protocol and RDP protocol.
Secure connection	Click the Secure Preferences tab and select any of the options that determine how the client should proceed when it cannot verify that your connection to the server is secure.
Published Application	Click the ON/OFF button to enable or disable this option. If enabled, specify the Published Application name. If disabled, specify the Published desktop name.

Parameter	Description
Desktop	If interactive mode is disabled, you can specify Published desktop name.
Application	If interactive mode is disabled, you can specify Published application name.

4 The following options must be configured in the **Experience** tab.

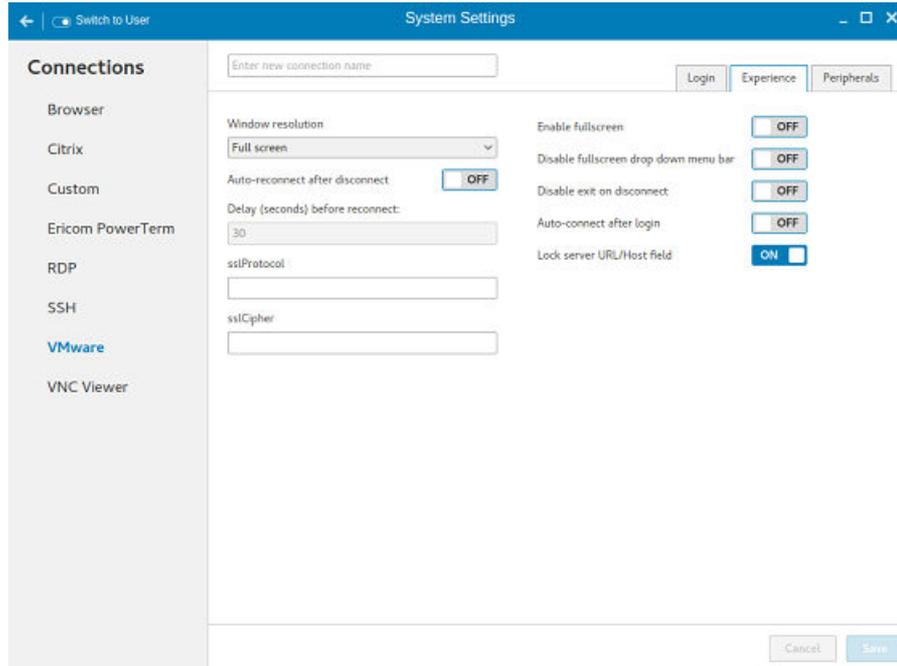


Figure 58. VMware connection experience settings

Table 15. Experience

Parameter	Description
Windows resolution	Select the Windows resolution that you want to get the best display on your monitor. The available resolutions are: Use All Monitors Full Screen Large Screen Small Screen 1024 X 768 800 X 600 640 X 480
Auto-Reconnect after disconnect	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically re-established after you disconnect from the session.

Parameter	Description
Delay (seconds) before reconnect	Select the time duration in seconds to delay the reconnection attempt after a disconnection occurs.
sslProtocol	Use the SSL protocol to securely connect to a web server over the insecure internet.
sslCipher	Use the SSL Cipher suite to secure your SSL connection.
Enable fullscreen	Click the ON/OFF button to enable or disable this option. Select this option to view the remote session in full screen mode in all the monitors.
Disable fullscreen drop down menu bar	Click the ON/OFF button to enable or disable this option. Select this option to disable the drop-down menu bar in the full screen mode.
Disable exit on the disconnect	Click the ON/OFF button to enable or disable this option. Select this option if you do not want the Horizon server to retry connecting if there is a connection error. You can typically select this option if you use kiosk mode.
Auto-connect after login	Click the ON/OFF button to enable or disable this option. Select this option to reconnect automatically after a disconnection occurs.
Lock server URL/Host field	Click the ON/OFF button to enable or disable this option.

5 Configure the following options in the **Peripherals** tab:

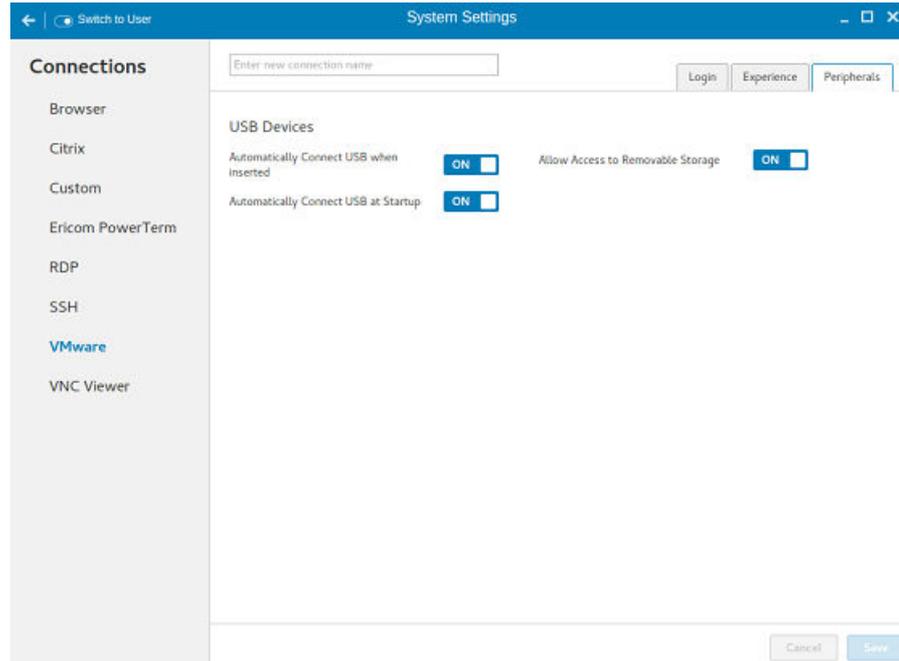


Figure 59. VMware connection peripherals settings

Table 16. Peripherals

Parameter	Description
Automatically Connect USB when inserted	Click the ON/OFF button to enable or disable this option. Select this option if you want to automatically connect your USB key to the thin client after you plug-in the USB key.
Automatically Connect USB at Startup	Click the ON/OFF button to enable or disable this option. Select this option if you want to automatically connect your USB key to the thin client when you start the system.
Allow Access to Removable Storage	Click the ON/OFF button to enable or disable this option. Select this option if you want to permit access to use removable storage devices.

6 Click **Save** to save the settings.

Configuring and managing the VNC viewer connections

The **VNC Viewer connections** page enables you to create and manage the VNC connections. The main VNC connections page has options to create a VNC connection.

To configure the VNC Viewer Settings, complete the following task:

- 1 Click the **+** icon to add a new VNC connection. The **VNC Viewer Connections** page is displayed.
- 2 Enter the name of the VNC connection.
- 3 The following options must be configured in the **Login** tab.

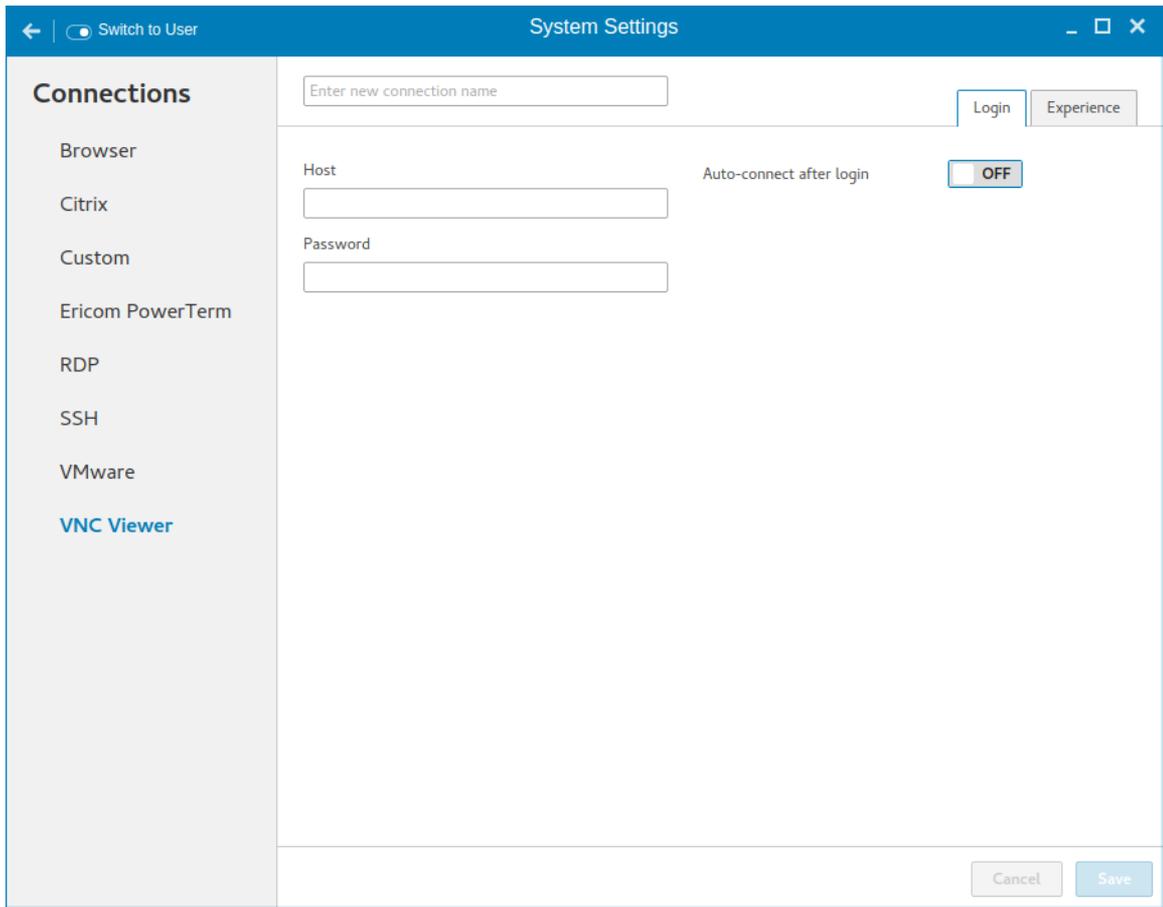


Figure 60. VNC viewer login settings

Table 17. VNC viewer login settings

Parameter	Description
Host	Enter the IP address or FQDN of the VNC server which you want to connect.
Password	Enter the password to log in to the remote VNC Server.
Auto-connect after login	Click the ON/OFF button to enable or disable this option. If enabled, the connection is automatically connected after you log in to your thin client.

- 4 The following options must be configured in the **Experience** tab.

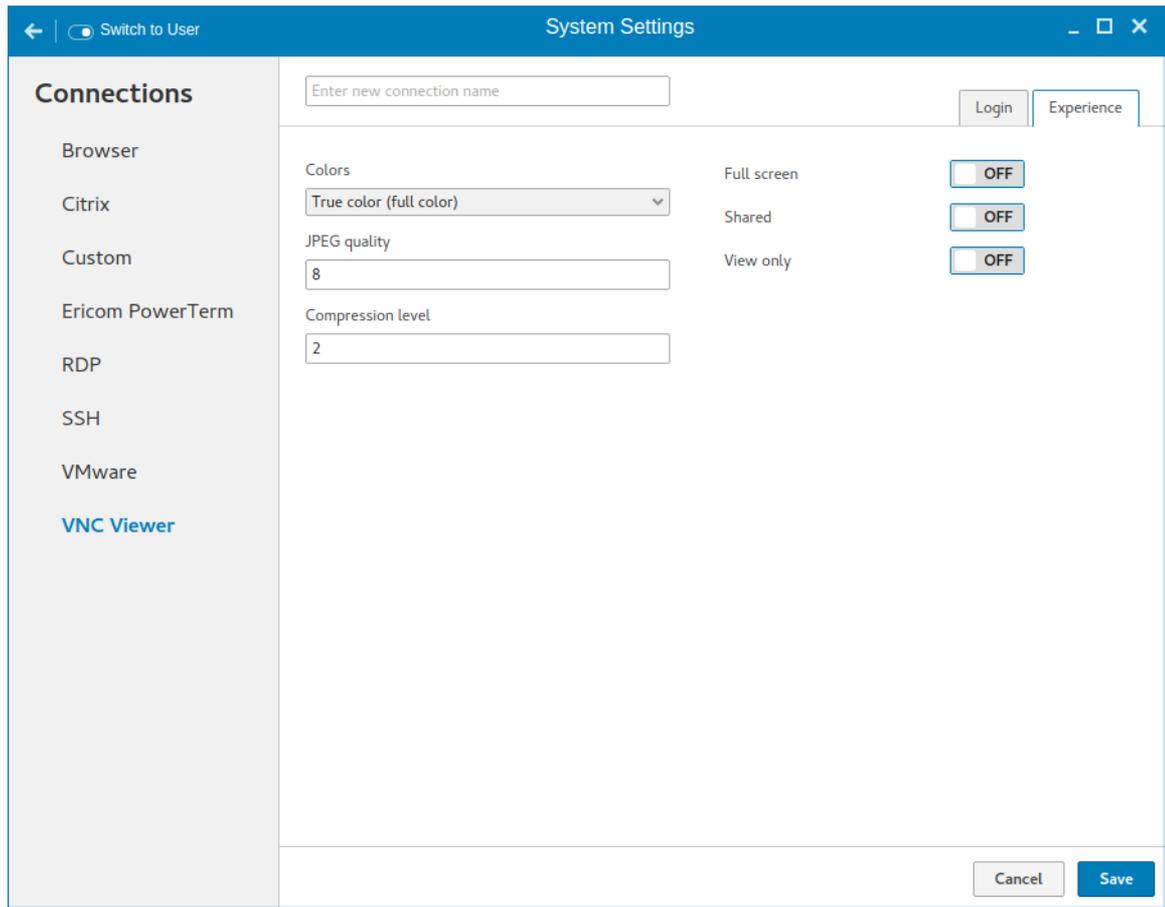


Figure 61. VNC viewer experience settings

Table 18. VNC viewer experience settings

Parameter	Description
Colors	Specifies the number of colors to display for each pixel. Select the session color mode to get the faster display performance on your monitor. The available options are:\ <ul style="list-style-type: none"> • True color (full color) • 8 colors (very low) • 64 colors (low) • 256 colors (medium)
JPEG quality	From the drop-down list, select the preferred value. The range for JPEG quality is 0-9, with 0 being poor quality and 9 being the best quality.
Compression level	From the drop-down list, select the preferred value. The range for compression level is 1-6. The 1 value explains the fast quality and 6 value explains the best quality.
Full screen	Click the ON/OFF button to enable or disable this option. If enabled, the connection is started in the full screen mode.

Parameter	Description
	It is not in the kiosk mode, click the standard VNC viewer f8 key to exit the full screen mode.
Shared	Click the ON/OFF button to enable or disable this option. If enabled, the connected desktop is in share mode.
View only	Click the ON/OFF button to enable or disable this option. If enabled, the connection is in view-only mode. Mouse and keyboard input to the remote machine is disabled.

5 Click **Save** to save the changes.

Security settings

On the **System Settings** page, click the **Security** icon. The following tabs are listed on the left pane of the System Settings page.

- SSH
- Certificates
- VNC
- Accounts

Topics:

- [Managing SSH server preferences](#)
- [Managing the certificates](#)
- [Setting VNC server preferences](#)
- [Managing the accounts settings](#)

Managing SSH server preferences

By default, **SSH Server** is disabled on the thin client. The Managing the SSH server screen is available only in Admin mode. It enables to configure the SSH server on the thin client.

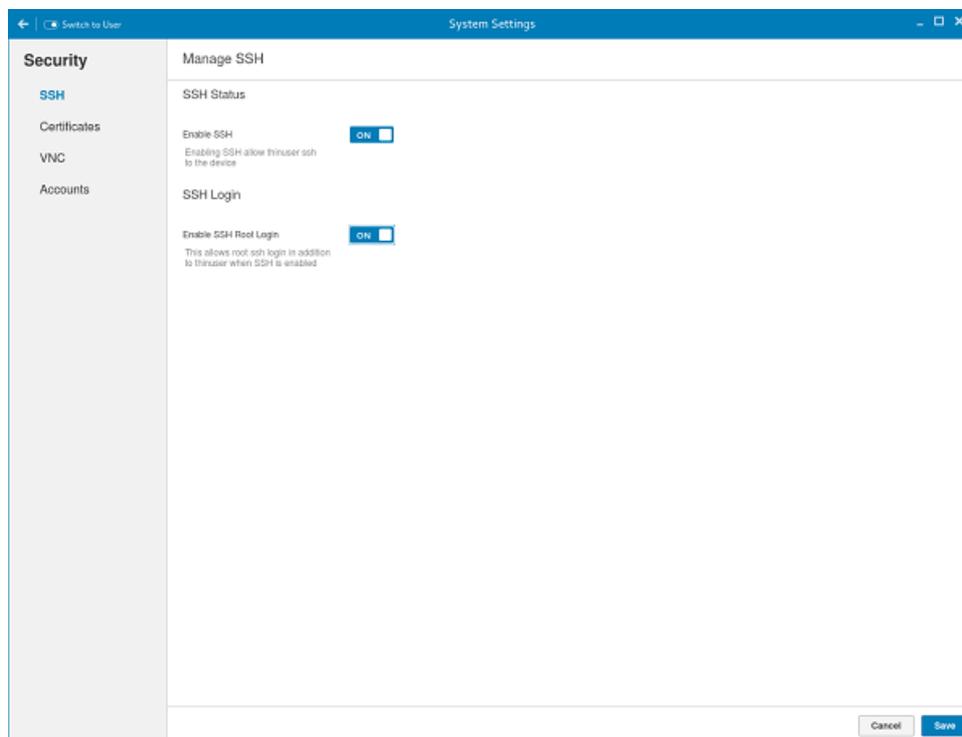


Figure 62. Manage SSH

Configure the following options:

- 1 Click the **ON/OFF** button to enable the **Enable SSH** option. If enabled, the SSH server starts working.
- 2 Click the **ON/OFF** button to enable or disable the **Enable SSH Root Login** option. When the **Enable SSH** option is enabled, the **Enable SSH Root Login** option is not enabled automatically.

3 Click **Save** to save the changes.

Managing the certificates

- 1 Click the **+** icon to import a new certificate.
The **Import Certificate** page is displayed.

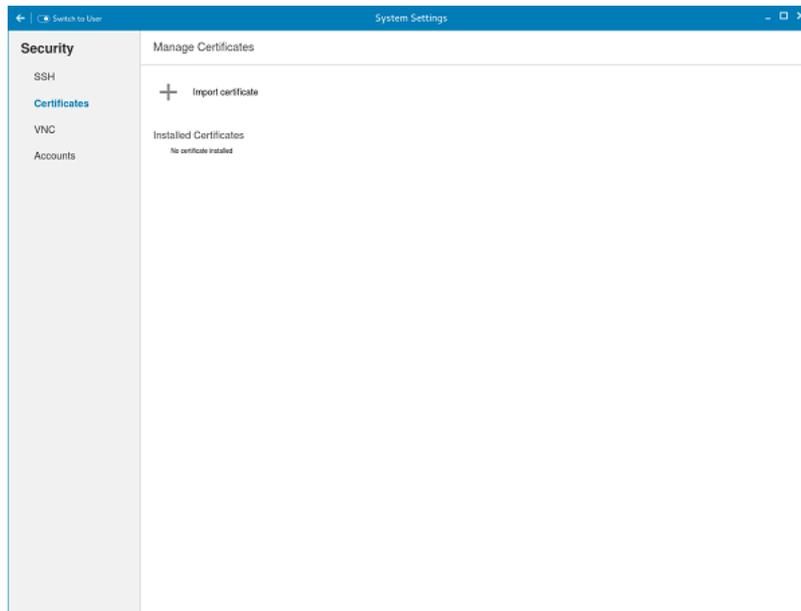


Figure 63. Import certificates

- 2 Select the preferred **Import Source** option.
 - Remote Server
 - Local Devices
 - a **Remote server**

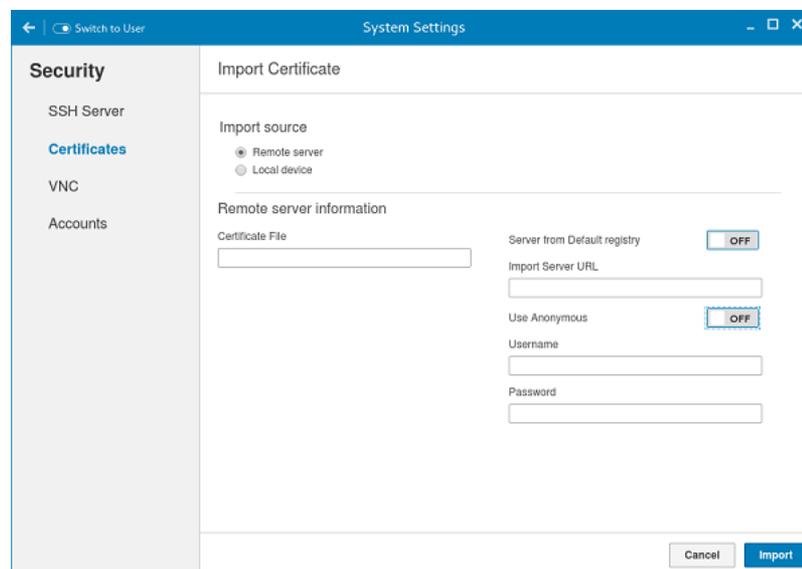


Figure 64. Import certificates remote server

- 1 If you select **Remote server** option, the remote server information is displayed.
 - a Enter the **Importing server URL**. The supported protocols are ftp, http, and https.
 - b Browse the required **Certificate File**.
 - c Click the **ON/OFF** button to enable or disable the **Server from default registry** option.
 - 2 **User Anonymous**: Click the **ON/OFF** button to enable or disable this option. If disabled, enter the Username and password required for the server.
- b **Local Devices**

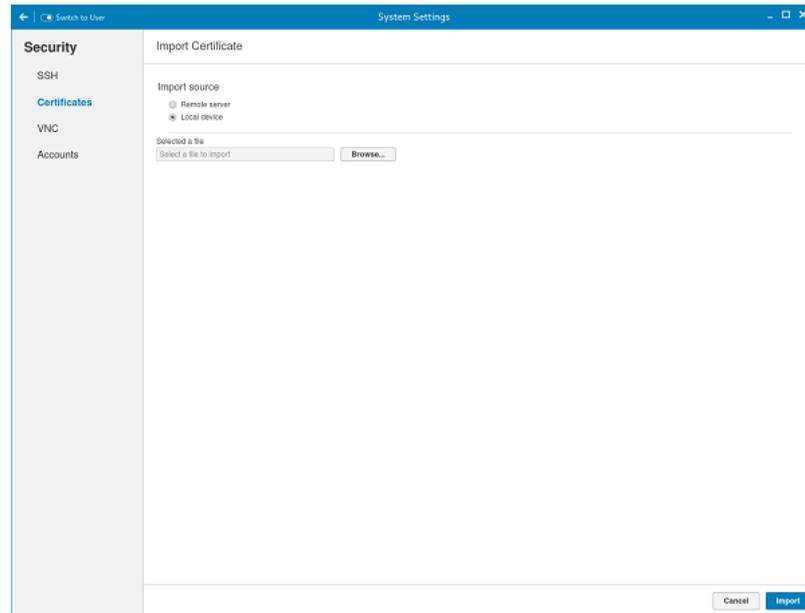


Figure 65. Import certificates local device

- 1 Click the **Browse** tab and navigate to the certificate that you want to use.
 - 2 Click **OK**.
- c Click **Import** to import the certificates.
- The installed certificates are shown as, Filename: certificate name.
- d To remove a certificate, move the cursor over it and click **Remove**.

Setting VNC server preferences

Use the VNC server page to configure the VNC server preferences.

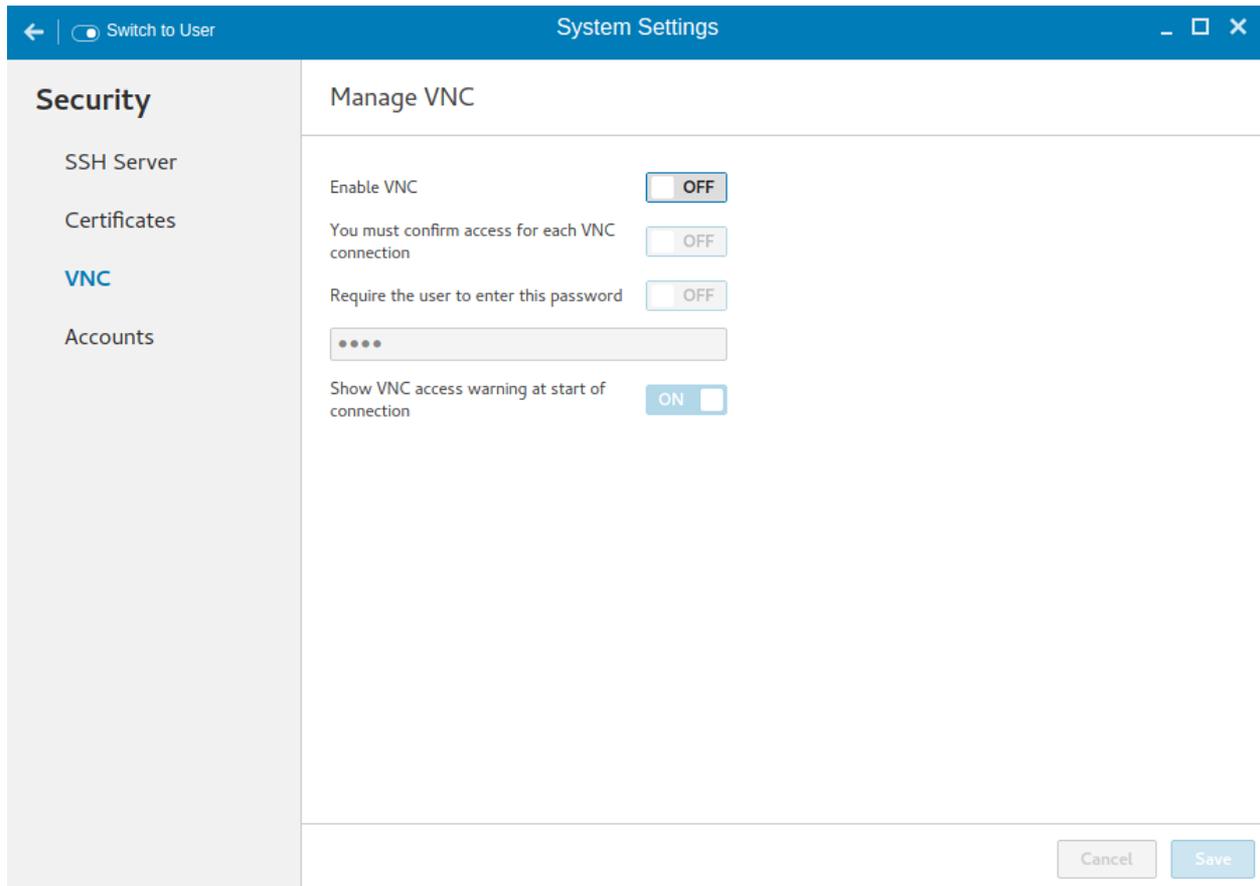


Figure 66. VNC server preferences

To configure the VNC server preferences:

- 1 Click the **ON/OFF** button to enable or disable the Enable VNC option.
- 2 Click the **ON/OFF** button to enable or disable the confirmation for accessing each VNC connection option.
- 3 Click the **ON/OFF** button to enable or disable the Require the user to enter this password option. If enabled, you can enter the password. Maximum length is 8 characters.
- 4 Click the **ON/OFF** button to enable or disable the option to show the VNC access warning at start of the connection.
- 5 Click **Save** to save the changes.

Managing the accounts settings

The Accounts management is a system built-in user account management and is available in admin mode only.

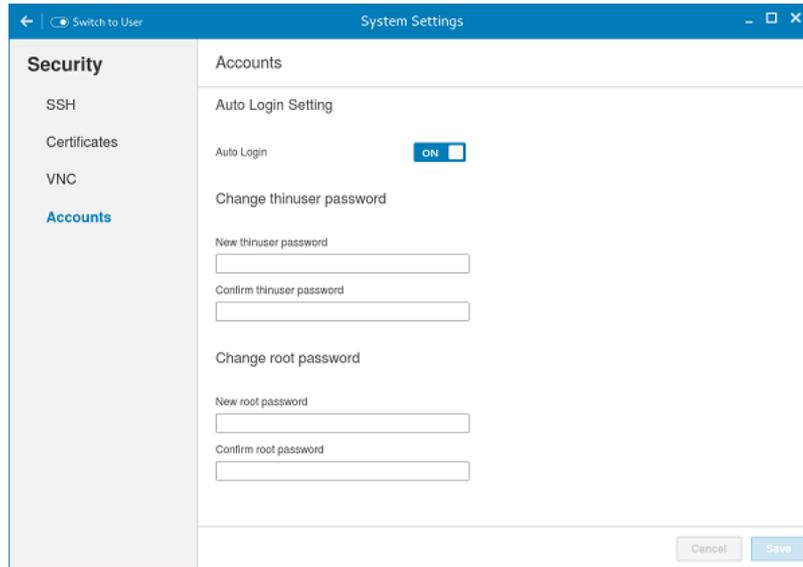


Figure 67. Account settings

To manage the account setting, complete the following task:

- 1 Click the **ON/OFF** button to enable or disable the Auto Login option.
- 2 Enter the following details to **Change thinuser password**:
 - New thinuser password
 - Confirm thinuser password.
- 3 Enter the following details to **Change root password**:
 - New root password
 - Confirm root password

Additional management configurations

On the **System Settings** page, click the **Management** icon. The following tabs are listed on the left pane of the **System Settings** page.

- Configuration
- HAgent
- INI
- Logs and Tool
- SCEP
- Wyse Device Agent

Topics:

- [Configuration management](#)
- [HAgent](#)
- [INI management](#)
- [Logs and Tools](#)
- [SCEP configuration management](#)
- [Wyse Device Agent](#)

Configuration management

You can manage the device configuration stored locally. Use import and export options to deploy the configuration to the other devices.

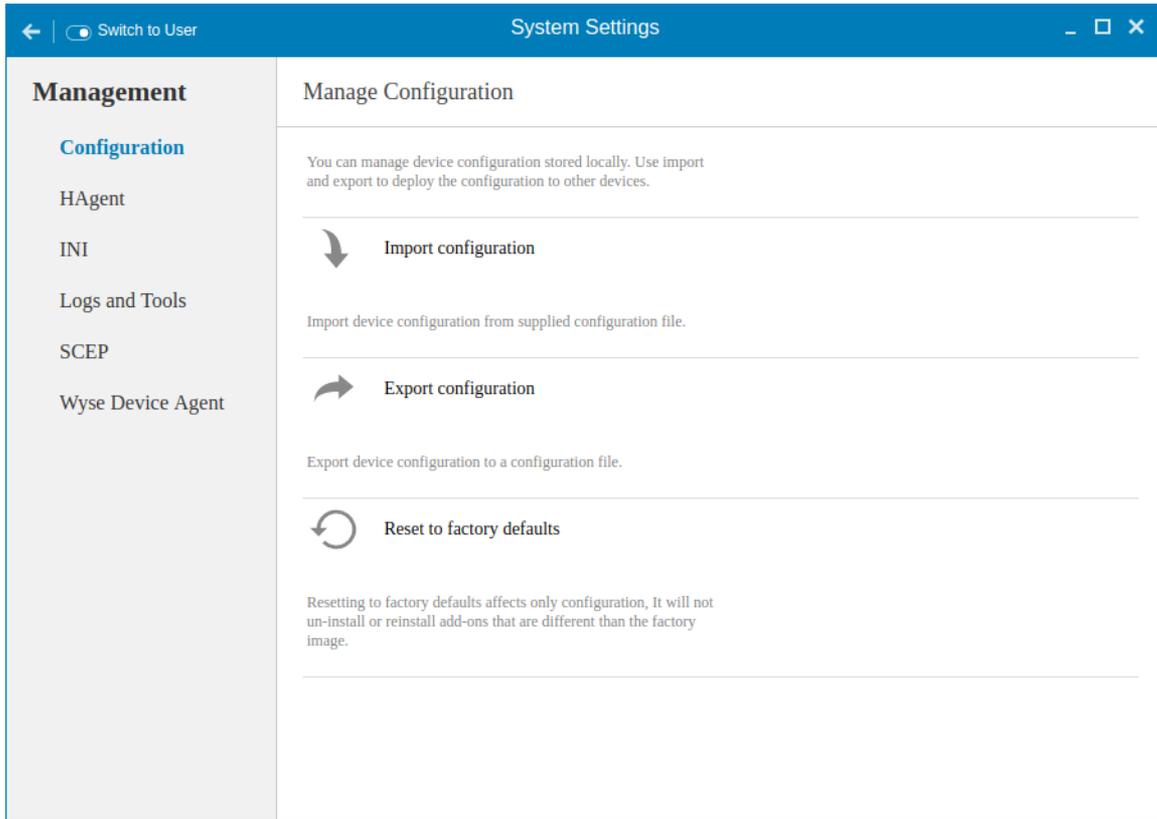


Figure 68. Manage configuration

- 1 Click the **+** icon to import device configuration from provided configuration file. The **Import Device** configuration page is displayed and you are prompted to restart the system.
- 2 Select the preferred **Import Source** option.
 - Remote Server
 - USB Devices
 - a **Remote server**
 - 1 If you select **Remote server** option, the remote server information is displayed. Enter the **Importing file URL**. The supported URLs are ftp, http, and https.
 - 2 Click the **ON/OFF** button to enable or disable the Use Anonymous option. If disable, enter the Username and password required for the server.
 - 3 Click **Import** to import the configuration.
 - b **USB Devices**
 - 1 Click the **Browse** tab.

 **NOTE:** You must insert the USB device to import the files.
 - 2 Click **Import** to import the configuration.
- 3 Click the icon to Export device configuration to a configuration file. The **Export device configuration** page is displayed.
- 4 Select the preferred **Export Destination** option.
 - Remote Server
 - USB Devices
 - a **Remote server**
 - 1 If you select **Remote server** option, the remote server information is displayed. Enter the Configuration file, and export server URL. The supported URLs are ftp, http, and https.

- 2 Click the **ON/OFF** button to enable or disable the Use Anonymous option. If disable, enter the Username and password required for the server.
- 3 Click **Export** to export the configuration.
- b **USB Devices**
 - 1 Click the **Browse** tab. Use the folders and command buttons to find and specify the export path and file you want to use.
 - 2 Click **OK**.
- 5 Click the icon to **Reset to factory defaults**.
 - a A warning message is displayed. If you click **OK** the system is automatically restarted. Resetting to factory defaults affects only configuration, it will not uninstall or reinstall add-ons that are different than the factory image.

HAgent

WDM is a device management solution which helps you to manage cloud clients securely from remote infrastructure. WDM management solution involves both server and client components where client software also known as **HAgent** should be installed on each thin client device for management through WDM.

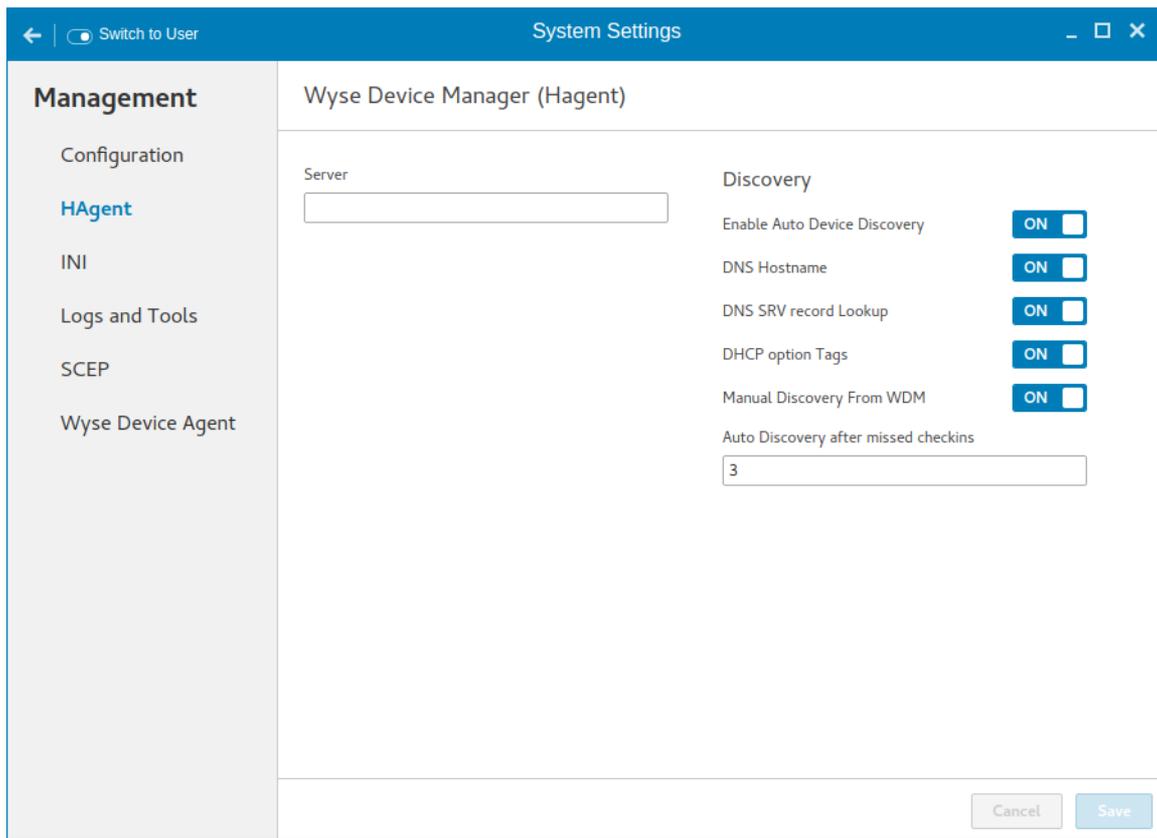


Figure 69. Wyse Device Manager - HAgent

- 1 Enter the **Wyse Device Manager Server** name in input box.
- 2 The following options can be configured. This is an admin only configuration in the thin client.

Table 19. Wyse Device Manager Server

Parameter	Description
Enable Auto Device Discovery	Click the ON/OFF button to enable or disable this option.

Parameter	Description
	This option enables or disables the discovery of Thin Clients by DNS Hostname , DNS SRV record Lookup , DHCP option Tags.
DNS Hostname	Click the ON/OFF button to enable or disable this option. This option will take effect if Enable Auto Device Discovery is in OFF state. When this option is in ON state, then the clients are discoverable using DNS Host name.
DNS SRV record Lookup	Click the ON/OFF button to enable or disable this option. Auto Device Discovery is in OFF state. When this option is in ON state, then the clients are discoverable using DNS SRV record lookup.
DHCP option Tags	Click the ON/OFF button to enable or disable this option. This option will take effect if Enable Auto Device Discovery is in OFF state. When this option is in ON state, then the clients are discoverable using DHCP options Tags.
Manual Discovery From WDM	Click the ON/OFF button to enable or disable this option. If this option is enabled, the WDM server will be able to discover the client through manual discovery.
Auto Discovery after missed checkins	Enter the Auto Discovery after missed checkins . The allowable number of missed check-in attempts before going for auto discovery of Wyse Device Manager.

- 3 Click **Save** to save the changes.

INI management

On the **Manage INI Configuration** page, complete the following task:

- 1 Click the **ON/OFF** button to enable or disable the Enable INI Configuration option. By enabling INI Configuration you can manage this device by configuration files stored on the server or locally.
- 2 From the drop-down list, select the Configuration source.
 - a Select the Local only source as configuration source. The INI configuration is stored locally on the device.
 - b Select the Server only source as configuration source.
 - Click the **ON/OFF** button to enable or disable the specify server details manually option. The INI configuration downloads from the server during every restart of your thin client. If enabled, enter the Server URL, User name, and password for the secure server.
 - c Click the **ON/OFF** button to enable or disable the server and Local option. The INI Configuration downloads from the server during every restart of your thin client and if the server is not available, local configuration is used. If enabled, enter the Server URL, Username and password for the secure server.

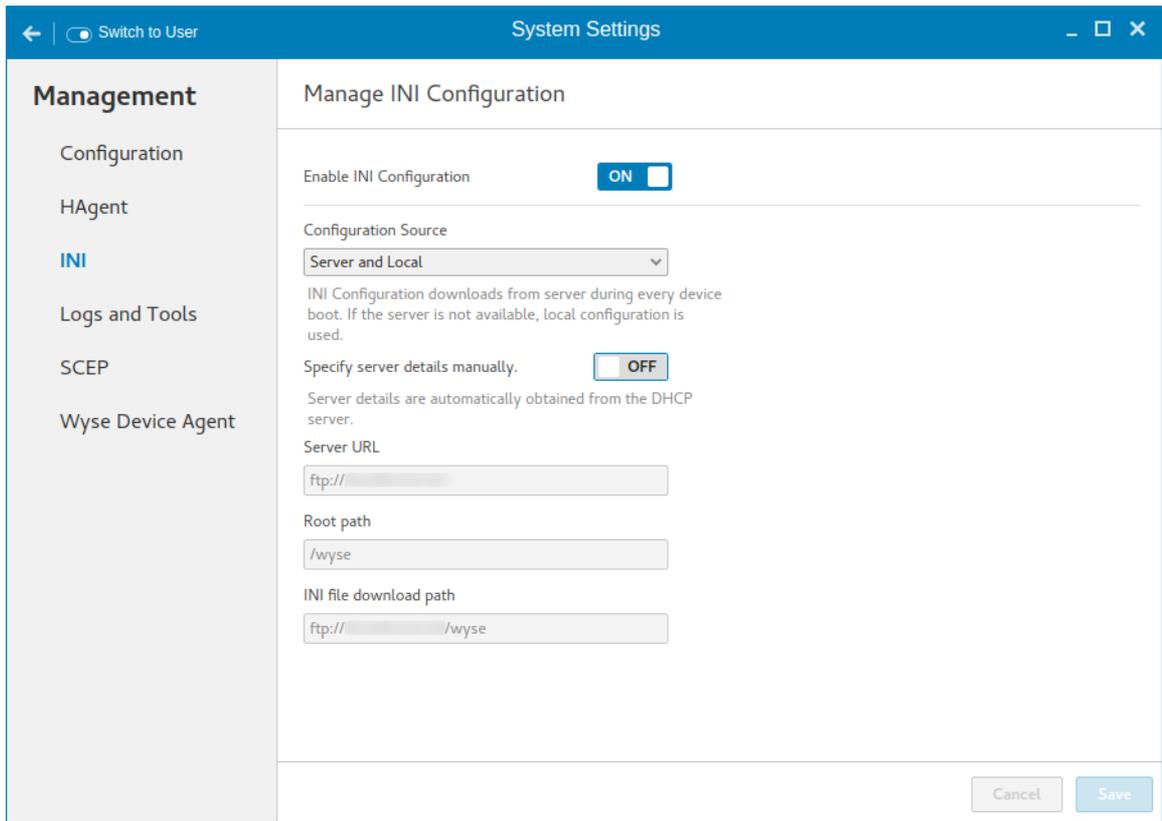


Figure 70. Manage INI configuration

- 3 Click **Save** to save the changes.

Logs and Tools

The Logs and Tools section provides the tools for troubleshooting and diagnostics purpose. By default the **Logs and Tools** screen is available only for admin mode.

- 1 Click the **Logs** tab to view and export system logs.
The Logs tab shows a list of system logs from where you can select a particular log file to view the contents and search text within the content.
- 2 Check the check box shown on the left side of Log file name to select log files and click the **Export** button to export logs into a USB drive or remote file server.
You can choose one of the following options from export dialog to export logs.

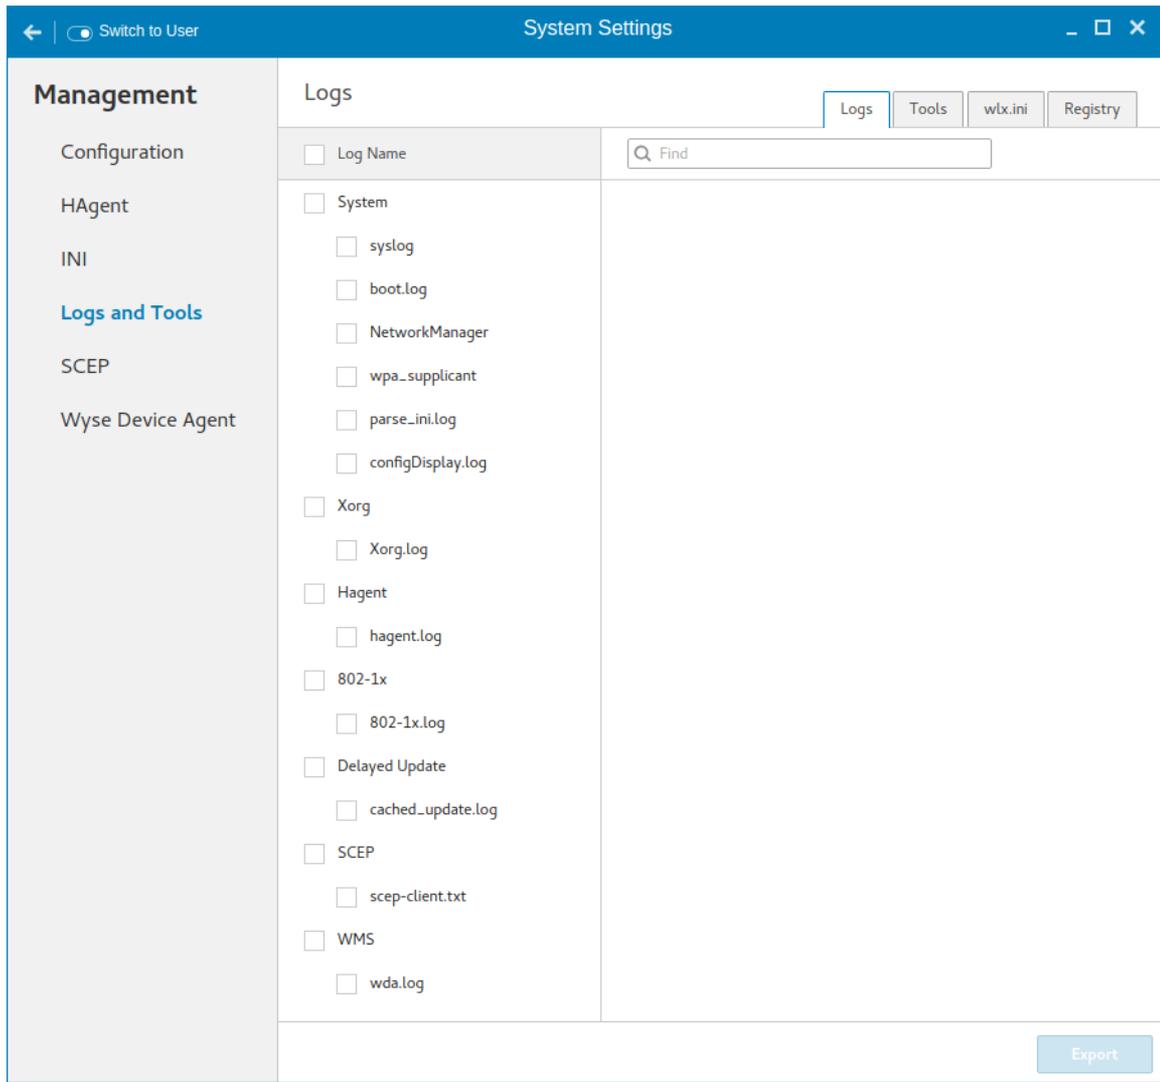


Figure 71. Logs

- a Select an option to **Export logs**:
 - If you select Remote server option, enter remote file server URL in **Export server URL** input box and enter your credentials if **Use anonymous** switch button is not enabled.
 - If you select USB Drive option.
 - 1 Click the Browse tab. The File browser dialog box is displayed. Select a directory from listed USB drive.
 - 2 Click **Export** to export the logs.
- 3 Click the **Tools** tab to configure the following:

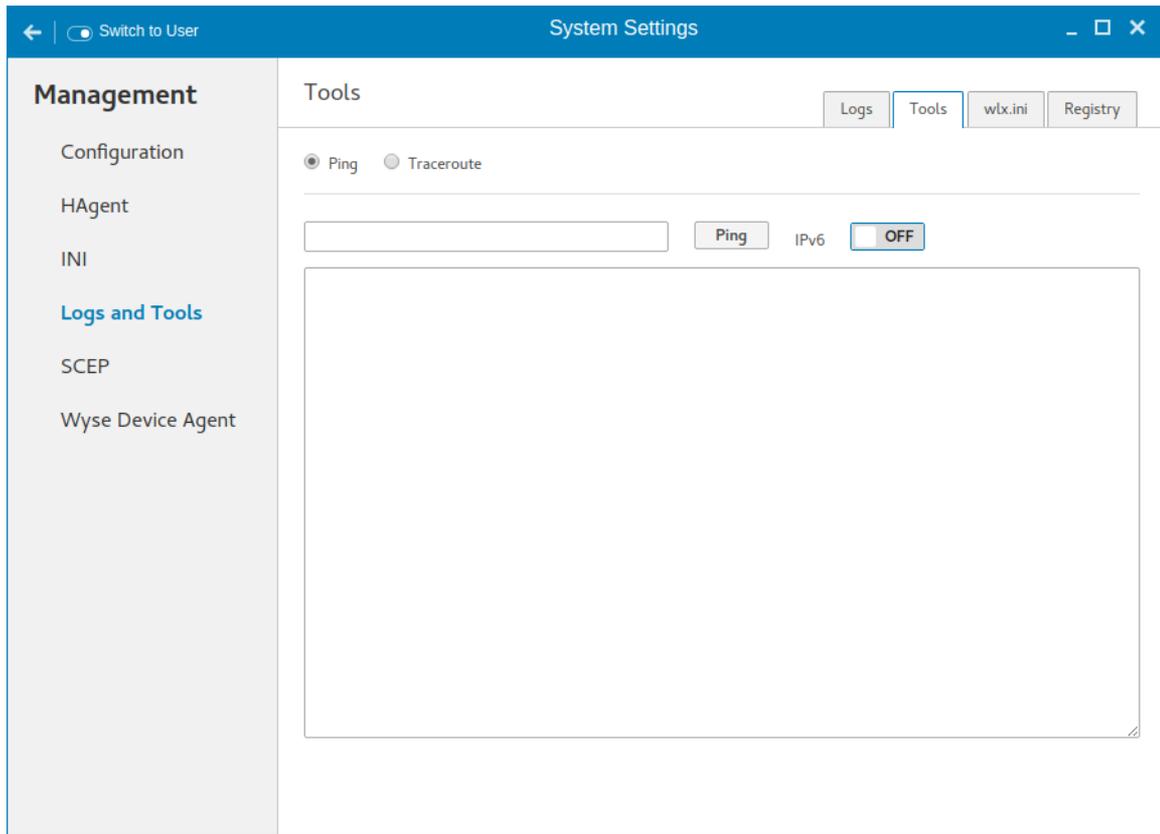


Figure 72. Tools

- a Enter or select a destination from the drop-down list and click **Ping**.
 - b Enter or select a destination from the drop down list and click **Traceroute**.
The output of ping or traceroute appears in the text area.
 - c Click the **ON/OFF** button to enable or disable ping or traceroute for an IPv6 address.
- 4 Click the **wlx.ini** tab to view the contents of wlx.ini file downloaded from INI server:

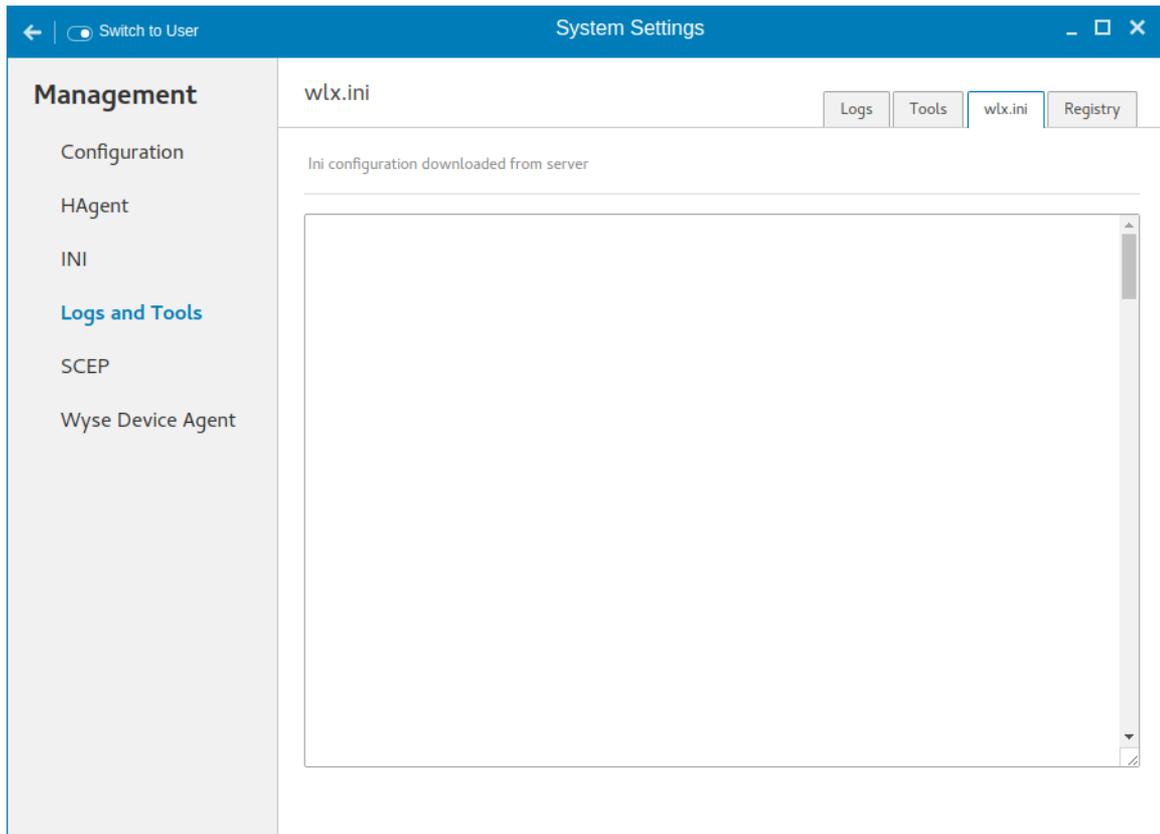


Figure 73. wx.ini

- 5 Click the **Registry** tab to view contents of device registry. You can navigate through different types of registry by choosing appropriate ones from the **Registry** drop-down list.

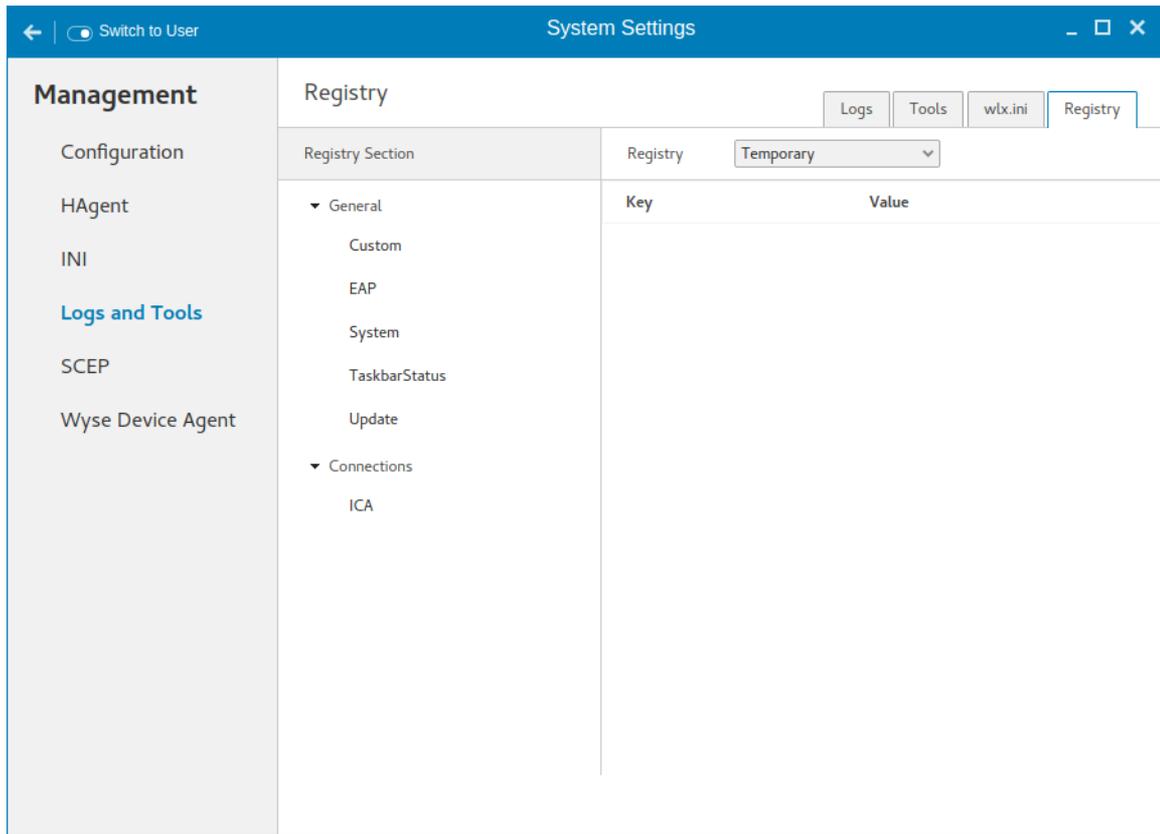


Figure 74. Registry

The available options are:

- **Temporary**—To view contents of temporary registry
- **Save**—To view contents of save registry
- **Permanent**—To view contents of permanent registry

Select the **Registry** option from the drop-down list and the contents of the device registry selected by you are displayed.

SCEP configuration management

- 1 Click the **+** icon to add a new certificate.

← Switch to User System Settings

Management

- Configuration
- HAgent
- INI
- Logs and Tools
- SCEP**
- Wyse Device Agent

Please enter the new Certificates name here

Server URL

Challenge Password

CA Distinguished Name

Cancel Save

Figure 75. SCEP configuration

- 2 Enter the **Server URL**, **Certificate name** and **CA Distinguished name**.
- 3 Click **Save** to save the changes.
- 4 Select the certificate and click **Enroll**.

Wyse Device Agent

Wyse Device Agent (WDA) on the ThinLinux device supports only the features of Wyse Management Suite. Wyse Device Agent is for configuring the client settings and registering a ThinLinux device into Wyse Management Suite. This is available only for admin user. If the device is not registered to a Wyse Management Suite server, the **Wyse Device Agent** screen shows the registration status as **Not Registered**.

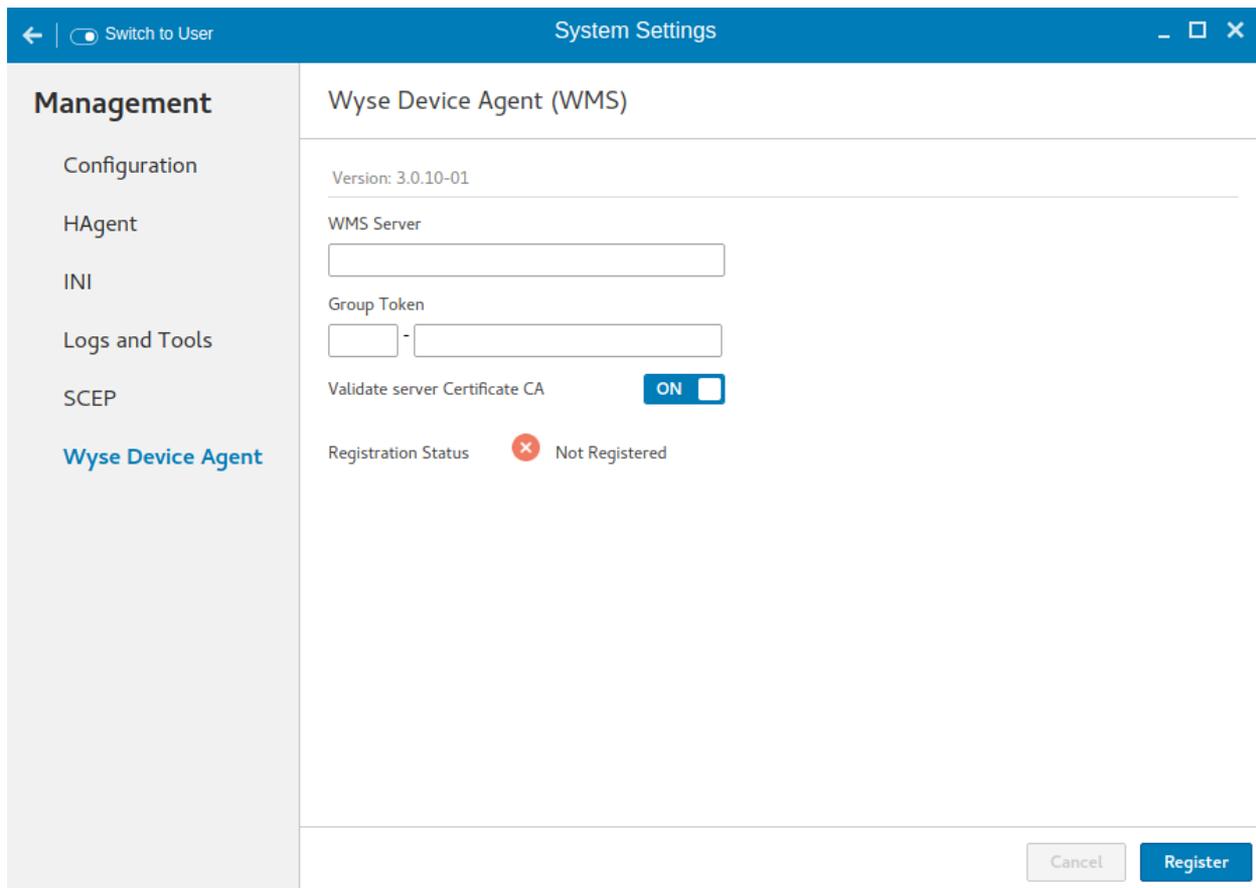


Figure 76. Wyse Device Agent

- 1 In the **WMS Server** input box, enter the URL of Wyse Management Suite server.
- 2 In the **Group Token** input boxes, enter your group registration key to manage your ThinLinux device. This is a unique key for registering your thin client device. Thin clients can be directly registered to Groups directly and must have a Group Registration Key enabled to perform this action.
- 3 Click the **ON/OFF** button to enable or disable the Validate server certificate option. Enable this option to perform server certificate validation for all device-to-server communication.
- 4 Do one of the following options:
 - Click **Register** to register your thin client on the Wyse Management Suite server. When your thin client is successfully registered, the status is shown as **Registered** with green color icon next to the **Registration Status** label. The caption of the **Register** button changes to **Unregister**.
 - Click **Unregister**, if you want to remove your thin client from the Wyse Management Suite. If Unregister fails, a dialog box for the **Force Unregister confirmation** is displayed. Click **Yes** to forcefully unregister your device which is managed by Wyse Management Suite. When you perform Register or Unregister or Force Unregister from the Agent screen, the applet should not be closed until Registration Status. After successful registration, you can access the Wyse Management Suite console where you can view and manage Device Asset Details, Real-Time commands, and the Troubleshooting information of your registered thin client.

Directing the thin client to Wyse Management Suite server:

To direct your thin client to the Wyse Management Suite server, you must provide the Wyse Management Suite/MQTT server details and the Group registration key. These details are discovered by Wyse Device Agent using any of the following ways:

- **Using DNS SRV record**—You can register devices with the Wyse Management Suite server if DNS SRV record fields are set with valid values. For more information about registering devices by using DNS SRV record, see the Wyse Management Suite Administrator's Guide.
- **Using DHCP scope options**—You can obtain the Wyse Management Suite/MQTT server details and Group Registration Key by querying the DHCP server with following option tags:
 - 199 – Scope option for Group Token (type = String, value = Wyse Management Suite-group-key).

- 165 – Scope option for the Wyse Management Suite server.
- 166 – Scope option for MQTT server—Optional.
- 167 – Scope option for CA Validation—Optional.
- **Using INI parameter**—You can use the following INI parameters to direct the thin client to the Wyse Management Suite server:
CCMEnable={yes,no} CCMServer=<Wyse Management Suite Server URL>
GroupRegistrationKey=<tenant code-group code>

NOTE: When INI discovery method is used for registering the device, if you want to unregister the device, you must delete the INI parameters and restart the device first and then unregister the device. Else you have to perform the unregister process twice. For more information, see [Dell Wyse ThinLinux INI Reference Guide](#).

- **Using the Wyse Device Agent screen**—You can use the Wyse Device Agent screen to register devices with the Wyse Management Suite server. To configure the Wyse Device Agent, follow the steps 1–4 in this section.

Viewing XTerm

XTerm is the standard terminal emulator for the Xterm Window System. Use the terminal emulator window for X to access a text terminal and all its applications such as command line interface (CLI) and text user interface applications.

 **NOTE: By default, XTerm is available only in Admin mode.**

To use the Xterm option:

- 1 On the **Application overview** screen, click Xterm.
The terminal emulator window is displayed.
- 2 Type help and press Enter to display a verbose message describing XTerm options.

Imaging solutions

This section describes about the imaging options available for ThinLinux.

Merlin imaging

Merlin imaging is supported through Wyse Management Suite, Wyse Device Manager (WDM) and USB Imaging Tool. For more information, see Wyse Device Manager Administration Guide, USB Imaging Tool User's Guide, or Wyse Management Suite Administrator's Guide.

Merlin Imaging from file server without management server

To create and use merlin.rsp and imaging files to perform Merlin imaging on device from File Server, complete the following task:

- 1 Extract and copy Merlin image rsp and contents on any File Server location, for example, `2.0.x_3040_merlin.rsp` and `commandsXml.xml`, `efi`, `mbr`, `recovery`.
- 2 Rename the RSP file which is available in Merlin Image folder, for example, from `2.0.x_3040_merlin.rsp` to `merlin.rsp`.
- 3 Copy `merlin.rsp` and other imaging files to the \$PLATFORM sub-directory on the FTP location. Place the image at the correct <PLATFORM> subfolder. This is because the Merlin imaging is platform dependent.
- 4 Provide this path as value for `MerlinUpdate.URL` parameter in INI file, and if needed provide credentials for FTP server using `MerlinUpdate.Username` and `MerlinUpdate.Password` parameters and restart the thin client. For example, if the device model is Wyse 3040 thin client, copy the image and rsp file under `ftp://<IP>/<directory>/3040/` folder, but mention URL as `ftp://<IP>/<directory>/`. The Macro \$PLATFORM is automatically appended.

NOTE: Merlin imaging through File Server works only when you provide URL using INI parameters; if you provide the same values on the Update Settings page, the imaging does not work.

After restart, Merlin image is downloaded through Delayed Update. A notification is displayed after Merlin image ready. The Merlin imaging takes place after restart. Merlin image is not downloaded, if Delayed Update is disabled.

Limitations:

- If the image version on thin client and Merlin image version on FTP server are the same, then imaging does not take place.
- Downgrading is always allowed for Merlin image. There is no force imaging for Merlin.
- Changes are not preserved after Merlin imaging.

Password encoding

By default, base-64 encoding is enabled for all passwords when you use INI parameters. If you want to use AES encoding, then generate an AES encoding password by using the **WyselNIkeyCrypt.exe** tool.

ThinLinux supports the following two password encoding methods for all the passwords in **Connections and Global** settings that are used in the INI parameters:

- Base64 password encoding, see [Base64 passcode encoding](#).
- AES password encoding, see [AES password encoding](#).

Copy the generated encoded password and place it in the INI file where the password field is mapped.

NOTE: Non-English characters are not supported for AES password encoding.

Topics:

- [Base64 passwords encoding](#)
- [AES password encoding](#)

Base64 passwords encoding

By default, all passwords in the INI file are base-64 encoded. To generate a base-64 encoded password, do the following:

- 1 Log in to the thin client.
- 2 Open **xterm**. This is a standard terminal emulator for the X Window System.
- 3 Enter `regencode` followed by a password in plain text.

For example, to encode the string **password**, enter `$ regencode password`. The encoded output is `cGFzc3dvcmQ=`.

You can also use the **WyselNIkeyCrypt** tool to generate encoded passwords.

AES password encoding

All passwords that are related to connections and users in the INI file can be AES encoded. For AES encoding support, add `PasswordEncryptionCode=2` parameter in the INI file.

To generate AES encoded password, do the following:

- 1 Log in to the thin client.
- 2 Copy the **WyselNIkeyCrypt.exe** on any Windows machine.
- 3 Double-click the `.exe` file.
The **Dell Wyse Password Encoder** window is displayed.
- 4 Enter the plain text password in the **Password to encode** edit box.
- 5 Click **Encrypt** to generate the AES encoded password.

Central configuration—Automating updates and configurations

This appendix describes how to set up your environment to provide your thin clients running Dell Wyse ThinLinux with automatic updates and configurations.

NOTE: Dell thin clients do not require device management software. They are configured to obtain their IP address, as well as the location of firmware and configuration instructions, from a DHCP server. However, you can use WDM or the Dell Wyse USB Firmware Tool for a more hands-on management of client configurations and updates.

Topics:

- [How INI files are employed](#)
- [Setting up the automatic configurations and updates](#)

How INI files are employed

INI files that are created and maintained by the network administrator, determine how the thin client is configured and updated. The thin client accesses INI files from the server during the initialization process. Typically, INI files are accessed through FTP, HTTP, and HTTPS; if no protocol is specified, the default is anonymous FTP.

IMPORTANT: The INI file processing hierarchy is as follows:

- **Scenario 1** — MAC.ini exists. The MAC.ini file is processed and if the Include=W LX.ini statement is included, then the W LX.ini file is processed.
- **Scenario 2** — W LX.ini exists. The W LX.ini file is processed.
- **Scenario 3** — No ini files exist. Local configuration is applied.

INI files are employed as follows:

- **wlx.ini** — This is the global INI file. One wlx.ini file is available to all users. It contains global parameters for all thin clients accessing the server. If the operating system cannot find wlx.ini, it defaults to wnos.ini.
- **MAC.ini** — This file can be used for device-specific configuration. If the thin client locates this INI file that is stored in the same directory as wlx.ini, wlx.ini is not accessed, unless you use the include=wxl x.ini parameter.

NOTE:

The placement of the include=wxl x.ini parameter within the MAC.ini file dictates which value takes priority for a same specific parameter that is contained in both the wlx.ini file and the MAC.ini file but is defined differently that is different values for the same parameter.

For example, if the wlx.ini file has parameterA=valueB, and the MAC.ini file has the same parameterA=valueC, then:

- If the include=wxl x.ini parameter is included in the MAC.ini file before the parameterA=valueC statement, then the wlx.ini parameterA=valueB is discarded and parameterA=valueC from the MAC.ini file is the final value used.
- If the include=wxl x.ini parameter is included in the MAC.ini file after the parameterA=valueC statement, then the MAC.ini parameterA=valueC is discarded and parameterA=valueB from the wlx.ini file is the final value used.

When a thin client is initialized, it accesses the global wlx.ini file. For detailed information on constructing and using INI files, see Dell Wyse ThinLinux INI Reference Guide.

NOTE:

If both PNAgent and a user profile are being used, the username must be defined in the Windows domain that is used. Also the password must be the same for the domain and the profile.

Setting up the automatic configurations and updates

For a Dell thin client running Dell Wyse ThinLinux to successfully access INI files and update itself from a server, you must set up the server with the correct folder structure where the INI files and other update files are located, direct the thin client to the server, and then reboot or start the thin client.

After DHCP and servers are configured and available, the thin client checks at each restart to see whether or not any updates are available on a predefined server. If updates are available, the updates are automatically installed.

NOTE: DHCP Option #161 specifies the server URL, DHCP Option #162 specifies the root path to the server.

This involves two tasks:

- 1 Preparing the Root Directory and Folder Structure on the Server
- 2 Directing the Thin Client to the Server

Preparing the root directory and folder structure on the server

To prepare the root directory and folder structure on the server:

- 1 Set up the following folder structure on your server under the **C:/inetpub/ftproot** folder for FTP or **C:/inetpub/wwwroot** folder for HTTP or HTTPS and place your INI files and other necessary files inside the structure as noted.
- 2 This list describes the folder structure, starting with the root directory.

Table 20. Root directory

/wyse/	The root directory. It stores the wlx2 folder and the add-ons folder.
/wyse/wlx2	The main INI configuration folder. It stores the following: <ul style="list-style-type: none">• wlx.ini file or MAC.ini file• bitmap folder• certs folder• ini folder
/wyse/wlx2/bitmap	The folder where you can place custom images you plan to use.
/wyse/wlx2/certs	The folder where you can place the CA certificates that can be imported to a thin client. NOTE: To import the certificates to the thin clients, use the Certs and ImportCerts INI parameters.
/wyse/addons	The folder where you can place the add-ons you want to use. It also stores the directory file and the .deb packages available to be installed on the thin client. The directory file should list all available add-ons. The directory file is required in the add-ons folder to guarantee that add-ons are properly located.

Be sure to create/activate the two required MIME Types— **.ini** and **.**, under IIS on a per site basis to enable downloading. Also be sure your Web server can identify the file types used by Dell thin clients.

- 3 On your IIS server, use the **File Types** menu to add a New Type.
- 4 In the **File Type** dialog box, Use the following details :
 - a **To create/activate the .ini MIME Type**—Enter the Associated extension **.ini** and Content type (MIME) **text/plain**.
 - b Click **OK** to apply the settings.
 - c **To create/activate the . MIME Type**—Enter the Associated extension **.** and Content type (MIME) **text/plain**.
 - d Click **OK** to apply the settings.

Directing the thin client to the server

After you set up the folder structure and populate it with the correct files, Dell recommends that you use DHCP to direct the thin client to the location of the server.

To direct the thin client to the server:

Using DHCP—When using DHCP to direct the thin client to the location of the server, information about the server and root directory is obtained from the following DHCP options:

- a **161**—The server.
- b **162**—Root path to the server-ftp/http/https.
 - If no root path is defined, /wyse is assumed
 - If a root path is defined, the additional path will be appended to the URL supplied by option 161.
- c **184**—Server username to the server specified in option 161. This is optional.
- d **185**—Server password to the server specified in option 161. This is optional.

IMPORTANT:

Check-in for firmware updates is done early in the boot process. For that reason, changes in DHCP information may not be propagated to a unit until a full boot is completed. However, you can avoid this by forcing a renewing of the DHCP lease, which makes sure that the unit has the latest file-server location before the next firmware check.

Simply, right-click the **Network Manager** icon, click **Enable Networking** to disable it, right-click the **Wireless Manager** icon, and then click Enable **Networking** to enable it again and the DHCP lease is renewed.

After you start your thin client, the device will look in the defined root path for the latest available image and update if necessary. Additionally, it will check the directory file in the add-ons folder to see if any updates for installed add-ons are defined. Add-ons that exist in the addons folder but are not listed in the directory file, will be ignored during update check-in.

DHCP options tags

Use the guidelines shown in the Table when creating and adding the DHCP options.

Table 21. DHCP options tags

Option	Description	Notes
1	Client identifier	Always sent.
2	Time Offset	Optional.
3	Router	Optional but recommended. It is not required unless the thin client must interact with servers on a different subnet.
6	Domain Name Server (DNS)	Optional but recommended.
12	Host Name/Terminal Name	Optional string. The host name or terminal name to be set.
15	Domain Name	Optional but recommended. See Option 6.
28	Broadcast Address	Optional.
44	WINS servers IP Address	Optional.
51	Lease Time	Optional but recommended.
52	Option Overload	Optional.
53	DHCP Message Type	Recommended.
54	DHCP Server IP Address	Recommended.
55	Parameter Request List	Sent by appliance.
57	Maximum DHCP Message Size	Optional — always sent by thin client.
58	T1 (renew) Time	Optional but recommended.
59	T2 (rebind) Time	Optional but recommended.
61	Client identifier	Always sent.
161	Server (ftp/http/https)	Optional string. If this is an IP address or resolvable host name, the protocol is assumed to be FTP; however, it may be the leading portion of a URL that specifies another protocol. If using the URL form, it should not include a trailing slash, for example, <code>http://server.example.com</code> or <code>ftp://192.168.0.1</code> .
162	Root path to the server (ftp/ http/https)	Optional string. The relative directory starting from the root directory must be given. For example, on an FTP server, the full directory may be <code>C:/inetpub/ftproot/wyse</code> , where <code>wyse</code> is the directory that contains the firmware. In this example, the

Option	Description	Notes
		<p>correct string value for this DHCP option is /wyse.</p> <p>On a Linux server, an FTP user-based directory might be /home/test/wyse. In this example, if the FTP user is test, then the FTP root path is /wyse and not the full path (/home/test/wyse). This value should use URL path notation.</p> <p> NOTE: URL path notation-Start with a forward slash, /, and use a forward slash as folder separators.</p>
165	Wyse Management Suite server	Recommended.
166	MQTT server	Optional string.
167	CA Validation	Optional string.
181	Citrix Server FQDN/IP	Optional string. IP address or FQDN of the Citrix Server which will be used by Citrix PAM Login and Desktop Appliance Mode.
182	Wyse Admin List	Optional string. DHCP equivalent of the DomainList ini file parameter.
184	Server Username	Optional string. Username to use when authenticating to the server specified in Option.
185	Server Password	Optional string. Password to use when authenticating to the server specified in Option.
186	WDM IP Address	Optional binary IP address of the WDM server. This option can specify up to one WDM server.
191	XenDesktop DDC URL	Optional string. For more information.
194	WDM FQDN	Optional FQDN of the WDM server. This option can specify up to one WDM server.
199	Wyse Management Suite Group Token	Recommended.
203	Type of VDI theme	Type of VDI theme used by Desktop Appliance mode. The possible values are Citrix/none. None will disable Desktop Appliance mode.
204	Type of Citrix server	pnagent/storefront
205	Citrix server storename	Optional, storename configured on Citrix server. Applicable only for Citrix storefront server.

Data recovery imaging

Use the operating system reinstall option to restore the system to its original factory settings. During the process, the device uses the hard drive partition for data recovery imaging.

To perform data recovery imaging:

- 1 Restart the thin client.
The thin client boots up and Dell logo is displayed for a short time.
- 2 During this period, keep pressing the Esc key.
The GRUB menu is displayed.
- 3 Select **Reinstall operating system** and press Enter.