


1 Before you begin | 开始之前 | 作業を開始する前に | 시작하기 전에

Before using your system, read the Dell Software License Agreement that came with the system. For additional setup instructions and safety information, refer to the Dell DL4300 documentation packaged with your appliance and located online at Dell.com/support/home. Ensure that you complete the setup of your DL4300 appliance before installing any updates.

在使用系统之前，请阅读系统随附的《Dell 软件许可协议》。有关附加的设置说明和安全信息，请参阅设备附带的 Dell DL4300 说明文件，在 Dell.com/support/home 上也可找到这些说明文件。确保完成 DL4300 设备的设置之后再安装更新。

2 Locating your service tag | 查找服务标签 | サービスタグの位置 | 서비스 태그 찾기

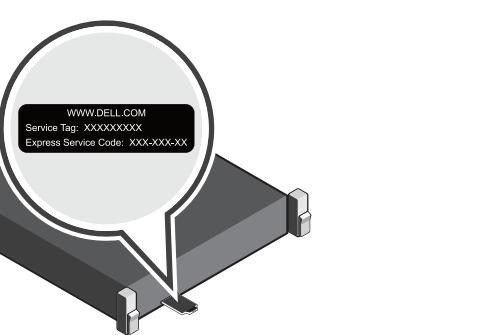


- Your system is identified by a unique Express Service Code and Service Tag. Pull out the information tag in front of your system to view the Express Service Code and Service Tag.
- Save this information for future reference. This information is used by Dell to route support calls to the appropriate personnel.
- 您的系统可通过唯一的快速服务代码和服务标签来标识。抽出系统正面的信息标签以查看快速服务代码和服务标签。
- 保存该信息以供将来参考。Dell 使用该信息将支持来电转接给合适的人员。

• 您的系统可通过唯一的快速服务代码和服务标签来标识。抽出系统正面的信息标签以查看快速服务代码和服务标签。


• 保存该信息以供将来参考。Dell 使用该信息将支持来电转接给合适的人员。

3 Identifying your system components | 识别系统组件 システムコンポーネントの確認 | 시스템 구성 요소 식별

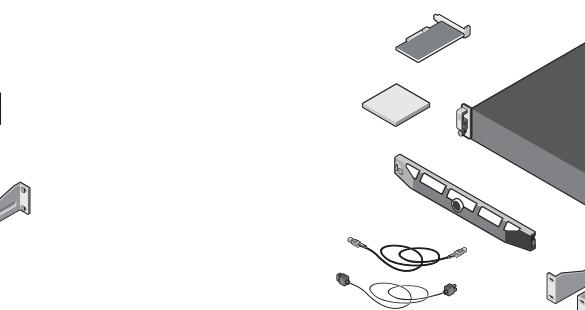

Identifying your Dell DL4300 system components

- System bezel (optional)
- Power cables (optional)
- Power cable retention straps (2)
- Pair of mounting rails (optional)
- Cable management arm (optional)
- System documentation

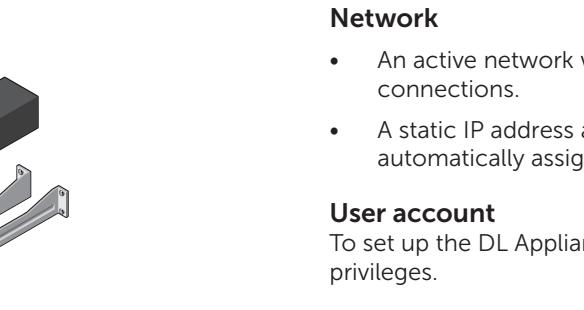

Identifying your optional MD 1400 storage enclosure components

- System bezel (optional)
- Power cables (optional)
- SAS cables (optional)
- RAID controller card (optional)
- Pair of mounting rails (optional)
- System documentation

4 Pre-installation requirements | 预安装要求 インストール前の要件 | 설치 전 요구 사항

Network

- An active network with available Ethernet cables and connections.
- A static IP address and DNS server IP address, if not automatically assigned by DHCP.

User account

To set up the DL Appliance, use an account with administrator privileges.

Licenses

- Your system is shipped with a 30-day temporary AppAssure software license. To obtain permanent license(s), go to Dell.com/DLActivation and complete the registration. For information, see the *Dell DL4300 Appliance Deployment Guide* at Dell.com/support/home.
- For more information, see the *Dell DL4300 Appliance Deployment Guide* at Dell.com/support/home.
- To obtain the iDRAC Enterprise license, see the *iDRAC User's Guide* at Dell.com/support/home.
- To obtain the iDRAC Enterprise license, see the *iDRAC User's Guide* at Dell.com/support/home.

Software compatibility

If the DL Appliance is connected to an existing backup environment, it is recommended that the existing backup environment uses the same AppAssure software version that is installed on the backup appliance.

ネットワーク

- 具有可用以太网电缆和连接的活动网络。
- 一个静态 IP 地址和 DNS 服务器 IP 地址（如果未通过 DHCP 自动分配）。

用户帐户

要设置 DL 设备，请使用具有管理员权限的帐户。

许可证

- 系统随附 30 天临时 AppAssure 软件许可证。要获取永久许可证，请访问 Dell.com/DLActivation 并完成注册。有关信息，请参阅 *Dell DL4300 Appliance Deployment Guide* (Dell DL4300 设备部署指南)，网址：Dell.com/support/home。
- 要获取 iDRAC 企业版许可证，请参阅 *iDRAC User's Guide* (iDRAC 用户指南)，网址：Dell.com/support/home。


ライセンス

- システム에는 30일 임시 AppAssure 소프트웨어 사용권이 함께 제공됩니다. 영구적인 사용권을 받으려면 Dell.com/DLActivation 으로 이동하여 등록을 완료하십시오.
- 자세한 내용은 Dell.com/support/home 에서 Dell DL4300 어플라이언스 배포 가이드를 참조하십시오.

ソフトウェア 호환성

如果 DL 设备连接到现有备份环境，则建议现有备份环境使用与安装在备份设备上的 AppAssure 软件版本相同的版本。

5 Installing your DL Appliance | 安装 DL 设备 DL Appliance のインストール | DL 어플라이언스 설치

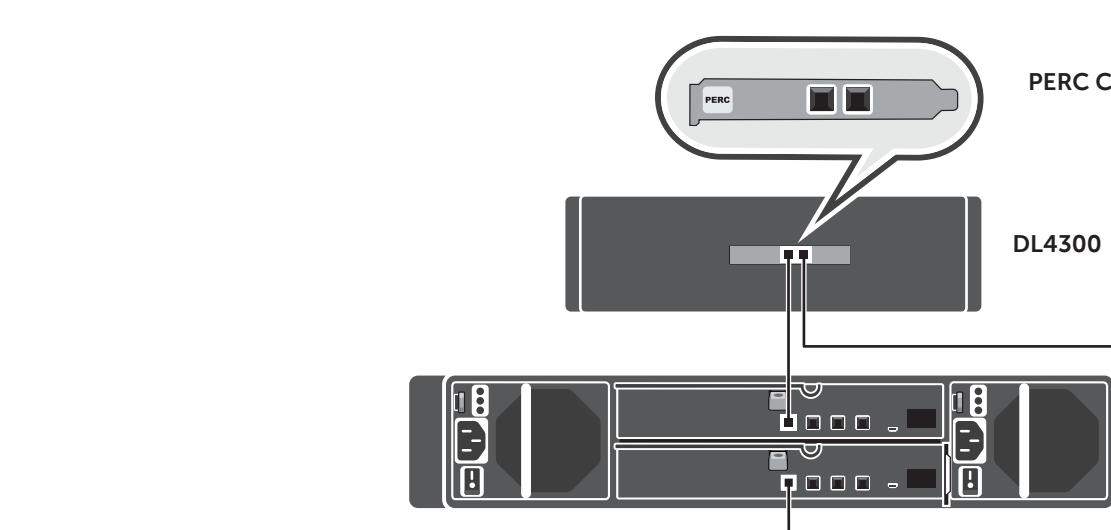

■ NOTE: Do not turn on the system(s) before setting up your DL Appliance hardware and connecting the DL Appliance to the optional MD1400 storage enclosure.

要设置 DL 设备：

- 为 Dell DL4300 系统安装滑轨。有关更多信息，请参阅 DL4300 滑轨套件随附的 Rack Installation Instructions (机架安装说明)。
- 设置 DL4300 系统。有关设置 DL4300 系统的信息，请参阅系统随附的 Getting Started With Your System (系统使用入门)。
- 安装 DL4300 的可选线架。有关更多信息，请参阅 CMA 套件随附的 CMA Installation Instructions (CMA 安装说明)。

要将 DL 设备连接到可选的 MD1400 存储机柜：

- 安装 MD1400 的滑轨并设置存储机柜。
 - 使用 SAS 电缆将 DL4300 系统 PERC 控制器上的端口 0 连接到 MD1400 的机架管理模块 (EMM) 上的端口 1。
 - 为实现冗余，请使用第二根 SAS 电缆将 DL4300 PERC 控制器上的端口 1 连接到 MD1400 上的第二个机架管理模块 (EMM)。
- NOTE:** 对于多链配置，请参阅 *Dell DL4300 Appliance Deployment Guide* (Dell DL4300 设备部署指南)。
- 安装 MD1400 的滑轨并设置存储机柜。
 - 使用 SAS 电缆，将端口 0 上的 DL4300 系统 PERC 控制器连接到端口 1 上的 Enclosure Management Module (EMM)。
 - For redundancy, use a second SAS cable to connect Port 1 on the DL4300 PERC controller to the second Enclosure Management Module (EMM) on the MD1400.
- NOTE:** For multi-chain configuration, see the *Dell DL4300 Appliance Deployment Guide*.