Getting Started

With Your Dell™ System

options box
*(also contains documentation
and software)*

computer chassis

template

bezel

**cable−management
arm (optional)**

two−post brackets

slide assemblies (optional)
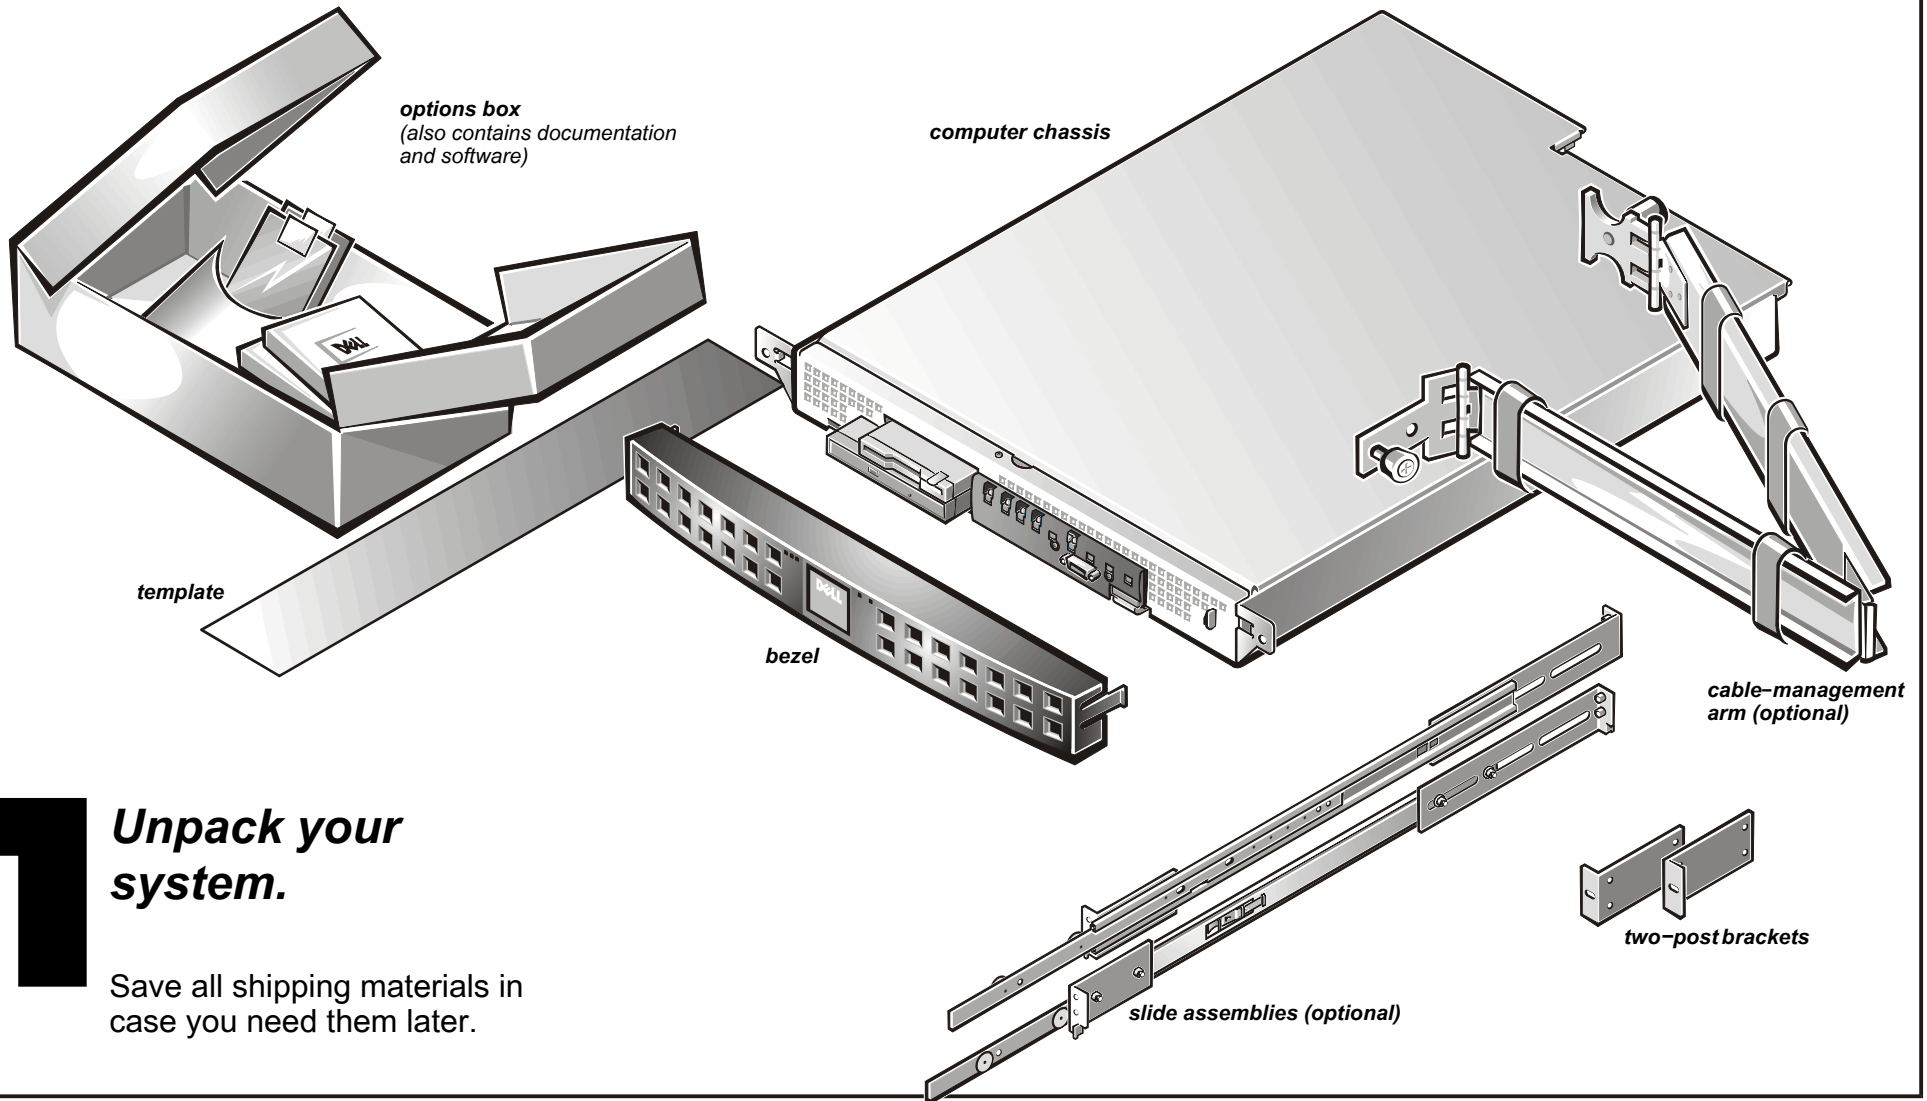
1

Unpack your system.

Save all shipping materials in
case you need them later.
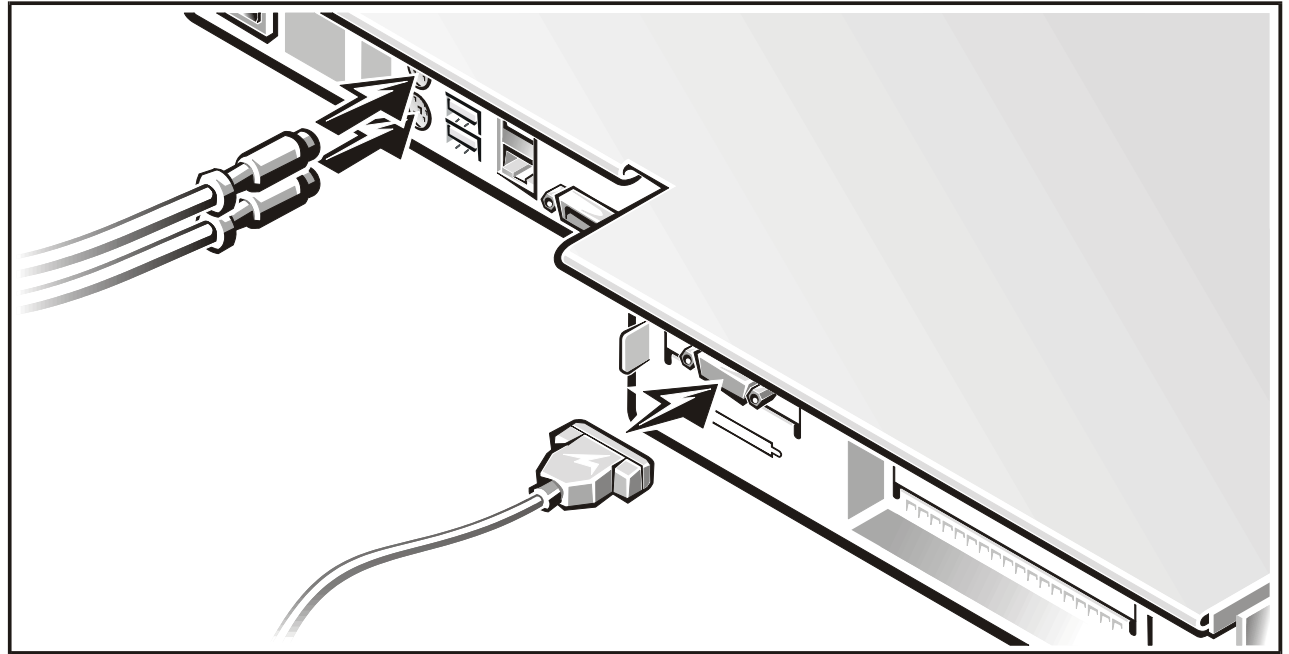
www.dell.com

DELL™

03D443 A00

Connect the keyboard, mouse, and monitor (optional).

2

The connectors on the back of your system have icons indicating which cable to plug into each connector. Be sure to tighten the screws (if any) on the monitor's cable connector.

See your rack installation documentation for instructions on installing your system in a 2−post or 4−post rack.

Connect the monitor (optional) and system to power.

3

Connect the monitor's power cable to the electrical outlet. Connect the system's power cable(s) to the system. Plug the other end of the cable(s) into a wall outlet or a separate power source such as an uninterruptible power supply (UPS).
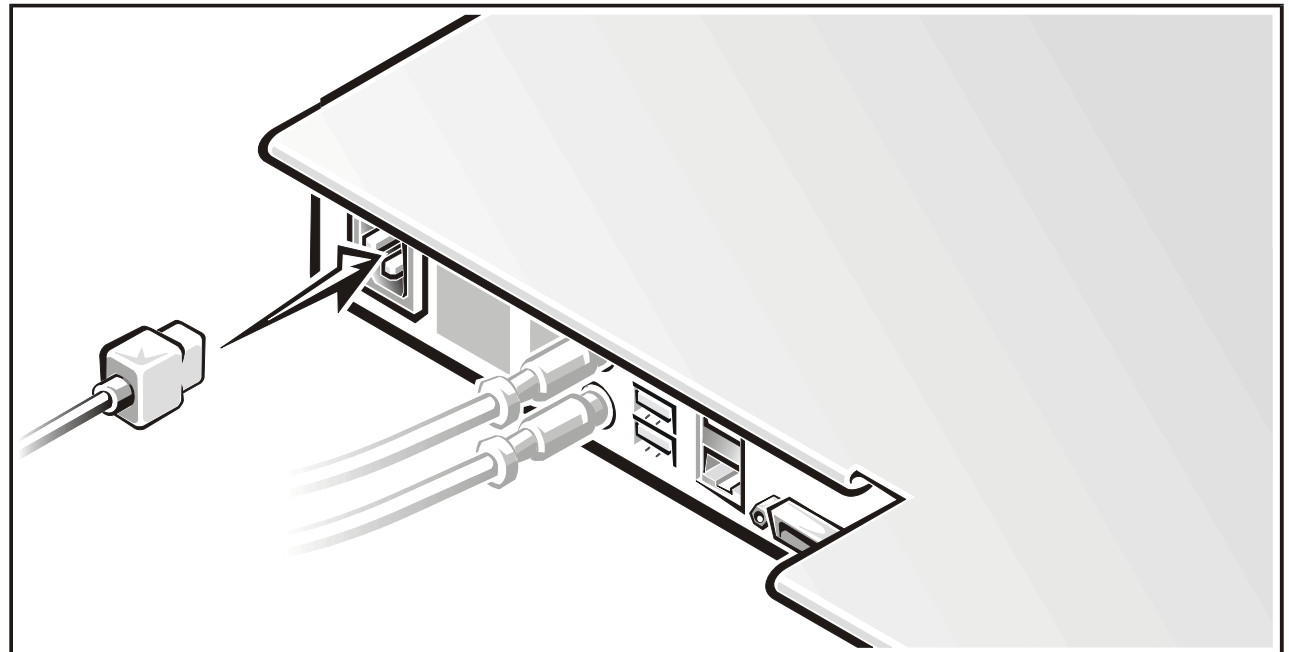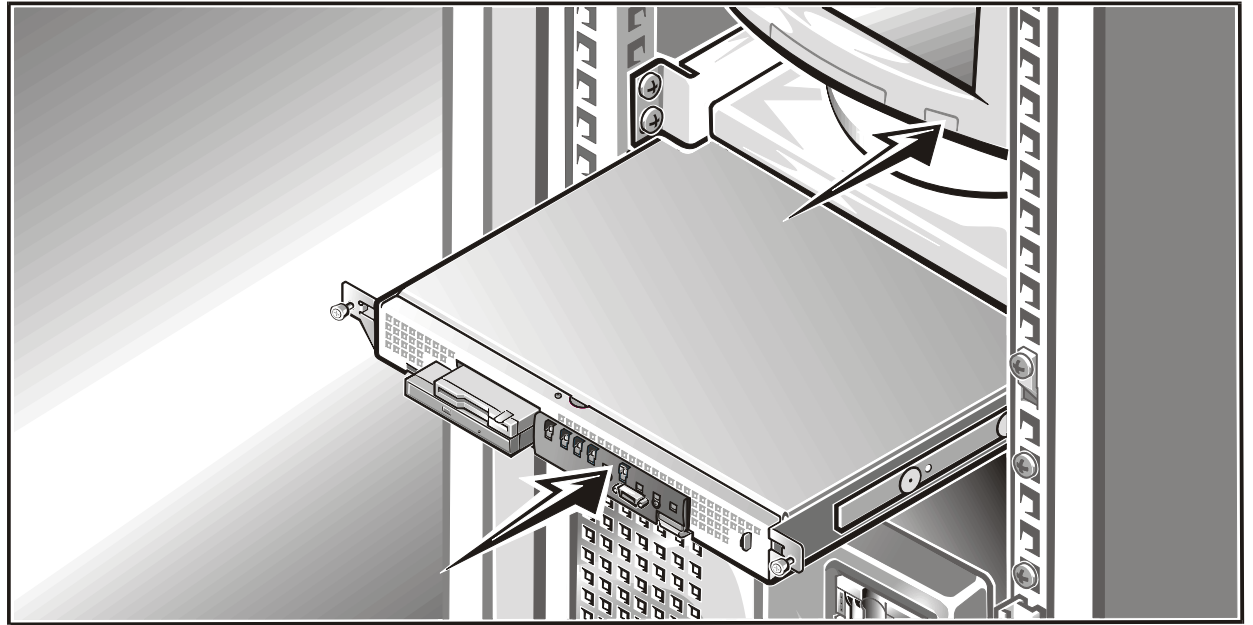
Turn on the monitor (optional) and system.

4

Press the power button on the monitor and the system. The power indicators should light up.

If necessary, adjust the monitor's contrast and brightness controls, as well as the horizontal and vertical size and position controls, until the displayed image is satisfactory.
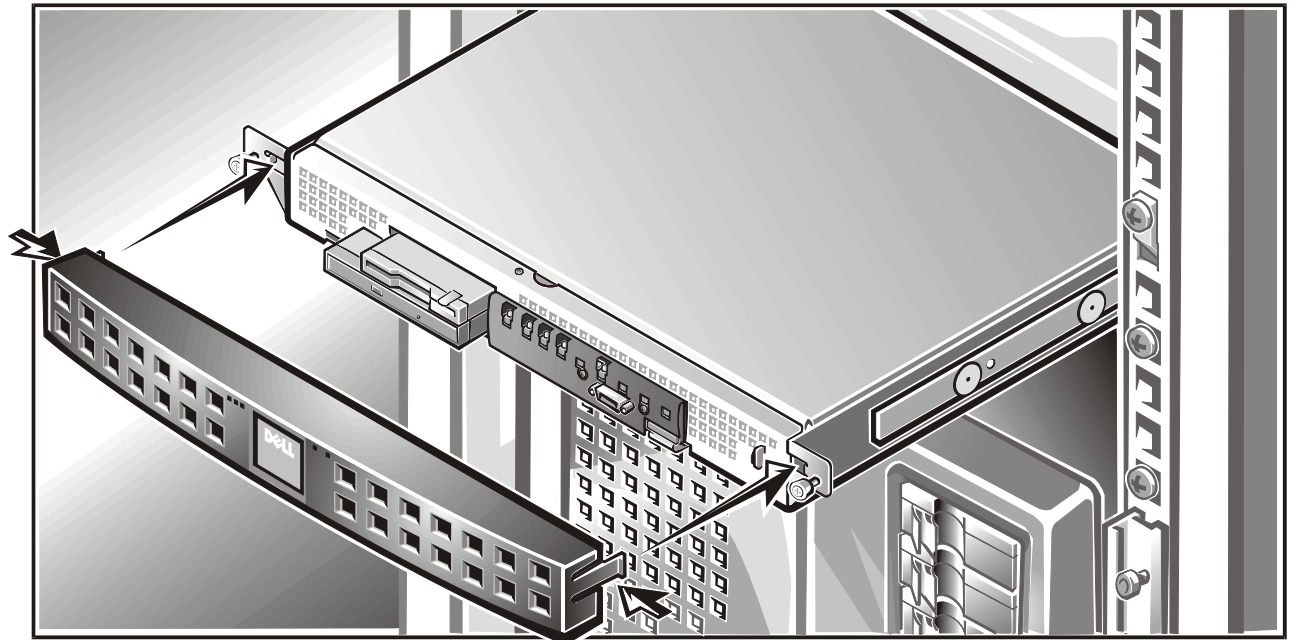

Install the bezel (optional).

5

Install the bezel to the front of the system.

Press the tabs on the bezel while sliding them into the slots on the system.

Install the bezel *only* in the orientation shown here. If installed correctly, the bezel redirects the system indicator lights from the top of the system to the appropriate indicators on the bezel.

Regulatory and Safety Information

See the safety and regulatory notices in your Dell *System Information* document.

Installation and Configuration

See the *User's Guide* and *Installation and Troubleshooting Guide* for detailed information about the installation and configuration of your Dell system.

DELL™