
1. Disassembly Procedures:


Step	Figure	Remark
S1.Before disassemble		Turn off power, Unplug external cables from product
S2. Remove the	(Deriv)	To remove the stand: Press the button on the red circle then pull out the stand follow the arrow, stand will be remove.
STAND-BASE ASS'Y		Note: To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft, clean surface.

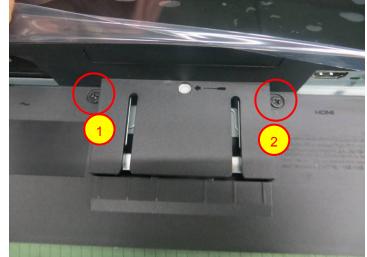

Use a Philips-head screwdriver to remove 2 screws for unlocking mechanisms.


(No.1~2 screw size=M3x4;
Torque=4±1kgf.cm)

S3.Remove the REAR COVER

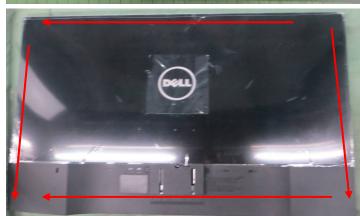


Use Penknife to separate the bezel and rear cove follow the arrows in sequence, then you can take out rear cover.

S4.Disconnect the FFC cable

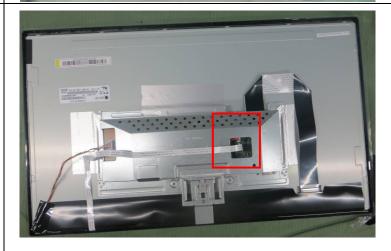


S5.Remove the VGA

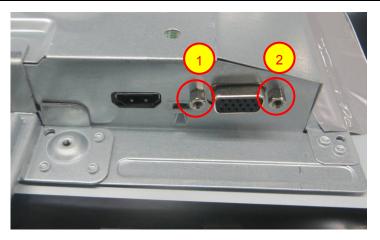



Use a hex screwdriver to remove 2 screws for unlocking mainboard.


(No.1~2 is Hex-screw, Torque= 4.5±0.5kgf.cm)

cable

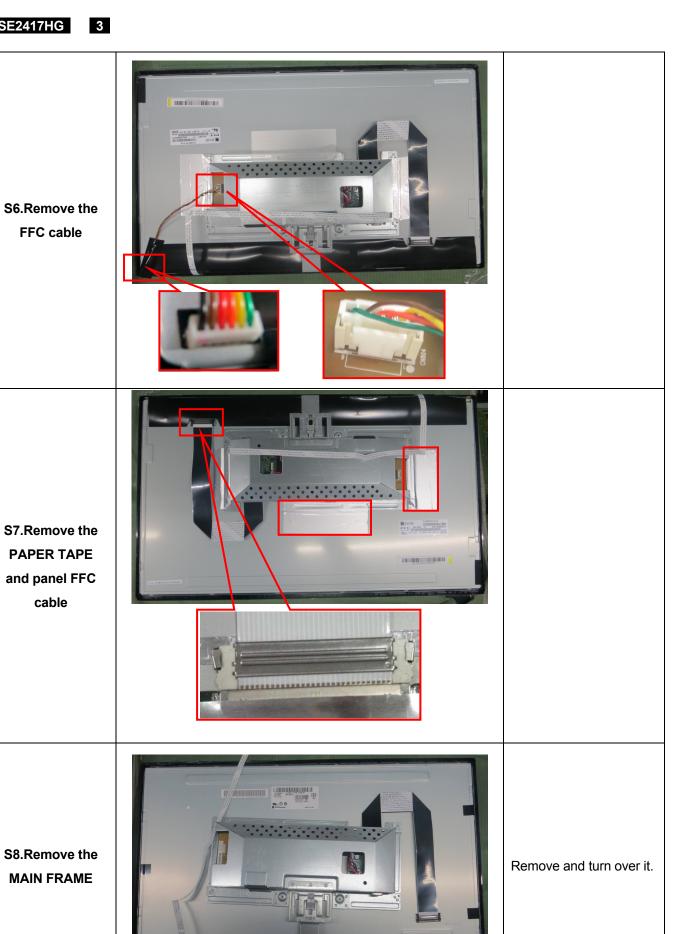


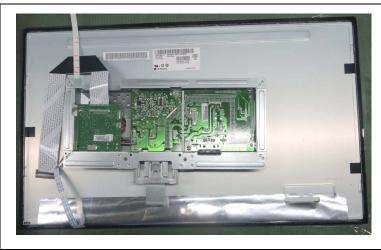



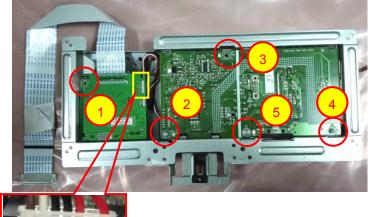



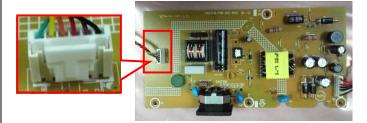

screws for unlocking main board and power board (No.1~4 screw

screwdriver to remove 5


Use a Philips-head

size=D3x6;
Torque=6±1kgf.cm

No.5 screw size=M4x6; Torque= 6±1kgf.cm)

Remove the cables




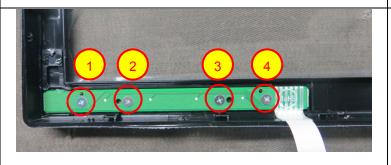

Use a Philips-head screwdriver to remove 4 screws for unlocking Key board.

(No.1~4 screw size= M2x2.5 Torque=0.9±0.4kgf.cm)


SE2417HG 5

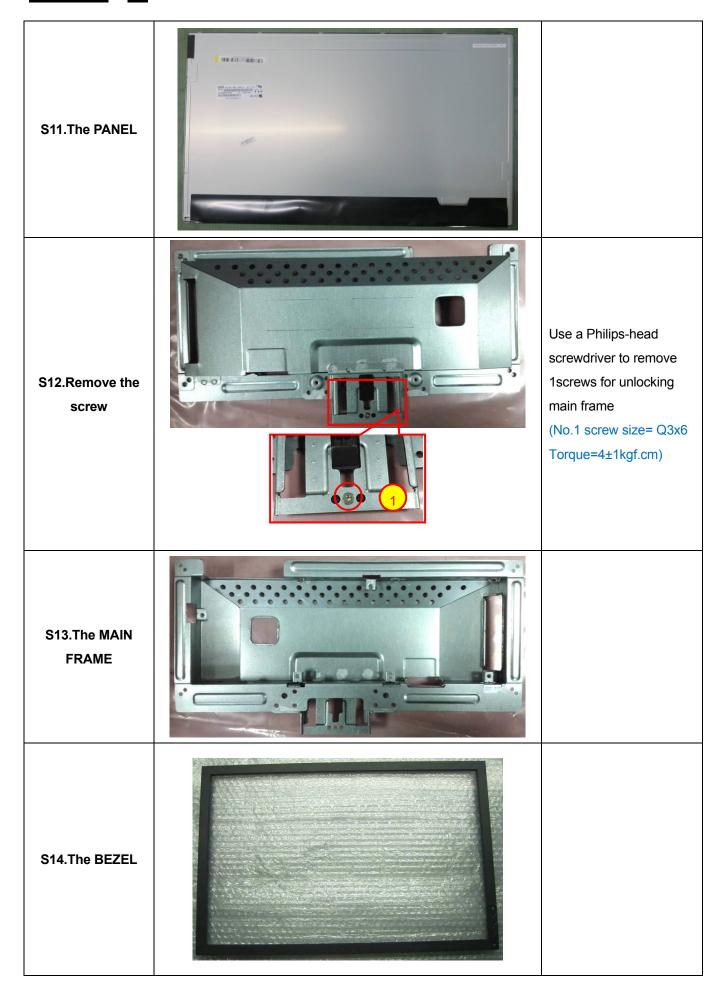




Remove electrolyte capacitors (red mark) from printed circuit boards

S15.Remove capacitor

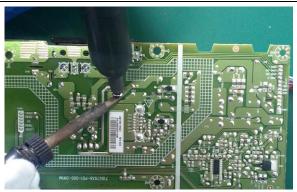

Take out bulk cap. pin solder with soldering iron and absorber

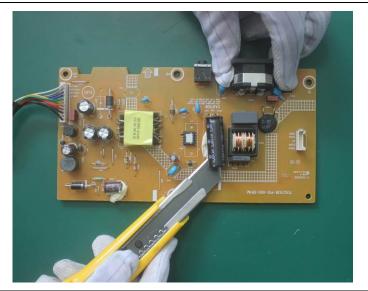

Lift the bulk cap. up and away from the PCB



2. Product material information

The following substances, preparations, or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

Capacitors / condensers (containing	No used	
PCB/PCT)		
Mercury containing components	No used	
Batteries	No used	
Printed circuit boards (with a surface	Product has printed circuit boards (with a	
greater than 10 square cm)	surface greater than 10 square cm)	
Component contain toner, ink and liquids	No used	
Plastic containing BFR	No used	
Component and waste contain asbestos	No used	
CRT	No used	
Component contain CFC, HCFC, HFC	No used	
and HC		
Gas discharge lamps	No used	
LCD display > 100 cm2	Product has an LCD greater than 100 cm2	
External electric cable	Product has external cables	
Component contain refractory ceramic	No used	
fibers		
Component contain radio-active	No used	
substances		
Electrolyte capacitors (height	Product has electrolyte capacitors	
> 25mm, diameter > 25mm)	(height > 25mm, diameter > 25mm)	

3. Tools Required

List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Tool Description:

- Phillip head Screwdriver
- Hex Screwdriver
- Penknife
- Soldering iron and absorber