

Dell EMC Repository Manager Version 3.1

Troubleshooting Guide



Notes, cautions, and warnings

 | **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 | **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 | **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

1 Overview	5
What is new in this release	5
Accessing documents from the Dell EMC support site	5
Other documents you may need	6
DUP Dependencies	6
Creating repository	6
Creating manual repository	8
Creating repository with inventory	8
Creating repository with iDRAC and OME integration	9
Creating repository with VMware integration	10
Creating repository with console integration	11
Creating deployment tools	12
Creating deployment tool_Smart bootable ISO	13
Best practice for creating bootable CD or USB keys for updates	13
Creating deployment tool_Smart deployment script	15
Creating deployment to shared location	15
Configuring settings	16
Configuring network settings	17
Configuring email configuration	17
Creating store settings	18
Configuring plugin settings	18
Configuring catalog settings	19
Comparing repository	19
	20
Launching DRM using command line interface	20
A Frequently asked questions	21
Where is the Dell EMC Repository Manager runtime log located?	21
Can DRM be run through a Proxy Server?	21
How do I edit the '.sh' file in Linux deployment script bundle? Is there any recommended tool to edit this file?	21
I have installed the latest version of DRM on my system and I am trying to downgrade to one of the previous version. However, I am not able to proceed further. What do I do now?	21
I am facing access issue in Linux operating system. How do I proceed further?	21
I saved a file in the mapped network location. However, I am not able to access location from DRM. What do I do now?	22
I am not able to automatically discover the Microsoft Exchange Web Service URL when trying to configure the email notifications. Is there any other option to discover the URL apart from updating it manually?	22
I get a message "GLX version 1.2 or higher is required" when I try to open a Linux terminal window. This message is observed in SUSE Linux 11 and 12.	22
I am not able to create a inventory repository using a specific catalog and inventory file through command line interface. How do I proceed?	22
Where can I change the DUP sequence order in DRM 3.x before exporting to a deployment format?	22

I am not able to install DRM in a custom location on Linux operating system. How do I proceed with the installation?.....	23
After I delete a bundle, it is not removed from the bundle list on the GUI. Should I delete it elsewhere so that it is updated on the GUI?.....	23

Overview

The Dell EMC Repository Manager (DRM) ensures that the Dell systems are up-to-date with the latest BIOS, driver, firmware, and software. DRM allows you to:

- Create repositories of customized component(s) and updates.
- Create groups of related updates for systems running the Microsoft Windows and Linux operating system.
- Generate comparison reports. Update baselines of custom repositories and generate deployment tools.

The customized repositories are made up of Dell EMC Update Packages (DUPs) or Non-DUPs (such as .exe, .msi, .bin or any other file formats) files. DUPs are software utilities provided to update specific software and firmware components. You can arrange these components to group the related updates together. Every repository has a **catalog.xml** file and it specifies the content of the repository. DRM also has **catalog.xml.gz** and **catalog.gz** files. You can import the repository content in two formats, however, you can export the repository content in **catalog.xml** format only. The file downloaded from **ftp.dell.com/catalog** and **downloads.dell.com/catalog** is digitally signed to ensure system security.

Topics:

- [What is new in this release](#)
- [Accessing documents from the Dell EMC support site](#)
- [Other documents you may need](#)
- [DUP Dependencies](#)
- [Creating repository](#)
- [Creating deployment tools](#)
- [Configuring settings](#)
- [Comparing repository](#)
- [Launching DRM using command line interface](#)

What is new in this release

This release of Dell Repository Manager (DRM) supports the following new features:

- Support for Dell EMC MX Platform
- Signature validation during DUP import enhancements
- Improved filter and compare options
- Support to connect with **Dell EMC OpenManage Enterprise** and **Dell EMC Integration for System Center Virtual Machine Manager** consoles

Accessing documents from the Dell EMC support site

You can access the required documents using the following links:

- For Dell EMC Enterprise Systems Management documents — www.dell.com/esmmanuals
- For Dell EMC OpenManage documents — www.dell.com/openmanagemanuals
- For Dell EMC Remote Enterprise Systems Management documents — www.dell.com/esmmanuals
- For iDRAC and Dell Lifecycle Controller documents — www.dell.com/idracmanuals
- For Dell EMC OpenManage Connections Enterprise Systems Management documents — www.dell.com/esmmanuals
- For Dell EMC Serviceability Tools documents — www.dell.com/serviceabilitytools
- a Go to www.dell.com/support.

- b Click **Browse all products**.
 - c From **All products** page, click **Software**, and then click the required link from the following:
 - **Analytics**
 - **Client Systems Management**
 - **Enterprise Applications**
 - **Enterprise Systems Management**
 - **Public Sector Solutions**
 - **Utilities**
 - **Mainframe**
 - **Serviceability Tools**
 - **Virtualization Solutions**
 - **Operating Systems**
 - **Support**
 - d To view a document, click the required product and then click the required version.
- Using search engines:
 - Type the name and version of the document in the search box.

Other documents you may need

In addition to this guide, you can access the following guides available at dell.com/support/manuals.

- *Dell EMC Repository Manager Quick Installation Guide*
- *Dell EMC System Update User's Guide*
- *Dell EMC Systems Management - OpenManage Software Support Matrix*
- *Dell EMC Update Packages User's Guide*
- *Dell EMC Server Update Utility User's Guide*
- *Dell EMC OpenManage Server Administrator Installation Guide*
- *Dell EMC OpenManage Essentials User's Guide*
- *Dell EMC OpenManage Enterprise User's Guide*
- *Dell EMC OpenManage Integration for VMware vCenter*
- *Dell EMC OpenManage Integration for Microsoft System Center Version 7.1 for System Center Configuration Manager and System Center Virtual Machine Manager*

DUP Dependencies

This feature articulates the relationship between two different DUPs. SUU enables certain rules and submissions to determine if a set of conditions or requirements are met. These conditions or requirements are called dependencies. Dependency exists when a DUP of a particular kind has a dependency on additional DUP for further execution. This helps the users to determine, which DUP to install first and which one to follow. There are two types of dependencies:

- Hard Dependency — Dependency that must be applied in order to be able to apply the update.
- Soft Dependency — Dependency that needs to be applied in order to use certain new features coming with the update.

NOTE: In certain scenarios, for a complete update or upgrade, you must install two and more DUPs. It is possible that for individual DUPs, you must restart the system, to realize the impact of other installed DUPs.


Creating repository

DRM enables you to create a repository of components that allows you to deploy multiple updates in one instance.

The user scenarios in this chapter describes the process of creating repositories.


Creating manual repository

This flowchart describes the process to create a manual repository in DRM.

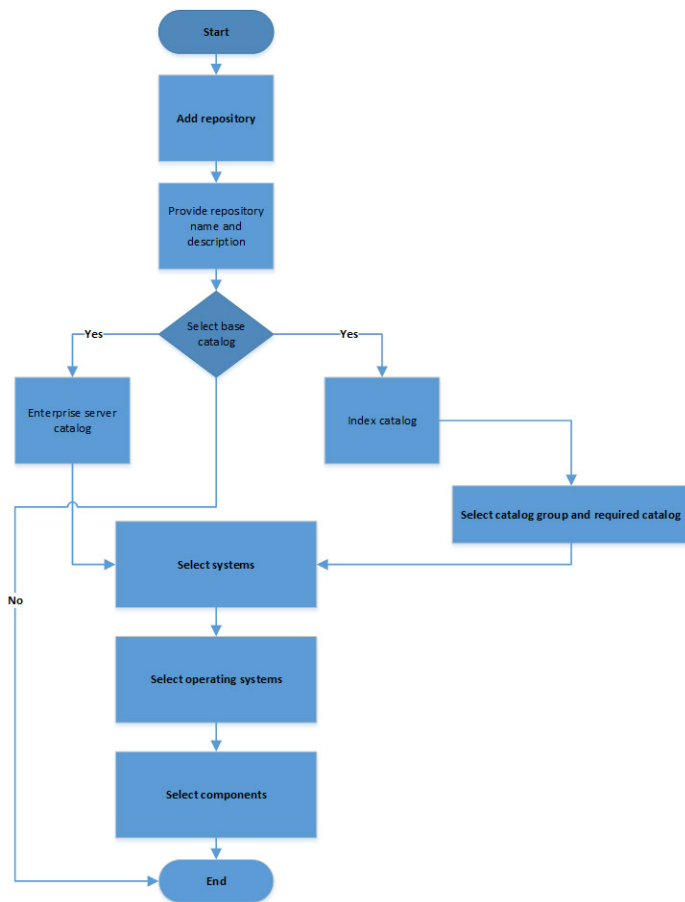


Creating repository with inventory

This flowchart describes the process to create a repository with inventory in DRM.

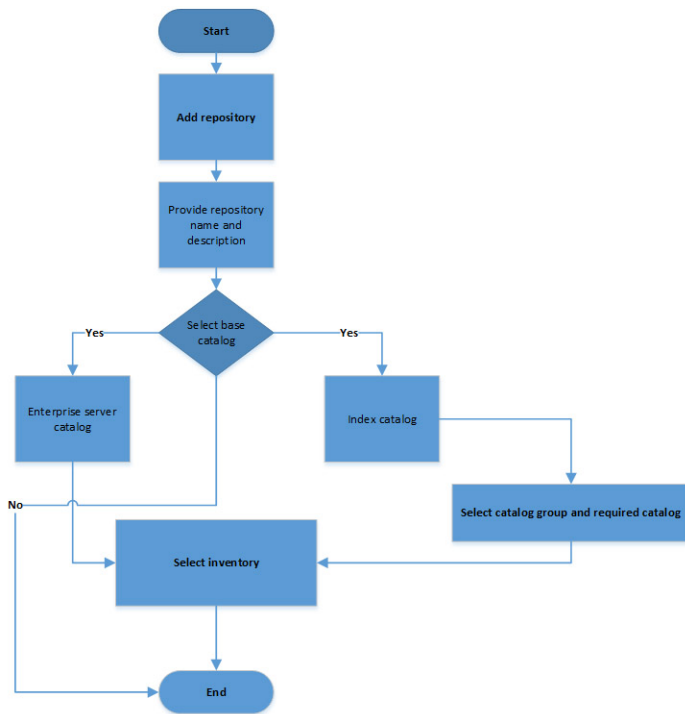


Creating repository with iDRAC and OME integration

This flowchart describes the process to create a repository with iDRAC and OME integration.

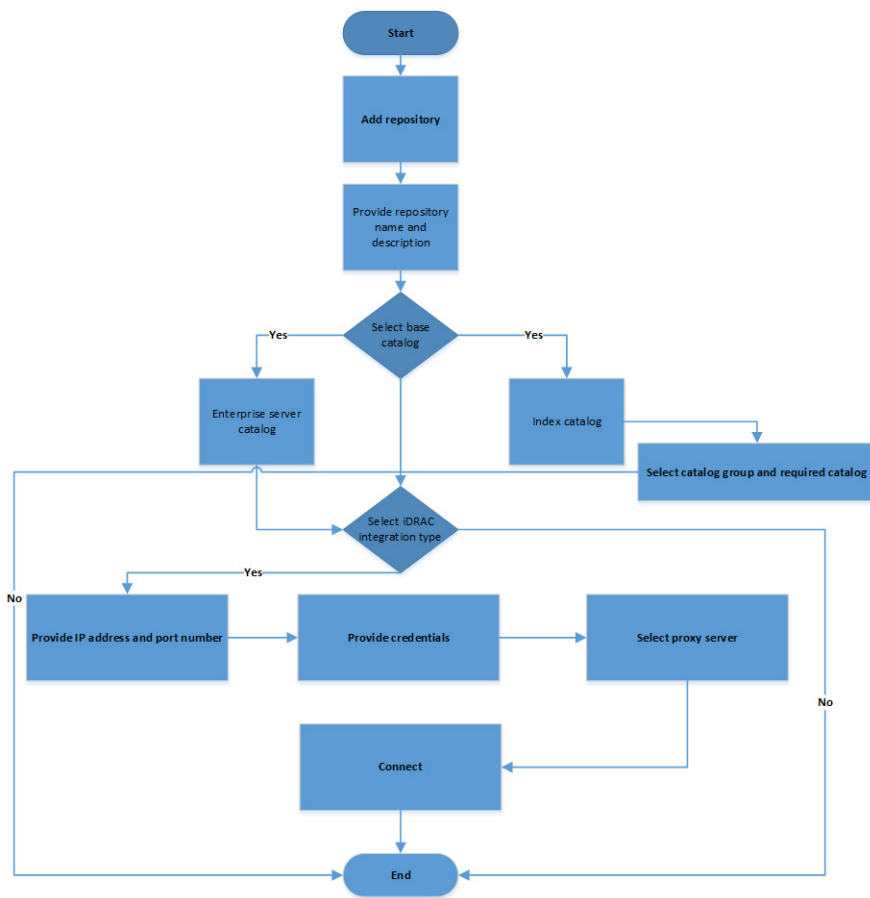


Creating repository with VMware integration

This flowchart describes the process to create a repository with VMware integration in DRM.

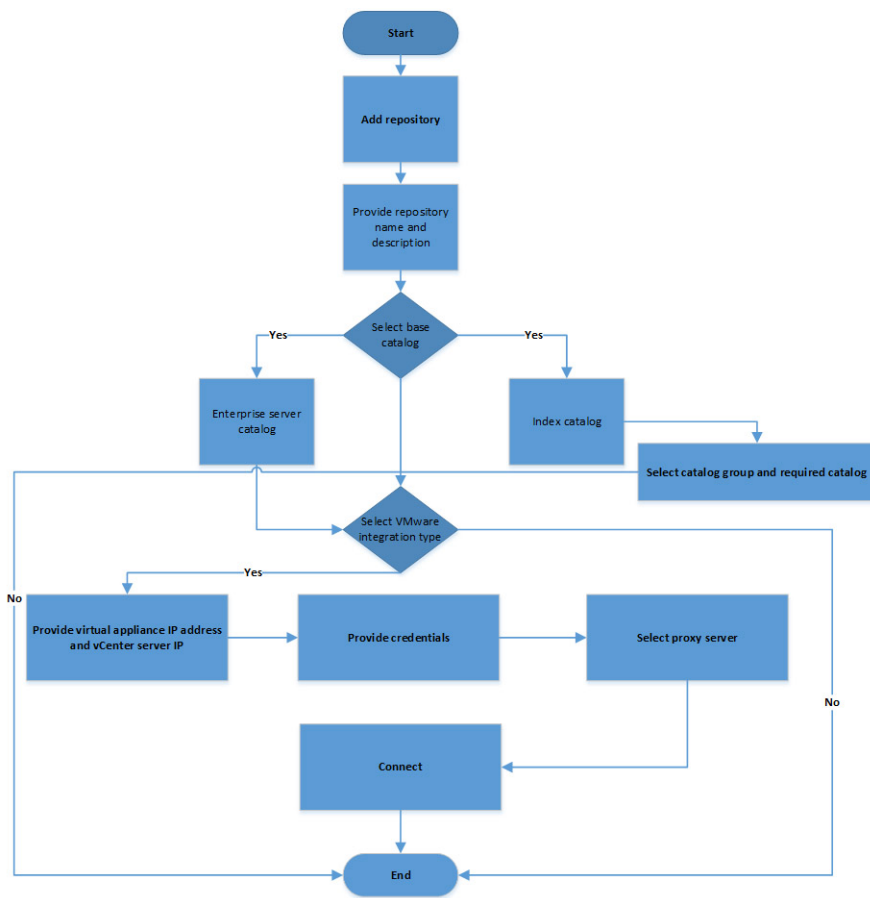

Creating repository with console integration

This flowchart describes the process to create a repository with console integration in DRM. You can use this method for OpenManage Integration for Microsoft System Center Virtual Machine Manager (OMISCVMM).

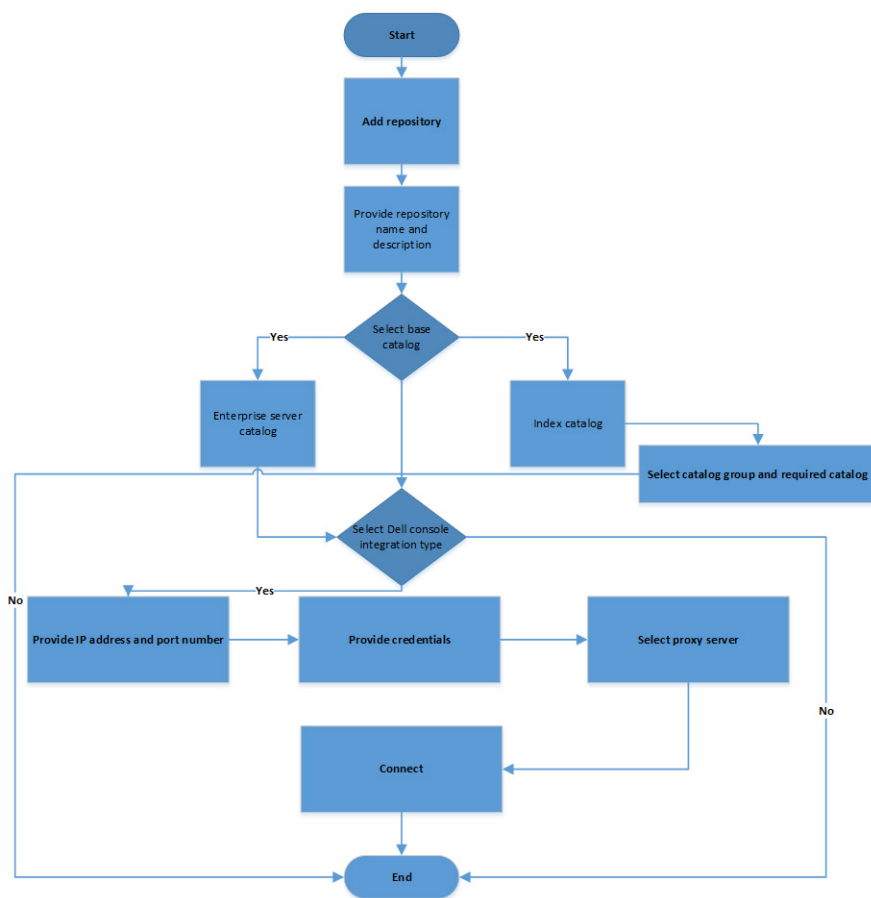


Creating deployment tools

This chapter describes the process to export the repository as deployment tool type.

Creating deployment tool_Smart bootable ISO

This section describes the process to export a repository as Smart Bootable ISO.

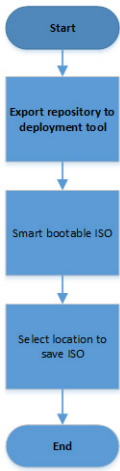

Best practice for creating bootable CD or USB keys for updates

You can create bootable USB keys for updates, using any third party or free tool. You can start your managed system by the bootable CD or USB storage. After the system starts, it automatically runs the selected updates. After the update is complete, you can remove the CD or USB storage, and reboot the system to your host operating system.

NOTE: Rufus and UNetBootin are third-party software. Install and use these software at your own risk. Dell EMC shares only the best practices for using Rufus and UNetBootin.

Creating bootable USB keys using UNetBootin

To create bootable USB keys, using the tool UNetBootin:

- 1 Download the UNetBootin for Windows or Linux available at <https://unetbootin.github.io/>.
- 2 Run the Dell Repository Manager and generate the bootable ISO.
- 3 Start UNetBootin and select the **Diskimage** option.
- 4 Click [...] adjacent to the ISO drop-down menu and navigate to the ISO created by Dell Repository Manager.
- 5 Ensure that the type setting is equal to USB drive and the location where you want to download the USB key displays in the drive drop-down menu.
- 6 Click **OK** to start the USB writing.
- 7 After the USB key writing is complete, insert the USB key into a USB port on the system you want to upgrade.
- 8 Press **<F11>**.
The boot menu is displayed.
- 9 Select option 1 in the UNetBootin boot menu to proceed with the component updates.

To create bootable USB keys, using non-graphical user interface, provide the following command line:

```
>unetbootin method=diskimage isofile="/home/user/LinuxISO.iso" installtype=USB targetdrive=/dev/sdc1
```


Creating bootable USB keys using Rufus tool

To create bootable USB keys, using Rufus tool.

- 1 Download the latest version of Rufus for Windows available at https://rufus.ie/en_IE.html
- 2 Run the Dell Repository Manager and generate the bootable ISO.
- 3 Start Rufus and select the **Disk** or **ISO image** option.
- 4 Click **Select adjacent to the Boot Selection** and navigate to the ISO created by Dell Repository Manager.
- 5 Ensure to choose **MBR Partition Type** and BIOS target system with VFAT file system.
- 6 Click **OK** to start the USB writing.
- 7 After the USB key writing is complete, insert the USB key into a USB port on the system you want to upgrade.
- 8 Press <F11>. The boot menu is displayed.
- 9 Select the USB key as the boot target.
- 10 Select option 1 in the Rufus boot menu to proceed with the component updates.


Creating deployment tool_Smart deployment script

This section describes the process to export a repository as Smart deployment script.

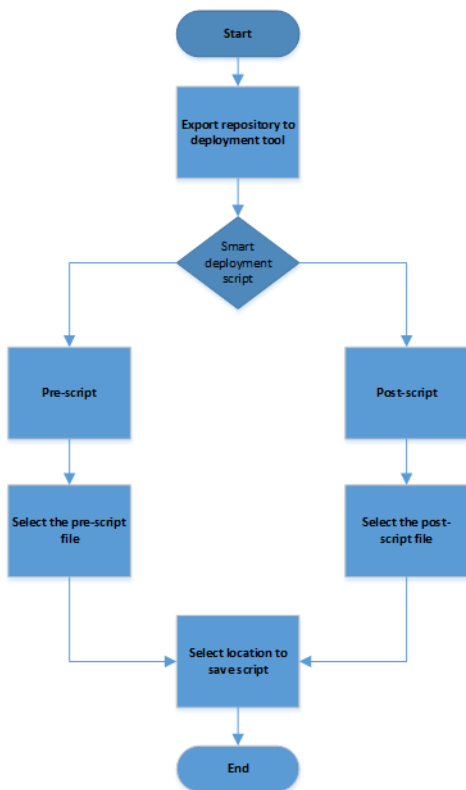

Creating deployment to shared location

This section describes the process to export a repository to a common shared location.

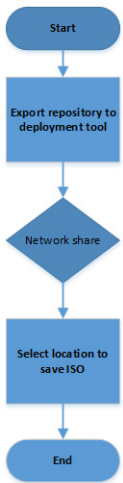


Configuring settings

This section describes the process to configure the settings or application preferences.


Configuring network settings

This section describes the process to configure network settings in DRM.

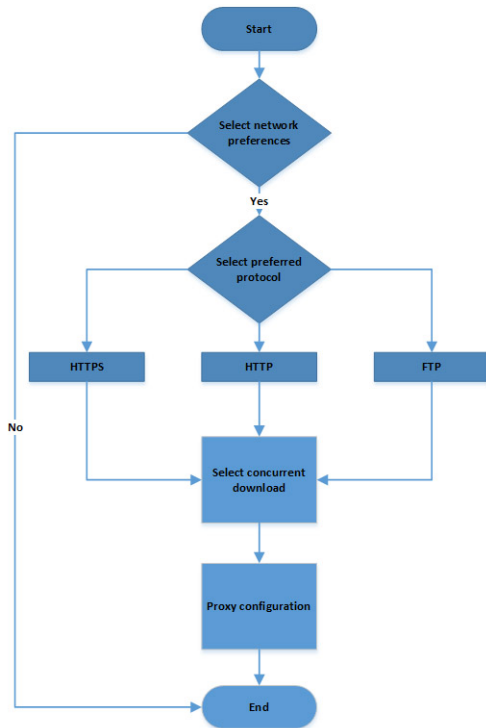


Configuring email configuration

This section describes the process to configure email settings in DRM.

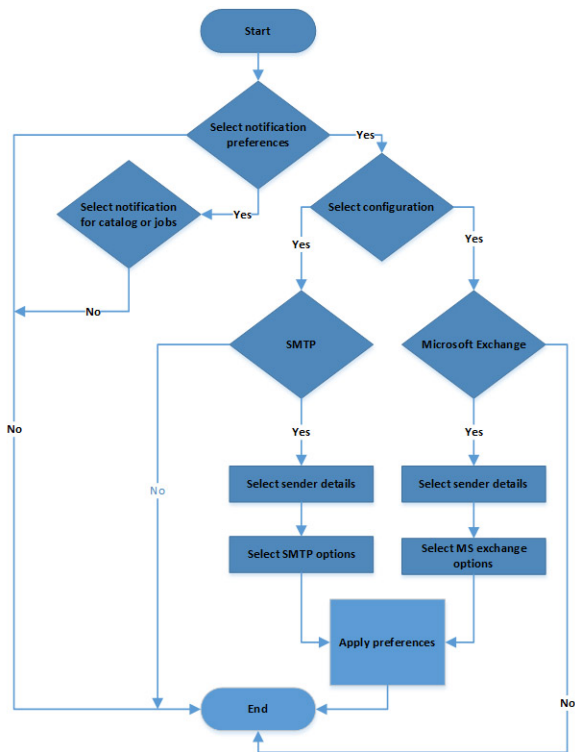


Creating store settings

This section describes the process to configure data store settings in DRM.

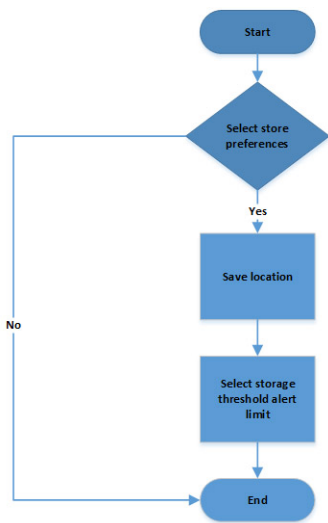


Configuring plugin settings

This section describes the process to configure plugin settings in DRM.

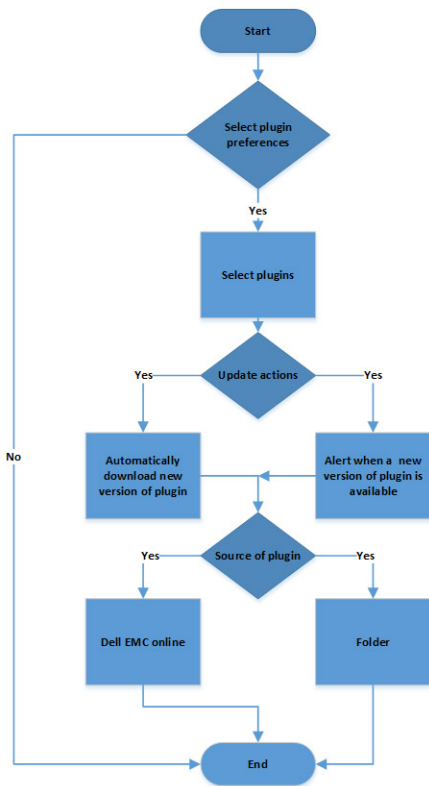


Configuring catalog settings

This section describes the process to configure catalog settings in DRM.

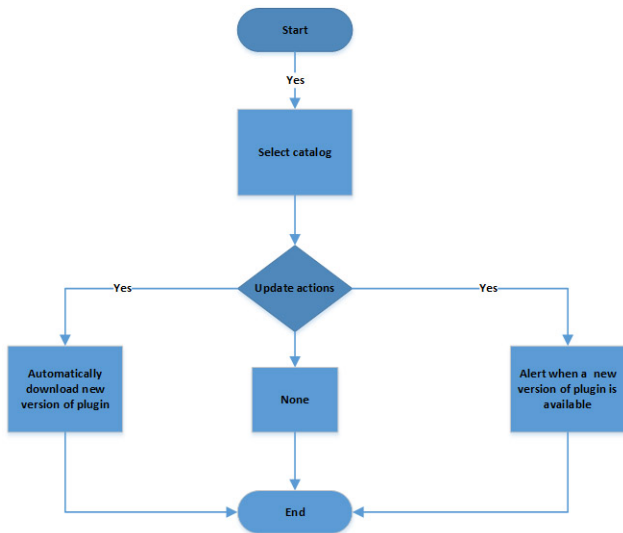

Comparing repository

This section describes the process to compare a repository against latest catalog loaded in DRM.

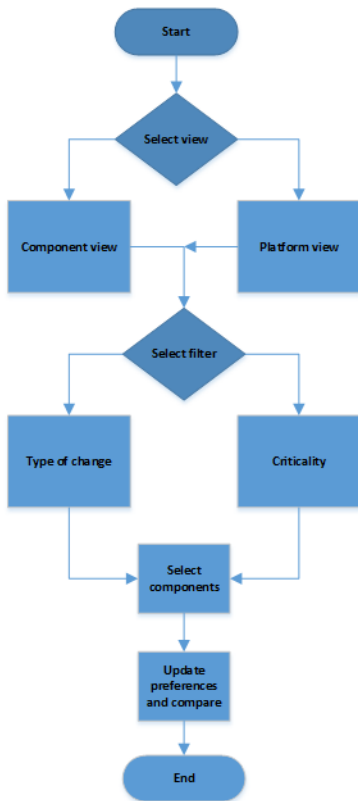

Launching DRM using command line interface

Navigate to the location where DRM is installed in the system. By default, on Microsoft Windows operating system, DRM is installed at `c:\Program Files\Dell\DELL EMC Repository Manager` and on Linux operating system, DRM is installed at `/opt/dell/dellemcrepositorymanager`. On the command prompt enter `drm` to open DRM.

Frequently asked questions

This section lists some frequently asked questions about DRM.

Where is the Dell EMC Repository Manager runtime log located?

DRM creates the log file at runtime in the following location:

- Windows: C:\ProgramData\Dell\drm\log
- Linux: /var/Dell/drm/log

You can also view the logs through **Save and Mail Logs** option in the Dell EMC drop-down menu.

Can DRM be run through a Proxy Server?

Yes, install DRM inside the firewall and connect to a catalog located outside the firewall (downloads.dell.com or a local repository) through a proxy server. You can use the proxy server settings of Internet Explorer. If the proxy settings for Internet Explorer are not working, the proxy can be set in DRM. You can then use Dell Repository Manager to customize the catalog as per the requirement and store the customized catalog inside the firewall. For more information on setting proxy, see **Configuring Network Settings**.

How do I edit the '.sh' file in Linux deployment script bundle? Is there any recommended tool to edit this file?

Notepad++ editor is recommended for editing the Linux based file extension on a Microsoft Windows operating system. If you want to edit the extension of the file on a Linux operating system, vi editor is recommended.

I have installed the latest version of DRM on my system and I am trying to downgrade to one of the previous version. However, I am not able to proceed further. What do I do now?

Reverting to the previous version of DRM is not supported in the current version of the DRM installer . To install an earlier version of DRM, manually uninstall the latest version through Add/Remove Programs in the Microsoft Windows Control Panel and then run the installer of the desired version.

① | **NOTE: DRM 2.0 and DRM 3.x.x can co-exist on the same system.**

I am facing access issue in Linux operating system. How do I proceed further?

Ensure that you have:

- **Read** and **Execution** access
- **Read** and **Write** access to the `drmuser` in the particular folder including all individual directories where you want to create a repository.

I saved a file in the mapped network location. However, I am not able to access location from DRM. What do I do now?

Ensure that you have privileges to access the location and then login with the appropriate credentials.

I am not able to automatically discover the Microsoft Exchange Web Service URL when trying to configure the email notifications. Is there any other option to discover the URL apart from updating it manually?

No. In DRM 3.0, the auto-discovery of Microsoft Exchange Web Server URL is not supported. You have to update the URL manually.

I get a message “GLX version 1.2 or higher is required” when I try to open a Linux terminal window. This message is observed in SUSE Linux 11 and 12.

This is a warning message and does not affect the functionality of the product.

I am not able to create a inventory repository using a specific catalog and inventory file through command line interface. How do I proceed?

Ensure that the catalog and inventory are available in the same network location and then create a repository.

Where can I change the DUP sequence order in DRM 3.x before exporting to a deployment format?

You can no longer customize the sequence to install DUPs. Starting DRM 3.0, the smart deployment feature now run DSU at install time on a server configuration to determine the proper order to install the DUPs. Therefore. The default sequence is:

- 1 Applications
- 2 Device Firmware
- 3 Drivers
- 4 BIOS
- 5 iDRAC/LC

I am not able to install DRM in a custom location on Linux operating system. How do I proceed with the installation?

On Linux operating system, you cannot install DRM to a custom location through GUI installer mode. By default, the installer location is set to `/opt/dell`. However, you can use the CLI interactive mode to install DRM on a custom location.

After I delete a bundle, it is not removed from the bundle list on the GUI. Should I delete it elsewhere so that it is updated on the GUI?

If the size of a bundle or a collection of bundles selected to be deleted exceeds 1GB, several minutes may be required to delete and reflect the progress on the GUI. The workaround is to wait for sometime for the change to be reflected on the GUI or exit from the DRM console and reopen the DRM application.