

Dell™ OpenManage™  
Deployment Toolkit  
**User's Guide**

# Notes and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

---

**Information in this document is subject to change without notice.**

**© 2009 Dell Inc. All rights reserved.**

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *PowerEdge*, *PowerVault*, and *OpenManage* are trademarks of Dell Inc.; *Intel386* is a trademark and *Intel* and *Pentium* are registered trademarks of Intel Corporation in the United States and other countries; *Microsoft*, *MS-DOS*, *Windows*, *Windows NT*, *Active Directory*, and *Windows Server* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Novell*, *NetWare*, and *SUSE* are registered trademarks of Novell, Inc. in the United States and other countries; *Red Hat* and *Red Hat Enterprise Linux* are registered trademarks of Red Hat, Inc. in the United States and other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

The sample scripts provided with the Dell OpenManage Deployment Toolkit are provided "as is." Dell disclaims any and all warranties, express, implied or statutory, with respect to the sample scripts, including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose, title and any warranty of non-infringement. Use the sample scripts at your own risk. Dell shall not be liable for any direct or indirect damages incurred in using the sample scripts. In no event shall Dell or its suppliers be responsible for any direct or indirect damages whatsoever (including, without limitation, damages for loss of profits, loss of use, loss of data, business interruption, or other pecuniary loss, nor for punitive, incidental, consequential, or special damages of any kind, under any part of this agreement, even if advised or aware of the possibility of such damage.

**April 2009**

# Contents

1	Introduction . . . . .	11
	<b>Introduction to the DTK User's Guide</b> . . . . .	12
	<b>What's New</b> . . . . .	14
	<b>Prerequisites and Requirements</b> . . . . .	14
	Supported Operating Systems to Run DTK Utilities . . . . .	15
	Supported Systems . . . . .	15
	Supported BIOS Firmware Versions . . . . .	15
	Installation Prerequisites . . . . .	15
	Deployment Prerequisites . . . . .	16
	<b>Deploying Operating Systems</b> . . . . .	18
	<b>Deployment Methods</b> . . . . .	18
	<b>DTK Deployment Overview</b> . . . . .	19
	Preparing for Deployment . . . . .	19
	Deploying . . . . .	21
	<b>Other Dell Documents You Might Need</b> . . . . .	23
	<b>Other Supporting Documents You Might Need</b> . . . . .	24
	<b>Obtaining Technical Assistance</b> . . . . .	25

2	Choosing a Microsoft Windows PE-Based Deployment Method . . . . .	27
	<b>Choosing a Deployment Method for Microsoft Windows PE . . . . .</b>	<b>27</b>
	CD-Based Local Deployment . . . . .	27
	CD-Based Local Deployment With Networking Enabled . . . . .	28
	Using a Third-Party Deployment Solution Framework . . . . .	29
	<b>Deployment Matrix (Windows PE) . . . . .</b>	<b>30</b>
3	Preparing the Directory Structure for Deployment in Microsoft Windows PE . . . . .	33
	<b>Upgrading Your DTK Version . . . . .</b>	<b>33</b>
	<b>Obtaining DTK . . . . .</b>	<b>33</b>
	<b>DTK Contents . . . . .</b>	<b>36</b>
	System Utilities and Supporting Files . . . . .	36
	Sample Configuration Files . . . . .	38
	Sample Scripts . . . . .	39
	Documentation . . . . .	41
	Drivers . . . . .	42
	Miscellaneous . . . . .	42
	<b>Other Supporting Tools and System Files . . . . .</b>	<b>43</b>

<b>Setting Up a Directory Structure for Deployment</b> . . . . .	<b>45</b>
DTK Utilities and Files . . . . .	45
System-Specific Files . . . . .	46
Operating System Installation Files . . . . .	48
<b>Configuring a Source System</b> . . . . .	<b>52</b>
RAC Configuration . . . . .	53
<b>4 Preparing the Script Files for Deployment Using Microsoft Windows PE</b> . . . . .	<b>55</b>
<b>Using the Sample DTK Scripts to Run a Full Deployment in Windows PE</b> . . . . .	<b>56</b>
The Master Batch File (DEPLOY.BAT) . . . . .	56
<b>Editing the Sample Batch Files to Perform a Complete System Deployment in Windows PE</b> . . . . .	<b>57</b>
Using the Sample Scripts in a Scripted Deployment . . . . .	57
TKENVSET.BAT . . . . .	64
Editing DTK Task Scripts . . . . .	68
<b>Using the DTK Sample Scripts to Capture Configuration Information in Windows PE</b> . . . . .	<b>70</b>
Capturing the System BIOS and BMC Configuration With the SYSCAP.BAT Sample Script . . . . .	70
Capturing the RAC Configuration With the RACCAP.BAT Sample Script . . . . .	71

<b>Preparing the Operating System Installation</b>	
<b>Scripts for Windows PE</b> . . . . .	<b>73</b>
WININST.BAT . . . . .	73
UNATTEND.TXT . . . . .	74
UNATTEND.XML . . . . .	76

## 5 Running Deployment Scripts Using DTK and Microsoft Windows PE . . . . . 77

<b>Creating and Customizing Images for Windows PE 1.0</b> . . . . .	<b>77</b>
Obtaining Windows OEM Preinstallation Kit (OPK) or Windows PE CD . . . . .	77
Copying Tools From OPK or Windows PE CD on a Development System . . . . .	77
Creating a Standard Windows PE . . . . .	78
Integration of DTK Directory Structure in Windows PE Build . . . . .	79
Creating a Bootable Windows PE ISO Image . . . . .	80
CD-Based Local Deployment . . . . .	81
<b>Running the Windows PE 1.0 Image</b> . . . . .	<b>81</b>
CD-Based Local Deployment With Networking Enabled . . . . .	81
Using a Third-Party Deployment Solution Framework . . . . .	82
<b>Creating and Customizing Images for Windows PE 2.0</b> . . . . .	<b>82</b>
Integration of DTK Directory Structure in Windows PE Build . . . . .	82
Creating a Bootable CD . . . . .	83

<b>Running the Windows PE 2.0 Image</b> . . . . .	<b>83</b>
CD-Based Local Deployment . . . . .	83
CD-Based Local Deployment With Networking Enabled . . . . .	84
Using a Third-Party Deployment Solution Framework . . . . .	84
<b>6 Choosing an Embedded Linux-Based Deployment Method</b> . . . . .	<b>85</b>
<b>Choosing a Deployment Method for     Embedded Linux</b> . . . . .	<b>85</b>
Network-Based Deployment . . . . .	86
Using a Third-Party Deployment Solution Framework . . . . .	87
CD-Based Local Deployment for Embedded Linux . . . . .	87
<b>Deployment Matrix (Embedded Linux)</b> . . . . .	<b>89</b>
<b>7 Preparing the Directory Structure for Deployment in Embedded Linux</b> . . . .	<b>93</b>
<b>Upgrading Your DTK Version</b> . . . . .	<b>93</b>
<b>Installation for Embedded Linux</b> . . . . .	<b>93</b>
<b>DTK Contents</b> . . . . .	<b>97</b>
System Utilities and Supporting Files . . . . .	97
Sample Configuration Files . . . . .	99
Sample Scripts . . . . .	100
Documentation . . . . .	101
Drivers and Dell Real Mode Kernel (DRMK) . . . . .	101
Miscellaneous . . . . .	101

<b>Other Supporting Tools and System Files</b> . . . . .	<b>101</b>
<b>Setting Up a Directory Structure for Deployment</b> . . . . .	<b>103</b>
DTK Utilities and Files . . . . .	103
System-Specific Files . . . . .	103
Creating Operating System Installation Directories for Supported Linux Operating Systems . . . . .	105
<b>Configuring a Source System</b> . . . . .	<b>107</b>
How to Obtain Dell Utility Partition Files . . . . .	108
RAC Configuration . . . . .	108
<b>8 Preparing the Script Files for Deployment Using Embedded Linux</b> . . . . .	<b>109</b>
<b>Using the Sample DTK Scripts to Run a Full Deployment in Embedded Linux</b> . . . . .	<b>109</b>
The Master Deployment File . . . . .	109
<b>Editing the Sample Batch Files to Perform a Complete System Deployment in Embedded Linux</b> . . . . .	<b>110</b>
Using the Sample Scripts in a Scripted Deployment . . . . .	110
tkenvset.sh . . . . .	116
Editing DTK Task Scripts . . . . .	121



<b>Using the DTK Sample Scripts to Capture Configuration Information in Embedded Linux</b>	<b>123</b>
Capturing the System BIOS and BMC Configuration With the syscap.sh Sample Script	123
Capturing the RAC Configuration With the raccap.sh Sample Script	124
<b>Preparing the Operating System Installation Scripts</b>	<b>126</b>
Red Hat Enterprise Linux Server Operating Systems	126
lininst.sh	126
ks.cfg (for Red Hat Enterprise Linux Server Version 4) and ks-rhel5.cfg (for Red Hat Enterprise Linux Server Version 5)	127
Install Linux Using lininst.sh	127
SUSE Linux Enterprise Server Operating Systems	128
suseinst.sh	128
autoinst.xml (for SUSE Linux Enterprise Server)	129
<b>9 Running Deployment Scripts Using DTK and Embedded Linux</b>	<b>131</b>
Deployment Using Dell-Provided Embedded Linux	131
Deployment Using Customized Embedded Linux	134
Using a Third-Party Deployment Solution Framework	134

10	Running Dell Update Packages in Embedded Linux . . . . .	135
	Running Update Packages in Dell-Provided Embedded Linux . . . . .	135
	Running Update Packages in Customized Embedded Linux . . . . .	135
11	Known Issues and Frequently Asked Questions . . . . .	139
	<b>Known Issues</b> . . . . .	<b>139</b>
	General Issues . . . . .	139
	RAIDCFG Issues . . . . .	139
	RACADM Issues . . . . .	140
	Windows PE Installation Issues . . . . .	140
	<b>Frequently Asked Questions</b> . . . . .	<b>140</b>
	General Deployment Questions . . . . .	140
	RAIDCFG Questions . . . . .	141
	SYSCFG Questions . . . . .	145
	Embedded Linux Questions . . . . .	146
	Windows PE Questions . . . . .	147
	Glossary . . . . .	149
	Index . . . . .	171

# Introduction

The Dell™ OpenManage™ Deployment Toolkit (DTK) includes a set of utilities for configuring and deploying Dell systems. The DTK is designed for customers who need to build scripted installations to deploy large numbers of systems in a reliable fashion without having to dramatically change their current deployment processes.

In addition to the command line utilities used to configure various system features, the DTK also provides sample scripts and configuration files to perform common deployment tasks and documentation. These files and scripts describe the use of DTK in Microsoft® Windows® Preinstallation Environment (Windows PE) and embedded Linux environments.

The benefits of the DTK:

- Provides the tools necessary to automate the pre-operating system configuration tasks and the unattended operating system installation tasks when deploying Dell systems.
- Scales to support from one to many system deployment efforts.
- Facilitates consistent system configurations across multiple systems.
- Provides diverse and useful deployment tools that can be utilized in many different ways.

# Introduction to the DTK User's Guide

While the DTK is designed to be flexible and expandable, this guide is limited to providing general, best practices procedures that focus on the basic tasks for a successful deployment. Users might find many alternative solutions to the best practices guidelines described in this guide and many additional uses for the DTK utilities beyond what is covered in this guide or in the *Dell OpenManage Deployment Toolkit Command Line Interface Reference Guide*.

**⚠ CAUTION: The best practices guidelines described in this document were developed and tested on specific systems with specific hardware and software configurations. As a result, the examples and instructions described in this guide are not applicable to every environment. The open nature of the DTK utilities and scripting methodology is designed to allow the flexibility to modify the examples, procedures, and suggestions to best fit your specific environment. Using the DTK examples without first making modifications based on your specific IT environment is likely to result in failed deployments.**

Information in this guide is distinctly divided for Windows PE and embedded Linux. Even though the nature of topics covered for both environments is similar, the contents are very different, and has been organized into separate sections. This will enable the user to read only those sections that are relevant. Content in this *User's Guide* is organized as documented in Table 1-1.

**Table 1-1. Information Organization in This Guide**

Topics	Section for Windows PE	Section for Embedded Linux
Introduction, that includes information on: <ul style="list-style-type: none"><li>• DTK</li><li>• What's new for this release</li><li>• Prerequisites and requirements</li><li>• DTK deployment overview</li></ul>	Introduction	Introduction
Planning, that includes best practices for choosing a deployment method	"Choosing a Microsoft Windows PE-Based Deployment Method"	"Choosing an Embedded Linux-Based Deployment Method"

**Table 1-1. Information Organization in This Guide (continued)**

<b>Topics</b>	<b>Section for Windows PE</b>	<b>Section for Embedded Linux</b>
Preparing the deployment directory structure, that includes best practices for: <ul style="list-style-type: none"><li>• Installing DTK</li><li>• Gathering and organizing deployment files (DTK, operating system, drivers, systems management software, and so on)</li><li>• Preparing an optimally configured source system</li></ul>	"Preparing the Directory Structure for Deployment in Microsoft Windows PE"	"Preparing the Directory Structure for Deployment in Embedded Linux"
Preparing the deployment script files, that includes best practices for: <ul style="list-style-type: none"><li>• Editing and modifying sample scripts</li><li>• Capturing basic input/output system (BIOS), baseboard management controller (BMC), and remote access controller (RAC) configuration profiles from an optimally configured source system</li></ul>	"Preparing the Script Files for Deployment Using Microsoft Windows PE"	"Preparing the Script Files for Deployment Using Embedded Linux"
Running a scripted deployment that includes best practices for: <ul style="list-style-type: none"><li>• Creating deployment media</li><li>• Running the deployment</li></ul>	"Running Deployment Scripts Using DTK and Microsoft Windows PE"	"Running Deployment Scripts Using DTK and Embedded Linux"
Running Dell Update Packages in the embedded Linux environment on supported Dell systems.	Not applicable	"Running Dell Update Packages in Embedded Linux"




**NOTE:** The best practices examples included in this guide are intended to provide illustrations for using specific scripts and configurations that have been tested on specific Dell systems.

This guide also includes a "Known Issues and Frequently Asked Questions" section.

# What's New

The new features for this release include:


- Support for new Dell systems
  -  **NOTE:** For the list of Dell systems supported for this version of DTK, see the `readme.txt` file in the root folder, or the *Dell Systems Software Support Matrix* on the *Dell Systems Management Tools and Documentation* DVD or on the Dell Support website at [support.dell.com](http://support.dell.com).
- Support for new CLI commands. See *Dell OpenManage Deployment Toolkit Command Line Interface Reference Guide* for more information.
- Support for solid state drives.

# Prerequisites and Requirements

The DTK is a collection of Windows PE- and Linux-based utilities and scripts that assist in performing pre-operating system tasks and deploying Dell systems. An advanced knowledge of Windows PE and Linux is required for users who want to use the DTK utilities to perform pre-operating system configuration tasks or to run a scripted deployment in the respective environments.

A pre-operating system environment is defined as the environment used to configure system hardware *before* a major operating system, such as Windows or Linux, is installed. The DTK utilities and scripts, for example, are executed in a Windows PE or embedded Linux environment for hardware configuration.

Because of the open nature of the utilities and scripts and the environment in which they can be used, it is strongly recommended that DTK users have an advanced understanding of the Windows PE and Linux environment and scripting knowledge for the respective environments. DTK users with an advanced understanding of Windows PE and Linux can take full advantage of the utilities and exploit their capabilities above and beyond what the sample scripts can provide.

 **CAUTION:** Some of the DTK utilities can destroy data if used incorrectly. To avoid the potential risk of data loss, take all necessary precautions to protect data so that mission-critical systems are not disrupted in the unlikely event of a failure. See the *Deployment Toolkit Command Line Interface Reference Guide* for complete information about the capabilities of each DTK utility.

## Supported Operating Systems to Run DTK Utilities

For Windows PE, the DTK utilities support Windows PE version 2005 (created using 32-bit versions of Microsoft Windows Server 2003 family with Service Pack 1 [SP1]) and Windows PE 2.0 (created using 32-bit version built on the Windows Vista kernel).



**NOTE:** DTK utilities do not support Windows PE created with any 64-bit version of Microsoft Windows Server 2003.

For embedded Linux, the DTK utilities support Red Hat® Enterprise Linux® Server (version 4, update 4) 32-bit.

## Supported Systems

For the list of Dell systems supported for this version of DTK, see the **readme.txt** in the root folder, or the *Dell Systems Software Support Matrix* on the *Dell Systems Management Tools and Documentation* DVD or on the Dell Support website at [support.dell.com](http://support.dell.com).

## Supported BIOS Firmware Versions

A minimum BIOS version is recommended on some of the platforms for all the DTK options to work correctly. In general, it is good practice to use the latest ("n") version of BIOS firmware or the "n-1" version that is available on the Dell Support website at [support.dell.com](http://support.dell.com).

## Installation Prerequisites

Before installing the DTK components for Windows PE, ensure that you have the following:

- The DTK self-extracting zip file (**DTK3.X-WINPE-XX.exe**), which contains the utilities, sample scripts, sample configuration files, and documentation you need to deploy your Dell system
- A Windows workstation that has at least 500 MB of free hard-drive space

Before installing the DTK components for embedded Linux, ensure that you have the following:

- The DTK ISO image, which contains the utilities, sample scripts, sample configuration files, and documentation you need to deploy your Dell system
- A Linux workstation that has at least 200 MB of free hard-drive space

## Deployment Prerequisites

Before beginning the deployment process for Windows PE, ensure that you have all of the following tools, software, and information ready to use or consult:

- Advanced knowledge of Windows
- OEM Preinstallation Kit (OPK) or Windows PE CD and Windows Server 2003 (with SP1) to build Windows PE 1.0
- Windows Automated Installation Kit (Windows AIK) CD version 936330 or later to customize Windows PE 2.0
- An unzip utility
- Working knowledge to build Windows PE 1.0 and Windows PE 2.0 (See the Microsoft documentation to customize Windows PE 1.0 and Windows PE 2.0)
- Working knowledge of Microsoft Remote Installation Services (RIS) and Automated Deployment Services (ADS) (including setting up of RIS and ADS environments) or any other third party deployment system or tool for Windows PE 1.0
- Working knowledge of Windows Deployment Services (WDS) or any other third party deployment system or tool for Windows PE 2.0
- A workstation with the following capabilities:
  - A writable CD drive and CD-writing software (optional)
  - Network access
- A target system with a CD drive, if performing a local deployment
- A target system with a CD drive and network access, if performing a network deployment
- All DTK utilities, sample scripts, and sample configuration files
- All other utilities and files necessary to perform the deployment, including all required Windows PE drivers, operating system drivers, and the Dell utility partition image file
- DTK documentation:
  - *Dell OpenManage Deployment Toolkit Version Command Line Interface Reference Guide*
  - *Dell OpenManage Deployment Toolkit Version User's Guide*



- The *Dell Systems Management Tools and Documentation DVD*



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

- Your operating system software and documentation
- An optimally configured source system with network access

For embedded Linux, ensure that you have all of the following tools, software, and information ready to use or consult:

- Advanced knowledge of Linux and Linux scripting (Bash), Linux networking, installing and working with RPM Package Managers (RPMs), and creating and modifying loop file systems
- Any third party deployment system or tool
- A workstation with the following capabilities:
  - A writable CD drive and CD-writing software (optional)
  - Network access
- A target system with a CD drive, if performing a local deployment
- A target system with a CD drive and network access, if performing a network deployment
- All DTK utilities, sample scripts, and sample configuration files
- All other utilities and files necessary to perform the deployment, including all required Linux drivers, operating system drivers, and the Dell utility partition file
- DTK documentation:
  - *Deployment Toolkit Version Command Line Interface Reference Guide*
  - *Deployment Toolkit Version User's Guide*
- The *Dell Systems Management Tools and Documentation DVD*



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

- Your operating system software and documentation
- An optimally configured source system with network access

# Deploying Operating Systems

After the system hardware is versioned and configured, an operating system can be installed using unattended setup files, samples of which are provided as part of the DTK. While these sample configuration files are operating system specific, they have been enhanced for Dell systems. See your operating system documentation for more information about how to modify these unattended installation files.

For Windows PE, the sample configuration files contain examples to deploy the following operating systems:

- Windows Server 2003 with SP1 (32-bit)
- Windows Server 2003 with SP2 (32-bit)
- Windows Server 2008 (32-bit)



**NOTE:** For the latest supported operating systems, see the Windows PE documentation.

For embedded Linux, the sample configuration files contain examples to deploy the following operating systems:

- Red Hat Enterprise Linux Server version 4 (32- and 64-bit)
- Red Hat Enterprise Linux Server version 5 (32- and 64-bit)
- SUSE® Linux Enterprise Server version 10 (64-bit)

## Deployment Methods

Dell systems can be deployed using several different methods. The most common method is using the Systems Build and Update Utility on the *Dell Systems Management Tools and Documentation* DVD that is shipped with your system. Currently, this method is used to deploy a single system at a time with the installation wizard.

The DTK, on the other hand, offers a complete set of utilities and sample scripts that can be used to automate deployment of large numbers of Dell systems. This guide is designed to help guide you through some of the most basic planning considerations, logistical preparations, and deployment procedures to get you started using the DTK to deploy Dell systems.

# DTK Deployment Overview

## Preparing for Deployment

The deployment process can be separated into two main tasks: preparation and the actual deployment.

To prepare for using the DTK utilities and scripts to deploy to a target system in the Windows PE environment:

- 1 Copy or extract the DTK utilities, sample scripts, sample configuration files, and drivers provided (in the zip file) into the Windows PE image.
- 2 Organize the DTK utilities, scripts, and configuration files, the operating system installation files, and the requisite system files and drivers on a network share or local media.
- 3 Set up an optimally configured source system by using the Dell Systems Build and Update Utility to install your operating system; and the Systems Service and Diagnostics Tools to load drivers. (This source system will be the master server that will be used to replicate settings onto target servers.)



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

- 4 Edit the DTK sample script files that read the system configuration files to set up the system BIOS, BMC, RAID, and RAC and then install an operating system on a target system.
- 5 Generate a system BIOS, BMC, RAID, and/or RAC configuration profile from the optimally configured source system. (This source system will be the master server that will be used to replicate settings onto target servers.) You can obtain the system BIOS, BMC, RAID, and/or RAC configuration files by booting from the DTK Windows PE ISO image and running the SYSCAPBAT, RAIDCAPBAT, and RACCAPBAT scripts. Then, copy the generated configuration files to a read/write share onto the workstation.



**NOTE:** In previous releases, you could use a system profile generated on a specific Dell system to deploy only that same system model. From DTK version 2.4 and later, you can use a system BIOS configuration profile generated for all systems belonging to the same generation. For example, `syscfg_x8xx.ini` for x8xx systems, `syscfg_x9xx.ini` for x9xx systems, and so on.

- 6 Create an operating system answer file that contains unattended operating system software installation information.

To prepare for using the DTK utilities and scripts to deploy to a target system in the embedded Linux environment:

- 1 Obtain the DTK Linux ISO image, which is a self-contained bootable ISO image.
- 2 Use and customize the sample scripts per your requirements.
- 3 Set up an optimally configured source system by using the Systems Build and Update Utility on the *Dell Systems Management Tools and Documentation DVD* to install your operating system. Use the Systems Service and Diagnostics Tools on the *Dell Systems Management Tools and Documentation DVD* to load drivers.



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

- 4 Install an operating system on a target system.
- 5 Generate a system BIOS, BMC, RAID, and/or RAC configuration profile from the optimally configured source system. (This source system will be the master server that will be used to replicate settings onto target servers.) You can obtain the system BIOS, BMC, RAID, and/or RAC configuration files by booting from the DTK Linux ISO image and running the `syscap.sh`, `raidcap.sh`, and `raccap.sh` scripts. Then, copy the generated configuration files to a read/write share onto the workstation.



**NOTE:** In previous releases, you could use a system profile generated on a specific Dell system to deploy only that same system model. From DTK version 2.4 and later, you can use a system BIOS configuration profile generated for all systems belonging to the same generation. For example, `syscfg_x8xx.ini` for x8xx systems, `syscfg_x9xx.ini` for x9xx systems, and so on.

- 6 Create an operating system answer file that contains unattended operating system software installation information.

## Deploying

After you have prepared all scripts, files, and utilities, you are ready to proceed with the deployment process. While there are many ways to use the DTK utilities to deploy Dell systems, this guide focuses on the two most common methods for Windows PE and embedded Linux: CD-based deployment (local) and network-based deployment (remote).

### Deployment Using Removable Boot Media With a Network Connection (CD-Based)

- 1** Create a deployment CD containing a bootable image with the appropriate CD and network drivers, along with any utilities needed to connect to a network share. The deployment CD initiates the deployment process by mapping to the network share where the deployment directory structure resides.
- 2** Insert the bootable CD into the appropriate drive of the system to be deployed.
- 3** Boot or reboot the system.

The configuration process begins:

- Windows PE or embedded Linux, as the case may be, is loaded from the CD.
- Network shares are mapped.
- The DTK scripts execute the necessary DTK utilities from the network share or the CD itself.
- Configuration information is read from the network share.
- The operating system is installed from a network share.  
(This installation may happen after your system reboots.)

## **Deployment Using Removable Boot Media Without a Network Connection (CD-Based)**

- 1** Create a deployment CD containing a bootable image with the appropriate drivers. The CD must also include the complete deployment directory structure, which contains all the DTK utilities, scripts, and configuration files, an operating system installation answer file, and the required operating system installation files and drivers.
- 2** Insert the bootable CD into the CD drive of the system to be deployed (the target system).
- 3** Boot or reboot the target system.

The deployment process begins:

- Windows PE or embedded Linux, as the case maybe, is loaded from the CD.
- The DTK scripts execute the necessary DTK utilities from the CD.
- Configuration information is read from the CD.
- The operating system is installed from the CD.

## **Network-Based Deployment (Remote)**

For Windows PE environments, deployment using RIS is recommended. (For details, see the Microsoft RIS documentation.) You can also use any other deployment tool such as ADS.

For embedded Linux environments, a PXE set up is recommended. (For details, see documentation available on your Linux operating system.)

## Other Dell Documents You Might Need

In addition to this *User's Guide* and the *Deployment Toolkit Command Line Interface Reference Guide*, both of which are available as part of the DTK download and on the Dell Support website at [support.dell.com](http://support.dell.com), you can find the following guides either on the Dell Support website or on the on the *Dell Systems Management Tools and Documentation DVD*:

- The *Dell OpenManage Installation and Security User's Guide* provides additional information about performing an unattended installation of Server Administrator on systems running supported Windows, Red Hat Enterprise Linux Server, and SUSE Linux Enterprise Server operating systems.
- The *Dell OpenManage Server Administrator Compatibility Guide* provides compatibility information about Server Administrator installation and operation on various hardware platforms (or systems) running supported Windows, Red Hat Enterprise Linux Server, and SUSE Linux Enterprise Server operating systems.
- The *Dell Systems Software Support Matrix* provides information about the various Dell systems, the operating systems supported by these systems, and the Dell OpenManage components that can be installed on these systems.
- The *Dell Systems Build and Update Utility Quick Reference Guide* is an introduction to the Dell Systems Build and Update Utility, and provides tips on how to make the product effective in helping you streamline your deployment and update procedures for Dell systems.
- The *Dell Remote Access Controller 5 User's Guide* provides comprehensive information about using the **RACADM** command line utility to configure a DRAC 5.
- The *Dell Chassis Management Controller User's Guide* provides comprehensive information about using the controller that manages all modules in the chassis containing your Dell system.
- The *Integrated Dell Remote Access Controller User's Guide* provides information about installation, configuration, and maintenance of the Integrated Dell Remote Access Controller (iDRAC) on management and managed systems.
- The *Dell Remote Access Controller/Modular Chassis User's Guide* provides information about installation, configuration, and maintenance of the Dell Remote Access Controller/Modular Chassis (DRAC/MC).

- The *Dell Remote Access Controller Racadm User's Guide* provides comprehensive information about using the **RACADM** command line utility.
- The *Dell Baseboard Management Controller Utilities User's Guide* provides information about configuring a managed system to use the BMC Management Utility to manage your system through its BMC.
- The *Dell Update Packages User's Guide* provides information about obtaining and using Dell Update Packages as part of your system update strategy.

Additionally, the Deployment Toolkit **readme.txt** file, which is available as part of the DTK download and on the Dell Support website at [support.dell.com](http://support.dell.com), provides the latest available information for the installation and operation of the DTK components.

## Other Supporting Documents You Might Need

Besides the Dell-provided documentation, there are numerous other resources to aid you in planning and executing a DTK-assisted deployment:

- Operating system documentation to prepare for and execute the unattended installation process. In addition, you should consult the available Web-based resources such as:
  - The Microsoft Tech Net database at [www.microsoft.com/technet](http://www.microsoft.com/technet)
  - The Red Hat Enterprise Linux support pages at [www.redhat.com](http://www.redhat.com)
  - The SUSE Linux Enterprise Server support pages at [www.novell.com](http://www.novell.com)
- Windows PE 1.0, OEM Preinstallation Kit (OPK), and ADS documentation
- Windows PE 2.0, Windows Automated Installation Kit (Windows AIK), and Windows Deployment Services (WDS) documentation
- Imaging software documentation, if you are creating a bootable CD or are planning to deploy from an image (deploying from an image is not covered in this guide)



## Obtaining Technical Assistance

If at any time you do not understand a procedure described in this guide or if your product does not perform as expected, help tools are available to assist you. For more information about these help tools, see "Getting Help" in your system's *Hardware Owner's Manual*.

Additionally, Dell Enterprise Training and Certification is available; see [www.dell.com/training](http://www.dell.com/training) for more information. This service may not be offered in all locations.



# Choosing a Microsoft Windows PE-Based Deployment Method

A well-thought-out deployment plan is critical to the success of your deployment effort and includes the following considerations:

- Assessing your existing IT environment
- Selecting an operating system
- Selecting the optimum Dell™ OpenManage™ systems management software configuration for your system
- Choosing a deployment method

The Deployment Toolkit (DTK) is designed to be flexible enough to fit into almost any deployment plan. For the purposes of this document, however, the focus is on two specific deployment methods: CD-based deployment (local) and network-based deployment (remote).

## Choosing a Deployment Method for Microsoft Windows PE

The DTK components can be used in many different ways to assist IT staff in deploying Dell systems in large numbers. Because all the tools and scripts are task oriented, many of them can be used separately to perform a specific task on many systems or collectively to perform many tasks on many systems at once.

The configuration complexity and pros and cons of each deployment method are provided in Table 2-1. After you have decided which deployment method best fits your needs, you are ready to begin preparing for the deployment.

### CD-Based Local Deployment

The general CD-based deployment process includes:

- Creating a bootable Microsoft® Windows® PE CD
- Integrating latest drivers to recognize Dell-specific components
- Integrating DTK and its components (tools and scripts)
- Integrating operating system installation files for deployment

This deployment method is easy to assemble, but is the least flexible. Any change to the system configuration, for example, requires the creation of a new bootable CD. This method does not provide a writable media, making it necessary to use predefined and tested configuration files.

### **Creating a Customized Bootable Windows PE CD**

See "Running Deployment Scripts Using DTK and Microsoft Windows PE" for details on how to create a customized version of a single Windows PE image that can work across all supported Dell systems. You must include Dell-customized drivers and instrumentation drivers into your Windows PE CD-based operating system.

### **Complete Deployment Using DTK and Operating System Files From a CD Bootable Media**

After the customized version of the bootable Windows PE CD is created, IT administrators can take advantage of the sample task-oriented scripts provided in DTK to automate the whole deployment process. For this purely CD-based deployment, it is necessary to add the operating system installation files on the CD media. After the configuration is completed using DTK tools, the operating system can be installed using its native installer in unattended mode.

### **CD-Based Local Deployment With Networking Enabled**



**NOTE:** The DTK network-based deployment is not supported from mapped Novell® NetWare® systems.

This method provides greater flexibility and is highly recommended in large deployments. The prerequisites are the availability of network bandwidth and that all target systems are connected to the network. A brief description of the tasks for this method is given below.

## Bootable Windows PE CD With Networking Enabled

This process includes:

- Creating a bootable Windows PE CD with the appropriate network drivers. This step enables networking services to start, get an IP address, and bring the target system into a functioning network.



**NOTE:** See "Running Deployment Scripts Using DTK and Microsoft Windows PE" for details on how to create a customized version of a single Windows PE bootable CD that works across all Dell supported systems and provides an underlying networking stack.

- Creating scripts to automatically *map* to a predefined network share.
- Accessing scripts, configuration files, and operating system installation files from the network.

## Preparing and Populating the Network Share

This process includes:

- Creating a network share on a system that is always available over the network for the target systems to be deployed
- Ensuring that a large amount of space is available for storing operating system installation files
- Ensuring that proper permissions are assigned to this share so that the target systems can read files from and write files to the share

This deployment method is also easy to assemble. In addition, it provides greater flexibility in terms of making changes to the scripts and configuration files. Any change to the system configuration, for example, will not require re-creation of the bootable CD. This method also provides access to the remote share as writable media. Hence, the configuration files captured during the deployment automation process can be saved to this remote share.

## Using a Third-Party Deployment Solution Framework

You can use the DTK with any existing third-party deployment solution framework that provides a Automated Deployment Services (ADS) booting infrastructure for Windows PE 1.0 or Windows Deployment Services (WDS) booting infrastructure for Windows PE 2.0 that can be used as the transport mechanism for the DTK utilities. Because each third-party deployment framework is unique, however, these solutions fall outside the scope of this

document. If you plan to utilize a third-party deployment solution framework, keep in mind that the DTK is a Windows PE-based set of tools and scripts, so the deployment solution framework must also support embedded Windows PE as a pre-operating system environment.

## Deployment Matrix (Windows PE)

Depending on the scope, current business needs, network setup, and process, you might select any of the suggested methods of deployment. Table 2-1 outlines three typical methods of deployment and the environment most suitable for each.

**Table 2-1. Deployment Method Matrix**

Deployment Methods	Complexity	Advantages	Disadvantages
Local deployment (bootable CD)	Relatively simple	<ul style="list-style-type: none"> <li>• Necessary if a network connection is not available or is too slow.</li> <li>• Can install supported Windows operating systems.</li> </ul>	<ul style="list-style-type: none"> <li>• Any change requires the creation of a new bootable CD.</li> <li>• Limited space on CD for some operating system installation files.</li> <li>• Deployment tasks must be performed at the individual target system.</li> <li>• For Windows PE 1.0, CDs are read-only media and require the creation of a RAMDISK for temporary data storage.</li> <li>• Installation time is high.</li> </ul>

**Table 2-1. Deployment Method Matrix (continued)**

<b>Deployment Methods</b>	<b>Complexity</b>	<b>Advantages</b>	<b>Disadvantages</b>
Remote deployment over a network (bootable Windows PE CD with network stack loaded)	Moderate	<ul style="list-style-type: none"><li>• Everything is in one place in a network share.</li><li>• Easy to manage—changes have to be made in only one place.</li><li>• Data captured (profiles) can be stored in a network share.</li><li>• Data can be replicated from a network share.</li><li>• Can install supported Windows operating systems.</li></ul>	<ul style="list-style-type: none"><li>• Must have network connection.</li><li>• Deployment tasks must be performed at the individual target system.</li><li>• Must locate the appropriate Windows PE network drivers.</li><li>• Not supported from a mapped NetWare system.</li></ul>
Deployment solution framework from a third-party vendor	Mixed	<ul style="list-style-type: none"><li>• The DTK can be used in the context of third-party deployment solution framework.</li><li>• Third-party deployment solution framework is used as the deployment transport mechanism.</li><li>• Tasks and scripts can be pushed to the target systems.</li></ul>	Must either acquire and learn to use or have an existing third-party deployment solution framework.

After you have determined which deployment method best suits the needs of your organization, you are ready to begin building the DTK deployment directory structure on a network volume. For instructions on installing the DTK components and populating the deployment directory structure, see "Preparing the Directory Structure for Deployment in Microsoft Windows PE."





# Preparing the Directory Structure for Deployment in Microsoft Windows PE

This section describes some of the procedures necessary to begin the deployment process, including:

- Downloading and unzipping the Deployment Toolkit (DTK) components, including a comprehensive matrix of the DTK components
- Setting up a directory structure to facilitate a successful deployment, including a list of the supporting components that are not included with the DTK, but are needed to use the DTK
- Setting up an optimally configured source system
- Configuring supported RAID controllers

## Upgrading Your DTK Version

When upgrading from a previous release (2.x) of the DTK, ensure that you create the new DTK version 3.x environment separately from your previous version of DTK. This step is necessary because the environments and requirements for DTK version 3.x are completely different.

## Obtaining DTK

The DTK components are provided in a self-extracting zip file on the Dell™ Support website at [support.dell.com](http://support.dell.com). The self-extracting file can be opened on any system running a Microsoft® Windows® operating system. By default, the **DTK3.X-WINPE-XX.exe** files are extracted to the root directory of your local hard drive, C:\. This location can be changed by giving a different path when extracting the files, but it is strongly recommended that you keep the DTK default directory structure if you plan to use the sample deployment scripts provided with the DTK.

Perform the following steps to extract the DTK components to a workstation running Windows:

- 1** Download the DTK file **DTK3.X-WINPE-XX.exe** from the Dell Support website at **support.dell.com** and save it anywhere on your system.
- 2** After the file downloads, double-click the file.
- 3** Click **OK**.
- 4** Click **Unzip**.


By default, files are unzipped to **C:\**. You can unzip the DTK components to your local hard drive and then copy them later to a network volume, or you can change the installation path to an available network share. For example, you can unzip the files directly to the network share (for example, **Z:\**) that you plan to use in the deployment process.



**NOTE:** Do not copy the DTK components to a Novell® NetWare® network volume. The DTK network-based deployment is not supported from mapped Novell NetWare systems. The DTK utilities do not run in Windows PE when Novell's Client32 is loaded.

The files are unzipped in the directory structure shown in Figure 3-1.

**Figure 3-1. Sample DTK Default File Structure**

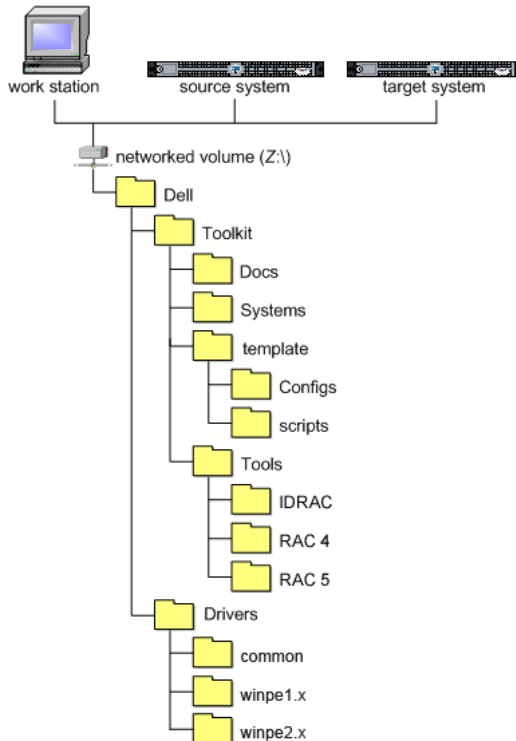

*Workstation* is the system on which the DTK components are extracted.

*Source system* is an optimally configured system from which the system settings are captured.

*Target system* is the system on which the settings captured from the source system are replicated.

The DTK utilities are in `Z:\Dell\Toolkit\Tools`.

The DTK sample scripts are in `Z:\Dell\Toolkit\template\scripts`.

The DTK sample configuration files are in `Z:\Dell\Toolkit\template\Configs`.

The DTK *User's Guide* and *Command Line Interface Reference Guide* are in `Z:\Dell\Toolkit\Docs`.

The directory `Z:\Dell\Toolkit\System`s is created as a placeholder that can be used for all system information that is captured using sample scripts and tools (for example, the system specific basic input/output system (BIOS) and baseboard management controller (BMC) configuration files used by the DTK utilities for configuring a system).

See "Setting Up a Directory Structure for Deployment" for further discussion of the deployment directory structure.

## DTK Contents

The DTK contains Windows PE-based utilities, sample scripts, sample configuration files, drivers, and documentation for automating the deployment of Dell systems. The following sections provide a complete list of the DTK contents and a short description of each component. For a more complete explanation of the DTK utilities, see the *Command Line Interface Reference Guide*. For an explanation of the sample configuration files and scripts, see "Editing the Sample Batch Files to Perform a Complete System Deployment in Windows PE."

### System Utilities and Supporting Files

Table 3-1 describes the files, located in `Z:\Dell\Toolkit\Tools`. These are the core tools (utilities) that perform pre-operating system configuration and deployment tasks. See the *Command Line Interface Reference Guide* for complete information about the capabilities of each DTK utility.

**Table 3-1. System Utilities and Supporting Files**

Toolkit Components	Purpose
config.ini	Configuration file used by <code>RAIDCFG.EXE</code> . <b>NOTE:</b> Do not edit this file. Incorrect edits might cause <code>RAIDCFG.EXE</code> to fail.
mr2kserv.exe	Service that needs to be running for <code>RAIDCFG.EXE</code> to function.
pci.ids	Used with <code>SYSCFG.EXE</code> to report PCI devices.
RAC 4	Configures Dell Remote Access Controller (DRAC) 4/P and DRAC 4/I.
RAC 5	Configures DRAC 5/iDRAC.

**Table 3-1. System Utilities and Supporting Files (continued)**

<b>Toolkit Components</b>	<b>Purpose</b>
iDRAC	Configures iDRAC6. <b>NOTE:</b> This feature may not be supported on all systems.
racadmErrorCodes.txt	Lists the error codes and messages for the <b>RACADM.EXE</b> tool.
RAIDCFG.EXE	Creates and reports Redundant Array of Independent Disks (RAID) information.
RaidcfgErrorCodes.txt	Lists the error codes and messages for the <b>RAIDCFG.EXE</b> tool.
stsvc.ini	Configuration file used by <b>RAIDCFG.EXE</b> . <b>NOTE:</b> Do not edit this file. Incorrect edits might cause <b>RAIDCFG.EXE</b> to fail.
sys.ini	A <b>.ini</b> file used with <b>syscfg</b> .
SYSCFG.EXE	<ul style="list-style-type: none"><li>• Reports and configures:<ul style="list-style-type: none"><li>– BIOS settings and options</li><li>– BMC settings and options</li><li>– RAC 5 settings and options</li></ul></li><li>• Maintains system state between reboots</li><li>• Reports hardware devices and other system-related information</li></ul>
SyscfgErrorCodes.txt	Lists the error codes and messages for the <b>SYSCFG.EXE</b> tool.
sysdrmk.exe	Used by <b>UPINIT.BAT</b> to patch the boot sector and Master Boot Record (MBR).
UpinitErrorCodes.txt	Lists the error codes and messages for <b>UPINIT.BAT</b> .
version.txt	Contains the DTK version in use.

## Sample Configuration Files

Table 3-2 describes examples of configuration files used to perform a scripted deployment. These files are located in `Z:\Dell\Toolkit\template\Configs` folder.



**NOTE:** All configuration files are provided as examples only. These sample configuration files must be edited before they can be used in any deployment tasks.

**Table 3-2. Sample Configuration Files**

<b>Toolkit Components</b>	<b>Purpose</b>	<b>Location</b>
RACCFG.INI	Sample configuration file for DRAC 4 remote access controllers.	Move to the directory <code>Z:\Dell\Toolkit\System\&lt;system&gt;</code> .
RAIDCFG.INI	Sample output file to enable RAID replication.	Move to the directory <code>Z:\Dell\Toolkit\System\&lt;system&gt;</code> .
SYSCFG.INI	Sample configuration file for SYSCFG utility to configure the BIOS and BMC settings.	Move to the directory <code>Z:\Dell\Toolkit\System\&lt;system&gt;</code> .
UNATTEND.TXT	Sample file used in Windows PE 1.0 environment with unattended installation of Microsoft Windows operating systems. This file is populated with all the necessary information for Dell-supported mass storage devices.	Move to the directory <code>Z:\Dell\Toolkit\System\&lt;system&gt;</code> after the UNATTEND.TXT file is edited.

**Table 3-2. Sample Configuration Files (continued)**

<b>Toolkit Components</b>	<b>Purpose</b>	<b>Location</b>
UNATTEND.XML	Sample file used in Windows PE 2.0 environment with unattended installation of Microsoft Windows operating systems. This file is populated with all the necessary information for Dell-supported mass storage devices.	Move to the directory <code>Z:\Dell\Toolkit\System\&lt;system&gt;</code> after the <code>UNATTEND.TXT</code> file is edited.
STARTNET.CMD	Sample script called by Windows PE 2.0 when it boots up.	<code>Z:\Dell\Toolkit\template\Configs</code>
WINBOM.INI	Sample file used to start the <code>racsvc</code> and <code>mr2kserv</code> services.	<code>Z:\Dell\Toolkit\template\Configs</code>
WINPEOEM.SIF	Sample file to add support for Dell mass storage drivers.	<code>Z:\Dell\Toolkit\template\Configs</code>

## Sample Scripts

Table 3-3 lists sample scripts of those necessary to perform a scripted deployment. The sample scripts are located in `Z:\Dell\Toolkit\template\scripts`.



**NOTE:** All DTK scripts are provided as examples only. Many of these sample scripts must be edited before they can be used in a deployment. Some customers may need to develop their own scripts entirely from scratch. Customers deploying multiple systems must provide unique information for each Dell system where appropriate. For example, system host names, IP addresses, and BIOS asset tags need to be unique for each system. The batch scripts and configuration files must be modified to reflect the unique information for each deployed system. Many options are available to optimize this process. See "Preparing the Script Files for Deployment Using Microsoft Windows PE" for information about using the sample scripts to perform a full deployment on supported Dell systems.

**Table 3-3. Sample Scripts**

<b>Toolkit Components</b>	<b>Purpose</b>
createup.cfg	This file is used by <b>UPINIT.BAT</b> .
DISKPARTCLR.CFG	Used by <b>PARTCFG.BAT</b> to clear the partitions on the selected disks.
DISKPARTOS.CFG	Used by <b>PARTCFG.BAT</b> to create deployment partition to install the operating system.
ERRHNDL.BAT	Handles errors returned in the DTK scripts.
LISTUP.CFG	This file is used by <b>UPINIT.BAT</b> .
MOUNTUP.CFG	This file is used by <b>UPINIT.BAT</b> .
PARTCFG.BAT	Creates and populates the Dell utility partition and creates the operating system partition on a specified hard drive. Before doing so, however, this script cleans out all existing partitions in your system.
RACCAP.BAT	Captures remote access controller (RAC) settings to a file for DRAC 4 remote access controllers.
RACREPBAT	Applies (replicates) the RAC settings saved in a file to the target system.
RAIDCFG.BAT	Configures the selected RAID controllers on the system.
SYSCAP.BAT	Captures BIOS and BMC configuration settings and saves them to a file.
SYSREPBAT	Applies (or replicates) BIOS and BMC configuration settings and configures the target system.
TKENVSET.BAT	Sets the path of the DTK installation and variables for the specific system being deployed.
UMOUNTUP.CFG	This file is used by <b>UPINIT.BAT</b> .
UPINIT.BAT	Creates and populates the Dell utility partition.



**Table 3-3. Sample Scripts (continued)**

<b>Toolkit Components</b>	<b>Purpose</b>
WININST.BAT	Performs an unattended installation of a supported Microsoft Windows 2000 and Windows Server® 2003 operating systems.
W2K8INST.BAT	Performs an unattended installation of supported Microsoft Windows Server 2008 operating system.
DTKRUNALL.BAT	Applies BIOS, BMC, RAC, and RAID settings saved in the files to the current system.

## Documentation

Table 3-4 describes documents containing reference information for each DTK utility and instructions for using the DTK utilities and sample scripts. Documentation can be found at **Z:\Dell\Toolkit\Docs**.

**Table 3-4. Documentation**

<b>Toolkit Components</b>	<b>Purpose</b>
<i>Command Line Interface Reference Guide</i>	Describes all DTK utilities, including all command line arguments and values, syntax, help, and examples.
<i>User's Guide</i>	Contains best practices guidelines for performing a scripted deployment.

## Drivers

Table 3-5 describes the essential and optional drivers required for Dell-supported hardware to build your Windows PE environment.



**NOTE:** The drivers provided have been tested successfully in the Windows PE environment built during the test.

**Table 3-5. Drivers**

Drivers	Purpose
winpe1.x\DRIVERINST.BAT	Used to install Dell-provided drivers (from <b>Z:\Dell\Drivers</b> ) into the customized Windows PE 1.0 image.
winpe2.x\VPE_DRIVERINST.BAT	Used to install Dell-provided drivers (from <b>Z:\Dell\Drivers</b> ) into the customized Windows PE 2.0 image.
common\Hardware application programming interface (HAPI)	Essential drivers for the DTK tools to work.
winpe1.x\Mass Storage	Essential drivers for mass storage controllers (for example, RAID and SAS [Serial Attached SCSI]) to work.
winpe2.x\Mass Storage	Essential drivers for mass storage controllers (for example, RAID and SAS [Serial Attached SCSI]) to work.
winpe1.x\Network interface card (NIC)	Recommended drivers for NICs.
winpe2.x\NIC	Recommended drivers for NICs.
common\RAC 4	Essential drivers for RACADM to work.
common\RAIDCFG	Essential drivers for RAIDCFG to work.

## Miscellaneous

The document **readme.txt**, located at **Z:\Dell\Toolkit**, provides the latest product information.

## Other Supporting Tools and System Files

While the DTK provides all the necessary utilities and scripts for deploying Dell systems, there are additional applications, utilities, and system files needed to create the pre-operating system environment in which this toolkit is used. Table 3-6 is a matrix of system files and other tools for you to be able to use the DTK utilities and its sample scripts.



**NOTE:** Ensure that the tools are 32-bit compatible.

**Table 3-6. Supporting Tools and System Files**

<b>Additional Tools</b>	<b>Purpose</b>	<b>Source</b>	<b>Save in DTK location</b>
OEM Preinstallation Kit (OPK) or Windows PE CD and Microsoft Windows Server 2003 (with SP1) to build Windows PE 1.0	Create a bootable CD for Windows PE 1.0. <b>NOTE:</b> Contact Microsoft to obtain the latest version of OPK or Windows PE CD.	<a href="http://www.microsoft.com">www.microsoft.com</a>	Save in the root directory of the bootable CD.
Windows Automated Installation Kit or Windows PE CD and Microsoft Windows Server <sup>®</sup> 2003 (with SP1) (Windows AIK) CD to build Windows PE 2.0	Create a bootable CD for Windows PE 2.0. <b>NOTE:</b> Contact Microsoft to obtain the latest version of AIK or Windows PE CD.	<a href="http://www.microsoft.com">www.microsoft.com</a>	Save in the root directory of the bootable CD.

**Table 3-6. Supporting Tools and System Files (continued)**

Additional Tools	Purpose	Source	Save in DTK location
32-bit unzip utility	Unzip utility partition image in Windows PE.	<p>www.info-zip.org</p> <p><b>NOTE:</b> This utility is not provided with the Dell-supplied DTK zip file. However, if you choose to use any other unzip utility than the one specified above, ensure that you rename the utility to <b>UNZIP.EXE</b> and that it supports the <code>-d</code> option to extract the contents to a specified directory.</p>	<p>Save in one of the path directories of your Windows PE image, preferably <code>\I386\system32</code>.</p> <p>Place the unzip utility in the <code>C:\Dell\Toolkit\System</code> folder as this will be copied to the <code>windows\system32</code> folder by the dell driver installation script <code>VPE_Driveinst.bat</code> for Windows PE 2.0.</p>
upimg.bin	<p>Contains system-specific Dell utility partition files.</p> <p><b>NOTE:</b> In the previous releases, each Dell system required a unique <b>upimg.bin</b> file. From DTK 2.3 and later, the <b>upimg.bin</b> file is common for all Dell systems.</p>	<p><code>Z:\Dell\Toolkit\System</code>, the Dell Support website at <a href="http://support.dell.com">support.dell.com</a>, or the Dell Systems Build and Update Utility on the <i>Dell Systems Management Tools and Documentation</i> DVD</p>	<p>Save in the <code>Z:\Dell\Toolkit\System</code> directory.</p>

# Setting Up a Directory Structure for Deployment

To perform a DTK-enabled deployment, you must create a deployment directory structure on either a network share or your local workstation hard drive. The deployment directory structure is a central repository for all deployment files and can be used successively as a testing space, a repository for a network deployment, and a repository to build a bootable deployment CD. If you plan to perform a network-based deployment, you must set up the directory structure on a network volume that is accessible from your workstation, the source system (to generate configuration information), and the target system (to deploy).

If you plan to run a scripted deployment from the DTK sample scripts, ensure that the following files are correctly structured in the deployment directory. The DTK sample scripts use this structure to set the default paths for deployment. If you make changes to the directory structure, you must also make changes to the sample scripts. The deployment directory structure consists of the following files:

- DTK utilities and files
- System-specific directories
- Operating system installation files directories



**NOTE:** Do not create your DTK directory structure on a NetWare network volume. The DTK network-based deployment is not supported from mapped NetWare systems.

## DTK Utilities and Files

All necessary DTK files are provided as part of the initial installation. It is strongly suggested that you use the default directory structure created in the initial installation of the DTK components. The sample scripts provided with the DTK are set up to use these default paths. See Figure 3-1.



**NOTE:** If you choose to create a directory structure for the DTK components that is different from the one provided in the initial installation, carefully review and edit each sample script (where necessary) to reflect the different directory structure.

A 32-bit unzip utility is needed to create the Dell utility partition. Ensure that you copy this utility into one of the path directories of your Windows PE 1.0 image, preferably `\I386\system32`; for Windows PE 2.0, the path directory should preferably be `\windows\system32`.

## System-Specific Files


The directory `Z:\Dell\Toolkit\System`s acts as a central repository for all the system-specific deployment information. For example, you can store all profile configuration files for an optimally configured PowerEdge™ 2850 in the directory `Z:\Dell\Toolkit\System\pe2850`. See Figure 3-2. These files can then be accessed from this directory when deploying multiple PowerEdge 2850 systems.

This directory can also be subdivided into multiple system-specific directories such as: `Z:\Dell\Toolkit\System\pe2850` for PowerEdge 2850 systems and `Z:\Dell\Toolkit\System\pe1850` for PowerEdge 1850 systems. See Figure 3-2.




**NOTE:** If you choose to create a directory structure for the system-specific files that is different from the one suggested in this guide, be sure to carefully review and edit each sample script (where necessary) to reflect the different directory structure.

**Figure 3-2. DTK System-Specific File Structure**

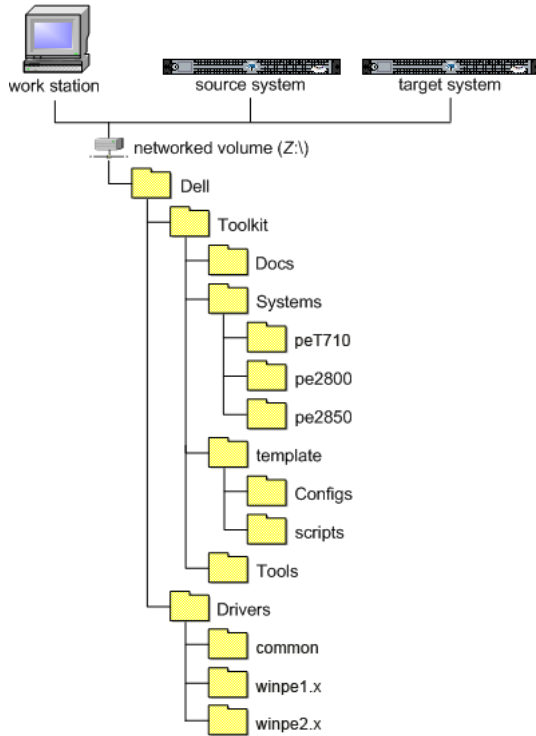

## Operating System Installation Files

Figure 3-3. Sample Operating System-Specific File Structure (Windows Server 2003)

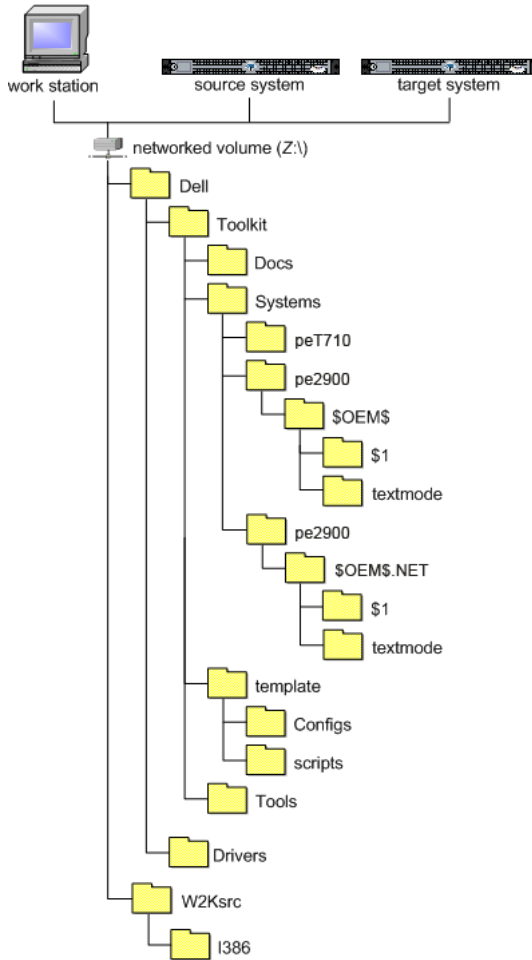



## **Creating Operating System Installation Directories for Windows Server 2003 Operating Systems**

For deployment of Windows Server 2003 operating systems, perform the following steps:

- 1** On a management station create a folder, for example **os\_deploy**.
- 2** Make this folder shareable.
- 3** Create two folders **Dell** and **W2K3SRC** under this shareable directory **os\_deploy**.
- 4** Copy the **Dell** folder from WinPE DTK CD to **Dell** folder created under **os\_deploy** folder on the management station.
- 5** Copy **i386** folder from the Windows Server 2003 operating system CD to the **W2K3SRC** folder created under the **os\_deploy** folder on the management station.
- 6** Inside the **os\_deploy\Dell\toolkit\systems** folder, create a target system folder for example “**pe4600**”. Inside this folder create a folder “**\$OEM\$.NET**” for the Windows Server 2003 operating system installation.
- 7** Create one more directory **textmode** under **\$OEM\$.NET**. Copy the extracted controller drivers downloaded from **support.dell.com** to the **textmode** folder.
- 8** Copy **unattended.txt** from **os\_deploy\dell\toolkit\template\configs** folder to **os\_deploy\dell\toolkit\systems\pe4600**.

**9** Edit `unattend.txt` and modify the following mandatory fields:

**Table 3-7. Mandatory Fields in unattend.txt**

Field	Description	Example
<code>OEMBootFiles</code>	List of files in the driver folder.	For example, in a system that has PERC 5, you must retain the following entry and remove the rest of the entries under the field <code>OEMBootFiles</code> .  <code>DELL_PERC5_PERC6_W2K3</code>  <code>percsas.sys</code>  <code>oemsetup.inf</code>  <code>nodev.inf</code>  <code>percsas.cat</code>
<code>MassStorageDrivers</code>	Storage controller details	For example, in a system that has PERC 5, you must retain the following entry and remove the rest of the entries under the field <code>MassStorageDrivers</code> .  <code>DELL PERC5 RAID Controller Driver (Server 2003 for x64) "="OEM"</code>

**10** Boot the server with the WinPE DTK media.

**11** After WinPE comes up make sure that the server is able to ping the management station.

**12** Run the following command to connect the server to the shared folder `os_deploy`.

```
Net use z: \\<share>\os_deploy
```

**13** On the server, set the following environment variables:

```
DT_OSSRC=z: \\<share>\W2K3SRC\i386
```

```
DT_UNATTEND=
```

```
z: \\<share>\dell\toolkit\systems\pe4600  
\unattend.txt
```

```
DT_OEM=
```

```
z: \\<share>\dell\toolkit\systems\pe4600\%OEM$.NET
```

- 14 Navigate to the mount point `z:\\<share>\dell\toolkit\template\scripts`, and run the `partcfg.bat` script to create the partition and then run the following to install the operating system:

```
wininst.bat NET
```

- 15 Reboot the server once you are at the command prompt and the system starts booting to the hard drive for operating system installation.

## Creating Operating System Installation Directories for Windows Server 2008 Operating Systems



**NOTE:** The following procedures are provided as a best practices guideline for creating operating system distribution folders compatible with the DTK sample scripts. For complete instructions on setting up an installation directory structure for an unattended installation, see your operating system documentation.


For deployment of Windows Server 2008 operating systems, perform the following steps:

- 1 Create an operating system-specific directory in the root directory of the network share. For example:  
`W2K8_deploy`
- 2 Create two directories under the `W2K8_deploy` directory: `sources` and `<platform name>`, for example, `PE2950`.
- 3 Copy the contents of the operating system CD to `sources`.
- 4 Under `PE2950`, create two directories: `$OEM$` and `Out-of-Box Drivers`.
- 5 Copy all the drivers to `W2K8_deploy\PE2950\Out-of-Box Drivers`. You can copy each driver to a different sub-folder.
- 6 Copy `unattend.xml` from `\Dell\Toolkit\template\Configs to W2K8_deploy\PE2950`.
- 7 If required, modify the `unattend.xml` for `DiskID` under the tags `DiskConfiguration` and `ImageInstall`. Default value is 0 for `DiskID`.
- 8 Make sure that `DiskID` specified in the `unattend.xml` is actually available to install the operating system. You can run the `DiskPart` utility to check disk details.
- 9 Boot your system with Windows PE 2.0 DTK media.
- 10 Use the following command syntax to connect your system to the shared folder, `W2K8_deploy`:  

```
Net use Z: \\10.94.140.12\W2K8_deploy
```

- 11 From your system, run `TKENVSET.BAT` under `Z:\Dell\Toolkit\template\scripts`
- 12 On your system, set `DT_DRIVE=Z:`
- 13 Navigate to `Z:\Dell\Toolkit\template\scripts` and run `W2K8INST.BAT`.

**Figure 3-4. Sample Operating System-Specific File Structure (Windows Server 2008)**

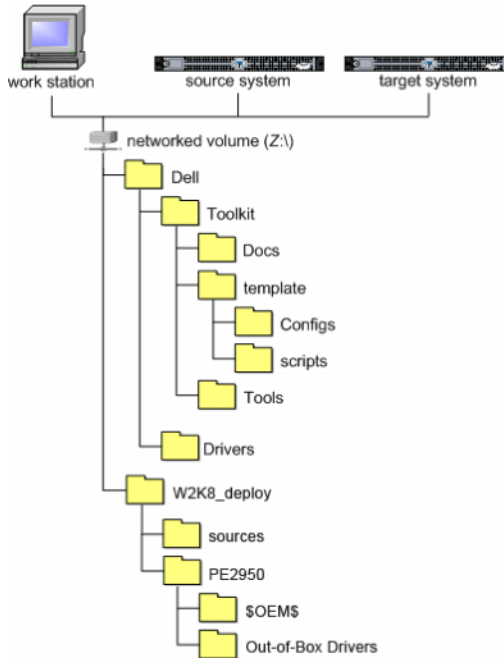

## Configuring a Source System

You need an optimally configured system both for testing purposes and as the source for the SYSCFG and RAC configuration files to be used in the deployment process. See "Using the DTK Sample Scripts to Capture Configuration Information in Windows PE" for instructions on using the sample DTK scripts, `SYSCAP.BAT` and `RACCAP.BAT`, to generate SYSCFG and RAC configuration files that are used to configure the target system.

You can use the Systems Build and Update Utility and Systems Service and Diagnostics Tools available on the *Dell Systems Management Tools and Documentation* DVD supplied with your system to streamline the operating system installation; to setup and configure your system, including automatic discovery and configuration of Dell-provided RAID controllers and network adapters; to access and load the latest utilities, drivers, and diagnostics for your system; and to install Dell OpenManage™ systems management software.



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

For complete information about using the Systems Build and Update Utility and Systems Service and Diagnostics Tools on the *Dell Systems Management Tools and Documentation* DVD, see the *Dell OpenManage Software Quick Installation Guide*, which is available on the Dell Support website at [support.dell.com](http://support.dell.com).

After you have loaded the operating system and all applicable device drivers from the Systems Build and Update Utility and Systems Service and Diagnostics Tools, check the Dell Support website at [support.dell.com](http://support.dell.com) for the latest drivers. Put all necessary drivers to be used in the deployment in the system directory for the target system. For example, if your target system is a PowerEdge 1850, put all necessary files in the `Z:\Dell\Toolkit\System\pe1850` directory; or if your target system is a PowerEdge 850, put all necessary files in the `Z:\Dell\Toolkit\System\pe0850` directory.

## RAC Configuration

Configure the RAC on your source system using the **RACADM.EXE** utility, if applicable. See the *Dell Remote Access Controller Racadm User's Guide* for comprehensive information about using the **RACADM.EXE** utility to configure the RAC on your source system.

After you have successfully prepared your directory structure for a deployment and fully configured your source system, you are ready to write, review, or edit the deployment sample scripts. For instructions on editing the sample scripts necessary to run a full deployment, see "Preparing the Script Files for Deployment Using Microsoft Windows PE."



# Preparing the Script Files for Deployment Using Microsoft Windows PE

This section describes the steps required to use the Deployment Toolkit (DTK) sample scripts to perform a full deployment of a target system in the Microsoft® Windows® PE environment.

There are four main tasks:

- Writing the deployment master batch file (as an example, referred to as **DEPLOY.BAT** in this document) or deployment script, editing the **TKENVSET.BAT** script, to set the variable values used in the deployment scripts
- Editing the supporting task scripts, as necessary
- Using the DTK sample scripts to capture basic input/output system (BIOS), baseboard management controller (BMC) (SYSCFG), and remote access controller (RAC) configuration information from an optimally configured source system
- Preparing the operating system installation scripts and answer files

# Using the Sample DTK Scripts to Run a Full Deployment in Windows PE

## The Master Batch File (DEPLOY.BAT)

A scripted DTK deployment relies on the master batch file (DEPLOY.BAT) to integrate all the applicable DTK task scripts and utilities and perform pre-operating system configuration tasks before launching the operating system installation files. DEPLOY.BAT, along with the TKENVSET.BAT scripts, makes up the master set of instructions that drives the deployment process. This file is not provided with the sample scripts. A sample DEPLOY.BAT is given below:

```
::
*****

::Call TKENVSET.BAT to discover platform information
::as well as set paths and environment variables for
::Deployment Toolkit Tools and Scripts.
*****
*****

:: call RAIDCFG.BAT to configure RAID.

::
*****
*****

:: Replicate the system settings to the current SUT!.
CALL SYSREP.BAT or DTKRUNALL.BAT.

::
*****
*****

::Partitioning the system hard disk. call PARTCFG.BAT.
*****
```



```

*****
:: Put hdd as first in boot sequence (1-removable, 2-
cdrom, 3-hdd)
:: If the system configuration has changed (i.e. a
::boot device was added, removed, or enabled in BIOS)
::the following line should be modified to reflect the
::new hdd device number.
:: This is calling Windows installer scripts.
*****
::%DT_TOOLS%\syscfg --bootseq=hdd.emb.0
::call WININST.BAT NET

```

## Editing the Sample Batch Files to Perform a Complete System Deployment in Windows PE

### Using the Sample Scripts in a Scripted Deployment

The sample scripts utilize the DTK utilities, the additional supporting utilities, the source system configuration files, the target system hardware drivers, and the operating system installation files to perform a full deployment of the target system.

The sample scripts provided with the DTK can be edited and customized using any ASCII text editor that conforms to the hardware available on the target systems. While it is recommended that you use the DTK sample scripts to automate your deployment tasks, you can create your own system deployment batch files using any ASCII text editor by incorporating the various DTK utilities and commands in the batch file.



**NOTE:** For more information about scripting batch files and specific batch file commands, see your Windows PE documentation.

Each of the utilities, scripts, and system configuration files are described below. Depending on your requirements, you may use all or only some of them in your deployment:

**DEPLOY.BAT**— You can write your master batch file (**DEPLOY.BAT**) to perform a full deployment of a system with the help of utilities, scripts, and configuration files. This file is not provided with the sample scripts.

Table 4-1 lists the scripts you may need in your deployment.

**Table 4-1. Scripts For Deployment**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><b>RACCAP.BAT</b> — Captures RAC settings to a file for DRAC 4.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>RACCAP.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>RACADM.EXE</b> — Used by <b>RACCAP.BAT</b> to retrieve RAC information and to configure settings.</li> </ul>	<p><b>RACREP.BAT</b> — Applies the RAC configuration settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>RACREP.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>RACADM.EXE</b> — Used by <b>RACREP.BAT</b> to replicate RAC information and to configure settings.</li> </ul>	<p><b>WININST.BAT</b> — Performs an unattended installation of supported Windows 2000 Server and Windows Server® 2003 operating systems.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>WININST.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>WINNT32.EXE</b> — Used by <b>WININST.BAT</b> to install the operating system in conjunction with the <b>UNATTEND.TXT</b> answer file.</li> <li>• <b>UNATTEND.TXT</b> — Used by <b>WININST.BAT</b> in conjunction with <b>WINNT32.EXE</b> to install the operating system files.</li> </ul>	<p><b>TKENVSET.BAT</b> — Sets the path of the DTK installation and variables for the system to be deployed and configured. The variables and paths specified in this file must be specified before any of the other supporting scripts can be used.</p> <ul style="list-style-type: none"> <li>• <b>SYSCFG.EXE</b> — Used by <b>TKENVSET.BAT</b> to discover the system type.</li> </ul>

**Table 4-1. Scripts For Deployment (*continued*)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><b>SYSCAP.BAT</b> — Captures BIOS and BMC configuration settings and saves them to a file.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>SYSCAP.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>SYSCFG.EXE</b> — Used by <b>SYSCAP.BAT</b> to configure the BIOS and BMC settings.</li> </ul>	<p><b>SYSREP.BAT</b> — Applies the BIOS and BMC settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>SYSREP.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>SYSCFG.EXE</b> — Used by <b>SYSREP.BAT</b> to configure the BIOS and BMC settings.</li> </ul>	<p><b>W2K8INST.BAT</b> — Performs an unattended installation of supported Windows Server 2008.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>W2K8INST.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>SETUPEXE</b> — Used by <b>W2K8INST.BAT</b> to install the operating system in conjunction with the <b>UNATTEND.XML</b> answer file.</li> <li>• <b>UNATTEND.XML</b> — Used by <b>W2K8INST.BAT</b> in conjunction with <b>SETUPEXE</b> to install the operating system files.</li> </ul>	<p><b>RAIDCFG.BAT</b> — Configures the selected Redundant Array of Independent Disks (RAID) controller detected in the system.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>RAIDCFG.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>RAIDCFG.EXE</b> — Used by <b>RAIDCFG.BAT</b> to retrieve RAID information and to configure settings.</li> </ul>

**Table 4-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><b>RAIDCAP.BAT</b>— Captures the RAID settings and saves them to a file.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>RAIDCAP.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>RAIDCFG.EXE</b> — Used by <b>RAIDCAP.BAT</b> to retrieve RAID information and to configure settings.</li> </ul>	<p><b>RAIDREP.BAT</b>— Applies the RAID settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <b>RAIDCFG.EXE</b> — Used by <b>RAIDREP.BAT</b> to retrieve RAID information and to configure settings.</li> </ul>		<p><b>PARTCFG.BAT</b> — Creates and populates the Dell™ utility partition (UP) and the operating system partition on a specified disk.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>PARTCFG.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>DISKPART.EXE</b> — Provided by Windows; this script is used to create partitions on your disk. When creating a Windows PE image, ensure that <b>DISKPART.EXE</b> tool is present in the Windows PE image you created. This script uses the following files for noninteractive (unattended) operations:</li> </ul>

**Table 4-1. Scripts For Deployment (*continued*)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
			<ul style="list-style-type: none"><li>• <b>UPINIT.BAT</b>— Used by <b>PARTCFG.BAT</b> to create and populate the Dell utility partition.</li><li>• <b>FORMAT.EXE</b>— Provided by Windows to format the partition.</li></ul>

**Table 4-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
			<p><b>UPINIT.BAT</b> — Creates and populates the Dell utility partition.</p> <p><b>NOTE:</b> Do not make any modifications to the <b>UPINIT.BAT</b> script.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>UPINIT.BAT</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>DISKPART.EXE</b> — Provided by Windows, it is used to create partitions on your disk.</li> <li>• <b>UNZIPEXE</b> — Used by <b>UPINIT.BAT</b> to unzip the contents of <b>UPIMG.BIN</b>.</li> <li>• <b>FORMAT.EXE</b> — Provided by Windows to format the partition.</li> </ul>

**Table 4-1. Scripts For Deployment (*continued*)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
	<p><b>DTKRUNALL.BAT</b>— Applies BIOS, BMC, RAC, and RAID settings saved in the files to the current system.</p> <ul style="list-style-type: none"> <li>• <b>TKENVSET.BAT</b> — Used by <b>DTKRUNALL.BAT</b> to find the DTK utilities and scripts.</li> <li>• <b>RACREP.BAT</b> — Used by <b>DTKRUNALL.BAT</b> to apply the RAC configuration settings saved in a file to the current system.</li> <li>• <b>SYSREP.BAT</b> — Used by <b>DTKRUNALL.BAT</b> to apply the BIOS and BMC settings saved in a file to the current system.</li> <li>• <b>RAIDREP.BAT</b>— Used by <b>DTKRUNALL.BAT</b> to apply the RAID settings saved in a file to the current system.</li> </ul>		<ul style="list-style-type: none"> <li>• <b>UPIMG.BIN</b> — Contains the zipped contents of the Dell utility partition.</li> <li>• <b>SYSDRMK.EXE</b> — Used by <b>UPINIT.BAT</b> to patch the boot sector and Master Boot Record (MBR).</li> </ul>

The majority of the editing required for the DTK sample scripts involves the following script. As a result, the majority of the scripting discussion focuses on:

## **TKENVSET.BAT**

Other task scripts might require edits in certain situations. These optional edits are discussed in "Editing DTK Task Scripts."

## **TKENVSET.BAT**

The **TKENVSET.BAT** script sets the path of the DTK installation and variables for the system to be deployed and configured. The variables and paths specified in this file must be specified before any of the other supporting scripts can be used.

### **Specifying DTK Installation Paths**

The **TKENVSET.BAT** sample script is provided with the following default values. These values must be confirmed, in some cases, and modified, in other cases, before a deployment. Locate the **Deployment Toolkit Installation Paths** heading to find the following lines:

```
set DT_DRIVE=X:
set DT_PATH=%DT_DRIVE%\Dell\Toolkit
set DT_TOOLS=%DT_PATH%\Tools
set DT_SYSTEMS=%DT_PATH%\Systems
set DT_SCRIPTS=%DT_PATH%\Template\Scripts
set DT_STOP_ON_ERROR=FALSE
```

Perform the following steps to confirm and/or edit the installation path variables:

- 1** Set the variable that represents the drive letter where the DTK deployment files are located (**DT\_DRIVE**). This variable is set to **X:** by default in the sample script. Edit this drive letter to reflect the actual drive letter for the DTK deployment files, if necessary.
- 2** Set the variable that defines the path to the full set of DTK deployment files (**DT\_PATH**). This variable is set to **%DT\_DRIVE%\Dell\Toolkit** by default in the sample script. Edit this path to reflect the actual location of the DTK deployment files, if necessary.



- 3 Set the variable that defines the directory containing the DTK utilities (DT\_TOOLS). This variable is set to %DT\_PATH%\Tools by default in the sample script. Edit this path to reflect the actual location of the DTK utilities, if necessary.
- 4 Set the variable that defines the directory containing the configuration files for your Dell systems (DT\_SYSTEMS). This variable is set to %DT\_PATH%\Systems by default in the sample script.
- 5 Set the variable that defines the directory containing the DTK deployment scripts (DT\_SCRIPTS). This variable is set to %DT\_PATH%\Template\Scripts by default in the sample script. Edit this path to reflect the actual location of the DTK deployment scripts, if necessary.
- 6 Set the variable that indicates whether you want the deployment process to exit when any error is returned (DT\_STOP\_ON\_ERROR). This variable is set to FALSE by default in the sample script, indicating that errors will be handled by the ERRHNDL.BAT script. Set the value to TRUE only if you want the deployment to exit on any error.

### ***Specifying the SYSCFG Variables***

The SYSCFG replication file is set to `syscfg.ini` by default. If you used the `SYSCAP.BAT` sample script to generate the `syscfg.ini` file, there should be no need to edit these default settings. If you have made any modifications to the sample scripts or to the suggested directory structure, you must confirm that `syscfg.ini` is correctly named and that the path is set correctly for your deployment.

To edit the SYSCFG capture variables, locate the following lines in `SYSCAP.BAT`:

```
set DT_SYS_CAPFILE=  
%DT_SYSTEMS%\%DT_PLATFORM%\syscfg.ini
```

To edit the SYSCFG replication variables, locate the following lines in `SYSREP.BAT`:

```
set DT_SYS_REPFILE=  
%DT_SYSTEMS%\%DT_PLATFORM%\syscfg.ini
```



**NOTE:** If the replication requires a change in the memory redundancy mode, the target server should be rebooted and the script should be executed again to complete the replication.

### ***Specifying the RAC Configuration Variables***

The IP address for your target system RAC is set in the sample script to 10.98.8.121 by default. Edit this value to reflect the actual IP address of your target system RAC, if applicable. Additionally, the RAC configuration file used to configure your RAC is set by default to **raccfg.ini**. If you use the **RACCAP.BAT** sample script to generate the **raccfg.ini** file, there should be no need to edit this default setting. If you have made any modifications to the sample scripts or to the suggested directory structure, you must confirm that **raccfg.ini** is correctly named and that the path is correctly set for your deployment. To edit the RAC configuration variables, locate the following lines in **RACCAP.BAT**:

```
set DT_RAC_CAPFILE=  
%DT_SYSTEMS%\%DT_PLATFORM%\raccfg.ini
```

To edit the RAC configuration variables, locate the following lines in **RACREP.BAT**:

```
:: RAC section  
  
set DT_NICCFG=10.98.8.121  
  
set DT_RAC_CAPFILE=  
%DT_SYSTEMS%\%DT_PLATFORM%\raccfg.ini
```

### **Specifying Variables Used to Create Disk Partitions and Install the Dell Utility Partition**



**NOTE:** If the primary deployment state (**DT\_PARTN**) is set to **OFF** in **PARTCFG.BAT**, the partitioning deployment state subsection is skipped.

The **PARTCFG.BAT** sample script provides the following disk partitioning default values. These values must be confirmed, in some cases, and modified, in other cases, before performing a deployment. Locate the **partn** label to find the following lines in **PARTCFG.BAT**:

```
set DT_PARTN_UP=ON  
  
set DT_MOUNT=H  
  
  
  
:: Default Hard Drive  
  
set DT_HD=0
```


```

:: PARTCFG section
set DT_OS_SIZE=4000
set DT_OS_FSTYPE=FAT32



if not "%DT_PARTN_UP%"=="ON" goto ospart
:: DELLUP section
set DT_UP_SIZE=32
set DT_UP_IMAGE=%DT_SYSTEMS%\UPIMG.BIN

:: RAIDCFG section
set DT_VD_SIZE=10480
:: default size for virtual disk

```

 **CAUTION:** `DT_MOUNT` specifies the mount point of the Dell utility partition. If your RAMDRIVE, hard drive, or other device already owns this designation, mount will not override the setting and the utility partition will not be created.

Perform the following steps to edit the default partition configuration default values, as necessary.

- 1 Edit the default utility partitioning variable (`DT_PARTN_UP=ON`), if necessary. This variable sets whether you want to install the Dell utility partition.
  -  **NOTE:** Dell recommends that you install the Dell utility partition.
- 2 Edit the default variable value for the default hard drive (`DT_HD=0`), if applicable.
  -  **NOTE:** Ensure that the default variable value for `DT_HD` is set to a valid non-removable disk, and not to removable media such as virtual media.
- 3 Edit the default variable value (in MB) for the primary operating system partition (`DT_OS_SIZE=4000`), if applicable.

- 4 Edit the default variable value for file system type (`DT_OS_FSTYPE=FAT32`), if applicable.



**NOTE:** The valid values are `FAT32` and `NTFS`.

- 5 If the `DT_PART_UP` variable is set to `ON`, edit the default variable value (in MB) for the utility partition (`DT_UP_SIZE=32`), if applicable.
- 6 If the `DT_PART_UP` variable is set to `ON`, edit the default variable value for the utility partition installation package location (`DT_UP_IMAGE=%DT_SYSTEMS%\UPIMG.BIN`), if applicable.

You should have already copied the `UPIMG.BIN` file to the proper directory, as instructed in "Preparing the Directory Structure for Deployment in Microsoft Windows PE." Edit this variable only if you have changed the name or path of the utility partition installation package.

## Editing DTK Task Scripts

The task scripts called by the master batch file do not require any edits (with the following exceptions) if the default variable values are utilized in the `TKENVSET.BAT` scripts. However, if you make any changes to the default values set by the `TKENVSET.BAT`, you must make the same edits to the matching default values set in the appropriate task scripts. Locate the "USER MODIFICATION REQUIRED" heading in the task scripts to find the variable values you might need to edit. Each of the following task scripts can be called by the user-written master batch script during a full deployment:

- `RACREP.BAT`
- `RAIDCFG.BAT`
- `SYSREP.BAT`
- `PARTCFG.BAT`

### **RACREP.BAT**

The `RACREP.BAT` sample script applies RAC configuration options to the target system based on configuration information that has been saved in a configuration file. User input is optional, depending on variables set in the `RACREP.BAT` sample script. This script uses the `RACADM.EXE` utility to configure the RAC in the target system using the RAC configuration file, `raccfg.ini`, passed as the first parameter to this script. If this parameter is not

passed, the default variables values used in this script are set in the **TKENVSET.BAT** scripts. An optional second parameter can be passed to this file, which specifies the IP address to be used to configure the RAC. The **racefg.ini** file is generated with the **RACCAP.BAT** sample script. See "RACCAP.BAT" for information about using the **RACCAP.BAT** sample script to capture RAC configuration information.

## **RAIDCFG.BAT**

The **RAIDCFG.BAT** sample script configures RAID controllers detected on the system. User input is optional to run this script. The parameter is a name or path to a log file. This parameter is not set to any value by default, and no log file is generated. The default variable values used in this script are set in the **TKENVSET.BAT** scripts. This script uses the **RAIDCFG.EXE** utility to automatically configure the detected controllers on your target system. For example, for the first controller discovered, if **RAIDCFG.EXE** discovers only one attached hard drive, the script tries to create RAID 0; if two hard drives are discovered, a RAID 1 configuration is enabled; if three or more hard drives are discovered, a RAID 5 configuration is enabled.



**NOTE:** On the detected controller, a RAID virtual disk is created only if the array disks connected to that particular controller have space available and, where applicable, are not part of already existing array group.

## **SYSREP.BAT**

The **SYSREP.BAT** sample script applies **SYSCFG** options to the target system based on configuration information that has been saved in a configuration file. User input is optional to run this script, depending on the variable settings in the **SYSREP.BAT** scripts. This script uses the **SYSCFG.EXE** utility to configure the BIOS and BMC in the target system using the configuration file, **syscfg.ini**, passed as the first parameter to this script. If this parameter is not passed, the default variables values used in this script are set in the **SYSREP.BAT** scripts. The **syscfg.ini** file is generated with the **SYSCAP.BAT** sample script. See "SYSCAP.BAT" for information about using the **SYSCAP.BAT** sample script to capture BIOS and BMC settings. The second parameter is a name or path to a log file. This parameter is not set to any value by default, and no log file is generated.



**NOTE:** If the replication requires a change in the memory redundancy mode, the target server should be rebooted and the script should be executed again to complete the replication.

## **PARTCFG.BAT**

The **PARTCFG.BAT** sample script creates and populates the Dell utility partition using **UPINIT.BAT** and creates the operating system partition on a specified disk. (See "UPINIT.BAT" for more information about using the **UPINIT.BAT** tool.) User input is not required to run this script. The default variable values used in this script are set in the **TKENVSET.BAT** scripts.



**NOTE:** Ensure that **DT\_HD** is set to the required disk to be configured before you execute the **PARTCFG.BAT** script.

## **Using the DTK Sample Scripts to Capture Configuration Information in Windows PE**

The **SYSCFG.EXE** and **RACADM.EXE** utilities can read the source system configuration and duplicate that configuration on a target system using a sample DTK script file. These configuration files are used during a full deployment to configure the target system's BIOS, BMC, and RAC settings. The following sections provide instructions for using the **SYSCAP.BAT** and **RACCAP.BAT** sample scripts to create configuration files.

### **Capturing the System BIOS and BMC Configuration With the SYSCAP.BAT Sample Script**

You can replicate the system BIOS and BMC configurations from a source Dell system to an identical target Dell system (for example, from one PowerEdge™ 1850 to another PowerEdge 1850).



**NOTE:** For the script to complete successfully, the source system must have access to the network share that includes the prebuilt DTK directory structure.

### **SYSCAP.BAT**

The **SYSCAP.BAT** sample script captures BIOS and BMC configuration settings and saves them to a specified location. An optional user input can be passed as a parameter. You can provide the path or filename as an input to this script.

The default variable values used in this script are set in the script to the correct default values to perform a scripted deployment. The **SYSCAP.BAT** script uses the **SYSCFG.EXE** utility to retrieve BIOS and BMC configuration settings from the source system and to save the settings in a file named **syscfg.ini** in the **Z:\Dell\Toolkit\System\<target system>** directory.

Perform the following steps to run the **SYSCAP.BAT** sample script to capture BIOS and BMC configuration information in the **syscfg.ini** file:

- 1 Edit the **startnet.cmd** file on your Windows PE image to call the **SYSCAP.BAT** script after the network share with the prebuilt DTK directory structure is mounted. For example, add:

```
call Z:\Dell\Toolkit\Template\Scripts\SYSCAP.BAT
```

- 2 Boot the source system into Windows PE.

The script runs and saves configuration information in the **Z:\Dell\Toolkit\System\<target system>** directory.

- 3 Edit the **startnet.cmd** file in your Windows PE image to remove the text you added in step 1.

## Capturing the RAC Configuration With the **RACCAP.BAT** Sample Script

If your system has a RAC, you can replicate the RAC configuration from a source Dell system's RAC to an identical target Dell system with an identical RAC (for example, from one PowerEdge 1850 with a DRAC4/I to another PowerEdge 1850 with a DRAC4/I).



**NOTE:** For the script to complete successfully, the source system must have access to the network share that includes the prebuilt DTK directory structure.

## **RACCAP.BAT**

The **RACCAP.BAT** sample script captures RAC configuration settings and saves them to a specified location. An optional user input can be passed as a parameter. You can provide the path or file name as an input to this script. The default variable values used in this script are set in the script to the correct default values to perform a scripted deployment. The **RACCAP.BAT** script uses the **RACADM.EXE** utility to retrieve RAC configuration settings from the source system and to save the settings in a file named **raccfg.ini** in the **Z:\Dell\Toolkit\System\<target system>** directory.



**NOTE:** Ensure that you run **RACCAP.BAT** in a writable environment. If you run **RACCAP.BAT** in a read-only environment, DTK displays the message **<filename.ini> has been generated even though no new file is created.**

Perform the following steps to run the **RACCAPBAT** sample script to capture RAC configuration information in the **raccfg.ini** file:

- 1 Edit the **startnet.cmd** file on your Windows PE image to call the **RACCAPBAT** script after the network share with the prebuilt DTK directory structure is mounted. For example, add:  

```
call Z:\Dell\Toolkit\Template\Scripts\RACCAP.BAT  
Z:\raccfg.ini
```
- 2 Boot the source system into Windows PE.  
The script runs and saves configuration information in the **Z:\Dell\Toolkit\System\<target system>** directory.
- 3 Edit the **startnet.cmd** file in your Windows PE image to remove the text you added in step 1.



**NOTE:** The RAC configuration file is referred to as the **.cfg** file in the *Dell Remote Access Controller Racadm User's Guide* and the *Dell Remote Access Controller 4 User's Guide*. See the *Dell Remote Access Controller Racadm User's Guide* or the *Dell Remote Access Controller 4 User's Guide* for additional information about manually creating a RAC configuration file.



**NOTE:** Do not replicate the RAC IP address when creating a **.cfg** file. Replicating the RAC IP address can leave the system inaccessible because multiple systems are configured with the same IP address.

## UPINIT.BAT

**UPINIT.BAT** is a tool used to create and populate the Dell utility partition.



**NOTE:** You can use this script to create a new Dell utility partition only if there are no existing partitions on your hard disk.

You can also use this script to upgrade or downgrade an existing Dell utility partition. Upgrades or downgrades can be made only to existing Dell utility partitions using the overwrite option.



**CAUTION:** The existing Dell utility partition should be the first primary partition on the hard disk. Also, the Dell utility partition must be greater than or equal to **32 MB** and less than **2 GB**.

For details on the command line arguments to be used for **UPINIT.BAT**, refer to the *Deployment Toolkit Command Line Interface Reference Guide*.




# Preparing the Operating System Installation Scripts for Windows PE

The `WININST.BAT` and `W2K8INST.BAT` scripts are used to install supported Windows operating systems.

## WININST.BAT

The `WININST.BAT` sample script is used to perform an unattended installation of Windows 2000 Server and Windows Server 2003 operating systems. The variables and paths must be specified before the operating system can be installed.

 **CAUTION:** It is strongly recommended that you consult your Windows operating system documentation and unattended deployment documentation to develop a thorough understanding of the Windows unattended installation process before attempting to perform a full scripted deployment.

The syntax for `WININST.BAT` is

```
wininst.bat [W2K|NET]
```

Choose `W2K` (default) to install Windows 2000 Server or `NET` to install Windows Server 2003.

## Utilities Used

`WINNT32.EXE` — Used to install the operating system in conjunction with the `UNATTEND.TXT` answer file.

## External Dependencies

The `DT_PLATFORM` variable is set by `TKENVSET.BAT` using platform discovery.

The `WININST.BAT` script uses the `UNATTEND.TXT` file in conjunction with `WINNT32.EXE` utility to install the operating system files. See "UNATTEND.TXT" for more information about preparing the `UNATTEND.TXT` file.

## Specifying the Windows Installation Variables and Installation Paths

To edit the Windows operating system installation variables, locate the following lines in **WININST.BAT**:

```
:: The location where source files for the OS reside
set DT_OSSRC=%DT_DRIVE%\W2KSRC\I386
```

```
:: Location of Unattend.txt file
set DT_UNATTEND=
%DT_SYSTEMS%\%DT_PLATFORM%\unattend.txt
```

```
:: Location of platform-specific Dell drivers
set DT_OEM=%DT_SYSTEMS%\%DT_PLATFORM%\configsets
```

After you have either confirmed or edited the Windows operating system installation variables, you are ready to prepare the **UNATTEND.TXT** file to be used in the operating system installation.

## UNATTEND.TXT

The **UNATTEND.TXT** file is the default name of the answer file that you use to automate Windows Setup during an unattended installation. A sample copy of the **UNATTEND.TXT** file is provided as part of the DTK download in the **Z:\Dell\Toolkit\Template\Configs** directory. **UNATTEND.TXT** contains the headings and parameters that instruct Windows Setup to perform various configuration tasks. Before a full deployment can be run, you must edit all appropriate headings and parameters, as necessary.



**NOTE:** See your operating system documentation for instructions on modifying the options in the operating system unattended installation file to customize the scripted installation of your operating system.

When you have completed all necessary modifications of the **UNATTEND.TXT** file, save the completed file in the **Z:\Dell\Toolkit\System\<target system>** directory.

## W2K8INST.BAT

The W2K8INST.BAT sample script is used to perform an unattended installation of Windows Server 2008 operating system. The variables and paths must be specified before the operating system can be installed.

**△ CAUTION: It is strongly recommended that you consult your Windows operating system documentation and unattended deployment documentation to develop a thorough understanding of the Windows unattended installation process before attempting to perform a full scripted deployment.**

The syntax for W2K8INST.BAT is

```
w2k8inst.bat
```

### Utilities Used

SETUP.EXE — Used to install the operating system in conjunction with the UNATTEND.XML answer file.

### External Dependencies

W2K8INST.BAT uses two environment variables: DT\_PLATFORM and DT\_DRIVE.

The DT\_PLATFORM variable is set by TKENVSET.BAT using platform discovery.

The DT\_DRIVE denotes the network drive letter to the network shared path containing the Windows Server 2008 operating system source and the UNATTEND.XML file.

The W2K8INST.BAT script uses the UNATTEND.XML file in conjunction with SETUP.EXE utility to install the operating system files. See "UNATTEND.XML" for more information about preparing the UNATTEND.XML file.

### Specifying the Windows Installation Variables and Installation Paths

To edit the Windows operating system installation variables, locate the following lines in W2K8INST.BAT:

```
:: The location where source files for the OS reside  
set DT_OSSRC=%DT_DRIVE%\sources
```

```
:: Location of Unattend.xml file
set DT_UNATTEND=
%DT_SYSTEMS%\%DT_PLATFORM%\unattend.xml
```

```
:: Location of platform-specific Dell drivers
set DT_OEM=
%DT_SYSTEMS%\%DT_PLATFORM%\$OEM$\DT_WINDOWS%
```

## UNATTEND.XML

The **UNATTEND.XML** file is the default name of the answer file that you use to automate Windows Setup during an unattended installation. A sample copy of the **UNATTEND.XML** file is provided as part of the DTK download in the **Z:\Dell\Toolkit\Template\Configs** directory.

**UNATTEND.XML** contains the headings and parameters that instruct Windows Setup to perform various configuration tasks. In **UNATTEND.XML**, you must specify various setup options, including how to partition disks and the location of the Windows image you want to install. Before a full deployment can be run, you must edit all appropriate headings and parameters, as necessary.



**NOTE:** See your operating system documentation for instructions on modifying the options in the operating system unattended installation file to customize the scripted installation of your operating system.

When you have completed all necessary modifications of the **UNATTEND.XML** file, save the completed file in the **Z:\Dell\Toolkit\W2K8\_deploy\<target system>** directory.

After you have successfully edited your deployment scripts, you are ready to create your deployment media and run your deployment. For instructions on creating deployment media and running a full deployment, see "Running Deployment Scripts Using DTK and Microsoft Windows PE."

# Running Deployment Scripts Using DTK and Microsoft Windows PE

This section provides best practices procedures and scenarios for using the Deployment Toolkit (DTK) to perform pre-operating system configuration tasks and to install supported operating systems on supported Dell™ systems.

After you have populated the deployment directory structure with all necessary files and carefully edited the deployment scripts and configurations files, you are ready to begin the final stage of the deployment process. Before running the deployment, however, you need to create specific deployment media to facilitate your chosen deployment method. The common deployment scenarios are:

- CD-based local deployment
- CD-based local deployment with networking enabled
- Using a third-party deployment solution framework

For the CD-based deployment methods, you begin by creating and customizing Microsoft® Windows® PE for Dell systems.

## Creating and Customizing Images for Windows PE 1.0

### Obtaining Windows OEM Preinstallation Kit (OPK) or Windows PE CD

Contact Microsoft to obtain the latest version of OPK or Windows PE CD.

### Copying Tools From OPK or Windows PE CD on a Development System

- 1 Create and name a directory on your development system hard drive, such as `\WinPE_OPKTools`.
- 2 Insert the Windows OPK CD or Windows PE CD into your development system CD drive.
- 3 Copy all of the CD files from the Windows PE directory (`<cd-drive>\winpe\*.*`) to the `\WinPE_OPKTools` directory.

- 4 Copy `factory.exe` and `netcfg.exe` from `<cd-drive>:\tools\x86` directory to the `\WinPE_OPKTools` directory.
- 5 Remove the Windows OPK CD or Windows PE CD from the CD drive.

## Creating a Standard Windows PE

For building a standard Windows PE with OPK tools, refer to the help files available on the OPK CD. You can get to the help files after you install OPK on your development system. Brief instructions are provided here on how to build a standard Windows PE.



**NOTE:** You must have read-write permissions on your development system. You cannot run `mkimg.cmd` from a read-only device, such as a CD drive.

- 1 Create and name a directory on your development system hard drive such as `\DellWinPEBuild`. This directory serves as a `<destination_directory>` used with `mkimg.cmd` to create Windows PE.
- 2 Insert the 32-bit Windows Server<sup>®</sup> 2003 (with SP1) product CD into the CD drive.
- 3 Open a command prompt and navigate to the `\WinPE_OPKTools` directory you created earlier.
- 4 Run the command: `mkimg.cmd <source_directory> <DellWinPEBuild> /PNP /WMI`.



**NOTE:** The `/PNP` option enables support for Plug and Play device drivers; the `/WMI` option enables support for Windows Management Instrumentation.



**NOTE:** Ensure that you include the `/WMI` option with `mkimg.cmd` for the DTK tools to run properly.

The `<source_directory>` specifies the location of the Windows Server 2003 product CD.

- If the `<source_directory>` is a CD drive, you need to specify only the drive letter.
- If the `<source_directory>` is a network path, the path must be to the parent directory of the `\I386` directory.



**NOTE:** Do not include a trailing slash in the `<source_directory>`.



**NOTE:** If you plan to use virtual media within your Windows PE environment, ensure that your Windows PE image has `cdrom.sys` and `flpydisk.sys` drivers.

The `\DellWinPEBuild` specifies the path where the files necessary to create the Windows PE are temporarily stored. If this directory does not already exist, `mkimg.cmd` creates it.

This process extracts all the necessary files from `\I386` on the Windows Server 2003 product CD and puts them in `\DellWinPEBuild` drive. These files include drivers that are part of the Windows Server 2003 CD. These drivers may be old and may not recognize the new peripherals integrated in your new Dell system. Proceed to add the latest drivers in the standard Windows PE build you just created.


## Integration of DTK Directory Structure in Windows PE Build

This task involves a five-step process:

- 1 Integrating DTK tools and scripts: Copy the folder `\dell` that you unzipped from the Dell-supplied zip file to `<DellWinPEBuild>`, or extract the Dell-supplied file directly into the Windows PE build.
- 2 Navigate to the `\Dellwinpebuild\Dell\Drivers\winpe1.x` location and run the following command:

```
driverinst.bat <path to Dellwinpebuild> <path to  
dell\drivers>
```


### 3 Adding support for mass storage drivers into Windows PE:

 **NOTE:** You must implement this step to ensure mass storage drivers are installed into Windows PE.

In the `winpeoem.sif` file (available under `I386\SYSTEM32` in your Windows PE directory), edit the following text to remove the semicolons from the `Oem Driver Params` section and append the directory names for the Dell mass storage drivers:


```
OemDriverRoot=" "  
OemDriverDirs=MRAID, PERC4IM, PERC5, SAS5
```

 **NOTE:** A sample `winpeoem.sif` file is available under `\Dell\Toolkit\template\Configs`.

 **NOTE:** When booting the target system, ensure that the RAC and the `mr2kserv` services are running.

### 4 Extracting the following files from your Windows Server 2003 product CD to `\Dell\Toolkit\Tools`:

- `rpcns4.dl_`
- `rpctr4.dl_`
- `rpss.dl_`

 **NOTE:** The directory name should not have any spaces.

 **NOTE:** You can now proceed to customize Windows PE per your requirements.

## Creating a Bootable Windows PE ISO Image

After you have completed the DTK integration and customization, you are now ready to convert all the files in `<DellWinPEBuild>` into an ISO image using the OPK tool. Follow the steps below to create a bootable ISO image from `<DellWinPEBuild>`.

- 1 Create and name a directory on your development system hard drive such as `FINALBUILD`. This is where the ISO file is stored.
- 2 Open a command prompt and navigate to the `\WinPE_OPKTools` directory you created earlier.
- 3 Run the command: `OSCDIMG -bETFSBOOT.COM -n <DellWinPEBuild> <iso_filename>`



Here, `ETFSBOOT.COM` (boot sector file) is a part of the OPK tools you copied in `\WinPE_OPKTools` directory. These files make the Windows PE CD bootable. For example, if the final target folder for storing ISO image is `C:\FINALBUILD`, and your Windows PE file set is in `<DellWinPEBuild>`, the following command line creates a bootable ISO image called `Dellx86winpe.iso`:

```
C:\WINPE_OPKTOOLS\OSCDIMG -bETFSBOOT.COM -n  
c:\DELLWINPEBUILD  
C:\FINALBUILD\Dellx86winpe.iso
```

After you create an ISO image, you can use any CD burning software to burn the image onto a CD. After burning the ISO image, ensure that it boots from the CD drive for all the supported Dell systems you plan to deploy. After it boots, you are advised to test all the tools and scripts on these systems to ensure that the integration went well and there are no issues with hardware components not being recognized.

## CD-Based Local Deployment

You are now ready to use your bootable CD to call the deployment components from the directory structure on the CD:

- 1 Boot the target system with the bootable deployment CD.
- 2 Execute the master batch file, which calls individual task scripts and utilities from the CD to complete the deployment process.

# Running the Windows PE 1.0 Image

## CD-Based Local Deployment With Networking Enabled

You can also use your bootable CD to call the deployment components from the directory structure on the CD and the remaining components from the network share:

- 1 Boot the target system with the bootable deployment CD.
- 2 Execute the master batch file, which calls individual task scripts and utilities from the network share to complete the deployment process.

## Using a Third-Party Deployment Solution Framework

You can use the DTK with any existing third-party deployment solution framework that provides a Automated Deployment Services (ADS) booting infrastructure that can be used as the transport mechanism for the DTK utilities. Because each third-party deployment framework is unique, however, these solutions fall outside the scope of this document. If you plan to utilize a third-party deployment solution framework, keep in mind that the DTK is a Windows PE-based set of tools and scripts, so the deployment solution framework must also support Windows PE as a pre-operating system environment.

## Creating and Customizing Images for Windows PE 2.0

If you are using Windows PE 2.0, download Windows Automated Installation Kit (Windows AIK) from the Microsoft website at [www.microsoft.com](http://www.microsoft.com). By default, Windows AIK is copied to the C:\Program Files\Windows AIK directory.

### Integration of DTK Directory Structure in Windows PE Build

DTK provides a script, **VPE\_driverinst.bat**, to pre-install the Dell drivers into a base Windows PE 2.0 image (**winpe.wim**) offline. Use the following steps to execute this script:

- 1 Open a command prompt on your system and change the directory to the location of **VPE\_driverinst.bat**. For example:

```
cd C:\Dell\Drivers\winpe2.x
```

- 2 Execute **VPE\_driverinst.bat** with two required arguments **<WINPEPATH>** and **<DTKPATH>**. For example:

```
VPE_driverinst.bat <WINPEPATH> <DTKPATH>
```

Where **<WINPEPATH>** is the destination path to create the directory structure for Windows PE 2.0 and **<DTKPATH>** is the path to Dell drivers in the extracted DTK toolkit. For example:

```
VPE_driverinst.bat C:\vistaPE_x86 C:\DELL\DRIVERS
```

This will pre-install the Dell drivers into **winpe.wim**.



**NOTE:** **<WINPEPATH>** is passed as the destination to the Windows AIK command **copype.cmd**. The destination folder **C:\vistaPE\_x86** is created as part of the process, and should not already exist.

- 3 Rename `winpe.wim` to `boot.wim`.
- 4 Copy the customized `winpe.wim` image to the folder `VistaPE_x86\ISO\sources`. For example:  
Copy `c:\vistaPE_x86\winpe.wim`  
`c:\vistaPE_x86\ISO\sources\boot.wim`

## Creating a Bootable CD

Use the following steps to create bootable media:

- 1 Click **Start**, navigate to **All Programs**→ **Microsoft Windows AIK**.
- 2 Click **Windows PE Tools Command Prompt** to open a command prompt window.
- 3 Run the following command:

```
oscdimg -n -bc:\vistaPE_x86\etfsboot.com  
c:\vistaPE_x86\ISO c:\vistaPE_x86\WinPE2.0.iso
```

This command creates a CD bootable ISO image called `WinPE2.0.iso`.

You can use any CD burning software to burn the image onto a CD.

After burning the ISO image, ensure that it boots from the CD drive for all the supported Dell systems you plan to deploy. After it boots, you are advised to test all the tools and scripts on these systems to ensure that the integration went well and there are no issues with hardware components not being recognized.

## Running the Windows PE 2.0 Image

### CD-Based Local Deployment

You are now ready to use your bootable CD to call the deployment components from the directory structure on the CD:

- 1 Boot the target system with the bootable deployment CD.
- 2 Execute the master batch file, which calls individual task scripts and utilities from the CD to complete the deployment process.

## **CD-Based Local Deployment With Networking Enabled**

You can also use your bootable CD to call the deployment components from the directory structure on the CD and the remaining components from the network share:

- 1** Boot the target system with the bootable deployment CD.
- 2** Execute the master batch file, which calls individual task scripts and utilities from the network share to complete the deployment process.

## **Using a Third-Party Deployment Solution Framework**

You can use the DTK with any existing third-party deployment solution framework that provides a Automated Deployment Services (ADS) booting infrastructure that can be used as the transport mechanism for the DTK utilities. Because each third-party deployment framework is unique, however, these solutions fall outside the scope of this document. If you plan to utilize a third-party deployment solution framework, keep in mind that the DTK is a Windows PE-based set of tools and scripts, so the deployment solution framework must also support Windows PE as a pre-operating system environment.

# Choosing an Embedded Linux-Based Deployment Method

A well-thought-out deployment plan is critical to the success of your deployment effort and includes the following considerations:

- Assessing your existing IT environment
- Selecting an operating system
- Selecting the optimum Dell™ OpenManage™ systems management software configuration for your system
- Choosing a deployment method

The Deployment Toolkit (DTK) is designed to be flexible enough to fit into almost any deployment plan. For the purposes of this document, however, the focus is on two specific deployment methods: CD-based deployment (local) and network-based deployment (remote).

## Choosing a Deployment Method for Embedded Linux

The DTK components can be used in many different ways to assist IT staff in deploying Dell systems in large numbers. Because all the tools and scripts are task oriented, many of them can be used separately to perform a specific task on many systems or collectively to perform many tasks on many systems at once.

The configuration complexity and pros and cons of each deployment method are provided in Table 6-1. After you have decided which deployment method best fits your needs, you are ready to begin preparing for the deployment.

## Network-Based Deployment



**NOTE:** The DTK network-based deployment is not supported from mapped Novell® NetWare® systems.

The general network-based deployment process includes the following steps:

- 1 Modify the appropriate section in **pxe config** file.
- 2 Boot the target server from PXE.

The DTK start-up phase mounts the network share specified in the **pxe config** file.

The DTK start-up phase runs the script (name specified in the **pxe config** file) from the network.

Alternatively, you can integrate the DTK components into an existing third-party deployment solution framework. See "Using a Third-Party Deployment Solution Framework."

## CD-Based Deployment With Network Access

The general steps include:

- 1 Copy the DTK ISO image into a share.
- 2 Modify the appropriate section in the **isolinux/isolinux.cfg** file.
- 3 Reburn the contents into a CD (this will be the master CD).
- 4 Boot the target server from the master CD.

The DTK start-up phase mounts the network share specified in the **isolinux.cfg** file.

The DTK start-up phase runs the script (name specified in the **isolinux.cfg** file) from the network.

## Creating a Bootable CD With Network Stack

You will need a bootable CD to use in a remote deployment. This bootable CD must have the embedded Linux network stack with specific network drivers to facilitate networking. After you have a network share created and populated with all the necessary DTK components and supporting files, you can access all required files by mounting a network share from the target system. You can perform all of these tasks automatically. This deployment method is recommended if a network connection is available to the target

system—the space on a network share can be very large, and a single set of utilities and scripts can be accessed by many systems, making the deployment process easy to manage.

After a network drive is mapped from a target system to a network share, all of the utilities and scripts are available to use. The master deployment script on the network share can be called from the bootable CD to perform a task or multiple tasks on the target server. For example, pre-operating system configuration tasks can be deployed from the network and operating system files can be installed.

### **Creating a Customized Bootable CD with Network Stack**

See "Running Deployment Scripts Using DTK and Embedded Linux" for details on how to create a customized version of a single embedded Linux bootable CD that works across all Dell systems and provides an underlying network stack.

### **Using a Third-Party Deployment Solution Framework**

You can use the DTK with any existing third-party deployment solution framework that provides a PXE booting infrastructure that can be used as the transport mechanism for the DTK utilities. Because each third-party deployment framework is unique, however, these solutions fall outside the scope of this document. If you plan to utilize a third-party deployment solution framework, keep in mind that the DTK is an embedded Linux-based set of tools and scripts, so the deployment solution framework must also support embedded Linux as a pre-operating system environment.

### **CD-Based Local Deployment for Embedded Linux**

The general CD-based deployment process includes the following steps:

- 1 Copy the DTK ISO image into a share.
- 2 Modify the appropriate section in the `isolinux/isolinux.cfg` file.
- 3 Return the contents into a CD (which will be the master CD).
- 4 Boot the target server from the master CD.

The DTK startup phase mounts the CD.

The DTK startup phase runs the script (name specified in the `isolinux.cfg` file) from the CD.

This deployment method is the easiest to assemble, but is the least flexible. Any change to the system configuration, for example, requires the creation of a new bootable CD. This method does not provide a writable media making it necessary to use predefined and tested configuration files.

### **Creating a Bootable CD**

Bootable CDs can be created using any commonly available CD burning software in a two-part process that requires a self-bootable ISO image with drivers that load from system files. When you create a bootable CD, this image is supplied to the CD burning software along with the complete deployment directory structure, which includes all necessary supporting files to perform the deployment. The CD burning software creates an image of the self-bootable ISO image and the deployment files on the CD.



**NOTE:** See "Running Deployment Scripts Using DTK and Embedded Linux" for more information about creating an embedded Linux-bootable CD.

### **Using DTK Utilities and Scripts From a Bootable CD**

The bootable CD can be configured to start and execute the master deployment file during the booting process. The master deployment file performs all necessary pre-operating system configuration tasks and then installs the operating system from the files in the deployment directory structure on the CD.



**NOTE:** You must write the master deployment file. This file is not provided with the sample scripts.



**NOTE:** You must create a RAMDISK for temporary data storage when using a bootable CD for a local deployment.

### **Creating a Customized Bootable CD**

See "Running Deployment Scripts Using DTK and Embedded Linux" for details on how to create a customized version of a single embedded Linux image that can work across all Dell systems.



## Using DTK Utilities and Scripts From a Customized Bootable CD

After the customized bootable embedded Linux CD is created, IT administrators can take advantage of the sample scripts to automate the entire deployment process. In this purely CD-based deployment, it is necessary to add the operating system installation files on the CD media.

## Deployment Matrix (Embedded Linux)

Depending on the scope, current business needs, network setup, and process, you might select any of the suggested methods of deployment. Table 6-1 outlines four typical methods of deployment and the environment most suitable for each.

**Table 6-1. Deployment Method Matrix**

<b>Deployment Methods</b>	<b>Complexity</b>	<b>Advantages</b>	<b>Disadvantages</b>
Local deployment (bootable CD)	Relatively simple	<ul style="list-style-type: none"><li>• Necessary if a network connection is not available or is too slow.</li><li>• Can perform a minimal installation of supported Linux operating systems.</li></ul>	<ul style="list-style-type: none"><li>• Any change requires the creation of a new bootable CD.</li><li>• Limited space on CD for some operating system installation files.</li><li>• Deployment tasks must be performed at the individual target system.</li><li>• CDs are read-only media and require the creation of a RAMDISK for temporary data storage.</li><li>• Installation time is high.</li></ul>

**Table 6-1. Deployment Method Matrix (continued)**

<b>Deployment Methods</b>	<b>Complexity</b>	<b>Advantages</b>	<b>Disadvantages</b>
Remote deployment over a network (bootable embedded Linux CD with network stack loaded)	Moderate	<ul style="list-style-type: none"><li>• Everything is in one place in a network share.</li><li>• Easy to manage—changes have to be made in only one place.</li><li>• Data captured (profiles) can be stored in a network share.</li><li>• Data can be replicated from a network share.</li><li>• Can install supported Linux operating systems.</li></ul>	<ul style="list-style-type: none"><li>• Must have network connection.</li><li>• Deployment tasks must be performed at the individual target system.</li><li>• Must locate the appropriate embedded Linux network drivers.</li><li>• Not supported from a mapped NetWare system.</li></ul>
Deployment solution framework from a third-party vendor	Mixed	<ul style="list-style-type: none"><li>• The DTK can be used in the context of third-party deployment solution framework.</li><li>• Third-party deployment solution framework is used as the deployment transport mechanism.</li><li>• Tasks and scripts can be pushed to the target systems.</li></ul>	Must either acquire and learn to use or have an existing third-party deployment solution framework.

**Table 6-1. Deployment Method Matrix (*continued*)**

<b>Deployment Methods</b>	<b>Complexity</b>	<b>Advantages</b>	<b>Disadvantages</b>
PXE boot	High	<ul style="list-style-type: none"><li>• Everything is in one place on a network share.</li><li>• Easy to manage—changes have to be made in only in one place.</li><li>• High flexibility for remote deployment.</li><li>• No media required.</li><li>• Faster deployment.</li></ul>	<ul style="list-style-type: none"><li>• Must have high-speed connectivity to network (LAN).</li><li>• Set up time is longer.</li></ul>

After you have determined which deployment method best suits the needs of your organization, you are ready to begin building the DTK deployment directory structure on a network volume. For instructions on installing the DTK components and populating the deployment directory structure, see "Preparing the Directory Structure for Deployment in Embedded Linux."



# Preparing the Directory Structure for Deployment in Embedded Linux

This section describes some of the procedures necessary to begin the deployment process, including:

- Downloading and unzipping the Deployment Toolkit (DTK) components, including a comprehensive matrix of the DTK components
- Setting up a directory structure to facilitate a successful deployment, including a list of the supporting components that are not included with the DTK, but are needed to use the DTK
- Setting up an optimally configured source system

## Upgrading Your DTK Version

When upgrading from a previous release of the DTK 2.xx version, ensure that you create the new DTK version 3.xx environment separately from your previous version of DTK. This step is necessary because the environments and requirements for DTK version 3.xx are completely different.

## Installation for Embedded Linux

The DTK components are provided in an ISO image on the Dell™ Support website at [support.dell.com](http://support.dell.com). You can use a CD-burning software to burn the ISO image on a bootable CD or loop mount the ISO image to access the image contents.

Perform the following steps to extract the DTK components to a workstation running a Linux operating system:

- 1 Download the ISO image `dtk_3.X_XXX_Linux.iso` from the Dell Support website at [support.dell.com](http://support.dell.com) and save it on your system (where X is the latest version of DTK and xxx is the latest build for the DTK release).
- 2 After the image downloads, burn it on a CD.

The directory structure on the CD (after it is mounted) is shown in Figure 7-1.

**Figure 7-1. CD Directory Structure**

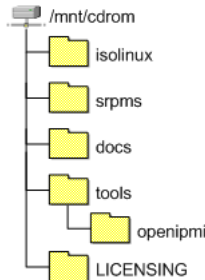


Table 7-1 describes the files, components, and other contents of the mounted CD.

**Table 7-1. Mounted CD Contents**

Contents	Details	Location
dchipm32.ini	Configuration file for the instrumentation software.	/opt/dell/toolkit/lib/bin
docs	Contains: <ul style="list-style-type: none"> <li>• <i>Command Line Interface Reference Guide</i></li> <li>• <i>User's Guide</i></li> </ul>	/mnt/cdrom/docs
LICENSING	Contains all the licenses for the open source components used in this CD.	/mnt/cdrom/ LICENSING
omreg.cfg	Configuration file for the instrumentation software. <b>NOTE:</b> DTK utilities will fail if this configuration file is not present in /etc.	/mnt/cdrom/tools
openipmi	Contains IPMI drivers and support scripts to install them. These drivers are required for all Baseboard Management Controller (BMC) and Dell Remote Access Controller (DRAC) related commands.	/mnt/cdrom/tools

**Table 7-1. Mounted CD Contents (continued)**

<b>Contents</b>	<b>Details</b>	<b>Location</b>
prereqcheck	Contains files that are used by <code>srvadmin-openipmi.sh</code> to run preliminary requisite checks.	<code>/mnt/cdrom/tools/openipmi/supportscripts</code>
sa.1	Contains the Linux kernel images	<code>/mnt/cdrom/isolinux</code>
sa.2	Initial RAM disk containing the embedded Linux component and the DTK tools	<code>/mnt/cdrom/isolinux</code>
Source RPMS (SRPMs)	Contains open source components used in the Dell-provided embedded Linux	<code>/mnt/cdrom/srpms</code>
<code>srvadmin-hapi.&lt;version number&gt;.i386.rpm</code>	Contains a set of drivers and libraries used by the DTK tools to interact with the hardware. Used to build your custom ISO.	<code>/mnt/cdrom/tools</code>
<code>srvadmin-omilcore-hapi.&lt;version number&gt;.i386.rpm</code>	Contains a set of drivers and libraries used by the DTK tools to interact with the hardware. Used to build your custom ISO.	<code>/mnt/cdrom/tools</code>
<code>srvadmin-openipmi.sh</code>	Checks if the OpenIPMI driver needs to be installed or upgraded, and if required, attempts to do so. Also displays status information and information about any action it attempts.	<code>/mnt/cdrom/tools/openipmi/supportscripts</code>
<code>start-stage3.sh</code>	The startup script used by the toolkit ISO image to boot.	<code>/mnt/cdrom/tools</code>
<code>start-hapi.sh</code>	The startup script to load and configure the HAPI drivers.	<code>/mnt/cdrom/tools</code>
<code>start-raid.sh</code>	Contains the basic setup for <code>raidcfg</code> to work.	<code>/mnt/cdrom/tools</code>

Boot the CD onto a target system. Figure 7-2 shows the directory structure on the target system.

**Figure 7-2. Target System Directory Structure**

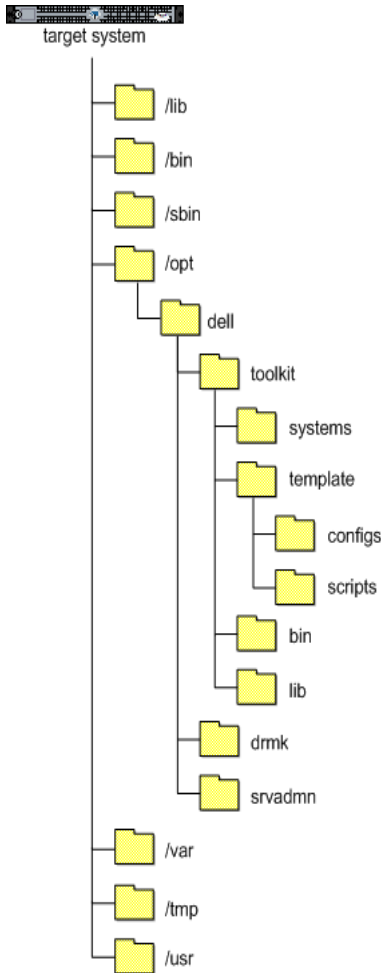




Table 7-2 describes the contents of the directory structure on the target system.

**Table 7-2. Target System Directory Structure Contents**

Contents	Details
/lib	The libraries and drivers required for embedded Linux to function.
/bin	Basic utilities (ls, chmod, and so on)
/sbin	Utilities that are required by the system superuser to perform administrative tasks.
/opt	The libraries, binaries, and scripts required for the toolkit to function, which are available at: <code>/mnt/cdrom/tools/dell.tar.gz</code> . <b>NOTE:</b> The <code>/opt/dell/srvadmin</code> directory should be writable.
/var	Any run-time variable data that might be required for embedded Linux and tools to function.
/tmp	The only safe, writable area. However, you will lose all data in this folder every time you reboot.
/usr	Miscellaneous tools and libraries for embedded Linux to function.

## DTK Contents

The DTK contains embedded Linux-based utilities, sample scripts, sample configuration files, drivers, and documentation for automating the deployment of Dell systems. The following sections provide a complete list of the DTK contents and a short description of each component. For a more complete explanation of the DTK utilities, see the *Command Line Interface Reference Guide*. For an explanation of the sample configuration files and scripts, see "Preparing the Script Files for Deployment Using Embedded Linux."

### System Utilities and Supporting Files

Table 7-3 describes the files, located at `/opt/dell/toolkit/bin` and the supporting libraries located in `/opt/dell/toolkit/lib`. See the *Command Line Interface Reference Guide* for complete information about the capabilities of each DTK utility.

**Table 7-3. System Utilities and Supporting Files**

<b>Toolkit Components</b>	<b>Purpose</b>
config.ini	Configuration file used by <b>raidcfg</b> .
pci.ids	Used with <b>syscfg</b> to report PCI devices.
racadm	Wrapper script which invokes <b>racadm3</b> or <b>racadm4</b> , depending on the remote access controller (RAC) on your system.
racadm3	Configures Dell Remote Access Controller (DRAC) III, DRAC III/XT, embedded remote access (ERA), ERA/O, and ERA/MC RACs.
racadm4	Configures DRAC 4/P and DRAC 4/I RACs.
racadm5	Configures DRAC 5 RACs.
racadm6	Configures iDRAC6 <b>NOTE:</b> This feature may not be supported on all systems.
racadmErrorCodes.txt	Lists the error codes and messages for the <b>racadm</b> tool.
racser	Chat script to bring up a Point-to-Point Protocol (PPP) connection required to transport <b>racadm3</b> .
raesvc3.sh	Start-up script for DRAC III, DRAC III/XT, ERA, ERA/O, and ERA/MC RACs.
raesvc4.sh	Start-up script for DRAC 4/P and DRAC 4/I RACs.
raidcfg	Creates and reports RAID information.
RaidcfgErrorCodes.txt	Lists the error codes and messages for the <b>raidcfg</b> tool.
stsvc.ini	Configuration file used by <b>raidcfg</b> .
syscfg	<ul style="list-style-type: none"><li>• Reports and configures:<ul style="list-style-type: none"><li>– basic input/output system (BIOS) settings and options</li><li>– baseboard management controller (BMC) settings and options</li></ul></li><li>• Maintains system state between reboots</li><li>• Reports hardware devices and other system-related information</li></ul>
SyscfgErrorCodes.txt	Lists the error codes and messages for the <b>syscfg</b> tool.

**Table 7-3. System Utilities and Supporting Files (continued)**

<b>Toolkit Components</b>	<b>Purpose</b>
sys.ini	A .ini file used with syscfg.
UpinitErrorCodes.txt	Lists the error codes and messages for <b>upinit.sh</b> .

## Sample Configuration Files

Table 7-4 describes examples of configuration files used to perform a scripted deployment. These files are located at **opt/dell/toolkit/template/configs**.



**NOTE:** All configuration files are provided as examples only. These sample configuration files must be edited before they can be used in any deployment tasks.

**Table 7-4. Sample Configuration Files**

<b>Toolkit Components</b>	<b>Purpose</b>
autoinst.xml	Sample file used with unattended installation of SUSE <sup>®</sup> Linux Enterprise Server operating systems.
ks.cfg	Sample file used with unattended installation of Red Hat <sup>®</sup> Enterprise Linux <sup>®</sup> Server (versions 3 and 4) operating systems.
ks-rhel5.cfg	Sample file used with unattended installation of Red Hat Enterprise Linux Server (version 5) operating system.
raccfg.ini	Sample configuration file for DRAC 4 RACs.
raidcfg.ini	Sample output file to enable RAID replication.
syscfg.ini	Sample configuration file for SYSCFG utility to configure the BIOS and BMC settings.

## Sample Scripts

Table 7-5 lists sample scripts necessary to perform a scripted deployment.



**NOTE:** All DTK scripts are provided as examples only. Many of these sample scripts must be edited before they can be used in a deployment. Some customers may need to develop their own scripts entirely from scratch. Customers deploying multiple systems must provide unique information for each Dell system where appropriate. For example, system host names, IP addresses, and BIOS asset tags need to be unique for each system. The batch scripts and configuration files must be modified to reflect the unique information for each deployed system. Many options are available to optimize this process. See "Preparing the Script Files for Deployment Using Embedded Linux" for information about using the sample scripts to perform a full deployment on supported Dell systems.

**Table 7-5. Sample Scripts**

<b>Toolkit Components</b>	<b>Purpose</b>
errhdl.sh	Handles errors returned in the DTK scripts.
lininst.sh	Performs an unattended installation of a supported Red Hat Enterprise Linux Server operating system.
partcfg.sh	Creates and populates the Dell utility partition and creates the deployment partition on a specified hard drive. Before doing so, however, this script cleans out all existing partitions in your system.
raccap.sh	Captures RAC settings to a file.
racrep.sh	Applies (replicates) the RAC settings saved in a file to the target system.
raidcfg.sh	Configures all RAID controllers detected in a system.
suseinst.sh	Performs an unattended installation of a supported SUSE Linux Enterprise Server operating system.
syscap.sh	Captures BIOS and BMC configuration settings and saves them to a file.
sysdrmk	Used by <b>upinit.sh</b> to patch the boot sector.
sysrep.sh	Applies (or replicates) BIOS and BMC configuration settings and configures the target system.
tkenvset.sh	Sets the path of the DTK installation and variables for the specific system being deployed.
upinit.sh	Creates and populates the Dell utility partition.

## Documentation

Table 7-6 describes documents containing reference information for each DTK utility and instructions for using the DTK utilities and sample scripts. Documentation can be found at `mnt/cdrom/docs`.

**Table 7-6. Documentation**

<b>Toolkit Components</b>	<b>Purpose</b>
<i>Command Line Interface Reference Guide</i>	Describes all DTK utilities, including all command line arguments and values, syntax, help, and examples.
<i>User's Guide</i>	Contains best practices guidelines for performing a scripted deployment.

## Drivers and Dell Real Mode Kernel (DRMK)

Hardware application programming interface (HAPI) drivers are essential for DTK tools to work in the embedded Linux environment.

DRMK contains a file necessary to create a bootable Dell utility partition. This file is `mbr`.

## Miscellaneous

The document `readme.txt`, located at `mnt/cdrom/docs`, provides the latest product information.

## Other Supporting Tools and System Files

While the DTK provides all the necessary utilities and scripts for deploying Dell systems, additional applications, utilities, and system files are needed to create the pre-operating system environment in which this toolkit is used. Table 7-7 is a matrix of system files and other tools that you need to use the DTK utilities and its sample scripts.

**Table 7-7. Supporting Tools and System Files**

<b>Additional Tools</b>	<b>Purpose</b>	<b>Source</b>	<b>Save in DTK location</b>
mkfs.*	To format hard-drive partitions.	Any system running a Linux operating system.	In the path.
fdisk	To partition the hard drive.	Any system running a Linux operating system.	In the path.
unzip	To unzip files in Linux.	Any system running a Linux operating system.	In the path.
upimg	Contains system-specific Dell utility partition files. <b>NOTE:</b> In the previous releases, each Dell system required a unique <b>upimg</b> file. Beginning this release, the <b>upimg</b> file is common for all Dell systems.	<code>/opt/dell/toolkit/systems</code> , the Dell Support website at <a href="http://support.dell.com">support.dell.com</a> , or the Dell Systems Build and Update Utility on the <i>Dell Systems Management Tools and Documentation</i> DVD.	<code>/opt/dell/toolkit/systems</code>
kernel image	Used during a Linux unattended installation.	Available on the first disk of the Linux CD.	<code>/opt/dell/toolkit/systems/linux</code>
initial ramdisk	Used during a Linux unattended installation. <b>NOTE:</b> For legacy operating systems, you may need to load the driver disk. At the end of the Red Hat Enterprise Linux Server installation, you may need to install the drivers available on the Systems Build and Update Utility.	Available on the Linux operating system CD or on the Systems Build and Update Utility on the <i>Dell Systems Management Tools and Documentation</i> DVD.	<code>/opt/dell/toolkit/systems</code>

# Setting Up a Directory Structure for Deployment

To perform a DTK-enabled deployment, you must create a deployment directory structure on either a network share or your local workstation hard drive. The deployment directory structure is a central repository for all deployment files and can be used successively as a testing space, a repository for a network deployment, and a repository to build a bootable deployment CD. If you plan to perform a network-based deployment, you must set up the directory structure on a network volume that is accessible from your workstation, the source system (to generate configuration information), and the target system (to deploy).

If you plan to run a scripted deployment from the DTK sample scripts, ensure that the following files are correctly structured in the deployment directory. The DTK sample scripts use this structure to set the default paths for deployment. If you make changes to the directory structure, you must also make changes to the sample scripts. The deployment directory structure consists of the following files:

- DTK utilities and files
- System-specific directories
- Operating system installation files directories

## DTK Utilities and Files

All necessary DTK files are provided on the ISO image. The sample scripts provided with the DTK are set up to use the default paths.



**NOTE:** If you choose to create a directory structure for the DTK components that is different from the one provided in the initial installation, carefully review and edit each sample script (where necessary) to reflect the different directory structure.



**NOTE:** The unzip utility is needed to create the Dell utility partition. This utility should be copied into the `/systems` folder.

## System-Specific Files

The directory `/opt/dell/toolkit/systems/system name` acts as a central repository for all the system-specific deployment information. The `/systems` folder acts a repository for the common files required for systems. For example, you can store all profile configuration files for an optimally configured PowerEdge™ 2850 in the directory `/opt/dell/toolkit/systems/pe2850`.


These files can then be accessed from this directory when deploying multiple PowerEdge 2850 systems. For more information about obtaining Dell utility partition files, see "How to Obtain Dell Utility Partition Files."

This directory can also be subdivided into multiple system-specific directories such as: `/opt/dell/toolkit/systems/pe2850` for Dell PowerEdge 2850 systems and `/opt/dell/toolkit/systems/pe1850` for Dell PowerEdge 1850 systems. See Figure 7-3.

**NOTE:** You should mount the network share on to the target system in the master deployment file you created.


**NOTE:** If you choose to create a directory structure for the system-specific files that is different from the one suggested in this guide, be sure to carefully review and edit each sample script (where necessary) to reflect the different directory structure.

**Figure 7-3. DTK System-Specific File Structure**

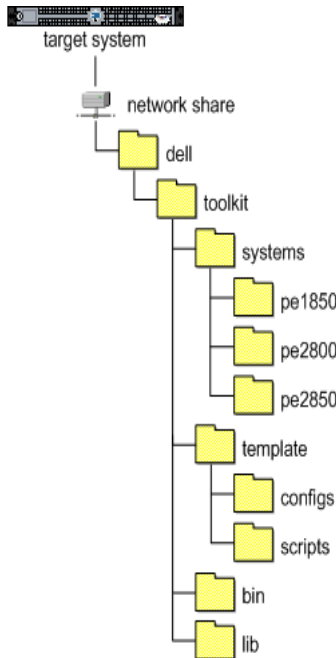



## Creating Operating System Installation Directories for Supported Linux Operating Systems


 **NOTE:** The following procedures are provided as a best practices guideline for creating operating system distribution folders compatible with the DTK sample scripts. For complete instructions on setting up an installation directory structure for an unattended installation, see your operating system documentation.

For deployment of supported Linux operating systems, copy the ISO images for the operating system installation to a folder on your network (for example, `/linuxboot`). This folder should be accessible after DTK completes its tasks.


Also, copy the following into the `/linuxboot` folder:

- `kernel image` (from the Linux operating system CD)
- `initial ramdisk` from the Dell Systems Build and Update Utility on the *Dell Systems Management Tools and Documentation* DVD

See Figure 7-4 for a sample directory structure for deployment of a supported Linux operating system.

 **NOTE:** If you choose to create a directory structure for the Linux installation files that is different from the one suggested in this guide, be sure to carefully review and edit each sample script (where necessary) to reflect the different directory structure.

**Figure 7-4. Sample Operating System-Specific File Structure (Linux Operating System)**

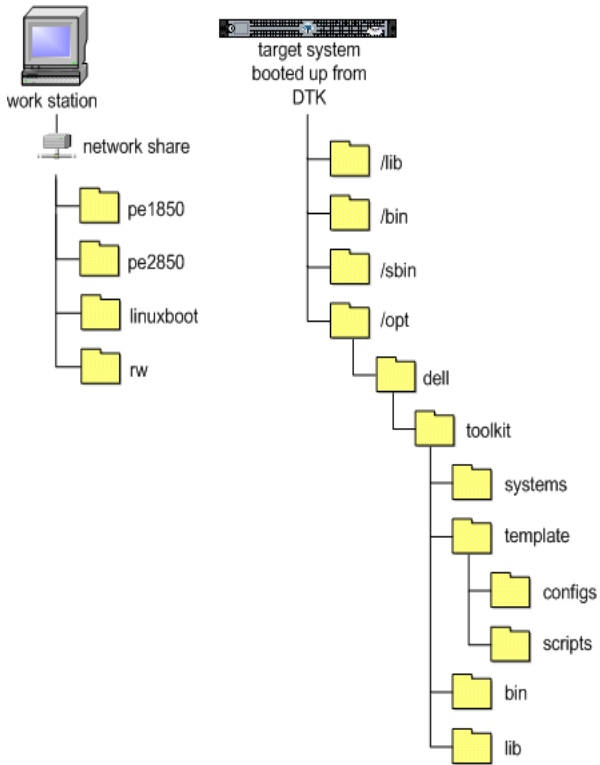

## Configuring a Source System

You need an optimally configured system both for testing purposes and as the source for the SYSCFG and RAC configuration files to be used in the deployment process. See "Using the DTK Sample Scripts to Capture Configuration Information in Embedded Linux" for instructions on using the sample DTK scripts, `syscap.sh` and `raccap.sh`, to generate SYSCFG and RAC configuration files that are used to configure the target system.

You can use the Dell Systems Build and Update Utility and the Systems Service and Diagnostics Tools on the *Dell Systems Management Tools and Documentation* DVD supplied with your system to:

- Streamline the operating system installation
- Setup and configure your system, including automatic discovery and configuration of Dell-provided RAID controllers and network adapters
- Access and load the latest utilities, drivers, and diagnostics for your system
- Install Dell OpenManage™ systems management software



**NOTE:** You can also obtain the latest drivers from the Dell Support website at [support.dell.com](http://support.dell.com).

For complete information about using the Dell Systems Build and Update Utility and the Dell Systems Service and Diagnostics Tools, see the *Dell Systems Build and Update Utility Quick Reference Guide* and the *Dell Systems Service and Diagnostics Tools Quick Installation Guide* respectively, which are available on the Dell Support website at [support.dell.com](http://support.dell.com) and on the *Dell Systems Management Tools and Documentation* DVD.

After you have loaded the operating system and all applicable device drivers from the Systems Build and Update Utility and Systems Service and Diagnostics Tools, check the Dell Support website at [support.dell.com](http://support.dell.com) for the latest drivers. Put all necessary drivers to be used in the deployment in the system directory for the target system. For example, if your target system is a PowerEdge 1850, put all necessary files in the `/opt/dell/toolkit/systems/pe1850` directory; or if your target system is a PowerEdge 850, put all necessary files in the `/opt/dell/toolkit/systems/pe0850` directory.

## How to Obtain Dell Utility Partition Files

Obtain the Dell utility partition files from `/opt/dell/toolkit/systems`, the Dell Support website at [support.dell.com](http://support.dell.com), or the Systems Build and Update Utility on the *Dell Systems Management Tools and Documentation* DVD.

## RAC Configuration

Configure the RAC on your source system using the `racadm` utility, if applicable. See the *Dell Remote Access Controller Racadm User's Guide* for comprehensive information about using the `racadm` utility to configure the RAC on your source system.

After you have successfully prepared your directory structure for a deployment and fully configured your source system, you are ready to write, review, or edit the deployment sample scripts. For instructions on editing the sample scripts necessary to run a full deployment, see "Preparing the Script Files for Deployment Using Embedded Linux."

# Preparing the Script Files for Deployment Using Embedded Linux

This section describes the steps required to use the Deployment Toolkit (DTK) sample scripts to perform a full deployment of a target system in the embedded Linux environment.

There are four main tasks:

- Writing the master deployment file and editing the `tkenvset.sh` script to set the variable values used in the deployment scripts
- Editing the supporting task scripts, as necessary
- Using the DTK sample scripts to capture basic input/output system (BIOS), baseboard management controller (BMC), and remote access controller (RAC) configuration information from an optimally configured source system
- Preparing the operating system installation scripts and answer files
- Configuring supported RAID controllers

## Using the Sample DTK Scripts to Run a Full Deployment in Embedded Linux

### The Master Deployment File

A scripted DTK deployment relies on the master deployment file to integrate all the applicable DTK task scripts and utilities and perform pre-operating system configuration tasks before launching the operating system installation files. The master deployment file, along with the `tkenvset.sh` scripts, make up the master set of instructions that drives the deployment process.

# Editing the Sample Batch Files to Perform a Complete System Deployment in Embedded Linux

## Using the Sample Scripts in a Scripted Deployment

The sample scripts utilize the DTK utilities, the additional supporting utilities, the source system configuration files, the target system hardware drivers, and the operating system installation files to perform a full deployment of the target system.

The sample scripts provided with the DTK can be edited and customized using any ASCII text editor that conforms to the hardware available on the target systems. While it is recommended that you use the DTK sample scripts to automate your deployment tasks, you can create your own system deployment batch files using any ASCII text editor by incorporating the various DTK utilities and Linux commands in the batch file.



**NOTE:** For more information about scripting batch files and specific batch file commands, see your Linux operating system documentation.

Each of the utilities, scripts, and system configuration files are described below. Depending on your requirements, you may use all or only some of them in your deployment:

**The master deployment file**— You can write your master deployment file to perform a full deployment of a system with the help of utilities, scripts, and configuration files. This file is not provided with the sample scripts.

Table 8-1 lists the scripts you may need in your deployment.

**Table 8-1. Scripts For Deployment**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><b>raccap.sh</b> — Captures RAC settings to a file for Dell™ Remote Access Controller (DRAC) 4.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>raccap.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>racadm</b> — Used by <b>raccap.sh</b> to retrieve RAC information and to configure settings. The wrapper script, <b>racadm</b>, calls <b>racadm3</b> or <b>racadm4</b> depending on the system configuration.</li> <li>• <b>syscfg</b> — Used by <b>raccap.sh</b> to configure DRAC 5.</li> </ul>	<p><b>racrep.sh</b> — Applies the RAC configuration settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>racrep.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>racadm</b> — Used by <b>racrep.sh</b> to replicate RAC information and to configure settings. <b>racadm</b> is the wrapper script which calls <b>racadm3</b> or <b>racadm4</b> depending on the system configuration.</li> <li>• <b>syscfg</b> — Used by <b>racrep.sh</b> to configure DRAC5.</li> </ul>	<p><b>lininst.sh</b> — Performs an unattended installation of a supported Red Hat® Enterprise Linux® Server operating system.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>lininst.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>grub</b> — Used to install the operating system in conjunction with the <b>unattended answer</b> file. It also uses the following images in conjunction with the <b>unattended answer</b> file to perform unattended operations:</li> </ul>	<p><b>tkenvset.sh</b> — Sets the path of the DTK installation and variables for the system to be deployed and configured. The variables and paths specified in this file must be specified before any of the other supporting scripts can be used.</p> <ul style="list-style-type: none"> <li>• <b>syscfg</b> — Used by <b>tkenvset.sh</b> to discover the system type.</li> </ul>

**Table 8-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><code>syscap.sh</code> — Captures BIOS and BMC configuration settings and saves them to a file.</p> <ul style="list-style-type: none"> <li>• <code>tkenvset.sh</code> — Used by <code>syscap.sh</code> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <code>syscfg</code> — Used by <code>syscap.sh</code> to configure the BIOS and BMC settings.</li> </ul>	<p><code>sysrep.sh</code> — Applies the BIOS and BMC settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <code>tkenvset.sh</code> — Used by <code>sysrep.sh</code> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <code>syscfg</code> — Used by <code>sysrep.sh</code> to configure the BIOS settings.</li> </ul>	<ul style="list-style-type: none"> <li>– <code>initial ramdisk</code>— Available on the Dell Systems Build and Update Utility</li> <li>– <code>kernel image</code>— Available on the Linux <i>operating system</i> CD</li> <li>• <code>ks.cfg</code> — Used by <code>lininst.sh</code> in conjunction with <code>grub</code> to install the Red Hat Enterprise Linux Server (versions 3 and 4) operating system files.</li> <li>• <code>ks-rhel5.cfg</code> — Used by <code>lininst.sh</code> in conjunction with <code>grub</code> to install the Red Hat Enterprise Linux Server (version 5) operating system files.</li> </ul>	<p><code>raidcfg.sh</code> — Configures the selected RAID controller detected in the system.</p> <ul style="list-style-type: none"> <li>• <code>tkenvset.sh</code> — Used by <code>raidcfg.sh</code> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <code>raidcfg</code> — Used by <code>raidcfg.sh</code> to retrieve RAID information and to configure settings.</li> </ul>



**Table 8-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
<p><b>raidcap.sh</b>— Captures the RAID settings and saves them to a file.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>raidcap.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>raidcfg</b>— Used by <b>raidcap.sh</b> to retrieve RAID information and to configure settings.</li> </ul>	<p><b>raidrep.sh</b>— Applies the RAID settings saved in a file to the current system.</p> <ul style="list-style-type: none"> <li>• <b>raidcfg</b> — Used by <b>raidrep.sh</b> to retrieve RAID information and to configure settings.</li> </ul>	<p><b>suseinst.sh</b> — Performs an unattended installation of a supported SUSE® Linux Enterprise Server operating system.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>suseinst.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>grub</b> — Used to install the operating system in conjunction with the <b>unattended answer</b> file. It also uses the following images in conjunction with the <b>unattended answer</b> file to perform unattended operations:</li> </ul>	<p><b>partcfg.sh</b> — Creates and populates the Dell utility partition and the deployment partition on a specified disk. The <b>partcfg.sh</b> script uses a <code>/tmp</code> folder to store a few temporary files critical to its execution.</p> <ul style="list-style-type: none"> <li>• <b>tkenvset.sh</b> — Used by <b>partcfg.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li> <li>• <b>fdisk</b> — Used to create partitions on your disk. When creating an embedded Linux ISO image, ensure that <b>fdisk</b> is present in the embedded Linux you created.</li> </ul>

**Table 8-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
		<ul style="list-style-type: none"> <li>– <b>initial ramdisk</b>— Available on the SUSE Linux Enterprise Server <i>operating system</i> CD</li> <li>– <b>kernel image</b>— Available on the SUSE Linux Enterprise Server <i>operating system</i> CD</li> <li>• <b>autoinst.xml</b> — Used by <b>suseinst.sh</b> in conjunction with <b>grub</b> to install the operating system files.</li> </ul>	<p>This script uses the following file for noninteractive (unattended) operations:</p> <ul style="list-style-type: none"> <li>– <b>upinit.sh</b>— Used by <b>partcfg.sh</b> to create and populate the Dell utility partition.</li> </ul>

**Table 8-1. Scripts For Deployment (*continued*)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
	<p><b>dtkrunall.sh</b>— Applies BIOS, BMC, RAC, and RAID settings saved in the files to the current system.</p> <ul style="list-style-type: none"><li>• <b>tkenvset.sh</b> — Used by <b>dtkrunall.sh</b> to find the DTK utilities and scripts.</li><li>• <b>racrep.sh</b> — Used by <b>dtkrunall.sh</b> to apply the RAC configuration settings saved in a file to the current system.</li></ul>		<p><b>upinit.sh</b> — Creates and populates the Dell utility partition.</p> <p><b>NOTE:</b> Do not make any modifications to the <b>upinit.sh</b> script.</p> <ul style="list-style-type: none"><li>• <b>tkenvset.sh</b> — Used by <b>upinit.sh</b> to inform the task scripts where to find the DTK utilities, scripts, and configuration files.</li><li>• <b>fdisk</b> — Used to create partitions on your disk.</li><li>• <b>mbr</b> — File necessary to create a bootable Dell utility partition.</li></ul>

**Table 8-1. Scripts For Deployment (continued)**

Capture Scripts	Replication Scripts	Deployment Scripts	Others
	<ul style="list-style-type: none"><li>• <b>sysrep.sh</b> — Used by <b>dtkrunall.sh</b> to apply the BIOS and BMC settings saved in a file to the current system.</li><li>• <b>raidrep.sh</b>— Used by <b>dtkrunall.sh</b> to apply the RAID settings saved in a file to the current system.</li></ul>		<ul style="list-style-type: none"><li>• <b>sysdrmk</b>— Used by <b>upinit.sh</b> to patch the boot sector.</li><li>• <b>unzip</b> — Used by <b>upinit.sh</b> to populate the Dell utility partition.</li><li>• <b>mke2fs</b> — Used to make a <b>ext2</b> file system.</li><li>• <b>upimg.bin</b> — Contains the zipped contents of the Dell utility partition.</li></ul>

The majority of the editing required for the DTK sample scripts involves the following script. As a result, the majority of the scripting discussion focuses on:

### **tkenvset.sh**

Other task scripts might require edits in certain situations. These optional edits are discussed in "Editing DTK Task Scripts."

### **tkenvset.sh**

The **tkenvset.sh** script sets the paths for the DTK utilities and scripts and sets the variables for the systems to be deployed and configured. These variables and paths must be specified before any of the scripts can be used.

## Specifying DTK Installation Paths

The `tkenvset.sh` sample script is provided with the following default values. These values must be confirmed, in some cases, and modified, in other cases, before a deployment. Locate the **Deployment Toolkit Installation Paths** heading to find the following lines:

```
DT_PATH=$dt_drive/opt/dell/toolkit
```

```
DT_TOOLS=$dt_path/bin
```

```
DT_SYSTEMS=$dt_path/systems
```

```
DT_SCRIPTS=$dt_path/template/scripts
```

```
DT_STOP_ON_ERROR=FALSE
```

```
DT_DRMK=$dt_path/opt/dell/drmk
```

Perform the following steps to confirm and/or edit the installation path variables:

- 1 Set the variable that defines the path to the full set of DTK deployment files (`DT_PATH`). This variable is set to `$dt_drive/opt/dell/toolkit` by default in the sample script. Edit this path to reflect the actual location of the DTK deployment files, if necessary.
- 2 Set the variable that defines the directory containing the DTK utilities (`DT_TOOLS`). This variable is set to `$dt_path/bin` by default in the sample script. Edit this path to reflect the actual location of the DTK utilities, if necessary.
- 3 Set the variable that defines the directory containing the configuration files for your Dell systems (`DT_SYSTEMS`). This variable is set to `$dt_path/systems` by default in the sample script. Edit this path to add a subdirectory for the Dell system you plan to deploy. For example, `$dt_path/systems/pe1850`.
- 4 Set the variable that defines the directory containing the DTK deployment scripts (`DT_SCRIPTS`). This variable is set to `%DT_PATH%\Template\Scripts` by default in the sample script. Edit this path to reflect the actual location of the DTK deployment scripts, if necessary.

- 5 Set the variable that indicates whether you want the deployment process to exit when any error is returned (`DT_STOP_ON_ERROR`). This variable is set to `FALSE` by default in the sample script, indicating that errors will be handled by the `errhdl.sh` scripts. Set the value to `TRUE` only if you want the deployment to exit on any error.
- 6 Set the variable that defines the directory containing the DRMK system files necessary to create a Dell utility partition (`DT_DRMK`). This variable is set to `$dt_path/opt/dell/drmk` by default in the sample script. Edit this path to reflect the actual location of the DRMK files, if necessary.

### ***Specifying the SYSCFG Variables***

The SYSCFG replication file is set to `syscfg.ini` by default. If you used the `syscap.sh` sample script to generate the `syscfg.ini` file, you do not have to edit these default settings. If you have made any modifications to the sample scripts or to the suggested directory structure, you must confirm that the `syscfg.ini` file is correctly named and that the path is set correctly for your deployment.

To edit the SYSCFG capture variables, locate the following lines in `syscap.sh`:

```
set DT_SYS_CAPFILE=  
$dt_systems/$dt_platform/syscfg.ini
```

To edit the SYSCFG replication variables, locate the following lines in `sysrep.sh`:

```
DT_SYS_REPFILE=$dt_systems/$dt_platform/syscfg.ini
```



**NOTE:** If the replication requires a change in the memory redundancy mode, the target server should be rebooted and the script should be executed again to complete the replication.

### ***Specifying the RAC Configuration Variables***

The IP address for your target system RAC is set in the sample script to `10.98.8.121` by default. Edit this value to reflect the actual IP address of your target system RAC, if applicable. Additionally, the RAC configuration file used to configure your RAC is set by default to `raccfg.ini`. If you use the `raccap.sh` sample script to generate the `raccfg.ini` file, you do not have to edit this default setting. If you have made any modifications to the sample scripts or to the suggested directory structure, you must confirm that `raccfg.ini` is correctly named and that the path is correctly set for your deployment.

To edit the RAC configuration variables, locate the following lines in `raccap.sh`:

```
DT_RAC_CAPFILE=$dt_systems/$dt_platform/raccfg.ini
```

To edit the RAC configuration variables, locate the following lines in `racrep.sh`:

```
# RAC section
```

```
DT_NICCFG=10.98.8.121
```

```
set DT_RAC_CAPFILE=
```

```
$dt_systems/$dt_platform/raccfg.ini
```

### Specifying Variables Used to Create Disk Partitions and Install the Dell Utility Partition



**NOTE:** If the primary deployment state (`DT_PARTN`) is set to `off`, the partitioning deployment state subsection is skipped.

The `partcfg.sh` sample script provides the following disk partitioning default values. These values must be confirmed, in some cases, and modified, in other cases, before performing a deployment. Locate the `partn` label to find the following lines in `partcfg.sh`:

```
DT_PARTN_UP=on
```

```
DT_MOUNT=/tmp/up
```

```
# Default Hard Drive
```

```
DT_HD=/dev/sda
```

```
# PARTCFG section
```


```
set DT_OS_SIZE=4000
```

```
# DELLUP section
```


```
set DT_UP_SIZE=32
```

```
set DT_UP_IMAGE=$dt_systems/upimg.bin
```

```
# RAIDCFG section
DT_VD_SIZE=10480
# default size for virtual disk
```

 **CAUTION:** `DT_MOUNT` specifies the mount point of the Dell utility partition. If your RAMDRIVE, hard drive, or other device already owns this designation, mount will not override the setting and the utility partition will not be created.

Perform the following steps to edit the default partition configuration default values, as necessary:

- 1 Edit the default utility partitioning variable (`DT_PARTN_UP=on`), if necessary. This variable sets whether you want to install the Dell utility partition.  
 **NOTE:** Dell recommends that you install the Dell utility partition.
- 2 Edit the default variable value for the default hard drive (`DT_HD=sda`), if applicable.
- 3 Edit the default variable value (in MB) for the primary operating system partition (`DT_OS_SIZE=4000`), if applicable.
- 4 Edit the default variable value for file system type (`DT_OS_FSTYPE=FAT32`), if applicable.
- 5 If the `DT_PART_UP` variable is set to `on`, edit the default variable value (in MB) for the utility partition (`DT_UP_SIZE=32`), if applicable.
- 6 If the `DT_PART_UP` variable is set to `on`, edit the default variable value for the utility partition installation package location (`DT_UP_IMAGE=$dt_systems/upimg.bin`), if applicable.

You should have already copied the `upimg.bin` file to the proper directory, as instructed in "Preparing the Directory Structure for Deployment in Embedded Linux." Edit this variable only if you have changed the name or path of the utility partition installation package.



## Editing DTK Task Scripts

The task scripts called by the master batch file do not require any edits (with the following exceptions) if the default variable values are utilized in the `tkenvset.sh` scripts. However, if you make any changes to the default values set by the `tkenvset.sh`, you must make the same edits to the matching default values set in the appropriate task scripts. Locate the "USER MODIFICATION REQUIRED" heading in the task scripts to find the variable values you might need to edit. Each of the following task scripts can be called by the master batch script during a full deployment:

- `racrep.sh`
- `raidcfg.sh`
- `sysrep.sh`
- `partcfg.sh`

### **racrep.sh**

The `racrep.sh` sample script applies RAC configuration options to the target system based on configuration information that has been saved in a configuration file. User input is optional, depending on variables set in the `racrep.sh` sample script. This script uses the `racadm` wrapper script or the `syscfg` utility (depending on the version of RAC on your system) to configure the RAC in the target system using the RAC configuration file, `raccfg.ini`, passed as the first parameter to this script. If this parameter is not passed, the default variables values used in this script are set in the `tkenvset.sh` scripts.

An optional second parameter can be passed to this file, which specifies the IP address to be used to configure the RAC. The `raccfg.ini` file is generated with the `raccap.sh` sample script. See "raccap.sh" for information about using the `raccap.sh` sample script to capture RAC configuration information.



**NOTE:** For `x9xx` or later systems, `racrep.sh` and `sysrep.sh` have duplicate functions. If you run `racrep.sh` followed by `sysrep.sh`, the latter overwrites the former's settings.

## **raidcfg.sh**

The **raidcfg.sh** sample script configures RAID controllers detected on the system. User input is optional to run this script. The parameter is a name or path to a log file. This parameter is not set to any value by default, and no log file is generated. The default variable values used in this script are set in the **tkenvset.sh** scripts. This script uses the **raidcfg.sh** utility to automatically configure the detected controllers on your target system. For example, for the first controller discovered, if **raidcfg.sh** discovers only one attached hard drive, the script tries to create RAID 0; if two hard drives are discovered, a RAID 1 configuration is enabled; if three or more hard drives are discovered, a RAID 5 configuration is enabled.



**NOTE:** On the detected controller, a RAID virtual disk is created only if the array disks connected to that particular controller have space available and, where applicable, are not part of an already existing array group.

## **sysrep.sh**

The **sysrep.sh** sample script applies SYSCFG options to the target system based on configuration information that has been saved in a configuration file. User input is optional to run this script, depending on the variable settings in the **sysrep.sh** scripts. This script uses the **syscfg** utility to configure the BIOS and BMC in the target system using the configuration file, **syscfg.ini**, passed as the first parameter to this script. If this parameter is not passed, the default variables values used in this script are set in the **sysrep.sh** scripts. The **syscfg.ini** file is generated with the **syscap.sh** sample script. See "syscap.sh" for information about using the **syscap.sh** sample script to capture BIOS and BMC settings. The second parameter is a name or path to a log file. This parameter is not set to any value by default, and no log file is generated.



**NOTE:** If the replication requires a change in the memory redundancy mode, the target server should be rebooted and the script should be executed again to complete the replication.



**NOTE:** For *x9xx* or later systems, **racrep.sh** and **sysrep.sh** have duplicate functions. If you run **racrep.sh** followed by **sysrep.sh**, the latter overwrites the former's settings.

## **partcfg.sh**

The **partcfg.sh** sample script creates and populates the Dell utility partition using **upinit.sh** and creates the deployment partition on a specified disk.

(See "upinit.sh" for more information about using the **upinit.sh** tool.)

User input is not required to run this script. The default variable values used in this script are set in the **tkenvset.sh** scripts.



**NOTE:** Ensure that **DT\_HD** is set to the required disk to be configured before you execute the **partcfg.sh** script.

## **Using the DTK Sample Scripts to Capture Configuration Information in Embedded Linux**

The **syscfg** and **racadm** utilities can read the source system configuration and duplicate that configuration on a target system using a sample DTK script file. These configuration files are used during a full deployment to configure the target system's BIOS, BMC, and RAC settings. The following sections provide instructions for using the **syscap.sh** and **raccap.sh** sample scripts to create configuration files.

### **Capturing the System BIOS and BMC Configuration With the syscap.sh Sample Script**

You can replicate the system BIOS and BMC configurations from a source Dell system to an identical target Dell system (for example, from one PowerEdge™ 1850 to another PowerEdge 1850).



**NOTE:** For the script to complete successfully, the source system must have access to the network share that includes the prebuilt DTK directory structure.

## **syscap.sh**

The **syscap.sh** sample script captures BIOS and BMC configuration settings and saves them to a specified location. An optional user input can be passed as a parameter. You can provide the path or file name as an input to this script. The default variable values used in this script are set in the script to the correct default values to perform a scripted deployment. The **syscap.sh** script uses the **syscfg** utility to retrieve BIOS and BMC configuration settings from the source system and to save the settings in a file named **syscfg.ini** in the **Z:\Dell\Toolkit\System\<target system>** directory.

Perform the following steps to run the `syscap.sh` sample script to capture BIOS and BMC configuration information in the `syscfg.ini` file:

- 1 Edit the start-up script file on your embedded Linux image to call the `syscap.sh` script after the network share with the prebuilt DTK directory structure is mounted. For example, add:

```
source/opt/dell/toolkit/template/scripts  
/syscap.sh
```

- 2 Boot the source system into embedded Linux.  
The script runs and saves configuration information in the `/opt/dell/toolkit/systems/<target system>` directory.
- 3 Edit the start-up script file in your embedded Linux image to remove the text you added in step 1.



**NOTE:** For `x9xx` or later systems, `raccap.sh` and `syscap.sh` have duplicate functions. If you run `raccap.sh` followed by `syscap.sh`, the latter overwrites the former's settings.

## Capturing the RAC Configuration With the `raccap.sh` Sample Script

If your system has a RAC, you can replicate the RAC configuration from a source Dell system's RAC to an identical target Dell system with an identical RAC (for example, from one PowerEdge 1850 with a DRAC4/I to another PowerEdge 1850 with a DRAC4/I).



**NOTE:** For the script to complete successfully, the source system must have access to the network share that includes the prebuilt DTK directory structure.

### `raccap.sh`

The `raccap.sh` sample script captures RAC configuration settings and saves them to a specified location. An optional user input can be passed as a parameter. You can provide the path or filename as an input to this script. The default variable values used in this script are set in the script to the correct default values to perform a scripted deployment. The `raccap.sh` script uses the `racadm` wrapper script or `syscfg` utility (depending on the RAC version on your system) to retrieve RAC configuration settings from the source system and to save the settings in a file named `raccfg.ini` in the `/opt/dell/toolkit/systems/<target system>` directory.

Perform the following steps to run the **raccap.sh** sample script to capture RAC configuration information in the **raccfg.ini** file:

- 1 Edit the start-up script file on your embedded Linux image to call the **raccap.sh** script after the network share with the prebuilt DTK directory structure is mounted. For example, add:

```
source/dell/toolkit/template/scripts/raccap.sh
```

- 2 Boot the source system into embedded Linux.

The script runs and saves configuration information in the `/opt/dell/toolkit/systems/<target system>` directory.

- 3 Edit the start-up script file on your embedded Linux image to remove the text you added in step 1.



**NOTE:** The RAC configuration file is referred to as the **.cfg** file in the *Dell Remote Access Controller Racadm User's Guide* and the *Dell Remote Access Controller 4 User's Guide*. See these guides for additional information about manually creating a RAC configuration file.



**NOTE:** Do not replicate the RAC IP address when creating a **.cfg** file. Replicating the RAC IP address can leave the system inaccessible because multiple systems are configured with the same IP address.



**NOTE:** For *x9xx* or later systems, **raccap.sh** and **syscap.sh** have duplicate functions. If you run **raccap.sh** followed by **syscap.sh**, the latter overwrites the former's settings.

## **upinit.sh**

The **upinit.sh** tool is used to create and populate the Dell utility partition.



**NOTE:** You can use this script to create a new Dell utility partition only if there are no existing partitions on your hard disk.

You can also use this script to upgrade or downgrade an existing Dell utility partition. Upgrades or downgrades can be made only to existing Dell utility partitions to capture BIOS and BMC settings.



**CAUTION:** The existing Dell utility partition should be the first primary partition on the hard disk. Also, the Dell utility partition must be greater than or equal to 32 MB and less than 2 GB.

For details on the command line arguments to be used for **upinit.sh**, see the *Deployment Toolkit Command Line Interface Reference Guide*.

# Preparing the Operating System Installation Scripts

## Red Hat Enterprise Linux Server Operating Systems

The `lininst.sh` script is used to install supported Red Hat Enterprise Linux Server operating systems.



**NOTE:** While installing Linux, ensure that you install `grub` in the boot partition. Otherwise, you will not be able to boot to the utility partition by pressing the **F10** key during reboot.

### `lininst.sh`

The `lininst.sh` sample script is used to perform an unattended installation of a supported Red Hat Enterprise Linux Server operating system. The variables and paths must be specified before the operating system can be installed.



**CAUTION:** It is strongly recommended that you consult your Red Hat Enterprise Linux Server operating system documentation and unattended deployment documentation to develop a thorough understanding of the unattended installation process before attempting to perform a full scripted deployment.

### Utilities Used

`grub` — Used in conjunction with the `kernel image` and `initial ramdisk` files, along with the `unattended` answer file to install the operating system.

### Variables Used

- `DT_OS_DISK` — Sets the disk on which to deploy the Red Hat Enterprise Linux Server operating system.
- `DT_OS_SRC` — Sets the location from where to copy the `kernel image` and `initial ramdisk` files.

### External Dependencies

The `DT_PLATFORM` variable is set during deployment by `tkenvset.sh` using platform discovery.

The `lininst.sh` script uses the `unattended` answer file in conjunction with the `grub` utility and `kernel image` and `initial ramdisk` files to install the operating system files. See "`ks.cfg` (for Red Hat Enterprise Linux Server Version 4) and `ks-rhel5.cfg` (for Red Hat Enterprise Linux Server Version 5)" for more information about preparing the `unattended` answer file.

## **ks.cfg (for Red Hat Enterprise Linux Server Version 4) and ks-rhel5.cfg (for Red Hat Enterprise Linux Server Version 5)**

Depending on the version of the Red Hat Enterprise Linux Server operating system, the `ks.cfg` or `ks-rhel5.cfg` files are the default names of the answer files that you use to automate an unattended Red Hat Enterprise Linux Server installation. A sample copy of the `ks.cfg/ks-rhel5.cfg` files are provided as part of the DTK download in the `/opt/dell/toolkit/template/configs` directory. The `ks.cfg/ks-rhel5.cfg` files contain the headings and parameters that instruct the installation utility to perform various configuration tasks. Before a full deployment can be run, you must edit all appropriate headings and parameters, as necessary.



**NOTE:** The sample file provided to install Red Hat Enterprise Linux Server (version 5) is named `ks-rhel5.cfg`. To use the sample `ks-rhel5.cfg` file to install Red Hat Enterprise Linux Server (version 5) using `lininst.sh`, ensure that you rename the file to `ks.cfg`.



**NOTE:** See your operating system documentation for instructions on modifying the options in the `ks.cfg/ks-rhel5.cfg` file to customize the scripted installation of your operating system.

When you have completed all necessary modifications of the `ks.cfg/ks-rhel5.cfg` file, save the completed file in the `/opt/dell/toolkit/systems/<target system>` directory.

### **Install Linux Using `lininst.sh`**

On a Linux system, edit the `/etc/exports` file. If the folder you want to share is `/home`, then `/etc/exports` file should contain the `"/home *(rw)"` line. Restart the NFS Service on your system and copy the relevant OS images to the NFS share.

Perform the following steps to install Red Hat Enterprise Linux (32-bit) using the `lininst.sh` script:

- 1 Create the virtual disk using `raidcfg` command.
- 2 Run the `partcfg.sh` script before running `lininst.sh` to create Dell Utility partition and OS partition.
- 3 Create a directory under `/tmp`. for example `os_src`.
- 4 Mount your NFS Share to `/tmp/os_src`.
- 5 Copy the file `initrd.img` for RHEL 32-bit to the NFS Share.
- 6 Copy `vmlinuz` from RHEL 32-bit 1st CD to the NFS Share.

- 7 Copy the `ks.cfg` file from `/opt/dell/toolkit/template/configs` to the NFS Share.
- 8 Edit the file `ks.cfg`. Set the NFS IP Address where RHEL 32-bit images are available and the NFS share path.
- 9 Run `export DT_OS_DISK=/dev/sda`, the disk device on which the Dell Utility partition was created.
- 10 Run `export DT_OS_SRC=/tmp/os_src`, where `vmlinux,initrd.img` and `ks.cfg` available.
- 11 Run `export DT_HD=/dev/sda`.
- 12 From `/opt/dell/toolkit/template/scripts`, run `./lininst.sh` script.
- 13 After 20 seconds, the server reboots and boots to the GRUB prompt. The the RHEL 32-bit operating system unattended installation proceeds.

## SUSE Linux Enterprise Server Operating Systems

The `suseinst.sh` script is used to install supported SUSE Linux Enterprise Server operating systems.



**NOTE:** While installing Linux, ensure that you install `grub` in the boot partition. Otherwise, you will not be able to boot to the utility partition by pressing the **F10** key during reboot.

### `suseinst.sh`

The `suseinst.sh` sample script is used to perform an unattended installation of a supported SUSE Linux Enterprise Server operating system. The variables and paths must be specified before the operating system can be installed.



**CAUTION:** It is strongly recommended that you consult your SUSE Linux Enterprise Server operating system documentation and unattended deployment documentation to develop a thorough understanding of the unattended installation process before attempting to perform a full scripted deployment.



## Utilities Used

**grub** — Used in conjunction with the **kernel image** and **initial ramdisk** files, along with the **unattended** answer file to install the operating system.

## Variables Used

- **DT\_OS\_DISK**— Sets the disk on which to deploy the SUSE Linux Enterprise Server operating system.
- **DT\_OS\_SRC**— Sets the location from where to copy the **kernel image** and **initial ramdisk** files.
- **DT\_OS\_PART**— Sets the valid partition to install the **grub** files.
- **DT\_OS\_IMG\_PATH**— Sets the network share where the operating system files are located.
- **DT\_SUSE\_AUTOINST**— Sets the network share from where the **autoinst.xml** file can be picked up.

## External Dependencies

The **DT\_PLATFORM** variable is set during deployment by **tkenvset.sh** using platform discovery.

The **suseinst.sh** script uses the **unattended answer** file in conjunction with the **grub** utility and **kernel image** and **initial ramdisk** files to install the operating system files. See "autoinst.xml (for SUSE Linux Enterprise Server)" for more information about preparing the **unattended answer** file.

## autoinst.xml (for SUSE Linux Enterprise Server)

The **autoinst.xml** file is the default name of the answer file that you use to automate an unattended SUSE Linux Enterprise Server installation. A sample copy of the **autoinst.xml** file is provided as part of the DTK download in the **/opt/dell/toolkit/template/configs** directory. The **autoinst.xml** file contains the headings and parameters that instruct the installation utility to perform various configuration tasks. Before a full deployment can be run, you must edit all appropriate headings and parameters, as necessary.



**NOTE:** See your operating system documentation for instructions on modifying the options in the **autoinst.xml** file to customize the scripted installation of your operating system.

When you have completed all necessary modifications of the `autoinst.xml` file, save the completed file in the `/opt/dell/toolkit/systems/<target system>` directory. After you have successfully edited your deployment scripts, you are ready to create your deployment media and run your deployment. For instructions on creating deployment media and running a full deployment, see "Running Deployment Scripts Using DTK and Embedded Linux."

# Running Deployment Scripts Using DTK and Embedded Linux

This section provides best practices procedures and scenarios for using the Deployment Toolkit (DTK) to perform pre-operating system configuration tasks and to install supported operating systems on supported Dell™ systems.

After you have populated the deployment directory structure with all necessary files and carefully edited the deployment scripts and configurations files, you are ready to begin the final stage of the deployment process. Before running the deployment, however, you need to create specific deployment media to facilitate your chosen deployment method. The common deployment scenarios are:

- Deployment using Dell-provided embedded Linux
- Deployment using customized embedded Linux
- Using a Third-Party Deployment Solution Framework

## Deployment Using Dell-Provided Embedded Linux

There are two common scenarios:

- Network-based deployment
- CD-based deployment

### Network-Based Deployment

The procedure below enables you to boot DTK over network and pass parameters (startup script location and name) during boot using the Pre-boot eXecution Environment (PXE) configuration file. This will automatically launch the start-up script off the network share, when DTK is booted.

- 1 Obtain the ISO image of the embedded Linux available on the Dell Support website at [support.dell.com](http://support.dell.com).
- 2 Burn the ISO image using any commonly available CD burning software.



**NOTE:** When you create a bootable CD, this image is supplied to the CD burning software along with the complete deployment directory structure, which includes all necessary supporting files to perform the deployment.

The CD burning software creates a self-bootable CD when the CD is booted.

- 3 Set up the Trivial File Transfer Protocol (TFTP) services and the Dynamic Host Configuration Protocol (DHCP) services on your network to boot the target system using Pre-Boot Execution Environment (PXE).
- 4 Copy the contents of the embedded Linux DTK ISO image (SA.1, SA.2, and `isolinux.cfg`) from `/mnt/cdrom/isolinux` to the `tftp` folder.
- 5 The `isolinux.cfg` file has various boot options. Select the method you want, and edit the `isolinux.cfg` file for the following:
  - IP address of the network share
  - Share path of the network share
  - Name of your startup script
- 6 The `isolinux.cfg` file is ready for PXE-booting. Copy this `isolinux.cfg` file into the PXE configuration folder.
- 7 Create your own start-up script and place it in the network share specified in your modified `isolinux.cfg` file.
- 8 The modified script is picked up and executed during the boot process.



**NOTE:** The network share on which you have the scripts and DTK files are mounted to `/opt/dell/toolkit/systems`.



**NOTE:** Ensure that you specify the correct RAMDISK size in the `pxe config` file before booting through PXE. (A sample `pxe config` file is provided in `/mnt/cdrom/isolinux/isolinux.cfg`.)

## CD-Based Deployment

- 1 Obtain the ISO image of the embedded Linux available on the Dell Support website at [support.dell.com](http://support.dell.com).
- 2 Burn the ISO image using any commonly available CD burning software.




**NOTE:** When you create a bootable CD, this image is supplied to the CD burning software along with the complete deployment directory structure, which includes all necessary supporting files to perform the deployment.

The CD burning software creates an image of the self-bootable ISO image and the deployment files on the CD.

- 3 Extract the contents of the ISO image to a folder on your hard drive.

- 4 Copy your custom scripts into the folder you created in step 3. (See "Installation for Embedded Linux" for an example of the folder structure.)

 **NOTE:** Your scripts should also take care of copying miscellaneous items to unlock the CD, so that the CD can be mounted and ejected as required by the operating system's installation process.


- 5 In `/mnt/cdrom/isolinux.cfg`, edit the `cd install` section to point to your customized start-up script. In other words, add the `share_script` option; for example:


```
label 1
kernel SA.1

append initrd=SA.2 ramdisk_size=55321
Stage3_type=cdrom DEBUG=0 quiet share_type=cdrom
share_script=dracupdate.sh
```

Then, use `mkisofs` to make your customized CD image; for example:

```
mkisofs -o usaf.iso -b isolinux/isolinux.bin -c
isolinux/boot.cat -no-emul-boot -boot-load-size 4
-iso-level 2 -relaxed-filenames -r -J -pad -boot-
info-table /root/usaf/
```

 **NOTE:** It is important to use `mkisofs` to make your customized image because the ISO Linux recognizes only the `isolinux.cfg` (and all files within `/isolinux`). If you do not use `mkisofs`, DTK's `openipmi` and `HAPI` libraries will not load and most of the Dell Update Packages will not work.

 **NOTE:** The scripts that you copy into the CD will be copied to the RAM disk and run from the RAM disk. This task is done to ensure the CD is not locked. Ensure that your sample scripts have valid path names.

- 6 Copy the directory structure created on your work station into the root folder that you created in step 3. This folder contains the DTK CD, files necessary for operating system installation, and files required for replication.
- 7 Burn the contents of the folder you created in step 3 to a CD. (Use the `isolinux` utility to make the CD bootable.)
- 8 Your ISO image is ready for booting.

## Deployment Using Customized Embedded Linux

Ensure that you have the following basic libraries, Dell toolkit libraries, tools, and utilities required for DTK to work in your customized Linux deployment environment (see Table 7-1 for details on files and RPMs to customize your embedded Linux):

- Drivers for all your hardware installed in your embedded Linux (from the Dell Support website at [support.dell.com](http://support.dell.com))
- Serial port configuration utilities (`setserial` and `stty`) for `racadm`
- Installed and working instrumentation drivers (from `/mnt/cdrom/tools`)
- Point-to-Point Protocol (PPP) tools
- Open Intelligent Platform Management Interface (IPMI) drivers
- Basic libraries and utilities for Linux to execute customized scripts
- DTK tools and utilities extracted from the embedded Linux CD (`/mnt/cdrom/tools/dell.tar.gz`)
- Necessary entries in the `ld.so.config` file so that the libraries get loaded

Integrate all the above mentioned libraries, Dell toolkit libraries, tools, and utilities into your embedded Linux environment and proceed with deployment.



**NOTE:** Ensure that the `raidcfg` executable in the `/bin` directory is a symbolic link to the `raidcfg` in the Dell-provided `/lib` folder.



**NOTE:** Refer to `start-stage3.sh`, `start-hapi.sh`, or `start-raid.sh` on `/mnt/cdrom/tools` to see how Dell-provided utilities and drivers are loaded.



**NOTE:** The `/opt/dell/srvadmin/shared` and `/opt/dell/srvadmin/hapi` directories should have Read-Write permissions. Refer to `start-stage3.sh` and `start-hapi.sh` for details.

## Using a Third-Party Deployment Solution Framework

You can use the DTK with any existing third-party deployment solution framework that provides a PXE booting infrastructure that can be used as the transport mechanism for the DTK utilities. Because each third-party deployment framework is unique, however, these solutions fall outside the scope of this document. If you plan to utilize a third-party deployment solution framework, keep in mind that the DTK is an embedded Linux-based set of tools and scripts, so the deployment solution framework must also support embedded Linux as a pre-operating system environment.

# Running Dell Update Packages in Embedded Linux

This section provides best practice procedures and scenarios for running Dell™ Update Packages in the embedded Linux environment on supported Dell systems.

The common scenarios for running Update Packages are:

## Running Update Packages in Dell-Provided Embedded Linux

- 1 Obtain the required update packages from the *Dell Server Updates* DVD or from the Dell Support website at [support.dell.com](http://support.dell.com).
- 2 Save the update packages on a network share.
- 3 Mount the network share where you saved the update packages and run the individual packages.



**NOTE:** See the *Dell Update Packages for Linux Operating Systems User's Guide* for help on using Dell Update Packages and information on error codes.

## Running Update Packages in Customized Embedded Linux

Before running update packages in your customized embedded Linux environment, ensure that you meet the dependencies listed in Table 10-1.

**Table 10-1. Dependencies for Dell Update Packages to Run in Customized Embedded Linux**

Update Packages	Dependency	Dependencies Available On
BIOS	Instrumentation drivers	/mnt/cdrom/tools
	dell_rbu	Kernel
ESM	OpenIPMI	/mnt/cdrom/tools
	Instrumentation drivers	/mnt/cdrom/tools

**Table 10-1. Dependencies for Dell Update Packages to Run in Customized Embedded Linux (continued)**

<b>Update Packages</b>	<b>Dependency</b>	<b>Dependencies Available On</b>
PERC	/etc/dataeng	/mnt/cdrom/tools
	megaraid driver 2.4.2.0	/mnt/cdrom/tools
	SCSI drivers	Kernel
RAC3	/etc/racser	/mnt/cdrom/tools
	PPP	/mnt/cdrom/tools
	racser3.sh	/mnt/cdrom/tools
RAC4	Open IPMI	/mnt/cdrom/tools
	Instrumentation drivers	/mnt/cdrom/tools
	racser4.sh	/mnt/cdrom/tools
RAC 5	Open IPMI	/mnt/cdrom/tools
	Instrumentation drivers	/mnt/cdrom/tools
iDRAC	Open IPMI	/mnt/cdrom/tools
	Instrumentation drivers	/mnt/cdrom/tools
Dell PowerVault™ 220S	SCSI drivers	Kernel
SAS	SAS drivers	Kernel
Any Update Package	RPM	
	sysvinit	
	grep	
	sed	Linux CD or any open source website
	awk	
	less	
	fnt	
tar.gz		



After ensuring that you have met all the dependencies, run the update packages in your customized embedded Linux environment as follows:

- 1 Obtain the required update packages from the *Dell Server Updates* DVD or from the Dell Support website at [support.dell.com](http://support.dell.com).
- 2 Store the update packages on a network share.
- 3 Mount the network share where you stored the update packages and run the individual packages.



**NOTE:** For help on usage of Dell Update Packages and information on error codes, see the *Dell Update Packages for Linux Operating Systems User's Guide*.



# Known Issues and Frequently Asked Questions

This section describes known issues with the Deployment Toolkit (DTK) utilities and scripts, including answers to some frequently asked questions.

## Known Issues

The following issues are organized by the DTK utility or other function.

### General Issues

- Virtual disk creation and/or deletion takes a long time on Microsoft® Windows® PE.

### RAIDCFG Issues

- If you have created Redundant Array of Independent Disks (RAID) 1 with background initialization operation on CERC SATA 1.5/2S, CERC SATA 1.5/6CH, or PERC 3/Di, you cannot delete the virtual disk using RAIDCFG, until the background initialization operation is completed. You must go to the controller basic input/output system (BIOS) to delete the virtual disk and then create another virtual disk using another option.
- If you delete a virtual disk on PowerEdge™ Expandable RAID controller (PERC) 4/IM on Windows PE, you need to reboot the system.
- Due to a rounding limitation, for RAID 0, RAID 1, and RAID 5, RAIDCFG can accept a virtual disk size that is 1 MB greater than the maximum allowable virtual disk size when creating a virtual disk. However, RAIDCFG will create the maximum virtual disk size and not give an error. If you need the maximum allowable virtual disk size, it is recommended that you do not provide the size in the CLI and let RAIDCFG calculate the size for the RAID type.
- Before creating a virtual disk using RAIDCFG on Cost-Effective RAID Controller (CERC) Serial Advanced Technology Attachment (SATA) 1.5/2S and CERC SATA 1.5/6CH, initialize the array disk(s) through the controller BIOS.

## **SYSCFG Issues**

- Setup passwords and system passwords cannot be cleared using DTK.
- The Demand-based Power Management (DBPM) option does not work on PowerEdge 1855 systems with BIOS versions earlier than A05.
- On PowerEdge 1950, 2950, and PowerVault NX 1950 systems with internal USB, you can configure BIOS settings for internal USB Port only if the **User Accessible/external (UA) USB ports** are set to **All Ports On**. If the UA USB ports are not set to **All Ports On** and you try to configure BIOS setting for the internal USB port using SYSCFG, the configuration will appear to be successful but the changes will not take effect after the next reboot. If you set the UA USB port from **All Ports On** to **All Ports Off** or **Only Back Ports On**, the USB port will be automatically Set to **Off** during the next reboot.

## **RACADM Issues**

- Dell™ Remote Access Controller (DRAC) III, DRAC III/XT, embedded remote access (ERA), ERA/O, and ERA/MC controllers are not supported on Windows PE.

## **Windows PE Installation Issues**

- If virtual flash is enabled and does not contain a valid image (for example, if the virtual flash contains a corrupt or random image), you may not be able to install Windows 2000 or Windows Server® 2003 locally or remotely. To fix this issue, install a valid image on virtual flash or disable virtual flash if it will not be used during the installation procedure.

# **Frequently Asked Questions**

The following questions are organized by the DTK utility or other function.

## **General Deployment Questions**

**Q:** While running SYSCFG.EXE on a Windows PE image, the SYSCFG.EXE tool silently fails.

**A:** Ensure that you have built your Windows PE image with the /WMI option. See "Running Deployment Scripts Using DTK and Microsoft Windows PE."

**Q:** When I use the sample DTK scripts to deploy multiple systems, do I need to edit the configuration files to reflect unique information (such as unique system names, IP address, and BIOS asset tags) for each system?

**A:** The sample scripts are provided as examples for users who want to develop their own deployment process. You may find that the scripts work perfectly in your environment, or you may need to develop your own scripts entirely from scratch. If you are deploying multiple systems, for example, you will need to provide unique information for each system when appropriate. To perform this task, you will need to modify each **.ini** (or other configuration script) file to reflect the unique information for each system you are deploying (such as the remote access controller (RAC) IP addresses and BIOS asset tags). There are many options available to optimize this process and it is suggested that you conduct an Internet search for available tools.

**Q:** When I change my hard drive controller from SCSI to RAID (or RAID to SCSI), the system prompts me for confirmation during POST. How can I stop this from happening?

**A:** Use the **--noraidprompt** option with the **--embscsiraid** option to prevent the system from prompting during POST. Data loss will result from changing the state of the disk controller, so you should be certain before skipping the prompt. There is no method for using the **--noraidprompt** in the input file. If you want to change the controller state through an input file, you must configure your script to call the **SYSCFG.EXE** utility twice, once to specify the input file, and once to change the controller state with the **--noraidprompt** option.

**Q:** What do I do if the PARTCFG script fails?

**A:** Ensure that **DT\_HD** is set to the required disk to be configured before you execute the PARTCFG script.

## **RAIDCFG Questions**

**Q:** Why does RAIDCFG not give an error message when I use invalid **read**, **write**, and **cache** policies and/or stripe sizes for a particular controller?

**A:** All RAID controllers have their own default read, write, and cache policies and stripe sizes. It is possible that if you provide an invalid policy or a stripe size for a particular controller, RAIDCFG may not give an error but will and create the virtual disk with the default policy and/or stripe size.

**Q:** When I execute RAIDCFG with the RAID level of "01," RAIDCFG creates RAID 1, not RAID 01.

**A:** This behavior occurs because the RAIDCFG CLI parser ignores zeros preceding any parameter value. For example, `-r=01` will be parsed as `-r=1`.

**Q:** On PowerEdge 1655MC system running embedded Linux, RAIDCFG displays the error: `megadev: Bad file descriptor`.

**A:** Ignore this message. The error message is generated by Megalib because it is trying to open a device driver that is not present on your system.

**Q:** What is strict creation?

**A:** Strict creation is an optional flag that has been added to the **create virtual disk** command. It allows you to create virtual disks only if the array disks (that is, hard drives) are within a specified percentage of disk space of each other.

**Q:** Why is the drive location of array disks displayed like 0:0:0?

**A:** The nexus used to display array disks is "channel:target:lun." The Logical Unit Number (LUN) is always "0." The channel and the target IDs are necessary to identify array disks when dealing with SCSI devices.

When dealing with SAS devices, the array disk location is displayed as "channel:target:enclosure." It is possible to have the enclosure value as non-zero. If the enclosure has a non-zero value, then all three numbers (channel, target, and enclosure) have to be included on the command line.

**Q:** Do I need to specify RAID type and size when creating virtual disk(s)?

**A:** No. The default RAID type is RAID 0. If RAID size is not provided, the maximum size allowed for virtual disk is created. The mandatory fields required to create virtual disks are the controller slot ID and the array disks.

**Q:** What is a hotspare (failover drive)?

**A:** A hotspare is an extra and unused disk drive that is part of an array disk subsystem. A hotspare is always in standby mode. If a disk failure occurs, the hotspare replaces the failed drive without interrupting the system.

**Q:** What is `mr2kserv.exe`?

**A:** This is a service needed to configure all LSI RAID controllers in Windows PE. It provides Plug and Play support.

**Q:** What features have changed from the MS-DOS® version of RAIDCFG to the Windows PE and embedded Linux versions?

**A:** New features for the Windows PE embedded Linux RAIDCFG include:

Support for the following controllers:

- PERC 3/DC, PERC 3/QC, and PERC 3/SC
- PERC 4/SC, PERC 4/DC, PERC 4/Di, and PERC 4/IM
- PERC 4e/DC, PERC 4e/Di, and PERC 4e/Si
- PERC 5/E Adapter, PERC 5/I Integrated, and PERC 5/i Adapter
- CERC SATA 1.5/6-Channel (CH), CERC SATA 1.5/2S, and PERC 3/Di (These controllers are supported in Linux only.)
- SAS 5iR Integrated, SAS 5iR Adapter
- SAS 6iR Integrated, SAS 6iR Adapter
- PERC 6/E Adapter, PERC 6/i Integrated, PERC 6/i Adapter

Features that have been removed from the DOS version include:

- The **--name** and **--wait** options in the create command
- The **--runlocation** and the **--scratchlocation** options
- The **--getpercentcomplete** environment variables

**Q:** What is the minimum virtual disk size that I can create?

**A:** For CERC-SATA 1.5/6ch controllers:

- RAID 0: 10MB
- RAID 1: 9MB
- RAID 5: 9MB

For PERC 3 controllers:

- RAID 0: 10MB
- RAID 1: 10MB
- RAID 5: 10MB

For PERC 4 (except PERC 4/IM) controllers:

- RAID 0: 10MB
- RAID 1: 10MB
- RAID 5: 10MB

For PERC 5 controllers:

- RAID 0: 100MB
- RAID 1: 100MB
- RAID 5: 100MB

For PERC 6 controllers:

- RAID 0: 100MB
- RAID 1: 100MB
- RAID 5: 100MB
- RAID 6: 100MB
- RAID 60: 100MB

**Q:** Why can't I see any controllers using RAIDCFG?

**A:** Ensure that the RAID controller(s) can be seen in the BIOS during POST. If the BIOS does not detect the controller, then RAIDCFG will also not detect it. Also ensure that the controller is set to RAID mode and not any other mode in the controller BIOS.

**Q:** What is span length?

**A:** Span length is the field needed when you try to create a RAID 50. The number represents the span size of the RAID 5.

**Q:** What pre-operating system environments are PERC 3/Di, CERC SATA 1.5/6ch, and CERC SATA 1.5/2s controllers supported on?

**A:** They are supported only on embedded Linux.

**Q:** PARTCFG cannot enumerate the virtual disk(s) created by RAIDCFG. What should be done?

**A:** A reboot is required for PARTCFG to enumerate virtual disks after creating a virtual disk using the RAIDCFG command.



## SYSCFG Questions



**NOTE:** In a Linux environment, the DTK utilities do not have a `.exe` extension.

**Q:** On `x7xx` systems, when I set arguments for `--sata0` and `--sata1` using DTK CLI and reboot the system, the BIOS setup shows the earlier settings for `--sata0` and `--sata1`.

**A:** You need to set the `--idectrl` to `auto` before you can change the settings for `--sata0` and `--sata1`.

**Q:** On `x7xx` systems, the BIOS setup shows `--conred` arguments of `--serial1` and `--rac`, whereas the DTK CLI shows them of `--serial1` and `--serial2`.

**A:** The `--serial2` argument in the DTK CLI corresponds to the `--rac` argument in BIOS setup.

**Q:** Can I use the SYSCFG utility to configure Point-to-Point Protocol (PPP) over the serial port to my access my RAC?

**A:** No. The baseboard management controller (BMC) firmware does not support PPP configurations for the serial port.

**Q:** The SYSCFG utility `--lancfgparams` option has suboptions that configure the IP address, Gateway, and Subnet Mask for the system BMC. There is also a MAC address. Are these the same as the managed system's operating system network parameters?

**A:** No. The BMC has its own IP address, Gateway, Subnet Mask, and MAC address values.

**Q:** What is the minimum configuration needed to support BMC Platform Event Filtering?

**A:** You must enable LAN-channel access "pfealrting" and ensure that you set the BMC IP address and Gateway values for alerting.

**Q:** I loaded the factory defaults for my system's BMC. Then, I enabled BMC user ID 3. What is the username for this user ID?

**A:** The default username for user IDs 3 to 10 is NULL.

**Q:** Can I use this NULL username to remotely log in to a system's BMC?

**A:** No. Remote login using a NULL username is not allowed. It is recommended that you always provide a non-null, valid username for the user ID when you enable a BMC user ID.

**Q:** Are duplicate usernames allowed in the BMC?

**A:** No. If you enter a username value that already exists, the **SYSCFG** utility returns an error code of 89, which means `This username is already in use`. Enter a unique username.

**Q:** In `--solcfgparams`, when I set the Serial Over LAN (SOL) character send threshold using `solcharsendthreshold` to be 225, I get a `Hardware subsystem error. Invalid data field in request`. What are the valid values?

**A:** The range of valid values for `--solcfgparams`, `--solcharsendthreshold` are from 1 to 220.

**Q:** How do I enable console redirection on a modular system?

**A:** Set the `--serialcomm` option value to `enableconred`. For example, `syscfg -serialcomm=enableconred`.

## **Embedded Linux Questions**

**Q:** After installing Linux, I am not able to boot to the utility partition by pressing the **F10** key during reboot.

**A:** Recreate the utility partition using the `upinit.sh` script and install `grub` in the boot partition.

**Q:** When booting DTK through PXE, my system displays error messages, unknown behavior, and also leads to a kernel panic sometimes. However, booting from the CD causes no problems.

**A:** Ensure that you specify the correct `RAMDISK` size in the `pxe config` file before booting through PXE. (A sample `pxe config` file is provided in `/mnt/cdrom/isolinux/isolinux.cfg`.)

**Q:** What is the version of the Linux kernel used?

**A:** The Linux kernel is derived from 2.6.9-42. The source RPM (SRPM) for the Linux kernel is available on `/mnt/cdrom/srpms`.

**Q:** Can I use a 2.5 Linux kernel?

**A:** Yes. You could integrate the DTK tools into your own embedded Linux. See "Deployment Using Customized Embedded Linux."

**Q:** Can we use the same sample scripts that we have from earlier versions of DTK?

**A:** The scripts written for the previous versions (2.x) of DTK will not work in DTK 3.x versions for embedded Linux. See the directory `/opt/dell/toolkit/template/scripts` for the sample scripts.

**Q:** After I install a legacy operating system on a newer Dell system, the Linux kernel does not boot and panics.

**A:** After installing the initial ramdisk image, you could install the driver or you could update to a newer version of the kernel.

**Q:** After the DTK deployment is complete, the Red Hat® Enterprise Linux® Server installation keeps going into attended mode or halts with the message `ks.cfg not found`.

**A:** Always use **initrd** for the Red Hat Enterprise Linux Server installation from the Dell Systems Build and Update Utility available on the path `server_assistant/drivers` on the *Dell Systems Management Tools and Documentation* DVD.

If the **initrd** is not available for your operating system, try the latest update of Red Hat Enterprise Linux Server. Otherwise, you might need to prepare driver disks for your network or disk controller. Use the drivers from the Systems Build and Update Utility available on the path `server_assistant/drivers` on the *Dell Systems Management Tools and Documentation* DVD.

## Windows PE Questions

**Q:** My system gets the error `Illegal or Missing File Types Specified in Section Files.SCSI.Name` during an unattended installation of a supported Windows operating system on supported Dell systems.

**A:** This behavior can occur when the line in the `Txtsetup.oem` file under the `[Files.SCSI.name]` heading is not a supported file type. To resolve this behavior, you must remove the line in the `Txtsetup.oem` file. The dynamic-link library (DLL) file can be copied to the correct location of the installation by placing it in the `I386$\Oem$\$\OEMDIR` folder. (**OEMDIR** is the destination folder where the file would normally be located, if installed to a running operating system. For example, INF files are normally found in the `%SystemRoot%\INF` folder. The correct **OEMDIR** destination can be found

by searching the INF file used to install the device or driver.) For more information, see Microsoft Knowledge Base Article 275334 on the Microsoft website.

**Q:** When I try to install network interface controller (NIC) drivers into my Windows PE image using **DRVINST.EXE** [provided in the OEM Preinstallation Kit (OPK) CD], the **DRVINST.EXE** fails with an error message that there are some files missing.

**A:** Dell recommends that you use **DRIVERINST.BAT** (provided with DTK). However, if you use **DRVINST.EXE** from Microsoft to install the NIC drivers into your Windows PE image, you need to download and extract required NIC drivers for Windows 2000 and Windows Server 2003 to a common directory. Then, merge the contents of **Base\_drivers** from both. Use the merged contents with **DRVINST.EXE** to integrate the NIC drivers into your Windows PE image.

**Q:** In Windows, I see a blue screen when I delete a virtual disk and create a new one without initialization and attempt to format the disk.

**A:** Initialize (fast init) the drives before formatting the disk. This will prevent the issue.

# Glossary

The following list defines or identifies technical terms, abbreviations, and acronyms used in your system documents.

## **adapter card**

An expansion card that plugs into an expansion-card connector on the system's system board. An adapter card adds some specialized function to the system by providing an interface between the expansion bus and a peripheral device. Examples of adapter cards include network cards, sound cards, and SCSI adapters.

## **ADS**

Automated Deployment Services (ADS) is a feature pack for Microsoft® Windows Server® 2003 Enterprise Edition, and Microsoft Windows® 2003 Datacenter Edition, that lets you deploy Windows Server operating systems onto "bare-metal" servers over large installations.

## **ANSI**

Abbreviation for American National Standards Institute.

## **API**

Abbreviation for application program interface, which is a set of routines, protocols, and tools for building software applications that act as an interface between the operating system and application programs.

## **Argument**

The value supplied with an option, such as in the following command line instance:

```
utilname --option=argument
```

## **ARP**

Acronym for Address Resolution Protocol, which is a method for finding a host's Ethernet address from its Internet address.

## **ASCII**

Acronym for American Standard Code for Information Interchange. A text file containing only characters from the ASCII character set (usually created with a text editor, such as Notepad in Windows), is called an ASCII file.

**asset tag code**

An individual code assigned to a system, usually by a system administrator, for security or tracking purposes.

**autoexec.bat file**

The **autoexec.bat** file is executed when you boot your system (after executing any commands in the **config.sys** file). This start-up file contains commands that define the characteristics of each device connected to your system, and it finds and executes programs stored in locations other than the Active Directory®.

**backup**

A copy of a program or data file. As a precaution, you should back up your system's hard drive on a regular basis. Before making a change to the configuration of your system, you should back up important start-up files from your operating system.

**baud rate**

A measurement of data transmission speed. For example, modems are designed to transmit data at one or more specified baud rate(s) through the COM (serial) port of a system.

**Bash**

Bash is the shell, or command language interpreter, that will appear in the GNU operating system. Bash is an sh-compatible shell that incorporates useful features from the Korn shell (ksh) and C shell (csh).

**binary**

A base-2 numbering system that uses 0 and 1 to represent information. The system performs operations based on the ordering and calculation of these numbers.

**BIOS**

Acronym for basic input/output system. Your system's BIOS contains programs stored on a flash memory chip. The BIOS controls the following:

- Communications between the microprocessor and peripheral devices, such as the keyboard and the video adapter
- Miscellaneous functions, such as system messages

**bit**

The smallest unit of information interpreted by your system.

**BMC**

Abbreviation for baseboard management controller, which is the controller interface between the RAC and the managed system's ESM.

**boot routine**

When you start your system, it clears all memory, initializes devices, and loads the operating system. Unless the operating system fails to respond, you can reboot (also called warm boot) your system by pressing <Ctrl><Alt><Del>; otherwise, you must perform a cold boot by pressing the reset button or by turning the system off and then back on.

**bootable diskette**

You can start your system from a diskette. To make a bootable diskette on a system running Windows, insert a diskette in the diskette drive, type `sys a:` at the command line prompt, and press <Enter>. Use this bootable diskette if your system will not boot from the hard drive.

**bus**

An information pathway between the components of a system. Your system contains an expansion bus that allows the microprocessor to communicate with controllers for all the various peripheral devices connected to the system. Your system also contains an address bus and a data bus for communications between the microprocessor and RAM.

**byte**

Eight contiguous bits of information, the basic data unit used by your system.

**cache**

A fast storage area that keeps a copy of data or instructions for quicker data retrieval. For example, your system's BIOS may cache ROM code in faster RAM. Or, a disk-cache utility may reserve RAM in which to store frequently accessed information from your system's disk drives; when a program makes a request to a disk drive for data that is in the cache, the disk-cache utility can retrieve the data from RAM faster than from the disk drive.

**CD-ROM**

Abbreviation for compact disc read-only memory. CD drives use optical technology to read data from CDs. CDs are read-only storage devices; you cannot write new data to a CD with standard CD drives.

## **CERC**

Cost-Effective RAID Controller (CERC) is a half-sized Peripheral Component Interconnect (PCI) adapter card that provides a way to improve the performance and availability of your storage subsystems.

## **CHAP**

Acronym for Challenge-Handshake Authentication Protocol, an authentication scheme used by PPP servers to validate the identity of the originator of the connection upon connection or any time later.

## **CLI**

Abbreviation for command line interface.

## **Command**

The combination of an option and argument or just an option if no argument is required, such as in the following command line instances:

```
utilname --option
```

```
utilname --option=argument
```

## **command line instance**

A series of valid commands, options, and arguments typed in the command line. For example, the Deployment Toolkit (DTK) utility name and all necessary options and arguments as they are entered through the operating system shell:

```
A:>utilname --option --option=argument
```

## **COM $n$**

The device names for the first through fourth serial ports on your system are COM1, COM2, COM3, and COM4. The default interrupt for COM1 and COM3 is IRQ4, and the default interrupt for COM2 and COM4 is IRQ3. Therefore, you must be careful when configuring software that runs a serial device so that you don't create an interrupt conflict.

## **config.sys file**

The **config.sys** file is executed when you boot your system (before running any commands in the **autoexec.bat** file). This start-up file contains commands that specify which devices to install and which drivers to use. This file also contains commands that determine how the operating system uses memory and controls files.



**console redirection**

Console redirection is a function that directs a managed system's display screen, mouse functions, and keyboard functions to the corresponding devices on a management station. You may then use the management station's system console to control the managed system.

**controller**

A chip that controls the transfer of data between the microprocessor and memory or between the microprocessor and a peripheral device such as a disk drive or the keyboard.

**control panel**

The part of the system that contains indicators and controls, such as the power switch, hard drive access indicator, and power indicator.

**conventional memory**

The first 640 KB of RAM. Conventional memory is found in all systems. Unless they are specially designed, MS-DOS<sup>®</sup> programs are limited to running in conventional memory.

**CPU**

Abbreviation for central processing unit. See also microprocessor.

**device driver**

A program that allows the operating system or some other program to interface correctly with a peripheral device, such as a printer. Some device drivers—such as network drivers—must be loaded from the `config.sys` file (with a `device=` statement) or as memory-resident programs (usually, from the `autoexec.bat` file). Others—such as video drivers—must load when you start the program for which they were designed.

**DHCP**

Abbreviation for Dynamic Host Configuration Protocol, a protocol that provides a means to dynamically allocate IP addresses to computers on a LAN.

**DIMM**

Acronym for dual in-line memory module. A small circuit board containing DRAM chips that connects to the system board.

**directory**

Directories help keep related files organized on a disk in a hierarchical, "inverted tree" structure. Each disk has a "root" directory; for example, a C:\> prompt normally indicates that you are at the root directory of hard drive C. Additional directories that branch off of the root directory are called subdirectories. Subdirectories may contain additional directories branching off of them.

**DKS**

Abbreviation for dynamic kernel support.

**DMA**

Abbreviation for direct memory access. A DMA channel allows certain types of data transfer between RAM and a device to bypass the microprocessor.

**DRAC 4**

Acronym for Dell™ OpenManage™ Remote Access Controller, version 4.

**DRAM**

Acronym for dynamic random-access memory. A system's RAM is usually made up entirely of DRAM chips. Because DRAM chips cannot store an electrical charge indefinitely, your system continually refreshes each DRAM chip in the system.

**EEPROM**

Acronym for electrically erasable programmable read-only memory.

**EIDE**

Abbreviation for enhanced integrated drive electronics. EIDE devices add one or more of the following enhancements to the traditional IDE standard:

- Data transfer rates of up to 16 MB/sec
- Support for drives other than just hard drives, such as CD and tape drives
- Support for hard drives with capacities greater than 528 MB
- Support for up to two controllers, each with up to two devices attached

**EMM**

Abbreviation for expanded memory manager. A utility that uses extended memory to emulate expanded memory on systems with an Intel386™ or higher microprocessor.

**EMS**

Abbreviation for Expanded Memory Specification.

**EPROM**

Acronym for erasable programmable read-only memory.

**ERA**

Abbreviation for embedded remote access.

**ERA/MC**

Abbreviation for embedded remote access modular computer. See modular system.

**ERA/O**

Abbreviation for embedded remote access option.

**ESM**

Abbreviation for embedded systems management, which is a set of instruction coding in system software and firmware that notifies a user about potential hardware problems on a system.

**expanded memory**

A technique for accessing RAM above 1 MB. To enable expanded memory on your system, you must use an EMM. You should configure your system to support expanded memory only if you run application programs that can use (or require) expanded memory.

**extended memory**

RAM above 1 MB. Most software that can use it, such as the Windows operating system, requires that extended memory be under the control of an XMM.

**external cache memory**

A RAM cache using SRAM chips. Because SRAM chips operate at several times the speed of DRAM chips, the microprocessor can retrieve data and instructions faster from external cache memory than from RAM.

## **FAT**

Acronym for file allocation table. FAT and FAT32 are file systems that are defined as follows:

- **FAT** — A file system used by MS-DOS, Windows 3.x, Windows 95, and Windows 98. Windows NT® and Windows 2000 also can use the FAT file system. The operating system maintains a table to keep track of the status of various segments of disk space used for file storage.
- **FAT32** — A derivative of the FAT file system. FAT32 supports smaller cluster sizes than FAT, thus providing more efficient space allocation on FAT32 drives.

## **FEPRM**

Acronym for flash erasable programmable read-only memory. Flash memory is a kind of nonvolatile storage device similar to EEPROM, but the erasing is done only in blocks or the entire chip.

## **firmware**

Software (programs or data) that has been written onto read-only memory (ROM). Firmware can boot and operate a device. Each controller contains firmware which helps provide the controller's functionality.

## **flash bios**

A BIOS that is stored in flash memory rather than in ROM. A flash BIOS chip can be updated in place, whereas a ROM BIOS must be replaced with a newer chip.

## **flash memory**

A type of EEPROM chip that can be reprogrammed from a utility on diskette while still installed in a system; most EEPROM chips can only be rewritten with special programming equipment.

## **format**

To prepare a hard drive or diskette for storing files. An unconditional format deletes all data stored on the disk.

## **function commands**

Commands that specify an action to be performed.

## **GB**

Abbreviation for gigabyte(s). A gigabyte equals 1024 megabytes or 1,073,741,824 bytes.

**graphics mode**

A video mode that can be defined as x horizontal by y vertical pixels by z colors.

**GUI**

Acronym for graphical user interface.

**GUID**

Abbreviation for Globally Unique Identifier, which is a random number used in software applications. Each generated GUID is supposed to be unique.

**HAPI**

Acronym for Hardware Abstraction Programming Interface, which is the lowest layer that is installed on the operating system by the Instrumentation Service. This layer is re-used by Dell Update Packages and firmware tools, and flash utilities to access the hardware through a reusable pipe.

**h**

Abbreviation for hexadecimal. A base-16 numbering system, often used in programming to identify addresses in the system's RAM and I/O memory addresses for devices. The sequence of decimal numbers from 0 through 16, for example, is expressed in hexadecimal notation as: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F, 10. In text, hexadecimal numbers are often followed by h.

**HBA**

Abbreviation for host bus adapter. A PCI adapter card that resides in the system whose only function is to convert data commands from PCI-bus format to storage interconnect format (examples: SCSI, Fibre Channel) and communicate directly with hard drives, tape drives, CD drives, or other storage devices.

**HMA**

Abbreviation for high memory area. The first 64 KB of extended memory above 1 MB. A memory manager that conforms to the XMS can make the HMA a direct extension of conventional memory. Also see XMM.

**host adapter**

A host adapter implements communication between the system's bus and the controller for a peripheral device. (hard drive controller subsystems include integrated host adapter circuitry.) To add a SCSI expansion bus to your system, you must install or connect the appropriate host adapter.

**HPFS**

Abbreviation for the High Performance File System option in the Windows NT operating systems.

**HTTP**

Abbreviation for Hypertext Transfer Protocol. HTTP is the client-server TCP/IP protocol used on the World Wide Web for the exchange of HTML documents.

**HTTPS**

Abbreviation for HyperText Transmission Protocol, Secure. HTTPS is a variant of HTTP used by Web browsers for handling secure transactions. HTTPS is a unique protocol that is simply SSL underneath HTTP. You need to use "https://" for HTTP URLs with SSL, whereas you continue to use "http://" for HTTP URLs without SSL.

**ID**

Abbreviation for identifier, commonly used when referring to a user identifier (user ID), object identifier (object ID), or hardware identifier (controller ID).

**IDE**

Abbreviation for Integrated Drive Electronics. IDE is a computer system interface, used primarily for hard drives and CDs.

**I/O**

Abbreviation for input/output. The keyboard is an input device, and a printer is an output device. In general, I/O activity can be differentiated from computational activity. For example, when a program sends a document to the printer, it is engaging in output activity; when the program sorts a list of terms, it is engaging in computational activity.

**internal microprocessor cache**

An instruction and data cache built in to the microprocessor. The Intel® Pentium® microprocessor includes a 16-KB internal cache, which is set up as an 8-KB read-only instruction cache and an 8-KB read/write data cache.

**IP address**

Abbreviation for Internet Protocol address. See TCP/IP.

**IPMI**

Abbreviation for Intelligent Platform Management Interface, which is a part of systems management technology.

**IRQ**

Abbreviation for interrupt request. A signal that data is about to be sent to or received by a peripheral device travels by an IRQ line to the microprocessor. Each peripheral connection must be assigned an IRQ number. For example, the first serial port in your system (COM1) is assigned to IRQ4 by default. Two devices can share the same IRQ assignment, but you cannot operate both devices simultaneously.

**KB**

Abbreviation for kilobyte(s), 1024 bytes.

**key combination**

A command requiring you to press multiple keys at the same time. For example, you can reboot your system by pressing the <Ctrl> <Alt> <Del> key combination.

**LAN**

Acronym for local area network. A LAN system is usually confined to the same building or a few nearby buildings, with all equipment linked by wiring dedicated specifically to the LAN.

**local bus**

On a system with local-bus expansion capability, certain peripheral devices (such as the video adapter circuitry) can be designed to run much faster than they would with a traditional expansion bus. Some local-bus designs allow peripherals to run at the same speed and with the same width data path as the system's microprocessor.

**LPT*n***

The device names for the first through third parallel printer ports on your system are LPT1, LPT2, and LPT3.

**LRA**

Abbreviation for local response agent.

**MB**

Abbreviation for megabyte(s). The term megabyte means 1,048,576 bytes; however, when referring to hard drive storage, the term is often rounded to mean 1,000,000 bytes.

**memory**

A system can contain several different forms of memory, such as RAM, ROM, and video memory. Frequently, the word memory is used as a synonym for RAM; for example, an unqualified statement such as "a system with 16 MB of memory" refers to a system with 16 MB of RAM.

**memory address**

A specific location, usually expressed as a hexadecimal number, in the system's RAM.

**memory manager**

A utility that controls the implementation of memory in addition to conventional memory, such as extended or expanded memory.

**memory module**

A small circuit board containing DRAM chips that connects to the system board.

**MHz**

Abbreviation for megahertz.

**microprocessor**

The primary computational chip inside the system that controls the interpretation and execution of arithmetic and logic functions. Software written for one microprocessor must usually be revised to run on another microprocessor. CPU is a synonym for microprocessor.

**modem**

A device that allows your system to communicate with other systems over telephone lines.

**modular system**

A system that can include multiple server modules. Each server module functions as an individual system. To function as a system, a server module is inserted into a chassis which includes power supplies, fans, a system management module, and at least one network switch module. The power supplies, fans, system management module, and network switch module are shared resources of the server modules in the chassis. See server module.

**MS-DOS**

Acronym for Microsoft Disk Operating System.



**NIC**

Acronym for network interface controller.

**NTFS**

Abbreviation for the Windows NT File System option in the Windows NT operating system. NTFS is an advanced file system designed for use specifically within the Windows NT operating system. It supports file system recovery, extremely large storage media, and long file names. It also supports object-oriented applications by treating all files as objects with user-defined and system-defined attributes. See also FAT.

**NVRAM**

Acronym for nonvolatile random-access memory. Memory that does not lose its contents when you turn off your system. NVRAM is used for maintaining the date, time, and system configuration information.

**option**

An argument to a command that modifies its function rather than providing data and is usually set off by a delimiter such as - or /. Some options may or must be followed by a value, for example:

```
utilname -option=argument
```

**parameter**

A value or option that you specify to a program. A parameter is sometimes called a switch or an argument.

**partition**

You can divide a hard drive into multiple physical sections called partitions with the **fdisk** command. Each partition can contain multiple logical drives. After partitioning the hard drive, you must format each logical drive with the format command.

**PCI**

Abbreviation for Peripheral Component Interconnect. The predominant 32-bit or 64-bit local-bus standard developed by Intel Corporation.

**PCMCIA**

Personal Computer Memory Card International Association. An international trade association that has developed standards for devices, such as modems and external hard drives, that can be plugged into portable computers.

**PERC**

Acronym for PowerEdge™ Expandable RAID controller.

**peripheral device**

An internal or external device—such as a printer, a disk drive, or a keyboard—connected to a system.

**Plug and Play**

An industry-standard specification that makes it easier to add hardware devices to personal computers. Plug and Play provides automatic installation and configuration, compatibility with existing hardware, and dynamic support of mobile computing environments.

**POST**

Acronym for power-on self-test. Before the operating system loads when you turn on your system, the POST tests various system components such as RAM, the disk drives, and the keyboard.

**PPP**

Short for Point-to-Point Protocol, it is a method of connecting a computer to the Internet.

**pre-operating system environment**

A shell environment, such as DOS, used to configure system hardware before a major operating system, such as Microsoft Windows or Linux, is installed.

**program diskette set**

The set of diskettes from which you can perform a complete installation of an operating system or application program. When you reconfigure a program, you often need its program diskette set.

**PXE**

Abbreviation for Pre-boot eXecution Environment.

**RAC**

Acronym for remote access controller.

**RAID**

Acronym for Redundant Array of Independent Disks.

**RAM**

Acronym for random-access memory. A system's primary temporary storage area for program instructions and data. Each location in RAM is identified by a number called a memory address. Any information stored in RAM is lost when you turn off your system.

**RAM disk**

A memory-resident program that emulates a hard drive.

**read-only file**

A read-only file is one that does not allow you to edit or delete it. A file can have read-only status if:

- Its read-only attribute is enabled.
- It resides on a physically write-protected diskette or on a diskette in a write-protected drive.
- It is located on a network in a directory to which the system administrator has assigned read-only rights to you.

**readme file**

A text file included with a software package or hardware product that contains information supplementing or updating the documentation for the software or hardware. Typically, readme files provide installation information, describe new product enhancements or corrections that have not yet been documented, and list known problems or other things you need to be aware of as you use the software or hardware.

**RIS**

Provided by Microsoft, you can use the Remote Installation Services (RIS) to install Windows operating systems to any number of client computers simultaneously from a central location.

**ROM**

Acronym for read-only memory. Your system contains some programs essential to its operation in ROM code. Unlike RAM, a ROM chip retains its contents even after you turn off your system. Examples of code in ROM include the program that initiates your system's boot routine and the POST.

**RPM**

Abbreviation for RPM Package Manager.

**SAS**

Short for Serial Attached SCSI, SAS is an evolution of parallel SCSI into a point-to-point serial peripheral interface in which controllers are linked directly to disk drives.

**SATA**

Abbreviation for Serial Advanced Technology Attachment, it refers to a newer interface standard for PC hard-disk drives. Each SATA port communicates through a small cable, to a single hard drive.

**schema**

A collection of class definitions that describes managed objects in a particular environment. A CIM schema is a collection of class definitions used to represent managed objects that are common to every management environment, which is why CIM is called the Common Information Model.

**SCSI**

Acronym for small computer system interface. An I/O bus interface with faster data transmission rates than standard ports. You can connect up to seven devices (15 for some newer SCSI types) to one SCSI interface.

**server module**

A modular system component that functions as an individual system. To function as a system, a server module is inserted into a chassis which includes power supplies, fans, a system management module, and at least one network switch module. The power supplies, fans, system management module, and network switch module are shared resources of the server modules in the chassis. See modular system.

**service tag number**

A bar code label that identifies each system in the event that you need to call for customer or technical support.

**SMART**

Acronym for Self-Monitoring Analysis and Reporting Technology. A technology that allows hard drives to report errors and failures to the system BIOS, which then displays an error message on the screen. To take advantage of this technology, you must have a SMART-compliant hard drive and the proper support in the system BIOS.

**SMBIOS**

Acronym for system management BIOS.

**SNMP**

Abbreviation for Simple Network Management Protocol. SNMP, a popular network control and monitoring protocol, is part of the original TCP/IP protocol suite. SNMP provides the format in which vital information about different network devices, such as network servers or routers, can be sent to a management application.

**SNMP trap**

A notification (event) generated by the RAC or ESM that contains information about state changes on the managed system or about potential hardware problems.

**SOL**

Abbreviation for Serial Over LAN. SOL enables suitably designed servers to transparently redirect the serial character stream of a baseboard UART to/from a remote client over a shared LAN. The architecture requires software running on the managed system's BMC and client software running on a management station and/or a central network proxy.

**support commands**

Commands that specify how an action should be performed.

**syntax**

The rules that dictate how you must type a command or instruction so that the system understands it. A variable's syntax indicates its data type.

**system configuration information**

Data stored in memory that tells a system what hardware is installed and how the system should be configured for operation.

**system diskette**

System diskette is a synonym for bootable diskette.

**system memory**

System memory is a synonym for RAM.

**System Setup program**

A BIOS-based program that allows you to configure your system's hardware and customize the system's operation by setting such features as password protection and energy management. Some options in the System Setup program require that you reboot the system (or the system may reboot automatically) in order to make a hardware configuration change. Because the System Setup program is stored in NVRAM, any settings remain in effect until you change them again.

**system.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **system.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **system.ini** file records which video, mouse, and keyboard drivers are installed for Windows.

Running the Control Panel or Windows Setup program may change options in the **system.ini** file. On other occasions, you may need to change or add options to the **system.ini** file manually with a text editor, such as Notepad.

**TCP/IP**

Abbreviation for Transmission Control Protocol/Internet Protocol. A system for transferring information over a computer network containing dissimilar systems, such as systems running Windows and UNIX.

**text editor**

An application program for editing text files consisting exclusively of ASCII characters. Windows Notepad is a text editor, for example. Most word processors use proprietary file formats containing binary characters, although some can read and write text files.

**text mode**

A video mode that can be defined as x columns by y rows of characters.

**TFTP**

Abbreviation for Trivial File Transfer Protocol, a simple form of the File Transfer Protocol (FTP). TFTP uses the User Datagram Protocol (UDP) and provides no security features. It is often used by servers to boot diskless workstations, X-terminals, and routers.

**UART**

Acronym for universal asynchronous receiver-transmitter. The UART is a system component that handles asynchronous serial communication by converting parallel bytes from the processor into serial bits for transmission (and vice versa).

**unicode**

A fixed width, 16-bit world wide character encoding, developed and maintained by the Unicode Consortium.

**upper memory area**

The 384 KB of RAM located between 640 KB and 1 MB. If the system has an Intel386 or higher microprocessor, a utility called a memory manager can create UMBs in the upper memory area, in which you can load device drivers and memory-resident programs.

**URL**

Abbreviation for Uniform Resource Locator (formerly Universal Resource Locator).

**USB**

Abbreviation for Universal Serial Bus. A USB connector provides a single connection point for multiple USB-compliant devices, such as mice, keyboards, printers, and computer speakers. USB devices can also be connected and disconnected while the system is running.

**utility**

A program used to manage system resources—memory, disk drives, or printers, for example.

**utility partition**

A bootable partition on the hard drive that provides utilities and diagnostics for your hardware and software. When activated, the partition boots and provides an executable environment for the partition's utilities.

**UUID**

Abbreviation for Universal Unique Identification.

**variable**

A component of a managed object. A temperature probe, for example, has a variable to describe its capabilities, its health or status, and certain indexes that you can use to help you in locating the right temperature probe.

**VESA**

Acronym for Video Electronics Standards Association.

**virtual memory**

A method for increasing addressable RAM by using the hard drive. For example, in a system with 16 MB of RAM and 16 MB of virtual memory set up on the hard drive, the operating system would manage the system as though it had 32 MB of physical RAM.

**VT-100**

Abbreviation for Video Terminal 100, which is used by the most common terminal emulation programs.

**WAN**

Abbreviation for wide area network.

**Web server**

An application that makes Web pages available for viewing by Web browsers using the HTTP protocol.

**WH**

Abbreviation for watt-hour(s).

**win.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **win.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **win.ini** file records what printer(s) and fonts are installed for Windows. The **win.ini** file also usually includes sections that contain optional settings for Windows application programs that are installed on the hard drive. Running the Control Panel or Windows Setup program may change options in the **win.ini** file. On other occasions, you may need to change or add options to the **win.ini** file manually with a text editor such as Notepad.

**winbom.ini**

A **.ini** file that provides a bill-of-materials to incorporate into the Windows installation. **winbom.ini** can control different points of the installation and configuration process: for example, it can control Windows preinstallation when starting from the Windows Preinstallation Environment (Windows PE), or Windows XP configuration during Windows Welcome.



**Windows 95**

An integrated and complete Microsoft Windows operating system that does not require MS-DOS and that provides advanced operating system performance, improved ease of use, enhanced workgroup functionality, and simplified file management and browsing.

**Windows NT**

High-performance server and workstation operating system software developed by Microsoft that is intended for technical, engineering, and financial applications.

**Windows Preinstallation Environment (Windows PE)**

The Microsoft Windows Preinstallation Environment (Windows PE) is a minimal Win32 subsystem with limited services, based on the Windows kernel running in protected mode. It contains the minimal functionality that you need to run Windows Setup, install an operating system from a network share, automate basic processes, and perform hardware validation.

**write-protected**

Read-only files are said to be write-protected. You can write-protect a 3.5-inch diskette by sliding its write-protect tab to the open position or by setting the write-protect feature in the System Setup program.

**XMM**

Abbreviation for extended memory manager, a utility that allows application programs and operating systems to use extended memory in accordance with the XMS.

**XMS**

Abbreviation for eXtended Memory Specification.

**X Windows system**

The graphical user interface used in the Red Hat Enterprise Linux<sup>®</sup> Server environment.



# Index

## C

- capturing configuration information
  - embedded Linux, 123
  - Windows PE, 70
- capturing the system BIOS & BMC configuration
  - embedded Linux, 123
  - Windows PE, 70
- CD-Based local deployment
  - embedded Linux, 87
  - Windows PE, 27
- CD-Based local deployment, networking enabled
  - embedded Linux, 86
  - Windows PE, 28
- choosing a deployment method
  - embedded Linux, 85
  - Windows PE, 27
- configuration files, 11
- configuring an optimally configured source system
  - embedded Linux, 107
- contents
  - DTK embedded Linux, 97
  - DTK Windows PE, 36
- creating a master file
  - master batch file in Windows PE, 57

- creating deployment directory structure
  - embedded Linux, 103
  - Windows PE, 45
- creating disk partitions
  - embedded Linux, 119
  - Windows PE, 66

## D

- Dell Real Mode Kernel
  - embedded Linux, 101
  - Windows PE, 42
- deployment directory structure
  - embedded Linux, 103
  - overview, 33, 93
  - Windows PE, 46
- deployment matrix
  - embedded Linux, 89
  - Windows PE, 30
- deployment methods, 18
- deployment overview
  - CD-Based, 22
  - network-based, 21
- deployment prerequisites
  - embedded Linux, 17
  - Windows PE, 16

- document organization, 12
- drivers
  - embedded Linux, 101
  - Windows PE, 42
- DTK, 97
  - embedded Linux contents, 97
  - installing, 93, 108
- DTK deployment overview, 19
- DTK prerequisites and requirements, 14

## **E**

- editing DTK task scripts
  - embedded Linux, 121
  - Windows PE, 68
- editing the files
  - embedded Linux, 110
  - Windows PE, 57
- embedded Linux contents
  - DTK, 97

## **I**

- installation prerequisites
  - embedded Linux, 15
  - Windows PE, 15
- installing DTK, 93, 108
  - embedded Linux, 93

## **M**

- Master Batch File
  - sample, 56
  - what is, 56

## **O**

- operating system installation
  - files
    - embedded Linux, 105
    - Windows PE, 48
- overview
  - deploying, 21
  - preparing for deployment, 19

## **P**

- performing a scripted deployment
  - embedded Linux, 110
  - Windows PE, 57
- preparing operating system installation scripts
  - embedded Linux, 126
  - Red Hat Enterprise Linux Server, 126
  - SUSE Linux Enterprise Server, 128
  - Windows PE, 73
- prerequisites for deployment
  - embedded Linux, 17
  - Windows PE, 16

- prerequisites for installation
  - embedded Linux, 15
  - Windows PE, 15

## R

### RAC

- configuring, 53

### Running, 135

- running a scripted deployment
  - embedded Linux, 135
  - Windows PE 2005, 77

- running a scripted deployment, embedded Linux
  - network-based deployment, 135
  - third-party deployment solution framework, 134
  - using customized embedded Linux, 134
  - using Dell-provided embedded Linux, 131

- running a scripted deployment, using Dell-provided embedded Linux
  - CD-based deployment, 132
  - Network-based deployment, 131

- running a scripted deployment, Windows PE
  - burning ISO image on a CD, 81, 83
  - CD-Based local deployment, 81, 83
  - CD-Based local deployment, networking enabled, 81, 84

- copying tools from OPK, 77
- creating a standard Windows PE, 78

- creating bootable Windows PE ISO image, 80

- integrating DTK directory structure, 79

- third-party deployment solution framework, 82, 84

### Running Update Packages

- customized embedded linux, 135
- Dell-provided embedded linux, 135

## S

- sample configuration files
  - embedded Linux, 99
  - Windows PE, 38

- sample script files
  - master deployment file for embedded Linux, 116

- sample scripts
  - embedded Linux, 100
  - Windows PE, 39

- scripted deployment in embedded Linux
  - autoinst.xml, 129
  - capturing the RAC configuration, 124
  - ks.cfg, 127
  - lininst.sh, 111, 126
  - partcfg.sh, 113, 123
  - raccap.sh, 124
  - raccfg.sh, 111

- racrep.sh, 121
- raidcfg.sh, 112, 122
- suseinst.sh, 128
- sysrep.sh, 112, 122
- tkenvset.sh, 111
- upinit.sh, 115, 125
- scripted deployment in Windows PE
  - capturing the RAC
    - configuration, 71
  - PARTCFG.BAT, 60, 70
  - RACCAP.BAT, 71
  - RACCFG.BAT, 58
  - RACREPBAT, 68
  - RAIDCFG.BAT, 59, 69
  - SYSCAP.BAT, 70
  - SYSREPBAT, 59, 63, 69
  - TKENVSET.BAT, 58, 64
  - UNATTEND.TXT, 74
  - UPINIT.BAT, 62, 72
  - W2K8INST.BAT, 75
  - WININST.BAT, 58, 73
- specifying DTK installation paths
  - embedded Linux, 117
  - Windows PE, 64
- supported operating systems
  - deploy embedded Linux, 18
  - deploy Windows PE, 18
  - to deploy, 18
  - to run DTK utilities, embedded Linux, 15
  - to run DTK utilities, Windows PE, 15

- supported operating systems to run DTK
  - embedded Linux, 15
  - Windows PE, 15
- supported systems, 15
- supporting documentation
  - other dell documents you might need, 23
  - other documents you might need, 24
- supporting tools and system files
  - embedded Linux, 101
  - Windows PE, 43
- system utilities and supporting files
  - embedded Linux, 97
  - Windows PE, 36
- system-specific deployment files
  - embedded Linux, 103
  - Windows PE, 46

## U

- upgrading
  - embedded Linux, 93
  - Windows PE, 33
- using the DTK sample scripts
  - embedded Linux, 109
  - preparing for a full deployment, 55, 109
  - Windows PE, 56

- utilities and files needed for
  - deployment
  - embedded Linux, 103
  - Windows PE, 45

## **W**

- what's new for this release, 14
- Windows PE contents
  - DTK, 36

